

# CHAPTER

# 29

# HYDRAULIC POWER

# CHAPTER

# 29

# HYDRAULIC POWER



# CHAPTER

# 29

# HYDRAULIC POWER

# CHAPTER

# 29

# HYDRAULIC POWER

# CHAPTER

# 29

# HYDRAULIC POWER

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

1. Table of Contents Microfilm -- Instructions For Use

- A. This microfilm contains the Table of Contents (TOC), and maintenance manual information for all DC-8 60 Series aircraft customers except Air Canada whose TOC reflects a combined 50/60 Series Maintenance Manual. For information on a specific aircraft, refer to TOC for the owner or lessee of that aircraft.
- B. Each Table of Contents page has the Chapter, CODE, and Page number in the bottom outside corner of the page. The CODE number determines the customer; for example, CODE 1 is United Air Lines, CODE 2 Delta Air Lines and so on. The Table of Contents lists the Aircraft Identification page (if applicable), Alphabetical Index, and Chapter, Section, Subject matter with applicable aircraft CODE. Adjacent to the CODE, the aircraft effectivity is listed.
- C. Aircraft are identified on the Table of Contents either by Effectivity Code Number, Fleet Number, Registration Number, or Factory Serial Number. The Factory Serial Number is used only when the Fleet Number or Registration Number is not available.
- D. Table of Contents for all customers are listed immediately following these instructions. Where applicable, the Aircraft Identification page is inserted immediately following the TOC. This Aircraft Identification page contains the name of the customer or lessee, Manufacturing Series, Factory Serial Number, Effectivity Code or Fleet Number, and Registration Number. The Aircraft Identification page will have a customer CODE as described above.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

2. DC-8 60 SERIES AIRLINE CUSTOMERS - TABLE OF CONTENTS INDEX

<u>Customer Title</u>	<u>Airline Code</u>	<u>Table of Contents Code</u>
United Air Lines, Inc.	UAL	1
Eastern Air Lines, Inc.	EAL	2
Swiss Air Transport Company, Ltd. Scandinavian Airlines System	SWA/SAS	3
Delta Air Lines, Inc.	DLF	4
National Airlines, Inc.	NAL	5
Braniff Airways, Inc. (was PAG)	BNF	6
Air Canada (was TCA)	AC	7
Alitalia-Linee Aeree Italiane	ALI	8
KLM-Royal Dutch Airlines	KLM	9
Trans International Airlines	TIA	10
Trans Caribbean Airways, Inc.	TRC	11
Canadian Pacific Air Lines, Ltd.	CPA	12
Saturn Airways, Inc.	STN	13
Union De Transports Aeriens	UTA	14
Japan Air Lines Co., Ltd.	JAL	15
Universal Airlines, Inc.	UNI	16
The Flying Tiger Line, Inc.	FTL	17
Capital Airways, Inc.	CAP	18
Iberia, Lineas Aereas de Espana, S.A.	IBR	19
Airlift International, Inc. (includes LYD)	ALF	20
Overseas National Airways, Inc.	ONA	21
Seaboard World Airlines, Inc.	SEA	22
Venezolana Internacional de Aviacion, S.A. (a/c included in KLM Contents)	VIA	23
Finnair-Aero O/Y	FIN	24
Luftverkehrsunternehmen Atlantis AG	ATL	27
American Flyers Airline Corporation	AFA	28
Air Afrique	AFQ	29
Air Congo	ACO	30

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

UNITED AIR LINES, INC.

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>UAL Effectivity</u>
ALPHABETICAL INDEX-----	Index 29	1	CODE 5	ALL
GENERAL-----	29-00			
Description and Operation-----		1	CODE 1	N8070U - N8099U
Troubleshooting-----		101	CODE 4	N8966U and Subs
Maintenance Practices-----		201	CODE 1	ALL
Inspection/Check-----		601	CODE 1	ALL
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 1	N8070U - N8075U
		601	CODE 2	N8076U - N8099U
		601	CODE 3	N8966U and Subs
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 1	N8070U - N8099U
		601	CODE 2	N8966U and Subs
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check-----		601	CODE 1	ALL
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS----	29-04			
Inspection/Check-----		601	CODE 1	N8070U - N8099U
		601	CODE 3	N8966U and Subs
FLIGHT POWER CONTROL SYSTEMS-----	29-05			
Inspection/Check-----		601	CODE 1	ALL

Contents-29  
CODE 1  
Page 1

Feb 1/69

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>UAL Effectivity</u>
SPOILER SYSTEM----- Inspection/Check-----	29-06	601 601	CODE 1 CODE 2	N8070U - N8094U N8095U - N8099U, N8966U, and Subs
RUDDER STANDBY HYDRAULIC POWER SYSTEM----- Inspection/Check-----	29-07	601	CODE 1	ALL
THRUST REVERSER SYSTEM----- Inspection/Check-----	29-08	601	CODE 1	N8966U and Subs
MAIN----- Description and Operation---	29-10-0	1 1	CODE 1 CODE 15	N8070U - N8099U N8966U and Subs
Trouble Shooting-----		101	CODE 1	ALL
Adjustment/Test-----		501	CODE 1	ALL
Inspection/Check-----		601 601	CODE 1 CODE 2	N8070U - N8099U N8966U and Subs
HYDRAULIC SYSTEM RESERVOIR---- Maintenance Practices-----	29-10-1	201 201	CODE 3 CODE 4	N8076 - N8099U, N8966U and Subs N8070U - N8075U
HYDRAULIC RESERVOIR RETURN FLUID FILTER----- Maintenance Practices-----	29-10-2	201 201	CODE 3 CODE 4	N8076 - N8099U, N8966U and Subs N8070U - N8075U
HYDRAULIC RESERVOIR AIR PRESSURE REGULATOR-ASPIRATOR-- Maintenance Practices-----	29-10-3	201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTERS----- Maintenance Practices-----	29-10-4	201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS----- Maintenance Practices-----	29-10-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR RELIEF VALVE----- Maintenance Practices-----	29-10-6	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE----- Maintenance Practices-----	29-10-7	201	CODE 1	ALL

Contents-29

CODE 1

Page 2

May 1/69

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>UAL Effectivity</u>
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE----- Maintenance Practices-----	29-10-8	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER----- Maintenance Practices-----	29-10-9	201	CODE 1	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE----- Maintenance Practices-----	29-10-10	201 201	CODE 1 CODE 2	N8070U - N8075U N8076U - N8099U, N8966U and Subs
ENGINE HYDRAULIC FIRE SHUTOFF VALVE----- Maintenance Practices-----	29-10-11	201 201	CODE 1 CODE 2	N8070U - N8099U N8966U and Subs
ENGINE-DRIVEN HYDRAULIC PUMPS----- Maintenance Practices-----	29-10-12	201 201 201	CODE 1 CODE 6 CODE 10	N8070U - N8082U N8083U - N8099U N8966U and Subs
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES----- Maintenance Practices-----	29-10-13	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER----- Maintenance Practices-----	29-10-14	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT----- Maintenance Practices-----	29-10-15	201	CODE 1	ALL
DUAL-FILTER AND RELIEF VALVE Maintenance Practices-----	29-10-16	201 201	CODE 1 CODE 2	N8070U - N8099U N8966U and Subs
DUAL-FILTER ELEMENT----- Maintenance Practices-----	29-10-17	201	CODE 1	ALL

Feb 1/69

Contents 29  
 CODE 1  
 Page 3



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>UAL Effectivity</u>
SYSTEM SELECTOR VALVE----- Maintenance Practices-----	29-10-18	201 201	CODE 1 CODE 2	N8070U - N8099U N8966U and Subs
LEFT HYDRAULIC POWER MANIFOLD----- Maintenance Practices-----	29-10-19	201 201	CODE 1 CODE 2	N8070U - N8099U N8966U and Subs
RIGHT HYDRAULIC POWER MANIFOLD----- Maintenance Practices-----	29-10-20	201	CODE 1	ALL
HYDRAULIC MANIFOLDS RETURN CHECK VALVE----- Maintenance Practices-----	29-10-21	201	CODE 1	ALL
HYDRAULIC POWER SYSTEM ACCUMULATOR----- Maintenance Practices-----	29-10-22	201	CODE 1	ALL
HYDRAULIC SYSTEM PRIORITY VALVE----- Maintenance Practices-----	29-10-23	201 201	CODE 1 CODE 2	N8070U - N8099U N8966U and Subs
ENGINE-DRIVEN HYDRAULIC PUMP DISPOSABLE CASE DRAIN FILTER----- Maintenance Practices-----	29-10-27	201	CODE 1	N8966U and Subs
AUXILIARY----- Description and Operation-- Troubleshooting-----	29-20-0	1 101	CODE 7 CODE 1	ALL ALL
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE----- Maintenance Practices-----	29-20-1	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP----- Maintenance Practices-----	29-20-2	201 201	CODE 1 CODE 2	N8070U - N8076U N8077U - N8099U, N8966U and Subs

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>UAL Effectivity</u>
AUXILIARY HYDRAULIC PUMP RELIEF VALVE-----	29-20-3	201	CODE 1	N8070U - N8075U
Maintenance Practices-----	-	201	CODE 2	N8076U - N8099U, N8066U and Subs
AUXILIARY HYDRAULIC SYSTEM FILTER-----	29-20-4	201	CODE 1	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT-----	29-20-5	201	CODE 1	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE-----	29-20-6	201	CODE 1	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR-----	29-20-7	201	CODE 1	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC PUMP ALTERNATE RESERVOIR-----	29-20-8	201	CODE 1	ALL
Maintenance Practices-----				
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS-----	29-20-9	201	CODE 1	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC PUMP CONTROL-----	29-20-10	201	CODE 1	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC PUMP BYPASS LINE FILTER-----	29-20-11	201	CODE 1	N8095U - N8099U, N8066U and Subs
Maintenance Practices-----				
INDICATING-----	29-30-0	1	CODE 3	ALL
Description and Operation--		101	CODE 3	ALL
Troubleshooting-----		201	CODE 1	ALL
Maintenance Practices-----				

Feb 1/69

Contents 29  
 CODE 1  
 Page 5

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>UAL Effectivity</u>
HYDRAULIC FLUID QUANTITY TRANSMITTER----- Maintenance Practices-----	29-30-1	201	CODE 1	ALL
HYDRAULIC FLUID TEMPERATURE BULE----- Maintenance Practices-----	29-30-2	201	CODE 1	ALL
HYDRAULIC FLUID PRESSURE TRANSMITTER----- Maintenance Practices-----	29-30-3	201	CODE 1	ALL
HYDRAULIC FLUID OVER- TEMPERATURE INDICATING LIGHT-- Maintenance Practices-----	29-30-4	201	CODE 1	ALL
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-5	201	CODE 1	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

EASTERN AIR LINES, INC.

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>EAL Effectivity</u>
ALPHABETICAL INDEX-----	Index 29	1	CODE 2	ALL
GENERAL-----	29-00			
Description and Operation---		1	CODE 1	N8762 - N8778
		1	CODE 4	N8755 - N8760
Trouble Shooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 2	ALL
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 1	N8774 - N8778
		601	CODE 2	N8762 - N8773
		601	CODE 3	N8755 - N8760
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 1	N8762 - N8778
		601	CODE 2	N8755 - N8760
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check		601	CODE 1	ALL
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04			
Inspection/Check-----		601	CODE 1	N8768 - N8771, N8773 - N8778
		601	CODE 2	N8762 - N8767, N8772
		601	CODE 3	N8755 - N8760

Contents-29  
CODE 2  
Page 1

May 1/69

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>EAL Effectivity</u>
FLIGHT POWER CONTROL SYSTEMS-----	29-05			
Inspection/Check-----		601	CODE 1	ALL
SPOILER SYSTEM-----	29-06			
Inspection/Check-----		601	CODE 1	N8762 - N8778
		601	CODE 2	N8755 - N8760
RUDDER STANDBY HYDRAULIC POWER SYSTEM-----	29-07			
Inspection/Check-----		601	CODE 1	ALL
THRUST REVERSER SYSTEM-----	29-08			
Inspection/Check-----		601	CODE 1	N8755 - N8760
MAIN-----	29-10-0			
Description and Operation---		1	CODE 2	ALL
Trouble Shooting-----		101	CODE 1	ALL
Adjustment/Test-----		501	CODE 1	ALL
Inspection/Check-----		601	CODE 1	N8762 - N8778
		601	CODE 2	N8755 - N8760
HYDRAULIC SYSTEM RESERVOIR----	29-10-1			
Maintenance Practices-----		201	CODE 1	N8774 - N8778
		201	CODE 2	N8762 - N8773, N8755 - N8760
HYDRAULIC RESERVOIR RETURN FLUID FILTER-----	29-10-2			
Maintenance Practices-----		201	CODE 1	N8774 - N8778
		201	CODE 2	N8762 - N8773, N8755 - N8760
HYDRAULIC RESERVOIR AIR PRESSURE REGULATOR-ASPIRATOR--	29-10-3			
Maintenance Practices-----		201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTERS-----	29-10-4			
Maintenance Practices-----		201	CODE 1	ALL

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>EAL Effectivity</u>
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS----- Maintenance Practices-----	29-10-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR RELIEF VALVE----- Maintenance Practices-----	29-10-6	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE----- Maintenance Practices-----	29-10-7	201	CODE 1	ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE----- Maintenance Practices-----	29-10-8	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER----- Maintenance Practices-----	29-10-9	201	CODE 1	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE----- Maintenance Practices-----	29-10-10	201 201	CODE 1 CODE 2	N8774-N8778 N8762-N8773, N8755-N8760
ENGINE HYDRAULIC FIRE SHUTOFF VALVE----- Maintenance Practices-----	29-10-11	201 201	CODE 1 CODE 2	N8762-N8778 N8755-N8760
ENGINE-DRIVEN HYDRAULIC PUMPS----- Maintenance Practices-----	29-10-12	201	CODE 9	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES----- Maintenance Practices-----	29-10-13	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER----- Maintenance Practices-----	29-10-14	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT----- Maintenance Practices-----	29-10-15	201	CODE 1	ALL

Contents-29  
 CODE 2  
 Page 2A

May 1/69

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>EAL Effectivity</u>
DUAL-FILTER AND RELIEF VALVE-- Maintenance Practices-----	29-10-16	201 201	CODE 1 CODE 2	N8762-N8778 N8755-N8760
DUAL-FILTER ELEMENTS----- Maintenance Practices-----	29-10-17	201	CODE 1	ALL
SYSTEM SELECTOR VALVE----- Maintenance Practices-----	29-10-18	201 201	CODE 1 CODE 2	N8762-N8778 N8755-N8760
LEFT HYDRAULIC POWER MANIFOLD----- Maintenance Practices-----	29-10-19	201 201	CODE 1 CODE 2	N8762-N8778 N8755-N8760
RIGHT HYDRAULIC POWER MANIFOLD----- Maintenance Practices-----	29-10-20	201	CODE 1	ALL
HYDRAULIC MANIFOLDS RETURN CHECK VALVE----- Maintenance Practices-----	29-10-21	201	CODE 1	ALL
HYDRAULIC POWER SYSTEM ACCUMULATOR----- Maintenance Practices-----	29-10-22	201	CODE 1	ALL
HYDRAULIC SYSTEM PRIORITY VALVE----- Maintenance Practices-----	29-10-23	201 201	CODE 1 CODE 2	N8662-N8778 N8755-N8760
AUXILIARY----- Description and Operation--- Trouble Shooting-----	29-20-0	1 101	CODE 5 CODE 1	ALL ALL
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE----- Maintenance Practices-----	29-20-1	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP----- Maintenance Practices-----	29-20-2	201	CODE 5	ALL
AUXILIARY HYDRAULIC PUMP RELIEF VALVE----- Maintenance Practices-----	29-20-3	201 201	CODE 1 CODE 2	N8774-N8778 N8762-N8773, N8755-N8760

Contents-29  
 CODE 2  
 Page 3

May 1/69

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>EAL Effectivity</u>
AUXILIARY HYDRAULIC SYSTEM FILTER-----	29-20-4			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT-----	29-20-5			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE-----	29-20-6			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR-----	29-20-7			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP ALTERNATE RESERVOIR-----	29-20-8			
Maintenance Practices-----		201	CODE 1	ALL
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS-----	29-20-9			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP CONTROL-----	29-20-10			
Maintenance Practices-----		201	CODE 1	ALL
INDICATING-----	29-30-0			
Description and Operation---		1	CODE 2	ALL
Troubleshooting-----		101	CODE 2	ALL
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC FLUID QUANTITY TRANSMITTER-----	29-30-1			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC FLUID TEMPERATURE BULB-----	29-30-2			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC FLUID PRESSURE TRANSMITTER-----	29-30-3			
Maintenance Practices-----		201	CODE 1	ALL

Contents-29

CODE 2

Page 4

Printed in U.S.A.

Jun 15/67



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>EAL Effectivity</u>
HYDRAULIC FLUID OVER- TEMPERATURE INDICATING LIGHT SWITCH-----	29-30-4			
Maintenance Practices-----		201	CODE 1	ALL
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT SWITCH-----	29-30-5			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC RESERVOIR LOW PRESSURE INDICATING LIGHT SWITCH-----	29-30-6			
Maintenance Practices-----		201	CODE 1	ALL

Jun 15/67

Printed in U.S.A.

Contents-29  
 CODE 2  
 Page 5

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

SWISS AIR TRANSPORT COMPANY, LTD.

SCANDINAVIAN AIRLINES SYSTEM

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>SWA/SAS Effectivity</u>
AIRPLANE IDENTIFICATION-----	Ident 29	1	CODE 3	ALL
ALPHABETICAL INDEX-----	Index 29	1	CODE 4	ALL
GENERAL-----	29-00			
Description and Operation---		1	CODE 2	63,64,66,69
		1	CODE 3	55-62,65,67,68, 70-75, 77 and Subs
		1	CODE 4	76
Trouble Shooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 14	76
		201	CODE 3	55-75, 77 and Subs
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 3	ALL
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 2	ALL
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check---		601	CODE 1	ALL
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS----	29-04			
Inspection/Check-----		601	CODE 3	ALL

Contents-29  
 CODE 3  
 Page 1

Dec 1/73

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>SWA/SAS Effectivity</u>
FLIGHT POWER CONTROL SYSTEMS-----	29-05			
Inspection/Check-----		601	CODE 1	ALL
SPOILER SYSTEM-----	29-06			
Inspection/Check-----		601	CODE 1	55 - 71
		601	CODE 2	72 and Subs
RUDDER STANDBY HYDRAULIC POWER SYSTEM-----	29-07			
Inspection/Check-----		601	CODE 1	ALL
THRUST REVERSER SYSTEM-----	29-08			
Inspection/Check-----		601	CODE 1	ALL
MAIN-----	29-10-0			
Description and Operation---		1	CODE 3	ALL
Trouble Shooting-----		101	CODE 1	ALL
Adjustment/Test-----		501	CODE 1	ALL
Inspection/Check-----		601	CODE 2	ALL
HYDRAULIC SYSTEM RESERVOIR---	29-10-1			
Maintenance Practices-----		201	CODE 2	ALL
HYDRAULIC RESERVOIR RETURN FLUID FILTER-----	29-10-2			
Maintenance Practices-----		201	CODE 2	ALL
HYDRAULIC RESERVOIR AIR PRESSURE REGULATOR-ASPIRATOR-	29-10-3			
Maintenance Practices-----		201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTERS-----	29-10-4			
Maintenance Practices-----		201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS-----	29-10-5			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC RESERVOIR RELIEF VALVE-----	29-10-6			
Maintenance Practices-----		201	CODE 1	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>SWA/SAS Effectivity</u>
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE. AND PRESSURE GAGE----- Maintenance Practices-----	29-10-7	201	CODE 1	ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE----- Maintenance Practices-----	29-10-8	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER----- Maintenance Practices-----	29-10-9	201	CODE 1	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE----- Maintenance Practices-----	29-10-10	201	CODE 2	ALL
ENGINE HYDRAULIC FIRE SHUTOFF VALVE----- Maintenance Practices-----	29-10-11	201	CODE 2	ALL
ENGINE-DRIVEN HYDRAULIC PUMPS----- Maintenance Practices-----	29-10-12	201	CODE 5	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES----- Maintenance Practices-----	29-10-13	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER----- Maintenance Practices-----	29-10-14	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT----- Maintenance Practices-----	29-10-15	201	CODE 1	ALL
DUAL-FILTER AND RELIEF VALVE-- Maintenance Practices-----	29-10-16	201	CODE 2	ALL
DUAL-FILTER ELEMENTS----- Maintenance Practices-----	29-10-17	201	CODE 1	ALL
SYSTEM SELECTOR VALVE----- Maintenance Practices-----	29-10-18	201	CODE 2	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>SWA/SAS Effectivity</u>
LEFT HYDRAULIC POWER MANIFOLD-----	29-10-19			
Maintenance Practices-----		201	CODE 2	ALL
RIGHT HYDRAULIC POWER MANIFOLD-----	29-10-20			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC MANIFOLDS RETURN CHECK VALVE-----	29-10-21			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC POWER SYSTEM ACCUMULATOR-----	29-10-22			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC SYSTEM PRIORITY VALVE-----	29-10-23			
Maintenance Practices-----		201	CODE 2	ALL
MANUAL SHUTOFF VALVE-----	29-10-26			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY-----	29-20-0			
Description and Operation---		1	CODE 2	55-67,70-73
		1	CODE 5	76
		1	CODE 6	68,69,74,75,
				77 and Subs
Trouble Shooting-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE-----	29-20-1			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP-----	29-20-2			
Maintenance Practices-----		201	CODE 4	55-67,70-73
		201	CODE 5	76
		201	CODE 7	68,69,74,75,
				77 and Subs
AUXILIARY HYDRAULIC PUMP RELIEF VALVE-----	29-20-3			
Maintenance Practices-----		201	CODE 2	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER-----	29-20-4			
Maintenance Practices-----		201	CODE 1	ALL

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>SWA/SAS Effectivity</u>
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT-----	29-20-5	201	CODE 1	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE-----	29-20-6	201	CODE 1	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR-----	29-20-7	201	CODE 1	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC PUMP ALTERNATE RESERVOIR-----	29-20-8	201	CODE 1	ALL
Maintenance Practices-----				
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS-----	29-20-9	201	CODE 1	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC PUMP CONTROL-----	29-20-10	201	CODE 1	ALL
Maintenance Practices-----				
INDICATING-----	29-30-0			
Description and Operation---		1	CODE 2	55-74,76,77
		1	CODE 8	75,78 and Subs
Troubleshooting-----		101	CODE 2	ALL
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC FLUID QUANTITY TRANSMITTER-----	29-30-1	201	CODE 1	ALL
Maintenance Practices				
HYDRAULIC FLUID TEMPERATURE BULB-----	29-30-2	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC FLUID PRESSURE TRANSMITTER-----	29-30-3	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC FLUID OVER- TEMPERATURE INDICATING LIGHT SWITCH-----	29-30-4	201	CODE 1	ALL
Maintenance Practices-----				

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>	<u>SWA/SAS Effectivity</u>
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT SWITCH-----	29-30-5	201	CODE 1
Maintenance Practices-----			ALL
HYDRAULIC RESERVOIR LOW PRESSURE INDICATING LIGHT SWITCH-----	29-30-6	201	CODE 1
Maintenance Practices-----		201	CODE 2
			55-74,76,77 75, 78 and Subs

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

DELTA AIR LINES, INC.

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>DLT Effectivity</u>
AIRPLANE IDENTIFICATION-----	Ident 29	1	CODE 4	ALL
ALPHABETICAL INDEX-----	Index 29	1	CODE 1	ALL
GENERAL-----	29-00			
Description and Operation---		1	CODE 1	ALL
Trouble Shooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 1	ALL
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 1	ALL
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check-----		601	CODE 1	ALL
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04			
Inspection/Check-----		601	CODE 1	861 - 864
		601	CODE 2	865 and Subs
FLIGHT POWER CONTROL SYSTEMS-----	29-05			
Inspection/Check-----		601	CODE 1	ALL
SPOILER SYSTEM-----	29-06			
Inspection/Check-----		601	CODE 1	ALL

Feb 1/69

Contents-29  
 CODE 4  
 Page 1



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>DLT Effectivity</u>
RUDDER STANDBY HYDRAULIC POWER SYSTEM-----	29-07			
Inspection/Check-----		601	CODE 1	ALL
MAIN-----	29-10-0			
Description and Operation--		1	CODE 7	ALL
Troubleshooting-----		101	CODE 1	ALL
Adjustment/Test-----		501	CODE 1	ALL
Inspection/Check-----		601	CODE 1	ALL
HYDRAULIC SYSTEM RESERVOIR---	29-10-1			
Maintenance Practices-----		201	CODE 2	ALL
HYDRAULIC RESERVOIR RETURN FLUID FILTER-----	29-10-2			
Maintenance Practices-----		201	CODE 2	ALL
HYDRAULIC RESERVOIR AIR PRESSURE REGULATOR-ASPIRATOR-	29-10-3			
Maintenance Practices-----		201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTERS-----	29-10-4			
Maintenance Practices-----		201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS-----	29-10-5			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC RESERVOIR RELIEF VALVE-----	29-10-6			
Maintenance Practices-----		201	CODE 1	ALL

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>DIT Effectivity</u>
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE----- Maintenance Practices-----	29-10-7	201	CODE 1	ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE----- Maintenance Practices-----	29-10-8	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER----- Maintenance Practices-----	29-10-9	201	CODE 1	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE----- Maintenance Practices-----	29-10-10	201	CODE 2	ALL
ENGINE HYDRAULIC FIRE SHUTOFF VALVE----- Maintenance Practices-----	29-10-11	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMPS----- Maintenance Practices-----	29-10-12	201	CODE 4	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES----- Maintenance Practices-----	29-10-13	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ----- Maintenance Practices-----	29-10-14	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT----- Maintenance Practices-----	29-10-15	201	CODE 1	ALL
DUAL-FILTER AND RELIEF VALVE-- Maintenance Practices-----	29-10-16	201	CODE 1	ALL
DUAL-FILTER ELEMENTS----- Maintenance Practices-----	29-10-17	201	CODE 1	ALL
SYSTEM SELECTOR VALVE----- Maintenance Practices-----	29-10-18	201	CODE 1	ALL

Feb 1/69

Printed in U.S.A.

Contents-29  
 CODE 4  
 Page 2A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>DLT Effectivity</u>
LEFT HYDRAULIC POWER MANIFOLD-----	29-10-19			
Maintenance Practices-----		201	CODE 1	ALL
RIGHT HYDRAULIC POWER MANIFOLD-----	29-10-20			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC MANIFOLDS RETURN CHECK VALVE-----	29-10-21			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC POWER SYSTEM ACCUMULATOR-----	29-10-22			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC SYSTEM PRIORITY VALVE-----	29-10-23			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY-----	29-20-0			
Description and Operation---		1	CODE 1	ALL
Troubleshooting-----		101	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE-----	29-20-1			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP-----	29-20-2			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP RELIEF VALVE-----	29-20-3			
Maintenance Practices-----		201	CODE 2	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER-----	29-20-4			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT-----	29-20-5			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE-----	29-20-6			
Maintenance Practices-----		201	CODE 1	ALL

Jun 15/67

Printed in U.S.A.

Contents-29  
 CODE 4  
 Page 3

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>DIT Effectivity</u>
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR----- Maintenance Practices-----	29-20-7	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP ALTERNATE RESERVOIR----- Maintenance Practices-----	29-20-8	201	CODE 1	ALL
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS----- Maintenance Practices-----	29-20-9	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP CONTROL----- Maintenance Practices-----	29-20-10	201	CODE 1	ALL
INDICATING----- Description and Operation--- Troubleshooting----- Maintenance Practices-----	29-30-0	1 101 201	CODE 1 CODE 1 CODE 1	ALL ALL ALL
HYDRAULIC FLUID QUANTITY TRANSMITTER----- Maintenance Practices-----	29-30-1	201	CODE 1	ALL
HYDRAULIC FLUID TEMPERATURE BULB----- Maintenance Practices-----	29-30-2	201	CODE 1	ALL
HYDRAULIC FLUID PRESSURE TRANSMITTER----- Maintenance Practices-----	29-30-3	201	CODE 1	ALL
HYDRAULIC FLUID OVER- TEMPERATURE INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-4	201	CODE 1	ALL
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR LOW PRESSURE INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-6	201	CODE 1	ALL

Contents-29

CODE 4

Page 4

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

NATIONAL AIRLINES, INC.

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>NAL Effectivity</u>
ALPHABETICAL INDEX-----	Index 29	1	CODE 1	ALL
GENERAL-----	29-00			
Description-----		1	CODE 1	ALL
Trouble Shooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 4	N45090
		201	CODE 6	N45191 and Subs
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 1	N45090
		601	CODE 2	N45191 and Subs
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 1	ALL
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check-----		601	CODE 1	ALL
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04			
Inspection/Check-----		601	CODE 1	N45090
		601	CODE 2	N45191 and Subs
FLIGHT POWER CONTROL SYSTEMS-----	29-05			
Inspection/Check-----		601	CODE 1	ALL
SPOILER SYSTEM-----	29-06			
Inspection/Check-----		601	CODE 1	ALL

Contents-29  
 CODE 5  
 Page 1

Feb 1/69

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>NAL Effectivity</u>
RUDDER STANDBY HYDRAULIC POWER SYSTEM-----	29-07	601	CODE 1	ALL
Inspection/Check-----				
MAIN-----	29-10-0	1	CODE 4	ALL
Description and Operation---		101	CODE 1	ALL
Trouble Shooting-----		501	CODE 1	ALL
Adjustment/Test-----		601	CODE 1	ALL
Inspection/Check-----				
HYDRAULIC SYSTEM RESERVOIR----	29-10-1	201	CODE 1	N45090
Maintenance Practices-----		201	CODE 2	N45191 and Subs
HYDRAULIC RESERVOIR RETURN FLUID FILTERS-----	29-10-2	201	CODE 1	N45090
Maintenance Practices-----		201	CODE 2	N45191 and Subs
HYDRAULIC RESERVOIR AIR PRESSURE REGULATOR-ASPIRATOR--	29-10-3	201	CODE 1	ALL
Maintenance Practices-----				
REGULATOR-ASPIRATOR AIR FILTERS-----	29-10-4	201	CODE 1	ALL
Maintenance Practices-----				

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>NAL Effectivity</u>
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS----- Maintenance Practices-----	29-10-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR RELIEF VALVE----- Maintenance Practices-----	29-10-6	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE----- Maintenance Practices-----	29-10-7	201	CODE 1	ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE----- Maintenance Practices-----	29-10-8	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER----- Maintenance Practices-----	29-10-9	201	CODE 1	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE----- Maintenance Practices-----	29-10-10	201 201	CODE 1 CODE 2	N45090 N45191 and Subs
ENGINE HYDRAULIC FIRE SHUTOFF VALVE----- Maintenance Practices-----	29-10-11	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMPS----- Maintenance Practices-----	29-10-12	201	CODE 4	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES----- Maintenance Practices-----	29-10-13	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER----- Maintenance Practices-----	29-10-14	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT----- Maintenance Practices-----	29-10-15	201	CODE 1	ALL

Feb 1/69

Printed in U.S.A.

Contents-29  
 CODE 5  
 Page 2A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>NAL Effectivity</u>
DUAL-FILTER AND RELIEF VALVE-- Maintenance Practices-----	29-10-16	201	CODE 1	ALL
DUAL-FILTER ELEMENTS----- Maintenance Practices-----	29-10-17	201	CODE 1	ALL
SYSTEM SELECTOR VALVE----- Maintenance Practices-----	29-10-18	201	CODE 1	ALL
LEFT HYDRAULIC POWER MANIFOLD----- Maintenance Practices-----	29-10-19	201	CODE 1	ALL
RIGHT HYDRAULIC POWER MANIFOLD----- Maintenance Practices-----	29-10-20	201	CODE 1	ALL
HYDRAULIC MANIFOLDS RETURN CHECK VALVE----- Maintenance Practices-----	29-10-21	201	CODE 1	ALL
HYDRAULIC POWER SYSTEM ACCUMULATOR----- Maintenance Practices-----	29-10-22	201	CODE 1	ALL
HYDRAULIC SYSTEM PRIORITY VALVE----- Maintenance Practices-----	29-10-23	201	CODE 1	ALL
AUXILIARY----- Description and Operation--- Troubleshooting-----	29-20-0	1 101	CODE 1 CODE 1	ALL ALL
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE----- Maintenance Practices-----	29-20-1	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP----- Maintenance Practices-----	29-20-2	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP RELIEF VALVE----- Maintenance Practices-----	29-20-3	201 201	CODE 1 CODE 2	N45090 N45191 and subsequent

Contents-29  
 CODE 5  
 Page 3

Jun 15/67



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>NAL Effectivity</u>
AUXILIARY HYDRAULIC SYSTEM FILTER-----	29-20-4	201	CODE 1	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT-----	29-20-5	201	CODE 1	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE-----	29-20-6	201	CODE 1	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR-----	29-20-7	201	CODE 1	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC PUMP ALTERNATE RESERVOIR-----	29-20-8	201	CODE 1	ALL
Maintenance Practices-----				
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS-----	29-20-9	201	CODE 1	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC PUMP CONTROL-----	29-20-10	201	CODE 1	ALL
Maintenance Practices-----				
INDICATING-----	29-30-0	1	CODE 1	ALL
Description and Operation---		101	CODE 1	ALL
Troubleshooting-----		201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC FLUID QUANTITY TRANSMITTER-----	29-30-1	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC FLUID TEMPERATURE BULB-----	29-30-2	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC FLUID PRESSURE TRANSMITTER-----	29-30-3	201	CODE 1	ALL
Maintenance Practices-----				

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>NAL Effectivity</u>
HYDRAULIC FLUID OVER- TEMPERATURE INDICATING LIGHT SWITCH-----	29-30-4			
Maintenance Practices-----		201	CODE 1	ALL
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT SWITCH-----	29-30-5			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC RESERVOIR LOW PRESSURE INDICATING LIGHT SWITCH-----	29-30-6			
Maintenance Practices-----		201	CODE 1	ALL

Jun 15/67

Printed in U.S.A.

Contents-29  
 CODE 5  
 Page 5

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

BRANIFF AIRWAYS, INC.

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>BNF Effectivity</u>
ALPHABETICAL INDEX-----	Index 29	1	CODE 3	ALL
GENERAL-----	29-00			
Description and Operation---		1	CODE 2	N1807
		-1	CODE 3	N1803-N1806, N1808,N1809
Troubleshooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 5	ALL
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 3	ALL
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 2	ALL
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check-----		601	CODE 1	ALL
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04			
Inspection/Check-----		601	CODE 3	ALL
FLIGHT POWER CONTROL SYSTEMS-----	29-05			
Inspection/Check-----		601	CODE 1	ALL
SPOILER SYSTEM-----	29-06			
Inspection/Check-----		601	CODE 1	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>BNF Effectivity</u>
RUDDER STANDBY HYDRAULIC POWER SYSTEM-----	29-07			
Inspection/Check-----		601	CODE 1	ALL
THRUST REVERSER SYSTEM-----	29-08			
Inspection/Check-----		601	CODE 1	ALL
MAIN-----	29-10-0			
Description and Operation---		1	CODE 5	ALL
Troubleshooting-----		101	CODE 1	ALL
Adjustment/Test-----		501	CODE 1	ALL
Inspection/Check-----		601	CODE 2	ALL
HYDRAULIC SYSTEM RESERVOIR----	29-10-1			
Maintenance Practices-----		201	CODE 3	ALL
HYDRAULIC RESERVOIR RETURN FLUID FILTER-----	29-10-2			
Maintenance Practices-----		201	CODE 3	ALL
HYDRAULIC RESERVOIR AIR PRESSURE REGULATOR- ASPIRATOR-----	29-10-3			
Maintenance Practices-----		201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTERS-----	29-10-4			
Maintenance Practices-----		201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS-----	29-10-5			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC RESERVOIR RELIEF VALVE-----	29-10-6			
Maintenance Practices-----		201	CODE 1	ALL

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>BNF Effectivity</u>
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE----- Maintenance Practices-----	29-10-7	201	CODE 1	ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE----- Maintenance Practices-----	29-10-8	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER----- Maintenance Practices-----	29-10-9	201	CODE 1	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE----- Maintenance Practices-----	29-10-10	201	CODE 2	ALL
ENGINE HYDRAULIC FIRE SHUTOFF VALVE----- Maintenance Practices-----	29-10-11	201	CODE 2	ALL
ENGINE-DRIVEN HYDRAULIC PUMPS----- Maintenance Practices-----	29-10-12	201	CODE 3	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES----- Maintenance Practices-----	29-10-13	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER----- Maintenance Practices-----	29-10-14	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT----- Maintenance Practices-----	29-10-15	201	CODE 1	ALL
DUAL-FILTER AND RELIEF VALVE-- Maintenance Practices-----	29-10-16	201	CODE 2	ALL
DUAL-FILTER ELEMENTS----- Maintenance Practices-----	29-10-17	201	CODE 1	ALL
SYSTEM SELECTOR VALVE----- Maintenance Practices-----	29-10-18	201	CODE 2	ALL

Feb 1/69

Printed in U.S.A.

Contents-29  
 CODE 6  
 Page 2A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>BNF Effectivity</u>
LEFT HYDRAULIC POWER MANIFOLD-----	29-10-19			
Maintenance Practices-----		201	CODE 2	ALL
RIGHT HYDRAULIC POWER MANIFOLD-----	29-10-20			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC MANIFOLDS RETURN CHECK VALVE-----	29-10-21			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC POWER SYSTEM ACCUMULATOR-----	29-10-22			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC SYSTEM PRIORITY VALVE-----	29-10-23			
Maintenance Practices-----		201	CODE 2	ALL
TWO STAGE RETURN FILTERS-----	29-10-24			
Maintenance Practices-----		201	CODE 1	ALL
TWO STAGE RETURN FILTERS ELEMENTS-----	29-10-25			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY-----	29-20-0			
Description and Operation---		1	CODE 2	ALL
Troubleshooting -----		101	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE-----	29-20-1			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP-----	29-20-2			
Maintenance Practices-----		201	CODE 4	ALL
AUXILIARY HYDRAULIC PUMP RELIEF VALVE-----	29-20-3			
Maintenance Practices-----		201	CODE 2	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER-----	29-20-4			
Maintenance Practices-----		201	CODE 1	ALL

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>BNF Effectivity</u>
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT-----	29-20-5	201	CODE 1	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE-----	29-20-6	201	CODE 1	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR-----	29-20-7	201	CODE 1	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC PUMP ALTERNATE RESERVOIR-----	29-20-8	201	CODE 1	ALL
Maintenance Practices-----				
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS-----	29-20-9	201	CODE 1	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC PUMP CONTROL-----	29-20-10	201	CODE 1	ALL
Maintenance Practices-----				
INDICATING-----	29-30-0	1	CODE 3	ALL
Description and Operation---		101	CODE 3	ALL
Troubleshooting-----		201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC FLUID QUANTITY TRANSMITTER-----	29-30-1	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC FLUID TEMPERATURE BULB-----	29-30-2	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC FLUID PRESSURE TRANSMITTER-----	29-30-3	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC FLUID OVER- TEMPERATURE INDICATING LIGHT SWITCH-----	29-30-4	201	CODE 1	ALL
Maintenance Practices-----				

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>	<u>BNF Effectivity</u>
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-5	201	CODE 1 ALL

Feb 1/69

Printed in U.S.A.

Contents-29  
CODE 6  
Page 5



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

AIR CANADA

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>TCA Effectivity</u>
AIRFLANE IDENTIFICATION-----	Ident 29	1	CODE 7	ALL
ALPHABETICAL INDEX-----	Index 29	1	CODE 1	ALL
GENERAL-----	29-00			
Description and Operation---		1	CODE 6	ALL
Trouble Shooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 6	864-866
		201	CODE 8	801-822, 860-863
		201	CODE 13	867 and Subs
Inspection/Check-----		601	CODE 1	801-822

1. GENERAL

2. ISOLATION

3. TOOLS AND EQUIPMENT REQUIRED

4. FLUSH MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)

A. Pressure Lines.....	801-822
B. Case Drain Lines.....	801-811
C. Case Drain Lines.....	812-822
D. Reservoir and Suction System.....	801-811
E. Reservoir and Suction System.....	812-822
F. Auxiliary Hydraulic Pump System Alternate Reservoir.....	801-811
G. Auxiliary Hydraulic Pump System Alternate Reservoir.....	812-822
H. Auxiliary Hydraulic Pump System.....	801-822

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>	<u>TCA Effectivity</u>
5. <u>FLUSH MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)</u>			
A. Regulator-Aspirator Pressure Line.....		801-822	
B. Empennage Pressure and Return Lines.....		801-822	
C. Aileron and Ejector Pressure and Return Lines.....		801-811	
D. Aileron Pressure and Return Lines.....		812-822	
E. Nose System Pressure and Return Lines.....		801-811	
F. Nose System Pressure and Return Lines.....		812-822	
G. A Return Line.....		801-822	
H. B Return Line.....		801-822	
I. Power Manifolds.....		801-822	
J. Low-Pressure Return Lines.....		801-811	
K. Low Pressure Return Lines.....		812-822	
6. <u>FLUSH AUXILIARY HYDRAULIC POWER SYSTEM</u>			
A. Auxiliary Pressure Lines to Wing Flap System.....		801-822	
7. <u>FLUSH UTILITY SYSTEMS UPSTREAM OF THE CONTROL SYSTEM FILTERS</u>			
A. Wing Flap System.....		801-822	
B. Wing Slot System.....		801-822	
C. Main Gear Retract System.....		801-822	
D. Main Gear Door System.....		801-822	
E. Bogie Trim and Bogie Swivel Unlock Systems.....		801-822	
F. Nose Gear System.....		801-822	
G. Ejector System.....		801-811	
H. Brake System.....		801-822	

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>	<u>TCA Effectivity</u>
8. <u>FLUSH FLIGHT POWER CONTROL SYSTEMS</u>			
A. Aileron Power System.....			801-822
B. Rudder Power System.....			801-822
C. Horizontal Stabilizer Trim System.....			801-822
9. <u>FLUSH SPOILER SYSTEM</u>			
A. Spoiler Power System to the Filter.....			801-822
B. Spoiler Supply System (Filter to Units).....			801-822
C. Outboard Spoiler System.....			801-822
D. Inboard Spoiler System.....			801-822
E. The Interconnect System.....			801-822
10. <u>FLUSH RUDDER STANDBY HYDRAULIC POWER SYSTEM</u>			
A. Rudder Standby Power System to the Filter.....			801-822
B. Rudder Standby Power Interconnect Line (Filter to Empennage Power Line).....			801-822
Inspection/Check-----		601	CODE 2 860 and Subs
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----			
	29-01		
Inspection/Check-----		601	CODE 1 860-863
		601	CODE 2 864-866
		601	CODE 3 867 and Subs
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----			
	29-02		
Inspection/Check-----		601	CODE 1 860-866
		601	CODE 2 867 and Subs
AUXILIARY HYDRAULIC POWER SYSTEM-----			
	29-03		
Inspection/Check-----		601	CODE 2 860 and Subs

Feb 1/69

Contents-29  
 CODE 7  
 Page 2A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>	<u>TCA Effectivity</u>
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04		
Inspection/Check-----		601	CODE 1
		601	CODE 2
		601	CODE 3
			860-863
			864-866
			867 and Subs
FLIGHT POWER CONTROL SYSTEMS-----	29-05		
Inspection/Check-----		601	CODE 1
			860 and Subs
SPOILER SYSTEM-----	29-06		
Inspection/Check-----		601	CODE 1
		601	CODE 2
			860-866
			867 and Subs
RUDDER STANDBY HYDRAULIC POWER SYSTEM-----	29-07		
Inspection/Check-----		601	CODE 1
			860 and Subs
THRUST REVERSER SYSTEM-----	29-08		
Inspection/Check-----		601	CODE 1
			867 and Subs
MAIN-----	29-10-0		
Description and Operation---		1	CODE 6
Trouble Shooting-----		101	CODE 1
Adjustment/Test-----		501	CODE 2
Inspection/Check-----		601	CODE 1
			801-822,
			860-866
		601	CODE 2
			867 and Subs
HYDRAULIC SYSTEM RESERVOIR----	29-10-1		
Maintenance Practices-----		201	CODE 2
		201	CODE 5
			864 and Subs
			801-822,
			860-863
HYDRAULIC RESERVOIR RETURN FLUID FILTER-----	29-10-2		
Maintenance Practices-----		201	CODE 2
		201	CODE 5
			864 and Subs
			801-822,
			860-863

May 1/69

Printed in U.S.A.

Contents-29  
 CODE 7  
 Page 3

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>	<u>TCA Effectivity</u>
HYDRAULIC RESERVOIR AIR PRES- SURE REGULATOR-ASPIRATOR----- Maintenance Practices-----	29-10-3	201 201 201	CODE 1 CODE 2 CODE 3
			816 and Subs 801-810 811-815
REGULATOR-ASPIRATOR AIR FILTERS----- Maintenance Practices-----	29-10-4	201	CODE 1
			816 and Subs
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS----- Maintenance Practices-----	29-10-5	201	CODE 1
			816 and Subs
HYDRAULIC RESERVOIR RELIEF VALVE----- Maintenance Practices-----	29-10-6	201 201	CODE 1 CODE 2
			812 and Subs 801-811
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE----- Maintenance Practices-----	29-10-7	201	CODE 2
			ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE----- Maintenance Practices-----	29-10-8	201	CODE 1
			ALL
HYDRAULIC RESERVOIR AIR CHAMBER----- Maintenance Practices-----	29-10-9	201	CODE 1
			ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE----- Maintenance Practices-----	29-10-10	201 201	CODE 1 CODE 2
			801-822, 860-863 864 and Subs
ENGINE HYDRAULIC FIRE SHUTOFF VALVE----- Maintenance Practices-----	29-10-11	201 201	CODE 1 CODE 2
			801-822, 860-866 867 and Subs
ENGINE-DRIVEN HYDRAULIC PUMPS----- Maintenance Practices-----	29-10-12	201	CODE 7
			ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>TCA Effectivity</u>
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES----- Maintenance Practices-----	29-10-13	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER----- Maintenance Practices-----	29-10-14	201	CODE 1	812 and Subs
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT ---- Maintenance Practices-----	29-10-15	201	CODE 1	812 and Subs
DUAL-FILTER AND RELIEF VALVE----- Maintenance Practices-----	29-10-16	201	CODE 1	801-822, 860-866
		201	CODE 2	867 and Subs
DUAL-FILTER ELEMENTS----- Maintenance Practices-----	29-10-17	201	CODE 1	ALL
SYSTEM SELECTOR VALVE----- Maintenance Practices-----	29-10-18	201	CODE 3	801-822, 860-866
		201	CODE 4	867 and Subs
LEFT HYDRAULIC POWER MANIFOLD----- Maintenance Practices-----	29-10-19	201	CODE 2	867 and Subs
		201	CODE 3	801-822, 860-866
RIGHT HYDRAULIC POWER MANIFOLD----- Maintenance Practices-----	29-10-20	201	CODE 1	ALL
HYDRAULIC MANIFOLDS RETURN CHECK VALVE----- Maintenance Practices-----	29-10-21	201	CODE 1	ALL
HYDRAULIC POWER SYSTEM ACCUMULATOR----- Maintenance Practices-----	29-10-22	201	CODE 1	ALL

Oct 15/68

Contents-29  
CODE 7  
Page 5

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>TCA Effectivity</u>
HYDRAULIC SYSTEM PRIORITY VALVE-----	29-10-23			
Maintenance Practices-----		201	CODE 1	801-822, 860-866
		201	CODE 2	867 and Subs
AUXILIARY-----	29-20-0			
Description and Operation---		1	CODE 3	ALL
Trouble Shooting-----		101	CODE 2	801-811, 860 and Subs
		101	CODE 3	812-822
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE-----	29-20-1			
Maintenance Practices-----		201	CODE 2	ALL
AUXILIARY HYDRAULIC PUMP-----	29-20-2			
Maintenance Practices-----		201	CODE 1	801-822, 860-866
		201	CODE 6	867 and Subs
AUXILIARY HYDRAULIC PUMP RELIEF VALVE-----	29-20-3			
Maintenance Practices-----		201	CODE 1	801-822, 860-863
		201	CODE 2	864 and Subs
AUXILIARY HYDRAULIC SYSTEM FILTER-----	29-20-4			
Maintenance Practices-----		201	CODE 2	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT-----	29-20-5			
Maintenance Practices-----		201	CODE 2	ALL
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE-----	29-20-6			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR-----	29-20-7			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP ALTERNATE RESERVOIR -----	29-20-8			
Maintenance Practices-----		201	CODE 2	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>AC Effectivity</u>
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS----- Maintenance Practices-----	29-20-9	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP CONTROL----- Maintenance Practices-----	29-20-10	201	CODE 2	ALL
INDICATING----- Description and Operation--- Troubleshooting----- Maintenance Practices-----	29-30-0	1 101 201	CODE 6 CODE 1 CODE 1	ALL ALL ALL
HYDRAULIC FLUID QUANTITY TRANSMITTER----- Maintenance Practices-----	29-30-1	201	CODE 1	ALL
HYDRAULIC FLUID TEMPERATURE BULB----- Maintenance Practices-----	29-30-2	201	CODE 1	ALL
HYDRAULIC FLUID PRESSURE TRANSMITTER----- Maintenance Practices-----	29-30-3	201	CODE 1	ALL
HYDRAULIC FLUID OVER- TEMPERATURE INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-4	201	CODE 1	ALL
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR LOW PRESSURE INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-6	201 201	CODE 1 CODE 2	812-822, 860-876 877-879

May 1/70

Contents-29  
 CODE 7  
 Page 7



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

ALITALIA-LINEE AEREE ITALIANE

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ALI Effectivity</u>
ALPHABETICAL INDEX-----	Index 29	1	CODE 1	ALL
GENERAL-----	29-00			
Description and Operation---		1	CODE 3	I-DIWH, I-DIWJ, I-DIWK, I-DIWN, I-DI WV, I-DIWW, I-DI WY, I-DIWZ, I-DIWX
Trouble Shooting-----		1	CODE 5	I-DIWC, I-DIWQ
Maintenance Practices-----		101	CODE 1	ALL
Inspection/Check-----		201	CODE 7	ALL
		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 3	ALL
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 2	ALL
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check-----		601	CODE 1	ALL
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04			
Inspection/Check-----		601	CODE 3	ALL
FLIGHT POWER CONTROL SYSTEMS---	29-05			
Inspection/Check-----		601	CODE 1	ALL
SPOILER SYSTEM-----	29-06			
Inspection/Check-----		601	CODE 1	I-DIWC, I-DIWJ, I-DIWN, I-DIWQ, I-DI WV
		601	CODE 2	I-DIWK, I-DIWW, I-DI WY, I-DIWZ, I-DIWH, I-DIWX

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ALL Effectivity</u>
RUDDER STANDBY HYDRAULIC POWER SYSTEM-----	29-07	601	CODE 1	ALL
Inspection/Check-----				
THRUST REVERSER SYSTEM-----	29-08	601	CODE 1	ALL
Inspection/Check-----				
MAIN-----	29-10-0	1	CODE 12	ALL
Description and Operation---		101	CODE 1	ALL
Trouble Shooting-----		501	CODE 1	ALL
Adjustment/Test-----		601	CODE 2	ALL
Inspection/Check-----				
HYDRAULIC SYSTEM RESERVOIR----	29-10-1	201	CODE 2	ALL
Maintenance Practices-----				
HYDRAULIC RESERVOIR RETURN FLUID FILTER-----	29-10-2	201	CODE 2	ALL
Maintenance Practices-----				
HYDRAULIC RESERVOIR, AIR PRESSURE REGULATOR-ASPIRATOR--	29-10-3	201	CODE 1	ALL
Maintenance Practices-----				
REGULATOR-ASPIRATOR AIR FILTERS-----	29-10-4	201	CODE 1	ALL
Maintenance Practices-----				
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS-----	29-10-5	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC RESERVOIR RELIEF VALVE-----	29-10-6	201	CODE 1	ALL
Maintenance Practices-----				

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ALL Effectivity</u>
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE----- Maintenance Practices-----	29-10-7	201	CODE 1	ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE----- Maintenance Practices-----	29-10-8	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER----- Maintenance Practices-----	29-10-9	201	CODE 1 .	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE----- Maintenance Practices-----	29-10-10	201	CODE 2	ALL
ENGINE HYDRAULIC FIRE SHUTOFF VALVE----- Maintenance Practices-----	29-10-11	201	CODE 2	ALL
ENGINE-DRIVEN HYDRAULIC PUMPS----- Maintenance Practices-----	29-10-12	201	CODE 3	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES----- Maintenance Practices-----	29-10-13	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER----- Maintenance Practices-----	29-10-14	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT----- Maintenance Practices-----	29-10-15	201	CODE 1	ALL
DUAL-FILTER AND RELIEF VALVE-- Maintenance Practices-----	29-10-16	201	CODE 2	ALL
DUAL-FILTER ELEMENTS----- Maintenance Practices-----	29-10-17	201	CODE 1	ALL
SYSTEM SELECTOR VALVE----- Maintenance Practices-----	29-10-18	201	CODE 2	ALL

Feb 1/69

Printed in U.S.A.

Contents-29  
 CODE 8  
 Page 2A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ALI Effectivity</u>
LEFT HYDRAULIC POWER MANIFOLD----- Maintenance Practices-----	29-10-19	201	CODE 2	ALL
RIGHT HYDRAULIC POWER MANIFOLD----- Maintenance Practices-----	29-10-20	201	CODE 1	ALL
HYDRAULIC MANIFOLDS RETURN CHECK VALVE----- Maintenance Practices-----	29-10-21	201	CODE 1	ALL
HYDRAULIC POWER SYSTEM ACCUMULATOR----- Maintenance Practices-----	29-10-22	201	CODE 1	ALL
HYDRAULIC SYSTEM PRIORITY VALVE----- Maintenance Practices-----	29-10-23	201	CODE 2	ALL
AUXILIARY----- Description and Operation---	29-20-0	1	CODE 2	ALL
Trouble Shooting-----		101	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE----- Maintenance Practices-----	29-20-1	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP----- Maintenance Practices-----	29-20-2	201 201	CODE 2 CODE 4	I-DIWC, I-DIWQ, I-DIWH, I-DIWJ, I-DIWK, I-DIWN, I-DIWV, I-DIWW, I-DIWY, I-DIWZ, I-DIWX
AUXILIARY HYDRAULIC PUMP RELIEF VALVE----- Maintenance Practices-----	29-20-3	201	CODE 2	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER----- Maintenance Practices-----	29-20-4	201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT----- Maintenance Practices-----	29-20-5	201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE----- Maintenance Practices-----	29-20-6	201	CODE 1	ALL

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ALL Effectivity</u>
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR----- Maintenance Practices-----	29-20-7	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP ALTERNATE RESERVOIR----- Maintenance Practices-----	29-20-8	201	CODE 1	ALL
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS----- Maintenance Practices-----	29-20-9	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP CONTROL----- Maintenance Practices-----	29-20-10	201	CODE 1	ALL
INDICATING----- Description and Operation---	29-30-0	1	CODE 1	I-DIWN, I-DIWV, I-DIWC, I-DIWQ, I-DIWJ, I-DIWY, I-DIWZ, I-DIWK, I-DIWW
		1	CODE 7	I-DIWH, I-DIWX
Troubleshooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC FLUID QUANTITY TRANSMITTER----- Maintenance Practices-----	29-30-1	201	CODE 1	ALL
HYDRAULIC FLUID TEMPERATURE BULE----- Maintenance Practices-----	29-30-2	201	CODE 1	ALL
HYDRAULIC FLUID PRESSURE TRANSMITTER----- Maintenance Practices-----	29-30-3	201	CODE 1	ALL
HYDRAULIC FLUID OVERTEMPER- ATURE INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-4	201	CODE 1	ALL
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-5	201	CODE 1	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>	<u>ALI Effectivity</u>
HYDRAULIC RESERVOIR LOW PRESSURE INDICATING LIGHT SWITCH-----	29-30-6	201	CODE 1
Maintenance Practices-----		201	CODE 2
			I-DIWN, I-DI WV, I-DIWC, I-DI WQ, I-DIWJ, I-DI WY, I-DIWZ, I-DI WK, I-DI WW I-DI WH, I-DI WX

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

KLM ROYAL DUTCH AIRLINES

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>KLM Effectivity</u>
ALPHABETICAL INDEX-----	Index 29	1	CODE 2	ALL
GENERAL-----	29-00			
Description and Operation-----		1	CODE 2	D-ADIX - D-ADIZ
		1	CODE 7	PH-DEA - PH-DEH,
				PH-DEK - PH-DEM,
				YV-C-VIA, YV-C-VIB
Troubleshooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 12	PH-DEA - PH-DEH,
				PH-DEK - PH-DEM,
				YV-C-VIA, YV-C-VIB
		201	CODE 14	D-ADIX - D-ADIZ
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 3	ALL
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 2	ALL
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check-----		601	CODE 1	D-ADIX - D-ADIZ
		601	CODE 2	PH-DEA - PH-DEH,
				PH-DEK - PH-DEM,
				YV-C-VIA, YV-C-VIB
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04			
Inspection/Check-----		601	CODE 3	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>KIM Effectivity</u>
FLIGHT POWER CONTROL SYSTEMS-----	29-05			
Inspection/Check-----		601	CODE 1	ALL
SPOILER SYSTEM-----	29-06			
Inspection/Check-----		601	CODE 1	PH-DEA - PH-DED YV-C-VIA, YV-C-VIB, PH-DEE - PH-DEH, PH-DEK - PH-DEM, D-ADIX - D-ADIZ
		601	CODE 2	
RUDDER STANDBY HYDRAULIC POWER SYSTEM-----	29-07			
Inspection/Check-----		601	CODE 1	ALL
THRUST REVERSER SYSTEM-----	29-08			
Inspection/Check-----		601	CODE 1	ALL
MAIN-----	29-10-0			
Description and Operation---		1	CODE 8	PH-DEA - PH-DEH, PH-DEK - PH-DEM, YV-C-VIA, YV-C-VIB D-ADIX - D-ADIZ
		1	CODE 24	
Troubleshooting-----		101	CODE 1	ALL
Adjustment/Test-----		501	CODE 1	D-ADIX - D-ADIZ PH-DEA - PH-DEH, PH-DEK - PH-DEM, YV-C-VIA, YV-C-VIB
		501	CODE 2	
Inspection/Check-----		601	CODE 2	ALL
HYDRAULIC SYSTEM RESERVOIR----	29-10-1			
Maintenance Practices-----		201	CODE 2	ALL
HYDRAULIC RESERVOIR RETURN FLUID FILTER-----	29-10-2			
Maintenance Practices-----		201	CODE 2	ALL
HYDRAULIC RESERVOIR AIR PRESSURE REGULATOR-ASPIRATOR--	29-10-3			
Maintenance Practices-----		201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTERS-----	29-10-4			
Maintenance Practices-----		201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS-----	29-10-5			
Maintenance Practices-----		201	CODE 1	ALL



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>KLM Effectivity</u>
HYDRAULIC RESERVOIR RELIEF VALVE-----	29-10-6	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE-----	29-10-7	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE-----	29-10-8	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC RESERVOIR AIR CHAMBER-----	29-10-9	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE-----	29-10-10	201	CODE 2	ALL
Maintenance Practices-----				
ENGINE HYDRAULIC FIRE SHUTOFF VALVE-----	29-10-11	201	CODE 2	ALL
Maintenance Practices-----				
ENGINE-DRIVEN HYDRAULIC PUMPS-----	29-10-12	201	CODE 5	ALL
Maintenance Practices-----				
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES-----	29-10-13	201	CODE 1	ALL
Maintenance Practices-----				
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER-----	29-10-14	201	CODE 1	ALL
Maintenance Practices-----				
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT-----	29-10-15	201	CODE 1	ALL
Maintenance Practices-----				
DUAL-FILTER AND RELIEF VALVE--	29-10-16	201	CODE 2	ALL
Maintenance Practices-----				
DUAL-FILTER ELEMENTS-----	29-10-17	201	CODE 1	ALL
Maintenance Practices-----				

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>	<u>KLM Effectivity</u>
SYSTEM SELECTOR VALVE----- Maintenance Practices-----	29-10-18	201 201	CODE 2 CODE 4 D-ADIX - D-ADIZ PH-DEA - PH-DEH, PH-DEK - PH-DEM, YV-C-VIA, YV-C-VIB
LEFT HYDRAULIC POWER MANIFOLD----- Maintenance Practices-----	29-10-19	201	CODE 2 ALL
RIGHT HYDRAULIC POWER MANIFOLD----- Maintenance Practices-----	29-10-20	201	CODE 1 ALL
HYDRAULIC MANIFOLDS RETURN CHECK VALVE----- Maintenance Practices-----	29-10-21	201	CODE 1 ALL
HYDRAULIC POWER SYSTEM ACCUMULATOR----- Maintenance Practices-----	29-10-22	201	CODE 1 ALL
HYDRAULIC SYSTEM PRIORITY VALVE----- Maintenance Practices-----	29-10-2	201	CODE 2 ALL
AUXILIARY----- Description and Operation---	29-20-0	1	CODE 4 PH-DEA - PH-DEH, PH-DEK - PH-DEM, YV-C-VIA, YV-C-VIB
Troubleshooting-----		1 101 101	CODE 6 CODE 1 CODE 2 D-ADIX - D-ADIZ D-ADIX - D-ADIZ PH-DEA - PH-DEH, PH-DEK - PH-DEM, YV-C-VIA, YV-C-VIB
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE----- Maintenance Practices-----	29-20-1	201 201	CODE 1 CODE 2 D-ADIX - D-ADIZ PH-DEA - PH-DEH, PH-DEK - PH-DEM, YV-C-VIA, YV-C-VIB
AUXILIARY HYDRAULIC PUMP----- Maintenance Practices-----	29-20-2	201 201	CODE 2 CODE 7 PH-DEA - PH-DEH, PH-DEK - PH-DEM, YV-C-VIA, YV-C-VIB D-ADIX - D-ADIZ

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>KLM Effectivity</u>
AUXILIARY HYDRAULIC PUMP RELIEF VALVE----- Maintenance Practices-----	29-20-3	201	CODE 2	ALL .
AUXILIARY HYDRAULIC SYSTEM FILTER----- Maintenance Practices-----	29-20-4	201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT----- Maintenance Practices-----	29-20-5	201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE----- Maintenance Practices-----	29-20-6	201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR----- Maintenance Practices-----	29-20-7	201	CODE 1	ALL
AUXILIARY HYDRUALIC PUMP ALTERNATE RESERVOIR----- Maintenance Practices-----	29-20-8	201	CODE 1	ALL
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS----- Maintenance Practices-----	29-20-9	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP CONTROL----- Maintenance Practices-----	29-20-10	201	CODE 1	ALL
INDICATING----- Description and Operation---	29-30-0	1	CODE 2	PH-DEA - PH-DEH, PH-DEK, PH-DEL, YV-C-VIA, YV-C-VIB PH-DEM, D-ADIX - D-ADIZ
		1	CODE 8	
Troubleshooting-----		101	CODE 2	
Maintenance Practices-----		201	CODE 1	
HYDRAULIC FLUID QUANTITY TRANSMITTER----- Maintenance Practices-----	29-30-1	201	CODE 1	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>KLM Effectivity</u>
HYDRAULIC FLUID TEMPERATURE BULB----- Maintenance Practices-----	29-30-2	201	CODE 1	ALL
HYDRAULIC FLUID PRESSURE TRANSMITTER----- Maintenance Practices-----	29-30-3	201	CODE 1	ALL
HYDRAULIC FLUID OVERTEMPER- ATURE INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-4	201	CODE 1	ALL
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR LOW PRESSURE INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-6	201	CODE 1	PH-DEA - PH-DEH, PH-DEK, PH-DEL, YV-C-VIA, YV-C-VIB, (without S/B 29-71 incorporated) PH-DEA - PH-DEH, PH-DEK, PH-DEL, YV-C-VIA, YV-C-VIB, (with S/B 29-71 incorporated), PH-DEM, D-ADIX - D-ADIZ
		201	CODE 2	

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

TRANS INTERNATIONAL AIRLINES

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>TIA Effectivity</u>
ALPHABETICAL INDEX-----	Index 29	1	CODE 1	ALL
GENERAL-----	29-00			
Description and Operation---		1	CODE 2	N4863T and Subs
		1	CODE 9	N8960T-N8962T
Trouble Shooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 4	N8961T
		201	CODE 6	N8960T,N8962T
		201	CODE 13	N4863T and Subs
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 1	N8961T
		601	CODE 2	N8960T,N8962T
		601	CODE 3	N4863T and Subs
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 1	N8960T-N8962T
		601	CODE 2	N4863T and Subs
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check-----		601	CODE 1	ALL
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04			
Inspection/Check-----		601	CODE 1	N8960T-N8962T
		601	CODE 3	N4863T and Subs
FLIGHT POWER CONTROL SYSTEMS-----	29-05			
Inspection/Check-----		601	CODE 1	ALL

Contents-29  
 CODE 10  
 Page 1

Feb 1/69

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>TIA Effectivity</u>
SPOILER SYSTEM----- Inspection/Check-----	29-06	601 601	CODE 1 CODE 2	N8960T-N8962T N4863T and Subs
RUDDER STANDBY HYDRAULIC POWER SYSTEM----- Inspection/Check-----	29-07	601	CODE 1	ALL
THRUST REVERSER SYSTEM----- Inspection/Check-----	29-08	601	CODE 1	N4863T and Subs
MAIN----- Description and Operation--- Trouble Shooting----- Adjustment/Test----- Inspection/Check-----	29-10-0	1 101 501 601 601	CODE 10 CODE 1 CODE 1 CODE 1 CODE 2	ALL ALL ALL N8960T-N8962T N4863T and Subs
HYDRAULIC SYSTEM RESERVOIR---- Maintenance Practices-----	29-10-1	201 201	CODE 1 CODE 2	N8961T N8960T,N8962T, N4863T and Subs
HYDRAULIC RESERVOIR RETURN FLUID FILTER----- Maintenance Practices-----	29-10-2	201 201	CODE 1 CODE 2	N8961T N8960T,N8962T, N4863T and Subs
HYDRAULIC RESERVOIR AIR PRESSURE REGULATOR-ASPIRATOR-- Maintenance Practices-----	29-10-3	201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTERS----- Maintenance Practices-----	29-10-4	201	CODE 1	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>TIA Effectivity</u>
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS-----	29-10-5			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC RESERVOIR RELIEF VALVE-----	29-10-6			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE-----	29-10-7			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE-----	29-10-8			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER-----	29-10-9			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE-----	29-10-10			
Maintenance Practices-----		201 201	CODE 1 CODE 2	N8961T N8960T, N8962T, N4863T, and Subs
ENGINE HYDRAULIC FIRE SHUTOFF VALVE-----	29-10-11			
Maintenance Practices-----		201 201	CODE 1 CODE 2	N8960T-N8962T N4863T and Subs
ENGINE-DRIVEN HYDRAULIC PUMPS-----	29-10-12			
Maintenance Practices-----		201 201	CODE 3 CODE 4	N4863T and Subs N8960T-N8962T
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES-----	29-10-13			
Maintenance Practices-----		201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER-----	29-10-14			
Maintenance Practices-----		201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT-----	29-10-15			
Maintenance Practices-----		201	CODE 1	ALL

Contents 29  
 CODE 10  
 Page 2A

Feb 1/69

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>TIA Effectivity</u>
DUAL-FILTER AND RELIEF VALVE-----	29-10-16			
Maintenance Practices-----		201	CODE 1	N8960T-N8962T
		201	CODE 2	N4863T and Subs
DUAL-FILTER ELEMENTS-----	29-10-17			
Maintenance Practices-----		201	CODE 1	ALL
SYSTEM SELECTOR VALVE-----	29-10-18			
Maintenance Practices-----		201	CODE 1	N8960T-N8962T
		201	CODE 2	N4863T and Subs
LEFT HYDRAULIC POWER MANIFOLD-----	29-10-19			
Maintenance Practices-----		201	CODE 1	N8960T-N8962T
		201	CODE 2	N4863T and Subs
RIGHT HYDRAULIC POWER MANIFOLD-----	29-10-20			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC MANIFOLDS RETURN CHECK VALVE-----	29-10-21			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC POWER SYSTEM ACCUMULATOR-----	29-10-22			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC SYSTEM PRIORITY VALVE-----	29-10-23			
Maintenance Practices-----		201	CODE 1	N8960T-N8962T
		201	CODE 2	N4863T and Subs
AUXILIARY-----	29-20-0			
Description and Operation---		1	CODE 1	N8960T-N8962T
		1	CODE 6	N4863T and Subs
Trouble Shooting-----		101	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE-----	29-20-1			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP-----	29-20-2			
Maintenance Practices-----		201	CODE 3	N8960T, N8962T
		201	CODE 7	N4863T, and Subs

Feb 1/69

Contents-29  
CODE 10  
Page 3



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>TIA Effectivity</u>
AUXILIARY HYDRAULIC PUMP RELIEF VALVE----- Maintenance Practices-----	29-20-3	201 201	CODE 1 CODE 2	N8961T N8960T, N8962T N4863T, and Subs
AUXILIARY HYDRAULIC SYSTEM FILTER----- Maintenance Practices-----	29-20-4	201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT----- Maintenance Practices-----	29-20-5	201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE----- Maintenance Practices-----	29-20-6	201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR----- Maintenance Practices-----	29-20-7	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP ALTERNATE RESERVOIR----- Maintenance Practices-----	29-20-8	201	CODE 1	ALL
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS----- Maintenance Practices-----	29-20-9	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP CONTROL----- Maintenance Practices-----	29-20-10	201	CODE 1	ALL
INDICATING----- Description and Operation---	29-30-0	1	CODE 1	N8960T-N8962T, N4863T-N4868T
		1	CODE 7	N4869T
Trouble Shooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC FLUID QUANTITY TRANSMITTER----- Maintenance Practices-----	29-30-1	201	CODE 1	ALL
HYDRAULIC FLUID TEMPERATURE BULB----- Maintenance Practices-----	29-30-2	201	CODE 1	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>TIA Effectivity</u>
HYDRAULIC FLUID PRESSURE TRANSMITTER-----	29-30-3			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC FLUID OVER- TEMPERATURE INDICATING LIGHT SWITCH-----	29-30-4			
Maintenance Practices-----		201	CODE 1	ALL
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT SWITCH-----	29-30-5			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC RESERVOIR LOW PRESSURE INDICATING LIGHT SWITCH-----	29-30-6			
Maintenance Practices-----		201	CODE 1	N8960T-N8962T, N4863T-N4868T
		201	CODE 2	N4869T

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

TRANS CARIBBEAN AIRWAYS, INC.

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>TRC Effectivity</u>
ALPHABETICAL INDEX-----	Index 29	1	CODE 2	ALL
GENERAL-----	29-00			
Description and Operation---		1	CODE 9	ALL
Troubleshooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 10	ALL
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM: (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 1	N8786R
		601	CODE 2	N8787R and Subs
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 1	ALL
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check-----		601	CODE 1	ALL
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04			
Inspection/Check-----		601	CODE 1	ALL
FLIGHT POWER CONTROL SYSTEMS-----	29-05			
Inspection/Check-----		601	CODE 1	ALL
SPOILER SYSTEM-----	29-06			
Inspection/Check-----		601	CODE 1	ALL
RUDDER STANDBY HYDRAULIC POWER SYSTEM-----	29-07			
Inspection/Check-----		601	CODE 1	ALL

Contents-29  
 CODE 11  
 Page 1

Feb 1/69

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>TRC Effectivity</u>
MAIN-----	29-10-0			
Description and Operation---		1	CODE 11	ALL
Troubleshooting-----		101	CODE 1	ALL
Adjustment/Test-----		501	CODE 1	ALL
Inspection/Check-----		601	CODE 1	ALL
 HYDRAULIC SYSTEM RESERVOIR----	 29-10-1			
Maintenance Practices-----		201	CODE 1	N8786R
		201	CODE 2	N8787R and subsequent
 HYDRAULIC RESERVOIR RETURN FLUID FILTER-----	 29-10-2			
Maintenance Practices-----		201	CODE 1	N8786R
		201	CODE 2	N8787R and subsequent
 HYDRAULIC RESERVOIR AIR PRESSURE REGULATOR-ASPIRATOR--	 29-10-3			
Maintenance Practices-----		201	CODE 1	ALL
 REGULATOR-ASPIRATOR AIR FILTERS-----	 29-10-4			
Maintenance Practices-----		201	CODE 1	ALL

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>TRC Effectivity</u>
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS----- Maintenance Practices-----	29-10-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR RELIEF VALVE----- Maintenance Practices-----	29-10-6	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE----- Maintenance Practices-----	29-10-7	201	CODE 1	ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE----- Maintenance Practices-----	29-10-8	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER----- Maintenance Practices-----	29-10-9	201	CODE 1	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE----- Maintenance Practices-----	29-10-10	201 201	CODE 1 CODE 2	N8786R N8787R and subsequent
ENGINE HYDRAULIC FIRE SHUTOFF VALVE----- Maintenance Practices-----	29-10-11	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMPS----- Maintenance Practices-----	29-10-12	201	CODE 2	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES----- Maintenance Practices-----	29-10-13	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER----- Maintenance Practices-----	29-10-14	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT----- Maintenance Practices-----	29-10-15	201	CODE 1	ALL

Feb 1/69

Printed in U.S.A.

Contents-29  
 CODE 11  
 Page 2A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>TRC Effectivity</u>
DUAL-FILTER AND RELIEF VALVE-----	29-10-16			
Maintenance Practices-----		201	CODE 1	ALL
DUAL-FILTER ELEMENTS-----	29-10-17			
Maintenance Practices-----		201	CODE 1	ALL
SYSTEM SELECTOR VALVE-----	29-10-18			
Maintenance Practices-----		201	CODE 1	ALL
LEFT HYDRAULIC POWER MANIFOLD-----	29-10-19			
Maintenance Practices-----		201	CODE 1	ALL
RIGHT HYDRAULIC POWER MANIFOLD-----	29-10-20			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC MANIFOLDS RETURN CHECK VALVE-----	29-10-21			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC POWER SYSTEM ACCUMULATOR-----	29-10-22			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC SYSTEM PRIORITY VALVE-----	29-10-23			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY-----	29-20-0			
Description and Operation---		1	CODE 1	ALL
Troubleshooting-----		101	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE-----	29-20-1			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP-----	29-20-2			
Maintenance Practices-----		201	CODE 3	ALL
AUXILIARY HYDRAULIC PUMP RELIEF VALVE-----	29-20-3			
Maintenance Practices-----		201	CODE 1	N8756R
		201	CODE 2	N8787R and subsequent

Contents-29  
 CODE 11  
 Page 3

Jan 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>TRC Effectivity</u>
AUXILIARY HYDRAULIC SYSTEM FILTER----- Maintenance Practices-----	29-20-4	201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT----- Maintenance Practices-----	29-20-5	201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE----- Maintenance Practices-----	29-20-6	201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR----- Maintenance Practices-----	29-20-7	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP ALTERNATE RESERVOIR----- Maintenance Practices-----	29-20-8	201	CODE 1	ALL
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS----- Maintenance Practices-----	29-20-9	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP CONTROL----- Maintenance Practices-----	29-20-10	201	CODE 1	ALL
INDICATING----- Description and Operation--- Troubleshooting----- Maintenance Practices-----	29-30-0	1 101 201	CODE 2 CODE 2 CODE 1	ALL ALL ALL
HYDRAULIC FLUID QUANTITY TRANSMITTER----- Maintenance Practices-----	29-30-1	201	CODE 1	ALL
HYDRAULIC FLUID TEMPERATURE BULB----- Maintenance Practices-----	29-30-2	201	CODE 1	ALL
HYDRAULIC FLUID PRESSURE TRANSMITTER----- Maintenance Practices-----	29-30-3	201	CODE 1	ALL

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>TRC Effectivity</u>
HYDRAULIC FLUID OVERTEMPERA- TURE INDICATING LIGHT SWITCH-- Maintenance Practices-----	29-30-4	201	CODE 1	ALL
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR LOW PRESSURE INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-6	201	CODE 1	ALL

Jun 15/67

Printed in U.S.A.

Contents-29  
 CODE 11  
 Page 5



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

CANADIAN PACIFIC AIR LINES, LTD.

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>CPA Effectivity</u>
ALPHABETICAL INDEX-----	Index 29	1	CODE 1	ALL
GENERAL-----	29-00			
Description and Operation---		1	CODE 8	ALL
Troubleshooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 7	ALL
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 3	ALL
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTERS AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 2	ALL
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check-----		601	CODE 2	ALL
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04			
Inspection/Check-----		601	CODE 3	ALL
FLIGHT POWER CONTROL SYSTEMS-----	29-05			
Inspection/Check-----		601	CODE 1	ALL
SPOILER SYSTEM-----	29-06			
Inspection/Check-----		601	CODE 1	ALL
RUDDER STANDBY HYDRAULIC POWER SYSTEM-----	29-07			
Inspection/Check-----		601	CODE 1	ALL

Contents-29  
CODE 12  
Page 1

Feb 1/69

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>CPA Effectivity</u>
THRUST REVERSER SYSTEM----- Inspection/Check	29-08	601	CODE 1	ALL
MAIN----- Description and Operation--- Troubleshooting----- Adjustment/Test----- Inspection/Check-----	29-10-0	1 101 501 601	CODE 9 CODE 1 CODE 2 CODE 2	ALL ALL ALL ALL
HYDRAULIC SYSTEM RESERVOIR---- Maintenance Practices-----	29-10-1	201	CODE 2	ALL
HYDRAULIC RESERVOIR RETURN FLUID FILTER----- Maintenance Practices-----	29-10-2	201	CODE 2	ALL
HYDRAULIC RESERVOIR AIR PRESSURE REGULATOR-ASPIRATOR-- Maintenance Practices-----	29-10-3	201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTERS----- Maintenance Practices-----	29-10-4	201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS----- Maintenance Practices-----	29-10-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR RELIEF VALVE----- Maintenance Practices-----	29-10-6	201	CODE 1	ALL

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>CPA Effectivity</u>
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE----- Maintenance Practices-----	29-10-7	201	CODE 1	ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE----- Maintenance Practices-----	29-10-8	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER----- Maintenance Practices-----	29-10-9	201	CODE 1	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE----- Maintenance Practices-----	29-10-10	201	CODE 2	ALL
ENGINE HYDRAULIC FIRE SHUTOFF VALVE----- Maintenance Practices-----	29-10-11	201	CODE 2	ALL
ENGINE-DRIVEN HYDRAULIC PUMPS----- Maintenance Practices-----	29-10-12	201	CODE 3	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES----- Maintenance Practices-----	29-10-13	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER----- Maintenance Practices-----	29-10-14	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT----- Maintenance Practices-----	29-10-15	201	CODE 1	ALL
DUAL-FILTER AND RELIEF VALVE-- Maintenance Practices-----	29-10-16	201	CODE 2	ALL
DUAL-FILTER ELEMENTS----- Maintenance Practices-----	29-10-17	201	CODE 1	ALL
SYSTEM SELECTOR VALVE----- Maintenance Practices-----	29-10-18	201	CODE 4	ALL

Feb 1/69

Printed in U.S.A.

Contents-29  
 CODE 12  
 Page 2A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>CPA Effectivity</u>
LEFT HYDRAULIC POWER MANIFOLD-----	29-10-19	201	CODE 2	ALL
Maintenance Practices-----				
RIGHT HYDRAULIC POWER MANIFOLD-----	29-10-20	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC MANIFOLDS RETURN CHECK VALVE-----	29-10-21	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC POWER SYSTEM ACCUMULATOR-----	29-10-22	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC SYSTEM PRIORITY VALVE-----	29-10-23	201	CODE 2	ALL
Maintenance Practices-----				
AUXILIARY-----	29-20-0	1	CODE 4	ALL
Description and Operation---		101	CODE 2	ALL
Troubleshooting-----				
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE-----	29-20-1	201	CODE 2	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC PUMP-----	29-20-2	201	CODE 4	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC PUMP RELIEF VALVE-----	29-20-3	201	CODE 2	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC SYSTEM FILTER-----	29-20-4	201	CODE 1	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT-----	29-20-5	201	CODE 1	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE-----	29-20-6	201	CODE 1	ALL
Maintenance Practices-----				

Jan 15/68

Printed in U.S.A.

Contents-29  
 CODE 12  
 Page 3

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>CPA Effectivity</u>
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR----- Maintenance Practices-----	29-20-7	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP ALTERNATE RESERVOIR----- Maintenance Practices-----	29-20-8	201	CODE 1	ALL
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS----- Maintenance Practices-----	29-20-9	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP CONTROL----- Maintenance Practices-----	29-20-10	201	CODE 1	ALL
INDICATING----- Description and Operation--- Troubleshooting----- Maintenance Practices-----	29-30-0	1 101 201	CODE 1 CODE 1 CODE 1	ALL ALL ALL
HYDRAULIC FLUID QUANTITY TRANSMITTER----- Maintenance Practices-----	29-30-1	201	CODE 1	ALL
HYDRAULIC FLUID TEMPERATURE BULB----- Maintenance Practices-----	29-30-2	201	CODE 1	ALL
HYDRAULIC FLUID PRESSURE TRANSMITTER----- Maintenance Practices-----	29-30-3	201	CODE 1	ALL
HYDRAULIC FLUID OVERTEMPERA- TURE INDICATING LIGHT SWITCH-- Maintenance Practices-----	29-30-4	201	CODE 1	ALL
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR LOW PRES- SURE INDICATING LIGHT SWITCH-- Maintenance Practices-----	29-30-6	201	CODE 1	ALL

**DOUGLAS AIRCRAFT CO.**  
**DC-8 SIXTY SERIES**  
**MAINTENANCE MANUAL**

Chapter 29

TABLE OF CONTENTS

SATURN AIRWAYS, INC.

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>STN Effectivity</u>
ALPHABETICAL INDEX-----	Index 29	1	CODE 1	ALL
GENERAL-----	29-00			
Description and Operation---		1	CODE 9	ALL
Troubleshooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 6	ALL
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 1	ALL
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check-----		601	CODE 1	ALL
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04			
Inspection/Check-----		601	CODE 1	ALL
FLIGHT POWER CONTROL SYSTEMS-----	29-05			
Inspection/Check-----		601	CODE 1	ALL
SPOILER SYSTEM-----	29-06			
Inspection/Check-----		601	CODE 1	ALL
RUDDER STANDBY HYDRAULIC POWER SYSTEM-----	29-07			
Inspection/Check-----		601	CODE 1	ALL

Contents 29  
CODE 13  
Page 1

Feb 1/69

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>STN Effectivity</u>
MAIN-----	29-10-0			
Description and Operation---		1	CODE 13	ALL
Troubleshooting-----		101	CODE 1	ALL
Adjustment/Test-----		501	CODE 1	ALL
Inspection/Check-----		601	CODE 1	ALL
HYDRAULIC SYSTEM RESERVOIR----	29-10-1			
Maintenance Practices-----		201	CODE 2	ALL
HYDRAULIC RESERVOIR RETURN FLUID FILTER-----	29-10-2			
Maintenance Practices-----		201	CODE 2	ALL
HYDRAULIC RESERVOIR AIR PRESSURE REGULATOR-ASPIRATOR--	29-10-3			
Maintenance Practices-----		201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTERS-----	29-10-4			
Maintenance Practices-----		201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS-----	29-10-5			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC RESERVOIR RELIEF VALVE-----	29-10-6			
Maintenance Practices-----		201	CODE 1	ALL

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>STN Effectivity</u>
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE----- Maintenance Practices-----	29-10-7	201	CODE 1	ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE----- Maintenance Practices-----	29-10-8	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER----- Maintenance Practices-----	29-10-9	201	CODE 1	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE----- Maintenance Practices-----	29-10-10	201	CODE 2	ALL
ENGINE HYDRAULIC FIRE SHUTOFF VALVE----- Maintenance Practices-----	29-10-11	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMPS----- Maintenance Practices-----	29-10-12	201	CODE 4	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES----- Maintenance Practices-----	29-10-13	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER----- Maintenance Practices-----	29-10-14	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT----- Maintenance Practices-----	29-10-15	201	CODE 1	ALL
DUAL-FILTER AND RELIEF VALVE-- Maintenance Practices-----	29-10-16	201	CODE 1	ALL
DUAL-FILTER ELEMENTS----- Maintenance Practices-----	29-10-17	201	CODE 1	ALL
SYSTEM SELECTOR VALVE----- Maintenance Practices-----	29-10-18	201	CODE 1	ALL

Feb 1/69

Printed in U.S.A.

Contents-29  
 CODE 13  
 Page 2A



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>STN Effectivity</u>
LEFT HYDRAULIC POWER MANIFOLD----- Maintenance Practices-----	29-10-19	201	CODE 1	ALL
RIGHT HYDRAULIC POWER MANIFOLD----- Maintenance Practices-----	29-10-20	201	CODE 1	ALL
HYDRAULIC MANIFOLDS RETURN CHECK VALVE----- Maintenance Practices-----	29-10-21	201	CODE 1	ALL
HYDRAULIC POWER SYSTEM ACCUMULATOR----- Maintenance Practices-----	29-10-22	201	CODE 1	ALL
HYDRAULIC SYSTEM PRIORITY VALVE----- Maintenance Practices-----	29-10-23	201	CODE 1	ALL
AUXILIARY----- Description and Operation--- Troubleshooting-----	29-20-0	1 101	CODE 1 CODE 1	ALL ALL
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE----- Maintenance Practices-----	29-20-1	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP----- Maintenance Practices-----	29-20-2	201	CODE 3	ALL
AUXILIARY HYDRAULIC PUMP RELIEF VALVE----- Maintenance Practices-----	29-20-3	201	CODE 2	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER----- Maintenance Practices-----	29-20-4	201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT----- Maintenance Practices-----	29-20-5	201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE----- Maintenance Practices-----	29-20-6	201	CODE 1	ALL

Jan 15/68

Printed in U.S.A.

Contents-29  
 CODE 13  
 Page 3

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>STN Effectivity</u>
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR----- Maintenance Practices-----	29-20-7	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP ALTERNATE RESERVOIR----- Maintenance Practices-----	29-20-8	201	CODE 1	ALL
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS----- Maintenance Practices-----	29-20-9	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP CONTROL----- Maintenance Practices-----	29-20-10	201	CODE 1	ALL
INDICATING----- Description and Operation--- Troubleshooting----- Maintenance Practices-----	29-30-0	1 101 201	CODE 1 CODE 1 CODE 1	ALL ALL ALL
HYDRAULIC FLUID QUANTITY TRANSMITTER----- Maintenance Practices-----	29-30-1	201	CODE 1	ALL
HYDRAULIC FLUID TEMPERATURE BULB----- Maintenance Practices-----	29-30-2	201	CODE 1	ALL
HYDRAULIC FLUID PRESSURE TRANSMITTER----- Maintenance Practices-----	29-30-3	201	CODE 1	ALL
HYDRAULIC FLUID OVERTEMPERA- TURE INDICATING LIGHT SWITCH-- Maintenance Practices-----	29-30-4	201	CODE 1	ALL
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR LOW PRESSURE INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-6	201	CODE 1	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

UNION DE TRANSPORTS AERIENS

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>UTA Effectivity</u>
ALPHABETICAL INDEX-----	Index 29	1	CODE 2	ALL
GENERAL-----	29-00			
Description and Operation---		1	CODE 3	ALL
Trouble Shooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 3	ALL
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 3	ALL
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 2	ALL
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check-----		601	CODE 1	ALL
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04			
Inspection/Check-----		601	CODE 3	ALL
FLIGHT POWER CONTROL SYSTEMS-----	29-05			
Inspection/Check-----		601	CODE 1	ALL
SPOILER SYSTEM-----	29-06			
Inspection/Check-----		601	CODE 1	F-BNLE, F-BOLF, F-BOLG
		601	CODE 2	F-BOLH

May 1/69

Contents-29  
CODE 14  
Page 1

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>UTA Effectivity</u>
RUDDER STANDBY HYDRAULIC POWER SYSTEM-----	29-07	601	CODE 1	ALL
Inspection/Check-----				
THRUST REVERSER SYSTEM-----	29-08	601	CODE 1	ALL
Inspection/Check-----				
MAIN-----	29-10-0	1	CODE 14.	ALL
Description and Operation---		101	CODE 1	ALL
Trouble Shooting-----		501	CODE 1	ALL
Adjustment/Test-----		601	CODE 2	ALL
Inspection/Check-----				
HYDRAULIC SYSTEM RESERVOIR----	29-10-1	201	CODE 2	ALL
Maintenance Practices-----				
HYDRAULIC RESERVOIR RETURN FLUID FILTER-----	29-10-2	201	CODE 2	ALL
Maintenance Practices-----				
HYDRAULIC RESERVOIR AIR PRESSURE REGULATOR-ASPIRATOR--	29-10-3	201	CODE 1	ALL
Maintenance Practices-----				
REGULATOR-ASPIRATOR AIR FILTERS-----	29-10-4	201	CODE 1	ALL
Maintenance Practices-----				
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS-----	29-10-5	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC RESERVOIR RELIEF VALVE-----	29-10-6	201	CODE 1	ALL
Maintenance Practices-----				

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>UTA Effectivity</u>
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE----- Maintenance Practices-----	29-10-7	201	CODE 1	ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE----- Maintenance Practices-----	29-10-8	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER----- Maintenance Practices-----	29-10-9	201	CODE 1	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE----- Maintenance Practices-----	29-10-10	201	CODE 2	ALL
ENGINE HYDRAULIC FIRE SHUTOFF VALVE----- Maintenance Practices-----	29-10-11	201	CODE 2	ALL
ENGINE-DRIVEN HYDRAULIC PUMPS----- Maintenance Practices-----	20-10-12	201	CODE 5	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES----- Maintenance Practices-----	29-10-13	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER----- Maintenance Practices-----	29-10-14	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT----- Maintenance Practices-----	29-10-15	201	CODE 1	ALL
DUAL-FILTER AND RELIEF VALVE-- Maintenance Practices-----	29-10-16	201	CODE 2	ALL
DUAL-FILTER ELEMENTS----- Maintenance Practices-----	29-10-17	201	CODE 1	ALL
SYSTEM SELECTOR VALVE----- Maintenance Practices-----	29-10-18	201	CODE 2	ALL

Feb 1/69

Printed in U.S.A.

Contents-29  
 CODE 14  
 Page 2A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>UTA Effectivity</u>
LEFT HYDRAULIC POWER MANIFOLD----- Maintenance Practices-----	29-10-19	201	CODE 2	ALL
RIGHT HYDRAULIC POWER MANIFOLD----- Maintenance Practices-----	29-10-20	201	CODE 1	ALL
HYDRAULIC MANIFOLDS RETURN CHECK VALVE----- Maintenance Practices-----	29-10-21	201	CODE 1	ALL
HYDRAULIC POWER SYSTEM ACCUMULATOR----- Maintenance Practices-----	29-10-22	201	CODE 1	ALL
HYDRAULIC SYSTEM PRIORITY VALVE----- Maintenance Practices-----	29-10-23	201	CODE 2	ALL
AUXILIARY----- Description and Operation--- Troubleshooting-----	29-20-0	1 101	CODE 2 CODE 1	ALL ALL
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE----- Maintenance Practices-----	29-20-1	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP----- Maintenance Practices-----	29-20-2	201	CODE 4	ALL
AUXILIARY HYDRAULIC PUMP RELIEF VALVE----- Maintenance Practices-----	29-20-3	201	CODE 2	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER----- Maintenance Practices-----	29-20-4	201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT----- Maintenance Practices-----	29-20-5	201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE----- Maintenance Practices-----	29-20-6	201	CODE 1	ALL

Jan 15/68

Printed in U.S.A.

Contents-29  
 CODE 14  
 Page 3

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>UTA Effectivity</u>
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR----- Maintenance Practices-----	29-20-7	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP ALTERNATE RESERVOIR----- Maintenance Practices-----	29-20-8	201	CODE 1	ALL
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS----- Maintenance Practices-----	29-20-9	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP CONTROL----- Maintenance Practices-----	29-20-10	201	CODE 1	ALL
INDICATING----- Description and Operation--- Troubl shooting----- Maintenance Practices-----	29-30-0	1 101 201	CODE 4 CODE 2 CODE 1	ALL ALL ALL
HYDRAULIC FLUID QUANTITY TRANSMITTER----- Maintenance Practices-----	29-30-1	201	CODE 1	ALL
HYDRAULIC FLUID TEMPERATURE BULB----- Maintenance Practices-----	29-30-2	201	CODE 1	ALL
HYDRAULIC FLUID PRESSURE TRANSMITTER----- Maintenance Practices-----	29-30-3	201	CODE 1	ALL
HYDRAULIC FLUID OVERTEMPERA- TURE INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-4	201	CODE 1	ALL
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR LOW PRES- SURE INDICATING LIGHT SWITCH-- Maintenance Practices-----	29-30-6	201	CODE 1	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

JAPAN AIR LINES CO., LTD.

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>JAL Effectivity</u>
ALPHABETICAL INDEX-----	Index 29	1	CODE 1	ALL
GENERAL-----	29-00			
Description and Operation---		1	CODE 1	JA8038,JA8039, JA8041-JA8043, JA8045-JA8048
		1	CODE 4	JA8031-JA8035, JA8037,JA8040, JA8051-JA8053
		?	CODE 5	JA8036,JA8044, JA8054 and Subs
Trouble Shooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 7	JA8031-JA8037, JA8040,JA8044, JA8051 and Subs
		201	CODE 9	JA8038,JA8039, JA8041-JA8043, JA8045-JA8048
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 2	JA8038,JA8039, JA8041-JA8043, JA8045-JA8048
		601	CODE 3	JA8031-JA8037, JA8040,JA8044, JA8051 and Subs



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>JAL Effectivity</u>
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02	601	CODE 1	JA8038,JA8039, JA8041-JA8043, JA8045-JA8048.
Inspection/Check-----		601	CODE 2	JA8031-JA8037, JA8040,JA8044, JA8051 and Subs
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03	601	CODE 1	ALL
Inspection/Check-----				
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04	601	CODE 2	JA8038,JA8039, JA8041-JA8043, JA8045-JA8048
Inspection/Check-----		601	CODE 3	JA8031-JA8037, JA8040,JA8044, JA8051 and Subs
FLIGHT POWER CONTROL SYSTEMS-----	29-05	601	CODE 1	ALL
Inspection/Check-----				
SPOILER SYSTEM-----	29-06	601	CODE 1	JA8031,JA8034
Inspection/Check-----		601	CODE 2	JA8035 and Subs
RUDDER STANDBY HYDRAULIC POWER SYSTEM-----	29-07	601	CODE 1	ALL
Inspection/Check-----				
THRUST REVERSER SYSTEM-----	29-08	601	CODE 1	JA8031-JA8037, JA8040,JA8044, JA8051 and Subs
Inspection/Check-----				
MAIN-----	29-10-0			
Description and Operation---		1	CODE 20	ALL
Trouble Shooting-----		101	CODE 1	ALL
Adjustment/Test-----		501	CODE 1	ALL
Inspection/Check-----		601	CODE 1	JA8038,JA8039, JA8041-JA8043, JA8045-JA8048
		601	CODE 2	JA8031-JA8037, JA8040,JA8044, JA8051 and Subs

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>JAL Effectivity</u>
HYDRAULIC SYSTEM RESERVOIR----- Maintenance Practices-----	29-10-1	201	CODE 2	ALL
HYDRAULIC RESERVOIR RETURN FLUID FILTER----- Maintenance Practices-----	29-10-2	201	CODE 2	ALL
HYDRAULIC RESERVOIR AIR PRESSURE REGULATOR-ASPIRATOR-- Maintenance Practices-----	29-10-3	201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTERS----- Maintenance Practices-----	29-10-4	201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS----- Maintenance Practices-----	29-10-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR RELIEF VALVE----- Maintenance Practices-----	29-10-6	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE----- Maintenance Practices-----	29-10-7	201	CODE 1	ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE----- Maintenance Practices-----	29-10-8	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER----- Maintenance Practices-----	29-10-9	201	CODE 1	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE----- Maintenance Practices-----	29-10-10	201	CODE 2	ALL
ENGINE HYDRAULIC FIRE SHUTOFF VALVE----- Maintenance Practices-----	29-10-11	201	CODE 1	JA8038, JA8039, JA8041-JA8043, JA8045-JA8048 JA8031-JA8037, JA8040, JA8044, JA8051 and Subs
		201	CODE 2	

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>	<u>JAL Effectivity</u>
ENGINE-DRIVEN HYDRAULIC PUMPS-----	29-10-12		
Maintenance Practices-----		201	CODE 3
			JA8031-JA8037, JA8040,JA8044, JA8051 and Subs
		201	CODE 4
			JA8038,JA8039, JA8041-JA8043, JA8045-JA8048
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES-----	29-10-13		
Maintenance Practices-----		201	CODE 1
			ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER-----	29-10-14		
Maintenance Practices-----		201	CODE 1
			ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT-----	29-10-15		
Maintenance Practices-----		201	CODE 1
			ALL
DUAL-FILTER AND RELIEF VALVE-----	29-10-16		
Maintenance Practices-----		201	CODE 1
			JA8038,JA8039, JA8041-JA8043, JA8045-JA8048
		201	CODE 2
			JA8031-JA8037, JA8040,JA8044, JA8051 and Subs
DUAL-FILTER ELEMENTS-----	29-10-17		
Maintenance Practices-----		201	CODE 1
			ALL
SYSTEM SELECTOR VALVE-----	29-10-18		
Maintenance Practices-----		201	CODE 1
			JA8038,JA8039, JA8041-JA8043, JA8045-JA8048
		201	CODE 2
			JA8031-JA8037, JA8040,JA8044, JA8051 and Subs
LEFT HYDRAULIC POWER MANIFOLD-----	29-10-19		
Maintenance Practices-----		201	CODE 1
			JA8038,JA8039, JA8041-JA8043, JA8045-JA8048
		201	CODE 2
			JA8031-JA8037, JA8040,JA8044, JA8051 and Subs

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>JAL Effectivity</u>
RIGHT HYDRAULIC POWER MANIFOLD-----	29-10-20	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC MANIFOLDS RETURN CHECK VALVE-----	29-10-21	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC POWER SYSTEM ACCUMULATOR-----	29-10-22	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC SYSTEM PRIORITY VALVE-----	29-10-23	201	CODE 1	JA8038,JA8039, JA8041-JA8043, JA8045-JA8048
Maintenance Practices-----		201	CODE 2	JA8031-JA8037, JA8040,JA8044, JA8051 and Subs
AUXILIARY-----	29-20-0	1	CODE 2	ALL
Description and Operation---		101	CODE 1	ALL
Trouble Shooting-----				
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE-----	29-20-1	201	CODE 1	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC PUMP-----	29-20-2	201	CODE 2	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC PUMP RELIEF VALVE-----	29-20-3	201	CODE 2	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC SYSTEM FILTER-----	29-20-4	201	CODE 1	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT-----	29-20-5	201	CODE 1	ALL
Maintenance Practices-----				
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE-----	29-20-6	201	CODE 1	ALL
Maintenance Practices-----				

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>JAL Effectivity</u>
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR----- Maintenance Practices-----	29-20-7	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP ALTERNATE RESERVOIR----- Maintenance Practices-----	29-20-8	201	CODE 1	ALL
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS----- Maintenance Practices-----	29-20-9	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP CONTROL----- Maintenance Practices-----	29-20-10	201	CODE 1	ALL
INDICATING----- Description and Operation--- Troubl. Shooting----- Maintenance Practices-----	29-30-0	1 101 201	CODE 5 CODE 1 CODE 1	ALL ALL ALL
HYDRAULIC FLUID QUANTITY TRANSMITTER----- Maintenance Practices-----	29-30-1	201	CODE 1	ALL
HYDRAULIC FLUID TEMPERATURE BULB----- Maintenance Practices-----	29-30-2	201	CODE 1	ALL
HYDRAULIC FLUID PRESSURE TRANSMITTER----- Maintenance Practices-----	29-30-3	201	CODE 1	ALL
HYDRAULIC FLUID OVERTEMPERA- TURE INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-4	201	CODE 1	ALL
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR LOW PRESSURE INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-6	201	CODE 2	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

UNIVERSAL AIRLINES, INC.

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>UNI Effectivity</u>
ALPHABETICAL INDEX-----	Index 29	1	CODE 1	ALL
GENERAL-----	29-00			
Description and Operation---		1	CODE 9	ALL
Troubleshooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 6	
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 1	ALL
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check-----		601	CODE 1	ALL
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04			
Inspection/Check-----		601	CODE 2	ALL
FLIGHT POWER CONTROL SYSTEMS-----	29-05			
Inspection/Check-----		601	CODE 1	ALL
SPOILER SYSTEM-----	29-06			
Inspection/Check-----		601	CODE 1	ALL
RUDDER STANDBY HYDRAULIC POWER SYSTEM-----	29-07			
Inspection/Check-----		601	CODE 1	ALL

Feb 1/69

Contents-29  
 CODE 16  
 Page 1

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>UNI Effectivity</u>
MAIN-----	29-10-0			
Description and Operation---		1	CODE 13	ALL
Troubleshooting-----		101	CODE 1	ALL
Adjustment/Test-----		501	CODE 1	ALL
Inspection/Check-----		601	CODE 1	ALL
HYDRAULIC SYSTEM RESERVOIR----	29-10-1			
Maintenance Practices-----		201	CODE 2	ALL
HYDRAULIC RESERVOIR RETURN FLUID FILTER-----	29-10-2			
Maintenance Practices-----		201	CODE 2	ALL
HYDRAULIC RESERVOIR AIR PRESSURE REGULATOR-ASPIRATOR--	29-10-3			
Maintenance Practices-----		201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTERS-----	29-10-4			
Maintenance Practices-----		201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS-----	29-10-5			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC RESERVOIR RELIEF VALVE-----	29-10-6			
Maintenance Practices-----		201	CODE 1	ALL

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>UNI Effectivity</u>
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE----- Maintenance Practices-----	29-10-7	201	CODE 1	ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE----- Maintenance Practices-----	29-10-8	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER----- Maintenance Practices-----	29-10-9	201	CODE 1	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE----- Maintenance Practices-----	29-10-10	201	CODE 2	ALL
ENGINE HYDRAULIC FIRE SHUTOFF VALVE----- Maintenance Practices-----	29-10-11	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMPS----- Maintenance Practices-----	29-10-12	201	CODE 4	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES----- Maintenance Practices-----	29-10-13	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER----- Maintenance Practices-----	29-10-14	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT----- Maintenance Practices-----	29-10-15	201	CODE 1	ALL
DUAL-FILTER AND RELIEF VALVE----- Maintenance Practices-----	29-10-16	201	CODE 1	ALL
DUAL-FILTER ELEMENTS----- Maintenance Practices-----	29-10-17	201	CODE 1	ALL
SYSTEM SELECTOR VALVE----- Maintenance Practices-----	29-10-18	201	CODE 1	ALL

Feb 1/69

Printed in U.S.A.

Contents-29  
 CODE 16  
 Page 2A



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>UNI Effectivity</u>
LEFT HYDRAULIC POWER MANIFOLD-----	29-10-19			
Maintenance Practices-----		201	CODE 1	ALL
RIGHT HYDRAULIC POWER MANIFOLD-----	29-10-20			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC MANIFOLDS RETURN CHECK VALVE-----	29-10-21			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC POWER SYSTEM ACCUMULATOR-----	29-10-22			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC SYSTEM PRIORITY VALVE-----	29-10-23			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY-----	29-20-0			
Description and Operation---		1	CODE 1	ALL
Troubleshooting-----		101	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE-----	29-20-1			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP-----	29-20-2			
Maintenance Practices-----		201	CODE 3	ALL
AUXILIARY HYDRAULIC PUMP RELIEF VALVE-----	29-20-3			
Maintenance Practices-----		201	CODE 2	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER-----	29-20-4			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT-----	29-20-5			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE-----	29-20-6			
Maintenance Practices-----		201	CODE 1	ALL

Jan 15/68

Printed in U.S.A.

Contents-29  
 CODE 16  
 Page 3

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>UNI Effectivity</u>
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR----- Maintenance Practices-----	29-20-7	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP ALTERNATE RESERVOIR----- Maintenance Practices-----	29-20-8	201	CODE 1	ALL
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS----- Maintenance Practices-----	29-20-9	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP CONTROL----- Maintenance Practices-----	29-20-10	201	CODE 1	ALL
INDICATING----- Description and Operation--- Troubleshooting----- Maintenance Practices-----	29-30-0	1 101 201	CODE 1 CODE 1 CODE 1	ALL ALL ALL
HYDRAULIC FLUID QUANTITY TRANSMITTER----- Maintenance Practices-----	29-30-1	201	CODE 1	ALL
HYDRAULIC FLUID TEMPERATURE BULB----- Maintenance Practices-----	29-30-2	201	CODE 1	ALL
HYDRAULIC FLUID PRESSURE TRANSMITTER----- Maintenance Practices-----	29-30-3	201	CODE 1	ALL
HYDRAULIC FLUID OVERTEMPERA- TURE INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-4	201	CODE 1	ALL
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR LOW PRES- SURE INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-6	201	CODE 1	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

THE FLYING TIGER LINE, INC.

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>FTL Effectivity</u>
ALPHABETICAL INDEX-----	Index 29	1	CODE 6	ALL
GENERAL-----	29-00			
Description and Operation---		1	CODE 5	ALL
Troubleshooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 11	ALL
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 3	ALL
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 2	ALL
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check-----		601	CODE 1	ALL
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04			
Inspection/Check-----		601	CODE 3	ALL
FLIGHT POWER CONTROL SYSTEMS-----	29-05			
Inspection/Check-----		601	CODE 1	ALL
SPOILER SYSTEM-----	29-06			
Inspection/Check-----		601	CODE 1	N779FT-N782FT
		601	CODE 2	N783FT and Subs
RUDDER STANDBY HYDRAULIC POWER SYSTEM-----	29-07			
Inspection/Check-----		601	CODE 1	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>FLT Effectivity</u>
THRUST REVERSER SYSTEM-----	29-08			
Inspection/Check-----		601	CODE 1	ALL
MAIN-----	29-10-0			
Description and Operation---		1	CODE 21	ALL
Troubleshooting-----		101	CODE 1	ALL
Adjustment/Test-----		501	CODE 1	ALL
Inspection/Check-----		601	CODE 2	ALL
HYDRAULIC SYSTEM RESERVOIR----	29-10-1			
Maintenance Practices-----		201	CODE 2	ALL
HYDRAULIC RESERVOIR RETURN FLUID FILTER-----	29-10-2			
Maintenance Practices-----		201	CODE 2	ALL
HYDRAULIC RESERVOIR AIR PRES- SURE REGULATOR-ASPIRATOR-----	29-10-3			
Maintenance Practices-----		201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTERS-----	29-10-4			
Maintenance Practices-----		201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS-----	29-10-5			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC RESERVOIR RELIEF VALVE-----	29-10-6			
Maintenance Practices-----		201	CODE 1	ALL

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>FIT Effectivity</u>
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE----- Maintenance Practices-----	29-10-7	201	CODE 1	ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE----- Maintenance Practices-----	29-10-8	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER----- Maintenance Practices-----	29-10-9	201	CODE 1	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE----- Maintenance Practices-----	29-10-10	201	CODE 2	ALL
ENGINE HYDRAULIC FIRE SHUTOFF VALVE----- Maintenance Practices-----	29-10-11	201	CODE 2	ALL
ENGINE-DRIVEN HYDRAULIC PUMPS----- Maintenance Practices-----	29-10-12	201	CODE 8	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES----- Maintenance Practices-----	29-10-13	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ----- Maintenance Practices-----	29-10-14	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT----- Maintenance Practices-----	29-10-15	201	CODE 1	ALL
DUAL-FILTER AND RELIEF VALVE----- Maintenance Practices-----	29-10-16	201	CODE 2	ALL
DUAL-FILTER ELEMENTS----- Maintenance Practices-----	29-10-17	201	CODE 1	ALL
SYSTEM SELECTOR VALVE----- Maintenance Practices-----	29-10-18	201	CODE 2	ALL

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>FTL Effectivity</u>
LEFT HYDRAULIC POWER MANIFOLD----- Maintenance Practices-----	29-10-19	201	CODE 2	ALL
RIGHT HYDRAULIC POWER MANIFOLD----- Maintenance Practices-----	29-10-20	201	CODE 1	ALL
HYDRAULIC MANIFOLDS RETURN CHECK VALVE----- Maintenance Practices-----	29-10-21	201	CODE 1	ALL
HYDRAULIC POWER SYSTEM ACCUMULATOR----- Maintenance Practices-----	29-10-22	201	CODE 1	ALL
HYDRAULIC SYSTEM PRIORITY VALVE----- Maintenance Practices-----	29-10-23	201	CODE 2	ALL
MANUAL SHUTOFF VALVE----- Maintenance Practices-----	29-10-26	201	CODE 1	Airplanes With S/B 29-67 incorporated
AUXILIARY----- Description and Operation---	29-20-0	1	CODE 2	ALL
Troubleshooting-----		101	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE----- Maintenance Practices-----	29-20-1	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP----- Maintenance Practices-----	29-20-2	201	CODE 2	ALL
AUXILIARY HYDRAULIC PUMP RELIEF VALVE----- Maintenance Practices-----	29-20-3	201	CODE 2	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER----- Maintenance Practices-----	29-20-4	201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT----- Maintenance Practices-----	29-20-5	201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE----- Maintenance Practices-----	29-20-6	201	CODE 1	ALL

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>FTL Effectivity</u>
AUXILIARY HYDRAULIC SYSTEM				
SURGE DAMPER ACCUMULATOR-----	29-20-7			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP				
ALTERNATE RESERVOIR-----	29-20-8			
Maintenance Practices-----		201	CODE 1	ALL
GROUND SERVICE PRESSURE AND				
SUPPLY CONNECTORS-----	29-20-9			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP				
CONTROL-----	29-20-10			
Maintenance Practices-----		201	CODE 1	ALL
INDICATING-----	29-30-0			
Description and Operation---		1	CODE 1	ALL
Trouble Shooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC FLUID QUANTITY				
TRANSMITTER-----	29-30-1			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC FLUID TEMPERATURE				
BULB-----	29-30-2			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC FLUID PRESSURE				
TRANSMITTER-----	29-30-3			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC FLUID OVERTEMPER-				
ATURE INDICATING LIGHT				
SWITCH-----	29-30-4			
Maintenance Practices-----		201	CODE 1	ALL
EMERGENCY HYDRAULIC RESERVOIR				
LOW LEVEL INDICATING LIGHT				
SWITCH-----	29-30-5			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC RESERVOIR LOW PRES-				
SURE INDICATING LIGHT				
SWITCH-----	29-30-6			
Maintenance Practices-----		201	CODE 1	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

CAPITOL AIRWAYS, INC.

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>CAP Effectivity</u>
ALPHABETICAL INDEX-----	Index 29	1	CODE 6	ALL
GENERAL-----	29-00			
Description and Operation---		1	CODE 2	ALL
Troubleshooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 7	N4907C, N4908C
		201	CODE 11	N4909C and Subs
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 3	ALL
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 2	ALL
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check-----		601	CODE 1	ALL
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04			
Inspection/Check-----		601	CODE 3	ALL
FLIGHT POWER CONTROL SYSTEMS-----	29-05			
Inspection/Check-----		601	CODE 1	ALL
SPOILER SYSTEM-----	29-06			
Inspection/Check-----		601	CODE 1	N4907C, N4908C
		601	CODE 2	N4909C and Subs
RUDDER STANDBY HYDRAULIC POWER SYSTEM-----	29-07			
Inspection/Check-----		601	CODE 1	ALL



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>CAP Effectivity</u>
THRUST REVERSER SYSTEM----- Inspection/Check-----	29-08	601	CODE 1	ALL
MAIN----- Description and Operation--- Troubleshooting----- Adjustment/Test----- Inspection/Check-----	29-10-0	1 101 501 601	CODE 22 CODE 1 CODE 1 CODE 2	ALL ALL ALL ALL
HYDRAULIC SYSTEM RESERVOIR---- Maintenance Practices-----	29-10-1	201	CODE 2	ALL
HYDRARLIC RESERVOIR RETURN FLUID FILTER----- Maintenance Practices-----	29-10-2	201	CODE 2	ALL
HYDRAULIC RESERVOIR AIR PRES- SURE REGULATOR-ASPIRATOR----- Maintenance Practices-----	29-10-3	201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTERS----- Maintenance Practices-----	29-10-4	201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS----- Maintenance Practices-----	29-10-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR RELIEF VALVE----- Maintenance Practices-----	29-10-6	201	CODE 1	ALL

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>CAP Effectivity</u>
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE----- Maintenance Practices-----	29-10-7	201	CODE 1	ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE----- Maintenance Practices-----	29-10-8	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER----- Maintenance Practices-----	29-10-9	201	CODE 1	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE----- Maintenance Practices-----	29-10-10	201	CODE 2	ALL
ENGINE HYDRAULIC FIRE SHUTOFF VALVE----- Maintenance Practices-----	29-10-11	201	CODE 2	ALL
ENGINE-DRIVEN HYDRAULIC PUMPS----- Maintenance Practices-----	29-10-12	201 201	CODE 3 CODE 8	N4907C, N4908C N4909C and Subs
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES----- Maintenance Practices-----	29-10-13	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER----- Maintenance Practices-----	29-10-14	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT----- Maintenance Practices-----	29-10-15	201	CODE 1	ALL
DUAL-FILTER AND RELIEF VALVE----- Maintenance Practices-----	29-10-16	201	CODE 2	ALL
DUAL-FILTER ELEMENTS----- Maintenance Practices-----	29-10-17	201	CODE 1	ALL
SYSTEM SELECTOR VALVE----- Maintenance Practices-----	29-10-18	201	CODE 2	ALL

May 1/69

Contents-29  
 CODE 18  
 Page 2A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>CAP Effectivity</u>
LEFT HYDRAULIC POWER MANIFOLD-----	29-10-19			
Maintenance Practices-----		201	CODE 2	ALL
RIGHT HYDRAULIC POWER MANIFOLD-----	29-10-20			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC MANIFOLDS RETURN CHECK VALVE-----	29-10-21			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC POWER SYSTEM ACCUMULATOR-----	29-10-22			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC SYSTEM PRIORITY VALVE-----	29-10-23			
Maintenance Practices-----		201	CODE 2	ALL
MANUAL SHUTOFF VALVE-----	29-10-26			
Maintenance Practices-----		201	CODE 1	Airplanes with S/B 29-67 incorporated
AUXILIARY-----	29-20-0			
Description and Operation---		1	CODE 2	ALL
Troubleshooting-----		101	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE-----	29-20-1			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP-----	29-20-2			
Maintenance Practices-----		201	CODE 4	ALL
AUXILIARY HYDRAULIC PUMP RELIEF VALVE-----	29-20-3			
Maintenance Practices-----		201	CODE 2	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER-----	29-20-4			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT-----	29-20-5			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE-----	29-20-6			
Maintenance Practices-----		201	CODE 1	ALL

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>CAP Effectivity</u>
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR----- Maintenance Practices-----	29-20-7	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP ALTERNATE RESERVOIR----- Maintenance Practices-----	29-20-8	201	CODE 1	ALL
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS----- Maintenance Practices-----	29-20-9	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP CONTROL----- Maintenance Practices-----	29-20-10	201	CODE 1	ALL
INDICATING----- Description and Operation--- Troubleshooting----- Maintenance Practices-----	29-30-0	1 101 201	CODE 1 CODE 1 CODE 1	ALL ALL ALL
HYDRAULIC FLUID QUANTITY TRANSMITTER----- Maintenance Practices-----	29-30-1	201	CODE 1	ALL
HYDRAULIC FLUID TEMPERATURE BULB----- Maintenance Practices-----	29-30-2	201	CODE 1	ALL
HYDRAULIC FLUID PRESSURE TRANSMITTER----- Maintenance Practices-----	29-30-3	201	CODE 1	ALL
HYDRAULIC FLUID OVERTEMPER- ATURE INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-4	201	CODE 1	ALL
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR LOW PRES- SURE INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-6	201	CODE 1	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

IBERIA, LINEAS AEREAS DE ESPANA, S.A.

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>IBR Effectivity</u>
ALPHABETICAL INDEX-----	Index 29	1	CODE 1	ALL
GENERAL-----	29-00			
Description and Operation---		1	CODE 4	EC-BMX,EC-BMY, EC-BQS,EC-BSD, EC-BSE
Trouble Shooting-----		1	CODE 5	EC-BMZ
Maintenance Practices-----		101	CODE 1	ALL
		201	CODE 7	EC-BMX,EC-BMY, EC-BMZ
		201	CODE 13	EC-BQS,EC-BSD, EC-BSE
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 3	ALL
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 2	ALL
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check-----		601	CODE 1	ALL
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04			
Inspection/Check-----		601	CODE 3	ALL
FLIGHT POWER CONTROL SYSTEMS-----	29-05			
Inspection/Check-----		601	CODE 1	ALL

May 1/70

Contents-29  
 CODE 19  
 Page 1

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>IBR Effectivity</u>
SPOILER SYSTEM----- Inspection/Check-----	29-06	601 601	CODE 1 CODE 2	EC-BMX,EC-BMY EC-BMZ,EC-BQS, EC-BSD,EC-BSE
RUDDER STANDBY HYDRAULIC POWER SYSTEM----- Inspection/Check-----	29-07	601	CODE 1	ALL
THRUST REVERSER SYSTEM----- Inspection/Check-----	29-08	601	CODE 1	ALL
MAIN----- Description and Operation--- Trouble Shooting----- Adjustment/Test----- Inspection/Check-----	29-10-0	1 101 501 601	CODE 23 CODE 1 CODE 1 CODE 2	ALL ALL ALL ALL
HYDRAULIC SYSTEM RESERVOIR---- Maintenance Practices-----	29-10-1	201	CODE 2	ALL
HYDRAULIC RESERVOIR RETURN FLUID FILTER----- Maintenance Practices-----	29-10-2	201	CODE 2	ALL
HYDRAULIC RESERVOIR AIR PRES- SURE REGULATOR-ASPIRATOR----- Maintenance Practices-----	29-10-3	201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTERS----- Maintenance Practices-----	29-10-4	201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS----- Maintenance Practices-----	29-10-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR RELIEF VALVE----- Maintenance Practices-----	29-10-6	201	CODE 1	ALL

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>IBR Effectivity</u>
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE----- Maintenance Practices-----	29-10-7	201	CODE 1	ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE----- Maintenance Practices-----	29-10-8	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER----- Maintenance Practices-----	29-10-9	201	CODE 1	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE----- Maintenance Practices-----	29-10-10	201	CODE 2	ALL
ENGINE HYDRAULIC FIRE SHUTOFF VALVE----- Maintenance Practices-----	29-10-11	201	CODE 2	ALL
ENGINE-DRIVEN HYDRAULIC PUMPS----- Maintenance Practices---	29-10-12	201	CODE 3	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES----- Maintenance Practices-----	29-10-13	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER----- Maintenance Practices-----	29-10-14	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT----- Maintenance Practices-----	29-10-15	201	CODE 1	ALL
DUAL-FILTER AND RELIEF VALVE----- Maintenance Practices-----	29-10-16	201	CODE 2	ALL
DUAL-FILTER ELEMENTS----- Maintenance Practices-----	29-10-17	201	CODE 1	ALL
SYSTEM SELECTOR VALVE----- Maintenance Practices-----	29-10-18	201	CODE 2	ALL

Feb 1/69

Contents-29  
 CODE 19  
 Page 2A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>IBR Effectivity</u>
LEFT HYDRAULIC POWER MANIFOLD----- Maintenance Practices-----	29-10-19	201	CODE 2	ALL
RIGHT HYDRAULIC POWER MANIFOLD----- Maintenance Practices-----	29-10-20	201	CODE 1	ALL
HYDRAULIC MANIFOLDS RETURN CHECK VALVE----- Maintenance Practices-----	29-10-21	201	CODE 1	ALL
HYDRAULIC POWER SYSTEM ACCUMULATOR----- Maintenance Practices-----	29-10-22	201	CODE 1	ALL
HYDRAULIC SYSTEM PRIORITY VALVE----- Maintenance Practices-----	29-10-23	201	CODE 2	ALL
AUXILIARY----- Description and Operatic.---	29-20-0	1	CODE 2	EC-BMX, EC-BMY, EC-BMZ EC-BQS, EC-BSD, EC-BSE ALL
Trouble Shooting-----		1	CODE 6	
		101	CODE 1	
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE----- Maintenance Practices-----	29-20-1	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP----- Maintenance Practices-----	29-20-2	201	CODE 2	EC-BMX, EC-BMY, EC-BMZ EC-BQS, EC-BSD, EC-BSE
		201	CODE 8	
AUXILIARY HYDRAULIC PUMP RELIEF VALVE----- Maintenance Practices-----	29-20-3	201	CODE 2	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER----- Maintenance Practices-----	29-20-4	201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT----- Maintenance Practices-----	29-20-5	201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE----- Maintenance Practices-----	29-20-6	201	CODE 1	ALL

Contents-29  
CODE 19  
Page 3

May 1/70



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>IBR Effectivity</u>
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR----- Maintenance Practices-----	29-20-7	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP ALTERNATE RESERVOIR----- Maintenance Practices-----	29-20-8	201	CODE 1	ALL
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS----- Maintenance Practices-----	29-20-9	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP CONTROL----- Maintenance Practices-----	29-20-10	201	CODE 1	ALL
INDICATING----- Description and Operation---	29-30-0	1	CODE 1	EC-BMX - EC-BMZ, EC-BQS, EC-BSD
Troubleshooting-----		1	CODE 7	EC-BSE
Maintenance Practices-----		101	CODE 1	ALL
		201	CODE 1	ALL
HYDRAULIC FLUID QUANTITY TRANSMITTER----- Maintenance Practices-----	29-30-1	201	CODE 1	ALL
HYDRAULIC FLUID TEMPERATURE BULB----- Maintenance Practices-----	29-30-2	201	CODE 1	ALL
HYDRAULIC FLUID PRESSURE TRANSMITTER----- Maintenance Practices-----	29-30-3	201	CODE 1	ALL
HYDRAULIC FLUID OVERTEMPER- ATURE INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-4	201	CODE 1	ALL
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR LOW PRES- SURE INDICATING LIGHT SWITCH-- Maintenance Practices-----	29-30-6	201	CODE 1	EC-BMX - EC-BMZ, EC-BQS, EC-BSD
		201	CODE 2	EC-BSE

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

AIRLIFT INTERNATIONAL, INC.

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ALF Effectivity</u>
ALPHABETICAL INDEX-----	Index 29	1	CODE 2	ALL
GENERAL-----	29-00			
Description and Operation-----		1	CODE 2	N6161A
Trouble Shooting-----		1	CODE 5	N6162A and Subs
Maintenance Practices-----		101	CODE 1	ALL
Inspection/Check-----		201	CODE 3	N6161A
		201	CODE 14	N6162A and Subs
		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 3	ALL
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 2	ALL
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check-----		601	CODE 1	ALL
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04			
Inspection/Check-----		601	CODE 3	ALL
FLIGHT POWER CONTROL SYSTEMS-----	29-05			
Inspection/Check-----		601	CODE 1	ALL
SPOILER SYSTEM-----	29-06			
Inspection/Check-----		601	CODE 1	N6161A
		601	CODE 2	N6162A and Subs

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ALF Effectivity</u>
RUDDER STANDBY HYDRAULIC POWER SYSTEM-----	29-07	601	CODE 1	ALL
Inspection/Check-----				
THRUST REVERSER SYSTEM-----	29-08	601	CODE 1	ALL
Inspection/Check-----				
MAIN-----	29-10-0			
Description and Operation---		1	CODE 18	ALL
Trouble Shooting-----		101	CODE 1	ALL
Adjustment/Test-----		501	CODE 1	ALL
Inspection/Check-----		601	CODE 2	ALL
HYDRAULIC SYSTEM RESERVOIR----	29-10-1			
Maintenance Practices-----		201	CODE 2	ALL
HYDRAULIC RESERVOIR RETURN FLUID FILTER-----	29-10-2			
Maintenance Practices-----		201	CODE 2	ALL
HYDRAULIC RESERVOIR AIR PRESSURE REGULATOR-ASPIRATOR--	29-10-3			
Maintenance Practices-----		201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTERS-----	29-10-4			
Maintenance Practices-----		201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS-----	29-10-5			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC RESERVOIR RELIEF VALVE-----	29-10-6			
Maintenance Practices-----		201	CODE 1	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ALF Effectivity</u>
HYDRAULIC RESERVOIR AIR BLEED VALVES, AIR INFLATION VALVE, AND PRESSURE GAGE----- Maintenance Practices-----	29-10-7	201	CODE 1	ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE----- Maintenance Practices-----	29-10-8	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER----- Maintenance Practices-----	29-10-9	201	CODE 1	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE----- Maintenance Practices-----	29-10-10	201	CODE 2	ALL
ENGINE HYDRAULIC FIRE SHUTOFF VALVE----- Maintenance Practices-----	29-10-11	201	CODE 2	ALL
ENGINE-DRIVEN HYDRAULIC PUMPS----- Maintenance Practices-----	29-10-12	201	CODE 5	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES----- Maintenance Practices-----	29-10-13	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER----- Maintenance Practices-----	29-10-14	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT----- Maintenance Practices-----	29-10-15	201	CODE 1	ALL
DUAL-FILTER AND RELIEF VALVE-- Maintenance Practices-----	29-10-16	201	CODE 2	ALL
DUAL-FILTER ELEMENTS----- Maintenance Practices-----	29-10-17	201	CODE 1	ALL
SYSTEM SELECTOR VALVE----- Maintenance Practices-----	29-10-18	201	CODE 2	ALL
LEFT HYDRAULIC POWER MANIFOLD----- Maintenance Practices-----	29-10-19	201	CODE 2	ALL

Contents-29  
 CODE 20  
 Page 2A

May 1/69

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ALF Effectivity</u>
RIGHT HYDRAULIC POWER MANIFOLD-----	29-10-20			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC MANIFOLDS RETURN CHECK VALVE-----	29-10-21			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC POWER SYSTEM ACCUMULATOR-----	29-10-22			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC SYSTEM PRIORITY VALVE-----	29-10-23			
Maintenance Practices-----		201	CODE 2	ALL
AUXILIARY-----	29-20-0			
Description and Operation---		1	CODE 2	N6161A
		1	CODE 6	N6162A and Subs
Trouble Shooting-----		101	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE-----	29-20-1			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP-----	29-20-2			
Maintenance Practices-----		201	CODE 4	N6161A
		201	CODE 8	N6162A and Subs
AUXILIARY HYDRAULIC PUMP RELIEF VALVE-----	29-20-3			
Maintenance Practices-----		201	CODE 2	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER-----	29-20-4			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT-----	29-20-5			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE-----	29-20-6			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR-----	29-20-7			
Maintenance Practices-----		201	CODE 1	ALL

May 1/70

Contents-29  
CODE 20  
Page 3

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ALF Effectivity</u>
AUXILIARY HYDRAULIC PUMP ALTERNATE RESERVOIR----- Maintenance Practices-----	29-20-8	201	CODE 1	ALL
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS----- Maintenance Practices-----	29-20-9	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP CONTROL----- Maintenance Practices-----	29-20-10	201	CODE 1	ALL
INDICATING----- Description and Operation---	29-30-0	1	CODE 2	N6161A-N6163A
		1	CODE 8	N6164A and Subs
Trouble Shooting-----		101	CODE 2	ALL
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC FLUID QUANTITY TRANSMITTER----- Maintenance Practices-----	29-30-1	201	CODE 1	ALL
HYDRAULIC FLUID TEMPERATURE BULB----- Maintenance Practices-----	29-30-2	201	CODE 1	ALL
HYDRAULIC FLUID PRESSURE TRANSMITTER----- Maintenance Practices-----	29-30-3	201	CODE 1	ALL
HYDRAULIC FLUID OVERTEMPERA- TURE INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-4	201	CODE 1	ALL
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR LOW PRES- SURE INDICATING LIGHT SWITCH-- Maintenance Practices-----	29-30-6	201 201	CODE 1 CODE 2	N6161A-N6163A N6164A and Subs

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

OVERSEAS NATIONAL AIRWAYS, INC.

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ONA Effectivity</u>
ALPHABETICAL INDEX-----	Index 29	1	CODE 1	ALL
GENERAL-----	29-00			
Description and Operation-----		1	CODE 2	ALL
Trouble Shooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 13	ALL
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 3	ALL
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 2	ALL
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check-----		601	CODE 1	ALL
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04			
Inspection/Check-----		601	CODE 3	ALL
FLIGHT POWER CONTROL SYSTEMS-----	29-05			
Inspection/Check-----		601	CODE 1	ALL
SPOILER SYSTEM-----	29-06			
Inspection/Check-----		601	CODE 1	N863F
		601	CODE 2	N864F and Subs
RUDDER STANDBY HYDRAULIC POWER SYSTEM-----	29-07			
Inspection/Check-----		601	CODE 1	ALL

Contents-29  
CODE 21  
Page 1

May 1/69

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ONA Effectivity</u>
THRUST REVERSER SYSTEM----- Inspection/Check-----	29-08	601	CODE 1	ALL
MAIN----- Description and Operation--- Trouble Shooting----- Adjustment/Test----- Inspection/Check-----	29-10-0	1 101 501 601	CODE 17 CODE 1 CODE 1 CODE 2	ALL ALL ALL ALL
HYDRAULIC SYSTEM RESERVOIR----- Maintenance Practices-----	29-10-1	201	CODE 2	ALL
HYDRAULIC RESERVOIR RETURN FLUID FILTER----- Maintenance Practices-----	29-10-2	201	CODE 2	ALL
HYDRAULIC RESERVOIR AIR PRESSURE REGULATOR-ASPIRATOR-- Maintenance Practices-----	29-10-3	201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTERS----- Maintenance Practices-----	29-10-4	201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS----- Maintenance Practices-----	29-10-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR RELIEF VALVE----- Maintenance Practices-----	29-10-6	201	CODE 1	ALL



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ONA Effectivity</u>
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE----- Maintenance Practices-----	29-10-7	201	CODE 1	ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE----- Maintenance Practices-----	29-10-8	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER----- Maintenance Practices-----	29-10-9	201	CODE 1	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE----- Maintenance Practices-----	29-10-10	201	CODE 2	ALL
ENGINE HYDRAULIC FIRE SHUTOFF VALVE----- Maintenance Practices-----	29-10-11	201	CODE 2	ALL
ENGINE-DRIVEN HYDRAULIC PUMPS----- Maintenance Practices-----	29-10-12	201	CODE 3	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES----- Maintenance Practices-----	29-10-13	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER----- Maintenance Practices-----	29-10-14	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT----- Maintenance Practices-----	29-10-15	201	CODE 1	ALL
DUAL-FILTER AND RELIEF VALVE-- Maintenance Practices-----	29-10-16	201	CODE 2	ALL
DUAL-FILTER ELEMENTS----- Maintenance Practices-----	29-10-17	201	CODE 1	ALL
SYSTEM SELECTOR VALVE----- Maintenance Practices-----	29-10-18	201	CODE 2	ALL

Feb 1/69

Contents-29  
 CODE 21  
 Page 2A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ONA Effectivity</u>
LEFT HYDRAULIC POWER MANIFOLD----- Maintenance Practices-----	29-10-19	201	CODE 2	ALL
RIGHT HYDRAULIC POWER MANIFOLD----- Maintenance Practices-----	29-10-20	201	CODE 1	ALL
HYDRAULIC MANIFOLDS RETURN CHECK VALVE----- Maintenance Practices-----	29-10-21	201	CODE 1	ALL
HYDRAULIC POWER SYSTEM ACCUMULATOR----- Maintenance Practices-----	29-10-22	201	CODE 1	ALL
HYDRAULIC SYSTEM PRIORITY VALVE----- Maintenance Practices-----	29-10-23	201	CODE 2	ALL
AUXILIARY----- Description and Operation--- Trouble Shooting-----	29-20-0	1 101	CODE 6 CODE 1	ALL ALL
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE----- Maintenance Practices-----	29-20-1	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP----- Maintenance Practices-----	29-20-2	201	CODE 7	ALL
AUXILIARY HYDRAULIC PUMP RELIEF VALVE----- Maintenance Practices-----	29-20-3	201	CODE 2	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER----- Maintenance Practices-----	29-20-4	201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT----- Maintenance Practices-----	29-20-5	201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE----- Maintenance Practices-----	29-20-6	201	CODE 1	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ONA Effectivity</u>
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR----- Maintenance Practices-----	29-20-7	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP ALTERNATE RESERVOIR----- Maintenance Practices-----	29-20-8	201	CODE 1	ALL
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS----- Maintenance Practices-----	29-20-9	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP CONTROL----- Maintenance Practices-----	29-20-10	201	CODE 1	ALL
INDICATING----- Description and Operation--- Trouble Shooting----- Maintenance Practices-----	29-30-0	1 101 201	CODE 1 CODE 1 CODE 1	ALL ALL ALL
HYDRAULIC FLUID QUANTITY TRANSMITTER----- Maintenance Practices-----	29-30-1	201	CODE 1	ALL
HYDRAULIC FLUID TEMPERATURE BULB----- Maintenance Practices-----	29-30-2	201	CODE 1	ALL
HYDRAULIC FLUID PRESSURE TRANSMITTER----- Maintenance Practices-----	29-30-3	201	CODE 1	ALL
HYDRAULIC FLUID OVERTEMPER- ATURE INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-4	201	CODE 1	ALL
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR LOW PRES- SURE INDICATING LIGHT SWITCH-- Maintenance Practices-----	29-30-6	201	CODE 1	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

SEABOARD WORLD AIRLINES, INC.

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>SEA Effectivity</u>
ALPHABETICAL INDEX-----	Index 29	1	CODE 2	ALL
GENERAL-----	29-00			
Description and Operation---		1	CODE 2	ALL
Troubleshooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 3	ALL
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 3	ALL
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 2	ALL
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check-----		601	CODE 1	ALL
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04			
Inspection/Check-----		601	CODE 3	ALL
FLIGHT POWER CONTROL SYSTEMS--	29-05			
Inspection/Check-----		601	CODE 1	ALL
SPOILER SYSTEM-----	29-06			
Inspection/Check-----		601	CODE 1	N8631,N8632
		601	CODE 2	N8633 and Subs
RUDDER STANDEY HYDRAULIC POWER SYSTEM-----	29-07			
Inspection/Check-----		601	CODE 1	ALL

Contents-29  
 CODE 22  
 Page 1

May 1/69

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>SEA Effectivity</u>
THRUST REVERSER SYSTEM----- Inspection/Check-----	29-08	601	CODE 1	ALL
MAIN----- Description and Operation--- Troubleshooting----- Adjustment/Test----- Inspection/Check-----	29-10-0	1 101 501 601	CODE 24 CODE 1 CODE 1 CODE 2	ALL ALL ALL ALL
HYDRAULIC SYSTEM RESERVOIR---- Maintenance Practices-----	29-10-1	201	CODE 2	ALL
HYDRAULIC RESERVOIR RETURN FLUID FILTER----- Maintenance Practices-----	29-10-2	201	CODE 2	ALL
HYDRAULIC RESERVOIR AIR PRES- SURE REGULATOR-ASPIRATOR----- Maintenance Practices-----	29-10-3	201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTERS----- Maintenance Practices-----	29-10-4	201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS----- Maintenance Practices-----	29-10-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR RELIEF VALVE----- Maintenance Practices-----	29-10-6	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE----- Maintenance Practices-----	29-10-7	201	CODE 1	ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE----- Maintenance Practices-----	29-10-8	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER----- Maintenance Practices-----	29-10-9	201	CODE 1	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE----- Maintenance Practices-----	29-10-10	201	CODE 2	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>SEA Effectivity</u>
ENGINE HYDRAULIC FIRE SHUTOFF VALVE----- Maintenance Practices-----	29-10-11	201	CODE 2	ALL
ENGINE-DRIVEN HYDRAULIC PUMPS----- Maintenance Practices-----	29-10-12	201	CODE 5	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES----- Maintenance Practices-----	29-10-13	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER----- Maintenance Practices-----	29-10-14	201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT----- Maintenance Practices-----	29-10-15	201	CODE 1	ALL
DUAL-FILTER AND RELIEF VALVE----- Maintenance Practices-----	29-10-16	201	CODE 2	ALL
DUAL-FILTER ELEMENTS----- Maintenance Practices-----	29-10-17	201	CODE 1	ALL
SYSTEM SELECTOR VALVE----- Maintenance Practices-----	29-10-18	201	CODE 2	ALL

Feb 1/69

Contents-29  
 CODE 22  
 Page 2A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>SEA Effectivity</u>
LEFT HYDRAULIC POWER MANIFOLD-----	29-10-19			
Maintenance Practices-----		201	CODE 2	ALL
RIGHT HYDRAULIC POWER MANIFOLD-----	29-10-20			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC MANIFOLDS RETURN CHECK VALVE-----	29-10-21			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC POWER SYSTEM ACCUMULATOR-----	29-10-22			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC SYSTEM PRIORITY VALVE-----	29-10-23			
Maintenance Practices-----		201	CODE 2	ALL
AUXILIARY-----	29-20-0			
Description and Operation---		1	CODE 2	ALL
Troubleshooting-----		101	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE-----	29-20-1			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP-----	29-20-2			
Maintenance Practices-----		201	CODE 4	ALL
AUXILIARY HYDRAULIC PUMP RELIEF VALVE-----	29-20-3			
Maintenance Practices-----		201	CODE 2	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER-----	29-20-4			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT-----	29-20-5			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE-----	29-20-6			
Maintenance Practices-----		201	CODE 1	ALL

Jan 15/68

Contents-29  
 CODE 22  
 Page 3

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXT / SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>SEA Effectivity</u>
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR----- Maintenance Practices-----	29-20-7	201	CODE 1	ALL
AUXILIARY HYDRUALIC PUMP ALTERNATE RESERVOIR----- Maintenance Practices-----	29-20-8	201	CODE 1	ALL
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS----- Maintenance Practices-----	29-20-9	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP CONTROL----- Maintenance Practices-----	29-20-10	201	CODE 1	ALL
INDICATING----- Description and Operation---	29-30-0	1	CODE 2	ALL (without S/B 29-71 incorporated) ALL (with S/B 29-71 incorporated)
		1	CODE 8	
Trouble Shooting----- Maintenance Practices-----		101 201	CODE 2 CODE 1	
HYDRAULIC FLUID QUANTITY TRANSMITTER----- Maintenance Practices-----	29-30-1	201	CODE 1	ALL
HYDRAULIC FLUID TEMPERATURE BULB----- Maintenance Practices-----	29-30-2	201	CODE 1	ALL
HYDRUALIC FLUID PRESSURE TRANSMITTER----- Maintenance Practices-----	29-30-3	201	CODE 1	ALL
HYDRAULIC FLUID OVERTEMPER- ATURE INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-4	201	CODE 1	ALL
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-5	201	CODE 1	ALL



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>SEA Effectivity</u>
HYDRAULIC RESERVOIR LOW PRES- SURE INDICATING LIGHT SWITCH-- Maintenance Practices-----	29-30-6	201	CODE 1	ALL (without S/B 29-71 incorporated)
		201	CODE 2	ALL (with S/B 29-71 incorporated)

May 1/71

Printed in U.S.A.

Contents-29  
 CODE 22  
 Page 5

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

FINNAIR-AERO O/Y

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>FIN Effectivity</u>
ALPHABETICAL INDEX-----	Index 29	1	CODE 6	ALL
GENERAL-----	29-00			
Description and Operation---		1	CODE 2	ALL
Troubleshooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 11	ALL
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 3	ALL
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 2	ALL
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check-----		601	CODE 1	ALL
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04			
Inspection/Check-----		601	CODE 3	ALL
FLIGHT POWER CONTROL SYSTEMS-----	29-05			
Inspection/Check-----		601	CODE 1	ALL
SPOILER SYSTEM-----	29-06			
Inspection/Check-----		601	CODE 2	ALL
RUDDER STANDBY HYDRAULIC POWER SYSTEM-----	29-07			
Inspection/Check-----		601	CODE 1	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>FIN Effectivity</u>
THRUST REVERSER SYSTEM----- Inspection/Check-----	29-08	601	CODE 1	ALL
MAIN----- Description and Operation--- Troubleshooting----- Adjustment/Test----- Inspection/Check-----	29-10-0	1 101 501 601	CODE 19 CODE 1 CODE 1 CODE 2	ALL ALL ALL ALL
HYDRAULIC SYSTEM RESERVOIR---- Maintenance Practices-----	29-10-1	201	CODE 2	ALL
HYDRAULIC RESERVOIR RETURN FLUID FILTER----- Maintenance Practices-----	29-10-2	201	CODE 2	ALL
HYDRAULIC RESERVOIR AIR PRESSURE REGULATOR-ASPIRATOR-- Maintenance Practices-----	29-10-3	201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTERS----- Maintenance Practices-----	29-10-4	201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS----- Maintenance Practices-----	29-10-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR RELIEF VALVE----- Maintenance Practices-----	29-10-6	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE----- Maintenance Practices-----	29-10-7	201	CODE 1	ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE----- Maintenance Practices-----	29-10-8	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER----- Maintenance Practices-----	29-10-9	201	CODE 1	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE----- Maintenance Practices-----	29-10-10	201	CODE 2	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>FIN Effectivity</u>
ENGINE HYDRAULIC FIRE SHUTOFF VALVE-----	29-10-11	201	CODE 2	ALL
Maintenance Practices-----				
ENGINE-DRIVEN HYDRAULIC PUMPS-----	29-10-12	201	CODE 8	ALL
Maintenance Practices-----				
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES-----	29-10-13	201	CODE 1	ALL
Maintenance Practices-----				
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER-----	29-10-14	201	CODE 1	ALL
Maintenance Practices-----				
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT----	29-10-15	201	CODE 1	ALL
Maintenance Practices-----				
DUAL-FILTER AND RELIEF VALVE-----	29-10-16	201	CODE 2	ALL
Maintenance Practices-----				
DUAL-FILTER ELEMENTS-----	29-10-17	201	CODE 1	ALL
Maintenance Practices-----				
SYSTEM SELECTOR VALVE-----	29-10-18	201	CODE 2	ALL
Maintenance Practices-----				
LEFT HYDRAULIC POWER MANIFOLD-----	29-10-19	201	CODE 2	ALL
Maintenance Practices-----				

Feb 1/69

Contents-29  
 CODE 24  
 Page 2A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>FIN Effectivity</u>
RIGHT HYDRAULIC POWER MANIFOLD-----	29-10-20			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC MANIFOLDS RETURN CHECK VALVE-----	29-10-21			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC POWER SYSTEM ACCUMULATOR-----	29-10-22			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC SYSTEM PRIORITY VALVE-----	29-10-23			
Maintenance Practices-----		201	CODE 2	ALL
MANUAL SHUTOFF VALVE-----	29-10-26			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY-----	29-20-0			
Description and Operation---		1	CODE 2	ALL
Troubleshooting-----		101	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE-----	29-20-1			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP-----	29-20-2			
Maintenance Practices-----		201	CODE 4	ALL
AUXILIARY HYDRAULIC PUMP RELIEF VALVE-----	29-20-3			
Maintenance Practices-----		201	CODE 2	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER-----	29-20-4			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT-----	29-20-5			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE-----	29-20-6			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPTER ACCUMULATOR-----	29-20-7			
Maintenance Practices-----		201	CODE 1	ALL

Oct 15/68

Contents-29  
 CODE 24  
 Page 3

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>FIN Effectivity</u>
AUXILIARY HYDRAULIC PUMP ALTERNATE RESERVOIR----- Maintenance Practices-----	29-20-8	201	CODE 1	ALL
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS----- Maintenance Practices-----	29-20-9	201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP CONTROL----- Maintenance Practices-----	29-20-10	201	CODE 1	ALL
INDICATING----- Description and Operation---	29-30-0	1 1	CODE 1 CODE 7	OH-LFR, OH-LFS OH-LFY
Trouble Shooting----- Maintenance Practices-----		101 201	CODE 1 CODE 1	ALL ALL
HYDRAULIC FLUID QUANTITY TRANSMITTER----- Maintenance Practices-----	29-30-1	201	CODE 1	ALL
HYDRAULIC FLUID TEMPERATURE BULB----- Maintenance Practices-----	29-30-2	201	CODE 1	ALL
HYDRAULIC FLUID PRESSURE TRANSMITTER----- Maintenance Practices-----	29-30-3	201	CODE 1	ALL
HYDRAULIC FLUID OVER- TEMPERATURE INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-4	201	CODE 1	ALL
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR LOW PRESSURE INDICATING LIGHT SWITCH----- Maintenance Practices-----	29-30-6	201 201	CODE 1 CODE 2	OH-LFR, OH-LFS OH-LFY

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

LUFTVERKEHRSUNTERNEHMEN ATLANTIS AG

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ATL Effectivity</u>
ALPHABETICAL INDEX-----	Index 29	1	CODE 2	ALL
GENERAL-----	29-00			
Description and Operation---		1	CODE 2	ALL
Trouble Shooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 14	ALL
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 3	ALL
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 2	ALL
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check-----		601	CODE 1	ALL
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04			
Inspection/Check-----		601	CODE 3	ALL
FLIGHT POWER CONTROL SYSTEMS--	29-05			
Inspection/Check-----		601	CODE 1	ALL
SPOILER SYSTEM-----	29-06			
Inspection/Check-----		601	CODE 2	ALL
RUDDER STANDBY HYDRAULIC POWER SYSTEM-----	29-07			
Inspection/Check-----		601	CODE 1	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ATL Effectivity</u>
THRUST REVERSER SYSTEM----- Inspection/Check-----	29-08	601	CODE 1	ALL
MAIN----- Description and Operation--- Trouble Shooting----- Adjustment/Test----- Inspection/Check-----	29-10-0	1 101 501 601	CODE 24 CODE 1 CODE 1 CODE 2	ALL ALL ALL ALL
HYDRAULIC SYSTEM RESERVOIR---- Maintenance Practices-----	29-10-1	201	CODE 2	ALL
HYDRAULIC RESERVOIR RETURN FLUID FILTER----- Maintenance Practices-----	29-10-2	201	CODE 2	ALL
HYDRAULIC RESERVOIR AIR PRES- SURE REGULATOR-ASPIRATOR----- Maintenance Practices-----	29-10-3	201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTERS----- Maintenance Practices-----	29-10-4	201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS----- Maintenance Practices-----	29-10-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR RELIEF VALVE----- Maintenance Practices-----	29-10-6	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE----- Maintenance Practices-----	29-10-7	201	CODE 1	ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE----- Maintenance Practices-----	29-10-8	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER----- Maintenance Practices-----	29-10-9	201	CODE 1	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE----- Maintenance Practices-----	29-10-10	201	CODE 2	ALL



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ATL Effectivity</u>
ENGINE HYDRAULIC FIRE SHUTOFF VALVE-----	29-10-11			
Maintenance Practices-----		201	CODE 2	ALL
ENGINE-DRIVEN HYDRAULIC PUMPS-----	29-10-12			
Maintenance Practices-----		201	CODE 5	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES-----	29-10-13			
Maintenance Practices-----		201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER-----	29-10-14			
Maintenance Practices-----		201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT-----	29-10-15			
Maintenance Practices-----		201	CODE 1	ALL
DUAL-FILTER AND RELIEF VALVE-----	29-10-16			
Maintenance Practices-----		201	CODE 2	ALL
DUAL-FILTER ELEMENTS-----	29-10-17			
Maintenance Practices-----		201	CODE 1	ALL
SYSTEM SELECTOR VALVE-----	29-10-18			
Maintenance Practices-----		201	CODE 2	ALL
LEFT HYDRAULIC POWER MANIFOLD-----	29-10-19			
Maintenance Practices-----		201	CODE 2	ALL
RIGHT HYDRAULIC POWER MANIFOLD-----	29-10-20			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC MANIFOLDS RETURN CHECK VALVE-----	29-10-21			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC POWER SYSTEM ACCUMULATOR-----	29-10-22			
Maintenance Practices-----		201	CODE 1	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ATL Effectivity</u>
HYDRAULIC SYSTEM PRIORITY VALVE-----	29-10-23			
Maintenance Practices-----		201	CODE 2	ALL
AUXILIARY-----	29-20-0			
Description and Operation---		1	CODE 6	ALL
Trouble Shooting-----		101	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE-----	29-20-1			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP-----	29-20-2			
Maintenance Practices-----		201	CODE 7	ALL
AUXILIARY HYDRAULIC PUMP RELIEF VALVE-----	29-20-3			
Maintenance Practices-----		201	CODE 2	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER-----	29-20-4			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT-----	29-20-5			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE-----	29-20-6			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR-----	29-20-7			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP ALTERNATE RESERVOIR-----	29-20-8			
Maintenance Practices-----		201	CODE 1	ALL
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS-----	29-20-9			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP CONTROL-----	29-20-10			
Maintenance Practices-----		201	CODE 1	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ATL Effectivity</u>
INDICATING-----	29-30-0			
Description and Operation---		1	CODE 8	ALL
Trouble Shooting-----		101	CODE 2	ALL
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC FLUID QUANTITY				
TRANSMITTER-----	29-30-1			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC FLUID TEMPERATURE				
BULB-----	29-30-2			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC FLUID PRESSURE				
TRANSMITTER-----	29-30-3			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC FLUID OVERTEMPER- ATURE INDICATING LIGHT				
SWITCH-----	29-30-4			
Maintenance Practices-----		201	CODE 1	ALL
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT				
SWITCH-----	29-30-5			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC RESERVOIR LOW PRES- SURE INDICATING LIGHT SWITCH--	29-30-6			
Maintenance Practices-----		201	CODE 2	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

AMERICAN FLYERS AIRLINE CORPORATION

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>AFA Effectivity</u>
ALPHABETICAL INDEX-----	Index 29	1	CODE 6	ALL
GENERAL-----	29-00			
Description and Operation---		1	CODE 2	ALL
Trouble Shooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 11	ALL
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 3	ALL
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 2	ALL
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check-----		601	CODE 1	ALL
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04			
Inspection/Check-----		601	CODE 3	ALL
FLIGHT POWER CONTROL SYSTEMS--	29-05			
Inspection/Check-----		601	CODE 1	ALL
SPOILER SYSTEM--- -----	29-06			
Inspection/Check-----		601	CODE 2	ALL
RUDDER STANDBY HYDRAULIC POWER SYSTEM-----	29-07			
Inspection/Check-----		601	CODE 1	ALL

Jan 15/70

Contents-29  
 CODE 28  
 Page 1

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>AFA Effectivity</u>
THRUST REVERSER SYSTEM----- Inspection/Check-----	29-08	601	CODE 1	ALL
MAIN----- Description and Operation--- Trouble Shooting----- Adjustment/Test----- Inspection/Check-----	29-10-0	1 101 501 601	CODE 22 CODE 1 CODE 1 CODE 2	ALL ALL ALL ALL
HYDRAULIC SYSTEM RESERVOIR---- Maintenance Practices-----	29-10-1	201	CODE 2	ALL
HYDRAULIC RESERVOIR RETURN FLUID FILTER----- Maintenance Practices-----	29-10-2	201	CODE 2	ALL
HYDRAULIC RESERVOIR AIR PRES- SURE REGULATOR-ASPIRATOR----- Maintenance Practices-----	29-10-3	201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTERS----- Maintenance Practices-----	29-10-4	201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS----- Maintenance Practices-----	29-10-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR RELIEF VALVE----- Maintenance Practices-----	29-10-6	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE----- Maintenance Practices-----	29-10-7	201	CODE 1	ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE----- Maintenance Practices-----	29-10-8	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER----- Maintenance Practices-----	29-10-9	201	CODE 1	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE----- Maintenance Practices-----	29-10-10	201	CODE 2	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>AFA Effectivity</u>
ENGINE HYDRAULIC FIRE SHUTOFF VALVE-----	29-10-11	201	CODE 2	ALL
Maintenance Practices-----				
ENGINE-DRIVEN HYDRAULIC PUMPS-----	29-10-12	201	CODE 8	ALL
Maintenance Practices-----				
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES-----	29-10-13	201	CODE 1	ALL
Maintenance Practices-----				
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER-----	29-10-14	201	CODE 1	ALL
Maintenance Practices-----				
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT-----	29-10-15	201	CODE 1	ALL
Maintenance Practices-----				
DUAL-FILTER AND RELIEF VALVE-----	29-10-16	201	CODE 2	ALL
Maintenance Practices-----				
DUAL-FILTER ELEMENTS-----	29-10-17	201	CODE 1	ALL
Maintenance Practices-----				
SYSTEM SELECTOR VALVE-----	29-10-18	201	CODE 2	ALL
Maintenance Practices-----				
LEFT HYDRAULIC POWER MANIFOLD-----	29-10-19	201	CODE 2	ALL
Maintenance Practices-----				
RIGHT HYDRAULIC POWER MANIFOLD-----	29-10-20	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC MANIFOLDS RETURN CHECK VALVE-----	29-10-21	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC POWER SYSTEM ACCUMULATOR-----	29-10-22	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC SYSTEM PRIORITY VALVE-----	29-10-23	201	CODE 2	ALL
Maintenance Practices-----				

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>AFA Effectivity</u>
AUXILIARY-----	29-20-0			
Description and Operation---		1	CODE 2	ALL
Trouble Shooting-----		101	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE-----	29-20-1			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP-----	29-20-2			
Maintenance Practices-----		201	CODE 4	ALL
AUXILIARY HYDRAULIC PUMP RELIEF VALVE-----	29-20-3			
Maintenance Practices-----		201	CODE 2	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER-----	29-20-4			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT-----	29-20-5			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE-----	29-20-6			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR-----	29-20-7			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP ALTERNATE RESERVOIR-----	29-20-8			
Maintenance Practices-----		201	CODE 1	ALL
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS-----	29-20-9			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP CONTROL-----	29-20-10			
Maintenance Practices-----		201	CODE 1	ALL
INDICATING-----	29-30-0			
Description and Operation---		1	CODE 1	N123AF
		1	CODE 7	N124AF
Trouble Shooting-----		101	CODE 2	ALL
Maintenance Practices-----		201	CODE 1	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>AFA Effectivity</u>
HYDRAULIC FLUID QUANTITY TRANSMITTER-----	29-30-1	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC FLUID TEMPERATURE BULB-----	29-30-2	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC FLUID PRESSURE TRANSMITTER-----	29-30-3	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC FLUID OVERTEMPER- ATURE INDICATING LIGHT SWITCH-----	29-30-4	201	CODE 1	ALL
Maintenance Practices-----				
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT SWITCH-----	29-30-5	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC RESERVOIR LOW PRES- SURE INDICATING LIGHT SWITCH--	29-30-6	201	CODE 1	N123AF
Maintenance Practices-----		201	CODE 2	N124AF

May 1/70

Contents-29  
 CODE 28  
 Page 5



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

AIR AFRIQUE

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>AFQ Effectivity</u>
ALPHABETICAL INDEX-----	Index 29	1	CODE 2	ALL
GENERAL-----	29-00			
Description and Operation---		1	CODE 2	ALL
Trouble Shooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 14	ALL
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 3	ALL
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 2	ALL
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check-----		601	CODE 1	ALL
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04			
Inspection/Check-----		601	CODE 3	ALL
FLIGHT POWER CONTROL SYSTEMS--	29-05			
Inspection/Check-----		601	CODE 1	ALL
SPOILER SYSTEM-----	29-06			
Inspection/Check-----		601	CODE 2	ALL
RUDDER STANDBY HYDRAULIC POWER SYSTEM-----	29-07			
Inspection/Check-----		601	CODE 1	ALL

May 1/70

Contents-29  
 CODE 29  
 Page 1

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>AFQ Effectivity</u>
THRUST REVERSER SYSTEM-----	29-08			
Inspection/Check-----		601	CODE 1	ALL
MAIN-----	29-10-0			
Description and Operation---		1	CODE 24	ALL
Trouble Shooting-----		101	CODE 1	ALL
Adjustment/Test-----		501	CODE 1	ALL
Inspection/Check-----		601	CODE 2	ALL
HYDRAULIC SYSTEM RESERVOIR----	29-10-1			
Maintenance Practices-----		201	CODE 2	ALL
HYDRAULIC RESERVOIR RETURN FLUID FILTER-----	29-10-2			
Maintenance Practices-----		201	CODE 2	ALL
HYDRAULIC RESERVOIR AIR PRES- SURE REGULATOR-ASPIRATOR-----	29-10-3			
Maintenance Practices-----		201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTERS-----	29-10-4			
Maintenance Practices-----		201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS-----	29-10-5			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC RESERVOIR RELIEF VALVE-----	29-10-6			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE-----	29-10-7			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE-----	29-10-8			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER-----	29-10-9			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE-----	29-10-10			
Maintenance Practices-----		201	CODE 2	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>AFQ Effectivity</u>
ENGINE HYDRAULIC FIRE SHUTOFF VALVE-----	29-10-11			
Maintenance Practices-----		201	CODE 2	ALL
ENGINE-DRIVEN HYDRAULIC PUMPS-----	29-10-12			
Maintenance Practices-----		201	CODE 5	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES-----	29-10-13			
Maintenance Practices-----		201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER-----	29-10-14			
Maintenance Practices-----		201	CODE 1	ALL
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT-----	29-10-15			
Maintenance Practices-----		201	CODE 1	ALL
DUAL-FILTER AND RELIEF VALVE-----	29-10-16			
Maintenance Practices-----		201	CODE 2	ALL
DUAL-FILTER ELEMENTS-----	29-10-17			
Maintenance Practices-----		201	CODE 1	ALL
SYSTEM SELECTOR VALVE-----	29-10-18			
Maintenance Practices-----		201	CODE 2	ALL
LEFT HYDRAULIC POWER MANIFOLD-----	29-10-19			
Maintenance Practices-----		201	CODE 2	ALL
RIGHT HYDRAULIC POWER MANIFOLD-----	29-10-20			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC MANIFOLDS RETURN CHECK VALVE-----	29-10-21			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC POWER SYSTEM ACCUMULATOR-----	29-10-22			
Maintenance Practices-----		201	CODE 1	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>AFQ Effectivity</u>
HYDRAULIC SYSTEM PRIORITY VALVE-----	29-10-23			
Maintenance Practices-----		201	CODE 2	ALL
AUXILIARY-----	29-20-0			
Description and Operation---		1	CODE 6	ALL
Trouble Shooting-----		101	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE-----	29-20-1			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP-----	29-20-2			
Maintenance Practices-----		201	CODE 7	ALL
AUXILIARY HYDRAULIC PUMP RELIEF VALVE-----	29-20-3			
Maintenance Practices-----		201	CODE 2	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER-----	29-20-4			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT-----	29-20-5			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE-----	29-20-6			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR-----	29-20-7			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP ALTERNATE RESERVOIR-----	29-20-8			
Maintenance Practices-----		201	CODE 1	ALL
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS-----	29-20-9			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP CONTROL-----	29-20-10			
Maintenance Practices-----		201	CODE 1	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>AFQ Effectivity</u>
INDICATING-----	29-30-0			
Description and Operation---		1	CODE 8	ALL
Trouble Shooting-----		101	CODE 2	ALL
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC FLUID QUANTITY				
TRANSMITTER-----	29-30-1			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC FLUID TEMPERATURE				
BULB-----	29-30-2			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC FLUID PRESSURE				
TRANSMITTER-----	29-30-3			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC FLUID OVERTEMPER- ATURE INDICATING LIGHT				
SWITCH-----	29-30-4			
Maintenance Practices-----		201	CODE 1	ALL
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT				
SWITCH-----	29-30-5			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC RESERVOIR LOW PRES- SURE INDICATING LIGHT SWITCH--	29-30-6			
Maintenance Practices-----		201	CODE 2	ALL

May 1/70

Contents-29  
 CODE 29  
 Page 5

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Chapter 29

TABLE OF CONTENTS

AIR CONGO

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ACO Effectivity</u>
ALPHABETICAL INDEX-----	Index 29	1	CODE 2	ALL
GENERAL-----	29-00			
Description and Operation---		1	CODE 2	ALL
Trouble Shooting-----		101	CODE 1	ALL
Maintenance Practices-----		201	CODE 1 <sup>4</sup>	ALL
Inspection/Check-----		601	CODE 2	ALL
MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY)-----	29-01			
Inspection/Check-----		601	CODE 3	ALL
MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE)-----	29-02			
Inspection/Check-----		601	CODE 2	ALL
AUXILIARY HYDRAULIC POWER SYSTEM-----	29-03			
Inspection/Check-----		601	CODE 1	ALL
UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS-----	29-04			
Inspection/Check-----		601	CODE 3	ALL
FLIGHT POWER CONTROL SYSTEMS--	29-05			
Inspection/Check-----		601	CODE 1	ALL
SPOILER SYSTEM-----	29-06			
Inspection/Check-----		601	CODE 2	ALL
RUDDER STANDBY HYDRAULIC POWER SYSTEM-----	29-07			
Inspection/Check-----		601	CODE 1	ALL

May 1/70

Printed in U.S.A.

Contents-29  
 CODE 30  
 Page 1

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ACO Effectivity</u>
THRUST REVERSER SYSTEM----- Inspection/Check-----	29-08	601	CODE 1	ALL
MAIN----- Description and Operation--- Trouble Shooting----- Adjustment/Test----- Inspection/Check-----	29-10-0	1 101 501 601	CODE 24 CODE 1 CODE 1 CODE 2	ALL ALL ALL ALL
HYDRAULIC SYSTEM RESERVOIR---- Maintenance Practices-----	29-10-1	201	CODE 2	ALL
HYDRAULIC RESERVOIR RETURN FLUID FILTER----- Maintenance Practices-----	29-10-2	201	CODE 2	ALL
HYDRAULIC RESERVOIR AIR PRES- SURE REGULATOR-ASPIRATOR----- Maintenance Practices-----	29-10-3	201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTERS----- Maintenance Practices-----	29-10-4	201	CODE 1	ALL
REGULATOR-ASPIRATOR AIR FILTER ELEMENTS----- Maintenance Practices-----	29-10-5	201	CODE 1	ALL
HYDRAULIC RESERVOIR RELIEF VALVE----- Maintenance Practices-----	29-10-6	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND PRESSURE GAGE----- Maintenance Practices-----	29-10-7	201	CODE 1	ALL
HYDRAULIC RESERVOIR VACUUM BREAKER CHECK VALVE----- Maintenance Practices-----	29-10-8	201	CODE 1	ALL
HYDRAULIC RESERVOIR AIR CHAMBER----- Maintenance Practices-----	29-10-9	201	CODE 1	ALL
HYDRAULIC RESERVOIR PORT B RETURN CHECK VALVE----- Maintenance Practices-----	29-10-10	201	CODE 2	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ACO Effectivity</u>
ENGINE HYDRAULIC FIRE SHUTOFF VALVE-----	29-10-11	201	CODE 2	ALL
Maintenance Practices-----				
ENGINE-DRIVEN HYDRAULIC PUMPS-----	29-10-12	201	CODE 5	ALL
Maintenance Practices-----				
ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES-----	29-10-13	201	CODE 1	ALL
Maintenance Practices-----				
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER-----	29-10-14	201	CODE 1	ALL
Maintenance Practices-----				
ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT-----	29-10-15	201	CODE 1	ALL
Maintenance Practices-----				
DUAL-FILTER AND RELIEF VALVE-----	29-10-16	201	CODE 2	ALL
Maintenance Practices-----				
DUAL-FILTER ELEMENTS-----	29-10-17	201	CODE 1	ALL
Maintenance Practices-----				
SYSTEM SELECTOR VALVE-----	29-10-18	201	CODE 2	ALL
Maintenance Practices-----				
LEFT HYDRAULIC POWER MANIFOLD-----	29-10-19	201	CODE 2	ALL
Maintenance Practices-----				
RIGHT HYDRAULIC POWER MANIFOLD-----	29-10-20	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC MANIFOLDS RETURN CHECK VALVE-----	29-10-21	201	CODE 1	ALL
Maintenance Practices-----				
HYDRAULIC POWER SYSTEM ACCUMULATOR-----	29-10-22	201	CODE 1	ALL
Maintenance Practices-----				



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ACO Effectivity</u>
HYDRAULIC SYSTEM PRIORITY VALVE-----	29-10-23			
Maintenance Practices-----		201	CODE 2	ALL
AUXILIARY-----	29-20-0			
Description and Operation---		1	CODE 6	ALL
Trouble Shooting-----		101	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE-----	29-20-1			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP-----	29-20-2			
Maintenance Practices-----		201	CODE 7	ALL
AUXILIARY HYDRAULIC PUMP RELIEF VALVE-----	29-20-3			
Maintenance Practices-----		201	CODE 2	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER-----	29-20-4			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT-----	29-20-5			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM CHECK VALVE-----	29-20-6			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR-----	29-20-7			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP ALTERNATE RESERVOIR-----	29-20-8			
Maintenance Practices-----		201	CODE 1	ALL
GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS-----	29-20-9			
Maintenance Practices-----		201	CODE 1	ALL
AUXILIARY HYDRAULIC PUMP CONTROL-----	29-20-10			
Maintenance Practices-----		201	CODE 1	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page No.</u>		<u>ACC Effectivity</u>
INDICATING-----	29-30-0			
Description and Operation---		1	CODE 8	ALL
Trouble Shooting-----		101	CODE 2	ALL
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC FLUID QUANTITY				
TRANSMITTER-----	29-30-1			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC FLUID TEMPERATURE				
BULB-----	29-30-2			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC FLUID PRESSURE				
TRANSMITTER-----	29-30-3			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC FLUID OVERTEMPER- ATURE INDICATING LIGHT				
SWITCH-----	29-30-4			
Maintenance Practices-----		201	CODE 1	ALL
EMERGENCY HYDRAULIC RESERVOIR LOW LEVEL INDICATING LIGHT				
SWITCH-----	29-30-5			
Maintenance Practices-----		201	CODE 1	ALL
HYDRAULIC RESERVOIR LOW PRES- SURE INDICATING LIGHT SWITCH--				
Maintenance Practices-----	29-30-6			
		201	CODE 2	ALL

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Chapter 29

AIRPLANE IDENTIFICATION

SWISS AIR TRANSPORT COMPANY, LTD.

SCANDINAVIAN AIRLINES SYSTEM

Manufacturing Series	Factory Serial Number	SWA/SAS Effectivity Code	Registration Letters	Customer
DC-8-62	45905	55	SE-DBF	SAS
DC-8-62	45906	56	OY-KTD	SAS
DC-8-62	45822	57	LN-MOO	SAS
DC-8-62	45823	58	SE-DBE	SAS
DC-8-62	45921	59	SE-DBG	SAS
DC-8-62	45919	60	HB-IDE	SWA
DC-8-62	45920	61	HB-IDF	SWA
DC-8-62	45925	62	HB-IDG	SWA
DC-8-62F	45922	63	OY-KTE	SAS
DC-8-62F	45984	64	HB-IDH	SWA
DC-8-62	46077	65	HB-IDI	SWA
DC-8-62F	46078	66	HB-IDK	SWA
DC-8-62	46134	67	HB-IDL	SWA
DC-8-62	46102	68	LN-MOG	SAS
DC-8-62CF	46129	69	SE-DBI	SAS
DC-8-63	45923	70	LN-MOU	SAS

Nov 1/69

Ident-29  
CODE 3  
Page 1

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Manufacturing Series	Factory Serial Number	SWA/SAS Effectivity Code	Registration Letters	Customer
DC-8-63	45924	71	SE-DBH	SAS
DC-8-63	46041	72	OY-KTF	SAS
DC-8-63	46054	73	LN-MOY	SAS
DC-8-63	46136	74	SE-DBK	SAS
DC-8-63	46163	75	SE-DBL	SAS
DC-8-63PF	46074	76		SWA
DC-8-62	46131	77	LN-MOW	SAS
DC-8-62AF	46150	78	LN-MOC	SAS

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Chapter 29

AIRPLANE IDENTIFICATION

DELTA AIR LINES, INC.

Manufacturing Series	Factory Serial Number	Fleet Number	Registration Number
DC-8-61	45907	861	N822E
DC-8-61	45914	862	N823E
DC-8-61	45915	863	N824E
DC-8-61	45944	864	N825E
DC-8-61	45979	865	N826E
DC-8-61	46014	866	N1300L
DC-8-61	46018	867	N1301L
DC-8-61	46029	868	N1302L
DC-8-61	46030	869	N1303L
DC-8-61	46048	870	N1304L
DC-8-61	46072	871	N1305L
DC-8-61	46055	872	N1306L
DC-8-61	46056	873	N1307L

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Chapter 29

AIRPLANE IDENTIFICATION

AIR CANADA

Manufac- turing Series	Factory Serial Number	Fleet Number	Regis- tration Number	Manufac- turing Series	Factory Serial Number	Fleet Number	Regis- tration Number
DC-8-40	45442	801	CF-TJA	DC-8-50	45962	822	CF-TIJ
DC-8-40	45443	802	CF-TJB	DC-8-61	45890	860	CF-TJT
DC-8-40	45444	803	CF-TJC	DC-8-61	45891	861	CF-TJU
DC-8-40	45445	804	CF-TJD	DC-8-61	45892	862	CF-TJV
DC-8-40	45565	805	CF-TJE	DC-8-61	45893	863	CF-TJW
DC-8-40	45566	806	CF-TJF	DC-8-61	45963	864	CF-TJX
DC-8-40	45609	807	CF-TJG	DC-8-61	45964	865	CF-TJY
DC-8-40	45610	808	CF-TJH	DC-8-61	45980	866	CF-TJZ
DC-8-40	45611	809	CF-TJI	DC-8-63	46033	867	CF-TIK
DC-8-40	45612	810	CF-TJJ	DC-8-63	46034	868	CF-TIL
DC-8-40	45638	811	CF-TJK	DC-8-63	46035	869	CF-TIM
DC-8-50F	45640	812	CF-TJL	DC-8-63	46036	870	CF-TIN
DC-8-50F	45653	813	CF-TJM	DC-8-63	46076	871	CF-TIO
DC-8-50F	45654	814	CF-TJN	DC-8-63	46100	872	CF-TIP
DC-8-50F	45655	815	CF-TJO	DC-8-63	46123	873	CF-TIQ
DC-8-50F	45679	816	CF-TJP	DC-8-63	46124	874	CF-TIR
DC-8-50F	45686	817	CF-TJQ	DC-8-63	46125	875	CF-TIS
DC-8-50F	45860	818	CF-TJR	DC-8-63	46113	876	CF-TIT
DC-8-50F	45861	819	CF-TJS	DC-8-63	46126	877	CF-TIU
DC-8-50	45933	820	CF-TIH	DC-8-63	46114	878	CF-TIV
DC-8-50	45934	821	CF-TII	DC-8-63	46115	879	CF-TIW

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Chapter 29

ALPHABETICAL INDEX

<u>Subject</u>	<u>Chapter Section Subject</u>
Accumulator, Auxiliary Hydraulic System Surge Damper	
Description and Operation.....	29-20-0
Servicing.....	29-20-7
Maintenance Practices.....	29-20-7
Accumulator, Hydraulic Power System	
Description and Operation.....	29-10-0
Servicing.....	29-10-22
Maintenance Practices.....	29-10-22
Aspirator, Hydraulic Reservoir Pressure Regulator	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-3
Bulb, Hydraulic Fluid Temperature	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-2
Control, Auxiliary Hydraulic Pump	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-10
Connectors, Ground Service Pressure and Supply	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-9
Chamber, Hydraulic Reservoir Air	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-9
Filter, Auxiliary Hydraulic System	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-4
Filter Element, Auxiliary Hydraulic System	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-5

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>
Filter, Engine-Driven Hydraulic Pump Case Drain	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-14
Filter Element, Engine-Driven Hydraulic Pump Case Drain	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-15
Filter, Hydraulic Reservoir Return Fluid	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-2
Filters, Regulator-Aspirator Air	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-4
Filter Elements, Regulator-Aspirator Air	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-5
Indicator, Hydraulic Fluid Quantity	
Description and Operation.....	29-30-0
Indicator, Hydraulic Fluid Temperature	
Description and Operation.....	29-30-0
Indicator, Hydraulic Fluid Pressure	
Description and Operation.....	29-30-0
Lever, Hydraulic System Selector Control	
Description and Operation.....	29-10-0
Adjustment/Test.....	29-10-0
Manifold, Left Hydraulic Power	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-19
Manifold, Right Hydraulic Power	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-20
Pump, Auxiliary Hydraulic	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-2



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter</u> <u>Section</u> <u>Subject</u>
Pump, Engine-Driven Hydraulic	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-12
Reservoir, Auxiliary Hydraulic Pump Alternate	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-8
Reservoir, Hydraulic System	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-1
Switch, Emergency Hydraulic Reservoir Low Level Indicating Light	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-5
Switch, Hydraulic Fluid Overtemperature Indicating Light	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-4
Switch, Hydraulic Reservoir Low Pressure Indicating Light	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-6
Transmitter, Hydraulic Fluid Pressure	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-3
Transmitter, Hydraulic Fluid Quantity	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-1
Valve, Auxiliary Hydraulic Pump Relief	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-3
Valve, Auxiliary Hydraulic System Check	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-6
Valve, Auxiliary Pump Supply Selector	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-1
Valve, Dual-Filter and Relief	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-16

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	Chapter Section <u>Subject</u>
Valve, Engine-Driven Hydraulic Pump Check	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-17
Valve, Engine Hydraulic Fire Shutoff	
Description and Operation.....	29-10-10
Maintenance Practices.....	29-10-11
Valve, Hydraulic Manifolds Return Check	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-21
Valve, Hydraulic Reservoir Air Bleed	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-7
Valve, Hydraulic Reservoir Port B Return Check	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-10
Valve, Hydraulic Reservoir Relief	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-6
Valve, Hydraulic Reservoir Vacuum Breaker	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-8
Valve, System Selector	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-18
Valve, Hydraulic System Priority	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-23

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Chapter 29

ALPHABETICAL INDEX

<u>Subject</u>	<u>Chapter Section Subject</u>
Accumulator, Auxiliary Hydraulic System Surge Damper	
Description and Operation.....	29-20-0
Servicing.....	29-20-7
Maintenance Practices.....	29-20-7
Accumulator, Hydraulic Power System	
Description and Operation.....	29-10-0
Servicing.....	29-10-22
Maintenance Practices.....	29-10-22
Aspirator, Hydraulic Reservoir Pressure Regulator	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-3
Bulb, Hydraulic Fluid Temperature	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-2
Control, Auxiliary Hydraulic Pump	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-10
Connectors, Ground Service Pressure and Supply	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-9
Chamber, Hydraulic Reservoir Air	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-9
Filter, Auxiliary Hydraulic System	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-4
Filter Element, Auxiliary Hydraulic System	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-5

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>
Filter, Engine-Driven Hydraulic Pump Case Drain	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-14
Filter Element, Engine-Driven Hydraulic Pump Case Drain	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-15
Filter, Hydraulic Reservoir Return Fluid	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-2
Filters, Regulator-Aspirator Air	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-4
Filter Elements, Regulator-Aspirator Air	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-5
Indicator, Hydraulic Fluid Quantity	
Description and Operation.....	29-30-0
Indicator, Hydraulic Fluid Temperature	
Description and Operation.....	29-30-0
Indicator, Hydraulic Fluid Pressure	
Description and Operation.....	29-30-0
Lever, Hydraulic System Selector Control	
Description and Operation.....	29-10-0
Adjustment/Test.....	29-10-0
Manifold, Left Hydraulic Power	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-19
Manifold, Right Hydraulic Power	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-20
Pump, Auxiliary Hydraulic	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-2

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter</u> <u>Section</u> <u>Subject</u>
Pump, Engine-Driven Hydraulic	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-12
Reservoir, Auxiliary Hydraulic Pump Alternate	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-8
Reservoir, Hydraulic System	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-1
Switch, Emergency Hydraulic Reservoir Low Level Indicating Light	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-5
Switch, Engine-Driven Hydraulic Pump Low Pressure	
Description and Operation.....	29-30-0
Switch, Hydraulic Fluid Overtemperature Indicating Light	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-4
Switch, Hydraulic Reservoir Low Pressure Indicating Light	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-6
Transmitter, Hydraulic Fluid Pressure	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-3
Transmitter, Hydraulic Fluid Quantity	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-1
Valve, Auxiliary Hydraulic Pump Relief	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-3
Valve, Auxiliary Hydraulic System Check	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-6
Valve, Auxiliary Pump Supply Selector	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-1

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	Chapter Section <u>Subject</u>
Valve, Dual-Filter and Relief	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-16
Valve, Engine-Driven Hydraulic Pump Check	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-17
Valve, Engine Hydraulic Fire Shutoff	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-11
Valve, Hydraulic Manifolds Return Check	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-21
Valve, Hydraulic Reservoir Air Bleed	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-7
Valve, Hydraulic Reservoir Port B Return Check	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-10
Valve, Hydraulic Reservoir Relief	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-6
Valve, Hydraulic Reservoir Vacuum Breaker	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-8
Valve, System Selector	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-18
Valve, Hydraulic System Priority	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-23

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Chapter 29

ALPHABETICAL INDEX

<u>Subject</u>	<u>Chapter Section Subject</u>
Accumulator, Auxiliary Hydraulic System Surge Damper	
Description and Operation.....	29-20-0
Servicing.....	29-20-7
Maintenance Practices.....	29-20-7
Accumulator, Hydraulic Power System	
Description and Operation.....	29-10-0
Servicing.....	29-10-22
Maintenance Practices.....	29-10-22
Aspirator, Hydraulic Reservoir Pressure Regulator	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-3
Bulb, Hydraulic Fluid Temperature	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-2
Control, Auxiliary Hydraulic Pump	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-10
Connectors, Ground Service Pressure and Supply	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-9
Chamber, Hydraulic Reservoir Air	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-9
Filter, Auxiliary Hydraulic System	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-4
Filter Element, Auxiliary Hydraulic System	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-5

Jun 15/67

Printed in U.S.A.

29-Index  
CODE 3  
Page 1

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	Chapter Section <u>Subject</u>
Filter, Engine-Driven Hydraulic Pump Case Drain	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-14
Filter Element, Engine-Driven Hydraulic Pump Case Drain	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-15
Filter, Hydraulic Reservoir Return Fluid	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-2
Filters, Regulator-Aspirator Air	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-4
Filter Elements, Regulator-Aspirator Air	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-5
Filter, Two-Stage Return	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-24
Filter Elements, Two-Stage Return	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-25
Indicator, Hydraulic Fluid Quantity	
Description and Operation.....	29-30-0
Indicator, Hydraulic Fluid Temperature	
Description and Operation.....	29-30-0
Indicator, Hydraulic Fluid Pressure	
Description and Operation.....	29-30-0
Lever, Hydraulic System Selector Control	
Description and Operation.....	29-10-0
Adjustment/Test.....	29-10-0
Manifold, Left Hydraulic Power	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-19



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>
Manifold, Right Hydraulic Power	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-20
Pump, Auxiliary Hydraulic	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-2
Pump, Engine-Driven Hydraulic	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-12
Reservoir, Auxiliary Hydraulic Pump Alternate	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-8
Reservoir, Hydraulic System	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-1
Switch, Emergency Hydraulic Reservoir Low Level Indicating Light	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-5
Switch, Hydraulic Fluid Overtemperature Indicating Light	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-4
Transmitter, Hydraulic Fluid Pressure	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-3
Transmitter, Hydraulic Fluid Quantity	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-1
Valve, Auxiliary Hydraulic Pump Relief	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-3
Valve, Auxiliary Hydraulic System Check	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-6

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter</u> <u>Section</u> <u>Subject</u>
Valve, Auxiliary Pump Supply Selector	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-1
Valve, Dual-Filter and Relief	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-16
Valve, Engine-Driven Hydraulic Pump Check	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-17
Valve, Engine Hydraulic Fire Shutoff	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-11
Valve, Hydraulic Manifolds Return Check	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-21
Valve, Hydraulic Reservoir Air Bleed	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-7
Valve, Hydraulic Reservoir Port B Return Check	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-10
Valve, Hydraulic Reservoir Relief	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-6
Valve, Hydraulic Reservoir Vacuum Breaker	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-8
Valve, System Selector	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-18
Valve, Hydraulic System Priority	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-23

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Chapter 29

ALPHABETICAL INDEX

<u>Subject</u>	<u>Chapter Section Subject</u>
Accumulator, Auxiliary Hydraulic System Surge Damper	
Description and Operation.....	29-20-0
Servicing.....	29-20-7
Maintenance Practices.....	29-20-7
Accumulator, Hydraulic Power System	
Description and Operation.....	29-10-0
Servicing.....	29-10-22
Maintenance Practices.....	29-10-22
Aspirator, Hydraulic Reservoir Pressure Regulator	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-3
Bulb, Hydraulic Fluid Temperature	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-2
Control, Auxiliary Hydraulic Pump	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-10
Connectors, Ground Service Pressure and Supply	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-9
Chamber, Hydraulic Reservoir Air	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-9
Filter, Auxiliary Hydraulic System	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-4
Filter Element, Auxiliary Hydraulic System	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-5

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	Chapter Section <u>Subject</u>
Filter, Engine-Driven Hydraulic Pump Case Drain	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-14
Filter Element, Engine-Driven Hydraulic Pump Case Drain	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-15
Filter, Hydraulic Reservoir Return Fluid	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-2
Filters, Regulator-Aspirator Air	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-4
Filter Elements, Regulator-Aspirator Air	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-5
Indicator, Hydraulic Fluid Quantity	
Description and Operation.....	29-30-0
Indicator, Hydraulic Fluid Temperature	
Description and Operation.....	29-30-0
Indicator, Hydraulic Fluid Pressure	
Description and Operation.....	29-30-0
Lever, Hydraulic System Selector Control	
Description and Operation.....	29-10-0
Adjustment/Test.....	29-10-0
Manifold, Left Hydraulic Power	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-19
Manifold, Right Hydraulic Power	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-20
Pump, Auxiliary Hydraulic	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-2

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter</u> <u>Section</u> <u>Subject</u>
Pump, Engine-Driven Hydraulic	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-12
Reservoir, Auxiliary Hydraulic Pump Alternate	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-8
Reservoir, Hydraulic System	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-1
Switch, Emergency Hydraulic Reservoir Low Level Indicating Light	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-5
Switch, Engine-Driven Hydraulic Pump Low Pressure	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-10-12
Switch, Hydraulic Fluid Overtemperature Indicating Light	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-4
Switch, Hydraulic Reservoir Low Pressure Indicating Light	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-6
Transmitter, Hydraulic Fluid Pressure	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-3
Transmitter, Hydraulic Fluid Quantity	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-1
Valve, Auxiliary Hydraulic Pump Relief	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-3
Valve, Auxiliary Hydraulic System Check	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-6
Valve, Auxiliary Pump Supply Selector	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-1

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

<u>Subject</u>	Chapter Section <u>Subject</u>
Valve, Dual-Filter and Relief	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-16
Valve, Engine-Driven Hydraulic Pump Check	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-17
Valve, Engine Hydraulic Fire Shutoff	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-11
Valve, Hydraulic Manifolds Return Check	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-21
Valve, Hydraulic Reservoir Air Bleed	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-7
Valve, Hydraulic Reservoir Port B Return Check	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-10
Valve, Hydraulic Reservoir Relief	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-6
Valve, Hydraulic Reservoir Vacuum Breaker	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-8
Valve, Manual Shutoff	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-26
Valve, System Selector	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-18
Valve, Hydraulic System Priority	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-23

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Chapter 29

ALPHABETICAL INDEX

<u>Subject</u>	<u>Chapter Section Subject</u>
Accumulator, Auxiliary Hydraulic System Surge Damper	
Description and Operation.....	29-20-0
Servicing.....	29-20-7
Maintenance Practices.....	29-20-7
Accumulator, Hydraulic Power System	
Description and Operation.....	29-10-0
Servicing.....	29-10-22
Maintenance Practices.....	29-10-22
Aspirator, Hydraulic Reservoir Pressure Regulator	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-3
Bulb, Hydraulic Fluid Temperature	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-2
Control, Auxiliary Hydraulic Pump	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-10
Connectors, Ground Service Pressure and Supply	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-9
Chamber, Hydraulic Reservoir Air	
Description and Operation .....	29-10-0
Maintenance Practices.....	29-10-9
Filter, Auxiliary Hydraulic Pump Bypass Line	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-11
Filter, Auxiliary Hydraulic System	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-4
Filter Element, Auxiliary Hydraulic System	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-5

29-Index  
CODE 5  
Page 1

Feb 1/69

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>
Filter, Engine-Driven Hydraulic Pump Case Drain	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-14
Filter Element, Engine-Driven Hydraulic Pump Case Drain	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-15
Filter, Engine-Driven Hydraulic Pump Disposable Case Drain	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-27
Filter, Hydraulic Reservoir Return Fluid	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-2
Filters, Regulator-Aspirator Air	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-4
Filter Elements, Regulator-Aspirator Air	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-5
Indicator, Hydraulic Fluid Quantity	
Description and Operation.....	29-30-0
Indicator, Hydraulic Fluid Temperature	
Description and Operation.....	29-30-0
Indicator, Hydraulic Fluid Pressure	
Description and Operation.....	29-30-0
Lever, Hydraulic System Selector Control	
Description and Operation.....	29-10-0
Adjustment/Test.....	29-10-0
Manifold, Left Hydraulic Power	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-19
Manifold, Right Hydraulic Power	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-20
Pump, Auxiliary Hydraulic	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-2



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	Chapter Section <u>Subject</u>
Pump, Engine-Driven Hydraulic	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-12
Reservoir, Auxiliary Hydraulic Pump Alternate	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-8
Reservoir, Hydraulic System	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-1
Switch, Emergency Hydraulic Reservoir Low Level Indicating Light	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-5
Switch, Hydraulic Fluid Overtemperature Indicating Light	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-4
Transmitter, Hydraulic Fluid Pressure	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-3
Transmitter, Hydraulic Fluid Quantity	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-1
Valve, Auxiliary Hydraulic Pump Relief	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-3
Valve, Auxiliary Hydraulic System Check	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-6
Valve, Auxiliary Pump Supply Selector	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-1
Valve, Dual-Filter and Relief	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-16

Oct 1/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>
Valve, Engine-Driven Hydraulic Pump Check	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-17
Valve, Engine Hydraulic Fire Shutoff	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-11
Valve, Hydraulic Manifolds Return Check	
Description and Operation. ....	29-10-0
Maintenance Practices.....	29-10-21
Valve, Hydraulic Reservoir Air Bleed	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-7
Valve, Hydraulic Reservoir Port B Return Check	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-10
Valve, Hydraulic Reservoir Relief	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-6
Valve, Hydraulic Reservoir Vacuum Breaker	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-8
Valve, System Selector	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-18
Valve, Hydraulic System Priority	
Description and Operation... ..	29-10-0
Maintenance Practices.....	29-10-23

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Chapter 29

ALPHABETICAL INDEX

<u>Subject</u>	<u>Chapter Section Subject</u>
Accumulator, Auxiliary Hydraulic System Surge Damper	
Description and Operation.....	29-20-0
Servicing.....	29-20-7
Maintenance Practices.....	29-20-7
Accumulator, Hydraulic Power System	
Description and Operation.....	29-10-0
Servicing.....	29-10-22
Maintenance Practices.....	29-10-22
Aspirator, Hydraulic Reservoir Pressure Regulator	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-3
Bulb, Hydraulic Fluid Temperature	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-2
Control, Auxiliary Hydraulic Pump	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-10
Connectors, Ground Service Pressure and Supply	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-9
Chamber, Hydraulic Reservoir Air	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-9
Filter, Auxiliary Hydraulic System	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-4
Filter Element, Auxiliary Hydraulic System	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-5

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	Chapter Section <u>Subject</u>
Filter, Engine-Driven Hydraulic Pump Case Drain	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-14
Filter Element, Engine-Driven Hydraulic Pump Case Drain	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-15
Filter, Hydraulic Reservoir Return Fluid	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-2
Filters, Regulator-Aspirator Air	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-4
Filter Elements, Regulator-Aspirator Air	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-5
Indicator, Hydraulic Fluid Quantity	
Description and Operation.....	29-30-0
Indicator, Hydraulic Fluid Temperature	
Description and Operation.....	29-30-0
Indicator, Hydraulic Fluid Pressure	
Description and Operation.....	29-30-0
Lever, Hydraulic System Selector Control	
Description and Operation.....	29-10-0
Adjustment/Test.....	29-10-0
Manifold, Left Hydraulic Power	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-19
Manifold, Right Hydraulic Power	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-20
Pump, Auxiliary Hydraulic	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-2

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	Chapter Section <u>Subject</u>
Pump, Engine-Driven Hydraulic	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-12
Reservoir, Auxiliary Hydraulic Pump Alternate	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-8
Reservoir, Hydraulic System	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-1
Switch, Emergency Hydraulic Reservoir Low Level Indicating Light	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-5
Switch, Hydraulic Fluid Overtemperature Indicating Light	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-4
Switch, Hydraulic Reservoir Low Pressure Indicating Light	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-6
Transmitter, Hydraulic Fluid Pressure	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-3
Transmitter, Hydraulic Fluid Quantity	
Description and Operation.....	29-30-0
Maintenance Practices.....	29-30-1
Valve, Auxiliary Hydraulic Pump Relief	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-3
Valve, Auxiliary Hydraulic System Check	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-6
Valve, Auxiliary Pump Supply Selector	
Description and Operation.....	29-20-0
Maintenance Practices.....	29-20-1
Valve, Dual-Filter and Relief	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-16

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

<u>Subject</u>	Chapter Section <u>Subject</u>
Valve, Engine-Driven Hydraulic Pump Check	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-17
Valve, Engine Hydraulic Fire Shutoff	
Description and Operation.....	29-10-10
Maintenance Practices.....	29-10-11
Valve, Hydraulic Manifolds Return Check	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-21
Valve, Hydraulic Reservoir Air Bleed	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-7
Valve, Hydraulic Reservoir Port B Return Check	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-10
Valve, Hydraulic Reservoir Relief	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-6
Valve, Hydraulic Reservoir Vacuum Breaker	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-8
Valve, Manual Shutoff	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-26
Valve, System Selector	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-18
Valve, Hydraulic System Priority	
Description and Operation.....	29-10-0
Maintenance Practices.....	29-10-23


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - DESCRIPTION AND OPERATION

1. Description

- A. The hydraulic power system is a closed-center system which is pressurized to approximately 3000 psi with Skydrol fire-resistant hydraulic fluid. Skydrol is damaging to rubber tires, floor covering, paint, etc., and should not be permitted to come into contact with these items.
- B. The main hydraulic system reservoir and separate air chamber are pressurized by a regulator-aspirator which maintains the pressure range at 30 to 35 psi. The main hydraulic reservoir supplies fluid to both engine-driven hydraulic pumps and/or the electrically-driven auxiliary hydraulic pump. The pumps supply hydraulic pressure to the left and right hydraulic power manifolds for distribution to the subsystems.
- C. The auxiliary hydraulic pump alternate reservoir, used as an alternate hydraulic fluid supply to the auxiliary pump only, is connected to the auxiliary pump supply selector valve. The selector valve is opened to the alternate supply when the hydraulic system selector control lever is placed in the general system/main gear downlock and flap position.
- D. The function of the hydraulic power system is indicated by electrically operated instruments and indicating lights which are located in the flight compartment. The hydraulic power system is electrically and mechanically controlled from the flight compartment. This chapter covers the closed-center system, which delivers hydraulic pressure to the left and right hydraulic power manifolds only. For information and maintenance practices on the subsystems down-stream of the power manifolds, refer to the related chapter and section.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

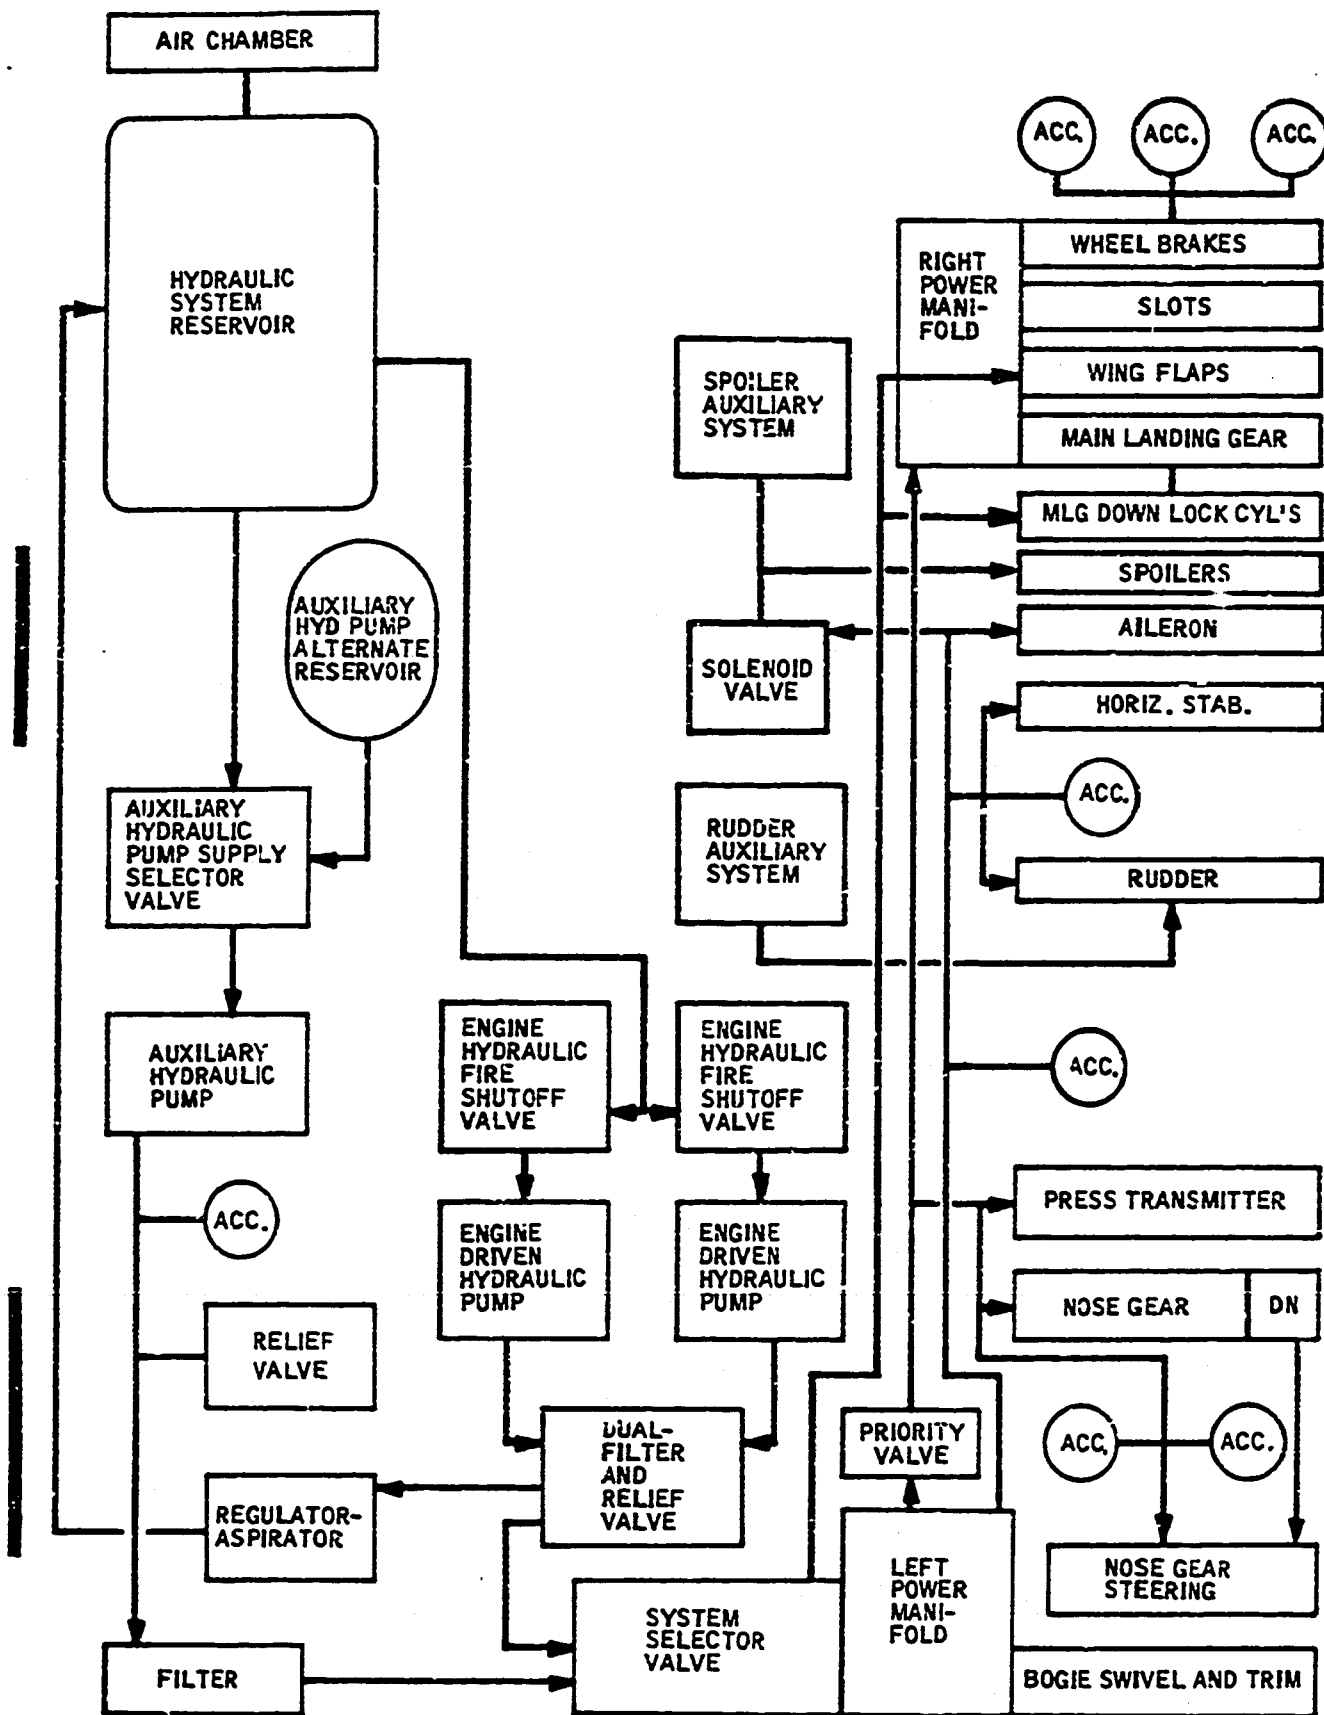

HA2-200C

Hydraulic Power System -- Block Diagram  
 Figure 1




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - DESCRIPTION AND OPERATION

1. Description

- A. The hydraulic power system is a closed-center system which is pressurized to approximately 3000 psi with Skydrol fire-resistant hydraulic fluid. Skydrol is damaging to rubber tires, floor covering, paint, etc., and should not be permitted to come into contact with these items.
- B. The main hydraulic system reservoir and separate air chamber are pressurized by a regulator-aspirator which maintains the pressure range at 30 to 35 psi. The main hydraulic reservoir supplies fluid to both engine-driven hydraulic pumps and/or the electrically-driven auxiliary hydraulic pump. The pumps supply hydraulic pressure to the left and right hydraulic power manifolds for distribution to the subsystems.
- C. The auxiliary hydraulic pump alternate reservoir, used as an alternate hydraulic fluid supply to the auxiliary pump only, is connected to the auxiliary pump supply selector valve. The selector valve is opened to the alternate supply when the hydraulic system selector control lever is placed in the general system/main gear downlock and flap position.
- D. The function of the hydraulic power system is indicated by electrically operated instruments and indicating lights which are located in the flight compartment. The hydraulic power system is electrically and mechanically controlled from the flight compartment. This chapter covers the closed-center system, which delivers hydraulic pressure to the left and right hydraulic power manifolds only. For information and maintenance practices on the subsystems down-stream of the power manifolds, refer to the related chapter and section.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

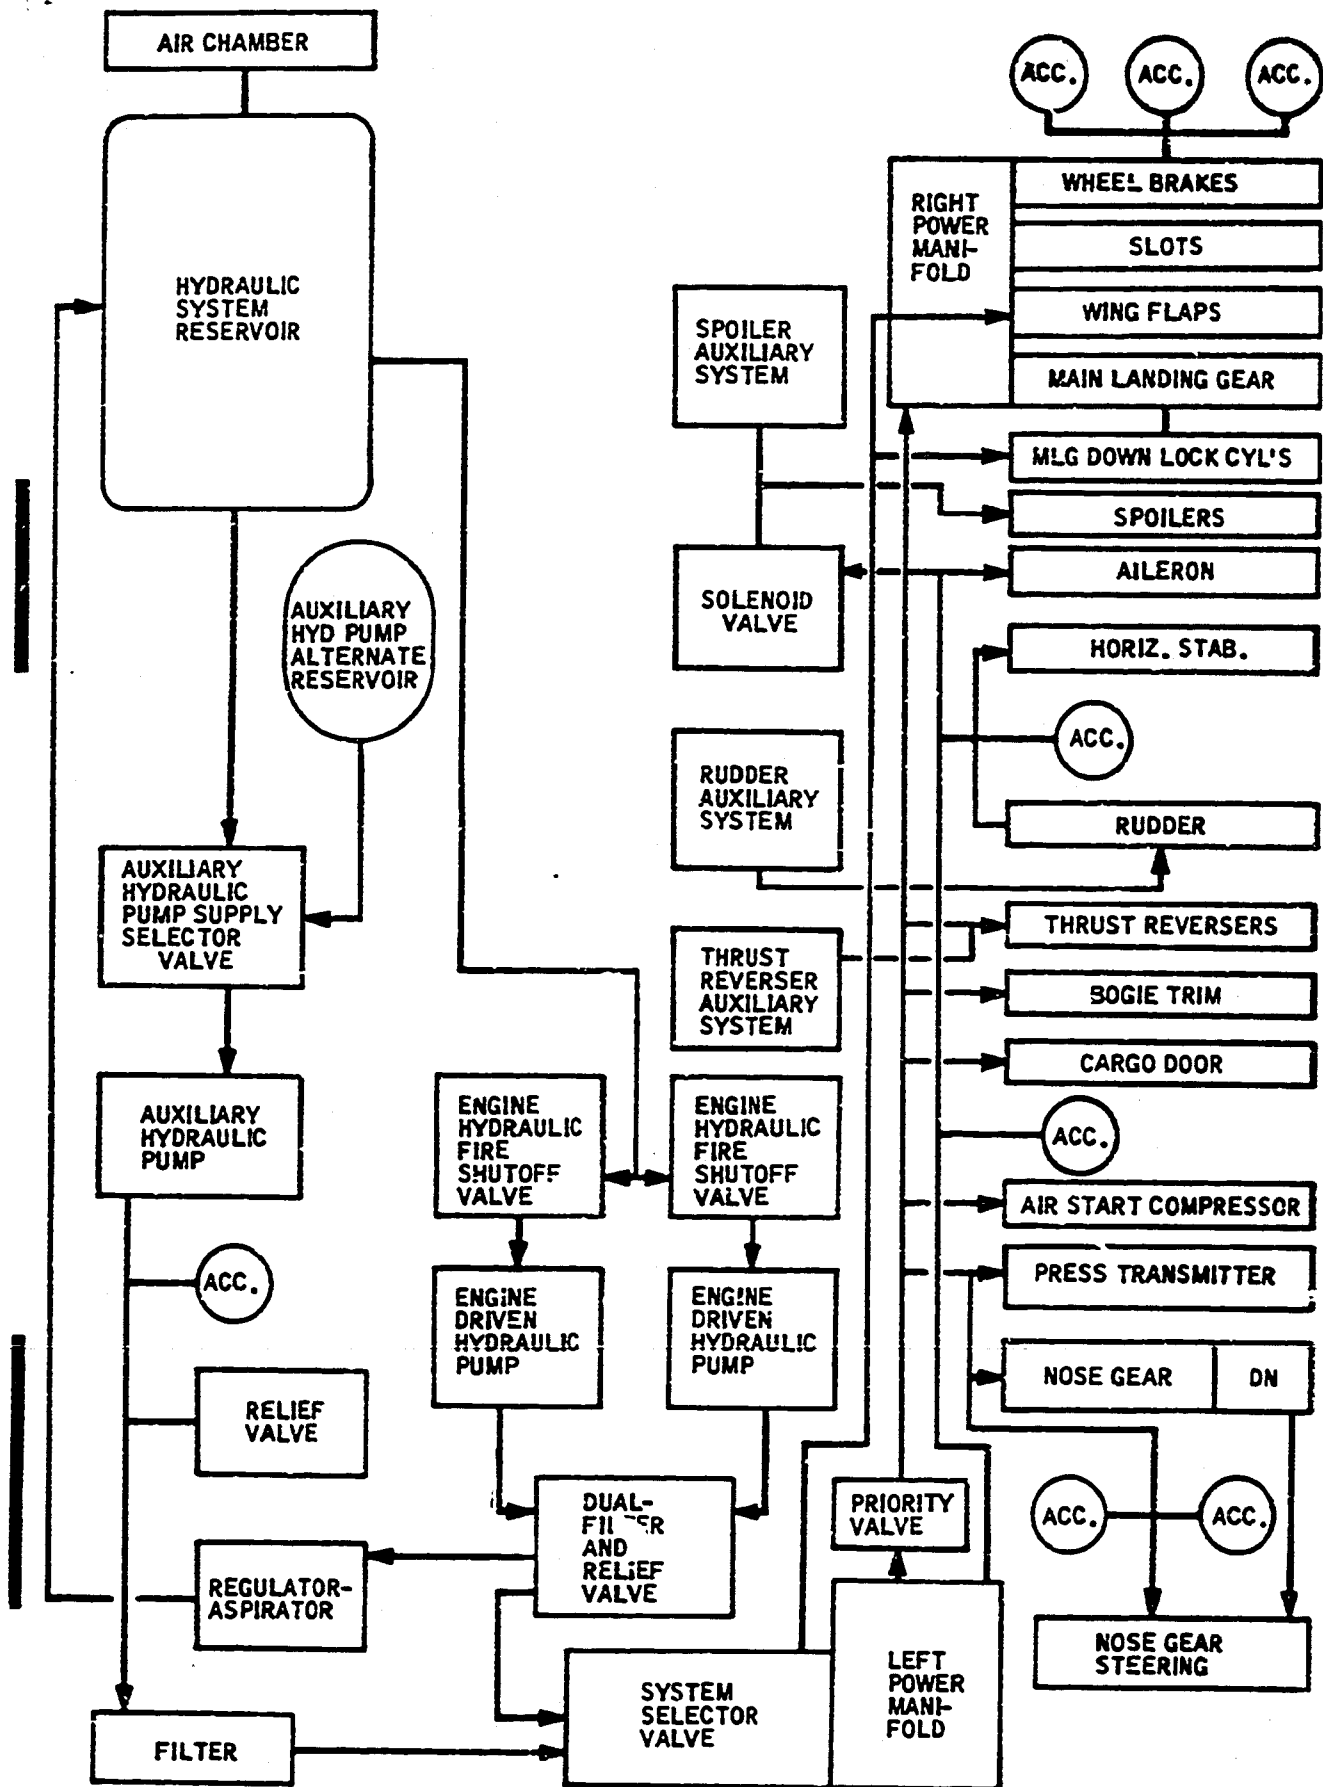

HA2-4080A

Hydraulic Power System -- Block Diagram  
 Figure 1


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - DESCRIPTION AND OPERATION

1. Description

- A. The hydraulic power system is a closed-center system which is pressurized to approximately 3000 psi with Skydrol fire-resistant hydraulic fluid. Skydrol is damaging to rubber tires, floor covering, paint, etc., and should not be permitted to come into contact with these items.
- B. The main hydraulic system reservoir and separate air chamber are pressurized by a regulator-aspirator which maintains the pressure range at 30 to 35 psi. The main hydraulic reservoir supplies fluid to both engine-driven hydraulic pumps and/or the electrically-driven auxiliary hydraulic pump. The pumps supply hydraulic pressure to the left and right hydraulic power manifolds for distribution to the subsystems.
- C. The auxiliary hydraulic pump alternate reservoir, used as an alternate hydraulic fluid supply to the auxiliary pump only, is connected to the auxiliary pump supply selector valve. The selector valve is opened to the alternate supply when the hydraulic system selector control lever is placed in the general system/main gear downlock and flap position.
- D. The function of the hydraulic power system is indicated by electrically operated instruments and indicating lights which are located in the flight compartment. The hydraulic power system is electrically and mechanically controlled from the flight compartment. This chapter covers the closed-center system, which delivers hydraulic pressure to the left and right hydraulic power manifolds only. For information and maintenance practices on the subsystems down-stream of the power manifolds, refer to the related chapter and section.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

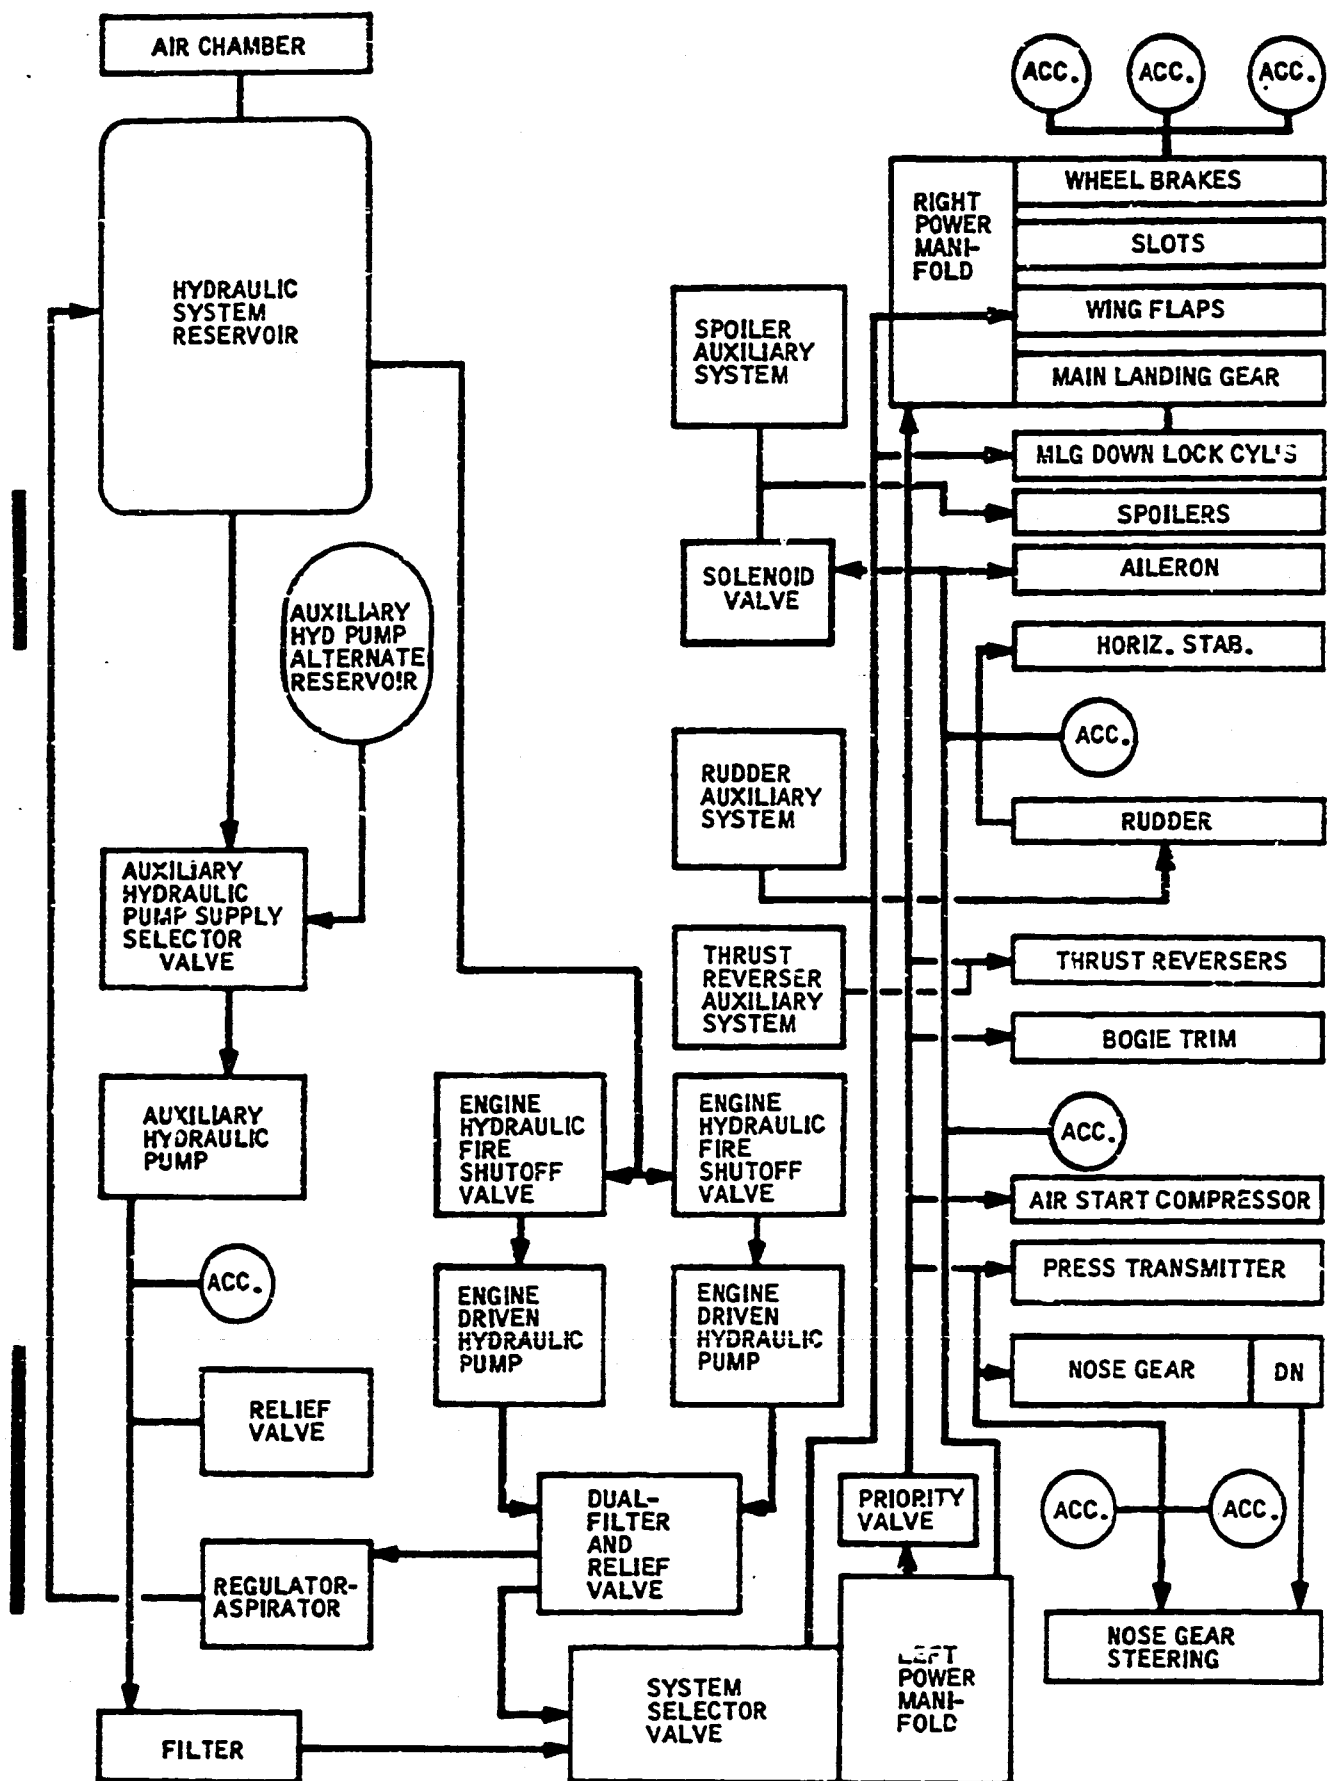

HA2-1364D

Hydraulic Power System -- Block Diagram  
Figure 1

 
DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - DESCRIPTION AND OPERATION

1. Description

- A. The hydraulic power system is a closed-center system which is pressurized to approximately 3000 psi with Skydrol fire-resistant hydraulic fluid. Skydrol is damaging to rubber tires, floor covering, paint, etc., and should not be permitted to come into contact with these items.
- B. The main hydraulic system reservoir and separate air chamber are pressurized by a regulator-aspirator which maintains the pressure range at 30 to 35 psi. The main hydraulic reservoir supplies fluid to both engine-driven hydraulic pumps and/or the electrically-driven auxiliary hydraulic pump. The pumps supply hydraulic pressure to the left and right hydraulic power manifolds for distribution to the subsystems.
- C. The auxiliary hydraulic pump alternate reservoir, used as an alternate hydraulic fluid supply to the auxiliary pump only, is connected to the auxiliary pump supply selector valve. The selector valve is opened to the alternate supply when the hydraulic system selector control lever is placed in the general system/main gear downlock and flap position.
- D. The function of the hydraulic power system is indicated by electrically operated instruments and indicating lights which are located in the flight compartment. The hydraulic power system is electrically and mechanically controlled from the flight compartment. This chapter covers the closed-center system, which delivers hydraulic pressure to the left and right hydraulic power manifolds only. For information and maintenance practices on the subsystems down-stream of the power manifolds, refer to the related chapter and section.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**



Hydraulic Power System -- Block Diagram  
Figure 1


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - DESCRIPTION AND OPERATION

1. Description

- A. The hydraulic power system is a closed-center system which is pressurized to approximately 3000 psi with Skydrol fire-resistant hydraulic fluid. Skydrol is damaging to rubber tires, floor coverings, paint, etc., and should not be permitted to come into contact with these items.
- B. The main hydraulic system reservoir and separate air chamber are pressurized by a regulator-aspirator which maintains the pressure range at 30 to 35 psi. The main hydraulic reservoir supplies fluid to both engine-driven hydraulic pumps and/or the electrically-driven auxiliary hydraulic pump. The pumps supply hydraulic pressure to the left and right hydraulic power manifolds for distribution to the subsystems.
- C. The auxiliary hydraulic pump alternate reservoir, used as an alternate hydraulic fluid supply to the auxiliary pump only, is connected to the auxiliary pump supply selector valve. The selector valve is opened to the alternate supply when the hydraulic system selector control lever is placed in the general system/main gear downlock and flap position.
- D. The function of the hydraulic power system is indicated by electrically operated instruments and indicating lights which are located in the flight compartment. The hydraulic power system is electrically and mechanically controlled from the flight compartment. This chapter covers the closed-center system, which delivers hydraulic pressure to the left and right hydraulic power manifolds only. For information and maintenance practices on the subsystems down-stream of the power manifolds, refer to the related chapter and section.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

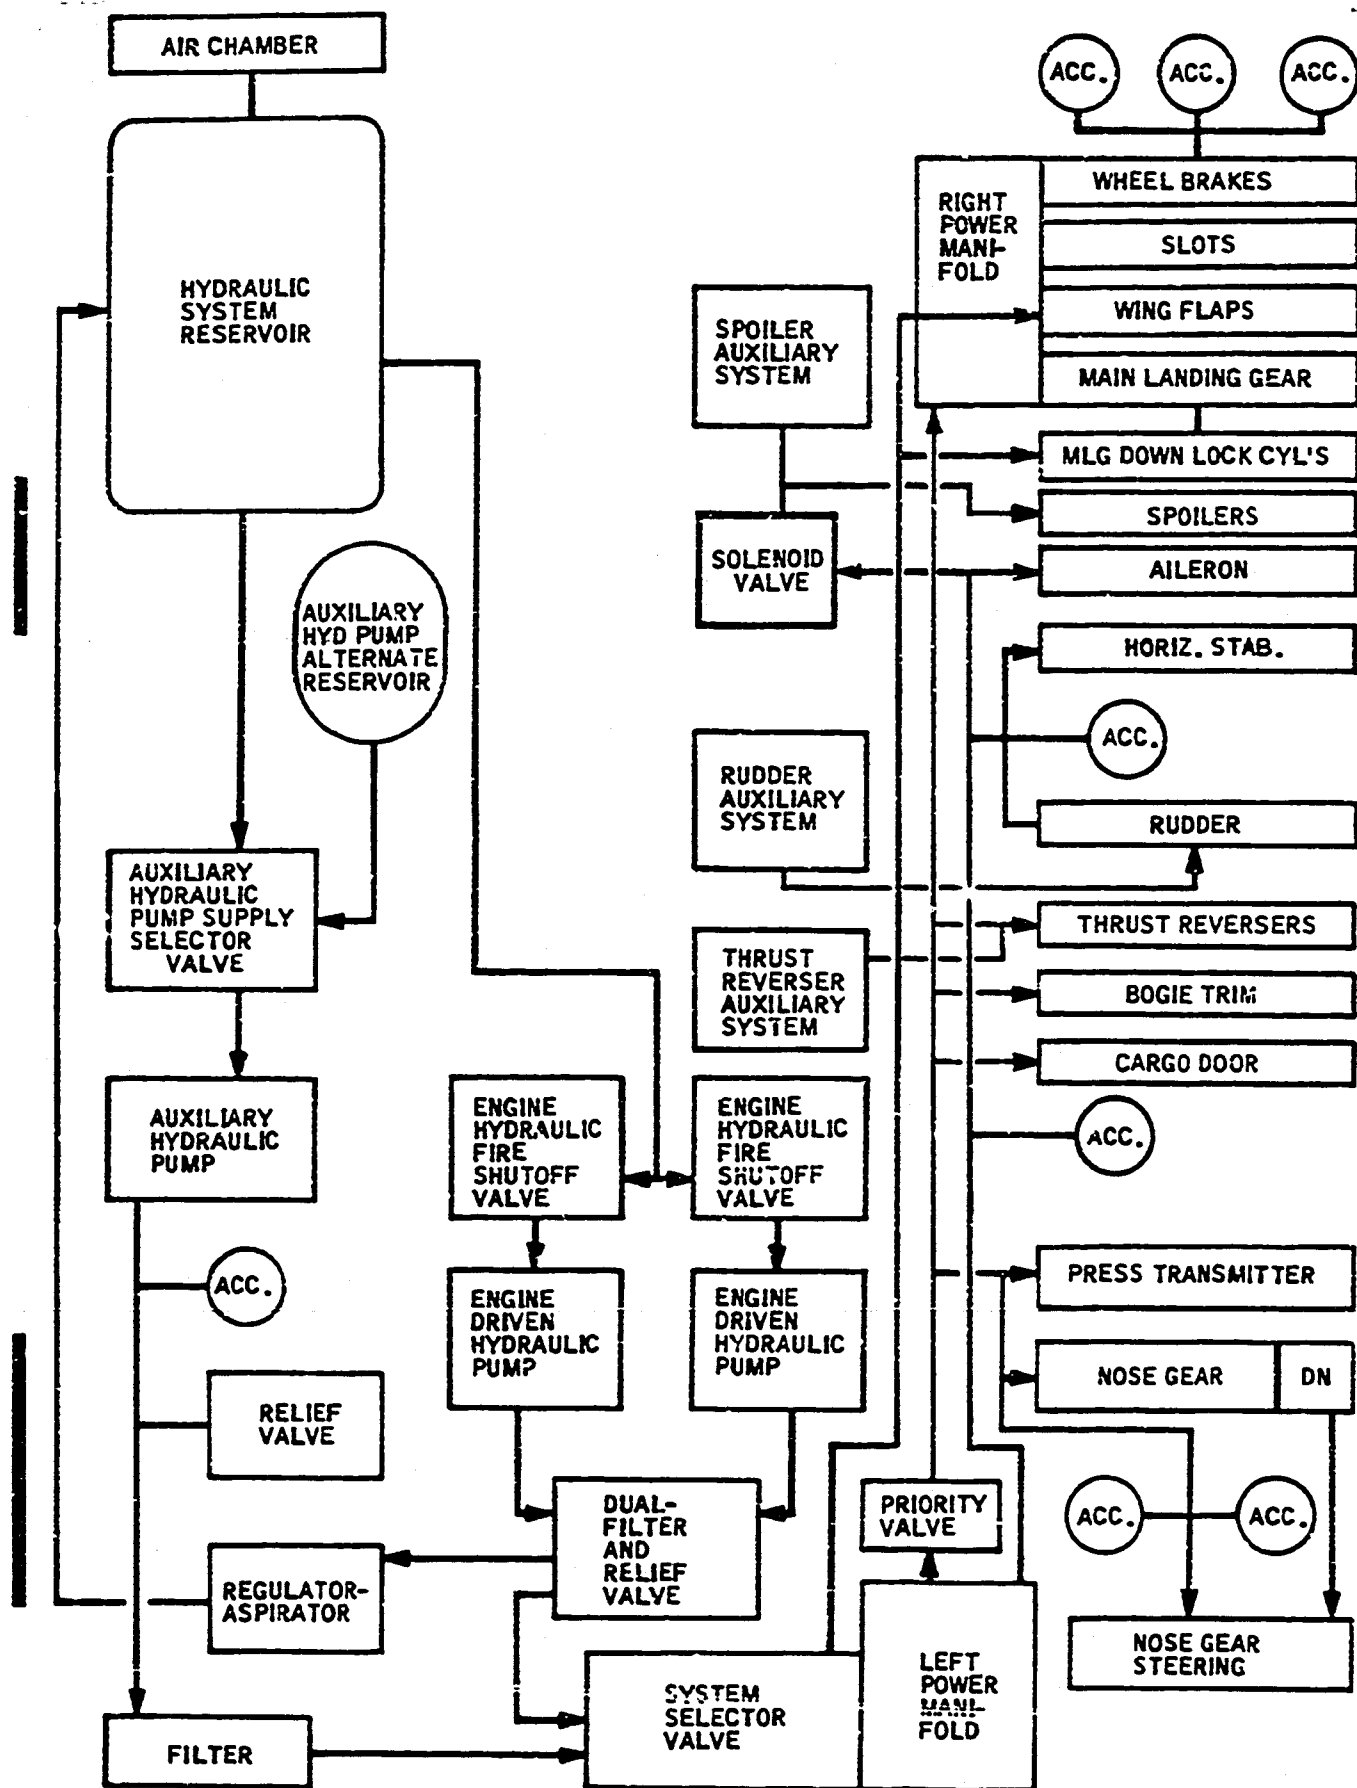

HA2-4736A




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - DESCRIPTION AND OPERATION

1. Description

- A. The hydraulic power system is a closed-center system which is pressurized to approximately 3000 psi with Skydrol fire-resistant hydraulic fluid. Skydrol is damaging to rubber tires, floor covering, paint, etc., and should not be permitted to come into contact with these items.
- B. The main hydraulic system reservoir and separate air chamber are pressurized by a regulator-aspirator which maintains the pressure range at 35 to 40 psi on airplanes 801 - 815 and 30 to 35 psi on airplanes 816 - 819, 860 and subsequent. The main hydraulic reservoir supplies fluid to both engine-driven hydraulic pumps and/or the electrically-driven auxiliary hydraulic pump. The pumps supply hydraulic pressure to the left and right hydraulic power manifolds for distribution to the subsystems.
- C. The auxiliary hydraulic pump alternate reservoir, used as an alternate hydraulic fluid supply to the auxiliary pump only, is connected to the auxiliary pump supply selector valve. The selector valve is opened to the alternate supply when the hydraulic system selector control lever is placed in the general system/flaps only position.
- D. The function of the hydraulic power system is indicated by electrically operated instruments and indicating lights which are located in the flight compartment. The hydraulic power system is electrically and mechanically controlled from the flight compartment. This chapter covers the closed-center system, which delivers hydraulic pressure to the left and right hydraulic power manifolds only. For information and maintenance practices on the subsystems down-stream of the power manifolds, refer to the related chapter and section.


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

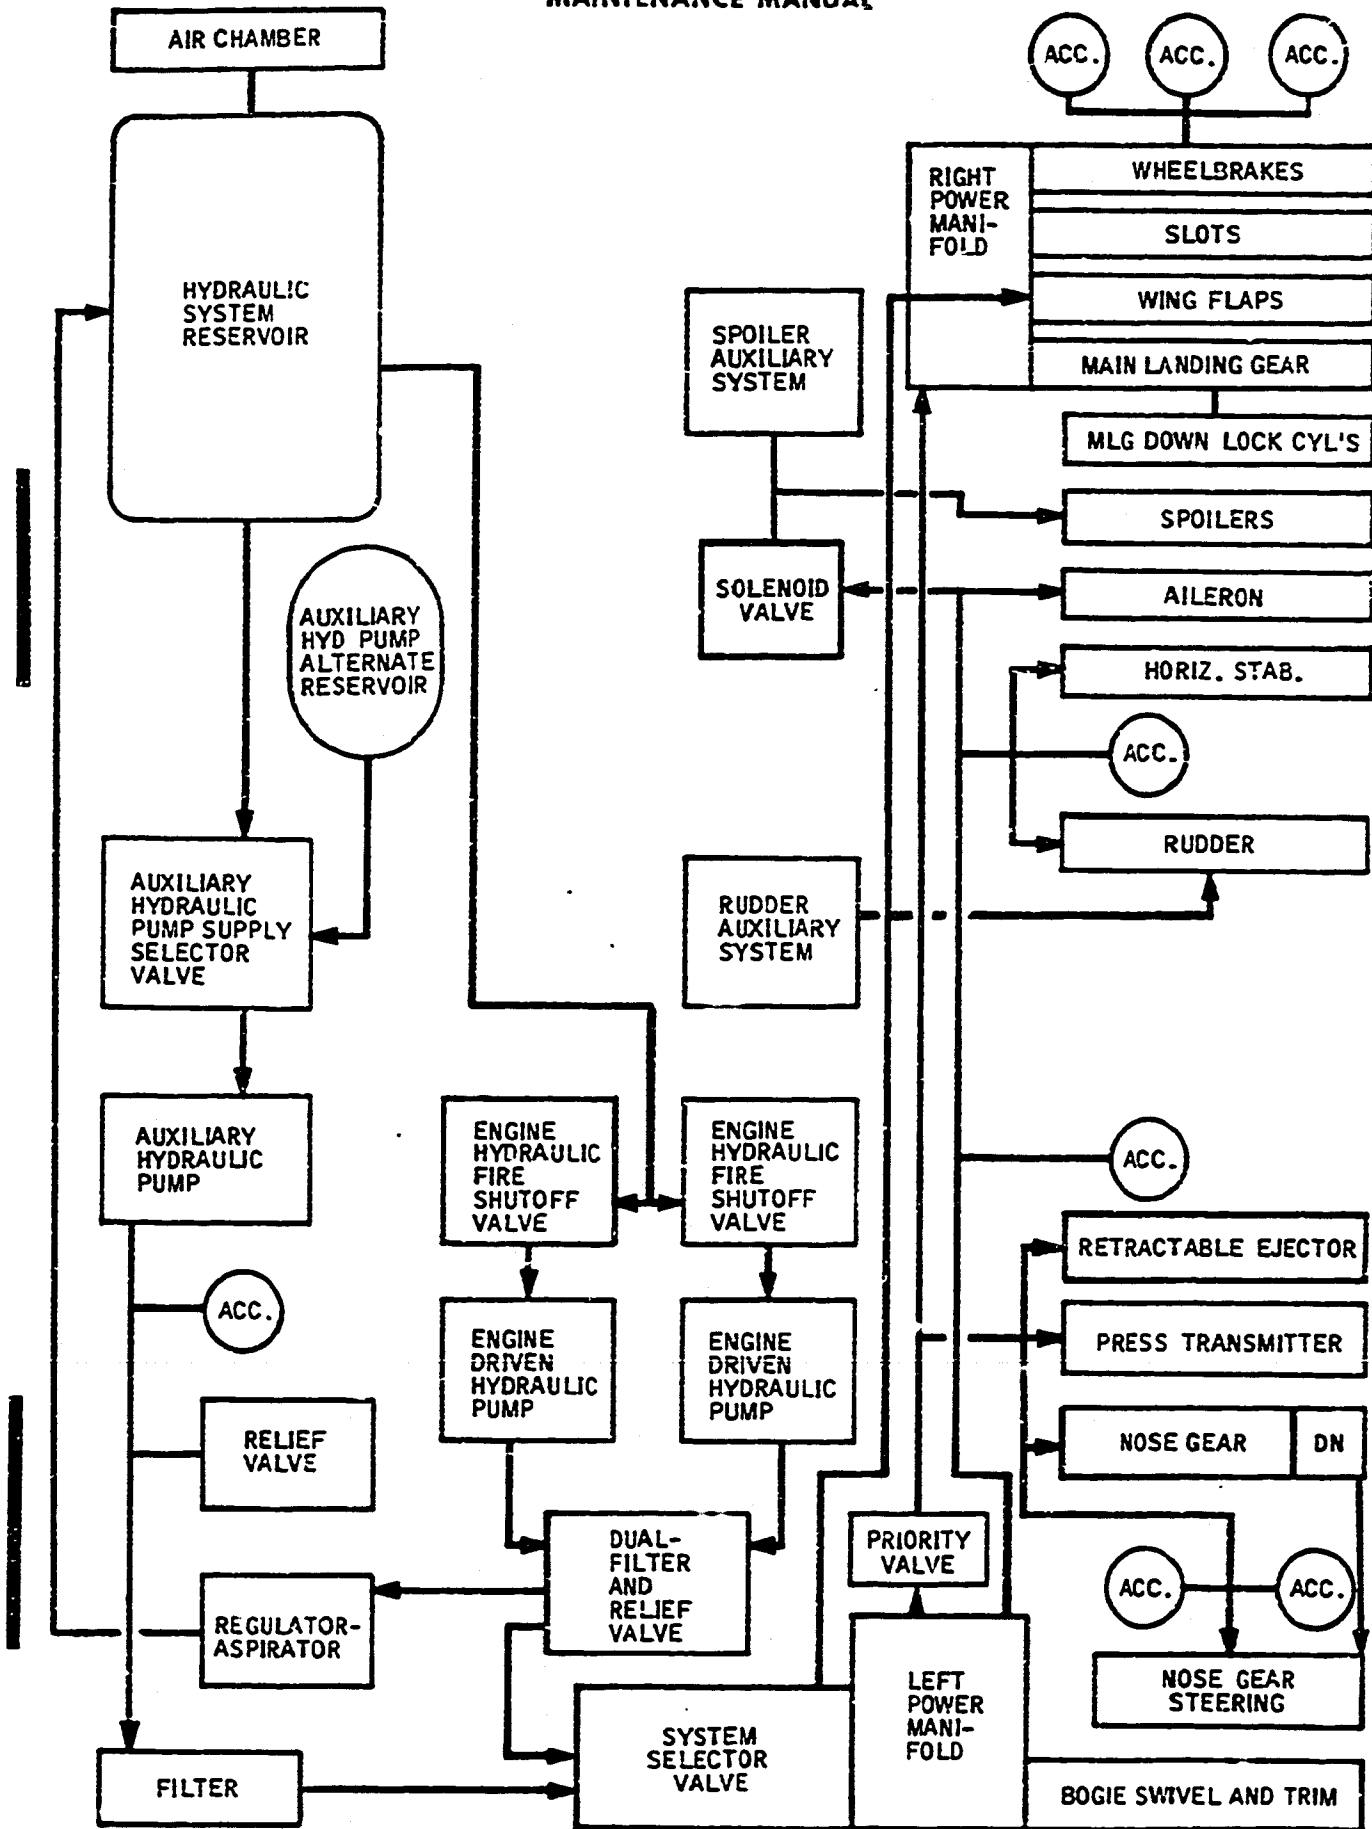

HA2-4648A

Hydraulic Power System -- Block Diagram  
(Airplanes 801-811)  
Figure 1 (Sheet 1)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

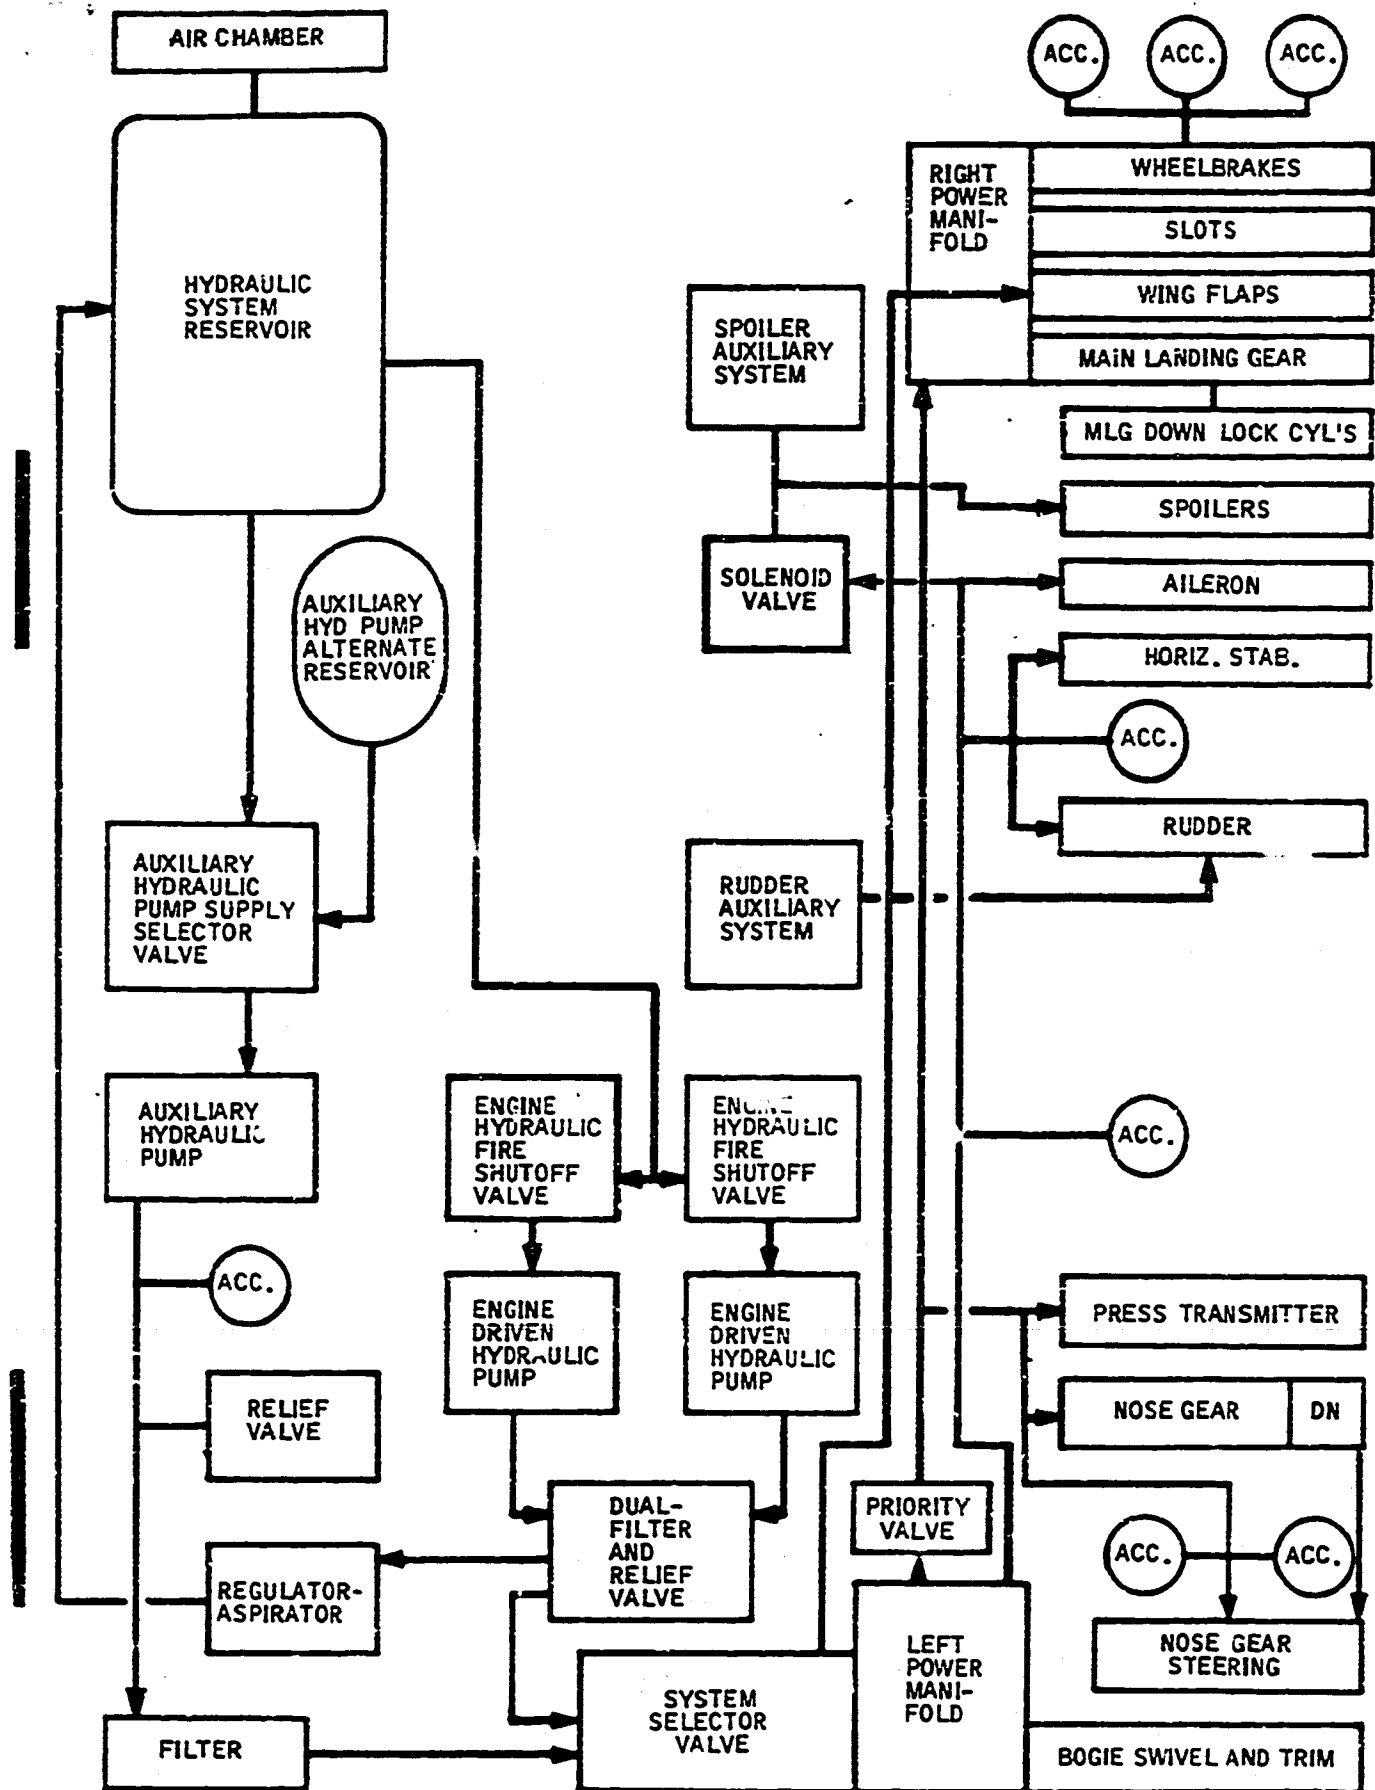

HA2-2199C


Hydraulic Power System -- Block Diagram  
 (Airplanes 812 - 822, 860 - 866)  
 Figure 1 (Sheet 2)

Nov 1/69

Printed in U.S.A.

29-00  
 CODE 6  
 Page 3

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

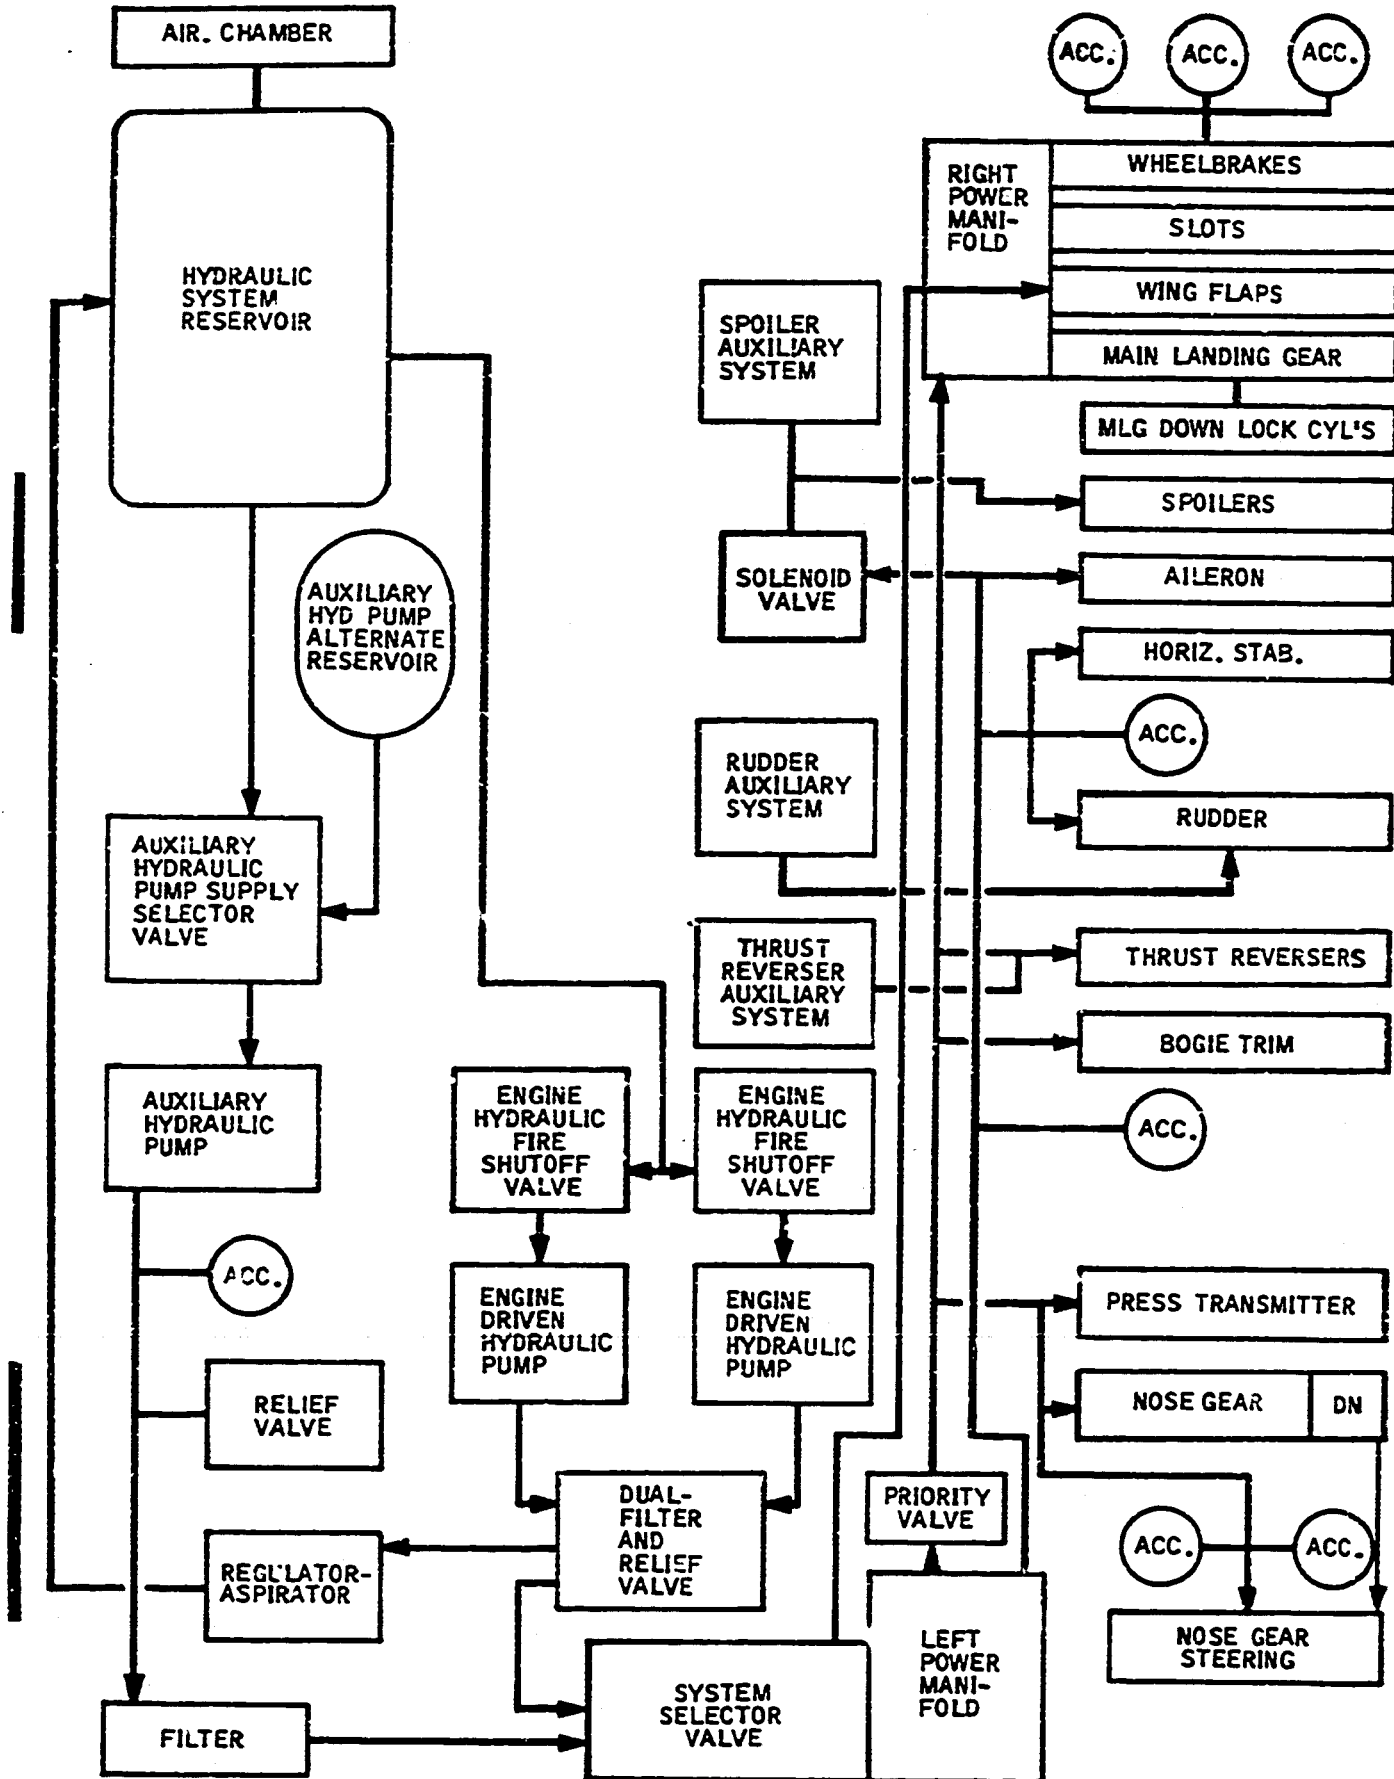

HA2-4737A

Hydraulic Power System -- Block Diagram  
 (Airplane 867 and Subs)  
 Figure 1 (Sheet 3)


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - DESCRIPTION AND OPERATION

1. Description

- A. The hydraulic power system is a closed-center system which is pressurized to approximately 3000 psi with Skydrol fire-resistant hydraulic fluid. Skydrol is damaging to rubber tires, floor covering, paint, etc., and should not be permitted to come into contact with these items.
- B. The main hydraulic system reservoir and separate air chamber are pressurized by a regulator-aspirator which maintains the pressure range at 30 to 35 psi. The main hydraulic reservoir supplies fluid to both engine-driven hydraulic pumps and/or the electrically-driven auxiliary hydraulic pump. The pumps supply hydraulic pressure to the left and right hydraulic power manifolds for distribution to the subsystems.
- C. The auxiliary hydraulic pump alternate reservoir, used as an alternate hydraulic fluid supply to the auxiliary pump only, is connected to the auxiliary pump supply selector valve. The selector valve is opened to the alternate supply when the hydraulic system selector control lever is placed in the general system/flaps only position.
- D. The function of the hydraulic power system is indicated by electrically operated instruments and indicating lights which are located in the flight compartment. The hydraulic power system is electrically and mechanically controlled from the flight compartment. This chapter covers the closed-center system, which delivers hydraulic pressure to the left and right hydraulic power manifolds only. For information and maintenance practices on the subsystems down-stream of the power manifolds, refer to the related chapter and section.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

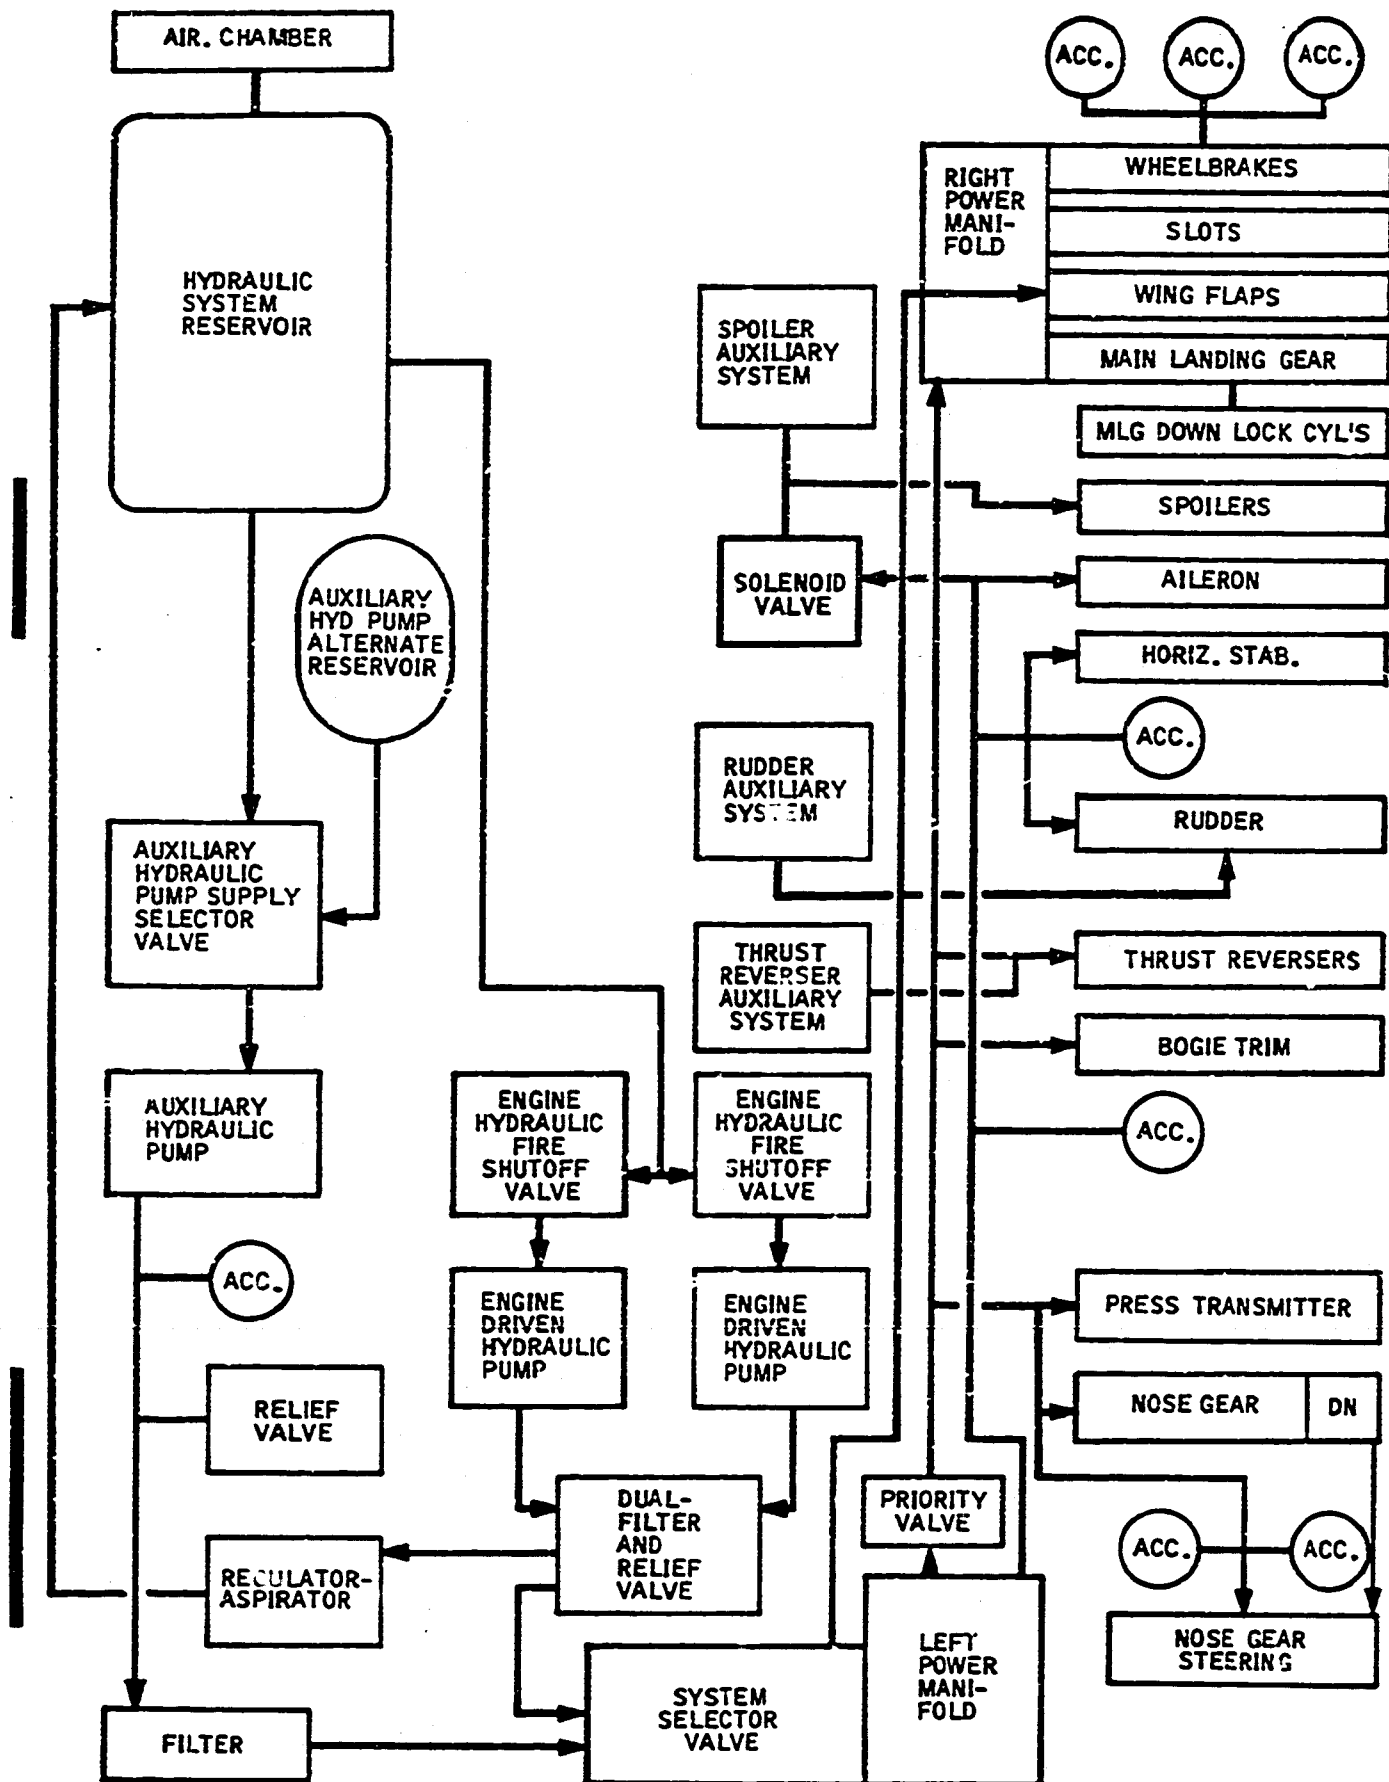

HA2-4737A


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - DESCRIPTION AND OPERATION

1. Description

- A. The hydraulic power system is a closed-center system which is pressurized to approximately 3000 psi with Skydrol fire-resistant hydraulic fluid. Skydrol is damaging to rubber tires, floor covering, paint, etc., and should not be permitted to come into contact with these items.
- B. The main hydraulic system reservoir and separate air chamber are pressurized by a regulator-aspirator which maintains the pressure range at 30 to 35 psi. The main hydraulic reservoir supplies fluid to both engine-driven hydraulic pumps and/or the electrically-driven auxiliary hydraulic pump. The pumps supply hydraulic pressure to the left and right hydraulic power manifolds for distribution to the subsystems.
- C. The auxiliary hydraulic pump alternate reservoir, used as an alternate hydraulic fluid supply to the auxiliary pump only, is connected to the auxiliary pump supply selector valve. The selector valve is opened to the alternate supply when the hydraulic system selector control lever is placed in the general system/flaps only position.
- D. The function of the hydraulic power system is indicated by electrically operated instruments and indicating lights which are located in the flight compartment. The hydraulic power system is electrically and mechanically controlled from the flight compartment. This chapter covers the closed-center system, which delivers hydraulic pressure to the left and right hydraulic power manifolds only. For information and maintenance practices on the subsystems down-stream of the power manifolds, refer to the related chapter and section.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

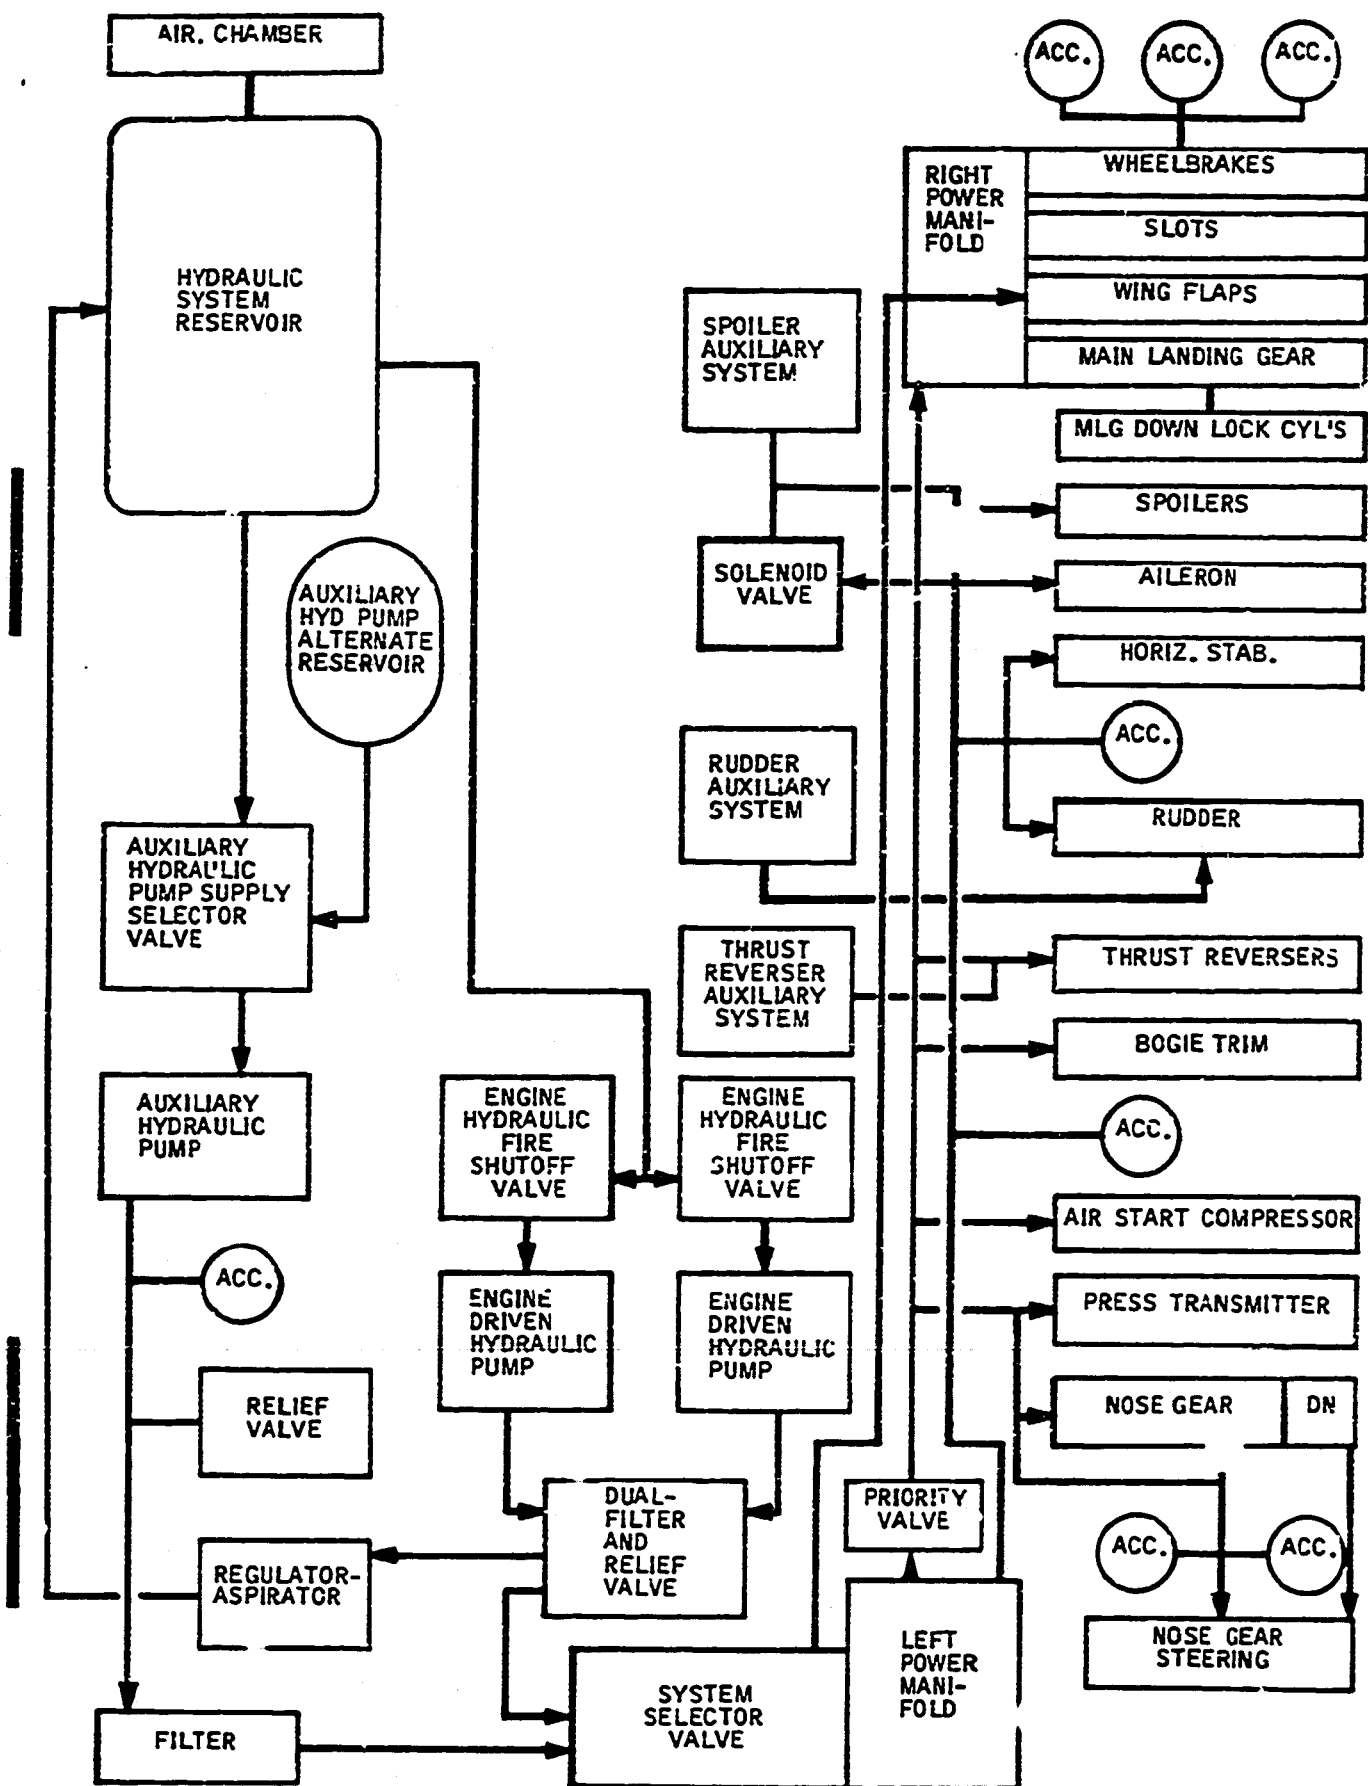

HA2-2904B

Hydraulic Power System -- Block Diagram  
 Figure 1




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - DESCRIPTION AND OPERATION

1. Description

- A. The hydraulic power system is a closed-center system which is pressurized to approximately 3000 psi with Skydrol fire-resistant hydraulic fluid. Skydrol is damaging to rubber tires, floor covering, paint, etc., and should not be permitted to come into contact with these items.
- B. The main hydraulic system reservoir and separate air chamber are pressurized by a regulator-aspirator which maintains the pressure range at 30 to 35 psi. The main hydraulic reservoir supplies fluid to both engine-driven hydraulic pumps and/or the electrically-driven auxiliary hydraulic pump. The pumps supply hydraulic pressure to the left and right hydraulic power manifolds for distribution to the subsystems.
- C. The auxiliary hydraulic pump alternate reservoir, used as an alternate hydraulic fluid supply to the auxiliary pump only, is connected to the auxiliary pump supply selector valve. The selector valve is opened to the alternate supply when the hydraulic system selector control lever is placed in the general system/main gear downlock and flap position.
- D. The function of the hydraulic power system is indicated by electrically operated instruments and indicating lights which are located in the flight compartment. The hydraulic power system is electrically and mechanically controlled from the flight compartment. This chapter covers the closed-center system, which delivers hydraulic pressure to the left and right hydraulic power manifolds only. For information and maintenance practices on the subsystems down-stream of the power manifolds, refer to the related chapter and section.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

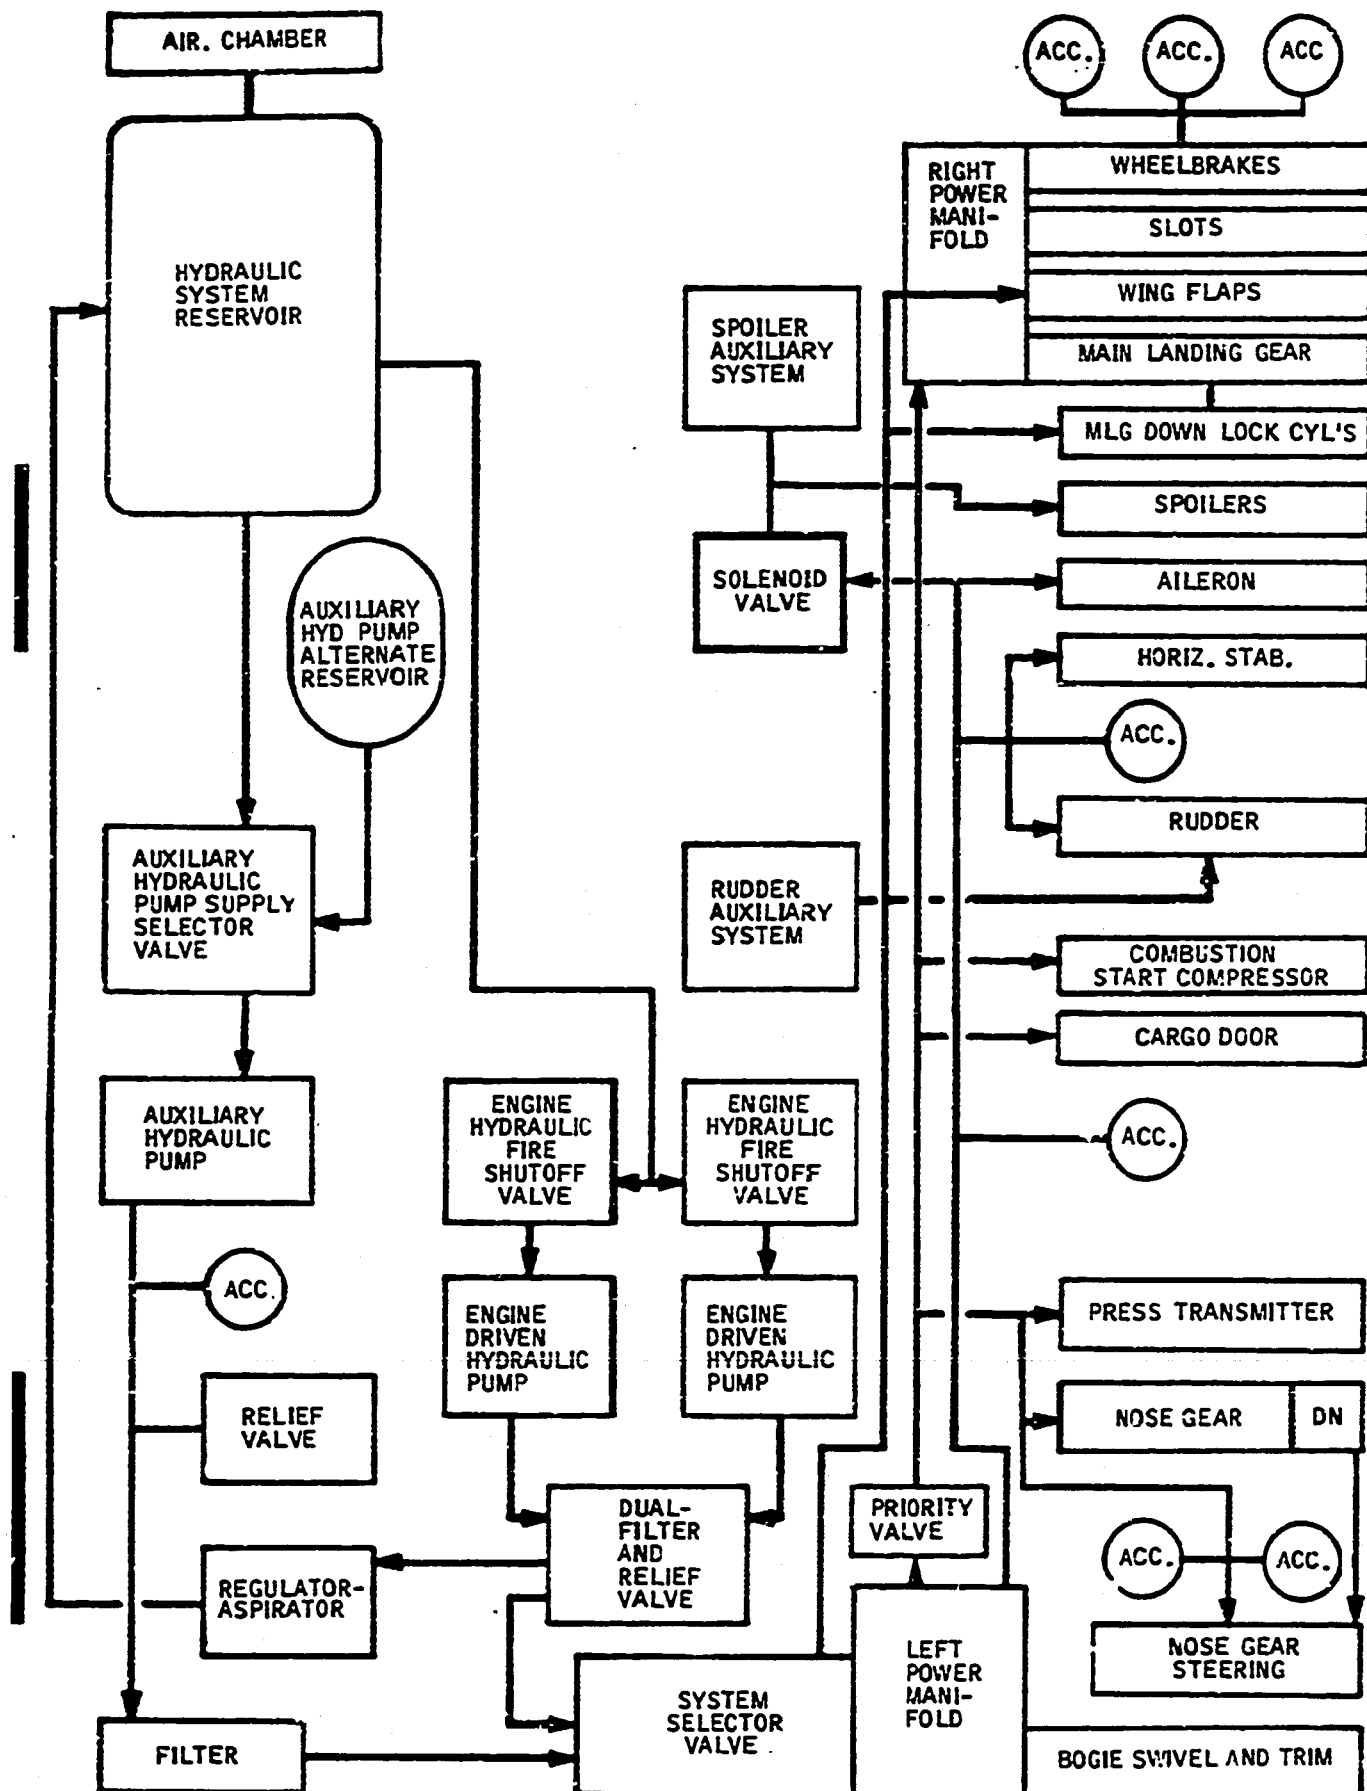

HA2-2905C

Hydraulic Power System -- Block Diagram  
 Figure 1

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - TROUBLESHOOTING

1. General

- A. To successfully troubleshoot the hydraulic system, it is necessary to have a clear understanding of the operation of the system and of what takes place when the system is operating properly. After system operation is clearly understood, an orderly analysis of possible causes of improper operation can be made. The only things that can be wrong with the system are: insufficient fluid, air in the system, leaks, and clogged lines or fittings.
- B. The location and elimination of trouble in a particular unit can usually be traced to one or more of the following: leaks, either internal or external; foreign particles clogging or holding open a portion of the unit; improper adjustment; mechanical damage; structural failure; or excessive clearance resulting from wear. When the trouble is isolated to a particular unit, remove the unit from the airplane and install a new unit.
- C. When a hydraulic unit has been changed or hydraulic lines have been disconnected, check the affected system under pressure for leaks and proper operation before placing the airplane in service.
- D. Tube Leaks and Failures
  - (1) Trouble in a tubing system may be broadly classified into two groups: leaks and failures.
  - (2) For flared tube joints, refer to paragraph E for causes of leaks. For flareless joints, refer to paragraph F for causes of leaks.
- E. Causes of Leaks at Flared Joints
  - (1) Poor flare, rough surface, cracks, and splits
  - (2) Improper wrench torque
  - (3) Insufficient or improper support of lines
  - (4) Damage to flares
  - (5) Foreign material under flares
  - (6) Badly fitted or mismatched parts
  - (7) Careless assembly
  - (8) Threads seized or galled

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

F. Causes of Leaks at Flareless Joints

- (1) Improper wrench torque
- (2) Insufficient or improper support of lines
- (3) Foreign material under sleeve
- (4) Careless assembly

G. Causes of Leaks at Straight Threaded Joints Using O-rings

- (1) Improper positioning of O-ring on fitting
- (2) Fitting not properly positioned in boss
- (3) Insufficient wrench torque to squeeze O-ring and make seal
- (4) Careless assembly

H. Tubing Failures

- (1) Hydraulic tubing is designed to withstand several times the operating pressure to which it is subjected. Vibration resulting from chattering or insufficient support, preloaded fittings, and rubbing contact are the causes of most failures.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - MAINTENANCE PRACTICES

1. General

A. Skydrol Safety Precautions

- (1) Before performing any operation on the hydraulic system, personnel should read and thoroughly understand the following precautions to be observed when working with Skydrol hydraulic fluid.

WARNING: OBSERVE THE FOLLOWING SAFETY PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. LONG EXPOSURE TO SKYDROL CAN CAUSE SKIN DEHYDRATION AND CHAPPING.

- (2) Wash hands thoroughly with soap and water before starting work.
- (3) Apply barrier cream to hands, wrists, and forearms. Rub cream under fingernails and into creases of skin.
- (4) Wear goggles when pressure testing components or systems, and whenever there is any possibility of Skydrol splashing into eyes.
- (5) If Skydrol splashes into eyes, treat eyes immediately by irrigating thoroughly with clear cold water, and report the incident.
- (6) Wash hands, wrists, and forearms with soap and hot water whenever they have come in contact with Skydrol.
- (7) If clothing becomes soaked with Skydrol; remove clothing as soon as possible, thoroughly wash skin, and put on clean clothing.

B. Technical Precautions

- (1) Before any maintenance is performed on the hydraulic system, personnel should read and thoroughly understand the following precautions. Careful adherence to these instructions will aid in maintaining a functional and trouble-free system.

CAUTION: OBSERVE THE FOLLOWING TECHNICAL PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. SKYDROL WILL ATTACK A WIDE RANGE OF MATERIALS INCLUDING RUBBER, COPPER, VARIOUS PLASTICS, AND PAINTS.

- (2) Ensure that Skydrol does not come into contact with any part of aircraft outside of the hydraulic system. Keep spillage to an absolute minimum. Clean up spilled hydraulic fluid immediately to prevent entry into adjacent areas of the airplane precluding future false hydraulic leak reports. If spillage occurs, wipe up the fluid with a dry cloth and wash contaminated area with soap and hot water.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) When lines are disconnected and/or components are removed, provide suitable protection to prevent foreign material from entering the lines or components by use of caps, covers, clean lint-free rags, etc.
- (4) When electrical connectors are disconnected, install caps or other suitable protectors to prevent entry of hydraulic fluid, moisture, and foreign objects.
- (5) Always check position and angle of all fittings removed from components to ensure placement and alignment when installing replacement components.
- (6) When washing metal parts before assembly, use only approved solvent, and ensure that all traces of the solvent are removed before assembly.
- (7) Use only clean Skydrol for flushing or testing hydraulic components.
- (8) Use only clean Skydrol when filling reservoirs, sumps, filter bowls, pumps, etc., before installation of components.
- (9) Do not unpack Skydrol O-rings and seals until required. Ensure that only approved rings and seals are used.
- (10) When assembling O-rings and seals, lubricate with Skydrol Assembly Lubricant, MCS 352 Monsanto Chemical Co., or clean Skydrol hydraulic fluid.
- (11) Take care to prevent contamination of Skydrol with other materials (oils, water, dirt, etc.).
- (12) If a system becomes contaminated with any petroleum-based oil or solvent, drain the system and flush with clean Skydrol.

C. Landing Gear Precautions

- (1) The landing gear control lever should be in the down position and the landing gear ground lockpins should be installed in the main and nose gears at all times during ground maintenance, except as noted in maintenance procedural steps.
- (2) The main gear wheels should be chocked at all times during ground maintenance, except as noted in maintenance procedural steps.
- (3) The hydraulic system selector control lever should be in the general system (normal) position at all times during ground maintenance, except as noted in maintenance procedural steps.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) The main gear bogie beams should be locked in the trail position at all times, except as noted in maintenance procedural steps.

**WARNING:** WHEN THE AIRPLANE IS ON WING AND FUSELAGE JACKS, THE MAIN GEAR WHEELS ARE CLEAR OF THE GROUND, AND THE HYDRAULIC POWER SYSTEM IS PRESSURIZED, THE AFT BOGIE AND WHEELS WILL SWING OUTBOARD VERY RAPIDLY IN THE DIRECTION OF NOSEWHEEL TURN IF THE NOSEWHEELS ARE TURNED MORE THAN 40 DEGREES. BOGIE AND MAIN GEAR AFT WHEELS WILL RETURN TO TRAIL POSITION JUST AS RAPIDLY WHEN THE NOSEWHEELS ARE RETURNED TO NEUTRAL POSITION. THIS COULD CAUSE SERIOUS INJURY TO PERSONNEL WORKING NEAR THE WHEELS.

D. Hydraulic Power System O-Rings


- (1) O-rings used in the installation of hydraulic power system components are shown in Figure 201. O-rings required for the landing gear, power control systems, etc., will be found in the applicable chapters.
- (2) O-ring part numbers shown in Figure 201 are interchangeable with Douglas standard (S-XXXXXXXX) numbers listed in the Illustrated Parts Catalog and on engineering drawings.

2. Pressurize/Depressurize Hydraulic System

A. Pressurize Hydraulic System with External Hydraulic Source Pressure

- (1) Tools and Equipment Required: A hydraulic test stand equipped with a variable-displacement hydraulic pump capable of delivering 20 gpm at 3000 psi, using Skydrol hydraulic fluid. The maximum permissible operating temperature should not exceed 180°F (82.2°C).
- (2) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (3) Make certain that wing flap control handle agrees with wing flap position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Remove dust caps from airplane ground service connections and connect test stand pressure and supply hoses.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

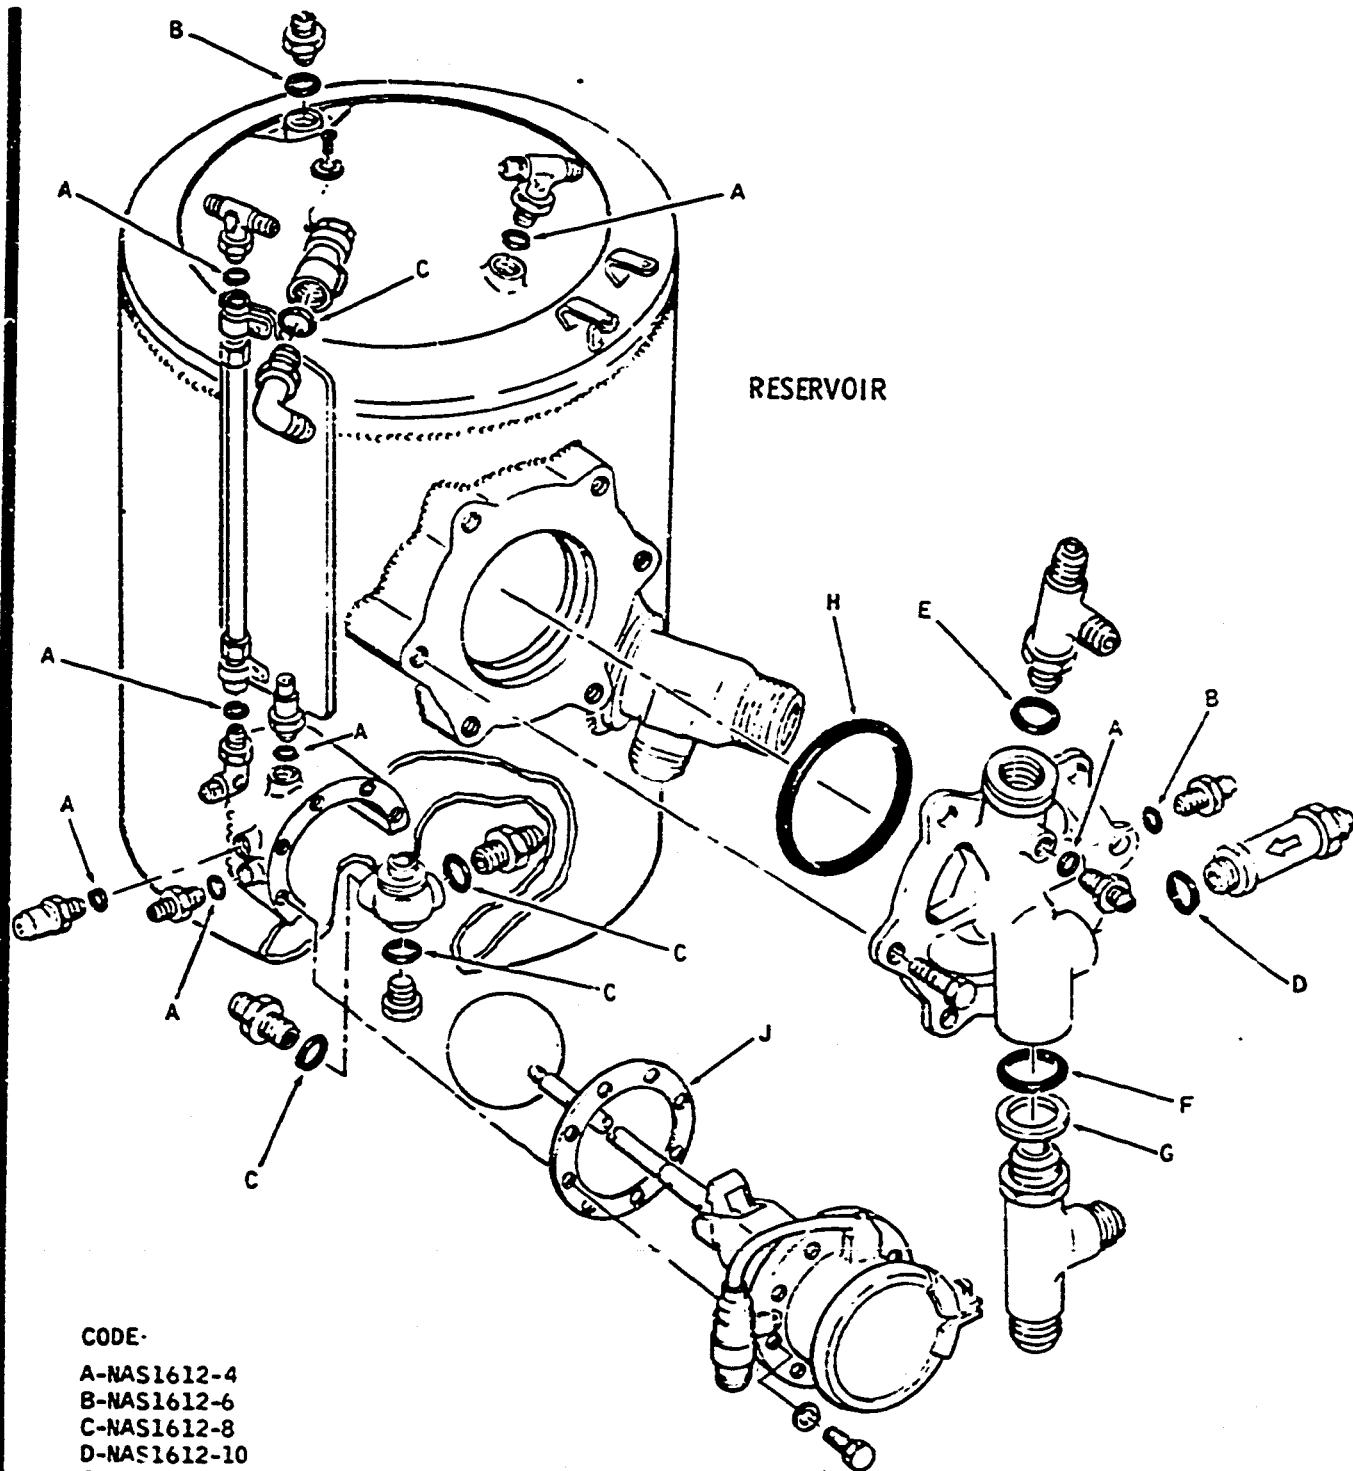

CODE-

A-NAS1612-4  
 B-NAS1612-6  
 C-NAS1612-8  
 D-NAS1612-10  
 E-NAS1612-12  
 F-NAS1612-16  
 G-MS28777-16  
 H-AN1611-256  
 J-2649217 DOUGLAS AIRCRAFT CO.

HA2-1100C

Hydraulic Power System Components -- O-rings  
 (Airplanes N8070U-N8075U)  
 Figure 201 (Sheet 1)


29-00  
 CODE 1  
 Page 204

Printed in U.S.A.

Oct 1/67



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

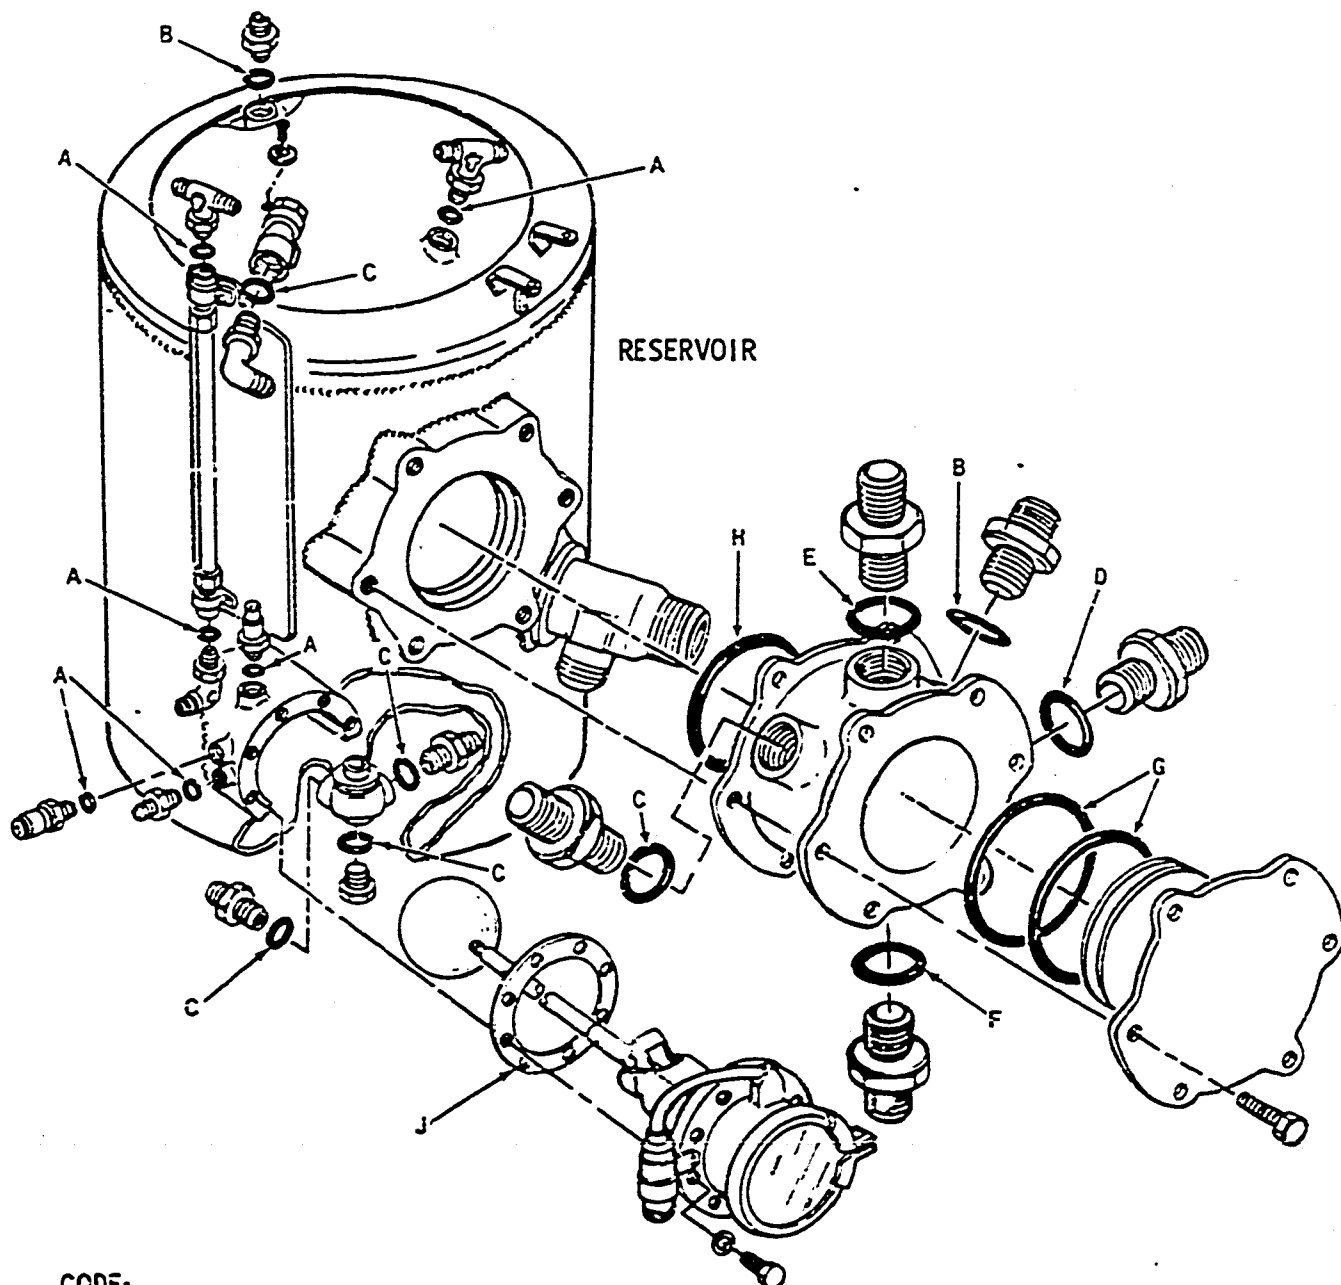

CODE:

- A - NAS 1612-4
- B - NAS 1612-6
- C - NAS 1612-8
- D - NAS 1612-10
- E - NAS 1612-12
- F - NAS 1612-16
- G - NAS 1611-251
- H - NAS 1612-256
- J - 2649217 DOUGLAS AIRCRAFT CO.

Hydraulic Power System Components -- O-rings  
 (Airplanes N8076U and Subsequent)  
 Figure 201 (Sheet 2)


HA2-3676C

Dec 1/73


Printed in U.S.A.

29-00  
 CODE 1  
 Page 205

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

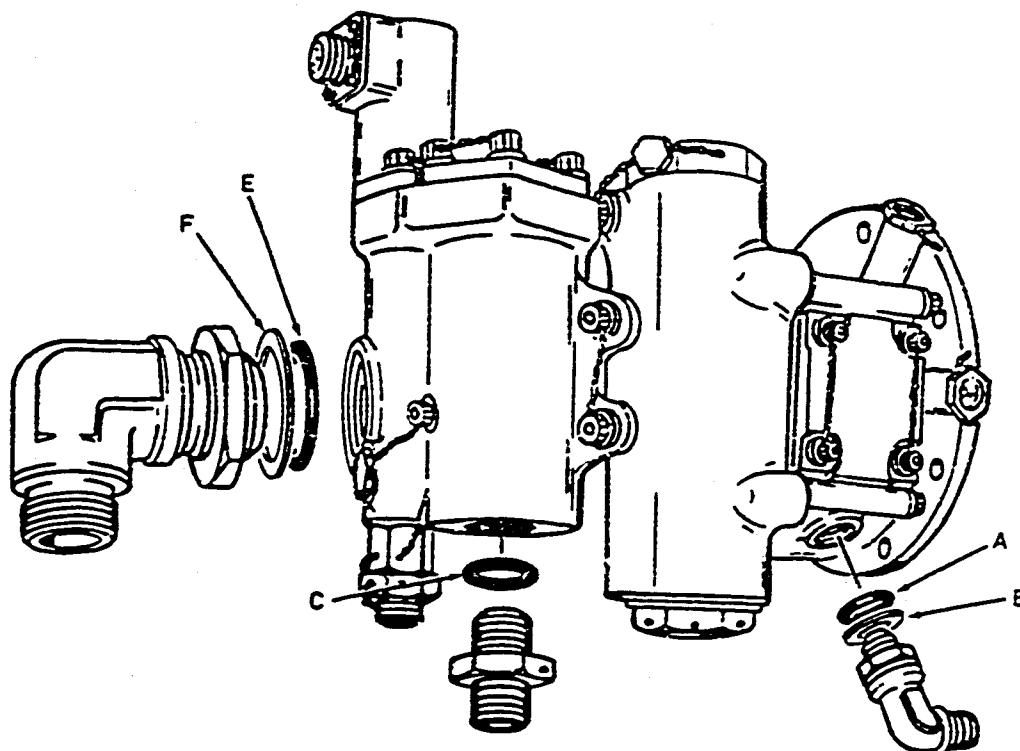

AIRPLANES N8070U-N8082U

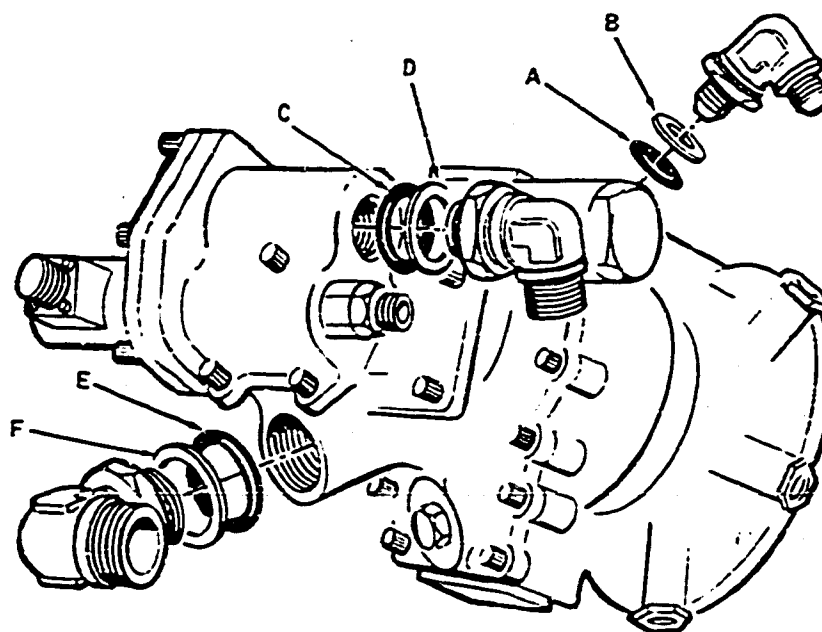

AIRPLANES N8083U-N8099U


- A - NAS 1612-6
- B - MS28777-6\*
- C - NAS 1612-10
- D - MS28777-10\*
- E - NAS 1612-20
- F - MS28777-20\*

\*BACKUP RING

Hydraulic Power System Components -- O-Rings  
 Figure 201 (Sheet 3)

HA2-4465A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

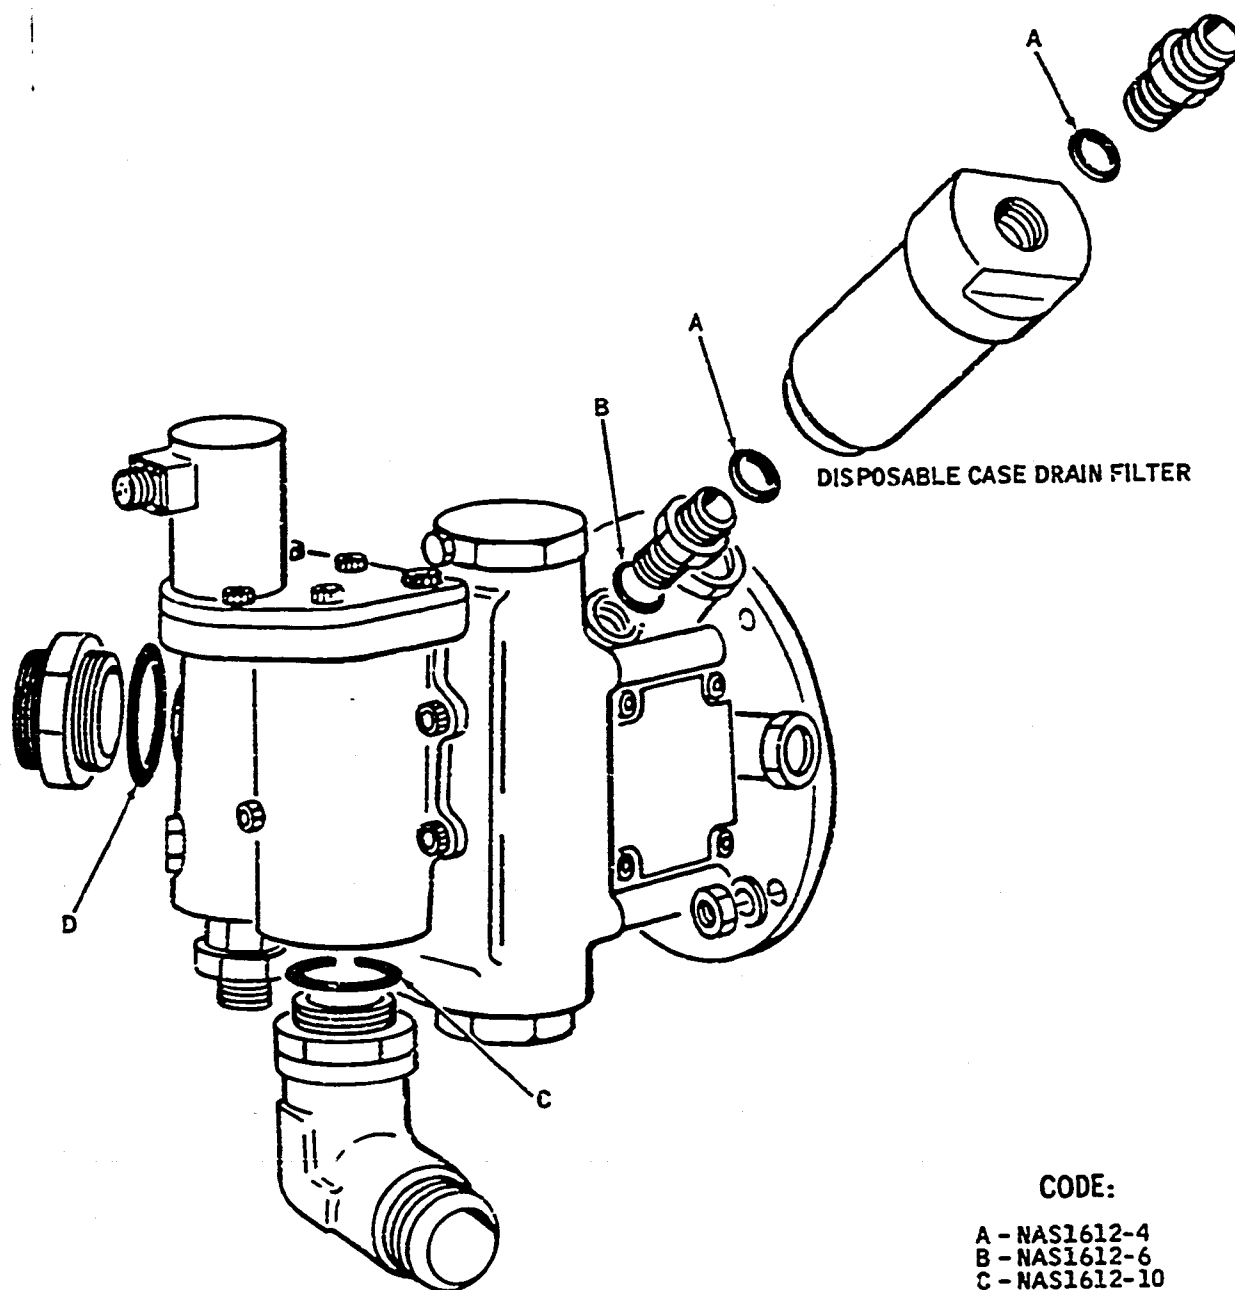

CODE:

A - NAS1612-4  
B - NAS1612-6  
C - NAS1612-10  
D - NAS1612-20


HA2-6044A

Hydraulic Power System Components -- O-Rings  
(Airplanes N8966U and Subs)  
Figure 201 (Sheet 3A)


Aug 1/69

29-00  
CODE 1  
Page 206A


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

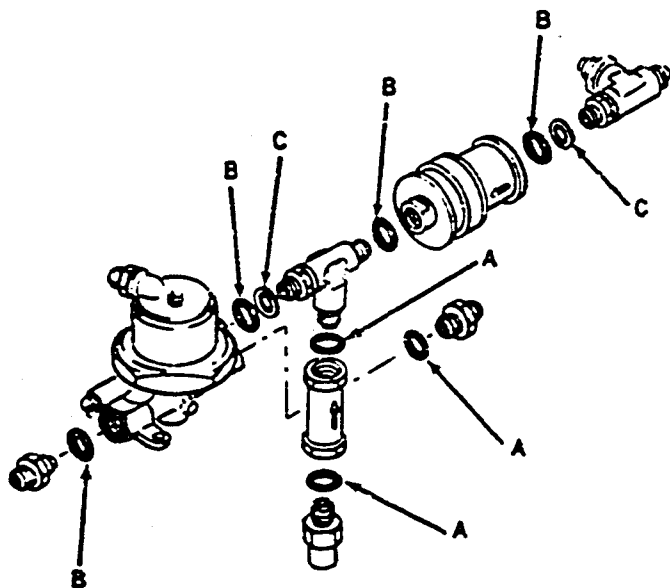


REGULATOR - ASPIRATOR  
 AND AIR FILTERS

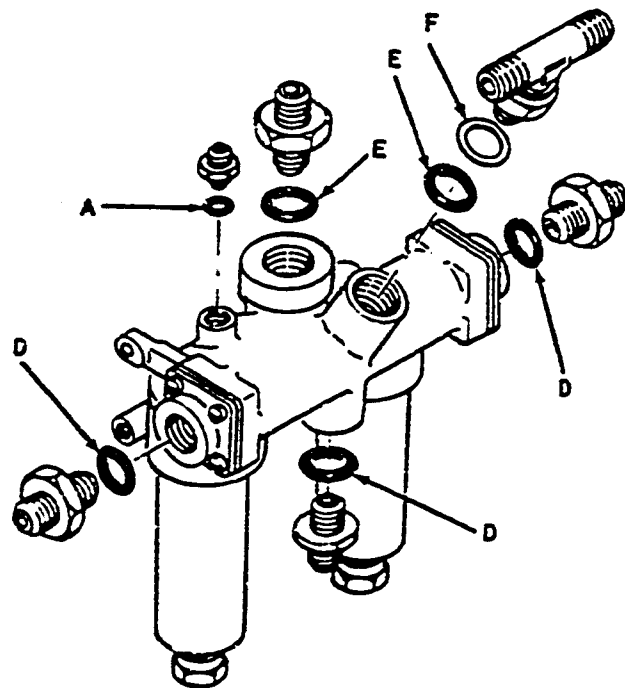

DUAL-FILTER &  
 RELIEF VALVE

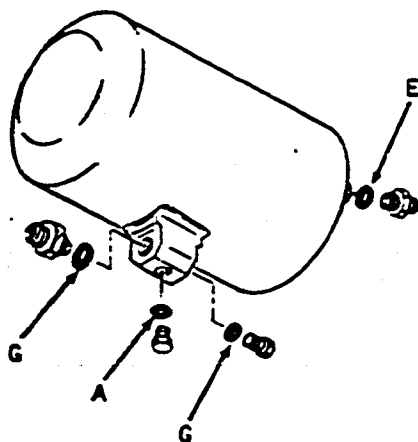

HYDRAULIC RESERVOIR  
 AIR CHAMBER

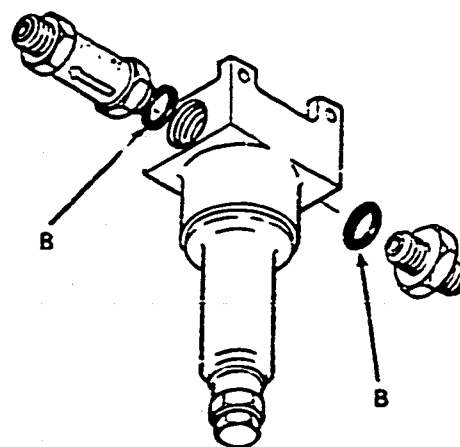

HYDRAULIC  
 PUMPCASE DRAIN  
 FILTER


CODE:

- A - NAS1612-4
- B - NAS1612-6
- C - MS28777-6\*
- D - NAS1612-10
- E - NAS1612-12
- F - MS28777-12\*
- G - NAS1612-16
- \* - BACKUP RING


Hydraulic Power System Components -- O-Rings  
 (Airplanes N8070U-N8099U)  
 Figure 201 (Sheet 4)

HA2-1101A


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

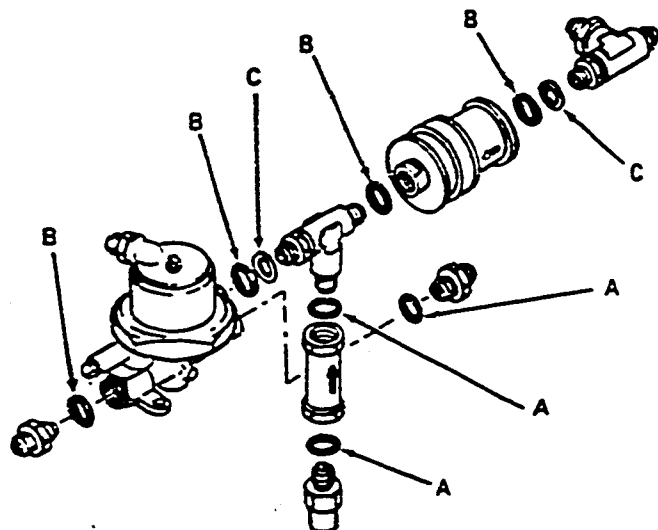


REGULATOR - ASPIRATOR  
 AND AIR FILTERS

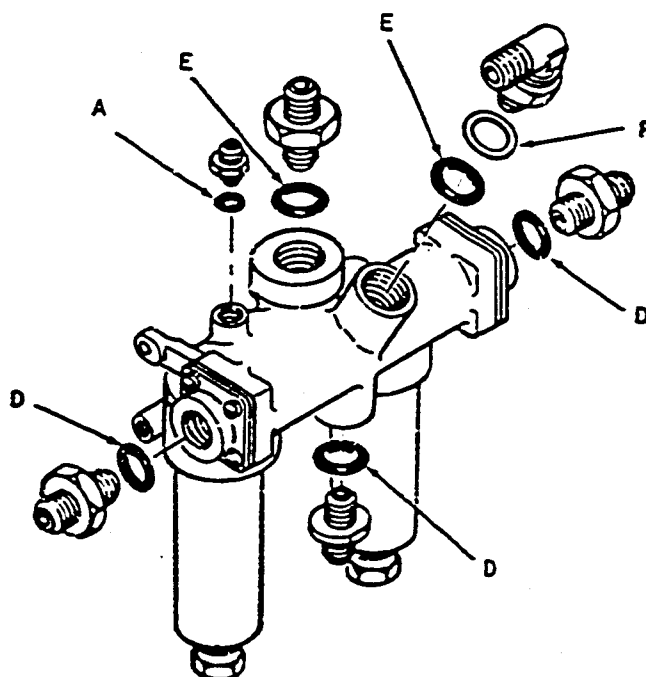

DUAL-FILTER &  
 RELIEF VALVE

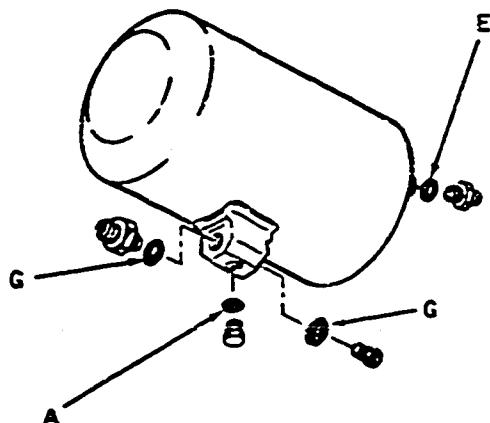

HYDRAULIC RESERVOIR  
 AIR CHAMBER

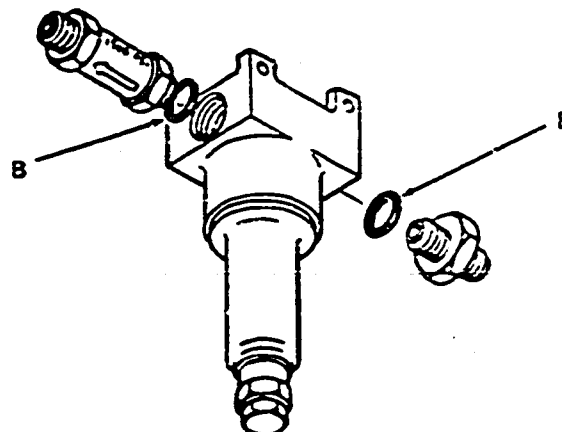

HYDRAULIC  
 PUMPCASE DRAIN  
 FILTER

CODE

- A - NAS1612-4
- B - NAS1612-6
- C - MS28777-6 \*
- D - NAS1612-10
- E - NAS1612-12
- F - MS28777-12 \*
- G - NAS1612-16
- \* - BACKUP RING

Hydraulic Power System Components -- O-Rings  
 (Airplanes N8966U and Subsequent)  
 Figure 201 (Sheet 4A)


Feb 1/69

Printed in U.S.A.

HA2-3415B


29-00  
 CODE 1  
 Page 207

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

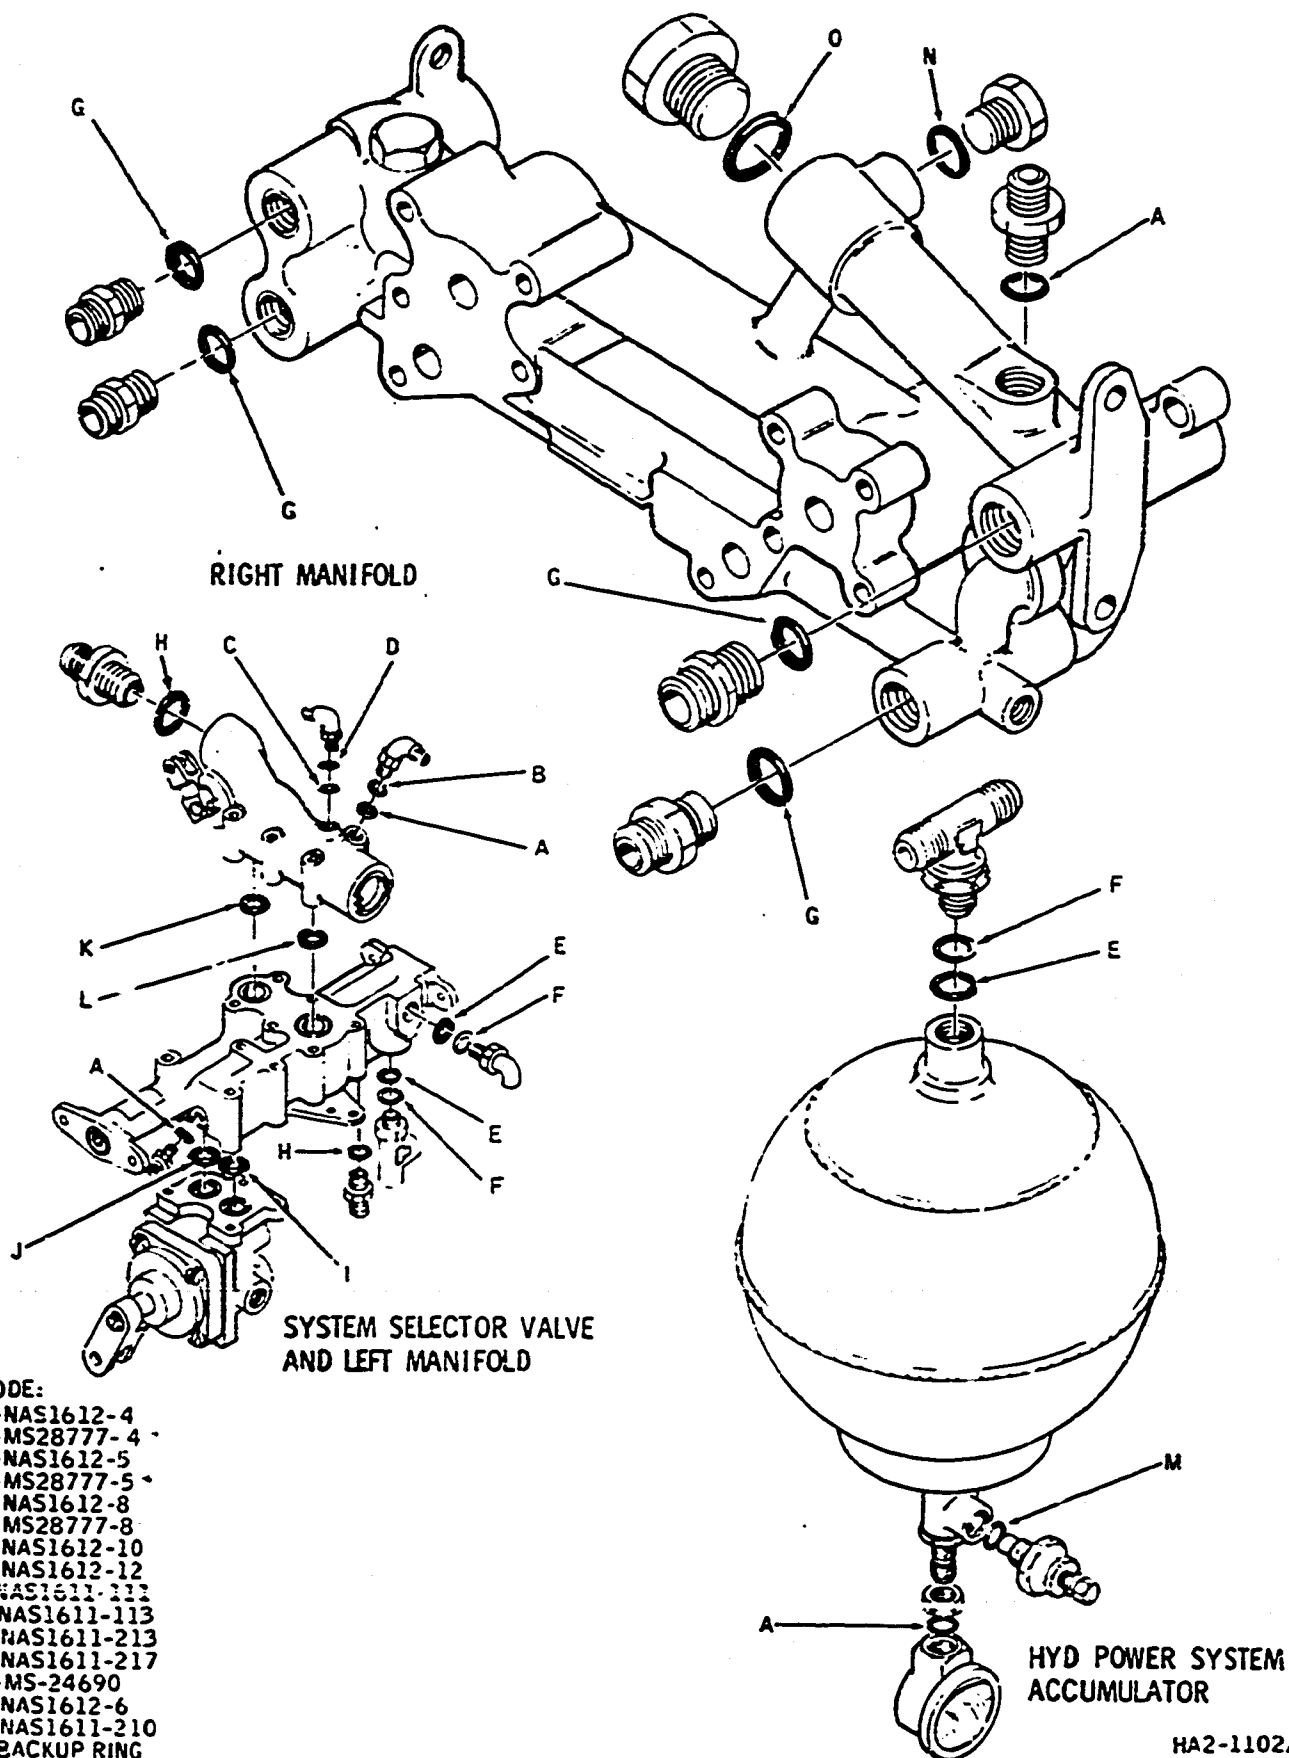

Hydraulic Power System Components -- O-Rings  
 (Airplanes N8070U-N8099U)  
 Figure 201 (Sheet 5)

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

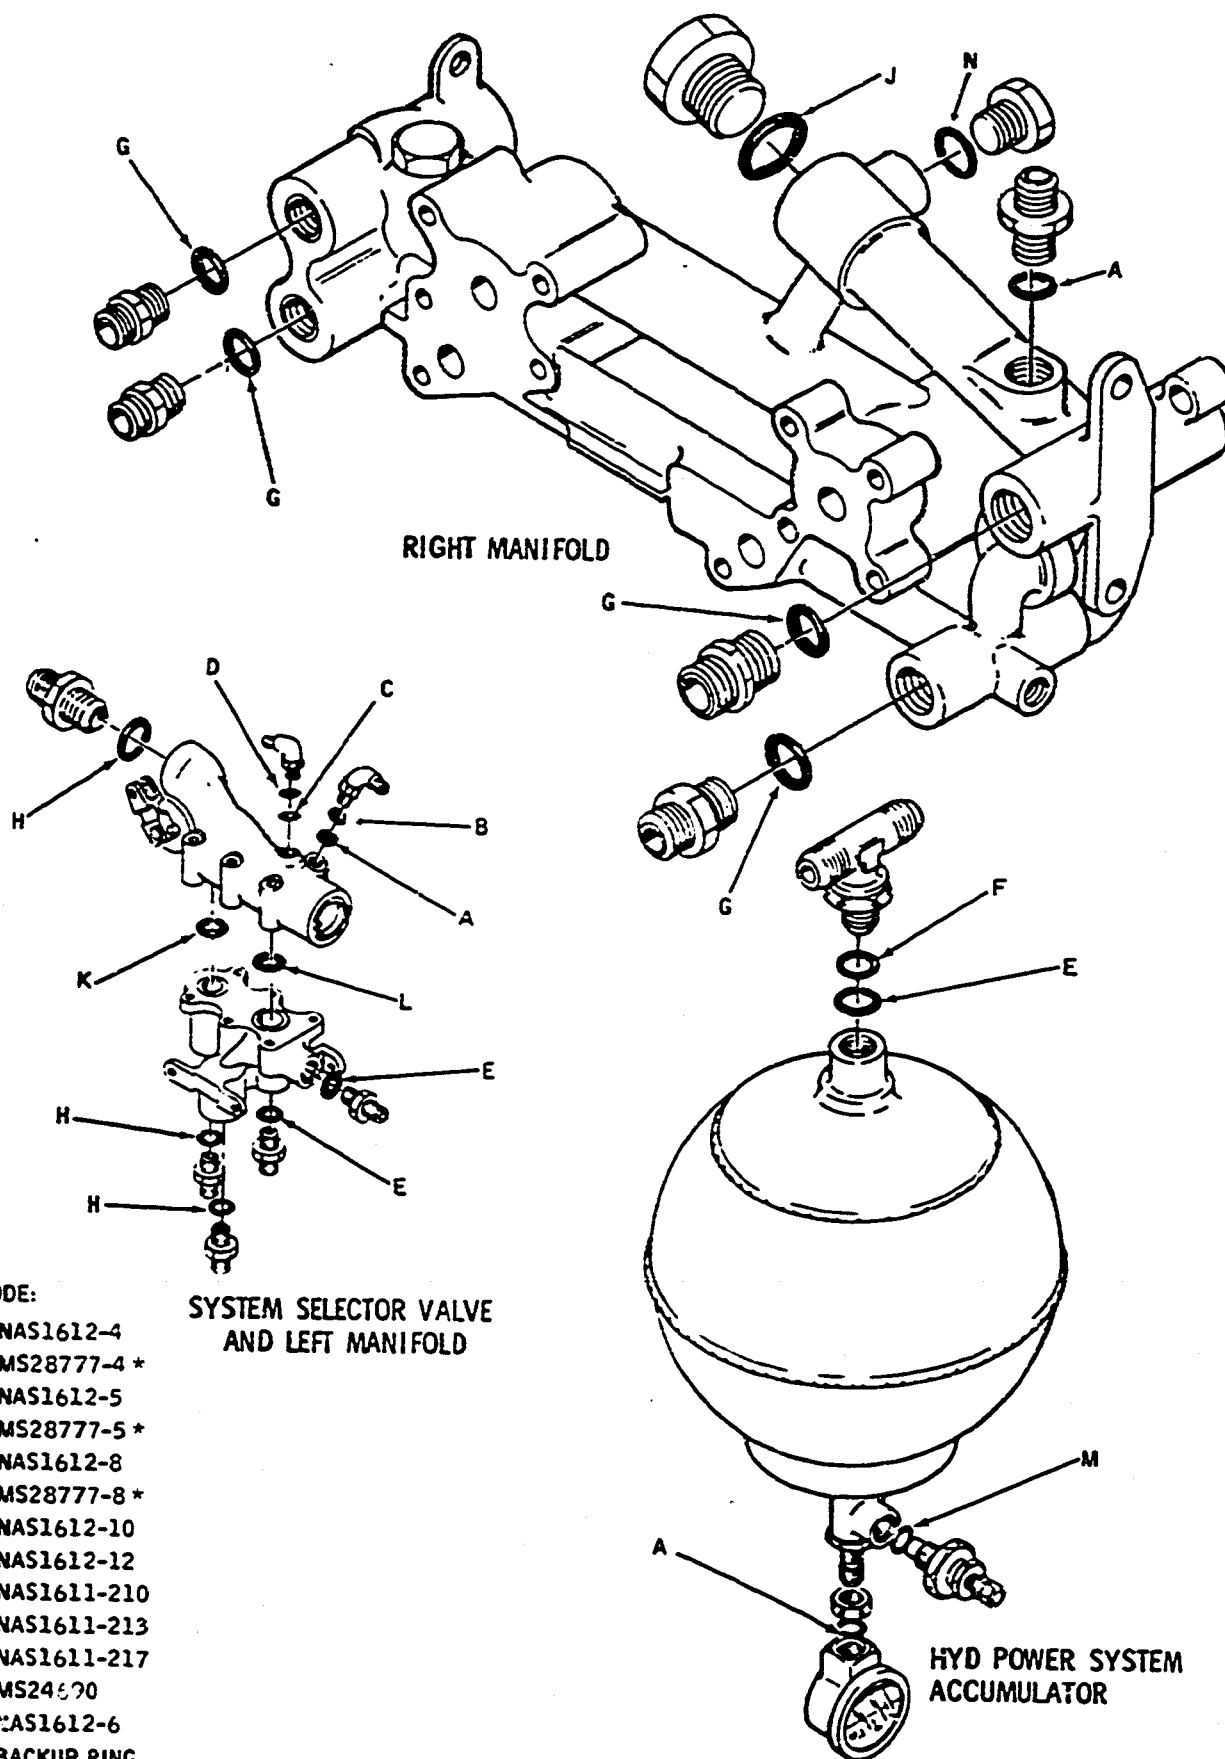

Hydraulic Power System Components -- O-Rings  
 (Airplanes N8966U and Subsequent)  
 Figure 201 (Sheet 5A)

HA2-1678A


29-00

CODE 1

Page 208A


Feb 1/69

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

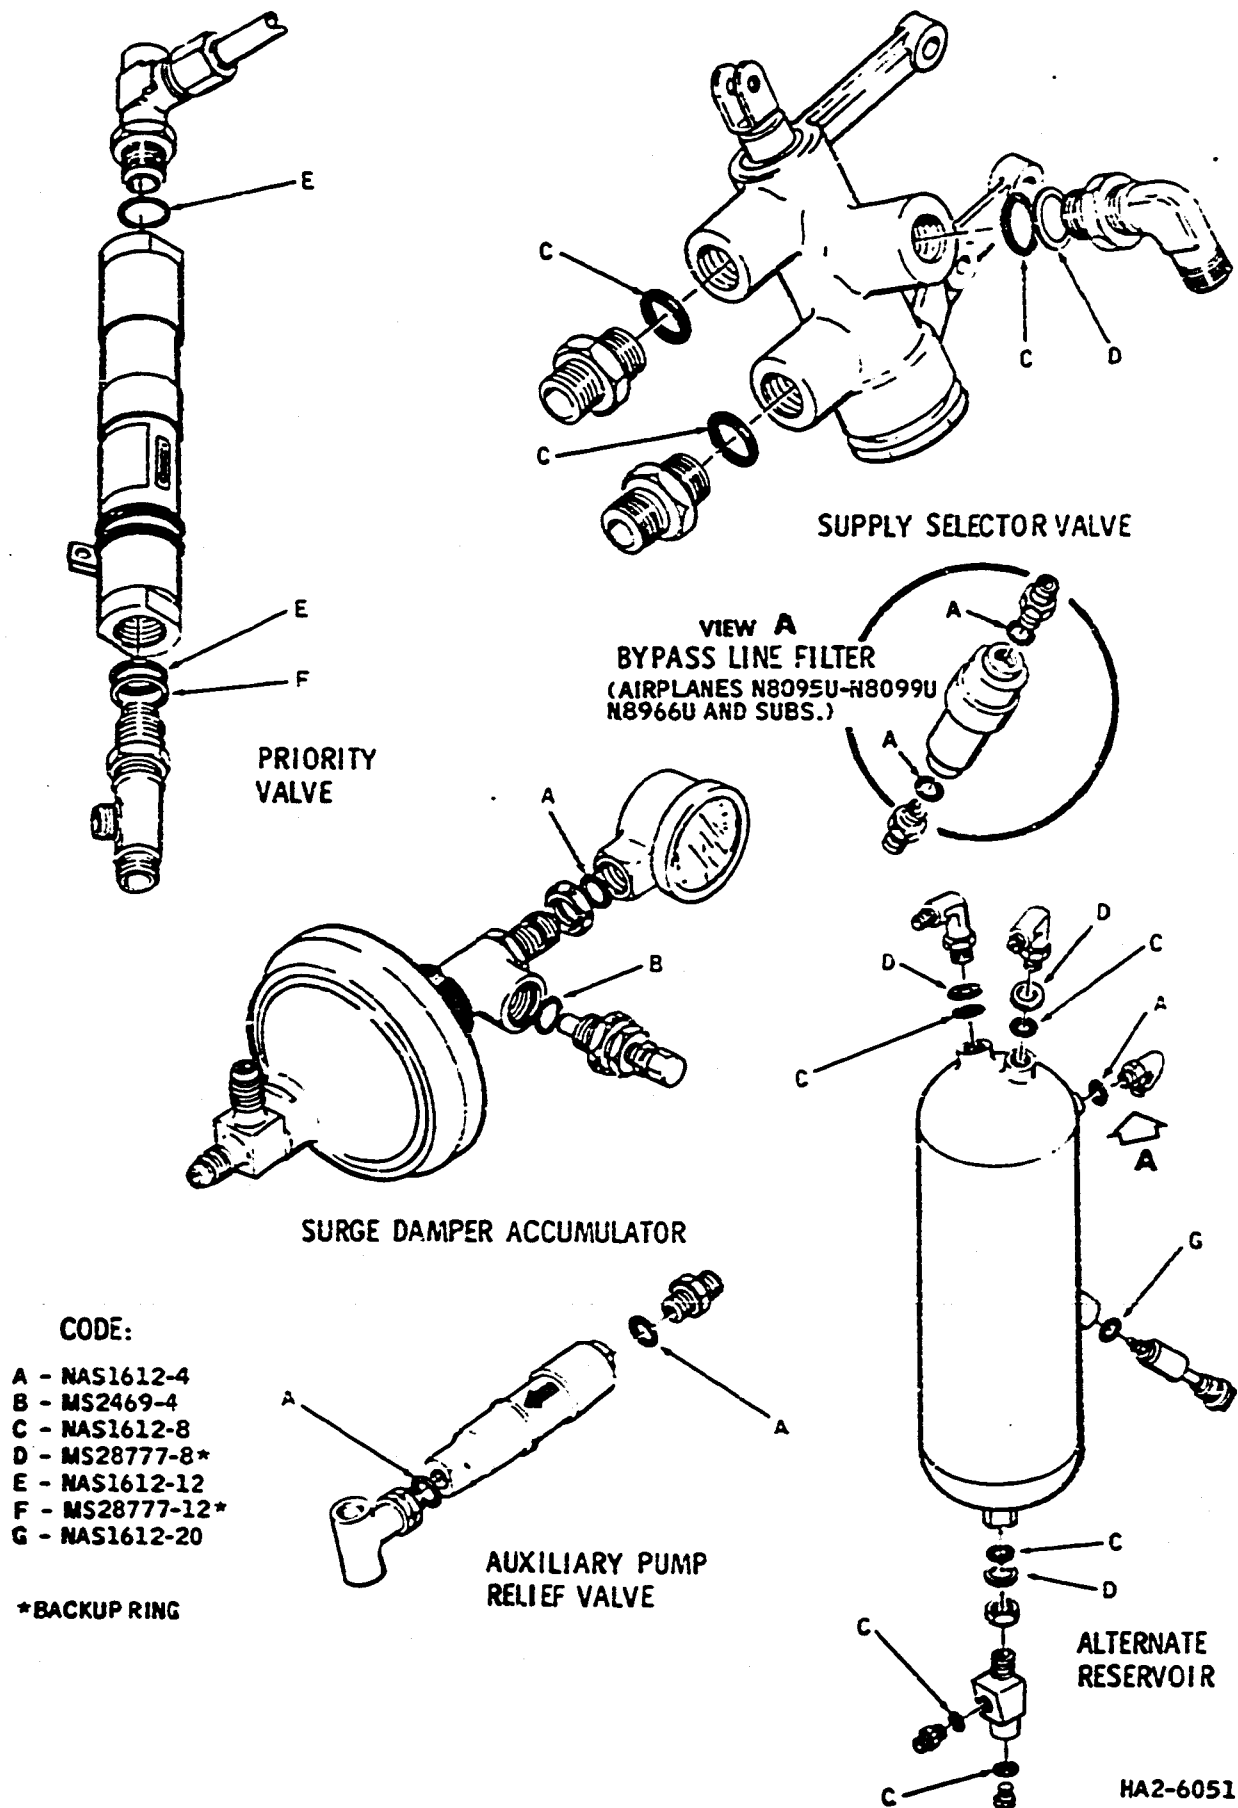




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

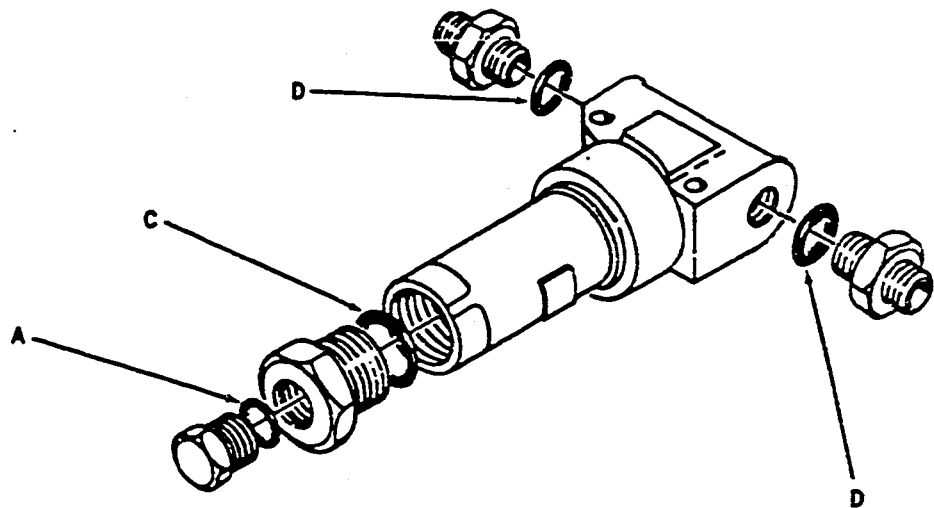

AUX HYD SYSTEM FILTER

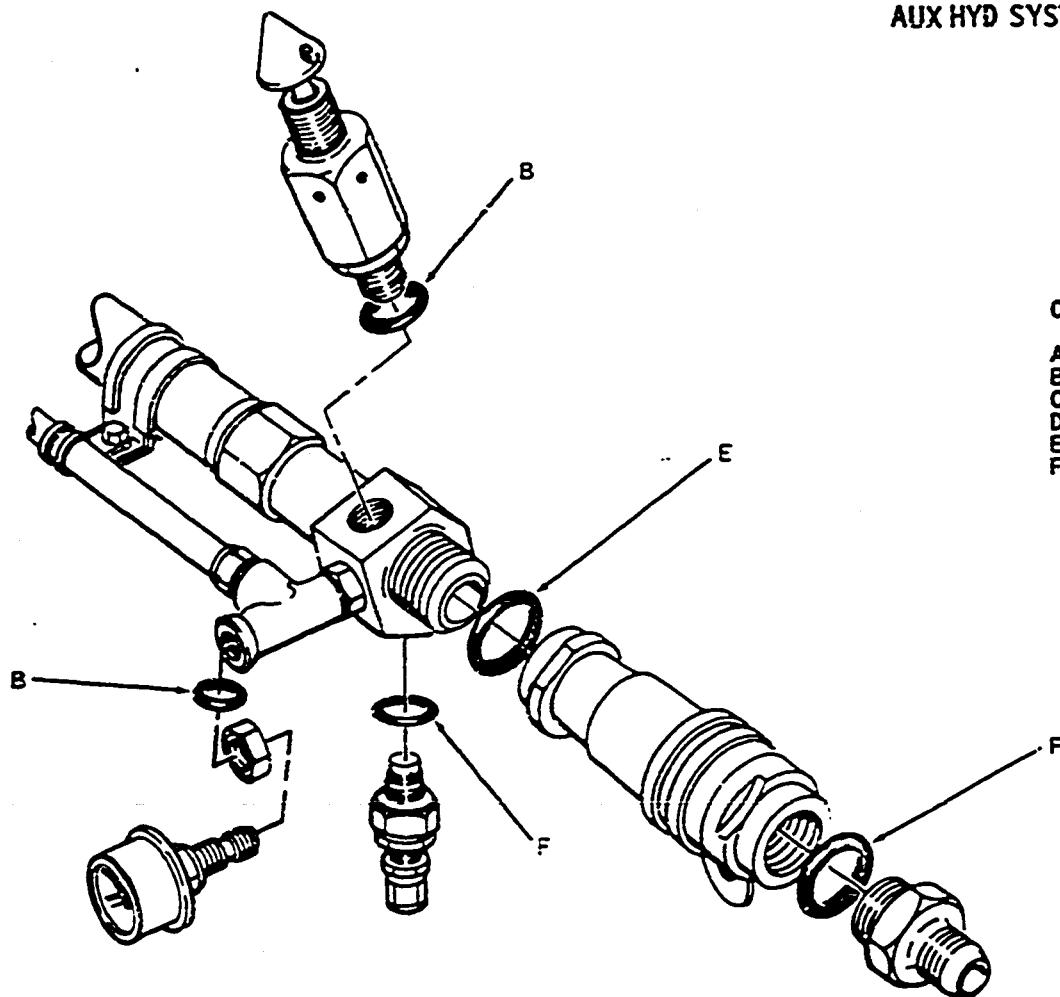

CODE:

A-NAS1612-2  
 B-NAS1612-4  
 C-NAS1612-6  
 D-NAS1612-8  
 E-NAS1612-12  
 F-MS24690

RESERVOIR AIR BLEED VALVE,  
 FILTER VALVE, PRESSURE GAGE,  
 AND RELIEF VALVE

Hydraulic Power System Components -- O-Rings  
 Figure 201 (Sheet 7)

HA2-4463



Feb 1/69

Printed in U.S.A.

29-00  
 CODE 1  
 Page 208C

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

AIRPLANES  
 N8070U-N8076U

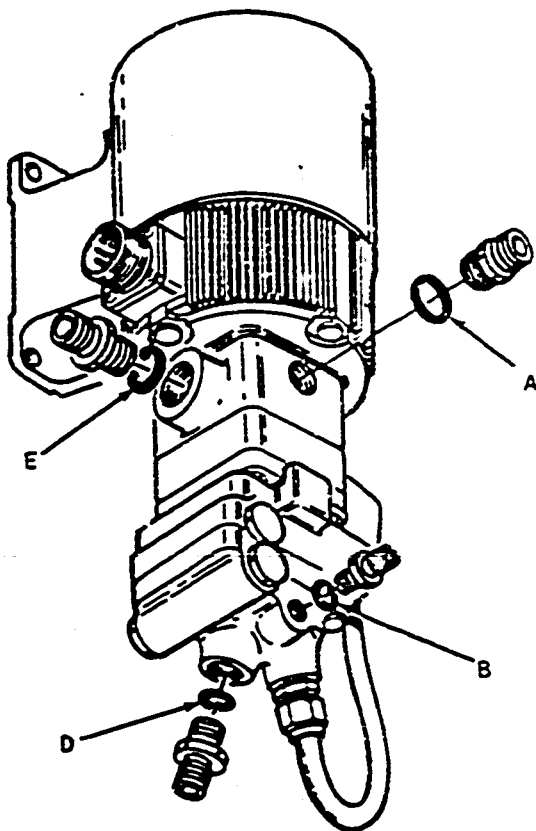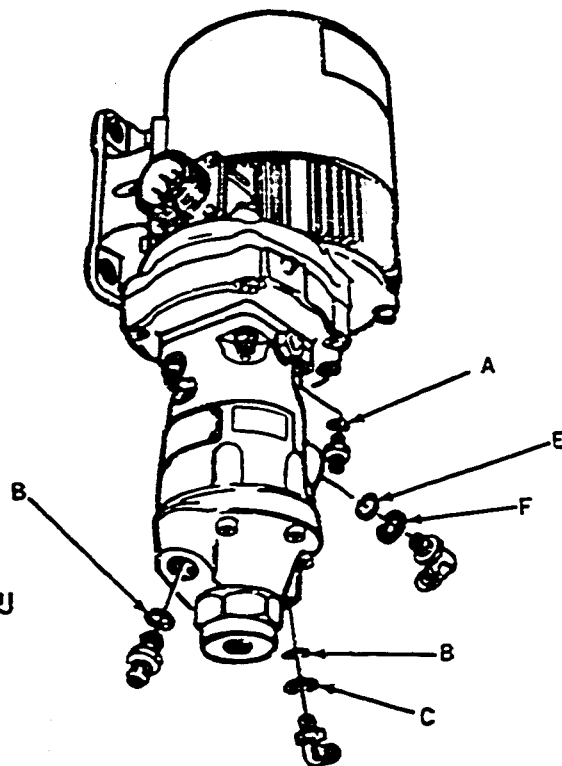

AIRPLANES  
 N8077U AND  
 SUBSEQUENT

CODE:

A-NAS 1612-2  
 B-NAS 1612-4  
 C-MS28777-4 \*  
 D-NAS 1612-6  
 E-NAS 1612-10  
 F-MS28777-10 \*  
 \*BACKUP RING

HA2-4464

Hydraulic Power System Components -- O-Rings  
 Figure 201 (Sheet 8)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Energize test stand hydraulic pump; pressurize hydraulic system to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT ALL FLIGHT CONTROL SURFACES AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

**B. Depressurize and Disconnect**

- (1) Check hydraulic fluid level of hydraulic reservoir; fill if necessary as described on instruction placard on reservoir.
- (2) Deenergize test stand hydraulic pump.
- (3) Depressurize hydraulic system by operating the brakes and manually moving the longitudinal trim handle until horizontal stabilizer movement stops.
- (4) Disconnect and cap test stand pressure and supply hoses from airplane ground service connections; install duct caps on connections and close access door.

**C. Pressurize Hydraulic System With Auxiliary Hydraulic Pump Pressure**

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap control handle agrees with wing flap position.
- (3) Place hydraulic system selector control lever in general system/bypass position.
- (4) Check that airplane electrical buses are energized (see Chapter 24).
- (5) Start auxiliary hydraulic pump by placing auxiliary hydraulic pump control switch momentarily in start position. Pressure indicated in the flight compartment should be 2600 to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT ALL FLIGHT CONTROL SURFACES AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

**CAUTION:** DO NOT HOLD THE AUXILIARY HYDRAULIC PUMP CONTROL SWITCH IN THE START (HOLD ONLY IN EMERGENCY) POSITION FOR NORMAL PRESSURIZATION.

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

D. Depressurize

- (1) Stop auxiliary hydraulic by placing auxiliary hydraulic pump control switch momentarily in stop position.
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.
- (3) Place hydraulic system selector control lever in general system (normal) position.

E. Pressurize Hydraulic System With Engine-Driven Hydraulic Pump Pressure

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap handle agrees with wing flap position.
- (3) Make certain that applicable fire control handle is in normal position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Make certain that applicable engine-driven hydraulic pump control switch is in on position.
- (6) Start engine No. 2 or No. 3 (see Chapter 71). Hydraulic pressure indicated in the flight compartment should be 2800 to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT ALL FLIGHT CONTROL SURFACES AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

F. Depressurize

- (1) Shut down engine (see Chapter 71).
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.

3. Pressurize/Depressurize Hydraulic Reservoir

A. General

- (1) The air inflation valve, air bleed valve, and air pressure gage for manually pressurizing and depressurizing the hydraulic reservoir and air chamber are located in the aft side of the wing rear spar, at the forward end of the left main gear wheel well. The valves and gage are

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

mounted on a cross fitting just inboard of the reservoir air chamber. Access is through the left main gear inboard door.

B. Tools and Equipment Required

- (1) Pressure cylinder (clean dry compressed air or nitrogen).

C. Pressurize Hydraulic Reservoir

NOTE: Normal air pressure in the reservoir and air chamber should be between 30 and 35 psi.

NOTE: There are three methods of pressurizing the hydraulic reservoir:

- (1) Run an inboard engine.
- (2) Connect and operate a hydraulic test stand.
- (3) Direct pressurization of air chamber by introduction of compressed air or nitrogen.

The first two methods are automatic in that the reservoir is pressurized by action of the hydraulic fluid through the regulator-aspirator when the system is pressurized. The third method (direct inflation) will be described in the following steps.

- (1) Remove air inflation valve cap and attach pressure cylinder service hose to inflation valve.
- (2) Loosen inflation valve swivel nut three complete turns.

NOTE: The rate of inflation (flow through the valve) is governed by the degree of opening of the swivel valve.

- (3) Pressurize reservoir to 30 to 35 psi reading on air pressure gage.
- (4) Tighten swivel nut.
- (5) Disconnect service hose and install valve cap.

CAUTION: THE AIR INFLATION VALVE IS A STANDARD 'AN' VALVE WHICH HAS BEEN MODIFIED BY INSTALLATION OF SKYDROL TYPE SEALS. DO NOT REPLACE THE VALVE WITH A VALVE WHICH HAS NOT BEEN MODIFIED FOR SKYDROL.

D. Depressurize Hydraulic Reservoir

- (1) Depress air bleed valve button; hold until all pressure has bled off and pressure gage reads zero.

Jun 15/67

Printed in U.S.A.

29-00  
CODE 1  
Page 211

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

4. Drain Hydraulic System Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.
- (2) Clean container of approximately 20 US gallons (16.65 Imperial gallons or 75.7 liters) capacity.

B. Drain Reservoir

- (1) Depressurize hydraulic system and reservoir (see paragraphs 2 and 3).
- (2) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (3) Remove drain unit, and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

5. Drain Auxiliary Hydraulic Pump Alternate Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.
- (2) Clean container of approximately 3 US gallons (2.5 Imperial gallons or 11.5 liters) capacity.

B. Drain Reservoir

- (1) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (2) Remove drain unit and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

6. Hydraulic System Pressure Decay Rates

A. Decay Rate Test

- (1) By observing the time it takes for the hydraulic system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi, it is possible, in most cases, to detect units that are leaking excessively. This procedure is not infallible because the sum of the maximum allowable leakage rates determines the minimum time permissible for pressure decay. The hydraulic system

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

with average leakage will maintain pressure for longer periods than indicated and may do so even with one unit leaking excessively.

- (2) The main hydraulic system should be tested for pressure decay time under the following conditions:
  - (a) System selector valve in general system/bypass or general system (normal).
  - (b) Nosewheel straight ahead plus or minus 30 degrees and steering valve in neutral position.
  - (c) Manual main gear door valve open
  - (d) Landing gear down and locked.
  - (e) Wing flaps up.
  - (f) Accumulators properly charged.
  - (g) Aileron shutoff valve off.
  - (h) Rudder shutoff valve off.
  - (i) Thrust reversers stowed (airplanes N8966U and subsequent).
- (3) Pressurize main hydraulic system to 2900 ( $\pm 100$ ) psi with auxiliary pump or hydraulic test stand. Then shut off hydraulic power source and note time interval required for system pressure to decrease 1000 psi. This should be more than 34 seconds on a new airplane or more than 23 seconds on an airplane in service before overhaul. If pressure decay time is less, the main hydraulic system should be inspected for a malfunctioning unit.
- (4) If pressure decay test indicates that a unit in the main hydraulic system was leaking excessively, that unit may be in the nose or main gear subsystem, the main gear door subsystem, the flap subsystem, the slot subsystem, the selector valve, or the compressor subsystem. By placing the subsystem control valves in opposite positions one at a time and repeating the pressure decay test, it is possible that the faulty unit may be located.
- (5) Rudder power hydraulic system may be tested for pressure decay time by using procedures outlined in steps (2) and (3), except that the rudder shutoff valve should be on. Decay time should be more than 10 seconds on a new airplane or more than 8 seconds on an airplane in service before overhaul. If less, the rudder power system should be inspected for a malfunctioning unit.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Supplementary information may be obtained for the rudder power hydraulic system by using the auxiliary rudder system pump and accumulator air gage to test the time for rudder pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi. With the rudder hydraulic power shutoff valve off, the time should be more than 2 minutes. With the rudder hydraulic power shutoff valve on, the time should be 12 seconds on a new airplane and 10 seconds on an airplane in service before overhaul.
- (7) Aileron hydraulic power system may be tested for pressure decay by using procedures outlined in steps (2) and (3), except that the aileron hydraulic power shutoff valve should be on. The decay time should be more than 6-1/2 seconds on a new airplane or more than 4-1/2 seconds on an airplane in service before overhaul. If less, the aileron power system should be inspected for a malfunctioning unit.
- (8) Brake system and the nose gear steering system are isolated from the main hydraulic system by check valves and may be tested separately. Using the brake accumulator gages, the pressure decay time for the brake system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 10 hours with the parking brake off, and 2 hours with the parking brake on. With the brake accumulators fully charged, deplete the general system pressure. Wait 3 to 5 minutes and then set the parking brake and hold the parking brake pressure for 15 minutes. The drop in pressure at the brake accumulators should not exceed 125 psi during this time.
- (9) Release the parking brakes, and build up brake accumulator pressure to 2900 ( $\pm 100$ ) psi. With hydraulic power off and brakes off, check brake accumulator pressure. Drop in pressure at the accumulators should not exceed 100 psi in 30 minutes. Fast decay time for the brake system with parking brake off, indicates either a faulty brake valve or a faulty check valve in the right manifold. A fast decay time with the parking brake on indicates a faulty antiskid valve or a faulty brake valve.
- (10) Using the gages on the nose pressure accumulators, the time for the nose gear steering system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 19 minutes. If less, one of the pressure check valves is faulty, or the nose gear steering control valve is faulty or out of neutral.

**CAUTION:** ALL LANDING GEAR GROUND LOCKPINS MUST BE INSTALLED BEFORE CONDUCTING THE FOLLOWING TEST.

- (11) Under conditions outlined in step (2), except with the landing gear control valve in the up position, the time for pressure decay should be unchanged. If time limits change more than 5 seconds as determined in paragraph (3), a faulty unit is in the gear subsystem.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (12) Under conditions outlined in step (2), except with the main gear door manual control valve in the closed position, the decay time should be more than 24 seconds on a new airplane and 18 seconds on an airplane in service before overhaul. If less, the faulty unit is in the main gear door subsystem.
- (13) Under conditions outlined in step (2), except with the flap control valve in the down position, the decay time should be more than 24 seconds on a new airplane and 17 seconds on an airplane in service before overhaul. If less, the faulty unit is in the flap subsystem.
- (14) Under conditions outlined in step (2), time limit for pressure decay should remain unchanged as determined in paragraph (3) with the slot valve in either position, or the selector valve in either general system/bypass or general system (normal). If the time changes with a change of valve position, the faulty unit is in that subsystem.
- (15) On airplanes N8966U and subsequent, the thrust reverser system is hydraulically actuated and is isolated from the main system by an electrically operated shutoff valve which is open only during thrust reverser actuation. Therefore, main system decay is not affected by the thrust reverser system except during reverser actuation or at the thrust reverser extended position. Additional information may be obtained for the thrust reverser system by using the auxiliary reverser system pump and reverser system pressure gage or accumulator gage to test the time for reverser pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi. With the reversers in the stowed position, the decay time should be greater than 3 minutes on a new aircraft or greater than 1-1/2 minutes on an aircraft in service before overhaul. If times are less, the reverser system should be inspected for a malfunction.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - MAINTENANCE PRACTICES

1. General

A. Skydrol Safety Precautions

- (1) Before performing any operation on the hydraulic system, personnel should read and thoroughly understand the following precautions to be observed when working with Skydrol hydraulic fluid.

WARNING: OBSERVE THE FOLLOWING SAFETY PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. LONG EXPOSURE TO SKYDROL CAN CAUSE SKIN DEHYDRATION AND CHAPPING.

- (2) Wash hands thoroughly with soap and water before starting work.
- (3) Apply barrier cream to hands, wrists, and forearms. Rub cream under finger nails and into creases of skin.
- (4) Wear goggles when pressure testing components or systems, and whenever there is any possibility of Skydrol splashing into eyes.
- (5) If Skydrol splashes in eyes, treat eyes immediately by irrigating thoroughly with clear cold water, and report the incident.
- (6) Wash hands, wrists, and forearms with soap and hot water whenever they have come in contact with Skydrol.
- (7) If clothing becomes soaked with Skydrol; remove clothing as soon as possible, thoroughly wash skin, and put on clean clothing.

B. Technical Precautions

- (1) Before any maintenance is performed on the hydraulic system, personnel should read and thoroughly understand the following precautions. Careful adherence to these instructions will aid in maintaining a functional and trouble-free system.

CAUTION: OBSERVE THE FOLLOWING TECHNICAL PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. SKYDROL WILL ATTACK A WIDE RANGE OF MATERIALS INCLUDING RUBBER, COPPER, VARIOUS PLASTICS, AND PAINTS.

- (2) Ensure that Skydrol does not come into contact with any part of aircraft outside of the hydraulic system. Keep spillage to an absolute minimum. Clean up spilled hydraulic fluid immediately to prevent entry into adjacent areas of the airplane precluding future false hydraulic leak reports. If spillage occurs, wipe up the fluid with a dry cloth and wash contaminated area with soap and hot water.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) When lines are disconnected and/or components are removed, provide suitable protection to prevent foreign material from entering the lines or components by use of caps, covers, clean lint-free rags, etc.
- (4) When electrical connectors are disconnected, install caps or other suitable protectors to prevent entry of hydraulic fluid, moisture, and foreign objects.
- (5) Always check position and angle of all fittings removed from components to ensure placement and alignment when installing replacement components.
- (6) When washing metal parts before assembly, use only approved solvent, and ensure that all traces of the solvent are removed before assembly.
- (7) Use only clean Skydrol for flushing or testing hydraulic components.
- (8) Use only clean Skydrol when filling reservoirs, sumps, filter bowls, pumps, etc., before installation of components.
- (9) Do not unpack Skydrol O-rings and seals until required. Ensure that only approved rings and seals are used.
- (10) When assembling O-rings and seals, lubricate with Skydrol Assembly Lubricant, MCS 352, Monsanto Chemical Company, or clean Skydrol hydraulic fluid.
- (11) Take care to prevent contamination of Skydrol with other materials (oils, water, dirt, etc.).
- (12) If a system becomes contaminated with any petroleum-based oil or solvent, drain the system and flush with clean Skydrol.

C. Landing Gear Precautions

- (1) The landing gear control lever should be in the down position and the landing gear ground lockpins should be installed in the main and nose gears at all times during ground maintenance, except as noted in maintenance procedural steps.
- (2) The main gear wheels should be checked at all times during ground maintenance, except as noted in maintenance procedural steps.
- (3) The hydraulic system selector control lever should be in the general system (normal) position at all times during ground maintenance, except as noted in maintenance procedural steps.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) The main gear bogie beams should be locked in the trail position at all times, except as noted in maintenance procedural steps.

**WARNING:** WHEN THE AIRPLANE IS ON WING AND FUSELAGE JACKS, THE MAIN GEAR WHEELS ARE CLEAR OF THE GROUND, AND THE HYDRAULIC POWER SYSTEM IS PRESSURIZED, THE AFT BOGIE AND WHEELS WILL SWING OUTBOARD VERY RAPIDLY IN THE DIRECTION OF NOSEWHEEL TURN IF THE NOSEWHEELS ARE TURNED MORE THAN 40 DEGREES. BOGIE AND MAIN GEAR AFT WHEELS WILL RETURN TO TRAIL POSITION JUST AS RAPIDLY WHEN THE NOSEWHEELS ARE RETURNED TO NEUTRAL POSITION. THIS COULD CAUSE SERIOUS INJURY TO PERSONNEL WORKING NEAR THE WHEELS.

#### D. Hydraulic Power System O-Rings


- (1) O-rings used in the installation of hydraulic power system components are shown in Figure 201. O-rings required for the landing gear, power control systems, etc., will be found in the applicable chapters.
- (2) O-ring part numbers shown in Figure 201 are interchangeable with Douglas standard (S-XXXXXXX) numbers listed in the Illustrated Parts Catalog and on engineering drawings.

## 2. Pressurize/Depressurize Hydraulic System

### A. Pressurize Hydraulic System with External Hydraulic Source Pressure


- (1) Tools and Equipment Required: A hydraulic test stand equipped with a variable-displacement hydraulic pump capable of delivering 20 gpm at 3000 psi, using Skydrol hydraulic fluid. The maximum permissible operating temperature should not exceed 180°F (82.2°C).
- (2) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (3) Make certain that wing flap control handle agrees with wing flap position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Remove dust caps from airplane ground service connections and connect test stand pressure and supply hoses.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

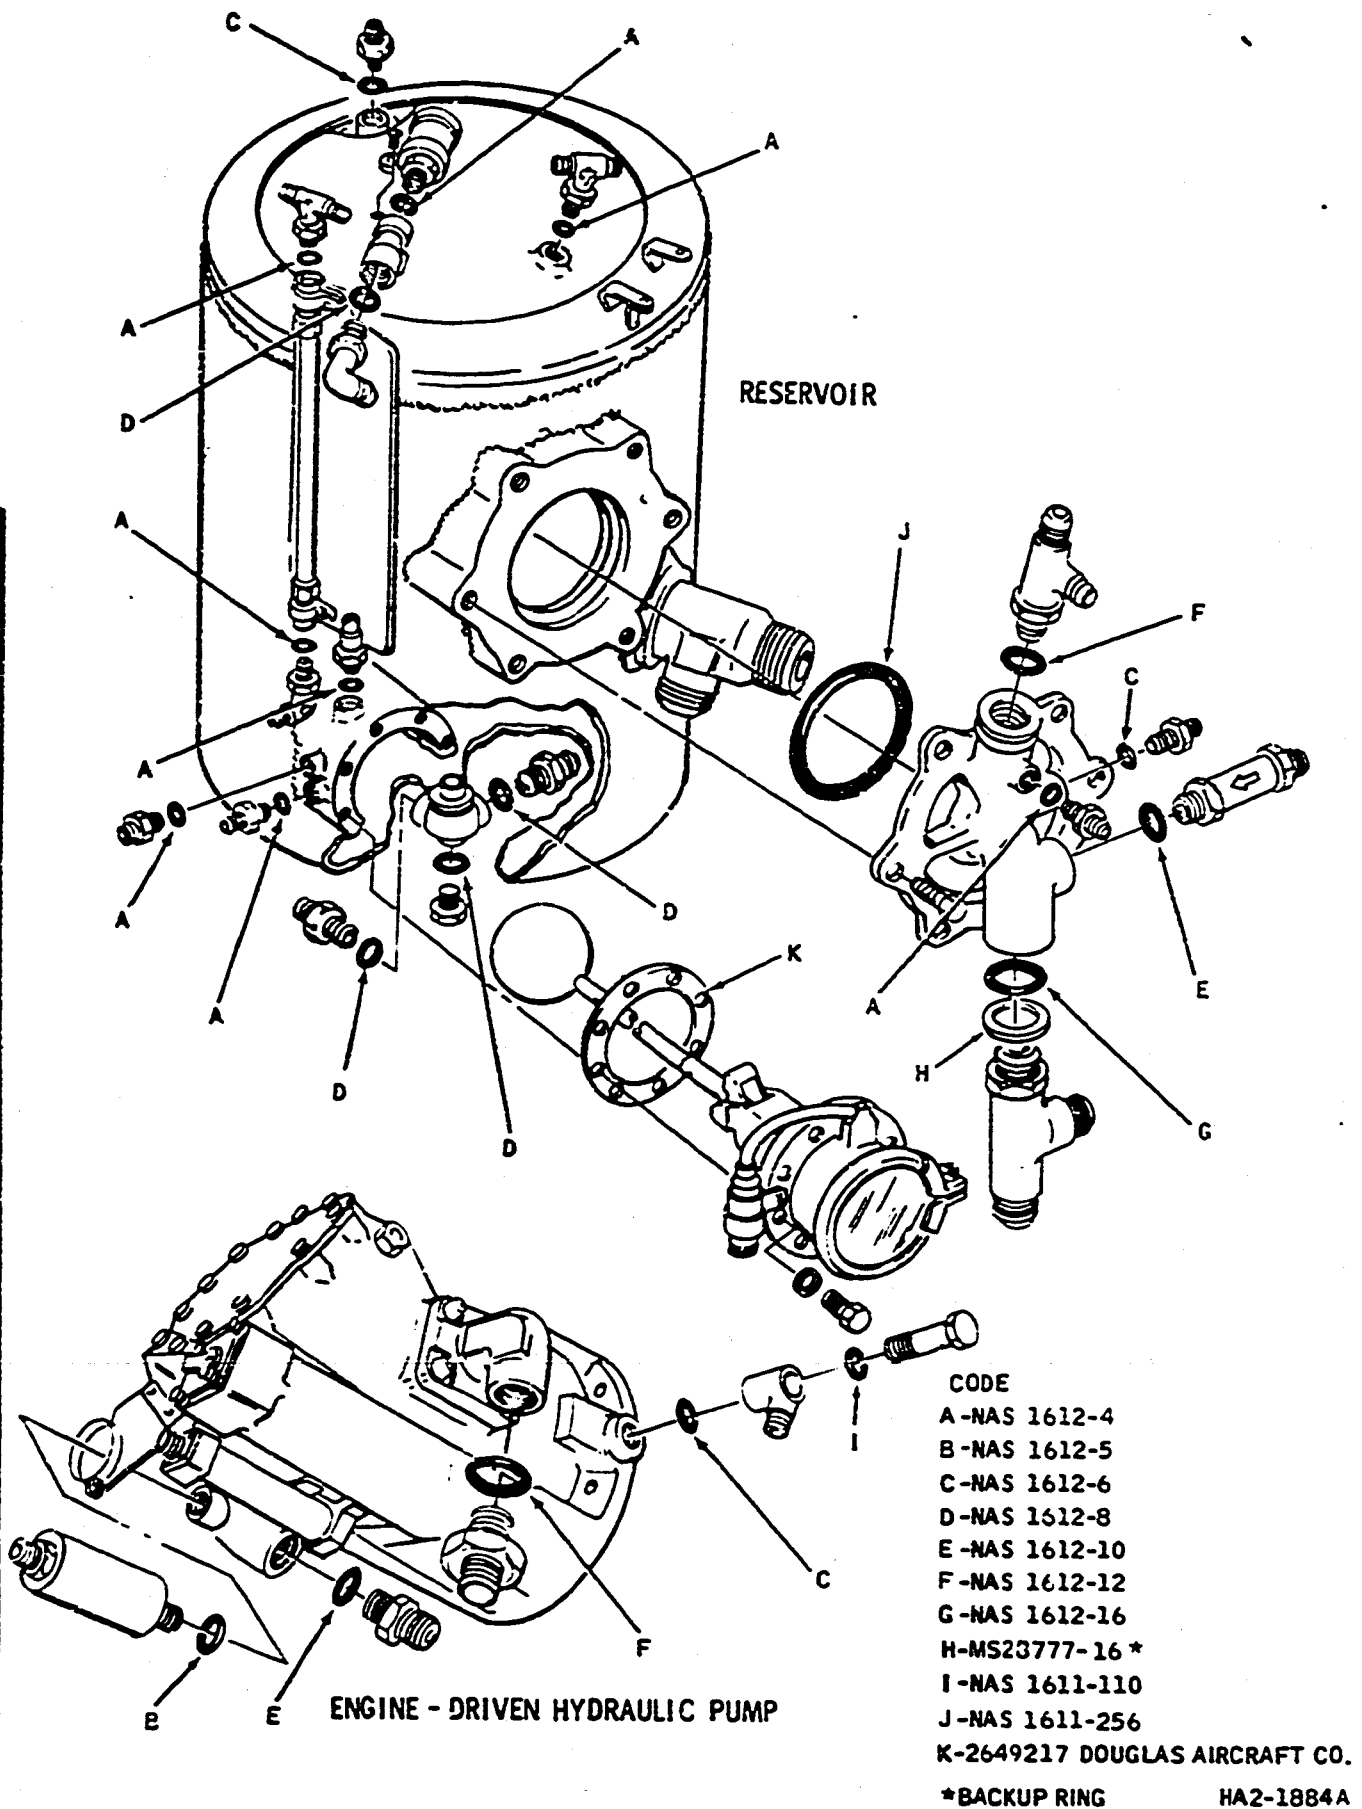

Hydraulic Power System Components -- O-Rings  
 (Airplanes N8774-N8778)  
 Figure 201 (Sheet 1)

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

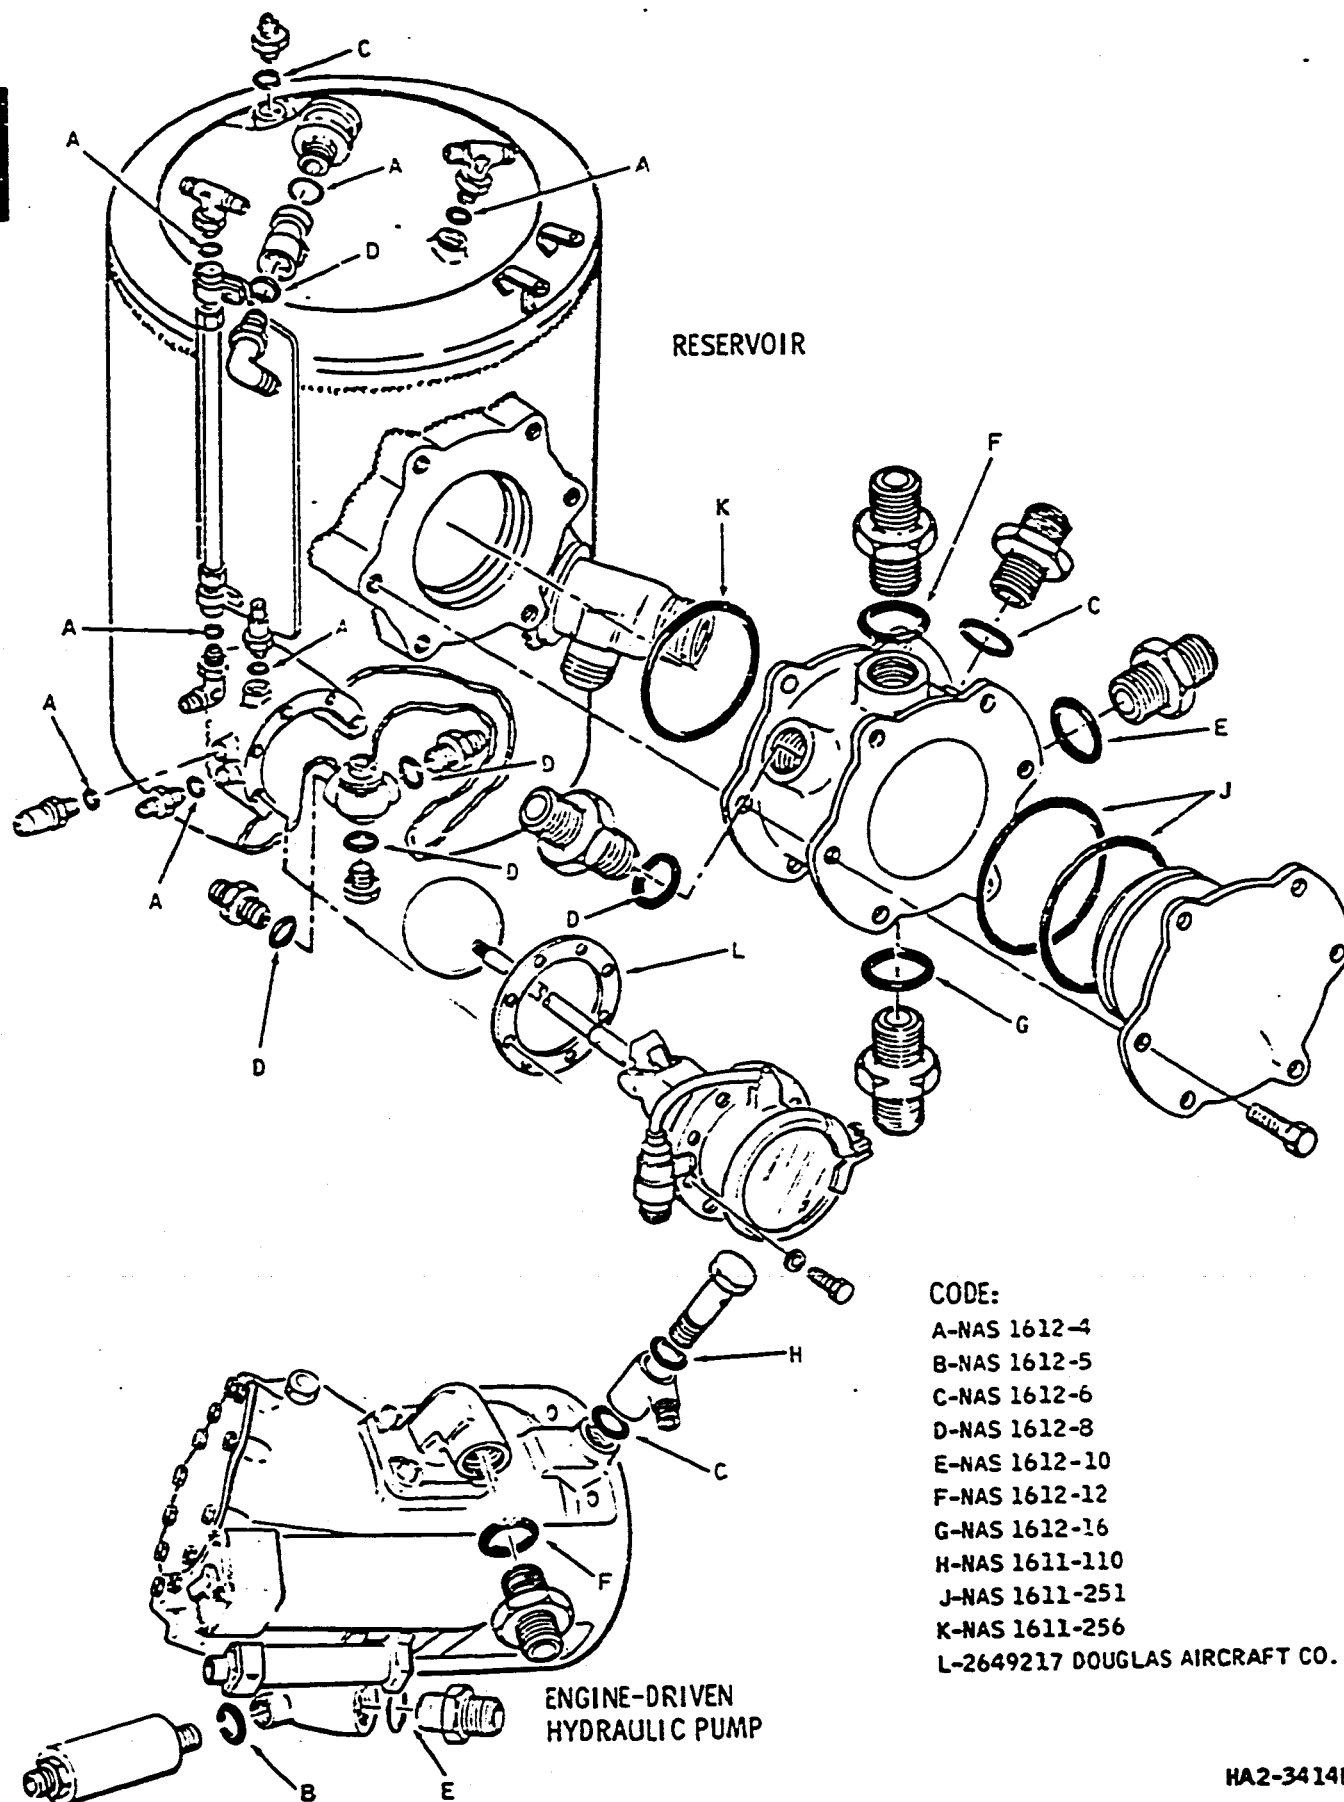


Hydraulic Power System Components -- O-Rings  
 (Airplanes N8755-N8760, N8762-N8769, N8772, N8773)  
 Figure 201 (Sheet 1A)

Dec 1/73

HA2-3414B

29-00  
 CODE 2  
 Page 204A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

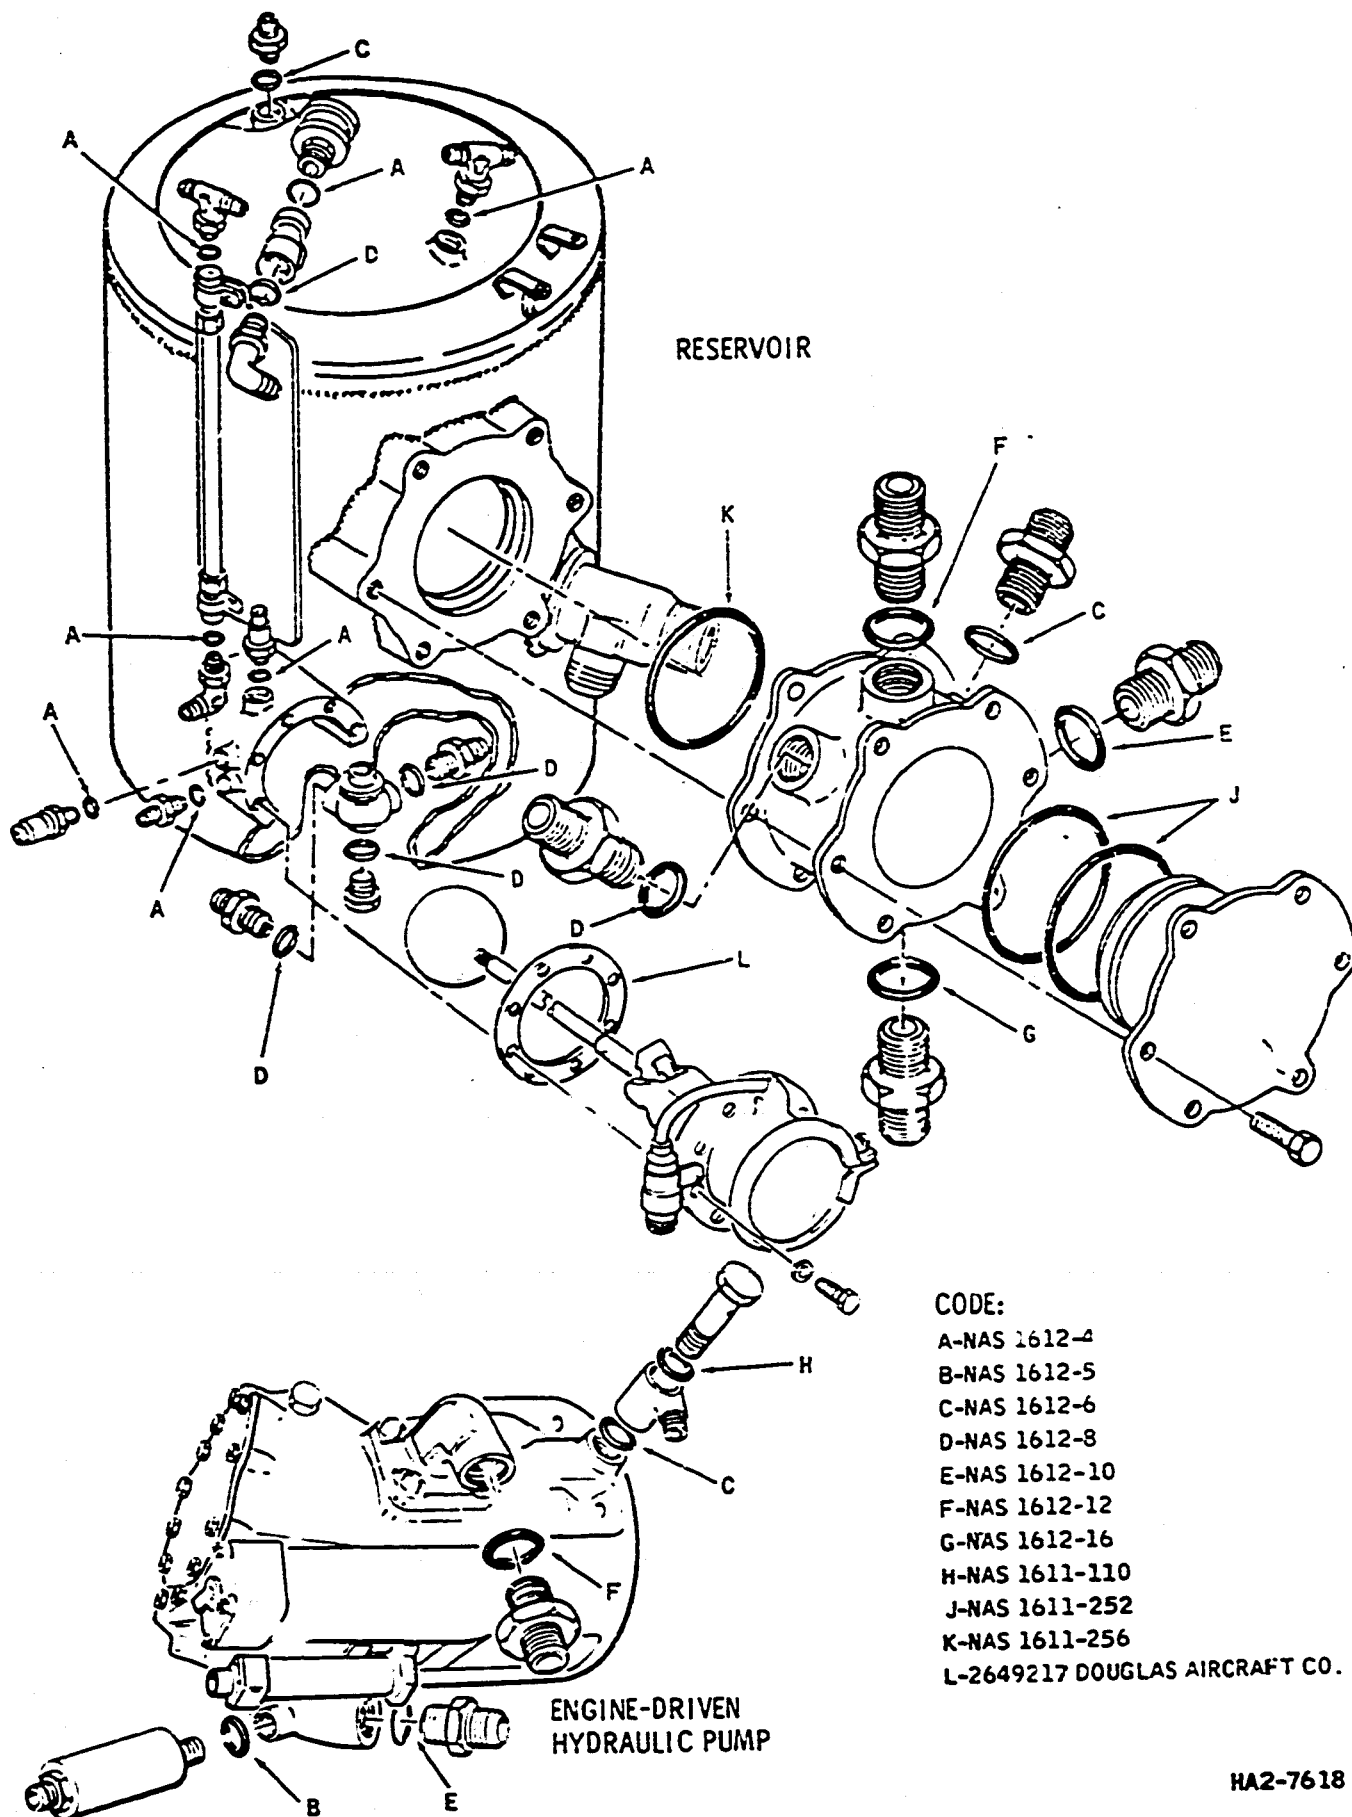


CODE:

A-NAS 1612-4  
 B-NAS 1612-5  
 C-NAS 1612-6  
 D-NAS 1612-8  
 E-NAS 1612-10  
 F-NAS 1612-12  
 G-NAS 1612-16  
 H-NAS 1611-110  
 J-NAS 1611-252  
 K-NAS 1611-256  
 L-2649217 DOUGLAS AIRCRAFT CO.


HA2-7618

Hydraulic Power System Components -- O-Rings  
 (Airplanes N8770, N8771)  
 Figure 201 (Sheet 1B)


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

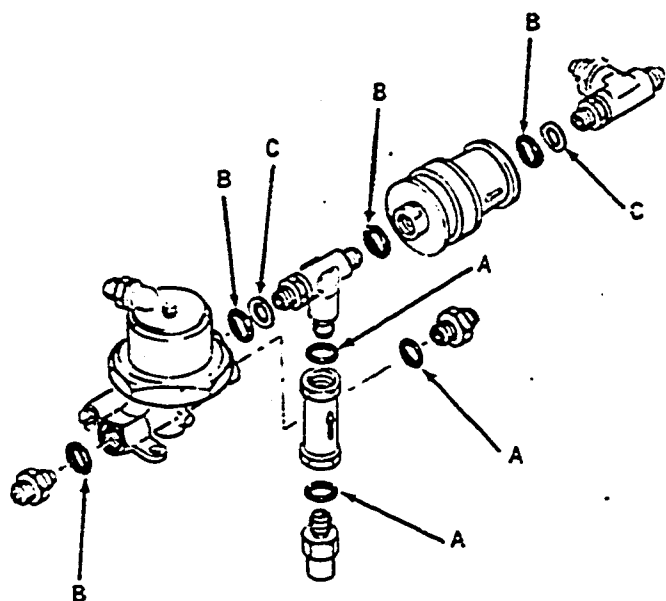


REGULATOR - ASPIRATOR  
 AND AIR FILTERS

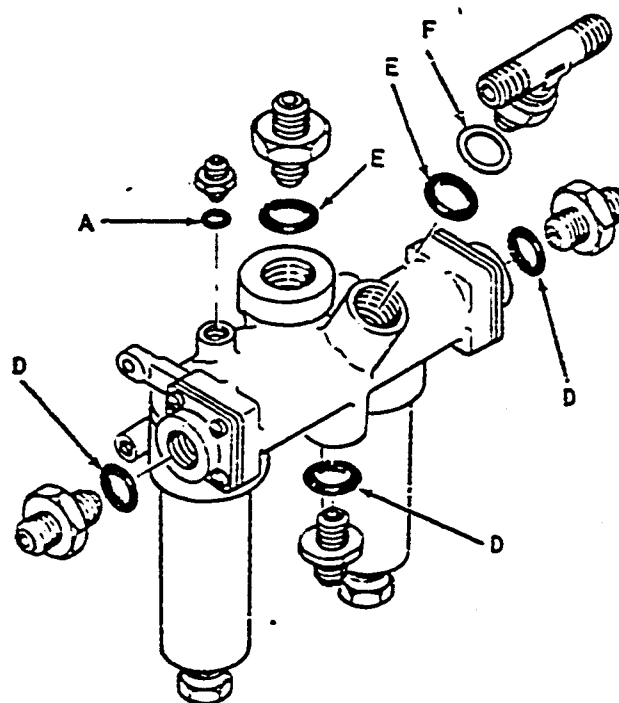

DUAL-FILTER &  
 RELIEF VALVE

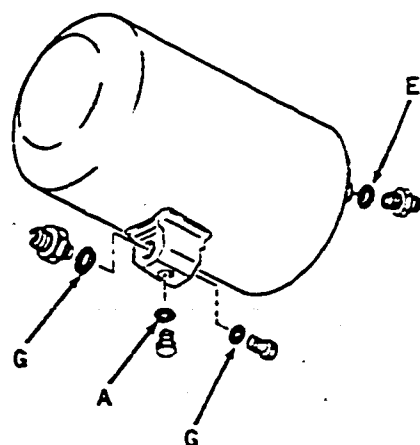

HYDRAULIC RESERVOIR  
 AIR CHAMBER

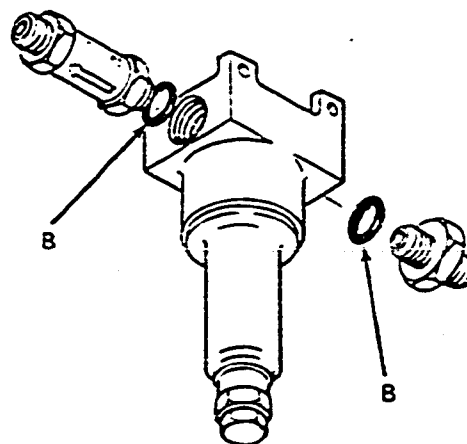

HYDRAULIC  
 PUMPCASE DRAIN  
 FILTER

CODE:

- A - NAS1612-4
- B - NAS1612-6
- C - MS28777-6\*
- D - NAS1612-10
- E - NAS1612-12
- F - MS28777-12\*
- G - NAS1612-16
- \* - BACKUP RING

HA2-1101A


Hydraulic Power System Components -- O-rings  
 (Airplanes N8762-N8778)  
 Figure 201 (Sheet 2)

Dec 1/73


29-00  
 CODE 2  
 Page 204C




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

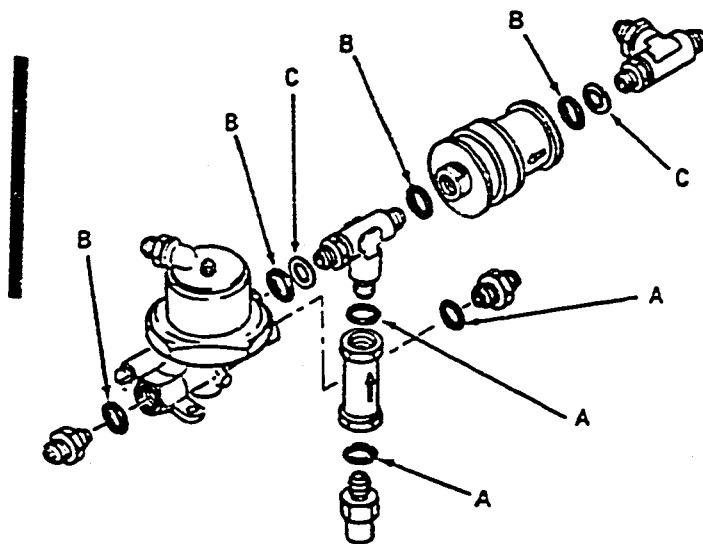


REGULATOR - ASPIRATOR  
 AND AIR FILTERS

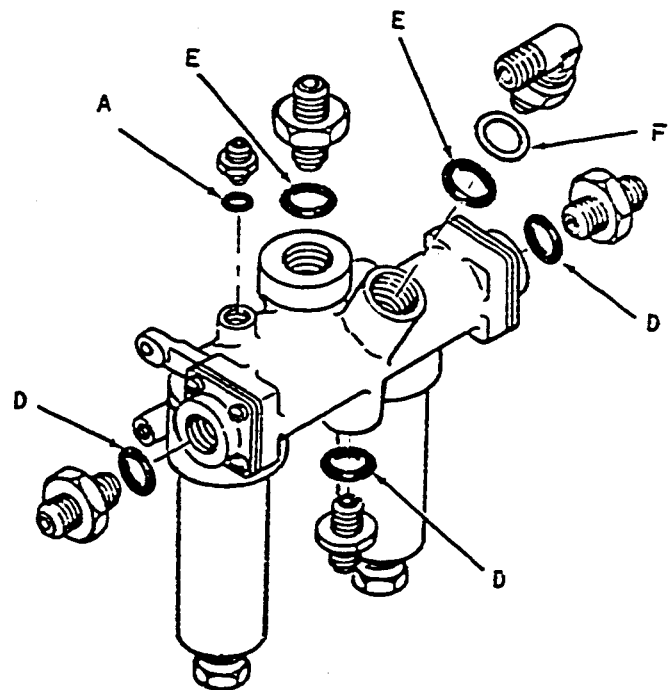

DUAL-FILTER &  
 RELIEF VALVE

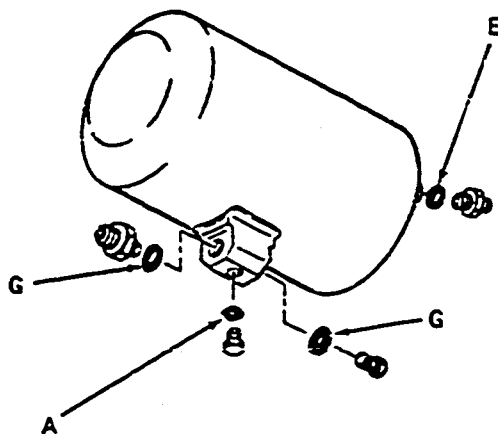

HYDRAULIC RESERVOIR  
 AIR CHAMBER

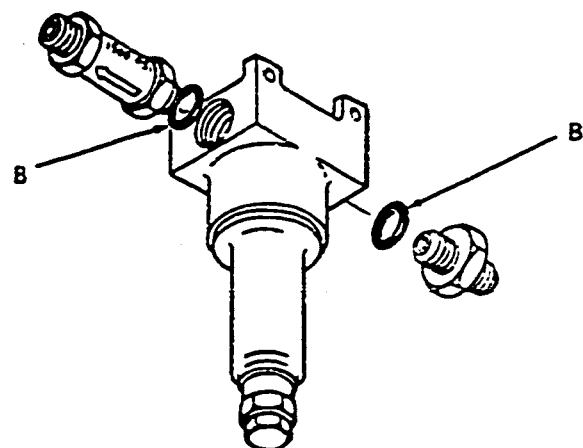

HYDRAULIC  
 PUMPCASE DRAIN  
 FILTER

CODE

- A - NAS1612-4
- B - NAS1612-6
- C - MS28777-6 \*
- D - NAS1612-10
- E - NAS1612-12
- F - MS28777-12 \*
- G - NAS1612-16
- \* - BACKUP RING

Hydraulic Power System Components -- O-Rings  
 (Airplane N8755-N8760)  
 Figure 201 (Sheet 2A)


HA2-3415B

Aug 1/69


Printed in U.S.A.

29-00  
 CODE 2  
 Page 205

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

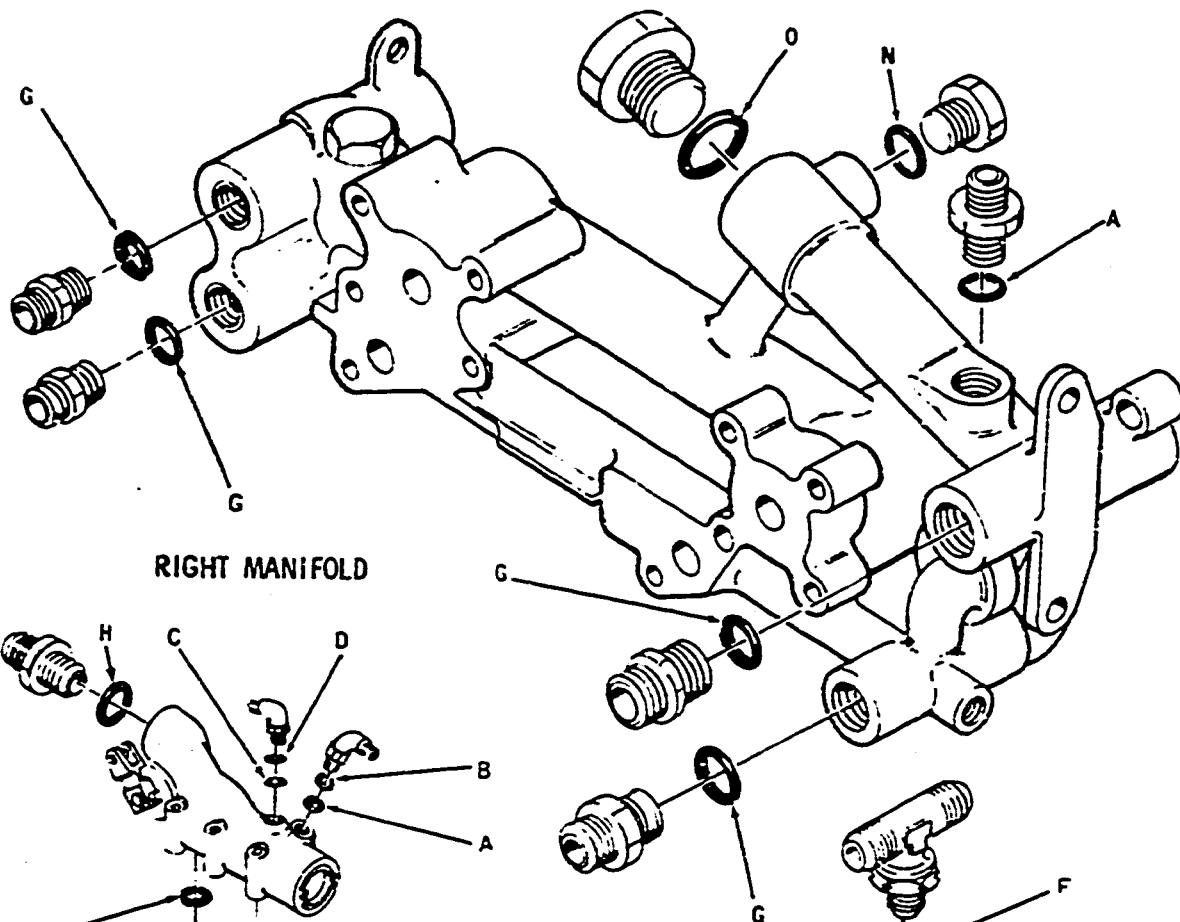


RIGHT MANIFOLD

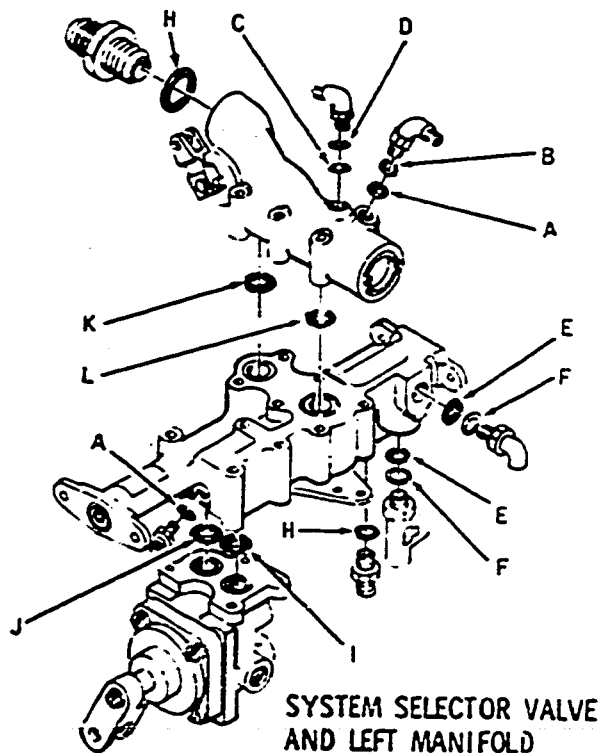

SYSTEM SELECTOR VALVE  
 AND LEFT MANIFOLD

CODE:  
 A-NAS1612-4  
 B-MS28777-4  
 C-NAS1612-5  
 D-MS28777-5  
 E-NAS1612-8  
 F-MS28777-8  
 G-NAS1612-10  
 H-NAS1612-12  
 I-NAS1611-111  
 J-NAS1611-113  
 K-NAS1611-213  
 L-NAS1611-217  
 M-MS-24690  
 N-NAS1612-6  
 O-NAS1611-210  
 \*-BACKUP RING

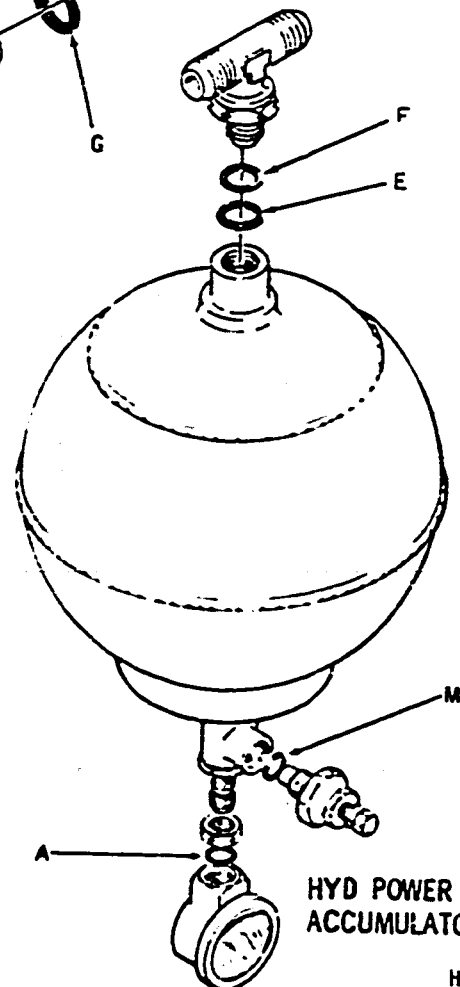


HYD POWER SYSTEM  
 ACCUMULATOR

HA-2-1102A

Hydraulic Power System Components -- O-rings  
 (Airplanes N8762-N8778)  
 Figure 201 (Sheet 3)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

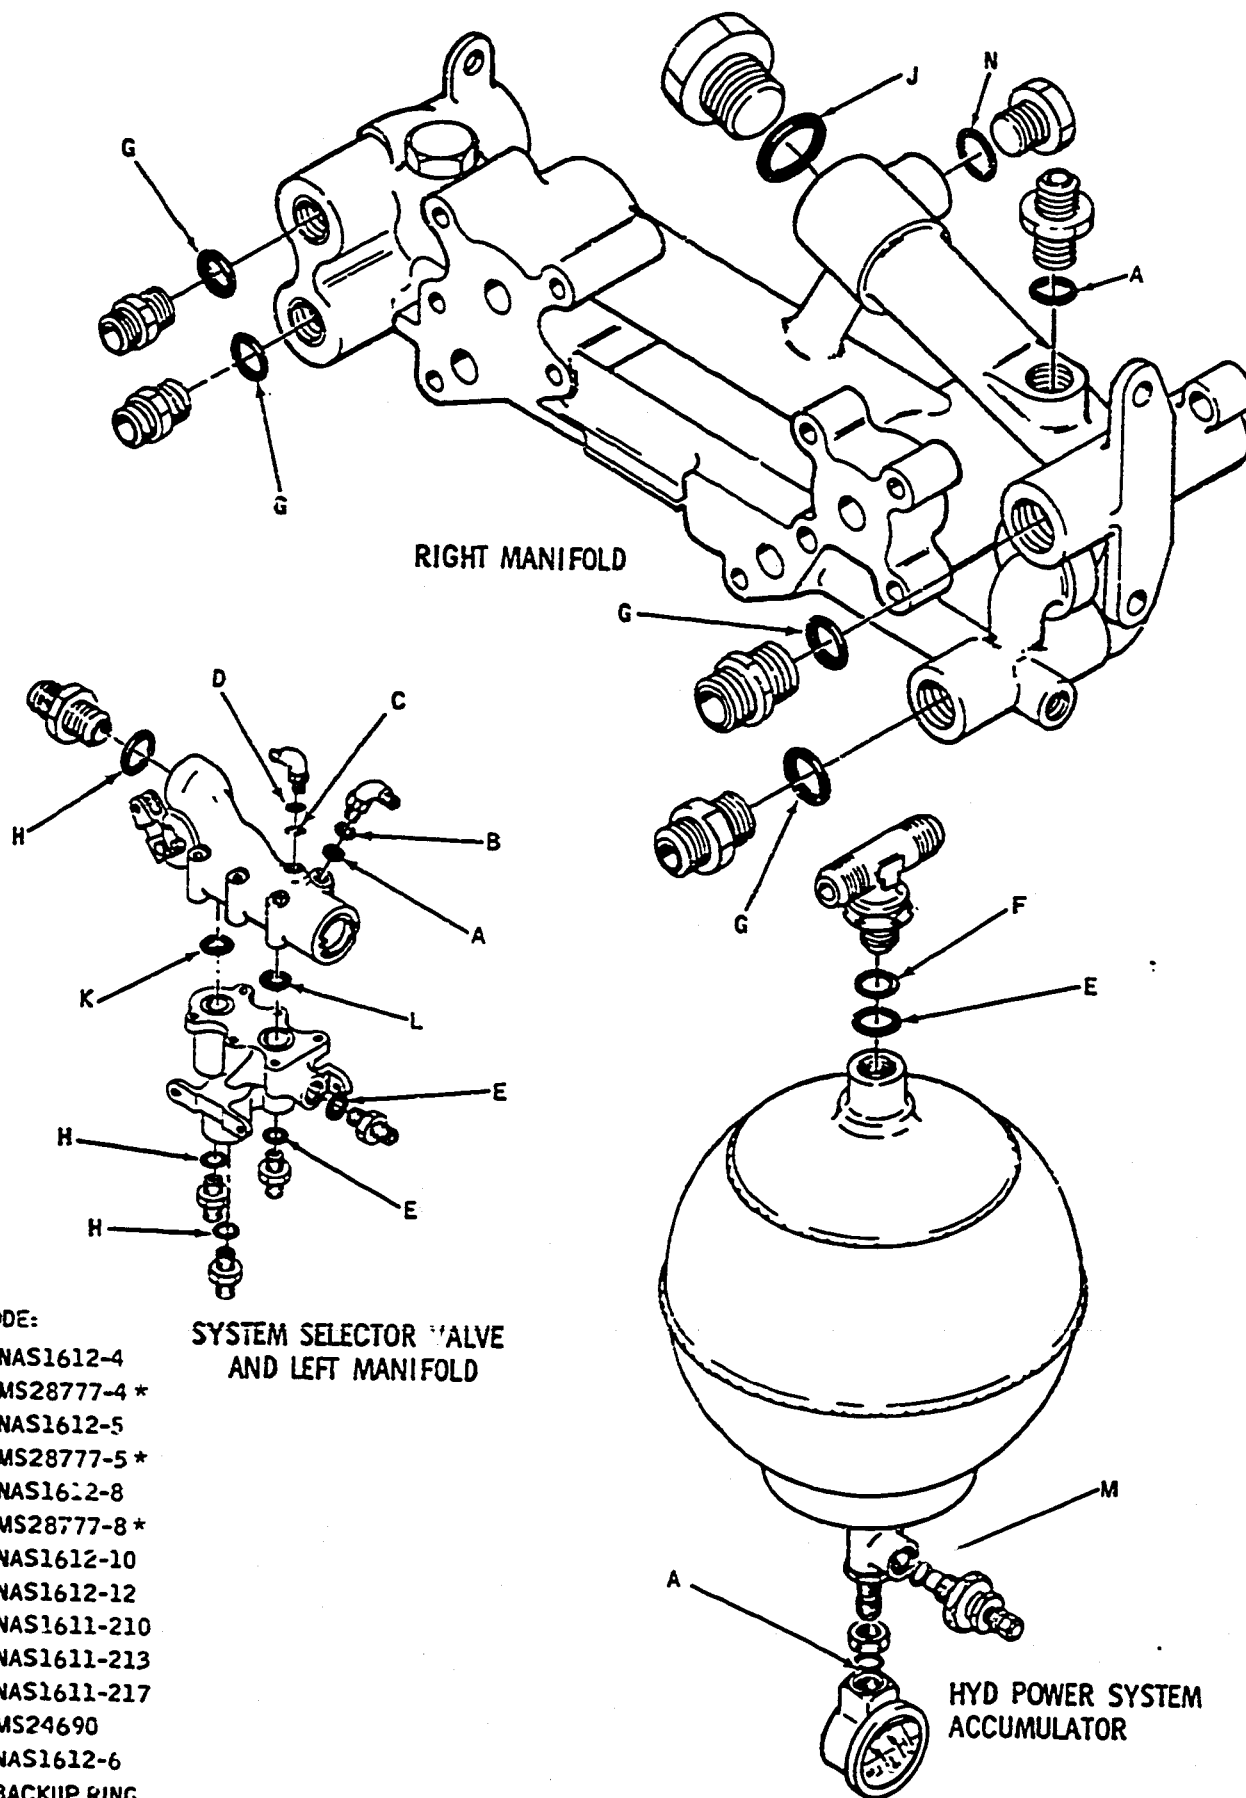

HA2-1678A


Hydraulic Power System Components -- O-Rings  
 (Airplane N8755-N8760)  
 Figure 201 (Sheet 3A)

Aug 1/69


Printed in U.S.A.

29-00  
 CODE 2  
 Page 206A


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

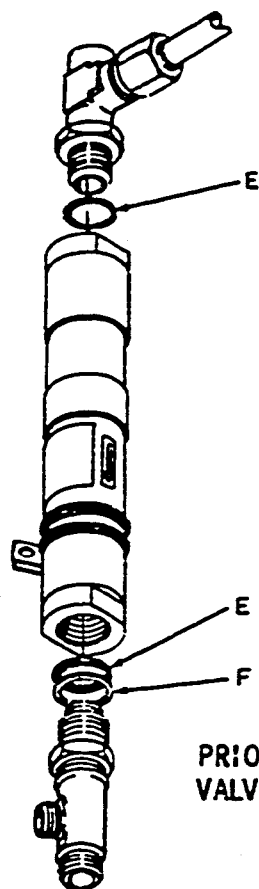

PRIORITY VALVE

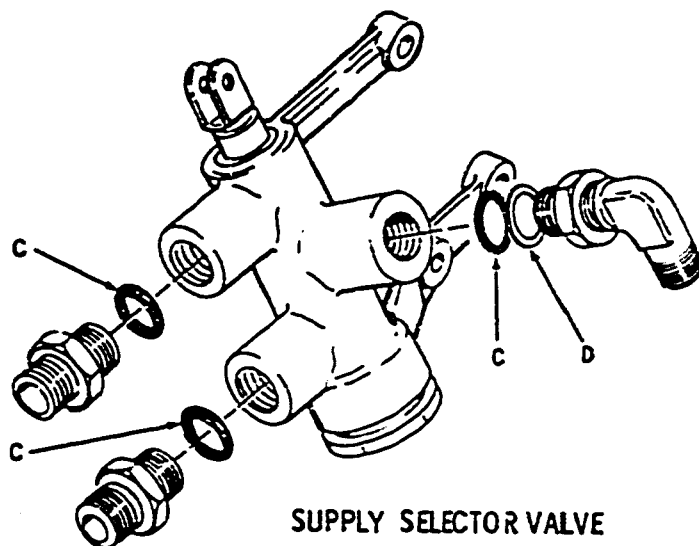


SUPPLY SELECTOR VALVE

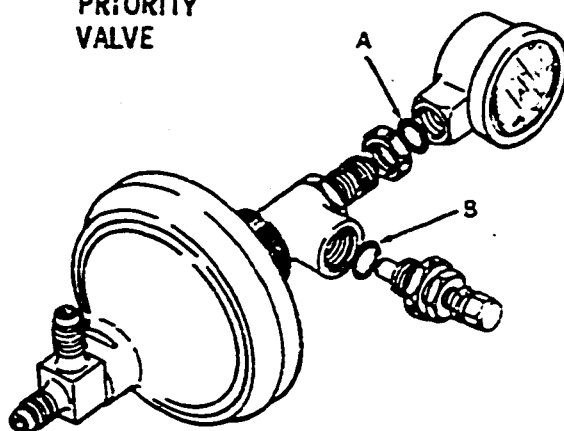


SURGE DAMPER ACCUMULATOR

CODE  
 A-NAS1612-4  
 B-MS2469-4  
 C-NAS1612-8  
 D-MS28777-8\*  
 E-NAS1612-12  
 F-MS28777-12\*  
 G-NAS1612-20

\* BACKUP RING

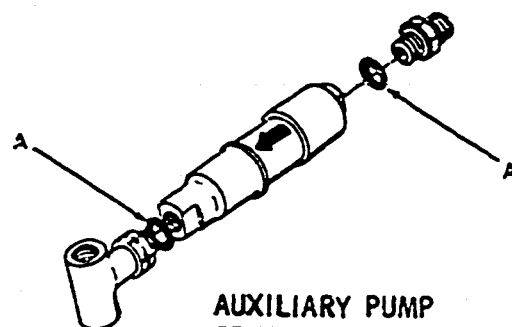

AUXILIARY PUMP RELIEF VALVE

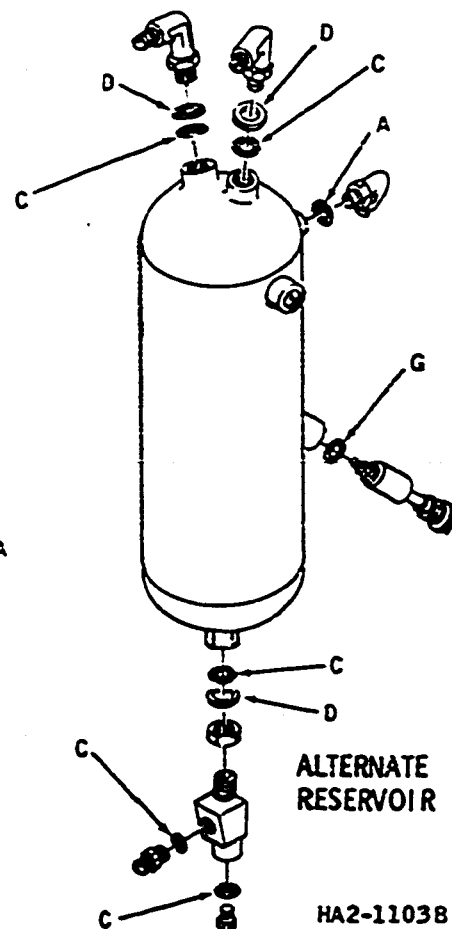

ALTERNATE RESERVOIR

HA2-11038


Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 4)

Oct 1/67

Printed in U.S.A.

29-00  
 CODE 2  
 Page 207


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

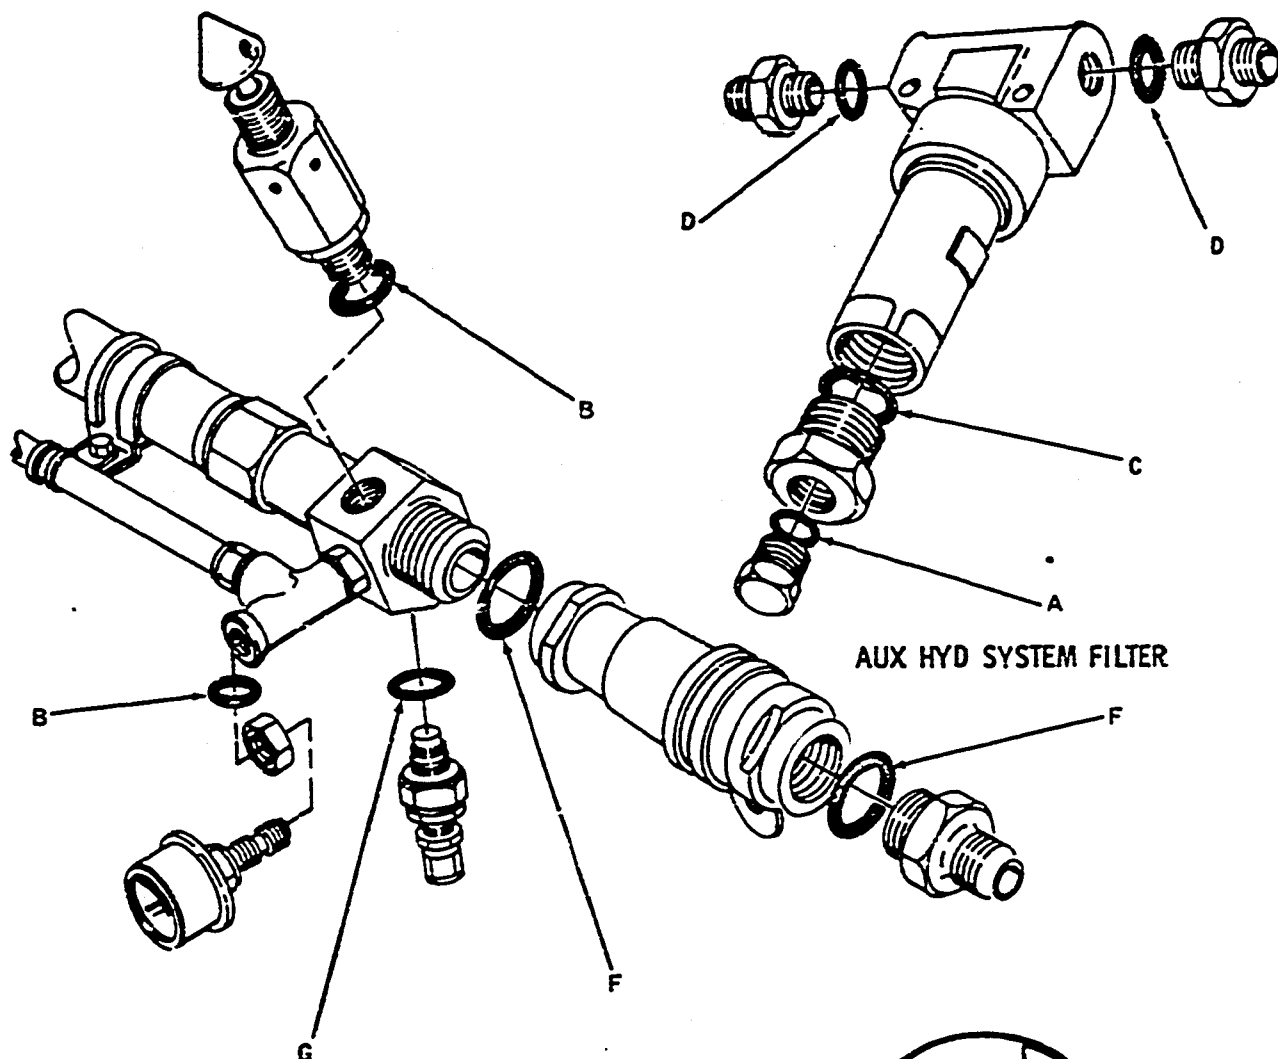

CODE


A-NAS1612-2  
 B-NAS1612-4  
 C-NAS1612-6  
 D-NAS1612-8  
 E-NAS1612-10  
 F-NAS1612-12  
 G-MS24690  
 H-MS28777-10 \*  
 J-MS28777-4 \*

\* BACKUP RING

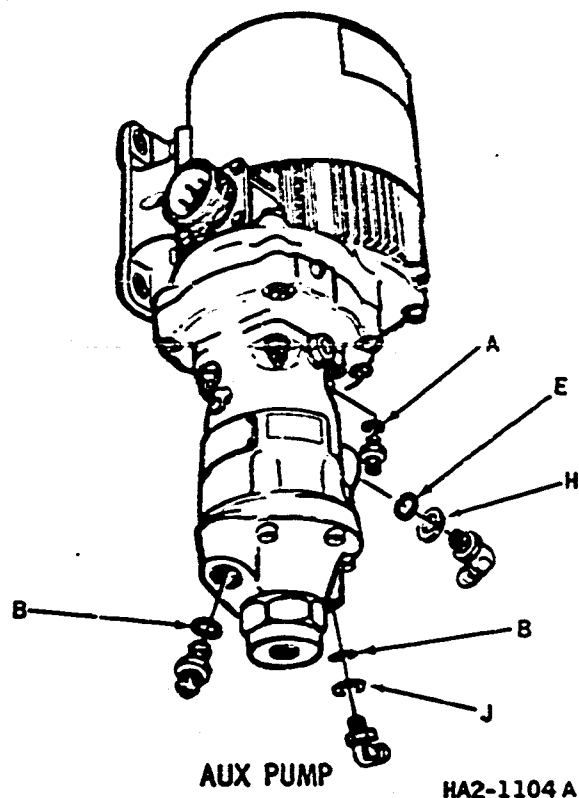


Hydraulic Power System Components -- O-rings  
 (Airplanes N8762-N8778)  
 Figure 201 (Sheet 5)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

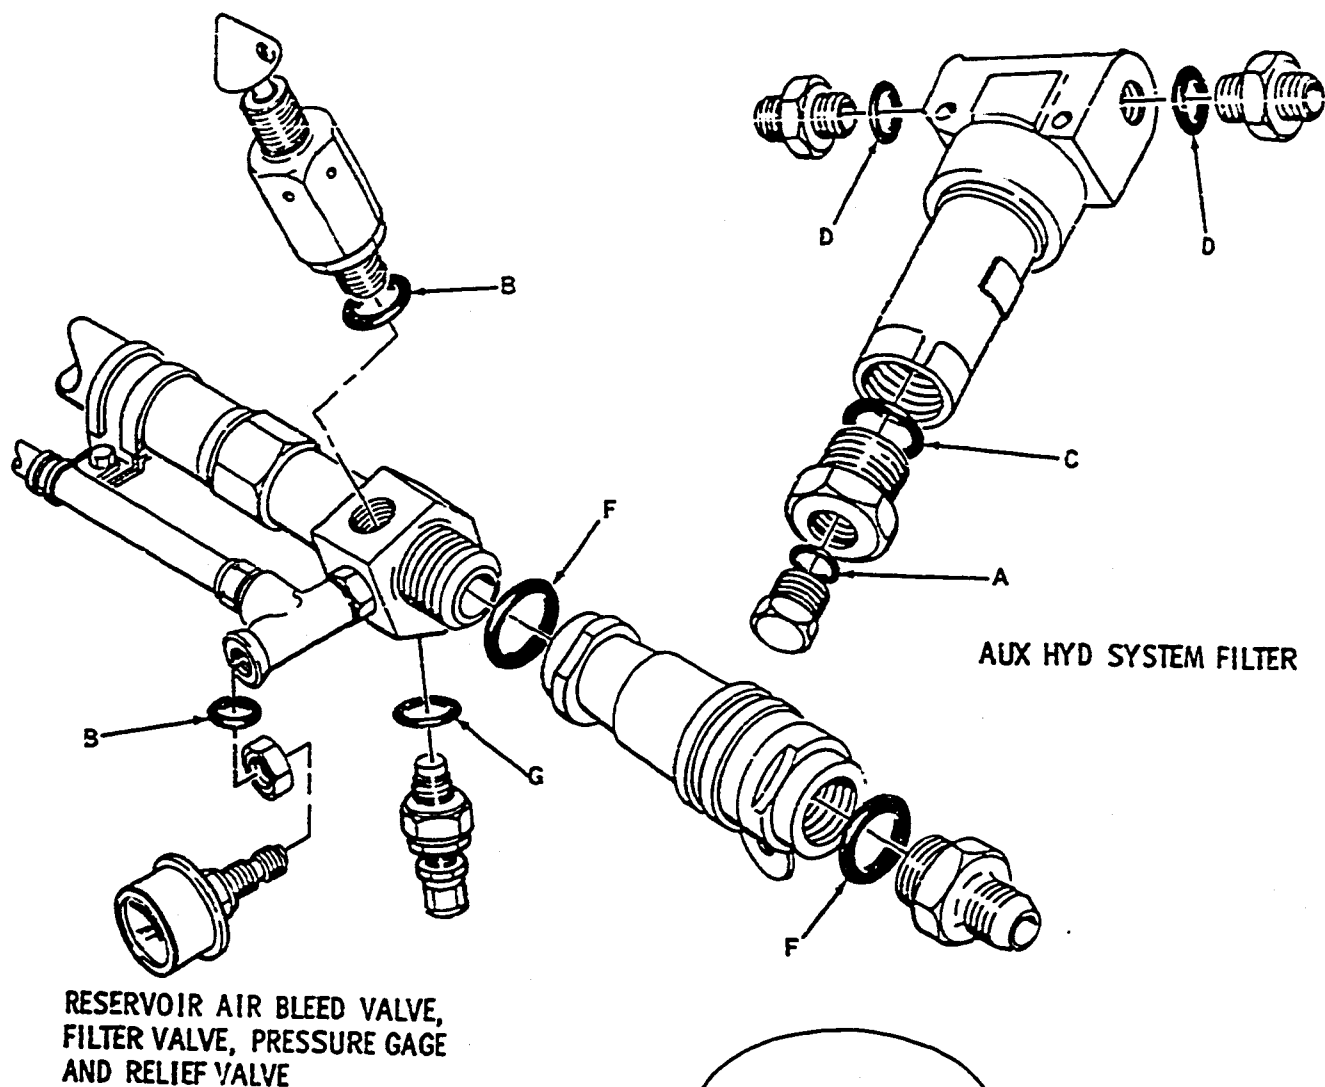

- CODE:
- A - NAS1612-2
  - B - NAS1612-4
  - C - NAS1612-6
  - D - NAS1612-8
  - E - NAS1612-10
  - F - NAS1612-12
  - G - MS24690

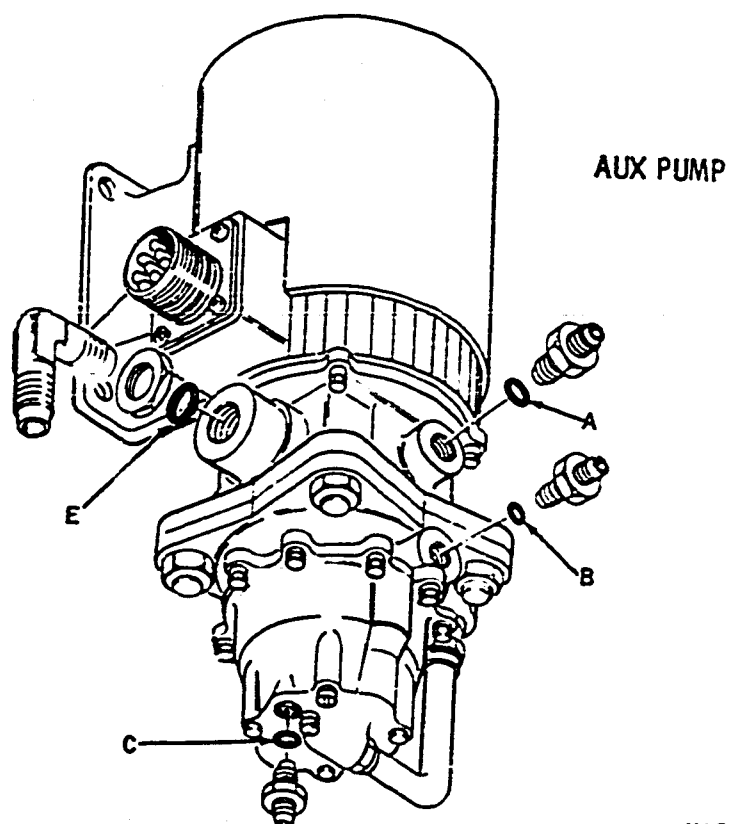

Hydraulic Power System Components -- O-Rings  
 (Airplane N8755-N8760)  
 Figure 201 (Sheet 3A)

HA2-6045

29-00  
 CODE 2  
 Page 208A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Energize test stand hydraulic pump; pressurize hydraulic system to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT ALL FLIGHT CONTROL SURFACES AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

**B. Depressurize and Disconnect**

- (1) Check hydraulic fluid level of hydraulic reservoir; fill if necessary as described on instruction placard on reservoir.
- (2) Deenergize test stand hydraulic pump.
- (3) Depressurize hydraulic system by operating the brakes and manually moving the longitudinal trim handle until horizontal stabilizer movement stops.
- (4) Disconnect and cap test stand pressure and supply hoses from airplane ground service connections; install duct caps on connections and close access door.

**C. Pressurize Hydraulic System with Auxiliary Hydraulic Pump Pressure**

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap control handle agrees with wing flap position.
- (3) Place hydraulic system selector control lever in general system/bypass position.
- (4) Check that airplane electrical buses are energized (see Chapter 24).
- (5) Start auxiliary hydraulic pump by placing auxiliary hydraulic pump control switch momentarily in start position. Pressure indicated in the flight compartment should be 2600 to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT ALL FLIGHT CONTROL SURFACES AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

**CAUTION:** DO NOT HOLD THE AUXILIARY HYDRAULIC PUMP CONTROL SWITCH IN THE START (HOLD ONLY IN EMERGENCY) POSITION FOR NORMAL PRESSURIZATION.

**NOTE:** Besides the two auxiliary hydraulic pump control switches located in the flight compartment, there is a control switch located just aft of the auxiliary pump in the left wing root area for the use of ground personnel.

EAL

Jan 15/68

Printed in U.S.A.

29-00  
CODE 2  
Page 209

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

D. Depressurize

- (1) Stop auxiliary hydraulic by placing auxiliary hydraulic pump control switch momentarily in stop position.
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.
- (3) Place hydraulic system selector control lever in general system (normal) position.

E. Pressurize Hydraulic System with Engine-Driven Hydraulic Pump Pressure

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap handle agrees with wing flap position.
- (3) Make certain that applicable fire control handle is in normal position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Make certain that applicable engine-driven hydraulic pump control switch is in on position.
- (6) Start engine No. 2 or No. 3 (see Chapter 71). Hydraulic pressure indicated in the flight compartment should be 2800 to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT ALL FLIGHT CONTROL SURFACES AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

F. Depressurize

- (1) Shut down engine (see Chapter 71).
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.

3. Pressurize/Depressurize Hydraulic Reservoir

A. General

- (1) The air inflation valve, air bleed valve, and air pressure gage for manually pressurizing and depressurizing the hydraulic reservoir and air chamber are located on the aft side of the wing rear spar, at the



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

forward end of the left main gear wheel well. The valves and gage are mounted on a cross fitting just inboard of the reservoir air chamber. Access is through the left main gear inboard door.

B. Tools and Equipment Required

- (1) Pressure cylinder (clean dry compressed air or nitrogen).

C. Pressurize Hydraulic Reservoir

NOTE: Normal air pressure in the reservoir and air chamber should be between 30 and 35 psi.

NOTE: There are three methods of pressurizing the hydraulic reservoir:

- (1) Run an inboard engine.
- (2) Connect and operate a hydraulic test stand.
- (3) Direct pressurization of air chamber by introduction of compressed air or nitrogen.

The first two methods are automatic in that the reservoir is pressurized by action of the hydraulic fluid through the regulator-aspirator when the system is pressurized. The third method (direct inflation) will be described in the following steps.

- (1) Remove air inflation valve cap and attach pressure cylinder service hose to inflation valve.
- (2) Loosen inflation valve swivel nut three complete turns.

NOTE: The rate of inflation (flow through the valve) is governed by the degree of opening of the swivel valve.

- (3) Pressurize reservoir to 30 to 35 psi reading on air pressure gage.
- (4) Tighten swivel nut.
- (5) Disconnect service hose and install valve cap.

CAUTION: THE AIR INFLATION VALVE IS A STANDARD "AN" VALVE WHICH HAS BEEN MODIFIED BY INSTALLATION OF SKYDROL TYPE SEALS. DO NOT REPLACE THE VALVE WITH A VALVE WHICH HAS NOT BEEN MODIFIED FOR SKYDROL.

D. Depressurize Hydraulic Reservoir

- (1) Depress air bleed valve button; hold until all pressure has bled off and pressure gage reads zero.

Jun 15/67

Printed in U.S.A.

29-00  
CODE 2  
Page 211

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

4. Drain Hydraulic System Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.
- (2) Clean container of approximately 20 US gallons (16.65 Imperial gallons or 75.7 liters) capacity.

B. Drain Reservoir

- (1) Depressurize hydraulic system and reservoir (see paragraphs 2 and 3).
- (2) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (3) Remove drain unit, and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

5. Drain Auxiliary Hydraulic Pump Alternate Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.
- (2) Clean container of approximately 3 US gallons (2.5 Imperial gallons or 11.5 liters) capacity.

B. Drain Reservoir

- (1) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (2) Remove drain unit and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

6. Hydraulic System Pressure Decay Rates

A. Decay Rate Test

- (1) By observing the time it takes for the hydraulic system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi, it is possible, in most cases, to detect units that are leaking excessively. This procedure is not infallible because the sum of the maximum allowable leakage rates determines

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

the minimum time permissible for pressure decay. The hydraulic system with average leakage will maintain pressure for longer periods than indicated and may do so even with one unit leaking excessively.

- (2) The main hydraulic system should be tested for pressure decay time under the following conditions:
  - (a) System selector valve in general system/bypass or general system (normal).
  - (b) Nosewheel straight ahead plus or minus 30 degrees and steering valve in neutral position.
  - (c) Manual main gear door valve open.
  - (d) Landing gear down and locked.
  - (e) Wing flaps up.
  - (f) Accumulators properly charged.
  - (g) Aileron shutoff valve off.
  - (h) Rudder shutoff valve off.
  - (i) Thrust reversers stowed (airplanes N8755-N8760).
- (3) Pressurize main hydraulic system to 2900 ( $\pm 100$ ) psi with auxiliary pump or hydraulic test stand. Then shut off hydraulic power source and note time interval required for system pressure to decrease 1000 psi. This should be more than 34 seconds on a new airplane or more than 23 seconds on an airplane in service before overhaul. If pressure decay time is less, the main hydraulic system should be inspected for a malfunctioning unit.
- (4) If pressure decay test indicates that a unit in the main hydraulic system was leaking excessively, that unit may be in the nose or main gear subsystem, the main gear door subsystem, the flap subsystem, the slot subsystem, the selector valve, or the compressor subsystem. By placing the subsystem control valves in opposite positions one at a time and repeating the pressure decay test, it is possible that the faulty unit may be located.
- (5) Rudder power hydraulic system may be tested for pressure decay time by using procedures outlined in steps (2) and (3), except that the rudder shutoff valve should be on. Decay time should be more than 10 seconds on a new airplane or more than 8 seconds on an airplane in service before overhaul. If less, the rudder power system should be inspected for a malfunctioning unit.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXT/ SERIES**  
MAINTENANCE MANUAL

- (6) Supplementary information may be obtained for the rudder power hydraulic system by using the auxiliary rudder system pump and accumulator air gage to test the time for rudder pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi. With the rudder hydraulic power shutoff valve off, the time should be more than 2 minutes. With the rudder hydraulic power shutoff valve on, the time should be 12 seconds on a new airplane and 10 seconds on an airplane in service before overhaul.
- (7) Aileron hydraulic power system may be tested for pressure decay by using procedures outlined in steps (2) and (3), except that the aileron hydraulic power shutoff valve should be on. The decay time should be more than 6-1/2 seconds on a new airplane or more than 4-1/2 seconds on an airplane in service before overhaul. If less, the aileron power system should be inspected for a malfunctioning unit.
- (8) Brake system and the nose gear steering system are isolated from the main hydraulic system by check valves and may be tested separately. Using the brake accumulator gages, the pressure decay time for the brake system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 10 hours with the parking brake off, and 2 hours with the parking brake on. With the brake accumulators fully charged deplete the general system pressure. Wait 3 to 5 minutes and then set the parking brake and hold the parking brake pressure for 15 minutes. The drop in pressure at the brake accumulators should not exceed 125 psi during this time.
- (9) Release the parking brakes, and build up brake accumulator pressure to 2900 ( $\pm 100$ ) psi. With hydraulic power off and brakes off, check brake accumulator pressure. Drop in pressure at the accumulators should not exceed 100 psi in 30 minutes. Fast decay time for the brake system with parking brake off, indicates either a faulty brake valve or a faulty check valve in the right manifold. A fast decay time with the parking brake on indicates a faulty antiskid valve or a faulty brake valve.
- (10) Using the gages on the nose pressure accumulators, the time for the nose gear steering system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 19 minutes. If less, one of the pressure check valves is faulty, or the nose gear steering control valve is faulty or out of neutral.
- CAUTION:** ALL LANDING GEAR GROUND LOCKPINS MUST BE INSTALLED BEFORE CONDUCTING THE FOLLOWING TEST.
- (11) Under conditions outlined in step (2), except with the landing gear control valve in the up position, the time for pressure decay should be unchanged. If time limits change more than 5 seconds as determined in paragraph (3), a faulty unit is in the gear subsystem.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (12) Under conditions outlined in step (2), except with the main gear door manual control valve in the closed position, the decay time should be more than 24 seconds on a new airplane and 18 seconds on an airplane in service before overhaul. If less, the faulty unit is in the main gear door subsystem.
- (13) Under conditions outlined in step (2), except with the flap control valve in the down position, the decay time should be more than 24 seconds on a new airplane and 17 seconds on an airplane in service before overhaul. If less, the faulty unit is in the flap subsystem.
- (14) Under conditions outlined in step (2), time limit for pressure decay should remain unchanged as determined in paragraph (3) with the slot valve in either position, or the selector valve in either general system/bypass or general system (normal). If the time changes with a change of valve position, the faulty unit is in that subsystem.
- (15) On airplanes N8755-N8760, the thrust reverser system is hydraulically actuated and is isolated from the main system by an electrically operated shutoff valve which is open only during thrust reverser actuation. Therefore, main system decay is not affected by the thrust reverser system except during reverser actuation or at the thrust reverser extended position. Additional information may be obtained for the thrust reverser system by using the auxiliary reverser system pump and reverser system pressure gage or accumulator gage to test the time for reverser pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi. With the reversers in the stowed position, the decay time should be greater than 3 minutes on a new aircraft or greater than 1-1/2 minutes on an aircraft in service before overhaul. If times are less, the reverser system should be inspected for a malfunction.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - MAINTENANCE PRACTICES

1. General

A. Skydrol Safety Precautions

- (1) Before performing any operation on the hydraulic system, personnel should read and thoroughly understand the following precautions to be observed when working with Skydrol hydraulic fluid.

WARNING: OBSERVE THE FOLLOWING SAFETY PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. LONG EXPOSURE TO SKYDROL CAN CAUSE SKIN DEHYDRATION AND CHAPPING.

- (2) Wash hands thoroughly with soap and water before starting work.
- (3) Apply barrier cream to hands, wrists, and forearms. Rub cream under fingernails and into creases of skin.
- (4) Wear goggles when pressure testing components or systems, and whenever there is any possibility of Skydrol splashing into eyes.
- (5) If Skydrol splashes into eyes, treat eyes immediately by irrigating thoroughly with clear cold water, and report the incident.
- (6) Wash hands, wrists, and forearms with soap and hot water whenever they have come in contact with Skydrol.
- (7) If clothing becomes soaked with Skydrol; remove clothing as soon as possible, thoroughly wash skin, and put on clean clothing.

B. Technical Precautions

- (1) Before any maintenance is performed on the hydraulic system, personnel should read and thoroughly understand the following precautions. Careful adherence to these instructions will aid in maintaining a functional and trouble-free system.

CAUTION: OBSERVE THE FOLLOWING TECHNICAL PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. SKYDROL WILL ATTACK A WIDE RANGE OF MATERIALS INCLUDING RUBBER, COPPER, VARIOUS PLASTICS, AND PAINTS.

- (2) Ensure that Skydrol does not come into contact with any part of aircraft outside of the hydraulic system. Keep spillage to an absolute minimum. Clean up spilled hydraulic fluid immediately to prevent entry into adjacent areas of the airplane precluding future false hydraulic leak reports. If spillage occurs, wipe up the fluid with a dry cloth and wash contaminated area with soap and hot water.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) When lines are disconnected and/or components are removed, provide suitable protection to prevent foreign material from entering the lines or components by use of caps, covers, clean lint-free rags, etc.
- (4) When electrical connectors are disconnected, install caps or other suitable protectors to prevent entry of hydraulic fluid, moisture, and foreign objects.
- (5) Always check position and angle of all fittings removed from components to ensure placement and alignment when installing replacement components.
- (6) When washing metal parts before assembly, use only approved solvent, and ensure that all traces of the solvent are removed before assembly.
- (7) Use only clean Skydrol for flushing or testing hydraulic components.
- (8) Use only clean Skydrol when filling reservoirs, sumps, filter bowls, pumps, etc., before installation of components.
- (9) Do not unpack Skydrol O-rings and seals until required. Ensure that only approved rings and seals are used.
- (10) When assembling O-rings and seals, lubricate with Skydrol Assembly Lubricant, MCS 352, Monsanto Chemical Co., or clean Skydrol hydraulic fluid.
- (11) Take care to prevent contamination of Skydrol with other materials (oils, water, dirt, etc.).
- (12) If a system becomes contaminated with any petroleum-based oil or solvent, drain the system and flush with clean Skydrol.

C. Landing Gear Precautions

- (1) The landing gear control lever should be in the down position and the landing gear ground lockpins should be installed in the main and nose gears at all times during ground maintenance, except as noted in maintenance procedural steps.
- (2) The main gear wheels should be chocked at all times during ground maintenance, except as noted in maintenance procedural steps.
- (3) The hydraulic system selector control lever should be in the general system (normal) position at all times during ground maintenance, except as noted in maintenance procedural steps.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

D. Hydraulic Power System O-Rings

- (1) O-rings used in the installation of hydraulic power system components are shown in Figure 201. O-rings required for the landing gear, power control systems, etc., will be found in the applicable chapters.
- (2) O-ring part numbers shown in Figure 201 are interchangeable with Douglas standard (S-XXXXXXXX) numbers listed in the Illustrated Parts Catalog and on engineering drawings.

2. Pressurize/Depressurize Hydraulic System

A. Pressurize Hydraulic System with External Hydraulic Source Pressure

- (1) Tools and Equipment Required: A hydraulic test stand equipped with a variable-displacement hydraulic pump capable of delivering 20 gpm at 3000 psi, using Skydrol hydraulic fluid. The maximum permissible operating temperature should not exceed 180°F (82.2°C).
- (2) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (3) Make certain that wing flap control handle agrees with wing flap position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Remove dust caps from airplane ground service connections and connect test stand pressure and supply hoses.
- (6) Energize test stand hydraulic pump; pressurize hydraulic system to 3000 psi.


WARNING: BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

B. Depressurize and Disconnect

- (1) Check hydraulic fluid level of hydraulic reservoir; fill if necessary as described on instruction placard on reservoir.
- (2) Deenergize test stand hydraulic pump.




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

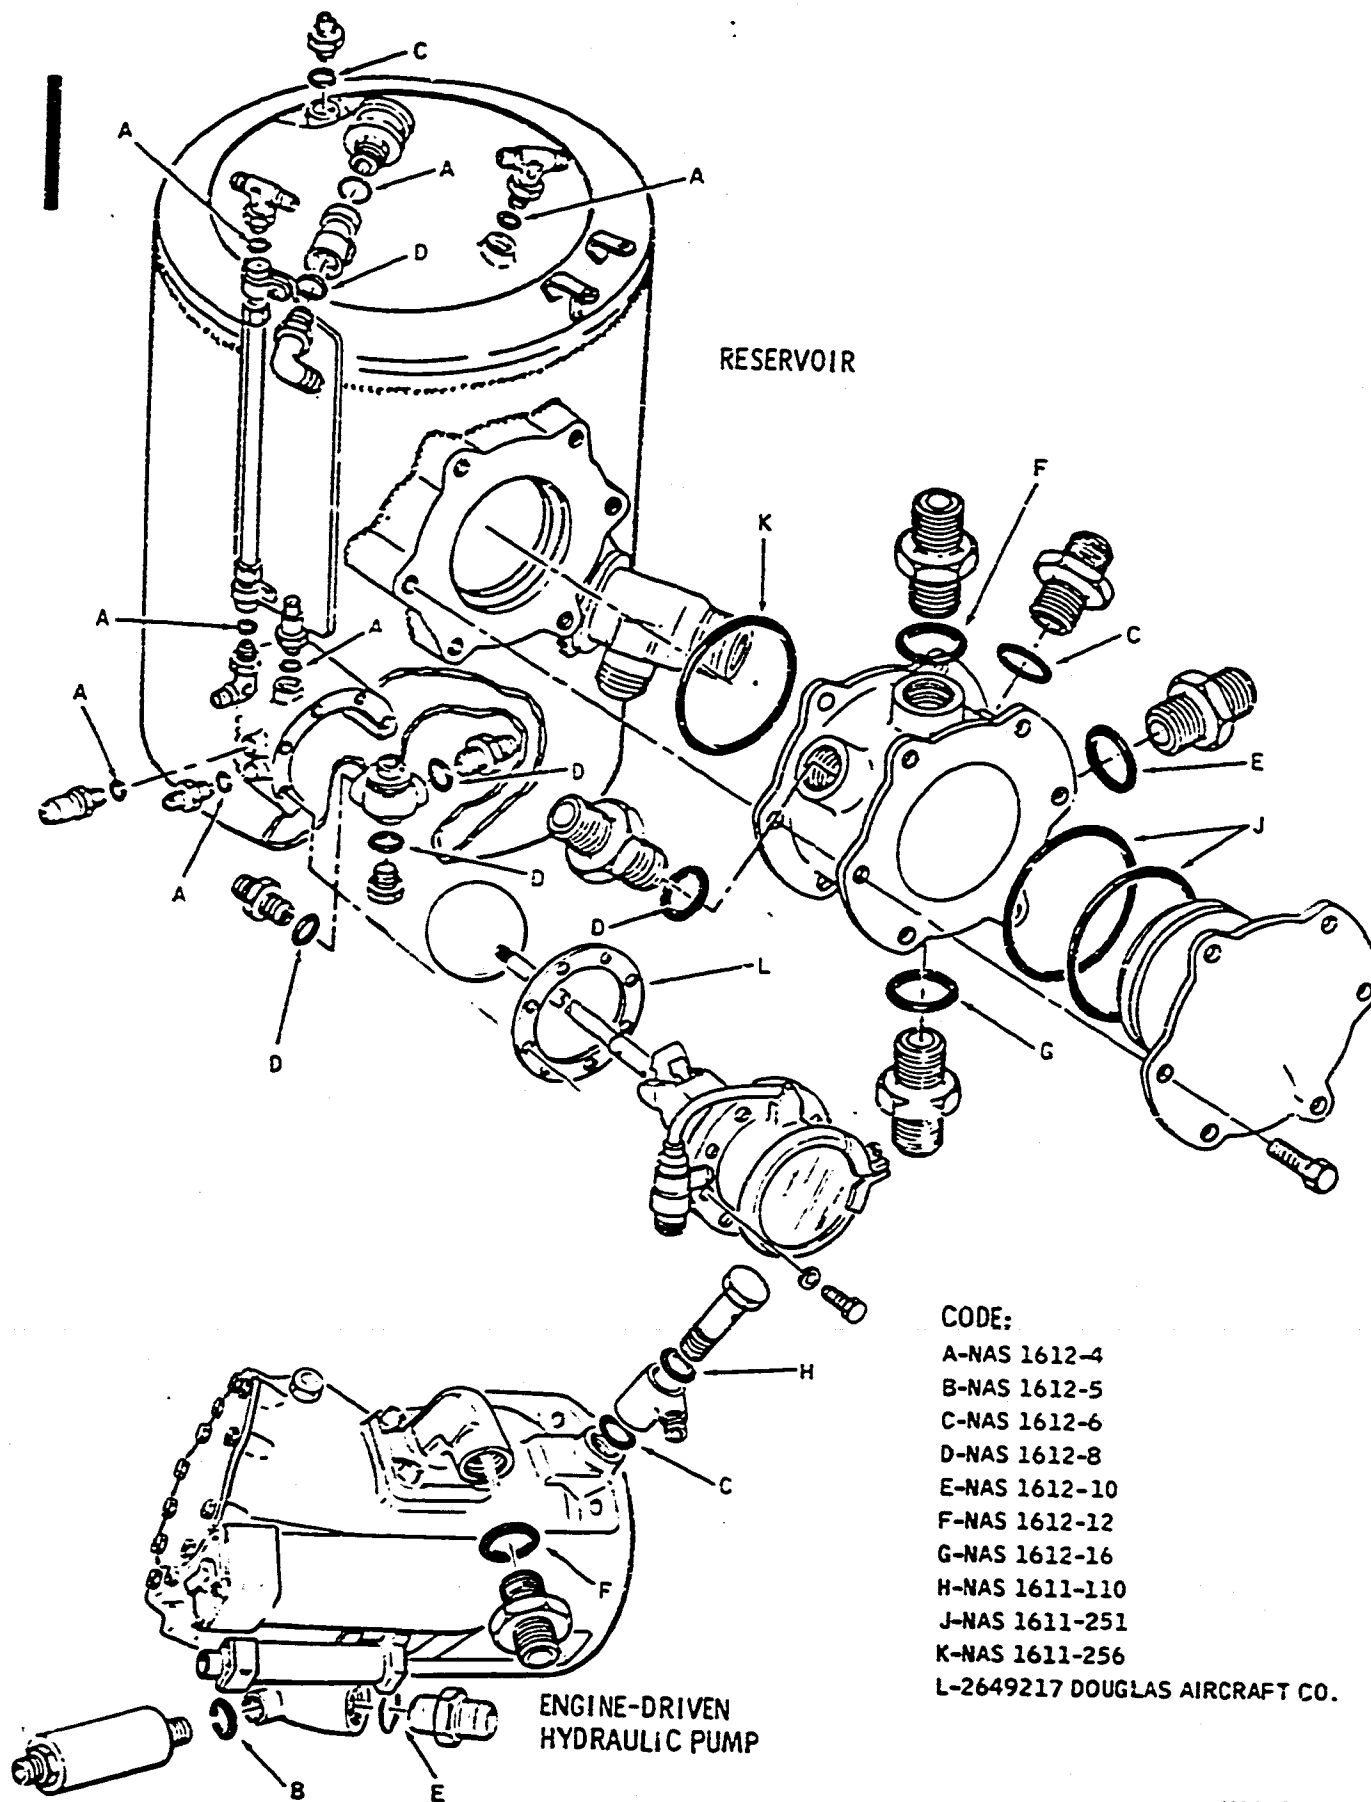


Hydraulic Power System Components -- O-Rings  
 Figure 201 (Sheet 1)


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

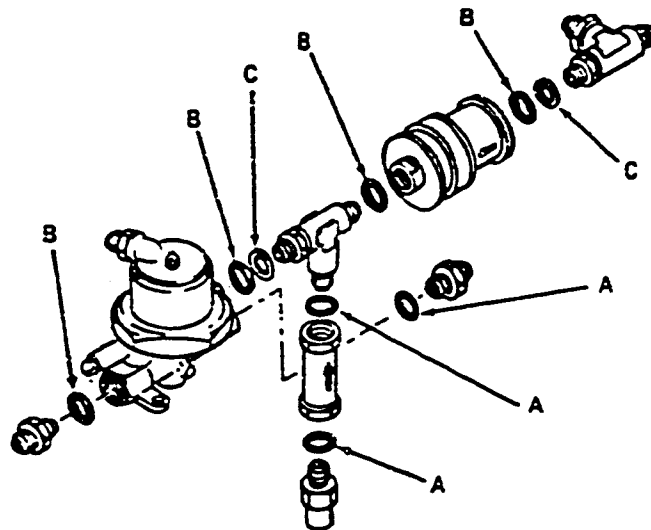


REGULATOR - ASPIRATOR  
 AND AIR FILTERS

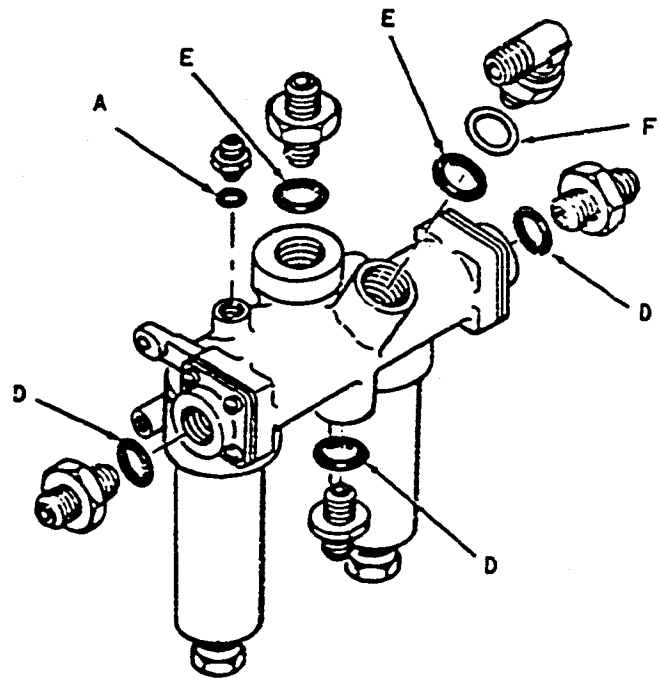

DUAL-FILTER &  
 RELIEF VALVE

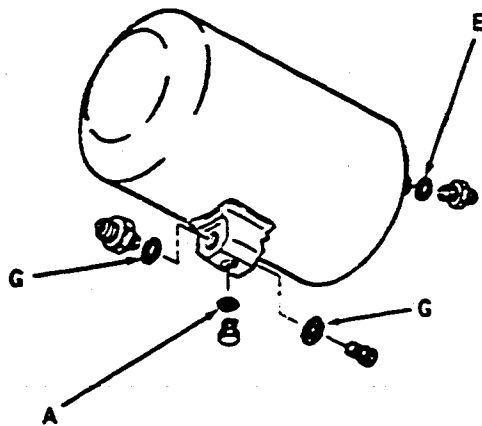

HYDRAULIC RESERVOIR  
 AIR CHAMBER

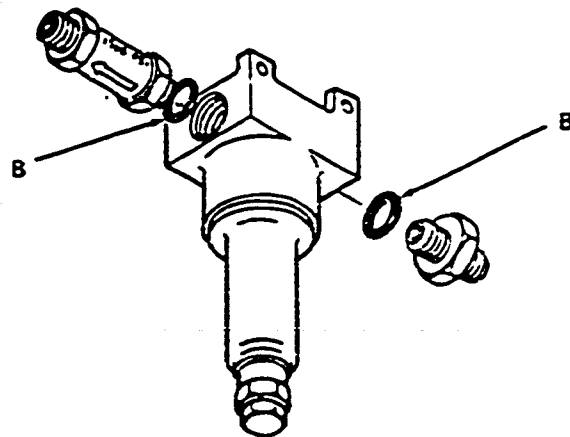

HYDRAULIC  
 PUMPCASE DRAIN  
 FILTER

CODE

- A - NAS1612-4
- B - NAS1612-6
- C - MS28777-6 \*
- D - NAS1612-10
- E - NAS1612-12
- F - MS28777-12 \*
- G - NAS1612-16
- \* - BACKUP RING

HA2-34158


Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 2)

Oct 1/67

Printed in U.S.A.

29-00  
 CODE 3  
 Page 205

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

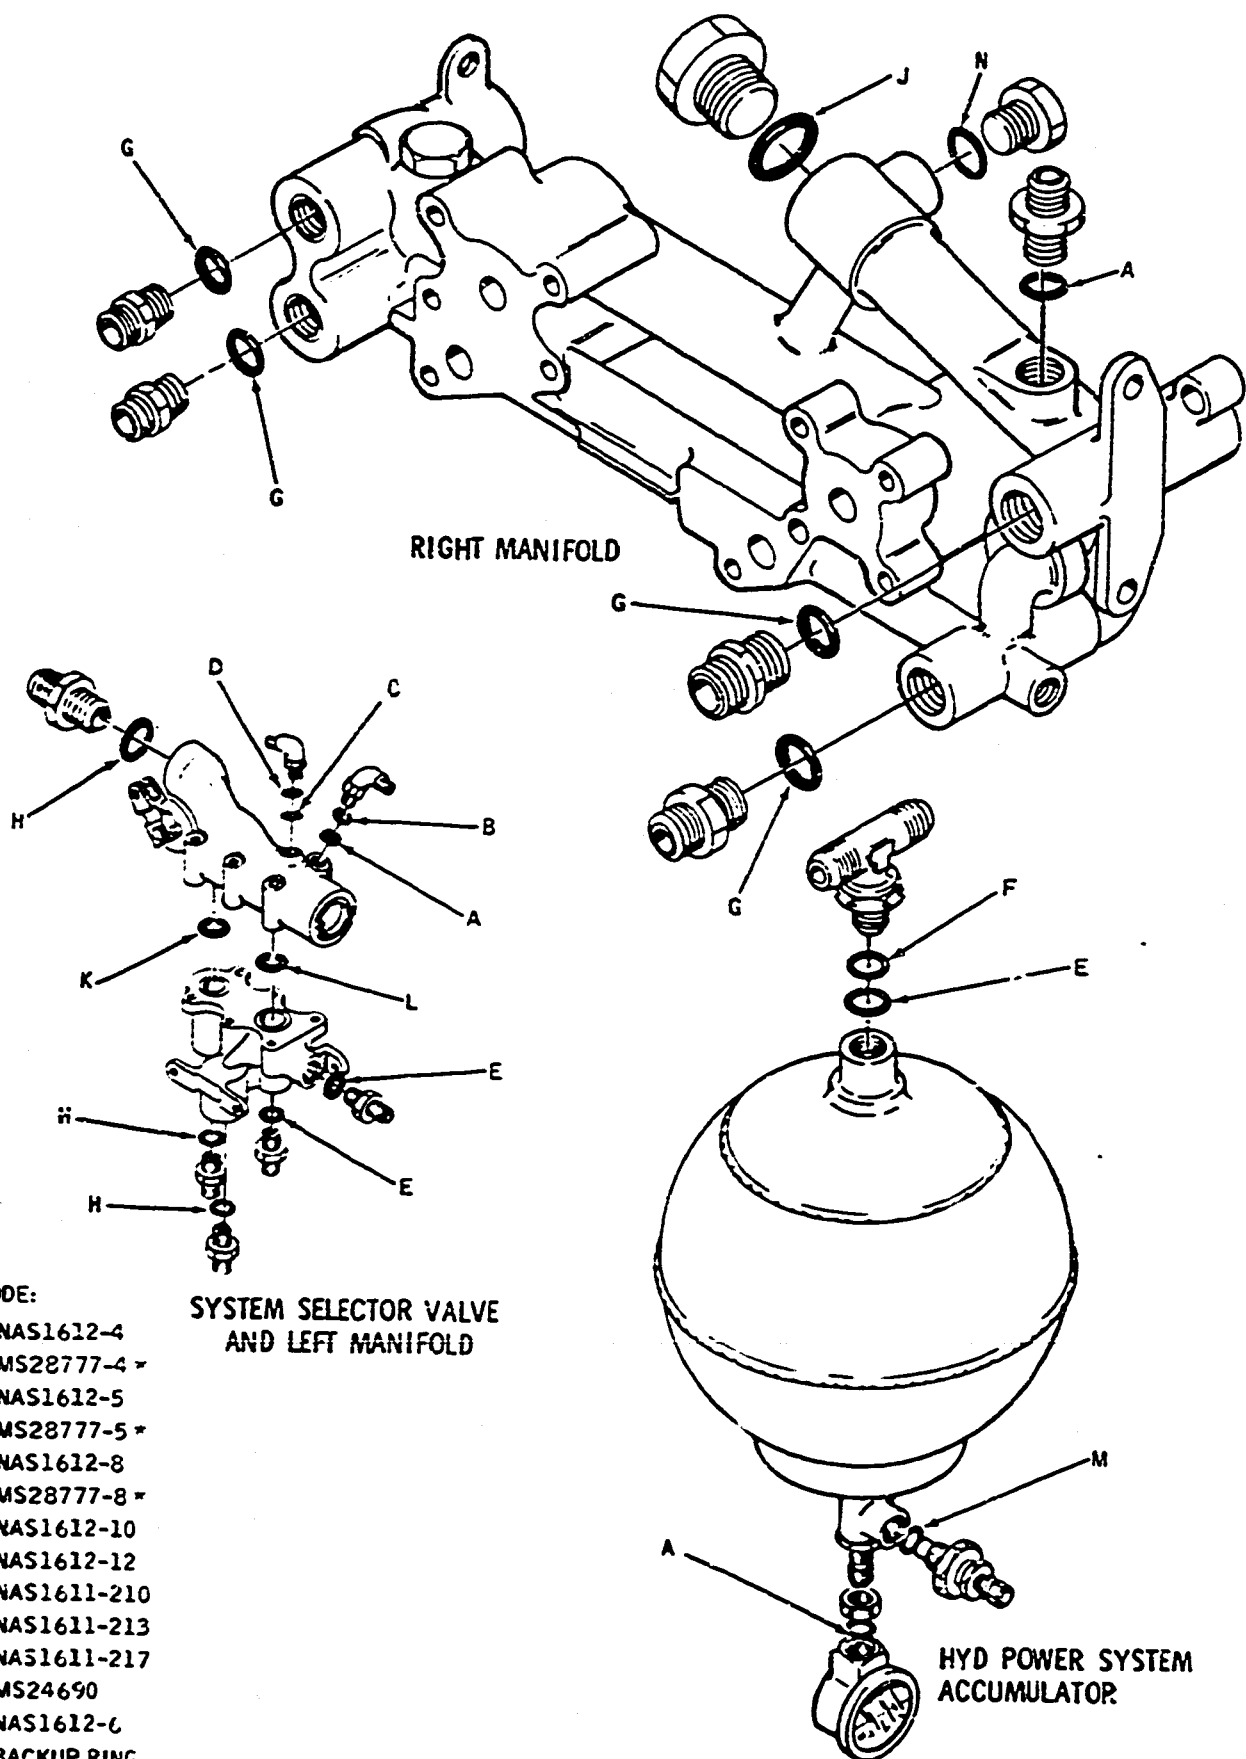

CODE:

A-NAS1612-4  
 B-MS28777-4 \*  
 C-NAS1612-5  
 D-MS28777-5 \*  
 E-NAS1612-8  
 F-MS28777-8 \*  
 G-NAS1612-10  
 H-NAS1612-12  
 J-NAS1611-210  
 K-NAS1611-213  
 L-NAS1611-217  
 M-MS24690  
 N-NAS1612-6  
 \*-BACKUP RING


SYSTEM SELECTOR VALVE  
 AND LEFT MANIFOLD

HYD POWER SYSTEM  
 ACCUMULATOR


HA2-1678A

Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 3)


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

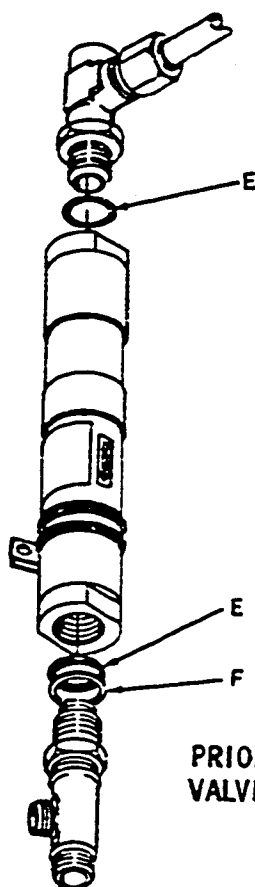

PRIORITY  
VALVE

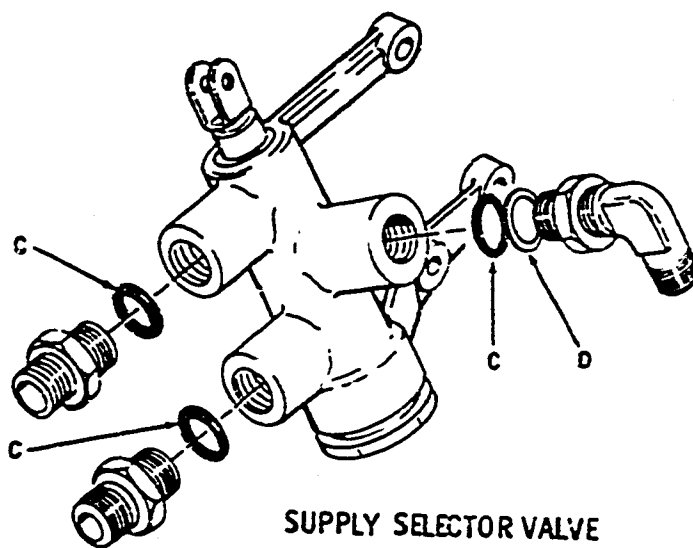


SUPPLY SELECTOR VALVE

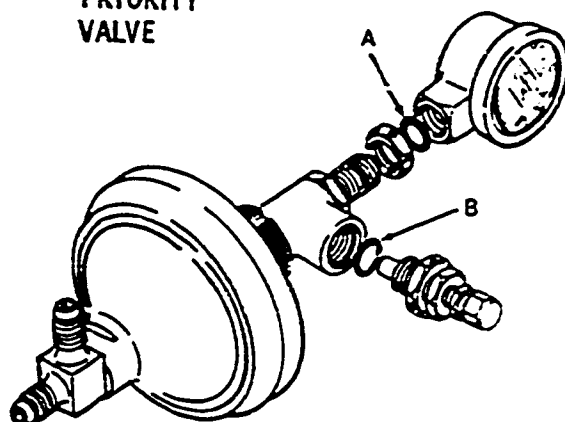


SURGE DAMPER ACCUMULATOR

CODE  
 A-NAS1612-4  
 B-MS2469-4  
 C-NAS1612-8  
 D-MS28777-8\*  
 E-NAS1612-12  
 F-MS28777-12\*  
 G-NAS1612-20

\*BACKUP RING

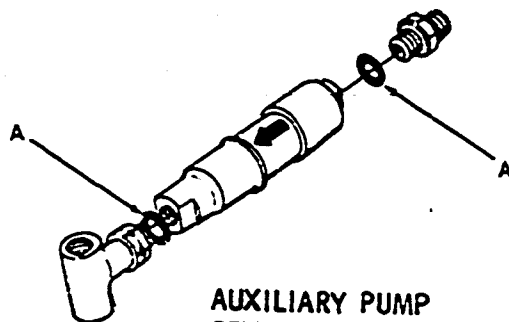

AUXILIARY PUMP  
RELIEF VALVE

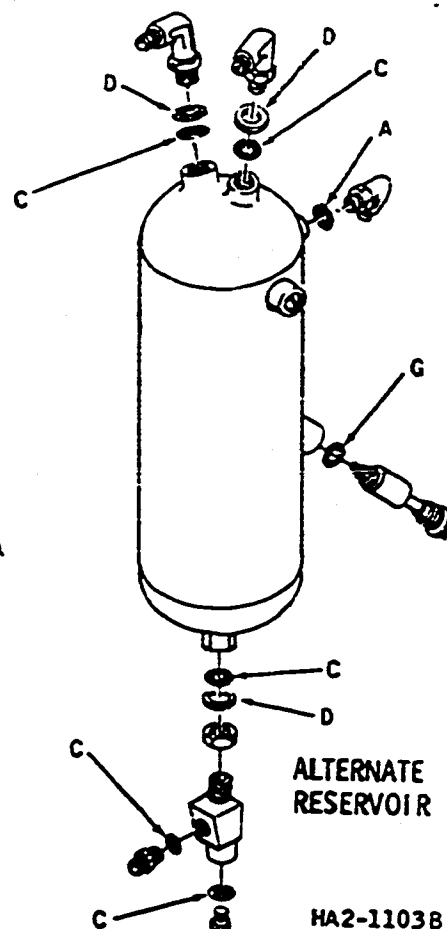

ALTERNATE  
RESERVOIR

HA2-1103B


Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 4)

Oct 1/67

Printed in U.S.A.

29-00  
 CODE 3  
 Page 207


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

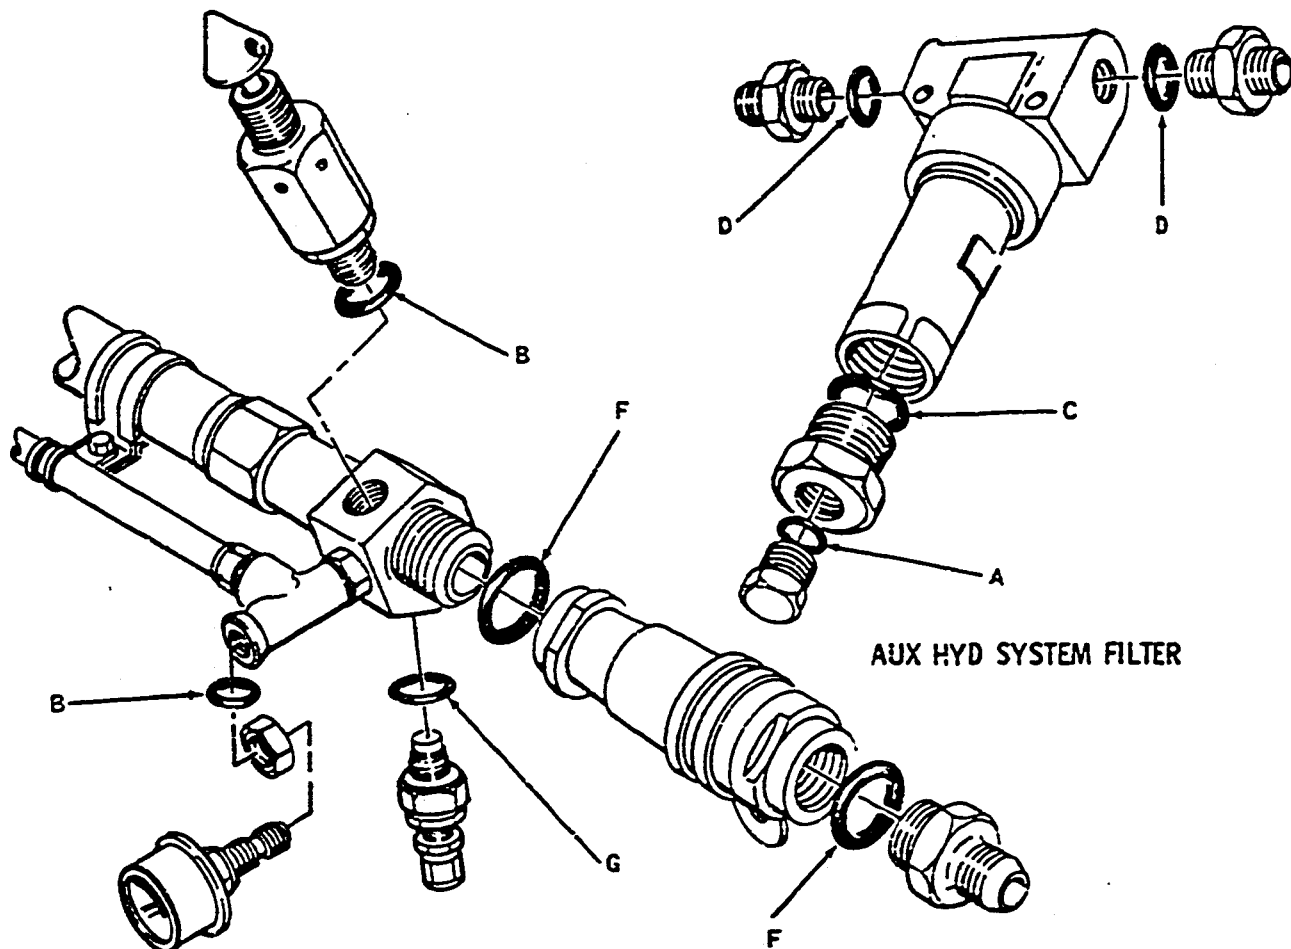

RESERVOIR AIR BLEED VALVE,  
 FILTER VALVE, PRESSURE GAGE  
 AND RELIEF VALVE

CODE

- A - NAS1612-2
- B - NAS1612-4
- C - NAS1612-6
- D - NAS1612-8
- E - NAS1612-10
- F - NAS1612-12
- G - MS24690

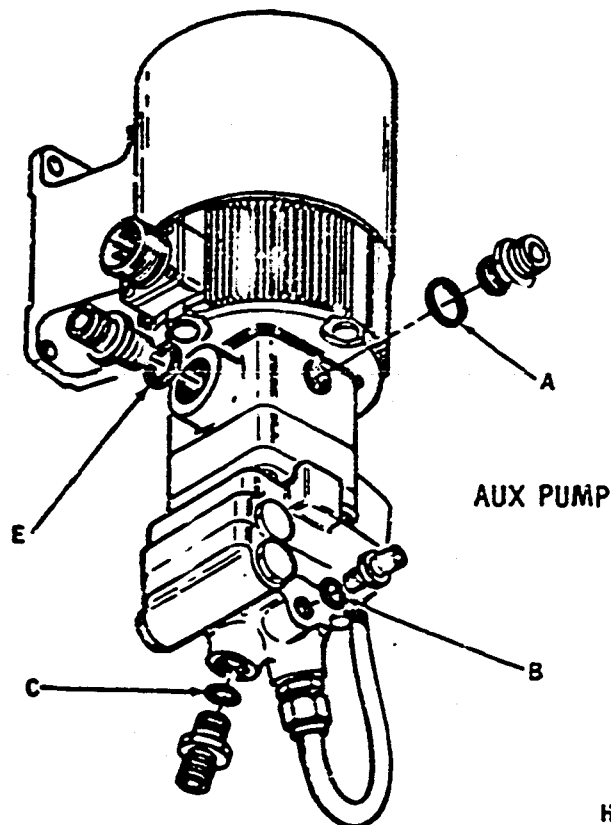

HA2-1679 A

Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 5)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Depressurize hydraulic system by operating the brakes and manually moving the longitudinal trim handle until horizontal stabilizer movement stops.
- (4) Disconnect and cap test stand pressure and supply hoses from airplane ground service connections; install duct caps on connections and close access door.

C. Pressurize Hydraulic System with Auxiliary Hydraulic Pump Pressure

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap control handle agrees with wing flap position.
- (3) Place hydraulic system selector control lever in general system/bypass position.
- (4) Check that airplane electrical buses are energized (see Chapter 24).
- (5) Start auxiliary hydraulic pump by placing auxiliary hydraulic pump control switch momentarily in start position. Pressure indicated in the flight compartment should be 2600 to 3000 psi.

WARNING: BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

CAUTION: DO NOT HOLD THE AUXILIARY HYDRAULIC PUMP CONTROL SWITCH IN THE START (HOLD ONLY IN EMERGENCY) POSITION FOR NORMAL PRESSURIZATION.

D. Depressurize

- (1) Stop auxiliary hydraulic by placing auxiliary hydraulic pump control switch momentarily in stop position.
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.
- (3) Place hydraulic system selector control lever in general system (normal) position.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

E. Pressurize Hydraulic System with Engine-Driven Hydraulic Pump Pressure

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap handle agrees with wing flap position.
- (3) Make certain that applicable fire control handle is in normal position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Make certain that applicable engine-driven hydraulic pump control switch is in on position.
- (6) Start engine No. 2 or No. 3 (see Chapter 71). Hydraulic pressure indicated in the flight compartment should be 2800 to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

F. Depressurize

- (1) Shut down engine (see Chapter 71).
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.

3. Pressurize/Depressurize Hydraulic Reservoir

A. General

- (1) The air inflation valve, air bleed valve, and air pressure gage for manually pressurizing and depressurizing the hydraulic reservoir and air chamber are located on the aft side of the wing rear spar, at the forward end of the left main gear wheel well. The valves and gage are mounted on a cross fitting just inboard of the reservoir air chamber. Access is through the left main gear inboard door.

B. Tools and Equipment Required

- (1) Pressure cylinder (clean dry compressed air or nitrogen).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

C. Pressurize Hydraulic Reservoir

NOTE: Normal air pressure in the reservoir and air chamber should be between 30 and 35 psi.

NOTE: There are three methods of pressurizing the hydraulic reservoir:

- (1) Run an inboard engine.
- (2) Connect and operate a hydraulic test stand.
- (3) Direct pressurization of air chamber by introduction of compressed air or nitrogen.

The first two methods are automatic in that the reservoir is pressurized by action of the hydraulic fluid through the regulator-aspirator when the system is pressurized. The third method (direct inflation) will be described in the following steps.

- (1) Remove air inflation valve cap and attach pressure cylinder service hose to inflation valve.
- (2) Loosen inflation valve swivel nut three complete turns.

NOTE: The rate of inflation (flow through the valve) is governed by the degree of opening of the swivel valve.

- (3) Pressurize reservoir to 30 to 35 psi reading on air pressure gage.
- (4) Tighten swivel nut.
- (5) Disconnect service hose and install valve cap.

CAUTION: THE AIR INFLATION VALVE IS A STANDARD "AN" VALVE WHICH HAS BEEN MODIFIED BY INSTALLATION OF SKYDROL TYPE SEALS. DO NOT REPLACE THE VALVE WITH A VALVE WHICH HAS NOT BEEN MODIFIED FOR SKYDROL.

D. Depressurize Hydraulic Reservoir

- (1) Depress air bleed valve button; hold until all pressure has bled off and pressure gage reads zero.

4. Drain Hydraulic System Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.

Jun 15/67

Printed in U.S.A.

29-00  
CODE 3  
Page 211



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Clean container of approximately 20 US gallons (16.65 Imperial gallons or 75.7 liters) capacity.

B. Drain Reservoir

- (1) Depressurize hydraulic system and reservoir (see paragraphs 2 and 3).
- (2) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (3) Remove drain unit, and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

5. Drain Auxiliary Hydraulic Pump Alternate Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.
- (2) Clean container of approximately 3 US gallons (2.5 Imperial gallons or 11.5 liters) capacity.

B. Drain Reservoir

- (1) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (2) Remove drain unit and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

6. Hydraulic System Pressure Decay Rates

A. Decay Rate Test

- (1) By observing the time it takes for the hydraulic system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi, it is possible, in most cases, to detect units that are leaking excessively. This procedure is not infallible because the sum of the maximum allowable leakage rates determines the minimum time permissible for pressure decay. The hydraulic system with average leakage will maintain pressure for longer periods than indicated and may do so even with one unit leaking excessively.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The main hydraulic system should be tested for pressure decay time under the following conditions:
  - (a) System selector valve in general system/bypass or general system (normal).
  - (b) Nosewheel straight ahead plus or minus 30 degrees and steering valve in neutral position.
  - (c) Manual main gear door valve open.
  - (d) Landing gear down and locked.
  - (e) Wing flaps up.
  - (f) Accumulators properly charged.
  - (g) Aileron shutoff valve off.
  - (h) Rudder shutoff valve off.
  - (i) Thrust reversers stowed.
- (3) Pressurize main hydraulic system to 2900 ( $\pm 100$ ) psi with auxiliary pump or hydraulic test stand. Then shut off hydraulic power source and note time interval required for system pressure to decrease 1000 psi. This should be more than 34 seconds on a new airplane or more than 23 seconds on an airplane in service before overhaul. If pressure decay time is less, the main hydraulic system should be inspected for a malfunctioning unit.
- (4) If pressure decay test indicates that a unit in the main hydraulic system was leaking excessively, that unit may be in the nose or main gear subsystem, the main gear door subsystem, the flap subsystem, the slot subsystem, the selector valve, or the compressor subsystem. By placing the subsystem control valves in opposite positions one at a time and repeating the pressure decay test, it is possible that the faulty unit may be located.
- (5) Rudder power hydraulic system may be tested for pressure decay time by using procedures outlined in steps (2) and (3), except that the rudder shutoff valve should be on. Decay time should be more than 10 seconds on a new airplane or more than 8 seconds on an airplane in service before overhaul. If less, the rudder power system should be inspected for a malfunctioning unit.
- (6) Supplementary information may be obtained for the rudder power hydraulic system by using the auxiliary rudder system pump and accumulator air gage to test the time for rudder pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi. With the rudder hydraulic power shutoff valve off, the time should be more than 2 minutes. With the rudder hydraulic power shutoff valve on, the time should be 12 seconds on a new airplane and 10 seconds on an airplane in service before overhaul.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (7) Aileron hydraulic power system may be tested for pressure decay by using procedures outlined in steps (2) and (3), except that the aileron hydraulic power shutoff valve should be on. The decay time should be more than 6-1/2 seconds on a new airplane or more than 4-1/2 seconds on an airplane in service before overhaul. If less, the aileron power system should be inspected for a malfunctioning unit.
- (8) Brake system and the nose gear steering system are isolated from the main hydraulic system by check valves and may be tested separately. Using the brake accumulator gages, the pressure decay time for the brake system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 10 hours with the parking brake off, and 2 hours with the parking brake on. With the brake accumulators fully charged deplete the general system pressure. Wait 3 to 5 minutes and then set the parking brake and hold the parking brake pressure for 15 minutes. The drop in pressure at the brake accumulators should not exceed 125 psi during this time.
- (9) Release the parking brakes, and build up brake accumulator pressure to 2900 ( $\pm 100$ ) psi. With hydraulic power off and brakes off, check brake accumulator pressure. Drop in pressure at the accumulators should not exceed 100 psi in 30 minutes. Fast decay time for the brake system with parking brake off, indicates either a faulty brake valve in the right manifold. A fast decay time with the parking brake on indicates a faulty antiskid valve or a faulty brake valve.
- (10) Using the gages on the nose pressure accumulators, the time for the nose gear steering system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 19 minutes. If less, one of the pressure check valves is faulty, or the nose gear steering control valve is faulty or out of neutral.
- CAUTION:** ALL LANDING GEAR GROUND LOCKPINS MUST BE INSTALLED BEFORE CONDUCTING THE FOLLOWING TEST.
- (11) Under conditions outlined in step (2), except with the landing gear control valve in the up position, the time for pressure decay should be unchanged. If time limits change more than 5 seconds as determined in paragraph (3), a faulty unit is in the gear subsystem.
- (12) Under conditions outlined in step (2), except with the main gear door manual control valve in the closed position, the decay time should be more than 24 seconds on a new airplane and 18 seconds on an airplane in service before overhaul. If less, the faulty unit is in the main gear door subsystem.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (13) Under conditions outlined in step (2), except with the flap control valve in the down position, the decay time should be more than 24 seconds on a new airplane and 17 seconds on an airplane in service before overhaul. If less, the faulty unit is in the flap subsystem.
- (14) Under conditions outlined in step (2), time limit for pressure decay should remain unchanged as determined in paragraph (3) with the slot valve in either position, or the selector valve in either general system/bypass or general system (normal). If the time changes with a change of valve position, the faulty unit is in that subsystem.
- (15) The thrust reverser system is isolated from the main system by an electrically operated shutoff valve which is open only during thrust reverser actuation. Therefore, main system decay is not affected by the thrust reverser system except during reverser actuation or at the thrust reverser extended position. Additional information may be obtained for the thrust reverser system by using the auxiliary reverser system pump and reverser system pressure gage or accumulator gage to test the time for reverser pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi. With the reversers in the stowed position, the decay time should be greater than 3 minutes on a new aircraft or greater than 1-1/2 minutes on an aircraft in service before overhaul. If times are less, the reverser system should be inspected for a malfunction.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - MAINTENANCE PRACTICES

1. General

A. Skydrol Safety Precautions

- (1) Before performing any operation on the hydraulic system, personnel should read and thoroughly understand the following precautions to be observed when working with Skydrol hydraulic fluid.

WARNING: OBSERVE THE FOLLOWING SAFETY PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. LONG EXPOSURE TO SKYDROL CAN CAUSE SKIN DEHYDRATION AND CHAPPING.

- (2) Wash hands thoroughly with soap and water before starting work.
- (3) Apply barrier cream to hands, wrists, and forearms. Rub cream under finger nails and into creases of skin.
- (4) Wear goggles when pressure testing components or systems, and whenever there is any possibility of Skydrol splashing into eyes.
- (5) If Skydrol splashes into eyes, treat eyes immediately by irrigating thoroughly with clear cold water, and report the incident.
- (6) Wash hands, wrists, and forearms with soap and hot water whenever they have come in contact with Skydrol.
- (7) If clothing becomes soaked with Skydrol; remove clothing as soon as possible, thoroughly wash skin, and put on clean clothing.

B. Technical Precautions

- (1) Before any maintenance is performed on the hydraulic system, personnel should read and thoroughly understand the following precautions. Careful adherence to these instructions will aid in maintaining a functional and trouble-free system.

CAUTION: OBSERVE THE FOLLOWING TECHNICAL PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. SKYDROL WILL ATTACK A WIDE RANGE OF MATERIALS INCLUDING RUBBER, COPPER, VARIOUS PLASTICS, AND PAINTS.

- (2) Ensure that Skydrol does not come into contact with any part of aircraft outside of the hydraulic system. Keep spillage to an absolute minimum. Clean up spilled hydraulic fluid immediately to prevent entry into adjacent areas of the airplane precluding future false hydraulic leak reports. If spillage occurs, wipe up the fluid with a dry cloth and wash contaminated area with soap and hot water.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) When lines are disconnected and/or components are removed, provide suitable protection to prevent foreign material from entering the lines or components by use of caps, covers, clean lint-free rags, etc.
- (4) When electrical connectors are disconnected, install caps or other suitable protectors to prevent entry of hydraulic fluid, moisture, and foreign objects.
- (5) Always check position and angle of all fittings removed from components to ensure placement and alignment when installing replacement components.
- (6) When washing metal parts before assembly, use only approved solvent, and ensure that all traces of the solvent are removed before assembly.
- (7) Use only clean Skydrol for flushing or testing hydraulic components.
- (8) Use only clean Skydrol when filling reservoirs, sumps, filter bowls, pumps, etc., before installation of components.
- (9) Do not unpack Skydrol O-rings and seals until required. Ensure that only approved rings and seals are used.
- (10) When assembling O-rings and seals, lubricate with Skydrol Assembly Lubricant, MCS 352, Monsanto Chemical Company, or clean Skydrol hydraulic fluid.
- (11) Take care to prevent contamination of Skydrol with other materials (oils, water, dirt, etc.).
- (12) If a system becomes contaminated with any petroleum-based oil or solvent, drain the system and flush with clean Skydrol.

**C. Landing Gear Precautions**

- (1) The landing gear control lever should be in the down position and the landing gear ground lockpins should be installed in the main and nose gears at all times during ground maintenance, except as noted in maintenance procedural steps.
- (2) The main gear wheels should be chocked at all times during ground maintenance, except as noted in maintenance procedural steps.
- (3) The hydraulic system selector control lever should be in the general system (normal) position at all times during ground maintenance, except as noted in maintenance procedural steps.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) The main gear bogie beams should be locked in the trail position at all times, except as noted in maintenance procedural steps.

**WARNING:** WHEN THE AIRPLANE IS ON WING AND FUSELAGE JACKS, THE MAIN GEAR WHEELS ARE CLEAR OF THE GROUND, AND THE HYDRAULIC POWER SYSTEM IS PRESSURIZED, THE AFT BOGIE AND WHEELS WILL SWING OUTBOARD VERY RAPIDLY IN THE DIRECTION OF NOSEWHEEL TURN IF THE NOSEWHEELS ARE TURNED MORE THAN 40 DEGREES. BOGIE AND MAIN GEAR AFT WHEELS WILL RETURN TO TRAIL POSITION JUST AS RAPIDLY WHEN THE NOSEWHEELS ARE RETURNED TO NEUTRAL POSITION. THIS COULD CAUSE SERIOUS INJURY TO PERSONNEL WORKING NEAR THE WHEELS.

D. Hydraulic Power System O-Rings


- (1) O-rings used in the installation of hydraulic power system components are shown in Figure 201. O-rings required for the landing gear, power control systems, etc., will be found in the applicable chapters.
- (2) O-ring part numbers shown in Figure 201 are interchangeable with Douglas standard (S-XXXXXXX) numbers listed in the Illustrated Parts Catalog and on engineering drawings.

2. Pressurize/Depressurize Hydraulic System

A. Pressurize Hydraulic System with External Hydraulic Source Pressure

- (1) Tools and Equipment Required: A hydraulic test stand equipped with a variable-displacement hydraulic pump capable of delivering 20 gpm at 3000 psi, using Skydrol hydraulic fluid. The maximum permissible operating temperature should not exceed 180°F (82.2°C).
- (2) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (3) Make certain that wing flap control handle agrees with wing flap position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Remove dust caps from airplane ground service connections and connect test stand pressure and supply hoses.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

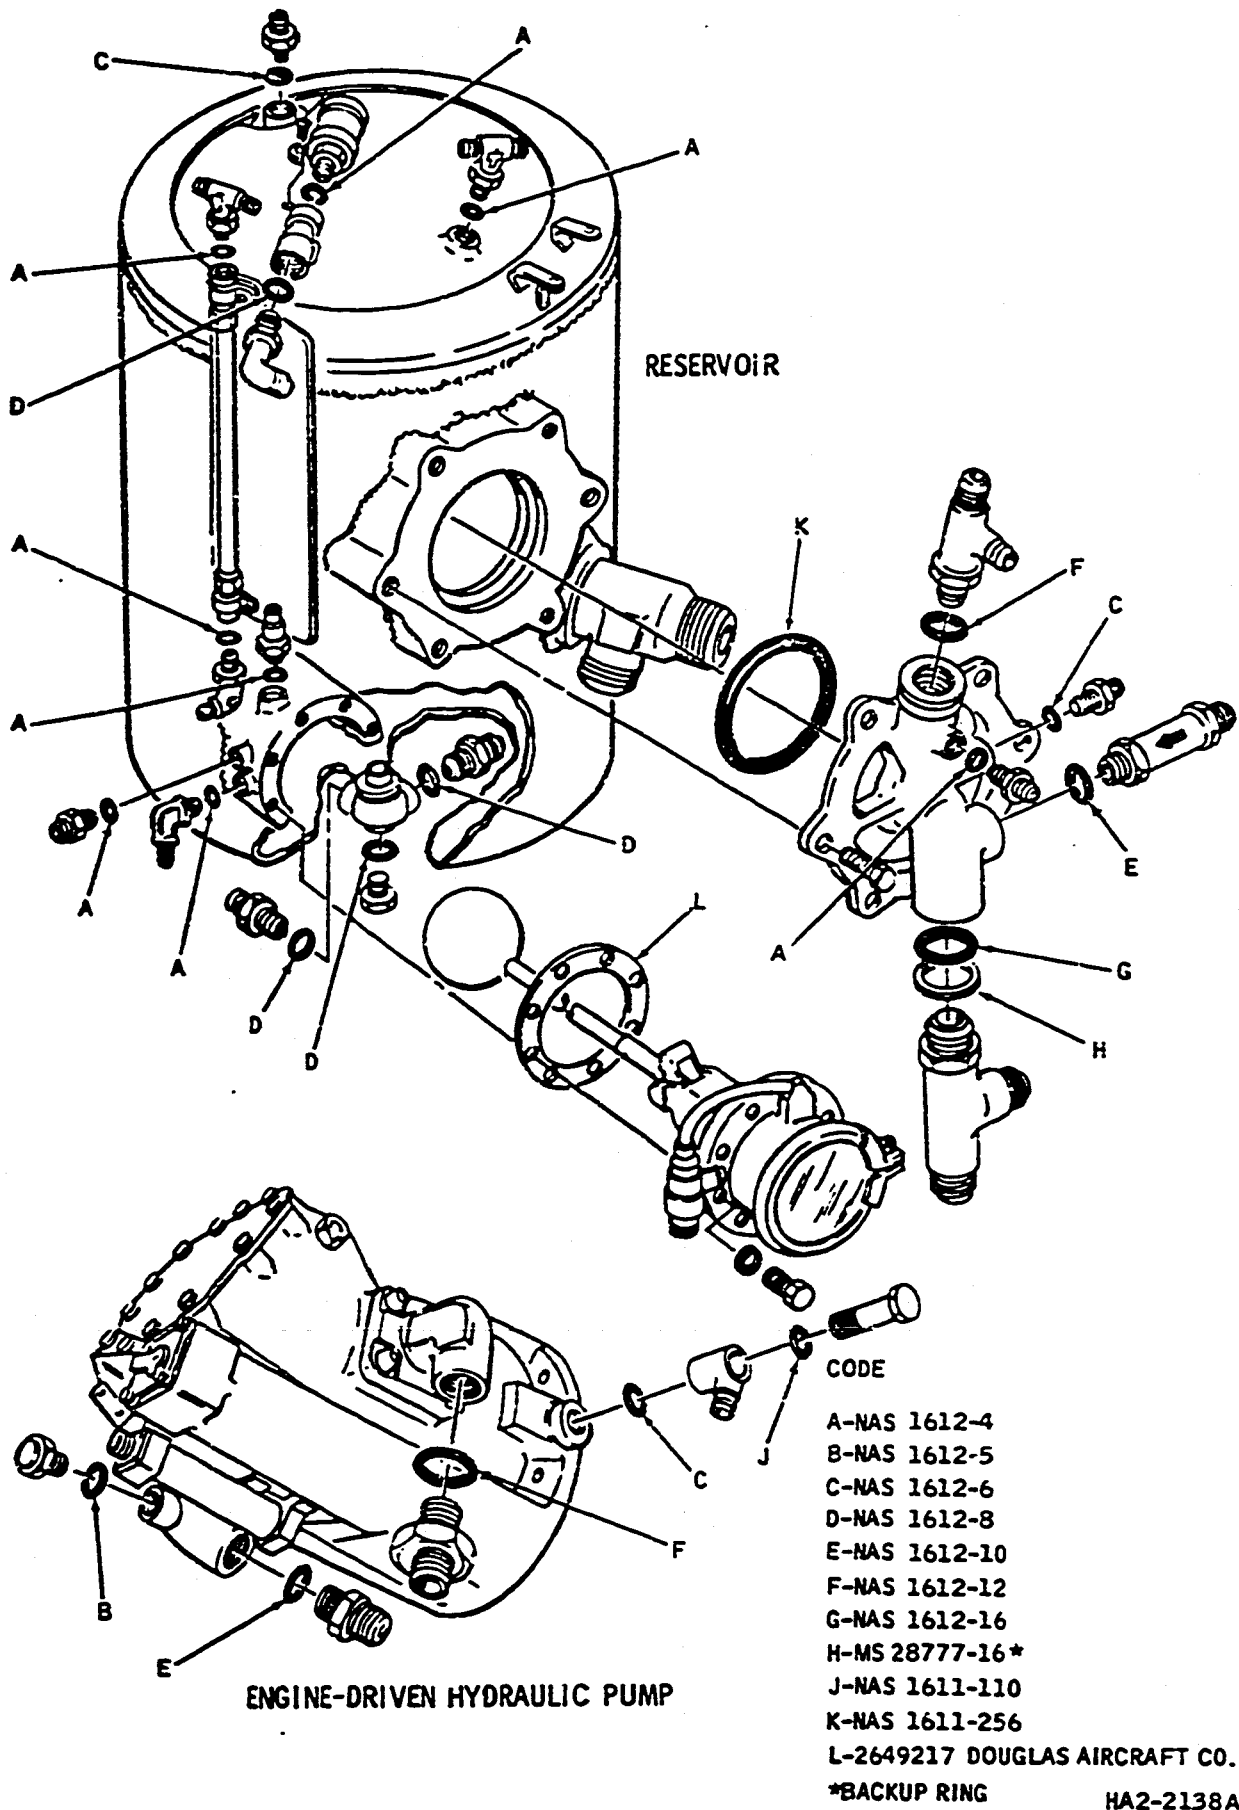


Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 1)




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

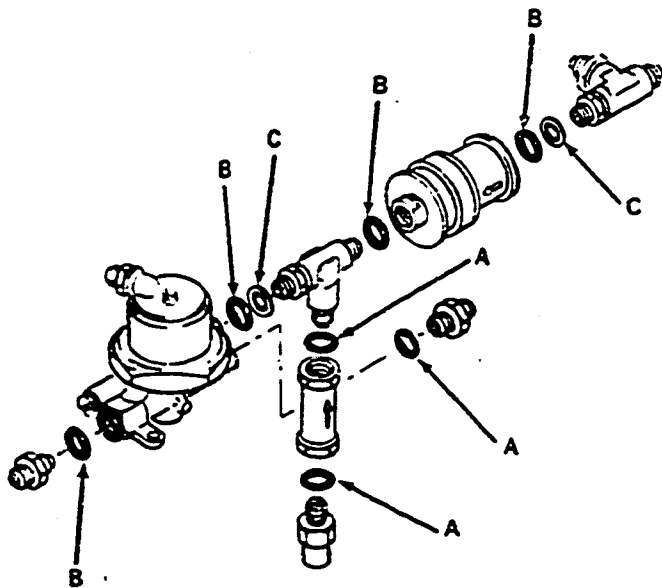


REGULATOR - ASPIRATOR  
 AND AIR FILTERS

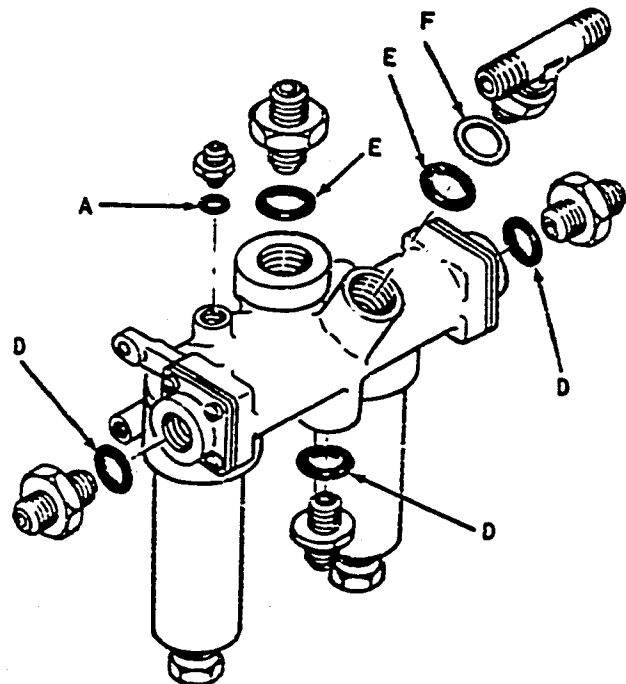

DUAL-FILTER &  
 RELIEF VALVE

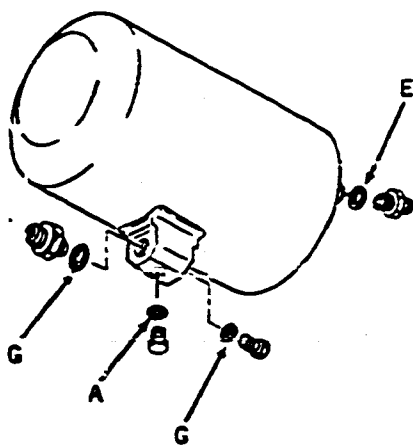

HYDRAULIC RESERVOIR  
 AIR CHAMBER

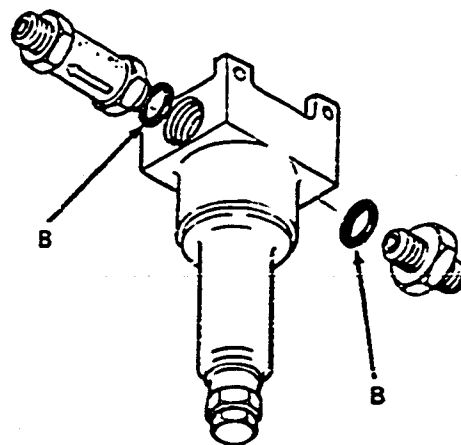

HYDRAULIC  
 PUMPCASE DRAIN  
 FILTER

CODE:

- A - NAS1612-4
- B - NAS1612-6
- C - MS28777-6\*
- D - NAS1612-10
- E - NAS1612-12
- F - MS28777-12\*
- G - NAS1612-16
- \* - BACKUP RING

Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 2)


HA2-1101A

Oct 1/67

Printed in U.S.A.


29-00  
 CODE 4  
 Page 205

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

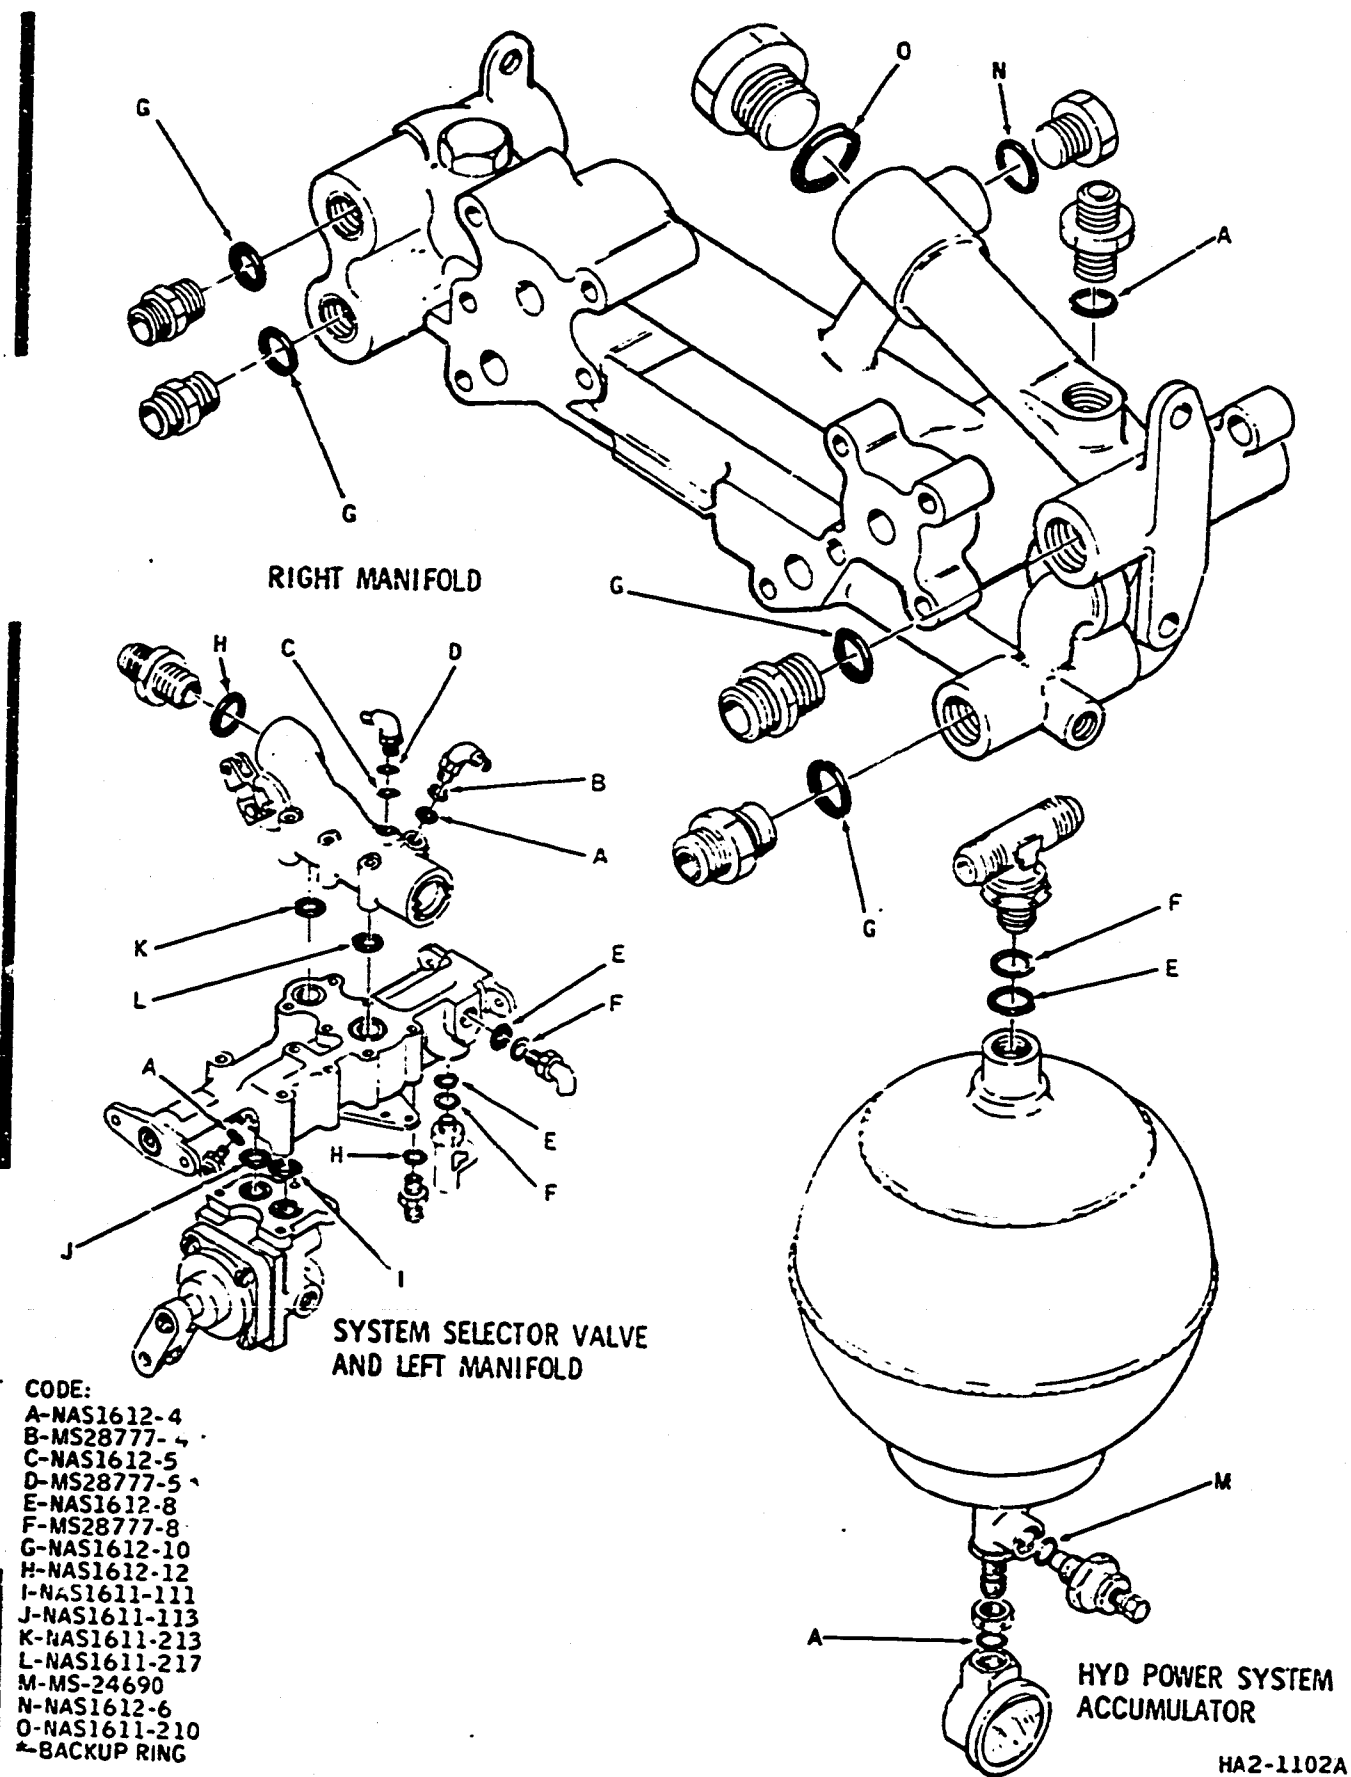


Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 3)


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

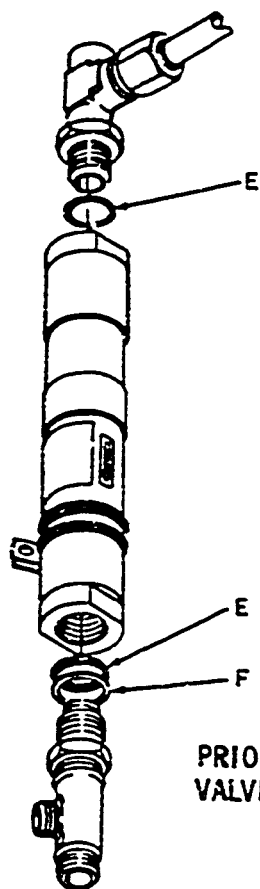

PRIORITY VALVE

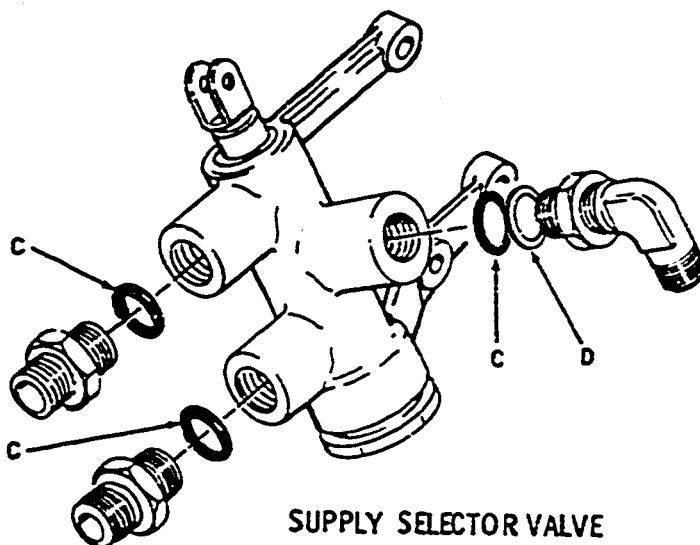


SUPPLY SELECTOR VALVE

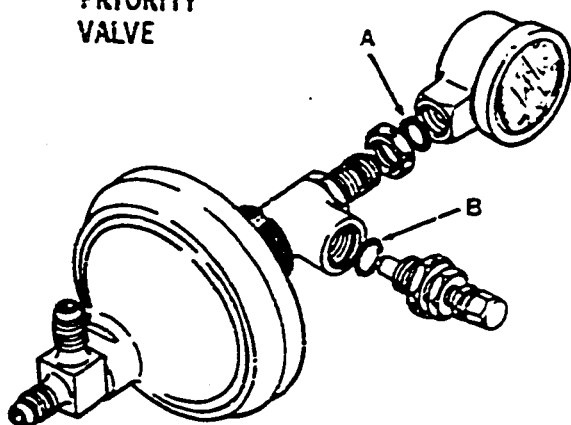


SURGE DAMPER ACCUMULATOR

CODE  
 A-NAS1612-4  
 B-MS2469-4  
 C-NAS1612-8  
 D-MS28777-8\*  
 E-NAS1612-12  
 F-MS28777-12\*  
 G-NAS1612-20

\* BACKUP RING

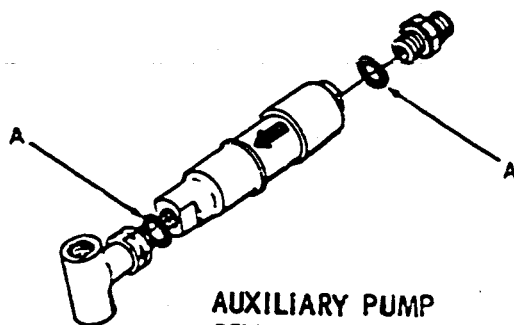

AUXILIARY PUMP RELIEF VALVE

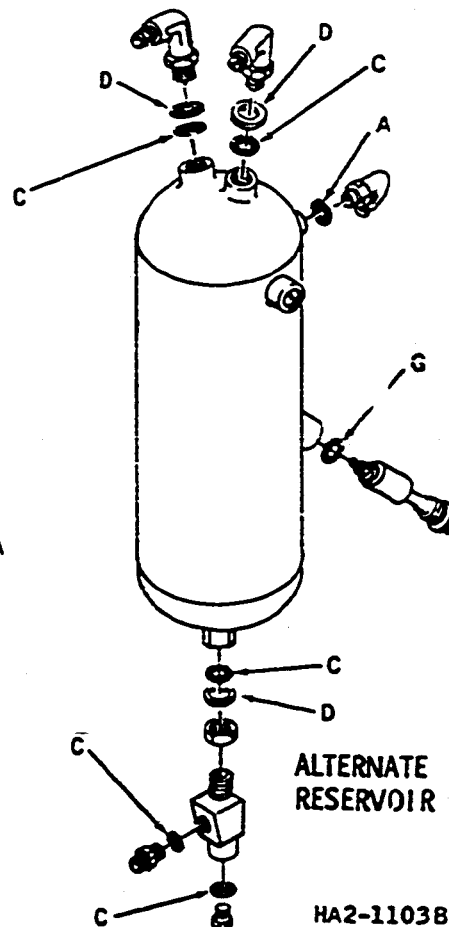

ALTERNATE RESERVOIR

HA2-1103B


Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 4)

Oct 1/67

Printed in U.S.A.

29-00  
 CODE 4  
 Page 207

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

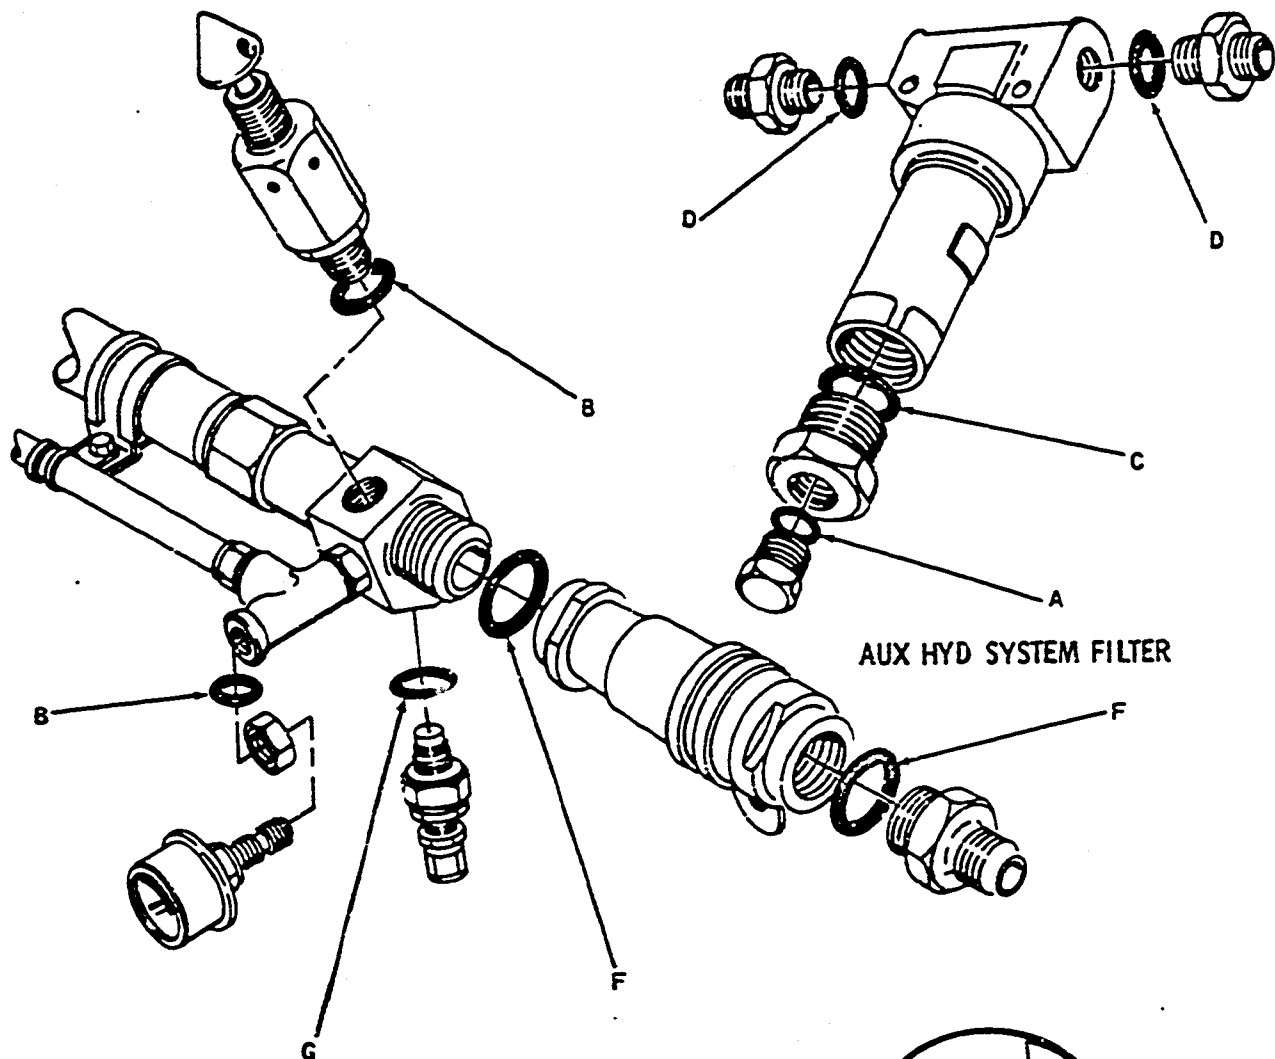


RESERVOIR AIR BLEED VALVE,  
 FILTER VALVE, PRESSURE GAGE  
 AND RELIEF VALVE

CODE

A-NAS1612-2  
 B-NAS1612-4  
 C-NAS1612-6  
 D-NAS1612-8  
 E-NAS1612-10  
 F-NAS1612-12  
 G-MS24690  
 H-MS28777-10 \*  
 J-MS28777-4 \*

\*BACKUP RING

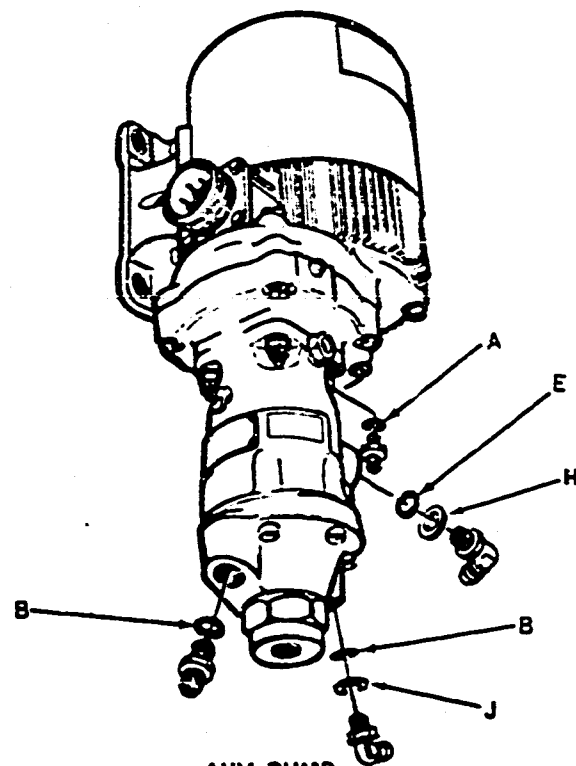

AUX PUMP

HA2-1104 A

Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 5)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Energize test stand hydraulic pump; pressurize hydraulic system to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT ALL FLIGHT CONTROL SURFACES AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

**B. Depressurize and Disconnect**

- (1) Check hydraulic fluid level of hydraulic reservoir; fill if necessary as described on instruction placard on reservoir.
- (2) Deenergize test stand hydraulic pump.
- (3) Depressurize hydraulic system by operating the brakes and manually moving the longitudinal trim handle until horizontal stabilizer movement stops.
- (4) Disconnect and cap test stand pressure and supply hoses from airplane ground service connections; install duct caps on connections and close access door.

**C. Pressurize Hydraulic System With Auxiliary Hydraulic Pump Pressure**

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap control handle agrees with wing flap position.
- (3) Place hydraulic system selector control lever in general system/bypass position.
- (4) Check that airplane electrical buses are energized (see Chapter 24).
- (5) Start auxiliary hydraulic pump by placing auxiliary hydraulic pump control switch momentarily in start position. Pressure indicated in the flight compartment should be 2600 to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT ALL FLIGHT CONTROL SURFACES AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

**CAUTION:** DO NOT HOLD THE AUXILIARY HYDRAULIC PUMP CONTROL SWITCH IN THE START (HOLD ONLY IN EMERGENCY) POSITION FOR NORMAL PRESSURIZATION.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

D. Depressurize

- (1) Stop auxiliary hydraulic by placing auxiliary hydraulic pump control switch momentarily in stop position.
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.
- (3) Place hydraulic system selector control lever in general system (normal) position.

E. Pressurize Hydraulic System With Engine-Driven Hydraulic Pump Pressure

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap handle agrees with wing flap position.
- (3) Make certain that applicable fire control handle is in normal position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Make certain that applicable engine-driven hydraulic pump control switch is in on position.
- (6) Start engine No. 2 or No. 3 (see Chapter 71). Hydraulic pressure indicated in the flight compartment should be 2800 to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT ALL FLIGHT CONTROL SURFACES AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

F. Depressurize

- (1) Shut down engine (see Chapter 71).
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.

3. Pressurize/Depressurize Hydraulic Reservoir

A. General

- (1) The air inflation valve, air bleed valve, and air pressure gage for manually pressurizing and depressurizing the hydraulic reservoir and air chamber are located on the aft side of the wing rear spar, at the forward end of the left main gear wheel well. The valves and gage are mounted on a cross fitting just inboard of the reservoir air chamber. Access is through the left main gear inboard door.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

B. Tools and Equipment Required

- (1) Pressure cylinder (clean dry compressed air or nitrogen).

C. Pressurize Hydraulic Reservoir

NOTE: Normal air pressure in the reservoir and air chamber should be between 30 and 35 psi.

NOTE: There are three methods of pressurizing the hydraulic reservoir:

- (1) Run an inboard engine.
- (2) Connect and operate a hydraulic test stand.
- (3) Direct pressurization of air chamber by introduction of compressed air or nitrogen.

The first two methods are automatic in that the reservoir is pressurized by action of the hydraulic fluid through the regulator-aspirator when the system is pressurized. The third method (direct inflation) will be described in the following steps.

- (1) Remove air inflation valve cap and attach pressure cylinder service hose to inflation valve.
- (2) Loosen inflation valve swivel nut three complete turns.

NOTE: The rate of inflation (flow through the valve) is governed by the degree of opening of the swivel valve.

- (3) Pressurize reservoir to 30 to 35 psi reading on air pressure gage.
- (4) Tighten swivel nut.
- (5) Disconnect service hose and install valve cap.

CAUTION: THE AIR INFLATION VALVE IS A STANDARD "AN" VALVE WHICH HAS BEEN MODIFIED BY INSTALLATION OF SKYDROL TYPE SEALS. DO NOT REPLACE THE VALVE WITH A VALVE WHICH HAS NOT BEEN MODIFIED FOR SKYDROL.

D. Depressurize Hydraulic Reservoir

- (1) Depress air bleed valve button; hold until all pressure has bled off and pressure gage reads zero.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

4. Drain Hydraulic System Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.
- (2) Clean container of approximately 20 US gallons (16.65 Imperial gallons or 75.7 liters) capacity.

B. Drain Reservoir

- (1) Depressurize hydraulic system and reservoir (see paragraphs 2 and 3).
- (2) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (3) Remove drain unit, and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

5. Drain Auxiliary Hydraulic Pump Alternate Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.
- (2) Clean container of approximately 3 US gallons (2.5 Imperial gallons or 11.5 liters) capacity.

B. Drain Reservoir

- (1) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (2) Remove drain unit and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

6. Hydraulic System Pressure Decay Rates

A. Decay Rate Test

- (1) By observing the time it takes for the hydraulic system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi, it is possible, in most cases, to detect units that are leaking excessively. This procedure is not infallible because the sum of the maximum allowable leakage rates



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

determines the minimum time permissible for pressure decay. The hydraulic system with average leakage will maintain pressure for longer periods than indicated and may do so even with one unit leaking excessively.

- (2) The main hydraulic system should be tested for pressure decay time under the following conditions:
  - (a) System selector valve in general system/bypass or general system (normal)
  - (b) Nosewheel straight ahead plus or minus 30 degrees and steering valve in neutral position
  - (c) Manual main gear door valve open
  - (d) Landing gear down and locked
  - (e) Wing flaps up
  - (f) Accumulators properly charged
  - (g) Aileron shutoff valve off
  - (h) Rudder shutoff valve off
- (3) Pressurize main hydraulic system to 2900 ( $\pm 100$ ) psi with auxiliary pump or hydraulic test stand. Then shut off hydraulic power source and note time interval required for system pressure to decrease 1000 psi. This should be more than 34 seconds on a new airplane or more than 23 seconds on an airplane in service before overhaul. If pressure decay time is less, the main hydraulic system should be inspected for a malfunctioning unit.
- (4) If pressure decay test indicates that a unit in the main hydraulic system was leaking excessively, that unit may be in the nose or main gear subsystem, the main gear door subsystem, the flap subsystem, the slot subsystem, the selector valve, or the compressor subsystem. By placing the subsystem control valves in opposite positions one at a time and repeating the pressure decay test, it is possible that the faulty unit may be located.
- (5) Rudder power hydraulic system may be tested for pressure decay time by using procedures outlined in steps (2) and (3), except that the rudder shutoff valve should be on. Decay time should be more than 10 seconds on a new airplane or more than 8 seconds on an airplane in service before overhaul. If less, the rudder power system should be inspected for a malfunctioning unit.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Supplementary information may be obtained for the rudder power hydraulic system by using the auxiliary rudder system pump and accumulator air gage to test the time for rudder pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi. With the rudder hydraulic power shutoff valve off, the time should be more than 2 minutes. With the rudder hydraulic power shutoff valve on the time should be 12 seconds on a new airplane and 10 seconds on an airplane in service before overhaul.
- (7) Aileron hydraulic power system may be tested for pressure decay by using procedures outlined in steps (2) and (3), except that the aileron hydraulic power shutoff valve should be on. The decay time should be more than 6-1/2 seconds on a new airplane or more than 4-1/2 seconds on an airplane in service before overhaul. If less, the aileron power system should be inspected for a malfunctioning unit.
- (8) Brake system and the nose gear steering system are isolated from the main hydraulic system by check valves and may be tested separately. Using the brake accumulator gages, the pressure decay time for the brake system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 10 hours with the parking brake off, and 2 hours with the parking brake on. With the brake accumulators fully charged deplete the general system pressure. Wait 3 to 5 minutes and then set the parking brake and hold the parking brake pressure for 15 minutes. The drop in pressure at the brake accumulators should not exceed 125 psi during this time.
- (9) Release the parking brakes, and build up brake accumulator pressure to 2900 ( $\pm 100$ ) psi. With hydraulic power off and brakes off, check brake accumulator pressure. Drop in pressure at the accumulators should not exceed 100 psi in 30 minutes. Fast decay time for the brake system with parking brake off, indicates either a faulty brake valve or a faulty check valve in the right manifold. A fast decay time with the parking brake on indicates a faulty antiskid valve or a faulty brake valve.
- (10) Using the gages on the nose pressure accumulators, the time for the nose gear steering system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 19 minutes. If less, one of the pressure check valves is faulty, or the nose gear steering control valve is faulty or out of neutral.

**CAUTION:** ALL LANDING GEAR GROUND LOCKPINS MUST BE INSTALLED BEFORE CONDUCTING THE FOLLOWING TEST.
- (11) Under conditions outlined in step (2), except with the landing gear control valve in the up position, the time for pressure decay should be unchanged. If time limits change more than 5 seconds as determined in paragraph (3), a faulty unit is in the gear subsystem.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (12) Under conditions outlined in step (2), except with the main gear door manual control valve in the closed position, the decay time should be more than 24 seconds on a new airplane and 18 seconds on an airplane in service before overhaul. If less, the faulty unit is in the main gear door subsystem.
- (13) Under conditions outlined in step (2), except with the flap control valve in the down position, the decay time should be more than 24 seconds on a new airplane and 17 seconds on an airplane in service before overhaul. If less, the faulty unit is in the flap subsystem.
- (14) Under conditions outlined in step (2), time limit for pressure decay should remain unchanged as determined in paragraph (3) with the slot valve in either position, or the selector valve in either general system/bypass or general system (normal). If the time changes with a change of valve position, the faulty unit is in that subsystem.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - MAINTENANCE PRACTICES

1. General

A. Skydrol Safety Precautions

- (1). Before performing any operation on the hydraulic system, personnel should read and thoroughly understand the following precautions to be observed when working with Skydrol hydraulic fluid.

WARNING: OBSERVE THE FOLLOWING SAFETY PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. LONG EXPOSURE TO SKYDROL CAN CAUSE SKIN DEHYDRATION AND CHAPPING.

- (2) Wash hands thoroughly with soap and water before starting work.
- (3) Apply barrier cream to hands, wrists, and forearms. Rub cream under fingernails and into creases of skin.
- (4) Wear goggles when pressure testing components or systems, and whenever there is any possibility of Skydrol splashing into eyes.
- (5) If Skydrol splashes into eyes, treat eyes immediately by irrigating thoroughly with clear cold water, and report the incident.
- (6) Wash hands, wrists, and forearms with soap and hot water whenever they have come in contact with Skydrol.
- (7) If clothing becomes soaked with Skydrol; remove clothing as soon as possible, thoroughly wash skin, and put on clean clothing.

B. Technical Precautions

- (1) Before any maintenance is performed on the hydraulic system, personnel should read and thoroughly understand the following precautions. Careful adherence to these instructions will aid in maintaining a functional and trouble-free system.

CAUTION: OBSERVE THE FOLLOWING TECHNICAL PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. SKYDROL WILL ATTACK A WIDE RANGE OF MATERIALS INCLUDING RUBBER, COPPER, VARIOUS PLASTICS, AND PAINTS.

- (2) Ensure that Skydrol does not come into contact with any part of aircraft outside of the hydraulic system. Keep spillage to an absolute minimum. Clean up spilled hydraulic fluid immediately to prevent entry into adjacent areas of the airplane precluding future false hydraulic leak reports. If spillage occurs, wipe up the fluid with a dry cloth and wash contaminated area with soap and hot water.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) When lines are disconnected and/or components are removed, provide suitable protection to prevent foreign material from entering the lines or components by use of caps, covers, clean lint-free rags, etc.
- (4) When electrical connectors are disconnected, install caps or other suitable protectors to prevent entry of hydraulic fluid, moisture, and foreign objects.
- (5) Always check position and angle of all fittings removed from components to ensure placement and alignment when installing replacement components.
- (6) When washing metal parts before assembly, use only approved solvent, and ensure that all traces of the solvent are removed before assembly.
- (7) Use only clean Skydrol for flushing or testing hydraulic components.
- (8) Use only clean Skydrol when filling reservoirs, sumps, filter bowls, pumps, etc., before installation of components.
- (9) Do not unpack Skydrol O-rings and seals until required. Ensure that only approved rings and seals are used.
- (10) When assembling O-rings and seals, lubricate with Skydrol Assembly Lubricant, MCS 352, Monsanto Chemical Co., or clean Skydrol hydraulic fluid.
- (11) Take care to prevent contamination of Skydrol with other materials (oils, water, dirt, etc.)
- (12) If a system becomes contaminated with any petroleum-based oil or solvent, drain the system and flush with clean Skydrol.


**C. Landing Gear Precautions**

- (1) The landing gear control lever should be in the down position and the landing gear ground lockpins should be installed in the main and nose gears at all times during ground maintenance, except as noted in maintenance procedural steps.
- (2) The main gear wheels should be chocked at all times during ground maintenance, except as noted in maintenance procedural steps.
- (3) The hydraulic system selector control lever should be in the general system (normal) position at all times during ground maintenance, except as noted in maintenance procedural steps.

**D. Hydraulic Power System O-Rings**

- (1) O-rings used in the installation of hydraulic power system components are shown in Figure 201. O-rings required for the landing gear, power control systems, etc., will be found in the applicable chapters.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

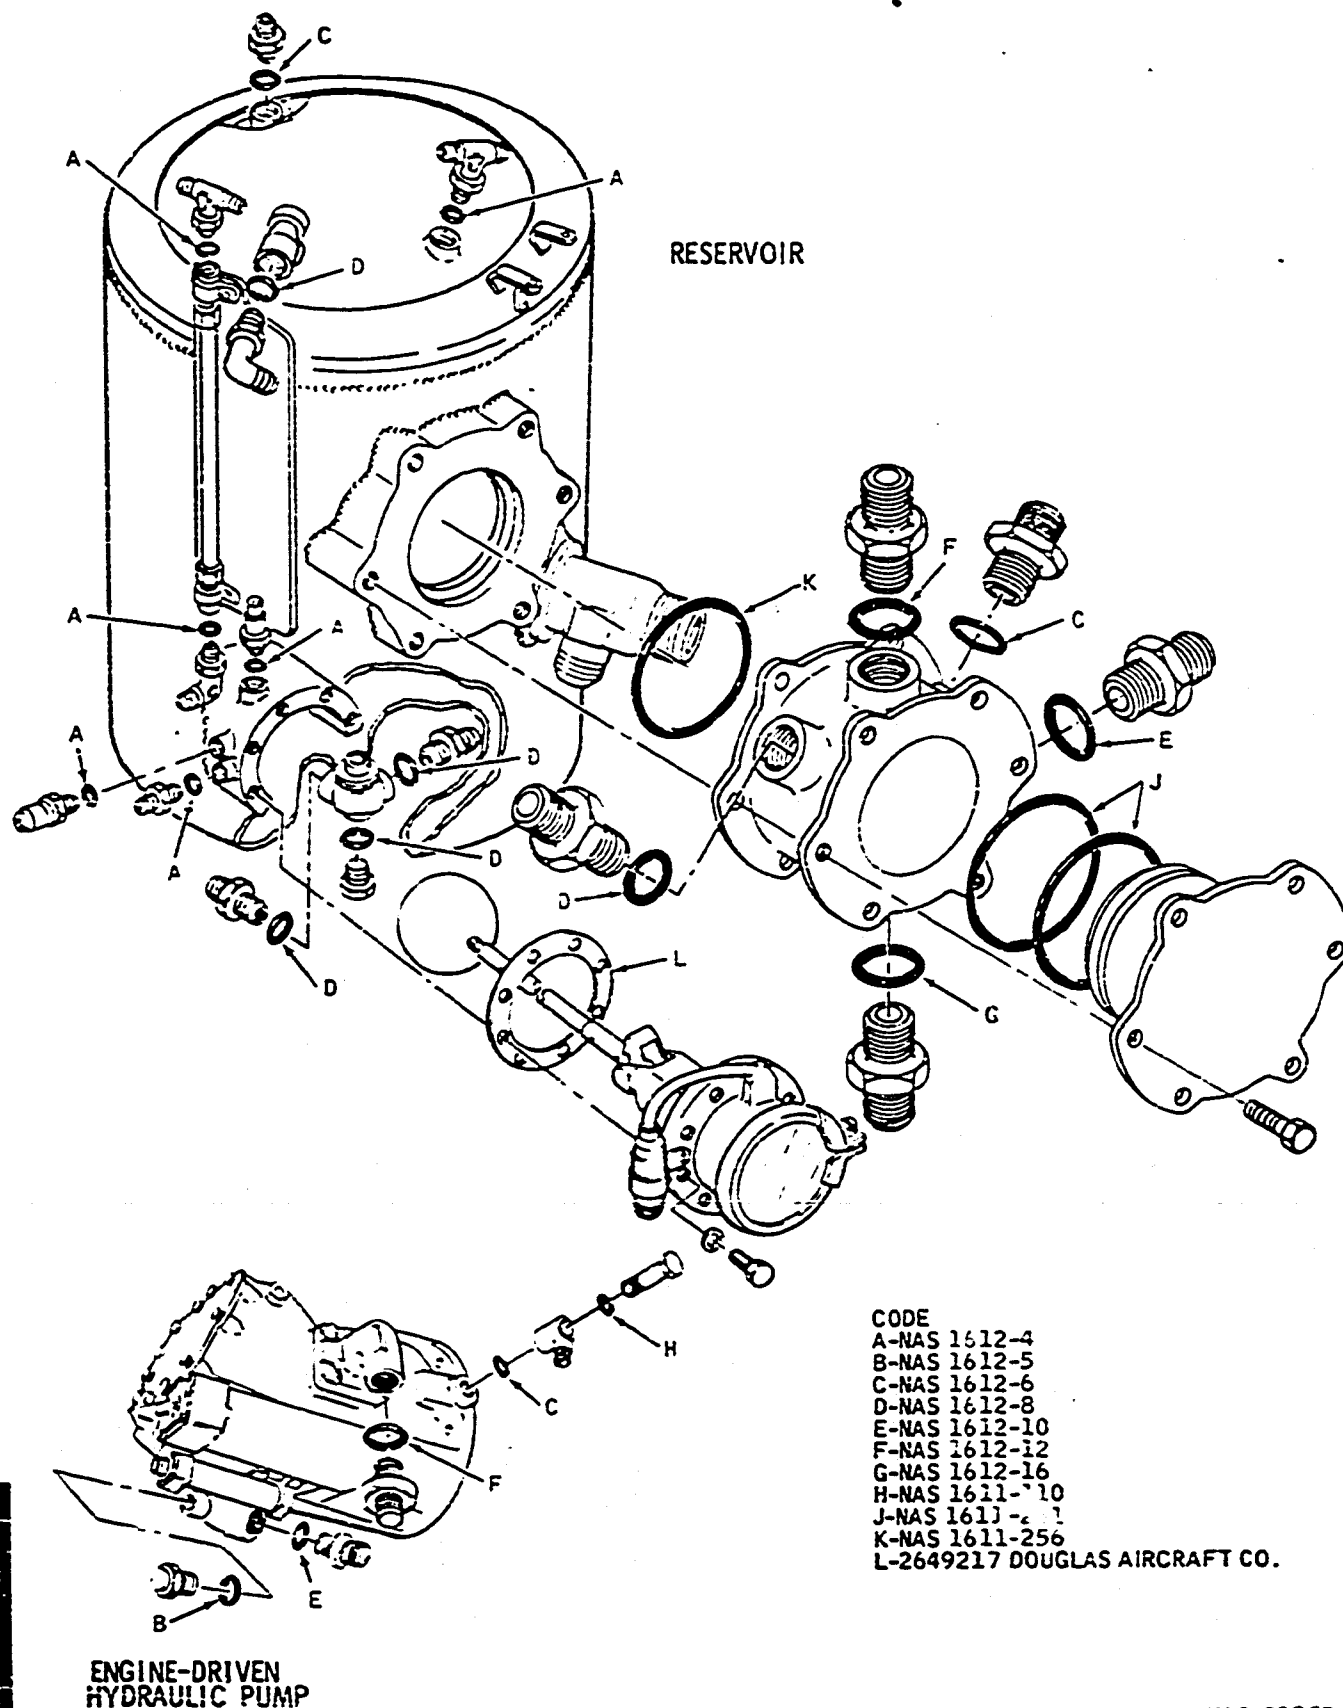


HA2-2139B

Hydraulic Power System Components -- O-Rings  
 Figure 201 (Sheet 1)


DOUGLAS AIRCRAFT CO., INC.  
**DC-6 SIXTY SERIES**  
 MAINTENANCE MANUAL

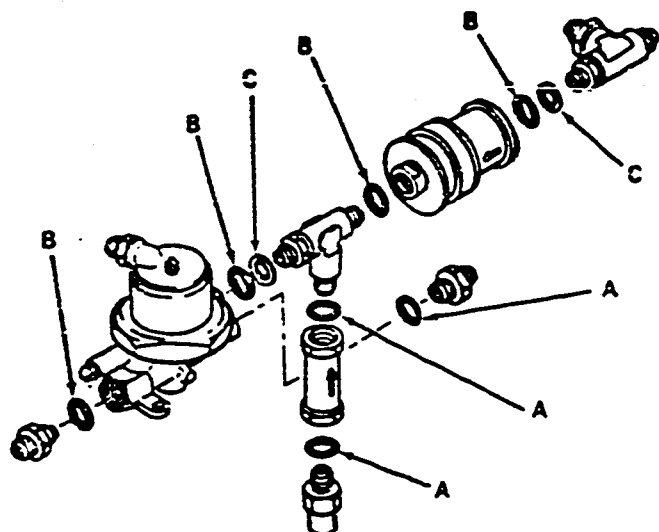


REGULATOR - ASPIRATOR  
 AND AIR FILTERS

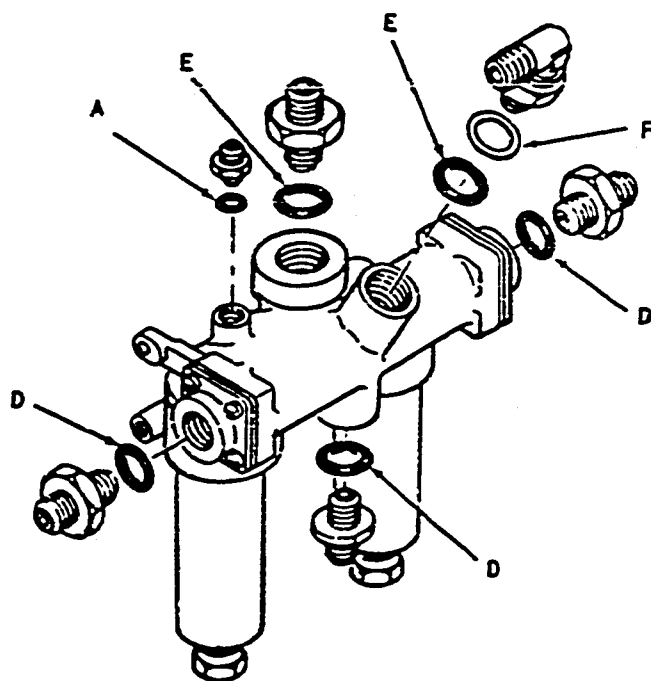

DUAL-FILTER &  
 RELIEF VALVE

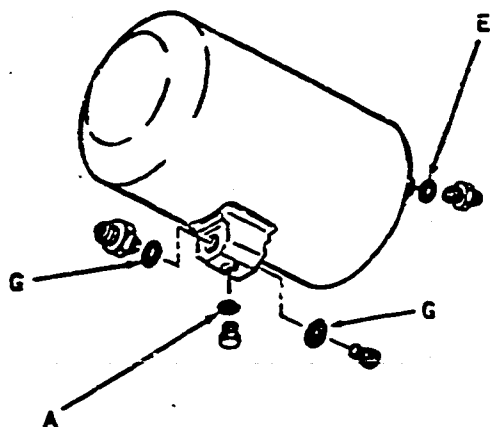

HYDRAULIC RESERVOIR  
 AIR CHAMBER

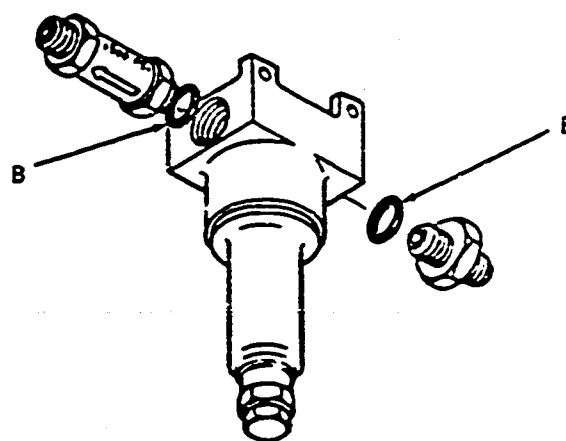

HYDRAULIC  
 PUMPCASE DRAIN  
 FILTER


CODE

- A - NAS1612-4
- B - NAS1612-6
- C - MS28777-6 \*
- D - NAS1612-10
- E - NAS1612-12
- F - MS28777-12 \*
- G - NAS1612-16
- \* - BACKUP RING

HA2-3415B

Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 2)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

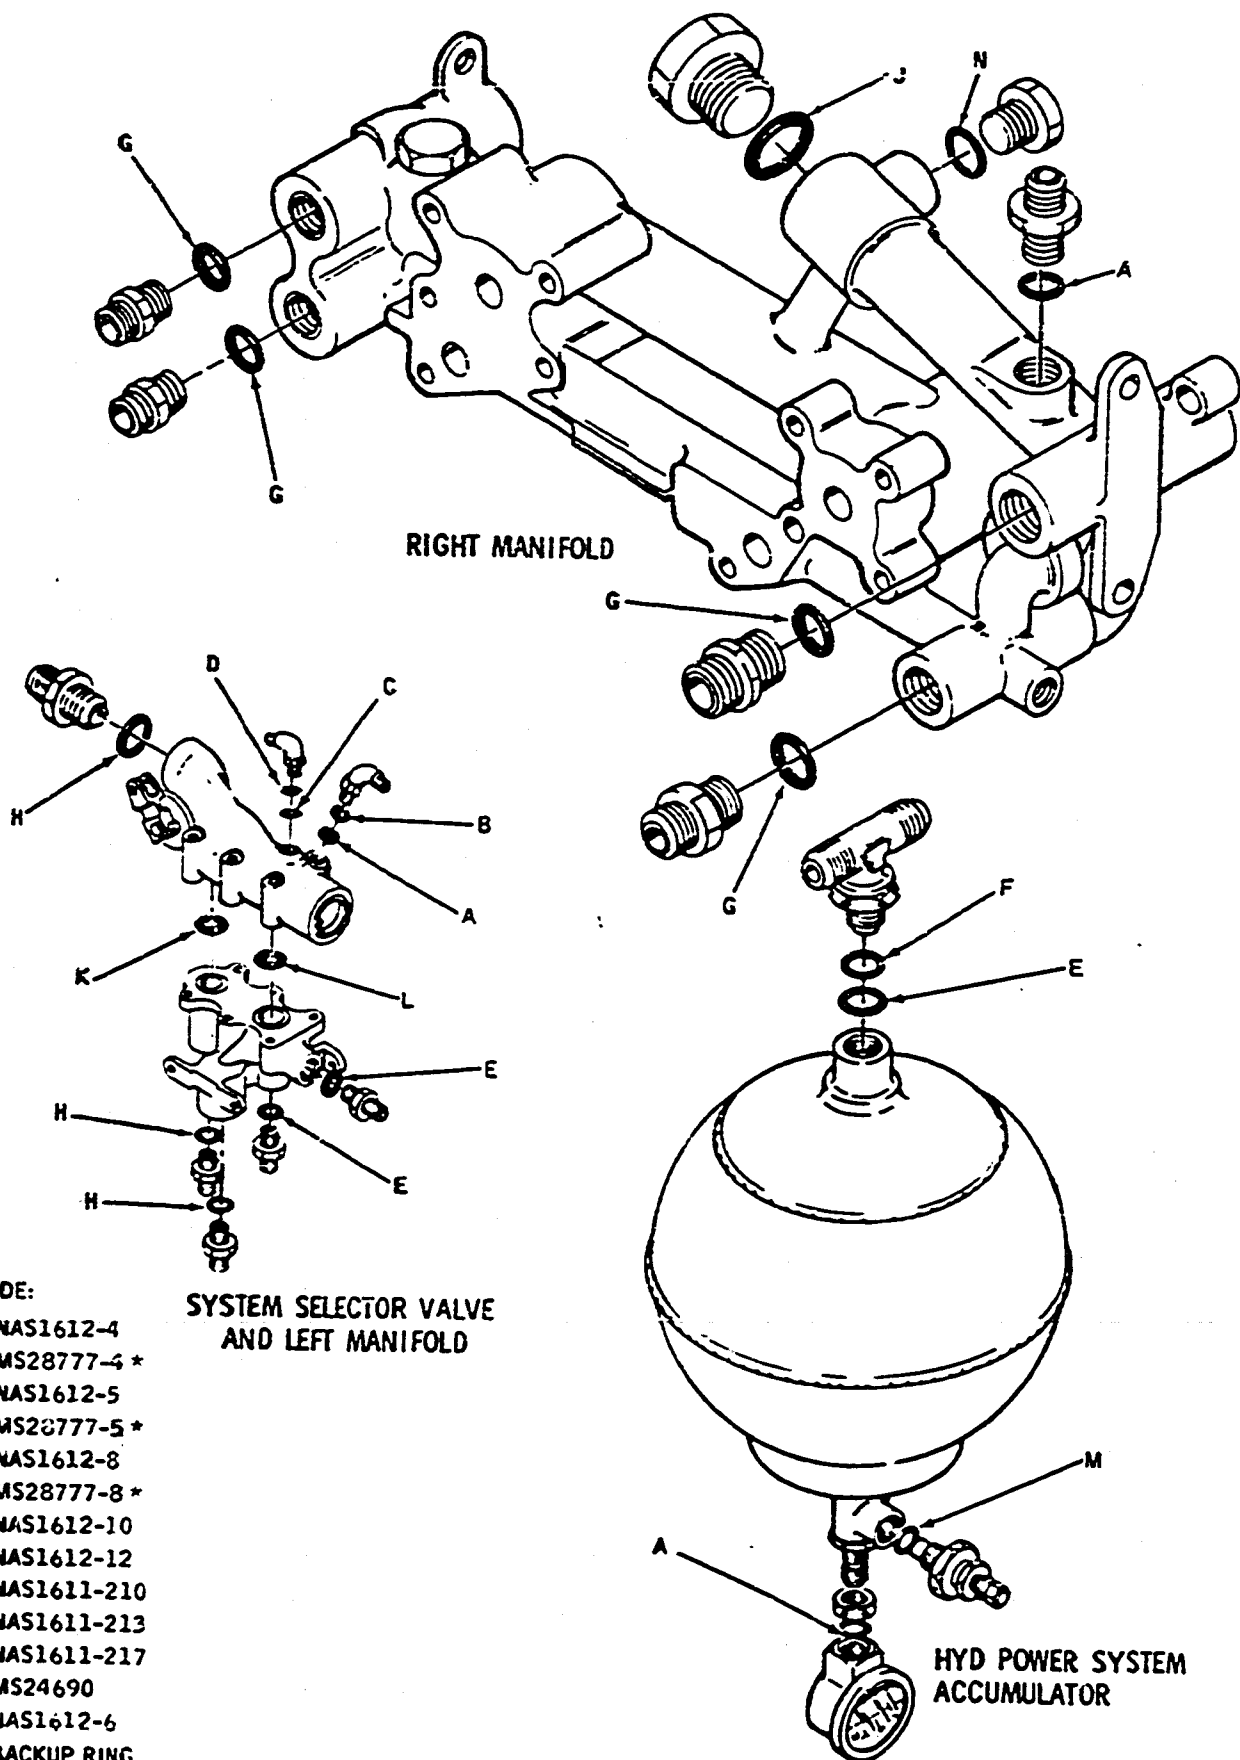

HA2-1678A

Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 3)


Oct 1/67

Printed in U.S.A.


29-00  
 CODE 5  
 Page 205




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

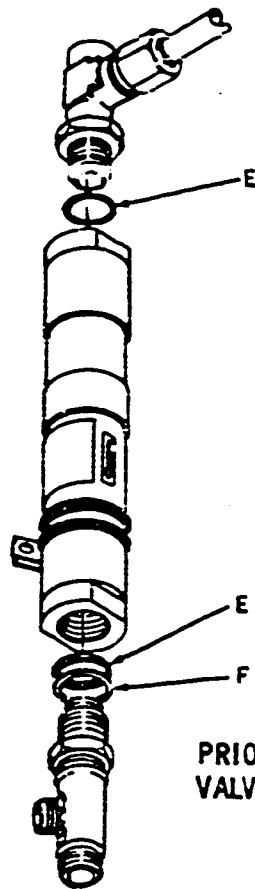

PRIORITY  
VALVE

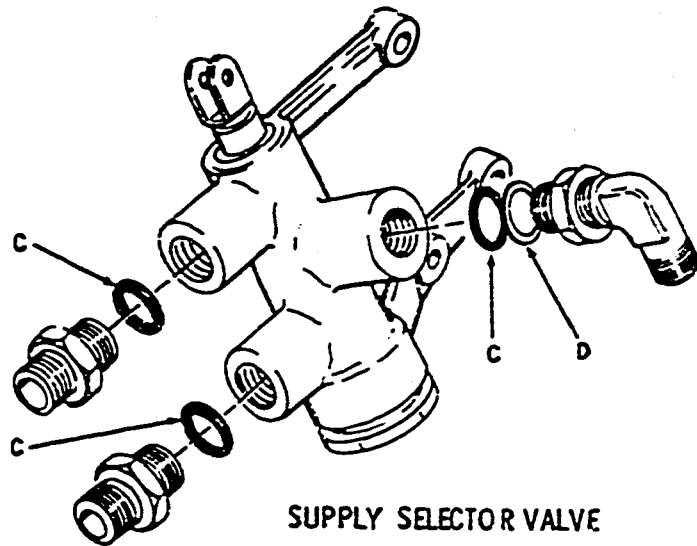


SUPPLY SELECTOR VALVE

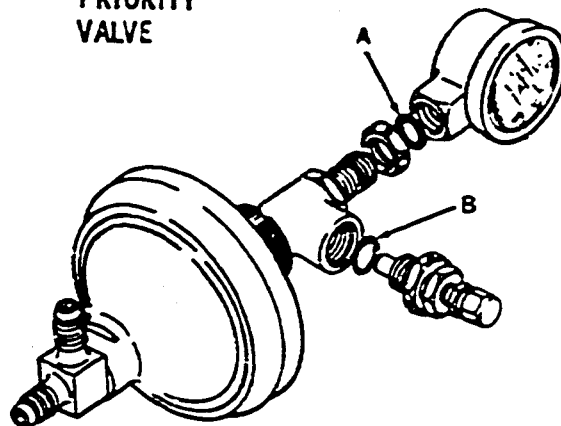


SURGE DAMPER ACCUMULATOR

CODE  
 A-NAS1612-4  
 B-MS2469-4  
 C-NAS1612-8  
 D-MS28777-3\*  
 E-NAS1612-12  
 F-MS28777-12\*  
 G-NAS1612-20

\*BACKUP RING

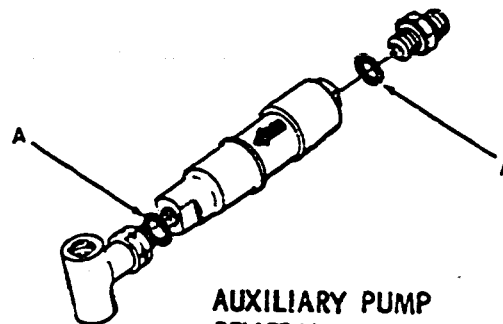

AUXILIARY PUMP  
RELIEF VALVE

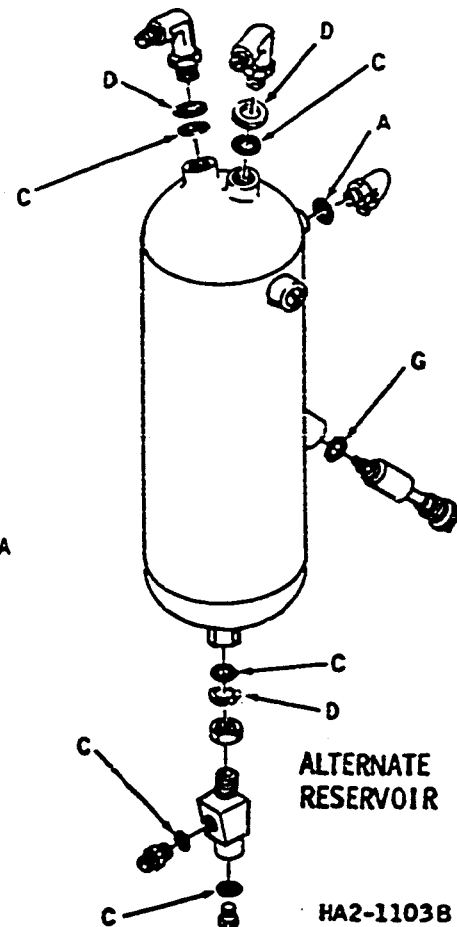


ALTERNATE  
RESERVOIR

HA2-1103B

Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 4)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

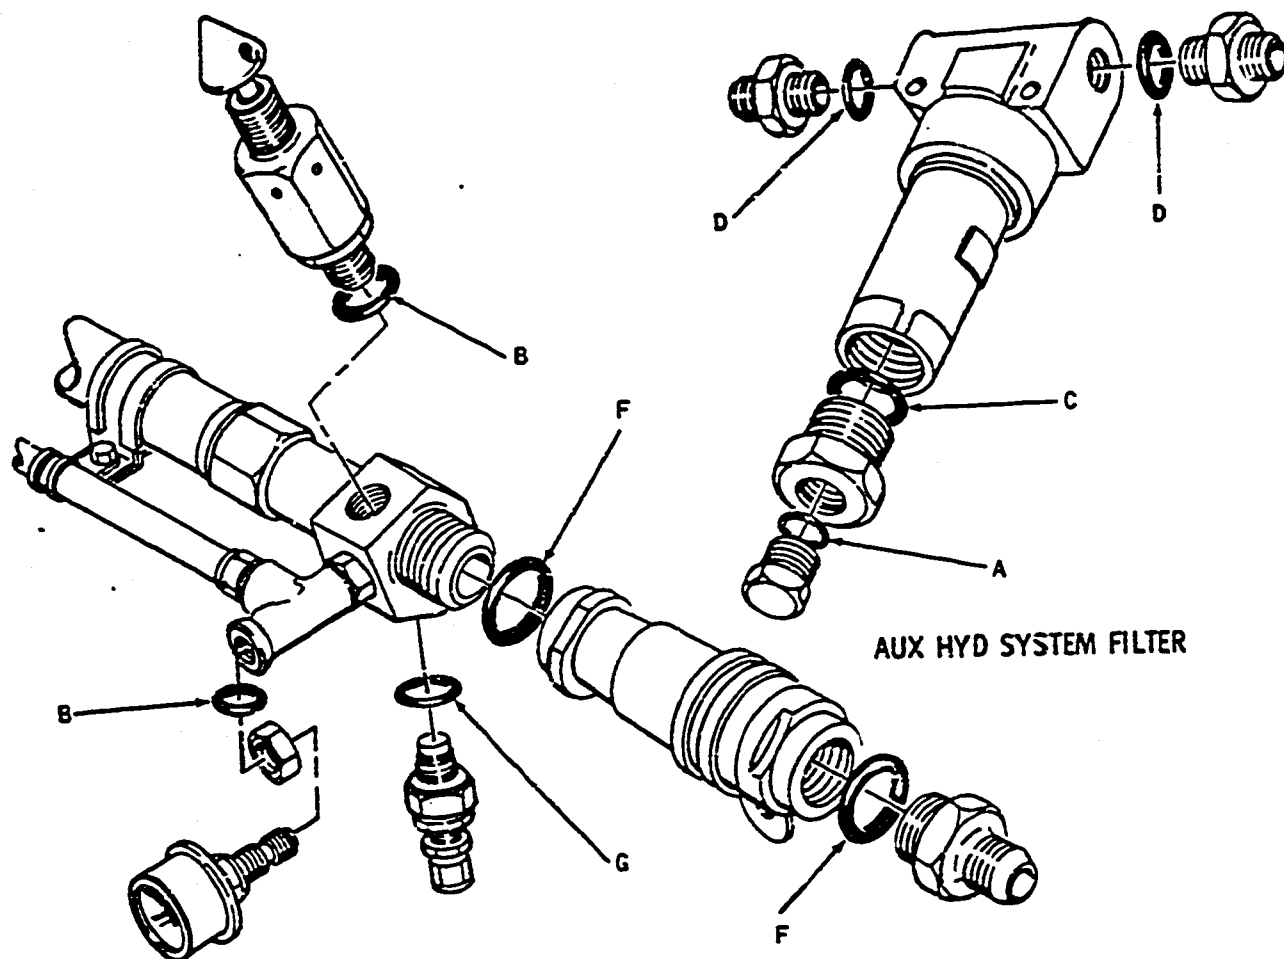


AUX HYD SYSTEM FILTER

RESERVOIR AIR BLEED VALVE,  
 FILTER VALVE, PRESSURE GAGE  
 AND RELIEF VALVE

CODE

- A - NAS1612-2
- B - NAS1612-4
- C - NAS1612-6
- D - NAS1612-8
- E - NAS1612-10
- F - NAS1612-12
- G - MS24690

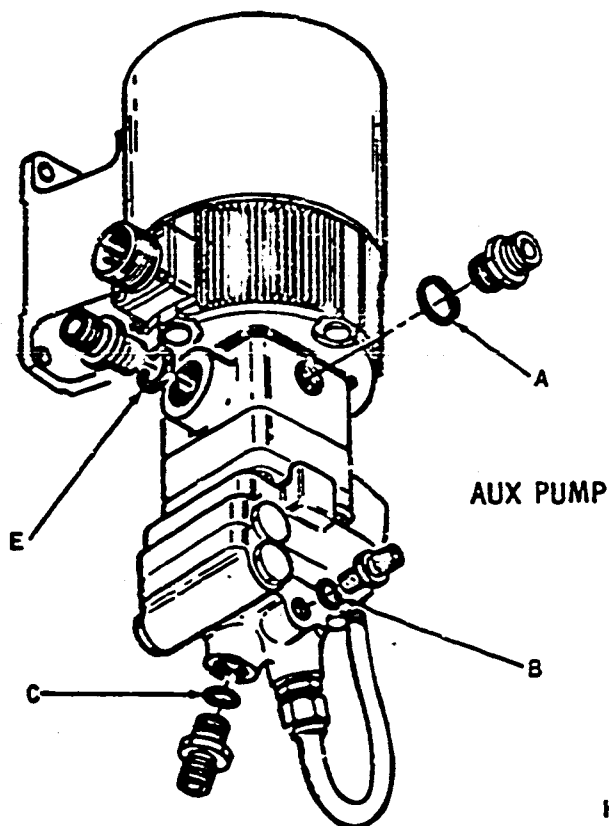

AUX PUMP

HA2-1679 A


Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 5)

Oct 1/67

Printed in U.S.A.

29-00  
 CODE 5  
 Page 207

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

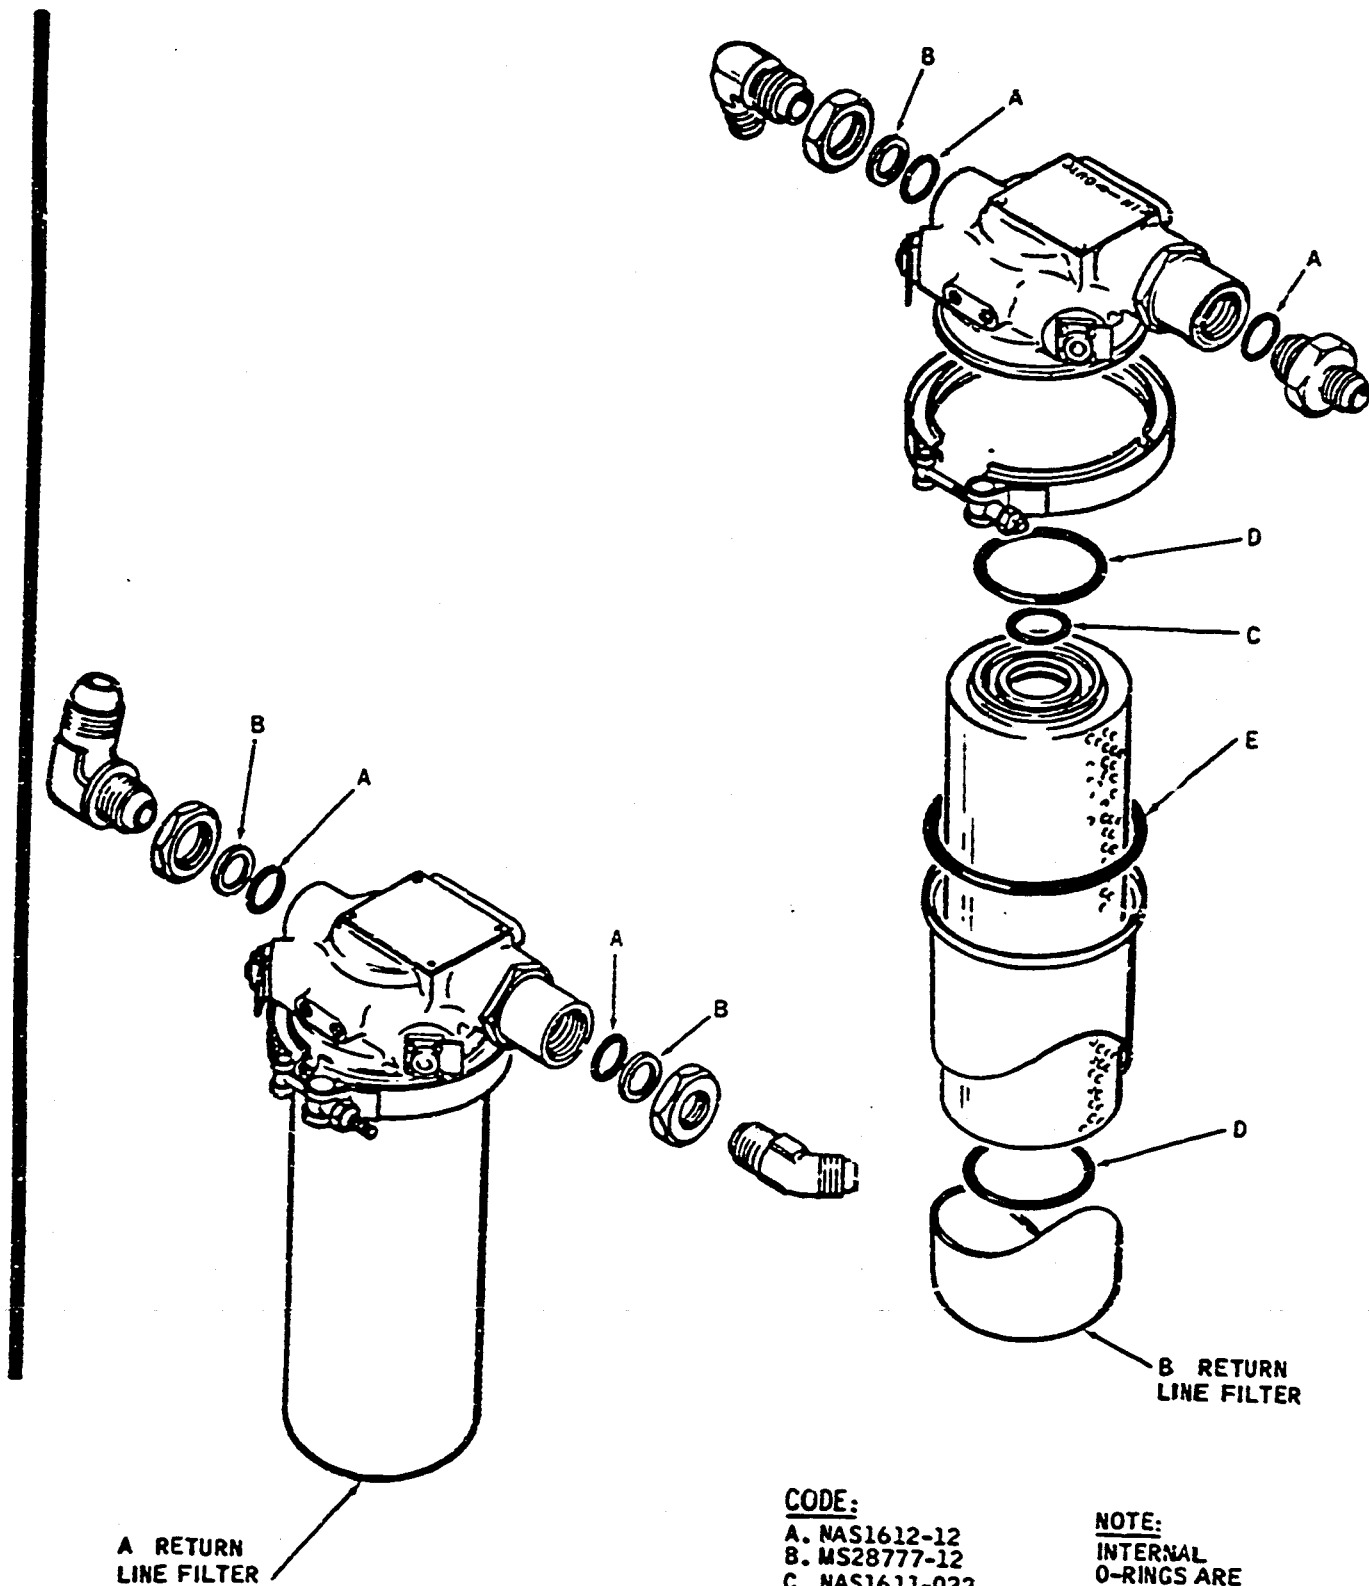

**CODE:**

A. NAS1612-12  
 B. MS28777-12  
 C. NAS1611-022  
 D. NAS1611-143  
 E. NAS1611-243

**NOTE:**

INTERNAL  
 O-RINGS ARE  
 TYPICAL FOR  
 A RETURN AND  
 B RETURN FILTERS

HA2-2926A

Hydraulic Power System Components -- O-Rings  
 Figure 201 (Sheet 6)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) O-ring part numbers shown in Figure 201 are interchangeable with Douglas standard (S-XXXXXXXX) numbers listed in the Illustrated Parts Catalog and on engineering drawings.

## 2. Pressurize/Depressurize Hydraulic System

### A. Pressurize Hydraulic System With External Hydraulic Source Pressure

- (1) Tools and Equipment Required: A hydraulic test stand equipped with a variable-displacement hydraulic pump capable of delivering 20 gpm at 3000 psi, using Skydrol hydraulic fluid. The maximum permissible operating temperature should not exceed 180°F (82.2°C).
- (2) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (3) Make certain that wing flap control handle agrees with wing flap position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Remove dust caps from airplane ground service connections and connect test stand pressure and supply hoses.
- (6) Energize test stand hydraulic pump; pressurize hydraulic system to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

### B. Depressurize and Disconnect

- (1) Check hydraulic fluid level of hydraulic reservoir; fill if necessary as described on instruction placard on reservoir.
- (2) Deenergize test stand hydraulic pump.
- (3) Depressurize hydraulic system by operating the brakes and manually moving the longitudinal trim handle until horizontal stabilizer movement stops.
- (4) Disconnect and cap test stand pressure and supply hoses from airplane ground service connections; install duct caps on connections and close access door.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

C. Pressurize Hydraulic System With Auxiliary Hydraulic Pump Pressure

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap control handle agrees with wing flap position.
- (3) Place hydraulic system selector control lever in general system/bypass position.
- (4) Check that airplane electrical buses are energized (see Chapter 24).
- (5) Start auxiliary hydraulic pump by placing auxiliary hydraulic pump control switch momentarily in start position. Pressure indicated in the flight compartment should be 2600 to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

**CAUTION:** DO NOT HOLD THE AUXILIARY HYDRAULIC PUMP CONTROL SWITCH IN THE START (HOLD ONLY IN EMERGENCY) POSITION FOR NORMAL PRESSURIZATION.

D. Depressurize

- (1) Stop auxiliary hydraulic by placing auxiliary hydraulic pump control switch momentarily in stop position.
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.
- (3) Place hydraulic system selector control lever in general system (normal) position.

E. Pressurize Hydraulic System With Engine-Driven Hydraulic Pump Pressure

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap handle agrees with wing flap position.
- (3) Make certain that applicable fire control handle is in normal position.
- (4) Place hydraulic system selector control lever in general system (normal) position.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Make certain that applicable engine-driven hydraulic pump control switch is in on position.
- (6) Start engine No. 2 or No. 3 (see Chapter 71). Hydraulic pressure indicated in the flight compartment should be 2800 to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

F. Depressurize

- (1) Shut down engine (see Chapter 71).
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.

3. Pressurize/Depressurize Hydraulic Reservoir

A. General

- (1) The air inflation valve, air bleed valve, and air pressure gage for manually pressurizing and depressurizing the hydraulic reservoir and air chamber are located on the aft side of the wing rear spar, at the forward end of the left main gear wheel well. The valves and gage are mounted on a cross fitting just inboard of the reservoir air chamber. Access is through the left main gear inboard door.

B. Tools and Equipment Required

- (1) Pressure cylinder (clean dry compressed air or nitrogen).

C. Pressurize Hydraulic Reservoir

**NOTE:** Normal air pressure in the reservoir and air chamber should be between 30 and 35 psi.

**NOTE:** There are three methods of pressurizing the hydraulic reservoir:

- (1) Run an inboard engine.
- (2) Connect and operate a hydraulic test stand.
- (3) Direct pressurization of air chamber by introduction of compressed air or nitrogen.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

The first two methods are automatic in that the reservoir is pressurized by action of the hydraulic fluid through the regulator-aspirator when the system is pressurized. The third method (direct inflation) will be described in the following steps.

- (1) Remove air inflation valve cap and attach pressure cylinder service hose to inflation valve.
- (2) Loosen inflation valve swivel nut three complete turns.

NOTE: The rate of inflation (flow through the valve) is governed by the degree of opening of the swivel valve.

- (3) Pressurize reservoir to 30 to 35 psi reading on air pressure gage.
- (4) Tighten swivel nut.
- (5) Disconnect service hose and install valve cap.

CAUTION: THE AIR INFLATION VALVE IS A STANDARD 'AN' VALVE WHICH HAS BEEN MODIFIED BY INSTALLATION OF SKYDROL TYPE SEALS. DO NOT REPLACE THE VALVE WITH A VALVE WHICH HAS NOT BEEN MODIFIED FOR SKYDROL.

D. Depressurize Hydraulic Reservoir

- (1) Depress air bleed valve button; hold until all pressure has beld off and pressure gage reads zero.

4. Drain Hydraulic System Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.
- (2) Clean container of approximately 20 US gallons (16.65 Imperial gallons or 75.7 liters) capacity.

B. Drain Reservoir

- (1) Depressurize hydraulic system and reservoir (see paragraphs 2 and 3).
- (2) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (3) Remove drain unit, and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

5. Drain Auxiliary Hydraulic Pump Alternate Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.
- (2) Clean container of approximately 3 US gallons (2.5 Imperial gallons or 11.5 liters) capacity.

B. Drain Reservoir

- (1) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (2) Remove drain unit and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

6. Hydraulic System Pressure Decay Rates

A. Decay Rate Test

- (1) By observing the time it takes for the hydraulic system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi, it is possible, in most cases, to detect units that are leaking excessively. This procedure is not infallible because the sum of the maximum allowable leakage rates determines the minimum time permissible for pressure decay. The hydraulic system with average leakage will maintain pressure for longer periods than indicated and may do so even with one unit leaking excessively.
- (2) The main hydraulic system should be tested for pressure decay time under the following conditions:
  - (a) System selector valve in general system/bypass or general system (normal).
  - (b) Nosewheel straight ahead plus or minus 30 degrees and steering valve in neutral position.
  - (c) Manual main gear door valve open.
  - (d) Landing gear down and locked.
  - (e) Wing flaps up.
  - (f) Accumulators properly charged.
  - (g) Aileron shutoff valve off.
  - (h) Rudder shutoff valve off.
  - (i) Thrust reversers stowed.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Pressurize main hydraulic system to 2900 ( $\pm 100$ ) psi with auxiliary pump or hydraulic test stand. Then shut off hydraulic power source and note time interval required for system pressure to decrease 1000 psi. This should be more than 34 seconds on a new airplane or more than 23 seconds on an airplane in service before overhaul. If pressure decay time is less, the main hydraulic system should be inspected for a malfunctioning unit.
- (4) If pressure decay test indicates that a unit in the main hydraulic system was leaking excessively, that unit may be in the nose or main gear subsystem, the main gear door subsystem, the flap subsystem, the slot subsystem, the selector valve, or the compressor subsystem. By placing the subsystem control valves in opposite positions one at a time and repeating the pressure decay test, it is possible that the faulty unit may be located.
- (5) Rudder power hydraulic system may be tested for pressure decay time by using procedures outlined in steps (2) and (3), except that the rudder shutoff valve should be on. Decay time should be more than 10 seconds on a new airplane or more than 8 seconds on an airplane in service before overhaul. If less, the rudder power system should be inspected for a malfunctioning unit.
- (6) Supplementary information may be obtained for the rudder power hydraulic system by using the auxiliary rudder system pump and accumulator air gage to test the time for rudder pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi. With the rudder hydraulic power shutoff valve off, the time should be more than 2 minutes. With the rudder hydraulic power shutoff valve on, the time should be 12 seconds on a new airplane and 10 seconds on an airplane in service before overhaul.
- (7) Aileron hydraulic power system may be tested for pressure decay by using procedures outlined in steps (2) and (3), except that the aileron hydraulic power shutoff valve should be on. The decay time should be more than 6-1/2 seconds on a new airplane or more than 4-1/2 seconds on an airplane in service before overhaul. If less, the aileron power system should be inspected for a malfunctioning unit.
- (8) Brake system and the nose gear steering system are isolated from the main hydraulic system by check valves and may be tested separately. Using the brake accumulator gages, the pressure decay time for the brake system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 10 hours with the parking brake off, and 2 hours with the parking brake on. With the brake accumulators fully charged deplete the general system pressure. Wait 3 to 5 minutes and then set the parking brake and hold the parking brake pressure for 15 minutes. The drop in pressure at the brake accumulators should not exceed 125 psi during this time.
- (9) Release the parking brakes, and build up brake accumulator pressure to 2900 ( $\pm 100$ ) psi. With hydraulic power off and brakes off, check brake accumulator pressure. Drop in pressure at the accumulators should not exceed 100 psi in 30 minutes. Fast decay time for

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

the brake system, with parking brake off, indicates either a faulty brake valve or a faulty check valve in the right manifold. A fast decay time with the parking brake on indicates a faulty antiskid valve or a faulty brake valve.

- (10) Using the gages on the nose pressure accumulators, the time for the nose gear steering system pressure of 2900 ( $\pm 10$ ) psi to decrease 1000 psi should be more than 19 minutes. If less, one of the pressure check valves is faulty, or the nose gear steering control valve is faulty or out of neutral.

**CAUTION:** ALL LANDING GEAR GROUND LOCKPINS MUST BE INSTALLED BEFORE CONDUCTING THE FOLLOWING TEST.

- (11) Under conditions outlined in step (2), except with the landing gear control valve in the up position, the time for pressure decay should be unchanged. If time limits change more than 5 seconds as determined in paragraph (3), a faulty unit is in the gear subsystem.
- (12) Under conditions outlined in step (2), except with the main gear door manual control valve in the closed position, the decay time should be more than 24 seconds on a new airplane and 18 seconds on an airplane in service before overhaul. If less, the faulty unit is in the main gear door subsystem.
- (13) Under conditions outlined in step (2), except with the flap control valve in the down position, the decay time should be more than 24 seconds on a new airplane and 17 seconds on an airplane in service before overhaul. If less, the faulty unit is in the flap subsystem.
- (14) Under conditions outlined in step (2), time limit for pressure decay should remain unchanged as determined in paragraph (3) with the slot valve in either position, or the selector valve in either general system/bypass or general system (normal). If the time changes with a change of valve position, the faulty unit is in that subsystem.
- (15) The thrust reverser system is isolated from the main system by an electrically operated shutoff valve which is open only during thrust reverser actuation. Therefore, main system decay is not affected by the thrust reverser system except during reverser actuation or at the thrust reverser extended position. Additional information may be obtained for the thrust reverser system by using the auxiliary reverser system pump and reverser system pressure gage or accumulator gage to test the time for reverser pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi. With the reversers in the stowed position, the decay time should be greater than 3 minutes on a new aircraft or greater than 1-1/2 minutes on an aircraft in service before overhaul. If times are less, the reverser system should be inspected for a malfunction.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - MAINTENANCE PRACTICES

1. General

A. Skydrol Safety Precautions

- (1) Before performing any operation on the hydraulic system, personnel should read and thoroughly understand the following precautions to be observed when working with Skydrol hydraulic fluid.

WARNING: OBSERVE THE FOLLOWING SAFETY PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. LONG EXPOSURE TO SKYDROL CAN CAUSE SKIN DEHYDRATION AND CHAPPING.

- (2) Wash hands thoroughly with soap and water before starting work.
- (3) Apply barrier cream to hands, wrists, and forearms. Rub cream under fingernails and into creases of skin.
- (4) Wear goggles when pressure testing components or systems, and whenever there is any possibility of Skydrol splashing into eyes.
- (5) If Skydrol splashes into eyes, treat eyes immediately by irrigating thoroughly with clear cold water, and report the incident.
- (6) Wash hands, wrists, and forearms with soap and hot water whenever they have come in contact with Skydrol.
- (7) If clothing becomes soaked with Skydrol, remove clothing as soon as possible, thoroughly wash skin, and put on clean clothing.

B. Technical Precautions

- (1) Before any maintenance is performed on the hydraulic system, personnel should read and thoroughly understand the following precautions. Careful adherence to these instructions will aid in maintaining a functional and trouble-free system.

CAUTION: OBSERVE THE FOLLOWING TECHNICAL PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. SKYDROL WILL ATTACK A WIDE RANGE OF MATERIALS INCLUDING RUBBER, COPPER, VARIOUS PLASTICS, AND PAINTS.

- (2) Ensure that Skydrol does not come into contact with any part of aircraft outside of the hydraulic system. Keep spillage to an absolute minimum. Clean up spilled hydraulic fluid immediately to prevent entry into adjacent areas of the airplane precluding future false hydraulic leak reports. If spillage occurs, wipe up the fluid with a dry cloth and wash contaminated area with soap and hot water.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) When lines are disconnected and/or components are removed, provide suitable protection to prevent foreign material from entering the lines or components by use of caps, covers, clean lint-free rags, etc.
- (4) When electrical connectors are disconnected, install caps or other suitable protectors to prevent entry of hydraulic fluid, moisture, and foreign objects.
- (5) Always check position and angle of all fittings removed from components to ensure placement and alignment when installing replacement components.
- (6) When washing metal parts before assembly, use only approved solvent, and ensure that all traces of the solvent are removed before assembly.
- (7) Use only clean Skydrol for flushing or testing hydraulic components.
- (8) Use only clean Skydrol when filling reservoirs, sumps, filter bowls, pumps, etc., before installation of components.
- (9) Do not unpack Skydrol O-rings and seals until required. Ensure that only approved rings and seals are used.
- (10) When assembling O-rings and seals, lubricate with Skydrol Assembly Lubricant, MCS 352, Monsanto Chemical Company, or clean Skyrol hydraulic fluid.
- (11) Take care to prevent contamination of Skydrol with other materials (oils, water, dirt, etc.).
- (12) If a system becomes contaminated with any petroleum-based oil or solvent, drain the system and flush with clean Skydrol.

C. Landing Gear Precautions

- (1) The landing gear control lever should be in the down position and the landing gear ground lockpins should be installed in the main and nose gears at all times during ground maintenance, except as noted in maintenance procedural steps.
- (2) The main gear wheels should be chocked at all times during ground maintenance, except as noted in maintenance procedural steps.
- (3) The hydraulic system selector control lever should be in the general system (normal) position at all times during ground maintenance, except as noted in maintenance procedural steps.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) The main gear bogie beams should be locked in the trail position at all times, except as noted in maintenance procedural steps.

**WARNING:** WHEN THE AIRPLANE IS ON WING AND FUSELAGE JACKS, THE MAIN GEAR WHEELS ARE CLEAR OF THE GROUND, AND THE HYDRAULIC POWER SYSTEM IS PRESSURIZED, THE AFT BOGIE AND WHEELS WILL SWING OUTBOARD VERY RAPIDLY IN THE DIRECTION OF NOSEWHEEL TURN IF THE NOSEWHEELS ARE TURNED MORE THAN 40 DEGREES. BOGIE AND MAIN GEAR AFT WHEELS WILL RETURN TO TRAIL POSITION JUST AS RAPIDLY WHEN THE NOSEWHEELS ARE RETURNED TO NEUTRAL POSITION. THIS COULD CAUSE SERIOUS INJURY TO PERSONNEL WORKING NEAR THE WHEELS.

**D. Hydraulic Power System O-Rings**


- (1) O-rings used in the installation of hydraulic power system components are shown in Figure 201. O-rings required for the landing gear, power control systems, etc., will be found in the applicable chapters.
- (2) O-ring part numbers shown in Figure 201 are interchangeable with Douglas standard (S-XXXXXXXX) numbers listed in the Illustrated Parts Catalog and on engineering drawings.

**2. Pressurize/Depressurize Hydraulic System**

**A. Pressurize Hydraulic System With External Hydraulic Source Pressure**

- (1) Tools and Equipment Required: A hydraulic test stand equipped with a variable-displacement hydraulic pump capable of delivering 200 gpm at 3000 psi, using Skydrol hydraulic fluid. The maximum permissible operating temperature should not exceed 180°F (82.2°C).
- (2) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (3) Make certain that wing flap control handle agrees with wing flap position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Remove dust caps from airplane ground service connections and connect test stand pressure and supply hoses.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

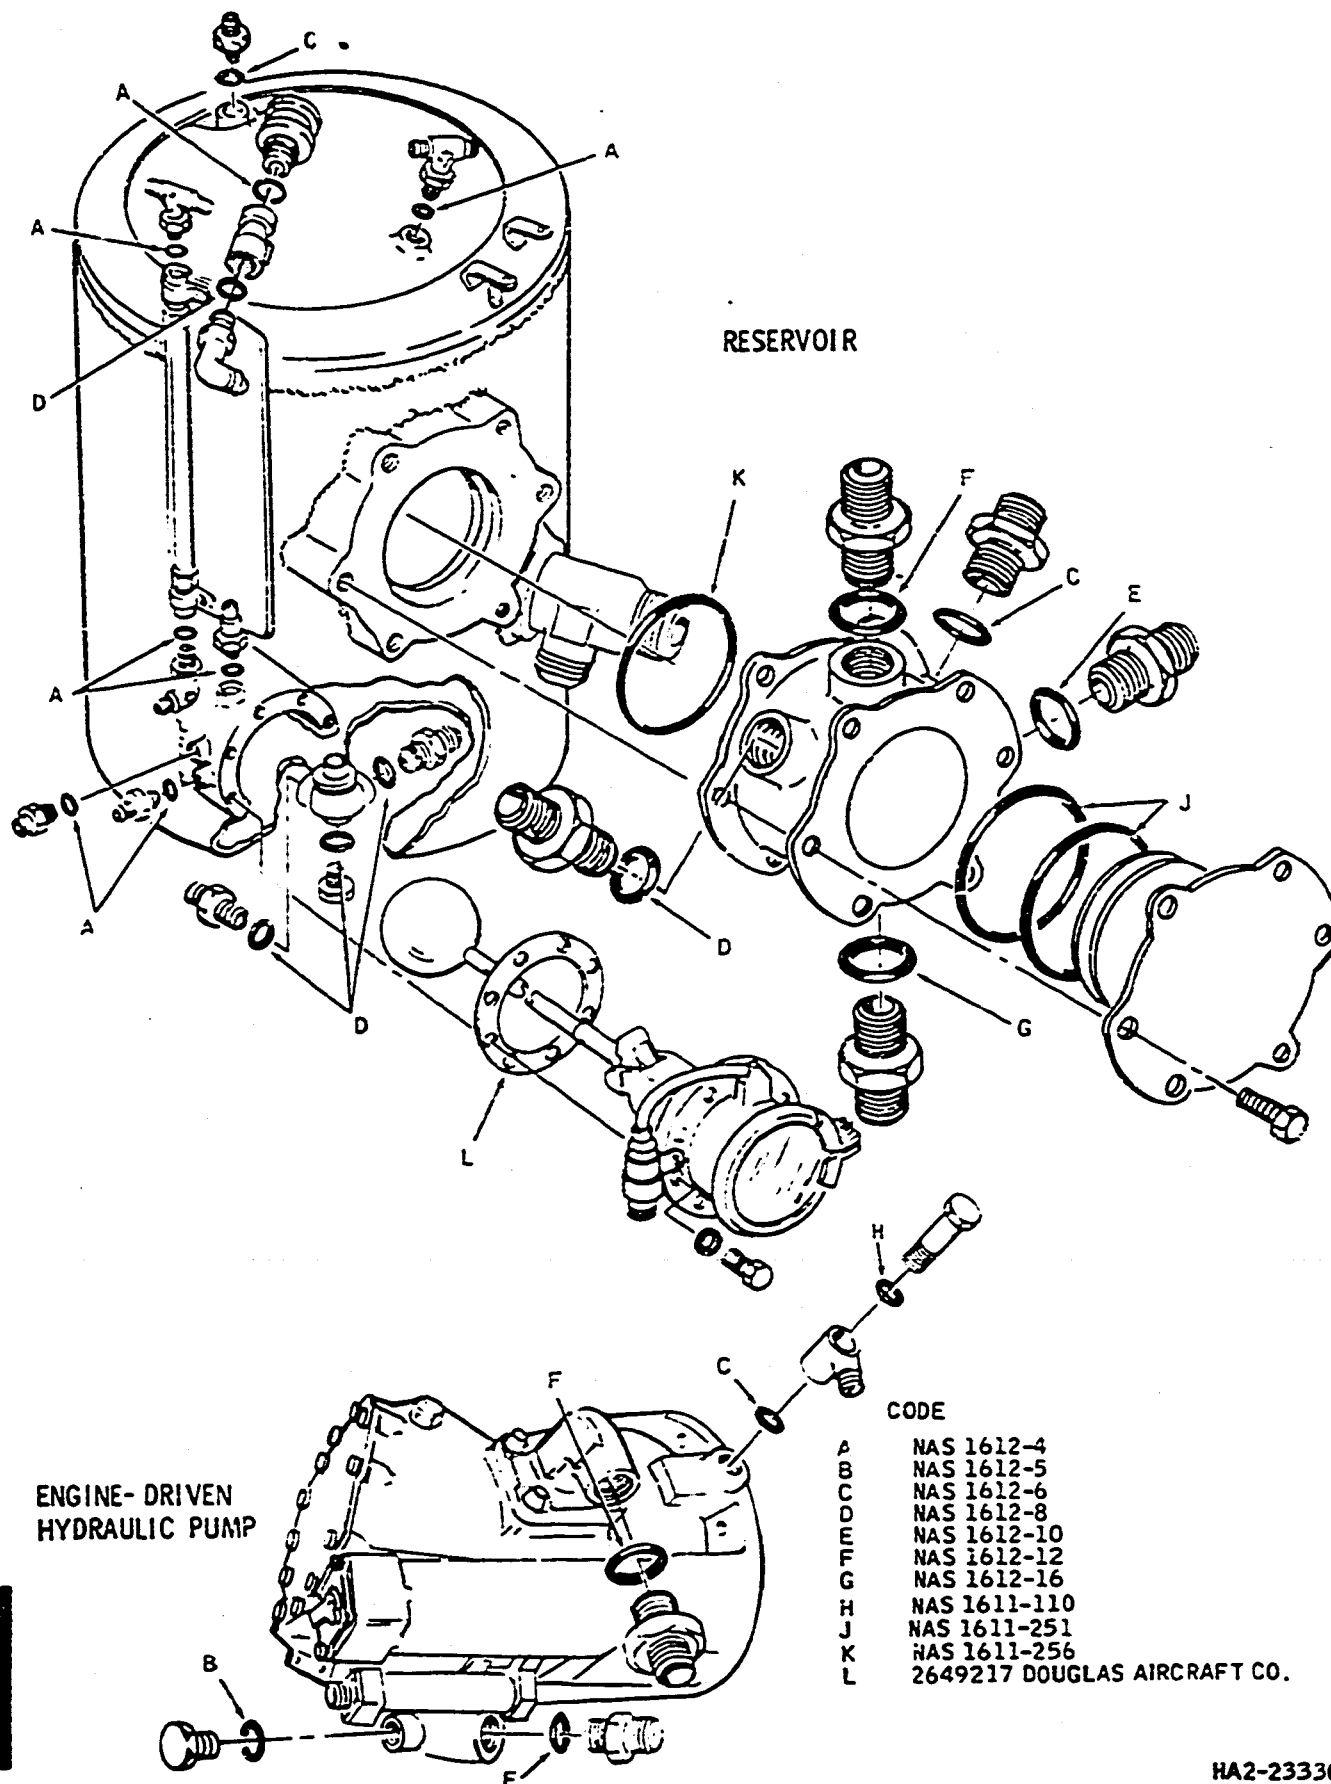


HA2-2333C

Hydraulic Power System Components -- O-Rings  
 Figure 201 (Sheet 1)


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

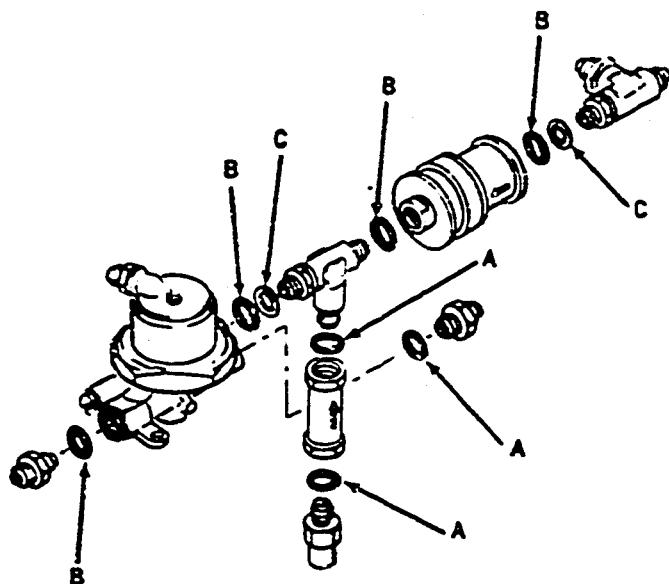


REGULATOR - ASPIRATOR  
 AND AIR FILTERS

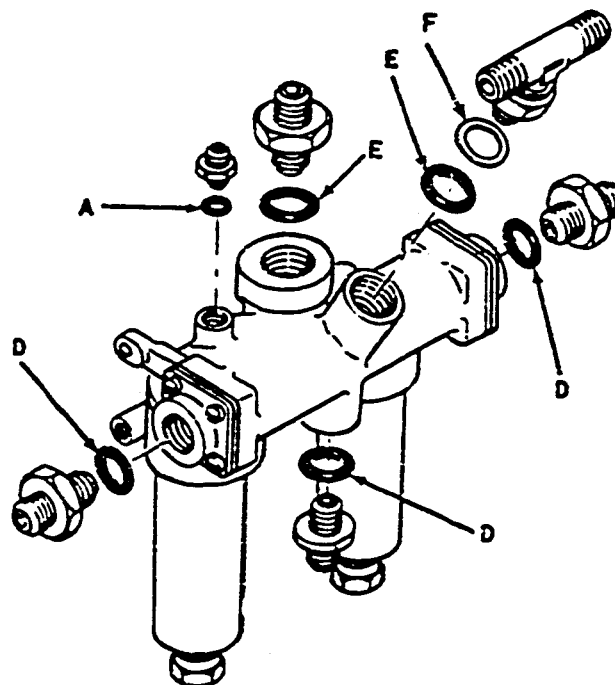

DUAL-FILTER &  
 RELIEF VALVE

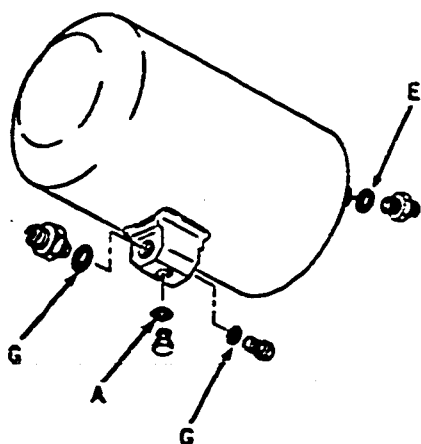

HYDRAULIC RESERVOIR  
 AIR CHAMBER

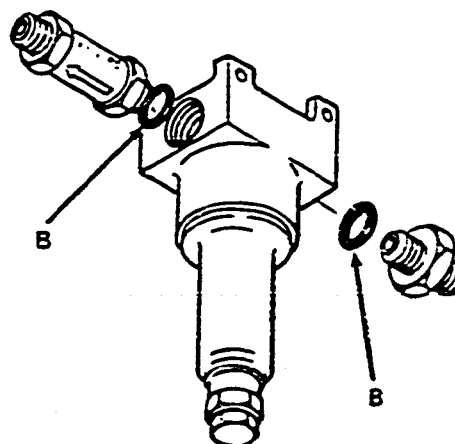

HYDRAULIC  
 PUMPCASE DRAIN  
 FILTER

CODE:

- A - NAS1612-4
- B - NAS1612-6
- C - MS28777-6\*
- D - NAS1612-10
- E - NAS1612-12
- F - MS28777-12\*
- G - NAS1612-16
- \* - BACKUP RING

Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 2)


HA2-1101A

Oct 1/67

Printed in U.S.A.

29-00  
 CODE 6  
 Page 205


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

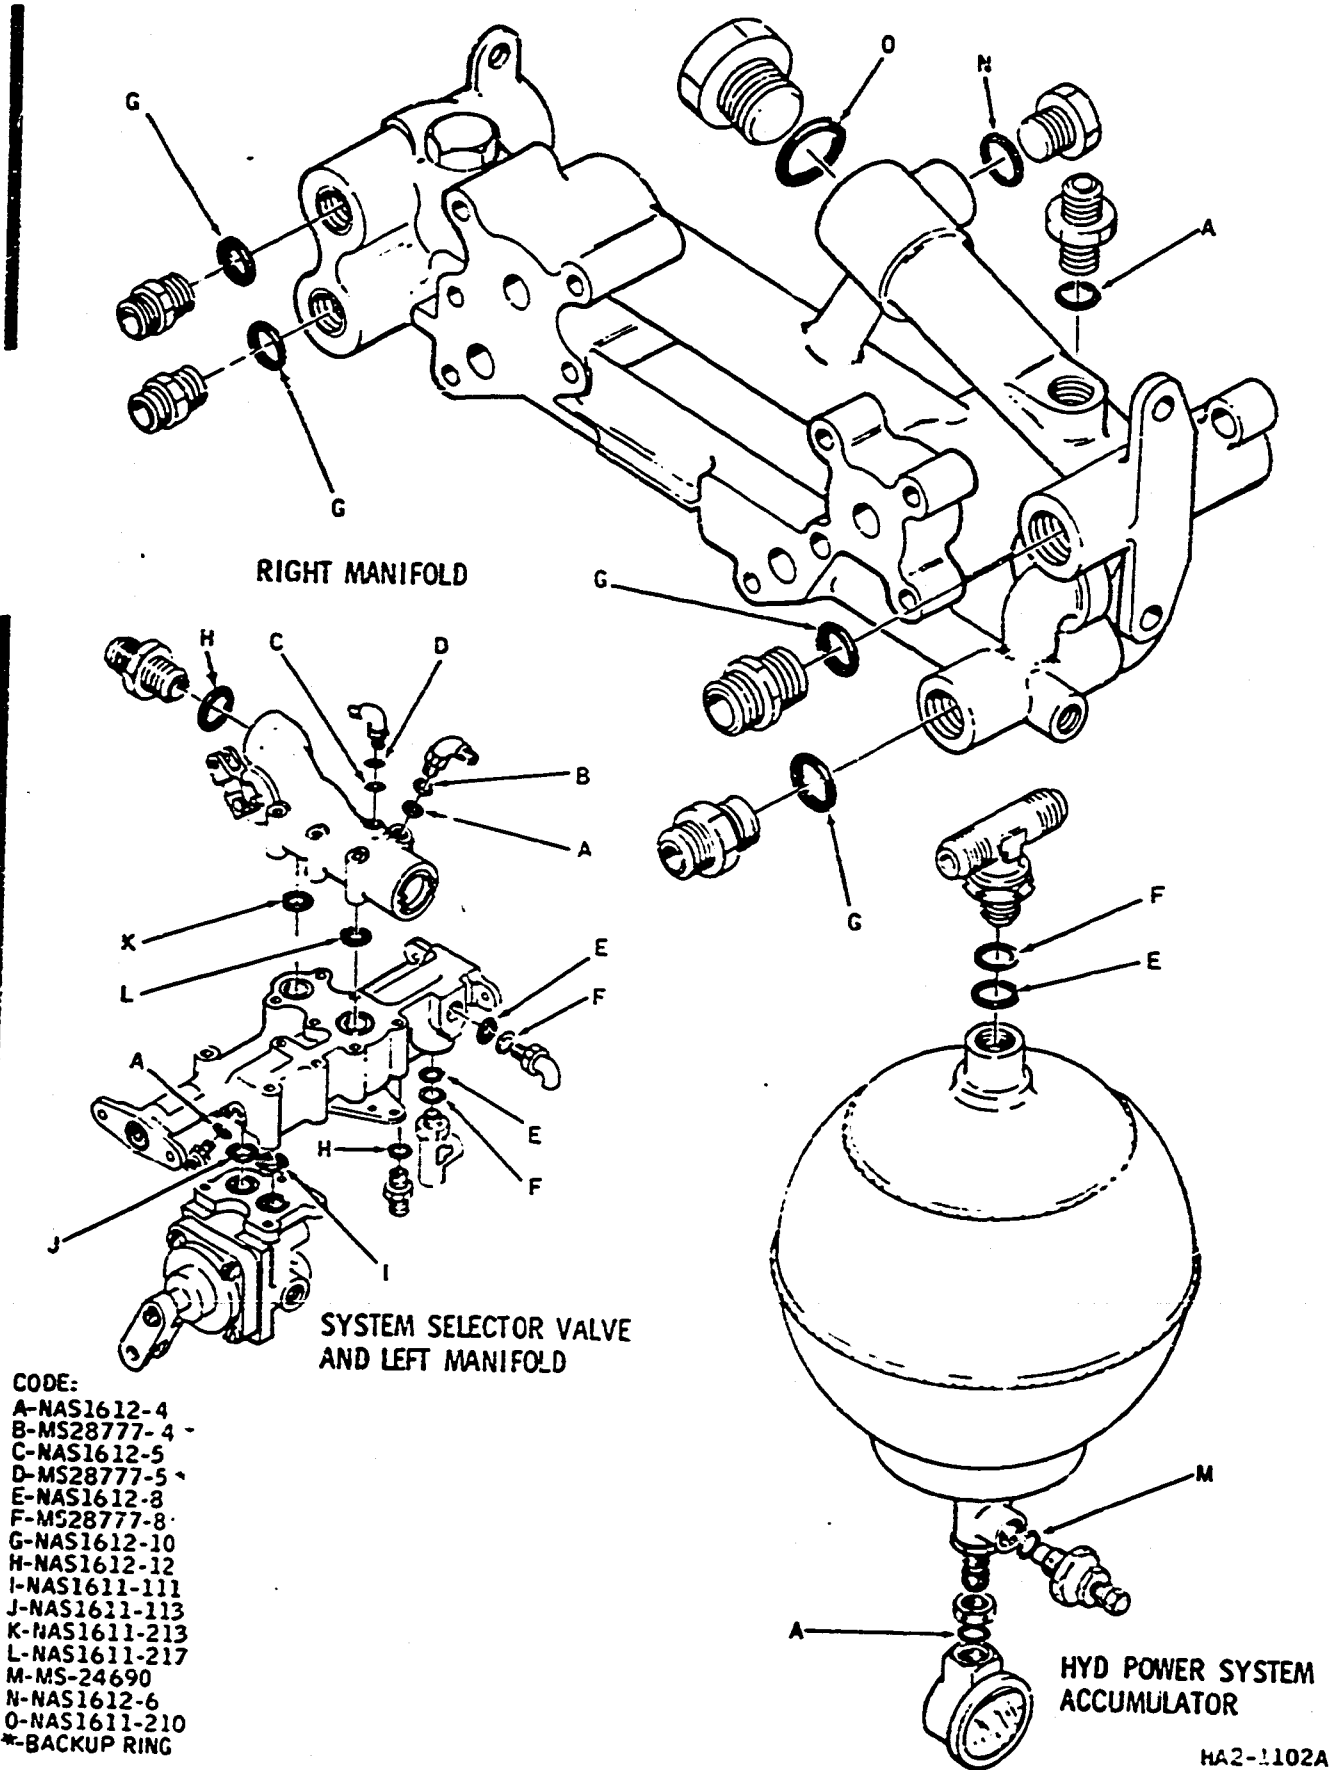


Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 3)




DOUGLAS AIRCRAFT CO., INC.  
**DC-E SIXTY SERIES**  
 MAINTENANCE MANUAL

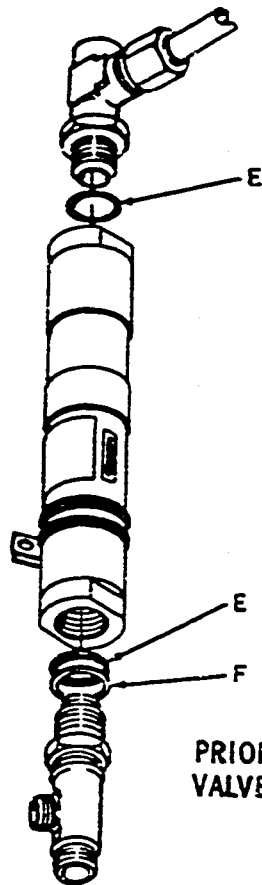

PRIORITY  
VALVE

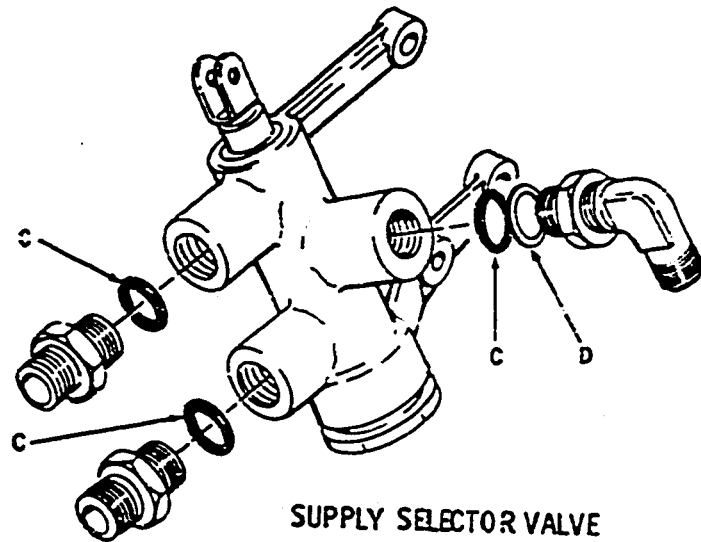


SUPPLY SELECTOR VALVE

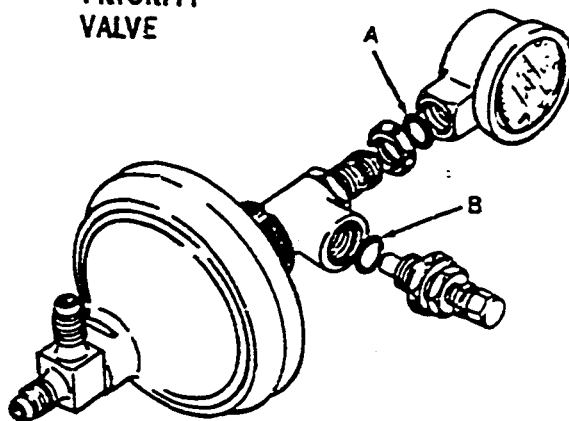


SURGE DAMPER ACCUMULATOR

CODE  
 A-NAS1612-4  
 B-MS2469-4  
 C-NAS1612-8  
 D-MS28777-8\*  
 E-NAS1612-12  
 F-MS28777-12\*  
 G-NAS1612-20

\* BACKUP RING

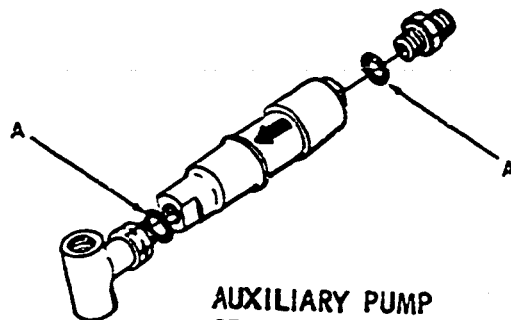

AUXILIARY PUMP  
RELIEF VALVE

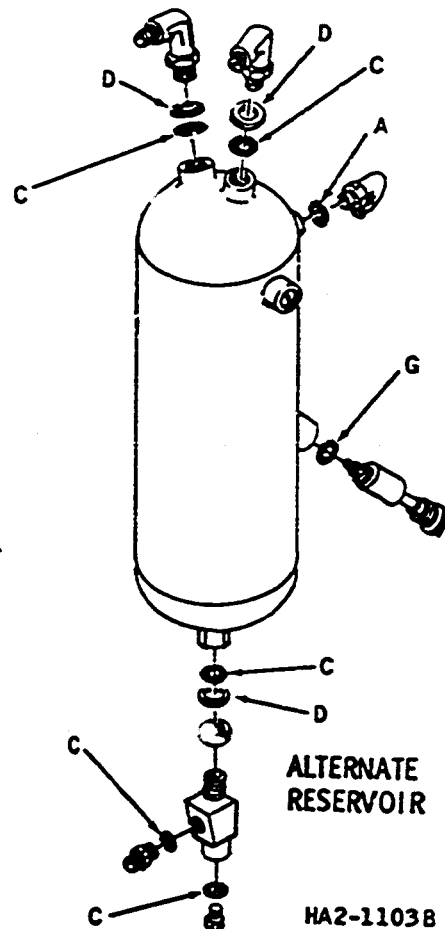

ALTERNATE  
RESERVOIR

HA2-1103B


Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 4)

Oct 1/67

Printed in U.S.A.

29-00  
 CODE 6  
 Page 207


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

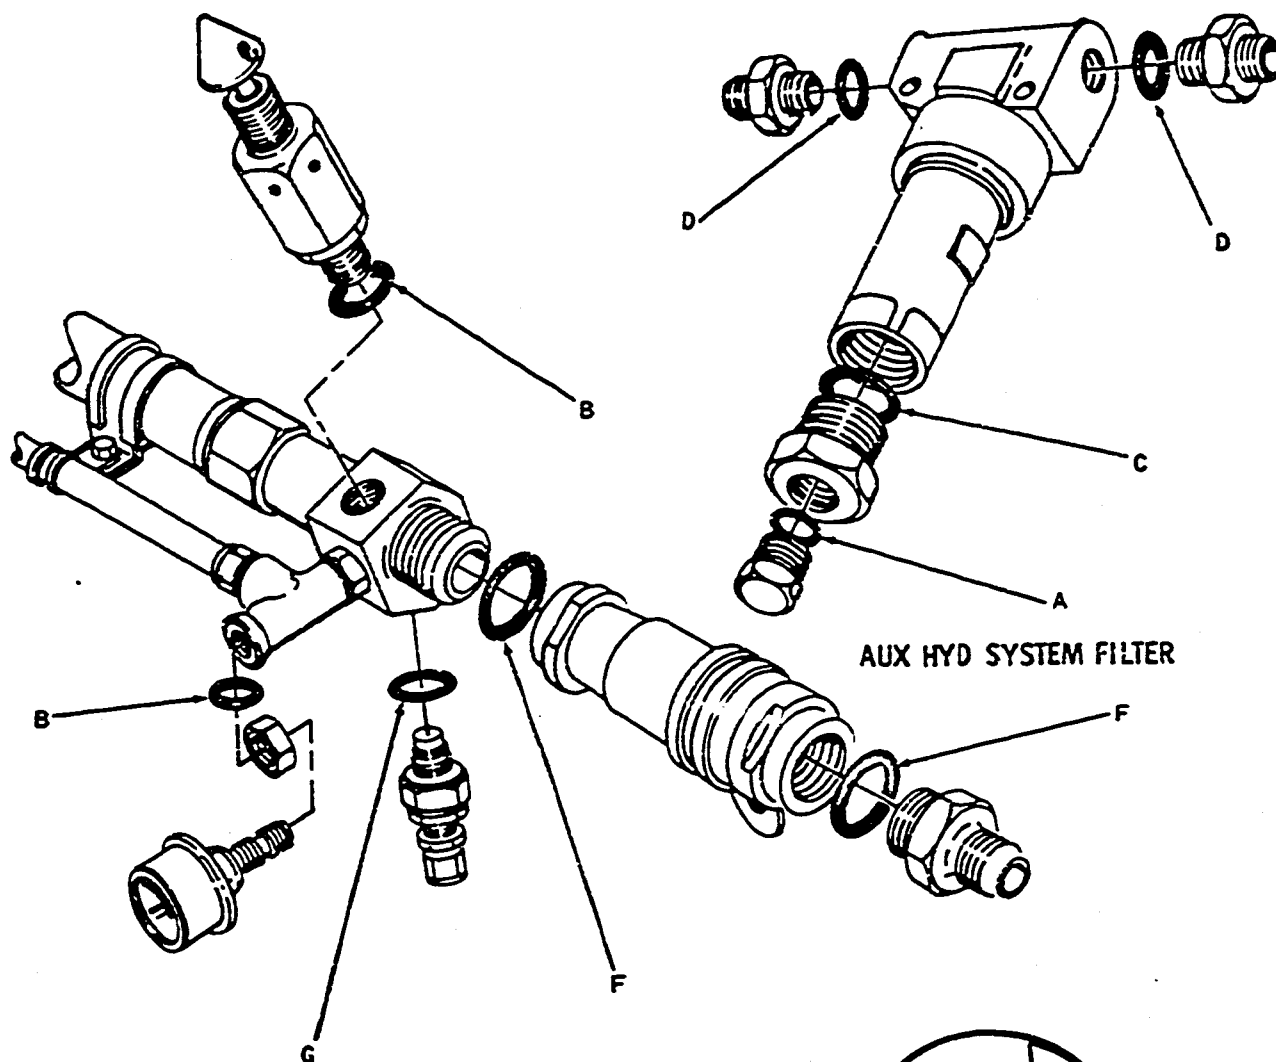

RESERVOIR AIR BLEED VALVE,  
 FILTER VALVE, PRESSURE GAGE  
 AND RELIEF VALVE

CODE  
 A-NAS1612-2  
 B-NAS1612-4  
 C-NAS1612-6  
 D-NAS1612-8  
 E-NAS1612-10  
 F-NAS1612-12  
 G-MS24690  
 H-MS28777-10 \*  
 J-MS28777-4 \*

\* BACKUP RING

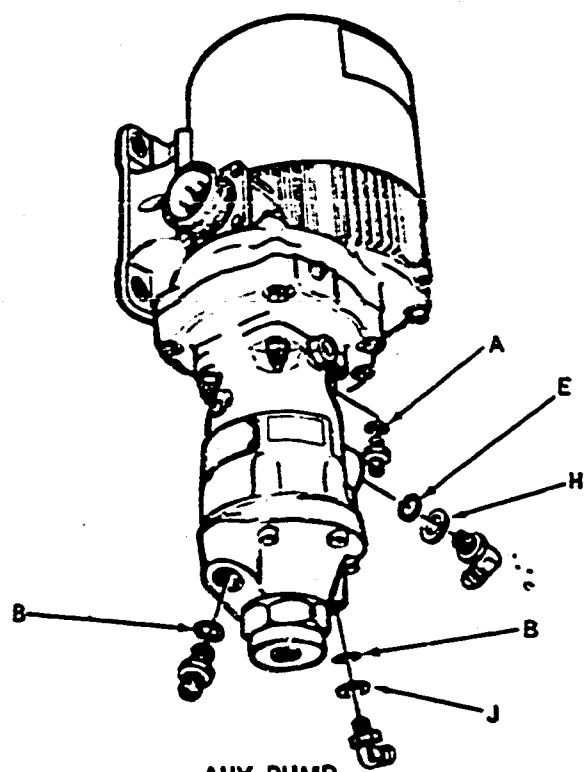

AUX PUMP

HA2-1104 A

Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 5)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Energize test stand hydraulic pump; pressurize hydraulic system to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT ALL FLIGHT CONTROL SURFACES AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

**B. Depressurize and Disconnect**

- (1) Check hydraulic fluid level of hydraulic reservoir; fill if necessary as described on instruction placard on reservoir.
- (2) Deenergize test stand hydraulic pump.
- (3) Depressurize hydraulic system by operating the brakes and manually moving the longitudinal trim handle until horizontal stabilizer movement stops.
- (4) Disconnect and cap test stand pressure and supply hoses from airplane ground service connections; install duct caps on connections and close access door.

**C. Pressurize Hydraulic System With Auxiliary Hydraulic Pump Pressure**

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap control handle agrees with wing flap position.
- (3) Place hydraulic system selector control lever in general system/bypass position.
- (4) Check that airplane electrical buses are energized (see Chapter 24).
- (5) Start auxiliary hydraulic pump by placing auxiliary hydraulic pump control switch momentarily in start position. Pressure indicated in the flight compartment should be 2600 to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT ALL FLIGHT CONTROL SURFACES AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

**CAUTION:** DO NOT HOLD THE AUXILIARY HYDRAULIC PUMP CONTROL SWITCH IN THE START (HOLD ONLY IN EMERGENCY) POSITION FOR NORMAL PRESSURIZATION.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

D. Depressurize

- (1) Stop auxiliary hydraulic by placing auxiliary hydraulic pump control switch momentarily in stop position.
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.
- (3) Place hydraulic system selector control lever in general system (normal) position.

E. Pressurize Hydraulic System With Engine-Driven Hydraulic Pump Pressure

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap handle agrees with wing flap position.
- (3) Make certain that applicable fire control handle is in normal position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Make certain that applicable engine-driven hydraulic pump control switch is in on position.
- (6) Start engine No. 2 or No. 3 (see Chapter 71). Hydraulic pressure indicated in the flight compartment should be 2800 to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT ALL FLIGHT CONTROL SURFACES AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

F. Depressurize

- (1) Shut down engine (see Chapter 71).
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.

3. Pressurize/Depressurize Hydraulic Reservoir

A. General

- (1) The air inflation valve, air bleed valve, and air pressure gage for manually pressurizing and depressurizing the hydraulic reservoir and air chamber are located on the aft side of the wing rear spar, at the forward end of the left main gear wheel well. The valves and gage are

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

mounted on a cross fitting just inboard of the reservoir air chamber. Access is through the left main gear inboard door.

B. Tools and Equipment Required

- (1) Pressure cylinder (clean dry compressed air or nitrogen).

C. Pressurize Hydraulic Reservoir

NOTE: Normal air pressure in the reservoir and air chamber should be between 30 and 35 psi.

NOTE: There are three methods of pressurizing the hydraulic reservoir:

- (1) Run an inboard engine.
- (2) Connect and operate a hydraulic test stand.
- (3) Direct pressurization of air chamber by introduction of compressed air or nitrogen.

The first two methods are automatic in that the reservoir is pressurized by action of the hydraulic fluid through the regulator-aspirator when the system is pressurized. The third method (direct inflation) will be described in the following steps.

- (1) Remove air inflation valve cap and attach pressure cylinder service hose to inflation valve.
- (2) Loosen inflation valve swivel nut three complete turns.

NOTE: The rate of inflation (flow through the valve) is governed by the degree of opening of the swivel valve.

- (3) Pressurize reservoir to 30 to 35 psi reading on air pressure gage.
- (4) Tighten swivel nut.
- (5) Disconnect service hose and install valve cap.

CAUTION: THE AIR INFLATION VALVE IS A STANDARD "AN" VALVE WHICH HAS BEEN MODIFIED BY INSTALLATION OF SKYDROL TYPE SEALS. DO NOT REPLACE THE VALVE WITH A VALVE WHICH HAS NOT BEEN MODIFIED FOR SKYDROL.

D. Depressurize Hydraulic Reservoir

- (1) Depress air bleed valve button; hold until all pressure has bled off and pressure gage reads zero.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

4. Drain Hydraulic System Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.
- (2) Clean container of approximately 20 US gallons (16.65 Imperial gallons or 75.7 liters) capacity.

B. Drain Reservoir

- (1) Depressurize hydraulic system and reservoir (see paragraphs 2 and 3).
- (2) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (3) Remove drain unit and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

5. Drain Auxiliary Hydraulic Pump Alternate Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.
- (2) Clean container of approximately 3 US gallons (2.5 Imperial gallons or 11.5 liters) capacity.

B. Drain Reservoir

- (1) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (2) Remove drain unit and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

6. Hydraulic System Pressure Decay Rates

A. Decay Rate Test

- (1) By observing the time it takes for the hydraulic system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi, it is possible, in most cases, to detect units that are leaking excessively. This procedure is not infallible because the sum of the maximum allowable leakage rates determines the minimum time permissible for pressure decay. The hydraulic system

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

with average leakage will maintain pressure for longer periods than indicated and may do so even with one unit leaking excessively.

- (2) The main hydraulic system should be tested for pressure decay time under the following conditions:
  - (a) System selector valve in general system/bypass or general system (normal)
  - (b) Nosewheel straight ahead plus or minus 30 degrees and steering valve in neutral position
  - (c) Manual main gear door valve open
  - (d) Landing gear down and locked
  - (e) Wing flaps up
  - (f) Accumulators properly charged
  - (g) Aileron shutoff valve off
  - (h) Rudder shutoff valve off
- (3) Pressurize main hydraulic system to 2900 ( $\pm 100$ ) psi with auxiliary pump or hydraulic test stand. Then shut off hydraulic power source and note time interval required for system pressure to decrease 1000 psi. This should be more than 34 seconds on a new airplane or more than 23 seconds on an airplane in service before overhaul. If pressure decay time is less, the main hydraulic system should be inspected for a malfunctioning unit.
- (4) If pressure decay test indicates that a unit in the main hydraulic system was leaking excessively, that unit may be in the nose or main gear subsystem, the main gear door subsystem, the flap subsystem, the slot subsystem, the selector valve, or the compressor subsystem. By placing the subsystem control valves in opposite positions one at a time and repeating the pressure decay test, it is possible that the faulty unit may be located.
- (5) Rudder power hydraulic system may be tested for pressure decay time by using procedures outlined in steps (2) and (3), except that the rudder shutoff valve should be on. Decay time should be more than 10 seconds on a new airplane or more than 8 seconds on an airplane in service before overhaul. If less, the rudder power system should be inspected for a malfunctioning unit.
- (6) Supplementary information may be obtained for the rudder power hydraulic system by using the auxiliary rudder system pump and accumulator air gage to test the time for rudder pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi. With the rudder hydraulic power shutoff valve off, the time should be more than 2 minutes. With the rudder hydraulic power shutoff

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

valve on, the time should be 12 seconds on a new airplane and 10 seconds on an airplane in service before overhaul.

- (7) Aileron hydraulic power system may be tested for pressure decay by using procedures outlined in steps (2) and (3), except that the aileron hydraulic power shutoff valve should be on. The decay time should be more than 6-1/2 seconds on a new airplane or more than 4-1/2 seconds on an airplane in service before overhaul. If less, the aileron power system should be inspected for a malfunctioning unit.
- (8) Brake system and the nose gear steering system are isolated from the main hydraulic system by check valves and may be tested separately. Using the brake accumulator gages, the pressure decay time for the brake system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 10 hours with the parking brake off, and 2 hours with the parking brake on. With the brake accumulators fully charged deplete the general system pressure. Wait 3 to 5 minutes and then set the parking brake and hold the parking brake pressure for 15 minutes. The drop in pressure at the brake accumulators should not exceed 125 psi during this time.
- (9) Release the parking brakes, and build up brake accumulator pressure to 2900 ( $\pm 100$ ) psi. With hydraulic power off and brakes off, check brake accumulator pressure. Drop in pressure at the accumulators should not exceed 100 psi in 30 minutes. Fast decay time for the brake system with parking brake off, indicates either a faulty brake valve or a faulty check valve in the right manifold. A fast decay time with the parking brake on indicates a faulty antiskid valve or a faulty brake valve.
- (10) Using the gages on the nose pressure accumulators, the time for the nose gear steering system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 19 minutes. If less, one of the pressure check valves is faulty, or the nose gear steering control valve is faulty or out of neutral.

**CAUTION:** ALL LANDING GEAR GROUND LOCKPINS MUST BE INSTALLED BEFORE CONDUCTING THE FOLLOWING TEST.

- (11) Under conditions outlined in step (2), except with the landing gear control valve in the up position, the time for pressure decay should be unchanged. If time limits change more than 5 seconds as determined in paragraph (3), a faulty unit is in the gear subsystem.
- (12) Under conditions outlined in step (2), except with the main gear door manual control valve in the closed position, the decay time should be more than 24 seconds on a new airplane and 18 seconds on an airplane in service before overhaul. If less, the faulty unit is in the main gear door subsystem.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (13) Under conditions outlined in step (2), except with the flap control valve in the down position, the decay time should be more than 24 seconds on a new airplane and 17 seconds on an airplane in service before overhaul. If less, the faulty unit is in the flap subsystem.
- (14) Under conditions outlined in step (2), time limit for pressure decay should remain unchanged as determined in paragraph (3) with the slot valve in either position, or the selector valve in either general system/bypass or general system (normal). If the time changes with a change of valve position, the faulty unit is in that subsystem.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - MAINTENANCE PRACTICES

1. General

A. Skydrol Safety Precautions

- (1) Before performing any operation on the hydraulic system, personnel should read and thoroughly understand the following precautions to be observed when working with Skydrol hydraulic fluid.

WARNING: OBSERVE THE FOLLOWING SAFETY PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. LONG EXPOSURE TO SKYDROL CAN CAUSE SKIN DEHYDRATION AND CHAPPING.

- (2) Wash hands thoroughly with soap and water before starting work.
- (3) Apply barrier cream to hands, wrists, and forearms. Rub cream under fingernails and into creases of skin.
- (4) Wear goggles when pressure testing components or systems, and whenever there is any possibility of Skydrol splashing into eyes.
- (5) If Skydrol splashes into eyes, treat eyes immediately by irrigating thoroughly with clear cold water, and report the incident.
- (6) Wash hands, wrists, and forearms with soap and hot water whenever they have come in contact with Skydrol.
- (7) If clothing becomes soaked with Skydrol; remove clothing as soon as possible, thoroughly wash skin, and put on clean clothing.

B. Technical Precautions

- (1) Before any maintenance is performed on the hydraulic system, personnel should read and thoroughly understand the following precautions. Careful adherence to these instructions will aid in maintaining a functional and trouble-free system.

CAUTION: OBSERVE THE FOLLOWING TECHNICAL PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. SKYDROL WILL ATTACK A WIDE RANGE OF MATERIALS INCLUDING RUBBER, COPPER, VARIOUS PLASTICS, AND PAINTS.

- (2) Ensure that Skydrol does not come into contact with any part of aircraft outside of the hydraulic system. Keep spillage to an absolute minimum. Clean up spilled hydraulic fluid immediately to prevent entry into adjacent areas of the airplane precluding future false hydraulic leak reports. If spillage occurs, wipe up the fluid with a dry cloth and wash contaminated area with soap and hot water.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) When lines are disconnected and/or components are removed, provide suitable protection to prevent foreign material from entering the lines or components by use of caps, covers, clean lint-free rags, etc.
- (4) When electrical connectors are disconnected, install caps or other suitable protectors to prevent entry of hydraulic fluid, moisture, and foreign objects.
- (5) Always check position and angle of all fittings removed from components to ensure placement and alignment when installing replacement components.
- (6) When washing metal parts before assembly, use only approved solvent, and ensure that all traces of the solvent are removed before assembly.
- (7) Use only clean Skydrol for flushing or testing hydraulic components.
- (8) Use only clean Skydrol when filling reservoirs, sumps, filter bowls, pumps, etc., before installation of components.
- (9) Do not unpack Skydrol O-rings and seals until required. Ensure that only approved rings and seals are used.
- (10) When assembling O-rings and seals, lubricate with Skydrol Assembly Lubricant, MCS 352, Monsanto Chemical Co., or clean Skydrol hydraulic fluid.
- (11) Take care to prevent contamination of Skydrol with other materials (oils, water, dirt, etc.).
- (12) If a system becomes contaminated with any petroleum-based oil or solvent, drain the system and flush with clean Skydrol.


C. Landing Gear Precautions

- (1) The landing gear control lever should be in the down position and the landing gear ground lockpins should be installed in the main and nose gears at all times during ground maintenance, except as noted in maintenance procedural steps.
- (2) The main gear wheels should be chocked at all times during ground maintenance, except as noted in maintenance procedural steps.
- (3) The hydraulic system selector control lever should be in the general system (normal) position at all times during ground maintenance, except as noted in maintenance procedural steps.

D. Hydraulic Power System O-Rings

- (1) O-rings used in the installation of hydraulic power system components are shown in Figure 201. O-rings required for the landing gear, power control systems, etc., will be found in the applicable chapters.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

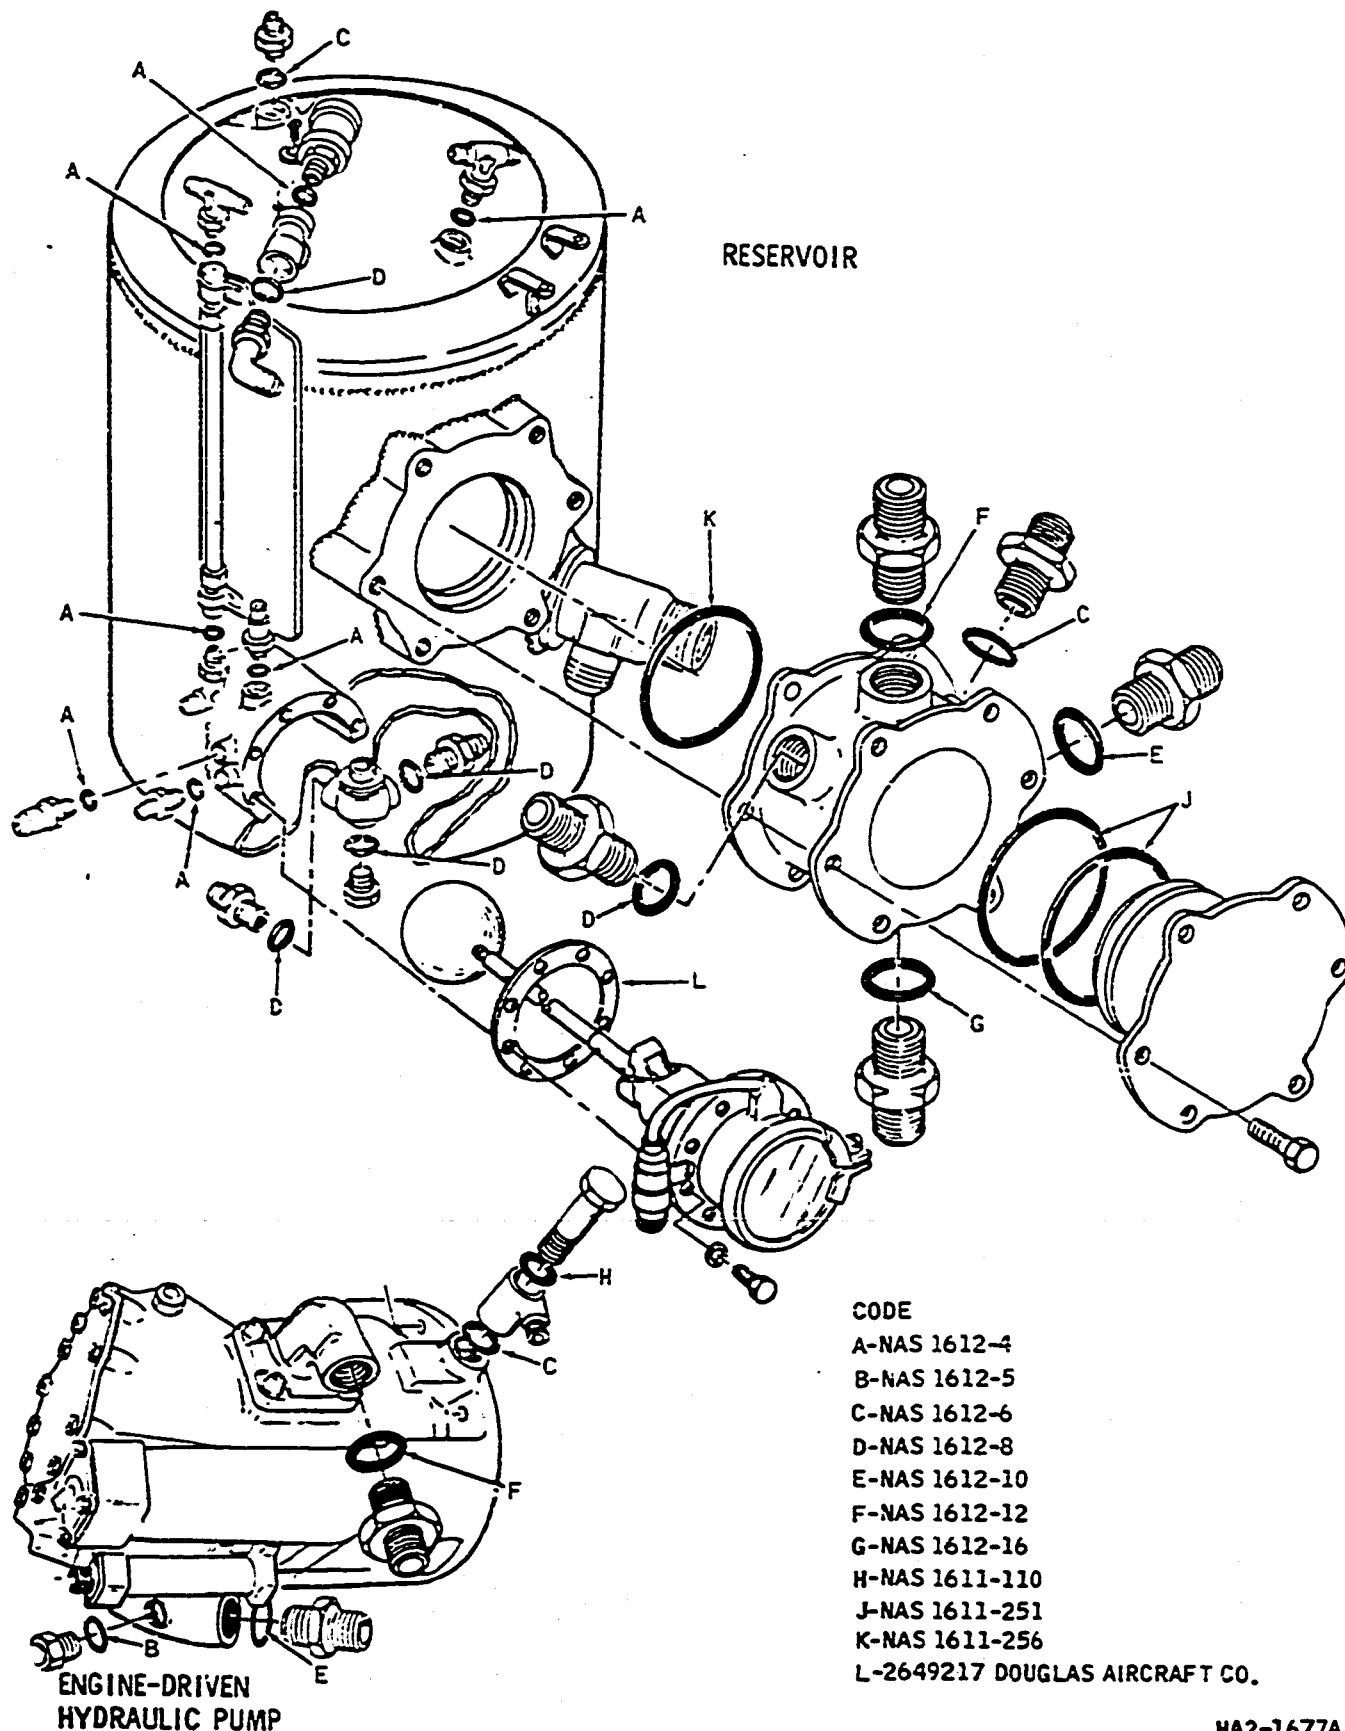


HA2-1677A

Hydraulic Power System Components -- O-Rings  
 Figure 201 (Sheet 1)


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

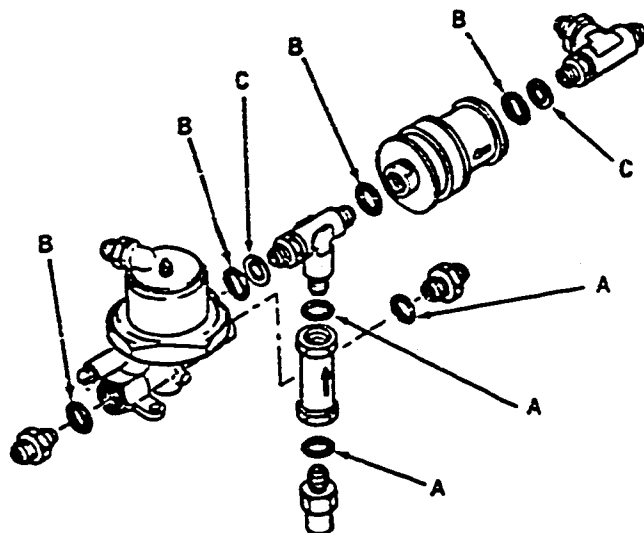


REGULATOR - ASPIRATOR  
 AND AIR FILTERS

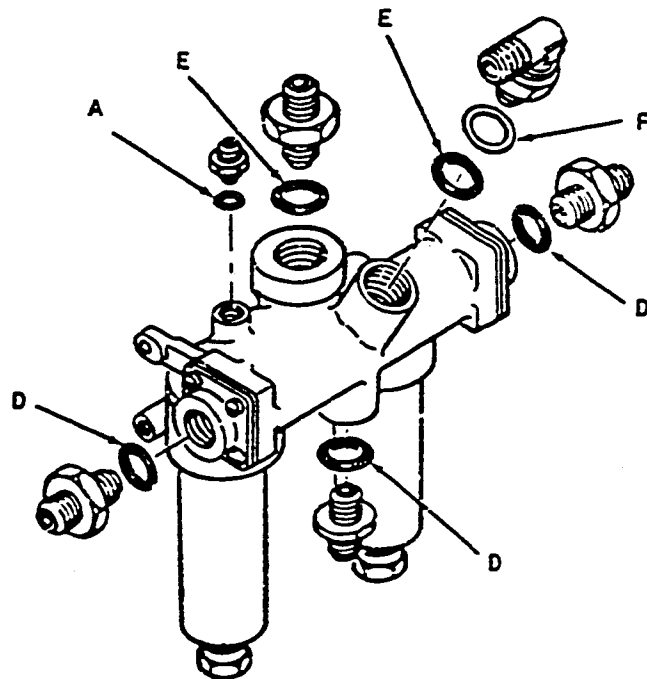

DUAL-FILTER &  
 RELIEF VALVE

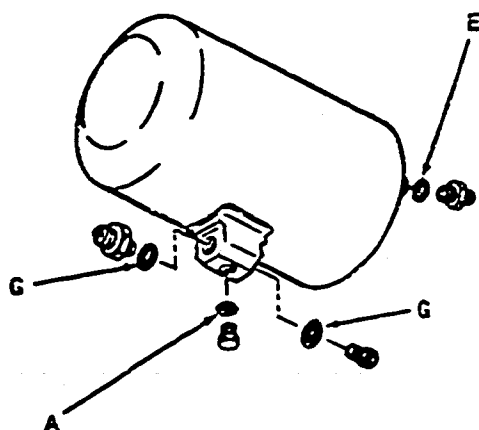

HYDRAULIC RESERVOIR  
 AIR CHAMBER

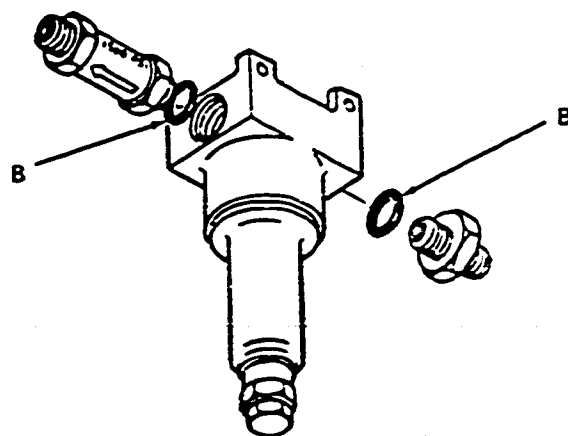

HYDRAULIC  
 PUMPCASE DRAIN  
 FILTER


CODE

- A - NAS1612-4
- B - NAS1612-6
- C - MS28777-6 \*
- D - NAS1612-10
- E - NAS1612-12
- F - MS28777-12 \*
- G - NAS1612-16
- \* - BACKUP RING

HA2-3415B

Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 2)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

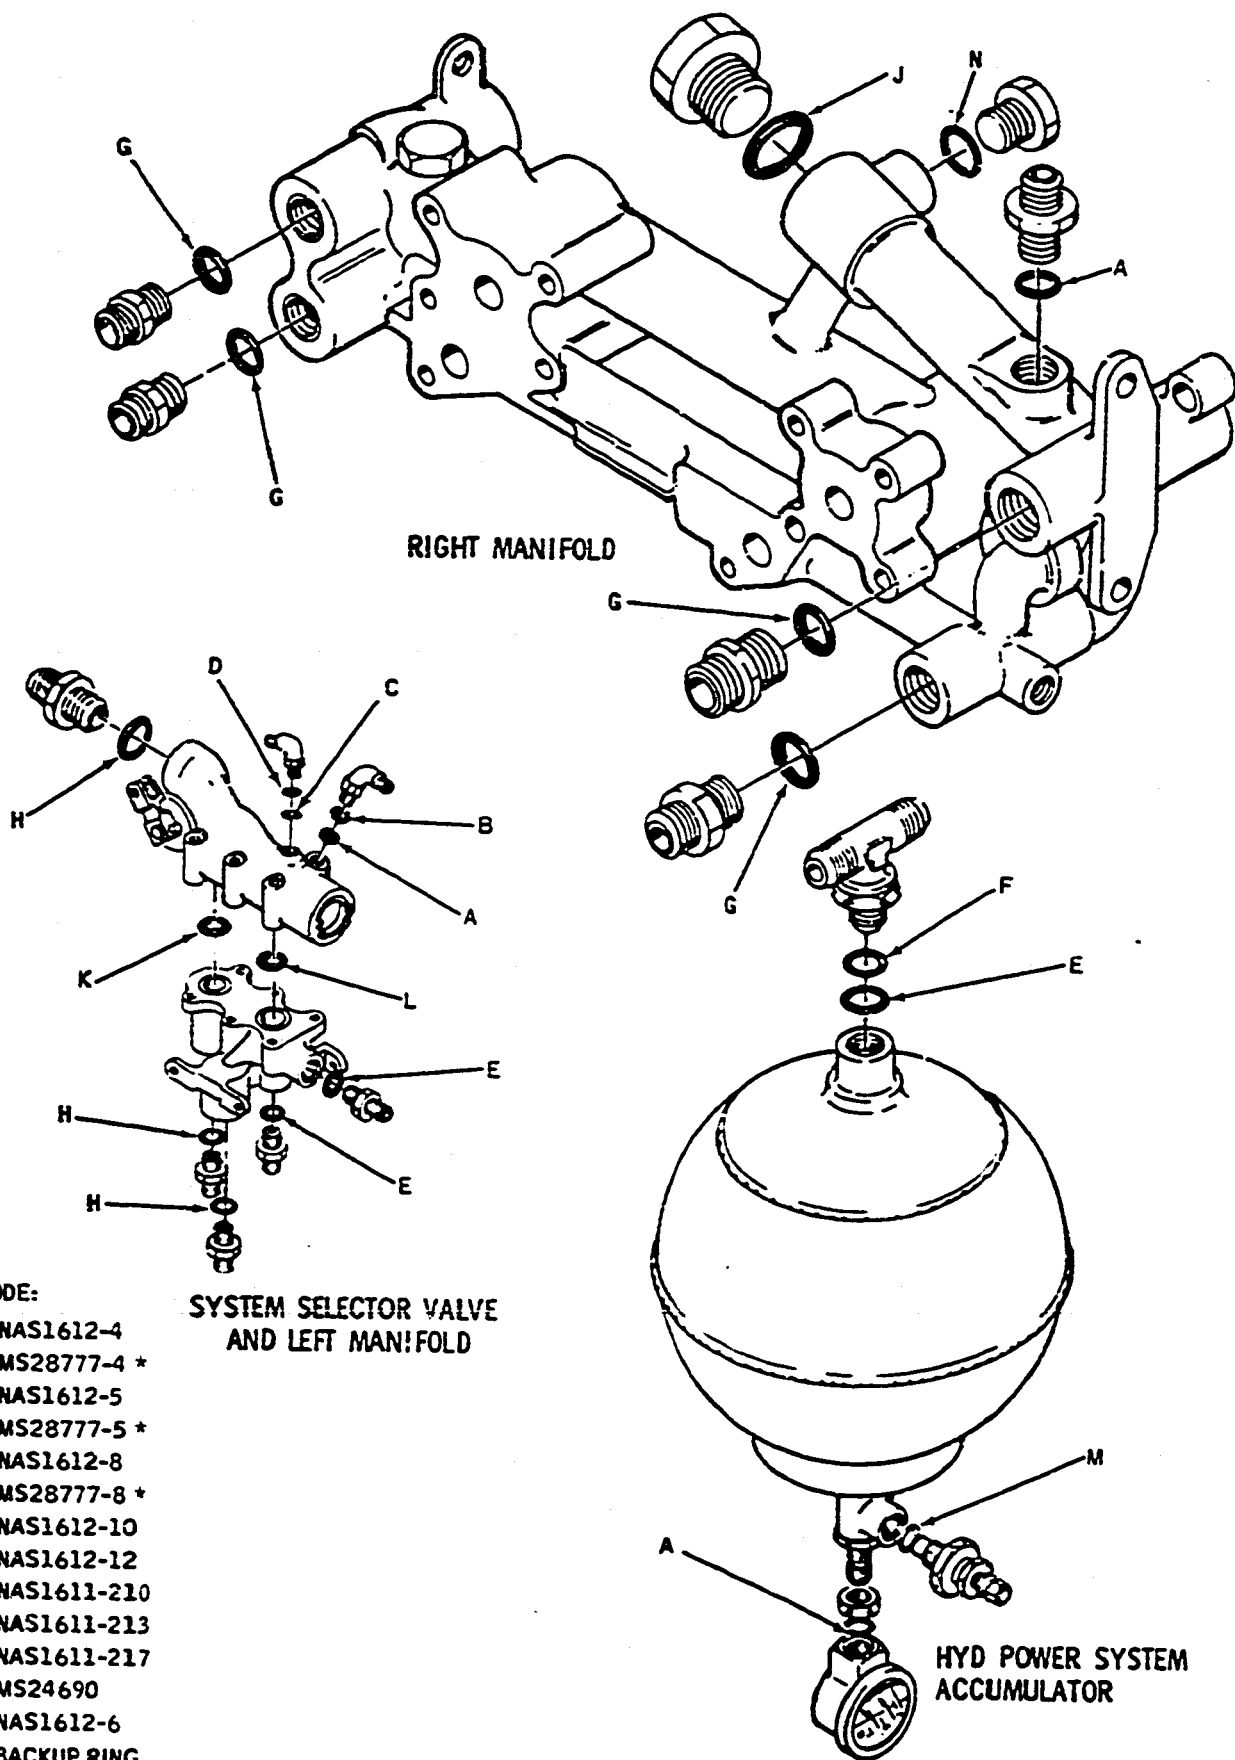

HA2-1678A


Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 3)

Oct 1/67


Printed in U.S.A.

29-00  
 CODE 7  
 Page 205


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

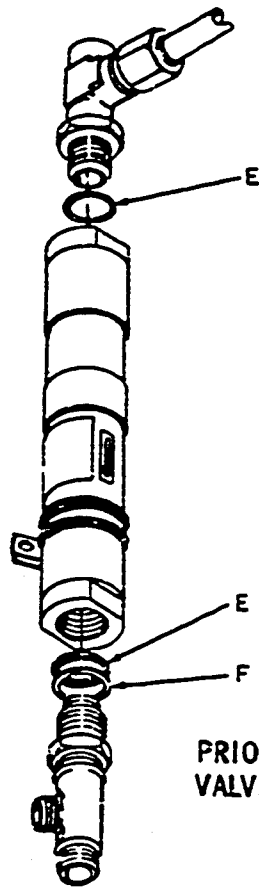

PRIORITY  
VALVE

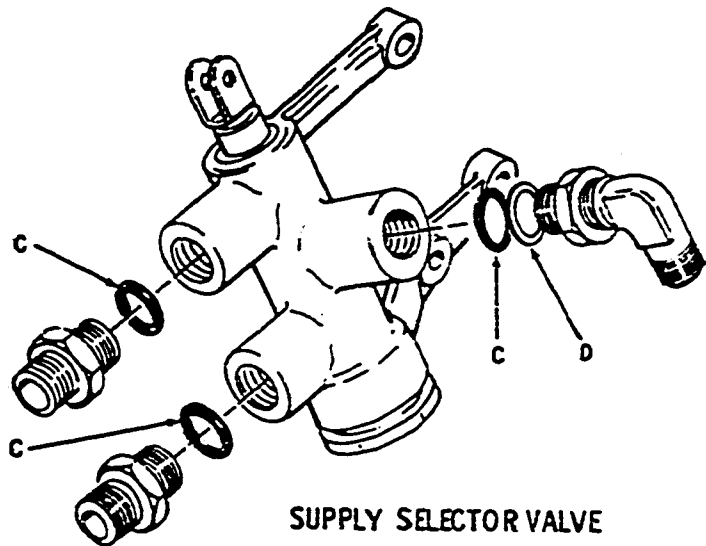


SUPPLY SELECTOR VALVE

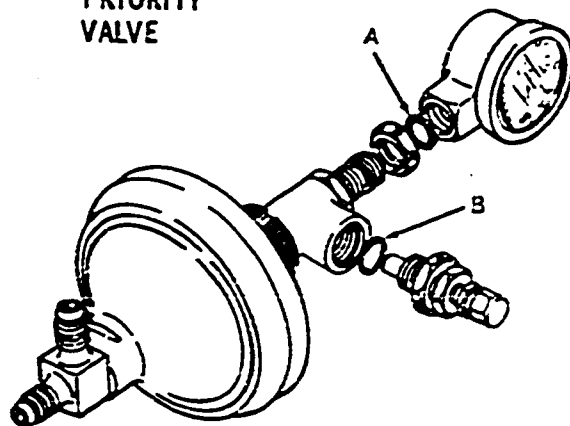


SURGE DAMPER ACCUMULATOR

CODE  
 A-NAS1612-4  
 B-MS2469-4  
 C-NAS1612-8  
 D-MS28777-8\*  
 E-NAS1612-12  
 F-MS28777-12\*  
 G-NAS1612-20

\* BACKUP RING

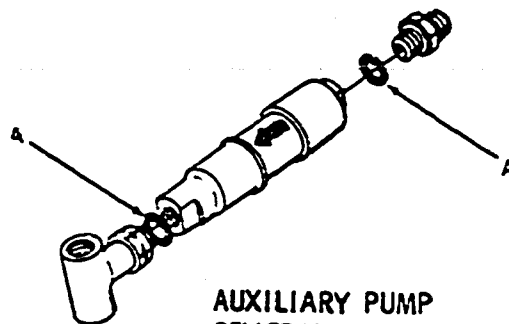

AUXILIARY PUMP  
RELIEF VALVE

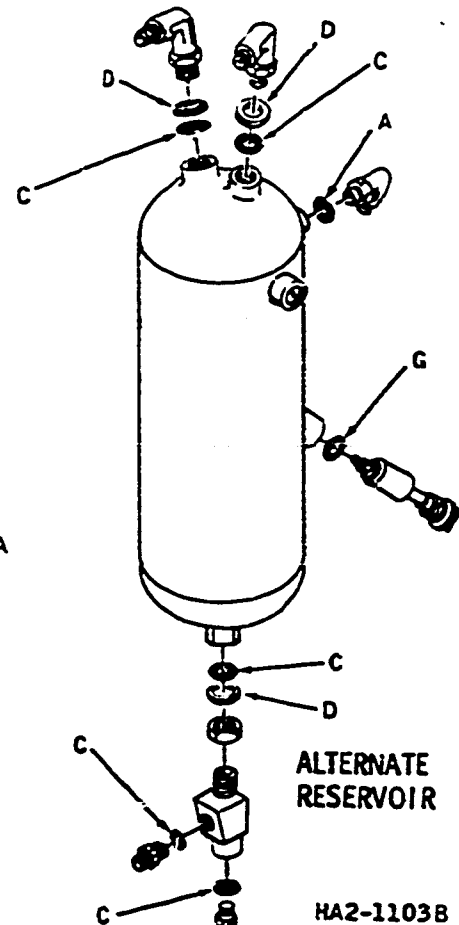


ALTERNATE  
RESERVOIR

HA2-1103B

Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 4)


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

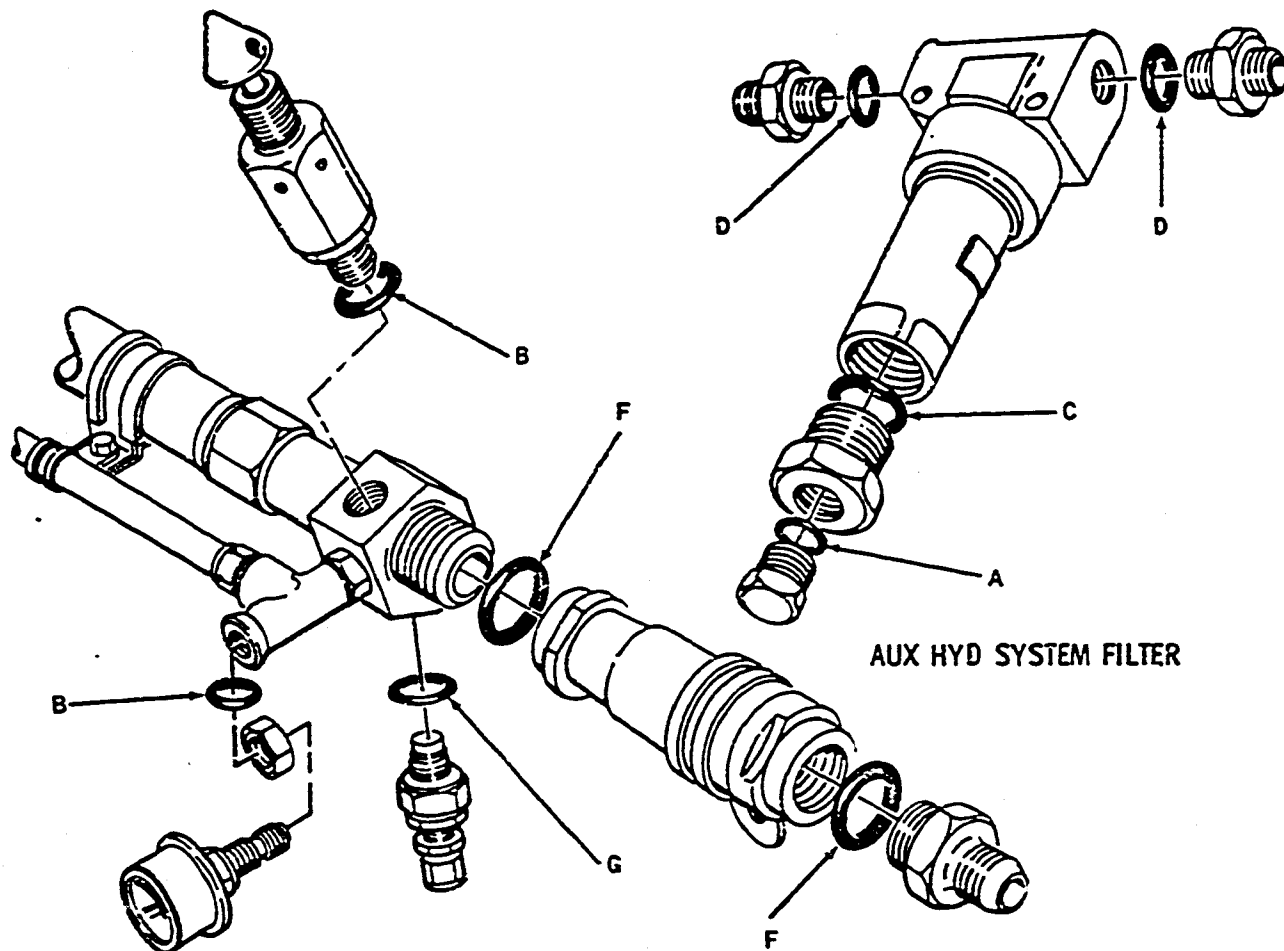

RESERVOIR AIR BLEED VALVE,  
 FILTER VALVE, PRESSURE GAGE  
 AND RELIEF VALVE

CODE

A - NAS1612-2  
 B - NAS1612-4  
 C - NAS1612-6  
 D - NAS1612-8  
 E - NAS1612-10  
 F - NAS1612-12  
 G - MS24690

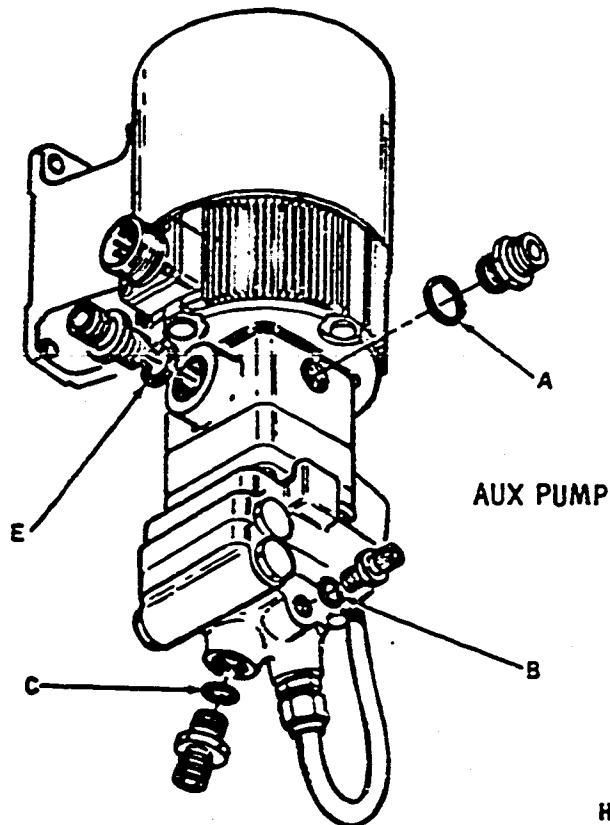

HA2-1679A

Hydraulic Power System Components -- C-rings  
 Figure 201 (Sheet 5)

Oct 1/67

Printed in U.S.A.

29-00  
 CODE 7  
 Page 207



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) O-ring part numbers shown in Figure 201 are interchangeable with Douglas standard (S-XXXXXXXX) numbers listed in the illustrated Parts Catalog and on engineering drawings.

## 2. Pressurize/Depressurize Hydraulic System

### A. Pressurize Hydraulic System With External Hydraulic Source Pressure

- (1) Tools and Equipment Required: A hydraulic test stand equipped with a variable-displacement hydraulic pump capable of delivering 20 gpm at 3000 psi, using Skydrol hydraulic fluid. The maximum permissible operating temperature should not exceed 180°F (82.2°C).
- (2) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (3) Make certain that wing flap control handle agrees with wing flap position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Remove dust caps from airplane ground service connections and connect test stand pressure and supply hoses.
- (6) Energize test stand hydraulic pump; pressurize hydraulic system to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

### B. Depressurize and Disconnect

- (1) Check hydraulic fluid level of hydraulic reservoir; fill if necessary as described on instruction placard on reservoir.
- (2) Deenergize test stand hydraulic pump.
- (3) Depressurize hydraulic system by operating the brakes and manually moving the longitudinal trim handle until horizontal stabilizer movement stops.
- (4) Disconnect and cap test stand pressure and supply hoses from airplane ground service connections; install duct caps on connections and close access door.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

C. Pressurize Hydraulic System With Auxiliary Hydraulic Pump Pressure

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap control handle agrees with wing flap position.
- (3) Place hydraulic system selector control lever in general system/bypass position.
- (4) Check that airplane electrical buses are energized (see Chapter 24).
- (5) Start auxiliary hydraulic pump by placing auxiliary hydraulic pump control switch momentarily in start position. Pressure indicated in the flight compartment should be 2600 to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

**CAUTION:** DO NOT HOLD THE AUXILIARY HYDRAULIC PUMP CONTROL SWITCH IN THE START (HOLD ONLY IN EMERGENCY) POSITION FOR NORMAL PRESSURIZATION.

D. Depressurize

- (1) Stop auxiliary hydraulic by placing auxiliary hydraulic pump control switch momentarily in stop position.
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.
- (3) Place hydraulic system selector control lever in general system (normal) position.

E. Pressurize Hydraulic System With Engine-Driven Hydraulic Pump Pressure

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap handle agrees with wing flap position.
- (3) Make certain that applicable fire control handle is in normal position.
- (4) Place hydraulic system selector control lever in general system (normal) position.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Make certain that applicable engine-driven hydraulic pump control switch is in on position.
- (6) Start engine No. 2 or No. 3 (see Chapter 71). Hydraulic pressure indicated in the flight compartment should be 2800 to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

**F. Depressurize**

- (1) Shut down engine (see Chapter 71).
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.

**3. Pressurize/Depressurize Hydraulic Reservoir**

**A. General**

- (1) The air inflation valve, air bleed valve, and air pressure gage for manually pressurizing and depressurizing the hydraulic reservoir and air chamber are located on the aft side of the wing rear spar, at the forward end of the left main gear wheel well. The valves and gage are mounted on a cross fitting just inboard of the reservoir air chamber. Access is through the left main gear inboard door.

**B. Tools and Equipment Required**

- (1) Pressure cylinder (clean dry compressed air or nitrogen).

**C. Pressurize Hydraulic Reservoir**

**NOTE:** Normal air pressure in the reservoir and air chamber should be between 30 and 35 psi.

**NOTE:** There are three methods of pressurizing the hydraulic reservoir:

- (1) Run an inboard engine.
- (2) Connect and operate a hydraulic test stand.
- (3) Direct pressurization of air chamber by introduction of compressed air or nitrogen.

The first two methods are automatic in that the reservoir is pressurized by action of the hydraulic fluid through the

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

regulator-aspirator when the system is pressurized. The third method (direct inflation) will be described in the following steps.

- (1) Remove air inflation valve cap and attach pressure cylinder service hose to inflation valve.
- (2) Loosen inflation valve swivel nut three complete turns.

NOTE: The rate of inflation (flow through the valve) is governed by the degree of opening of the swivel valve.

- (3) Pressurize reservoir to 30 to 35 psi reading on air pressure gage.
- (4) Tighten swivel nut.
- (5) Disconnect service hose and install valve cap.

CAUTION: THE AIR INFLATION VALVE IS A STANDARD "AN" VALVE WHICH HAS BEEN MODIFIED BY INSTALLATION OF SKYDROL TYPE SEALS. DO NOT REPLACE THE VALVE WITH A VALVE WHICH HAS NOT BEEN MODIFIED FOR SKYDROL.

D. Depressurize Hydraulic Reservoir

- (1) Depress air bleed valve button, hold until all pressure has bled off and pressure gage reads zero.

4. Drain Hydraulic System Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.
- (2) Clean container of approximately 20 US gallons (16.65 Imperial gallons or 75.7 liters) capacity.

B. Drain Reservoir

- (1) Depressurize hydraulic system and reservoir (see paragraphs 2 and 3).
- (2) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (3) Remove drain unit and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

5. Drain Auxiliary Hydraulic Pump Alternate Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.
- (2) Clean container of approximately 3 US gallons (2.5 Imperial gallons or 11.5 liters) capacity.

B. Drain Reservoir

- (1) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (2) Remove drain unit and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

6. Hydraulic System Pressure Decay Rates

A. Decay Rate Test

- (1) By observing the time it takes for the hydraulic system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi, it is possible, in most cases, to detect units that are leaking excessively. This procedure is not infallible because the sum of the maximum allowable leakage rates determines the minimum time permissible for pressure decay. The hydraulic system with average leakage will maintain pressure for longer periods than indicated and may do so even with one unit leaking excessively.
- (2) The main hydraulic system should be tested for pressure decay time under the following conditions:
  - (a) System selector valve in general system/bypass or general system (normal).
  - (b) Nosewheel straight ahead plus or minus 30 degrees and steering valve in neutral position.
  - (c) Manual main gear door valve open.
  - (d) Landing gear down and locked.
  - (e) Wing flaps up.
  - (f) Accumulators properly charged.
  - (g) Aileron shutoff valve off.
  - (h) Rudder shutoff valve off.
  - (i) Thrust reversers stowed.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Pressurize main hydraulic system to 2900 ( $\pm 100$ ) psi with auxiliary pump or hydraulic test stand. Then shut off hydraulic power source and note time interval required for system pressure to decrease 1000 psi. This should be more than 34 seconds on a new airplane or more than 23 seconds on an airplane in service before overhaul. If pressure decay time is less, the main hydraulic system should be inspected for a malfunctioning unit.
- (4) If pressure decay test indicates that a unit in the main hydraulic system was leaking excessively, that unit may be in the nose or main gear subsystem, the main gear door subsystem, the flap subsystem, the slot subsystem, the selector valve, or the compressor subsystem. By placing the subsystem control valves in opposite positions one at a time and repeating the pressure decay test, it is possible that the faulty unit may be located.
- (5) Rudder power hydraulic system may be tested for pressure decay time by using procedures outlined in steps (2) and (3), except that the rudder shutoff valve should be on. Decay time should be more than 10 seconds on a new airplane or more than 8 seconds on an airplane in service before overhaul. If less, the rudder power system should be inspected for a malfunctioning unit.
- (6) Supplementary information may be obtained for the rudder power hydraulic system by using the auxiliary rudder system pump and accumulator air gage to test the time for rudder pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi. With the rudder hydraulic power shutoff valve off, the time should be more than 2 minutes. With the rudder hydraulic power shutoff valve on, the time should be 12 seconds on a new airplane and 10 seconds on an airplane in service before overhaul.
- (7) Aileron hydraulic power system may be tested for pressure decay by using procedures outlined in steps (2) and (3), except that the aileron hydraulic power shutoff valve should be on. The decay time should be more than 6-1/2 seconds on a new airplane or more than 4-1/2 seconds on an airplane in service before overhaul. If less, the aileron power system should be inspected for a malfunctioning unit.
- (8) Brake system and the nose gear steering system are isolated from the main hydraulic system by check valves and may be tested separately. Using the brake accumulator gages, the pressure decay time for the brake system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 10 hours with the parking brake off, and 2 hours with the parking brake on. With the brake accumulators fully charged deplete the general system pressure. Wait 3 to 5 minutes and then set the parking brake and hold the parking brake pressure for 15 minutes. The drop in pressure at the brake accumulators should not exceed 125 psi during this time.
- (9) Release the parking brakes, and build up brake accumulator pressure to 2900 ( $\pm 100$ ) psi. With hydraulic power off and brakes off, check brake accumulator pressure. Drop in pressure at the accumulators should not exceed 100 psi in 30 minutes. Fast decay time for the brake system, with the parking brake off, indicates either a faulty

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

brake valve or a faulty check valve in the right manifold. A fast decay time with the parking brake on indicates a faulty antiskid valve or a faulty brake valve.

- (10) Using the gages on the nose pressure accumulators, the time for the nose gear steering system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 19 minutes. If less, one of the pressure check valves is faulty, or the nose gear steering control valve is faulty or out of neutral.

**CAUTION:** ALL LANDING GEAR GROUND LOCKPINS MUST BE INSTALLED BEFORE CONDUCTING THE FOLLOWING TEST.

- (11) Under conditions outlined in step (2), except with the landing gear control valve in the up position, the time for pressure decay should be unchanged. If time limits change more than 5 seconds as determined in paragraph (3), a faulty unit is in the gear subsystem.
- (12) Under conditions outlined in step (2), except with the main gear door manual control valve in the closed position, the decay time should be more than 24 seconds on a new airplane and 18 seconds on an airplane in service before overhaul. If less, the faulty unit is in the main gear door subsystem.
- (13) Under conditions outlined in step (2), except with the flap control valve in the down position, the decay time should be more than 24 seconds on a new airplane and 17 seconds on an airplane in service before overhaul. If less, the faulty unit is in the flap subsystem..
- (14) Under conditions outlined in step (2), time limit for pressure decay should remain unchanged as determined in paragraph (3) with the slot valve in either position, or the selector valve in either general system/bypass or general system (normal). If the time changes with a change of valve position, the faulty unit is in that subsystem.
- (15) The thrust reverser system is isolated from the main system by an electrically operated shutoff valve which is open only during thrust reverser actuation. Therefore, main system decay is not affected by the thrust reverser system except during reverser actuation or at the thrust reverser extended position. Additional information may be obtained for the thrust reverser system by using the auxiliary reverser system pump and reverser system pressure gage or accumulator gage to test the time for reverser pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi. With the reversers in the stowed position, the decay time should be greater than 3 minutes on a new aircraft or greater than 1-1/2 minutes on an aircraft in service before overhaul. If times are less, the reverser system should be inspected for a malfunction.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - MAINTENANCE PRACTICES

1. General

A. Skydrol Safety Precautions

- (1) Before performing any operation on the hydraulic system, personnel should read and thoroughly understand the following precautions to be observed when working with Skydrol hydraulic fluid.

WARNING: OBSERVE THE FOLLOWING SAFETY PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. LONG EXPOSURE TO SKYDROL CAN CAUSE SKIN DEHYDRATION AND CHAPPING.

- (2) Wash hands thoroughly with soap and water before starting work.
- (3) Apply barrier cream to hands, wrists, and forearms. Rub cream under finger nails and into creases of skin.
- (4) Wear goggles when pressure testing components or systems, and whenever there is any possibility of Skydrol splashing into eyes.
- (5) If Skydrol splashes into eyes, treat eyes immediately by irrigating thoroughly with clear cold water, and report the incident.
- (6) Wash hands, wrists, and forearms with soap and hot water whenever they have come in contact with Skydrol.
- (7) If clothing becomes soaked with Skydrol; remove clothing as soon as possible, thoroughly wash skin, and put on clean clothing.

B. Technical Precautions

- (1) Before any maintenance is performed on the hydraulic system, personnel should read and thoroughly understand the following precautions. Careful adherence to these instructions will aid in maintaining a functional and trouble-free system.

CAUTION: OBSERVE THE FOLLOWING TECHNICAL PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. SKYDROL WILL ATTACK A WIDE RANGE OF MATERIALS INCLUDING RUBBER, COPPER, VARIOUS PLASTICS, AND PAINTS.

- (2) Ensure that Skydrol does not come into contact with any part of aircraft outside of the hydraulic system. Keep spillage to an absolute minimum. Clean up spilled hydraulic fluid immediately to prevent entry into adjacent areas of the airplane precluding future false hydraulic leak reports. If spillage occurs, wipe up the fluid with a dry cloth and wash contaminated area with soap and hot water.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) When lines are disconnected and/or components are removed, provide suitable protection to prevent foreign material from entering the lines or components by use of caps, covers, clean lint-free rags, etc.
- (4) When electrical connectors are disconnected, install caps or other suitable protectors to prevent entry of hydraulic fluid, moisture, and foreign objects.
- (5) Always check position and angle of all fittings removed from components to ensure placement and alignment when installing replacement components.
- (6) When washing metal parts before assembly, use only approved solvent, and ensure that all traces of the solvent are removed before assembly.
- (7) Use only clean Skydrol for flushing or testing hydraulic components.
- (8) Use only clean Skydrol when filling reservoirs, sumps, filter bowls, pumps, etc., before installation of components.
- (9) Do not unpack Skydrol O-rings and seals until required. Ensure that only approved rings and seals are used.
- (10) When assembling O-rings and seals, lubricate with Skydrol Assembly Lubricant, MCS 352, Monsanto Chemical Company, or clean Skydrol hydraulic fluid.
- (11) Take care to prevent contamination of Skydrol with other materials (oils, water, dirt, etc.).
- (12) If a system becomes contaminated with any petroleum-based oil or solvent, drain the system and flush with clean Skydrol.

C. Landing Gear Precautions

- (1) The landing gear control lever should be in the down position and the landing gear ground lockpins should be installed in the main and nose gears at all times during ground maintenance, except as noted in maintenance procedural steps.
- (2) The main gear wheels should be chocked at all times during ground maintenance, except as noted in maintenance procedural steps.
- (3) The hydraulic system selector control lever should be in the general system (normal) position at all times during ground maintenance, except as noted in maintenance procedural steps.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) The main gear bogie beams should be locked in the trail position at all times, except as noted in maintenance procedural steps.

WARNING: WHEN THE AIRPLANE IS ON WING AND FUSELAGE JACKS, THE MAIN GEAR WHEELS ARE CLEAR OF THE GROUND, AND THE HYDRAULIC POWER SYSTEM IS PRESSURIZED, THE AFT BOGIE AND WHEELS WILL SWING OUT-BOARD VERY RAPIDLY IN THE DIRECTION OF NOSEWHEEL TURN IF THE NOSEWHEELS ARE TURNED MORE THAN 40 DEGREES. BOGIE AND MAIN GEAR AFT WHEELS WILL RETURN TO TRAIL POSITION JUST AS RAPIDLY WHEN THE NOSEWHEELS ARE RETURNED TO NEUTRAL POSITION. THIS COULD CAUSE SERIOUS INJURY TO PERSONNEL WORKING NEAR THE WHEELS.

D. Hydraulic Power System O-Rings

- (1) O-rings used in the installation of hydraulic power system components are shown in Figure 201. O-rings required for the landing gear, power control systems, etc., will be found in the applicable chapters.
- (2) O-ring part numbers shown in Figure 201 are interchangeable with Douglas standard (3-XXXXXXX) numbers listed in the Illustrated Parts Catalog and on engineering drawings.

2. Pressurize/Depressurize Hydraulic System

A. Pressurize Hydraulic System with External Hydraulic Source Pressure

- (1) Tools and Equipment Required: A hydraulic test stand equipped with a variable-displacement hydraulic pump capable of delivering 20 gpm at 3000 psi, using Skydrol hydraulic fluid. The maximum permissible operating temperature should not exceed 180°F (82.2°C).
- (2) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (3) Make certain that wing flap control handle agrees with wing flap position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Open four engine ejector and thrust brake indicator and ejector control circuit breakers located on fuel management and engine dc bus section of circuit breaker panel (airplanes 801-811).

WARNING: INADVERTENT OPERATION OF THE ENGINE EJECTORS COULD CAUSE SERIOUS INJURY TO PERSONNEL WORKING IN THE ENGINE AREAS (AIRPLANES 801-811).


- (6) Remove dust caps from airplane ground service connections and connect test stand pressure and supply hoses.

Jan 15/68

Printed in U.S.A.


29-00  
CODE 8  
Page 203

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

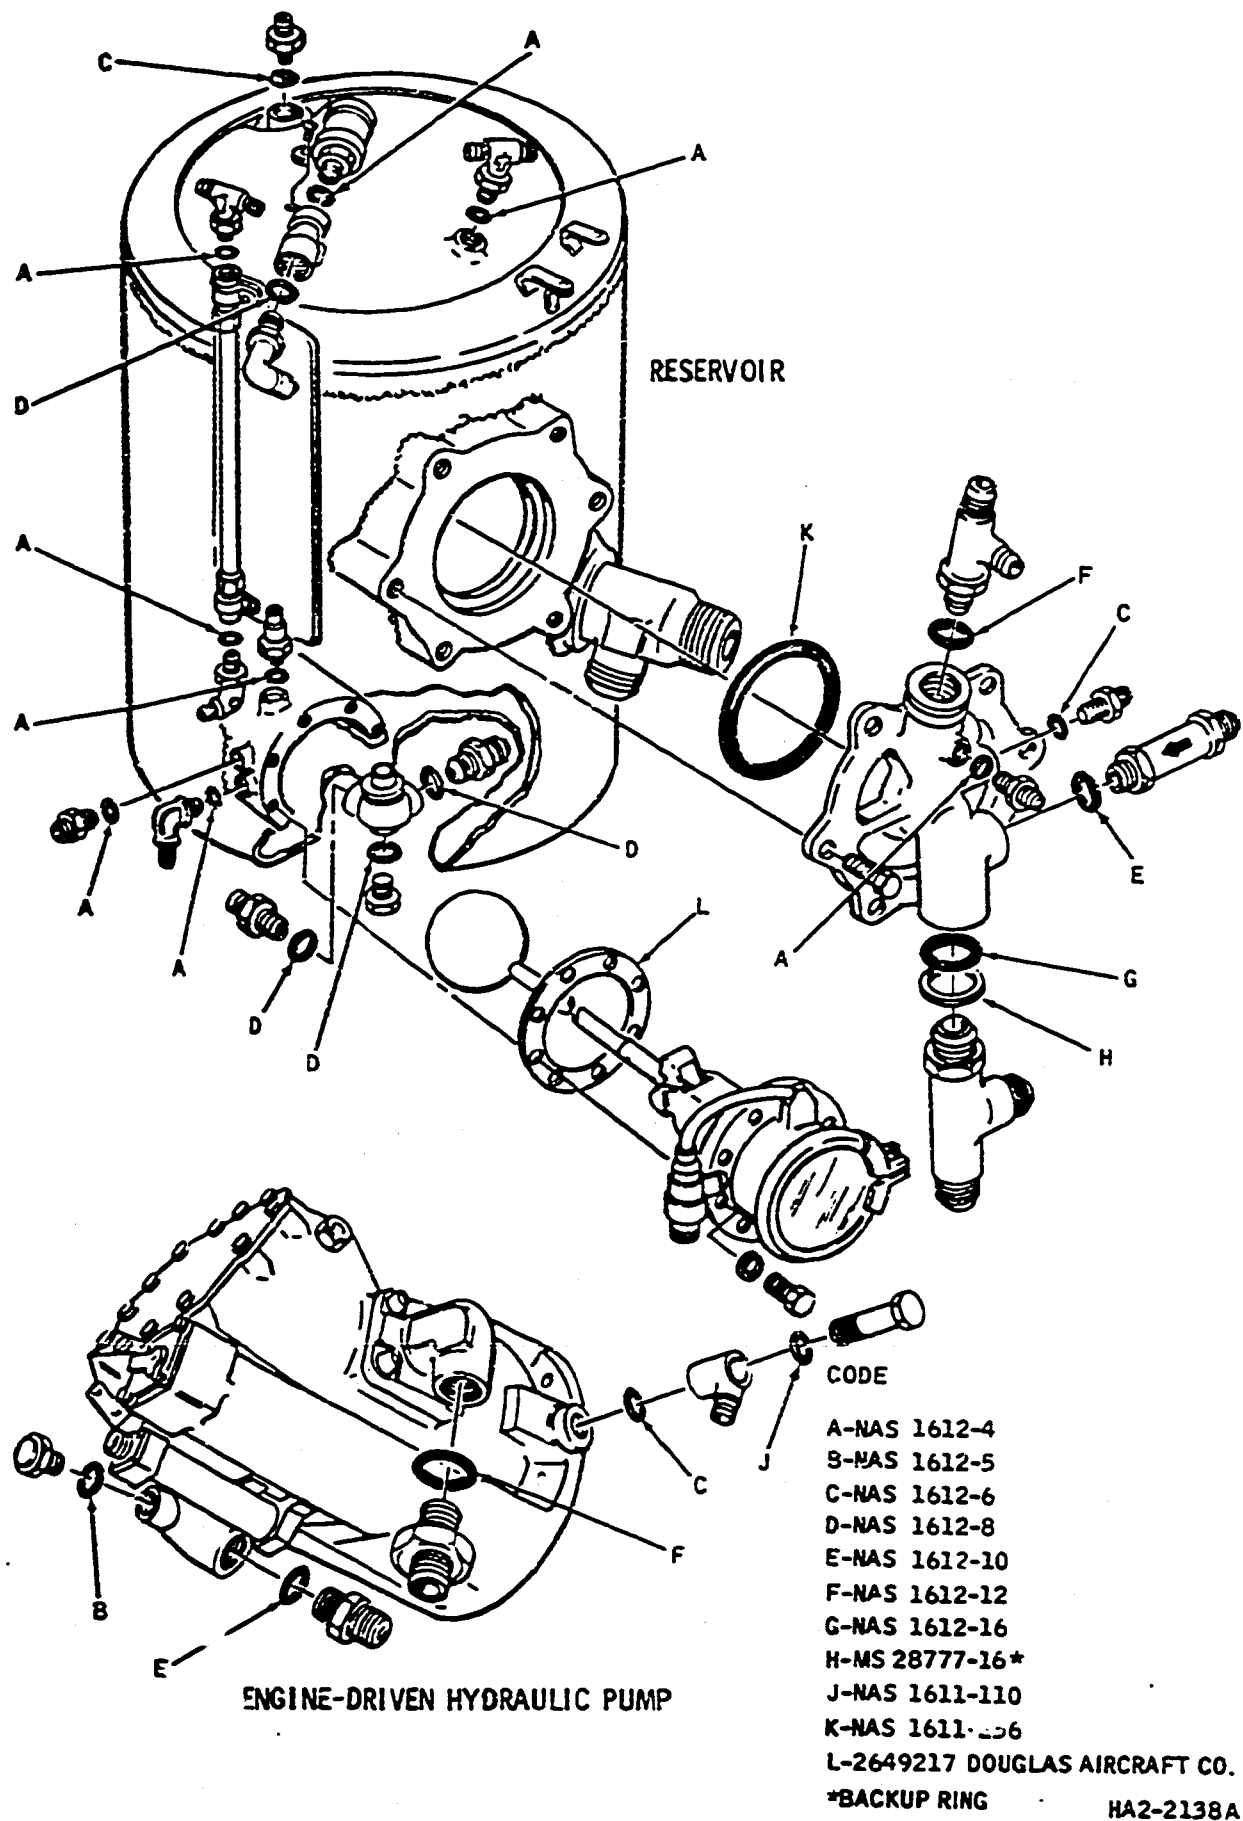


Hydraulic Power System Components -- O-Rings  
 (Airplanes 860-863)  
 Figure 201 (Sheet 1)


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

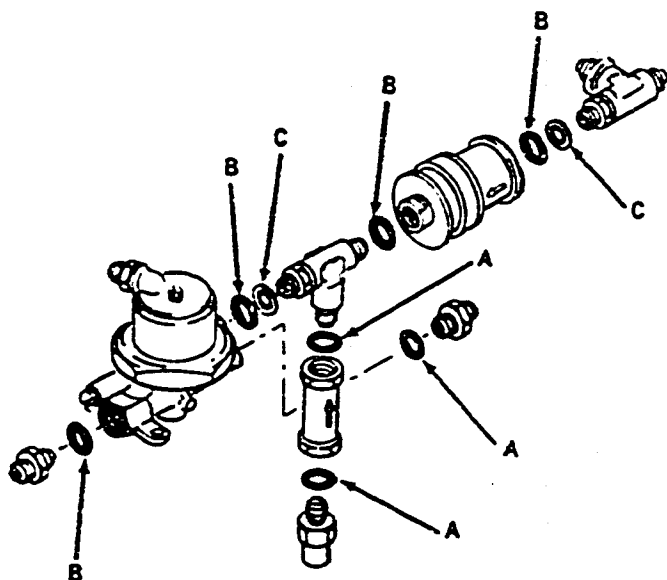


REGULATOR - ASPIRATOR  
 AND AIR FILTERS

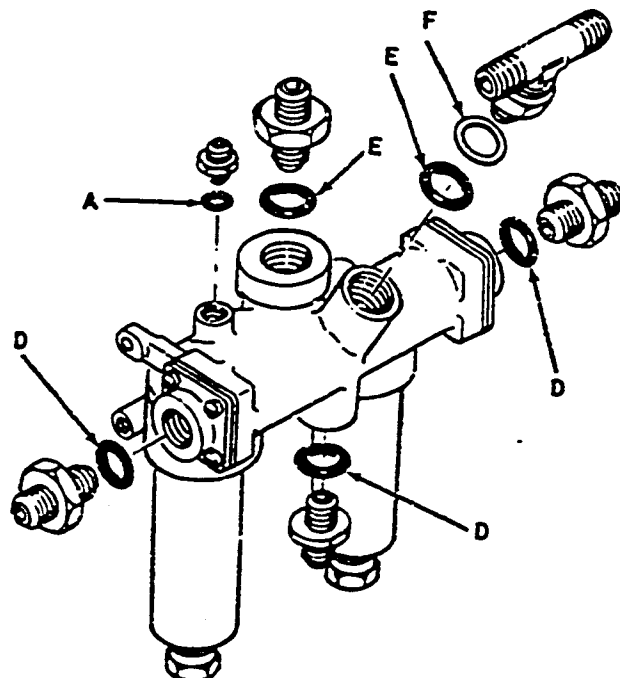

DUAL-FILTER &  
 RELIEF VALVE

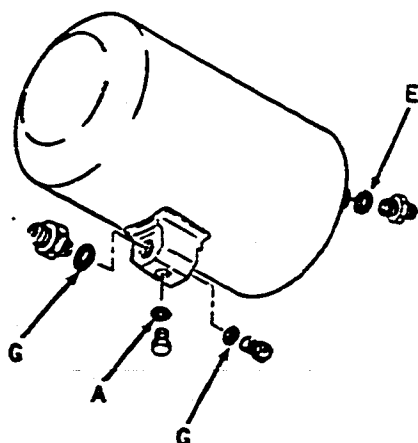

HYDRAULIC RESERVOIR  
 AIR CHAMBER

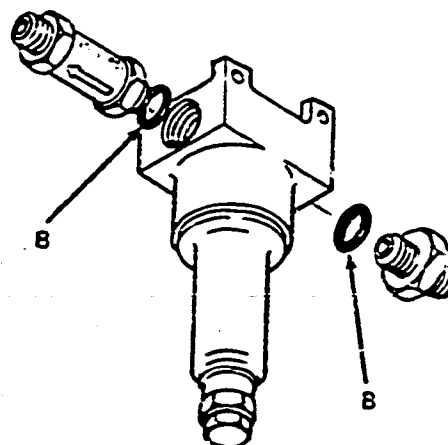

HYDRAULIC  
 PUMPCASE DRAIN  
 FILTER

CODE:

- A - NAS1612-4
- B - NAS1612-6
- C - MS28777-6\*
- D - NAS1612-10
- E - NAS1612-12
- F - MS28777-12\*
- G - NAS1612-16
- \* - BACKUP RING

Hydraulic Power System Components -- O-Rings  
 (Airplanes 860-863)  
 Figure 201 (Sheet 2)


Jan 15/68

Printed in U.S.A.

HA2-1101A


29-00  
 CODE 8  
 Page 205

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

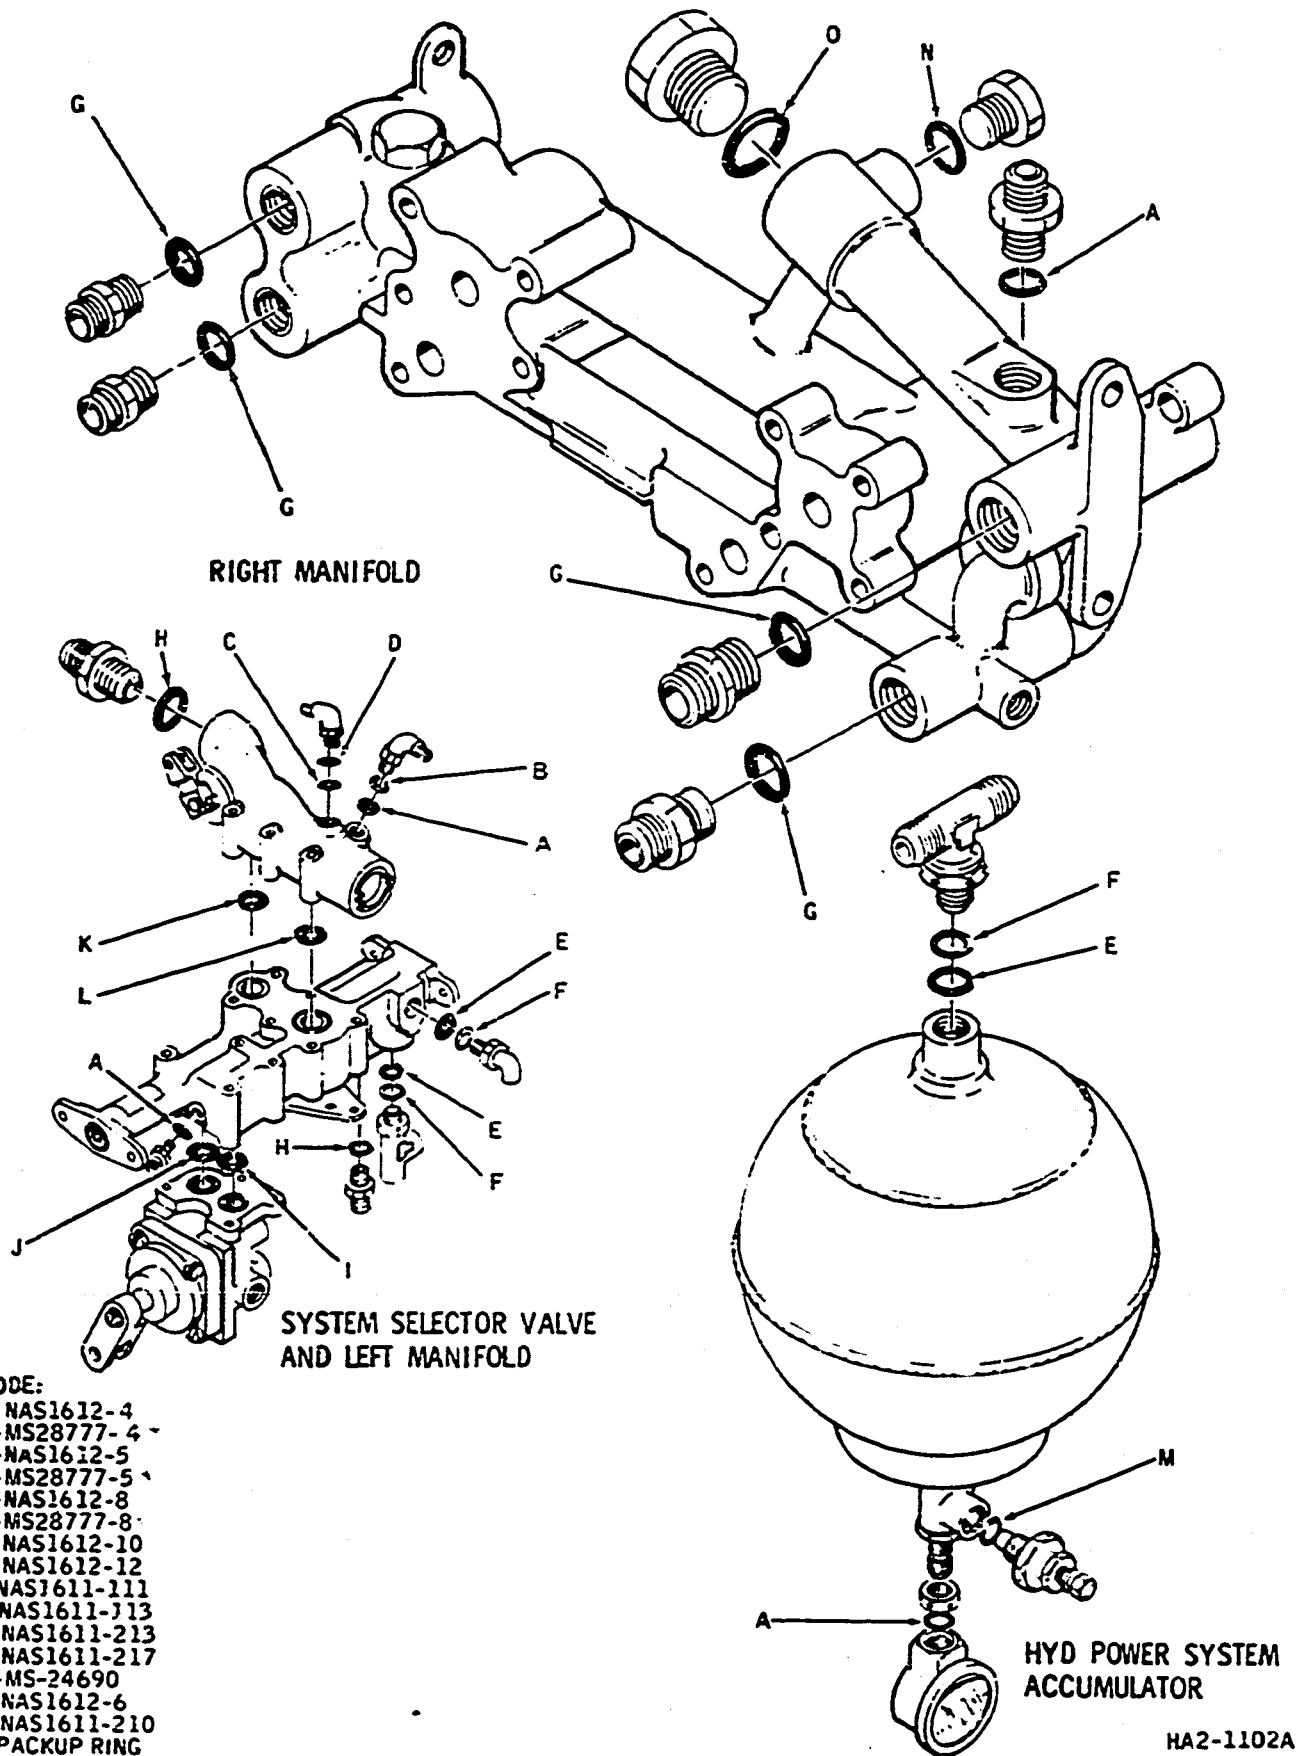


Hydraulic Power System Components -- O-Rings  
 (Airplanes 860-863)  
 Figure 201 (Sheet 3)


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

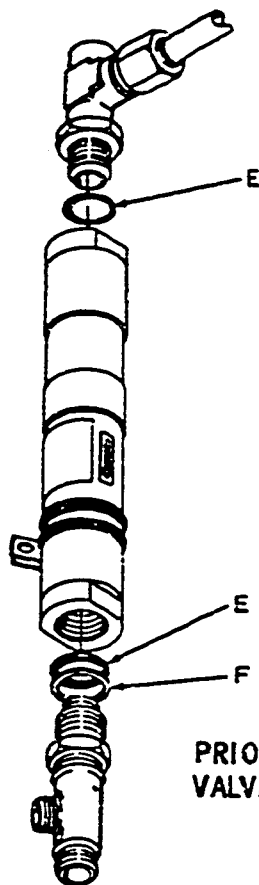


PRIORITY  
VALVE

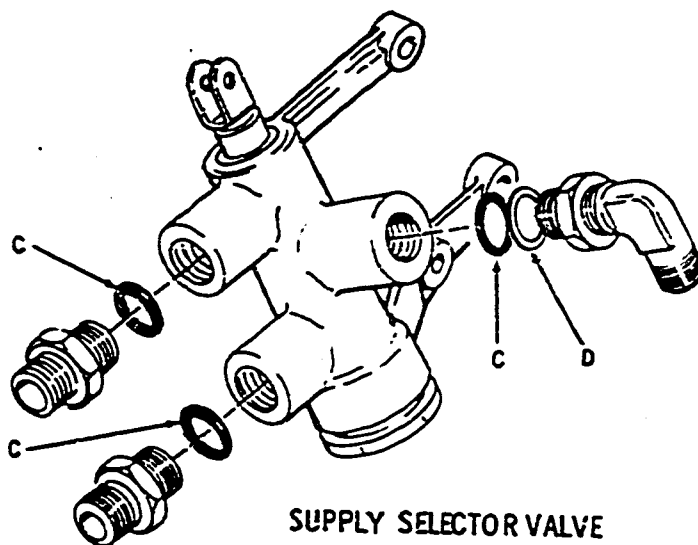


SUPPLY SELECTOR VALVE

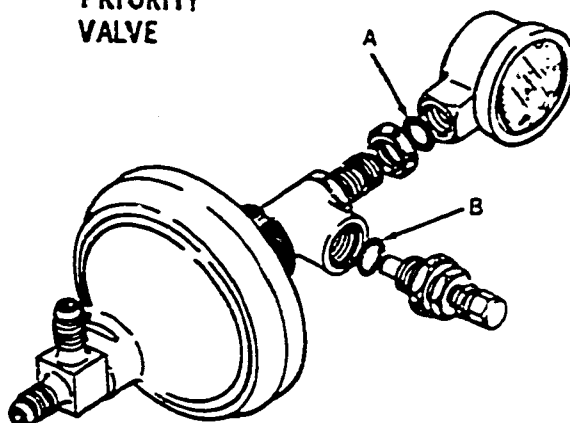

SURGE DAMPER ACCUMULATOR

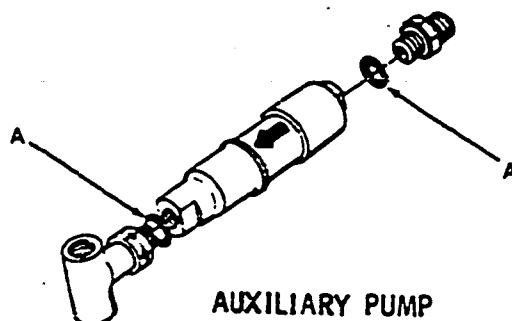

AUXILIARY PUMP  
RELIEF VALVE

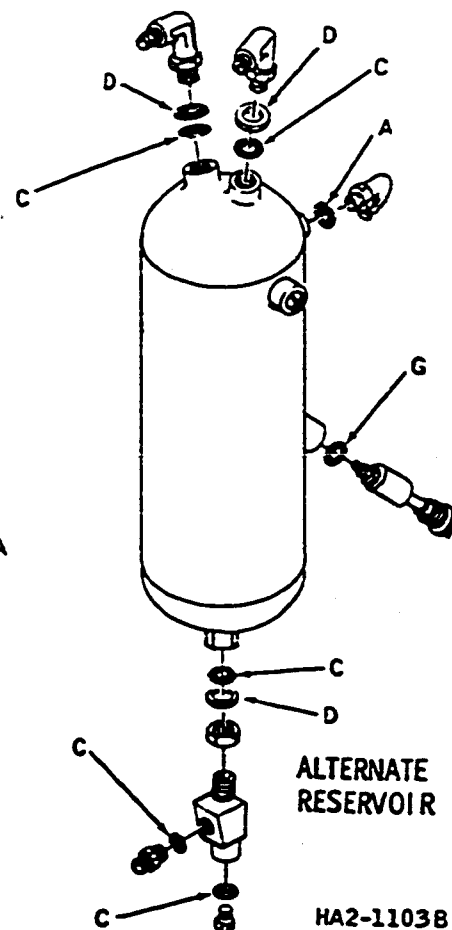

ALTERNATE  
RESERVOIR

CODE  
 A-NAS1612-4  
 B-MS2469-4  
 C-NAS1612-8  
 D-MS28777-8\*  
 E-NAS1612-12  
 F-MS28777-12\*  
 G-NAS1612-20

\* BACKUP RING

HA2-11038


Hydraulic Power System Components -- O-Rings  
 (Airplanes 860-863)  
 Figure 201 (Sheet 4)

Jan 15/68

Printed in U.S.A.

29-00  
 CODE 8  
 Page 207

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

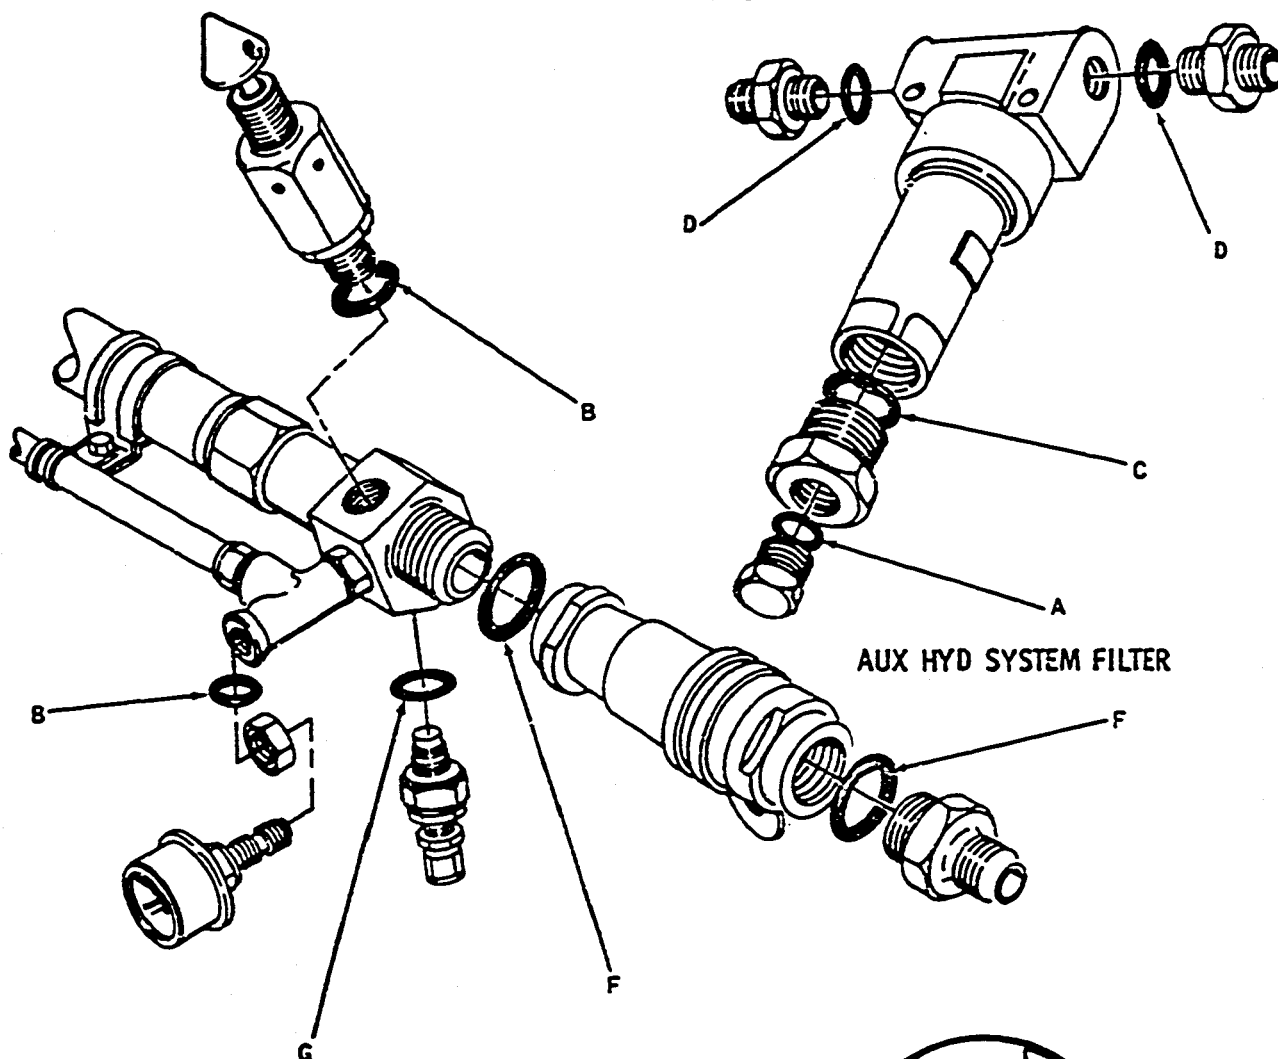


RESERVOIR AIR BLEED VALVE,  
 FILTER VALVE, PRESSURE GAGE  
 AND RELIEF VALVE

CODE

A-NAS1612-2  
 B-NAS1612-4  
 C-NAS1612-6  
 D-NAS1612-8  
 E-NAS1612-10  
 F-NAS1612-12  
 G-MS24690  
 H-MS28777-10 \*  
 J-MS28777-4 \*

\* BACKUP RING

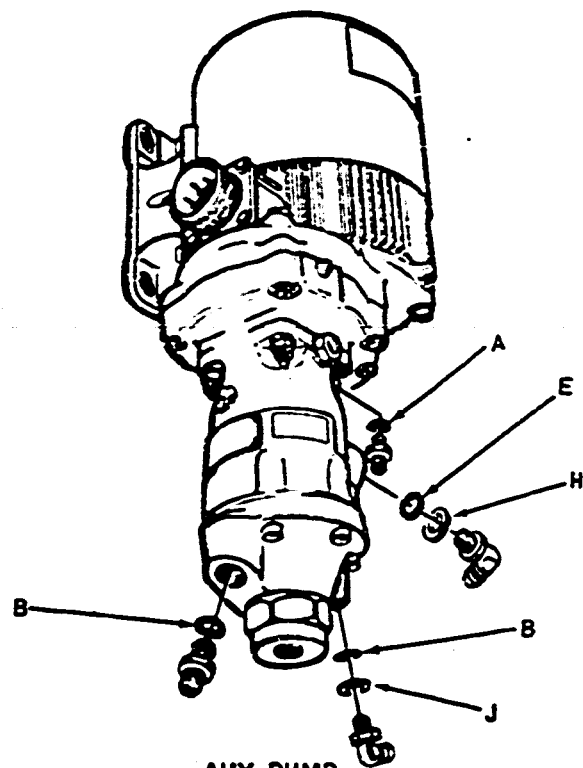

AUX PUMP

HA2-1104 A

Hydraulic Power System Components -- O-Rings  
 (Airplanes 860-863)  
 Figure 201 (Sheet 5)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (7) Energize test stand hydraulic pump; pressurize hydraulic system to 3000 psi.

WARNING: BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT ALL FLIGHT CONTROL SURFACES AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

B. Depressurize and Disconnect

- (1) Check hydraulic fluid level of hydraulic reservoir; fill if necessary as described on instruction placard on reservoir.
- (2) Deenergize test stand hydraulic pump.
- (3) Depressurize hydraulic system by operating the brakes and manually moving the longitudinal trim handle until horizontal stabilizer movement stops.
- (4) Disconnect and cap test stand pressure and supply hoses from airplane ground service connections; install duct caps on connections and close access door.

C. Pressurize Hydraulic System With Auxiliary Hydraulic Pump Pressure

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap control handle agrees with wing flap position.
- (3) Place hydraulic system selector control lever in general system/bypass position.
- (4) Open four engine ejector and thrust brake indicator and ejector control circuit breakers located on fuel management and engine dc bus section of circuit breaker panel (airplanes 801-811).

WARNING: INADVERTENT OPERATION OF THE ENGINE EJECTORS COULD CAUSE SERIOUS INJURY TO PERSONNEL WORKING IN THE ENGINE AREAS (AIRPLANES 801-811).

- (5) Check that airplane electrical buses are energized (see Chapter 24).



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Start auxiliary hydraulic pump by placing auxiliary hydraulic pump control switch momentarily in start position. Pressure indicated in the flight compartment should be 2600 to 3000 psi.

WARNING: BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT ALL FLIGHT CONTROL SURFACES AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

CAUTION: DO NOT HOLD THE AUXILIARY HYDRAULIC PUMP CONTROL SWITCH IN THE START (HOLD ONLY IN EMERGENCY) POSITION FOR NORMAL PRESSURIZATION.

D. Depressurize

- (1) Stop auxiliary hydraulic by placing auxiliary hydraulic pump control switch momentarily in stop position.
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.
- (3) Place hydraulic system selector control lever in general system (normal) position.

E. Pressurize Hydraulic System With Engine-Driven Hydraulic Pump Pressure

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap handle agrees with wing flap position.
- (3) Make certain that applicable fire control handle is in normal position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Open four engine ejector and thrust brake indicator and ejector control circuit breakers located on fuel management and engine dc bus section of circuit breaker panel (airplanes 801-811).

WARNING: INADVERTENT OPERATION OF THE ENGINE EJECTORS COULD CAUSE SERIOUS INJURY TO PERSONNEL WORKING IN THE ENGINE AREAS (AIRPLANES 801-811).

- (6) Make certain that applicable engine-driven hydraulic pump control switch is in on position.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (7) Start engine No. 2 or No. 3 (see Chapter 71). Hydraulic pressure indicated in the flight compartment should be 2800 to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT ALL FLIGHT CONTROL SURFACES AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

F. Depressurize

- (1) Shut down engine (see Chapter 71).
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.

3. Pressurize/Depressurize Hydraulic Reservoir

A. General

- (1) The air inflation valve, air bleed valve, and air pressure gage for manually pressurizing and depressurizing the hydraulic reservoir and air chamber are located on the aft side of the wing rear spar, at the forward end of the left main gear wheel well. The valves and gage are mounted on a cross fitting just inboard of the reservoir air chamber. Access is through the left main gear inboard door.

B. Tools and Equipment Required

- (1) Pressure cylinder (clean dry compressed air or nitrogen).

C. Pressurize Hydraulic Reservoir

**NOTE:** Normal air pressure in the reservoir and air chamber should be between 35 and 40 psi on airplanes 801-815 and 30 and 35 psi on airplanes 816-822, 860-863.

**NOTE:** There are three methods of pressurizing the hydraulic reservoir:

- (1) Run an inboard engine.
- (2) Connect and operate a hydraulic test stand.
- (3) Direct pressurization of air chamber by introduction of compressed air or nitrogen.

The first two methods are automatic in that the reservoir is pressurized by action of the hydraulic fluid through the regulator-aspirator when the system is pressurized. The third method (direct inflation) will be described in the following steps.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (1) Remove air inflation valve cap and attach pressure cylinder service hose to inflation valve.
- (2) Loosen inflation valve swivel nut three complete turns.

NOTE: The rate of inflation (flow through the valve) is governed by the degree of opening of the swivel valve.

- (3) Pressurize reservoir to 35 to 40 psi reading on air pressure gage on airplanes 801-815 or 30 to 35 psi reading on air pressure gage on airplanes 816-822 and 860-863.
- (4) Tighten swivel nut.
- (5) Disconnect service hose and install valve cap.

CAUTION: THE AIR INFLATION VALVE IS A STANDARD "AN" VALVE WHICH HAS BEEN MODIFIED BY INSTALLATION OF SKYDROL TYPE SEALS. DO NOT REPLACE THE VALVE WITH A VALVE WHICH HAS NOT BEEN MODIFIED FOR SKYDROL.

D. Depressurize Hydraulic Reservoir

- (1) Depress air bleed valve button; hold until all pressure has bled off and pressure gage reads zero.

4. Drain Hydraulic System Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.
- (2) Clean container of approximately 20 US gallons (16.65 Imperial gallons or 75.7 liters) capacity.

B. Drain Reservoir

- (1) Depressurize hydraulic system and reservoir (see paragraphs 2 and 3).
- (2) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (3) Remove drain unit, and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

5. Drain Auxiliary Hydraulic Pump Alternate Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.
- (2) Clean container of approximately 3 US gallons (2.5 Imperial gallons or 11.5 liters) capacity.

B. Drain Reservoir

- (1) On airplanes 801-811, disconnect alternate reservoir outlet line at auxiliary hydraulic pump selector valve and drain alternate reservoir fluid into suitable container.
- (2) On airplanes 812-822, 860-863, remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (3) Remove drain unit and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

6. Hydraulic System Pressure Decay Rates

A. Decay Rate Test

- (1) By observing the time it takes for the hydraulic system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi, it is possible, in most cases, to detect units that are leaking excessively. This procedure is not infallible because the sum of the maximum allowable leakage rates determines the minimum time permissible for pressure decay. The hydraulic system with average leakage will maintain pressure for longer periods than indicated and may do so even with one unit leaking excessively.
- (2) The main hydraulic system should be tested for pressure decay time under the following conditions:
  - (a) System selector valve in general system/bypass or general system (normal).
  - (b) Nosewheel straight ahead plus or minus 30 degrees and steering valve in neutral position.
  - (c) Manual main gear door valve open.
  - (d) Landing gear down and locked.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (e) Wing flaps up.
  - (f) Accumulators properly charged.
  - (g) Aileron shutoff valve off.
  - (h) Rudder shutoff valve off.
- (3) Pressurized main hydraulic system to 2900 ( $\pm 100$ ) psi with auxiliary pump or hydraulic test stand. Then shut off hydraulic power source and note time interval required for system pressure to decrease 1000 psi. This should be more than 34 seconds on a new airplane or more than 23 seconds on an airplane in service before overhaul. If pressure decay time is less, the main hydraulic system should be inspected for a malfunctioning unit.
- (4) If pressure decay test indicates that a unit in the main hydraulic system was leaking excessively, that unit may be in the nose or main gear subsystem, the main gear door subsystem, the flap subsystem, the slot subsystem, the selector valve, or the compressor subsystem. By placing the subsystem control valves in opposite positions one at a time and repeating the pressure decay test, it is possible that the faulty unit may be located.
- (5) Rudder power hydraulic system may be tested for pressure decay time by using procedures outlined in steps (2) and (3), except that the rudder shutoff valve should be on. Decay time should be more than 10 seconds on a new airplane or more than 8 seconds on a airplane in service before overhaul. If less, the rudder power system should be inspected for a malfunctioning unit.
- (6) Supplementary information may be obtained for the rudder power hydraulic system by using the auxiliary rudder system pump and accumulator air gage to test the time for rudder pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi. With the rudder hydraulic power shutoff valve off, the time should be more than 2 minutes. With the rudder hydraulic power shutoff valve on the time should be 12 seconds on a new airplane and 10 seconds on an airplane in service before overhaul.
- (7) Aileron hydraulic power system may be tested for pressure decay by using procedures outlined in steps (2) and (3), except that the aileron hydraulic power shutoff valve should be on. The decay time should be more than 6-1/2 seconds on a new airplane or more than 4-1/2 seconds on an airplane in service before overhaul. If less, the aileron power system should be inspected for a malfunctioning unit.
- (8) Brake system and the nose gear steering system are isolated from the main hydraulic system by check valves and may be tested separately. Using the brake accumulator gages, the pressure decay time for the brake system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

more than 10 hours with the parking brake off, and 2 hours with the parking brake on. With the brake accumulators fully charged deplete the general system pressure. Wait 3 to 5 minutes and then set the parking brake and hold the parking brake pressure for 15 minutes. The drop in pressure at the brake accumulators should not exceed 125 psi during this time.

- (9) Release the parking brakes, and build up brake accumulator pressure to 2900 ( $\pm 100$ ) psi. With hydraulic power off and brakes off, check brake accumulator pressure. Drop in pressure at the accumulators should not exceed 100 psi in 30 minutes. Fast decay time for the brake system with parking brake off, indicates either a faulty brake valve or a faulty check valve in the right manifold. A fast decay time with the parking brake on indicates a faulty antiskid valve or a faulty brake valve.
- (10) Using the gages on the nose pressure accumulators, the time for the nose gear steering system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 19 minutes. If less, one of the pressure check valves is faulty, or the nose gear steering control valve is faulty or out of neutral.

**CAUTION:** ALL LANDING GEAR GROUND LOCKPINS MUST BE INSTALLED BEFORE CONDUCTING THE FOLLOWING TEST.

- (11) Under conditions outlined in step (2), except with the landing gear control valve in the up position, the time for pressure decay should be unchanged. If time limits change more than 5 seconds as determined in paragraph (3), a faulty unit is in the gear subsystem.
- (12) Under conditions outlined in step (2), except with the main gear door manual control valve in the closed position, the decay time should be more than 24 seconds on a new airplane and 18 seconds on an airplane in service before overhaul. If less, the faulty unit is in the main gear door subsystem.
- (13) Under conditions outlined in step (2), except with the flap control valve in the down position, the decay time should be more than 24 seconds on a new airplane and 17 seconds on an airplane in service before overhaul. If less, the faulty unit is in the flap subsystem.
- (14) Under conditions outlined in step (2), time limit for pressure decay should remain unchanged as determined in paragraph (3) with the slot valve in either position, or the selector valve in either general system/bypass or general system (normal). If the time changes with a change of valve position, the faulty unit is in that subsystem.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - MAINTENANCE PRACTICES

1. General

A. Skydrol Safety Precautions

- (1) Before performing any operation on the hydraulic system, personnel should read and thoroughly understand the following precautions to be observed when working with Skydrol hydraulic fluid.

WARNING: OBSERVE THE FOLLOWING SAFETY PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. LONG EXPOSURE TO SKYDROL CAN CAUSE SKIN DEHYDRATION AND CHAPPING.

- (2) Wash hands thoroughly with soap and water before starting work.
- (3) Apply barrier cream to hands, wrists, and forearms. Rub cream under fingernails and into creases of skin.
- (4) Wear goggles when pressure testing components or systems, and whenever there is any possibility of Skydrol splashing into eyes.
- (5) If Skydrol splashes into eyes, treat eyes immediately by irrigating thoroughly with clear cold water, and report the incident.
- (6) Wash hands, wrists, and forearms with soap and hot water whenever they have come in contact with Skydrol.
- (7) If clothing becomes soaked with Skydrol; remove clothing as soon as possible, thoroughly wash skin, and put on clean clothing.

B. Technical Precautions

- (1) Before any maintenance is performed on the hydraulic system, personnel should read and thoroughly understand the following precautions. Careful adherence to these instructions will aid in maintaining a functional and trouble-free system.

CAUTION: OBSERVE THE FOLLOWING TECHNICAL PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. SKYDROL WILL ATTACK A WIDE RANGE OF MATERIALS INCLUDING RUBBER, COPPER, VARIOUS PLASTICS, AND PAINTS.

- (2) Ensure that Skydrol does not come into contact with any part of aircraft outside of the hydraulic system. Keep spillage to an absolute minimum. Clean up spilled hydraulic fluid immediately to prevent entry into adjacent areas of the airplane precluding future false hydraulic leak reports. If spillage occurs, wipe up the fluid with a dry cloth and wash contaminated area with soap and hot water.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) When lines are disconnected and/or components are removed, provide suitable protection to prevent foreign material from entering the lines or components by use of caps, covers, clean lint-free rags, etc.
- (4) When electrical connectors are disconnected, install caps or other suitable protectors to prevent entry of hydraulic fluid, moisture, and foreign objects.
- (5) Always check position and angle of all fittings removed from components to ensure placement and alignment when installing replacement components.
- (6) When washing metal parts before assembly, use only approved solvent, and ensure that all traces of the solvent are removed before assembly.
- (7) Use only clean Skydrol for flushing or testing hydraulic components.
- (8) Use only clean Skydrol when filling reservoirs, sumps, filter bowls, pumps, etc., before installation of components.
- (9) Do not unpack Skydrol O-rings and seals until required. Ensure that only approved rings and seals are used.
- (10) When assembling O-rings and seals, lubricate with Skydrol Assembly Lubricant, MCS 352, Monsanto Chemical Company, or clean Skydrol hydraulic fluid.
- (11) Take care to prevent contamination of Skydrol with other materials (oils, water, dirt, etc.).
- (12) If a system becomes contaminated with any petroleum-based oil or solvent, drain the system and flush with clean Skydrol.

C. Landing Gear Precautions

- (1) The landing gear control lever should be in the down position and the landing gear ground lockpins should be installed in the main and nose gears at all times during ground maintenance, except as noted in maintenance procedural steps.
- (2) The main gear wheels should be checked at all times during ground maintenance, except as noted in maintenance procedural steps.
- (3) The hydraulic system selector control lever should be in the general system (normal) position at all times during ground maintenance, except as noted in maintenance procedural steps.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) The main gear bogie beams should be locked in the trail position at all times, except as noted in maintenance procedural steps.

WARNING: WHEN THE AIRPLANE IS ON WING AND FUSELAGE JACKS, THE MAIN GEAR WHEELS ARE CLEAR OF THE GROUND, AND THE HYDRAULIC POWER SYSTEM IS PRESSURIZED, THE AFT BOGIE AND WHEELS WILL SWING OUTBOARD VERY RAPIDLY IN THE DIRECTION OF NOSEWHEEL TURN IF THE NOSEWHEELS ARE TURNED MORE THAN 40 DEGREES. BOGIE AND MAIN GEAR AFT WHEELS WILL RETURN TO TRAIL POSITION JUST AS RAPIDLY WHEN THE NOSEWHEELS ARE RETURNED TO NEUTRAL POSITION. THIS COULD CAUSE SERIOUS INJURY TO PERSONNEL WORKING NEAR THE WHEELS.

D. Hydraulic Power System O-Rings


- (1) O-rings used in the installation of hydraulic power system components are shown in Figure 201. O-rings required for the landing gear, power control systems, etc., will be found in the applicable chapters.
- (2) O-ring part numbers shown in Figure 201 are interchangeable with Douglas standard (S-XXXXXXX) numbers listed in the Illustrated Parts Catalog and on engineering drawings.

2. Pressurize/Depressurize Hydraulic System

A. Pressurize Hydraulic System with External Hydraulic Source Pressure

- (1) Tools and Equipment Required: A hydraulic test stand equipped with a variable-displacement hydraulic pump capable of delivering 20 gpm at 3000 psi, using Skydrol hydraulic fluid. The maximum permissible operating temperature should not exceed 180°F (82.2°C).
- (2) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (3) Make certain that wing flap control handle agrees with wing flap position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Remove dust caps from airplane ground service connections and connect test stand pressure and supply hoses.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

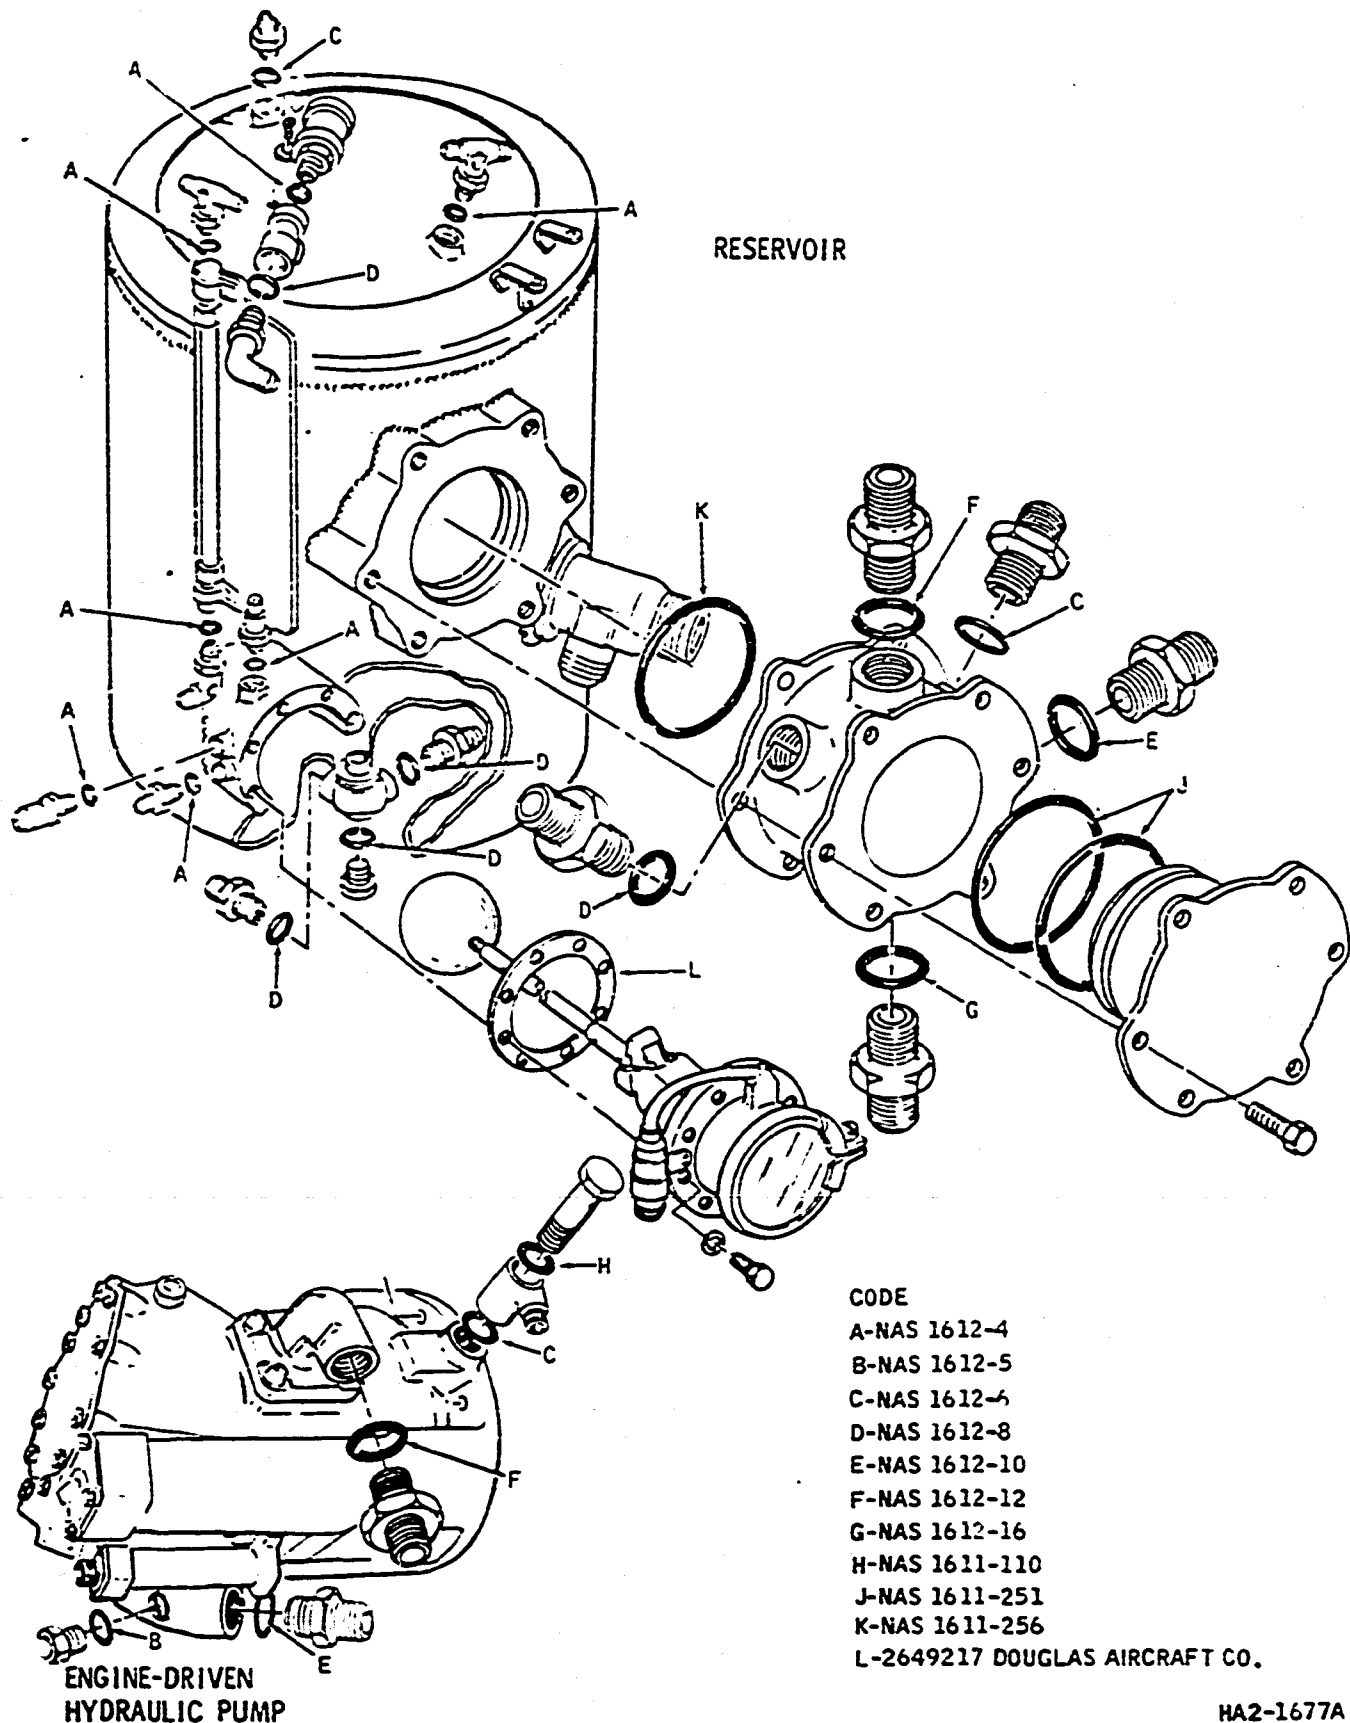


HA2-1677A

Hydraulic Power System Components -- O-Rings  
 Figure 201 (Sheet 1)


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

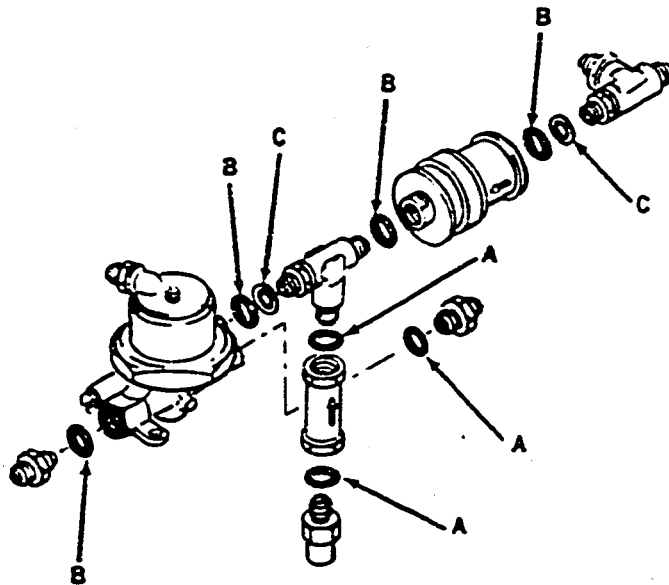


REGULATOR - ASPIRATOR  
 AND AIR FILTERS

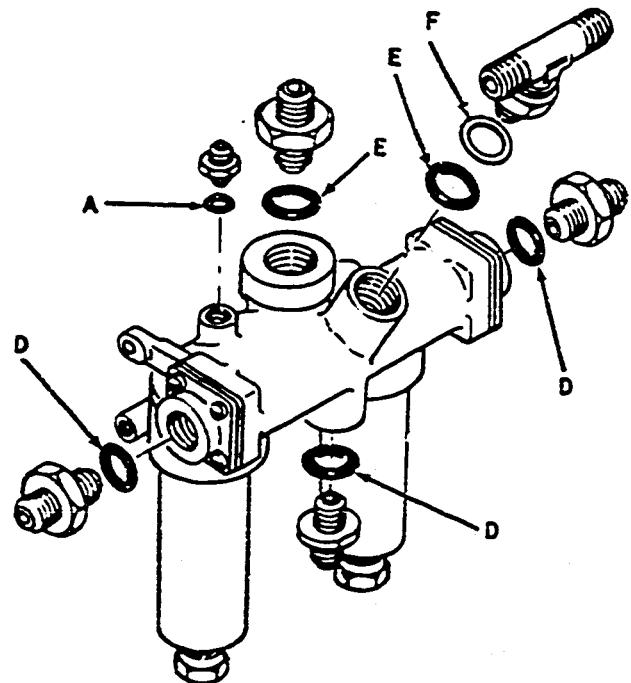

DUAL-FILTER &  
 RELIEF VALVE

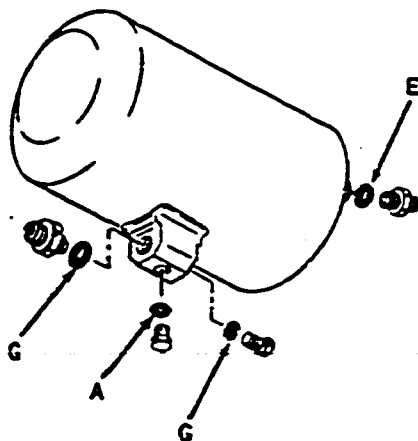

HYDRAULIC RESERVOIR  
 AIR CHAMBER

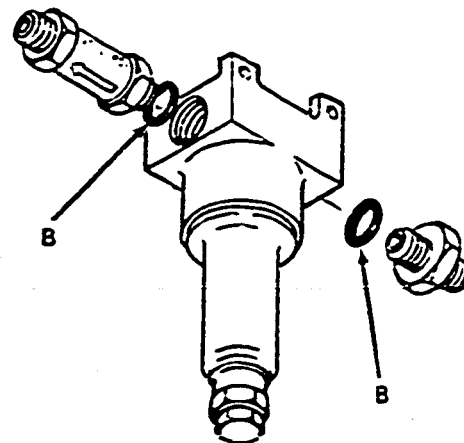

HYDRAULIC  
 PUMPCASE DRAIN  
 FILTER

CODE:

- A - NAS1612-4
- B - NAS1612-6
- C - MS28777-6\*
- D - NAS1612-10
- E - NAS1612-12
- F - MS28777-12\*
- G - NAS1612-16
- \* - BACKUP RING

Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 2)


HA2-1101A

Oct 15/68

Printed in U.S.A.


29-00  
 CODE 9  
 Page 205

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

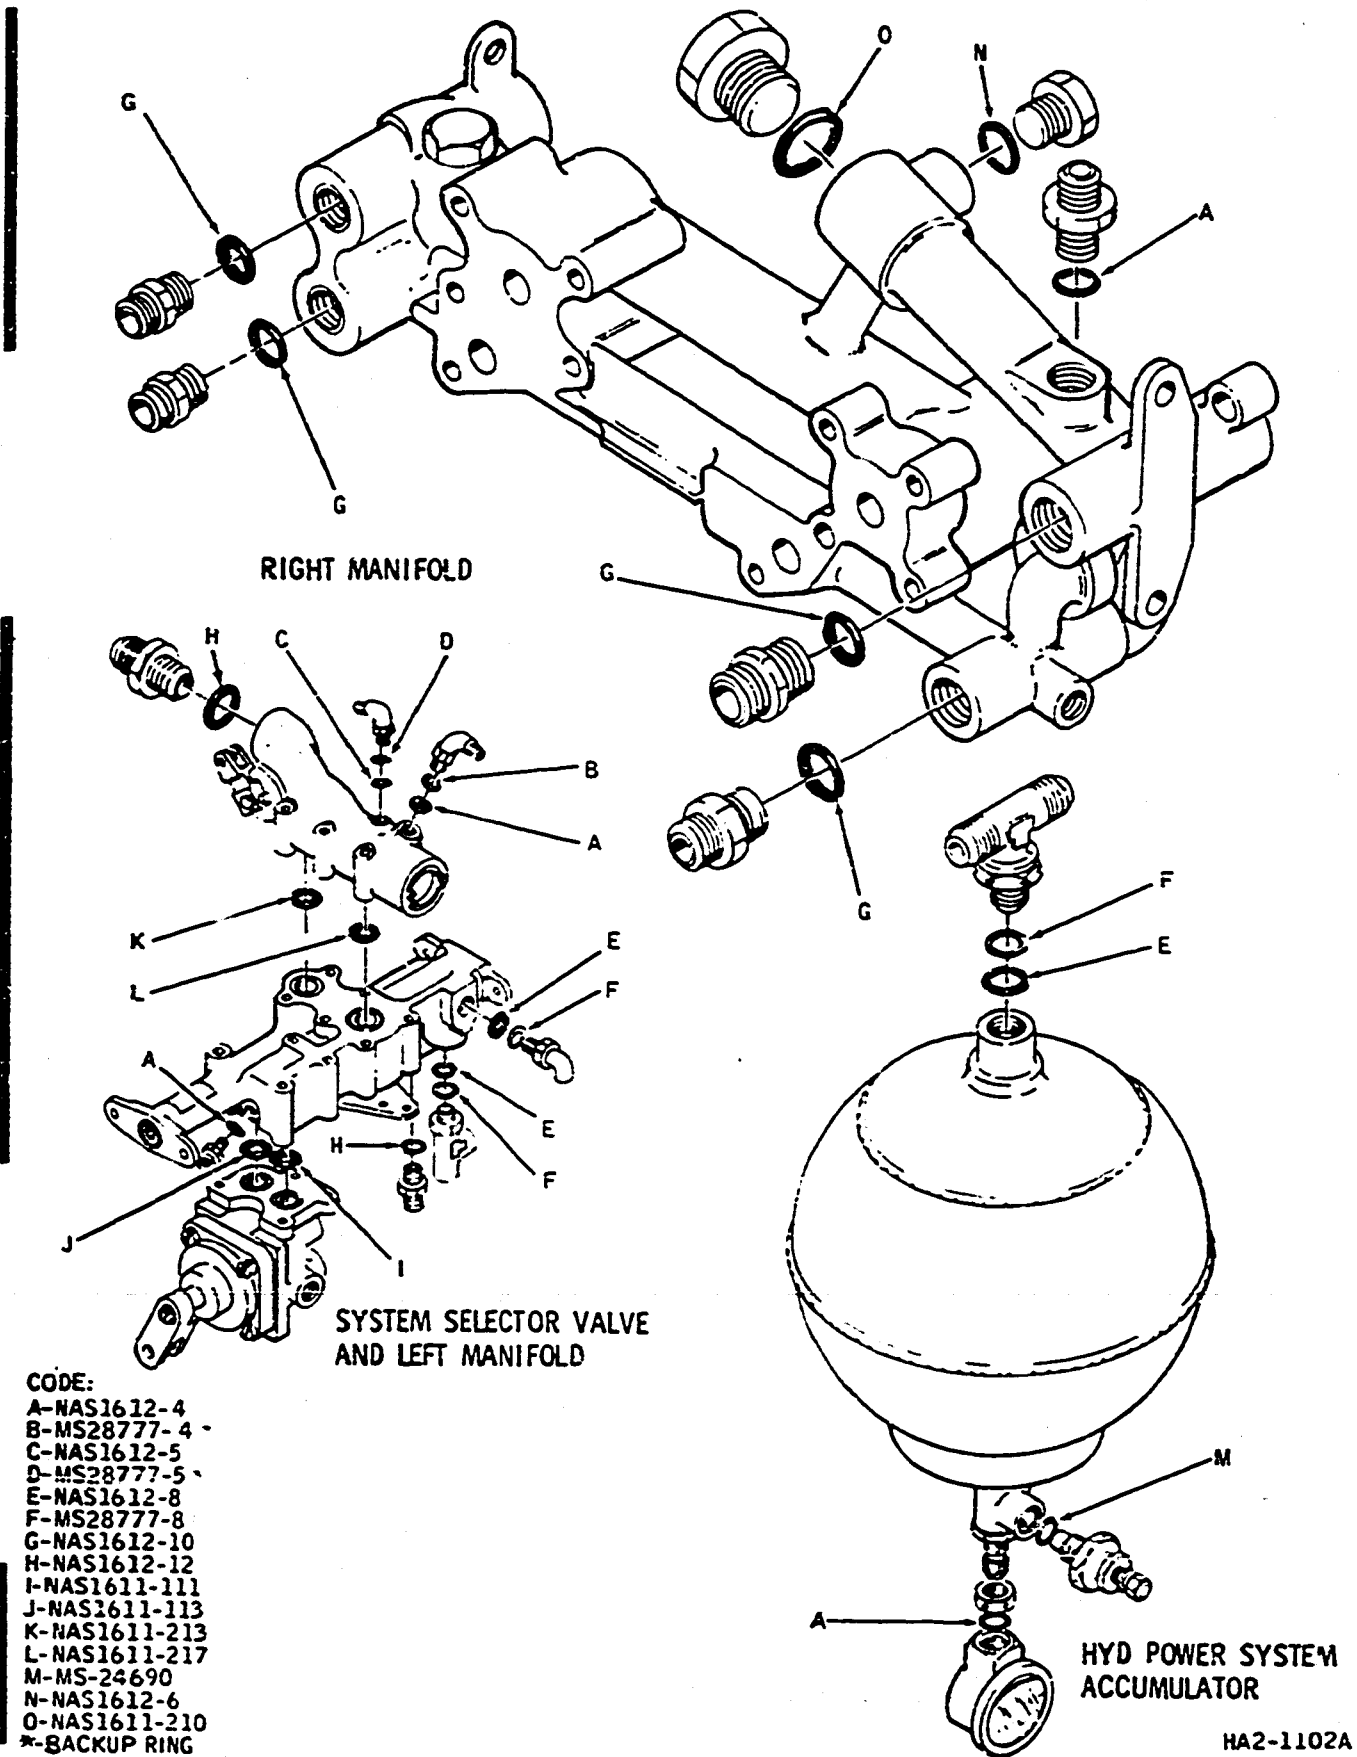


Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 3)


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

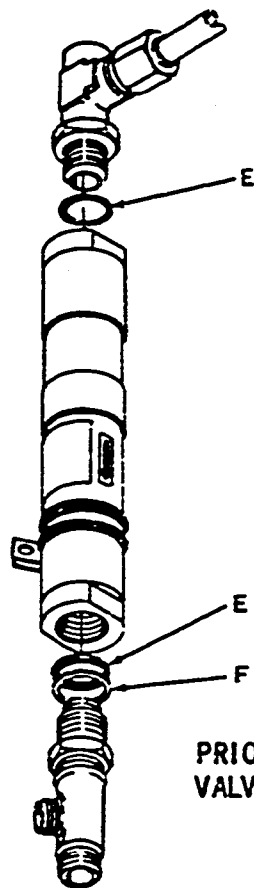

PRIORITY  
VALVE

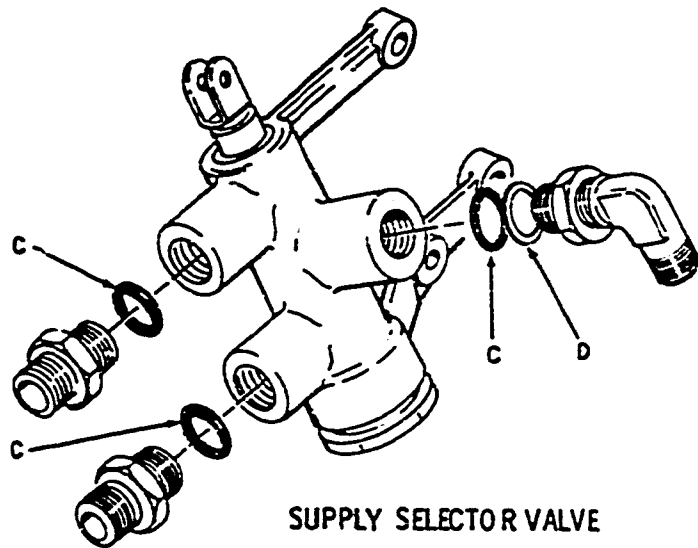


SUPPLY SELECTOR VALVE

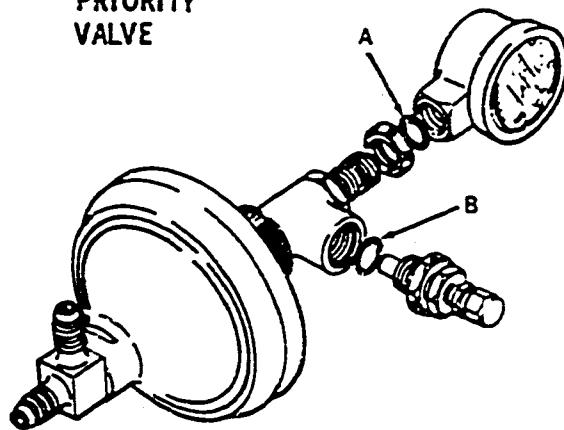


SURGE DAMPER ACCUMULATOR

CODE  
 A-NAS1612-4  
 B-MS2469-4  
 C-NAS1612-8  
 D-MS28777-8\*  
 E-NAS1612-12  
 F-MS28777-12\*  
 G-NAS1612-20

\* BACKUP RING

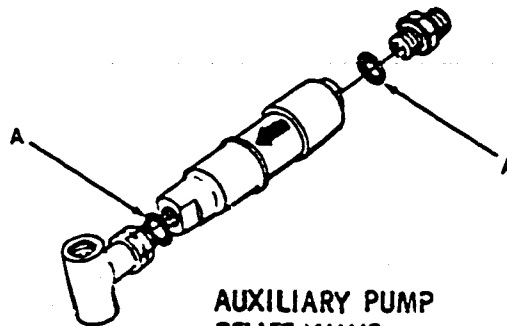

AUXILIARY PUMP  
RELIEF VALVE

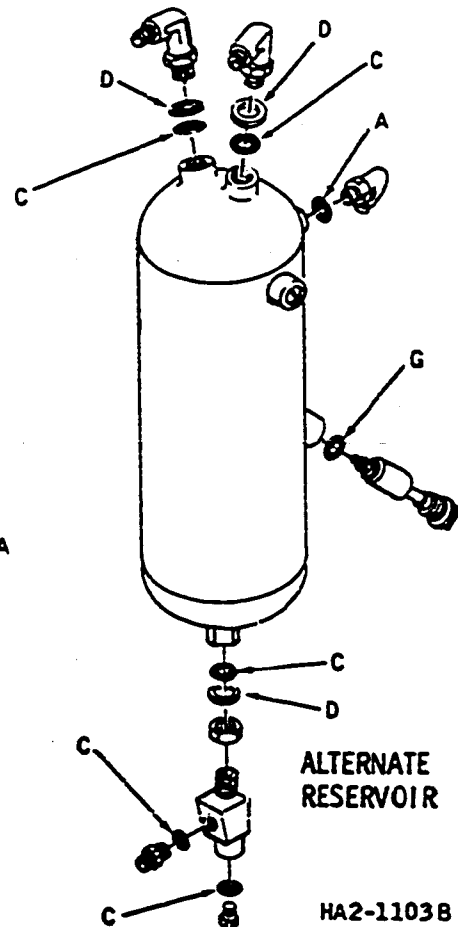

ALTERNATE  
RESERVOIR

HA2-1103B


Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 4)

Oct 15/68

Printed in U.S.A.

29-00  
 CODE 9  
 Page 207


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

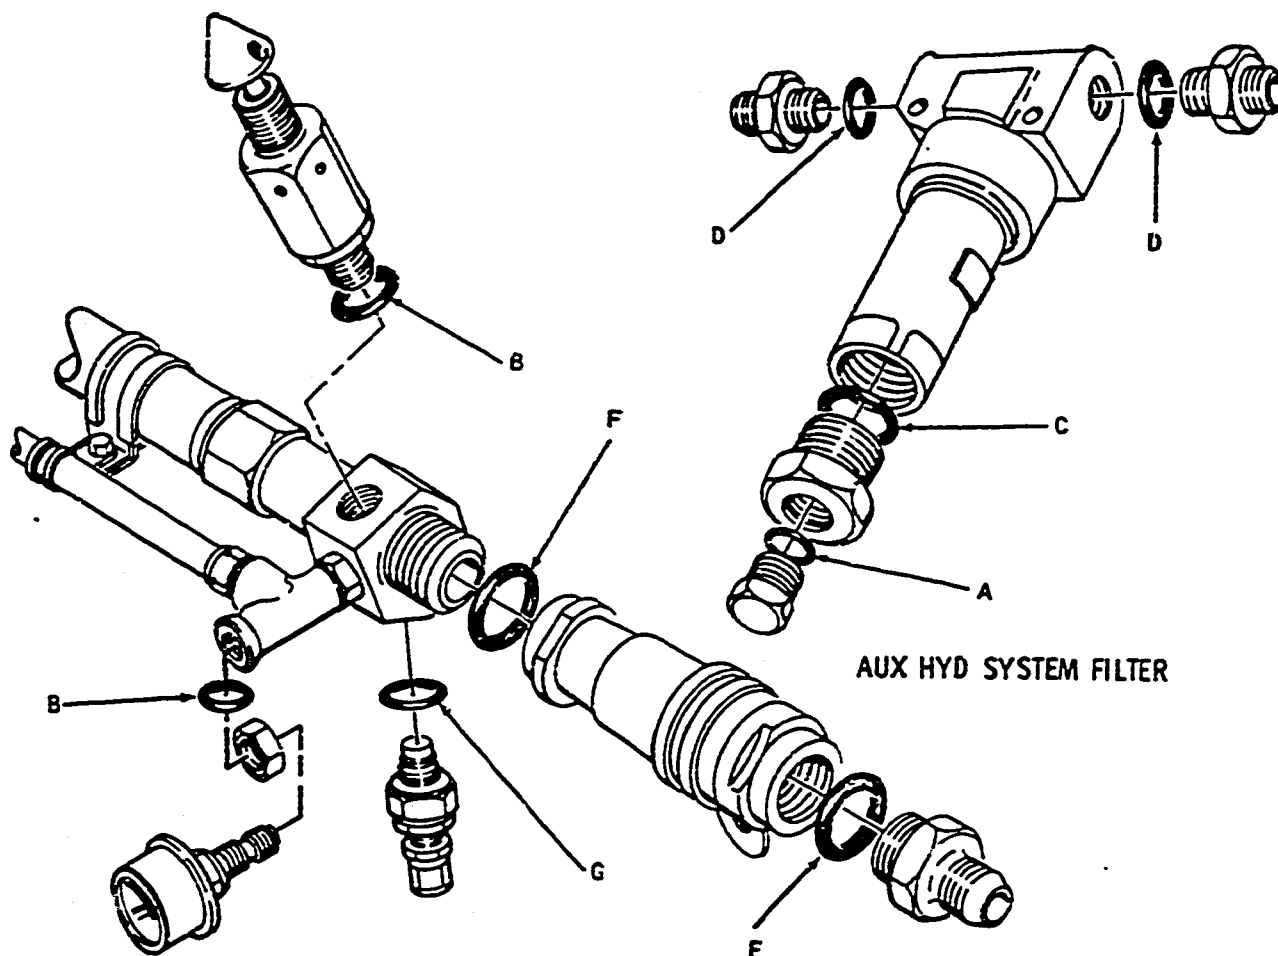

RESERVOIR AIR BLEED VALVE,  
 FILTER VALVE, PRESSURE GAGE  
 AND RELIEF VALVE

CODE

- A - NAS1612-2
- B - NAS1612-4
- C - NAS1612-6
- D - NAS1612-8
- E - NAS1612-10
- F - NAS1612-12
- G - MS24690

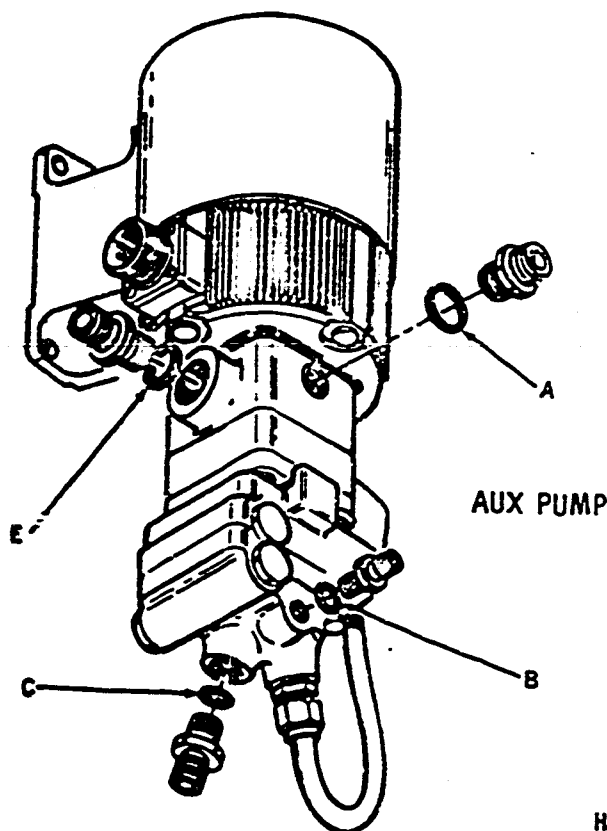

HA2-1679 A

Hydraulic Power System Components -- O-rings  
 Figure 201 (Sheet 5)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Energize test stand hydraulic pump; pressurize hydraulic system to 3000 psi.

WARNING: BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT ALL FLIGHT CONTROL SURFACES AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

B. Depressurize and Disconnect

- (1) Check hydraulic fluid level of hydraulic reservoir; fill if necessary as described on instruction placard on reservoir.
- (2) Deenergize test stand hydraulic pump.
- (3) Depressurize hydraulic system by operating the brakes and manually moving the longitudinal trim handle until horizontal stabilizer movement stops.
- (4) Disconnect and cap test stand pressure and supply hoses from airplane ground service connections; install duct caps on connections and close access door.

C. Pressurize Hydraulic System with Auxiliary Hydraulic Pump Pressure

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap control handle agrees with wing flap position.
- (3) Place hydraulic system selector control lever in general system/bypass position.
- (4) Check that airplane electrical busses are energized (see Chapter 24).
- (5) Start auxiliary hydraulic pump by placing auxiliary hydraulic pump control switch momentarily in start position. Pressure indicated in the flight compartment should be 2600 to 3000 psi.

WARNING: BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT ALL FLIGHT CONTROL SURFACES AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

CAUTION: DO NOT HOLD THE AUXILIARY HYDRAULIC PUMP CONTROL SWITCH IN THE START (HOLD ONLY IN EMERGENCY) POSITION FOR NORMAL PRESSURIZATION.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

D. Depressurize

- (1) Stop auxiliary hydraulic by placing auxiliary hydraulic pump control switch momentarily in stop position.
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.
- (3) Place hydraulic system selector control lever in general system (normal) position.

E. Pressurize Hydraulic System with Engine-Driven Hydraulic Pump Pressure

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap handle agrees with wing flap position.
- (3) Make certain that applicable fire control handle is in normal position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Make certain that applicable engine-driven hydraulic pump control switch is in on position.
- (6) Start engine No. 2 or No. 3 (see Chapter 71). Hydraulic pressure indicated in the flight compartment should be 2800 to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT ALL FLIGHT CONTROL SURFACES AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

F. Depressurize

- (1) Shut down engine (see Chapter 71).
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.

3. Pressuriz./Depressurize Hydraulic Reservoir

A. General

- (1) The air inflation valve, air bleed valve, and air pressure gage for manually pressurizing and depressurizing the hydraulic reservoir and air chamber are located on the aft side of the wing rear spar, at the forward end of the left main gear wheel well. The valves and gage are mounted on a cross fitting just inboard of the reservoir air chamber. Access is through the left main gear inboard door.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

B. Tools and Equipment Required

- (1) Pressure cylinder (clean dry compressed air or nitrogen).

C. Pressurize Hydraulic Reservoir

NOTE: Normal air pressure in the reservoir and air chamber should be between 30 and 35 psi.

NOTE: There are three methods of pressurizing the hydraulic reservoir:

- (1) Run an inboard engine.
- (2) Connect and operate a hydraulic test stand.
- (3) Direct pressurization of air chamber by introduction of compressed air or nitrogen.

The first two methods are automatic in that the reservoir is pressurized by action of the hydraulic fluid through the regulator-aspirator when the system is pressurized. The third method (direct inflation) will be described in the following steps.

- (1) Remove air inflation valve cap and attach pressure cylinder service hose to inflation valve.
- (2) Loosen inflation valve swivel nut three complete turns.

NOTE: The rate of inflation (flow through the valve) is governed by the degree of opening of the swivel valve.

- (3) Pressurize reservoir to 30 to 35 psi reading on air pressure gage.
- (4) Tighten swivel nut.
- (5) Disconnect service hose and install valve cap.

CAUTION: THE AIR INFLATION VALVE IS A STANDARD "AN" VALVE WHICH HAS BEEN MODIFIED BY INSTALLATION OF SKYDROL TYPE SEALS. DO NOT REPLACE THE VALVE WITH A VALVE WHICH HAS NOT BEEN MODIFIED FOR SKYDROL.

D. Depressurize Hydraulic Reservoir

- (1) Depress air bleed valve button; hold until all pressure has bled off and pressure gage reads zero.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

4. Drain Hydraulic System Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.
- (2) Clean container of approximately 20 US gallons (16.65 Imperial gallons or 75.7 liters) capacity.

B. Drain Reservoir

- (1) Depressurize hydraulic system and reservoir (see paragraphs 2 and 3).
- (2) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (3) Remove drain unit, and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

5. Drain Auxiliary Hydraulic Pump Alternate Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.
- (2) Clean container of approximately 3 US gallons (2.5 Imperial gallons or 11.5 liters) capacity.

B. Drain Reservoir

- (1) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (2) Remove drain unit and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

6. Hydraulic System Pressure Decay Rates

A. Decay Rate Test

- (1) By observing the time it takes for the hydraulic system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi, it is possible, in most cases, to detect units that are leaking excessively. This procedure is not infallible because the sum of the maximum allowable leakage rates determines the minimum time permissible for pressure decay. The

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

hydraulic system with average leakage will maintain pressure for longer periods than indicated and may do so even with one unit leaking excessively.

- (2) The main hydraulic system should be tested for pressure decay time under the following conditions:
  - (a) System selector valve in general system/bypass or general system (normal)
  - (b) Nosewheel straight ahead plus or minus 30 degrees and steering valve in neutral position
  - (c) Manual main gear door valve open
  - (d) Landing gear down and locked
  - (e) Wing flaps up
  - (f) Accumulators properly charged
  - (g) Aileron shutoff valve off
  - (h) Rudder shutoff valve off
- (3) Pressurize main hydraulic system to 2900 ( $\pm 100$ ) psi with auxiliary pump or hydraulic test stand. Then shut off hydraulic power source and note time interval required for system pressure to decrease 1000 psi. This should be more than 34 seconds on a new airplane or more than 23 seconds on an airplane in service before overhaul. If pressure decay time is less, the main hydraulic system should be inspected for a malfunctioning unit.
- (4) If pressure decay test indicates that a unit in the main hydraulic system was leaking excessively, that unit may be in the nose or main gear subsystem, the main gear door subsystem, the flap subsystem, the slot subsystem, the selector valve, or the compressor subsystem. By placing the subsystem control valves in opposite positions one at a time and repeating the pressure decay test, it is possible that the faulty unit may be located.
- (5) Rudder power hydraulic system may be tested for pressure decay time by using procedures outlined in steps (2) and (3), except that the rudder shutoff valve should be on. Decay time should be more than 10 seconds on a new airplane or more than 8 seconds on an airplane in service before overhaul. If less, the rudder power system should be inspected for a malfunctioning unit.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Supplementary information may be obtained for the rudder power hydraulic system by using the auxiliary rudder system pump and accumulator air gage to test the time for rudder pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi. With the rudder hydraulic power shutoff valve off, the time should be more than 2 minutes. With the rudder hydraulic power shutoff valve on, the time should be 12 seconds on a new airplane and 10 seconds on an airplane in service before overhaul.
- (7) Aileron hydraulic power system may be tested for pressure decay by using procedures outlined in steps (2) and (3), except that the aileron hydraulic power shutoff valve should be on. The decay time should be more than 6-1/2 seconds on a new airplane or more than 4-1/2 seconds on an airplane in service before overhaul. If less, the aileron power system should be inspected for a malfunctioning unit.
- (8) Brake system and the nose gear steering system are isolated from the main hydraulic system by check valves and may be tested separately. Using the brake accumulator gages, the pressure decay time for the brake system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 10 hours with the parking brake off, and 2 hours with the parking brake on. With the brake accumulators fully charged deplete the general system pressure. Wait 3 to 5 minutes and then set the parking brake and hold the parking brake pressure for 15 minutes. The drop in pressure at the brake accumulators should not exceed 125 psi during this time.
- (9) Release the parking brakes, and build up brake accumulator pressure to 2900 ( $\pm 100$ ) psi. With hydraulic power off and brakes off, check brake accumulator pressure. Drop in pressure at the accumulators should not exceed 100 psi in 30 minutes. Fast decay time for the brake system with parking brake off, indicates either a faulty brake valve or a faulty check valve in the right manifold. A fast decay time with the parking brake on indicates a faulty antiskid valve or a faulty brake valve.
- (10) Using the gages on the nose pressure accumulators, the time for the nose gear steering system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 19 minutes. If less, one of the pressure check valves is faulty, or the nose gear steering control valve is faulty or out of neutral.

CAUTION: ALL LANDING GEAR GROUND LOCKPINS MUST BE INSTALLED BEFORE CONDUCTING THE FOLLOWING TEST.

- (11) Under conditions outlined in step (2), except with the landing gear control valve in the up position, the time for pressure decay should be unchanged. If time limits change more than 5 seconds as determined in paragraph (3), a faulty unit is in the gear subsystem.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (12) Under conditions outlined in step (2), except with the main gear door manual control valve in the closed position, the decay time should be more than 24 seconds on a new airplane and 18 seconds on an airplane in service before overhaul. If less, the faulty unit is in the main gear door subsystem.
- (13) Under conditions outlined in step (2), except with the flap control valve in the down position, the decay time should be more than 24 seconds on a new airplane and 17 seconds on an airplane in service before overhaul. If less, the faulty unit is in the flap subsystem.
- (14) Under conditions outlined in step (2), time limit for pressure decay should remain unchanged as determined in paragraph (3) with the slot valve in either position, or the selector valve in either general system/bypass or general system (normal). If the time changes with a change of valve position, the faulty unit is in that subsystem.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - MAINTENANCE PRACTICES

1. General

A. Skydrol Safety Precautions

- (1) Before performing any operation on the hydraulic system, personnel should read and thoroughly understand the following precautions to be observed when working with Skydrol hydraulic fluid.

WARNING: OBSERVE THE FOLLOWING SAFETY PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. LONG EXPOSURE TO SKYDROL CAN CAUSE SKIN DEHYDRATION AND CHAPPING.

- (2) Wash hands thoroughly with soap and water before starting work.
- (3) Apply barrier cream to hands, wrists, and forearms. Rub cream under fingernails and into creases of skin.
- (4) Wear goggles when pressure testing components on systems, and whenever there is any possibility of Skydrol splashing into eyes.
- (5) If Skydrol splashes into eyes, treat eyes immediately by irrigating thoroughly with clear cold water, and report the incident.
- (6) Wash hands, wrists, and forearms with soap and hot water whenever they have come in contact with Skydrol.
- (7) If clothing becomes soaked with Skydrol; remove clothing as soon as possible, thoroughly wash skin, and put on clean clothing.

B. Technical Precautions

- (1) Before any maintenance is performed on the hydraulic system, personnel should read and thoroughly understand the following precautions. Careful adherence to these instructions will aid in maintaining a functional and trouble-free system.

CAUTION: OBSERVE THE FOLLOWING TECHNICAL PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. SKYDROL WILL ATTACK A WIDE RANGE OF MATERIALS INCLUDING RUBBER, COPPER, VARIOUS PLASTICS, AND PAINTS.

- (2) Ensure that Skydrol does not come into contact with any part of aircraft outside of the hydraulic system. Keep spillage to an absolute minimum. Clean up spilled hydraulic fluid immediately to prevent entry into adjacent areas of the airplane precluding future false hydraulic leak reports. If spillage occurs, wipe up the fluid with a dry cloth and wash contaminated area with soap and hot water.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) When lines are disconnected and/or components are removed, provide suitable protection to prevent foreign material from entering the lines or components by use of caps, covers, clean lint-free rags, etc.
- (4) When electrical connectors are disconnected, install caps or other suitable protectors to prevent entry of hydraulic fluid, moisture, and foreign objects.
- (5) Always check position and angle of all fittings removed from components to ensure placement and alignment when installing replacement components.
- (6) When washing metal parts before assembly, use only approved solvent, and ensure that all traces of the solvent are removed before assembly.
- (7) Use only clean Skydrol for flushing or testing hydraulic components.
- (8) Use only clean Skydrol when filling reservoirs, sumps, filter bowls, pumps, etc., before installation of components.
- (9) Do not unpack Skydrol O-rings and seals until required. Ensure that only approved rings and seals are used.
- (10) When assembling O-rings and seals, lubricate with Skydrol Assembly Lubricant, MCS 352, Monsanto Chemical Company, or clean Skydrol hydraulic fluid.
- (11) Take care to prevent contamination of Skydrol with other materials (oils, water, dirt, etc.).
- (12) If a system becomes contaminated with any petroleum-based oil or solvent, drain the system and flush with clean Skydrol.

**C. Landing Gear Precautions**

- (1) The landing gear control lever should be in the down position and the landing gear ground lockpins should be installed in the main and nose gears at all times during ground maintenance, except as noted in maintenance procedural steps.
- (2) The main gear wheels should be checked at all times during ground maintenance, except as noted in maintenance procedural steps.
- (3) The hydraulic system selector control lever should be in the general system (normal) position at all times during ground maintenance, except as noted in maintenance procedural steps.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) The main gear bogie beams should be locked in the trail position at all times, except as noted in maintenance procedural steps.

**WARNING:** WHEN THE AIRPLANE IS ON WING AND FUSELAGE JACKS, THE MAIN GEAR WHEELS ARE CLEAR OF THE GROUND, AND THE HYDRAULIC POWER SYSTEM IS PRESSURIZED, THE AFT BOGIE AND WHEELS WILL SWING OUTBOARD VERY RAPIDLY IN THE DIRECTION OF NOSEWHEEL TURN IF THE NOSEWHEELS ARE TURNED MORE THAN 40 DEGREES. BOGIE AND MAIN GEAR AFT WHEELS WILL RETURN TO TRAIL POSITION JUST AS RAPIDLY WHEN THE NOSEWHEELS ARE RETURNED TO NEUTRAL POSITION. THIS COULD CAUSE SERIOUS INJURY TO PERSONNEL WORKING NEAR THE WHEELS.

D. Hydraulic Power System O-Rings

- (1) O-rings used in the installation of hydraulic power system components are shown in Figure 201. O-rings required for the landing gear, power control systems, etc., will be found in the applicable chapters.
- (2) O-ring part numbers shown in Figure 201 are interchangeable with Douglas standard (S-XXXXXXX) numbers listed in the Illustrated Parts Catalog and all engineering drawings.


2. Pressurize/Depressurize Hydraulic System

A. Pressurize Hydraulic System with External Hydraulic Source Pressure

- (1) Tools and Equipment Required: A hydraulic test stand equipped with a variable-displacement hydraulic pump capable of delivering 20 gpm at 3000 psi, using Skydrol hydraulic fluid. The maximum permissible operating temperature should not exceed 180°F (82.2°C).
- (2) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (3) Make certain that wing flap control handle agrees with wing flap position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Remove dust caps from airplane ground service connections and connect test stand pressure and supply hoses.




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

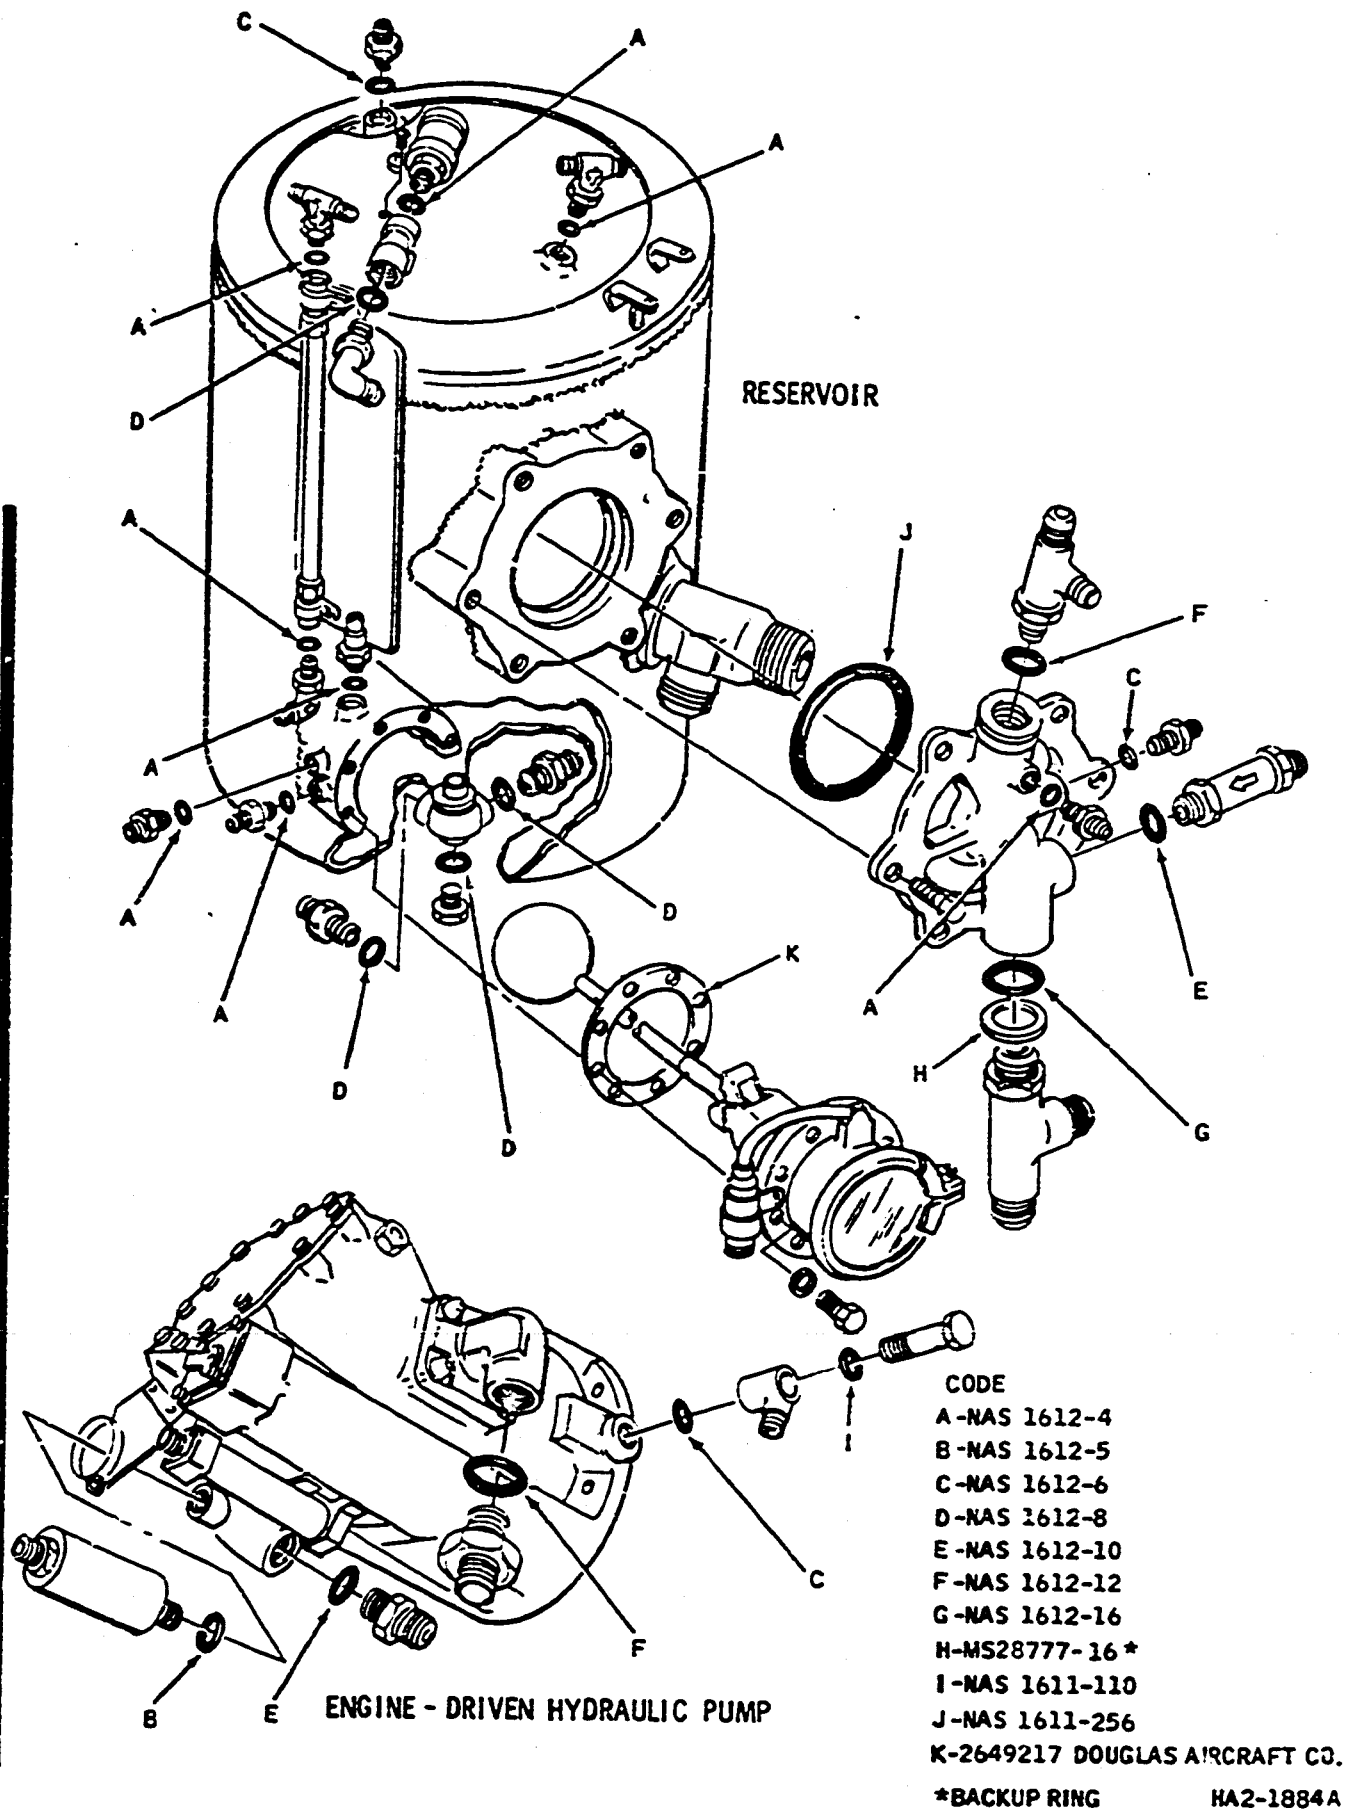

Hydraulic Power System Components -- O-Rings  
 (Airplane N8786R)  
 Figure 201 (Sheet 1)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

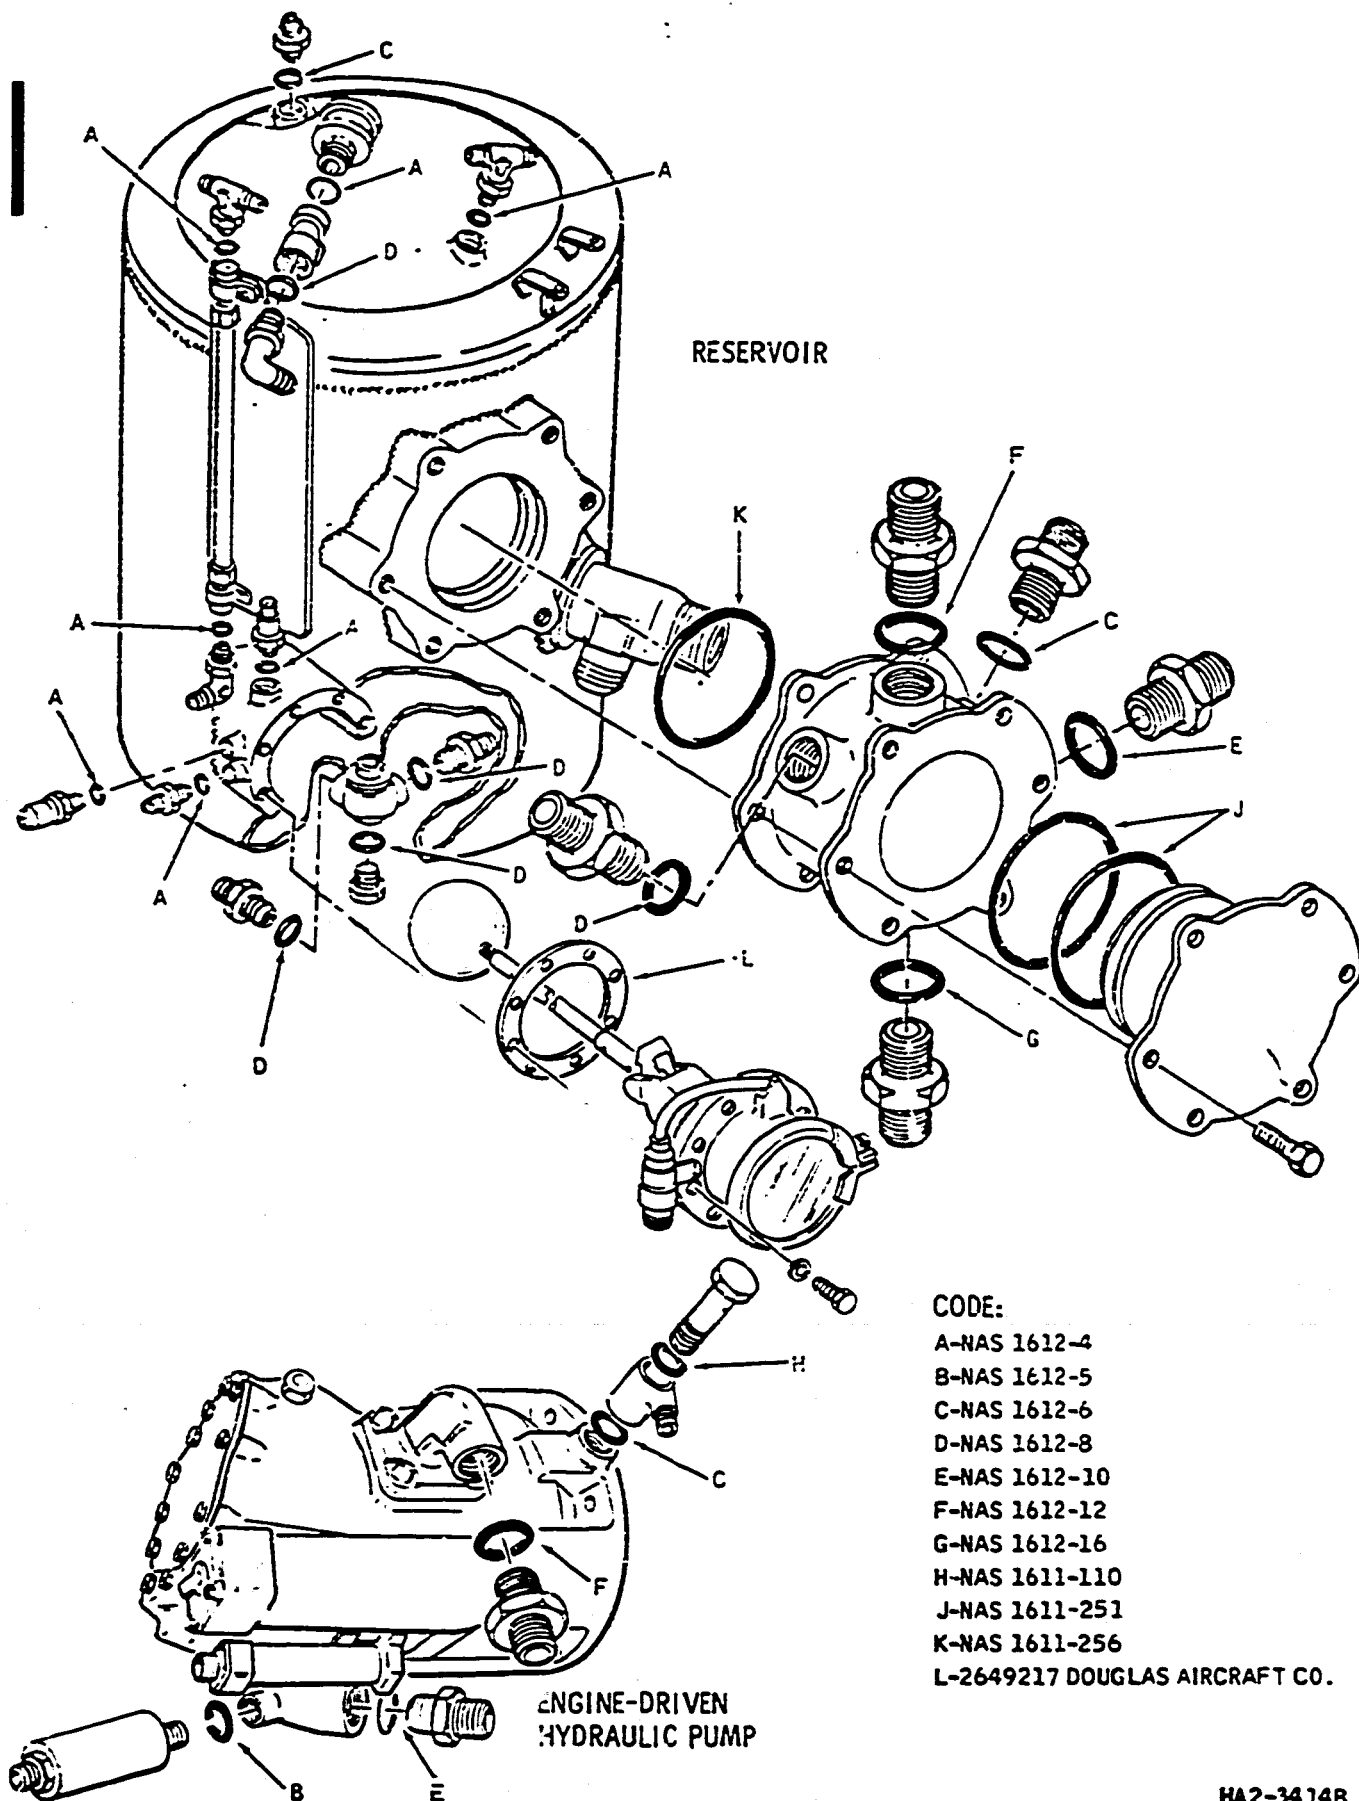

Hydraulic Power System Components — O-Rings  
 (Airplane N8787R and Subsequent)  
 Figure 201 (Sheet 2)


Dec 1/73

Printed in U.S.A.


HA2-34148

29-00  
 CODE 10  
 Page 205


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

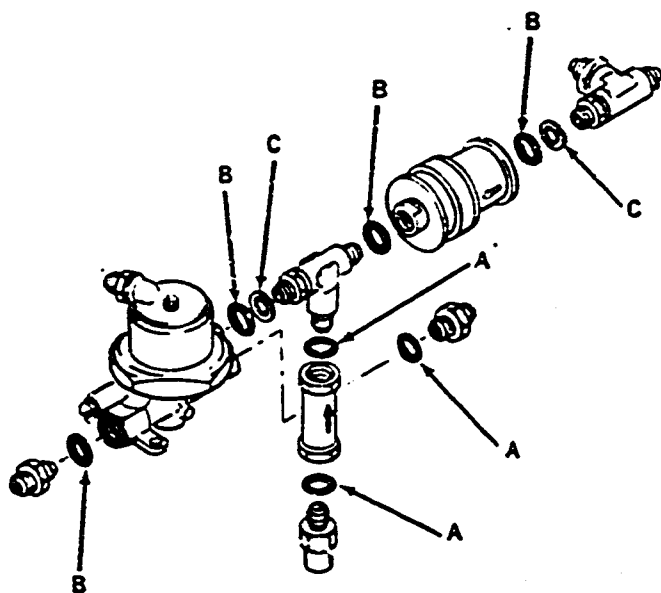


REGULATOR - ASPIRATOR  
 AND AIR FILTERS

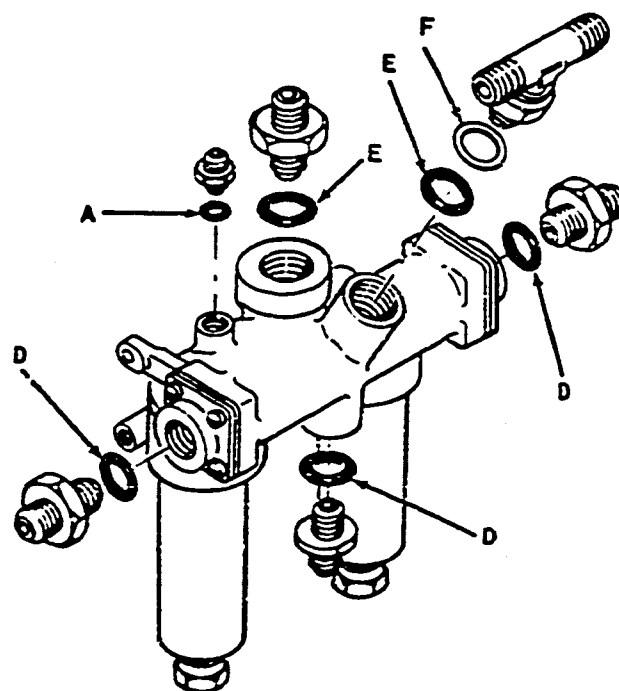

DUAL-FILTER &  
 RELIEF VALVE

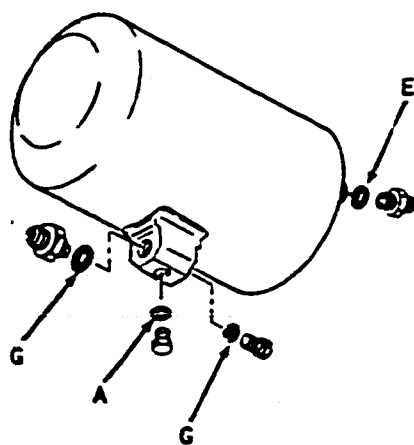

HYDRAULIC RESERVOIR  
 AIR CHAMBER

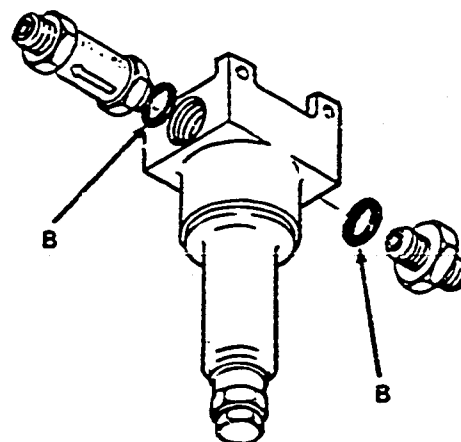


HYDRAULIC  
 PUMPCASE DRAIN  
 FILTER

CODE:

- A - NAS1612-4
- B - NAS1612-6
- C - MS28777-6\*
- D - NAS1612-10
- E - NAS1612-12
- F - MS28777-12\*
- G - NAS1612-16
- \* - BACKUP RING

HA2-1101A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

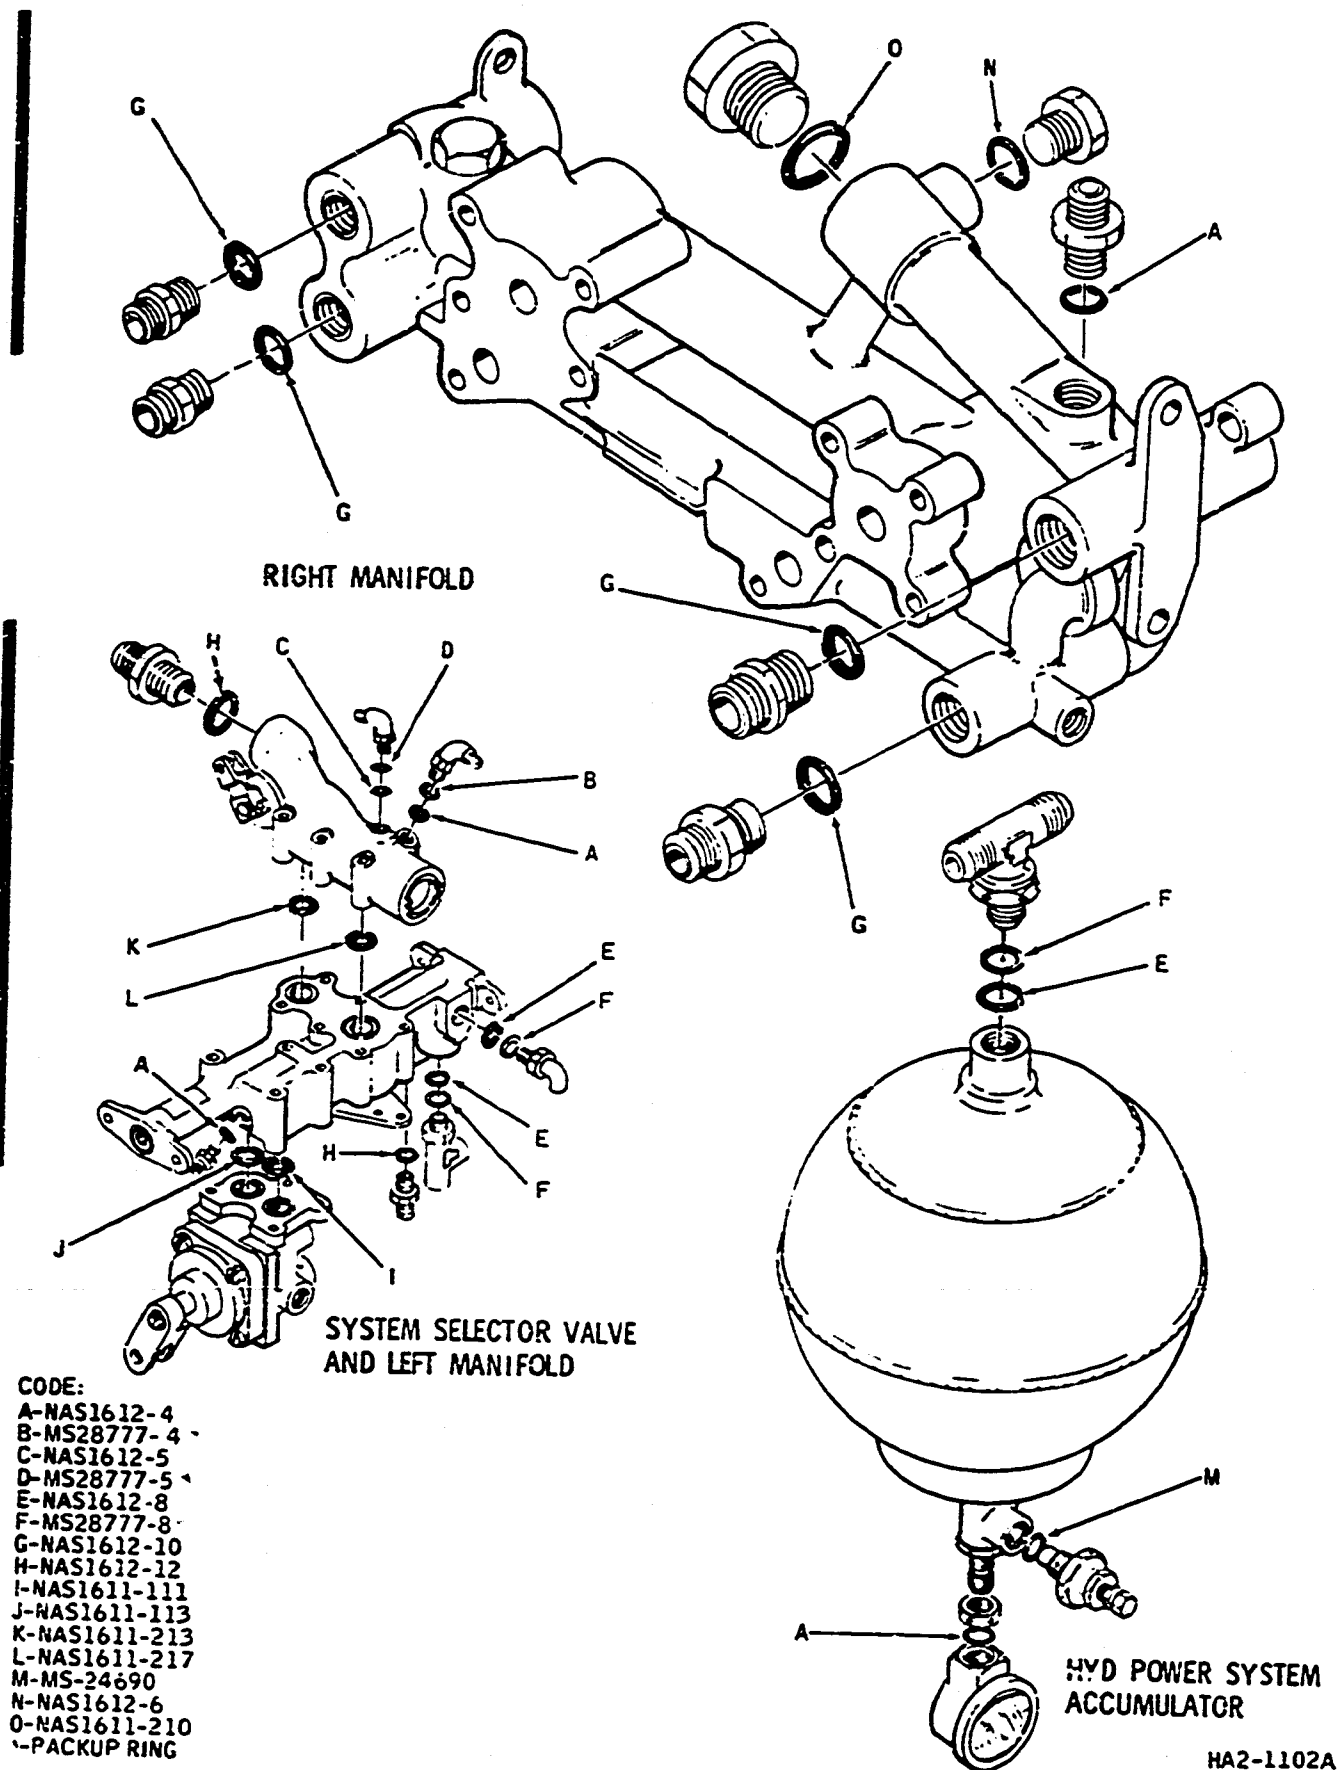


Hydraulic Power System Components -- O-Rings  
 Figure 201 (Sheet 4)

Jan 15/68

Printed in U.S.A.

29-00  
 CODE 10  
 Page 207

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

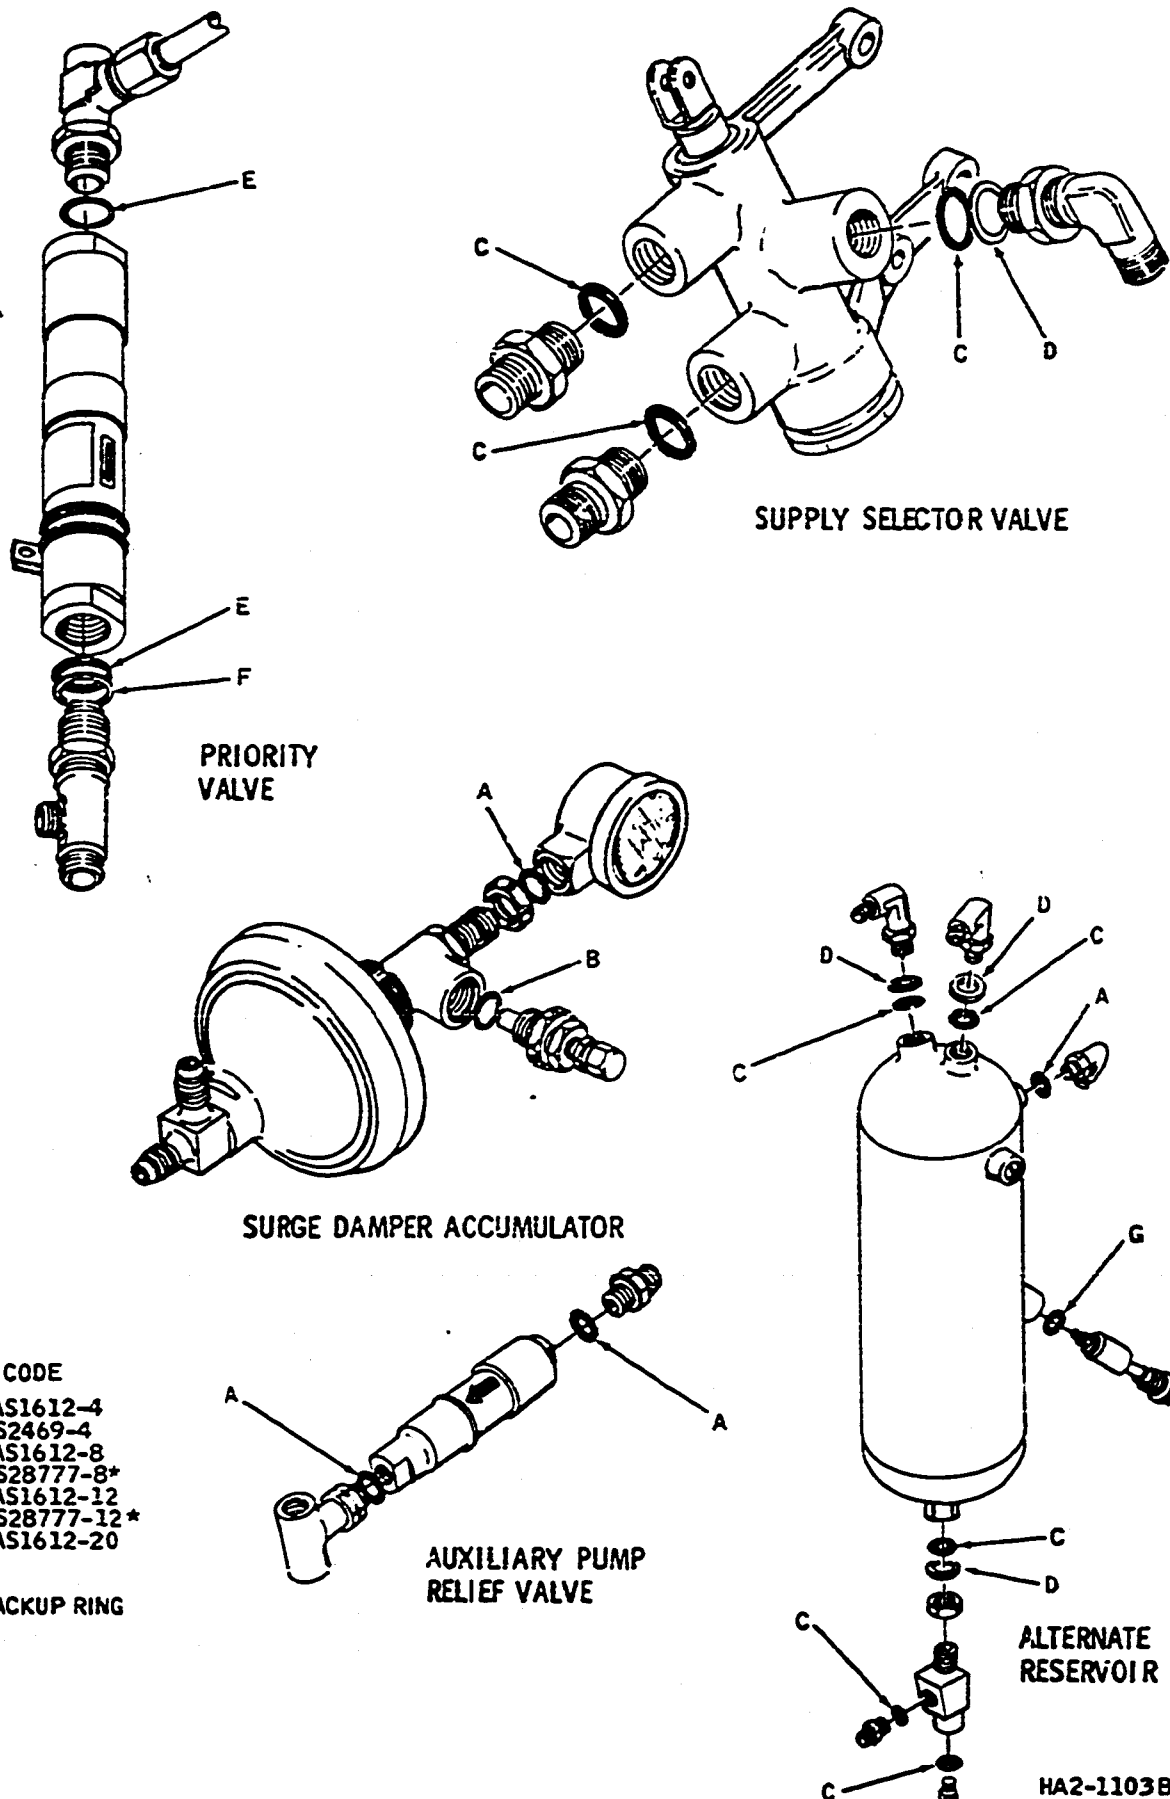


CODE  
 A-NAS1612-4  
 B-MS2469-4  
 C-NAS1612-8  
 D-MS28777-8\*  
 E-NAS1612-12  
 F-MS28777-12\*  
 G-NAS1612-20

\* BACKUP RING

HA2-1103B

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

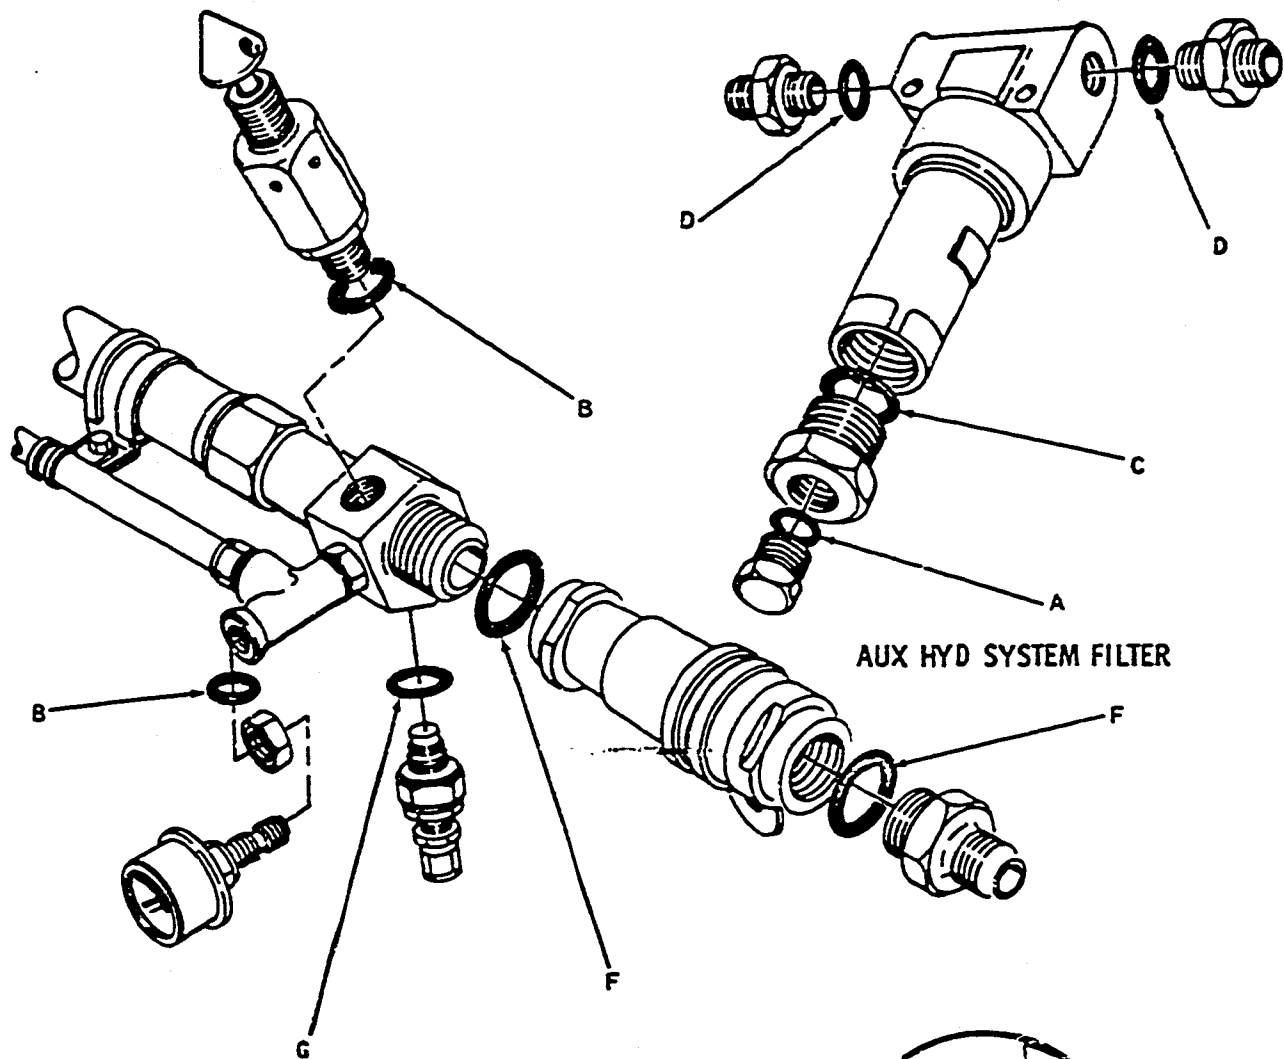


RESERVOIR AIR BLEED VALVE,  
 FILTER VALVE, PRESSURE GAGE  
 AND RELIEF VALVE

CODE

A-NAS1612-2  
 B-NAS1612-4  
 C-NAS1612-6  
 D-NAS1612-8  
 E-NAS1612-10  
 F-NAS1612-12  
 G-MS24690  
 H-MS28777-10 \*  
 J-MS28777-4 \*

\*BACKUP RING

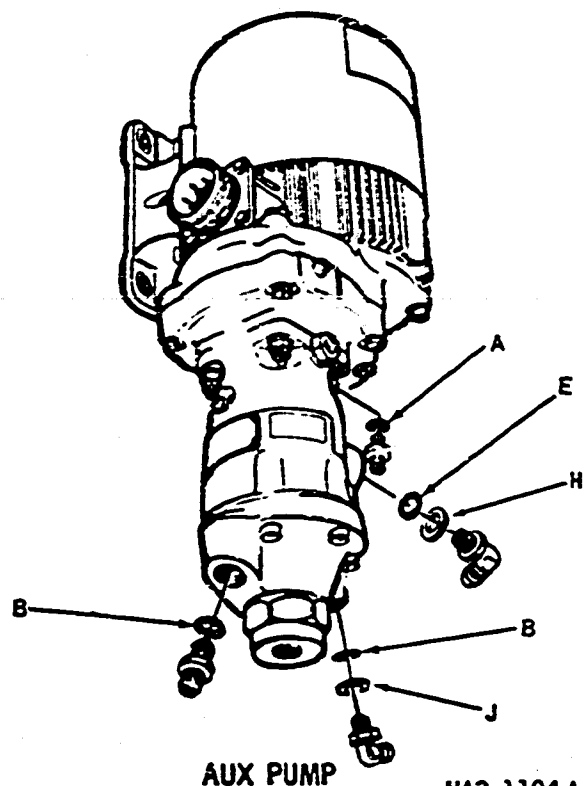

AUX PUMP

HA2-1104 A

Hydraulic Power System Components -- O-Rings  
 Figure 201 (Sheet 6)

Jan 15/68

29-00  
 CODE 10  
 Page 209

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Energize test stand hydraulic pump; pressurize hydraulic system to 3000 psi.

WARNING: BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT ALL FLIGHT CONTROL SURFACES AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

B. Depressurize and Disconnect

- (1) Check hydraulic fluid level of hydraulic reservoir; fill if necessary as described on instruction placard on reservoir.
- (2) Deenergize test stand hydraulic pump.
- (3) Depressurize hydraulic system by operating the brakes and manually moving the longitudinal trim handle until horizontal stabilizer movement stops.
- (4) Disconnect and cap test stand pressure and supply hoses from airplane ground service connections; install duct caps on connections and close access door.

C. Pressurize Hydraulic System with Auxiliary Hydraulic Pump Pressure

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap control handle agrees with wing flap position.
- (3) Place hydraulic system selector control lever in general system/bypass position.
- (4) Check that airplane electrical buses are energized (see Chapter 24).
- (5) Start auxiliary hydraulic pump by placing auxiliary hydraulic pump control switch momentarily in start position. Pressure indicated in the flight compartment should be 2600 to 3000 psi.

WARNING: BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT ALL FLIGHT CONTROL SURFACES AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

CAUTION: DO NOT HOLD THE AUXILIARY HYDRAULIC PUMP CONTROL SWITCH IN THE START (HOLD ONLY IN EMERGENCY) POSITION FOR NORMAL PRESSURIZATION.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

D. Depressurize

- (1) Stop auxiliary hydraulic by placing auxiliary hydraulic pump control switch momentarily in stop position.
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.
- (3) Place hydraulic system selector control lever in general system (normal) position.

E. Pressurize Hydraulic System with Engine-Driven Hydraulic Pump Pressure

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap handle agrees with wing flap position.
- (3) Make certain that applicable fire control handle is in normal position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Make certain that applicable engine-driven hydraulic pump control switch is in on position.
- (6) Start engine No. 2 or No. 3 (see Chapter 71). Hydraulic pressure indicated in the flight compartment should be 2800 to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT ALL FLIGHT CONTROL SURFACES AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

F. Depressurize

- (1) Shut down engine (see Chapter 71).
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.

3. Pressurize/Depressurize Hydraulic Reservoir

A. General

- (1) The air inflation valve, air bleed valve, and air pressure gage for manually pressurizing and depressurizing the hydraulic reservoir and air chamber are located on the aft side of the wing rear spar, at the forward end of the left main gear wheel well. The valves and gage are mounted on a cross fitting just inboard of the reservoir air chamber. Access is through the left main gear inboard door.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

B. Tools and Equipment Required

- (1) Pressure cylinder (clean dry compressed air or nitrogen).

C. Pressurize Hydraulic Reservoir

NOTE: Normal air pressure in the reservoir and air chamber should be between 30 and 35 psi.

NOTE: There are three methods of pressurizing the hydraulic reservoir:

- (1) Run an inboard engine.
- (2) Connect and operate a hydraulic test stand.
- (3) Direct pressurization of air chamber by introduction of compressed air or nitrogen.

The first two methods are automatic in that the reservoir is pressurized by action of the hydraulic fluid through the regulator-aspirator when the system is pressurized. The third method (direct inflation) will be described in the following steps.

- (1) Remove air inflation valve cap and attach pressure cylinder service hose to inflation valve.
- (2) Loosen inflation valve swivel nut three complete turns.

NOTE: The rate of inflation (flow through the valve) is governed by the degree of opening of the swivel valve.

- (3) Pressurize reservoir to 30 to 35 psi reading on air pressure gage.
- (4) Tighten swivel nut.
- (5) Disconnect service hose and install valve cap.

CAUTION: THE AIR INFLATION VALVE IS A STANDARD "AN" VALVE WHICH HAS BEEN MODIFIED BY INSTALLATION OF SKYDROL TYPE SEALS. DO NOT REPLACE THE VALVE WITH A VALVE WHICH HAS NOT BEEN MODIFIED FOR SKYDROL.

D. Depressurize Hydraulic Reservoir

- (1) Depress air bleed valve button; hold until all pressure has bled off and pressure gage reads zero.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

4. Drain Hydraulic Systems Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.
- (2) Clean container of approximately 20 US gallons (16.65 Imperial gallons or 75.7 liters) capacity.

B. Drain Reservoir

- (1) Depressurize hydraulic system and reservoir (see paragraphs 2 and 3).
- (2) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (3) Remove drain unit, and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

5. Drain Auxiliary Hydraulic Pump Alternate Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.
- (2) Clean container of approximately 3 US gallons (2.5 Imperial gallons or 11.5 liters) capacity.

B. Drain Reservoir

- (1) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (2) Remove drain unit and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

6. Hydraulic System Pressure Decay Rates

A. Decay Rate Test

- (1) By observing the time it takes for the hydraulic system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi, it is possible, in most cases, to detect units that are leaking excessively. This procedure is not infallible because the sum of the maximum allowable leakage rates determine the minimum time permissible for pressure decay. The

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

hydraulic system with average leakage will maintain pressure for longer periods than indicated and may do so even with one unit leaking excessively.

- (2) The main hydraulic system should be tested for pressure decay time under the following conditions:
  - (a) System selector valve in general system/bypass or general system (normal).
  - (b) Nosewheel straight ahead plus or minus 30 degrees and steering valve in neutral position.
  - (c) Manual main gear door valve open.
  - (d) Landing gear down and locked.
  - (e) Wing flaps up.
  - (f) Accumulators properly charged.
  - (g) Aileron shutoff valve off.
  - (h) Rudder shutoff valve off.
- (3) Pressurize main hydraulic system to 2900 ( $\pm 100$ ) psi with auxiliary pump or hydraulic test stand. Then shut off hydraulic power source and note time interval required for system pressure to decrease 1000 psi. This should be more than 34 seconds on a new airplane or more than 23 seconds on an airplane in service before overhaul. If pressure decay time is less, the main hydraulic system should be inspected for a malfunctioning unit.
- (4) If pressure decay test indicates that a unit in the main hydraulic system was leaking excessively, that unit may be in the hose or main gear subsystem, the main gear door subsystem, the flap subsystem, the slot subsystem, the selector valve, or the compressor subsystem. By placing the subsystem control valves in opposite positions one at a time and repeating the pressure decay test, it is possible that the faulty unit may be located.
- (5) Rudder power hydraulic system may be tested for pressure decay time by using procedures outlined in steps (2) and (3), except that the rudder shutoff valve should be on. Decay time should be more than 10 seconds on a new airplane or more than 8 seconds on an airplane in service before overhaul. If less, the rudder power system should be inspected for a malfunctioning unit.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Supplementary information may be obtained for the rudder power hydraulic system by using the auxiliary rudder system pump and accumulator air gage to test the time for rudder pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi. With the rudder hydraulic power shutoff valve off, the time should be more than 2 minutes. With the rudder hydraulic power shutoff valve on, the time should be 12 seconds on a new airplane and 10 seconds on an airplane in service before overhaul.
- (7) Aileron hydraulic power system may be tested for pressure decay by using procedures outlined in steps (2) and (3), except that the aileron hydraulic power shutoff valve should be on. The decay time should be more than 6-1/2 seconds on a new airplane or more than 4-1/2 seconds on an airplane in service before overhaul. If less, the aileron power system should be inspected for a malfunctioning unit.
- (8) Brake system and the nose gear steering system are isolated from the main hydraulic system by check valves and may be tested separately. Using the brake accumulator gages, the pressure decay time for the brake system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 10 hours with the parking brake off, and 2 hours with the parking brake on. With the brake accumulators fully charged deplete the general system pressure. Wait 3 to 5 minutes and then set the parking brake and hold the parking brake pressure for 15 minutes. The drop in pressure at the brake accumulators should not exceed 125 psi during this time.
- (9) Release the parking brakes, and build up brake accumulator pressure to 2900 ( $\pm 100$ ) psi. With hydraulic power off and brakes off, check brake accumulator pressure. Drop in pressure at the accumulators should not exceed 100 psi in 30 minutes. Fast decay time for the brake system with parking brake off, indicates either a faulty brake valve or a faulty check valve in the right manifold. A fast decay time with the parking brake on indicates a faulty antiskid valve or a faulty brake valve.
- (10) Using the gages on the nose pressure accumulators, the time for the nose gear steering system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 19 minutes. If less, one of the pressure check valves is faulty, or the nose gear steering control valve is faulty or out of neutral.

**CAUTION:** ALL LANDING GEAR GROUND LOCKPINS MUST BE INSTALLED BEFORE CONDUCTING THE FOLLOWING TEST.

- (11) Under conditions outlined in step (2), except with the landing gear control valve in the up position, the time for pressure decay should be unchanged. If time limits change more than 5 seconds as determined in paragraph (3), a faulty unit is in the gear subsystem.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (12) Under conditions outlined in step (2), except with the main gear door manual control valve in the closed position, the decay time should be more than 24 seconds on a new airplane and 18 seconds on an airplane in service before overhaul. If less, the faulty unit is in the main gear door subsystem.
- (13) Under conditions outlined in step (2), except with the flap control valve in the down position, the decay time should be more than 24 seconds on a new airplane and 17 seconds on an airplane in service before overhaul. If less, the faulty unit is in the flap subsystem.
- (14) Under conditions outlined in step (2), time limit for pressure decay should remain unchanged as determined in paragraph (3) with the slot valve in either position, or the selector valve in either general system/bypass or general system (normal). If the time changes with a change of valve position, the faulty unit is in that subsystem.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - MAINTENANCE PRACTICES

1. General

A. Skydrol Safety Precautions

- (1) Before performing any operation on the hydraulic system, personnel should read and thoroughly understand the following precautions to be observed when working with Skydrol hydraulic fluid.

WARNING: OBSERVE THE FOLLOWING SAFETY PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. LONG EXPOSURE TO SKYDROL CAN CAUSE SKIN DEHYDRATION AND CHAPPING.

- (2) Wash hands thoroughly with soap and water before starting work.
- (3) Apply barrier cream to hands, wrists, and forearms. Rub cream under fingernails and into creases of skin.
- (4) Wear goggles when pressure testing components or systems, and whenever there is any possibility of Skydrol splashing into eyes.
- (5) If Skydrol splashes into eyes, treat eyes immediately by irrigating thoroughly with clear cold water, and report the incident.
- (6) Wash hands, wrists, and forearms with soap and hot water whenever they have come in contact with Skydrol.
- (7) If clothing becomes soaked with Skydrol; remove clothing as soon as possible, thoroughly wash skin, and put on clean clothing.

B. Technical Precautions

- (1) Before any maintenance is performed on the hydraulic system, personnel should read and thoroughly understand the following precautions. Careful adherence to these instructions will aid in maintaining a functional and trouble-free system.

CAUTION: OBSERVE THE FOLLOWING TECHNICAL PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. SKYDROL WILL ATTACK A WIDE RANGE OF MATERIALS INCLUDING RUBBER, COPPER, VARIOUS PLASTICS, AND PAINTS.

- (2) Ensure that Skydrol does not come into contact with any part of aircraft outside of the hydraulic system. Keep spillage to an absolute minimum. Clean up spilled hydraulic fluid immediately to prevent entry into adjacent areas of the airplane precluding future false hydraulic leak reports. If spillage occurs, wipe up the fluid with a dry cloth and wash contaminated area with soap and hot water.
- (3) When lines are disconnected and/or components are removed, provide suitable protection to prevent foreign material from entering the lines or components by use of caps, covers, clean lint-free rags, etc.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) When electrical connectors are disconnected, install caps or other suitable protectors to prevent entry of hydraulic fluid, moisture, and foreign objects.
- (5) Always check position and angle of all fittings removed from components to ensure placement and alignment when installing replacement components.
- (6) When washing metal parts before assembly, use only approved solvent, and ensure that all traces of the solvent are removed before assembly.
- (7) Use only clean Skydrol for flushing or testing hydraulic components.
- (8) Use only clean Skydrol when filling reservoirs, sumps, filter bowls, pumps, etc., before installation of components.
- (9) Do not unpack Skydrol O-rings and seals until required. Ensure that only approved rings and seals are used.
- (10) When assembling O-rings and seals, lubricate with Skydrol Assembly Lubricant, MCS 352, Monsanto Chemical Co., or clean Skydrol hydraulic fluid.
- (11) Take care to prevent contamination of Skydrol with other materials (oils, water, dirt, etc.).
- (12) If a system becomes contaminated with any petroleum-based oil or solvent, drain the system and flush with clean Skydrol.


C. Landing Gear Precautions

- (1) The landing gear control lever should be in the down position and the landing gear ground lockpins should be installed in the main and nose gears at all times during ground maintenance, except as noted in maintenance procedural steps.
- (2) The main gear wheels should be chocked at all times during ground maintenance, except as noted in maintenance procedural steps.
- (3) The hydraulic system selector control lever should be in the general system (normal) position at all times during ground maintenance, except as noted in maintenance procedural steps.

D. Hydraulic Power System O-Rings

- (1) O-rings used in the installation of hydraulic power system components are shown in Figure 201. O-rings required for the landing gear, power control system, etc., will be found in the applicable chapters.
- (2) O-ring part numbers shown in Figure 201 are interchangeable with Douglas standard (S-XXXXXXX) numbers listed in the Illustrated Parts Catalog and on engineering drawings.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

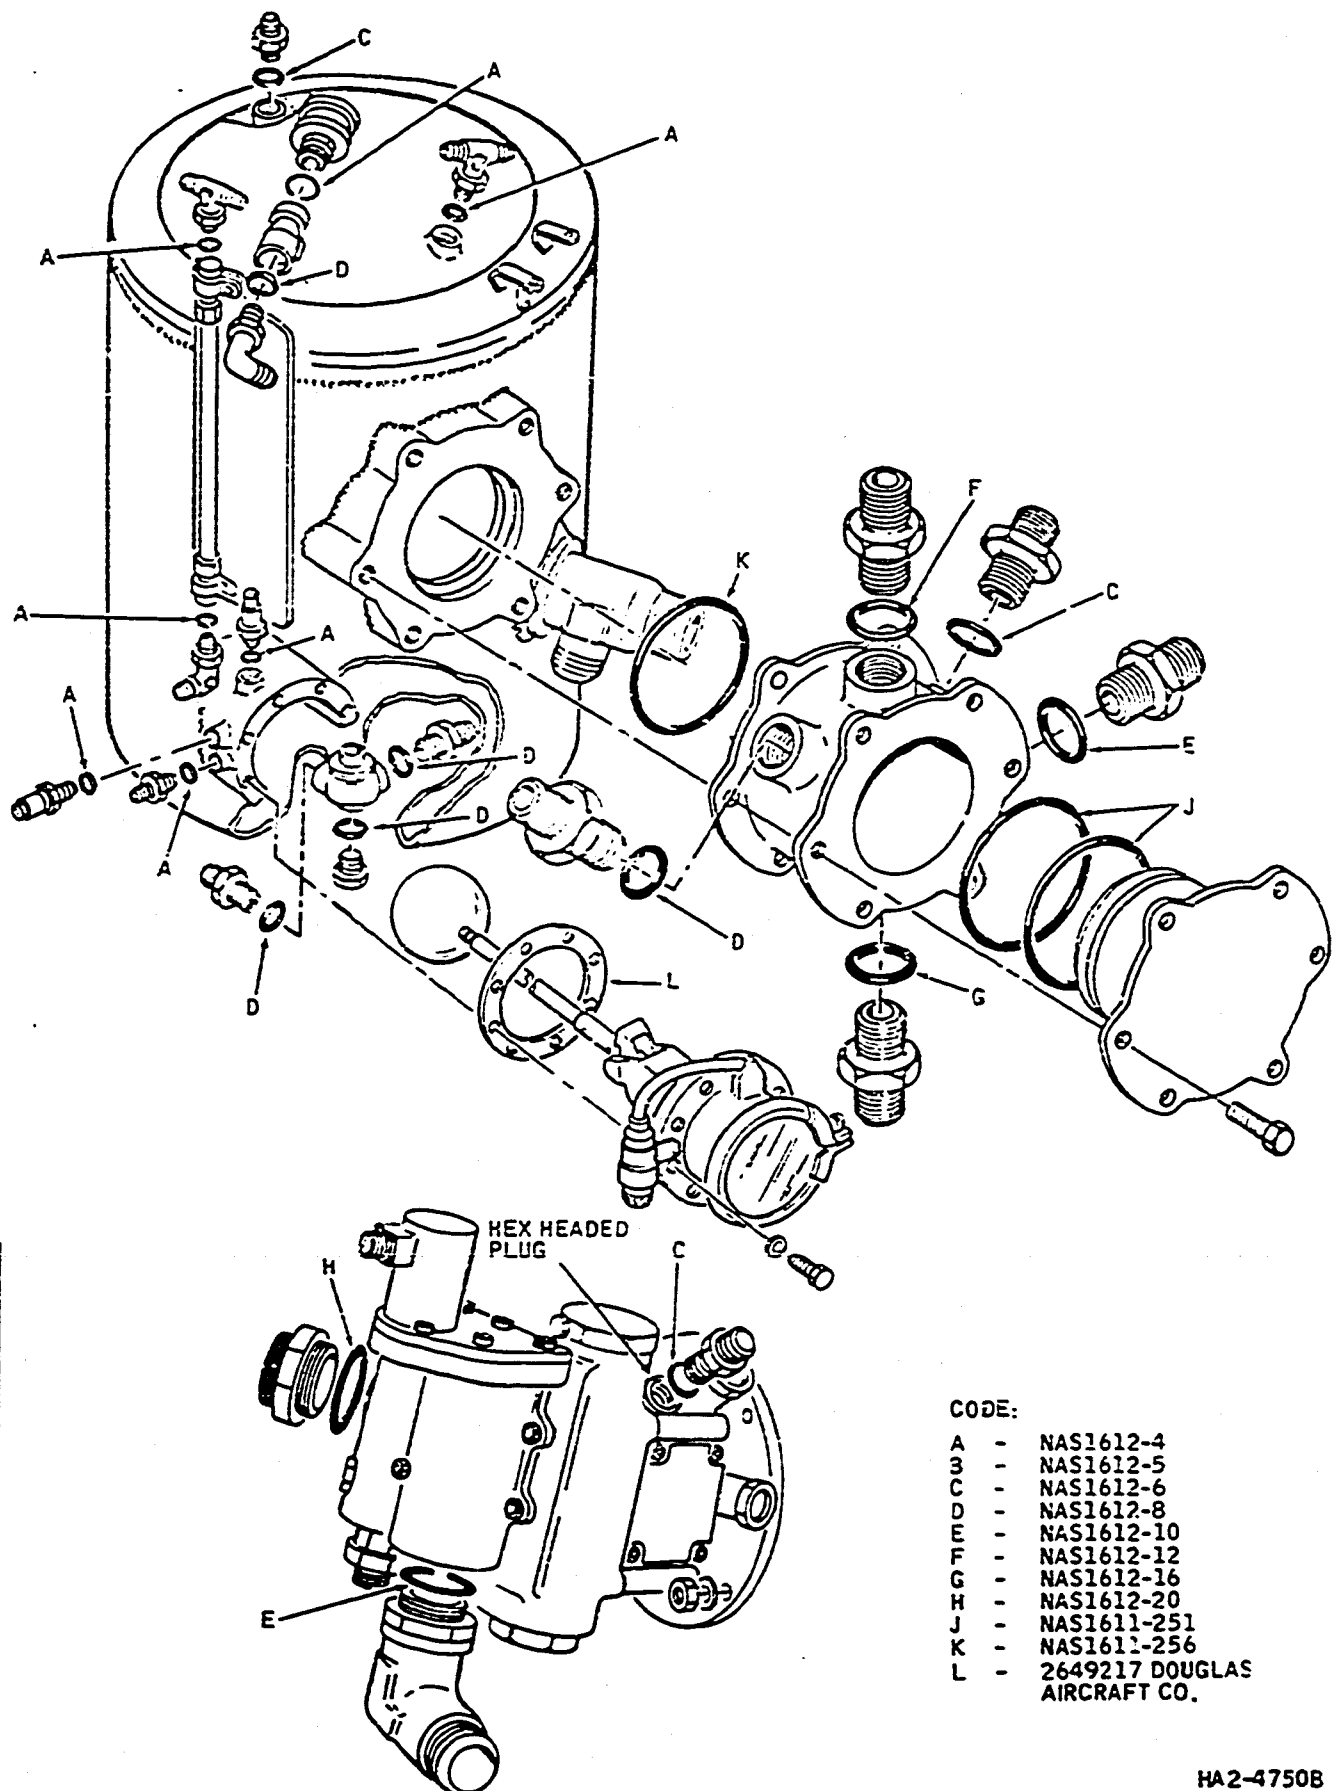

Hydraulic Power System Components -- O-Rings  
 Figure 201 (Sheet 1 )

Dec 1/73


Printed in U.S.A.

HA2-4750B


29-00  
 CODE 11  
 Page 203




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

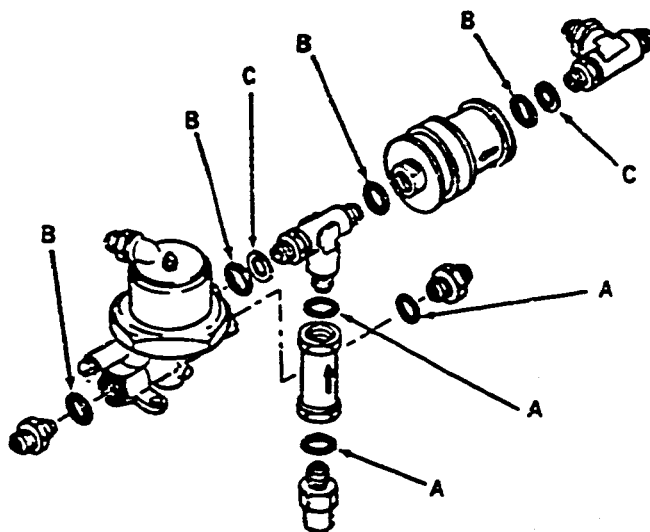


REGULATOR - ASPIRATOR  
 AND AIR FILTERS

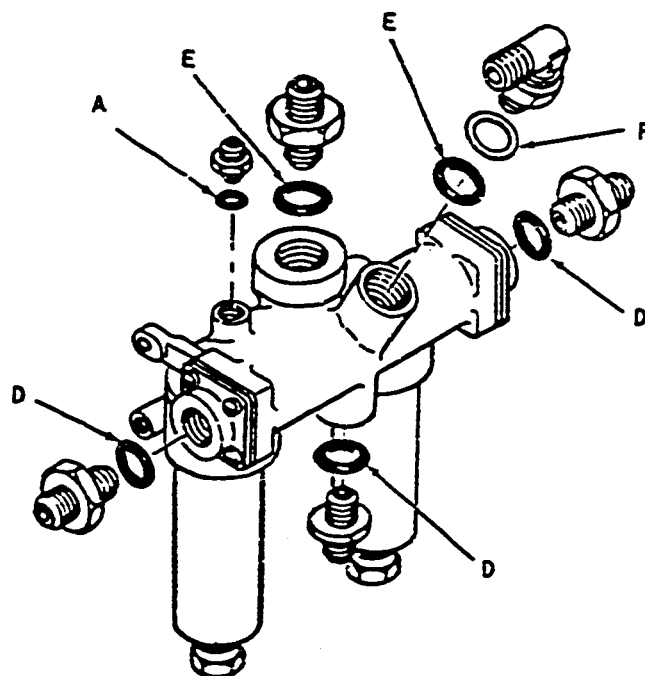

DUAL-FILTER &  
 RELIEF VALVE

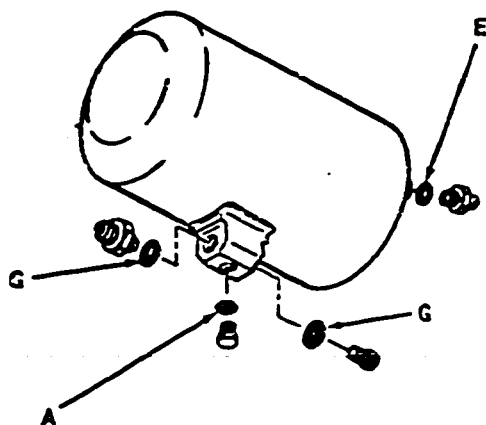

HYDRAULIC RESERVOIR  
 AIR CHAMBER

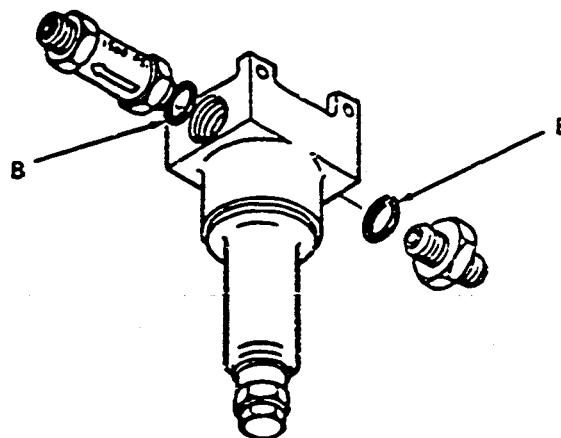


HYDRAULIC  
 PUMPCASE DRAIN  
 FILTER

CODE

- A - NAS1612-4
- B - NAS1612-6
- C - MS28777-6 \*
- D - NAS1612-10
- E - NAS1612-12
- F - MS28777-12 \*
- G - NAS1612-16
- \* - BACKUP RING

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

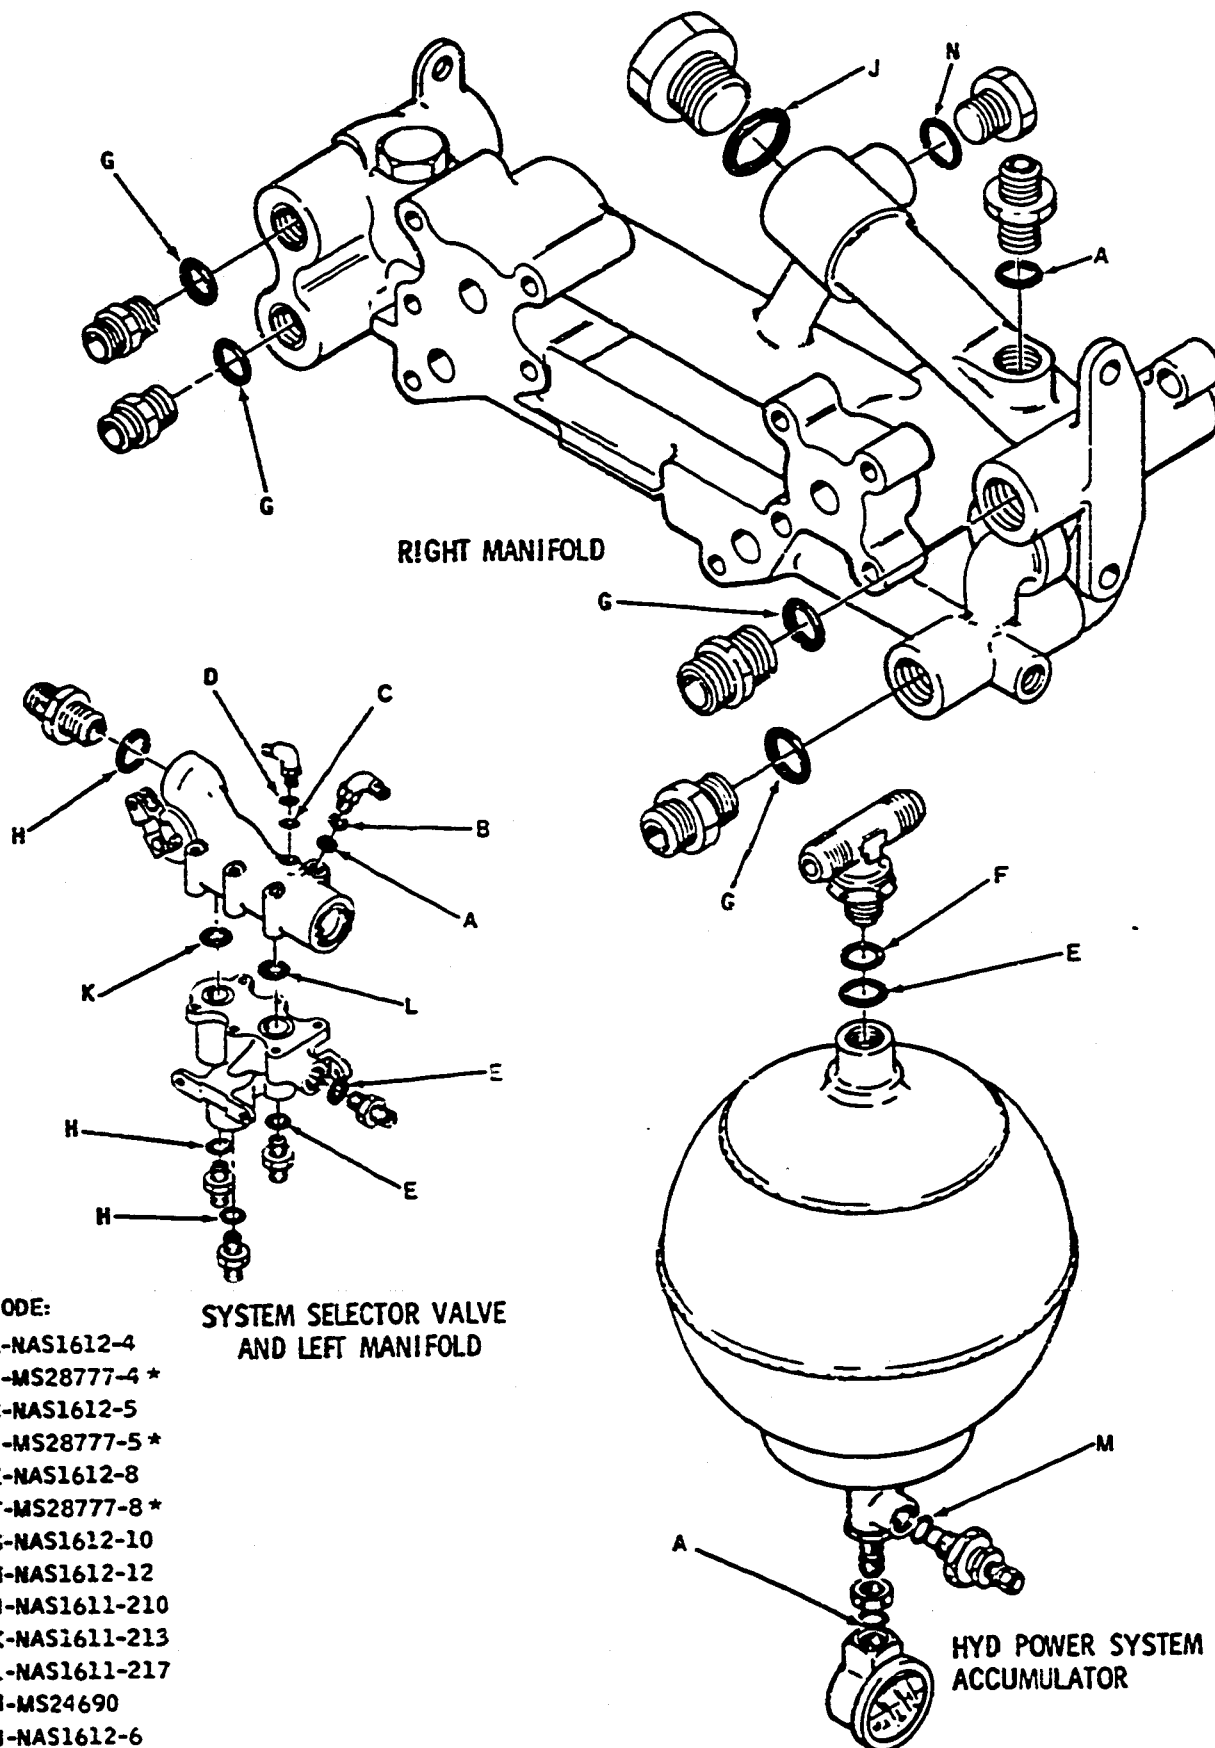

CODE:

A-NAS1612-4  
 B-MS28777-4 \*  
 C-NAS1612-5  
 D-MS28777-5 \*  
 E-NAS1612-8  
 F-MS28777-8 \*  
 G-NAS1612-10  
 H-NAS1612-12  
 J-NAS1611-210  
 K-NAS1611-213  
 L-NAS1611-217  
 M-MS24690  
 N-NAS1612-6  
 \*-BACKUP RING

SYSTEM SELECTOR VALVE  
 AND LEFT MANIFOLD

HYD POWER SYSTEM  
 ACCUMULATOR

Hydraulic Power System Components -- O-Rings  
 Figure 201 (Sheet 3)


Jan 15/68

Printed in U.S.A.


HA2-1678A

29-00  
 CODE 11  
 Page 205


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

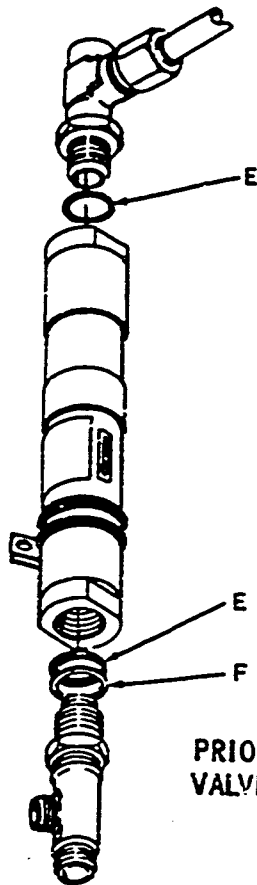


PRIORITY  
VALVE

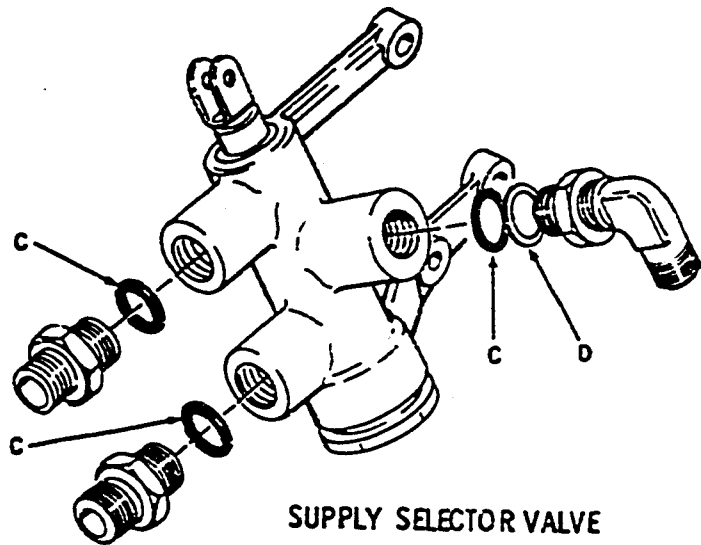


SUPPLY SELECTOR VALVE

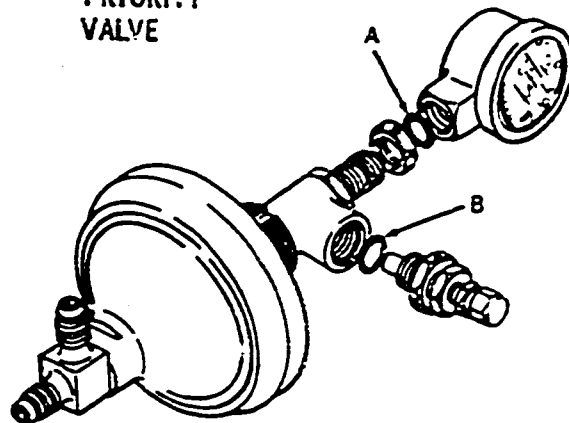

SURGE DAMPER ACCUMULATOR

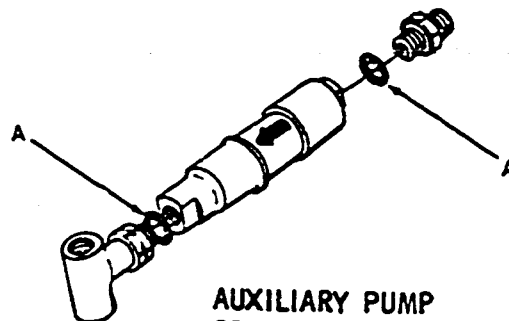

AUXILIARY PUMP  
RELIEF VALVE

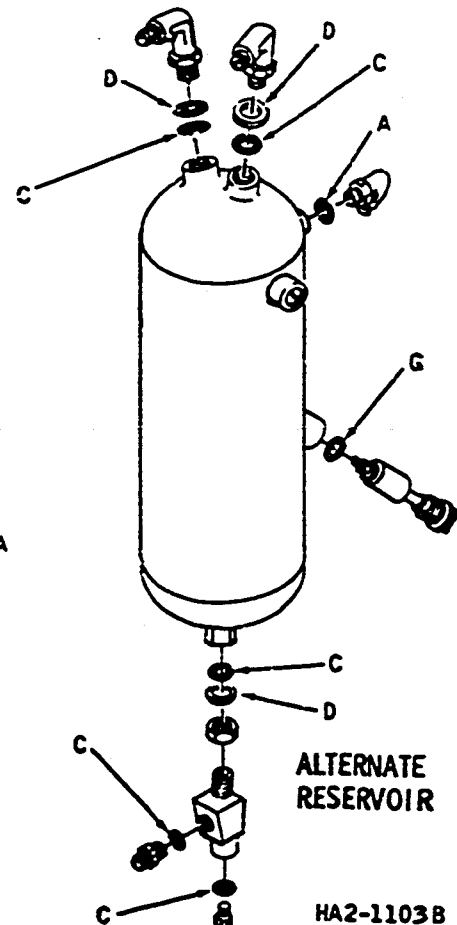


ALTERNATE  
RESERVOIR

CODE  
 A-NAS1612-4  
 B-MS2469-4  
 C-NAS1612-8  
 D-MS28777-8\*  
 E-NAS1612-12  
 F-MS28777-12\*  
 G-NAS1612-20

\*BACKUP RING

HA2-1103B


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

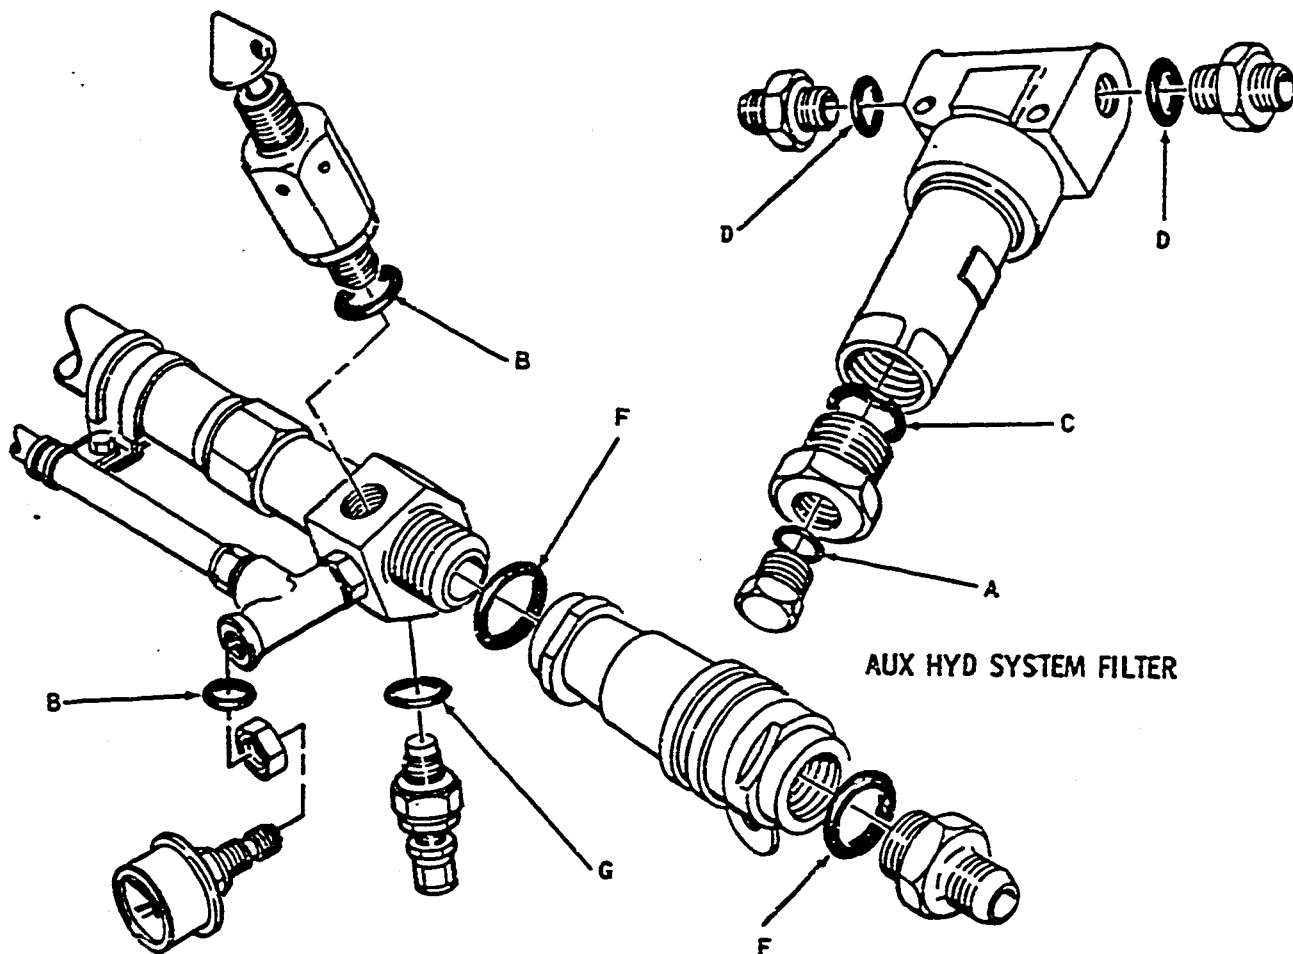

RESERVOIR AIR BLEED VALVE,  
 FILTER VALVE, PRESSURE GAGE  
 AND RELIEF VALVE

CODE

- A - NAS1612-2
- B - NAS1612-4
- C - NAS1612-6
- D - NAS1612-8
- E - NAS1612-10
- F - NAS1612-12
- G - MS24690

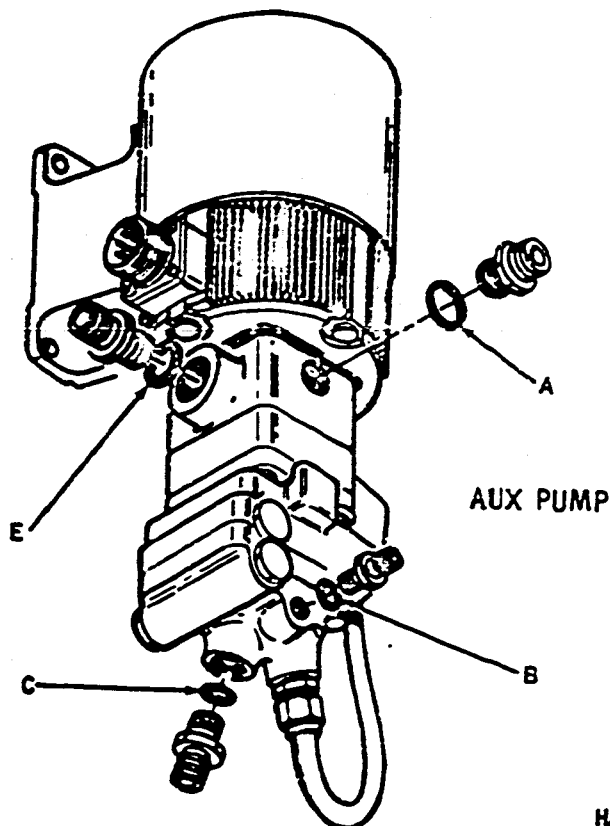

HA2-1679A

Hydraulic Power System Components -- O-Rings  
 Figure 201 (Sheet 5)

Jan 15/68

Printed in U.S.A.

29-00  
 CODE 11  
 Page 207

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

2. Pressurize/Depressurize Hydraulic System

A. Pressurize Hydraulic System with External Hydraulic Source Pressure

- (1) Tools and Equipment Required: A hydraulic test stand equipped with a variable-displacement hydraulic pump capable of delivering 20 gpm at 3000 psi, using Skydrol hydraulic fluid. The maximum permissible operating temperature should not exceed 180°F (82.2°C).
- (2) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (3) Make certain that wing flap control handle agrees with wing flap position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Remove dust caps from airplane ground service connections and connect test stand pressure and supply hoses.
- (6) Energize test stand hydraulic pump; pressurize hydraulic system to 3000 psi.

WARNING: BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

B. Depressurize and Disconnect

- (1) Check hydraulic fluid level of hydraulic reservoir; fill if necessary as described on instruction placard on reservoir.
- (2) Deenergize test stand hydraulic pump.
- (3) Depressurize hydraulic system by operating the brakes and manually moving the longitudinal trim handle until horizontal stabilizer movement stops.
- (4) Disconnect and cap test stand pressure and supply hoses from airplane ground service connections; install duct caps on connections and close access door.

C. Pressurize Hydraulic System with Auxiliary Hydraulic Pump Pressure

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Make certain that wing flap control handle agrees with wing flap position.
- (3) Place hydraulic system selector control lever in general system/bypass position.
- (4) Check that airplane electrical buses are energized (see Chapter 24).
- (5) Start auxiliary hydraulic pump by placing auxiliary hydraulic pump control switch momentarily in start position. Pressure indicated in the flight compartment should be 2600 to 3000 psi.

WARNING: BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

CAUTION: DO NOT HOLD THE AUXILIARY HYDRAULIC PUMP CONTROL SWITCH IN THE START (HOLD ONLY IN EMERGENCY) POSITION FOR NORMAL PRESSURIZATION.

D. Depressurize

- (1) Stop auxiliary hydraulic by placing auxiliary hydraulic pump control switch momentarily in stop position.
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.
- (3) Place hydraulic system selector control lever in general system (normal) position.

E. Pressurize Hydraulic System with Engine-Driven Hydraulic Pump Pressure

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap handle agrees with wing flap position.
- (3) Make certain that applicable fire control handle is in normal position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Make certain that applicable engine-driven hydraulic pump control switch is in on position.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Start engine No. 2 or No. 3 (see Chapter 71). Hydraulic pressure indicated in the flight compartment should be 2800 to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

F. Depressurize

- (1) Shut down engine (see Chapter 71).
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.

3. Pressurize/Depressurize Hydraulic Reservoir

A. General

- (1) The air inflation valve, air bleed valve, and air pressure gage for manually pressurizing and depressurizing the hydraulic reservoir and air chamber are located on the aft side of the wing rear spar, at the forward end of the left main gear wheel well. The valves and gage are mounted on a cross fitting just inboard of the reservoir air hamber. Access is through the left main gear inboard door.

B. Tools and Equipment Required

- (1) Pressure cylinder (clean dry compressed air or nitrogen).

C. Pressurize Hydraulic Reservoir

**NOTE:** Normal air pressure in the reservoir and air chamber should be between 30 and 35 psi.

**NOTE:** There are three methods of pressurizing the hydraulic reservoir:

- (1) Run an inboard engine.
- (2) Connect and operate a hydraulic test stand.
- (3) Direct pressurization of air chamber by introduction of compressed air or nitrogen.

The first two methods are automatic in that the reservoir is pressurized by action of the hydraulic fluid through the regulator-aspirator when the system is pressurized. The third method (direct inflation) will be described in the following steps.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

(1) Remove air inflation valve cap and attach pressure cylinder service hose to inflation valve.

(2) Loosen inflation valve swivel nut three complete turns.

NOTE: The rate of inflation (flow through the valve) is governed by the degree of opening of the swivel valve.

(3) Pressurize reservoir to 30 to 35 psi reading on air pressure gage.

(4) Tighten swivel nut.

(5) Disconnect service hose and install valve cap.

CAUTION: THE AIR INFLATION VALVE IS A STANDARD "AN" VALVE WHICH HAS BEEN MODIFIED BY INSTALLATION OF SKYDROL TYPE SEALS. DO NOT REPLACE THE VALVE WITH A VALVE WHICH HAS NOT BEEN MODIFIED FOR SKYDROL.

D. Depressurize Hydraulic Reservoir

(1) Depress air bleed valve button; hold until all pressure has bled off and pressure gage reads zero.

4. Drain Hydraulic System Reservoir

A. Tools and Equipment Required

(1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.

(2) Clean container of approximately 20 US gallons (16.65 Imperial gallons or 75.7 liters) capacity.

B. Drain Reservoir

(1) Depressurize hydraulic system and reservoir (see paragraphs 2 and 3).

(2) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.

(3) Remove drain unit, and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

Drain Auxiliary Hydraulic Pump Alternate Reservoir

A. Tools and Equipment Required

(1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Clean container of approximately 3 US gallons (2.5 Imperial gallons or 11.5 liters) capacity.

B. Drain Reservoir

- (1) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (2) Remove drain unit and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

6. Hydraulic System Pressure Decay Rates

A. Decay Rate Test

- (1) By observing the time it takes for the hydraulic system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi, it is possible, in most cases, to detect units that are leaking excessively. This procedure is not infallible because the sum of the maximum allowable leakage rates determines the minimum time permissible for pressure decay. The hydraulic system with average leakage will maintain pressure for longer periods than indicated and may do so even with one unit leaking excessively.
- (2) The main hydraulic system should be tested for pressure decay time under the following conditions:
  - (a) System selector valve in general system/bypass or general system (normal).
  - (b) Nosewheel straight ahead plus or minus 30 degrees and steering valve in neutral position.
  - (c) Manual main gear door valve open.
  - (d) Landing gear down and locked.
  - (e) Wing flaps up.
  - (f) Accumulators properly charged.
  - (g) Aileron shutoff valve off.
  - (h) Rudder shutoff valve off.
  - (i) Thrust reversers stowed.
- (3) Pressurize main hydraulic system to 2900 ( $\pm 100$ ) psi with auxiliary pump or hydraulic test stand. Then shut off hydraulic power source and note time interval required for system pressure to decrease 1000 psi. This

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

should be more than 34 seconds on a new airplane or more than 23 seconds on an airplane in service before overhaul. If pressure decay time is less, the main hydraulic system should be inspected for a malfunctioning unit.

- (4) If pressure decay test indicates that a unit in the main hydraulic system was leaking excessively, that unit may be in the nose or main gear subsystem, the main gear door subsystem, the flap subsystem, the slot subsystem, the selector valve, or the compressor subsystem. By placing the subsystem control valves in opposite positions one at a time and repeating the pressure decay test, it is possible that the faulty unit may be located.
- (5) Rudder power hydraulic system may be tested for pressure decay time by using procedures outlined in steps (2) and (3), except that the rudder shutoff valve should be on. Decay time should be more than 10 seconds on a new airplane or more than 8 seconds on an airplane in service before overhaul. If less, the rudder power system should be inspected for a malfunctioning unit.
- (6) Supplementary information may be obtained for the rudder power hydraulic system by using the auxiliary rudder system pump and accumulator air gage to test the time for rudder pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi. With the rudder hydraulic power shutoff valve off, the time should be more than 2 minutes. With the rudder hydraulic power shutoff valve on, the time should be 12 seconds on a new airplane and 10 seconds on an airplane in service before overhaul.
- (7) Aileron hydraulic power system may be tested for pressure decay by using procedures outlined in steps (2) and (3), except that the aileron hydraulic power shutoff valve should be on. The decay time should be more than 6-1/2 seconds on a new airplane or more than 4-1/2 seconds on an airplane in service before overhaul. If less, the aileron power system should be inspected for a malfunctioning unit.
- (8) Brake system and the nose gear steering system are isolated from the main hydraulic system by check valves and may be tested separately. Using the brake accumulator gages, the pressure decay time for the brake system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 10 hours with the parking brake off, and 2 hours with the parking brake on. With the brake accumulators fully charged deplete the general system pressure. Wait 3 to 5 minutes and then set the parking brake and hold the parking brake pressure for 15 minutes. The drop in pressure at the brake accumulators should not exceed 125 psi during this time.
- (9) Release the parking brakes, and build up brake accumulator pressure to 2900 ( $\pm 100$ ) psi. With hydraulic power off, and brakes off, check brake accumulator pressure. Drop in pressure at the accumulators should not exceed 100 psi in 30 minutes. Fast decay time for the brake system with parking brake off, indicates either a faulty brake valve or a faulty check valve in the right manifold. A fast decay time with the parking brake on indicates a faulty antiskid valve or a faulty brake valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (10) Using the gages on the nose pressure accumulators, the time for the nose gear steering system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 19 minutes. If less, one of the pressure check valves is faulty, or the nose gear steering control valve is faulty or out of neutral.

CAUTION: ALL LANDING GEAR GROUND LOCKPINS MUST BE INSTALLED BEFORE CONDUCTING THE FOLLOWING TEST.

- (11) Under conditions outlined in step (2), except with the landing gear control valve in the up position, the time for pressure decay should be unchanged. If time limits change more than 5 seconds as determined in paragraph (3), a faulty unit is in the gear subsystem.
- (12) Under conditions outlined in step (2), except with the main gear door manual control valve in the closed position, the decay time should be more than 24 seconds on a new airplane and 18 seconds on an airplane in service before overhaul. If less, the faulty unit is in the main gear door subsystem.
- (13) Under conditions outlined in step (2), except with the flap control valve in the down position, the decay time should be more than 24 seconds on a new airplane and 17 seconds on an airplane in service before overhaul. If less, the faulty unit is in the flap subsystem.
- (14) Under conditions outlined in step (2), time limit for pressure decay should remain unchanged as determined in paragraph (3) with the slot valve in either position, or the selector valve in either general system/bypass or general system (normal). If the time changes with a change of valve position, the faulty unit is in that subsystem.
- (15) The thrust reverser system is isolated from the main system by an electrically operated shutoff valve which is open only during thrust reverser actuation. Therefore, main system decay is not affected by the thrust reverser system except during reverser actuation or at the thrust reverser extended position. Additional information may be obtained for the thrust reverser system by using the auxiliary reverser system pump and reverser system pressure gage or accumulator gage to test the time for reverser pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi. With the reversers in the stowed position, the decay time should be greater than 3 minutes on a new aircraft or greater than 1-1/2 minutes on an aircraft in service before overhaul. If times are less the reverser system should be inspected for a malfunction.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - MAINTENANCE PRACTICES

1. General

A. Skydrol Safety Precautions

- (1) Before performing any operation on the hydraulic system, personnel should read and thoroughly understand the following precautions to be observed when working with Skydrol hydraulic fluid.

WARNING: OBSERVE THE FOLLOWING SAFETY PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. LONG EXPOSURE TO SKYDROL CAN CAUSE SKIN DEHYDRATION AND CHAPPING.

- (2) Wash hands thoroughly with soap and water before starting work.
- (3) Apply barrier cream to hands, wrists, and forearms. Rub cream under fingernails and into creases of skin.
- (4) Wear goggles when pressure testing components or systems, and whenever there is any possibility of Skydrol splashing into eyes.
- (5) If Skydrol splashes into eyes, treat eyes immediately by irrigating thoroughly with clear cold water, and report the incident.
- (6) Wash hands, wrists, and forearms with soap and hot water whenever they have come in contact with Skydrol.
- (7) If clothing becomes soaked with Skydrol; remove clothing as soon as possible, thoroughly wash skin, and put on clean clothing.

B. Technical Precautions

- (1) Before any maintenance is performed on the hydraulic system, personnel should read and thoroughly understand the following precautions. Careful adherence to these instructions will aid in maintaining a functional and trouble-free system.

CAUTION: OBSERVE THE FOLLOWING TECHNICAL PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. SKYDROL WILL ATTACK A WIDE RANGE OF MATERIALS INCLUDING RUBBER, COPPER, VARIOUS PLASTICS, AND PAINTS.

- (2) Ensure that Skydrol does not come into contact with any part of aircraft outside of the hydraulic system. Keep spillage to an absolute minimum. Clean up spilled hydraulic fluid immediately to prevent entry into adjacent areas of the airplane precluding future false hydraulic leak reports. If spillage occurs, wipe up the fluid with a dry cloth and wash contaminated area with soap and hot water.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) When lines are disconnected and/or components are removed, provide suitable protection to prevent foreign material from entering the lines or components by use of caps, covers, clean lint-free rags, etc.
- (4) When electrical connectors are disconnected, install caps or other suitable protectors to prevent entry of hydraulic fluid, moisture, and foreign objects.
- (5) Always check position and angle of all fittings removed from components to ensure placement and alignment when installing replacement components.
- (6) When washing metal parts before assembly, use only approved solvent, and ensure that all traces of the solvent are removed before assembly.
- (7) Use only clean Skydrol for flushing or testing hydraulic components.
- (8) Use only clean Skydrol when filling reservoirs, sumps, filter bowls, pumps, etc., before installation of components.
- (9) Do not unpack Skydrol O-rings and seals until required. Ensure that only approved rings and seals are used.
- (10) When assembling O-rings and seals, lubricate with Skydrol Assembly Lubricant, MCS 352, Monsanto Chemical Co., or clean Skydrol hydraulic fluid.
- (11) Take care to prevent contamination of Skydrol with other materials (oils, water, dirt, etc.).
- (12) If a system becomes contaminated with any petroleum-based oil or solvent, drain the system and flush with clean Skydrol.

C. Landing Gear Precautions

- (1) The landing gear control lever should be in the down position and the landing gear ground lockpins should be installed in the main and nose gears at all times during ground maintenance, except as noted in maintenance procedural steps.
- (2) The main gear wheels should be chocked at all times during ground maintenance, except as noted in maintenance procedural steps.
- (3) The hydraulic system selector control lever should be in the general system (normal) position at all times during ground maintenance, except as noted in maintenance procedural steps.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

D. Hydraulic Power System O-Rings

- (1) O-rings used in the installation of hydraulic power system components are shown in Figure 201. O-rings required for the landing gear, power control systems, etc., will be found in the applicable chapters.
- (2) O-ring part numbers shown in Figure 201 are interchangeable with Douglas standard (S-XXXXXXXX) numbers listed in the Illustrated Parts Catalog and on engineering drawings.

2. Pressurize/Depressurize Hydraulic System

A. Pressurize Hydraulic System with External Hydraulic Source Pressure


- (1) Tools and Equipment Required: A hydraulic test stand equipped with a variable-displacement hydraulic pump capable of delivering 20 gpm at 3000 psi, using Skydrol hydraulic fluid. The maximum permissible operating temperature should not exceed 180°F (82.2°C).
- (2) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (3) Make certain that wing flap control handle agrees with wing flap position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Remove dust caps from airplane ground service connections and connect test stand pressure and supply hoses.
- (6) Energize test stand hydraulic pump pressurize hydraulic system to 3000 psi.

WARNING: BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

B. Depressurize and Disconnect


- (1) Check hydraulic fluid level of hydraulic reservoir; fill if necessary as described on instruction placard on reservoir.
- (2) Deenergize test stand hydraulic pump.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

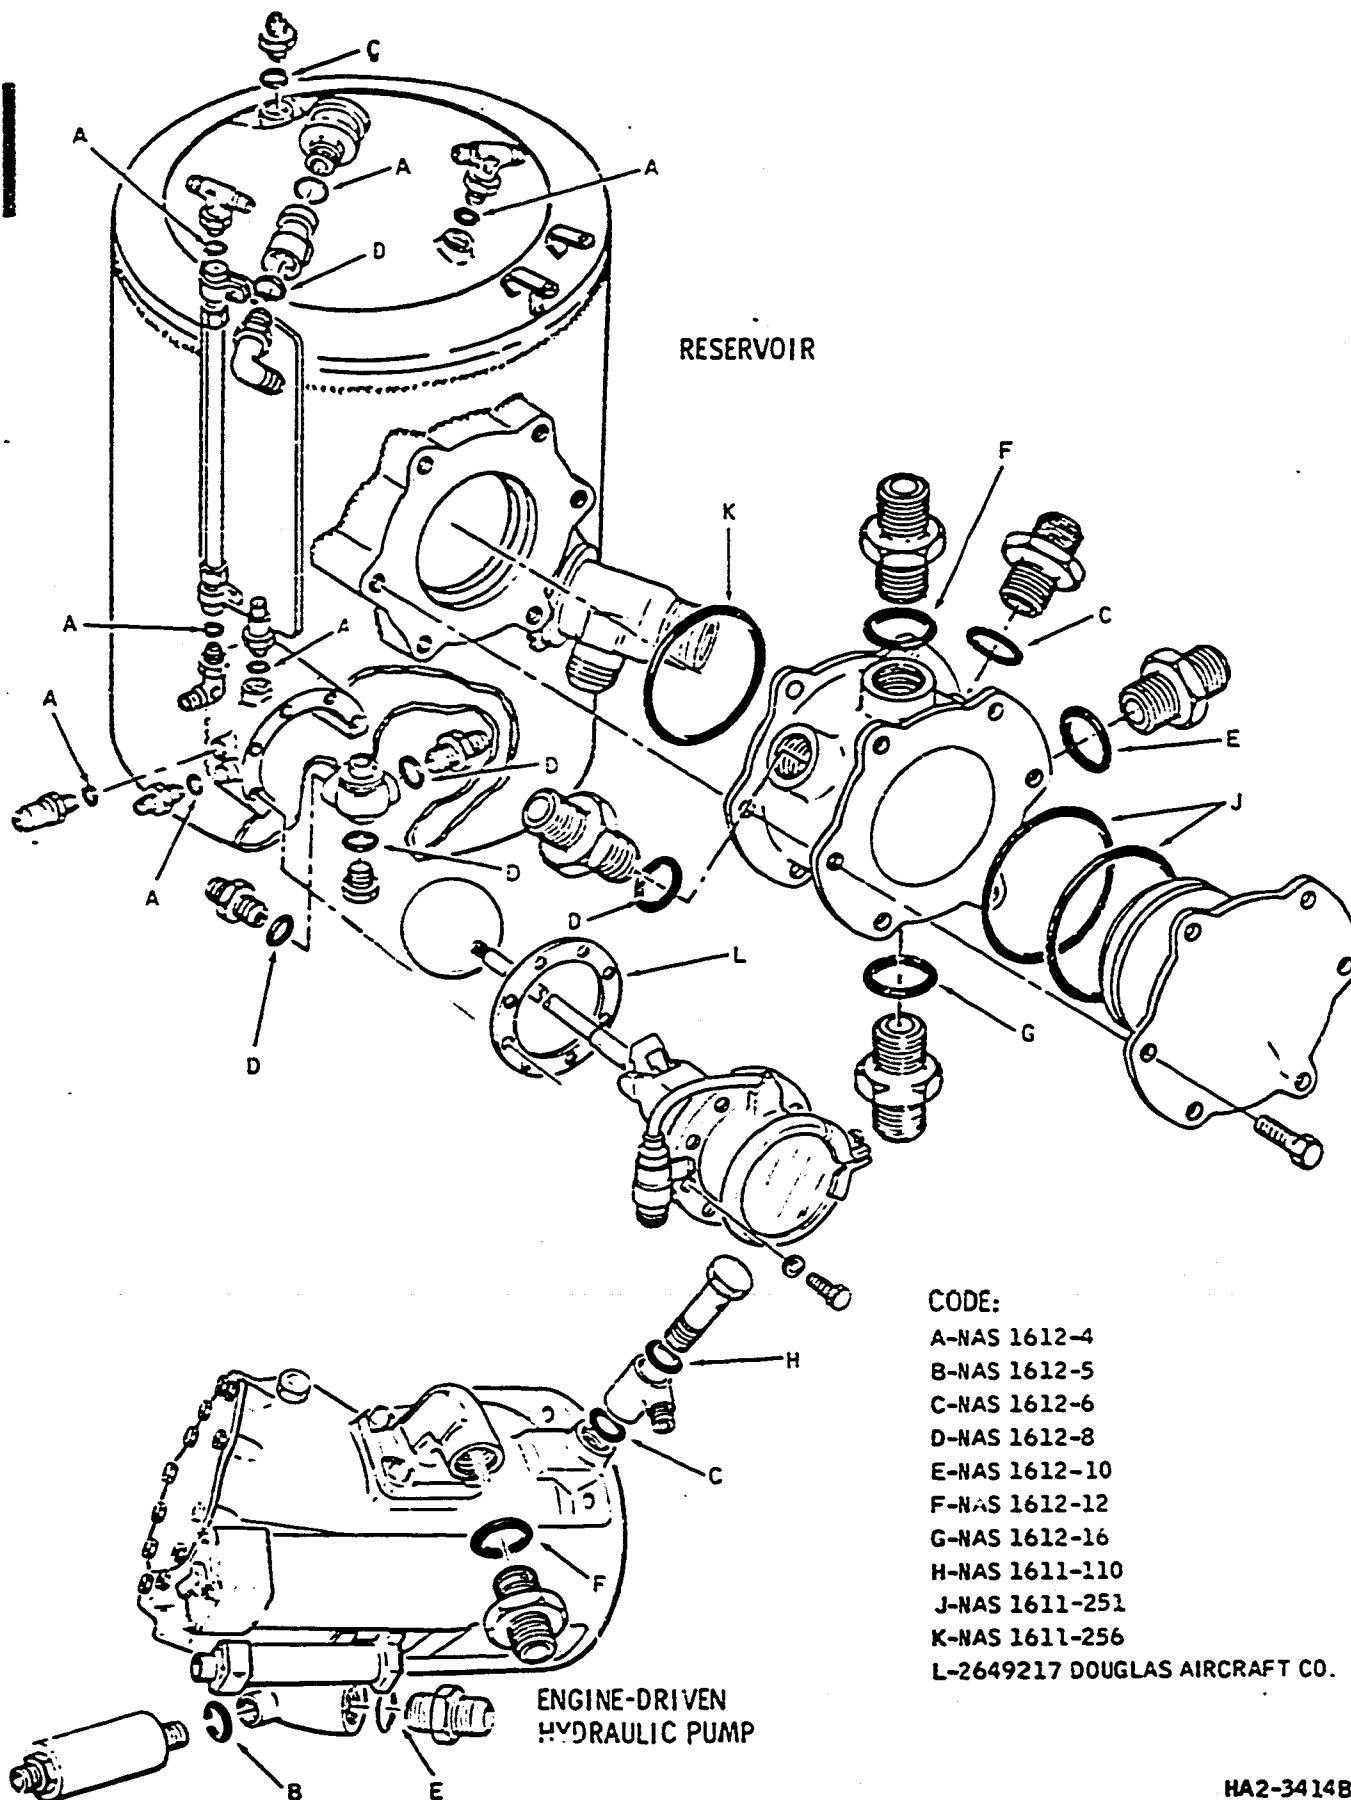


HA2-3414B


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

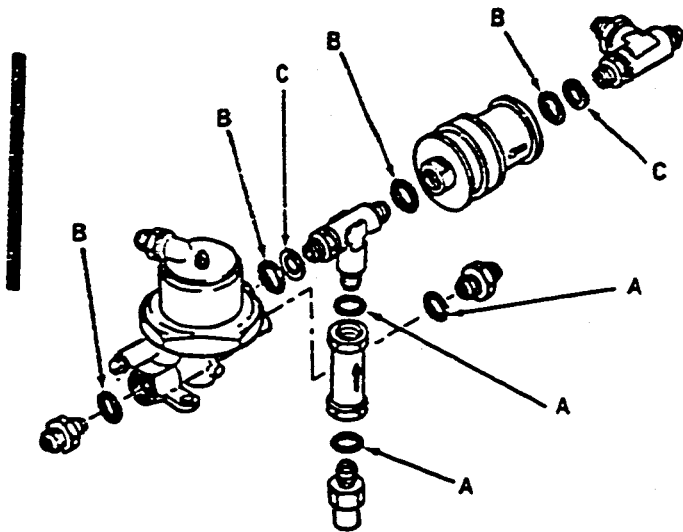


REGULATOR - ASPIRATOR  
 AND AIR FILTERS

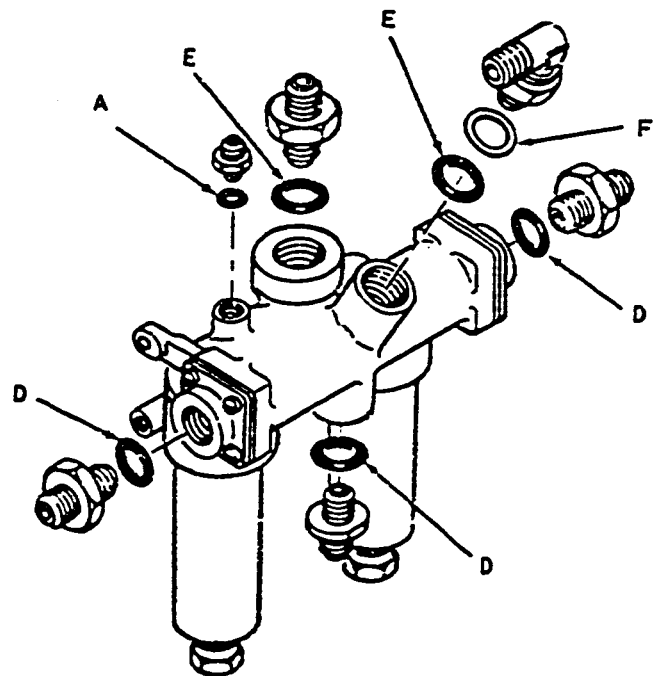

DUAL-FILTER &  
 RELIEF VALVE

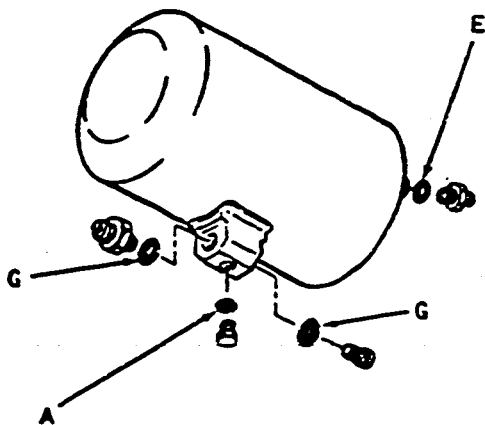

HYDRAULIC RESERVOIR  
 AIR CHAMBER

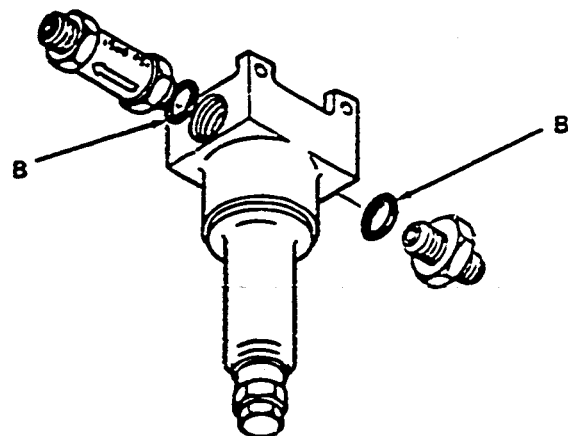

HYDRAULIC  
 PUMPCASE DRAIN  
 FILTER

CODE

- A - NAS1612-4
- B - NAS1612-6
- C - MS28777-6 \*
- D - NAS1612-10
- E - NAS1612-12
- F - MS28777-12 \*
- G - NAS1612-16
- \* - BACKUP RING

HA2-3415B


Hydraulic Power System Components -- O-Rings  
 Figure 201 (Sheet 2)

Feb 1/69

29-00  
 CODE 12  
 Page 205




DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

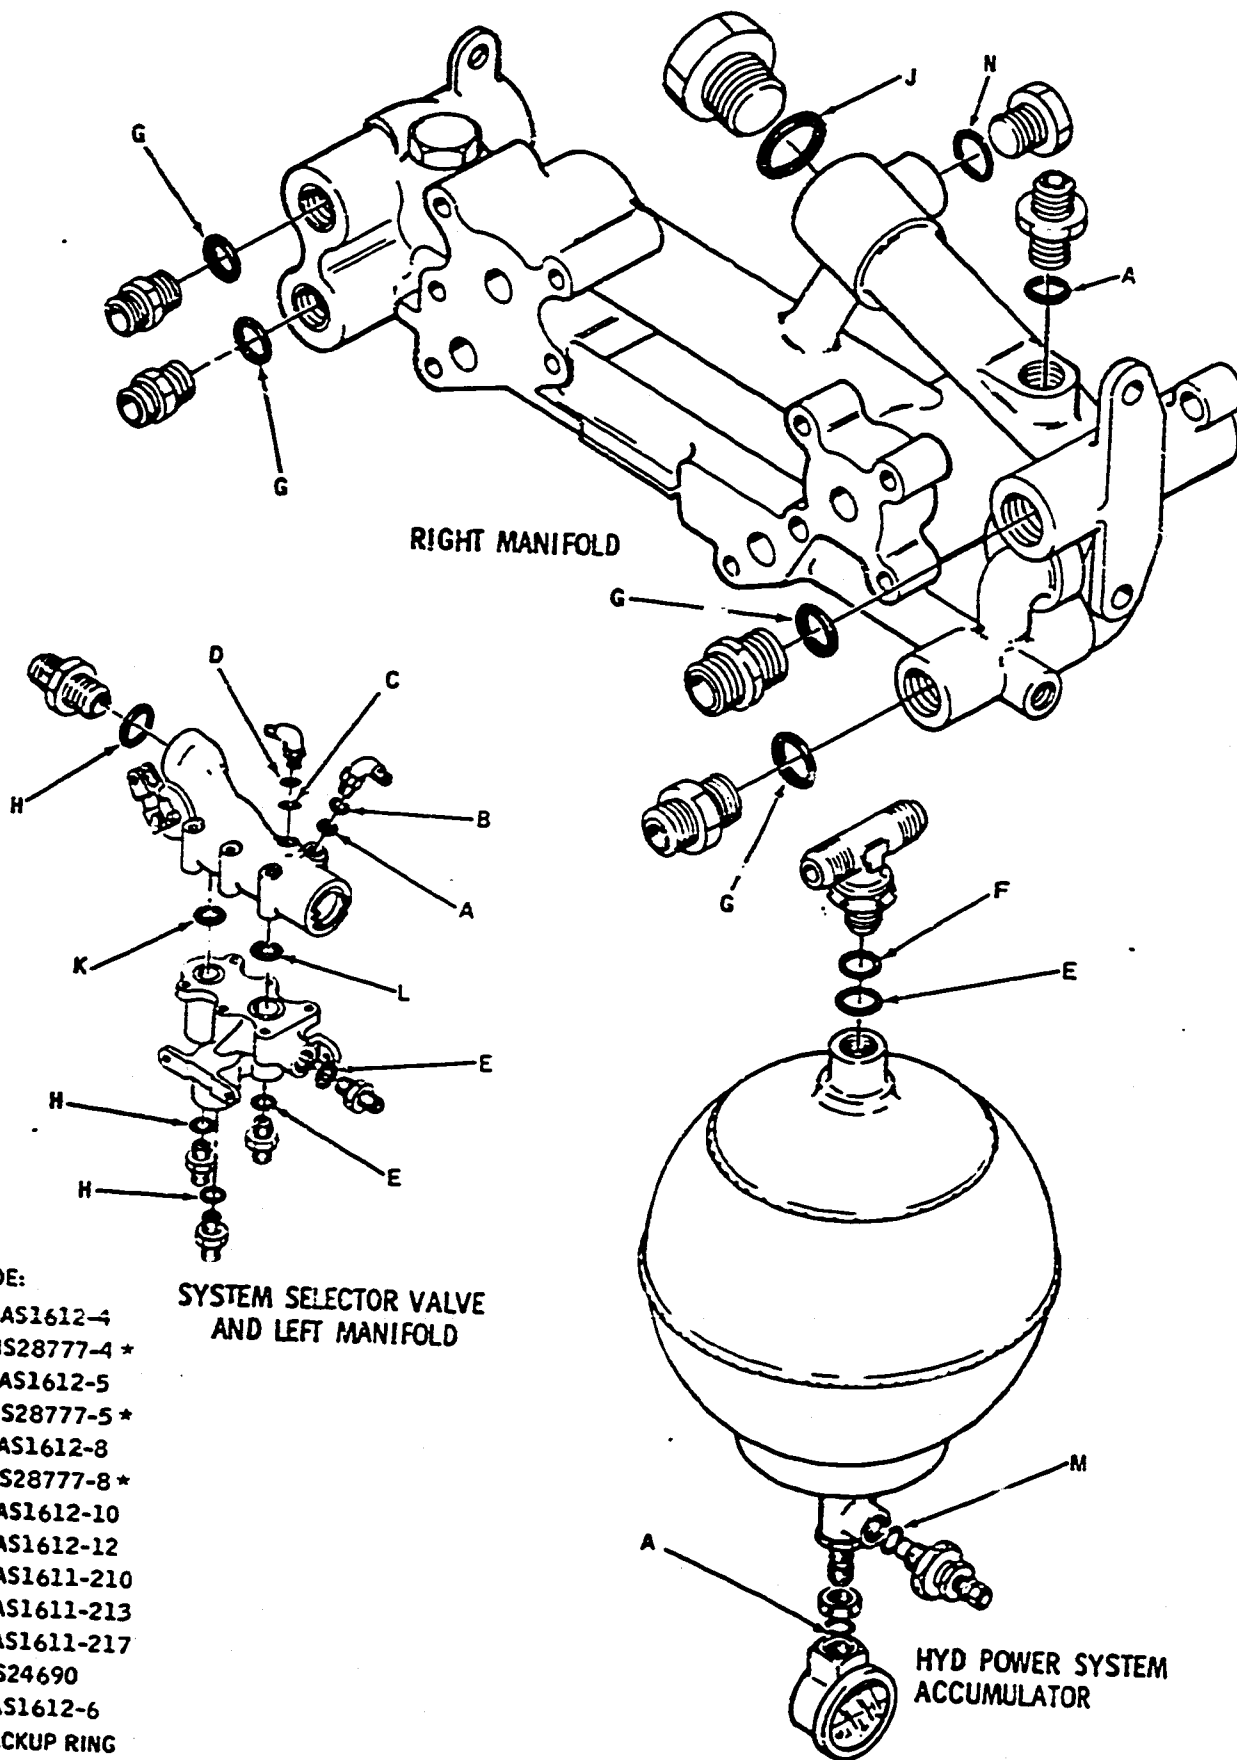


HA2-1678A


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

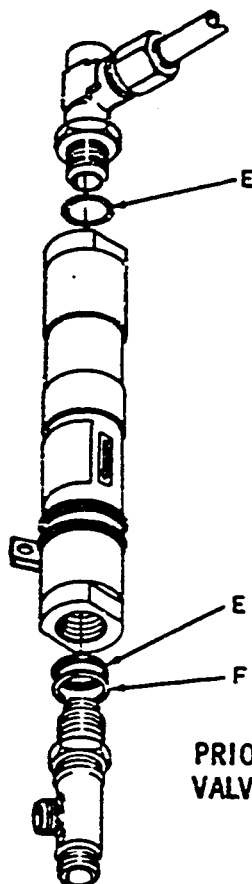

PRIORITY  
VALVE

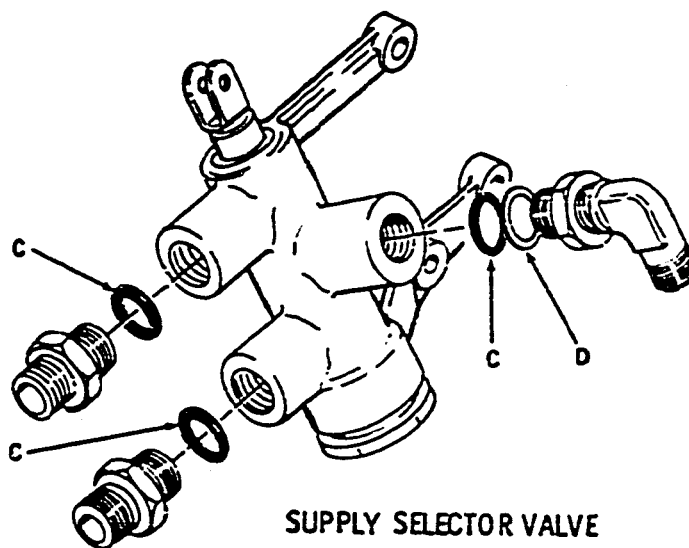


SUPPLY SELECTOR VALVE

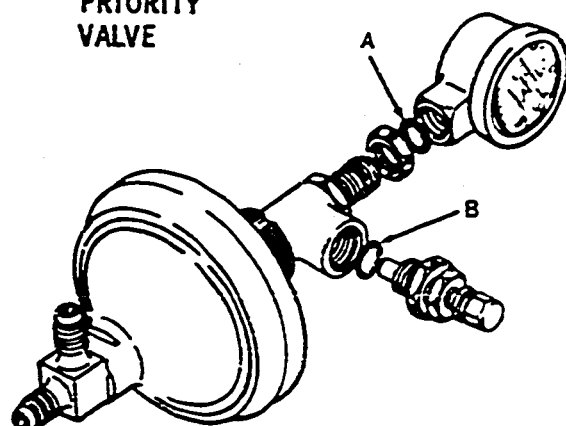


SURGE DAMPER ACCUMULATOR

CODE  
 A-NAS1612-4  
 B-MS2469-4  
 C-NAS1612-8  
 D-MS28777-8\*  
 E-NAS1612-12  
 F-MS28777-12\*  
 G-NAS1612-20

\* BACKUP RING

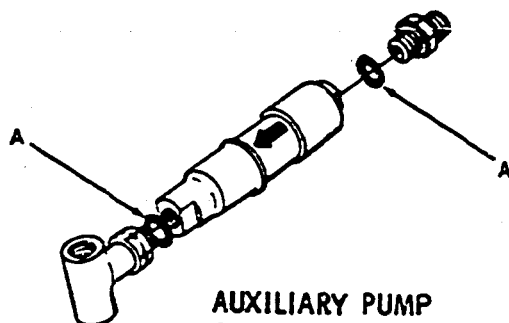

AUXILIARY PUMP  
RELIEF VALVE

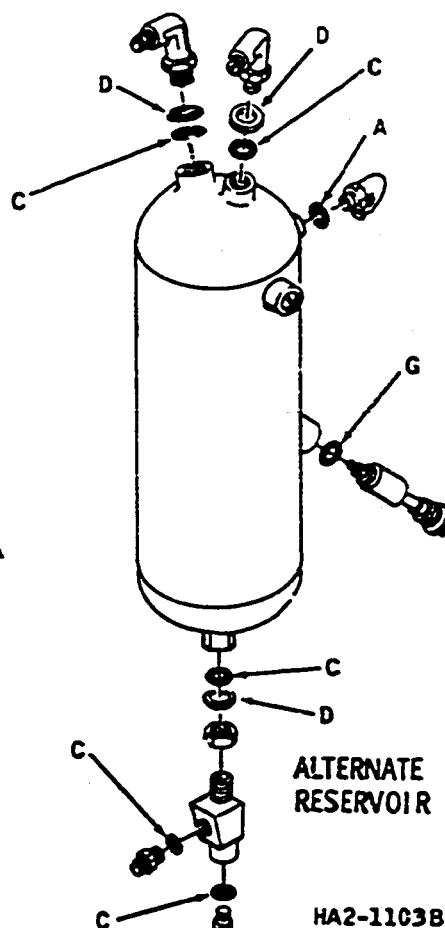

ALTERNATE  
RESERVOIR


HA2-1103B

Hydraulic Power System Components -- O-Rings  
 Figure 201 (Sheet 4)

Feb 1/69

29-00  
 CODE 12  
 Page 207


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

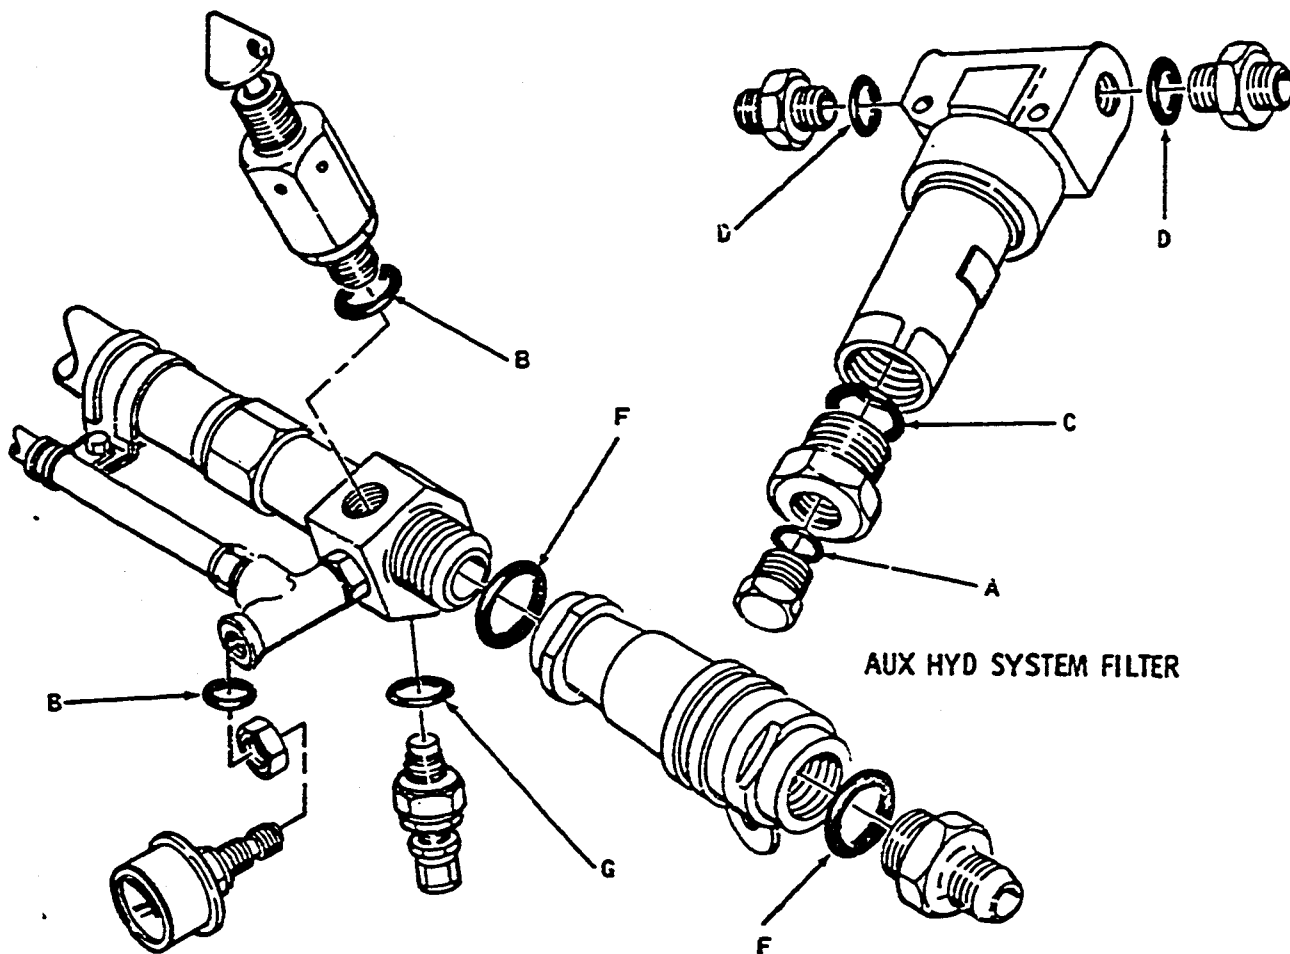

RESERVOIR AIR BLEED VALVE,  
 FILTER VALVE, PRESSURE GAGE  
 AND RELIEF VALVE

CODE

A - NAS1612-2  
 B - NAS1612-4  
 C - NAS1612-6  
 D - NAS1612-8  
 E - NAS1612-10  
 F - NAS1612-12  
 G - MS24690

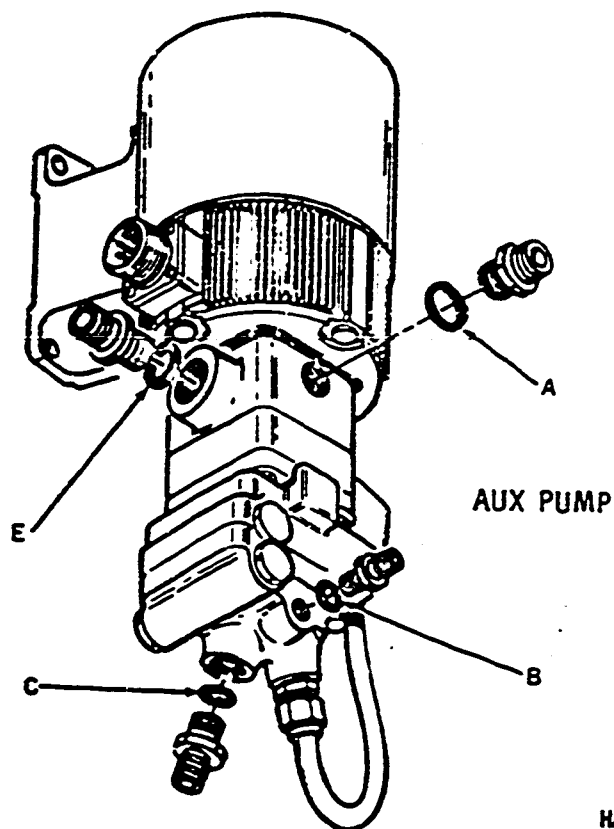

HA2-1679 A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Depressurize hydraulic system by operating the brakes and manually moving the longitudinal trim handle until horizontal stabilizer movement stops.
- (4) Disconnect and cap test stand pressure and supply hoses from airplane ground service connections; install duct caps on connections and close access door.

C. Pressurize Hydraulic System with Auxiliary Hydraulic Pump Pressure

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap control handle agrees with wing flap position.
- (3) Place hydraulic system selector control lever in general system/bypass position.
- (4) Check that airplane electrical buses are energized (see Chapter 24).
- (5) Start auxiliary hydraulic pump by placing auxiliary hydraulic pump control switch momentarily in start position. Pressure indicated in the flight compartment should be 2600 to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

**CAUTION:** DO NOT HOLD THE AUXILIARY HYDRAULIC PUMP CONTROL SWITCH IN THE START (HOLD ONLY IN EMERGENCY) POSITION FOR NORMAL PRESSURIZATION.

D. Depressurize

- (1) Stop auxiliary hydraulic by placing auxiliary hydraulic pump control switch momentarily in stop position.
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.
- (3) Place hydraulic system selector control lever in general system (normal) position.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

E. Pressurize Hydraulic System with Engine-Driven Hydraulic Pump Pressure

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap handle agrees with wing flap position.
- (3) Make certain that applicable fire control handle is in normal position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Make certain that applicable engine-driven hydraulic pump control switch is in on position.
- (6) Start engine No. 2 or No. 3 (see Chapter 71). Hydraulic pressure indicated in the flight compartment should be 2800 to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

F. Depressurize

- (1) Shut down engine (see Chapter 71).
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.

3. Pressurize/Depressurize Hydraulic Reservoir

A. General

- (1) The air inflation valve, air bleed valve, and air pressure gage for manually pressurizing and depressurizing the hydraulic reservoir and air chamber are located on the aft side of the wing rear spar, at the forward end of the left main gear wheel well. The valves and gage are mounted on a cross fitting just inboard of the reservoir air chamber. Access is through the left main gear inboard door.

B. Tools and Equipment Required

- (1) Pressure cylinder (clean dry compressed air or nitrogen).

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

C. Pressurize Hydraulic Reservoir

NOTE: Normal air pressure in the reservoir and air chamber should be between 30 and 35 psi.

NOTE: There are three methods of pressurizing the hydraulic reservoir:

- (1) Run an inboard engine.
- (2) Connect and operate a hydraulic test stand.
- (3) Direct pressurization of air chamber by introduction of compressed air or nitrogen.

The first two methods are automatic in that the reservoir is pressurized by action of the hydraulic fluid through the regulator-aspirator when the system is pressurized. The third method (direct inflation) will be described in the following steps.

- (1) Remove air inflation valve cap and attach pressure cylinder service hose to inflation valve.
- (2) Loosen inflation valve swivel nut three complete turns.

NOTE: The rate of inflation (flow through the valve) is governed by degree of opening of the swivel valve.

- (3) Pressurize reservoir to 30 to 35 psi reading on air pressure gage.
- (4) Tighten swivel nut.
- (5) Disconnect service hose and install valve cap.

CAUTION: THE AIR INFLATION VALVE IS A STANDARD "AN" VALVE WHICH HAS BEEN MODIFIED BY INSTALLATION OF SKYDROL TYPE SEALS. DO NOT REPLACE THE VALVE WITH A VALVE WHICH HAS NOT BEEN MODIFIED FOR SKYDROL.

D. Depressurize Hydraulic Reservoir

- (1) Depress air bleed valve button; hold until all pressure has bled off and pressure gage reads zero.

4. Drain Hydraulic System Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Clean container of approximately 20 US gallons (16.65 Imperial gallons or 75.7 liters) capacity.

B. Drain Reservoir

- (1) Depressurize hydraulic system and reservoir (see paragraphs 2 and 3).
- (2) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (3) Remove drain unit, and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

5. Drain Auxiliary Hydraulic Pump Alternate Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.
- (2) Clean container of approximately 3 US gallons (2.5 Imperial gallons or 11.5 liters) capacity.

B. Drain Reservoir

- (1) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (2) Remove drain unit and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

6. Hydraulic System Pressure Decay Rates

A. Decay Rate Test

- (1) By observing the time it takes for the hydraulic system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi, it is possible, in most cases, to detect units that are leaking excessively. This procedure is not infallible because the sum of the maximum allowable leakage rates determines the minimum time permissible for pressure decay. The hydraulic system with average leakage will maintain pressure for longer periods than indicated and may do so even with one unit leaking excessively.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The main hydraulic system should be tested for pressure decay time under the following conditions:
  - (a) System selector valve in general system/bypass or general system (normal).
  - (b) Nosewheel straight ahead plus or minus 30 degrees and steering valve in neutral position.
  - (c) Manual main gear door valve open.
  - (d) Landing gear door valve open.
  - (e) Wing flaps up.
  - (f) Accumulators properly charged.
  - (g) Aileron shutoff valve off.
  - (h) Rudder shutoff valve off.
  - (i) Thrust reversers stowed.
- (3) Pressurize main hydraulic system to 2900 ( $\pm 100$ ) psi with auxiliary pump or hydraulic test stand. Then shut off hydraulic power source and note time interval required for system pressure to decrease 1000 psi. This should be more than 34 seconds on a new airplane or more than 23 seconds on an airplane in service before overhaul. If pressure decay time is less, the main hydraulic system should be inspected for a malfunctioning unit.
- (4) If pressure decay test indicates that a unit in the main hydraulic system was leaking excessively, that unit may be in the nose or main gear subsystem, the main gear door subsystem, the flap subsystem, the slot subsystem, or the selector valve. By placing the subsystem control valves in opposite positions one at a time and repeating the pressure decay test, it is possible that the faulty unit may be located.
- (5) Rudder power hydraulic system may be tested for pressure decay time by using procedures outlined in steps (2) and (3), except that the rudder shutoff valve should be on. Decay time should be more than 10 seconds on a new airplane or more than 8 seconds on an airplane in service before overhaul. If less, the rudder power system should be inspected for a malfunctioning unit.
- (6) Supplementary information may be obtained for the rudder power hydraulic system by using the auxiliary rudder system pump and accumulator air gage to test the time for rudder pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi. With the rudder hydraulic power shutoff valve off, the time



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

should be more than 2 minutes. With the rudder hydraulic power shutoff valve on, the time should be 12 seconds on a new airplane and 10 seconds on an airplane in service before overhaul.

- (7) Aileron hydraulic power system may be tested for pressure decay by using procedures outlined in steps (2) and (3), except that the aileron hydraulic power shutoff valve should be on. The decay time should be more than 6-1/2 seconds on a new airplane or more than 4-1/2 seconds on an airplane in service before overhaul. If less, the aileron power system should be inspected for a malfunctioning unit.
- (8) Brake system and the nose gear steering system are isolated from the main hydraulic system by check valves and may be tested separately. Using the brake accumulator gages, the pressure decay time for the brake system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 10 hours with the parking brake off, and 2 hours with the parking brake on. With the brake accumulators fully charged deplete the general system pressure. Wait 3 to 5 minutes and then set the parking brake and hold the parking brake pressure for 15 minutes. The drop in pressure at the brake accumulators should not exceed 125 psi during this time.
- (9) Release the parking brakes, and build up brake accumulator pressure to 2900 ( $\pm 100$ ) psi. With hydraulic power off and brakes off, check brake accumulator pressure. Drop in pressure at the accumulators should not exceed 100 psi in 30 minutes. Fast decay time for the brake system with parking brake off, indicates either a faulty brake valve or a faulty check valve in the right manifold. A fast decay time with the parking brake on indicates a faulty antiskid valve or a faulty brake valve.
- (10) Using the gages on the nose pressure accumulators, the time for the nose gear steering system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 19 minutes. If less, one of the pressure check valves is faulty, or the nose gear steering control valve is faulty or out of neutral.

CAUTION: ALL LANDING GEAR GROUND LOCKPINS MUST BE INSTALLED BEFORE CONDUCTING THE FOLLOWING TEST.

- (11) Under conditions outlined in step (2), except with the landing gear control valve in the up position, the time for pressure decay should be unchanged. If time limits change more than 5 seconds as determined in paragraph (3), a faulty unit is in the gear subsystem.
- (12) Under conditions outlined in step (2), except with the main gear door manual control valve in the closed position, the decay time should be more than 24 seconds on a new airplane and 18 seconds on an airplane in service before overhaul. If less, the faulty unit is in the main gear door subsystem.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (13) Under conditions outlined in step (2), except with the flap control valve in the down position, the decay time should be more than 24 seconds on a new airplane and 17 seconds on an airplane in service before overhaul. If less, the faulty unit is in the flap subsystem.
- (14) Under conditions outlined in step (2), time limit for pressure decay should remain unchanged as determined in paragraph (3) with the slot valve in either position, or the selector valve in either general system/bypass or general system (normal). If the time changes with a change of valve position, the faulty unit is in that subsystem.
- (15) The thrust reverser system is isolated from the main system by an electrically operated shutoff valve which is open only during thrust reverser actuation. Therefore, main system decay is not affected by the thrust reverser system except during reverser actuation or at the thrust reverser extended position. Additional information may be obtained for the thrust reverser system by using the auxiliary reverser system pump and reverser system pressure gage or accumulator gage to test the time for reverser pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi. With the reversers in the stowed position, the decay time should be greater than 3 minutes on a new aircraft or greater than 1-1/2 minutes on an aircraft in service before overhaul. If times are less, the reverser system should be inspected for a malfunction.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - MAINTENANCE PRACTICES

1. General

A. Skydrol Safety Precautions

- (1) Before performing any operation on the hydraulic system, personnel should read and thoroughly understand the following precautions to be observed when working with Skydrol hydraulic fluid.

WARNING: OBSERVE THE FOLLOWING SAFETY PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. LONG EXPOSURE TO SKYDROL CAN CAUSE SKIN DEHYDRATION AND CHAPPING.

- (2) Wash hands thoroughly with soap and water before starting work.
- (3) Apply barrier cream to hands, wrists, and forearms. Rub cream under fingernails and into creases of skin.
- (4) Wear goggles when pressure testing components or systems, and whenever there is any possibility of Skydrol splashing into eyes.
- (5) If Skydrol splashes into eyes, treat eyes immediately by irrigating thoroughly with clear cold water, and report the incident.
- (6) Wash hands, wrists, and forearms with soap and hot water whenever they have come in contact with Skydrol.
- (7) If clothing becomes soaked with Skydrol; remove clothing as soon as possible, thoroughly wash skin, and put on clean clothing.

B. Technical Precautions

- (1) Before any maintenance is performed on the hydraulic system, personnel should read and thoroughly understand the following precautions. Careful adherence to these instructions will aid in maintaining a functional and trouble-free system.

CAUTION: OBSERVE THE FOLLOWING TECHNICAL PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. SKYDROL WILL ATTACK A WIDE RANGE OF MATERIALS INCLUDING RUBBER, COPPER, VARIOUS PLASTICS, AND PAINTS.

- (2) Ensure that Skydrol does not come into contact with any part of aircraft outside of the hydraulic system. Keep spillage to an absolute minimum. Clean up spilled hydraulic fluid immediately to prevent entry into adjacent areas of the airplane precluding future false hydraulic leak reports. If spillage occurs, wipe up the fluid with a dry cloth and wash contaminated area with soap and hot water.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) When lines are disconnected and/or components are removed, provide suitable protection to prevent foreign material from entering the lines or components by use of caps, covers, clean lint-free rags, etc.
- (4) When electrical connectors are disconnected, install caps or other suitable protectors to prevent entry of hydraulic fluid, moisture, and foreign objects.
- (5) Always check position and angle of all fittings removed from components to ensure placement and alignment when installing replacement components.
- (6) When washing metal parts before assembly, use only approved solvent, and ensure that all traces of the solvent are removed before assembly.
- (7) Use only clean Skydrol for flushing or testing hydraulic components.
- (8) Use only clean Skydrol when filling reservoirs, sumps, filter bowls, pumps, etc., before installation of components.
- (9) Do not unpack Skydrol O-rings and seals until required. Ensure that only approved rings and seals are used.
- (10) When assembling O-rings and seals, lubricate with Skydrol Assembly Lubricant, MCS 352, Monsanto Chemical Co., or clean Skydrol hydraulic fluid.
- (11) Take care to prevent contamination of Skydrol with other materials oils, water, dirt, etc.).
- (12) If a system becomes contaminated with any petroleum-based oil or solvent, drain the system and flush with clean Skydrol.

C. Landing Gear Precautions

- (1) The landing gear control lever should be in the down position and the landing gear ground lockpins should be installed in the main and nose gears at all times during ground maintenance, except as noted in maintenance procedural steps.
- (2) The main gear wheels should be chocked at all times during ground maintenance, except as noted in maintenance procedural steps.
- (3) The hydraulic system selector control lever should be in the general system (normal) position at all times during ground maintenance, except as noted in maintenance procedural steps.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

D. Hydraulic Power System O-Rings

- (1) O-rings used in the installation of hydraulic power system components are shown in Figure 201. O-rings required for the landing gear, power control systems, etc., will be found in the applicable chapters.
- (2) O-ring part numbers shown in Figure 201 are interchangeable with Douglas standard (S-XXXXXXXX) numbers listed in the illustrated Parts Catalog and on engineering drawings.

2. Pressurize/Depressurize Hydraulic System

A. Pressurize Hydraulic System With External Hydraulic Source Pressure


- (1) Tools and Equipment Required: A hydraulic test stand equipped with a variable-displacement hydraulic pump capable of delivering 20 gpm at 3000 psi, using Skydrol hydraulic fluid. The maximum permissible operating temperature should not exceed 180°F (82.2°C).
- (2) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (3) Make certain that wing flap control handle agrees with wing flap position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Remove dust caps from airplane ground service connections and connect test stand pressure and supply hoses.
- (6) Energize test stand hydraulic pump; pressurize hydraulic system to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

B. Depressurize and Disconnect


- (1) Check hydraulic fluid level of hydraulic reservoir; fill if necessary as described on instruction placard on reservoir.
- (2) Deenergize test stand hydraulic pump.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

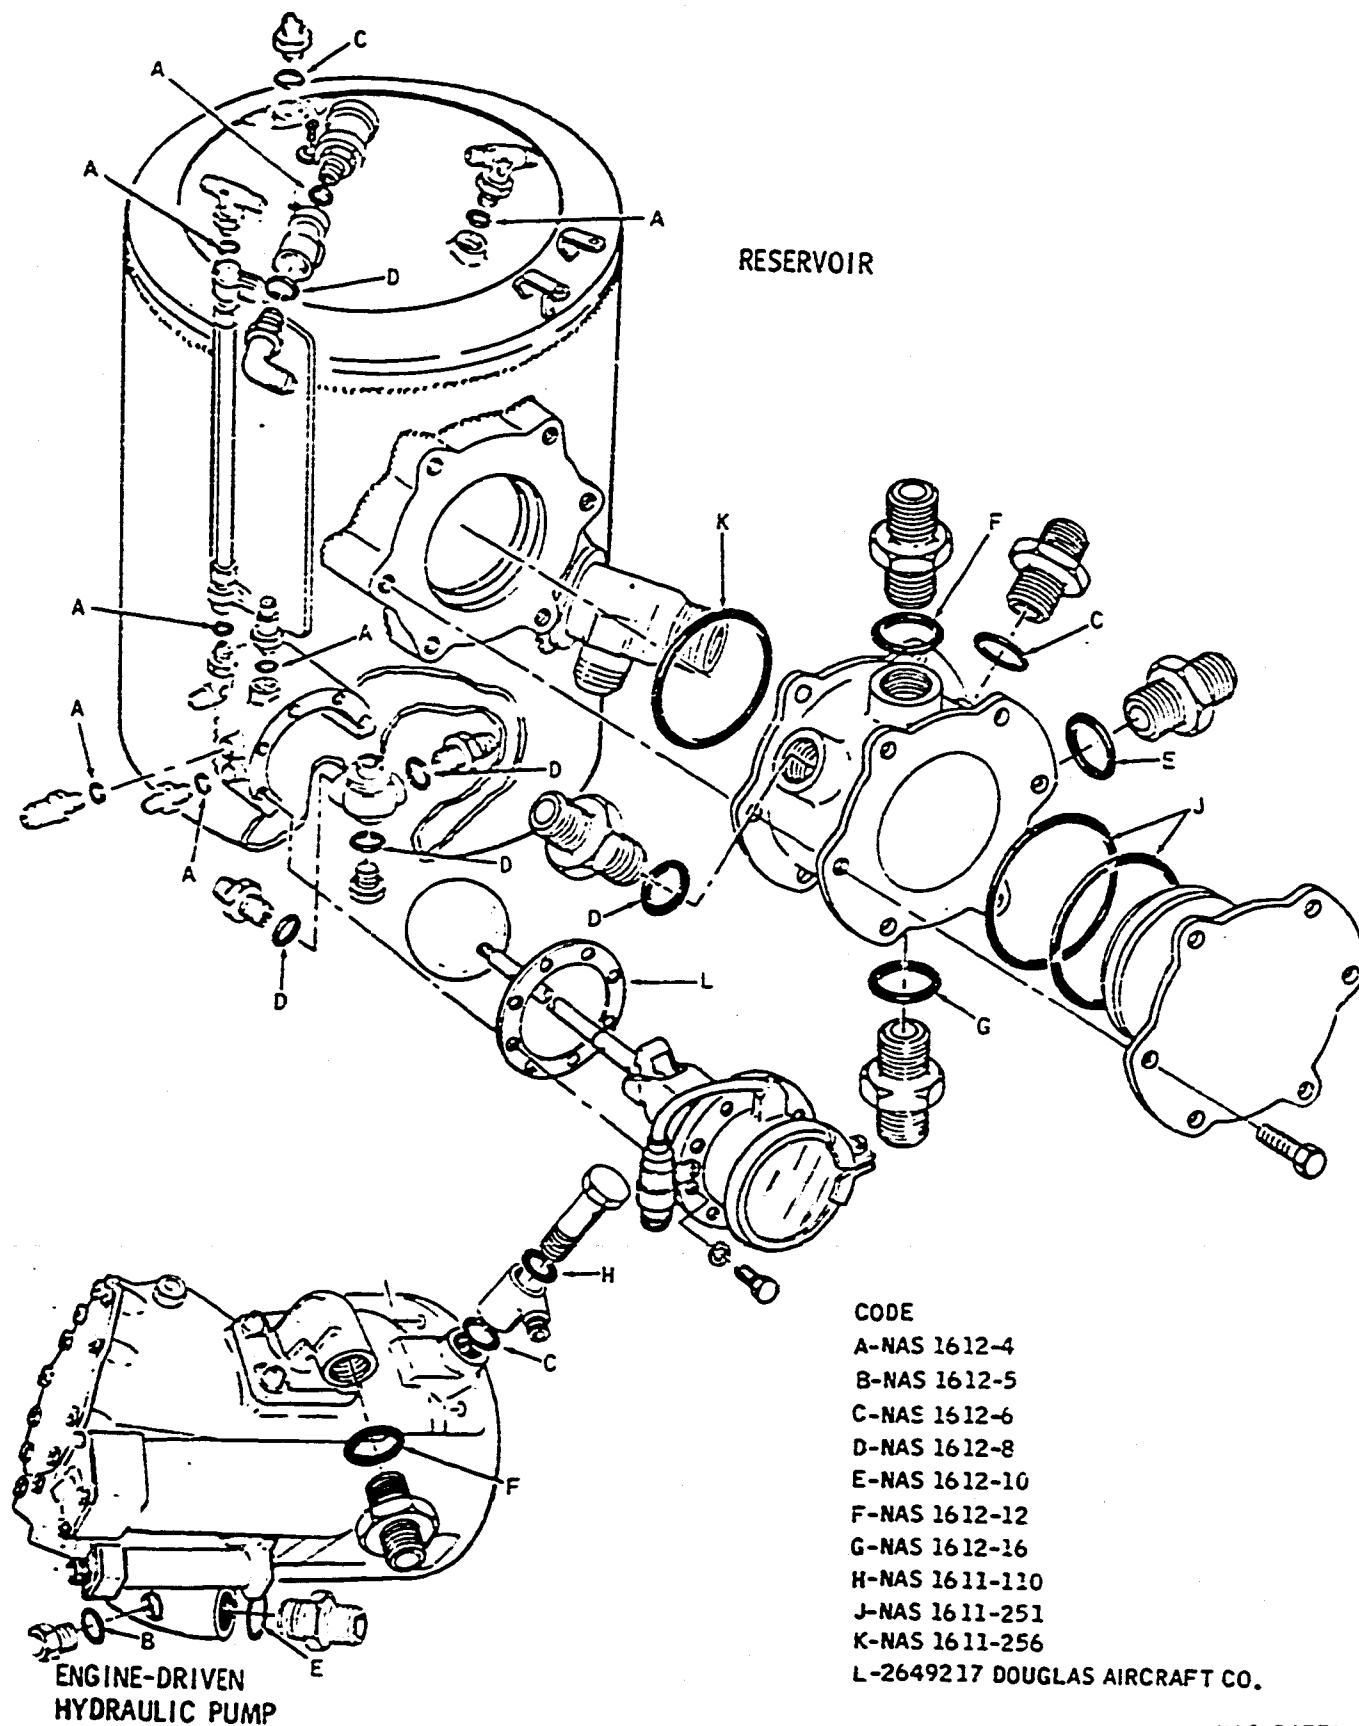


HA2-1677A


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

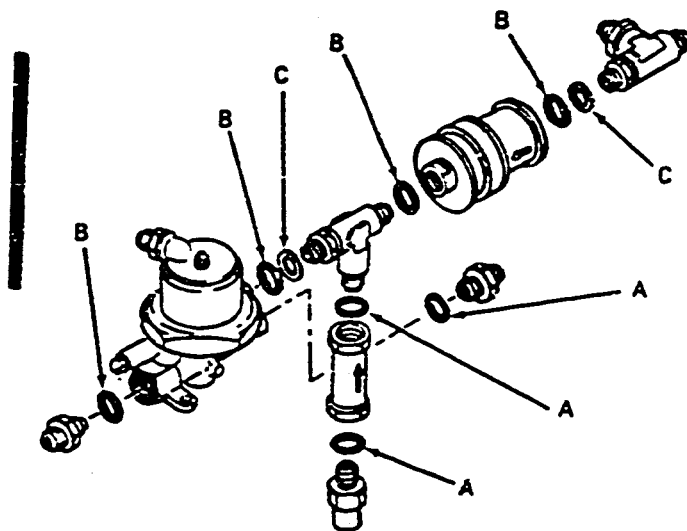


REGULATOR - ASPIRATOR  
 AND AIR FILTERS

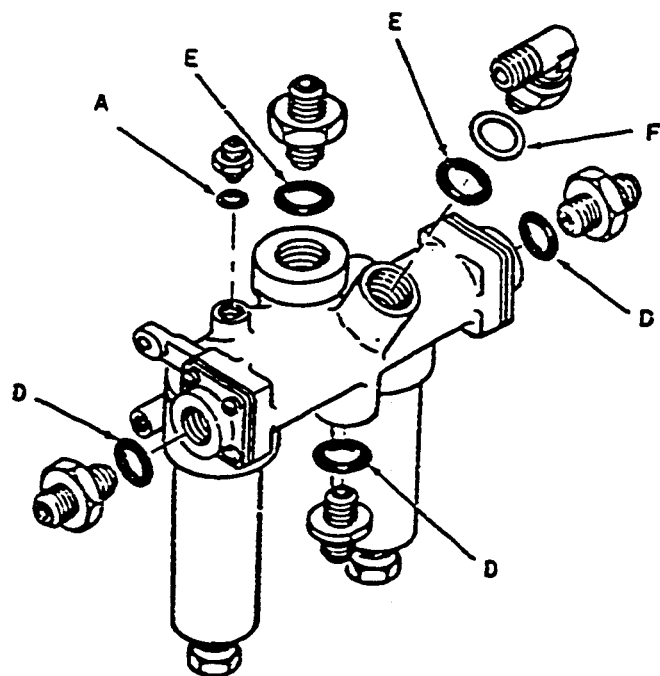

DUAL-FILTER &  
 RELIEF VALVE

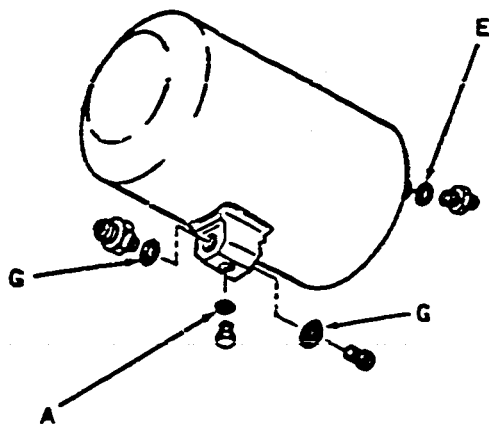

HYDRAULIC RESERVOIR  
 AIR CHAMBER

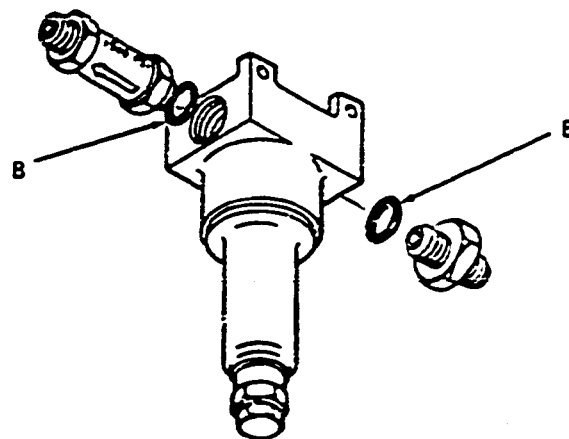

HYDRAULIC  
 PUMPCASE DRAIN  
 FILTER

CODE

- A - NAS1612-4
- B - NAS1612-6
- C - MS28777-6 \*
- D - NAS1612-10
- E - NAS1612-12
- F - MS28777-12 \*
- G - NAS1612-16
- \* - BACKUP RING

Hydraulic Power System Components -- O-Rings  
 Figure 201 (Sheet 2)


Feb 1/69

Printed in U.S.A.

HA2-3415B

29-00  
 CODE 13  
 Page 205


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

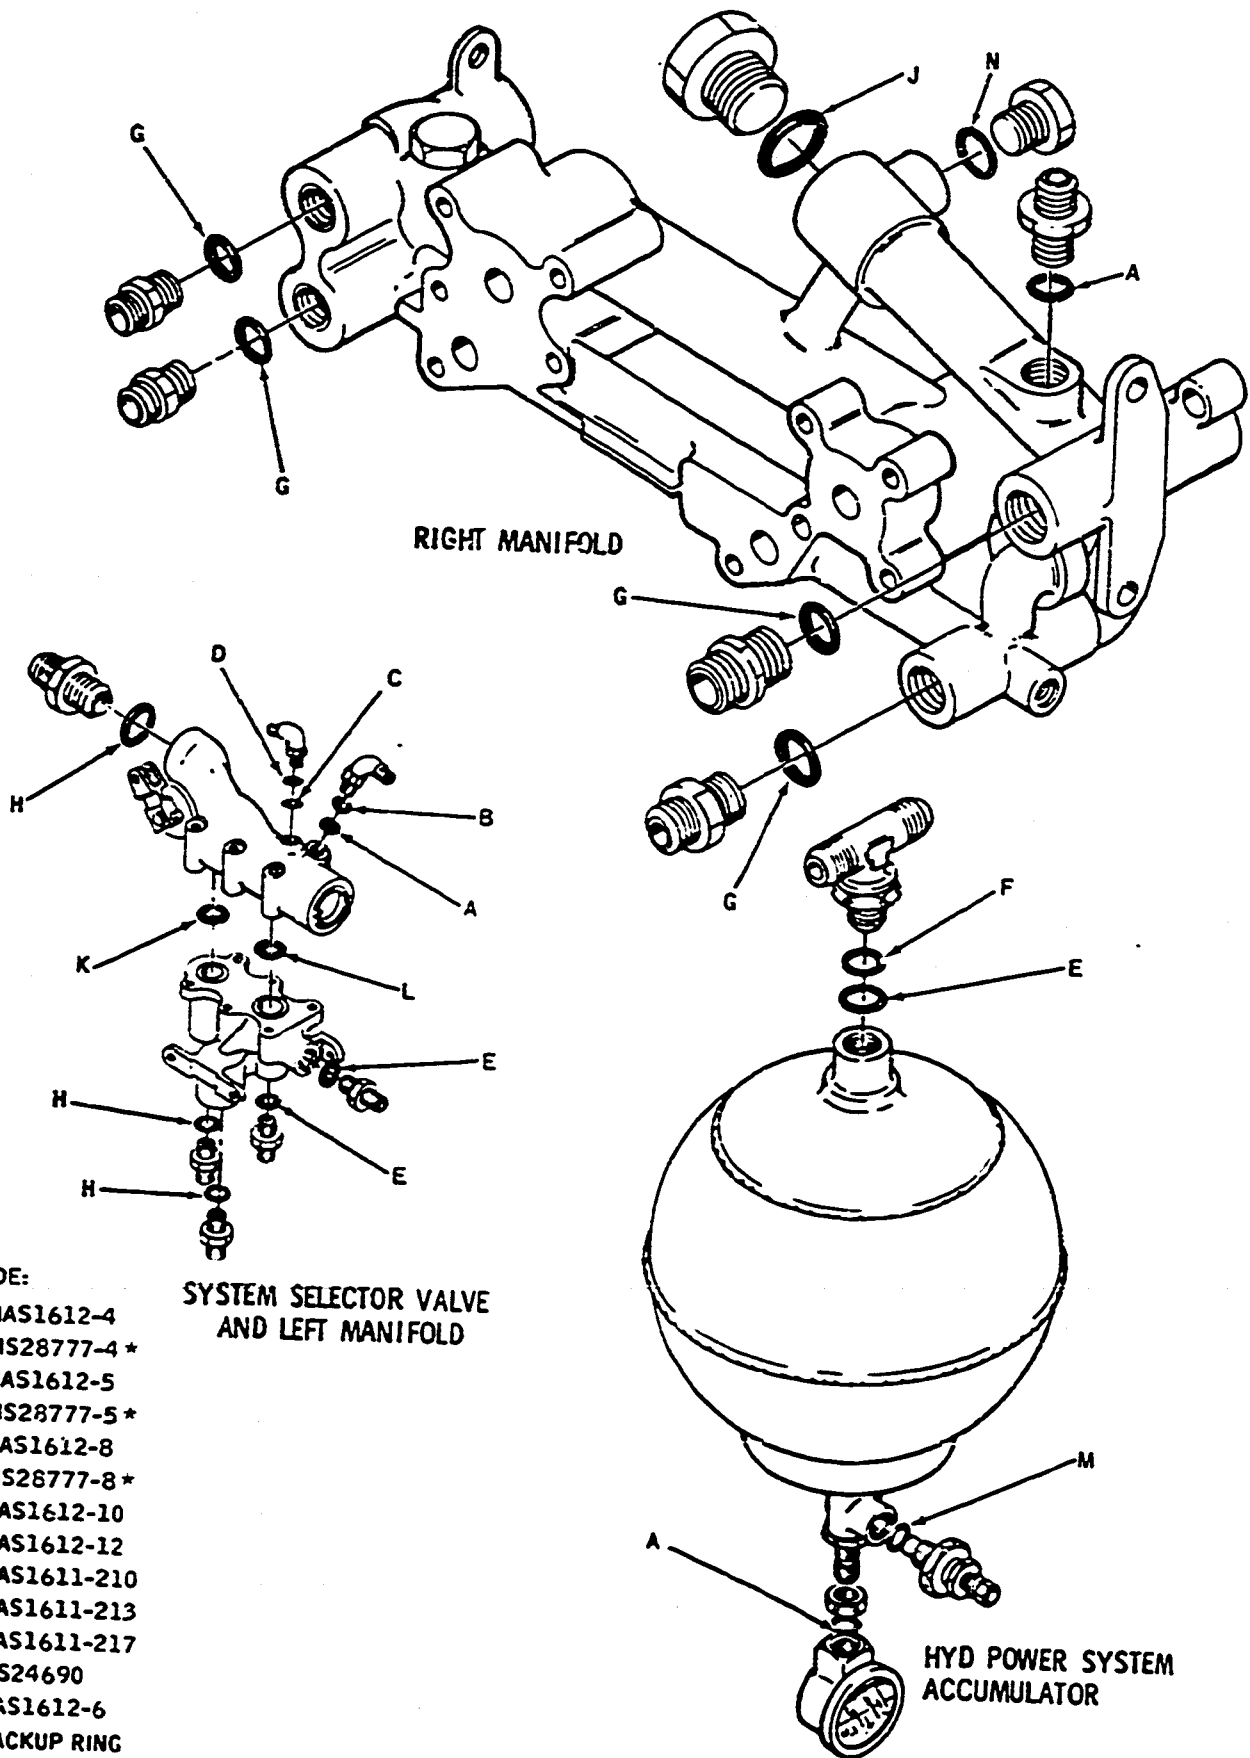


HA2-1678A




DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

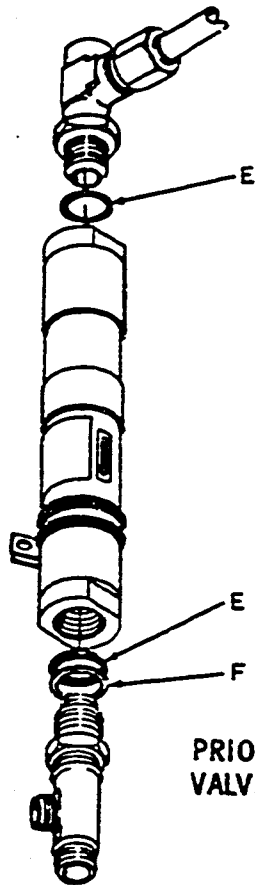


PRIORITY VALVE

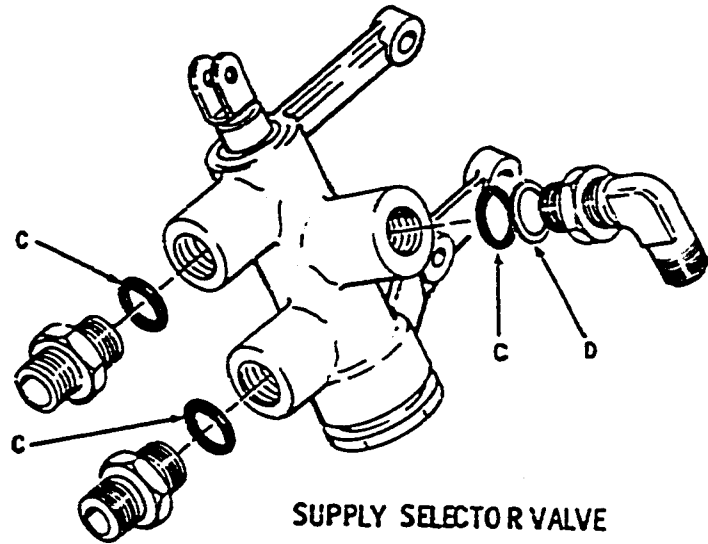


SUPPLY SELECTOR VALVE

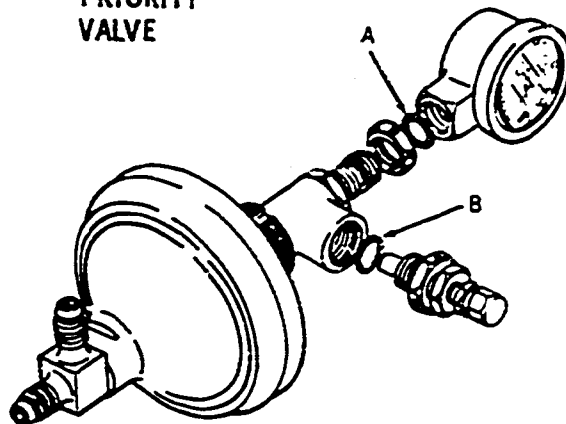

SURGE DAMPER ACCUMULATOR

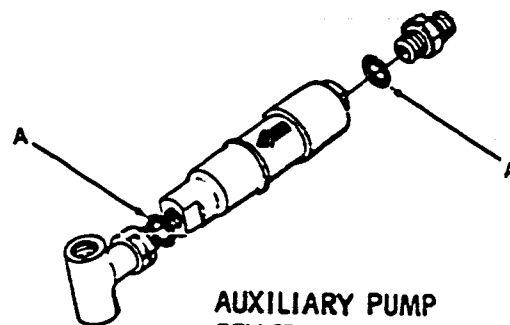

AUXILIARY PUMP RELIEF VALVE

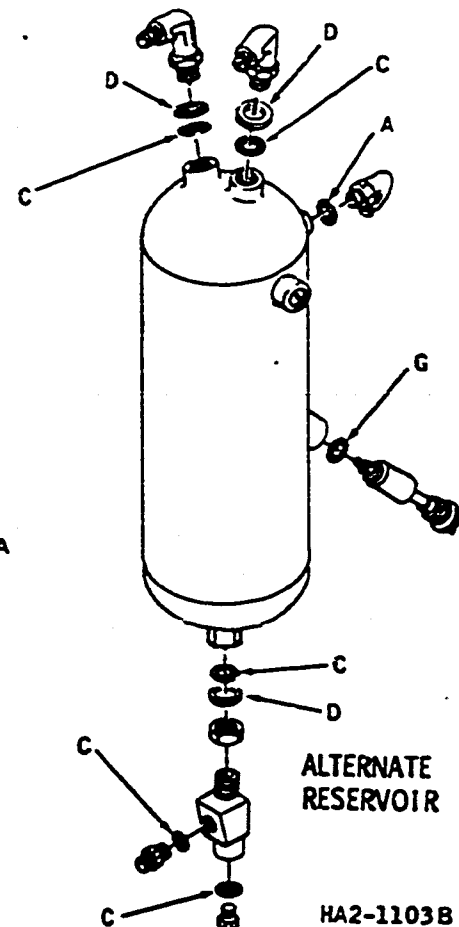

ALTERNATE RESERVOIR

CODE  
 A-NAS1612-4  
 B-MS2469-4  
 C-NAS1612-8  
 D-MS28777-8\*  
 E-NAS1612-12  
 F-MS28777-12\*  
 G-NAS1612-20

\* BACKUP RING

HA2-1103B


Hydraulic Power System Components -- O-Rings  
 Figure 201 (Sheet 4)

Feb 1/69


29-00  
 CODE 13  
 Page 207

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

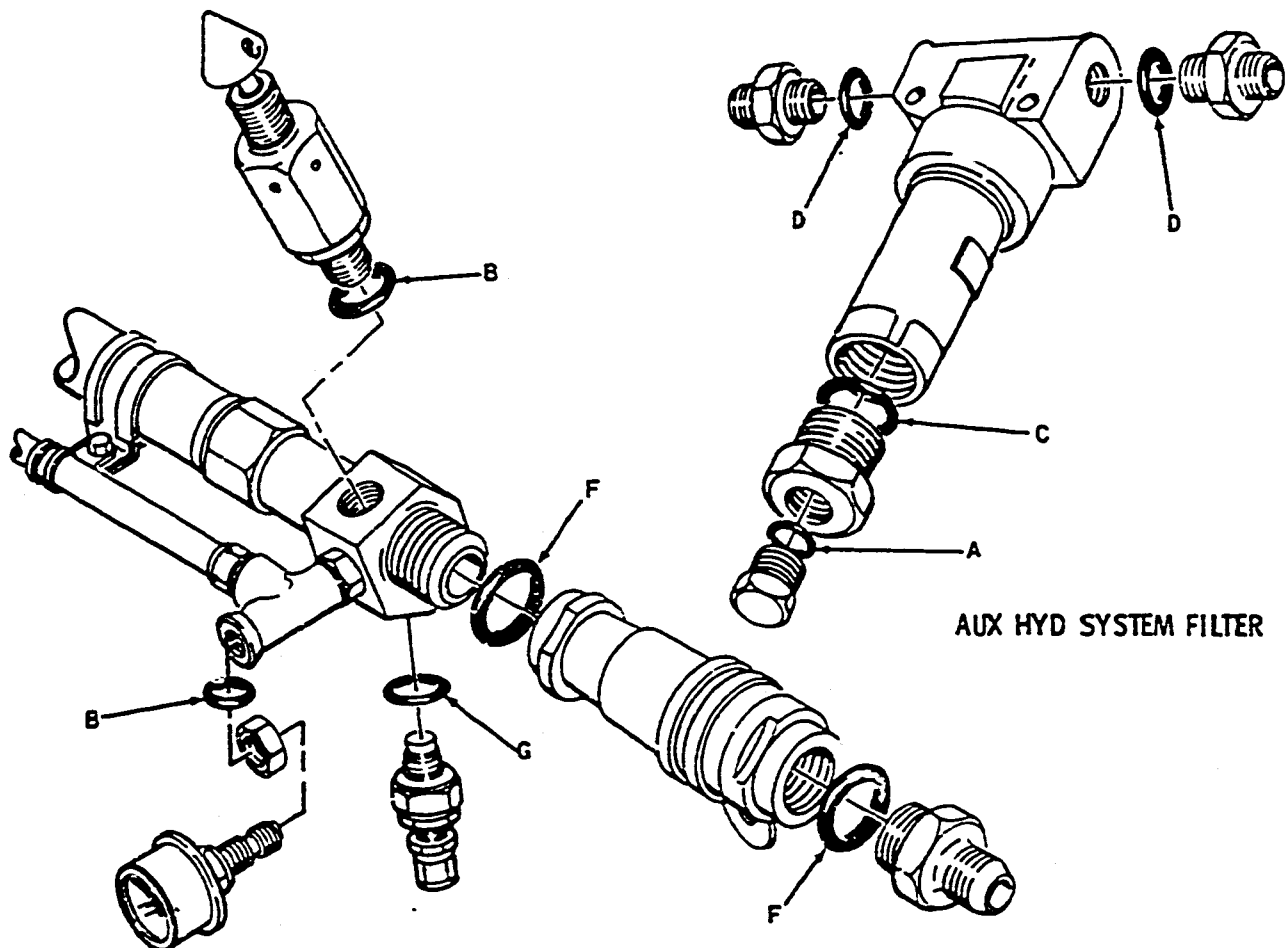

RESERVOIR AIR BLEED VALVE,  
 FILTER VALVE, PRESSURE GAGE  
 AND RELIEF VALVE

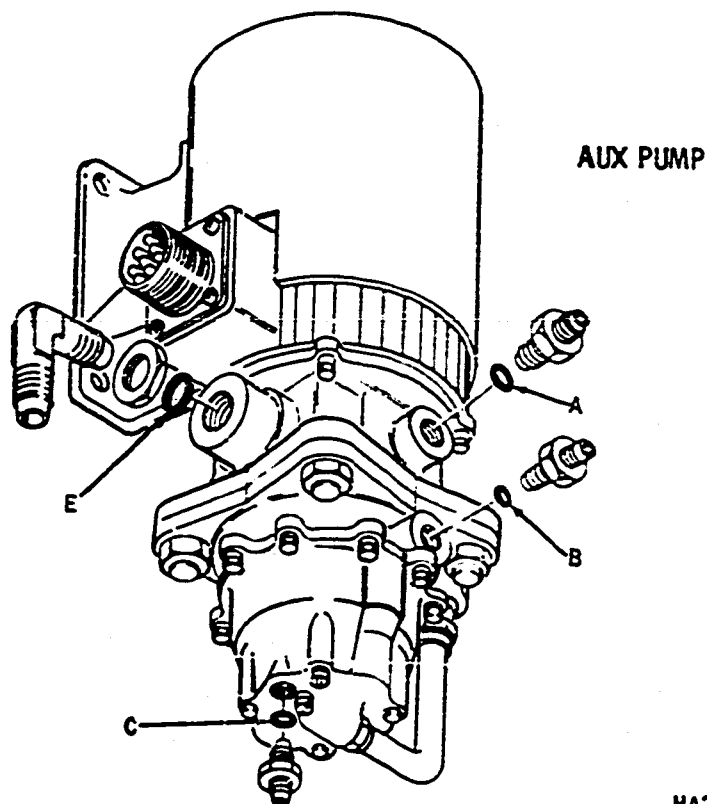

CODE:

- A - NAS1612-2
- B - NAS1612-4
- C - NAS1612-6
- D - NAS1612-8
- E - NAS1612-10
- F - NAS1612-12
- G - MS24690

HA2-6045

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Depressurize hydraulic system by operating the brakes and manually moving the longitudinal trim handle until horizontal stabilizer movement stops.
- (4) Disconnect and cap test stand pressure and supply hoses from airplane ground service connections; install duct caps on connections and close access door.

C. Pressurize Hydraulic System With Auxiliary Hydraulic Pump Pressure

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap control handle agrees with wing flap position.
- (3) Place hydraulic system selector control lever in general system/bypass position.
- (4) Check that airplane electrical buses are energized (see Chapter 24).
- (5) Start auxiliary hydraulic pump by placing auxiliary hydraulic pump control switch momentarily in start position. Pressure indicated in the flight compartment should be 2600 to 3000 psi.

WARNING: BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

CAUTION: DO NOT HOLD THE AUXILIARY HYDRAULIC PUMP CONTROL SWITCH IN THE START (HOLD ONLY IN EMERGENCY) POSITION FOR NORMAL PRESSURIZATION.

D. Depressurize

- (1) Stop auxiliary hydraulic by placing auxiliary hydraulic pump control switch momentarily in stop position.
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.
- (3) Place hydraulic system selector control lever in general system (normal) position.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

E. Pressurize Hydraulic System With Engine-Driven Hydraulic Pump Pressure

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap handles agrees with wing flap position.
- (3) Make certain that applicable fire control handle is in normal position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Make certain that applicable engine-driven hydraulic pump control switch is in on position.
- (6) Start engine No. 2 or No. 3 (see Chapter 71). Hydraulic pressure indicated in the flight compartment should be 2800 to 3000 psi.

WARNING: BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

F. Depressurize

- (1) Shut down engine (see Chapter 71).
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.

3. Pressurize/Depressurize Hydraulic Reservoir

A. General

- (1) The air inflation valve, air bleed valve, and air pressure gage for manually pressurizing and depressurizing the hydraulic reservoir and air chamber are located on the aft side of the wing rear spar, at the forward end of the left main gear wheel well. The valves and gage are mounted on a cross fitting just inboard of the reservoir air chamber. Access is through the left main gear inboard door.

B. Tools and Equipment Required

- (1) Pressure cylinder (clean dry compressed air or nitrogen).

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

C. Pressurize Hydraulic Reservoir

NOTE: Normal air pressure in the reservoir and air chamber should be between 30 and 35 psi.

NOTE: There are three methods of pressurizing the hydraulic reservoir:

- (1) Run an inboard engine.
- (2) Connect and operate a hydraulic test stand.
- (3) Direct pressurization of air chamber by introduction of compressed air or nitrogen.

The first two methods are automatic in that the reservoir is pressurized by action of the hydraulic fluid through the regulator-aspirator when the system is pressurized. The third method (direct inflation) will be described in the following steps.

- (1) Remove air inflation valve cap and attach pressure cylinder service hose to inflation valve.
- (2) Loosen inflation valve swivel nut three complete turns.

NOTE: The rate of inflation (flow through the valve) is governed by the degree of opening of the swivel valve.

- (3) Pressurize reservoir to 30 to 35 psi reading on air pressure gage.
- (4) Tighten swivel nut.
- (5) Disconnect service hose and install valve cap.

CAUTION: THE AIR INFLATION VALVE IS STANDARD "AN" VALVE WHICH HAS BEEN MODIFIED BY INSTALLATION OF SKYDROL TYPE SEALS. DO NOT REPLACE THE VALVE WITH A VALVE WHICH HAS NOT BEEN MODIFIED FOR SKYDROL.

D. Depressurize Hydraulic Reservoir

- (1) Depress air bleed valve button, hold until all pressure has bled off and pressure gage reads zero.

4. Drain Hydraulic System Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Clean container of approximately 20 US gallons (16.65 Imperial gallons or 75.7 liters) capacity.

B. Drain Reservoir

- (1) Depressurize hydraulic system and reservoir (see paragraphs 2 and 3).
- (2) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (3) Remove drain unit and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

5. Drain Auxiliary Hydraulic Pump Alternate Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.
- (2) Clean container of approximately 3 US gallons (2.5 Imperial gallons or 11.5 liters) capacity.

B. Drain Reservoir

- (1) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (2) Remove drain unit and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

6. Hydraulic System Pressure Decay Rates

A. Decay Rate Test

- (1) By observing the time it takes for the hydraulic system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi, it is possible, in most cases, to detect units that are leaking excessively. This procedure is not infallible because the sum of the maximum allowable leakage rates determines the minimum time permissible for pressure decay. The hydraulic system with average leakage will maintain pressure for longer periods than indicated and may do so even with one unit leaking excessively.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The main hydraulic system should be tested for pressure decay time under the following conditions:
  - (a) System selector valve in general system/bypass or general system (normal).
  - (b) Nosewheel straight ahead plus or minus 30 degrees and steering valve in neutral position.
  - (c) Manual main gear door valve open.
  - (d) Landing gear down and locked.
  - (e) Wing flaps up.
  - (f) Accumulators properly charged.
  - (g) Aileron shutoff valve off.
  - (h) Rudder shutoff valve off.
  - (i) Thrust reversers stowed.
- (3) Pressurize main hydraulic system to 2900 ( $\pm 100$ ) psi with auxiliary pump or hydraulic test stand. Then shut off hydraulic power source and note time interval required for system pressure to decrease 1000 psi. This should be more than 34 seconds on a new airplane or more than 23 seconds on an airplane in service before overhaul. If pressure decay time is less, the main hydraulic system should be inspected for a malfunctioning unit.
- (4) If pressure decay test indicates that a unit in the main hydraulic system was leaking excessively, that unit may be in the nose or main gear subsystem, the main gear door subsystem, the flap subsystem, the slot subsystem, the selector valve, or the compressor subsystem. By placing the subsystem control valve in opposite positions one at a time and repeating the pressure decay test, it is possible that the faulty unit may be located.
- (5) Rudder power hydraulic system may be tested for pressure decay time by using procedures outlined in steps (2) and (3), except that the rudder shutoff valve should be on. Decay time should be more than 10 seconds on a new airplane or more than 8 seconds on an airplane in service before overhaul. If less, the rudder power system should be inspected for a malfunctioning unit.
- (6) Supplementary information may be obtained for the rudder power hydraulic system by using the auxiliary rudder system pump and accumulator air gage to test the time for rudder pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi. With the rudder hydraulic power shutoff valve off, the time should be more than 2 minutes. With the rudder hydraulic power shutoff valve on, the time should be 12 seconds on a new airplane and 10 seconds on an airplane in service before overhaul.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (7) Aileron hydraulic power system may be tested for pressure decay by using procedures outlined in steps (2) and (3), except that the aileron hydraulic power shutoff valve should be on. The decay time should be more than 6-1/2 seconds on a new airplane or more than 4-1/2 seconds on an airplane in service before overhaul. If less, the aileron power system should be inspected for a malfunctioning unit.
- (8) Brake system and the nose gear steering system are isolated from the main hydraulic system by check valves and may be tested separately. Using the brake accumulator gages, the pressure decay time for the brake system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 10 hours with the parking brake off, and 2 hours with the parking brake on. With the brake accumulators fully charged deplete the general system pressure. Wait 3 to 5 minutes and then set the parking brake and hold the parking brake pressure for 15 minutes. The drop in pressure at the brake accumulators should not exceed 125 psi during this time.
- (9) Release the parking brakes, and build up brake accumulator pressure to 2900 ( $\pm 100$ ) psi. With hydraulic power off, and brakes off, check brake accumulator pressure. Drop in pressure at the accumulators should not exceed 100 psi in 30 minutes. Fast decay time for the brake system with parking brake off, indicates either a faulty brake valve or a faulty check valve in the right manifold. A fast decay time with the parking brake on indicates a faulty antiskid valve or a faulty brake valve.
- (10) Using the gages on the nose pressure accumulators, the time for the nose gear steering system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 19 minutes. If less, one of the pressure check valves is faulty, or the nose gear steering control valve is faulty or out of neutral.
- CAUTION:** ALL LANDING GEAR GROUND LOCKPINS MUST BE INSTALLED BEFORE CONDUCTING THE FOLLOWING TEST.
- (11) Under conditions outlined in step (2), except with the landing gear control valve in the up position, the time for pressure decay should be unchanged. If time limits change more than 5 seconds as determined in paragraph (3), a faulty unit is in the gear subsystem.
- (12) Under conditions outlined in step (2), except with the main gear door manual control valve in the closed position, the decay time should be more than 24 seconds on a new airplane and 18 seconds on an airplane in service before overhaul. If less, the faulty unit is in the main gear door subsystem.



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (13) Under conditions outlined in step (2), except with the flap control valve in the down position, the decay time should be more than 24 seconds on a new airplane and 17 seconds on an airplane in service before overhaul. If less, the faulty unit is in the flap subsystem.
- (14) Under conditions outlined in step (2), time limit for pressure decay should remain unchanged as determined in paragraph (3) with the slot valve in either position, or the selector valve in either general system/bypass or general system (normal). If the time changes with a change of valve position, the faulty unit is in that subsystem.
- (15) The thrust reverser system is isolated from the main system by an electrically operated shutoff valve which is open only during thrust reverser actuation. Therefore, main system decay is not affected by the thrust reverser system except during reverser actuation or at the thrust reverser extended position. Additional information may be obtained for the thrust reverser system by using the auxiliary reverser system pump and reverser system pressure gage or accumulator gage to test the time for reverser pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi. With the reversers in the stowed position, the decay time should be greater than 3 minutes on a new aircraft or greater than 1-1/2 minutes on an aircraft in service before overhaul. If times are less, the reverser system should be inspected for a malfunction.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - MAINTENANCE PRACTICES

1. General

A. Skydrol Safety Precautions

- (1) Before performing any operation on the hydraulic system, personnel should read and thoroughly understand the following precautions to be observed when working with Skydrol hydraulic fluid.

WARNING: OBSERVE THE FOLLOWING SAFETY PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. LONG EXPOSURE TO SKYDROL CAN CAUSE SKIN DEHYDRATION AND CHAPPING.

- (2) Wash hands thoroughly with soap and water before starting work.
- (3) Apply barrier cream to hands, wrists, and forearms. Rub cream under fingernails and into creases of skin.
- (4) Wear goggles when pressure testing components or systems, and whenever there is any possibility of Skydrol splashing into eyes.
- (5) If Skydrol splashes into eyes, treat eyes immediately by irrigating thoroughly with clear cold water, and report the incident.
- (6) Wash hands, wrists, and forearms with soap and hot water whenever they have come in contact with Skydrol.
- (7) If clothing becomes soaked with Skydrol; remove clothing as soon as possible, thoroughly wash skin, and put on clean clothing.

B. Technical Precautions

- (1) Before any maintenance is performed on the hydraulic system, personnel should read and thoroughly understand the following precautions. Careful adherence to these instructions will aid in maintaining a functional and trouble-free system.

CAUTION: OBSERVE THE FOLLOWING TECHNICAL PRECAUTIONS WHEN WORKING ON THE HYDRAULIC SYSTEM. SKYDROL WILL ATTACK A WIDE RANGE OF MATERIALS INCLUDING RUBBER, COPPER, VARIOUS PLASTICS, AND PAINTS.

- (2) Ensure that Skydrol does not come into contact with any part of aircraft outside of the hydraulic system. Keep spillage to an absolute minimum. Clean up spilled hydraulic fluid immediately to prevent entry into adjacent areas of the airplane precluding future false hydraulic leak reports. If spillage occurs, wipe up the fluid with a dry cloth and wash contaminated area with soap and hot water.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) When lines are disconnected and/or components are removed, provide suitable protection to prevent foreign material from entering the lines or components by use of caps, covers, clean lint-free rags, etc.
- (4) When electrical connectors are disconnected, install caps or other suitable protectors to prevent entry of hydraulic fluid, moisture, and foreign objects.
- (5) Always check position and angle of all fittings removed from components to ensure placement and alignment when installing replacement components.
- (6) When washing metal parts before assembly, use only approved solvent, and ensure that all traces of the solvent are removed before assembly.
- (7) Use only clean Skydrol for flushing or testing hydraulic components.
- (8) Use only clean Skydrol when filling reservoirs, sumps, filter bowls, pumps, etc., before installation of components.
- (9) Do not unpack Skydrol O-rings and seals until required. Ensure that only approved rings and seals are used.
- (10) When assembling O-rings and seals, lubricate with Skydrol Assembly Lubricant, MCS 352, Monsanto Chemical Co., or clean Skydrol hydraulic fluid.
- (11) Take care to prevent contamination of Skydrol with other materials (oils, water, dirt, etc.).
- (12) If a system becomes contaminated with any petroleum-based oil or solvent, drain the system and flush with clean Skydrol.

C. Landing Gear Precautions

- (1) The landing gear control lever should be in the down position and the landing gear ground lockpins should be installed in the main and nose gears at all times during ground maintenance, except as noted in maintenance procedural steps.
- (2) The main gear wheels should be chocked at all times during ground maintenance, except as noted in maintenance procedural steps.
- (3) The hydraulic system selector control lever should be in the general system (normal) position at all times during ground maintenance, except as noted in maintenance procedural steps.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

D. Hydraulic Power System O-Rings

- (1) O-rings used in the installation of hydraulic power system components are shown in Figure 201. O-rings required for the landing gear, power control systems, etc., will be found in the applicable chapters.
- (2) O-ring part numbers shown in Figure 201 are interchangeable with Douglas standard (S-XXXXXXX) numbers listed in the Illustrated Parts Catalog and on engineering drawings.

2. Pressurize/Depressurize Hydraulic System

A. Pressurize Hydraulic System with External Hydraulic Source Pressure


- (1) Tools and Equipment Required: A hydraulic test stand equipped with a variable-displacement hydraulic pump capable of delivering 20 gpm at 3000 psi, using Skydrol hydraulic fluid. The maximum permissible operating temperature should not exceed 180°F (82.2°C).
- (2) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (3) Make certain that wing flap control handle agrees with wing flap position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Remove dust caps from airplane ground service connections and connect test stand pressure and supply hoses.
- (6) Energize test stand hydraulic pump; pressurize hydraulic system to 3000 psi.

WARNING: BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

B. Depressurize and Disconnect


- (1) Check hydraulic fluid level of hydraulic reservoir; fill if necessary as described on instruction placard on reservoir.
- (2) Deenergize test stand hydraulic pump.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

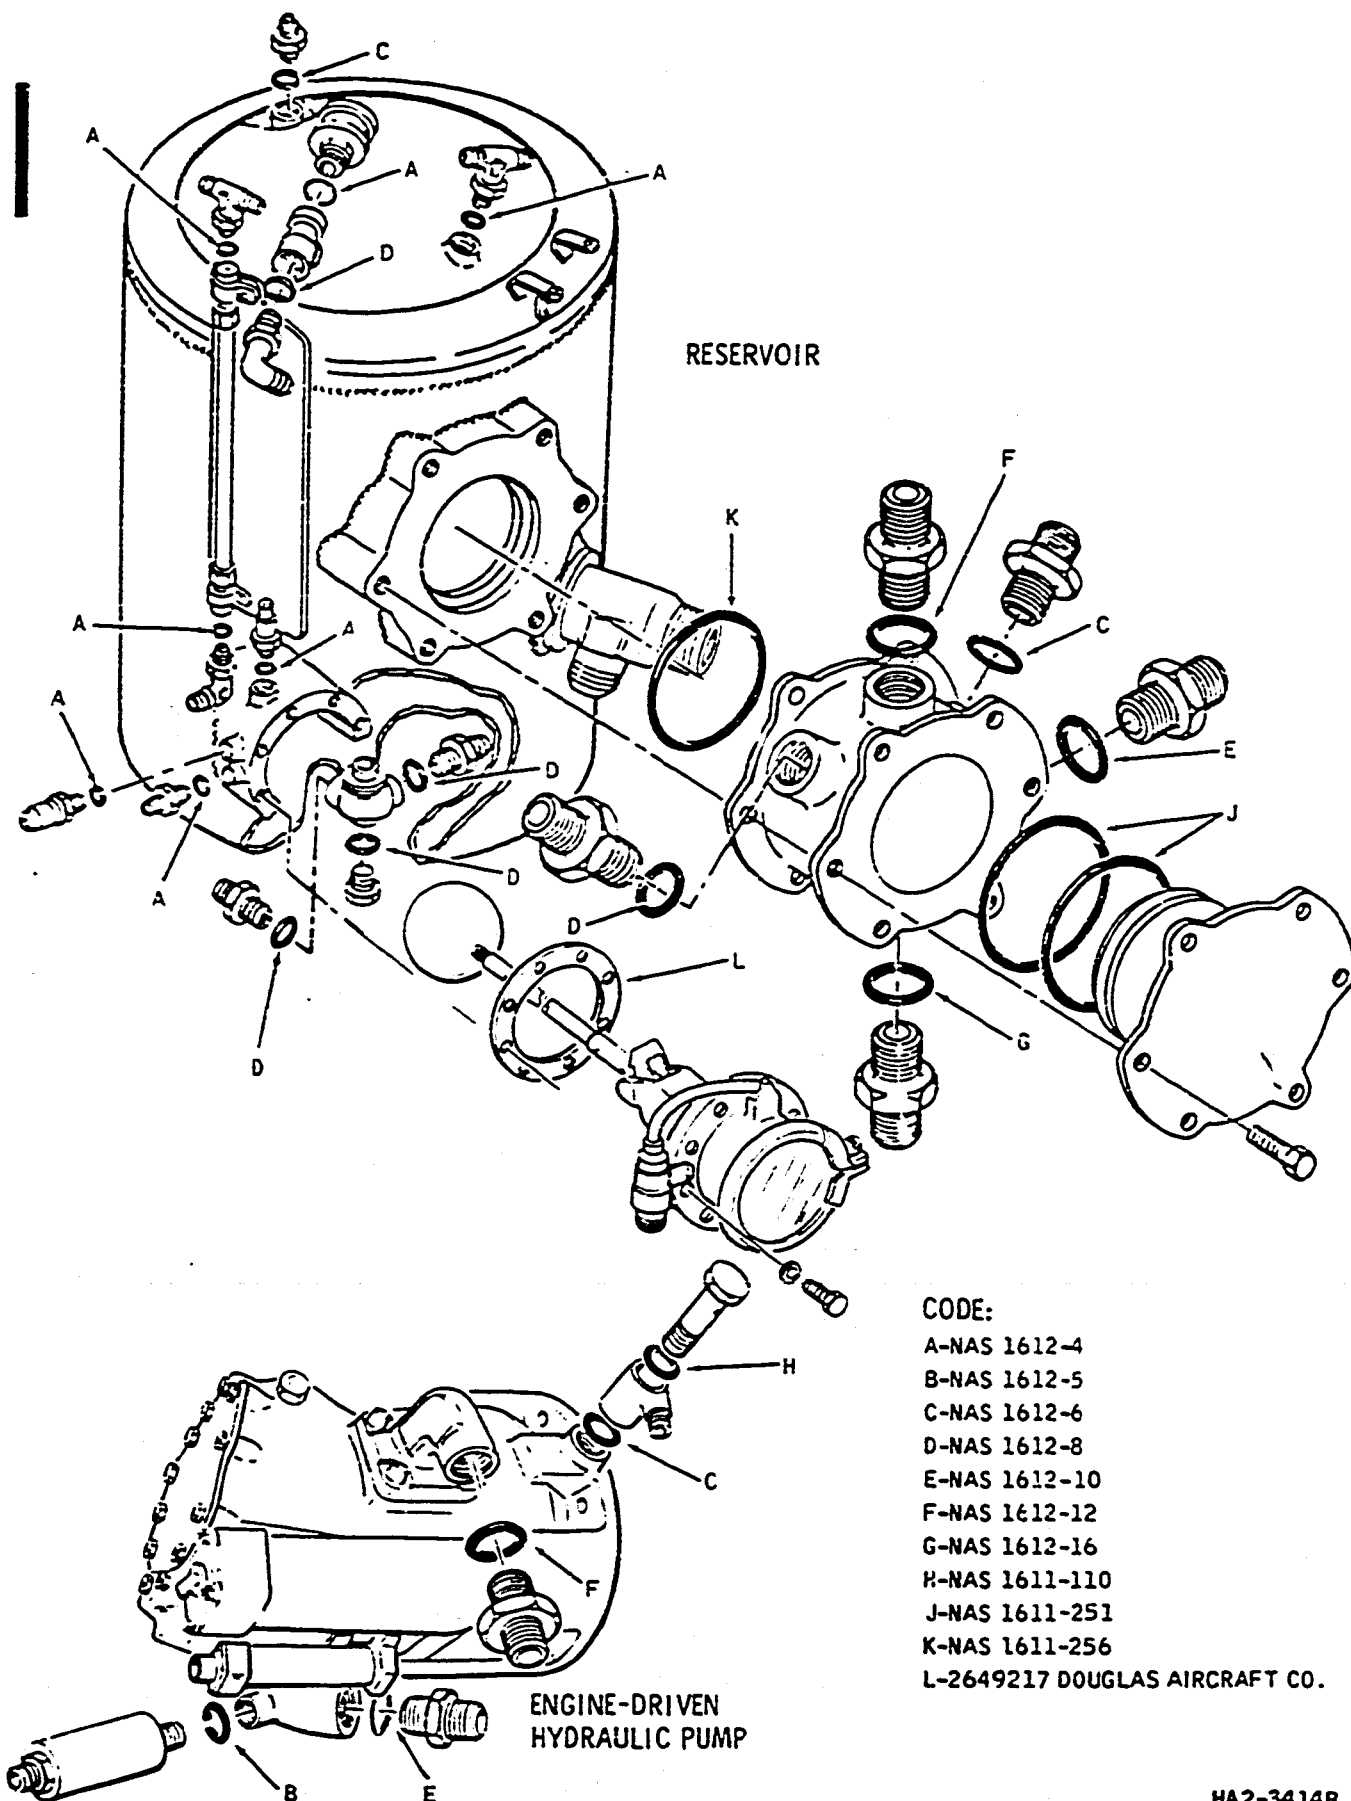


HA2-3414B


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

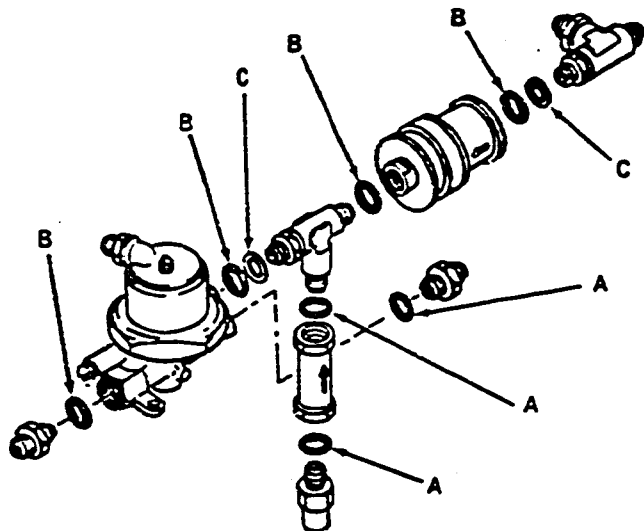


REGULATOR - ASPIRATOR  
 AND AIR FILTERS

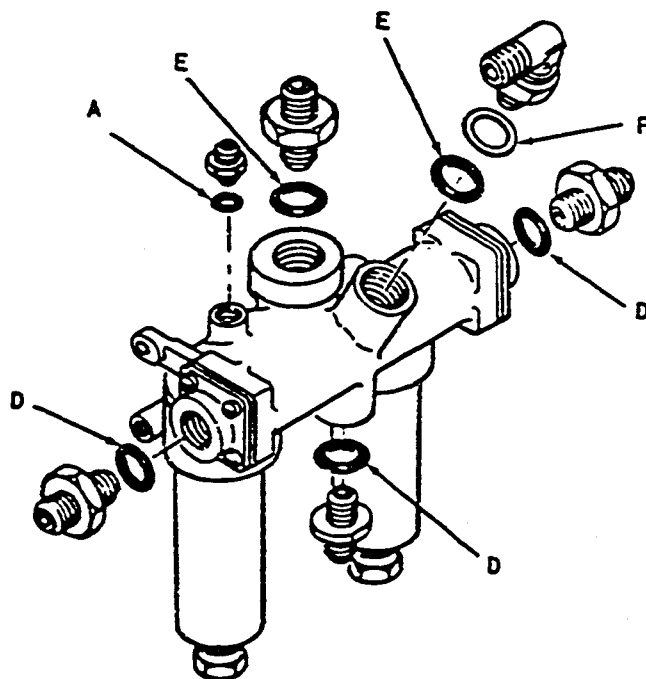

DUAL-FILTER &  
 RELIEF VALVE

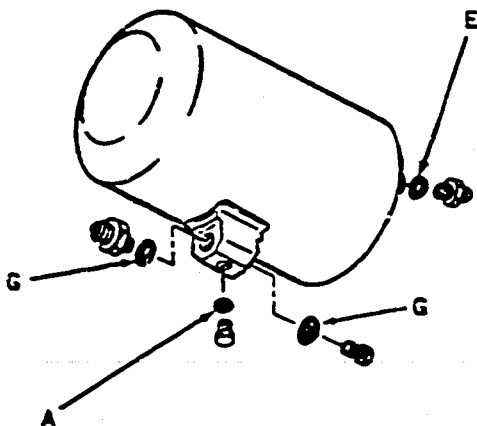

HYDRAULIC RESERVOIR  
 AIR CHAMBER

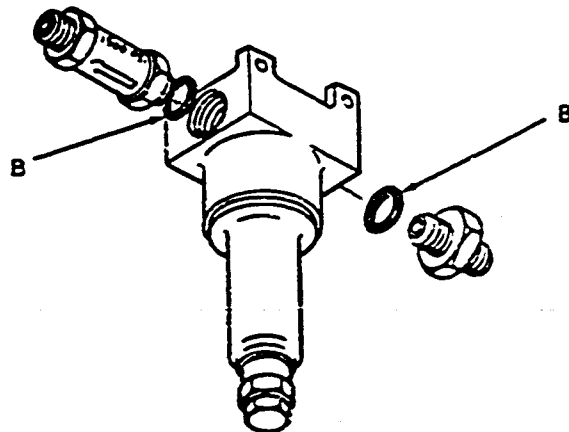

HYDRAULIC  
 PUMPCASE DRAIN  
 FILTER

CODE

- A - NAS1612-4
- B - NAS1612-6
- C - MS28777-6 \*
- D - NAS1612-10
- E - NAS1612-12
- F - MS28777-12 \*
- G - NAS1612-16
- \* - BACKUP RING

HA2-3415B


Hydraulic Power System Components -- O-Rings  
 Figure 201 (Sheet 2)

May 1/69

Printed in U.S.A.

29-00  
 CODE 14  
 Page 205

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

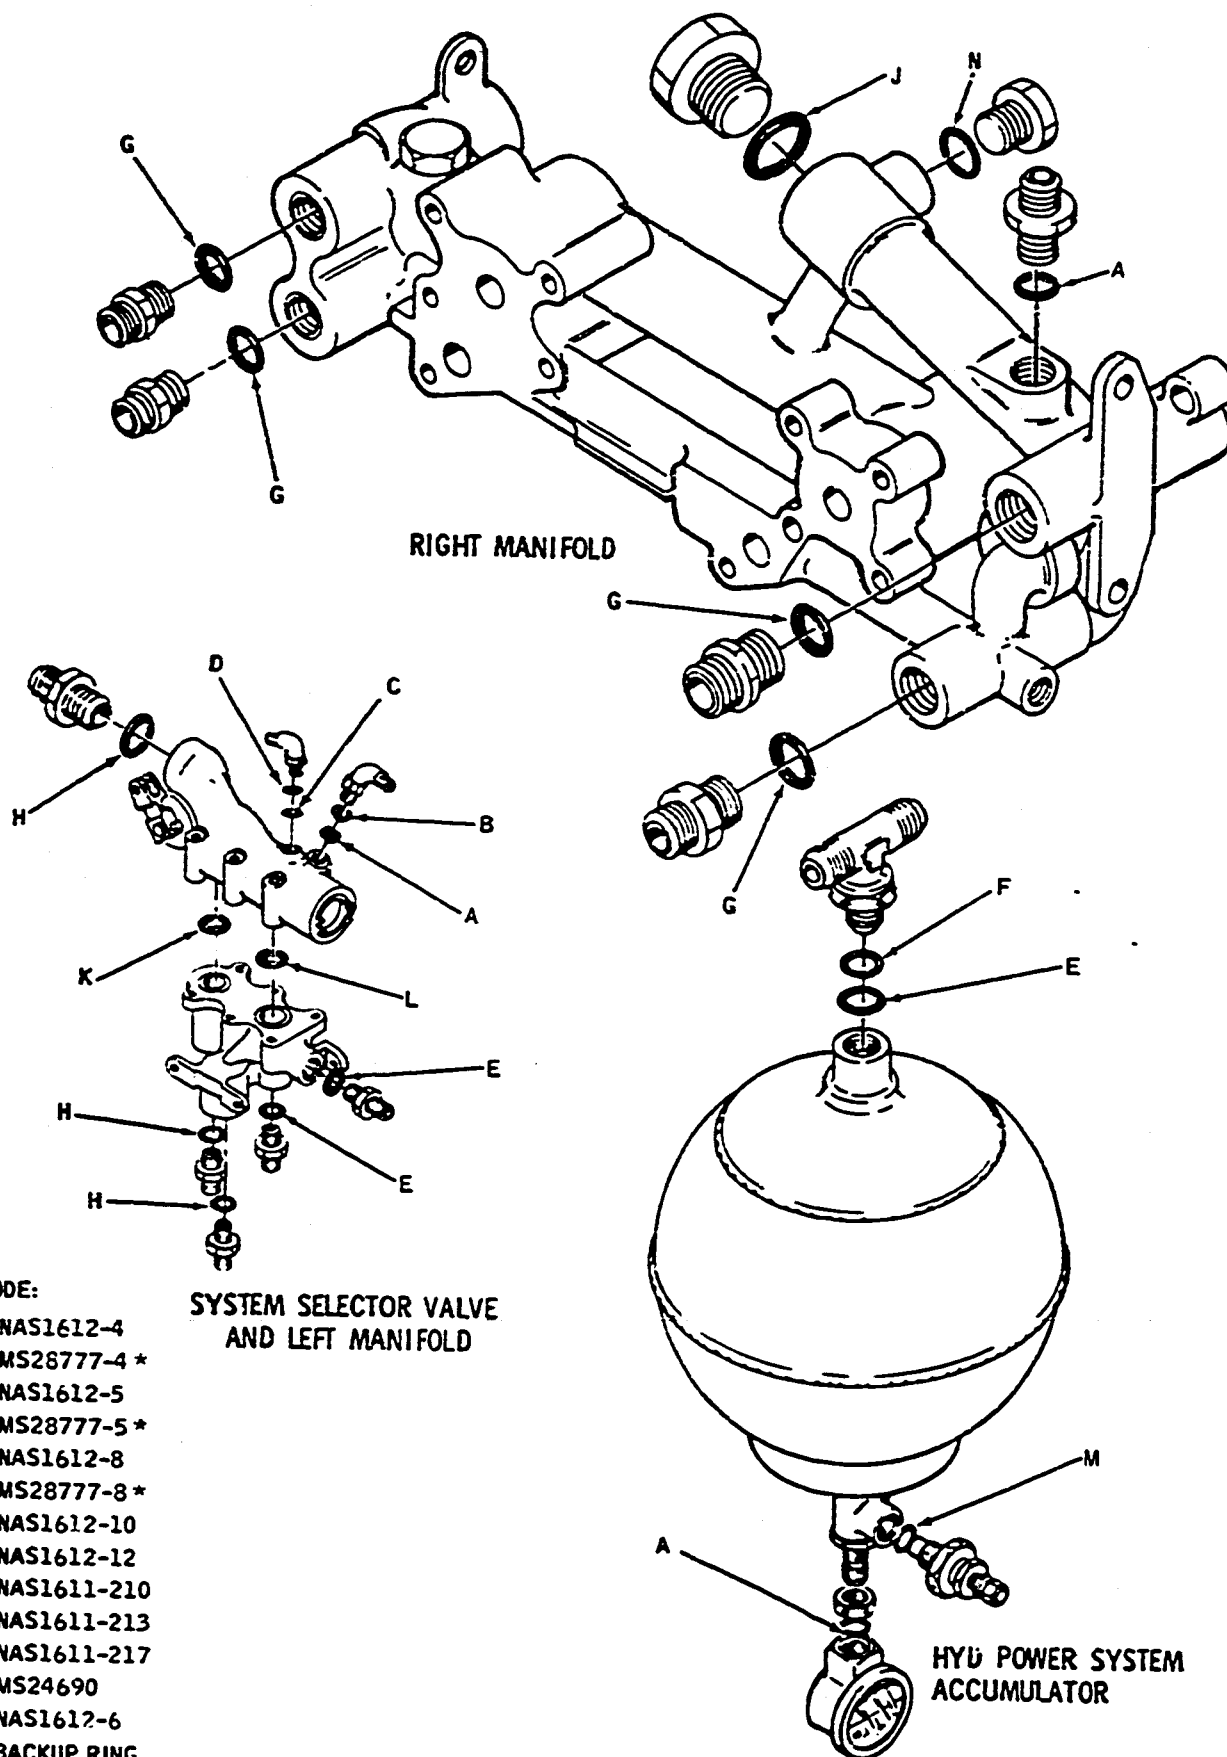

CODE:


A-NAS1612-4  
 B-MS28777-4 \*  
 C-NAS1612-5  
 D-MS28777-5 \*  
 E-NAS1612-8  
 F-MS28777-8 \*  
 G-NAS1612-10  
 H-NAS1612-12  
 J-NAS1611-210  
 K-NAS1611-213  
 L-NAS1611-217  
 M-MS24690  
 N-NAS1612-6  
 \*-BACKUP RING

SYSTEM SELECTOR VALVE  
 AND LEFT MANIFOLD

HYD POWER SYSTEM  
 ACCUMULATOR

HA2-1678A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

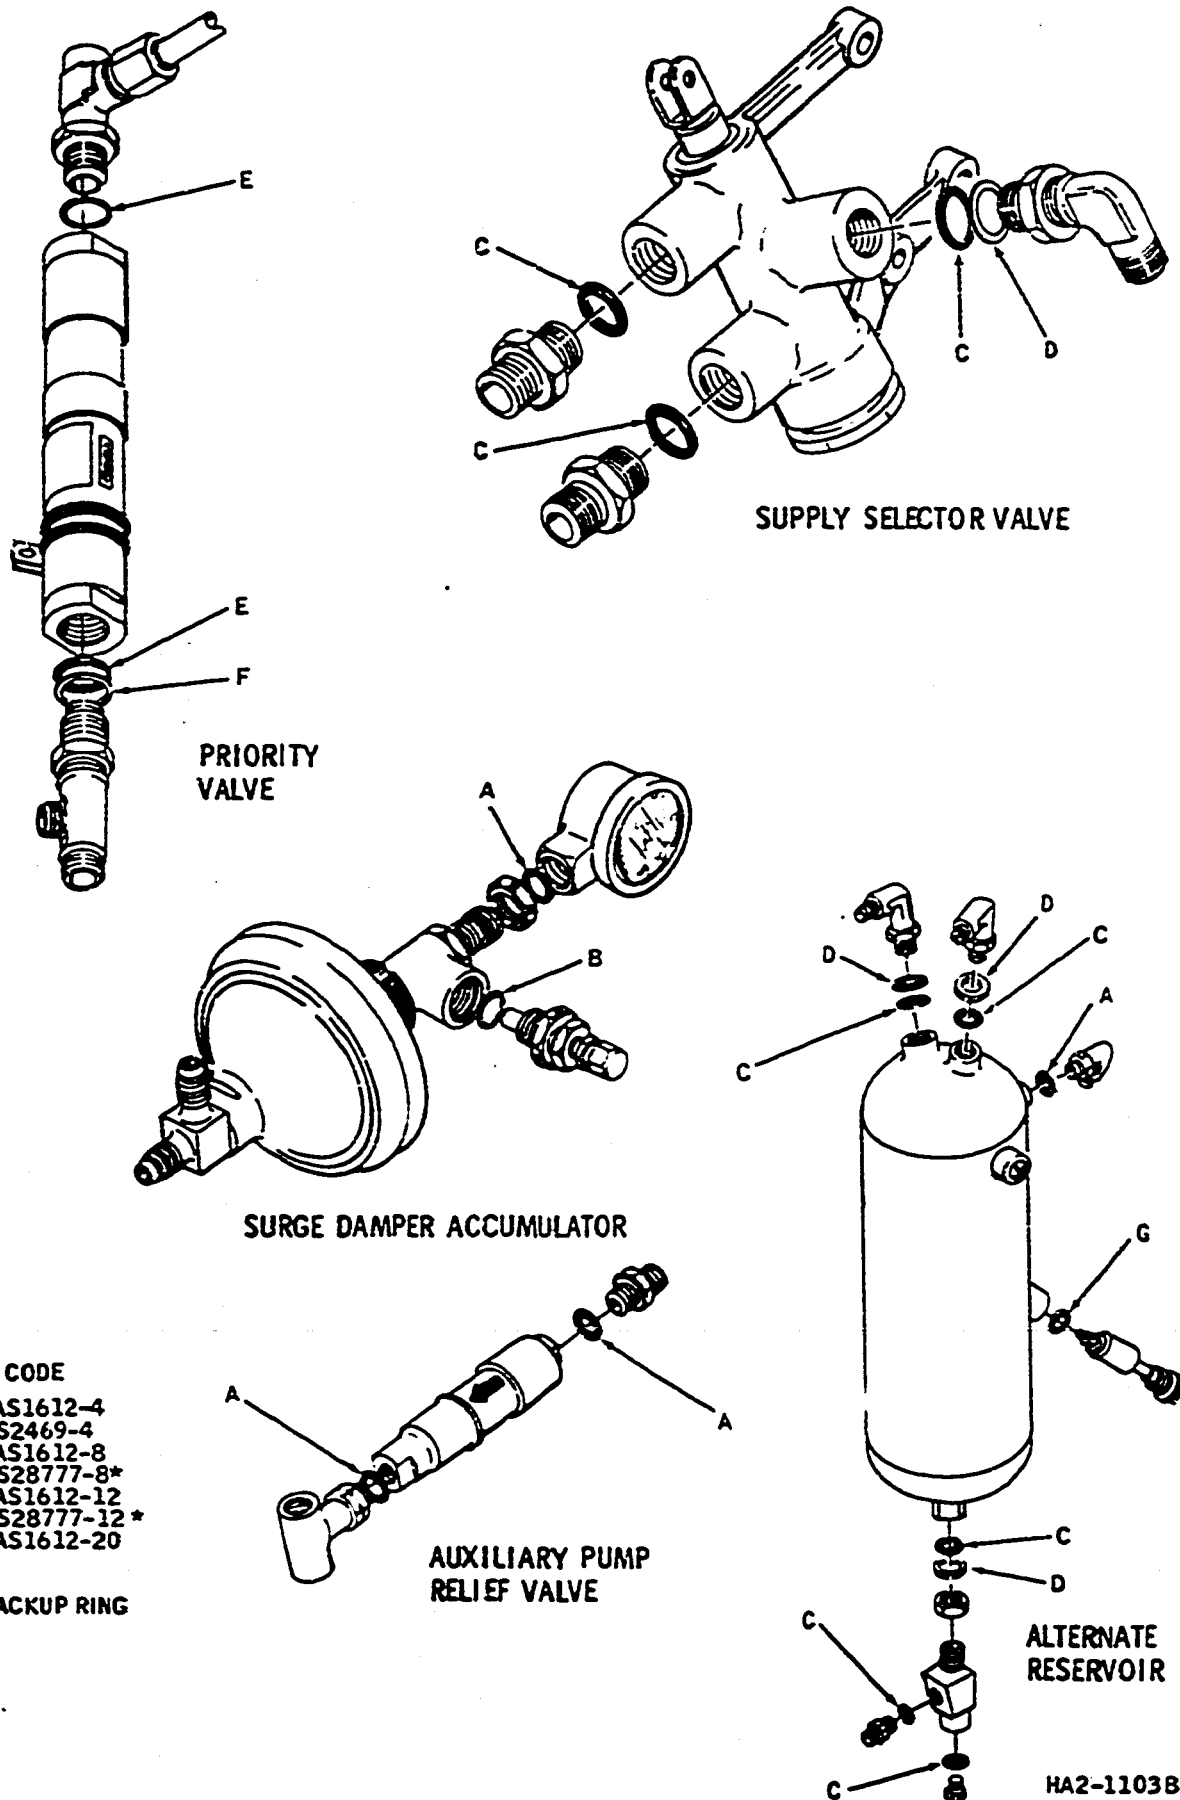


Hydraulic Power System Components -- O-Rings  
 Figure 201 (Sheet 4)

May 1/69

29-00  
 CODE 14  
 Page 207



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

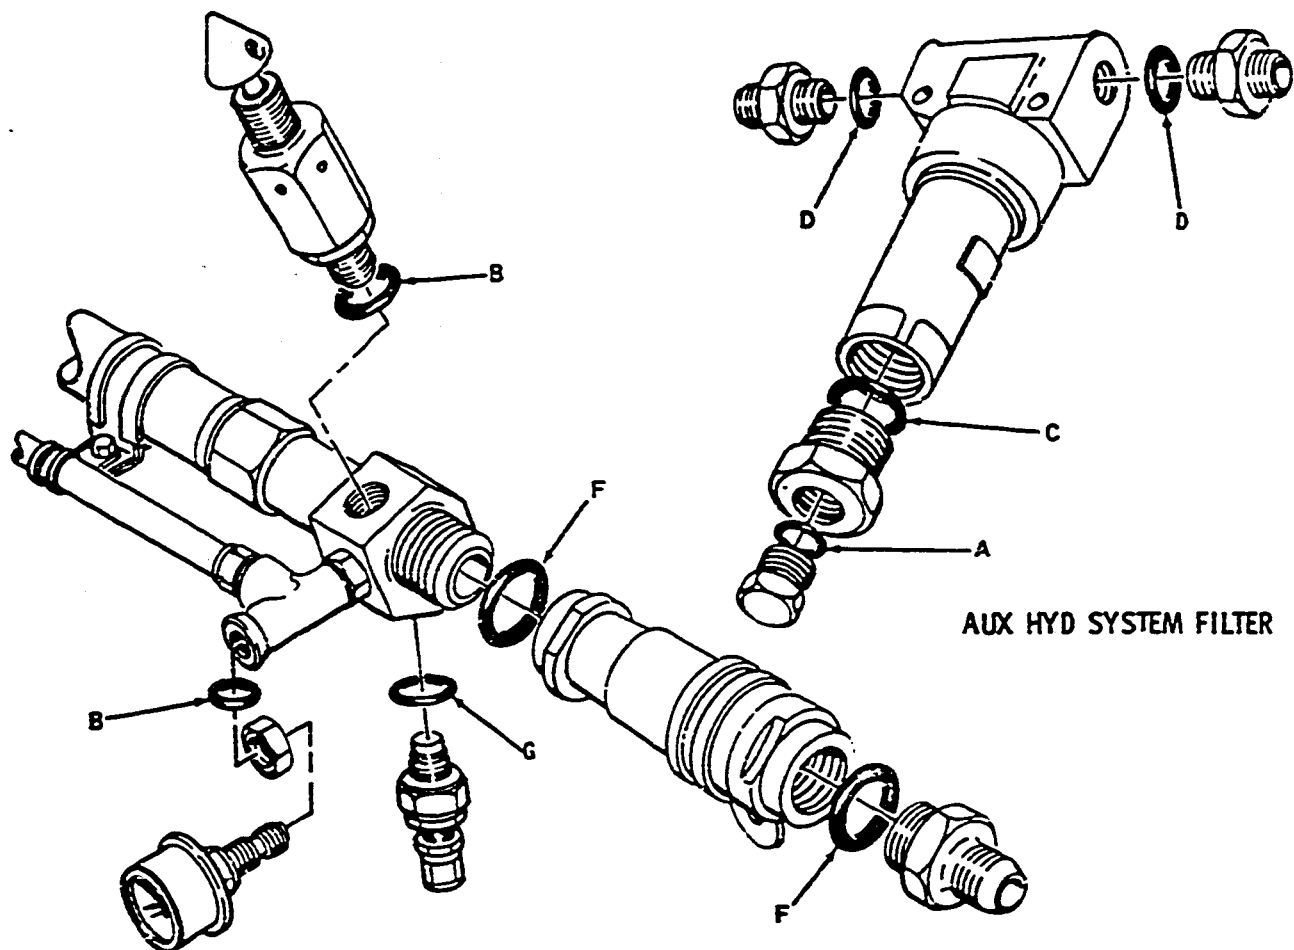


RESERVOIR AIR BLEED VALVE,  
 FILTER VALVE, PRESSURE GAGE  
 AND RELIEF VALVE

AUX HYD SYSTEM FILTER

CODE:

- A - NAS1612-2
- B - NAS1612-4
- C - NAS1612-6
- D - NAS1612-8
- E - NAS1612-10
- F - NAS1612-12
- G - MS24690

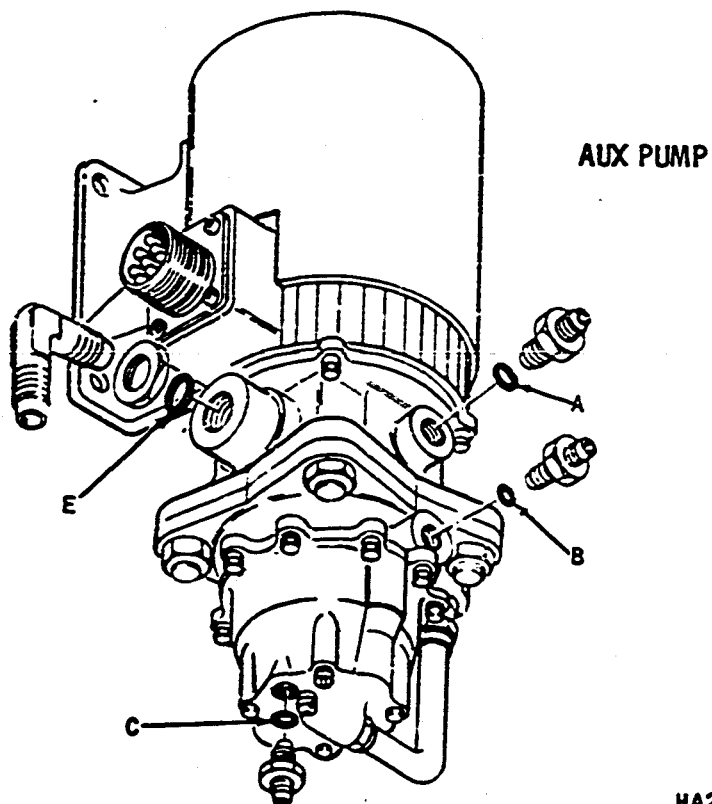

AUX PUMP

HA2-6045

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Depressurize hydraulic system by operating the brakes and manually moving the longitudinal trim handle until horizontal stabilizer movement stops.
- (4) Disconnect and cap test stand pressure and supply hoses from airplane ground service connections; install duct caps on connections and close access door.

C. Pressurize Hydraulic System with Auxiliary Hydraulic Pump Pressure

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap control handle agrees with wing flap position.
- (3) Place hydraulic system selector control lever in general system/bypass position.
- (4) Check that airplane electrical buses are energized (see Chapter 24).
- (5) Start auxiliary hydraulic pump by placing auxiliary hydraulic pump control switch momentarily in start position. Pressure indicated in the flight compartment should be 2600 to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

**CAUTION:** DO NOT HOLD THE AUXILIARY HYDRAULIC PUMP CONTROL SWITCH IN THE START (HOLD ONLY IN EMERGENCY) POSITION FOR NORMAL PRESSURIZATION.

D. Depressurize

- (1) Stop auxiliary hydraulic by placing auxiliary hydraulic pump control switch momentarily in stop position.
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.
- (3) Place hydraulic system selector control lever in general system (normal) position.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

E. Pressurize Hydraulic System with Engine-Driven Hydraulic Pump Pressure

- (1) Make certain that landing gear control lever is in down position and ground lockpins installed.
- (2) Make certain that wing flap handle agrees with wing flap position.
- (3) Make certain that applicable fire control handle is in normal position.
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Make certain that applicable engine-driven hydraulic pump control switch is in on position.
- (6) Start engine No. 2 or No. 3 (see Chapter 71). Hydraulic pressure indicated in the flight compartment should be 2800 to 3000 psi.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

F. Depressurize

- (1) Shut down engine (see Chapter 71).
- (2) Depressurize hydraulic system by operating brakes and manually moving longitudinal trim handle until horizontal stabilizer movement stops.

3. Pressurize/Depressurize Hydraulic Reservoir

A. General

- (1) The air inflation valve, air bleed valve, and air pressure gage for manually pressurizing and depressurizing the hydraulic reservoir and air chamber are located on the aft side of the wing rear spar, at the forward end of the left main gear wheel well. The valves and gage are mounted on a cross fitting just inboard of the reservoir air chamber. Access is through the left main gear inboard door.

B. Tools and Equipment Required

- (1) Pressure cylinder (clean dry compressed air or nitrogen).

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

C. Pressurize Hydraulic Reservoir

NOTE: Normal air pressure in the reservoir and air chamber should be between 30 and 35 psi.

NOTE: There are three methods of pressurizing the hydraulic reservoir:

- (1) Run an inboard engine.
- (2) Connect and operate a hydraulic test stand.
- (3) Direct pressurization of air chamber by introduction of compressed air or nitrogen.

The first two methods are automatic in that the reservoir is pressurized by action of the hydraulic fluid through the regulator-aspirator when the system is pressurized. The third method (direct inflation) will be described in the following steps.

- (1) Remove air inflation valve cap and attach pressure cylinder service hose to inflation valve.
- (2) Loosen inflation valve swivel nut three complete turns.

NOTE: The rate of inflation (flow through the valve) is governed by the degree of opening of the swivel valve.

- (3) Pressurize reservoir to 30 to 35 psi reading on air pressure gage.
- (4) Tighten swivel nut.
- (5) Disconnect service hose and install valve cap.

CAUTION: THE AIR INFLATION VALVE IS A STANDARD "AN" VALVE WHICH HAS BEEN MODIFIED BY INSTALLATION OF SKYDROL TYPE SEALS. DO NOT REPLACE THE VALVE WITH A VALVE WHICH HAS NOT BEEN MODIFIED FOR SKYDROL.

D. Depressurize Hydraulic Reservoir

- (1) Depress air bleed valve button; hold until all pressure has bled off and pressure gage reads zero.

4. Drain Hydraulic System Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Clean container of approximately 20 US gallons (16.65 Imperial gallons or 75.7 liters) capacity.

B. Drain Reservoir

- (1) Depressurize hydraulic system and reservoir (see paragraphs 2 and 3).
- (2) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (3) Remove drain unit, and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

5. Drain Auxiliary Hydraulic Pump Alternate Reservoir

A. Tools and Equipment Required

- (1) Drain unit consisting of one 3/8-inch bulkhead fitting with a suitable length of flexible hose attached.
- (2) Clean container of approximately 3 US gallons (2.5 Imperial gallons or 11.5 liters) capacity.

B. Drain Reservoir

- (1) Remove self-sealing magnetic drain plug from manifold at base of reservoir. Insert drain unit into plug port, and drain fluid from reservoir into clean container.
- (2) Remove drain unit and install magnetic drain plug. Tighten magnetic drain plug to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

6. Hydraulic System Pressure Decay Rates

A. Decay Rate Test

- (1) By observing the time it takes for the hydraulic system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi, it is possible, in most cases, to detect units that are leaking excessively. This procedure is not infallible because the sum of the maximum allowable leakage rates determines the minimum time permissible for pressure decay. The hydraulic system with average leakage will maintain pressure for longer periods than indicated and may do so even with one unit leaking excessively.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The main hydraulic system should be tested for pressure decay time under the following conditions:
  - (a) System selector valve in general system/bypass or general system (normal).
  - (b) Nosewheel straight ahead plus or minus 30 degrees and steering valve in neutral position.
  - (c) Manual main gear door valve open.
  - (d) Landing gear down and locked.
  - (e) Wing flaps up.
  - (f) Accumulators properly charged.
  - (g) Aileron shutoff valve off.
  - (h) Rudder shutoff valve off.
  - (i) Thrust reversers stowed.
- (3) Pressurize main hydraulic system to 2900 ( $\pm 100$ ) psi with auxiliary pump or hydraulic test stand. Then shut off hydraulic power source and note time interval required for system pressure to decrease 1000 psi. This should be more than 34 seconds on a new airplane or more than 23 seconds on an airplane in service before overhaul. If pressure decay time is less, the main hydraulic system should be inspected for a malfunctioning unit.
- (4) If pressure decay test indicates that a unit in the main hydraulic system was leaking excessively, that unit may be in the nose or main gear subsystem, the main gear door subsystem, the flap subsystem, the slot subsystem, the selector valve, or the compressor subsystem. By placing the subsystem control valves in opposite positions one at a time and repeating the pressure decay test, it is possible that the faulty unit may be located.
- (5) Rudder power hydraulic system may be tested for pressure decay time by using procedures outlined in steps (2) and (3), except that the rudder shutoff valve should be on. Decay time should be more than 10 seconds on a new airplane or more than 8 seconds on an airplane in service before overhaul. If less, the rudder power system should be inspected for a malfunctioning unit.

Nov 1/69

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Supplementary information may be obtained for the rudder power hydraulic system by using the auxiliary rudder system pump and accumulator air gage to test the time for rudder pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi. With the rudder hydraulic power shutoff valve off, the time should be more than 2 minutes. With the rudder hydraulic power shutoff valve on, the time should be 12 seconds on a new airplane and 10 seconds on an airplane in service before overhaul.
- (7) Aileron hydraulic power system may be tested for pressure decay by using procedures outlined in steps (2) and (3), except that the aileron hydraulic power shutoff valve should be on. The decay time should be more than 6-1/2 seconds on a new airplane or more than 4-1/2 seconds on an airplane in service before overhaul. If less, the aileron power system should be inspected for a malfunctioning unit.
- (8) Brake system and the nose gear steering system are isolated from the main hydraulic system by check valves and may be tested separately. Using the brake accumulator gages, the pressure decay time for brake system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 10 hours with the parking brake off, and 2 hours with the parking brake on. With the brake accumulators fully charged deplete the general system pressure. Wait 3 to 5 minutes and then set the parking brake and hold the parking brake pressure for 15 minutes. The drop in pressure at the brake accumulators should not exceed 124 psi during this time.
- (9) Release the parking brakes, and build up brake accumulator pressure to 2900 ( $\pm 100$ ) psi. With hydraulic power off, and brakes off, check brake accumulator pressure. Drop in pressure at the accumulators should not exceed 100 psi in 30 minutes. Fast decay time for the brake system with parking brake off, indicates either a faulty brake valve or a faulty check valve in the right manifold. A fast decay time with the parking brake on indicates a faulty antiskid valve or a faulty brake valve.
- (10) Using the gages on the nose pressure accumulators, the time for the nose gear steering system pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi should be more than 19 minutes. If less, one of the pressure check valves is faulty, or the nose gear steering control valve is faulty or out of neutral.

**CAUTION:** ALL LANDING GEAR GROUND LOCKPINS MUST BE INSTALLED BEFORE CONDUCTING THE FOLLOWING TEST.

- (11) Under conditions outlined in step (2), except with the landing gear control valve in the up position, the time for pressure decay should be unchanged. If time limits change more than 5 seconds as determined in paragraph (3), a faulty unit is in the gear subsystem.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (12) Under conditions outlined in step (2), except with the main gear door manual control valve in the closed position, the decay time should be more than 24 seconds on a new airplane and 18 seconds on an airplane in service before overhaul. If less, the faulty unit is in the main gear door subsystem.
- (13) Under conditions outlined in step (2), except with the flap control valve in the down position, the decay time should be more than 24 seconds on a new airplane and 17 seconds on an airplane in service before overhaul. If less, the faulty unit is in the flap subsystem.
- (14) Under conditions outlined in step (2), time limit for pressure decay should remain unchanged as determined in paragraph (3) with the slot valve in either position, or the selector valve in either general system/bypass or general system (normal). If the time changes with a change of valve position, the faulty unit is in that subsystem.
- (15) The thrust reverser system is isolated from the main system by an electrically operated shutoff valve which is open only during thrust reverser actuation. Therefore, main system decay is not affected by the thrust reverser system except during reverser actuation or at the thrust reverser extended position. Additional information may be obtained for the thrust reverser system by using the auxiliary reverser system pump and reverser system pressure gage or accumulator gage to test the time for reverser pressure of 2900 ( $\pm 100$ ) psi to decrease 1000 psi. With the reversers in the stowed position, the decay time should be greater than 3 minutes on a new aircraft or greater than 1-1/2 minutes on an aircraft in service before overhaul. If times are less, the reverser system should be inspected for a malfunction.



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - INSPECTION/CHECK

1. General

- A. The purpose of this section is to provide a logical guide for removing the contaminants (foreign particles) from the fluid, units, and lines of the DC-8 hydraulic systems by flushing the systems with clean hydraulic fluid.
- B. This procedure may be deviated from as dictated by the individual circumstances.
- C. The removal of overheated or diluted fluid, would follow generally the same procedure with the exception that the removed contaminated fluid would be caught in containers rather than recirculated through the hydraulic test stand.
- D. The DC-8 is provided with a main, a spoiler, and two auxiliary hydraulic systems. The auxiliary systems consist of the main auxiliary system, and the rudder standby system. All of these systems are subject to contamination which must be removed.
- E. Contamination in the hydraulic sense may consist of foreign particles (metal, rubber, plastic, dirt, etc.), fluids other than hydraulic fluid, and damaged hydraulic fluid, which because of excessive heat and friction, no longer meets the minimum requirements.
- F. The system filters ordinarily remove the minor contamination associated with normal wear. These filter elements are replaced at periodic inspections.
- G. Contamination which requires a system or subsystem to be flushed is usually the result of:
  - (1) A damaged unit such as a pump failure.
  - (2) A malfunctioning unit or system, the nature of which lends suspicion to possibly contaminated fluid.
  - (3) Overheated or diluted fluid, which does not meet minimum specification requirements.
- H. The presence of contamination may be determined by:
  - (1) Checking the filter elements and bowls.
  - (2) Checking the magnetic drain plugs in the reservoirs and filters.
  - (3) Checking the fluid in the reservoirs.
  - (4) Taking samples of the fluid at various locations.

Oct 15/68

29-00  
CODE 1  
Page 601

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Checking the individual components.

2. Isolation

A. The hydraulic subsystems may be isolated as follows:

- (1) The main hydraulic power system is physically separated from the lateral control spoiler system.
- (2) The lateral control spoiler system pump and supply is separated from the remainder of the lateral control system by a filter.
- (3) The main hydraulic power system engine-driven hydraulic pumps are separated from the main system by the dual filter and relief valve assembly.
- (4) The auxiliary hydraulic pump is separated from the main system by the auxiliary hydraulic pump filter.
- (5) The aileron control valves and actuating cylinders are isolated from the main hydraulic power system by the aileron line filters.
- (6) The empennage hydraulic power system is separated from the main hydraulic power system by the rudder filter.
- (7) The filter in the main hydraulic system reservoir filters all returning fluid.
- (8) A filter is installed in the engine-driven hydraulic pump low-pressure (case drain) return line to separate the pump return fluid from the main hydraulic system fluid.
- (9) The rudder standby hydraulic system is separated from the main hydraulic power system by a filter and interconnect line.
- (10) In addition to the filter divisions, the subsystems have been broken down into distribution and utility runs for ease of flushing and for isolation in specific cases where a known contamination source exists.

3. Tools and Equipment Required

- A. One hydraulic test stand capable of operating with Skydrol hydraulic fluid, and fitted with 10-micron or smaller filter.
- B. Pressure and return hoses, jumper lines, and fittings as required by the following procedures.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

4. Flush Main Hydraulic Power System (Normal and Auxiliary)

A. Pressure Lines (Engine-Driven Pumps to Dual Filter and Relief Valve)

- (1) Disconnect engine-driven hydraulic pump pressure hose from pump in Number 3 pylon.
- (2) Disconnect pressure line from right side of dual filter and relief valve, located in left main gear wheel well.
- (3) At Number 3 pylon, replace check valve, located between engine pump hose and pressure line, with bulkhead fitting.
- (4) Connect engine pump pressure hose to test stand pressure hose, and connect disconnected line at dual filter to test stand return hose.
- (5) Pressurize test stand to 200 psi at 5 to 20 gpm fluid flow.
- (6) Flush circuit for five minutes.
- (7) Depressurize test stand.
- (8) Repeat Steps (1) through (7) for pressure line between dual filter and Number 2 engine pump.
- (9) Remove dual filter and relief valve filter elements, clean filter bowls, and install clean filter elements (see 29-10-17).
- (10) Inspect, clean, and/or replace check valves.
- (11) Restore all lines and units to original configuration.


B. Case Drain Lines (Airplanes 801-811.)

- (1) Disconnect case drain hose from engine-driven pump on Number 3 engine, and connect this hose to test stand pressure hose.
- (2) At Number 3 pylon replace check valve, located between case drain hose and case drain line with bulkhead fitting.
- (3) Disconnect aileron shutoff valve low-pressure line from tee fitting in case drain line located above inboard side of dual filter and relief valve (see Figure 601). Cap tee.
- (4) Disconnect empennage low-pressure return line from case drain line tee fitting, located inboard of tee mentioned in Step (3). Cap tee.
- (5) Disconnect wing flap thermal relief valve low-pressure return line from tee in case drain line. Cap tee.
- (6) Disconnect Number 2 engine pump case drain line from tee fitting at reservoir. Cap fitting.

Oct 15/68

29-00  
CODE 1  
Page 603

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

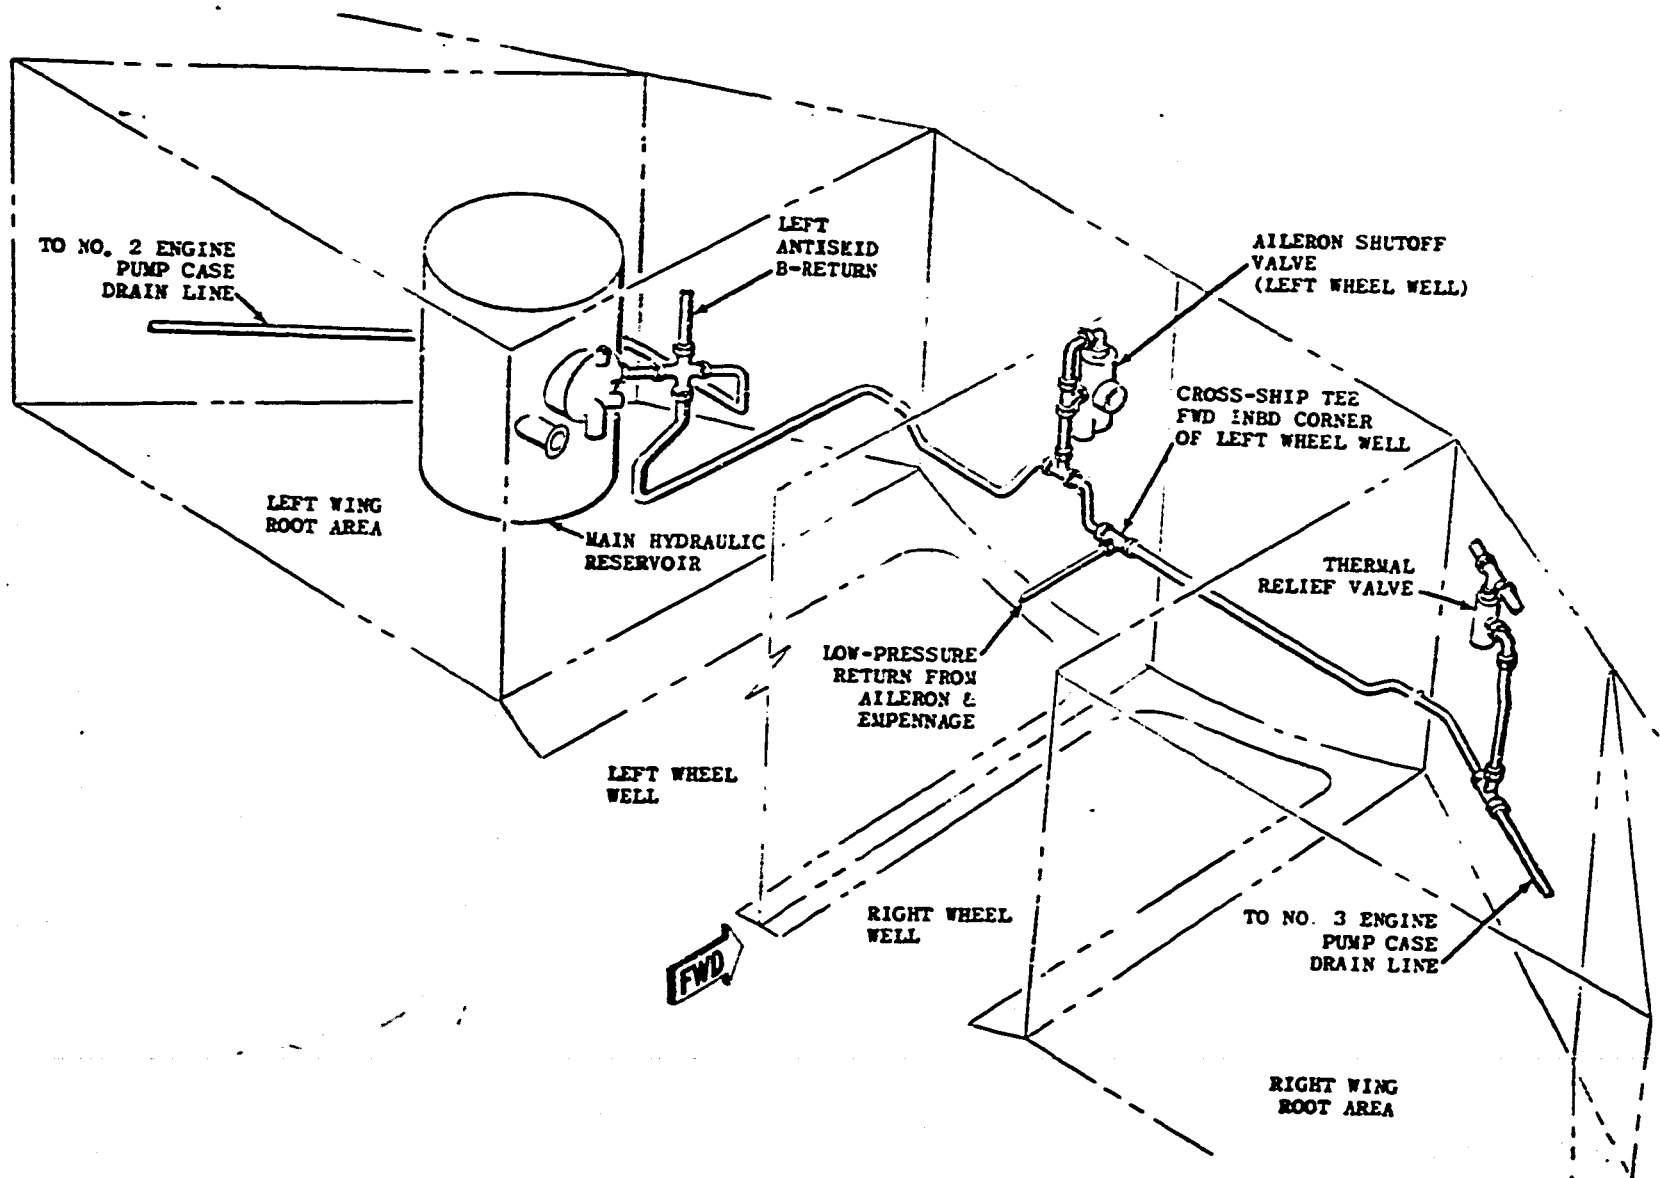

Flushing Procedure Line Connection Locations  
 (Airplanes 801-811)  
 Figure 601

H2-5497

29-00  
 CODE 1  
 Page 604

Oct 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (7) Disconnect case drain line from low-pressure return port in reservoir. Connect test stand return hose to this line. Cap reservoir port.
- (8) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (9) Flush circuit for five minutes.
- (10) Depressurize test stand.
- (11) Repeat Steps (1) and (2) for Number 2 engine-driven pump.
- (12) Connect Number 2 engine pump case drain line, which was disconnected and capped in Step (6), to hydraulic test stand return hose.
- (13) Repeat Steps (8) through (10) for this circuit.
- (14) Inspect, clean, and/or replace check valves.
- (15) Restore all lines and units to original configuration.


C. Case Drain Lines (Airplanes 812-822.)

- (1) Disconnect case drain hose from engine-driven pump in Number 3 pylon. Connect hose to hydraulic test stand pressure hose.
- (2) At Number 3 pylon, replace check valve between engine-driven pump hose and case drain line with bulkhead fitting.
- (3) At tee fitting, located in low-pressure return line adjacent to reservoir return port (see Figure 602), disconnect Number 2 engine pump case drain line. Cap tee fitting.
- (4) Disconnect case drain line from low-pressure return port in reservoir, and connect this line to test stand return hose. Cap reservoir port.
- (5) Disconnect lines from both sides of case drain filter and check valve, and jumper these return lines.
- (6) Pressurize test stand to 200 psi maximum, at 20 gpm flow.
- (7) Flush circuit for five minutes.
- (8) Depressurize test stand.
- (9) Repeat Steps (1) and (2) for engine-driven pump in Number 2 pylon.
- (10) Connect Number 2 engine pump case drain line, which was disconnected in Step (3), to hydraulic test stand return hose.
- (11) Repeat Step (5) for Number 2 engine case drain filter and check valve.
- (12) Repeat Steps (6), (7), and (8) for Number 2 engine pump case drain lines.

Oct 15/68

29-C0  
CODE 1  
Page 605

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

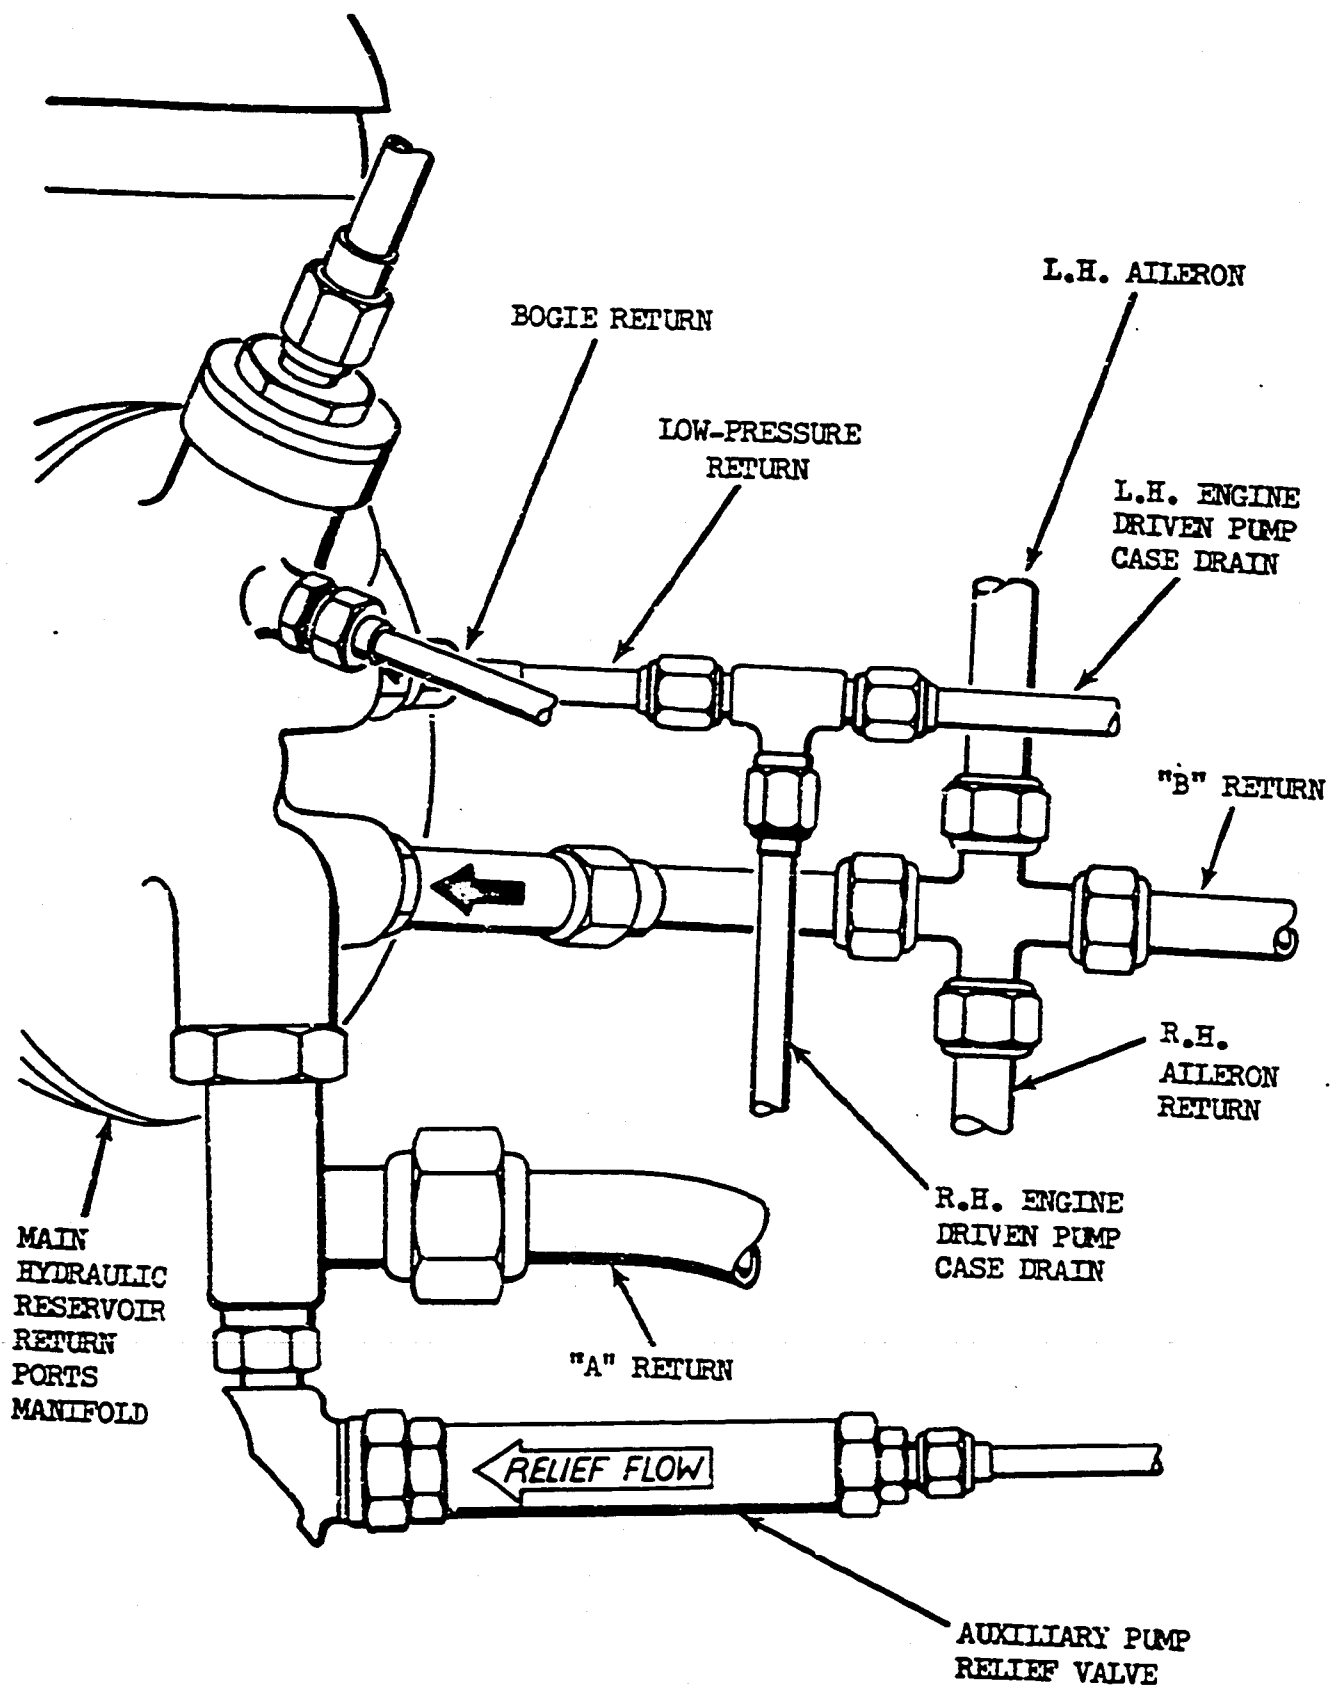

Flushing Procedure Line Connection Locations  
 (Airplanes 812-822)  
 Figure 602

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (13) Clean filter bowls and replace filter elements in case drain filters, located on rear spar (see 29-10-15).
- (14) Inspect, clean, and/or replace check valves.
- (15) Restore all lines and units to original configuration.

D. Reservoir and Suction System (Airplanes 801-811.)

- (1) Do not remove large reducer tee fitting and connecting supply lines from reservoir (see Figure 603).
- (2) Connect hydraulic test stand return hose to airplane ground service supply connection.
- (3) Drain reservoir, remove reservoir filter element (see 29-10-2), and clean out reservoir.
- (4) Temporarily install reservoir filter cover plate with all return ports plugged except for 60 psi relief valve on A-return port.
- (5) Disconnect aspirator line at reservoir end. Cap reservoir end and cap reservoir port.
- (6) Open fire shutoff valve on Number 2 engine.
- (7) Disconnect suction hose from Number 2 engine-driven pump.
- (8) Connect test stand pressure hose to suction hose removed in Step (7).
- (9) Pressurize test stand to 45 psi at 20 gpm flow.
- (10) Flush from engine pump suction hose to reservoir for five minutes.


**CAUTION:** WHEN FLUSHING THE SUPPLY LINES, MONITOR THE RESERVOIR FLUID LEVEL AND THE AIR PRESSURE GAGE ON TOP OF THE RESERVOIR AIR BLEED VALVE. THE FLUID LEVEL MUST BE VISIBLE IN THE SIGHT GAGE, AND THE PRESSURE MUST NOT EXCEED 45 PSI TO PREVENT DAMAGE TO THE RESERVOIR.

- (11) Depressurize test stand.
- (12) Close Number 2 engine fire shutoff valve, and open Number 3 engine fire shutoff valve.
- (13) Remove test stand pressure hose from Number 2 engine pump supply line, and connect it to Number 3 engine-driven pump supply line.
- (14) Repeat Steps (9) through (11).
- (15) Disconnect test stand from engine-driven pump supply hose, and close Number 3 engine fire shutoff valve.

Oct 15/68

29-00  
CODE 1  
Page 607

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

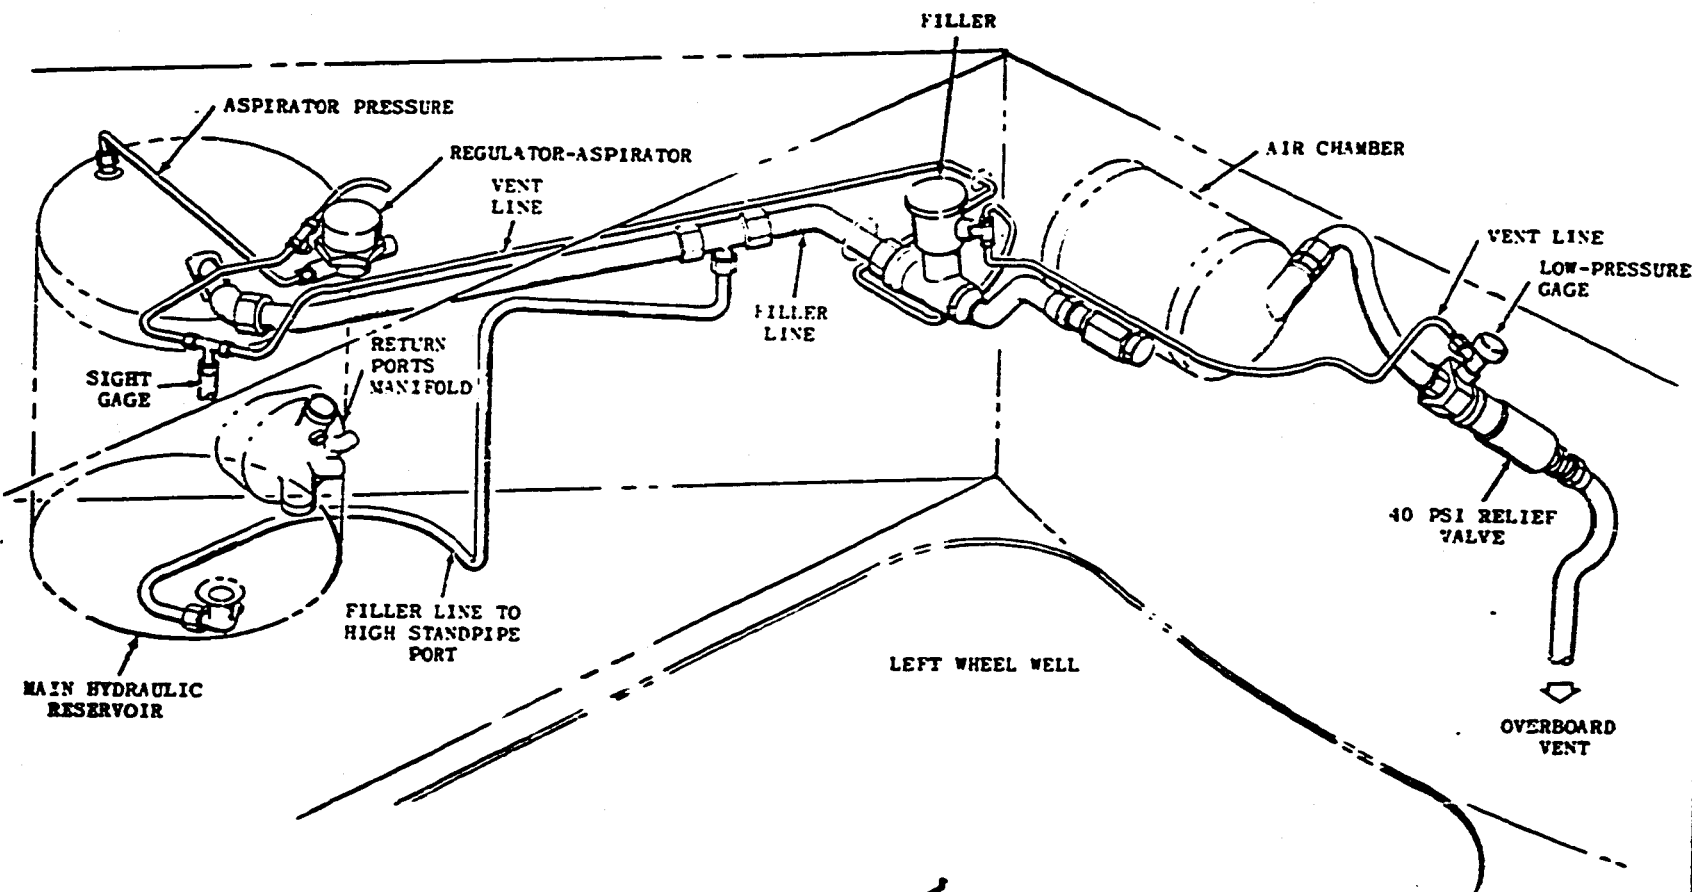



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (16) Uncap aspirator line and reservoir aspirator port. Connect aspirator line to reservoir.
- (17) Flush reservoir, air chamber, and associated lines as follows:
  - (a) Disconnect line which runs from air chamber to reservoir air relief valve, located downstream of air bleed valve in left wheel well.
  - (b) Connect this line to test stand pressure hose.
  - (c) At this same location, disconnect vent line which runs to tee fitting in reservoir filler neck. Cap line.
  - (d) At filler neck, disconnect both vent lines and connect them together with jumper line.
  - (e) At tee in filler line, disconnect line which runs to high standpipe port at bottom of main reservoir. Cap tee fitting, and connect disconnected line to test stand return hose.
  - (f) Pressurize test stand to 45 psi maximum at 20 gpm flow.
  - (g) Flush circuit for five minutes.
- (18) Depressurize test stand.
- (19) Disconnect test stand pressure hose from overboard line, and cap this line. Connect test stand pressure hose to vent line that was capped in Step (17, c).
- (20) Repeat Steps (17, f and g).
- (21) Depressurize test stand, drain and clean out reservoir. Install new reservoir filter element (see 29-10-2).
- (22) Restore all lines and units to original configuration.

E. Reservoir and Suction System (Airplanes 812-822.)

- (1) Do not remove large reducer tee fitting and connecting supply lines from reservoir (see Figure 603).
- (2) Connect hydraulic test stand return hose to airplane ground service supply connection.
- (3) Drain reservoir, remove reservoir filter element (see 29-10-2). Clean out reservoir.
- (4) Temporarily install reservoir filter cover plate with all return ports plugged.

Oct 15/68

29-00  
CODE 1  
Page 609

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Disconnect aspirator line at reservoir end. Cap reservoir end and cap reservoir port.
- (6) Open fire shutoff valve on Number 2 engine.
- (7) Disconnect suction hose from Number 2 engine-driven pump.
- (8) Connect test stand pressure hose to suction hose removed in Step (7).
- (9) Pressurize test stand to 45 psi at 20 gpm flow.
- (10) Flush from engine pump suction hose to reservoir for five minutes.  

**CAUTION:** WHEN FLUSHING THE SUPPLY LINES, MONITOR THE RESERVOIR FLUID LEVEL AND THE AIR PRESSURE GAGE ON TOP OF THE RESERVOIR AIR BLEED VALVE. THE FLUID LEVEL MUST BE VISIBLE IN THE SIGHT GAGE, AND THE PRESSURE MUST NOT EXCEED 45 PSI TO PREVENT DAMAGE TO THE RESERVOIR.
- (11) Depressurize test stand.
- (12) Close Number 2 engine fire shutoff valve, and open Number 3 engine fire shutoff valve.
- (13) Remove test stand pressure hose from Number 2 engine pump supply line, and connect to Number 3 engine-driven pump supply line.
- (14) Repeat Steps (9) through (11).
- (15) Disconnect test stand from engine-driven pump supply hose, and close Number 3 engine fire shutoff valve.
- (16) Uncap aspirator line and reservoir aspirator port. Connect aspirator line to reservoir.
- (17) Flush reservoir, air chamber, and associated lines as follows:
  - (a) Disconnect line which runs from air chamber to reservoir air relief valve, located downstream of air bleed valve in left wheel well.
  - (b) Connect this line to test stand pressure hose.
  - (c) At this same location, disconnect vent line which runs to tee fitting in reservoir filler neck. Cap line.
  - (d) At filler neck, disconnect both vent lines and connect together with jumper line.
  - (e) At tee in filler line, disconnect line which runs to high standpipe port at bottom of main reservoir. Cap tee fitting, and connect disconnected line to test stand return hose.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

(f) Pressurize test stand to 45 psi maximum at 20 gpm flow.

(g) Flush circuit for five minutes.

(18) Depressurize test stand.

(19) Disconnect test stand pressure hose from overboard line and cap this line. Connect test stand pressure hose to vent line that was capped in Step (17, c).

(20) Repeat Steps (17, f and g).

(21) Depressurize test stand, drain and clean out reservoir. Install new reservoir filter element (see 29-10-2).

(22) Restore all lines and units to original configuration.

F. Auxiliary Hydraulic Pump System Alternate Reservoir (Airplanes 801-811.)

NOTE: The auxiliary pump alternate reservoir may be contaminated by the wing flap return line or the auxiliary pump bypass.

(1) Disconnect wing flap return line from flap return port in main hydraulic reservoir (see Figure 606). Connect line to test stand pressure hose.

(2) Disconnect alternate supply line from supply selector valve (see Figure 604). Connect line to test stand return hose.

(3) Pressurize test stand to 100 psi maximum at 20 gpm flow.

(4) Flush circuit for five minutes.

(5) Depressurize test stand, and drain alternate reservoir.

(6) Restore lines to original configuration.

G. Auxiliary Hydraulic Pump System Alternate Reservoir (Airplanes 812-822.)

NOTE: The auxiliary pump alternate reservoir may be contaminated by the wing flap return line, the auxiliary pump bypass line, or the low-pressure return lines that tie into the wing flap lines.


(1) Disconnect wing flap return line from tee fitting upstream of low-pressure return line (see Figure 606). Cap tee.

(2) Connect wing flap return line to test stand pressure hose.

(3) Disconnect alternate supply line from supply selector valve. Connect line to test stand return hose (see Figure 605).

(4) Pressurize test stand to 100 psi maximum at 20 gpm flow.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

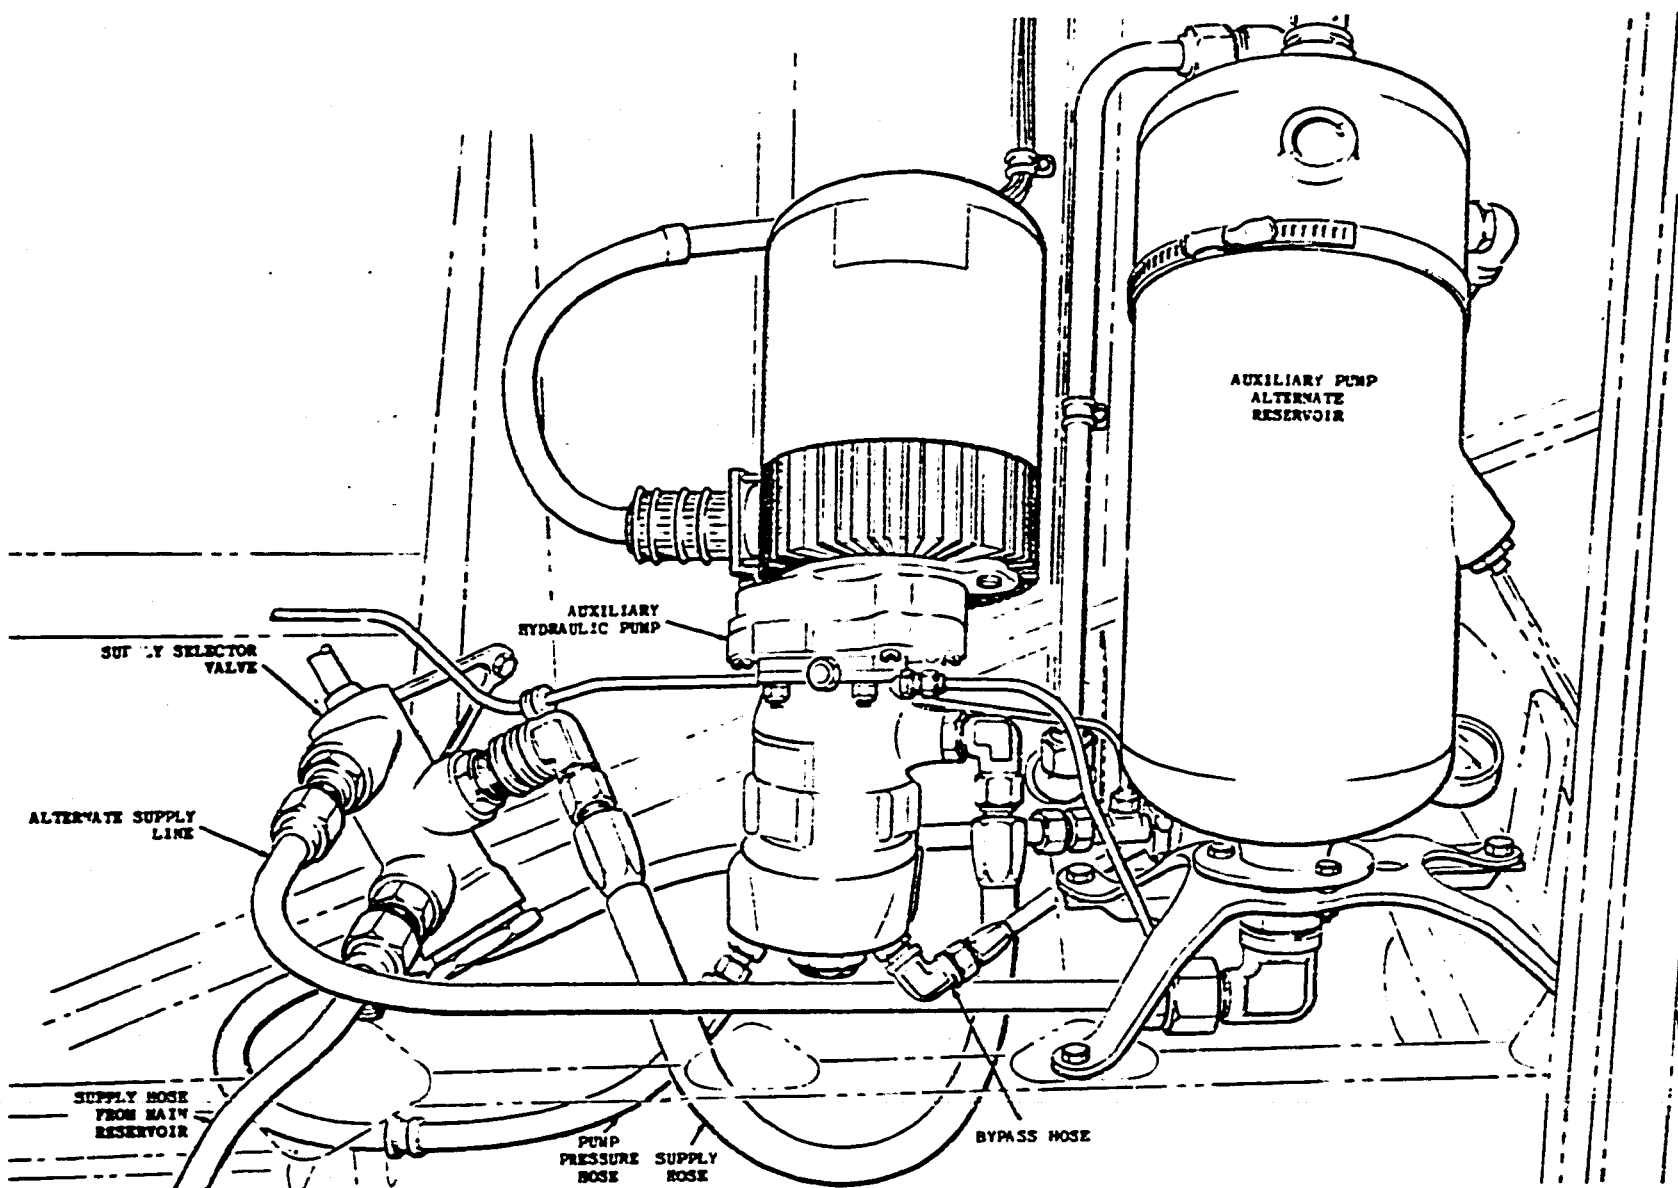

Flushing Procedure Line Connection Locations  
(Airplanes 801-811)  
Figure 604


H2-5042

29-00  
CODE 1  
Page 612

Oct 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

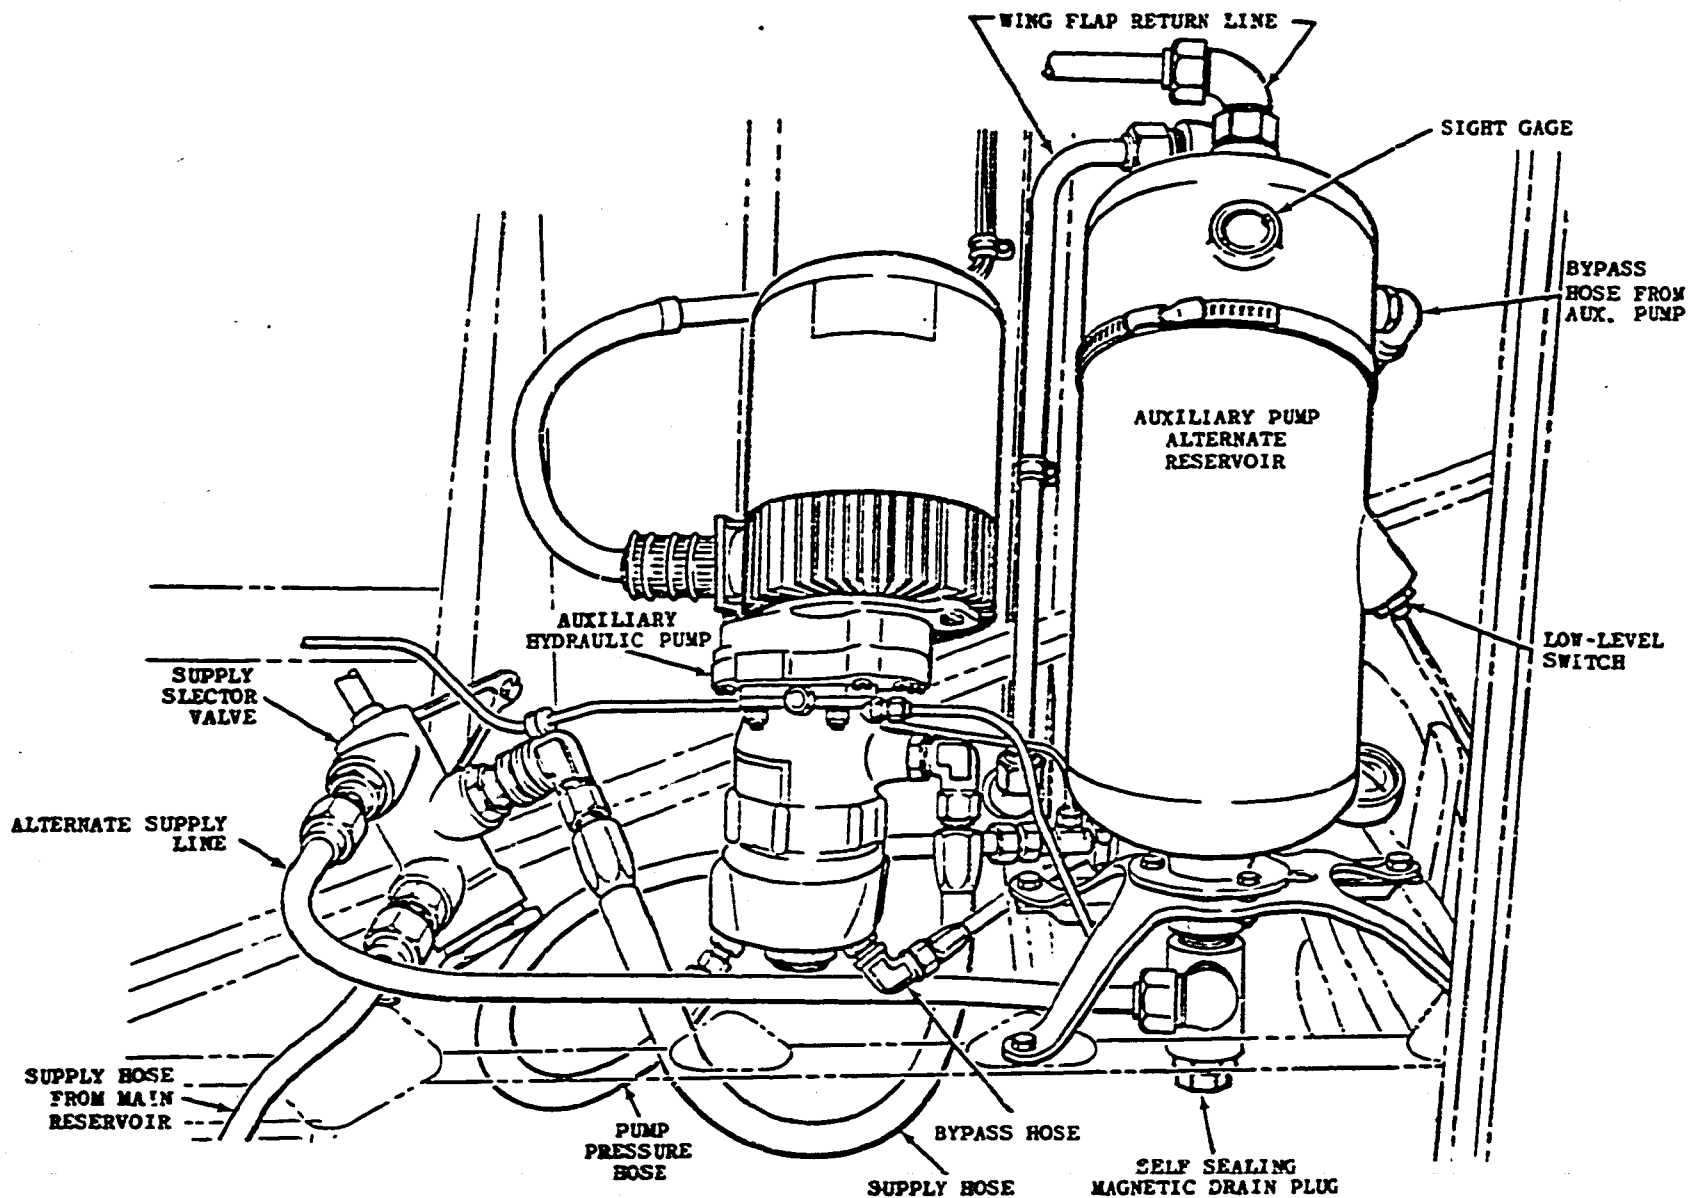


Flushing Procedure Line Connection Locations  
 (Airplanes 812-822)  
 Figure 605

Oct 15/68

H2-5375  
 29-00  
 CODE 1  
 Page 613

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

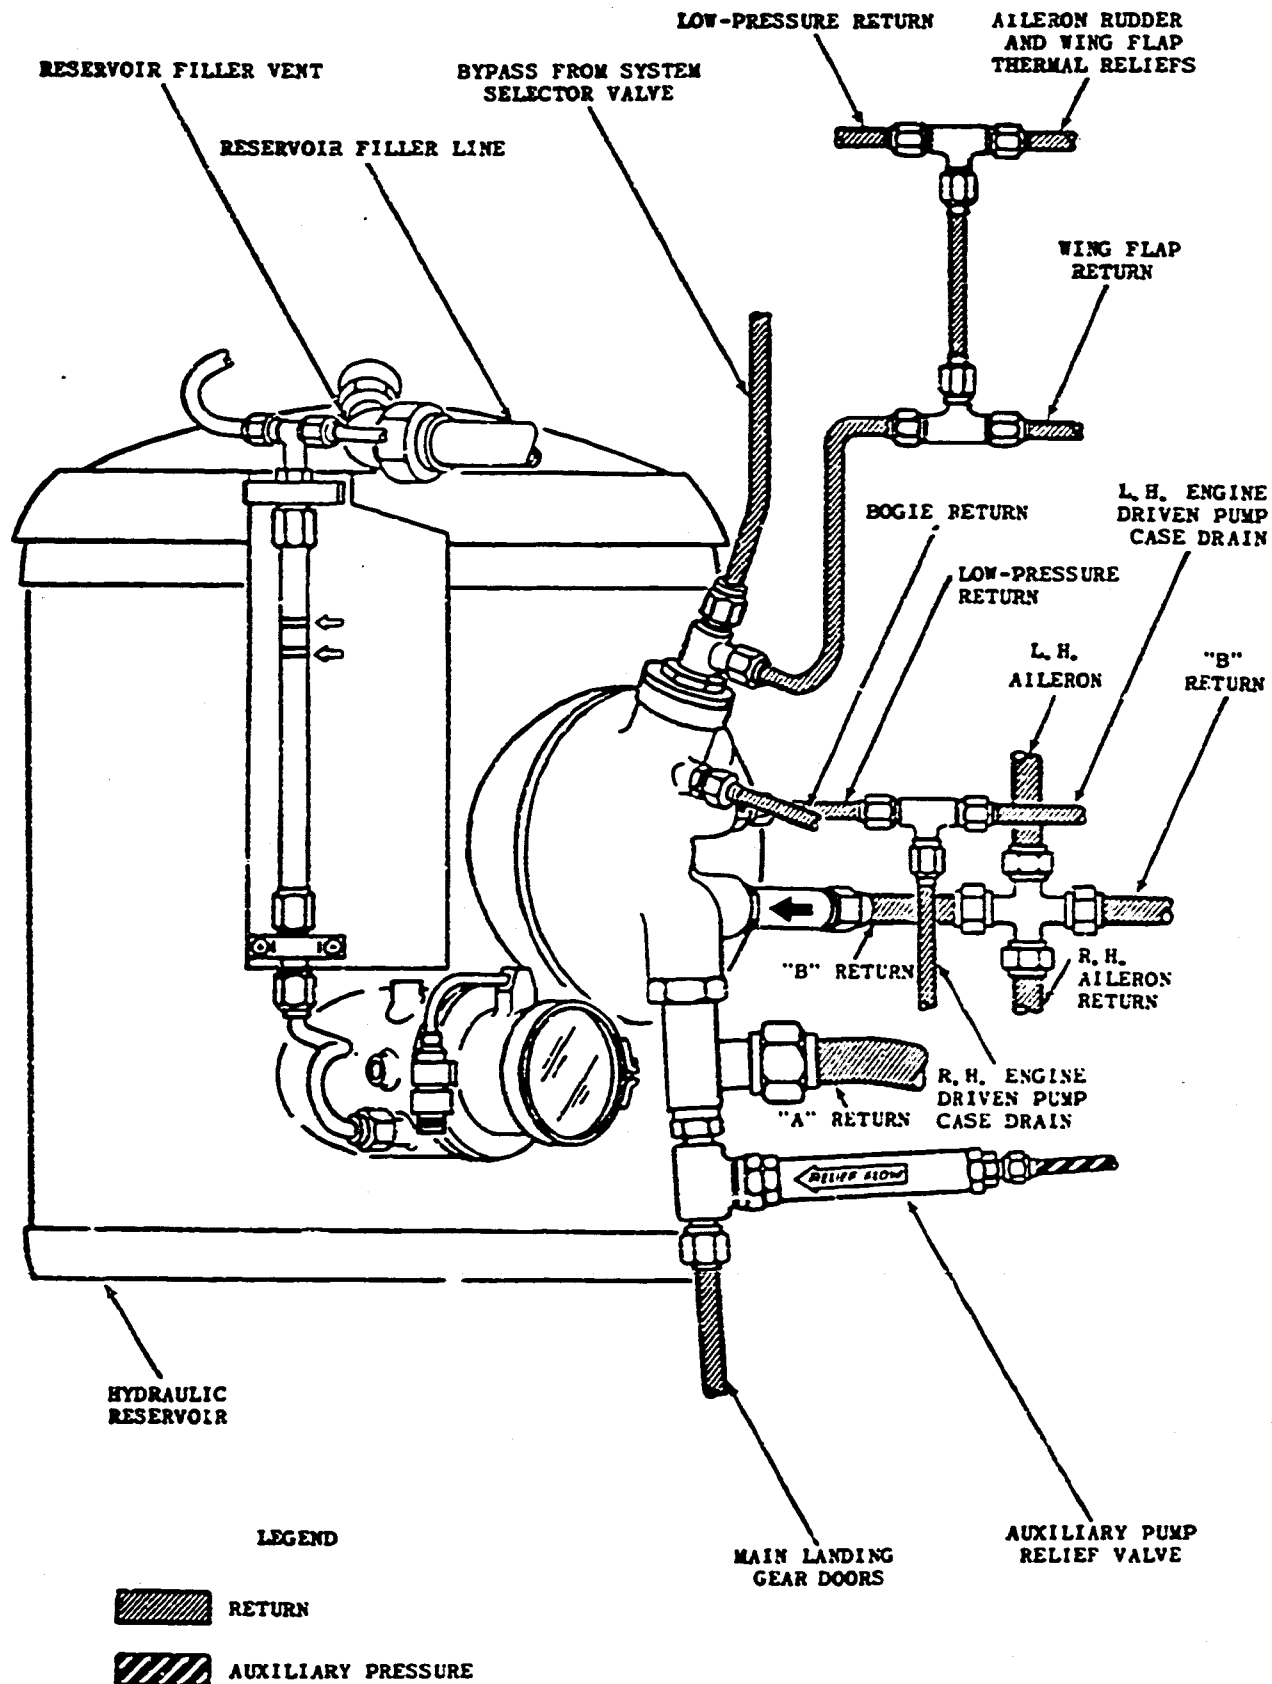

Flushing Procedure Line Connection Locations  
 (Airplanes 801-822)  
 Figure 606

H2-5379

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Flush circuit for five minutes.
  - (6) Depressurize test stand, and drain alternate reservoir (see 29-00, Maintenance Practices).
  - (7) Restore all lines to original configuration.
- H. Auxiliary Hydraulic Pump System (See Figures 604 Through 606.)
- (1) Disconnect auxiliary pump supply line from low standpipe port in bottom of main reservoir. Cap reservoir port, and connect line to test stand pressure hose.
  - (2) Place hydraulic system selector control lever in GENERAL SYSTEM (NORMAL) position.
  - (3) Disconnect auxiliary pump supply and pressure hoses from pump. Connect these two lines together.
  - (4) Disconnect auxiliary pump pressure line, and relief valve line from tee fitting located adjacent to auxiliary pump filter. Connect these lines together.
  - (5) Disconnect auxiliary pump relief valve inlet line from relief valve, located near A-return line of main reservoir. Connect line to test stand return hose.
  - (6) Pressurize test stand to 100 psi maximum at 20 gpm flow.
  - (7) Flush circuit for five minutes.
  - (8) Depressurize test stand.
  - (9) Disconnect test stand pressure hose from auxiliary pump supply hose, and connect to supply selector valve alternate supply port.
  - (10) Place hydraulic system selector control lever in No. 3 position, and repeat Steps (6) through (8).
  - (11) Remove auxiliary hydraulic pump case drain hose. Clean, and/or replace.
  - (12) Remove auxiliary pump filter element, clean filter bowl. Install clean filter element (see 29-10-5).
  - (13) Restore all lines and units to original configuration.

Oct 15/68


29-00  
CODE 1  
Page 615

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

5. Flush Main Hydraulic Power System (Beyond Dual Filter and Relief Valve)

A. Regulator-Aspirator Pressure Line (See Figure 607.)

- (1) Remove 1/4-inch regulator-aspirator pressure line, located between aspirator and dual filter and relief valve.
- (2) Connect test stand pressure hose to one end of line, and connect test stand return hose to other end.
- (3) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (4) Flush line for five minutes.
- (5) Depressurize test stand and remove hoses.
- (6) Inspect regulator-aspirator inlet filter for contamination. Replace or clean filter as necessary.
- (7) Connect aspirator line to aspirator and to dual filter and relief valve.

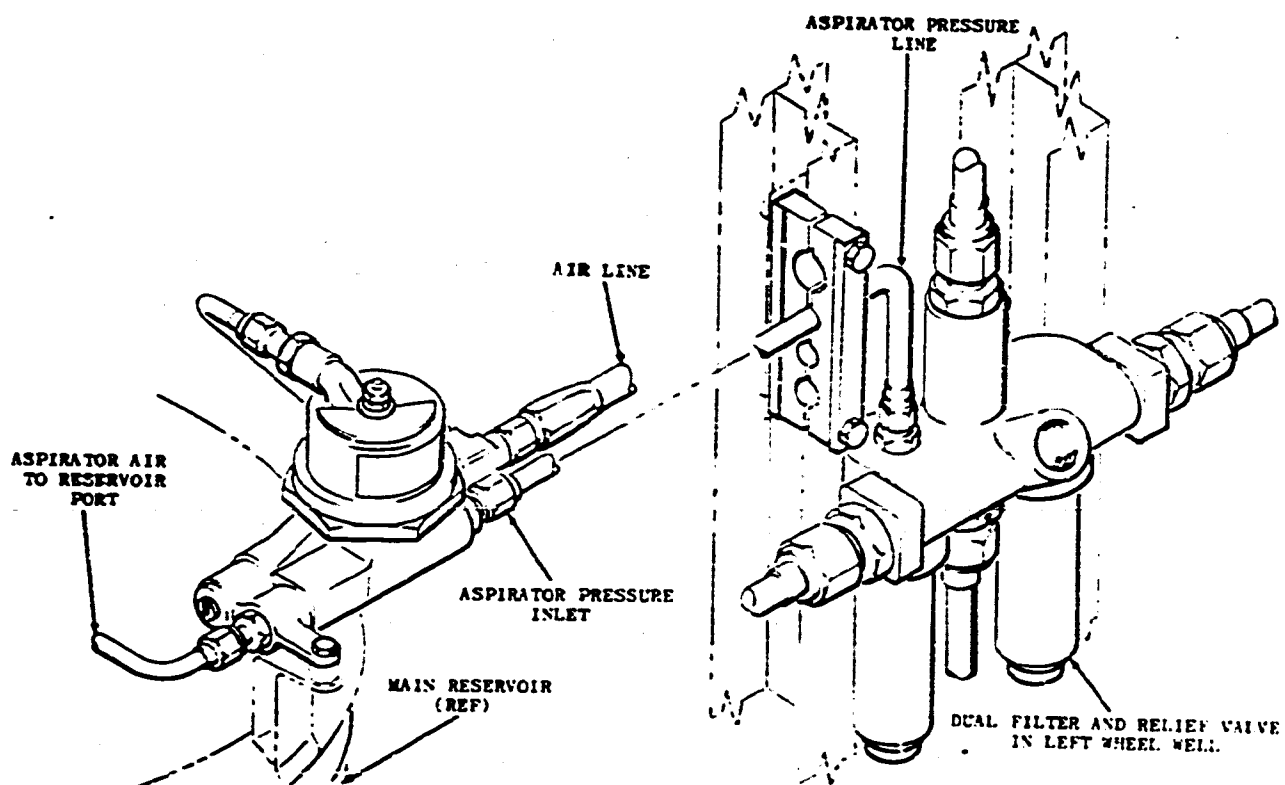

H2-5043

Flushing Procedure Line Connection Locations  
Figure 607



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

B. Empennage Pressure and Return Lines (See Figures 608 Through 610.)


NOTE: This procedure covers the lines from the dual filter and relief valve (outlet side) to the rudder and horizontal stabilizer filter, located in the pressure line in the empennage, and the B-return and low-pressure return lines from the empennage bulkhead back to the left wheel well.

- (1) Disconnect pressure line from check valve, located on top side of dual filter and relief valve. Connect this line to test stand pressure hose.
- (2) Inspect, clean, and/or replace check valve.
- (3) Install jumper line from main system pressure line, at upstream side of system selector control valve, to empennage pressure line located at downstream side of left power manifold (the line with pressure accumulator in it).
- (4) Install jumper line around system accumulator.
- (5) Disconnect lines which run from tees in low-pressure return line and empennage pressure line to spoiler interconnect valve. Cap tees. Spoiler interconnect valve is located on inboard side of left wheel well.
- (6) In empennage, disconnect pressure line at empennage filter. Install jumper between this line and B-return line at pressure bulkhead.
- (7) Disconnect empennage B-return line at tee fitting in B-return line, located below left power manifold. Connect aft line to test stand return hose. Cap tee fitting.
- (8) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (9) Flush circuit for five minutes.
- (10) Depressurize test stand.
- (11) In empennage, disconnect jumper line from B-return line, and connect to low-pressure return line.
- (12) Disconnect 1/4-inch low-pressure line (empennage drain) from tee fitting in low-pressure return line (case drain), located to left of centerline of airplane and aft of rear spar.
- (13) Disconnect test stand return hose from B-return hose, and connect it to low-pressure return line located inboard of dual filter and relief valve.
- (14) Repeat Steps (8) through (10).
- (15) Clean or replace empennage filter element and bowl.


Oct 15/68

29-00  
CODE 1  
Page 617

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

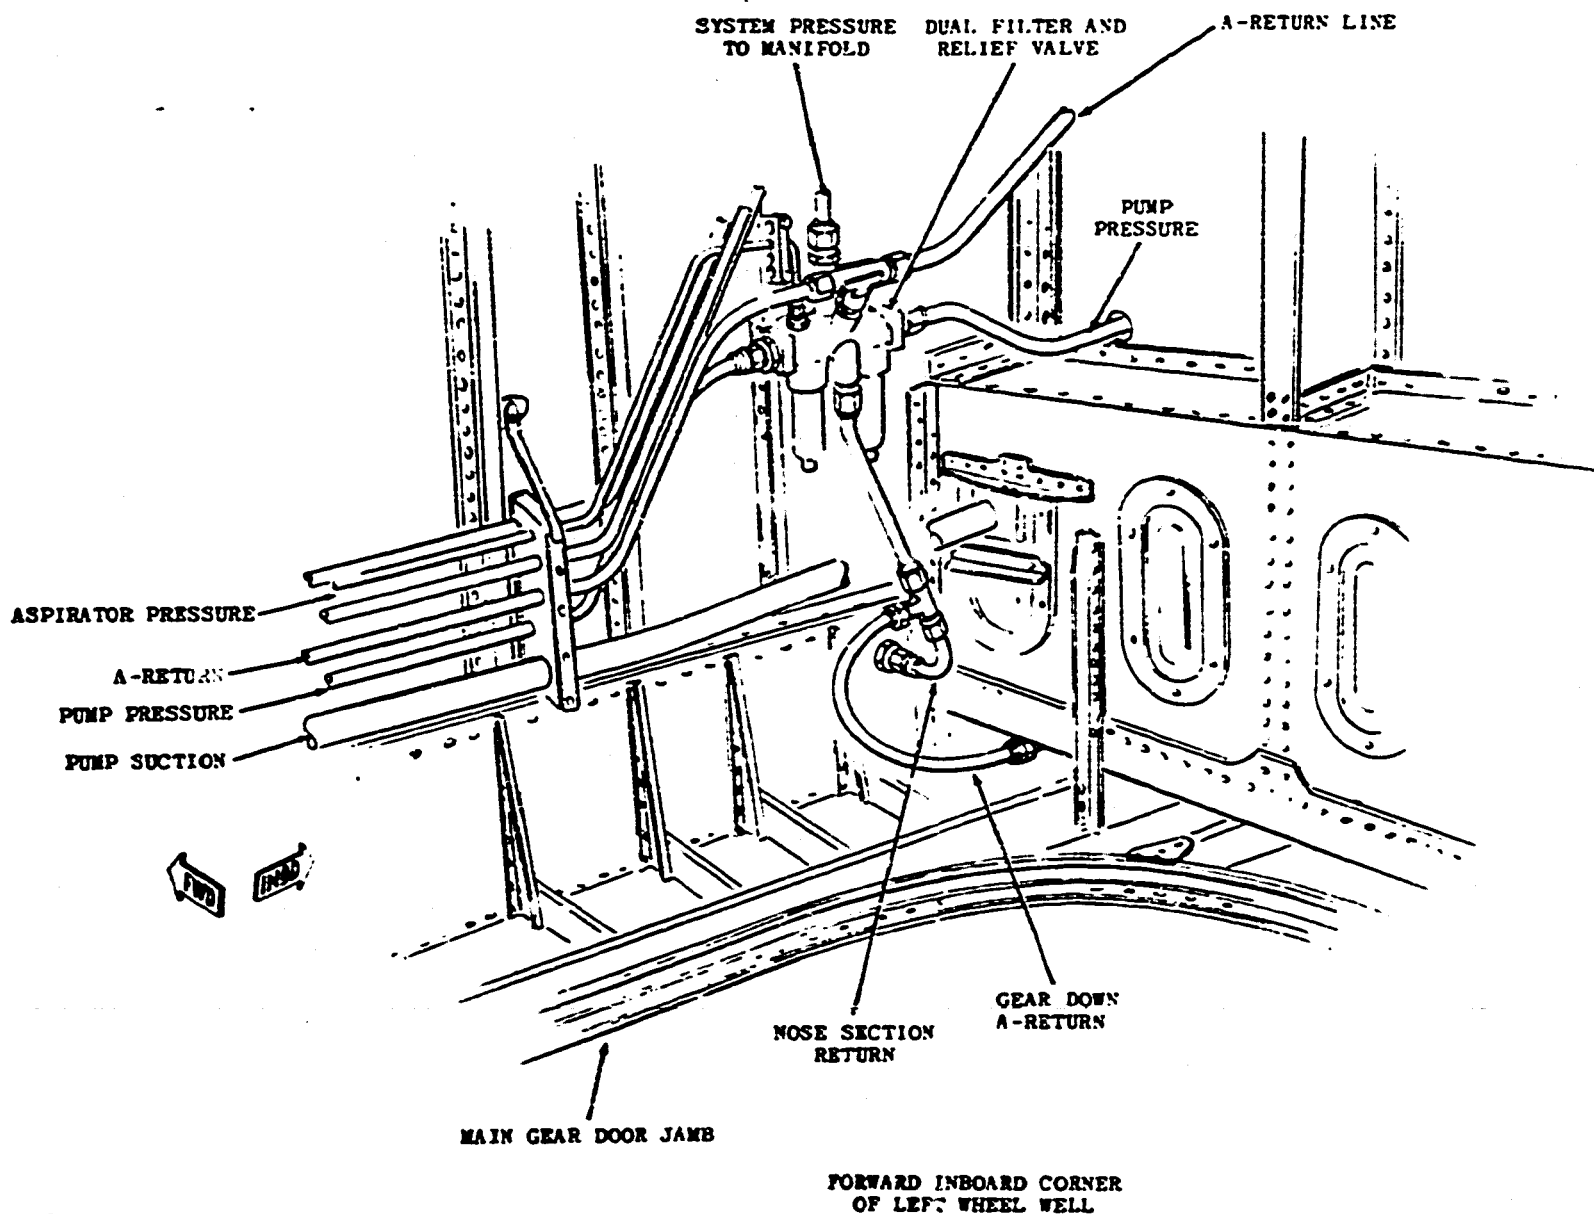

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

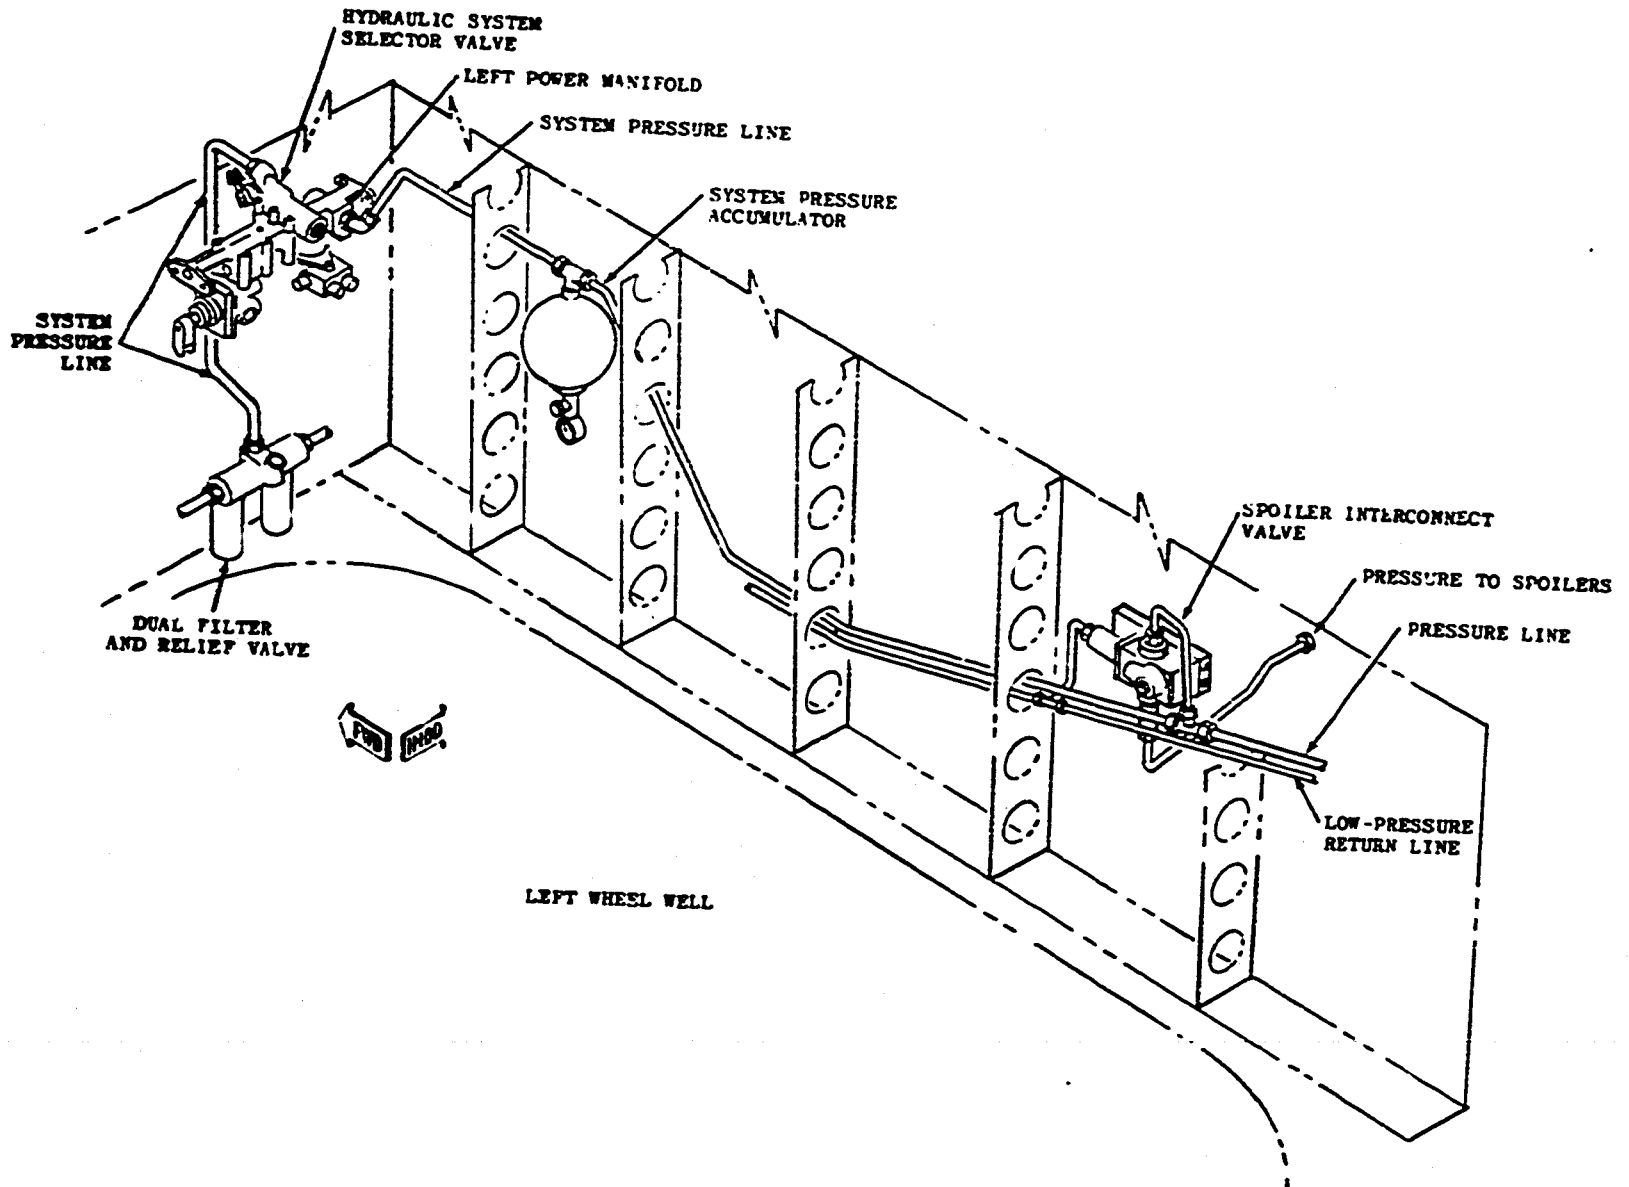

Flushing Procedure Line Connection Locations  
 Figure 609

Oct 15/68

H2-5044  
 29-00  
 CODE 1  
 Page 619

Printed in U.S.A.


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (16) Inspect, clean, and/or replace hydraulic system accumulator.
- (17) Restore all lines and units to original configuration.
- (18) For continuation of flushing rudder and horizontal stabilizer systems, refer to Paragraph 8.C.

C. Aileron and Ejector Pressure and Return Lines (Airplanes 801-811, See Figure 611.)

- (1) Disconnect pressure line at inboard port of left aileron filter, and disconnect aileron return line from aileron gland. Connect these two lines with jumper.
- (2) At return manifold, located at STA  $X_{rs} = 495$ , disconnect ejector return and aileron trim tab return and cap both ports.
- (3) Disconnect lines which run from thermal relief valve, located at STA  $X_{rs} = 456$ , to tees in ejector pressure line and (aileron-ejector) B-return line. Cap tees.
- (4) Remove, inspect, clean and/or replace thermal relief valve and attaching lines.
- (5) Disconnect pressure and return line which runs from inboard ejector valve to tees in ejector pressure line and (aileron-ejector) B-return line. Cap both tees.
- (6) Disconnect left aileron pressure line at aileron shutoff valve, located in left wheel well. Connect line to test stand pressure hose.
- (7) Disconnect (aileron-ejector) B-return line from cross fitting near B-return port of main reservoir. Connect line to test stand return hose.
- (8) Pressurize test stand to 200 psi at 20 gpm fluid flow.
- (9) Flush circuit for five minutes.
- (10) Depressurize test stand.
- (11) To flush ejector pressure line, disconnect ejector pressure line from check valve, located just inboard of outboard ejector valve.
- (12) Remove jumper end which was connected to pressure line in Step (1), and connect it to line which was disconnected in Step (11).
- (13) In left wheel well disconnect ejector pressure line from tee in nose gear pressure line (second tee below priority valve).
- (14) Disconnect test stand pressure hose from aileron shutoff valve pressure line, and connect test stand pressure hose to open ejector pressure line, Step (13).

DOUG. S AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

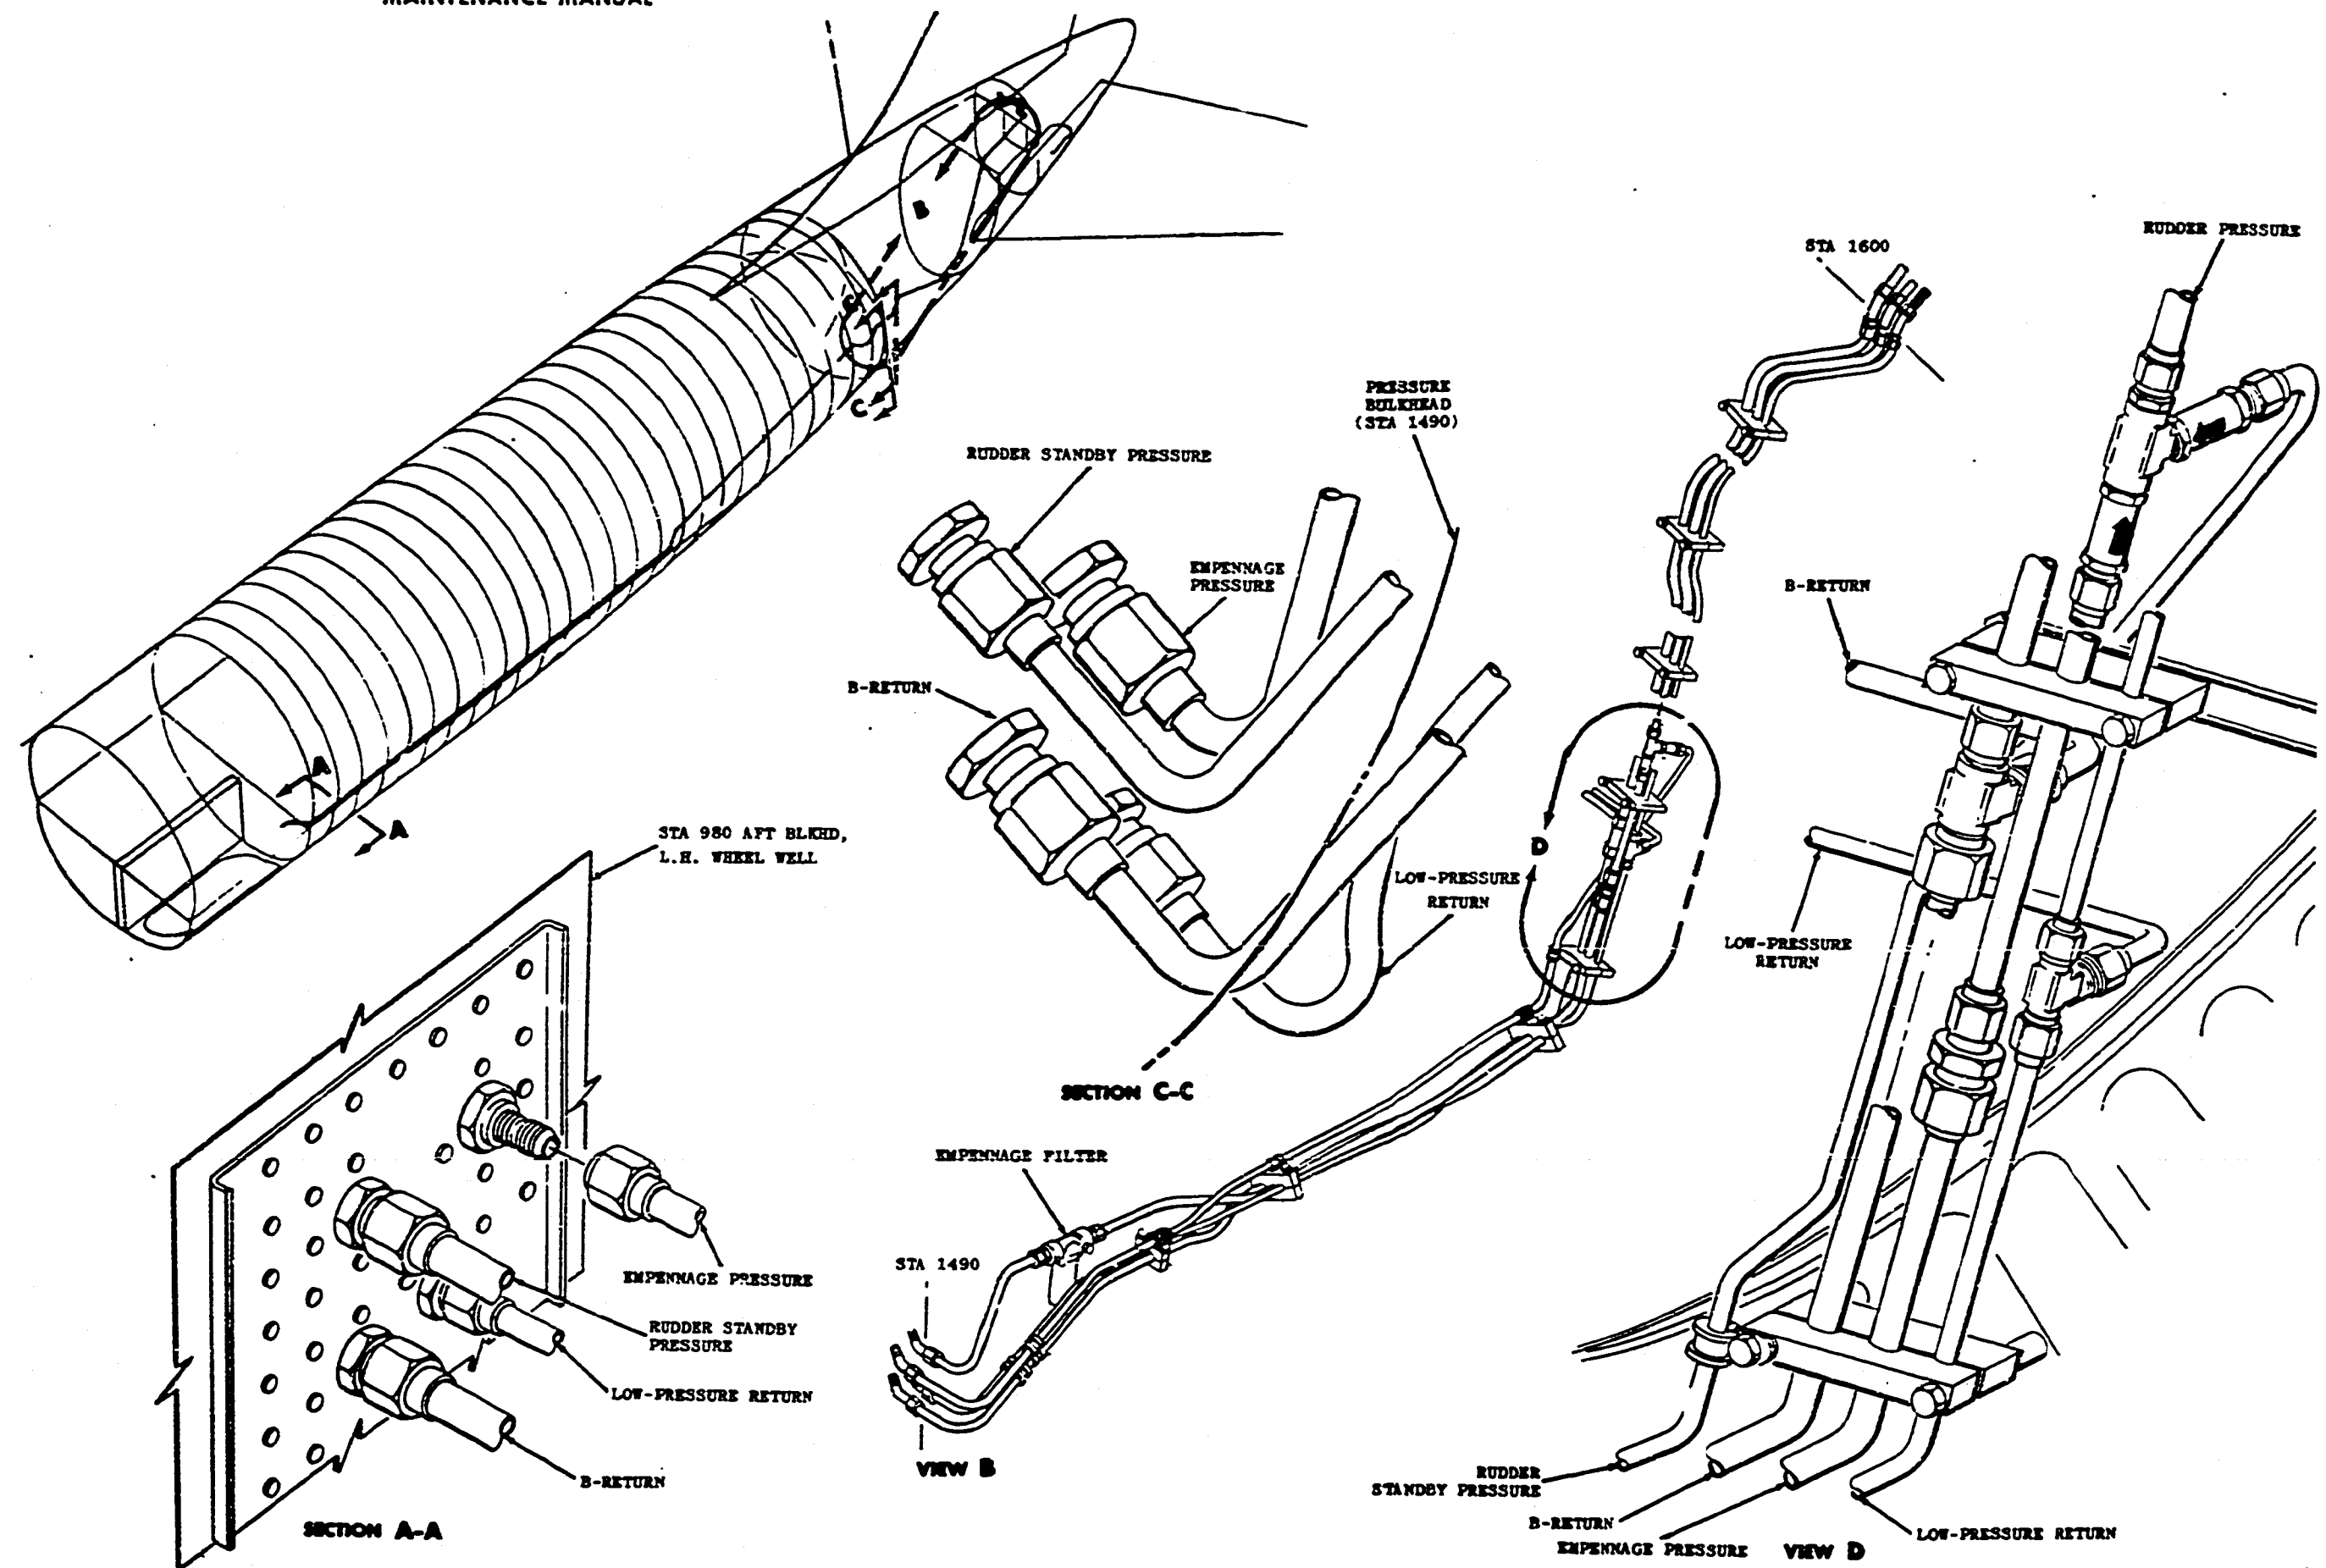

Flushing Procedure Line Connection Locations  
 Figure 610


29-00  
 CODE 1  
 Page 621

H2-5035

Oct 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

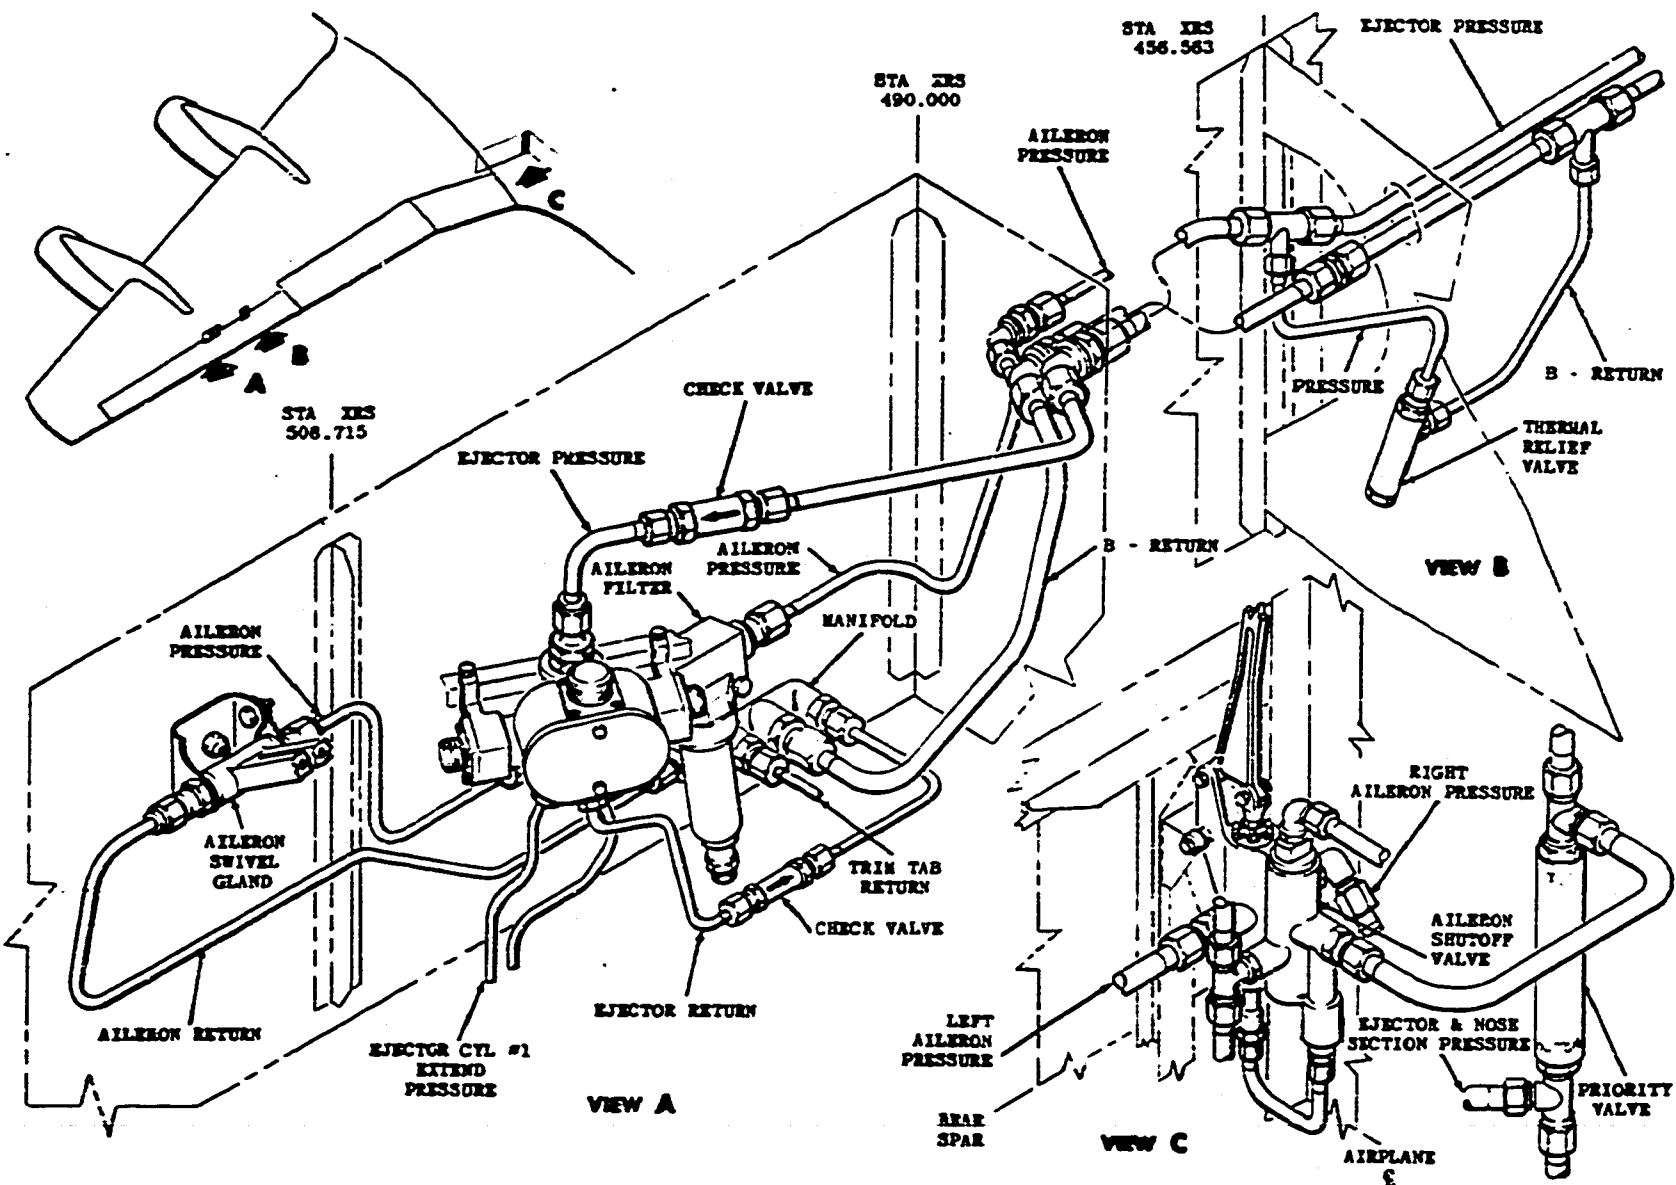

Flushing Procedure Line Connection Locations  
 (Airplanes 801-811)  
 Figure 611

Oct 15/68

H2-5085  
 29-00  
 CODE 1  
 Page 623


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (15) Below this connection, disconnect ejector pressure line from tee which supplies right ejectors. Cap tee.
- (16) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (17) Flush circuit for five minutes.
- (18) Depressurize test stand.
- (19) Remove, inspect, clean, and/or replace check valves (two at each ejector valve), and short connecting lines to ejector valves.
- (20) Repeat Steps (1) through (19) for right side of airplane with these exceptions:
  - (a) Right side of airplane uses (aileron-ejector) A-return line. Disconnect test stand return hose from B-return cross at reservoir, and connect test stand return hose to A-return line at tee in bottom of right power manifold in right wheel well.
- (21) Remove, inspect, clean, and/or replace ejector thermal relief valves with attaching lines, located at STA  $X_{rs} = 456$ .
- (22) Remove, clean, and/or replace priority valve and fittings, located on bottom of left power manifold.
- (23) Restore all lines and units to original configuration.
- (24) For continuation of flushing aileron and ejector systems, refer to Paragraphs 7.G. and 8.A.

**D. Aileron Pressure and Return Lines (Airplanes 812-822, See Figure 612.)**

- (1) Disconnect aileron pressure line at inboard port of left aileron filter, and disconnect aileron B-return line from aileron swivel gland. Connect these two lines together with jumper.
- (2) At return manifold, located at STA  $X_{rs} = 495$ , disconnect aileron trim tab B-return line. Cap manifold port.
- (3) Disconnect left aileron pressure line at aileron shutoff valve, located in left wheel well. Connect this line to test stand pressure hose.
- (4) Disconnect aileron B-return line from cross fitting at B-return port of reservoir. Connect this line to test stand return hose.
- (5) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (6) Flush circuit for five minutes.
- (7) Depressurize test stand.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

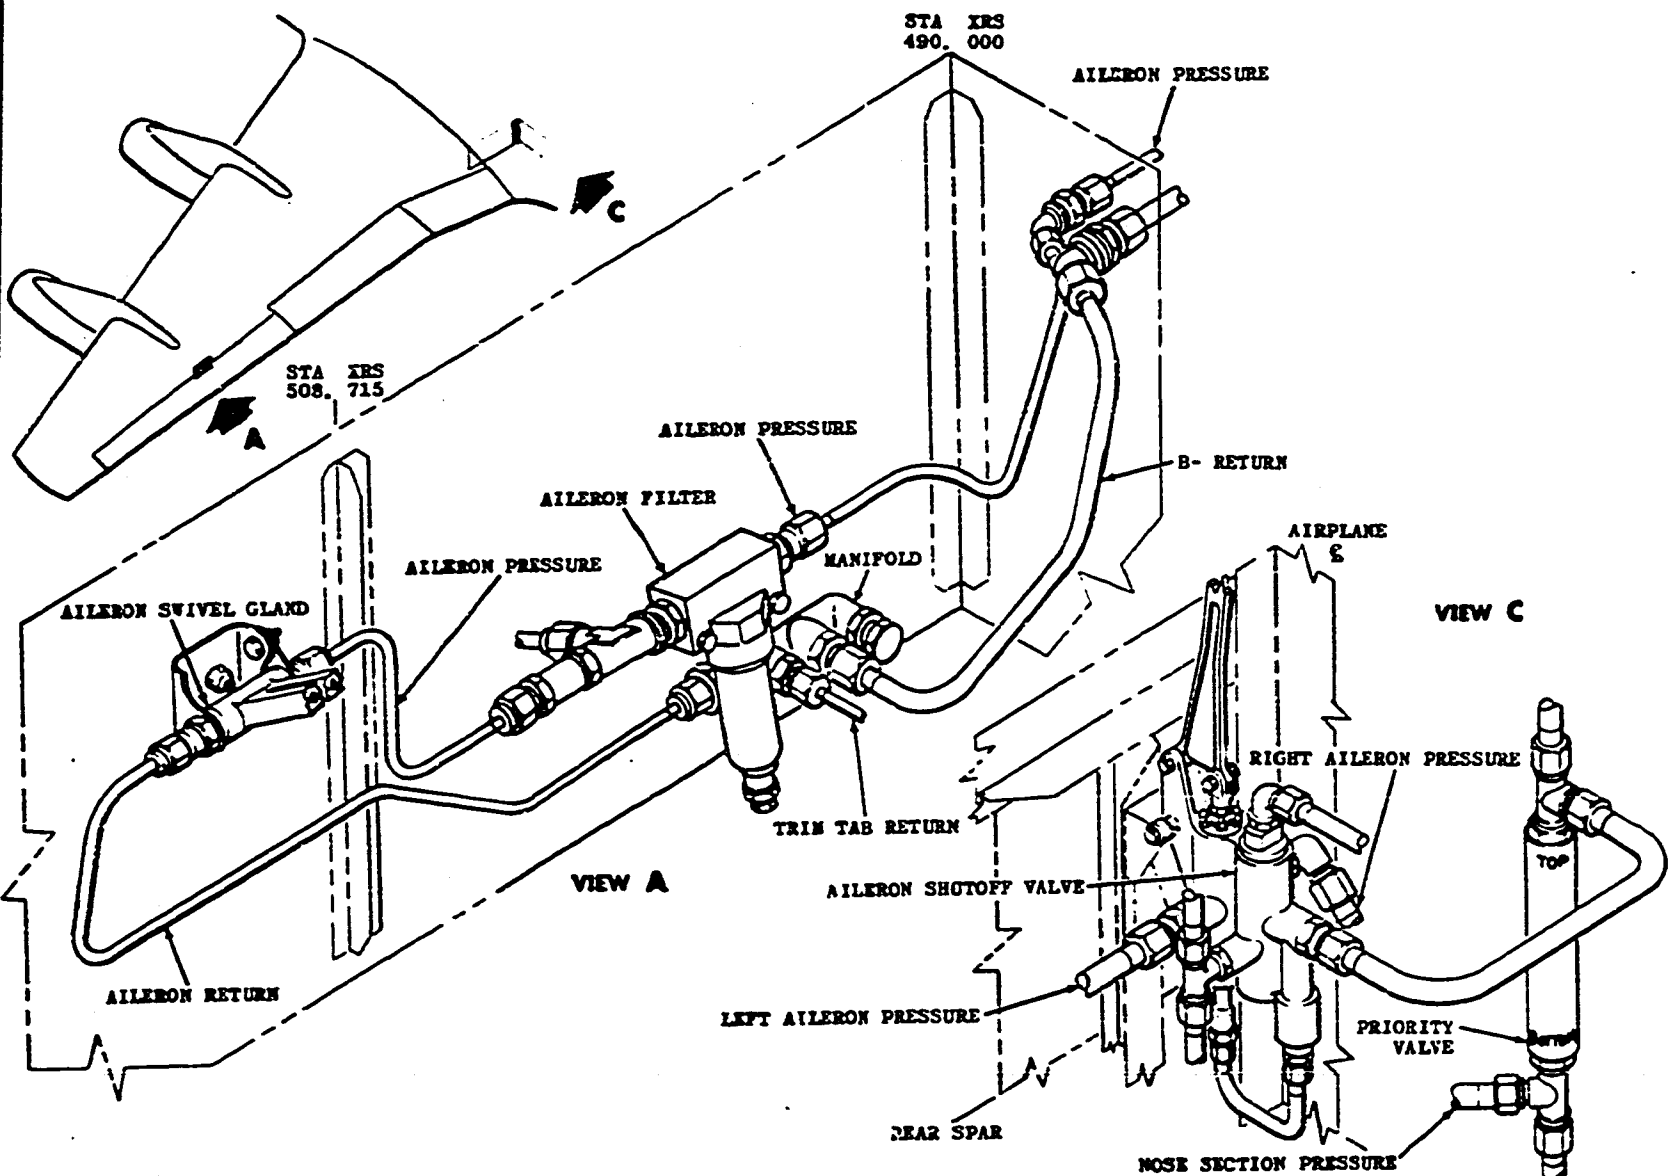

Flushing Procedure Line Connection Locations  
 (Airplanes 812-822)  
 Figure 612

H2-5089  
 29-00  
 CODE 1  
 Page 625

Oct 15/68

Printed in U.S.A.




DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) Disconnect pressure line at inboard port of right aileron filter, and disconnect aileron A-return line from aileron swivel gland. Connect these two lines together.
- (9) At return manifold, located at STA  $X_{RS} = 495$ , disconnect aileron trim tab A-return line. Cap manifold port.
- (10) Disconnect right aileron pressure line at aileron shutoff valve, located in left wheel well. Connect line to test stand pressure hose.
- (11) Disconnect aileron A-return line from tee at the bottom of right power manifold, located in right wheel well. Connect line to test stand return hose.
- (12) Repeat Steps (5) through (7) for these lines.
- (13) Remove, inspect, clean, and/or replace priority valve and fittings, located on bottom of the left power manifold.
- (14) Restore all lines and units to original configuration.
- (15) For continuation of flushing aileron system components, refer to Paragraph 8.A.

E. Nose System Pressure and Return Lines (Airplanes 801-811, See Figure 613.)

- (1) In nosewheel well, disconnect 1/4-inch return line which runs from nose gear control valve to bulkhead tee fitting in A-return line, at the tee. Cap tee.
- (2) Disconnect pressure line leading into nose gear control valve at valve. In this same line, replace check valve with jumper line.
- (3) Disconnect pressure line which runs to tee in pressure accumulator, from pressure bulkhead tee at rear of wheel well.
- (4) Connect two open lines from Step (2) and Step (3) with jumper.
- (5) Disconnect at tee, pressure line which runs from reserve pressure accumulators to tee near centerline of airplane. Cap tee.
- (6) Disconnect pressure line leading into reserve accumulator shutoff valve.
- (7) Disconnect return line from tee in steering relief valve. Connect this line to pressure line at shutoff valve with jumper line.
- (8) In left main gear wheel well disconnect nose system pressure line from side port of tee in the bottom of priority valve. Connect line to test stand pressure hose.
- (9) Disconnect nose system A-return line from bottom of dual filter and relief valve. Connect line to test stand return hose.

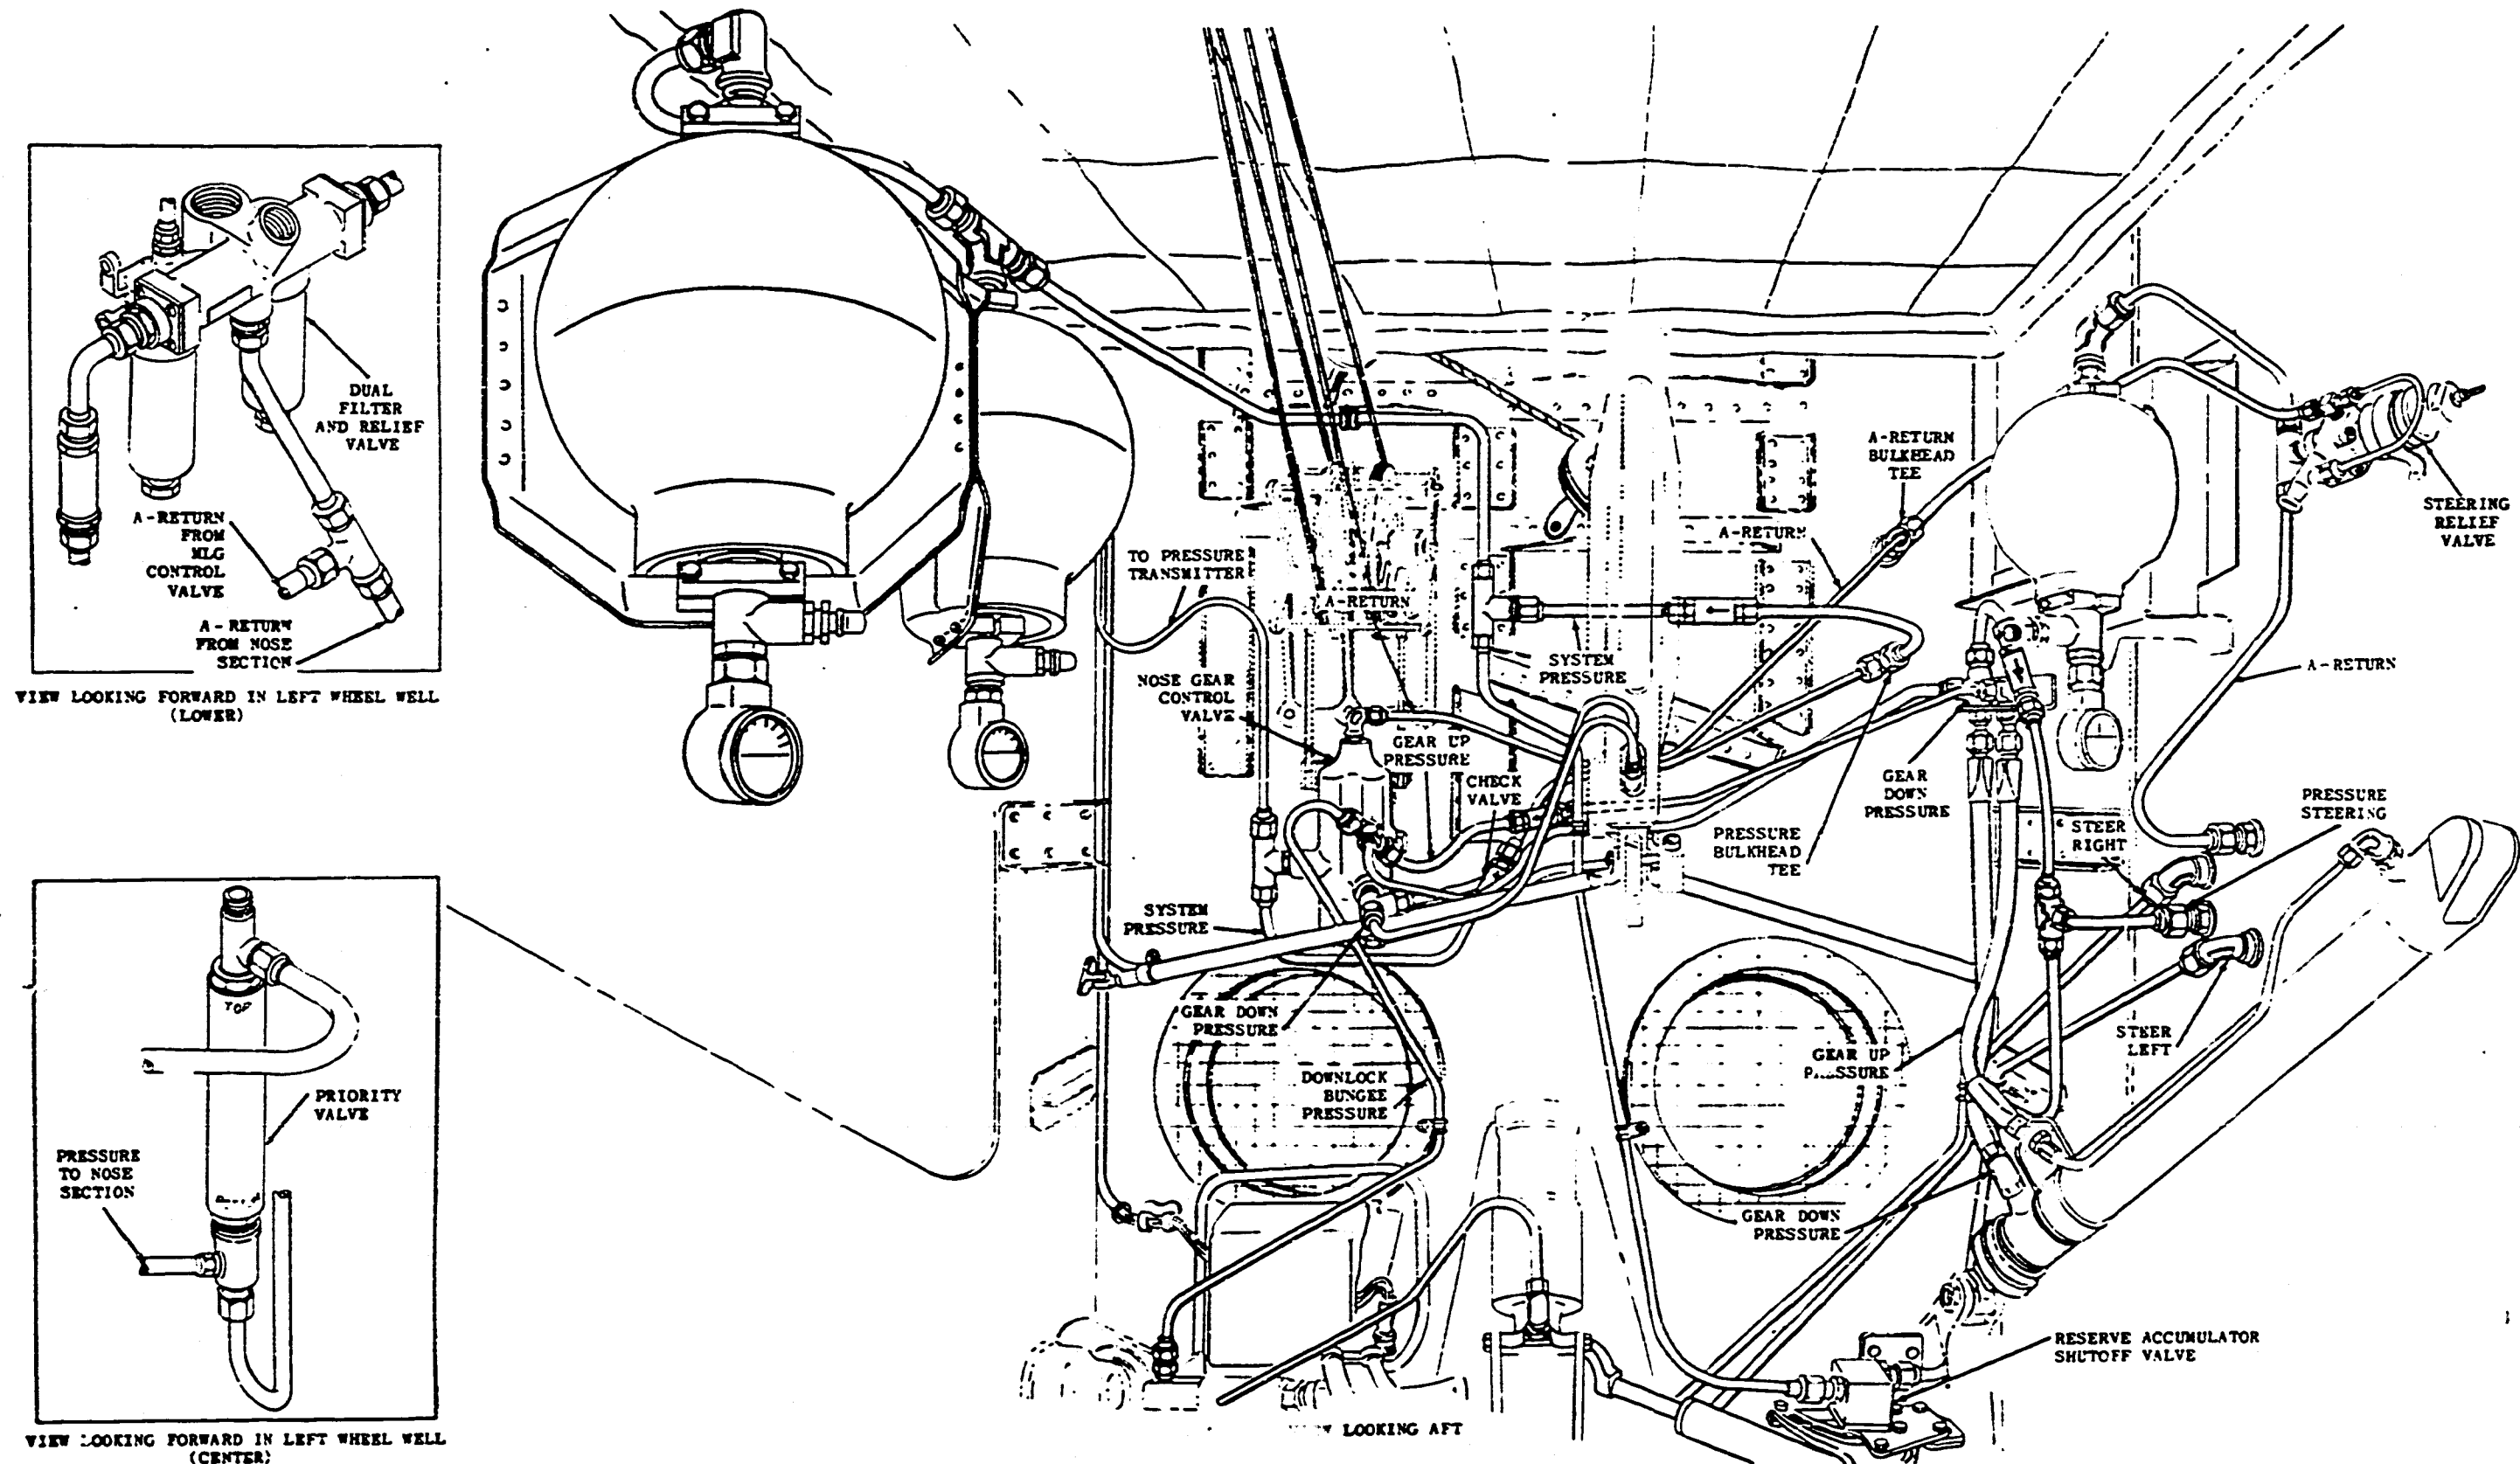

H2-5045

Flushing Procedure Line Connection Locations  
 (Airplanes 801-811)  
 Figure 613

29-00  
 CODE 1  
 Page 627

Oct 15/68

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (10) Disconnect main gear control valve A-return line from tee in nose gear A-return line. Cap tee.
  - (11) Pressurize test stand to 200 psi maximum at 20 gpm flow.
  - (12) Flush circuit for five minutes.
  - (13) Depressurize test stand.
  - (14) Remove, inspect, clean, and/or replace miniature check valve, located in nose system return port of dual filter and relief valve.
  - (15) Repeat Step (14), inspection etc., for following items:
    - (a) Two check valves jumpered in nosewheel well
    - (b) Two reserve pressure accumulators and attaching lines
    - (c) System pressure transmitter and attaching lines.
  - (16) Restore all lines and units to original configuration.
  - (17) For continuation of flushing of nose gear system, refer to Paragraph 7.F.
- F. Nose System Pressure and Return Lines (Airplanes 812-822, See Figure 614.)
- (1) In nosewheel well, disconnect 1/4-inch return line which runs from nose gear control valve to bulkhead tee fitting in A-return line, at tee. Cap tee.
  - (2) Disconnect pressure line leading into nose gear control valve at valve. In this same line, replace check valve with jumper line.
  - (3) Disconnect pressure line which runs to tee in pressure accumulator, from pressure bulkhead tee at rear of wheel well.
  - (4) Connect two open lines from Step (2) and Step (3) with jumper.
  - (5) Disconnect at tee, pressure line which runs from reserve pressure accumulators to tee near centerline of airplane. Cap tee.
  - (6) Disconnect pressure line leading into reserve accumulator shutoff valve.
  - (7) Disconnect return line from tee in steering relief valve. Connect this line to pressure line at shutoff valve with jumper line.
  - (8) Disconnect cargo door pressure line at tee fitting in nose system pressure line. Cap tee and cargo door pressure line.

**NOTE:** The cargo door pressure line tee fitting is located in the forward left side of the forward baggage compartment.


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (9) In left main gear wheel, well disconnect nose system pressure line from side port of tee in priority valve. Connect line to test stand pressure hose.
- (10) Disconnect nose system A-return line from bottom of dual filter and relief valve. Connect line to test stand return hose.
- (11) Disconnect main gear control valve A-return line from tee in nose gear A-return line. Cap tee.
- (12) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (13) Flush circuit for five minutes.
- (14) Depressurize test stand.
- (15) Remove, inspect, clean, and/or replace miniature check valve, located in nose system return port of dual filter and relief valve.
- (16) Repeat Step (15), inspection etc., for following items:
  - (a) Two check valves jumpered in nosewheel well
  - (b) Two reserve pressure accumulators and attaching lines
  - (c) System pressure transmitter and attaching lines.
- (17) Restore all lines and units to original configuration.
- (18) For continuation of flushing of nose gear system, refer to Paragraph 7.F.


G. Flush the A-Return Line (See Figure 615.)

- (1) Disconnect aileron A-return line from tee in A-return line, located below left power manifold. Cap tee.
- (2) Disconnect at manifold, short line that runs from tee (see Step 16) to left power manifold. Connect line to test stand pressure hose.
- (3) Place jumper around miniature check valve, located in A-return line under left power manifold.
- (4) Disconnect A-return lines from tee in dual filter and relief valve. Install jumper between these lines.
- (5) Disconnect A-return line from reservoir fittings. Connect line to test stand return hose.
- (6) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (7) Flush circuit for five minutes.


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

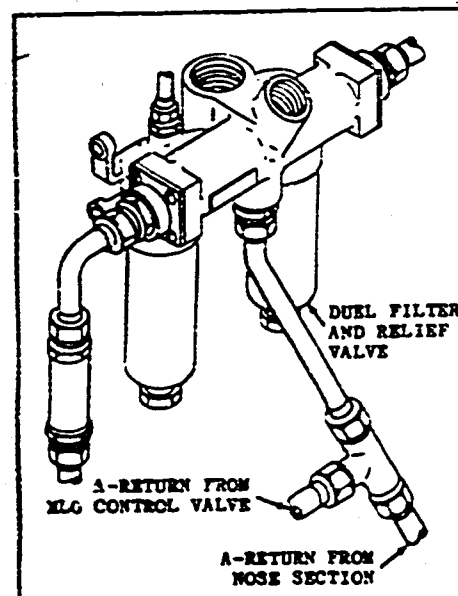

VIEW LOOKING FORWARD IN LEFT WHEEL WELL (LOWER)

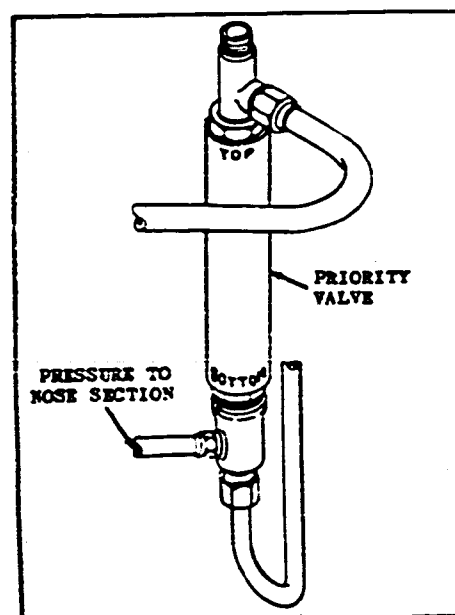

VIEW LOOKING FORWARD IN LEFT WHEEL WELL (CENTER)

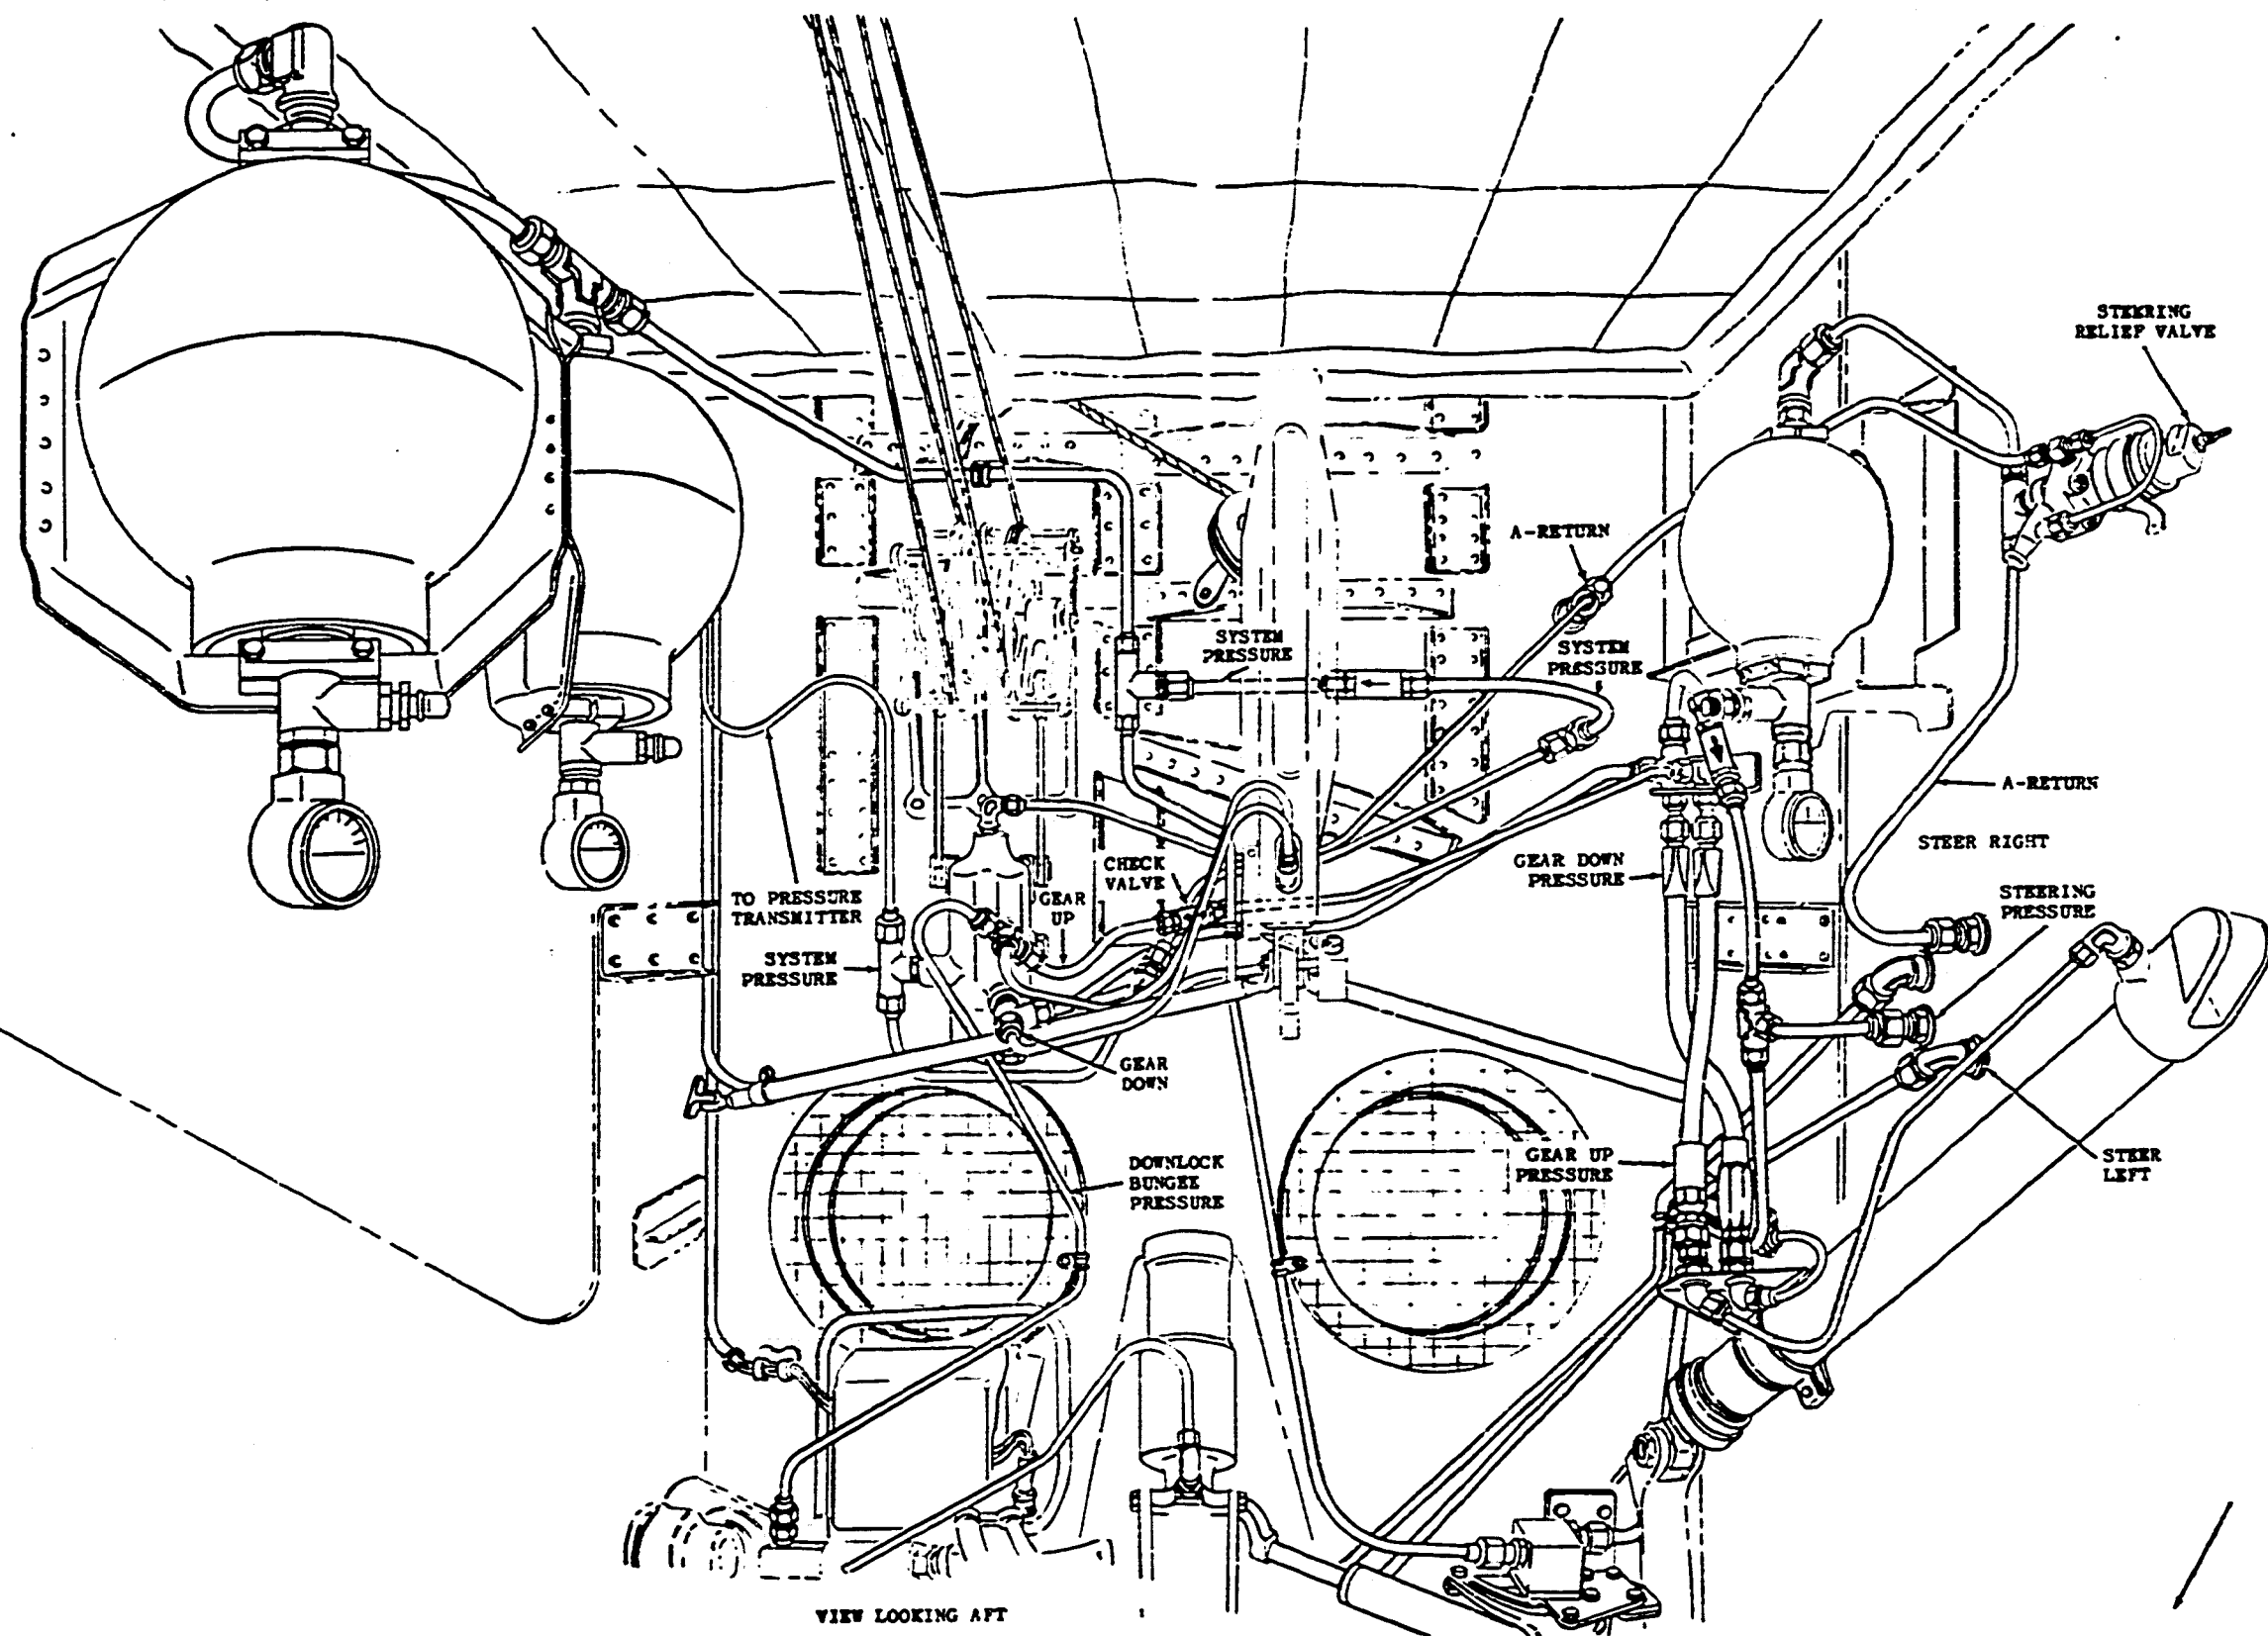

NOSE GEAR CONTROL VALVE

RESERVE ACCUMULATOR SHUTOFF VALVE

Flushing Procedure Line Connection Locations  
 (Airplanes 812-822)  
 Figure 614


Oct 15/68

29-00  
 CODE 1  
 Page 631

Printed in U.S.A.

H2-5047

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

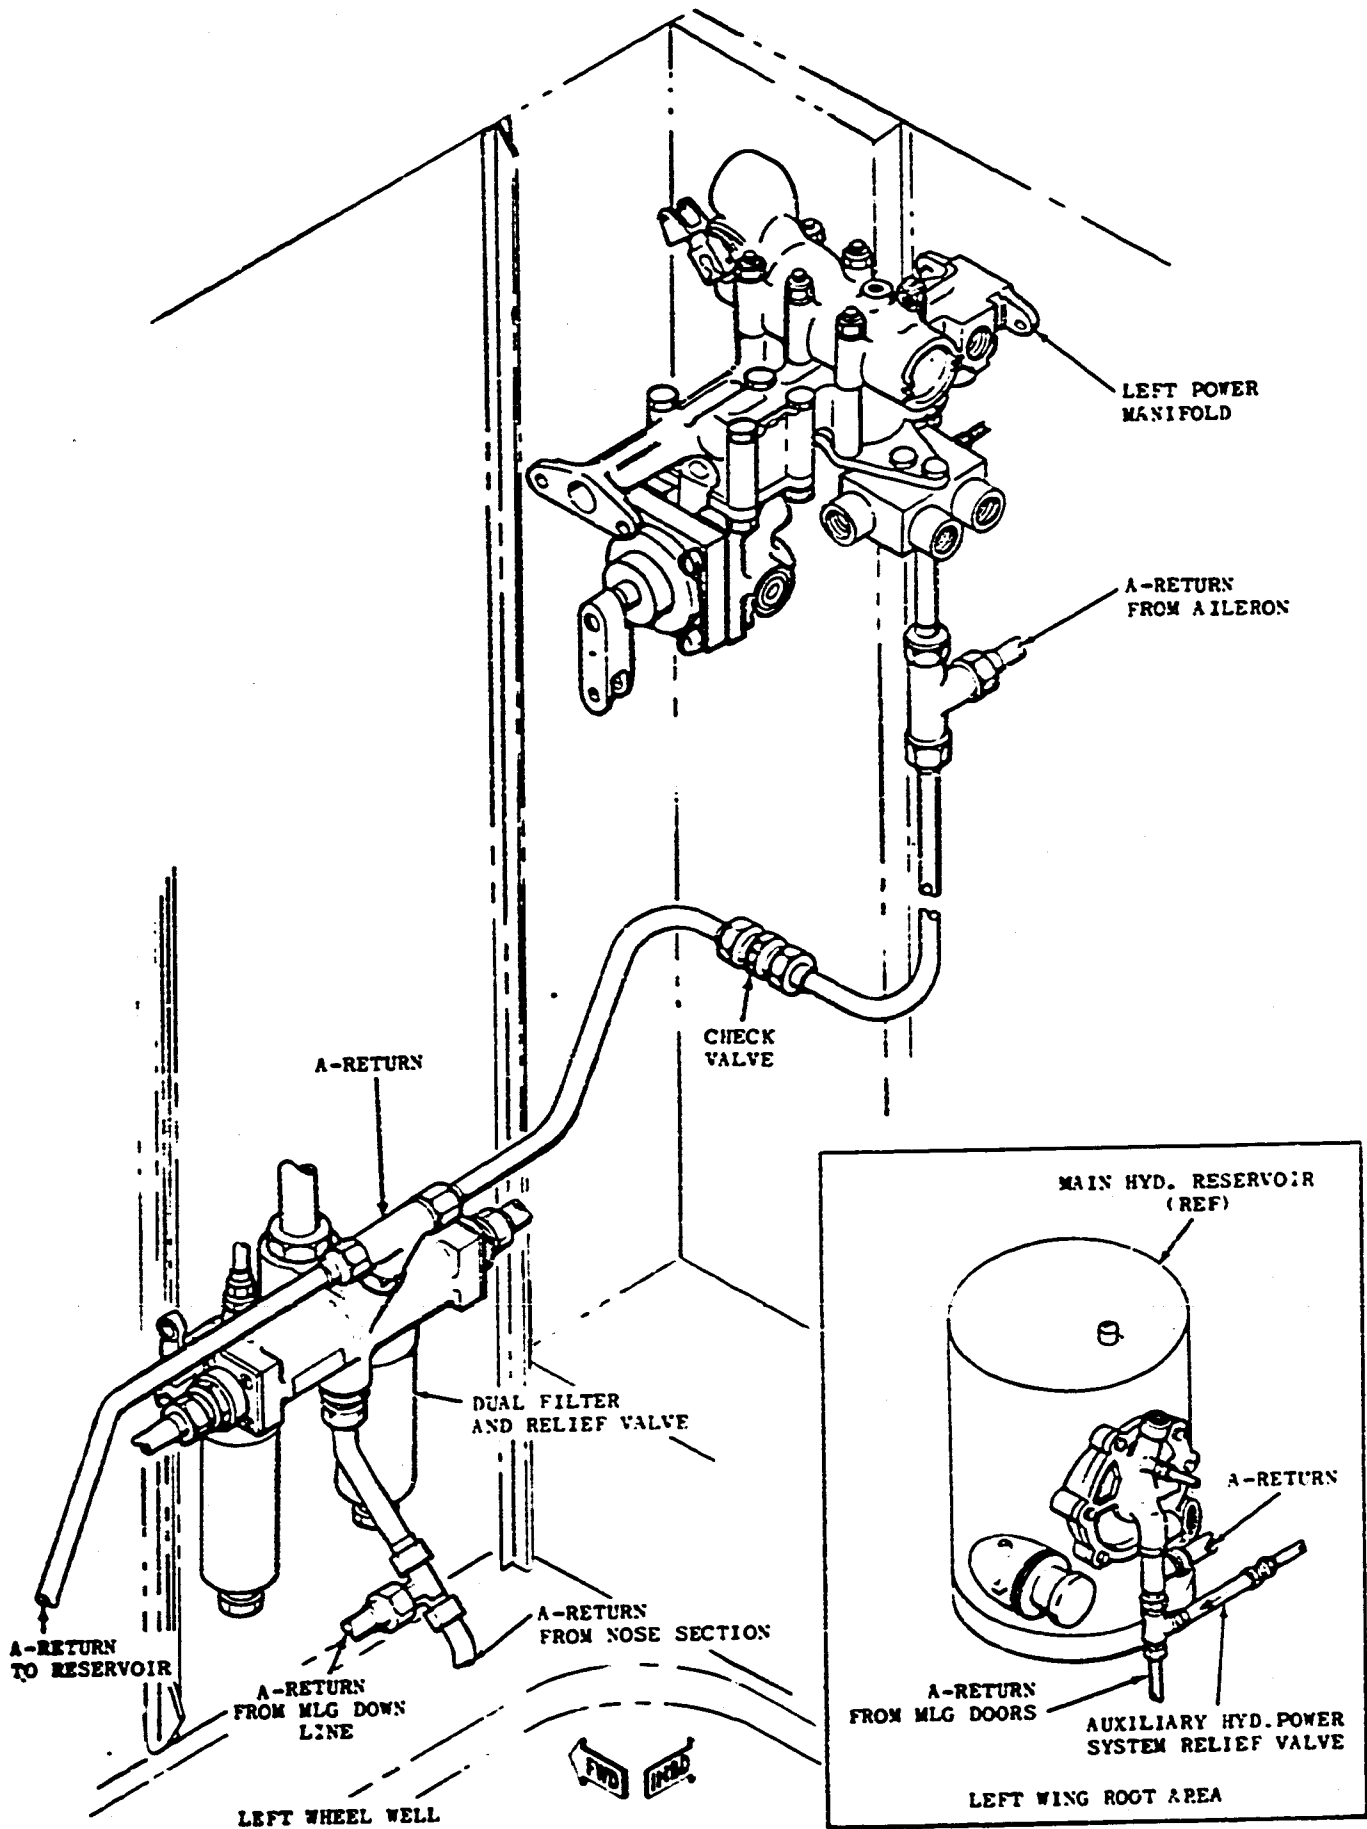

H2-5048

Flushing Procedure Line Connection Locations  
 Figure 615

Oct 15/68

29-00  
 CODE 1  
 Page 633

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) Depressurize test stand.
- (9) Inspect, clean, and/or replace miniature check valve which was removed in Step (3).
- (10) Restore all lines and units to original configuration.

H. Flush the B-Return Line (See Figure 616.)

- (1) Disconnect B-return line from miniature check valve installed in right power manifold. Connect this line to test stand pressure hose.
- (2) Disconnect empennage return line from tee in B-return line. Cap tee.
- (3) Disconnect left antiskid return line, and left aileron return line from B-return cross fitting located adjacent to main reservoir. Cap two openings.
- (4) Disconnect B-return line from check valve in reservoir B port. Connect line to test stand return hose.
- (5) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (6) Flush circuit for five minutes.
- (7) Depressurize test stand.
- (8) Remove check valve from reservoir B port, and miniature check valve (Step 1.). Inspect, clean, and/or replace check valves.
- (9) Restore all lines and units to original configuration.



I. Power Manifolds

- (1) If contamination downstream of the dual filter and relief valve is general, the right and left power manifolds with attaching valves must be removed, inspected, cleaned, and/or replaced.

J. Flush Low-Pressure Return Lines (Airplanes 801-811, See Figure 617.)

- (1) In right wing root area, disconnect low-pressure return line from wing flap thermal relief valve, located on wing spar. Connect this line to test stand pressure hose. Cap thermal relief valve.
- (2) Disconnect No. 3 engine pump case drain line from tee fitting, located below thermal relief valve. Cap tee and case drain line.
- (3) At cross-ship tee in low-pressure return line, located in forward inboard corner of left wheel well, disconnect low-pressure return line from aileron and empennage. Cap tee and aileron and empennage return line.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

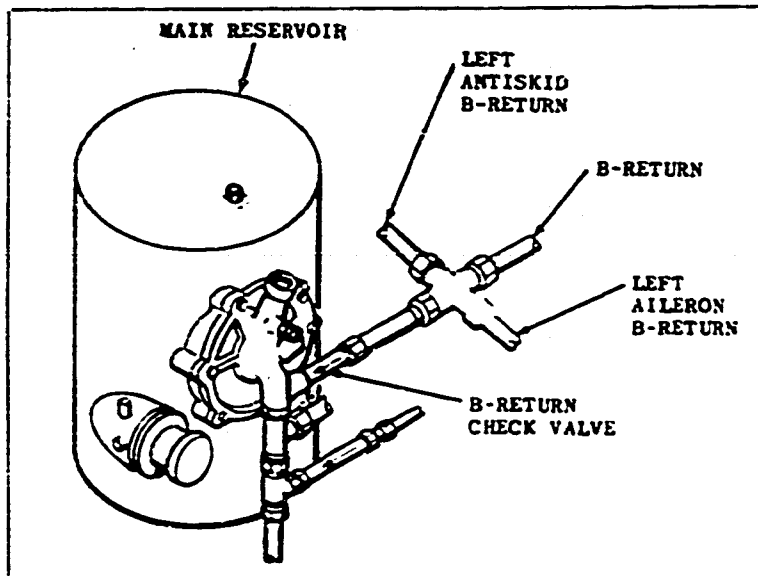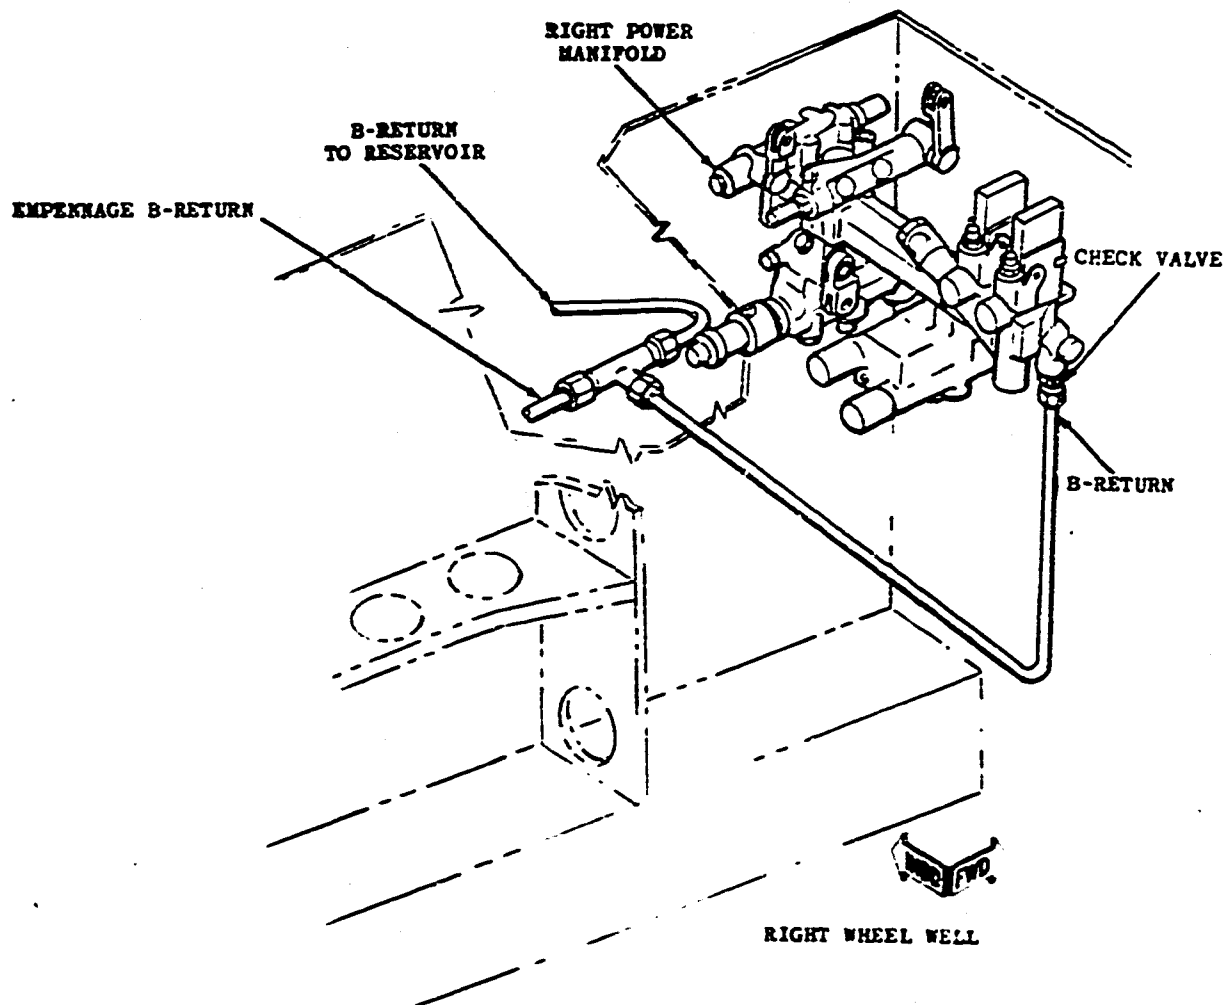

LEFT WING ROOT AREA

Flushing Procedure Line Connection Locations  
 Figure 616


Oct 15/68

Printed in U.S.A.

H2-5049  
 29-C0  
 CODE 1  
 Page 635



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

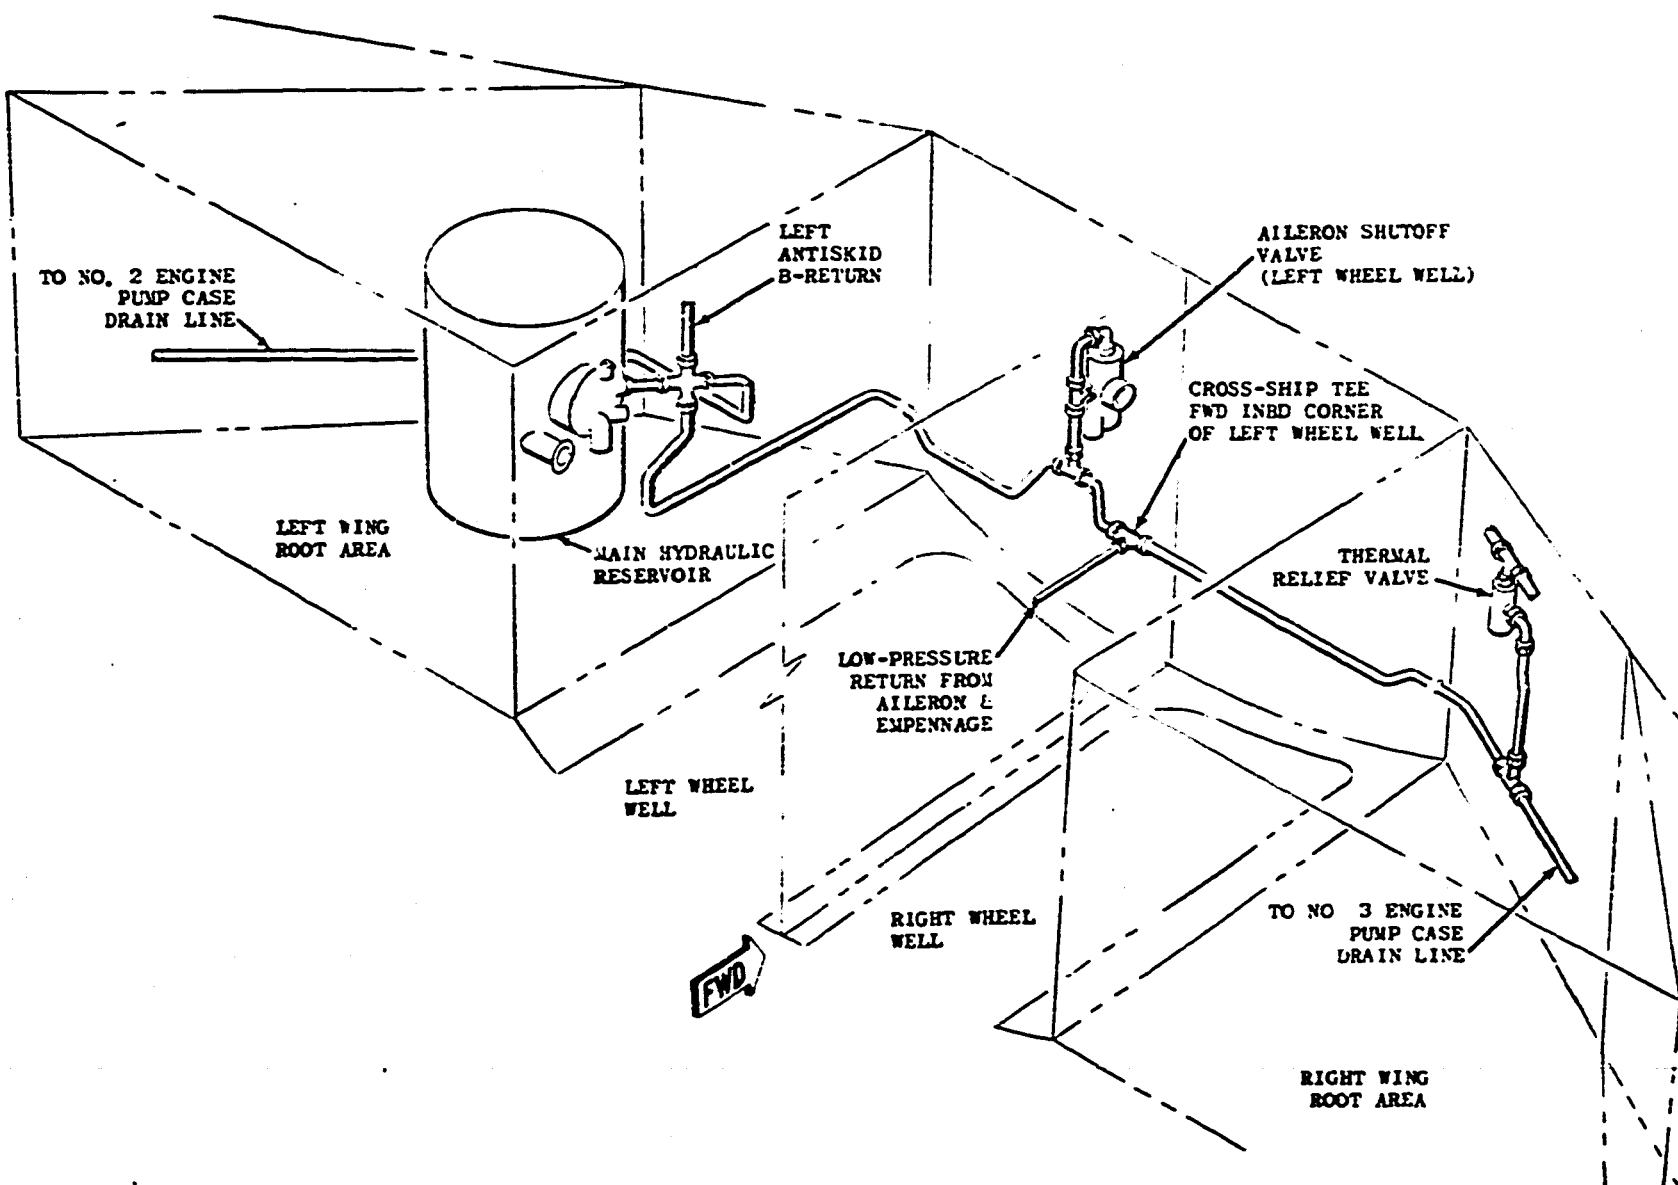

Flushing Procedure Line Connection Locations  
 (Airplanes 801-811)  
 Figure 617

29-00  
 CODE 1  
 Page 636

H2-5497

Oct 15/68

Printed in U.S.A.


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) Disconnect aileron shutoff valve low-pressure return line from tee fitting, located below aileron shutoff valve (in left wheel well). Cap tee fitting.
- (5) Disconnect low-pressure return line from bottom of tee fitting at reservoir low-pressure return port. Connect test stand return hose to line. Cap tee.
- (6) Pressurize test stand to 200 psi at 20 gpm maximum flow.
- (7) Flush circuit for five minutes.
- (8) Depressurize test stand.
- (9) Disconnect short line from top of aileron shutoff valve to tee mentioned in Step (4). Bench flush this line.
- (10) Remove and clean aileron shutoff valve, and thermal relief valve.
- (11) Restore all lines and units to original configuration.

K. Flush Low-Pressure Return Lines (Airplanes 812-822, See Figure 618.)

- (1) In right wing root area, disconnect low-pressure return line from wing flap thermal relief valve. Connect this line to test stand pressure hose. Thermal relief valve is located on the rear spar.
- (2) In left wheel well, disconnect low-pressure return line from tee which connects aileron and empennage returns to cross-ship low-pressure return. Cap tee.
- (3) Disconnect low-pressure return line from tee fitting that joins wing flap return at main reservoir. Cap tee, and connect line to test stand return hose.
- (4) Pressurize test stand to 200 psi at 20 gpm flow.
- (5) Flush circuit for five minutes.
- (6) Depressurize test stand.
- (7) Remove line from aileron shutoff valve to tee fitting in low-pressure return line, in left wheel well. Flush line.
- (8) Remove, clean and/or replace aileron shutoff valve and thermal relief valve.
- (9) Restore all lines and units to original configuration.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

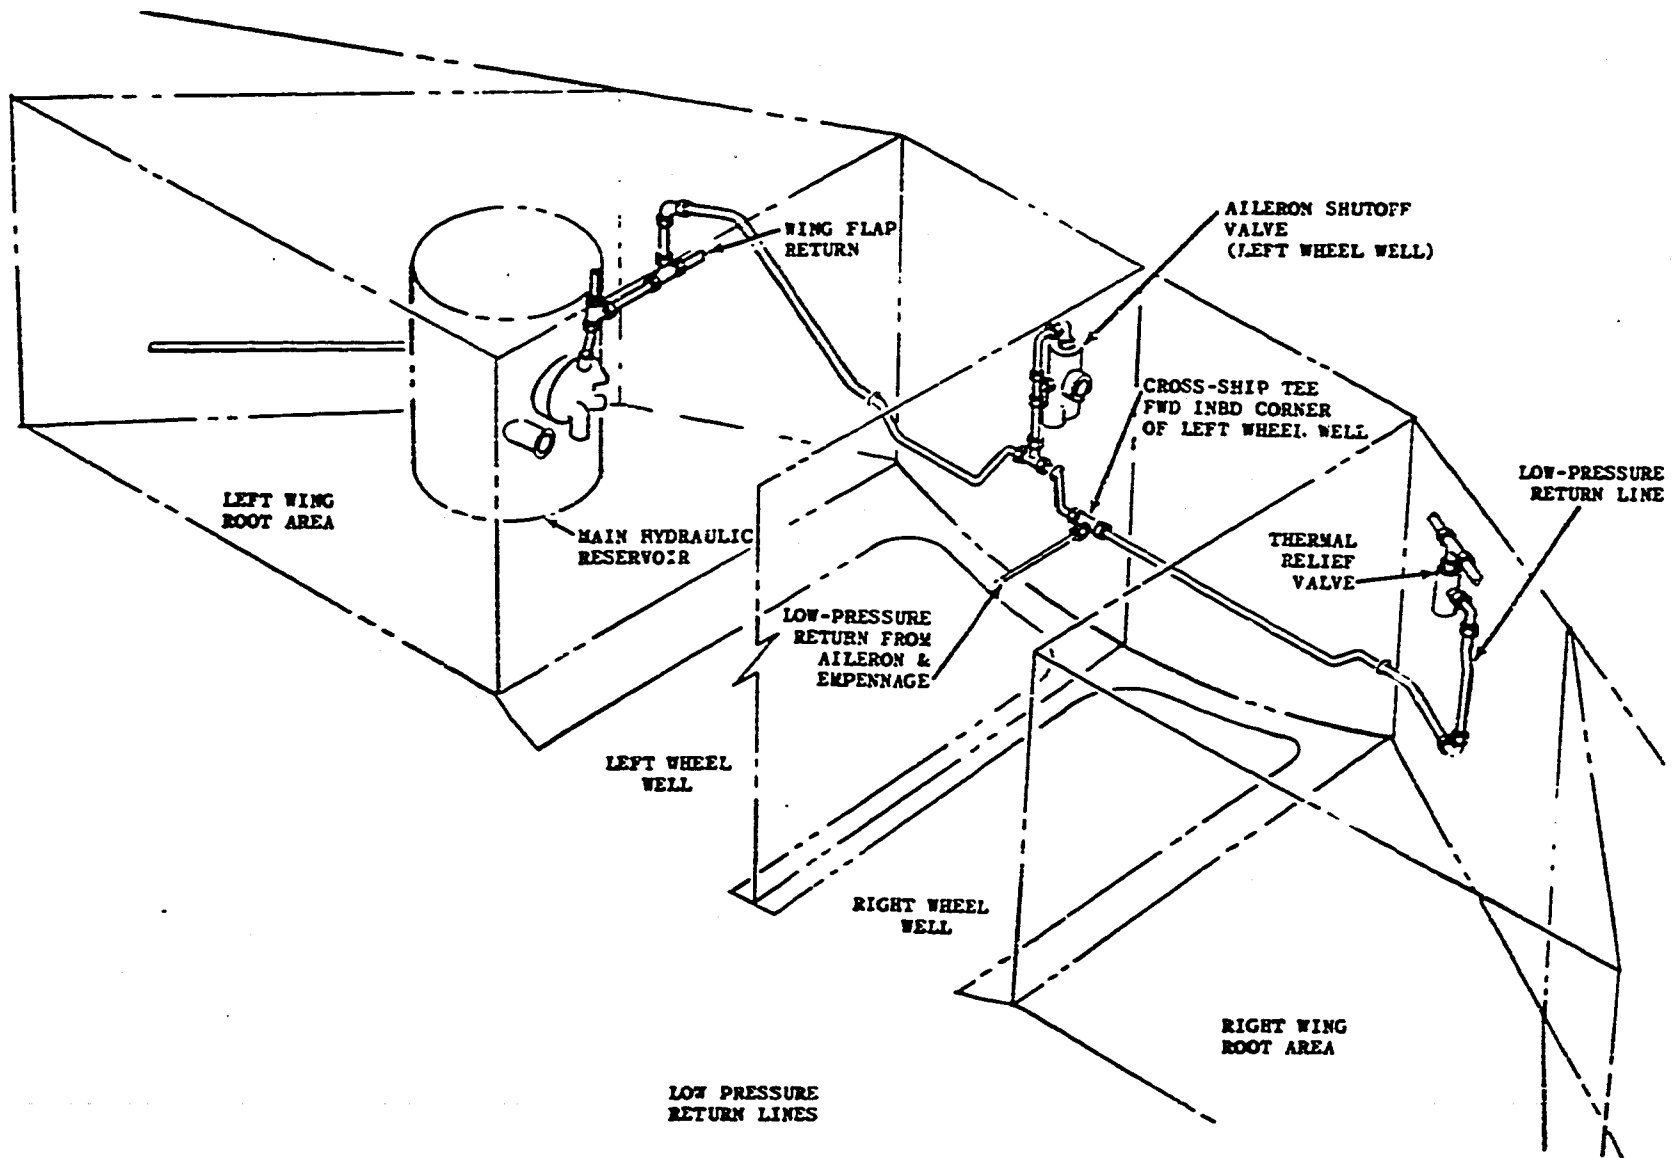

Flushing Procedure Line Connection Locations  
 (Airplanes 812-822)  
 Figure 618

H2-5376

29-00  
 CODE 1  
 Page 638

Oct 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

6. Flush Auxiliary Hydraulic Power System

A. Auxiliary Pressure Lines to Wing Flap System (See Figure 619.)


- (1) Disconnect pressure line from downstream side (forward) of auxiliary hydraulic pump filter. Connect this line to test stand pressure hose.
- (2) Clean auxiliary pump filter (see 29-1-5).
- (3) Remove check valve located above the filter from auxiliary pressure line, and install jumper line in its place.
- (4) Disconnect auxiliary pressure lines from inlet and outlet ports of system selector control valve, and install jumper between these lines. Cap valve ports.
- (5) Disconnect auxiliary pressure line from wing flap inlet port in right power manifold. Connect line to test stand return hose.
- (6) Pressurize test stand to 200 psi maximum at 3 to 10 gpm flow.
- (7) Flush circuit for five minutes.
- (8) Depressurize test stand.
- (9) Remove jumper lines, clean, and/or replace check valve removed in Step (3).
- (10) Connect all lines except right and left main gear bungee cylinder lines.

7. Flush Utility Systems Upstream of Control System Filters

A. Wing Flap System

- (1) Disconnect flap up and flap down lines from wing flap control valve.
- (2) Remove restrictor with portion of wing flap up line, which is connected to wing flap control valve.
- (3) Disconnect flap return line from right power manifold, and jumper this line to flap down line, which was disconnected in Step (1).
- (4) Connect open flap up line to test stand pressure hose.
- (5) Disconnect flap return line from inlet port of auxiliary pump alternate reservoir. Connect this line to test stand return hose.
- (6) Remove thermal relief valve from tee in flap up line, located at STA  $X_{RS} = 70$  in right wing root. Cap tee.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

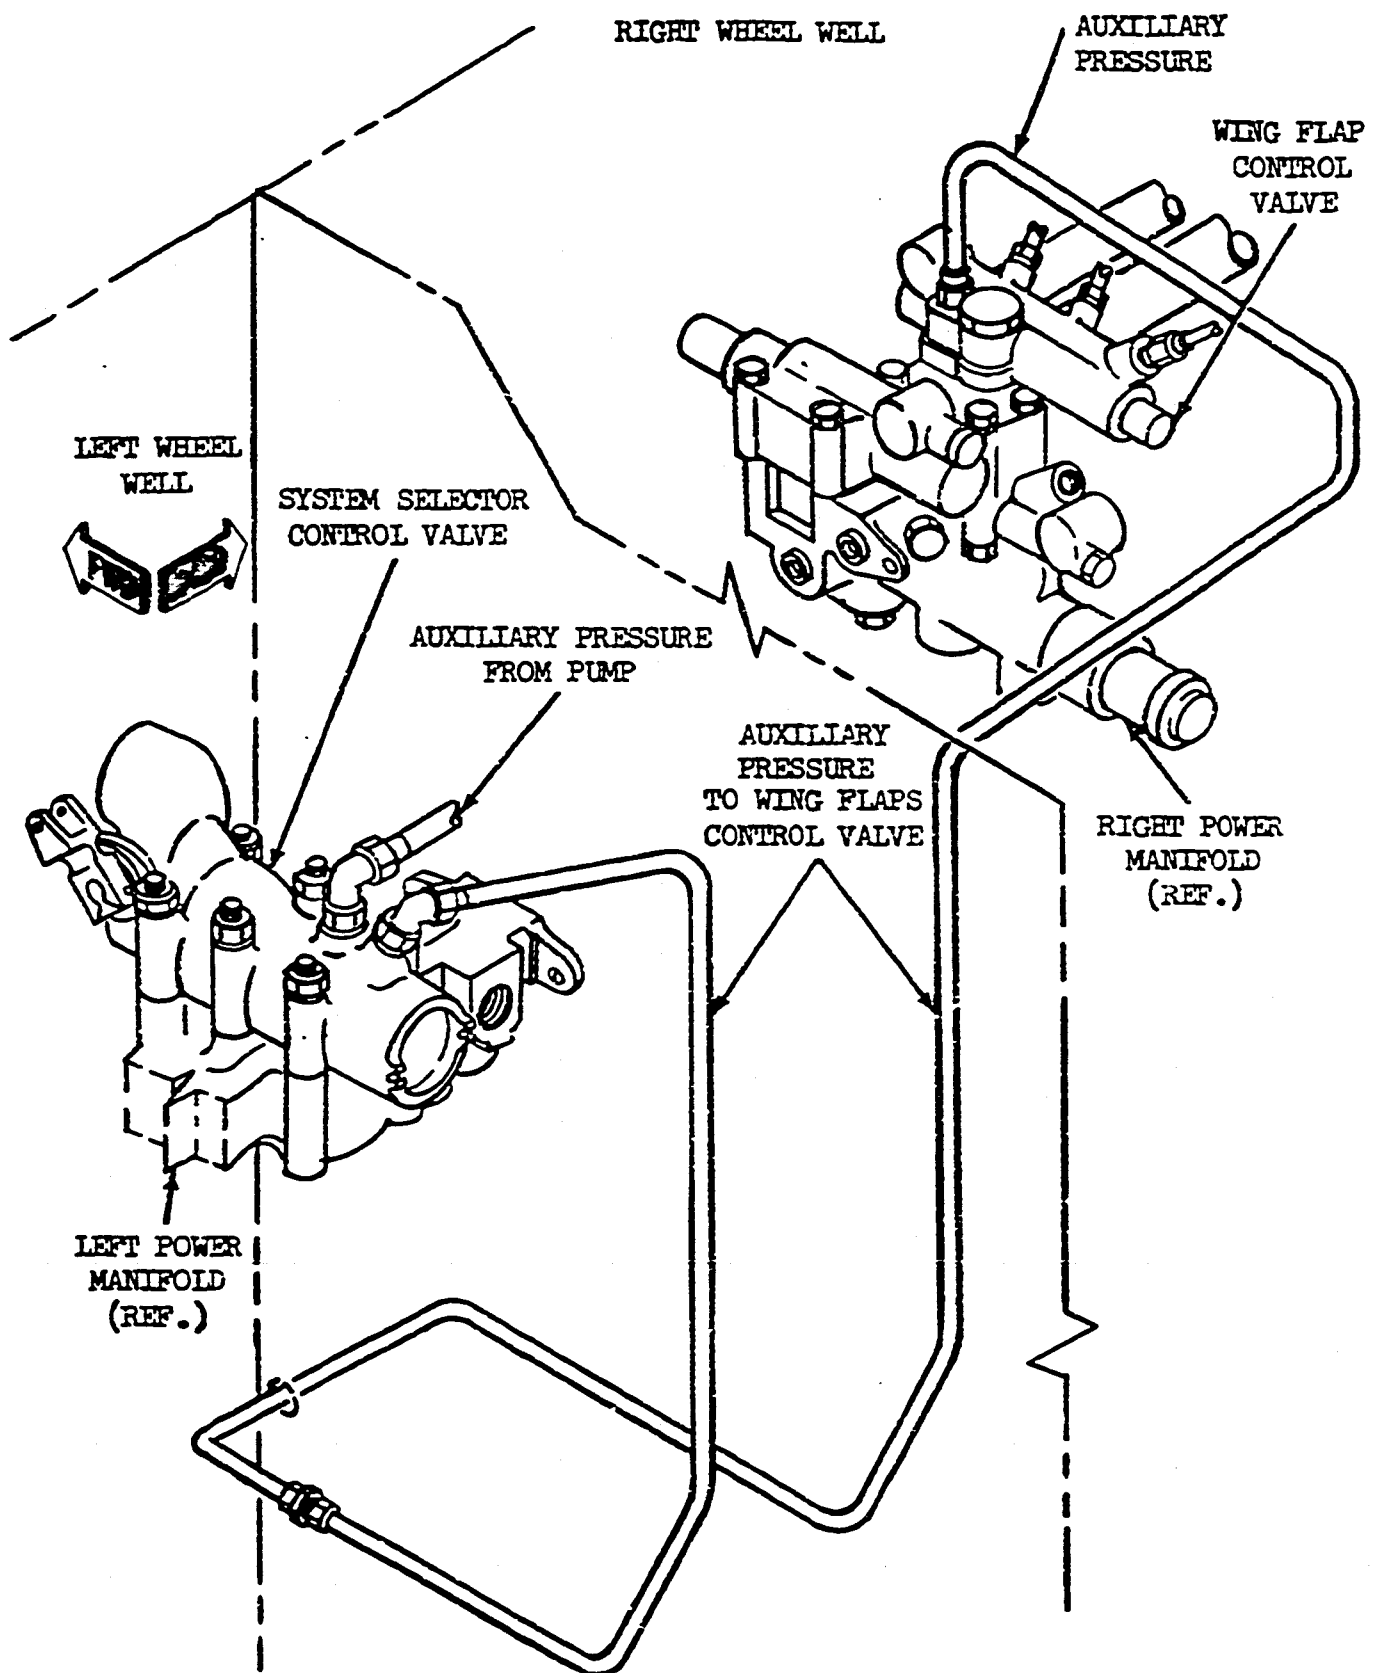

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (7) Disconnect hoses from six flap cylinders. Cap all hoses except outboard left flap cylinder hoses. Connect jumper across these two hoses.
- (8) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (9) Flush circuit for three minutes.
- (10) Depressurize test stand.
- (11) Move jumper to mid-wing hoses, cap outboard hoses, and repeat Steps (8) through (10).
- (12) Move jumper to inboard hoses, cap mid-wing hoses, and repeat Steps (8) through (10).
- (13) Repeat Steps (7) through (10) for lines on right side of airplane making sure that hoses on left side are capped.
- (14) Flush short line that runs between thermal relief valve and tee in low-pressure return line.
- (15) Inspect, clean, and/or replace all flap cylinders, thermal relief valve, restrictor valve, and flap control valve.
- (16) Restore all lines and units to original configuration.
- (17) Adjust rigging if necessary (see Chapter 27).

**B. Wing Slot System**

- (1) Disconnect slots open and slots closed lines from wing slot control valve, located on right power manifold.
- (2) Connect slots open line to test stand pressure hose. Connect slots closed line to test stand return hose.
- (3) Disconnect lines from 4 slot cylinders, cap all lines except outboard right cylinder lines. Install jumper across these two lines.
- (4) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (5) Flush circuit for three minutes.
- (6) Depressurize test stand.
- (7) Move jumper to right inboard slot cylinder lines, cap outboard lines, and repeat Steps (4) through (6).
- (8) Repeat Steps (3) through (7) for left side. Make certain that all lines on both sides of airplane, with exception of jumpered lines, are capped.

Oct 15/68

29-00  
CODE 1  
Page 641


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (9) Inspect, clean, and/or replace wing slot cylinders and wing slot control valve, located on right power manifold.
- (10) Restore all lines and units to original configuration. Adjust rigging if necessary per Chapter 27.

C. Main Gear Retract System (See Figures 620 and 621.)

- (1) Disconnect gear up pressure line, gear down pressure line, and gear down return lines from main gear control valve.
- (2) Connect jumper between gear down pressure line and gear down A-return line.
- (3) Connect gear up line to test stand pressure hose.
- (4) Disconnect gear down A-return line from tee in (nose gear return) A-return line, located in left wheel well aft of rear spar and below dual filter and relief valve. Connect line to test stand return hose.
- (5) Disconnect right gear up and gear down lines from tees, located to right of centerline of airplane. Cap tees. Left gear retract system will be flushed first.
- (6) In left wheel well, disconnect both main gear uplatch lines from tees in gear up and gear down lines. Cap tees.
- (7) Disconnect both main gear door latch lines from tees in gear up and gear down lines near wing root. Cap tees.
- (8) Disconnect downlock bungee pressure line from tee in gear up line. Cap tee.
- (9) Disconnect line, which leads to bungee cylinder, from tee in gear down line. Cap tee.
- (10) Disconnect line, which leads to gear door manual open valve, from tee in main gear down line. Cap tee.
- (11) Replace restrictor in gear down line with jumper.
- (12) Disconnect gear up and gear down lines from upstream side of actuating cylinder swivel gland. Connect jumper between these lines.
- (13) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (14) Flush circuit for five minutes.
- (15) Depressurize test stand.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

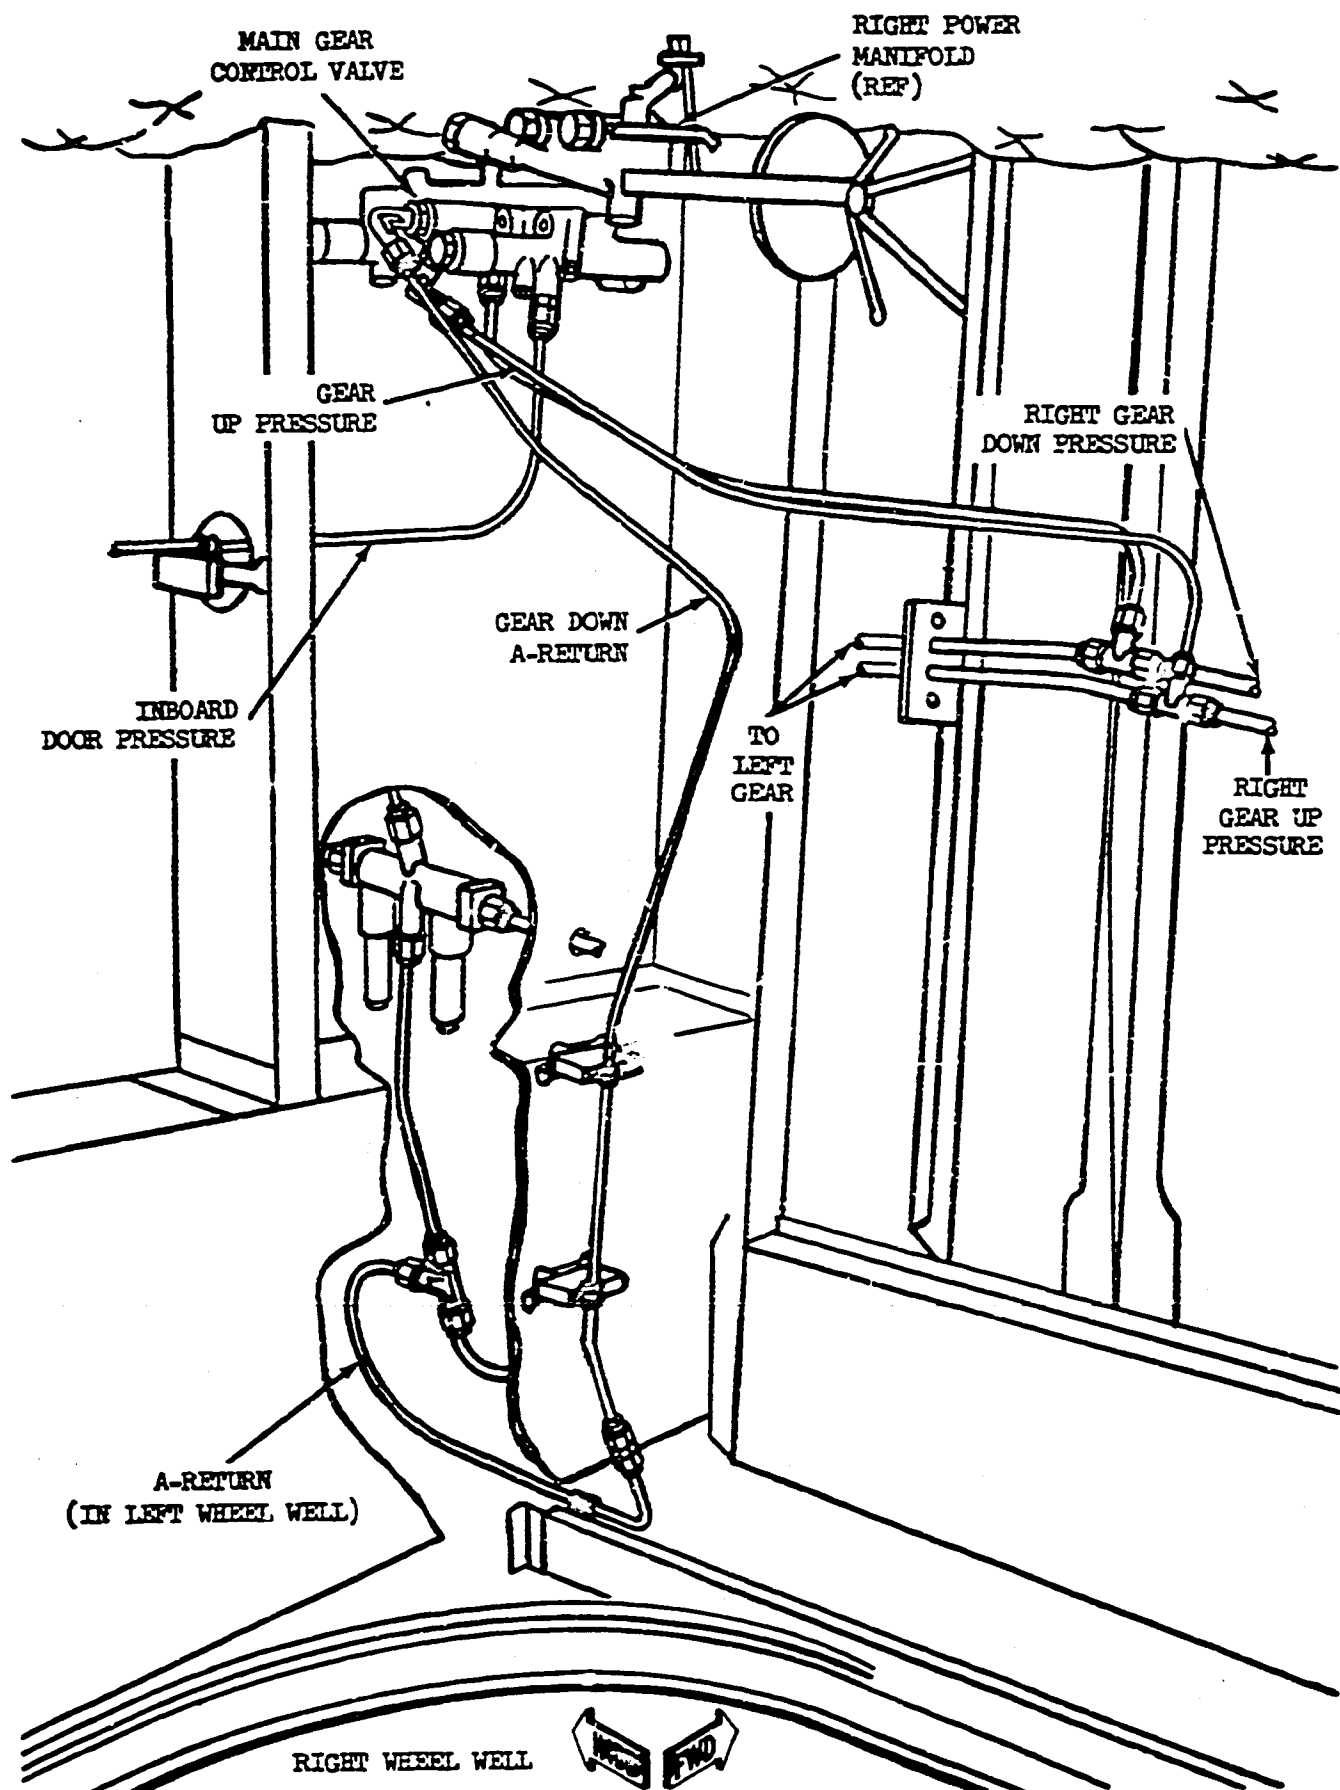

H2-5038


Flushing Procedure Line Connection Locations  
 Figure 620

Oct 15/68

29-00  
 CODE 1  
 Page 643



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

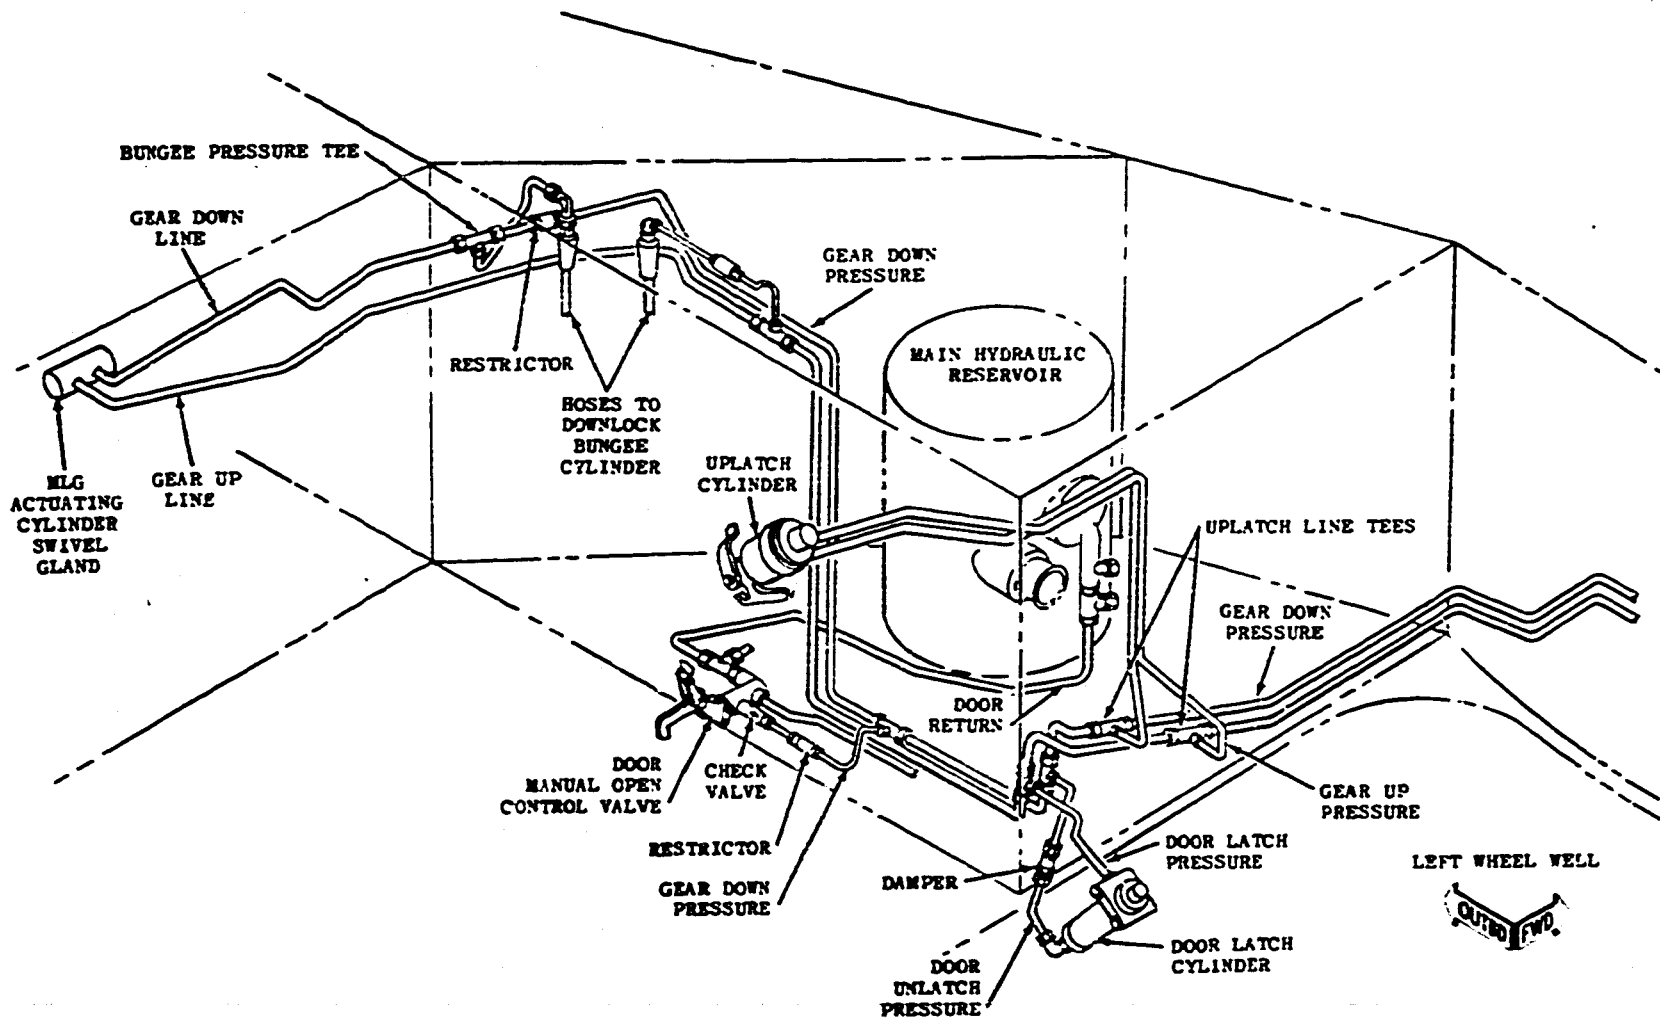

29-00  
 CODE 1  
 Page 644

Flushing Procedure Line Connection Locations  
 Figure 621

H2-5064

Oct 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (16) Inspect, clean, and/or replace actuating cylinder and attaching swivel gland, door latch assembly and attaching lines (which include damper), downlock bungee cylinder and connecting lines including 2 hoses, restrictors and several short lines.
- (17) Disconnect gear uplatch lines from gear uplatch cylinder and connect jumper between lines.
- (18) Connect this circuit to test stand pressure and return hoses and flush for 3 minutes. Use same pressure as in Step (13).
- (19) Inspect, clean, and/or replace main gear uplatch cylinder.
- (20) Restore all lines and units on left side of airplane to original configuration.
- (21) Connect test stand pressure hose to right gear down line, and test stand return hose to right gear up line. These lines were capped in Step (5).
- (22) Repeat Steps (6) through (20) for right side of airplane.
- (23) Make any necessary adjustments per Chapter 32.

D. Main Gear Door System

- (1) Disconnect right main gear door lines from bulkhead tees in center web of airplane. Cap tees.
- (2) Disconnect pressure and return lines from left door actuating cylinder swivel gland. Place jumper across these lines.
- (3) Disconnect door return line from inboard side of door manual open valve. Connect line to test stand return hose.
- (4) Disconnect door pressure line from main gear control valve. Connect line to test stand pressure hose.
- (5) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (6) Flush circuit for three minutes.
- (7) Depressurize test stand.
- (8) Disconnect pressure and return lines from right door actuating cylinder swivel gland. Connect jumper across these lines.
- (9) Connect test stand pressure and return hoses to lines that were capped in Step (1).
- (10) Repeat Steps (5) through (7) for these lines.

Oct 15/68

29-00  
CODE 1  
Page 645


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (11) Inspect, clean, and/or replace both door actuating units, lines, and swivel glands.
- (12) Inspect, clean, and/or replace door manual open valve, short line between manual open valve and tee in down line (this line includes restrictor and check valve), and line which runs from tee in manual open valve to reservoir fitting.
- (13) Restore all lines and units to original configuration, and make any necessary adjustments per Chapter 32.

**E. Bogie Trim and Bogie Swivel Unlock Systems (See Figure 622.)**

- (1) Disconnect both bogie unlock lines, and bogie trim pressure line from bogie swivel unlock control valve located on left power manifold.
- (2) Connect test stand pressure hose to bogie trim pressure line, and test stand return hose to left bogie unlock line.
- (3) Disconnect bogie trim pressure line, which leads to right gear, at tee located below left power manifold and to left of airplane centerline. Cap tee.
- (4) Disconnect line, which runs from tee in bogie relief valve to tee in bogie trim pressure line, at bogie trim pressure line. Cap tee.
- (5) Disconnect line with check valve, which runs from tee in bogie relief valve to tee in bogie unlock line, at bogie unlock cylinder. Cap tee.
- (6) Install jumper lines around main gear swivel gland in bogie trim pressure line and bogie unlock line.
- (7) Disconnect bogie trim pressure hose from tee in forward manifold, located on shock strut above bogie beam. Cap tee.
- (8) Disconnect both hoses from bogie unlock cylinder and jumper these hoses together.
- (9) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (10) Flush circuit for five minutes.
- (11) Depressurize test stand.
- (12) Inspect, clean, and/or replace bogie swivel unlock valve, bogie relief valve and check valve, three short lines which lead to tees in bogie trim pressure line, bogie unlock line, manual door open valve on left side of airplane, and tee in antiskid valve on right side of airplane.
- (13) Inspect, clean, and/or replace swivel gland, located at top of main gear strut, bogie swivel unlock cylinder, and bogie trim cylinder with attaching hose and line.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

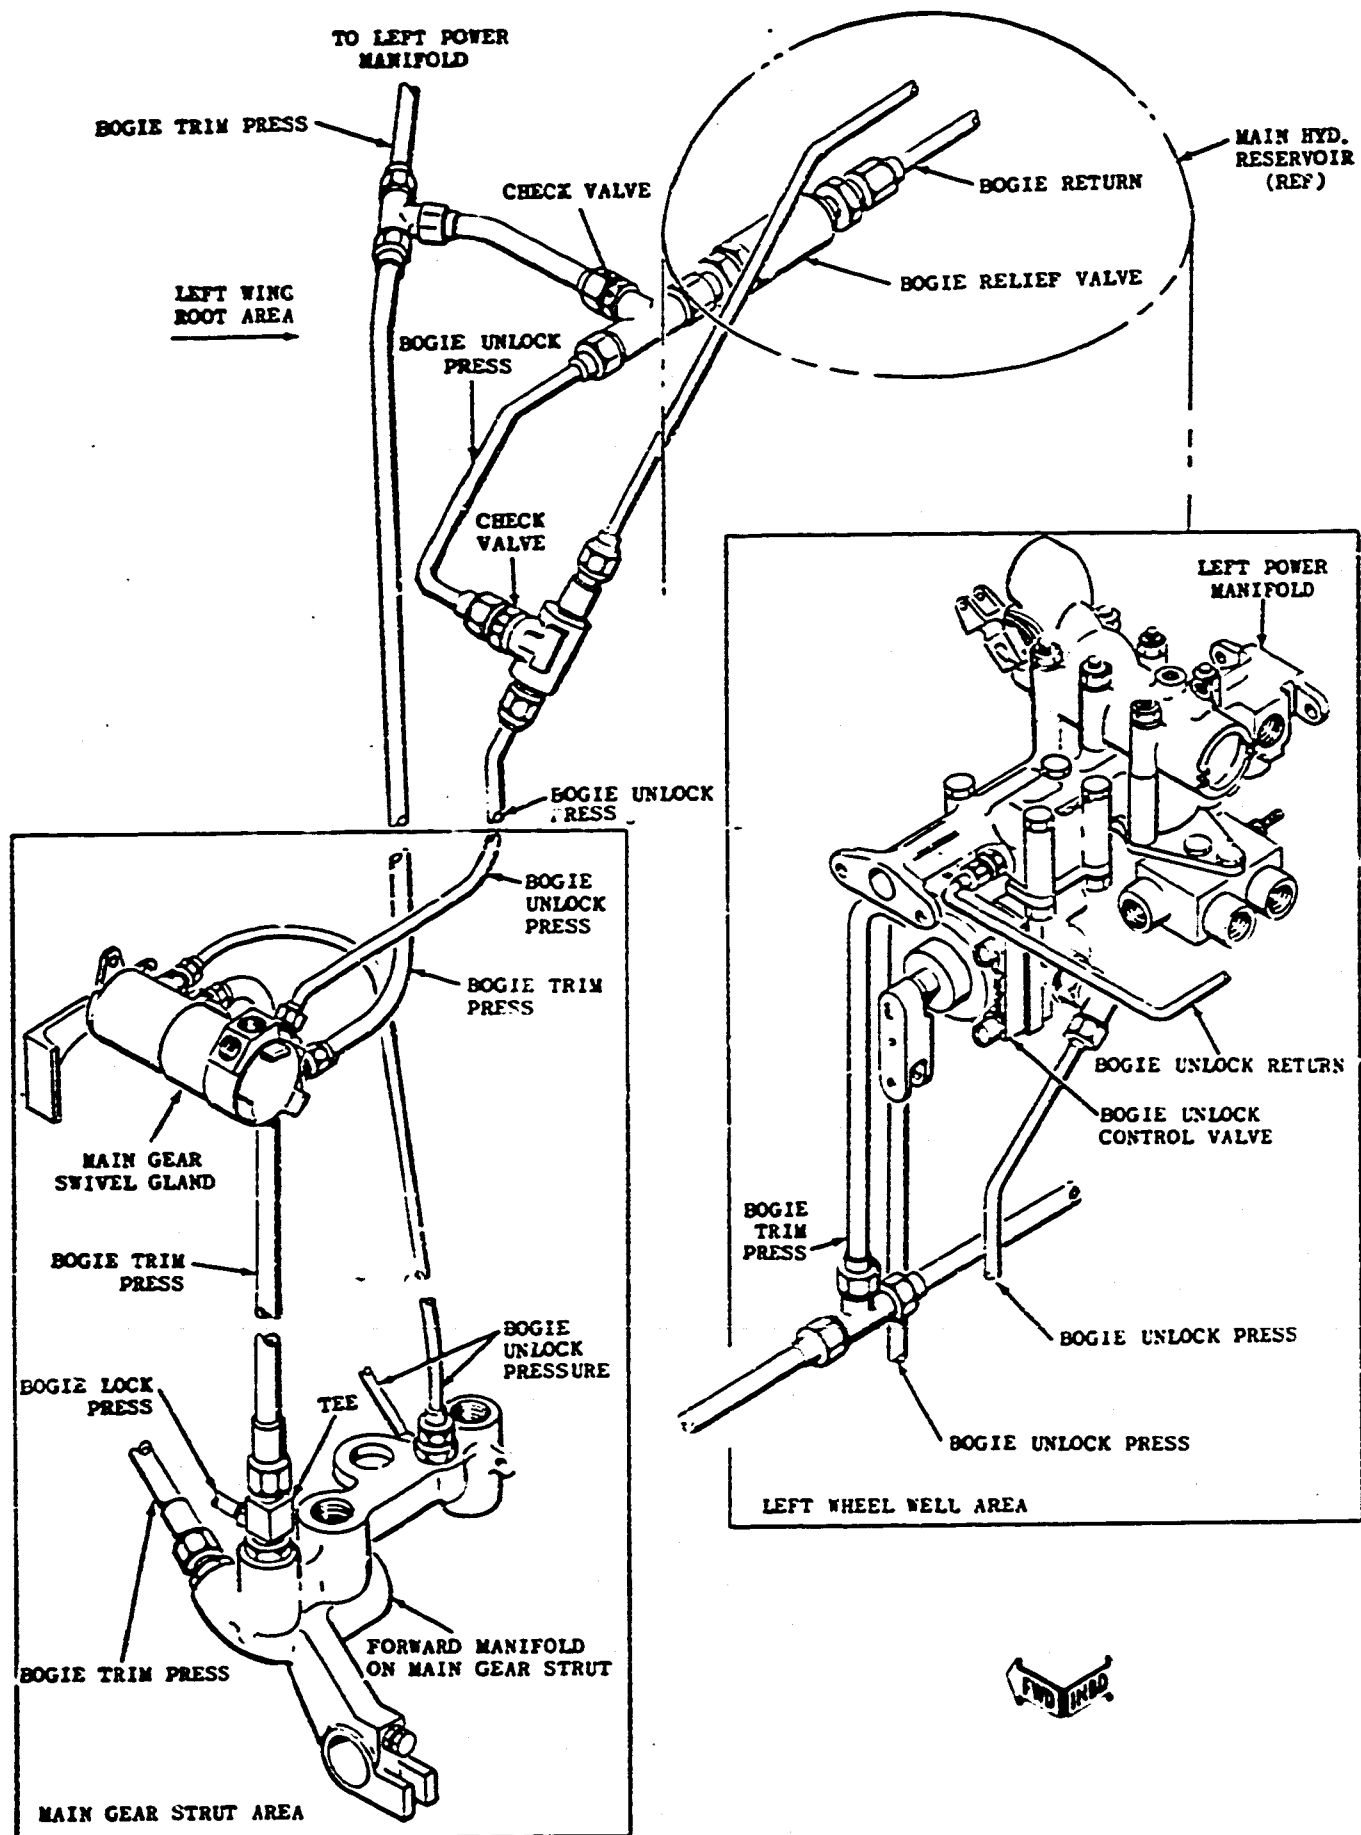

H2-5067

Flushing Procedure Line Connection Locations  
 Figure 622

Oct 15/68

29-00  
 CODE 1  
 Page 647


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (14) Connect right bogie trim pressure line to tee from which it was disconnected in Step (3). Disconnect left bogie trim pressure line from this tee, and cap tee.
- (15) Disconnect test stand return hose from left bogie unlock line and connect it to right bogie unlock line.
- (16) Repeat Steps (4) through (13) for right side of airplane.
- (17) Restore all lines, hoses, and units to original configuration. Make adjustments as necessary per Chapter 32.

F. Nose Gear System (See Figures 623 and 624.)

- (1) Disconnect nose gear down line from tee in nose gear control valve. Connect line to test stand pressure hose.
- (2) Disconnect actuating cylinder gear down hose from tee in gear down line, located on left side of nosewheel well. Cap tee.
- (3) Jumper check valve in steering pressure line, which runs from tee for actuating cylinder down hose to tee which branches to reserve accumulator shutoff valve and pressure line running forward.
- (4) At tee between check valve, removed in Step (3), and reserve accumulator shutoff valve, disconnect steering pressure line which leads forward. Cap tee.
- (5) Disconnect pressure line from left side of reserve accumulator shutoff valve. Place jumper between this line and line which was disconnected in Step (4).
- (6) Replace check valve in steering pressure line, located aft of nosewheel steering valve, with jumper.
- (7) Disconnect all four lines from steering control valve. Place jumpers between pressure line and steer right line, and between return line and steer left line.
- (8) Disconnect three 1/2-inch lines, and two 3/8-inch lines from swivel gland located on cross arm. Place jumper across two open steer left lines, located on opposite sides of swivel gland. Place jumper across two steer right lines, which were disconnected from same tee in swivel gland.
- (9) Disconnect at steering cylinder glands, three steering lines which run from swivel gland on crossarm to glands at steering cylinders.
- (10) Install jumper across two lines on right cylinder. On left cylinder install jumper from open line to open steer-right line upstream of swivel gland on crossarm.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

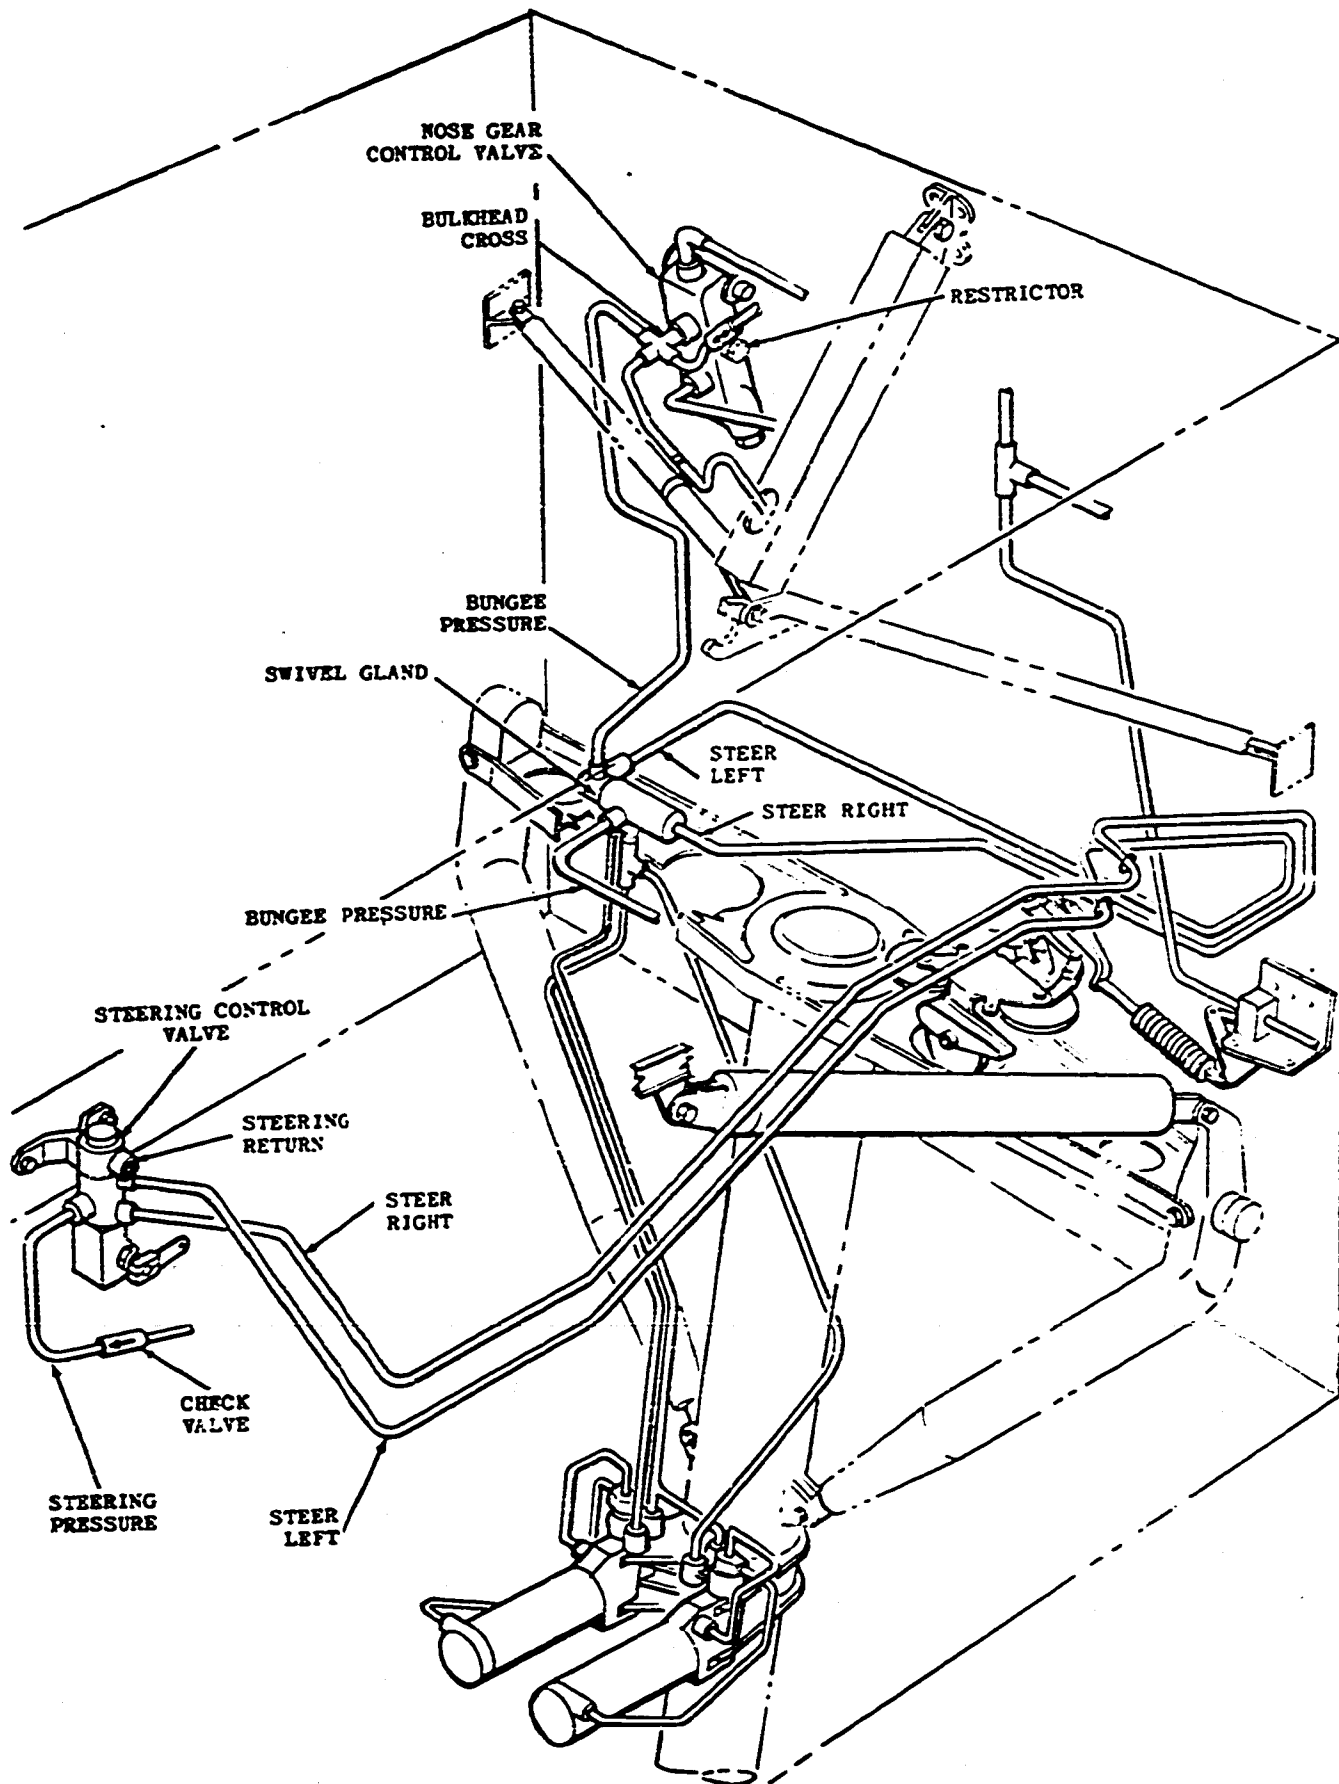

Flushing Procedure Line Connection Locations  
 Figure 623

Oct 15/68

Printed in U.S.A.

H2-5078A  
 29-00  
 CODE 1  
 Page 649


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (11) Disconnect steering return line from lower side of tee in steering relief valve. Disconnect gear actuating cylinder up hose at cylinder. Place jumper between this open line and hose.
- (12) Disconnect 1/4-inch up line from restrictor on side away from control valve. Disconnect 1/4-inch bungee line at bulkhead cross fitting at control valve. Place jumper across these two open lines.
- (13) Disconnect bungee line from top of swivel gland and connect to test stand return hose.
- (14) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (15) Flush circuit for five minutes.
- (16) Depressurize test stand.
- (17) Inspect, clean, and/or replace relief valve, bleeder valve, return accumulator and two associated lines, nose gear actuating cylinder and attaching hoses, bungee cylinder and attaching line, swivel gland mounted on crossarm, uplatch cylinder and two lines which connect it to control valve.
- (18) Inspect, clean, and/or replace nosewheel steering valve, located on outboard side of left side of wheel well.
- (19) Inspect, clean, and/or replace nosewheel steering cylinders, restrictors, and gland assemblies and associated lines; nosewheel steering control valve, reserve accumulator shutoff valve and associated lines, and check valves.
- (20) Restore all lines and units to original configuration, and make any necessary adjustments as described in Chapter 32.

G. Ejector System (Airplanes 801-811.)

- (1) Disconnect extend and retract lines at left outboard ejector solenoid valve.
- (2) Connect extend line to test stand pressure hose. Connect retract line to test stand return hose.
- (3) Disconnect extend and retract lines at ejector cylinder and place jumper across lines.
- (4) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (5) Flush circuit for five minutes.
- (6) Depressurize test stand.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

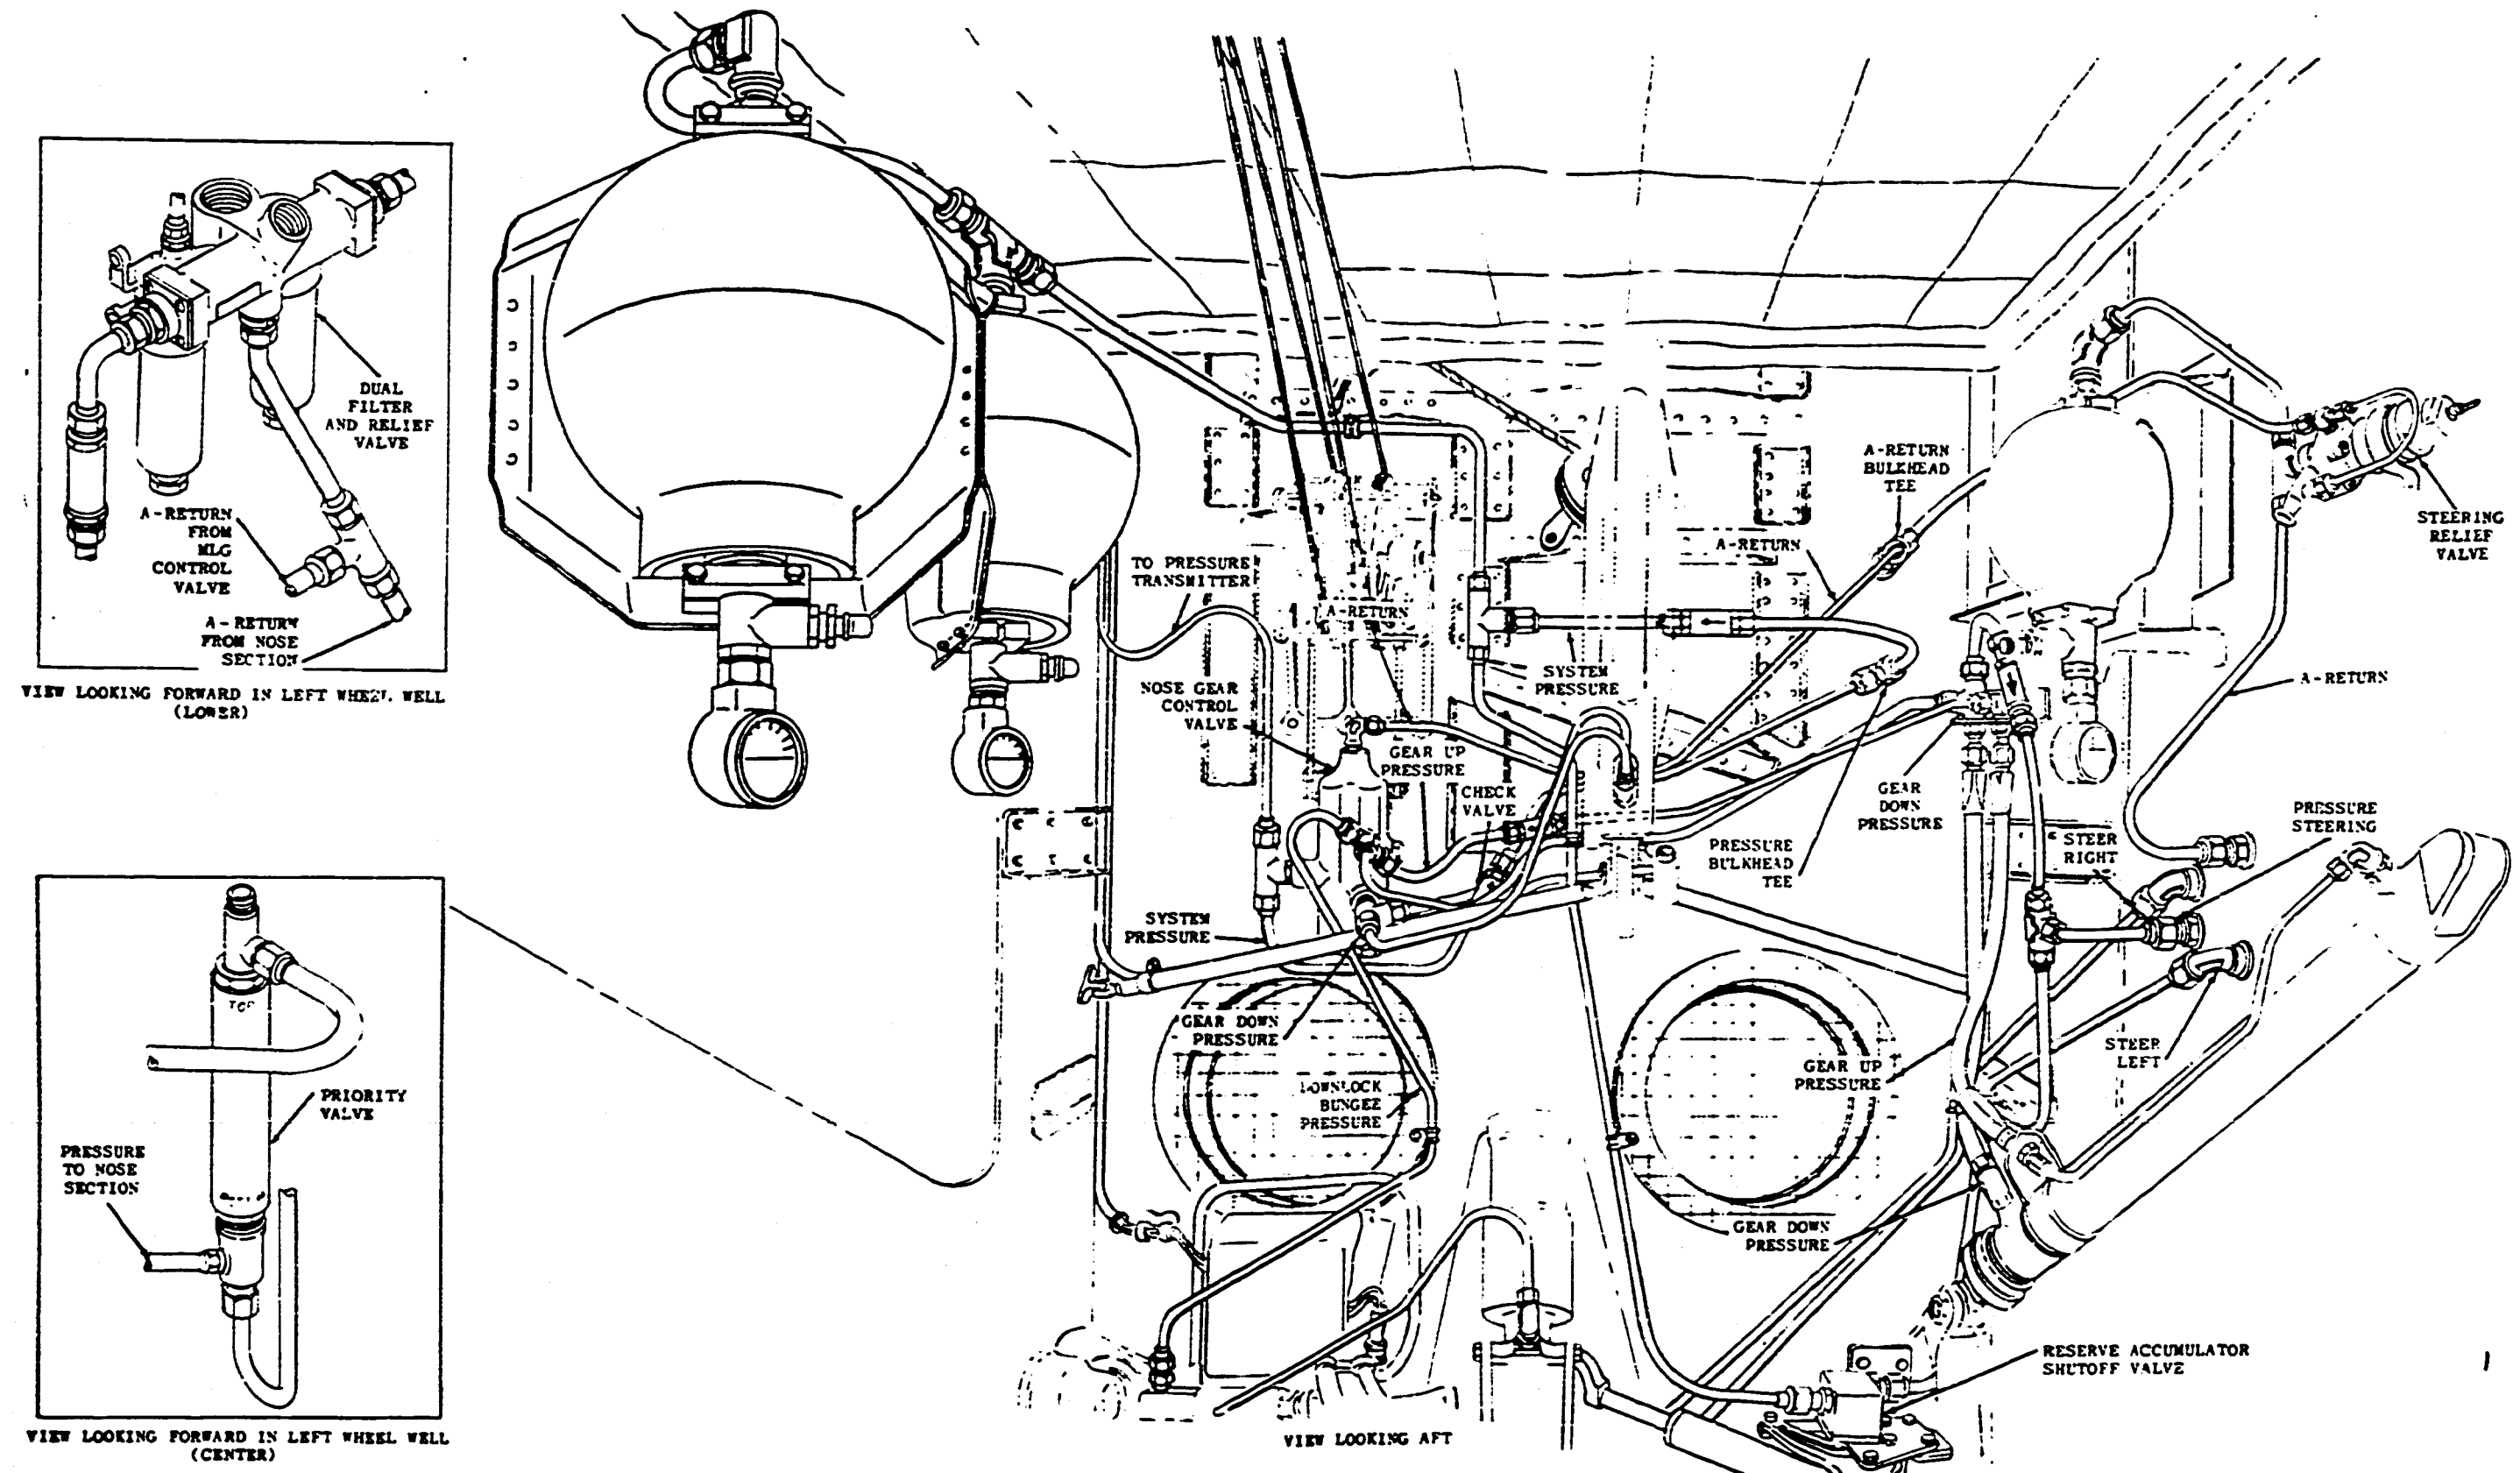

H2-5045

Flushing Procedure Line Connection Locations  
 Figure 624

29-00  
 CODE 1  
 Page 651

Oct 15/68

Printed in U.S.A.



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

(7) Inspect, clean, and/or replace ejector solenoid valve, restrictor, and ejector cylinder.

(8) Repeat Steps (1) through (7) for other three ejectors.


H. Brake System (See Figure 625.)

- (1) Disconnect left brake pressure line from brake control valve, and connect to test stand pressure hose.
- (2) Disconnect brake pressure inlet line and outlet line from left antiskid valve. Connect jumper across these lines.
- (3) Install jumpers around forward brakes lockout cylinder and brake restrictor check valve.
- (4) At left forward brakes, disconnect both brake pressure hoses. Cap inboard hose, and connect outboard hose to test stand return hose.
- (5) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (6) Flush circuit for three minutes.
- (7) Depressurize test stand.
- (8) Repeat Steps (4) through (7) for inboard hose on forward left brakes.
- (9) Repeat Steps (2) through (7) for aft left brakes.
- (10) Remove short B-return line, which runs from left antiskid valve to cross in B-return line at reservoir, and bench flush.
- (11) Repeat Steps (1) through (9) for right side of airplane.
- (12) In right wing root disconnect antiskid A-return line at tee in right antiskid valve and at tee in right aileron A-return line.
- (13) Connect this line to test stand pressure and return hoses.
- (14) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (15) Flush circuit for three minutes.
- (16) Depressurize test stand.
- (17) To flush brake accumulator and check valve system, disconnect pressure line which runs from right power manifold to tee on accumulator. Connect test stand return hose to line that was disconnected at accumulator tee.
- (18) Remove brake inlet check valve seat, spring, and poppet from right power manifold. Install seat only with seals.

Oct 15/68

29-00  
CODE 1  
Page 653

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

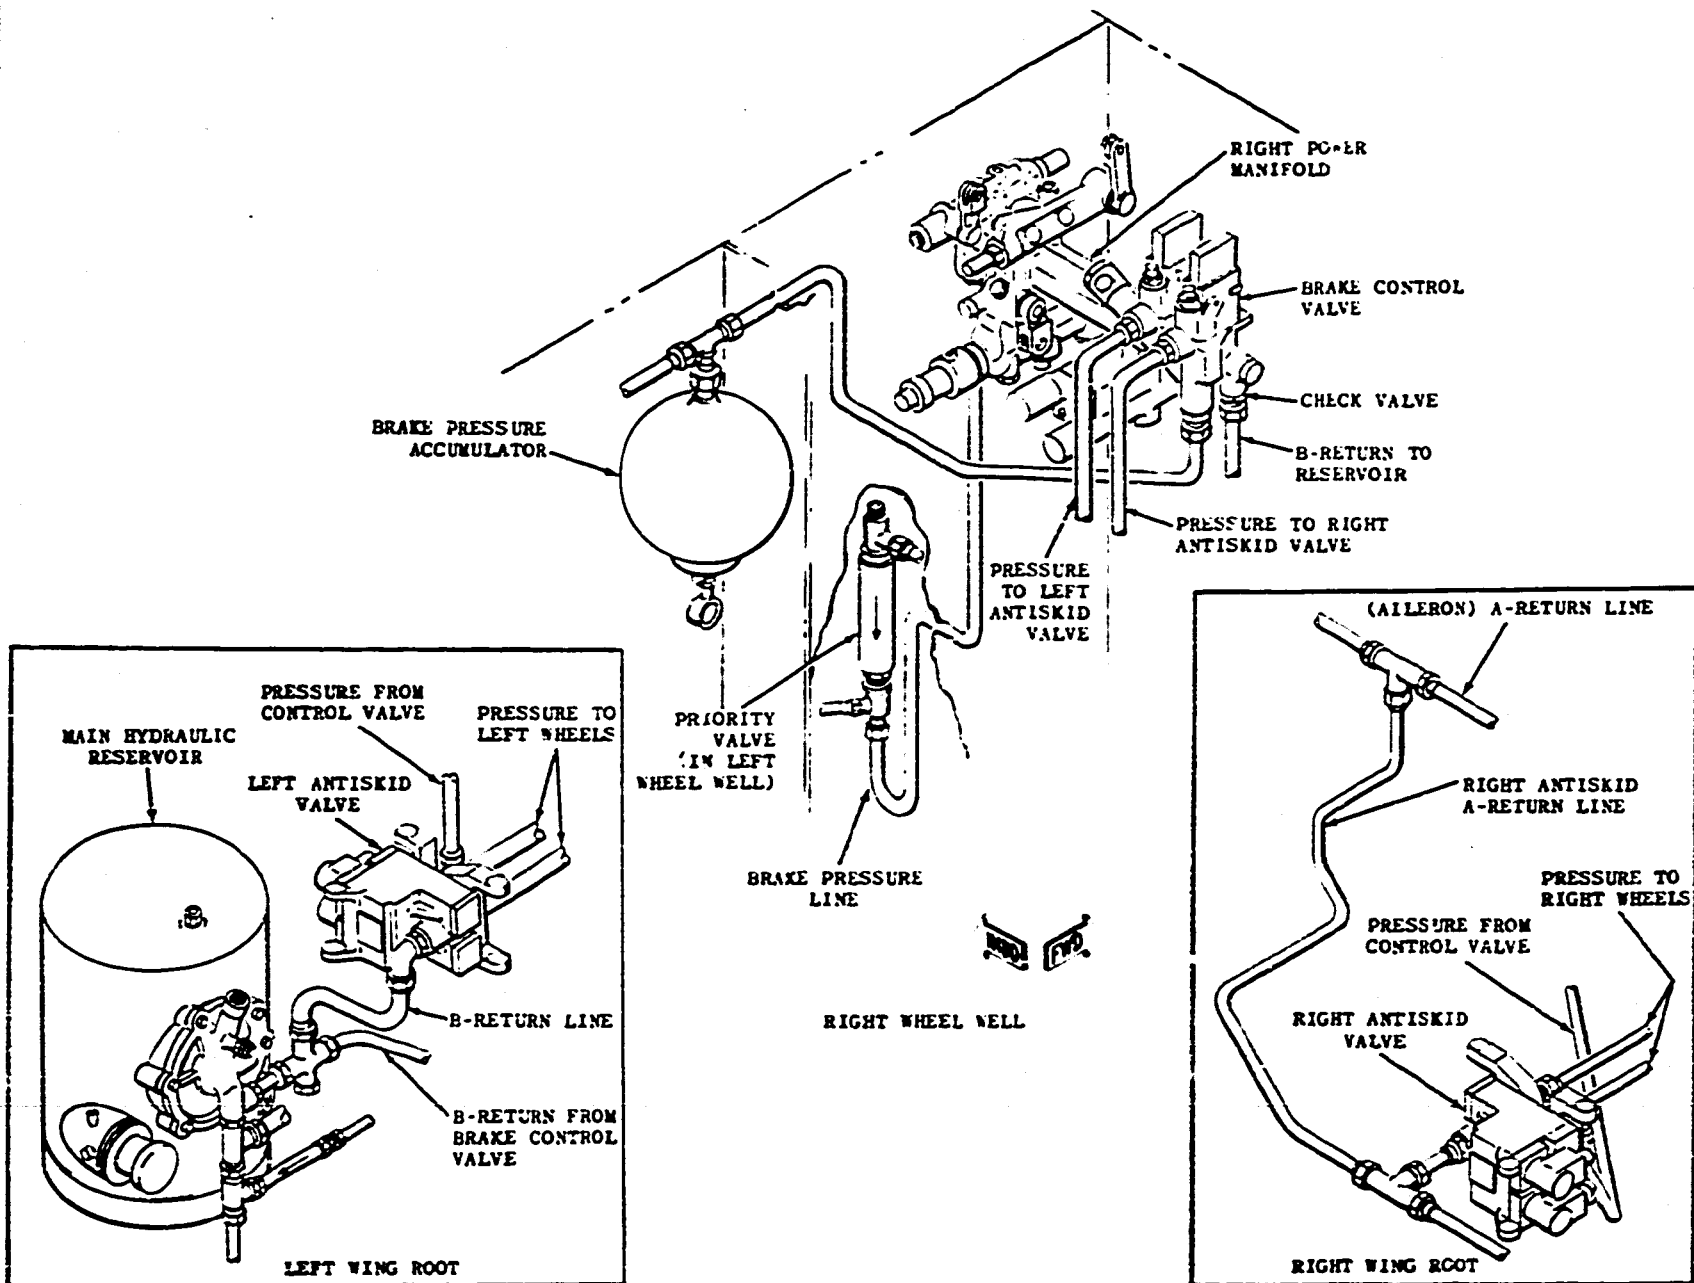

H2-5080

29-00  
 CODE 1  
 Page 654

Flushing Procedure Line Connection Locations  
 Figure 625

Oct 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (19) Remove pressure line from tee at bottom of priority valve, located below left power manifold, and connect this line to test stand pressure hose.
- (20) Pressurize test stand to 200 psi at 5 to 20 gpm flow.
- (21) Flush circuit for five minutes.
- (22) Depressurize test stand.
- (23) Remove inlet check valve seat. Examine check valve assembly for evidence of improper seating and magnetization. Install new check valve assembly if required.
- (24) Remove accumulators and connecting line. Clean and flush on bench.
- (25) Inspect, clean, and/or replace brake valve, two antiskid valves, four lockout cylinders, and four restrictor check valves.
- (26) Restore all lines and units to original configuration. Bleed and adjust brake system per Chapter 32.

## 8. Flush Flight Power Control Systems

### A. Aileron Power System

- (1) On left side of airplane, remove, inspect, clean and/or replace aileron power valve, power cylinder, lockout tab cylinder, and associated piping (including lines, glands, and restrictors) downstream of aileron filter and outboard of return manifold located at STA  $X_{FS} = -500$ .
- (2) Repeat Step (1) for right aileron power system.

### B. Rudder Power System

- (1) In tail of airplane aft of pressure bulkhead, disconnect three horizontal stabilizer trim lines from tees in three rudder lines. Cap tees.
- (2) On aft side of pressure bulkhead, disconnect B-return and low-pressure return lines. On downstream side of filter, disconnect empennage pressure line and connect it to test stand pressure hose.
- (3) Connect jumper across open B-return and low-pressure return lines.
- (4) Where rudder standby pressure line tees into normal pressure line, remove line and check valve. Cap tee.
- (5) In same tee, mentioned in Step (4), remove other check valve in normal pressure line and replace it with jumper.


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Disconnect line which runs from check valve in shutoff valve to tee in B-return line at tee. Cap tee.
- (7) At rudder shutoff valve, disconnect low-pressure return line from tee and connect to test stand return hose.
- (8) At same valve, Step (7), disconnect pressure-in line and pressure-out line. Place jumper across two lines.
- (9) Disconnect line from pressure reducer valve to tee in return line. Cap tee.
- (10) At tee in pressure reducer valve, disconnect both pressure lines and connect together with jumper.
- (11) Disconnect reduced pressure line from pressure reducer valve, and disconnect pressure line from restrictor check valve in rudder power cylinder swivel gland. Place jumper across these two open lines.
- (12) Disconnect reduced pressure line from check valve in swivel gland, and disconnect return line from swivel gland. Place jumper across these two lines.
- (13) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (14) Flush circuit for five minutes.
- (15) Depressurize test stand.
- (16) Inspect, clean, and/or replace rudder shutoff valve, pressure reducer valve, rudder power control cylinder, swivel gland, and all removed check valves and restrictors.
- (17) Restore all lines and units to original configuration, and make any necessary adjustments per Chapter 27.

C. Horizontal Stabilizer Trim System

- (1) Disconnect three stabilizer trim lines from tees in rudder power system lines.
- (2) Place jumper across B-return and low-pressure return lines.
- (3) Connect open pressure line to test stand pressure hose.
- (4) Disconnect low-pressure return line from trim motor control valve cross fitting. Disconnect B-return line from control valve. Disconnect pressure line from shutoff valve.
- (5) Connect jumper between open pressure line, and open B-return line.
- (6) Connect open low-pressure return line to test stand return hose.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

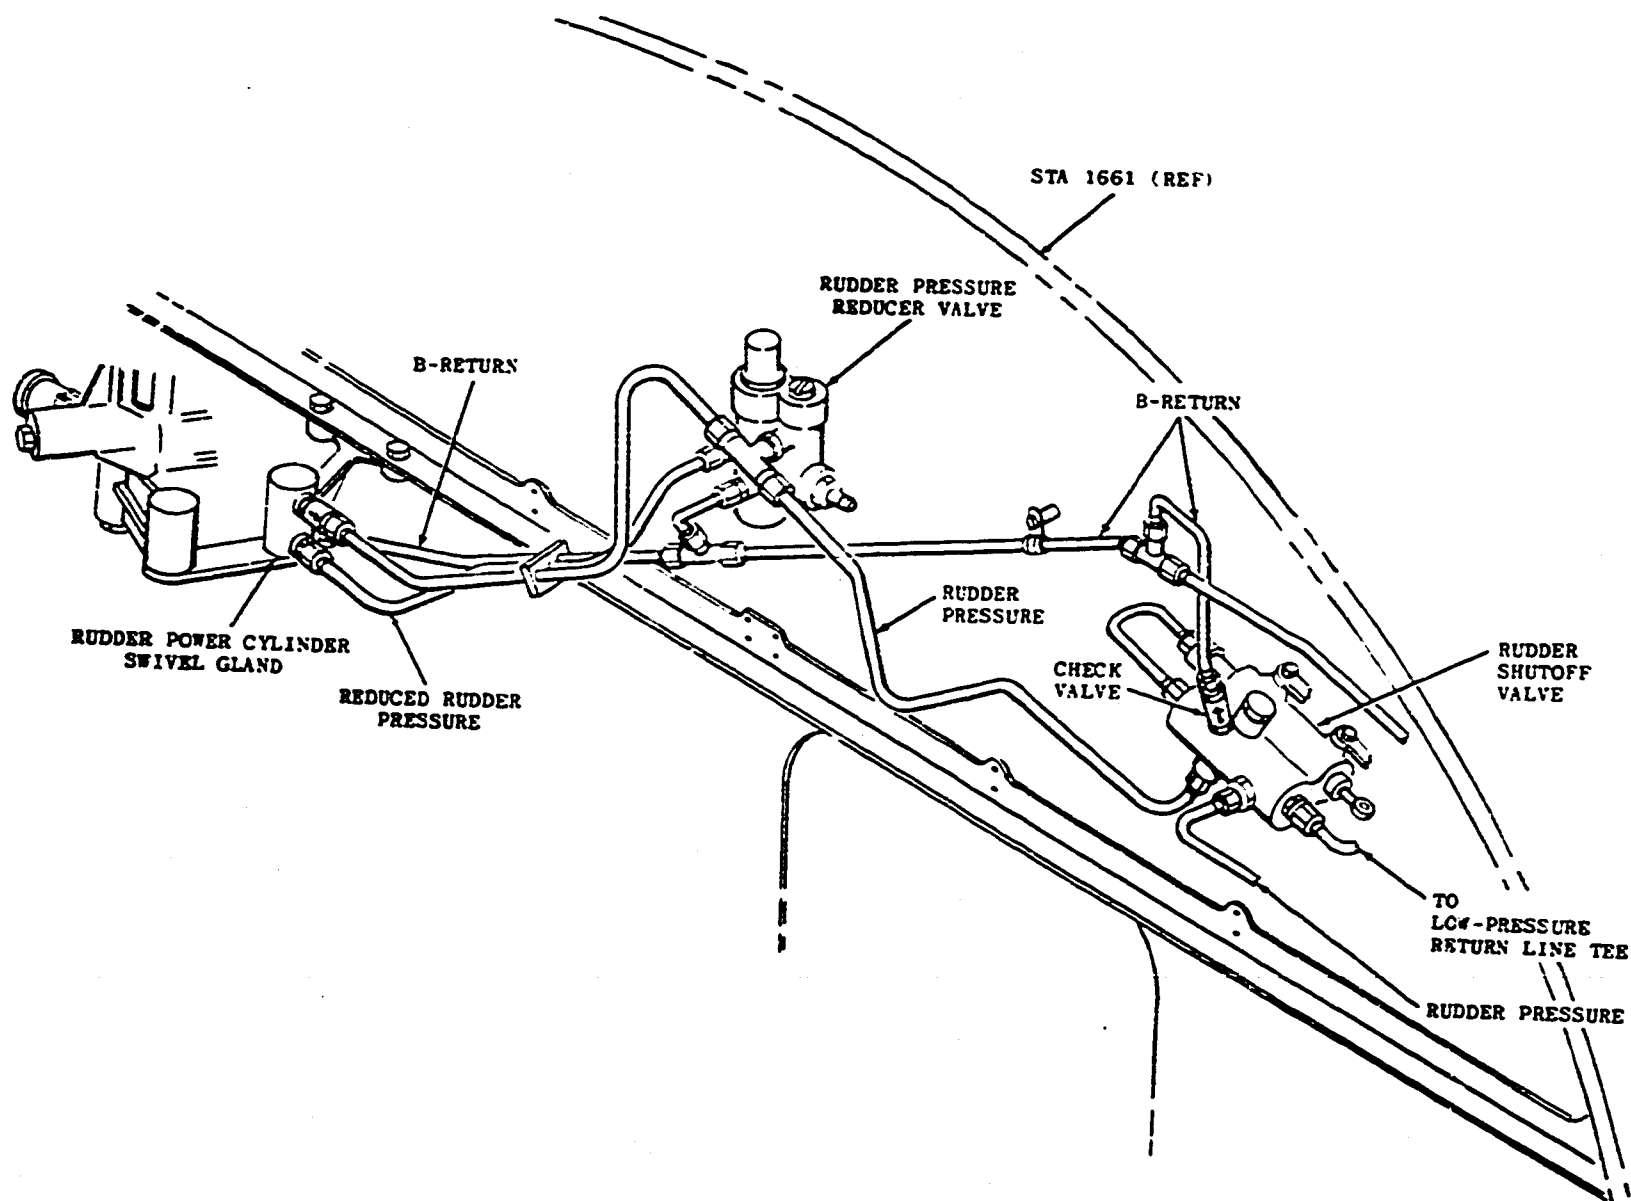

Flushing Procedure Line Connection Locations  
 Figure 626

Oct 15/68

Printed in U.S.A.

H2-5036  
 29-00  
 CODE 1  
 Page 657

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (7) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (8) Flush circuit for three minutes.
- (9) Depressurize test stand.
- (10) Inspect, clean, and/or replace hydraulic trim motor-brake, valves, and associated piping.
- (11) Restore all lines and units to original configuration.

9. Flush Spoiler System

A. Spoiler Power System to Filter (See Figure 628.)

- (1) After bleeding pressure and hydraulic fluid from spoiler system reservoir, disconnect bypass hose and pressure hose from bottom of pump. Connect two hoses together with union.
- (2) At reservoir, disconnect suction hose and bypass hose. Jumper these two hoses together.
- (3) Disconnect suction line from pump and connect to test stand pressure hose.
- (4) Disconnect both pressure lines at tee in accumulator. Place jumper across these lines.
- (5) At relief valve just forward of filter, disconnect pressure line from upper tee, and disconnect return line from forward side of bottom tee. Place jumper across open lines.
- (6) Disconnect return line from tee in reservoir, and connect open line to test stand return hose.
- (7) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (8) Flush circuit for five minutes.
- (9) Depressurize test stand.
- (10) Inspect, clean, and/or replace accumulator, and two relief valves (one at reservoir and one at filter).
- (11) Clean out filter bowl and replace element.
- (12) Clean out reservoir and refill with clean fluid after connecting all lines and units. Restore system to original configuration.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

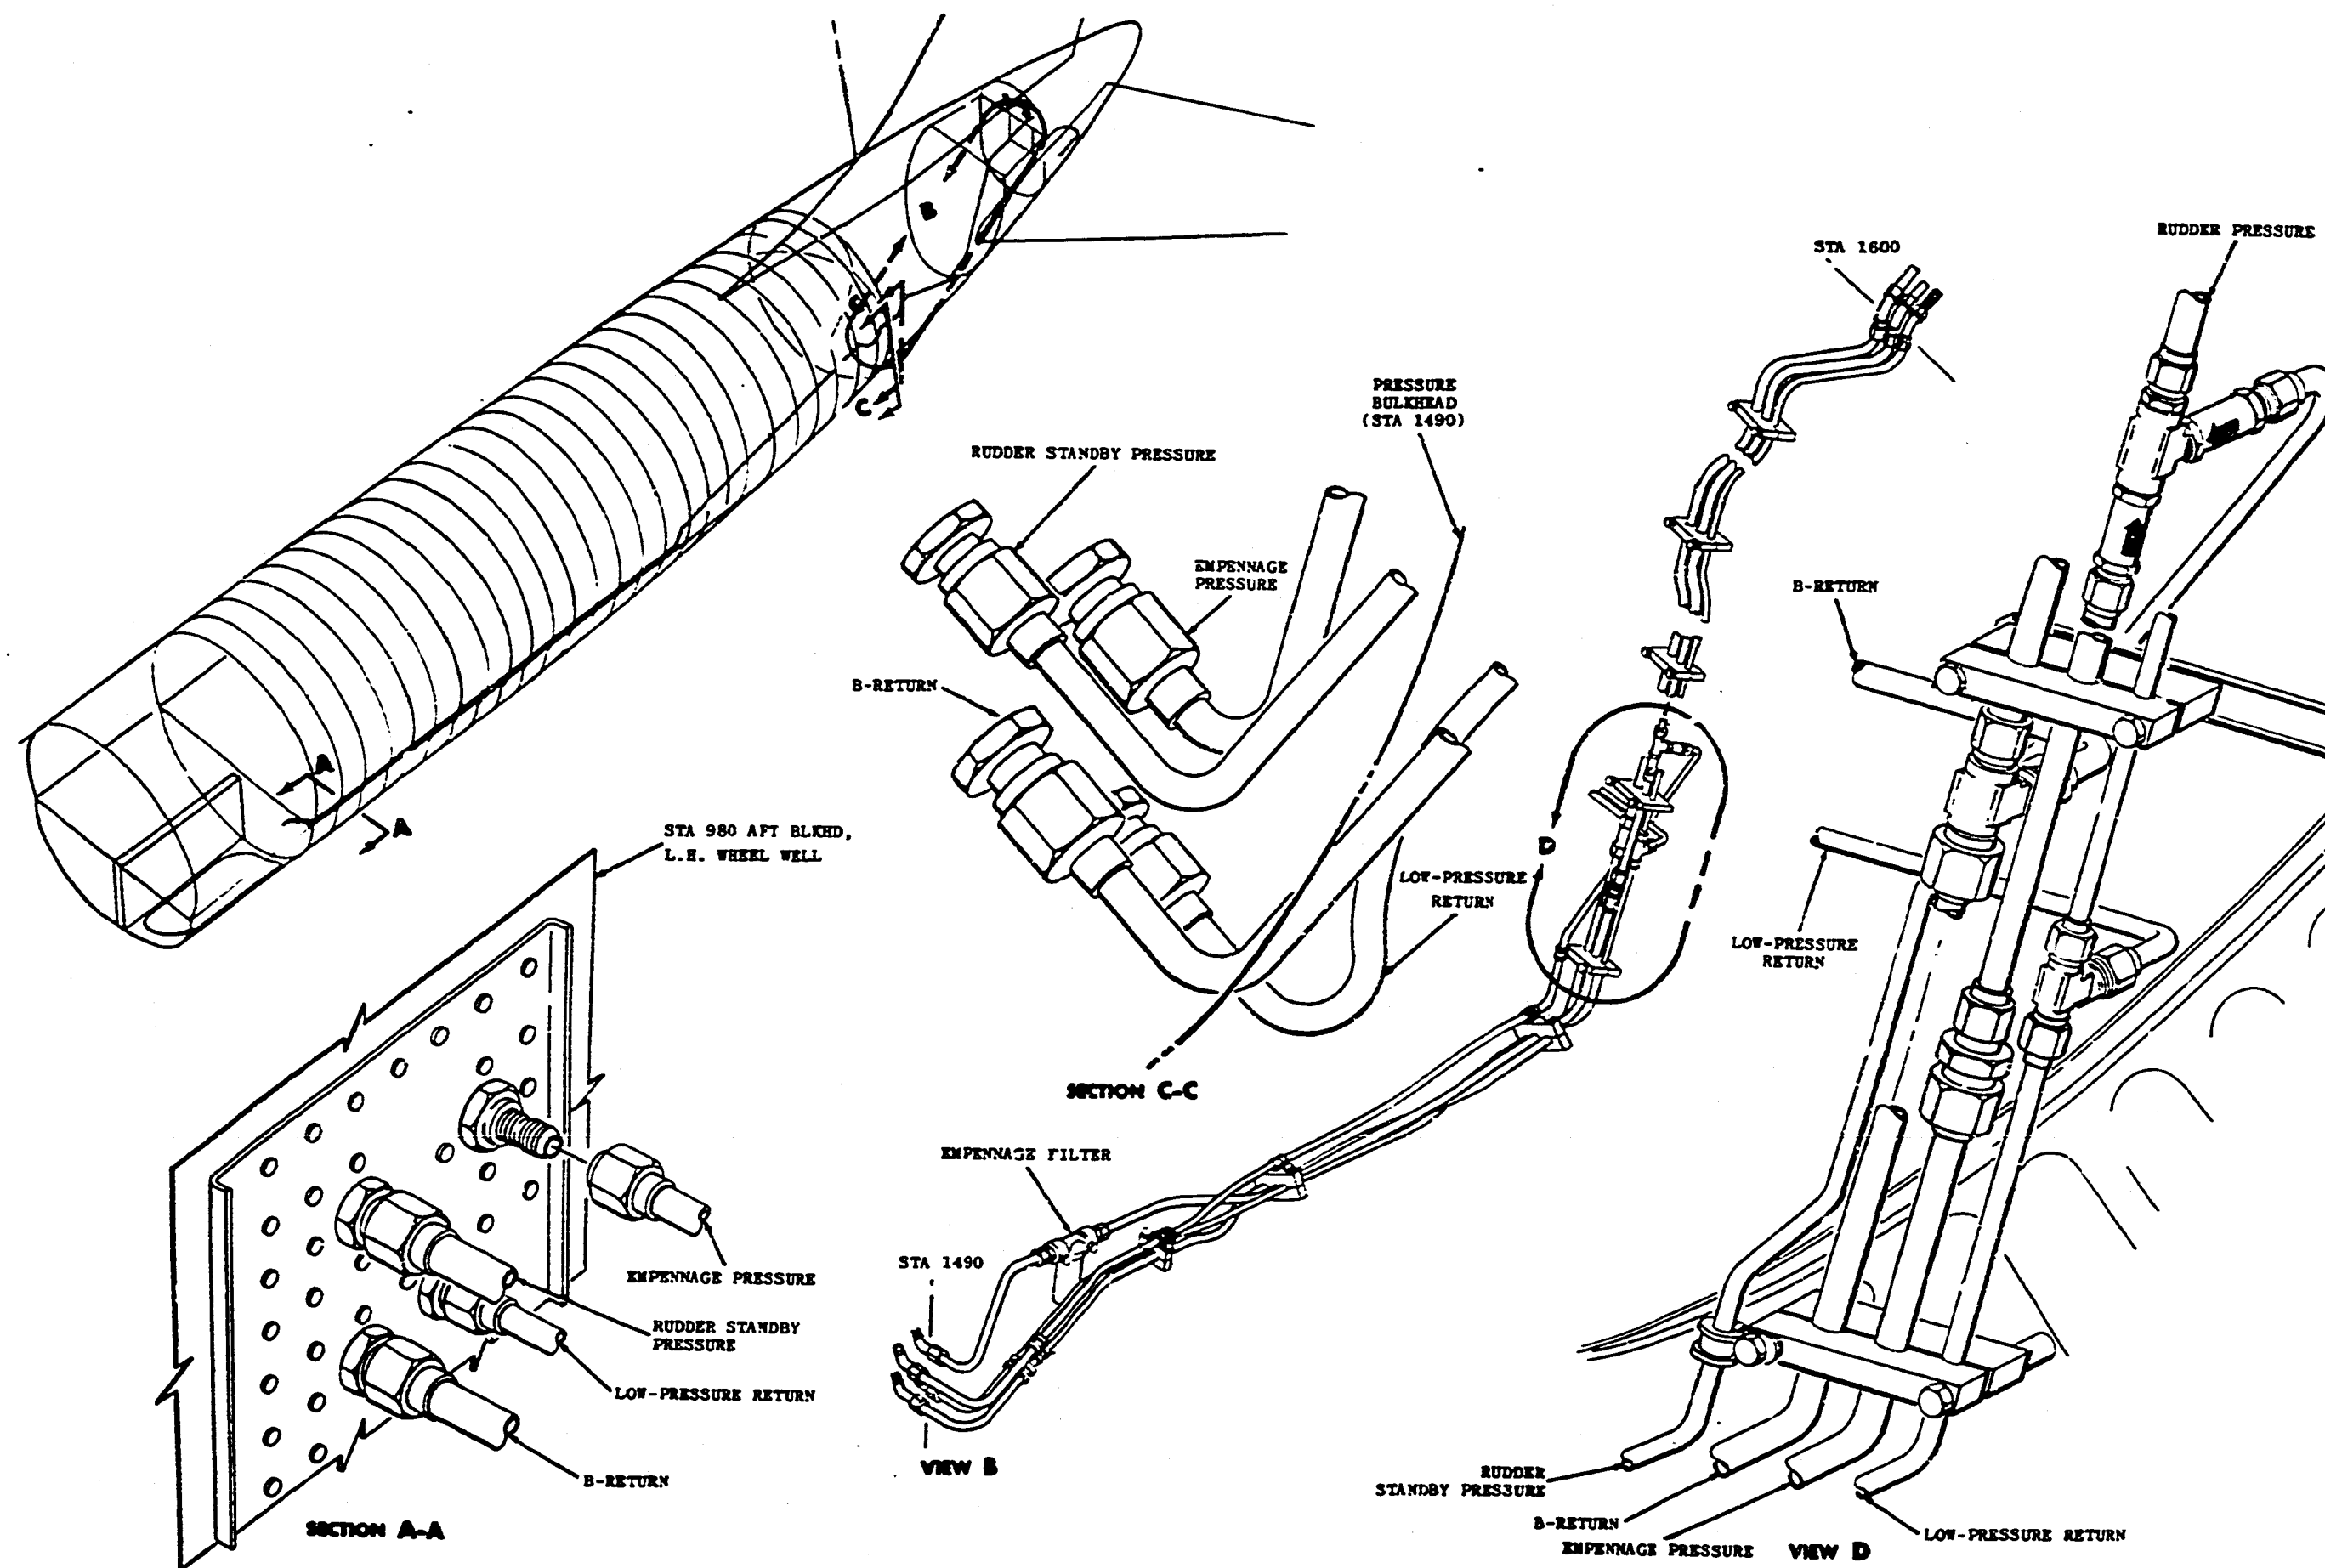

Flushing Procedure Line Connection Locations  
 Figure 627

29-00  
 CODE 1  
 Page 659

H2-5035

Oct 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

B. Spoiler Supply System Filter to Units (See Figure 628.)

- (1) Disconnect pressure line from check valve in spoiler system filter. Connect line to test stand pressure hose.
- (2) Disconnect interconnect pressure line from tee in spoiler system pressure line. Cap tee.
- (3) Following pressure line to next tee, disconnect line which runs forward. Cap tee.
- (4) At pressure bulkhead tee in center web just forward of STA 980 (tee which supplies outboard spoiler pressure to both sides of airplane), disconnect line which runs to right. Cap tee.
- (5) At STA  $X_{rs}$  = approx. 217 on both sides of airplane, disconnect spoiler pressure and return lines from spoiler glands. Place jumpers between these lines on both sides of airplane.
- (6) At tee in return bulkhead tee, located just under pressure bulkhead tee mentioned in Step (4), disconnect both lines which run forward. Cap tee and place jumper across two lines.
- (7) Disconnect return line from check valve in tee at bottom of system pressure relief valve. Connect this line to line disconnected in Step (4) with jumper.
- (8) At spoiler valve, located on right power manifold, disconnect spoiler return line. From same manifold, disconnect spoiler pressure line. Connect these two lines together with jumper.
- (9) Connect jumper line to line which was disconnected in Step (3). In same line at next tee forward, disconnect line which leads down to pressure transmitter and reservoir. Cap tee and connect open line to other end of jumper.
- (10) Disconnect reservoir pressurization line from tee in pressure line. Disconnect pressure line from pressure transmitter. Connect two open lines with jumper, and cap tee.
- (11) Disconnect reservoir pressurization line from bottom of reservoir, and connect line to test stand return hose.
- (12) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (13) Flush circuit for five minutes.
- (14) Depressurize test stand.
- (15) Inspect, clean, and/or replace check valves in the filter, and in bottom of relief valve.

Oct 15/68

29-00  
CODE 1  
Page 661



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (16) Restore all lines and units to original configuration.

C. Outboard Spoiler System

- (1) At STA  $X_{rs}$  = approx. 217, inspect, clean, and/or replace outboard spoiler cylinder and valve assembly, and connecting swivel glands.
- (2) Restore all lines and units to their original configuration, and make any necessary adjustments per Chapter 27.


D. Inboard Spoiler System

- (1) Disconnect extend and retract lines from spoiler control valve, located on right power manifold in right wheel well. Connect extend line to test stand pressure hose. Connect retract line to test stand return hose.
- (2) At STA Y = 935 on right side of the center web, replace restrictor in spoiler retract line with jumper.
- (3) In rear of left wheel well, disconnect extend and retract lines from inboard spoiler cylinder. Place jumper across open lines.
- (4) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (5) Flush circuit for five minutes.
- (6) Depressurize test stand.
- (7) Inspect, clear, and/or replace spoiler control valve, two restrictors, and actuating cylinder.
- (8) Restore all lines and units to original configuration, and make necessary adjustments per Chapter 27.

E. The Interconnect System

- (1) In right wheel well, disconnect interconnect line from tee in spoiler system pressure line, located near spoiler system filter. Connect this line to test stand return hose.
- (2) In left wheel well, disconnect three lines leading into solenoid interconnect valve, mounted on center web. Leave check valve with solenoid valve.
- (3) Connect jumper between line disconnected from check valve and line disconnected from pressure port.
- (4) Disconnect solenoid valve low-pressure return line from tee in empennage low-pressure return line. Connect this line to test stand pressure hose.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

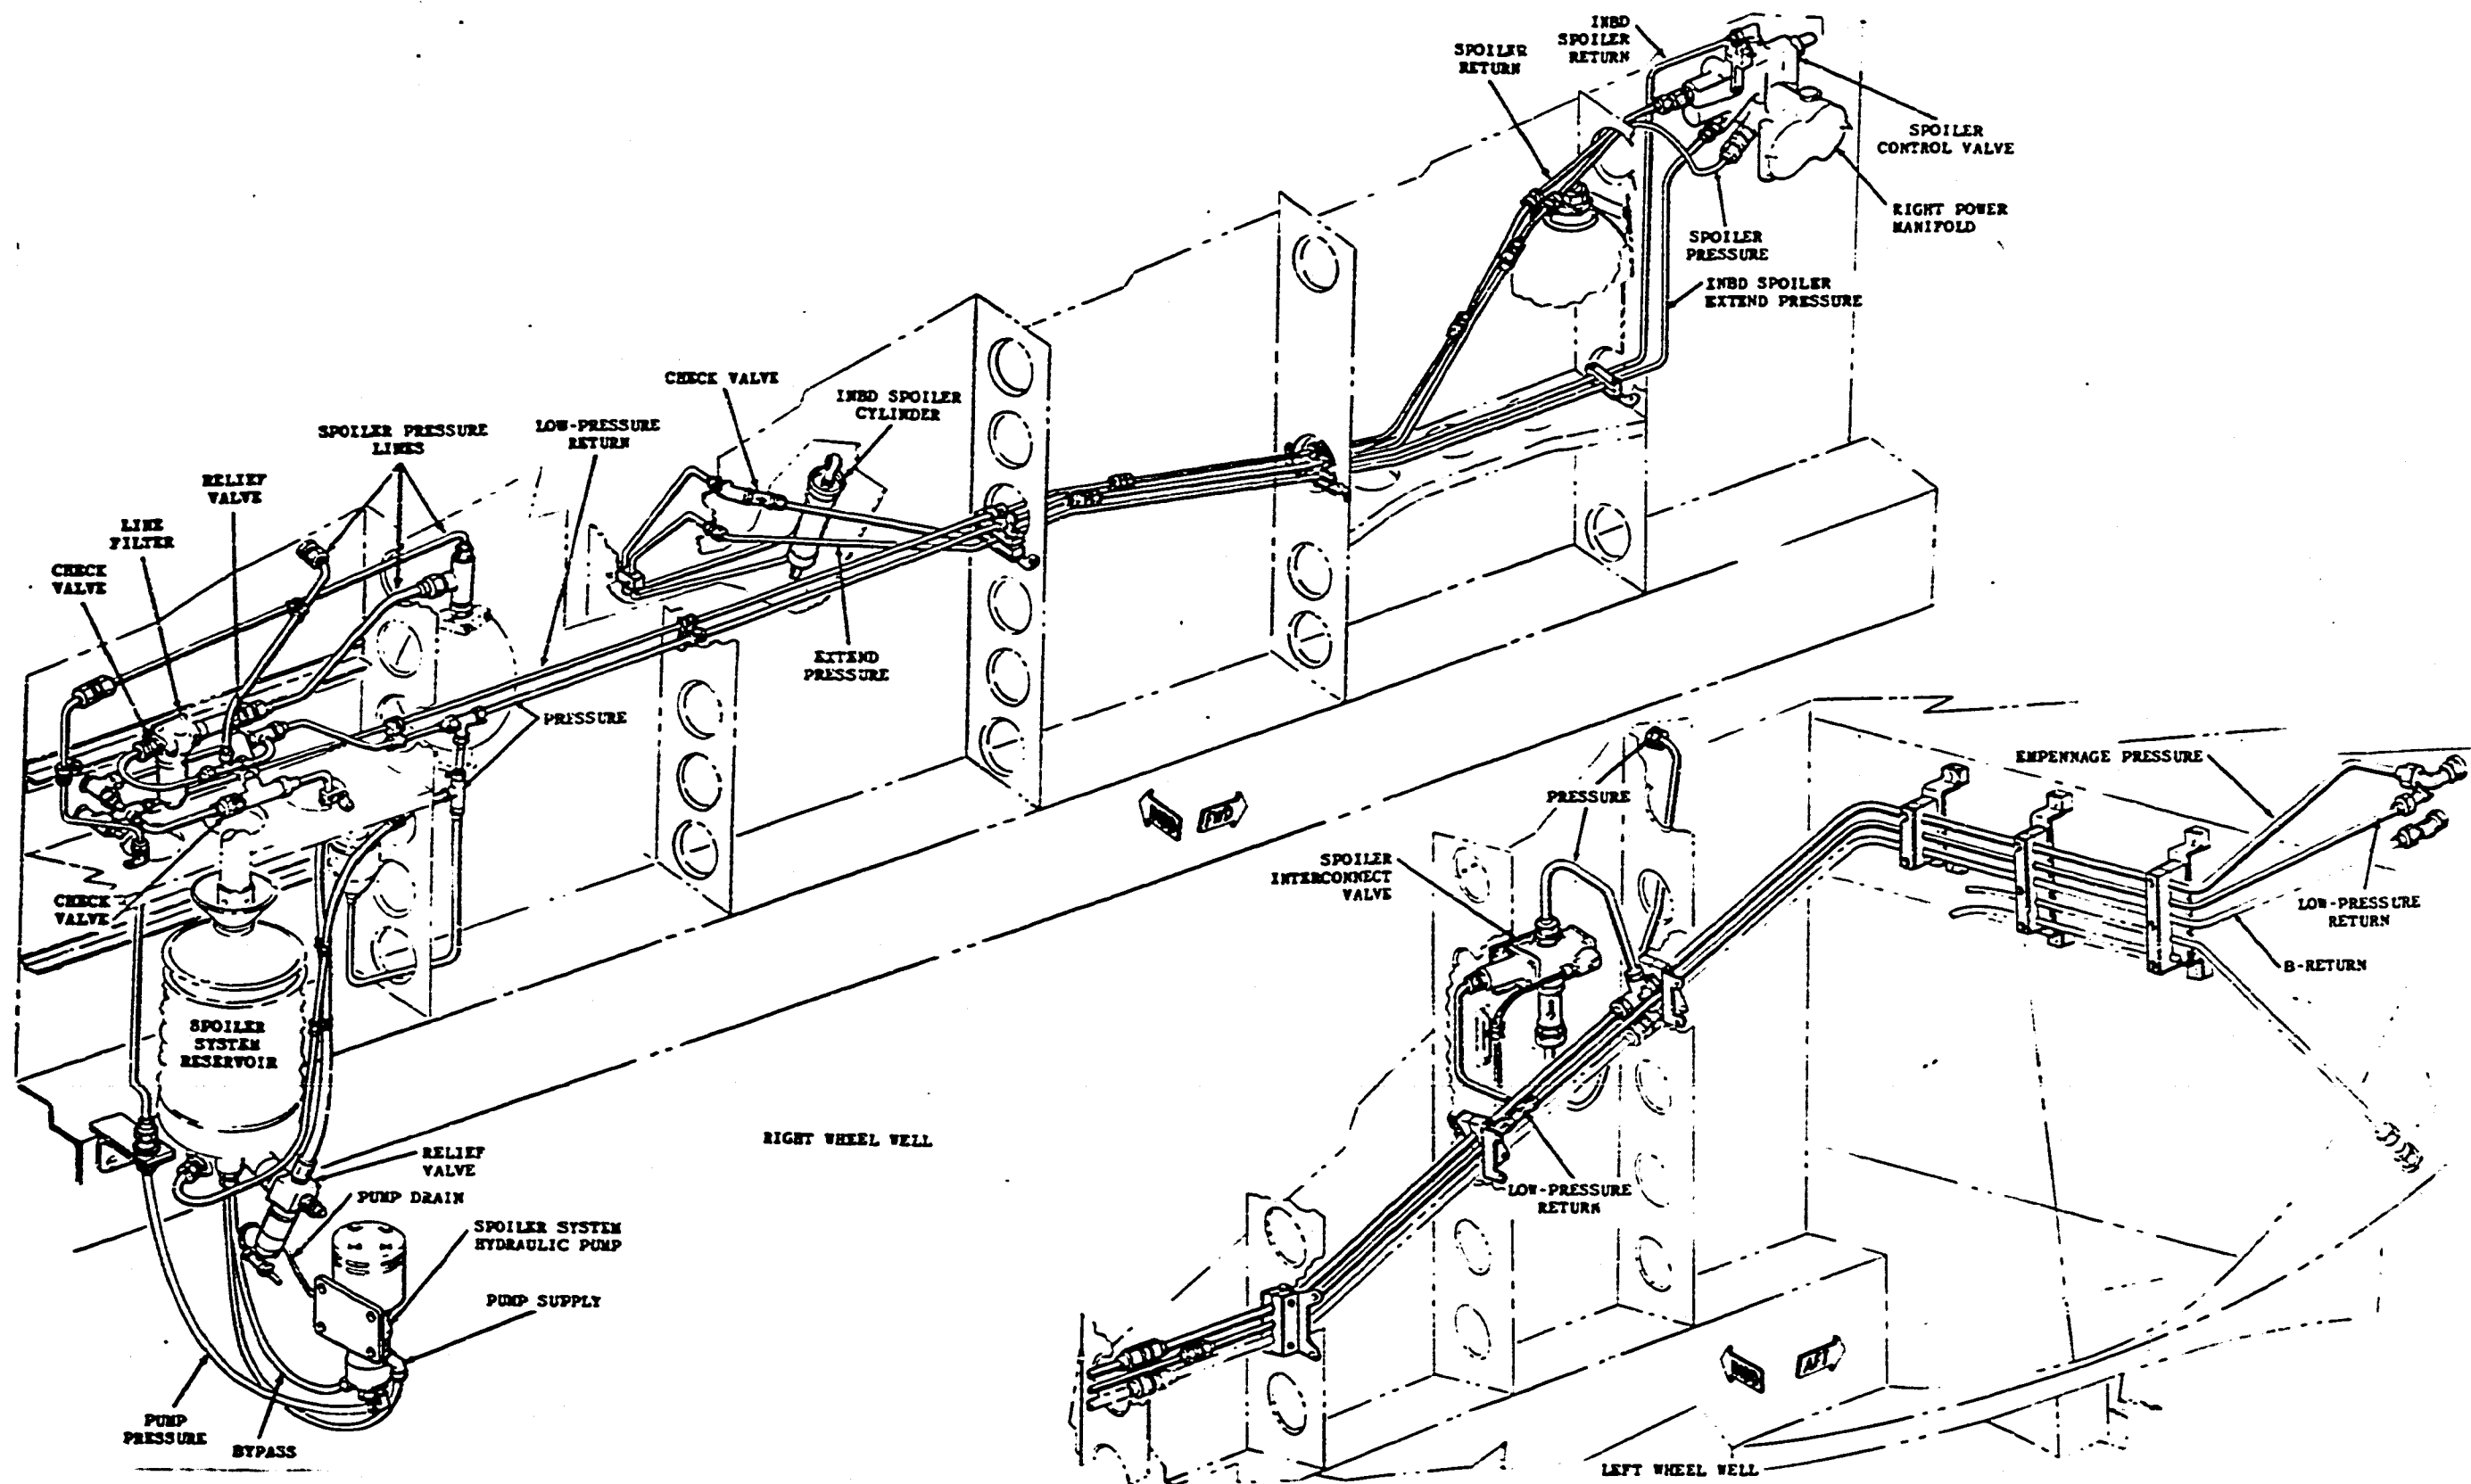

H2-5082


Flushing Procedure Line Connection Locations  
 Figure 628

29-00  
 CODE 1  
 Page 663

Oct 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

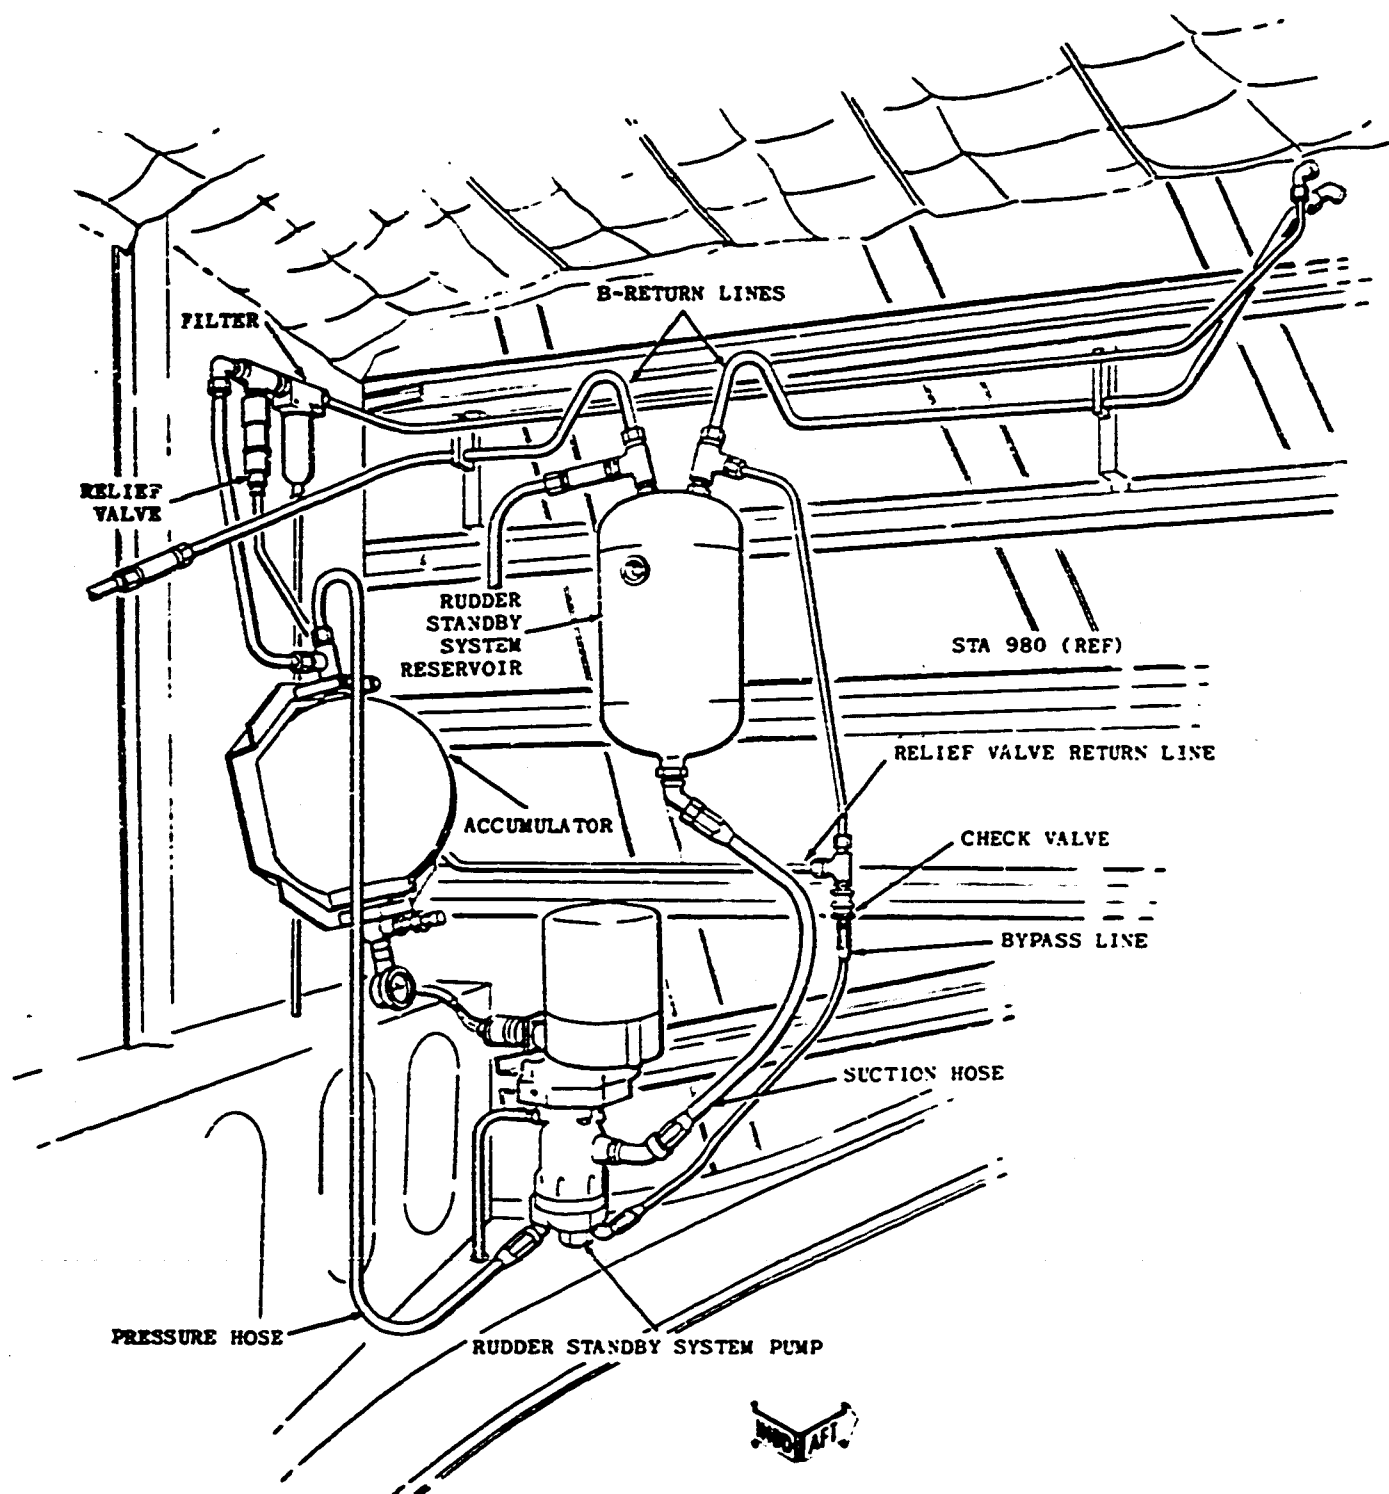

INBOARD CORNER OF LEFT WHEEL WELL

H2-5037

Flushing Procedure Line Connection Locations  
 Figure 629

Oct 15/68

29-00  
 CODE 1  
 Page 665

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Disconnect solenoid valve pressure line from tee in empennage pressure line. Connect this line to disconnected case drain line in solenoid interconnect valve with jumper.
- (6) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (7) Flush circuit for five minutes.
- (8) Depressurize test stand.
- (9) Inspect, clean, and/or replace solenoid interconnect valve, and check valve.
- (10) Restore all lines and units to original configuration.

10. Flush Rudder Standby Hydraulic Power System (See Figure 629.)

A. Rudder Standby Power System To Filter

- (1) In left wheel well just forward of STA 980, disconnect two B-return lines and bypass line from two tees in top of rudder standby system reservoir. Cap both openings in tee that had received bypass line.
- (2) Connect opening in other tee to test stand pressure hose.
- (3) Disconnect three hoses from rudder standby system pump. Connect suction hose to pressure hose.
- (4) Disconnect 1/4-inch pressure line from tee in top of rudder standby system accumulator, and disconnect line in bottom of relief valve. Install jumper between these two lines.
- (5) Disconnect relief valve return line and bypass line from tee fitting (with check valve), located on STA 980. Use bypass hose as jumper between these two lines.
- (6) Connect bypass line, which was disconnected in Step (1), to test stand return hose.
- (7) Pressurize test stand to 1200 psi maximum at 20 gpm flow.
- (8) Flush circuit for five minutes.
- (9) Depressurize test stand.
- (10) Inspect, clean, and/or replace the pump, accumulator, filter, relief valve, and check valve.
- (11) Restore all lines and units to original configuration.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

B. Rudder Standby Power Interconnect Line (Filter To Empennage Normal Power Line)

- (1) In left wheel well, just forward of STA 980, disconnect rudder standby system pressure line from downstream side of filter. Connect this line to test stand pressure hose.
- (2) In aft end of the airplane, disconnect rudder standby pressure line from check valve in tee located in normal rudder pressure line.
- (3) This line may be attached directly to test stand return with long hose, or section of empennage return line may be connected into circuit for use with shorter test stand return hose.
- (4) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (5) Flush circuit for five minutes.
- (6) Depressurize test stand.
- (7) Inspect, clean, and/or replace check valve mentioned in Step (2).
- (8) Restore all lines and units to original configuration.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GENERAL - INSPECTION/CHECK

1. General

- A. The DC8-60 Series airplane is provided with a main, a spoiler, and two auxiliary hydraulic systems. The auxiliary systems consist of the main auxiliary system, and the rudder standby system. All of these systems are subject to contamination which must be removed.
- B. Contamination in the hydraulic sense may consist of foreign particles (metal, rubber, plastic, dirt, etc.), fluids other than hydraulic fluid, and damaged hydraulic fluid, which because of excessive heat and friction, no longer meets the minimum requirements.
- C. The system filters ordinarily remove the minor contamination associated with normal wear. These filter elements are replaced at periodic inspections.
- D. Contamination which requires a system or subsystem to be flushed is usually the result of:
  - (1) A damaged unit such as a pump failure.
  - (2) A malfunctioning unit or system, the nature of which lends suspicion to possible contaminated fluid.
  - (3) Overheated or diluted fluid, which does not meet minimum specification requirements.
- E. The presence of contamination may be determined by:
  - (1) Checking the filter elements and bowls.
  - (2) Checking the magnetic drain plugs in the reservoirs and filters.
  - (3) Checking the fluid in the reservoirs.
  - (4) Taking samples of the fluid at various locations.
  - (5) Checking the individual components.

2. Isolation

- A. The hydraulic subsystems may be isolated as follows:
  - (1) The main hydraulic power system is physically separated from the lateral control spoiler system.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The lateral control spoiler system pump and supply is separated from the remainder of the lateral control system by a filter.
- (3) The main hydraulic power system engine-driven hydraulic pump pressure lines are separated from the main system by the dual filter and relief valve assembly.
- (4) The auxiliary hydraulic pump is separated from the main system by the auxiliary hydraulic pump filter.
- (5) The aileron control valves and actuating cylinders are isolated from the main hydraulic power system by the aileron line filters.
- (6) The empennage hydraulic power system is separated from the main hydraulic power system by the rudder filter.
- (7) The filter in the main hydraulic system reservoir filters all returning fluid.
- (8) A filter is installed in each engine-driven hydraulic pump low-pressure (case drain) return line to separate the pump return fluid from the main hydraulic system fluid and afford additional filtration prior to entering the reservoir filter.
- (9) The rudder standby hydraulic system is separated from the main hydraulic power system by a filter and interconnect line.
- (10) In addition to the filter divisions, the subsystems have been broken down into distribution and utility runs for ease of flushing and for isolation in specific cases where a known contamination source exists.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY) -

INSPECTION/CHECK

1. General

- A. The purpose of this section is to provide a logical guide for removing the contaminants (foreign particles) from the fluid, units, and lines of the main hydraulic power system by flushing the system with clean hydraulic fluid.
- B. This procedure may be deviated from as dictated by the individual circumstances. Hydraulic circuits that are easy to locate and follow, have been intentionally omitted from this procedure for the sake of brevity.
- C. The removal of overheated or diluted fluid would follow generally the same procedure with the exception that the removed contaminated fluid would be caught in containers rather than recirculated through the hydraulic test stand.
- D. Before any flushing procedures are performed, personnel should read and thoroughly understand 29-00, Inspection/Check.

2. Tools and Equipment Required

- A. One hydraulic test stand capable of operating with Skydrol hydraulic fluid, and fitted with 10-micron or smaller filter.
- B. Pressure and return hoses, jumper lines, and fittings, as required by the following procedures.

3. Flush Main Hydraulic Power System (See Figure 601.)



- A. Pressure Lines (Engine-Driven Pumps to Dual Filter and Relief Valve)
  - (1) Disconnect engine-driven hydraulic pump pressure hose from pump in No. 3 pylon.
  - (2) Disconnect pressure line from right side of dual filter and relief valve, located in left main gear wheel well.
  - (3) At No. 3 pylon, replace check valve, located between engine pump hose and pressure line, with bulkhead fitting.
  - (4) Connect engine pump pressure hose to test stand pressure hose, and connect disconnected line at dual filter to test stand return hose.
  - (5) Pressurize test stand to 200 psi at 5 to 20 gpm fluid flow.

Feb 1/69

29-01  
CODE 1  
Page 601



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

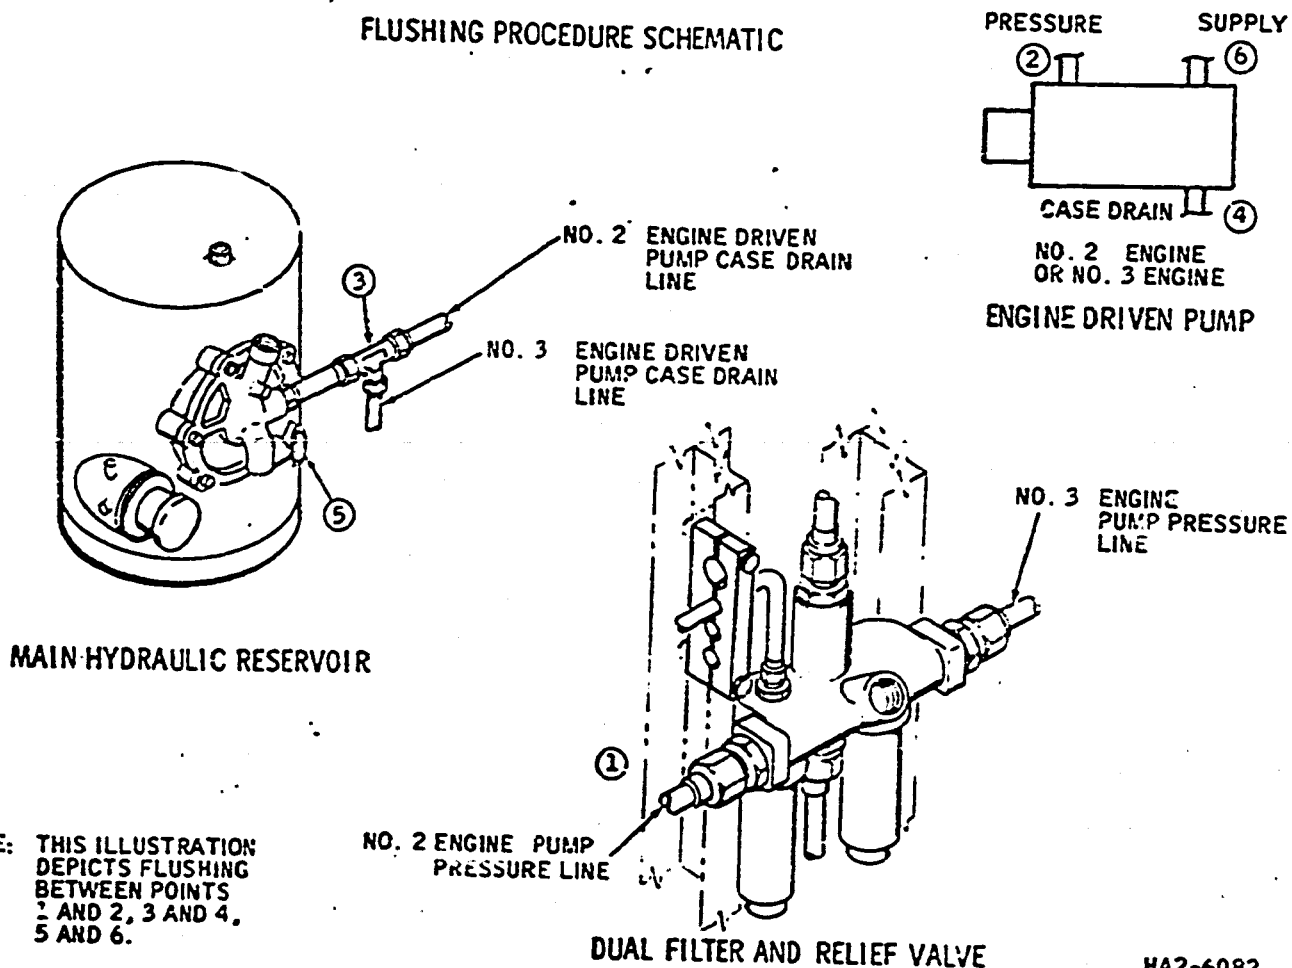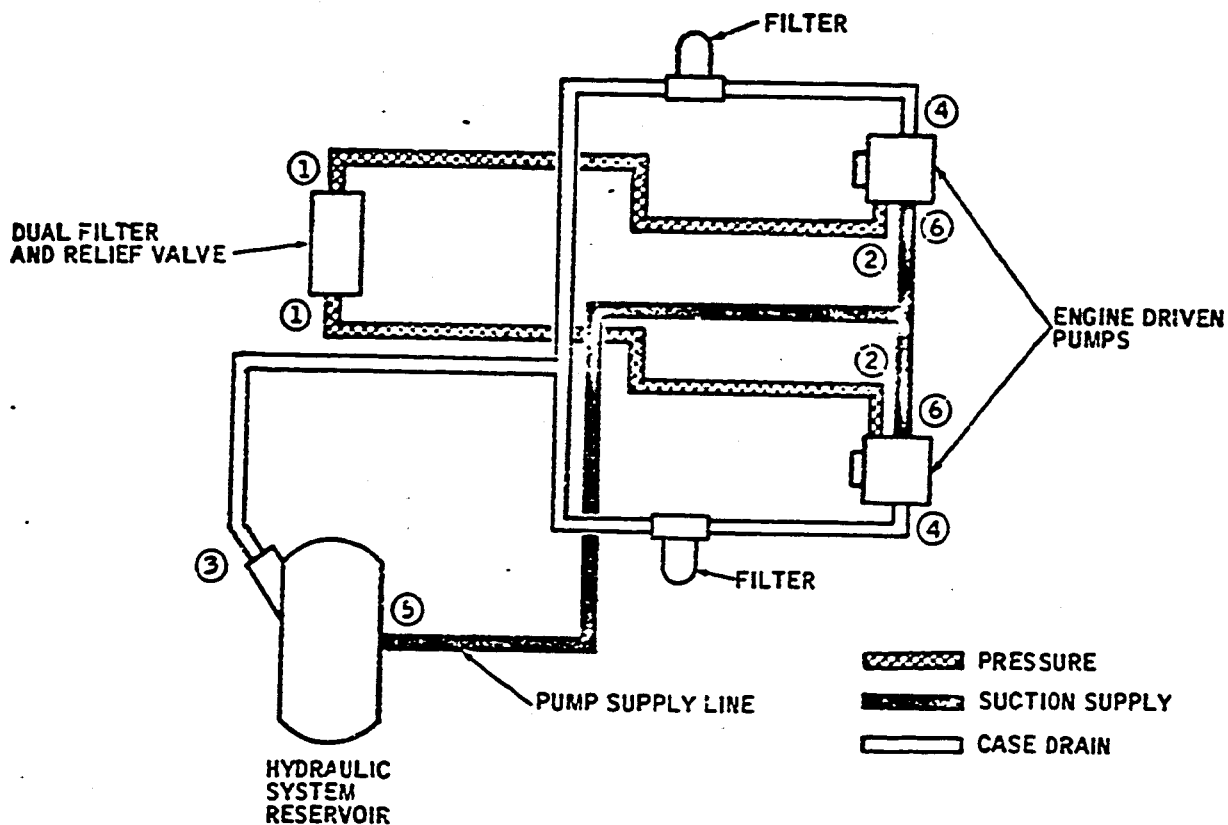

NOTE: THIS ILLUSTRATION  
 DEPICTS FLUSHING  
 BETWEEN POINTS  
 1 AND 2, 3 AND 4,  
 5 AND 6.

NO. 2 ENGINE PUMP  
 PRESSURE LINE

DUAL FILTER AND RELIEF VALVE

HA2-6082

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Flush circuit for five minutes.
- (7) Depressurize test stand.
- (8) Repeat steps (1 through 7) for pressure line between dual filter and No. 2 engine pump.
- (9) Remove dual filter and relief valve filter elements, clean filter bowls, and install clean filter elements (see 29-10-17).
- (10) Inspect, clean, and/or replace check valves.
- (11) Restore all lines and units to original configuration.

**B. Case Drain Lines**

- (1) Disconnect case drain hose from engine-driven pump in No. 3 pylon. Connect hose to hydraulic test stand pressure hose.
- (2) At No. 3 pylon, replace check valve between engine-driven pump hose and case drain line with bulkhead fitting.
- (3) At tee fitting, located in low-pressure return line adjacent to reservoir return port (see Figure 601), disconnect No. 2 engine pump case drain line. Cap tee fitting.
- (4) Disconnect case drain line from low-pressure return port in reservoir, and connect this line to test stand return hose. Cap reservoir port.
- (5) Disconnect lines from both sides of case drain filter and check valve, and jumper these return lines.
- (6) Pressurize test stand to 200 psi maximum, at 20 gpm flow.
- (7) Flush circuit for five minutes.
- (8) Depressurize test stand.
- (9) Repeat steps (1 and 2) for engine pump in No. 2 pylon.
- (10) Connect No. 2 engine pump case drain line, which was disconnected in step (3), to hydraulic test stand return hose.
- (11) Repeat step (5) for No. 2 engine case drain filter and check valve.
- (12) Repeat steps (6 through 8) for No. 2 engine pump case drain lines.
- (13) Clean filter bowls and replace filter elements in case drain filters, located on rear spar (see 29-10-15).

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (14) Inspect, clean, and/or replace check valves.
- (15) Restore all lines and units to original configuration.


C. Reservoir and Suction System

- (1) Do not disconnect or remove large reducer tee fitting and connecting supply lines from reservoir.
- (2) Connect hydraulic test stand return hose to airplane ground service supply connection (see Figure 602).
- (3) Drain reservoir, remove reservoir filter element (see 29-10-2). Clean out reservoir.
- (4) Temporarily install reservoir filter cover plate with all return ports plugged.
- (5) Disconnect aspirator line at reservoir end. Cap reservoir end and cap reservoir port.
- (6) Disconnect suction hose from No. 2 engine-driven pump and connect test stand pressure hose to suction hose.
- (7) Open fire shutoff valve on No. 2 engine.
- (8) Disconnect and cap outboard flap return lines and port connectors where they connect to suction lines on rear spar, aft of No. 2 and No. 3 pylons (see Figure 602).
- (9) Pressurize test stand to 45 psi at 20 gpm flow.
- (10) Flush from engine pump suction hose to reservoir for five minutes.

**CAUTION:** WHEN FLUSHING THE SUPPLY LINES, MONITOR THE RESERVOIR FLUID LEVEL AND THE AIR PRESSURE GAGE ON TOP OF THE RESERVOIR AIR BLEED VALVE. THE FLUID LEVEL MUST BE VISIBLE IN THE SIGHT GAGE, AND THE PRESSURE MUST NOT EXCEED 45 PSI TO PREVENT DAMAGE TO THE RESERVOIR.

- (11) Depressurize test stand.
- (12) Close No. 2 and No. 3 engine fire shutoff valve.
- (13) Remove test stand pressure hose from No. 2 engine pump supply line, and connect No. 3 engine-driven pump supply line. Open No. 3 engine fire shutoff valve.
- (14) Repeat steps (9 through 11).
- (15) Close No. 3 engine fire shutoff valve and disconnect test stand from engine-driven pump suction supply hose.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

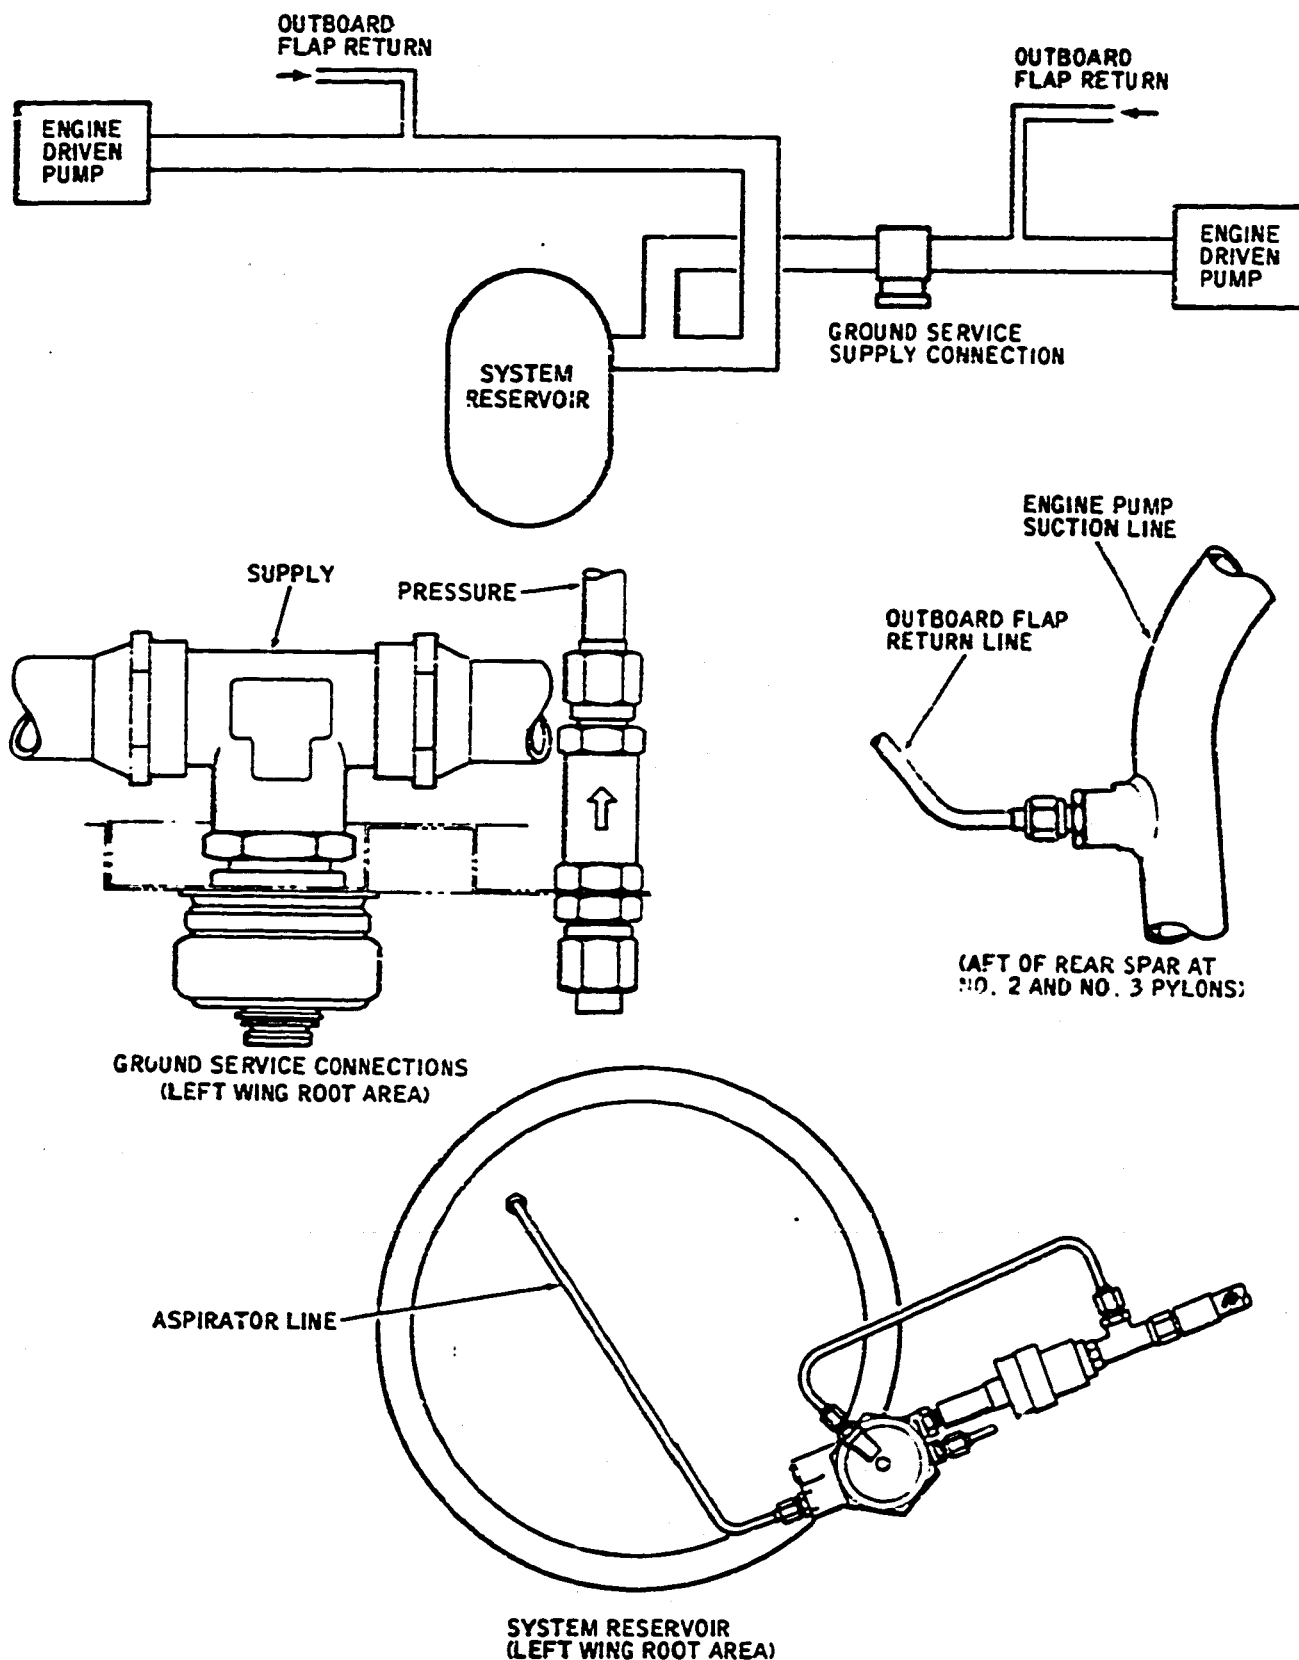

Flushing Procedure Line Connection Locations  
 Figure 602

Feb 1/69

HA2-6084

29-01  
 CODE 1  
 Page 605

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (16) Uncap aspirator line and reservoir aspirator port. Connect aspirator line to reservoir.
- (17) Uncap outboard flap return lines and return line ports in pump suction lines and connect flap return lines to suction lines.
- (18) Flush main hydraulic reservoir, air chamber, and associated lines as follows:
  - (a) Disconnect line which runs from air chamber to reservoir air relief valve, located downstream of air bleed valve in left wheel well (see Figure 603).
  - (b) Connect this line to test stand pressure hose.
  - (c) At same location, disconnect vent line which runs to tee fitting in reservoir filler neck. Cap line.
  - (d) At filler neck, disconnect both vent lines and connect together with jumper line.
  - (e) At tee in filler line, disconnect line which runs to high standpipe port at bottom of main reservoir (see Figure 604). Cap tee fitting and connect disconnected line to test stand return hose.
  - (f) Pressurize test stand to 45 psi maximum at 20 gpm flow.
  - (g) Flush circuit for five minutes.
- (19) Depressurize test stand.
- (20) Disconnect test stand pressure hose from overboard line and cap this line. Connect test stand pressure hose to vent line that was capped in step (18, c).
- (21) Repeat steps (18, f and g).
- (22) Depressurize test stand, drain and clean out reservoir. Install new reservoir filter element (see 29-10-2).
- (23) Restore all lines and units to original configuration.

D. Auxiliary Hydraulic System Alternate Reservoir

NOTE: The auxiliary pump alternate reservoir may be contaminated by the wing flap return line, the auxiliary pump bypass line, or the low-pressure return lines that tie into the wing flap lines.

- (1) Disconnect wing flap return line from tee fitting upstream of low pressure return line (see Figure 604). Cap tee.
- (2) Connect wing flap return line to test stand pressure hose.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

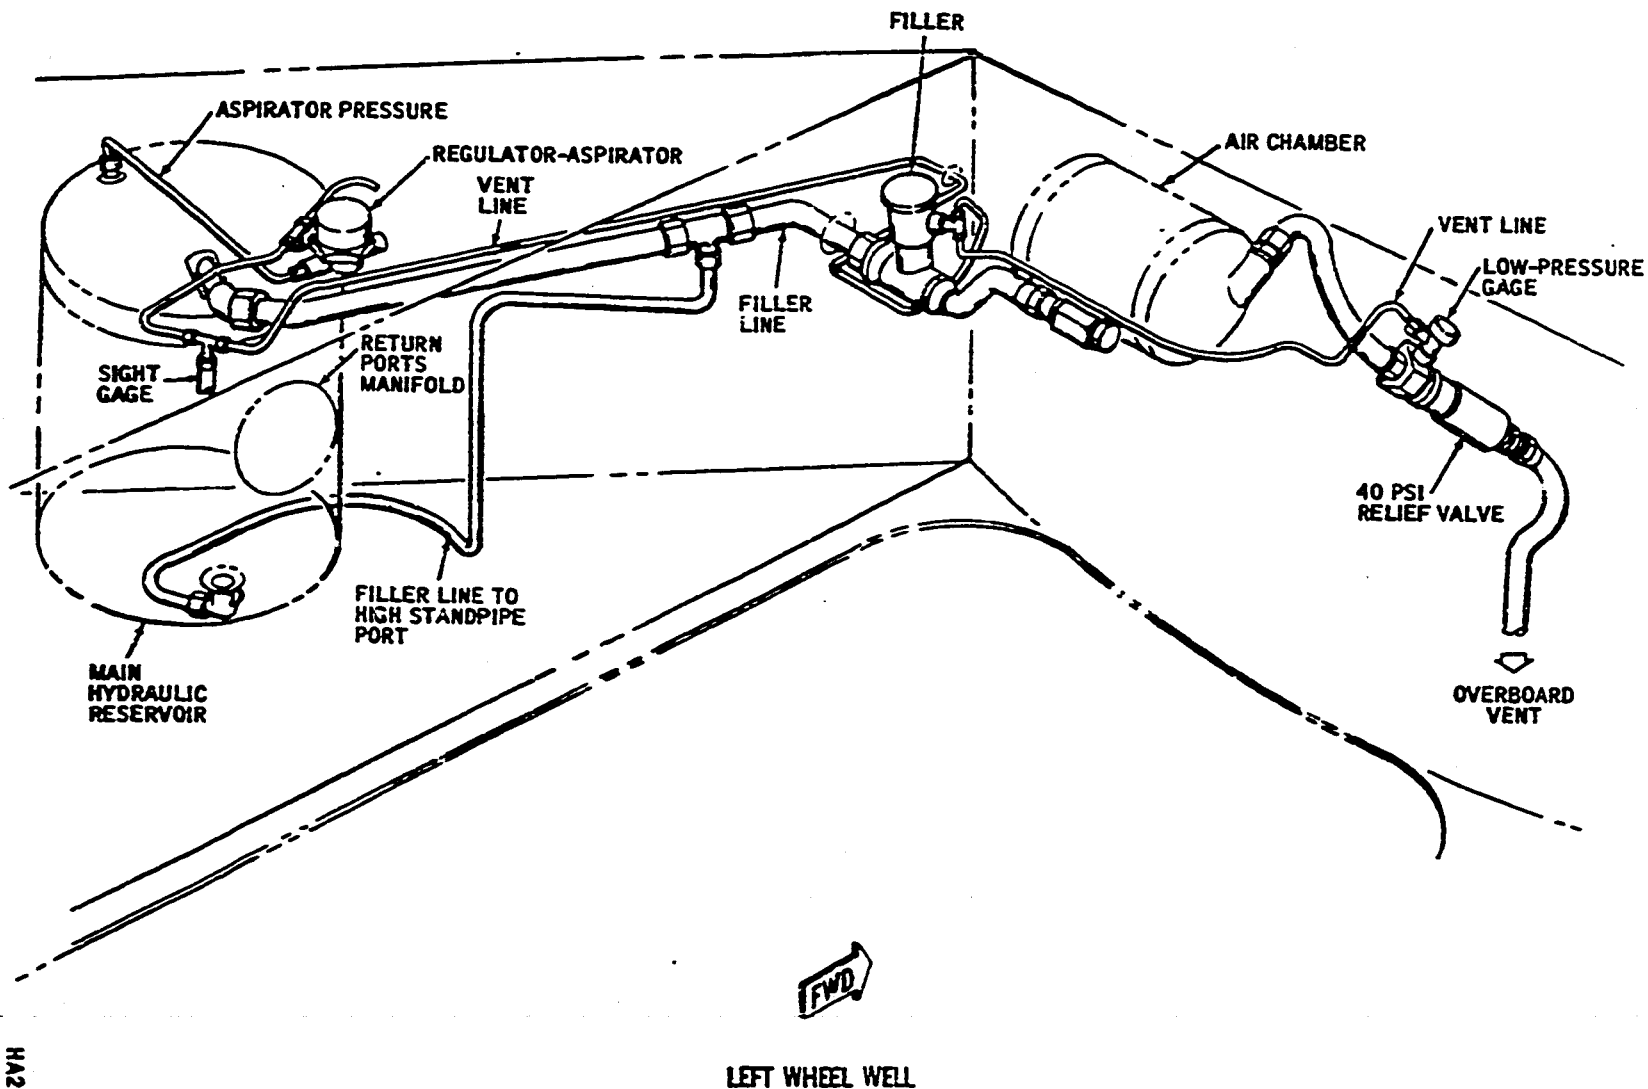

Flushing Procedure Connection Locations  
 Figure 603


Feb 1/69

29-01  
 CODE 1  
 Page 607



Printed in U.S.A.

HA2-6087

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

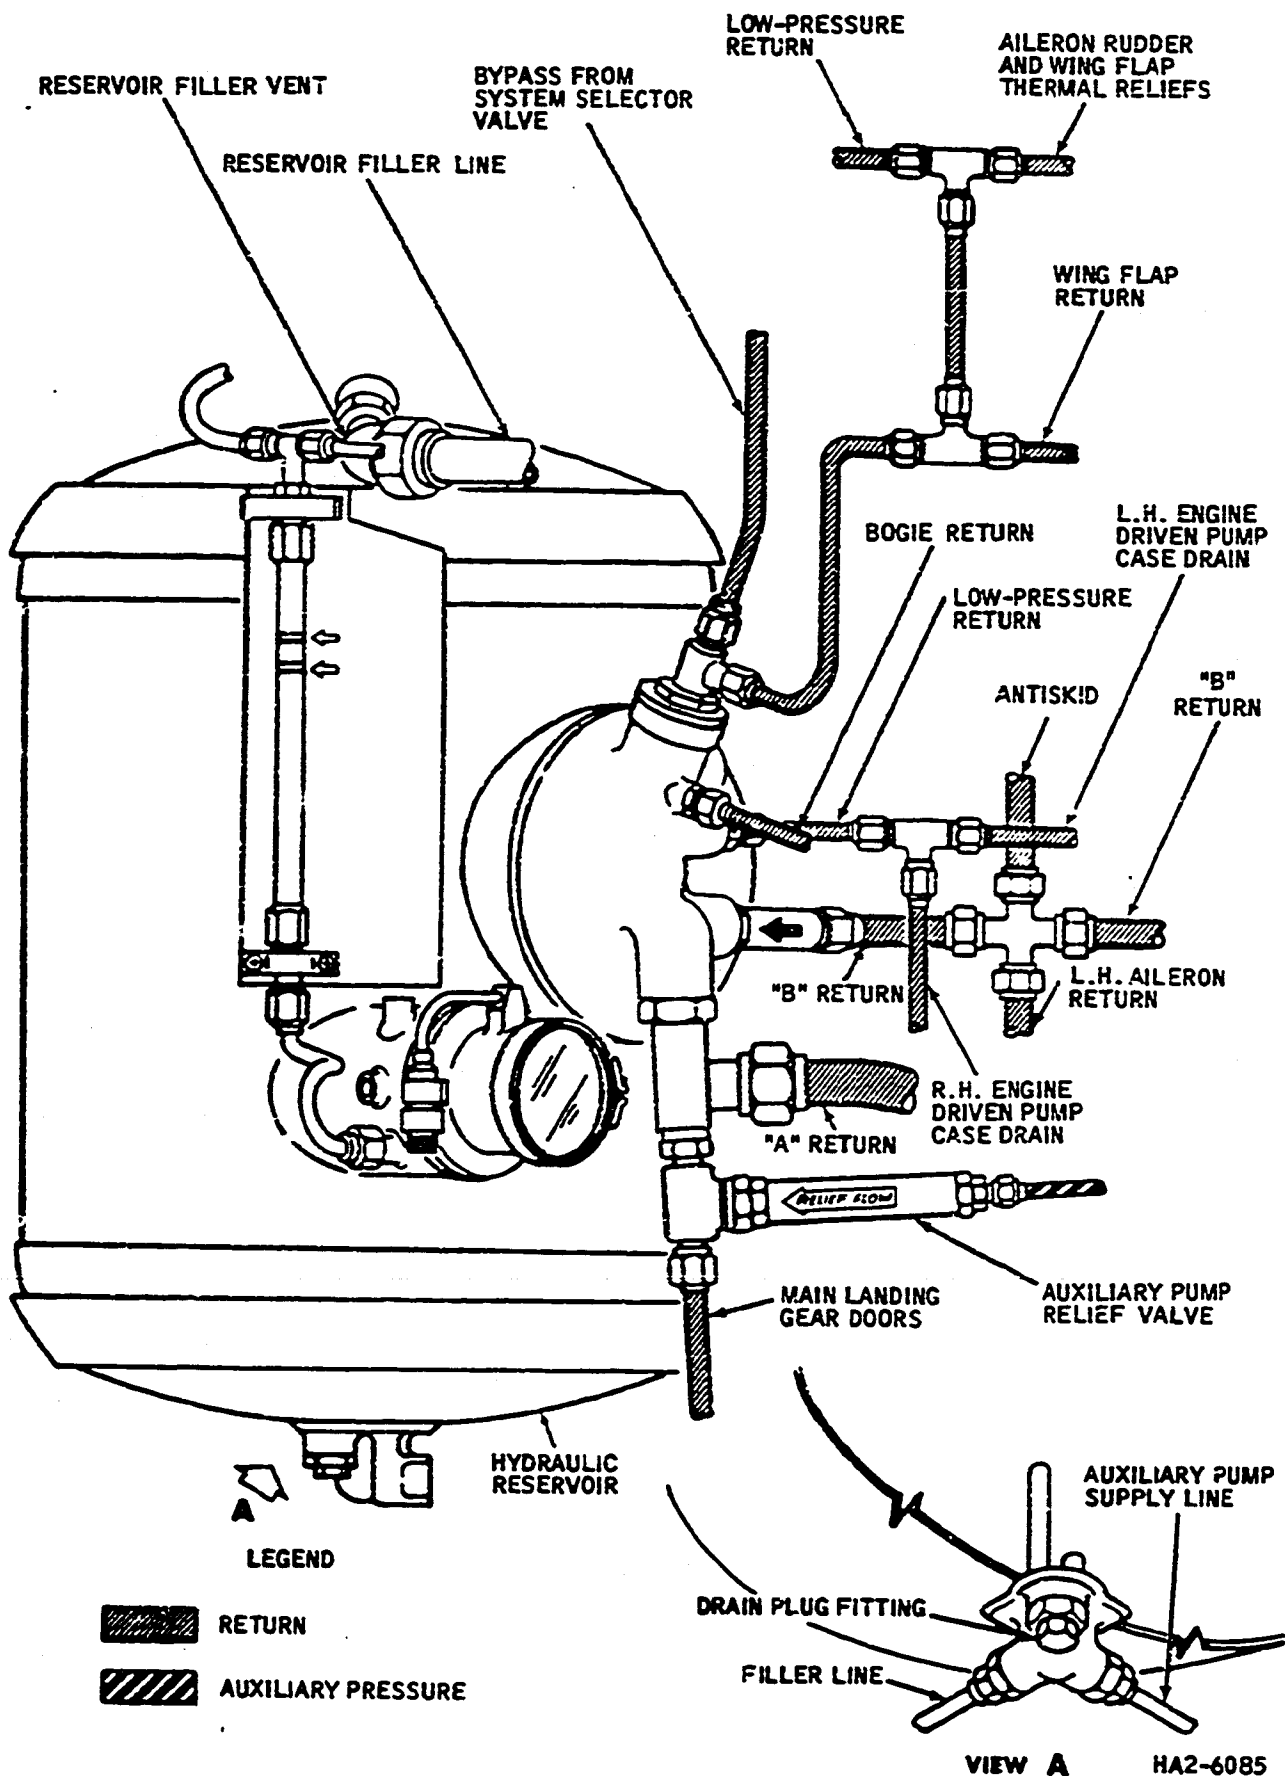

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

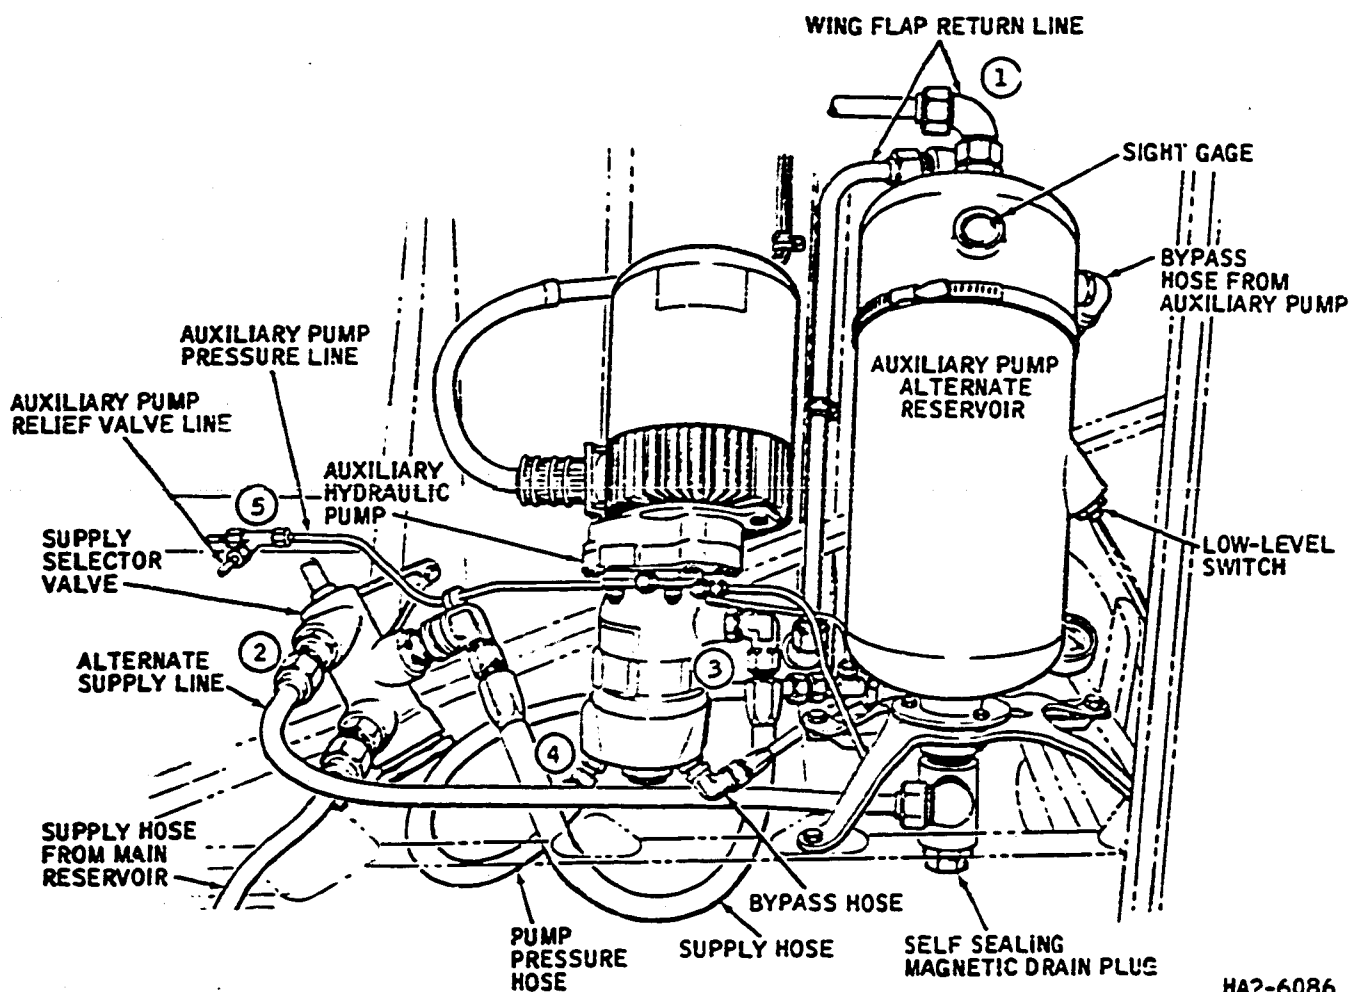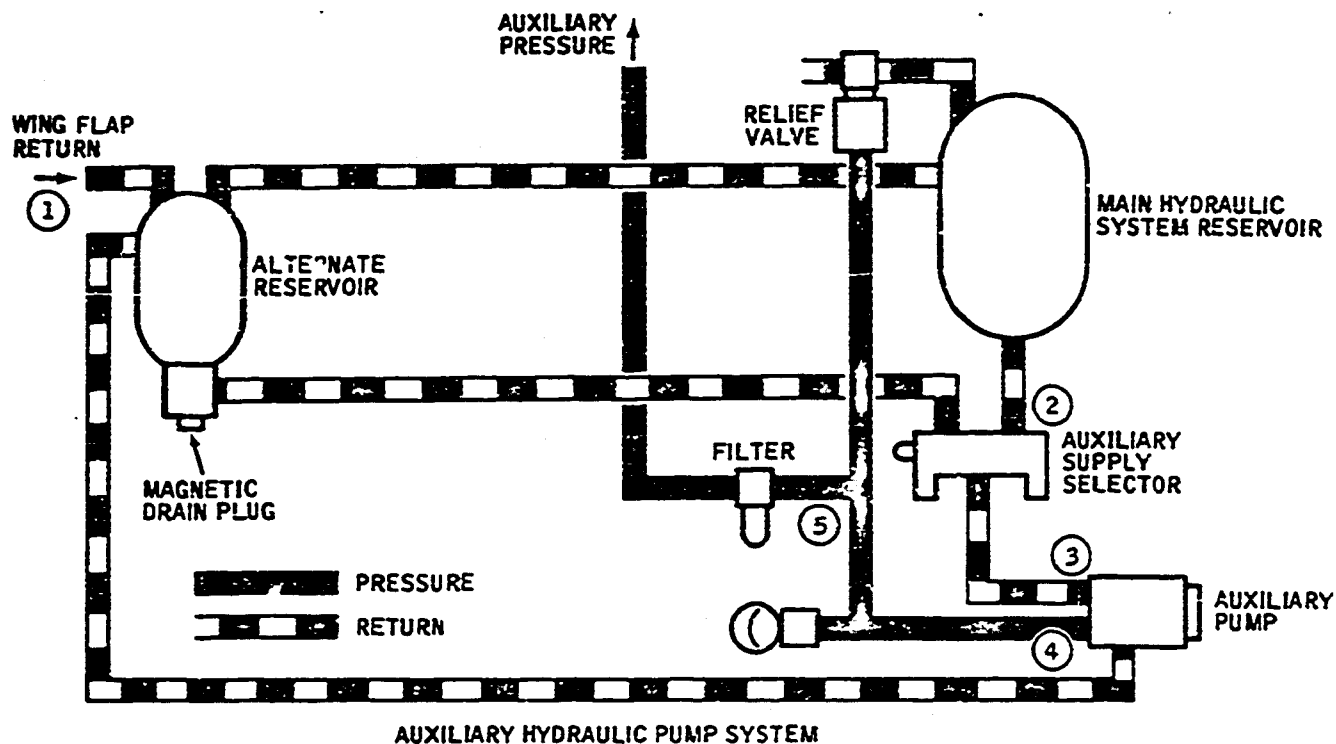

HA2-6086

Flushing Procedure Line Connection Locations  
 Figure 605

29-01  
 CODE 1  
 Page 609

Feb 1/69



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Disconnect alternate supply line from supply selector valve. Connect line to test stand return hose (see Figure 605).
- (4) Pressurize test stand to 100 psi maximum at 20 gpm flow.
- (5) Flush circuit for five minutes.
- (6) Depressurize test stand, and drain alternate reservoir (see 29-00, Maintenance Practices).
- (7) Restore all lines to original configuration.

E. Auxiliary Hydraulic Pump System (See Figures 604 and 605.)

- (1) Disconnect auxiliary pump supply line from low standpipe port in bottom of main reservoir. Cap reservoir port, and connect line to test stand pressure hose.
- (2) Place hydraulic system selector control lever in general system (normal) position.
- (3) Disconnect auxiliary pump supply and pressure hoses from pump. Connect these two lines together.
- (4) Disconnect auxiliary pump pressure line, and relief valve line from tee fitting located adjacent to auxiliary supply selector valve. Connect these lines together.
- (5) Disconnect auxiliary pump relief valve inlet line from relief valve, located near A-return line of main reservoir. Connect line to test stand return hose.
- (6) Pressurize test stand to 100 psi maximum at 20 gpm flow.
- (7) Flush circuit for five minutes.
- (8) Depressurize test stand.
- (9) Disconnect test stand pressure hose from auxiliary pump supply hose, and connect to supply selector valve alternate supply port.
- (10) Place hydraulic system selector control lever in No. 3 position, and repeat steps (6 through 8).
- (11) Remove auxiliary hydraulic pump case drain hose. Clean, and/or replace.
- (12) Remove auxiliary pump filter element, clean filter bowl. Install clean filter element (see 29-00-5).
- (13) Restore all lines and units to original configuration.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN HYDRAULIC POWER SYSTEM (NORMAL AUXILIARY) - --

INSPECTION/CHECK

1. General

- A. The purpose of this section is to provide a logical guide for removing the contaminants (foreign particles) from the fluid, units, and lines of the main hydraulic power system by flushing the system with clean hydraulic fluid.
- B. This procedure may be deviated from as dictated by the individual circumstances. Hydraulic circuits that are easy to locate and follow, have been intentionally omitted from this procedure for the sake of brevity.
- C. The removal of overheated or diluted fluid would follow generally the same procedure with the exception that the removed contaminated fluid would be caught in containers rather than recirculated through the hydraulic test stand.
- D. Before any flushing procedures are performed, personnel should read and thoroughly understand 29-00, Inspection/Check.


2. Tools and Equipment Required

- A. One hydraulic test stand capable of operating with Skydrol hydraulic fluid, and fitted with 10-micron or smaller filter.
- B. Pressure and return hoses, jumper lines, and fittings, as required by the following procedures.



3. Flush Main Hydraulic Power System (See Figure 601.)

- A. Pressure Lines (Engine-Driven Pumps to Dual Filter and Relief Valve)
  - (1) Disconnect engine-driven hydraulic pump pressure hose from pump in No. 3 pylon.
  - (2) Disconnect pressure line from right side of dual filter and relief valve, located in left main gear wheel well.
  - (3) At No. 3 pylon, replace check valve, located between engine pump hose and pressure line, with bulkhead fitting.
  - (4) Connect engine pump pressure hose to test stand pressure hose, and connect disconnected line at dual filter to test stand return hose.
  - (5) Pressurize test stand to 200 psi at 5 to 20 gpm fluid flow.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

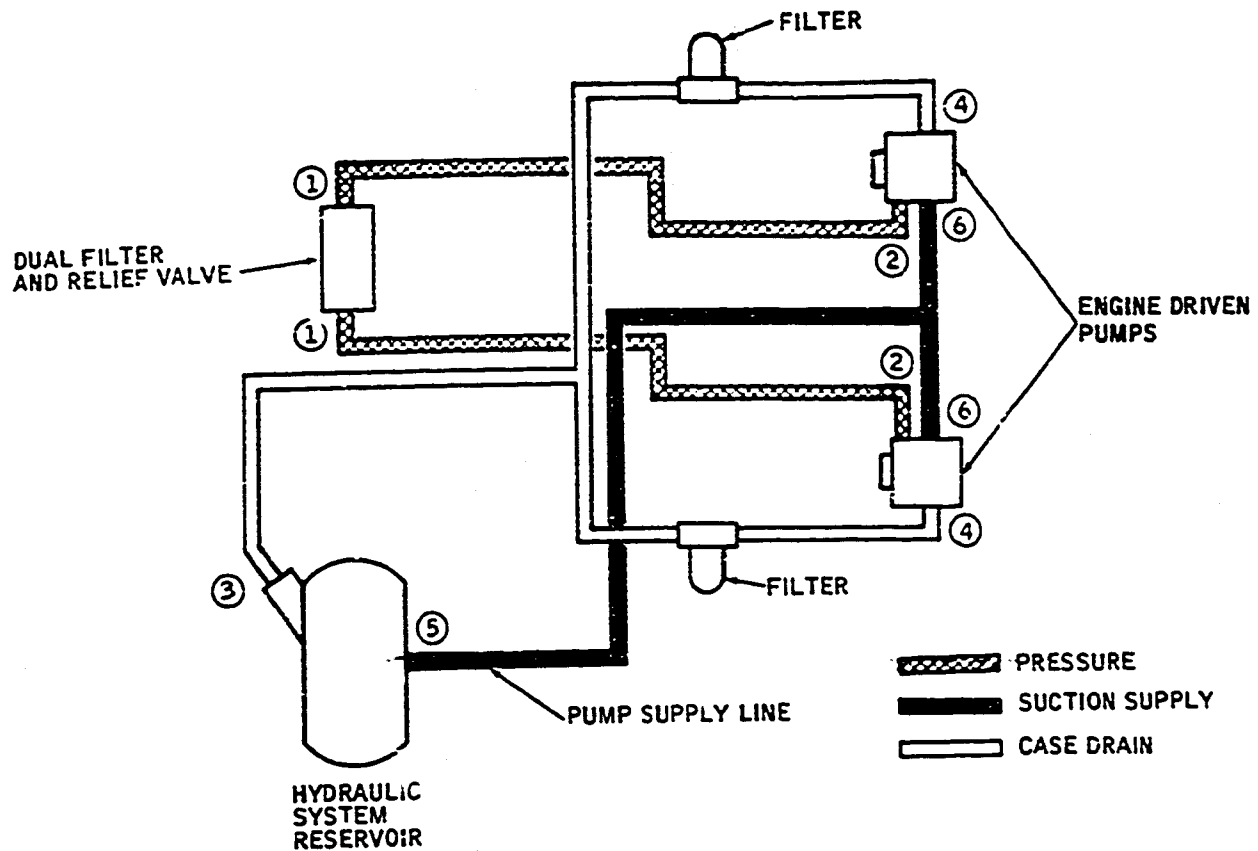

FLUSHING PROCEDURE SCHEMATIC

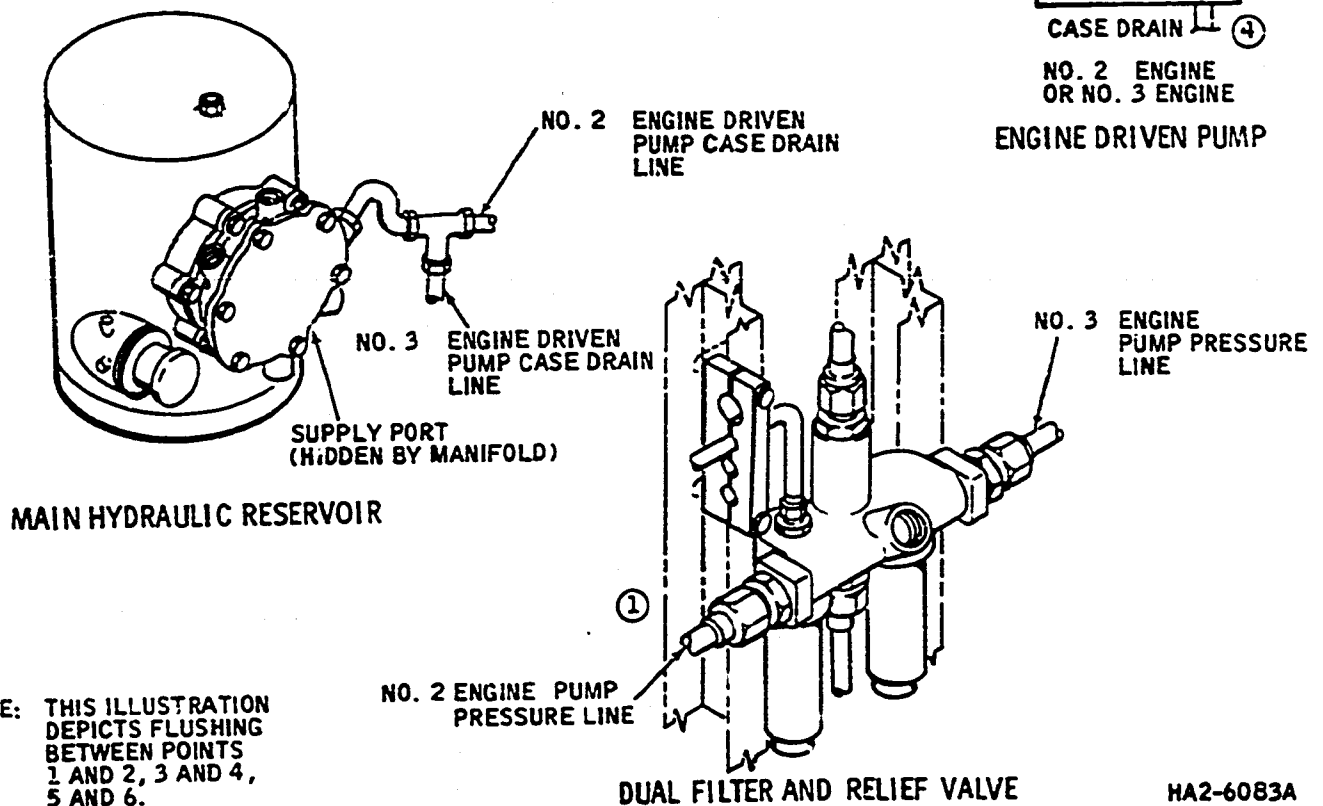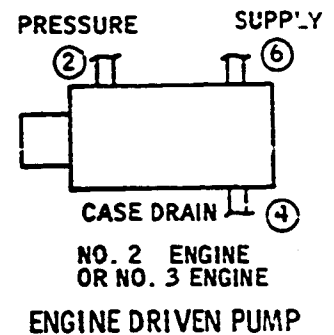

NOTE: THIS ILLUSTRATION  
 DEPICTS FLUSHING  
 BETWEEN POINTS  
 1 AND 2, 3 AND 4,  
 5 AND 6.

HA2-6083A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Flush circuit for five minutes.
- (7) Depressurize test stand.
- (8) Repeat steps (1 through 7) for pressure line between dual filter and No. 2 engine pump.
- (9) Remove dual filter and relief valve filter elements, clean filter bowls, and install clean filter elements (see 29-10-17).
- (10) Inspect, clean and/or replace check valves.
- (11) Restore all lines and units to original configuration.

B. Case Drain Lines

- (1) Disconnect case drain hose from engine-driven pump in No. 3 pylon. Connect hose to hydraulic test stand pressure hose.
- (2) At No. 3 pylon, replace check valve between engine-driven pump hose and case drain line with bulkhead fitting.
- (3) At tee fitting, located in B-return line adjacent to reservoir return port (see Figure 601), disconnect No. 2 engine pump case drain line. Cap tee fitting.
- (4) Disconnect case drain line from case drain return port in reservoir, and connect this line to test stand return hose. Cap reservoir port.
- (5) Disconnect lines from both sides of case drain filter and check valve, and jumper these return lines.
- (6) Pressurize test stand to 200 psi maximum, at 20 gpm flow.
- (7) Flush circuit for five minutes.
- (8) Depressurize test stand.
- (9) Repeat steps (1 and 2) for engine pump in No. 2 pylon.
- (10) Connect No. 2 engine-pump case drain line, which was disconnected in step (3), to hydraulic test stand return hose.
- (11) Repeat step (5) for No. 2 engine case drain filter and check valve.
- (12) Repeat steps (6 through 8) for No. 2 engine pump case drain lines.
- (13) Clean filter bowls and replace filter elements in case drain filters, located on rear spar (see 29-10-15).
- (14) Inspect, clean, and/or replace check valves.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (15) Restore all lines and units to original configuration.

C. Reservoir and Suction System

- (1) Do not disconnect or remove large reducer tee fitting and connecting supply lines from reservoir.
- (2) Connect hydraulic test stand return hose to airplane ground service supply connection (see Figure 602).
- (3) Drain reservoir, remove reservoir filter element (see 29-10-2). Clean out reservoir.
- (4) Temporarily install reservoir filter cover plate. Disconnect and cap all return ports.
- (5) Disconnect aspirator line at reservoir end. Cap reservoir end and cap reservoir port.
- (6) Disconnect suction hose from No. 2 engine-driven pump and connect test stand pressure hose to suction hose.
- (7) Open fire shutoff valve on No. 2 engine.
- (8) Disconnect and cap outboard flap return lines and port connectors where they connect to suction lines on rear spar aft of No. 2 and No. 3 pylons. (see Figure 602).
- (9) Pressurize test stand to 45 psi at 20 gpm flow.
- (10) Flush from engine pump suction hose to reservoir for five minutes.  
  

CAUTION: WHEN FLUSHING THE SUPPLY LINES, MONITOR THE RESERVOIR FLUID LEVEL AND THE AIR PRESSURE GAGE ON TOP OF THE RESERVOIR AIR BLEED VALVE. THE FLUID LEVEL MUST BE VISIBLE IN THE SIGHT GAGE, AND THE PRESSURE MUST NOT EXCEED 45 PSI TO PREVENT DAMAGE TO THE RESERVOIR.
- (11) Depressurize test stand.
- (12) Close No. 2 and No. 3 engine fire shutoff valve.
- (13) Remove test stand pressure hose from No. 2 engine pump supply line, and connect No. 3 engine-driven pump supply line. Open No. 3 engine fire shutoff valve.
- (14) Repeat steps (9 through 11).
- (15) Close No. 3 engine fire shutoff valve and disconnect test stand from engine-driven pump suction supply hose.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

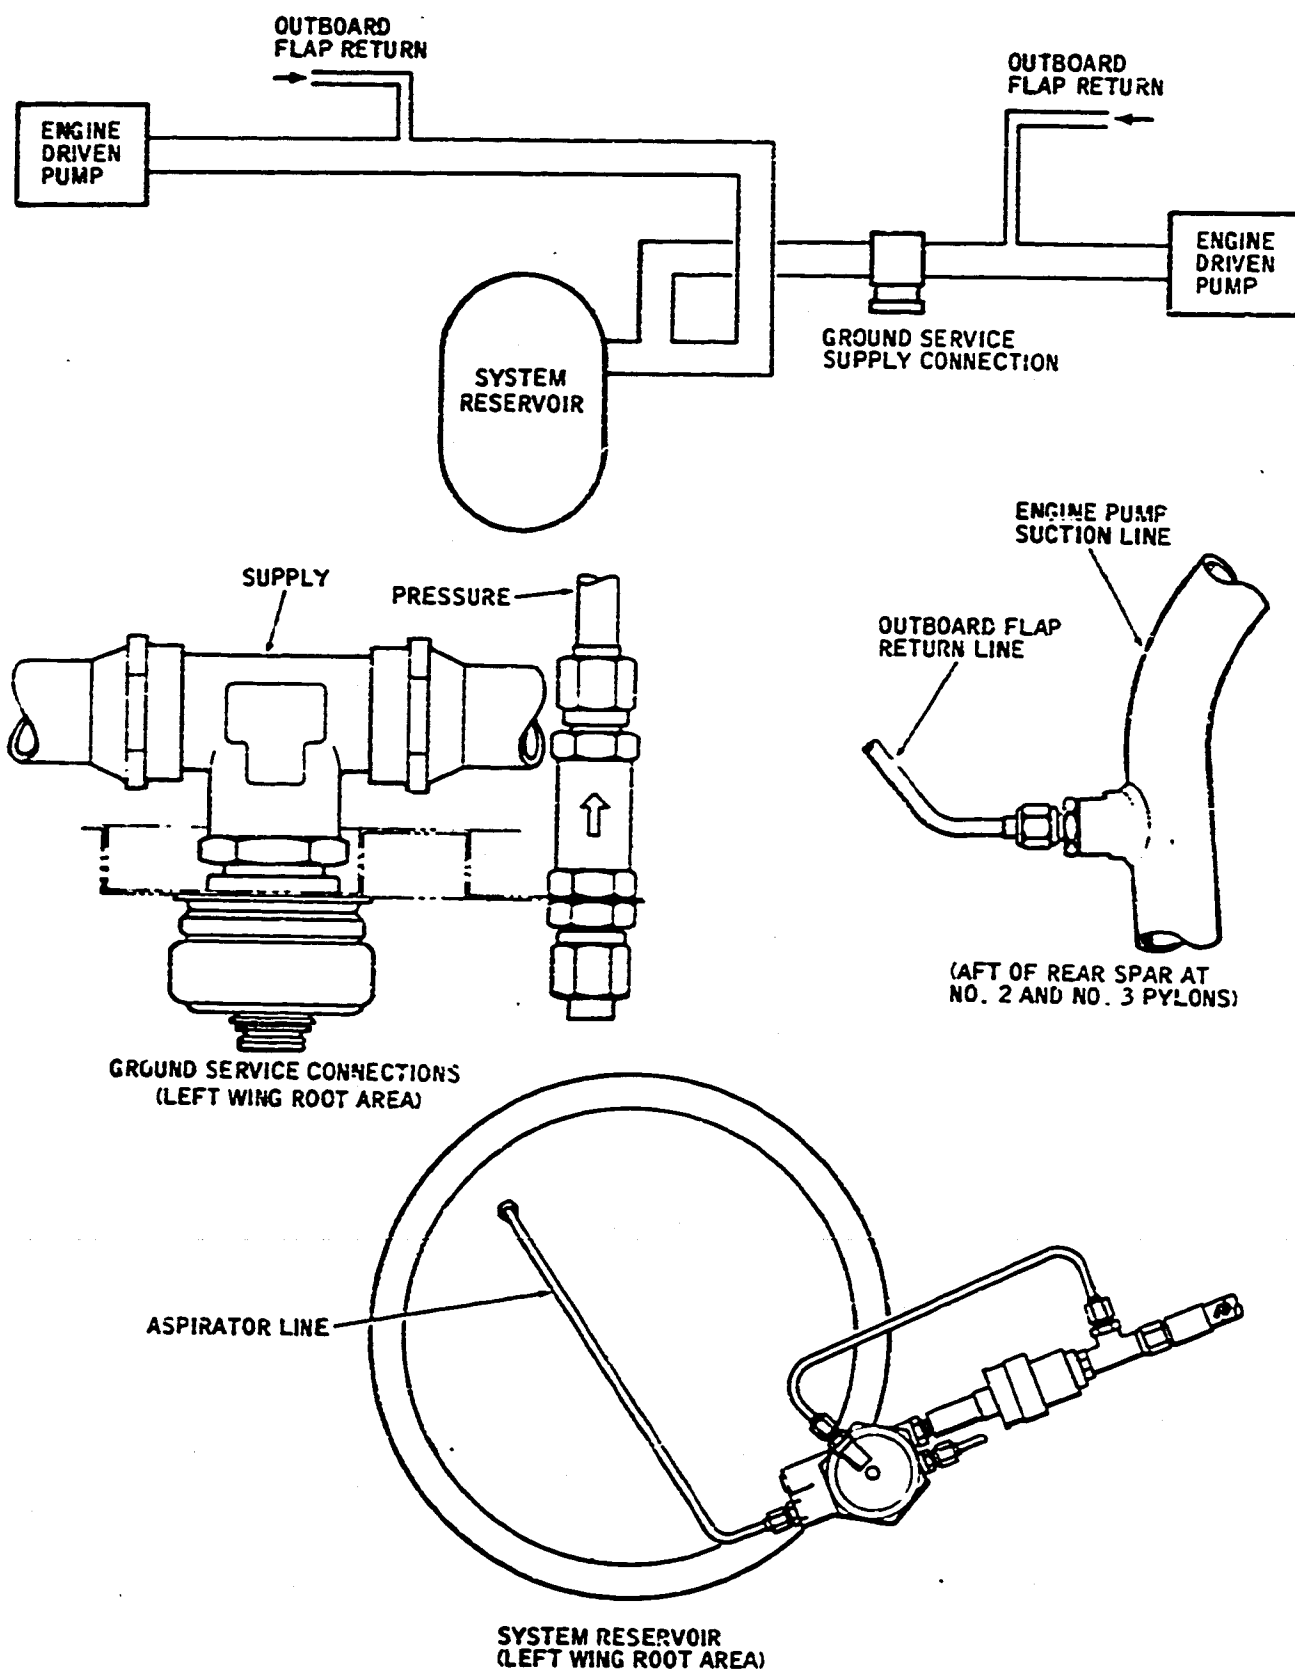

Flushing Procedure Line Connection Locations  
 Figure 602

Feb 1/69

HA2-6084

29-01  
 CODE 2  
 Page 605

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (16) Uncap aspirator line and reservoir aspirator port. Connect aspirator line to reservoir.
- (17) Uncap outboard flap return lines and return line ports in pump suction lines and connect flap return lines to suction lines.
- (18) Flush main hydraulic reservoir, air chamber, and associated lines as follows:
  - (a) Disconnect line which runs from air chamber to reservoir air relief valve, located downstream of air bleed valve in left wheel well (see Figure 603).
  - (b) Connect this line to test stand pressure hose.
  - (c) At same location disconnect vent line which runs to tee fitting in reservoir filler neck. Cap line.
  - (d) At filler neck, disconnect both vent lines and connect together with jumper line.
  - (e) At tee in filler line, disconnect line which runs to high standpipe port at bottom of main reservoir (see Figure 604). Cap tee fitting and connect disconnected line to test stand return hose.
  - (f) Pressurize test stand to 45 psi maximum at 20 gpm flow.
  - (g) Flush circuit for five minutes.
- (19) Depressurize test stand.
- (20) Disconnect test stand pressure hose from overboard line and cap this line. Connect test stand pressure hose to vent line that was capped in step 18, c).
- (21) Repeat steps (18, f and g).
- (22) Depressurize test stand, drain and clean out reservoir. Install new reservoir filter element (see 29-10-2).
- (23) Restore all lines and units to original configuration.

**D. Auxiliary Hydraulic System Alternate Reservoir**

NOTE: The auxiliary pump alternate reservoir may be contaminated by the wing flap return line, the auxiliary pump bypass line, or the low-pressure return lines that tie into the wing flap lines.

- (1) Disconnect wing flap return line from tee fitting upstream of low pressure return line (see Figure 604). Cap tee.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

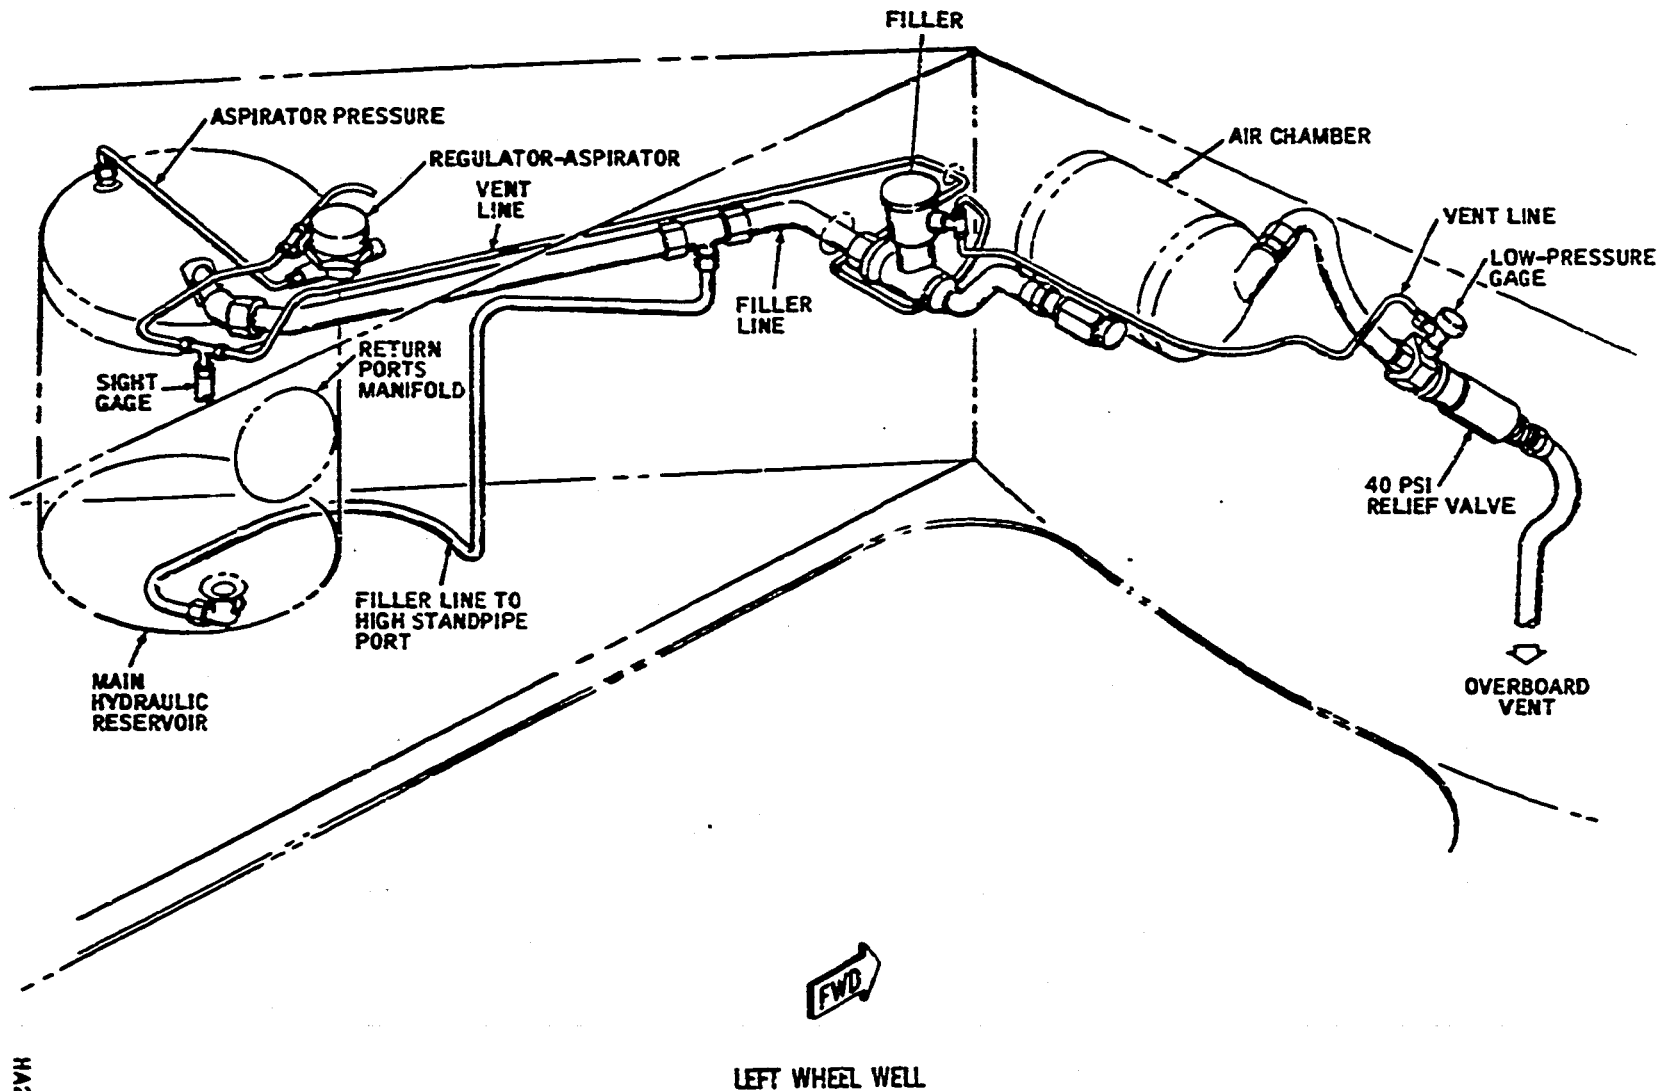

Flushing Procedure Connection Locations  
 Figure 603

Feb 1/69


29-01  
 CODE 2  
 Page 607

Printed in U.S.A.

HA2-6087





DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

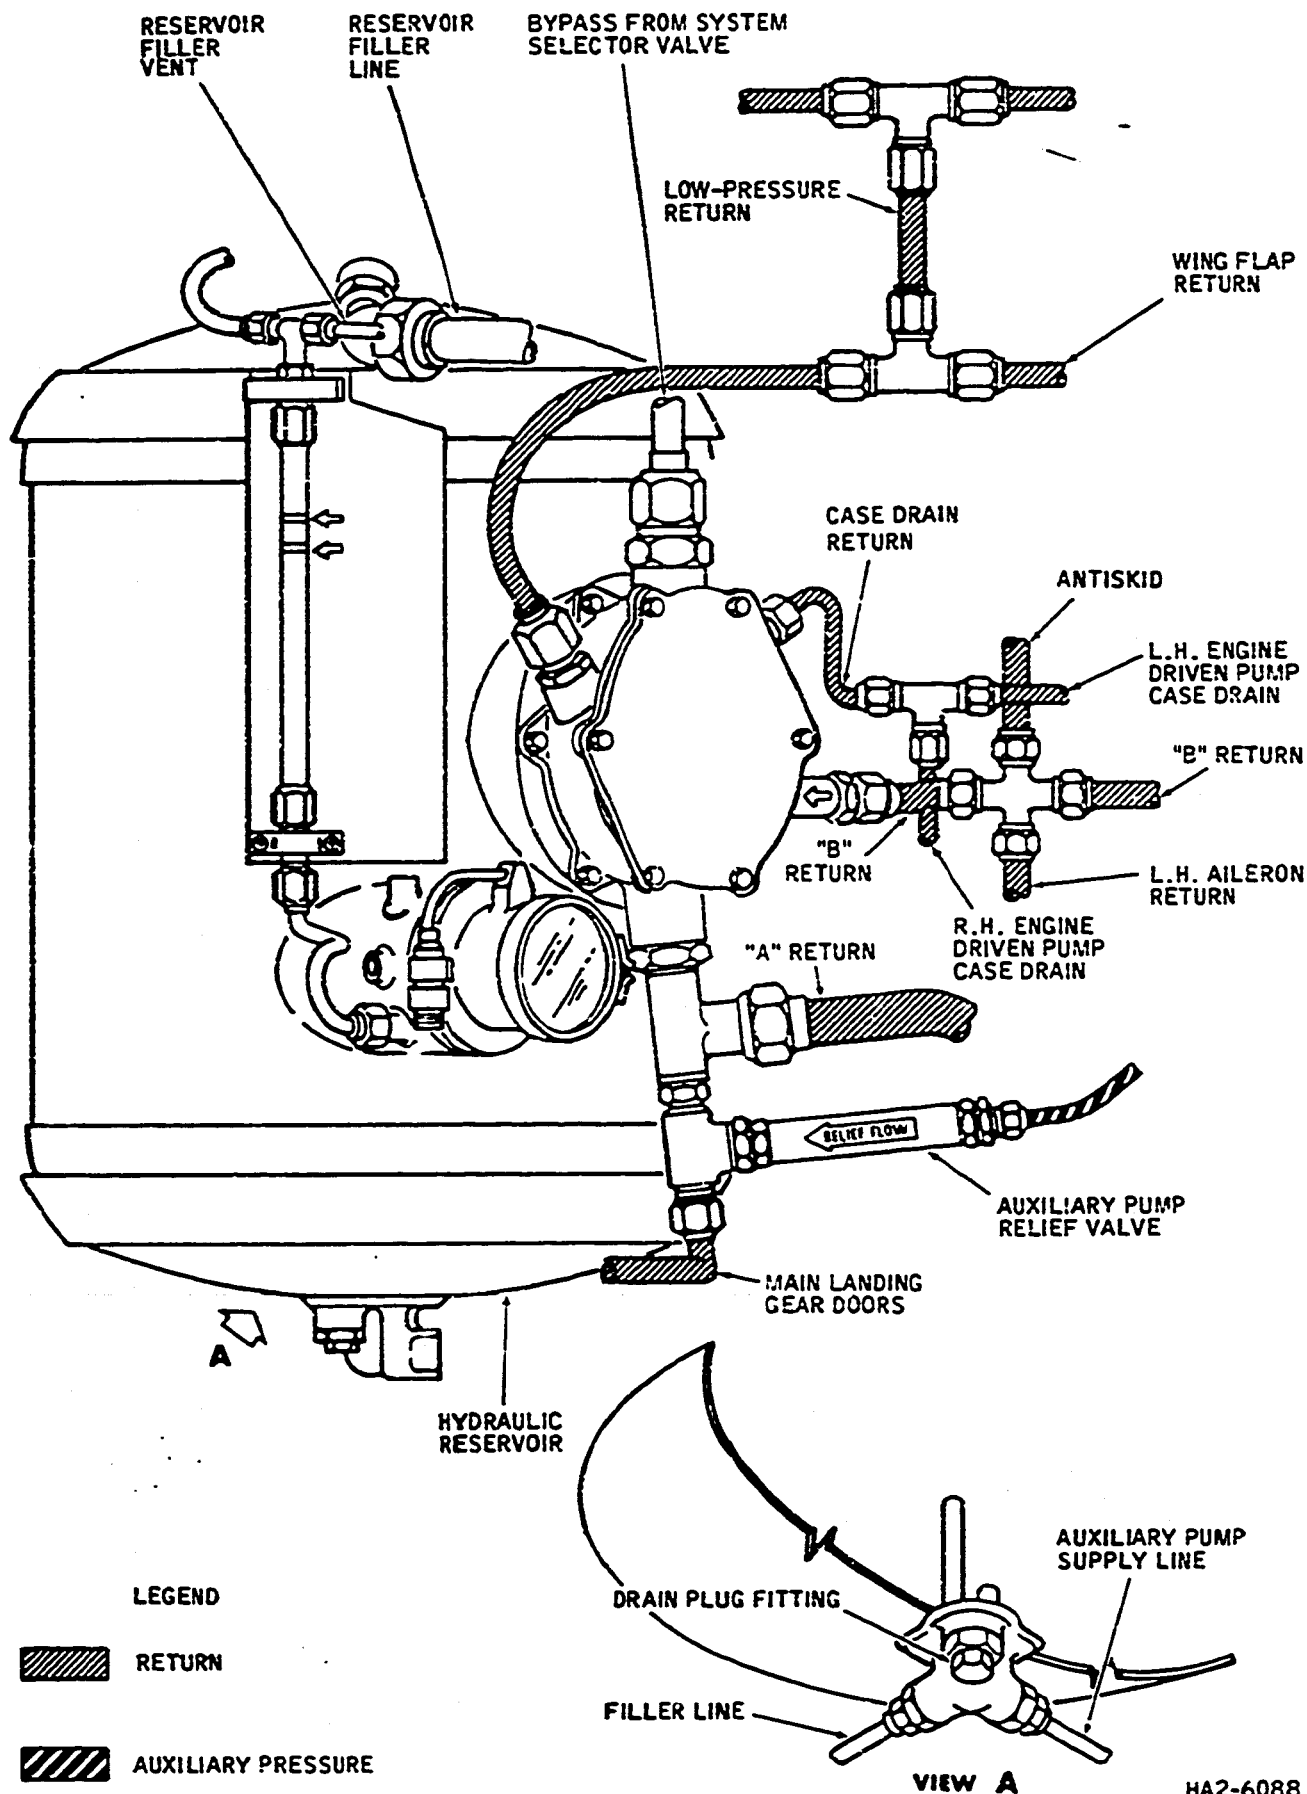

HA2-6088

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

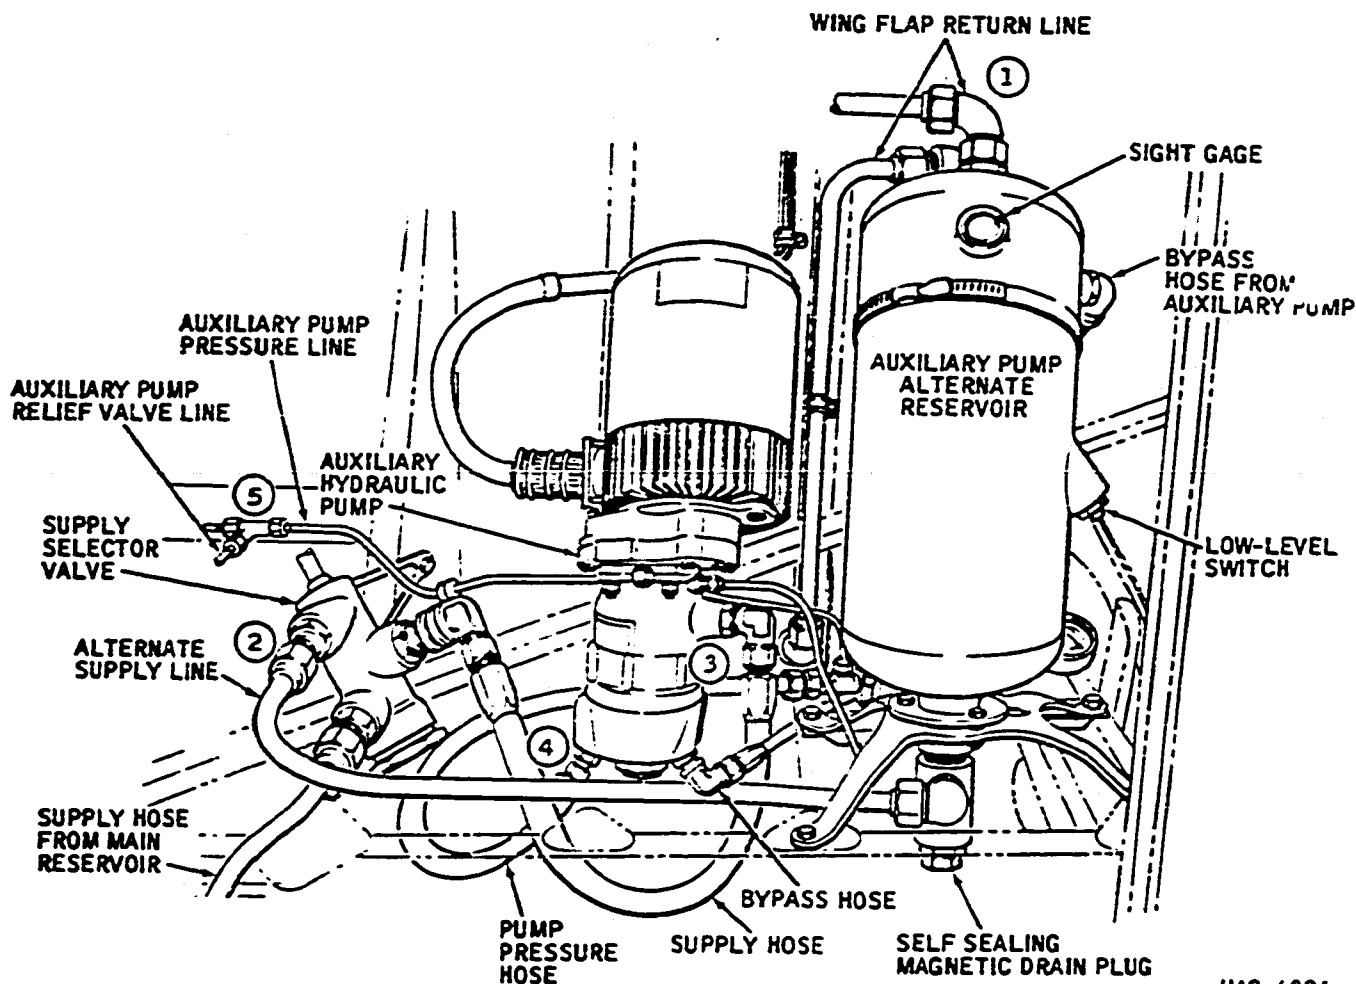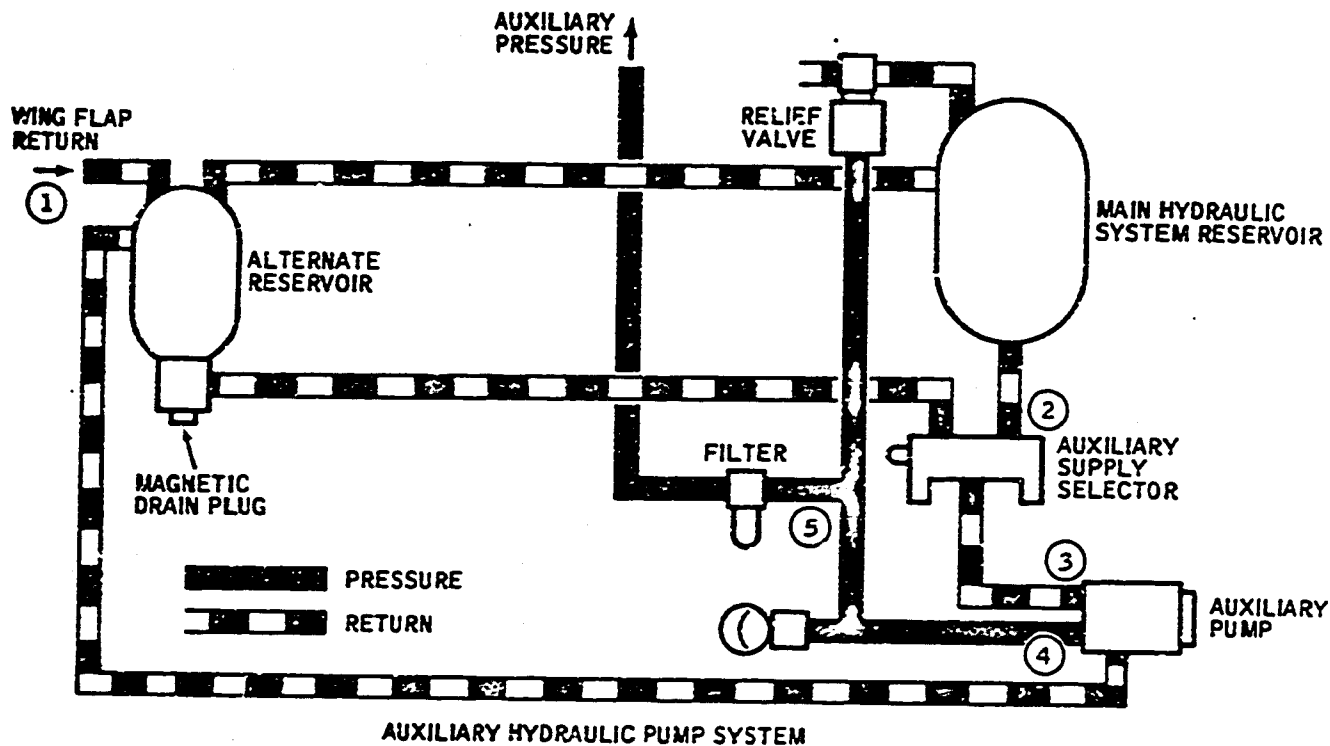

Flushing Procedure Line Connection Locations  
 Figure 605

Feb 1/69

HA2-6086

29-01  
 CODE 2  
 Page 609

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Connect wing flap return line to test stand pressure hose.
- (3) Disconnect alternate supply line from supply selector valve. Connect line to test stand return hose (see Figure 605).
- (4) Pressurize test stand to 100 psi maximum at 20 gpm flow.
- (5) Flush circuit for five minutes.
- (6) Depressurize test stand, and drain alternate reservoir (see 29-00, Maintenance Practices).
- (7) Restore all lines to original configuration.

E. Auxiliary Hydraulic Pump System (See Figures 604 and 605.)

- (1) Disconnect auxiliary pump supply line from low standpipe port in bottom of main reservoir. Cap reservoir port, and connect line to test stand pressure hose.
- (2) Place hydraulic system selector control lever in general system (normal) position.
- (3) Disconnect auxiliary pump supply and pressure hoses from pump. Connect these two lines together.
- (4) Disconnect auxiliary pump pressure line, and relief valve line from tee fitting located adjacent to auxiliary supply selector valve. Connect these lines together.
- (5) Disconnect auxiliary pump relief valve inlet line from relief valve, located near A-return line of main reservoir. Connect line to test stand return hose.
- (6) Pressurize test stand to 100 psi maximum at 20 gpm flow.
- (7) Flush circuit for five minutes.
- (8) Depressurize test stand.
- (9) Disconnect test stand pressure hose from auxiliary pump supply hose, and connect to supply selector valve alternate supply port.
- (10) Place hydraulic system selector control lever in No. 3 position, and repeat steps (6 through 8).
- (11) Remove auxiliary hydraulic pump case drain hose. Clean and/or replace.
- (12) Remove auxiliary pump filter element, clean filter bowl. Install clean filter element (see 29-10-5).
- (13) Restore all lines and units to original configuration.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN HYDRAULIC POWER SYSTEM (NORMAL AND AUXILIARY) -

INSPECTION/CHECK

1. General

- A. The purpose of this section is to provide a logical guide for removing the contaminants (foreign particles) from the fluid, units, and lines of the main hydraulic power system by flushing the system with clean hydraulic fluid.
- B. This procedure may be deviated from as dictated by the individual circumstances. Hydraulic circuits that are easy to locate and follow, have been intentionally omitted from this procedure for the sake of brevity.
- C. The removal of overheated or diluted fluid would follow generally the same procedure with the exception that the removed contaminated fluid would be caught in containers rather than recirculated through the hydraulic test stand.
- D. Before any flushing procedures are performed, personnel should read and thoroughly understand 29-00, Inspection/Check.


2. Tools and Equipment Required

- A. One hydraulic test stand capable of operating with Skydrol hydraulic fluid, and fitted with 10-micron or smaller filter.
- B. Pressure and return hoses, jumper lines, and fittings, as required by the following procedures.


3. Flush Main Hydraulic Power System (See Figure 601.)

- A. Pressure Lines (Engine-Driven Pumps to Dual Filter and Relief Valve)
  - (1) Disconnect engine-driven hydraulic pump pressure hose from pump in No. 3 pylon.
  - (2) Disconnect pressure line from right side of dual filter and relief valve, located in left main gear wheel well.
  - (3) At No. 3 pylon, replace check valve, located between engine pump hose and pressure line, with bulkhead fitting.
  - (4) Connect engine pump pressure hose to test stand pressure hose, and connect disconnected line at dual filter to test stand return hose.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

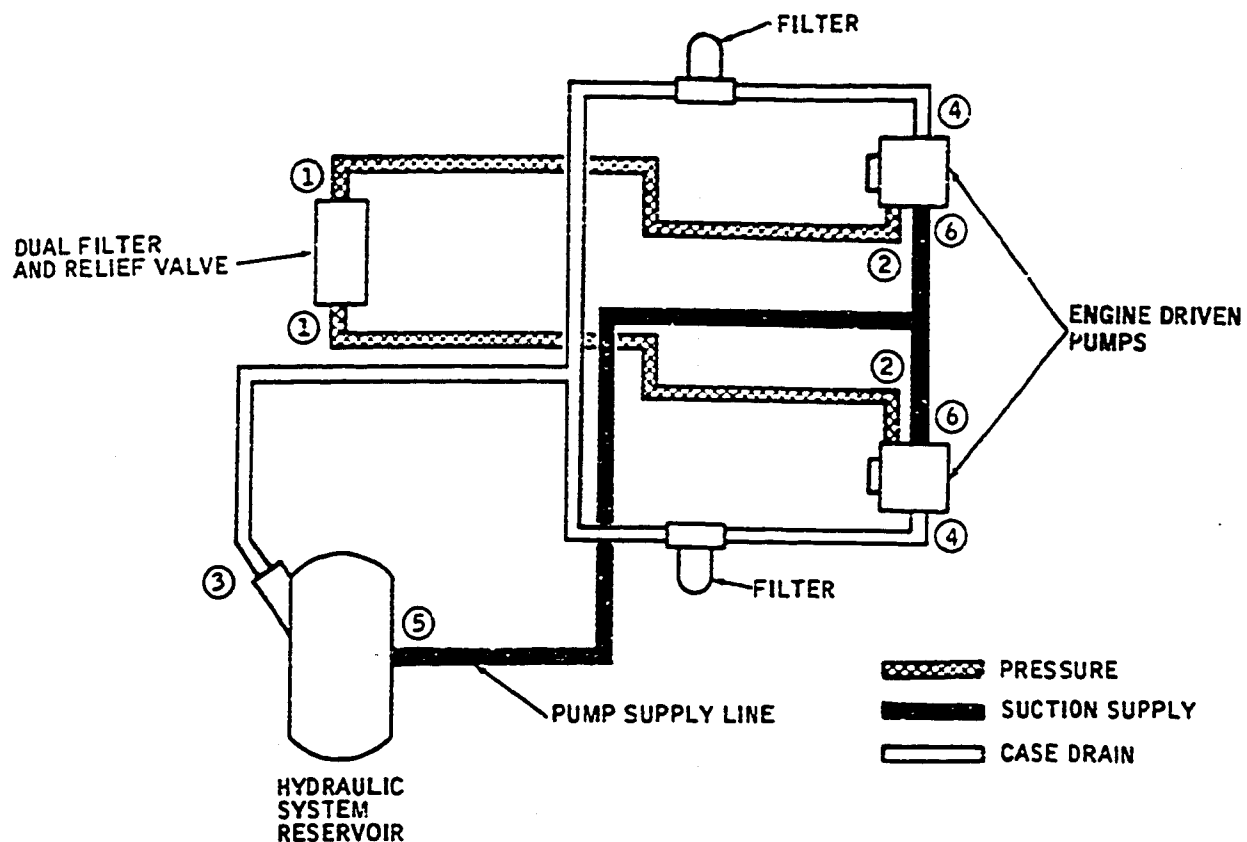

FLUSHING PROCEDURE SCHEMATIC

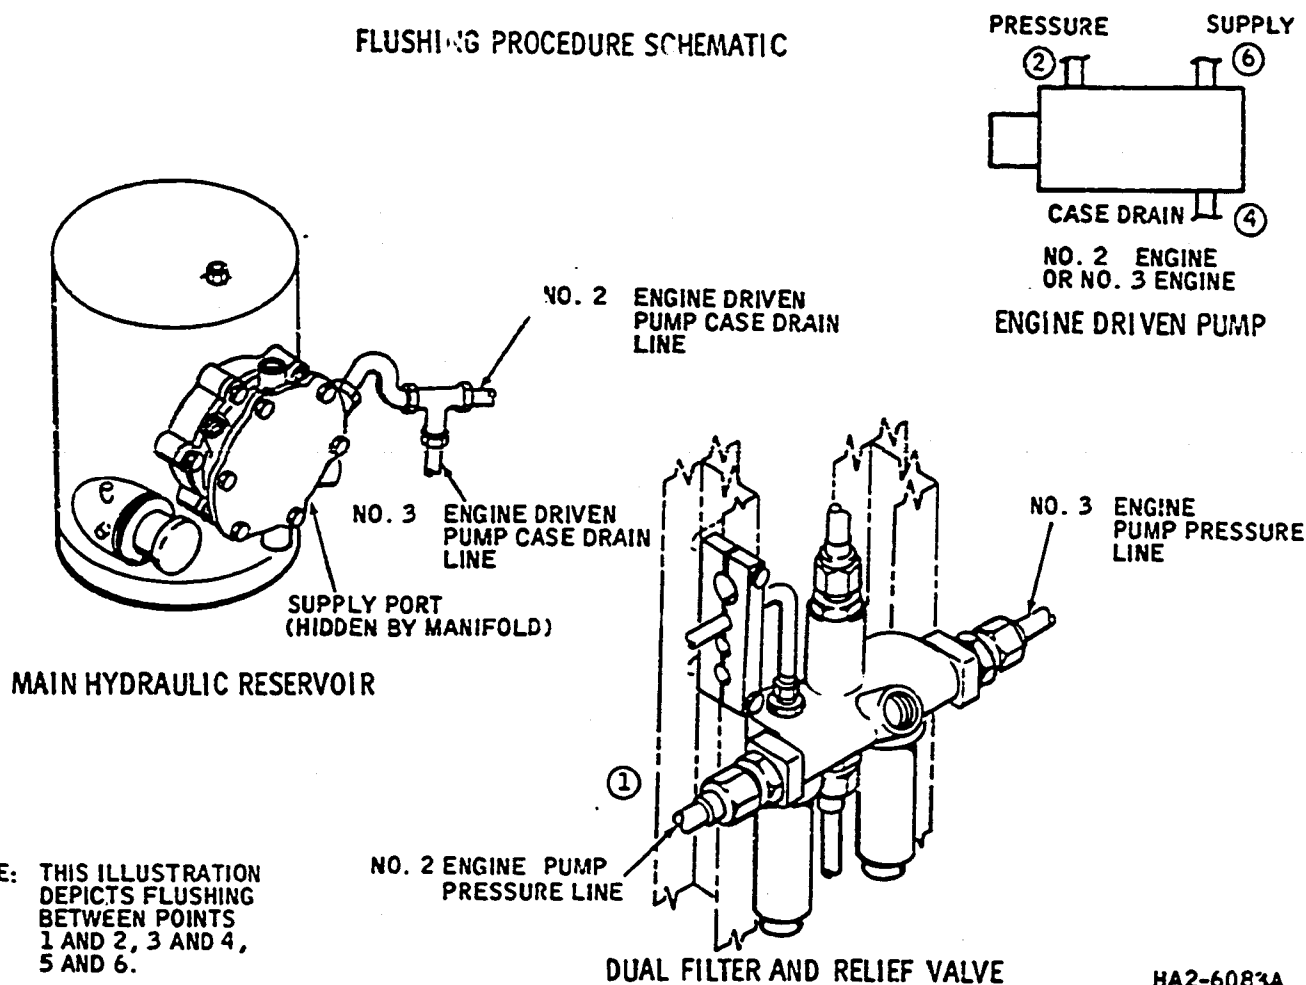

NOTE: THIS ILLUSTRATION  
 DEPICTS FLUSHING  
 BETWEEN POINTS  
 1 AND 2, 3 AND 4,  
 5 AND 6.

Flushing Procedure Line Connection Locations  
 Figure 601

HA2-6083A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Pressurize test stand to 200 psi at 5 to 20 gpm fluid flow.
- (6) Flush circuit for five minutes.
- (7) Depressurize test stand.
- (8) Repeat Steps (1 through 7) for pressure line between dual filter and Number 2 engine pump.
- (9) Remove dual filter and relief valve filter elements, clear filter bowls, and install clean filter elements (see 29-10-17).
- (10) Inspect, clean, and/or replace check valves.
- (11) Restore all lines and units to original configuration.

**B. Case Drain Lines**

- (1) Disconnect case drain hose from engine-driven pump in No. 3 pylon. Connect hose to hydraulic test stand pressure hose.
- (2) At No. 3 pylon, replace check valve between engine-driven pump hose and case drain line with bulkhead fitting.
- (3) At tee fitting, located in B-return line adjacent to reservoir return port (see Figure 601), disconnect No. 2 engine pump case drain line. Cap tee fitting.
- (4) Disconnect case drain line from case drain return port in reservoir, and connect this line to test stand return hose. Cap reservoir port.
- (5) Disconnect lines from both sides of case drain filter and check valve, and jumper these return lines.
- (6) Pressurize test stand to 200 psi maximum, at 20 gpm flow.
- (7) Flush circuit for five minutes.
- (8) Depressurize test stand.
- (9) Repeat Steps (1 and 2) for engine pump in No. 2 pylon.
- (10) Connect No. 2 engine pump case drain line, which was disconnected in Step (3), to hydraulic test stand return hose.
- (11) Repeat Step (5) for No. 2 engine case drain filter and check valve.
- (12) Repeat Steps (6 through 8) for No. 2 engine pump case drain lines.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (13) Clean filter bowls and replace filter elements in case drain filters, located on rear spar (see 29-10-15).
- (14) Inspect, clean, and/or replace check valves.
- (15) Restore all lines and units to original configuration.

C. Reservoir and Suction System

- (1) Do not disconnect or remove large reducer tee fitting and connecting supply lines from reservoir.
- (2) Connect hydraulic test stand return hose to airplane ground service supply connection (see Figure 602).
- (3) Drain reservoir, remove reservoir filter element (see 29-10-2). Clean out reservoir.
- (4) Temporarily install reservoir filter cover plate. Disconnect and cap all return ports.
- (5) Disconnect aspirator line at reservoir end. Cap reservoir end and cap reservoir port.
- (6) Disconnect suction hose from No. 2 engine-driven pump and connect test stand pressure hose to suction hose.
- (7) Open fire shutoff valve on No. 2 engine.
- (8) Disconnect and cap outboard flap return lines and port connectors where they connect to suction lines on rear spar aft of No. 2 and No. 3 pylons. (see Figure 602).
- (9) Pressurize test stand to 45 psi at 20 gpm flow.
- (10) Flush from engine pump suction hose to reservoir for five minutes.  

CAUTION: WHEN FLUSHING THE SUPPLY LINES, MONITOR THE RESERVOIR FLUID LEVEL AND THE AIR PRESSURE GAGE ON TOP OF THE RESERVOIR AIR BLEED VALVE. THE FLUID LEVEL MUST BE VISIBLE IN THE SIGHT GAGE, AND THE PRESSURE MUST NOT EXCEED 45 PSI TO PREVENT DAMAGE TO THE RESERVOIR.
- (11) Depressurize test stand.
- (12) Close No. 2 and No. 3 engine fire shutoff valve.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

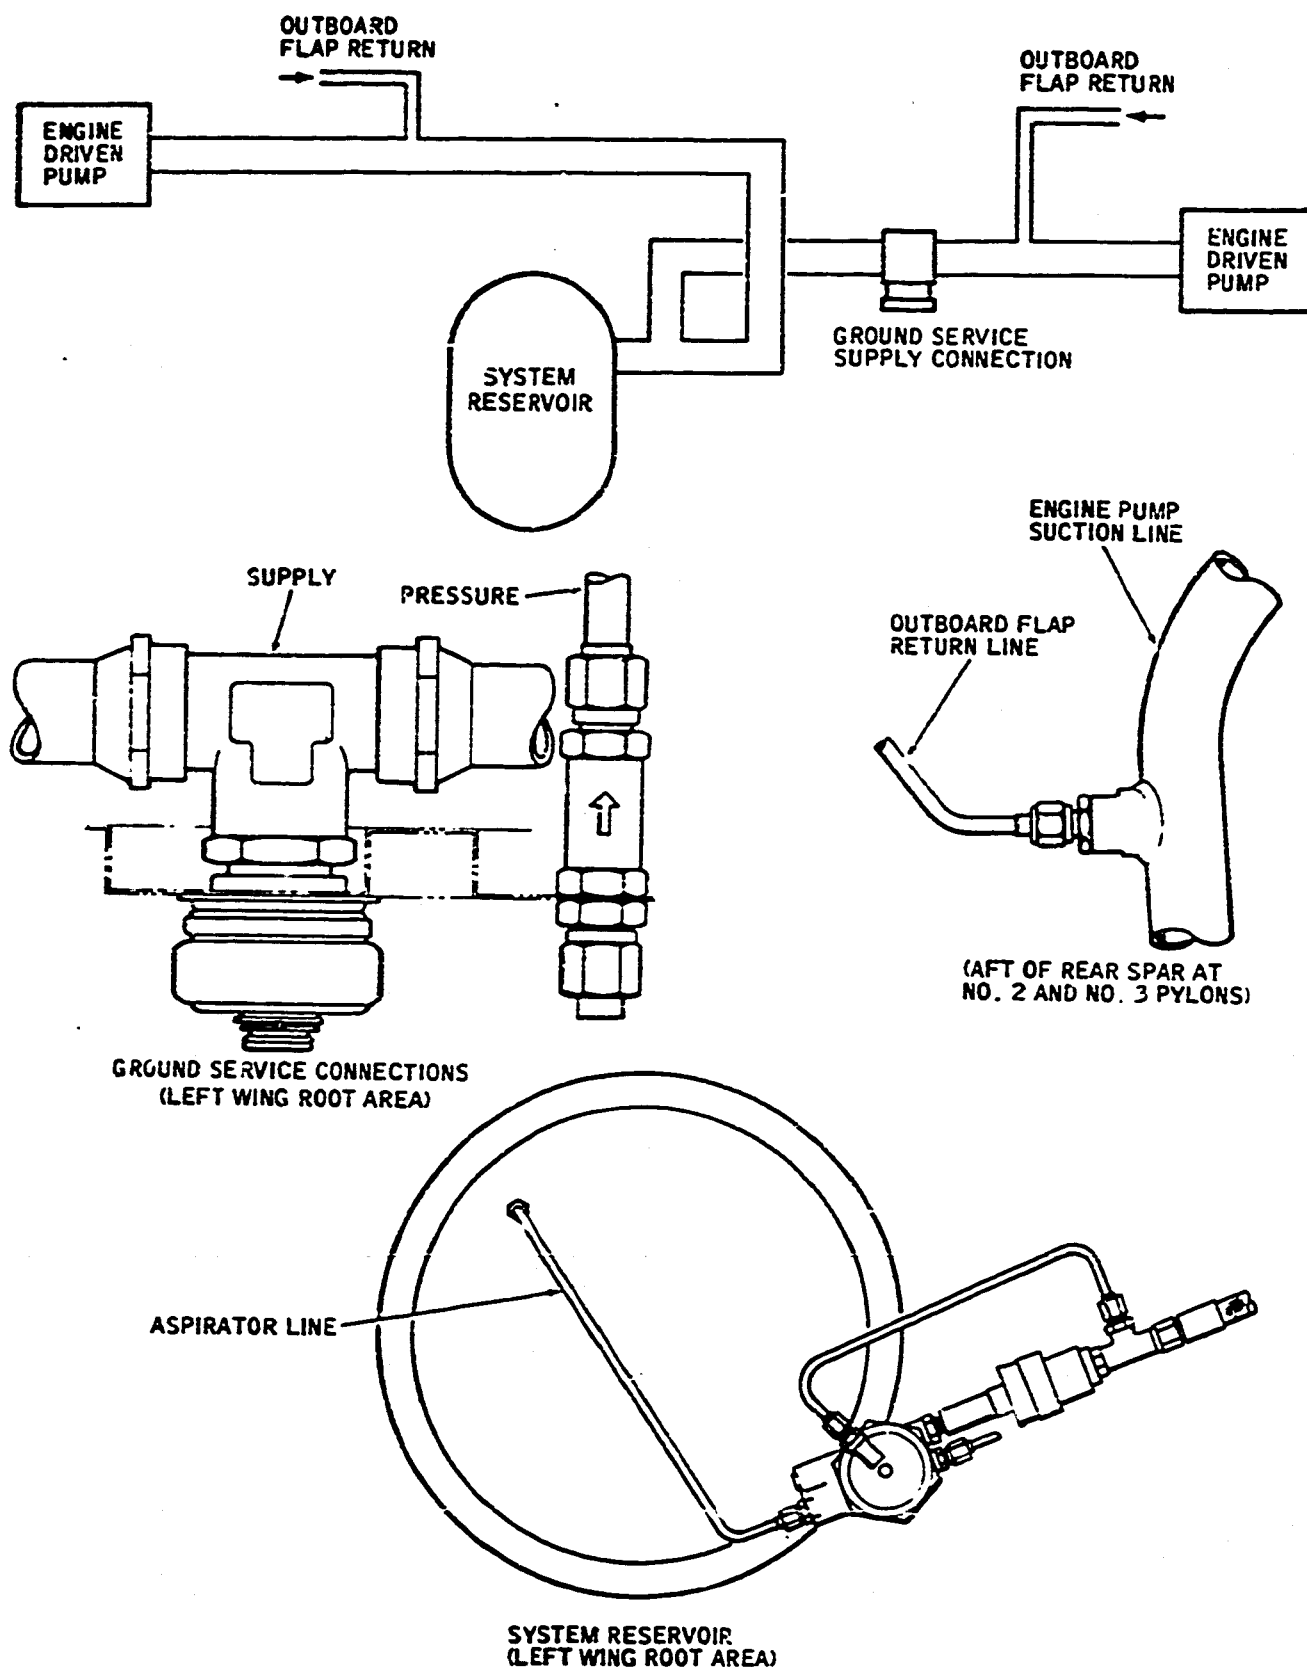

Flushing Procedure Line Connection Locations  
 Figure 602

HA2-6084

29-01  
 CODE 3  
 Page 605


Feb 1/69



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (13) Remove test stand pressure hose from No. 2 engine pump supply line, and connect number 3 engine-driven pump supply line. Open No. 3 engine fire shutoff valve.
- (14) Repeat Steps (9 through 11).
- (15) Close No. 3 engine fire shutoff valve and disconnect test stand from engine-driven pump suction supply hose.
- (16) Uncap aspirator line and reservoir aspirator port. Connect aspirator line to reservoir.
- (17) Uncap outboard flap return lines and return line ports in pump suction lines and connect flap return lines to suction lines.
- (18) Flush main hydraulic reservoir, air chamber, and associated lines as follows:
  - (a) Disconnect line which runs from air chamber to reservoir air relief valve, located downstream of air bleed valve in left wheel well (see Figure 603).
  - (b) Connect this line to test stand pressure hose.
  - (c) At same location, disconnect vent line which runs to tee fitting in reservoir filler neck. Cap line.
  - (d) At filler neck, disconnect both vent lines and connect together with jumper line.
  - (e) At tee in filler line, disconnect line which runs to high standpipe port at bottom of main reservoir (see Figure 604). Cap tee fitting and connect disconnected line to test stand return hose.
  - (f) Pressurize test stand to 45 psi maximum at 20 gpm flow.
  - (g) Flush circuit for five minutes.
- (19) Depressurize test stand.
- (20) Disconnect test stand pressure hose from overboard line and cap this line. Connect test stand pressure hose to vent line that was capped in Step (18, c).
- (21) Repeat Steps (18, f and g).
- (22) Depressurize test stand, drain and clean out reservoir. Install new reservoir filter element (see 29-10-2).
- (23) Restore all lines and units to original configuration.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

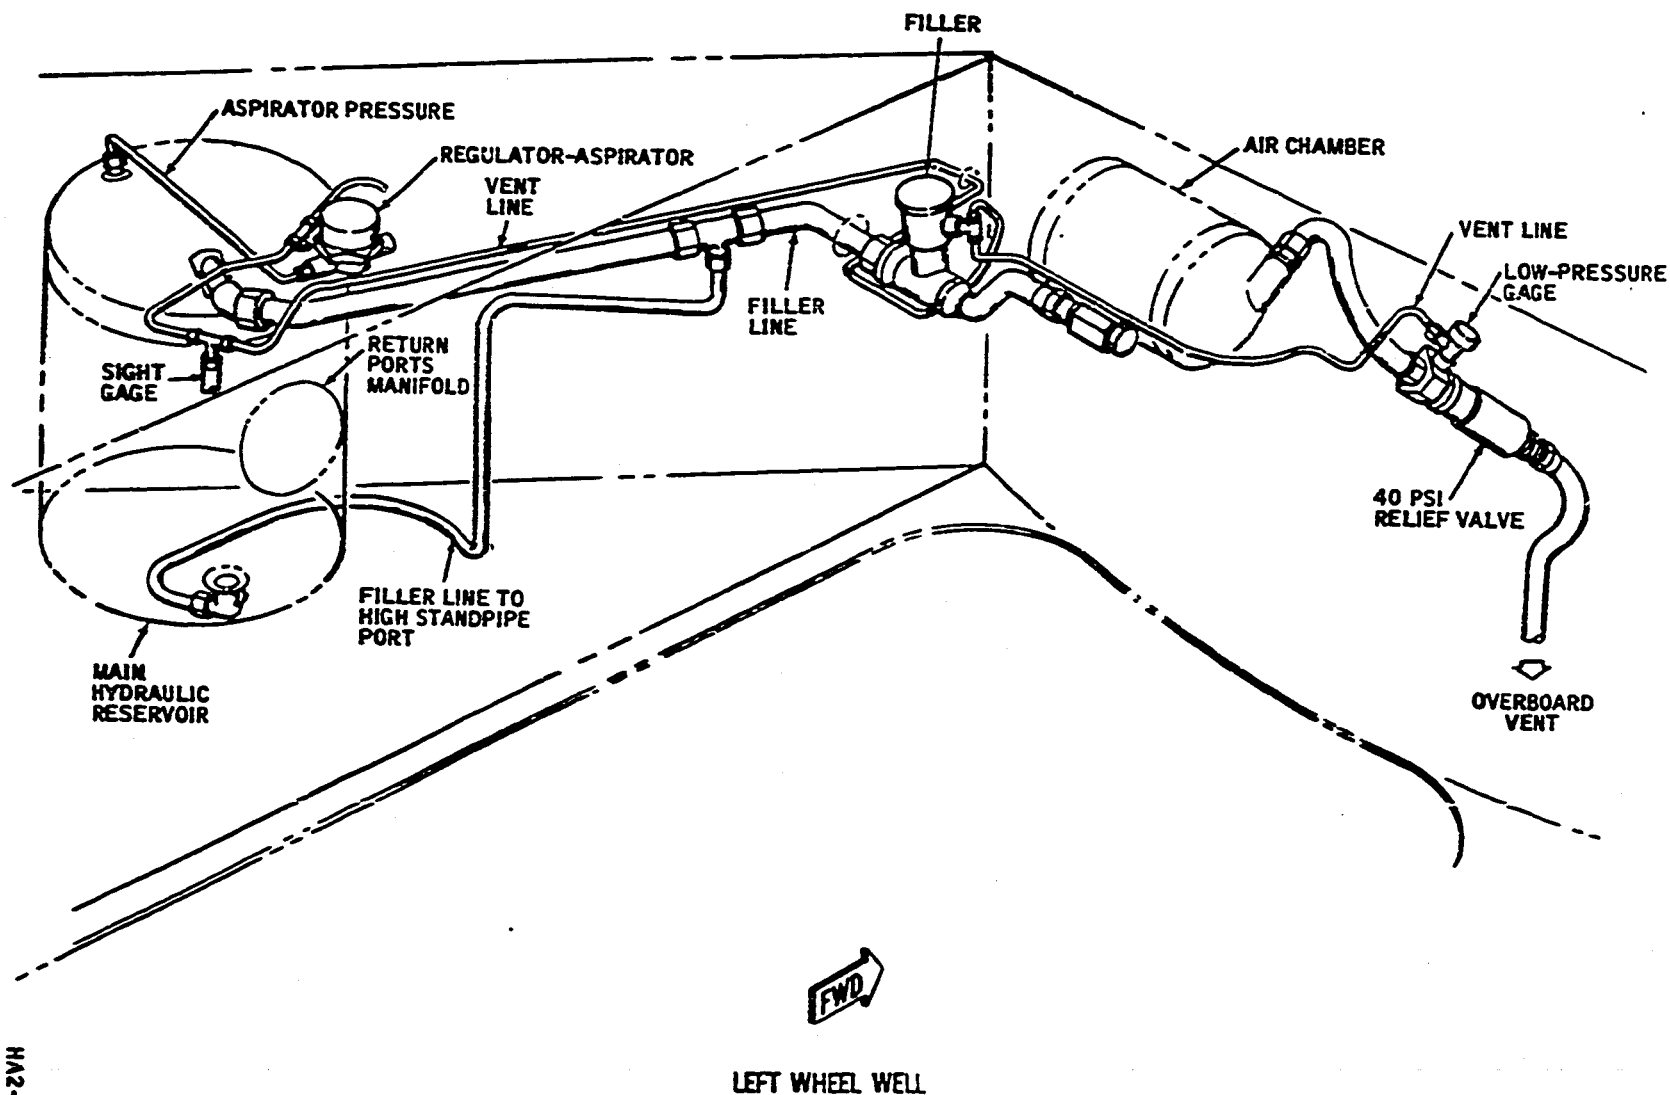

HA2-6087


Flushing Procedure Connection Locations  
 Figure 603

Feb 1/69

29-01  
 CODE 3  
 Page 607

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

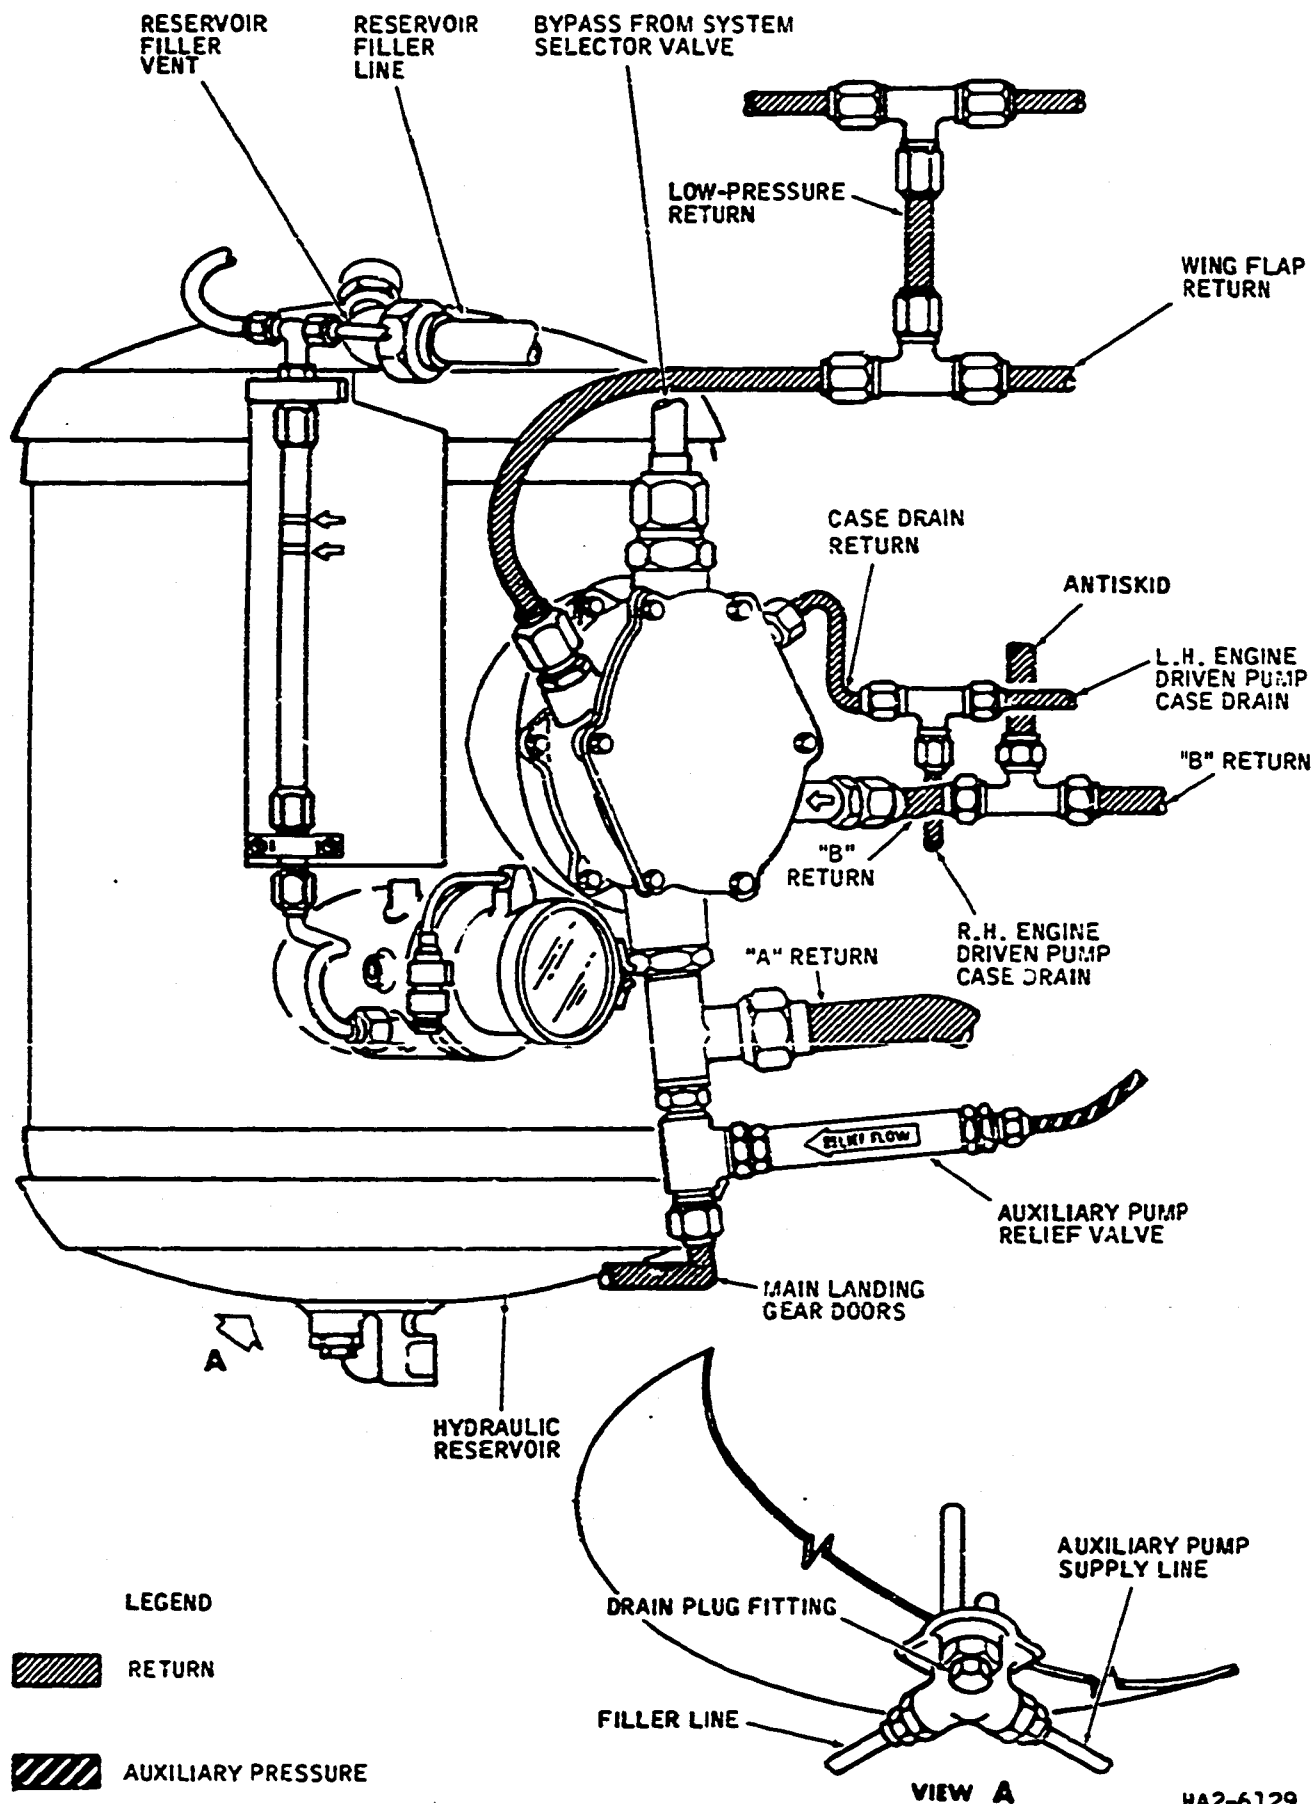

HA2-6129

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

D. Auxiliary Hydraulic System Alternate Reservoir



NOTE: The auxiliary pump alternate reservoir may be contaminated by the wing flap return line, the auxiliary pump case drain line, or the low-pressure return lines that tie into the wing flap lines.

- (1) Disconnect wing flap return line from tee fitting upstream of low pressure return line (see Figure 604). Cap tee.
- (2) Connect wing flap return line to test stand pressure hose.
- (3) Disconnect alternate supply line from supply selector valve. Connect line to test stand return hose (see Figure 605).
- (4) Pressurize test stand to 100 psi maximum at 20 gpm flow.
- (5) Flush circuit for five minutes.
- (6) Depressurize test stand, and drain alternate reservoir (see 29-00, Maintenance Practices).
- (7) Restore all lines to original configuration.

E. Auxiliary Hydraulic Pump System (See Figures 604 and 605.)

- (1) Disconnect auxiliary pump supply line from low standpipe port in bottom of main reservoir. Cap reservoir port, and connect line to test stand pressure hose.
- (2) Place hydraulic system selector control lever in general system (normal) position.
- (3) Disconnect auxiliary pump supply and pressure hoses from pump. Connect these two lines together.
- (4) Disconnect auxiliary pump pressure line, and relief valve line from tee fitting located adjacent to auxiliary supply selector valve. Connect these lines together.
- (5) Disconnect auxiliary pump relief valve inlet line from relief valve, located near A-return line of main reservoir. Connect line to test stand return hose.
- (6) Pressurize test stand to 100 psi maximum at 20 gpm flow.
- (7) Flush circuit for five minutes.
- (8) Depressurize test stand.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

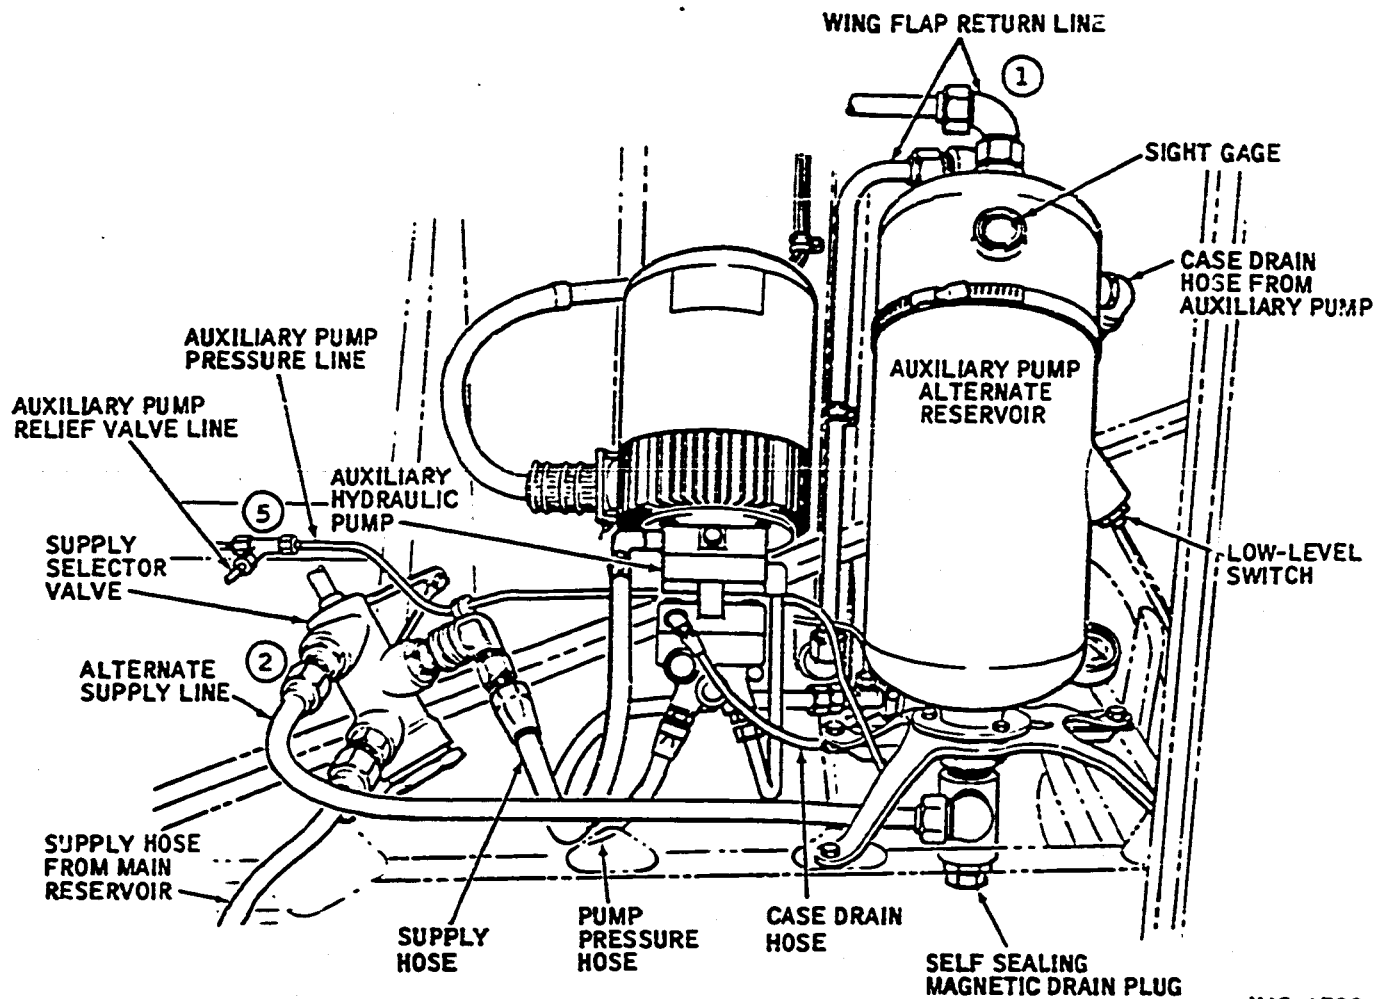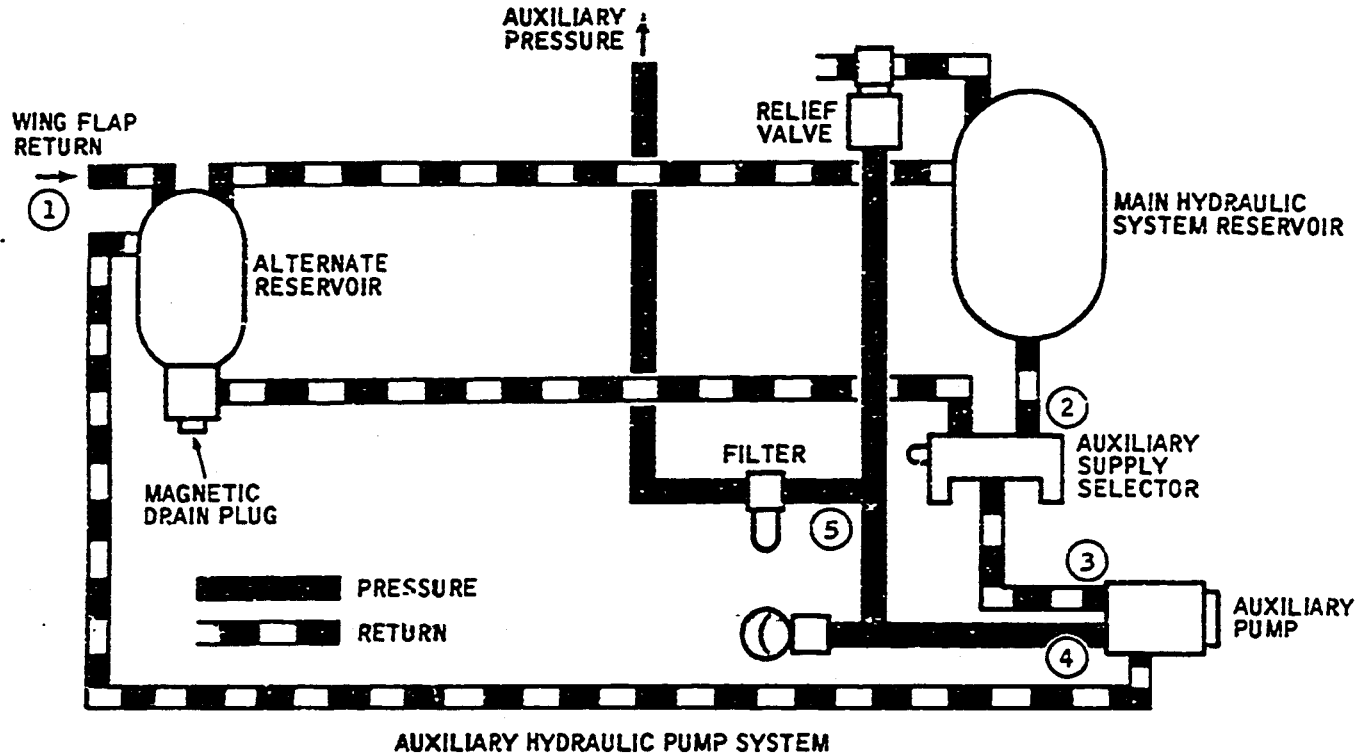

HA2-6792

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (9) Disconnect test stand pressure hose from auxiliary pump supply hose, and connect to supply selector valve alternate supply port.
- (10) Place hydraulic system selector control lever in No. 3 position, and repeat Steps (6 through 8).
- (11) Remove auxiliary hydraulic pump case drain hose. Clean, and/or replace.
- (12) Remove auxiliary pump filter element, clean filter bowl. Install clean filter element (see 29-10-5).
- (13) Restore all lines and units to original configuration.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE) -

INSPECTION/CHECK

1. General

- A. The purpose of this section is to provide a logical guide for removing the contaminants (foreign particles) from the fluid, units, and lines of the main hydraulic power system by flushing the systems with clean hydraulic fluid.
- B. This procedure may be deviated from as dictated by the individual circumstances. Hydraulic circuits that are easy to locate and follow, have been intentionally omitted from this procedure for the sake of brevity.
- C. The removal of overheated or diluted fluid, would follow generally the same procedure with the exception that the removed contaminated fluid would be caught in containers rather than recirculated through the hydraulic test stand.
- D. Before any flushing procedures are performed, personnel should read and thoroughly understand 29-00, Inspection/Check.



2. Tools and Equipment Required

- A. One hydraulic test stand capable of operating with Skydrol hydraulic fluid and fitted with 10-micron or smaller filter.
- B. Pressure and return hoses, jumper lines, and fittings as required by the following procedures.

3. Flush Main Hydraulic Power System (Beyond Dual Filter and Relief Valve)

- A. Regulator-Aspirator Pressure Line (See Figure 601.)
  - (1) Remove 1/4-inch regulator-aspirator pressure line, located between aspirator and dual filter and relief valve.
  - (2) Connect test stand pressure hose to one end of line, and connect test stand return hose to other end.
  - (3) Pressurize test stand to 200 psi maximum at 20 gpm flow.
  - (4) Flush line for five minutes.
  - (5) Depressurize test stand and remove hoses.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

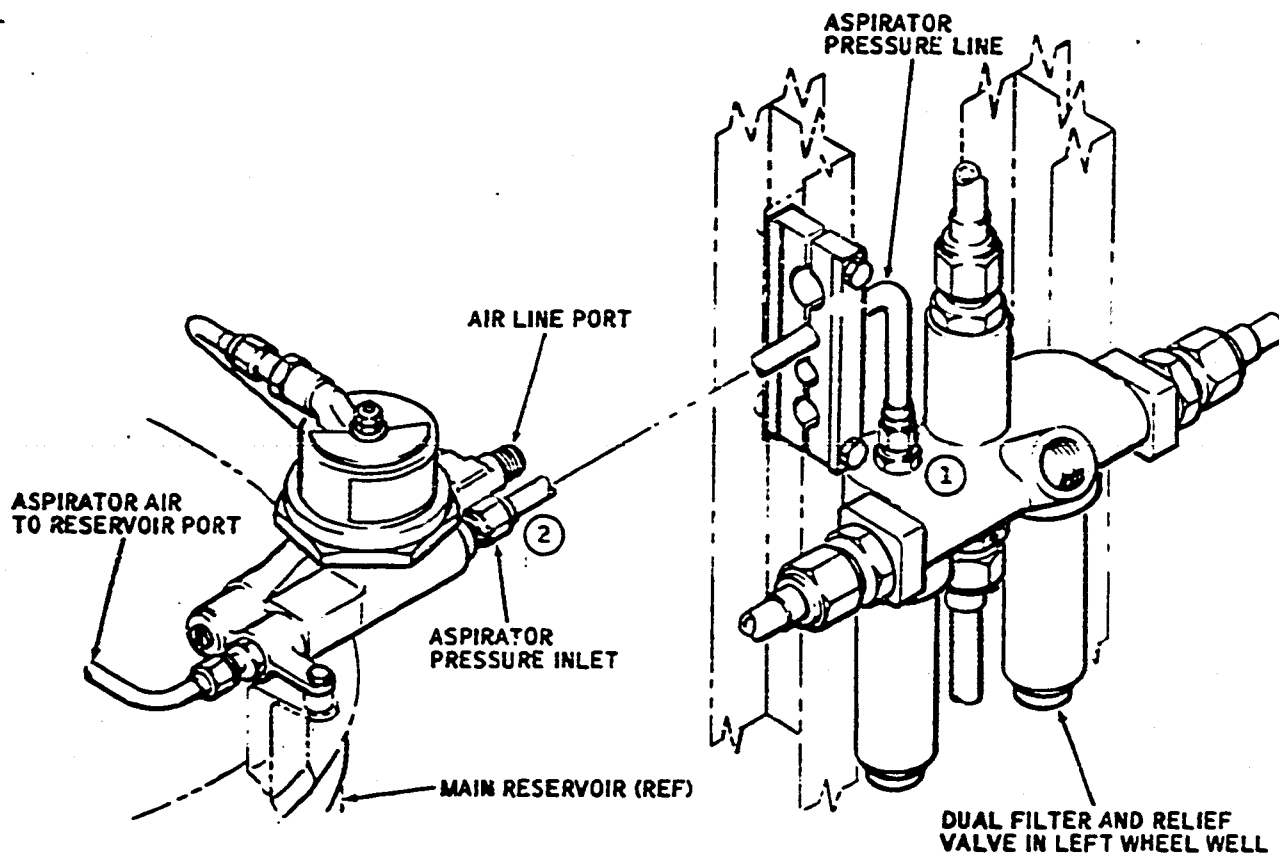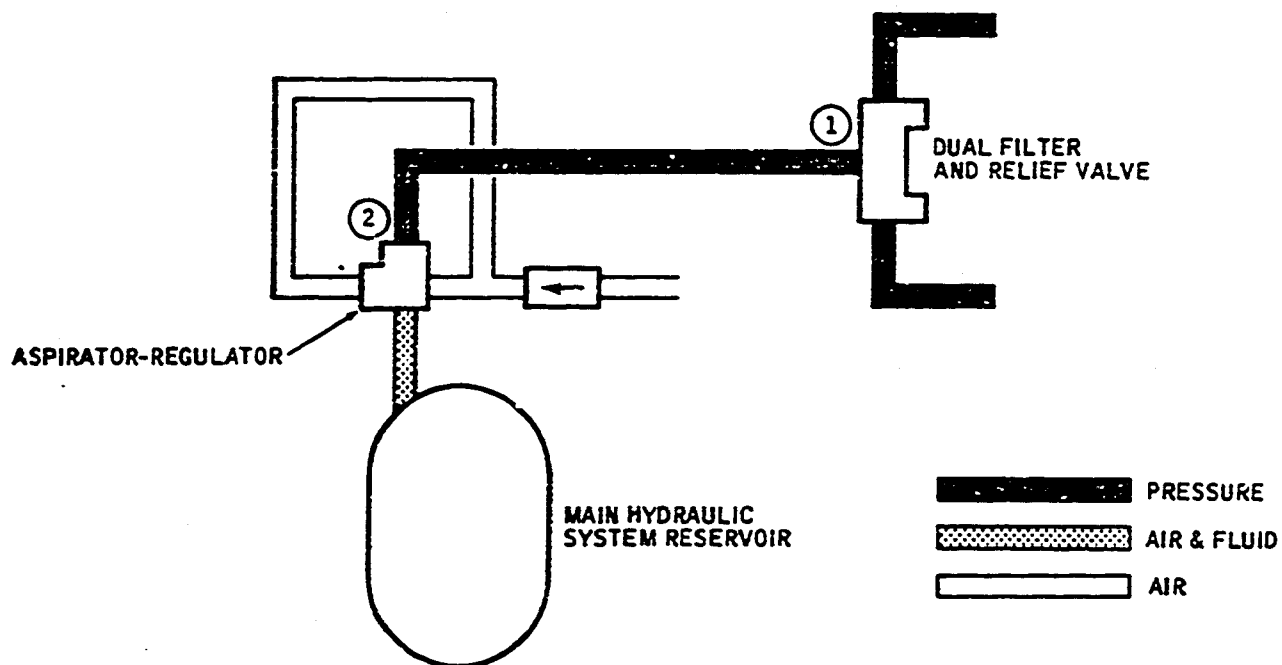

HA2-6089




DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Inspect regulator-aspirator inlet filter for contamination. Replace or clean filter as necessary.
- (7) Connect aspirator line to aspirator and to dual filter and relief valve.

B. Empennage Pressure and Return Lines (See Figures 602 Through 604.)

NOTE: This procedure covers the lines from the dual filter and relief valve (outlet side) to the rudder and horizontal stabilizer filter, located in the pressure line in the empennage, and the B-return and low-pressure return lines from the empennage bulkhead back to the left wheel well.

- (1) Disconnect pressure line from check valve, located on top side of dual filter and relief valve. Connect this line to test stand pressure hose.
- (2) Inspect, clean, and/or replace check valve.
- (3) Place system selector valve in general system (normal) position.

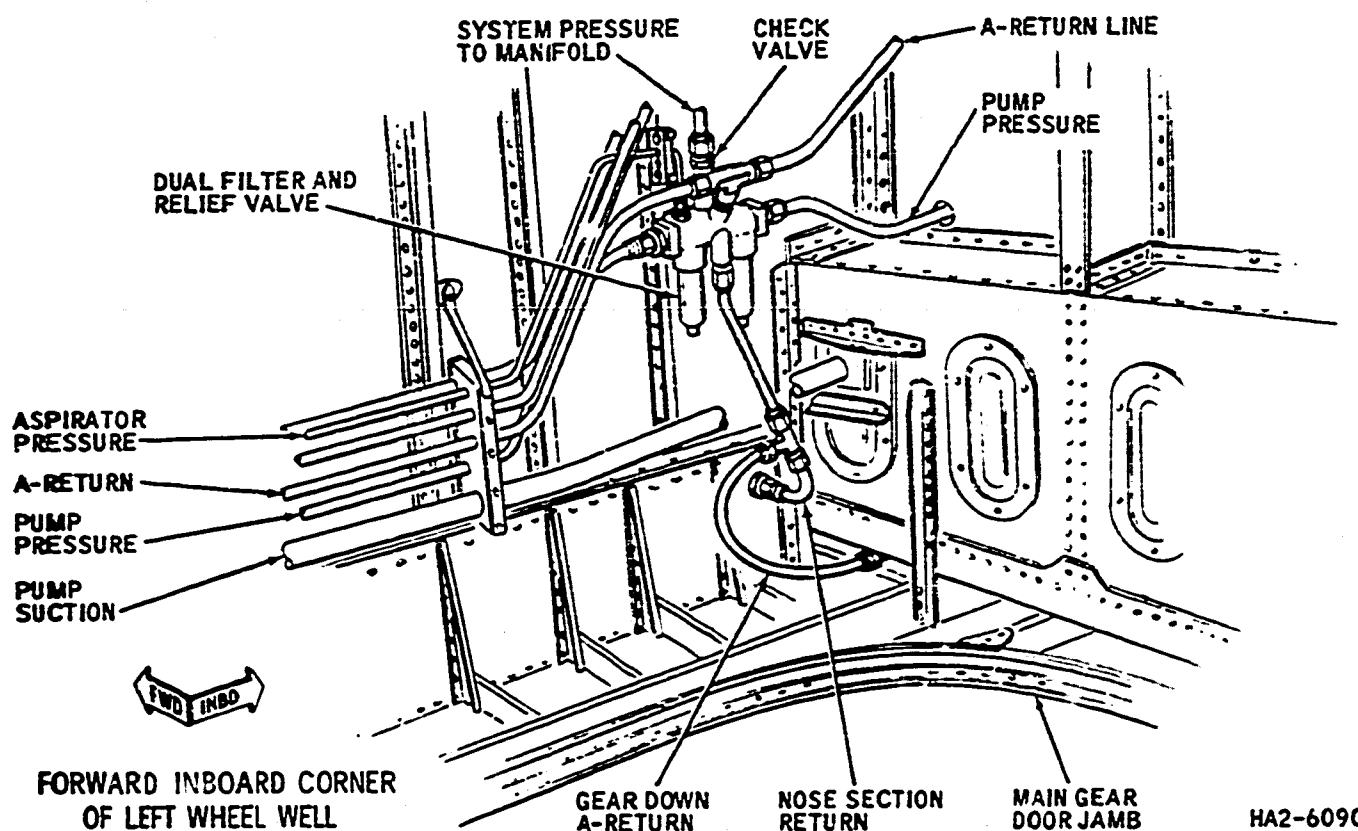



Flushing Procedure Line Connection Locations  
Figure 602

Nov 1/69

29-02  
CODE 1  
Page 603

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

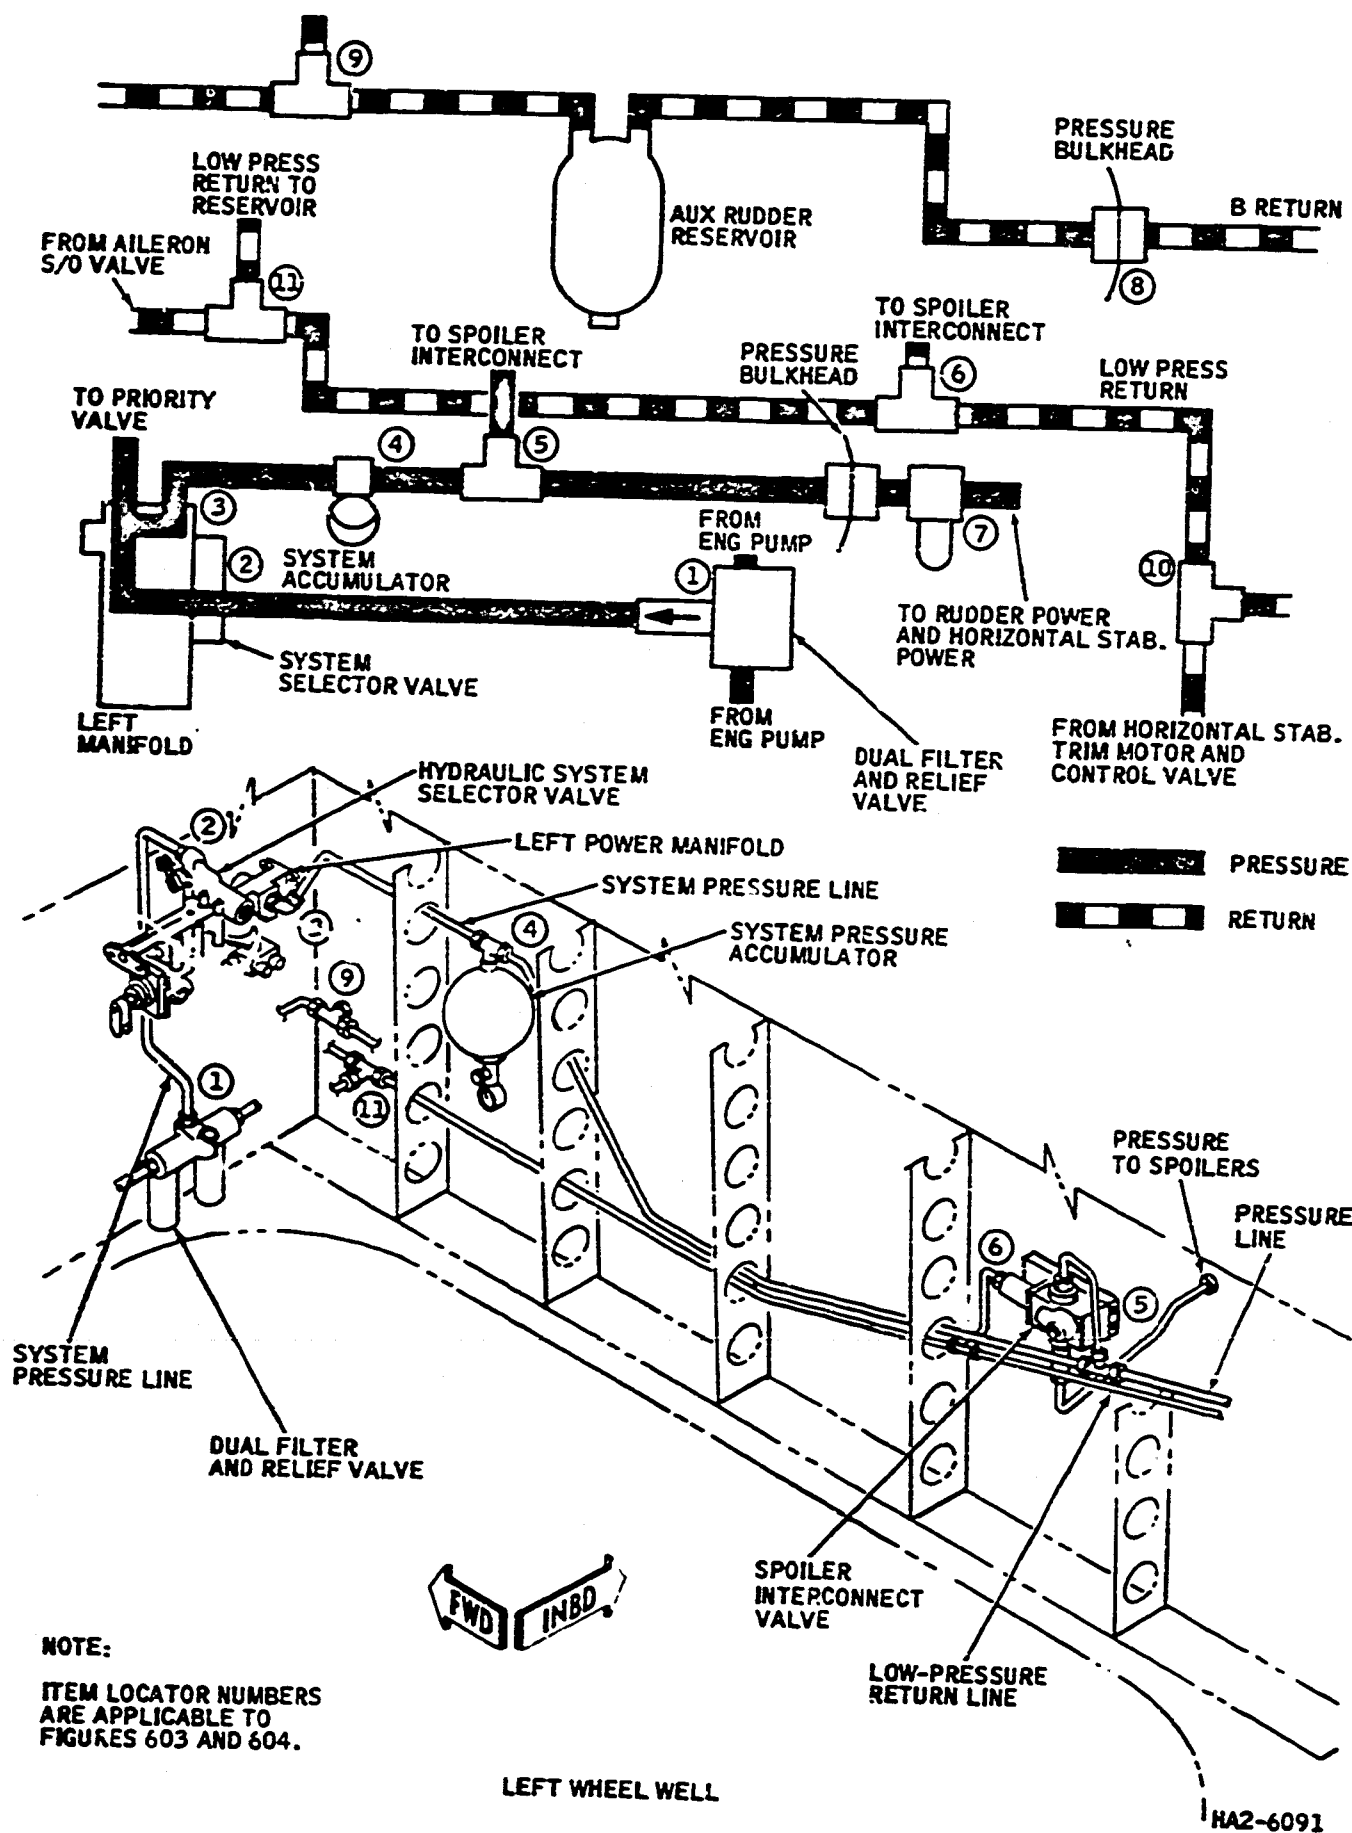

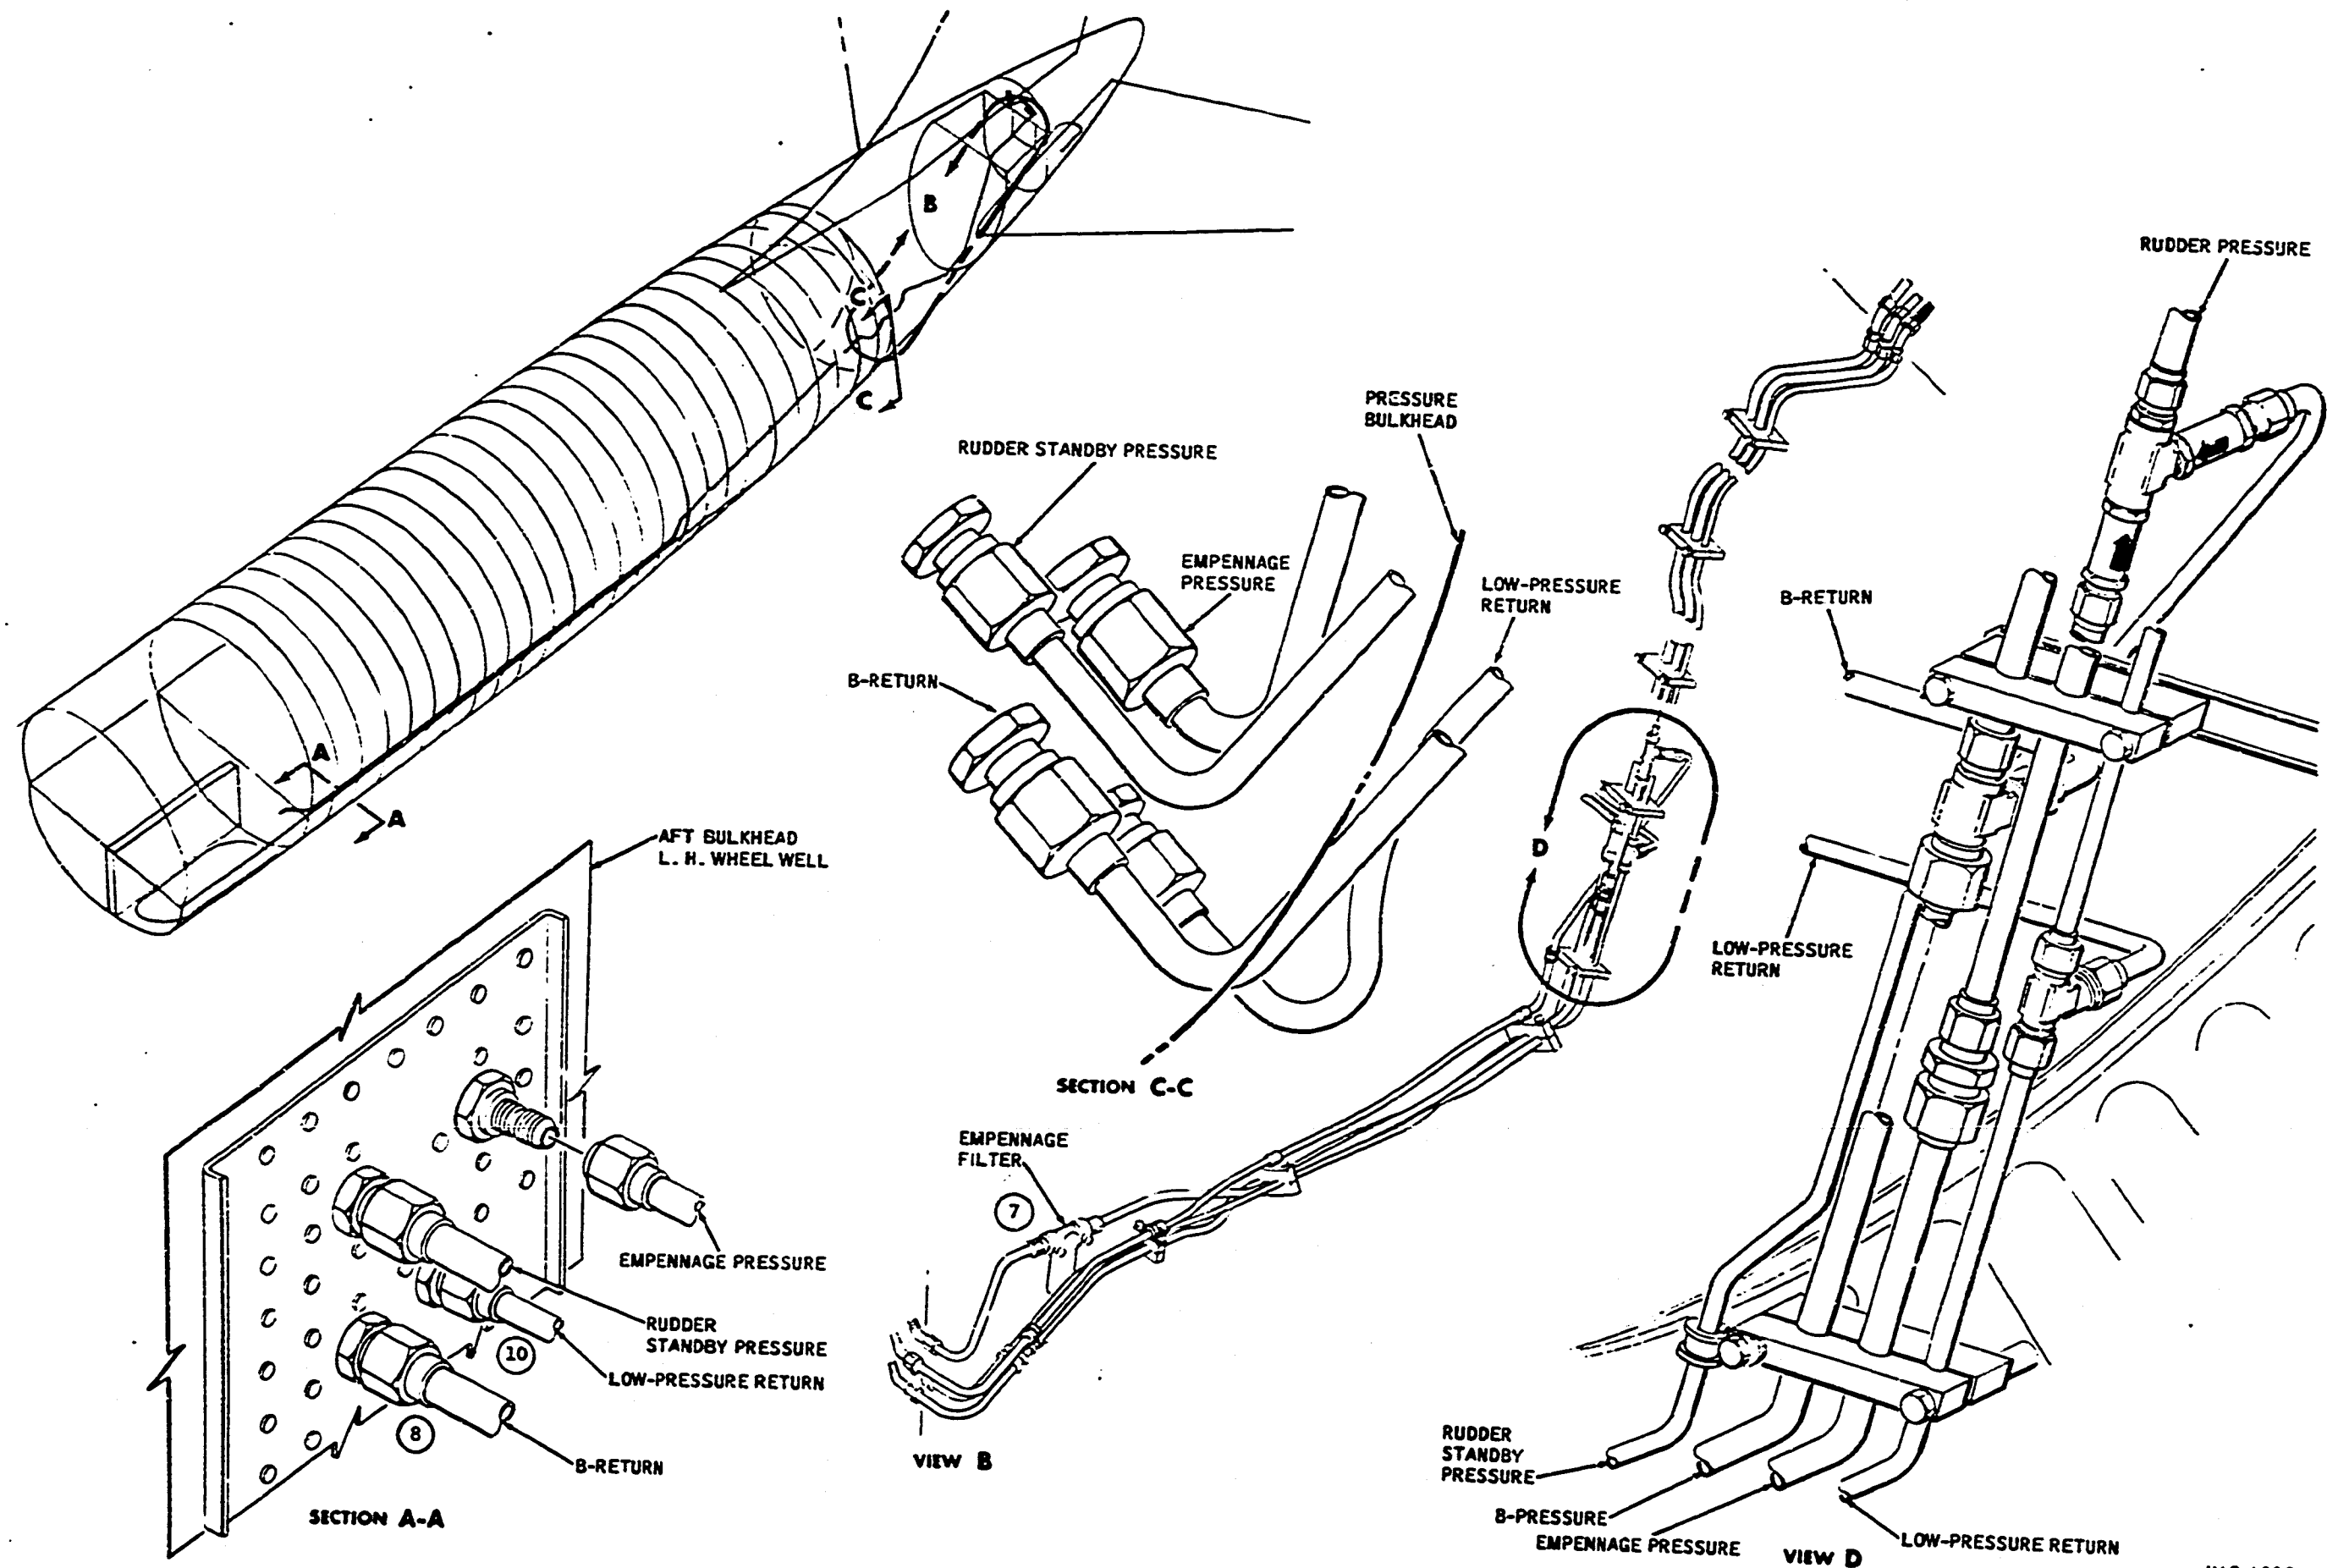

Flushing Procedure Line Connection Locations  
 Figure 604

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (4) Disconnect lines which run from tees in low-pressure return line and empennage pressure line to spoiler interconnect valve. Cap tees. Spoiler interconnect valve is located on inboard side of left wheel well.
- (5) In empennage, disconnect pressure line at empennage filter. Install jumper between this line and B-return line at pressure bulkhead.
- (6) Disconnect empennage B-return line at tee fitting in B-return line, located below left power manifold. Connect aft line to test stand return hose. Cap tee fitting.
- (7) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (8) Flush circuit for five minutes.
- (9) Depressurize test stand.
- (10) In empennage, disconnect jumper line from B-return line, and connect to low-pressure return line.
- (11) Disconnect 1/4-inch low-pressure line (empennage drain) from tee fitting in low-pressure return line (case drain), located to left of centerline of airplane and aft of rear spar.
- (12) Disconnect test stand return hose from B-return hose, and connect it to low-pressure return line located inboard of dual filter and relief valve.
- (13) Repeat Steps (8 through 10).
- (14) Clean or replace empennage filter element and bowl.
- (15) Inspect, clean, and/or replace hydraulic system accumulator.
- (16) Restore all lines and units to original configuration.

NOTE: For continuation of flushing rudder and horizontal stabilizer systems, refer to 29-05.

C. Aileron Pressure and Return Lines (See Figure 605.)

- (1) Disconnect aileron pressure line at inboard port of left aileron filter, and disconnect aileron B-return line from aileron swivel gland. Connect these two lines together with jumper.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

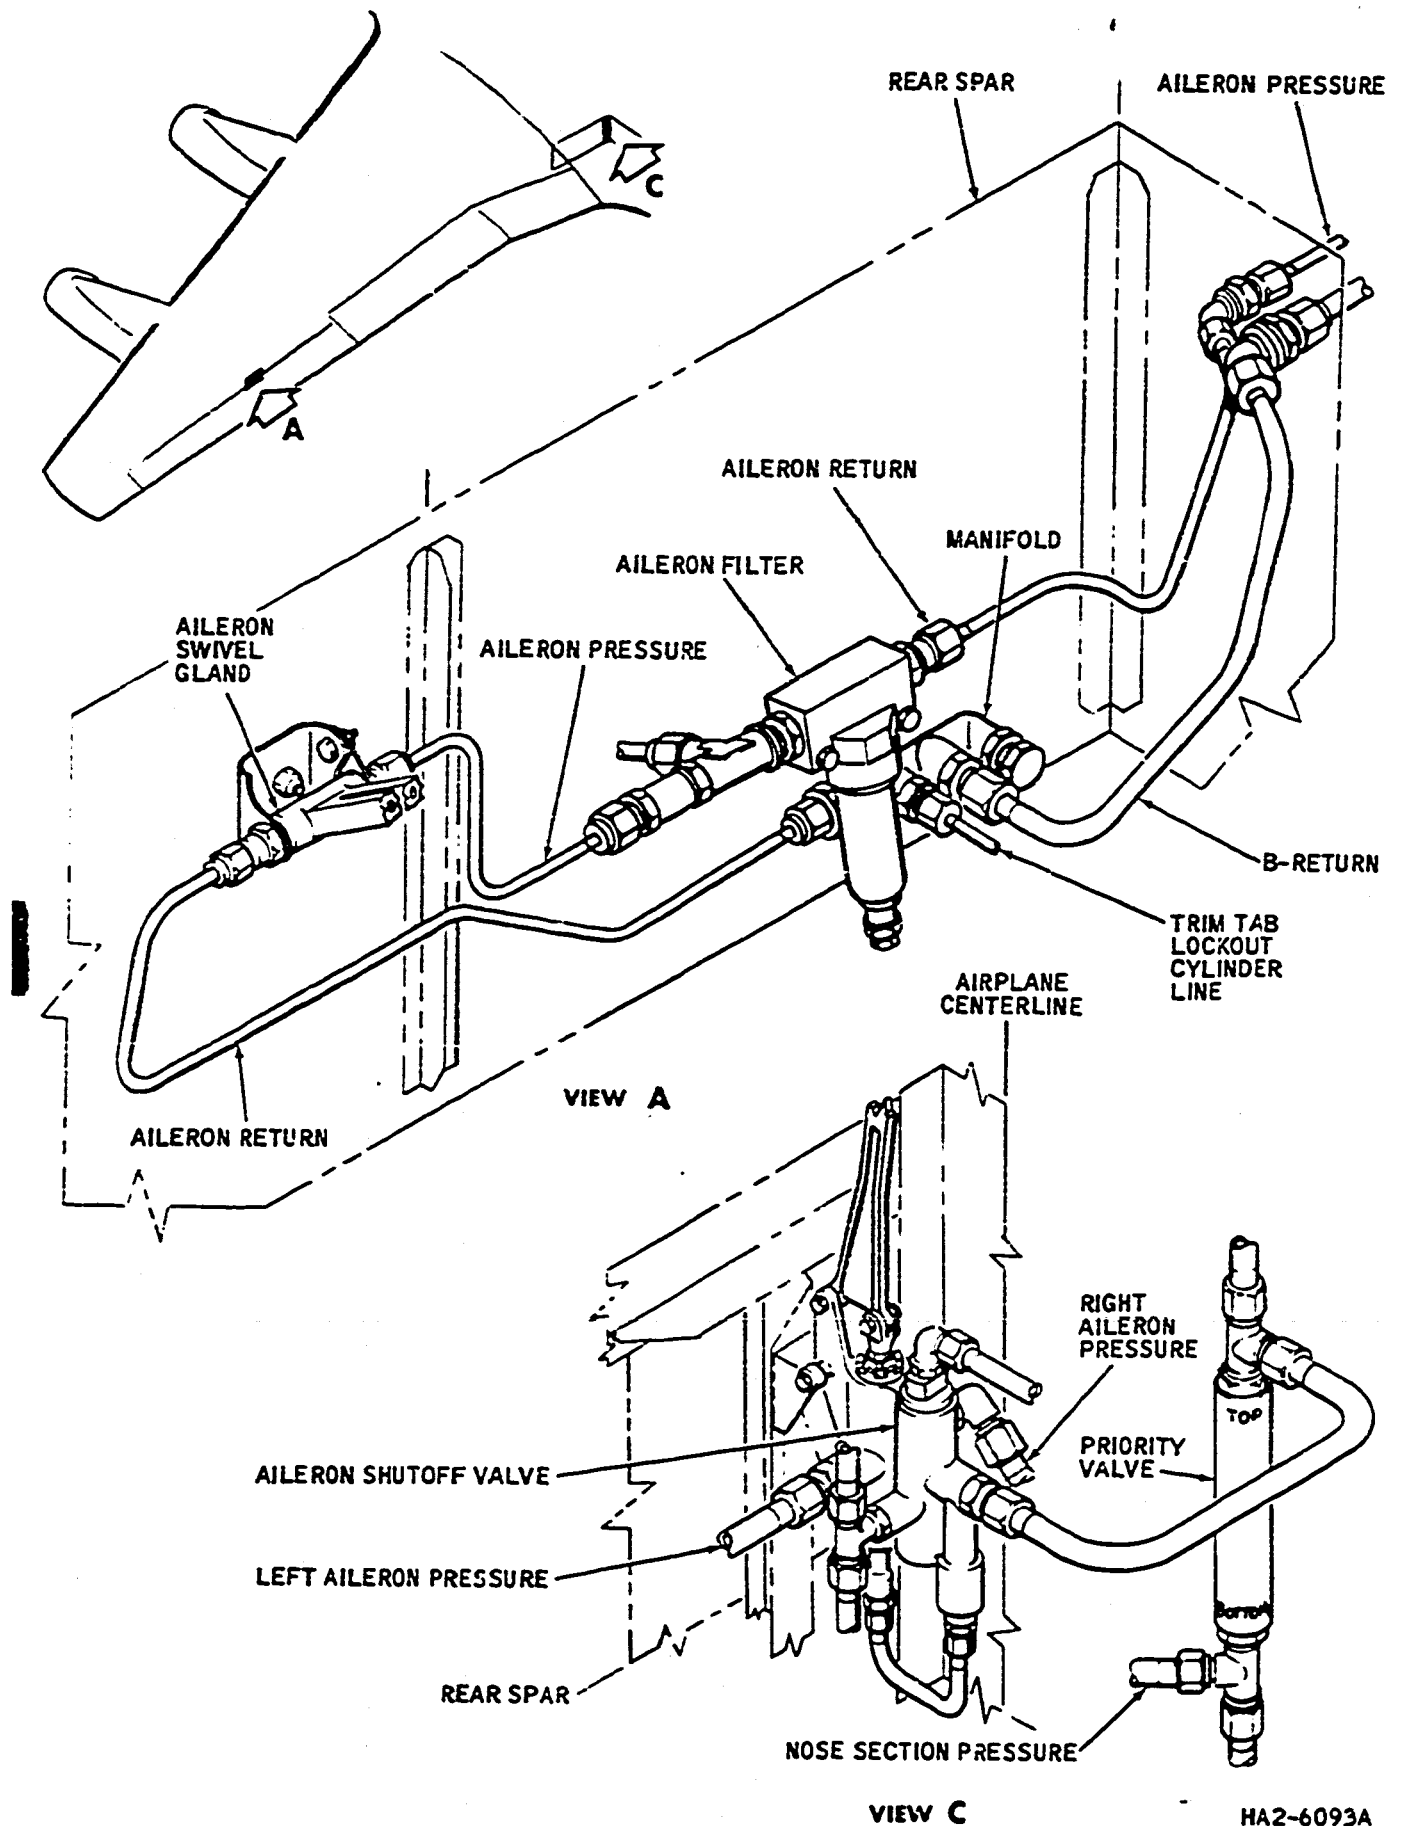

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Disconnect left aileron pressure line at aileron shutoff valve, located in left wheel well. Connect this line to test stand pressure hose.
- (3) Disconnect aileron B-return line from cross fitting at B-return port of reservoir. Connect this line to test stand return hose.
- (4) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (5) Flush circuit for five minutes.
- (6) Depressurize test stand.
- (7) Disconnect pressure line at inboard port of right aileron filter, and disconnect aileron A-return line from aileron swivel gland. Connect these two lines together.
- (8) Disconnect right aileron pressure line at aileron shutoff valve, located in left wheel well. Connect line to test stand pressure hose.
- (9) Disconnect aileron A-return line from tee at the bottom of right power manifold, located in right wheel well. Connect line to test stand return hose.
- (10) Repeat Steps (5 through 7) for these lines.
- (11) Remove, inspect, clean, and/or replace priority valve and fittings, located on bottom of the left power manifold.
- (12) Restore all lines and units to original configuration.
- (13) Clean and/or replace aileron filter elements.

NOTE: For continuation of flushing aileron system components, refer to 29-05.

D. Nose System Pressure and Return Lines (See Figure 606.)

- (1) In nosewheel well, disconnect 1/4-inch return line which runs from nose gear control valve to bulkhead tee fitting in A-return line, at tee. Cap tee.
- (2) Disconnect pressure line leading into nose gear control valve at valve. In this same line, replace check valve with jumper line.
- (3) Disconnect pressure line which runs to tee in pressure accumulator, from pressure bulkhead tee at rear of wheel well.
- (4) Connect two open lines from Step (2 and 3) with jumper.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (5) Disconnect at tee, pressure line which runs from reserve pressure accumulators to tee near centerline of airplane. Cap tee.
  - (6) Disconnect pressure line leading into reserve accumulator shutoff valve.
  - (7) Disconnect return line from tee in steering relief valve. Connect this line to pressure line at shutoff valve with jumper line.
  - (8) On freighter type airplanes, disconnect cargo door pressure line at tee fitting in nose system pressure line. Cap tee and cargo door pressure line.
- NOTE: The cargo door pressure line tee fitting is located in the forward left side of the forward baggage compartment.
- (9) In left main gear wheel well, disconnect nose system pressure line from side port of tee in priority valve. Connect line to test stand pressure hose.
  - (10) Disconnect nose system A-return line from bottom of dual filter and relief valve. Connect line to test stand return hose.
  - (11) Disconnect main gear control valve A-return line from tee in nose gear A-return line. Cap tee.
  - (12) Pressurize test stand to 200 psi maximum at 20 gpm flow.
  - (13) Flush circuit for five minutes.
  - (14) Depressurize test stand.
  - (15) Remove, inspect, clean, and/or replace miniature check valve, located in nose system return port of dual filter and relief valve.
  - (16) Repeat Step (15), inspection etc., for following items:
    - (a) Two check valves jumpered in nosewheel well.
    - (b) Two reserve pressure accumulators and attaching lines
    - (c) System pressure transmitter and attaching lines.
  - (17) Restore all lines and units to original configuration.

NOTE: For continuation of flushing of nose gear system, refer to 29-04.

**E. Flush A-Return Line (See Figure 607.)**

- (1) Disconnect aileron A-return line from bulkhead elbow in A-return line, located below left power manifold. Cap elbow.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

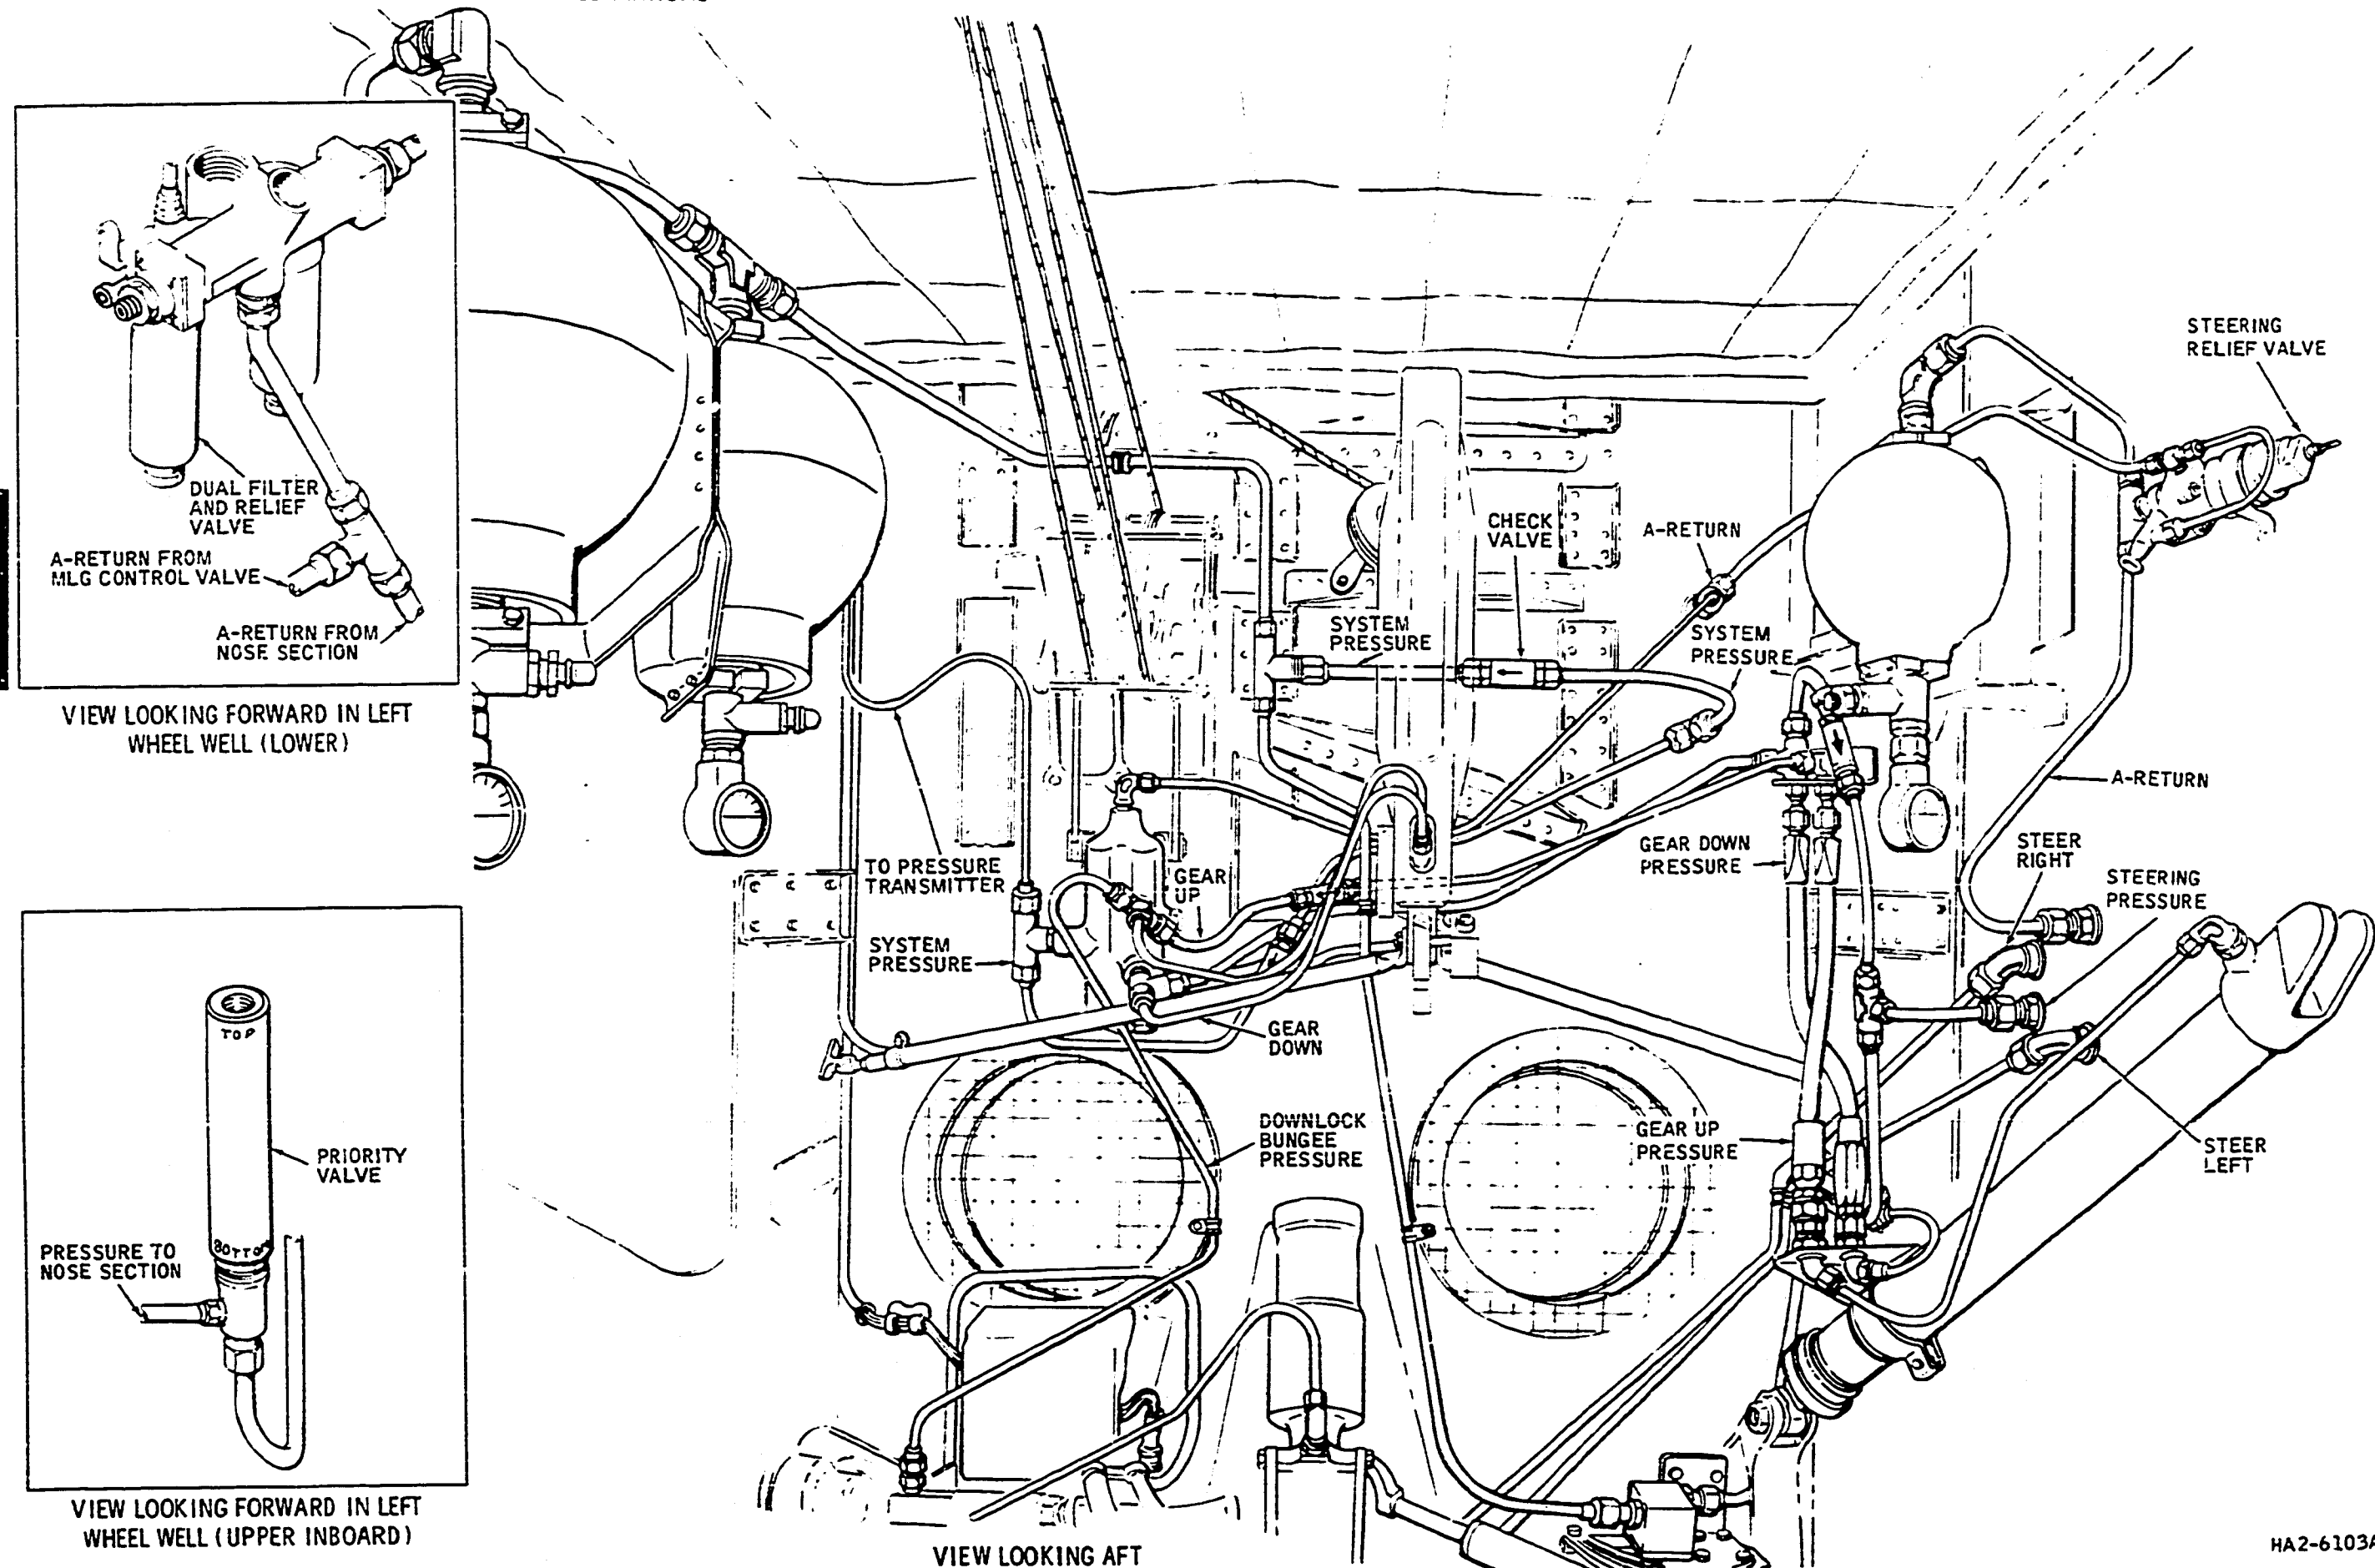

Flushing Procedure Line Connection Locations  
 Figure 606

29-02  
 CODE 1  
 Page 611


Nov 1/69

Printed in U.S.A.

HA2-6103A



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

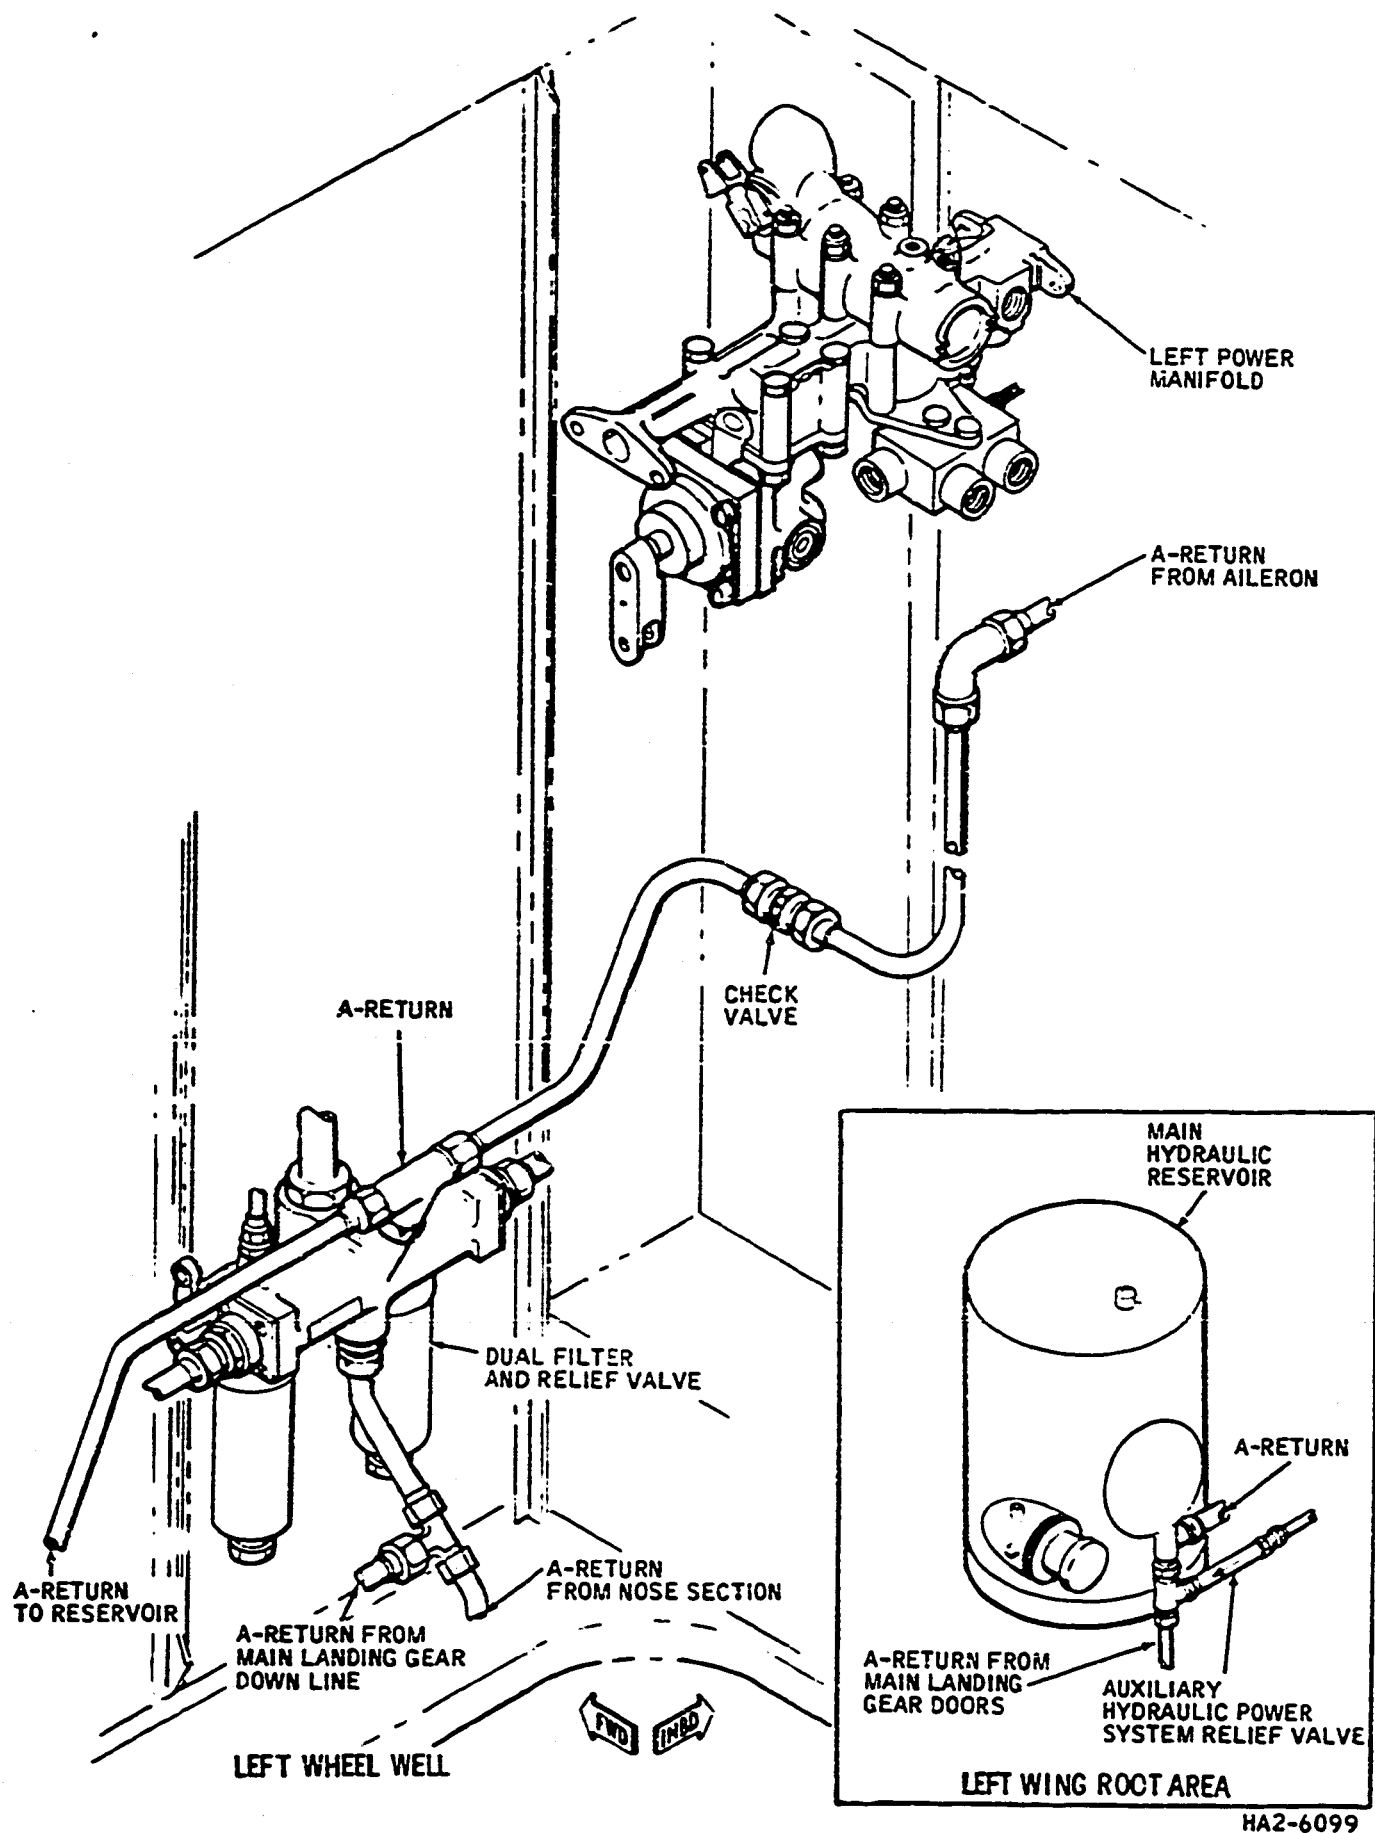

Flushing Procedure Line Connection Locations  
 Figure 607

Feb 1/69

29-02  
 CODE 1  
 Page 613



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Connect line to test stand pressure hose.
- (3) Place jumper around miniature check valve, located in A-return line under left power manifold.
- (4) Disconnect A-return lines from tee in dual filter and relief valve. Install jumper between these lines.
- (5) Disconnect A-return line from reservoir fittings. Connect line to test stand return hose.
- (6) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (7) Flush circuit for five minutes.
- (8) Depressurize test stand.
- (9) Inspect, clean, and/or replace miniature check valve which was removed in Step (3).
- (10) Restore all lines and units to original configuration.

F. Flush B-Return Line (See Figure 608.)

- (1) Disconnect B-return line from miniature check valve installed in right power manifold. Connect this line to test stand pressure hose.
- (2) Disconnect empennage return line from tee in B-return line. Cap tee.
- (3) Disconnect left antiskid return line, and left aileron return line from B-return cross fitting located adjacent to main reservoir. Cap two openings.
- (4) Disconnect B-return line from check valve in reservoir B port. Connect line to test stand return hose.
- (5) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (6) Flush circuit for five minutes.
- (7) Depressurize test stand.
- (8) Remove check valve from reservoir B port, and miniature check valve (Step 1.). Inspect, clean, and/or replace check valves.
- (9) Restore all lines and units to original configuration.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

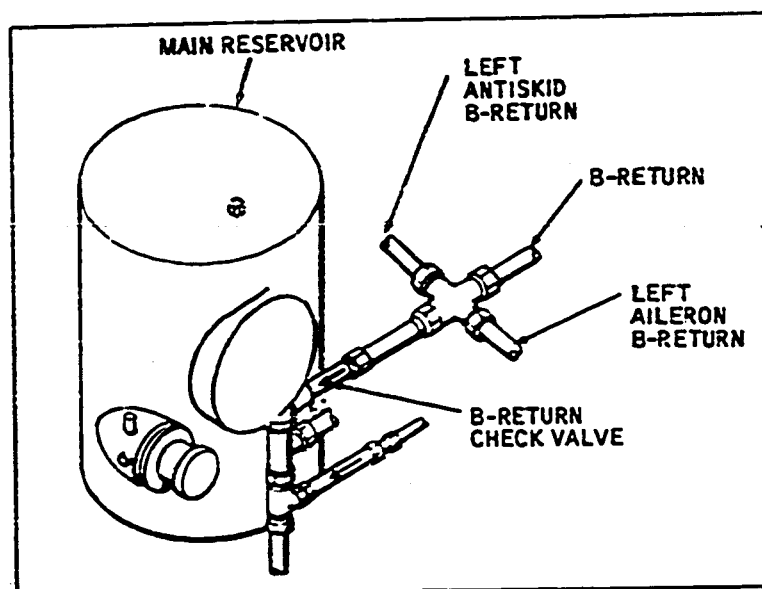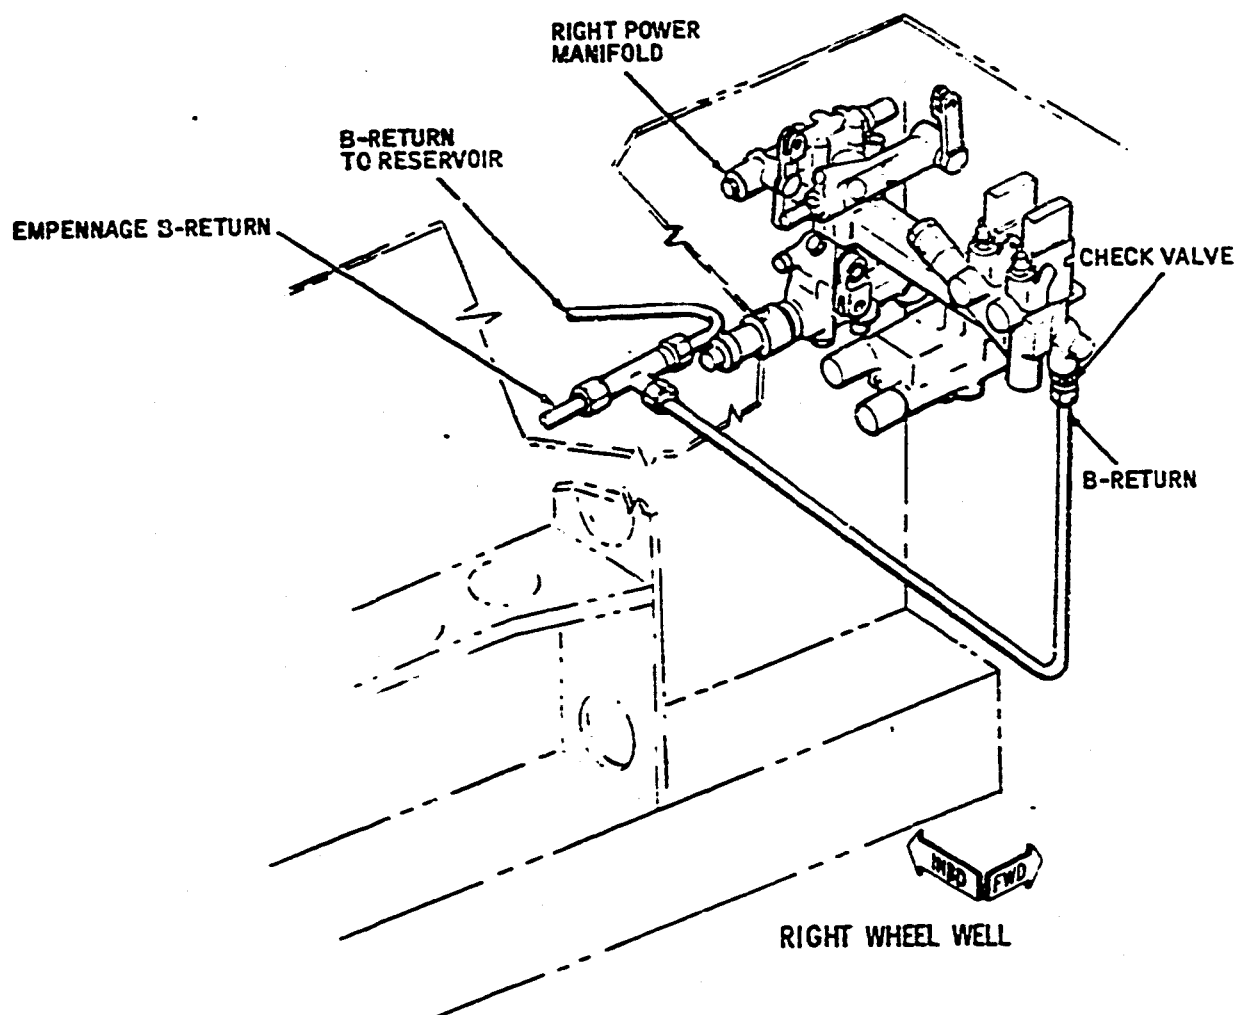

LEFT WING ROOT AREA


HA2-6100

Flushing Procedure Line Connection Locations  
 Figure 608

Feb 1/69

29-02  
 CODE 1  
 Page 615

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

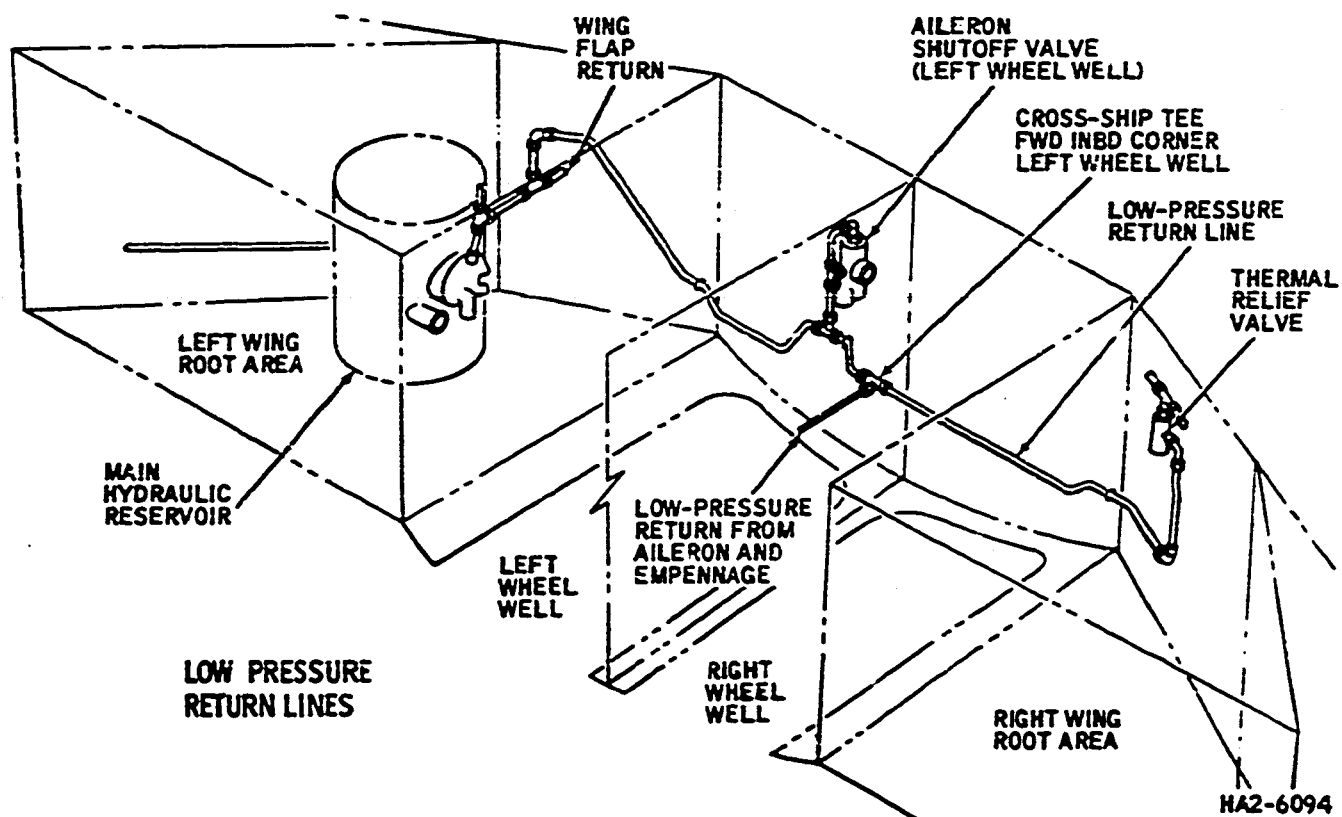

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

G. Power Manifolds

- (1) If contamination downstream of the dual filter and relief valve is general, the right and left power manifolds with attaching valves must be removed, inspected, cleaned, and/or replaced.

H. Flush Low-Pressure Return Lines (See Figure 609.)

- (1) In right wing root area, disconnect low-pressure return line from wing flap thermal relief valve. Connect this line to test stand pressure hose. Thermal relief valve is located on the rear spar.
- (2) In left wheel well, below dual filter and relief valve, disconnect low-pressure return line from top of tee which connects aileron valve drain and empennage drain returns to cross-ship low-pressure return. Cap tee.
- (3) Disconnect low-pressure return line from tee fitting that joins wing flap return at main reservoir. Cap tee, and connect line to test stand return hose.
- (4) Pressurize test stand to 200 psi at 20 gpm flow.
- (5) Flush circuit for five minutes.
- (6) Depressurize test stand.
- (7) Remove line from tee in aileron shutoff valve to tee fitting in low-pressure return line, in left wheel well. Flush line.
- (8) Remove, clean and/or replace aileron shutoff valve and thermal relief valve.
- (9) Restore all lines and units to original configuration.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN HYDRAULIC POWER SYSTEM (BEYOND DUAL FILTER AND RELIEF VALVE) -

INSPECTION/CHECK

1. General

- A. The purpose of this section is to provide a logical guide for removing the contaminants (foreign particles) from the fluid, units, and lines of the main hydraulic power system by flushing the systems with clean hydraulic fluid.
- B. This procedure may be deviated from as dictated by the individual circumstances. Hydraulic circuits that are easy to locate and follow, have been intentionally omitted from this procedure for the sake of brevity.
- C. The removal of overheated or diluted fluid, would follow generally the same procedure with the exception that the removed contaminated fluid would be caught in containers rather than recirculated through the hydraulic test stand.
- D. Before any flushing procedures are performed, personnel should read and thoroughly understand 29-00, Inspection/Check.

2. Tools and Equipment Required

- A. One hydraulic test stand capable of operating with Skydrol hydraulic fluid, and fitted with 10-micron or smaller filter.
- B. Pressure and return hoses, jumper lines, and fittings as required by the following procedures.

3. Flush Main Hydraulic Power System (Beyond Dual Filter and Relief Valve)

A. Regulator-Aspirator Pressure Line (See Figure 601.)

- (1) Remove 1/4-inch regulator-aspirator pressure line, located between aspirator and dual filter and relief valve.
- (2) Connect test stand pressure hose to one end of line, and connect test stand return hose to other end.
- (3) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (4) Flush line for five minutes.
- (5) Depressurize test stand and remove hoses.
- (6) Inspect regulator-aspirator inlet filter for contamination. Replace or clean filter as necessary.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL



(7) Connect aspirator line to aspirator and to dual filter and relief valve.

B. Empennage Pressure and Return Lines (See Figures 602 Through 604.)

NOTE: This procedure covers the lines from the dual filter and relief valve (outlet side) to the rudder and horizontal stabilizer filter, located in the pressure line in the empennage, and the B-return and low-pressure return lines from the empennage bulkhead back to the left wheel well.

- (1) Disconnect pressure line from check valve, located on top side of dual filter and relief valve. Connect this line to test stand pressure hose.
- (2) Inspect, clean, and/or replace check valve.
- (3) Place system selector valve in general system (normal) position.
- (4) Disconnect lines which run from tees in low-pressure return line and empennage pressure line to spoiler interconnect valve. Cap tees. Spoiler interconnect valve is located on inboard side of left wheel well.
- (5) In empennage, disconnect pressure line at empennage filter. Install jumper between this line and B-return line at pressure bulkhead.
- (6) Disconnect empennage B-return line at tee fitting in B-return line, located below left power manifold. Connect aft line to test stand return hose. Cap tee fitting.
- (7) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (8) Flush circuit for five minutes.
- (9) Depressurize test stand.
- (10) In empennage, disconnect jumper line from B-return line, and connect to low-pressure return line.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

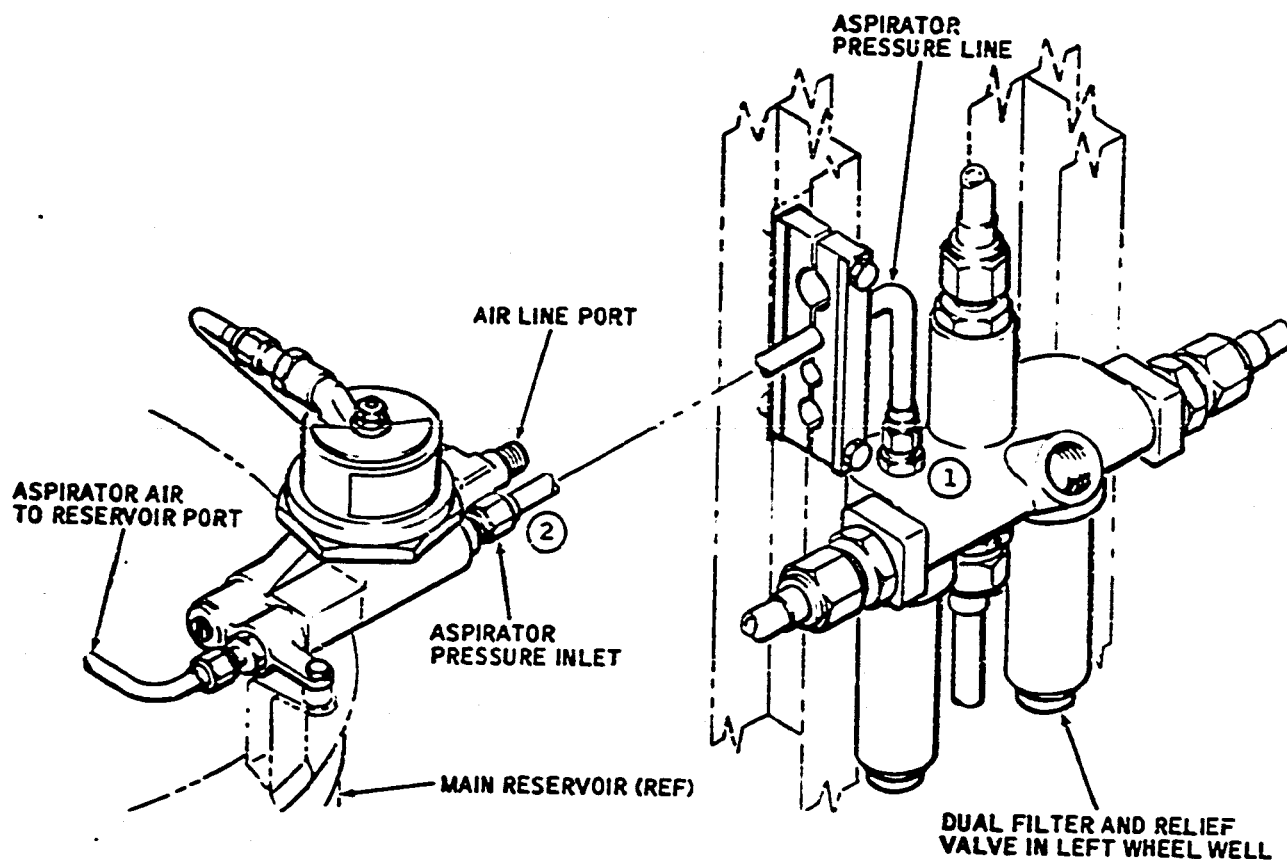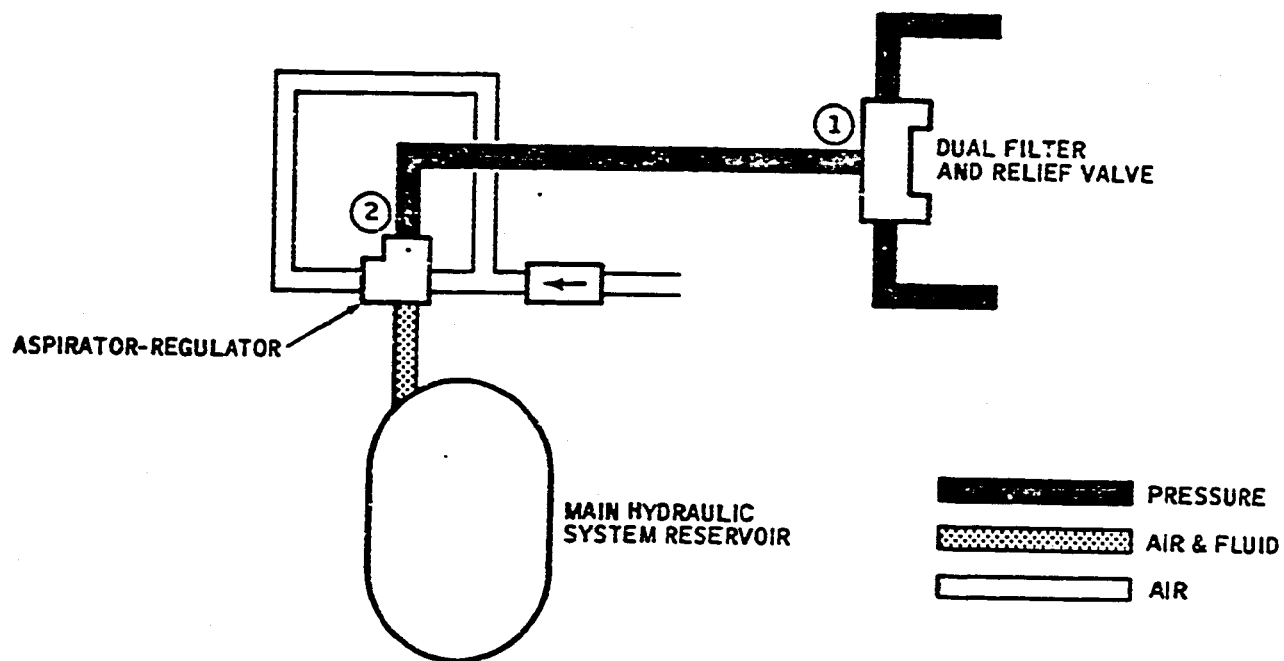

HA2-6089


Flushing Procedure Line Connection Locations  
 Figure 601

Feb 1/69

29-02  
 CODE 2  
 Page 603




DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

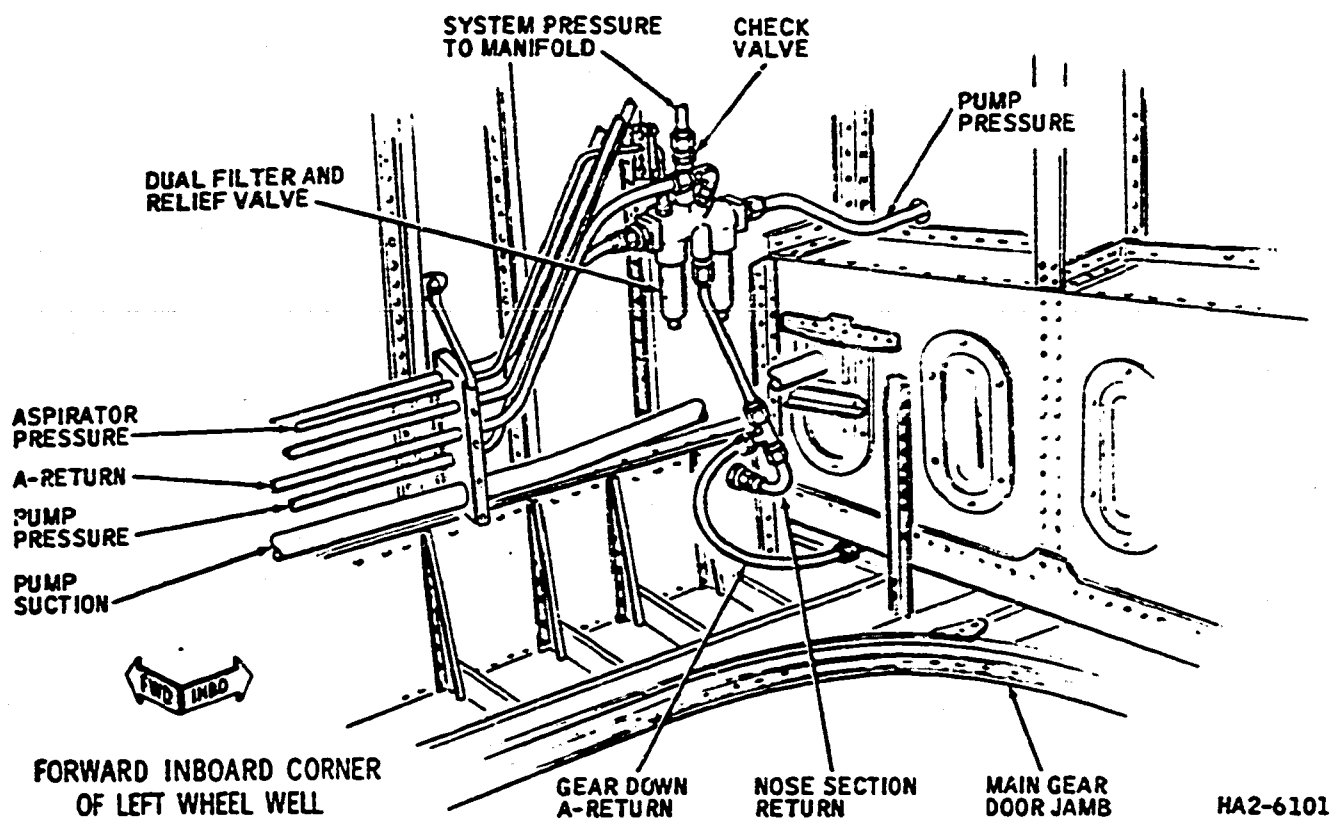

HA2-6101

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

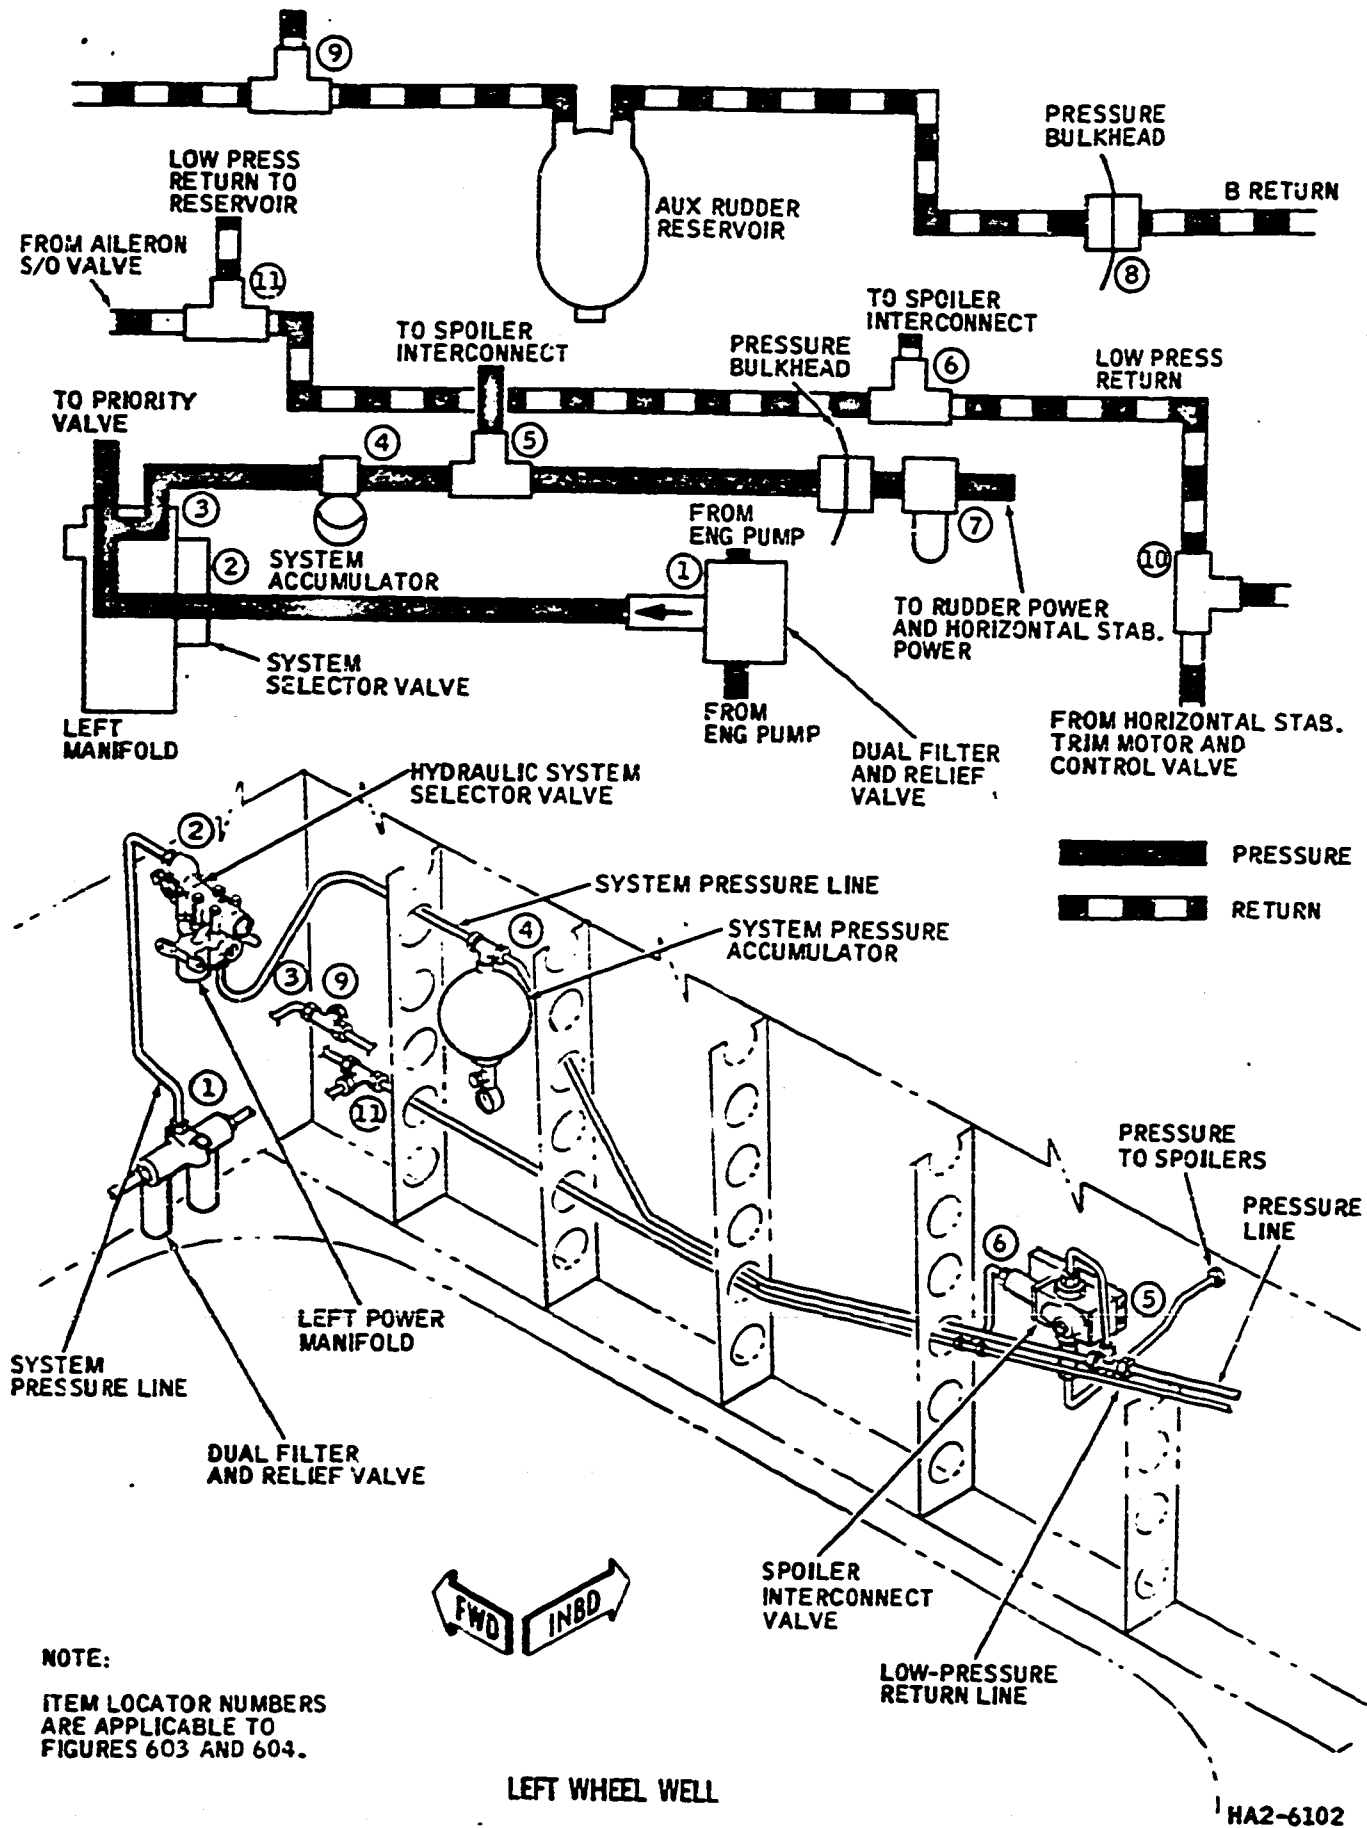


Flushing Procedure Line Connection Locations  
 Figure 603

Feb 1/69

DOUGLAS AIRCRAFT CO.  
***DC-8 SIXTY SERIES***  
MAINTENANCE MANUAL

THIS PAGE INTENTIONALLY LEFT BLANK

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

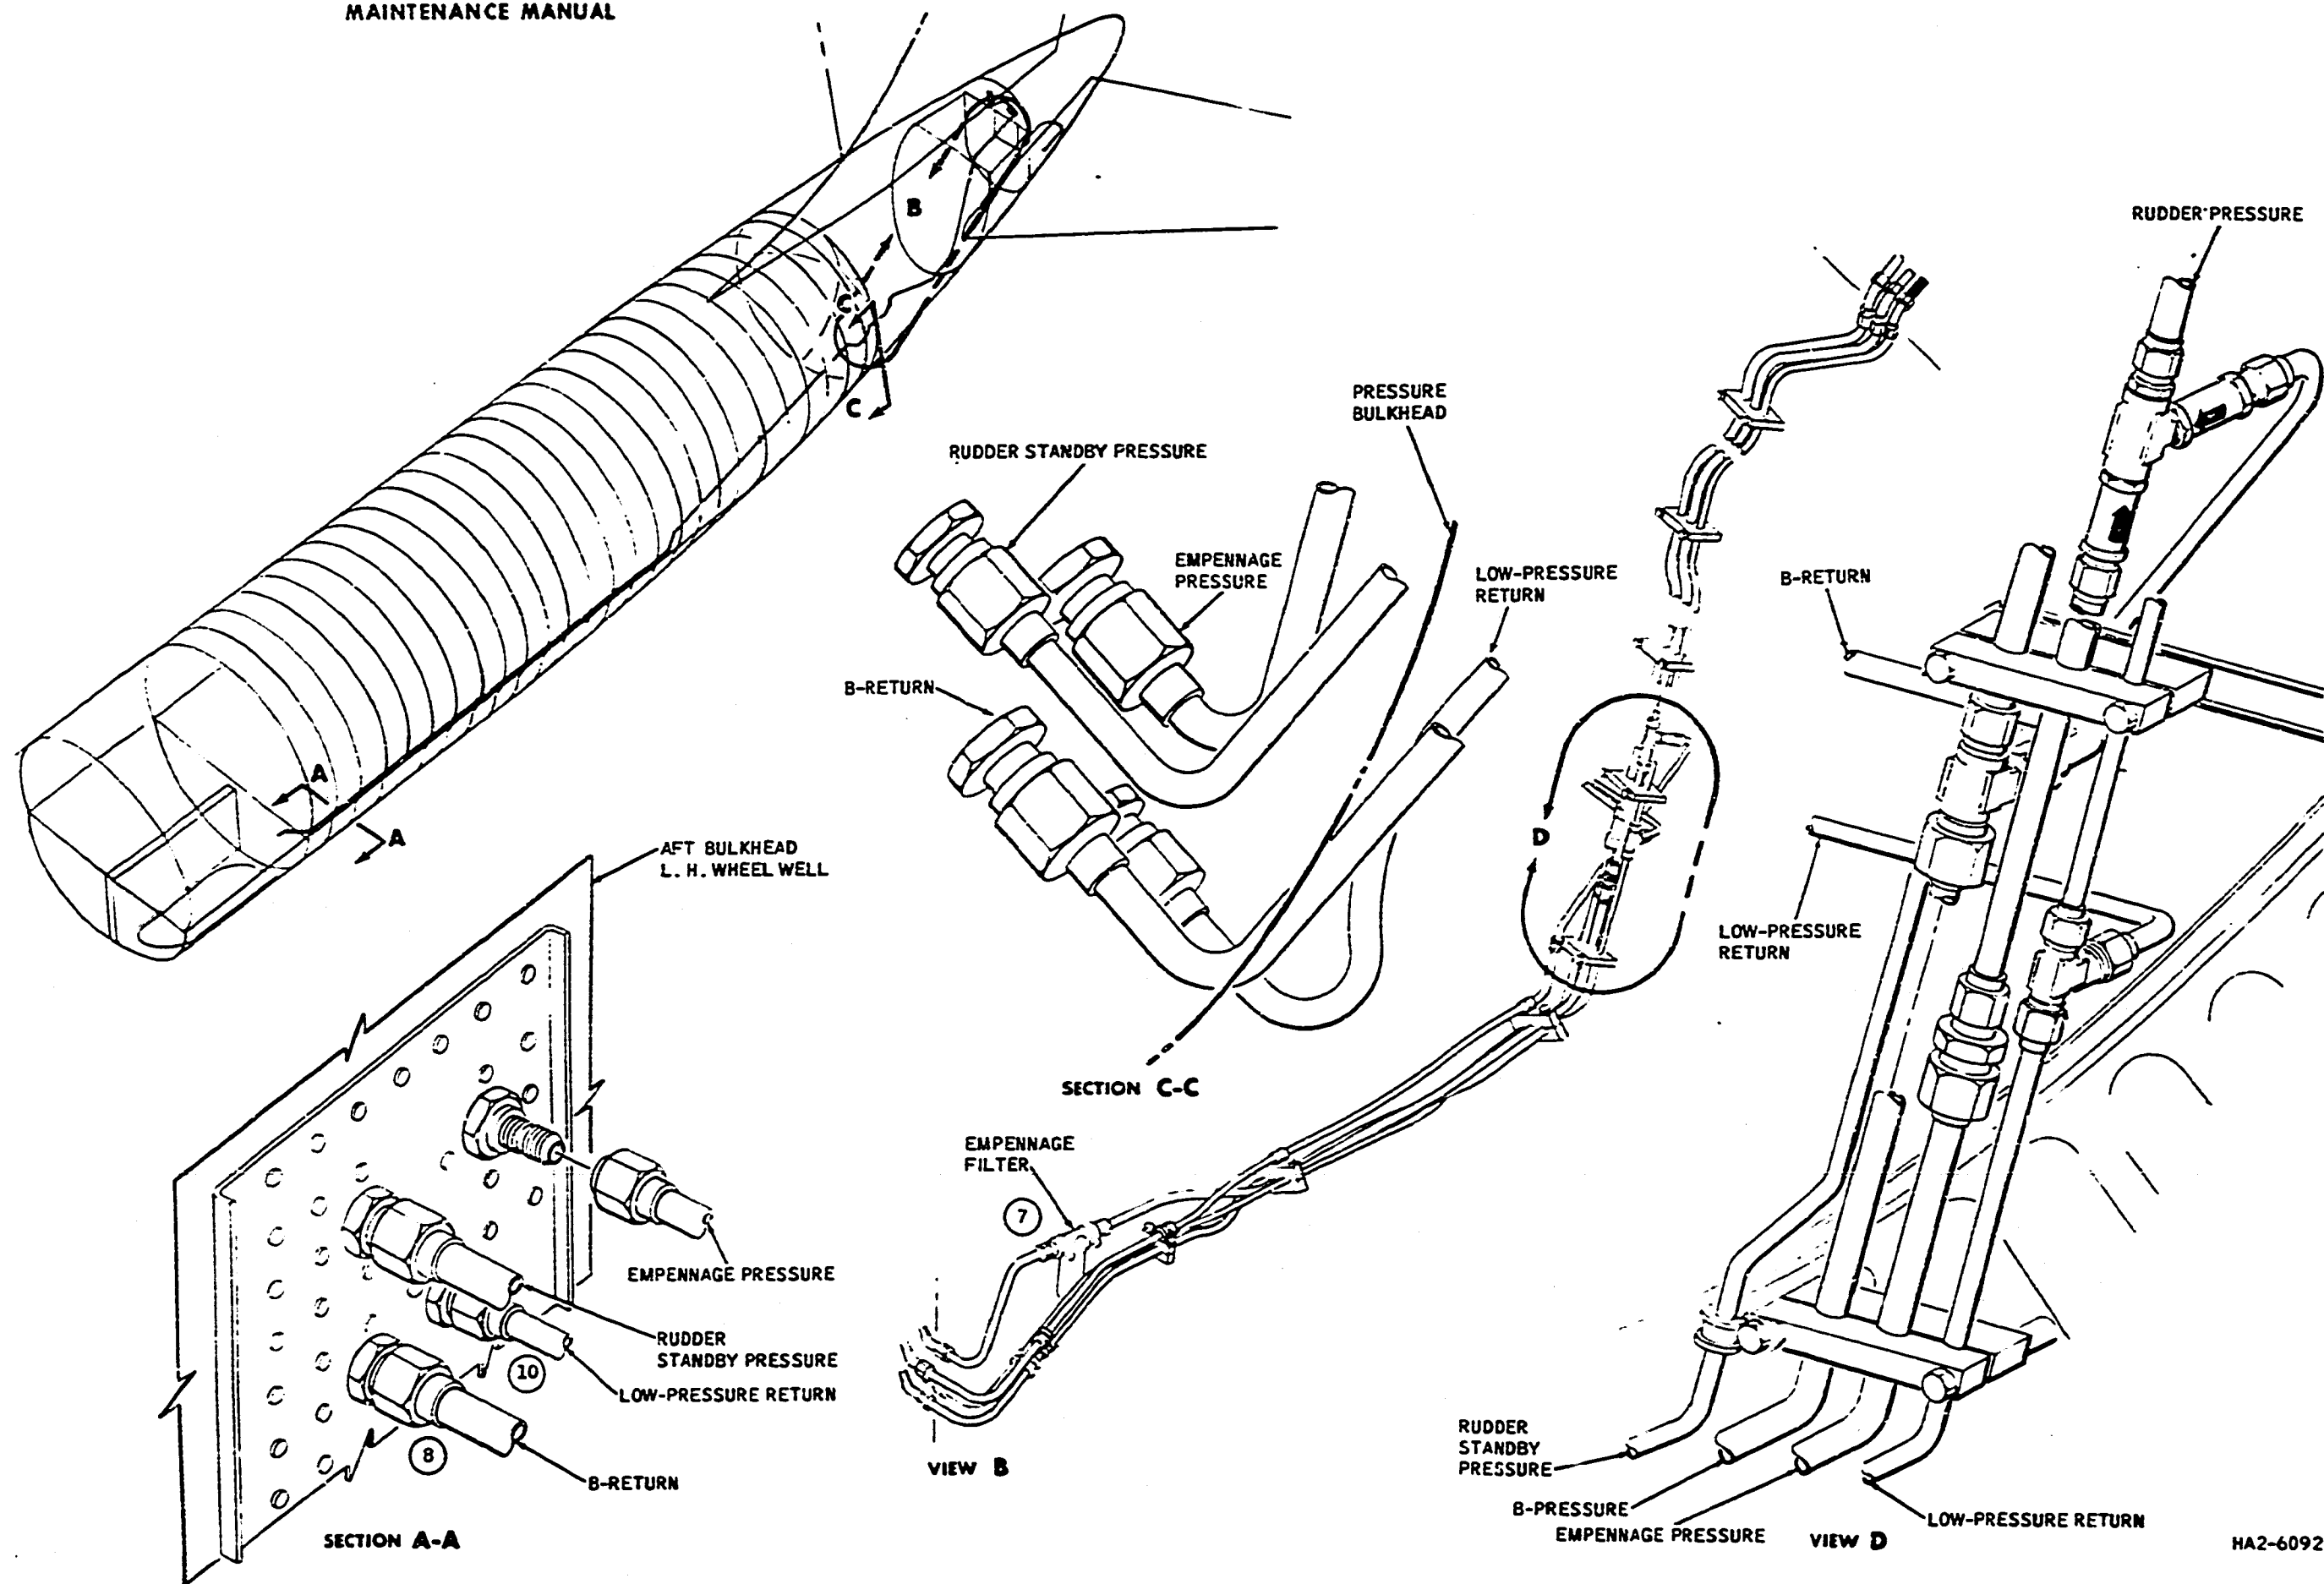

Flushing Procedure Line Connection Locations  
 Figure 604

29-02  
 CODE 2  
 Page 606A

May 1/69

Printed in U.S.A.

HA2-6092

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (11) Disconnect 1/4-inch low-pressure line (empennage drain) from tee fitting in low-pressure return line (case drain), located to left of centerline of airplane and aft of rear spar.
- (12) Disconnect test stand return hose from B-return hose, and connect it to low-pressure return line located inboard of dual filter and relief valve.
- (13) Repeat Steps (8 through 10).
- (14) Clean or replace empennage filter element and bowl.
- (15) Inspect, clean, and/or replace hydraulic system accumulator.
- (16) Restore all lines and units to original configuration.

NOTE: For continuation of flushing rudder and horizontal stabilizer systems, refer to 29-05.

C. Aileron Pressure and Return Lines (See Figures 605 and 607.)

- (1) Disconnect aileron pressure line at inboard port of left aileron filter, and disconnect aileron return line from aileron swivel gland. Connect these two lines together with jumper.
- (2) Disconnect lines from both ends of check valve in outlet line of thrust reverser reservoir. Connect jumper line between these lines (see Figure 607).
- (3) Disconnect left aileron pressure line at aileron shutoff valve located in left wheel well (see Figure 605). Connect this line to test stand pressure hose.
- (4) Disconnect A-return line at reservoir. Connect this line to test stand return hose.
- (5) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (6) Flush circuit for five minutes.
- (7) Depressurize test stand.
- (8) Disconnect pressure line at inboard port of right aileron filter, and disconnect aileron return line from aileron swivel gland. Connect these two lines together.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

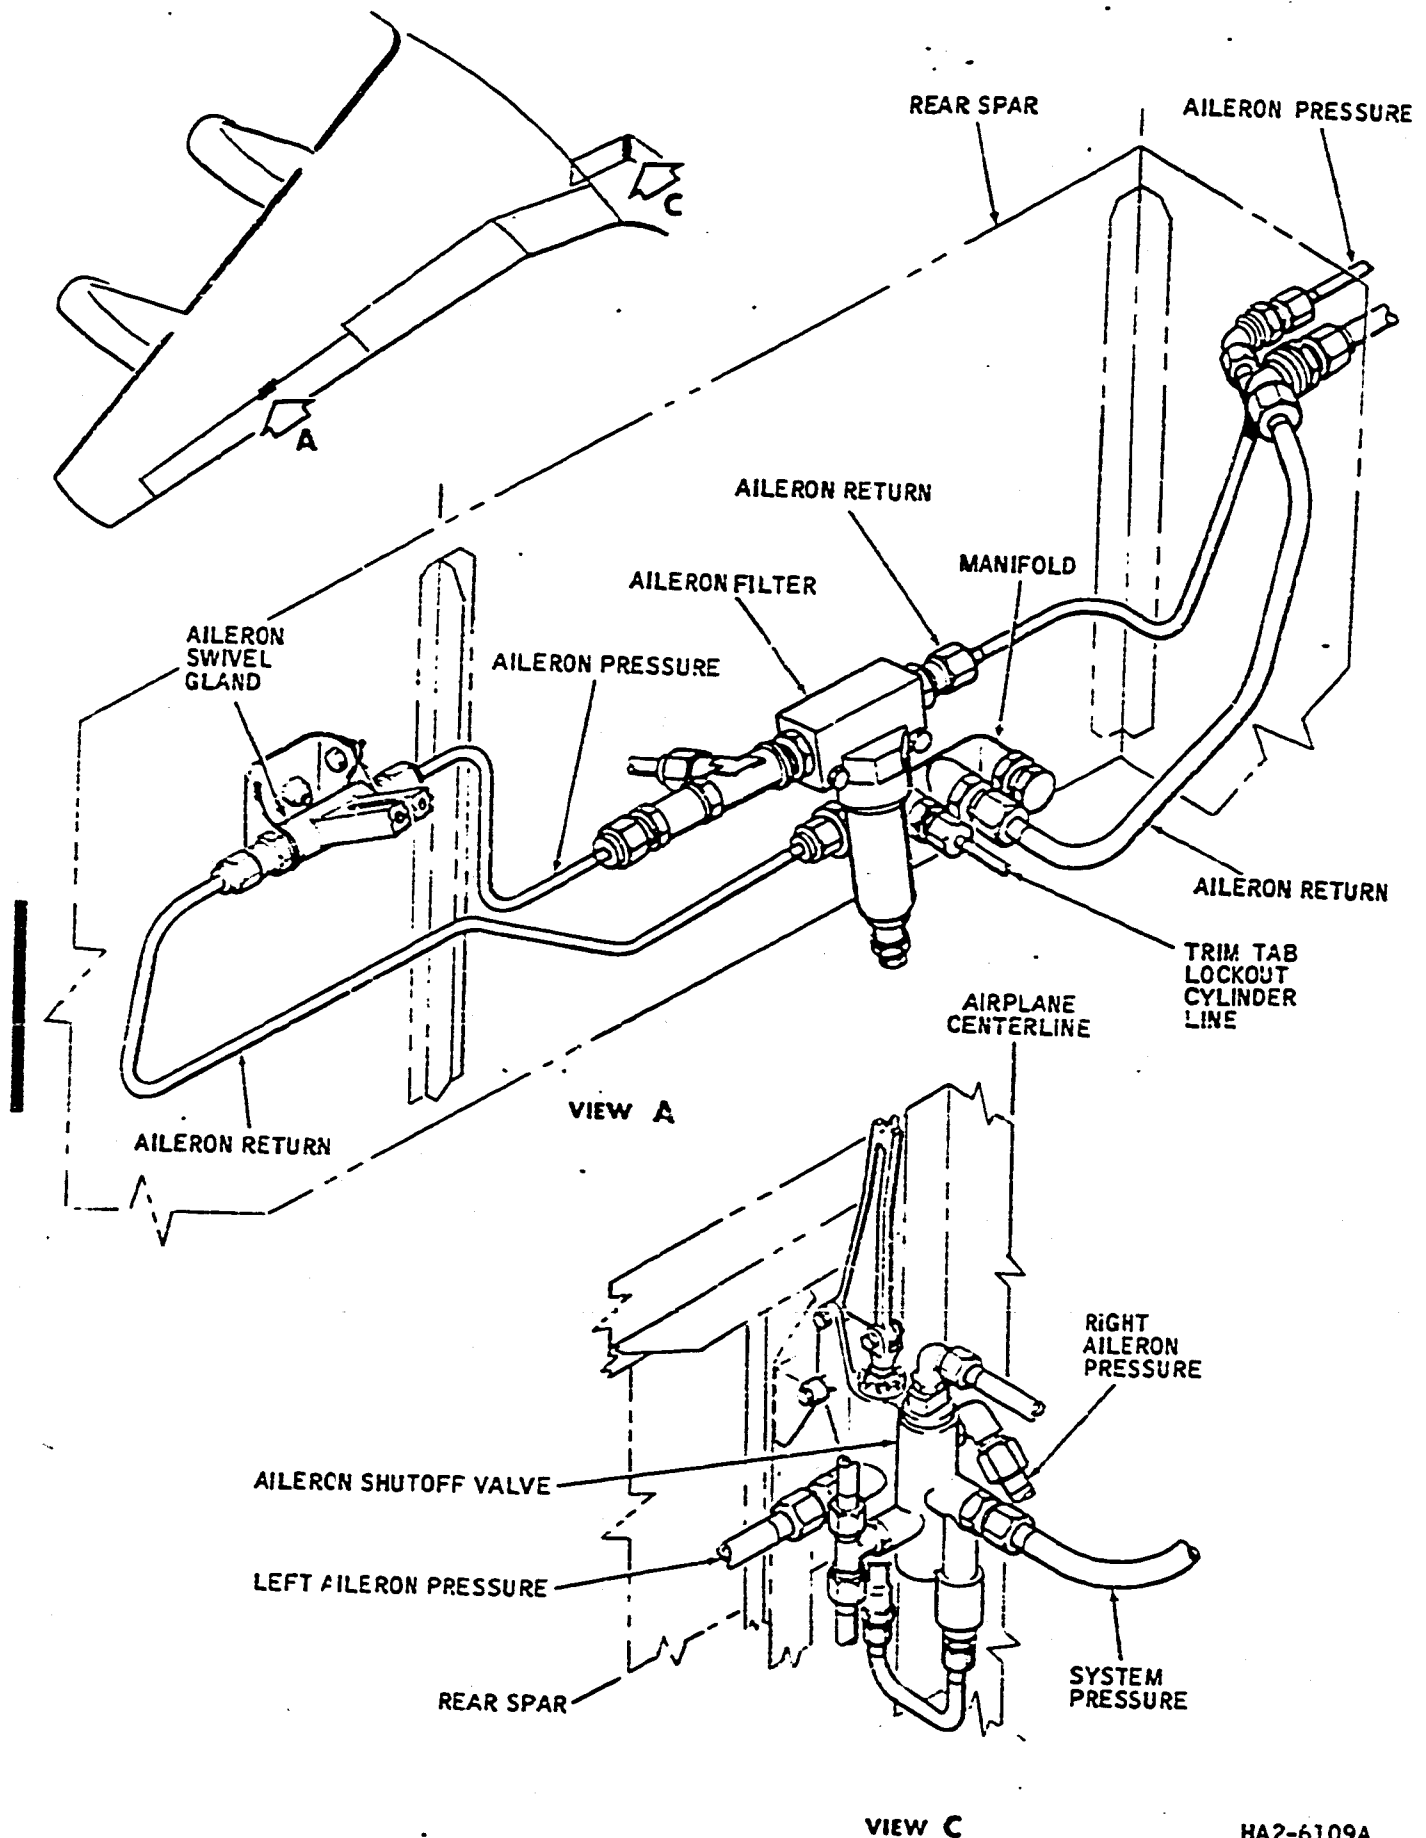

HA2-6109A

Flushing Procedure Line Connection Locations  
 Figure 605

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (9) Disconnect right aileron pressure line at aileron shutoff valve, located in left wheel well. Connect line to test stand pressure hose.
- (10) Disconnect right aileron return line from tee forward of flap reservoir (see Figure 607). Connect line to test stand return hose.
- (11) Repeat Steps (6 through 8) for these lines.
- (12) Restore all lines and units to original configuration.
- (13) Remove magnetic drain plug from thrust reverser reservoir and drain reservoir. Clean plug, reinstall and safety with lock wire (see Chapter 78).
- (14) Clean and/or replace aileron filter elements.
- (15) Clean or replace check valve jumpered in step (2).

NOTE: For continuation of flushing aileron system components, refer to 29-05.

D. Nose System Pressure and Return Lines (See Figure 606.)

- (1) In nosewheel well, disconnect 1/4-inch return line which runs from nose gear control valve to bulkhead tee fitting in A-return line, at tee. Cap tee.
- (2) Disconnect pressure line leading into nose gear control valve at valve. In this same line, replace check valve with jumper line.
- (3) Disconnect pressure line which runs to tee in pressure accumulator, from pressure bulkhead tee at rear of wheel well. Cap tee.
- (4) Connect two open lines from Step (2) and Step (3) with jumper.
- (5) Disconnect at tee, pressure line which runs from reserve pressure accumulators to tee near centerline of airplane. Cap tee.
- (6) Disconnect pressure line leading into reserve accumulator shutoff valve.
- (7) Disconnect return line from tee in steering relief valve. Connect this line to pressure line at shutoff valve with jumper line.
- (8) On freighter type airplanes, disconnect cargo door pressure line at tee fitting in nose system pressure line. Cap tee and cargo door pressure line.

NOTE: The cargo door pressure line tee fitting is located in the forward left side of the forward baggage compartment.


- (9) In left main gear wheel well, disconnect nose system pressure line from side port of tee in priority valve. Connect line to test stand pressure hose.

DOUGLAS AIRCRAFT CO., INC.  
***DC-8 SIXTY SERIES***  
MAINTENANCE MANUAL

THIS PAGE INTENTIONALLY LEFT BLANK



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

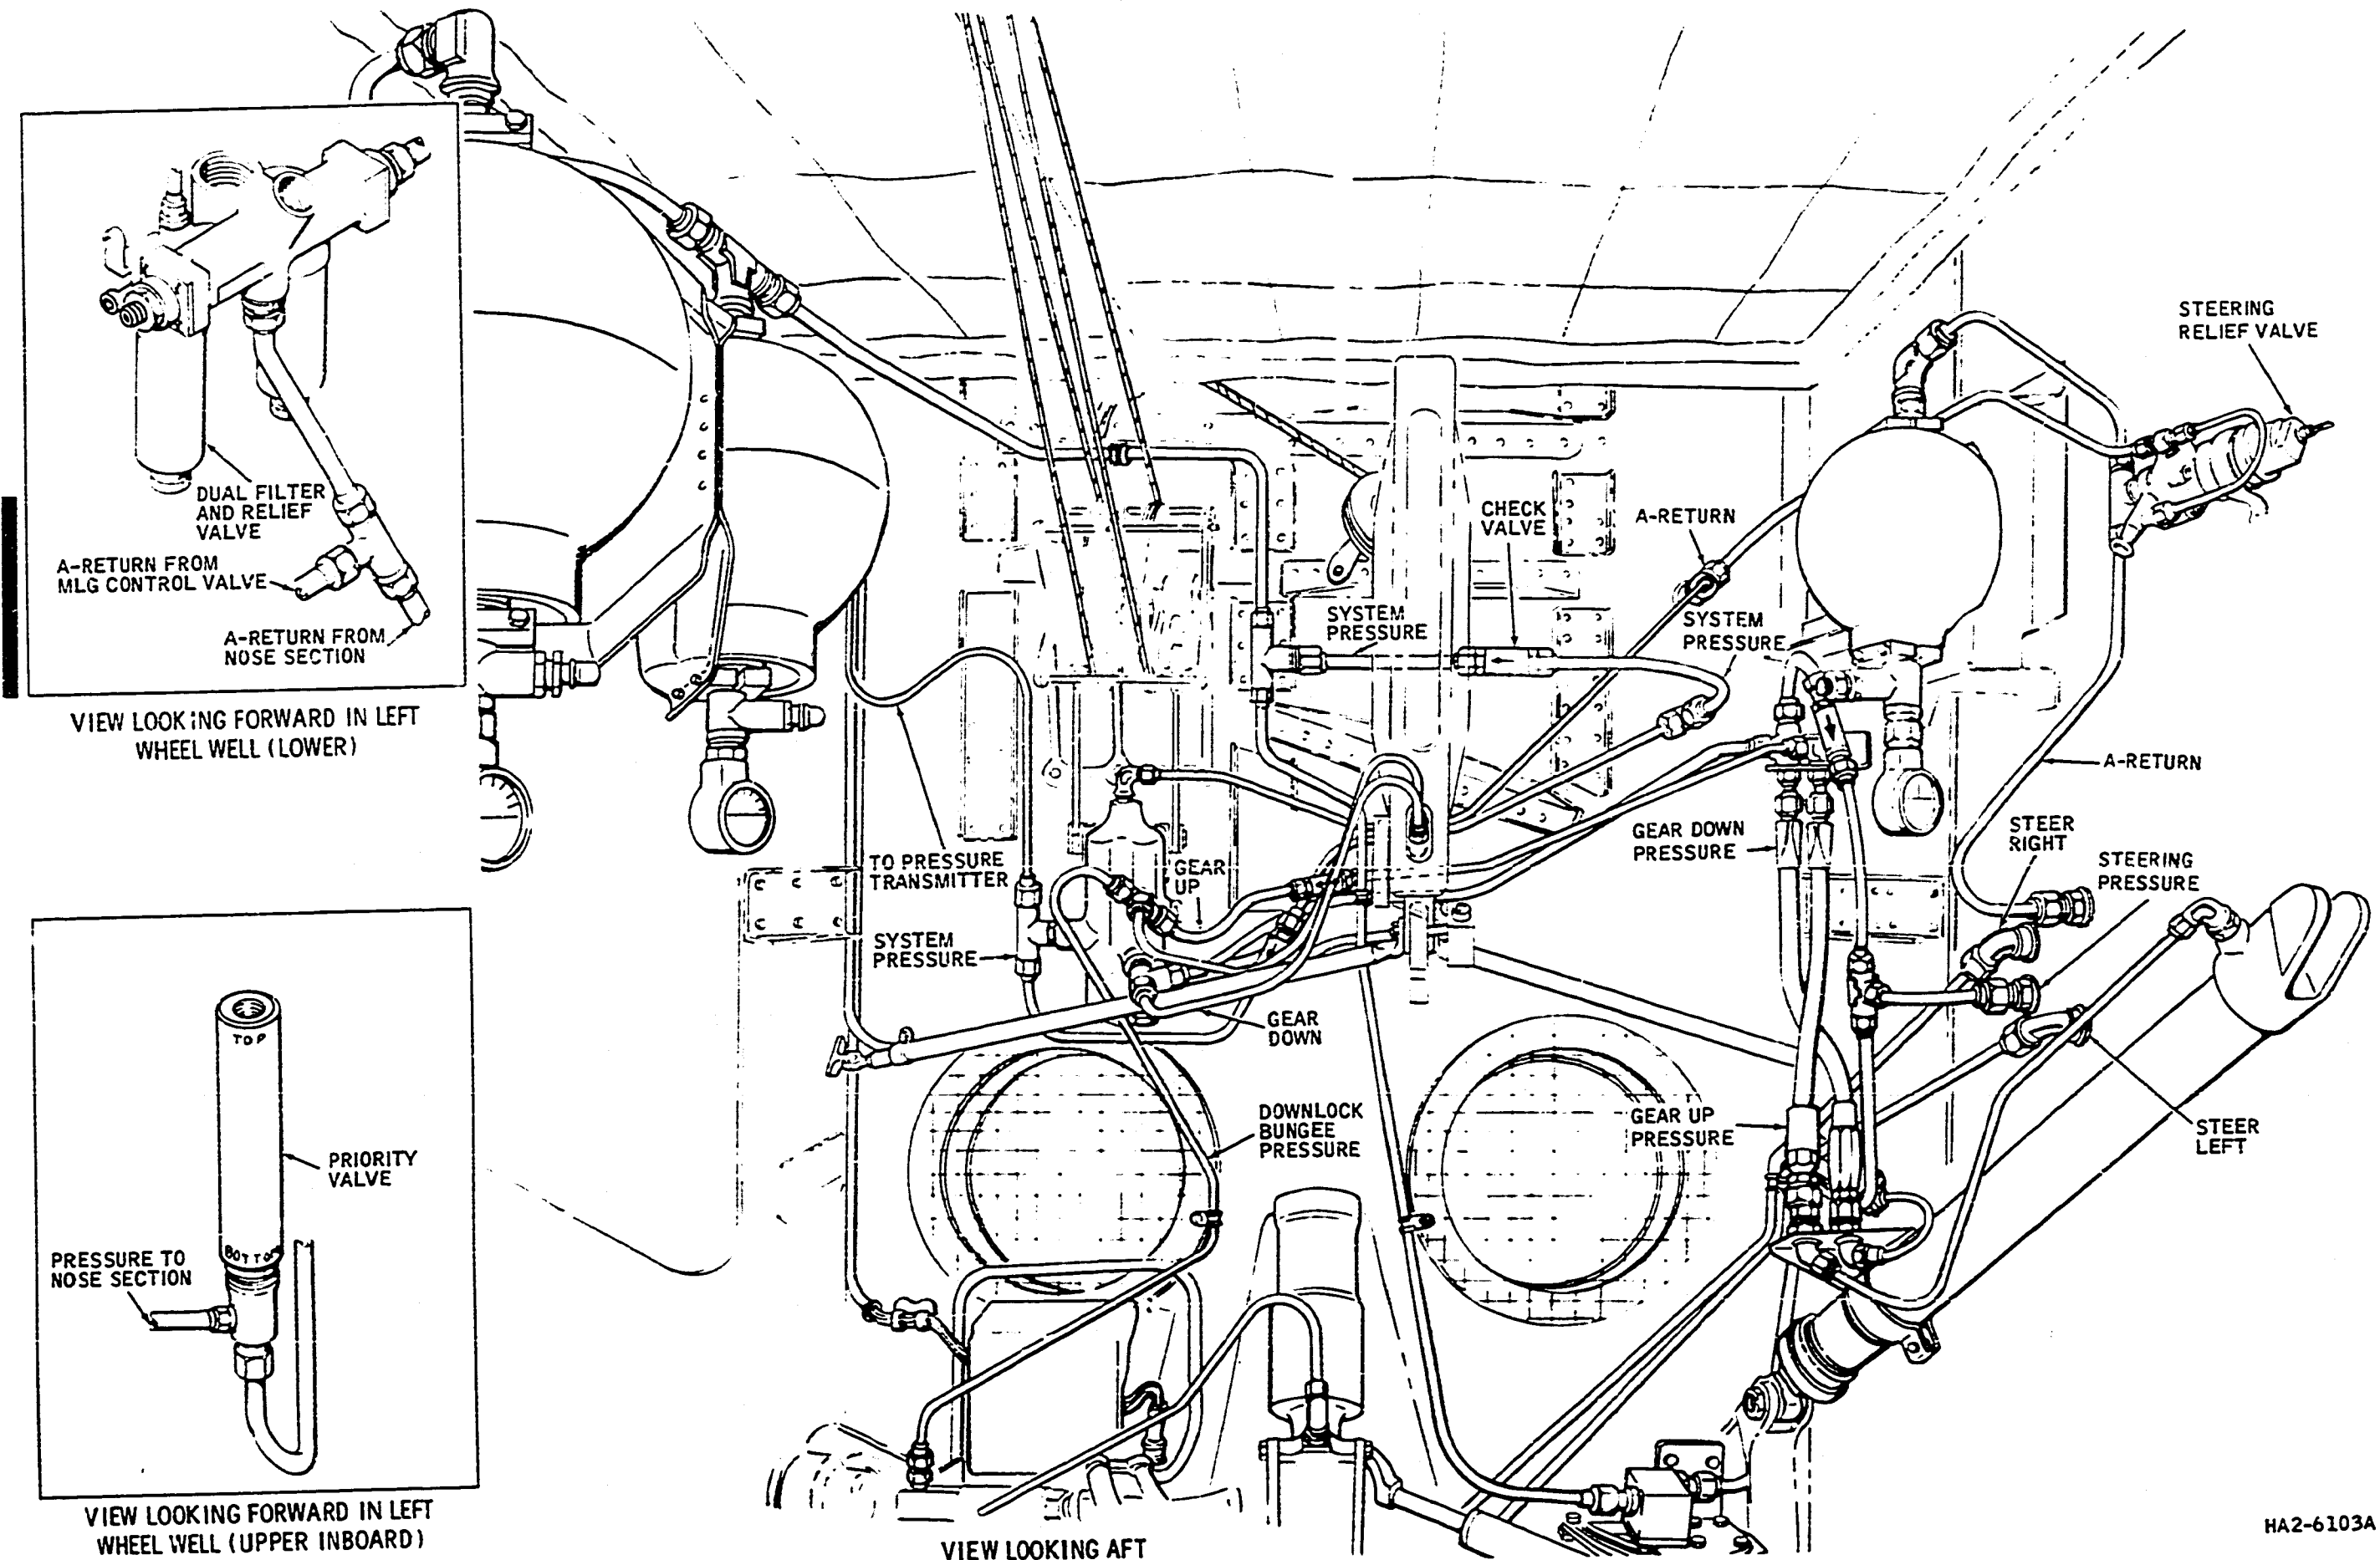


Flushing Procedure Line Connection Locations  
 Figure 606

VIEW LOOKING AFT  
 29-02  
 CODE 2  
 Page 611

HA2-6103A

Nov 1/69

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

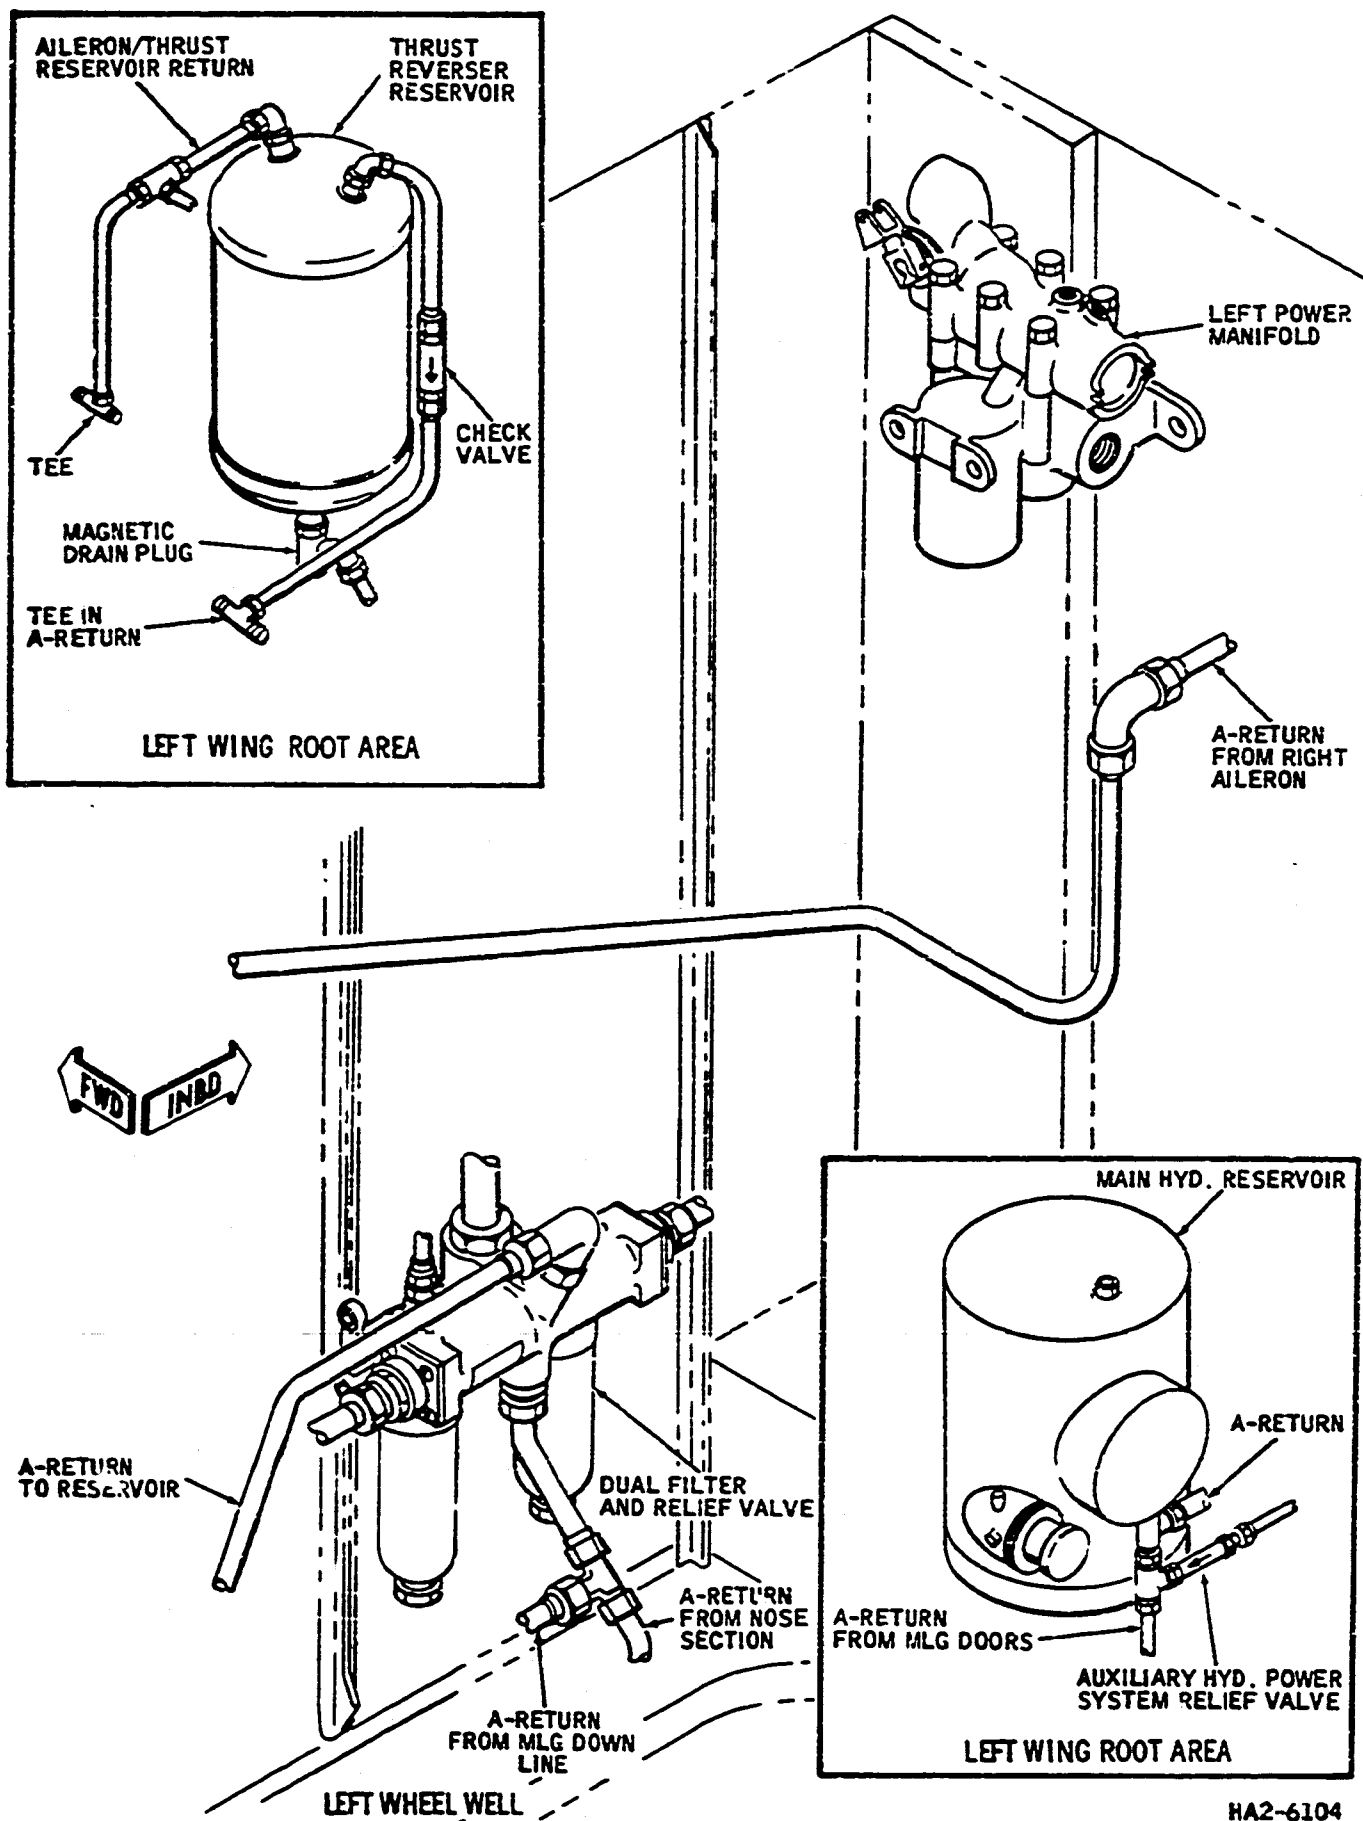

HA2-6104

Flushing Procedure Line Connection Locations  
 Figure 607

Feb 1/69

29-02  
 CODE 2  
 Page 613

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (10) Disconnect nose system A-return line from bottom of dual filter and relief valve. Connect line to test stand return hose.
- (11) Disconnect main gear control valve A-return line from tee in nose gear A-return line. Cap tee.
- (12) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (13) Flush circuit for five minutes.
- (14) Depressurize test stand.
- (15) Remove, inspect, clean, and/or replace miniature check valve, located in nose system return port of dual filter and relief valve.
- (16) Repeat Step (15), inspection etc., for following items:
  - (a) Check valve jumpered in nosewheel well.
  - (b) Two reserve pressure accumulators and attaching lines.
  - (c) System pressure transmitter and attaching lines.
- (17) Restore all lines and units to original configuration.

NOTE: For continuation of flushing of nose gear system, refer to 29-04.

E. Flush A-Return Line (See Figure 607.)

- (1) Disconnect aileron A-return line from bulkhead elbow in A-return line, located below left power manifold. Cap elbow.
- (2) Connect line to test stand pressure hose.
- (3) Disconnect lines from both ends of check valve in outlet line of thrust reverser reservoir. Connect jumper between lines.
- (4) Disconnect A-return line from reservoir fittings. Connect line to test stand return hose.
- (5) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (6) Flush circuit for five minutes.
- (7) Depressurize test stand.
- (8) Restore all lines and units to original configuration except return hose to reservoir.
- (9) Remove magnetic drain plug from thrust reverser reservoir and drain reservoir. Clean plug, reinstall and safety with lockwire (see Chapter 78).

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (10) Disconnect line from elbow at top of dual filter and relief valve. Connect line to pressure stand pressure hose.
- (11) Repeat Steps (5 through 7).
- (12) Restore all lines and units to original configuration.

F. Flush B-Return Line (See Figure 608.)

- (1) Disconnect B-return line from miniature check valve installed in right power manifold. Connect this line to test stand pressure hose.
- (2) Disconnect empennage return line from tee in B-return line. Cap tee.
- (3) Disconnect brake return line from tee fitting located adjacent to main reservoir. Cap tee.
- (4) Disconnect B-return line from check valve in reservoir B-return port. Connect line to test stand return hose.
- (5) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (6) Flush circuit for five minutes.
- (7) Depressurize test stand.
- (8) Remove check valve from reservoir B-return port and miniature check valve (Step 1). Inspect, clean, and/or replace check valves.
- (9) Restore all lines and units to original configuration.



G. Power Manifolds

- (1) If contamination downstream of the dual filter and relief valve is general, the right and left power manifolds with attaching valves must be removed, inspected, cleaned, and/or replaced.

H. Flush Low-Pressure Return Lines (See Figure 609.)

- (1) In right wing root area, disconnect low-pressure return line from wing flap thermal relief valve. Connect this line to test stand pressure hose. Thermal relief valve is located on the rear spar.
- (2) In left wheel well, below dual filter and relief valve, disconnect low-pressure return line from top of tee which connects aileron valve drain and empennage drain returns to cross-ship low-pressure return. Cap tee.
- (3) Disconnect low-pressure return line from tee fitting that joins wing flap return at main reservoir. Cap tee, and connect line to test stand return hose.


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

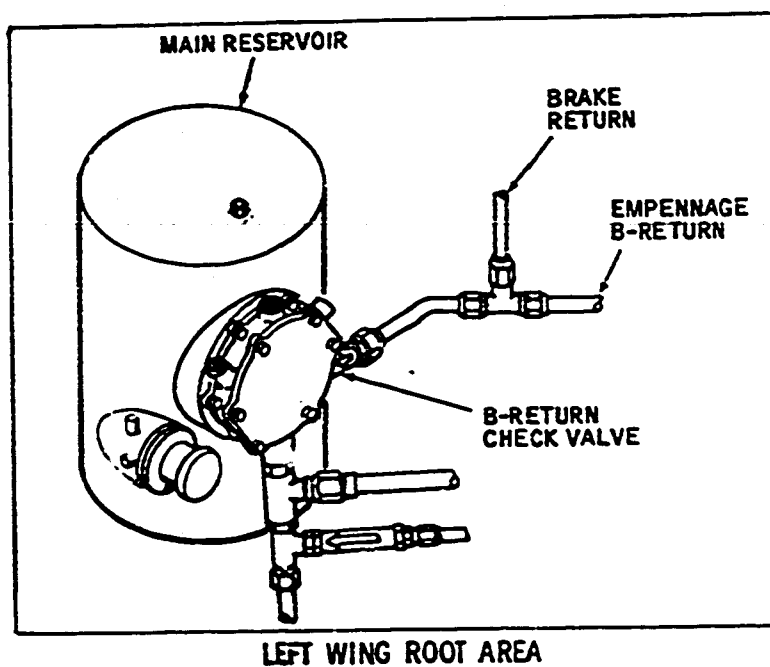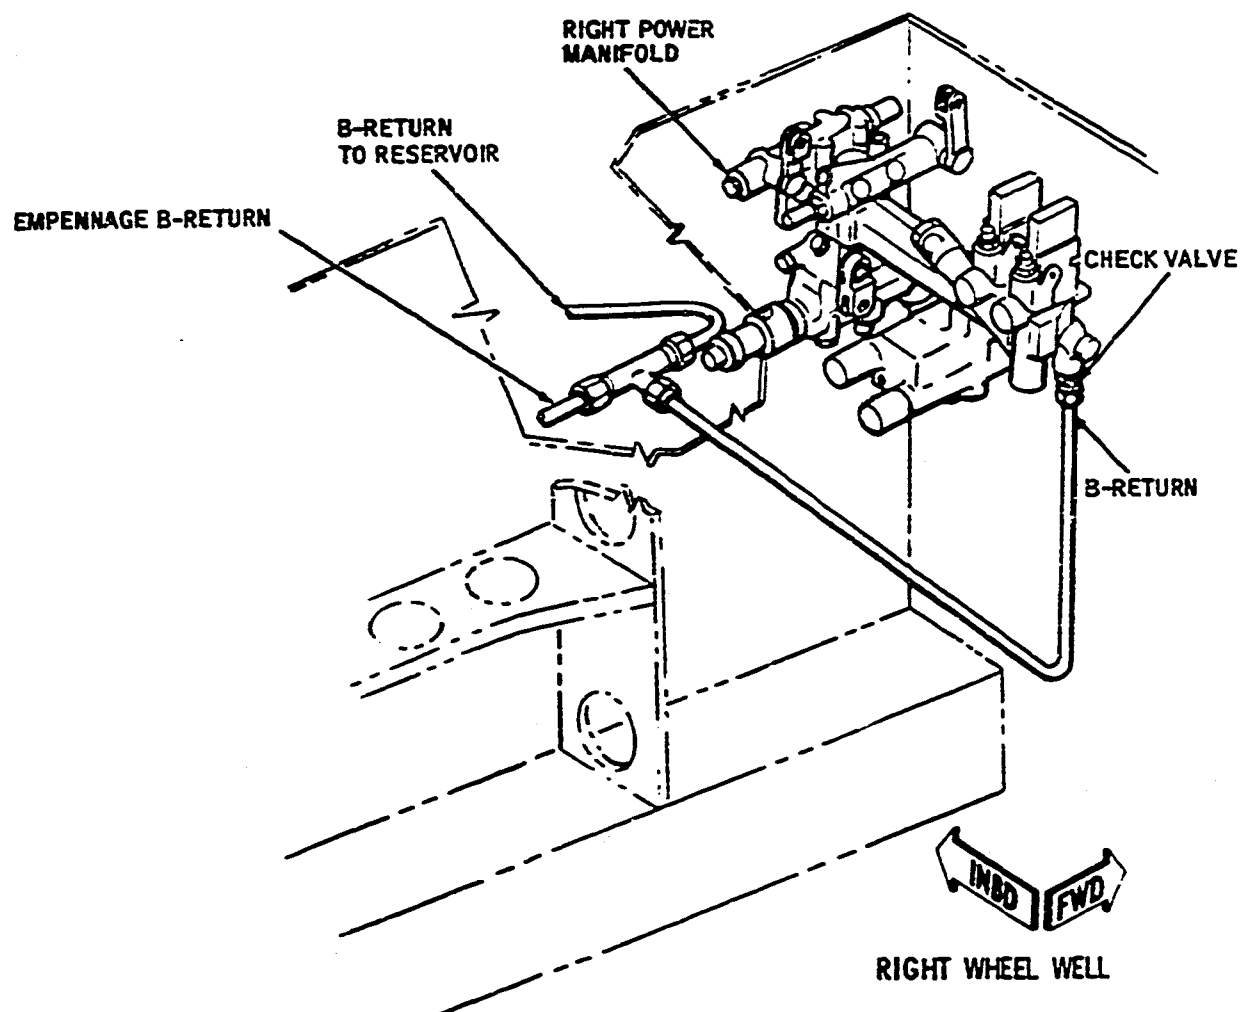

HA2-6105

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) Pressurize test stand to 200 psi at 20 gpm flow.
- (5) Flush circuit for five minutes.
- (6) Depressurize test stand.
- (7) Remove line from tee in aileron shutoff valve to tee fitting in low-pressure return line, in left wheel well. Flush line.
- (8) Remove, clean and/or replace aileron shutoff valve and thermal relief valve.
- (9) Restore all lines and units to original configuration.

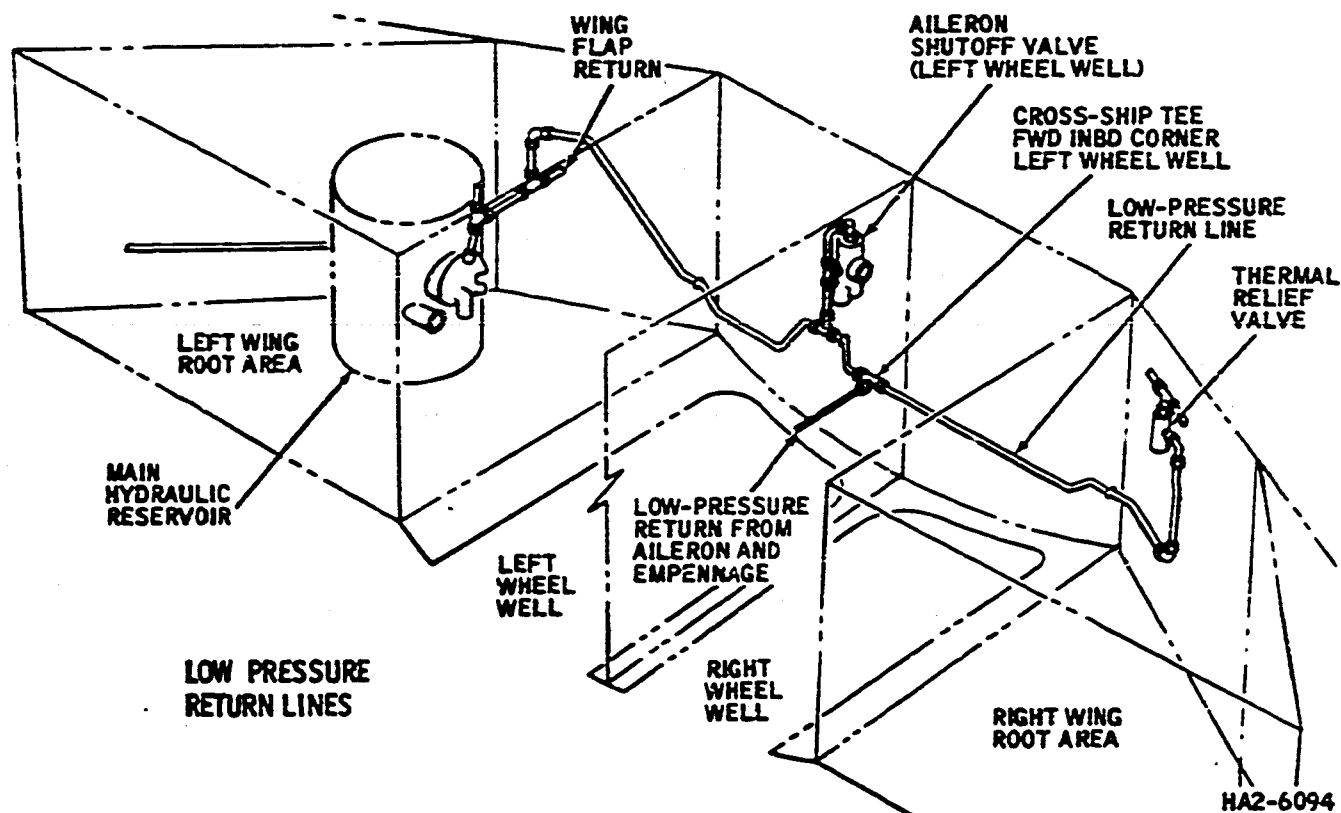

Flushing Procedure Line Connection Locations  
Figure 609

Feb 1/69

29-02  
CODE 2  
Page 617

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC POWER SYSTEM - INSPECTION/CHECK

1. General

- A. The purpose of this section is to provide a logical guide for removing the contaminants (foreign particles) from the fluid, units, and lines of the auxiliary hydraulic power system by flushing the systems with clean hydraulic fluid.
- B. This procedure may be deviated from as dictated by the individual circumstances. Hydraulic circuits that are easy to locate and follow, have been intentionally omitted from this procedure for the sake of brevity.
- C. The removal of overheated or diluted fluid, would follow generally the same procedure with the exception that the removed contaminated fluid would be caught in containers rather than recirculated through the hydraulic test stand.
- D. Before any flushing procedures are performed, personnel should read and thoroughly understand 29-00, Inspection/Check.

2. Tools and Equipment Required




- A. One hydraulic test stand capable of operating with Skydrol hydraulic fluid, and fitted with 10-micron or smaller filter.
- B. Pressure and return hoses, jumper lines, and fittings as required by the following procedures.

3. Flush Auxiliary Hydraulic Power System

A. Auxiliary Pressure Lines to Wing Flap System

- (1) Disconnect pressure line from downstream side (forward) of the auxiliary hydraulic pump filter. Connect this line to test stand pressure hose.
- (2) Clean auxiliary pump filter (see 29-20-5).
- (3) Remove check valve from auxiliary pressure line, and install a jumper line in its place. Check valve is located above filter.
- (4) Disconnect auxiliary pressure lines from inlet and outlet ports of system selector valve, and install jumper line between these lines. Cap valve ports.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

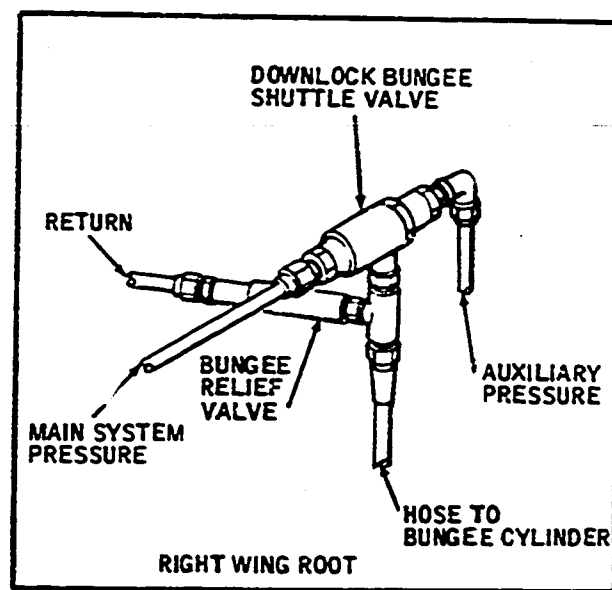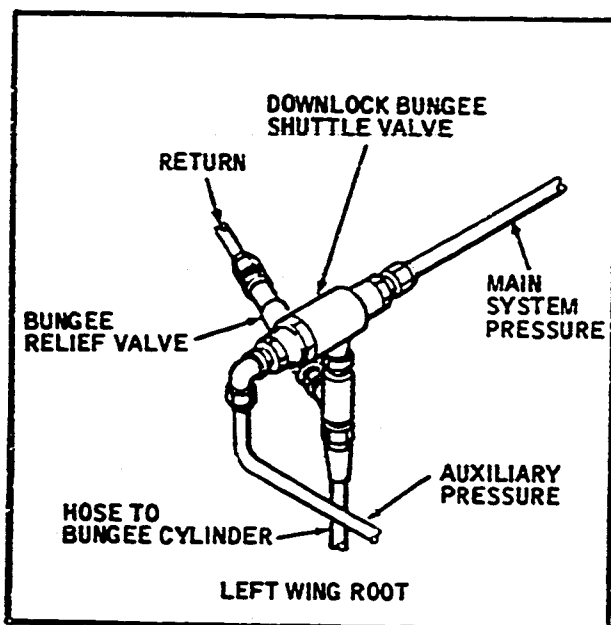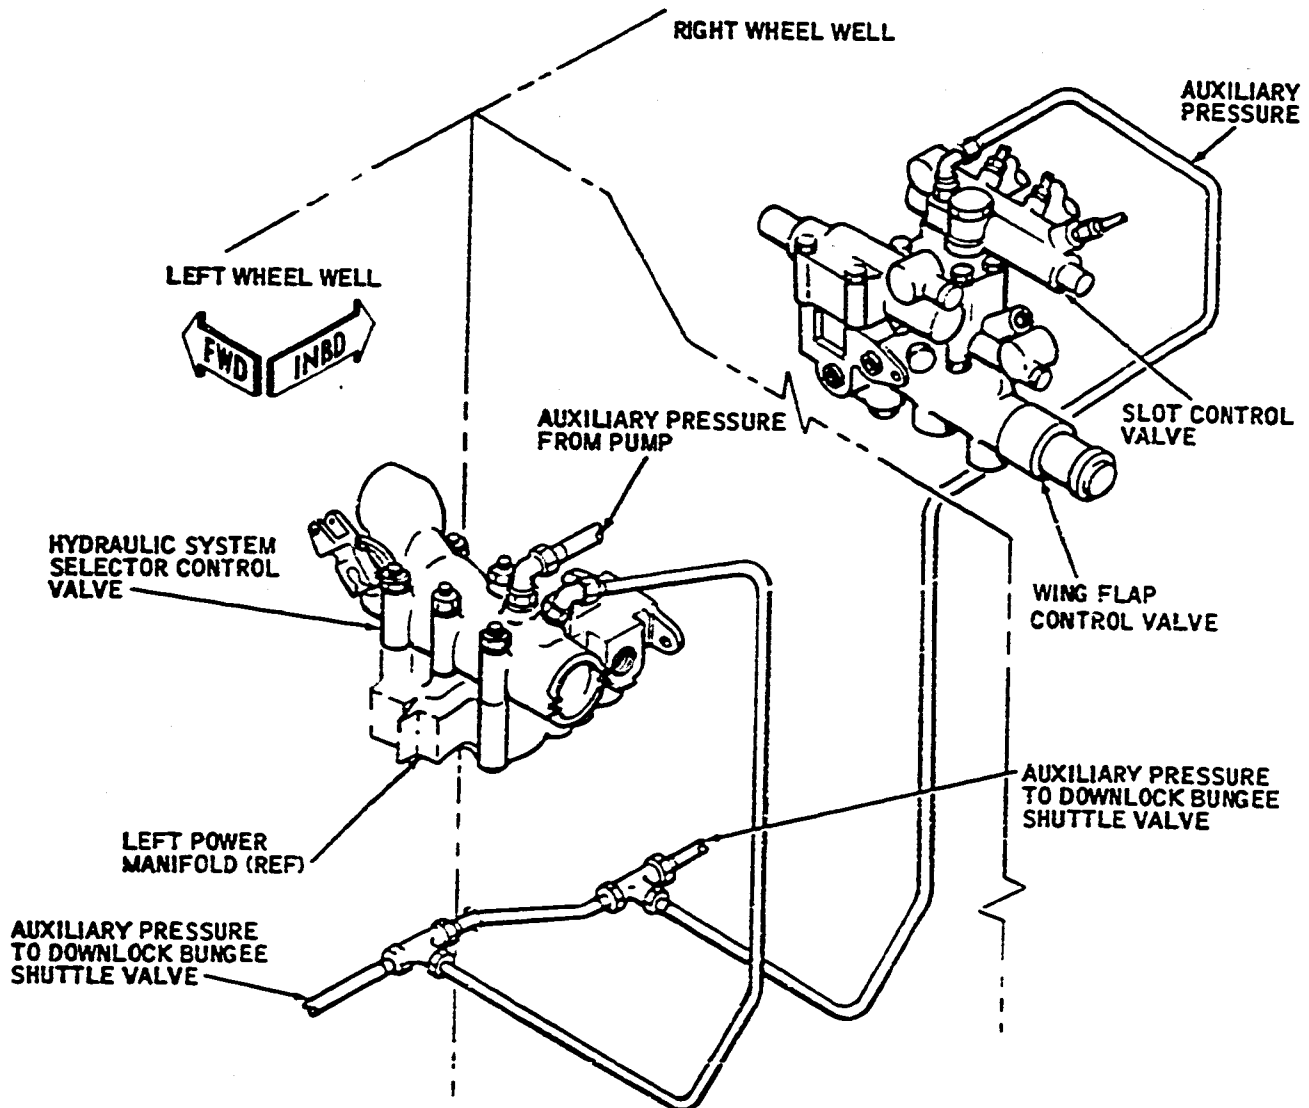

HA2-6106



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Disconnect left main gear downlock bungee cylinder auxiliary pressure lines from tee fitting, located to left of airplane centerline. Cap tee.
- (6) Disconnect right main gear downlock bungee cylinder auxiliary pressure line from tee fitting, located to right of airplane centerline. Cap tee.
- (7) Disconnect auxiliary pressure line from auxiliary wing flap inlet port, adjacent to slot control valve, on right power manifold. Connect this line to test stand return hose.
- (8) Pressurize test stand to 200 psi maximum at 3 to 10 gpm flow.
- (9) Flush this circuit for 5 minutes.
- (10) Depressurize test stand.
- (11) Remove jumper lines, clean, and/or replace check valve removed in Step (3).
- (12) Connect all lines except right and left main gear bungee cylinder lines.

B. Auxiliary Pressure Lines to Main Gear Downlock Bungee Cylinders

- (1) Connect left main gear downlock bungee cylinder auxiliary pressure line, which was disconnected in paragraph A, Step (5) to test stand pressure hose.
- (2) Disconnect left bungee cylinder auxiliary pressure line from shuttle valve, located in left wing root. Connect this line to test stand return hose.
- (3) Pressurize test stand to 200 psi maximum at 3 to 10 gpm flow.
- (4) Flush this circuit for 5 minutes.
- (5) Depressurize test stand.
- (6) Repeat steps (1 through 5) for right bungee line.
- (7) Inspect, clean, and/or replace shuttle valve, bungee relief valve, and bungee cylinder.
- (8) Restore all lines and units to their original configuration.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC POWER SYSTEM - INSPECTION/CHECK

1. General

- A. The purpose of this section is to provide a logical guide for removing the contaminated (foreign particles) from the fluid, units, and lines of the auxiliary hydraulic power system by flushing the systems with clean hydraulic fluid.
- B. This procedure may be deviated from as dictated by the individual circumstances. Hydraulic circuits that are easy to locate and follow, have been intentionally omitted from this procedure for the sake of brevity.
- C. The removal of overheated or diluted fluid, would follow generally the same procedure with the exception that the removed contaminated fluid would be caught in containers rather than recirculated through the hydraulic test stand.
- D. Before any flushing procedures are performed, personnel should read and thoroughly understand 29-00, Inspection/Check.

2. Tools and Equipment Required


- A. One hydraulic test stand capable of operating with Skydrol hydraulic fluid, and fitted with 10-micron or smaller filter.
- B. Pressure and return hoses, jumper lines, and fittings as required by the following procedures.

3. Flush Auxiliary Hydraulic Power System

A. Auxiliary Pressure Lines to Wing Flap System

- (1) Disconnect pressure line from downstream side (forward) of auxiliary hydraulic pump filter. Connect this line to test stand pressure hose.
- (2) Clean auxiliary pump filter (see 29-20-5).
- (3) Remove check valve located above above filter from auxiliary pressure line, and install jumper line in its place.
- (4) Disconnect auxiliary pressure lines from inlet and outlet ports of system selector control valve, and install jumper between these lines. Cap valve ports.
- (5) Disconnect auxiliary pressure line from auxiliary wing flap inlet port in right power manifold. Connect line to test stand return hose.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

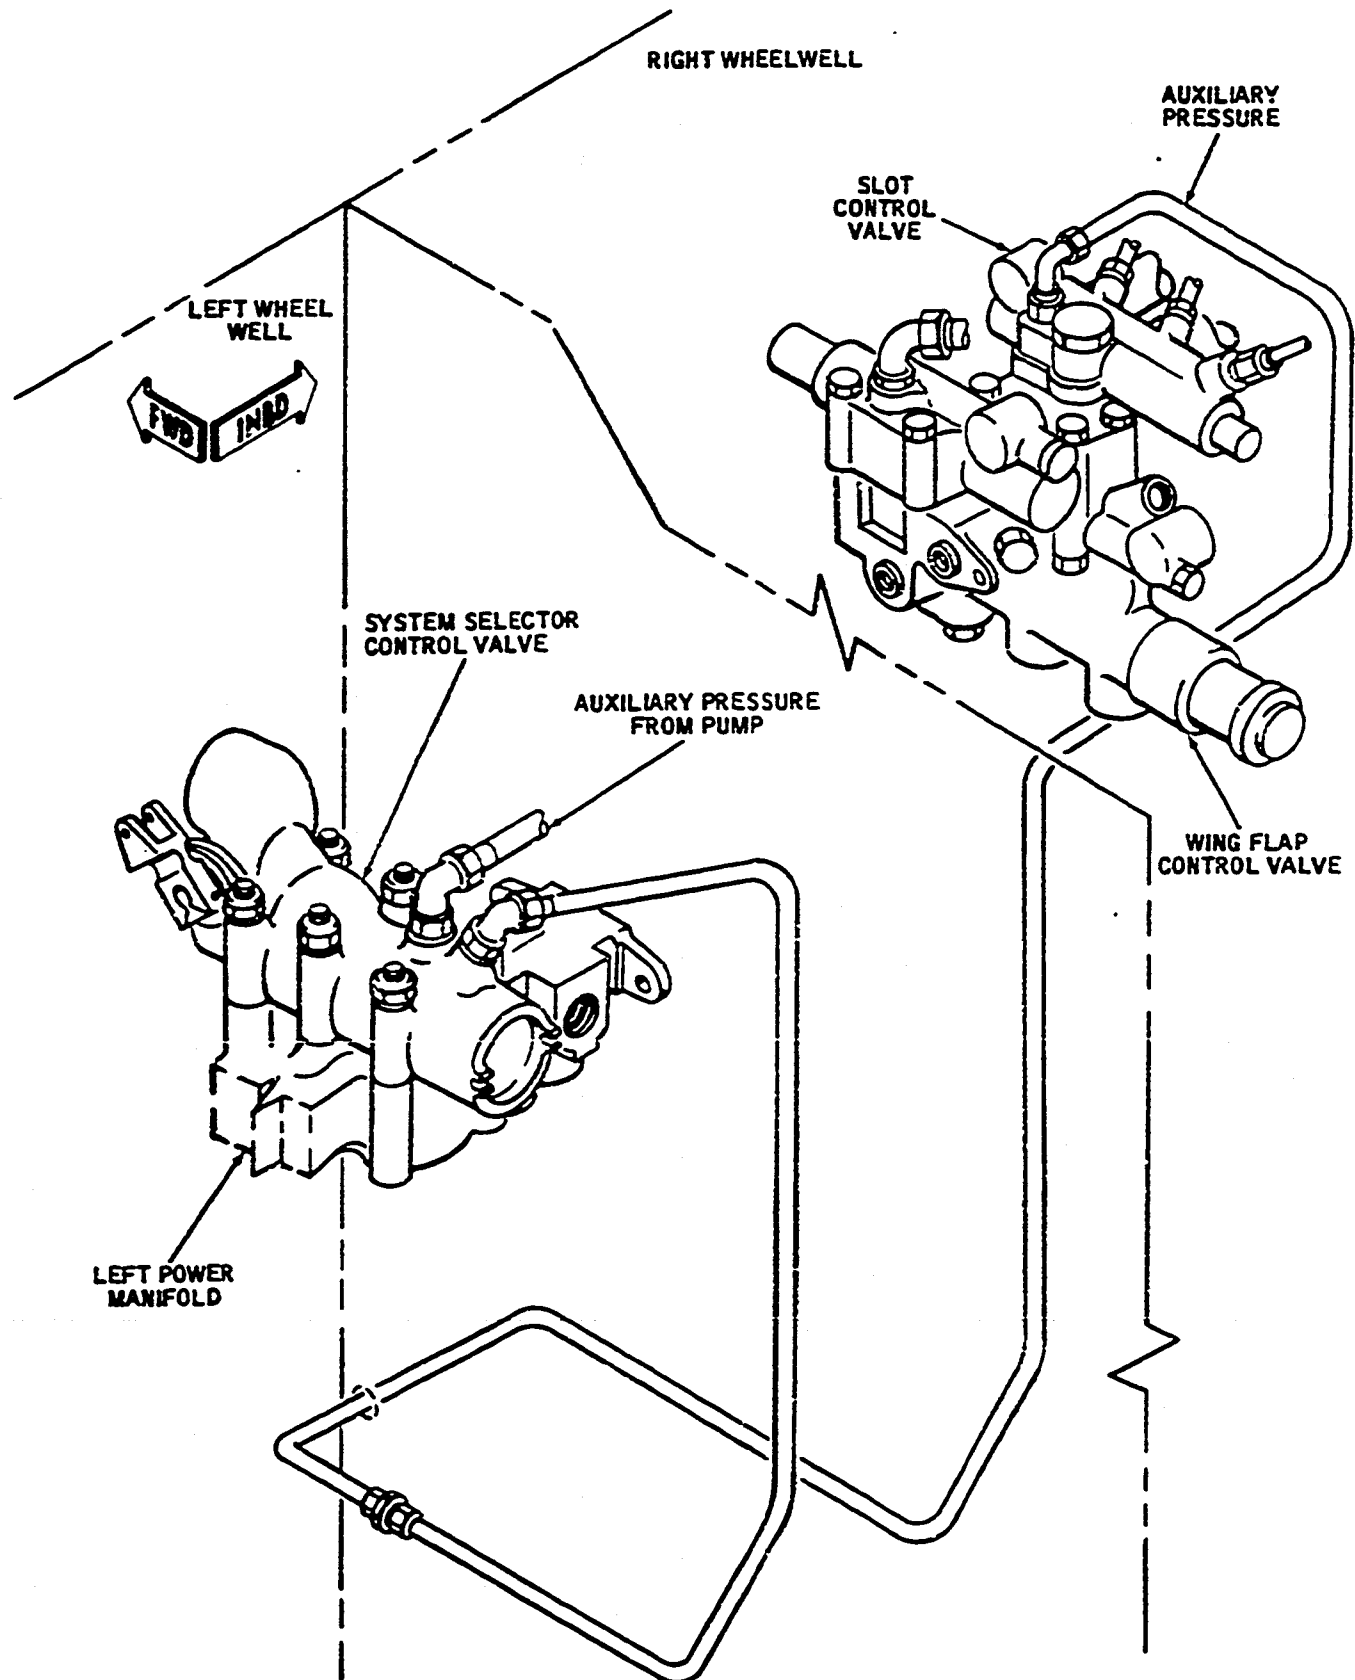

HA2-6107

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Pressurize test stand to 200 psi maximum at 3 to 10 gpm flow.
- (7) Flush circuit for five minutes.
- (8) Depressurize test stand.
- (9) Remove jumper lines, clean, and/or replace check valve removed in step (3).
- (10) Restore all lines and units to original configuration.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS -

INSPECTION/CHECK

1. General

- A. The purpose of this section is to provide a logical guide for removing the contaminants (foreign particles) from the fluid, units, and lines of the utility systems upstream of the control system filters by flushing the systems with clean hydraulic fluid.
- B. This procedure may be deviated from as dictated by the individual circumstances. Hydraulic circuits that are easy to locate and follow, have been intentionally omitted from this procedure for the sake of brevity.
- C. The removal of overheated or diluted fluid, would follow generally the same procedure with the exception that the removed contaminated fluid would be caught in containers rather than recirculated through the hydraulic test stand.
- D. Before any flushing procedures are performed, personnel should read and thoroughly understand 29-00, Inspection/Check.

2. Tools and Equipment Required


- A. One hydraulic test stand capable of operating with Skydrol hydraulic fluid, and fitted with 10-micron or smaller filter.
- B. Pressure and return hoses, jumper lines, and fittings as required by the following procedures.

3. Flush Utility Systems Upstream of Control System Filters


A. Wing Flap System

- (1) Disconnect flap up and flap down lines from wing flap control valve (see Figure 601).
- (2) Remove restrictor with portion of wing flap up line, which is connected to wing flap control valve.
- (3) Disconnect flap return line from right power manifold just inboard of flap control valve. Jumper this line to flap down line, which was disconnected in step (1).
- (4) Connect open flap up line to test stand pressure hose.
- (5) Disconnect flap return line from inlet port of auxiliary pump alternate reservoir. Connect this line to test stand return hose.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

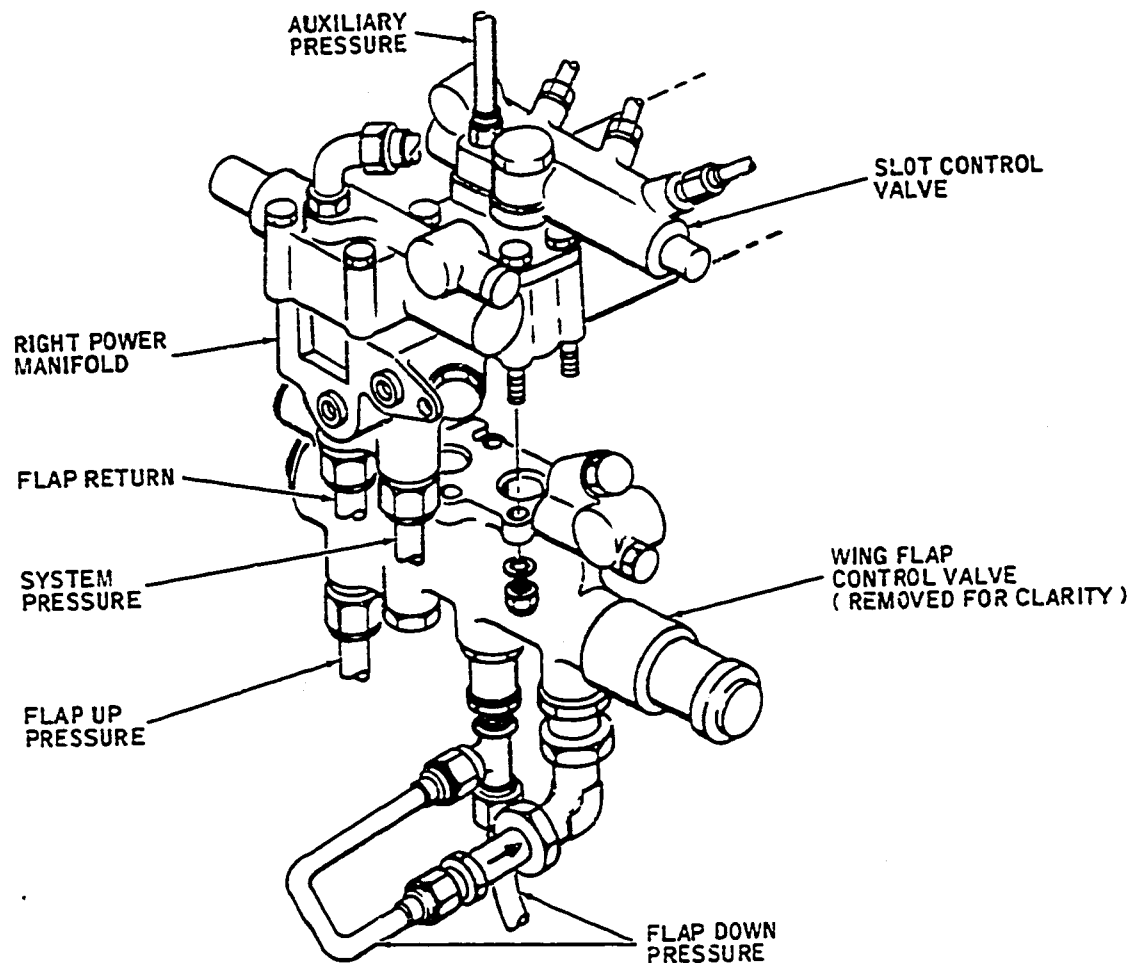


RIGHT POWER MANIFOLD

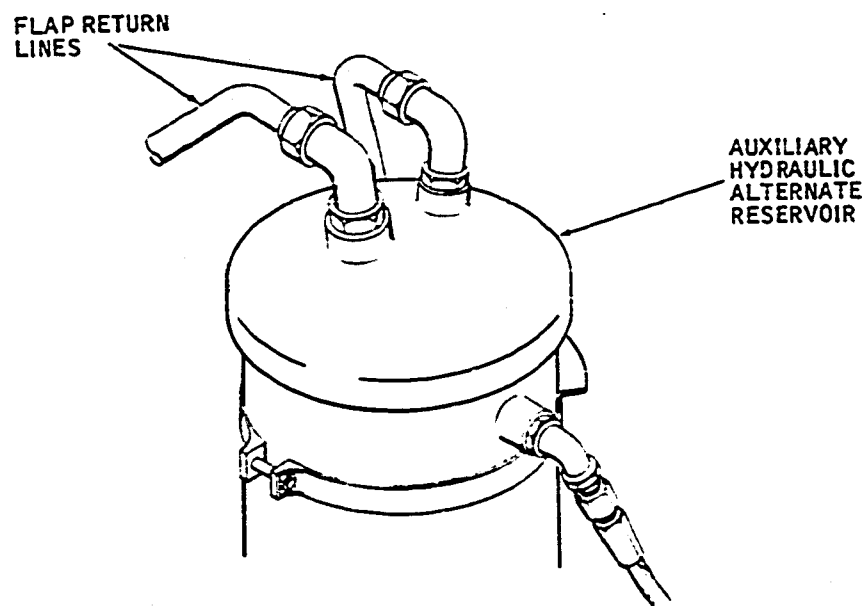

ALTERNATE RESERVOIR

HA2-6108A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

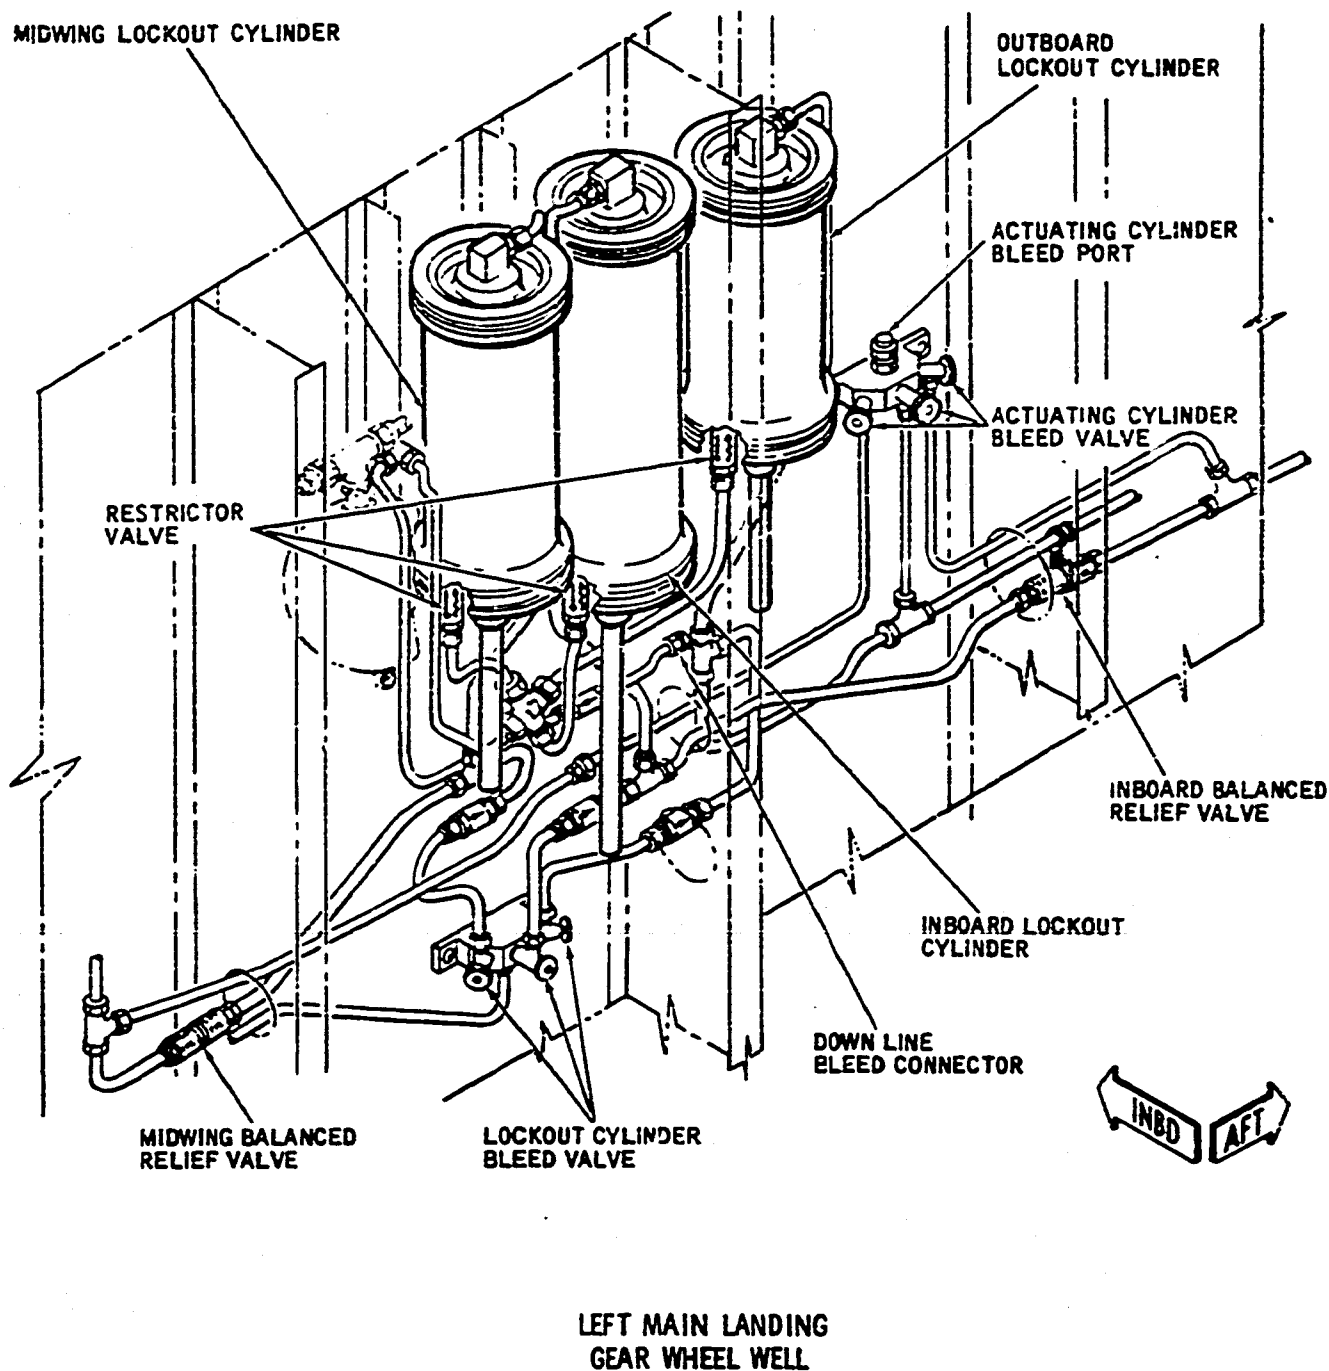

HA2-7558

Flushing Procedures -- Line Connection Location  
 Figure 601A

29-04  
 CODE 1  
 Page 602A

May 1/71

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Remove thermal relief valve from tee in flap up line, located at STA  $X_{rs} = 70$  in right wing root. Cap tee.
- (7) Disconnect hoses from outboard flap actuating cylinders. Plug all hoses.
- (8) At inboard and midwing flap actuating cylinders, disconnect flap up and flap down pressure lines and install jumper between both set of lines.
- (9) Disconnect bottom line from flap lockout cylinder bleed valve manifold (see Figure 601A).
- (10) Remove lines and check valves (3) from top of bleed valve manifold.
- (11) Connect jumper between line disconnected in step (9) and tee fitting below inboard lockout cylinder from which check valve was removed in step (10).
- (12) Disconnect lines (3) from bottom of actuating cylinder bleed valve manifold.
- (13) Connect jumper between bleed line for inboard actuating cylinder and down line bleed connector.
- (14) Disconnect lines from top and bottom of inboard flap lockout cylinder and connect jumper between lines.
- (15) At inboard and midwing balanced relief valve, disconnect and jumper lines.
- (16) Pressurize test stand to 200 psi maximum at 20 gpm flow and flush circuit for five minutes.
- (17) Shut off pressure source.
- (18) Disconnect jumper from tee fitting below inboard lockout cylinder and connect to line below midwing lockout cylinder from which check valve was removed in step (10).
- (19) Disconnect jumper from bleed line for inboard actuating cylinder and connect to bleed line for midwing actuating cylinder.
- (20) Pressurize test stand to 200 psi maximum at 20 gpm flow and flush circuit for five minutes.
- (21) Disconnect lines from top and bottom of inboard flap lockout cylinder and connect jumper between lines.
- (22) Disconnect jumper from line below midwing lockout cylinder and connect to line below outboard lockout cylinder from which check valve was removed in step (10).



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (23) Disconnect jumper from bleed line for midwing actuating cylinder and connect to bleed line for outboard actuating cylinder.
  - (24) At midwing flap actuating cylinders, remove jumpers. Plug flap down pressure lines.
  - (25) Connect jumper between midwing actuating cylinder up pressure line and outboard actuating cylinder down pressure lines.
  - (26) Pressure test stand to 200 psi maximum at 20 gpm flow and flush circuit for five minutes.
  - (27) Shut off pressure source.
  - (28) Disconnect test stand pressure hose from flap up line. Connect line to wing flap control valve.
  - (29) Disconnect auxiliary pump case drain line from inlet port on side of alternate reservoir and from case drain of auxiliary pump.
  - (30) Connect test stand pressure hose and return hose to drain line, flush for three minutes.
  - (31) Disconnect auxiliary pump suction line at alternate reservoir and auxiliary pump selector valve.
  - (32) Disconnect test stand pressure hose and test stand return hose from auxiliary pump case drain line, and connect to auxiliary pump suction line, flush for three minutes.
  - (33) Remove jumpers at all flap actuating cylinders, flap lockout cylinders, flap control valve, and actuating cylinder bleed valve manifold. Connect airplane lines to applicable component.
  - (34) Bench flush short lines that run between lockout cylinder bleed valve manifold and check valve (removed in step 10).
  - (35) Install lines and check valves on lockout cylinder bleed valve manifold.
  - (36) Remove and bench flush short line that runs between thermal relief valve and tee in low-pressure return line.
- NOTE: Steps (37) through (47) have been deleted.
- (48) Inspect, clean, and/or replace all flap actuator cylinders, lockout cylinders, thermal relief valve, balance relief valves, restrictor valve, and flap control valve.
  - (49) Restore all lines and units to original configuration.
  - (50) Adjust rigging if necessary (see Chapter 27).

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

B. Wing Slot System

- (1) Disconnect slots open and slots closed lines from wing slot control valve, located on right power manifold (see Figure 601).
- (2) Connect slots open line to test stand pressure hose. Connect slots closed line to test stand return hose.
- (3) Disconnect lines from 4 slot cylinders, cap all lines except outboard-right cylinder lines. Install jumper across these two lines.
- (4) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (5) Flush circuit for three minutes.
- (6) Depressurize test stand.
- (7) Move jumper to right inboard slot cylinder lines, cap outboard lines, and repeat steps (4 through 6).
- (8) Repeat steps (3 through 7) for left side. Make certain that all lines on both sides of airplane, with exception of jumpered lines, are capped.
- (9) Inspect, clean, and/or replace wing slot cylinders and wing slot control valve, located on right power manifold.
- (10) Restore all lines and units to original configuration. Adjust rigging if necessary per Chapter 27.

C. Main Gear Retract System (See Figures 602 and 603.)

- (1) Disconnect gear up pressure line, gear down pressure line, and gear down return lines from main gear control valve.
- (2) Connect jumper between gear down pressure line and gear down A-return line.
- (3) Connect gear up line to test stand pressure hose.
- (4) Disconnect gear down A-return line from tee in (nose gear return) A-return line, located in left wheel well aft of rear spar and below dual filter and relief valve. Connect line to test stand return hose.
- (5) Disconnect right gear up and gear down lines from tees, located to right of centerline of airplane. Cap tees. Left gear retract system will be flushed first.
- (6) In left wheel well, disconnect both main gear uplatch lines from tees in gear up and gear down lines. Cap tees.
- (7) Disconnect both main gear door latch lines from tees in gear up and gear down lines near wing root. Cap tees.

May 1/71


Printed in U.S.A.

29-04  
CODE 1  
Page 604A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) Disconnect downlock bungee pressure line from tee in gear up line. Cap tee.
- (9) Disconnect line, which leads to bungee cylinder, from tee in gear down line. Cap tee.
- (10) Disconnect line, which leads to gear door manual open valve, from tee in main gear down line. Cap tee.
- (11) Replace restrictor in gear down line with jumper.
- (12) Disconnect gear up and gear down lines from upstream side of actuating cylinder swivel gland. Connect jumper between these lines.
- (13) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (14) Flush circuit for five minutes.

DOUGLAS AIRCRAFT CO  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

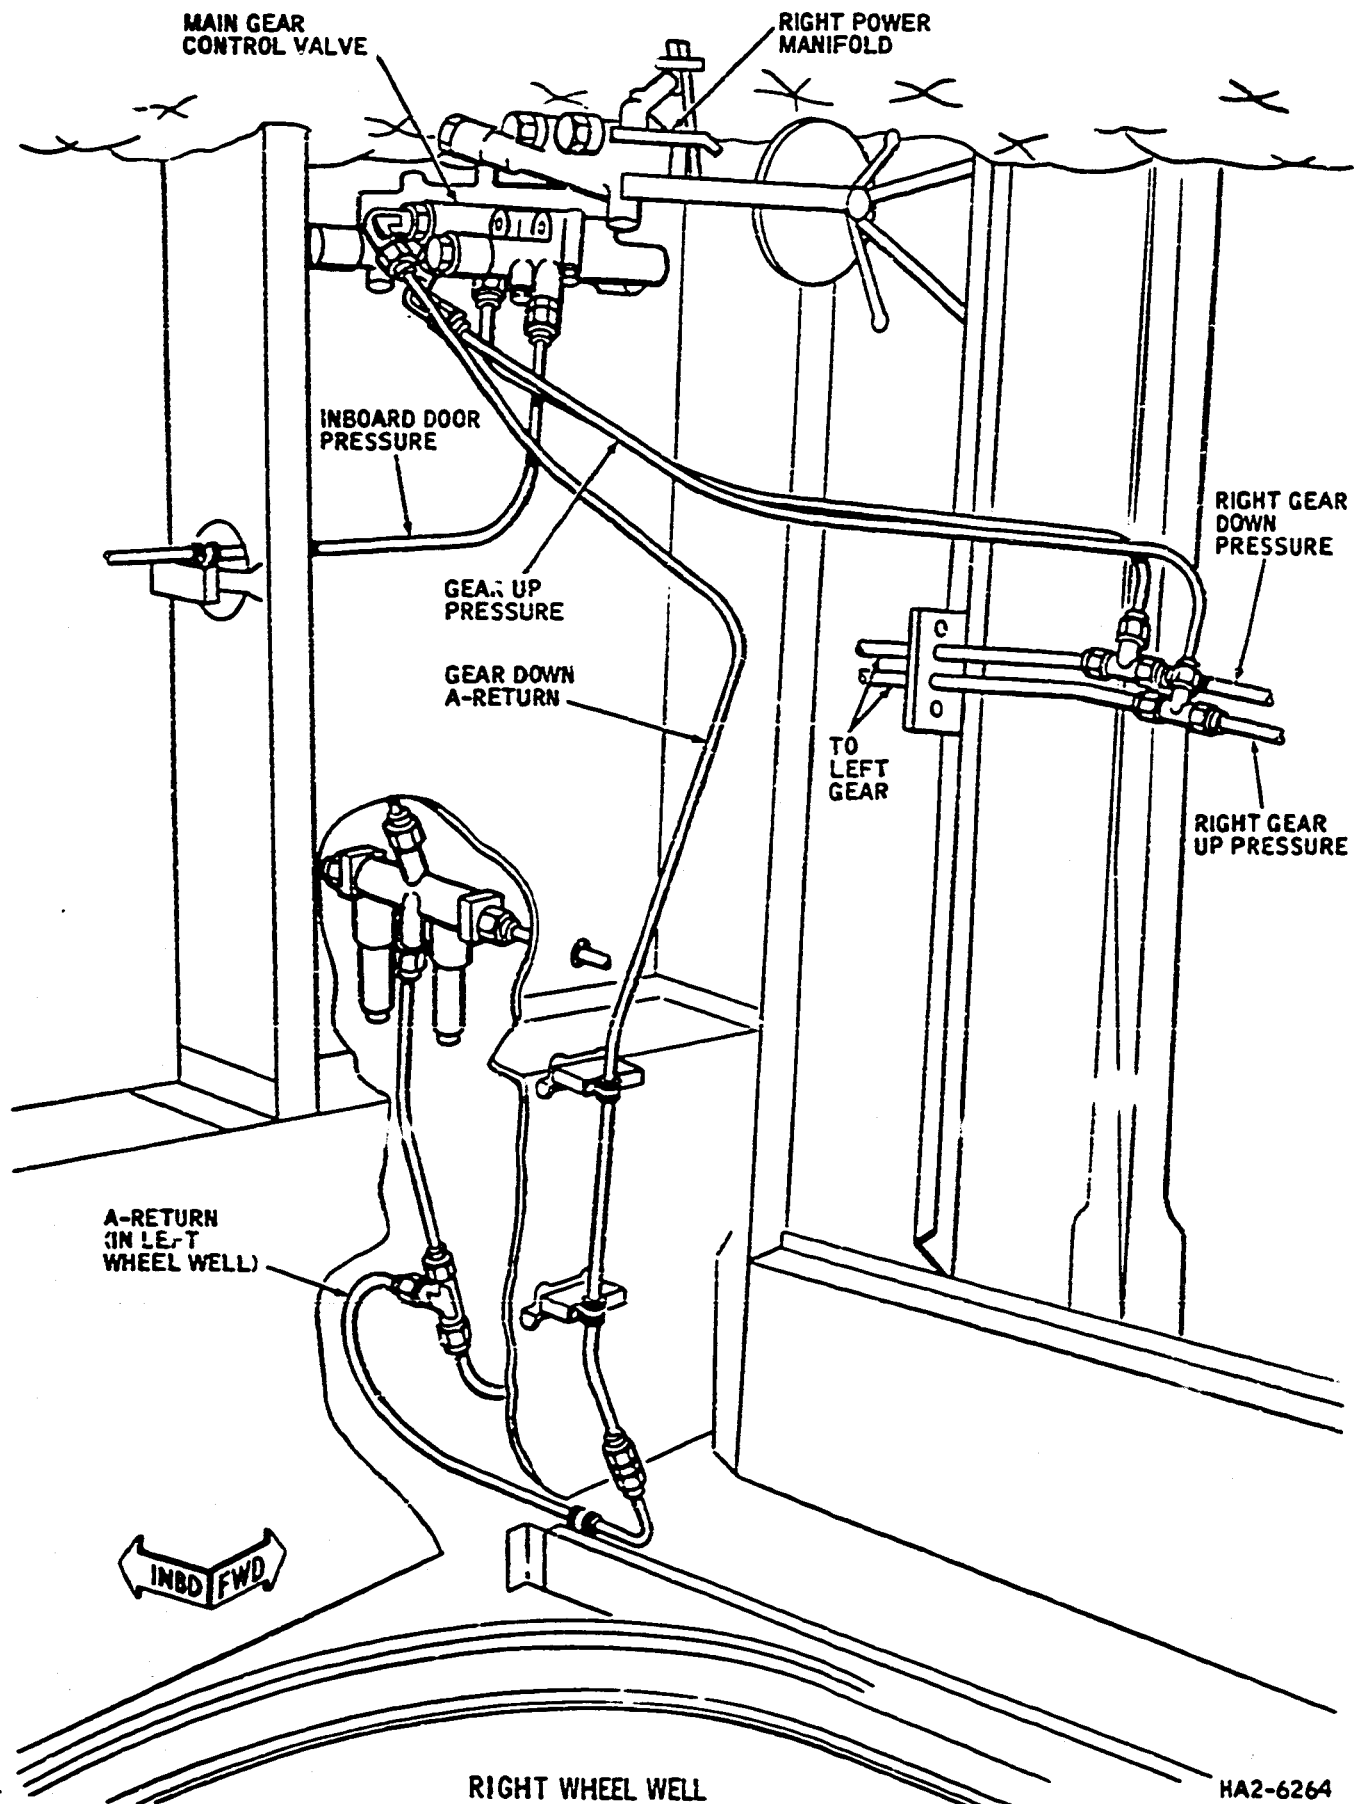


Flushing Procedure Line Connection Locations  
 Figure 602

Feb 1/69

29-04  
 CODE 1  
 Page 605

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

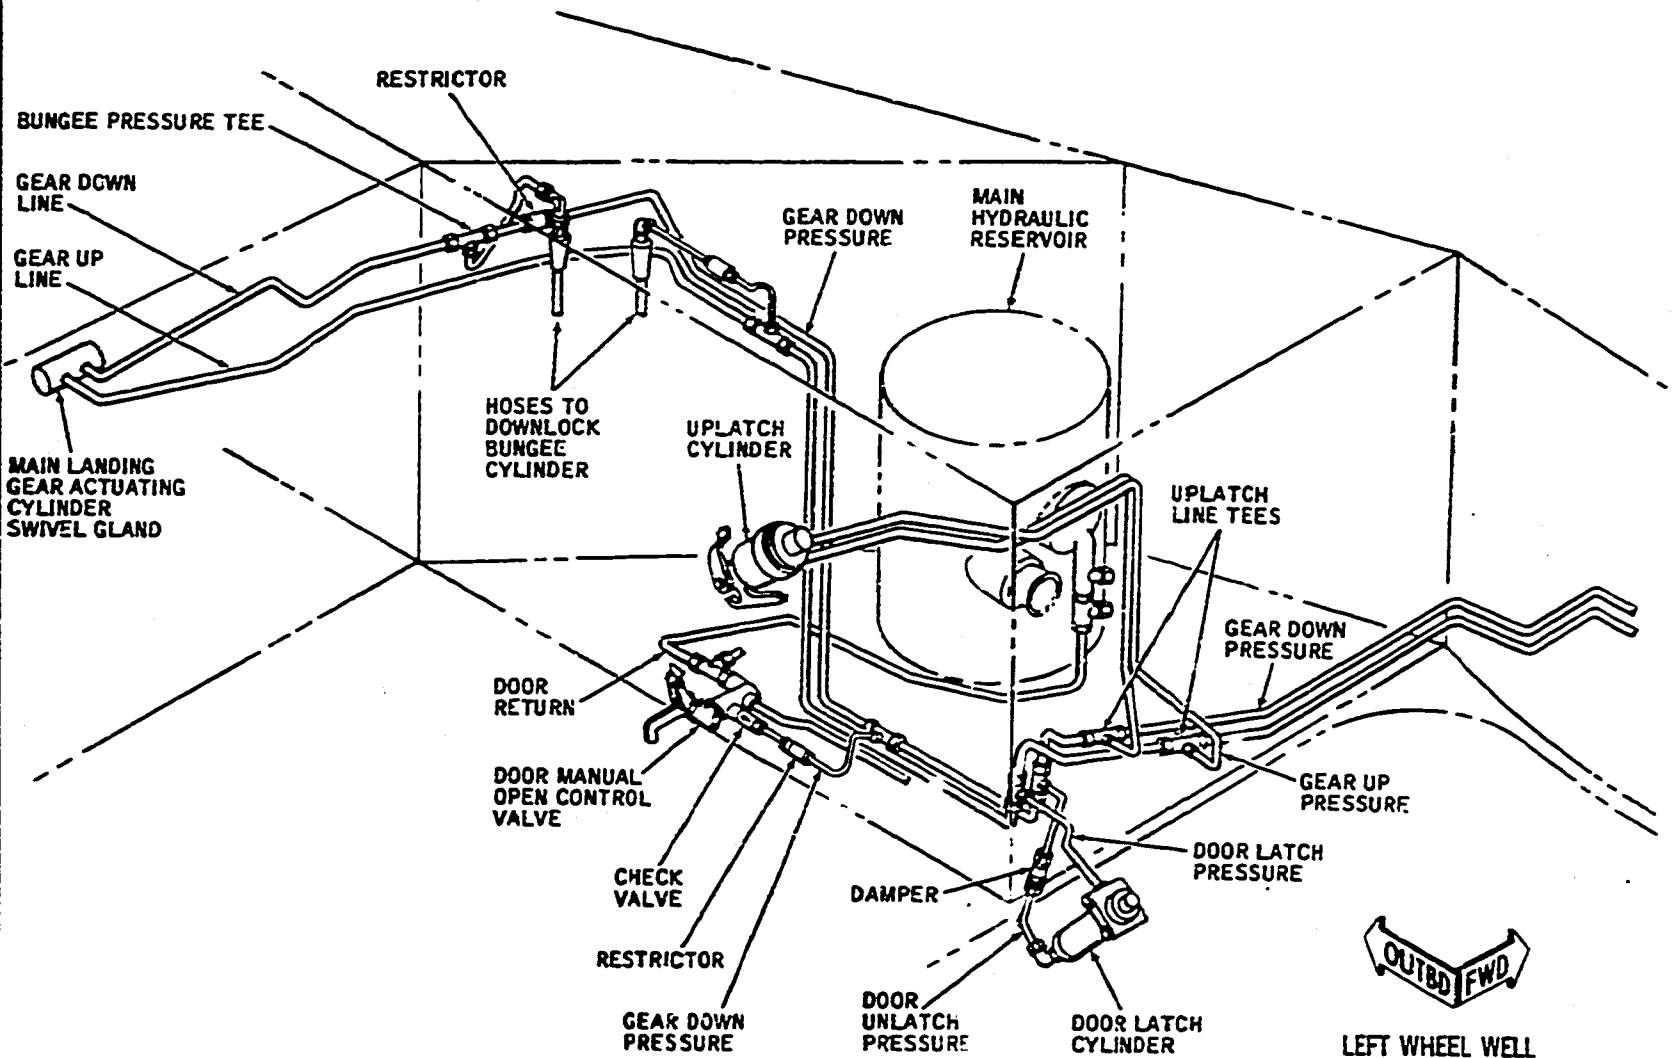

29-04  
 CODE 1  
 Page 606

Flushing Procedure Line Connection Locations  
 Figure 603

Feb 1/69

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (15) Depressurize test stand.
- (16) Inspect, clean, and/or replace actuating cylinder and attaching swivel gland, door latch assembly and attaching lines (which include damper), downlock bungee cylinder and connecting lines including 2 hoses, restrictors and several short lines.
- (17) Disconnect gear uplatch lines from gear uplatch cylinder and connect jumper between lines.
- (18) Connect this circuit to test stand pressure and return hoses and flush for 3 minutes. Use same pressure as in step (13).
- (19) Inspect, clean, and/or replace main gear uplatch cylinder.
- (20) Restore all lines and units on left side of airplane to original configuration.
- (21) Connect test stand pressure hose to right gear down line, and test stand return hose to right gear up line. These lines were capped in step (5).
- (22) Repeat steps (6 through 20) for right side of airplane.
- (23) Make any necessary adjustments per Chapter 32.

D. Main Gear Door System

- (1) Disconnect right main gear door lines from bulkhead tees in center web of airplane. Cap tees.
- (2) Disconnect pressure and return lines from left door actuating cylinder swivel gland. Place jumper across these lines.
- (3) Disconnect door return line from inboard side of door manual open valve. Connect line to test stand return hose.
- (4) Disconnect door pressure line from main gear control valve. Connect line to test stand pressure hose.
- (5) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (6) Flush circuit for three minutes.
- (7) Depressurize test stand.
- (8) Disconnect pressure and return lines from right door actuating cylinder swivel gland. Connect jumper across these lines.
- (9) Connect test stand pressure and return hoses to lines that were capped in step (1).


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (10) Repeat steps (5 through 7) for these lines.
- (11) Inspect, clean, and/or replace both door actuating units, lines, and swivel glands.
- (12) Inspect, clean, and/or replace door manual open valve, short line between manual open valve and tee in down line (this line includes restrictor and check valve), and line which runs from tee in manual open valve to reservoir fitting.
- (13) Restore all lines and units to original configuration, and make any necessary adjustments per Chapter 32.

E. Bogie Trim and Bogie Swivel Unlock Systems (See Figure 604.)

- (1) Disconnect both bogie unlock lines, and bogie trim pressure line from bogie swivel unlock control valve located on left power manifold.
- (2) Connect test stand pressure hose to bogie trim pressure line, and test stand return hose to left bogie unlock line.
- (3) Disconnect bogie trim pressure line, which leads to right gear, at tee located below left power manifold and to left of airplane centerline. Cap tee.
- (4) Disconnect line, which runs from tee in bogie relief valve to tee in bogie trim pressure line, at bogie trim pressure line. Cap tee.
- (5) Disconnect line with check valve, which runs from tee in bogie relief valve to tee in bogie unlock line, at tee. Cap tee.
- (6) Install jumper lines around main gear swivel gland in bogie trim pressure line and bogie unlock line.
- (7) Disconnect bogie trim pressure hose from manifold port below tee in forward manifold, located on shock strut above bogie beam. Cap manifold port.
- (8) Disconnect both hoses from bogie unlock cylinder, and jumper these hoses together.
- (9) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (10) Flush circuit for five minutes.
- (11) Depressurize test stand.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

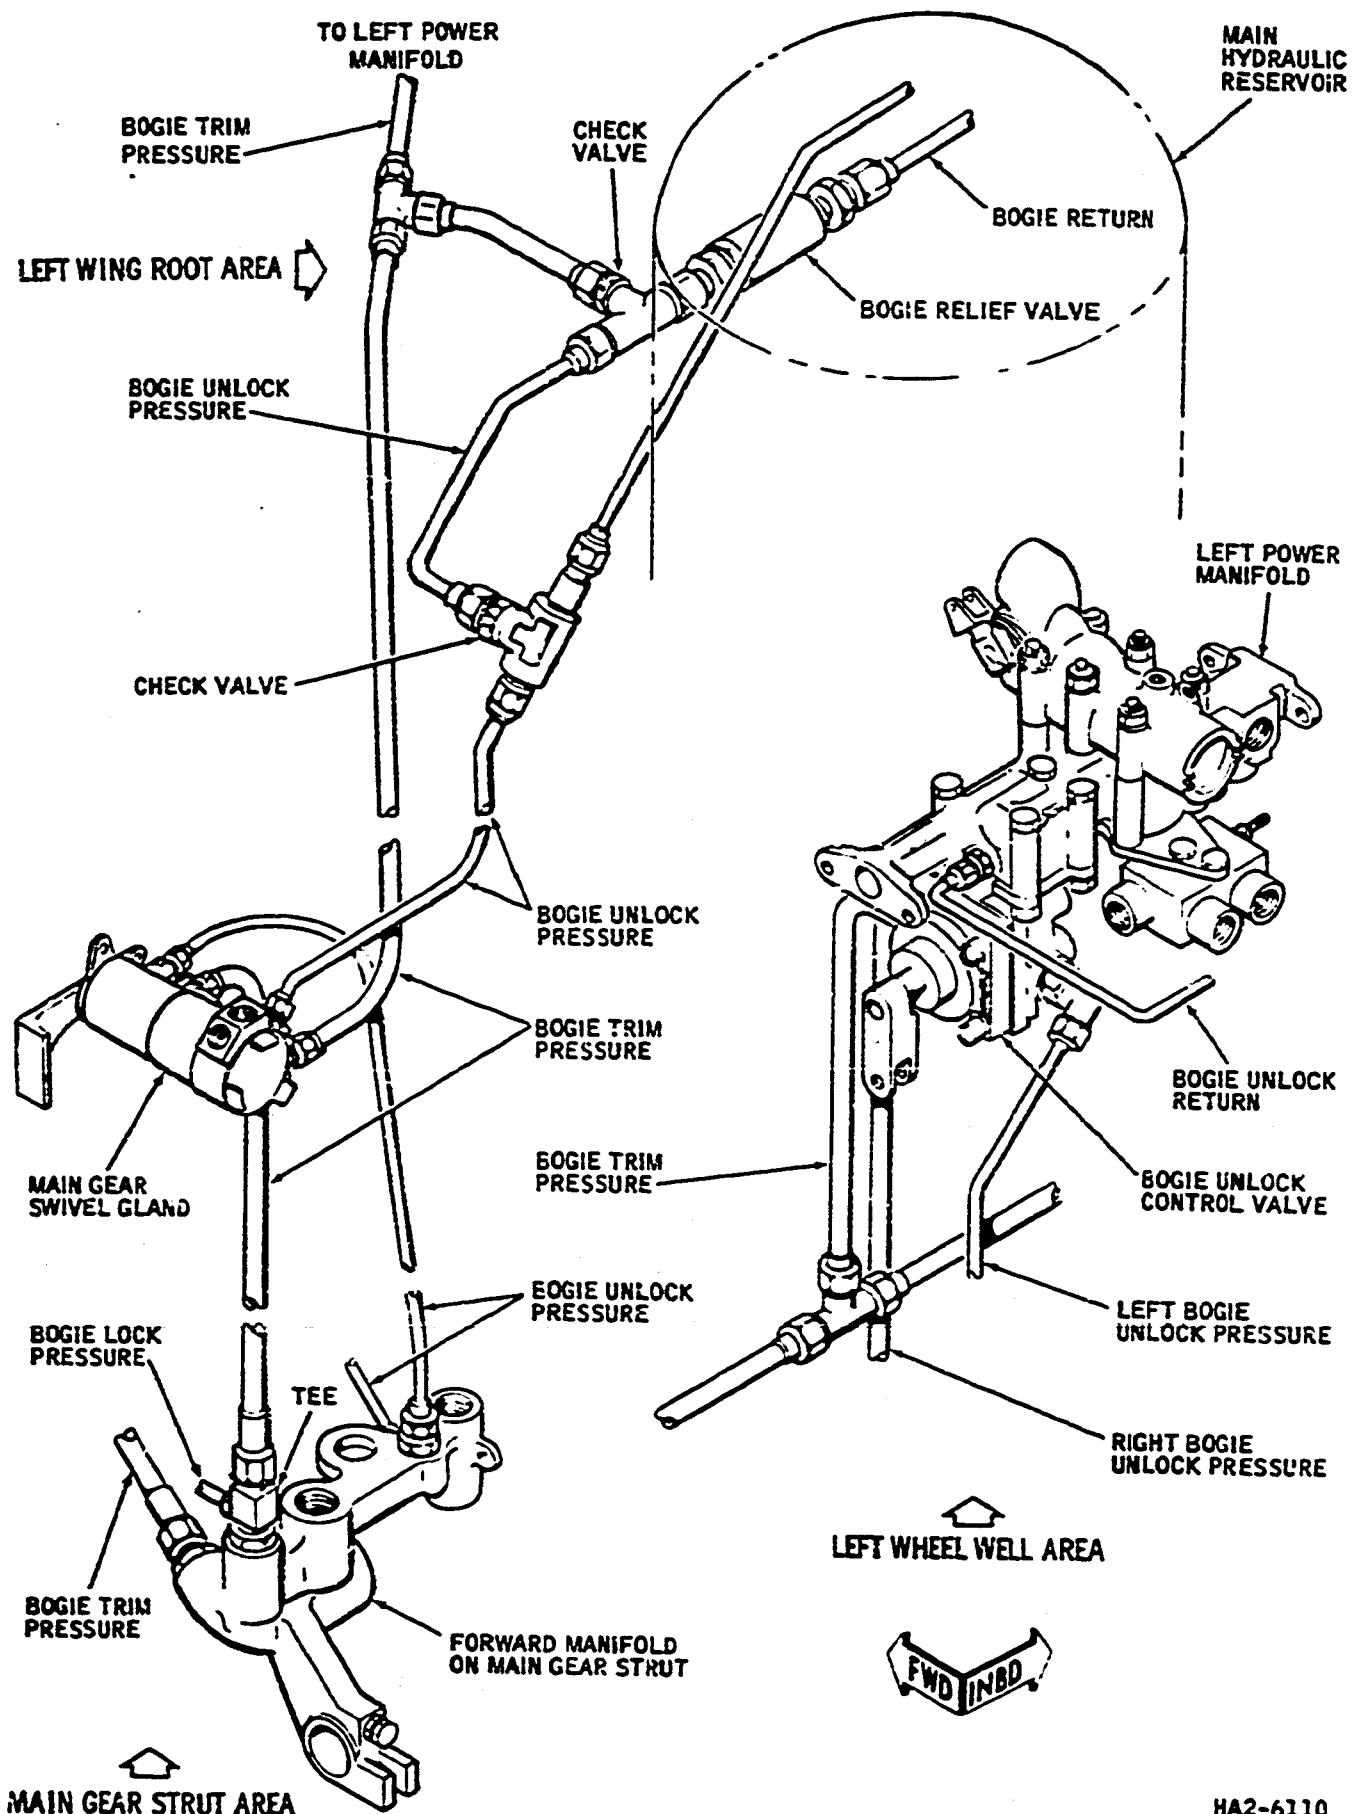

Flushing Procedure Line Connection Locations  
 Figure 604

Feb 1/69

Printed in U.S.A.

HA2-6110

29-04  
 CODE 1  
 Page 609




DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (12) Inspect, clean, and/or replace bogie swivel unlock valve, bogie relief valve and check valve, short lines which lead to tees in bogie trim pressure line, bogie unlock line, manual door open valve on left side of airplane, and tee in antiskid valve on right side of airplane.
- (13) Inspect, clean, and/or replace swivel gland, located at top of main gear strut, bogie swivel unlock cylinder, and bogie trim cylinder with attaching hose and line.
- (14) Connect right bogie trim pressure line to tee from which it was disconnected in step (3). Disconnect left bogie trim pressure line from this tee, and cap tee.
- (15) Disconnect test stand return hose from left bogie unlock line and connect it to right bogie unlock line.
- (16) Repeat steps (4 through 13) for right side of airplane.
- (17) Restore all lines, hoses, and units to original configuration. Make adjustments as necessary per Chapter 32.

F. Nose Gear System (See Figures 605 and 606.)

- (1) Disconnect nose gear down line from tee in nose gear control valve. Connect line to test stand pressure hose.
- (2) Disconnect actuating cylinder gear down hose from tee in gear down line, located on left side of nosewheel well. Cap tee.
- (3) Jumper check valve in steering pressure line, which runs from tee for actuating cylinder down hose to tee which branches to reserve accumulator shutoff valve and pressure line running forward.
- (4) At tee between check valve, removed in step (3), and reserve accumulator shutoff valve, disconnect steering pressure line which leads forward. Cap tee.
- (5) Disconnect pressure line from left side of reserve accumulator shutoff valve. Place jumper between this line and line which was disconnected in step (4).
- (6) Replace check valve in steering pressure line, located aft of nosewheel steering valve, with jumper.
- (7) Disconnect all four lines from steering control valve. Place jumpers between pressure line and steer right line, and between return line and steer left line.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

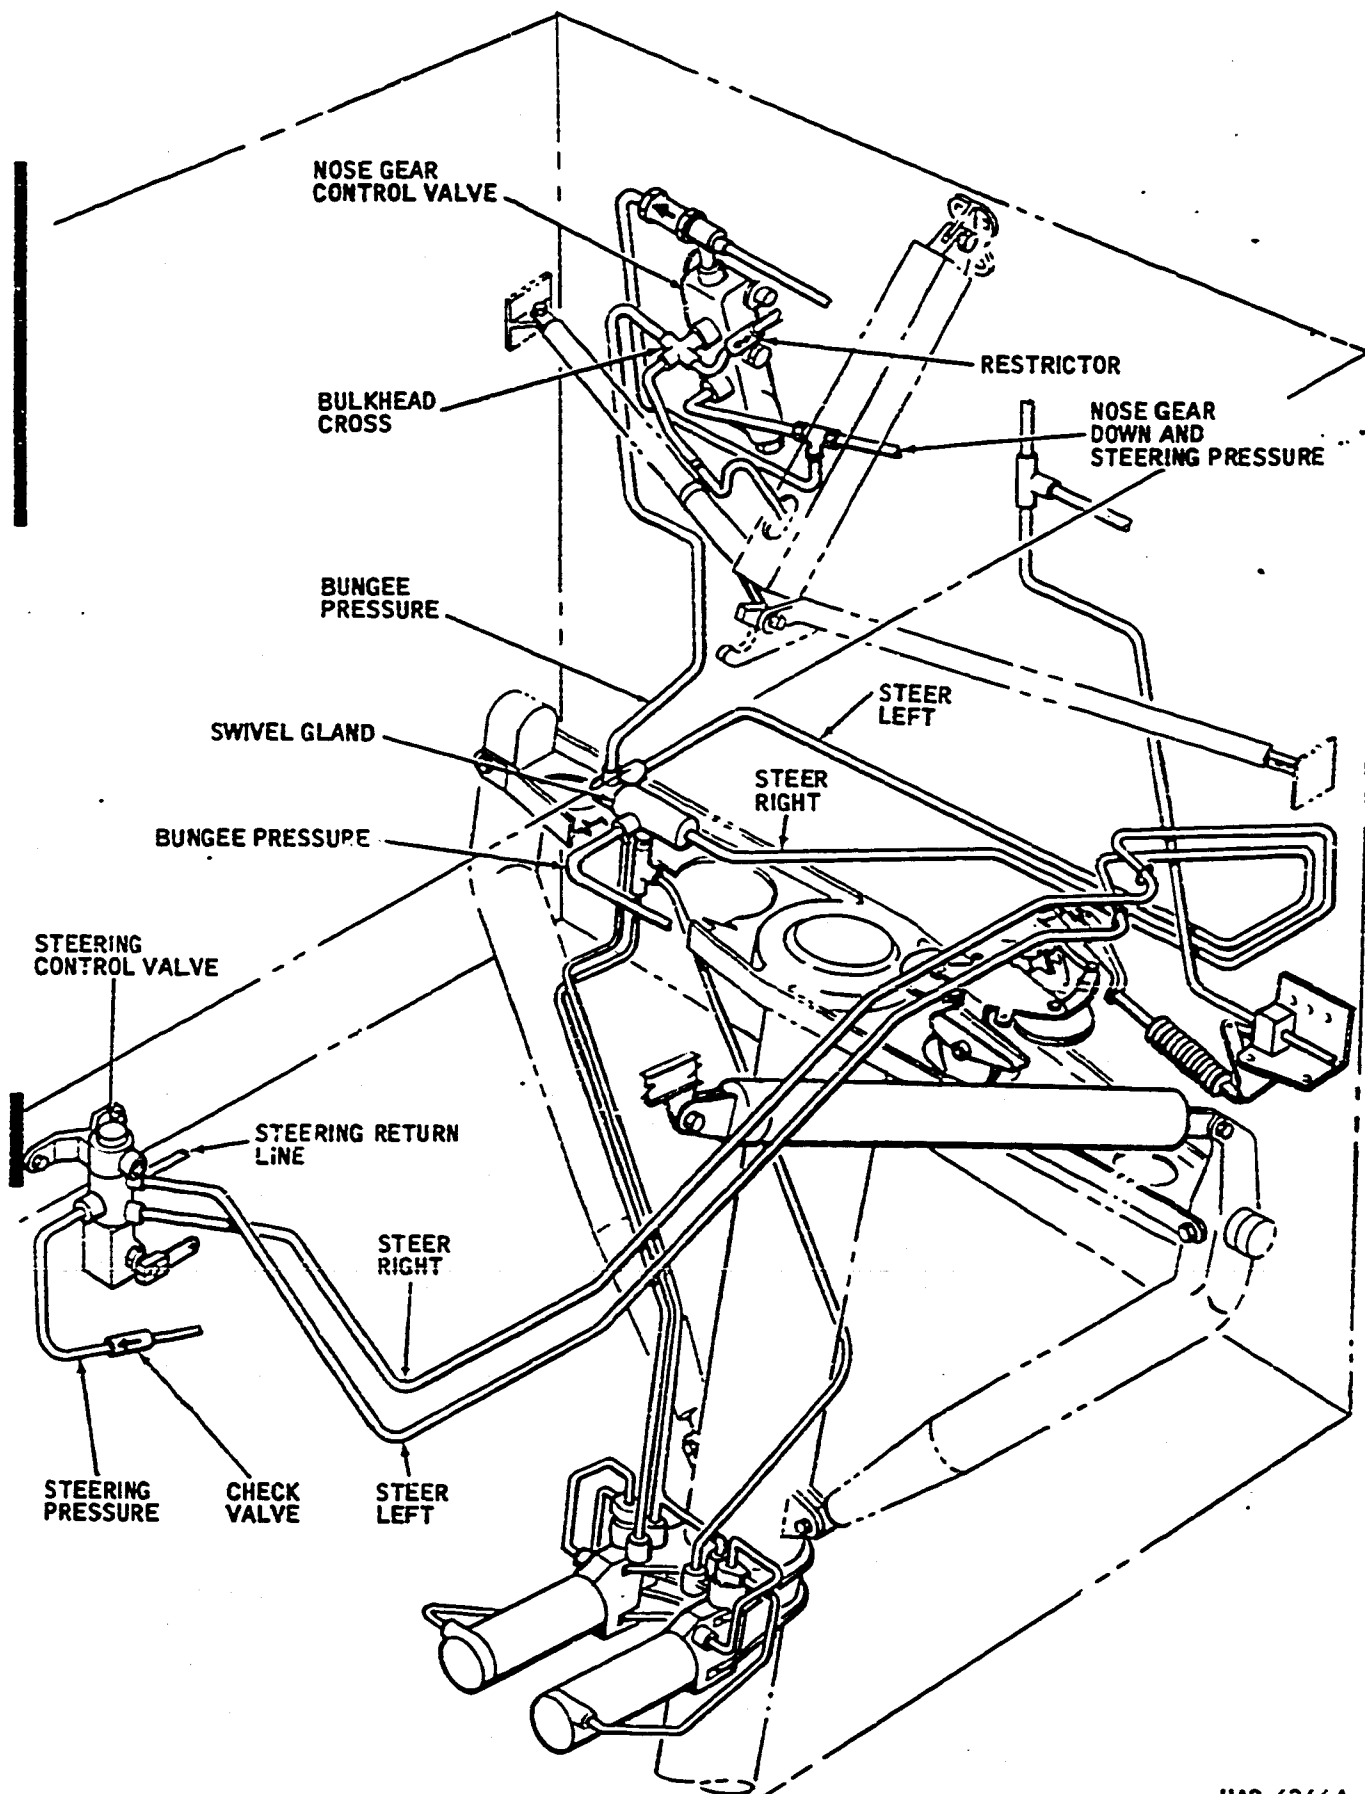

HA2-6266A


Flushing Procedure Line Connection Locations  
 Figure 605

May 1/71

29-04  
 CODE 1  
 Page 611

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) Disconnect three 1/2-inch lines, and two 3/8-inch lines from swivel gland located on cross arm. Place jumper across two open steer left lines, located on opposite sides of swivel gland. Place jumper across two steer right lines, which were disconnected from same tee in swivel gland.
- (9) Disconnect at steering cylinder glands, three steering lines which run from swivel gland on crossarm to glands at steering cylinders.
- (10) Install jumper across two lines on right cylinder. On left cylinder install jumper from open line to open steer-right line upstream of swivel gland on crossarm.
- (11) Disconnect steering return line from lower side of tee in steering relief valve. Disconnect gear actuating cylinder up hose at cylinder. Place jumper between this open line and hose.
- (12) Disconnect 1/4-inch up line from restrictor on side away from control valve. Disconnect 1/4-inch bungee line at bulkhead cross fitting at control valve. Place jumper across these two open lines.
- (13) Disconnect bungee line from top of swivel gland and connect to test stand return hose.
- (14) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (15) Flush circuit for five minutes.
- (16) Depressurize test stand.
- (17) Inspect, clean, and/or replace relief valve, bleeder valve, return accumulator and two associated lines, nose gear actuating cylinder and attaching hoses, bungee cylinder and attaching line, swivel gland mounted on crossarm, uplatch cylinder and two lines which connect it to control valve.
- (18) Inspect, clean, and/or replace nosewheel steering valve, located on out-board side of left side of wheel well.
- (19) Inspect, clean, and/or replace nosewheel steering cylinders, restrictors, and gland assemblies and associated lines, nosewheel steering control valve, reserve accumulator shutoff valve and associated lines, and check valves.
- (20) Restore all lines and units to original configuration, and make any necessary adjustments as described in Chapter 32.

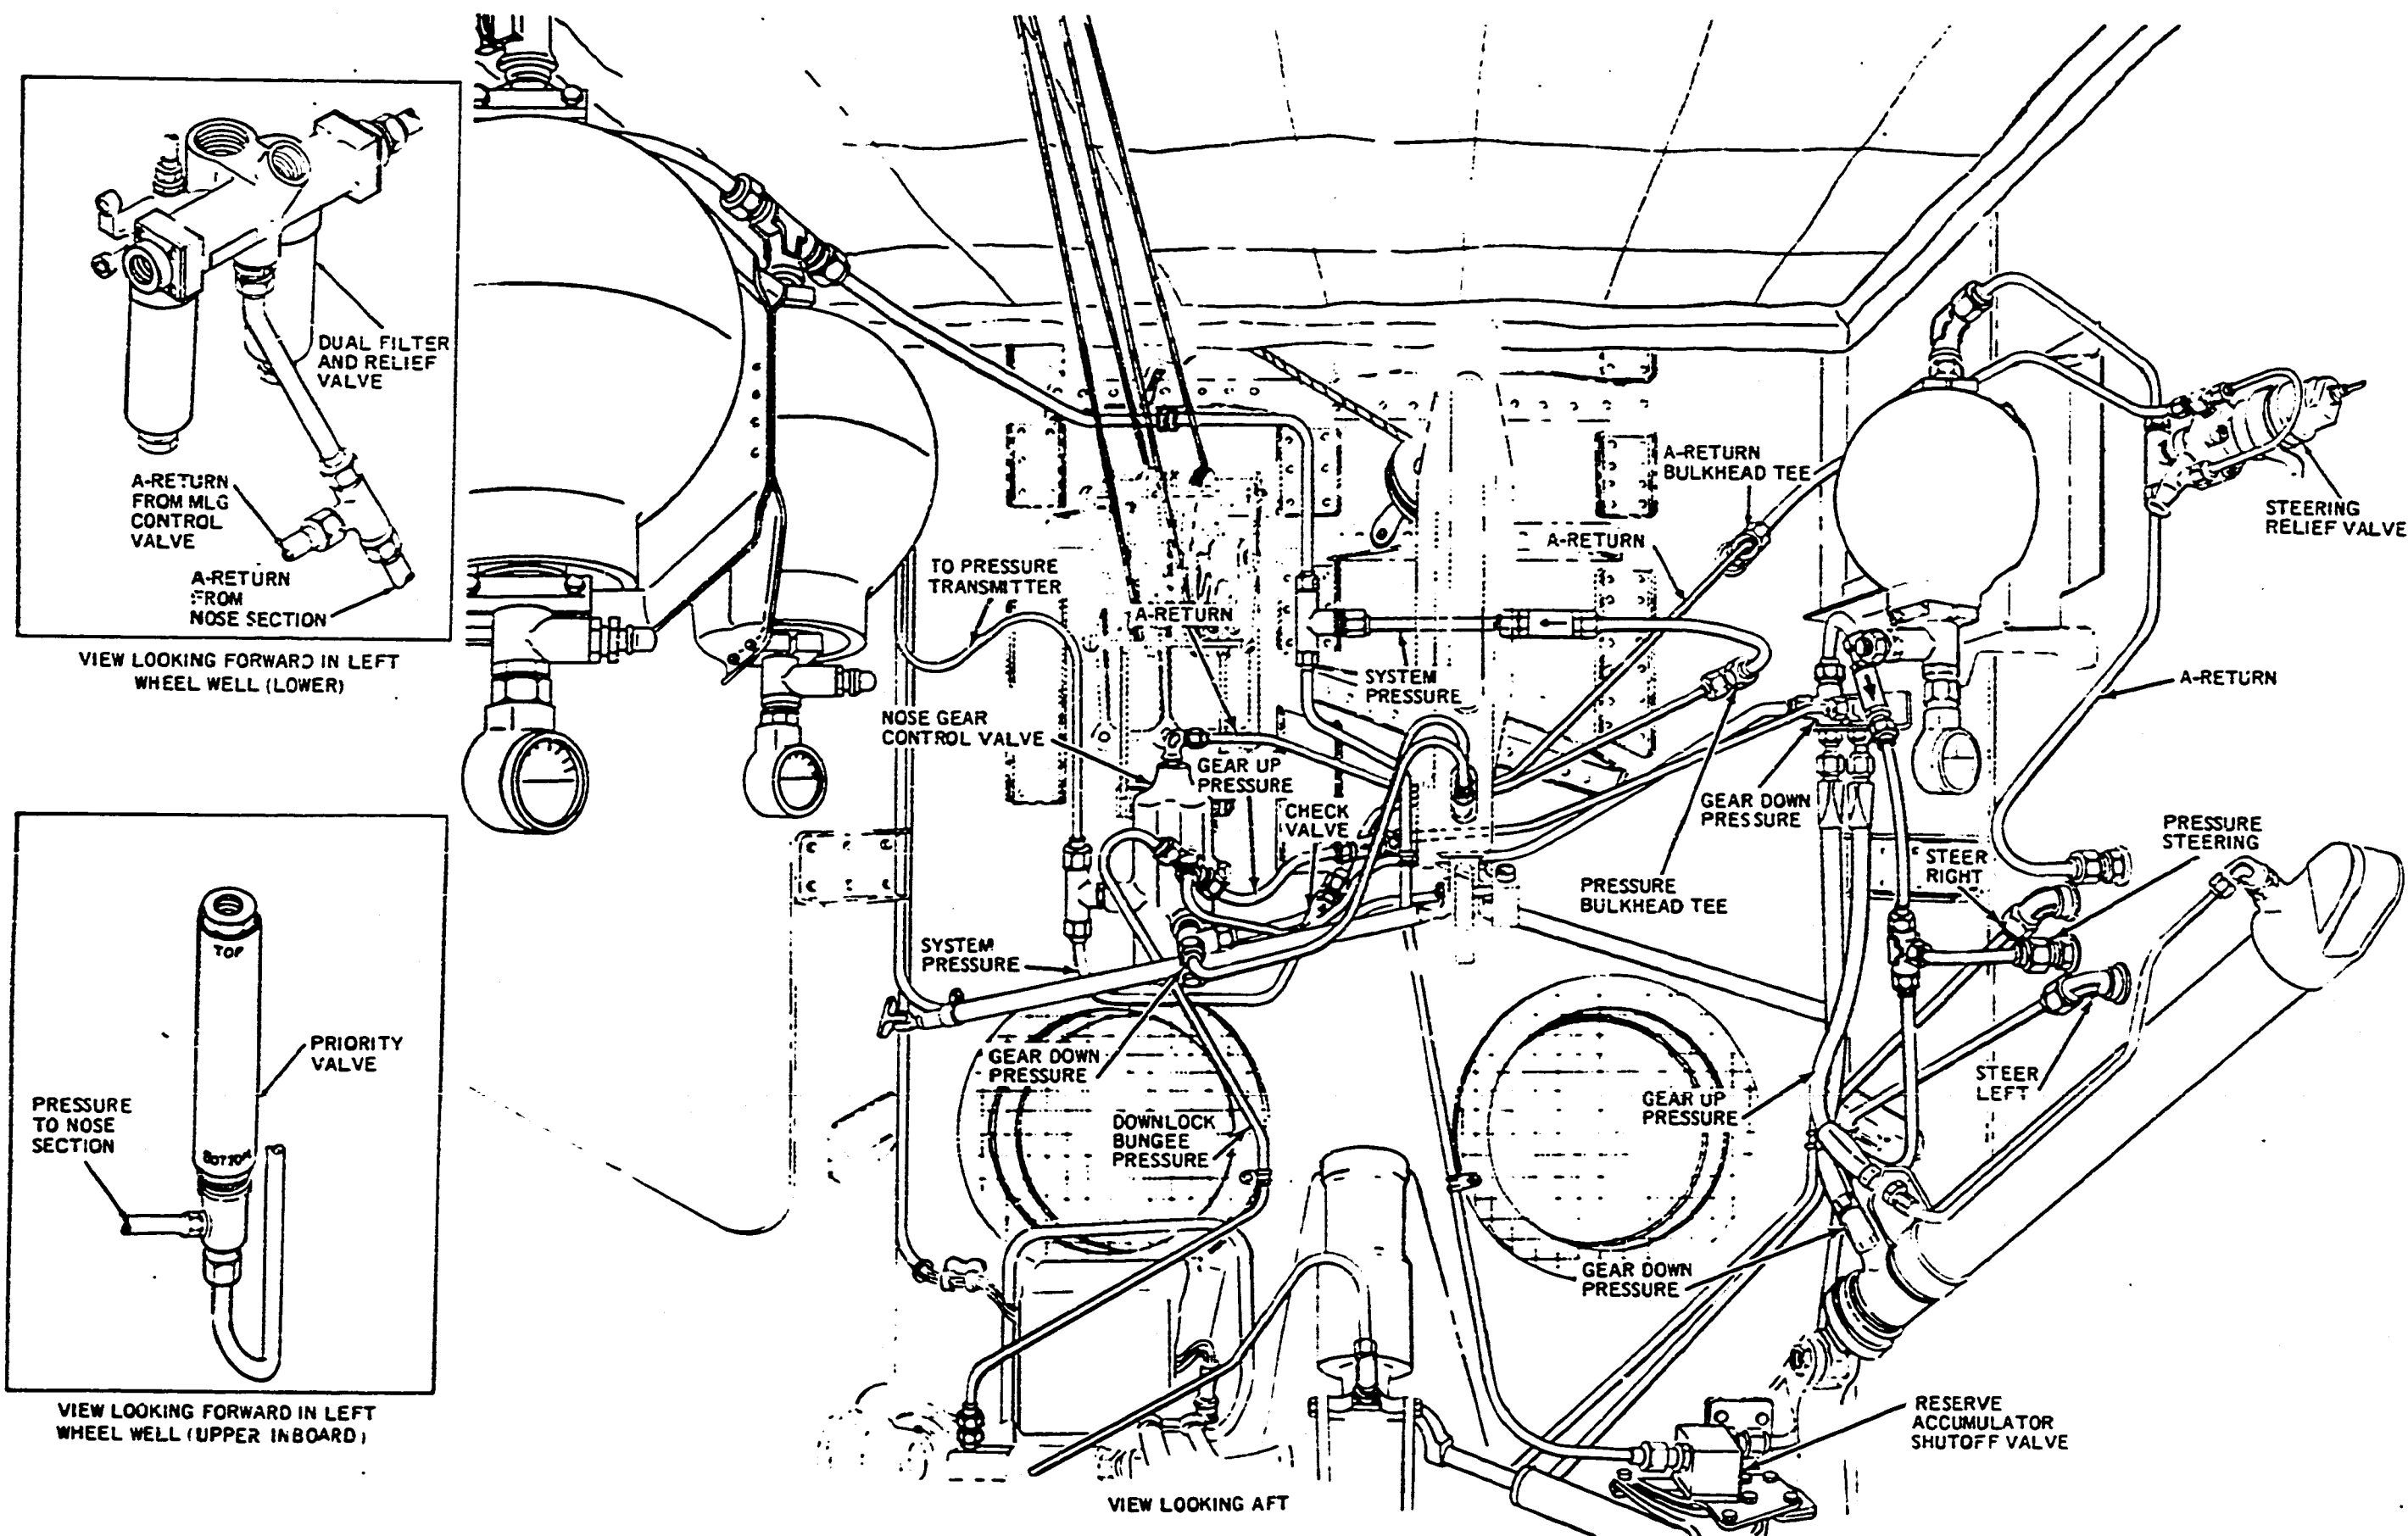

Flushing Procedure Line Connection Locations  
 Figure 606

29-04  
 CODE 1  
 Page 613

HA2-6127


Feb 1/69

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

G. Wheel Brake System Pressure Lines



- (1) Disconnect right gear brake pressure line from brake control valve, and connect test stand pressure hose to this line (see Figure 607).
- (2) Disconnect two brake pressure lines from swivel gland at top of main landing gear strut. Connect these lines with a jumper line.
- (3) Disconnect brake pressure line from upstream side of tee fitting at dual servo valves.
- (4) Disconnect four brake pressure outlet lines from servo valves. Connect jumper line between pressure inlet line and one pressure outlet line. Cap other three outlet lines.
- (5) Disconnect inlet and outlet lines and jumper fluid quantity limiter (or lockout cylinder) in outlet line connected in step (4).
- (6) Disconnect brake hose from corresponding brake, and connect hose to test stand return hose.
- (7) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (8) Flush circuit for five minutes.
- (9) Depressurize test stand.
- (10) Disconnect jumper line from outlet line connected in step (4), cap outlet line, and connect jumper to one of other three outlet lines.
- (11) Repeat steps (5 through 10) to flush remaining servo valve outlet lines.
- (12) Inspect, clean and/or replace brake control valve, main landing gear swivel gland, dual servo valves, fluid quantity limiters (or lockout cylinders).
- (13) Disconnect test stand pressure hose from right gear brake pressure line at control valve, and connect to left gear brake pressure line at left brake control valve.
- (14) Repeat steps (2 through 12) to flush left brake system pressure lines.
- (15) Restore all lines and units to original configuration.
- (16) To flush brake accumulators and check valve system, disconnect pressure line which runs from right power manifold to tee on accumulator. Connect test stand return hose to line that was disconnected at accumulator tee.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

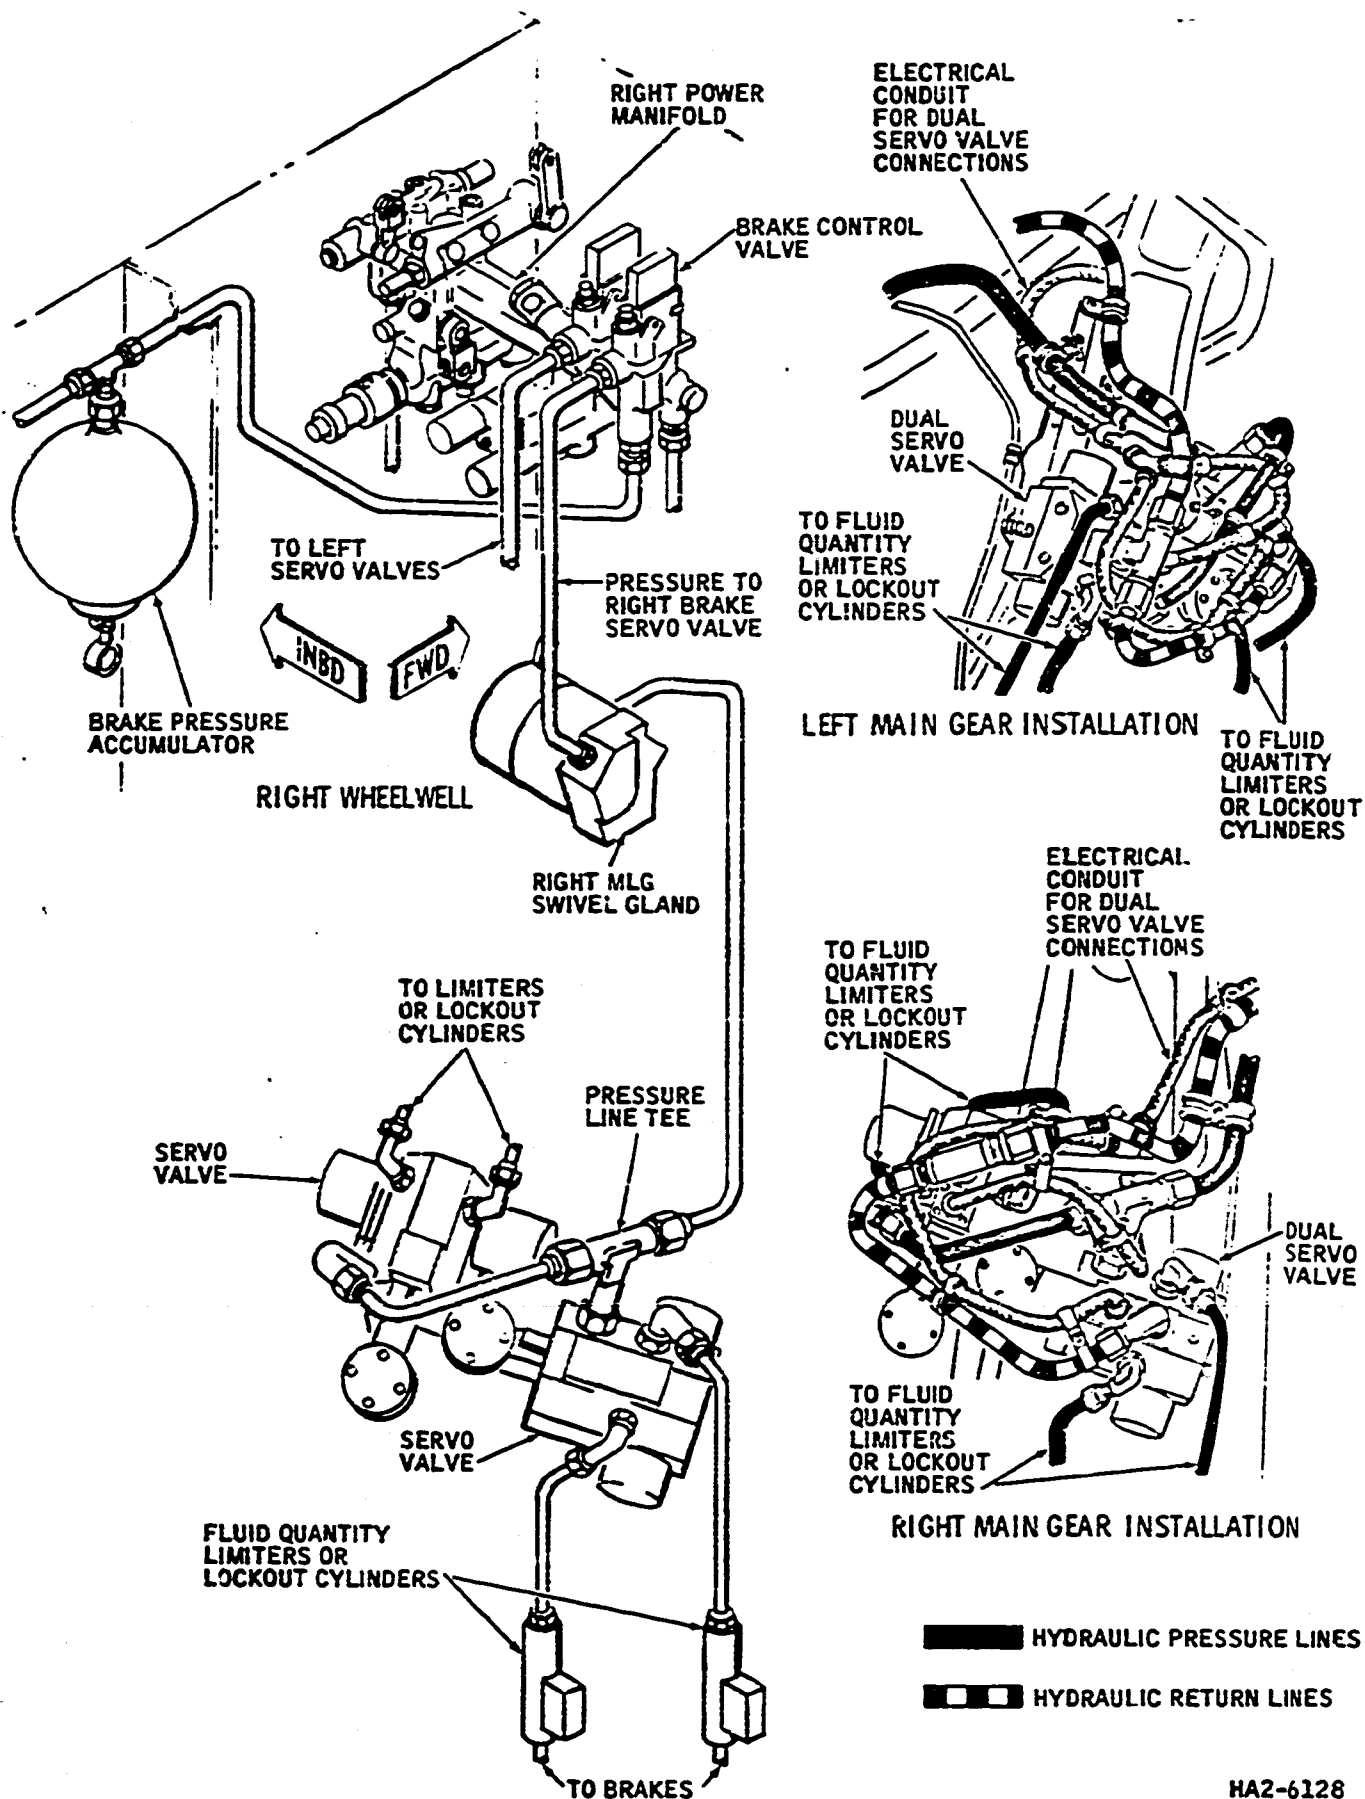

HA2-6128

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

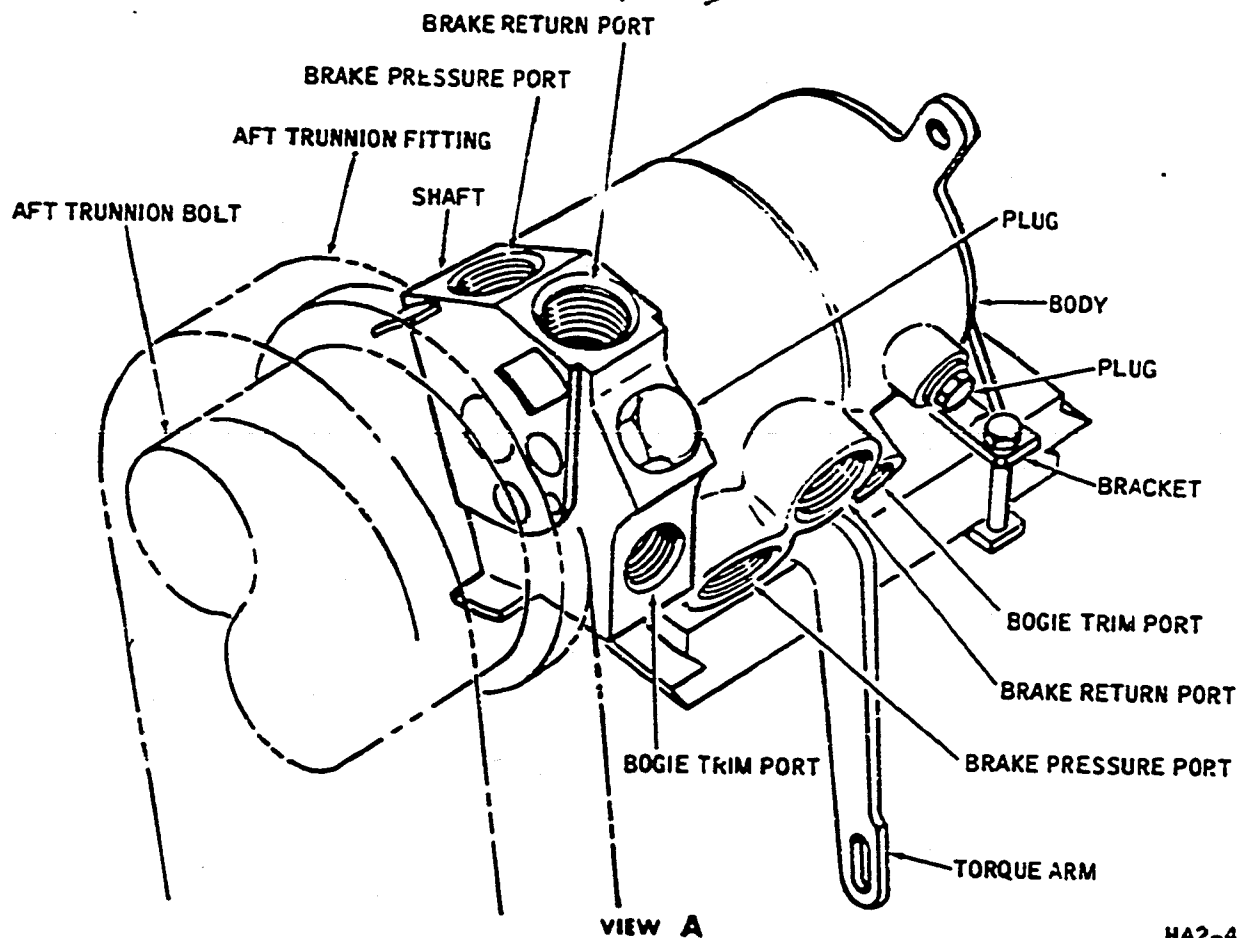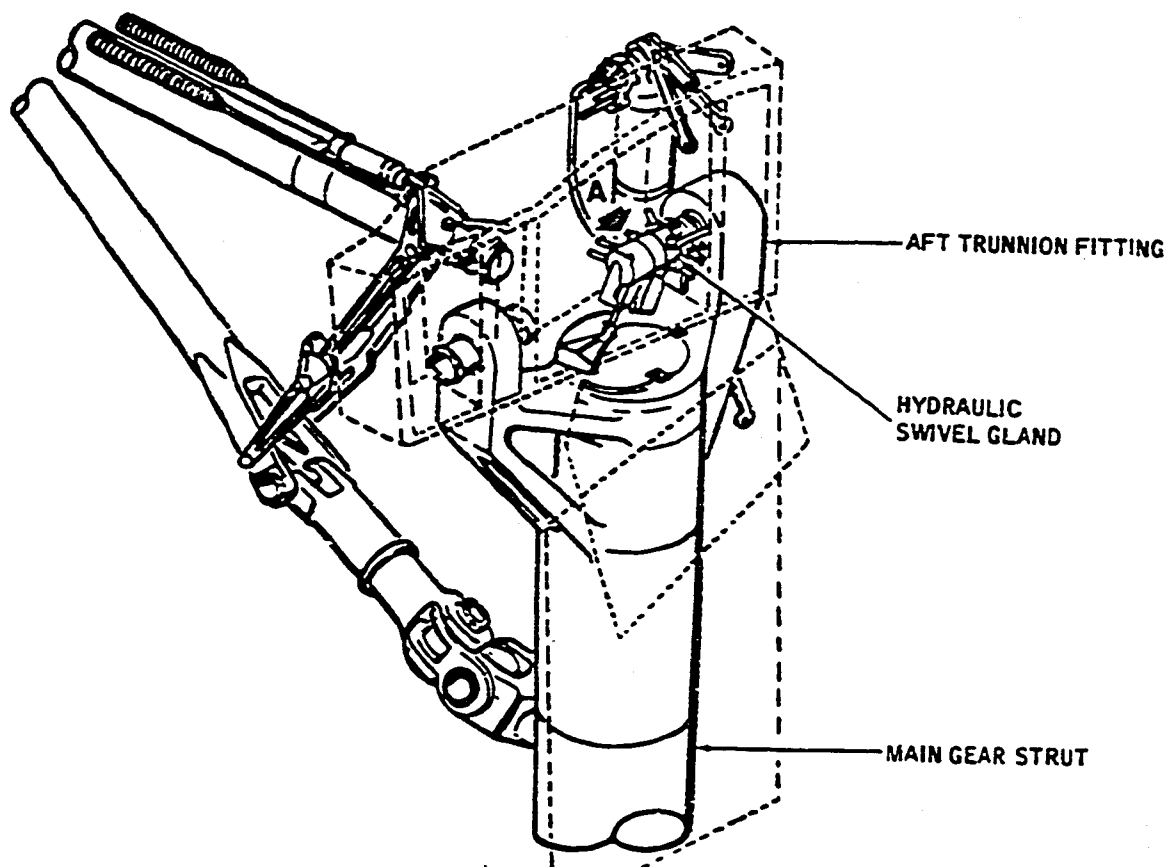

HA2-4287A

Flushing Procedure Line Connection Locations  
 Figure 607 (Sheet 2)

Feb 1/69

29-04  
 CODE 1  
 Page 617

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (17) Remove brake inlet check valve seat, spring, and poppet from right power manifold. Install seat only with seals.
- (18) Remove pressure line from tee at bottom of priority valve, located below left power manifold, and connect this line to test stand pressure hose.
- (19) Pressurize test stand to 200 psi at 5 to 20 gpm flow.
- (20) Flush circuit for five minutes.
- (21) Depressurize test stand.
- (22) Remove inlet check valve seat. Examine check valve assembly for evidence of improper seating and magnetization. Install new check valve assembly if required.
- (23) Remove accumulators and connecting line. Clean and flush on bench.
- (24) Restore all lines and units to original configuration. Bleed and adjust brake system per Chapter 32.

H. Wheel Brake System Return Lines

- (1) Disconnect right anti-skid servo valve return line at tee fitting on upper servo valve on right main gear strut. Connect test stand pressure hose to this line.
- (2) Disconnect two return lines from swivel gland at top of main gear strut. Connect these lines with jumper line.
- (3) Disconnect anti-skid return line from tee fitting in aileron A return line, located in right wing root area (see Figure 607). Cap A-return tee fitting.
- (4) Disconnect bogie relief valve at tee and cap line.
- (5) Connect test stand return hose to anti-skid line at tee disconnected in step (3).
- (6) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (7) Flush circuit for five minutes.
- (8) Depressurize test stand.
- (9) Restore all lines and units to original configuration.



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (10) Disconnect left anti-skid servo valve return line at tee fitting on upper servo valve on left main gear strut. Connect test stand pressure hose to this line.
- (11) Disconnect two return lines from swivel gland at top of main gear strut. Connect these lines with jumper line.
- (12) Disconnect left bogie relief valve from anti-skid return line at tee fitting. Cap line and tee.
- (13) Disconnect left anti-skid return line from cross fitting in case drain return port of main reservoir. Cap cross fitting.
- (14) Connect test stand return hose to this line.
- (15) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (16) Flush circuit for five minutes.
- (17) Depressurize test stand.
- (18) Restore all lines and units to original configuration.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS -

INSPECTION/CHECK

1. General

- A. The purpose of this section is to provide a logical guide for removing the contaminants (foreign particles) from the fluid, units, and lines of the utility systems upstream of the control system filters by flushing the systems with clean hydraulic fluid.
- B. This procedure may be deviated from as dictated by the individual circumstances. Hydraulic circuits that are easy to locate and follow, have been intentionally omitted from this procedure for the sake of brevity.
- C. The removal of overheated or diluted fluid, would follow generally the same procedure with the exception that the removed contaminated fluid would be caught in containers rather than recirculated through the hydraulic test stand.
- D. Before any flushing procedures are performed, personnel should read and thoroughly understand 29-00, Inspection/Check.

2. Tools and Equipment Required


- A. One hydraulic test stand capable of operating with Skydrol hydraulic fluid, and fitted with 10-micron or smaller filter.
- B. Pressure and return hoses, jumper lines, and fittings as required by the following procedures.

3. Flush Utility Systems Upstream of Control System Filters


A. Wing Flap System

- (1) Disconnect flap up and flap down lines from wing flap control valve (see Figure 601).
- (2) Remove restrictor with portion of wing flap up line, which is connected to wing flap control valve.
- (3) Disconnect flap return line from right power manifold just inboard of flap control valve. Jumper this line to flap down line, which was disconnected in step (1).
- (4) Connect open flap up line to test stand pressure hose.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

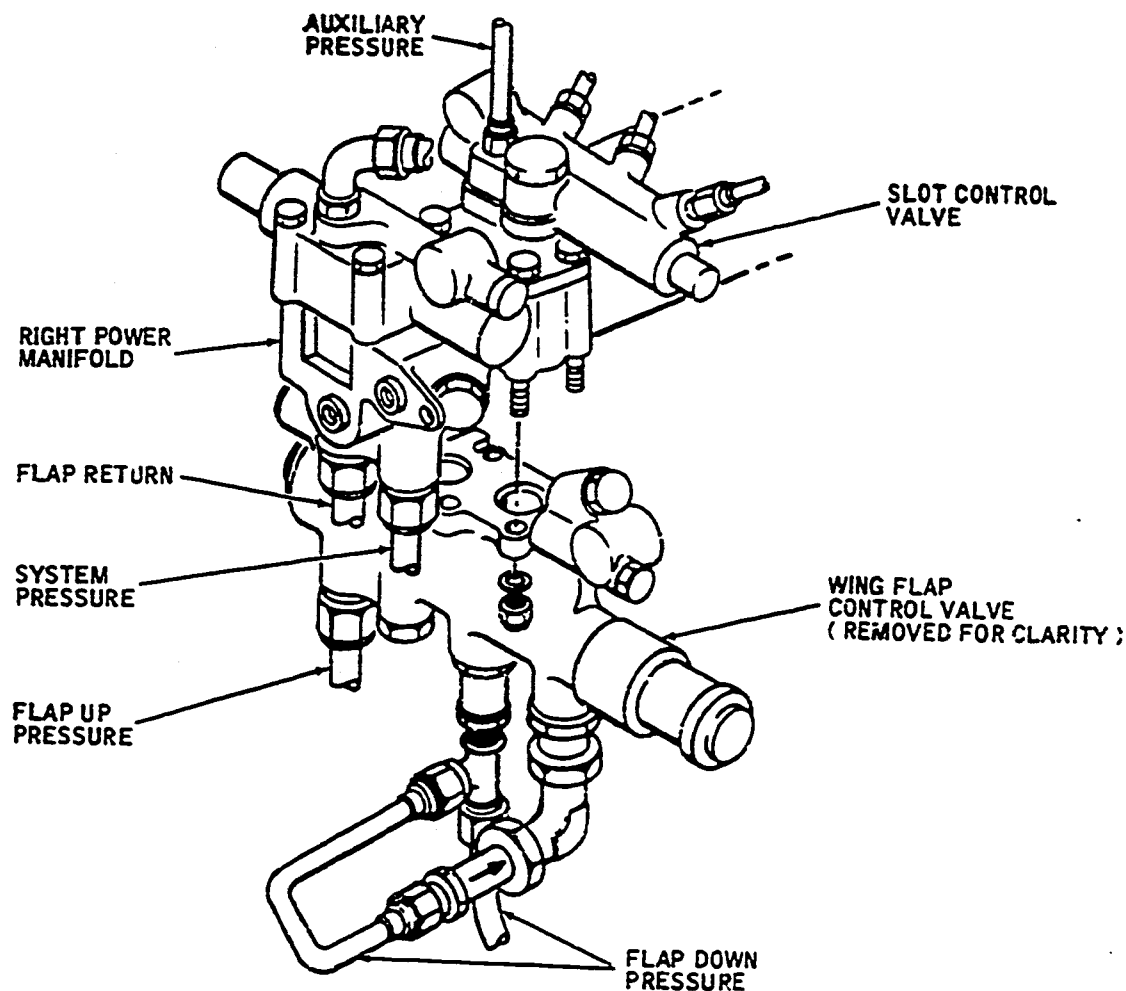


RIGHT POWER MANIFOLD

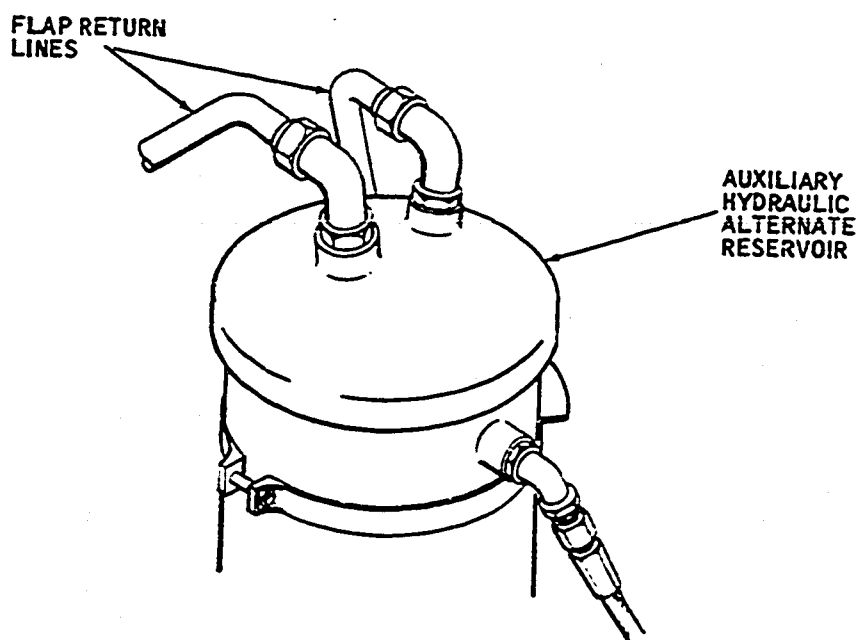

ALTERNATE RESERVOIR

HA2-6108A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

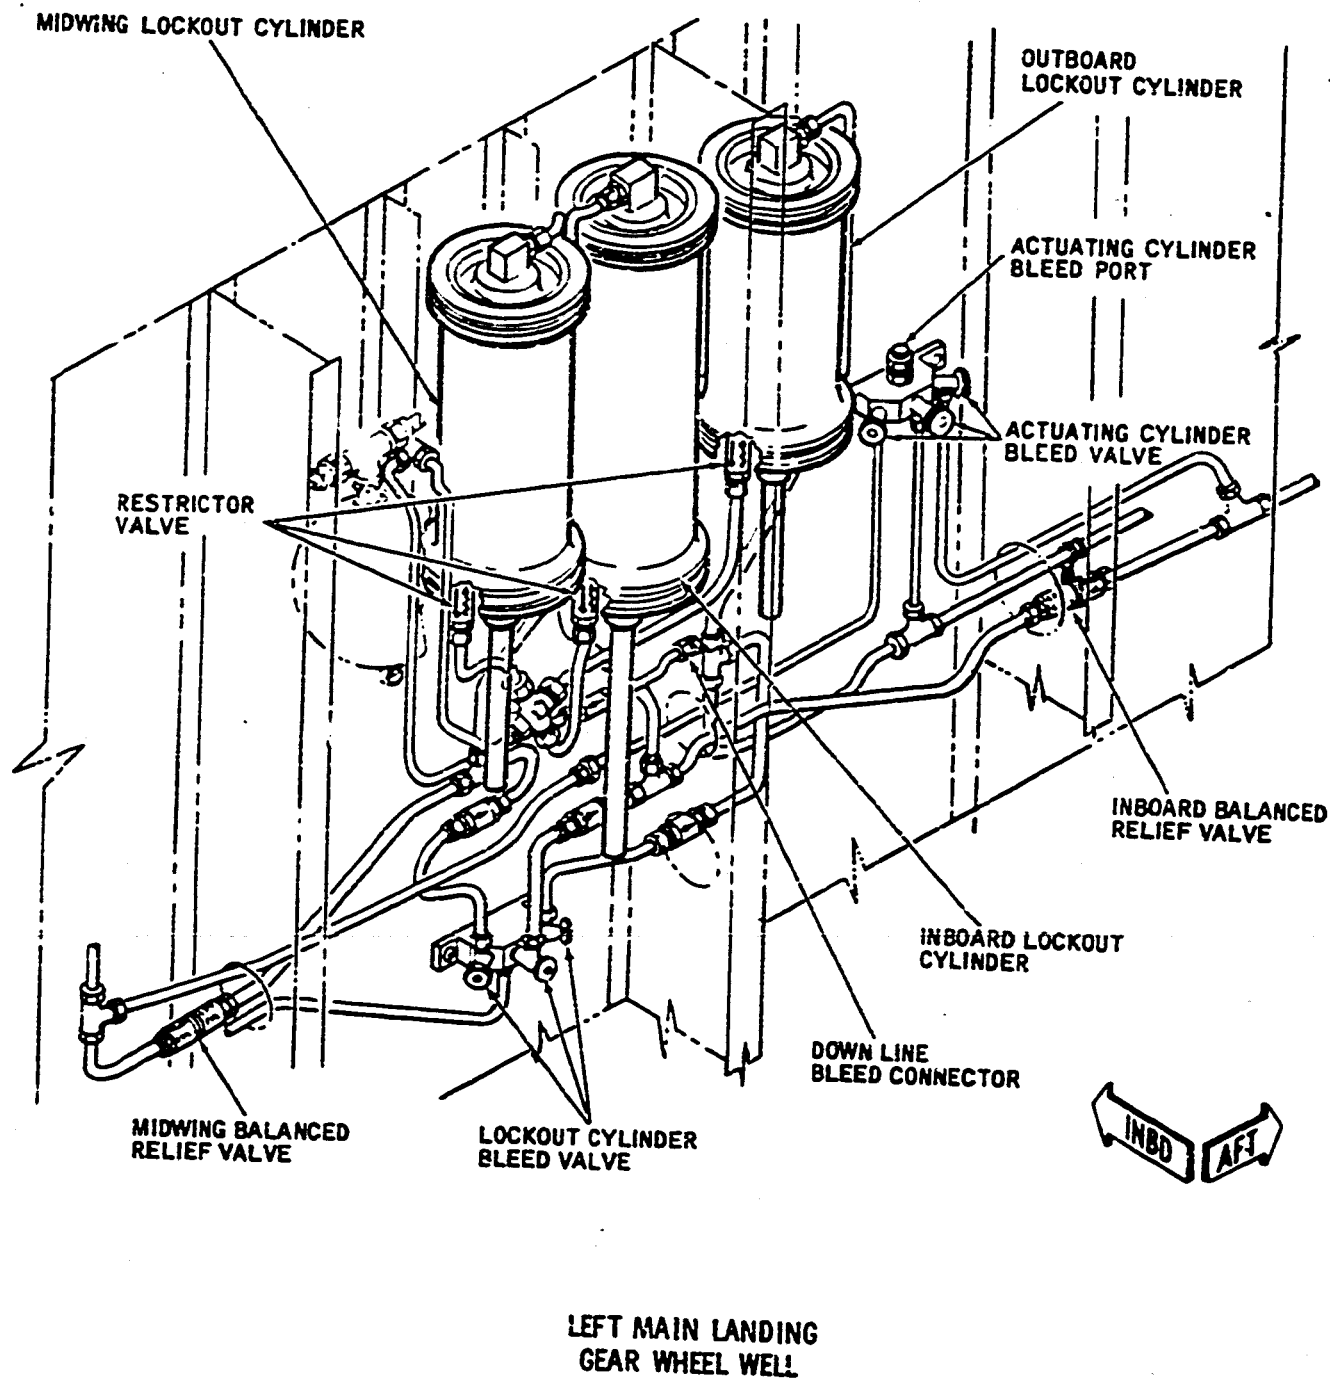

HA2-7558

Flushing Procedures -- Line Connection Location  
 Figure 601A

May 1/71

29-04  
 CODE 2  
 Page 602A

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Disconnect flap return line from inlet port of auxiliary pump alternate reservoir. Connect this line to test stand return hose.
- (6) Remove thermal relief valve from tee in flap up line, located at STA  $X_{rs} = 70$  in right wing root. Cap tee.
- (7) Disconnect hoses from outboard flap actuating cylinders. Plug all hoses.
- (8) At inboard and midwing flap actuating cylinders, disconnect flap up and flap down pressure lines and install jumper between both set of lines.
- (9) Disconnect bottom line from flap lockout cylinder bleed valve manifold. (see Figure 601A).
- (10) Remove lines and check valves (3) from top of bleed valve manifold.
- (11) Connect jumper between line disconnected in step (9) and tee fitting below inboard lockout cylinder from which check valve was removed in step (10).
- (12) Disconnect lines (3) from bottom of actuating cylinder bleed valve manifold.
- (13) Connect jumper between bleed line for inboard actuating cylinder and down line bleed connector.
- (14) Disconnect lines from top and bottom of inboard flap lockout cylinder and connect jumper between lines.
- (15) At inboard and midwing balanced relief valve, disconnect and jumper lines.
- (16) Pressurize test stand to 200 psi maximum at 20 gpm flow and flush circuit for five minutes.
- (17) Shut off pressure source.
- (18) Disconnect jumper from tee fitting below inboard lockout cylinder and connect to line below midwing lockout cylinder from which check valve was removed in step (10).
- (19) Disconnect jumper from bleed line for inboard actuating cylinder and connect to bleed line for midwing actuating cylinder.
- (20) Pressurize test stand to 200 psi maximum at 20 gpm flow and flush circuit for five minutes.
- (21) Disconnect lines from top and bottom of inboard flap lockout cylinder and connect jumper between lines.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (22) Disconnect jumper from line below midwing lockout cylinder and connect to line below outboard lockout cylinder from which check valve was removed in step (10).
  - (23) Disconnect jumper from bleed line for midwing actuating cylinder and connect to bleed line for outboard actuating cylinder.
  - (24) At midwing flap actuating cylinders, remove jumpers. Plug flap down pressure lines.
  - (25) Connect jumper between midwing actuating cylinder up pressure line and outboard actuating cylinder down pressure lines.
  - (26) Pressurize test stand to 200 psi maximum at 20 gpm flow and flush circuit for five minutes.
  - (27) Shut off pressure source.
  - (28) Disconnect test stand pressure hose from flap up line. Connect line to wing flap control valve.
  - (29) Disconnect auxiliary pump case drain line from inlet port on side of alternate reservoir and from case drain of auxiliary pump.
  - (30) Connect test stand pressure hose and return hose to drain line, flush for three minutes.
  - (31) Disconnect auxiliary pump suction line at alternate reservoir and auxiliary pump selector valve.
  - (32) Disconnect test stand pressure hose and test stand return hose from auxiliary pump case drain line, and connect to auxiliary pump suction line, flush for three minutes.
  - (33) Remove jumpers at all flap actuating cylinders, flap lockout cylinders, flap control valve, and actuating cylinder bleed valve manifold. Connect airplane lines to applicable component.
  - (34) Bench flush short lines that run between lockout cylinder bleed valve manifold and check valve (removed in step 10).
  - (35) Install lines and check valves on lockout cylinder bleed valve manifold.
  - (36) Remove and bench flush short line that runs between thermal relief valve and tee in low-pressure return line.
- NOTE: Steps (37) through (47) have been deleted.
- (47) Remove and bench flush short line that runs between thermal relief valve and tee in low-pressure return line.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (48) Inspect, clean, and/or replace all flap actuator cylinders, lockout cylinders, thermal relief valve, balanced relief valves, restrictor valve, and flap control valve.
- (49) Restore all lines and units to original configuration.
- (50) Adjust rigging if necessary (see Chapter 27).

**B. Wing Slot System**

- (1) Disconnect slots open and slots closed lines from wing slot control valve, located on right power manifold (see Figure 601).
- (2) Connect slots open line to test stand pressure hose. Connect slots closed line to test stand return hose.
- (3) Disconnect lines from 4 slot cylinders, cap all lines except outboard right cylinder lines. Install jumper across these two lines.
- (4) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (5) Flush circuit for three minutes.
- (6) Depressurize test stand.
- (7) Move jumper to right inboard slot cylinder lines, cap outboard lines, and repeat steps (4 through 6).
- (8) Repeat steps (3 through 7) for left side. Make certain that all lines on both sides of airplane, with exception of jumpered lines, are capped.
- (9) Inspect, clean, and/or replace wing slot cylinders and wing slot control valve, located on right power manifold.
- (10) Restore all lines and units to original configuration. Adjust rigging if necessary per Chapter 27.

**C. Main Gear Retract System (See Figures 602 and 603.)**


- (1) Disconnect gear up pressure line, gear down pressure line, and gear down return lines from main gear control valve.
- (2) Connect jumper between gear down pressure line and gear down A-return line.
- (3) Connect gear up line to test stand pressure hose.
- (4) Disconnect gear down A-return line from tee in (nose gear return) A-return line, located in left wheel well aft of rear spar and below dual filter and relief valve. Connect line to test stand return hose.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Disconnect right gear up and gear down lines from tees, located to right of centerline of airplane. Cap tees. Left gear retract system will be flushed first.
- (6) In left wheel well, disconnect both main gear uplatch lines from tees in gear up and gear down lines. Cap tees.
- (7) Disconnect both main gear door latch lines from tees in gear up and gear down lines near wing root. Cap tees.
- (8) Disconnect downlock bungee pressure line from tee in gear up line. Cap tee.
- (9) Disconnect line, which leads to bungee cylinder, from tee in gear down line. Cap tee.
- (10) Disconnect line, which leads to gear door manual open valve, from tee in main gear down line. Cap tee.
- (11) Replace restrictor in gear down line with jumper.
- (12) Disconnect gear up and gear down lines from upstream side of actuating cylinder swivel gland. Connect jumper between these lines.



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

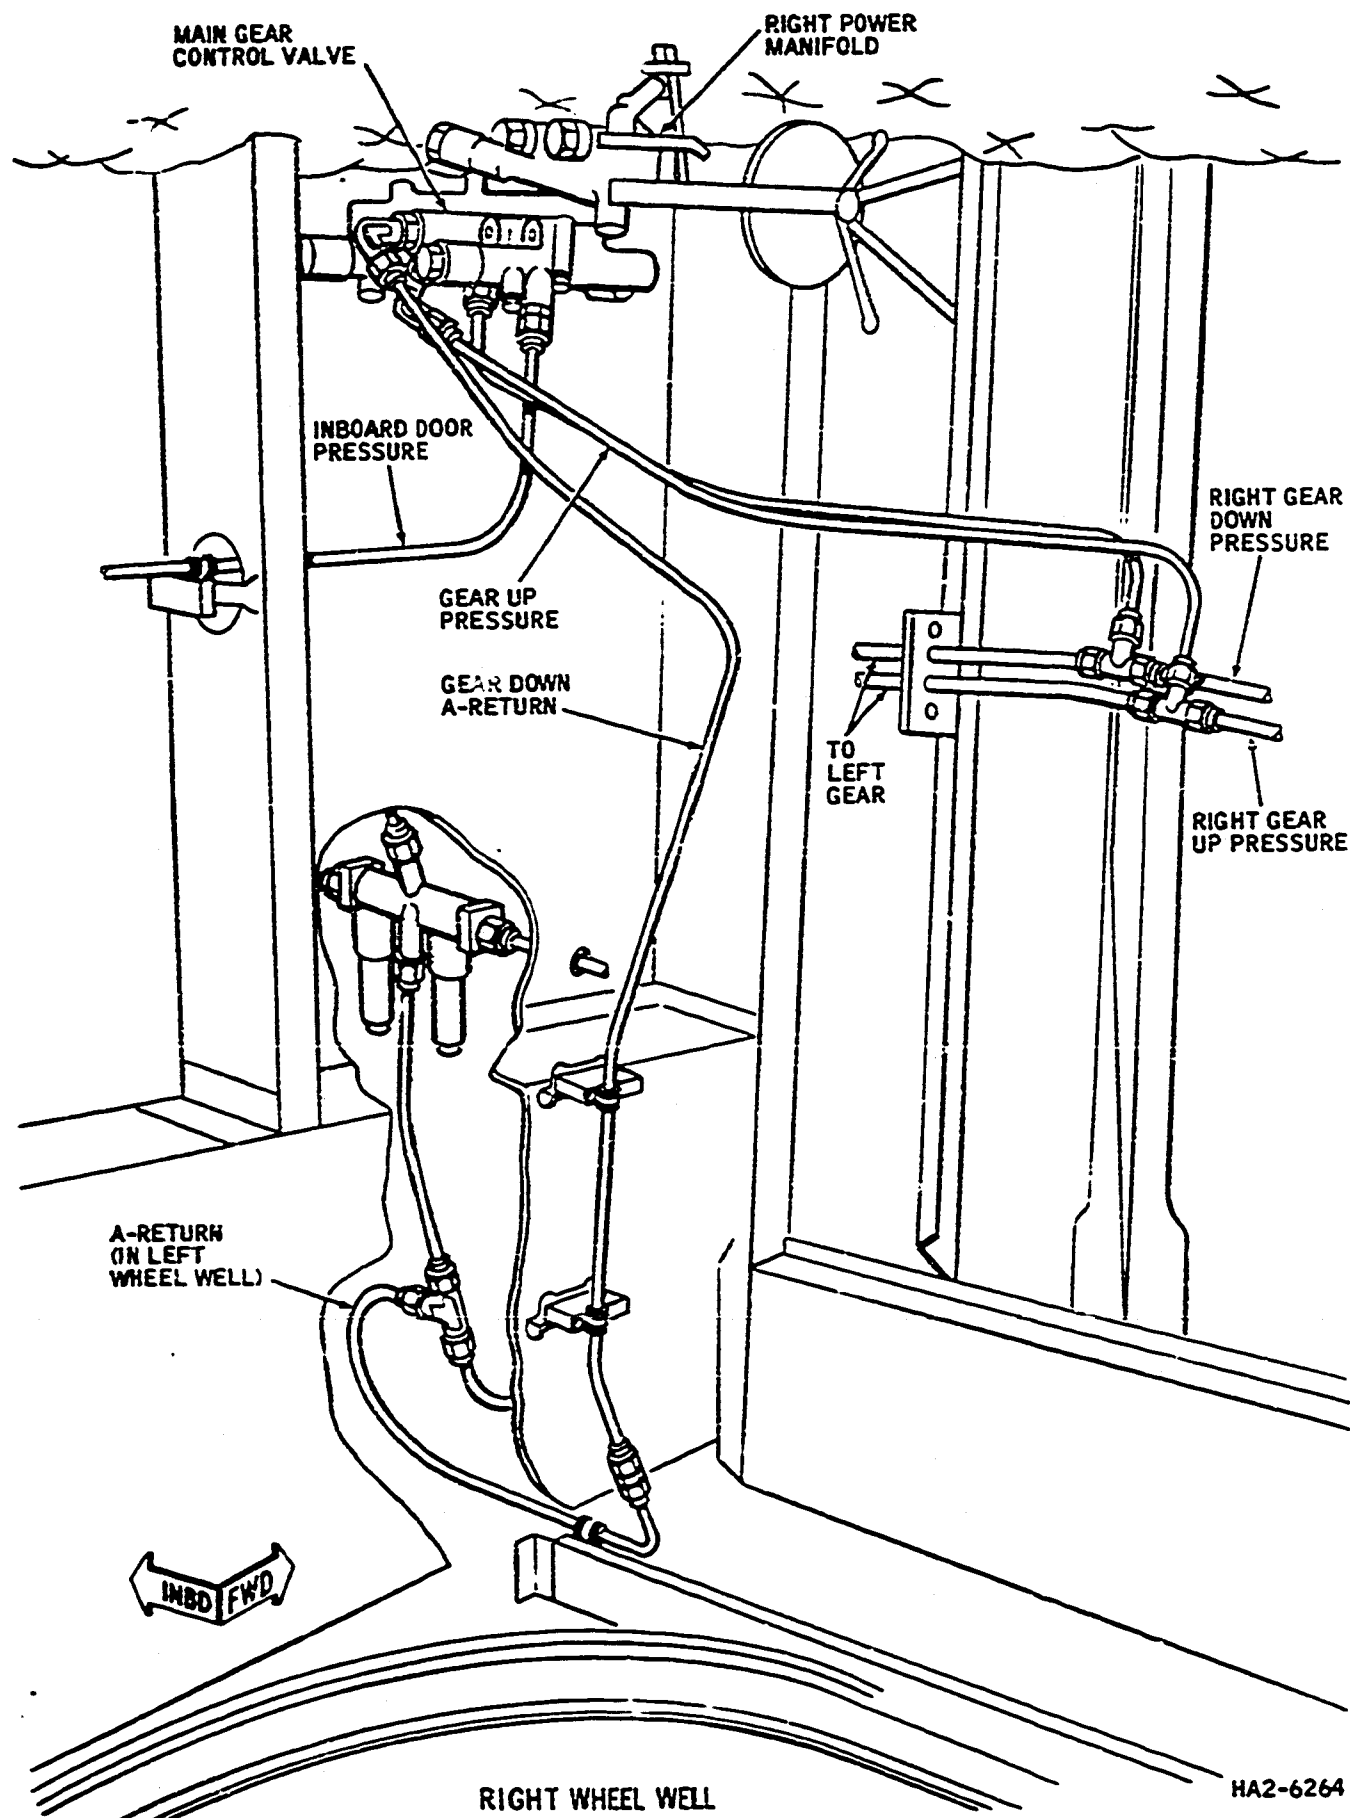


HA2-6264

Flushing Procedure Line Connection Locations  
 Figure 602

Feb 1/69

29-04  
 CODE 2  
 Page 605

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

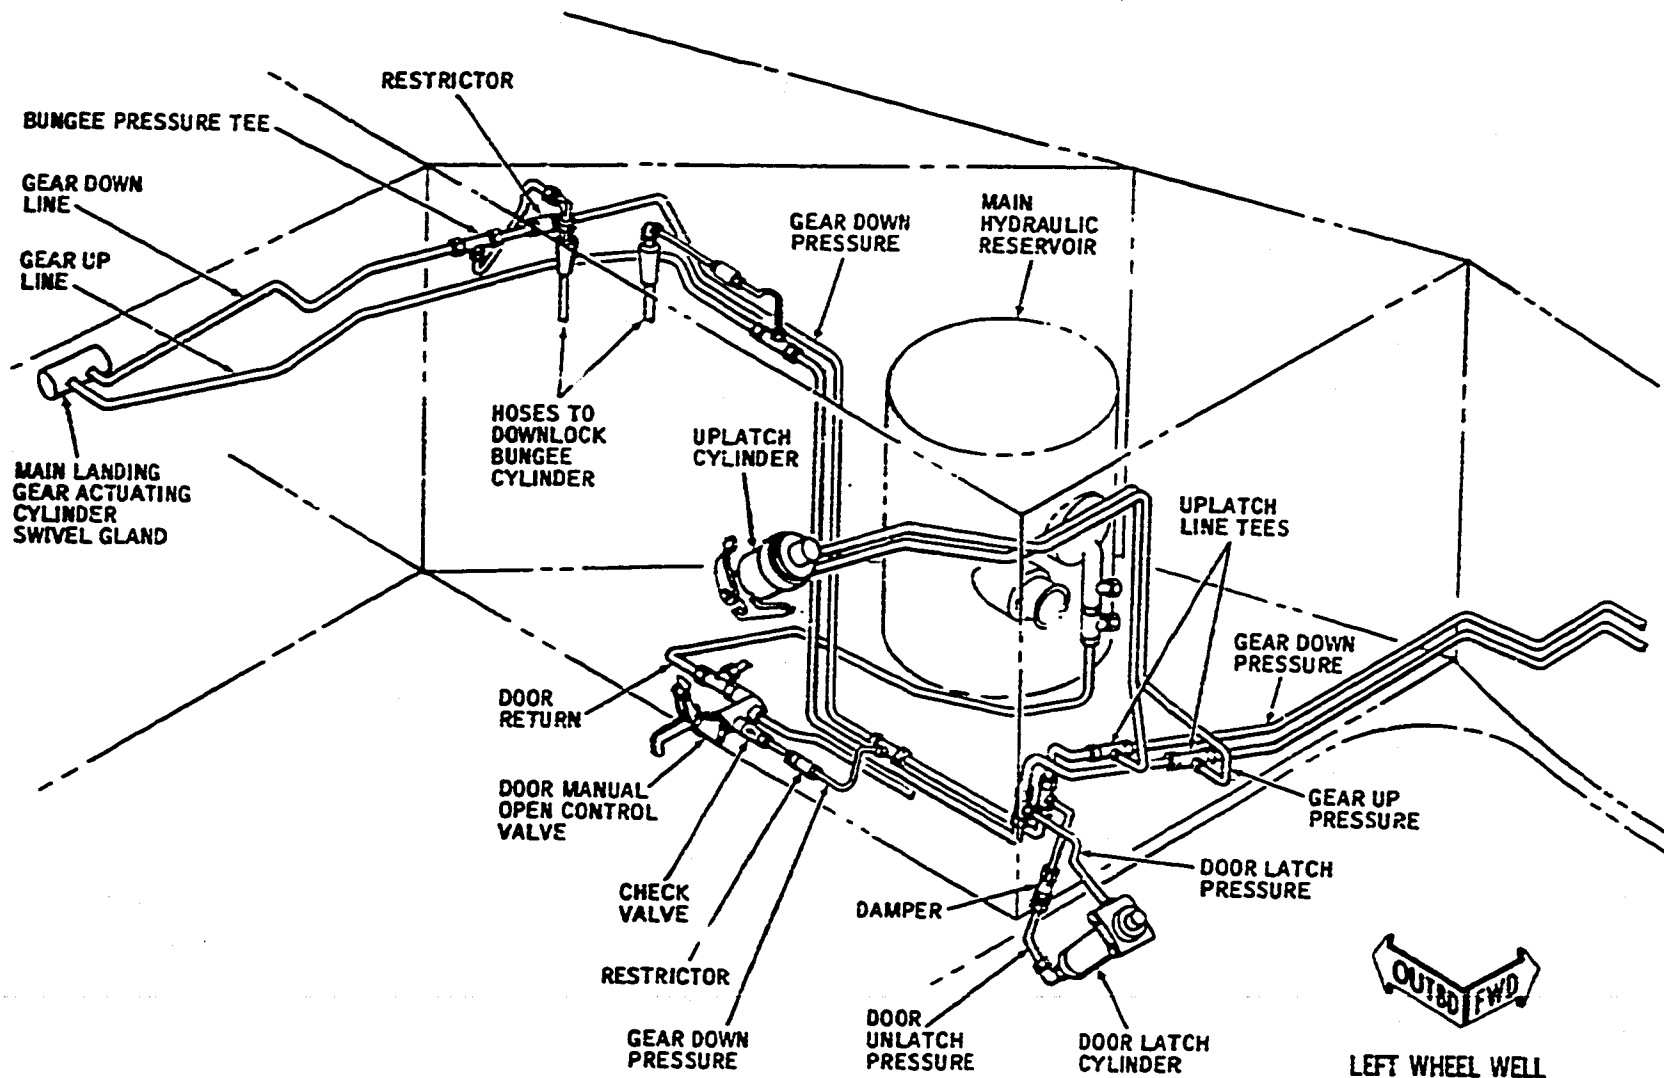

29-04  
 CODE 2  
 Page 606

Flushing Procedure Line Connection Locations  
 Figure 603

Feb 1/69

Printed in U.S.A.

HA2-6265

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (13) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (14) Flush circuit for five minutes.
- (15) Depressurize test stand.
- (16) Inspect, clean, and/or replace actuating cylinder and attaching swivel gland, door latch assembly and attaching lines (which include damper), downlock bungee cylinder and connecting lines including 2 hoses, restrictors and several short lines.
- (17) Disconnect gear uplatch lines from gear uplatch cylinder and connect jumper between lines.
- (18) Connect this circuit to test stand pressure and return hoses and flush for 3 minutes. Use same pressure as in step (13).
- (19) Inspect, clean, and/or replace main gear uplatch cylinder.
- (20) Restore all lines and units on left side of airplane to original configuration.
- (21) Connect test stand pressure hose to right gear down line, and test stand return hose to right gear up line. These lines were capped in step (5).
- (22) Repeat steps (6 through 20) for right side of airplane.
- (23) Make any necessary adjustments per Chapter 32.

**D. Main Gear Door System**

- (1) Disconnect right main gear door lines from bulkhead tees in center web of airplane. Cap tees.
- (2) Disconnect pressure and return lines from left door actuating cylinder swivel gland. Place jumper across these lines.
- (3) Disconnect door return line from inboard side of door manual open valve. Connect line to test stand return hose.
- (4) Disconnect door pressure line from main gear control valve. Connect line to test stand pressure hose.
- (5) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (6) Flush circuit for three minutes.
- (7) Depressurize test stand.


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) Disconnect pressure and return lines from right door actuating cylinder swivel gland. Connect jumper across these lines.
- (9) Connect test stand pressure and return hoses to lines that were capped in step (1).
- (10) Repeat steps (5 through 7) for these lines.
- (11) Inspect, clean, and/or replace both door actuating units, lines, and swivel glands.
- (12) Inspect, clean, and/or replace door manual open valve, short line between manual open valve and tee in down line (this line includes restrictor and check valve), and line which runs from tee in manual open valve to reservoir fitting.
- (13) Restore all lines and units to original configuration, and make any necessary adjustments per Chapter 32.

E. Bogie Trim and Bogie Swivel Unlock Systems (See Figure 604.)

- (1) Disconnect both bogie unlock lines, and bogie trim pressure line from bogie swivel unlock control valve located on left power manifold.
- (2) Connect test stand pressure hose to bogie trim pressure line, and test stand return hose to left bogie unlock line.
- (3) Disconnect bogie trim pressure line, which leads to right gear, at tee located below left power manifold and to left of airplane centerline. Cap tee.
- (4) Disconnect line with check valve, which runs from tee in bogie relief valve to tee in bogie unlock line, at tee. Cap tee.
- (5) Install jumper lines around main gear swivel gland in bogie trim pressure line and bogie unlock line.
- (6) Disconnect bogie trim pressure hose from manifold port below tee in forward manifold, located on shock strut above bogie beam. Cap manifold.
- (7) Disconnect both hoses from bogie unlock cylinder, and jumper these hoses together.
- (8) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (9) Flush circuit for five minutes.
- (10) Depressurize test stand.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

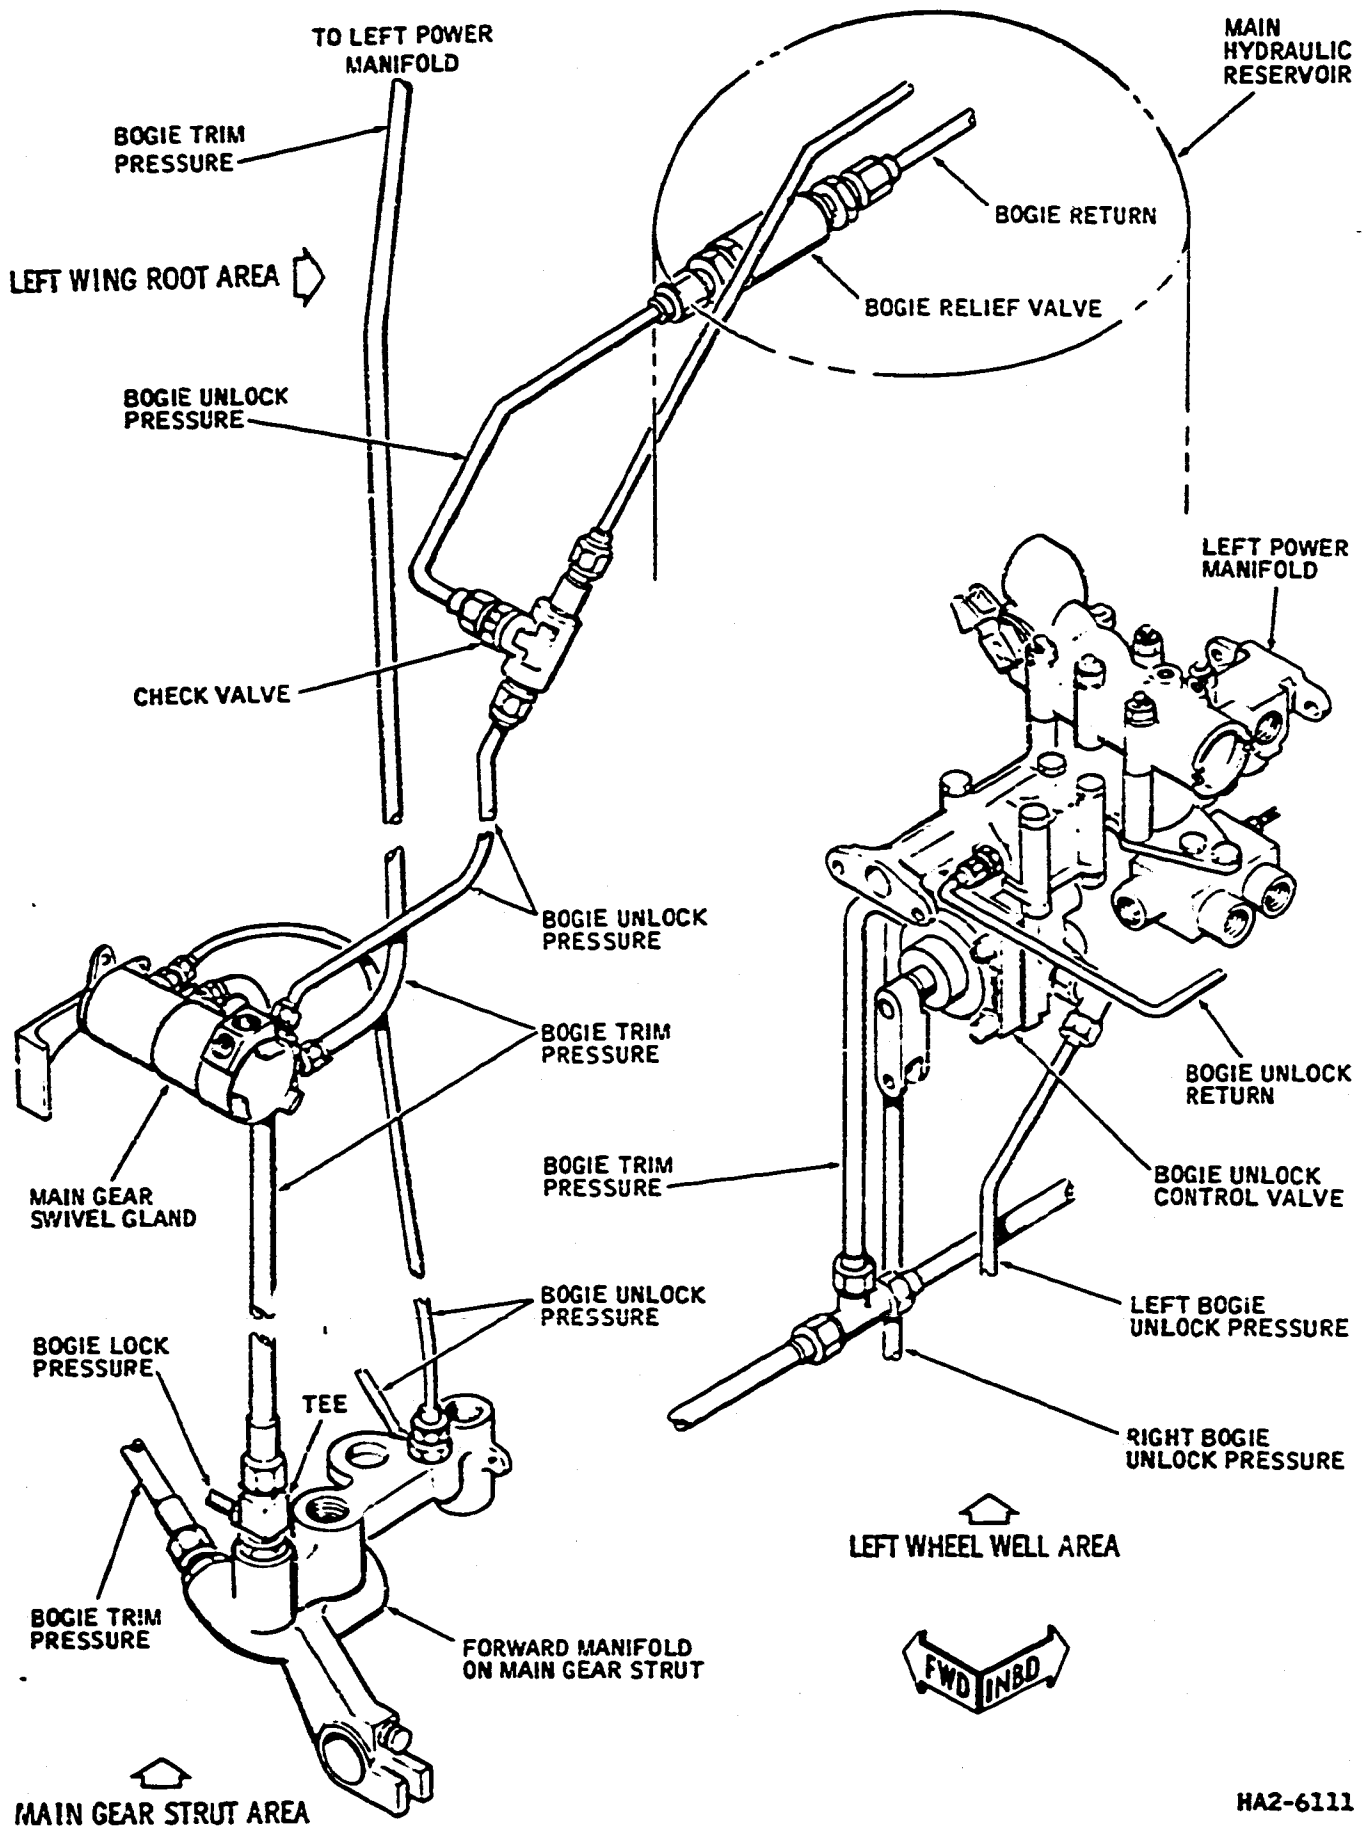

Flushing Procedure Line Connection Locations  
 Figure 604

HA2-6111

29-04  
 CODE 2  
 Page 609

Feb 1/69


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (11) Inspect, clean, and/or replace bogie swivel unlock valve, bogie relief valve and check valve, three short lines which lead to tees in bogie trim pressure line, bogie unlock line, manual door open valve on left side of airplane, and tee in antiskid valve on right side of airplane.
- (12) Inspect, clean, and/or replace swivel gland, located at top of main gear strut, bogie swivel unlock cylinder, and bogie trim cylinder with attaching hose and line.
- (13) Connect right bogie trim pressure line to tee from which it was disconnected in step (3). Disconnect left bogie trim pressure line from this tee, and cap tee.
- (14) Disconnect test stand return hose from left bogie unlock line and connect it to right bogie unlock line.
- (15) Repeat steps (4 through 12) for right side of airplane.
- (16) Restore all lines, hoses, and units to original configuration. Make adjustments as necessary per Chapter 32.

F. Nose Gear System (See Figures 605 and 606.)

- (1) Disconnect nose gear down line from tee just inboard of nose gear control valve. Connect line to test stand pressure hose.
- (2) Disconnect actuating cylinder gear down hose from tee in gear down line, located on left side of nosewheel well. Cap tee.
- (3) Jumper check valve in steering pressure line, which runs from tee for actuating cylinder down hose to tee which branches to reserve accumulator shutoff valve and pressure line running forward.
- (4) At tee between check valve, removed in step (3), and reserve accumulator shutoff valve, disconnect steering pressure line which leads forward. Cap tee.
- (5) Disconnect pressure line from left side of reserve accumulator shutoff valve. Place jumper between this line and line which was disconnected in step (4).
- (6) Replace check valve in steering pressure line, located aft of nosewheel steering valve, with jumper.
- (7) Disconnect all four lines from steering control valve. Connect jumpers between pressure line and steer right line, and between return line and steer left line.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

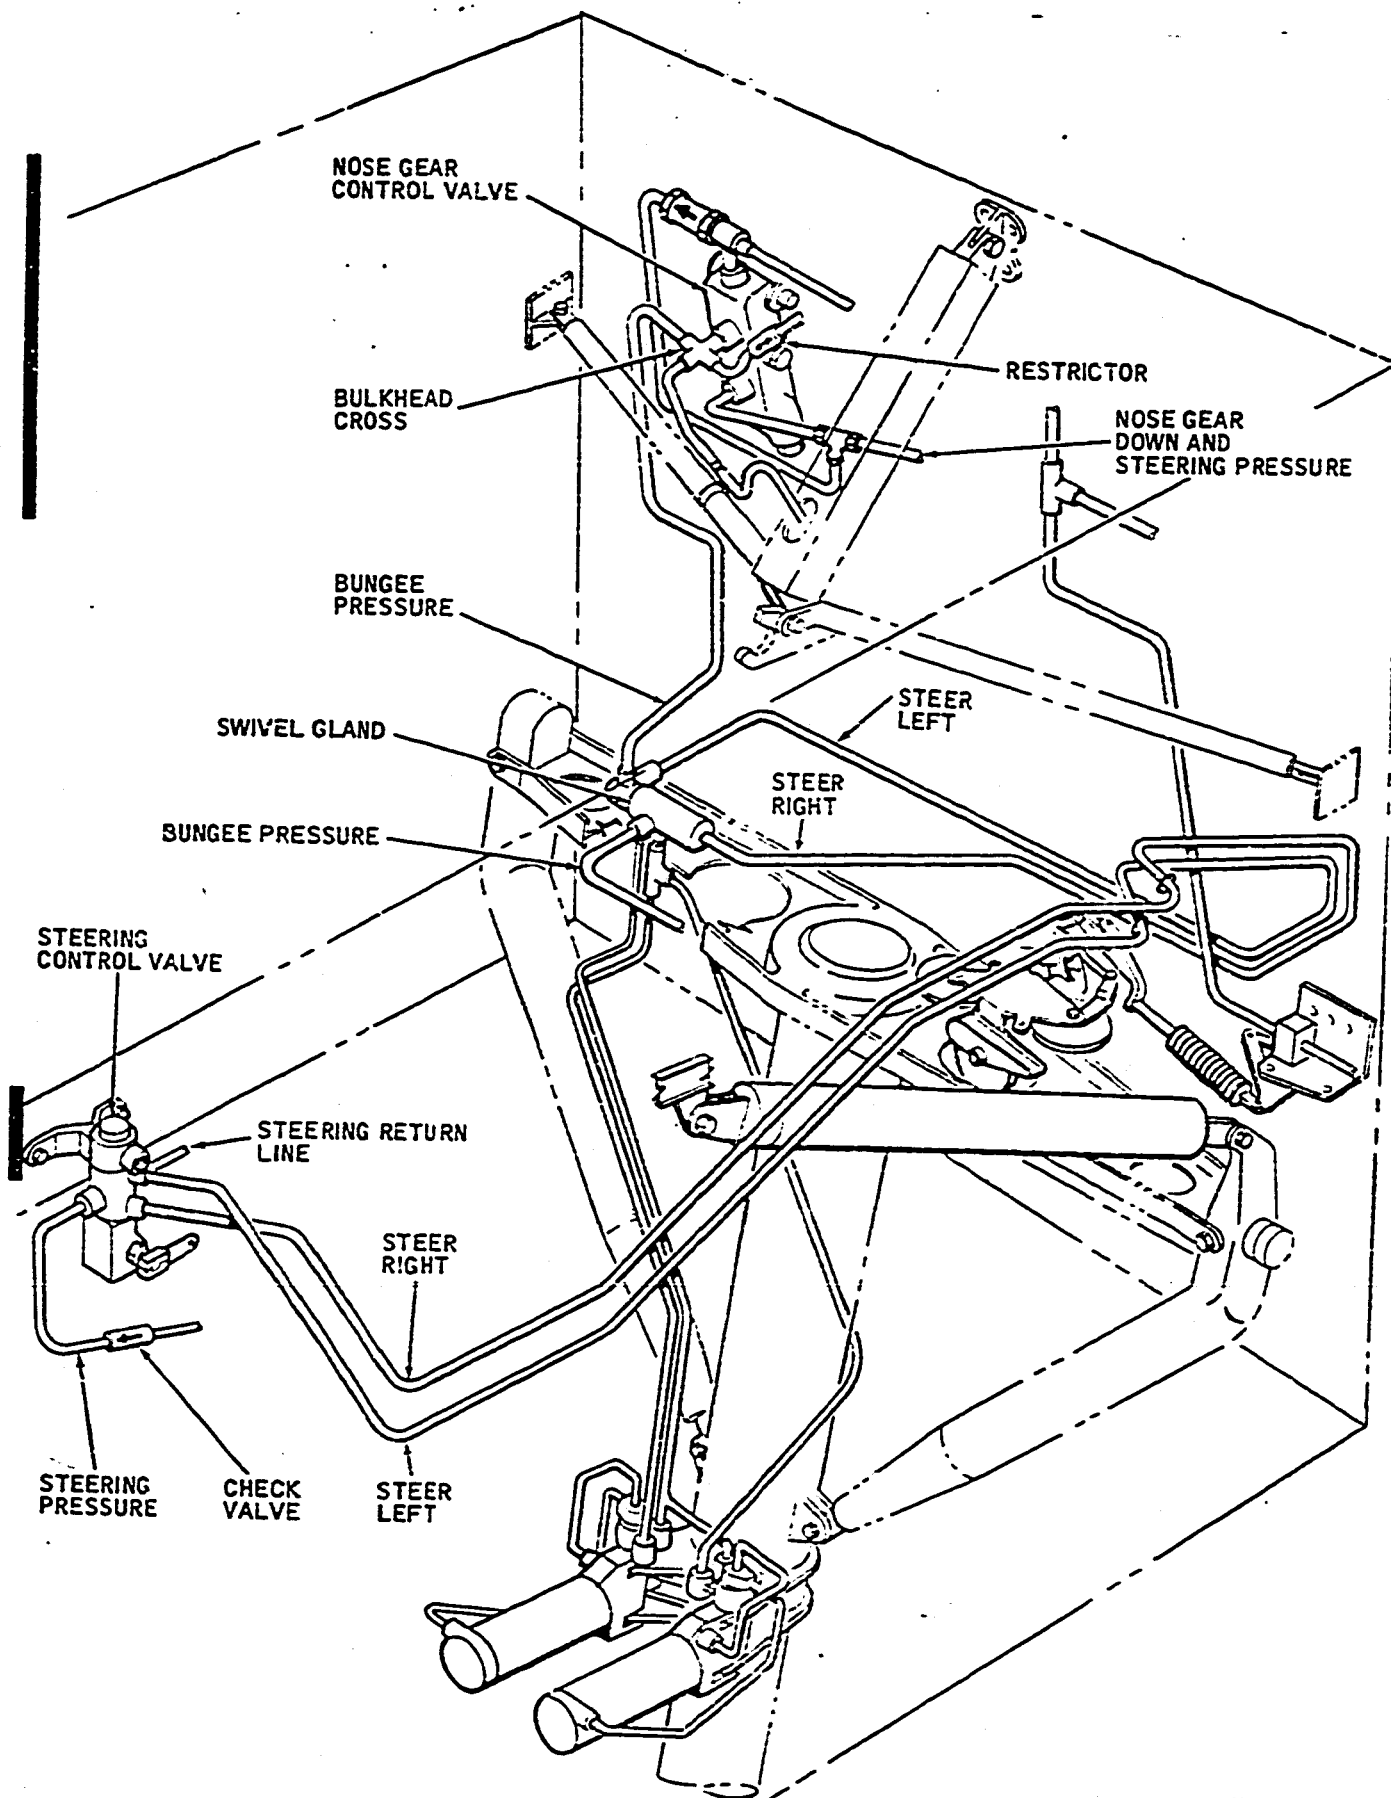


HA2-6266A

Flushing Procedure Line Connection Locations  
 (Airplanes Without Steering Bypass Valve)  
 Figure 605

Nov 1/69

29-04  
 CODE 2  
 Page 610A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

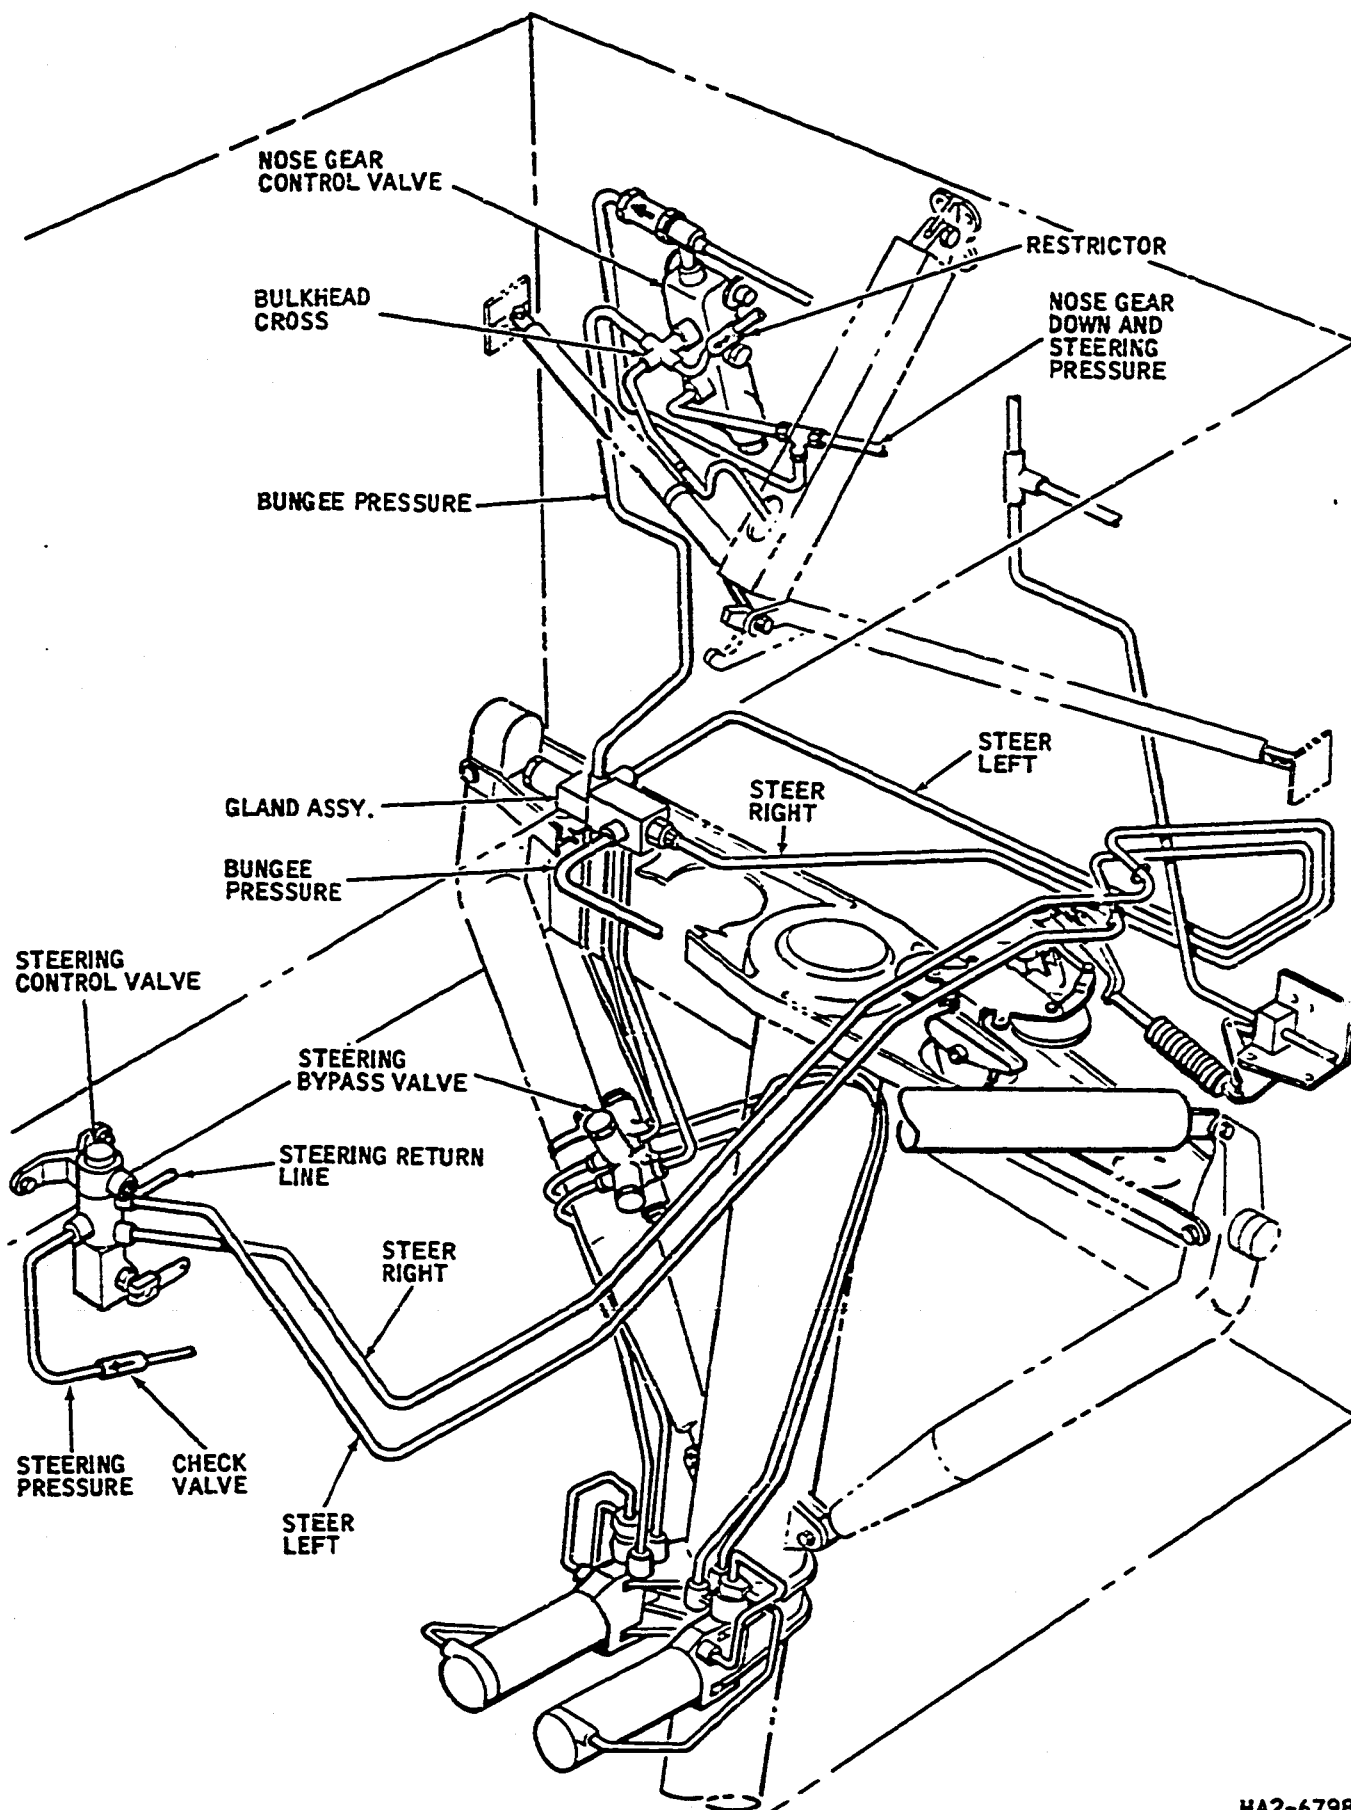

HA2-6798

Flushing Procedure Line Connection Locations  
 (Airplanes With Steering Bypass Valve)  
 Figure 605A

Nov 1/69

29-04  
 CODE 2  
 Page 611




DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) On airplanes without nose gear steering bypass valve, perform steps (a) through (c).
- (a) Disconnect five steering lines from swivel gland and tee located on cross arm. Connect jumper across two open steer left lines located on opposite sides of swivel gland. Connect jumper across two steer right lines which were disconnected from same tee in swivel gland.
  - (b) Disconnect at steering cylinder glands, three steering lines which run from swivel gland on crossarm to glands at steering cylinders.
  - (c) Install jumper across two lines on right cylinder. On left cylinder, install jumper from open line to open steer-right line upstream of swivel gland on crossarm.
- (9) On airplanes equipped with nose gear steering bypass valve, perform steps (a) through (h).
- (a) Disconnect four steering lines from swivel gland located on cross arm. Connect jumper across two open steer left lines. Connect jumper across two open steer right lines.
  - (b) At steering relief valve, disconnect six steering lines.
  - (c) Connect jumper between steer left inlet line and one of steering lines to right steering cylinder.
  - (d) Connect jumper between steer right inlet line and one of steering lines to left steering cylinder.
  - (e) Jumper remaining left cylinder line to remaining right cylinder line.
  - (f) Disconnect and jumper two lines at right steering cylinder swivel glands.
  - (g) Disconnect and jumper two lines at left steering cylinder swivel glands.
  - (h) Disconnect and remove for cleaning, short bypass valve return line between cross arm swivel gland and bypass valve.
- (10) Disconnect steering return line from lower side of tee in steering relief valve. Disconnect gear actuating cylinder up hose at cylinder. Connect jumper between this open line and hose.
- (11) Disconnect 1/4-inch up line from restrictor on side away from control valve. Disconnect 1/4-inch bungee line at bulkhead cross fitting at control valve. Connect jumper across these two open lines.
- (12) On airplanes without nose gear steering bypass valve, disconnect bungee line from top of swivel gland and connect to test stand return hose.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (13) On airplanes equipped with nose gear steering bypass valve, disconnect bungee line from top of swivel gland and bypass valve return line at outboard side of swivel gland. Connect jumper between open lines. Disconnect bypass valve return line from bulkhead tee below steering relief valve and connect test stand return hose to line.
- (14) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (15) Flush circuit for five minutes.
- (16) Depressurize test stand.
- (17) Inspect, clean, and/or replace relief valve, bleeder valve, return accumulator and two associated lines, nose gear actuating cylinder and attaching hoses, bungee cylinder and attaching line, swivel gland mounted on crossarm, uplatch cylinder and two lines which connect it to control valve.
- (18) Inspect, clean, and/or replace nosewheel steering valve, located on outboard side of left side of wheel well and steering bypass valve on airplanes so equipped.
- (19) Inspect, clean, and/or replace nosewheel steering cylinders, restrictors, and gland assemblies and associated lines, nosewheel steering control valve, reserve accumulator shutoff valve and associated lines, and check valves.
- (20) Restore all lines and units to original configuration, and make any necessary adjustments as described in Chapter 32.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

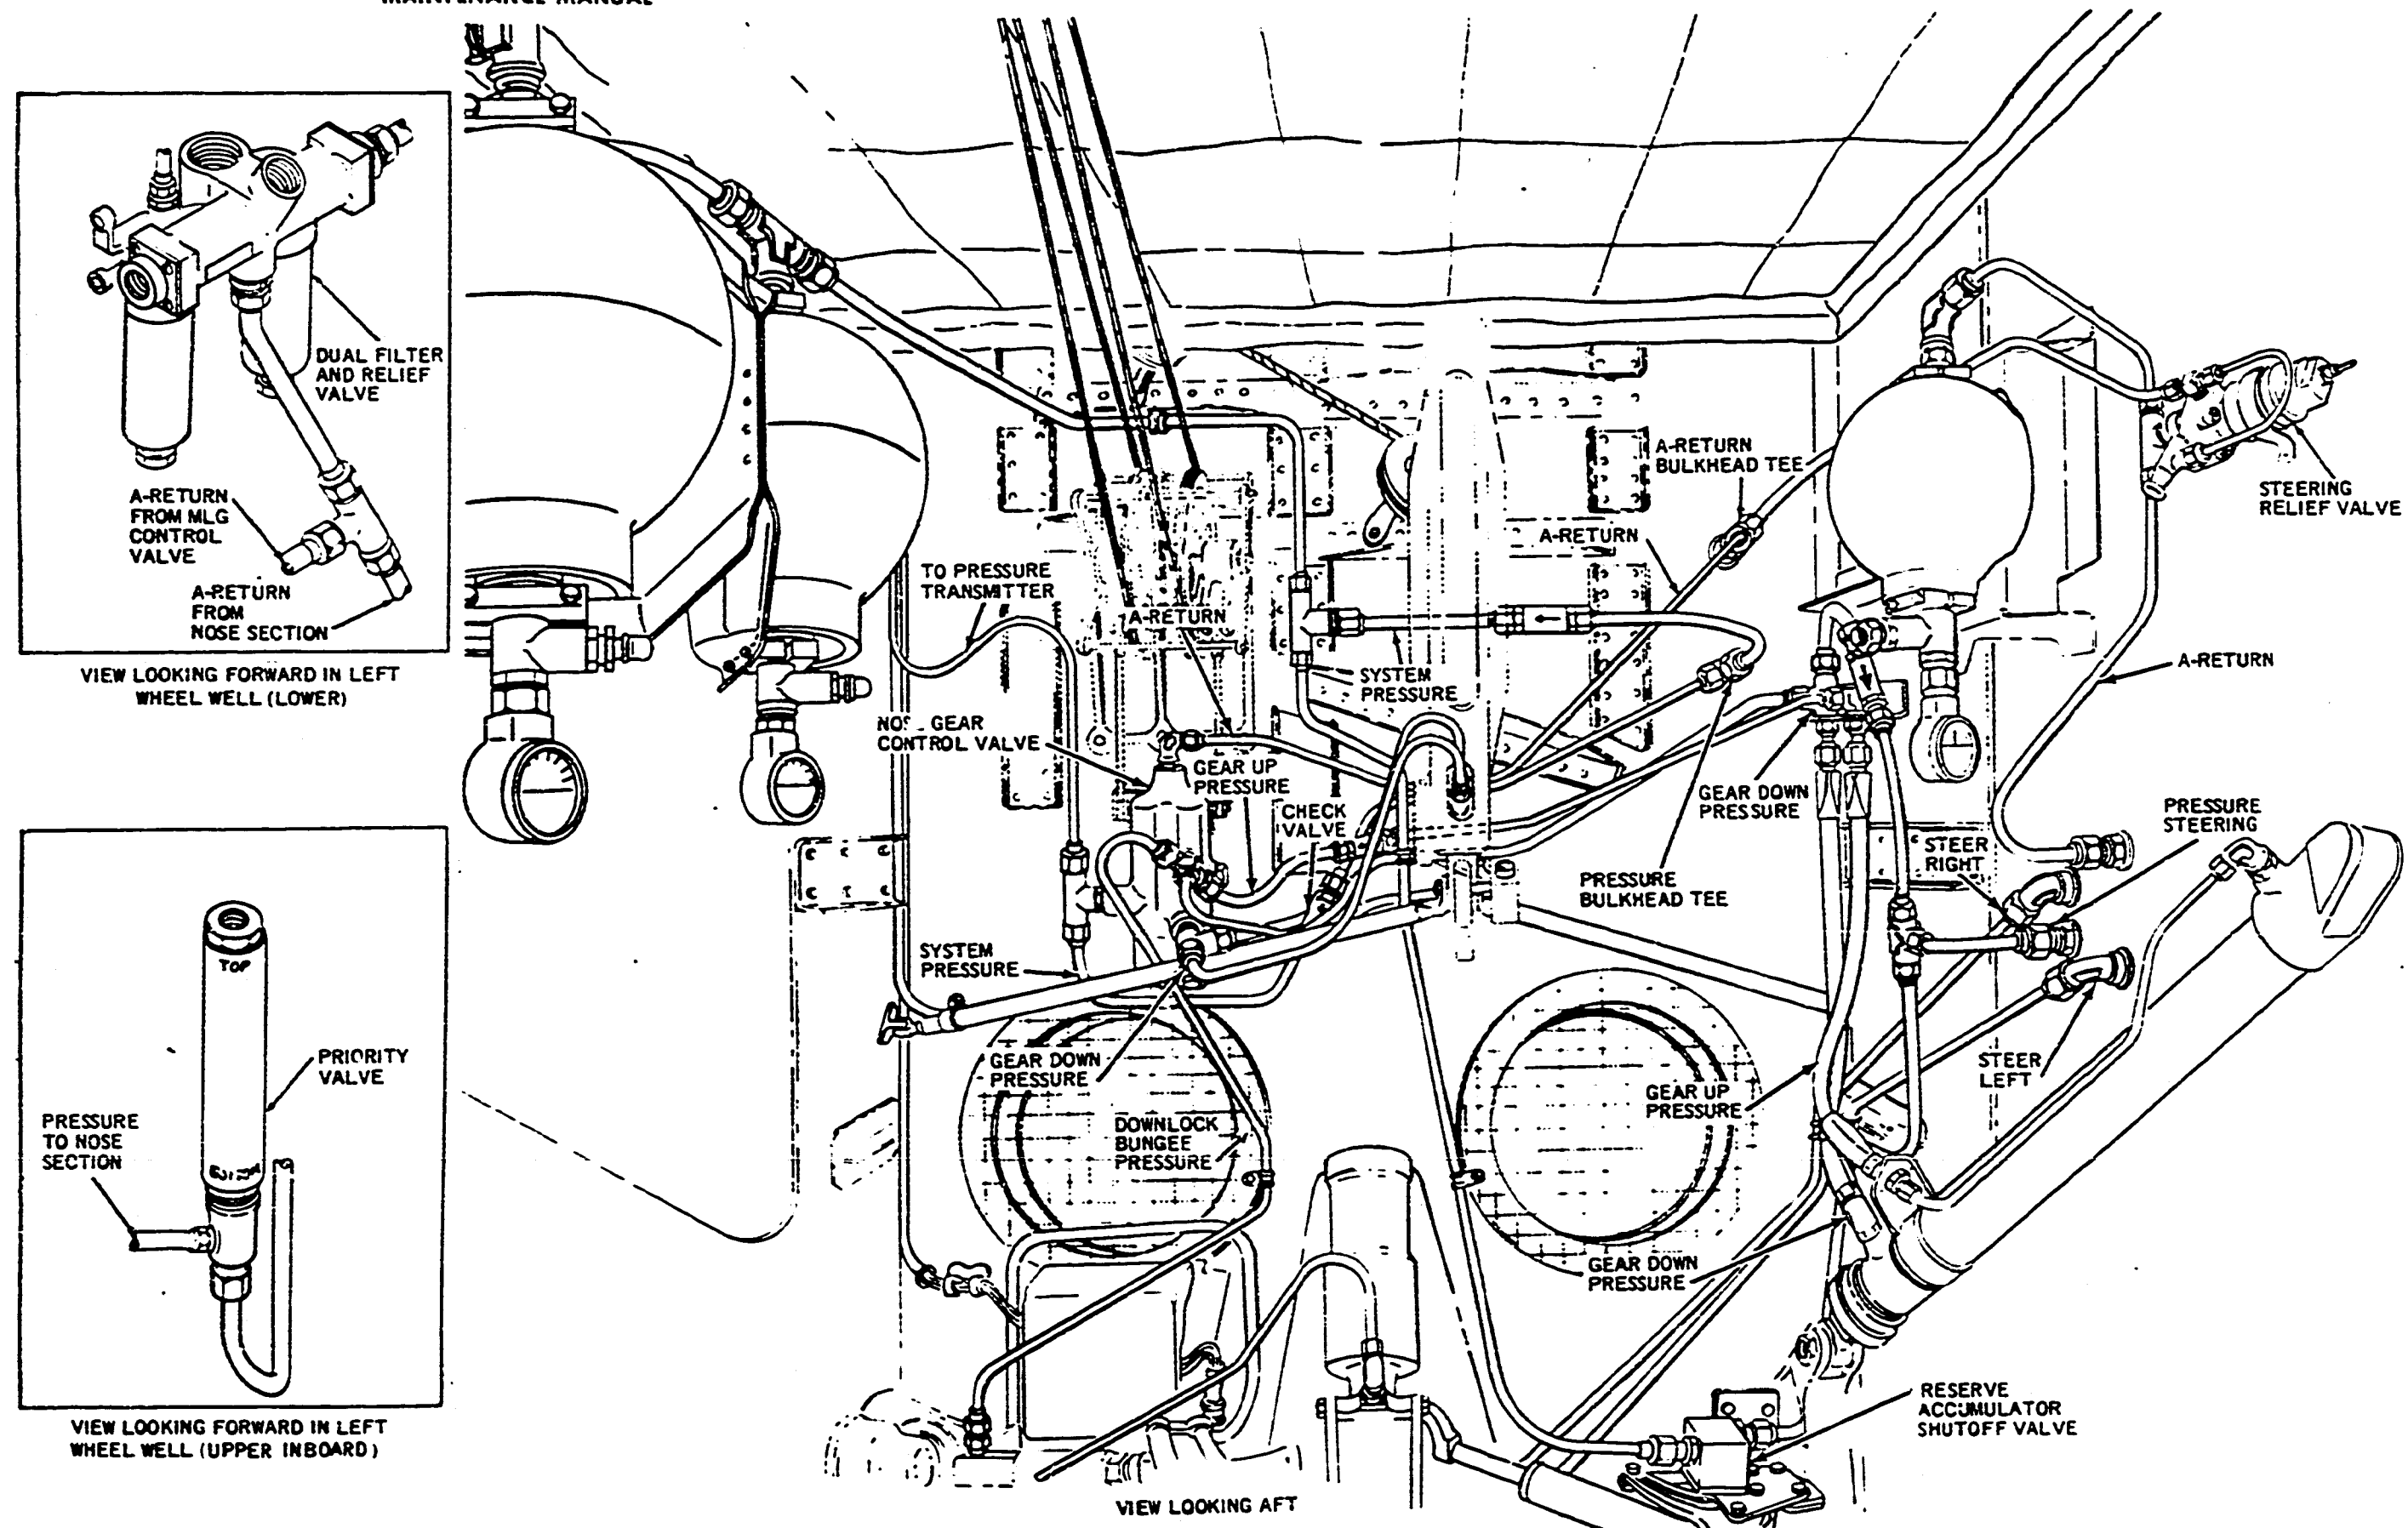

Flushing Procedure Line Connection Locations  
 Figure 606

29-04  
 CODE 2  
 Page 613

Feb 1/69

Printed in U.S.A.


HA2-6127

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

G. Wheel Brake System Pressure Lines

- (1) Disconnect right gear brake pressure line from brake control valve, and connect test stand pressure hose to this line (see Figure 607).
- (2) Disconnect two brake pressure lines from swivel gland at top of main landing gear strut. Connect these lines with a jumper line.
- (3) Disconnect brake pressure line from upstream side of tee fitting at dual servo valves.
- (4) Disconnect four brake pressure outlet lines from servo valves. Connect jumper line between pressure inlet line and one pressure outlet line. Cap other three outlet lines.
- (5) Disconnect inlet and outlet lines and jumper fluid quantity limiter (or lockout cylinder) in outlet line connected in step (4).
- (6) Disconnect brake hose from corresponding brake, and connect hose to test stand return hose.
- (7) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (8) Flush circuit for five minutes.
- (9) Depressurize test stand.
- (10) Disconnect jumper line from outlet line connected in step (4), cap outlet line, and connect jumper to one of other three outlet lines.
- (11) Repeat steps (5 through 10) to flush remaining servo valve outlet lines.
- (12) Inspect, clean, and/or replace brake control valve, main landing gear swivel gland, dual servo valves, fluid quantity limiters (or lockout cylinders).
- (13) Disconnect test stand pressure hose from right gear brake pressure line at control valve, and connect to left gear brake pressure line at left brake control valve.
- (14) Repeat steps (2 through 12) to flush left brake system pressure lines.
- (15) Restore all lines and units to original configuration.
- (16) To flush brake accumulators and check valve system, disconnect pressure line which runs from right power manifold to tee on accumulator. Connect test stand return hose to line that was disconnected at accumulator tee.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

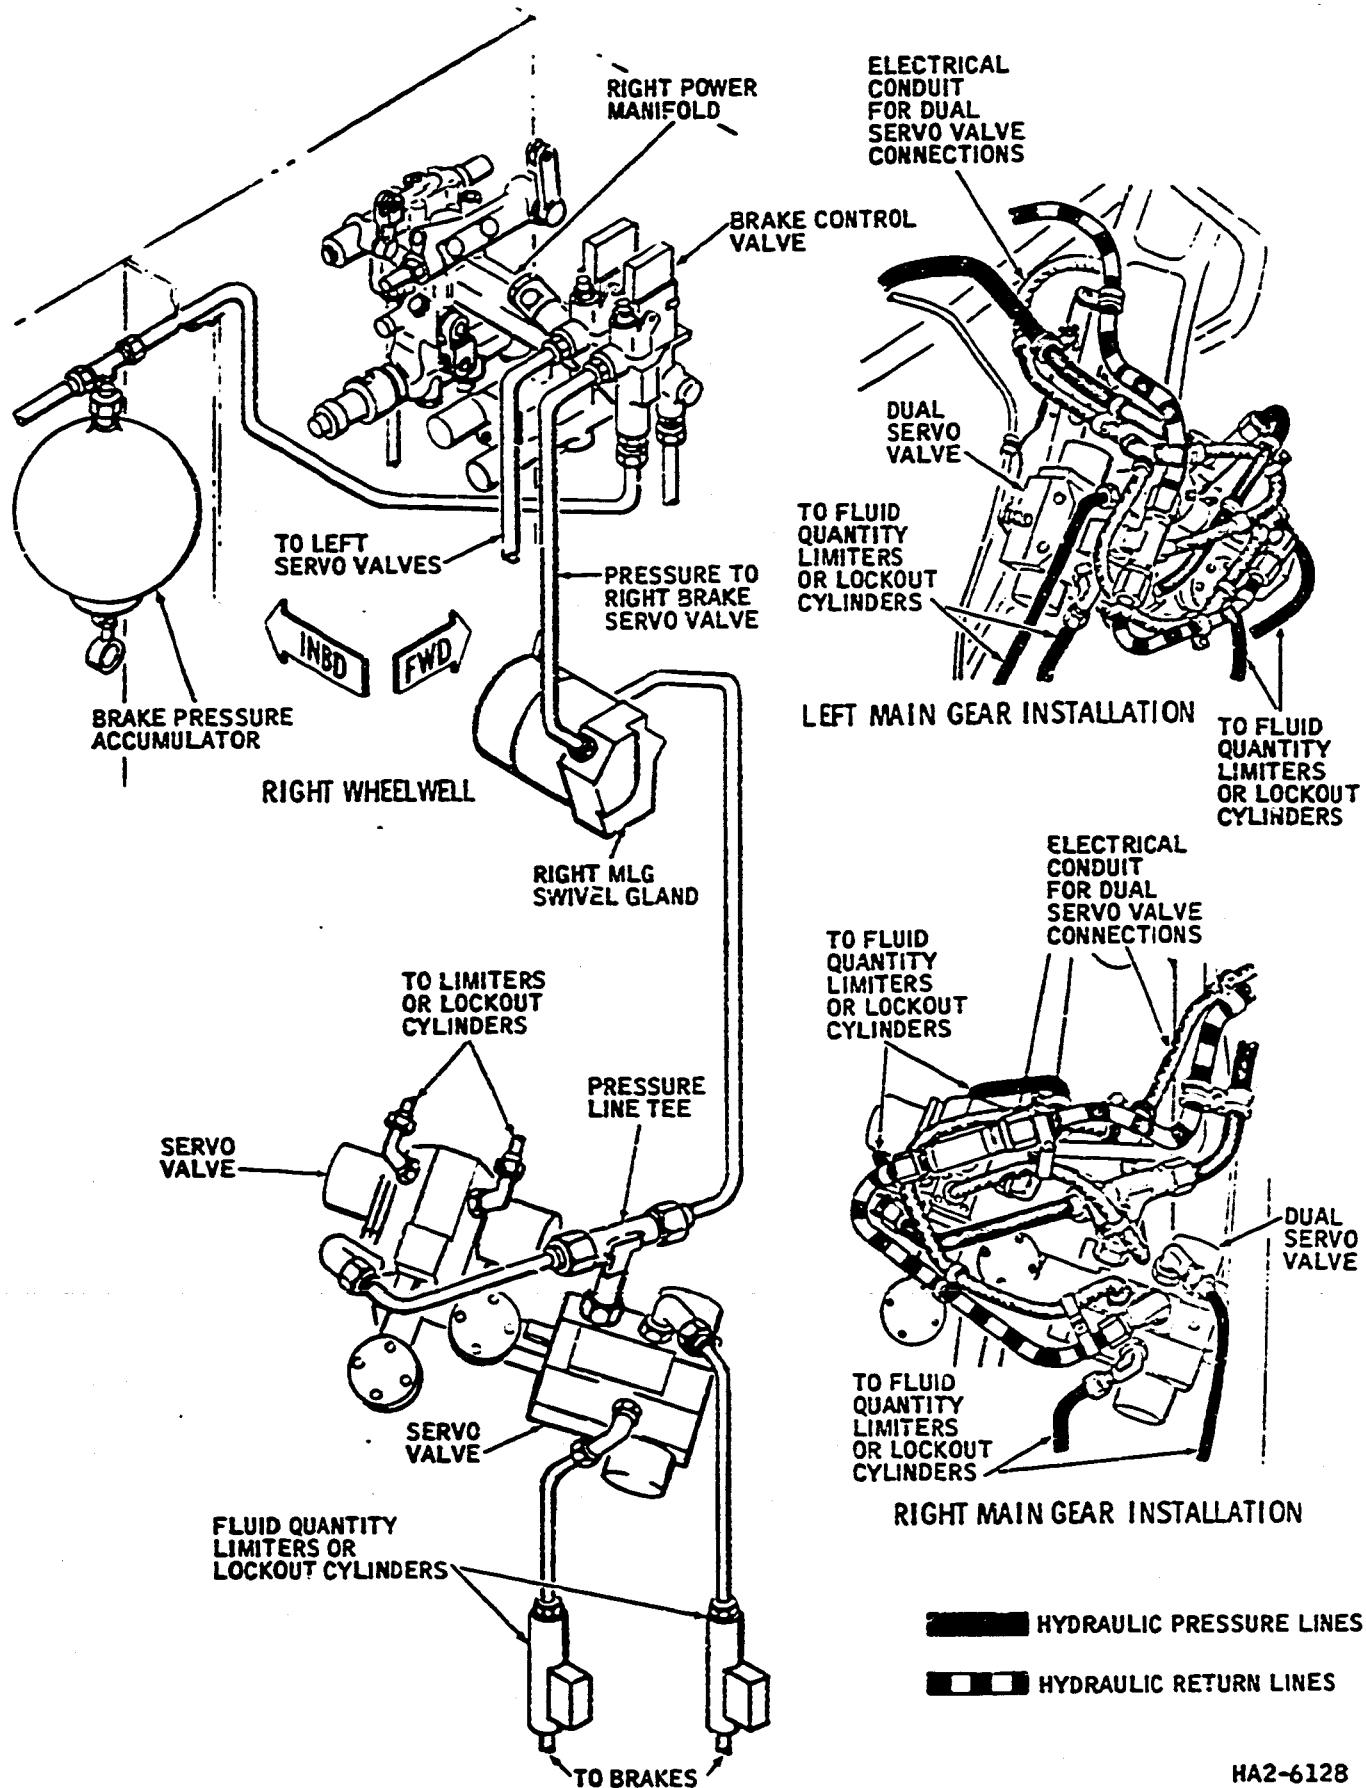

HA2-6128


29-04  
 CODE 2  
 Page 616

Flushing Procedure Line Connection Locations  
 Figure 607 (Sheet 1)

Feb 1/69

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

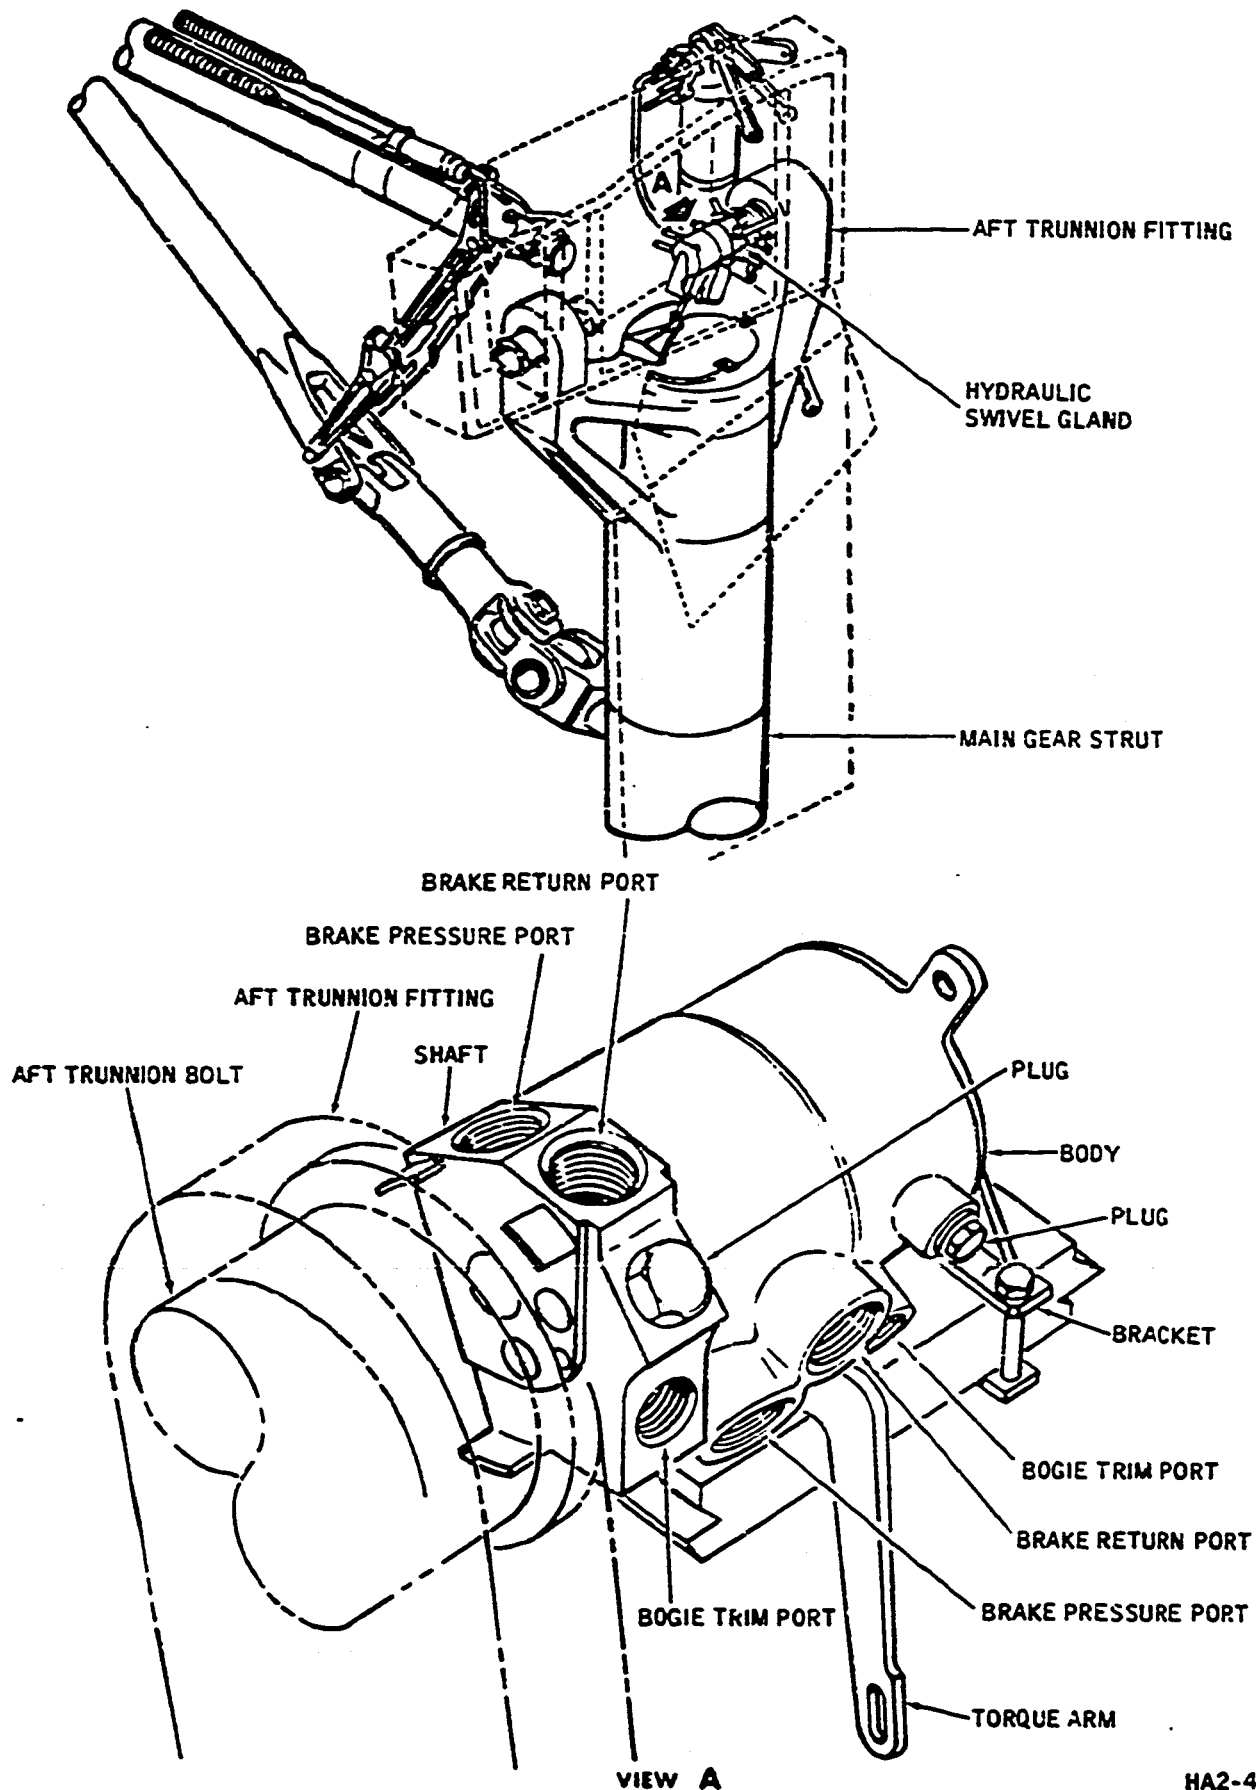

HA2-4287A

Flushing Procedure Line Connection Locations  
 Figure 607 (Sheet 2)

Feb 1/69

29-04  
 CODE 2  
 Page 617

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (17) Remove brake inlet check valve seat, spring, and poppet from right power manifold. Install seat only with seals.
- (18) Remove pressure line from tee at bottom of priority valve, located below left power manifold, and connect this line to test stand pressure hose.
- (19) Pressurize test stand to 200 psi at 5 to 20 gpm flow.
- (20) Flush circuit for five minutes.
- (21) Depressurize test stand.
- (22) Remove inlet check valve seat. Examine check valve assembly for evidence of improper seating and magnetization. Install new check valve assembly if required.
- (23) Remove accumulators and connecting line. Clean and flush on bench.
- (24) Restore all lines and units to original configuration. Bleed and adjust brake system per Chapter 32.

H. Wheel Brake System Return Lines

- (1) Disconnect right anti-skid servo valve return line at tee fitting on upper servo valve on right main gear strut. Connect test stand pressure hose to this line.
- (2) Disconnect two return lines from swivel gland at top of main gear strut. Connect these lines with jumper line.
- (3) Disconnect anti-skid return line from tee fitting in aileron A return line, located in right wing root area (see Figure 607). Cap A-return tee fitting.
- (4) Disconnect bogie relief valve at tee and cap line.
- (5) Connect test stand return hose to anti-skid line at tee disconnected in step (3).
- (6) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (7) Flush circuit for five minutes.
- (8) Depressurize test stand.
- (9) Restore all lines and units to original configuration.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (10) Disconnect left anti-skid servo valve return line at tee fitting on upper servo valve on left main gear strut. Connect test stand pressure hose to this line.
- (11) Disconnect two return lines from swivel gland at top of main gear strut. Connect these lines with jumper line.
- (12) Disconnect left bogie relief valve from anti-skid return line at tee fitting. Cap line and tee.
- (13) Disconnect left anti-skid return line from cross fitting in case drain return port of main reservoir. Cap cross fitting.
- (14) Connect test stand return hose to this line.
- (15) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (16) Flush circuit for five minutes.
- (17) Depressurize test stand.
- (18) Restore all lines and units to original configuration.



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

UTILITY SYSTEMS UPSTREAM OF CONTROL SYSTEM FILTERS - INSPECTION/CHECK

1. General

- A. The purpose of this section is to provide a logical guide for removing the contaminants (foreign particles) from the fluid, units, and lines of the utility systems upstream of the control system filters by flushing the systems with clean hydraulic fluid.
- B. This procedure may be deviated from as dictated by the individual circumstances. Hydraulic circuits that are easy to locate and follow, have been intentionally omitted from this procedure for the sake of brevity.
- C. The removal of overheated or diluted fluid, would follow generally the same procedure with the exception that the removed contaminated fluid would be caught in containers rather than recirculated through the hydraulic test stand.
- D. Before any flushing procedures are performed, personnel should read and thoroughly understand 29-00, Inspection/Check.

2. Tools and Equipment Required

- A. One hydraulic test stand capable of operating with Skydrol hydraulic fluid, and fitted with 10-micron or smaller filter.
  - B. Pressure and return hoses, jumper lines, and fittings as required by the following procedures.
- 

3. Flush Utility Systems Upstream of Control System Filters


A. Wing Flap System

- (1) Disconnect flap up and flap down lines from wing flap control valve (see Figure 601).
- (2) Remove restrictor with portion of wing flap up line, which is connected to wing flap control valve.
- (3) Disconnect flap return line from right power manifold just inboard of flap control valve. Jumper this line to flap down line, which was disconnected in Step (1).
- (4) Connect open flap up line to test stand pressure hose.
- (5) Disconnect flap return line from inlet port of auxiliary pump alternate reservoir. Connect this line to test stand return hose.
- (6) Remove thermal relief valve from tee in flap up line, located at STA  $X_{rs} = 70$  in right wing root. Cap tee.


Feb 1/69

29-04  
CODE 3  
Page 601

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

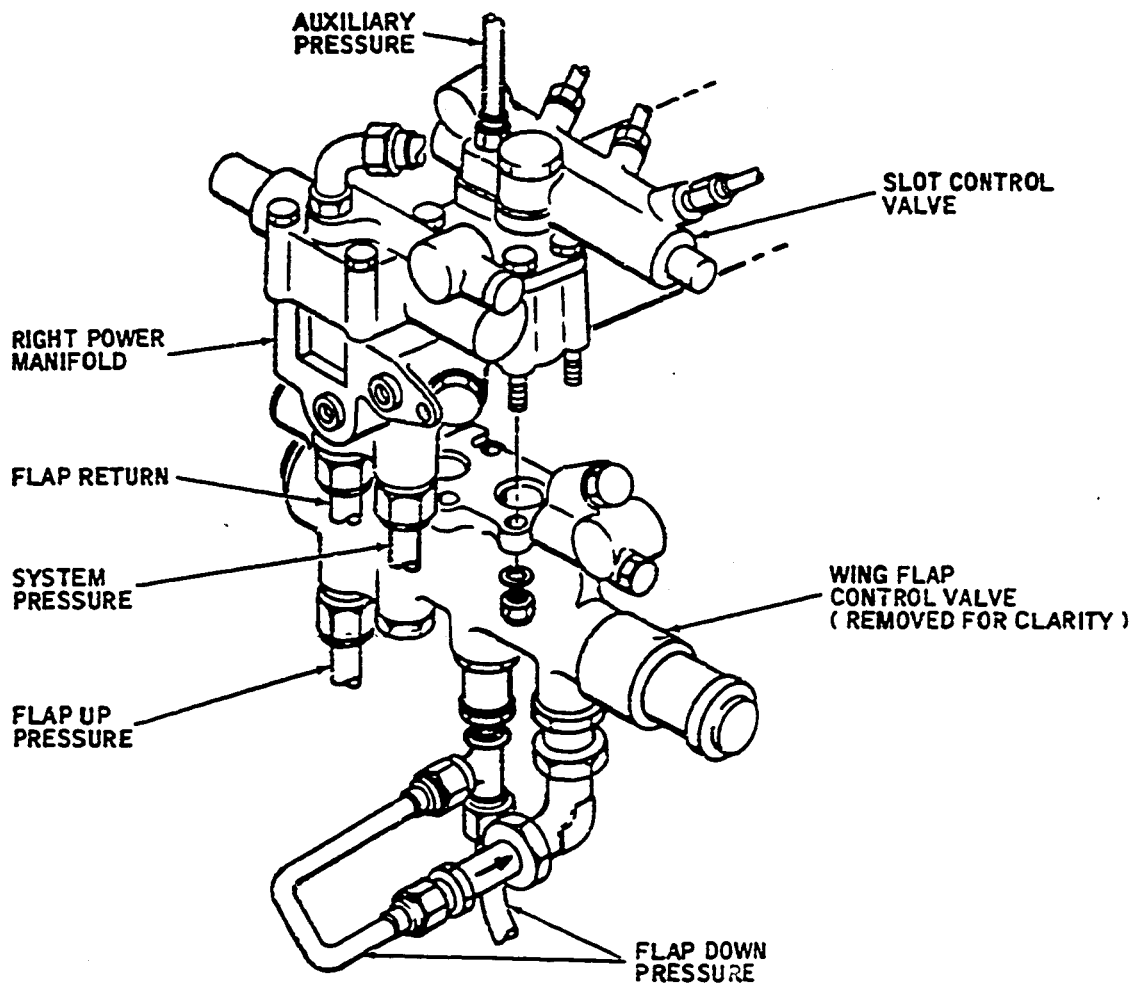


RIGHT POWER MANIFOLD

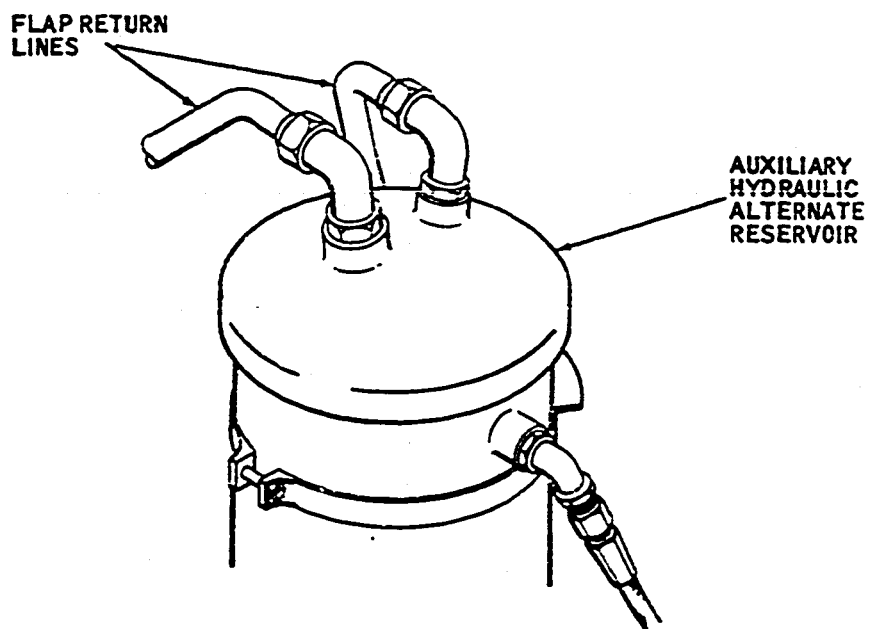

ALTERNATE RESERVOIR

HA2-6108A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

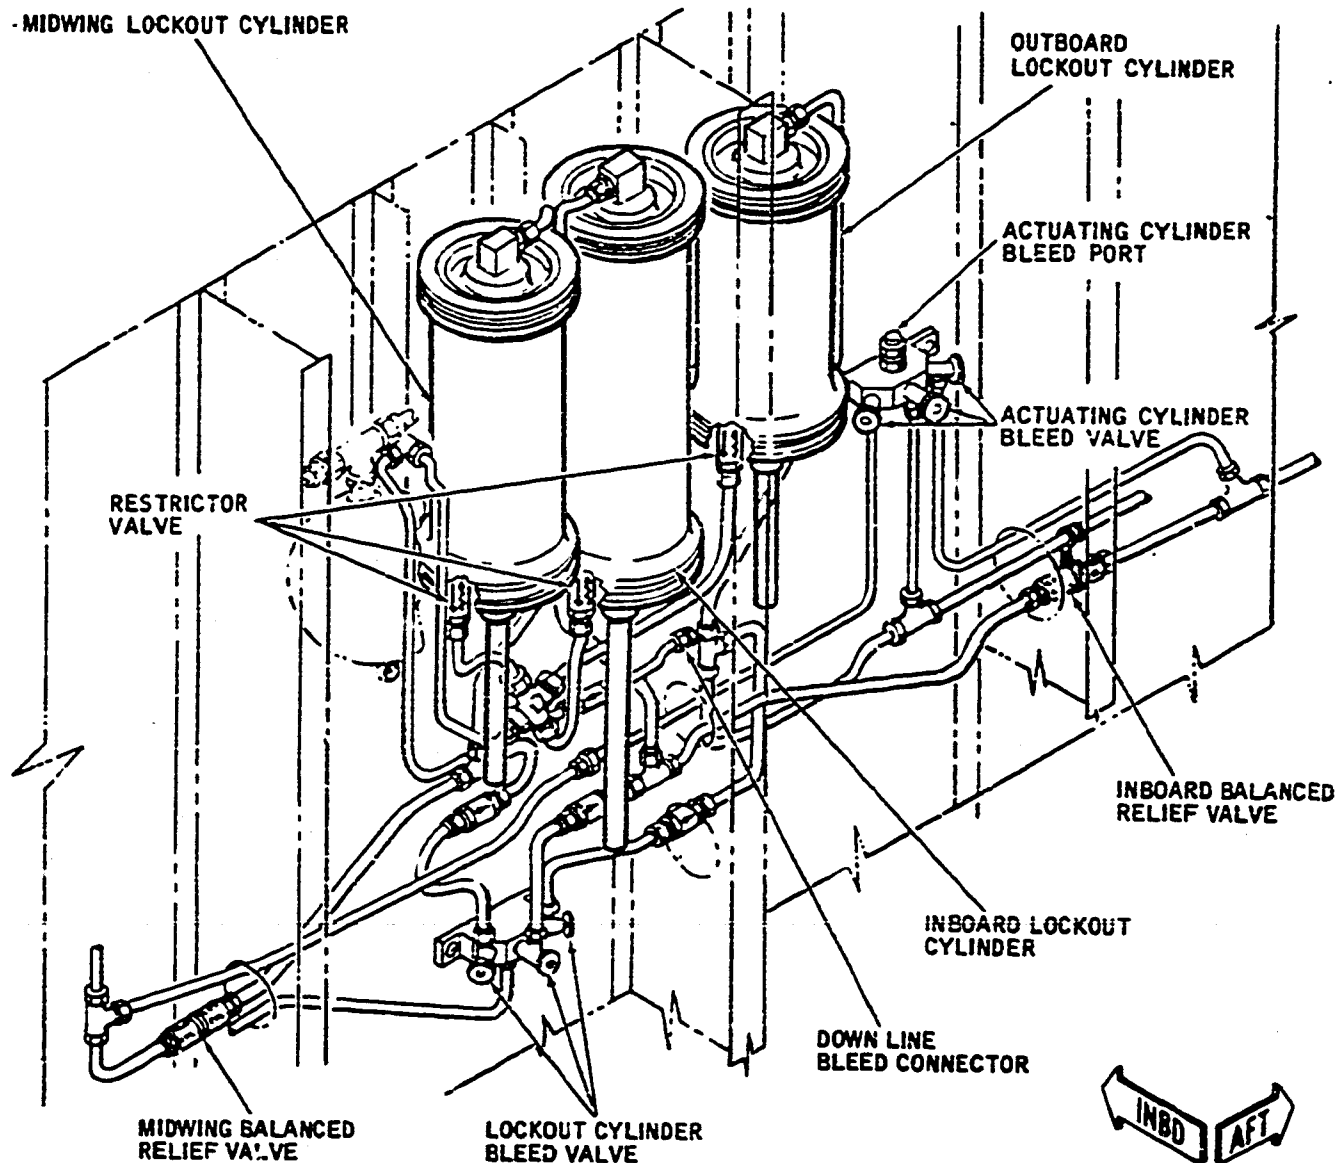

LEFT MAIN LANDING  
 GEAR WHEEL WELL

HA2-7558

Flushing Procedures -- Line Connection Location  
 Figure 601A

May 1/71

29-04  
 CODE 3  
 Page 602A

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXT/ SERIES**  
MAINTENANCE MANUAL

- (7) Disconnect hoses from outboard flap actuating cylinders. Plug all hoses.
- (8) At inboard and midwing flap actuating cylinders, disconnect flap up and flap down pressure lines and install jumper between both set of lines.
- (9) Disconnect bottom line from flap lockout cylinder bleed valve manifold (see Figure 601A).
- (10) Remove lines and check valves (3) from top of bleed valve manifold.
- (11) Connect jumper between line disconnected in step (9) and tee fitting below inboard lockout cylinder from which check valve was removed in step (10).
- (12) Disconnect lines (3) from bottom of actuating cylinder bleed valve manifold.
- (13) Connect jumper between bleed line for inboard actuating cylinder and down line bleed connector.
- (14) Disconnect lines from top and bottom of inboard flap lockout cylinder and connect jumper between lines.
- (15) At inboard and midwing balanced relief valve, disconnect and jumper lines.
- (16) Pressurize test stand to 200 psi maximum at 20 gpm flow and flush circuit for five minutes.
- (17) Shut off pressure source.
- (18) Disconnect jumper from tee fitting below inboard lockout cylinder and connect to line below midwing lockout cylinder from which check valve was removed in step (10).
- (19) Disconnect jumper from bleed line for inboard actuating cylinder and connect to bleed line for midwing actuating cylinder.
- (20) Pressurize test stand to 200 psi maximum at 20 gpm flow and flush circuit for five minutes.
- (21) Disconnect lines from top and bottom of inboard flap lockout cylinder and connect jumper between lines.
- (22) Disconnect jumper from line below midwing lockout cylinder and connect to line below outboard lockout cylinder from which check valve was removed in step (10).
- (23) Disconnect jumper from bleed line for midwing actuating cylinder and connect to bleed line for outboard actuating cylinder.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (24) At midwing flap actuating cylinders, remove jumpers. Plug flap down pressure lines.
- (25) Connect jumper between midwing actuating cylinder up pressure line and outboard actuating cylinder down pressure lines.
- (26) Pressurize test stand to 200 psi maximum at 20 gpm flow and flush circuit for five minutes.
- (27) Shut off pressure source.
- (28) Disconnect test stand pressure hose from flap up line. Connect line to wing flap control valve.
- (29) Disconnect auxiliary pump case drain line from inlet port on side of alternate reservoir and from case drain of auxiliary pump.
- (30) Connect test stand pressure hose and return hose to drain line, flush for three minutes.
- (31) Disconnect auxiliary pump suction line at alternate reservoir and auxiliary pump selector valve.
- (32) Disconnect test stand pressure hose and test stand return hose from auxiliary pump case drain line, and connect to auxiliary pump suction line, flush for three minutes.
- (33) Remove jumpers at all flap actuating cylinders, flap lockout cylinders, flap control valve, and actuating cylinder bleed valve manifold. Connect airplane lines to applicable component.
- (34) Bench flush short lines that run between lockout cylinder bleed valve manifold and check valve (removed in step 10).
- (35) Install lines and check valves on lockout cylinder bleed valve manifold.
- (36) Remove and bench flush short line that runs between thermal relief valve and tee in low-pressure return line.

NOTE: Steps (37) through (47) have been deleted.

- (48) Inspect, clean, and/or replace all flap actuator cylinders, lockout cylinders thermal relief valve, balanced relief valves, restrictor valve, and flap control valve.
- (49) Restore all lines and units to original configuration.
- (50) Adjust rigging if necessary (see Chapter 27).

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

B. Wing Slot System

- (1) Disconnect slots open and slots closed lines from wing slot control valve, located on right power manifold (see Figure 601).
- (2) Connect slots open line to test stand pressure hose. Connect slots closed line to test stand return hose.
- (3) Disconnect lines from 4 slot cylinders, cap all lines except outboard right cylinder lines. Install jumper across these two lines.
- (4) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (5) Flush circuit for three minutes.
- (6) Depressurize test stand.
- (7) Move jumper to right inboard slot cylinder lines, cap outboard lines, and repeat Steps (4 through 6).
- (8) Repeat Steps (3 through 7) for left side. Make certain that all lines on both sides of airplane, with exception of jumpered lines, are capped.
- (9) Inspect, clean, and/or replace wing slot cylinders and wing slot control valve, located on right power manifold.
- (10) Restore all lines and units to original configuration. Adjust rigging if necessary per Chapter 27.


C. Main Gear Retract System (See Figures 602 and 603.)

- (1) Disconnect gear up pressure line, gear down pressure line, and gear down return lines from main gear control valve.
- (2) Connect jumper between gear down pressure line and gear down A-return line.
- (3) Connect gear up line to test stand pressure hose.
- (4) Disconnect gear down A-return line from tee in (nose gear return) A-return line, located in left wheel well aft of rear spar and below dual filter and relief valve. Connect line to test stand return hose.
- (5) Disconnect right gear up and gear down lines from tees, located to right of centerline of airplane. Cap tees. Left gear retract system will be flushed first.
- (6) In left wheel well, disconnect both main gear uplatch lines from tees in gear up and gear down lines. Cap tees.
- (7) Disconnect both main gear door latch lines from tees in gear up and gear down lines near wing root. Cap tees.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) Disconnect downlock bungee pressure line from tee in gear up line. Cap tee.
- (9) Disconnect line, which leads to bungee cylinder, from tee in gear down line. Cap tee.
- (10) Disconnect line, which leads to gear door manual open valve, from tee in main gear down line. Cap tee.
- (11) Replace restrictor in gear down line with jumper.
- (12) Disconnect gear up and gear down lines from upstream side of actuating cylinder swivel gland. Connect jumper between these lines.
- (13) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (14) Flush circuit for five minutes.
- (15) Depressurize test stand.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

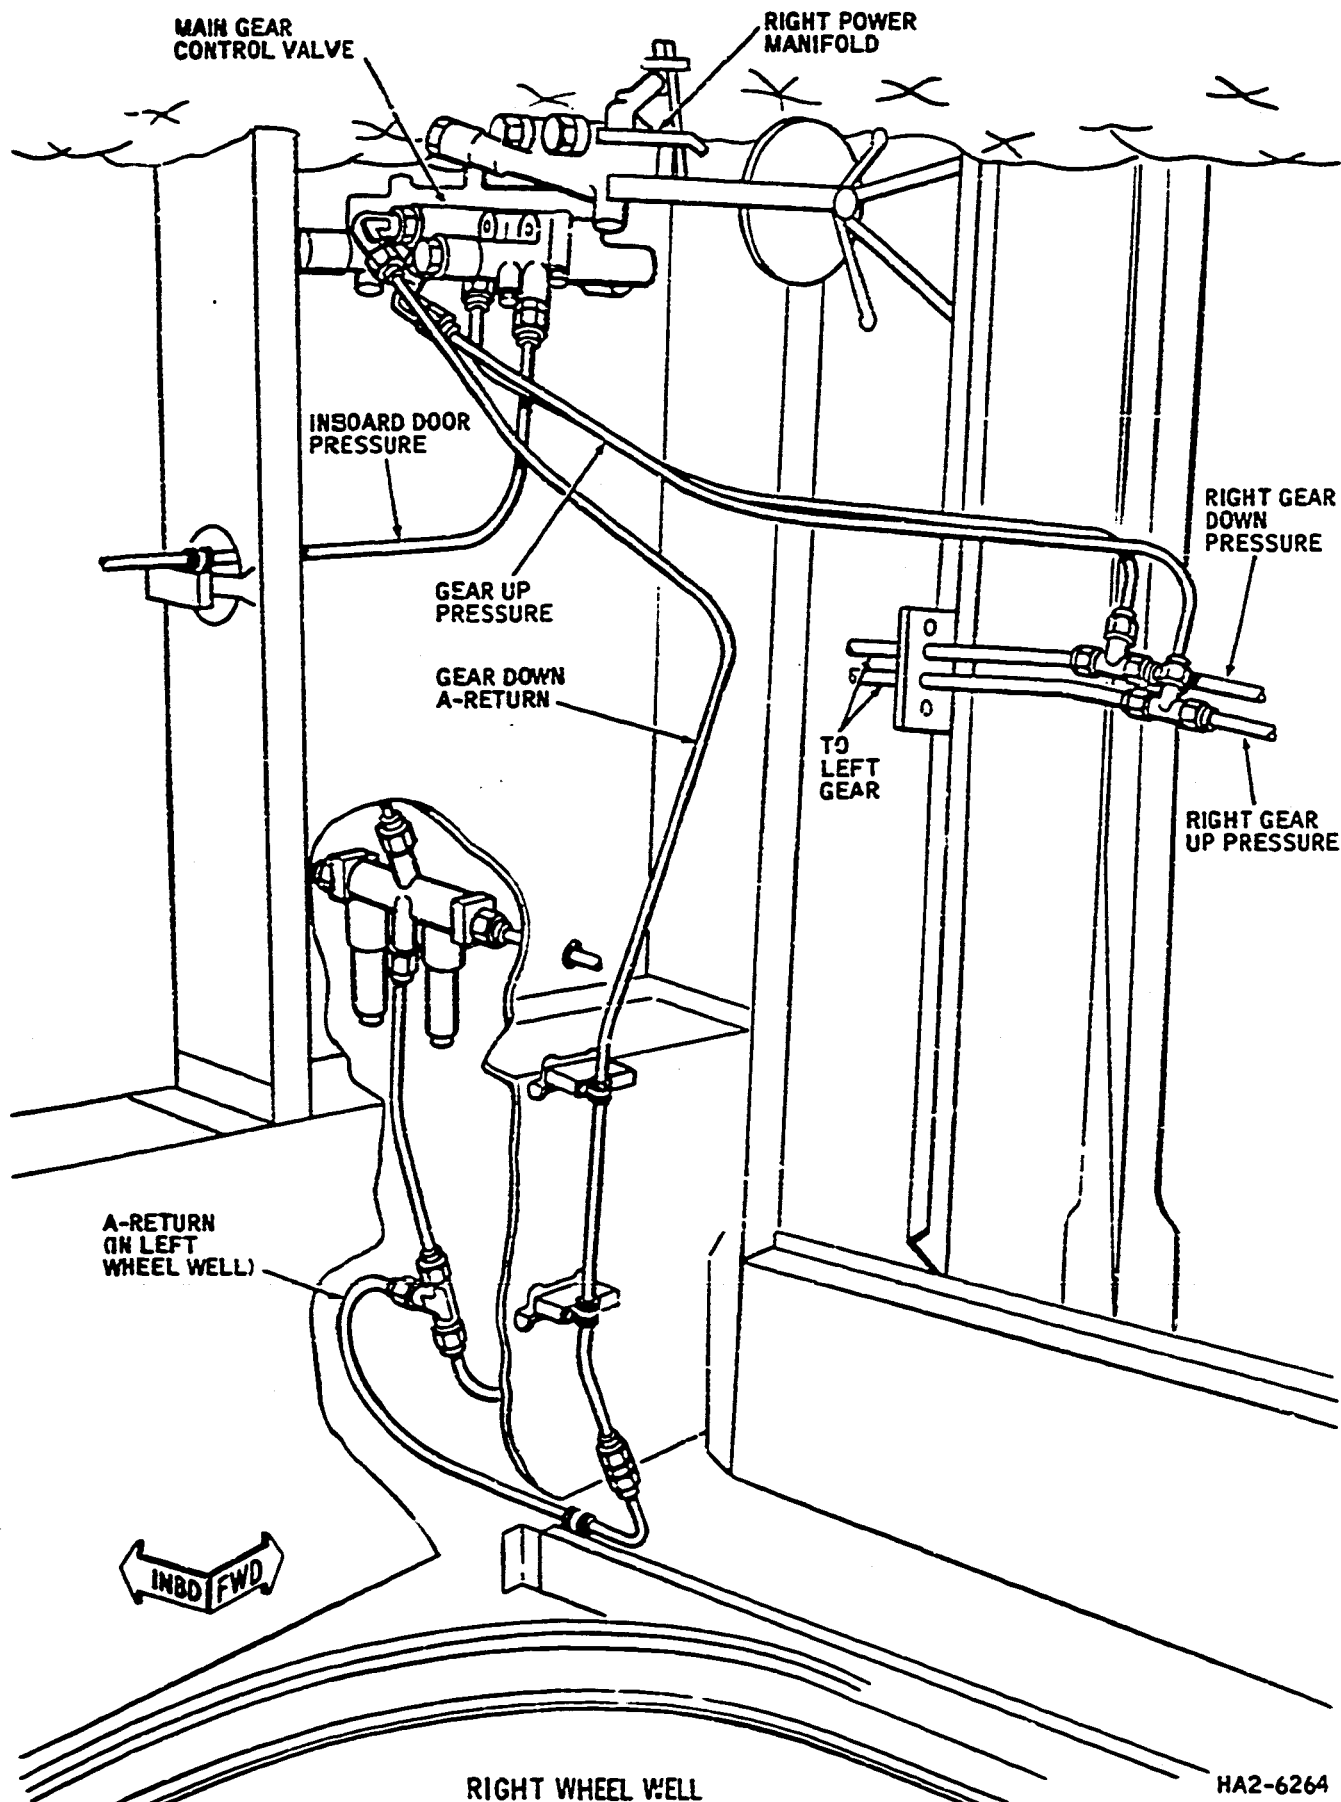

HA2-6264


Flushing Procedure Line Connection Locations  
 Figure 602

Feb 1/69

29-04  
 CODE 3  
 Page 605



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

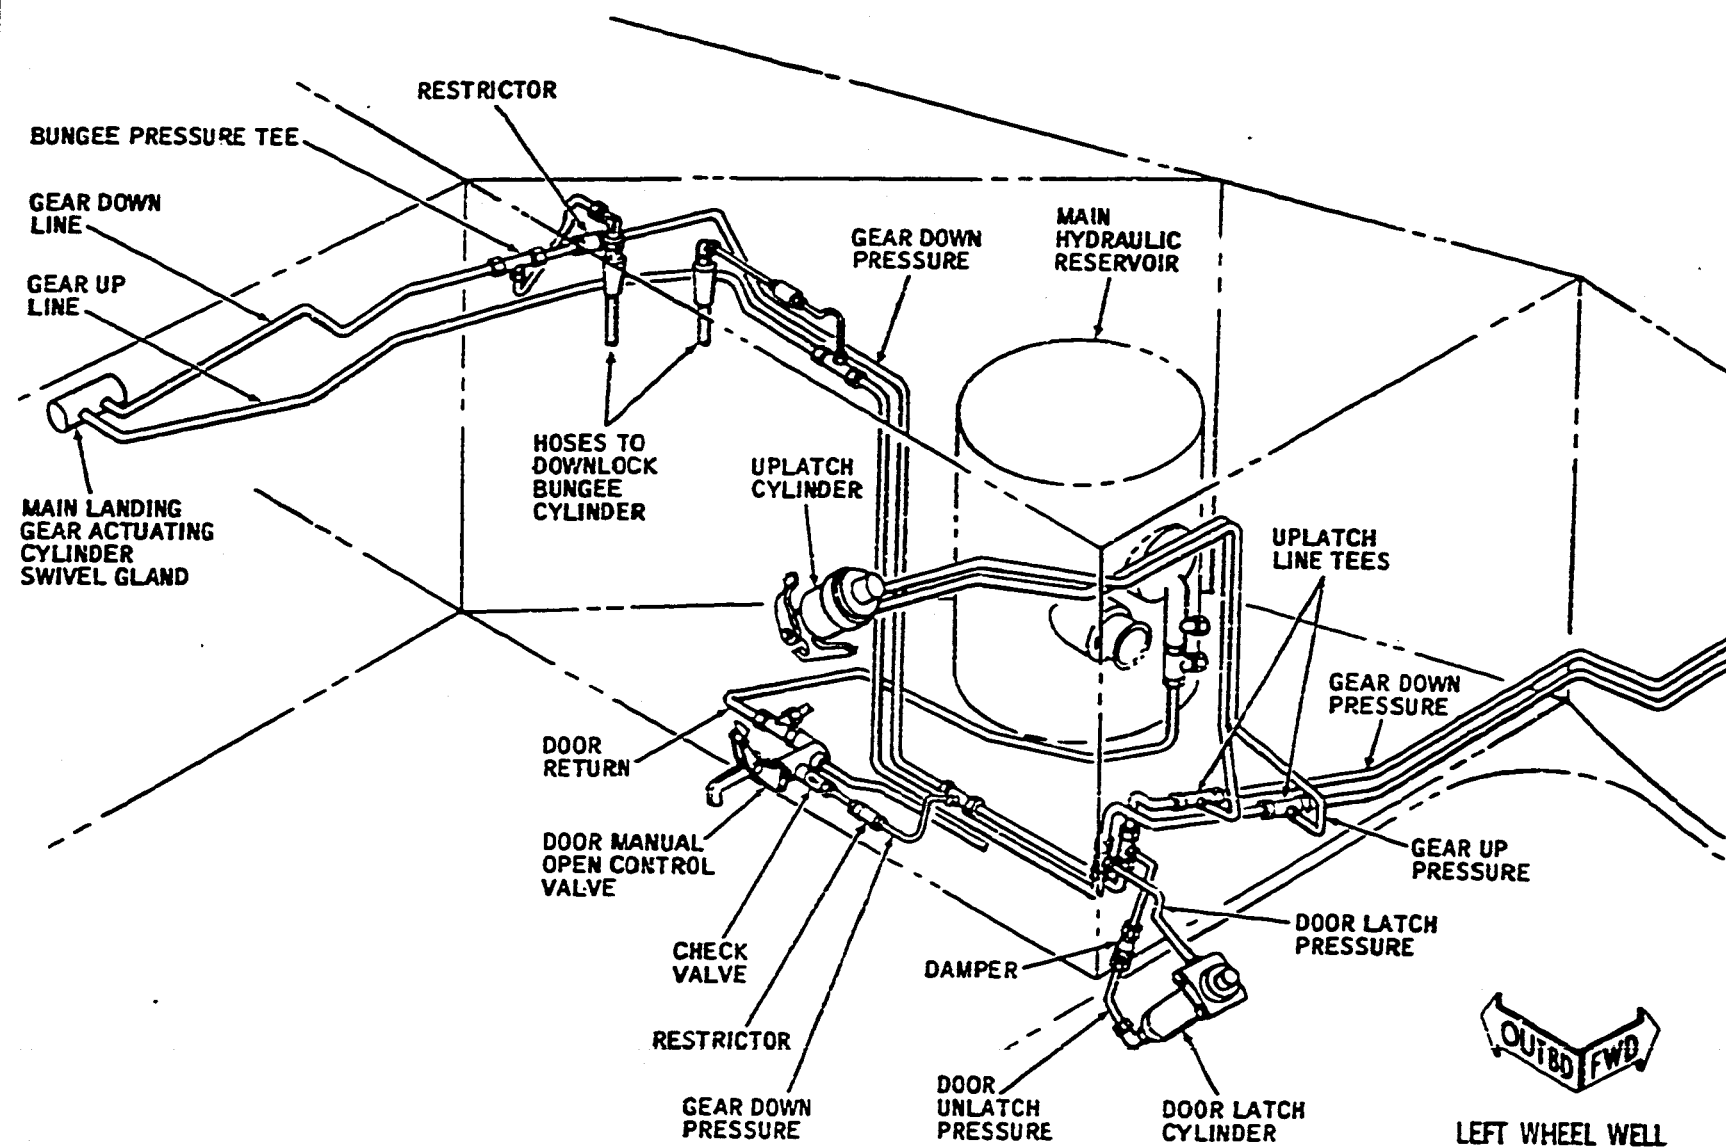

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (16) Inspect, clean, and/or replace actuating cylinder and attaching swivel gland, door latch assembly and attaching lines (which include damper), downlock bungee cylinder and connecting lines including 2 hoses, restrictors and several short lines.
- (17) Disconnect gear uplatch lines from gear uplatch cylinder and connect jumper between lines.
- (18) Connect this circuit to test stand pressure and return hoses and flush for 3 minutes. Use same pressure as in Step (13).
- (19) Inspect, clean, and/or replace main gear uplatch cylinder.
- (20) Restore all lines and units on left side of airplane to original configuration.
- (21) Connect test stand pressure hose to right gear down line, and test stand return hose to right gear up line. These lines were capped in Step (5).
- (22) Repeat Steps (6 through 20) for right side of airplane.
- (23) Make any necessary adjustments per Chapter 32.

**D. Main Gear Door System**

- (1) Disconnect right main gear door lines from bulkhead tees in center web of airplane. Cap tees.
- (2) Disconnect pressure and return lines from left door actuating cylinder swivel gland. Place jumper across these lines.
- (3) Disconnect door return line from inboard side of door manual open valve. Connect line to test stand return hose.
- (4) Disconnect door pressure line from main gear control valve. Connect line to test stand pressure hose.
- (5) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (6) Flush circuit for three minutes.
- (7) Depressurize test stand.
- (8) Disconnect pressure and return lines from right door actuating cylinder swivel gland. Connect jumper across these lines.
- (9) Connect test stand pressure and return hoses to lines that were capped in Step (1).
- (10) Repeat Steps (5 through 7) for these lines.


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (11) Inspect, clean, and/or replace both door actuating units, lines, and swivel glands.
- (12) Inspect, clean, and/or replace door manual open valve, short line between manual open valve and tee in down line (this line includes restrictor and check valve) and line which runs from tee in manual open valve to reservoir fitting.
- (13) Restore all lines and units to original configuration, and make any necessary adjustments per Chapter 32.

E. Bogie Trim System (See Figure 604)

- (1) Disconnect bogie trim pressure line from cross fitting below priority valve.
- (2) Connect test stand pressure hose to bogie trim pressure line.
- (3) Disconnect bogie trim pressure line, which leads to right gear, at tee located below left power manifold and to left of airplane centerline. Cap tee.
- (4) Disconnect bogie trim cylinder pressure hose at forward manifold on left main gear strut.
- (5) Connect test stand return hose to manifold port.
- (6) Install jumper lines around main gear swivel gland in bogie trim pressure line.
- (7) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (8) Flush circuit for five minutes.
- (9) Depressurize test stand.
- (10) Inspect, clean, and/or replace bogie trim relief valve, swivel gland, located at top of main gear strut, and bogie trim cylinder with attaching hoses, short lines between tee in bogie trim pressure line and relief valve, between relief valve and manual door open valve on left side of airplane, and between relief valve and antiskid valve.
- (11) Connect right bogie trim pressure line to tee from which it was disconnected in Step (3). Disconnect left bogie trim pressure line from this tee, and cap tee.
- (12) Disconnect test stand return hose from left forward manifold and connect it to bogie trim port on right main rear forward manifold.
- (13) Repeat Steps (5 through 10) for right side of airplane.
- (14) Restore all bogie trim lines, hoses, and units to original configuration.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

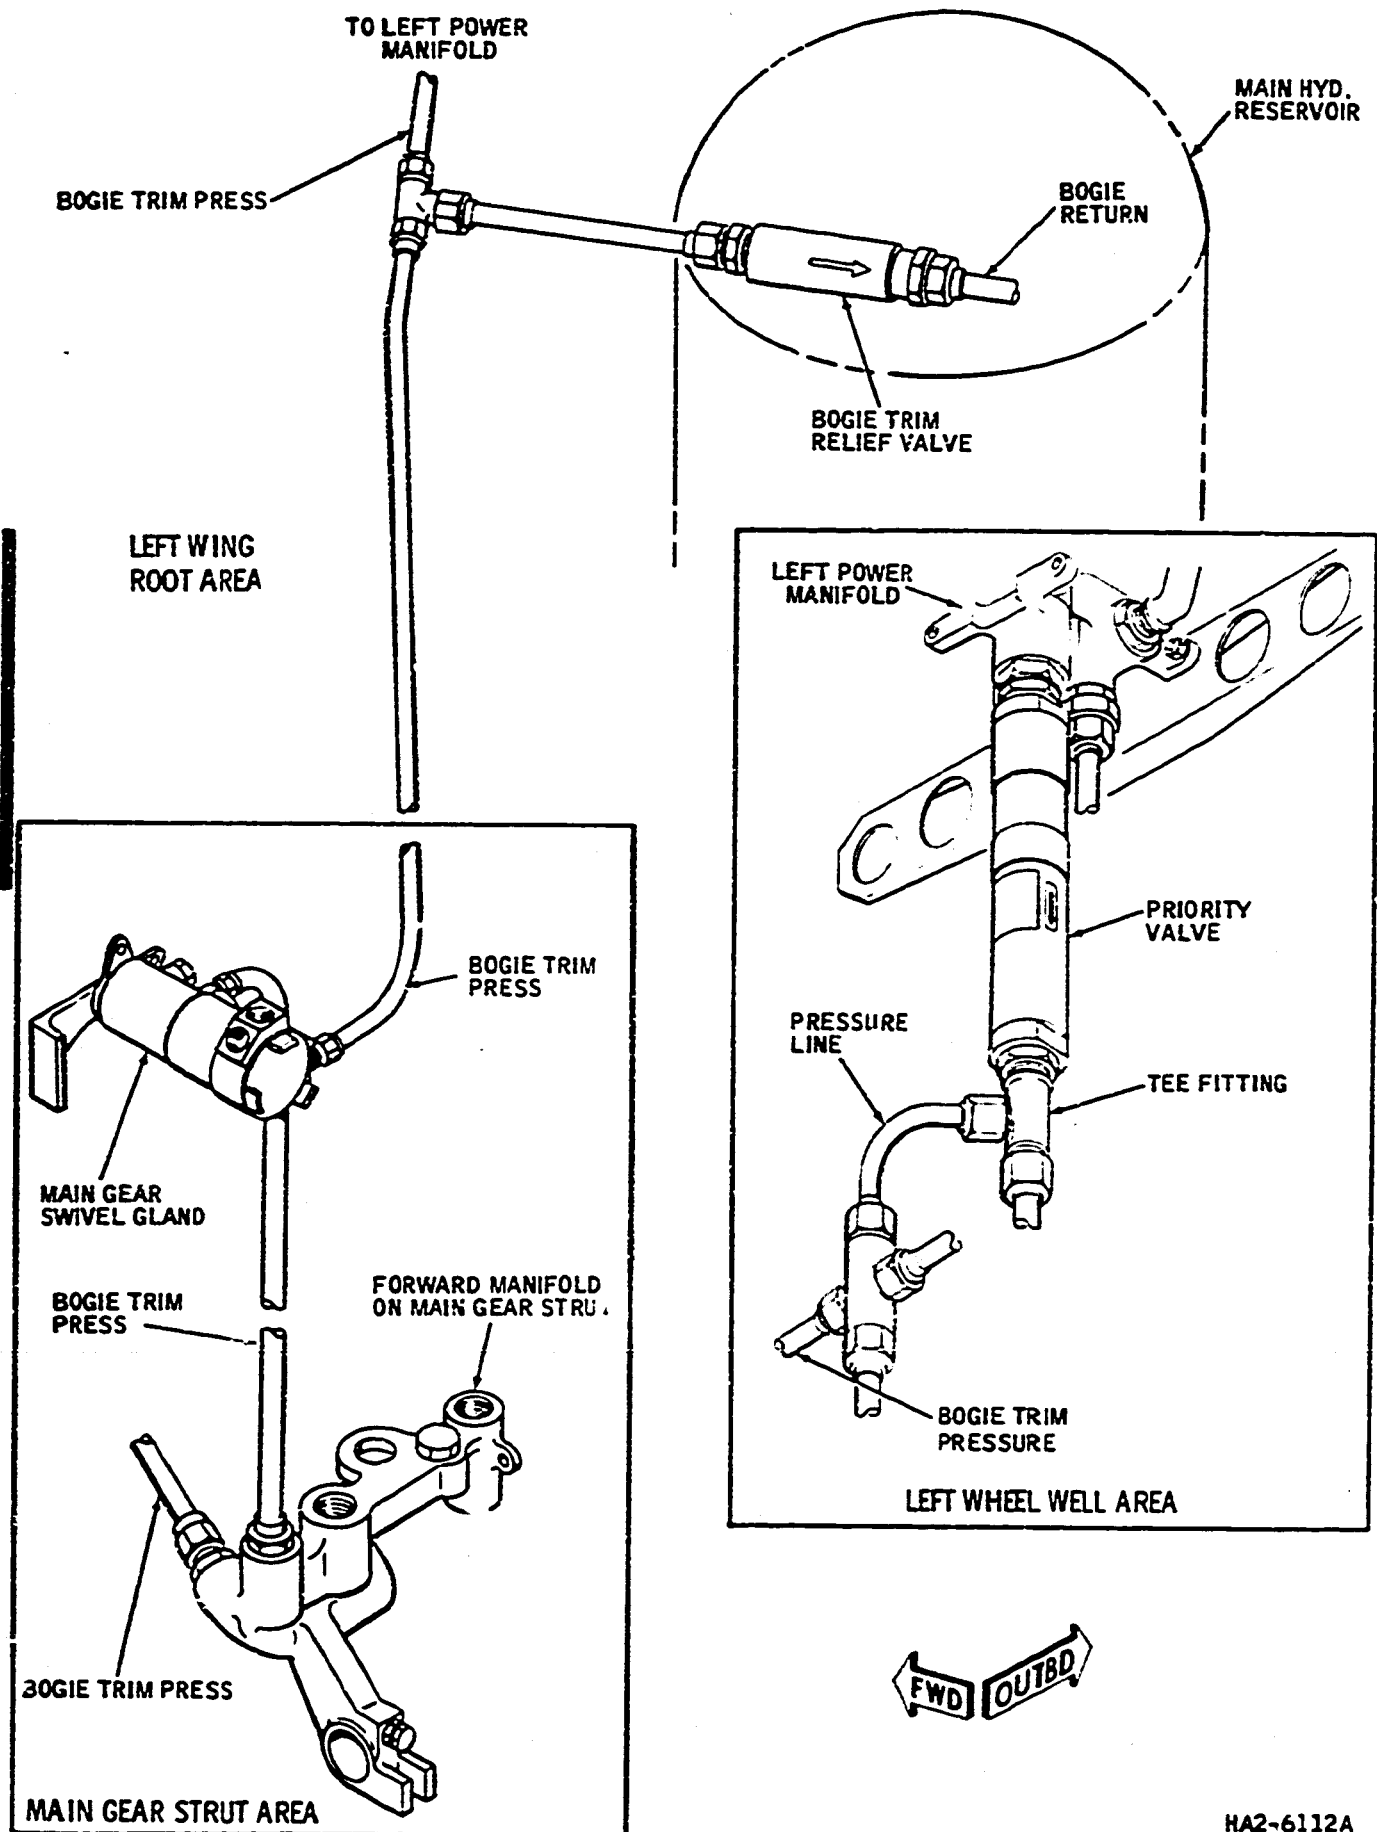

HA2-6112A

Flushing Procedure Line Connection Locations  
 Figure 604

May 1/69

29-04  
 CODE 3  
 Page 609

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


F. Nose Gear System (See Figures 605 and 606.)

- (1) Disconnect nose gear down line from tee just inboard of nose gear control valve. Connect line to test stand pressure hose.
- (2) Disconnect actuating cylinder gear down hose from tee in gear down line, located on left side of nosewheel well. Cap tee.
- (3) Jumper check valve in steering pressure line, which runs from tee for actuating cylinder down hose to tee which branches to reserve accumulator shutoff valve and pressure line running forward.
- (4) At tee between check valve, removed in Step (3), and reserve accumulator shutoff valve, disconnect steering pressure line which leads forward. Cap tee.
- (5) Disconnect pressure line from left side of reserve accumulator shutoff valve. Place jumper between this line and line which was disconnected in Step (4).
- (6) Replace check valve in steering pressure line, located aft of nosewheel steering valve, with jumper.
- (7) Disconnect all four lines from steering control valve. Connect jumpers between pressure line and steer right line, and between return line and steer left line.
- (8) On airplanes without nose gear steering bypass valve, perform Steps (a) through (c).
  - (a) Disconnect five steering lines from swivel gland and tee located on cross arm. Connect jumper across two open steer left lines located on opposite sides of swivel gland. Connect jumper across two steer right lines which were disconnected from same tee in swivel gland.
  - (b) Disconnect at steering cylinder glands, three steering lines which run from swivel gland on crossarm to glands at steering cylinders.
  - (c) Install jumper across two lines on right cylinder. On left cylinder, install jumper from open line to open steer-right line upstream of swivel gland on crossarm.
- (9) On airplanes equipped with nose gear steering bypass valve, perform Steps (a) through (h).
  - (a) Disconnect four steering lines from swivel gland located on crossarm. Connect jumper across two open steer left lines. Connect jumper across two open steer right lines.
  - (b) At steering relief valve, disconnect six steering lines.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (c) Connect jumper between steer left inlet line and one of steering lines to right steering cylinder.
  - (d) Connect jumper between steer right inlet line and one of steering lines to left steering cylinder.
  - (e) Jumper remaining left cylinder line to remaining right cylinder line.
  - (f) Disconnect and jumper two lines at right steering cylinder swivel glands.
  - (g) Disconnect and jumper two lines at left steering cylinder swivel glands.
  - (h) Disconnect and remove for cleaning, short bypass valve return line between crossarm swivel gland and bypass valve.
- (10) Disconnect steering return line from lower side of tee in steering relief valve. Disconnect gear actuating cylinder up hose at cylinder. Connect jumper between this open line and hose.
- (11) Disconnect 1/4-inch up line from restrictor on side away from control valve. Disconnect 1/4-inch bungee line at bulkhead cross fitting at control valve. Connect jumper across these two open lines.
- (12) On airplanes without nose gear steering bypass valve, disconnect bungee line from top of swivel gland and connect to test stand return hose.
- (13) On airplanes equipped with nose gear steering bypass valve, disconnect bungee line from top of swivel gland and bypass valve return line at outboard side of swivel gland. Connect jumper between open lines. Disconnect bypass valve return line from bulkhead tee below steering relief valve and connect test stand return hose to line.
- (14) Pressurize test stand to 200 psi maximum at 20 gpm flow.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

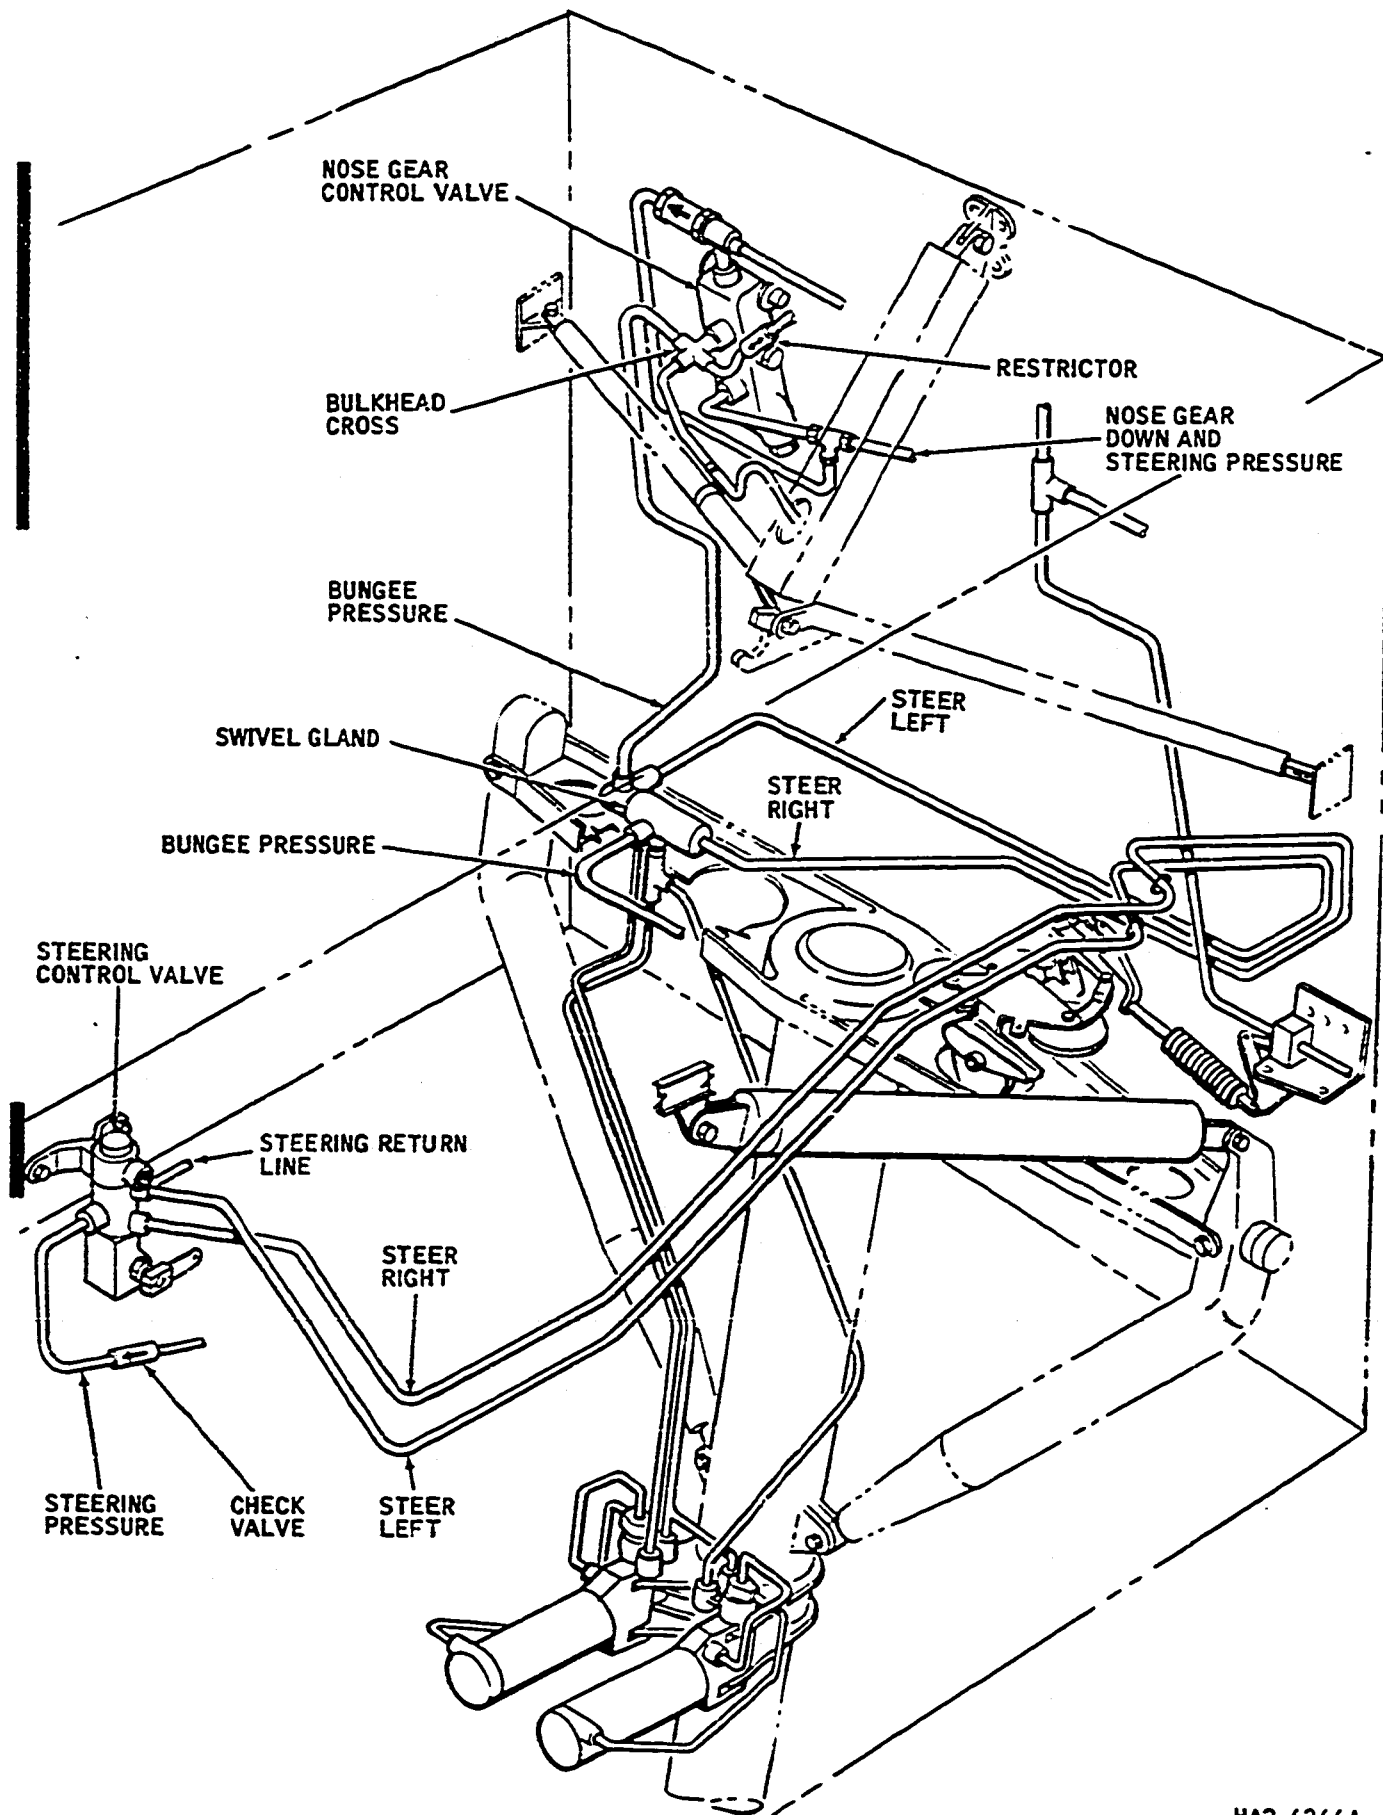


HA2-6266A

Flushing Procedure Line Connection Locations  
 (Airplanes Without Steering Bypass Valve)  
 Figure 605

Nov 1/69

29-04  
 CODE 3  
 Page 611

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

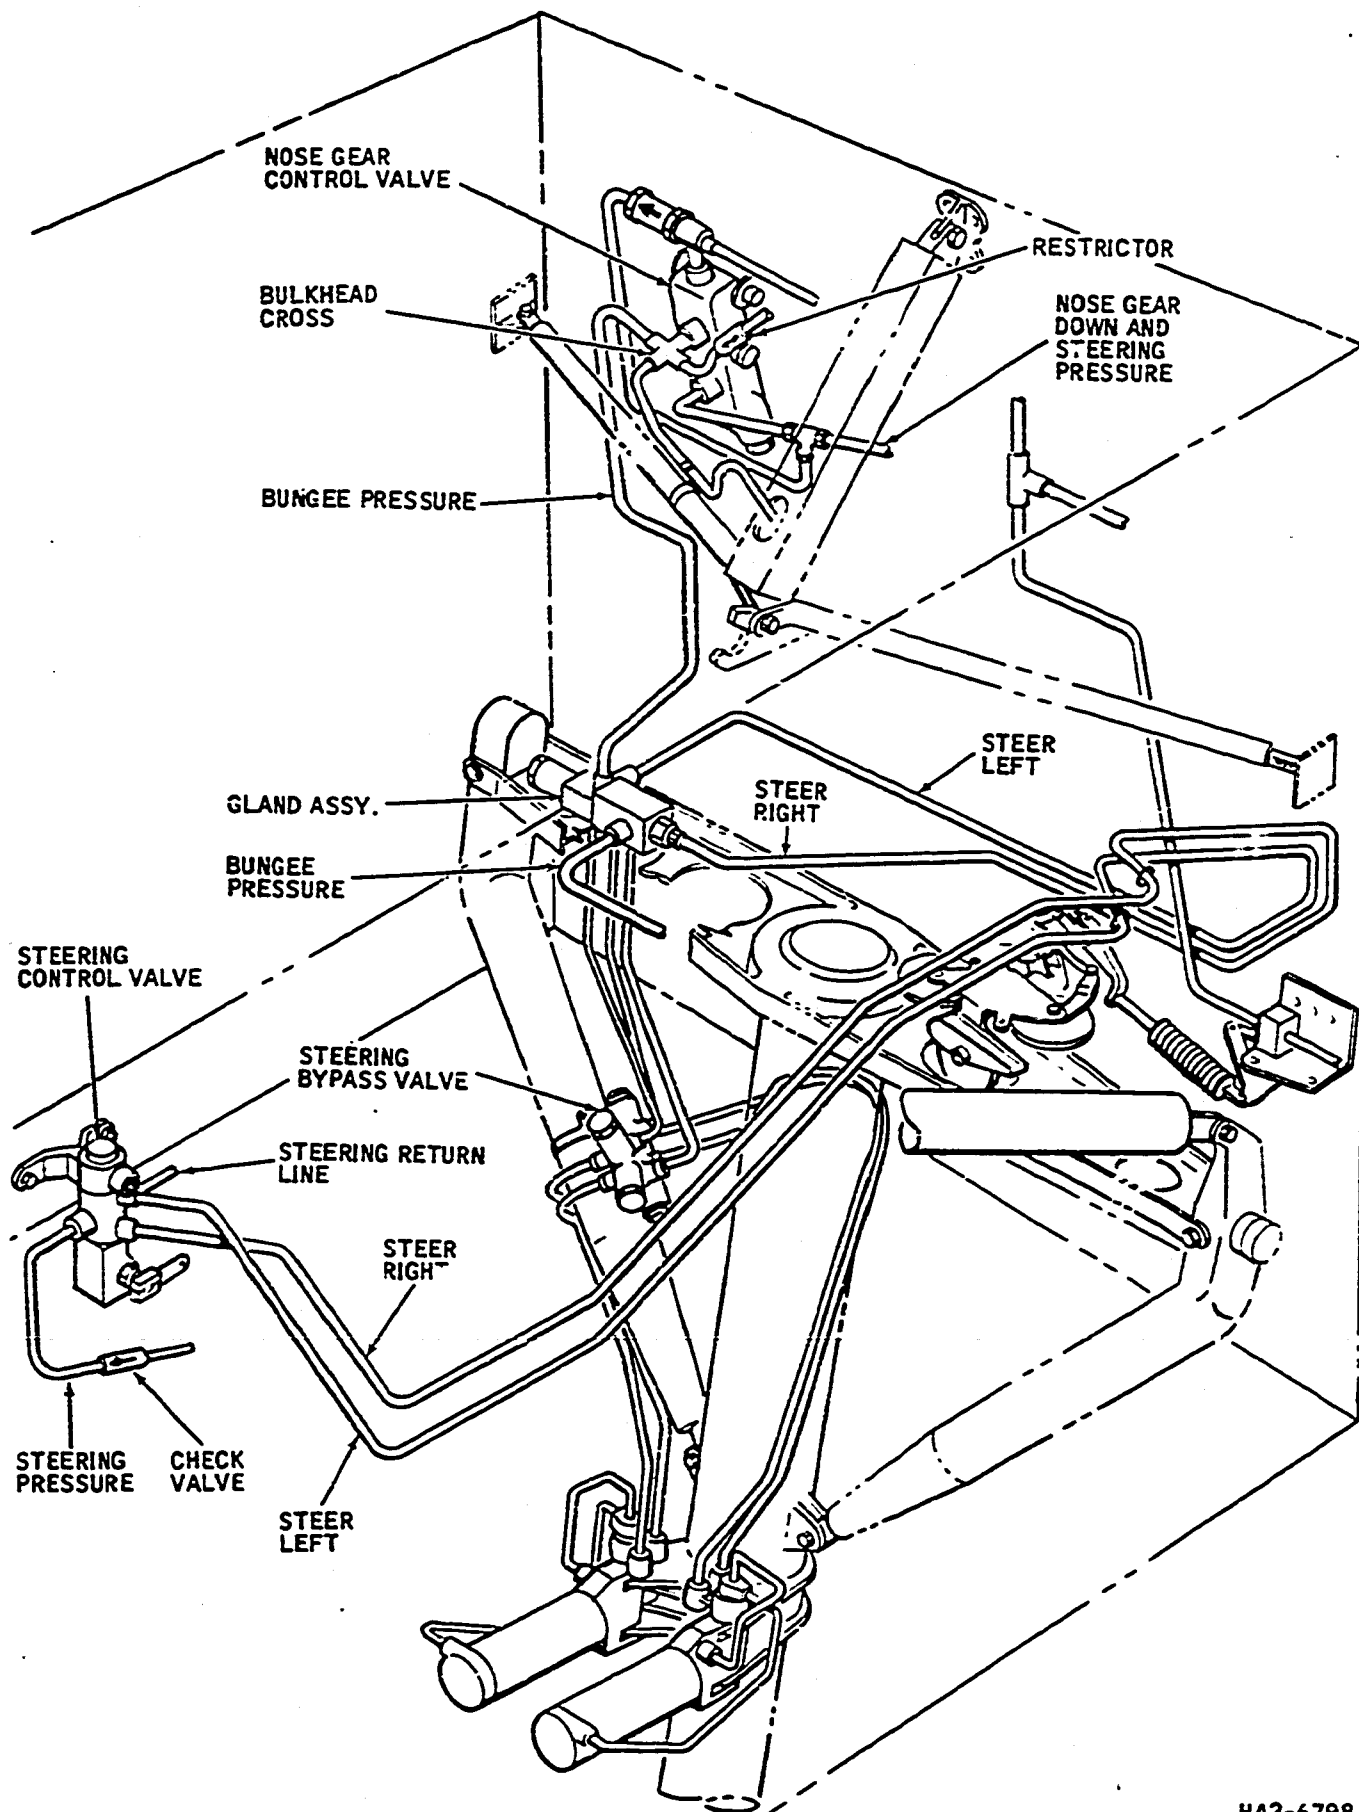

HA2-6798

Flushing Procedure Line Connection Locations  
 (Airplanes With Steering Bypass Valve)  
 Figure 605A




DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (15) Flush circuit for five minutes.
- (16) Depressurize test stand.
- (17) Inspect, clean, and/or replace relief valve, bleeder valve, return accumulator and two associated lines, nose gear actuating cylinder and attaching hoses, bungee cylinder and attaching line, swivel gland mounted on crossarm, uplatch cylinder and two lines which connect it to control valve.
- (18) Inspect, clean, and/or replace nosewheel steering valve, located on outboard side of left side of wheel well and steering bypass valve on airplanes so equipped.
- (19) Inspect, clean, and/or replace nosewheel steering cylinders, restrictors, and gland assemblies and associated lines; nosewheel steering control valve, reserve accumulator shutoff valve and associated lines, and check valves.
- (20) Restore all lines and units to original configuration, and make any necessary adjustments as described in Chapter 32.

G. Wheel Brake System Pressure Lines

- (1) Disconnect right gear brake pressure line from brake control valve, and connect test stand pressure hose to this line (see Figure 607).
- (2) Disconnect two brake pressure lines from swivel gland at top of main landing gear strut. Connect these lines with a jumper line.
- (3) Disconnect brake pressure line from upstream side of tee fitting at dual servo valves.
- (4) Disconnect four brake pressure outlet lines from servo valves. Connect jumper line between pressure inlet line and one pressure outlet line. Cap other three outlet lines.
- (5) Disconnect inlet and outlet lines and jumper fluid quantity limiter (or lockout cylinder) in outlet line connected in Step (4).
- (6) Disconnect brake hose from corresponding brake, and connect hose to test stand return hose.
- (7) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (8) Flush circuit for five minutes.
- (9) Depressurize test stand.
- (10) Disconnect jumper line from outlet line connected in Step (4), cap outlet line, and connect jumper to one of other three outlet lines.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

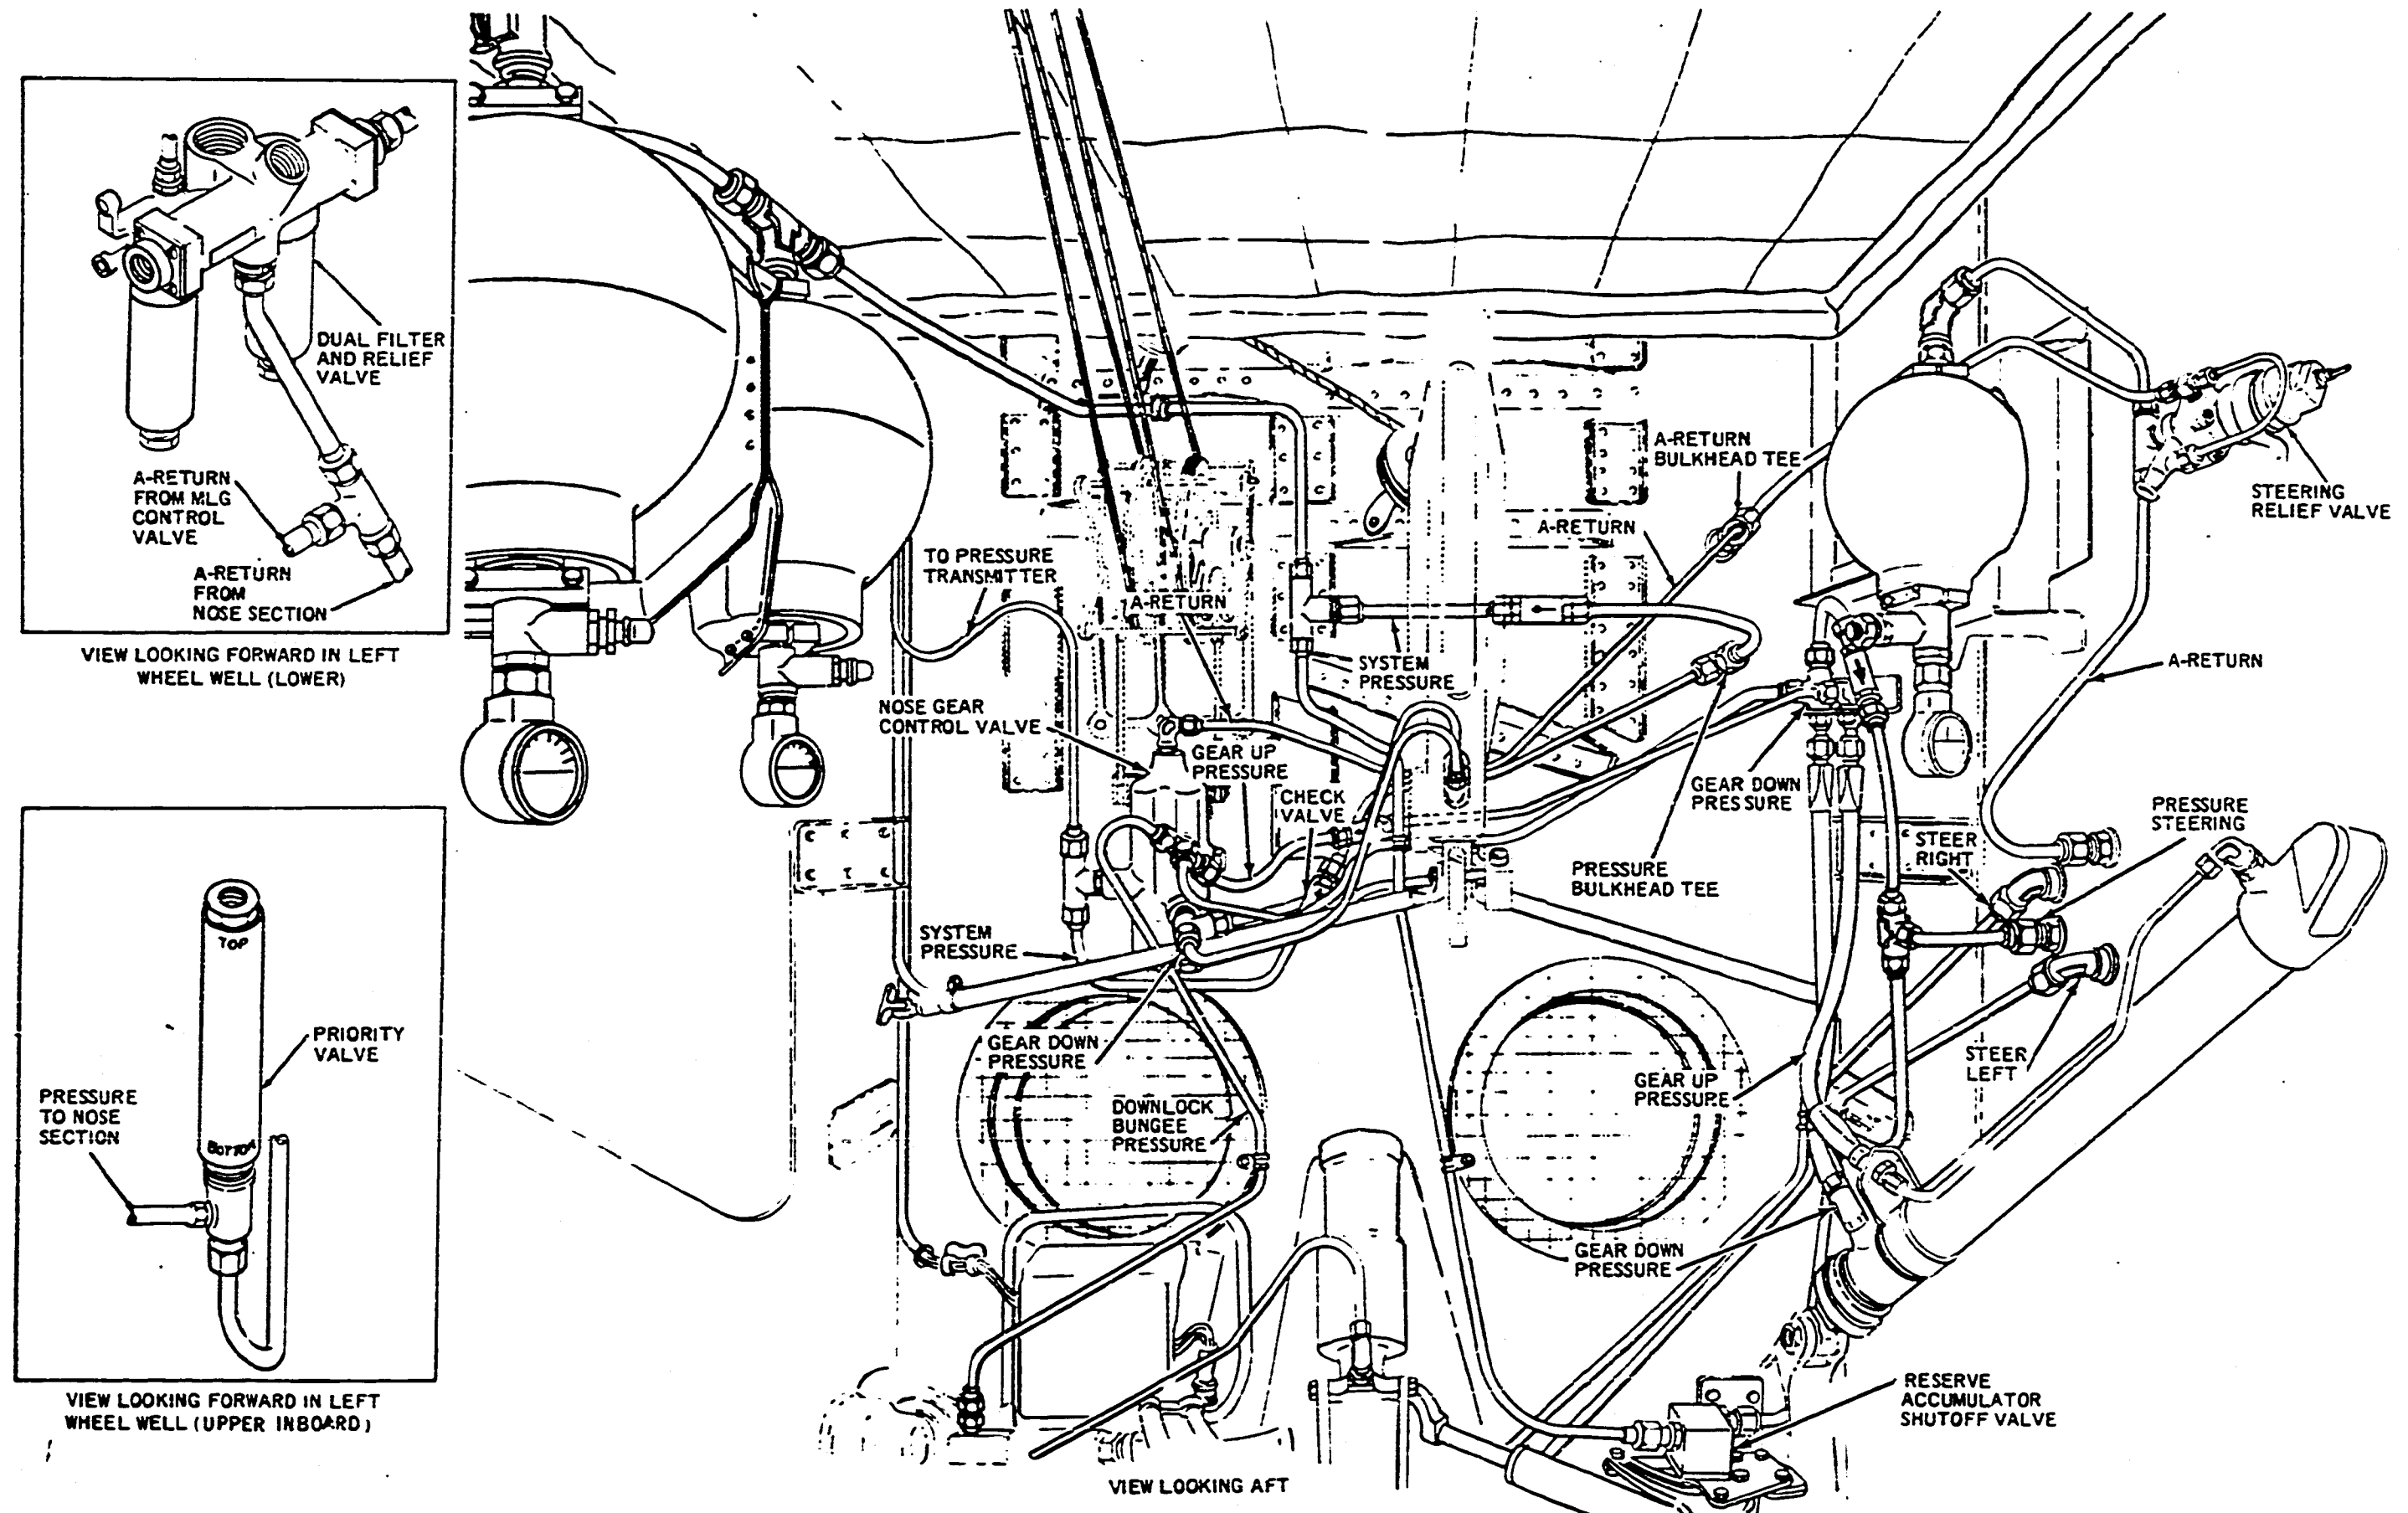

Flushing Procedure Line Connection Locations  
 Figure 606


29-04  
 CODE 3  
 Page 613

Feb 1/69

Printed in U.S.A.

HA2-6127

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

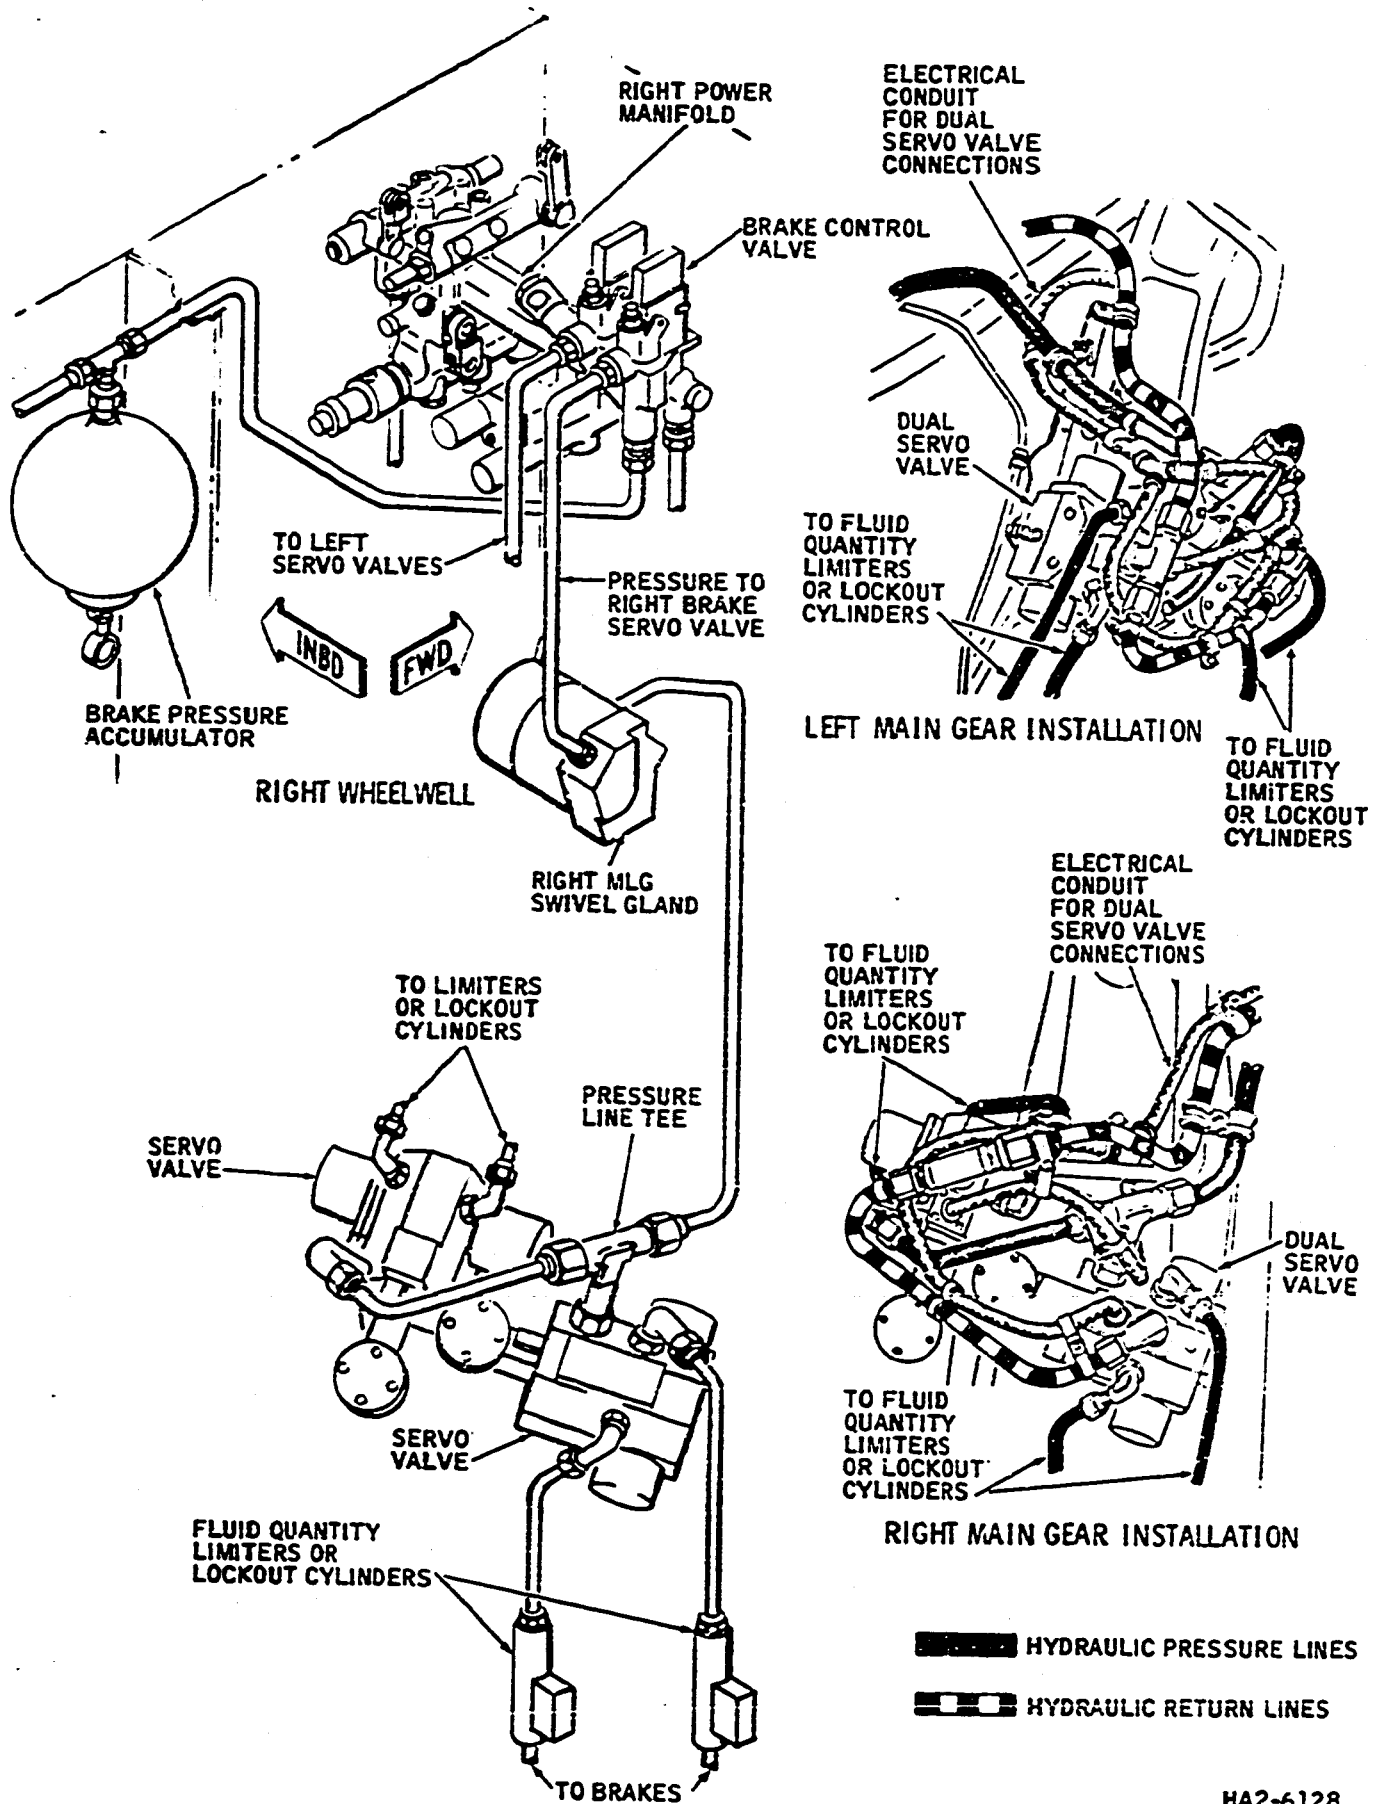


HA2-6128

Flushing Procedure Line Connection Locations  
 Figure 607 (Sheet 1)

Feb 1/69



29-04  
 CODE 3  
 Page 615

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

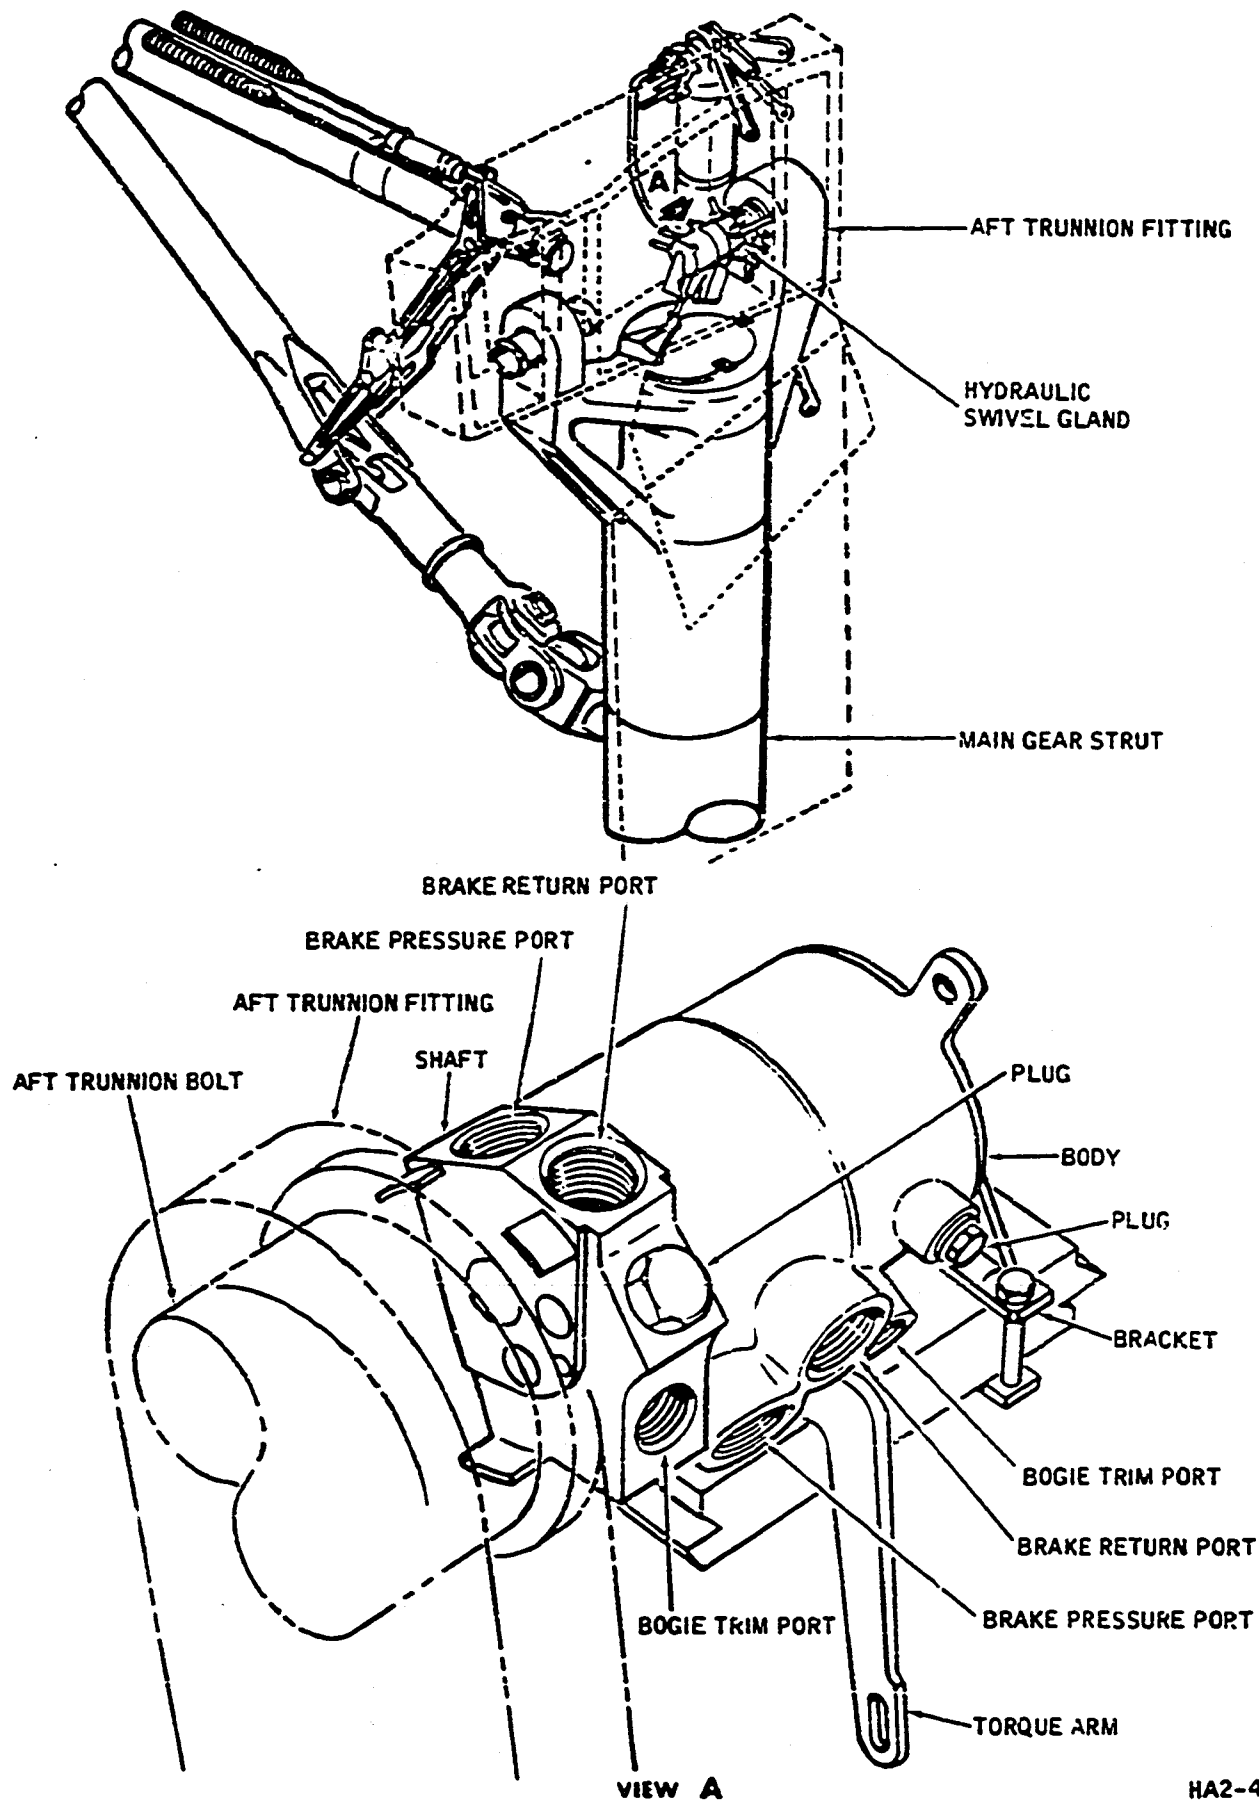

HA2-4287A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

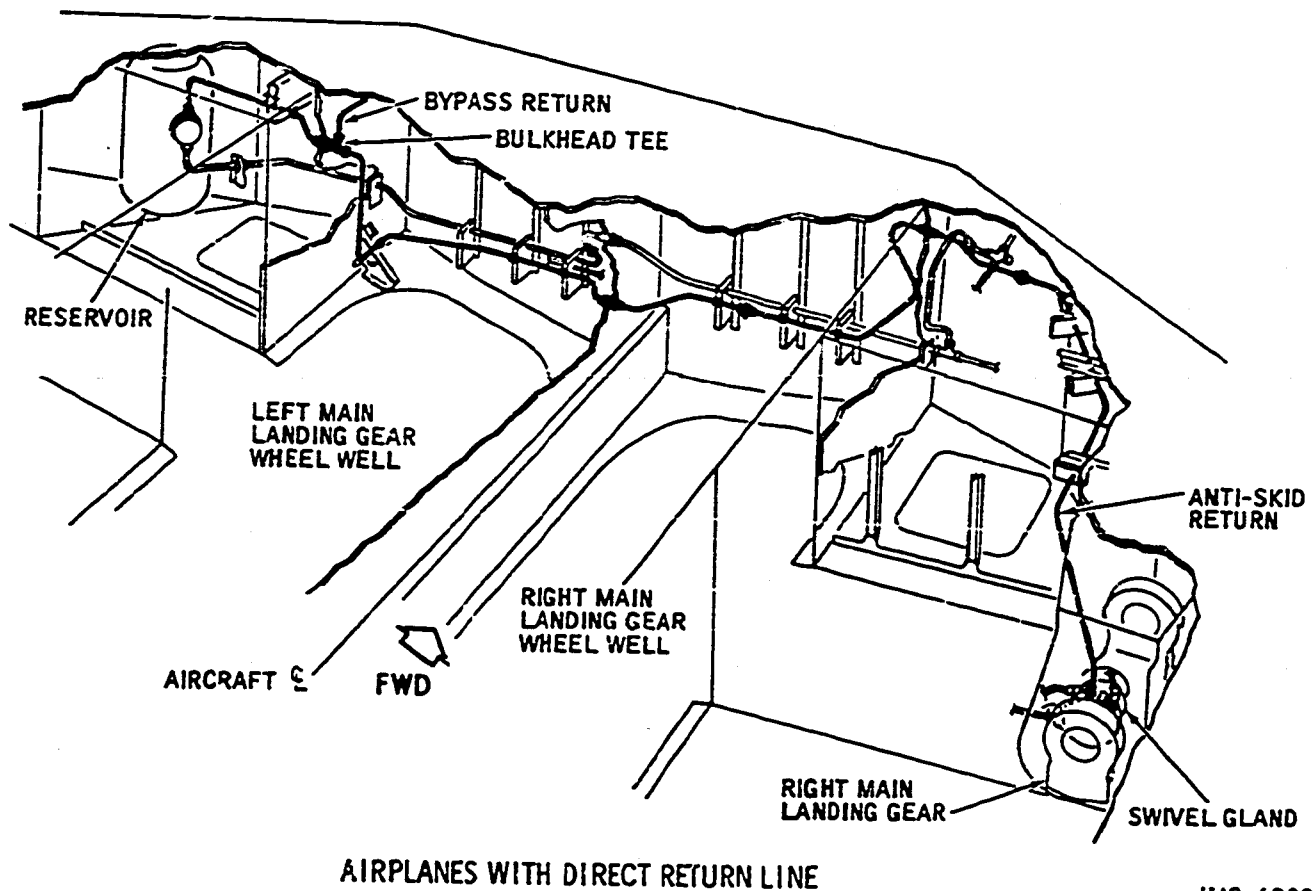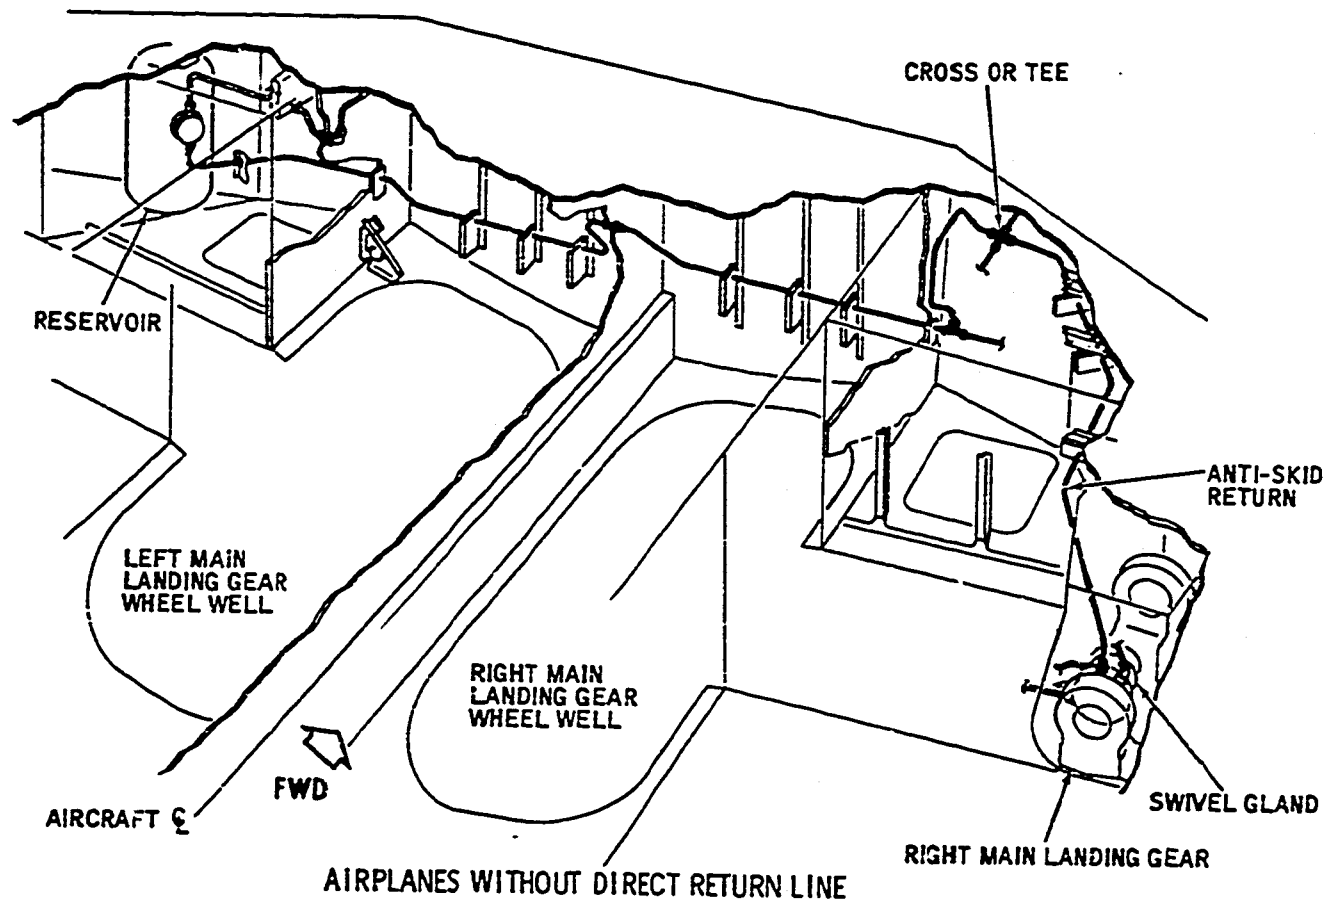

HA2-6802

Flushing Procedure Line Connection Locations  
 Figure 607 (Sheet 3)

Nov 1/69

29-04  
 CODE 3  
 Page 616A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (11) Repeat Steps (5 through 10) to flush remaining servo valve outlet lines.
- (12) Inspect, clean and/or replace brake control valve, main landing gear swivel gland, dual servo valves, fluid quantity limiters (or lockout cylinders).
- (13) Disconnect test stand pressure hose from right gear brake pressure line at control valve, and connect to left gear brake pressure line at left brake control valve.
- (14) Repeat Steps (2 through 12) to flush left brake system pressure lines.
- (15) Restore all lines and units to original configuration.
- (16) To flush brake accumulators and check valve system, disconnect pressure line which runs from right power manifold to tee on accumulator. Connect test stand return hose to line that was disconnected at accumulator tee.
- (17) Remove brake inlet check valve seat, spring, and poppet from right power manifold. Install seat only with seals.
- (18) Remove pressure line from tee at bottom of priority valve, located below left power manifold, and connect this line to test stand pressure hose.
- (19) Pressurize test stand to 200 psi at 5 to 20 gpm flow.
- (20) Flush circuit for five minutes.
- (21) Depressurize test stand.
- (22) Remove inlet check valve seat. Examine check valve assembly for evidence of improper seating and magnetization. Install new check valve assembly if required.
- (23) Remove accumulators and connecting line. Clean and flush on bench.
- (24) Restore all lines and units to original configuration. Bleed and adjust brake system per Chapter 32.

**H. Wheel Brake System Return Lines**

- (1) Disconnect right anti-skid servo valve return line at tee fitting on upper servo valve on right main gear strut. Connect test stand pressure hose to this line.
- (2) Disconnect two return lines from swivel gland at top of main gear strut. Connect these lines with jumper line.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) On airplanes not equipped with right brake anti-skid direct return line, disconnect anti-skid return line from tee fitting in aileron A return line, located in right wing root area (see Figure 607). Cap A-return tee fitting. Disconnect bogie relief valve at tee and cap line.
- (4) On airplanes equipped with right brake anti-skid direct return line, disconnect right brake anti-skid return line from bulkhead tee in bypass return line on outboard bulkhead of left wheel well.
- (5) Connect test stand return hose to anti-skid line at tee disconnected in Step (3) or (4) as applicable.
- (6) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (7) Flush circuit for five minutes.
- (8) Depressurize test stand.
- (9) Restore all lines and units to original configuration.
- (10) Disconnect left anti-skid servo valve return line at tee fitting on upper servo valve on left main gear strut. Connect test stand pressure hose to this line.
- (11) Disconnect two return lines from swivel gland at top of main gear strut. Connect these lines with jumper line.
- (12) Disconnect left bogie relief valve from anti-skid return line at tee fitting. Cap line and tee.
- (13) Disconnect left anti-skid return line from tee fitting in B-return port of main reservoir. Cap tee fitting.
- (14) Connect test stand return hose to this line.
- (15) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (16) Flush circuit for five minutes.
- (17) Depressurize test stand.
- (18) Restore all lines and units to original configuration.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

FLIGHT POWER CONTROL SYSTEMS - INSPECTION/CHECK

1. General

- A. The purpose of this section is to provide a logical guide for removing the contaminants (foreign particles) from the fluid, units, and lines of the flight power control systems by flushing the systems with clean hydraulic fluid.
- B. This procedure may be deviated from as dictated by the individual circumstances. Hydraulic circuits that are easy to locate and follow, have been intentionally omitted from this procedure for the sake of brevity.
- C. The removal of overheated or diluted fluid, would follow generally the same procedure with the exception that the removed contaminated fluid would be caught in containers rather than recirculated through the hydraulic test stand.
- D. Before any flushing procedures are performed, personnel should read and thoroughly understand Section 29-00, Inspection/Check.

2. Tools and Equipment Required

- A. One hydraulic test stand capable of operating with Skydrol hydraulic fluid, and fitted with 10-micron or smaller filter.
- B. Pressure and return hoses, jumper lines, and fittings as required by the following procedures.

3. Flush Flight Power Control Systems

A. Aileron Power System

- (1) On left side of airplane, remove, inspect, clean and/or replace aileron power valve, power cylinder, lockout tab cylinder, and associated piping (including lines, glands, and restrictors) downstream of aileron filter and outboard of return manifold located at STA  $X_{rs} = -500$ .
- (2) Repeat Step (1) for right aileron power system.


B. Rudder Power System (See Figures 601 and 602.)


- (1) In tail of airplane aft of pressure bulkhead, disconnect three horizontal stabilizer trim lines from tees in three rudder lines. Cap tees.
- (2) On aft side of pressure bulkhead, disconnect B-return and low-pressure return lines. On downstream side of filter, disconnect empennage pressure line and connect it to test stand pressure hose.



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

- (3) Connect jumper across open B-return and low-pressure return lines.
- (4) Where rudder standby pressure line tees into normal pressure line, remove line and check valve. Cap tee.
- (5) In same tee, mentioned in Step (4), remove other check valve in normal pressure line and replace with jumper.
- (6) Disconnect line which runs from check valve in shutoff valve to tee in B-return line at tee. Cap tee.
- (7) At rudder shutoff valve, disconnect low-pressure return line from tee and connect to test stand return hose.
- (8) At same valve, Step (7), disconnect pressure-in line and pressure-out line. Place jumper across two lines.
- (9) Disconnect line from pressure reducer valve to tee in return line. Cap tee.
- (10) At tee in pressure reducer valve, disconnect both pressure lines and connect together with jumper.
- (11) Disconnect reduced pressure line from pressure reducer valve, and disconnect pressure line from restrictor check valve in rudder power cylinder swivel gland. Place jumper across these two open lines.

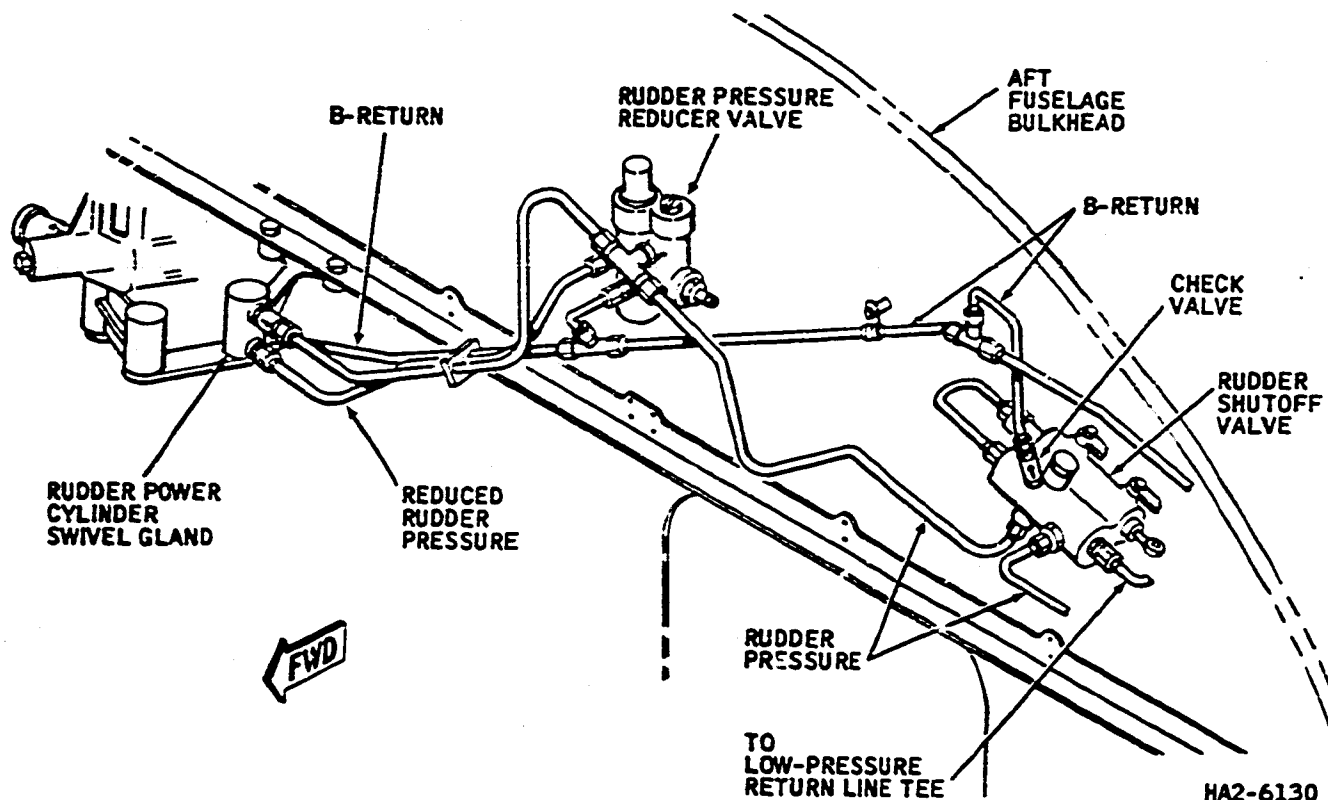

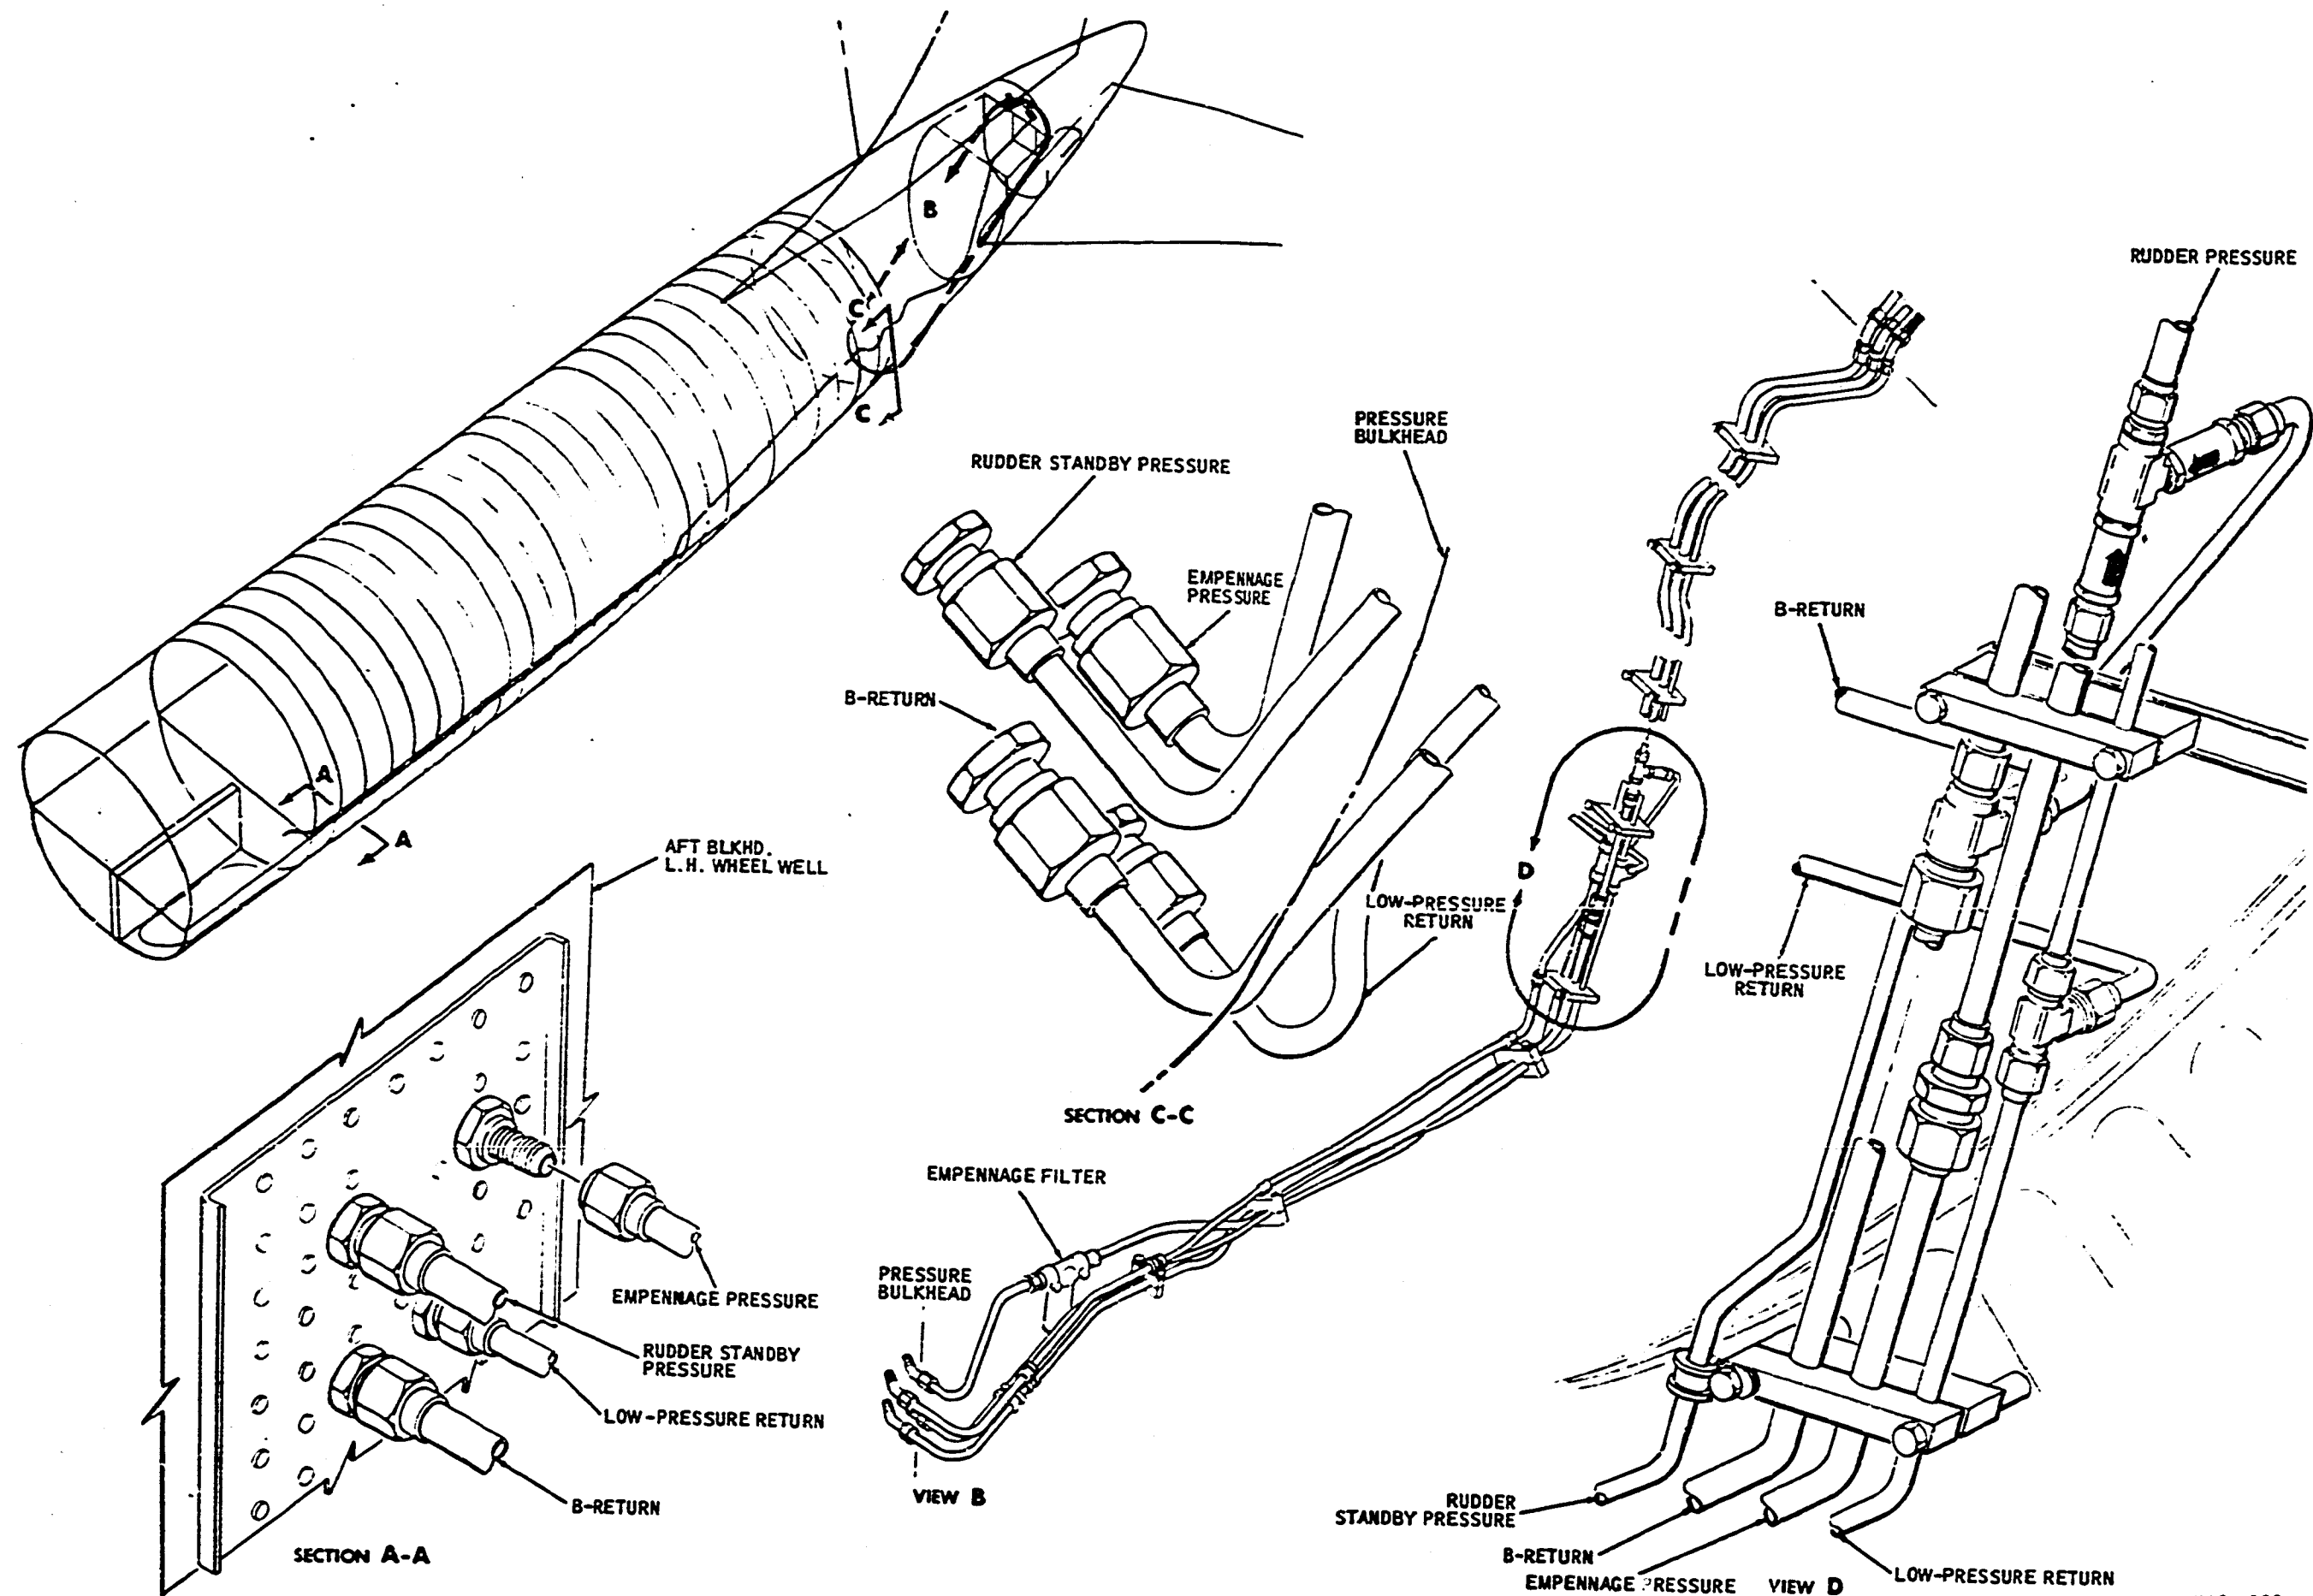

Flushing Procedure Line Connection Locations  
 Figure 602

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (12) Disconnect reduced pressure line from check valve in swivel gland, and disconnect return line from swivel gland. Place jumper across these two lines.
- (13) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (14) Flush circuit for five minutes.
- (15) Depressurize test stand.
- (16) Inspect, clean, and/or replace rudder shutoff valve, pressure reducer valve, rudder power control cylinder, swivel gland, and all removed check valves and restrictors.
- (17) Restore all lines and units to original configuration, and make any necessary adjustments per Chapter 27.

C. Horizontal Stabilizer Trim System

- (1) Disconnect three stabilizer trim lines from tees in rudder power system lines.
- (2) Place jumper across B-return and low-pressure return lines.
- (3) Connect open pressure line to test stand pressure hose.
- (4) Disconnect low-pressure return line from trim motor control valve cross fitting. Disconnect B-return line from control valve. Disconnect pressure line from shutoff valve.
- (5) Connect jumper between open pressure line, and open B-return line.
- (6) Connect open low-pressure return line to test stand return hose.
- (7) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (8) Flush circuit for three minutes.
- (9) Depressurize test stand.
- (10) Inspect, clean, and/or replace hydraulic trim motor-brake, valves, and associated piping.
- (11) Restore all lines and units to original configuration.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

SPOILER SYSTEM - INSPECTION/CHECK

1. General

- A. The purpose of this section is to provide a logical guide for removing the contaminants (foreign particles) from the fluid, units, and lines of the spoiler system by flushing the system with clean hydraulic fluid.
- B. This procedure may be deviated from as dictated by the individual circumstances. Hydraulic circuits that are easy to locate and follow, have been intentionally omitted from this procedure for the sake of brevity.
- C. The removal of overheated or diluted fluid, would follow generally the same procedure with the exception that the removed contaminated fluid would be caught in containers rather than recirculated through the hydraulic test stand.
- D. Before any flushing procedures are performed, personnel should read and thoroughly understand Section 29-00, Inspection/Check.

2. Tools and Equipment Required

- A. One hydraulic test stand capable of operating with Skydrol hydraulic fluid, and fitted with 10-micron or smaller filter.
- B. Pressure and return hoses, jumper lines, and fittings as required by the following procedures.

3. Flush Spoiler System

A. Spoiler Power System to Filter

- (1) After bleeding pressure and hydraulic fluid from spoiler system reservoir, disconnect bypass hose and pressure hose from bottom of pump. Connect two hoses together with union.
- (2) At reservoir, disconnect suction hose and case drain hose. Jumper these two hoses together.
- (3) Disconnect suction line from pump and connect to test stand pressure hose.
- (4) Disconnect both pressure lines at tee in accumulator. Place jumper across these lines.
- (5) At relief valve just forward of filter, disconnect pressure line from upper tee, and disconnect return line from forward side of bottom tee. Place jumper across open lines.


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Disconnect return line from tee in reservoir, and connect open line to test stand return hose.
- (7) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (8) Flush circuit for five minutes.
- (9) Depressurize test stand.
- (10) Inspect, clean, and/or replace accumulator, and two relief valves (one at reservoir and one at filter).
- (11) Clean out filter bowl and replace element.
- (12) Clean out reservoir and refill with clean fluid after connecting all lines and units. Restore system to original configuration.

**B. Spoiler Supply System Filter to Units**

- (1) Disconnect pressure line from check valve in spoiler system filter. Connect line to test stand pressure hose.
- (2) Disconnect interconnect pressure line from tee in spoiler system pressure line. Cap tee.
- (3) Following pressure line to next tee, disconnect line which runs forward. Cap tee.
- (4) At pressure bulkhead tee fitting in center web (tee which supplies out-board spoiler pressure to both sides of airplane), disconnect line which runs to right. Cap tee.
- (5) At STA  $X_{RS}$  = approx. 217 on both sides of airplane, disconnect spoiler pressure and return lines from spoiler glands. Place jumpers between these lines on both sides of airplane.
- (6) At tee in return bulkhead tee, located just under pressure bulkhead tee mentioned in Step (4), disconnect both lines which run forward. Cap tee and place jumper across two lines.
- (7) Disconnect return line from check valve in tee at bottom of system pressure relief valve. Connect this line to line disconnected in Step (4) with jumper.
- (8) At spoiler valve, located on right power manifold, disconnect spoiler return line. From same manifold, disconnect spoiler pressure line. Connect these two lines together with jumper.
- (9) Connect jumper line to line which was disconnected in Step (3). In same line at next tee forward, disconnect line which leads down to pressure transmitter and reservoir. Cap tee and connect open line to other end of jumper.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

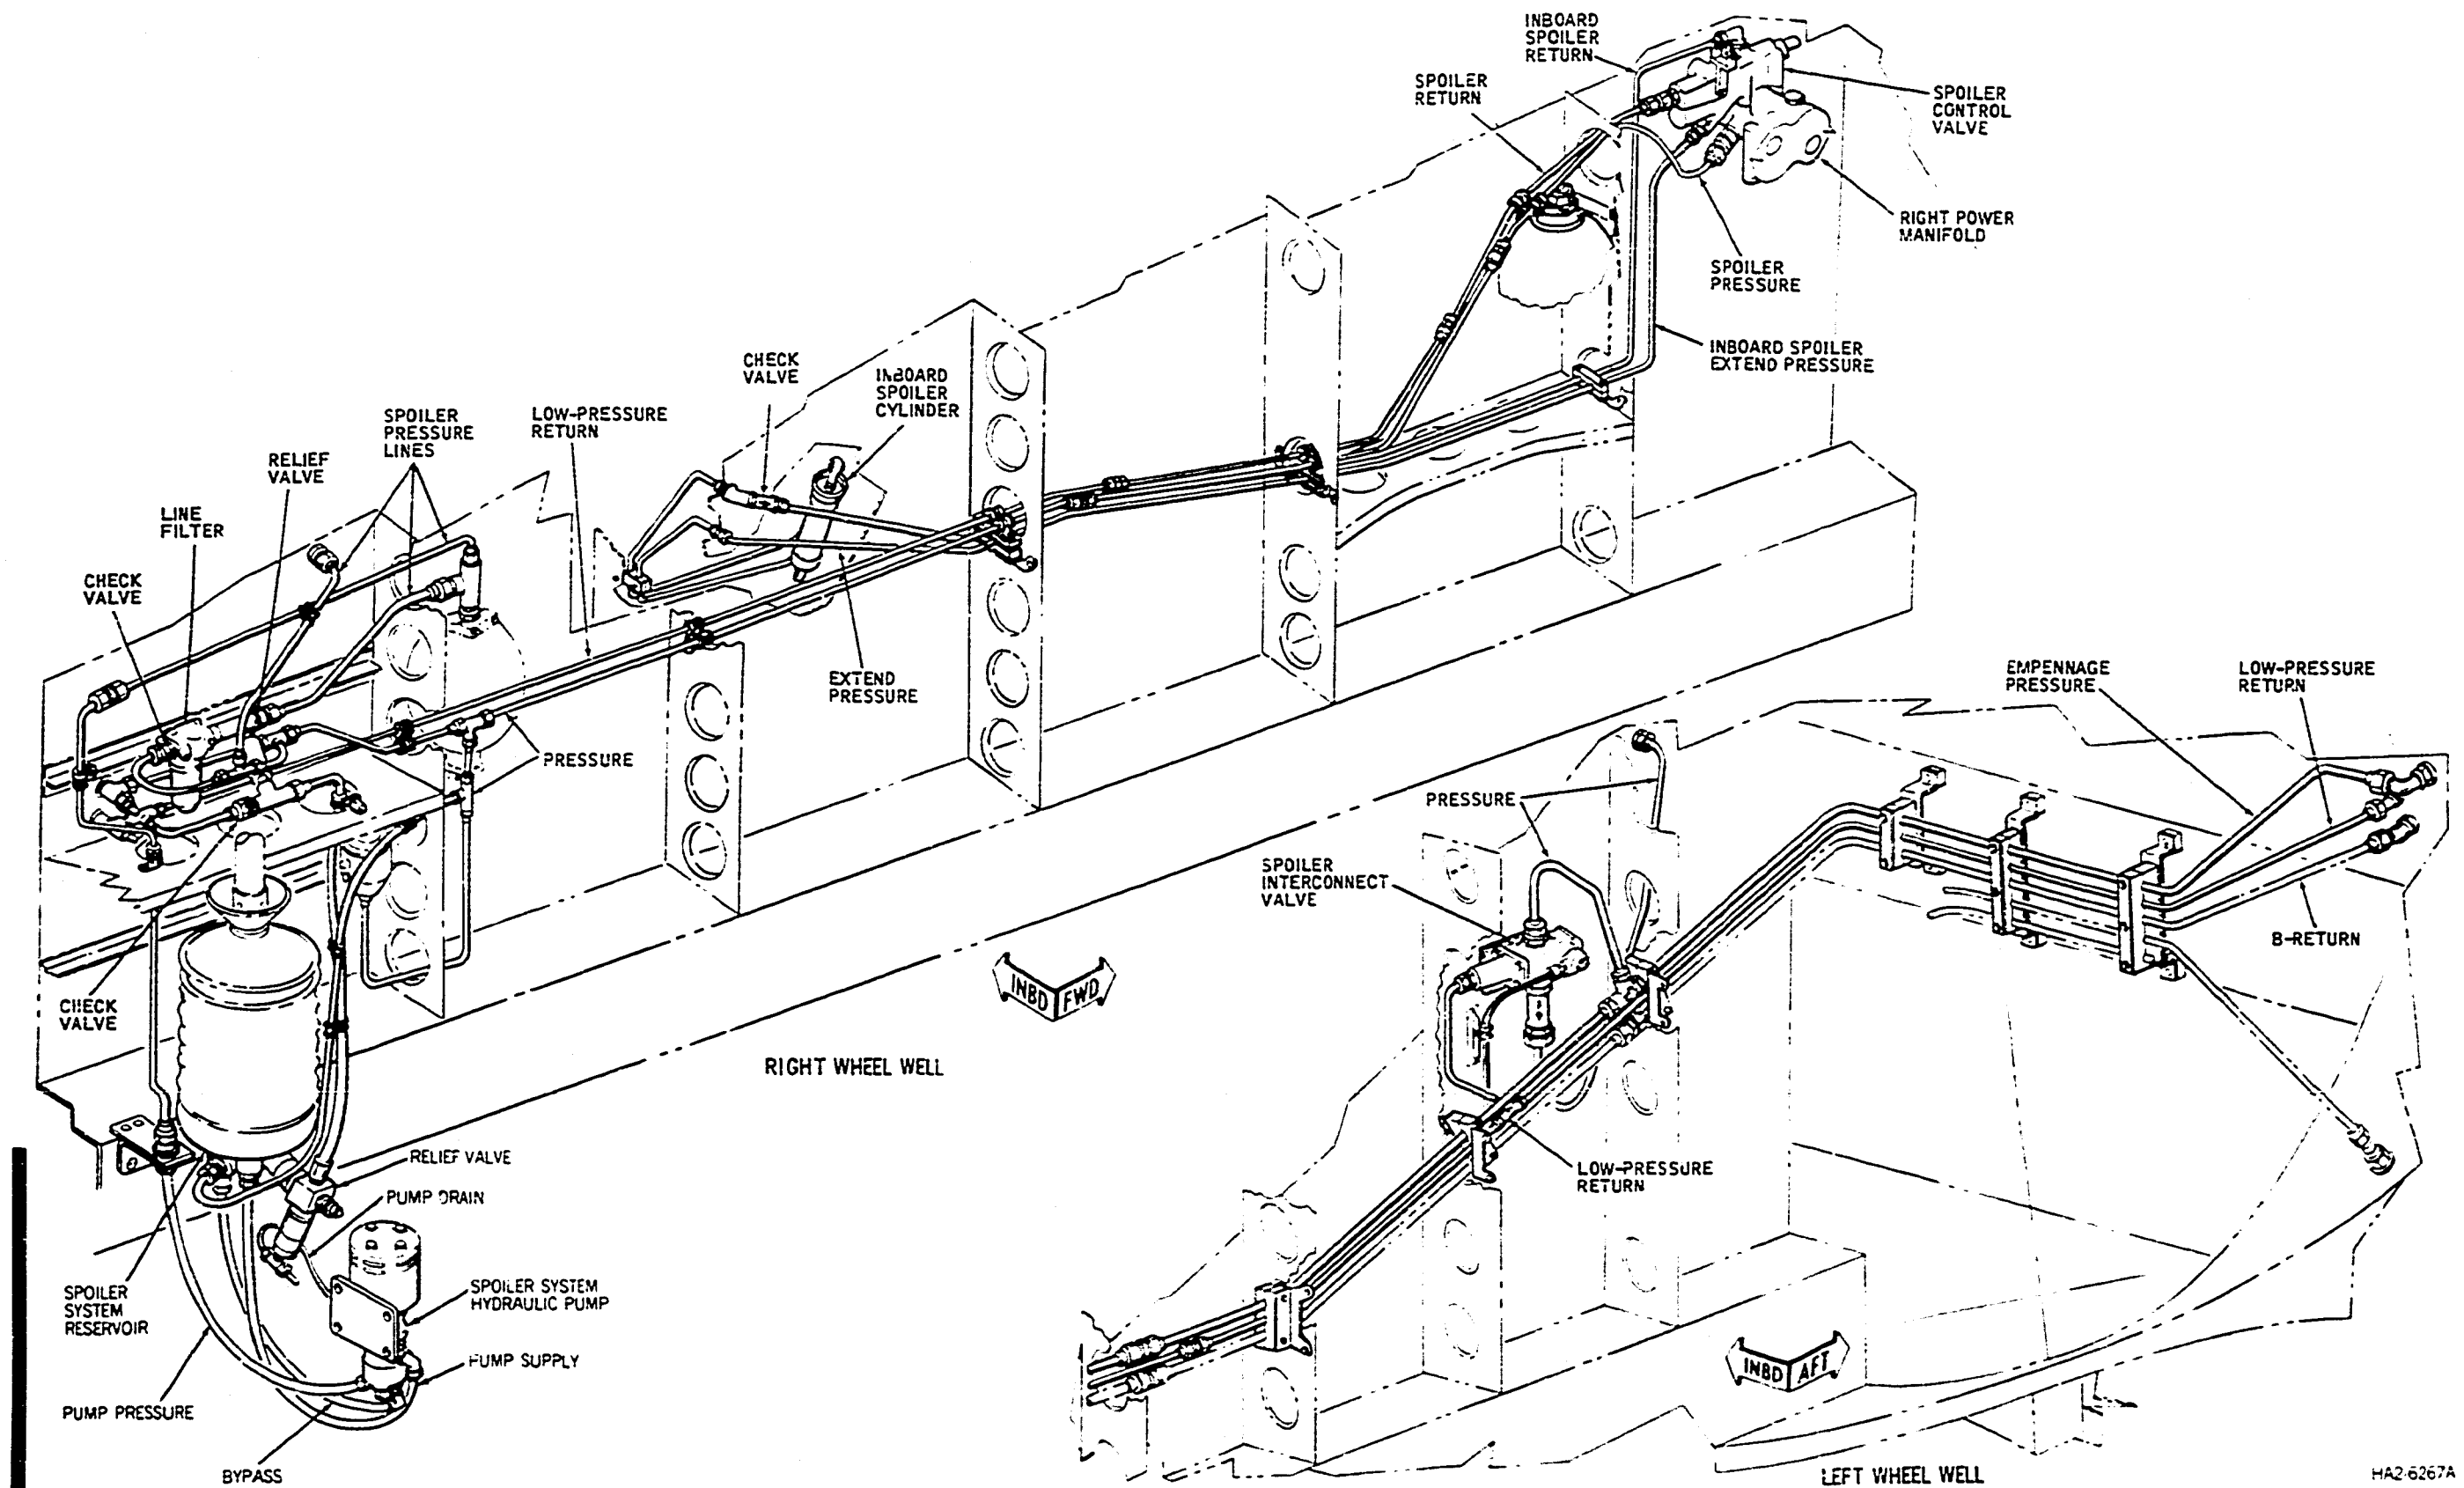

Flushing Procedure Line Connection Locations  
 Figure 601

Dec 1/73

29-05  
 CODE 1  
 Page 603

Printed in U.S.A.

HA2-6267A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (10) Disconnect reservoir pressurization line from tee in pressure line. Disconnect pressure line from pressure transmitter. Connect two open lines with jumper, and cap tee.
- (11) Disconnect reservoir pressurization line from bottom of reservoir, and connect line to test stand return hose.
- (12) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (13) Flush circuit for five minutes.
- (14) Depressurize test stand.
- (15) Inspect, clean, and/or replace check valves in the filter, and in bottom of relief valve.
- (16) Restore all lines and units to original configuration.

C. Outboard Spoiler System

- (1) At STA  $X_{RS}$  = approx. 217, inspect, clean, and/or replace outboard spoiler cylinder and valve assembly, and connecting swivel glands.
- (2) Restore all lines and units to their original configuration, and make any necessary adjustments per Chapter 27.

D. Inboard Spoiler System

- (1) Disconnect extend and retract lines from spoiler control valve, located on right power manifold in right wheel well. Connect extend line to test stand pressure hose. Connect retract line to test stand return hose.
- (2) On right side of the center web, replace restrictor in spoiler retract line with jumper.
- (3) In rear of left wheel well, disconnect extend and retract lines from inboard spoiler cylinder. Place jumper across open lines.
- (4) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (5) Flush circuit for five minutes.
- (6) Depressurize test stand.
- (7) Inspect, clean, and/or replace spoiler control valve, two restrictors, and actuating cylinder.
- (8) Restore all lines and units to original configuration, and make necessary adjustments per Chapter 27.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

E. The Interconnect System

- (1) In right wheel well, disconnect interconnect line from tee in spoiler system pressure line, located near spoiler system filter. Connect this line to test stand return hose.
- (2) In left wheel well, disconnect three lines leading into solenoid interconnect valve, mounted on center web. Leave check valve with solenoid valve.
- (3) Connect jumper between line disconnected from check valve and line disconnected from pressure port.
- (4) Disconnect solenoid valve low-pressure return line from tee in empennage low-pressure return line. Connect this line to test stand pressure hose.
- (5) Disconnect solenoid valve pressure line from tee in empennage pressure line. Connect this line to disconnected case drain line in solenoid interconnect valve with jumper.
- (6) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (7) Flush circuit for five minutes.
- (8) Depressurize test stand.
- (9) Inspect, clean, and/or replace solenoid interconnect valve, and check valve.
- (10) Restore all lines and units to original configuration.



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

SPOILER SYSTEM - INSPECTION/CHECK

1. General

- A. The purpose of this section is to provide a logical guide for removing the contaminants (foreign particles) from the fluid, units, and lines of the spoiler system by flushing the system with clean hydraulic fluid.
- B. This procedure may be deviated from as dictated by the individual circumstances. Hydraulic circuits that are easy to locate and follow, have been intentionally omitted from this procedure for the sake of brevity.
- C. The removal of overheated or diluted fluid, would follow generally the same procedure with the exception that the removed contaminated fluid would be caught in containers rather than recirculated through the hydraulic test stand.
- D. Before any flushing procedures are performed, personnel should read and thoroughly understand Section 29-00, Inspection/Check.

2. Tools and Equipment Required

- A. One hydraulic test stand capable of operating with Skydrol hydraulic fluid, and fitted with 10-micron or smaller filter.
- B. Pressure and return hoses, jumper lines, and fittings as required by the following procedures.

3. Flush Spoiler System

A. Spoiler Power System to Filter

- (1) After bleeding pressure and hydraulic fluid from spoiler system reservoir, disconnect bypass hose and pressure hose from bottom of pump. Connect two hoses together with union.
- (2) At reservoir, disconnect suction hose and case drain hose. Jumper these two hoses together.
- (3) Disconnect suction line from pump and connect to test stand pressure hose.
- (4) Disconnect both pressure lines at tee in accumulator. Place jumper across these lines.
- (5) At relief valve just forward of filter, disconnect pressure line from upper tee, and disconnect return line from forward side of bottom tee. Place jumper across open lines.


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Disconnect return line from tee in reservoir, and connect open line to test stand return hose.
- (7) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (8) Flush circuit for five minutes.
- (9) Depressurize test stand.
- (10) Inspect, clean, and/or replace accumulator, and two relief valves (one at reservoir and one at filter).
- (11) Clean out filter bowl and replace element.
- (12) Clean out reservoir and refill with clean fluid after connecting all lines and units. Restore system to original configuration.

**B. Spoiler Supply System Filter to Units**

- (1) Disconnect pressure line from check valve in spoiler system filter. Connect line to test stand pressure hose.
- (2) Disconnect interconnect pressure line from tee in spoiler system pressure line. Cap tee.
- (3) Following pressure line to next tee, disconnect line which runs forward. Cap tee.
- (4) At pressure bulkhead tee fitting in center web (tee which supplies outboard spoiler pressure to both sides of airplane), disconnect line which runs to right. Cap tee.
- (5) At STA  $X_{rs}$  = approx. 217 on both sides of airplane, disconnect spoiler pressure and return lines from spoiler glands. Place jumpers between these lines on both sides of airplane.
- (6) At tee in return bulkhead tee, located just under pressure bulkhead tee mentioned in Step (4), disconnect both lines which run forward. Cap tee and place jumper across two lines.
- (7) Disconnect return line from check valve in tee at bottom of system pressure relief valve. Connect this line to line disconnected in Step (4) with jumper.
- (8) At spoiler valve, located on right power manifold, disconnect spoiler return line. From same manifold, disconnect spoiler pressure line. Connect these two lines together with jumper.
- (9) Connect jumper line to line which was disconnected in Step (3). In same line at next tee forward, disconnect line which leads down to pressure transmitter and reservoir. Cap tee and connect open line to other end of jumper.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

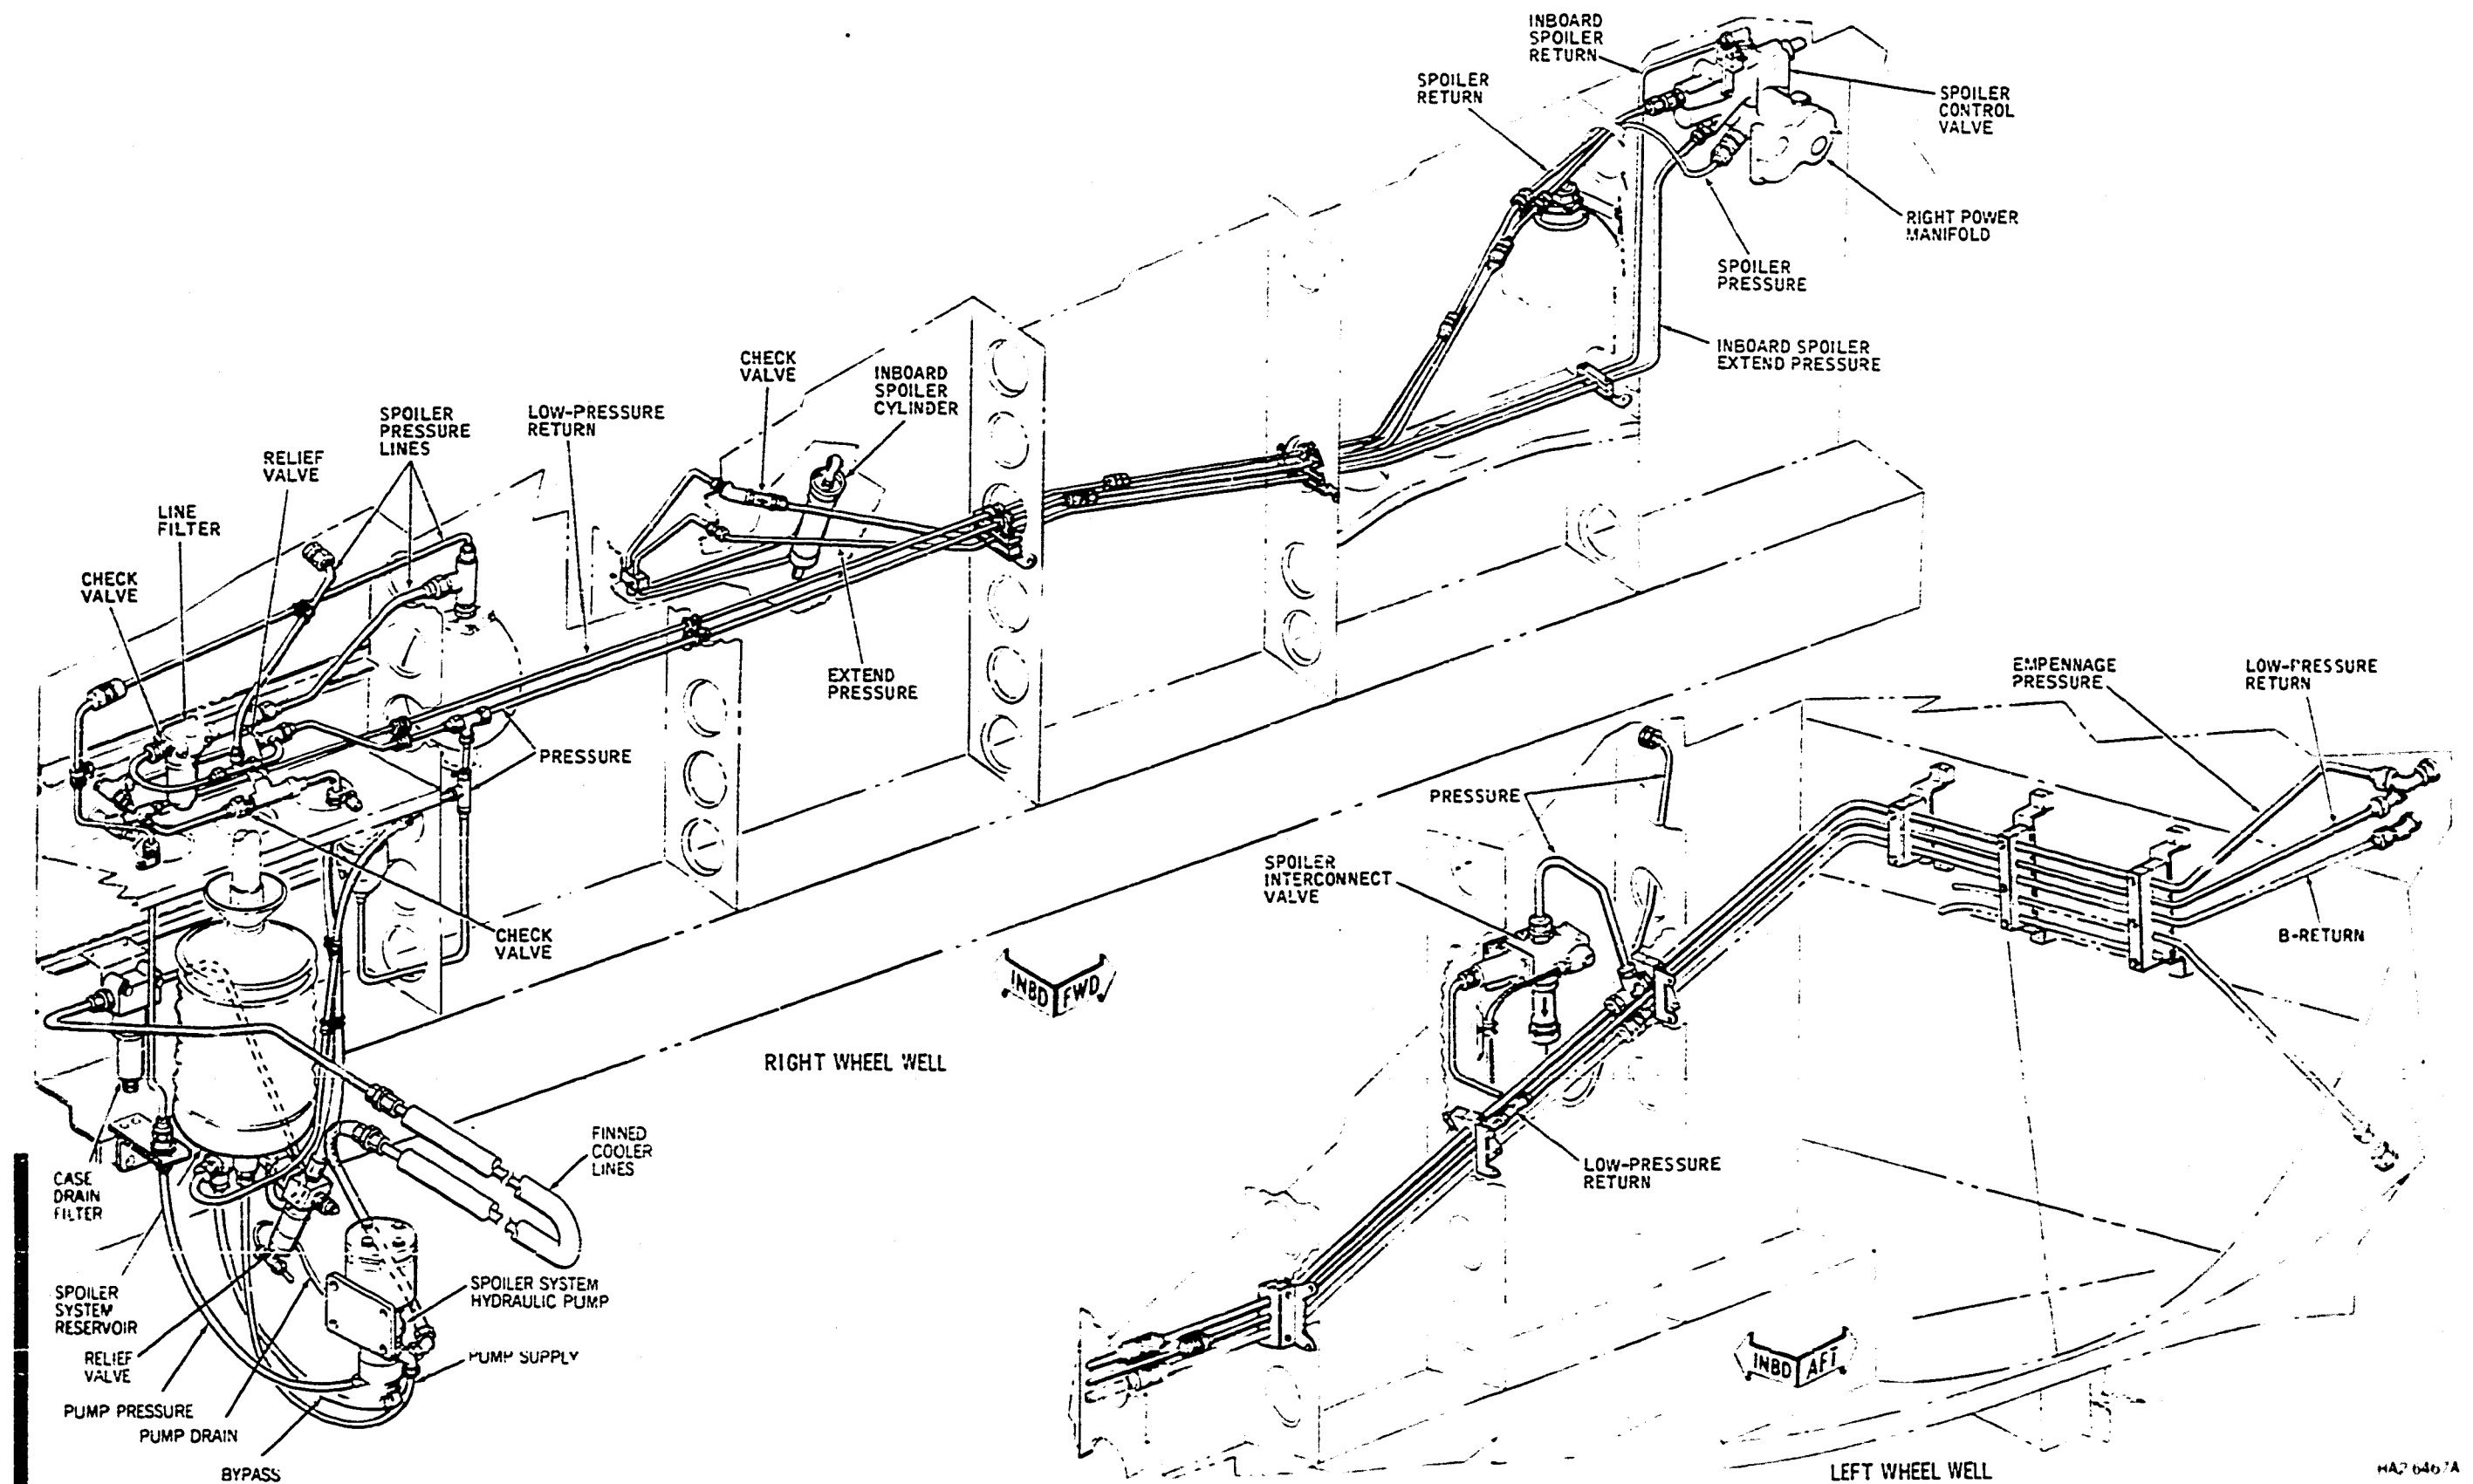

Flushing Procedure Line Connection Locations  
 Figure 601

Dec 1/73

Printed in U.S.A.

29-06  
 CDDT 2  
 Page 603

HA2 6467A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (10) Disconnect reservoir pressurization line from tee in pressure line. Disconnect pressure line from pressure transmitter. Connect two open lines with jumper, and cap tee.
- (11) Disconnect reservoir pressurization line from bottom of reservoir, and connect line to test stand return hose.
- (12) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (13) Flush circuit for five minutes.
- (14) Depressurize test stand.
- (15) Inspect, clean, and/or replace check valves in the filter, and in bottom of relief valve.
- (16) Restore all lines and units to original configuration.

C. Outboard Spoiler System

- (1) At STA  $X_{rs}$  = approx. 217', inspect, clean, and/or replace outboard spoiler cylinder and valve assembly, and connecting swivel glands.
- (2) Restore all lines and units to their original configuration, and make any necessary adjustments per Chapter 27.

D. Inboard Spoiler System

- (1) Disconnect extend and retract lines from spoiler control valve, located on right power manifold in right wheel well. Connect extend line to test stand pressure hose. Connect retract line to test stand return hose.
- (2) On right side of the center web, replace restrictor in spoiler retract line with jumper.
- (3) In rear of left wheel well, disconnect extend and retract lines from inboard spoiler cylinder. Place jumper across open lines.
- (4) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (5) Flush circuit for five minutes.
- (6) Depressurize test stand.
- (7) Inspect, clean, and/or replace spoiler control valve, two restrictors, and actuating cylinder.
- (8) Restore all lines and units to original configuration, and make necessary adjustments per Chapter 27.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

E. The Interconnect System

- (1) In right wheel well, disconnect interconnect line from tee in spoiler system pressure line, located near spoiler system filter. Connect this line to test stand return hose.
- (2) In left wheel well, disconnect three lines leading into solenoid interconnect valve, mounted on center web. Leave check valve with solenoid valve.
- (3) Connect jumper between line disconnected from check valve and line disconnected from pressure port.
- (4) Disconnect solenoid valve low-pressure return line from tee in empennage low-pressure return line. Connect this line to test stand pressure hose.
- (5) Disconnect solenoid valve pressure line from tee in empennage pressure line. Connect this line to disconnected case drain line in solenoid interconnect valve with jumper.
- (6) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (7) Flush circuit for five minutes.
- (8) Depressurize test stand.
- (9) Inspect, clean, and/or replace solenoid interconnect valve, and check valve.
- (10) Restore all lines and units to original configuration.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

RUDDER STANDBY HYDRAULIC POWER SYSTEM - INSPECTION/CHECK

1. General

- A. The purpose of this section is to provide a logical guide for removing the contaminants (foreign particles) from the fluid, units, and lines of the rudder standby hydraulic power system by flushing the system with clean hydraulic fluid.
- B. This procedure may be deviated from as dictated by the individual circumstances. Hydraulic circuits that are easy to locate and follow, have been intentionally omitted from this procedure for the sake of brevity.
- C. The removal of overheated or diluted fluid, would follow generally the same procedure with the exception that the removed contaminated fluid would be caught in containers rather than recirculated through the hydraulic test stand.
- D. Before and flushing procedures are performed, personnel should read and thoroughly understand Section 29-00, Inspection/Check.

2. Tools and Equipment Required


- A. One hydraulic test stand capable of operating with Skydrol hydraulic fluid, and fitted with 10-micron or smaller filter.
- B. Pressure and return hoses, jumper lines, and fittings as required by the following procedures.

3. Flush Rudder Standby Hydraulic Power System

A. Rudder Standby Power System To Filter

- (1) In left wheel well, disconnect two B-return lines and bypass line from two tees in top of rudder standby system reservoir. Cap both openings in tee that had received bypass line.
- (2) Connect opening in other tee to test stand pressure hose.
- (3) Disconnect three hoses from rudder standby system pump. Connect suction hose to pressure hose.
- (4) Disconnect 1/4-inch pressure line from tee in top of rudder standby system accumulator, and disconnect line in bottom of relief valve. Install jumper between these two lines.
- (5) Disconnect relief valve return line and bypass line from tee fitting (with check valve). Use bypass hose as jumper between these two lines.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

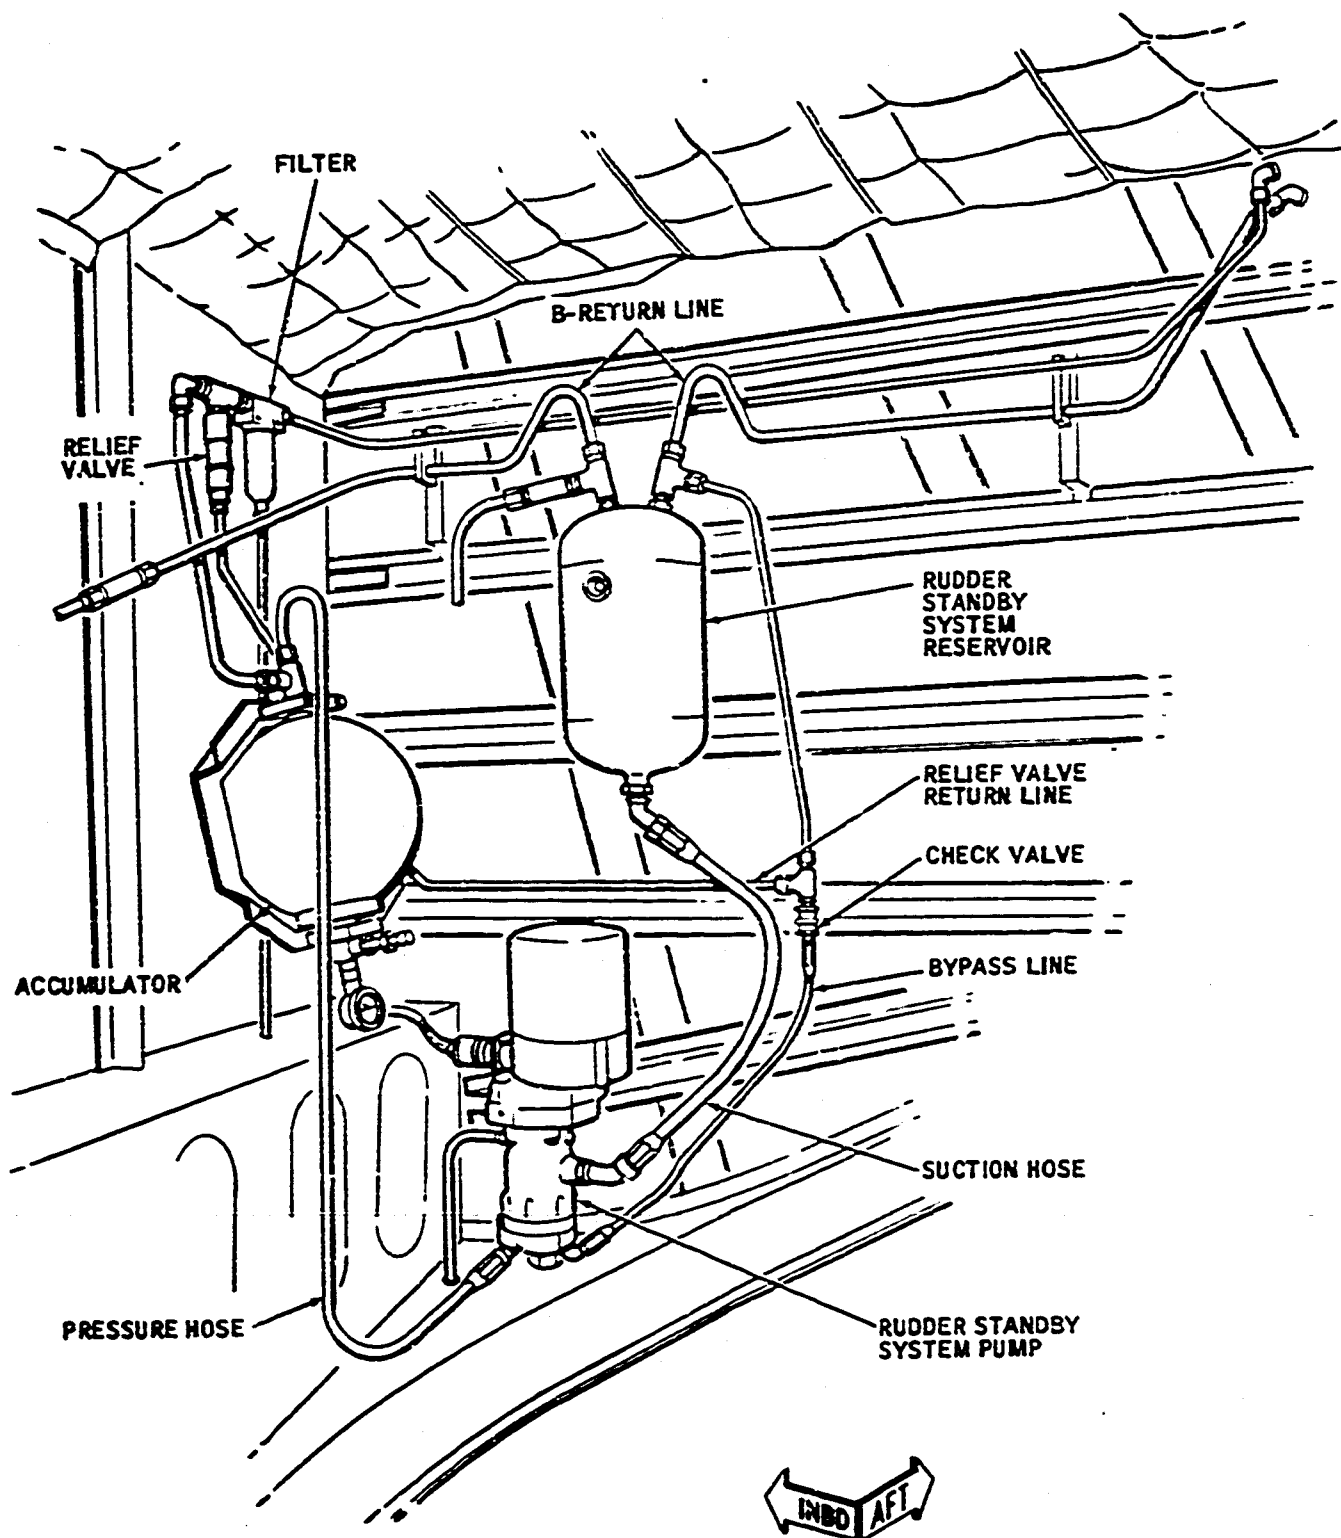

INBOARD CORNER OF LEFT WHEEL WELL

HA2-6165

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Connect bypass line, which was disconnected in Step (1), to test stand return hose.
  - (7) Pressurize test stand to 200 psi maximum at 20 gpm flow.
  - (8) Flush circuit for five minutes.
  - (9) Depressurize test stand.
  - (10) Inspect, clean, and/or replace the pump, accumulator, filter, relief valve, and check valve.
  - (11) Restore all lines and units to original configuration.
- B. Rudder Standby Power Interconnect Line (Filter To Empennage Normal Power Line)
- (1) In left wheel well, disconnect rudder standby system pressure line from downstream side of filter. Connect this line to test stand pressure hose.
  - (2) In aft end of the airplane, disconnect rudder standby pressure line from check valve in tee located in normal rudder pressure line.
  - (3) This line may be attached directly to test stand return with long hose, or section of empennage return line may be connected into circuit for use with shorter test stand return hose.
  - (4) Pressurize test stand to 200 psi maximum at 20 gpm flow.
  - (5) Flush circuit for five minutes.
  - (6) Depressurize test stand.
  - (7) Inspect, clean, and/or replace check valve mentioned in Step (2).
  - (8) Restore all lines and units to original configuration.



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

THRUST REVERSER SYSTEM - INSPECTION/CHECK

1. General

- A. The purpose of this section is to provide a logical guide for removing the contaminants (foreign particles) from the fluid, units, and lines of the thrust reverser system by flushing the system with clean hydraulic fluid.
- B. This procedure may be deviated from as dictated by the individual circumstances. Hydraulic circuits that are easy to locate and follow, have been intentionally omitted from this procedure for the sake of brevity.
- C. The removal overheated or diluted fluid, would follow generally the same procedure with the exception that the removed contaminated fluid would be caught in containers rather than recirculated through the hydraulic test stand.
- D. Before any flushing procedures are performed, personnel should read and thoroughly understand Section 29-00, Inspection/Check.


2. Tools and Equipment Required

- A. One hydraulic test stand capable of operating with Skydrol hydraulic fluid, and fitted with a 10-micron or smaller filter.
- B. Pressure and return hoses, jumper lines, and fittings as required by the following procedure.

3. Flush Thrust Reverser System

- A. Thrust Reverser Pressure and Return Lines to Actuator Cylinders
  - (1) Disconnect thrust reverser pressure line from cross fitting or tee (as applicable) below priority valve in left main gear wheel well. Cap fitting and connect test stand pressure hose to reverser pressure line.
  - (2) Disconnect inlet and outlet lines from thrust reverser solenoid valve and check valve located below priority valve. Jumper lines and make certain that manual shutoff valve is open.
  - (3) At cross fitting just aft of manual shutoff valve, disconnect auxiliary pump pressure line and accumulator pressure line. Cap cross fitting ports.
  - (4) Drain main hydraulic reservoir to a point below return ports manifold. (See 29-00, Maintenance Practices).
  - (5) At main hydraulic reservoir, disconnect A return line from tee fitting above auxiliary pump relief valve.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

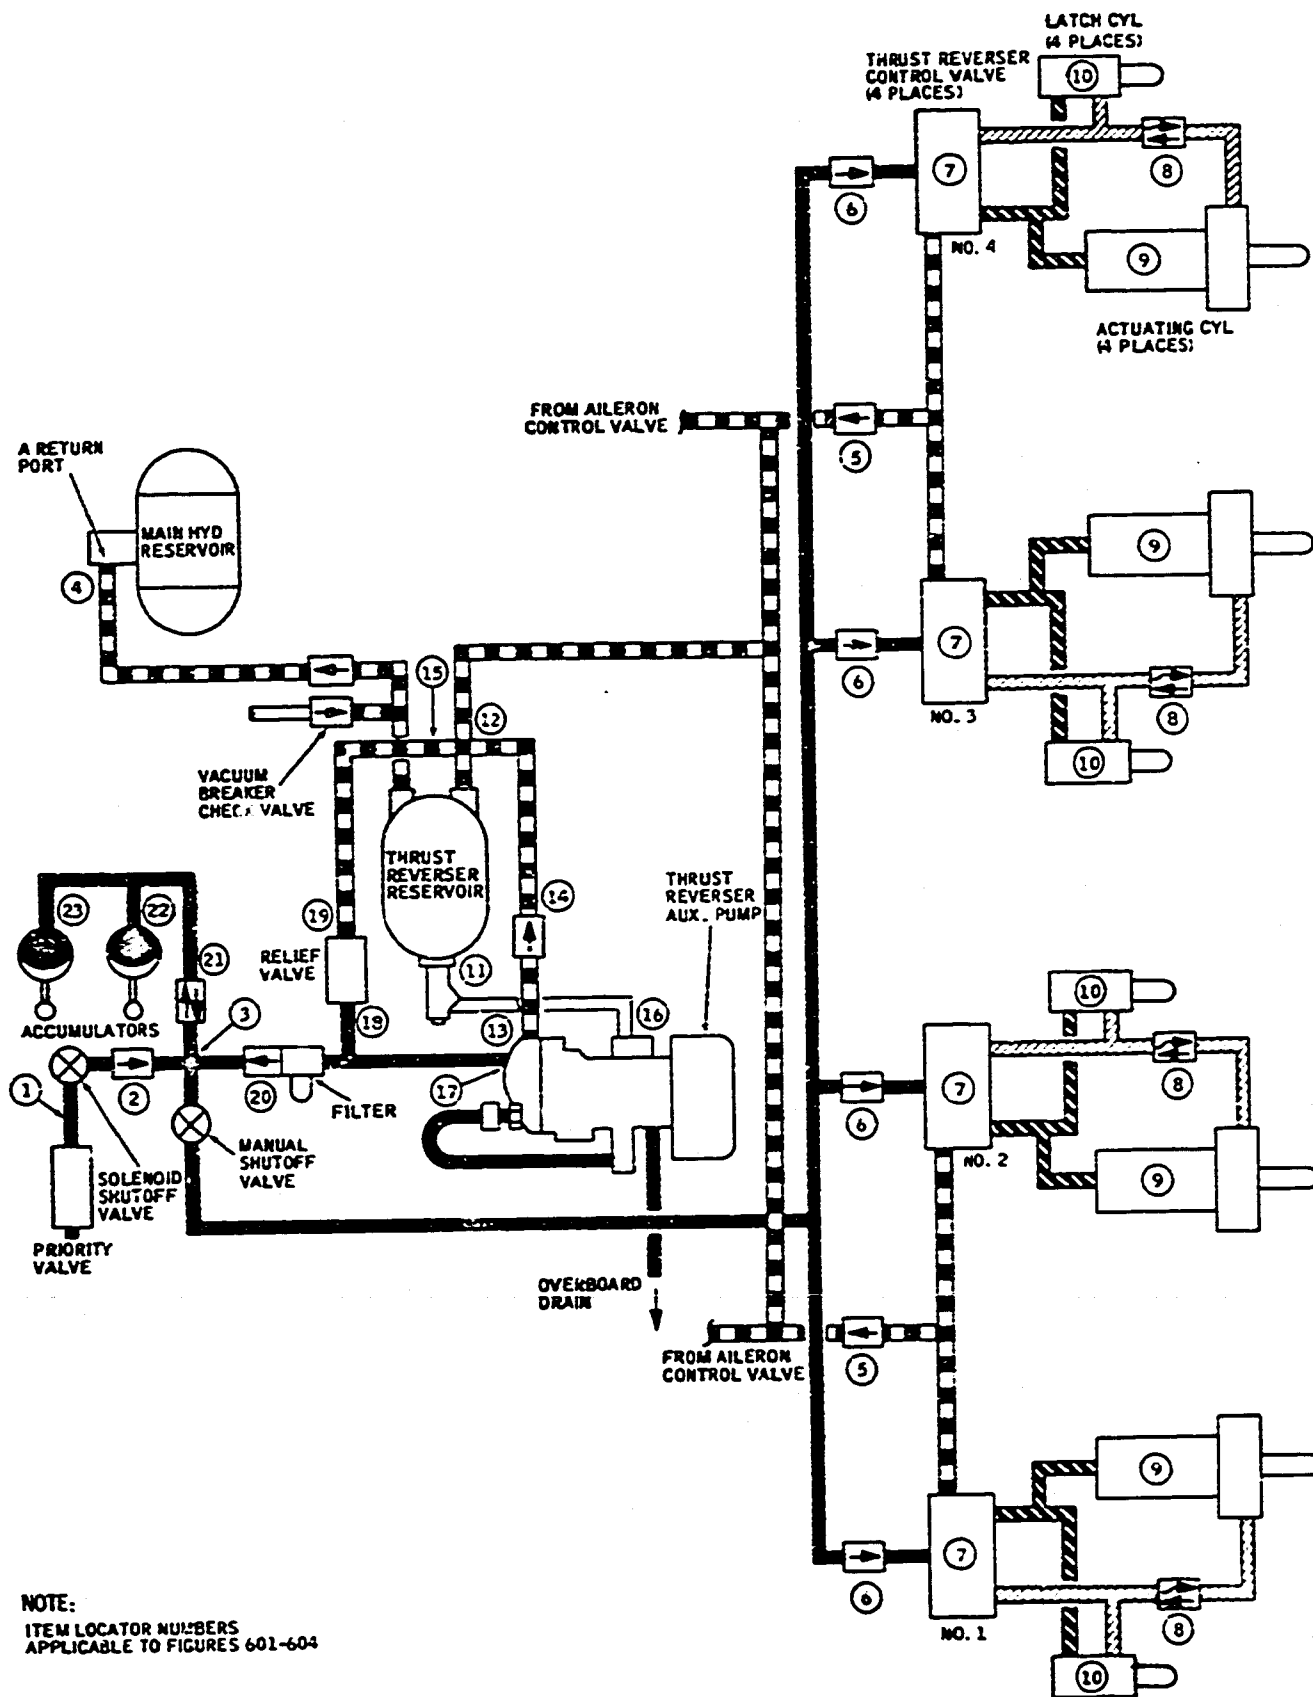

HA2-6471


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Connect test stand return hose to A return line.
- (7) Disconnect and jumper check valve in A return line adjacent to thrust reverser reservoir in left wing root area.

NOTE: The thrust reverser pressure and return lines follow the rear spar outboard from the fuselage to the number 2 and number 3 pylons, and then forward within the pylons, to the front spar where the lines are teed and follow the front spar to the number 1 and number 4 pylons.

- (8) Aft of rear spar at number 2 pylon, remove and jumper thrust reverser return line check valve.
- (9) In number 1 pylon, remove and jumper pressure line check valve located above thrust reverser latch cylinder.
- (10) Disconnect four lines from thrust reverser control valve.
- (11) Jumper thrust reverser pressure line to thrust reverser stow line and thrust reverser return line to thrust reverser extend line.
- (12) Remove and jumper restrictor in actuator cylinder stow line.
- (13) Disconnect and jumper extend and stow lines to thrust reverser actuator cylinder.
- (14) Disconnect and jumper extend and stow lines to thrust reverser latch cylinder.
- (15) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (16) Flush circuit for five minutes.
- (17) Depressurize test stand.
- (18) Inspect, clean, and/or replace thrust reverser control valve, actuating cylinder, latch cylinder, pylon pressure line check valve, and stow line restrictor.
- (19) Restore all lines and units in number one pylon to original configuration.
- (20) Repeat steps (9) through (19) for number 2 pylon.
- (21) Inspect, clean, and/or replace return line check valve aft of number 2 pylon.
- (22) Aft of rear spar at number 3 pylon, remove and jumper thrust reverser return line check valve.
- (23) Repeat steps (9) through (19) for number 4 pylon.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

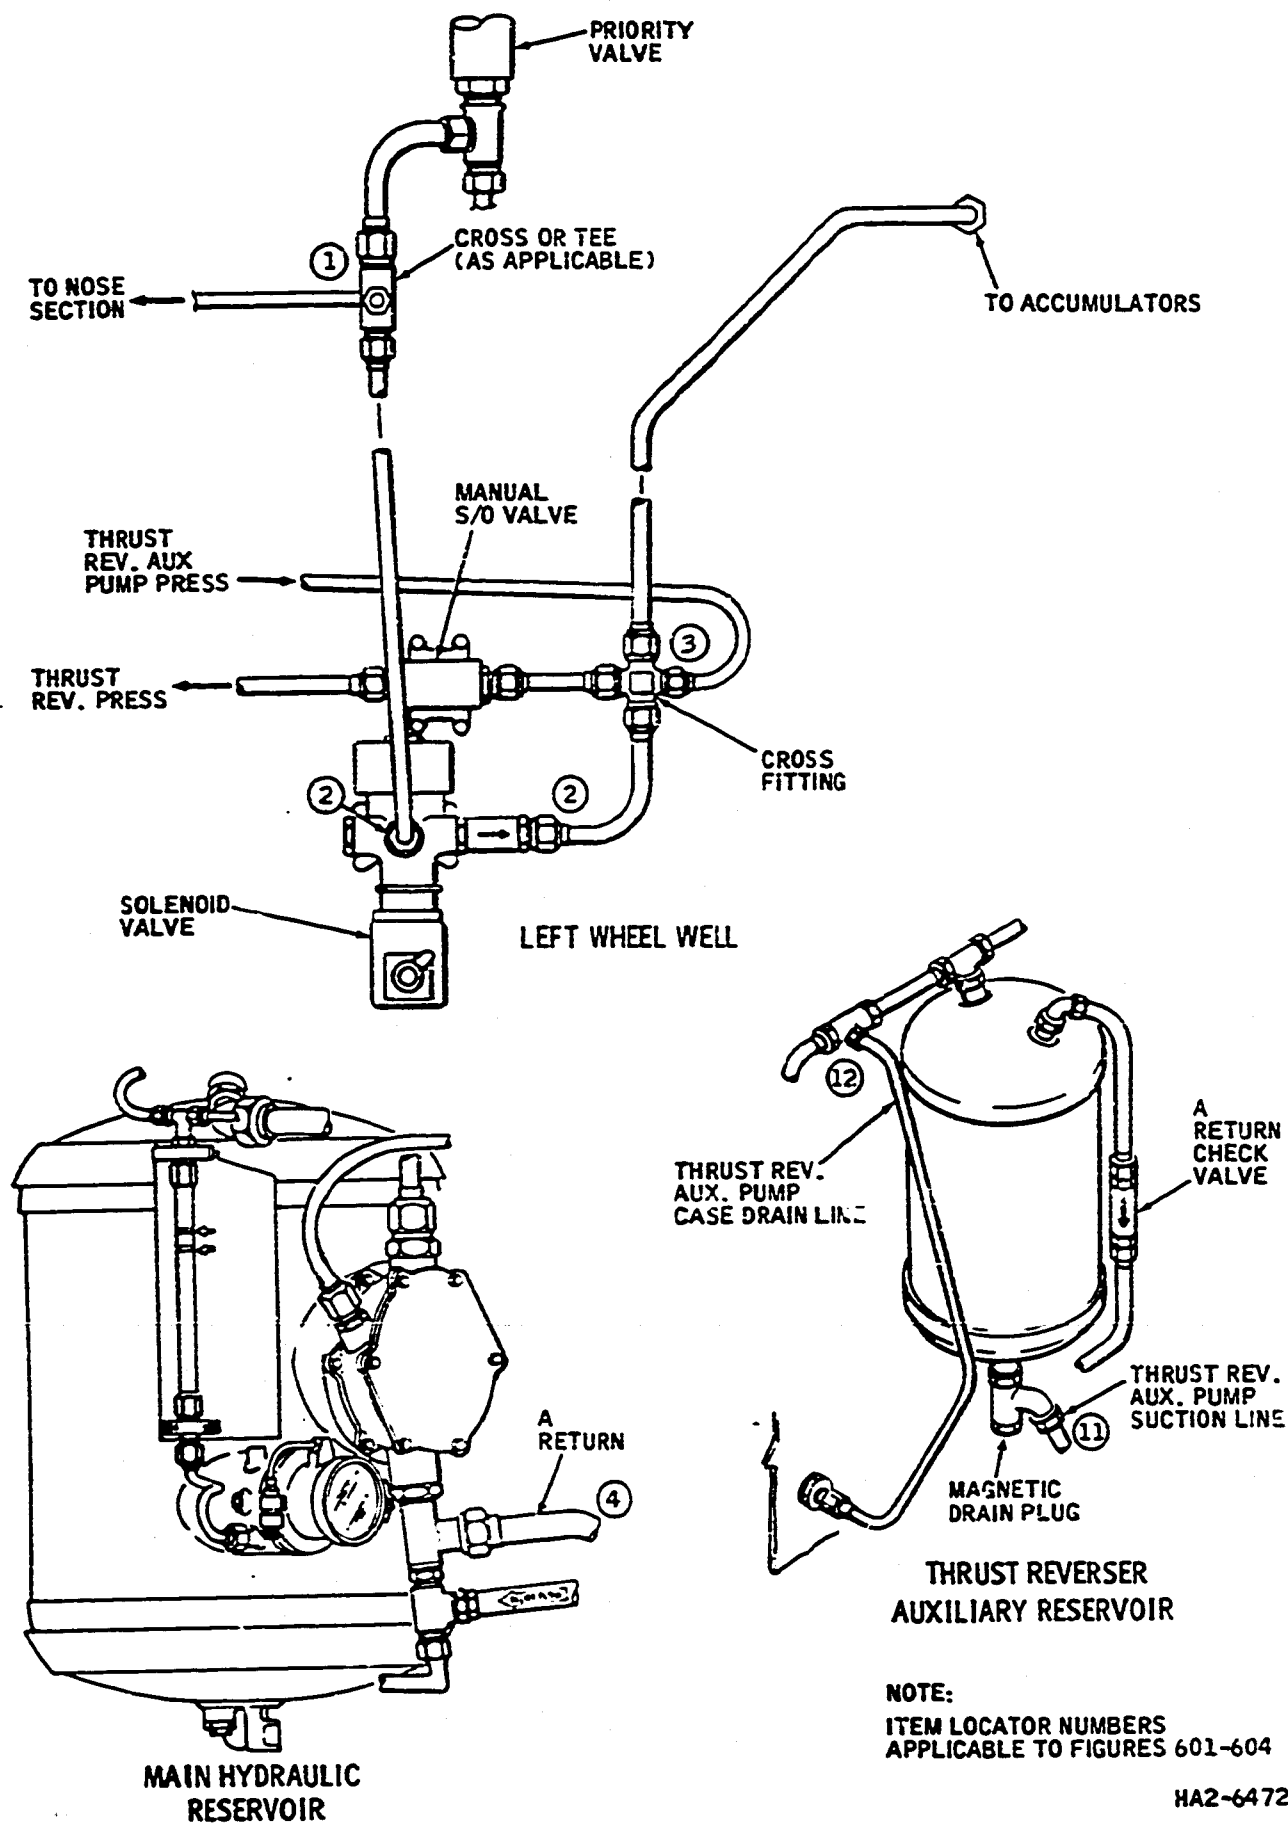


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (24) Repeat steps (9) through (19) for number 3 pylon.
- (25) Inspect, clean, and/or replace return line check valve aft of number 3 pylon, thrust reverser solenoid valve, pressure line check valve at solenoid valve outlet, and A return line check valve.
- (26) Restore all lines and units to original configuration except cross fitting disconnected in step (3).

**B. Thrust Reverser Auxiliary Pump and Accumulator Lines**



- (1) Remove magnetic drain plug from thrust reverser reservoir and drain reservoir. Clean plug, reinstall and safety with lock wire (see Chapter 78).
- (2) Disconnect thrust reverser auxiliary pump suction line from bottom of thrust reverser auxiliary reservoir.
- (3) Disconnect pump case drain line at tee near top of auxiliary reservoir.
- (4) Jumper case drain line to suction line.
- (5) At thrust reverser auxiliary pump, disconnect case drain hose.
- (6) Connect test stand pressure hose to case drain hose.
- (7) Disconnect, remove, and jumper case drain check valve located at outboard end of case drain hose.
- (8) Disconnect relief valve return line at tee at outboard end of case drain hose. Cap tee.
- (9) Disconnect auxiliary pump suction hose at pump and connect test stand return hose to suction hose.
- (10) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (11) Flush circuit for five minutes.
- (12) Depressurize test stand.
- (13) Disconnect test stand pressure hose from case drain hose.
- (14) Disconnect auxiliary pump pressure hose from pump and connect test stand pressure hose to auxiliary pump pressure hose.
- (15) Disconnect downstream end of auxiliary pump pressure hose from relief valve manifold.
- (16) Disconnect relief valve return line from bottom of relief valve and jumper to pressure hose disconnected in step (15).

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

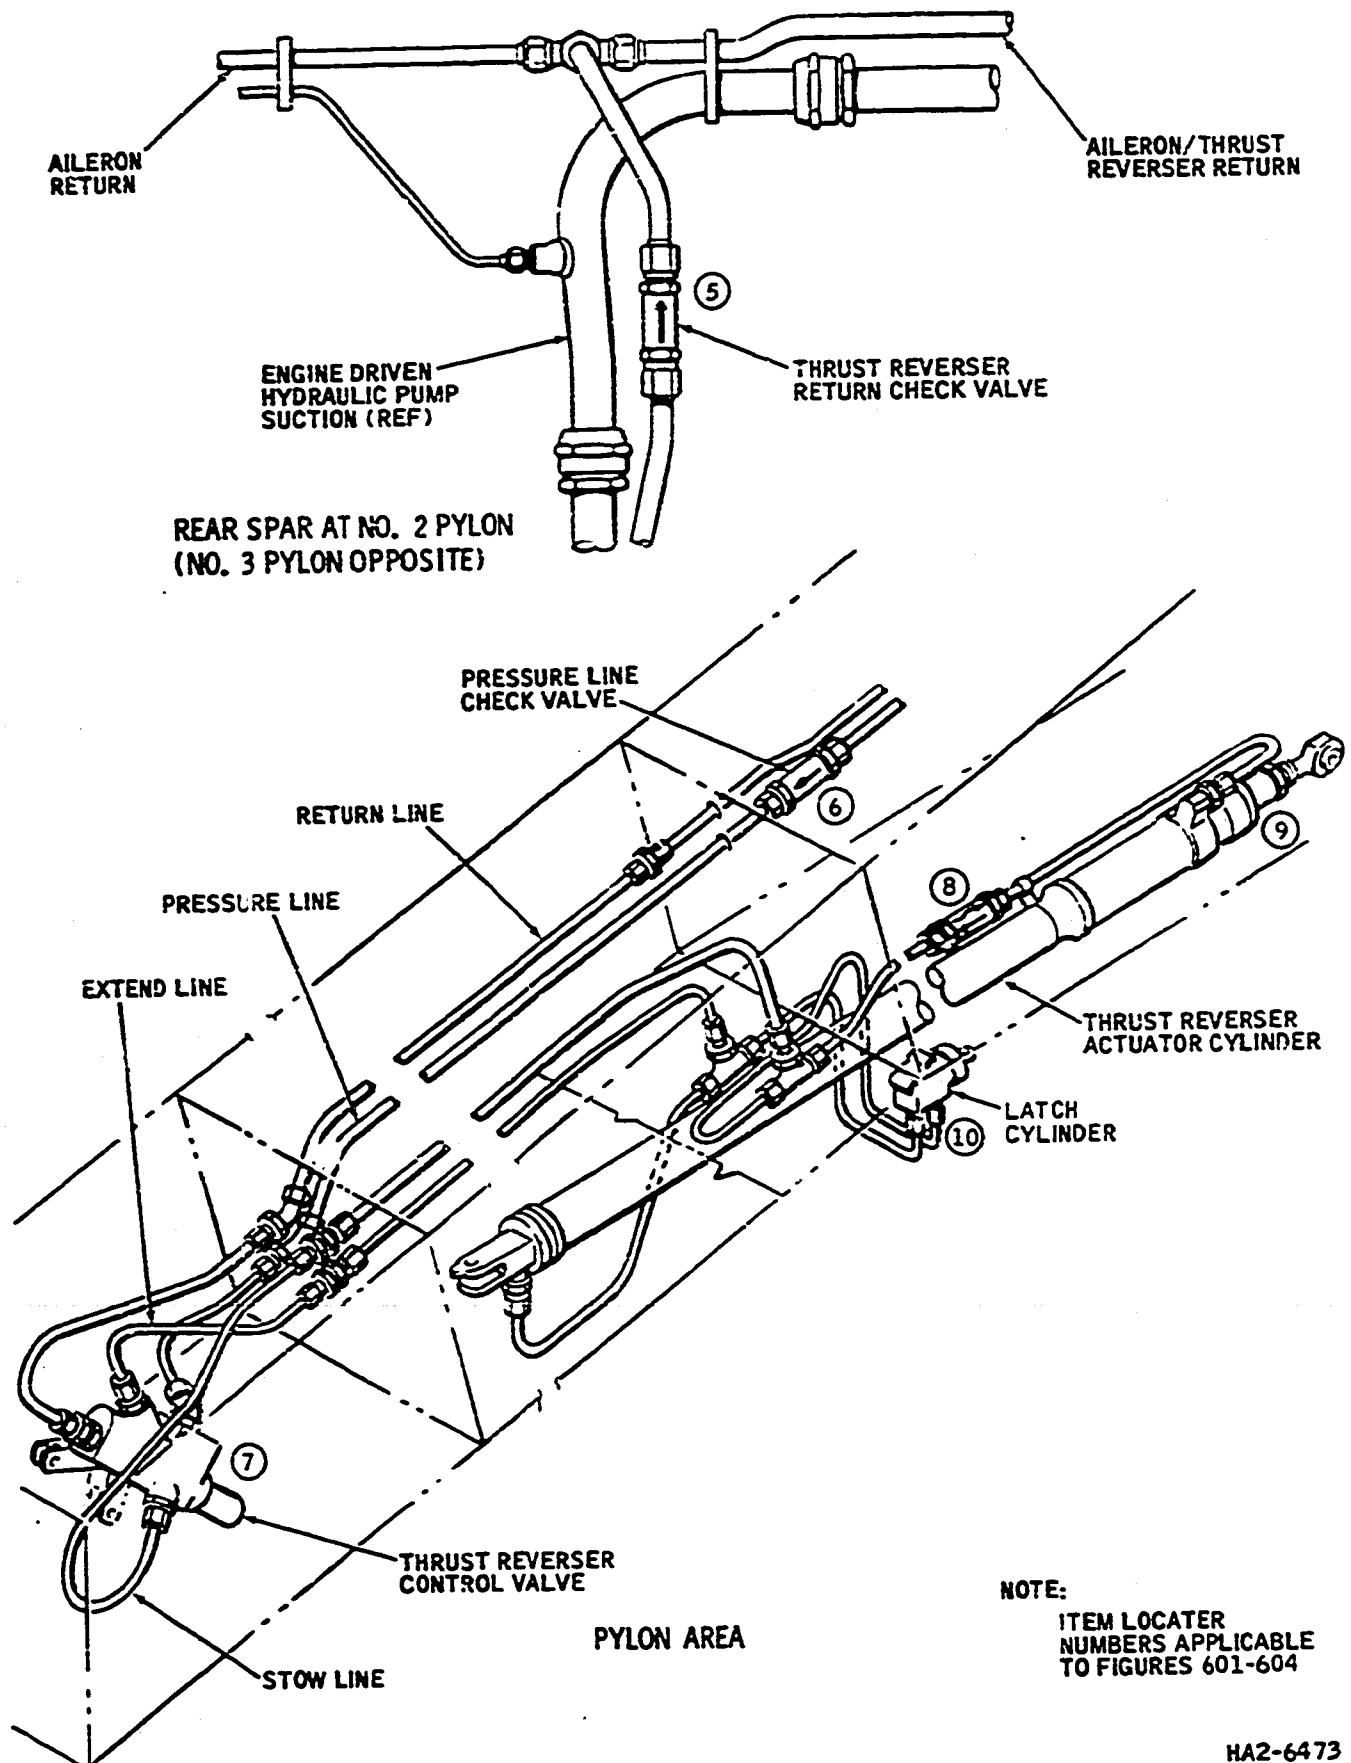

HA2-6473

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

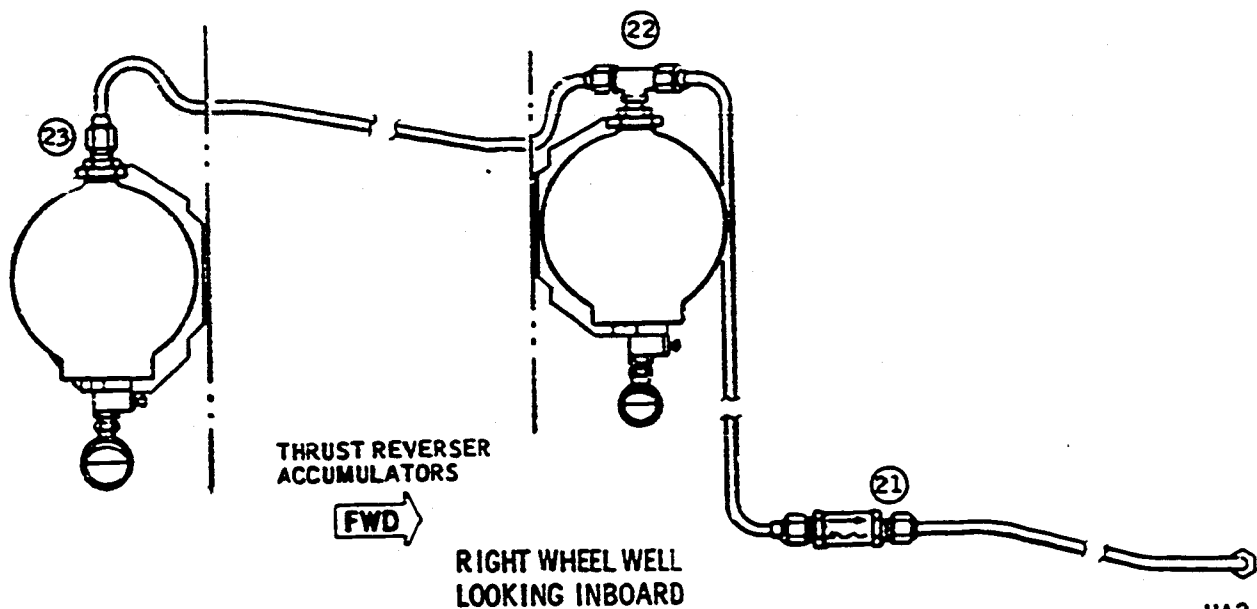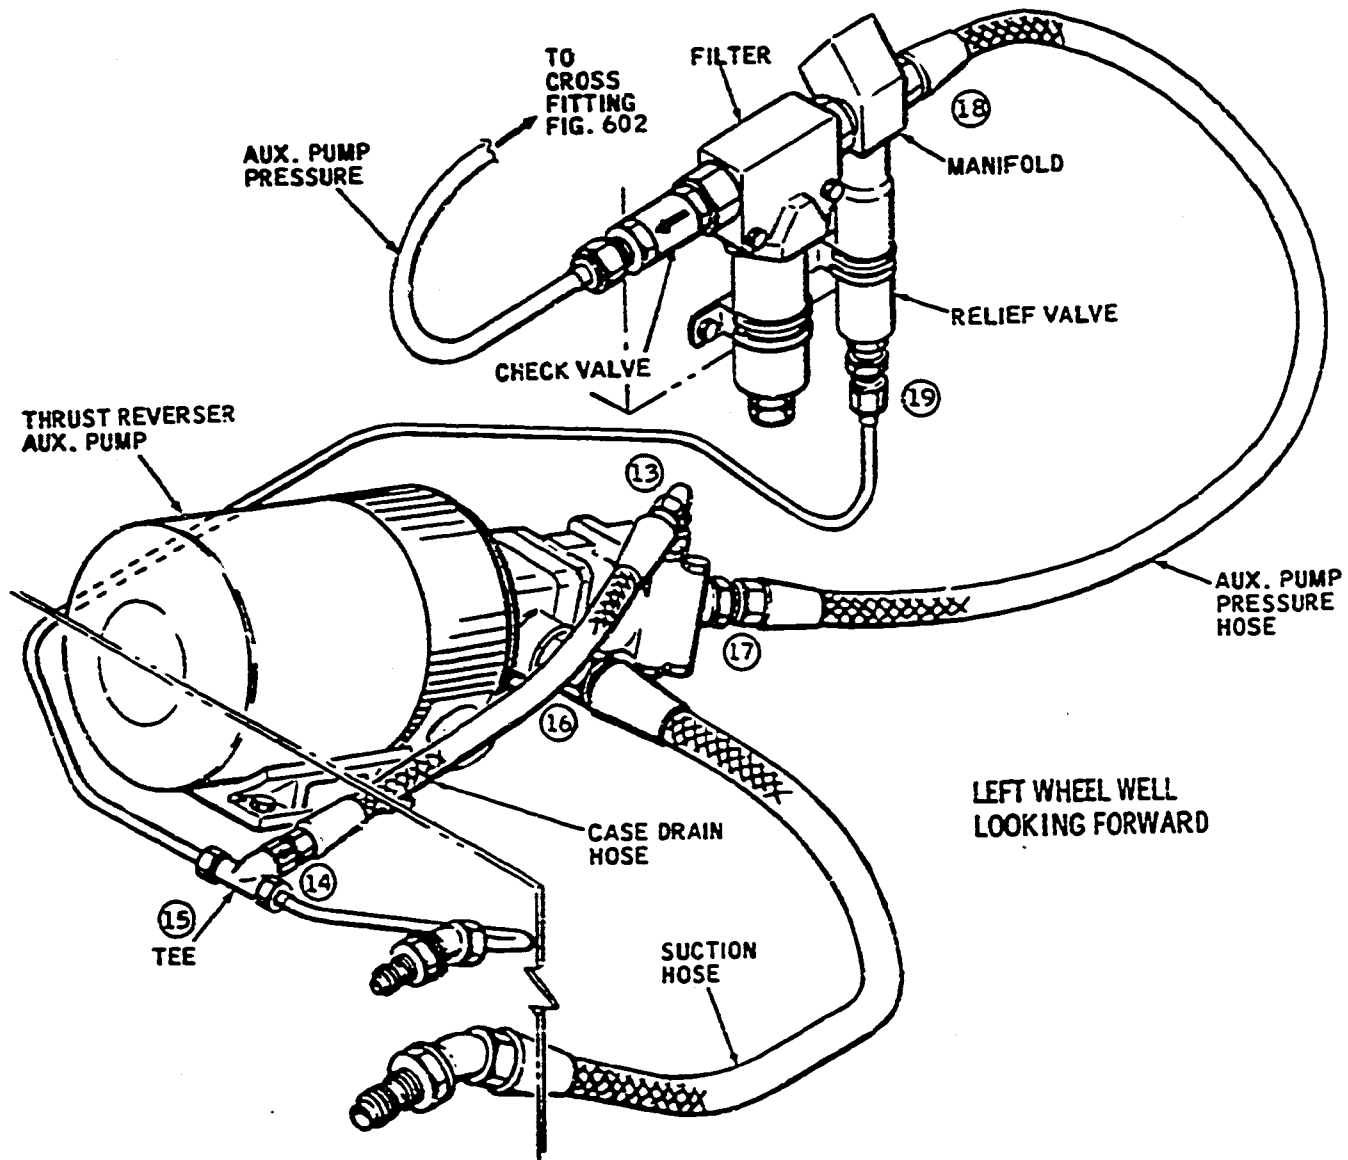

HA2-6474

Flushing Procedure Line Connection Locations  
 Figure 604

May 1/69

Printed in U.S.A.

29-08  
 CODE 1  
 Page 607

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (17) Disconnect pump pressure line from outlet check valve on auxiliary pump filter. Jumper this line to open end of relief return line disconnected in step (8).
- (18) Connect test stand return hose to auxiliary pump pressure line disconnected from cross fitting in step A(3).
- (19) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (20) Flush circuit for five minutes.
- (21) Depressurize test stand.
- (22) Disconnect test stand return hose from auxiliary pump pressure line at cross fitting and connect return hose to thrust reverser accumulator line disconnected in step A(3).
- (23) In right main gear wheel well, disconnect and jumper restrictor located in thrust reverser pressure line just below and forward of thrust reverser accumulators.
- (24) Disconnect and jumper pressure lines at tee on forward accumulator.
- (25) Disconnect pressure line from aft accumulator.
- (26) Disconnect test stand pressure hose from auxiliary pump pressure hose in left wheel well and connect to accumulator pressure at aft accumulator.
- (27) Pressurize test stand to 200 psi maximum at 20 gpm flow.
- (28) Flush circuit for five minutes.
- (29) Depressurize test stand.
- (30) Inspect, clean and/or replace thrust reverser auxiliary pump, filter, relief valve, check valves, restrictor, and accumulators.
- (31) Restore all lines and units to original configuration.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - DESCRIPTION AND OPERATION

1. General

A. Description (See Figures 1 and 2.)

- (1) The hydraulic power system receives fluid pressure from the engine-driven hydraulic pumps, one installed on each inboard engine. The electrically driven auxiliary pump is used to supplement the engine-driven pumps, or to independently supply the system with fluid pressure.
- (2) The hydraulic system reservoir, located in the left wing root, has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir is used for fluid, and 1/10 is used for foam space. A separate air chamber is installed in the reservoir system to provide for a greater fluid capacity in the main reservoir. A reservoir filler assembly is installed in the piping between the reservoir and the air chamber and has a vent line from the filler neck to the tee at the top of the reservoir sight gage. The reservoir is pressurized to 30 to 35 psi by bleed pressure from the engine-driven pumps through an air pressure regulator-aspirator.
- (3) The engine-driven pumps receive fluid from the pressurized main reservoir through respective engine hydraulic fire shutoff valves. The engine hydraulic fire shutoff valves are normally open and can be mechanically controlled from the flight compartment. The pumps supply fluid pressure through respective check valves to the dual filter and relief valve. Some of the fluid from the filter is ported through the regulator-aspirator to pressurize the reservoir. Most of the fluid is routed through a check valve to the system selector valve, and then to the left and right hydraulic power manifolds. The manifolds distribute the fluid pressure to the subsystems.
- (4) Hydraulic fluid is normally supplied to the auxiliary hydraulic pump from a low standpipe in the main reservoir. During alternate operation, the auxiliary hydraulic pump receives fluid supply from the auxiliary pump alternate reservoir, which is located just aft of the auxiliary pump. From these reservoirs, the fluid is ported through the auxiliary pump selector valve which is mechanically controlled from the flight compartment by the system selector control lever. When operating, the auxiliary hydraulic pump supplies fluid pressure to the subsystems through the system selector valve which is also controlled by the system selector control lever in the flight compartment. A filter and check valve are installed in the line from the auxiliary pump to the system selector valve.
- (5) An accumulator is installed in the pressure line to the subsystems to provide a reserve supply of fluid and to act as a surge damper for the system.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Engine-driven pump fluid pressure is routed through the system selector valve to the left power manifold, where it is distributed to some of the subsystems and through the priority valve to the right power manifold. Fluid pressure from the right power manifold is distributed to the remaining subsystems.
- (7) The priority valve is a spring-loaded, poppet-type, balanced relief valve installed in the line downstream of the left power manifold. The priority valve's function in the system is to prevent the flight control systems from reverting to manual operation during high demands on the hydraulic system.
- (8) A fluid pressure transmitter, located in the nosewheel well, senses the system pressure, which is indicated on the hydraulic system pressure indicator in the flight compartment.

**B. Normal Operation**

- (1) Fluid is supplied to the hydraulic system from the pressurized hydraulic system reservoir. For operation of the hydraulic system under normal conditions, 8.1 US gallons (6.7 Imperial gallons; 30.6 liters) of hydraulic fluid are available to the engine-driven hydraulic pumps, and 12.9 US gallons (10.7 Imperial gallons; 48.8 liters) are available to the auxiliary hydraulic pump. Supply lines from the main reservoir carry fluid to each inboard pylon through normally open engine hydraulic fire shutoff valves to the engine-driven hydraulic pumps. Fluid is supplied to the auxiliary hydraulic pump from the main reservoir through a low standpipe at the base of the reservoir. Fluid is carried from the reservoir through the auxiliary pump selector valve to the auxiliary hydraulic pump.
- (2) The engine-driven hydraulic pumps supply full system pressure (3000 psi nominal) at any given engine speed, from idle to full power. The output flow of the pump is varied by sensing pressure from the outlet side of the pump. Each engine-driven pump contains a solenoid-operated bypass valve which, when energized, bypasses the pressure control regulator of the pump and ports fluid to the pump yoke control piston which feathers the pump. When the pump is feathered, flow rate is reduced to almost zero (1.0 gpm) and to a pressure of approximately 300 psi. Half of this flow maintains pump lubrication and cooling through internal leakage. This leakage is returned, through a check valve, the engine-driven pump case drain line filter, and another check valve to the case drain return port of the reservoir. The pressure fluid from each pump passes through a check valve to the dual filter and relief valve.
- (3) The fluid enters the dual filter and relief valve through the relief valve chamber. The fluid is passed through the filter element, through a manifold, and through a common outlet port. Fluid from the outlet port is routed through a check valve to the system selector valve. If back pressure in the system builds up to approximately 3300 psi, the relief valves in the dual filter and relief valve open and port fluid back to the reservoir via A return port. The relief valve poppet closes again when system pressure drops to approximately 3000 psi.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

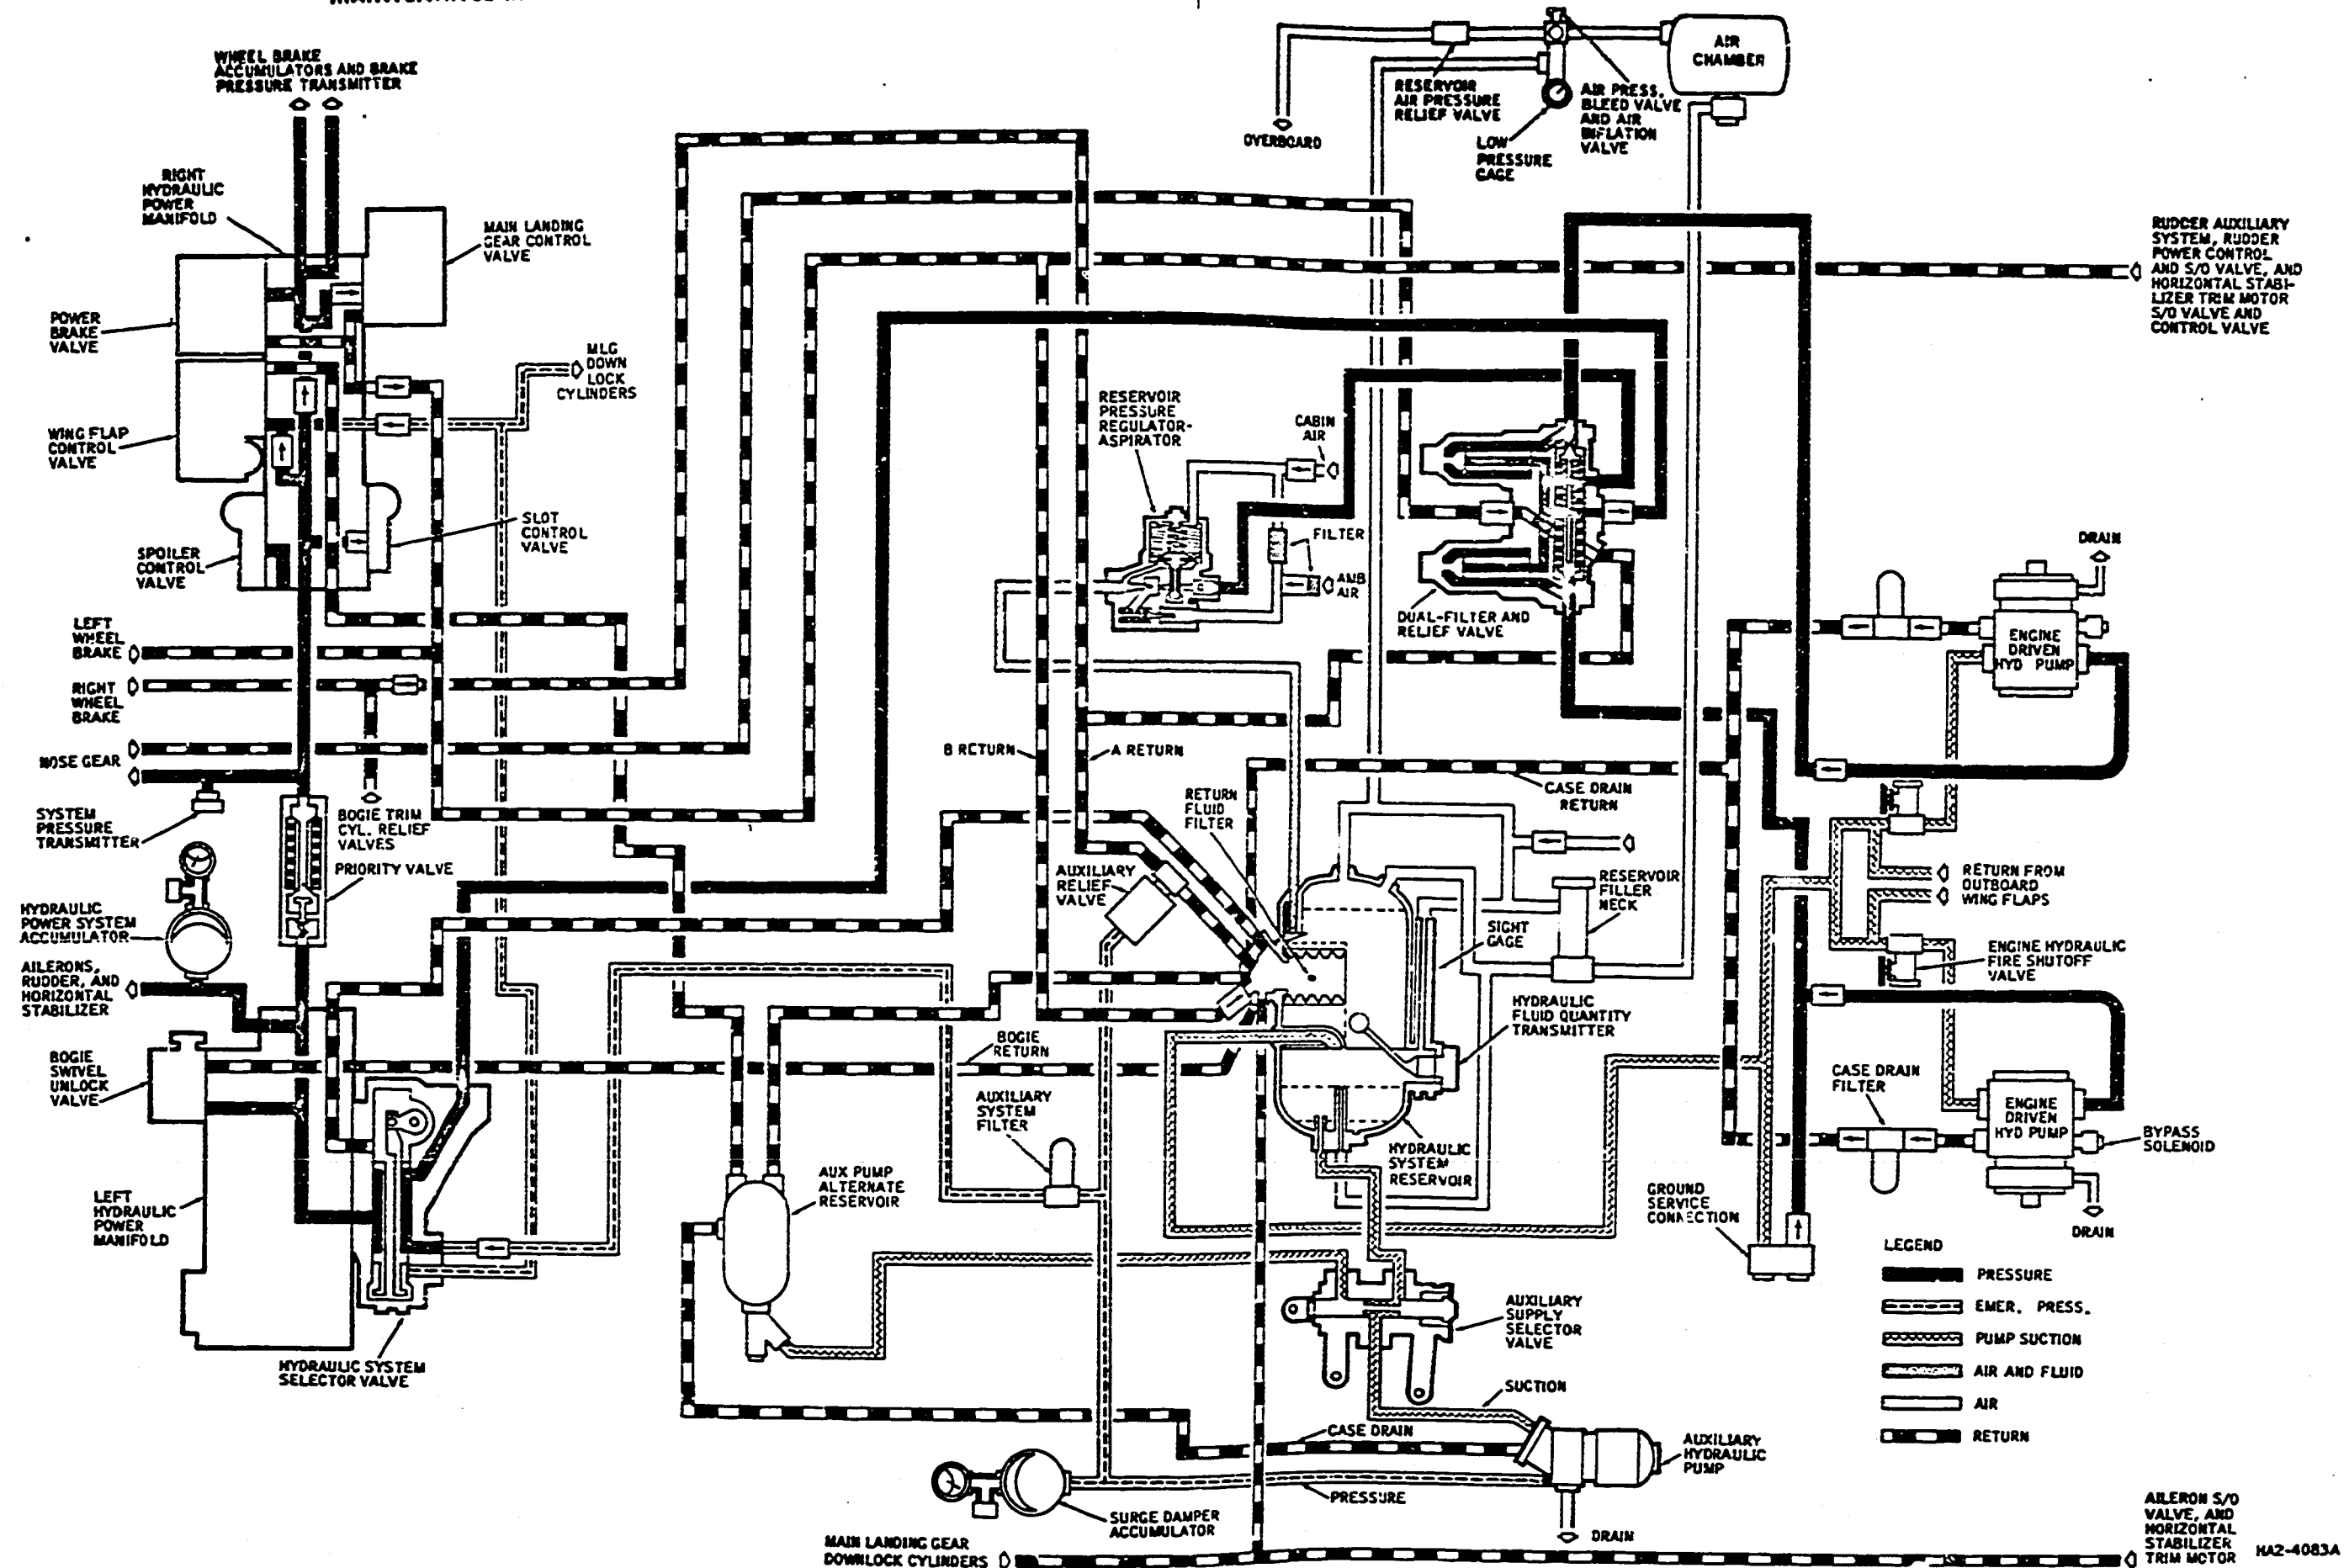


Hydraulic Power System -- Schematic Diagram  
 (Airplanes N8070U-N8075U)  
 Figure 1 (Sheet 1)

29-10-0  
 CODE 1  
 Page 3

Feb 1/69

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

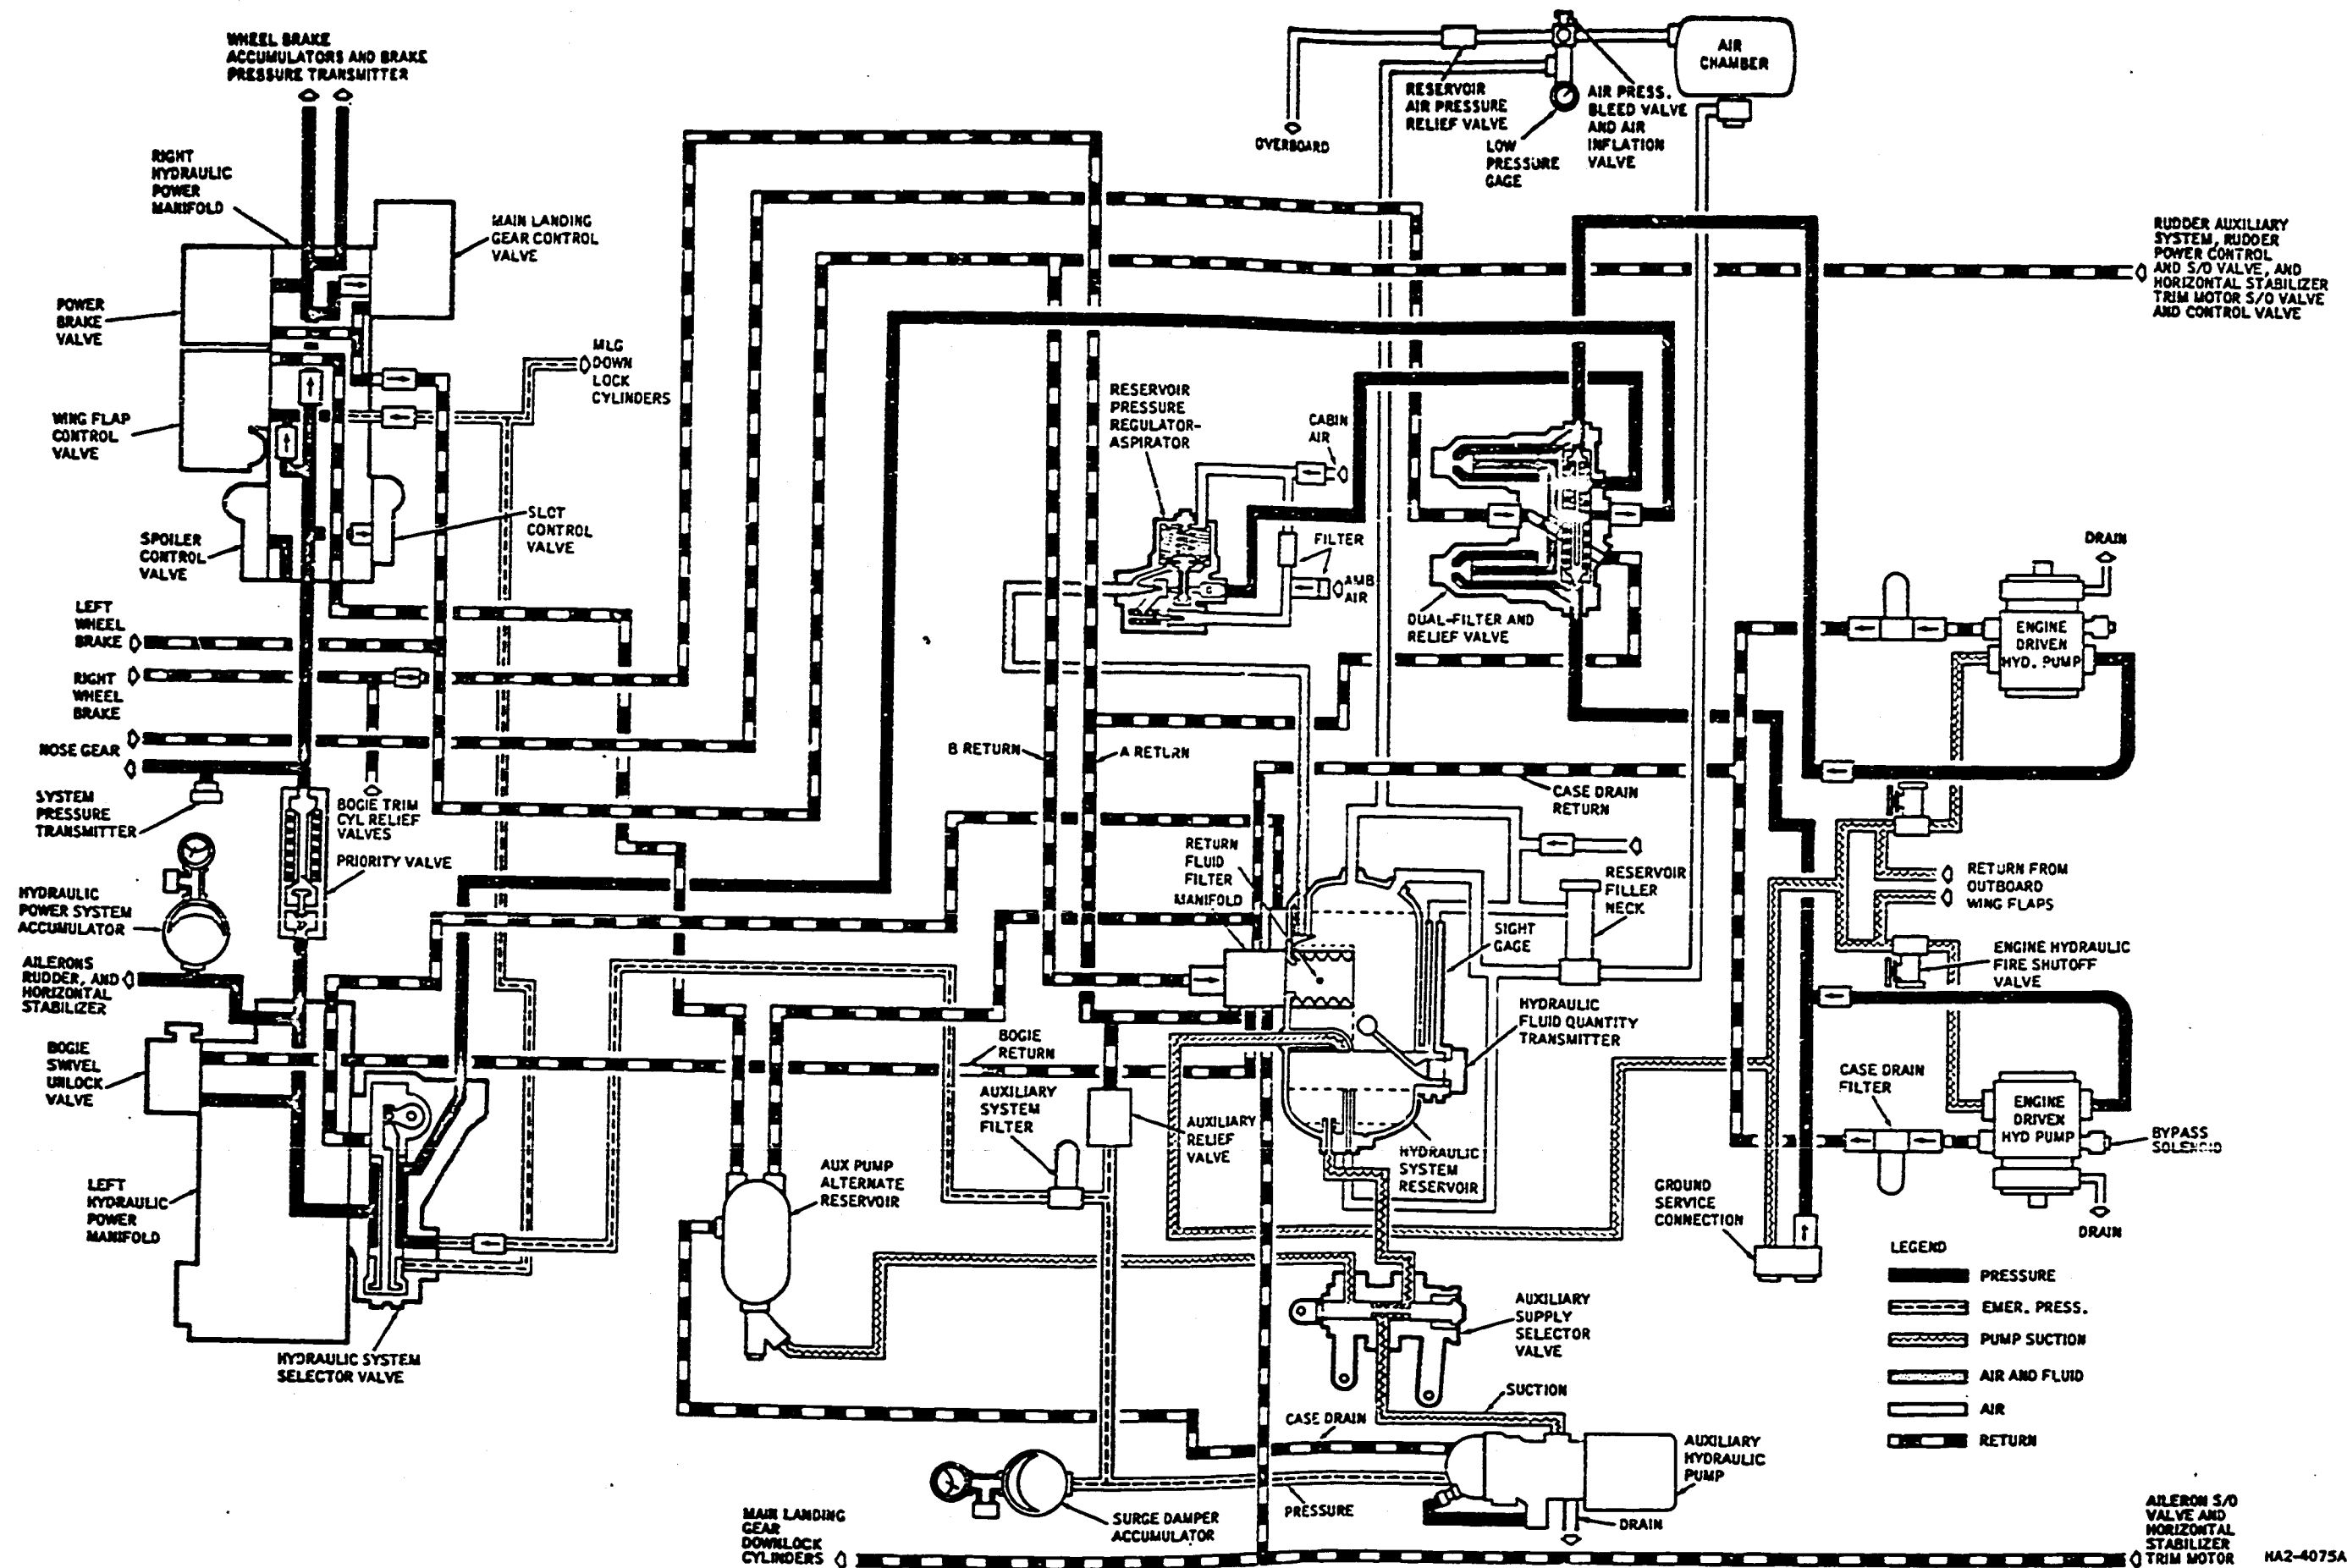

Hydraulic Power System -- Schematic Diagram  
 (Airplanes N8076-N8099)  
 Figure 1 (Sheet 2)


29-10-0  
 CODE 1  
 Page 4A

Feb 1/69

Printed in U.S.A.

HA2-4075A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

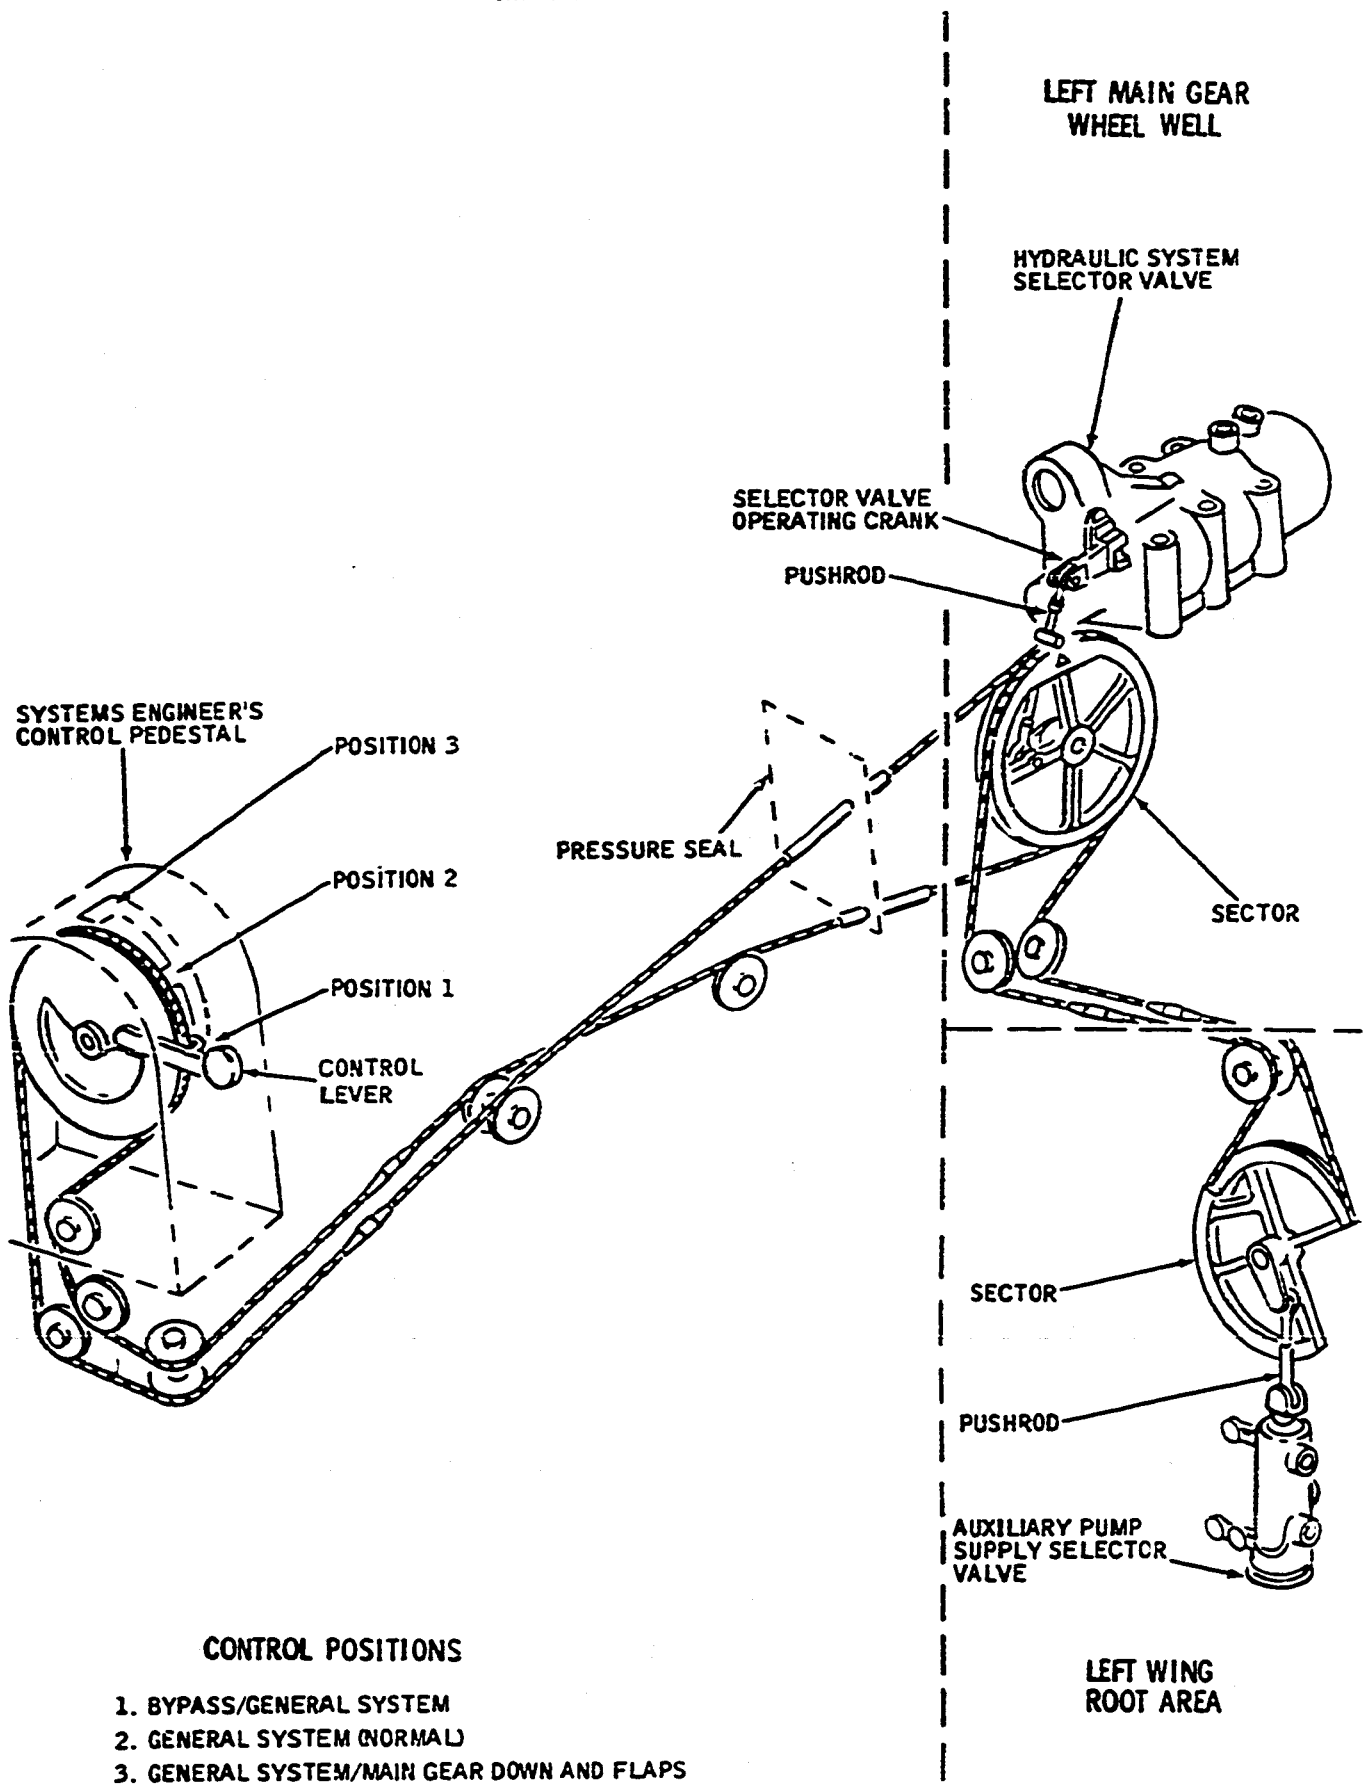

Hydraulic System Selector and Auxiliary Pump Supply  
 Selector Valves -- Mechanical Control Schematic  
 Figure 2

HA2-486

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 1  
 Page 5

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) The aspirator receives filtered fluid (bleed pressure at nominal 3000 psi) from the dual filter and relief valve. The aspirator operates on the jet pump principle. Hydraulic fluid is atomized and mixed with air within the unit by a nozzle and a venturi. The mixture is used to pressurize the reservoir and reservoir air chamber. The regulator diaphragm maintains a pressure range of 30 to 35 psi in the reservoir and air chamber. If there is a regulator malfunction, the aspirator stalls when the outlet pressure reaches a maximum of 40 psi. A reservoir relief valve in the reservoir vent line relieves thermal expansion pressure above 45 (+5, -0) psi.
- (5) Pump pressure fluid enters the system selector valve through the system pressure inlet port. When the pump selector control lever is in the general system (normal) position, fluid is ported to the pressure passages of the left power manifold. The fluid pressure in the left power manifold is ported through the priority valve to the nose gear and the right power manifold and directly to the following valves:
  - (a) Bogie unlock
  - (b) Aileron power shutoff
  - (c) Rudder power shutoff
  - (d) Longitudinal trim hydraulic motor shutoff.
- (6) The right power manifold distributes fluid pressure to the brake accumulators, the pressure transmitter, and the following control valves:
  - (a) Wing flap
  - (b) Slot
  - (c) Main gear
  - (d) Power brake.
- (7) The return fluid from the wing flap control valve is ported through the right power manifold and into the auxiliary hydraulic pump alternate reservoir. Return fluid from the outboard wing flaps is piped into the suction lines for each engine-driven hydraulic pump. Return fluid from the slot control valve is ported into the A return line to the main reservoir. The power brake and main gear control valve gear up return fluid is ported through a restrictor check valve into the B return line to the reservoir. The main gear control valve gear down return pressure bypasses the right manifold and returns to the reservoir through the A return line. The return port of the bogie unlock valve ports fluid from the left manifold to the bogie return port of the reservoir. All return fluid entering the reservoir is filtered through the return ports filter located within the reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

C. Bypass Operation

- (1) The output of the engine-driven hydraulic pumps is bypassed by moving the system selector control lever out of the general system (normal) position to the bypass/general system position.
- (2) The system selector valve in the bypass position ports engine-driven pump pressure from the dual filter and relief valve directly to the return passage of the left power manifold. From the manifold, the fluid is ported directly to a tee in the wing flap return port of the hydraulic system reservoir. In the bypass condition, the auxiliary hydraulic pump receives fluid from the hydraulic system reservoir, pressurizes it to system pressure, and ports it to the left and right power manifolds for distribution to the subsystems.

D. Alternate Operation

- (1) When both engine-driven hydraulic pumps and the auxiliary hydraulic pump are rendered inoperative due to the loss of the normal supply of fluid, the hydraulic power system can be rigged for alternate operation. This is accomplished by placing the system selector control lever in the general system/main gear downlock and flaps position. When the system selector control lever is in this position, the auxiliary hydraulic pump supply selector valve is positioned to supply fluid from the auxiliary pump alternate reservoir to the auxiliary pump.
- (2) Fluid is supplied to the auxiliary pump from the outlet port of the auxiliary pump supply selector valve. Output pressure is ported through the auxiliary system filter and check valve to the auxiliary pressure inlet port of the system selector valve.
- (3) In the general system/main gear downlock and flaps position, auxiliary pump pressure bypasses the manifold pressure passages and is ported from the alternate outlet port of the system selector valve. Fluid from this port flows directly to a port on the right power manifold, through an internal check valve in the manifold, to the wing flap control valve. A line, teed into the alternate supply line, runs directly to a shuttle valve in the main gear downlock cylinder line. When auxiliary pressure is applied, the shuttle valve shifts, porting fluid into the downlock bungee cylinder's downlock side.

E. Mechanical Control

- (1) The hydraulic power mechanical control system consists of the hydraulic system selector control lever cable drum, the system selector valve sector, the system selector valve, the auxiliary hydraulic pump supply selector valve sector, and the auxiliary hydraulic pump supply selector valve.
- (2) The control lever located on the system engineer's control pedestal is used to position the system selector valve and, in turn, the auxiliary hydraulic pump supply selector valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The control lever is spring loaded into general system (normal) position, and is connected to the control lever cable drum. Two cables run from the drum, under the cabin floor, aft through the pressure bulkhead at the rear wing spar, and into the left wheel well to the system selector valve sector. A pushrod connects the sector to the positioning lever of the system selector valve.
- (4) A second set of cables is routed from the system selector valve sector into the left wing root to the auxiliary hydraulic pump supply selector valve sector. When the system selector valve is in either bypass or normal, the auxiliary hydraulic pump supply selector valve sector is arranged so that the pushrod idles between the two positions. This allows the valve to remain in the auxiliary position. When the sector is moved to the alternate position, the pushrod is pulled by the sector to reposition the valve to the alternate position.
- (5) The control lever is normally in the general system (normal) position. To move the system selector valve to the bypass position, the control lever is moved to the bypass/general system position. When the system selector valve is moved to the bypass position, the auxiliary hydraulic pump supply selector valve sector is moved to a new position. Due to the idle feature on the auxiliary sector, the valve remains in the auxiliary position. With the valve in this position, fluid is supplied to the auxiliary pump through the low standpipe in the hydraulic system reservoir. In this condition, engine-driven pump pressure is ported to the reservoir and the auxiliary pump pressure is ported to the general system.
- (6) To put the system in alternate operation, the control is moved to the general system/main gear downlock and flaps position. This moves the system selector valve to the alternate position, and simultaneously moves the auxiliary hydraulic pump supply selector valve to the alternate position. Fluid is supplied to the auxiliary pump from the auxiliary hydraulic pump alternate reservoir. Fluid pressure from the auxiliary pump is ported to the flap system control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported from the system selector valve to the general system.


## 2. System Components

### A. Hydraulic System Reservoir (See Figures 3 and 4.)

- (1) The hydraulic system reservoir is installed on the aft side of the wing rear spar in the left wing root and is accessible through the left wing root access door. The hydraulic system reservoir serves as the main source of hydraulic fluid for the engine-driven hydraulic pumps and the normal supply for the auxiliary hydraulic pump. The reservoir is cylindrical in shape and contains a filter, baffle, and a screen cover encasing the filter. The filter prevents foreign particles from contaminating the fluid supply. Mountings are provided on the exterior



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

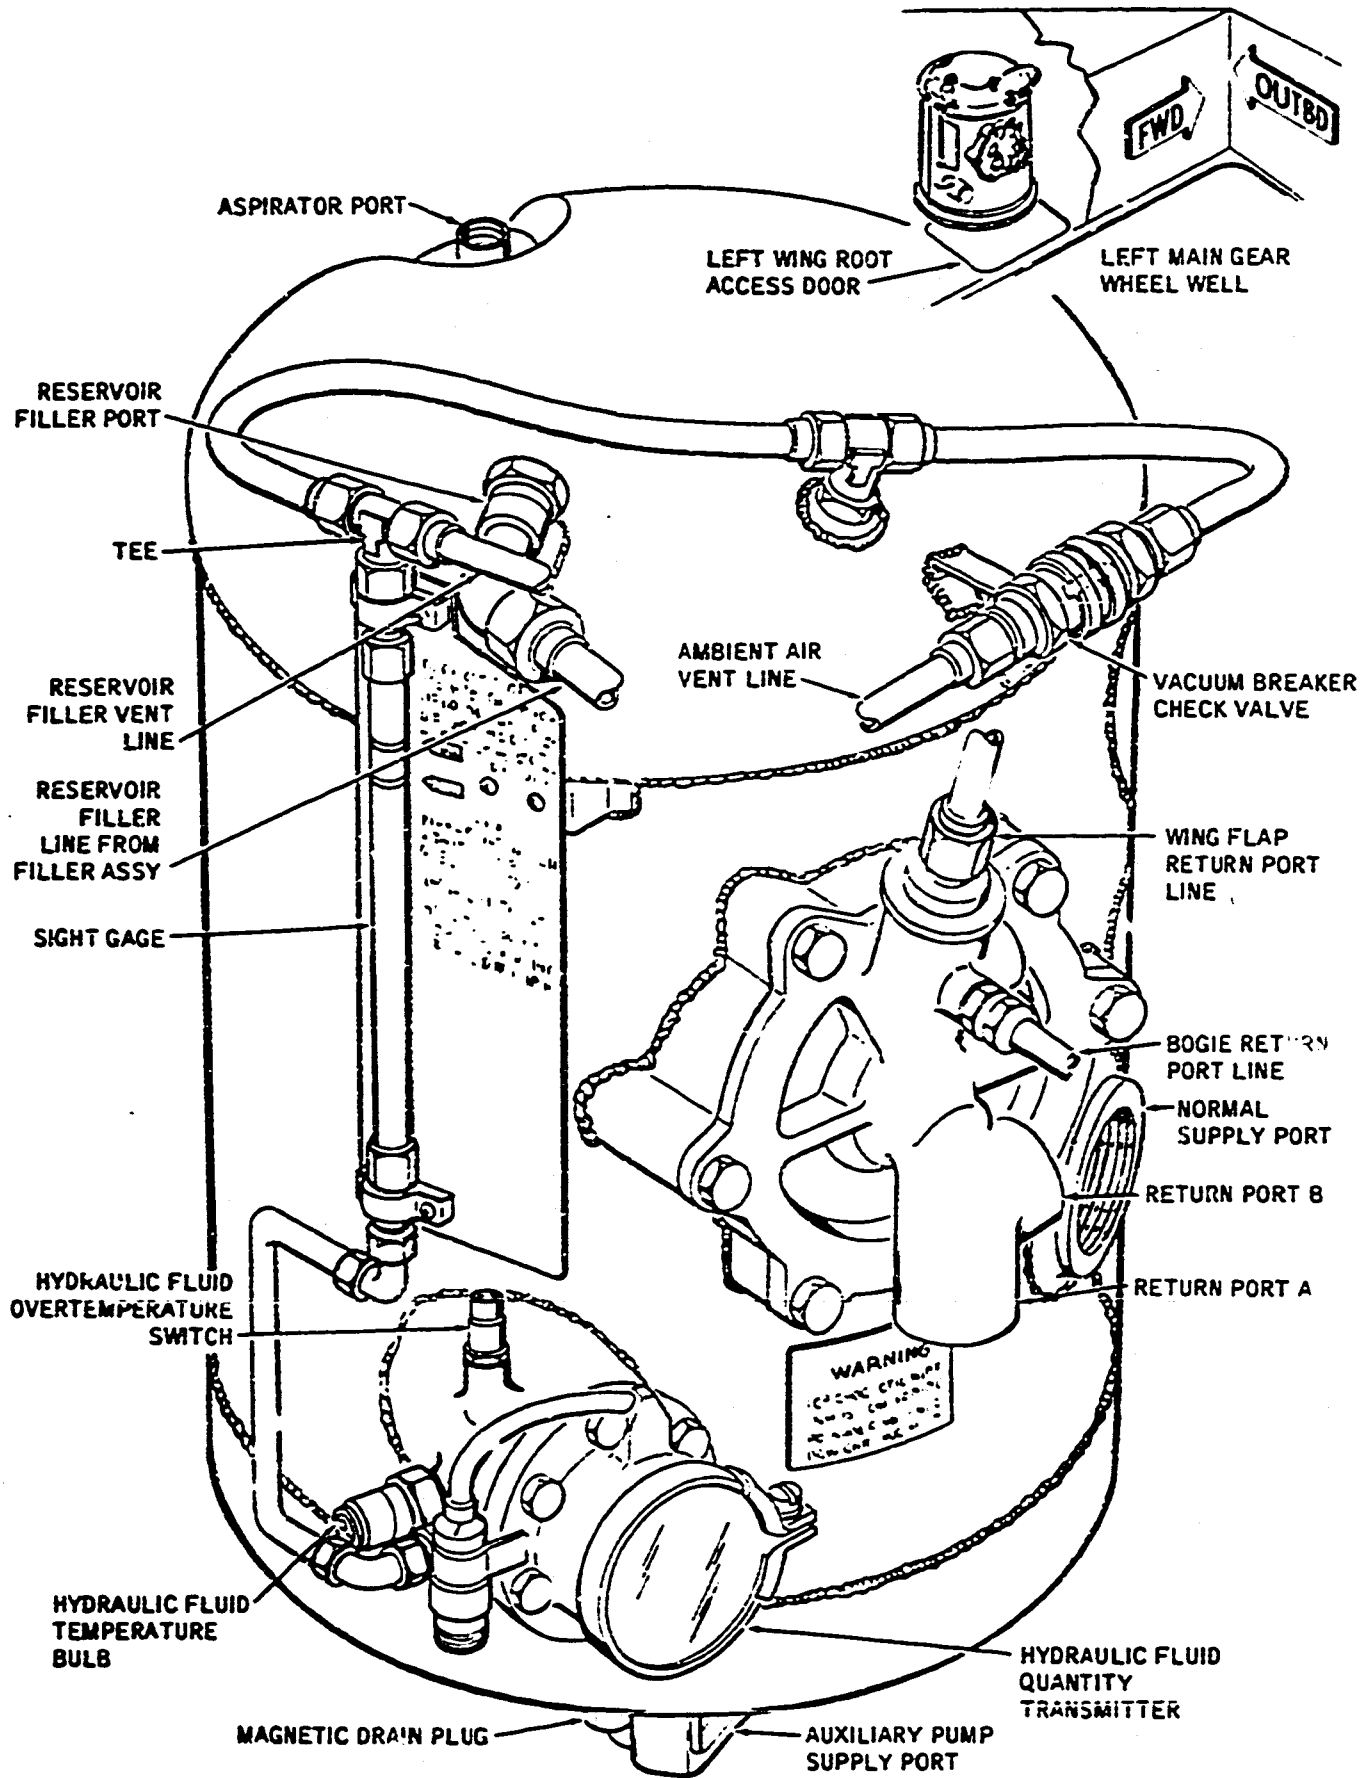


HA2-4077

Hydraulic System Reservoir -- External View  
 (Airplanes N8070U-N8075U)  
 Figure 3 (Sheet 1)

29-10-0  
 CODE 1  
 Page 9

Feb 1/69


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

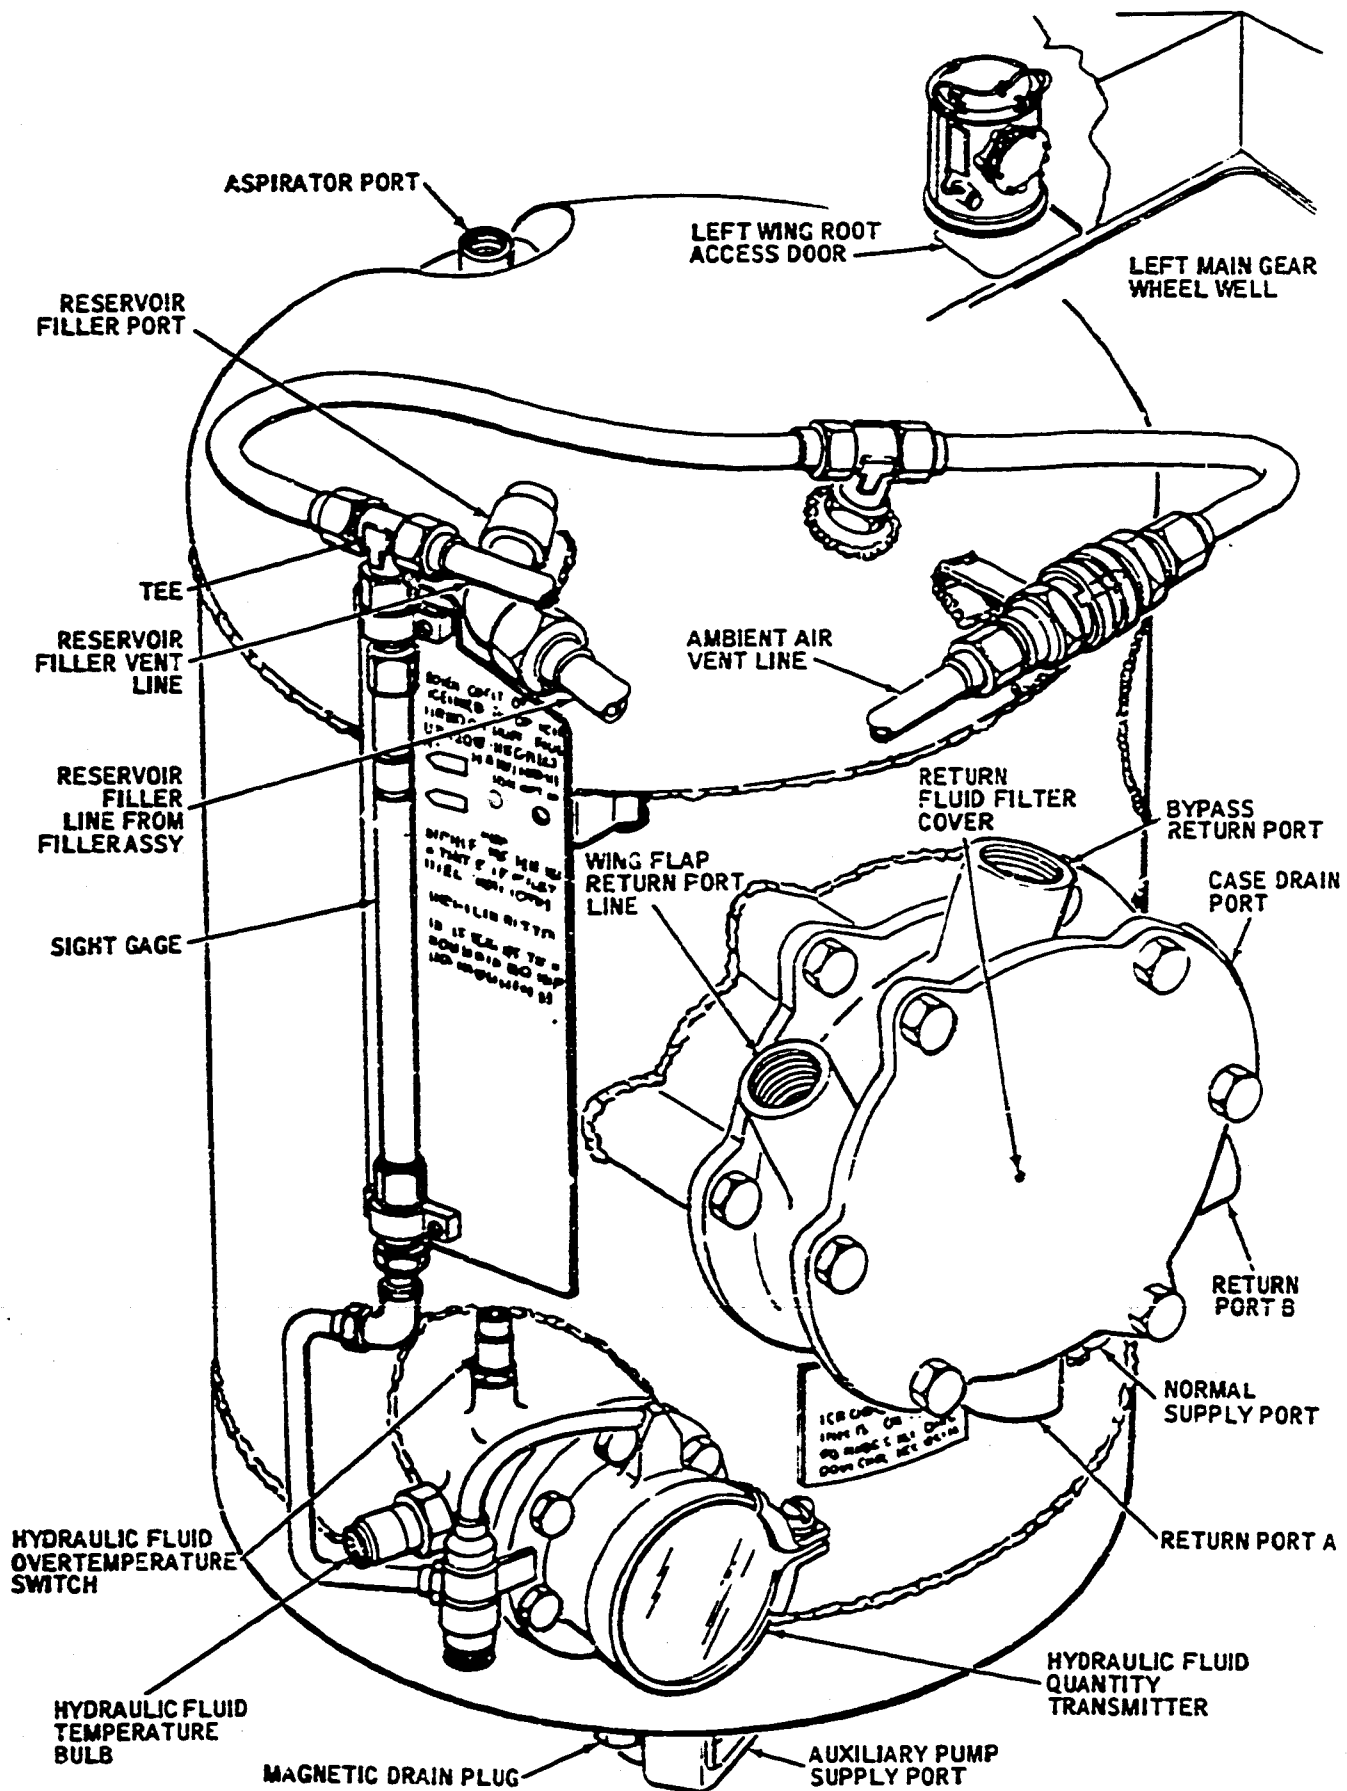

HA2-2142

Hydraulic System Reservoir -- External View  
 (Airplanes N8076U-N8099U)  
 Figure 3 (Sheet 2)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

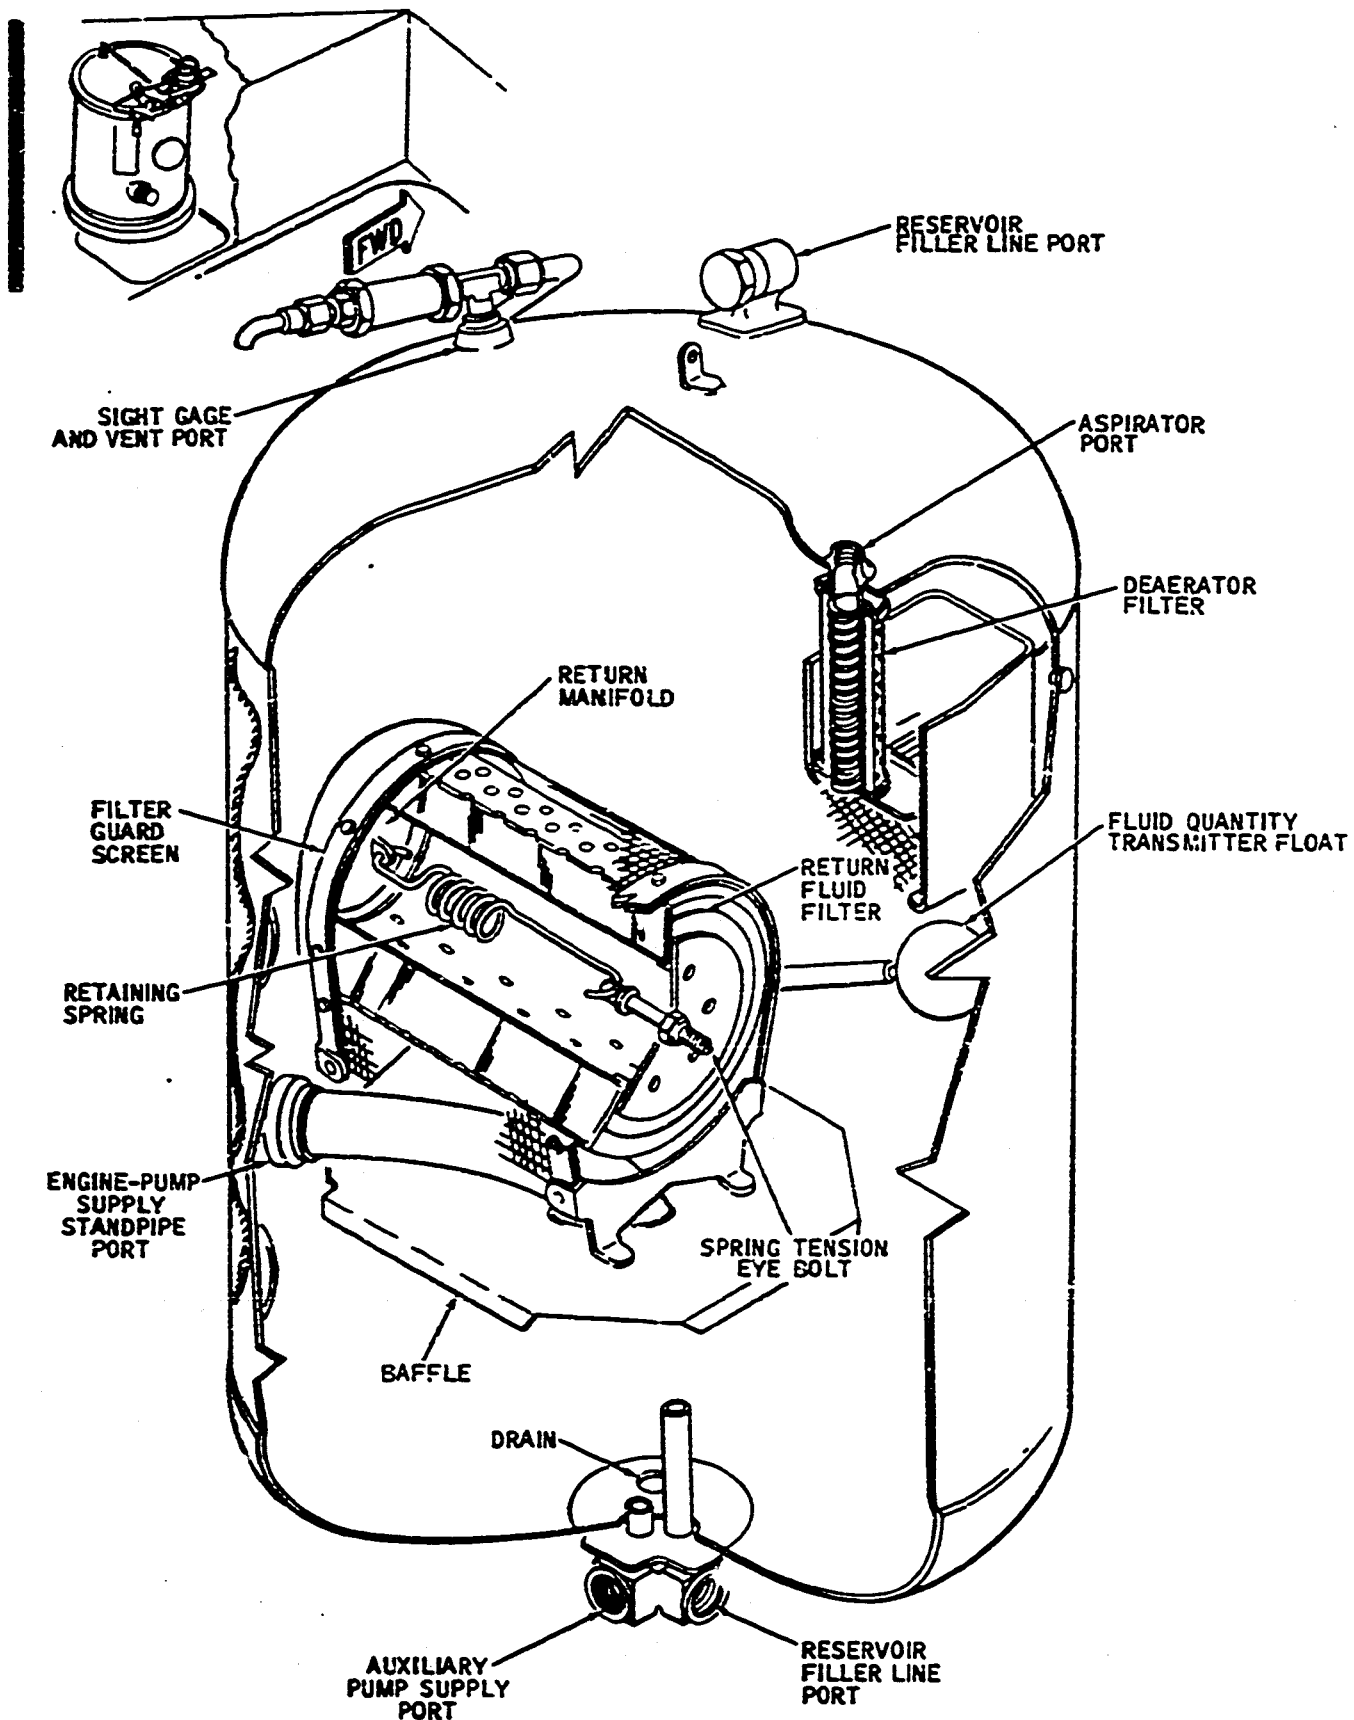

Hydraulic System Reservoir -- Cutaway View  
 Figure 4

HA2-2143A

29-10-0  
 CODE 1

Page 10A

Feb 1/69

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

surface of the reservoir for return line ports, aspirator port, electrical sensing units, sight gage, instruction placards, magnetic drain plug, and system supply ports.

- (2) The reservoir is pressurized with air from the regulator-aspirator to a range of 30 to 35 psi and has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir volume is used for fluid and 1/10 is used for foam space.
- (3) The aspirator port through which the reservoir is pressurized is located in the recess on top of the reservoir. An aspirator-deaerator filter is supported in the reservoir by a screen and support box assembly which is mounted to the reservoir wall by two bolts.
- (4) On airplanes N8070U-N8075U, the mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The manifold is bolted to the flange and contains five ports: return port A, located at the bottom; return port B, located at the lower right side; the low-pressure return port, located at the upper right; the wing flap return port, located at the top; and the bogie return port, located on the face of the manifold just below the wing flap return port.
- (5) On airplanes N8070U-N8075U, the return fluid filter is installed in the reservoir behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the manifold holds the filter in position. A baffle plate is welded to the inside of the reservoir and to the engine pump supply standpipe within the reservoir. A screen, which reduces aeration of the fluid, is snap-mounted to two brackets which are welded to the baffle. The screen is U-shaped and is mounted so that it will enclose the filter.
- (6) On airplanes N8076U-N8099U, the mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The return ports manifold is an open-centered ring, flanged at both sides and provided with five fluid ports around its circumference; return port A is located at the bottom, return port B is located at the lower right side, the wing flap return port is located at the upper left side, and the system selector valve bypass port is located at the top. One flange of the manifold is mounted with six bolts to the mounting flange on the reservoir. The return fluid filter cover fits into the open side of the manifold, and is attached to the other manifold flange with six bolts to form a fluid-tight cover for both the manifold and the filter.
- (7) On airplanes N8076U-N8099U, the return fluid filter is installed in the reservoir, behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the return fluid filter cover holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to the engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) A flanged adapter for the fluid quantity transmitter is welded to the reservoir below and to the left of the return ports manifold. The adapter is provided with two small bosses for the hydraulic fluid temperature bulb and the hydraulic fluid overtemperature switch. The lower end of the sight gage connects to a port in the adapter, while the top of the sight gage tees into a port at the top of the reservoir. An instruction plate is mounted behind the sight gage, and the vacuum breaker check valve tees into the port at the top of the reservoir that is used by the sight gage.

B. Hydraulic Reservoir Return Fluid Filter (See Figure 4.)

- (1) On airplanes N8070U-N8075U, the reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply. The filter is located behind the return ports manifold and is spring loaded to act as its own relief valve. Access to the filter is by removing the return ports manifold. Removal of the return ports manifold necessitates disconnecting the return lines from the manifold and removal of six bolts which secure the manifold to the reservoir. The filter which is attached to the manifold is then withdrawn from the reservoir.
- (1a) On airplanes N8076U-N8099U, the reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply. The filter is located behind the return ports manifold, and is spring loaded to act as its own relief valve. Access to the filter is by removing the return fluid filter cover from the return ports manifold by removal of six bolts. The filter is attached by the retaining spring to the cover and is withdrawn from the reservoir when the cover is removed.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Externally, the filter consists of two perforated concentric tubes. The area between the tubes is closed by metal end caps which are bonded to the two tubes. A resilient rubber gasket is bonded to each of the caps. Each gasket must be smooth and flat for proper sealing of the filter. The gaskets act as a static seal and a relief valve seat.
- (3) Internally, the filter has a 10-micron, resin-impregnated, convoluted paper-type filter element. The area of the filter element is approximately 1960 square inches. The filter is held in place by a retaining spring. One end of the spring is attached to an eyebolt located inside the return port's manifold. The spring passes through the center chamber of the filter and is connected to another eyebolt. This eyebolt is secured to a large washer and plate by means of a self-locking nut. The washer seats on the rubber gasket which is bonded to the filter. The fluid enters the center chamber of the filter and passes through the inner tube of the filter to the filter element by means of perforation holes. Foreign matter is filtered out by the filter element, and the fluid leaves the element through perforation holes in the outer tube. When the element becomes saturated with foreign matter, the filter acts as its own relief valve and unseats at 20 to 25 psi above normal return pressure which allows fluid to bypass the filter and enter the reservoir.

C. Hydraulic Reservoir Air Pressure Regulator-Aspirator (See Figure 5.)

- (1) The reservoir air pressure regulator-aspirator is a jet-type air pump, regulated by a pressure-sensitive shutoff valve. The unit pressurizes the hydraulic reservoir with air to the operating pressure range of 30 to 35 psi. The regulator-aspirator is located on the top inboard side of the reservoir and is mounted on the reservoir retainer ring. Access to regulator-aspirator is through the left wing root access door.
- (2) The regulator-aspirator assembly consists of a main aspirator body and a regulator housing. The main aspirator body has two inlet ports and one outlet port. The ports are permanently identified inlet, outlet, and air inlet. The plug for an air check valve is located near the outlet port. A chemically treated paper filter is installed near the aspirator body air inlet port in the air line from the pressurized cabin area. A metal screen filter is installed on the check valve which tees into the aspirator body air inlet port.
- (3) The reservoir air pressure regulator-aspirator operates basically with a jet pump action which is regulator controlled. Fluid enters the assembly through the fluid inlet port where it is filtered and then ported through the valve assembly of the regulator. During normal operation, when air pressure at the outlet port is under 30 psi, the valve is open, porting fluid to the nozzle. The orifice in the nozzle sprays the fluid through the venturi of the outlet port, creating a vacuum in the chamber around the venturi. When the vacuum becomes great enough to create a pressure differential of approximately 1 psi, ambient air opens the air check valve. The air is ported to the chamber around the venturi and is siphoned, with the fluid, through the outlet port.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

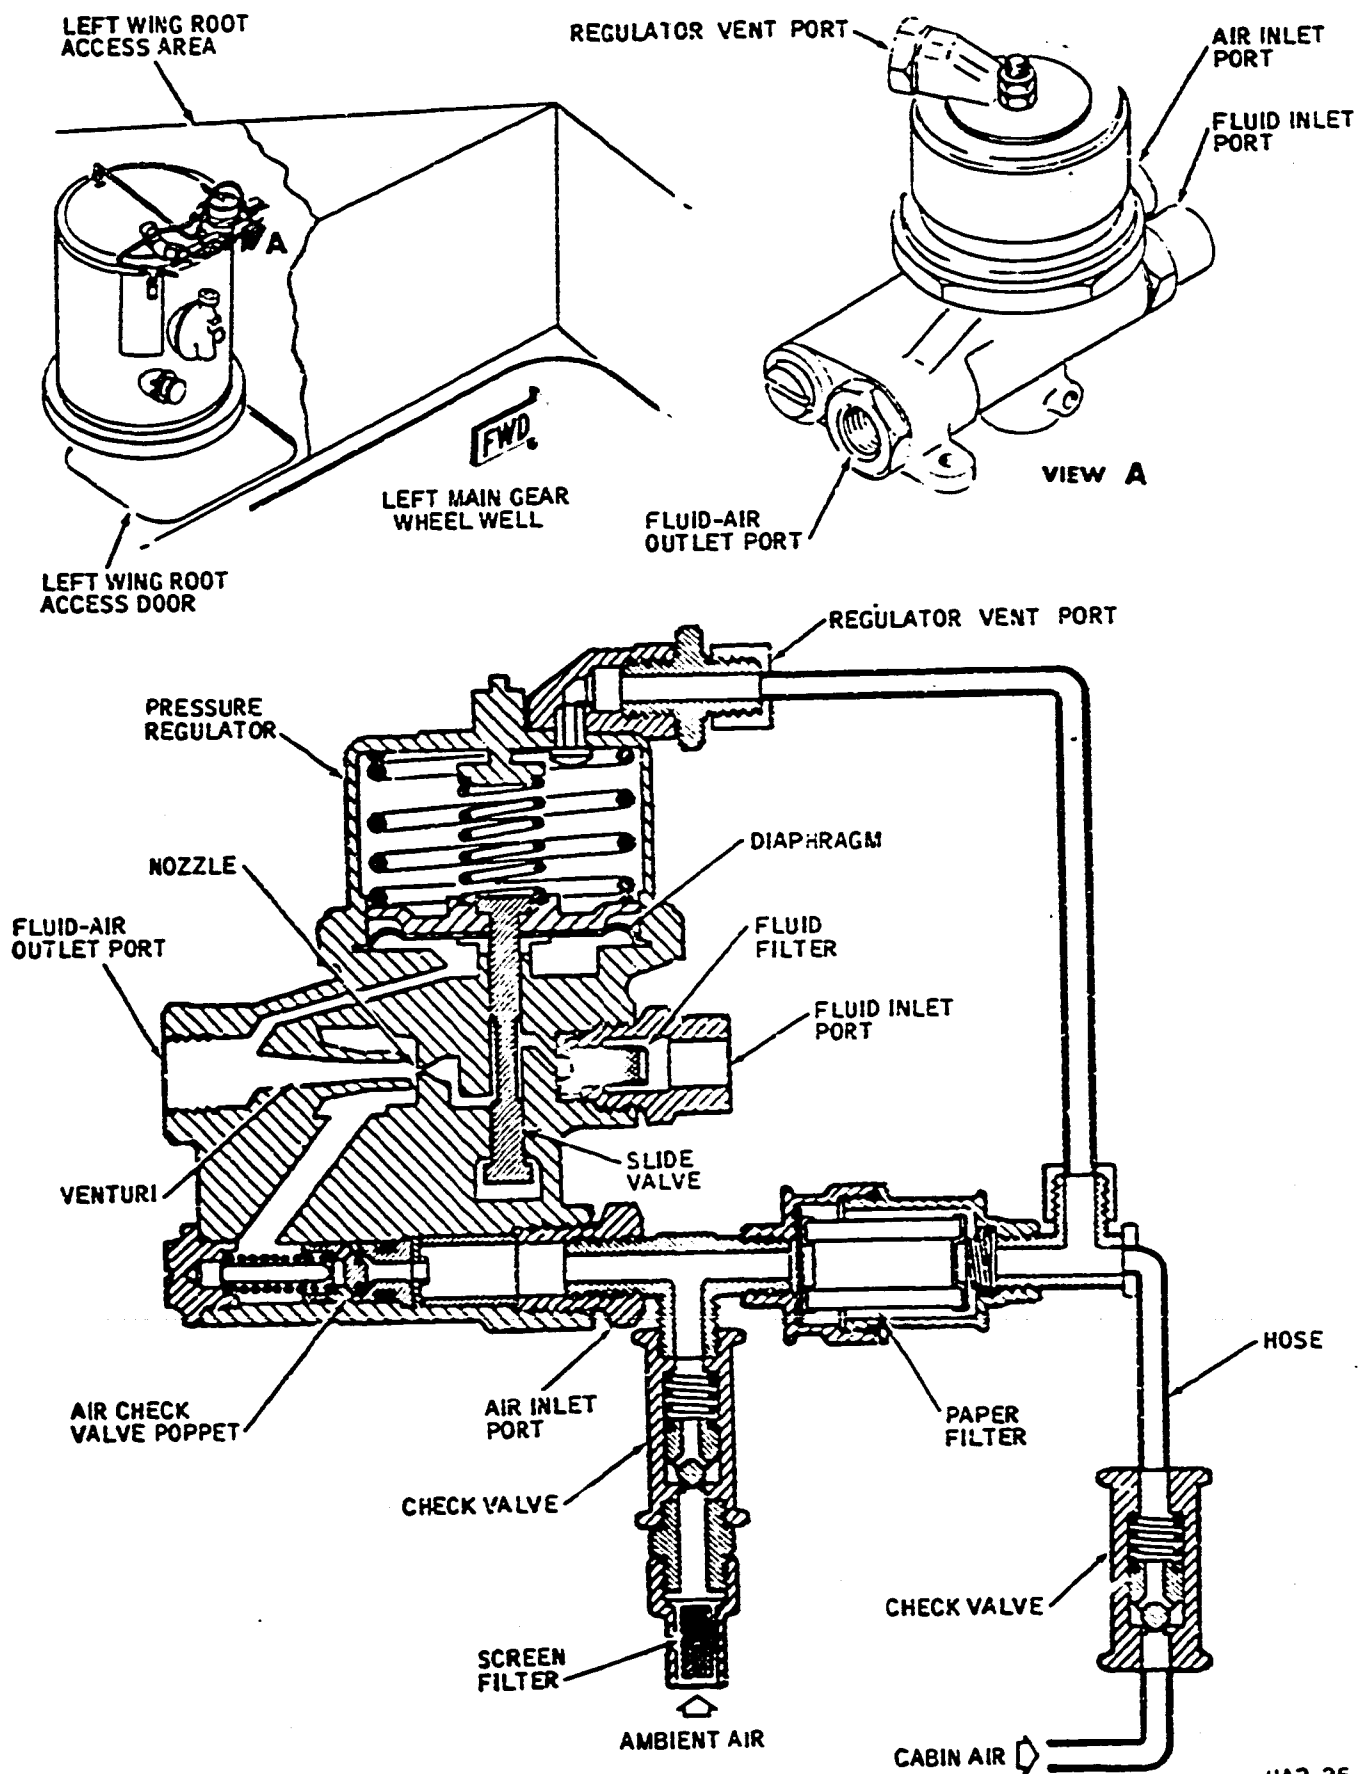

Reservoir Air Pressure  
 Regulator-Aspirator -- Schematic  
 Figure 5

HA2-25

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 1  
 Page 13

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) Hydraulic fluid inlet pressure at the engine-driven hydraulic pumps is improved at high altitude operation by supplying pressurized filtered cabin air to the reservoir regulator-aspirator instead of ambient outside air. Part of the inlet air is diverted by a tee fitting to the regulator chamber to provide a more positive regulating force on the diaphragm than would be obtained with low ambient pressures. The chemically treated paper filter, installed in the regulator-aspirator air supply line from the cabin, removes smoke tars and impurities from the pressurized cabin air. The steel mesh screen filter, installed on the check valve which tees into the regulator-aspirator air inlet port downstream of the paper filter, removes dust, dirt, and foreign particles from the ambient air and serves as a standby to supply filtered air in event the paper filter is clogged.
- (5) As pressure in the reservoir builds up, back pressure is bled from the outlet port to the diaphragm chamber. The reaction on the diaphragm begins to move the slide valve to cut off the fluid flow. At 30 to 35 psi of back pressure, the diaphragm completely closes the slide valve, cutting off the flow of fluid. If there is a regulator malfunction, the aspirator stalls when outlet pressure reaches a maximum of 40 psi.
- (6) The aspirator is capable of pressurizing the reservoir to 30 to 35 psi in approximately 4 minutes at altitudes from sea level to 15,000 feet, when fluid is ported through the nozzle at 0.5 gpm at 3000 psi.

D. Regulator-Aspirator Air Filters (See Figure 6.)


- (1) The regulator-aspirator air filters remove ambient and cabin air impurities from the air which is used to pressurize the main hydraulic system reservoir. The filtering system is composed of two filters. One of which is a paper element filter, installed directly in the cabin air supply line near the regulator-aspirator. The other filter is a fine mesh, screen-type filter, installed on a check valve and positioned at right angles to the regulator-aspirator air inlet port. The screen filter, in addition to providing an immediate supply of ambient air during ground operations, serves as a standby air inlet to preclude air starvation of the regulator-aspirator in the event the paper element filter becomes clogged.

E. Hydraulic Reservoir Relief Valve (See Figure 7.)


- (1) The reservoir relief valve and the air pressure aspirator-regulator keep the reservoir pressurized to normal operating range. The valve relieves excess air pressure which may build up in the reservoir through thermal expansion in the system. The valve has an inlet port and an outlet port and consists, internally, of an inlet port seat and a spring-loaded poppet.
- (2) The relief valve is installed in the overboard vent line downstream of the hydraulic reservoir air bleed valve. In the event that excess pressure builds up in the reservoir, the poppet will start to relieve at



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

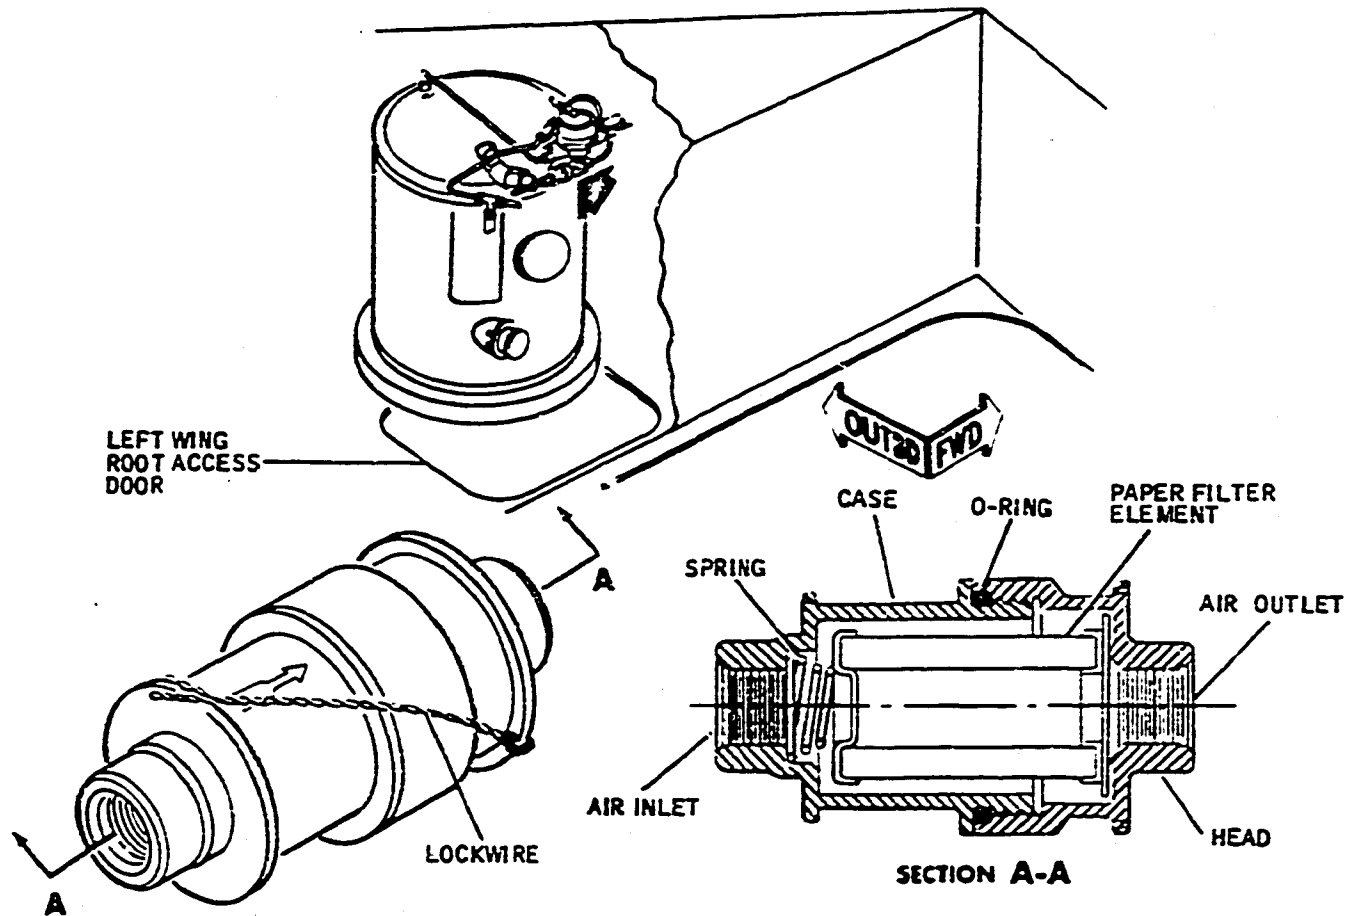

PAPER ELEMENT FILTER

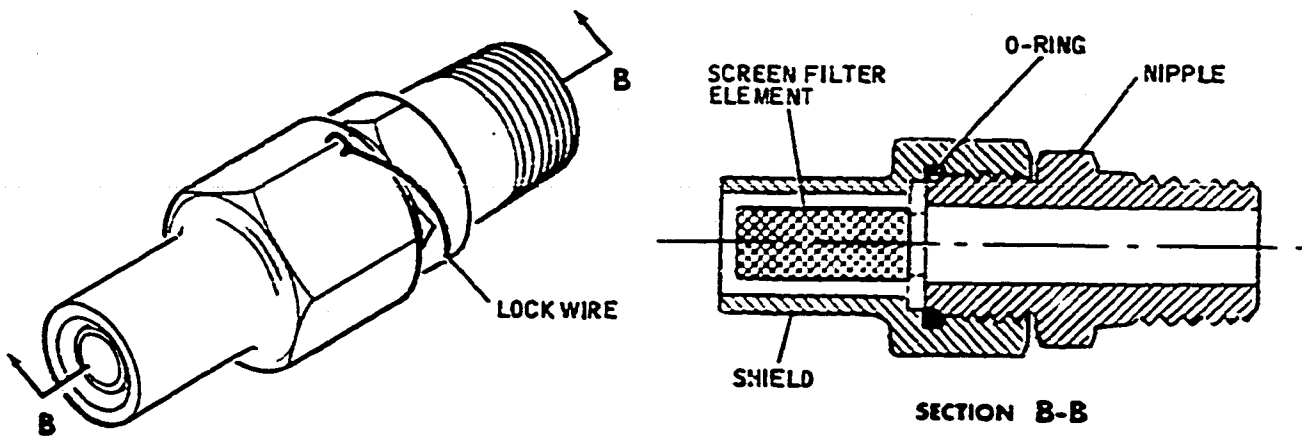

SCREEN FILTER

Regulator-Aspirator Air Filters --  
 Outaway View  
 Figure 6


HA2-35

29-10-0  
 CODE 1  
 Page 15

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

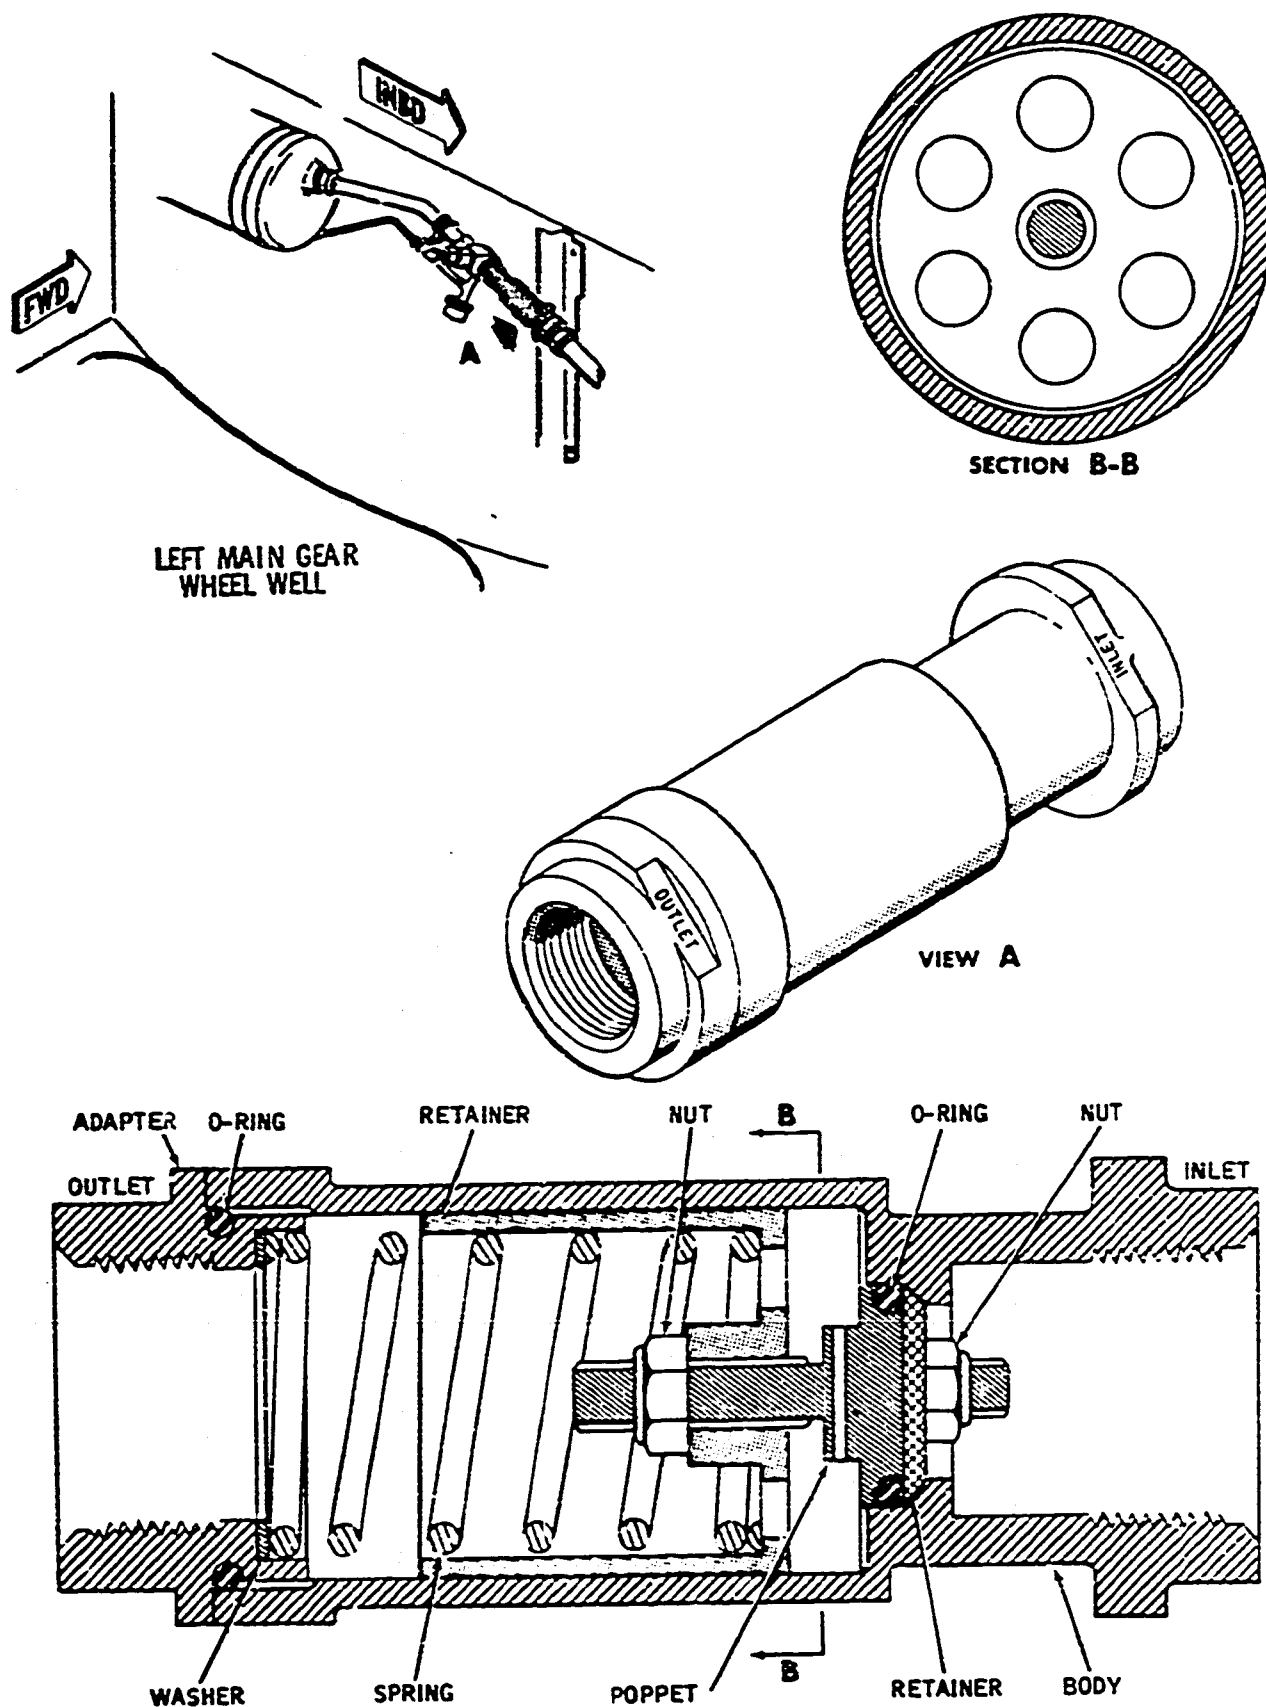

HA2-17

Hydraulic Reservoir Relief Valve  
 Figure 7

29-10-0  
 CODE 1  
 Page 16

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

45 (+5, -0) psi. Full flow of 10 gpm is attained at 80 psi maximum. The poppet reseats at 90 percent of the opening pressure.

F. Hydraulic Reservoir Air Bleed Valve (See Figure 8.)

- (1) The hydraulic reservoir air bleed valve and pressure gage are located on the aft side of the rear spar in the left main gear wheel well, inboard of the hydraulic reservoir air chamber. The bleed valve and gage are installed in the overboard vent line, between the reservoir air chamber and the reservoir relief valve.
- (2) The bleed valve is used to relieve the reservoir air pressure prior to disconnecting lines or components in the hydraulic system. The pressure gage provides a ready indication of the hydraulic reservoir air pressure and is used in conjunction with the bleed valve to indicate the air pressure status.
- (3) The air inflation valve is installed on the same fitting as the bleed valve and pressure gage. The air inflation valve is used to manually charge the reservoir with air or dry nitrogen.


G. Hydraulic Reservoir Vacuum Breaker Check Valve (See Figure 9.)

- (1) The hydraulic reservoir vacuum breaker check valve is installed on the regulator-aspirator mounting bracket, and connects to the tee fitting at the top of the reservoir. The valve is vented to ambient air. The purpose of this valve is to maintain atmospheric pressure in the reservoir, allowing hydraulic fluid to flow to the auxiliary hydraulic pump in the event of a failure of the reservoir pressurization system. The failure, or breakdown, of the pressurization system could cause a fluid starvation at the auxiliary hydraulic pump because of vacuum buildup in the reservoir.

H. Hydraulic Reservoir Air Chamber

- (1) The hydraulic reservoir air chamber is a small, cylindrical tank with a capacity of 700 cubic inches. It has two ports, an inlet port at the bottom of the chamber and an outlet port in one end of the chamber. The inlet port mounting boss is fitted with a drain plug. The air chamber is installed on the aft side of the rear spar in the left main gear wheel well, inboard and above the hydraulic reservoir filler assembly. Access to the air chamber is through the left main gear inboard door.
- (2) The air chamber provides for greater fluid capacity in the hydraulic reservoir by providing air and foam space for the reservoir in a separate container. Air pressure in the chamber is maintained by the regulator-aspirator and the air relief valve. The air pressure in the chamber and reservoir can be relieved, when desired, by the air bleed valve located downstream of the chamber. The air chamber is mounted higher than the reservoir filler assembly, to prevent overfilling of the reservoir from reducing the available air space and to prevent fluid from being vented overboard through the reservoir relief valve.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

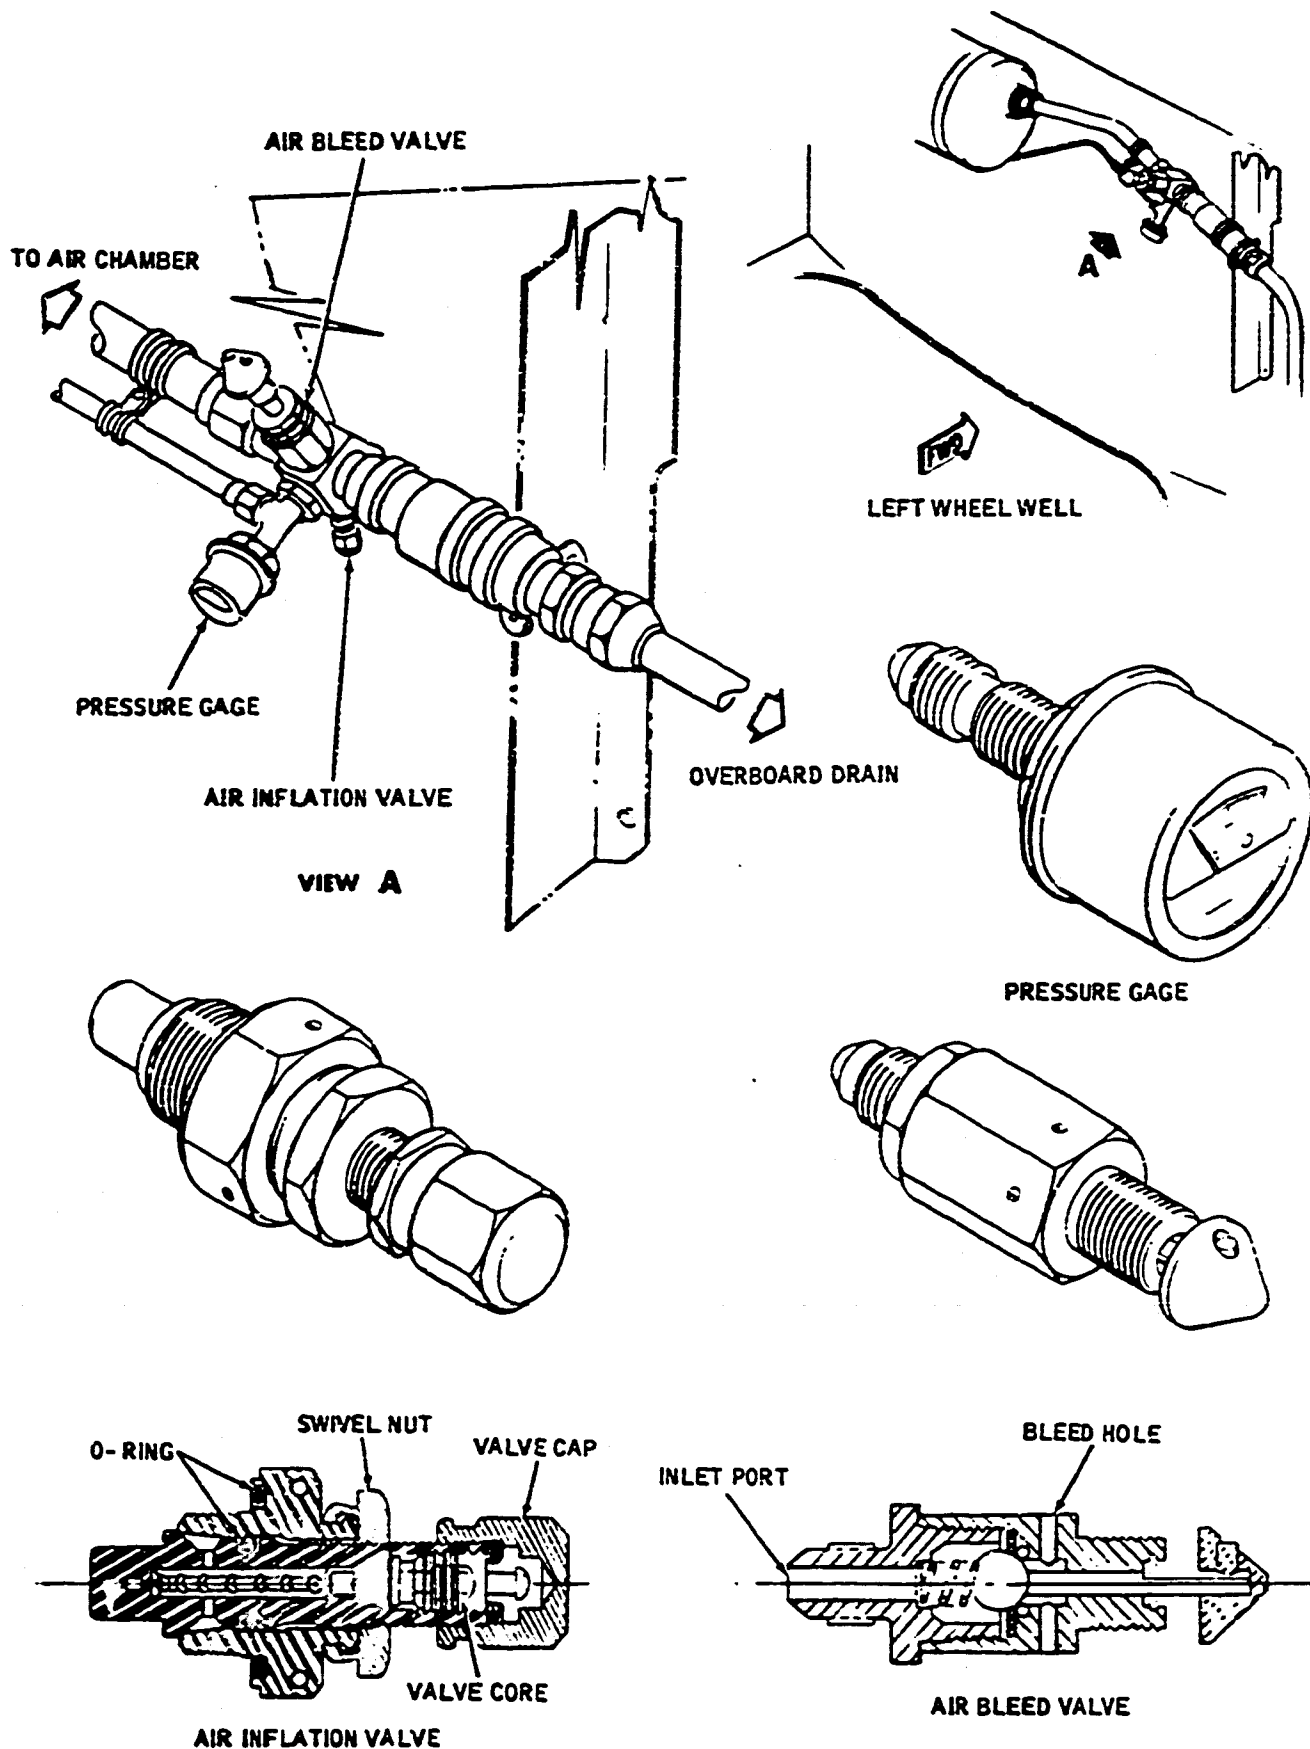

Reservoir Air Bleed Valve, Air Inflation  
 Valve, and Pressure Gage  
 Figure 8

HA2-32

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

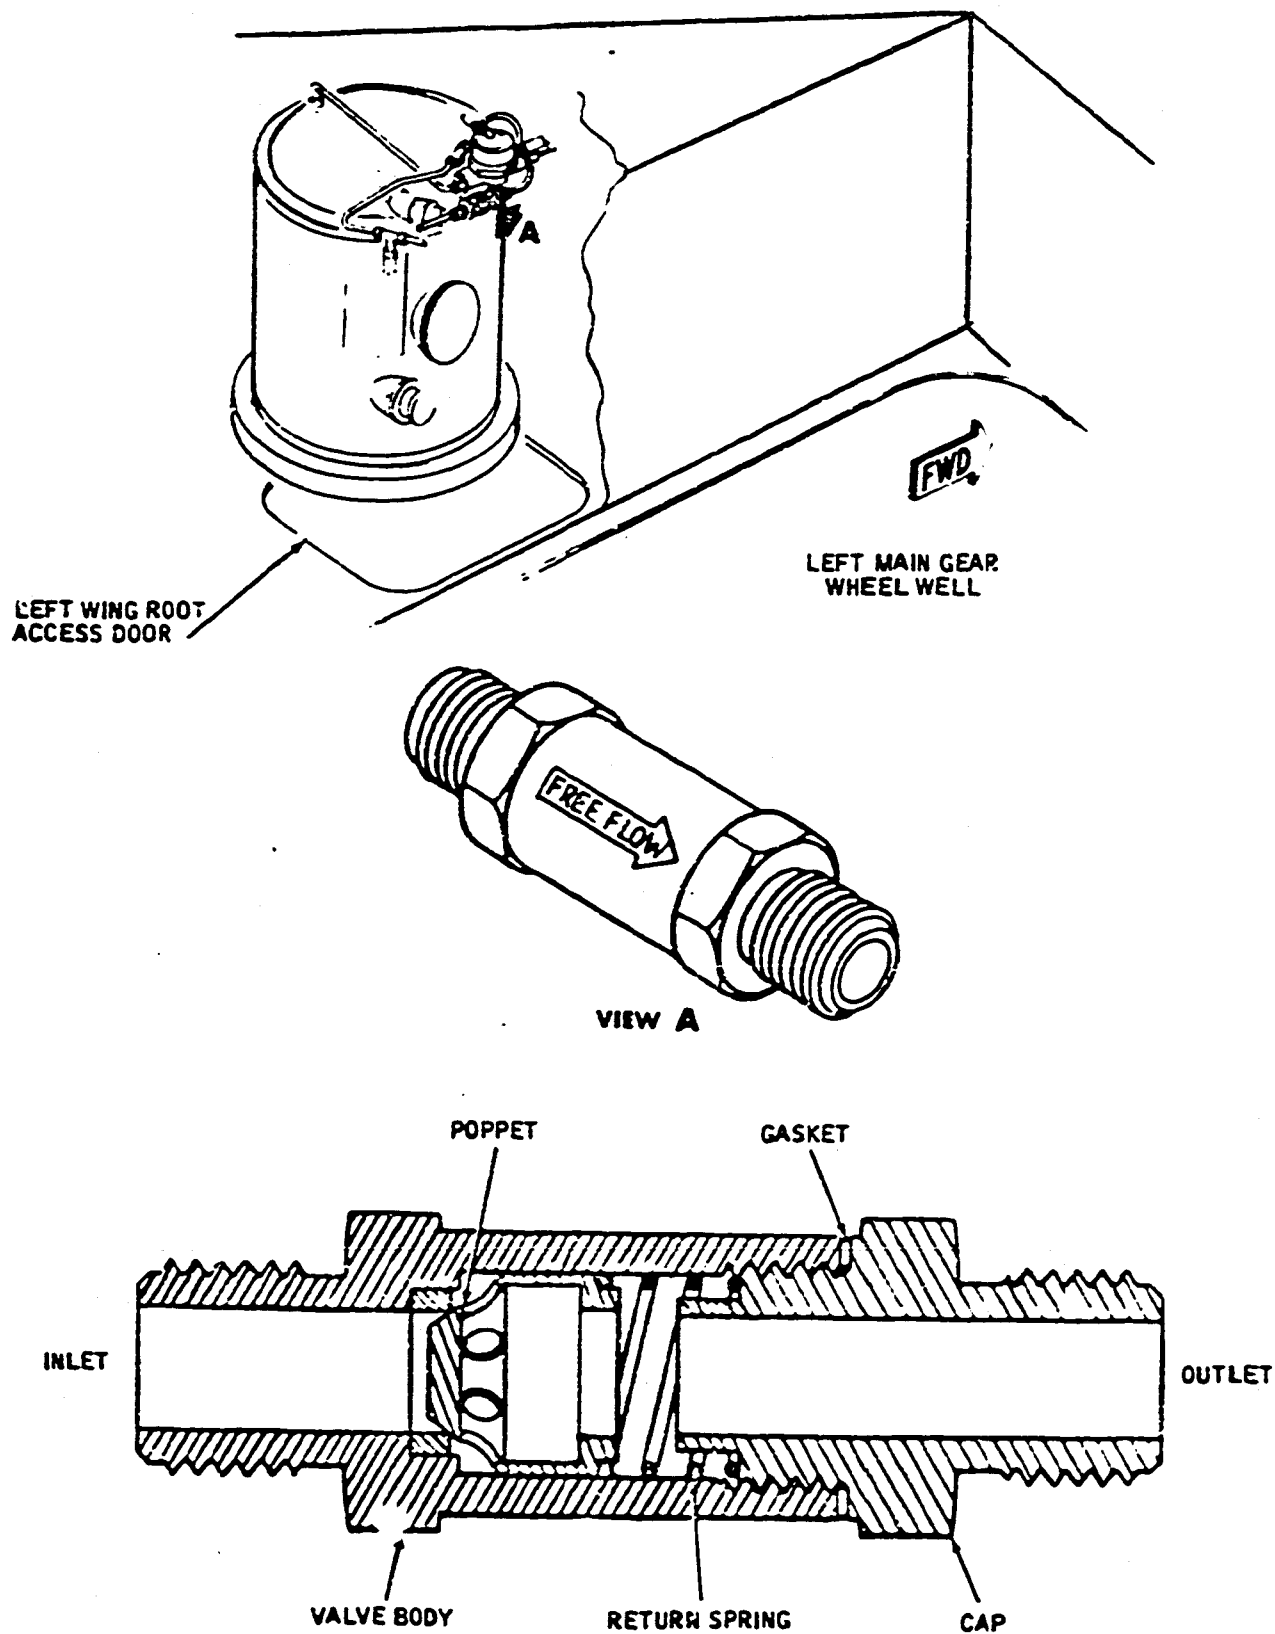

Hydraulic Reservoir Vacuum Breaker Check Valve  
Figure 9

Jun 15/67

Printed in U.S.A.

HA2-33

29-10-0  
CODE 1  
Page 19

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


I. Hydraulic Reservoir Port B Return Check Valve (See Figure 10.)

- (1) The reservoir port B return check valve is installed in port B of the reservoir to prevent reverse flow of hydraulic fluid from the reservoir to the return line. The check valve is located on the reservoir in the left wing root and is accessible through the left wing root access door.
- (2) Externally and internally, the port B check valve is a standard-type check valve with a 1500-psi rating. A nominal pressure of approximately 8 psi unseats the poppet, permitting fluid to flow through the valve. When the reservoir pressure exceeds the return line pressure, the poppet will seat and reverse fluid flow will be prevented.


J. Engine Hydraulic Fire Shutoff Valve (See Figures 11 and 12.)

- (1) The engine hydraulic fire shutoff valve is a gate-type, mechanically controlled valve, installed in the supply line of each engine-driven hydraulic pump. The engine hydraulic fire shutoff valve is actuated from the flight compartment to prevent the flow of hydraulic fluid into the engine section.
- (2) The engine hydraulic fire shutoff valve is mounted on a 2-piece channel bracket which is installed inside the wing leading edge, aft of the firewall of each inboard pylon. Access to the valve is through the access door located on the lower side of the wing leading edge, outboard of either the left or right inboard pylon. Each valve is located approximately 30 inches inboard of the access door.
- (3) Internally, the valve consists of a valve arm, valve arm link, cam plate, and slide blade. The valve arm link attaches to the valve arm and is allowed to swivel through an arc in relation to the valve arm. The link has a stop that will contact the arm when the two have traveled to the valve closed, full overtravel position. In the full open pretravel position, the link contacts the arm stop.
- (4) A roller attached to the end of the link rides in, and extends through, a J-shaped slot in the cam plate. The rotation of the valve arm causes the link roller to follow the cam slot, allowing the arm and link to move through independent arcs.
- (5) The slide blade (gate of the valve) is slotted near the one end and also receives the link roller extending through the cam slot. The slide blade is positioned parallel to the cam plate and is guided by two grooves in the housing. This will allow the blade to open or close through porting of the valve by the action of the arm and link. The cam plate is pinned to the valve shaft, securing it rigidly in two position in grooves in the housing. A pin-indicator is provided to relate valve position to a reference plate placarded open and closed.
- (6) The engine hydraulic fire shutoff valves are cable actuated by the fire control handles, located on the overhead switch panel in the flight compartment. When the fire control handle for either inboard engine is

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

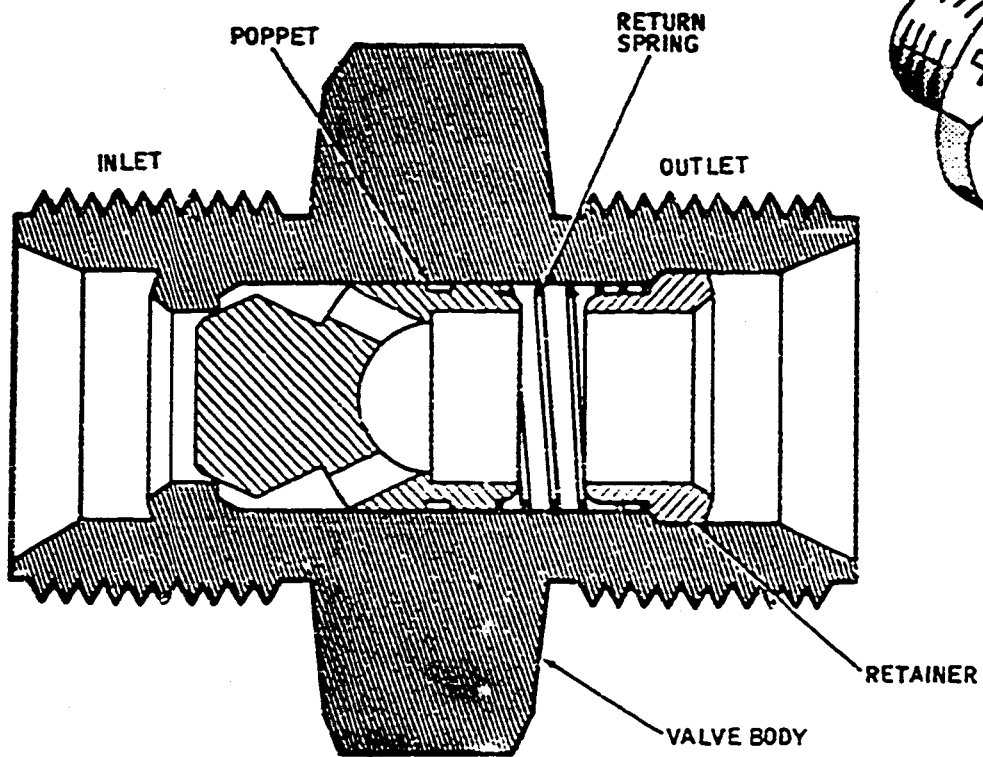

MINIATURE CHECK VALVE

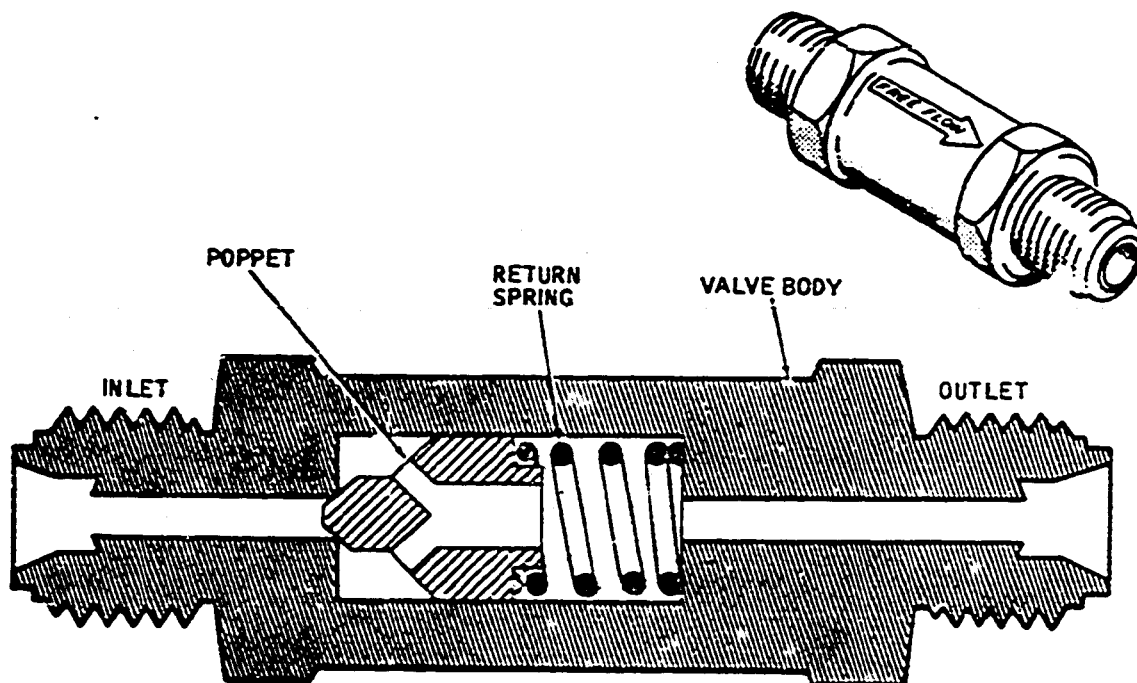

STANDARD CHECK VALVE

Hydraulic Check Valves -- Typical  
 Figure 10


HA2-18A

29-10-0  
 CODE 1  
 Page 21

Oct 1/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


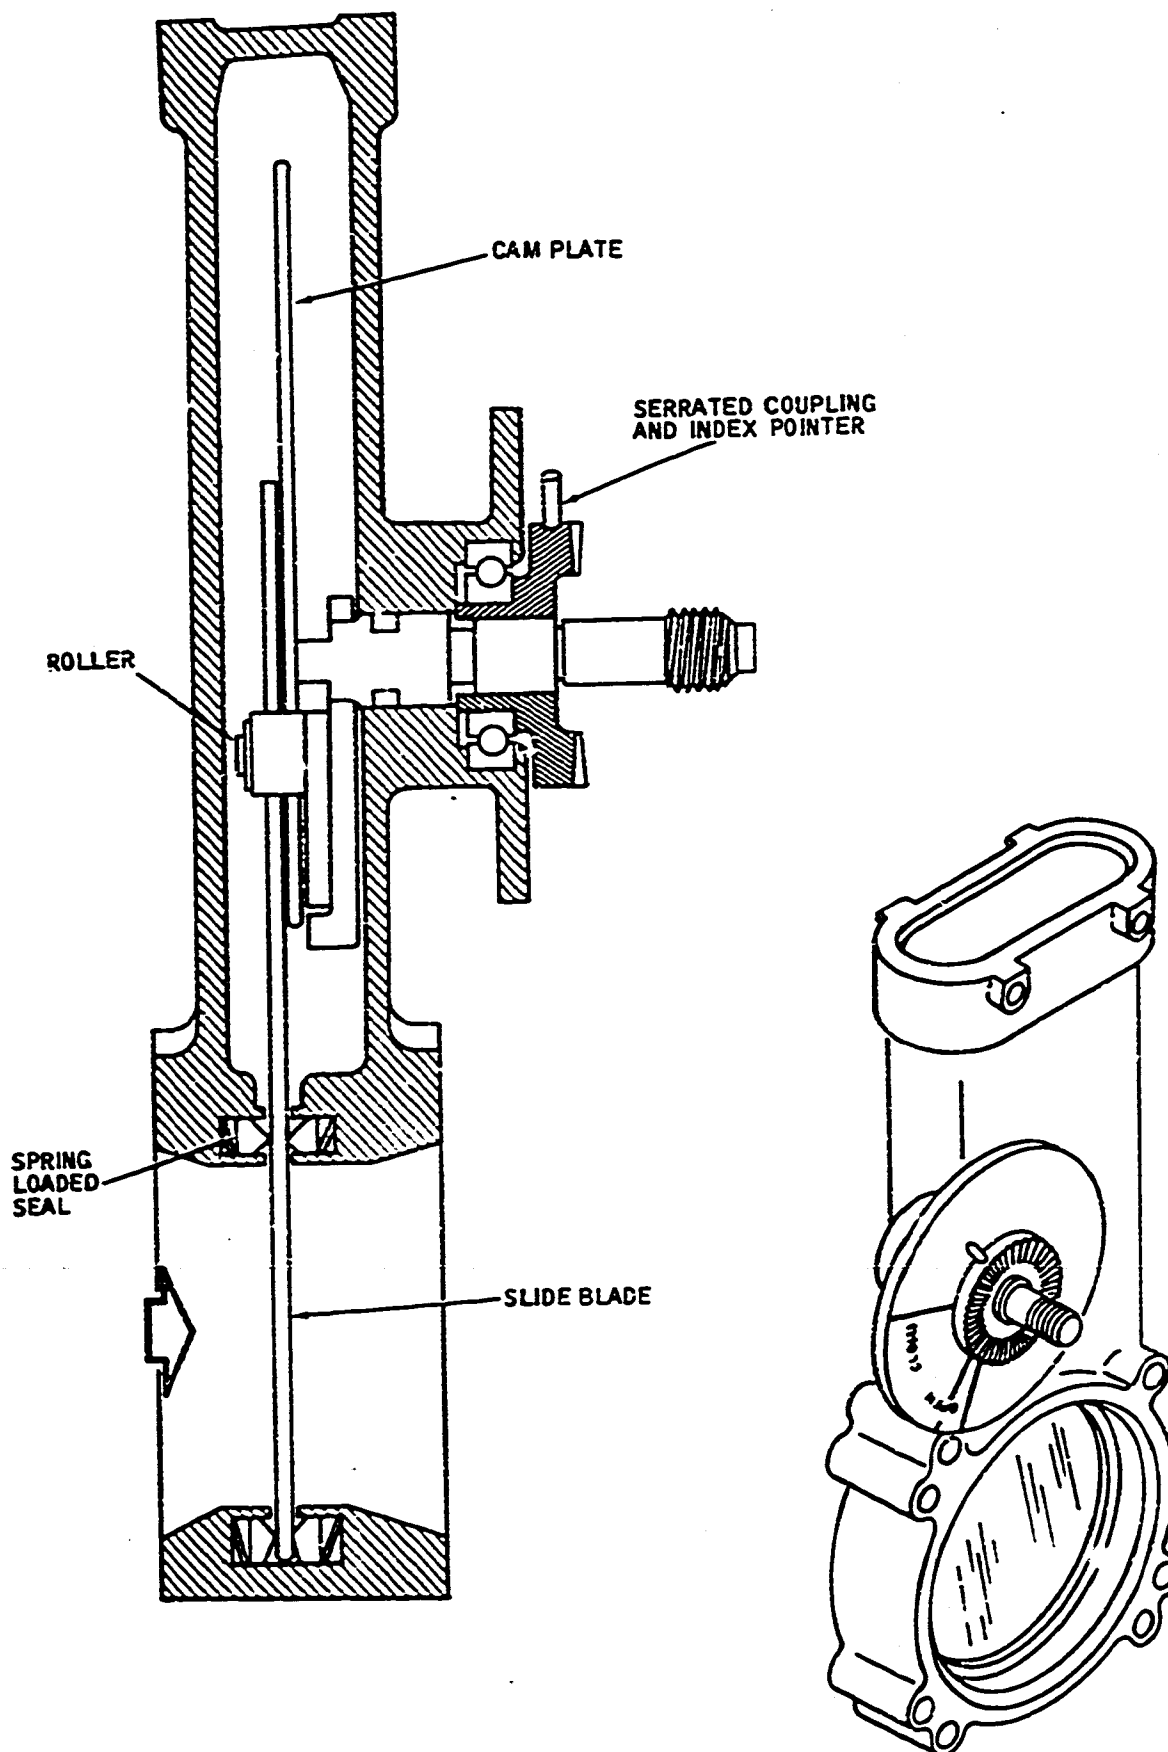


Engine Hydraulic Fire Shutoff Valve -- Schematic  
Figure 11

HA2-2209



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

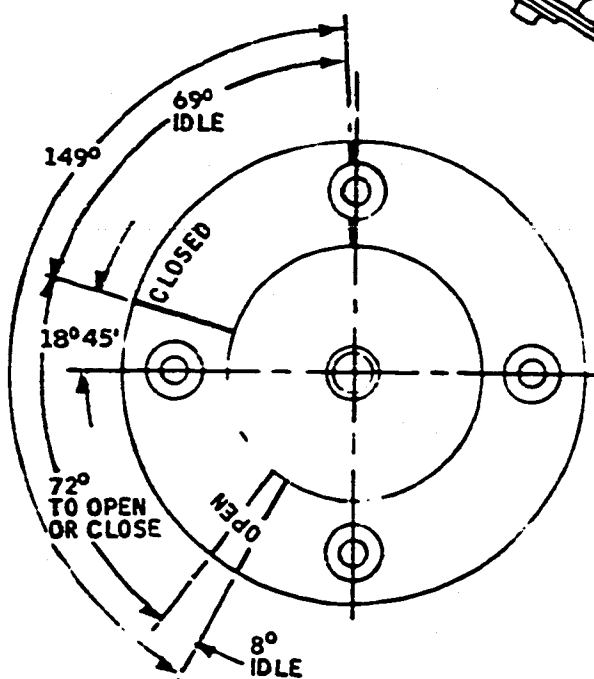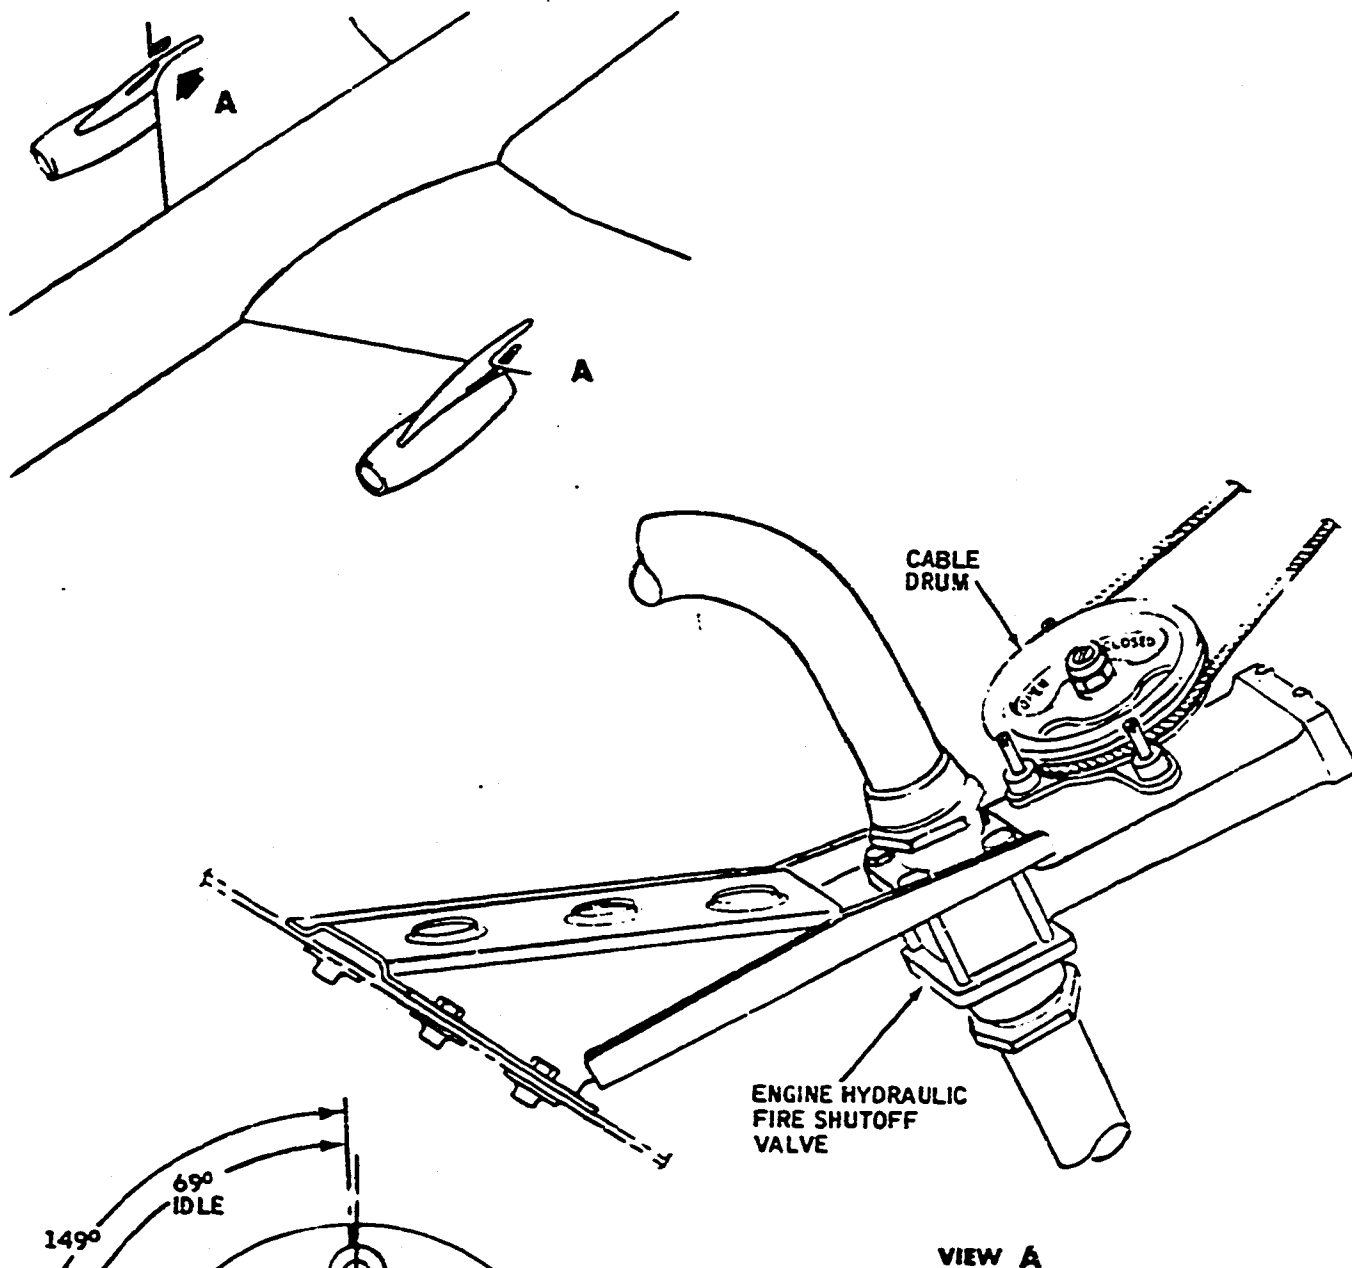

VALVE POSITION DIAGRAM

Engine Hydraulic Fire Shutoff Valve  
 Figure 12

HA2-22

29-10-0  
 CODE 1  
 Page 23

Jun 15/67

Printed in U.S.A.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

moved, the cable system rotates the drum which is attached to the corresponding shutoff valve shaft. This extends the valve blade into the fluid passage to block the flow of fluid. The valve operates from open to close by clockwise rotation of the cable drum. The valve gage will idle during the first 8 degrees of rotation of the cable drums, and then will close in the next 72 degrees. The cable drum will continue to rotate the shaft for an additional 69 degrees after the gate valve is closed, locking it overcenter. Total travel of the cable drum is 149 degrees.

K. Engine-Driven Hydraulic Pump (See Figures 13 and 14.)

- (1) The two, single-stage, variable-displacement, cam-actuated, pressure-compensated, engine-driven hydraulic pumps are installed, one each, on the inboard engines. The pump incorporates a solenoid-operated bypass feature for reducing the output pressure to zero psi. Each bypass valve solenoid is controlled by a corresponding engine hydraulic pump control switch in the flight compartment. The switch for the hydraulic pump on engine 2 is placarded left, on, and bypass. The switch for engine 3 is placarded right, on, and bypass. When a switch is placed in the bypass position, the bypass valve for that pump is actuated and the pump pressure is reduced to zero psi. When the switch is placed in the on position, the bypass valve is open and the pump operates normally in a pressure range of 2850 to 3050 psi. The pump provides a continuous, nonpulsating flow of hydraulic fluid, under pressure, to the hydraulic manifolds for distribution throughout the hydraulic system.
- (2) The heart of the pump is a revolving cylinder barrel which contains nine pistons. By means of a hold-down plate and hydraulically balanced shoes, the pistons are supported on an inclined cam plate which causes them to reciprocate as the barrel revolves. The hold-down plate ensures positive stroking of the pistons during the suction stroke. The angle of the cam plate is varied by moving the trunnioned hanger on which it is mounted, thereby changing the displacement of the pump. The hanger, in turn, is controlled by a pressure compensator.
- (3) Oil passes through the main inlet and then through porting in the end of the cylinder barrel to the cylinders from which the pistons are being withdrawn. As the cylinder barrel revolves, these pistons are forced into their bores and discharge high-pressure oil through porting in the end of the barrel to the outlet port.
- (4) The cylinder barrel, supported by a radial bearing, is driven by an internal shaft which passes through the trunnioned hanger. A hydraulically balanced, face-type, carbon shaft seal is used to assure optimum sealing. Sealing pressure increases as case pressure increases, and the seal adjusts itself to compensate for any wear which takes place.
- (5) The pressure compensator regulates the volume delivered in accordance with the demand of the system and maintains the predetermined pressure. When the pressure is less than the spring load, the spring moves the spool to vent oil in the stroking cylinder to the case. The stroking

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

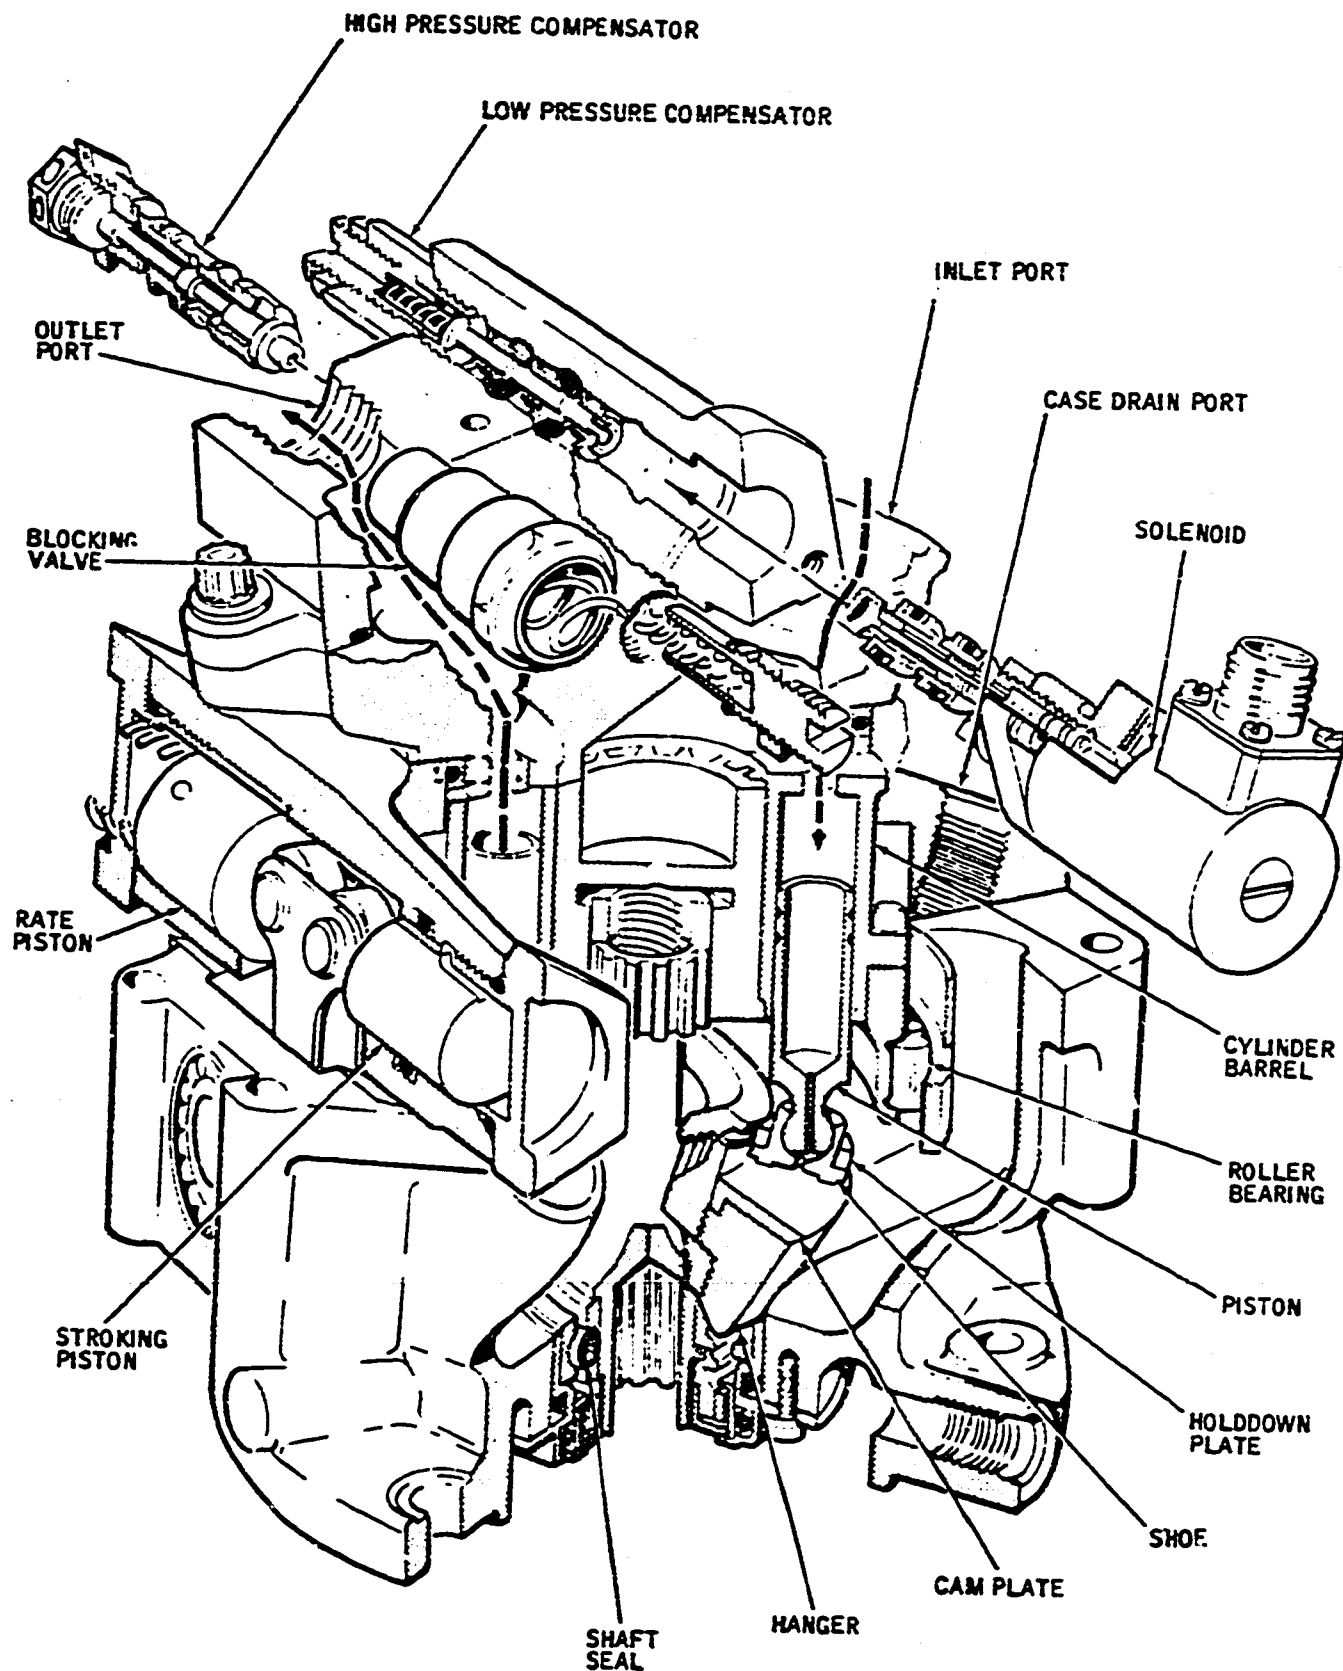

Engine-Driven Hydraulic Pump -- Cutaway View  
Figure 13


HA2-21

29-10-0  
CODE 1  
Page 25


Jun 15/67

Printed in U.S.A.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

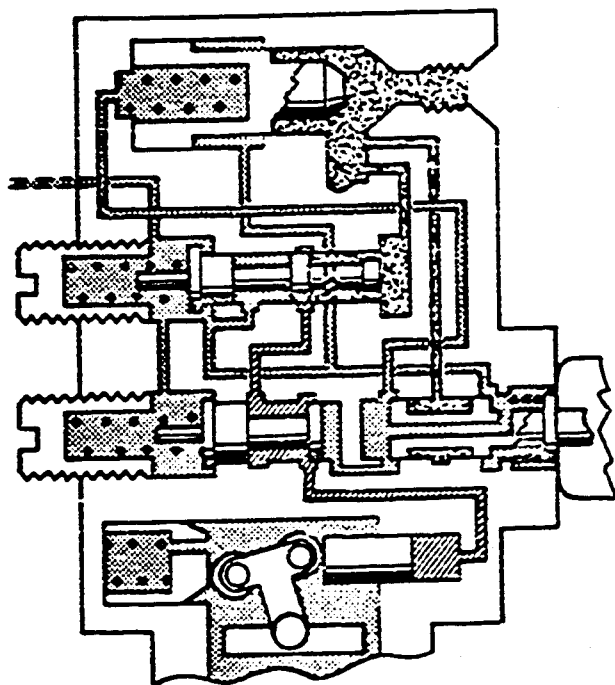

**A. FULL PRESSURE, NO FLOW CONDITION**  
 BLOCKING VALVE OPEN, 3,000 PSI  
 FLUID AVAILABLE, NO DEMAND.

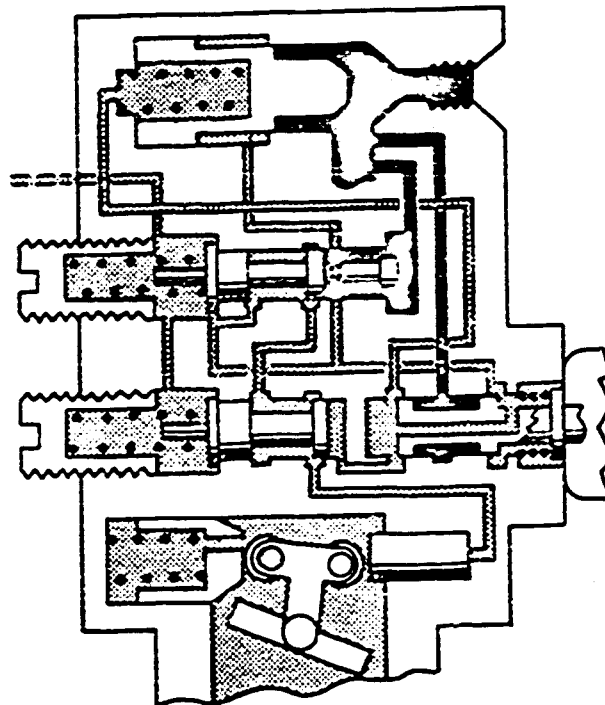

**B. FULL FLOW CONDITION**  
 BLOCKING VALVE OPEN, HANGER "ON STROKE" 3,000  
 PSI FLUID FLOWING FROM PUMP.

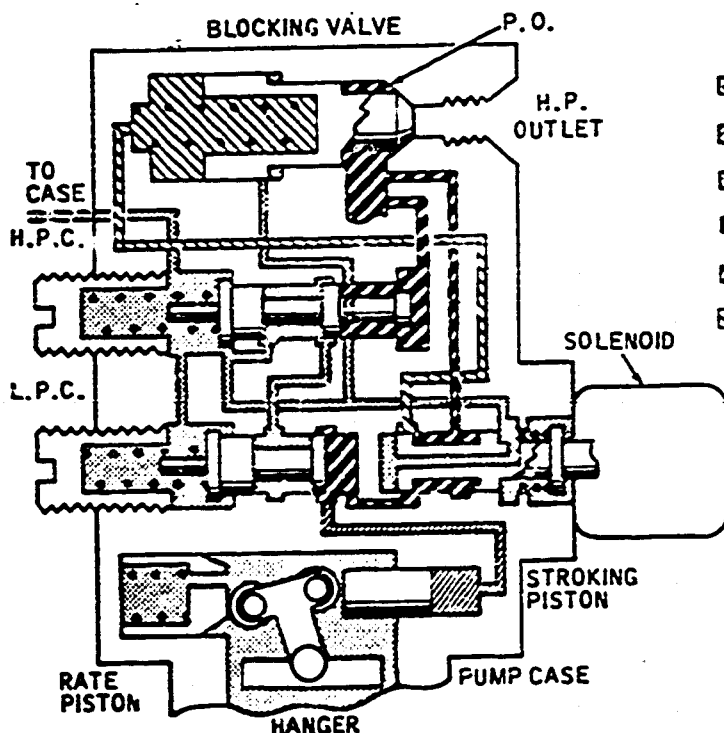

**C. DEPRESSURIZED AND BLOCKED CONDITION**  
 SOLENOID ENERGIZED, BLOCKING VALVE CLOSED,  
 PUMP COMPENSATED AT 500 PSI.

**KEY**

- COMPENSATED PRESSURE: 3,000  $\pm$  50
- CONTROL PRESSURE: 200-300
- CASE PRESSURE: 45-55
- FULL FLOW PRESSURE: TO 2,950
- DEPRESSURIZED PRESSURE: 400-500
- BLOCKING VALVE PRESSURE: 400-500
- P.O. = PUMP OUTLET
- H.P.C. = HIGH PRESSURE COMPENSATOR
- L.P.C. = LOW PRESSURE COMPENSATOR

Engine-Driven Hydraulic Pump Pressure  
 Flow -- Schematic  
 Figure 14

HA2-19

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

piston then retracts and a spring load on the hanger moves it to a greater angle and increases the volume pumped. The axial thrust of the pistons against the cam plate during power stroke is balanced hydraulically. Oil, at system pressure, is admitted through holes in the piston and shoe to an undercut area in the face of the piston shoe. The pressure applied to the undercut area, which is slightly less than the piston area, effectively balances the forces so that the shoe is supported on an oil film at all times. Balance is controlled to such a degree that there is no excessive leakage, and high volumetric efficiency is maintained.

- (6) The axial thrust of the cylinder barrel is also balanced hydraulically against the port plate.
- (7) Because of these features, the axial thrust of the pistons is transferred hydraulically, eliminating the need for antifriction thrust bearings. This increases the reliability factor, if contamination or other adverse conditions exist.
- (8) The pump functions as a standard, pressure-compensated pump, when the bypass solenoid is not energized. Energizing the solenoid allows the pump to compensate at a reduced, controlled pressure of approximately 500 psi. Also incorporated in the cap is a blocking valve. The valve shuts off the discharge flow from the pump, when the 500 psi compensating valve takes over as a result of the solenoid being energized. Hence, depressurizing the pump permits operation with the pump completely feathered at approximately 1/2 drive torque required at 3000 psi. The blocking valve is automatically controlled by the depressurizing valve. When the solenoid is energized, the blocking valve prevents flow from the pump discharge port. When the solenoid is deenergized, the blocking valve automatically opens as the pump builds up pressure to match the system demand.

L. Engine-Driven Hydraulic Pump Check Valves (See Figure 10.)

- (1) Two check valves, rated at 3000 psi, are installed in the lines from each engine-driven hydraulic pump. One check valve is installed in the pressure line and the other is in the case drain line. The check valves in the pump pressure lines prevent reverse flow of hydraulic fluid through the pump, when the pump is inoperative or when external hydraulic pressure is supplied to the system. Access to the valves can be gained through an access door in the forward right apron of each inboard pylon. The valves are mounted on the exterior wall of the inlet box by means of the bulkhead fittings and retaining nuts.
- (2) Normal operating pressure will unseat the poppet, and fluid will flow through the valve. When pressure downstream of the valve exceeds pressure from the pump, the pressure, with the aid of the return spring, will seat the poppet. This prevents reverse flow of hydraulic fluid through the pumps.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


M. Engine-Driven Hydraulic Pump Case Drain Filter (See Figure 15.)

- (1) A line-type, micron filter, for use in a low-pressure hydraulic system, is installed in the engine-driven hydraulic pump case drain return line between the pump flow check valve and the hydraulic system reservoir. The case drain filter is installed on the aft surface of the rear spar opposite the leading edge of the inboard flap assembly. One filter is used for each engine-driven pump. Access is gained to the filter by lowering the flaps. A second check valve is installed adjacent to the filter in the downstream side of the case drain return line.
- (2) Externally, the filter is approximately 5 inches high and 2 inches wide, with ports marked inlet and outlet. The bowl is cylindrical in shape, with hex-shaped wrench flats at the lower end. A self-sealing, magnetic drain plug is installed in the bottom end of the filter bowl. The filter element is made of chemically treated paper.


N. Dual Filter and Relief Valve (See Figure 16.)

- (1) The hydraulic power system dual filter and relief valve consists of two filters and two relief valves installed in the same body. The unit filters the hydraulic fluid from the two engine-driven hydraulic pumps, and the pressure relief valves assure that excessive pressures do not build up in the pressure line from the pumps. The unit is located in the left main gear wheel well on the lower portion of the rear spar, approximately 1 foot outboard of the centerline shear web.
- (2) The unit consists of a casting with a flange-mounted pressure inlet port on each end. Two pressure outlets are located on the top of the casting. One outlet, centrally located, is the main pressure outlet to the system selector valve. The other, located to the left of the selector valve port, is the pressure outlet to the air pressure regulator-aspirator. The return outlet port for the relief valve portion of the unit is located on the center of the aft face of the body, canted upward. The nose gear return line is connected to a check valve installed in a return line port, located between the two filter bowls.
- (3) The pressure relief valves are located behind the pressure inlet ports and are connected to the return outlet port of the unit. The inlet from the nose gear return line is routed through the casting to the return outlet port.
- (4) If either of the filter elements becomes clogged, pressure above 3300 psi at the inlet port will unseat the poppet. Pressure above 3500 psi will allow full flow of 22.5 gpm to flow to the return port of the unit and back to the reservoir. The relief valves will reseal at approximately 3000 psi.
- (5) A check valve is installed in the system selector valve port to prevent reverse flow of pressure through the filter during auxiliary hydraulic pump operation.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

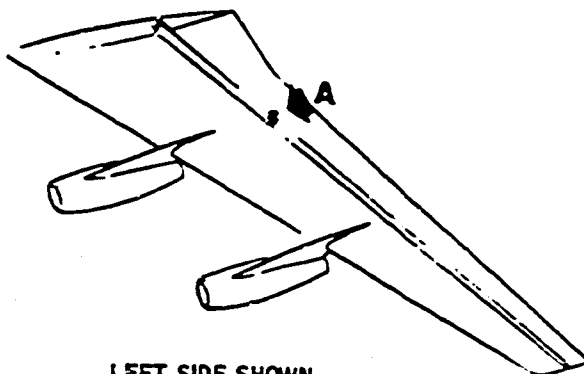

LEFT SIDE SHOWN  
RIGHT SIDE OPPOSITE

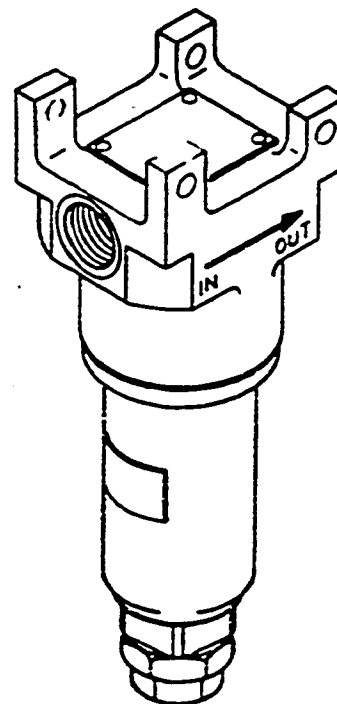

VIEW A

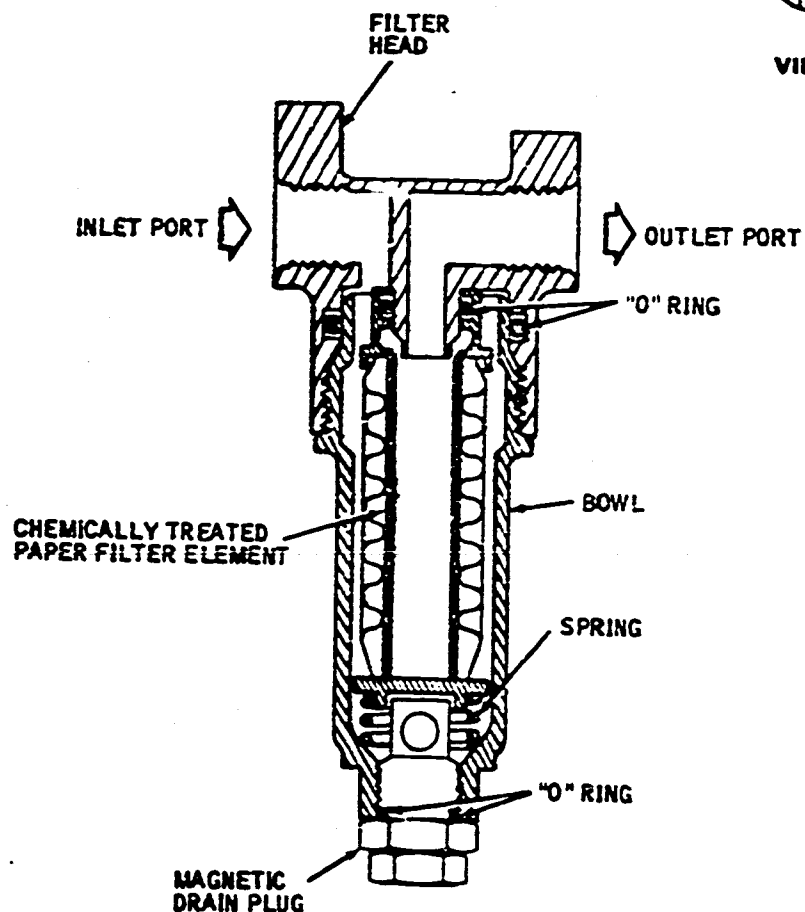

HA2-31




Engine Driven Hydraulic Pump Case Drain  
Filter -- Cutaway View  
Figure 15

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 1  
Page 29

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

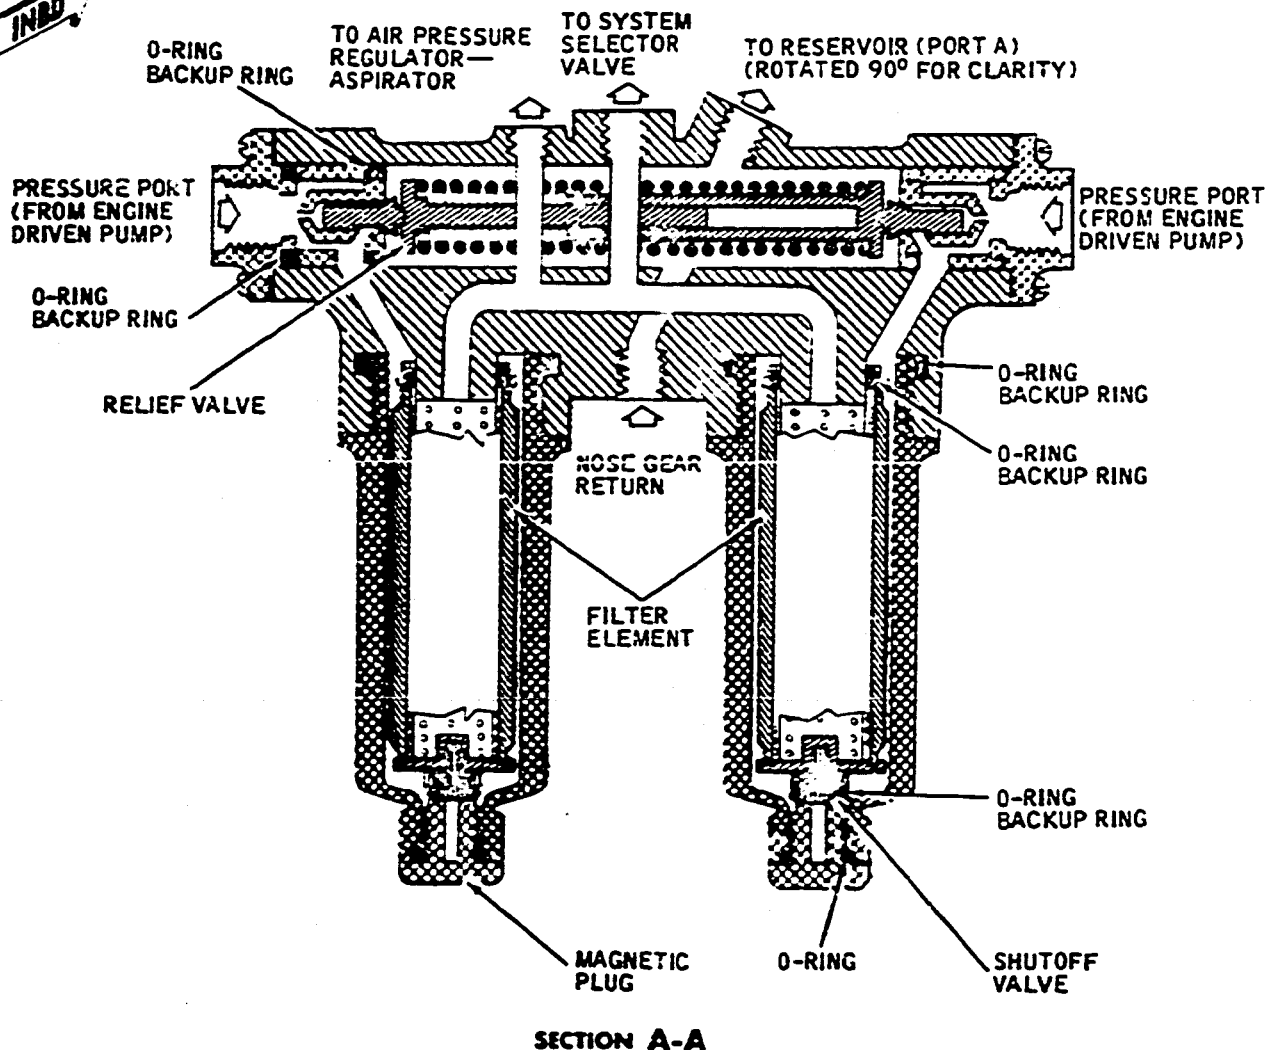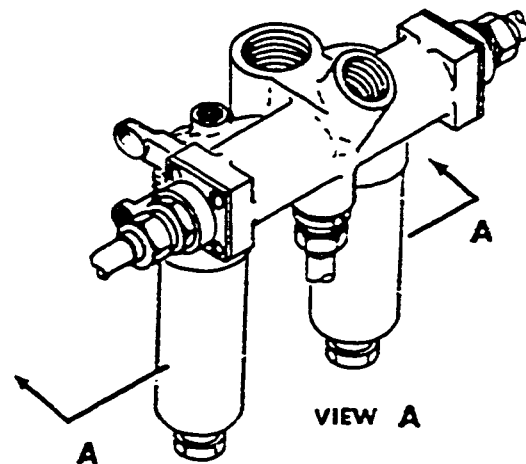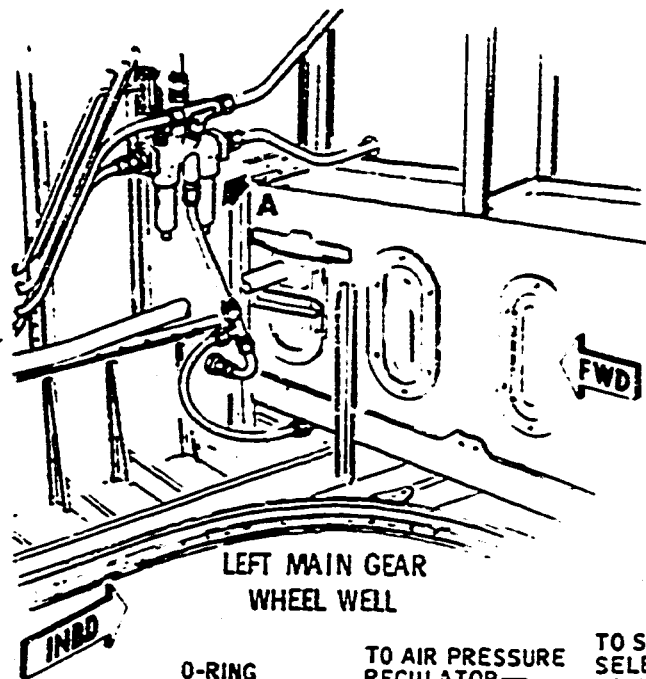

SECTION A-A

HA2-20

Dual-Filter and Relief Valve -- Cutaway View  
 Figure 16



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


O. System Selector Valve (See Figures 17 and 18.)

- (1) The system selector valve is a 3-position valve which permits directional control of fluid under pressure. The valve is installed on the left hydraulic power manifold and is accessible through the left main gear inboard door.
- (2) The selector valve pressure-to-system port and the return port are directly ported to the manifold. The engine pump pressure enters the valve through a port on the large end of the valve, and the auxiliary pump inlet and alternate ports are located at the top, toward the aft end of the valve. The valve control crank is attached to a push-pull rod and a cable sector.
- (3) Operation of the system selector valve is controlled by a lever located on the right side of the system engineer's control pedestal. When the control lever is moved to the selected position, the cable system, through the sector and crank, operates the valve positioning lever to drive the slide spool assembly to the selected position. When the control lever is placed in the general system (normal) position, the selector valve is actuated, causing hydraulic fluid to enter the valve through the system pressure port. The fluid is then directed into the manifold through the pressure-to-system port. In the general system (normal) position, fluid from the auxiliary pressure port is also routed to the pressure-to-system port. In the bypass/general system position, the selector valve ports engine pump pressure into the manifold through the return port. In this position, the auxiliary pump pressure is ported to the general system. In the general system/main gear down and flaps position, pump pressure is routed through the alternate port, at the top of the valve, for alternate operation of the flaps and the landing gear downlock cylinders. Internal leakage provides lubrication for the moving parts of the valve.

P. Left Hydraulic Power Manifold (See Figure 19.)

- (1) The left hydraulic power manifold distributes fluid pressure from the hydraulic pump (any one of the three pumps), through control valves to the various airplane hydraulic subsystems. The left power manifold is located overhead in the left wheel well. Access to the left manifold is through the left main gear inboard door.
- (2) Three valve-mounting pads are provided on the manifold. The system selector valve-mounting pad is located on top of the manifold body. Of the two remaining mounting pads, located on the underside of the manifold, the inboard pad is capped and not used. The outboard mounting pad is used for the bogie swivel unlock control valve. Four ports are provided on the inboard end of the manifold. Two of these ports are pressure outlet ports: one, located on the aft face of the manifold, is for the flight controls; and, the other, located on the underside of the manifold, ports fluid to the priority valve, which, in turn, ports fluid to the nose gear and the right power manifold. The other two ports are return outlets, located immediately forward of the manifold pressure


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

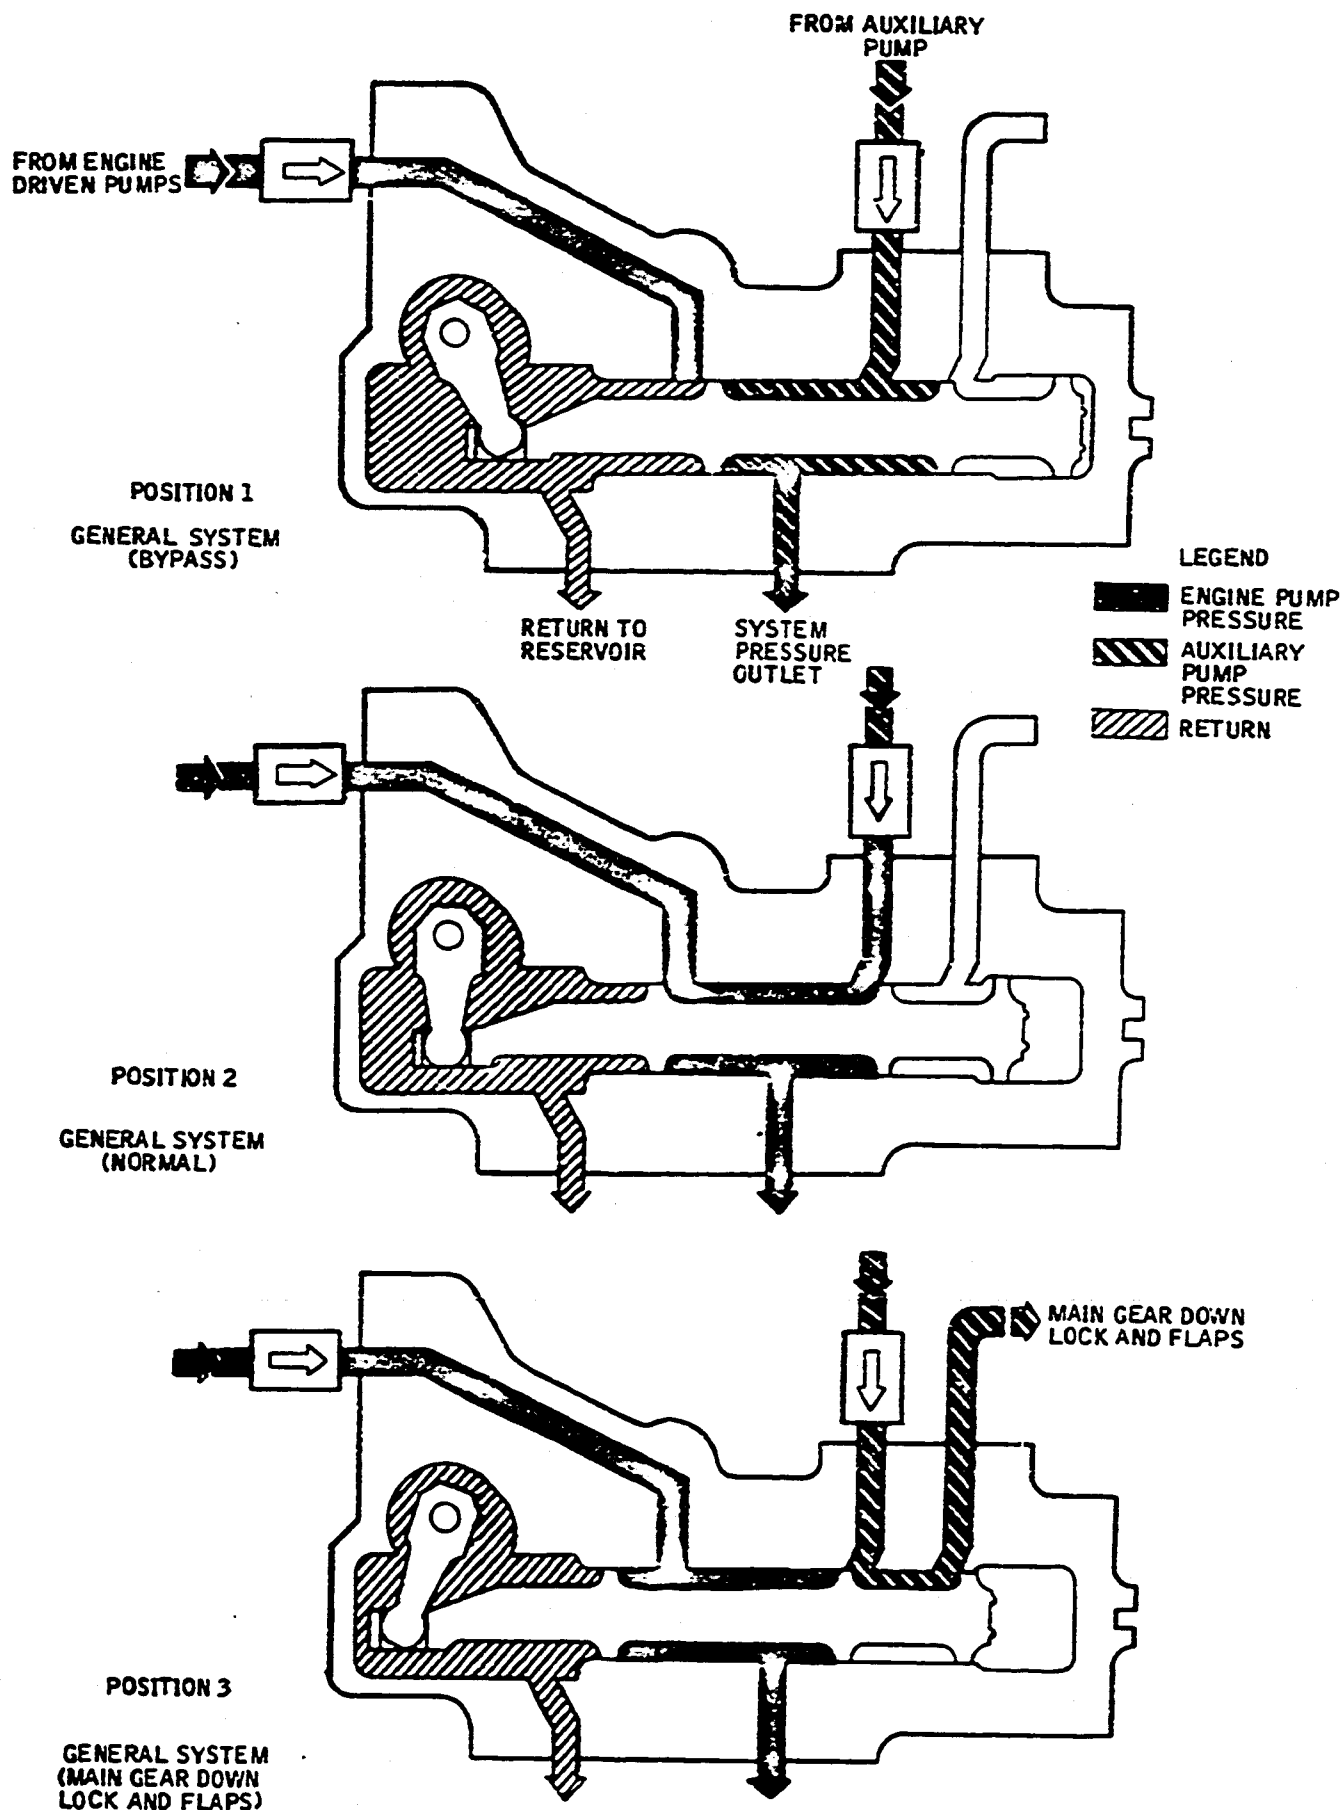

System Selector Valve -- Schematic  
 Figure 17

HA2-26

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

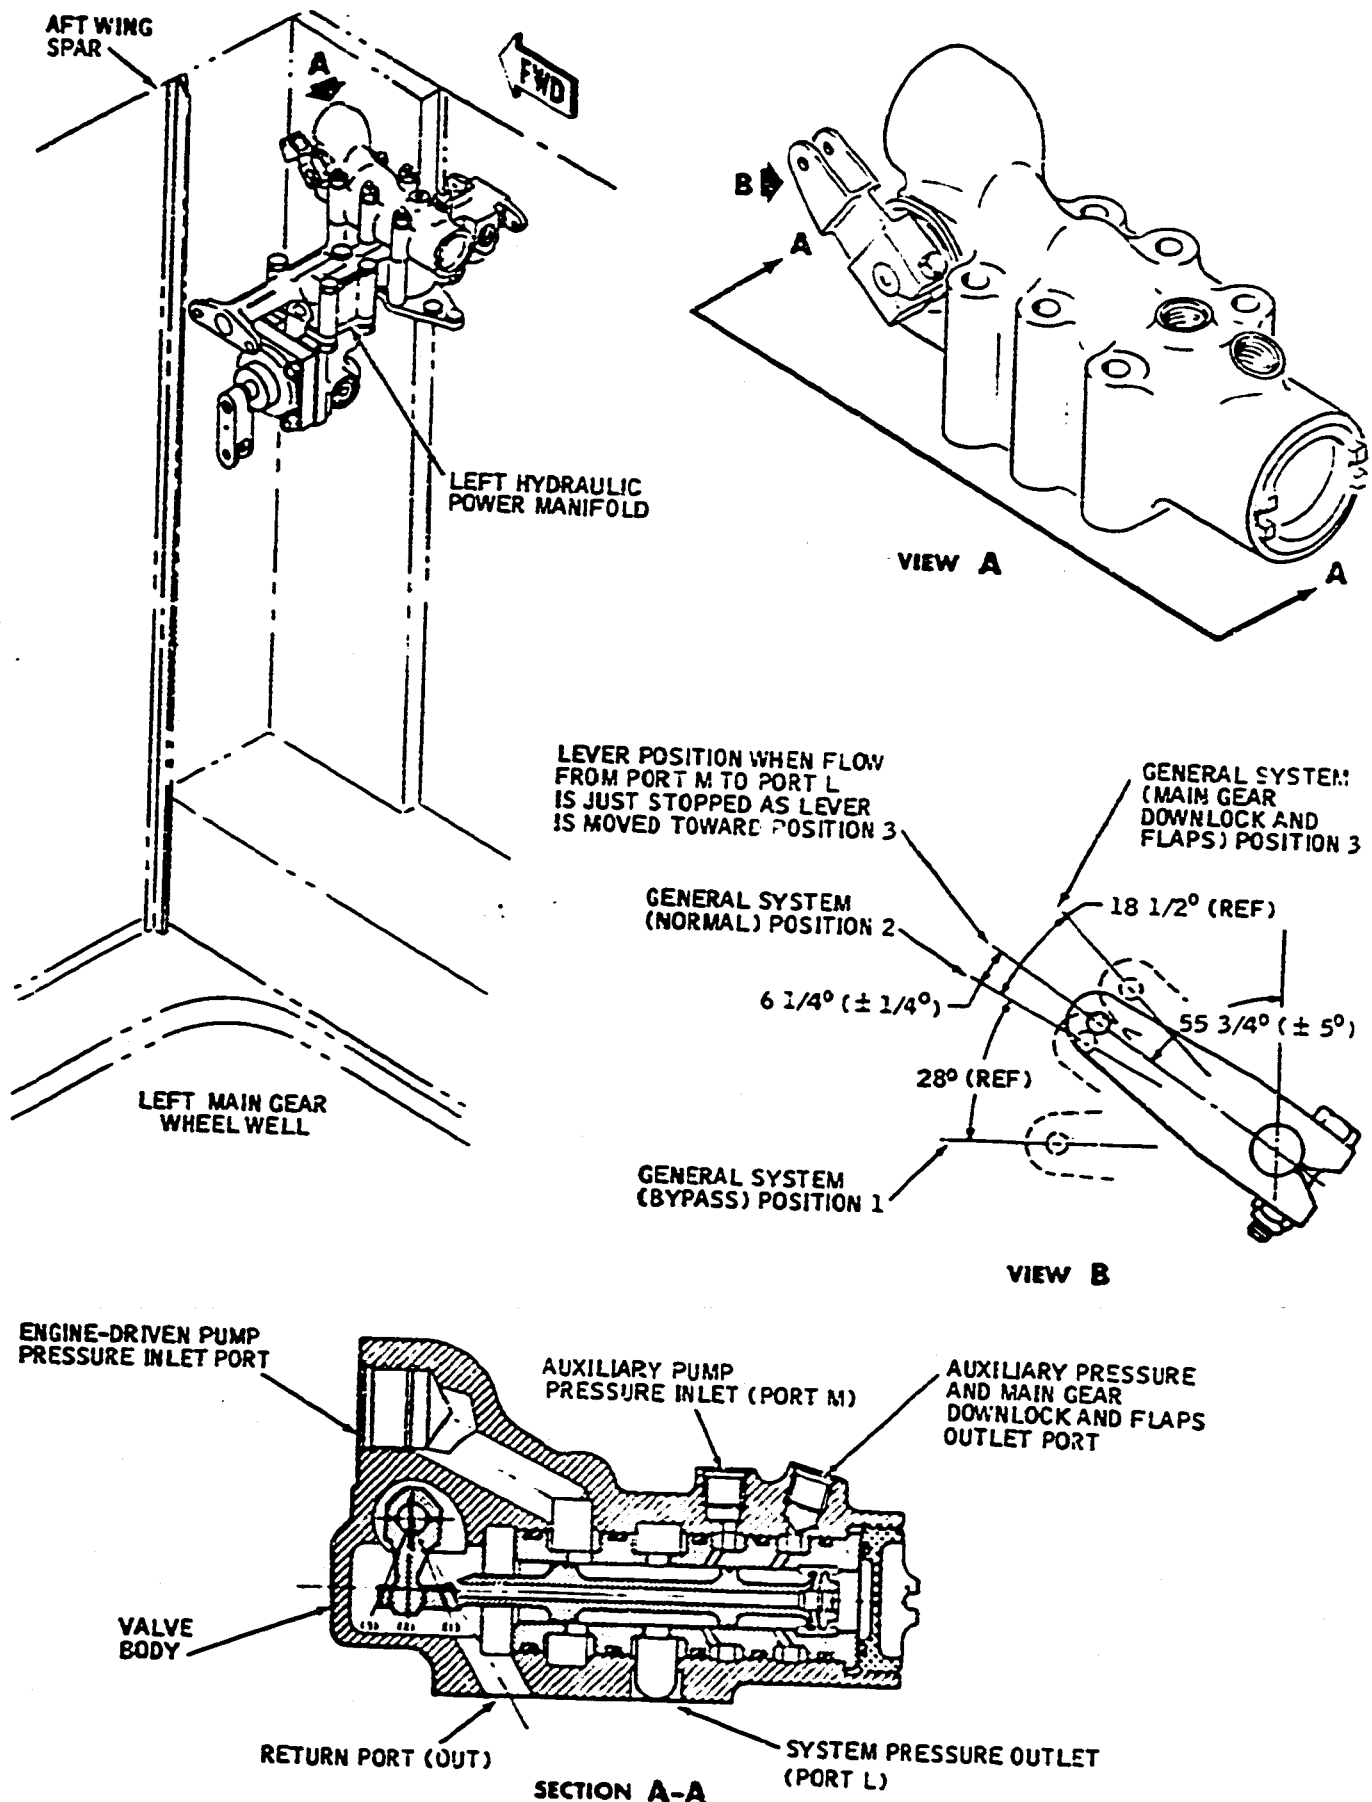

System Selector Valve -- Cutaway View  
 Figure 18



HA2-27

29-10-0  
 CODE 1  
 Page 33

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

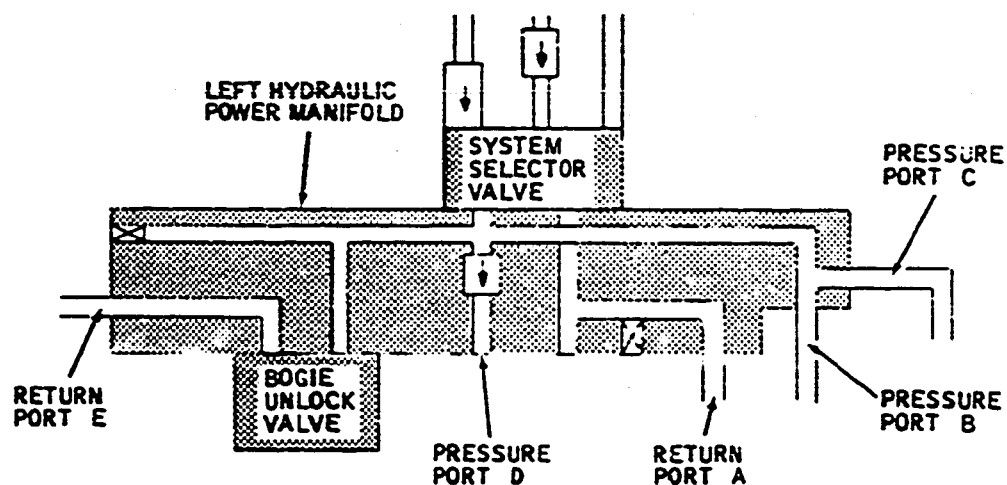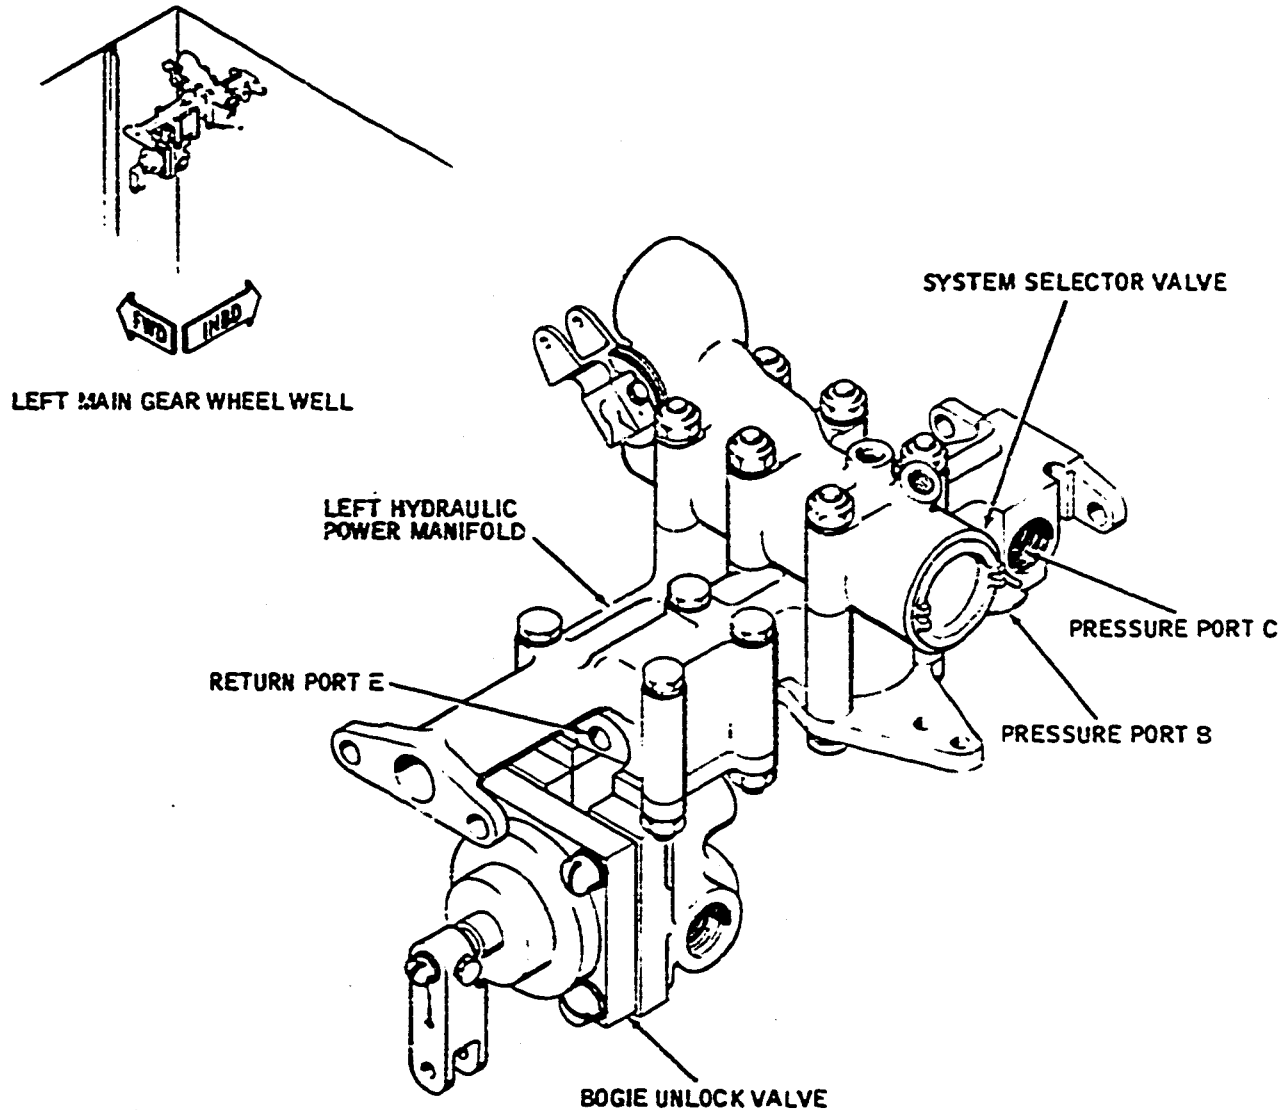

HA2-28

Left Hydraulic Power Manifold -- Schematic  
 Figure 19

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

outlet port. One is connected by a line to the right manifold, and the other is connected to the low-pressure return port of the reservoir. The pressure line to the nose gear control valve is teed into the manifold pressure connecting line. A reservoir return line is teed into the manifold return line. The two ports on the inboard mounting flange were used for drilling the internal passages of the power manifold and are plugged and safety wired to prevent use.



Q. Right Hydraulic Power Manifold (See Figure 20.)

- (1) The right hydraulic power manifold distributes fluid pressure from the hydraulic pumps (engine-driven or auxiliary, or any combination of these three pumps), through the control valves to the various hydraulic subsystems. The right hydraulic power manifold is located overhead in the right wheel well. The manifold is held in place with braces and is accessible through the right main gear inboard door.
- (2) The manifold contains passages for pressure and return fluid distribution, four check valves, ports for pressure and return lines, and mounting pads for the various control valves.
- (3) The right manifold receives fluid pressure from the left manifold. Pressure is ported through check valves to the wing flap control valve, to the slot control valve, to the main gear control valve, to the brake control valve, to the brake pressure transmitter, and to the brake accumulators.
- (4) Auxiliary hydraulic pressure is ported from the alternate port of the system selector control valve into port K in the right manifold. Port K is located inboard of the spoiler control valve. From port K, auxiliary hydraulic pressure is ported through a check valve to the downstream side of the wing flap control valve check valve and into the wing flap control valve for alternate operation of the wing flaps.
- (5) The return passage from the wing flap control valve ports fluid to return port A. The brake control valve return passage ports fluid into return line B through a two-way restrictor. The main gear control valve downstream return fluid uses a separate port in the valve, bypasses the manifold, and returns the fluid directly to A return line to the reservoir. The upline in the main gear control valve uses the same return port, return port B, in the manifold as the brake control valve.

R. Hydraulic Manifold Return Check Valves (See Figure 10.,

- (1) The hydraulic manifold return check valve is installed in the hydraulic reservoir A return line to prevent reverse flow of fluid. This check valve is located on the shear web near the dual filter and relief valve. Access to the check valve is through the left main gear inboard door.
- (2) The direction of flow is marked on one surface, and the rating of the check valve (1500 psi) is marked on the other surface.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

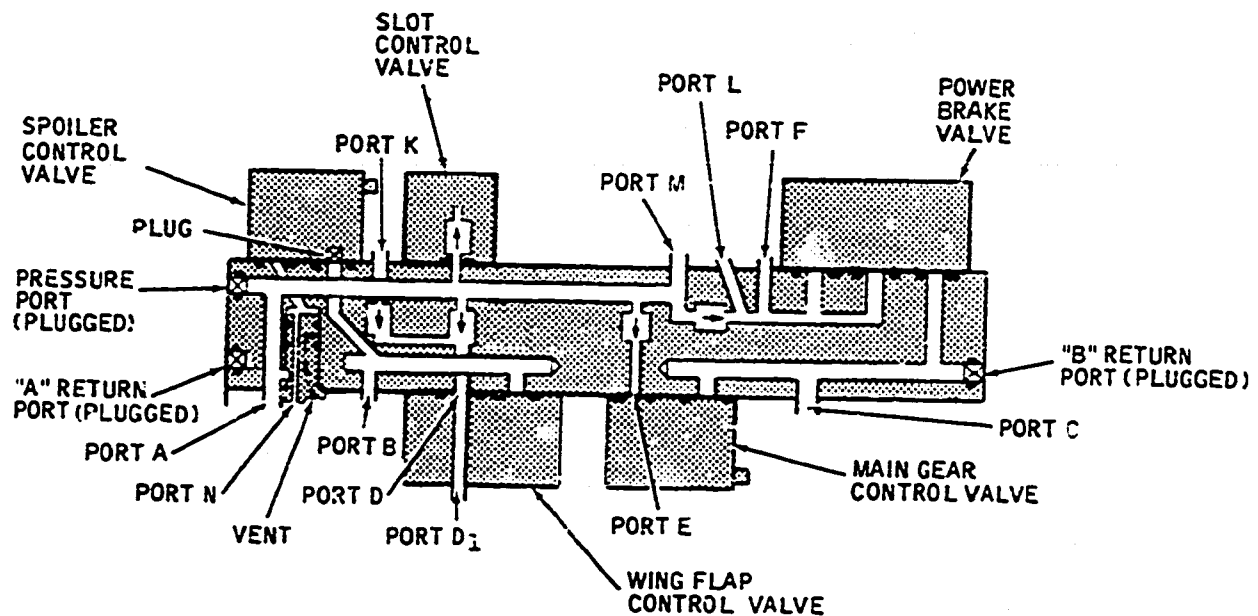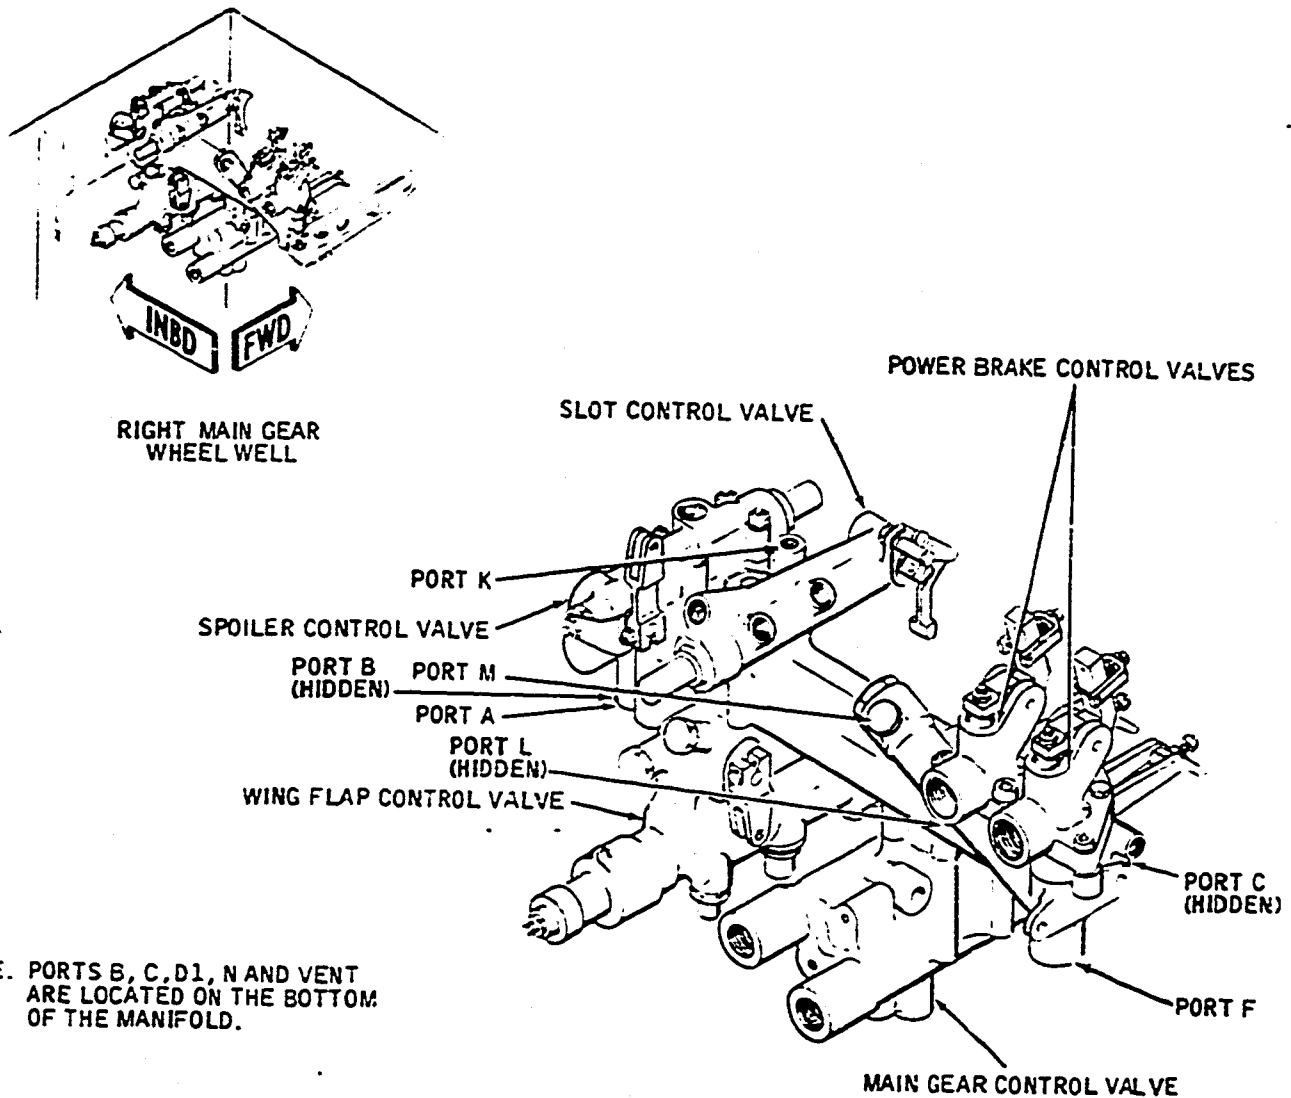

HA2-29A

Right Hydraulic Power Manifold -- Schematic  
 Figure 20

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


S. Hydraulic Power System Accumulator (See Figure 21.)

- (1) The hydraulic power system accumulator is a spherical, welded-steel, fluid and air bladder-separated container. The accumulator is installed in the pressure line of the hydraulic power system to provide a reserve supply of fluid under pneumatic pressure and to act as a shock absorber for system pressure surges.
- (2) The accumulator is located immediately aft of the left hydraulic power manifold and is accessible through the left main gear inboard door. It is mounted with two corner brackets and clamp blocks at the upper and lower port fittings.
- (3) The accumulator is installed in the pressure line of the hydraulic power system and is initially charged with 1000 psi of dry nitrogen. As the system pressure builds up, fluid is forced into the upper chamber of the accumulator, further compressing the trapped nitrogen to approximately 3000 psi. With full hydraulic system pressure, 3000 psi is indicated on the pressure gage adjacent to the filler valve. This reserve pressure smooths out any momentary lag in the pump's response to the system's demand for greater fluid flows. The accumulator permits a gradual rise in system pressure, thereby absorbing the shock of pump surges and relieving the piping and system operating units of high-impact loads. When the engine-driven hydraulic pumps are not operating, the accumulator provides system pressure (at a diminishing rate) until a quantity equal to the stored volume in the accumulator has been used by the system.

T. Hydraulic System Priority Valve (See Figure 22.)

- (1) The priority valve is located in the left wheel well near the left hydraulic power manifold. The valve is installed in the hydraulic pressure line, between the two power manifolds, downstream of the pressure supply takeoff port for the flight controls. The priority valve is a balanced relief valve which reserves initial hydraulic pressure (up to 2150 psi maximum) for use in the flight control systems. The valve consists of a body with an inlet, an outlet, and a breather port. Internally, the valve contains a poppet valve plate, a poppet, a poppet valve load-spring, a piston, a piston load-spring, and a piston load-spring housing. The piston load-spring housing chamber is vented to ambient air through a breather hole which is covered by a butyl rubber band.
- (2) The priority valve shuts off hydraulic pressure to all subsystems downstream of the left power manifold, whenever the hydraulic pressure drops below 1700 psi minimum. At this point, the valve closes to reserve the hydraulic pressure for use in the flight control systems, preventing them from reverting to manual operation. When the hydraulic pressure rises to 2150 psi maximum, the priority valve opens and supplies pressure to the right manifold and all subsystem downstream of the priority valve.
- (3) Hydraulic fluid from the left power manifold enters the priority valve through the inlet port, passes through the poppet valve plate holes, and applies pressure against the piston. When sufficient hydraulic pressure

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

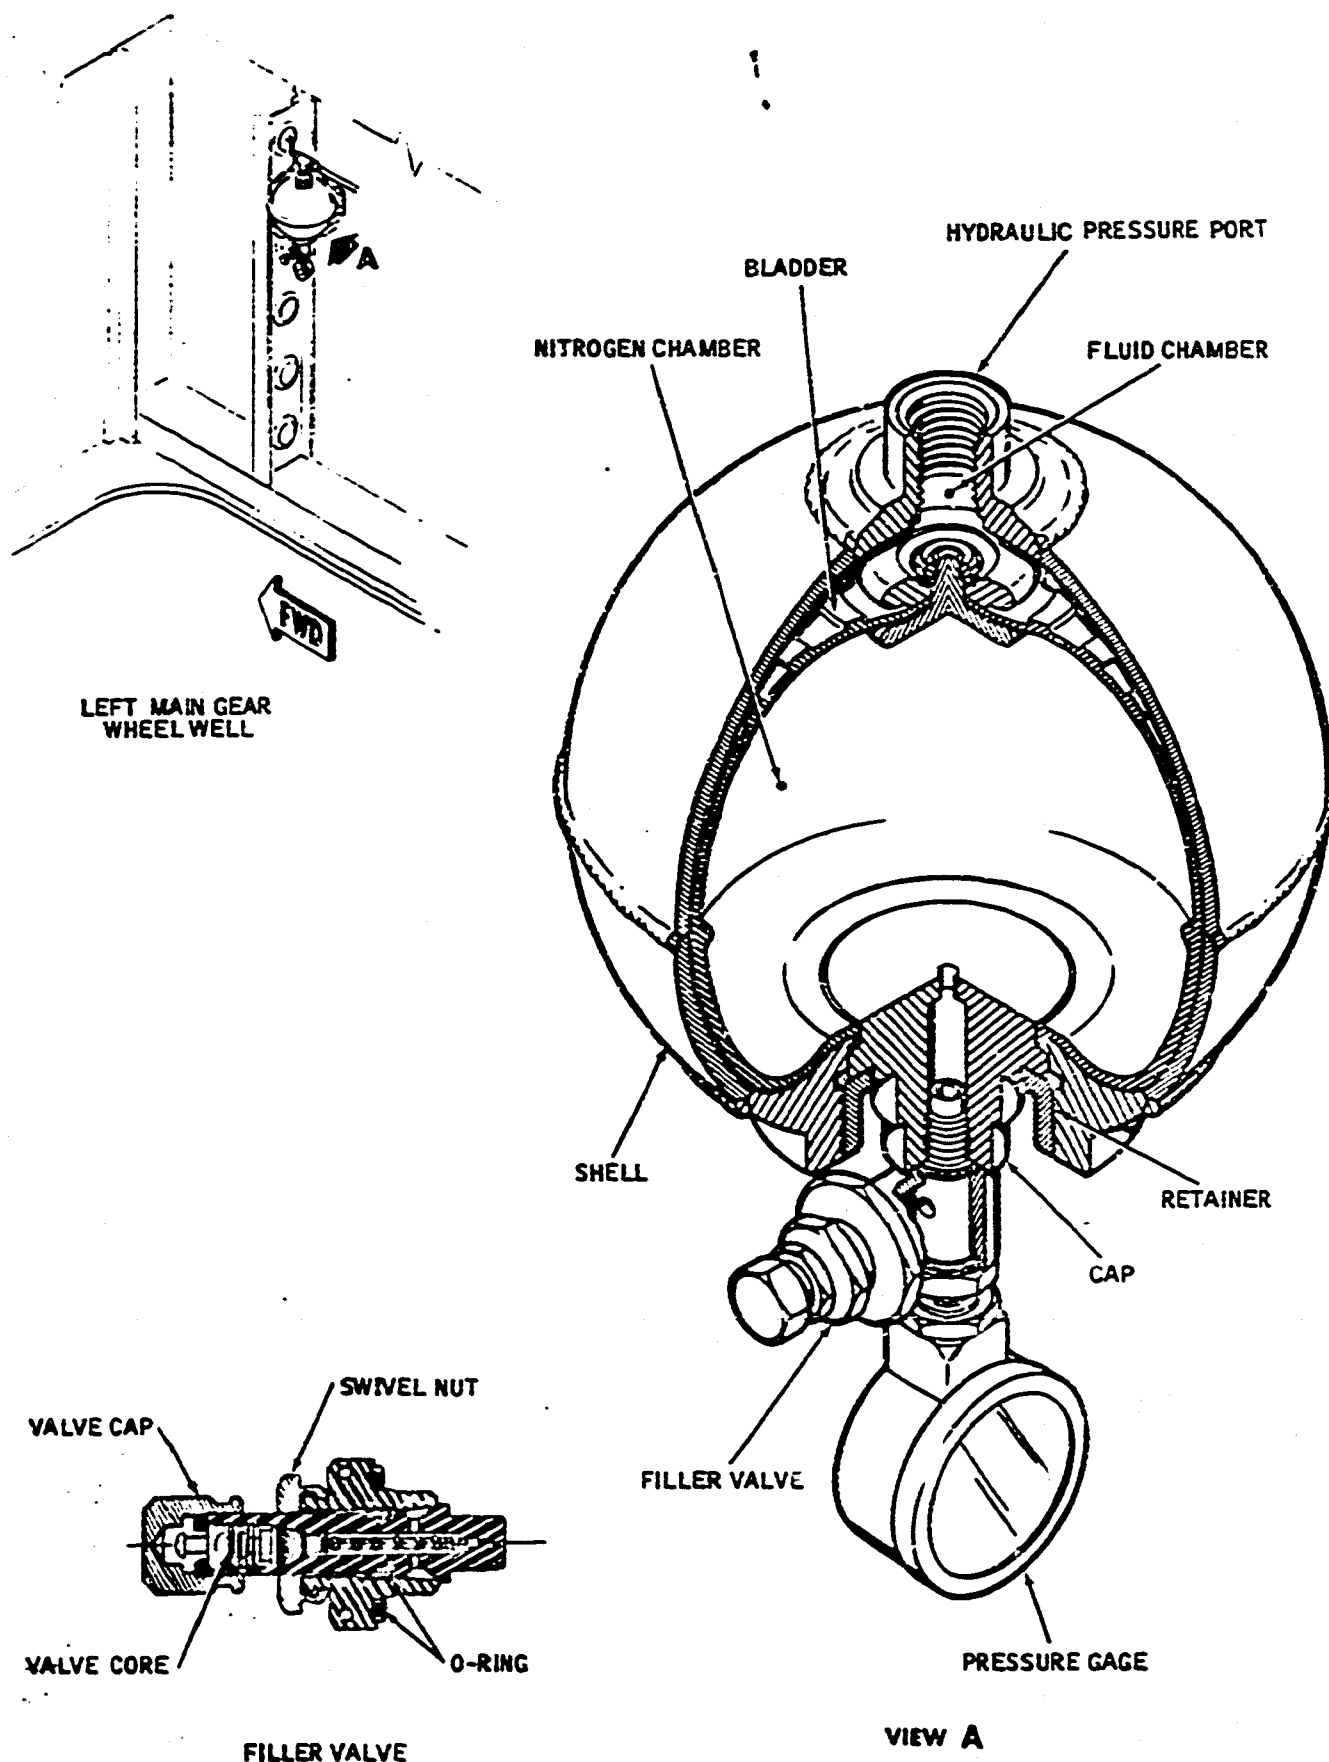

FILLER VALVE



VIEW A

HA2-30

Hydraulic Power System Accumulator -- Cutaway View  
 Figure 21



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

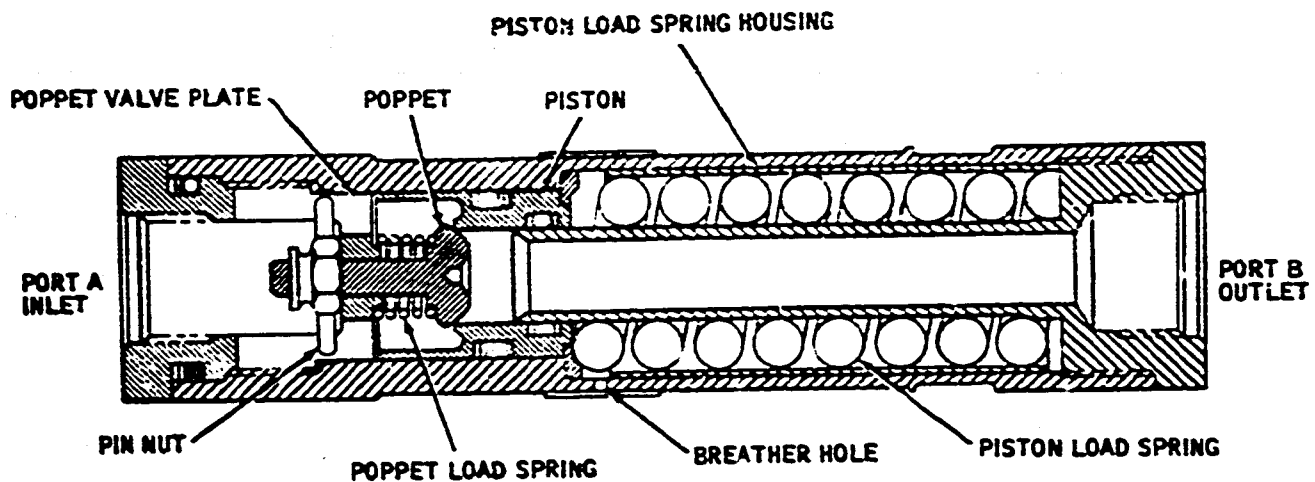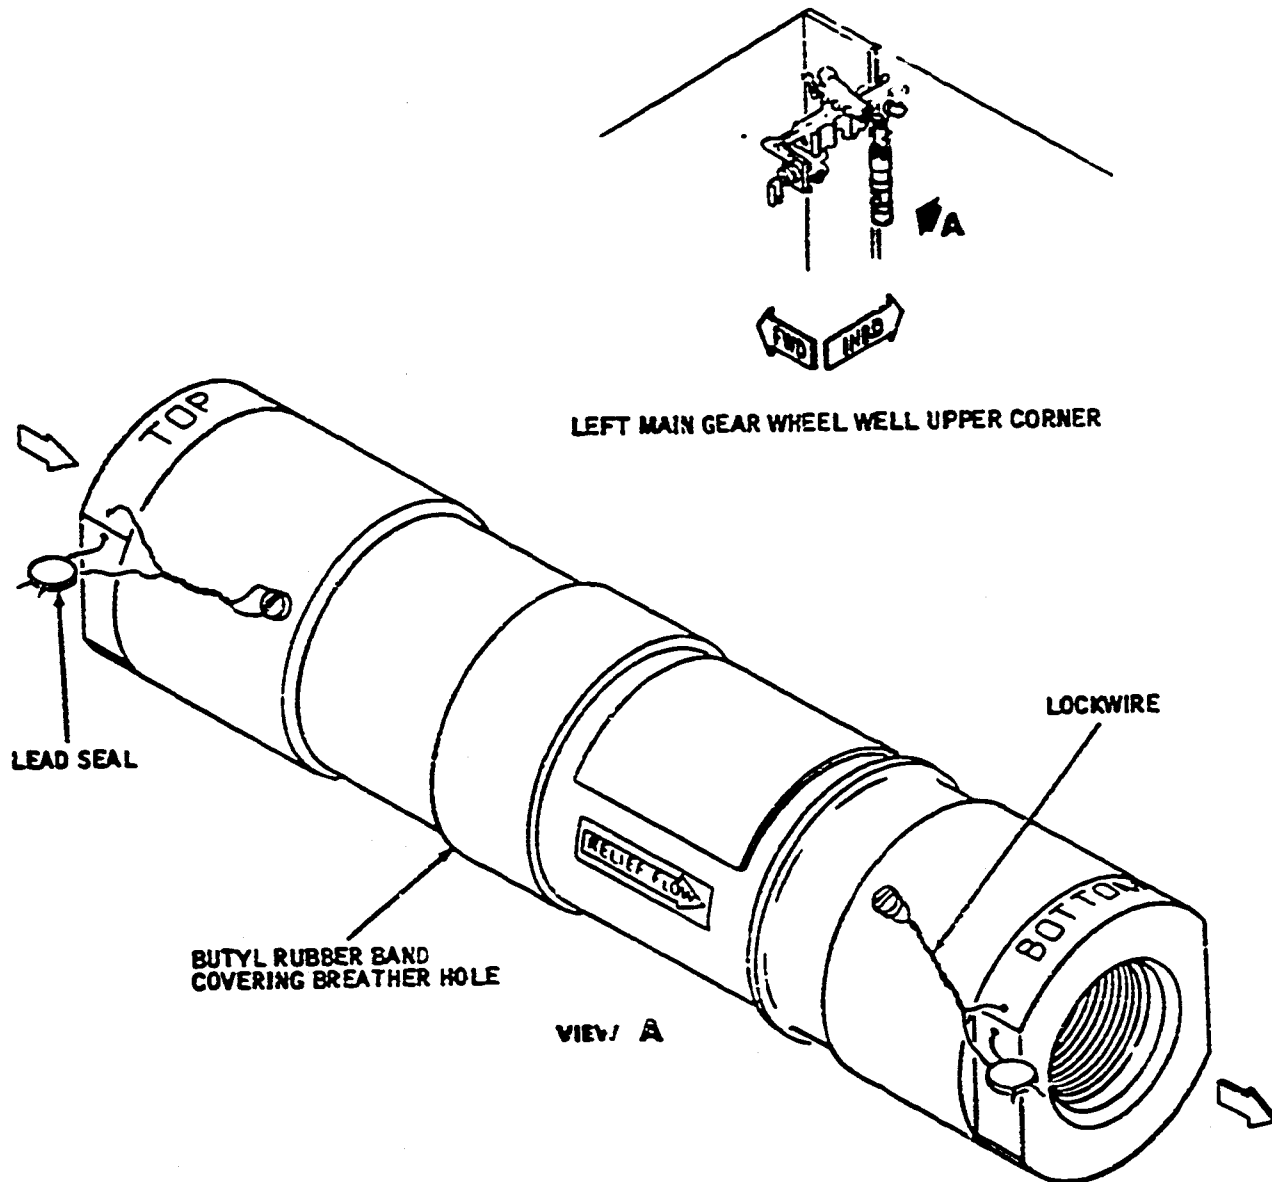

Hydraulic System Priority Valve -- Cutaway View  
 Figure 22

HA2-34

29-10-0  
 CODE 1  
 Page 39

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

is applied to the piston, the piston load-spring compresses, unseating the poppet and permitting full flow through the valve. When the hydraulic pressure decreases to less than the opposing force value of the piston load-spring, the load-spring forces the piston against the poppet and shuts off fluid flow through the valve.

- (4) The maximum flow available from both engine-driven hydraulic pumps is: 44 to 45 gpm at takeoff, climb, and cruise configurations; 26 to 28 gpm at descent, approach, and engine idle configurations.
- (5) Some of the larger hydraulic system demands are as follows:
  - (a) Gear retraction -- 17 gpm (10 - 12 seconds)
  - (b) Gear extension -- 14 gpm (10 - 12 seconds)
  - (c) Wing flaps down -- 8 gpm (10 seconds)
  - (d) Wing flaps up -- 3 gpm (22 seconds)
  - (e) Horizontal stabilizer -- 7 gpm
  - (f) Ailerons -- 17 gpm (25°/second)
  - (g) Rudder -- 3 gpm (25°/second)
- (6) There are various combinations of hydraulic system operations which could cause momentary reversion of the flight controls to manual operation. To prevent reversion to manual operation, the priority valve assures that the left power manifold receives all the hydraulic fluid pressure under conditions of very large flow demands.

U. Hydraulic System Selector Control Lever

- (1) The hydraulic system selector control lever is a manually actuated, mechanical lever detented to three positions. The lever provides a mechanical means, through cables, for positioning the system selector valve and the auxiliary hydraulic pump supply selector valve. The hydraulic system selector control lever is located on the system engineer's control pedestal. The lever is attached to a drive sector, located on a common shaft with the other control pedestal sectors. The lever and sector are accessible through the cover plates on the system engineer's pedestal.
- (2) To put the hydraulic power system in the bypass condition, the system selector control lever is lifted out of detent and moved to bypass/general system position. At the same time, the cable moves the sector and pushrod of the system selector valve to the No. 1 position. The pushrod positions the system selector valve to the No. 1 bypass position. At the same time, the cables from the system selector valve sector move the auxiliary pump supply selector valve sector to No. 1 (auxiliary) position. The auxiliary pump supply selector valve remains in the

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

auxiliary supply position through the idle feature of the sector rigging. In this condition, the engine-driven pump pressure is ported to the reservoir and the auxiliary pump supplies pressure to the general system. In this position, the fluid is supplied to the auxiliary pump from the low standpipe in the hydraulic system reservoir. To put the system into the alternate condition, the selector control lever is lifted out of detent and moved to the general system/main gear down lock and flaps position. The cables move the system selector valve sector to the No. 3 (alternate) position. The system selector valve sector moves the cables rotating the auxiliary pump supply selector valve sector to the No. 3 (alternate) position. As the sector rotates, the end of the arm moves away from the idle position. This positions the valves to the alternate position, supplying fluid to the auxiliary pump from the auxiliary pump alternate reservoir. In this position, fluid from the auxiliary pump is ported to the wing flap control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported to the general system.

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 1  
Page 41

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - DESCRIPTION AND OPERATION

1. GENERAL

A. Description (See Figures 1 and 2.)

- (1) The hydraulic power system receives fluid pressure from the engine-driven hydraulic pumps, one installed on each inboard engine. The electrically driven auxiliary pump is used to supplement the engine-driven pumps, or to independently supply the system with fluid pressure.
- (2) The hydraulic system reservoir, located in the left wing root, has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir is used for fluid, and 1/10 is used for foam space. A separate air chamber is installed in the reservoir system to provide for a greater fluid capacity in the main reservoir. A reservoir filler assembly is installed in the piping between the reservoir and the air chamber and has a vent line from the filler neck to the tee at the top of the reservoir sight gage. The reservoir is pressurized to 30 to 35 psi by bleed pressure from the engine-driven pumps through an air pressure regulator-aspirator.
- (3) The engine-driven pumps receive fluid from the pressurized main reservoir through respective engine hydraulic fire shutoff valves. The engine hydraulic fire shutoff valves are normally open and can be mechanically controlled from the flight compartment. The pumps supply fluid pressure through respective check valves to the dual filter and relief valve. Some of the fluid from the filter is ported through the regulator-aspirator to pressurize the reservoir. Most of the fluid is routed through a check valve to the system selector valve, and then to the left and right hydraulic power manifolds. The manifolds distribute the fluid pressure to the subsystems.
- (4) Hydraulic fluid is normally supplied to the auxiliary hydraulic pump from a low standpipe in the main reservoir. During alternate operation, the auxiliary hydraulic pump receives fluid supply from the auxiliary pump alternate reservoir, which is located just aft of the auxiliary pump. From these reservoirs, the fluid is ported through the auxiliary pump selector valve which is mechanically controlled from the flight compartment by the system selector control lever. When operating, the auxiliary hydraulic pump supplies fluid pressure to the subsystems through the system selector valve which is also controlled by the system selector control lever in the flight compartment. A filter and check valve are installed in the line from the auxiliary pump to the system selector valve.
- (5) An accumulator is installed in the pressure line to the subsystems to provide a reserve supply of fluid and to act as a surge damper for the system.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Engine-driven pump fluid pressure is routed through the system selector valve to the left power manifold, where it is distributed to some of the subsystems and through the priority valve to the right power manifold. Fluid pressure from the right power manifold is distributed to the remaining subsystems.
- (7) The priority valve is a spring-loaded, poppet-type, balanced relief valve installed in the line downstream of the left power manifold. The priority valve's function in the system is to prevent the flight control systems from reverting to manual operation during high demands on the hydraulic system.
- (8) A fluid pressure transmitter, located in the nosewheel well, senses the system pressure, which is indicated on the hydraulic system pressure indicator in the flight compartment.

**B. Normal Operation**

- (1) Fluid is supplied to the hydraulic system from the pressurized hydraulic system reservoir. For operation of the hydraulic system under normal conditions, 8.1 US gallons (6.7 Imperial gallons; 30.6 liters) of hydraulic fluid are available to the engine-driven hydraulic pumps, and 12.9 US gallons (10.7 Imperial gallons; 48.8 liters) are available to the auxiliary hydraulic pump. Supply lines from the main reservoir carry fluid to each inboard pylon through normally open engine hydraulic fire shutoff valves to the engine-driven hydraulic pumps. Fluid is supplied to the auxiliary hydraulic pump from the main reservoir through a low standpipe at the base of the reservoir. Fluid is carried from the reservoir through the auxiliary pump selector valve to the auxiliary hydraulic pump.
- (2) The engine-driven hydraulic pumps supply full system pressure (3000 psi nominal) at any given engine speed, from idle to full power. The output flow of the pump is varied by sensing pressure from the outlet side of the pump. Each engine-driven pump contains a solenoid-operated bypass valve which, when energized, bypasses the pressure control regulator of the pump and ports fluid to the pump yoke control piston which feathers the pump. When the pump is feathered, flow rate is reduced to almost zero (1.0 gpm) and to a pressure of approximately 300 psi. Half of this flow maintains pump lubrication and cooling through internal leakage. This leakage is returned, through a check valve, the engine-driven pump case drain line filter, and another check valve to the case drain return port of the reservoir. The pressure fluid from each pump passes through a check valve to the dual filter and relief valve.
- (3) The fluid enters the dual filter and relief valve through the relief valve chamber. The fluid is passed through the filter element, through a manifold, and through a common outlet port. Fluid from the outlet port is routed through a check valve to the system selector valve. If back pressure in the system builds up to approximately 3300 psi, the relief valves in the dual filter and relief valve open and port fluid back to the reservoir via A return port. The relief valve poppet closes again when system pressure drops to approximately 3000 psi.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

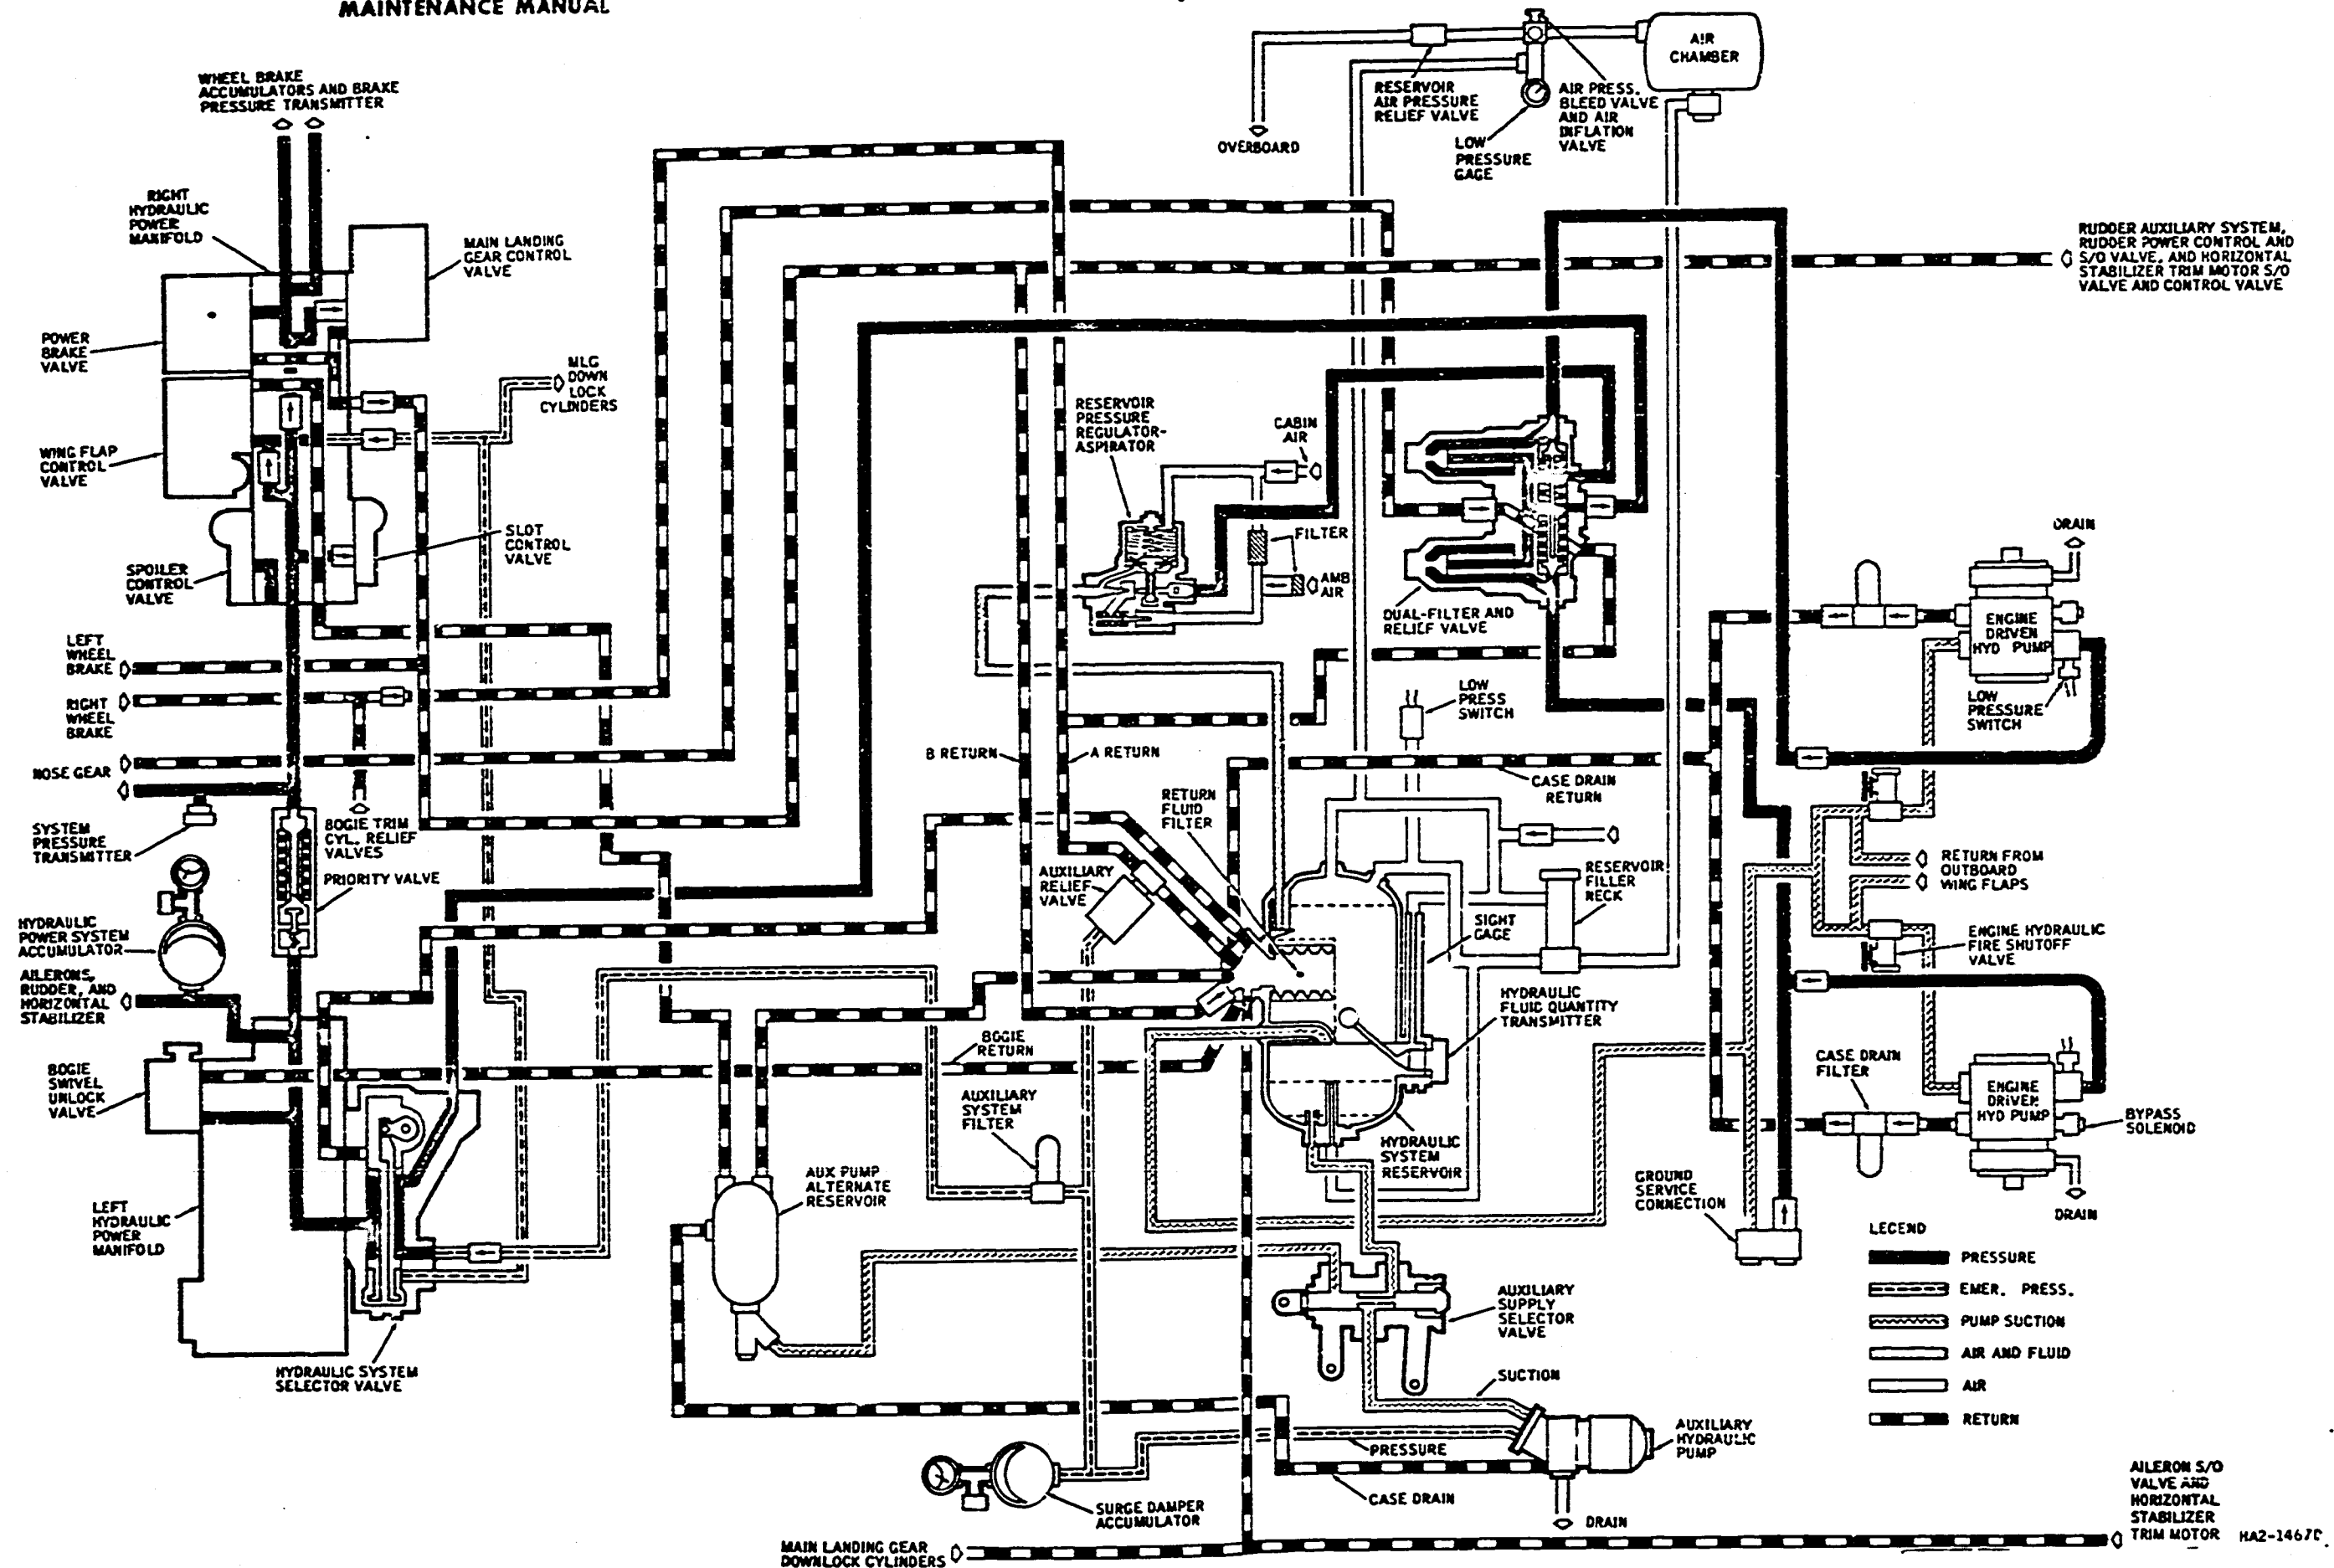


Hydraulic Power System -- Schematic Diagram  
 (Airplanes N8774 - N8778)  
 Figure 1 (Sheet 1)

29-10-0  
 CODE 2  
 Page 3

Aug 1/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

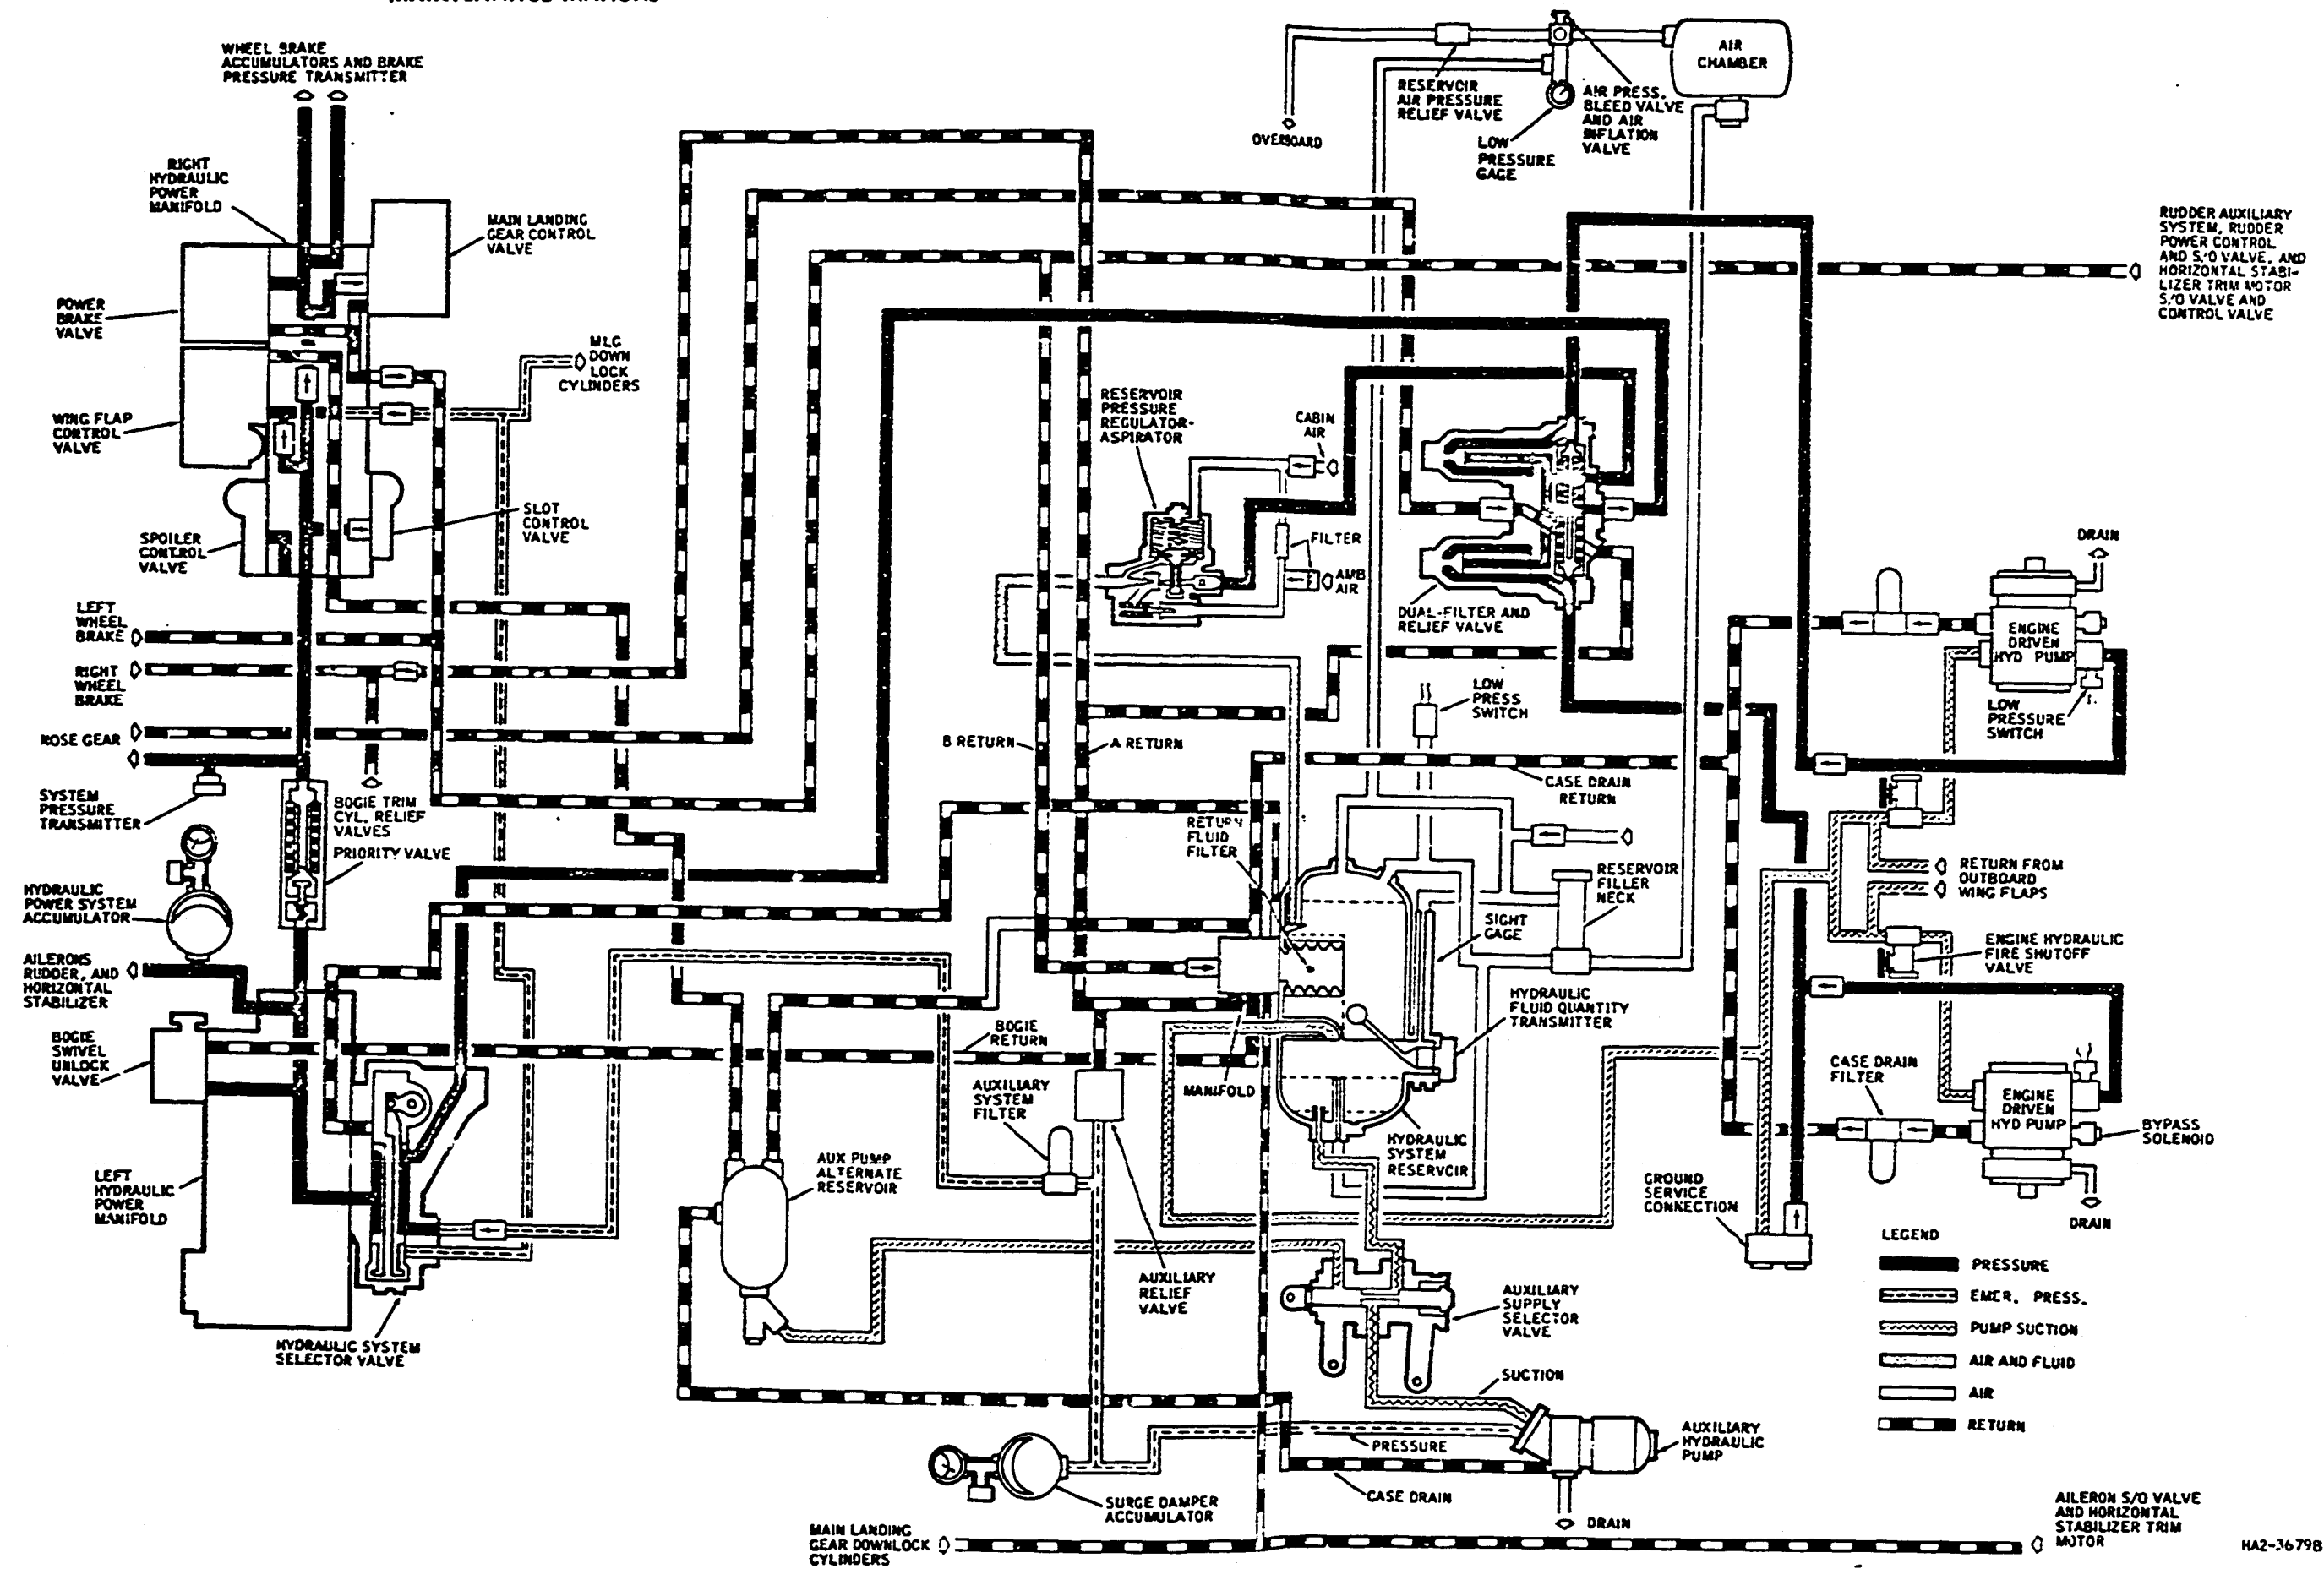

Hydraulic Power System -- Schematic Diagram  
 (Airplanes N8762-N8773)  
 Figure 1 (Sheet 2)

29-10-0  
 CODE 2  
 Page 4A


Aug 1/68

Printed in U.S.A.

HA2-3679B

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

LH WHEEL BRAKE  
 RH AILERON POWER CONTROL,  
 RH THRUST REVERSER,  
 LH LANDING GEAR TRIM  
 CYLINDER RELIEF VALVE,  
 AND WING SLOTS

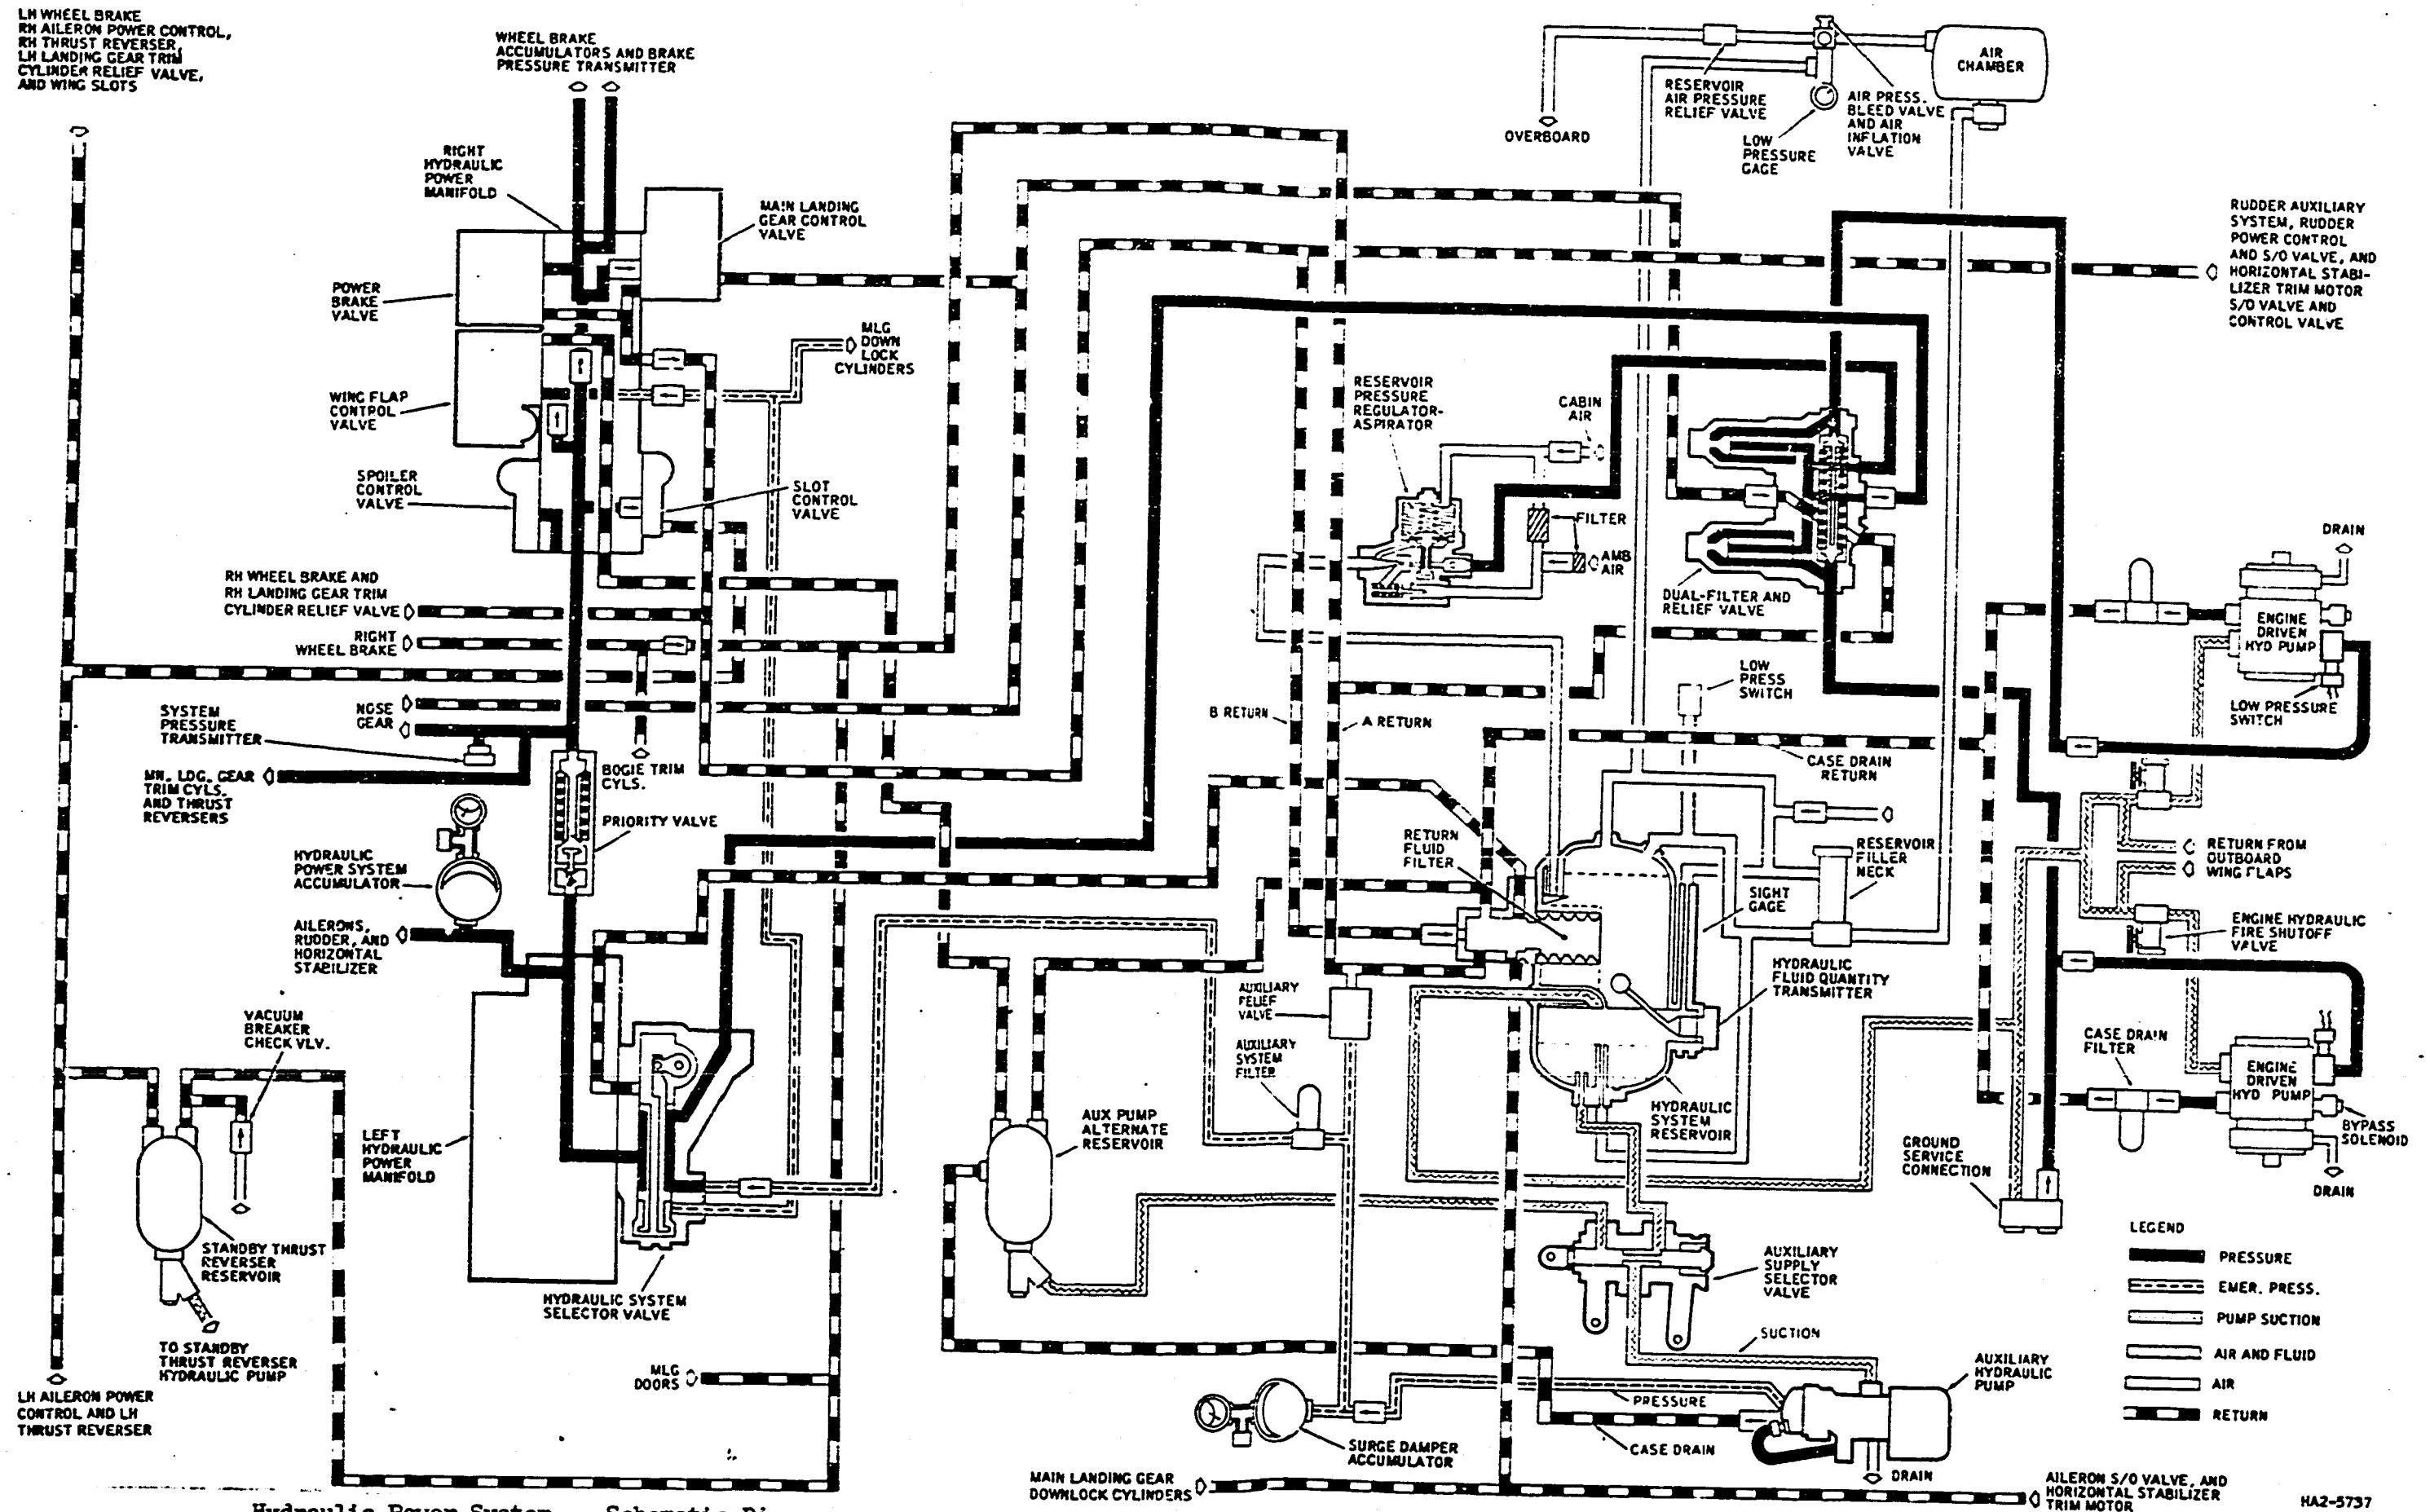

Hydraulic Power System -- Schematic Diagram  
 (Airplanes N8755-N8760)  
 Figure 1 (Sheet 3)

29-10-0  
 CODE 2  
 Page 4C


Aug 1/69

Printed in U.S.A.

HA2-5737



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

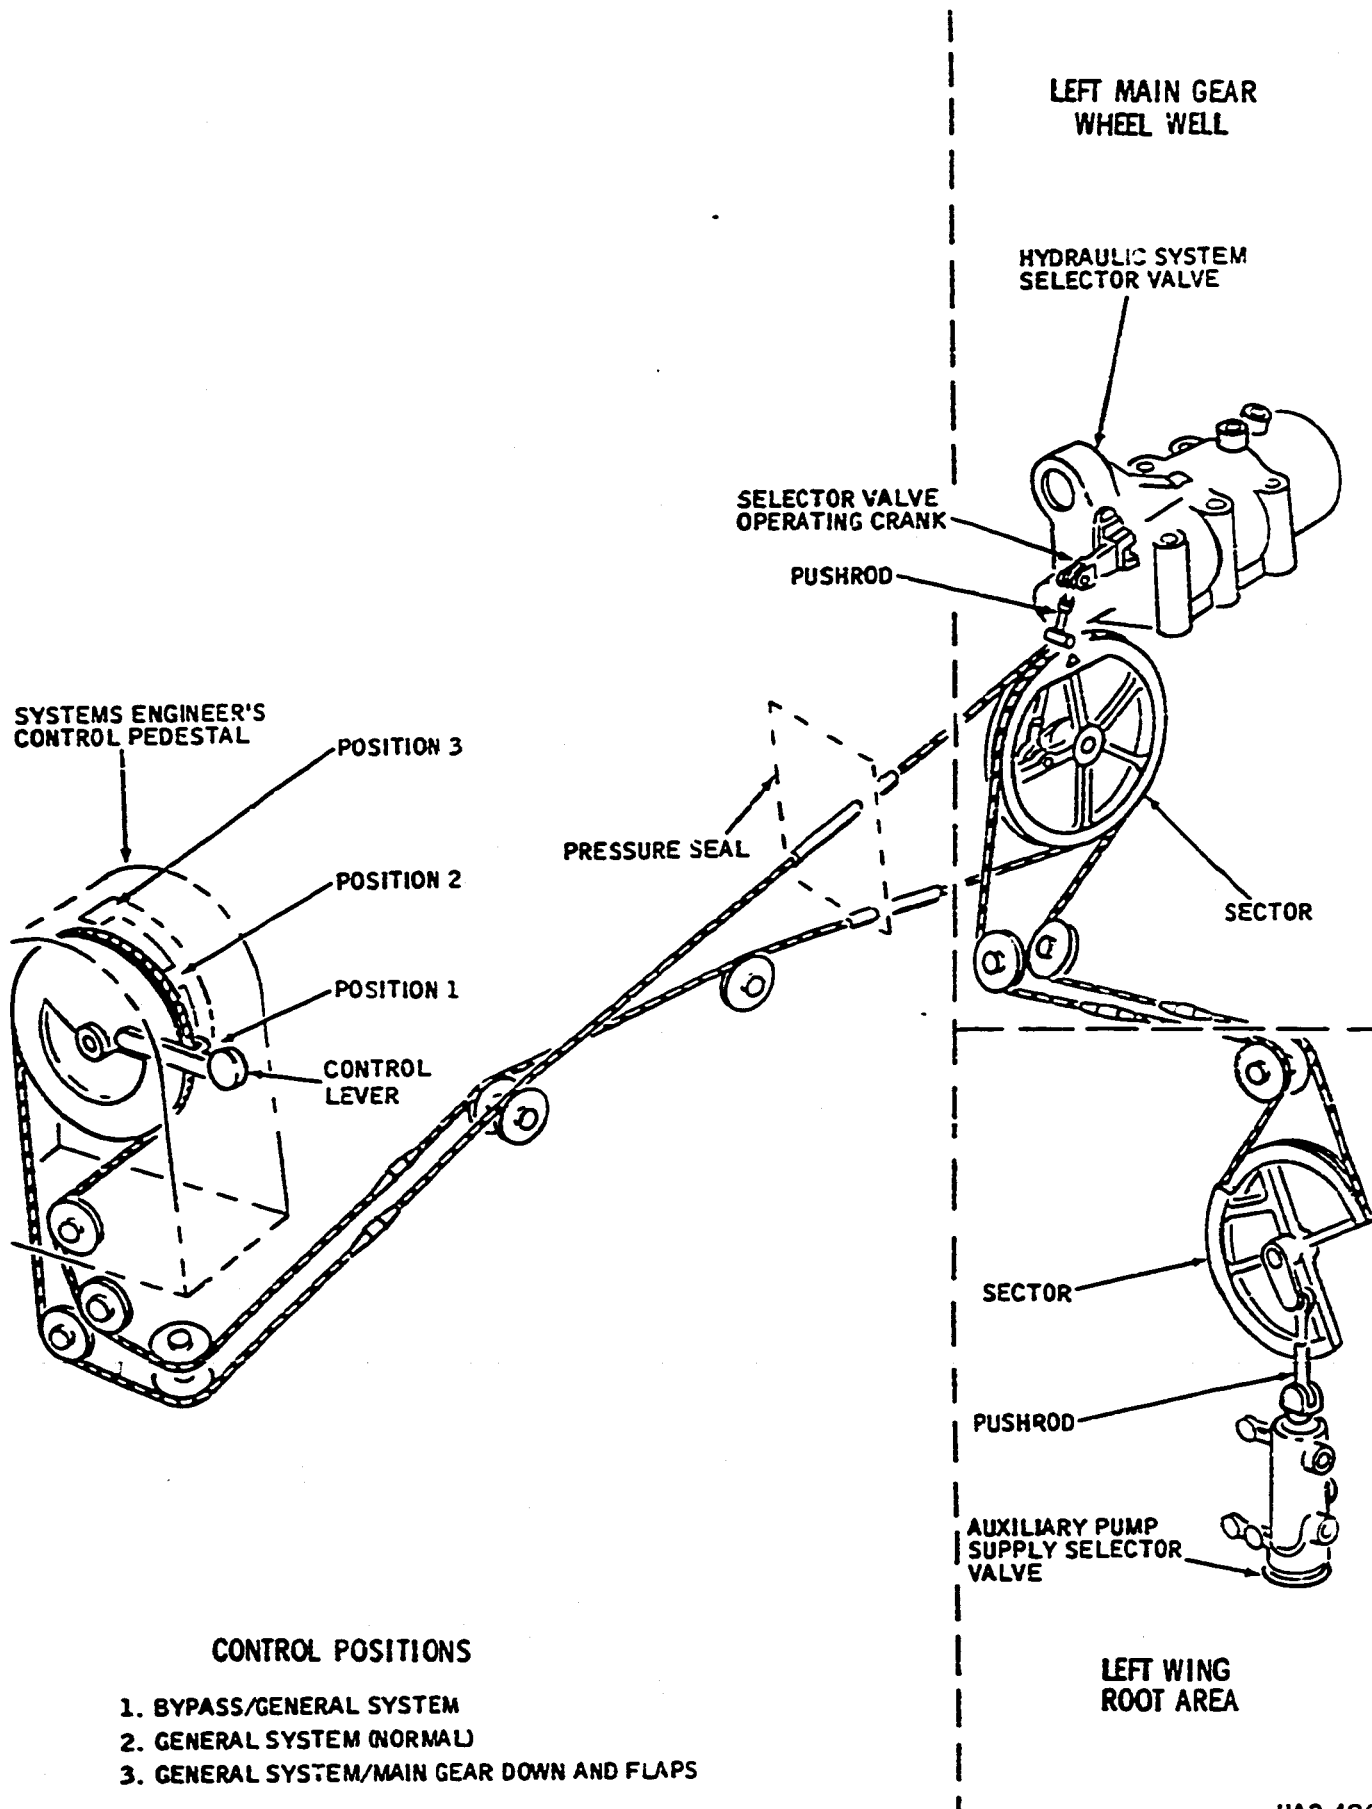

Hydraulic System Selector and Auxiliary Pump Supply  
 Selector Valves -- Mechanical Control Schematic  
 Figure 2

HA2-486

29-10-0  
 CODE 2  
 Page 5

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) The aspirator receives filtered fluid (bleed pressure at normal 3000 psi) from the dual filter and relief valve. The aspirator operates on the jet pump principle. Hydraulic fluid is atomized and mixed with air within the unit by a nozzle and a venturi. The mixture is used to pressurize the reservoir and reservoir air chamber. The regulator diaphragm maintains a pressure range of 30 to 35 psi in the reservoir and air chamber. If there is a regulator malfunction, the aspirator stalls when the outlet pressure reaches a maximum of 40 psi. A reservoir relief valve in the reservoir vent line relieves thermal expansion pressure above 45 (+5, -0) psi.
- (5) Pump pressure fluid enters the system selector valve through the system pressure inlet port. When the pump selector control lever is in the general system (normal) position, fluid is ported to the pressure passages of the left power manifold. The fluid pressure in the left power manifold is ported through the priority valve to the nose gear and the right power manifold and directly to the following valves:
- (a) Bogie unlock
  - (b) Aileron power shutoff
  - (c) Rudder power shutoff
  - (d) Longitudinal trim hydraulic motor shutoff
- (6) The right power manifold distributes fluid pressure to the brake accumulators, the pressure transmitter, and the following control valves:
- (a) Wing flap
  - (b) Slot
  - (c) Main gear
  - (d) Power brake
- (7) The return fluid from the wing flap control valve is ported through the right power manifold and into the auxiliary hydraulic pump alternate reservoir. Return fluid from the outboard wing flaps is piped into the suction lines for each engine-driven hydraulic pump. Return fluid from the slot control valve is ported into the A return line to the main reservoir. The power brake and main gear control valve gear up return fluid is ported through a restrictor check valve into the E return line to the reservoir. The main gear control valve gear down return pressure bypasses the right manifold and returns to the reservoir through the A return line. The return port of the bogie unlock valve ports fluid from the left manifold to the bogie return port of the reservoir. All return fluid entering the reservoir is filtered through the return ports filter located within the reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

C. Bypass Operation

- (1) The output of the engine-driven hydraulic pumps is bypassed by moving the system selector control lever out of the general system (normal) position to the bypass/general system position.
- (2) The system selector valve in the bypass position ports engine-driven pump pressure from the dual filter and relief valve directly to the return passage of the left power manifold. From the manifold, the fluid is ported directly to a tee in the wing flap return port of the hydraulic system reservoir. In the bypass condition, the auxiliary hydraulic pump receives fluid from the hydraulic system reservoir, pressurizes it to system pressure, and ports it to the left and right power manifolds for distribution to the subsystems.

D. Alternate Operation

- (1) When both engine-driven hydraulic pumps and the auxiliary hydraulic pump are rendered inoperative due to the loss of the normal supply of fluid, the hydraulic power system can be rigged for alternate operation. This is accomplished by placing the system selector control lever in the general system/main gear downlock and flaps position. When the system selector control lever is in this position, the auxiliary hydraulic pump supply selector valve is positioned to supply fluid from the auxiliary pump alternate reservoir to the auxiliary pump.
- (2) Fluid is supplied to the auxiliary pump from the outlet port of the auxiliary pump supply selector valve. Output pressure is ported through the auxiliary system filter and check valve to the auxiliary pressure inlet port of the system selector valve.
- (3) In the general system/main gear downlock and flaps position, auxiliary pump pressure bypasses the manifold pressure passages and is ported from the alternate outlet port of the system selector valve. Fluid from this port flows directly to a port on the right power manifold, through an internal check valve in the manifold, to the wing flap control valve. A line, teed into the alternate supply line, runs directly to a shuttle valve in the main gear downlock cylinder line. When auxiliary pressure is applied, the shuttle valve shifts, porting fluid into the downlock bungee cylinder's downlock side.

E. Mechanical Control

- (1) The hydraulic power mechanical control system consists of the hydraulic system selector control lever cable drum, the system selector valve sector, the system selector valve, the auxiliary hydraulic pump supply selector valve sector, and the auxiliary hydraulic pump supply selector valve.
- (2) The control lever located on the system engineer's control pedestal is used to position the system selector valve and, in turn, the auxiliary hydraulic pump supply selector valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (3) The control lever is spring loaded into general system (normal) position, and is connected to the control lever cable drum. Two cables run from the drum, under the cabin floor, aft through the pressure bulkhead at the rear wing spar, and into the left wheel well to the system selector valve sector. A pushrod connects the sector to the positioning lever of the system selector valve.
- (4) A second set of cables is routed from the system selector valve sector into the left wing root to the auxiliary hydraulic pump supply selector valve sector. When the system selector valve is in either bypass or normal, the auxiliary hydraulic pump supply selector valve sector is arranged so that the pushrod idles between the two positions. This allows the valve to remain in the auxiliary position. When the sector is moved to the alternate position, the pushrod is pulled by the sector to reposition the valve to the alternate position.
- (5) The control lever is normally in the general system (normal) position. To move the system selector valve to the bypass position, the control lever is moved to the bypass/general system position. When the system selector valve is moved to the bypass position, the auxiliary hydraulic pump supply selector valve sector is moved to a new position. Due to the idle feature on the auxiliary sector, the valve remains in the auxiliary position. With the valve in this position, fluid is supplied to the auxiliary pump through the low standpipe in the hydraulic system reservoir. In this condition, engine-driven pump pressure is ported to the reservoir and the auxiliary pump pressure is ported to the general system.
- (6) To put the system in alternate operation, the control is moved to the general system/main gear downlock and flaps position. This moves the system selector valve to the alternate position, and simultaneously moves the auxiliary hydraulic pump supply selector valve to the alternate position. Fluid is supplied to the auxiliary pump from the auxiliary hydraulic pump alternate reservoir. Fluid pressure from the auxiliary pump is ported to the flap system control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported from the system selector valve to the general system.

## 2. System Components

### A. Hydraulic System Reservoir (See Figures 3 and 4.)

- (1) The hydraulic system reservoir is installed on the aft side of the wing rear spar in the left wing root and is accessible through the left wing root access door. The hydraulic system reservoir serves as the main source of hydraulic fluid for the engine-driven hydraulic pumps and the normal supply for the auxiliary hydraulic pump. The reservoir is cylindrical in shape and contains a filter, baffle, and a screen cover encasing the filter. The filter prevents foreign particles from contaminating the fluid supply. Mountings are provided on the exterior

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

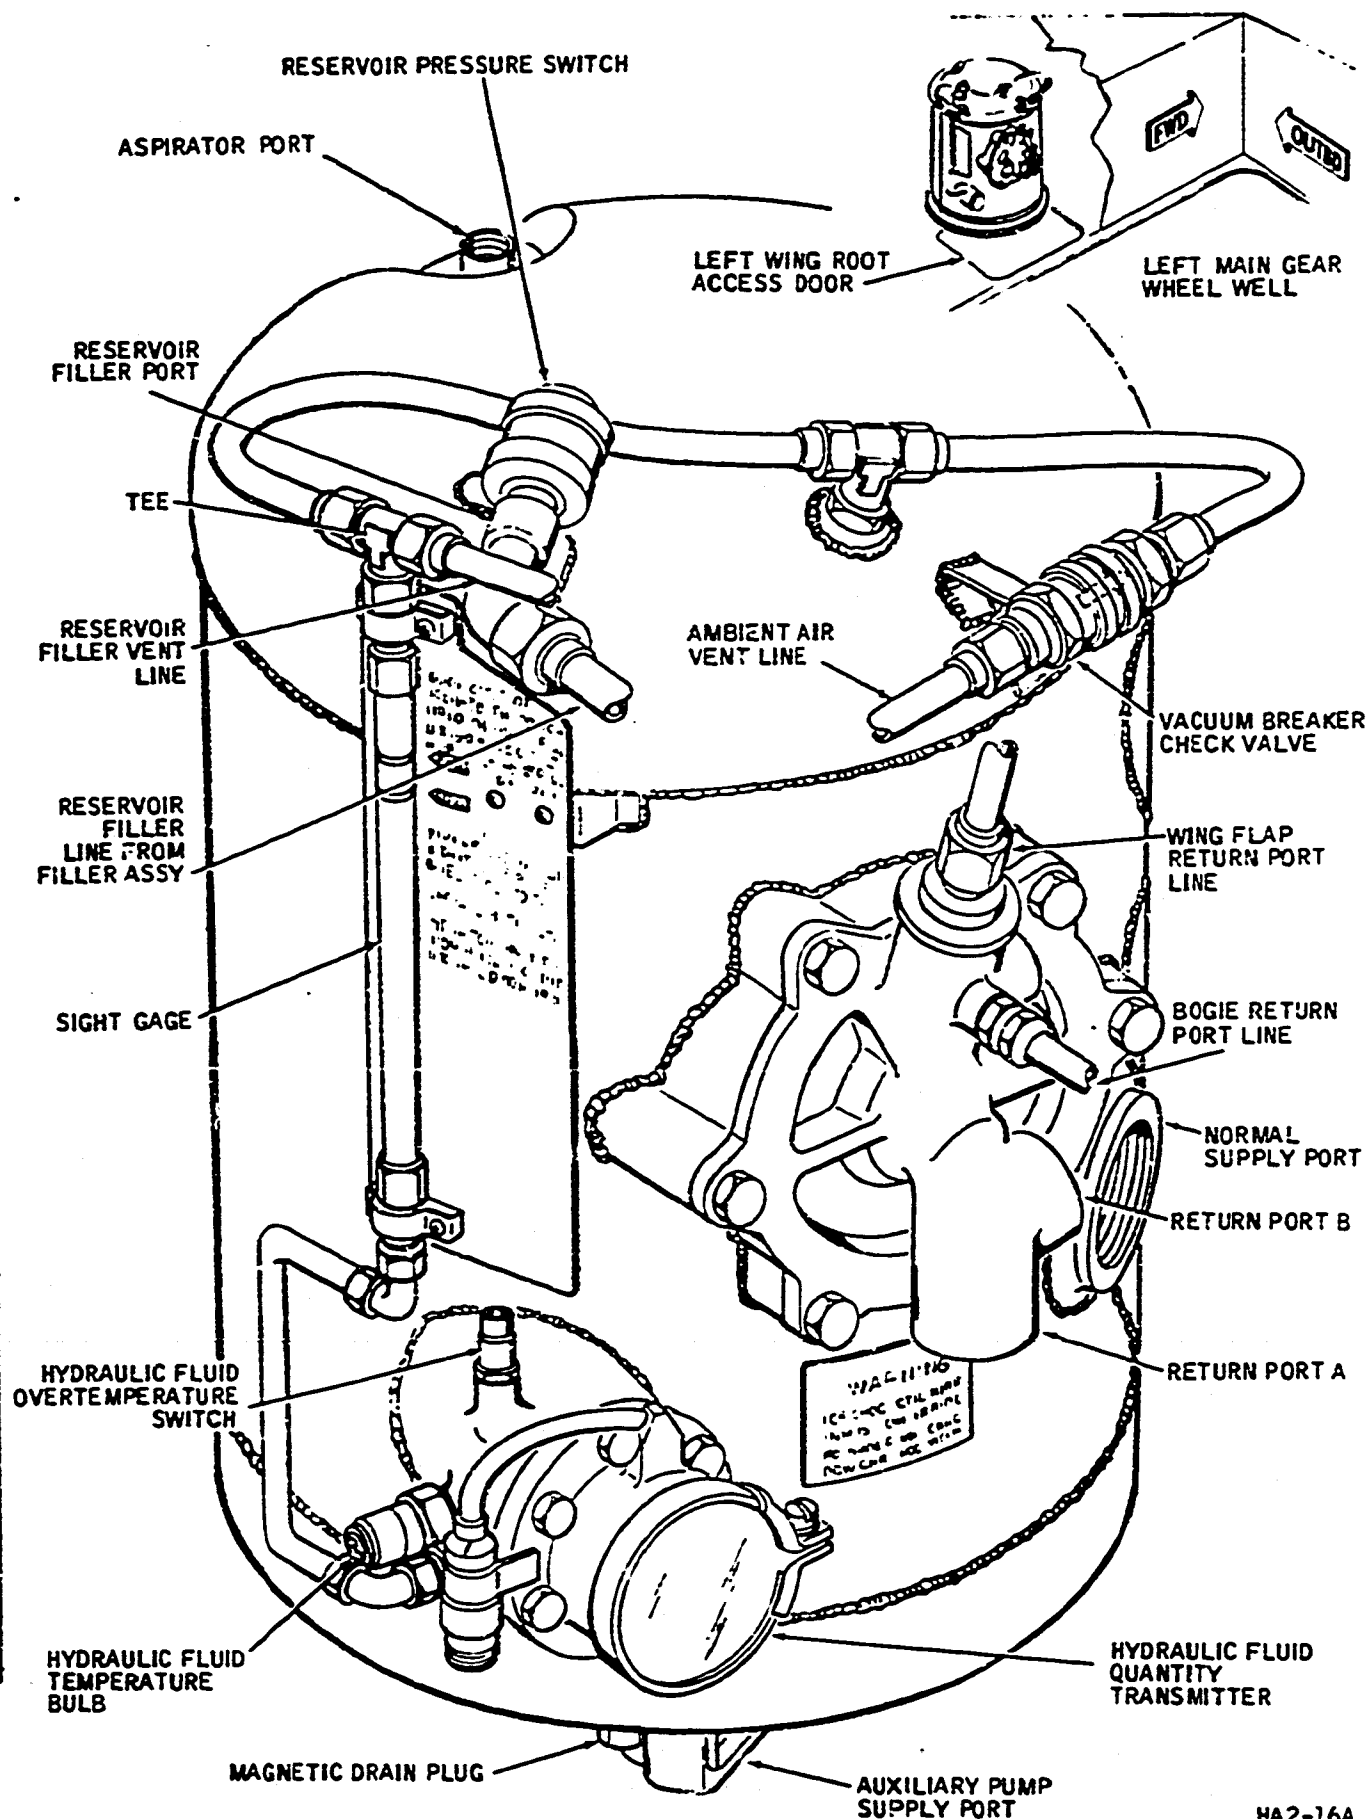

Hydraulic System Reservoir -- External View  
 (Airplanes N8774 - N8778)  
 Figure 3 (Sheet 1)


HA2-16A

29-10-0  
 CODE 2  
 Page 8A

Aug 1/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
***DC-8 SIXTY SERIES***  
MAINTENANCE MANUAL

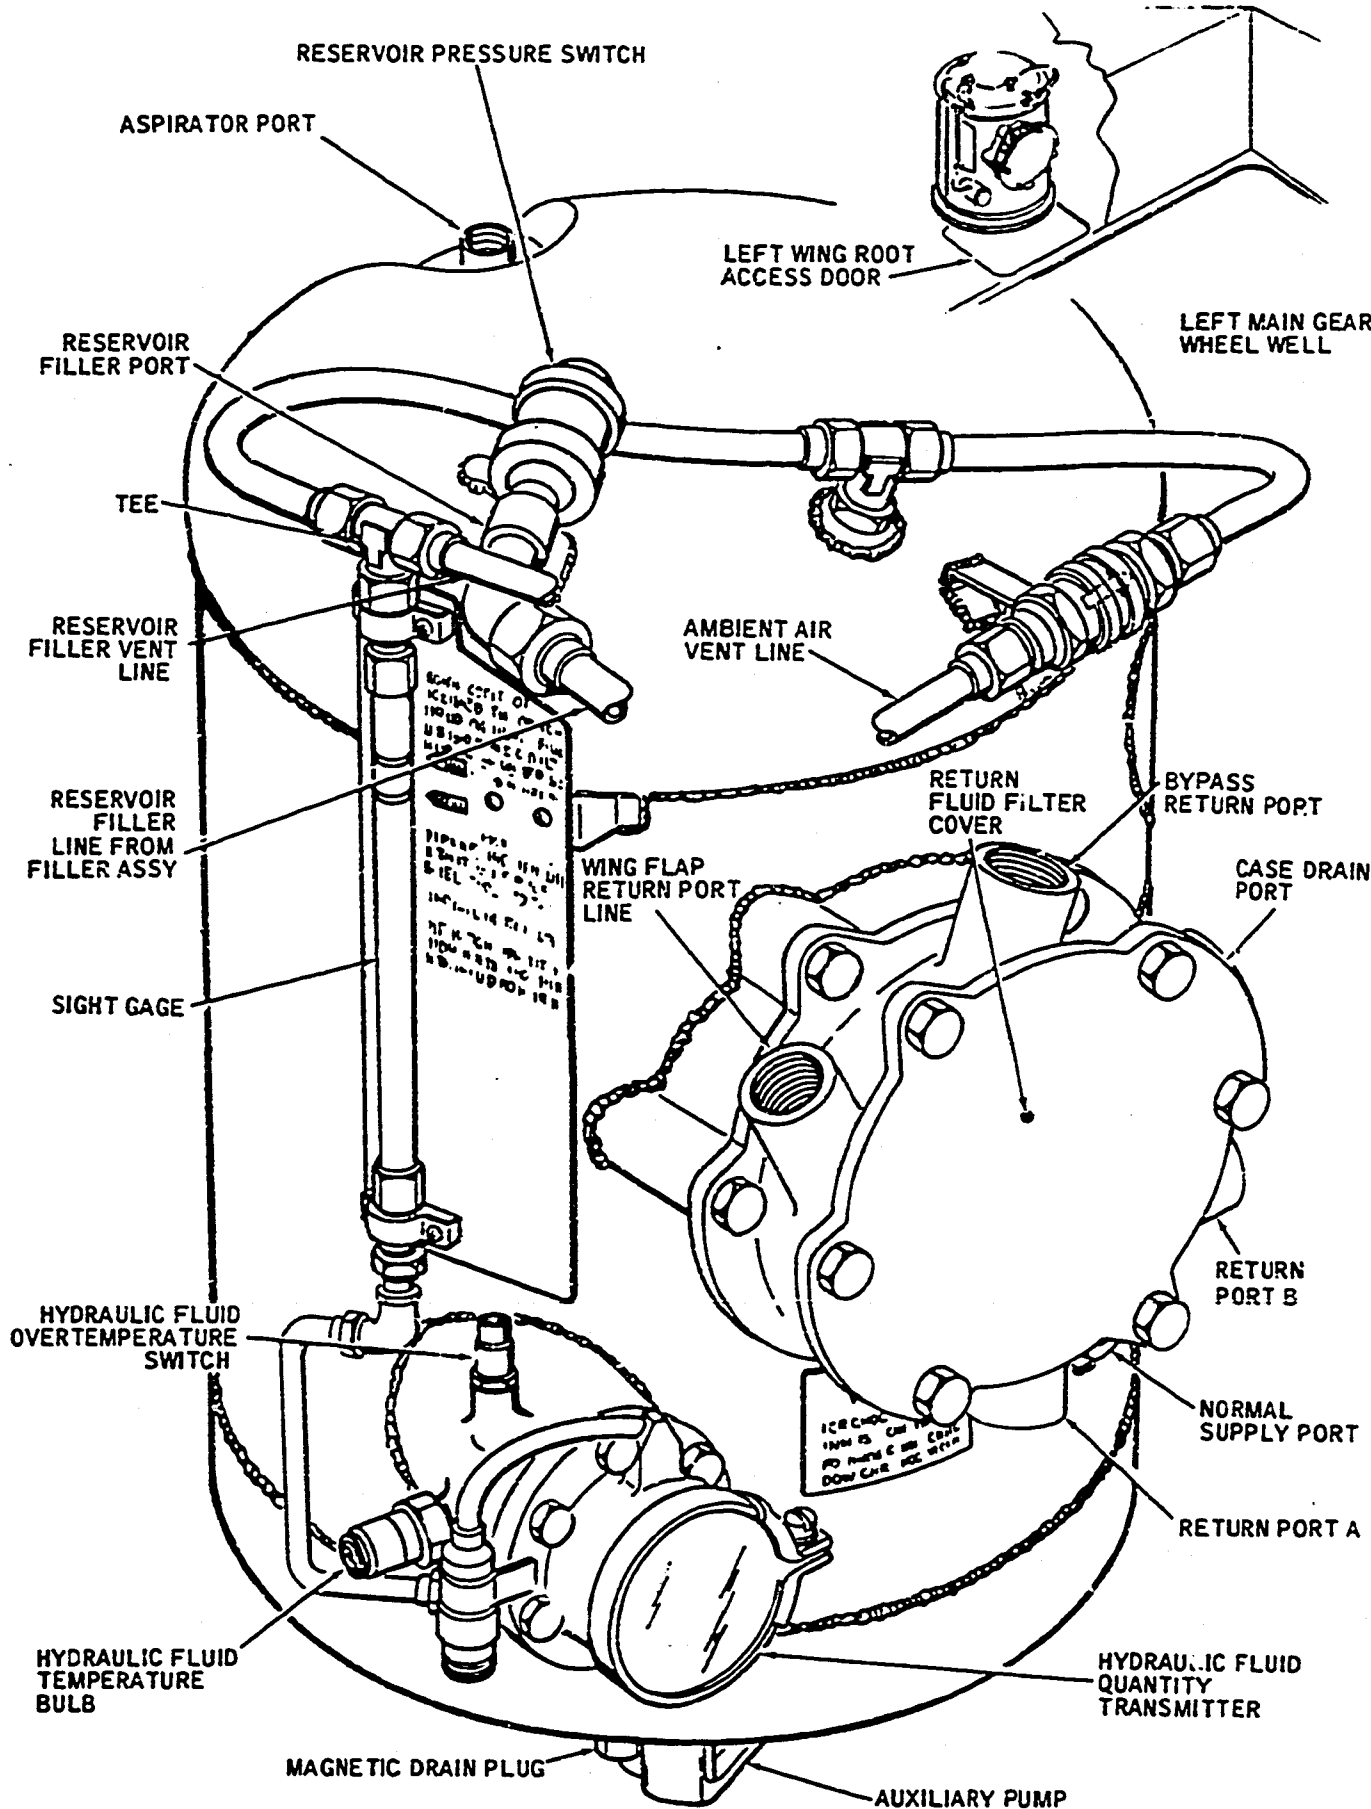


Hydraulic System Reservoir -- External View  
(Airplanes N8755-N8760, N8762-N8773)  
Figure 3 (Sheet 2)

**HA2-688**

Aug 1/69

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

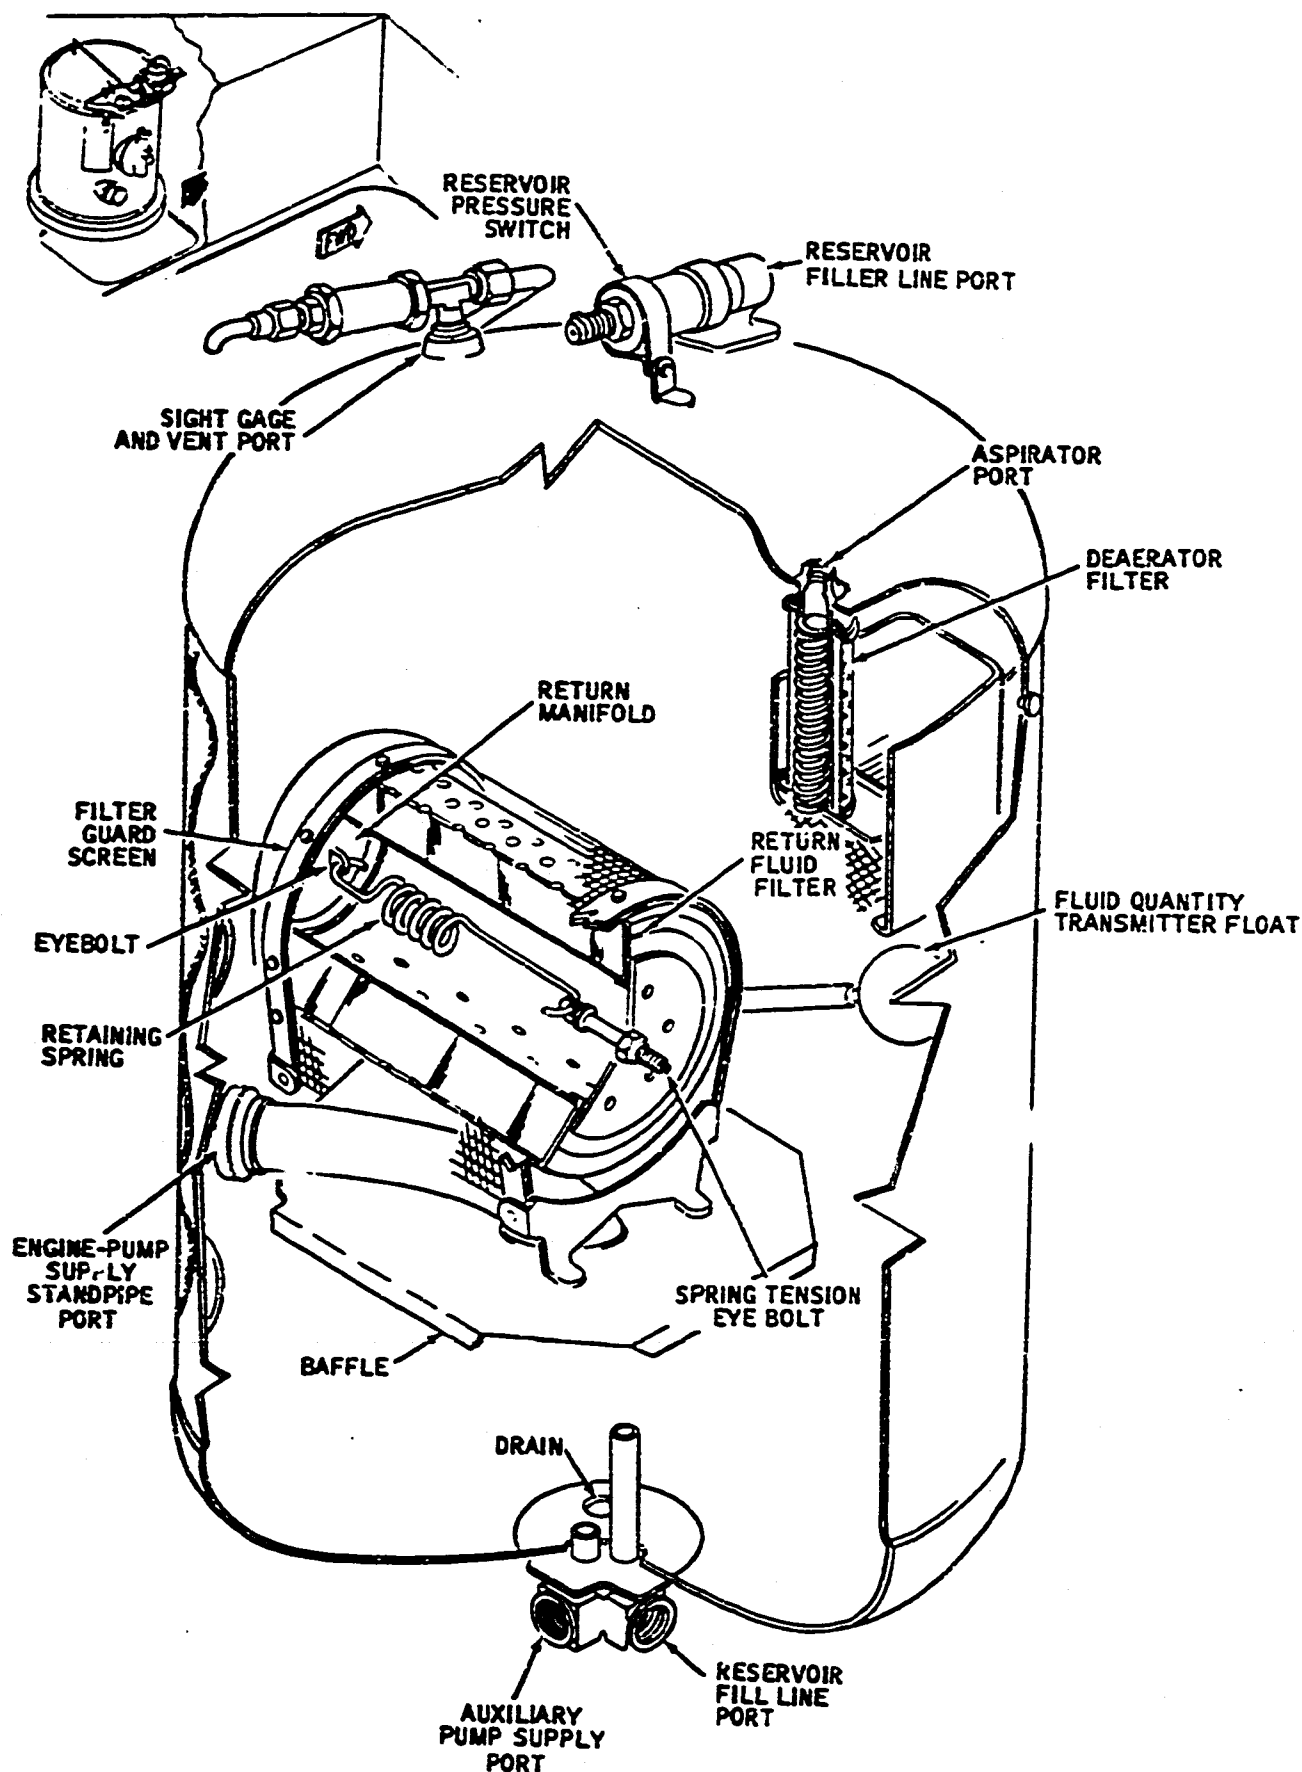

Hydraulic System Reservoir -- Cutaway View  
 Figure 4

HA2-10

29-10-0  
 CODE 2  
 Page 9

Aug 1/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

surface of the reservoir for return line ports, aspirator port, electrical sensing units, sight gage, instruction placards, magnetic drain plug, and system supply ports.

- (2) The reservoir is pressurized with air from the regulator-aspirator to a range of 30 to 35 psi and has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir volume is used for fluid and 1/10 is used for foam space.
- (3) The aspirator port through which the reservoir is pressurized is located in the recess on top of the reservoir. An aspirator-deaerator filter is supported in the reservoir by a screen and support box assembly which is mounted to the reservoir wall by two bolts.
- (4) On airplanes N8774-N8778, the mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The manifold is bolted to the flange and contains five ports: return port A, located at the bottom; return port B, located at the lower right side; the low-pressure return port, located at the upper right; the wing flap return port, located at the top; and the bogie return port, located on the face of the manifold just below the wing flap return port.
- (5) The return fluid filter is installed in the reservoir, behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the manifold holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
- (6) On airplanes N8755-N8760 and N8662-N8773, the mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The return ports manifold is an open-centered ring, flanged at both sides and provided with five fluid ports around its circumference; return port A is located at the bottom, return port B is located at the lower right side, the wing flap port is located at the upper left side, and the system selector valve bypass port is located at the top. One flange of the manifold is mounted with six bolts to the mounting flange on the reservoir. The return fluid filter cover fits into the open side of the manifold, and is attached to the outer manifold flange with six bolts to form a fluid-tight cover for both the manifold and the filter.
- (7) The return fluid filter is installed in the reservoir behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the return fluid filter cover holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to the engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) A flanged adapter for the fluid quantity transmitter is welded to the reservoir below and to the left of the return ports manifold. The adapter is provided with two small port bosses for the hydraulic fluid temperature bulb and the hydraulic fluid overtemperature switch. The lower end of the sight gage connects to a third port in the adapter, while the top of the sight gage tees into a port at the top of the reservoir. An instruction plate is mounted behind the sight gage and the vacuum breaker check valve tees into the port at the top of the reservoir that is used by the sight gage.

B. Hydraulic Reservoir Return Fluid Filter (See Figure 4.)


- (1) The reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply. The filter is located behind the return ports manifold and is spring loaded to act as its own relief valve. On airplanes N8774-N8778, access to the filter is by removing the return ports manifold. Removal of the return ports manifold necessitates disconnecting the return lines from the manifold and removal of six bolts which secure the manifold to the reservoir. The filter which is attached to the manifold is then withdrawn from the reservoir. On airplanes N8755-N8760 and N8762-N8773, access to the filter is gained by removing the return filter cover from the return ports manifold by removal of six bolts. The filter is attached to the cover by a retaining spring, and is withdrawn from the reservoir when the cover is removed.
- (2) Externally, the filter consists of two perforated concentric tubes. The area between the tubes is closed by metal end caps which are bonded to the two tubes. A resilient rubber gasket is bonded to each of the caps. Each gasket must be smooth and flat for proper sealing of the filter. The gaskets act as a static seal and a relief valve seat.
- (3) Internally, the filter has a 10-micron, resin-impregnated, convoluted paper-type filter element. The area of the filter element is approximately 1960 square inches. The filter is held in place by a retaining spring. One end of the spring is attached to an eyebolt located inside the return port's manifold. The spring passes through the center chamber of the filter and is connected to another eyebolt. This eyebolt is secured to a large washer and plate by means of a self-locking nut. The washer seats on the rubber gasket which is bonded to the filter. The fluid enters the center chamber of the filter and passes through the inner tube of the filter to the filter element by means of perforation holes. Foreign matter is filtered out by the filter element, and the fluid leaves the element through perforation holes in the outer tube. When the element becomes saturated with foreign matter, the filter acts as its own relief valve and unseats at 20 to 25 psi above normal return pressure which allows fluid to bypass the filter and enter the reservoir.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

C. Hydraulic Reservoir Air Pressure Regulator-Aspirator (See Figure 5.)

- (1) The reservoir air pressure regulator-aspirator is a jet-type air pump, regulated by a pressure-sensitive shutoff valve. The unit pressurizes the hydraulic reservoir with air to the operating pressure range of 30 to 35 psi. The regulator-aspirator is located on the top inboard side of the reservoir and is mounted on the reservoir retainer ring. Access to regulator-aspirator is through the left wing root access door.
- (2) The regulator-aspirator assembly consists of a main aspirator body and a regulator housing. The main aspirator body has two inlet ports and one outlet port. The ports are permanently identified inlet, outlet, and air inlet. The plug for an air check valve is located near the outlet port. A chemically treated paper filter is installed near the aspirator body air inlet port in the air line from the pressurized cabin area. A metal screen filter is installed on the check valve which tees into the aspirator body air inlet port.
- (3) The reservoir air pressure regulator-aspirator operates basically with a jet pump action which is regulator controlled. Fluid enters the assembly through the fluid inlet port where it is filtered and then ported through the valve assembly of the regulator. During normal operation, when air pressure at the outlet port is under 30 psi, the valve is open porting fluid to the nozzle. The orifice in the nozzle sprays the fluid through the venturi of the outlet port, creating a vacuum in the chamber around the venturi. When the vacuum becomes great enough to create a pressure differential of approximately 1 psi, ambient air opens the air check valve. The air is ported to the chamber around the venturi and is siphoned, with the fluid, through the outlet port.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

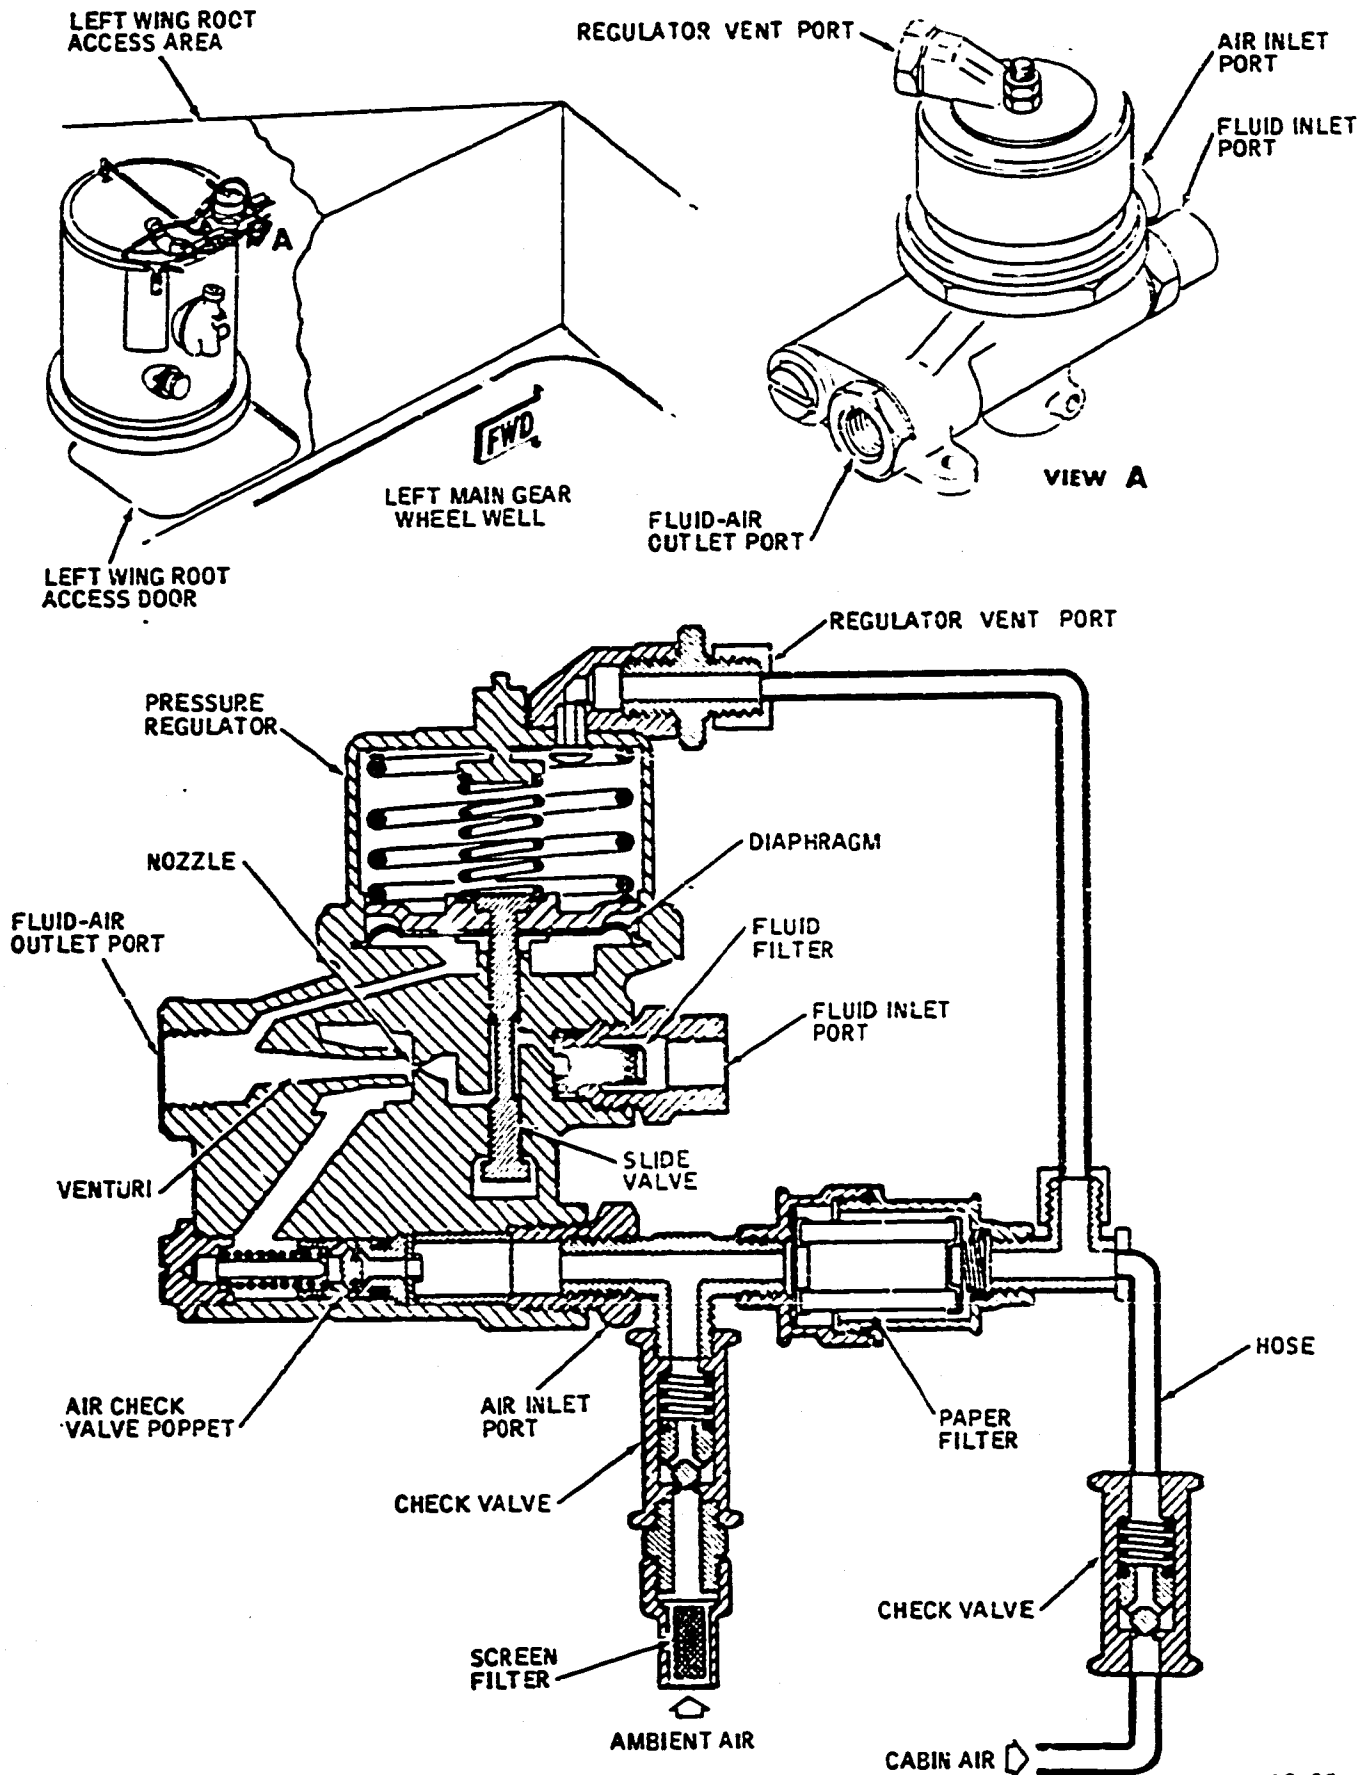

Reservoir Air Pressure Regulator-Aspirator -- Schematic  
 Figure 5

HA2-25

29-10-0  
 CODE 2  
 Page 13

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) Hydraulic fluid inlet pressure at the engine-driven hydraulic pumps is improved at high altitude operation by supplying pressurized filtered cabin air to the reservoir regulator-aspirator instead of ambient outside air. Part of the inlet air is diverted by a tee fitting to the regulator chamber to provide a more positive regulating force on the diaphragm than would be obtained with low ambient pressures. The chemically treated paper filter, installed in the regulator-aspirator air supply line from the cabin, removes smoke tars and impurities from the pressurized cabin air. The steel mesh screen filter, installed on the check valve which tees into the regulator-aspirator air inlet port downstream of the paper filter, removes dust, dirt, and foreign particles from the ambient air and serves as a standby to supply filtered air in event the paper filter is clogged.
- (5) As pressure in the reservoir builds up, back pressure is bled from the outlet port to the diaphragm chamber. The reaction on the diaphragm begins to move the slide valve to cut off the fluid flow. At 30 to 35 psi of back pressure, the diaphragm completely closes the slide valve, cutting off the flow of fluid. If there is a regulator malfunction, the aspirator stalls when outlet pressure reaches a maximum of 40 psi.
- (6) The aspirator is capable of pressurizing the reservoir to 30 to 35 psi in approximately 4 minutes at altitudes from sea level to 15,000 feet, when fluid is ported through the nozzle at 0.5 gpm at 3000 psi.


D. Regulator-Aspirator Air Filters (See Figure 6.)

- (1) The regulator-aspirator air filters remove ambient and cabin air impurities from the air which is used to pressurize the main hydraulic system reservoir. The filtering system is composed of two filters. One of which is a paper element filter, installed directly in the cabin air supply line near the regulator-aspirator. The other filter is a fine mesh, screen-type filter, installed on a check valve and positioned at right angles to the regulator-aspirator air inlet port. The screen filter, in addition to providing an immediate supply of ambient air during ground operations, serves as a standby air inlet to preclude air starvation of the regulator-aspirator in the event the paper element filter becomes clogged.


E. Hydraulic Reservoir Relief Valve (See Figure 7.)

- (1) The reservoir relief valve and the air pressure aspirator-regulator keep the reservoir pressurized to normal operating range. The valve relieves excess air pressure which may build up in the reservoir through thermal expansion in the system. The valve has an inlet port and an outlet port and consists, internally, of an inlet port seat and a spring-loaded poppet.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

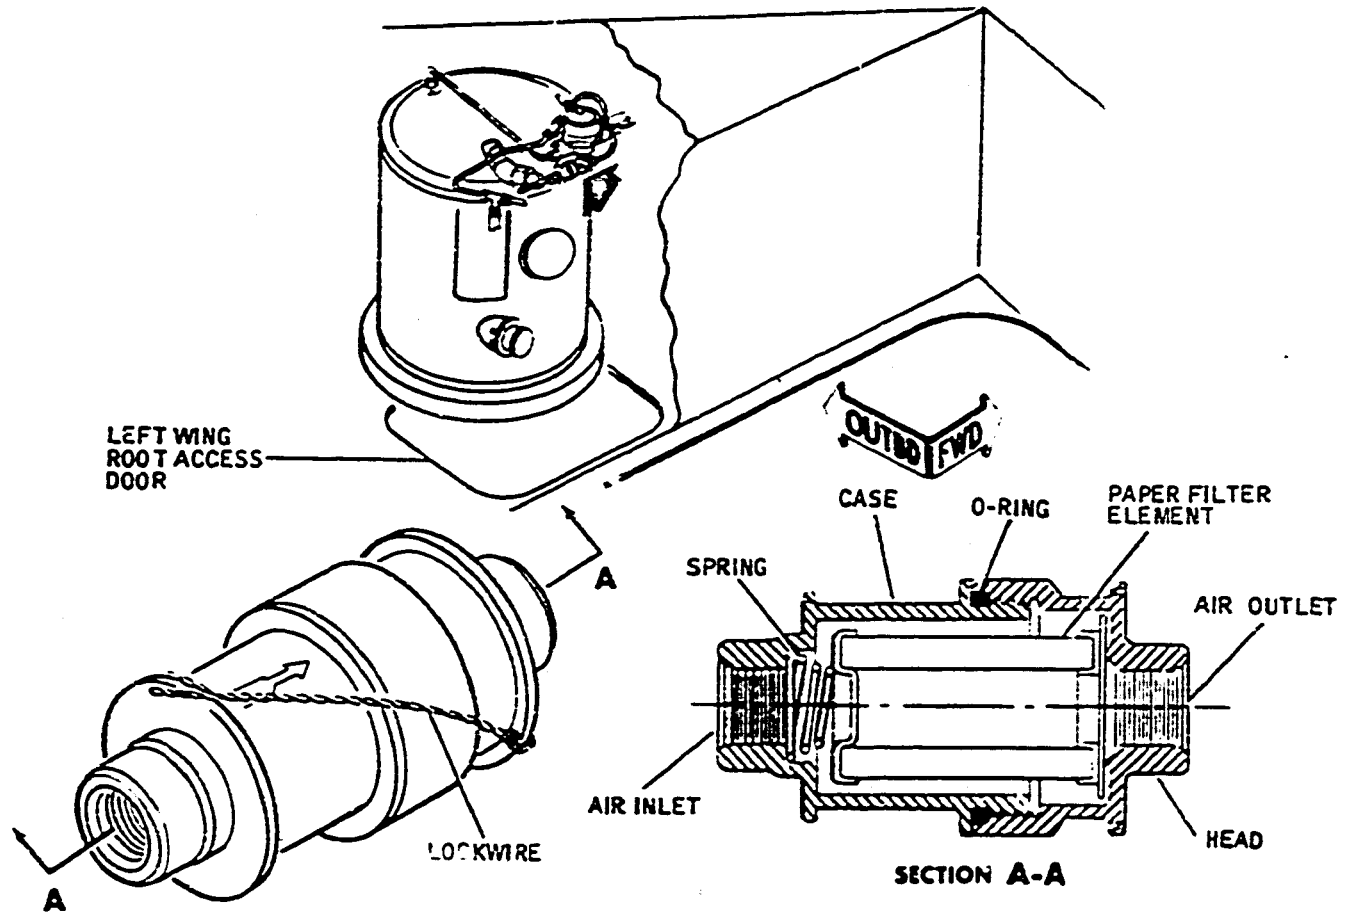

PAPER ELEMENT FILTER

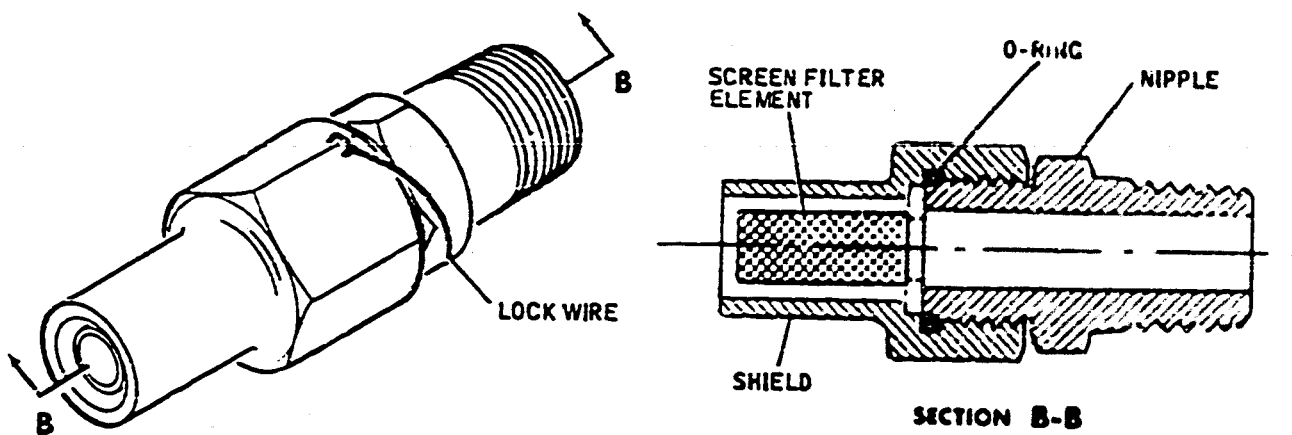

SCREEN FILTER

Regulator-Aspirator Air Filters -- Cutaway View  
 Figure 6




HA2-35

29-10-0  
 CODE 2  
 Page 15

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

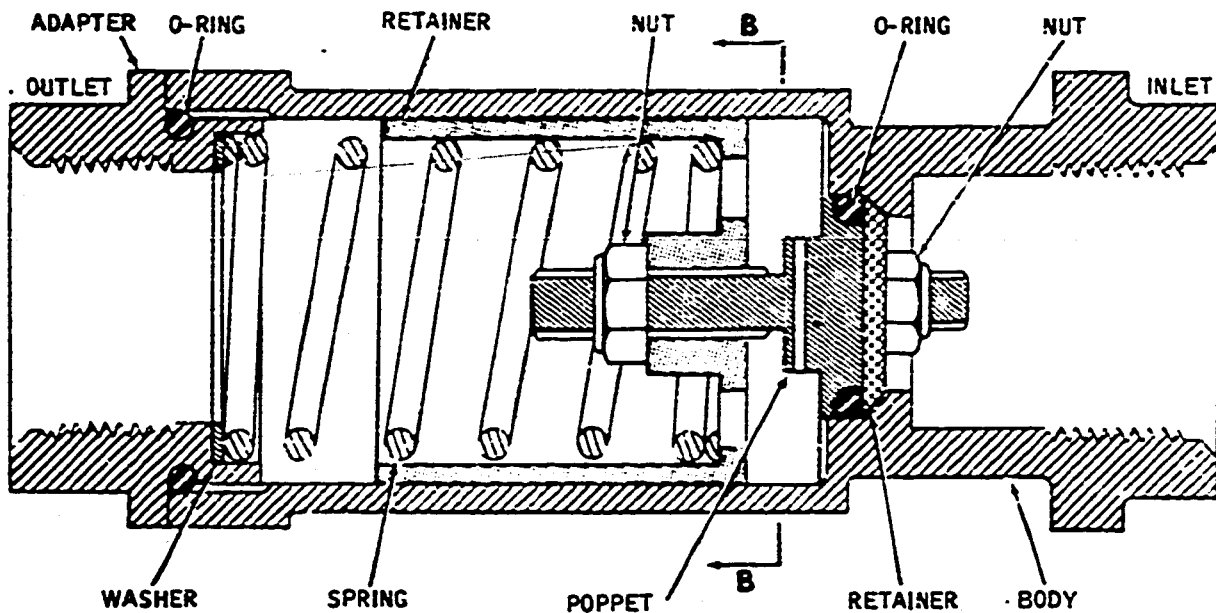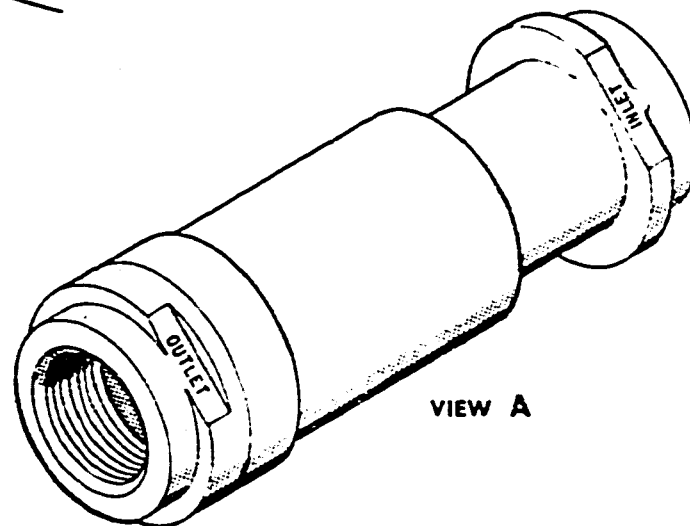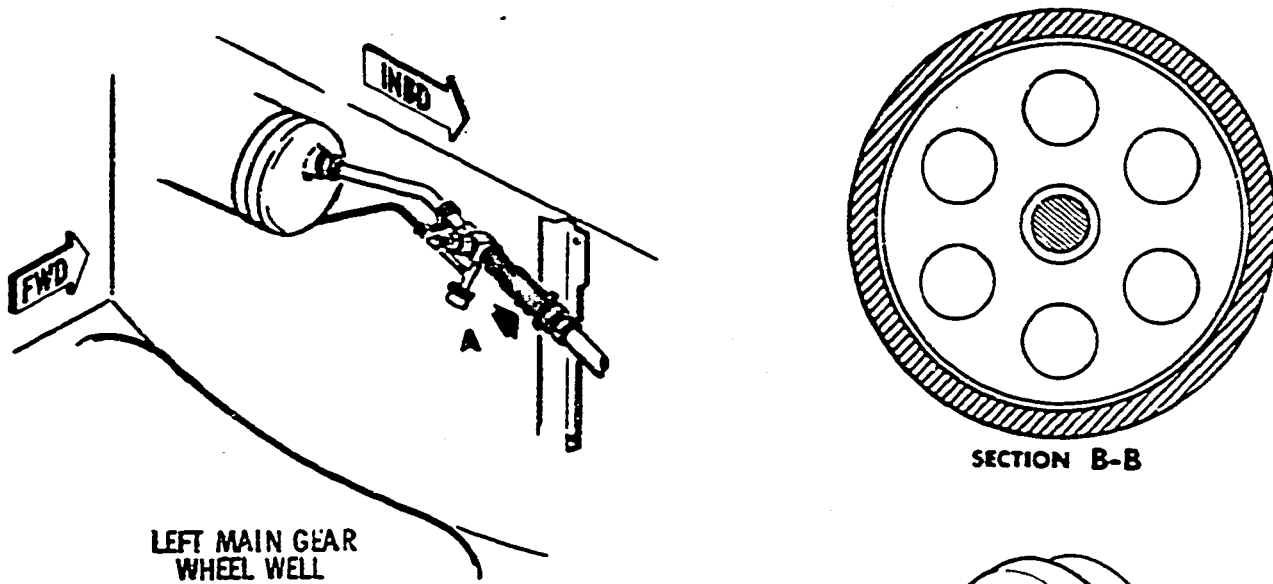

Hydraulic Reservoir Relief Valve  
 Figure 7

HA2-17

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The relief valve is installed in the overboard vent line downstream of the hydraulic reservoir air bleed valve. In the event that excess pressure builds up in the reservoir, the poppet will start to relieve at 45 (+5, -0) psi. Full flow of 10 gpm is attained at 80 psi maximum. The poppet reseats at 90 percent of the opening pressure.

F. Hydraulic Reservoir Air Bleed Valve (See Figure 8.)

- (1) The hydraulic reservoir air bleed valve and pressure gage are located on the aft side of the rear spar in the left main gear wheel well, inboard of the hydraulic reservoir air chamber. The bleed valve and gage are installed in the overboard vent line, between the reservoir air chamber and the reservoir relief valve.
- (2) The bleed valve is used to relieve the reservoir air pressure prior to disconnecting lines or components in the hydraulic system. The pressure gage provides a ready indication of the hydraulic reservoir air pressure and is used in conjunction with the bleed valve to indicate the air pressure status.
- (3) The air inflation valve is installed on the same fitting as the bleed valve and pressure gage. The air inflation valve is used to manually charge the reservoir with air or dry nitrogen.


G. Hydraulic Reservoir Vacuum Breaker Check Valve (See Figure 9.)

- (1) The hydraulic reservoir vacuum breaker check valve is installed on the regulator-aspirator mounting bracket, and connects to the tee fitting at the top of the reservoir. The valve is vented to ambient air. The purpose of this valve is to maintain atmospheric pressure in the reservoir, allowing hydraulic fluid to flow to the auxiliary hydraulic pump in the event of a failure of the reservoir pressurization system. The failure, or breakdown, of the pressurization system could cause a fluid starvation at the auxiliary hydraulic pump because of vacuum buildup in the reservoir.

H. Hydraulic Reservoir Air Chamber

- (1) The hydraulic reservoir air chamber is a small, cylindrical tank with a capacity of 700 cubic inches. It has two ports, an inlet port at the bottom of the chamber and an outlet port in one end of the chamber. The inlet port mounting boss is fitted with a drain plug. The air chamber is installed on the aft side of the rear spar in the left main gear wheel well, inboard and above the hydraulic reservoir filler assembly. Access to the air chamber is through the left main gear inboard door.
- (2) The air chamber provides for greater fluid capacity in the hydraulic reservoir by providing air and foam space for the reservoir in a separate container. Air pressure in the chamber is maintained by the regulator-aspirator and the air relief valve. The air pressure in the chamber and reservoir can be relieved, when desired, by the air bleed

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

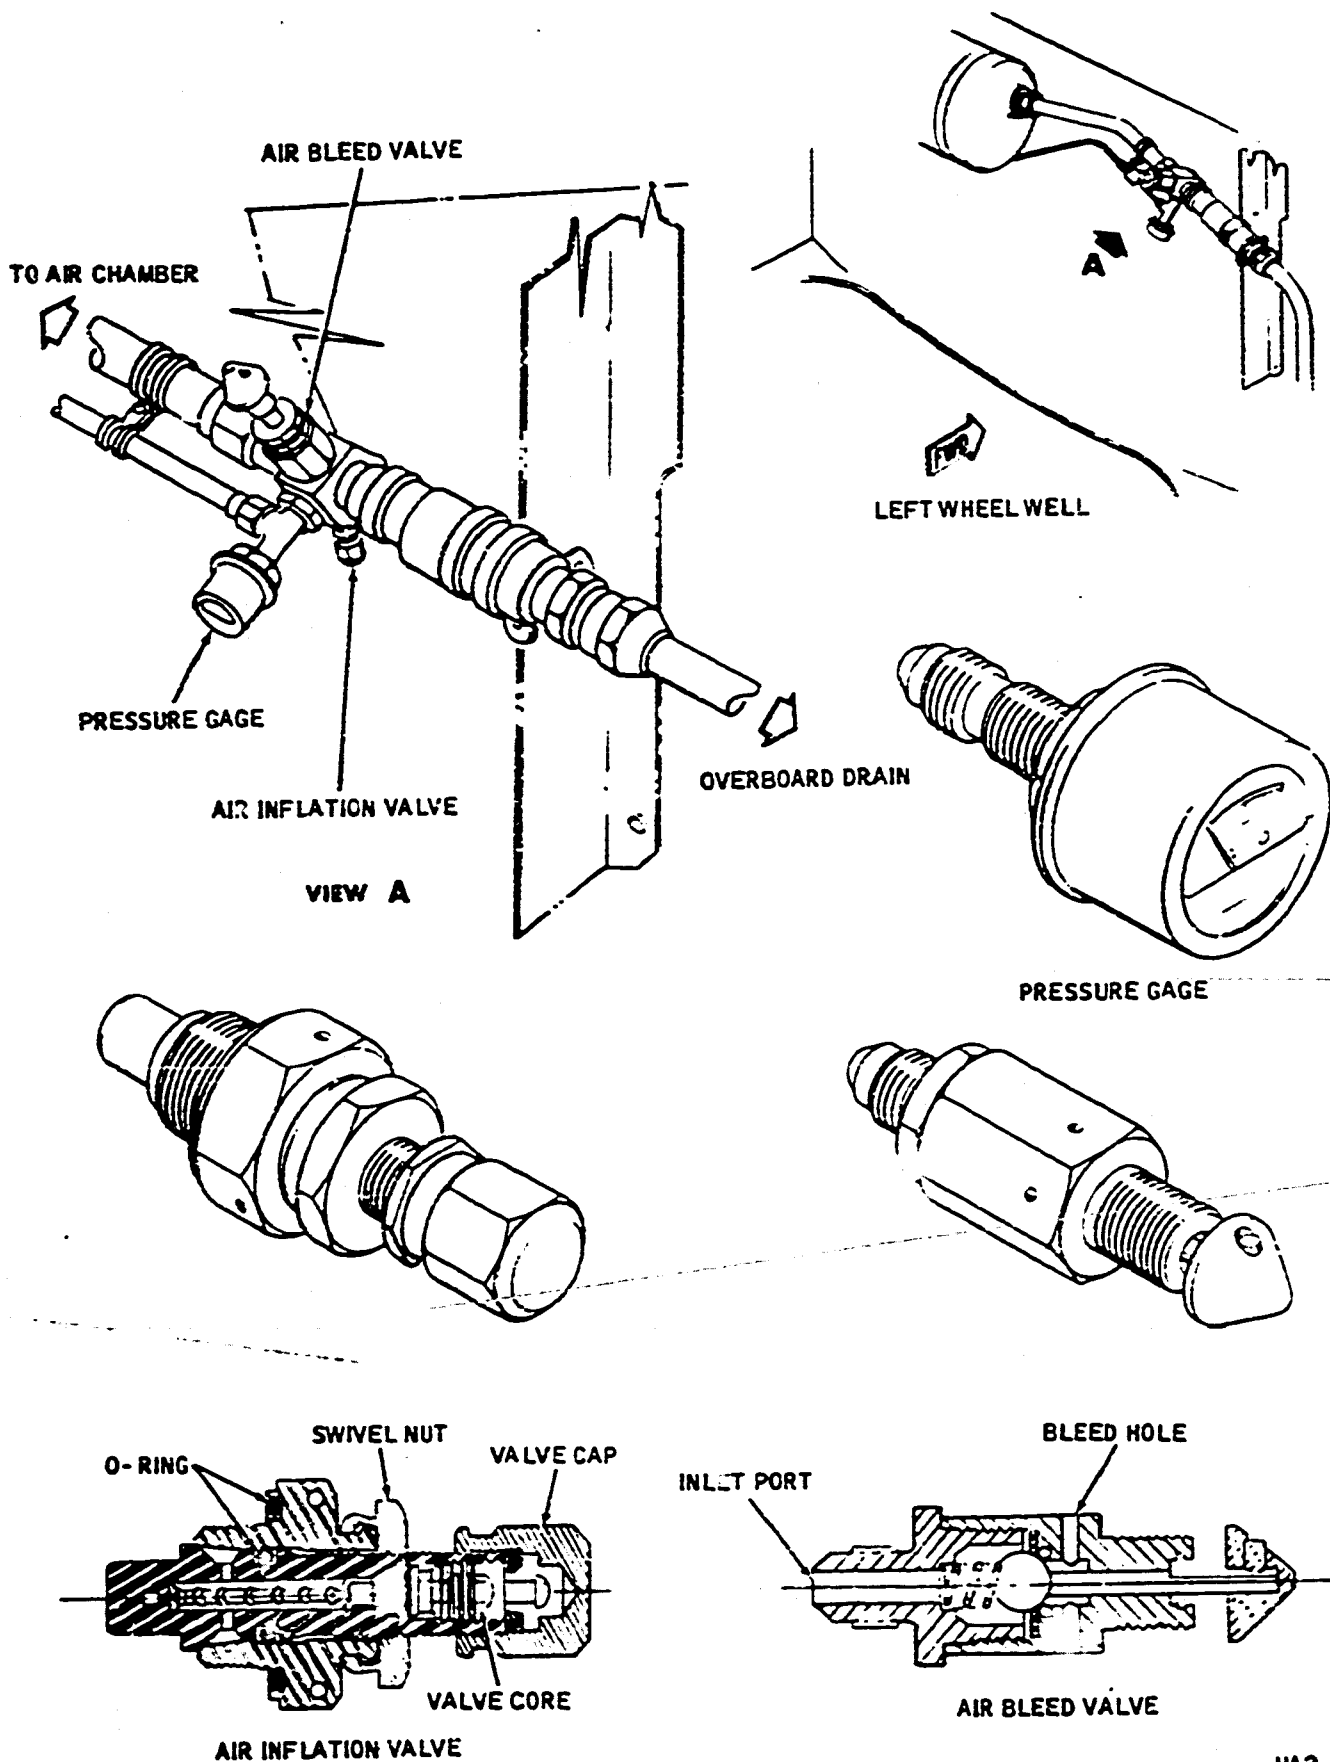


HA2-32

Reservoir Air Bleed Valve, Air Inflation  
 Valve, and Pressure Gage  
 Figure 8



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

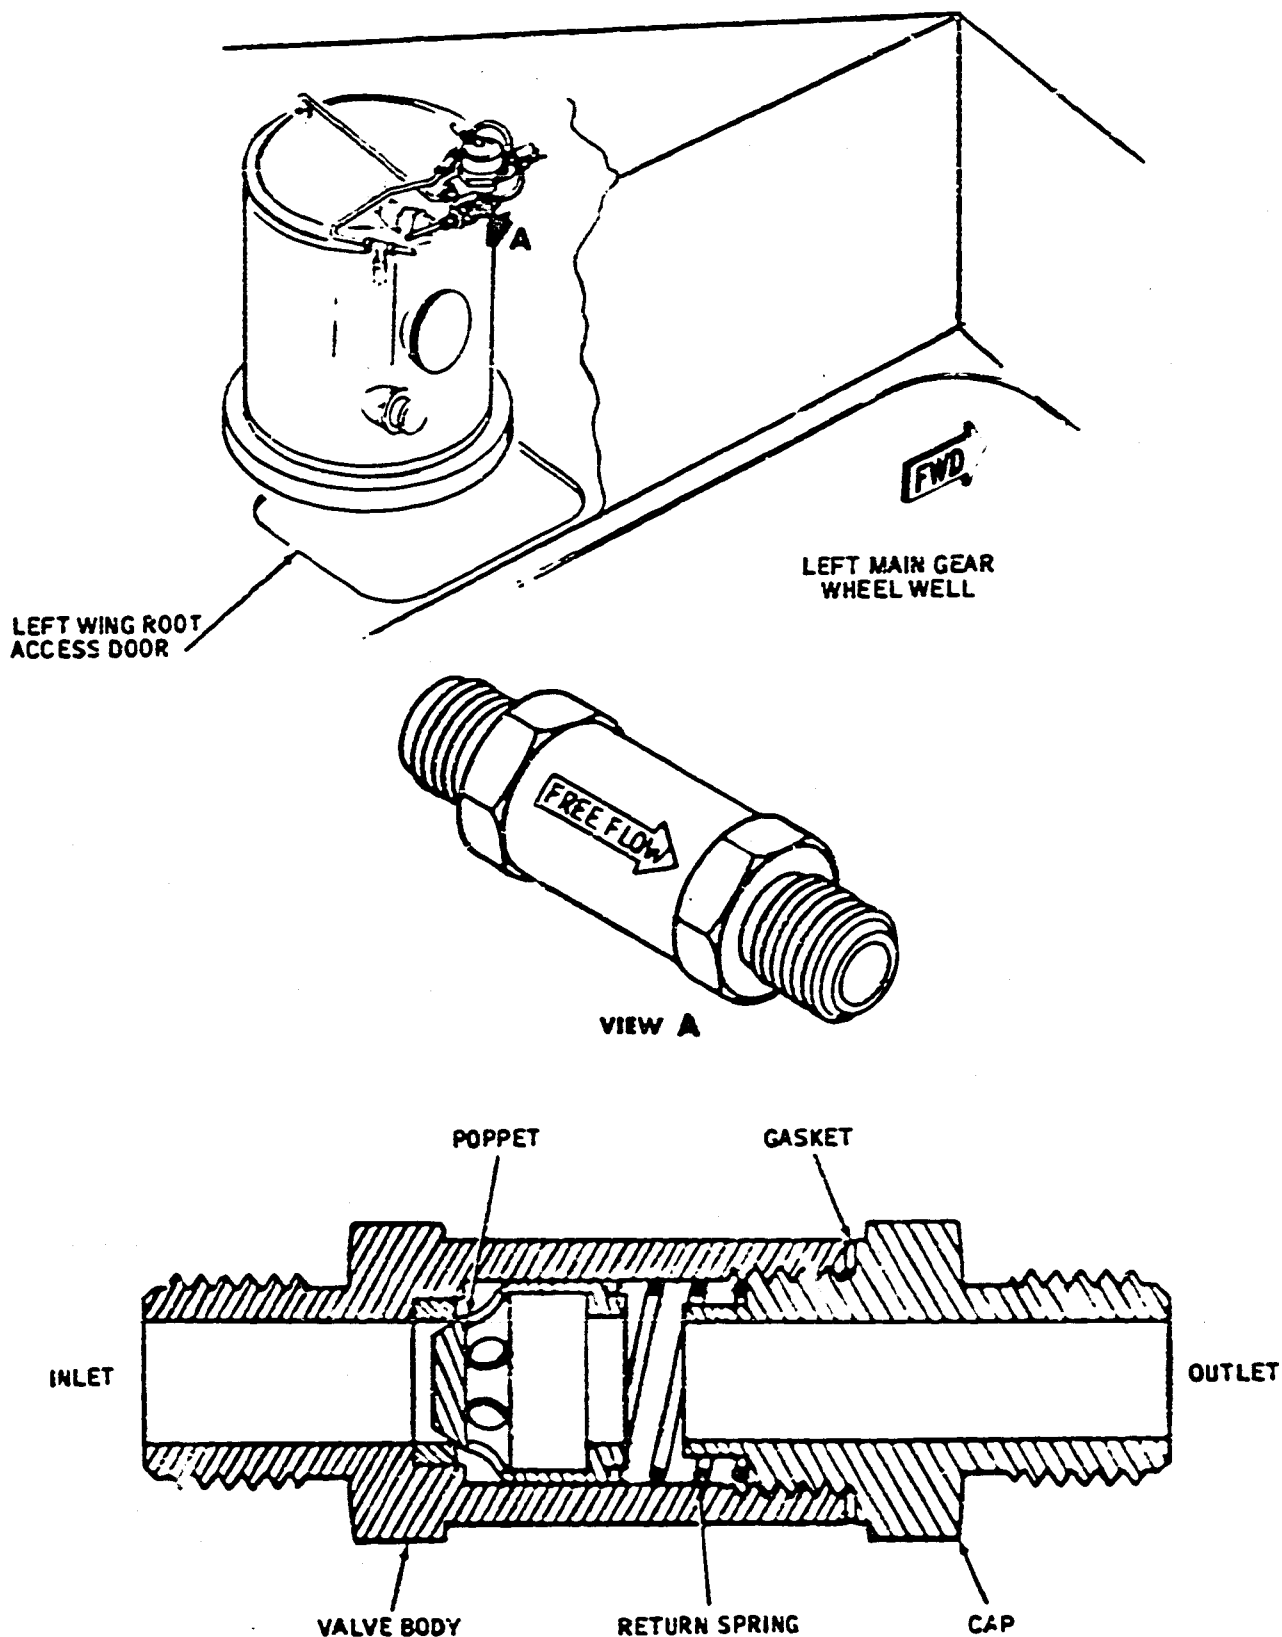

HA2-33

Hydraulic Reservoir Vacuum Breaker Check Valve  
 Figure 9

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 2  
 Page 19

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

valve located downstream of the chamber. The air chamber is mounted higher than the reservoir filler assembly, to prevent overfilling of the reservoir from reducing the available air space and to prevent fluid from being vented overboard through the reservoir relief valve.



I. Hydraulic Reservoir Port B Return Check Valve (See Figure 10.)

- (1) The reservoir port B return check valve is installed in port B of the reservoir to prevent reverse flow of hydraulic fluid from the reservoir to the return line. The check valve is located on the reservoir in the left wing root and is accessible through the left wing root access door.
- (2) Externally and internally, the port B check valve is a standard-type check valve with a 1500-psi rating. A nominal pressure of approximately 8 psi unseats the poppet, permitting fluid to flow through the valve. When the reservoir pressure exceeds the return line pressure, the poppet will seat and reverse fluid flow will be prevented.

J. Engine Hydraulic Fire Shutoff Valve (See Figures 11 and 12.)

- (1) The engine hydraulic fire shutoff valve is a gate-type, mechanically controlled valve, installed in the supply line of each engine-driven hydraulic pump. The engine hydraulic fire shutoff valve is actuated from the flight compartment to prevent the flow of hydraulic fluid into the engine section.
- (2) The engine hydraulic fire shutoff valve is mounted on a 2-piece channel bracket which is installed inside the wing leading edge, aft of the firewall of each inboard pylon. Access to the valve is through the access door located on the lower side of the wing leading edge, outboard of either the left or right inboard pylon. Each valve is located approximately 30 inches inboard of the access door.
- (3) Internally, the valve consists of a valve arm, valve arm link, cam plate, and slide blade. The valve arm link attaches to the valve arm and is allowed to swivel through an arc in relation to the valve arm. The link has a stop that will contact the arm when the two have traveled to the valve closed, full overtravel position. In the full open pre-travel position, the link contacts the arm stop.
- (4) A roller attached to the end of the link rides in, and extends through, a J-shaped slot in the cam plate. The rotation of the valve arm causes the link roller to follow the cam slot, allowing the arm and link to move through independent arcs.
- (5) The slide blade (gate of the valve) is slotted near the one end and also receives the link roller extending through the cam slot. The slide blade is positioned parallel to the cam plate and is guided by two grooves in the housing. This will allow the blade to open or close through porting of the valve by the action of the arm and link. The cam plate is pinned to the valve shaft, securing it rigidly in two

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

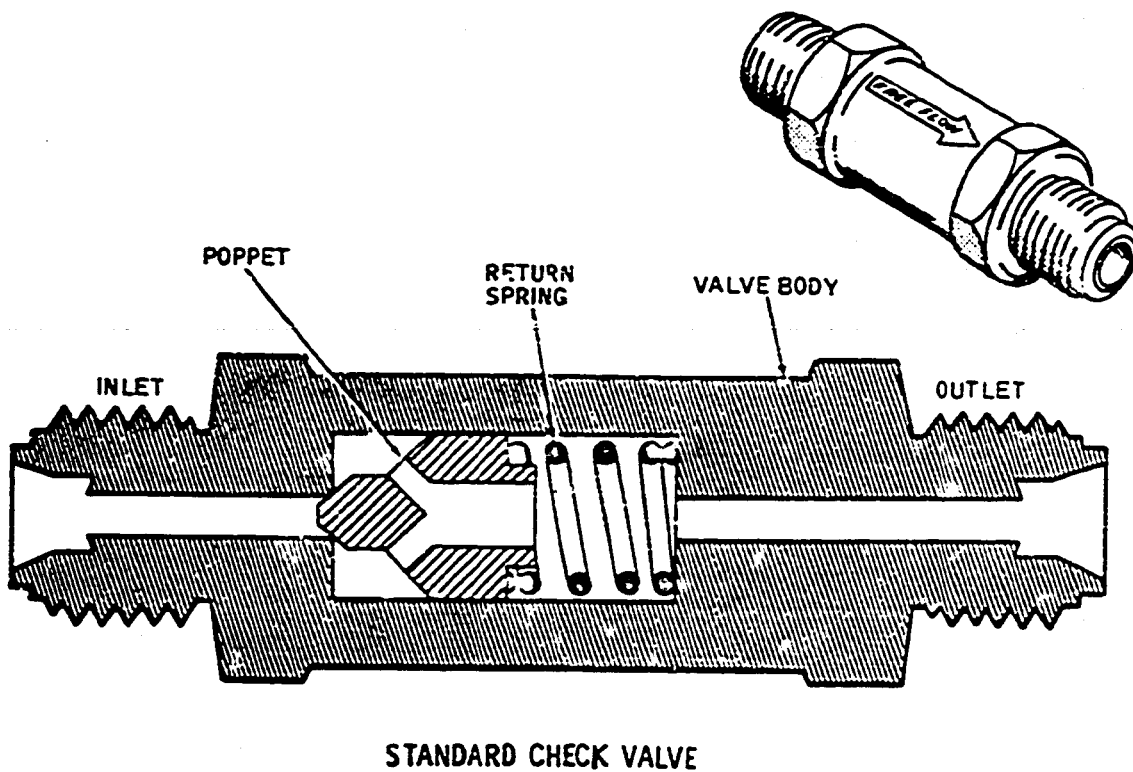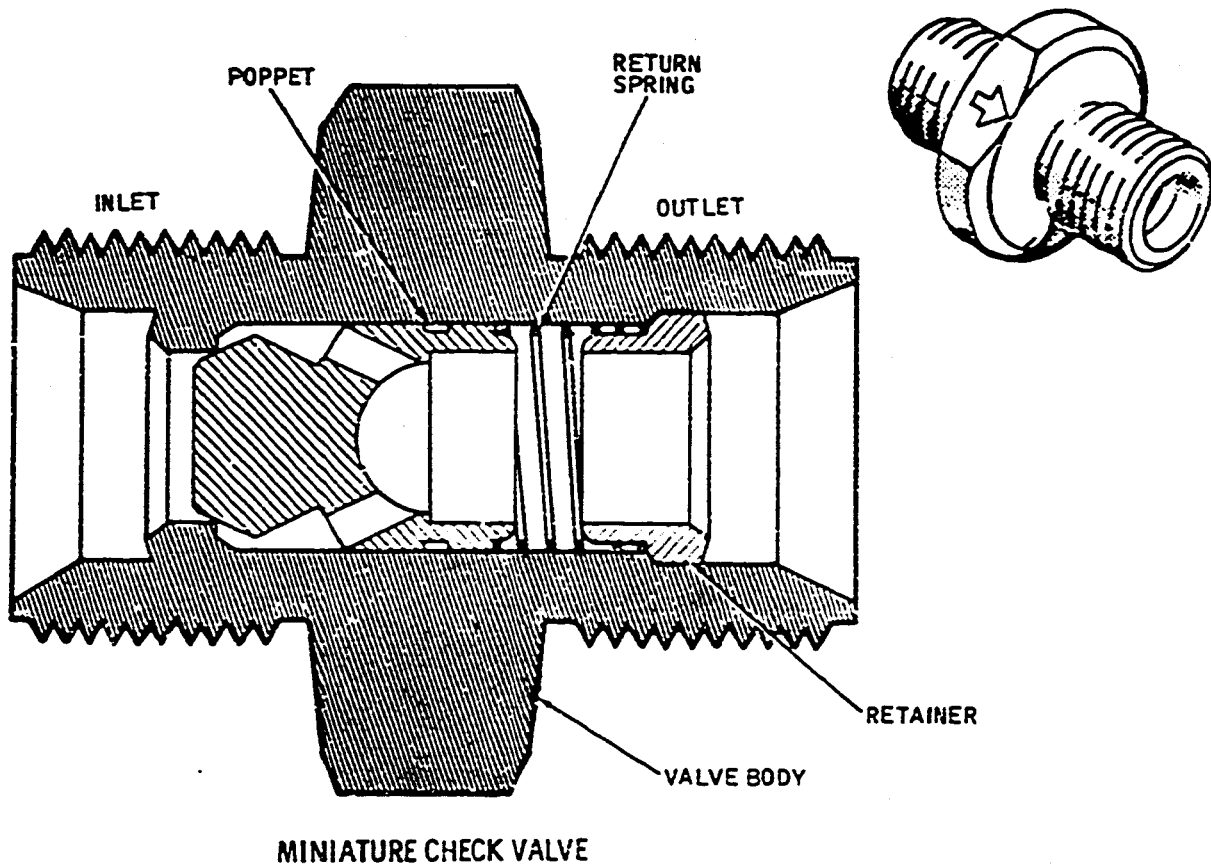

Hydraulic Check Valves -- Typical  
Figure 10


HA2-18A

Oct 1/67

Printed in U.S.A.


29-10-0  
CODE 2  
Page 21

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

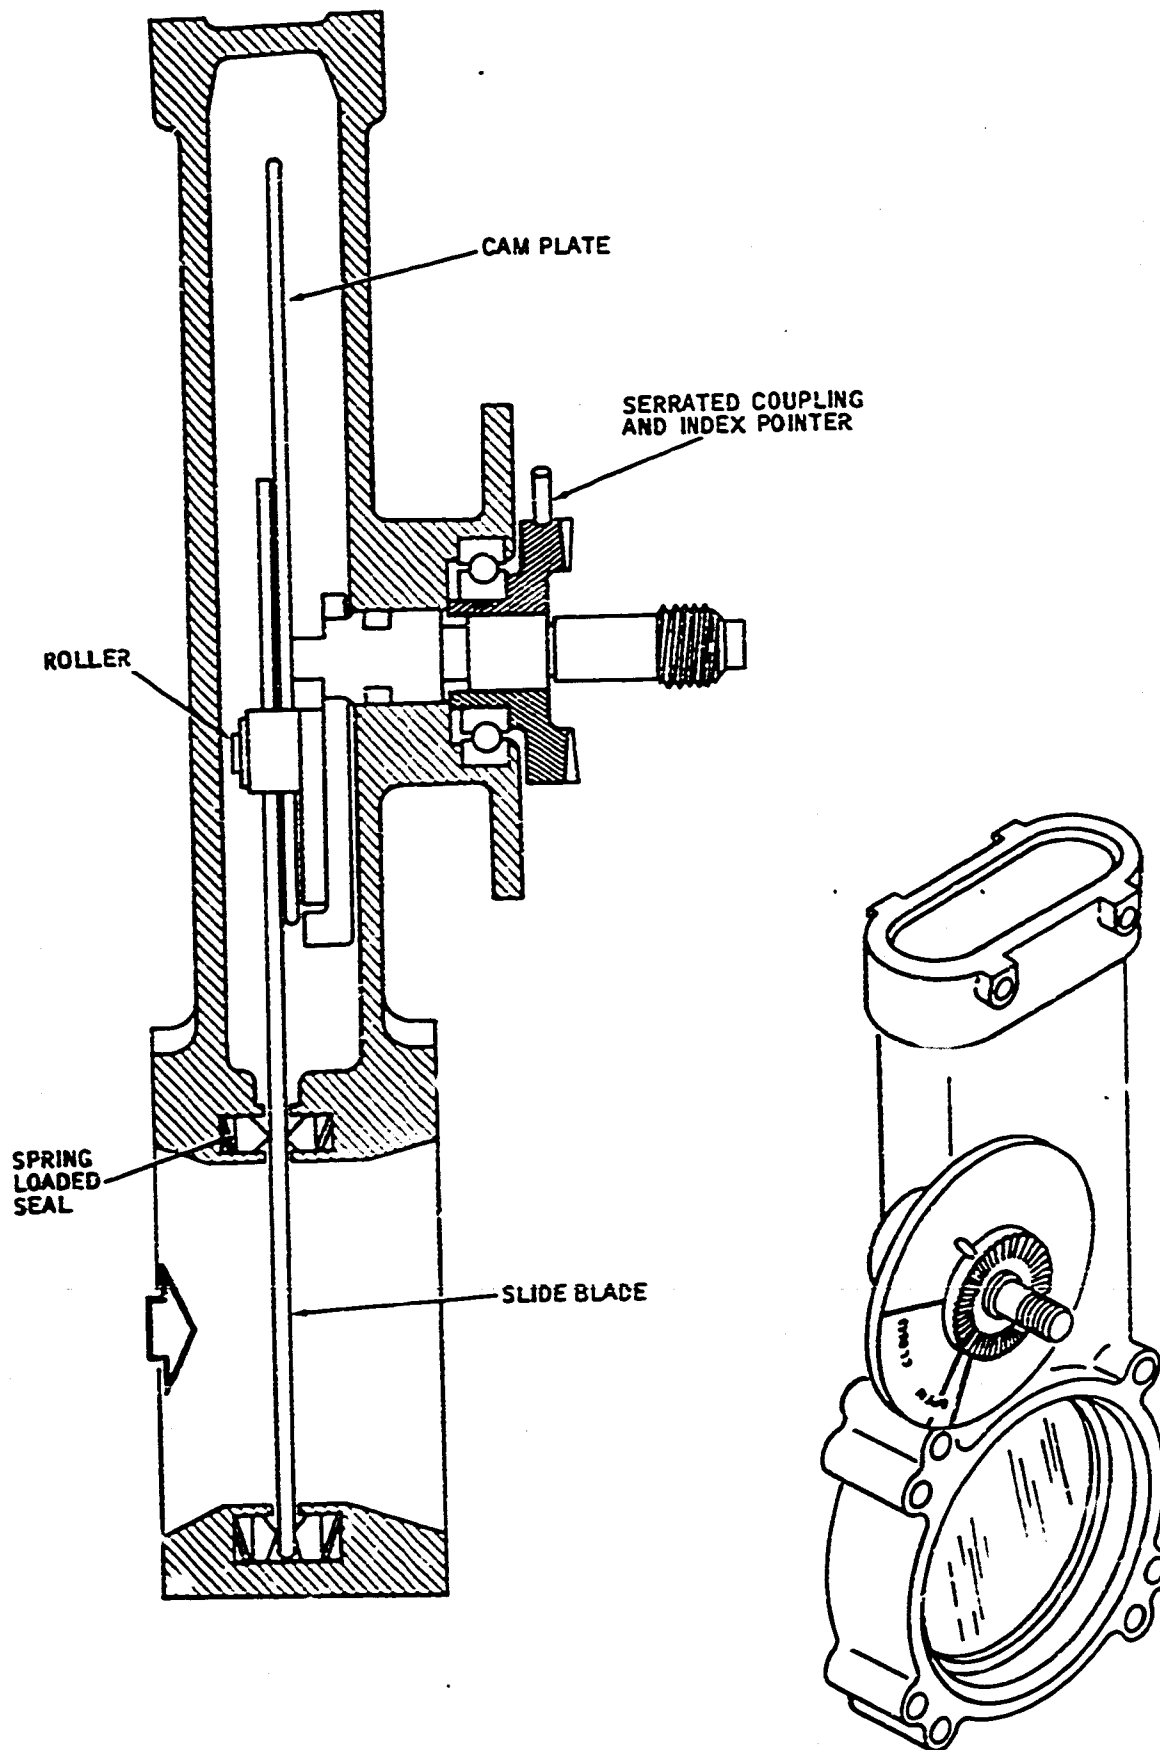

Engine Hydraulic Fire Shutoff Valve -- Schematic  
Figure 11

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

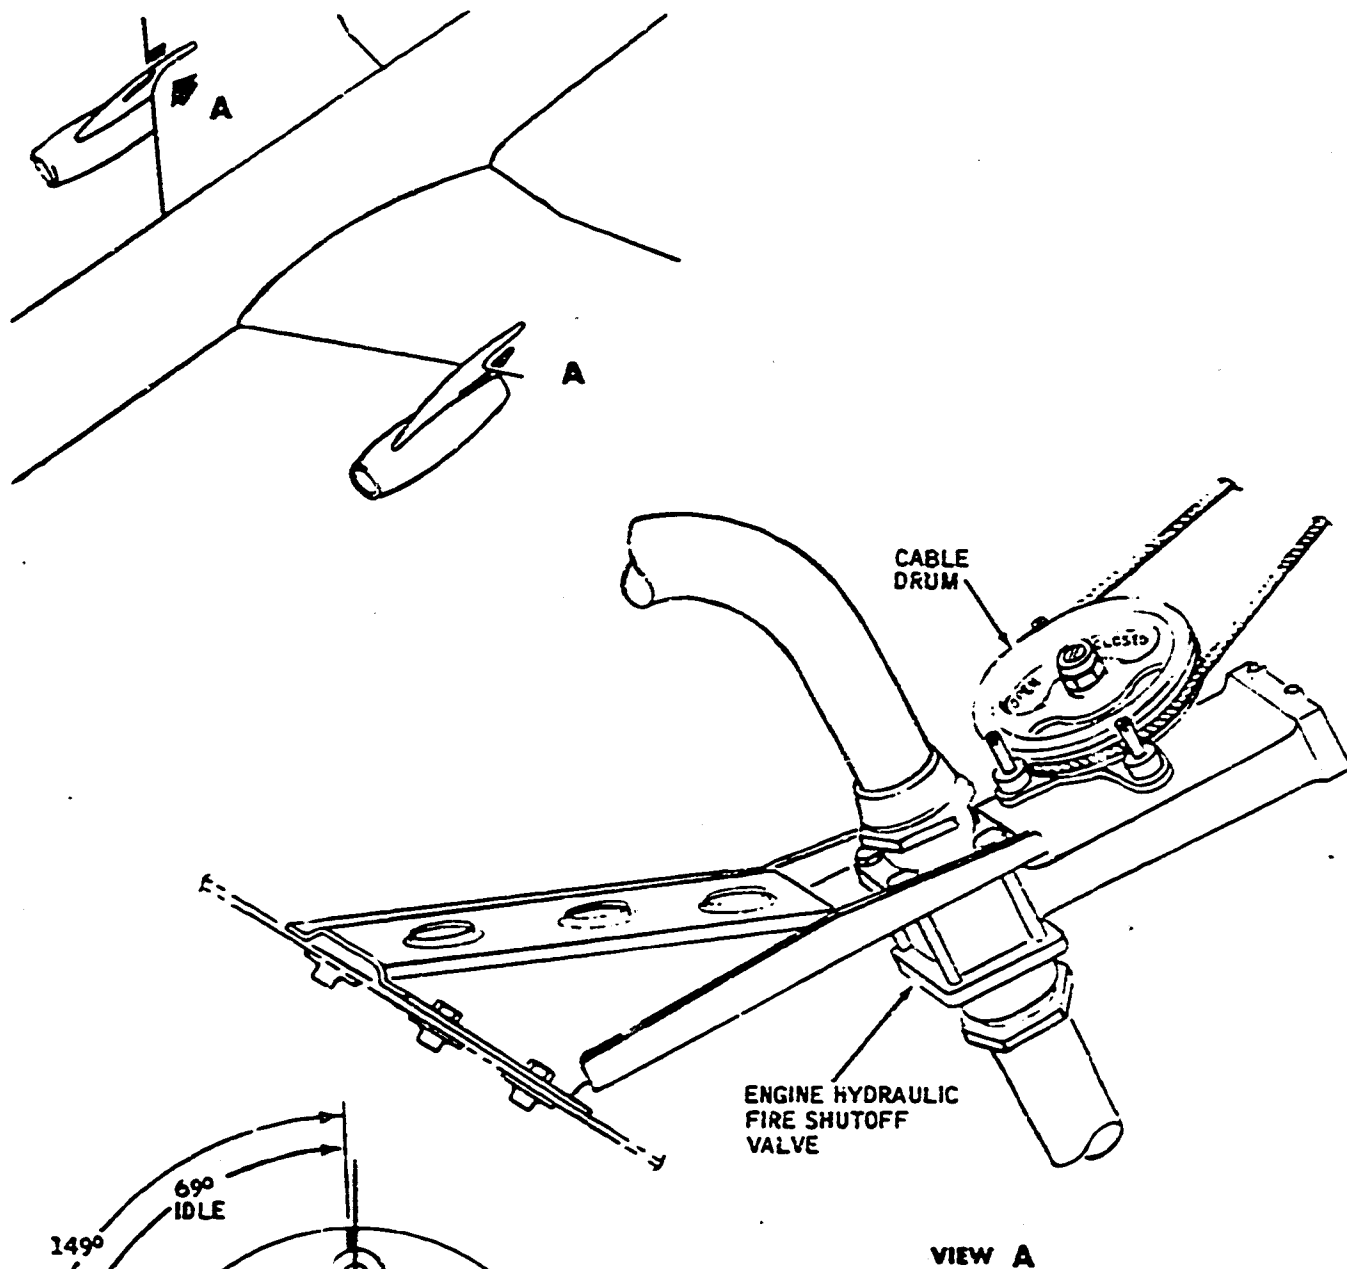

VALVE POSITION DIAGRAM

Engine Hydraulic Fire Shutoff Valve  
 (Airplanes N8762-N8778)  
 Figure 12 (Sheet 1)


HA2-22

29-10-0  
 CODE 2  
 Page 22A

Oct 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

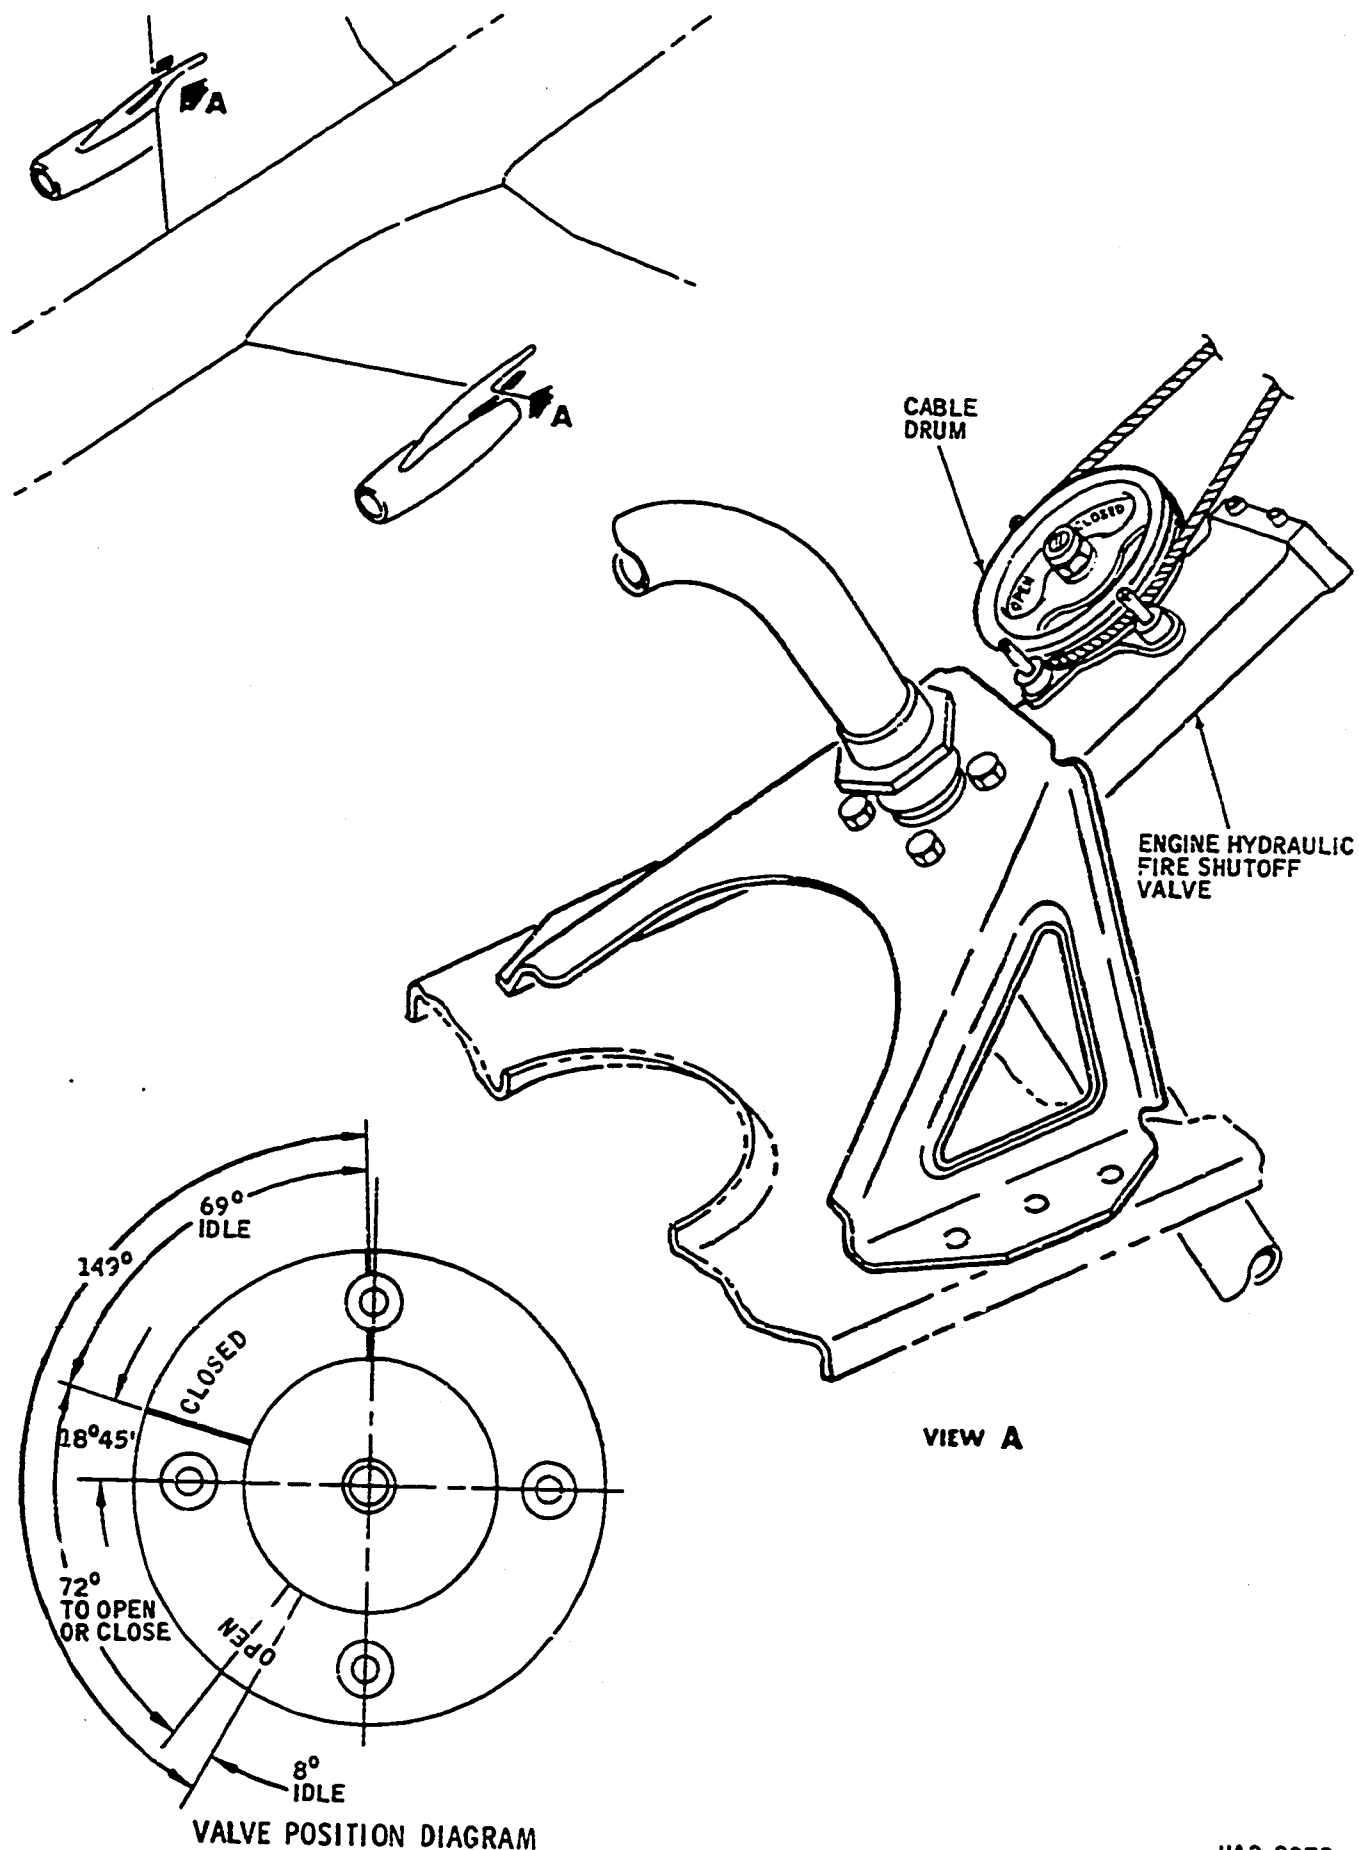

Engine Hydraulic Fire Shutoff Valve  
 (Airplanes N8755-N8760)  
 Figure 12 (Sheet 2)

HA2-2978

29-10-0  
 CODE 2  
 Page 23

Aug 1/69

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL




positioning grooves in the housing. A pin-indicator is provided to relate valve position to a reference plate placarded open and closed.

- (6) The engine hydraulic fire shutoff valves are cable actuated by the fire control handles, located on the overhead switch panel in the flight compartment. When the fire control handles for either inboard engine is moved, the cable system rotates the drum which is attached to the corresponding shutoff valve shaft. This action extends the valve blade into the fluid passage to block the flow of fluid. The valve operates from open to close by clockwise rotation of the cable drum. The valve gage will idle during the first 8 degrees of rotation of the cable drum, and then will close in the next 72 degrees. The cable drum will continue to rotate the shaft for an additional 69 degrees after the gate valve is closed, locking it overcenter. Total travel of the cable drum is 149 degrees.

K. Engine-Driven Hydraulic Pump (See Figure 13.)

- (1) A variable-displacement, pressure-compensated, engine-driven hydraulic pump is installed on each inboard engine. The pump incorporates a solenoid bypass feature for reducing the output of the pump. The bypass valves are controlled by two engine hydraulic pump switches in the flight compartment. The switch for the hydraulic pump on engine No. 2 is placarded left, on and bypass. The switch for the hydraulic pump on engine No. 3 is placarded right, on and bypass. When either of the two engine hydraulic pump control switches is placed in the bypass position, the bypass valve solenoid for that hydraulic pump is energized and the pump pressure decreases to approximately 300 ( $\pm 100$ ) psi. When either switch is in the on position, the control circuit to the corresponding bypass valve is open and the hydraulic pump operates normally in the pressure range of 2850 to 3050 psi. The pump provides a continuous, nonpulsating flow of hydraulic fluid, under pressure, to the hydraulic manifolds for distribution throughout the hydraulic system. Each of the engine-driven pumps is located on the accessory drive pad of the inboard engines. These pumps are accessible through the doors on the right side of the nacelles.
- (2) Three case drain ports are provided: two are on the yoke assembly housing, and the third is on the casing for the pressure control valve, adjacent to the inlet port fitting. The case drain port on top of the yoke assembly housing is full of fluid at all times. This drain connection is ported back to the low-pressure return port at the reservoir. The inlet port fitting is on top of the pump housing and the outlet port fitting is opposite to it on the bottom of the housing, and contains a low-pressure indicating light switch.
- (3) The yoke control piston casing is an integral part of the pump case. Four self-locking nuts are used to hold the piston casing end-plate in position. The bypass valve assembly, consisting of the valve body and a solenoid assembly, is mounted externally on the pump case, under the yoke control piston casing. This solenoid valve is provided with an

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

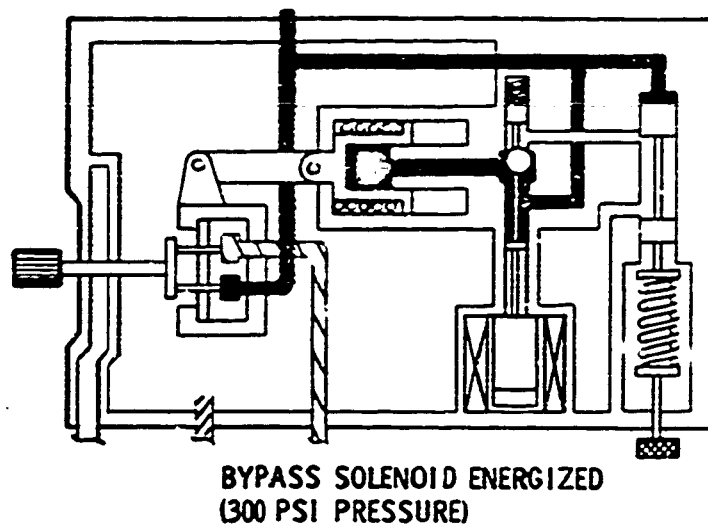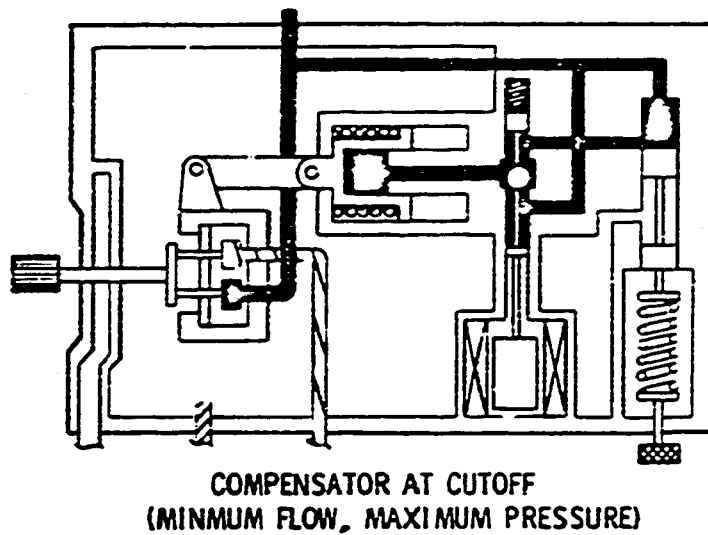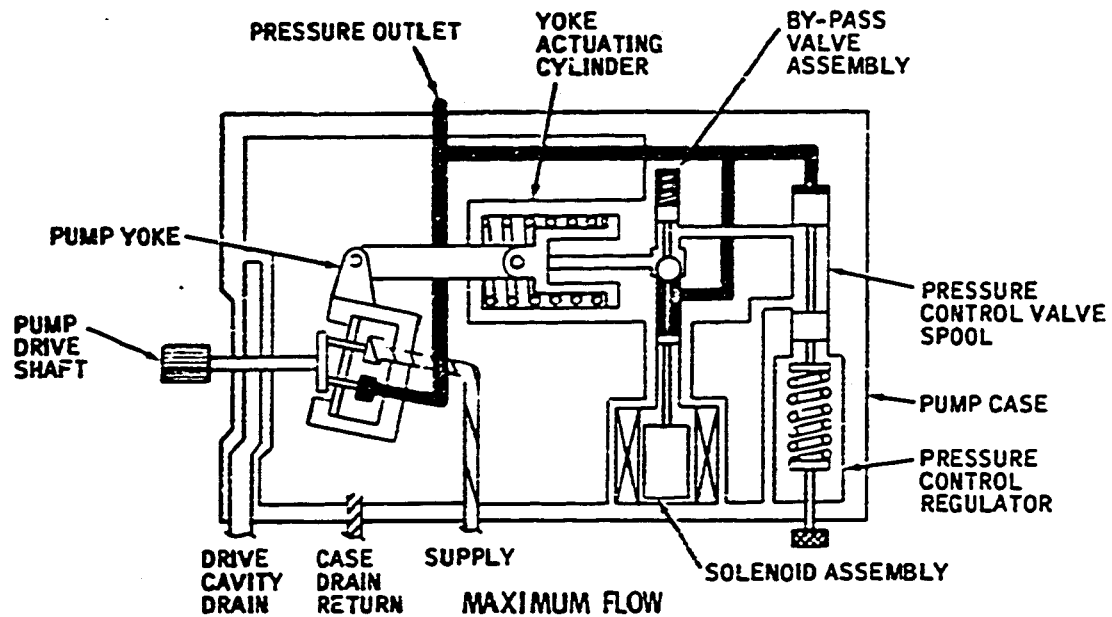

- PRESSURE
- CASE DRAIN
- SUPPLY
- DRIVE CAVITY DRAIN

HA2-837

Engine-Driven Hydraulic Pump Pressure Flow -- Schematic  
 Figure 13

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 2  
 Page 25



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

electrical connector. A pressure control regulator is installed on the bypass valve body by means of four bolts. This regulator is cylindrical and is provided with an external adjustment screw. A lock screw is used to retain the adjusting screw after the adjustment has been made.

- (4) Hydraulic fluid enters the pump through an inlet port. Passages in the yoke carry the fluid to the valve plate, which ports the fluid to the cylinder block. The nine pistons in the cylinder block are actuated by the rotating drive shaft, thereby pressurizing the fluid. From the cylinder block, the fluid is routed to the outlet port of the yoke and then to the pump pressure lines. The pressure control regulator is actuated by pump output pressure that is bled to the regulator. The regulator meters the pressure to the yoke control piston, which positions the yoke.
- (5) The maximum pump pressure is determined by the adjustment of the pressure control regulator. The pressure control regulator allows maximum output flow (22.5 gpm at 3500 rpm) up to 2850 psi system pressure. When this pressure is reached, the yoke assembly starts to move towards the zero flow position.
- (6) Pressure continues to rise until the displacement is reduced from maximum flow to zero flow and 3000 psi is reached. If the engine-driven hydraulic pump control switches are in the on position, and the output pressure of either pump drops below 1500 psi, an amber light located in the flight compartment comes on.


L. Engine-Driven Hydraulic Pump Check Valves (See Figure 10.)

- (1) Two check valves, rated at 3000 psi, are installed in the lines from each engine-driven hydraulic pump. One check valve is installed in the pressure line and the other is in the case drain line. The check valves in the pump pressure lines prevent reverse flow of hydraulic fluid through the pump, when the pump is inoperative or when external hydraulic pressure is supplied to the system. Access to the valves can be gained through an access door in the forward right apron of each inboard pylon. The valves are mounted on the exterior wall of the inlet box by means of the bulkhead fittings and retaining nuts.
- (2) Normal operating pressure will unseat the poppet, and fluid will flow through the valve. When pressure downstream of the valve exceeds pressure from the pump, the pressure, with the aid of the return spring, will seat the poppet. This prevents reverse flow of hydraulic fluid through the pumps.


M. Engine-Driven Hydraulic Pump Case Drain Filter (See Figure 14.)

- (1) A line-type, micronic filter, for use in a low-pressure hydraulic system, is installed in the engine-driven hydraulic pump case drain return line between the pump flow check valve and the hydraulic system reservoir. The case drain filter is installed on the aft surface of the rear


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

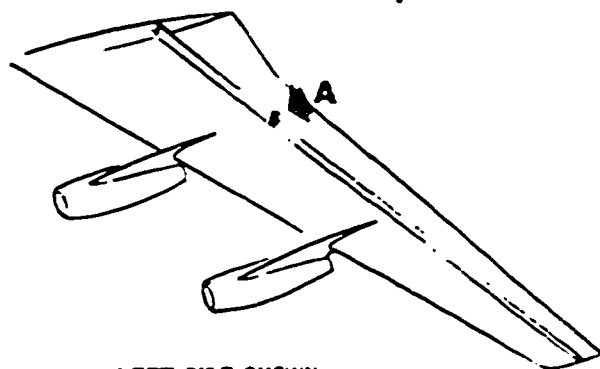

LEFT SIDE SHOWN  
 RIGHT SIDE OPPOSITE

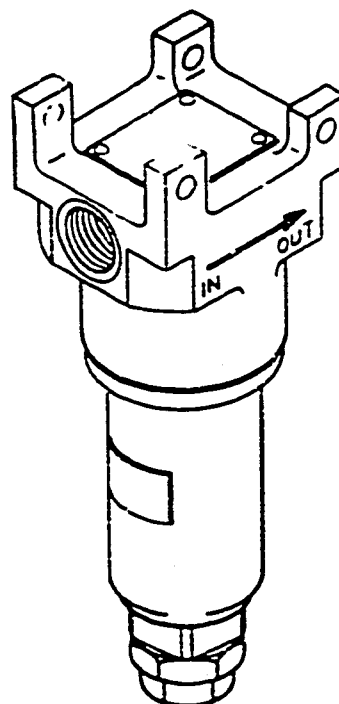

VIEW A

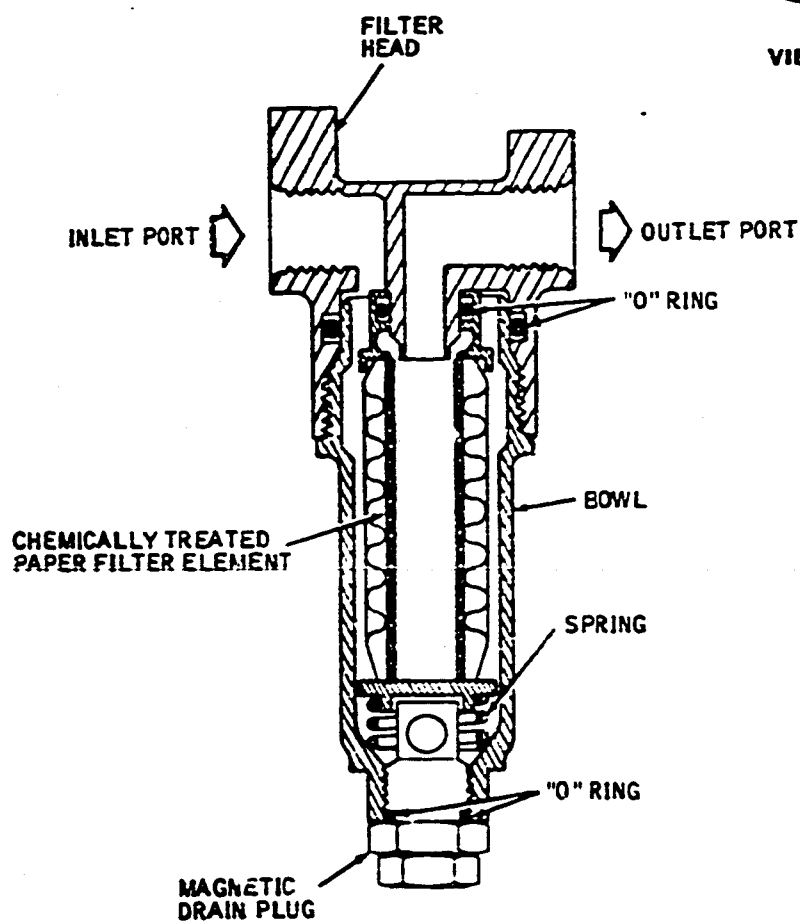

HA2-31

Engine Driven Hydraulic Pump Case Drain  
 Filter -- Cutaway View  
 Figure 14

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 2  
 Page 27

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


spar opposite the leading edge of the inboard flap assembly. One filter is used for each engine-driven pump. Access is gained to the filter by lowering the flaps. A second check valve is installed adjacent to the filter in the downstream side of the case drain return line.

- (2) Externally, the filter is approximately 5 inches high and 2 inches wide, with ports marked inlet and outlet. The bowl is cylindrical in shape, with hex-shaped wrench flats at the lower end. A self-sealing, magnetic drain plug is installed in the bottom end of the filter bowl. The filter element is made of chemically treated paper.

N. Dual Filter and Relief Valve (See Figure 15.)

- (1) The hydraulic power system dual filter and relief valve consists of two filters and two relief valves installed in the same body. The unit filters the hydraulic fluid from the two engine-driven hydraulic pumps, and the pressure relief valves assure that excessive pressures do not build up in the pressure line from the pumps. The unit is located in the left main gear wheel well on the lower portion of the rear spar, approximately 1 foot outboard of the centerline shear web.
- (2) The unit consists of a casting with a flange-mounted pressure inlet port on each end. Two pressure outlets are located on the top of the casting. One outlet, centrally located, is the main pressure outlet to the system selector valve. The other, located to the left of the selector valve port, is the pressure outlet to the air pressure regulator-aspirator. The return outlet port for the relief valve portion of the unit is located on the center of the aft face of the body, canted upward. The nose gear return line is connected to a check valve installed in a return line port, located between the two filter bowls.
- (3) The pressure relief valves are located behind the pressure inlet ports and are connected to the return outlet port of the unit. The inlet from the nose gear return line is routed through the casting to the return outlet port.
- (4) If either of the filter elements becomes clogged, pressure above 3300 psi at the inlet port will unseat the poppet. Pressure above 3500 psi will allow full flow of 22.5 gpm to flow to the return port of the unit and back to the reservoir. The relief valves will reseal at approximately 3000 psi.
- (5) A check valve is installed in the system selector valve port to prevent reverse flow of pressure through the filter during auxiliary hydraulic pump operation.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

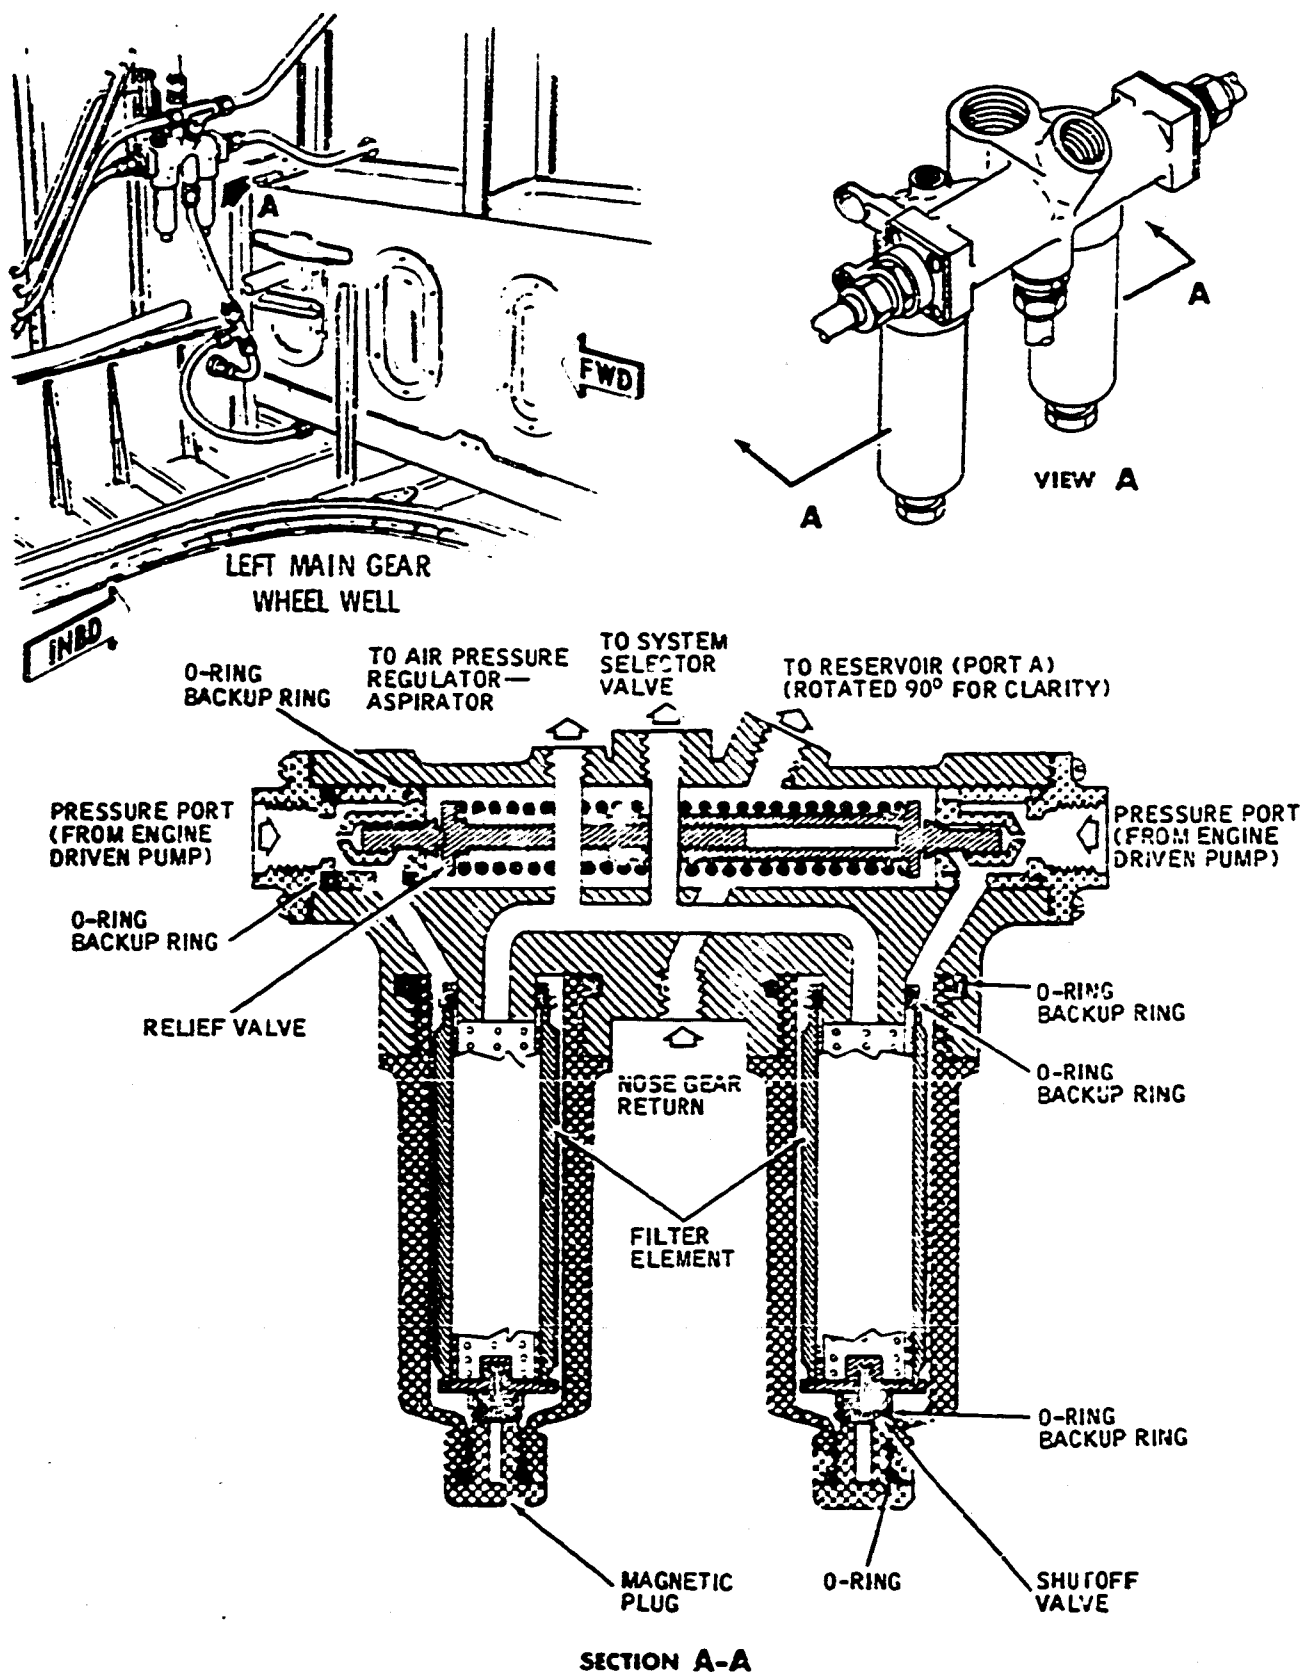

Dual Filter and Relief Valve -- Cutaway View  
 Figure 15

HA2-20

29-10-0  
 CODE 2  
 Page 29

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


O. System Selector Valve (See Figures 16 and 17.)

- (1) The system selector valve is a 3-position valve which permits directional control of fluid under pressure. The valve is installed on the left hydraulic power manifold and is accessible through the left main gear inboard door.
- (2) The selector valve pressure-to-system port and the return port are directly ported to the manifold. The engine pump pressure enters the valve through a port on the large end of the valve, and the auxiliary pump inlet and alternate ports are located at the top, toward the aft end of the valve. The valve control crank is attached to a push-pull rod and a cable sector.
- (3) Operation of the system selector valve is controlled by a lever located on the right side of the system engineer's control pedestal. When the control lever is moved to the selected position, the cable system, through the sector and crank, operates the valve positioning lever to drive the slide spool assembly to the selected position. When the control lever is placed in the general system (normal) position, the selector valve is actuated, causing hydraulic fluid to enter the valve through the system pressure port. The fluid is then directed into the manifold through the pressure-to-system port. In the general system (normal) position, fluid from the auxiliary pressure port is also routed to the pressure-to-system port. In the bypass/general system position, the selector valve ports engine pump pressure into the manifold through the return port. In this position, the auxiliary pump pressure is ported to the general system. In the general system/main gear down and flaps position, pump pressure is routed through the alternate port, at the top of the valve, for alternate operation of the flaps and the landing gear downlock cylinders. Internal leakage provides lubrication for the moving parts of the valve.

P. Left Hydraulic Power Manifold (See Figure 18.)

- (1) The left hydraulic power manifold distributes fluid pressure from the hydraulic pump (any one of the three pumps), through control valves to the various airplane hydraulic subsystems. The left power manifold is located overhead in the left wheel well. Access to the left manifold is through the left main gear inboard door.
- (2) On airplanes N8762-N8778, three valve-mounting pads are provided on the manifold. The system selector valve-mounting pad is located on top of the manifold body. Of the two remaining mounting pads, located on the underside of the manifold, the inboard pad is capped and not used. The outboard mounting pad is used for the bogie swivel unlock control valve. Four ports are provided on the inboard end of the manifold. Two of these ports are pressure outlet ports: one, located on the aft face of the manifold, is for the flight controls; and, the other, located on the underside of the manifold, ports fluid to the priority valve, which, in turn, ports fluid to the nose gear and the right power manifold. The other two

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

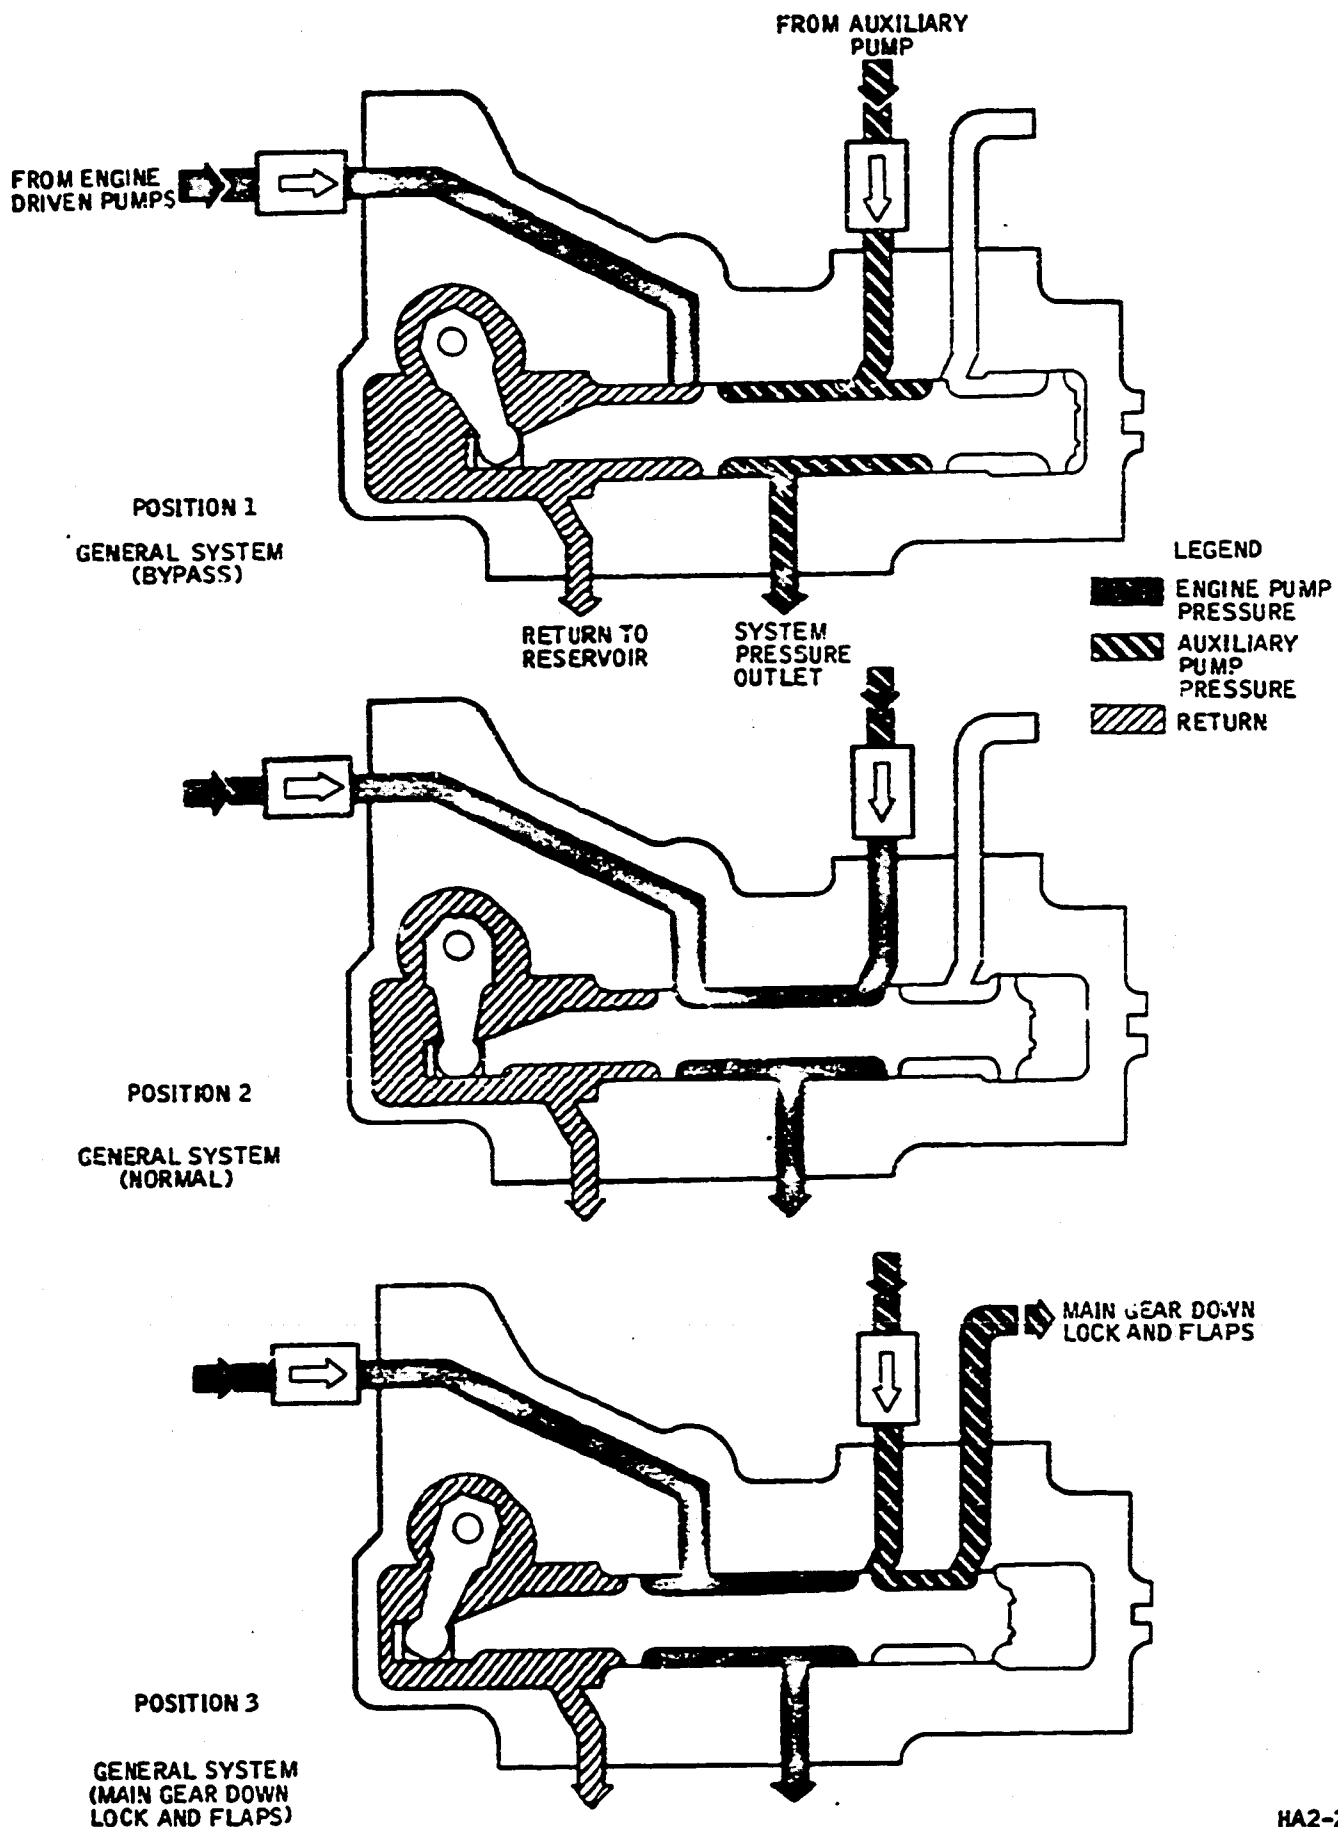

System Selector Valve -- Schematic  
 Figure 16



Jun 15/67

Printed in U.S.A.

HA2-26

29-10-0  
 CODE 2  
 Page 31

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

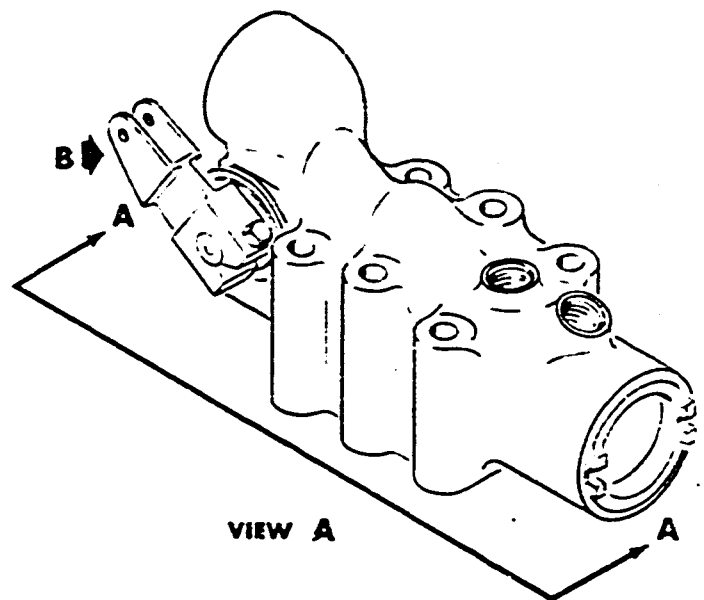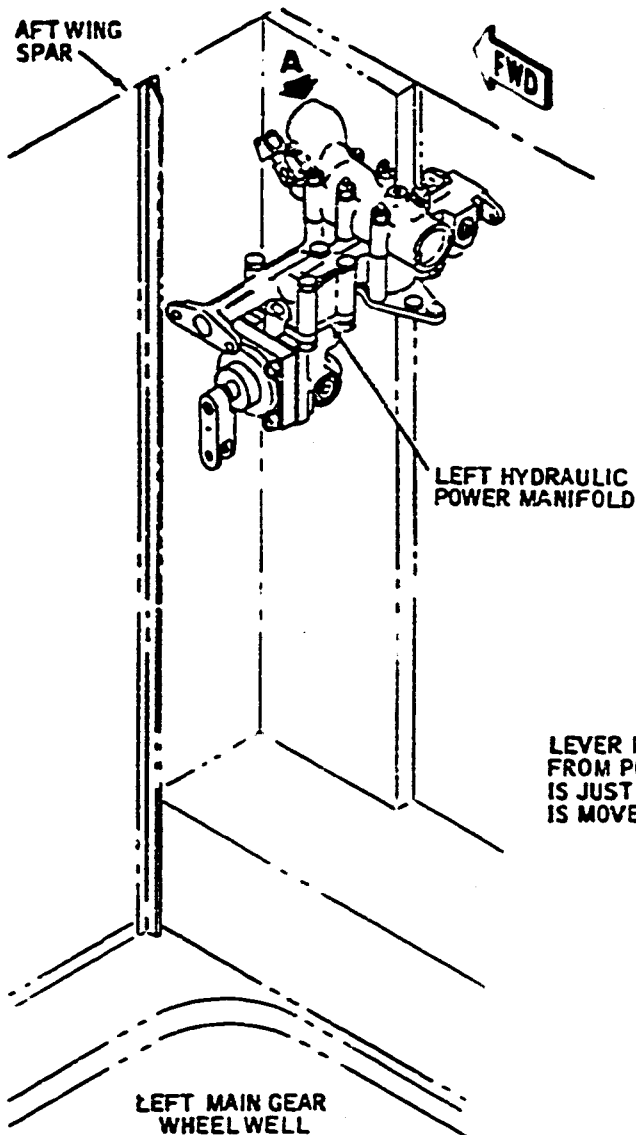

LEVER POSITION WHEN FLOW FROM PORT M TO PORT L IS JUST STOPPED AS LEVER IS MOVED TOWARD POSITION 3

GENERAL SYSTEM (NORMAL) POSITION 2

$6\frac{1}{4}^{\circ} (\pm 1/4^{\circ})$

$28^{\circ}$  (REF)


GENERAL SYSTEM (BYPASS) POSITION 1

GENERAL SYSTEM (MAIN GEAR DOWNLOCK AND FLAPS) POSITION 3

$18\frac{1}{2}^{\circ}$  (REF)

$55\frac{3}{4}^{\circ} (\pm 5^{\circ})$


VIEW B

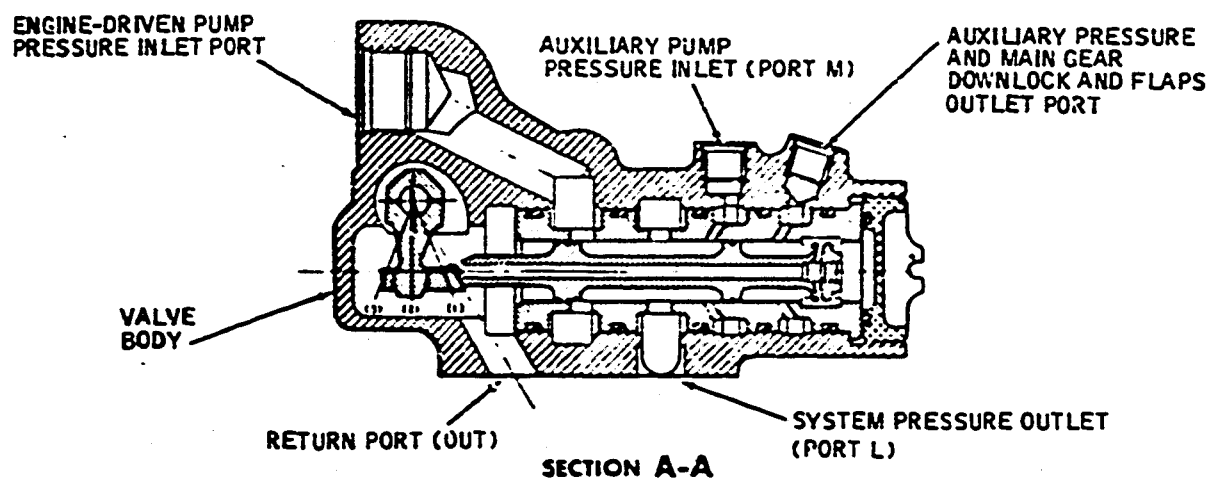

HA2-27

System Selector Valve -- Cutaway View  
 (Airplanes N8762-N8778)  
 Figure 17 (Sheet 1)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

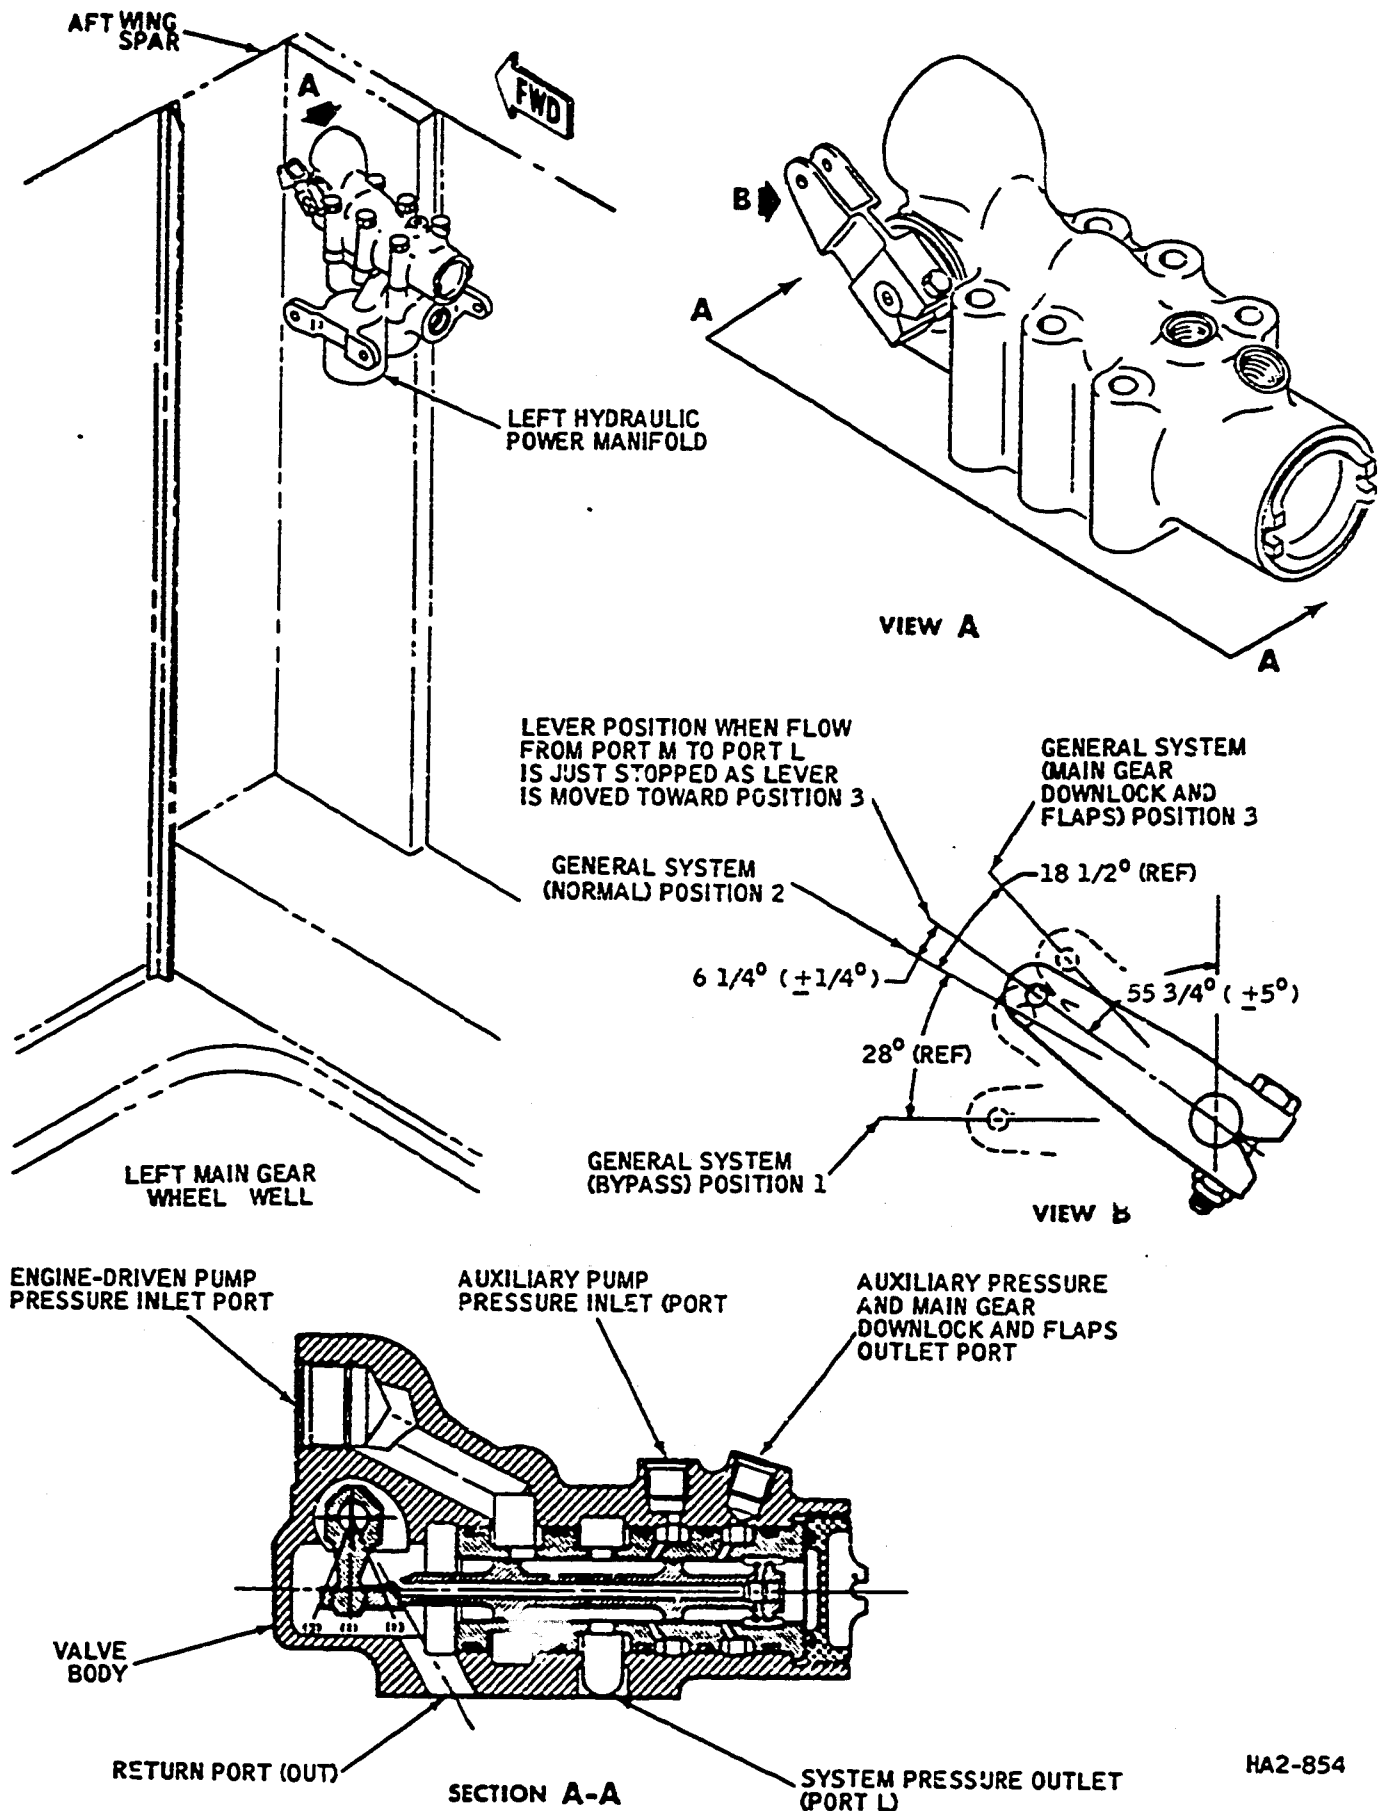

System Selector Valve -- Cutaway View  
 (Airplanes N8755-N8760)  
 Figure 17 (Sheet 2)



HA2-854

29-10-0  
 CODE 2  
 Page 32A

Aug 1/69






DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

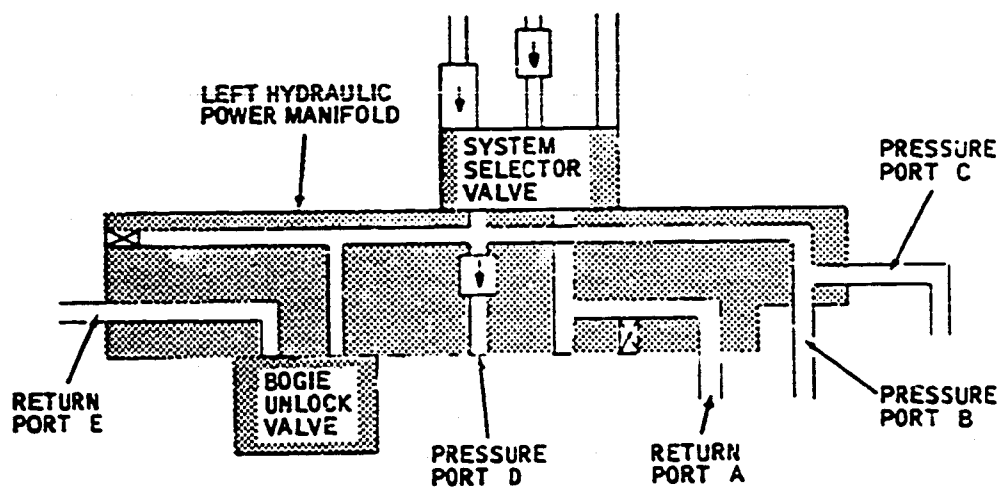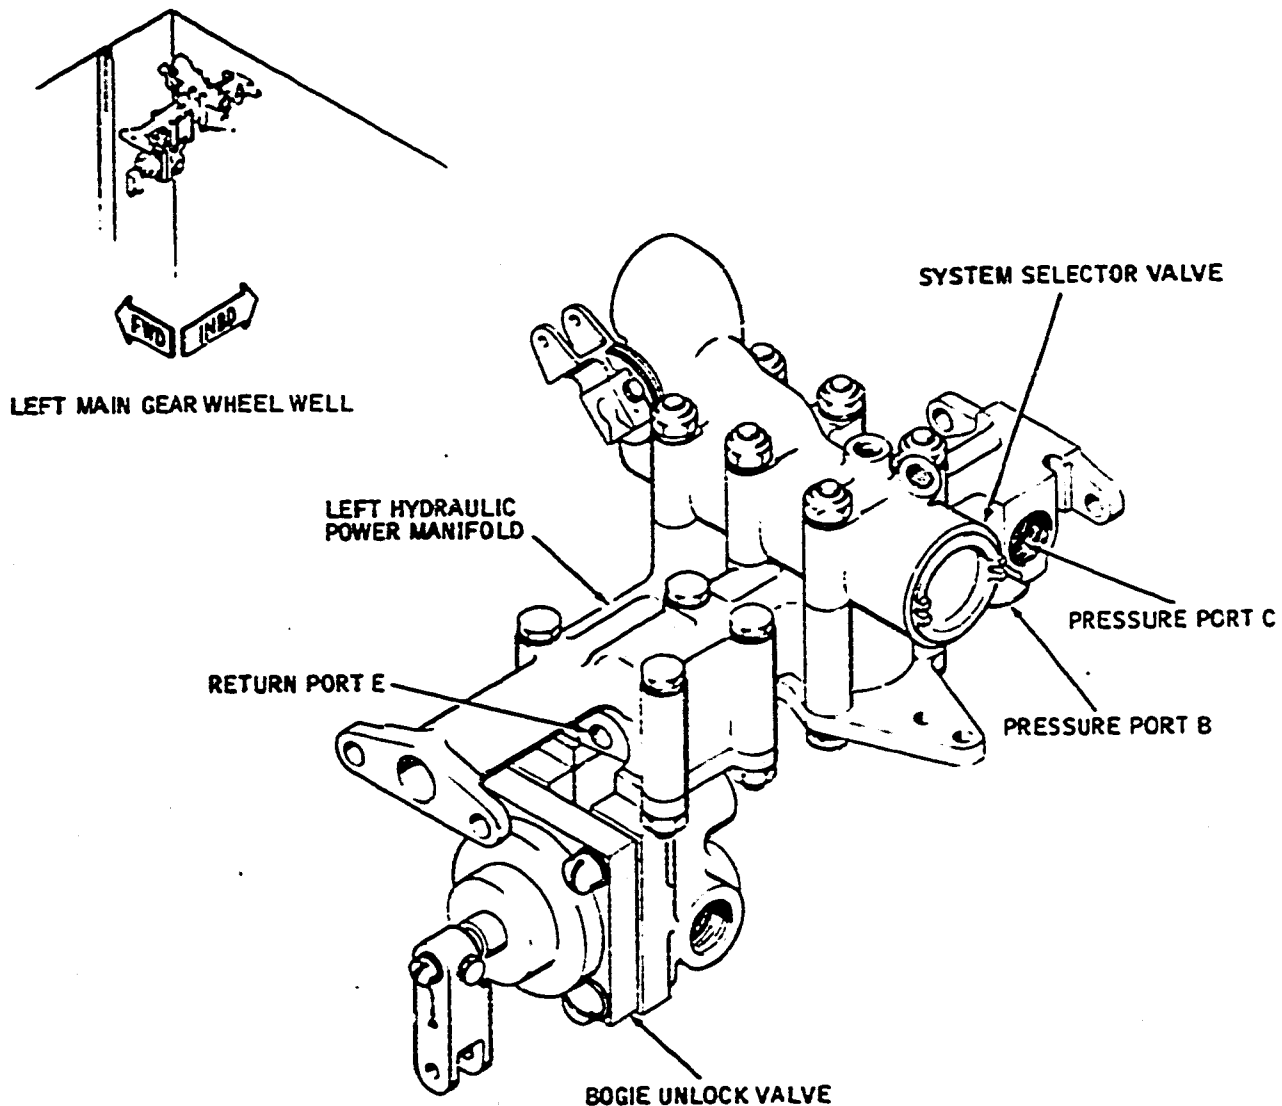

HA2-28

Left Hydraulic Power Manifold -- Schematic  
 (Airplanes N8762-N8778)  
 Figure 18 (Sheet 1)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

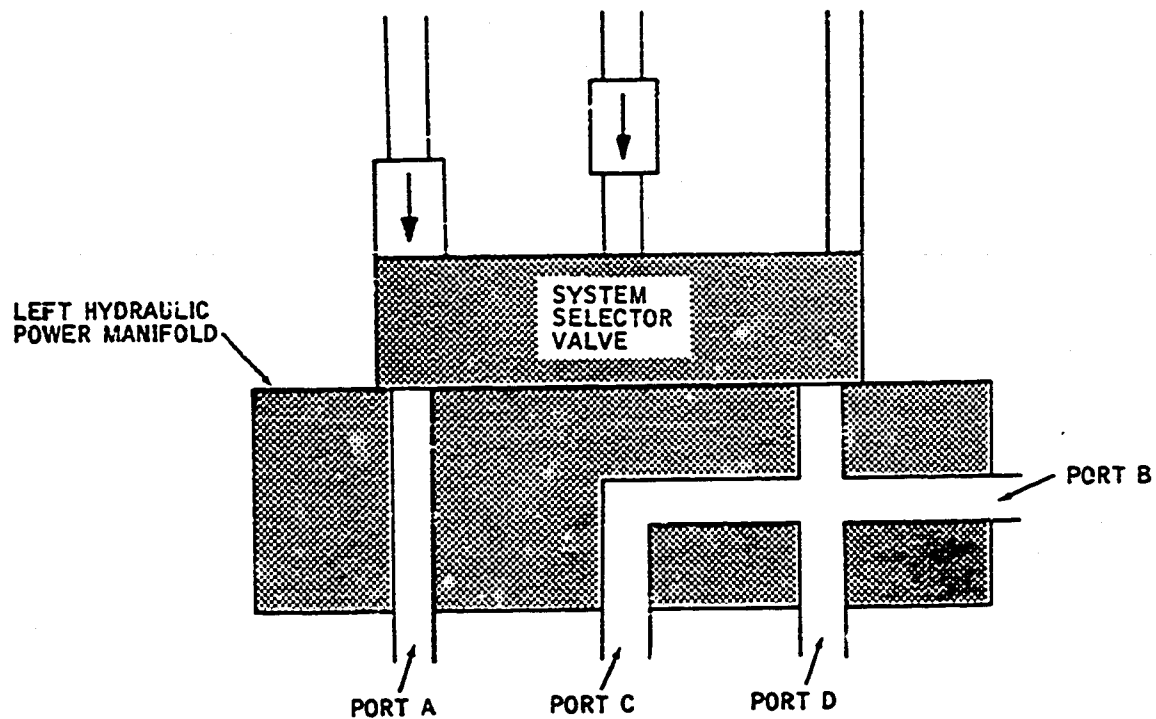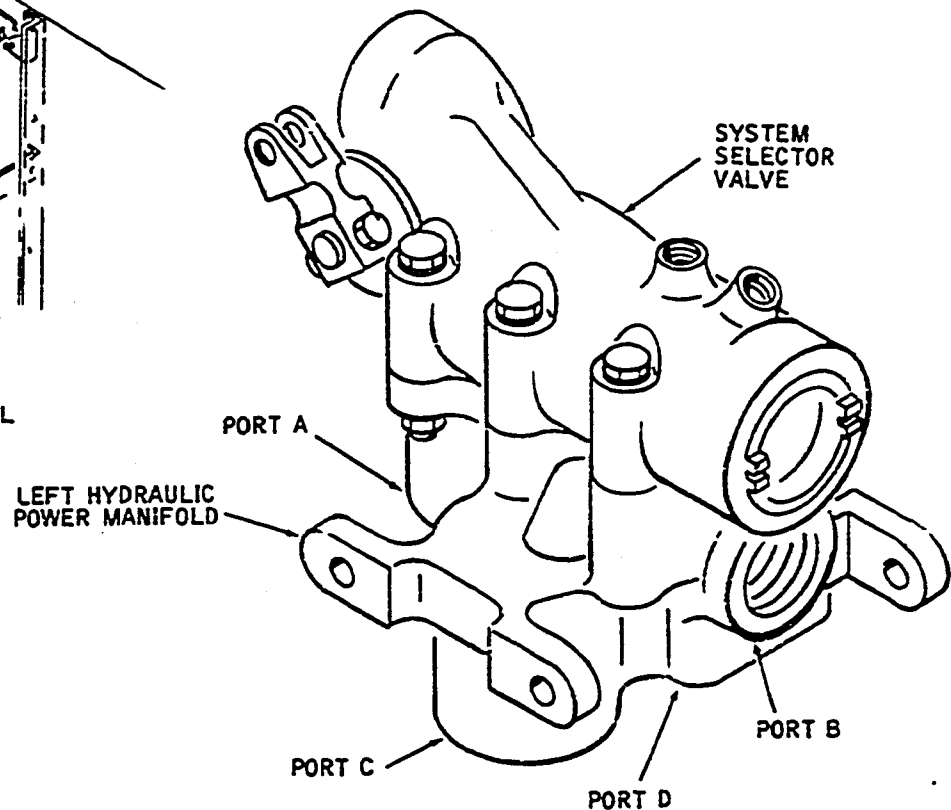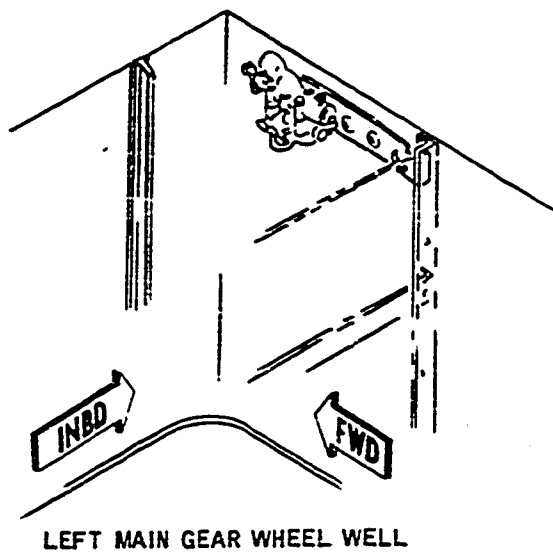

HA2-855

Left Hydraulic Power Manifold -- Schematic  
 (Airplanes N8755-N8760)  
 Figure 18 (Sheet 2)

Aug 1/69

29-10-0  
 CODE 2  
 Page 33

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


ports are return outlets, located immediately forward of the manifold pressure outlet port. One is connected by a line to the right manifold, and the other is connected to the low-pressure return port of the reservoir. The pressure line to the nose gear control valve is teed into the manifold pressure connecting line. A reservoir return line is teed into the manifold return line. The two ports on the inboard mounting flange were used for drilling the internal passages of the power manifold and are plugged and safety wired to prevent use.

- (3) On airplanes N8755-N8760, one valve-mounting pad is provided on the top of the manifold for the system selector valve. Four ports are provided on the manifold for connection of hydraulic pressure and return lines. Three of these ports are pressure outlet ports; one located on the aft face of the manifold and one located on the bottom of the manifold port fluid to the flight controls. The third pressure outlet port, located on the bottom of the manifold, ports fluid directly to the priority valve, which in turn, ports fluid to the nose gear and to the right power manifold. The fourth, a return port, located immediately forward of the pressure line port on the bottom of the manifold, is connected by a line to a return port of the reservoir.


Q. Right Hydraulic Power Manifold (See Figure 19.)

- (1) The right hydraulic power manifold distributes fluid pressure from the hydraulic pumps (engine-driven or auxiliary, or any combination of these three pumps), through the control valves to the various hydraulic subsystems. The right hydraulic power manifold is located overhead in the right wheel well. The manifold is held in place with braces and is accessible through the right main gear inboard door.
- (2) The manifold contains passages for pressure and return fluid distribution, four check valves, ports for pressure and return lines, and mounting pads for the various control valves.
- (3) The right manifold receives fluid pressure from the left manifold. Pressure is ported through check valves to the wing flap control valve, to the slot control valve, to the main gear control valve, to the brake control valve, to the brake pressure transmitter, and to the brake accumulators.
- (4) Auxiliary hydraulic pressure is ported from the alternate port of the system selector control valve into port K in the right manifold. Port K is located inboard of the spoiler control valve. From port K, auxiliary hydraulic pressure is ported through a check valve to the downstream side of the wing flap control valve check valve and into the wing flap control valve for alternate operation of the wing flaps.
- (5) The return passage from the wing flap control valve ports fluid to return port A. The brake control valve return passage ports fluid into return line B through a two-way restrictor. The main gear control valve downline return fluid uses a separate port in the valve, bypasses the manifold, and returns the fluid directly to A return line to the


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

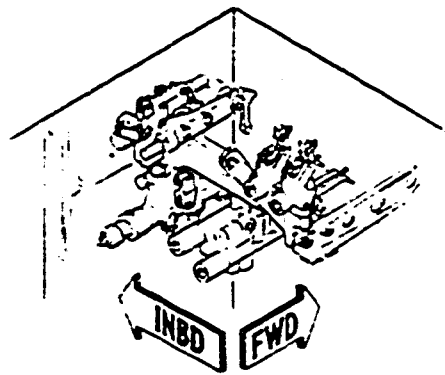

RIGHT MAIN GEAR  
WHEEL WELL

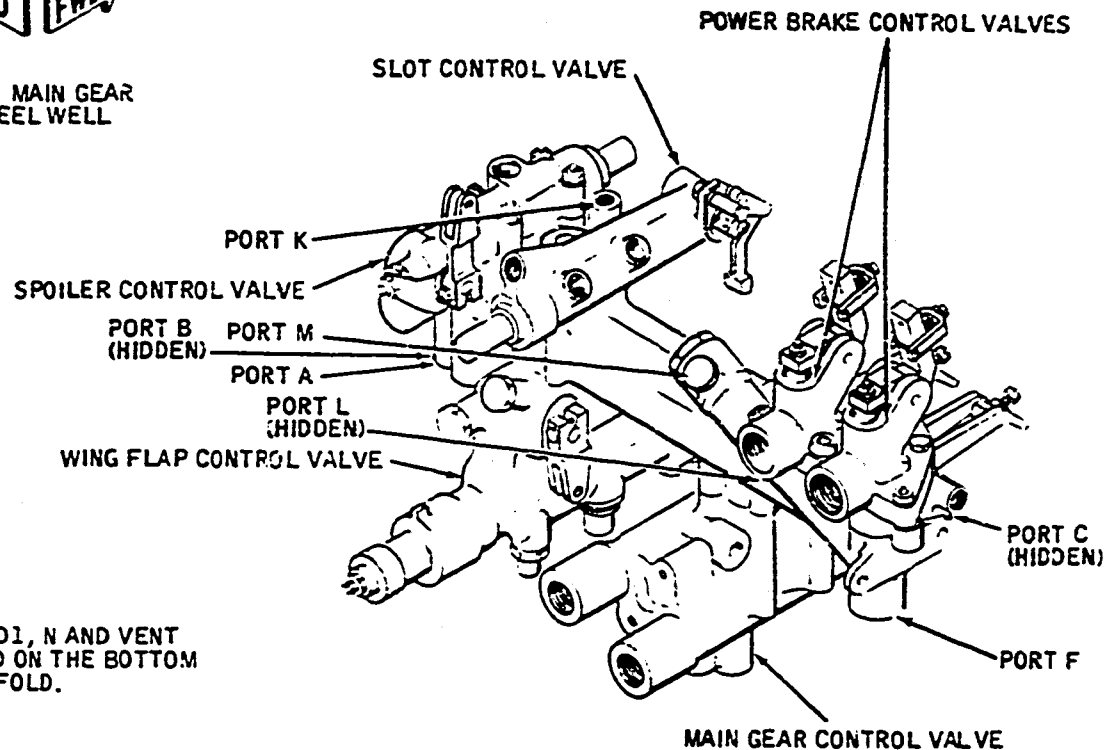

NOTE: PORTS B, C, D1, N AND VENT  
ARE LOCATED ON THE BOTTOM  
OF THE MANIFOLD.

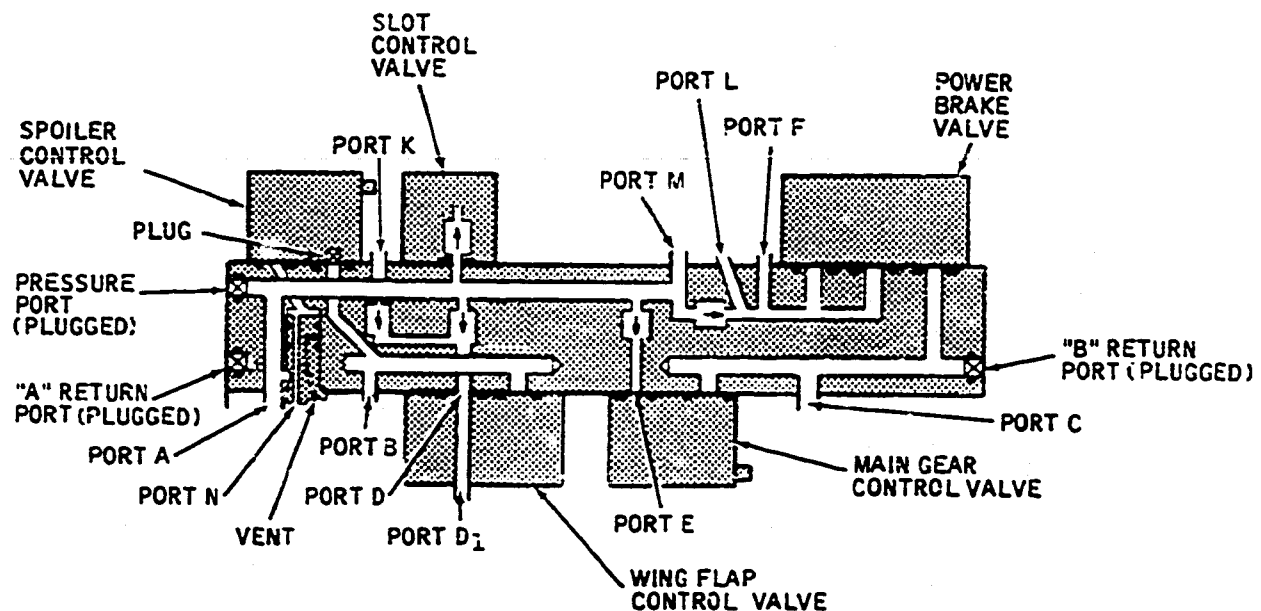

HA2-29A

Right Hydraulic Power Manifold -- Schematic  
 Figure 19

Nov 1/69

Printed in U.S.A.

29-10-0  
 CODE 2  
 Page 35

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

reservoir. The upline in the main gear control valve uses the same return port, return port B, in the manifold as the brake control valve.

R. Hydraulic Manifold Return Check Valves (Airplanes N8762-N8778, See Figure 10.)

- (1) The hydraulic manifold return check valve is installed in the hydraulic reservoir A return line to prevent reverse flow of fluid. This check valve is located on the shear web near the dual filter and relief valve. Access to the check valve is through the left main gear inboard door.
- (2) The direction of flow is marked on one surface, and the rating of the check valve (1500 psi) is marked on the other surface.


S. Hydraulic Power System Accumulator (See Figure 20.)

- (1) The hydraulic power system accumulator is a spherical, welded-steel, fluid and air bladder-separated container. The accumulator is installed in the pressure line of the hydraulic power system to provide a reserve supply of fluid under pneumatic pressure and to act as a shock absorber for system pressure surges.
- (2) The accumulator is located immediately aft of the left hydraulic power manifold and is accessible through the left main gear inboard door. It is mounted with two corner brackets and clamp blocks at the upper and lower port fittings.
- (3) The accumulator is installed in the pressure line of the hydraulic power system and is initially charged with 1000 psi of dry nitrogen. As the system pressure builds up, fluid is forced into the upper chamber of the accumulator, further compressing the trapped nitrogen to approximately 3000 psi. With full hydraulic system pressure, 3000 psi is indicated on the pressure gage adjacent to the filler valve. This reserve pressure smooths out any momentary lag in the pump's response to the system's demand for greater fluid flows. The accumulator permits a gradual rise in system pressure, thereby absorbing the shock of pump surges and relieving the piping and system operating units of high-impact loads. When the engine-driven hydraulic pumps are not operating, the accumulator provides system pressure (at a diminishing rate) until a quantity equal to the stored volume in the accumulator has been used by the system.

T. Hydraulic System Priority Valve (See Figure 21.)

- (1) The priority valve is located in the left wheel well near the left hydraulic power manifold. The valve is installed in the hydraulic pressure line, between the two power manifolds, downstream of the pressure supply takeoff port for the flight controls. The priority valve is a balanced relief valve which reserves initial hydraulic pressure (up to 2150 psi maximum) for use in the flight control systems. The valve consists of a body with an inlet, an outlet, and a breather port. Internally, the valve contains a poppet valve plate, a poppet, a poppet valve load-spring, a piston, a piston load spring, and a piston load-spring housing. The piston load-spring housing chamber is vented to ambient air through a breather hole which is covered by a butyl rubber band.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

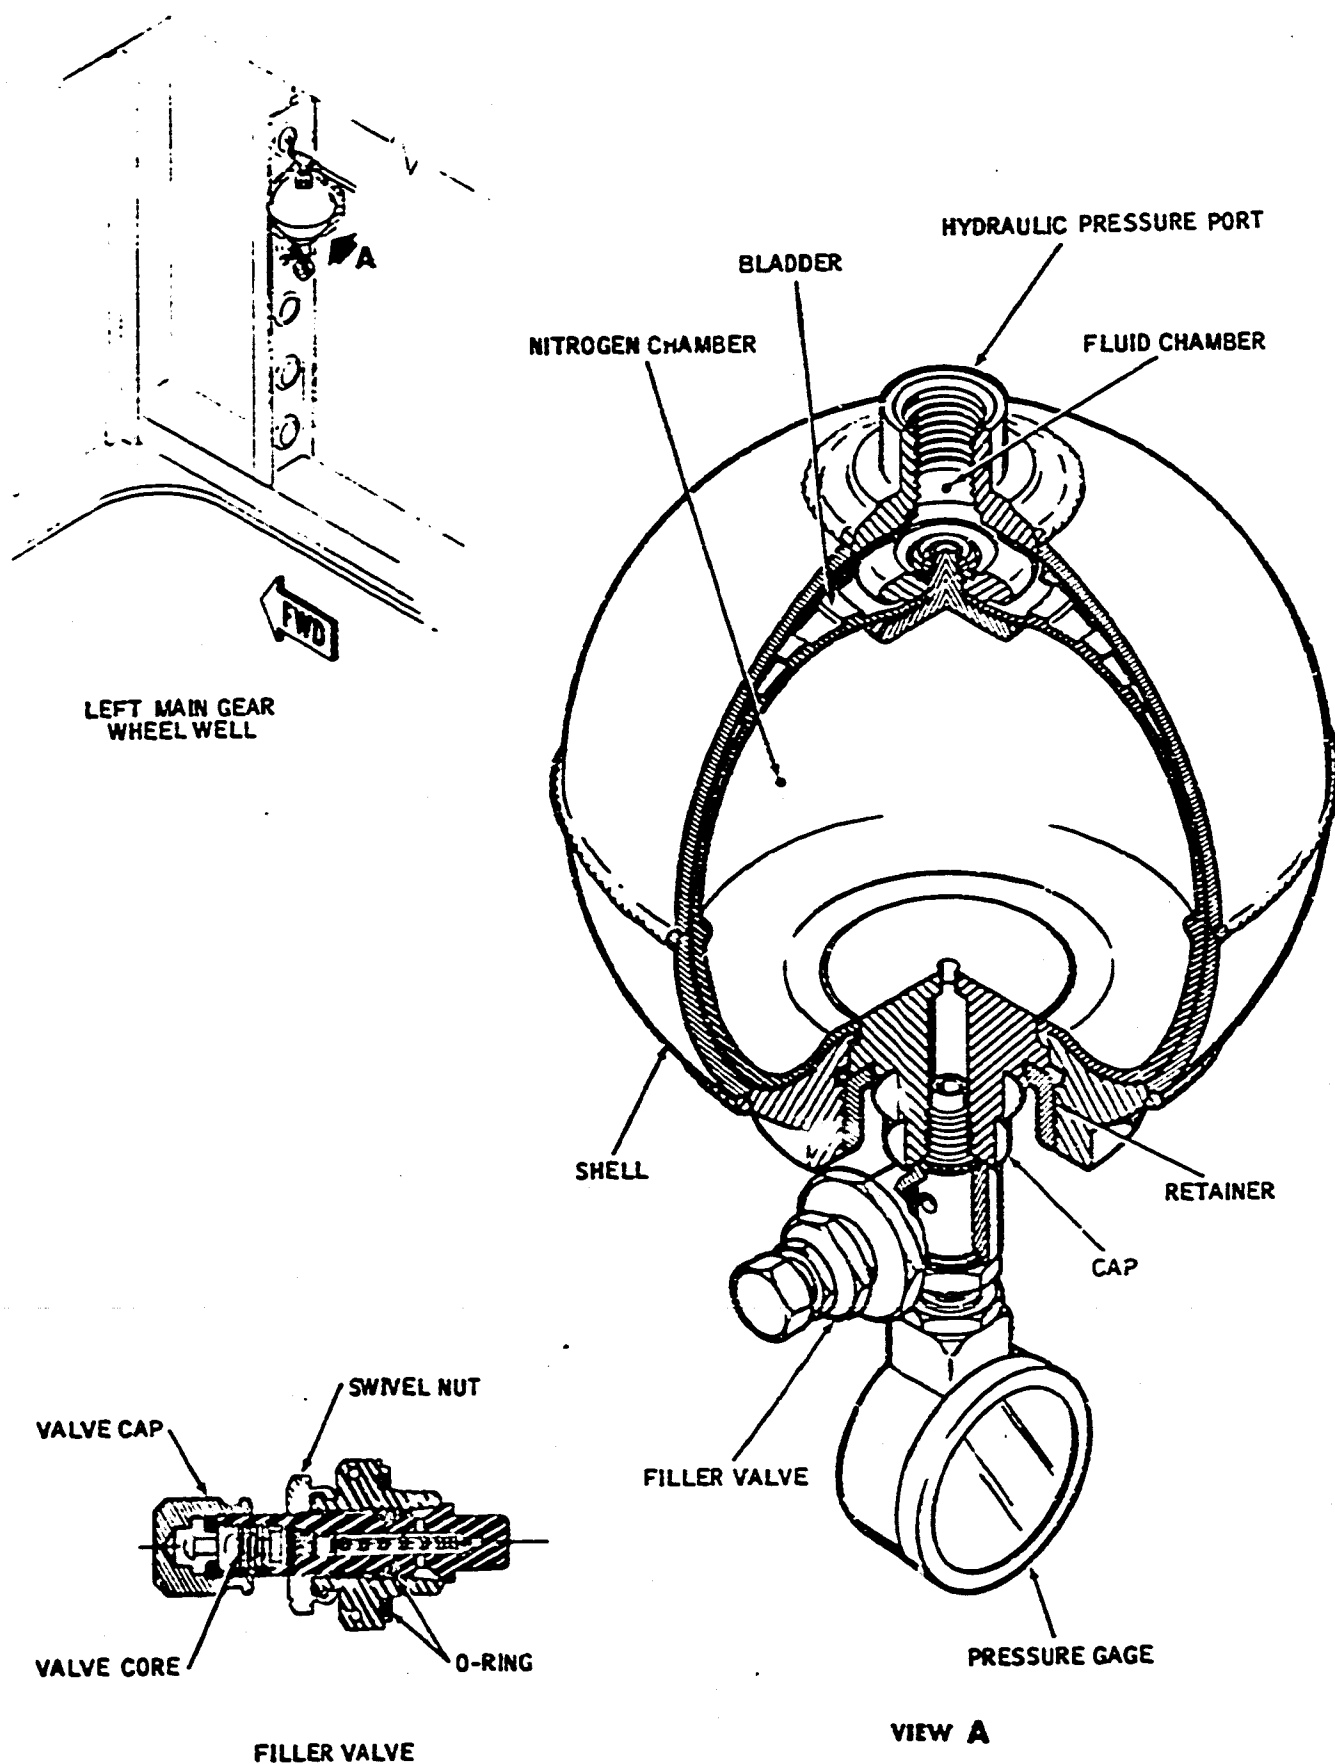

Hydraulic Power System Accumulator -- Cutaway View  
 Figure 20


HA2-30

29-10-0  
 CODE 2  
 Page 37

Jun 15/67

Printed in U.S.A.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

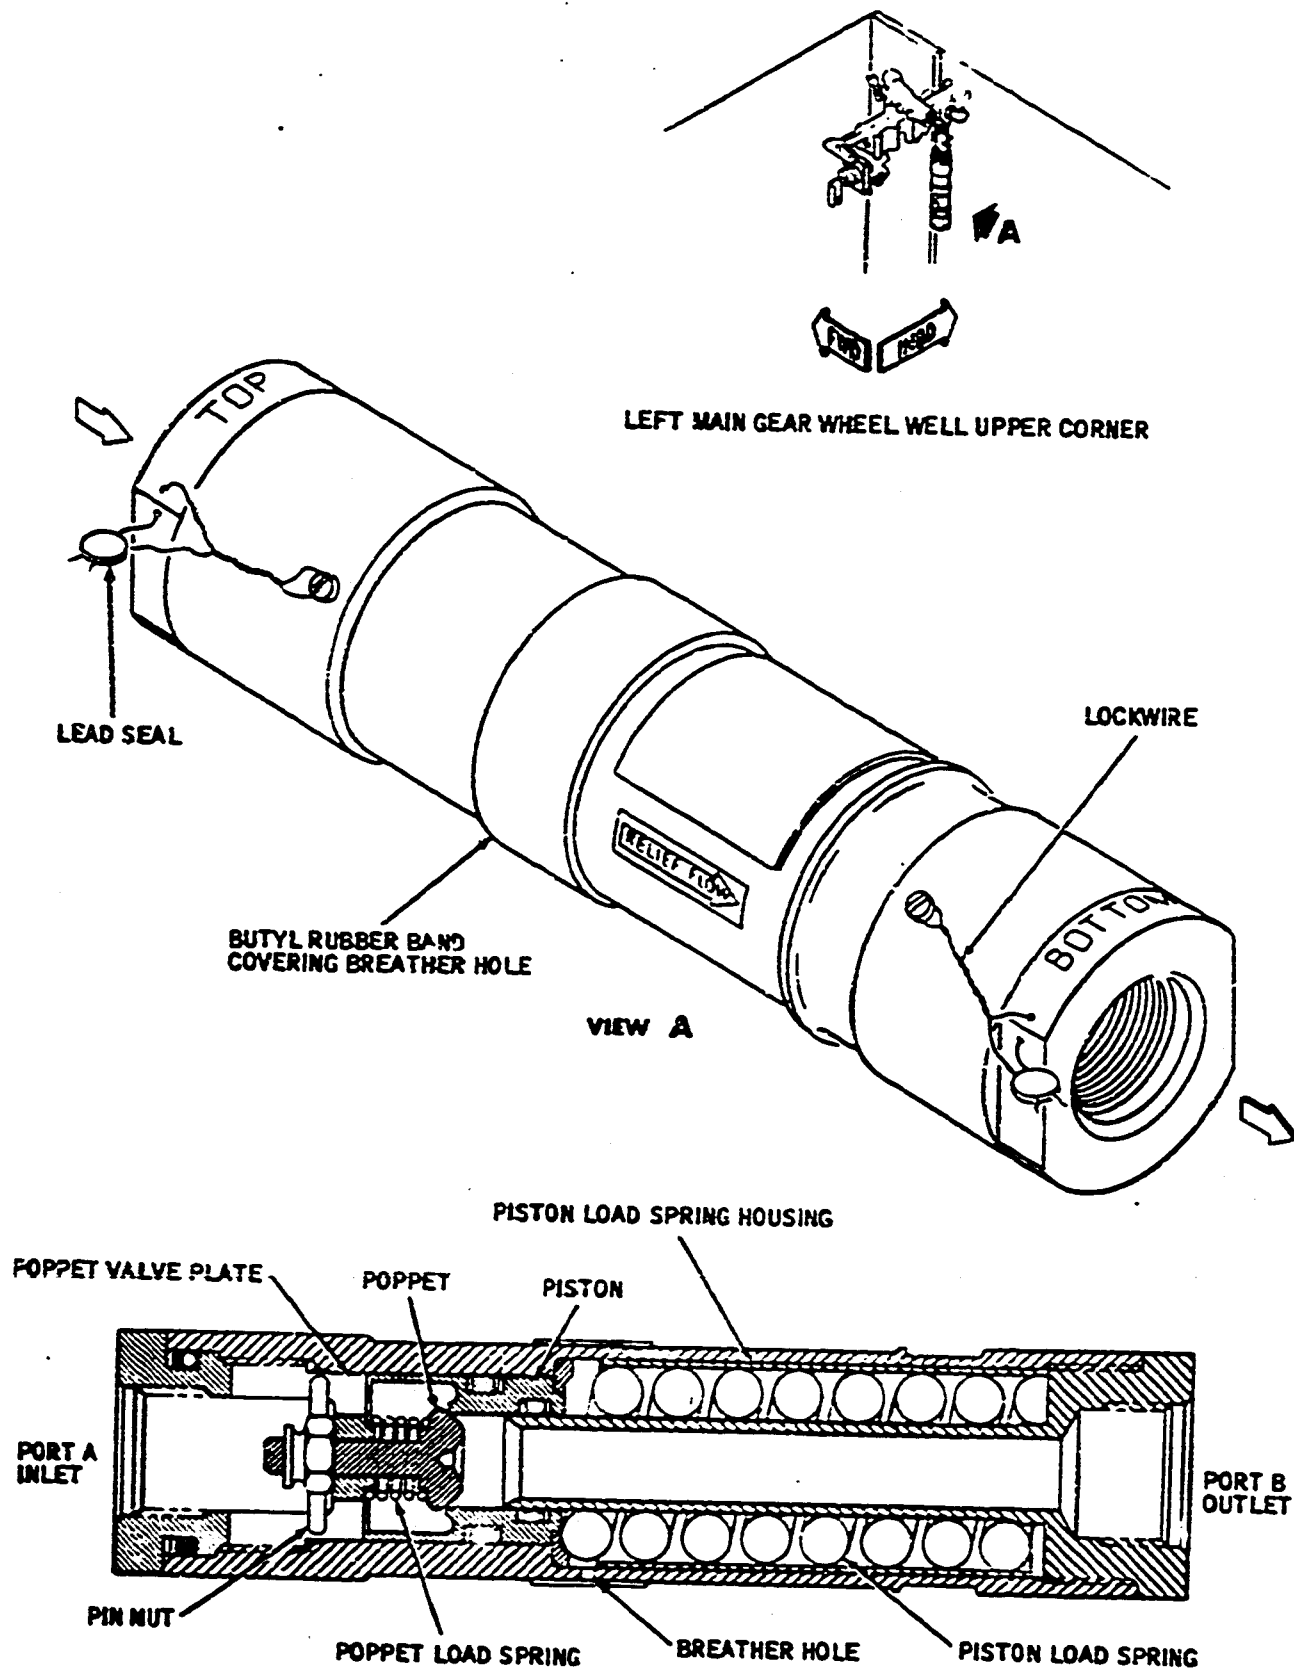

Hydraulic System Priority Valve -- Cutaway View  
 (Airplanes N8762-N8778)  
 Figure 21 (Sheet 1)

HA2-34

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

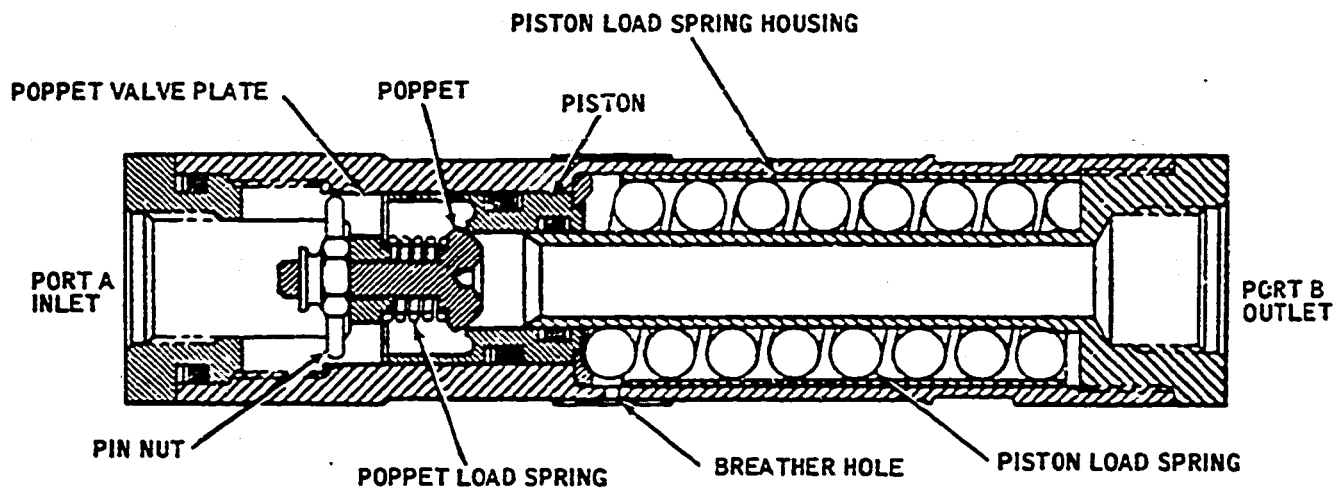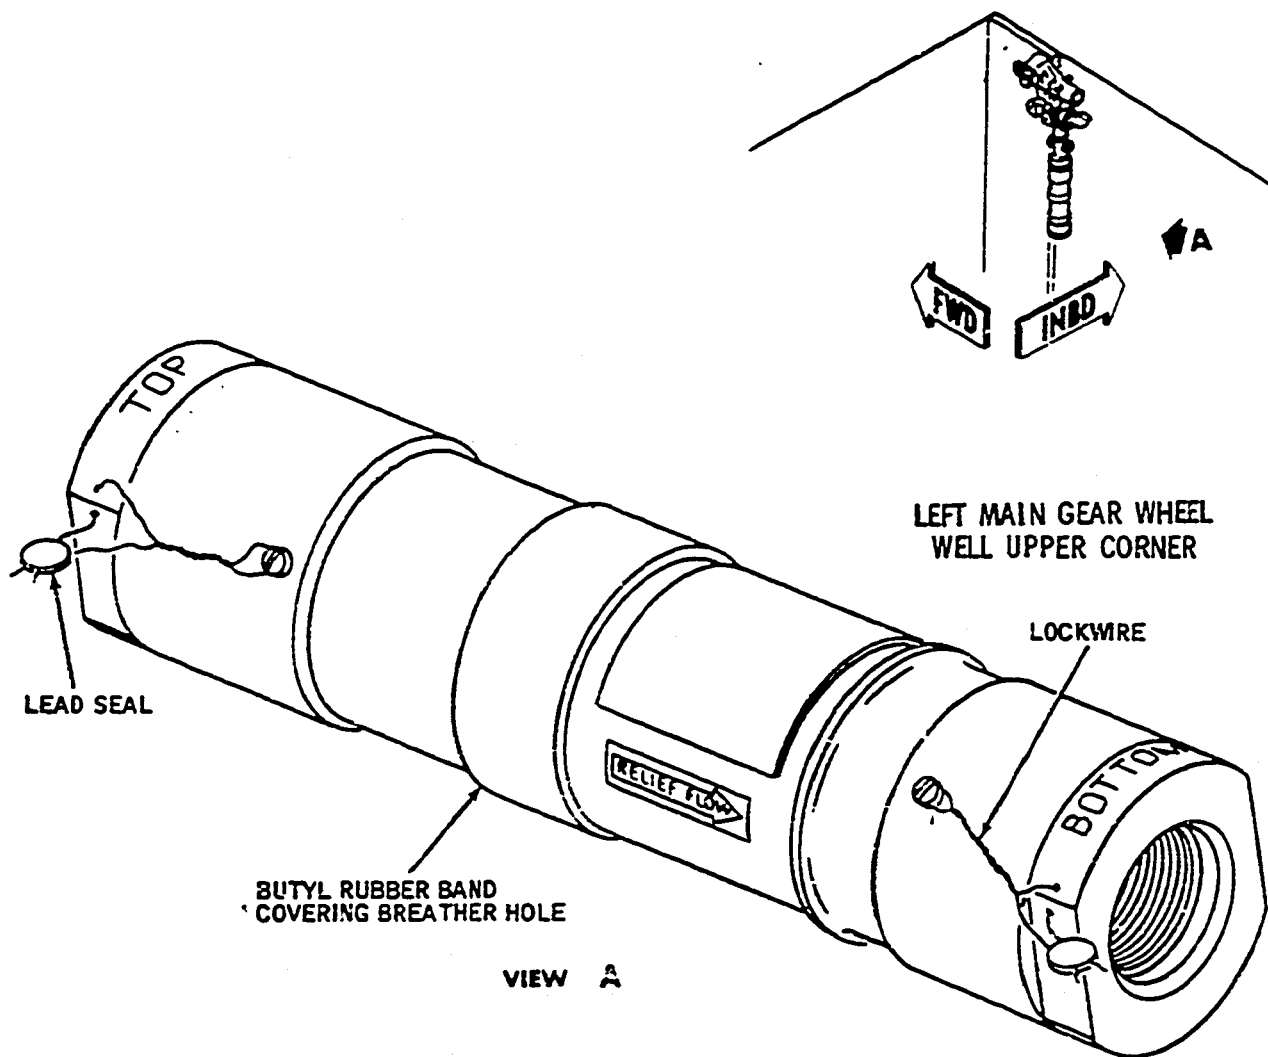

HA2-856

Hydraulic System Priority Valve -- Cutaway View  
 (Airplanes N8755-N8760)  
 Figure 21 (Sheet 2)

Aug 1/69

29-10-0  
 CODE 2  
 Page 38A



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The priority valve shuts off hydraulic pressure to all subsystems downstream of the left power manifold, whenever the hydraulic pressure drops below 1700 psi minimum. At this point, the valve closes to reserve the hydraulic pressure for use in the flight control systems, preventing them from reverting to manual operation. When the hydraulic pressure rises to 2150 psi maximum, the priority valve opens and supplies pressure to the right manifold and all subsystem downstream of the priority valve.
- (3) Hydraulic fluid from the left power manifold enters the priority valve through the inlet port, passes through the poppet valve plate holes, and applies pressure against the piston. When sufficient hydraulic pressure is applied to the piston, the piston load-spring compresses, unseating the poppet and permitting full flow through the valve. When the hydraulic pressure decreases to less than the opposing force value of the piston load-spring, the load-spring forces the piston against the poppet and shuts off fluid flow through the valve.
- (4) The maximum flow available from both engine-driven hydraulic pumps is: 44 to 45 gpm at takeoff, climb, and cruise configurations; 26 to 28 gpm at descent, approach, and engine idle configurations.
- (5) Some of the larger hydraulic system demands are as follows:
  - (a) Gear retraction -- 17 gpm (10 - 12 seconds)
  - (b) Gear extension -- 14 gpm (10 - 12 seconds)
  - (c) Wing flaps down -- 8 gpm (10 seconds)
  - (d) Wing flaps up -- 3 gpm (22 seconds)
  - (e) Horizontal stabilizer -- 7 gpm
  - (f) Ailerons -- 17 gpm (25°/second)
  - (g) Rudder -- 3 gpm (25°/second)
- (6) There are various combinations of hydraulic system operations which could cause momentary reversion of the flight controls to manual operation. To prevent reversion to manual operation, the priority valve assures that the left power manifold receives all the hydraulic fluid pressure under conditions of very large flow demands.

U. Hydraulic System Selector Control Lever

- (1) The hydraulic system selector control lever is a manually actuated, mechanical lever detented to three positions. The lever provides a mechanical means, through cables, for positioning the system selector

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

valve and the auxiliary hydraulic pump supply selector valve. The hydraulic system selector control lever is located on the system engineer's control pedestal. The lever is attached to a drive sector, located on a common shaft with the other control pedestal sectors. The lever and sector are accessible through the cover plates on the system engineer's pedestal.

- (2) To put the hydraulic power system in the bypass condition, the system selector control lever is lifted out of detent and moved to bypass/general system position. At the same time, the cable moves the sector and pushrod of the system selector valve to the No. 1 position. The pushrod positions the system selector valve to the No. 1 bypass position. At the same time, the cables from the system selector valve sector move the auxiliary pump supply selector valve sector to No. 1 (auxiliary) position. The auxiliary pump supply selector valve remains in the auxiliary supply position through the idle feature of the sector rigging. In this condition, the engine-driven pump pressure is ported to the reservoir and the auxiliary pump supplies pressure to the general system. In this position, the fluid is supplied to the auxiliary pump from the low standpipe in the hydraulic system reservoir. To put the system into the alternate condition, the selector control lever is lifted out of detent and moved to the general system/main gear downlock and flaps position. The cables move the system selector valve sector to the No. 3 (alternate) position. The system selector valve sector moves the cables rotating the auxiliary pump supply selector valve sector to the No. 3 (alternate) position. As the sector rotates, the end of the arm moves away from the idle position. This positions the valves to the alternate position, supplying fluid to the auxiliary pump from the auxiliary pump alternate reservoir. In this position, fluid from the auxiliary pump is ported to the wing flap control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported to the general system.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - DESCRIPTION AND OPERATION

1. General

A. Description (See Figures 1 and 2.)

- (1) The hydraulic power system receives fluid pressure from the engine-driven hydraulic pumps, one installed on each inboard engine. The electrically driven auxiliary pump is used to supplement the engine-driven pumps, or to independently supply the system with fluid pressure.
- (2) The hydraulic system reservoir, located in the left wing root, has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir is used for fluid, and 1/10 is used for foam space. A separate air chamber is installed in the reservoir system to provide for a greater fluid capacity in the main reservoir. A reservoir filler assembly is installed in the piping between the reservoir and the air chamber and has a vent line from the filler neck to the tee at the top of the reservoir sight gage. The reservoir is pressurized to 30 to 35 psi by bleed pressure from the engine-driven pumps through an air pressure regulator-aspirator.
- (3) The engine-driven pumps receive fluid from the pressurized main reservoir through respective engine hydraulic fire shutoff valves. The engine hydraulic fire shutoff valves are normally open and can be mechanically controlled from the flight compartment. The pumps supply fluid pressure through respective check valves to the dual filter and relief valve. Some of the fluid from the filter is ported through the regulator-aspirator to pressurize the reservoir. Most of the fluid is routed through a check valve to the system selector valve, and then to the left and right hydraulic power manifolds. The manifolds distribute the fluid pressure to the subsystems.
- (4) Hydraulic fluid is normally supplied to the auxiliary hydraulic pump from a low standpipe in the main reservoir. During alternate operation, the auxiliary hydraulic pump receives fluid supply from the auxiliary pump alternate reservoir, which is located just aft of the auxiliary pump. From these reservoirs, the fluid is ported through the auxiliary pump selector valve which is mechanically controlled from the flight compartment by the system selector control lever. When operating, the auxiliary hydraulic pump supplies fluid pressure to the subsystems through the system selector valve which is also controlled by the system selector control lever in the flight compartment. A filter and check valve are installed in the line from the auxiliary pump to the system selector valve.
- (5) An accumulator is installed in the pressure line to the subsystems to provide a reserve supply of fluid and to act as a surge damper for the system.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Engine-driven pump fluid pressure is routed through the system selector valve to the left power manifold, where it is distributed to some of the subsystems and through the priority valve to the right power manifold. Fluid pressure from the right power manifold is distributed to the remaining subsystems.
- (7) The priority valve is a spring-loaded, poppet-type, balanced relief valve installed in the line downstream of the left power manifold. The priority valve's function in the system is to prevent the flight control systems from reverting to manual operation during high demands on the hydraulic system.
- (8) A fluid pressure transmitter, located in the nosewheel well, senses the system pressure, which is indicated on the hydraulic system pressure indicator in the flight compartment.

**B. Normal Operation**

- (1) Fluid is supplied to the hydraulic system from the pressurized hydraulic system reservoir. For operation of the hydraulic system under normal conditions, 8.1 US gallons (6.7 Imperial gallons; 30.6 liters) of hydraulic fluid are available to the engine-driven hydraulic pumps, and 12.9 US gallons (10.7 Imperial gallons; 48.8 liters) are available to the auxiliary hydraulic pump. Supply lines from the main reservoir carry fluid to each inboard pylon through normally open engine hydraulic fire shutoff valves to the engine-driven hydraulic pumps. Fluid is supplied to the auxiliary hydraulic pump from the main reservoir through a low standpipe at the base of the reservoir. Fluid is carried from the reservoir through the auxiliary pump selector valve to the auxiliary hydraulic pump.
- (2) The engine-driven hydraulic pumps supply full system pressure (3000 psi nominal) at any given engine speed, from idle to full power. The output flow of the pump is varied by sensing pressure from the outlet side of the pump. Each engine-driven pump contains a solenoid-operated bypass valve which, when energized, bypasses the pressure control regulator of the pump and ports fluid to the pump yoke control piston which feathers the pump. When the pump is feathered, flow rate is reduced to almost zero (1.0 gpm) and to a pressure of approximately 300 psi. Half of this flow maintains pump lubrication and cooling through a check valve, the engine-driven pump case drain line filter, and another check valve to the case drain return port of the reservoir. The pressure fluid from each pump passes through a check valve to the dual filter and relief valve.
- (3) The fluid enters the dual filter and relief valve through the relief valve chamber. The fluid is passed through the filter element, through a manifold, and through a common outlet port. Fluid from the outlet

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

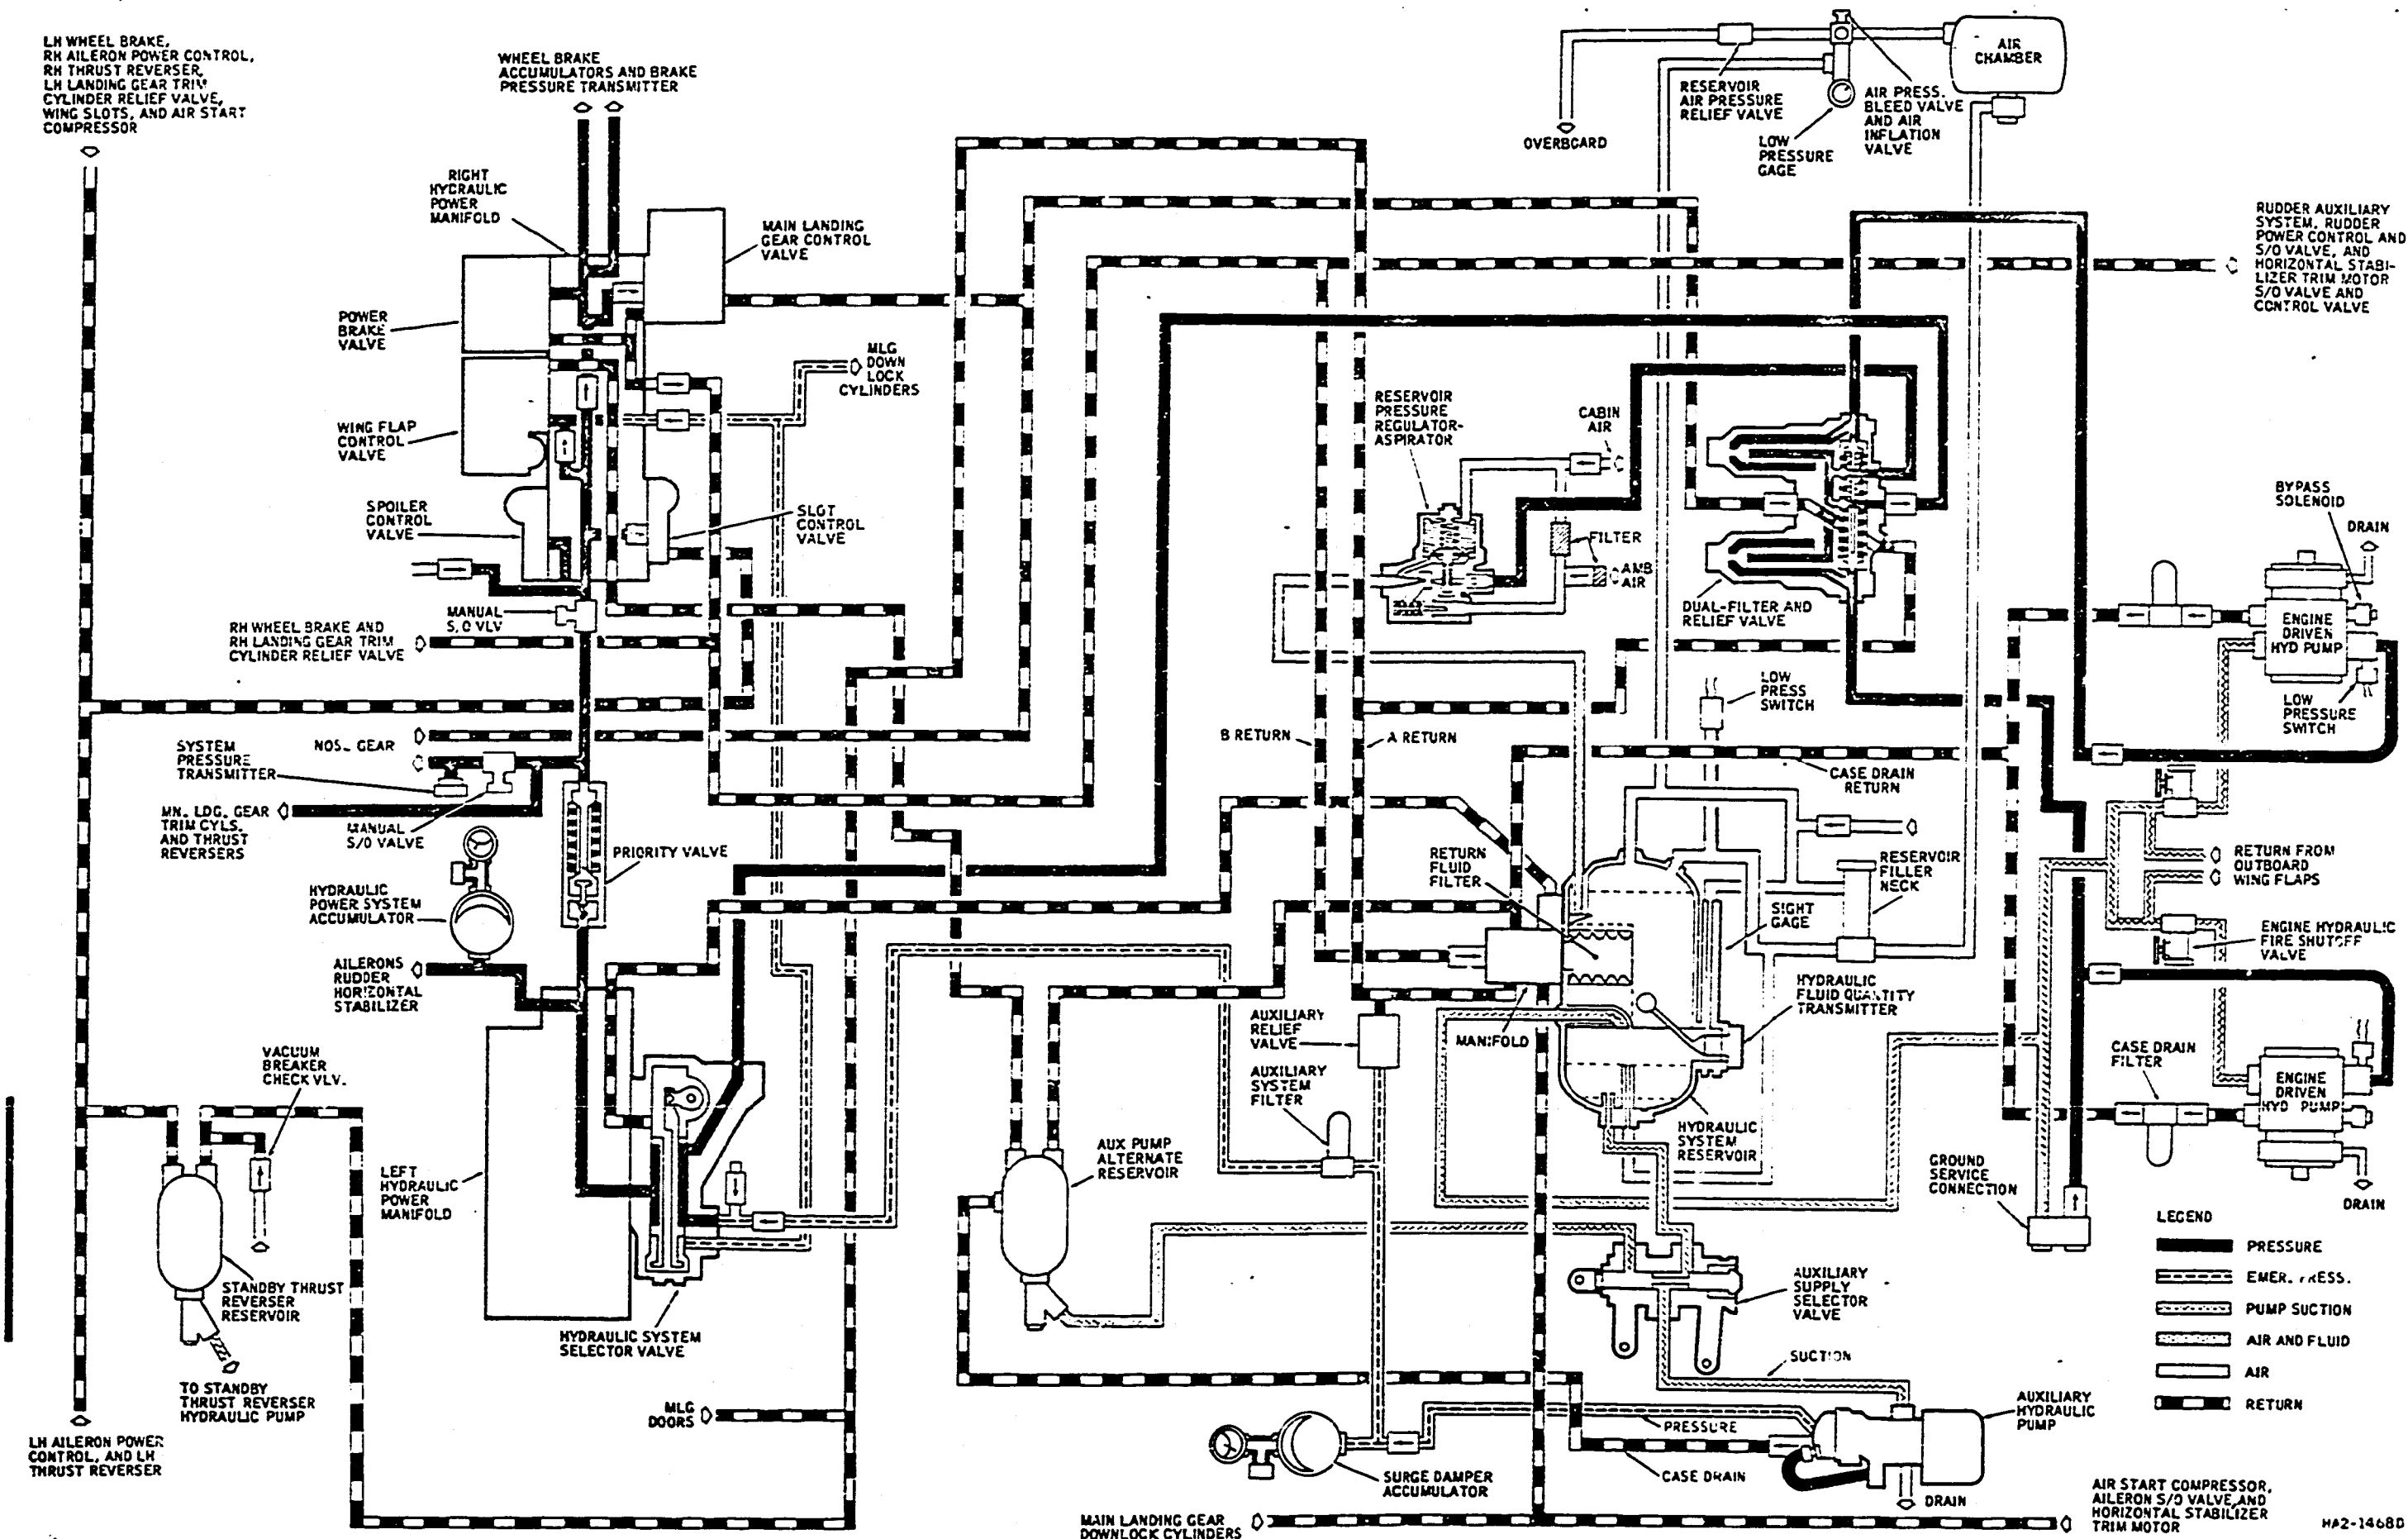

Hydraulic Power System -- Schematic Diagram  
 (Airplanes 55-75, 77, 78)  
 Figure 1 (Sheet 1)

29-10-0  
 CODE 3  
 Page 3

Dec 1/73


Printed in U.S.A.

AIR START COMPRESSOR,  
 AILERON S/O VALVE, AND  
 HORIZONTAL STABILIZER  
 TRIM MOTOR

HP2-14680

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

LH WHEEL BRAKE  
 RH AILERON POWER CONTROL,  
 RH THRUST REVERSER,  
 LH LANDING GEAR TRIM  
 CYLINDER RELIEF VALVE,  
 AND WING SLOTS

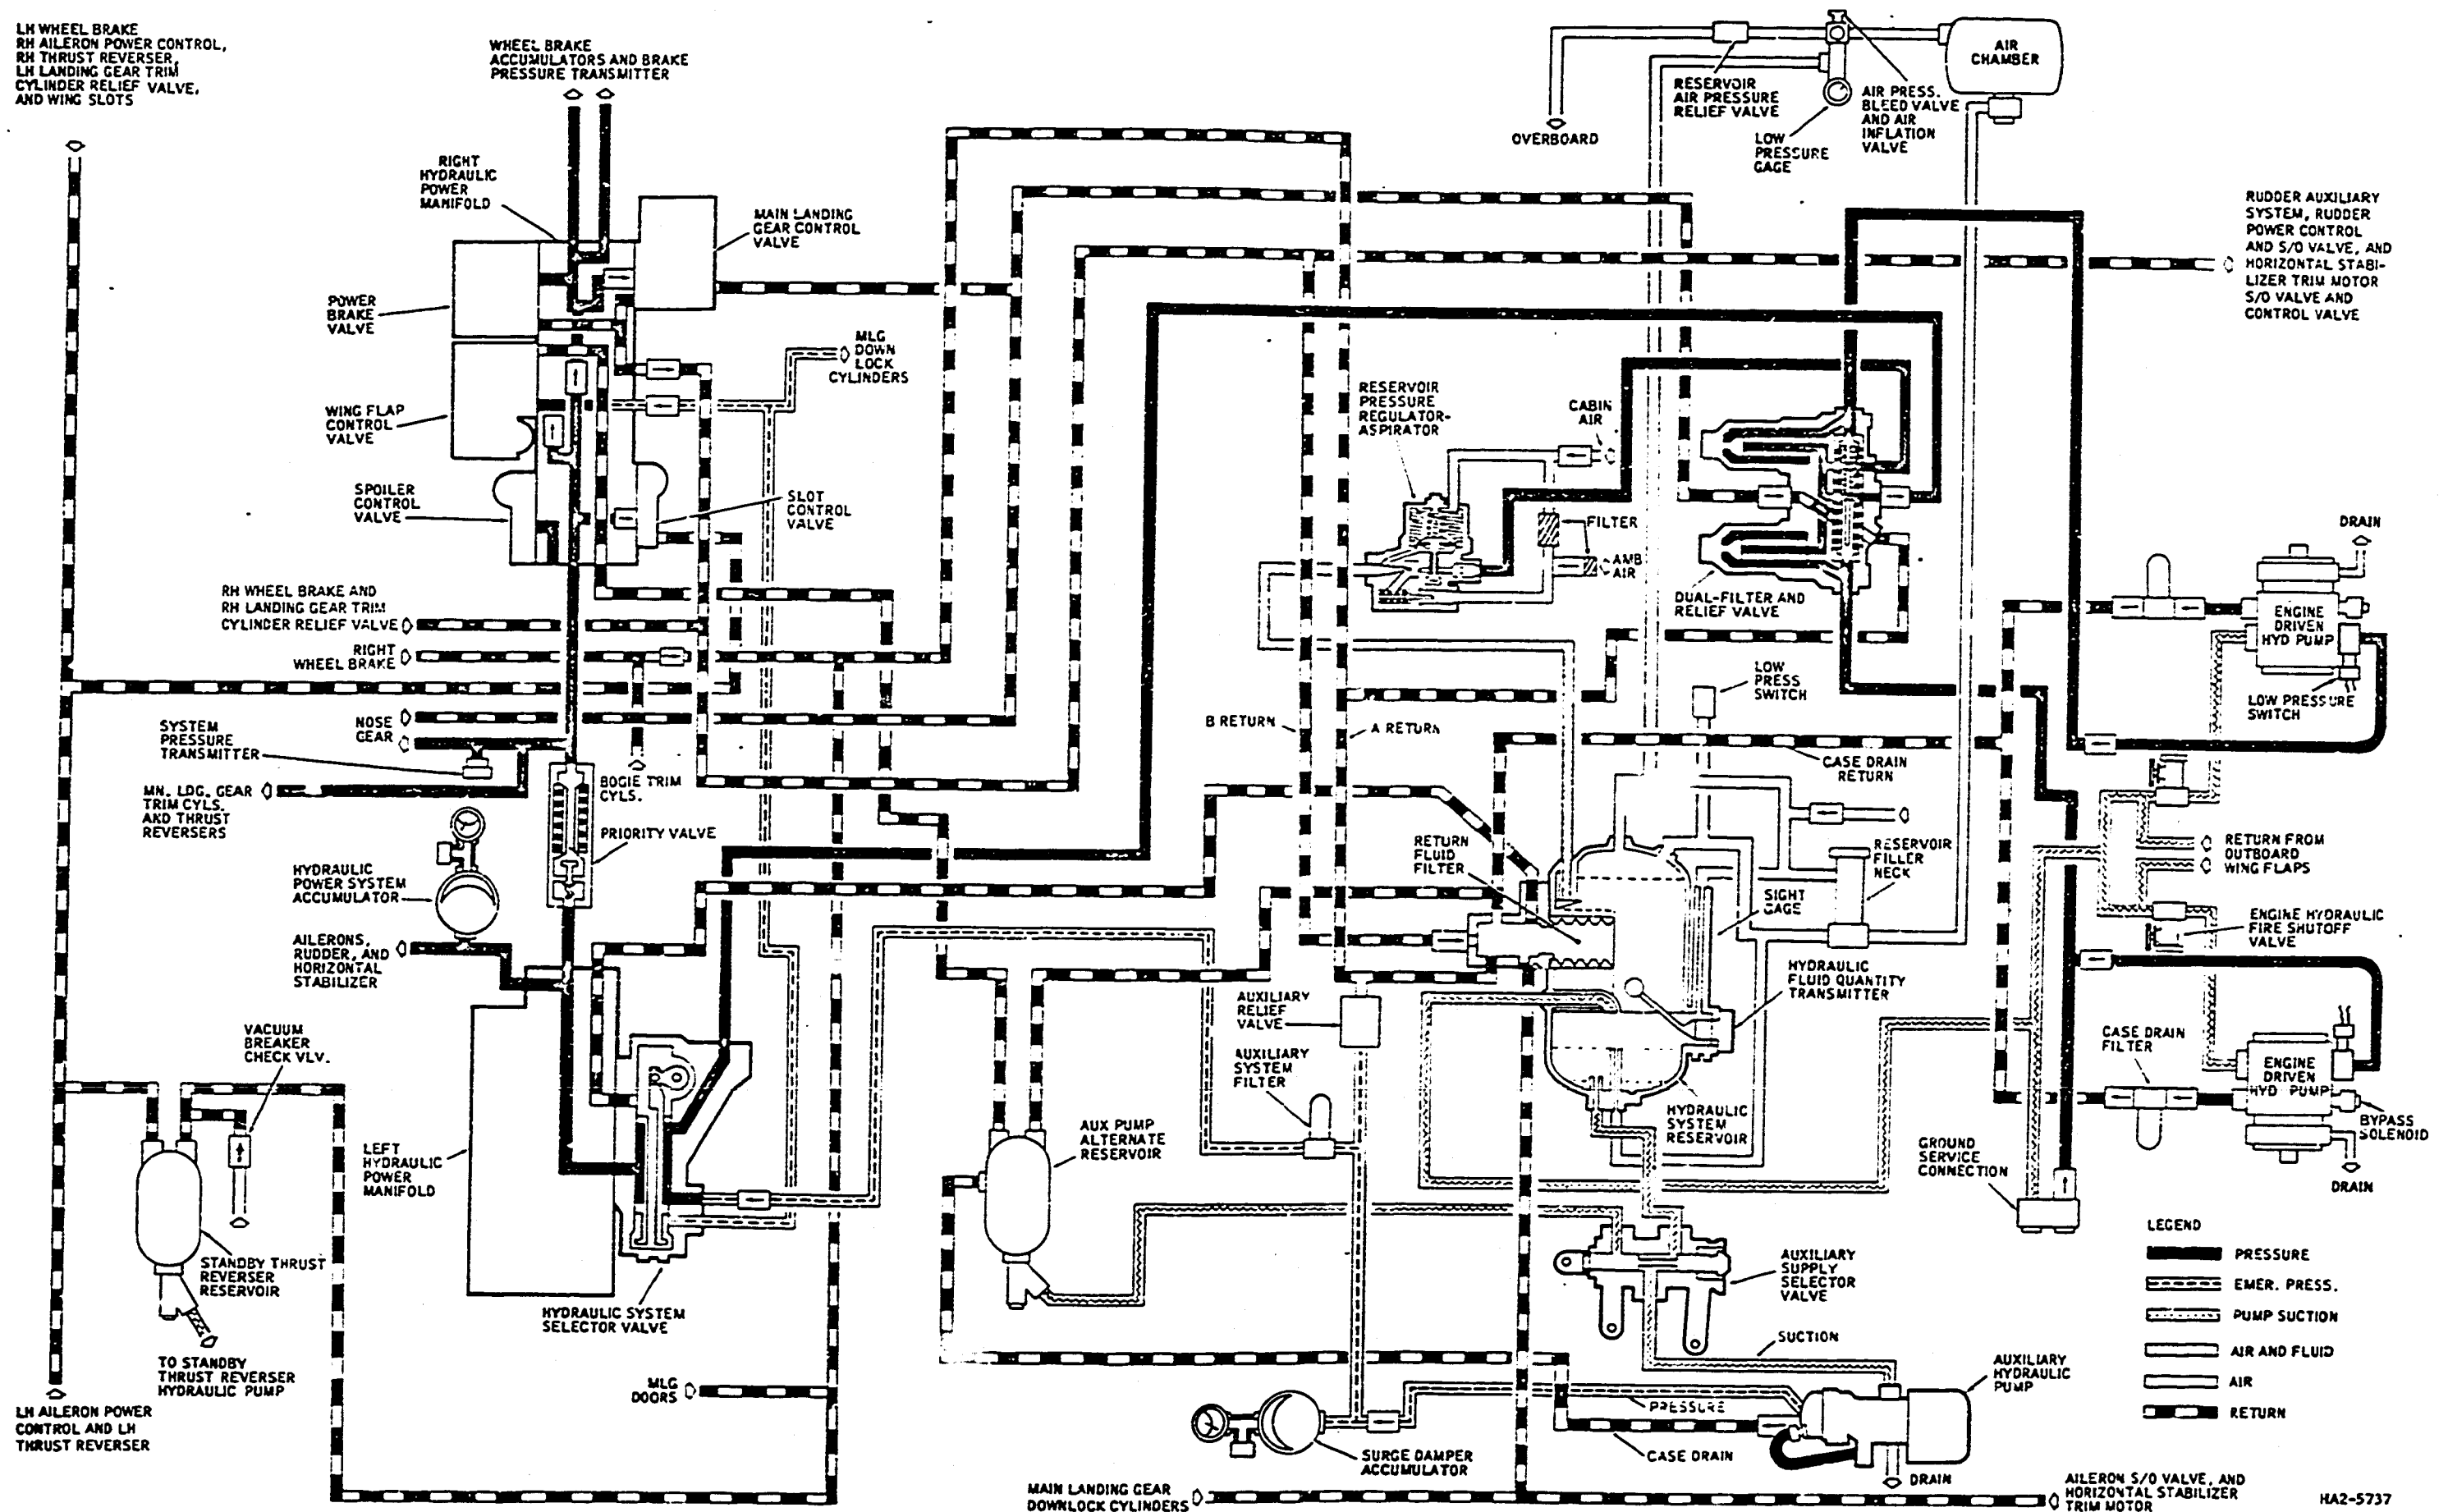

Hydraulic Power System -- Schematic Diagram  
 (Airplane 76)  
 Figure 1 (Sheet 2)


29-10-0  
 CODE 3  
 Page 4A

Dec 1/73

Printed in U.S.A.

HA2-5737

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

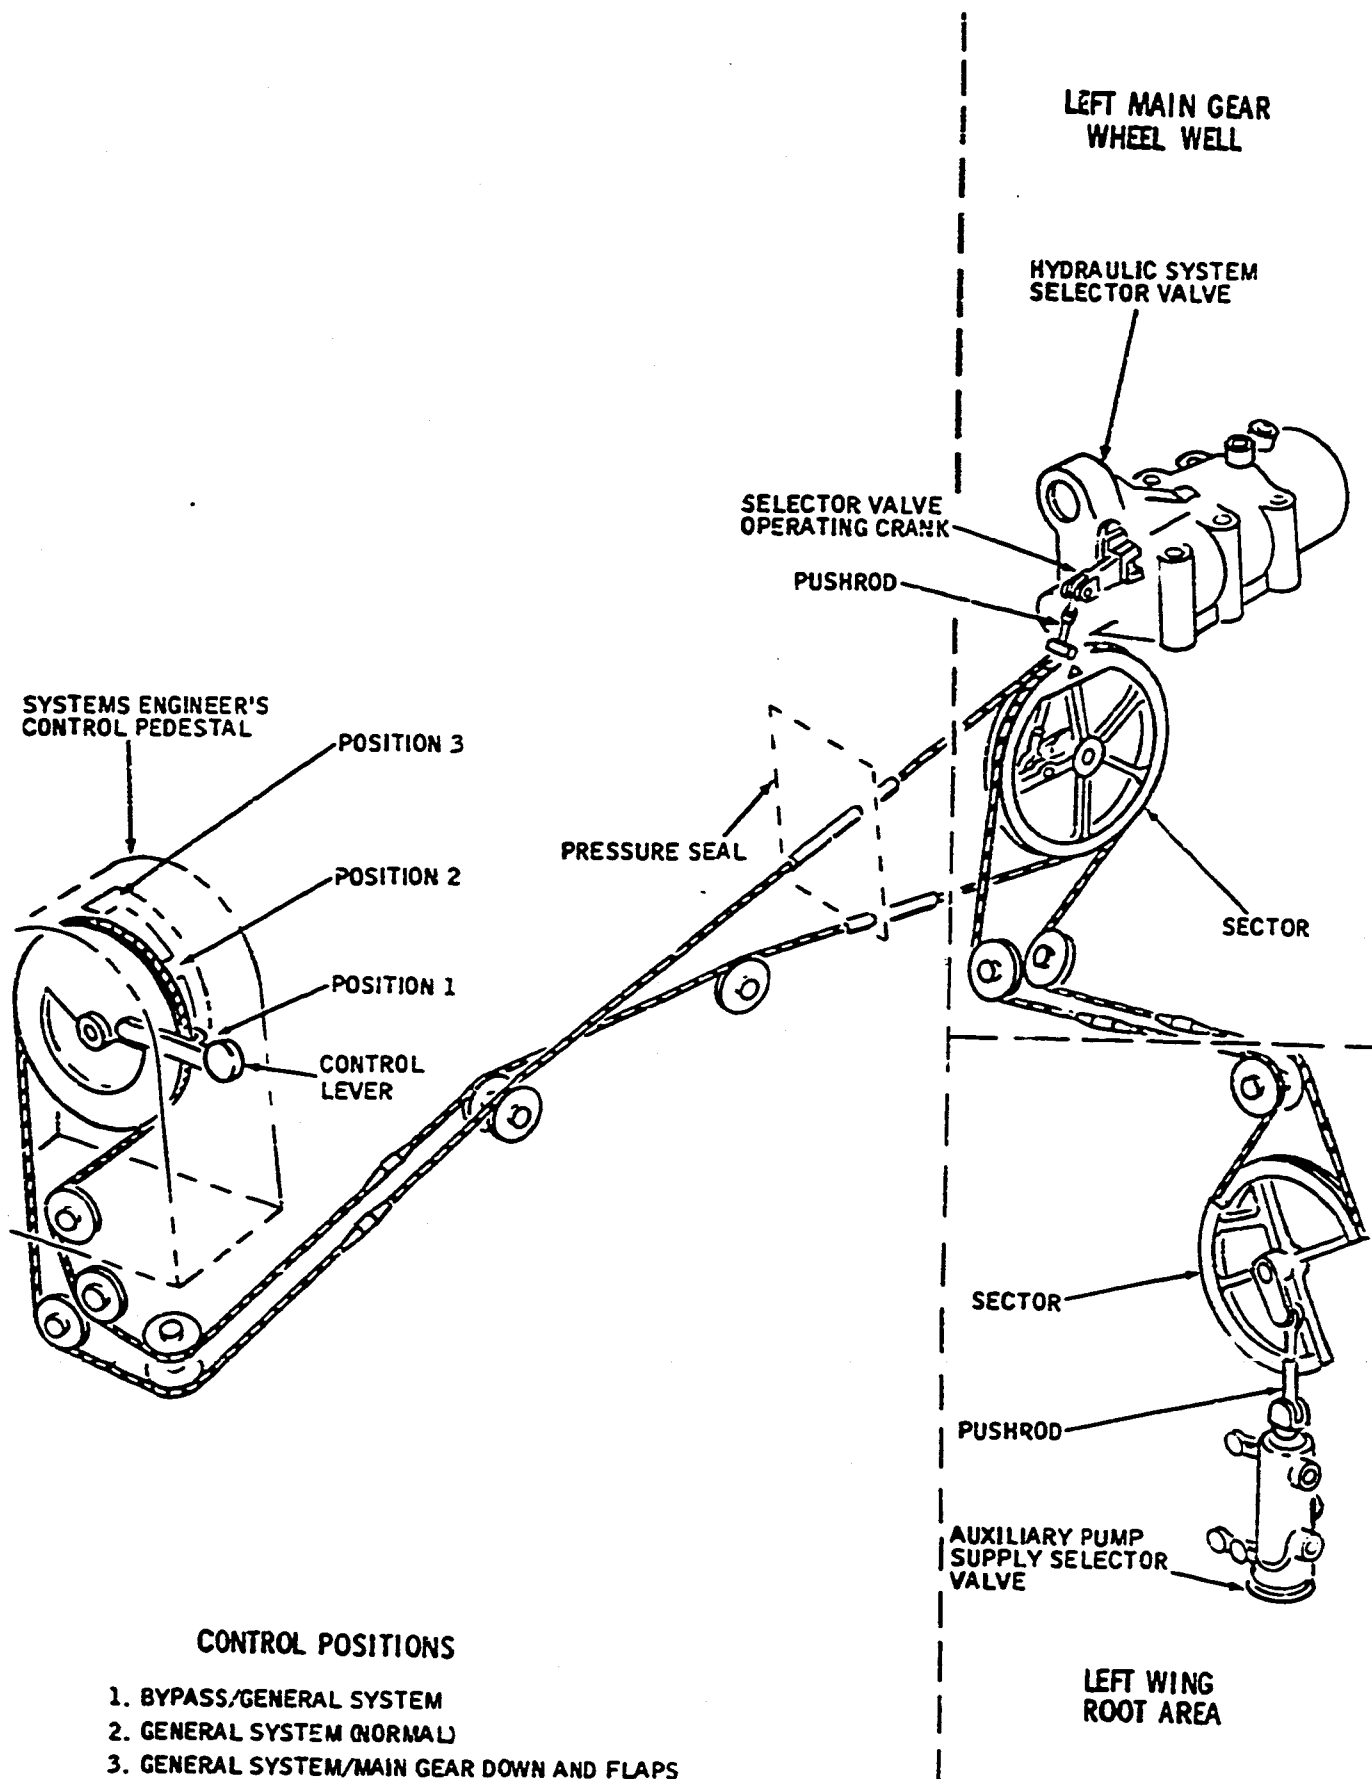

**CONTROL POSITIONS**

1. BYPASS/GENERAL SYSTEM
2. GENERAL SYSTEM (NORMAL)
3. GENERAL SYSTEM/MAIN GEAR DOWN AND FLAPS

Hydraulic System Selector and Auxiliary Pump Supply  
 Selector Valves -- Mechanical Control Schematic  
 Figure 2

HA2-486

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 3  
 Page 5

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

port is routed through a check valve to the system selector valve. If back pressure in the system builds up to approximately 3300 psi, the relief valves in the dual filter and relief valve open and port fluid back to the reservoir via A return port. The relief valve poppet closes again when system pressure drops to approximately 3000 psi.

- (4) The aspirator receives filtered fluid (bleed pressure at nominal 3000 psi) from the dual filter and relief valve. The aspirator operates on the jet pump principle. Hydraulic fluid is atomized and mixed with air within the unit by a nozzle and a venturi. The mixture is used to pressurize the reservoir and reservoir air chamber. The regulator diaphragm maintains a pressure range of 30 to 35 psi in the reservoir and air chamber. If there is a regulator malfunction, the aspirator stalls when the outlet pressure reaches a maximum of 40 psi. A reservoir relief valve in the reservoir vent line relieves thermal expansion pressure above 45 (+5, -0) psi.
- (5) Pump pressure fluid enters the system selector valve through the system pressure inlet port. When the pump selector control lever is in the general system (normal) position, fluid is ported to the pressure passages of the left power manifold. The fluid pressure in the left power manifold is ported through the priority valve to the nose gear and the right power manifold and directly to the following valves:
  - (a) Aileron power shutoff
  - (b) Rudder power shutoff
  - (c) Longitudinal trim hydraulic motor shutoff
- (6) The right power manifold distributes fluid pressure to the brake accumulators, the pressure transmitter, and the following control valves:
  - (a) Wing flap
  - (b) Slot
  - (c) Main gear
  - (d) Power brake
- (7) The return fluid from the wing flap control valve is ported through the right power manifold and into the auxiliary hydraulic pump alternate reservoir. Return fluid from the outboard wing flaps is piped into the suction lines for each engine-driven hydraulic pump. Return fluid from the slot control valve is ported into the A return line to the main reservoir. The power brake and main gear control valve gear up return fluid is ported through a restrictor check valve into the B return line to the reservoir. The main gear control valve gear down return pressure bypasses the right manifold and returns to the reservoir.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

through the A return line. All return fluid entering the reservoir is filtered through the return ports filter located within the reservoir.

C. Bypass Operation

- (1) The output of the engine-driven hydraulic pumps is bypassed by moving the system selector control lever out of the general system (normal) position to the bypass/general system position.
- (2) The system selector valve in the bypass position ports engine-driven pump pressure from the dual filter and relief valve directly to the return passage of the left power manifold. From the manifold, the fluid is ported directly to a tee in the wing flap return port of the hydraulic system reservoir. In the bypass condition, the auxiliary hydraulic pump receives fluid from the hydraulic system reservoir, pressurizes it to system pressure, and ports it to the left and right power manifolds for distribution to the subsystems.

D. Alternate Operation

- (1) When both engine-driven hydraulic pumps and the auxiliary hydraulic pump are rendered inoperative due to the loss of the normal supply of fluid, the hydraulic power system can be rigged for alternate operation. This is accomplished by placing the system selector control lever in the general system/main gear downlock and flaps position. When the system selector control lever is in this position, the auxiliary hydraulic pump supply selector valve is positioned to supply fluid from the auxiliary pump alternate reservoir to the auxiliary pump.
- (2) Fluid is supplied to the auxiliary pump from the outlet port of the auxiliary pump supply selector valve. Output pressure is ported through the auxiliary system filter and check valve to the auxiliary pressure inlet port of the system selector valve.
- (3) In the general system/main gear downlock and flaps position, auxiliary pump pressure bypasses the manifold pressure passages and is ported from the alternate outlet port of the system selector valve. Fluid from this port flows directly to a port on the right power manifold, through an internal check valve in the manifold, to the wing flap control valve. A line, teed into the alternate supply line, runs directly to a shuttle valve in the main gear downlock cylinder line. When auxiliary pressure is applied, the shuttle valve shifts, porting fluid into the downlock bounce cylinder's downlock side.

E. Mechanical Control

- (1) The hydraulic power mechanical control system consists of the hydraulic system selector control lever cable drum, the system selector valve sector, the system selector valve, the auxiliary hydraulic pump supply selector valve sector, and the auxiliary hydraulic pump supply selector valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-3 SIXTY SERIES**  
MAINTENANCE MANUAL


- (2) The control lever located on the system engineer's control pedestal is used to position the system selector valve and, in turn, the auxiliary hydraulic pump supply selector valve.
- (3) The control lever is spring loaded into general system (normal) position, and is connected to the control lever cable drum. Two cables run from the drum, under the cabin floor, aft through the pressure bulkhead at the rear wing spar, and into the left wheel well to the system selector valve sector. A pushrod connects the sector to the positioning lever of the system selector valve.
- (4) A second set of cables is routed from the system selector valve sector into the left wing root to the auxiliary hydraulic pump supply selector valve sector. When the system selector valve is in either bypass or normal, the auxiliary hydraulic pump supply selector valve sector is arranged so that the pushrod idles between the two positions. This allows the valve to remain in the auxiliary position. When the sector is moved to the alternate position, the pushrod is pulled by the sector to reposition the valve to the alternate position.
- (5) The control lever is normally in the general system (normal) position. To move the system selector valve to the bypass position, the control lever is moved to the bypass/general system position. When the system selector valve is moved to the bypass position, the auxiliary hydraulic pump supply selector valve sector is moved to a new position. Due to the idle feature on the auxiliary sector, the valve remains in the auxiliary position. With the valve in this position, fluid is supplied to the auxiliary pump through the low standpipe in the hydraulic system reservoir. In this condition, engine-driven pump pressure is ported to the reservoir and the auxiliary pump pressure is ported to the general system.
- (6) To put the system in alternate operation, the control is moved to the general system/main gear downlock and flaps position. This moves the system selector valve to the alternate position, and simultaneously moves the auxiliary hydraulic pump supply selector valve to the alternate position. Fluid is supplied to the auxiliary pump from the auxiliary hydraulic pump alternate reservoir. Fluid pressure from the auxiliary pump is ported to the flap system control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported from the system selector valve to the general system.

## 2. System Components

### A. Hydraulic System Reservoir (See Figures 3 and 4.)

- (1) The hydraulic system reservoir is installed on the aft side of the wing rear spar in the left wing root and is accessible through the left wing root access door. The hydraulic system reservoir serves as the main source of hydraulic fluid for the engine-driven hydraulic pumps and the normal supply for the auxiliary hydraulic pump. The reservoir is

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

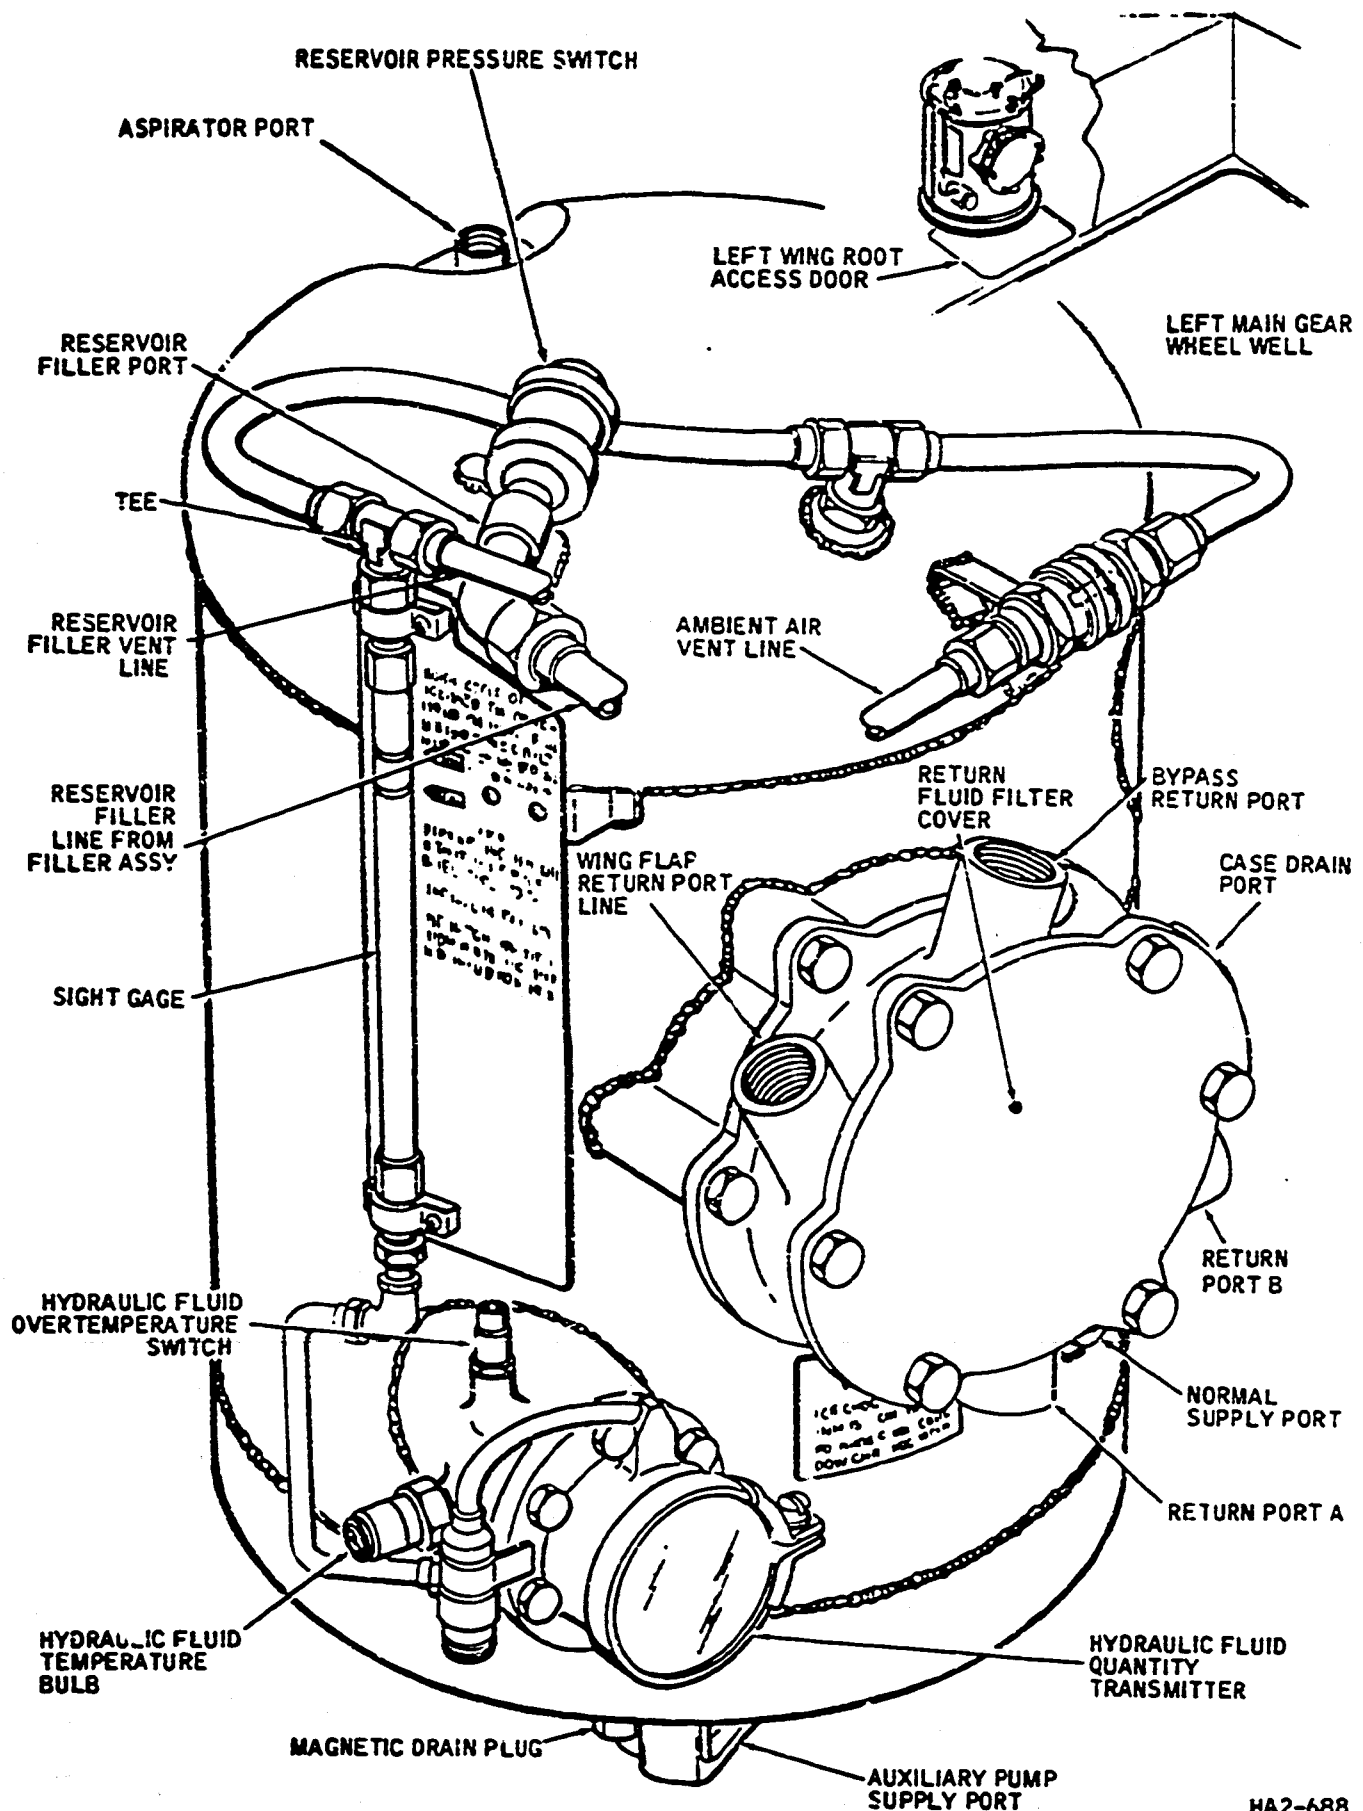

Hydraulic System Reservoir -- External View  
 Figure 3


HA2-688

29-10-0  
 CODE 3  
 Page 9

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

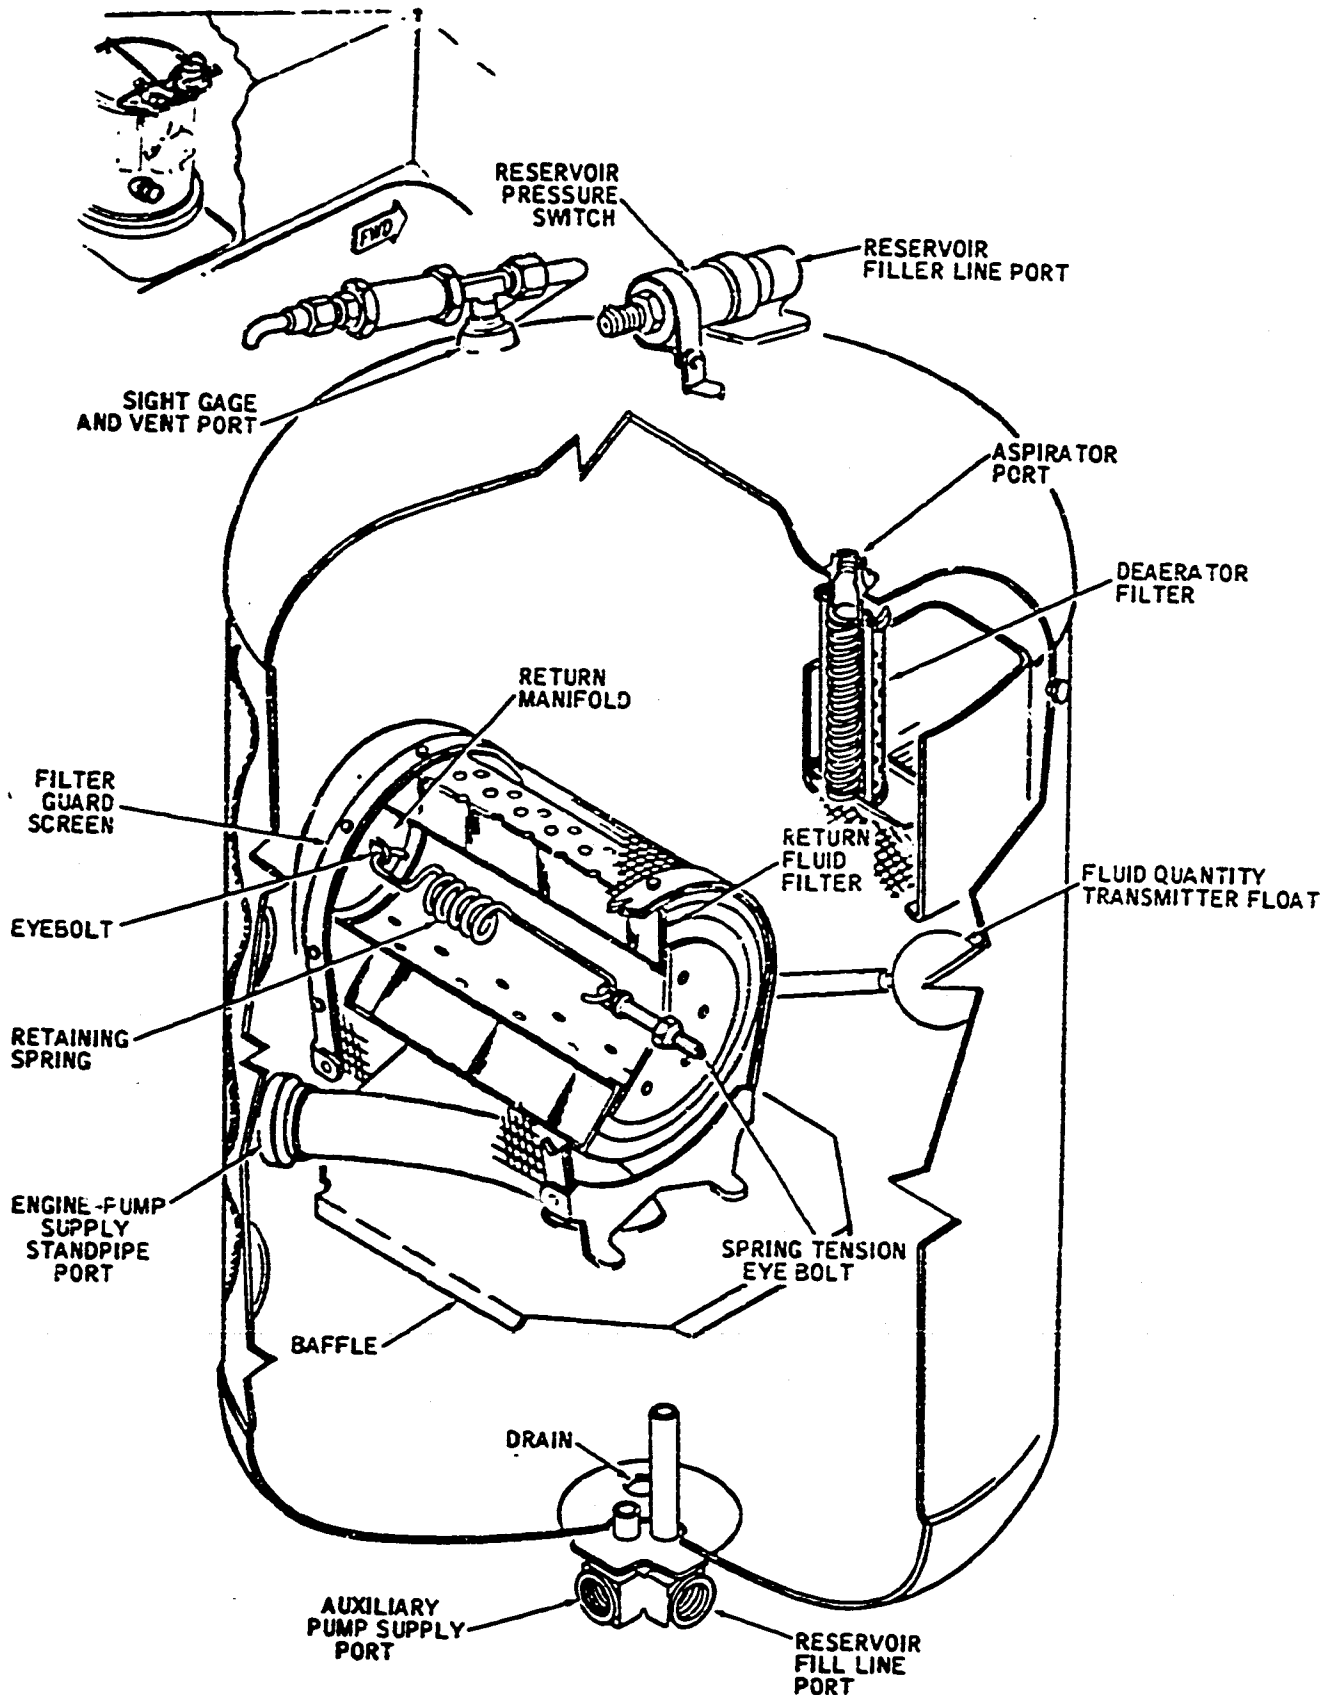

Hydraulic System Reservoir -- Cutaway View  
 Figure 4

HA2-689

29-10-0  
 CODE 3  
 Page 10

Printed in U.S.A.

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

cylindrical in shape and contains a filter, baffle, and a screen cover encasing the filter. The filter prevents foreign particles from contaminating the fluid supply. Mountings are provided on the exterior surface of the reservoir for return line ports, aspirator port, electrical sensing units, sight gage, instruction placards, magnetic drain plug, and system supply ports.

- (2) The reservoir is pressurized with air from the regulator-aspirator to a range of 30 to 35 psi and has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir volume is used for fluid and 1/10 is used for foam space.
- (3) The aspirator port through which the reservoir is pressurized is located in the recess on top of the reservoir. An aspirator-deaerator filter is supported in the reservoir by a screen and support box assembly which is mounted to the reservoir wall by two bolts.
- (4) The mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The return ports manifold is an open-centered ring, flanged at both sides and provided with five fluid ports around its circumference; return port A is located at the bottom, return port B is located at the lower right side, the wing flap return port is located at the upper left side, and the system selector valve bypass port is located at the top. One flange of the manifold is mounted with six bolts to the mounting flange on the reservoir. The return fluid filter cover fits into the open side of the manifold, and is attached to the outer manifold flange with six bolts to form a fluid-tight cover for both the manifold and the filter.
- (5) The return fluid filter is installed in the reservoir, behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the return fluid filter cover holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to the engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
- (6) A flanged adapter for the fluid quantity transmitter is welded to the reservoir below and to the left of the return ports manifold. The adapter is provided with two small port bosses for the hydraulic fluid temperature bulb and the hydraulic fluid overtemperature switch. The lower end of the sight gage connects to a third port in the adapter, while the top of the sight gage tees into a port at the top of the reservoir. An instruction plate is mounted behind the sight gage and the vacuum breaker check valve tees into the port at the top of the reservoir that is used by the sight gage.

B. Hydraulic Reservoir Return Fluid Filter (See Figure 4.)

- (1) The reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


The filter is located behind the return ports manifold, and is spring loaded to act as its own relief valve. Access to the filter is by removing the return fluid filter cover from the return ports manifold by removal of six bolts. The filter is attached by the retaining spring to the cover and is withdrawn from the reservoir when the cover is removed.

- (2) Externally, the filter consists of two perforated concentric tubes. The area between the tubes is closed by metal end caps which are bonded to the two tubes. A resilient rubber gasket is bonded to each of the caps. Each gasket must be smooth and flat for proper sealing of the filter. The gaskets act as a static seal and a relief valve seat.
- (3) Internally, the filter has a 10-micron, resin-impregnated, convoluted paper-type filter element. The area of the filter element is approximately 1960 square inches. The filter is held in place by a retaining spring. One end of the spring is attached to an eyebolt located inside the return port's manifold cover. The spring passes through the center chamber of the filter and is connected to another eyebolt. This eyebolt is secured to a large washer and plate by means of a self-locking nut. The washer seats on the rubber gasket which is bonded to the filter. The fluid enters the center chamber of the filter and passes through the inner tube of the filter to the filter element by means of perforation holes. Foreign matter is filtered out by the filter element, and the fluid leaves the element through perforation holes in the outer tube. When the element becomes saturated with foreign matter, the filter acts as its own relief valve and unseats at 20 to 25 psi above normal return pressure which allows fluid to bypass the filter and enter the reservoir.

C. Hydraulic Reservoir Air Pressure Regulator-Aspirator (See Figure 5.)

- (1) The reservoir air pressure regulator-aspirator is a jet-type air pump, regulated by a pressure-sensitive shutoff valve. The unit pressurizes the hydraulic reservoir with air to the operating pressure range of 30 to 35 psi. The regulator-aspirator is located on the top inboard side of the reservoir and is mounted on the reservoir retainer ring. Access to regulator-aspirator is through the left wing root access door.
- (2) The regulator-aspirator assembly consists of a main aspirator body and a regulator housing. The main aspirator body has two inlet ports and one outlet port. The ports are permanently identified inlet, outlet, and air inlet. The plug for an air check valve is located near the outlet plug. A chemically treated paper filter is installed near the aspirator body air inlet port in the air line from the pressurized cabin area. A metal screen filter is installed on the check valve which tees into the aspirator body air inlet port.
- (3) The reservoir air pressure regulator-aspirator operates basically with a jet pump action which is regulator controlled. Fluid enters the assembly through the fluid inlet port where it is filtered and then ported through the valve assembly of the regulator. During normal

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

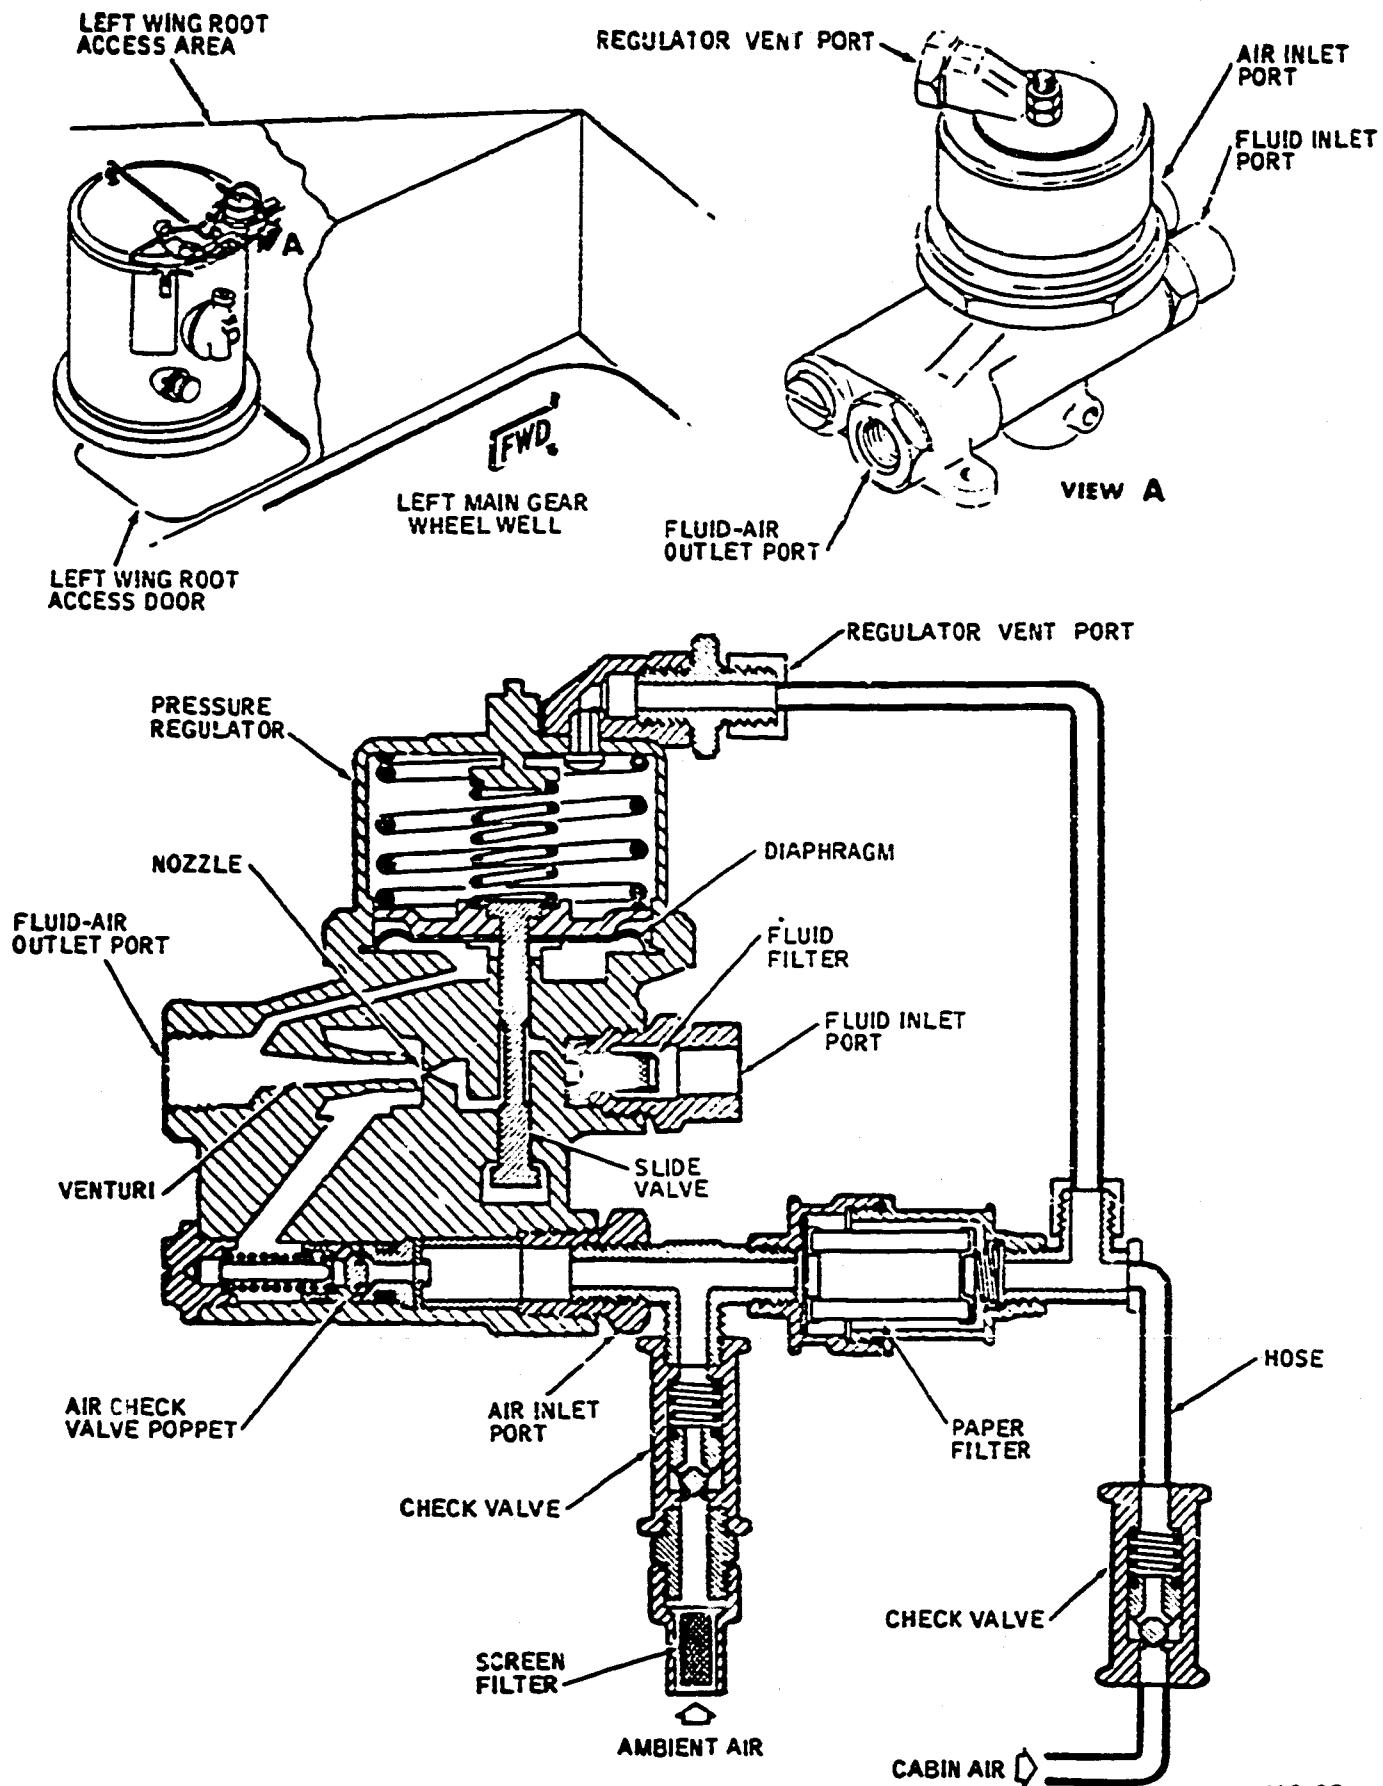

Reservoir Air Pressure Regulator-Aspirator -- Schematic  
 Figure 5

HA2-25

29-10-0  
 CODE 3  
 Page 13

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

operation, when air pressure at the outlet port is under 30 psi, the valve is open, porting fluid to the nozzle. The orifice in the nozzle sprays the fluid through the venturi of the outlet port, creating a vacuum in the chamber around the venturi. When the vacuum becomes great enough to create a pressure differential of approximately 1 psi, ambient air opens the air check valve. The air is ported to the chamber around the venturi and is siphoned, with the fluid, through the outlet port.

- (4) Hydraulic fluid inlet pressure at the engine-driven hydraulic pumps is improved at high altitude operation by supplying pressurized filtered cabin air to the reservoir regulator-aspirator instead of ambient outside air. Part of the inlet air is diverted by a tee fitting to the regulator chamber to provide a more positive regulating force on the diaphragm than would be obtained with low ambient pressures. The chemically treated paper filter, installed in the regulator-aspirator air supply line from the cabin, removes smoke tars and impurities from the pressurized cabin air. The steel mesh screen filter, installed on the check valve which tees into the regulator-aspirator air inlet port downstream of the paper filter, removes dust, dirt, and foreign particles from the ambient air and serves as a standby to supply filtered air in event the paper filter is clogged.
- (5) As pressure in the reservoir builds up, back pressure is bled from the outlet port to the diaphragm chamber. The reaction on the diaphragm begins to move the slide valve to cut off the fluid flow. At 30 to 35 psi of back pressure, the diaphragm completely closes the slide valve, cutting off the flow of fluid. If there is a regulator malfunction, the aspirator stalls when outlet pressure reaches a maximum of 40 psi.
- (6) The aspirator is capable of pressurizing the reservoir to 30 to 35 psi in approximately 4 minutes at altitudes from sea level to 15,000 feet, when fluid is ported through the nozzle at 0.5 gpm at 3000 psi.

D. Regulator-Aspirator Air Filters (See Figure 6.)


- (1) The regulator-aspirator air filters remove ambient and cabin air impurities from the air which is used to pressurize the main hydraulic system reservoir. The filtering system is composed of two filters. One of which is a paper element filter, installed directly in the cabin air supply line near the regulator-aspirator. The outer filter is a fine mesh, screen-type filter, installed on a check valve and positioned at right angles to the regulator-aspirator air inlet port. The screen filter, in addition to providing an immediate supply of ambient air during ground operations, serves as a standby air inlet to preclude air starvation of the regulator-aspirator in the event the paper element filter becomes clogged.

E. Hydraulic Reservoir Relief Valve (See Figure 7.)


- (1) The reservoir relief valve and the air pressure aspirator-regulator keep the reservoir pressurized to normal operating range. The valve



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

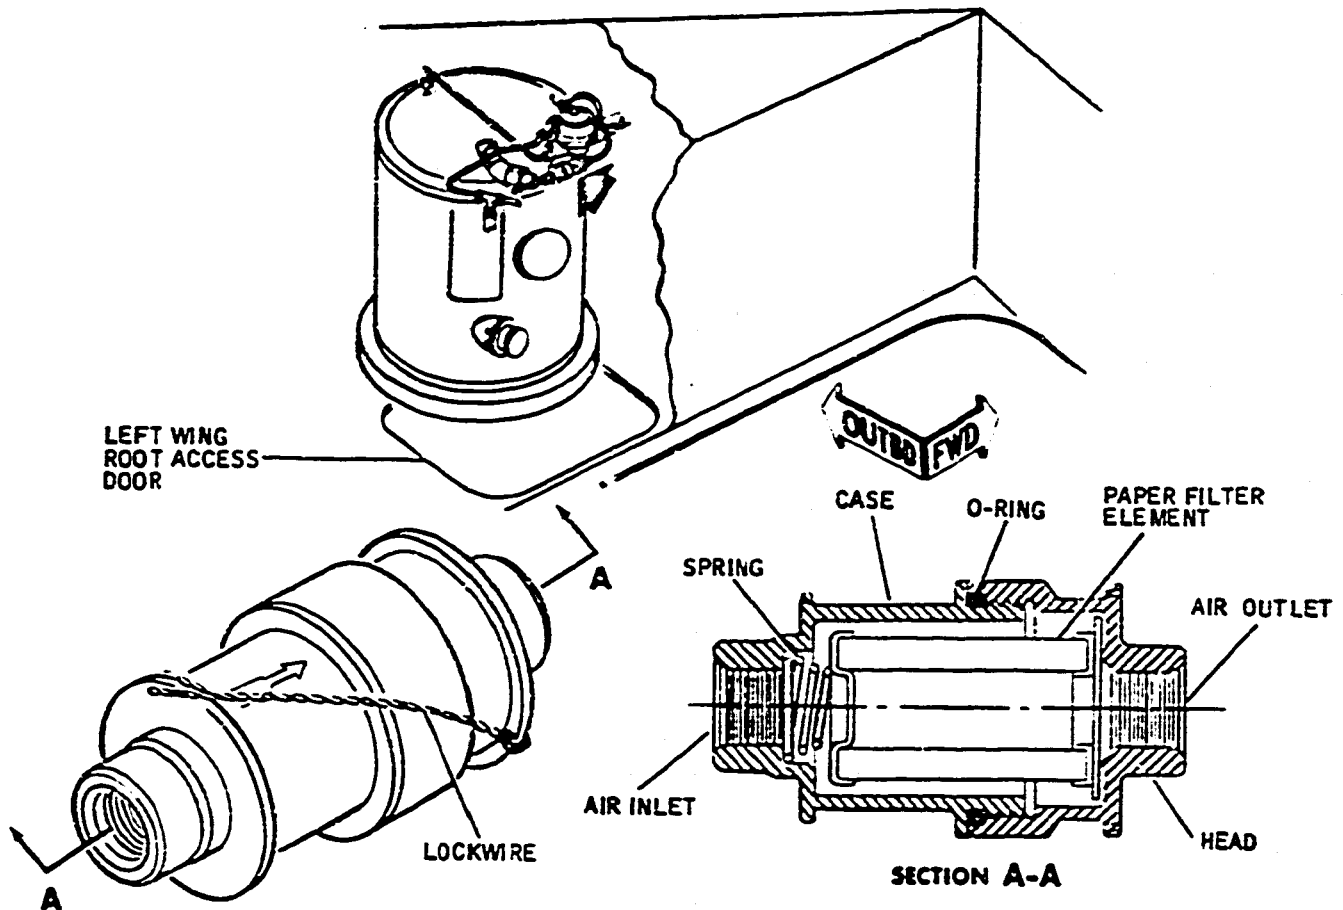

PAPER ELEMENT FILTER

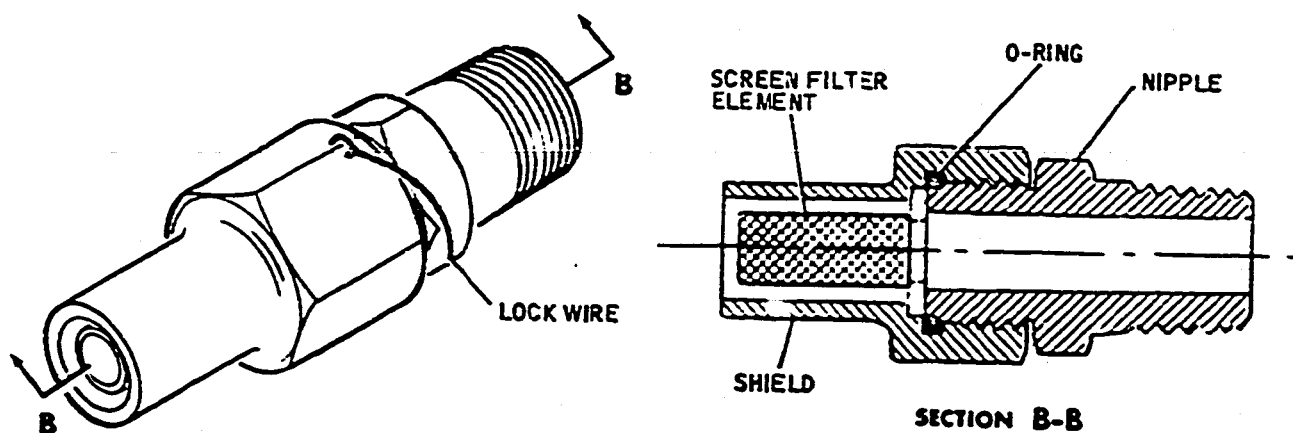

SCREEN FILTER




Regulator-Aspirator Air Filters -- Cutaway View  
 Figure 6

June 15/67

Printed in U.S.A.

HA2-35  
 29-10-0  
 CODE 3  
 Page 15

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

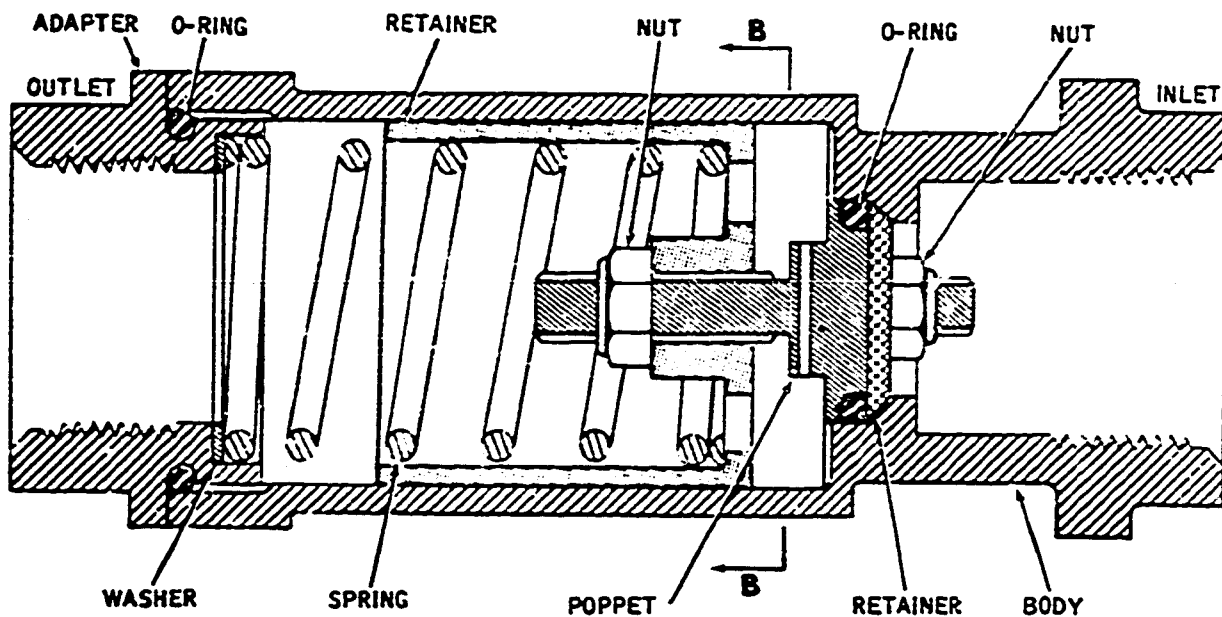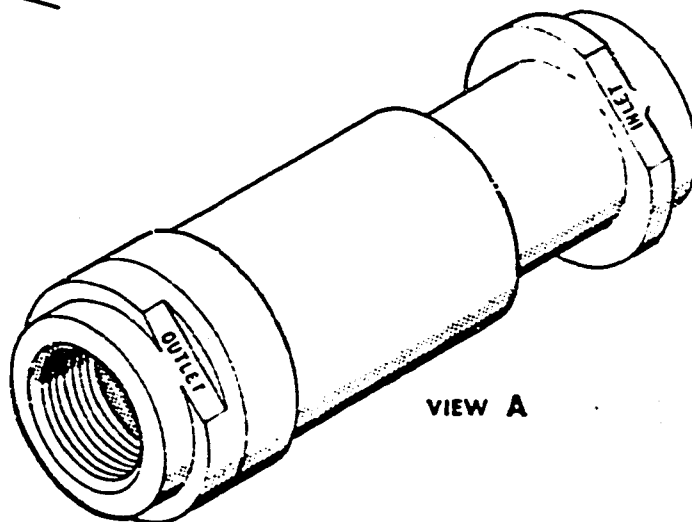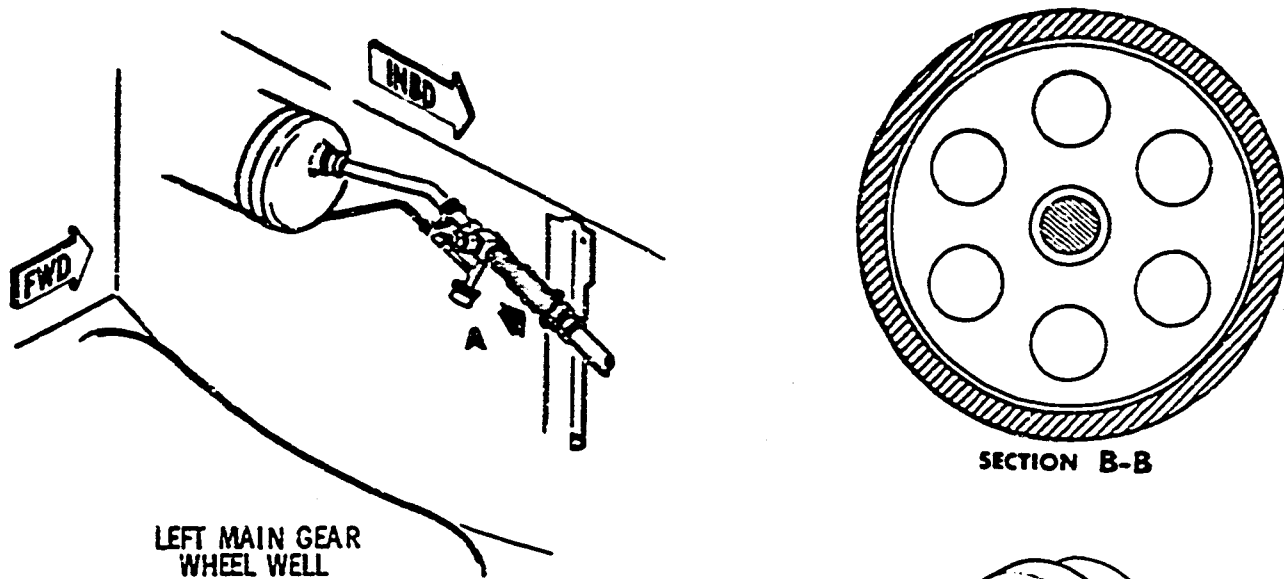

HA2-17

Hydraulic Reservoir Relief Valve  
 Figure 7

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

relieves excess air pressure which may build up in the reservoir through thermal expansion in the system. The valve has an inlet port and an outlet port and consists, internally, of an inlet port seat and a spring-loaded poppet.

- (2) The relief valve is installed in the overboard vent line downstream of the hydraulic reservoir air bleed valve. In the event that excess pressure builds up in the reservoir, the poppet will start to relieve at 45 (+5, -0) psi. Full flow of 10 gpm is attained at 80 psi maximum. The poppet reseats at 90 percent of the opening pressure.

F. Hydraulic Reservoir Air Bleed Valve (See Figure 8.)

- (1) The hydraulic reservoir air bleed valve and pressure gage are located on the aft side of the rear spar in the left main gear wheel well, inboard of the hydraulic reservoir air chamber. The bleed valve and gage are installed in the overboard vent line, between the reservoir air chamber and the reservoir relief valve.
- (2) The bleed valve is used to relieve the reservoir air pressure prior to disconnecting lines or components in the hydraulic system. The pressure gage provides a ready indication of the hydraulic reservoir air pressure and is used in conjunction with the bleed valve to indicate the air pressure status.
- (3) The air inflation valve is installed on the same fitting as the bleed valve and pressure gage. The air inflation valve is used to manually charge the reservoir with air or dry nitrogen.


G. Hydraulic Reservoir Vacuum Breaker Check Valve (See Figure 9.)

- (1) The hydraulic reservoir vacuum breaker check valve is installed on the regulator-aspirator mounting bracket, and connects to the tee fitting at the top of the reservoir. The valve is vented to ambient air. The purpose of this valve is to maintain atmospheric pressure in the reservoir, allowing hydraulic fluid to flow to the auxiliary hydraulic pump in the event of a failure of the reservoir pressurization system. The failure, or breakdown, of the pressurization system could cause a fluid starvation at the auxiliary hydraulic pump because of vacuum buildup in the reservoir.

H. Hydraulic Reservoir Air Chamber

- (1) The hydraulic reservoir air chamber is a small, cylindrical tank with a capacity of 700 cubic inches. It has two ports, an inlet port at the bottom of the chamber and an outlet port in one end of the chamber. The inlet port mounting boss is fitted with a drain plug. The air chamber is installed on the aft side of the rear spar in the left main gear wheel well, inboard and above the hydraulic reservoir filler assembly. Access to the air chamber is through the left main gear inboard door.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

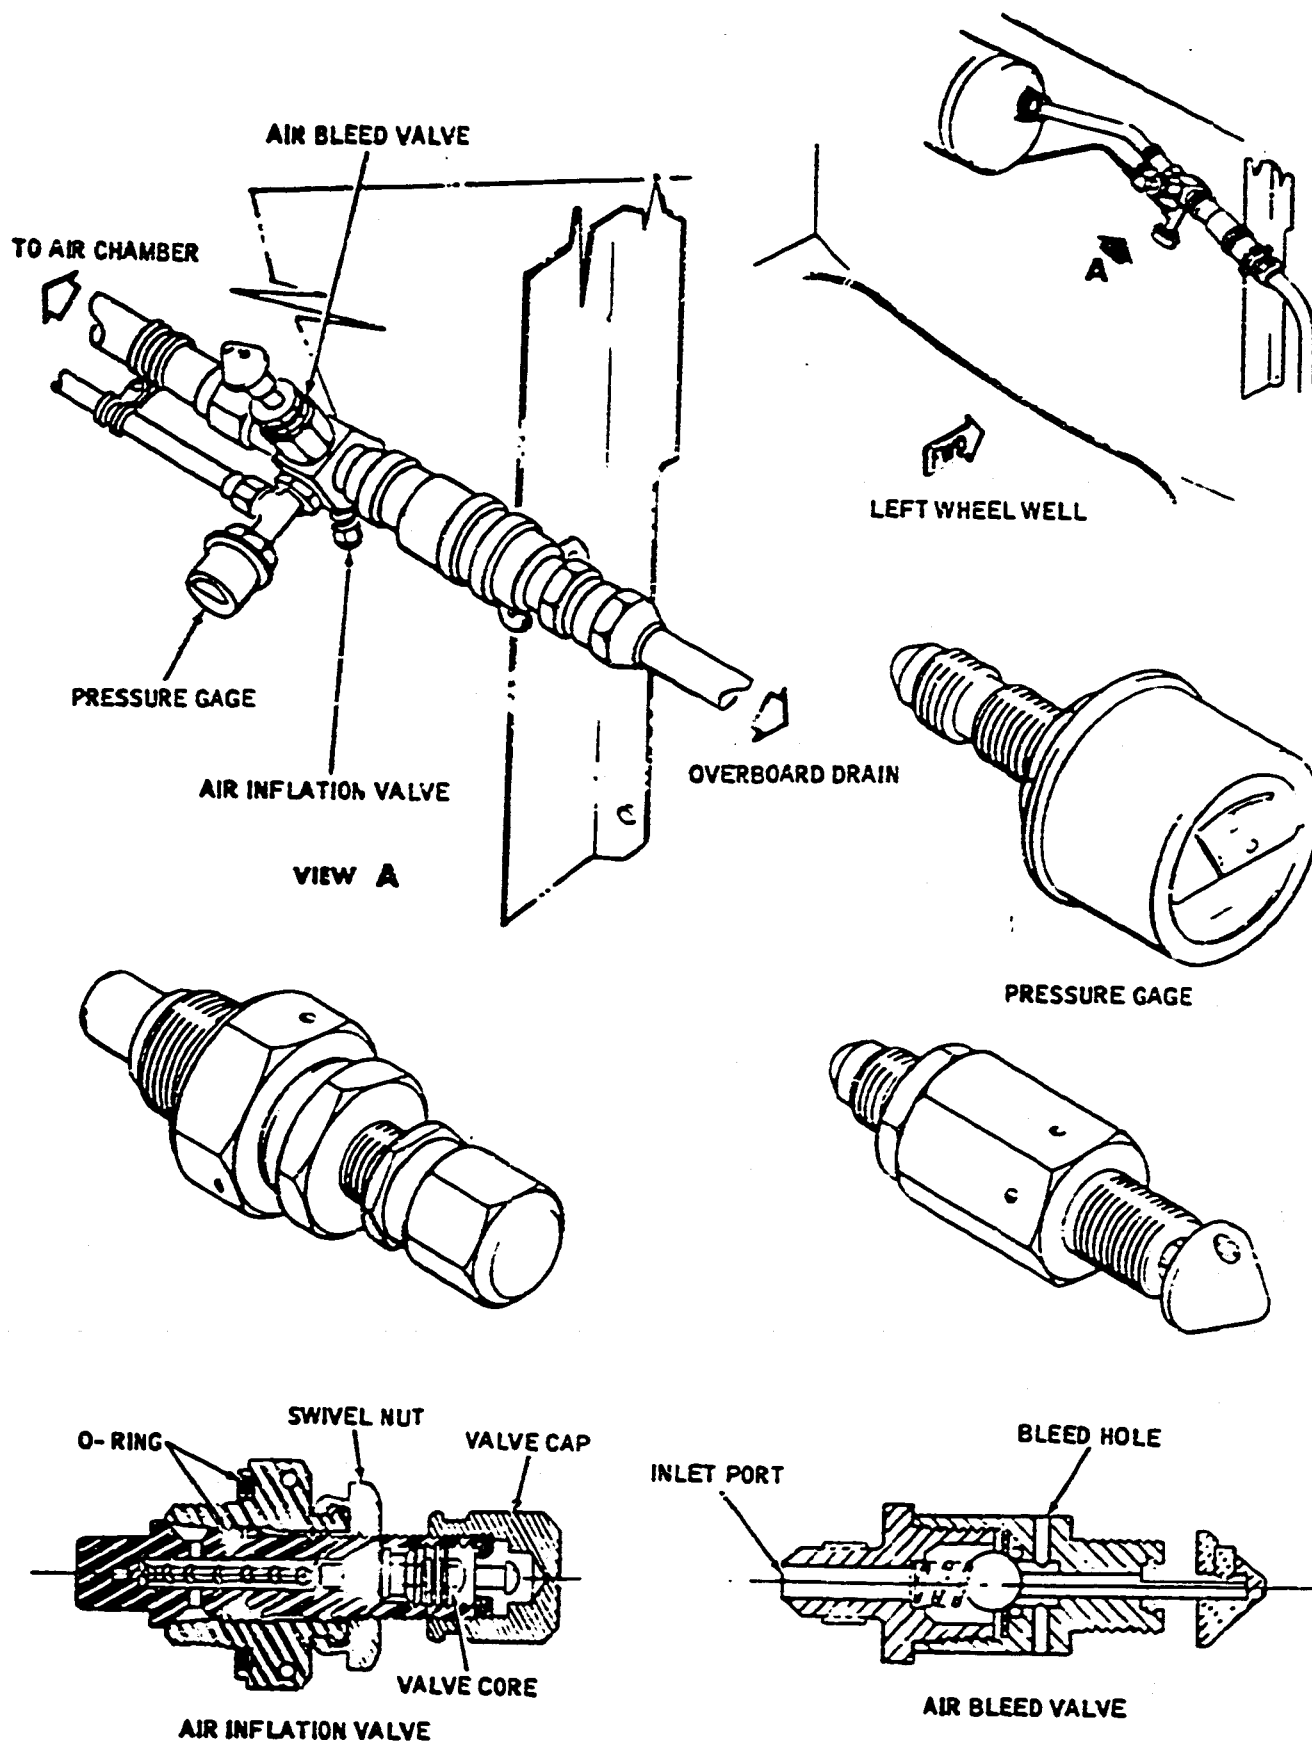

Reservoir Air Bleed Valve, Air Inflation  
 Valve, and Pressure Gage  
 Figure 8

HA2-32

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

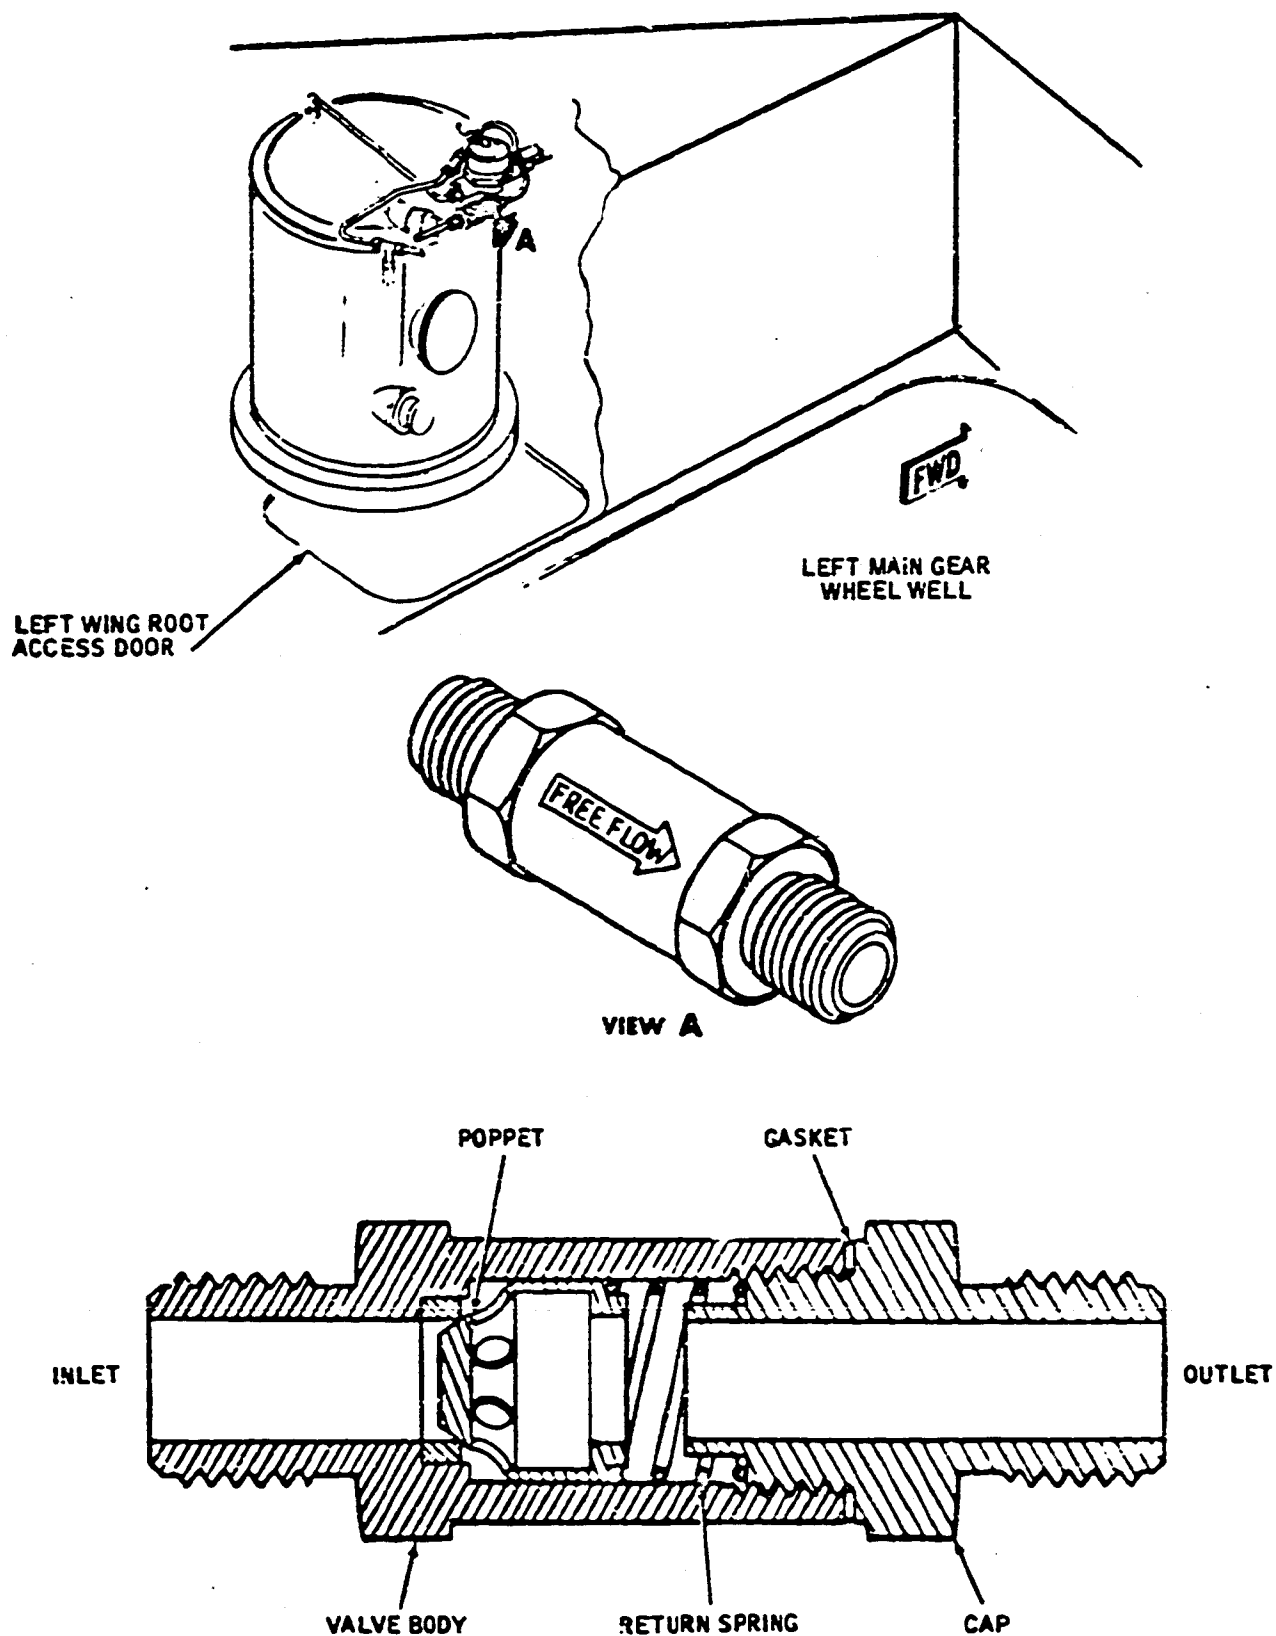

Hydraulic Reservoir Vacuum Breaker Check Valve  
Figure 9

HA2-33

29-10-0  
CODE 3  
Page 19

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The air chamber provides for greater fluid capacity in the hydraulic reservoir by providing air and foam space for the reservoir in a separate container. Air pressure in the chamber is maintained by the regulator-aspirator and the air relief valve. The air pressure in the chamber and reservoir can be relieved, when desired, by the air bleed valve located downstream of the chamber. The air chamber is mounted higher than the reservoir filler assembly, to prevent overfilling of the reservoir from reducing the available air space and to prevent fluid from being vented overboard through the reservoir relief valve.


I. Hydraulic Reservoir Port B Return Check Valve (See Figure 10.)

- (1) The reservoir port B return check valve is installed in port B of the reservoir to prevent reverse flow of hydraulic fluid from the reservoir to the return line. The check valve is located on the reservoir in the left wing root and is accessible through the left wing root access door.
- (2) Externally and internally, the port B check valve is a standard-type check valve with a 1500-psi rating. A nominal pressure of approximately 8 psi unseats the poppet, permitting fluid to flow through the valve. When the reservoir pressure exceeds the return line pressure, the poppet will seat and reverse fluid flow will be prevented.


J. Engine Hydraulic Fire Shutoff Valve (See Figures 11 and 12.)

- (1) The engine hydraulic fire shutoff valve is a gate-type, mechanically controlled valve, installed in the supply line of each engine-driven hydraulic pump. The engine hydraulic fire shutoff valve is actuated from the flight compartment to prevent the flow of hydraulic fluid into the engine section.
- (2) The engine hydraulic fire shutoff valve is mounted on a 2-piece channel bracket which is installed inside the wing leading edge, aft of the firewall of each inboard pylon. Access to the valve is through the access door located on the lower side of the wing leading edge, outboard of either the left or right inboard pylon. Each valve is located approximately 30 inches inboard of the access door.
- (3) Internally, the valve consists of a valve arm, valve arm link, cam plate, and slide blade. The valve arm link attaches to the valve arm and is allowed to swivel through an arc in relation to the valve arm. The link has a stop that will contact the arm when the two have traveled to the valve closed, full overtravel position. In the full open pretravel position, the link contacts the arm stop.
- (4) A roller attached to the end of the link rides in, and extends through, a J-shaped slot in the cam plate. The rotation of the valve arm causes the link roller to follow the cam slot, allowing the arm and link to move through independent arcs.
- (5) The slide blade (gate of the valve) is slotted near the one end and also receives the link roller extending through the cam slot. The slide blade

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

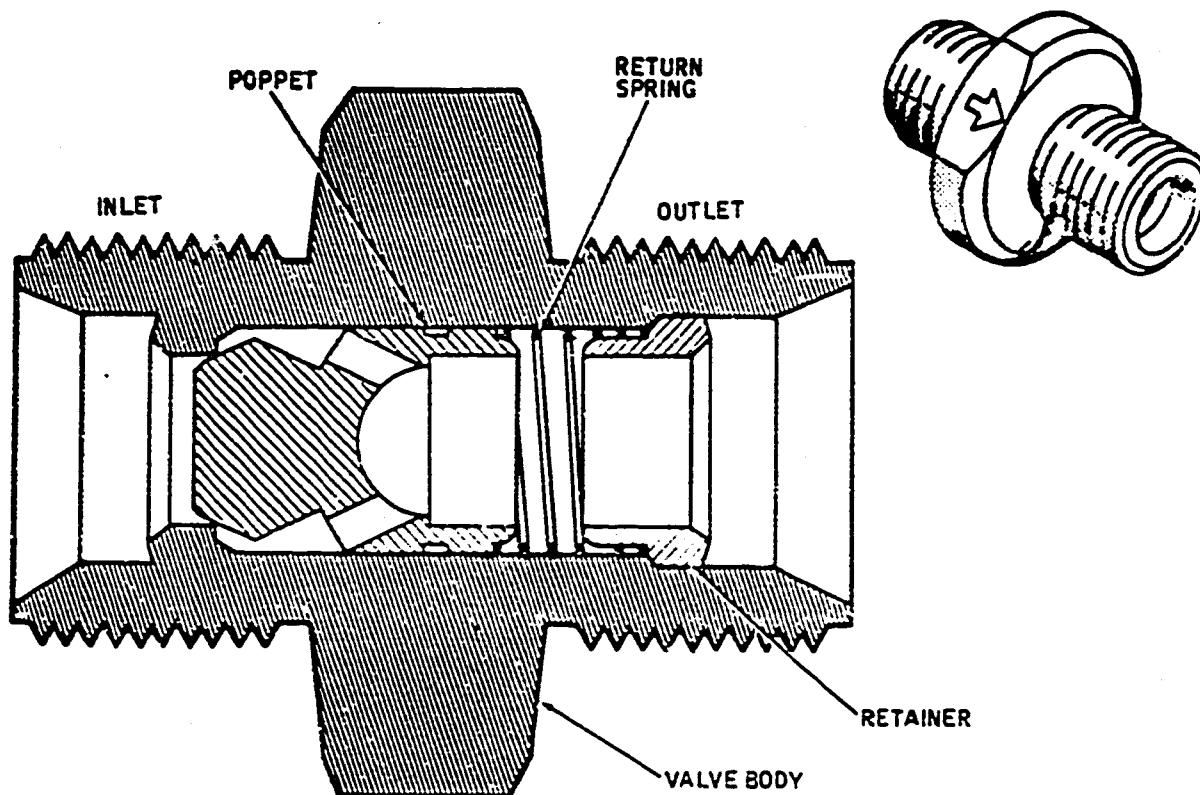

MINIATURE CHECK VALVE

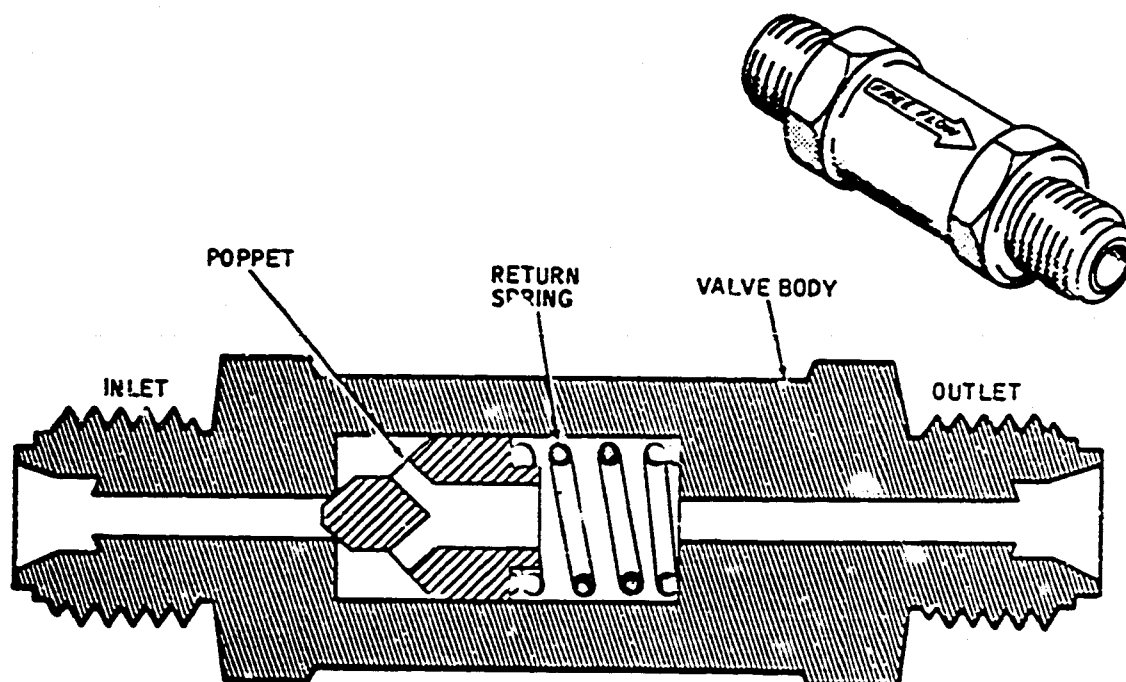

STANDARD CHECK VALVE

HA2-18A


Hydraulic Check Valves -- Typical  
Figure 10

29-10-0  
CODE 3  
Page 21

Oct 1/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

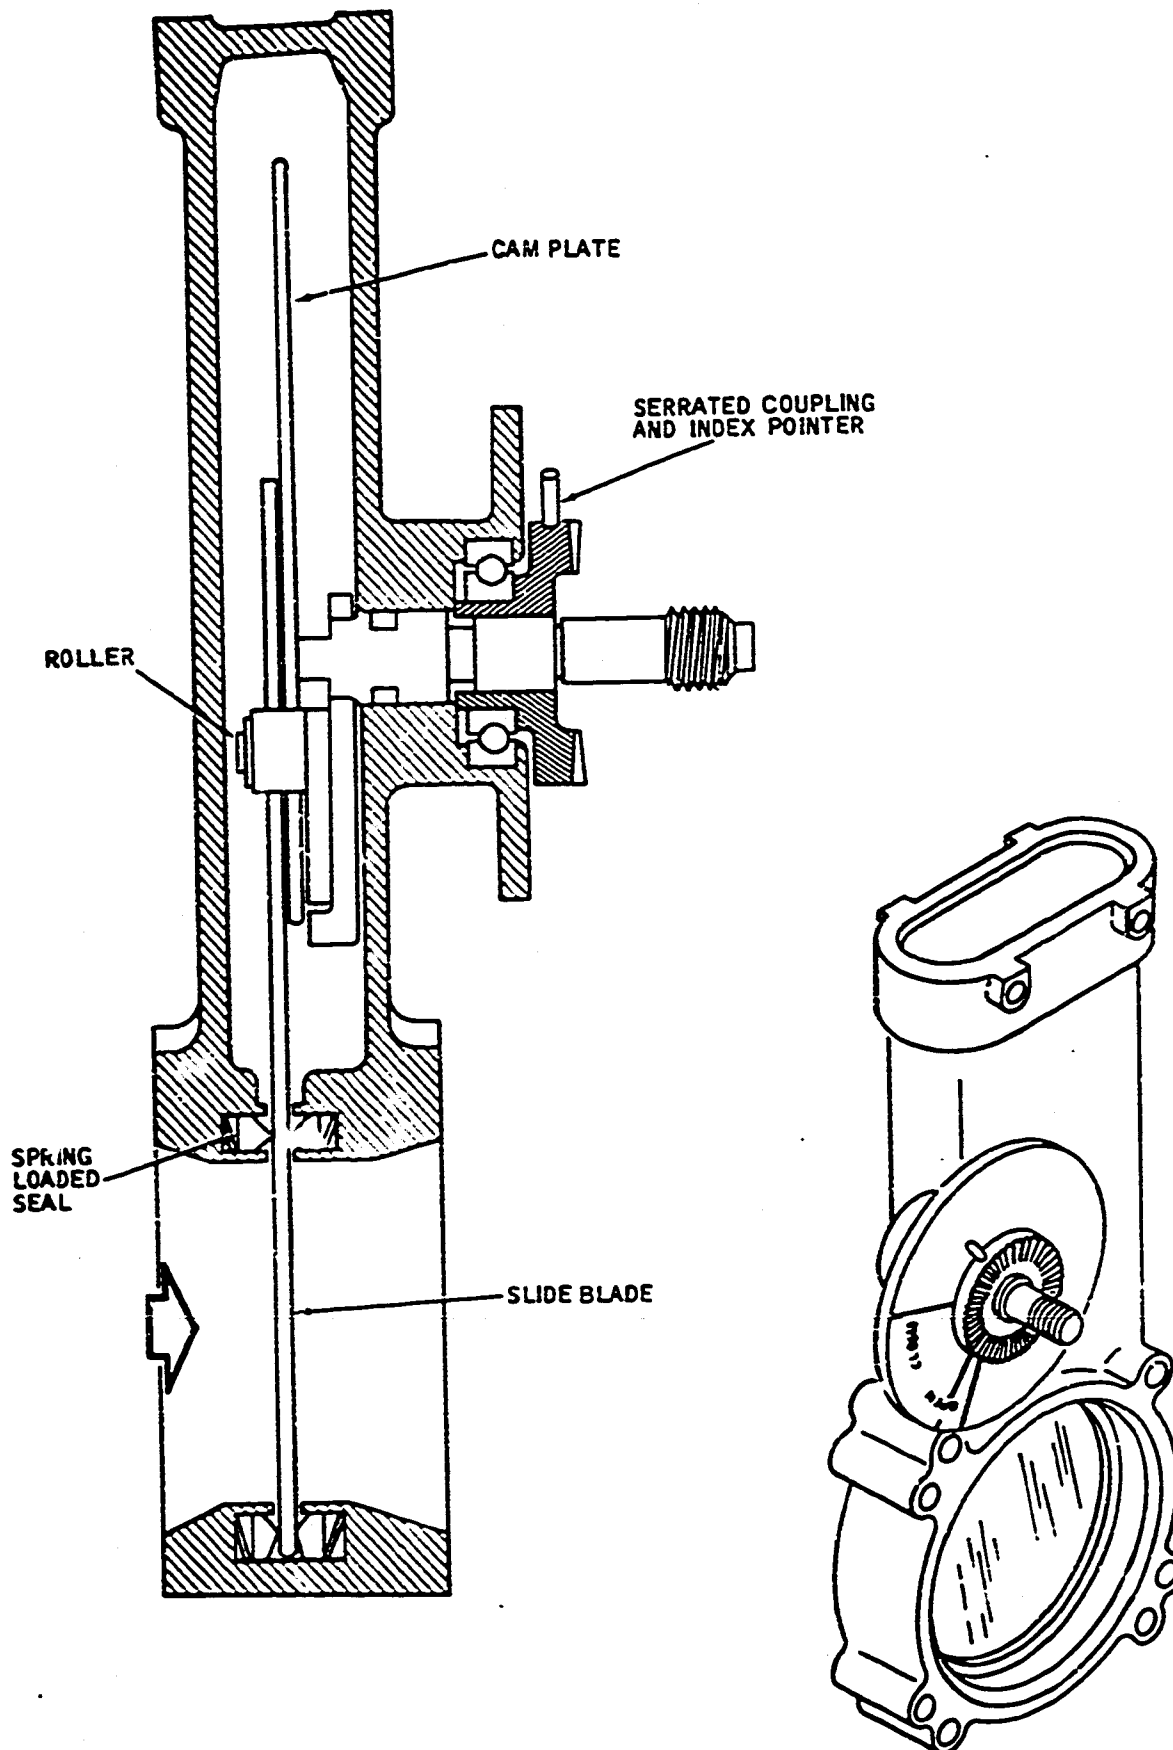


HA2-2209


Engine Hydraulic Fire Shutoff Valve -- Schematic  
Figure 11



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

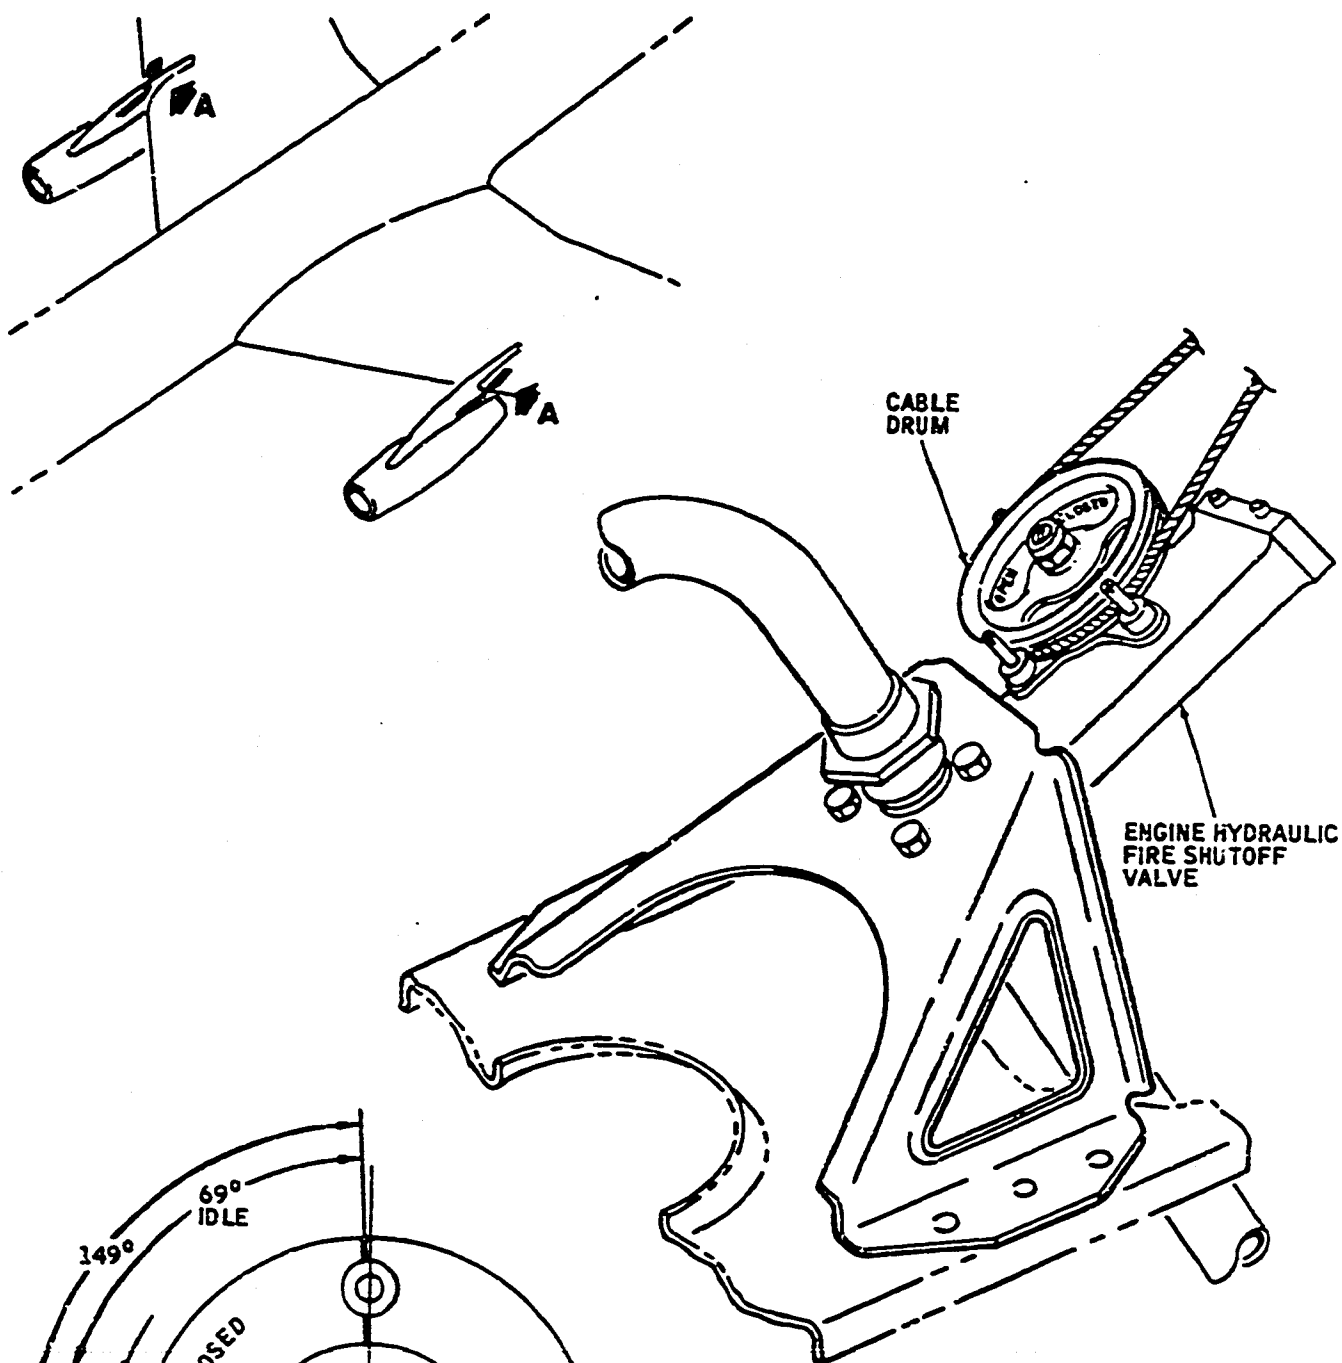

VIEW A

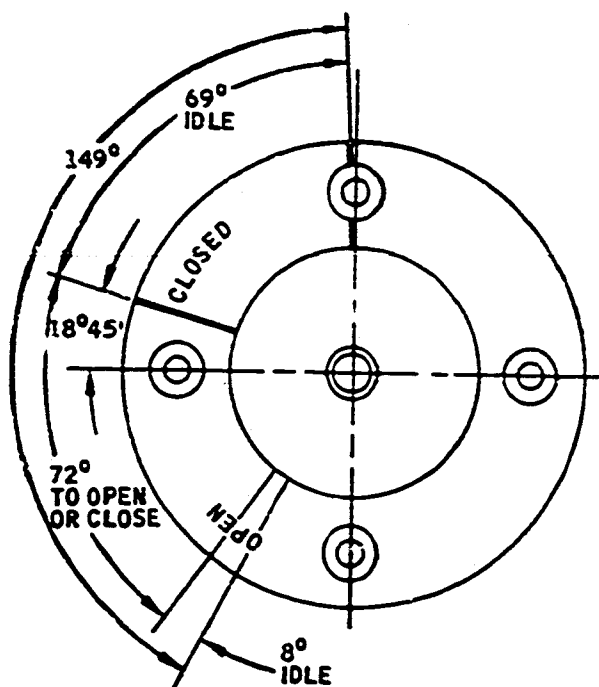

VALVE POSITION DIAGRAM

Engine Hydraulic Fire Shutoff Valve  
 Figure 12

HA2-2978

29-10-0  
 CODE 3  
 Page 23

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL





is positioned parallel to the cam plate and is guided by two grooves in the housing. This will allow the blade to open or close through porting of the valve by the action of the arm and link. The cam plate is pinned to the valve shaft, securing it rigidly in two positioning grooves in the housing. A pin-indicator is provided to relate valve position to a reference plate placarded open and closed.

- (6) The engine hydraulic fire shutoff valves are cable actuated by the fire control handles, located on the overhead switch panel in the flight compartment. When the fire control handle for either inboard engine is moved, the cable system rotates the drum which is attached to the corresponding shutoff valve shaft. This action extends the valve blade into the fluid passage to block the flow of fluid. The valve operates from open to close by clockwise rotation of the cable drum. The valve gate will idle during the first 8 degrees of rotation of the cable drum, and then will close in the next 72 degrees. The cable drum will continue to rotate the shaft for an additional 69 degrees after the gate valve is closed, locking it overcenter. Total travel of the cable drum is 149 degrees.

K. Engine-Driven Hydraulic Pump (See Figure 13.)

- (1) A variable-displacement, pressure-compensated, engine-driven hydraulic pump is installed on each inboard engine. The pump incorporates a solenoid bypass feature for reducing the output of the pump. The bypass valves are controlled by two engine hydraulic pump control switches in the flight compartment. The switch for the hydraulic pump on engine No. 2 is placarded left, on and bypass. The switch for the hydraulic pump on engine No. 3 is placarded right, on and bypass. When either of the two engine hydraulic pump control switches is placed in the bypass position, the bypass valve solenoid for that hydraulic pump is energized and the pump pressure decreases to 300 (+100) psi. When either switch is in the on position, the control circuit to the corresponding bypass valve is open and the hydraulic pump operates normally in the pressure range of 2850 to 3050 psi. The pump provides a continuous, non-pulsating flow of hydraulic fluid, under pressure, to the hydraulic manifolds for distribution throughout the hydraulic system. Each of the engine-driven pumps is located on the accessory drive pad of the inboard engines. These pumps are accessible through the access doors on the right side of the nacelles and removal of the engine bypass duct.
- (2) Three case drain ports are provided: two are on the yoke assembly housing, and the third is on the casing for the pressure control valve, adjacent to the inlet port fitting. The case drain port on top of the yoke assembly housing is used as the case drain connection to assure that the pump housing is full of fluid at all times. This drain connection is ported back to the low-pressure return port of the reservoir. The inlet port fitting is on top of the pump housing and the outlet port fitting is opposite to it on the bottom of the housing. On airplane 77, outlet port fitting contains a low-pressure indicating light switch.
- (3) The yoke control piston casing is an integral part of the pump case. Four self-locking nuts are used to hold the piston casing end-plate in

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

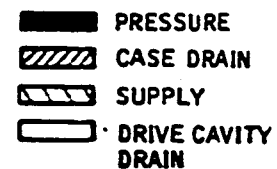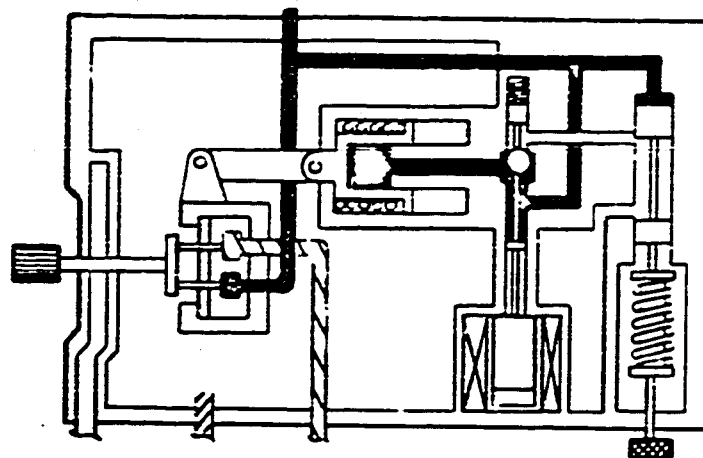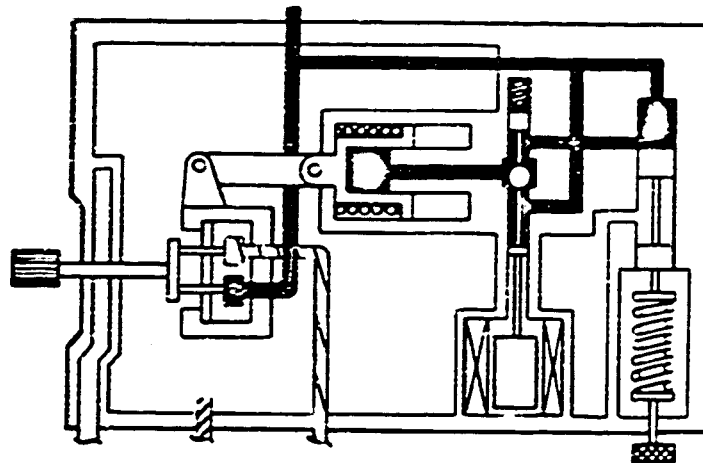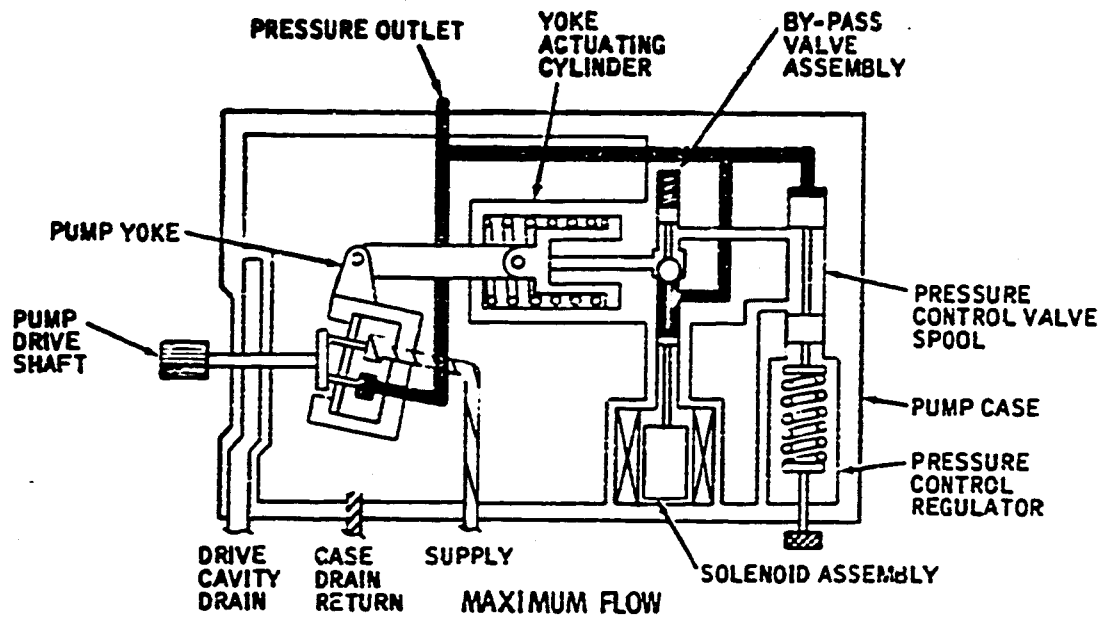

HA2-837

Engine-Driven Hydraulic Pump Pressure  
 Flow -- Schematic  
 Figure 13

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 3  
 Page 25

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

position. The bypass valve assembly, consisting of the valve body and a solenoid, is mounted externally on the pump case, under the yoke control piston casing. This solenoid valve is provided with an electrical connector. A pressure control regulator is installed on the bypass valve body by means of four bolts. This regulator is cylindrical and is provided with an external adjustment screw. A lock screw is used to retain the adjusting screw after the adjustment has been made.

- (4) Hydraulic fluid enters the pump through an inlet port. Passages in the yoke carry the fluid to the valve plate, which ports the fluid to the cylinder block. The nine pistons in the cylinder block are actuated by the rotating driven shaft, thereby pressurizing the fluid. From the cylinder block, the fluid is routed to the outlet port of the yoke and then to the pump pressure lines. The pressure control regulator is actuated by pump output pressure that is bled to the regulator. The regulator meters the pressure to the yoke control piston, which positions the yoke.
- (5) The maximum pump pressure is determined by the adjustment of the pressure control regulator. The pressure control regulator allows maximum output flow (22.5 gpm at 3500 rpm) up to 2850 psi system pressure. When this pressure is reached, the yoke assembly starts to move towards the zero flow position.
- (6) Pressure continues to rise until the displacement is reduced from maximum flow to zero flow and 3000 psi is reached. If the engine-driven hydraulic pump control switches are in the on position and the output pressure of either pump drops below 2000 psi on airplanes 55 through 58 and 1500 psi on 59 and subsequent, an amber light located in the flight compartment comes on.


**L. Engine-Driven Hydraulic Pump Check Valves (See Figure 10.)**

- (1) Two check valves, rated at 3000 psi, are installed in the lines from each engine-driven hydraulic pump. One check valve is installed in the pressure line and the other is in the case drain line. The check valves in the pump pressure lines prevent reverse flow of hydraulic fluid through the pump, when the pump is inoperative or when external hydraulic pressure is supplied to the system. Access to the valves can be gained through an access door in the forward right apron of each inboard pylon. The valves are mounted on the exterior wall of the inlet box by means of the bulkhead fittings and retaining nuts.
- (2) Normal operating pressure will unseat the poppet, and fluid will flow through the valve. When pressure downstream of the valve exceeds pressure from the pump, the pressure, with the aid of the return spring, will seat the poppet. This prevents reverse flow of hydraulic fluid through the pumps.


**M. Engine-Driven Hydraulic Pump Case Drain Filter (See Figure 14.)**

- (1) A line-type, micronic filter, for use in a low-pressure hydraulic system, is installed in the engine-driven hydraulic pump case drain return line


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

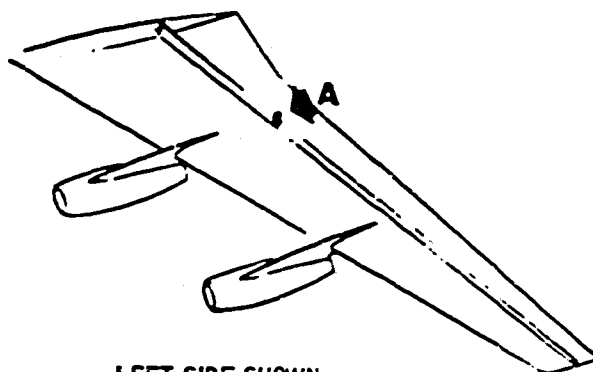

LEFT SIDE SHOWN  
RIGHT SIDE OPPOSITE

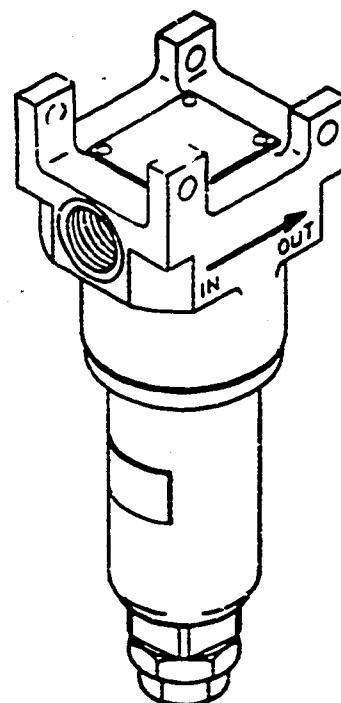

VIEW A

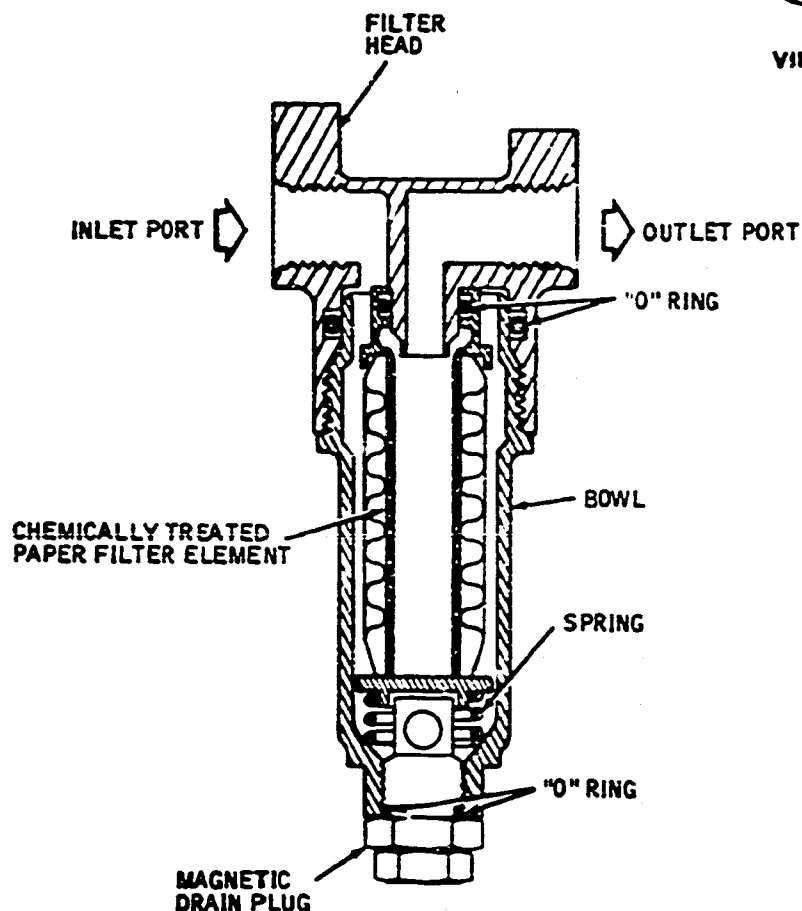

Engine Driven Hydraulic Pump Case Drain  
Filter -- Cutaway View  
Figure 14

HA2-31

29-10-0  
CODE 3  
Page 27

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


between the pump flow check valve and the hydraulic system reservoir. The case drain filter is installed on the aft surface of the rear spar opposite the leading edge of the inboard flap assembly. One filter is used for each engine-driven pump. Access is gained to the filter by lowering the flaps. A second check valve is installed adjacent to the filter in the downstream side of the case drain return line.

- (2) Externally, the filter is approximately 5 inches high and 2 inches wide, with ports marked inlet and outlet. The bowl is cylindrical in shape, with hex-shaped wrench flats at the lower end. A self-sealing, magnetic drain plug is installed in the bottom end of the filter bowl. The filter element is made of chemically treated paper.

N. Dual Filter and Relief Valve (See Figure 15.)

- (1) The hydraulic power system dual filter and relief valve consists of two filters and two relief valves installed in the same body. The unit filters the hydraulic fluid from the two engine-driven hydraulic pumps, and the pressure relief valves assure that excessive pressures do not build up in the pressure line from the pumps. The unit is located in the left main gear wheel well on the lower portion of the rear spar, approximately 1 foot outboard of the centerline shear web.
- (2) The unit consists of a casting with a flange-mounted pressure inlet port on each end. Two pressure outlets are located on the top of the casting. One outlet, centrally located, is the main pressure outlet to the system selector valve. The other, located to the left of the selector valve port, is the pressure outlet to the air pressure regulator-aspirator. The return outlet port for the relief valve portion of the unit is located on the center of the aft face of the body, canted upward. The nose gear return line is connected to a check valve installed in a return line port, located between the two filter bowls.
- (3) The pressure relief valves are located behind the pressure inlet ports and are connected to the return outlet port of the unit. The inlet from the nose gear return line is routed through the casting to the return outlet port.
- (4) If either of the filter elements becomes clogged, pressure above 3300 psi at the inlet port will unseat the poppet. Pressure above 3500 psi will allow full flow of 22.5 gpm to flow to the return port of the unit and back to the reservoir. The relief valves will reseal at approximately 3000 psi.
- (5) A check valve is installed in the system selector valve port to prevent reverse flow of pressure through the filter during auxiliary hydraulic pump operation.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

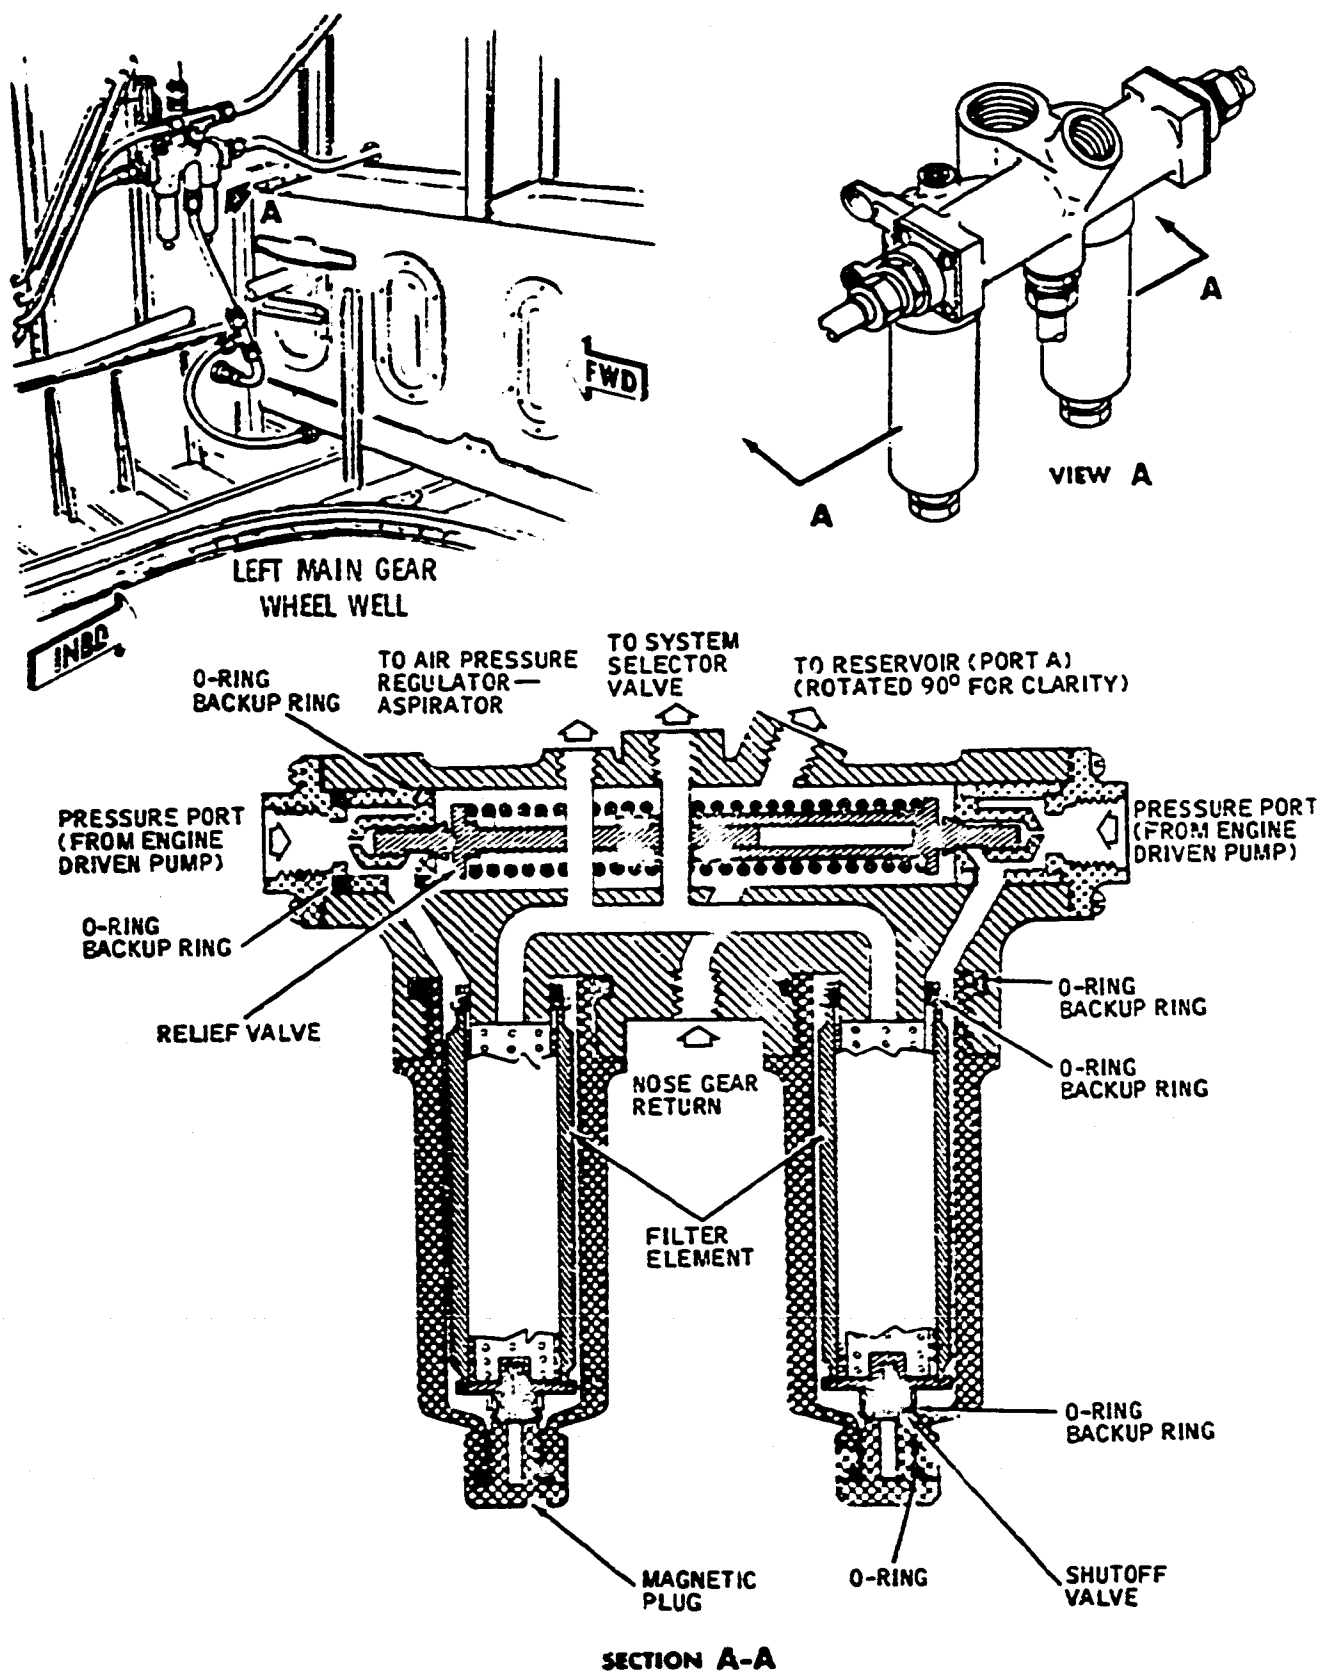

Dual-Filter and Relief Valve -- Cutaway Valve  
 Figure 15

Jun 15/67

Printed in U.S.A.

HA2-20  
 29-10-0  
 CODE 3  
 Page 29

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

O. System Selector Valve (See Figures 16 and 17.)


- (1) The system selector valve is a 3-position valve which permits directional control of fluid under pressure. The valve is installed on the left hydraulic power manifold and is accessible through the left main gear inboard door.
- (2) The selector valve pressure-to-system port and the return port are directly ported to the manifold. The engine pump pressure enters the valve through a port on the large end of the valve, and the auxiliary pump inlet and alternate ports are located at the top, toward the aft end of the valve. The valve control crank is attached to a push-pull rod and a cable sector.
- (3) Operation of the system selector valve is controlled by a lever located on the right side of the system engineer's control pedestal. When the control lever is moved to the selected position, the cable system, through the sector and crank, operates the valve positioning lever to drive the slide spool assembly to the selected position. When the control lever is placed in the general system (normal) position, the selector valve is actuated, causing hydraulic fluid to enter the valve through the system pressure port. The fluid is then directed into the manifold through the pressure-to-system port. In the general system (normal) position, fluid from the auxiliary pressure port is also routed to the pressure-to-system port. In the bypass/general system position, the selector valve ports engine pump pressure into the manifold through the return port. In this position, the auxiliary pump pressure is ported to the general system. In the general system/main gear down and flaps position, pump pressure is routed through the alternate port, at the top of the valve, for alternate operation of the flaps and the landing gear downlock cylinders. Internal leakage provides lubrication for the moving parts of the valve.

P. Left Hydraulic Power Manifold (See Figure 18.)

- (1) The left hydraulic power manifold distributes fluid pressure from the hydraulic pump (any one of the three pumps), through control valves to the various airplane hydraulic subsystems. The left power manifold is located overhead in the left wheel well. Access to the left manifold is through the left main gear inboard door.
- (2) One valve-mounting pad is provided on the top of the manifold for the system selector valve. Four ports are provided on the manifold for connection of hydraulic pressure and return lines. Three of these ports are pressure outlet ports; one, located on the aft face of the manifold and one located on the bottom of the manifold port fluid to the flight controls. The third pressure outlet port, located on the bottom of the manifold, ports fluid directly to the priority valve, which in turn, ports fluid to the nose gear and to the right power manifold. The fourth, a return port, located immediately forward of the pressure line port on the bottom of the manifold, is connected by a line to a return port of the reservoir.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

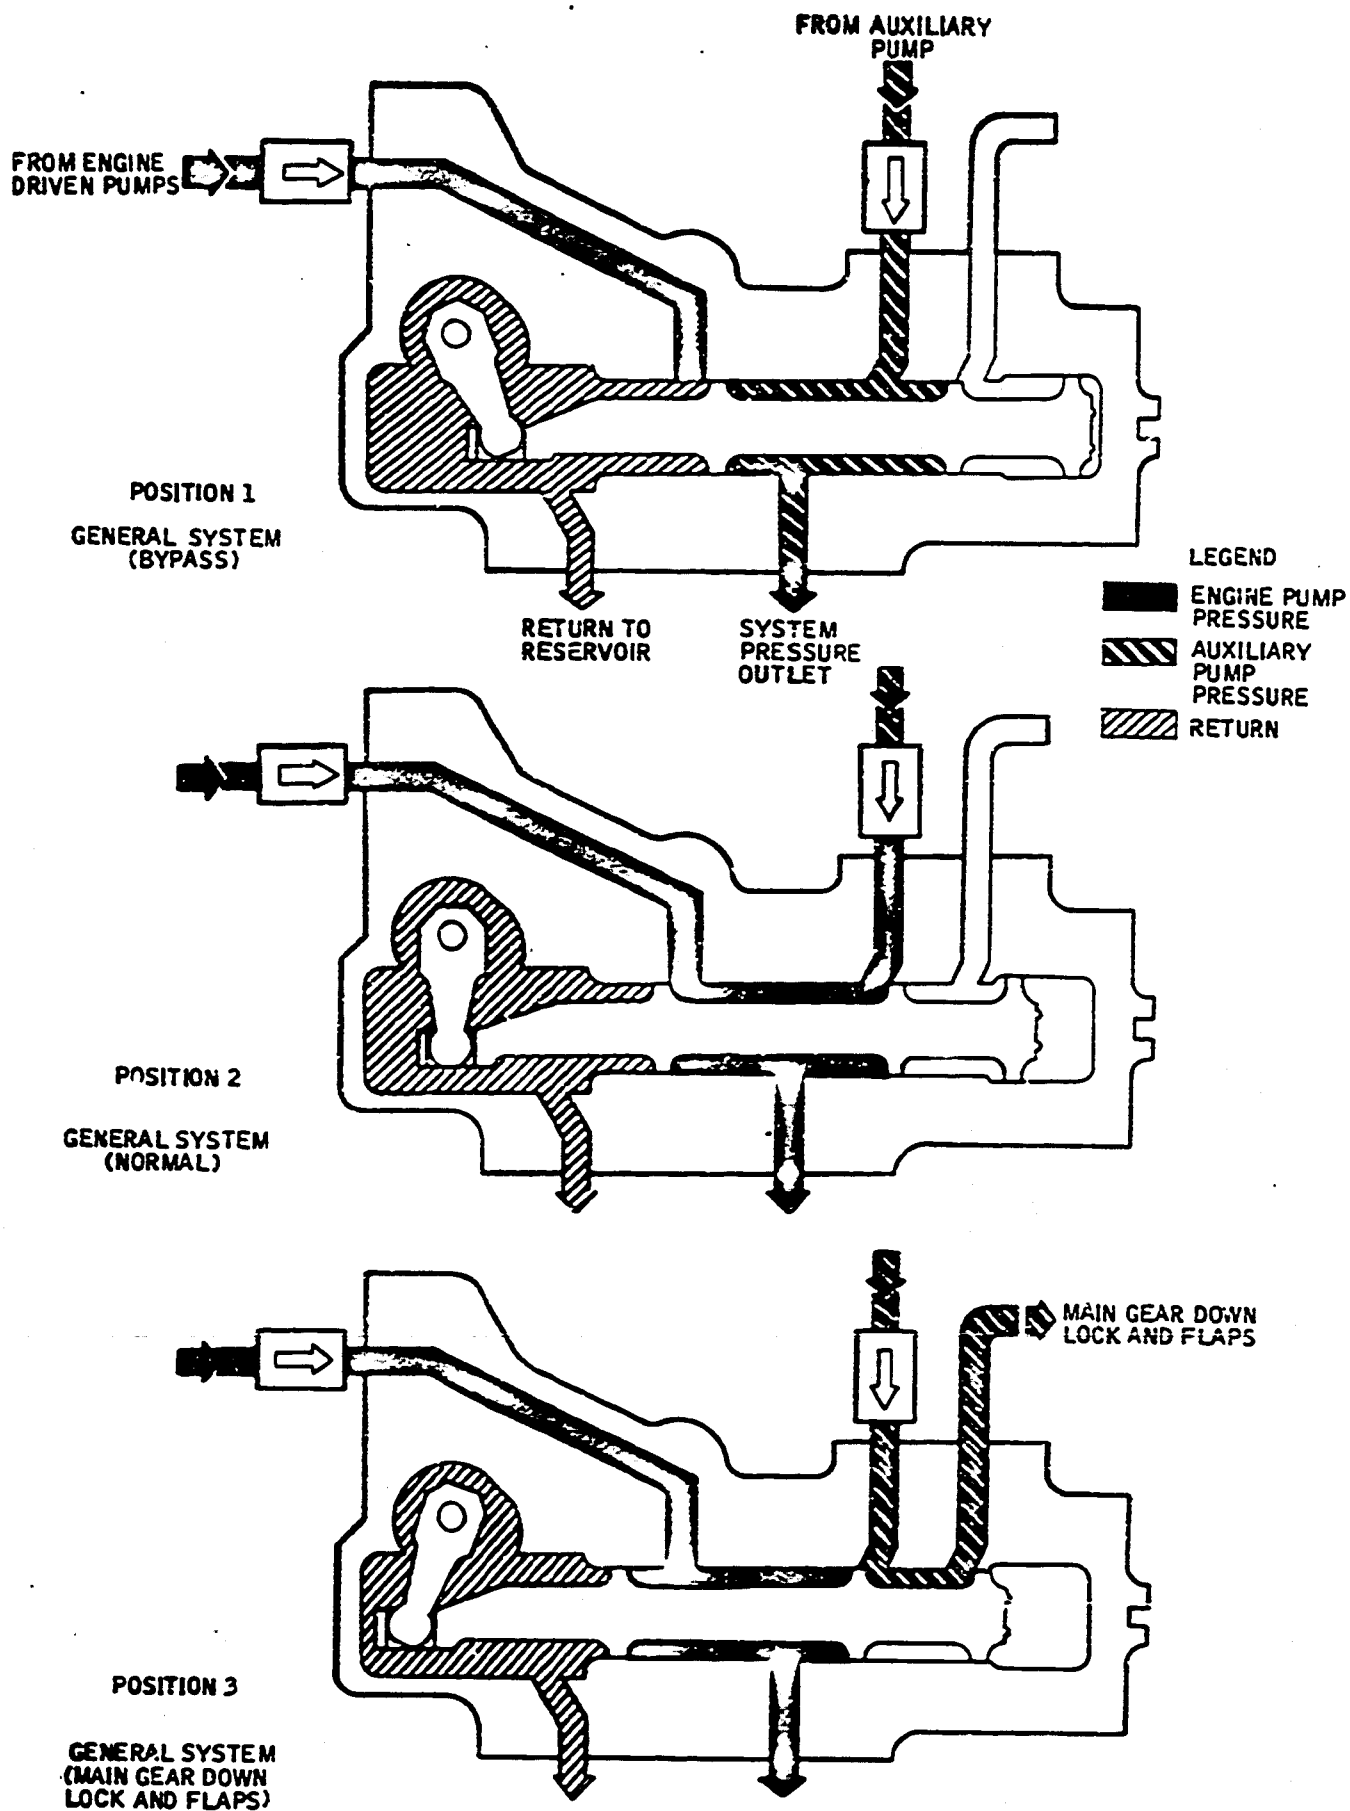

System Selector Valve -- Schematic  
 Figure 16


HA2-26

29-10-0  
 CODE 3  
 Page 31

Jun 15/67



Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

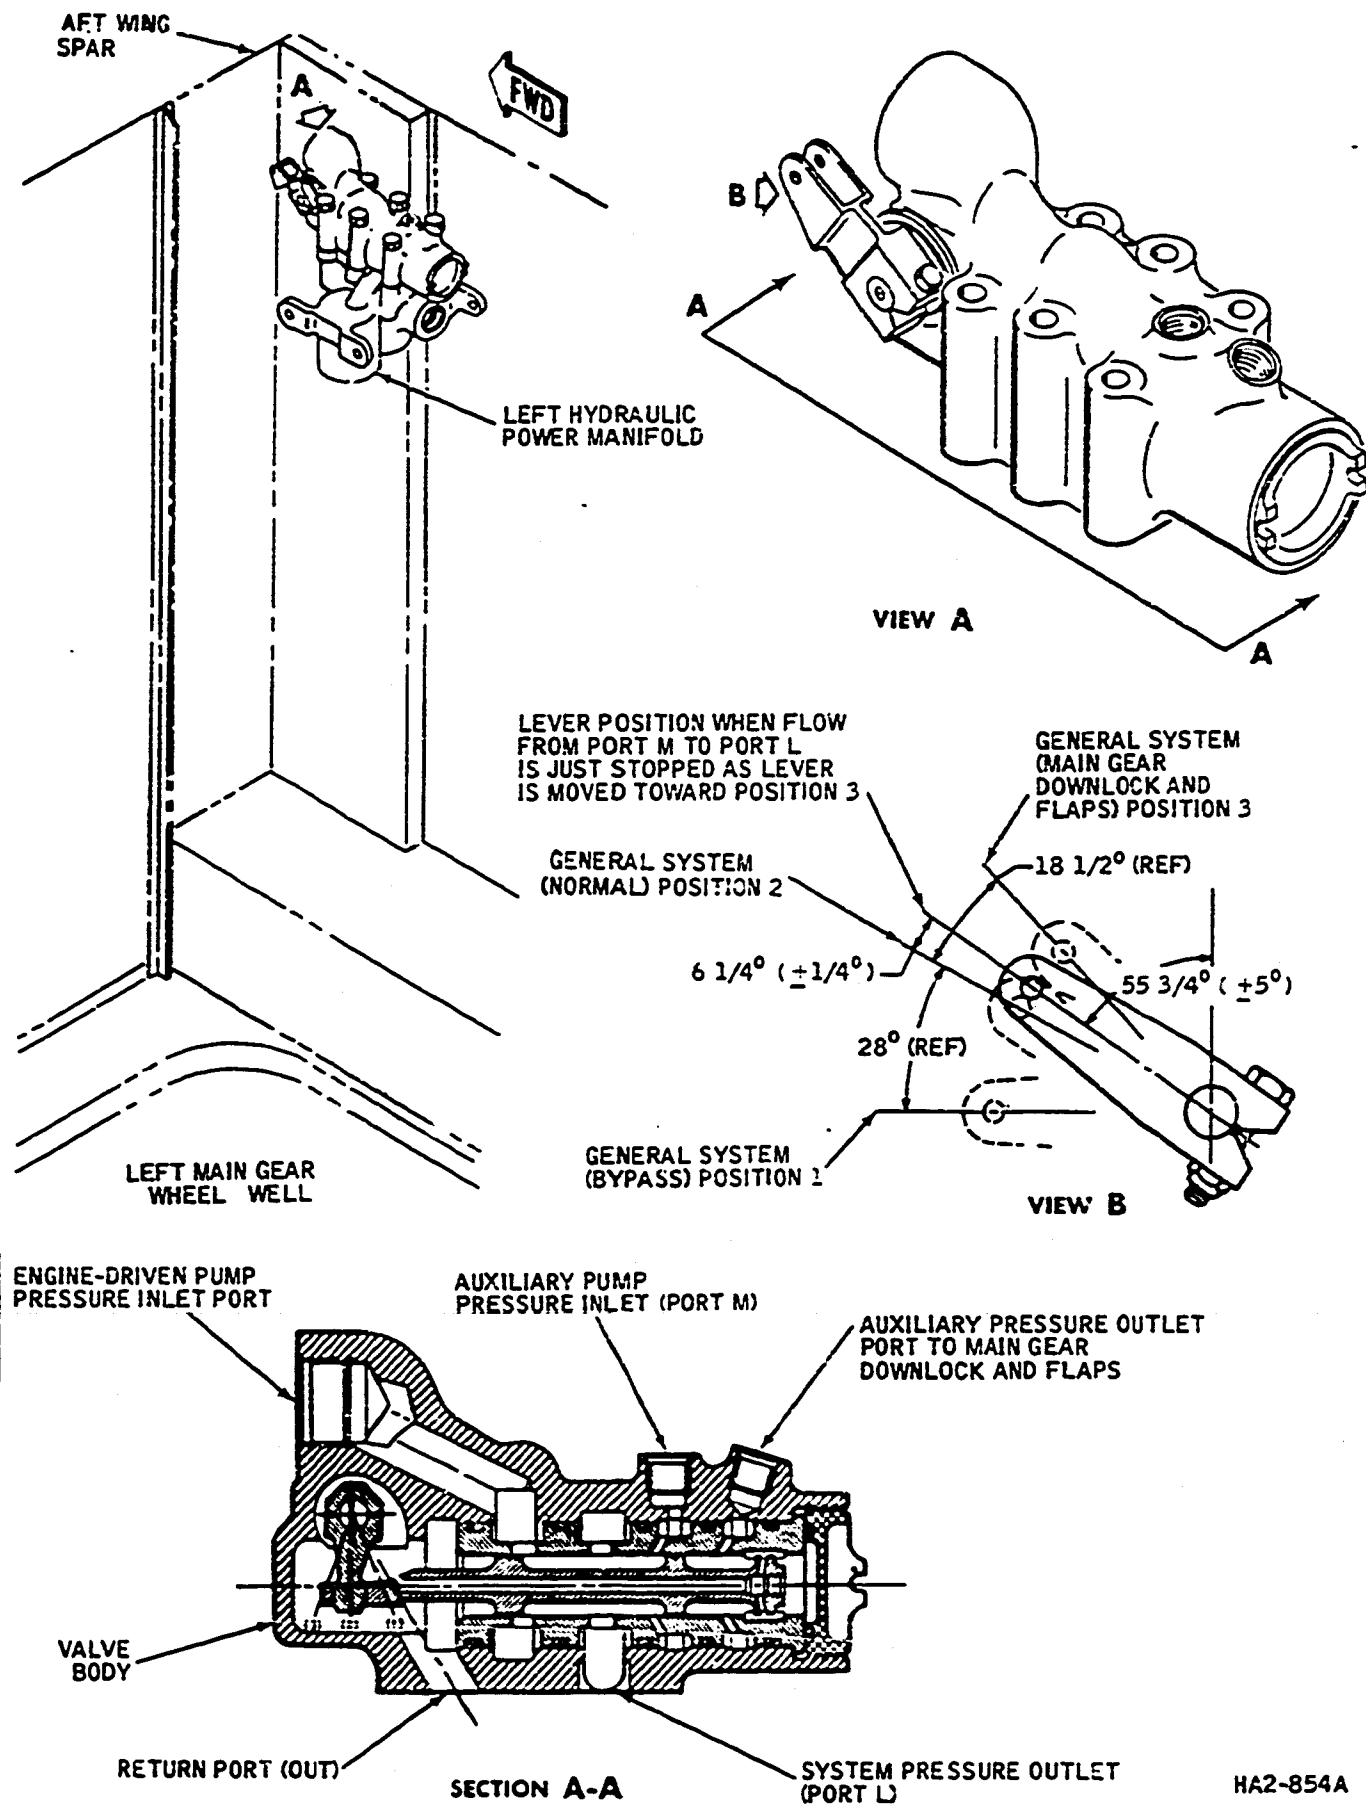

System Selector Valve -- Cutaway View  
 Figure 17

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

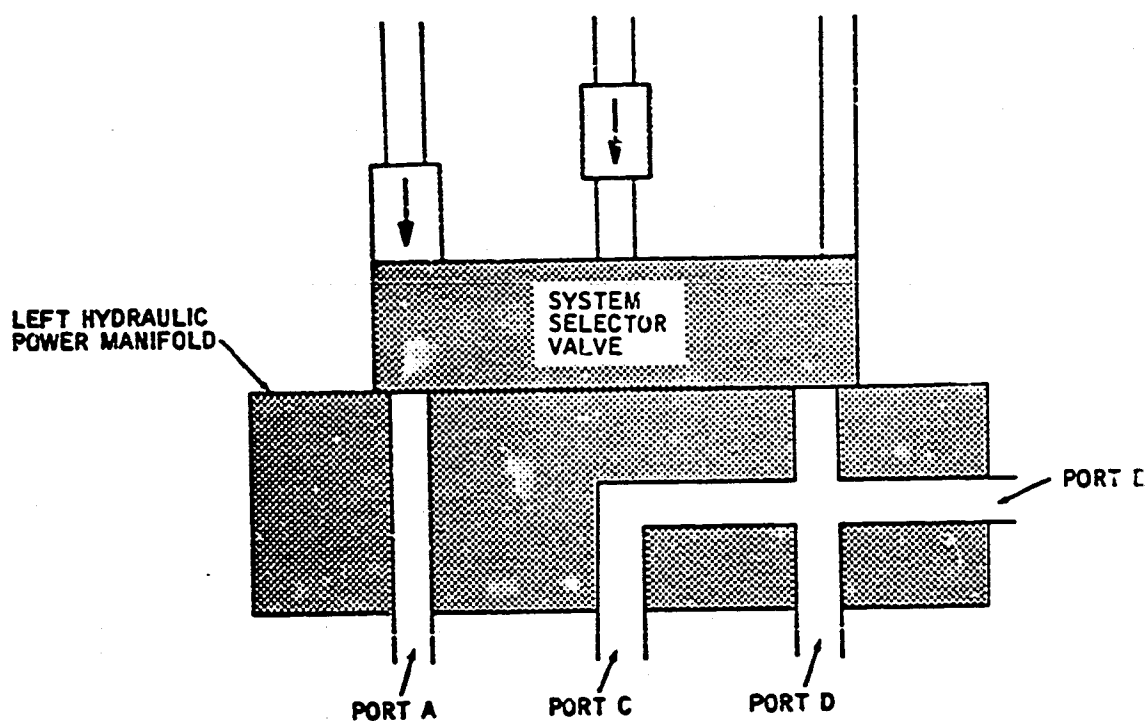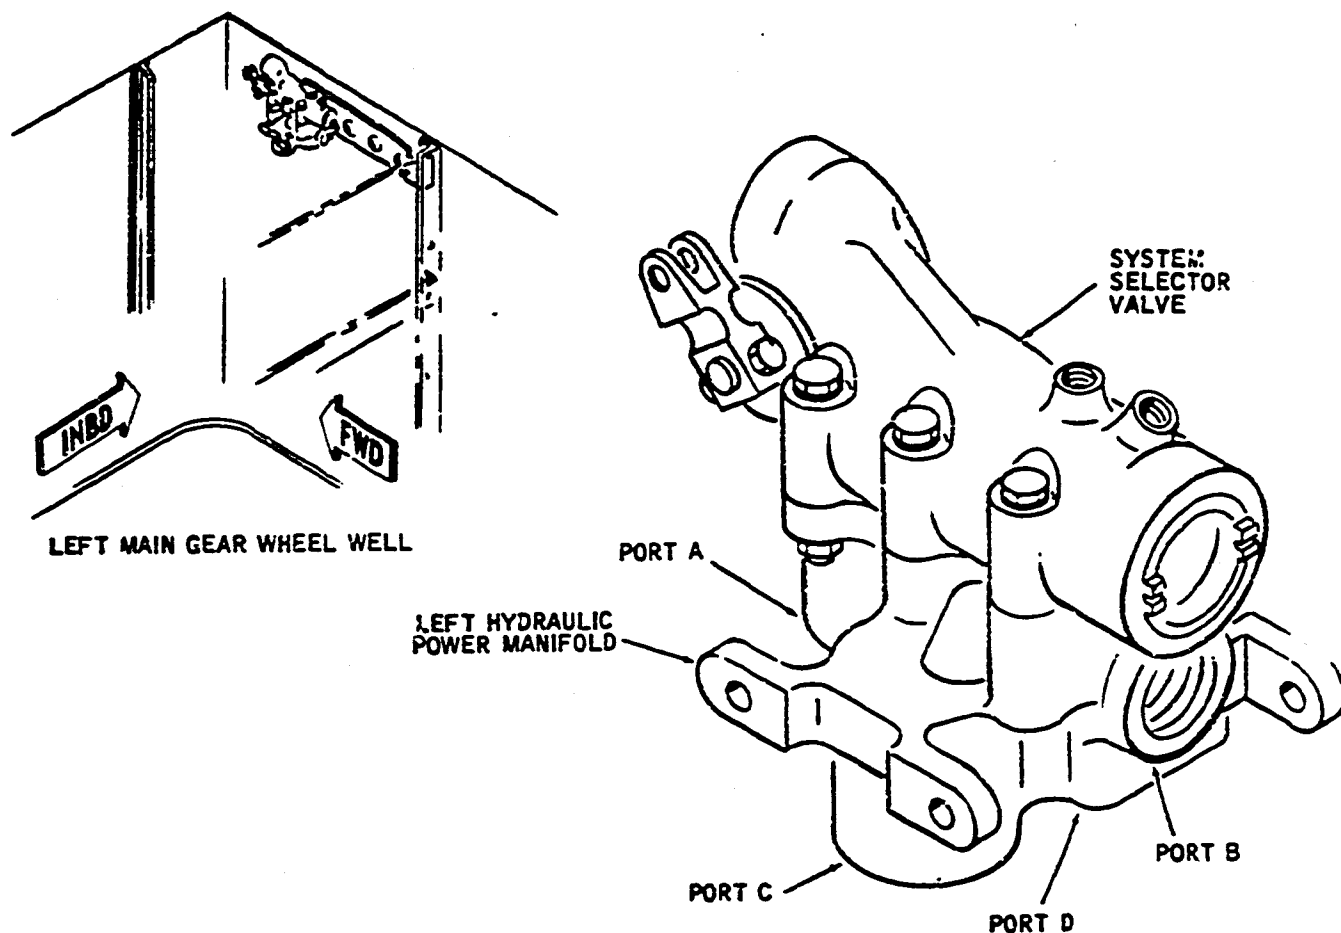

Left Hydraulic Power Manifold -- Schematic  
 Figure 18

HA2-855

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 3  
 Page 33

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Q. Right Hydraulic Power Manifold (See Figure 19.)


- (1) The right hydraulic power manifold distributes fluid pressure from the hydraulic pumps (engine-driven or auxiliary, or any combination of these three pumps), through the control valves to the various hydraulic subsystems. The right hydraulic power manifold is located overhead in the right wheel well. The manifold is held in place with braces and is accessible through the right main gear inboard door.
- (2) The manifold contains passages for pressure and return fluid distribution, four check valves, ports for pressure and return lines, and mounting pads for the various control valves.
- (3) The right manifold receives fluid pressure from the left manifold. Pressure is ported through check valves to the wing flap control valve, to the slot control valve, to the main gear control valve, to the brake control valve, to the brake pressure transmitter, and to the brake accumulators.
- (4) Auxiliary hydraulic pressure is ported from the alternate port of the system selector control valve into port K in the right manifold. Port K is located inboard of the spoiler control valve. From port K, auxiliary hydraulic pressure is ported through a check valve to the downstream side of the wing flap control valve check valve and into the wing flap control valve for alternate operation of the wing flaps.
- (5) The return passage from the wing flap control valve ports fluid to return port A. The brake control valve return passage ports fluid into return line B through a two-way restrictor. The main gear control valve downline return fluid uses a separate port in the valve, bypasses the manifold, and returns the fluid directly to A return line to the reservoir. The upline in the main gear control valve uses the same return port, return port B, in the manifold as the brake control valve.

R. Deleted.

S. Hydraulic Power System Accumulator (See Figure 20.)

- (1) The hydraulic power system accumulator is a spherical, welded-steel, fluid and air bladder-separated container. The accumulator is installed in the pressure line of the hydraulic power system to provide a reserve supply of fluid under pneumatic pressure and to act as a shock absorber for system pressure surges.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

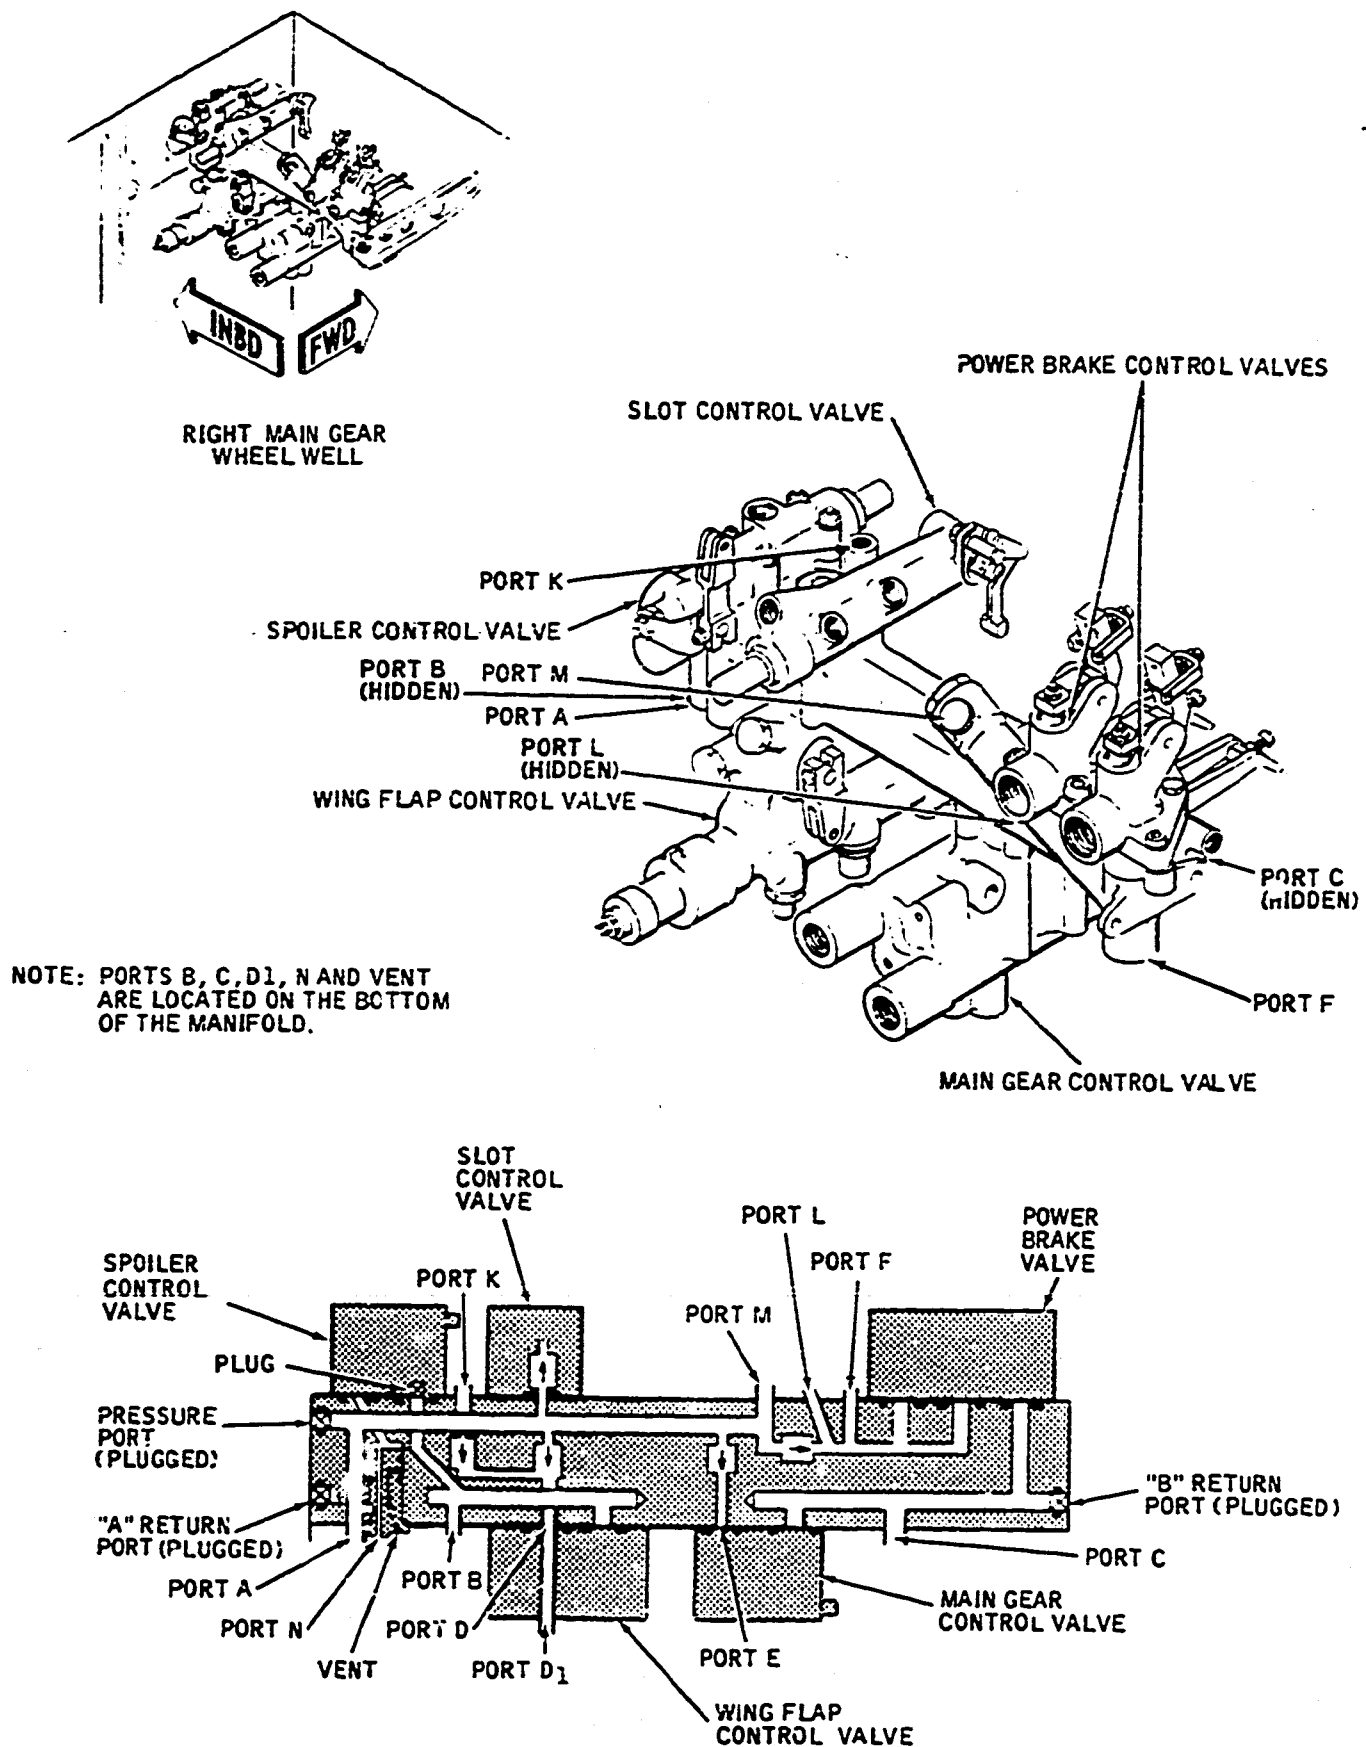

HA2-29A


Right Hydraulic Power Manifold -- Schematic  
 Figure 19

Nov 1/69

Printed in U.S.A.

29-10-0  
 CODE 3  
 Page 35

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

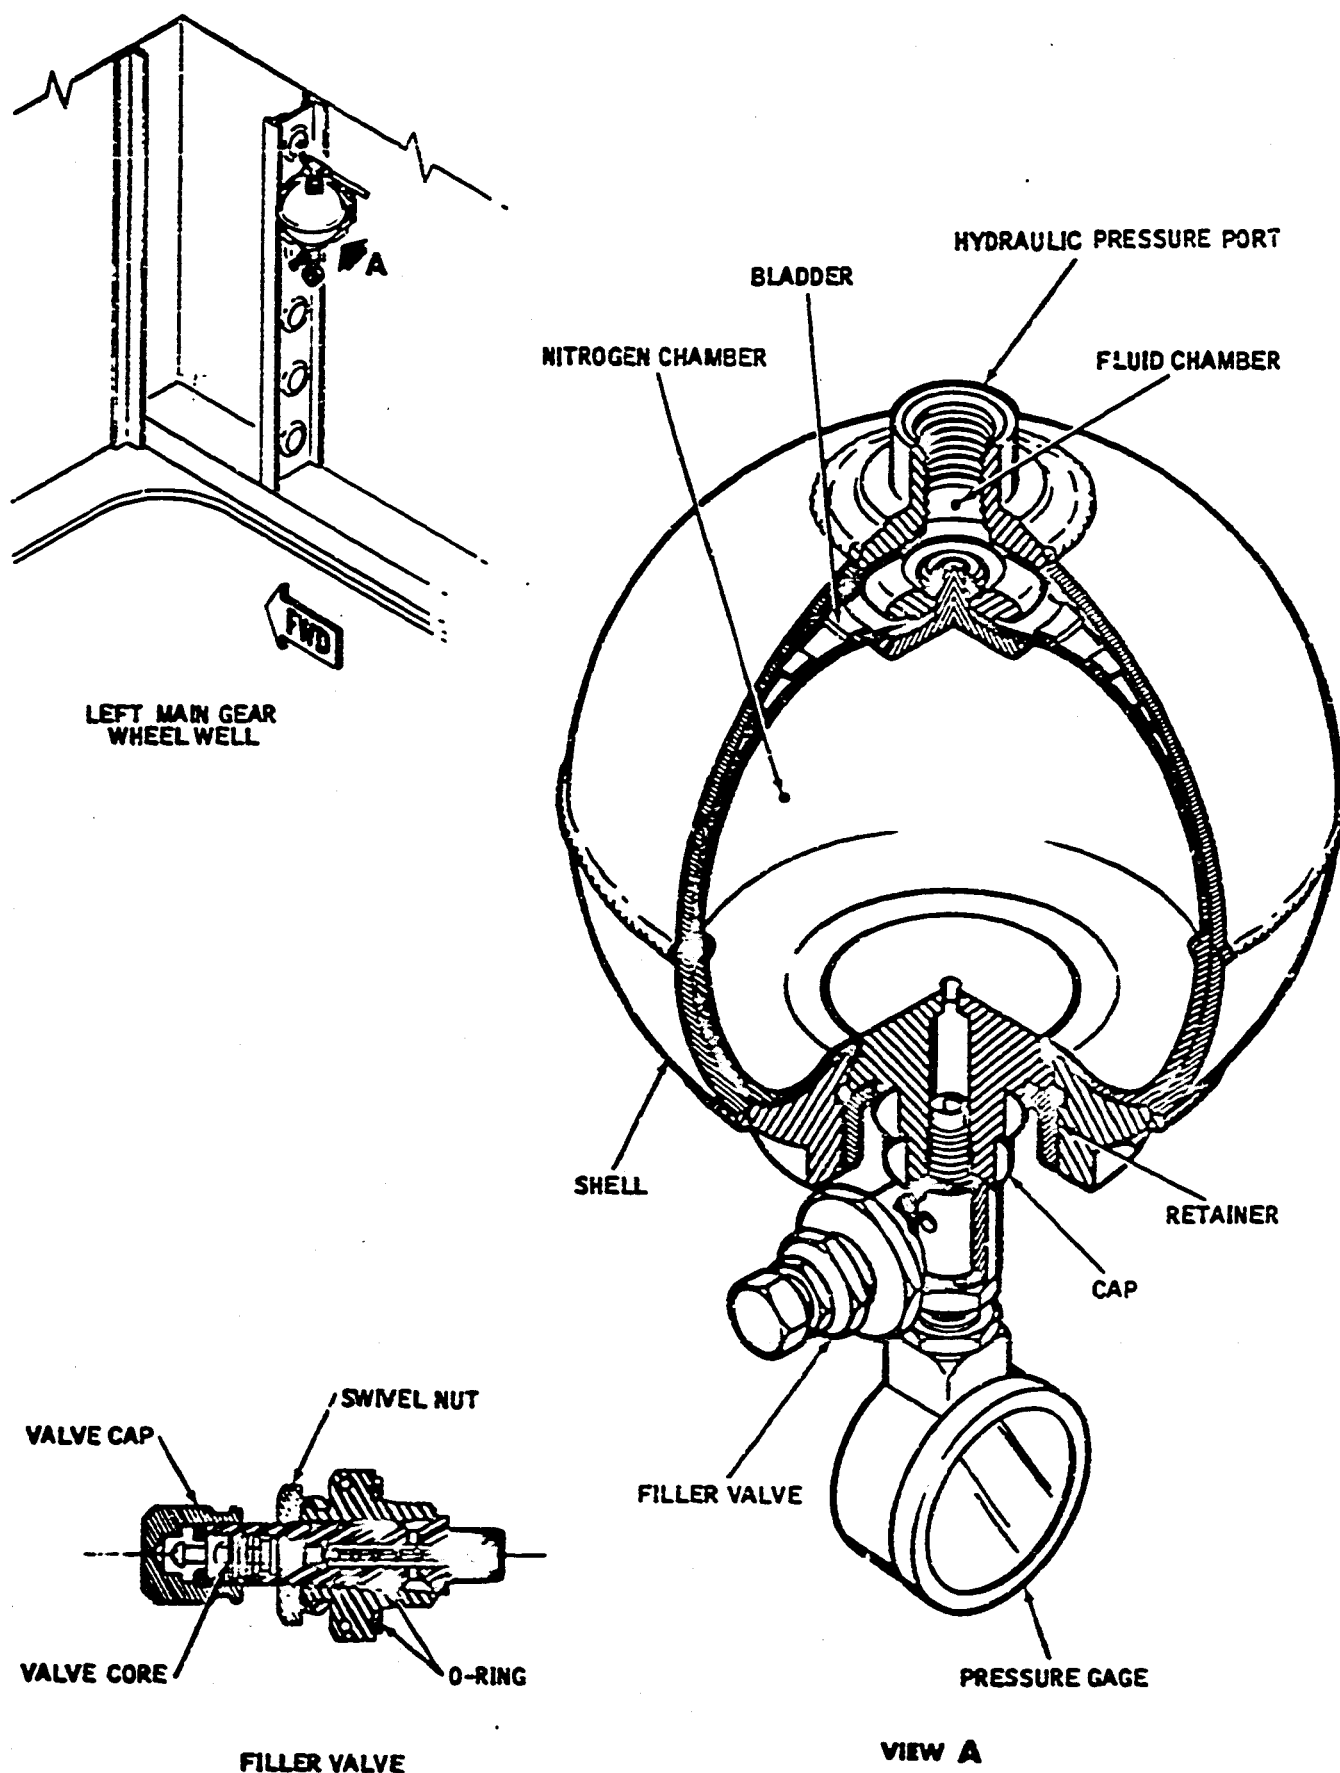

Hydraulic Power System Accumulator --  
 Outaway View  
 Figure 20

HA2-30



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The accumulator is located immediately aft of the left hydraulic power manifold and is accessible through the left main gear inboard door. It is mounted with two corner brackets and clamp blocks at the upper and lower port fittings.
- (3) The accumulator is installed in the pressure line of the hydraulic power system and is initially charged with 1000 psi of dry nitrogen. As the system pressure builds up, fluid is forced into the upper chamber of the accumulator, further compressing the trapped nitrogen to approximately 3000 psi. With full hydraulic system pressure, 3000 psi is indicated on the pressure gage adjacent to the filler valve. This reserve pressure smoothes out any momentary lag in the pump's response to the system's demand for greater fluid flows. The accumulator permits a gradual rise in system pressure, thereby absorbing the shock of pump surges and relieving the piping and system operating units of high-impact loads. When the engine-driven hydraulic pumps are not operating, the accumulator provides system pressure (at a diminishing rate) until a quantity equal to the stored volume in the accumulator has been used by the system.

T. Hydraulic System Priority Valve (See Figure 21.)

- (1) The priority valve is located in the left wheel well near the left hydraulic power manifold. The valve is installed in the hydraulic pressure line, between the two power manifolds, downstream of the pressure supply takeoff port for the flight controls. The priority valve is a balanced relief valve which reserves initial hydraulic pressure (up to 2150 psi maximum) for use in the flight control systems. The valve consists of a body with an inlet, an outlet, and a breather port. Internally, the valve contains a poppet valve plate, a poppet, a poppet valve load-spring, a piston, a piston load-spring, and a piston load-spring housing. The piston load-spring housing chamber is vented to ambient air through a breather hole which is covered by a butyl rubber band.
- (2) The priority valve shuts off hydraulic pressure to all subsystems downstream of the left power manifold, whenever the hydraulic pressure drops below 1700 psi minimum. At this point, the valve closes to reserve the hydraulic pressure for use in the flight control systems, preventing them from reverting to manual operation. When the hydraulic pressure rises to 2150 psi maximum, the priority valve opens and supplies pressure to the right manifold and all subsystems downstream of the priority valve.
- (3) Hydraulic fluid from the left power manifold enters the priority valve through the inlet port, passes through the poppet valve plate holes, and applies pressure against the piston. When sufficient hydraulic pressure is applied to the piston, the piston load-spring compresses, unseating the poppet and permitting full flow through the valve. When the hydraulic pressure decreases to less than the opposing force value of the piston load-spring, the load-spring forces the piston against the poppet and shuts off fluid flow through the valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

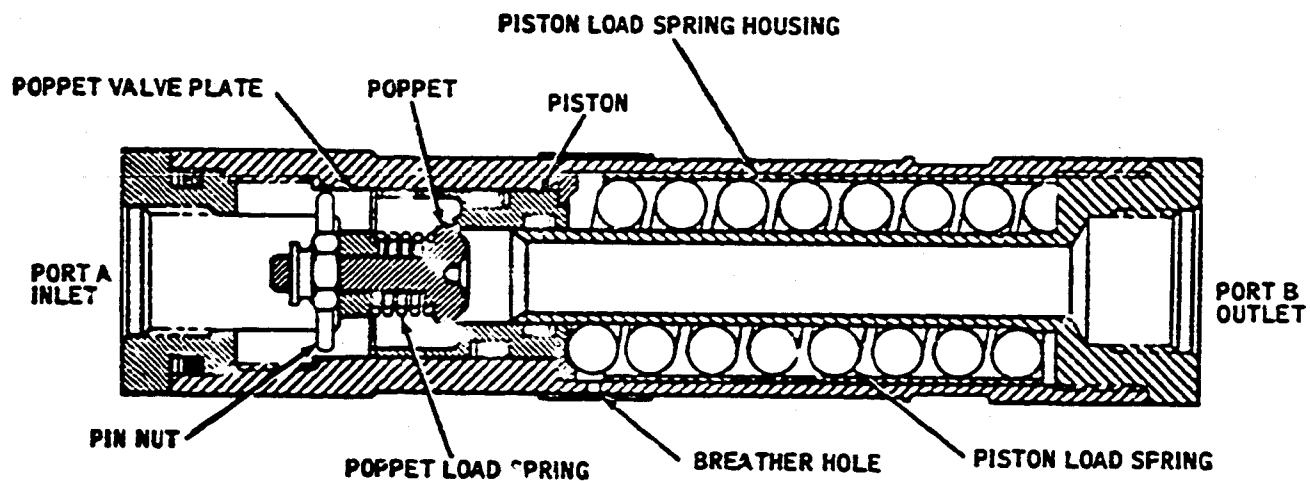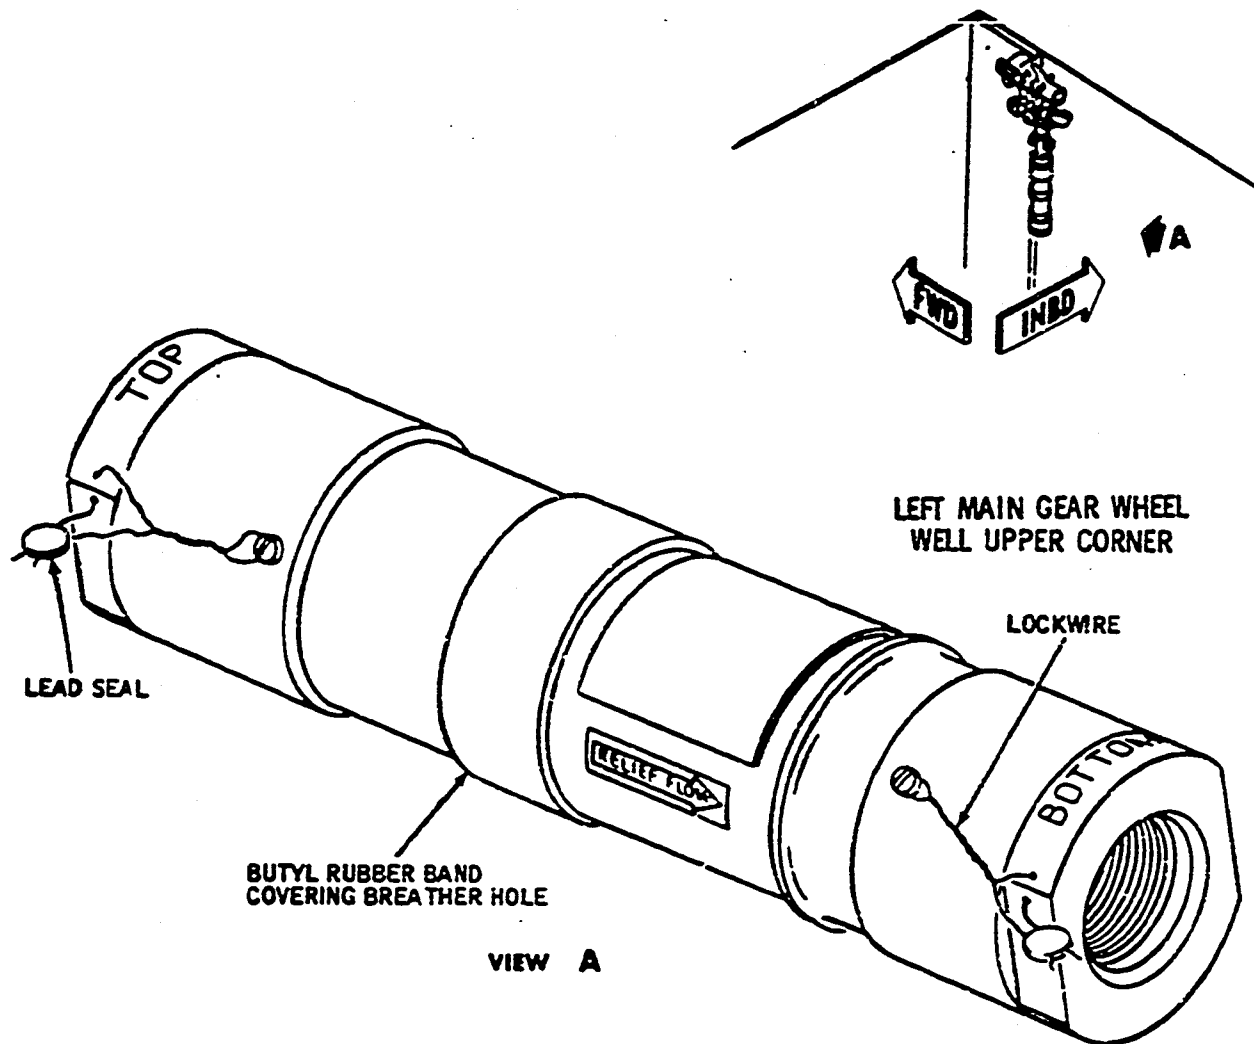

HA2-856

Hydraulic System Priority Valve -- Cutaway View  
 Figure 21




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) The maximum flow available from both engine-driven hydraulic pumps is: 44 to 45 gpm at takeoff, climb, and cruise configurations; 26 to 28 gpm at descent, approach, and engine idle configurations.
- (5) Some of the larger hydraulic system demands are as follows:
  - (a) Gear retraction -- 17 gpm (10 - 12 seconds)
  - (b) Gear extension -- 14 gpm (10 - 12 seconds)
  - (c) Wing flaps down -- 8 gpm (10 seconds)
  - (d) Wing flaps up -- 3 gpm (22 seconds)
  - (e) Horizontal stabilizer -- 7 gpm
  - (f) Ailerons -- 17 gpm (25°/second)
  - (g) Rudder -- 3 gpm (25°/second)
- (6) There are various combinations of hydraulic system operations which could cause momentary reversion of the flight controls to manual operation. To prevent reversion to manual operation, the priority valve assures that the left power manifold receives all the hydraulic fluid pressure under conditions of very large flow demands.

U. Manual Shutoff Valve

- (1) On airplanes 55-75, 77, 78, two manually operated shutoff valves are provided just downstream of the priority valve for isolation of non-priority subsystems during maintenance operations. One valve shuts off pressure to the following subsystems:
  - (a) Wing flaps
  - (b) Wing slots
  - (c) Main landing gear retraction
  - (d) Power wheel brakes
- (2) The other valve shuts off pressure to the nosegear retraction and nose-wheel steering subsystems.
- (3) The manual shutoff valves are located in the upper inboard forward corner of the left main gear wheel well. One valve is mounted on the left power manifold support, the other is mounted to a structure stiffener.
- (4) The valves consist of two position (on-off), rotary type, valves with identical and interchangeable inlet and outlet ports. A T shaped handle is provided on each valve for manual operation and lockwire holes are

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

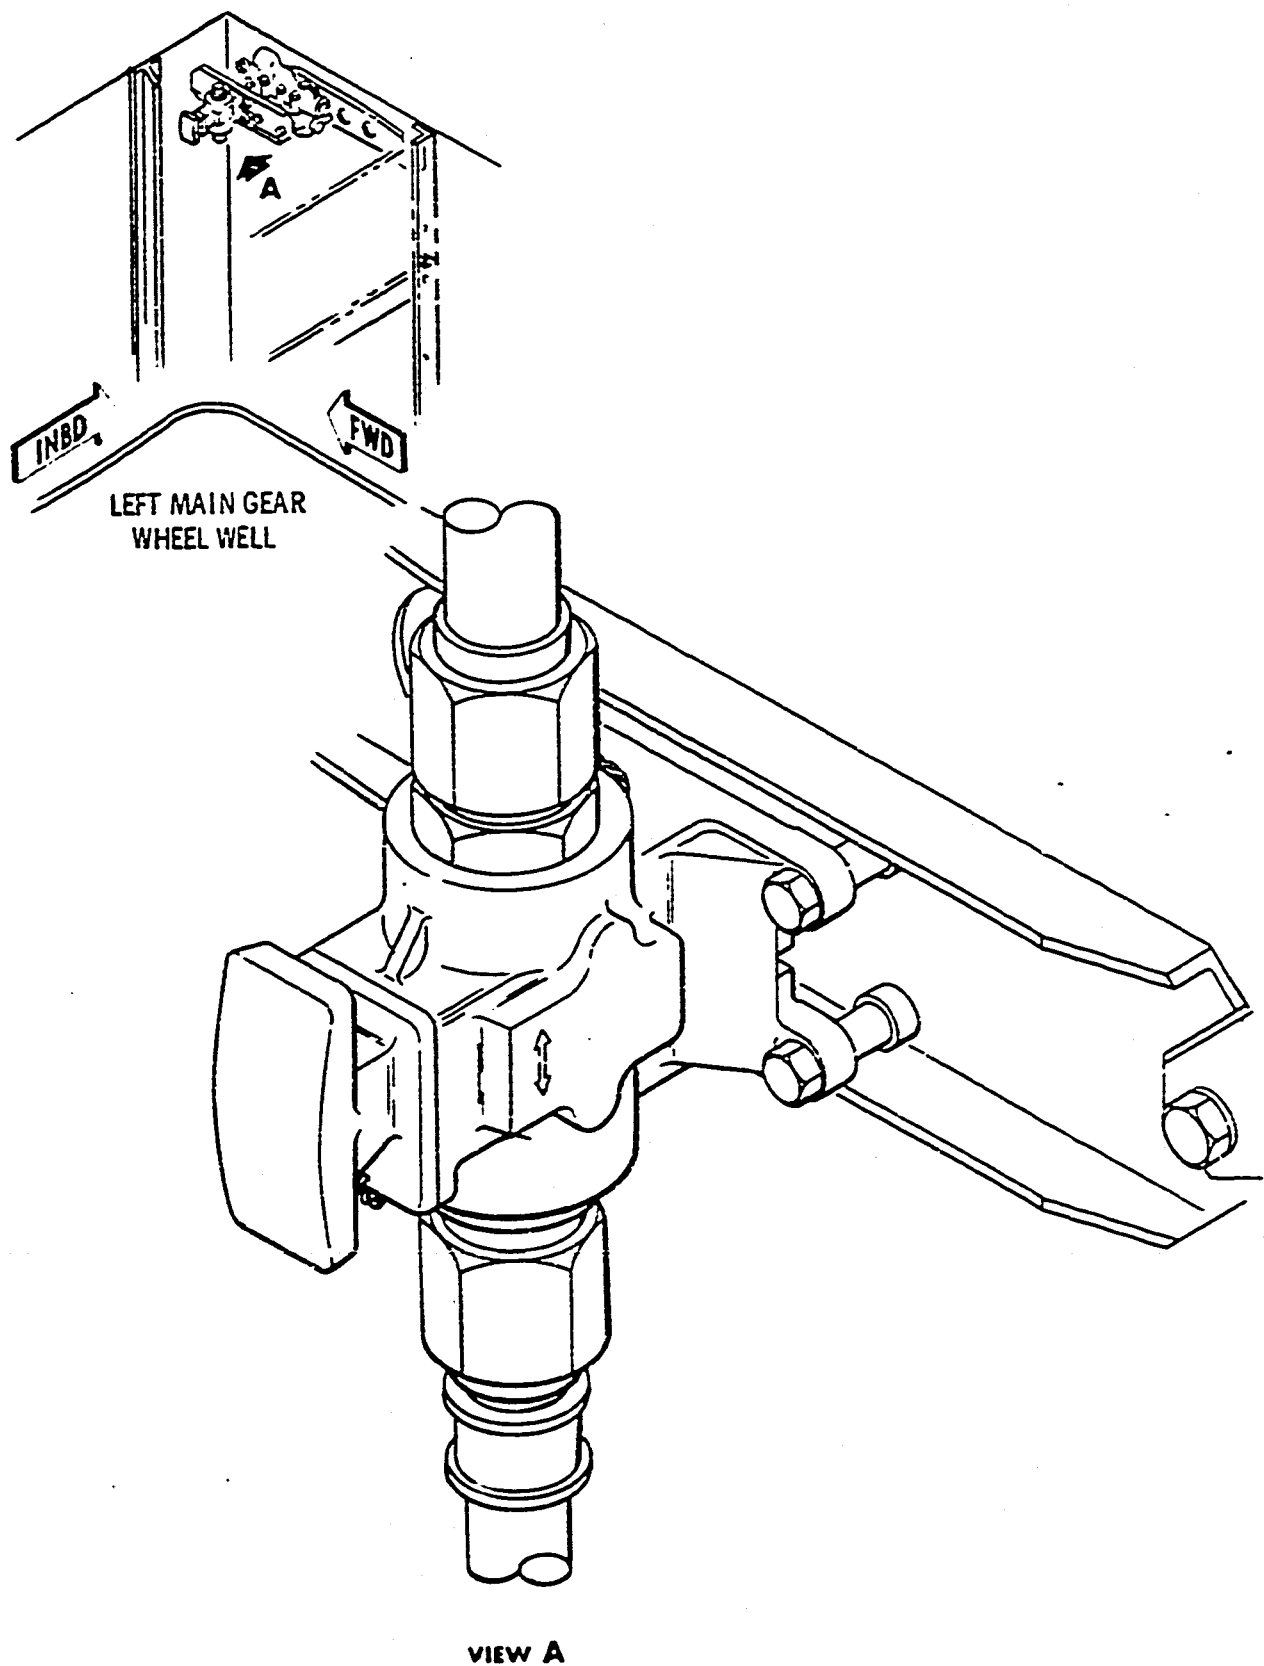

HA2-2937

Manual Shutoff Valve  
(Airplanes 55-75, 77, 78)  
Figure 22

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

provided in the base of the handle for safetying the valve in the open position.

V. Hydraulic System Selector Control Lever

- (1) The hydraulic system selector control lever is a manually actuated, mechanical lever detented to three positions. The lever provides a mechanical means, through cables, for positioning the system selector valve and the auxiliary hydraulic pump supply selector valve. The hydraulic system selector control lever is located on the system engineer's control pedestal. The lever is attached to a drive sector, located on a common shaft with the other control pedestal sectors. The lever and sector are accessible through the cover plates on the system engineer's pedestal.
- (2) To put the hydraulic power system in the bypass condition, the system selector control lever is lifted out of detent and moved to bypass/general system position. At the same time, the cable moves the sector and pushrod of the system selector valve to the No. 1 position. The pushrod positions the system selector valve to the No. 1 bypass position. At the same time, the cables from the system selector valve sector move the auxiliary pump supply selector valve sector to No. 1 (auxiliary) position. The auxiliary pump supply selector valve remains in the auxiliary supply position through the idle feature of the sector rigging. In this condition, the engine-driven pump pressure is ported to the reservoir and the auxiliary pump supplies pressure to the general system. In this position, the fluid is supplied to the auxiliary pump from the low standpipe in the hydraulic system reservoir. To put the system into the alternate condition, the selector control lever is lifted out of detent and moved to the general system/main gear down lock and flaps position. The cables move the system selector valve sector to the No. 3 (alternate) position. The system selector valve sector moves the cables rotating the auxiliary pump supply selector valve sector to the No. 3 (alternate) position. As the sector rotates, the end of the arm moves away from the idle position. This positions the valves to the alternate position, supplying fluid to the auxiliary pump from the auxiliary pump alternate reservoir. In this position, fluid from the auxiliary pump is ported to the wing flap control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported to the general system.

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 3  
Page 41

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - DESCRIPTION AND OPERATION

1. General

A. Description (See Figures 1 and 2.)

- (1) The hydraulic power system receives fluid pressure from the engine-driven hydraulic pumps, one installed on each inboard engine. The electrically driven auxiliary pump is used to supplement the engine-driven pumps, or to independently supply the system with fluid pressure.
- (2) The hydraulic system reservoir, located in the left wing root, has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir is used for fluid, and 1/10 is used for foam space. A separate air chamber is installed in the reservoir system to provide for a greater fluid capacity in the main reservoir. A reservoir filler assembly is installed in the piping between the reservoir and the air chamber and has a vent line from the filler neck to the tee at the top of the reservoir sight gage. The reservoir is pressurized to 30 to 35 psi by bleed pressure from the engine-driven pumps through an air pressure regulator-aspirator.
- (3) The engine-driven pumps receive fluid from the pressurized main reservoir through respective engine hydraulic fire shutoff valves. The engine hydraulic fire shutoff valves are normally open and can be mechanically controlled from the flight compartment. The pumps supply fluid pressure through respective check valves to the dual filter and relief valve. Some of the fluid from the filter is ported through the regulator-aspirator to pressurize the reservoir. Most of the fluid is routed through a check valve to the system selector valve, and then to the left and right hydraulic power manifolds. The manifolds distribute the fluid pressure to the subsystems.
- (4) Hydraulic fluid is normally supplied to the auxiliary hydraulic pump from a low standpipe in the main reservoir. During alternate operation, the auxiliary hydraulic pump receives fluid supply from the auxiliary pump alternate reservoir, which is located just aft of the auxiliary pump. From these reservoirs, the fluid is ported through the auxiliary pump selector valve which is mechanically controlled from the flight compartment by the system selector control lever. When operating, the auxiliary hydraulic pump supplies fluid pressure to the subsystems through the system selector valve which is also controlled by the system selector control lever in the flight compartment. A filter and check valve are installed in the line from the auxiliary pump to the system selector valve.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) An accumulator is installed in the pressure line to the subsystems to provide a reserve supply of fluid and to act as a surge damper for the system.
- (6) Engine-driven pump fluid pressure is routed through the system selector valve to the left power manifold, where it is distributed to some of the subsystems and through the priority valve to the right power manifold. Fluid pressure from the right power manifold is distributed to the remaining subsystems.
- (7) The priority valve is a spring-loaded, poppet-type, balanced relief valve installed in the line downstream of the left power manifold. The priority valve's function in the system is to prevent the flight control systems from reverting to manual operation during high demands on the hydraulic system.
- (8) A fluid pressure transmitter, located in the nosewheel well, senses the system pressure, which is indicated on the hydraulic system pressure indicator in the flight compartment.

**B. Normal Operation**

- (1) Fluid is supplied to the hydraulic system from the pressurized hydraulic system reservoir. For operation of the hydraulic system under normal conditions, 8.1 US gallons (6.7 Imperial gallons; 30.6 liters) of hydraulic fluid are available to the engine-driven hydraulic pumps, and 12.9 US gallons (10.7 Imperial gallons; 48.8 liters) are available to the auxiliary hydraulic pump. Supply lines from the main reservoir carry fluid to each inboard pylon through normally open engine hydraulic fire shutoff valves to the engine-driven hydraulic pumps. Fluid is supplied to the auxiliary hydraulic pump from the main reservoir through a low standpipe at the base of the reservoir. Fluid is carried from the reservoir through the auxiliary pump selector valve to the auxiliary hydraulic pump.
- (2) The engine-driven hydraulic pumps supply full system pressure (3000 psi nominal) at any given engine speed, from idle to full power. The output flow of the pump is varied by sensing pressure from the outlet side of the pump. Each engine-driven pump contains a solenoid-operated bypass valve which, when energized, bypasses the pressure control regulator of the pump and ports fluid to the pump yoke control piston which feathers the pump. When the pump is feathered, flow rate is reduced to almost zero (1.0 gpm) and to a pressure of approximately 300 psi. Half of this flow maintains pump lubrication and cooling through internal leakage. This leakage is returned, through a check valve, the engine-driven pump case drain line filter, and another check valve to the case drain return port of the reservoir. The pressure fluid from each pump passes through a check valve to the dual filter and relief valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

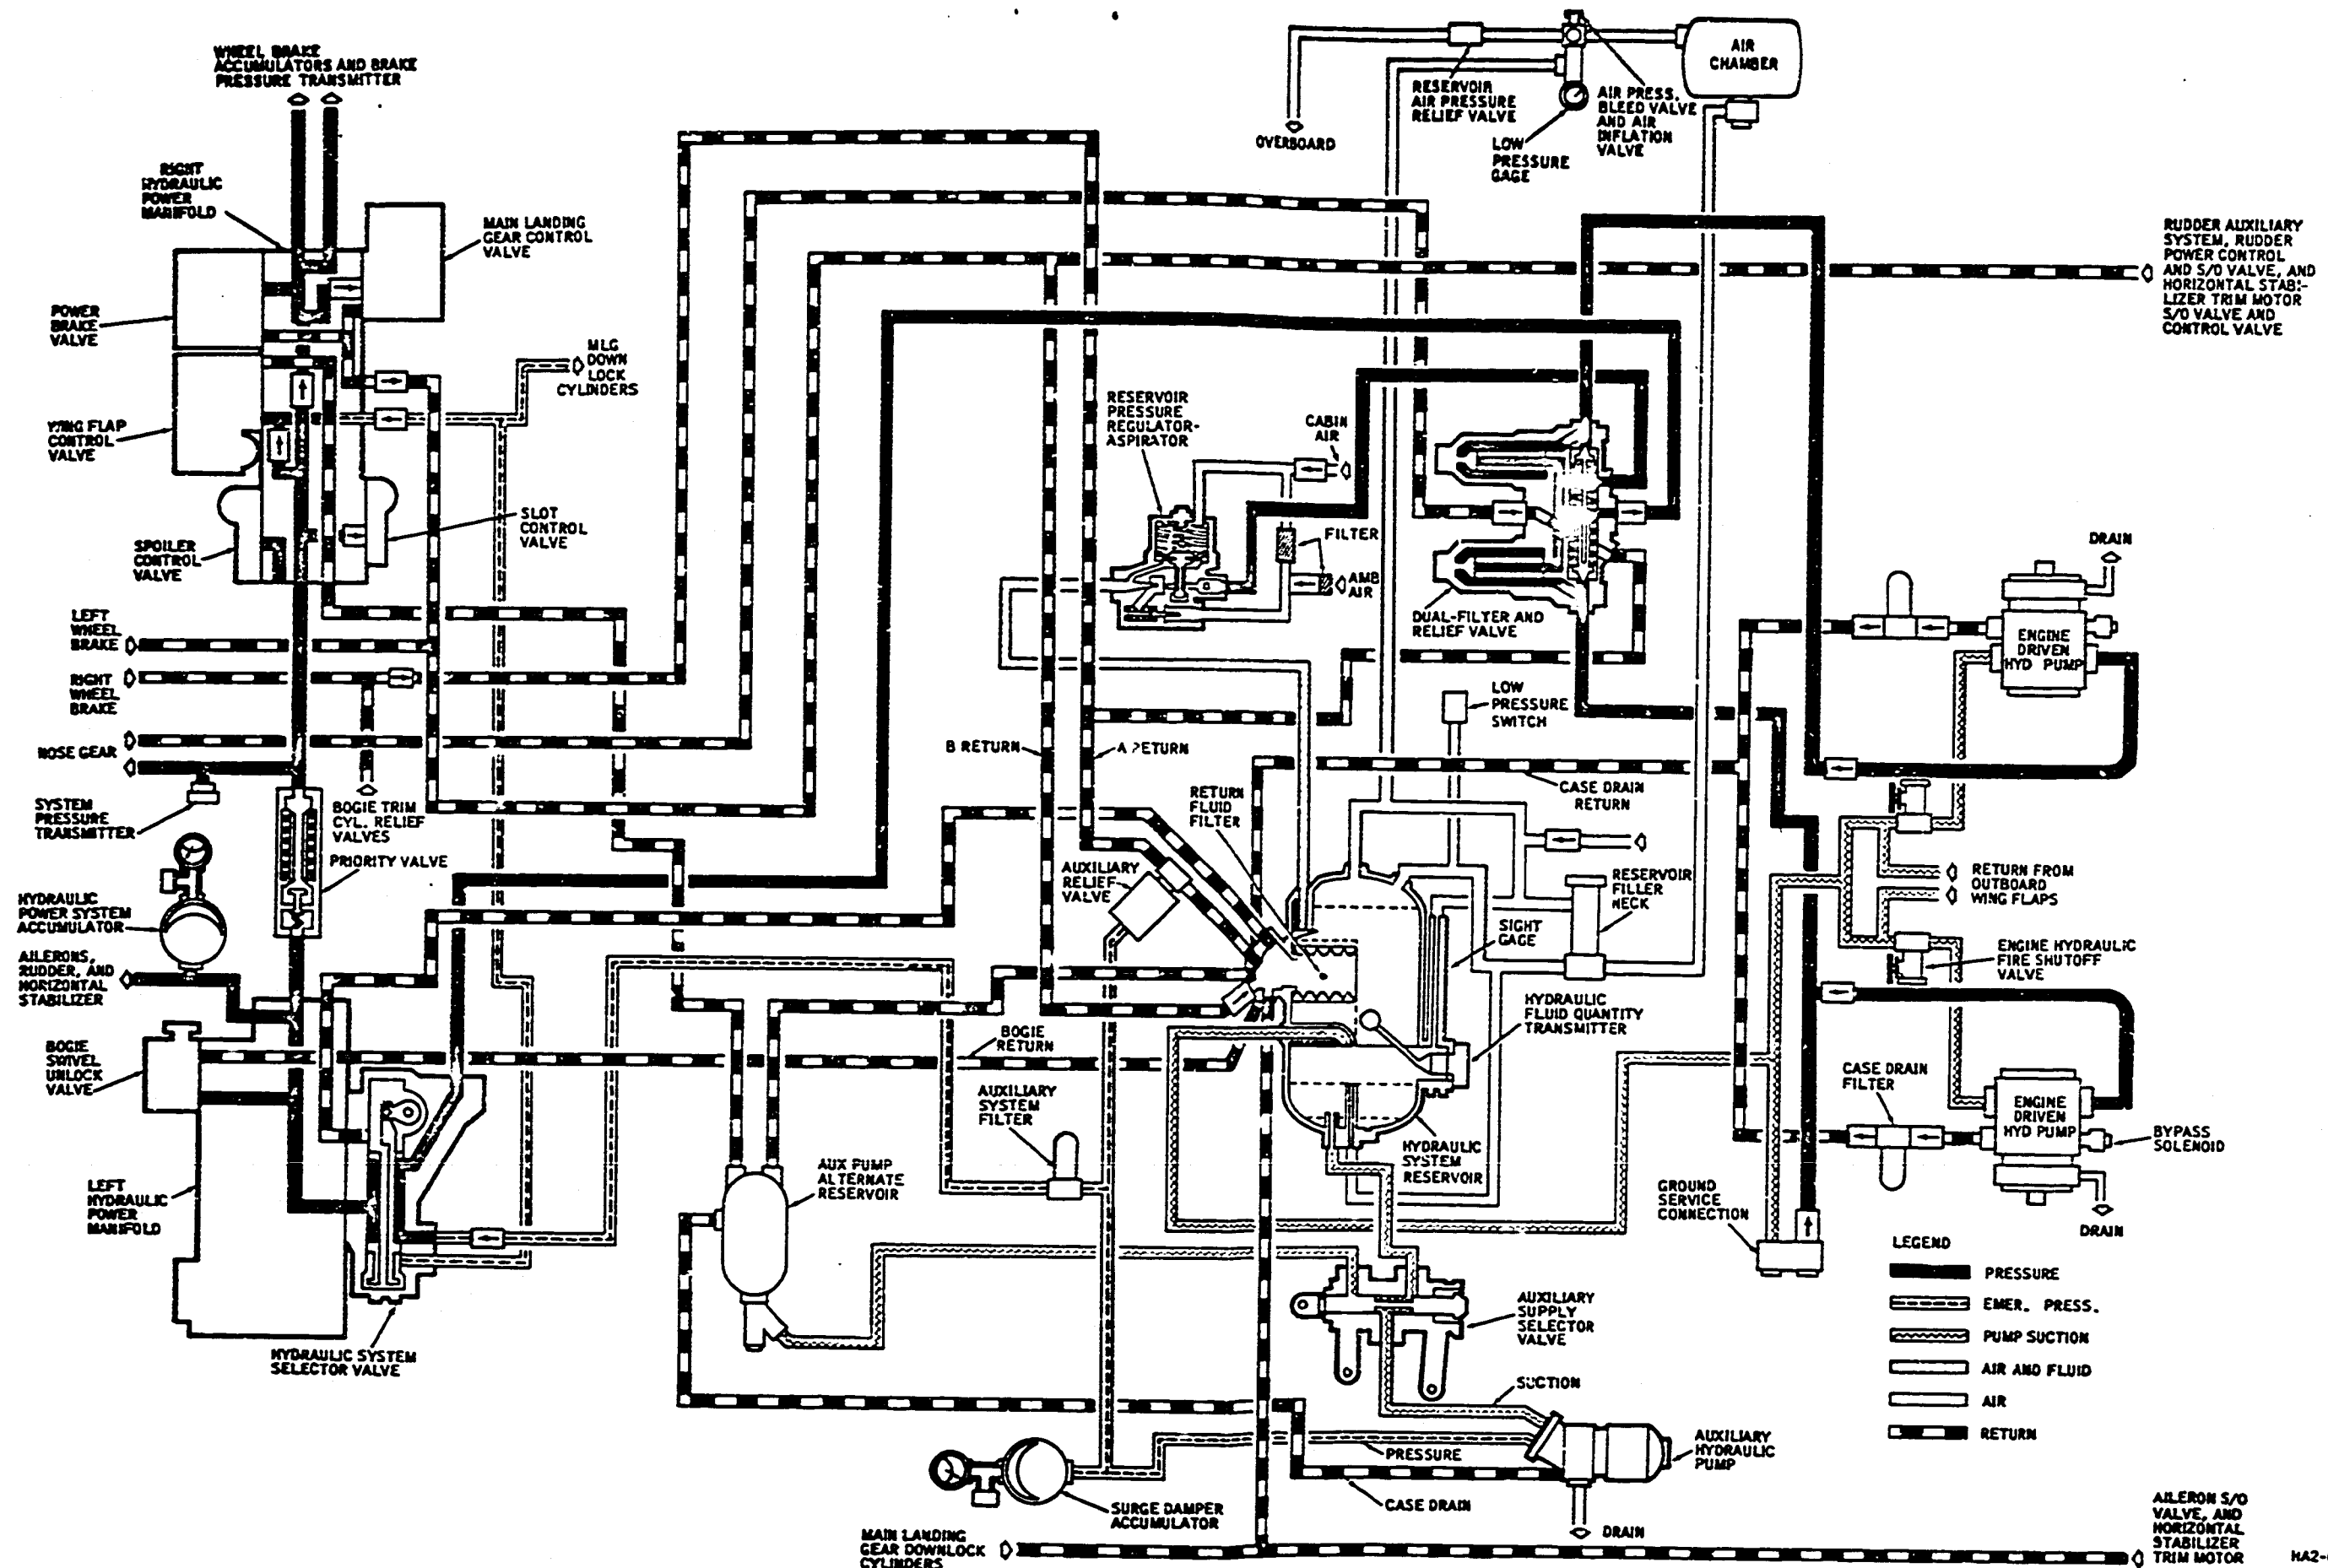

Hydraulic Power System -- Schematic Diagram  
 (Airplane N45090)  
 Figure 1 (Sheet 1)


29-10-0  
 CODE 4  
 Page 3

Aug 1/68

Printed in U.S.A.

HA2-6E

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

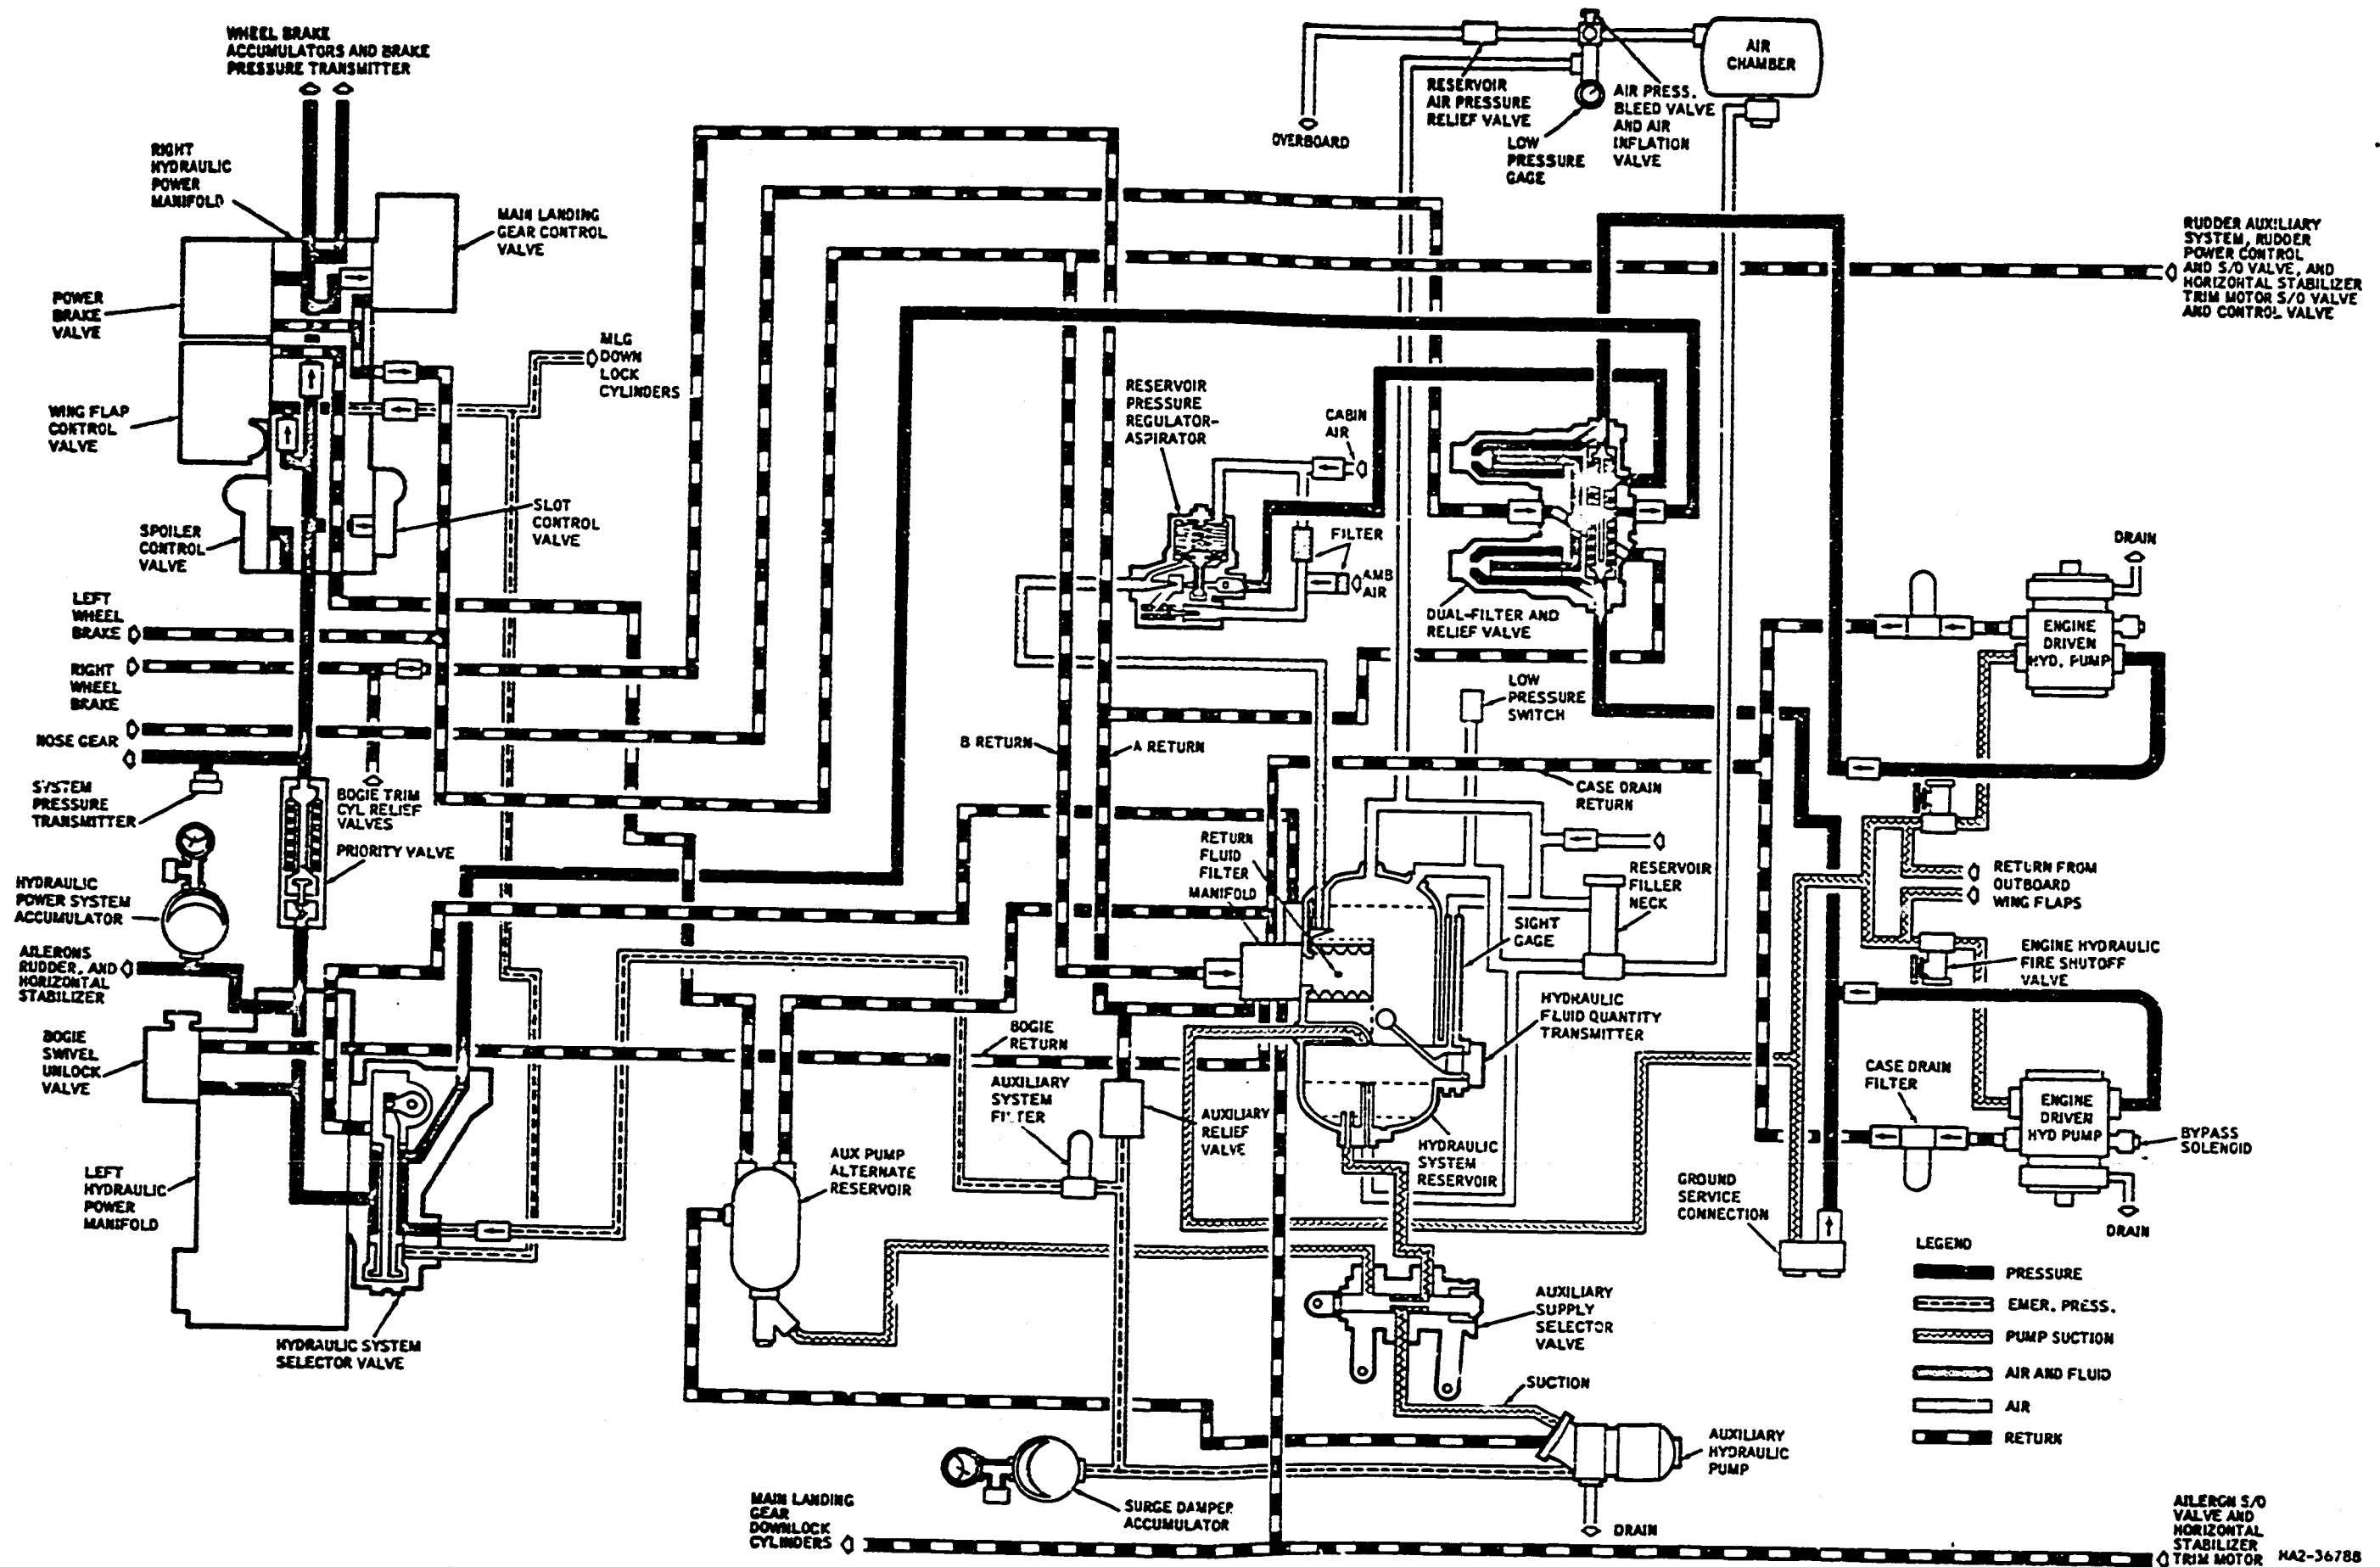

Hydraulic Power System -- Schematic Diagram  
 (Airplane N45191)  
 Figure 1 (Sheet 2)


29-10-0  
 CODE 4  
 Page 4A

Aug 1/68

Printed in U.S.A.

HA2-36788

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

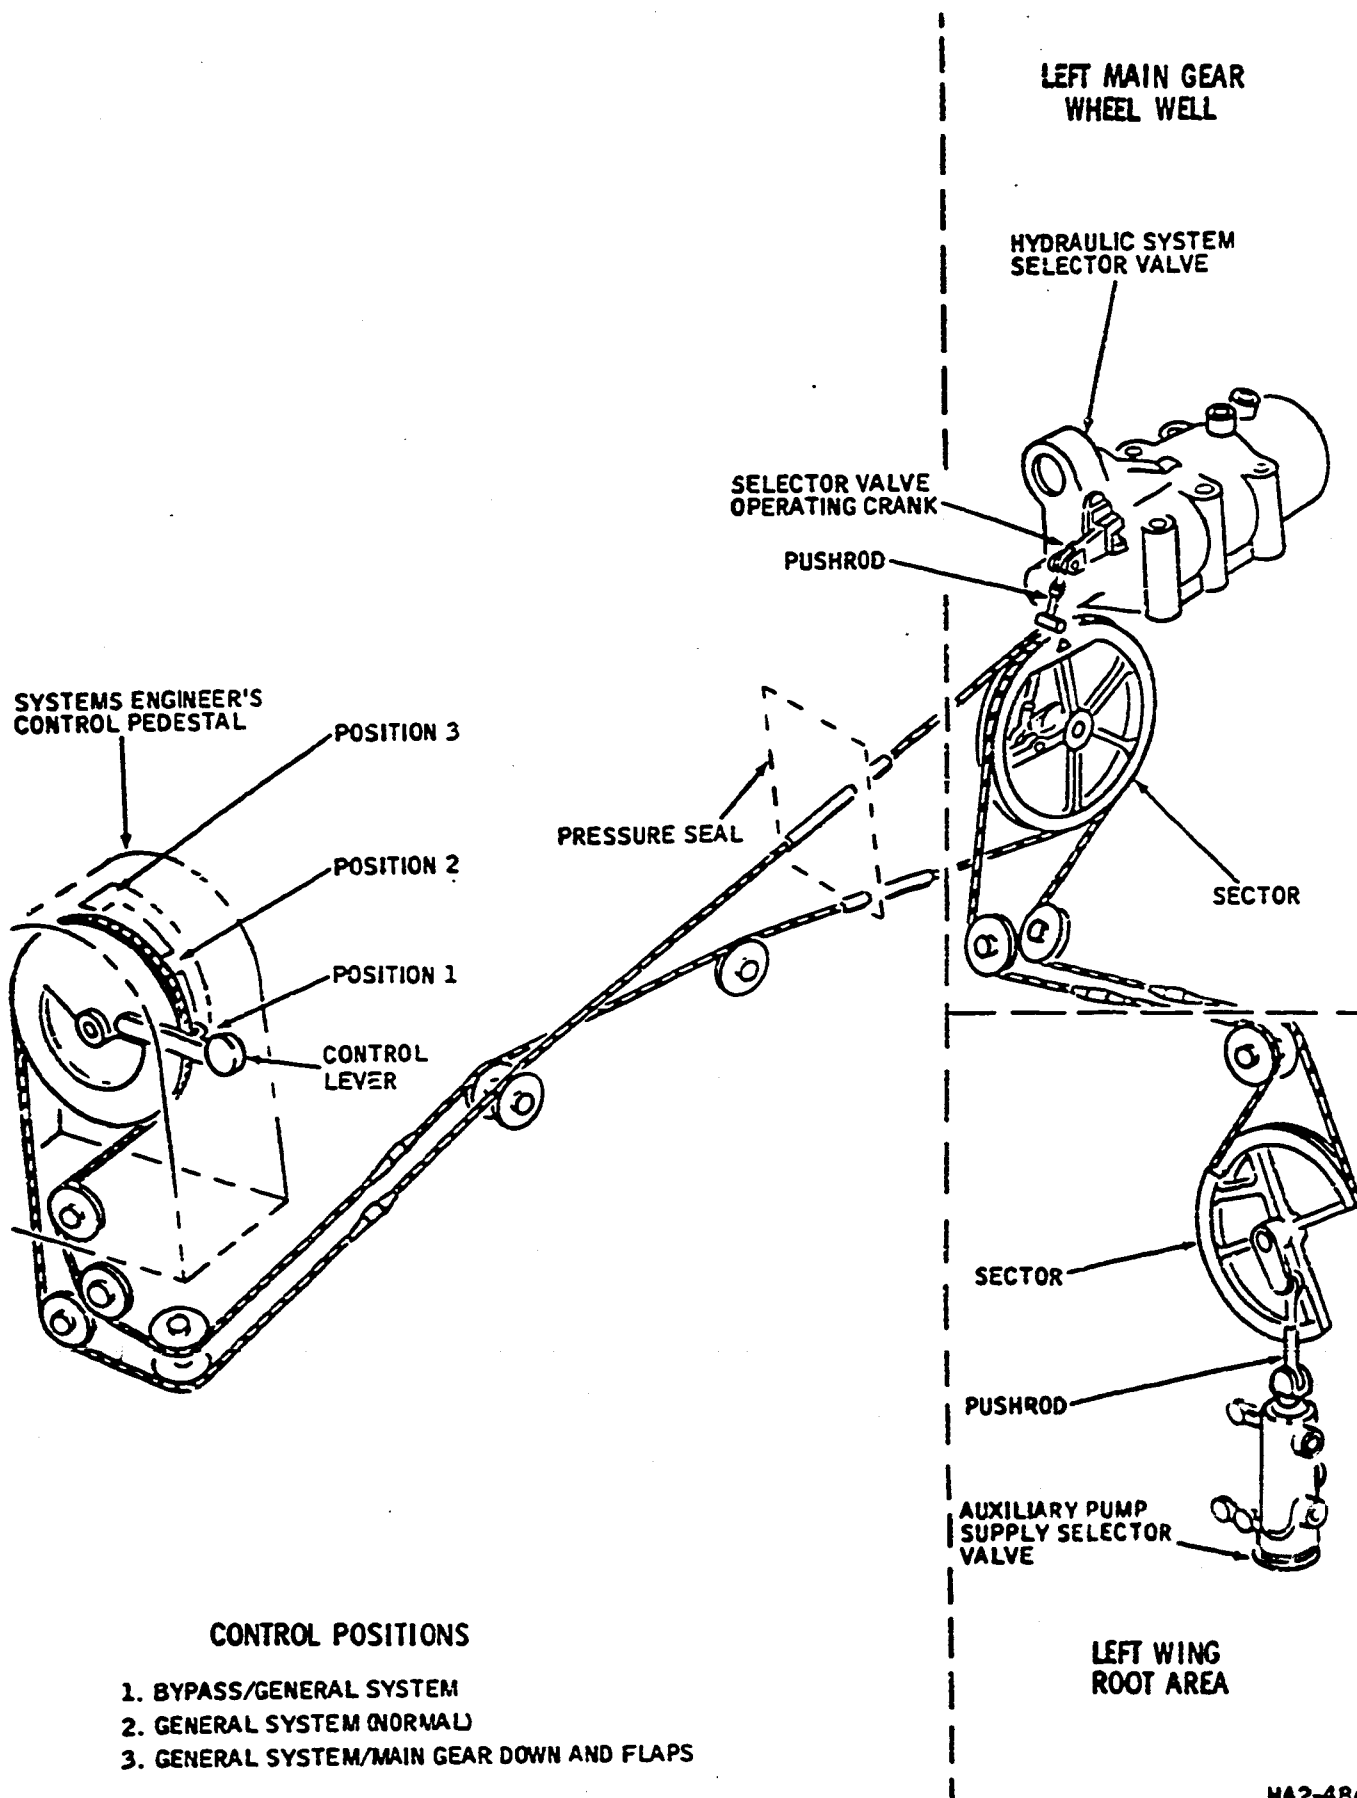

**CONTROL POSITIONS**

1. BYPASS/GENERAL SYSTEM
2. GENERAL SYSTEM (NORMAL)
3. GENERAL SYSTEM/MAIN GEAR DOWN AND FLAPS

Hydraulic System Selector and Auxiliary Pump Supply  
 Selector Valves -- Mechanical Control Schematic  
 Figure 2

HA2-486

29-10-0  
 CODE 4  
 Page 5

Jun 15/67

Printed in U.S.A.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The fluid enters the dual filter and relief valve through the relief valve chamber. The fluid is passed through the filter element, through a manifold, and through a common outlet port. Fluid from the outlet port is routed through a check valve to the system selector valve. If back pressure in the system builds up to approximately 3300 psi, the relief valves in the dual filter and relief valve open and port fluid back to the reservoir via A return port. The relief valve poppet closes again when system pressure drops to approximately 3000 psi.
- (4) The aspirator receives filtered fluid (bleed pressure at normal 3000 psi) from the dual filter and relief valve. The aspirator operates on the jet pump principle. Hydraulic fluid is atomized and mixed with air within the unit by a nozzle and a venturi. The mixture is used to pressurize the reservoir and reservoir air chamber. The regulator diaphragm maintains a pressure range of 30 to 35 psi in the reservoir and air chamber. If there is a regulator malfunction, the aspirator stalls when the outlet pressure reaches a maximum of 40 psi. A reservoir relief valve in the reservoir vent line relieves thermal expansion pressure above 45 (+5, -0) psi.
- (5) Pump pressure fluid enters the system selector valve through the system pressure inlet port. When the pump selector control lever is in the general system (normal) position, fluid is ported to the pressure passages of the left power manifold. The fluid pressure in the left power manifold is ported through the priority valve to the nose gear and the right power manifold and directly to the following valves:
  - (a) Bogie unlock
  - (b) Aileron power shutoff
  - (c) Rudder power shutoff
  - (d) Longitudinal trim hydraulic motor shutoff
- (6) The right power manifold distributes fluid pressure to the brake accumulators, the pressure transmitter, and the following control valves:
  - (a) Wing flap
  - (b) Slot
  - (c) Main gear
  - (d) Power brake

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (7) The return fluid from the wing flap control valve is ported through the right power manifold and into the auxiliary hydraulic pump alternate reservoir. Return fluid from the outboard wing flaps is piped into the suction lines for each engine-driven hydraulic pump. Return fluid from the slot control valve is ported into the A return line to the main reservoir. The power brake and main gear control valve gear up return fluid is ported through a restrictor check valve into the B return line to the reservoir. The main gear control valve gear down return pressure bypasses the right manifold and returns to the reservoir through the A return line. The return port of the bogie unlock valve ports fluid from the left manifold to the bogie return port of the reservoir. All return fluid entering the reservoir is filtered through the return ports filter located within the reservoir.

C. Bypass Operation

- (1) The output of the engine-driven hydraulic pumps is bypassed by moving the system selector control lever out of the general system (normal) position to the bypass/general system position.
- (2) The system selector valve in the bypass position ports engine-driven pump pressure from the dual filter and relief valve directly to the return passage of the left power manifold. From the manifold, the fluid is ported directly to a tee in the wing flap return port of the hydraulic system reservoir. In the bypass condition, the auxiliary hydraulic pump receives fluid from the hydraulic system reservoir, pressurizes it to system pressure, and ports it to the left and right power manifolds for distribution to the subsystems.

D. Alternate Operation

- (1) When both engine-driven hydraulic pumps and the auxiliary hydraulic pump are rendered inoperative due to the loss of the normal supply of fluid, the hydraulic power system can be rigged for alternate operation. This is accomplished by placing the system selector control lever in the general system/main gear downlock and flaps position. When the system selector control lever is in this position, the auxiliary hydraulic pump supply selector valve is positioned to supply fluid from the auxiliary pump alternate reservoir to the auxiliary pump.
- (2) Fluid is supplied to the auxiliary pump from the outlet port of the auxiliary pump supply selector valve. Output pressure is ported through the auxiliary system filter and check valve to the auxiliary pressure inlet port of the system selector valve.
- (3) In the general system/main gear downlock and flaps position, auxiliary pump pressure bypasses the manifold pressure passages and is ported from the alternate outlet port of the system selector valve. Fluid from this port flows directly to a port on the right power manifold, through an internal check valve in the manifold, to the wing flap control valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

A line, teed into the alternate supply line, runs directly to a shuttle valve in the main gear downlock cylinder line. When auxiliary pressure is applied, the shuttle valve shifts, porting fluid into the downlock bungee cylinder's downlock side.

**E. Mechanical Control**

- (1) The hydraulic power mechanical control system consists of the hydraulic system selector control lever cable drum, the system selector valve sector, the system selector valve, the auxiliary hydraulic pump supply selector valve sector, and the auxiliary hydraulic pump supply selector valve.
- (2) The control lever located on the system engineer's control pedestal is used to position the system selector valve and, in turn, the auxiliary hydraulic pump supply selector valve.
- (3) The control lever is spring loaded into general system (normal) position, and is connected to the control lever cable drum. Two cables run from the drum, under the cabin floor, aft through the pressure bulkhead at the rear wing spar, and into the left wheel well to the system selector valve sector. A pushrod connects the sector to the positioning lever of the system selector valve.
- (4) A second set of cables is routed from the system selector valve sector into the left wing root to the auxiliary hydraulic pump supply selector valve sector. When the system selector valve is in either bypass or normal, the auxiliary hydraulic pump supply selector valve sector is arranged so that the pushrod idles between the two positions. This allows the valve to remain in the auxiliary position. When the sector is moved to the alternate position, the pushrod is pulled by the sector to reposition the valve to the alternate position.
- (5) The control lever is normally in the general system (normal) position. To move the system selector valve to the bypass position, the control lever is moved to the bypass/general system position. When the system selector valve is moved to the bypass position, the auxiliary hydraulic pump supply selector valve sector is moved to a new position. Due to the idle feature on the auxiliary sector, the valve remains in the auxiliary position. With the valve in this position, fluid is supplied to the auxiliary pump through the low standpipe in the hydraulic system reservoir. In this condition, engine-driven pump pressure is ported to the reservoir and the auxiliary pump pressure is ported to the general system.
- (6) To put the system in alternate operation, the control is moved to the general system/main gear downlock and flaps position. This moves the system selector valve to the alternate position, and simultaneously moves the auxiliary hydraulic pump supply selector valve to the alternate position. Fluid is supplied to the auxiliary pump from the

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


auxiliary hydraulic pump alternate reservoir. Fluid pressure from the auxiliary pump is ported to the flap system control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported from the system selector valve to the general system.

## 2. System Components

### A. Hydraulic System Reservoir (See Figures 3 and 4.)


- (1) The hydraulic system reservoir is installed on the aft side of the wing rear spar in the left wing root and is accessible through the left wing root access door. The hydraulic system reservoir serves as the main source of hydraulic fluid for the engine-driven hydraulic pumps and the normal supply for the auxiliary hydraulic pump. The reservoir is cylindrical in shape and contains a filter, baffle, and a screen cover encasing the filter. The filter prevents foreign particles from contaminating the fluid supply. Mountings are provided on the exterior surface of the reservoir for return line ports, aspirator port, electrical sensing units, sight gage, instruction placards, magnetic drain plug, and system supply ports.
- (2) The reservoir is pressurized with air from the regulator-aspirator to a range of 30 to 35 psi and has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir volume is used for fluid and 1/10 is used for foam space.
- (3) The aspirator port through which the reservoir is pressurized is located in the recess on top of the reservoir. An aspirator-deaerator filter is supported in the reservoir by a screen and support box assembly which is mounted to the reservoir wall by two bolts.
- (4) On airplane N45090 the mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The manifold is bolted to the flange and contains five ports: return port A, located at the bottom; return port B, located at the lower right side; the low-pressure return port, located at the upper right; the wing flap return port, located at the top; and the bogie return port, located on the face of the manifold just below the wing flap return port.
- (5) The return fluid filter is installed in the reservoir, behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the manifold holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
- (6) On airplanes N45191 and subsequent, the mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The return ports manifold is an open-centered ring, flanged at both sides and provided with five fluid ports around its circumference; return port A is located at the bottom, return port B is located at the lower right

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

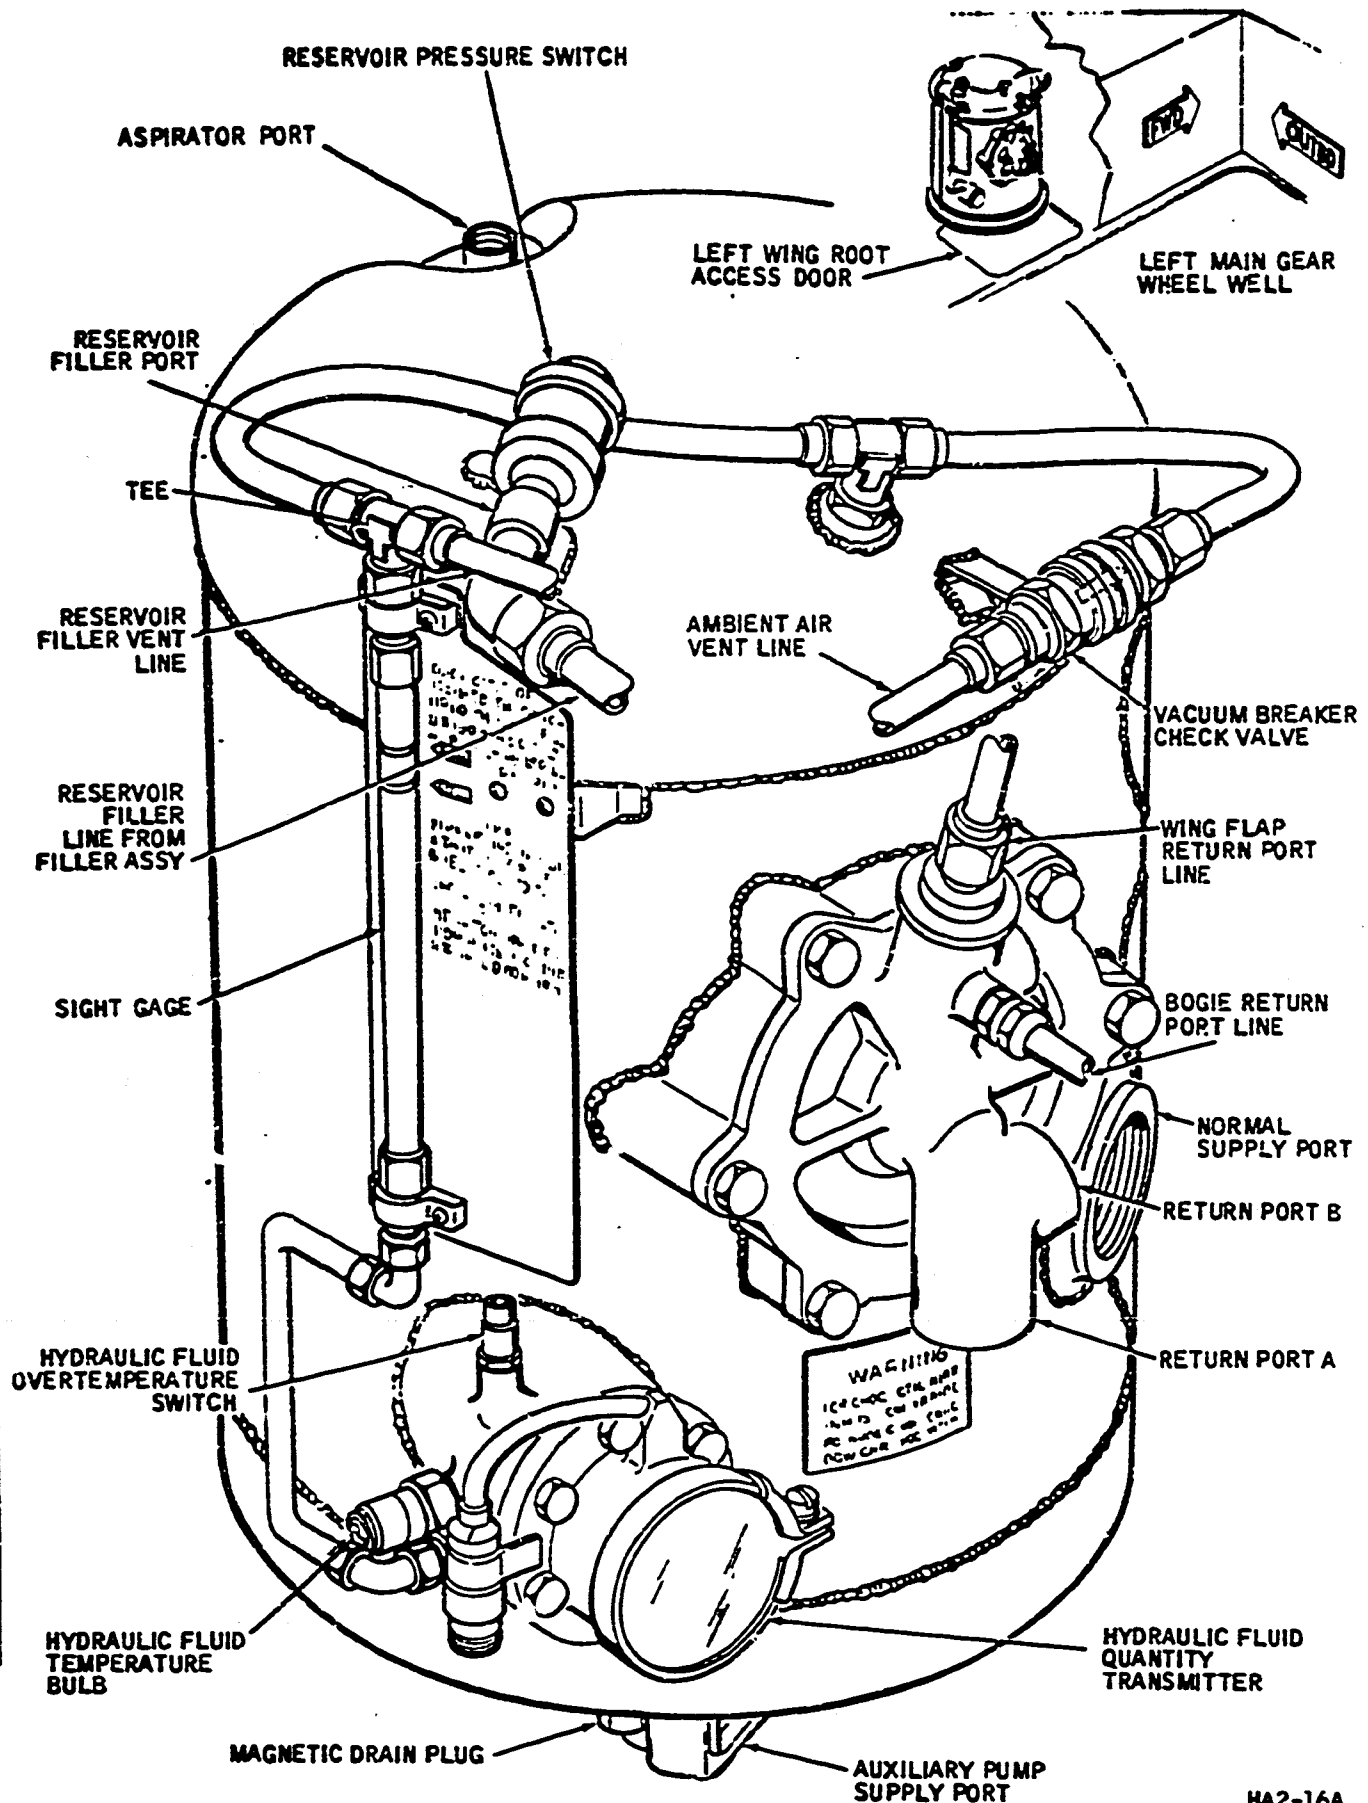

Hydraulic System Reservoir -- External View  
 (Airplane N45090)  
 Figure 3 (Sheet 1)

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

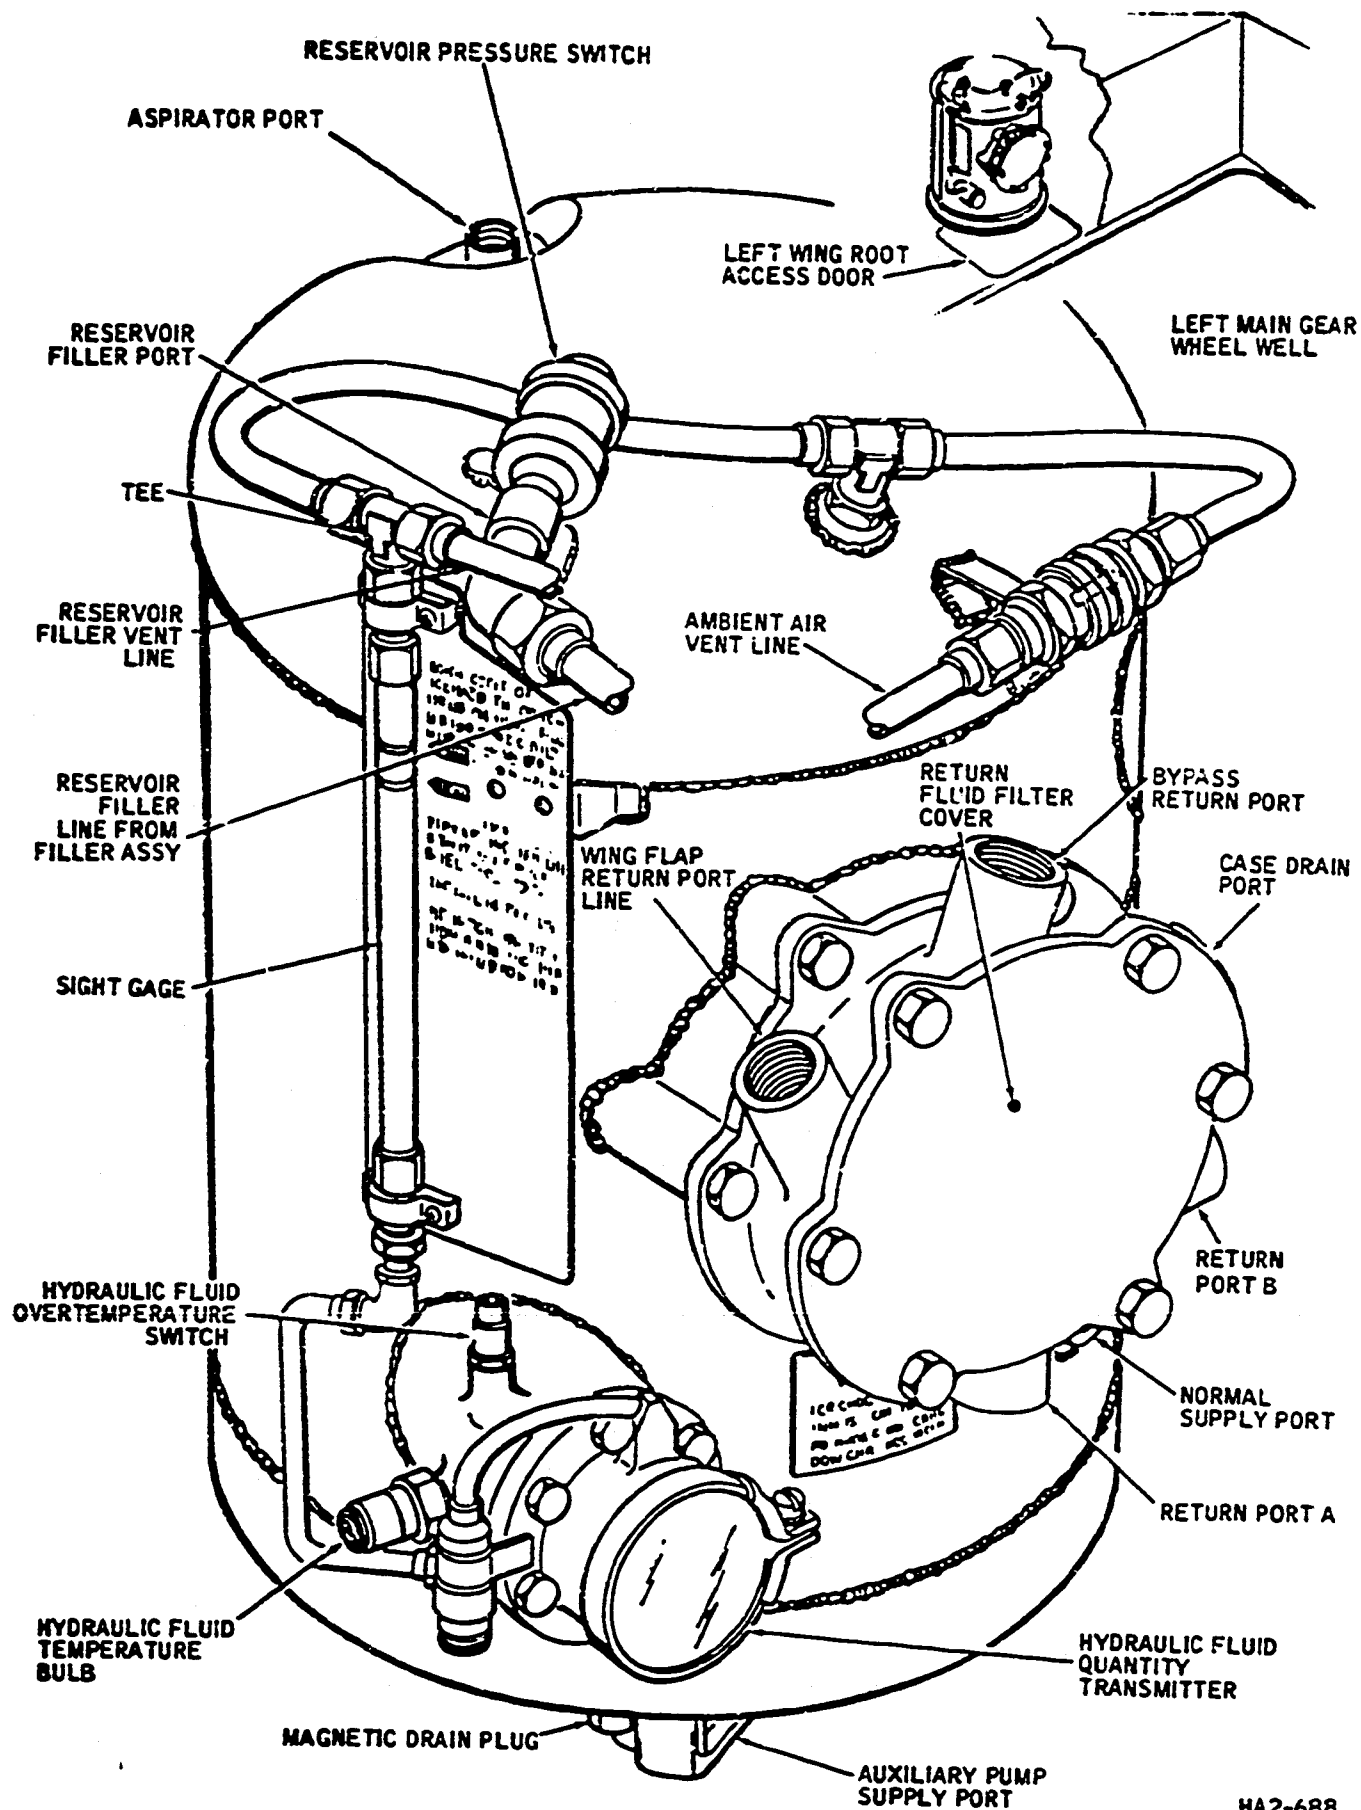

Hydraulic System Reservoir — External View  
 (Airplanes N45191 and Subsequent)  
 Figure 3 (Sheet 2)

HA2-688

29-10-0  
 CODE 4  
 Page 10A

Aug 1/68

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


side, the wing flap return port is located at the upper left side, and the system selector valve bypass port is located at the top. One flange of the manifold is mounted with six bolts to the mounting flange on the reservoir. The return fluid filter cover fits into the open side of the manifold, and is attached to the outer manifold flange with six bolts to form a fluid-tight cover for both the manifold and the filter.

- (7) The return fluid filter is installed in the reservoir behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the return fluid filter cover holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to the engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
- (8) A flanged adapter for the fluid quantity transmitter is welded to the reservoir below and to the left of the return ports manifold. The adapter is provided with two small port bosses for the hydraulic fluid temperature bulb and the hydraulic fluid overtemperature switch. The lower end of the sight gage connects to a third port in the adapter, while the top of the sight gage tees into a port at the top of the reservoir. An instruction plate is mounted behind the sight gage and the vacuum breaker check valve tees into the port at the top of the reservoir that is used by the sight gage.

**B. Hydraulic Reservoir Return Fluid Filter (See Figure 4.)**

- (1) The reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply. The filter is located behind the return ports manifold and is spring loaded to act as its own relief valve. On airplane N45090 access to the filter is by removing the return ports manifold. Removal of the return ports manifold necessitates disconnecting the return lines from the manifold and removal of six bolts which secure the manifold to the reservoir. The filter which is attached to the manifold is then withdrawn from the reservoir. On airplanes N45191 and subsequent access to the filter is gained by removing the return filter cover from the return ports manifold by removal of six bolts. The filter is attached to the cover by a retaining spring, and is withdrawn from the reservoir when the cover is removed.
- (2) Externally, the filter consists of two perforated concentric tubes. The area between the tubes is closed by metal end caps which are bonded to the two tubes. A resilient rubber gasket is bonded to each of the caps. Each gasket must be smooth and flat for proper sealing of the filter. The gaskets act as a static seal and a relief valve seat.
- (3) Internally, the filter has a 10-micron, resin-impregnated, convoluted paper-type filter element. The area of the filter element is approximately 1960 square inches. The filter is held in place by a retaining spring. One end of the spring is attached to an eyebolt located inside

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

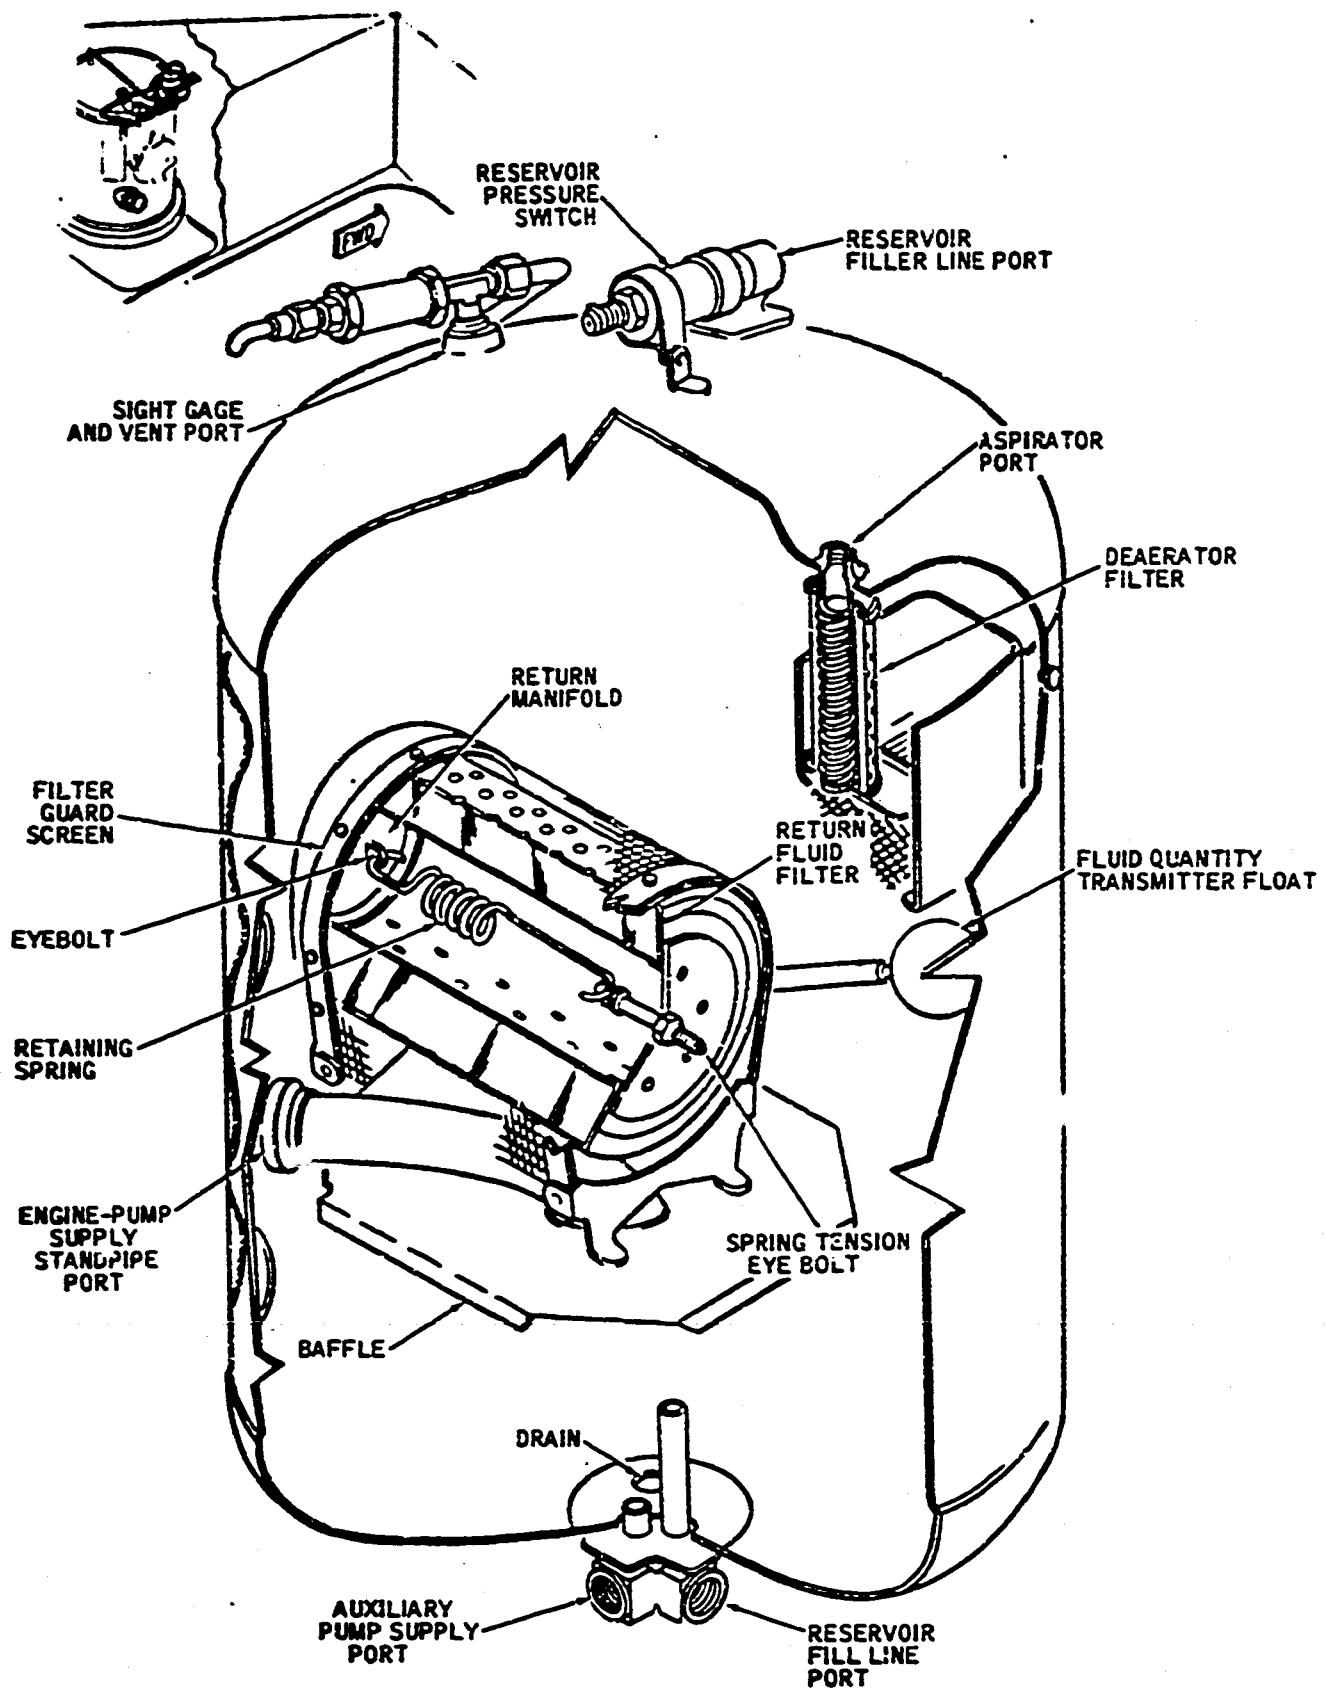

Hydraulic System Reservoir -- Cutaway View  
 Figure 4

HA2-689

29-10-0  
 CODE 4  
 Page 11

Aug 1/68

Printed in U.S.A.




DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

the return port's manifold. The spring passes through the center chamber of the filter and is connected to another eyebolt. This eyebolt is secured to a large washer and plate by means of a self-locking nut. The washer seats on the rubber gasket which is bonded to the filter. The fluid enters the center chamber of the filter and passes through the inner tube of the filter to the filter element by means of perforation holes. Foreign matter is filtered out by the filter element, and the fluid leaves the element through perforation holes in the outer tube. When the element becomes saturated with foreign matter, the filter acts as its own relief valve and unseats at 20 to 25 psi above normal return pressure which allows fluid to bypass the filter and enter the reservoir.

C. Hydraulic Reservoir Air Pressure Regulator-Aspirator (See Figure 5.)

- (1) The reservoir air pressure regulator-aspirator is a jet-type air pump, regulated by a pressure-sensitive shutoff valve. The unit pressurizes the hydraulic reservoir with air to the operating pressure range of 30 to 35 psi. The regulator-aspirator is located on the top inboard side

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

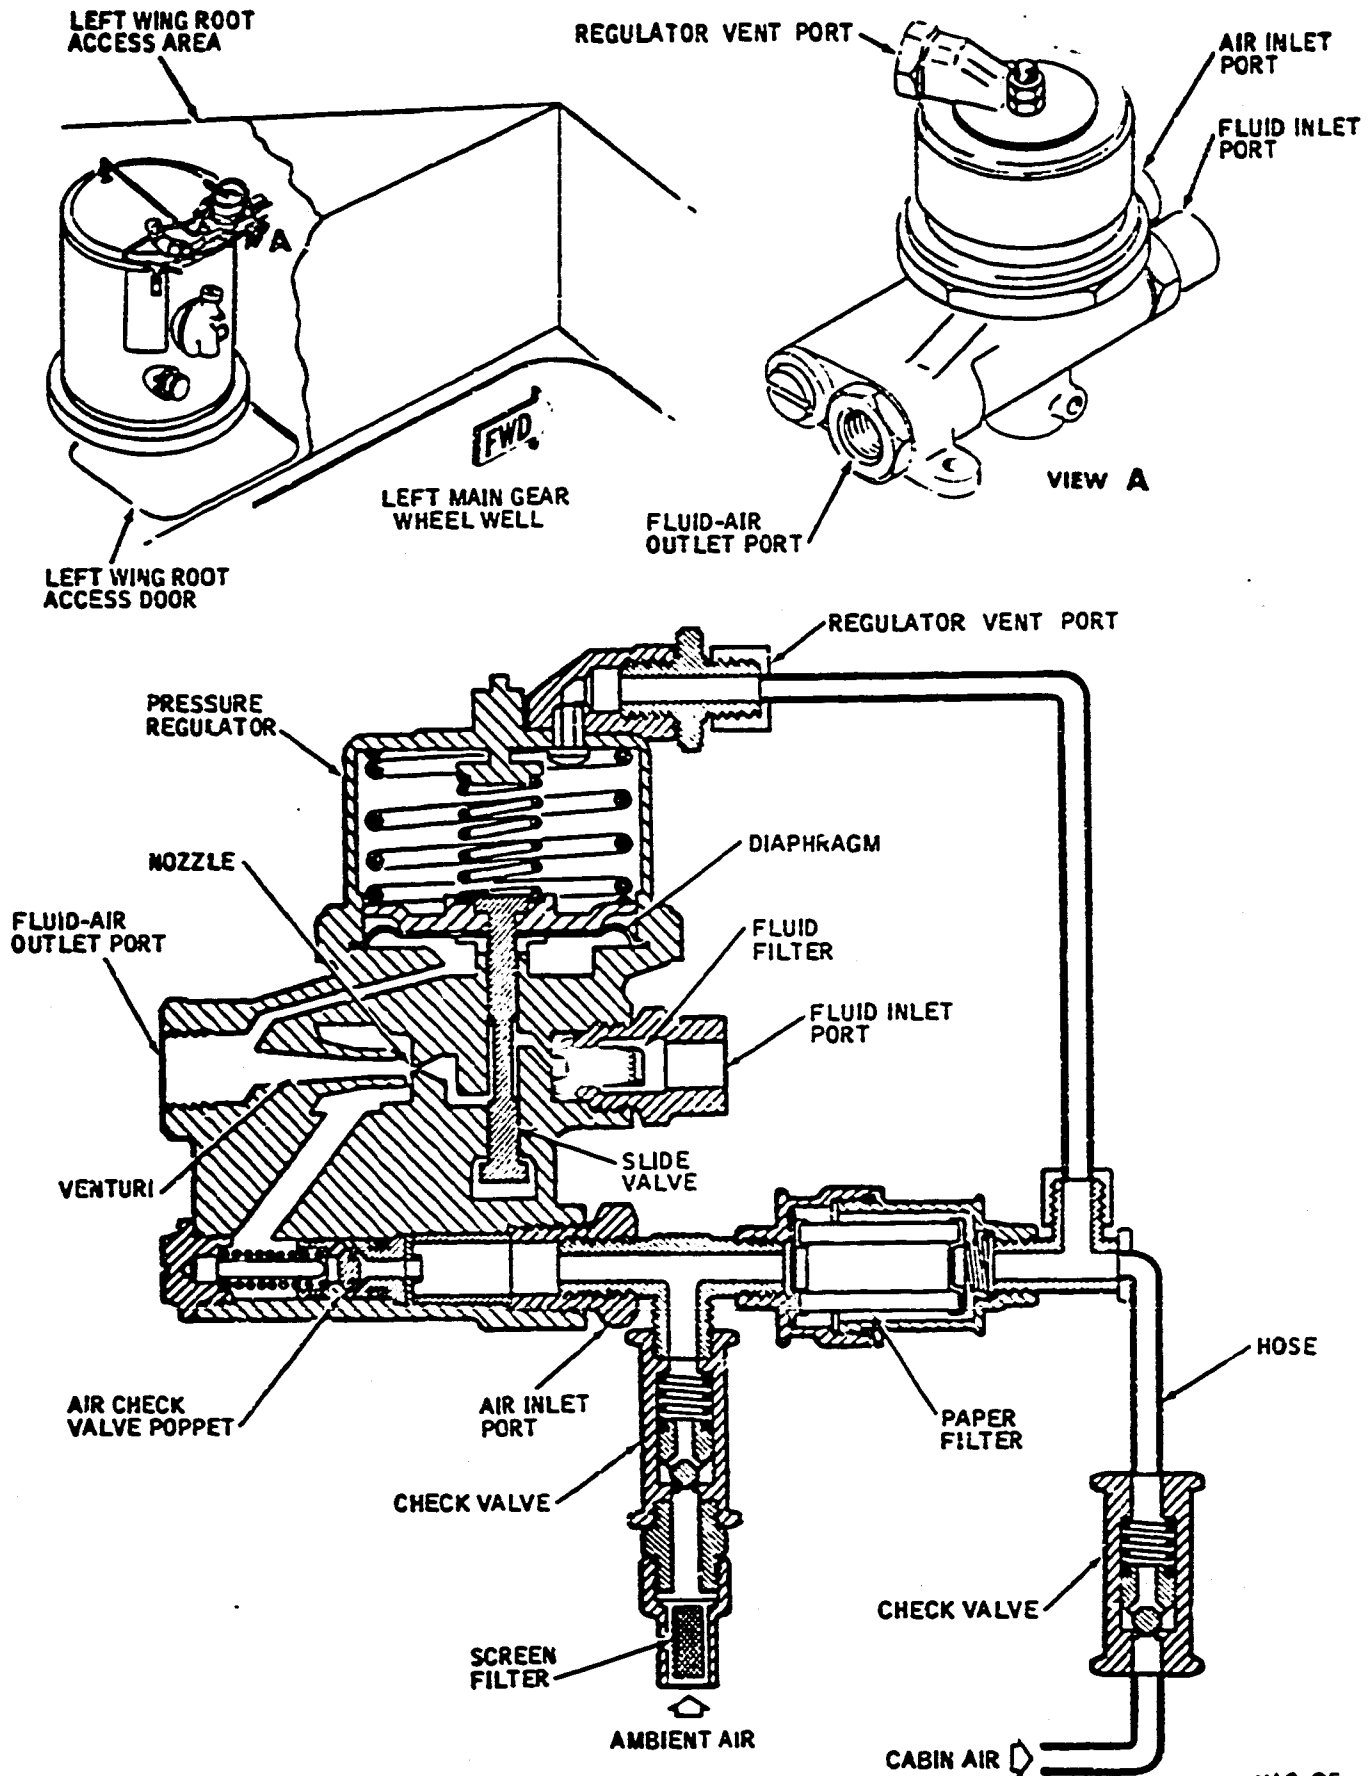

Reservoir Air Pressure Regulator-Aspirator -- Schematic  
 Figure 5

Jun 15/67

Printed in U.S.A.

HA2-25

29-10-0  
 CODE 4  
 Page 13

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

of the reservoir and is mounted on the reservoir retainer ring. Access to regulator-aspirator is through the left wing root access door.

- (2) The regulator-aspirator assembly consists of a main aspirator body and a regulator housing. The main aspirator body has two inlet ports and one outlet port. The ports are permanently identified inlet, outlet, and air inlet. The plug for an air check valve is located near the outlet port. A chemically treated paper filter is installed near the aspirator body air inlet port in the air line from the pressurized cabin area. A metal screen filter is installed on the check valve which tees into the aspirator body air inlet port.
- (3) The reservoir air pressure regulator-aspirator operates basically with a jet pump action which is regulator controlled. Fluid enters the assembly through the fluid inlet port where it is filtered and then ported through the valve assembly of the regulator. During normal operation, when air pressure at the outlet port is under 30 psi, the valve is open, porting fluid to the nozzle. The orifice in the nozzle sprays the fluid through the venturi of the outlet port, creating a vacuum in the chamber around the venturi. When the vacuum becomes great enough to create a pressure differential of approximately 1 psi, ambient air opens the air check valve. The air is ported to the chamber around the venturi and is siphoned, with the fluid, through the outlet port.
- (4) Hydraulic fluid inlet pressure at the engine-driven hydraulic pumps is improved at high altitude operation by supplying pressurized filtered cabin air to the reservoir regulator-aspirator instead of ambient outside air. Part of the inlet air is diverted by a tee fitting to the regulator chamber to provide a more positive regulating force on the diaphragm than would be obtained with low ambient pressures. The chemically treated paper filter, installed in the regulator-aspirator air supply line from the cabin, removes smoke tars and impurities from the pressurized cabin air. The steel mesh screen filter, installed on the check valve which tees into the regulator-aspirator air inlet port downstream of the paper filter, removes dust, dirt, and foreign particles from the ambient air and serves as a standby to supply filtered air in event the paper filter is clogged.
- (5) As pressure in the reservoir builds up, back pressure is bled from the outlet port to the diaphragm chamber. The reaction on the diaphragm begins to move the slide valve to cut off the fluid flow. At 30 to 35 psi of back pressure, the diaphragm completely closes the slide valve, cutting off the flow of fluid. If there is a regulator malfunction, the aspirator stalls when outlet pressure reaches a maximum of 40 psi.
- (6) The aspirator is capable of pressurizing the reservoir to 30 to 35 psi in approximately 4 minutes at altitudes from sea level to 15,000 feet, when fluid is ported through the nozzle at 0.5 gpm at 3000 psi.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

**D. Regulator-Aspirator Air Filters (See Figure 6.)**

- (1) The regulator-aspirator air filters remove ambient and cabin air impurities from the air which is used to pressurize the main hydraulic system reservoir. The filtering system is composed of two filters. One of which is a paper element filter, installed directly in the cabin air supply line near the regulator-aspirator. The other filter is a fine mesh, screen-type filter, installed on a check valve and positioned at right angles to the regulator-aspirator air inlet port. The screen filter, in addition to providing an immediate supply of ambient air during ground operations, serves as a standby air inlet to preclude air starvation of the regulator-aspirator in the event the paper element filter becomes clogged.


**E. Hydraulic Reservoir Relief Valve (See Figure 7.)**

- (1) The reservoir relief valve and the air pressure aspirator-regulator keep the reservoir pressurized to normal operating range. The valve relieves excess air pressure which may build up in the reservoir through thermal expansion in the system. The valve has an inlet port and an outlet port and consists, internally, of an inlet port seat and a spring-loaded poppet.
- (2) The relief valve is installed in the overboard vent line downstream of the hydraulic reservoir air bleed valve. In the event that excess pressure builds up in the reservoir, the poppet will start to relieve at 45 (+5, -0) psi. Full flow of 10 gpm is attained at 80 psi maximum. The poppet reseats at 90 percent of the opening pressure.


**F. Hydraulic Reservoir Air Bleed Valve (See Figure 8.)**

- (1) The hydraulic reservoir air bleed valve and pressure gage are located on the aft side of the rear spar in the left main gear wheel well, inboard of the hydraulic reservoir air chamber. The bleed valve and gage are installed in the overboard vent line, between the reservoir air chamber and the reservoir relief valve.
- (2) The bleed valve is used to relieve the reservoir air pressure prior to disconnecting lines or components in the hydraulic system. The pressure gage provides a ready indication of the hydraulic reservoir air pressure and is used in conjunction with the bleed valve to indicate the air pressure status.
- (3) The air inflation valve is installed on the same fitting as the bleed valve and pressure gage. The air inflation valve is used to manually charge the reservoir with air or dry nitrogen.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

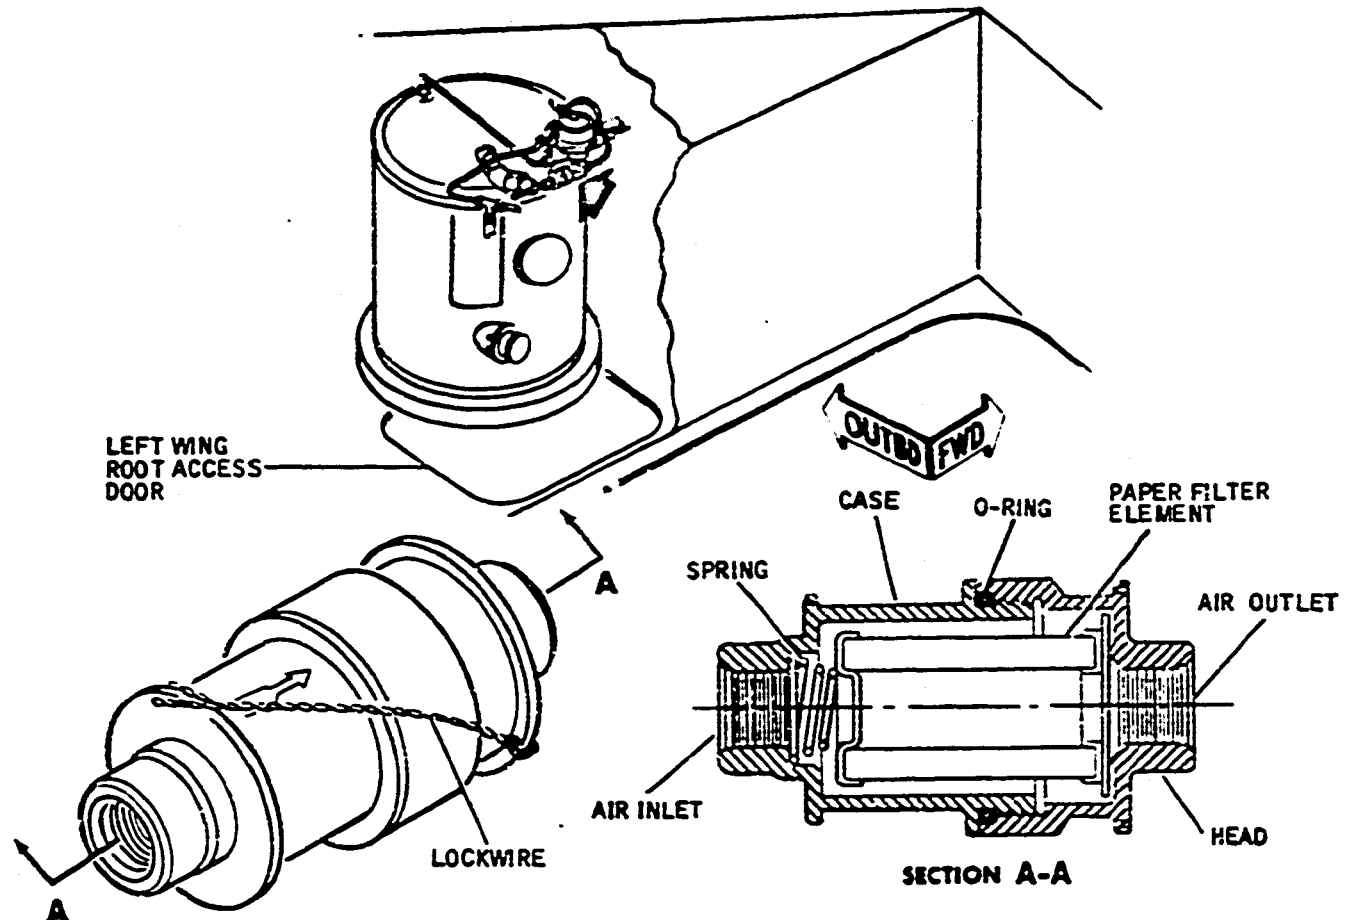

PAPER ELEMENT FILTER

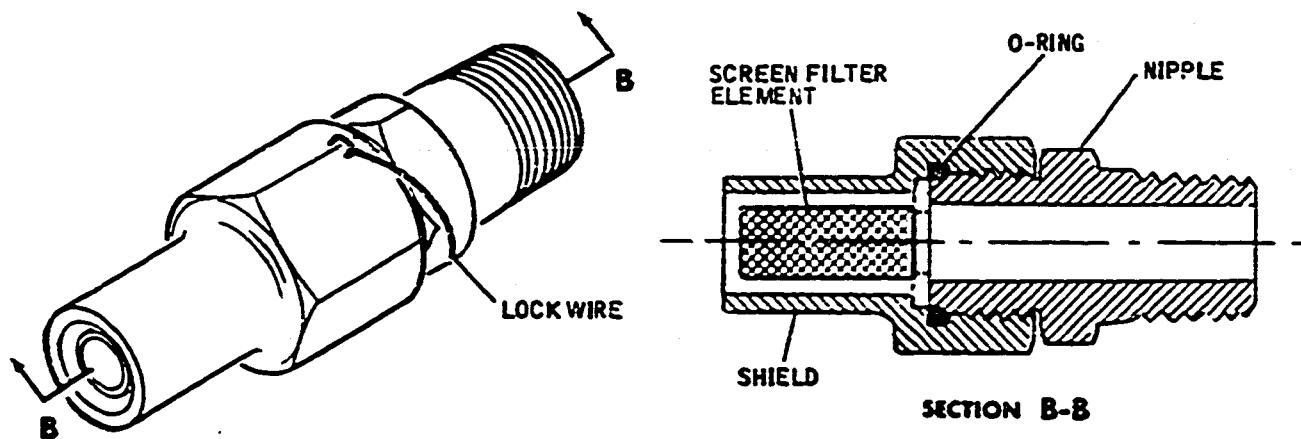


SCREEN FILTER

HA2-35

Regulator-Aspirator Air Filters -- Cutaway View  
 Figure 6

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

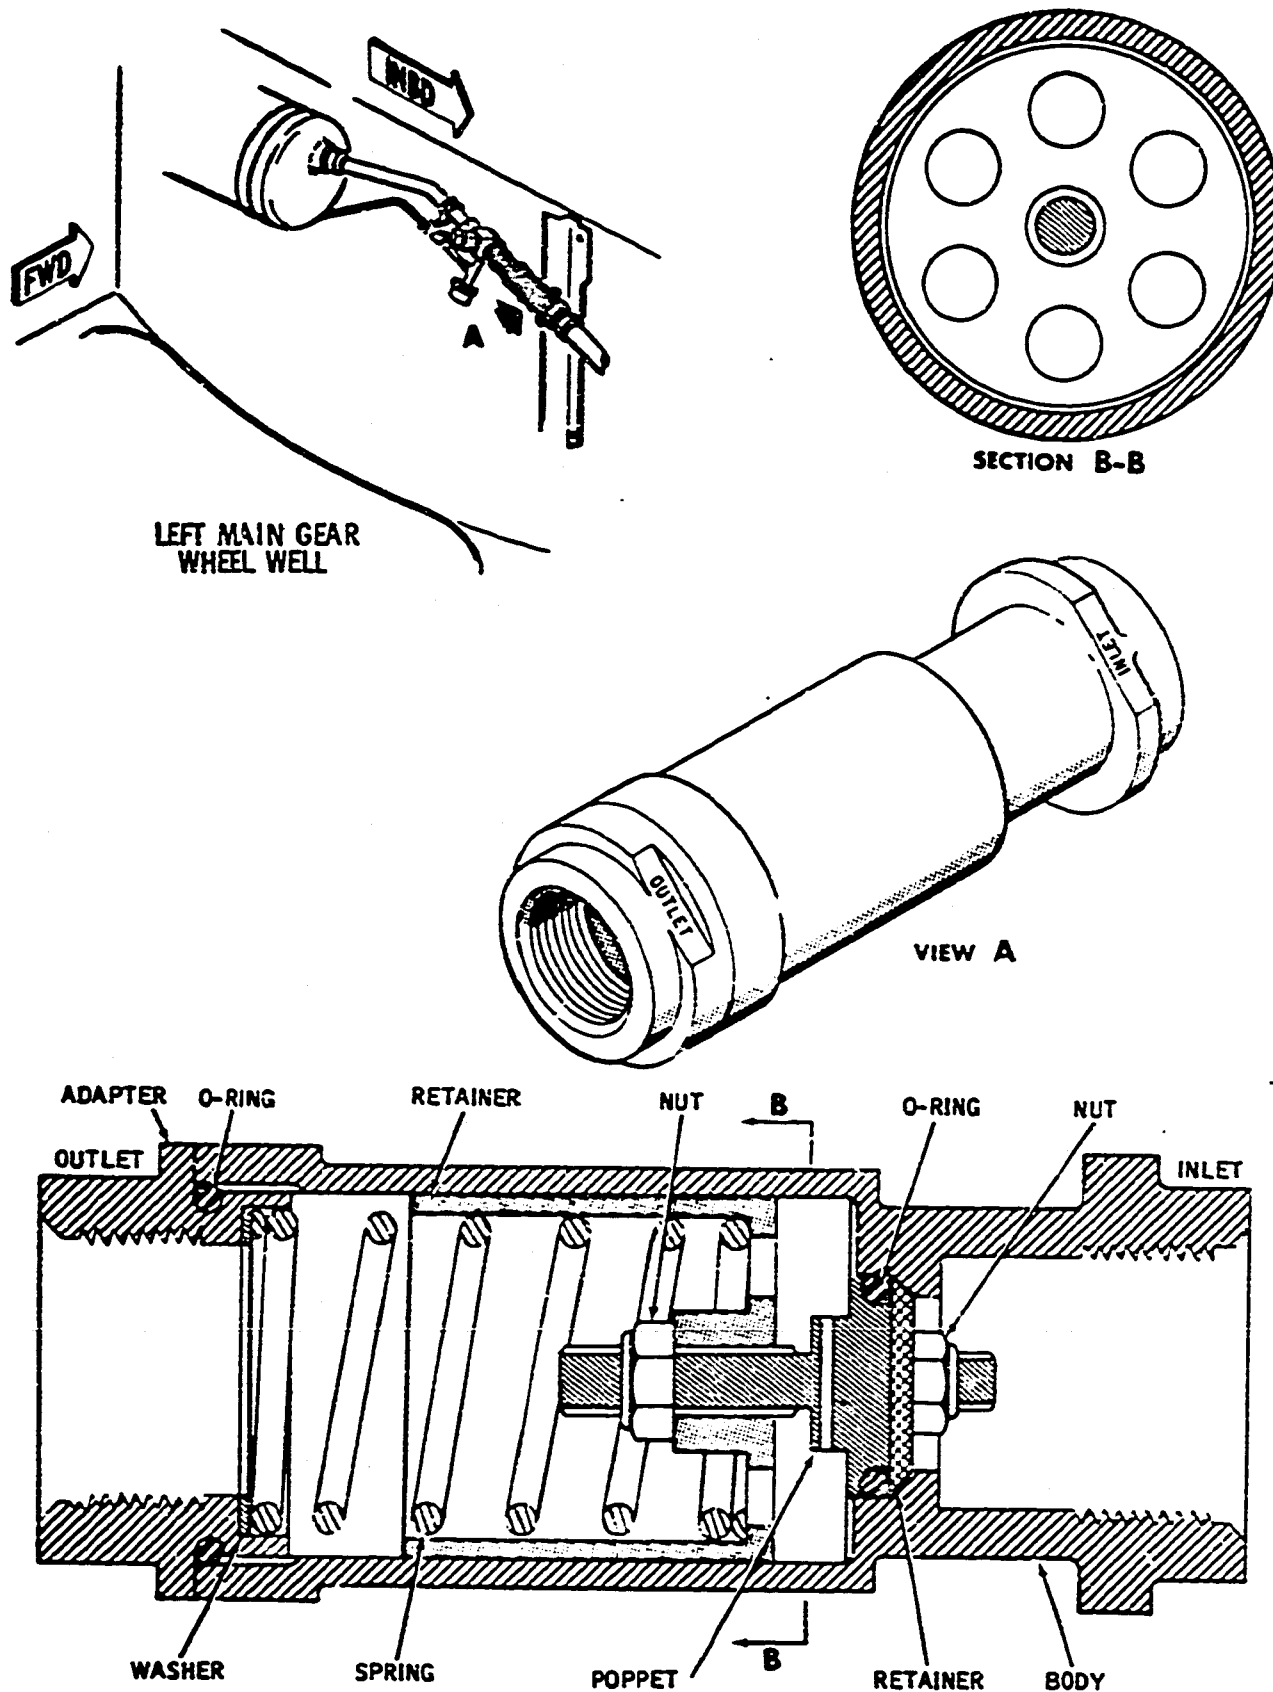

Hydraulic Reservoir Relief Valve  
 Figure 7


HA2-17

29-10-0  
 CODE 4  
 Page 17

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

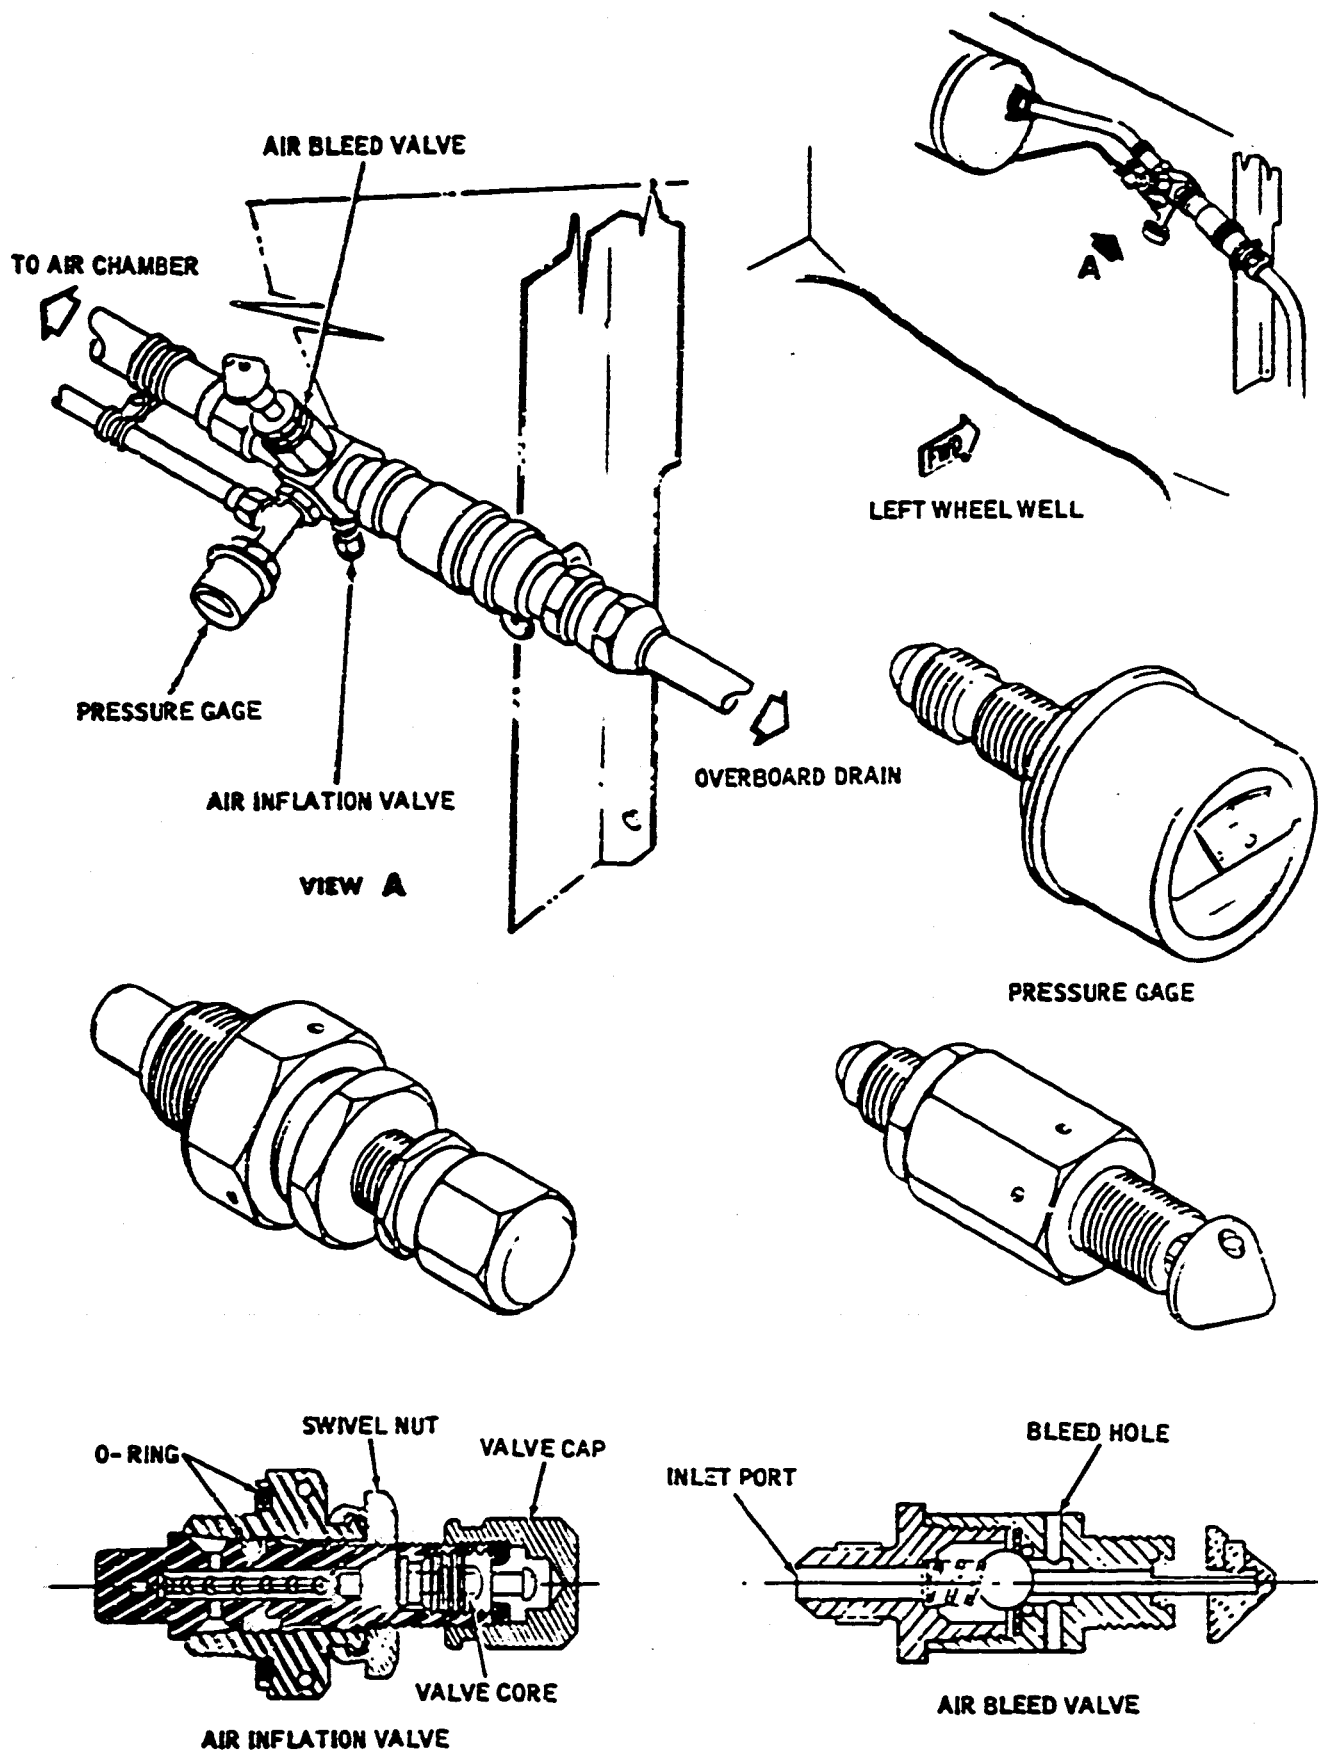

Reservoir Air Bleed Valve, Air Inflation  
 Valve, and Pressure Gage  
 Figure 8

HA2-32

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

G. Hydraulic Reservoir Vacuum Breaker Check Valve (See Figure 9.)

- (1) The hydraulic reservoir vacuum breaker check valve is installed on the regulator-aspirator mounting bracket, and connects to the tee fitting at the top of the reservoir. The valve is vented to ambient air. The purpose of this valve is to maintain atmospheric pressure in the reservoir, allowing hydraulic fluid to flow to the auxiliary hydraulic pump in the event of a failure of the reservoir pressurization system. The failure, or breakdown, of the pressurization system could cause a fluid starvation at the auxiliary hydraulic pump because of vacuum buildup in the reservoir.

H. Hydraulic Reservoir Air Chamber

- (1) The hydraulic reservoir air chamber is a small, cylindrical tank with a capacity of 700 cubic inches. It has two ports, an inlet port at the bottom of the chamber and an outlet port in one end of the chamber. The inlet port mounting boss is fitted with a drain plug. The air chamber is installed on the aft side of the rear spar in the left main gear wheel well, inboard and above the hydraulic reservoir filler assembly. Access to the air chamber is through the left main gear inboard door.
- (2) The air chamber provides for greater fluid capacity in the hydraulic reservoir by providing air and foam space for the reservoir in a separate container. Air pressure in the chamber is maintained by the regulator-aspirator and the air relief valve. The air pressure in the chamber and reservoir can be relieved, when desired, by the air bleed valve located downstream of the chamber. The air chamber is mounted higher than the reservoir filler assembly, to prevent overfilling of the reservoir from reducing the available air space and to prevent fluid from being vented overboard through the reservoir relief valve.

I. Hydraulic Reservoir Port B Return Check Valve (See Figure 10.)


- (1) The reservoir port B return check valve is installed in port B of the reservoir to prevent reverse flow of hydraulic fluid from the reservoir to the return line. The check valve is located on the reservoir in the left wing root and is accessible through the left wing root access door.
- (2) Externally and internally, the port B check valve is a standard-type check valve with a 1500-psi rating. A nominal pressure of approximately 8 psi unseats the poppet, permitting fluid to flow through the valve. When the reservoir pressure exceeds the return line pressure, the poppet will seat and reverse fluid flow will be prevented.

J. Engine Hydraulic Fire Shutoff Valve (See Figures 11 and 12.)

- (1) The engine hydraulic fire shutoff valve is a gate-type, mechanically controlled valve, installed in the supply line of each engine-driven hydraulic pump. The engine hydraulic fire shutoff valve is actuated from the flight compartment to prevent the flow of hydraulic fluid into the engine section.




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

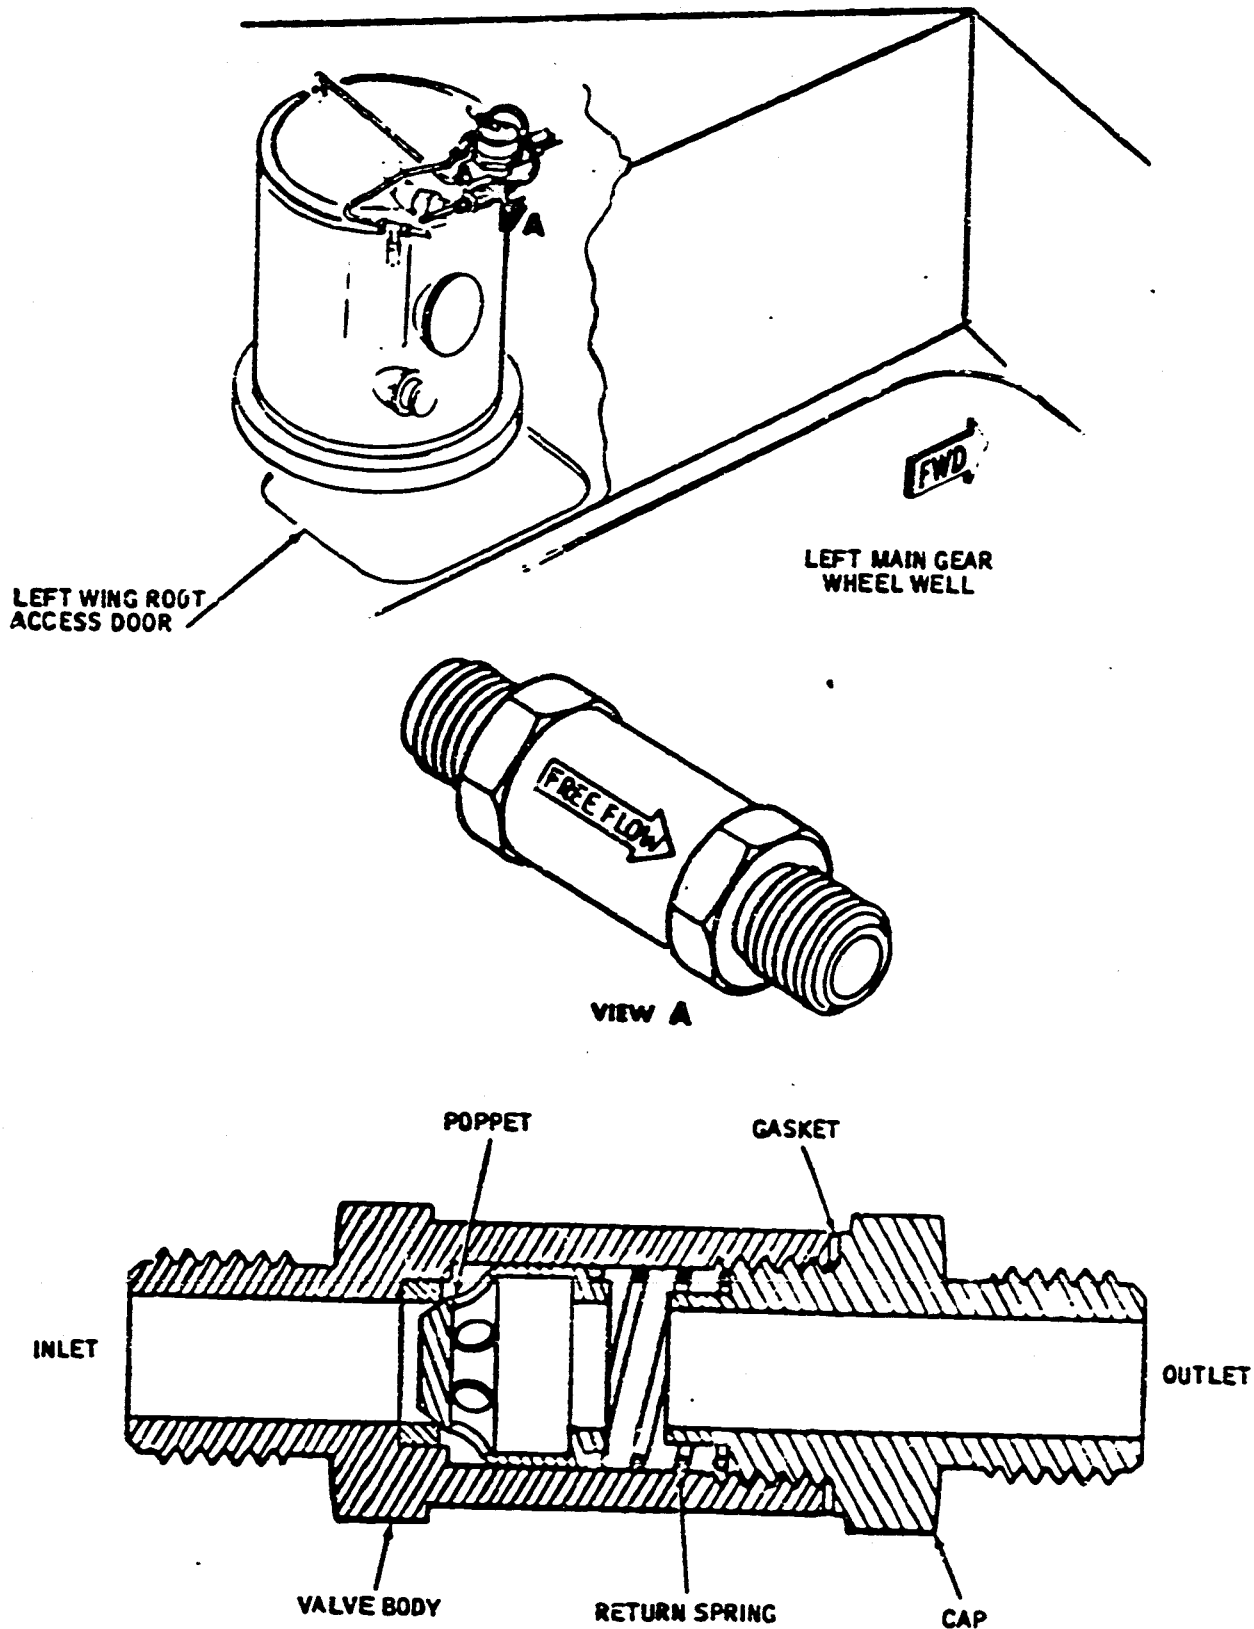


Hydraulic Reservoir Vacuum Breaker Check Valve  
 Figure 9

HA2-33

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

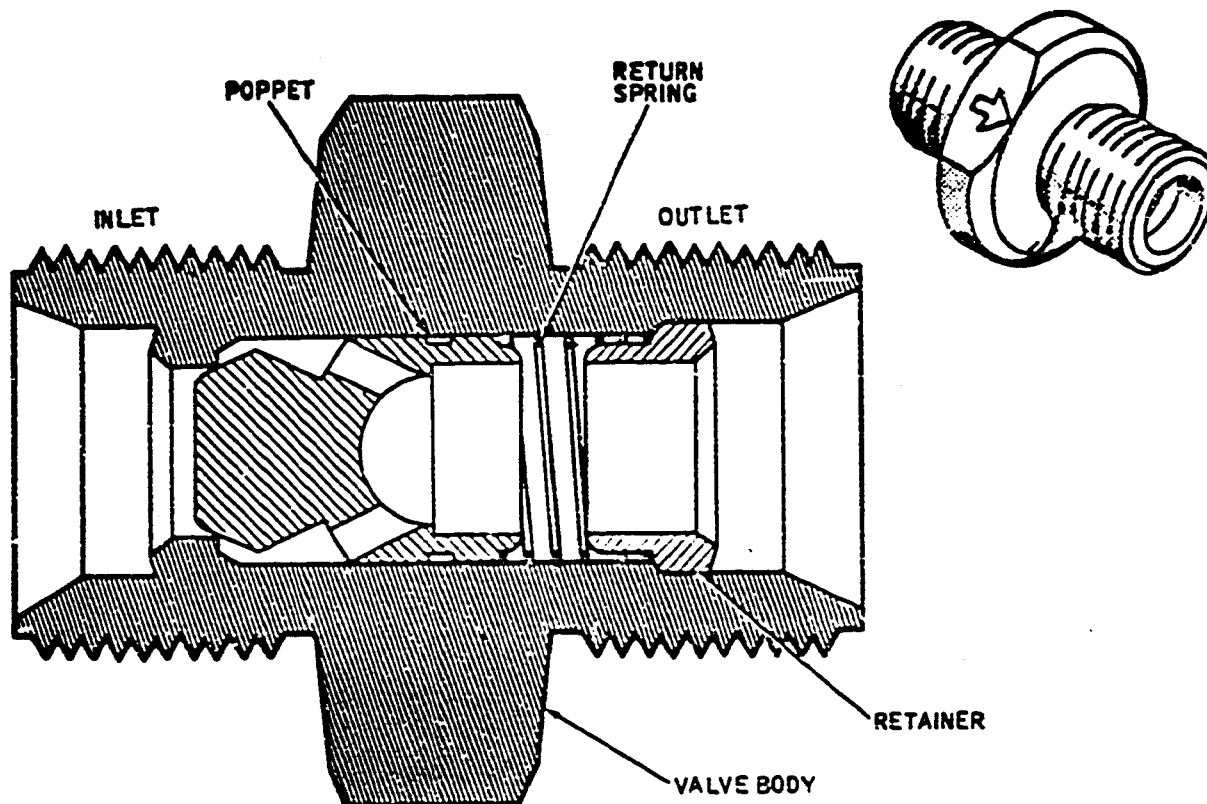

MINIATURE CHECK VALVE

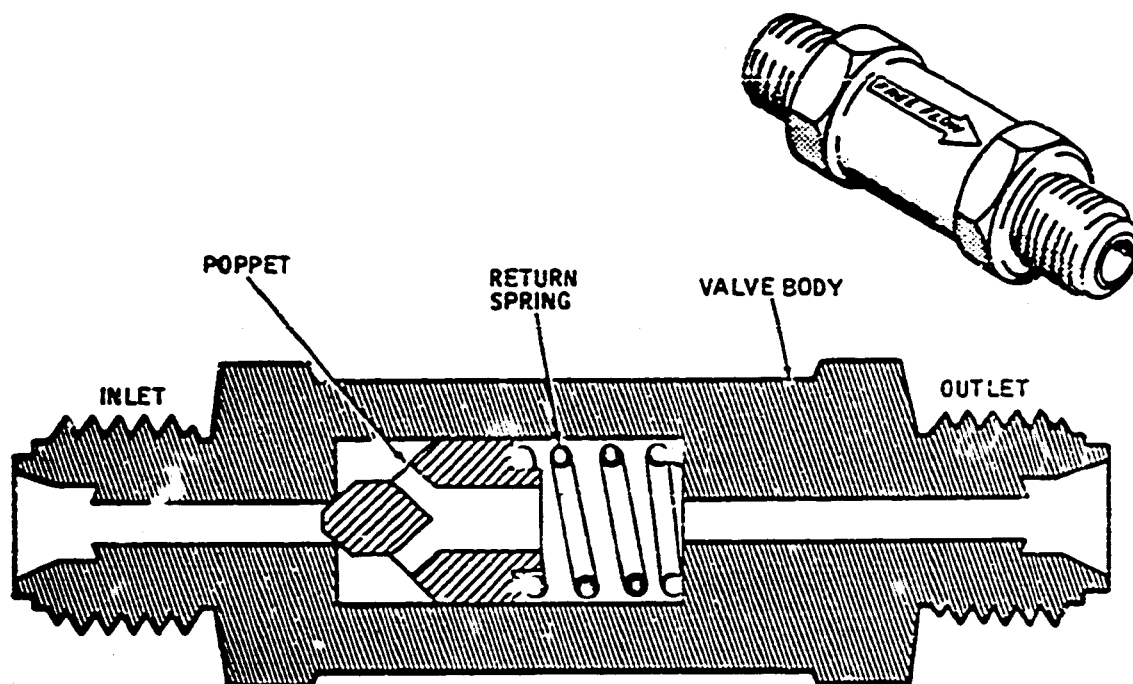

STANDARD CHECK VALVE

Hydraulic Check Valves -- Typical  
 Figure 10


HA2-18A

29-10-0  
 CODE 4  
 Page 21

Oct 1/67

Printed in U.S.A.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

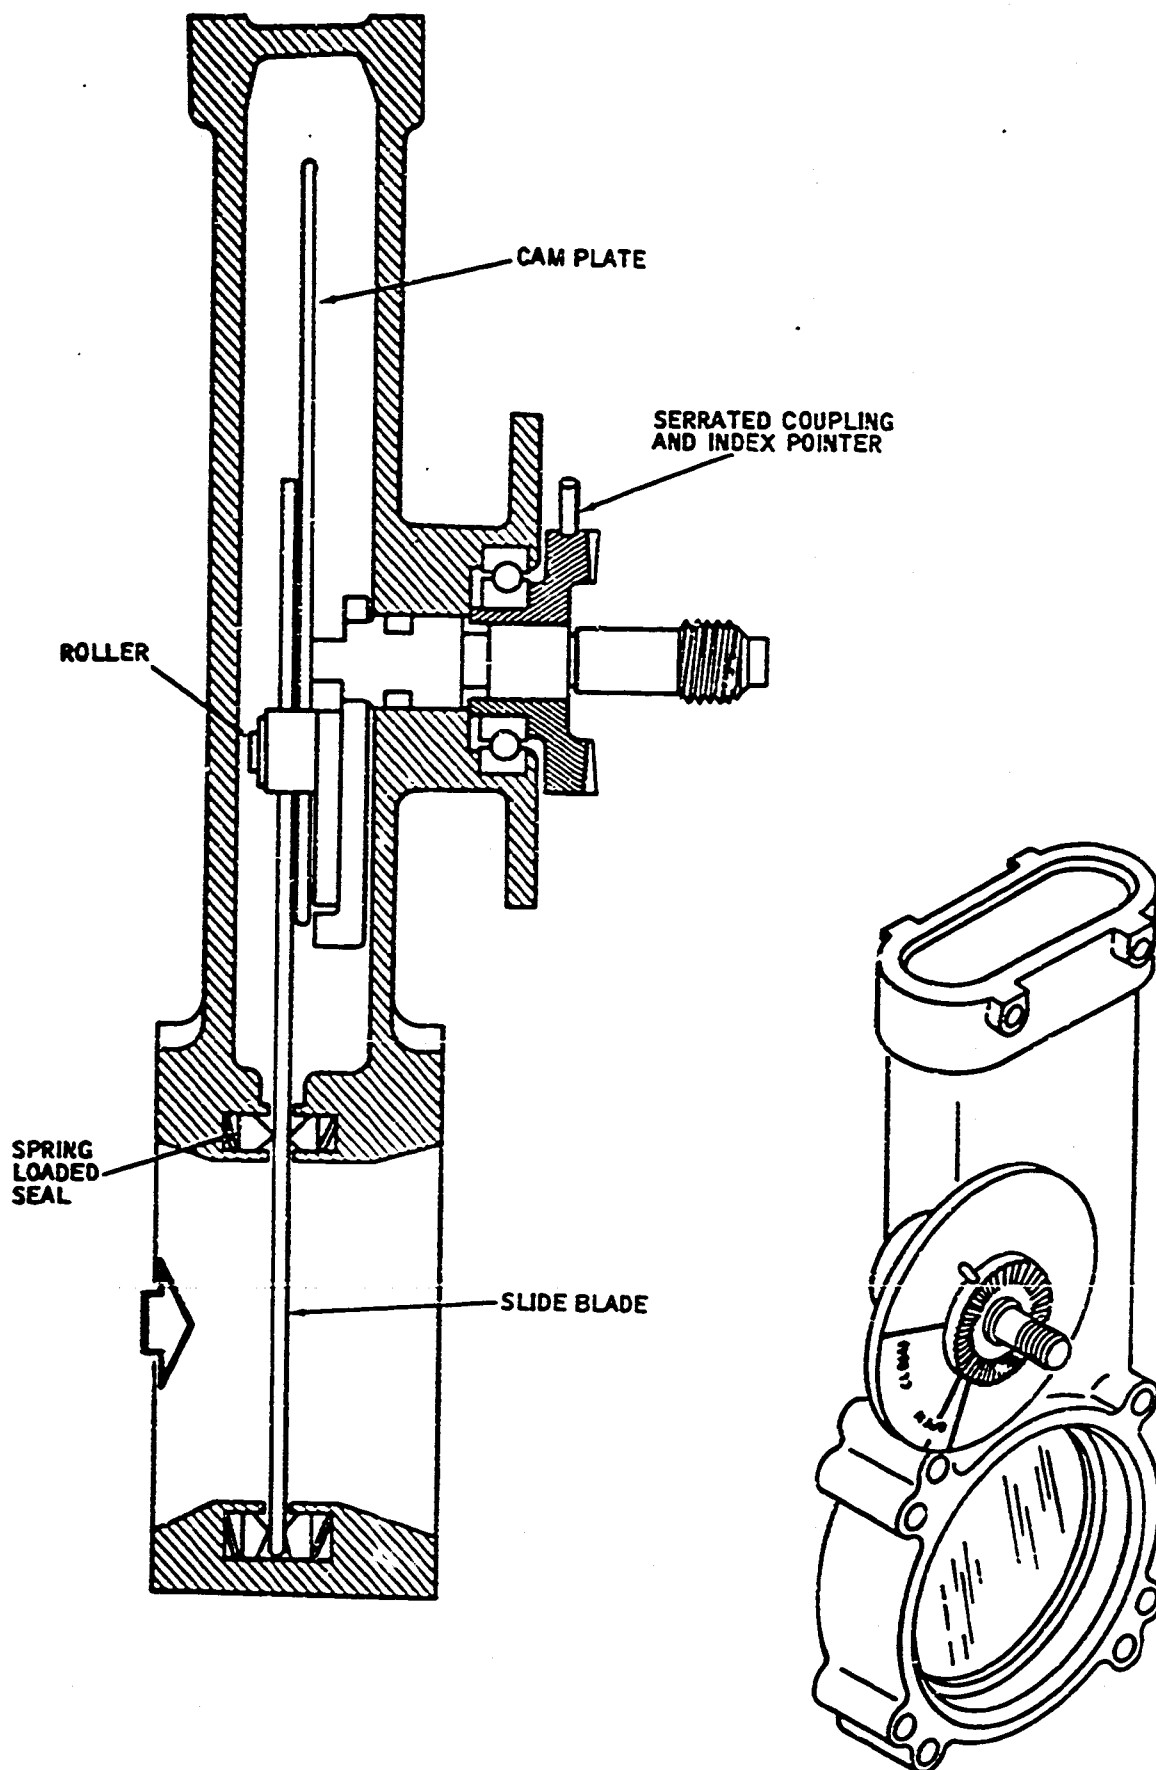


Engine Hydraulic Fire Shutoff Valve -- Schematic  
Figure 11

HA2-2209

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

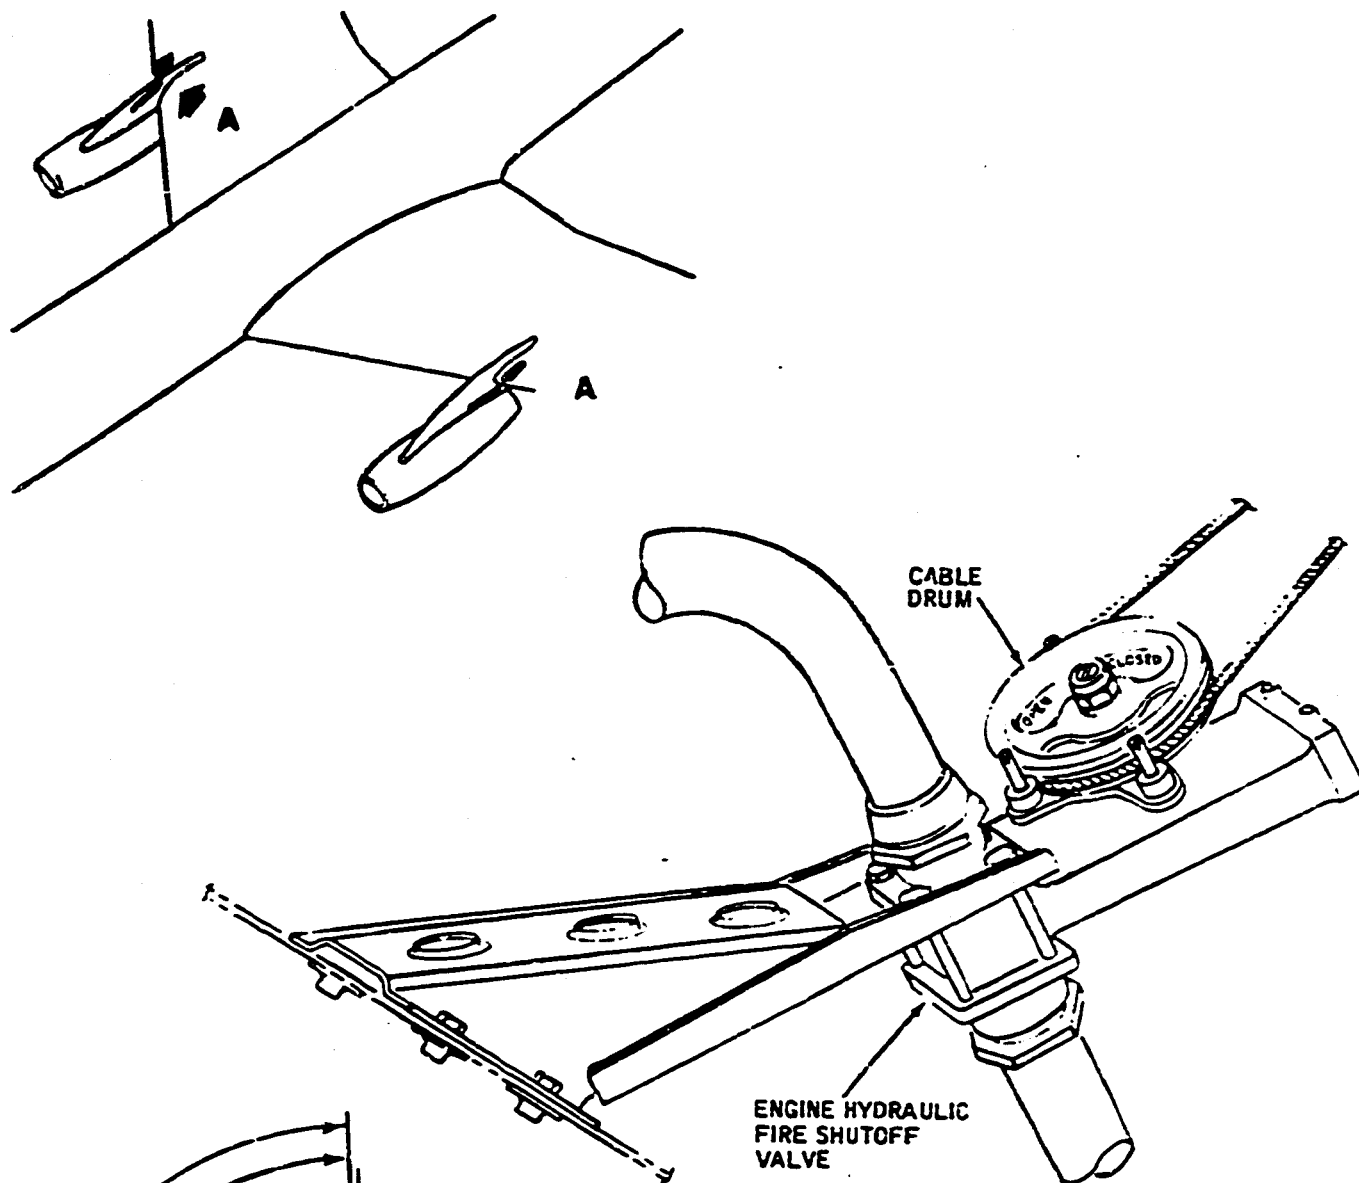

VIEW A

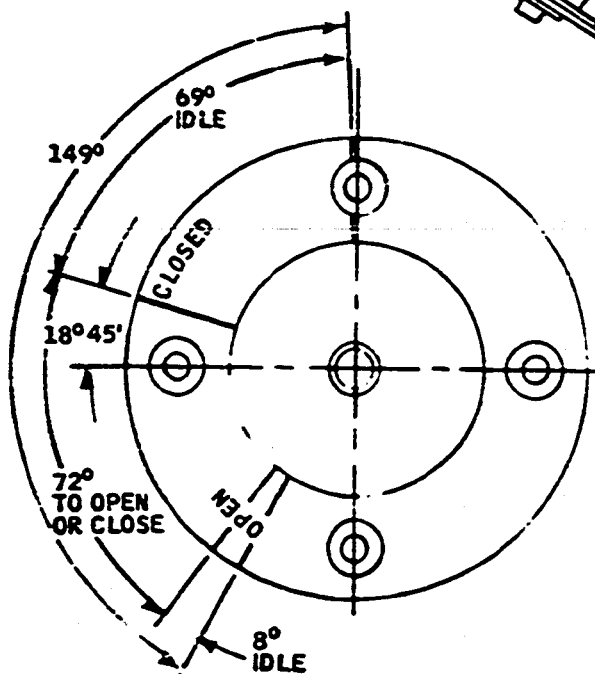

VALVE POSITION DIAGRAM

Engine Hydraulic Fire Shutoff Valve  
 Figure 12

HA2-22

29-10-0  
 CODE 4  
 Page 23

Jun 15/67

Printed in U.S.A.




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The engine hydraulic fire shutoff valve is mounted on a 2-piece channel bracket which is installed inside the wing leading edge, aft of the firewall of each inboard pylon. Access to the valve is through the access door located on the lower side of the wing leading edge, outboard of either the left or right inboard pylon. Each valve is located approximately 30 inches inboard of the access door.
- (3) Internally, the valve consists of a valve arm, valve arm link, cam plate, and slide blade. The valve arm link attaches to the valve arm and is allowed to swivel through an arc in relation to the valve arm. The link has a stop that will contact the arm when the two have traveled to the valve closed, full overtravel position. In the full open pretravel position, the link contacts the arm stop.
- (4) A roller attached to the end of the link rides in, and extends through, a J-shaped slot in the cam plate. The rotation of the valve arm causes the link roller to follow the cam slot, allowing the arm and link to move through independent arcs.
- (5) The slide blade (gate of the valve) is slotted near the one end and also receives the link roller extending through the cam slot. The slide blade is positioned parallel to the cam plate and is guided by two grooves in the housing. This will allow the blade to open or close through porting of the valve by the action of the arm and link. The cam plate is pinned to the valve shaft, securing it rigidly in two positioning grooves in the housing. A pin-indicator is provided to relate valve position to a reference plate placarded open and closed.
- (6) The engine hydraulic fire shutoff valves are cable actuated by the fire control handles, located on the overhead switch panel in the flight compartment. When the fire control handle for either inboard engine is moved, the cable system rotates the drum which is attached to the corresponding shutoff valve shaft. This action extends the valve blade into the fluid passage to block the flow of fluid. The valve operates from open to close by clockwise rotation of the cable drum. The valve gage will idle during the first 8 degrees of rotation of the cable drum, and then will close in the next 72 degrees. The cable drum will continue to rotate the shaft for an additional 69 degrees after the gate valve is closed, locking it overcenter. Total travel of the cable drum is 149 degrees.

K. Engine-Driven Hydraulic Pump (See Figure 13.)

- (1) A variable-displacement, pressure-compensated, engine-driven hydraulic pump is installed on each inboard engine. The pump incorporates a solenoid bypass feature for reducing the output of the pump. The bypass valves are controlled by two engine hydraulic pump switches in the flight compartment. The switch for the hydraulic pump on engine No. 2 is placarded left, on and bypass. The switch for the hydraulic pump on

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

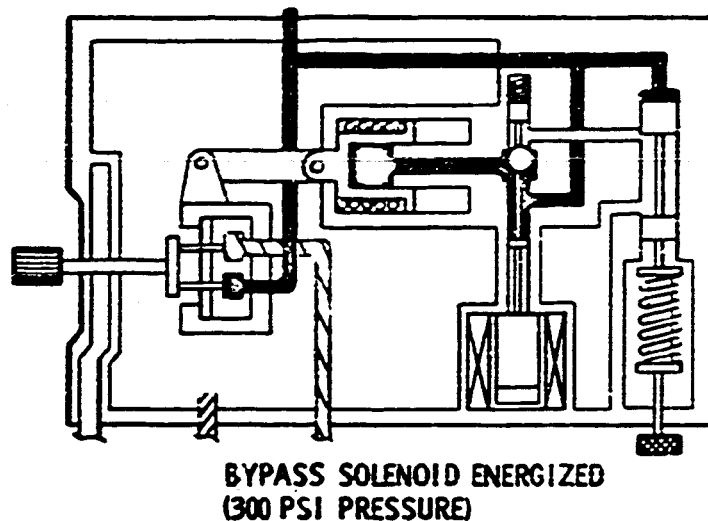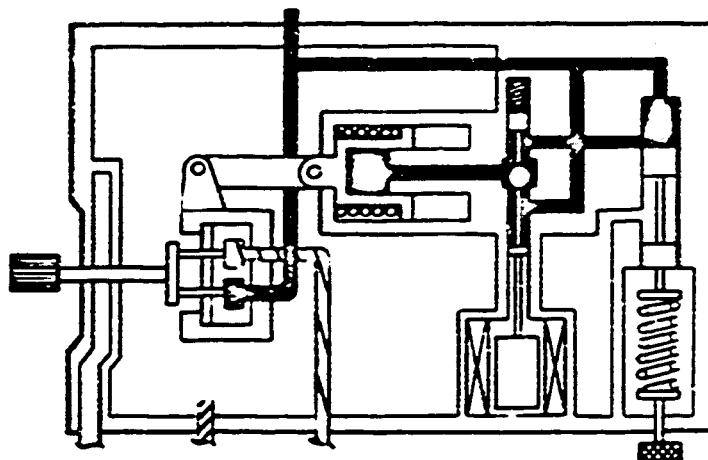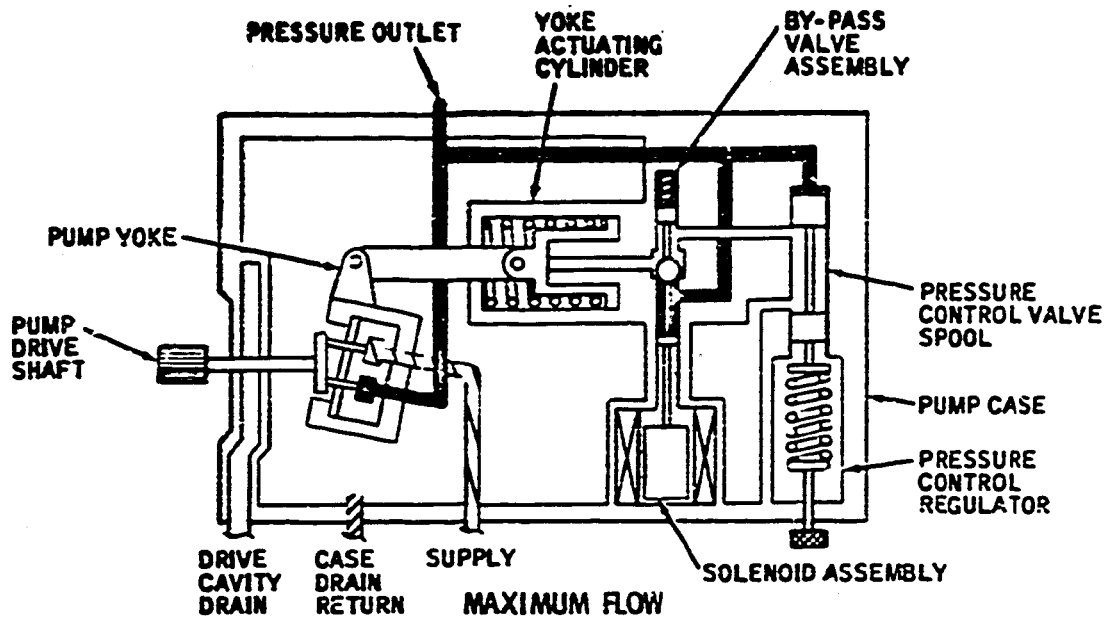

■ PRESSURE  
 ▨ CASE DRAIN  
 ▩ SUPPLY  
 □ DRIVE CAVITY DRAIN

HA2-837

Engine-Driven Hydraulic Pump Pressure Flow -- Schematic  
 Figure 13

29-10-0  
 CODE 4  
 Page 25

JUN 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

engine No. 3 is placarded right, on and bypass. When either of the two engine hydraulic pump control switches is placed in the bypass position, the bypass valve solenoid for that hydraulic pump is energized and the pump pressure decreases to approximately 300 ( $\pm 100$ ) psi. When either switch is in the on position, the control circuit to the corresponding bypass valve is open and the hydraulic pump operates normally in the pressure range of 2850 to 3050 psi. The pump provides a continuous, nonpulsating flow of hydraulic fluid, under pressure, to the hydraulic manifolds for distribution throughout the hydraulic system. Each of the engine-driven pumps is located on the accessory drive pad of the inboard engines. These pumps are accessible through the doors on the right side of the nacelles.

- (2) Three case drain ports are provided: two are on the yoke assembly housing, and the third is on the casing for the pressure control valve, adjacent to the inlet port fitting. The case drain port on top of the yoke assembly housing is full of fluid at all times. This drain connection is ported back to the low-pressure return port at the reservoir. The inlet port fitting is on top of the pump housing and the outlet port fitting is opposite to it on the bottom of the housing.
- (3) The yoke control piston casing is an integral part of the pump case. Four self-locking nuts are used to hold the piston casing end-plate in position. The bypass valve assembly, consisting of the valve body and a solenoid assembly, is mounted externally on the pump case, under the yoke control piston casing. This solenoid valve is provided with an electrical connector. A pressure control regulator is installed on the bypass valve body by means of four bolts. This regulator is cylindrical and is provided with an external adjustment screw. A lock screw is used to retain the adjusting screw after the adjustment has been made.
- (4) Hydraulic fluid enters the pump through an inlet port. Passages in the yoke carry the fluid to the valve plate, which ports the fluid to the cylinder block. The nine pistons in the cylinder block are actuated by the rotating drive shaft, thereby pressurizing the fluid. From the cylinder block, the fluid is routed to the outlet port of the yoke and then to the pump pressure lines. The pressure control regulator is actuated by pump output pressure that is bled to the regulator. The regulator meters the pressure to the yoke control piston, which positions the yoke.
- (5) The maximum pump pressure is determined by the adjustment of the pressure control regulator. The pressure control regulator allows maximum output flow (22.5 gpm at 3500 rpm) up to 2850 psi system pressure. When this pressure is reached, the yoke assembly starts to move towards the zero flow position.
- (6) Pressure continues to rise until the displacement is reduced from maximum flow to zero flow and 3000 psi is reached. The pump pressure stabilizes in accordance with system demand.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

L. Engine-Driven Hydraulic Pump Check Valves (See Figure 10.)

- (1) Two check valves, rated at 3000 psi, are installed in the lines from each engine-driven hydraulic pump. One check valve is installed in the pressure line and the other is in the case drain line. The check valves in the pump pressure lines prevent reverse flow of hydraulic fluid through the pump, when the pump is inoperative or when external hydraulic pressure is supplied to the system. Access to the valves can be gained through an access door in the forward right apron of each inboard pylon. The valves are mounted on the exterior wall of the inlet box by means of the bulkhead fittings and retaining nuts.
- (2) Normal operating pressure will unseat the poppet, and fluid will flow through the valve. When pressure down-stream of the valve exceeds pressure from the pump, the pressure, with the aid of the return spring, will seat the poppet. This prevents reverse flow of hydraulic fluid through the pumps.

M. Engine-Driven Hydraulic Pump Case Drain Filter (See Figure 14.)


- (1) A line-type, micronic filter, for use in a low-pressure hydraulic system, is installed in the engine-driven hydraulic pump case drain return line between the pump flow check valve and the hydraulic system reservoir. The case drain filter is installed on the aft surface of the rear spar opposite the leading edge of the inboard flap assembly. One filter is used for each engine-driven pump. Access is gained to the filter by lowering the flaps. A second check valve is installed adjacent to the filter in the downstream side of the case drain return line.
- (2) Externally, the filter is approximately 5 inches high and 2 inches wide, with ports marked inlet and outlet. The bowl is cylindrical in shape, with hex-shaped wrench flats at the lower end. A self-sealing, magnetic drain plug is installed in the bottom end of the filter bowl. The filter element is made of chemically treated paper.

N. Dual Filter and Relief Valve (See Figure 15.)


- (1) The hydraulic power system dual filter and relief valve consists of two filters and two relief valves installed in the same body. The unit filters the hydraulic fluid from the two engine-driven hydraulic pumps, and the pressure relief valves assure that excessive pressures do not build up in the pressure line from the pumps. The unit is located in the left main gear wheel well on the lower portion of the rear spar, approximately 1 foot outboard of the centerline shear web.
- (2) The unit consists of a casting with a flange-mounted pressure inlet port on each end. Two pressure outlets are located on the top of the casting. One outlet, centrally located, is the main pressure outlet to the system selector valve. The other, located to the left of the selector valve




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

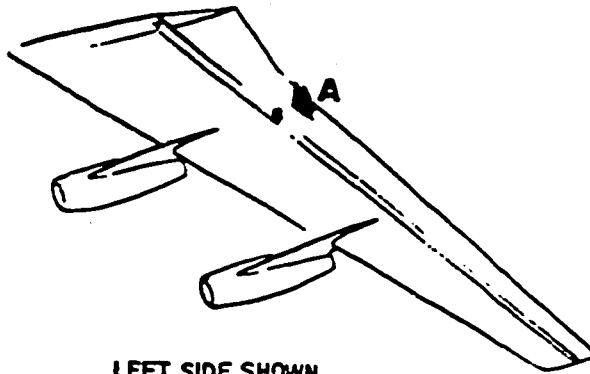

LEFT SIDE SHOWN  
 RIGHT SIDE OPPOSITE

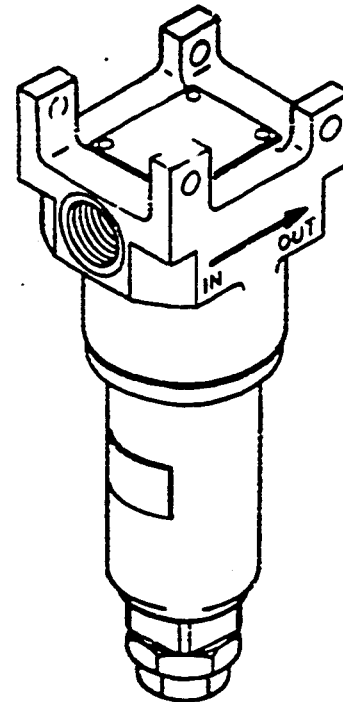


VIEW A

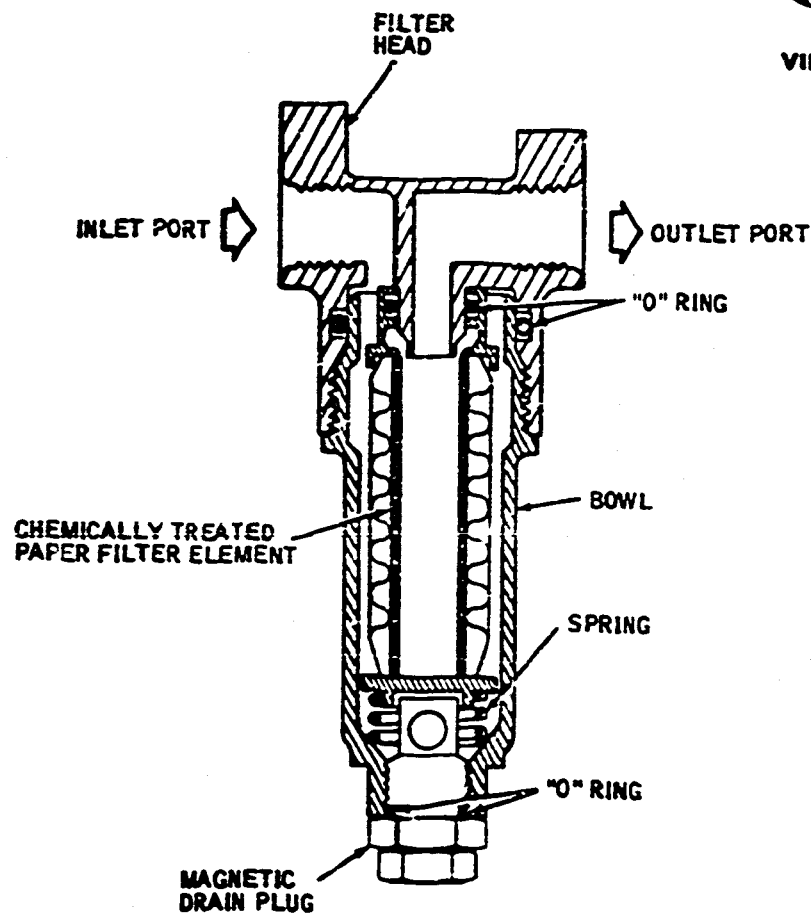

Engine-Driven Hydraulic Pump Case Drain  
 Filter -- Cutaway View  
 Figure 14

HA2-31

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

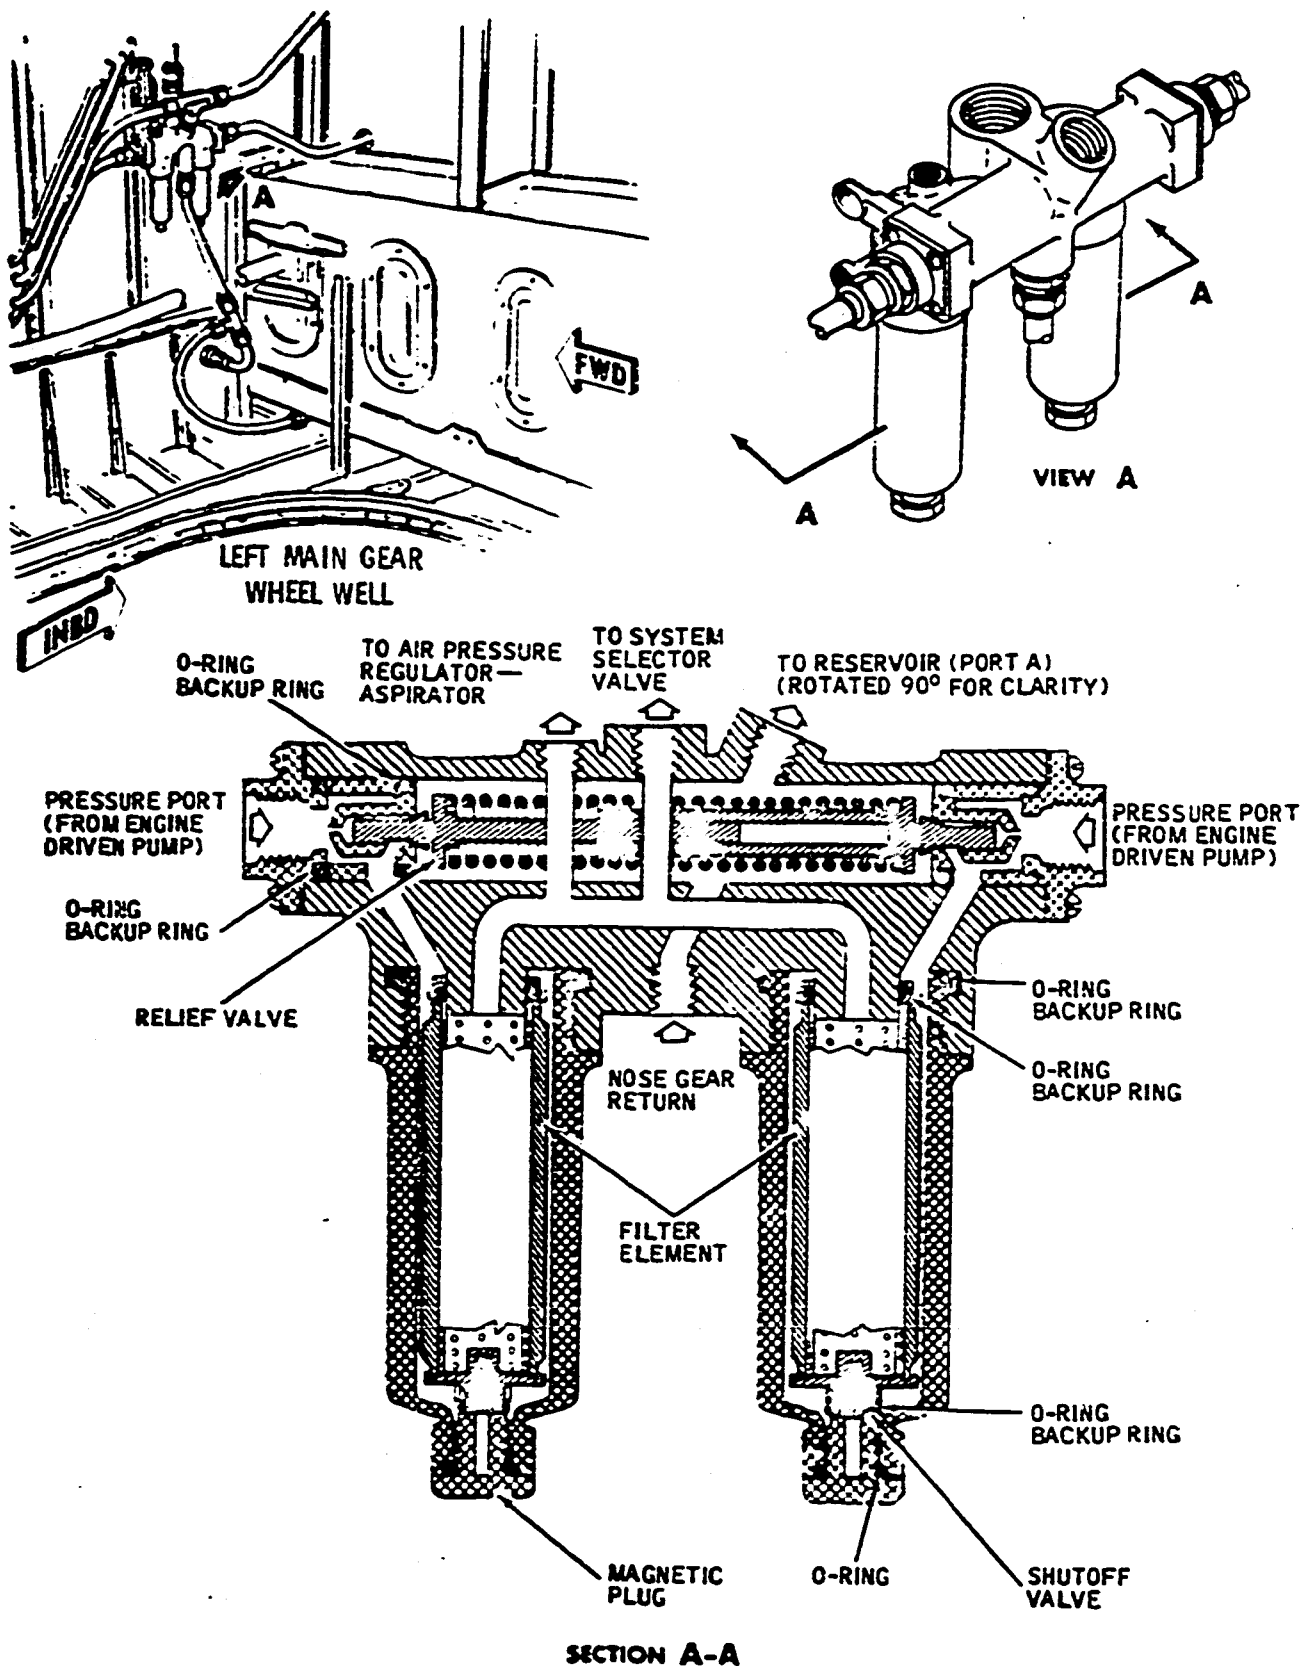

Dual Filter and Relief Valve -- Cutaway View  
 Figure 15

Jun 15/67

Printed in U.S.A.

HA2-20

29-10-0  
 CODE 4  
 Page 29

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


port, is the pressure outlet to the air pressure regulator-aspirator. The return outlet port for the relief valve portion of the unit is located on the center of the aft face of the body, canted upward. The nose gear return line is connected to a check valve installed in a return line port, located between the two filter bowls.

- (3) The pressure relief valves are located behind the pressure inlet ports and are connected to the return outlet port of the unit. The inlet from the nose gear return line is routed through the casting to the return outlet port.
- (4) If either of the filter elements becomes clogged, pressure above 3300 psi at the inlet port will unseat the poppet. Pressure above 3500 psi will allow full flow of 22.5 gpm to flow to the return port of the unit and back to the reservoir. The relief valves will reseal at approximately 3000 psi.
- (5) A check valve is installed in the system selector valve port to prevent reverse flow of pressure through the filter during auxiliary hydraulic pump operation.

0. System Selector Valve (See Figures 16 and 17.)

- (1) The system selector valve is a 3-position valve which permits directional control of fluid under pressure. The valve is installed on the left hydraulic power manifold and is accessible through the left main gear inboard door.
- (2) The selector valve pressure-to-system port and the return port are directly ported to the manifold. The engine pump pressure enters the valve through a port on the large end of the valve, and the auxiliary pump inlet and alternate ports are located at the top, toward the aft end of the valve. The valve control crank is attached to a push-pull rod and a cable sector.
- (3) Operation of the system selector valve is controlled by a lever located on the right side of the system engineer's control pedestal. When the control lever is moved to the selected position, the cable system, through the sector and crank, operates the valve positioning lever to drive the slide spool assembly to the selected position. When the control lever is placed in the general system (normal) position, the selector valve is actuated, causing hydraulic fluid to enter the valve through the system pressure port. The fluid is then directed into the manifold through the pressure-to-system port. In the general system (normal) position, fluid from the auxiliary pressure port is also routed to the pressure-to-system port. In the bypass/general system position, the selector valve ports engine pump pressure into the manifold through the return port. In this position, the auxiliary pump pressure is ported to the general system. In the general system/main gear down and

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

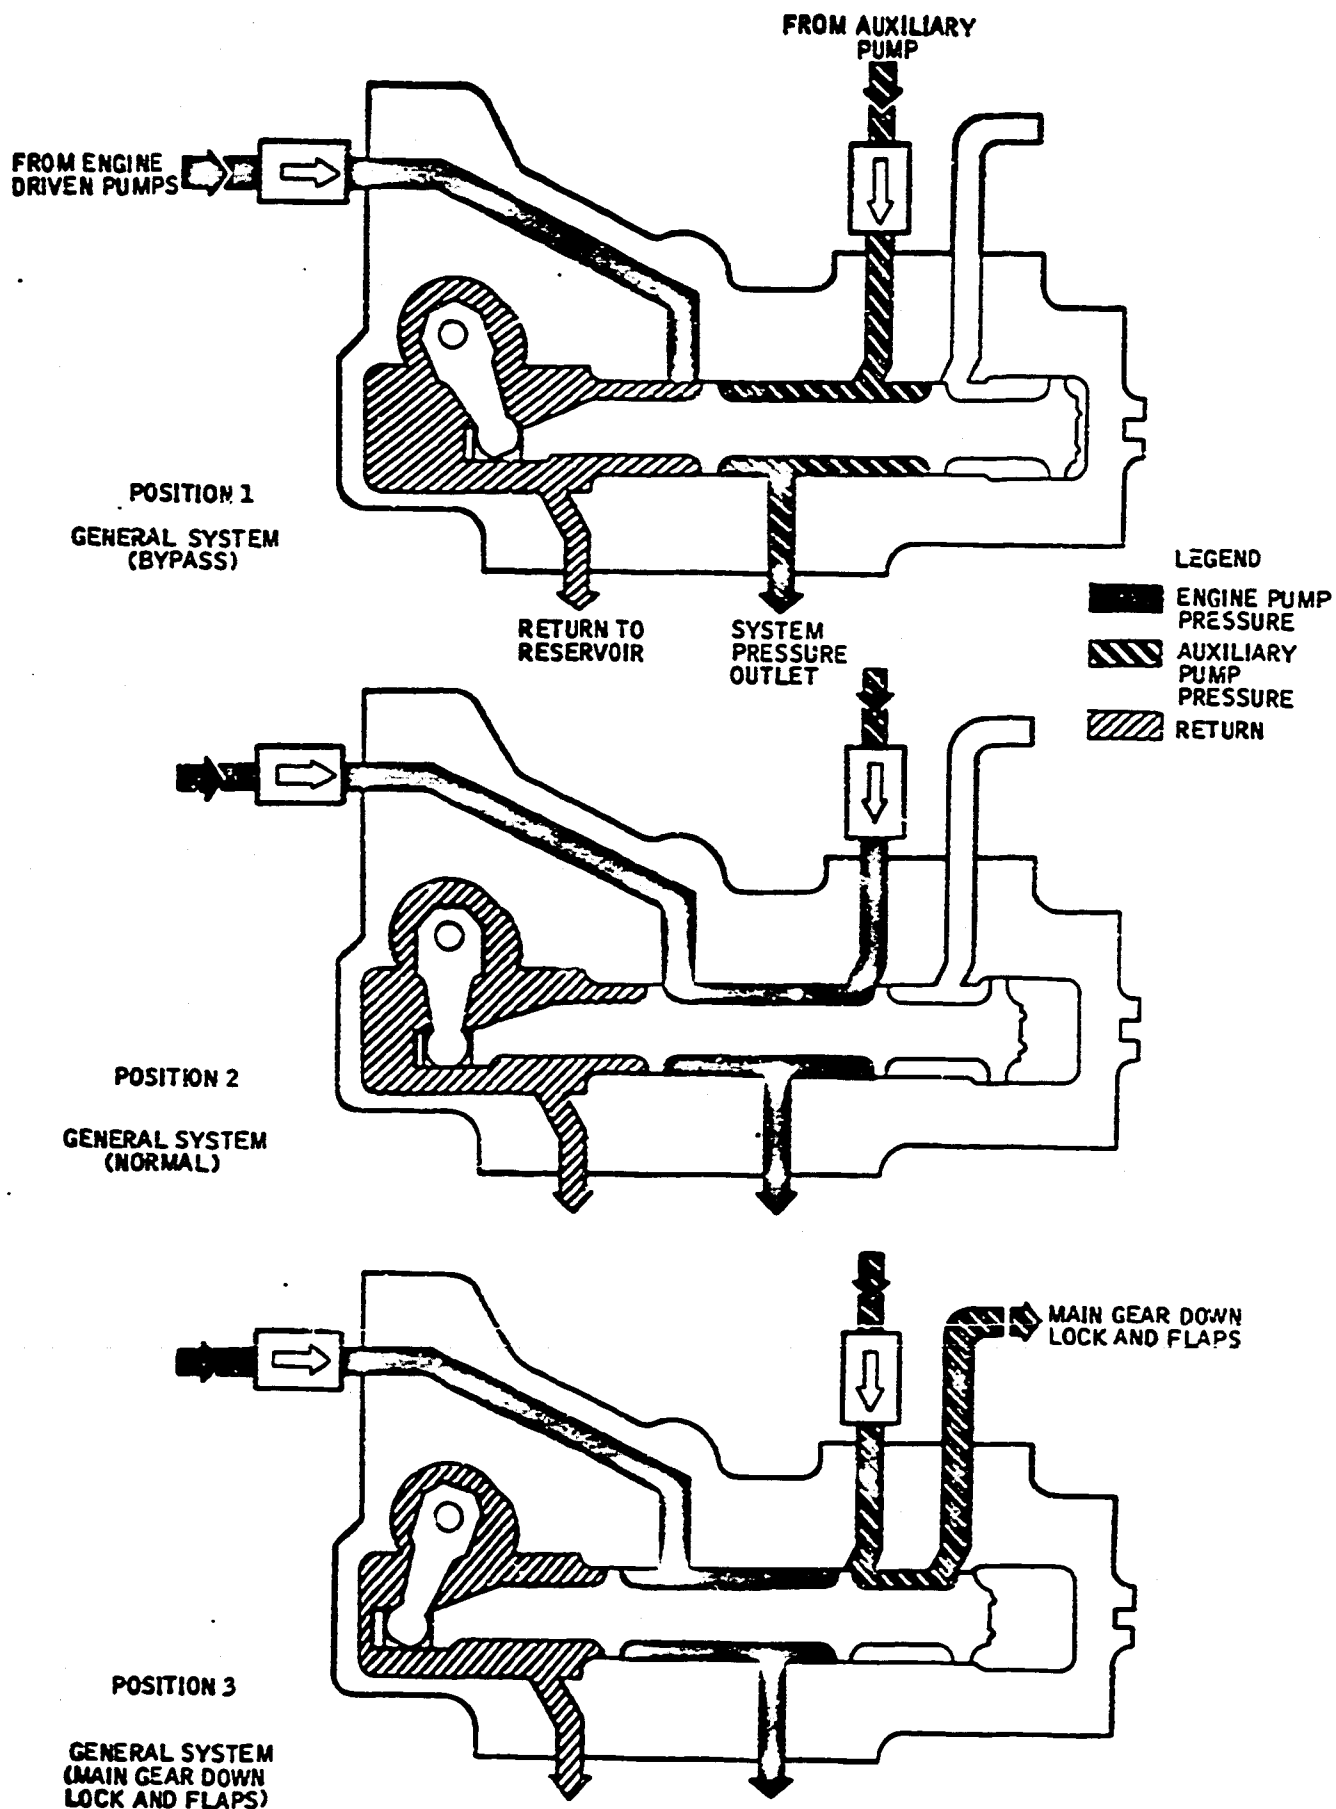

System Selector Valve -- Schematic  
 Figure 16



HA2-26

29-10-0  
 CODE 4  
 Page 31

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

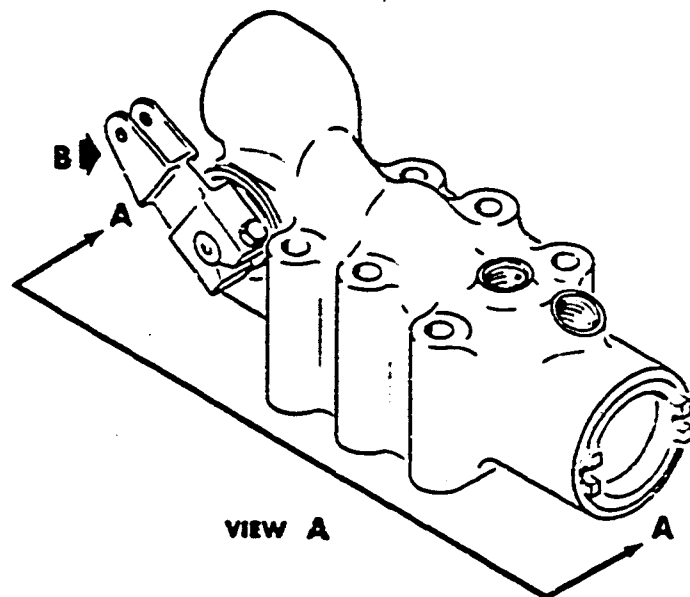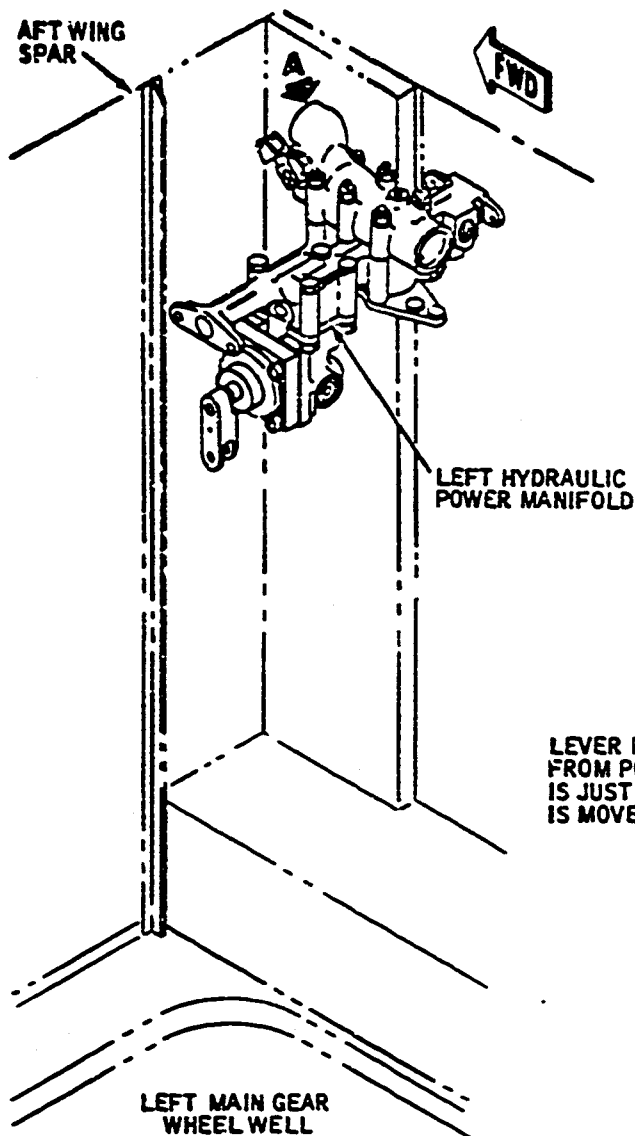

LEVER POSITION WHEN FLOW FROM PORT M TO PORT L IS JUST STOPPED AS LEVER IS MOVED TOWARD POSITION 3

GENERAL SYSTEM (NORMAL) POSITION 2

$6\frac{1}{4}^{\circ} (\pm 1\frac{1}{4}^{\circ})$

$28^{\circ} (\text{REF})$


GENERAL SYSTEM (BYPASS) POSITION 1

GENERAL SYSTEM (MAIN GEAR DOWNLOCK AND FLAPS) POSITION 3

$18\frac{1}{2}^{\circ} (\text{REF})$

$55\frac{3}{4}^{\circ} (\pm 5^{\circ})$

VIEW B

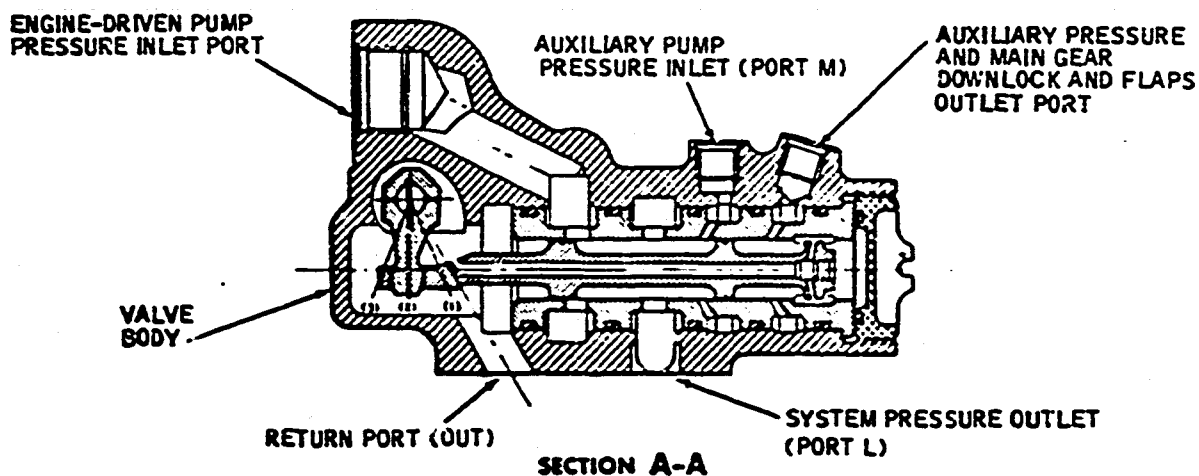

System Selector Valve -- Cutaway View  
 Figure 17

HA2-27

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

flaps position, pump pressure is routed through the alternate port, at the top of the valve, for alternate operation of the flaps and the landing gear downlock cylinders. Internal leakage provides lubrication for the moving parts of the valve.

P. Left Hydraulic Power Manifold (See Figure 18.)

- (1) The left hydraulic power manifold distributes fluid pressure from the hydraulic pump (any one of the three pumps), through control valves to the various airplane hydraulic subsystems. The left power manifold is located overhead in the left wheel well. Access to the left manifold is through the left main gear inboard door.
- (2) Three valve-mounting pads are provided on the manifold. The system selector valve-mounting pad is located on top of the manifold body. Of the two remaining mounting pads, located on the underside of the manifold, the inboard pad is capped and not used. The outboard mounting pad is used for the bogie swivel unlock control valve. Four ports are provided on the inboard end of the manifold. Two of these ports are pressure outlet ports: one, located on the aft face of the manifold, is for the flight controls; and, the other, located on the underside of the manifold, ports fluid to the priority valve, which, in turn, ports fluid to the nose gear and the right power manifold. The other two ports are return outlets, located immediately forward of the manifold pressure outlet port. One is connected by a line to the right manifold, and the other is connected to the low-pressure return port of the reservoir. The pressure line to the nose gear control valve is teed into the manifold pressure connecting line. A reservoir return line is teed into the manifold return line. The two ports on the inboard mounting flange were used for drilling the internal passages of the power manifold and are plugged and safety wired to prevent use.

Q. Right Hydraulic Power Manifold (See Figure 19.)



- (1) The right hydraulic power manifold distributes fluid pressure from the hydraulic pumps (engine-driven or auxiliary, or any combination of these three pumps), through the control valves to the various hydraulic subsystems. The right hydraulic power manifold is located overhead in the right wheel well. The manifold is held in place with braces and is accessible through the right main gear inboard door.
- (2) The manifold contains passages for pressure and return fluid distribution, four check valves, ports for pressure and return lines, and mounting pads for the various control valves.
- (3) The right manifold receives fluid pressure from the left manifold. Pressure is ported through check valves to the wing flap control valve, to the slot control valve, to the main gear control valve, to the brake control valve, to the brake pressure transmitter, and to the brake accumulators.

29-10-0  
CODE 4  
Page 33

Jun 15/67

Printed in U.S.A.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

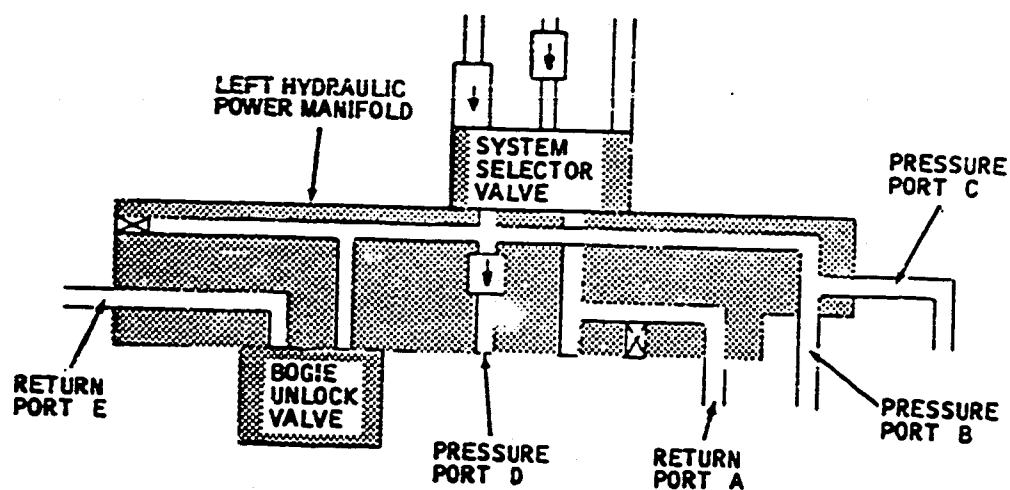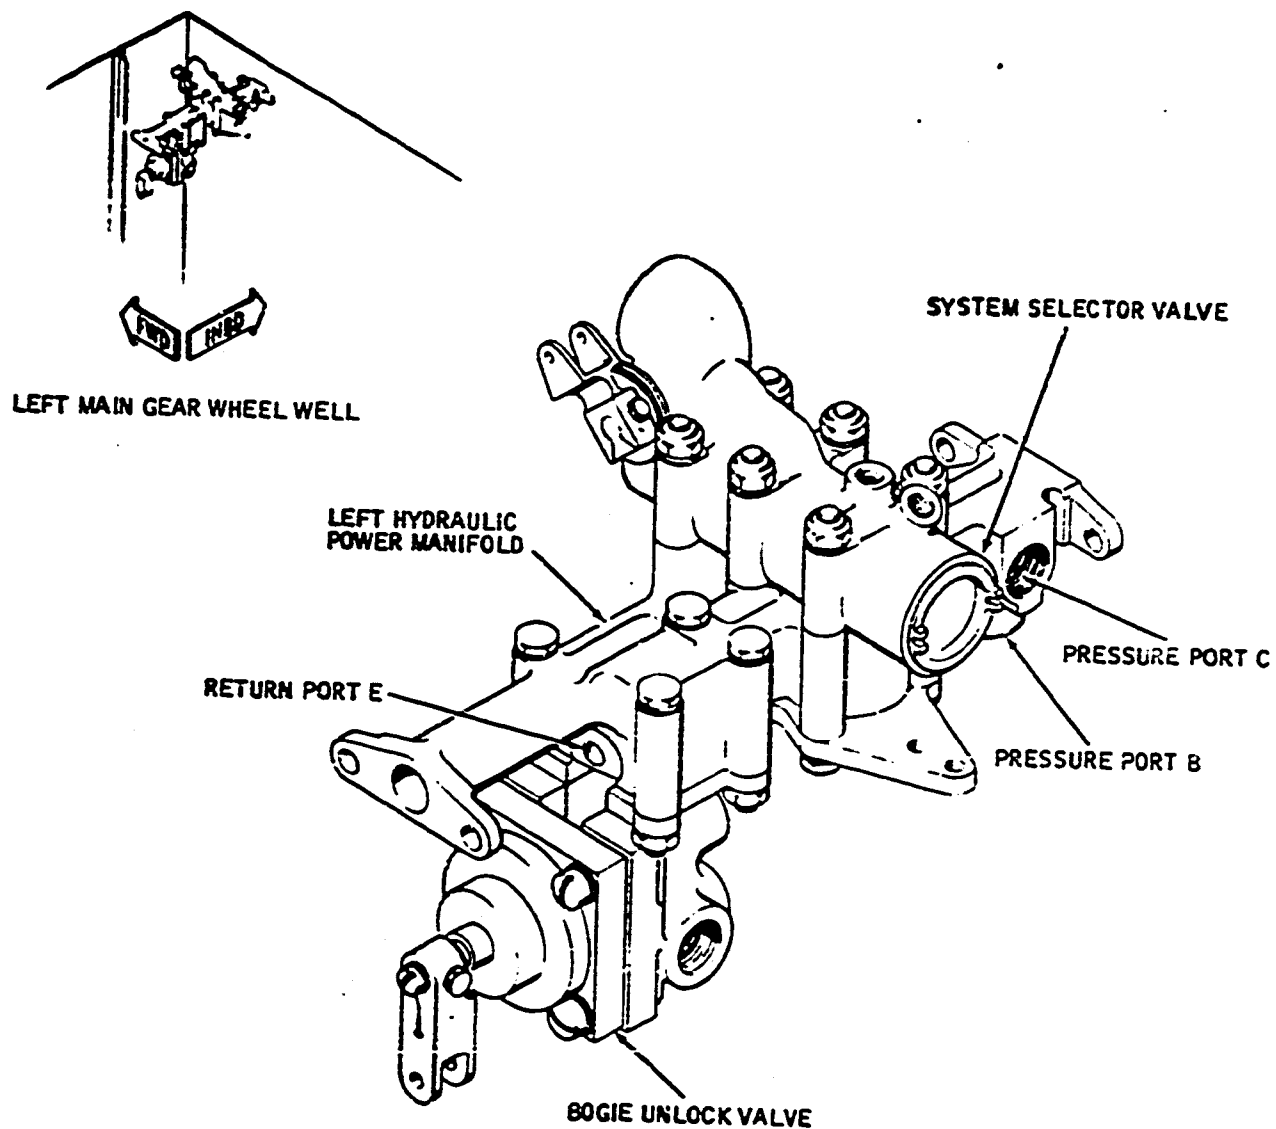


HA2-28

Left Hydraulic Power Manifold -- Schematic  
 Figure 18


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

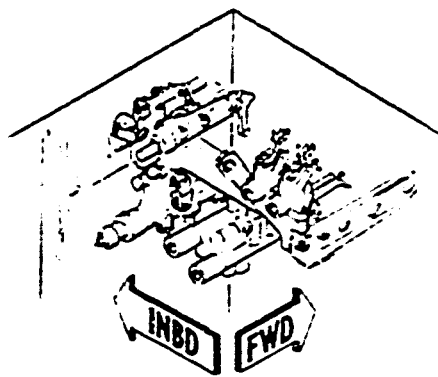

RIGHT MAIN GEAR  
WHEEL WELL

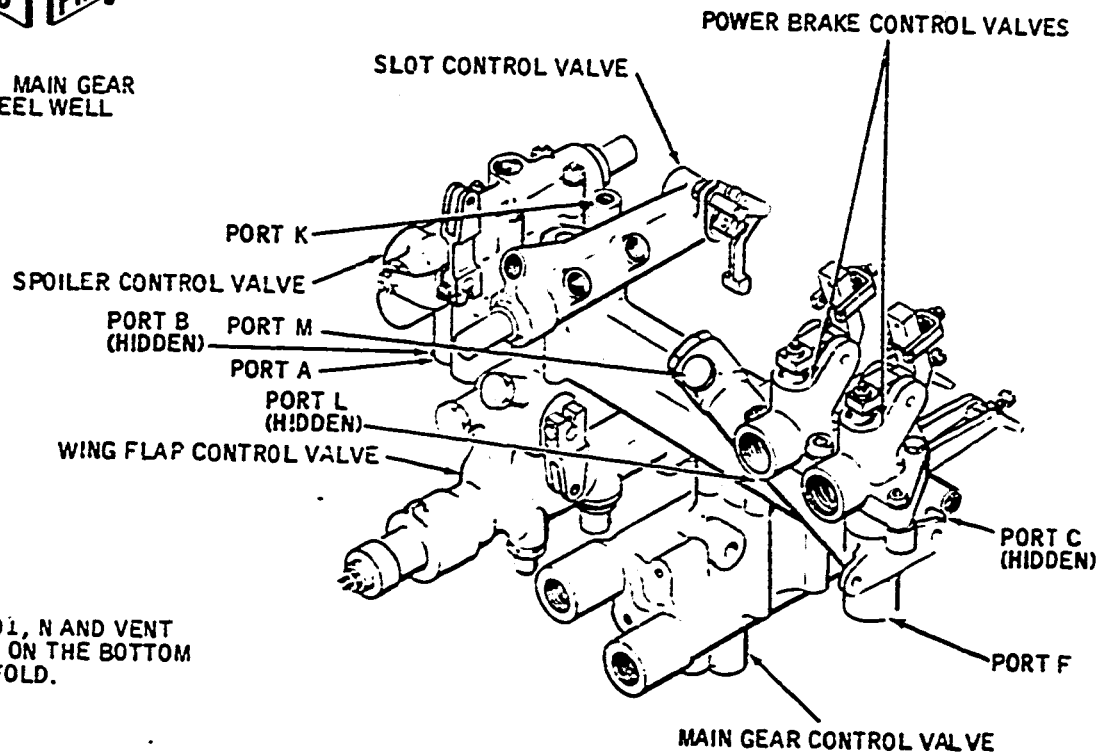

NOTE: PORTS B, C, D<sub>1</sub>, N AND VENT  
ARE LOCATED ON THE BOTTOM  
OF THE MANIFOLD.

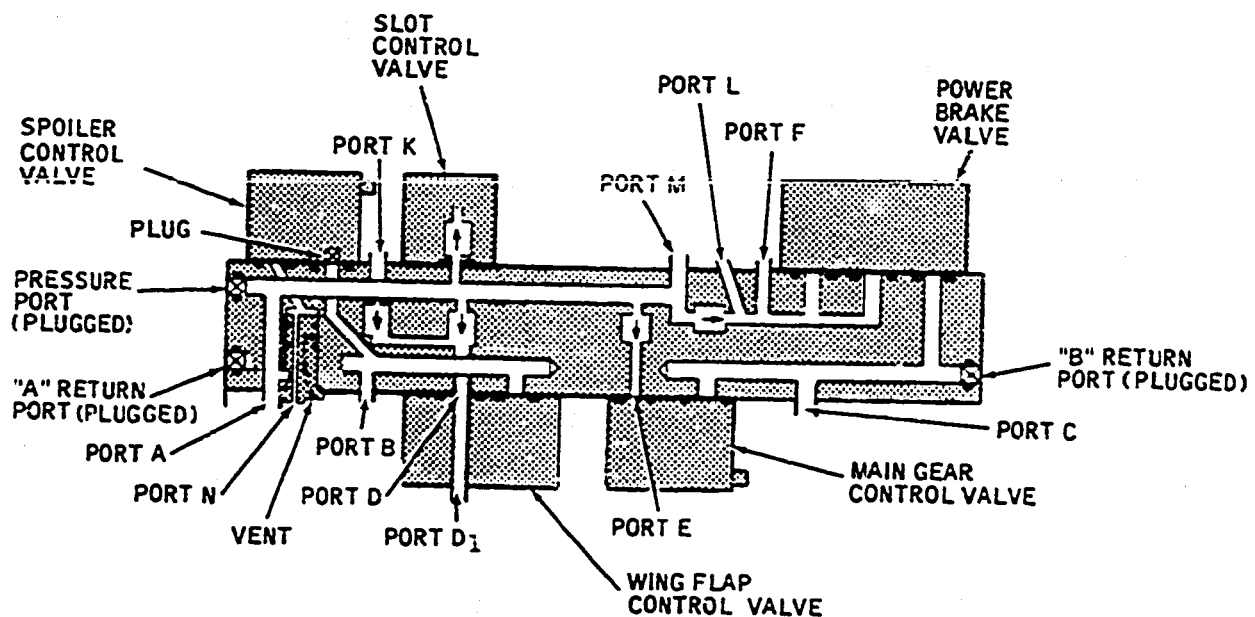

HA2-29A

Right Hydraulic Power Manifold -- Schematic  
 Figure 19

Nov 1/69

Printed in U.S.A.

29-10-0  
 CODE 4  
 Page 35



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) Auxiliary hydraulic pressure is ported from the alternate port of the system selector control valve into port K in the right manifold. Port K is located inboard of the spoiler control valve. From port K, auxiliary hydraulic pressure is ported through a check valve to the downstream side of the wing flap control valve check valve and into the wing flap control valve for alternate operation of the wing flaps.
- (5) The return passage from the wing flap control valve ports fluid to return port A. The brake control valve return passage ports fluid into return line B through a two-way restrictor. The main gear control valve downline return fluid uses a separate port in the valve, bypasses the manifold, and returns the fluid directly to A return line to the reservoir. The upline in the main gear control valve uses the same return port, return port B, in the manifold as the brake control valve.


R. Hydraulic Manifold Return Check Valves (See Figure 10.)

- (1) The hydraulic manifold return check valve is installed in the hydraulic reservoir A return line to prevent reverse flow of fluid. This check valve is located on the shear web near the dual filter and relief valve. Access to the check valve is through the left main gear inboard door.
- (2) The direction of flow is marked on one surface, and the rating of the check valve (1500 psi) is marked on the other surface.


S. Hydraulic Power System Accumulator (See Figure 20.)

- (1) The hydraulic power system accumulator is a spherical, welded-steel, fluid and air bladder-separated container. The accumulator is installed in the pressure line of the hydraulic power system to provide a reserve supply of fluid under pneumatic pressure and to act as a shock absorber for system pressure surges.
- (2) The accumulator is located immediately aft of the left hydraulic power manifold and is accessible through the left main gear inboard door. It is mounted with two corner brackets and clamp blocks at the upper and lower port fittings.
- (3) The accumulator is installed in the pressure line of the hydraulic power system and is initially charged with 1000 psi of dry nitrogen. As the system pressure builds up, fluid is forced into the upper chamber of the accumulator, further compressing the trapped nitrogen to approximately 3000 psi. With full hydraulic system pressure, 3000 psi is indicated on the pressure gage adjacent to the filler valve. This reserve pressure smooths out any momentary lag in the pump's response to the system's demand for greater fluid flows. The accumulator permits a gradual rise in system pressure, thereby absorbing the shock of pump surges and relieving the piping and system operating units of high-impact loads. When the engine-driven hydraulic pumps are not operating, the accumulator provides system pressure (at a diminishing rate) until a quantity equal to the stored volume in the accumulator has been used by the system.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

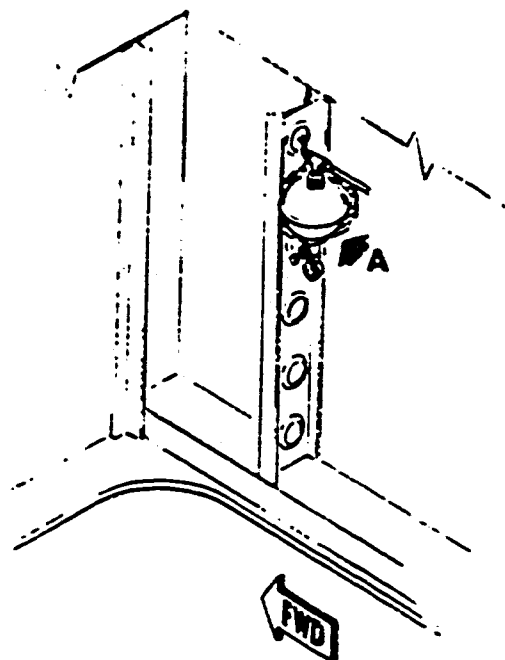

LEFT MAIN GEAR  
WHEEL WELL

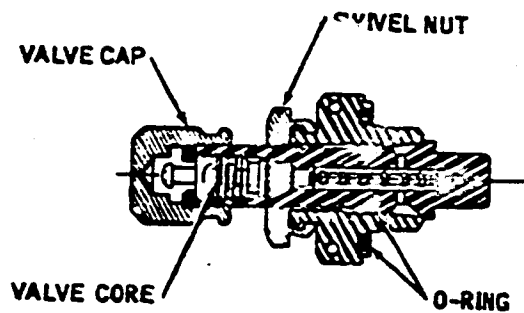

FILLER VALVE

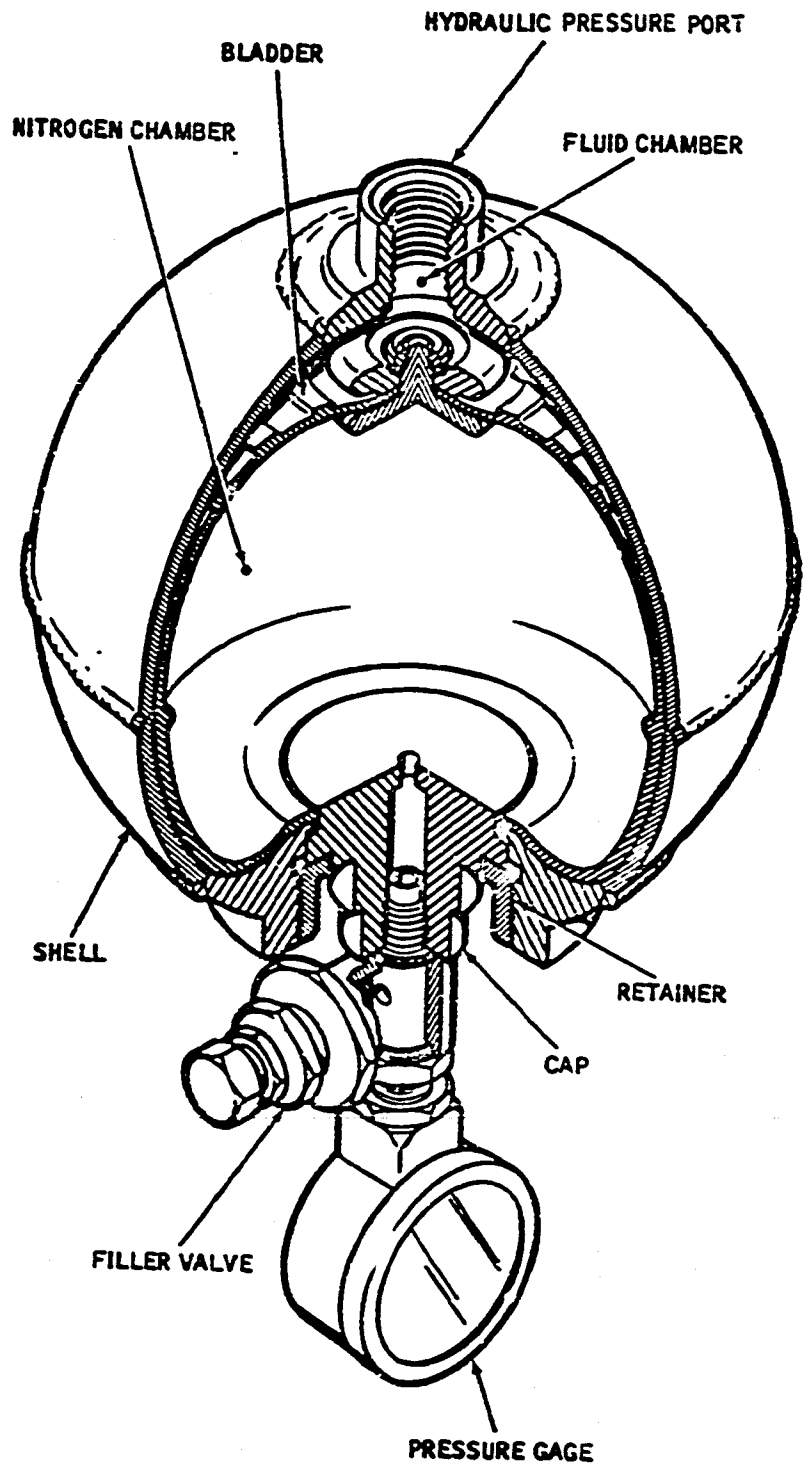

VIEW A

HA2-30

Hydraulic Power System Accumulator -- Cutaway View  
 Figure 20

Jun 15/67

Printed in U.S.A.



29-10-0  
 CODE 4  
 Page 37

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

T. Hydraulic System Priority Valve (See Figure 21.)

- (1) The priority valve is located in the left wheel well near the left hydraulic power manifold. The valve is installed in the hydraulic pressure line, between the two power manifolds, downstream of the pressure supply takeoff port for the flight controls. The priority valve is a balanced relief valve which reserves initial hydraulic pressure (up to 2150 psi maximum) for use in the flight control systems. The valve consists of a body with an inlet, an outlet, and a breather port. Internally, the valve contains a poppet valve plate, a poppet, a poppet valve load-spring, a piston, a piston load-spring, and a piston load-spring housing. The piston load-spring housing chamber is vented to ambient air through a breather hole which is covered by a butyl rubber band.
- (2) The priority valve shuts off hydraulic pressure to all subsystems downstream of the left power manifold, whenever the hydraulic pressure drops below 1700 psi minimum. At this point, the valve closes to reserve the hydraulic pressure for use in the flight control systems, preventing them from reverting to manual operation. When the hydraulic pressure rises to 2150 psi maximum, the priority valve opens and supplies pressure to the right manifold and all subsystem downstream of the priority valve.
- (3) Hydraulic fluid from the left power manifold enters the priority valve through the inlet port, passes through the poppet valve plate holes, and applies pressure against the piston. When sufficient hydraulic pressure is applied to the piston, the piston load-spring compresses, unseating the poppet and permitting full flow through the valve. When the hydraulic pressure decreases to less than the opposing force value of the piston load-spring, the load-spring forces the piston against the poppet and shuts off fluid flow through the valve.
- (4) The maximum flow available from both engine-driven hydraulic pumps is: 44 to 45 gpm at takeoff, climb, and cruise configurations; 26 to 28 gpm at descent, approach, and engine idle configurations.
- (5) Some of the larger hydraulic system demands are as follows:
  - (a) Gear retraction -- 17 gpm (10 - 12 seconds)
  - (b) Gear extension -- 14 gpm (10 - 12 seconds)
  - (c) Wing flaps down -- 8 gpm (10 seconds)
  - (d) Wing flaps up -- 3 gpm (22 seconds)
  - (e) Horizontal stabilizer -- 7 gpm
  - (f) Ailerons -- 17 gpm (25°/second)
  - (g) Rudder -- 3 gpm (25°/second)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

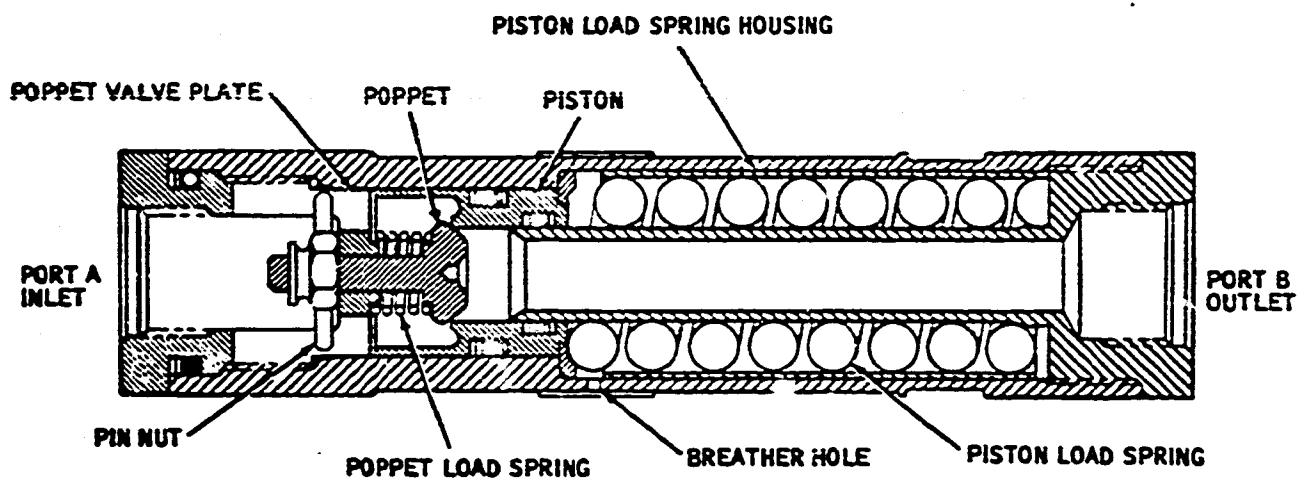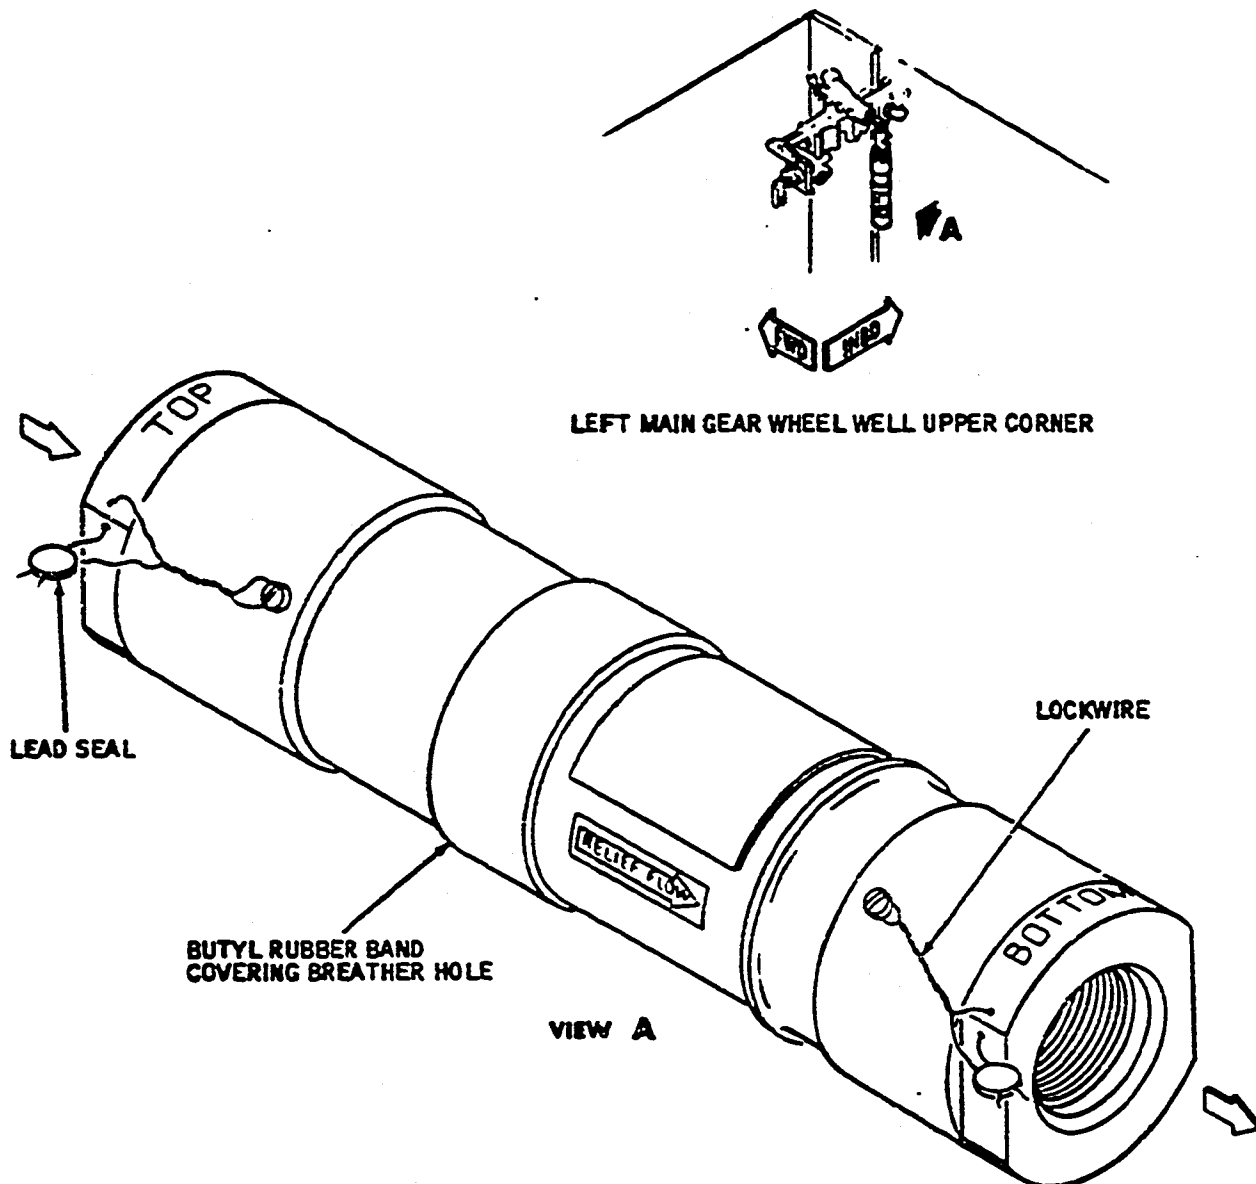

Hydraulic System Priority Valve -- Cutaway View  
 Figure 21

Jun 15/67

Printed in U.S.A.

HA2-34

29-10-0  
 CODE 4  
 Page 39

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) There are various combinations of hydraulic system operations which could cause momentary reversion of the flight controls to manual operation. To prevent reversion to manual operation, the priority valve assures that the left power manifold receives all the hydraulic fluid pressure under conditions of very large flow demands.

U. Hydraulic System Selector Control Lever

- (1) The hydraulic system selector control lever is a manually actuated, mechanical lever detented to three positions. The lever provides a mechanical means, through cables, for positioning the system selector valve and the auxiliary hydraulic pump supply selector valve. The hydraulic system selector control lever is located on the system engineer's control pedestal. The lever is attached to a drive sector, located on a common shaft with the other control pedestal sectors. The lever and sector are accessible through the cover plates on the system engineer's pedestal.
- (2) To put the hydraulic power system in the bypass condition, the system selector control lever is lifted out of detent and moved to bypass/general system position. At the same time, the cable moves the sector and pushrod of the system selector valve to the No. 1 bypass position. At the same time, the cables from the system selector valve sector move the auxiliary pump supply selector valve sector to No. 1 (auxiliary) position. The auxiliary pump supply selector valve remains in the auxiliary supply position through the idle feature of the sector rigging. In this condition, the engine-driven pump pressure is ported to the reservoir and the auxiliary pump supplies pressure to the general system. In this position, the fluid is supplied to the auxiliary pump from the low stand-pipe in the hydraulic system reservoir. To put the system into the alternate condition, the selector control lever is lifted out of detent and moved to the general system/main gear downlock and flaps position. The cables move the system selector valve sector to the No. 3 (alternate) position. The system selector valve sector moves the cables rotating the auxiliary pump supply selector valve sector to the No. 3 (alternate) position. As the sector rotates, the end of the arm moves from the idle position. This positions the valves to the alternate position, supplying fluid to the auxiliary pump from the auxiliary pump alternate reservoir. In this position, fluid from the auxiliary pump is ported to the wing flap control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported to the general system.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - DESCRIPTION AND OPERATION

1. General

A. Description (See Figures 1 and 2.)

- (1) The hydraulic power system receives fluid pressure from the engine-driven hydraulic pumps, one installed on each inboard engine. The electrically driven auxiliary pump is used to supplement the engine-driven pumps, or to independently supply the system with fluid pressure.
- (2) The hydraulic system reservoir, located in the left wing root, has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir is used for fluid, and 1/10 is used for foam space. A separate air chamber is installed in the reservoir system to provide for a greater fluid capacity in the main reservoir. A reservoir filler assembly is installed in the piping between the reservoir and the air chamber and has a vent line from the filler neck to the tee at the top of the reservoir sight gage. The reservoir is pressurized to 30 to 35 psi by bleed pressure from the engine-driven pumps through an air pressure regulator-aspirator.
- (3) The engine-driven pumps receive fluid from the pressurized main reservoir through respective engine hydraulic fire shutoff valves. The engine hydraulic fire shutoff valves are normally open and can be mechanically controlled from the flight compartment. The pumps supply fluid pressure through respective check valves to the dual filter and relief valve. Some of the fluid from the filter is ported through the regulator-aspirator to pressurize the reservoir. Most of the fluid is routed through a check valve to the system selector valve, and then to the left and right hydraulic power manifolds. The manifolds distribute the fluid pressure to the subsystems.
- (4) Hydraulic fluid is normally supplied to the auxiliary hydraulic pump from a low standpipe in the main reservoir. During alternate operation, the auxiliary hydraulic pump receives fluid supply from the auxiliary pump alternate reservoir, which is located just aft of the auxiliary pump. From these reservoirs, the fluid is ported through the auxiliary pump selector valve which is mechanically controlled from the flight compartment by the system selector control lever. When operating, the auxiliary hydraulic pump supplies fluid pressure to the subsystems through the system selector valve which is also controlled by the system selector control lever in the flight compartment. A filter and check valve are installed in the line from the auxiliary pump to the system selector valve.
- (5) An accumulator is installed in the pressure line to the subsystems to provide a reserve supply of fluid and to act as a surge damper for the system.

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 5  
Page 1


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Engine-driven pump fluid pressure is routed through the system selector valve to the left power manifold, where it is distributed to some of the subsystems and through the priority valve to the right power manifold. Fluid pressure from the right power manifold is distributed to the remaining subsystems.
- (7) The priority valve is a spring-loaded, poppet-type, balanced relief valve installed in the line downstream of the left power manifold. The priority valve's function in the system is to prevent the flight control systems from reverting to manual operation during high demands on the hydraulic system.
- (8) A fluid pressure transmitter, located in the nosewheel well, senses the system pressure, which is indicated on the hydraulic system pressure indicator in the flight compartment.

**B. Normal Operation**

- (1) Fluid is supplied to the hydraulic system from the pressurized hydraulic system reservoir. For operation of the hydraulic system under normal conditions, 8.1 US gallons (6.7 Imperial gallons; 30.6 liters) of hydraulic fluid are available to the engine-driven hydraulic pumps, and 12.9 US gallons (10.7 Imperial gallons; 48.8 liters) are available to the auxiliary hydraulic pump. Supply lines from the main reservoir carry fluid to each inboard pylon through normally open engine hydraulic fire shutoff valves to the engine-driven hydraulic pumps. Fluid is supplied to the auxiliary hydraulic pump from the main reservoir through a low standpipe at the base of the reservoir. Fluid is carried from the reservoir through the auxiliary pump selector valve to the auxiliary hydraulic pump.
- (2) The engine-driven hydraulic pumps supply full system pressure (3000 psi nominal) at any given engine speed, from idle to full power. The output flow of the pump is varied by sensing pressure from the outlet side of the pump. Each engine-driven pump contains a solenoid-operated bypass valve which, when energized, bypasses the pressure control regulator of the pump and ports fluid to the pump yoke control piston which feathers the pump. When the pump is feathered, flow rate is reduced to almost zero (1.0 gpm) and to a pressure of approximately 300 psi. Half of this flow maintains pump lubrication and cooling through internal leakage. This leakage is returned, through a check valve, the engine-driven pump case drain line filter, and another check valve to the case drain return port of the reservoir. The pressure fluid from each pump passes through a check valve to the dual filter and relief valve.
- (3) The fluid enters the dual filter and relief valve through the relief valve chamber. The fluid is passed through the filter element, through a manifold, and through a common outlet port. Fluid from the outlet port is routed through a check valve to the system selector valve. If pressure in the system builds up to approximately 3300 psi, the relief valves in the dual filter and relief valve open and port fluid

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

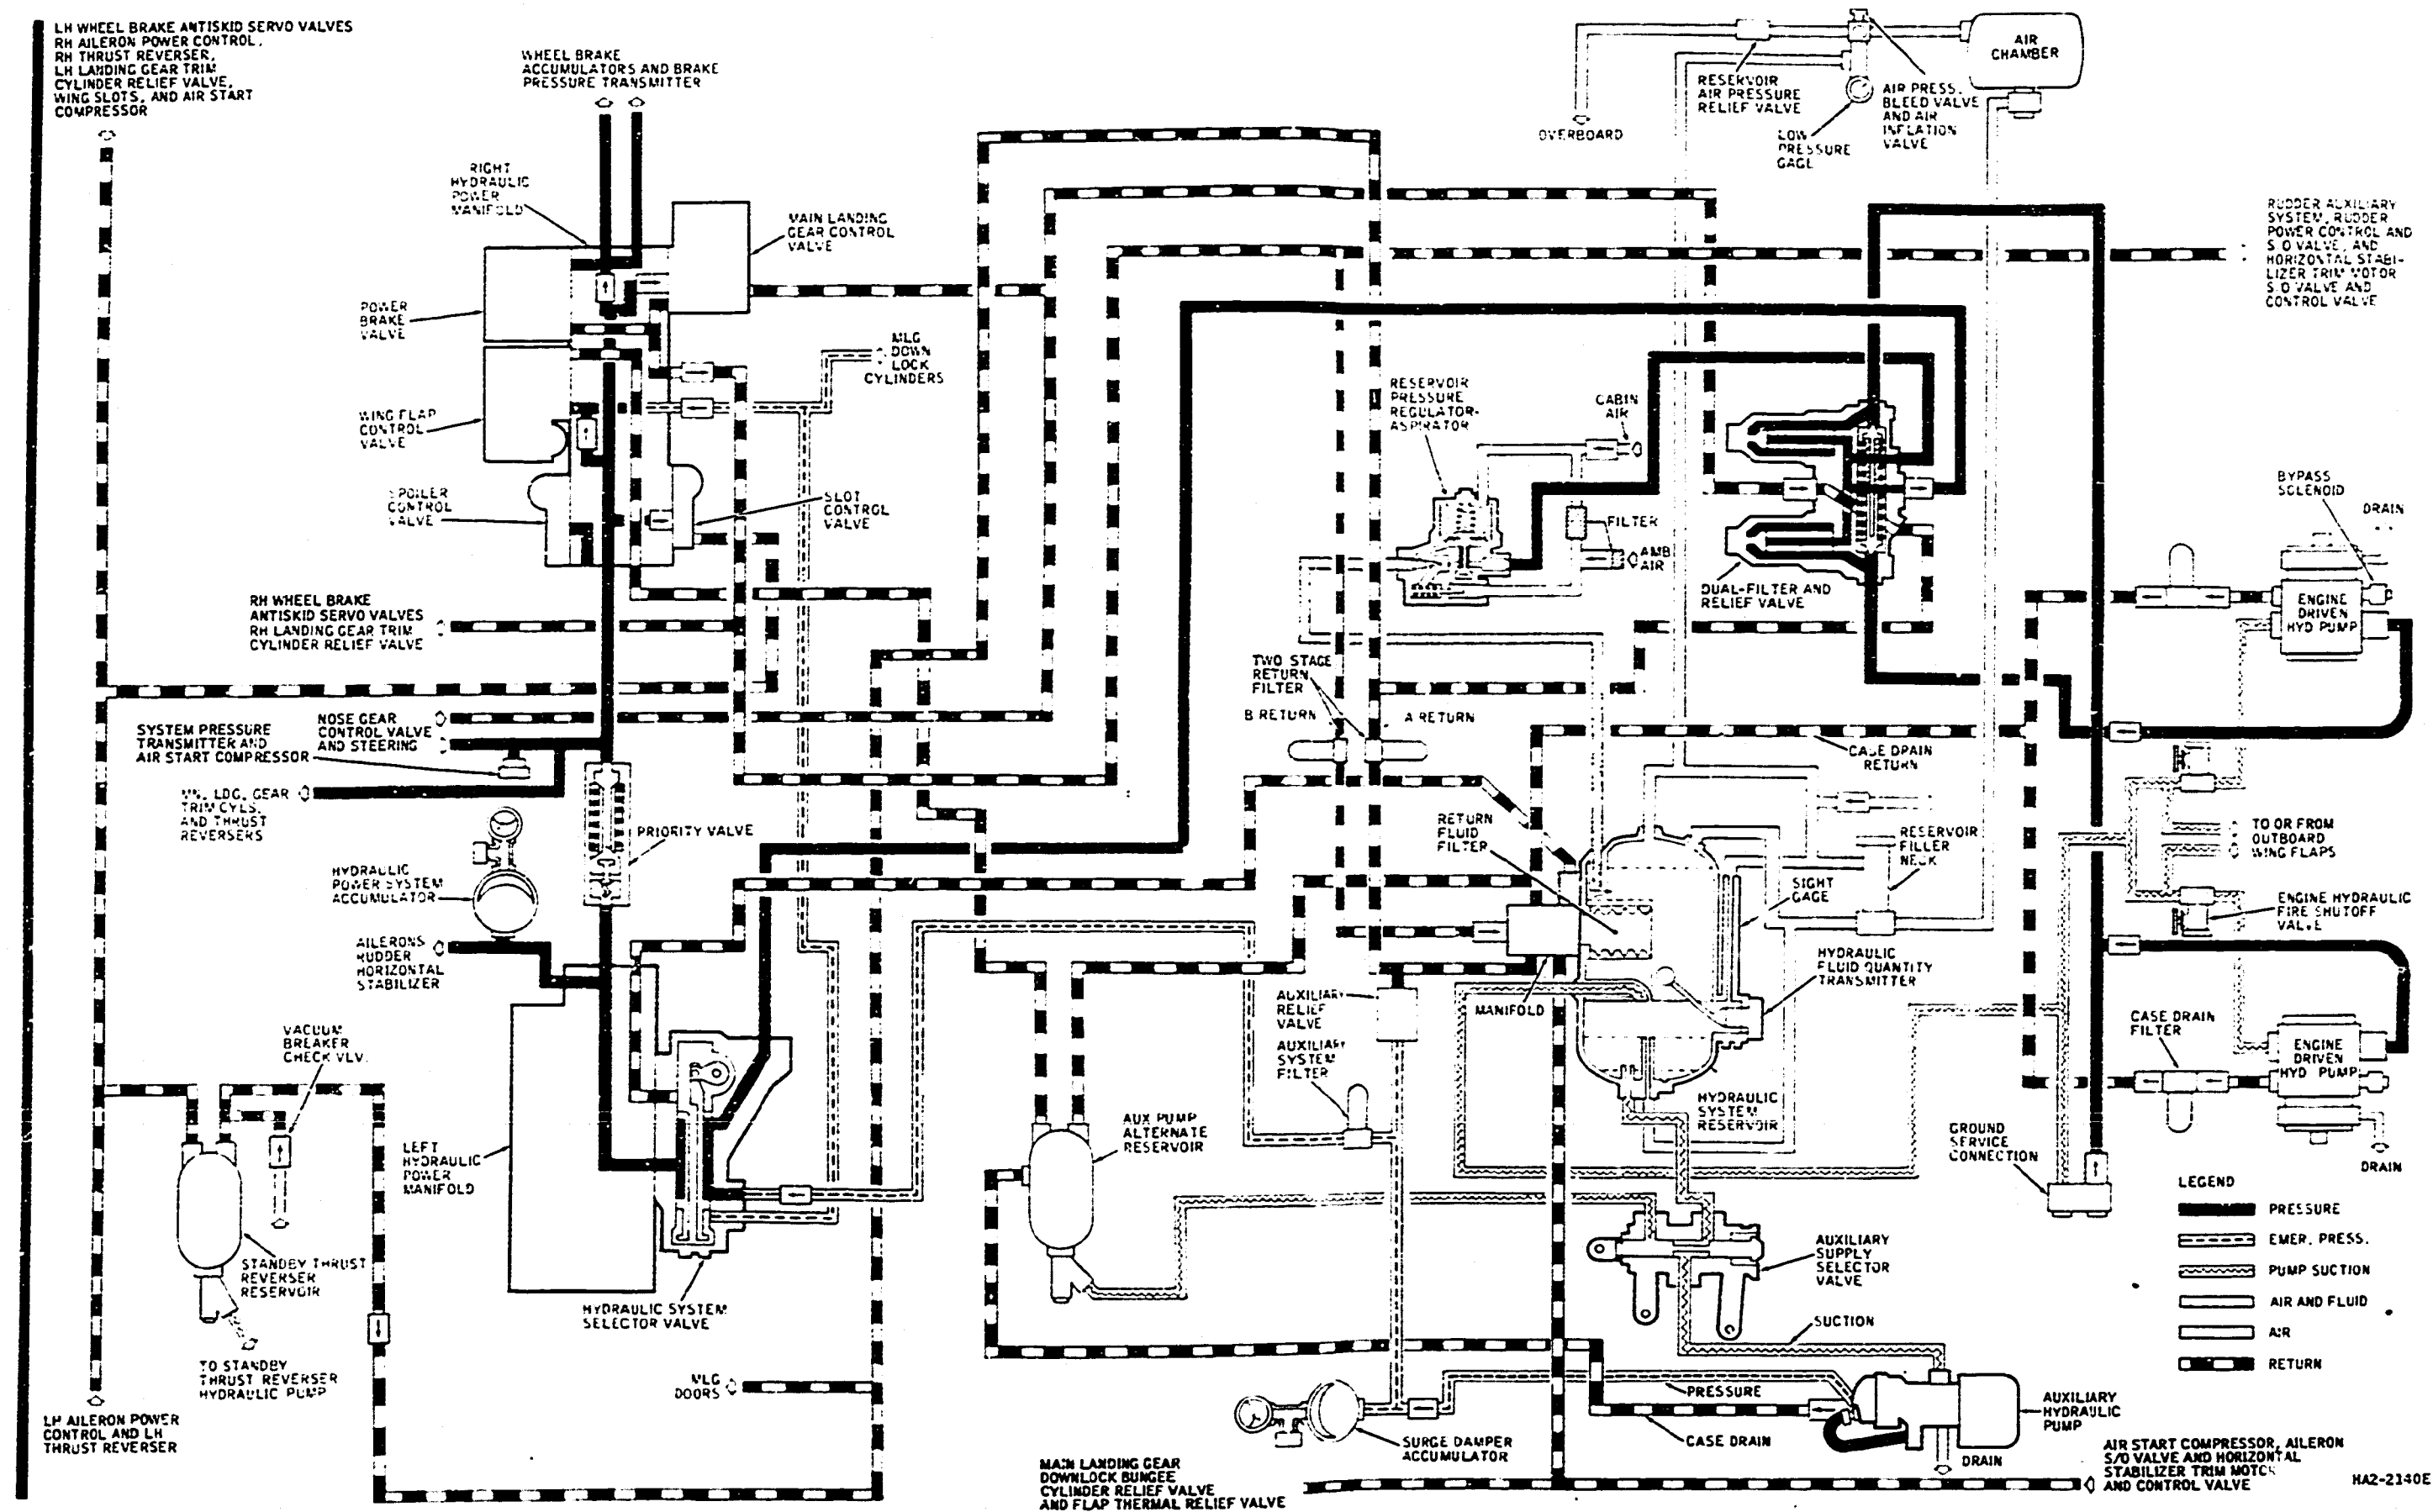

Hydraulic Power System -- Schematic Diagram  
 Figure 1

29-10-0  
 CODE 5  
 Page 3


Nov 1/69

Printed in U.S.A.

HA2-2140E



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

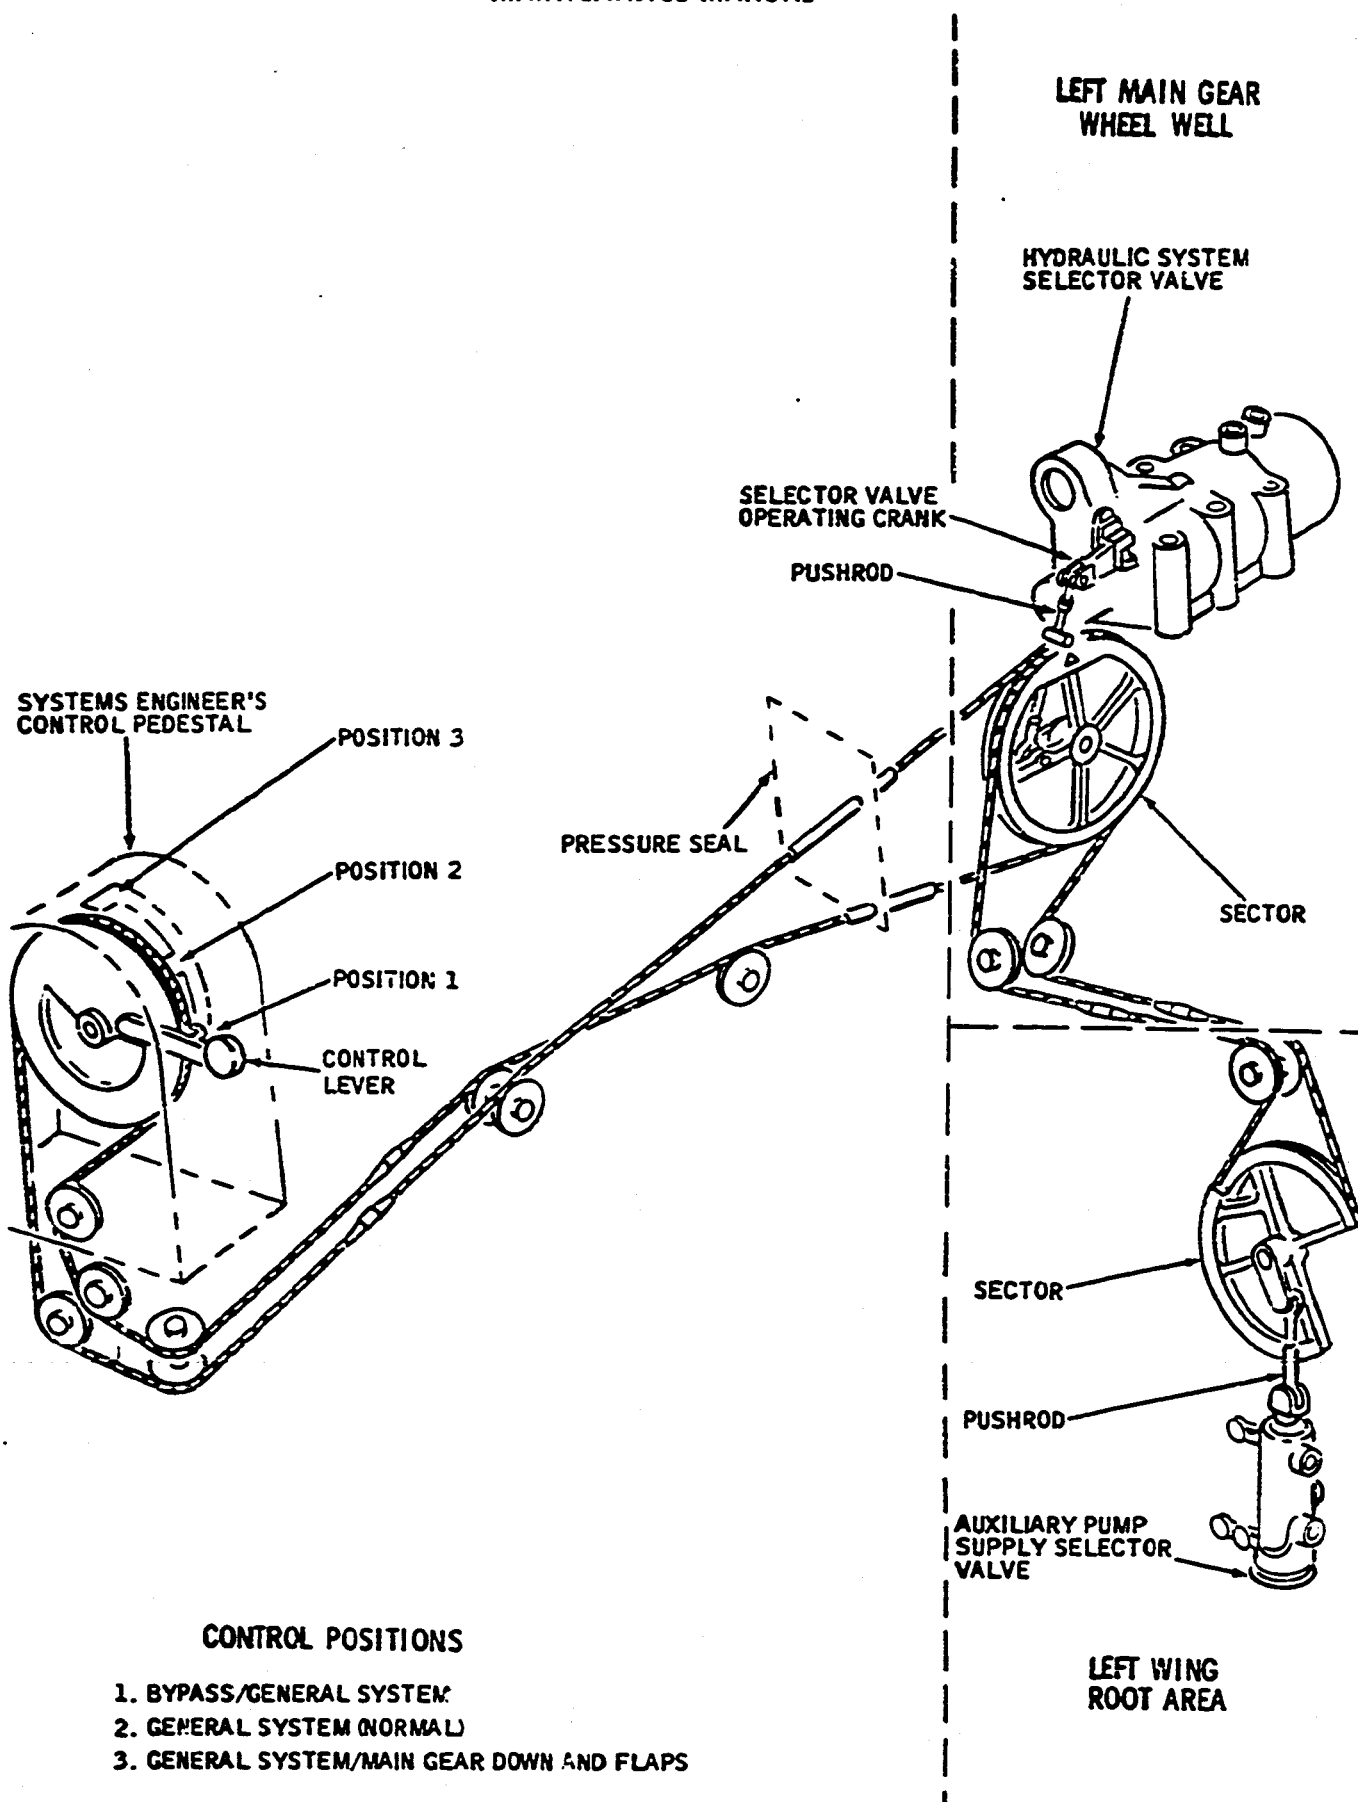

**CONTROL POSITIONS**

1. BYPASS/GENERAL SYSTEM
2. GENERAL SYSTEM (NORMAL)
3. GENERAL SYSTEM/MAIN GEAR DOWN AND FLAPS

Hydraulic System Selector and Auxiliary Pump Supply  
 Selector Valves -- Mechanical Control Schematic  
 Figure 2

HA2-486

29-10-0  
 CODE 5  
 Page 5

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

back to the reservoir via A return port. The relief valve poppet closes again when system pressure drops to approximately 3000 psi.

- (4) The aspirator receives filtered fluid (bleed pressure at nominal 3000 psi) from the dual filter and relief valve. The aspirator operates on the jet pump principle. Hydraulic fluid is atomized and mixed with air within the unit by a nozzle and a venturi. The mixture is used to pressurize the reservoir and reservoir air chamber. The regulator diaphragm maintains a pressure range of 30 to 35 psi in the reservoir and air chamber. If there is a regulator malfunction, the aspirator stalls when the outlet pressure reaches a maximum of 40 psi. A reservoir relief valve in the reservoir vent line relieves thermal expansion pressure above 45 (+5, -0) psi.
- (5) Pump pressure fluid enters the system selector valve through the system pressure inlet port. When the pump selector control lever is in the general system (normal) position, fluid is ported to the pressure passages of the left power manifold. The fluid pressure in the left power manifold is ported through the priority valve to the nose gear, system pressure transmitter, thrust reverser shutoff valve, air start compressor and the right power manifold and directly to the following valves:
  - (a) Aileron power shutoff
  - (b) Rudder power shutoff
  - (c) Longitudinal trim hydraulic motor shutoff.
- (6) The right power manifold distributes fluid pressure to the brake accumulators, the brake pressure transmitter, and the following control valves:
  - (a) Wing flap
  - (b) Slot
  - (c) Main gear
  - (d) Power brake.
- (7) The return fluid from the wing flap control valve is ported through the right power manifold and into the auxiliary hydraulic pump alternate reservoir. Return fluid from the wing flap outboard cylinder is piped into the suction lines for each engine-driven hydraulic pump. Return fluid from the slot control valve is ported into the A return line to the main reservoir. The power brake and main gear control valve gear up return fluid is ported through a check valve into the B return line to the reservoir. The main gear control valve gear down return pressure bypasses the right manifold and returns to the reservoir through the A return line. All return fluid entering the reservoir is filtered through the return ports filter located within the reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

C. Bypass Operation

- (1) The output of the engine-driven hydraulic pumps is bypassed by moving the system selector control lever out of the general system (normal) position to the bypass/general system position.
- (2) The system selector valve in the bypass position ports engine-driven pump pressure from the dual filter and relief valve directly to the return passage of the left power manifold. From the manifold, the fluid is ported directly to the bypass return port of the hydraulic system reservoir. In the bypass condition, the auxiliary hydraulic pump receives fluid from the hydraulic system reservoir, pressurizes it to system pressure, and ports it to the left and right power manifolds for distribution to the systems.

D. Alternate Operation

- (1) When both engine-driven hydraulic pumps and the auxiliary hydraulic pump are rendered inoperative due to the loss of the normal supply of fluid, the hydraulic power system can be rigged for alternate operation. This is accomplished by placing the system selector control lever in the general system/main gear downlock and flaps position. When the system selector control lever is in this position, the auxiliary hydraulic pump supply selector valve is positioned to supply fluid from the auxiliary pump alternate reservoir to the auxiliary pump.
- (2) Fluid is supplied to the auxiliary pump from the outlet port of the auxiliary pump supply selector valve. Output pressure is ported through the auxiliary system filter and check valve to the auxiliary pressure inlet port of the system selector valve.
- (3) In the general system/main gear downlock and flaps position, auxiliary pump pressure bypasses the manifold pressure passages and is ported from the alternate outlet port of the system selector valve. Fluid from this port flows directly to a port on the right power manifold, through an internal check valve in the manifold, to the wing flap control valve. A line, teed into the alternate pressure line, runs directly to a shuttle valve in the main gear down lock cylinder line. When auxiliary pressure is applied, the shuttle valve shifts, porting fluid into the downlock bungee cylinders' downlock side.

E. Mechanical Control

- (1) The hydraulic power mechanical control system consists of the hydraulic system selector control lever cable drum, cables the system selector valve sector and pushrod, the system selector valve, the auxiliary hydraulic pump supply selector valve sector and pushrod, and the auxiliary hydraulic pump supply selector valve.
- (2) The control lever located on the system engineer's control pedestal is used to position the system selector valve and, in turn, the auxiliary hydraulic pump supply selector valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (3) The control lever is spring loaded into detents at each general system (normal) position, and is connected to the control lever cable drum. Two cables run from the drum, under the cabin floor, aft through the pressure bulkhead at the rear wing spar, and into the left wheel well to the system selector valve sector. A pushrod connects the sector to the positioning lever of the system selector valve.
- (4) A second set of cables is routed from the system selector valve sector into the left wing root to the auxiliary hydraulic pump supply selector valve sector. When the system selector valve is in either bypass or normal, the auxiliary hydraulic pump supply selector valve sector is arranged so that the pushrod idles between the two positions. This allows the valve to remain in the auxiliary position. When the sector is moved to the alternate position, the pushrod is pulled by the sector to reposition the valve to the alternate position.
- (5) The control lever is normally in the general system (normal) position. To move the system selector valve to the bypass position, the control lever is moved to the bypass/general system position. When the system selector valve is moved to the bypass position, the auxiliary hydraulic pump supply selector valve sector is moved to a new position. Due to the idle feature on the auxiliary sector, the valve remains in the auxiliary position. With the valve in this position, fluid is supplied to the auxiliary pump through the low standpipe in the hydraulic system reservoir. In this condition, engine-driven pump pressure is ported to the reservoir and the auxiliary pump pressure is ported to the general system.
- (6) To put the system in alternate operation, the control is moved to the general system/main gear downlock and flaps position. This moves the system selector valve to the alternate position, and simultaneously moves the auxiliary hydraulic pump supply selector valve to the alternate position. Fluid is supplied to the auxiliary pump from the auxiliary hydraulic pump alternate reservoir. Fluid pressure from the auxiliary pump is ported to the flap system control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported from the system selector valve to the general system.

## 2. System Components

### A. Hydraulic System Reservoir (See Figures 3 and 4.)

- (1) The hydraulic system reservoir is installed on the aft side of the wing rear spar in the left wing root and is accessible through the left wing root access door. The hydraulic system reservoir serves as the main source of hydraulic fluid for the engine-driven hydraulic pumps and the normal supply for the auxiliary hydraulic pump. The reservoir is cylindrical in shape and contains a filter, baffle, and a screen cover encasing the filter. The filter prevents foreign particles from contaminating the fluid supply. Mountings are provided on the exterior surface of the reservoir for return line ports, aspirator port, electrical

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

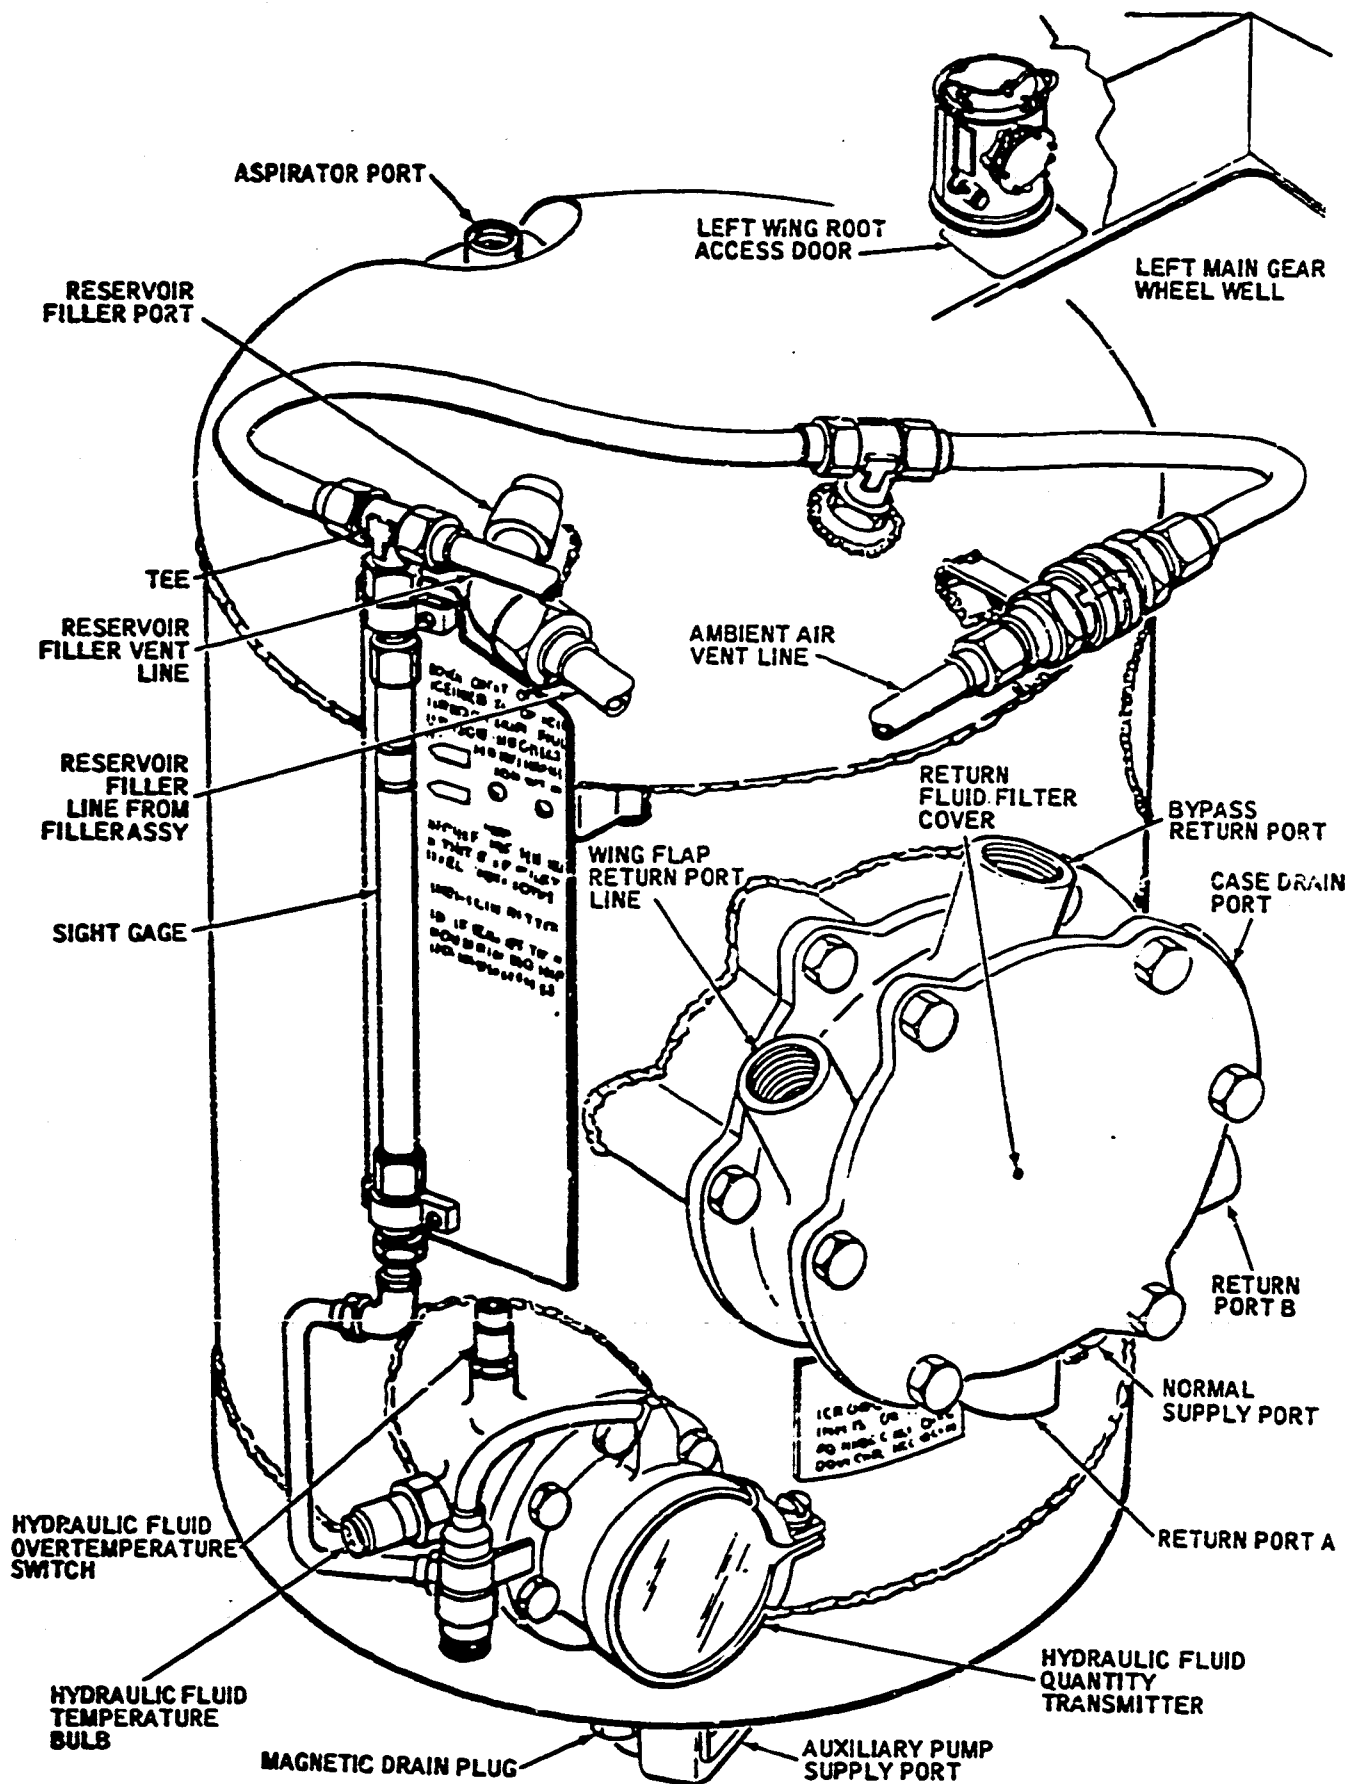

Hydraulic System Reservoir -- External View  
 Figure 3


HA2-2142

29-10-0  
 CODE 5  
 Page 9

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

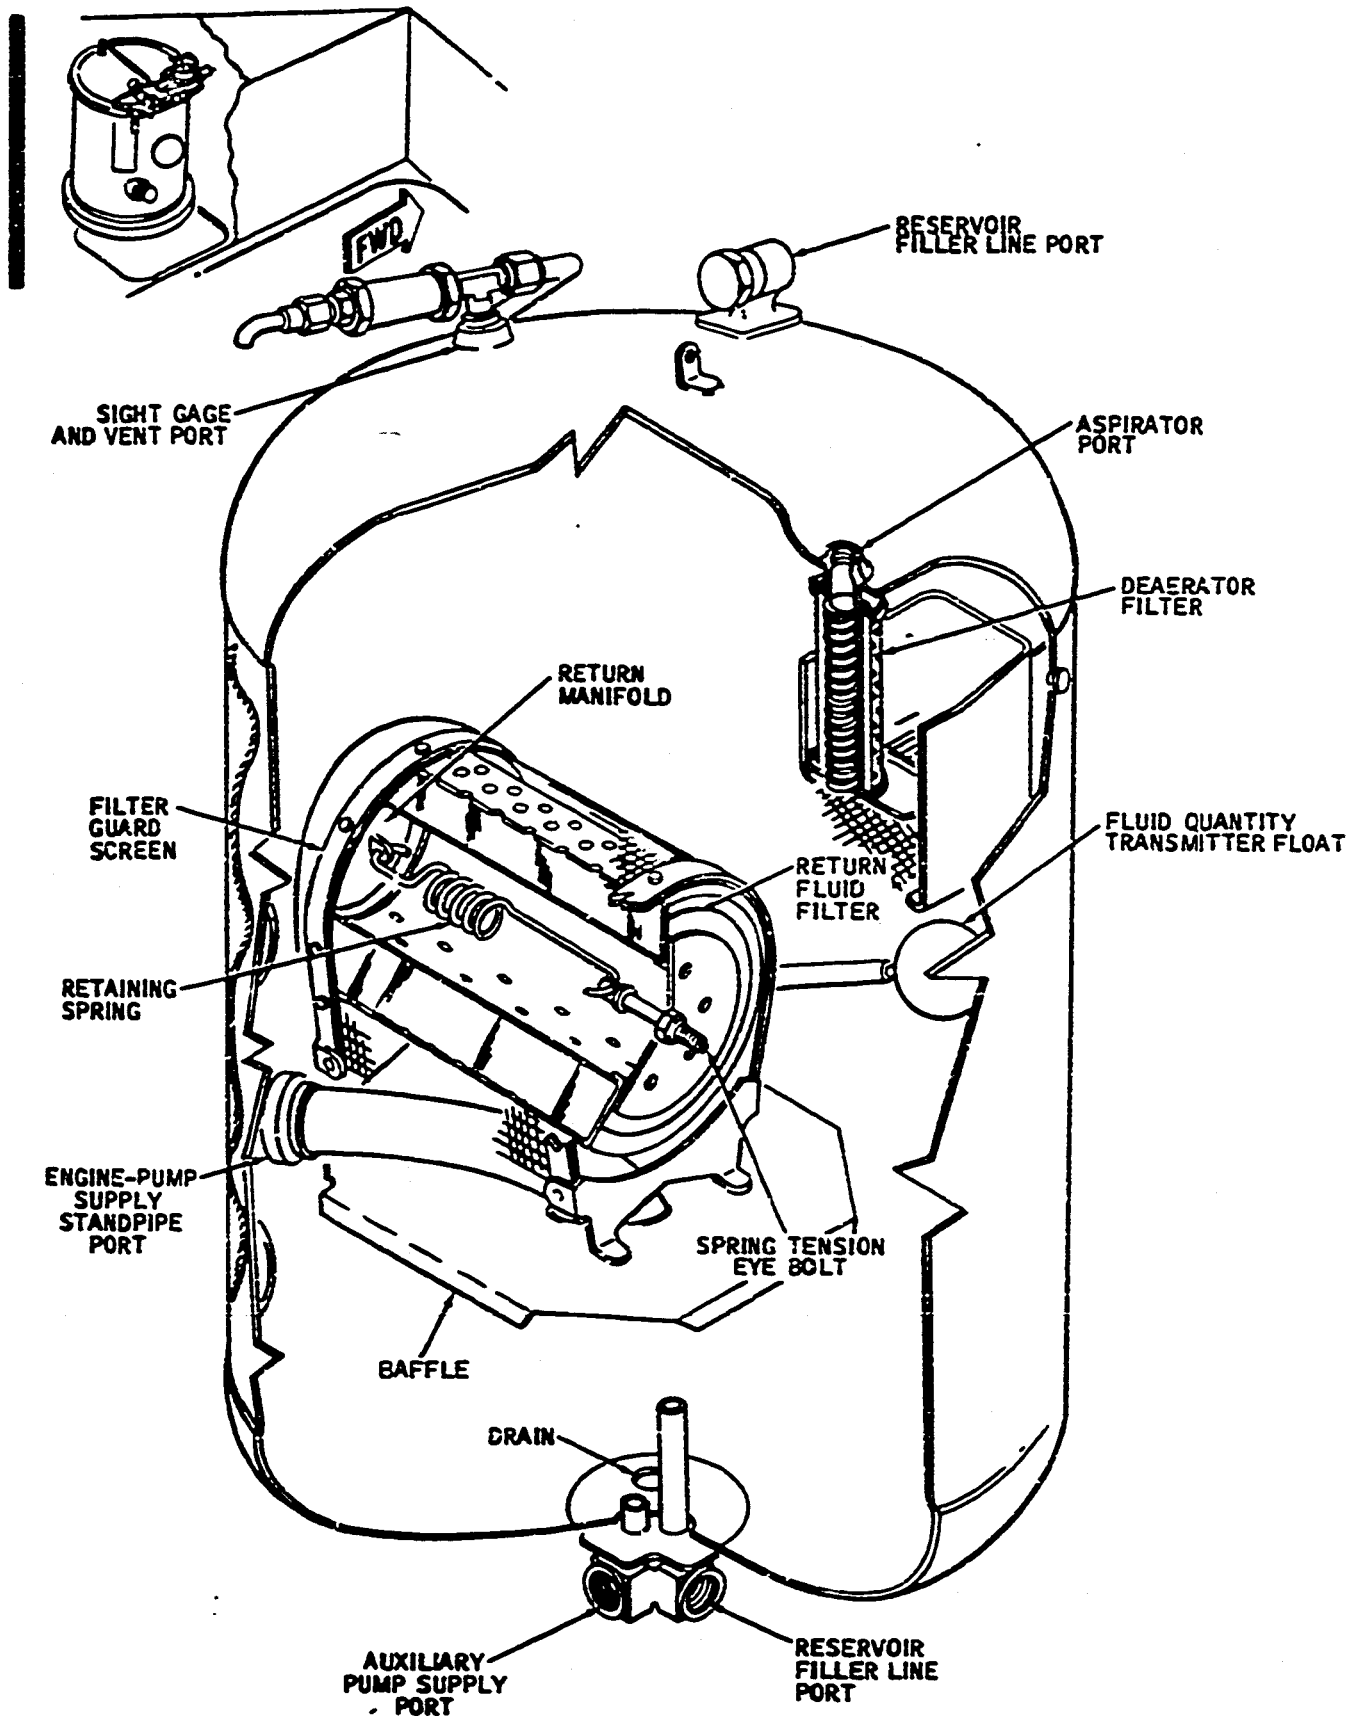

HA2-2143A

Hydraulic System Reservoir -- Cutaway View  
 Figure 4

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

sensing units, sight gage, instruction placards, magnetic drain plug, and system supply ports.

- (2) The reservoir is pressurized with air from the regulator-aspirator to a range of 30 to 35 psi and has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir volume is used for fluid and 1/10 is used for foam space.
- (3) The aspirator port through which the reservoir is pressurized is located in the recess on top of the reservoir. An aspirator-deaerator filter is supported in the reservoir by a screen and support box assembly which is mounted to the reservoir wall by two bolts.
- (4) The mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The return ports manifold is an open-centered ring, flanged at both sides and provided with five fluid ports around its circumference; return port A is located at the bottom, return port B is located at the lower right side, the wing flap return port is located at the upper left side, and the system selector valve bypass port is located at the top. One flange of the manifold is mounted with six bolts to the mounting flange on the reservoir. The return fluid filter cover fits into the open side of the manifold, and is attached to the outer manifold flange with six bolts to form a fluid-tight cover for both the manifold and the filter.
- (5) The return fluid filter is installed in the reservoir, behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the return fluid filter cover holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to the engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
- (6) A flanged adapter for the fluid quantity transmitter is welded to the reservoir below and to the left of the return ports manifold. The adapter is provided with two small port bosses for the hydraulic fluid temperature bulb and the hydraulic fluid overtemperature switch. The lower end of the sight gage connects to a third port in the adapter, while the top of the sight gage tees into a port at the top of the reservoir. An instruction plate is mounted behind the sight gage and the vacuum breaker check valve tees into the port at the top of the reservoir that is used by the sight gage.

B. Hydraulic Reservoir Return Fluid Filter (See Figure 4.)

- (1) The reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply. The filter is located behind the return ports manifold, and is spring loaded to act as its own relief valve. Access to the filter is by removing the return fluid filter cover from the return ports manifold by removal of

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 5  
Page 11

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

six bolts. The filter is attached by the retaining spring to the cover and is withdrawn from the reservoir when the cover is removed.


- (2) Externally, the filter consists of two perforated concentric tubes. The area between the tubes is closed by metal end caps which are bonded to the two tubes. A resilient rubber gasket is bonded to each of the caps. Each gasket must be smooth and flat for proper sealing of the filter. The gaskets act as a static seal and a relief valve seat.
- (3) Internally, the filter has a 10-micron, resin-impregnated, convoluted paper-type filter element. The area of the filter element is approximately 1960 square inches. The filter is held in place by a retaining spring. One end of the spring is attached to an eyebolt located inside the return port's manifold cover. The spring passes through the center chamber of the filter and is connected to another eyebolt. This eyebolt is secured to a large washer and plate by means of a self-locking nut. The washer seats on the rubber gasket which is bonded to the filter. The fluid enters the center chamber of the filter and passes through the inner tube of the filter to the filter element by means of perforation holes. Foreign matter is filtered out by the filter element, and the fluid leaves the element through perforation holes in the outer tube. When the element becomes saturated with foreign matter, the filter acts as its own relief valve and unseats at 20 to 25 psi above normal return pressure which allows fluid to bypass the filter and enter the reservoir.

C. Hydraulic Reservoir Air Pressure Regulator-Aspirator (See Figure 5.)

- (1) The reservoir air pressure regulator-aspirator is a jet-type air pump, regulated by a pressure-sensitive shutoff valve. The unit pressurizes the hydraulic reservoir with air to the operating pressure range of 30 to 35 psi. The regulator-aspirator is located on the top inboard side of the reservoir and is mounted on the reservoir retainer ring. Access to regulator-aspirator is through the left wing root access door.
- (2) The regulator-aspirator assembly consists of a main aspirator body and a regulator housing. The main aspirator body has two inlet ports and one outlet port. The ports are permanently identified inlet, outlet, and air inlet. The plug for an air check valve is located near the outlet port. A chemically treated paper filter is installed near the aspirator body air inlet port in the air line from the pressurized cabin area. A metal screen filter is installed on the check valve which tees into the aspirator body air inlet port.
- (3) The reservoir air pressure regulator-aspirator operates basically with a jet pump action which is regulator controlled. Fluid enters the assembly through the fluid inlet port where it is filtered and then ported through the valve assembly of the regulator. During normal operation, when air pressure at the outlet port is under 30 psi, the valve is open, porting fluid to the nozzle. The orifice in the nozzle sprays the fluid through the venturi of the outlet port, creating a vacuum in the chamber around the venturi. When the vacuum becomes great enough to create a



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

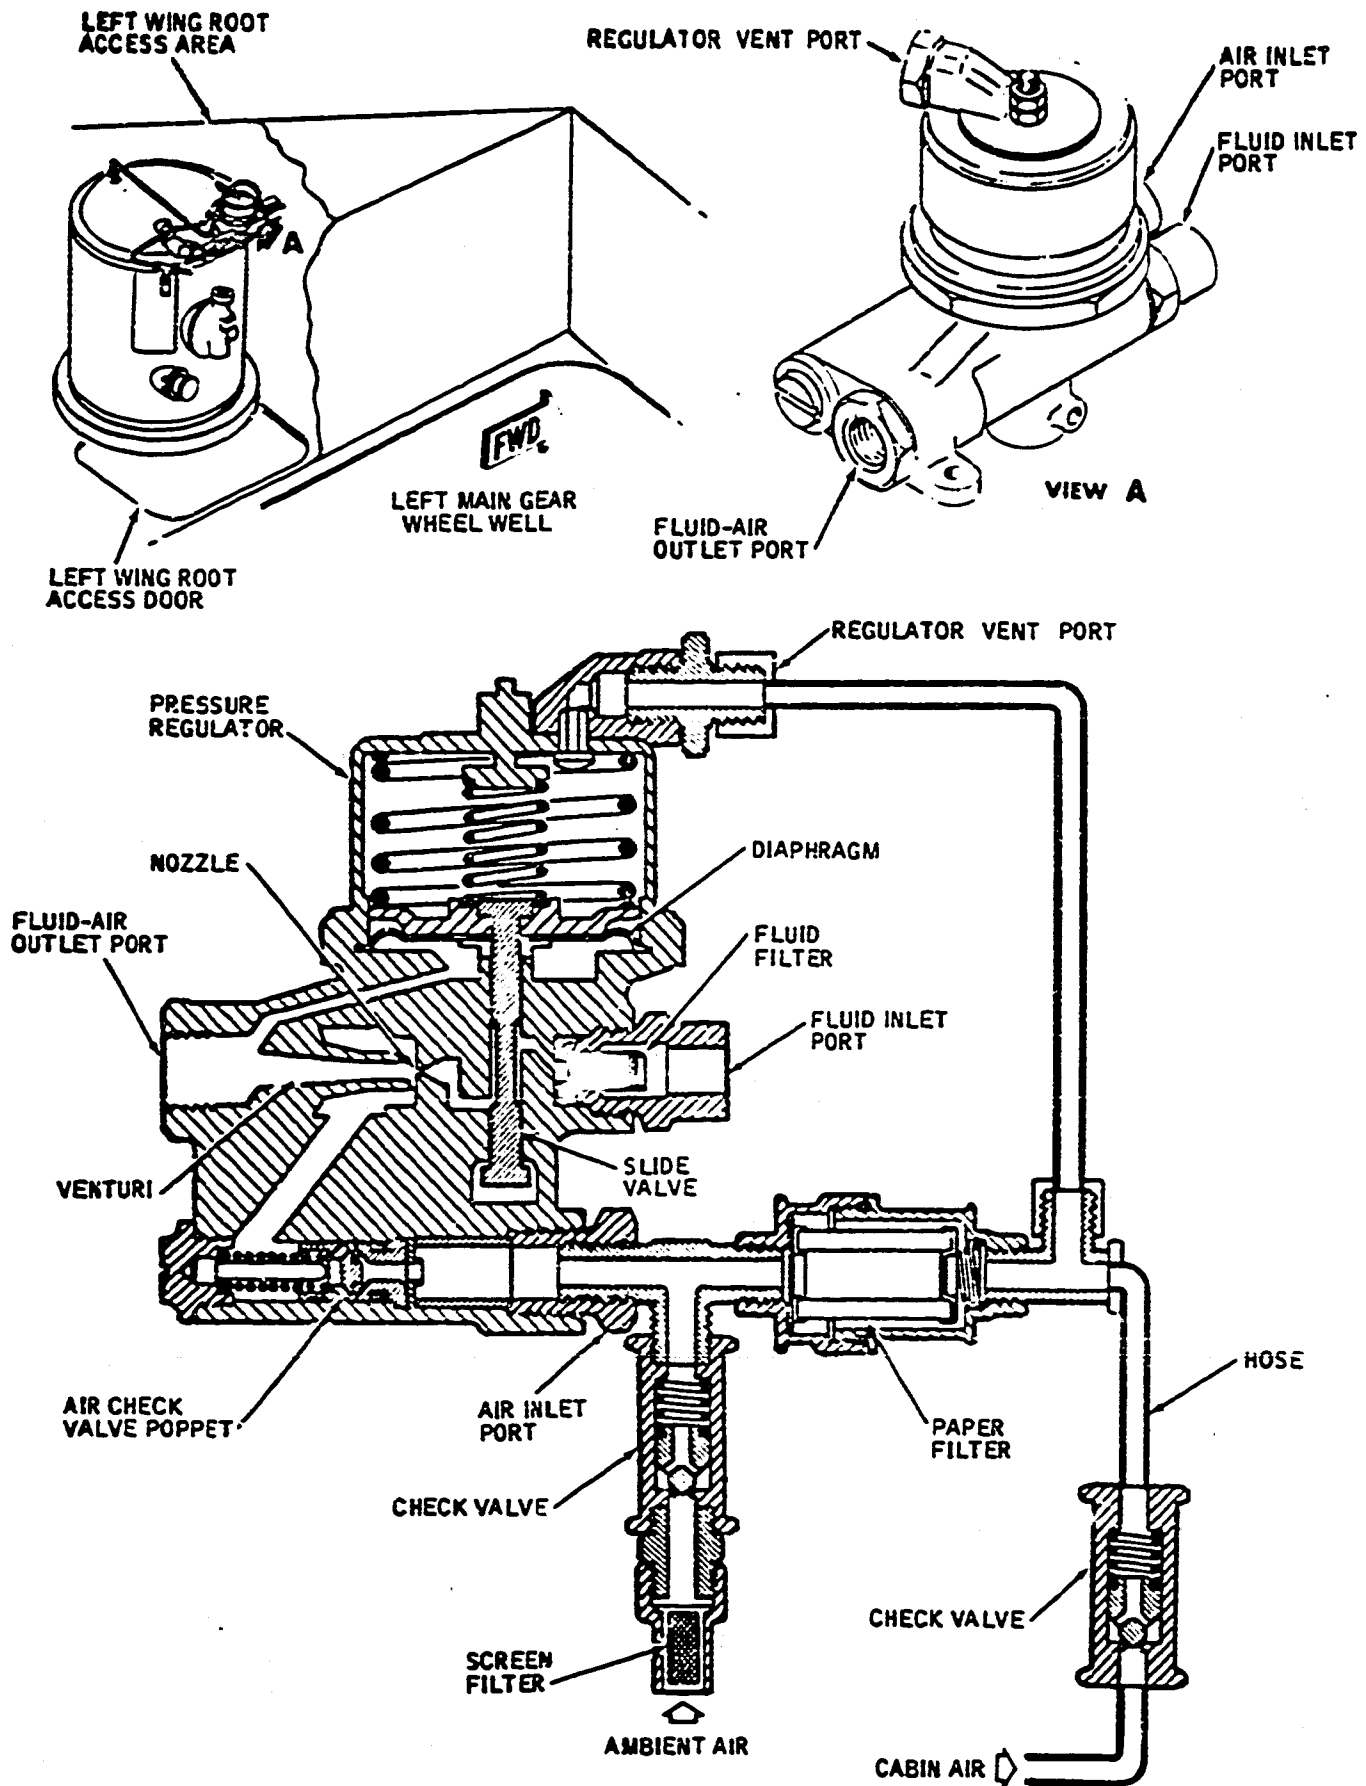

Reservoir Air Pressure Regulator-Aspirator -- Schematic  
 Figure 5

HA2-25

29-10-0  
 CODE 5  
 Page 13

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

pressure differential of approximately 1 psi, ambient air opens the air check valve. The air is ported to the chamber around the venturi and is siphoned, with the fluid, through the outlet port.

- (4) Hydraulic fluid inlet pressure at the engine-driven hydraulic pumps is improved at high altitude operation by supplying pressurized filtered cabin air to the reservoir regulator-aspirator instead of ambient outside air. Part of the inlet air is diverted by a tee fitting to the regulator chamber to provide a more positive regulating force on the diaphragm than would be obtained with low ambient pressures. The chemically treated paper filter, installed in the regulator-aspirator air supply line from the cabin, removes smoke tars and impurities from the pressurized cabin air. The steel mesh screen filter, installed on the check valve which tees into the regulator-aspirator air inlet port downstream of the paper filter, removes dust, dirt, and foreign particles from the ambient air and serves as a standby to supply filtered air in event the paper filter is clogged.
- (5) As pressure in the reservoir builds up, back pressure is bled from the outlet port to the diaphragm chamber. The reaction on the diaphragm begins to move the slide valve to cut off the fluid flow. At 30 to 35 psi of back pressure, the diaphragm completely closes the slide valve, cutting off the flow of fluid. If there is a regulator malfunction, the aspirator stalls when outlet pressure reaches a maximum of 40 psi.
- (6) The aspirator is capable of pressurizing the reservoir to 30 to 35 psi in approximately 4 minutes at altitudes from sea level to 15,000 feet, when fluid is ported through the nozzle at 0.5 gpm at 3000 psi.


**D. Regulator-Aspirator Air Filters (See Figure 6.)**

- (1) The regulator-aspirator air filters remove ambient and cabin air impurities from the air which is used to pressurize the main hydraulic system reservoir. The filtering system is composed of two filters. One of which is a paper element filter, installed directly in the cabin air supply line near the regulator-aspirator. The other filter is a fine mesh, screen-type filter, installed on a check valve and positioned at right angles to the regulator-aspirator air inlet port. The screen filter, in addition to providing an immediate supply of ambient air during ground operations, serves as a standby air inlet to preclude air starvation of the regulator-aspirator in the event the paper element filter becomes clogged.


**E. Hydraulic Reservoir Relief Valve (See Figure 7.)**

- (1) The reservoir relief valve and the air pressure aspirator-regulator keep the reservoir pressurized to normal operating range. The valve relieves excess air pressure which may build up in the reservoir through thermal expansion in the system. The valve has an inlet port and an outlet port and consists, internally, of an inlet port seat and a spring-loaded poppet.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

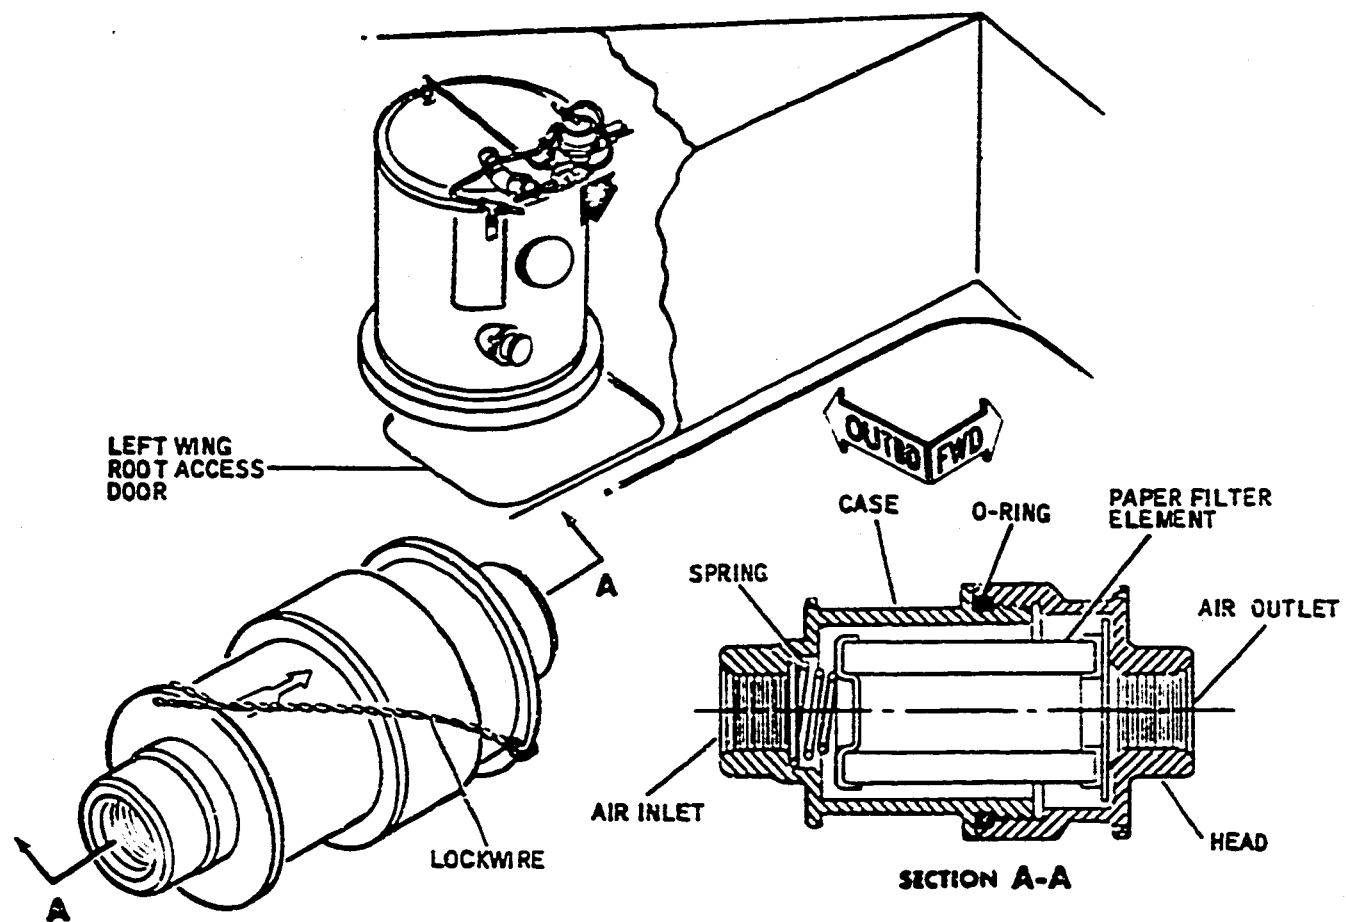

PAPER ELEMENT FILTER

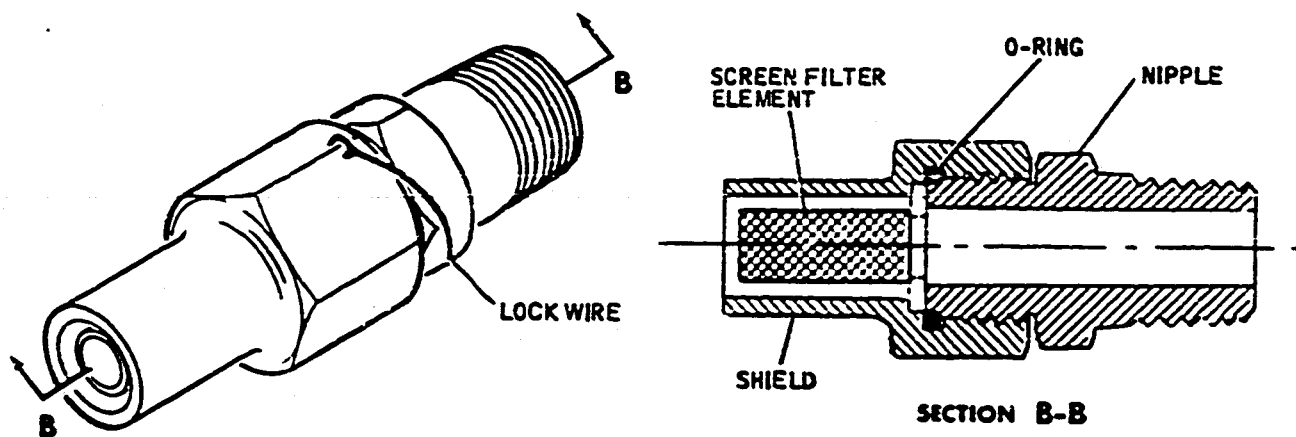

SCREEN FILTER

HA2-35


Regulator-Aspirator Air Filters -- Cutaway View  
 Figure 6

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 5  
 Page 15

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

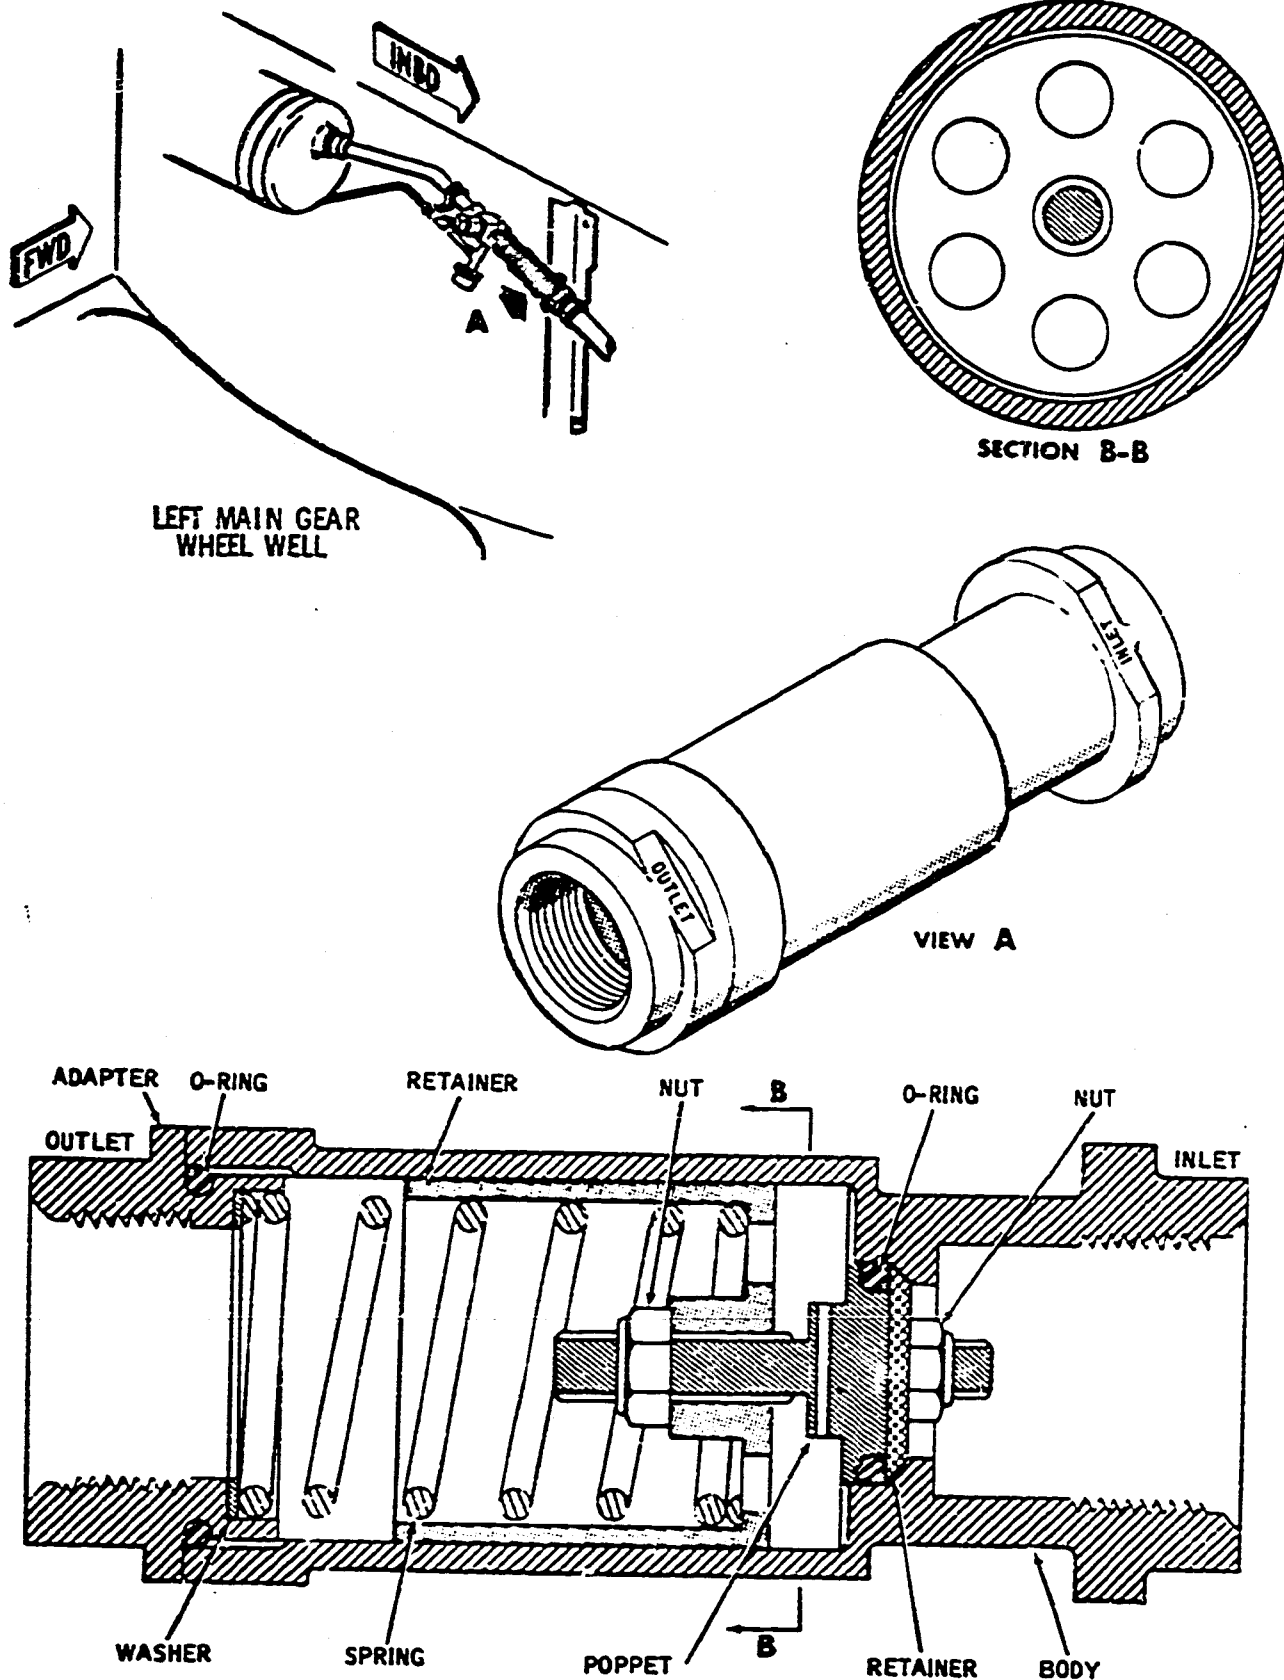

Hydraulic Reservoir Relief Valve  
 Figure 7

HA2-17

29-10-0  
 CODE 5  
 Page 16

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The relief valve is installed in the overboard vent line downstream of the hydraulic reservoir air bleed valve. In the event that excess pressure builds up in the reservoir, the poppet will start to relieve at 45 (+5, -0) psi. Full flow of 10 gpm is attained at 80 psi maximum. The poppet reseats at 90 percent of the opening pressure.

F. Hydraulic Reservoir Air Bleed Valve (See Figure 8.)

- (1) The hydraulic reservoir air bleed valve and pressure gage are located on the aft side of the rear spar in the left main gear wheel well, inboard of the hydraulic reservoir air chamber. The bleed valve and gage are installed in the overboard vent line, between the reservoir air chamber and the reservoir relief valve.
- (2) The bleed valve is used to relieve the reservoir air pressure prior to disconnecting lines or components in the hydraulic system. The pressure gage provides a ready indication of the hydraulic reservoir air pressure and is used in conjunction with the bleed valve to indicate the air pressure status.
- (3) The air inflation valve is installed on the same fitting as the bleed valve and pressure gage. The air inflation valve is used to manually charge the reservoir with air or dry nitrogen.


G. Hydraulic Reservoir Vacuum Breaker Check Valve (See Figure 9.)

- (1) The hydraulic reservoir vacuum breaker check valve is installed on the regulator-aspirator mounting bracket, and connects to the tee fitting at the top of the reservoir. The valve is vented to ambient air. The purpose of this valve is to maintain atmospheric pressure in the reservoir, allowing hydraulic fluid to flow to the auxiliary hydraulic pump in the event of a failure of the reservoir pressurization system. The failure, or breakdown, of the pressurization system could cause a fluid starvation at the auxiliary hydraulic pump because of vacuum buildup in the reservoir.

H. Hydraulic Reservoir Air Chamber

- (1) The hydraulic reservoir air chamber is a small, cylindrical tank with a capacity of 700 cubic inches. It has two ports, an inlet port at the bottom of the chamber and an outlet port in one end of the chamber. The inlet port mounting boss is fitted with a drain plug. The air chamber is installed on the aft side of the rear spar in the left main gear wheel well, inboard and above the hydraulic reservoir filler assembly. Access to the air chamber is through the left main gear inboard door.
- (2) The air chamber provides for greater fluid capacity in the hydraulic reservoir by providing air and foam space for the reservoir in a separate container. Air pressure in the chamber is maintained by the regulator-aspirator and the air relief valve. The air pressure in the chamber and reservoir can be relieved, when desired, by the air bleed valve located downstream of the chamber. The air chamber is mounted


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

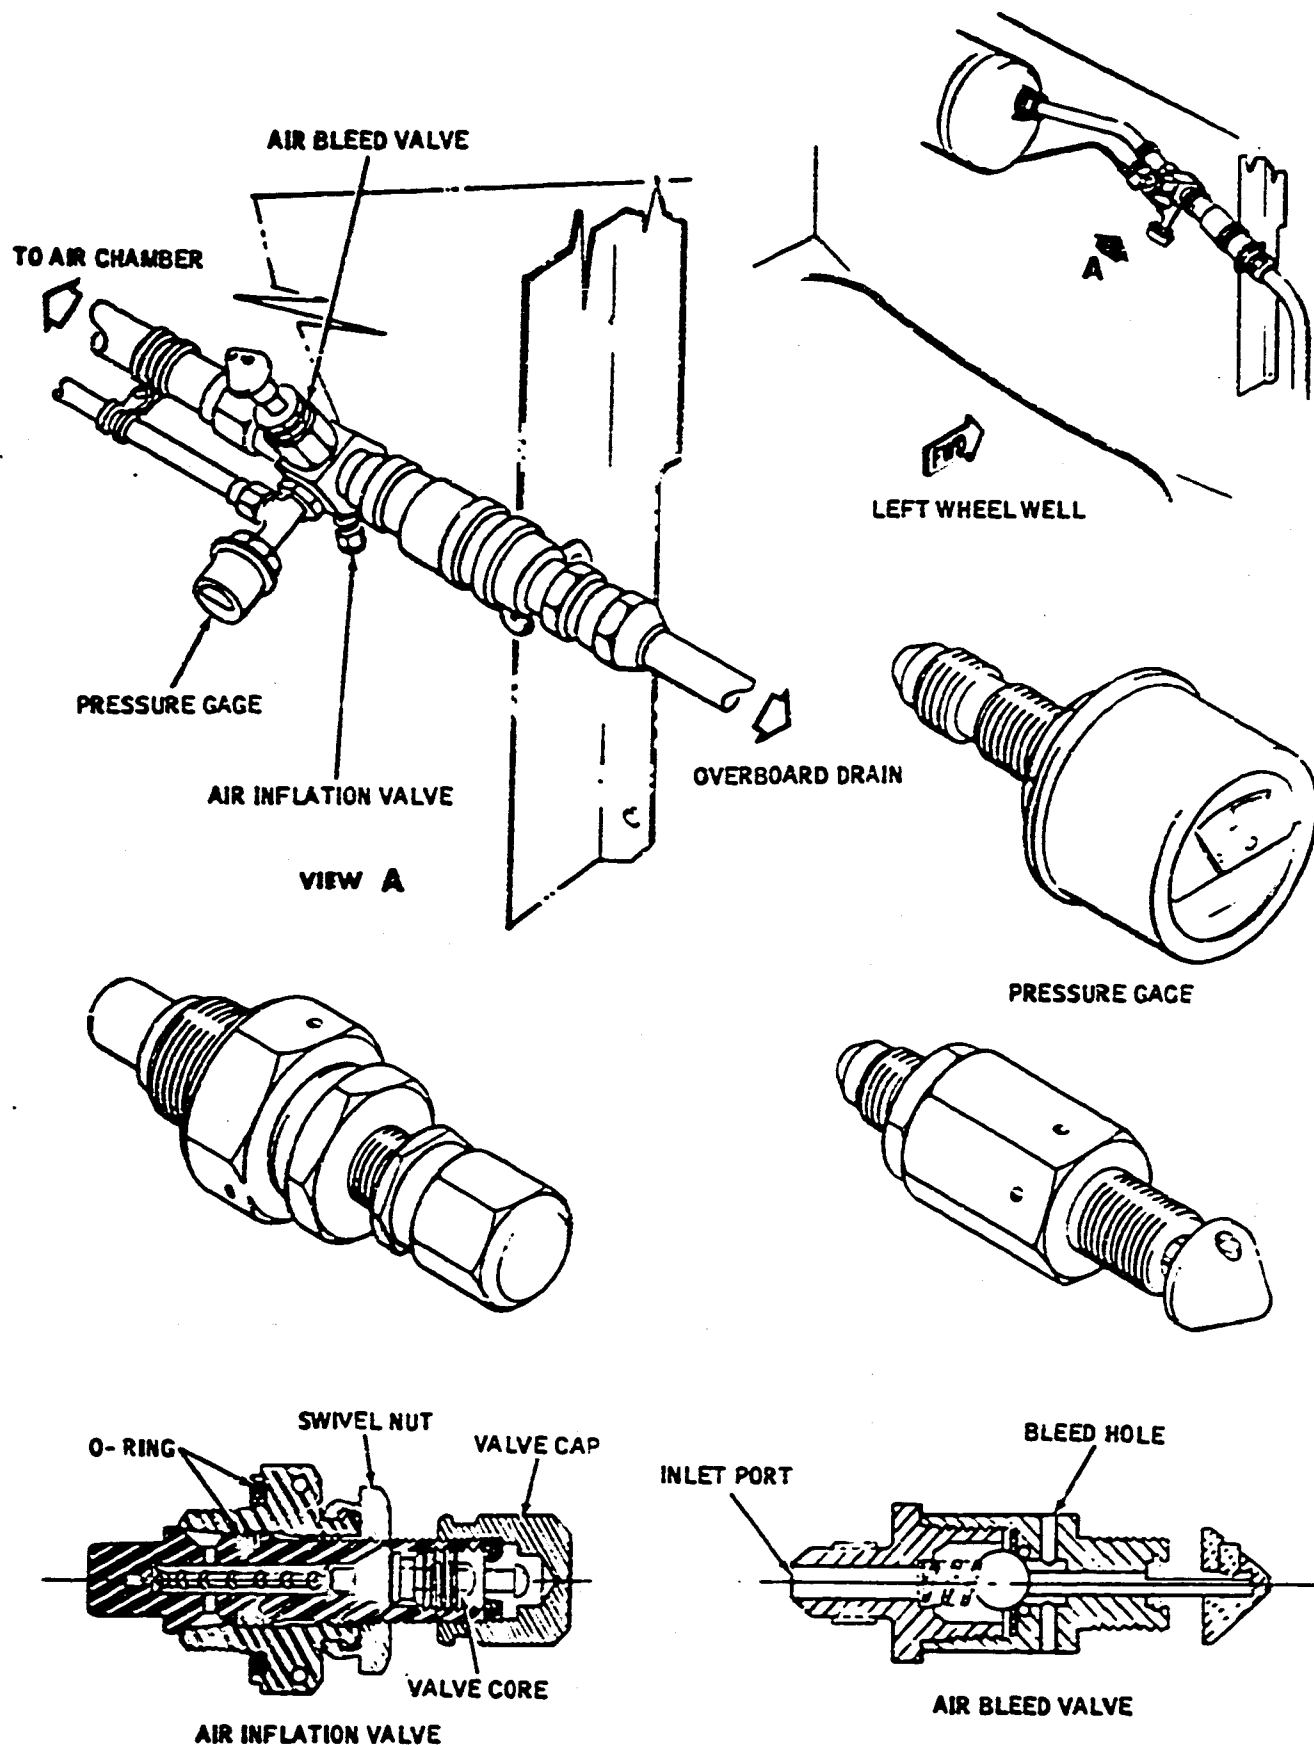

HA2-32

Reservoir Air Bleed Valve, Air Inflation Valve, and Pressure Gage  
 Figure 8

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

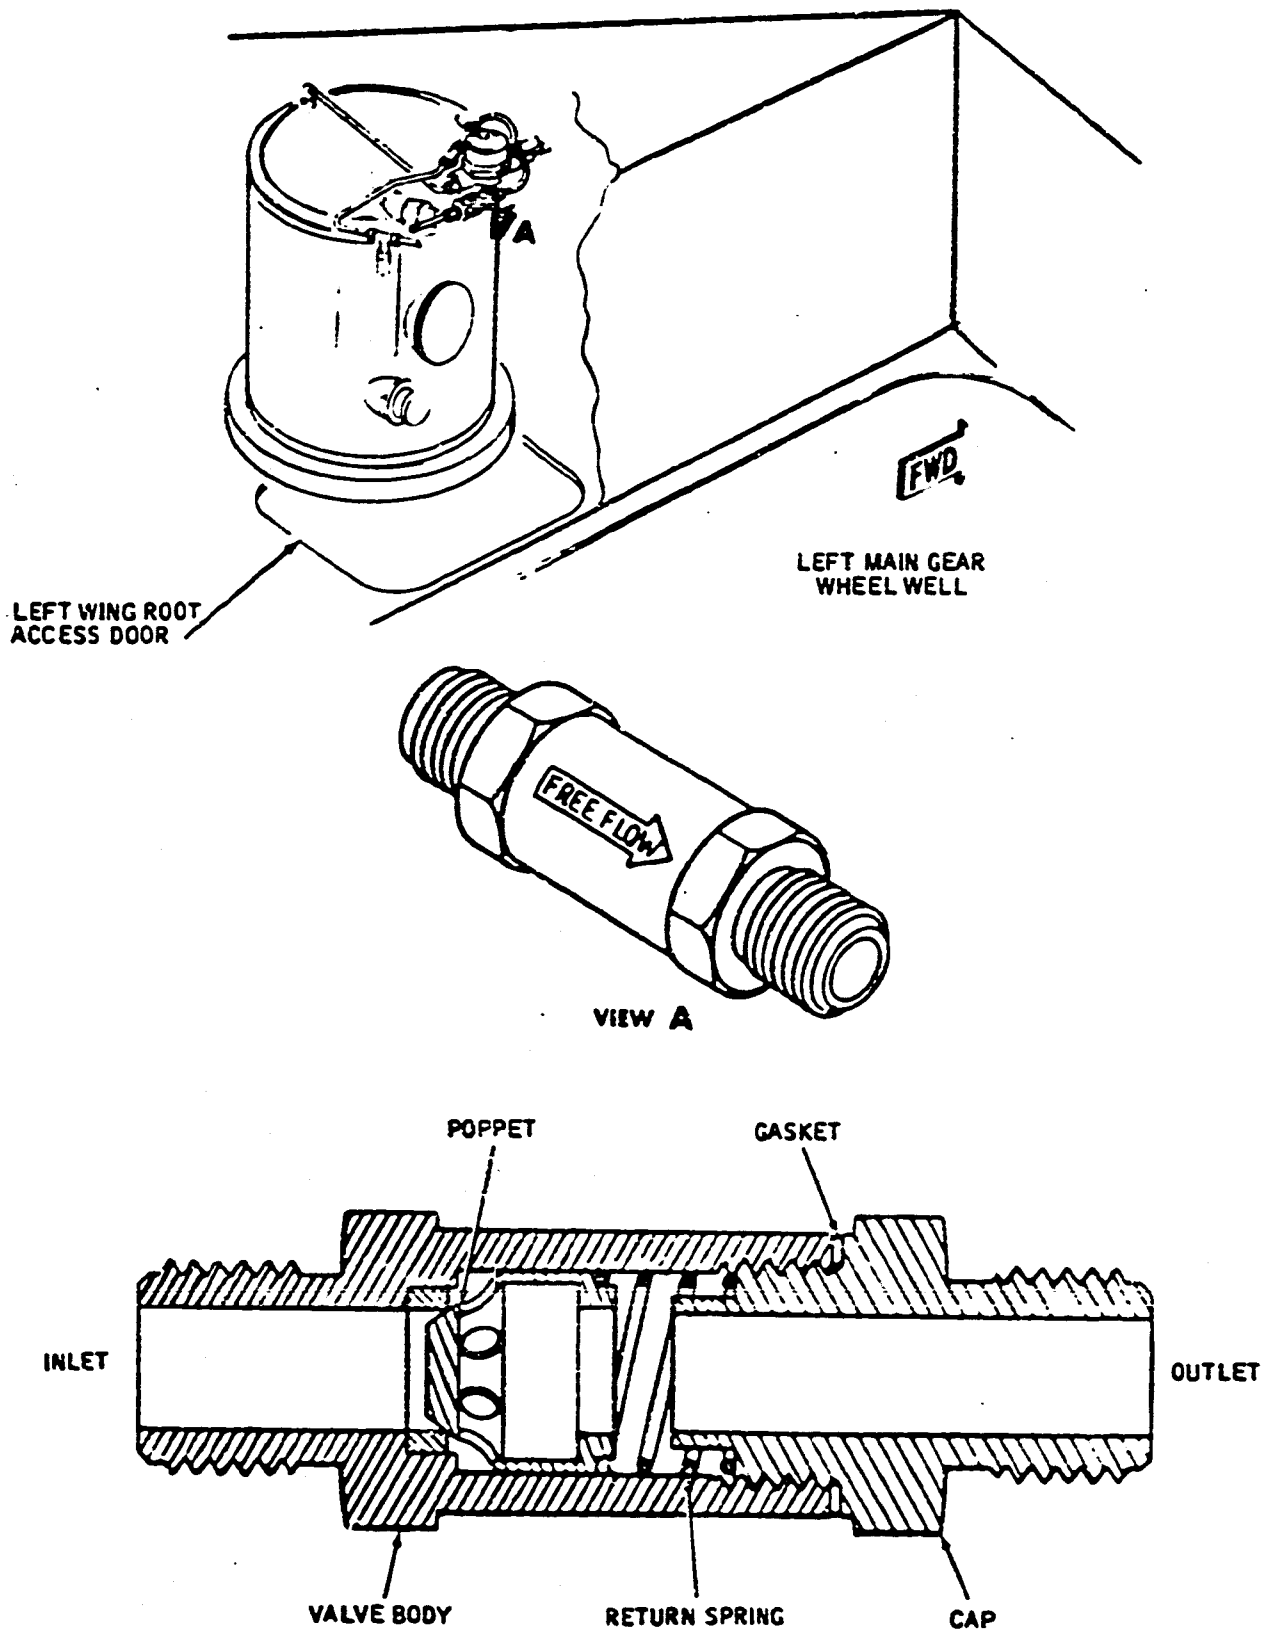

Hydraulic Reservoir Vacuum Breaker Check Valve  
 Figure 9

Jun 15/67

Printed in U.S.A.

HA2-33

29-10-0  
 CODE 5  
 Page 19

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

higher than the reservoir filler assembly, to prevent overfilling of the reservoir from reducing the available air space and to prevent fluid from being vented overboard through the reservoir relief valve.

I. Hydraulic Reservoir Port B Return Check Valve (See Figure 10.)


- (1) The reservoir port B return check valve is installed in port B of the reservoir to prevent reverse flow of hydraulic fluid from the reservoir to the return line. The check valve is located on the reservoir in the left wing root and is accessible through the left wing root access door.
- (2) Externally and internally, the port B check valve is a standard-type check valve with a 1500-psi rating. A nominal pressure of approximately 8 psi unseats the poppet, permitting fluid to flow through the valve. When the reservoir pressure exceeds the return line pressure, the poppet will seat and reverse fluid flow will be prevented.

J. Engine Hydraulic Fire Shutoff Valve (See Figures 11 and 12.)


- (1) The engine hydraulic fire shutoff valve is a gate-type, mechanically controlled valve, installed in the supply line of each engine-driven hydraulic pump. The engine hydraulic fire shutoff valve is actuated from the flight compartment to prevent the flow of hydraulic fluid into the engine section.
- (2) The engine hydraulic fire shutoff valve is mounted on a 2-piece channel bracket which is installed inside the wing leading edge, aft of the firewall of each inboard pylon. Access to the valve is through the access door located on the lower side of the wing leading edge, outboard of either the left or right inboard pylon. Each valve is located approximately 30 inches inboard of the access door.
- (3) Internally, the valve consists of a valve arm, valve arm link, cam plate, and slide blade. The valve arm link attaches to the valve arm and is allowed to swivel through an arc in relation to the valve arm. The link has a stop that will contact the arm when the two have traveled to the valve closed, full overtravel position. In the full open pretravel position, the link contacts the arm stop.
- (4) A roller attached to the end of the link rides in, and extends through, a J-shaped slot in the cam plate. The rotation of the valve arm causes the link roller to follow the cam slot, allowing the arm and link to move through independent arcs.
- (5) The slide blade (gate of the valve) is slotted near the one end and also receives the link roller extending through the cam slot. The slide blade is positioned parallel to the cam plate and is guided by two grooves in the housing. This will allow the blade to open or close through porting of the valve by the action of the arm and link. The cam plate is pinned to the valve shaft, securing it rigidly in two positioning grooves in the housing. A pin-indicator is provided to relate valve position to a reference plate placarded open and closed.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

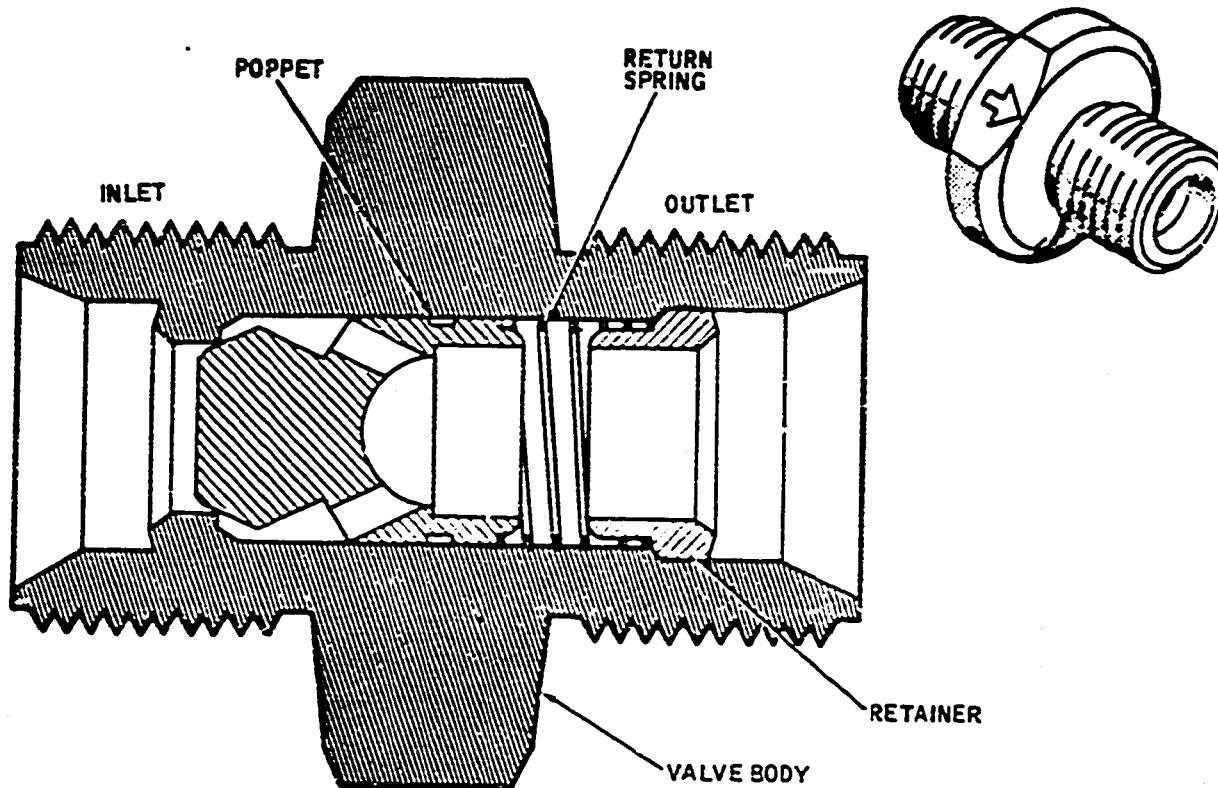

MINIATURE CHECK VALVE

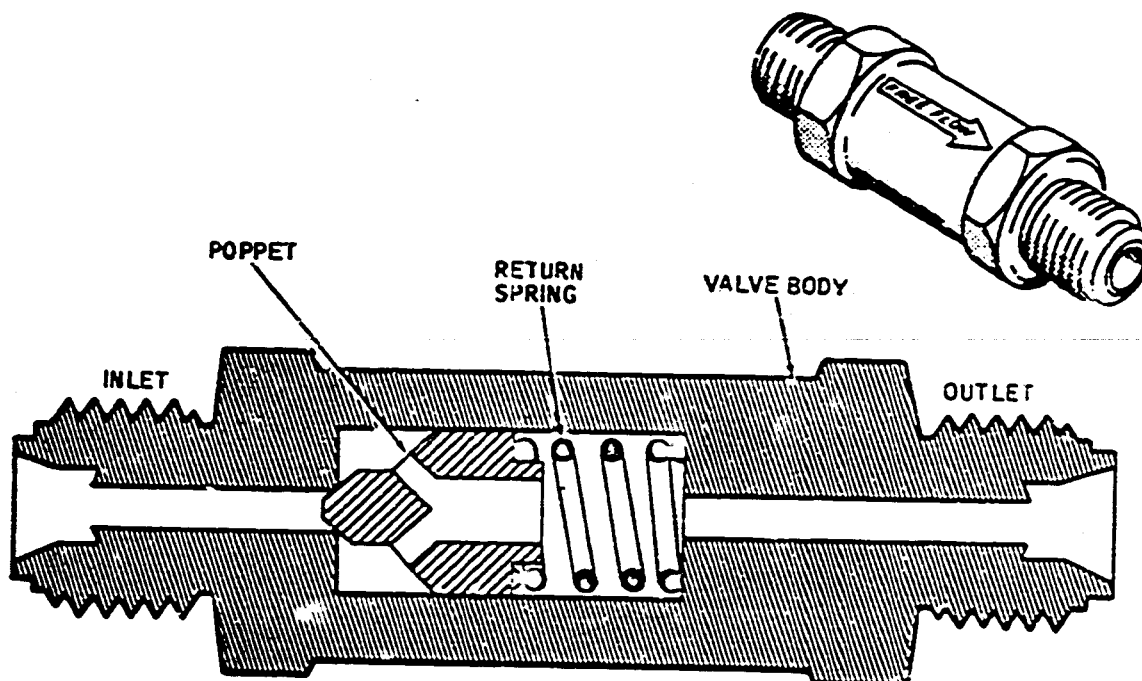

STANDARD CHECK VALVE

Hydraulic Check Valves -- Typical  
Figure 10


HA2-18A

Oct 1/67

Printed in U.S.A.

29-10-0  
CODE 5  
Page 21



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

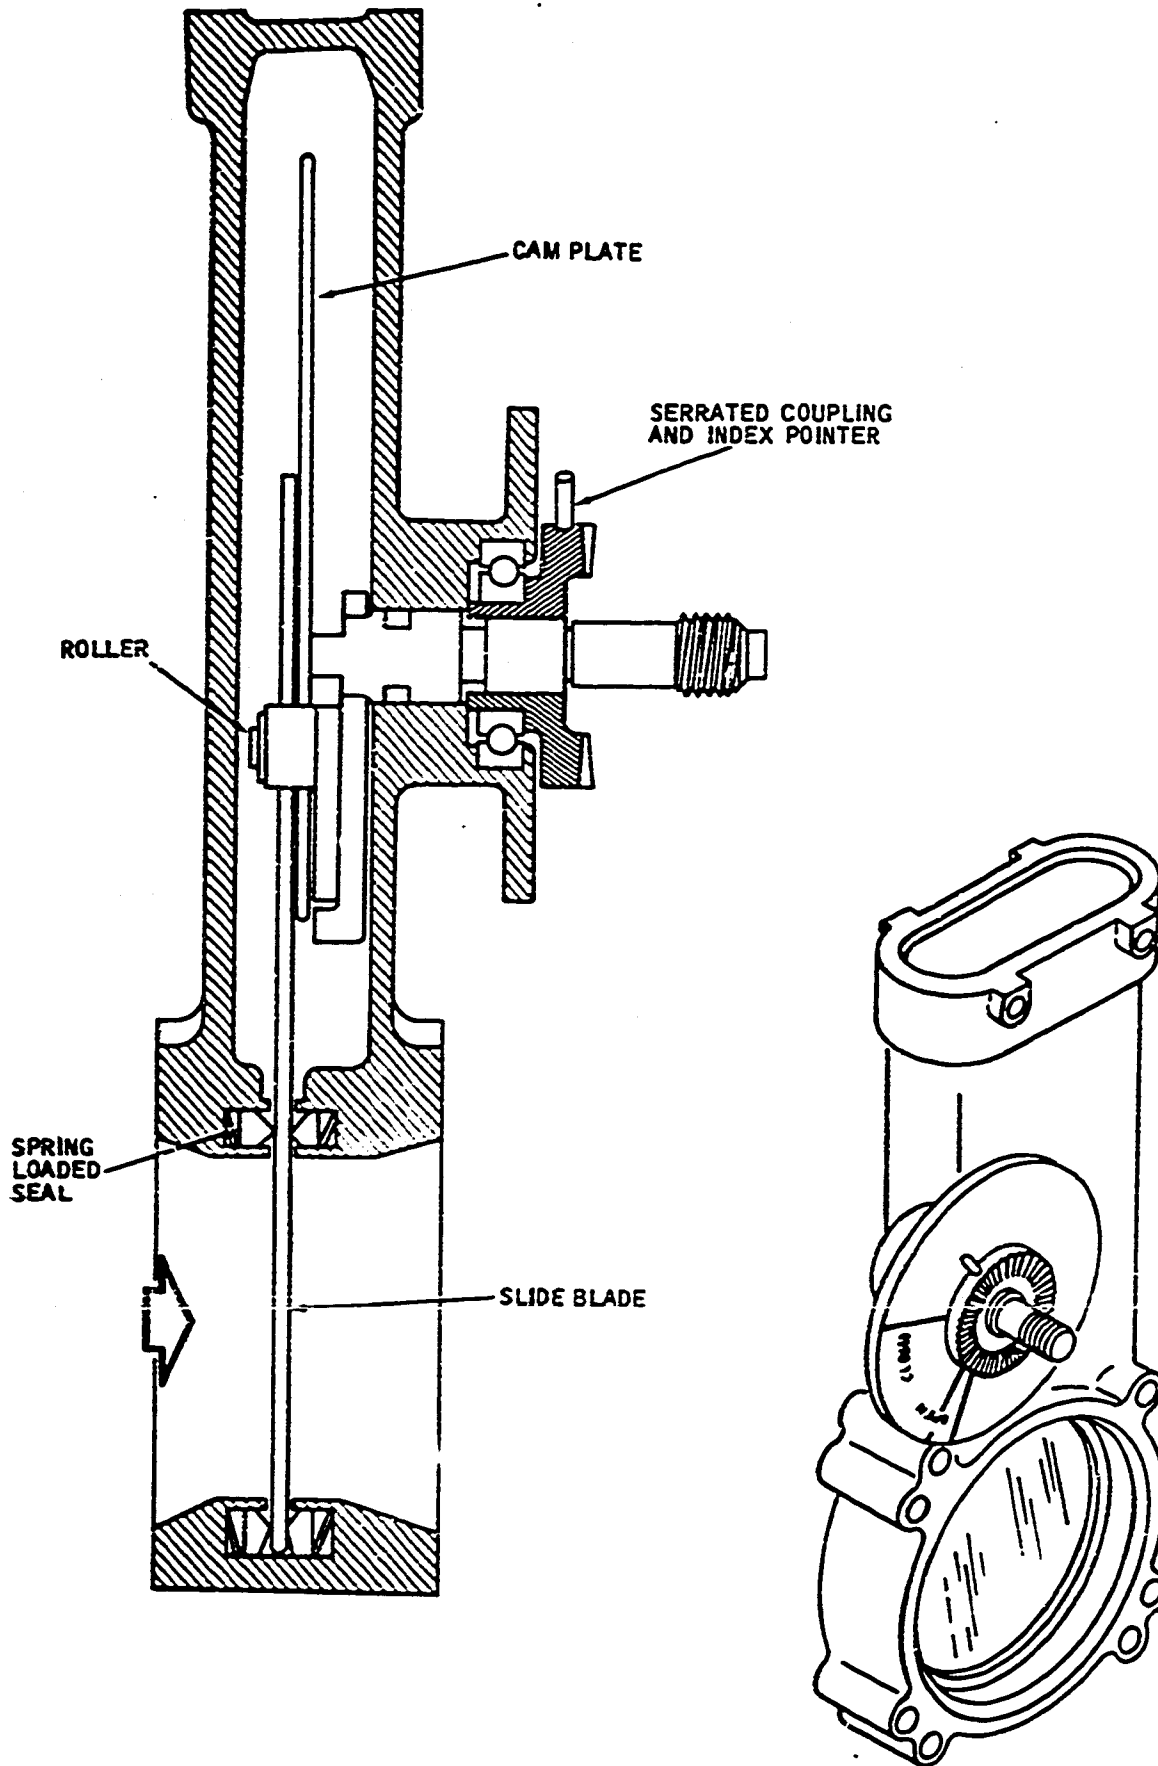

Engine Hydraulic Fire Shutoff Valve -- Schematic  
Figure 11

HA2-2209

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

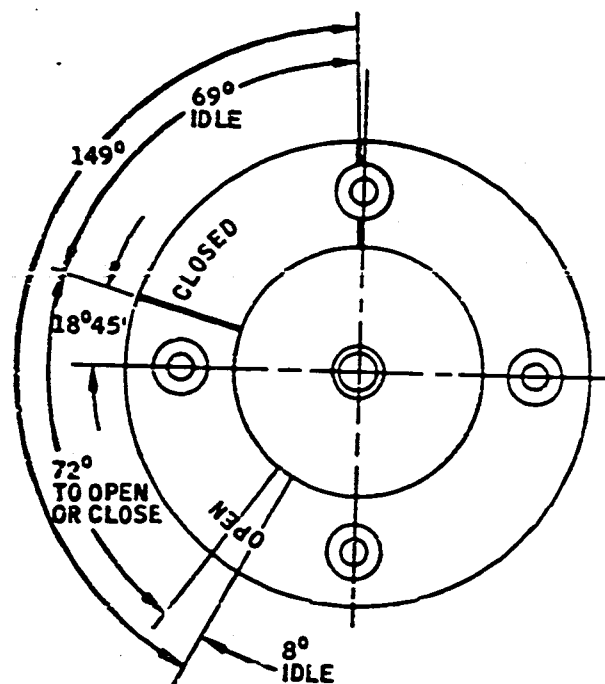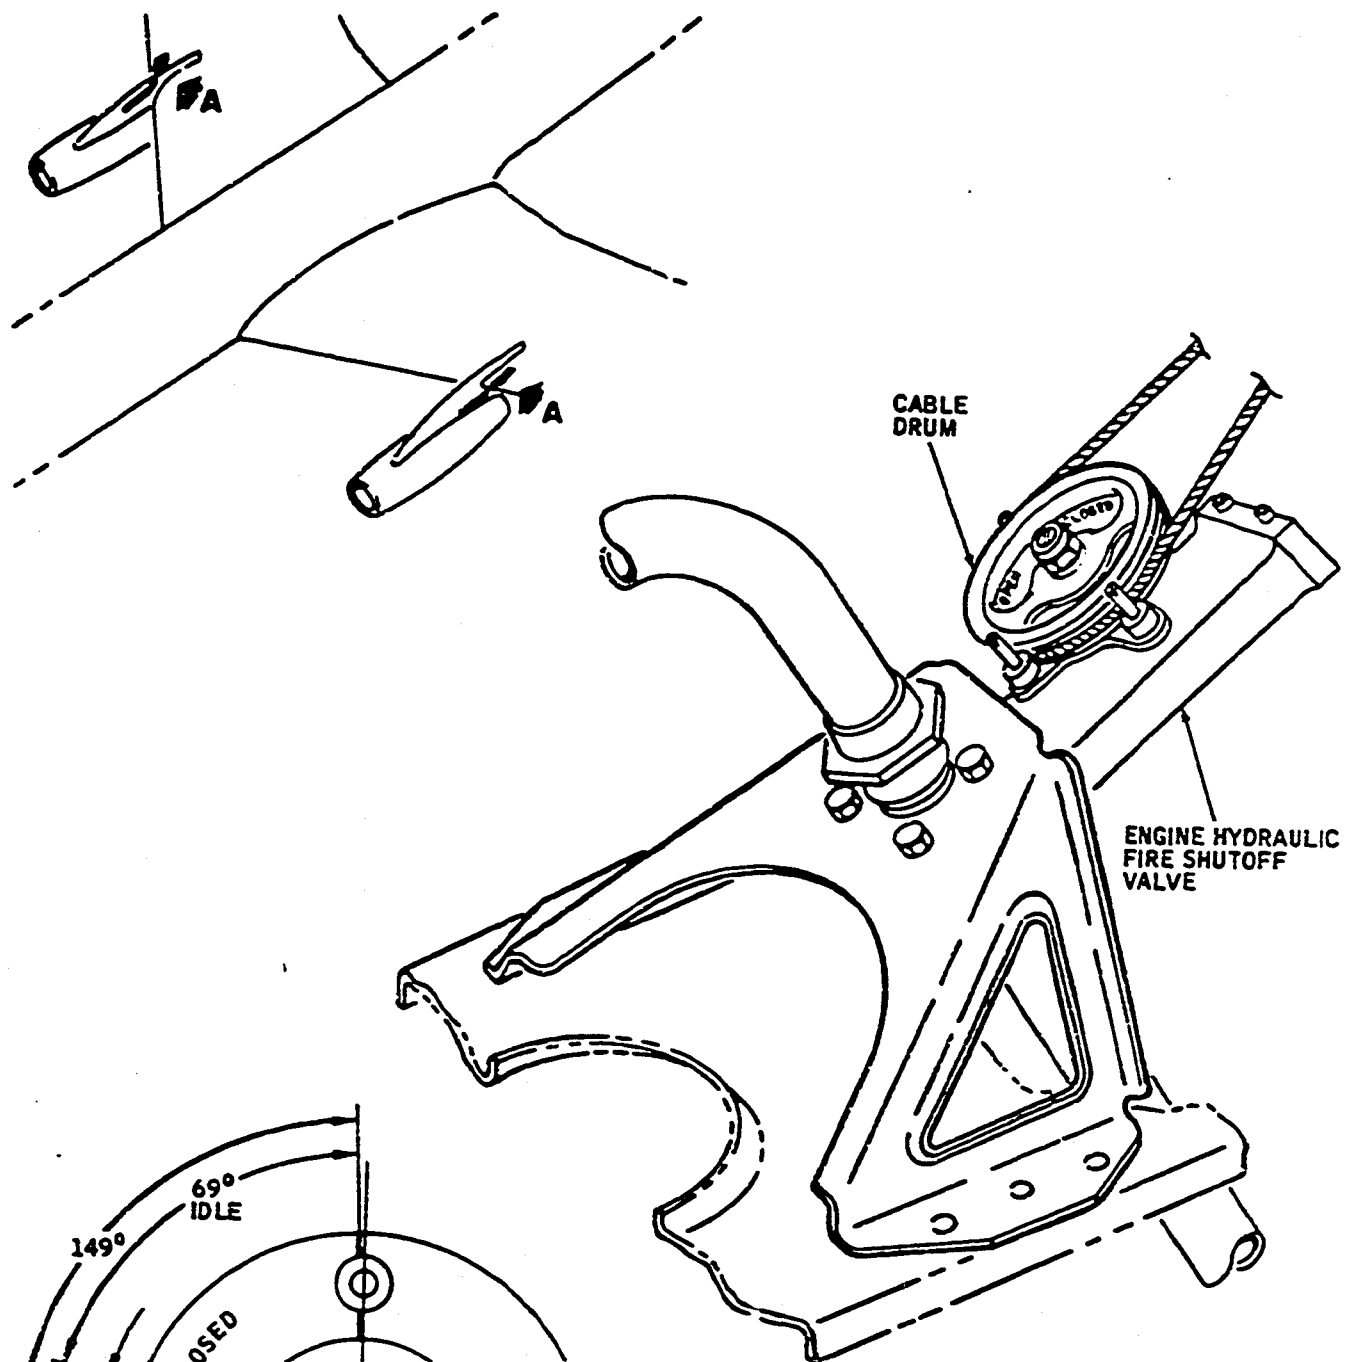

VALVE POSITION DIAGRAM

Engine Hydraulic Fire Shutoff Valve  
 Figure 12

HA2-2976

29-10-0  
 CODE 5  
 Page 23

Jun 15/67

Printed in U.S.A.




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) The engine hydraulic fire shutoff valves are cable actuated by the fire control handles, located on the overhead switch panel in the flight compartment. When the fire control handle for either inboard engine is moved, the cable system rotates the drum which is attached to the corresponding shutoff valve shaft. This action extends the valve blade into the fluid passage to block the flow of fluid. The valve operates from open to close by clockwise rotation of the cable drum. The valve gate will idle during the first 8 degrees of rotation of the cable drum, and then will close in the next 72 degrees. The cable drum will continue to rotate the shaft for an additional 69 degrees after the gate valve is closed, locking it overcenter. Total travel of the cable drum is 149 degrees.

K. Engine-Driven Hydraulic Pump (See Figure 13.)

- (1) A variable-displacement, pressure-compensated, engine-driven hydraulic pump is installed on each inboard engine. The pump incorporates a solenoid bypass feature for reducing the output of the pump. The bypass valves are controlled by two engine hydraulic pump control switches in the flight compartment. The switch for the hydraulic pump on engine No. 2 is placarded left, on and bypass. The switch for the hydraulic pump on engine No. 3 is placarded right, on and bypass. When either of the two engine hydraulic pump control switches is placed in the bypass position, the bypass valve solenoid for that hydraulic pump is energized and the pump pressure decreases to 300 ( $\pm 100$ ) psi. When either switch is in the on position, the control circuit to the corresponding bypass valve is open and the hydraulic pump operates normally in the pressure range of 2850 to 3050 psi. The pump provides a continuous, non-pulsating flow of hydraulic fluid, under pressure, to the hydraulic manifolds for distribution throughout the hydraulic system. Each of the engine-driven pumps is located on the accessory drive pad of the inboard engines. These pumps are accessible through the access doors on the right side of the nacelles and removal of the engine bypass duct.
- (2) Three case drain ports are provided: two are on the yoke assembly housing, and the third is on the casing for the pressure control valve, adjacent to the inlet port fitting. The case drain port on top of the yoke assembly housing is used as the case drain connection to assure that the pump housing is full of fluid at all times. This drain connection is ported back to the low-pressure return port of the reservoir. The inlet port fitting is on top of the pump housing and the outlet port fitting is opposite to it on the bottom of the housing.
- (3) The yoke control piston casing is an integral part of the pump case. Four self-locking nuts are used to hold the piston casing end-plate in position. The bypass valve assembly, consisting of the valve body and a solenoid, is mounted externally on the pump case, under the yoke control piston casing. This solenoid valve is provided with an electrical connector. A pressure control regulator is installed on the bypass valve body by means of four bolts. This regulator is cylindrical and is provided with an external adjustment screw. A lock screw is used to retain the adjusting screw after the adjustment has been made.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

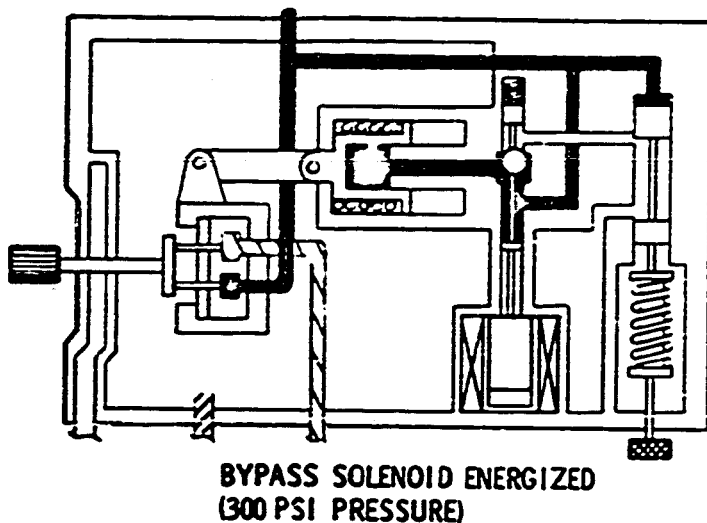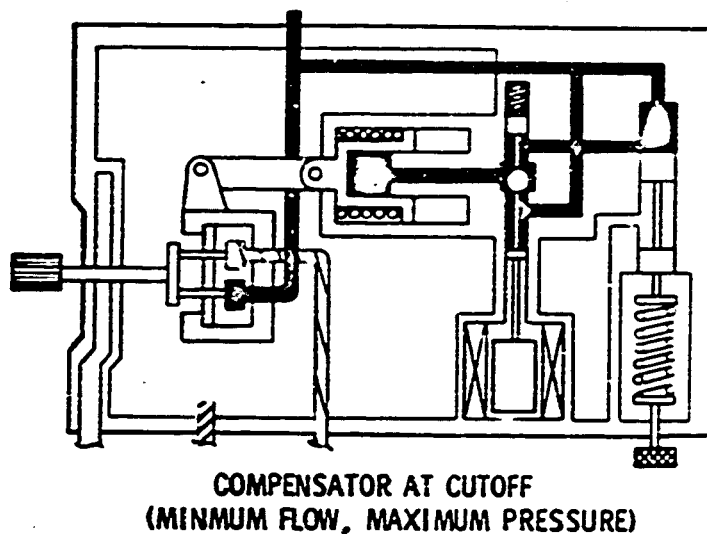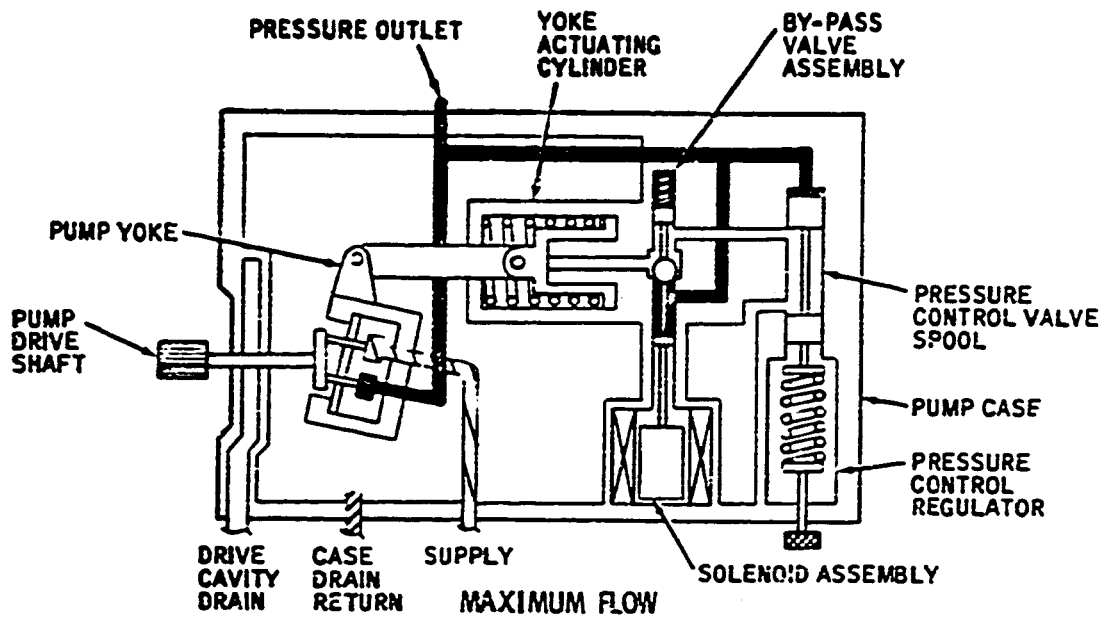

- PRESSURE
- CASE DRAIN
- SUPPLY
- DRIVE CAVITY DRAIN

HA2-837

Engine-Driven Hydraulic Pump Pressure Flow -- Schematic  
 Figure 13

29-10-0  
 CODE 5  
 Page 25

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) Hydraulic fluid enters the pump through an inlet port. Passages in the yoke carry the fluid to the valve plate, which ports the fluid to the cylinder block. The nine pistons in the cylinder block are actuated by the rotating driven shaft, thereby pressurizing the fluid. From the cylinder block, the fluid is routed to the outlet port of the yoke and then to the pump pressure lines. The pressure control regulator is actuated by pump output pressure that is bled to the regulator. The regulator meters the pressure to the yoke control piston, which positions the yoke.
- (5) The maximum pump pressure is determined by the adjustment of the pressure control regulator. The pressure control regulator allows maximum output flow (22.5 gpm at 3500 rpm) up to 2850 psi system pressure. When this pressure is reached, the yoke assembly starts to move towards the zero flow position.
- (6) Pressure continues to rise until the displacement is reduced from maximum flow to zero flow and 3000 psi is reached. The pump pressure stabilizes in accordance with system demand.


L. Engine-Driven Hydraulic Pump Check Valves (See Figure 10.)

- (1) Two check valves, rated at 3000 psi, are installed in the lines from each engine-driven hydraulic pump. One check valve is installed in the pressure line and the other is in the case drain line. The check valves in the pump pressure lines prevent reverse flow of hydraulic fluid through the pump, when the pump is inoperative or when external hydraulic pressure is supplied to the system. Access to the valves can be gained through an access door in the forward right apron of each inboard pylon. The valves are mounted on the exterior wall of the inlet box by means of the bulkhead fittings and retaining nuts.
- (2) Normal operating pressure will unseat the poppet, and fluid will flow through the valve. When pressure downstream of the valve exceeds pressure from the pump, the pressure, with the aid of the return spring, will seat the poppet. This prevents reverse flow of hydraulic fluid through the pumps.


M. Engine-Driven Hydraulic Pump Case Drain Filter (See Figure 14.)

- (1) A line-type, micronic filter, for use in a low-pressure hydraulic system, is installed in the engine-driven hydraulic pump case drain return line between the pump flow check valve and the hydraulic system reservoir. The case drain filter is installed on the aft surface of the rear spar opposite the leading edge of the inboard flap assembly. One filter is used for each engine-driven pump. Access is gained to the filter by lowering the flaps. A second check valve is installed adjacent to the filter in the downstream side of the case drain return line.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

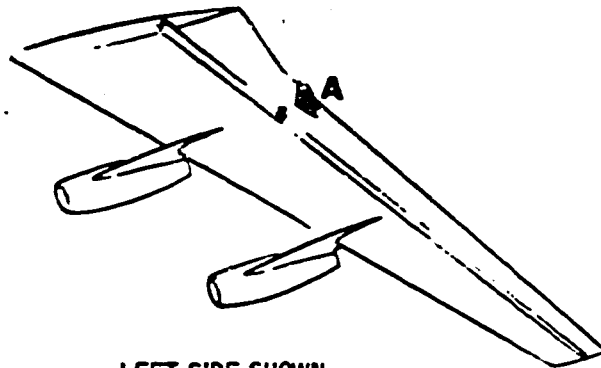

LEFT SIDE SHOWN  
 RIGHT SIDE OPPOSITE

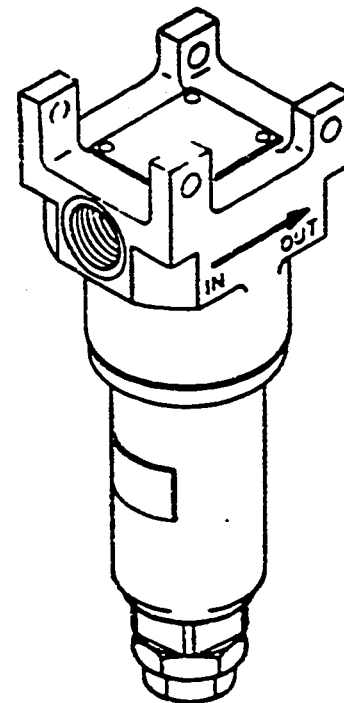

VIEW A

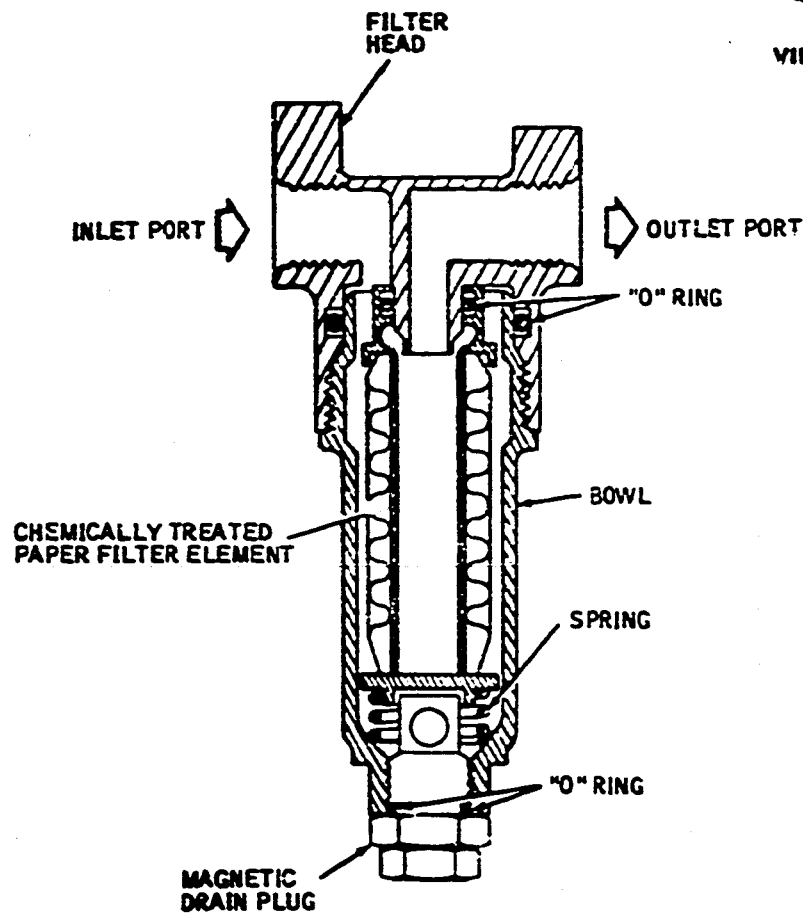

Engine-Driven Hydraulic Pump Case Drain  
 Filter -- Cutaway View  
 Figure 14

HA2-31

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 5  
 Page 27

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Externally, the filter is approximately 5 inches high and 2 inches wide, with ports marked inlet and outlet. The bowl is cylindrical in shape, with hex-shaped wrench flats at the lower end. A self-sealing, magnetic drain plug is installed in the bottom end of the filter bowl. The filter element is made of chemically treated paper.

N. Dual Filter and Relief Valve (See Figure 15.)


- (1) The hydraulic power system dual filter and relief valve consists of two filters and two relief valves installed in the same body. The unit filters the hydraulic fluid from the two engine-driven hydraulic pumps, and the pressure relief valves assure that excessive pressures do not build up in the pressure line from the pumps. The unit is located in the left main gear wheel well on the lower portion of the rear spar, approximately 1 foot outboard of the centerline shear web.
- (2) The unit consists of a casting with a flange-mounted pressure inlet port on each end. Two pressure outlets are located on the top of the casting. One outlet, centrally located, is the main pressure outlet to the system selector valve. The other, located to the left of the selector valve port, is the pressure outlet to the air pressure regulator-aspirator. The return outlet port for the relief valve portion of the unit is located on the center of the aft face of the body, canted upward. The nose gear return line is connected to a check valve installed in a return line port, located between the two filter bowls.
- (3) The pressure relief valves are located behind the pressure inlet ports and are connected to the return outlet port of the unit. The inlet from the nose gear return line is routed through the casting to the return outlet port.
- (4) If either of the filter elements becomes clogged, pressure above 3300 psi at the inlet port will unseat the poppet. Pressure above 3500 psi will allow full flow of 22.5 gpm to flow to the return port of the unit and back to the reservoir. The relief valves will reseal at approximately 3000 psi.
- (5) A check valve is installed in the system selector valve port to prevent reverse flow of pressure through the filter during auxiliary hydraulic pump operation.

O. System Selector Valve (See Figures 16 and 17.)

- (1) The system selector valve is a 3-position valve which permits directional control of fluid under pressure. The valve is installed on the left hydraulic power manifold and is accessible through the left main gear inboard door.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

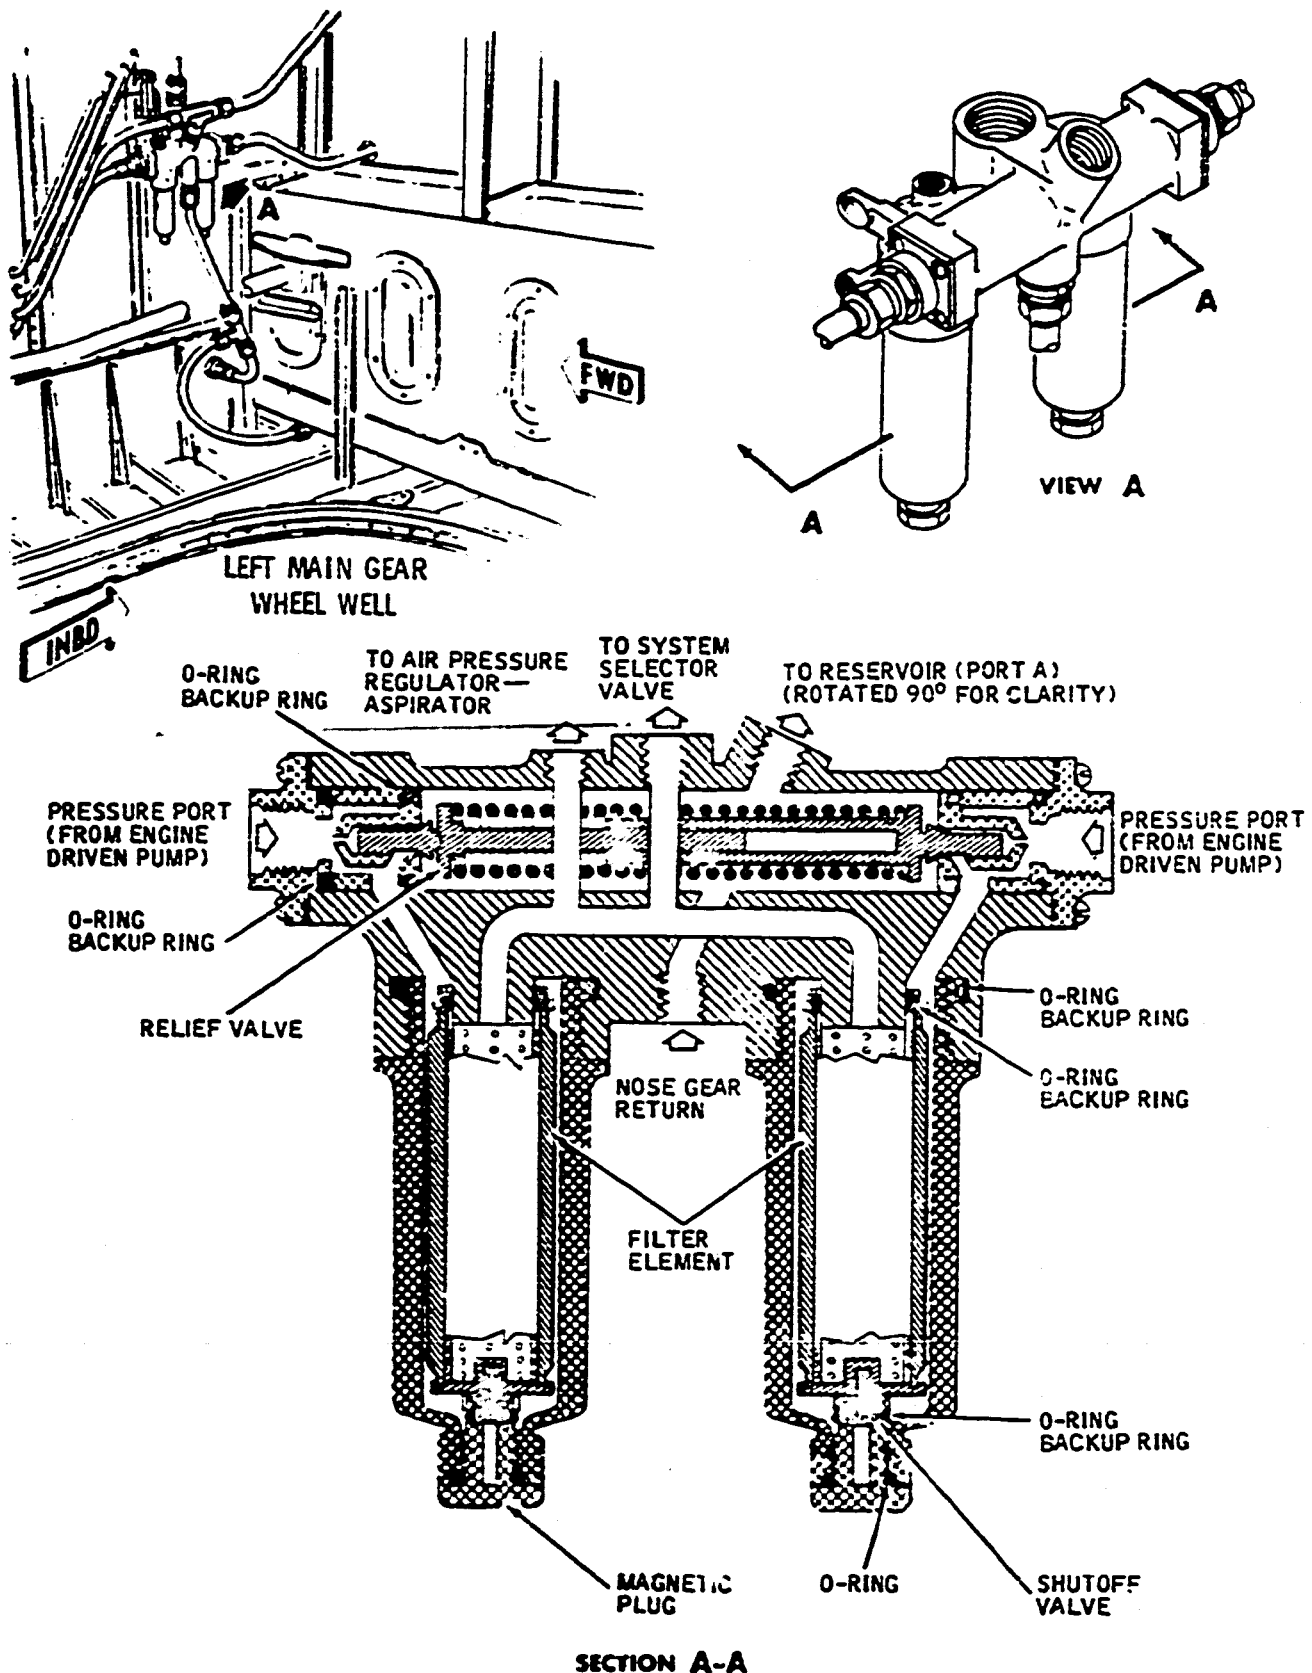

Dual-Filter and Relief Valve -- Cutaway Valve  
 Figure 15


HA2-20

29-10-0  
 CODE 5  
 Page 29

Jun 15/67

Printed in U.S.A.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

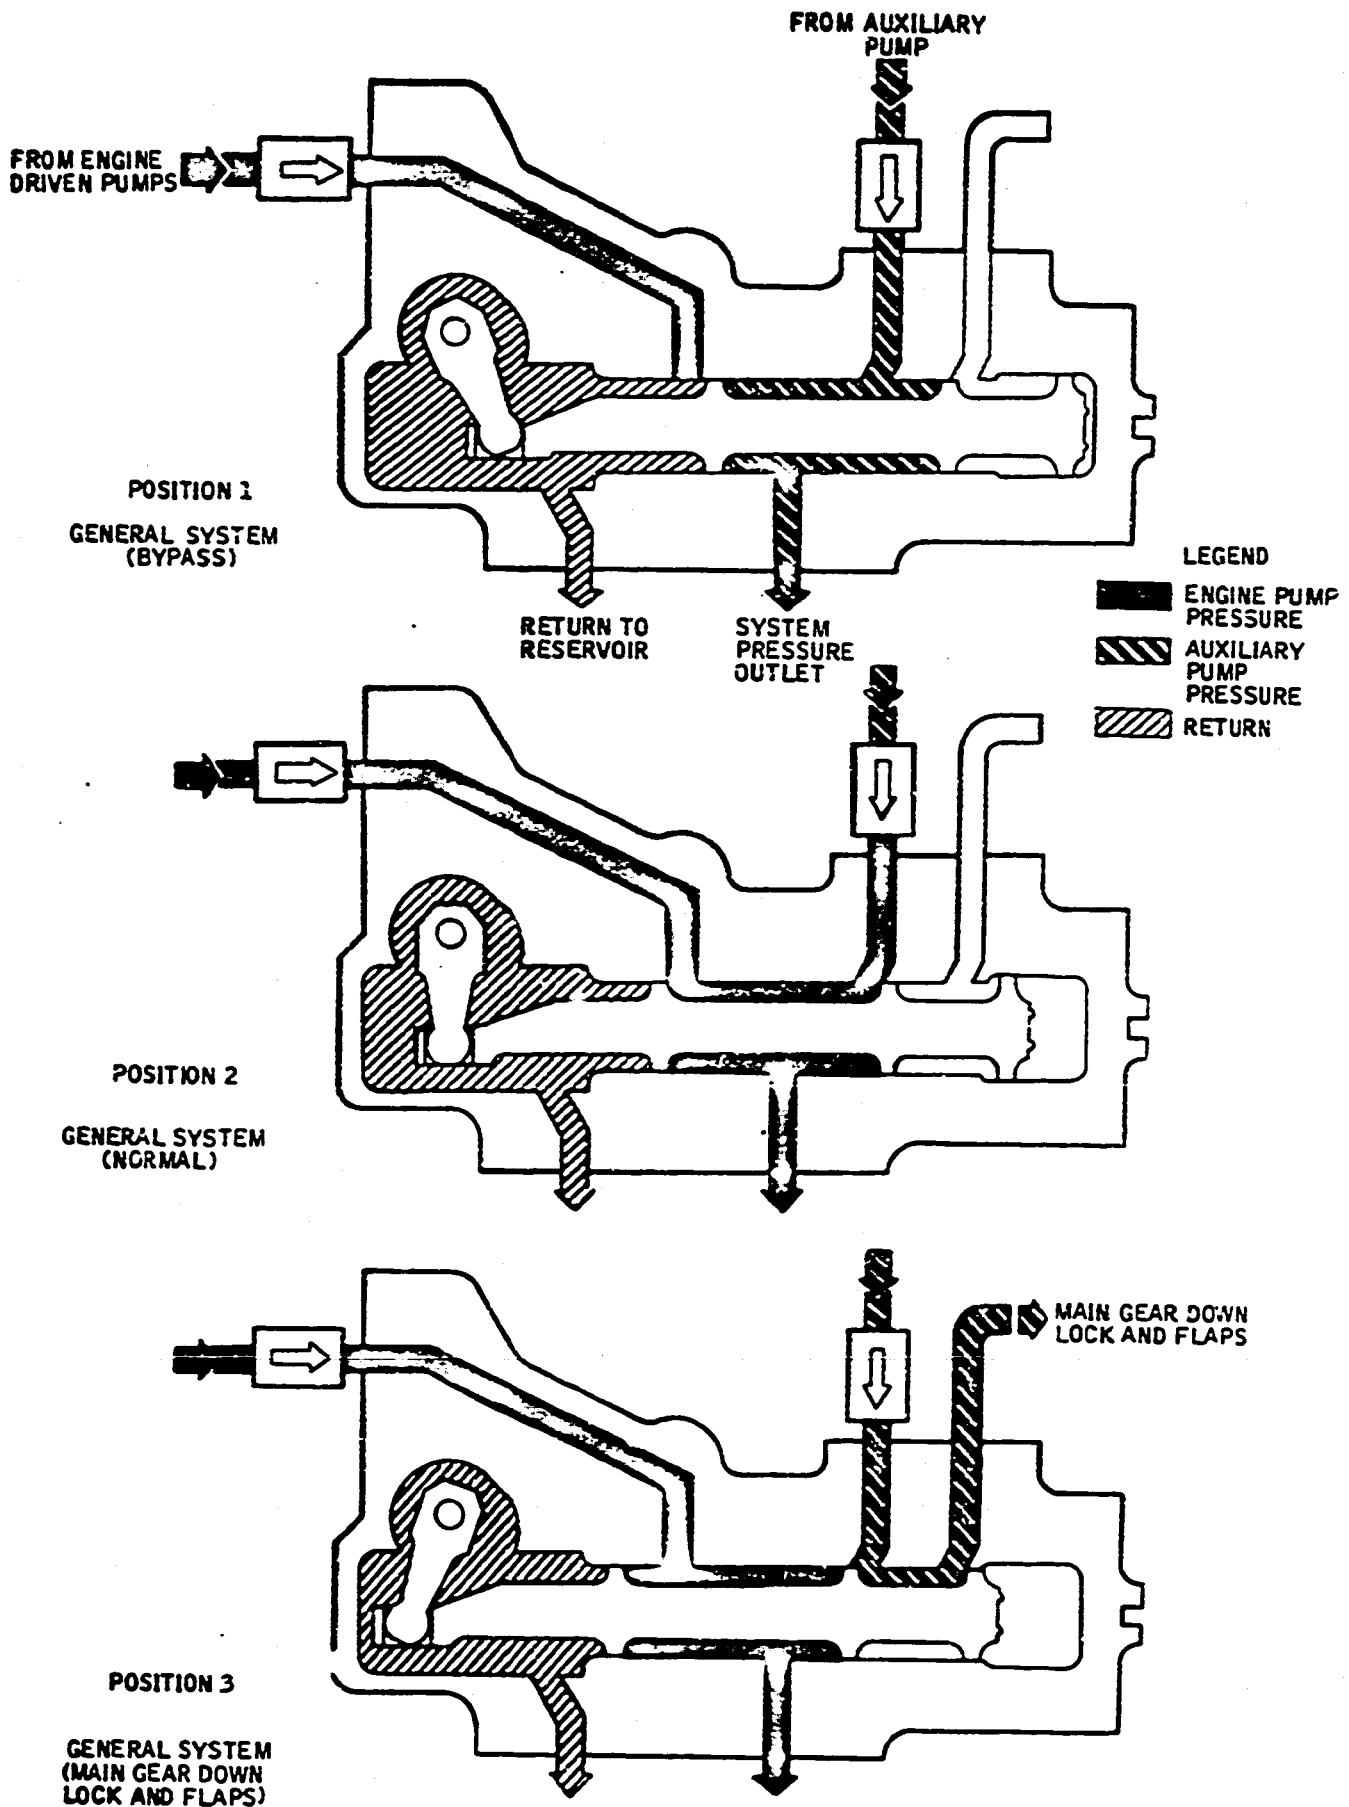

HA2-26

System Selector Valve -- Schematic  
 Figure 16

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

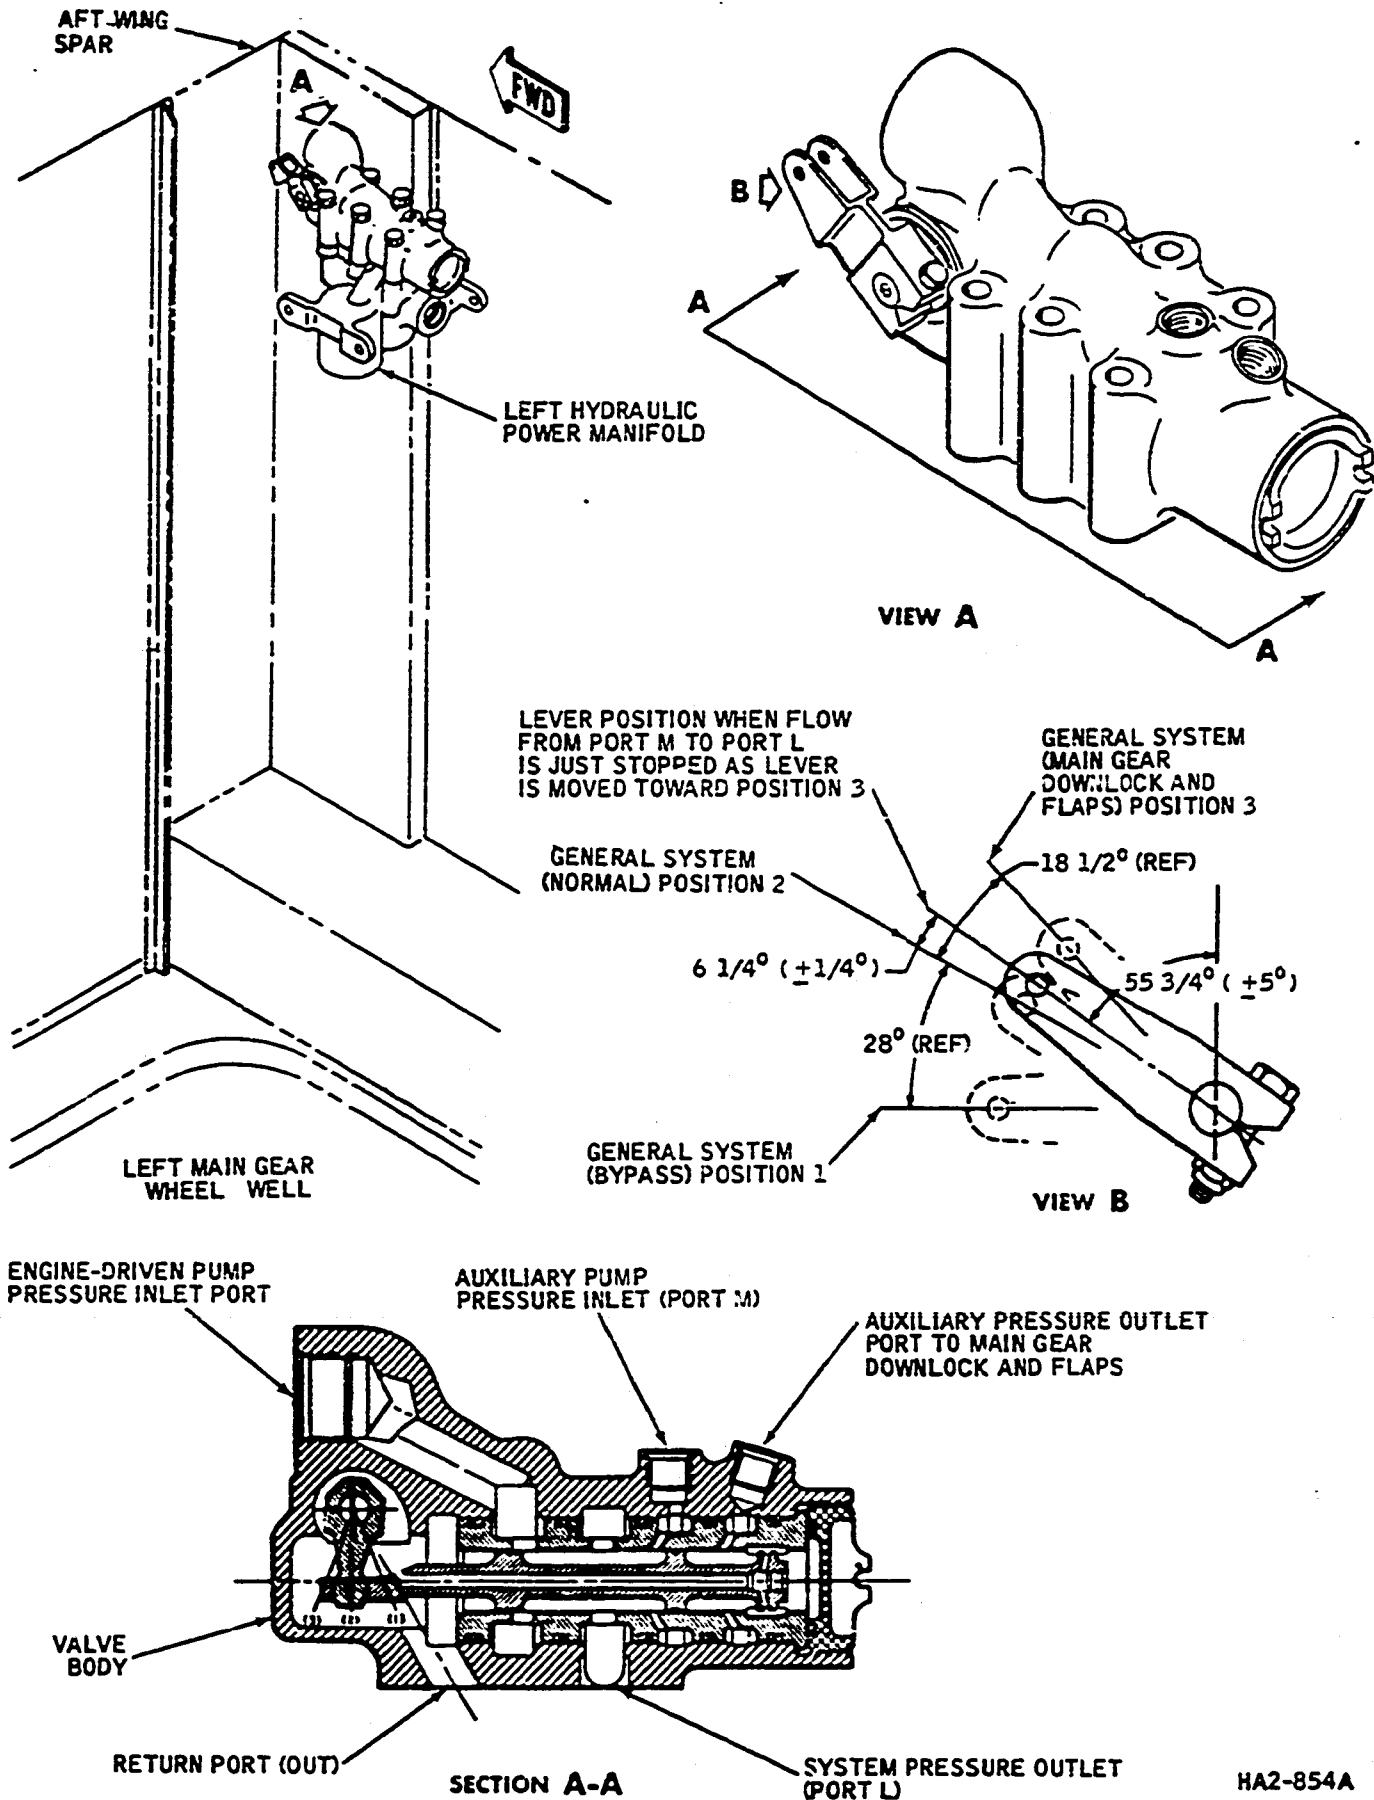

System Selector Valve -- Cutaway View  
 Figure 17

Nov 1/69

HA2-854A

29-10-0  
 CODE 5  
 Page 31



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The selector valve pressure-to-system port and the return port are directly ported to the manifold. The engine pump pressure enters the valve through a port on the large end of the valve, and the auxiliary pump inlet and alternate ports are located at the top, toward the aft end of the valve. The valve control crank is attached to a push-pull rod and a cable sector.
- (3) Operation of the system selector valve is controlled by a lever located on the right side of the system engineer's control pedestal. When the control lever is moved to the selected position, the cable system, through the sector and crank, operates the valve positioning lever to drive the slide spool assembly to the selected position. When the control lever is placed in the general system (normal) position, the selector valve is actuated, allowing hydraulic fluid to enter the valve through the system pressure port. The fluid is then directed into the manifold through the pressure-to-system port. In the general system (normal) position, fluid from the auxiliary pressure port is also routed to the pressure-to-system port. In the bypass/general system position, the selector valve ports engine pump pressure into the manifold through the return port. In this position, the auxiliary pump pressure is ported to the general system. In the general system/main gear down and flaps position, auxiliary pump pressure is routed through the alternate port, at the top of the valve, for alternate operation of the flaps and the landing gear downlock cylinders. Internal leakage provides lubrication for the moving parts of the valve.

P. Left Hydraulic Power Manifold (See Figure 18.)

- (1) The left hydraulic power manifold distributes fluid pressure from the hydraulic pump (any one of the three pumps), through control valves to the various airplane hydraulic subsystems. The left power manifold is located overhead in the left wheel well. Access to the left manifold is through the left main gear inboard door.
- (2) One valve-mounting pad is provided on the top of the manifold for the system selector valve. Four ports are provided on the manifold for connection of hydraulic pressure and return lines. Three of these ports are pressure outlet ports; one, located on the aft face of the manifold and one located on the bottom of the manifold port fluid to the flight controls and the main system accumulator. The third pressure outlet port, located on the bottom of the manifold, ports fluid directly to the priority valve, which in turn, ports fluid to the nose gear, system pressure transmitter, air start compressor, bogie trim cylinders, thrust reverser shutoff valve, and to the right power manifold. The fourth, a return port, located immediately forward of the pressure line port on the bottom of the manifold, is connected by a line to a return port of the reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

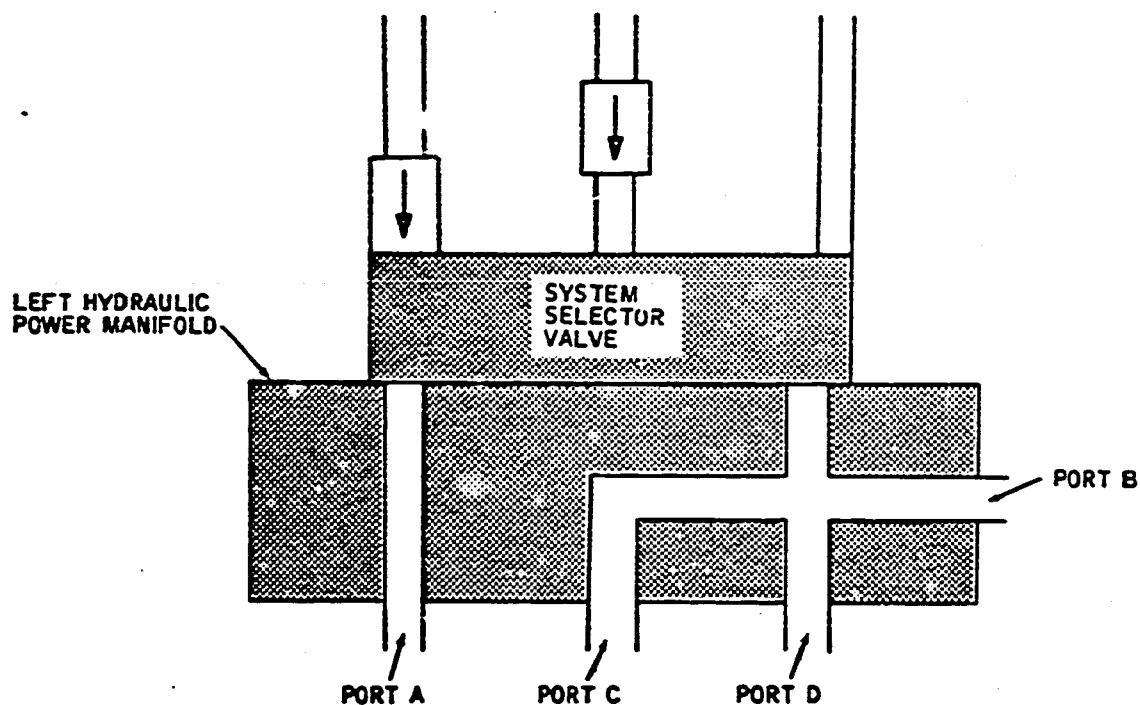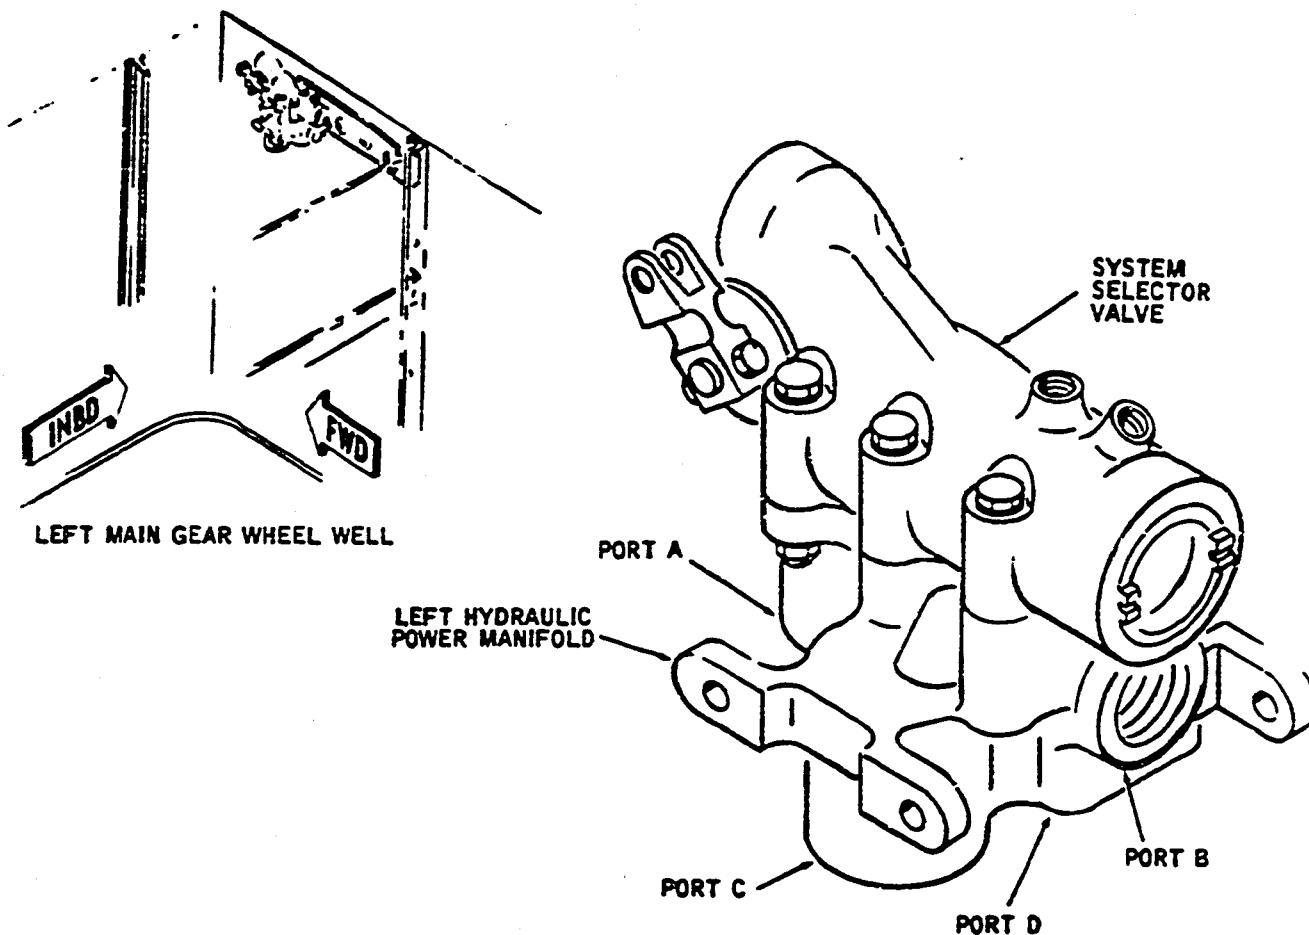

Left Hydraulic Power Manifold -- Schematic  
 Figure 18

HA2-855

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 5  
 Page 33

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Q. Right Hydraulic Power Manifold (See Figure 19.)


- (1) The right hydraulic power manifold distributes fluid pressure from the hydraulic pumps (engine-driven or auxiliary, or any combination of these three pumps), through the control valves to the various hydraulic sub-systems. The right hydraulic power manifold is located overhead in the right wheel well. The manifold is held in place with braces and is accessible through the right main gear inboard door.
- (2) The manifold contains passages for pressure and return fluid distribution, four check valves, ports for pressure and return lines, and mounting pads for the various control valves.
- (3) The right manifold receives fluid pressure from the left manifold. Pressure is ported through check valves to the wing flap control valve, to the slot control valve, to the main gear control valve, to the brake control valve, to the brake pressure transmitter, and to the brake accumulators.
- (4) Auxiliary hydraulic pressure is ported from the alternate port of the system selector control valve into port K in the right manifold. Port K is located outboard of the spoiler control valve. From port K, auxiliary hydraulic pressure is ported through a check valve to the downstream side of the wing flap control valve check valve and into the wing flap control valve for alternate operation of the wing flaps.
- (5) The return passage from the wing flap control valve ports fluid out of return port B. The brake control valve return passage ports fluid into return line B through a check valve. The main gear control valve down-line return fluid uses a separate port in the valve, bypasses the manifold, and returns the fluid directly to A return line to the reservoir. The upline in the main gear control valve uses the same return port, return port C, in the manifold as the brake control valve.

R. Deleted.


S. Hydraulic Power System Accumulator (See Figure 20.)

- (1) The hydraulic power system accumulator is a spherical, welded-steel, fluid and air bladder-separated container. The accumulator is installed in the pressure line of the hydraulic power system to provide a reserve supply of fluid under pneumatic pressure and to act as a shock absorber for system pressure surges.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

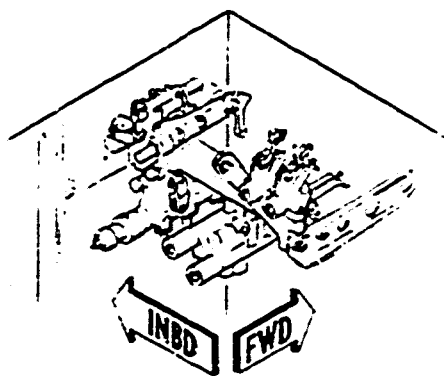

RIGHT MAIN GEAR  
WHEEL WELL

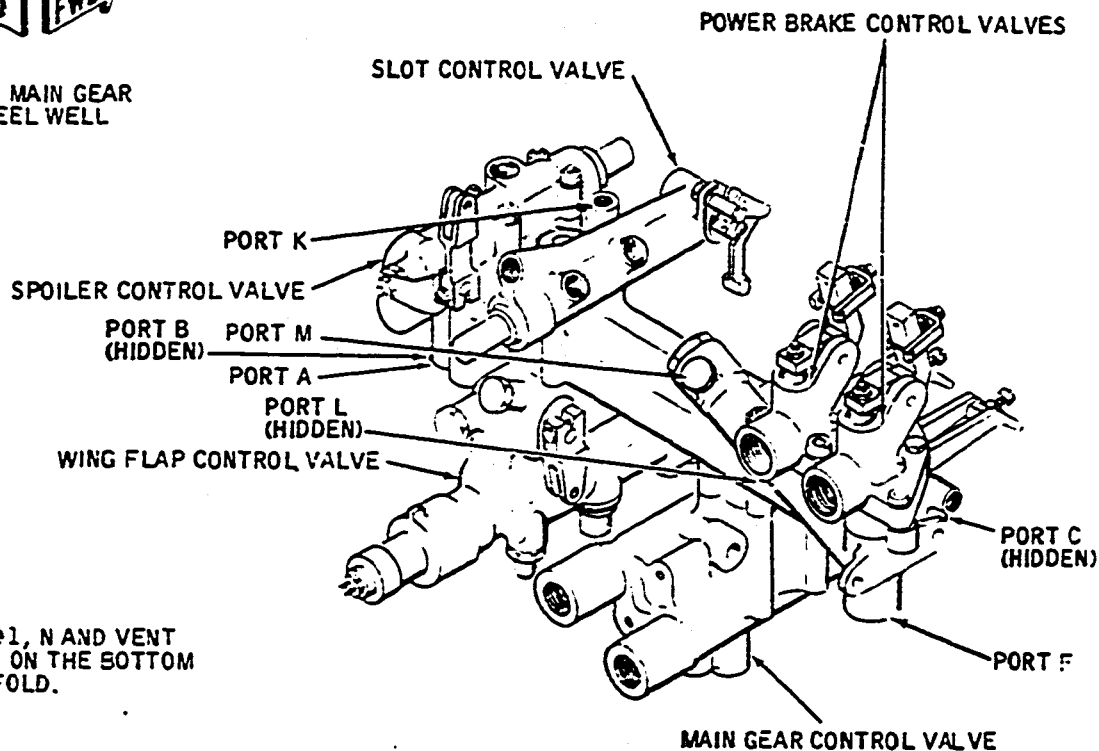

NOTE: PORTS B, C, D1, N AND VENT  
ARE LOCATED ON THE BOTTOM  
OF THE MANIFOLD.

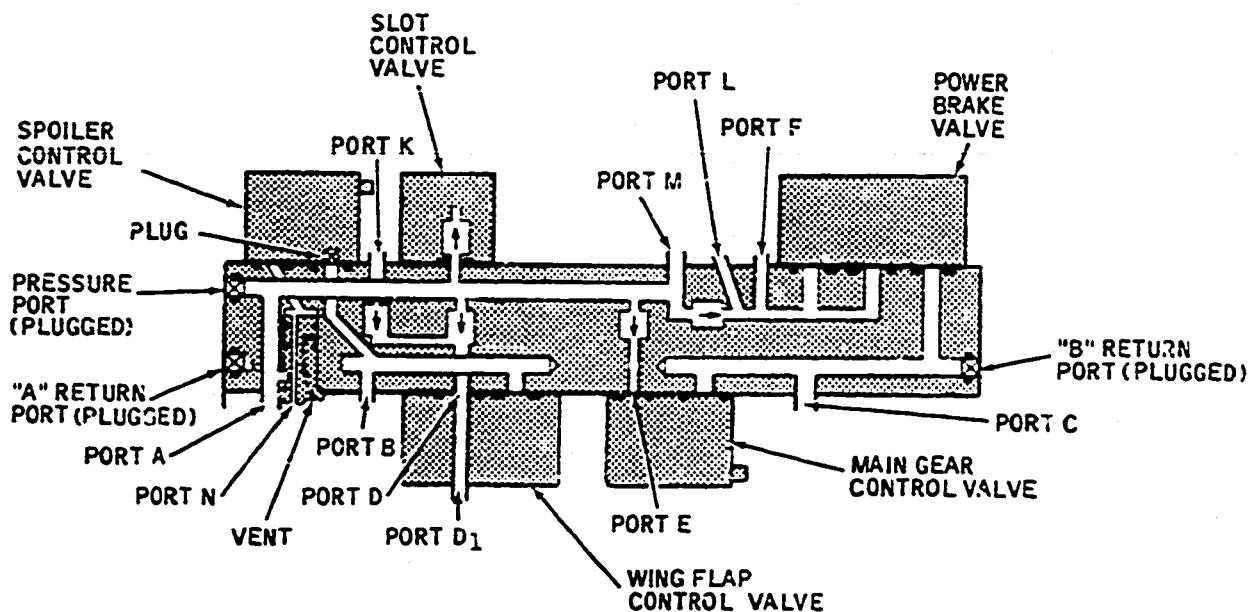

HA2-29A


Right Hydraulic Power Manifold -- Schematic  
 Figure 19

Nov 1/69

Printed in U.S.A.

29-10-0  
 CODE 5  
 Page 35

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

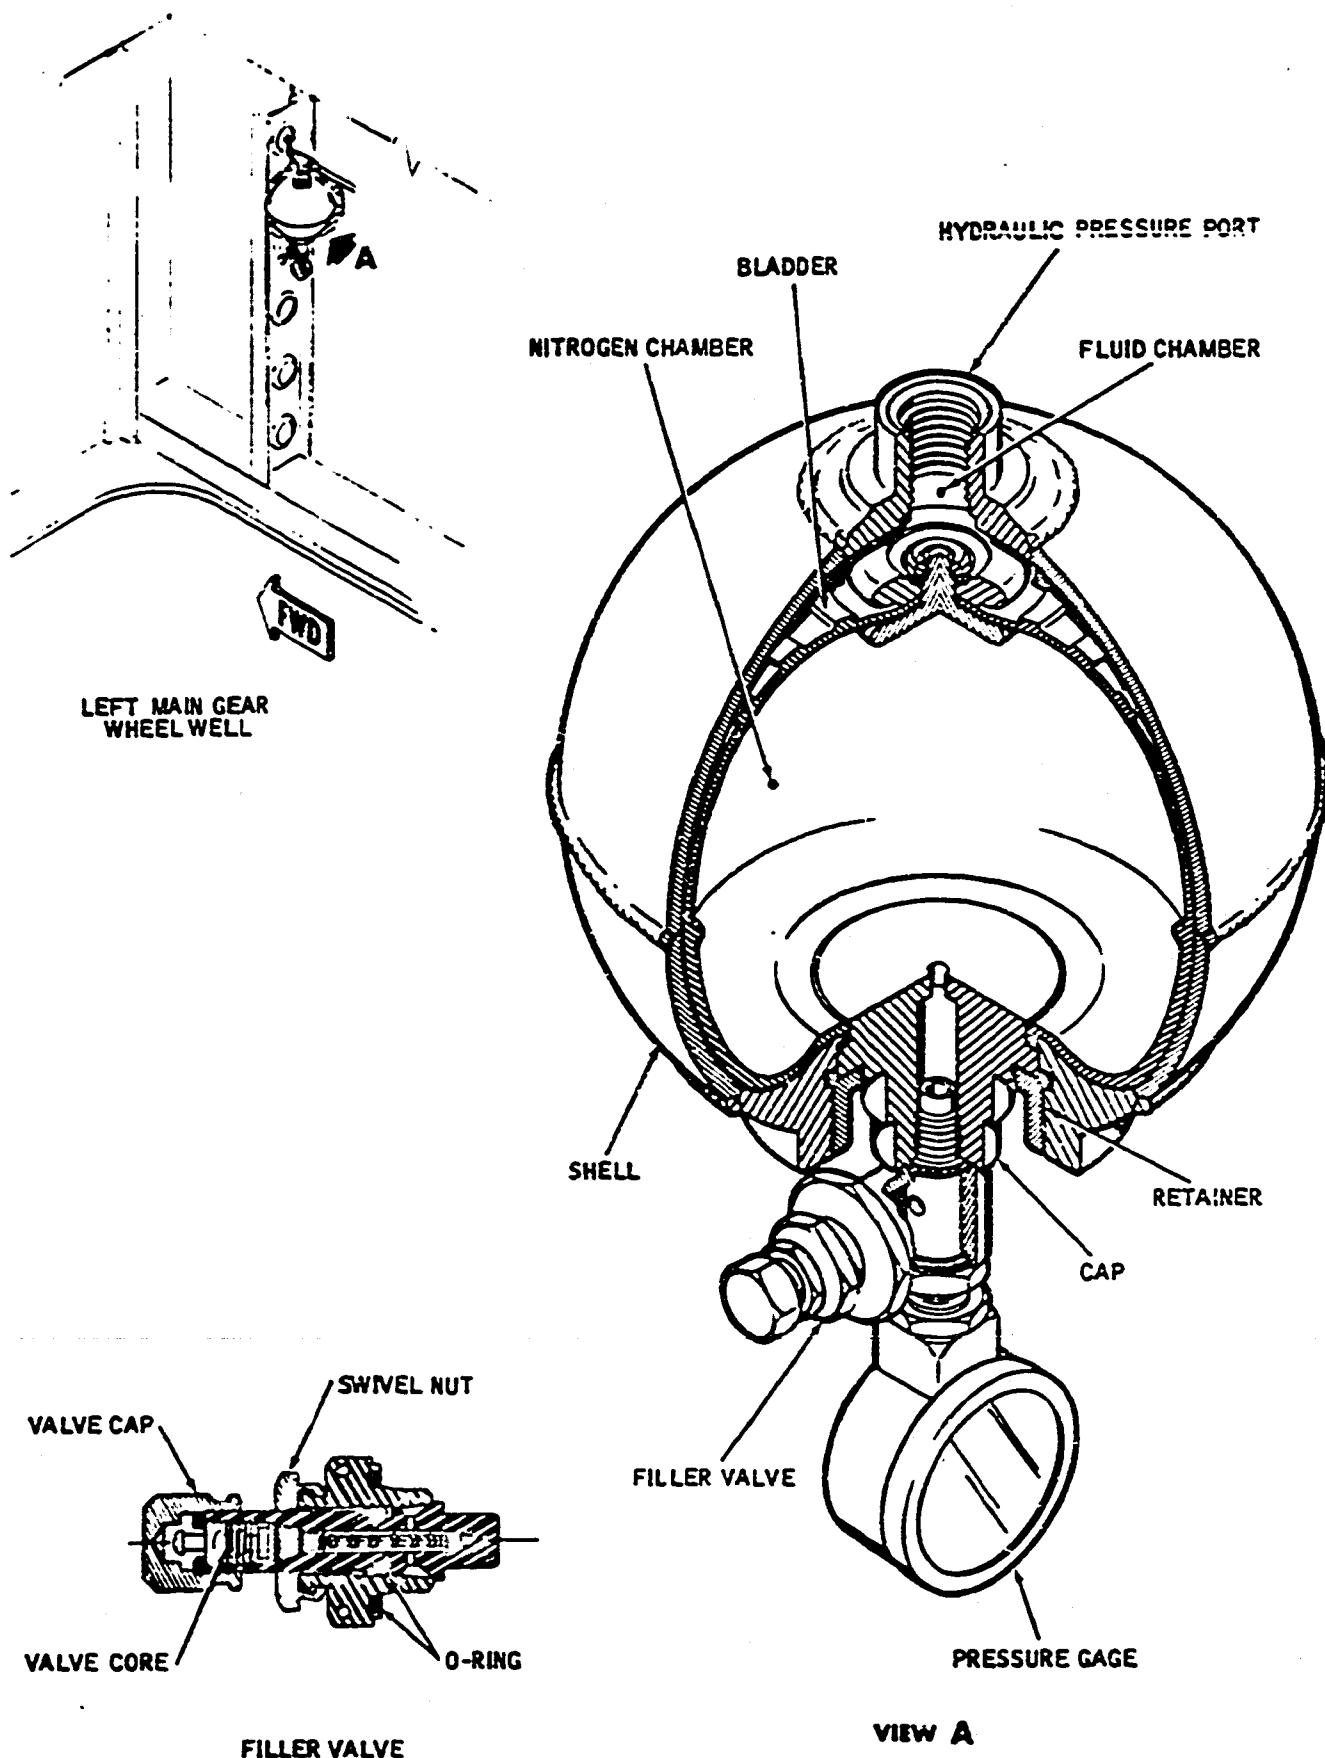

FILLER VALVE

VIEW A

HA2-30

Hydraulic Power System Accumulator -- Cutaway View  
 Figure 20





DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The accumulator is located immediately aft of the left hydraulic power manifold and is accessible through the left main gear inboard door. It is mounted with two corner brackets and clamp blocks at the upper and lower port fittings.
- (3) The accumulator is installed in the pressure line of the hydraulic power system and is initially charged with 1000 psi of dry nitrogen. As the system pressure builds up, fluid is forced into the upper chamber of the accumulator, further compressing the trapped nitrogen to approximately 3000 psi. With full hydraulic system pressure, 3000 psi is indicated on the pressure gage adjacent to the filler valve. This reserve pressure smooths out any momentary lag in the pump's response to the system's demand for greater fluid flows. The accumulator permits a gradual rise in system pressure, thereby absorbing the shock of pump surges and relieving the piping and system operating units of high-impact loads. When the engine-driven hydraulic pumps are not operating, the accumulator provides system pressure (at a diminishing rate) until a quantity equal to the stored volume in the accumulator has been used by the system.

T. Hydraulic System Priority Valve (See Figure 21.)

- (1) The priority valve is located in the left wheel well near the left hydraulic power manifold. The valve is installed in the hydraulic pressure line, between the two power manifolds, downstream of the pressure supply takeoff port for the flight controls. The priority valve is a balanced relief valve which reserves initial hydraulic pressure (up to 2150 psi maximum) for use in the flight control systems. The valve consists of a body with an inlet, an outlet, and a breather port. Internally, the valve contains a poppet valve plate, a poppet, a poppet valve load-spring, a piston, a piston load spring, and a piston load-spring housing. The piston load-spring housing chamber is vented to ambient air through a breather hole which is covered by a butyl rubber band.
- (2) The priority valve shuts off hydraulic pressure to all subsystems downstream of the left power manifold, whenever the hydraulic pressure drops below 1700 psi minimum. At this point, the valve closes to reserve the hydraulic pressure for use in the flight control systems, preventing them from reverting to manual operation. When the hydraulic pressure rises to 2150 psi maximum, the priority valve opens and supplies pressure to the right manifold and all subsystem downstream of the priority valve.
- (3) Hydraulic fluid from the left power manifold enters the priority valve through the inlet port, passes through the poppet valve plate holes, and applies pressure against the piston. When sufficient hydraulic pressure is applied to the piston, the piston load-spring compresses, unseating the poppet and permitting full flow through the valve. When the hydraulic pressure decreases to less than the opposing force value of the piston load-spring, the load-spring forces the piston against the poppet and shuts off fluid flow through the valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

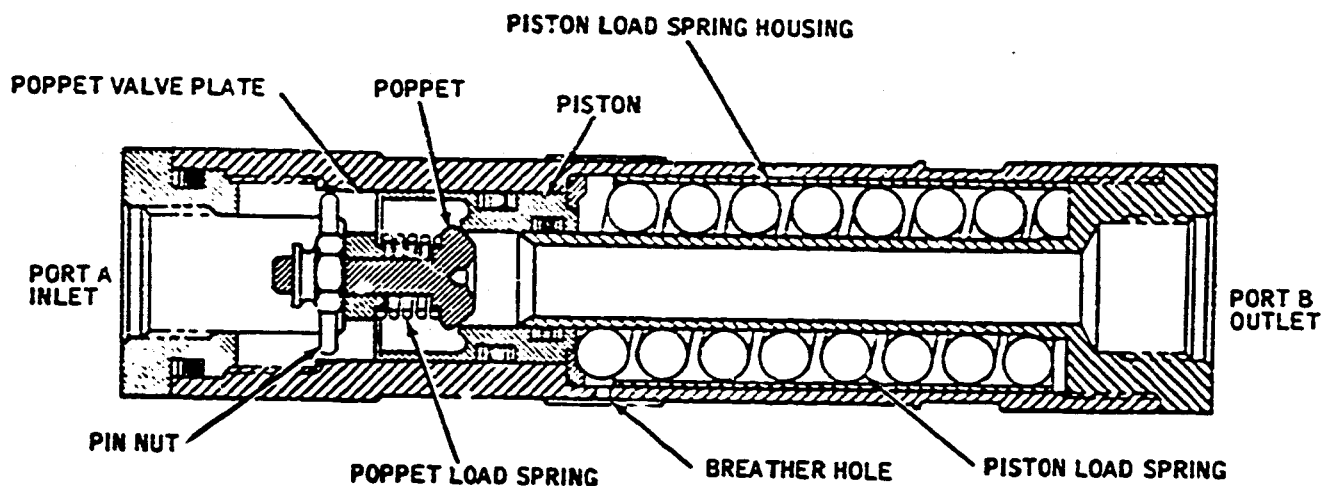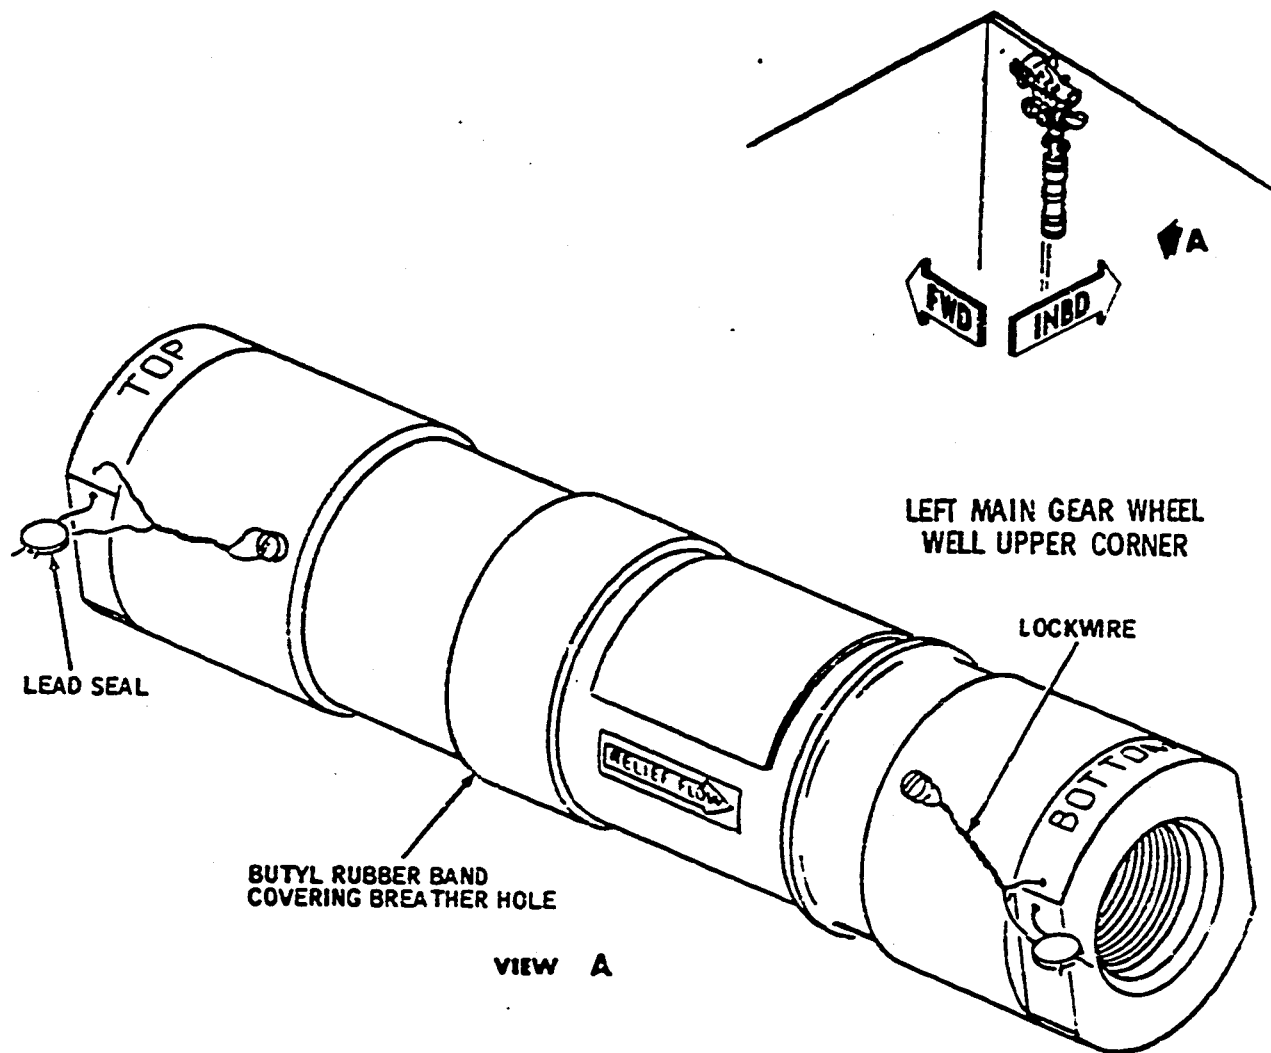

HA2-856

Hydraulic System Priority Valve -- Cutaway View  
 Figure 21


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) The maximum flow available from both engine-driven hydraulic pumps is: 44 to 45 gpm at takeoff, climb, and cruise configurations; 26 to 28 gpm at descent, approach, and engine idle configurations.
- (5) Some of the larger hydraulic system demands are as follows:
  - (a) Gear retraction -- 17 gpm (10 - 12 seconds)
  - (b) Gear extension -- 14 gpm (10 - 12 seconds)
  - (c) Wing flaps down -- 8 gpm (10 seconds)
  - (d) Wing flaps up -- 3 gpm (22 seconds)
  - (e) Horizontal stabilizer -- 7 gpm
  - (f) Ailerons -- 17 gpm (25°/second)
  - (g) Rudder -- 3 gpm (25°/second)
- (6) There are various combinations of hydraulic system operations which could cause momentary reversion of the flight controls to manual operation. To prevent reversion to manual operation, the priority valve assures that the left power manifold receives all the hydraulic fluid pressure under conditions of very large flow demands.

U. Two-Stage Return Filters (See Figure 22.)

- (1) The hydraulic system is equipped with two separate two-stage return fluid filters located on the outboard bulkhead of the left main gear wheel well, just aft of the wing rear spar. One filter is connected in the A return line and the other is connected in the B return line, both just upstream of the reservoir return fluid manifold. The filters are rated at 3 microns absolute particle size for the primary stage and 15 microns absolute particle size for the secondary stage. The inlet and outlet ports are internally threaded and are identified in and out. The filter bowl is cylindrical in shape and contains both primary and secondary filter elements in a separable concentric assembly. A spring attached to the bottom of the elements bears against the bottom of the filter bowl to hold the elements in place on shoulders of the filter head. O-ring seals in the upper ends of the filter elements prevent leakage between the shoulders of the filter head and the elements. The bowl is clamped to the filter head immediately below the ports with an O-ring between the bowl and head to prevent external leakage.
- (2) Internally, the filters are provided with a relief valve for each stage. The primary stage relief valve consists of a spring loaded poppet with a venturi shaped passage through the poppet. The venturi is designed to allow 5 to 7 gpm of hydraulic fluid to flow through it to the primary

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

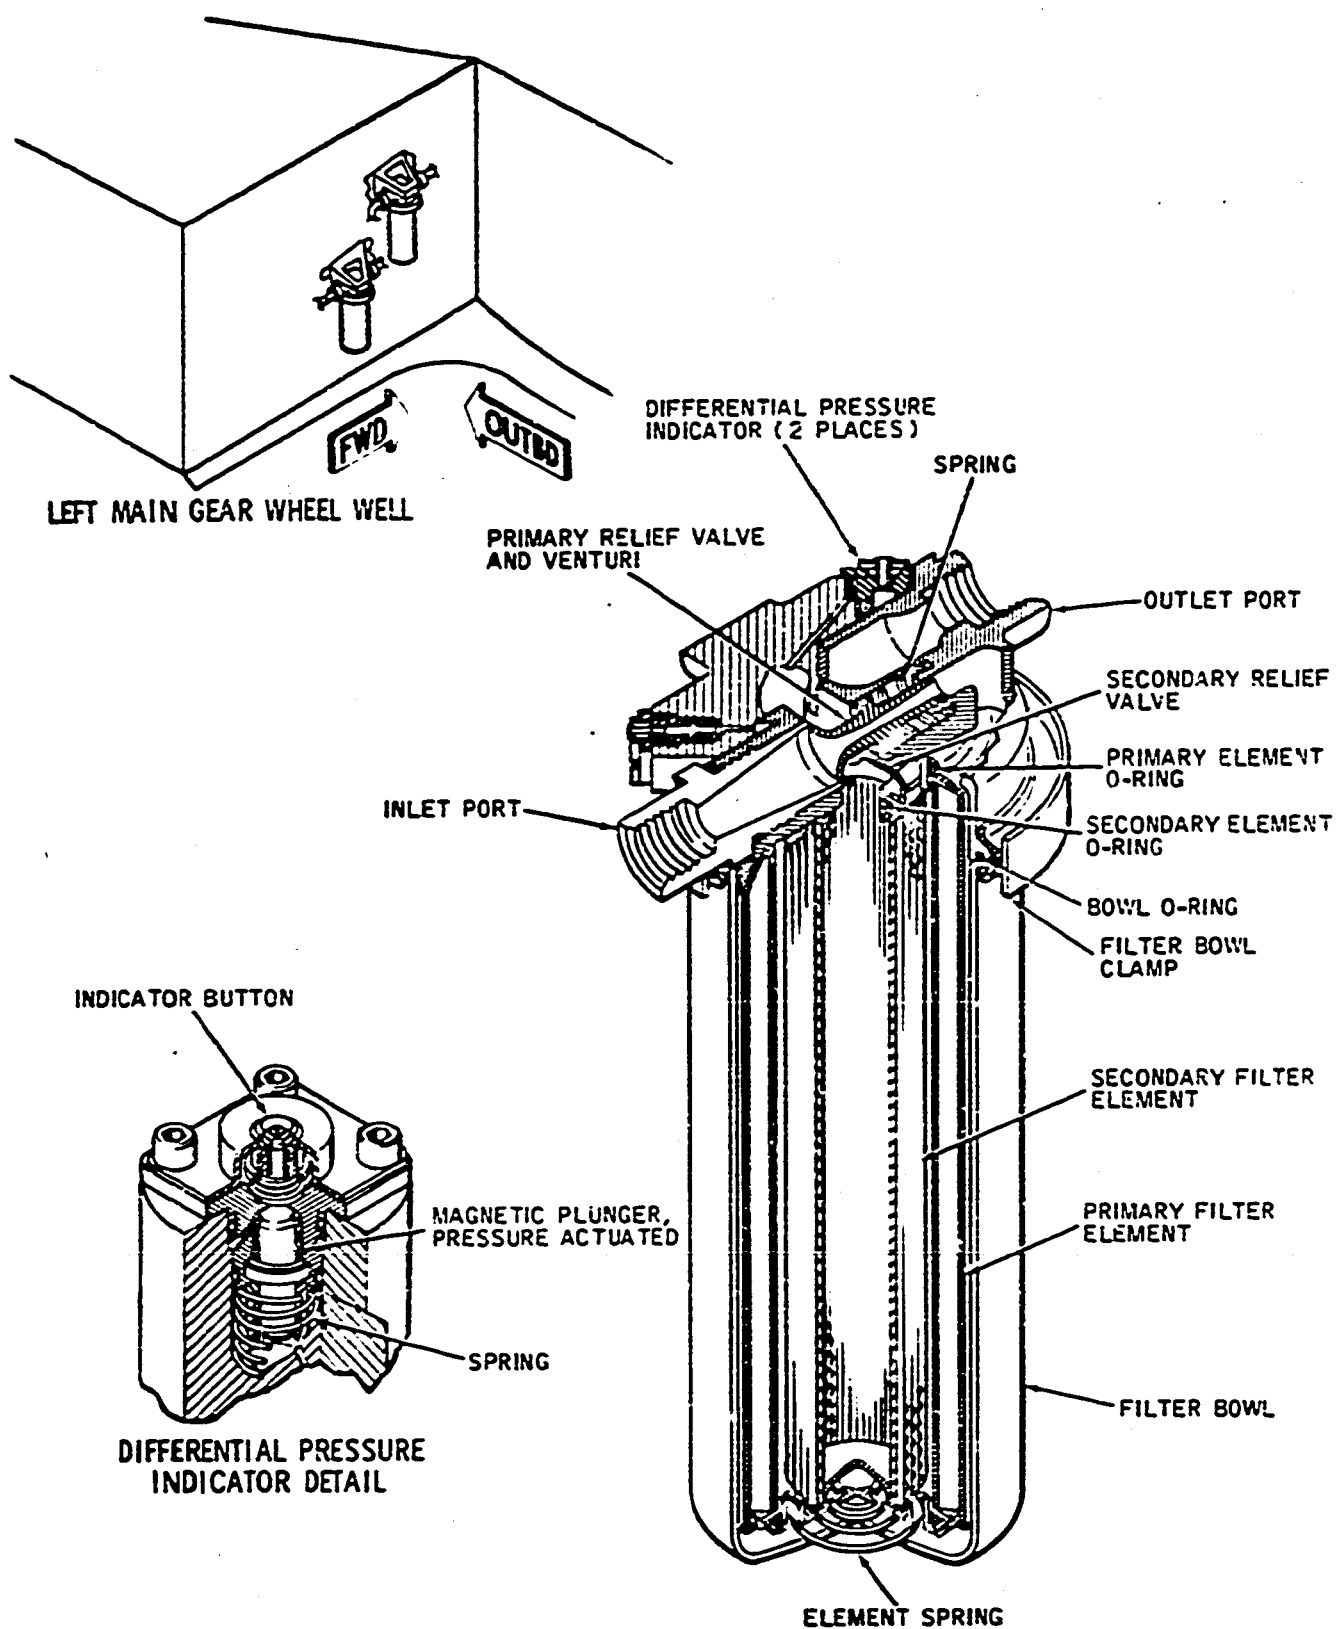

HA2-2815

Two Stage Return Filter -- Cutaway View  
 Figure 22

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

stage of the filter. When pressure/flow buildup exceeds the capacity of the venturi, the poppet opens (60 ( $\pm 9$ ) psi cracking pressure) to allow excess fluid to bypass the primary element. The secondary stage relief valve consists of a pie-tin shaped stainless steel washer located directly above the secondary stage element. Due to the shape and location of the washer in the filter head, a seal is formed between the secondary stage element inlet passage and the outlet port of the filter head. When differential pressure across the secondary element exceeds 350 ( $\pm 50$ ) psi, the washer deforms to allow excess fluid pressure to bypass the secondary element and flow directly to the outlet port.

- (3) Two differential pressure indicators are provided for each two-stage return filter; one for the primary stage element and one for the secondary stage element. The primary stage indicator actuates when the differential pressure across the primary element (due to element contamination) exceeds 44 ( $\pm 6$ ) psi. The secondary stage indicator actuates when the differential pressure across the secondary element exceeds 100 ( $\pm 15$ ) psi.
- (4) Each indicator consists of a red button which protrudes approximately 3/16 inch when the corresponding filter element becomes overloaded causing a differential pressure across the element. The indicator can be reset by manually depressing the button only after the overloaded condition has been corrected.
- (5) A low temperature cutoff device is provided in each indicator. The cutoff device consists of a bimetallic spring which prevents false indication of an overloaded element as caused by high viscosity of the hydraulic fluid at low temperature. Below 32°F (0°C), the spring contracts inward above a shoulder on the indicator button to prevent movement of the button. Above 85 ( $\pm 15$ ) °F, 29.9 ( $\pm 9.4$ ) °C, the spring is extended and the indicator button operates normally.
- (6) The primary stage element is made of bonded cellulosic aluminum alloy and is of the disposable type. The secondary stage element is made of stainless steel mesh and is of the cleanable type. No provision is made in the filter head to prevent hydraulic fluid loss when the filter bowl and elements are removed for cleaning or replacement.

#### V. Hydraulic System Selector Control Lever

- (1) The hydraulic system selector control lever is a manually actuated, mechanical lever detented to three positions. The lever provides a mechanical means, through cables, for positioning the system selector valve and the auxiliary hydraulic pump supply selector valve. The hydraulic system selector control lever is located on the system engineer's control pedestal. The lever is attached to a drive sector, located on a common shaft with the other control pedestal sectors. The lever and sector are accessible through the cover plates on the system engineer's pedestal.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) To put the hydraulic power system in the bypass condition, the system selector control lever is lifted out of detent and moved to bypass/general system position. At the same time, the cable moves the sector and pushrod of the system selector valve to the No. 1 position. The pushrod positions the system selector valve to the No. 1 bypass position. At the same time, the cables from the system selector valve sector move the auxiliary pump supply selector valve sector to No. 1 (auxiliary) position. The auxiliary pump supply selector valve remains in the auxiliary supply position through the idle feature of the sector rigging. In this condition, the engine-driven pump pressure is ported to the reservoir and the auxiliary pump supplies pressure to the general system. In this position, the fluid is supplied to the auxiliary pump from the low standpipe in the hydraulic system reservoir. To put the system into the alternate condition, the selector control lever is lifted out of detent and moved to the general system/main gear down lock and flaps position. The cables move the system selector valve sector to the No. 3 (alternate) position. The system selector valve sector moves the cables rotating the auxiliary pump supply selector valve sector to the No. 3 (alternate) position. As the sector rotates, the end of the arm moves away from the idle position. This positions the valves to the alternate position, supplying fluid to the auxiliary pump from the auxiliary pump alternate reservoir. In this position, fluid from the auxiliary pump is ported to the wing flap control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported to the general system.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - DESCRIPTION AND OPERATION

1. General

A. Description (See Figures 1 and 2.)

- (1) The hydraulic power system receives fluid pressure from the engine-driven hydraulic pumps, one installed on each inboard engine. The electrically driven auxiliary pump is used to supplement the engine-driven pumps, or to independently supply the system with fluid pressure.
- (2) The hydraulic system reservoir, located in the left wing root, has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir is used for fluid, and 1/10 is used for foam space. A separate air chamber is installed in the reservoir system to provide for a greater fluid capacity in the main reservoir. A reservoir filler assembly is installed in the piping between the reservoir and the air chamber and has a vent line from the filler neck to the tee at the top of the reservoir sight gage. The reservoir is pressurized to 35 to 40 psi on airplanes 801-815 and 30 to 35 psi on airplanes 816-822, and 860 and subsequent by bleed pressure from the engine-driven pumps through an air pressure regulator-aspirator.
- (3) The engine-driven pumps receive fluid from the pressurized main reservoir through respective engine hydraulic fire shutoff valves. The engine hydraulic fire shutoff valves are normally open and can be mechanically controlled from the flight compartment. The pumps supply fluid pressure through respective check valves to the dual filter and relief valve. Some of the fluid from the filter is ported through the regulator-aspirator to pressurize the reservoir. Most of the fluid is routed through a check valve to the system selector valve, and then to the left and right hydraulic power manifolds. The manifolds distribute the fluid pressure to the subsystems.
- (4) Hydraulic fluid is normally supplied to the auxiliary hydraulic pump from a low standpipe in the main reservoir. During alternate operation, the auxiliary hydraulic pump receives fluid supply from the auxiliary pump alternate reservoir, which is located just aft of the auxiliary pump. From these reservoirs, the fluid is ported through the auxiliary pump selector valve which is mechanically controlled from the flight compartment by the system selector control lever. When operating, the auxiliary hydraulic pump supplies fluid pressure to the subsystems through the system selector valve which is also controlled by the system selector control lever in the flight compartment. A filter and check valve are installed in the line from the auxiliary pump to the system selector valve.
- (5) An accumulator is installed in the pressure line to the subsystems to provide a reserve supply of fluid and to act as a surge damper for the system.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (6) Engine-driven pump fluid pressure is routed through the system selector valve to the left power manifold, where it is distributed to some of the subsystems and through the priority valve to the right power manifold. Fluid pressure from the right power manifold is distributed to the remaining subsystems.
- (7) The priority valve is a spring-loaded, poppet-type, balanced relief valve installed in the line downstream of the left power manifold. The priority valve's function in the system is to prevent the flight control systems from reverting to manual operation during high demands on the hydraulic system.
- (8) A fluid pressure transmitter, located in the nosewheel well, senses the system pressure, which is indicated on the hydraulic system pressure indicator in the flight compartment.

**B. Normal Operation**

- (1) Fluid is supplied to the hydraulic system from the pressurized hydraulic system reservoir. For operation of the hydraulic system under normal conditions, 8.1 US gallons (6.7 Imperial gallons; 30.6 liters) of hydraulic fluid are available to the engine-driven hydraulic pumps, and 12.9 US gallons (10.7 Imperial gallons; 48.8 liters) are available to the auxiliary hydraulic pump. Supply lines from the main reservoir carry fluid to each inboard pylon through normally open engine hydraulic fire shutoff valves to the engine-driven hydraulic pumps. Fluid is supplied to the auxiliary hydraulic pump from the main reservoir through a low standpipe at the base of the reservoir. Fluid is carried from the reservoir through the auxiliary pump selector valve to the auxiliary pump selector valve to the auxiliary hydraulic pump.
- (2) The engine-driven hydraulic pumps supply full system pressure (3000 psi nominal) at any given engine speed, from idle to full power. The output flow of the pump is varied by sensing pressure from the outlet side of the pump. Each engine-driven pump contains a solenoid-operated bypass valve which, when energized, bypasses the pressure control regulator of the pump and ports fluid to the pump yoke control piston which feathers the pump. When the pump is feathered, flow rate is reduced to almost zero (1.0 gpm) and to a pressure of approximately 300 psi. Half of this flow maintains pump lubrication and cooling through internal leakage. This leakage is returned, through a check valve, the engine-driven pump case drain line filter, and another check valve to the case drain return port of the reservoir. The pressure fluid from each pump passes through a check valve to the dual filter and relief valve.
- (3) The fluid enters the dual filter and relief valve through the relief valve chamber. The fluid is passed through the filter element, through a manifold, and through a common outlet port. Fluid from the outlet port is routed through a check valve to the system selector valve. If back pressure in the system builds up to approximately 3300 psi, the relief valves in the dual filter and relief valve open and port fluid



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

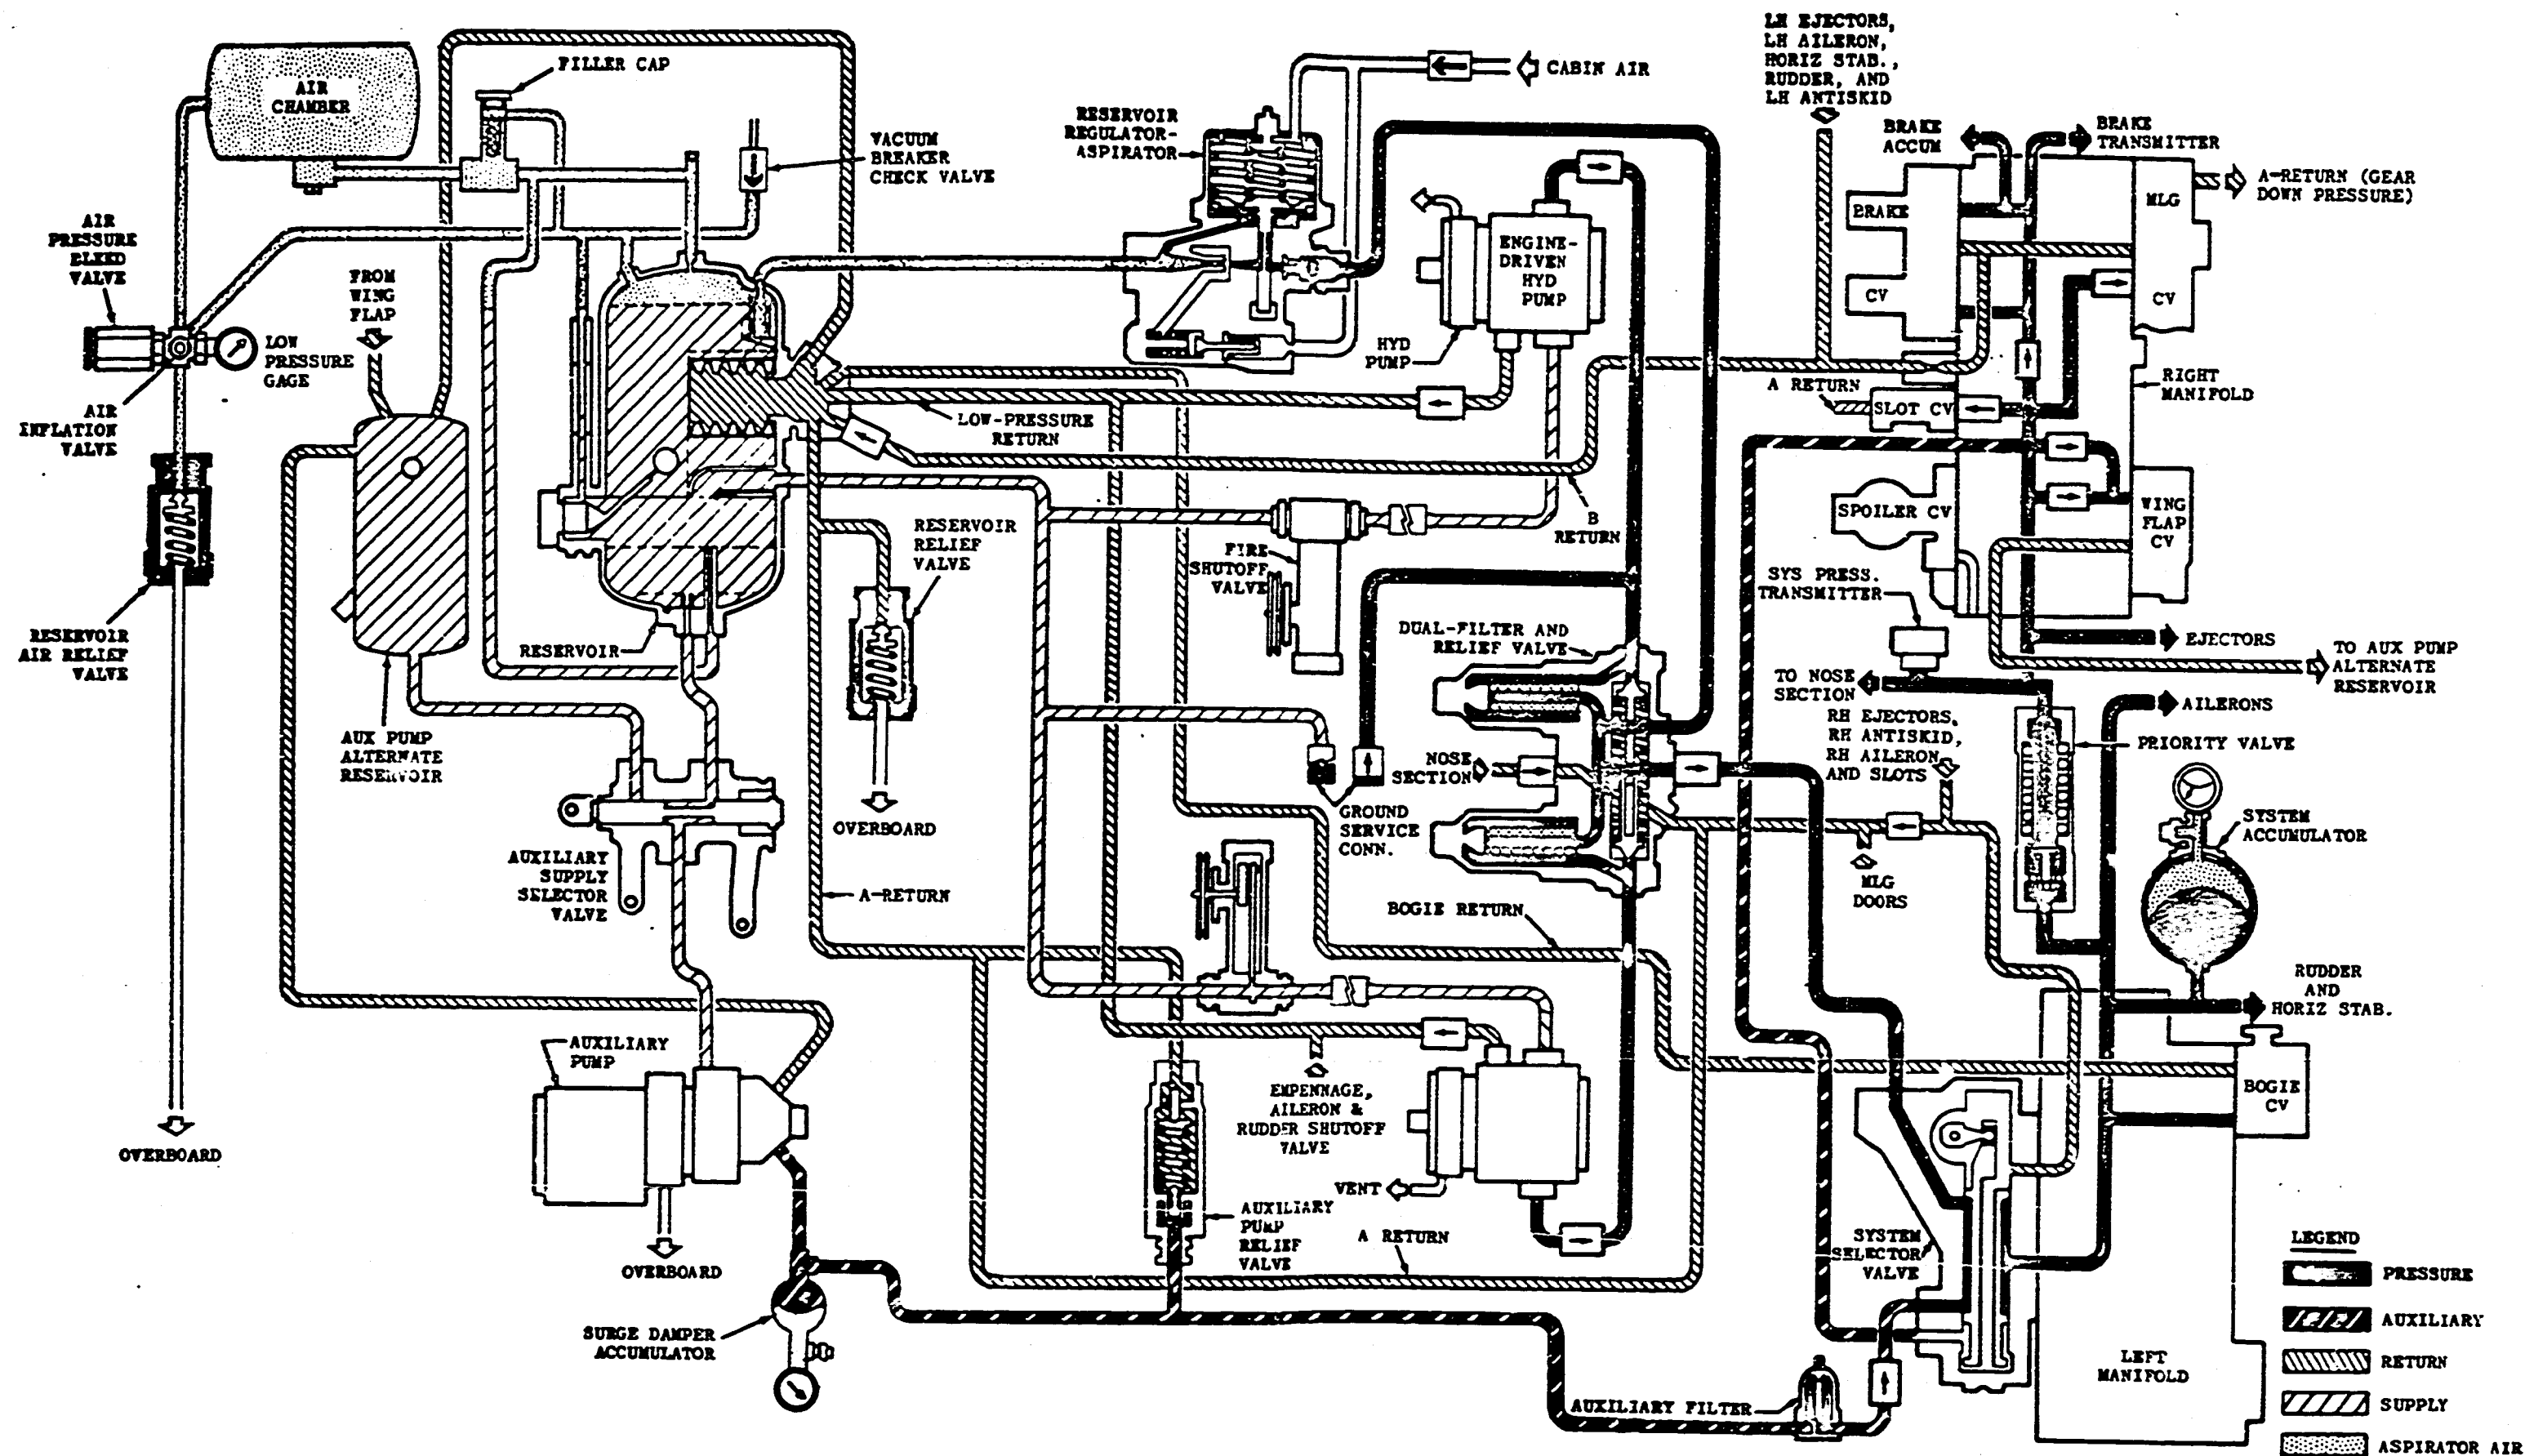


Hydraulic Power System -- Schematic Diagram  
 (Airplanes 801-811)  
 Figure 1 (Sheet 1)

29-10-0  
 CODE 6  
 Page 3

Jan 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

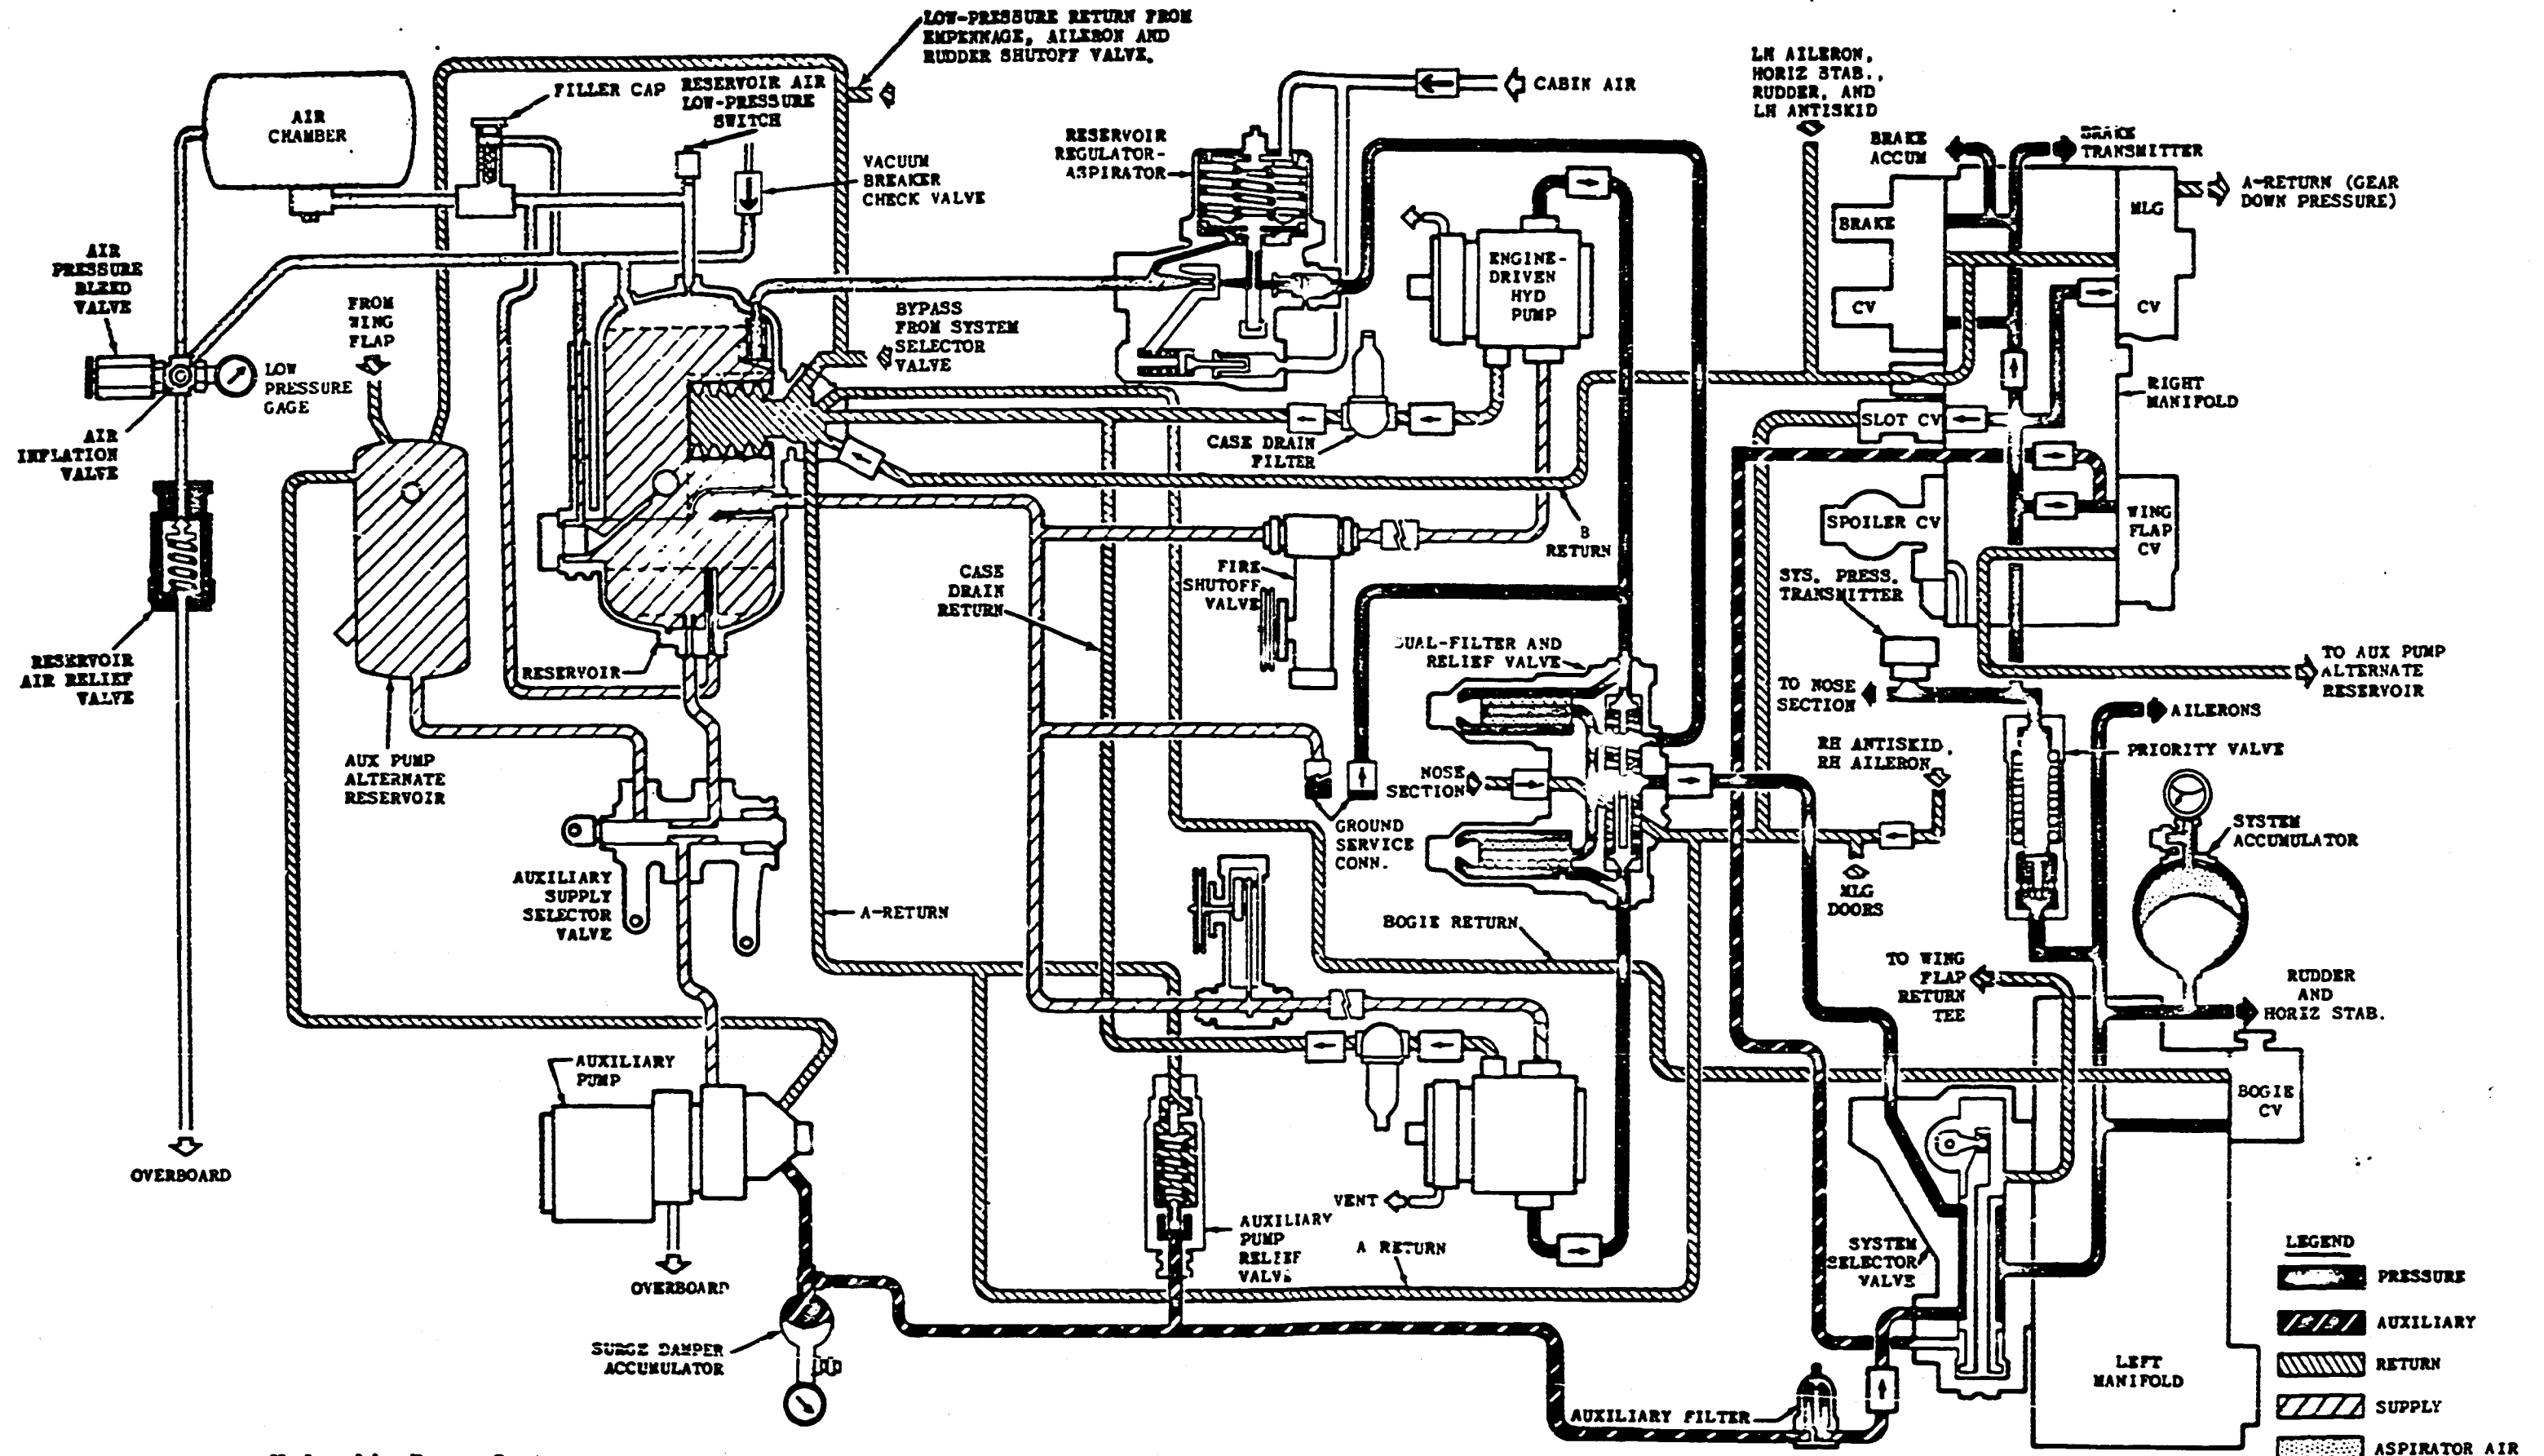


Hydraulic Power System -- Schematic Diagram  
 (Airplanes 812-815)  
 Figure 1 (Sheet 2)

29-10-0  
 CODE 6  
 Page 5

Jan 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

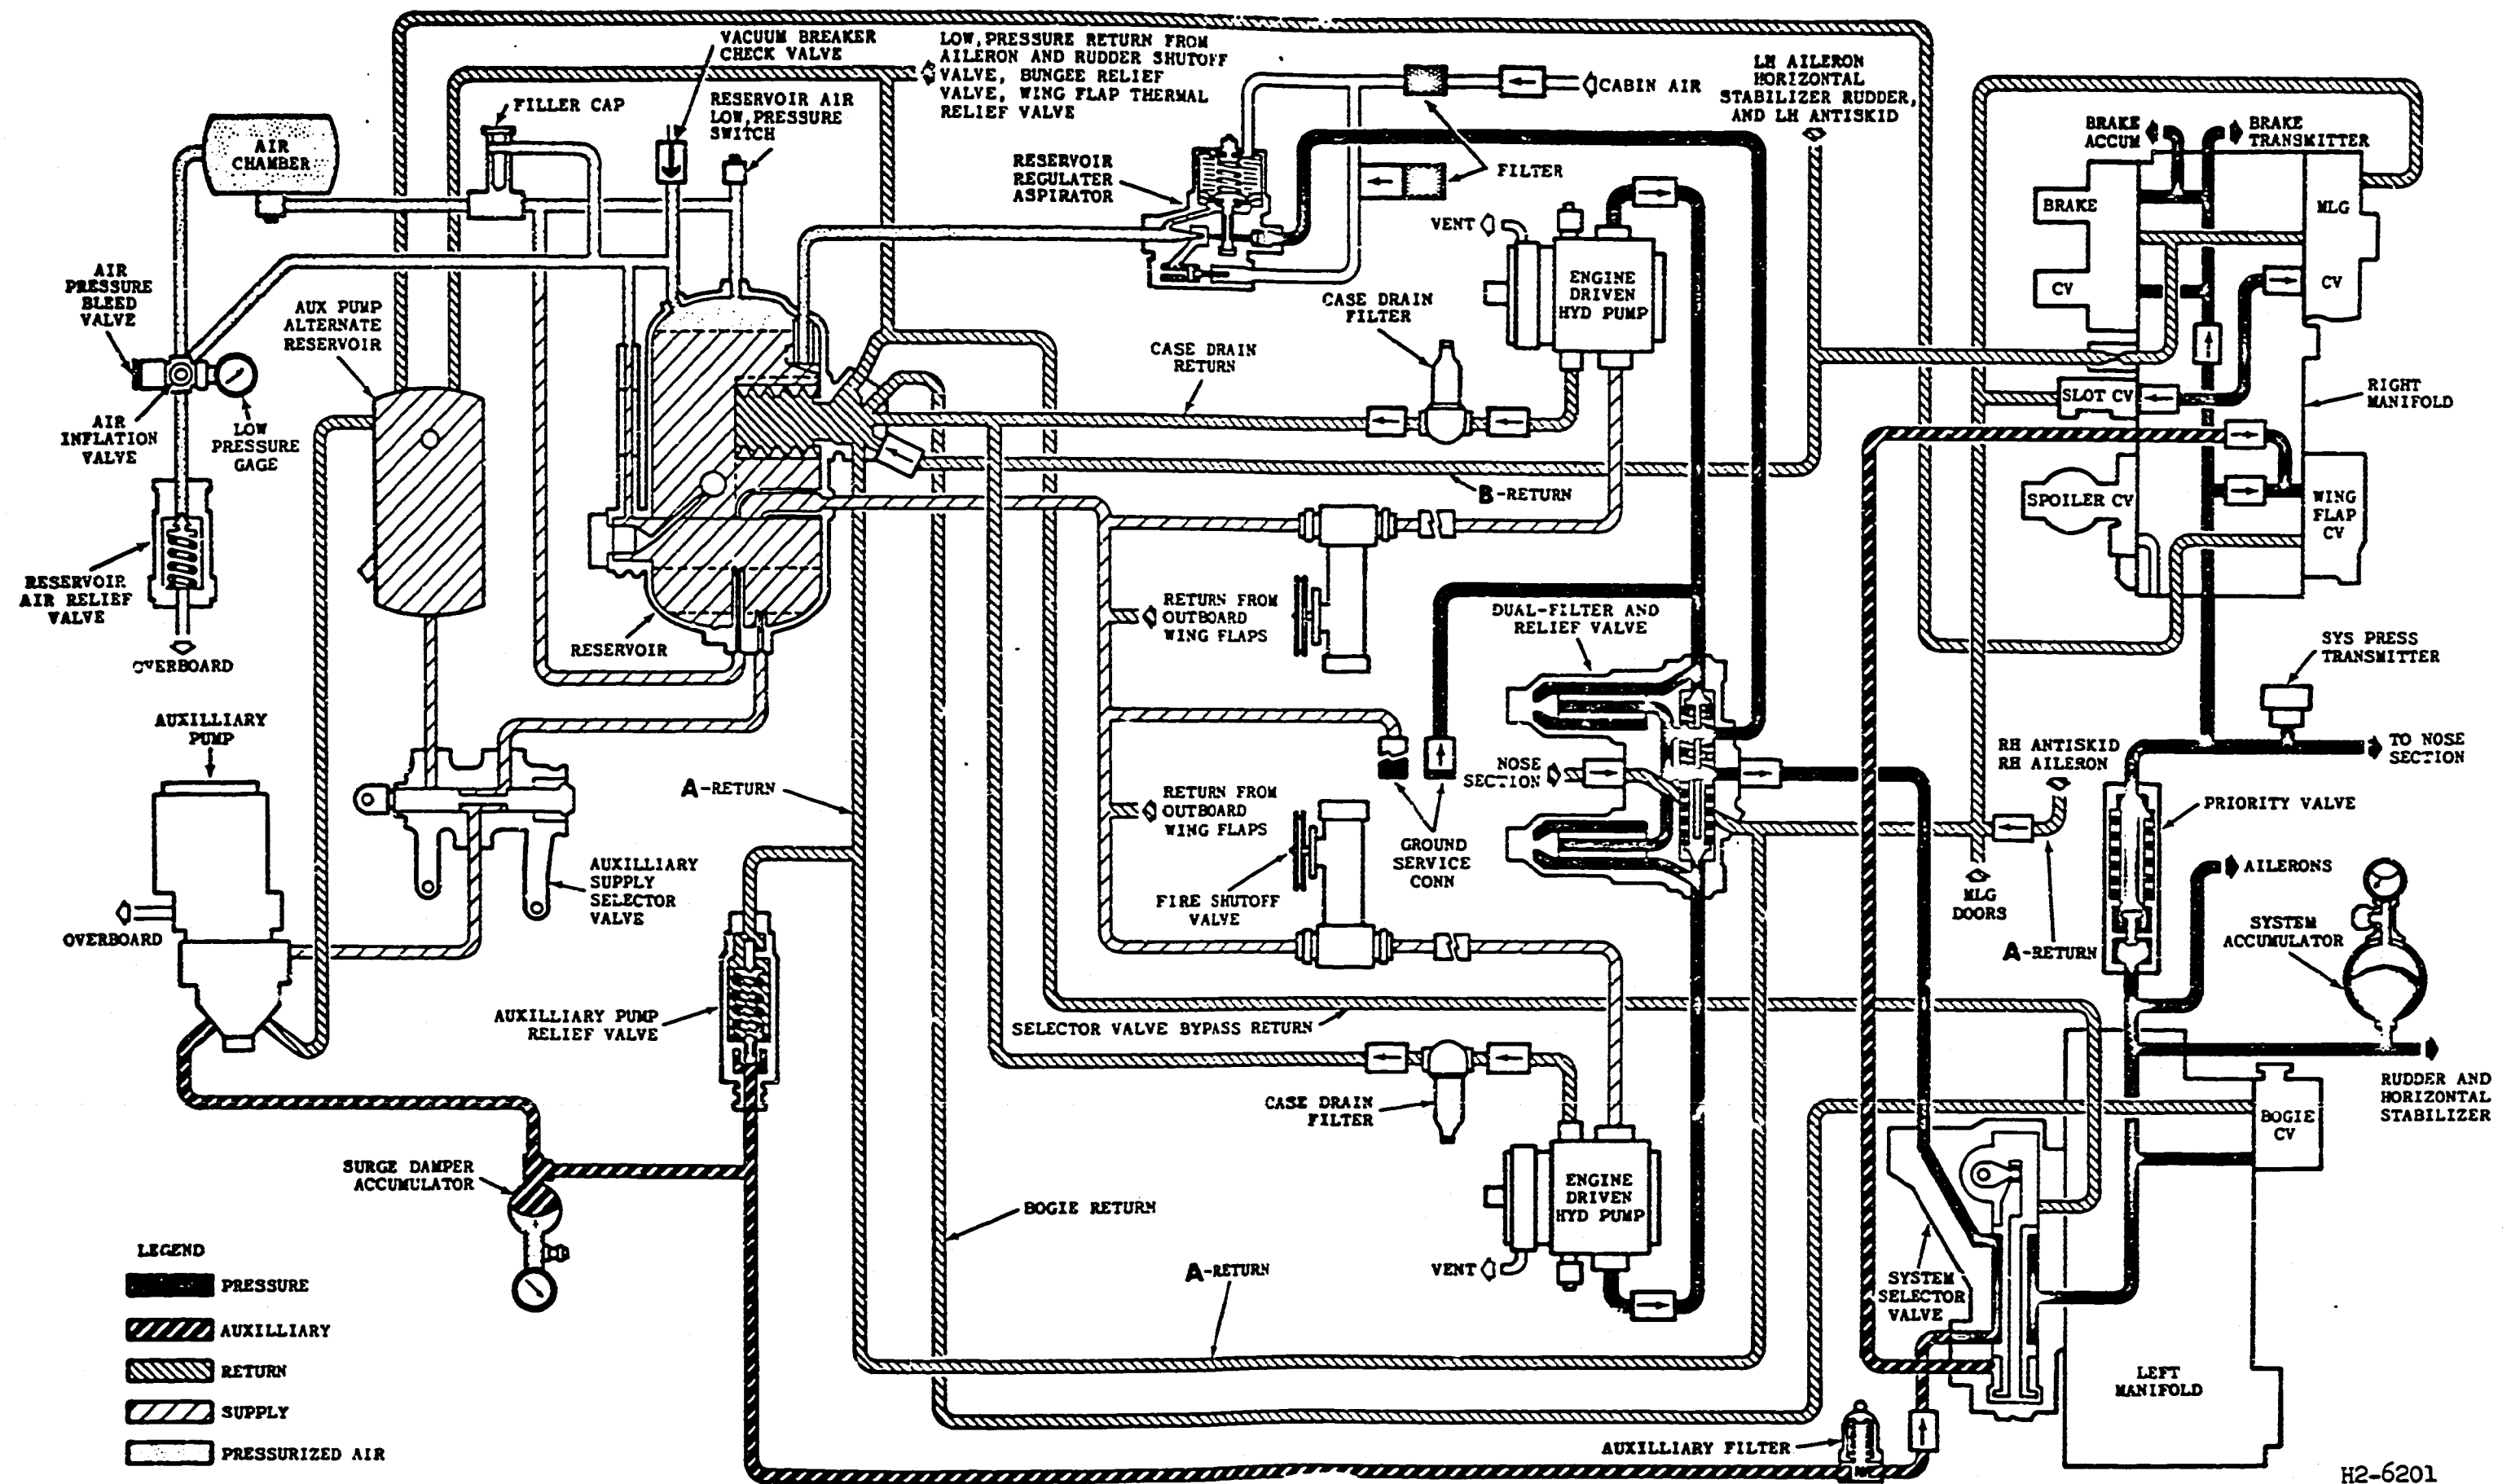


Hydraulic Power System -- Schematic Diagram  
 (Airplanes 816-822)  
 Figure 1 (Sheet 3)

29-10-0  
 CODE 6  
 Page 7

Aug 1/68

H2-6201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

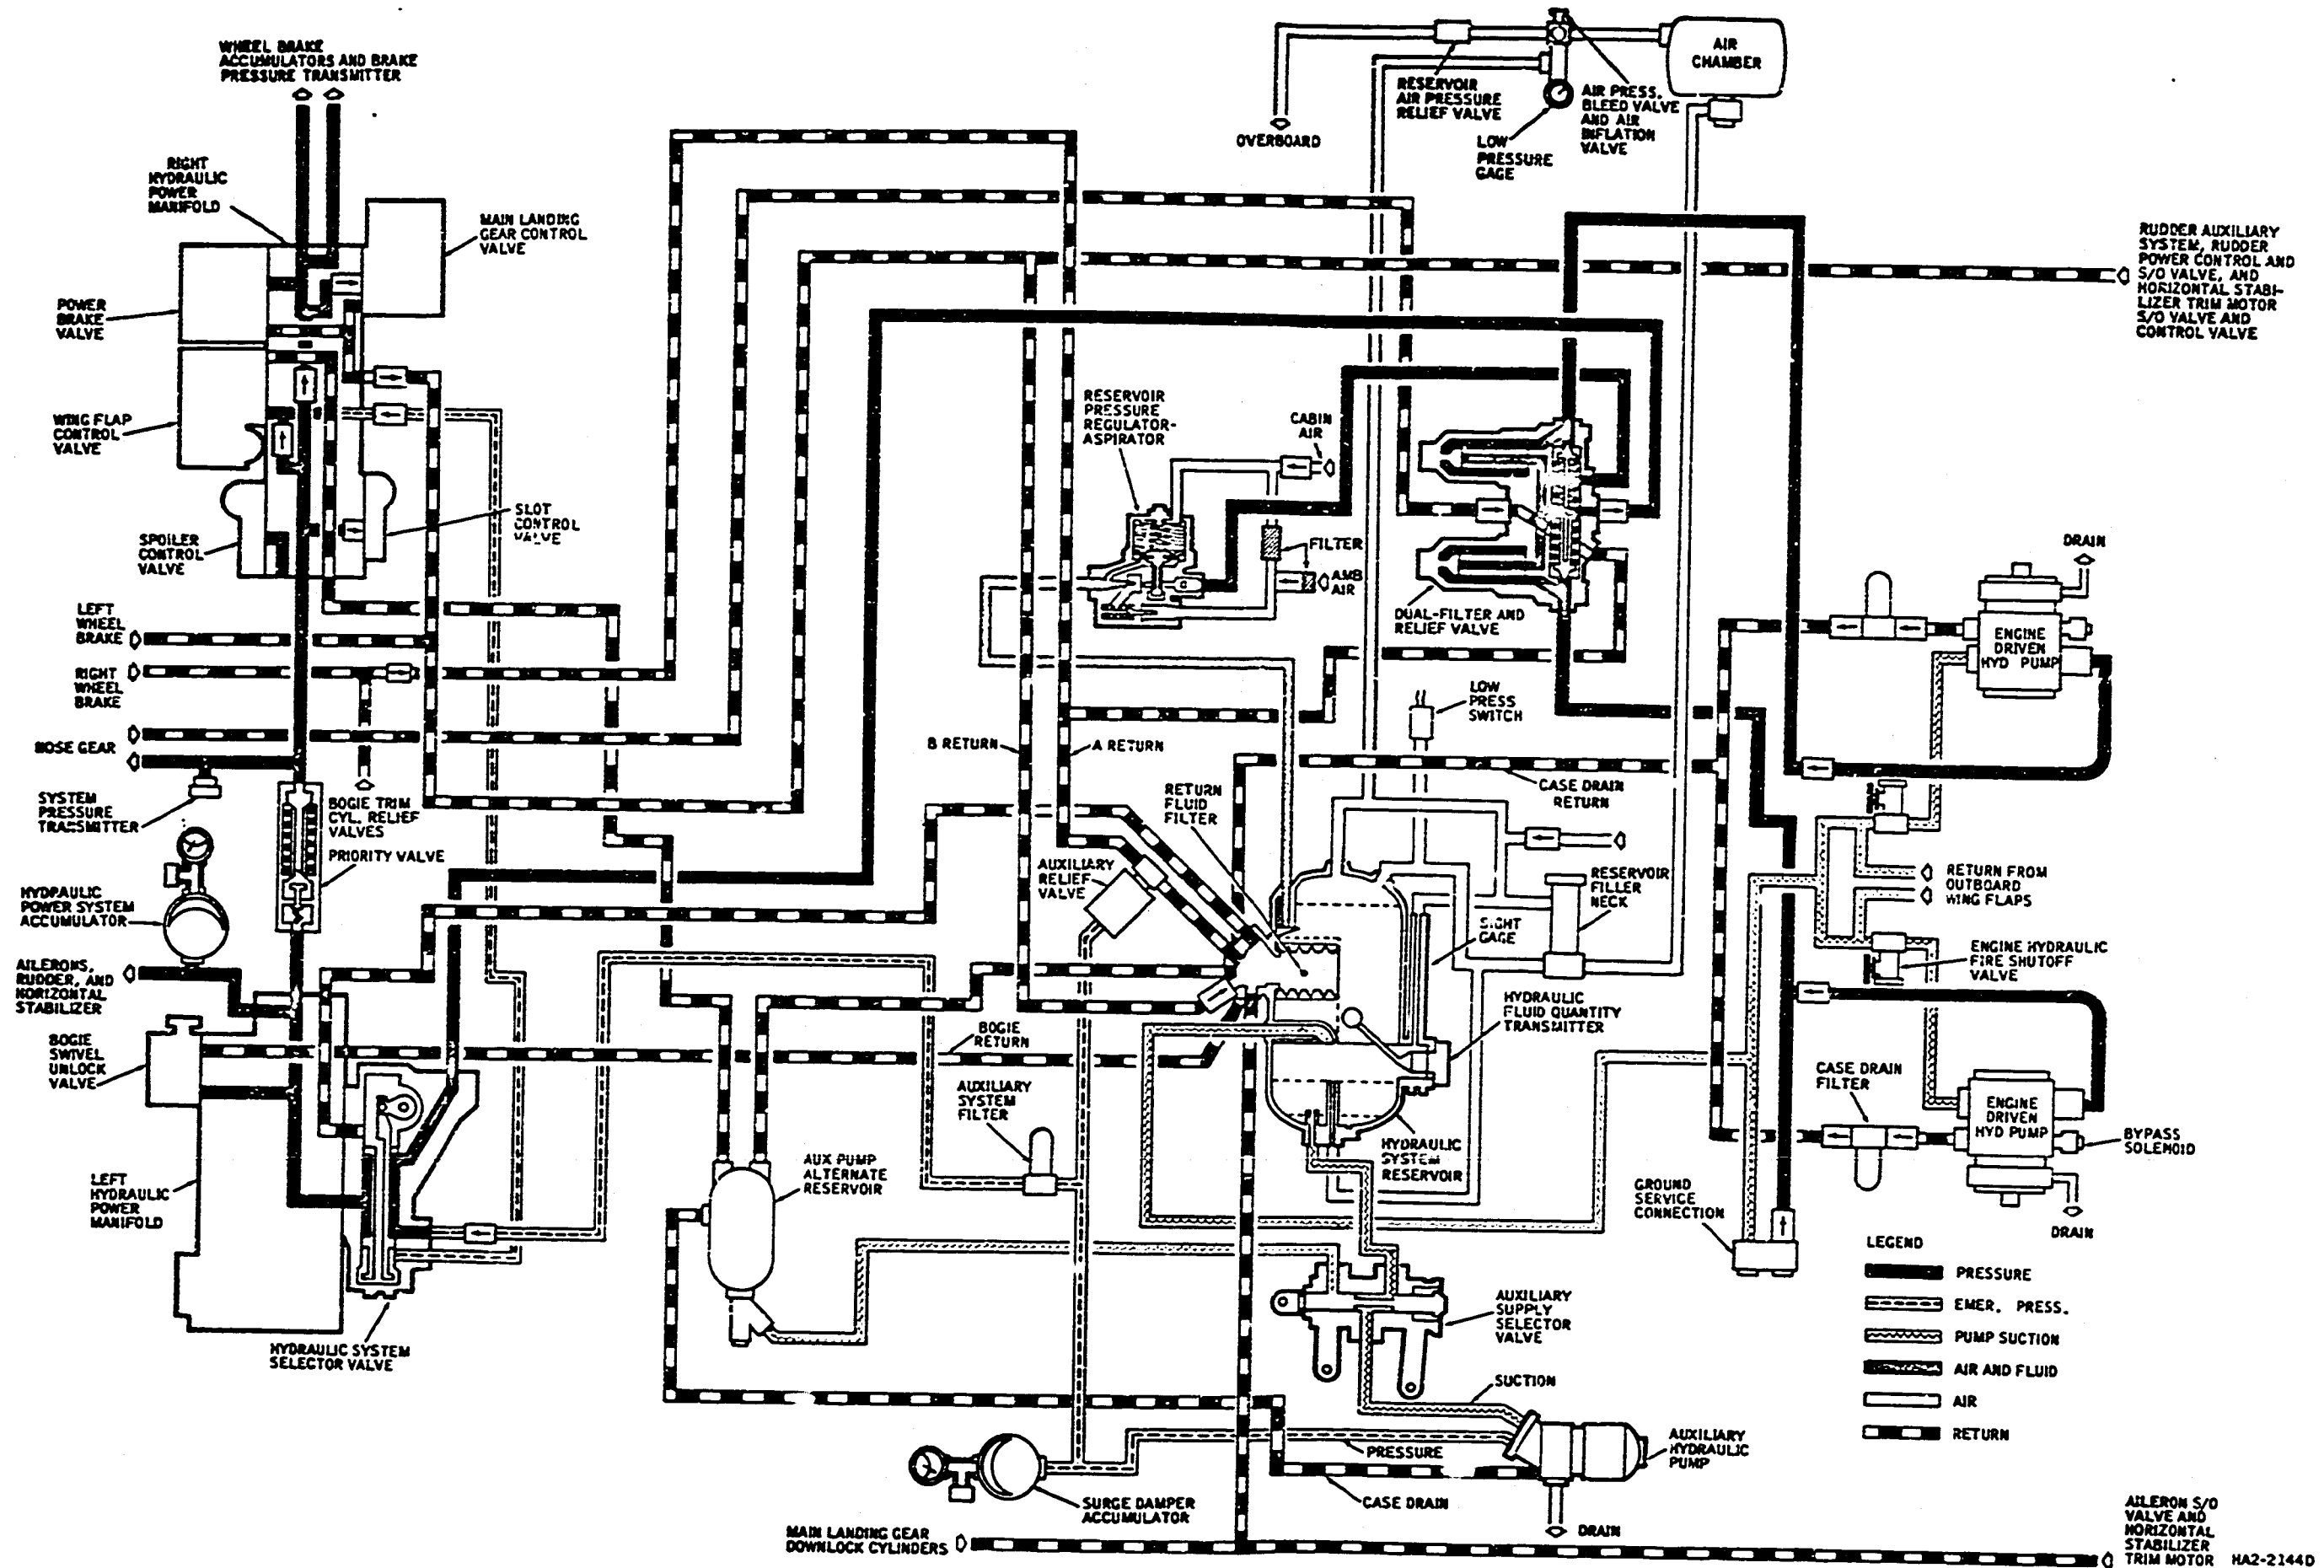

Hydraulic Power System -- Schematic Diagram  
 (Airplanes 860-863)  
 Figure 1 (Sheet 4)


29-10-0  
 CODE 6  
 Page 9

Jan 15/68

Printed in U.S.A.

HA2-2144D

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

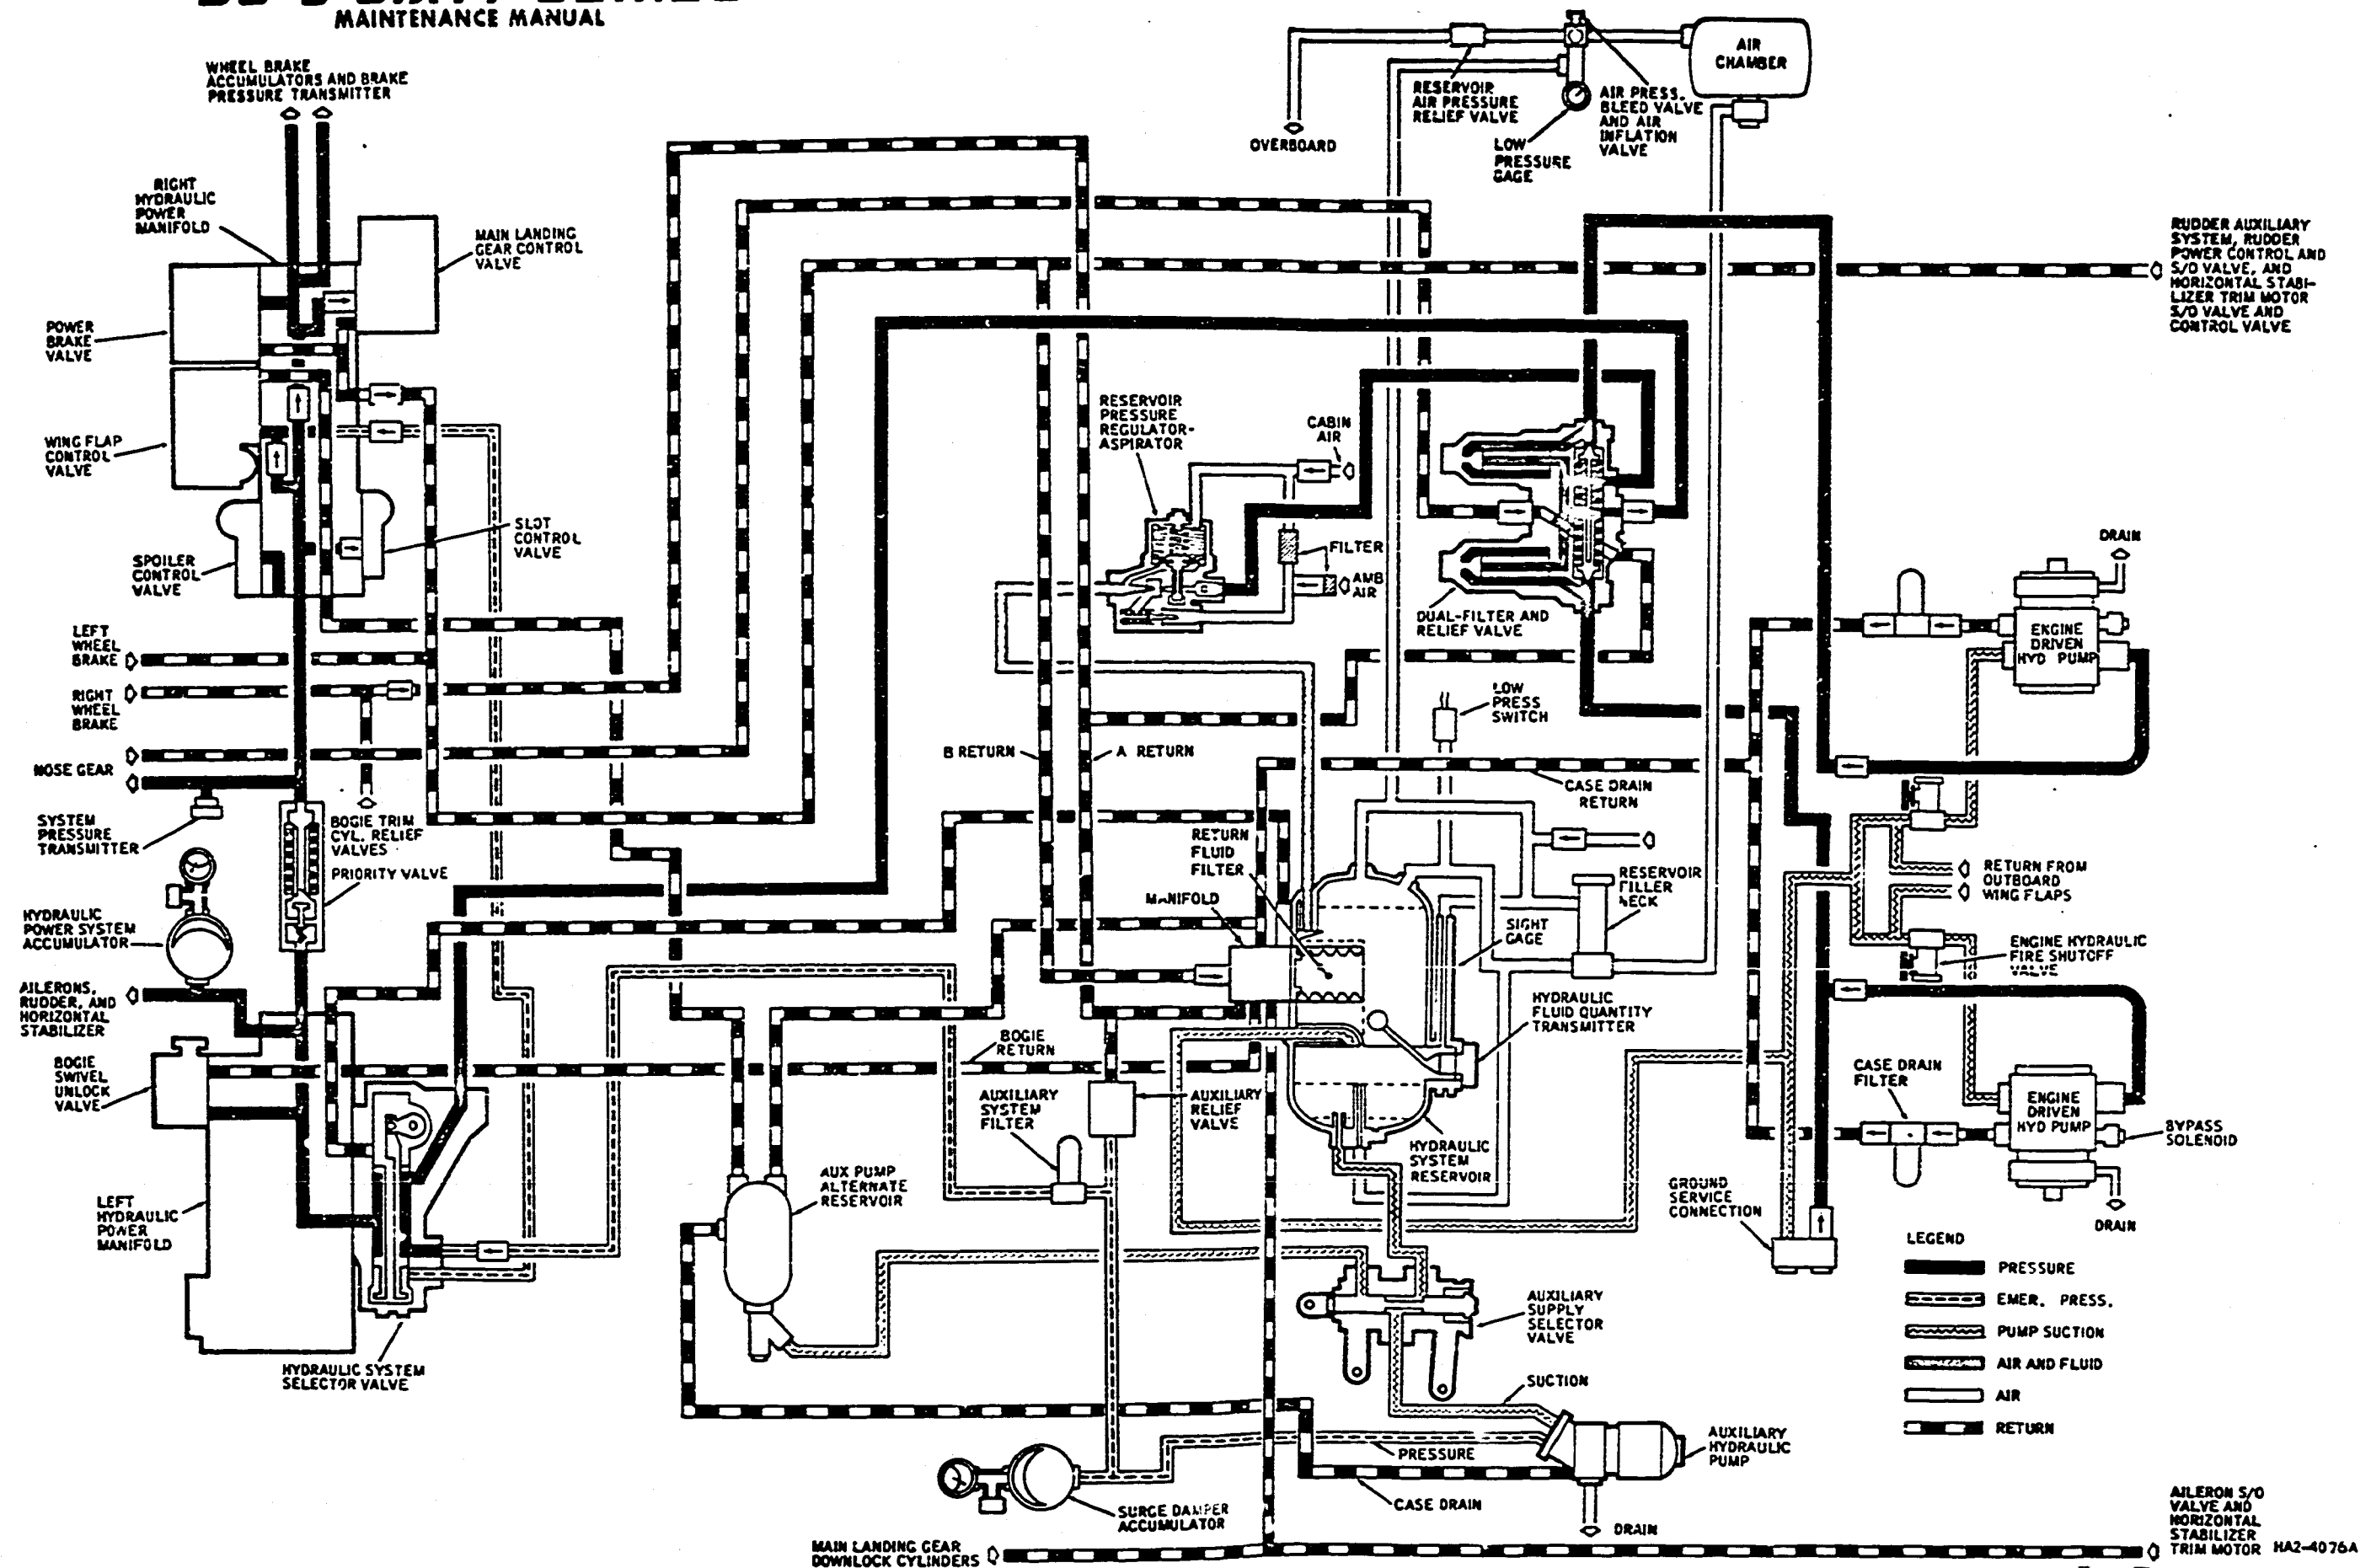


Hydraulic Power System -- Schematic Diagram  
 (Airplanes 864 - 866)  
 Figure 1 (Sheet 5)

29-10-0  
 CODE 6  
 Page 11

Aug 1/68

Printed in U.S.A.


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

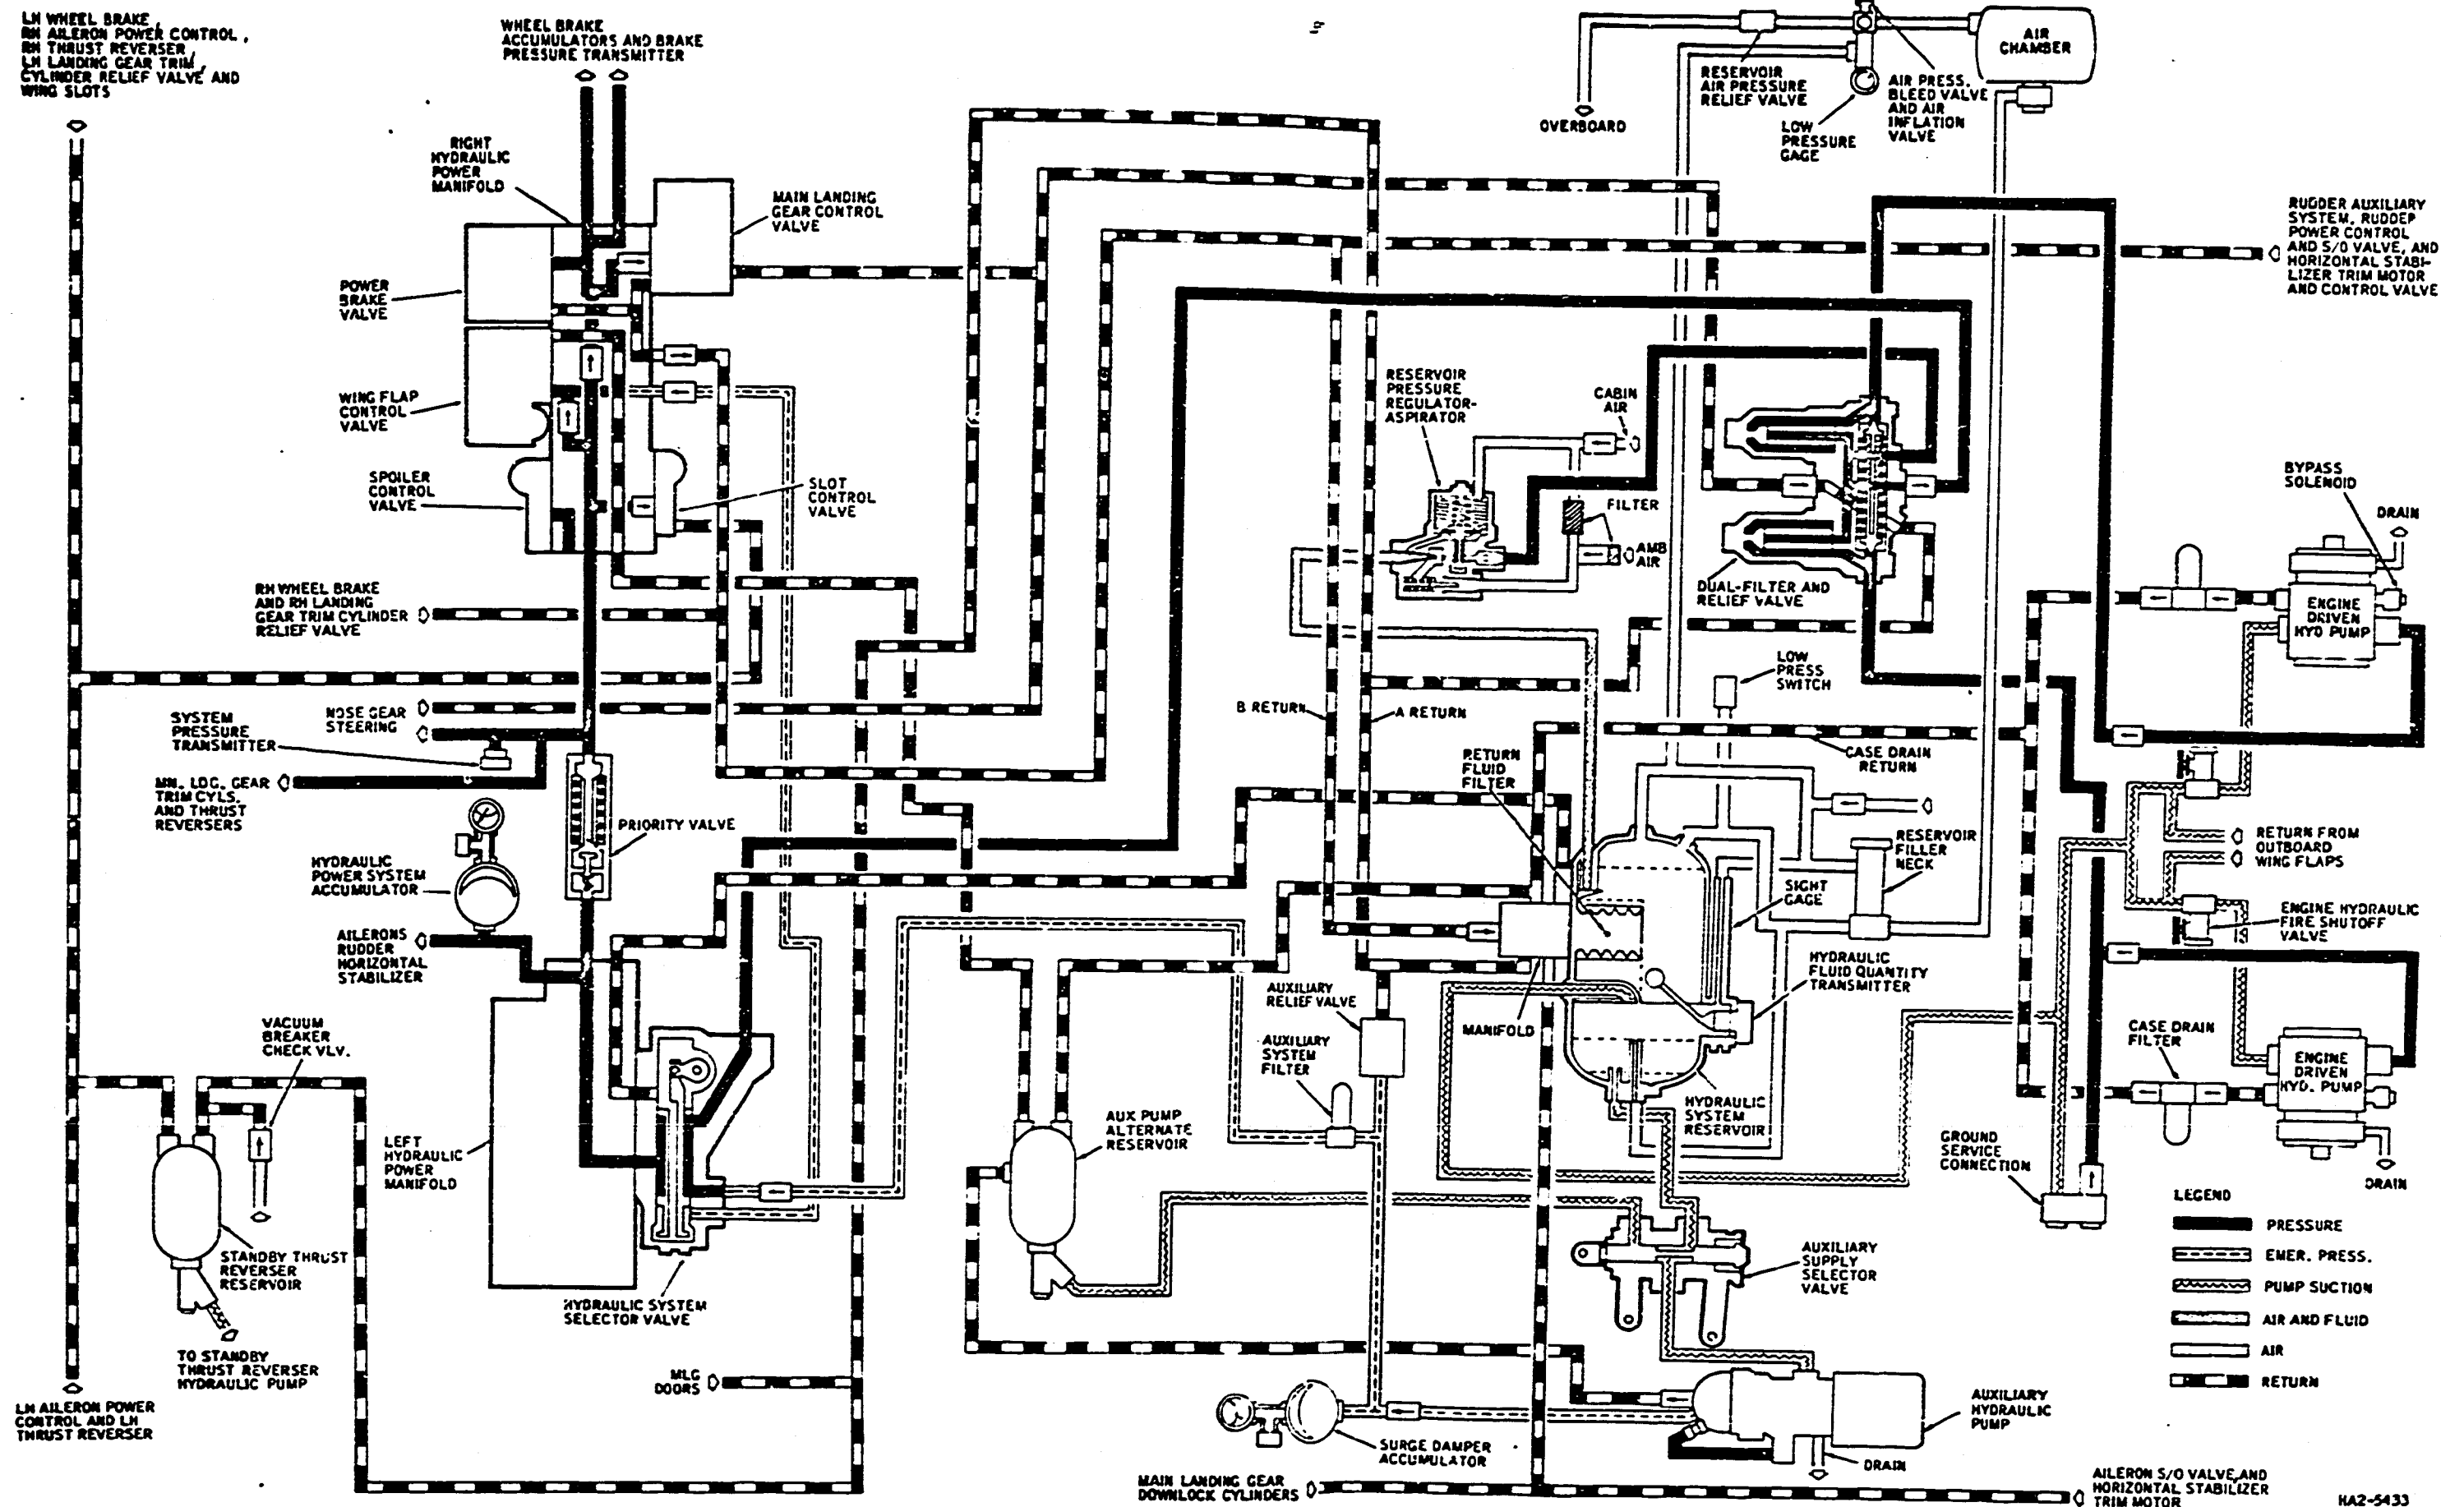

Hydraulic Power System -- Schematic Diagram  
(Airplanes 867 and Subs)  
Figure 1 (Sheet 6)

29-10-0  
CODE 6  
Page 12A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

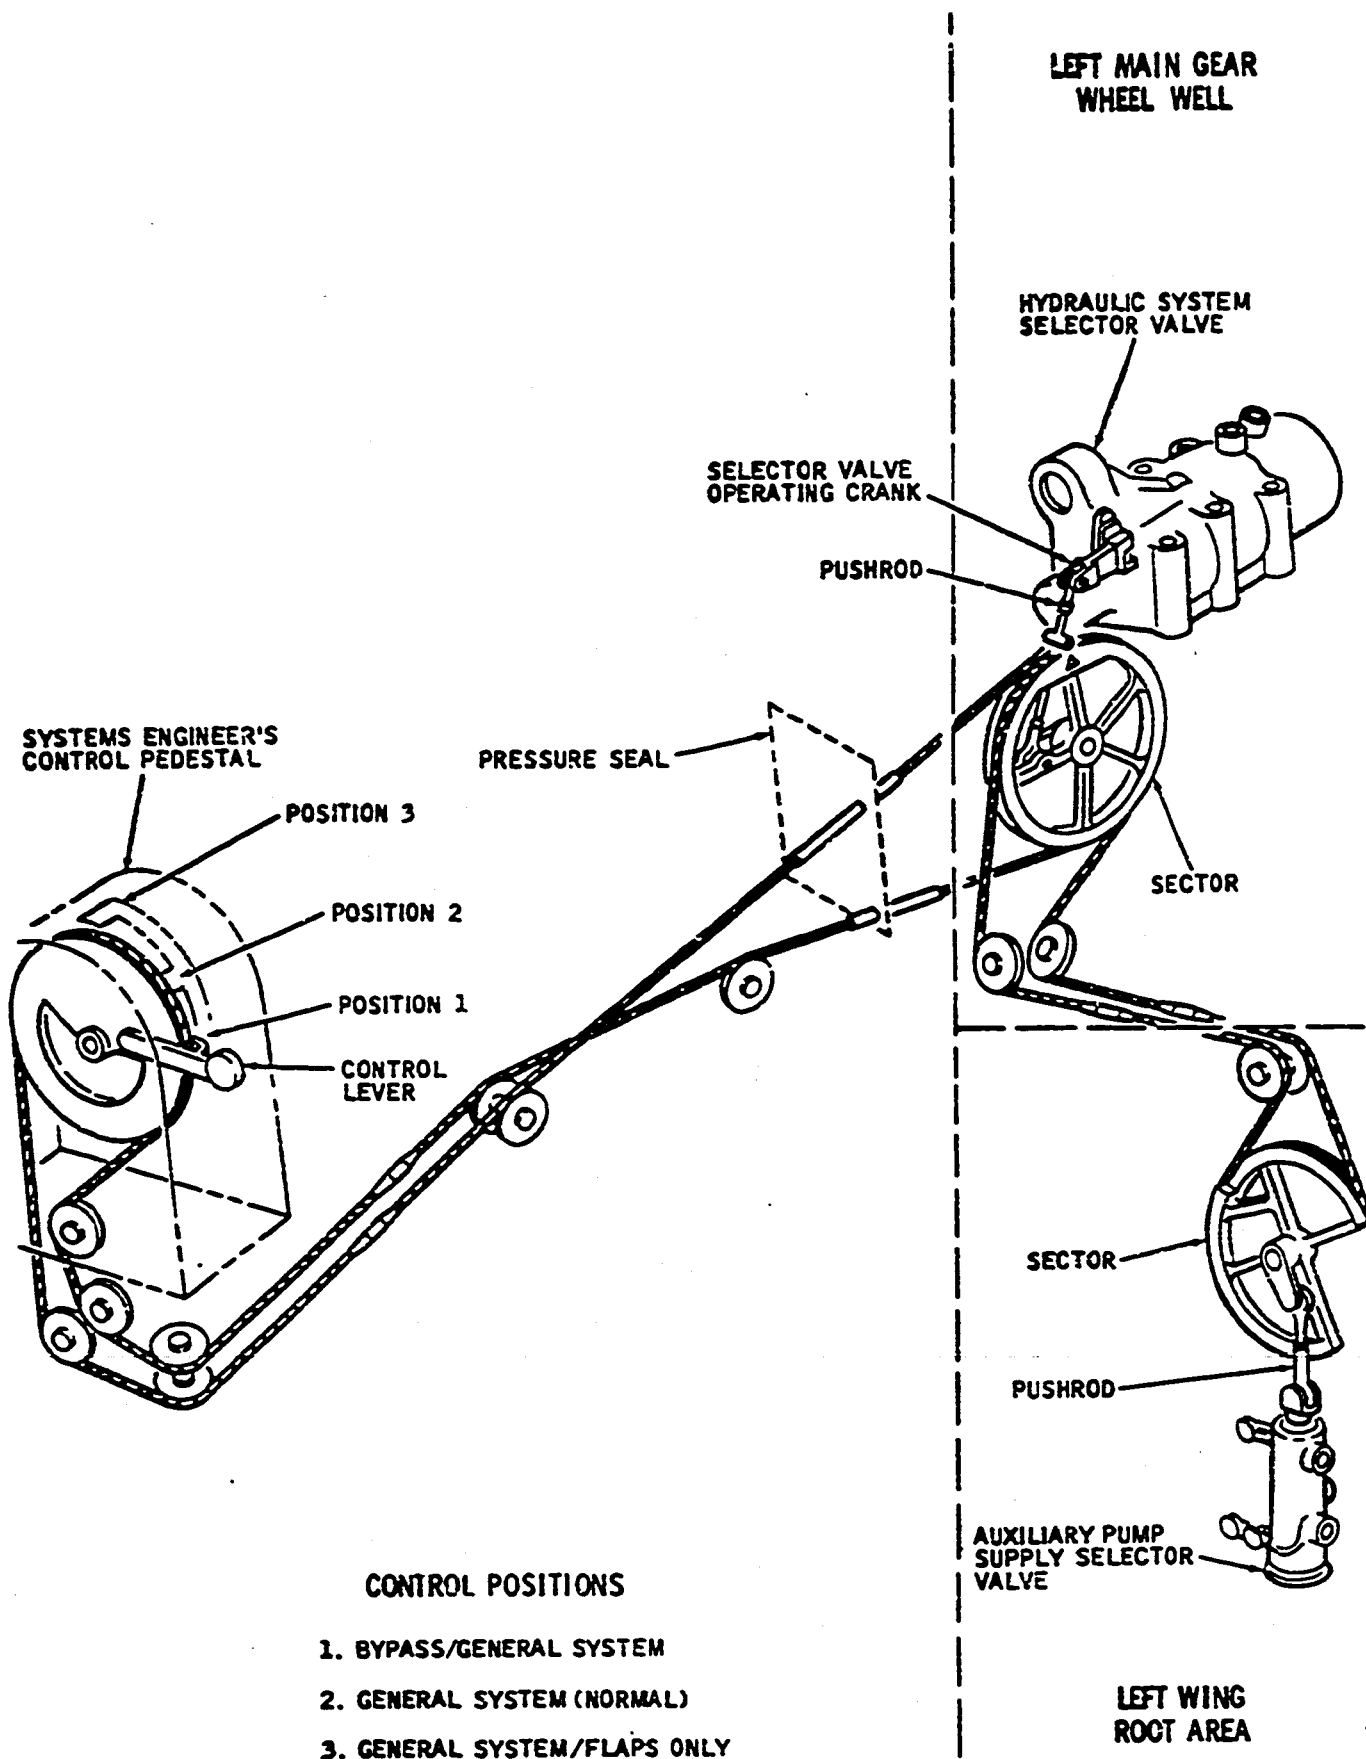

HA2-2145

Hydraulic System Selector and Auxiliary Pump Supply  
 Selector Valves -- Mechanical Control Schematic  
 Figure 2

Jan 15/68

Printed in U.S.A.

29-10-0  
 CODE 6  
 Page 13



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

back to the reservoir via A return port. The relief valve poppet closes again when system pressure drops to approximately 3000 psi.

- (4) The aspirator receives filtered fluid (bleed pressure at normal 3000 psi) from the dual filter and relief valve. The aspirator operates on the jet pump principle. Hydraulic fluid is atomized and mixed with air within the unit by a nozzle and a venturi. The mixture is used to pressurize the reservoir and reservoir air chamber. The regulator diaphragm and the relief valve maintain 35 to 40 psi (airplanes 801-815) or 30 to 35 psi (airplanes 816-822, 860 and subsequent) in the reservoir and air chamber. If there is a regulator malfunction, the aspirator stalls when the outlet pressure reaches a maximum of 45 psi (airplanes 801-815) or 40 psi (airplanes 816-822, 860 and subsequent). A reservoir relief valve in the reservoir vent line relieves thermal expansion pressure above 45 (+5, -0) psi. On airplanes 801-811, a second relief valve installed in the A return port of the reservoir return ports manifold relieves the reservoir pressure after ejector operation with compressed nitrogen. When the ejectors are subsequently retracted, the nitrogen is returned to the reservoir. The relief valve is set to open at 60 (+5, -0) psi.
- (5) Pump pressure fluid enters the system selector valve through the system pressure inlet port. When the pump selector control lever is in the general system (normal) position, fluid is ported to the pressure passages of the left power manifold. The fluid pressure in the left power manifold is ported through the priority valve to the nose gear and the right power manifold and directly to the following valves:
  - (a) Bogie unlock
  - (b) Aileron power shutoff
  - (c) Rudder power shutoff
  - (d) Longitudinal trim hydraulic motor shutoff
  - (e) Ejectors (airplanes 801-811)
- (6) The right power manifold distribution fluid pressure to the brake accumulators, the pressure transmitter, and the following control valves:
  - (a) Wing flap
  - (b) Slot
  - (c) Main gear
  - (d) Power brake
- (7) All return fluid from the wing flap control valve is ported through the right power manifold and into the auxiliary hydraulic pump alternate reservoir on airplanes 801-815. On airplanes 816-822, 860 and subsequent, return fluid from the outboard wing flaps is piped into the suction lines for each engine-driven hydraulic pump. Return fluid from the slot control valve is ported into the A return line to the main



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

reservoir. The power brake and main gear control valve gear up return fluid is ported through a restrictor check valve into the B return line to the reservoir. The main gear control valve gear down return pressure bypasses the right manifold and returns to the reservoir through the A return line. The return port of the bogie unlock valve ports fluid from the left manifold to the bogie return port of the reservoir. All return fluid entering the reservoir is filtered through the return ports filter located within the reservoir.

C. Bypass Operation

- (1) The output of the engine-driven hydraulic pumps is bypassed by moving the system selector control lever out of the general system (normal) position to the bypass/general system position.
- (2) The system selector valve in the bypass position ports engine-driven pump pressure from the dual filter and relief valve directly to the return passage of the left power manifold. From the manifold, the fluid is ported directly to a tee in the wing flap return port of the hydraulic system reservoir. In the bypass condition, the auxiliary hydraulic pump receives fluid from the hydraulic system reservoir, pressurizes it to system pressure, and ports it to the left and right power manifolds for distribution to the subsystems.

D. Alternate Operation

- (1) When both engine-driven hydraulic pumps and the auxiliary hydraulic pump are rendered inoperative due to the loss of the normal supply of fluid, the hydraulic power system can be rigged for alternate operation. This is accomplished by placing the system selector control lever in the general system/flaps only position. When the system selector control lever is in this position, the auxiliary hydraulic pump supply selector valve is positioned to supply fluid from the auxiliary pump alternate reservoir to the auxiliary pump.
- (2) Fluid is supplied to the auxiliary pump from the outlet port of the auxiliary pump supply selector valve. Output pressure is ported through the auxiliary system filter and check valve to the auxiliary pressure inlet of the system selector valve.
- (3) In the general system/flaps only position, auxiliary pump pressure bypasses the manifold pressure passages and is ported from the alternate outlet port of the system selector valve. Fluid from this port flows directly to a port on the right power manifold, through an internal check valve in the manifold, to the wing flap control valve.

E. Mechanical Control

- (1) The hydraulic power mechanical control system consists of the hydraulic system selector control lever cable drum, the system selector valve sector, the system selector valve, the auxiliary hydraulic pump supply selector, valve sector, and the auxiliary hydraulic pump supply selector valve.
- (2) The control lever located on the system engineer's control pedestal is used to position the system selector valve and, in turn, the auxiliary hydraulic pump supply selector valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (3) The control lever is spring loaded into general system (normal) position, and is connected to the control lever cable drum. Two cables run from the drum, under the cabin floor, aft through the pressure bulkhead at the rear wing spar, and into the left wheel well to the system selector valve sector. A pushrod connects the sector to the positioning lever of the system selector valve.
- (4) A second set of cables is routed from the system selector valve sector into the left wing root to the auxiliary hydraulic pump supply selector valve sector. When the system selector valve is in either bypass or normal, the auxiliary hydraulic pump supply selector is arranged so that the pushrod idles between the two positions. This allows the valve to remain in the auxiliary position. When the sector is moved to the alternate position, the pushrod is pulled by the sector to reposition the valve to the alternate position.
- (5) The control lever is normally in the general system (normal) position. To move the system selector valve to the bypass position, the control lever is moved to the bypass/general system position. When the system selector valve is moved to the bypass position, the auxiliary hydraulic pump supply selector valve sector is moved to a new position. Due to the idle feature on the auxiliary sector, the valve remains in the auxiliary position. With the valve in this position, fluid is supplied to the auxiliary pump through the low standpipe in the hydraulic system reservoir. In this condition, engine-driven pump pressure is ported to the reservoir and the auxiliary pump pressure is ported to the general system.
- (6) To put the system in alternate operation, the control is moved to the general system/flaps only position. This moves the system selector valve to the alternate position, and simultaneously moves the auxiliary hydraulic pump supply selector valve to the alternate position. Fluid is supplied to the auxiliary pump from the auxiliary hydraulic pump alternate reservoir. Fluid pressure from the auxiliary pump is ported to the flap system control valve only. Engine-driven pump pressure is ported from the system selector valve to the general system.

## 2. System Components

### A. Hydraulic System Reservoir (Airplanes 801-822, 860-863, See Figures 3 and 4.)

- (1) The hydraulic system reservoir is installed on the aft side of the wing rear spar in the left wing root and is accessible through the left wing root access door. The hydraulic system reservoir serves as the main source of hydraulic fluid for the engine-driven hydraulic pumps and the normal supply for the auxiliary hydraulic pump. The reservoir is cylindrical in shape and contains a filter, baffle, and a screen cover encasing the filter. The filter prevents foreign particles from contaminating the fluid supply. Mountings are provided on the exterior surface of the reservoir for return line ports,

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

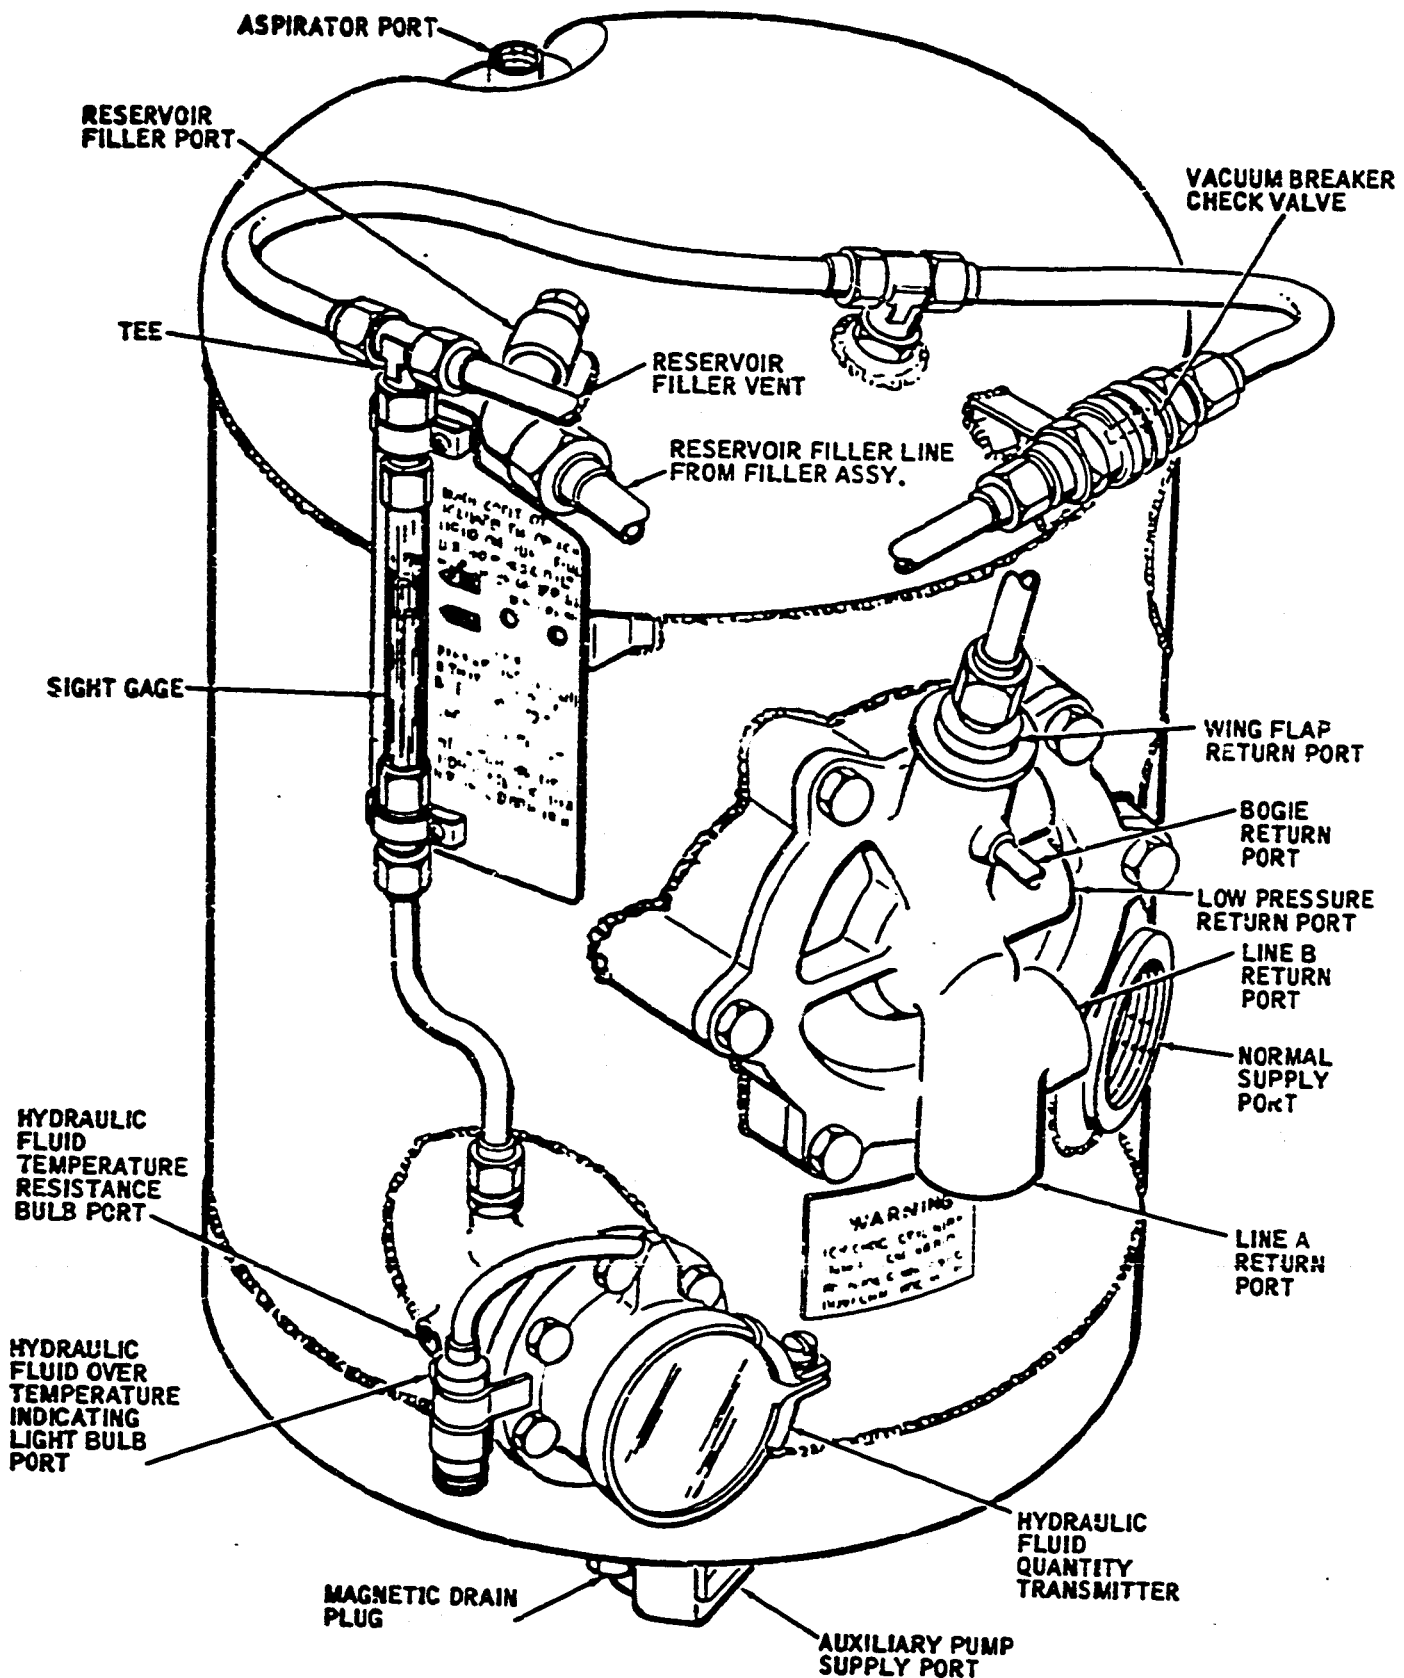

HA2-4649


Hydraulic System Reservoir -- External View  
 (Airplanes 801-811)  
 Figure 3 (Sheet 1)

29-10-0  
 CODE 6  
 Page 17

Jan 15/68

Printed in U.S.A.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

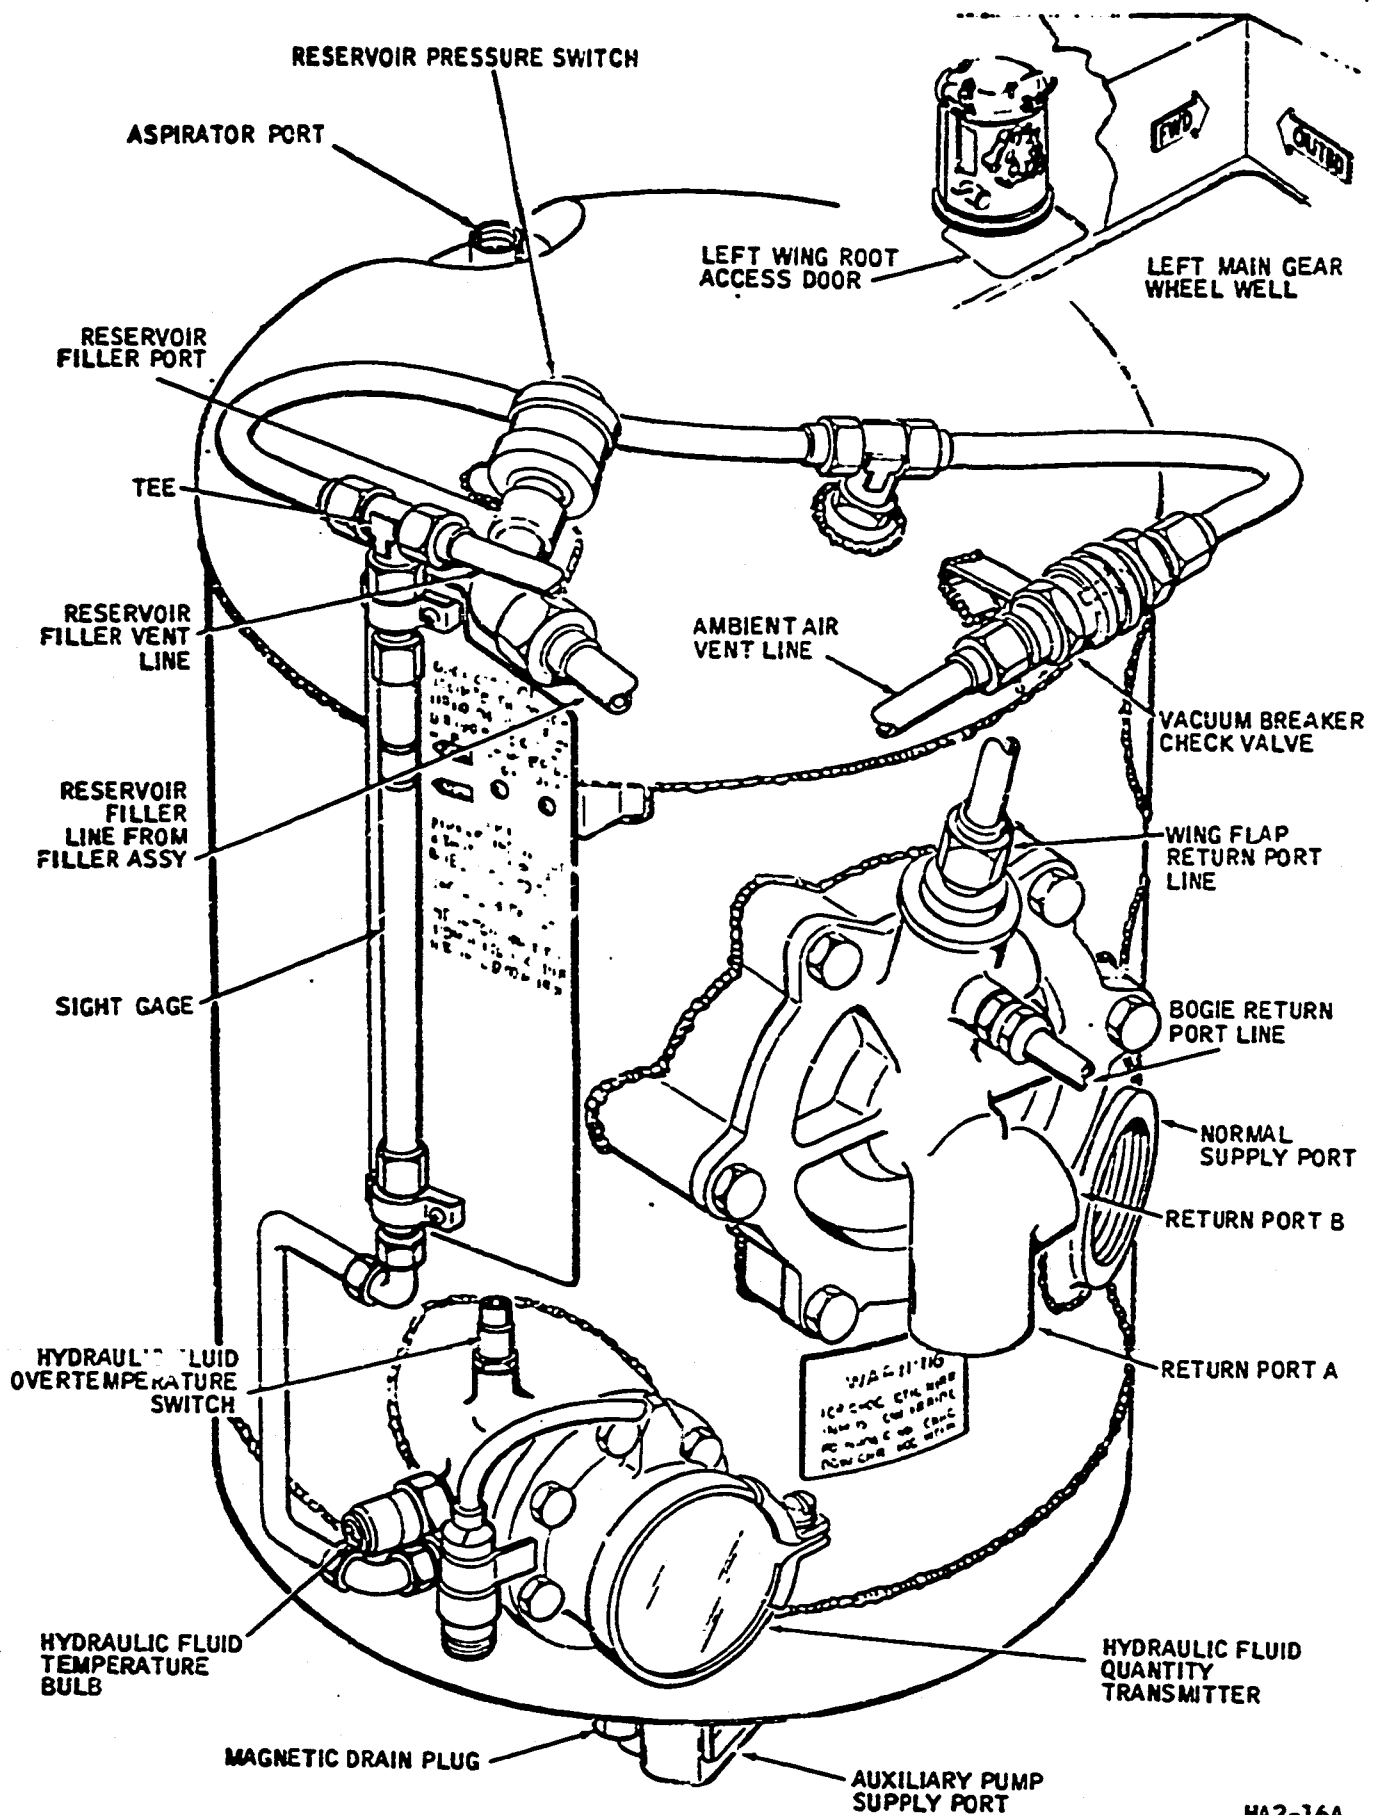

HA2-16A

Hydraulic System Reservoir -- External View  
 (Airplanes 812-822, 860-863)  
 Figure 3 (Sheet 2)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

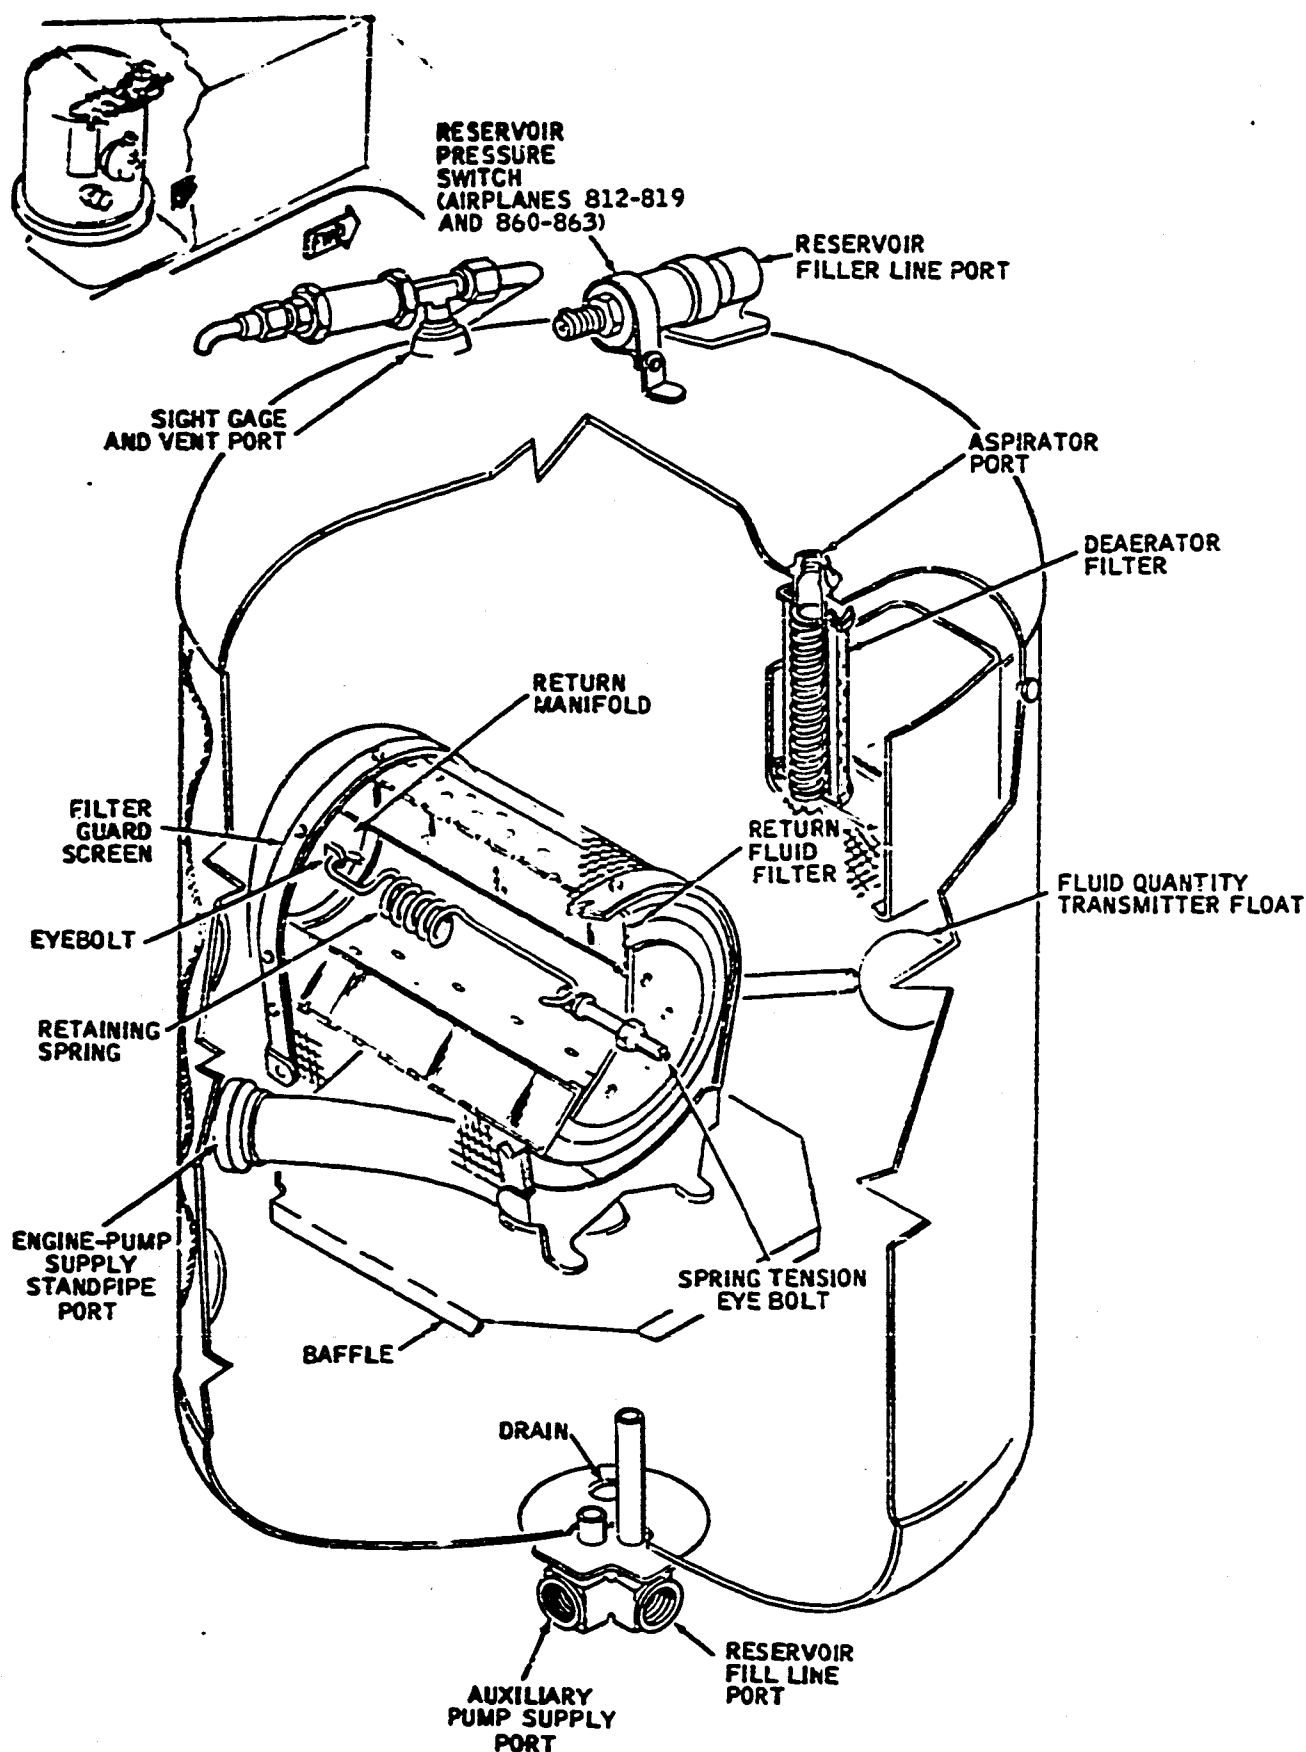

Hydraulic System Reservoir -- Cutaway View  
 (Airplanes 801-822, 860-863)  
 Figure 4

HA2-4650

29-10-0  
 CODE 6  
 Page 19

Aug 1/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

aspirator port, electrical sensing units, sight gage, instruction placards, magnetic drain plug, and system supply ports.

- (2) The reservoir is pressurized with air from the regulator-aspirator to between 35 and 40 psi on airplanes 801-815, and 30 and 35 psi on airplanes 816-822, 860 and subsequent, and has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir volume is used for fluid and 1/10 is used for foam space.
- (3) The aspirator port through which the reservoir is pressurized is located in the recess on top of the reservoir. An aspirator-deaerator filter is supported in the reservoir by a screen and support box assembly which is mounted to the reservoir wall by two bolts.
- (4) The mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The manifold is bolted to the flange and contains five ports: return port A, located at the bottom; return port B, located at the lower right side; the low-pressure return port, located at the upper right; the wing flap return port, located at the top; and the bogie return port, located on the face of the manifold just below the wing flap return port.
- (5) The return fluid filter is installed in the reservoir, behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the manifold holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
- (6) A flanged adapter for the fluid quantity transmitter is welded to the reservoir below and to the left of the return ports manifold. The adapter is provided with two small port bosses for the hydraulic fluid temperature bulb and the hydraulic fluid overtemperature switch. The lower end of the sight gage connects to a third port in the adapter, while the top of the sight gage tees into a port at the top of the reservoir. An instruction plate is mounted behind the sight gage and the vacuum breaker check valve tees into the port at the top of the reservoir that is used by the sight gage.

B. Hydraulic System Reservoir (Airplanes 864 and Subsequent, See Figures 5 and 6.)

- (1) The hydraulic system reservoir is installed on the aft side of the wing rear spar in the left wing root and is accessible through the left wing root access door. The hydraulic system reservoir serves as the main source of hydraulic fluid for the engine-driven hydraulic pumps and the normal supply for the auxiliary hydraulic pump. The reservoir is cylindrical in shape and contains a filter, baffle, and a screen cover encasing the filter. The filter prevents foreign

# DC-8 SIXTY SERIES



Hydraulic System Reservoir -- External View  
(Airplanes 864 and Subsequent)

**HA2-688**

29-10-0


**CODE 6**

Page 21

Jan 15/68

**Printed in U.S.A.**

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

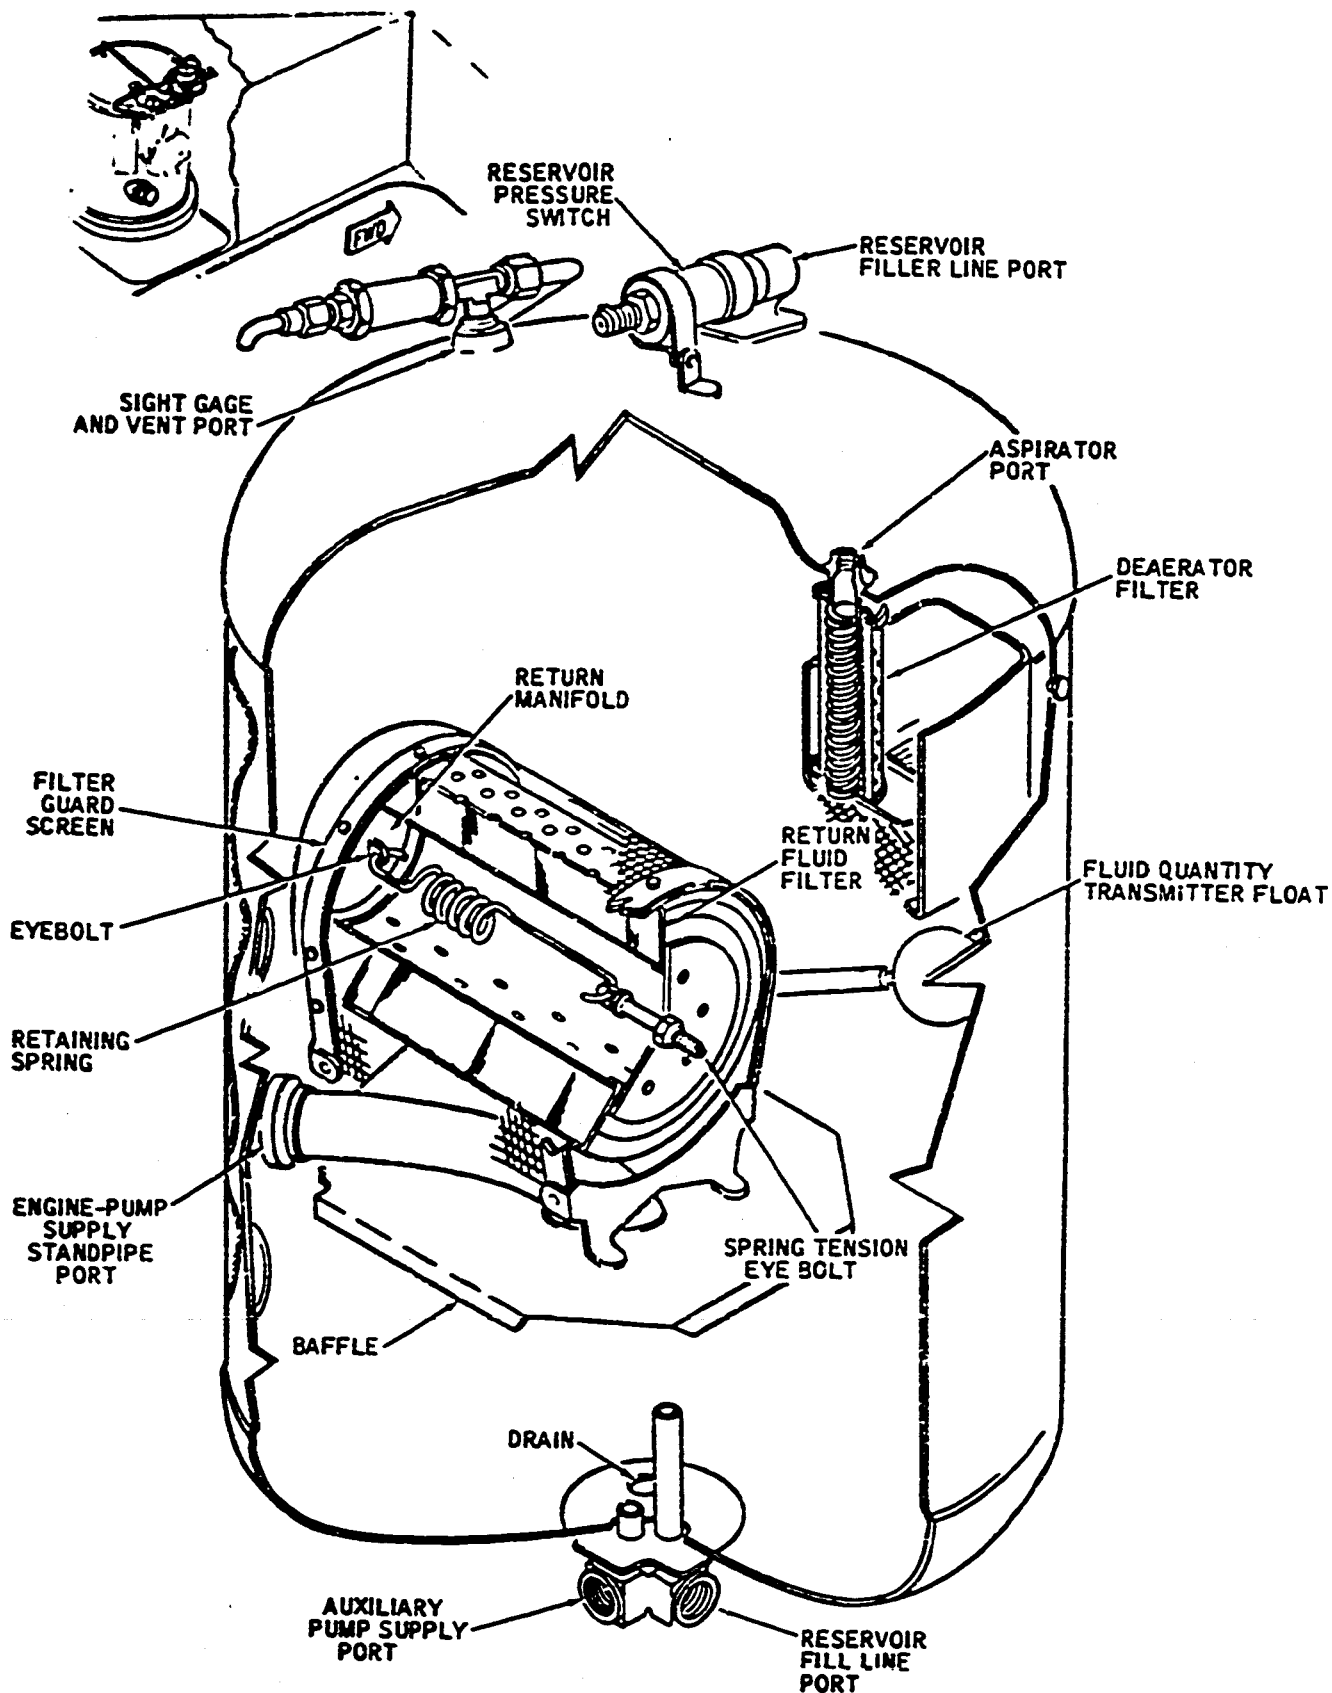

Hydraulic System Reservoir -- Cutaway View  
 (Airplanes 864 and Subsequent)  
 Figure 6

HA2-689

29-10-0  
 CODE 6  
 Page 22

Jan 15/68

Printed in U.S.A.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

particles from contaminating the fluid supply. Mountings are provided on the exterior surface of the reservoir for return line ports, aspirator port, electrical sensing units, sight gage, instruction placards, magnetic drain plug, and system supply ports.

- (2) The reservoir is pressurized with air from the regulator-aspirator to between 30 and 35 psi and has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir volume is used for fluid and 1/10 is used for foam space.
- (3) The aspirator port through which the reservoir is pressurized is located in the recess on top of the reservoir. An aspirator-deaerator filter is supported in the reservoir by a screen and support box assembly which is mounted to the reservoir wall by two bolts.
- (4) The mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The return ports manifold is an open-centered ring, flanged at both sides and provided with five fluid ports around its circumference; return port A is located at the bottom, return port B is located at the lower right side, the wing flap return port is located at the upper left side, and the system selector valve bypass port is located at the top. One flange of the manifold is mounted with six bolts to the mounting flange on the reservoir. The return fluid filter cover fits into the open side of the manifold, and is attached to the outer manifold flange with six bolts to form a fluid-tight cover for both the manifold and the filter.
- (5) The return fluid filter is installed in the reservoir, behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the return fluid filter cover holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to the engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
- (6) A flanged adapter for the fluid quantity transmitter is welded to the reservoir below and to the left of the return ports manifold. The adapter is provided with two small port bosses for the hydraulic fluid temperature bulb and the hydraulic fluid overtemperature switch. The lower end of the sight gage connects to a third port in the adapter, while the top of the sight gage tees into a port at the top of the reservoir. An instruction plate is mounted behind the sight gage and the vacuum breaker check valve tees into the port at the top of the reservoir that is used by the sight gage.

C. Hydraulic Reservoir Return Fluid Filter (Airplanes 801-822, 860-863,  
See Figure 4.)

- (1) The reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply. The filter is located behind the return ports manifold and is spring loaded

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

to act as its own relief valve. Access to the filter is by removing the return ports manifold. Removal of the return ports manifold necessitates disconnecting the return lines from the manifold and removal of six bolts which secure the manifold to the reservoir. The filter which is attached to the manifold is then withdrawn from the reservoir.

- (2) Externally, the filter consists of two perforated, concentric tubes. The area between the tubes is closed by metal end caps which are bonded to the two tubes. A resilient rubber gasket is bonded to each of the caps. Each gasket must be smooth and flat for proper sealing of the filter. The gaskets act as a static seal and a relief valve seat.
- (3) Internally, the filter has a 10-micron, resin-impregnated, convoluted paper-type filter element. The area of the filter element is approximately 1960 square inches. The filter is held in place by a retaining spring. One end of the spring is attached to an eyebolt located inside the return ports manifold. The spring passes through the center chamber of the filter and is connected to another eyebolt. This eyebolt is secured to a large washer and plate by means of a self-locking nut. The washer seats on the rubber gasket which is bonded to the filter. The fluid enters the center chamber of the filter and passes through the inner tube of the filter to the filter element by means of perforation holes. Foreign matter is filtered out by the filter element, and the fluid leaves the element through perforation holes in the outer tube. When the element becomes saturated with foreign matter, the filter acts as its own relief valve and unseats at 10 to 20 psi above normal return pressure on airplanes 801-811 and 20 to 25 psi above normal return pressure on airplanes 812-822 and 860-863. When the relief valve unseats fluid is allowed to bypass the filter and enter the reservoir.

D. Hydraulic Reservoir Return Fluid Filter (Airplanes 864 and Subsequent, See Figure 6.)

- (1) The reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply. The filter is located behind the return ports manifold and is spring loaded to act as its own relief valve. Access to the filter is by removing the return fluid filter cover from the return ports manifold by removal of six bolts. The filter is attached by a retaining spring to the cover and is withdrawn from the reservoir when the cover is removed.
- (2) Externally, the filter consists of two perforated concentric tubes. The area between the tubes is closed by metal end caps which are bonded to the two tubes. A resilient rubber gasket is bonded to each of the caps. Each gasket must be smooth and flat for proper sealing of the filter. The gaskets act as a static seal and a relief valve seat.
- (3) Internally, the filter has a 10-micron, resin-impregnated, convoluted paper-type filter element. The area of the filter element is approximately 1960 square inches. The filter is held in place by a retaining



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

spring. One end of the spring is attached to an eyebolt located inside the return ports manifold cover. The spring passes through the center chamber of the filter and is connected to another eyebolt. This eyebolt is secured to a large washer and plate by means of a self-locking nut. The washer seats on the rubber gasket which is bonded to the filter. The fluid enters the center chamber of the filter and passes through the inner tube of the filter to the filter element by means of perforation holes. Foreign matter is filtered out by the filter element, and the fluid leaves the element through perforation holes in the outer tube. When the element becomes saturated with foreign matter, the filter acts as its own relief valve and unseats at 20 to 25 psi above normal return pressure which allows fluid to bypass the filter and enter the reservoir.

E. Hydraulic Reservoir Air Pressure Regulator-Aspirator (See Figure 7)

- (1) The reservoir air pressure regulator-aspirator is a jet-type air pump, regulated by a pressure-sensitive shutoff valve. The unit pressurizes the hydraulic reservoir with air to the operating pressure of 35 to 40 psi on airplanes 801-815 and 30 to 35 psi on airplanes 815-822, 860 and subsequent. The regulator-aspirator is located on the top inboard side of the reservoir and is mounted on the reservoir retainer ring. Access to the regulator-aspirator is through the left wing root access door.
- (2) The regulator-aspirator assembly consists of a main aspirator body and a regulator housing. The main aspirator body has two inlet ports and one outlet port. The ports are permanently stamped inlet, outlet, and air inlet. The plug for an air check valve is located near the outlet port. On airplanes 816-822, 860 and subsequent, a chemically treated paper filter is installed near the aspirator body air inlet port in the air line from the pressurized cabin area. A metal screen filter is installed on the check valve which tees into the aspirator body air inlet port.
- (3) The reservoir air pressure regulator-aspirator operates basically with a jet pump action which is regulator controlled. Fluid enters the assembly through the fluid inlet port where it is filtered and then ported through the valve assembly of the regulator. When air pressure at the outlet port is under 35 psi on airplanes 801-815 or 30 psi on airplanes 816-822, 860 and subsequent, the valve is open, porting fluid to the nozzle. The orifice in the nozzle sprays the fluid through the venturi of the outlet port, creating a vacuum in the chamber around the venturi. When the vacuum becomes great enough to create a pressure differential of approximately 1 psi, ambient air opens the air check valve. The air is ported to the chamber around the venturi and is siphoned, with the fluid, through the outlet port.
- (4) On airplanes 816-822, 860 and subsequent, hydraulic fluid inlet pressure at the engine-driven hydraulic pumps is improved at high altitude operation by supplying pressurized filtered cabin air to the reservoir


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

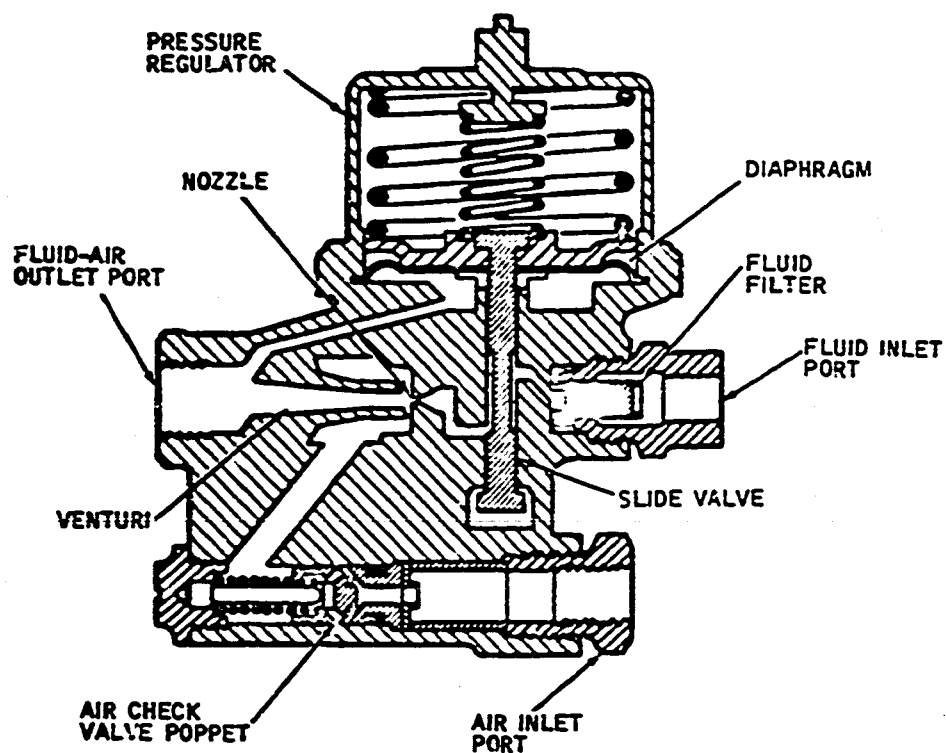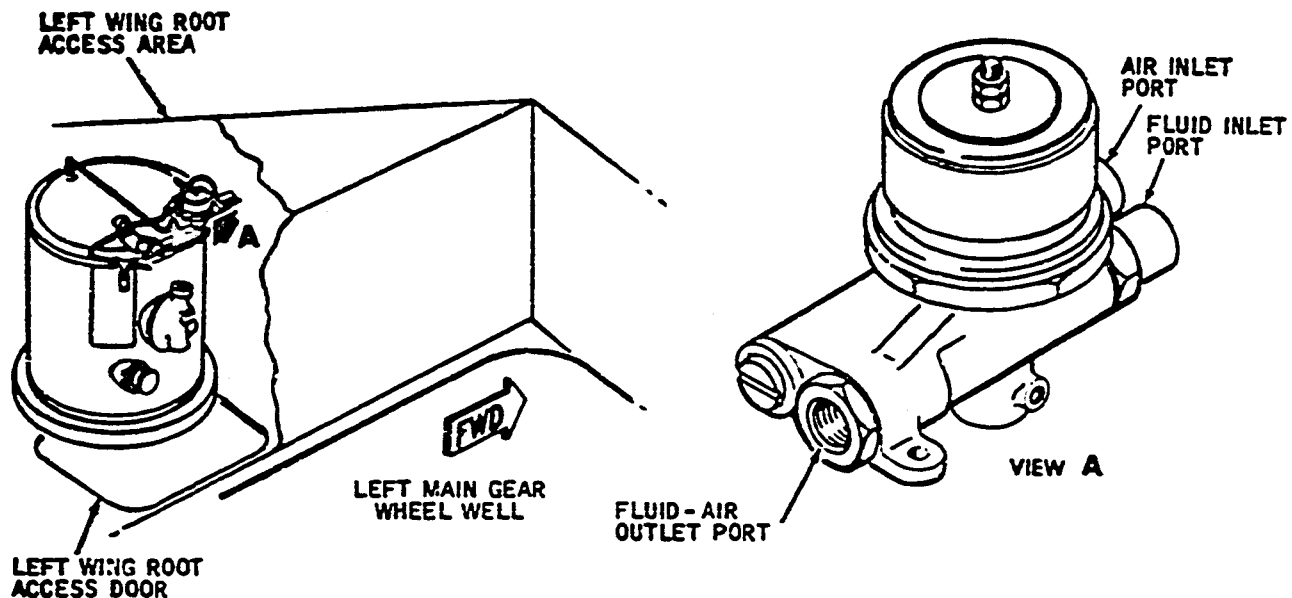

HA2-4651

Reservoir Air Pressure Regulator-Aspirator -- Schematic  
 (Airplanes 801-810)  
 Figure 7 (Sheet 1)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

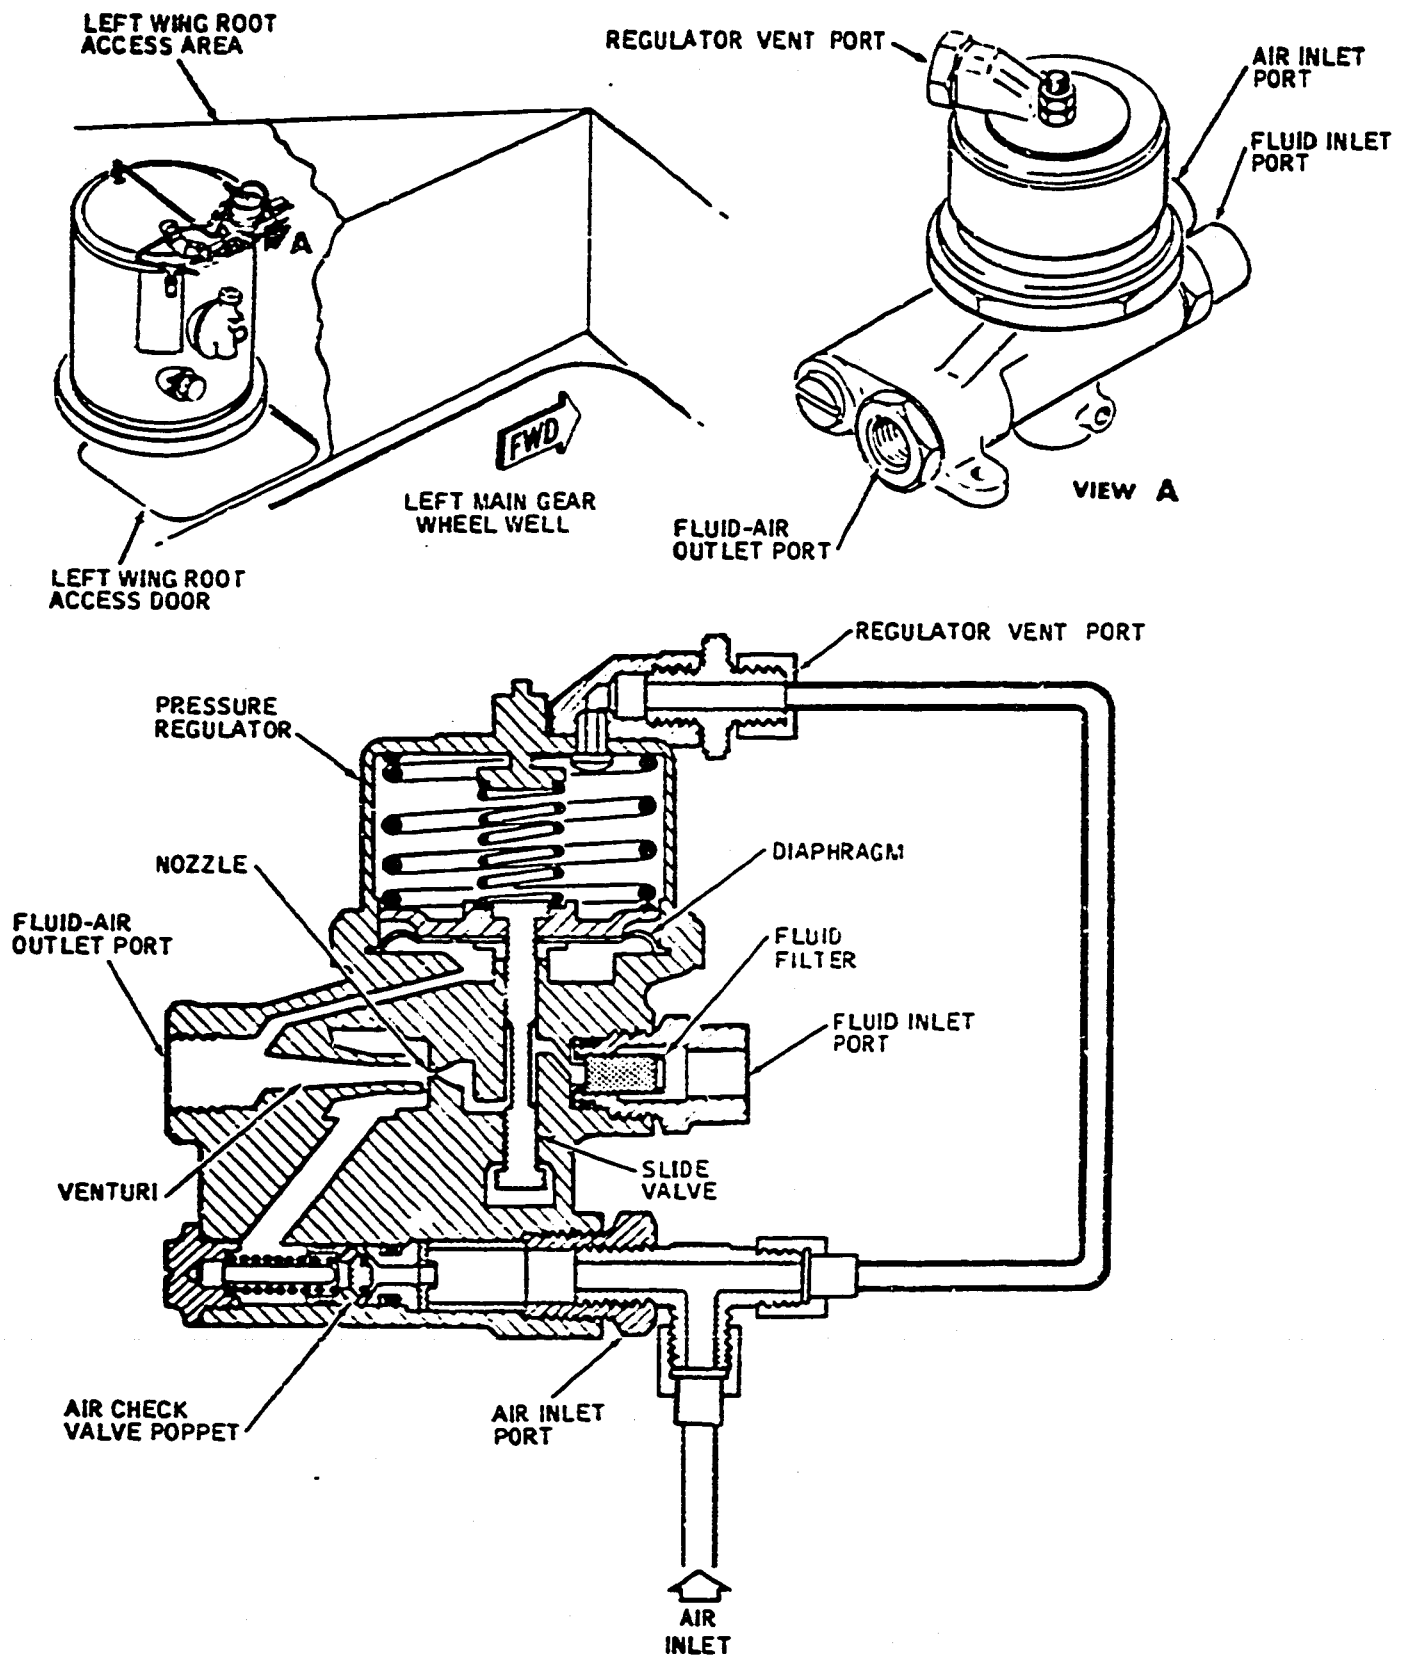

Reservoir Air Pressure Regulator-Aspirator -- Schematic  
 (Airplanes 811-815)  
 Figure 7 (Sheet 2)


HA2-4652

29-10-0  
 CODE 6  
 Page 27

Jan 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

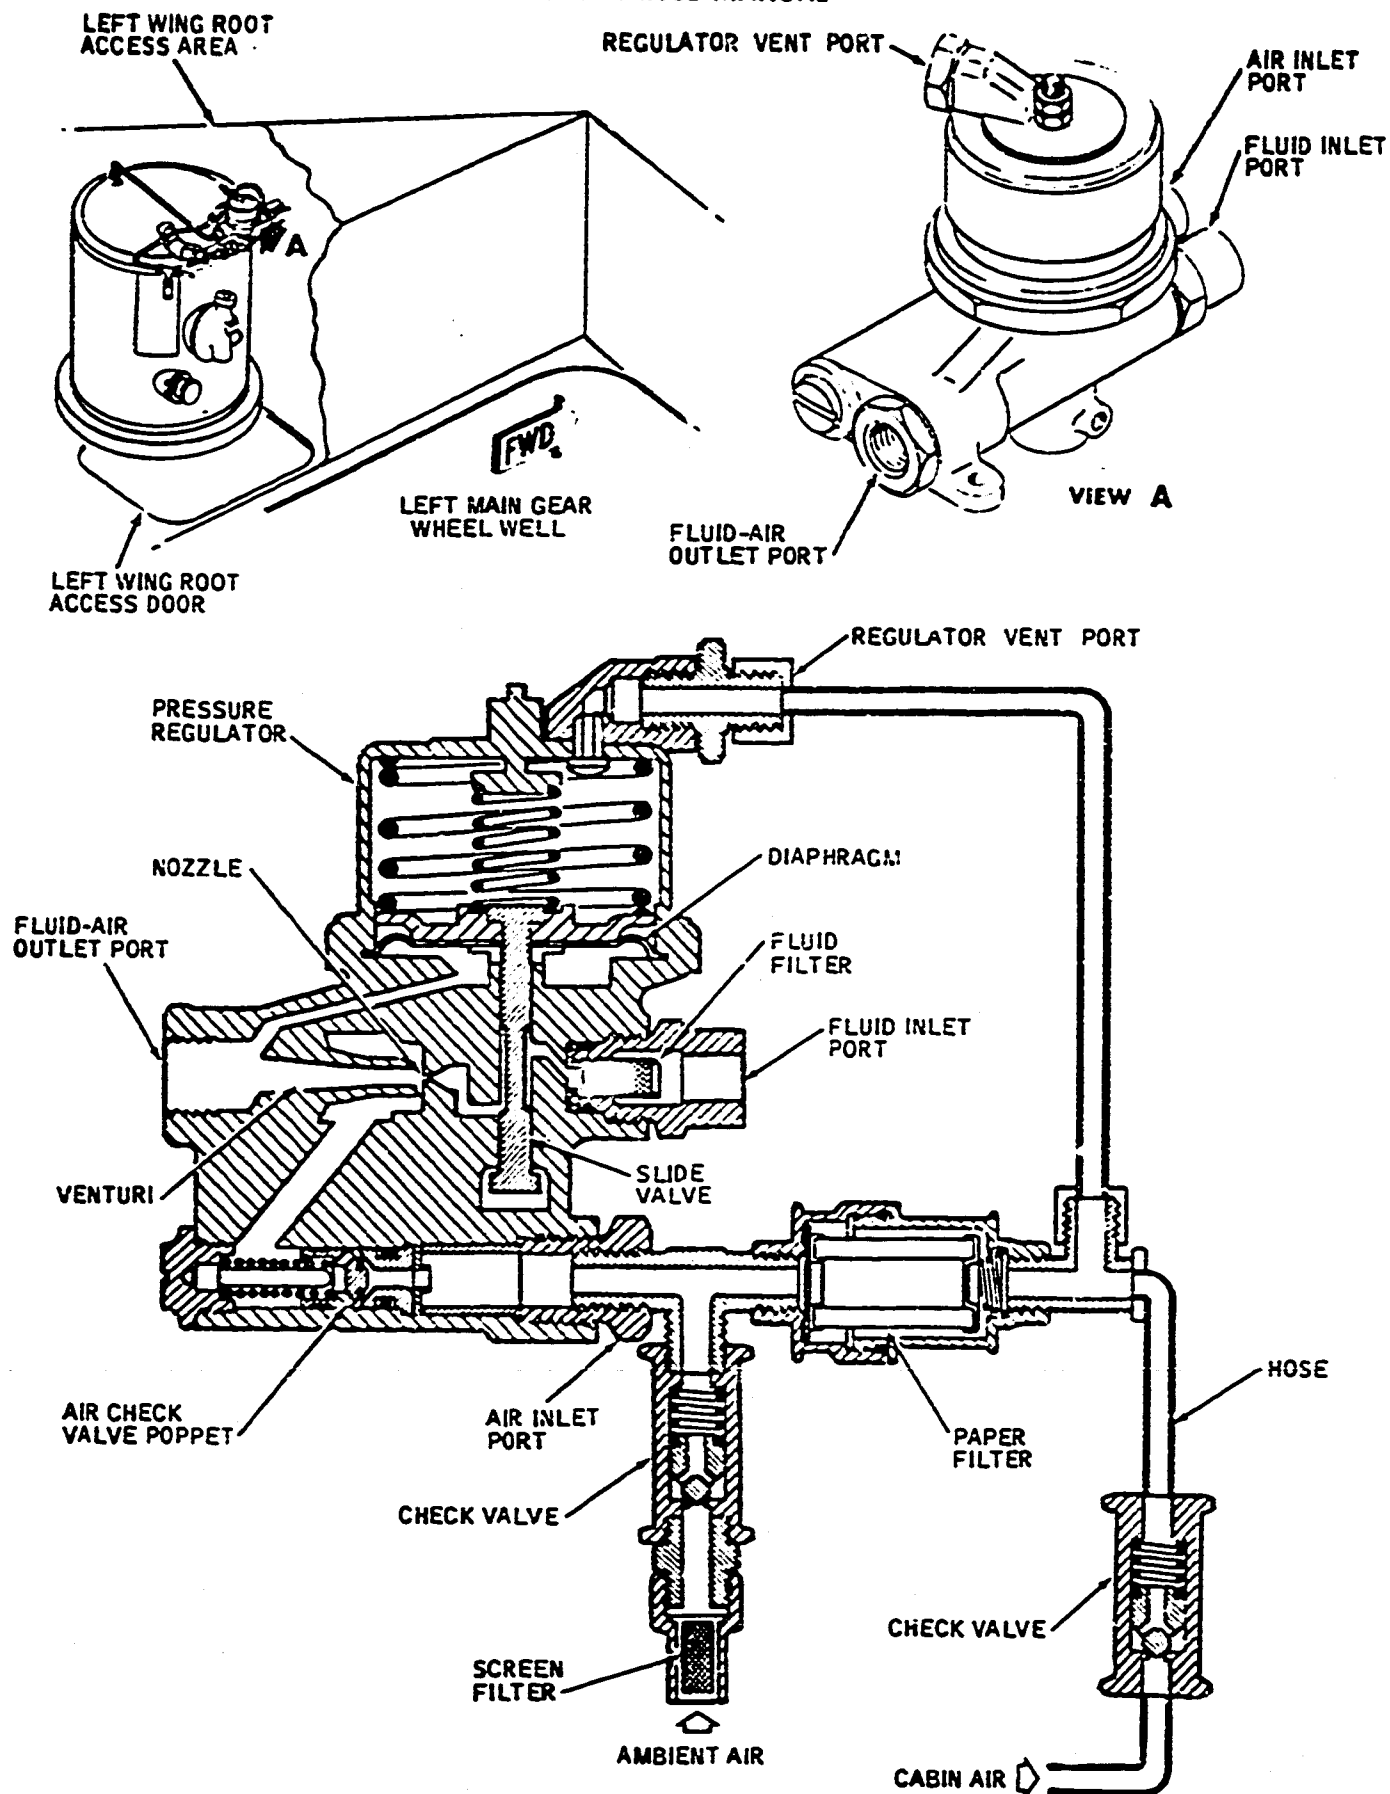

HA2-25

Reservoir Air Pressure Regulator-Aspirator -- Schematic  
 (Airplanes 816-822, 860 and Subsequent)  
 Figure 7 (Sheet 3)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

regulator-aspirator instead of ambient outside air. On airplanes 801-810, the aspirator and the regulator diaphragm are vented to ambient air. On airplanes 811-822, 860 and subsequent, part of the inlet air is diverted by a tee fitting to the regulator chamber to provide a more positive regulating force on the diaphragm than would be obtained with low ambient pressures. Airplanes 816-822, 860 and subsequent are equipped with two inlet air filters; a chemically treated paper filter, installed in the regulator-aspirator air supply line from the cabin, removes smoke tars and impurities from the pressurized cabin air; a steel mesh screen filter, installed on the check valve which tees into the regulator-aspirator air inlet port downstream of the paper filter, removes dust, dirt, and foreign particles from the ambient air and serves as a standby to supply filtered air in event the paper filter is clogged.

- (5) As pressure in the reservoir builds up, back pressure is bled from the outlet port to the diaphragm chamber. The reaction on the diaphragm begins to move the slide valve to cut off the fluid flow. At 35 to 40 psi (airplanes 801-815) or 30 to 35 psi (airplanes 816-822, 860 and subsequent) the diaphragm completely closes the slide valve, cutting off the flow of fluid. If there is a regulator malfunction, the aspirator stalls when outlet pressure reaches a maximum of 40 psi.
- (6) The aspirator is capable of pressurizing the reservoir to 35 to 40 psi on airplanes 801-815 or to 30 to 35 psi on airplanes 816-822, 860 and subsequent in approximately 4 minutes at altitudes from sea level to 15,000 feet, when fluid is ported through the nozzle at 0.5 gpm at 3000 psi.


F. Regulator-Aspirator Air Filters (See Figure 8.)

- (1) The regulator-aspirator air filters, installed in airplanes 816-822, 860 and subsequent remove ambient and cabin air impurities from the air which is used to pressurize the main hydraulic system reservoir. The filtering system is composed of two filters. One of which is a paper element filter, installed directly in the cabin air supply line near the regulator-aspirator. The other filter is a fine mesh, screen-type filter, installed on a check valve and positioned at right angles to the regulator-aspirator air inlet port. The screen filter, in addition to providing an immediate supply of ambient air during ground operations, serves as a standby air inlet to preclude air starvation of the regulator-aspirator in the event the paper element filter becomes clogged.


G. Hydraulic Reservoir Relief Valve (See Figure 9.)

- (1) The reservoir relief valve and the air pressure aspirator-regulator keep the reservoir pressurized to normal operating range. The valve relieves excess air pressure which may build up in the reservoir through thermal expansion in the system. The valve has an inlet port and an outlet port and consists, internally, of an inlet port seat and a spring-loaded poppet.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

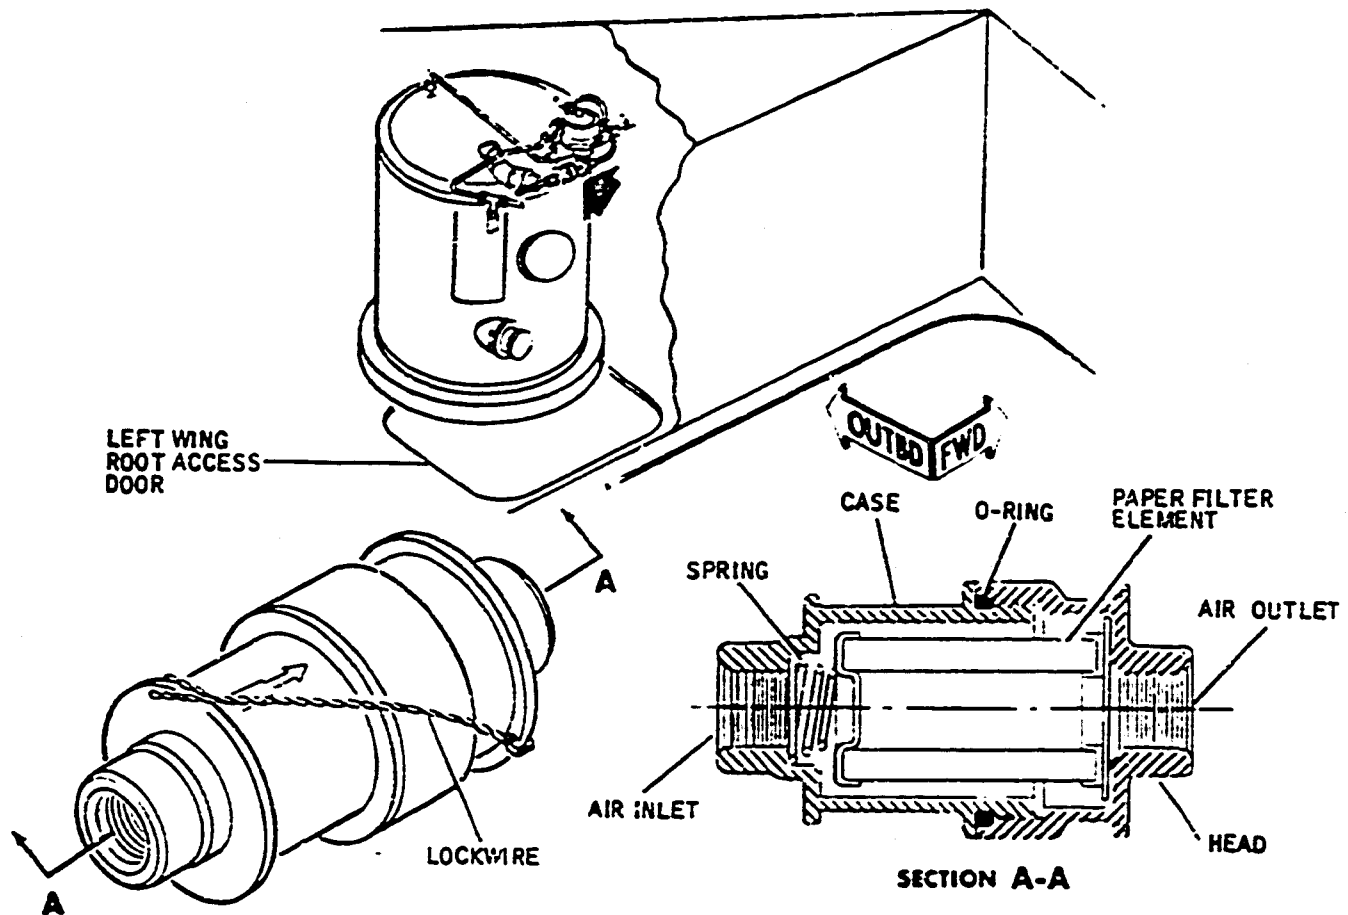

PAPER ELEMENT FILTER

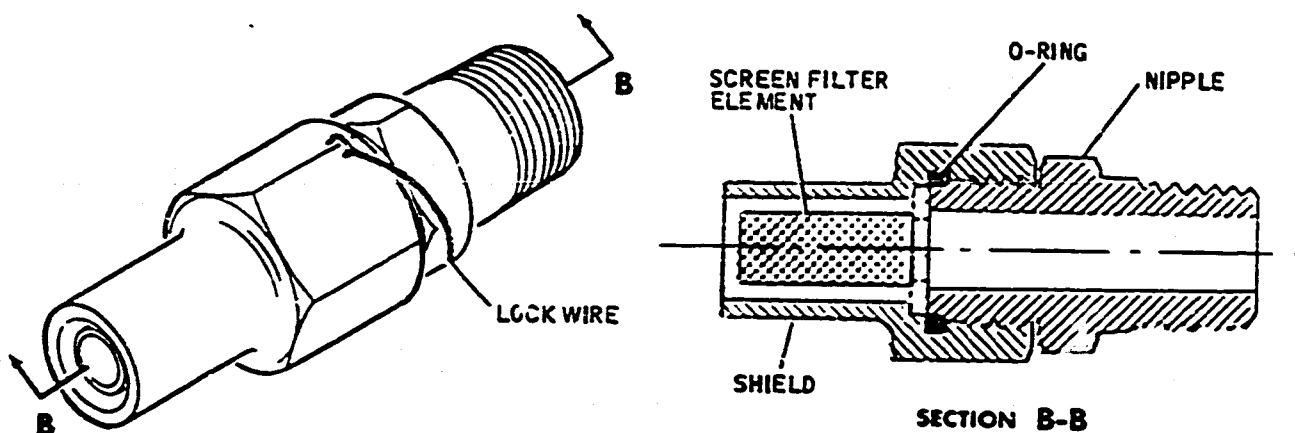

SCREEN FILTER

HA2-35

Regulator-Aspirator Air Filters --  
 Cutaway View  
 Figure 8


29-10-0  
 CODE 6  
 Page 30

Printed in U.S.A.


Jan 15/68




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

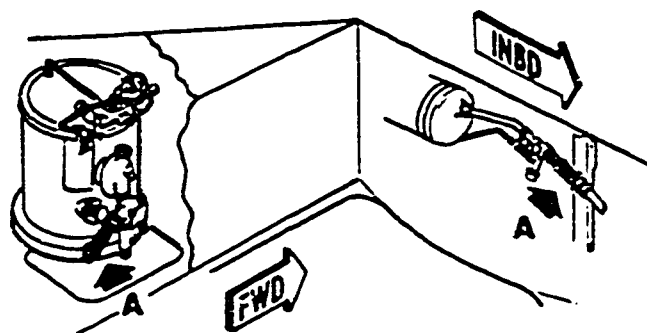


LEFT MAIN GEAR  
 WHEEL WELL

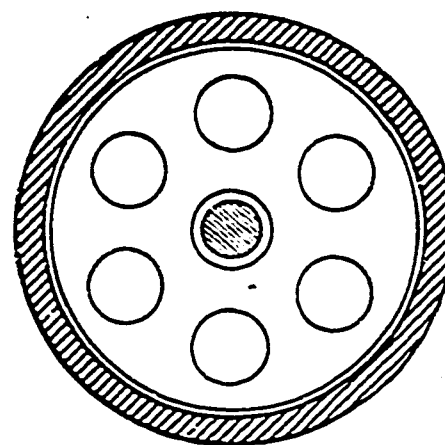

SECTION B-B

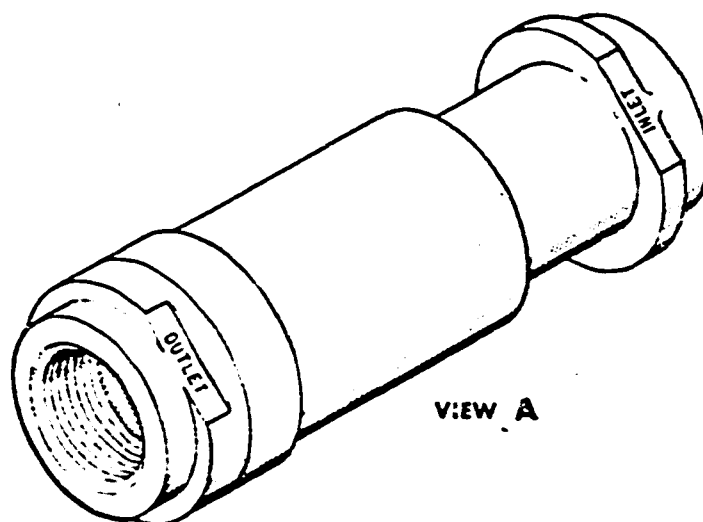

VIEW A

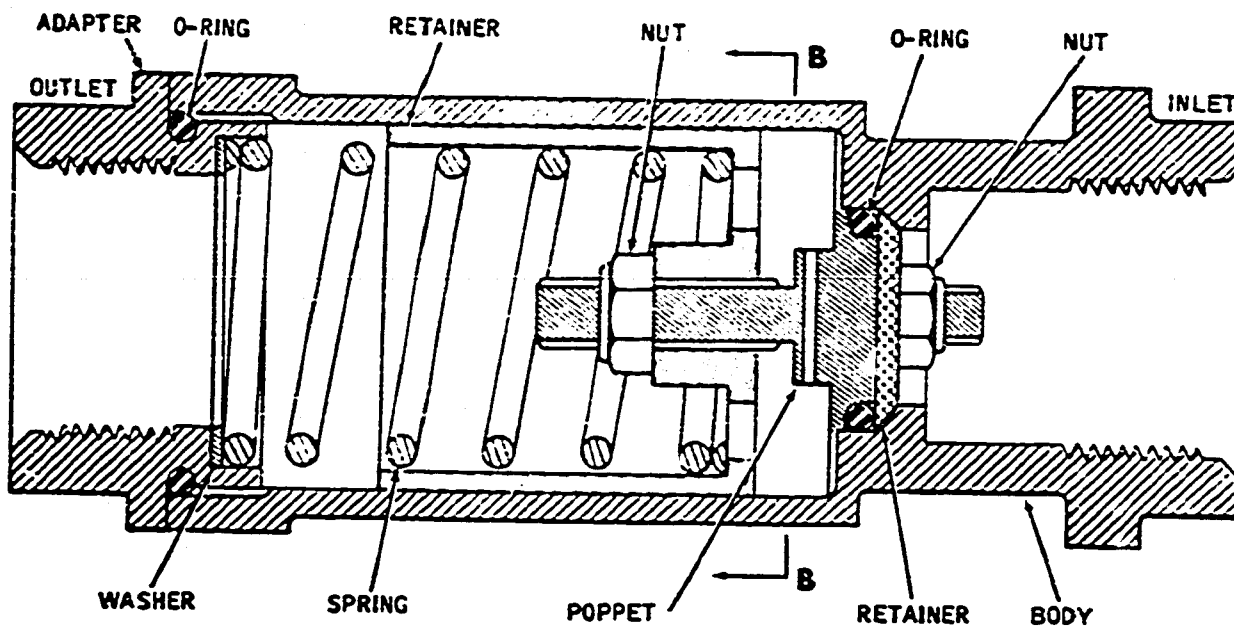

HA2-4654

Hydraulic Reservoir Relief Valves  
 Figure 9

29-10-0  
 CODE 6  
 Page 31

Jan 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The relief valve is installed in the overboard vent line downstream of the hydraulic reservoir air bleed valve. In the event that excess pressure builds up in the reservoir, the poppet will start to relieve at 45 (+5, -0) psi. Full flow of 10 gpm is attained at 80 psi maximum. The poppet reseats at 90 percent of the opening pressure.
- (3) Airplanes 801-811 are equipped with a second reservoir relief valve to relieve excess nitrogen pressures resulting from the operation of the engine ejectors. The second relief valve is connected to the A return port of the reservoir return ports manifold. The valve is set to start to relieve at 60 (+5, -0) psi. Full flow of 7 gpm is attained at 80 psi (maximum) and the poppet will reseal at 90 percent of opening pressure.

H. Hydraulic Reservoir Air Bleed Valve (See Figure 10.)

- (1) The hydraulic reservoir air bleed valve and pressure gage are located on the aft side of the rear spar in the left main gear wheel well, inboard of the hydraulic reservoir air chamber. The bleed valve and gage are installed in the overboard vent line, between the reservoir air chamber and the reservoir relief valve.
- (2) The bleed valve is used to relieve the reservoir air pressure prior to disconnecting lines or components in the hydraulic system. The pressure gage provides a ready indication of the hydraulic reservoir air pressure and is used in conjunction with the bleed valve to indicate the air pressure status.
- (3) The air inflation valve is installed on the same fitting as the bleed valve and pressure gage. The air inflation valve is used to manually charge the reservoir with air or dry nitrogen.


I. Hydraulic Reservoir Vacuum Breaker Check Valve (See Figure 11.)

- (1) The hydraulic reservoir vacuum breaker check valve is installed on the regulator-aspirator mounting bracket, and connects to the tee fitting at the top of the reservoir. The valve is vented to ambient air. The purpose of this valve is to maintain atmospheric pressure in the reservoir, allowing hydraulic fluid to flow to the auxiliary hydraulic pump in the event of a failure of the reservoir pressurization system. The failure, or breakdown, of the pressurization system could cause a fluid starvation at the auxiliary hydraulic pump because of vacuum buildup in the reservoir.

J. Hydraulic Reservoir Air Chamber

- (1) The hydraulic reservoir air chamber is a small, cylindrical tank with a capacity of 700 cubic inches. It has two ports, an inlet port at the bottom of the chamber and an outlet port in one end of the chamber. The inlet port mounting boss is fitted with a drain plug. The air chamber is installed on the aft side of the rear spar in the left main gear wheel well, inboard and above the hydraulic reservoir filler assembly. Access to the air chamber is through the left main gear inboard door.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

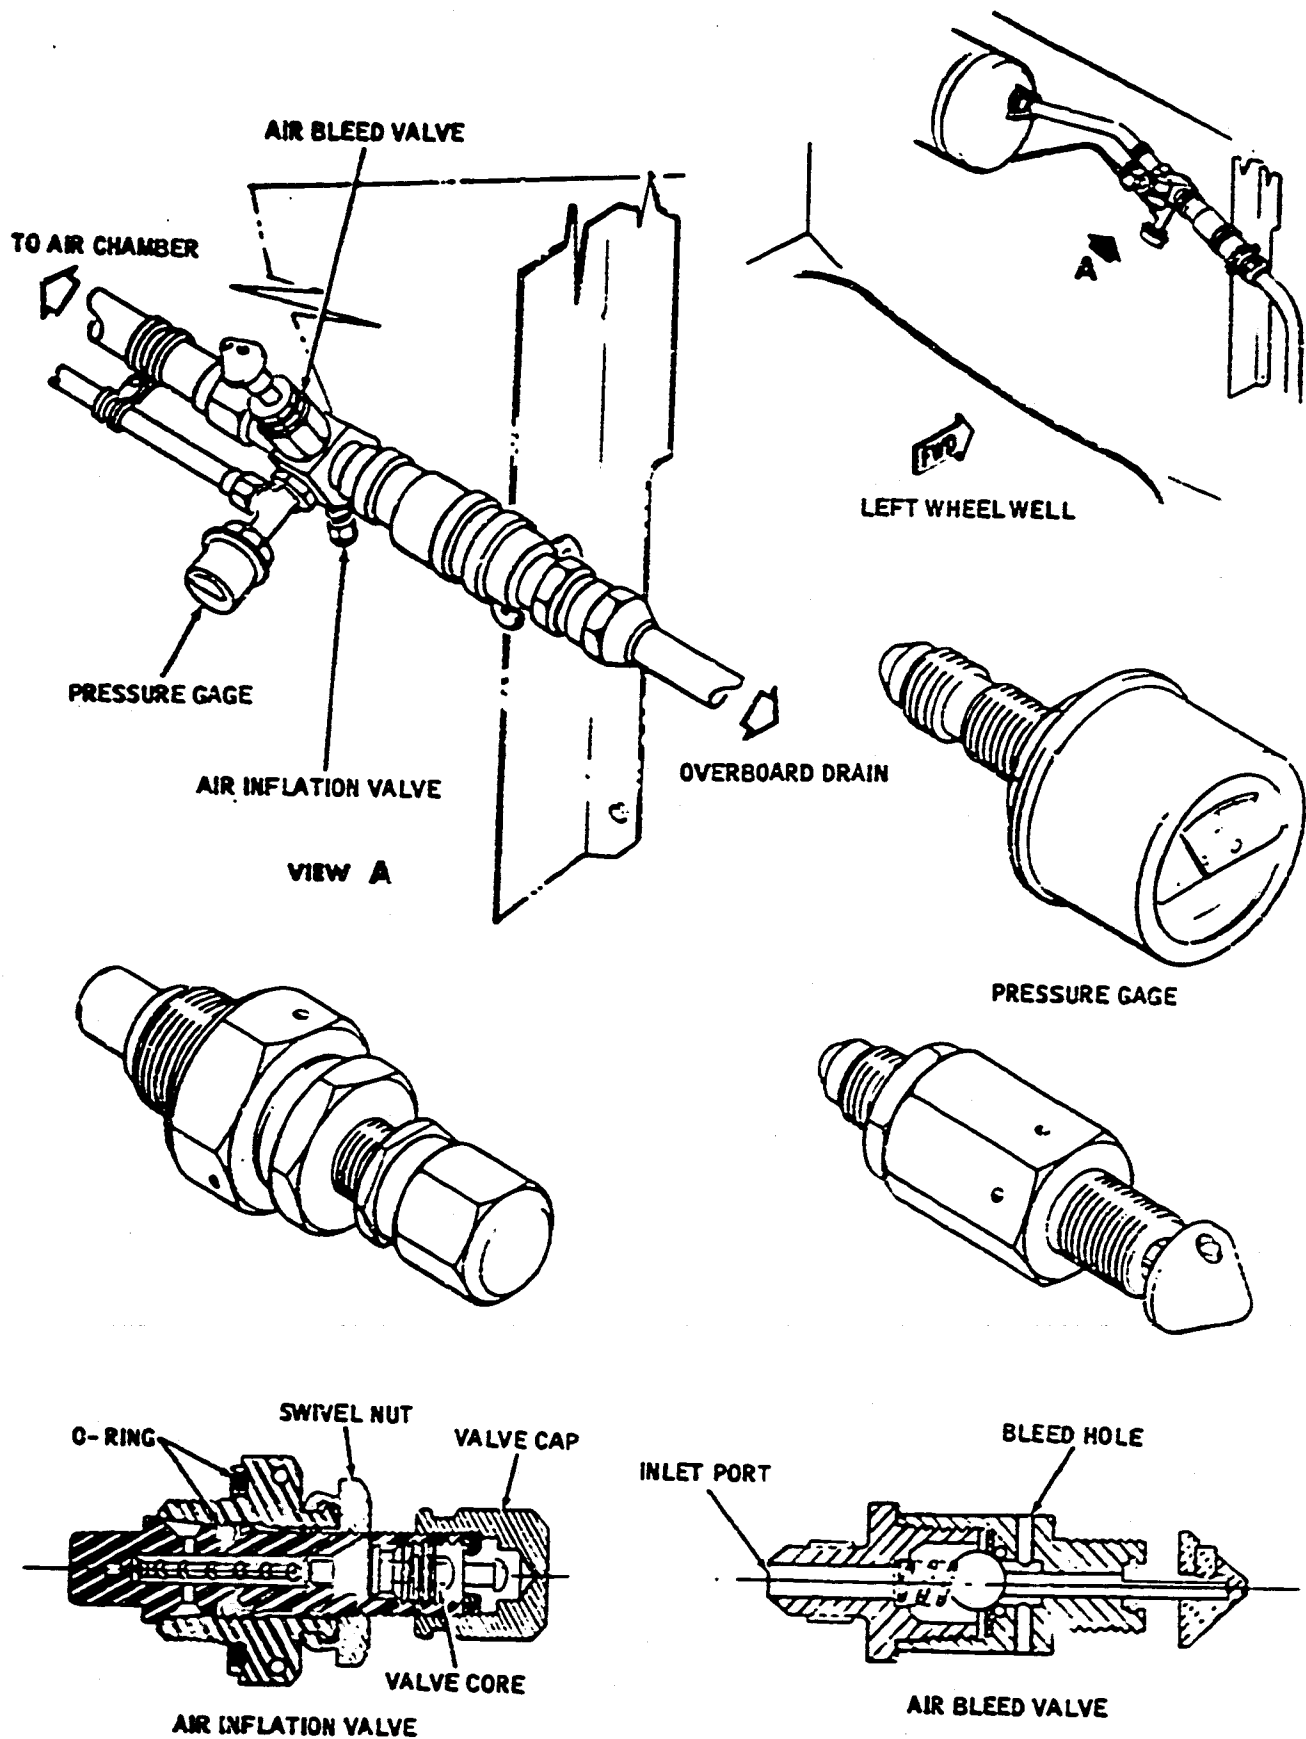

Reservoir Air Bleed Valve, Air Inflation  
 Valve, and Pressure Gage  
 Figure 10

HA2-32

29-10-0




CODE 6

Page 33

Jan 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

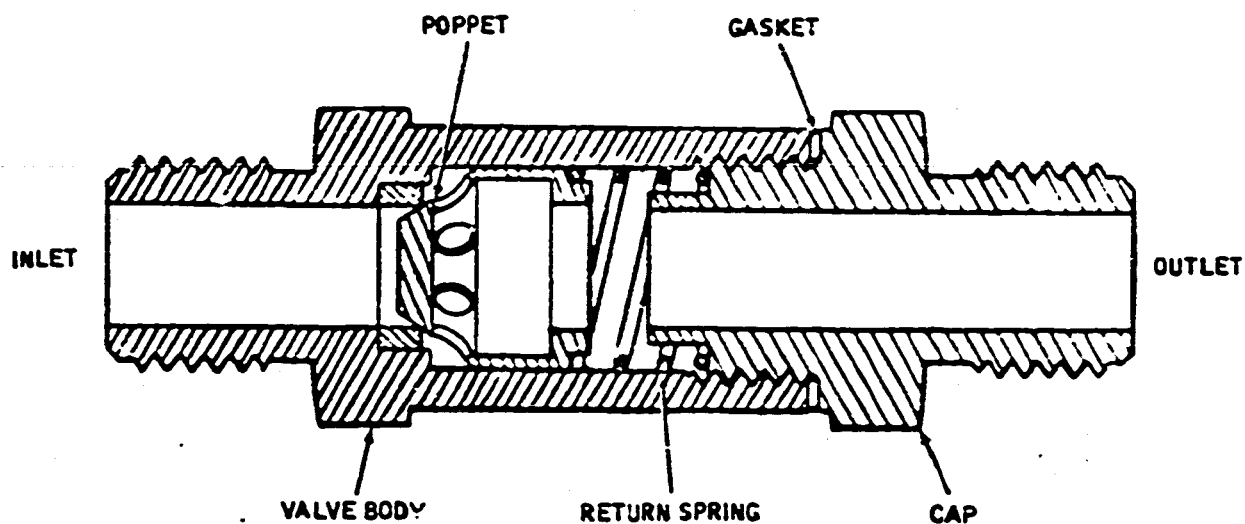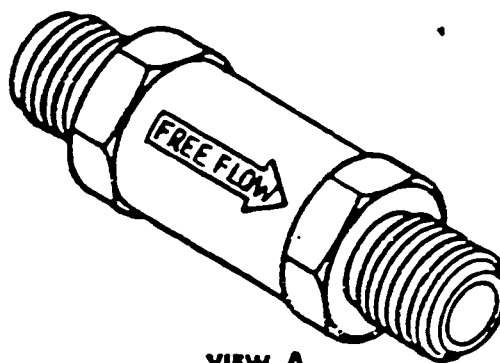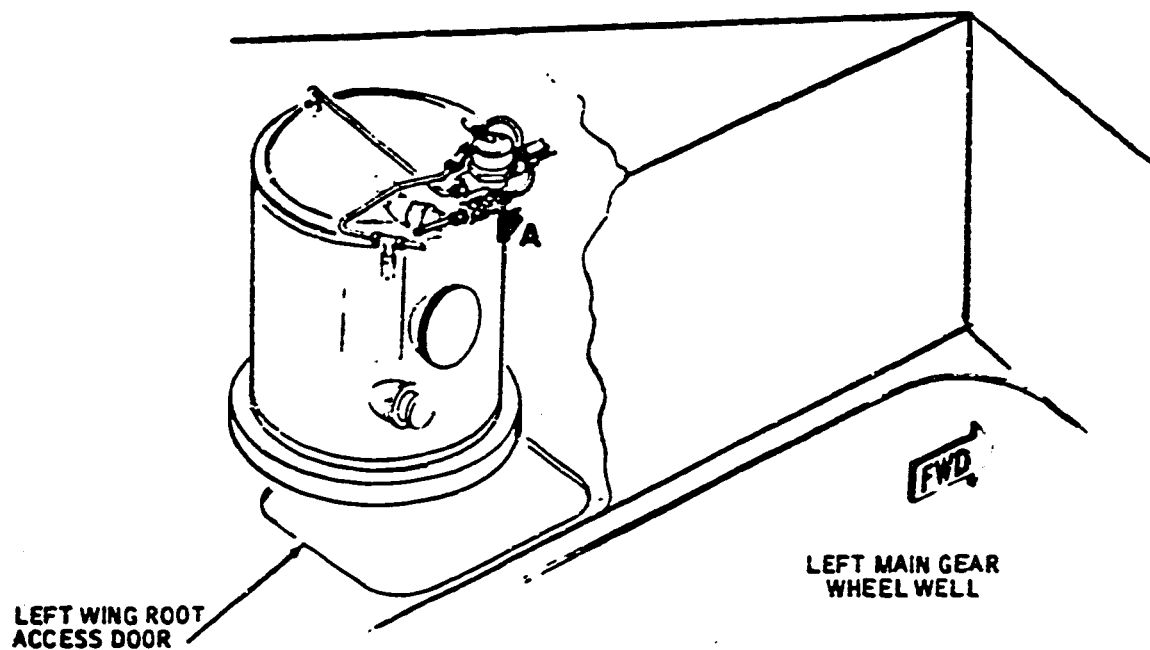

HA2-33

29-10-0  
 CODE 6  
 Page 34

Hydraulic Reservoir Vacuum Breaker Check Valve  
 Figure 11

Printed in U.S.A.

Jan 15/68

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The air chamber provides for greater fluid capacity in the hydraulic reservoir by providing air and foam space for the reservoir in a separate container. Air pressure in the chamber is maintained by the regulator-aspirator and the air relief valve. The air pressure in the chamber and reservoir can be relieved, when desired, by the air bleed valve located downstream of the chamber. The air chamber is mounted higher than the reservoir filler assembly, to prevent overfilling of the reservoir from reducing the available air space and to prevent fluid from being vented overboard through the reservoir relief valve.


K. Hydraulic Reservoir Port B Return Check Valve (See Figure 12.)

- (1) The reservoir port B return check valve is installed in port B of the reservoir to prevent reverse flow of hydraulic fluid from the reservoir to the return line. The check valve is located on the reservoir in the left wing root and is accessible through the left wing root access door.
- (2) Externally and internally, the port B check valve is a standard-type check valve with a 1500 psi rating. A nominal pressure of approximately 8 psi unseats the poppet, permitting fluid to flow through the valve. When the reservoir pressure exceeds the return line pressure, the poppet will seat and reverse fluid flow will be prevented.


L. Engine Hydraulic Fire Shutoff Valve (See Figures 13 and 14.)

- (1) The engine hydraulic fire shutoff valve is a gate-type, mechanically controlled valve, installed in the supply line of each engine-driven hydraulic pump. The engine hydraulic fire shutoff valve is actuated from the flight compartment to prevent the flow of hydraulic fluid into the engine section.
- (2) The engine hydraulic fire shutoff valve is mounted on a 2-piece channel bracket which is installed inside the wing leading edge, aft of the firewall of each inboard pylon. Access to the valve is through the access door located on the lower side of the wing leading edge, outboard of either the left or right inboard pylon. Each valve is located approximately 30 inches inboard of the access door.
- (3) Internally, the valve consists of a valve arm, valve arm link, cam plate, and slide blade. The valve arm link attaches to the valve arm and is allowed to swivel through an arc in relation to the valve arm. The link has a stop that will contact the arm when the two have traveled to the valve closed, full overtravel position. In the full open pretravel position, the link contacts the arm stop.
- (4) A roller attached to the end of the link rides in, and extends through, a J-shaped slot in the cam plate. The rotation of the valve arm causes the link roller to follow the cam slot, allowing the arm and link to move through independent arcs.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

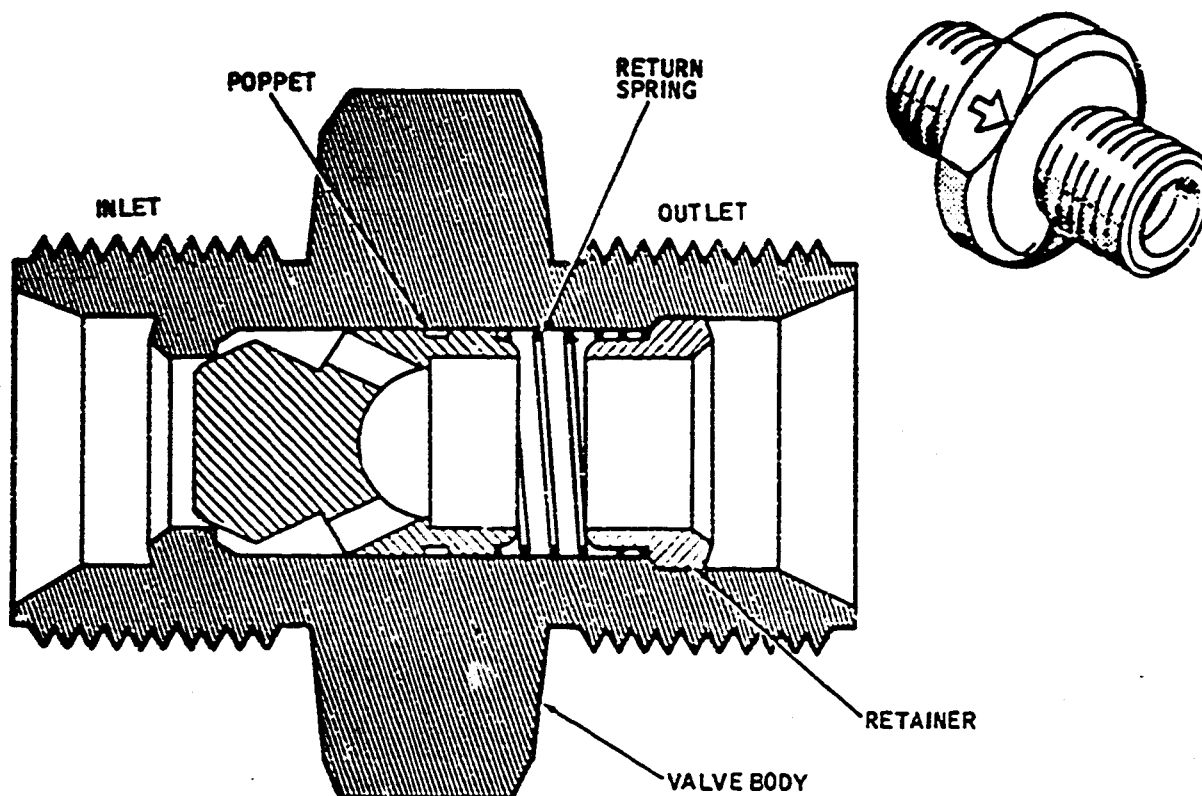


MINIATURE CHECK VALVE

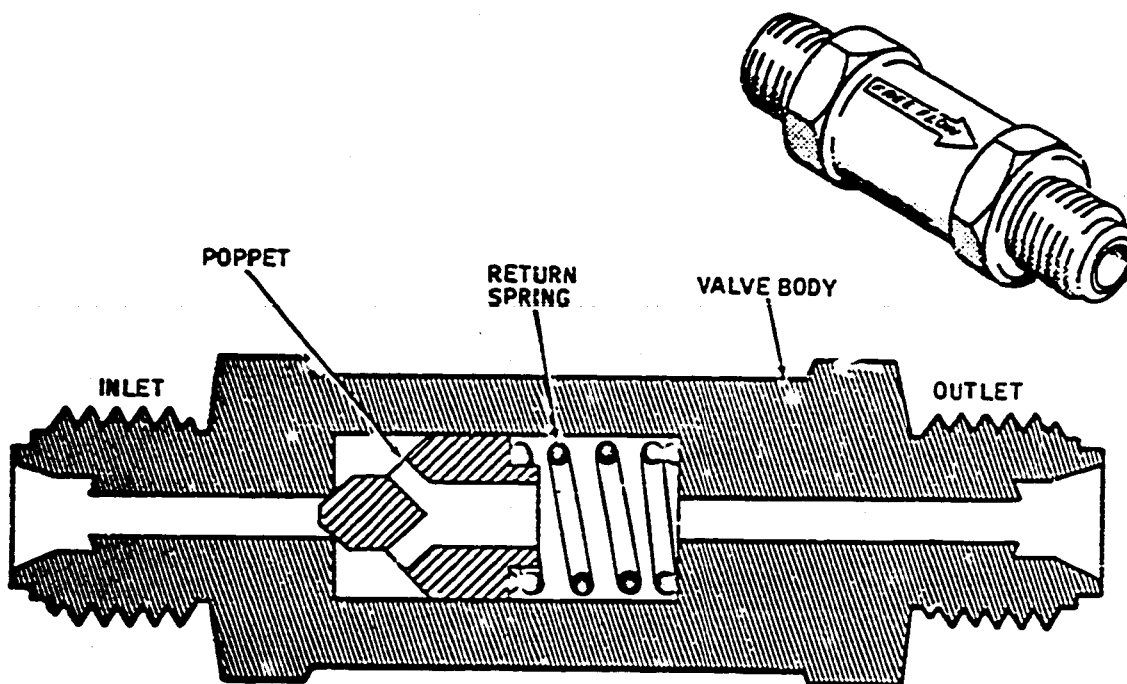

STANDARD CHECK VALVE

HA2-18A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

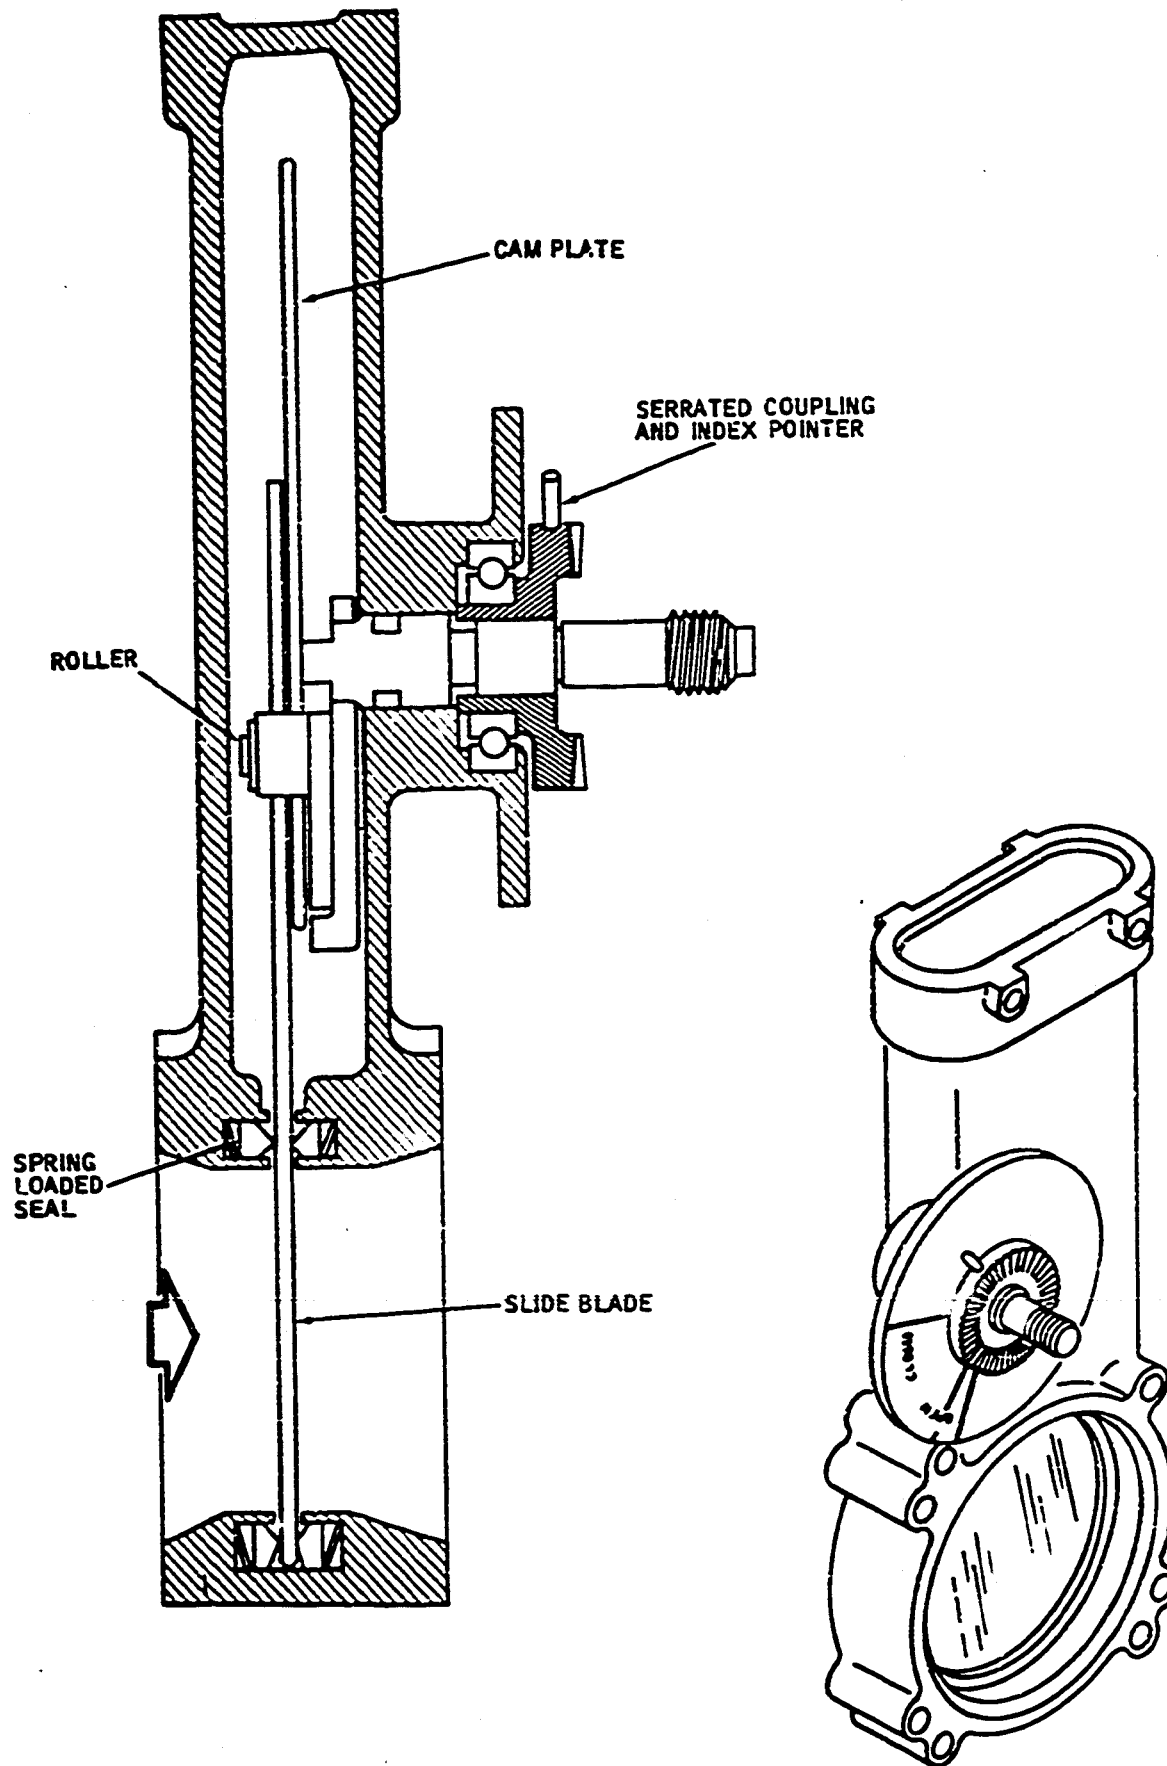

Engine Hydraulic Fire Shutoff Valve -- Schematic  
Figure 13


Jan 15/68

Printed in U.S.A.

HA2-2209

29-10-0  
CODE 6  
Page 37



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

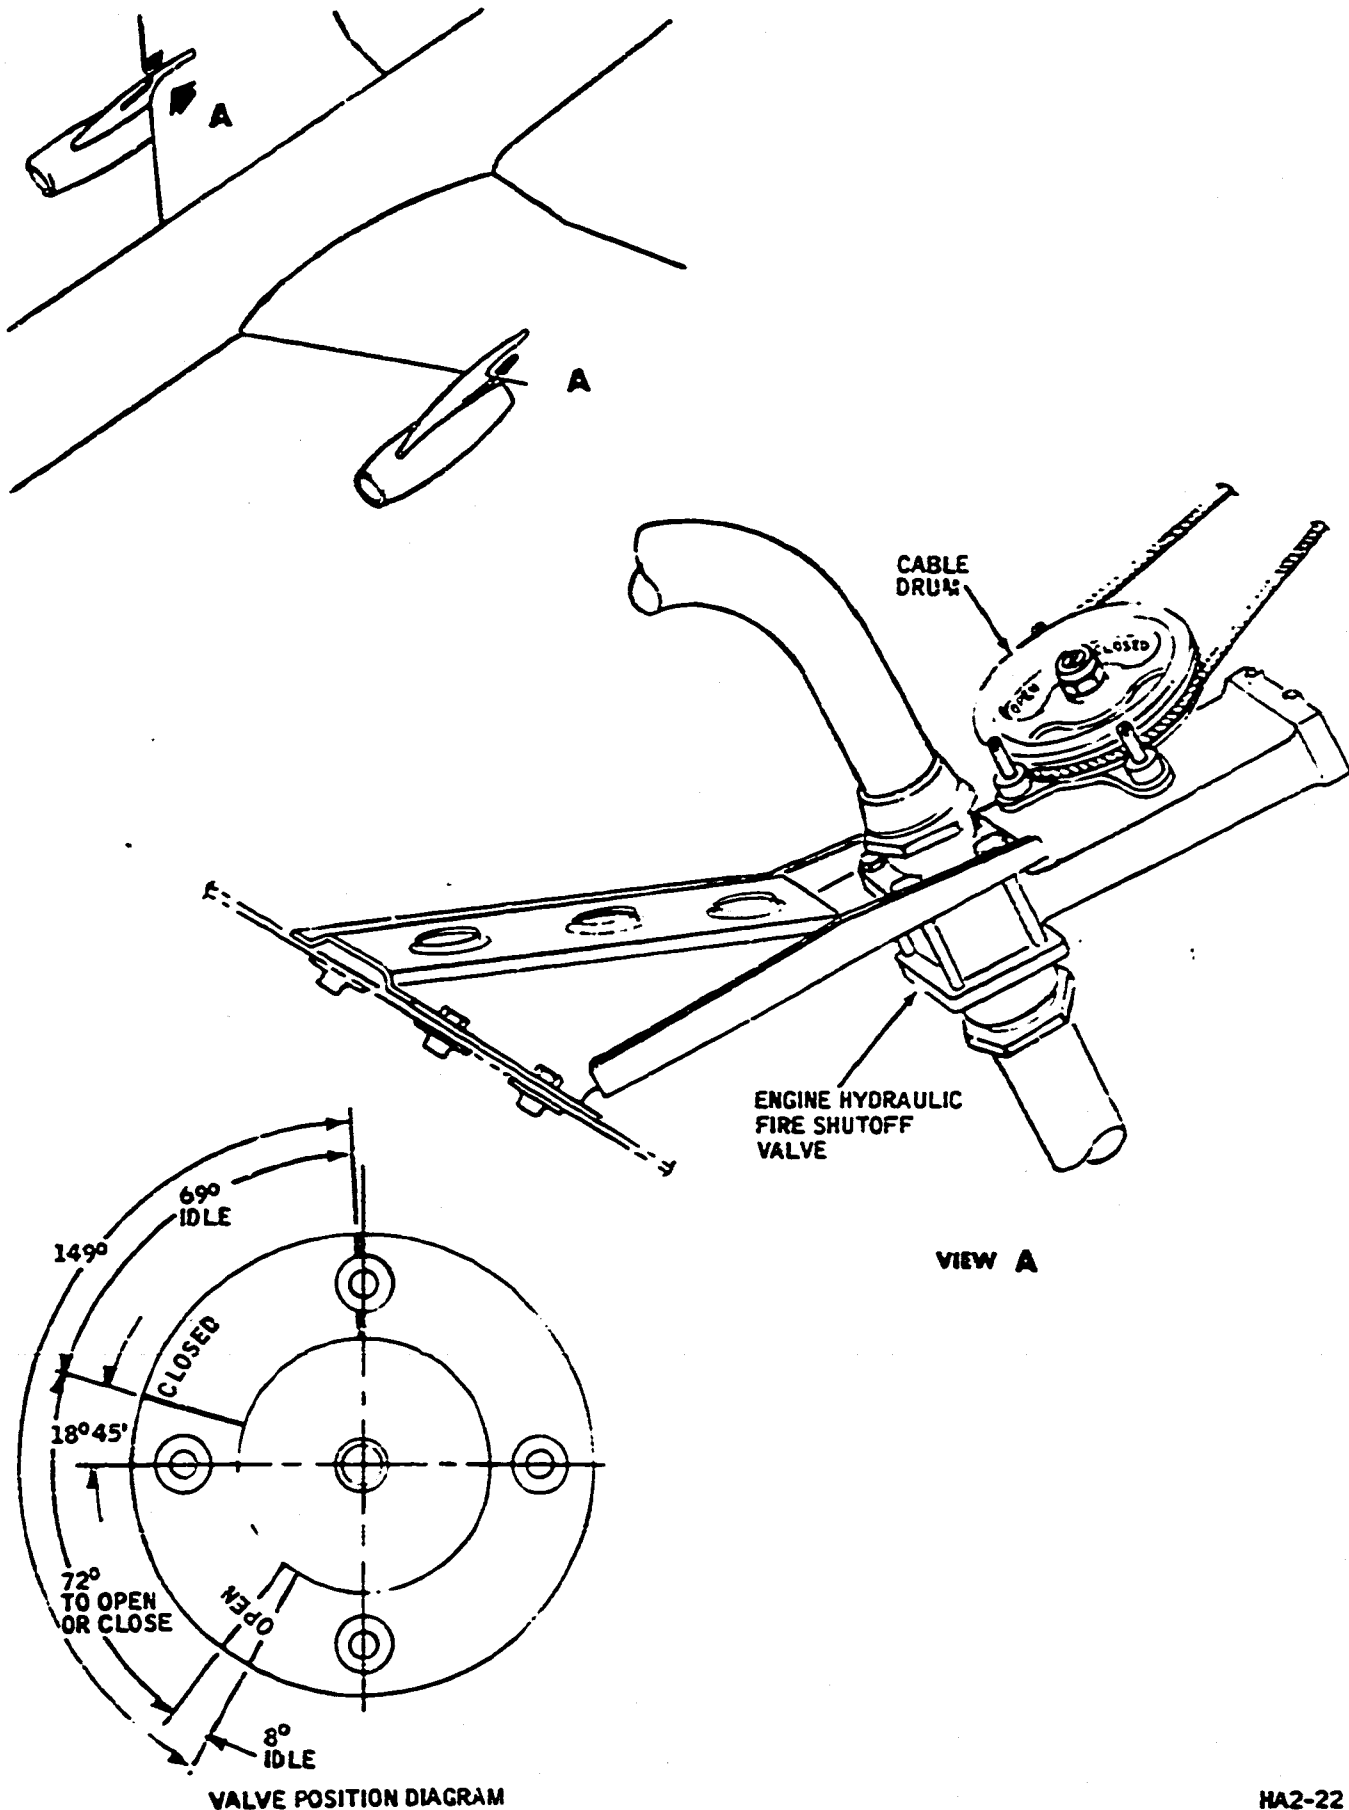

HA2-22



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

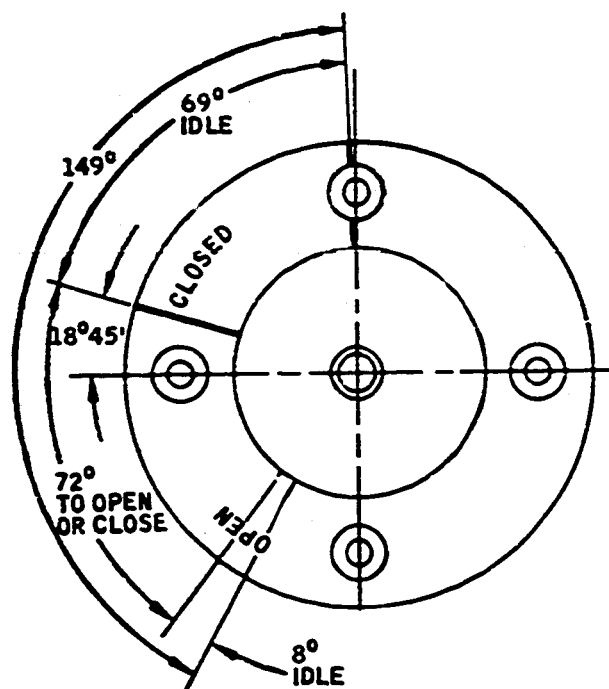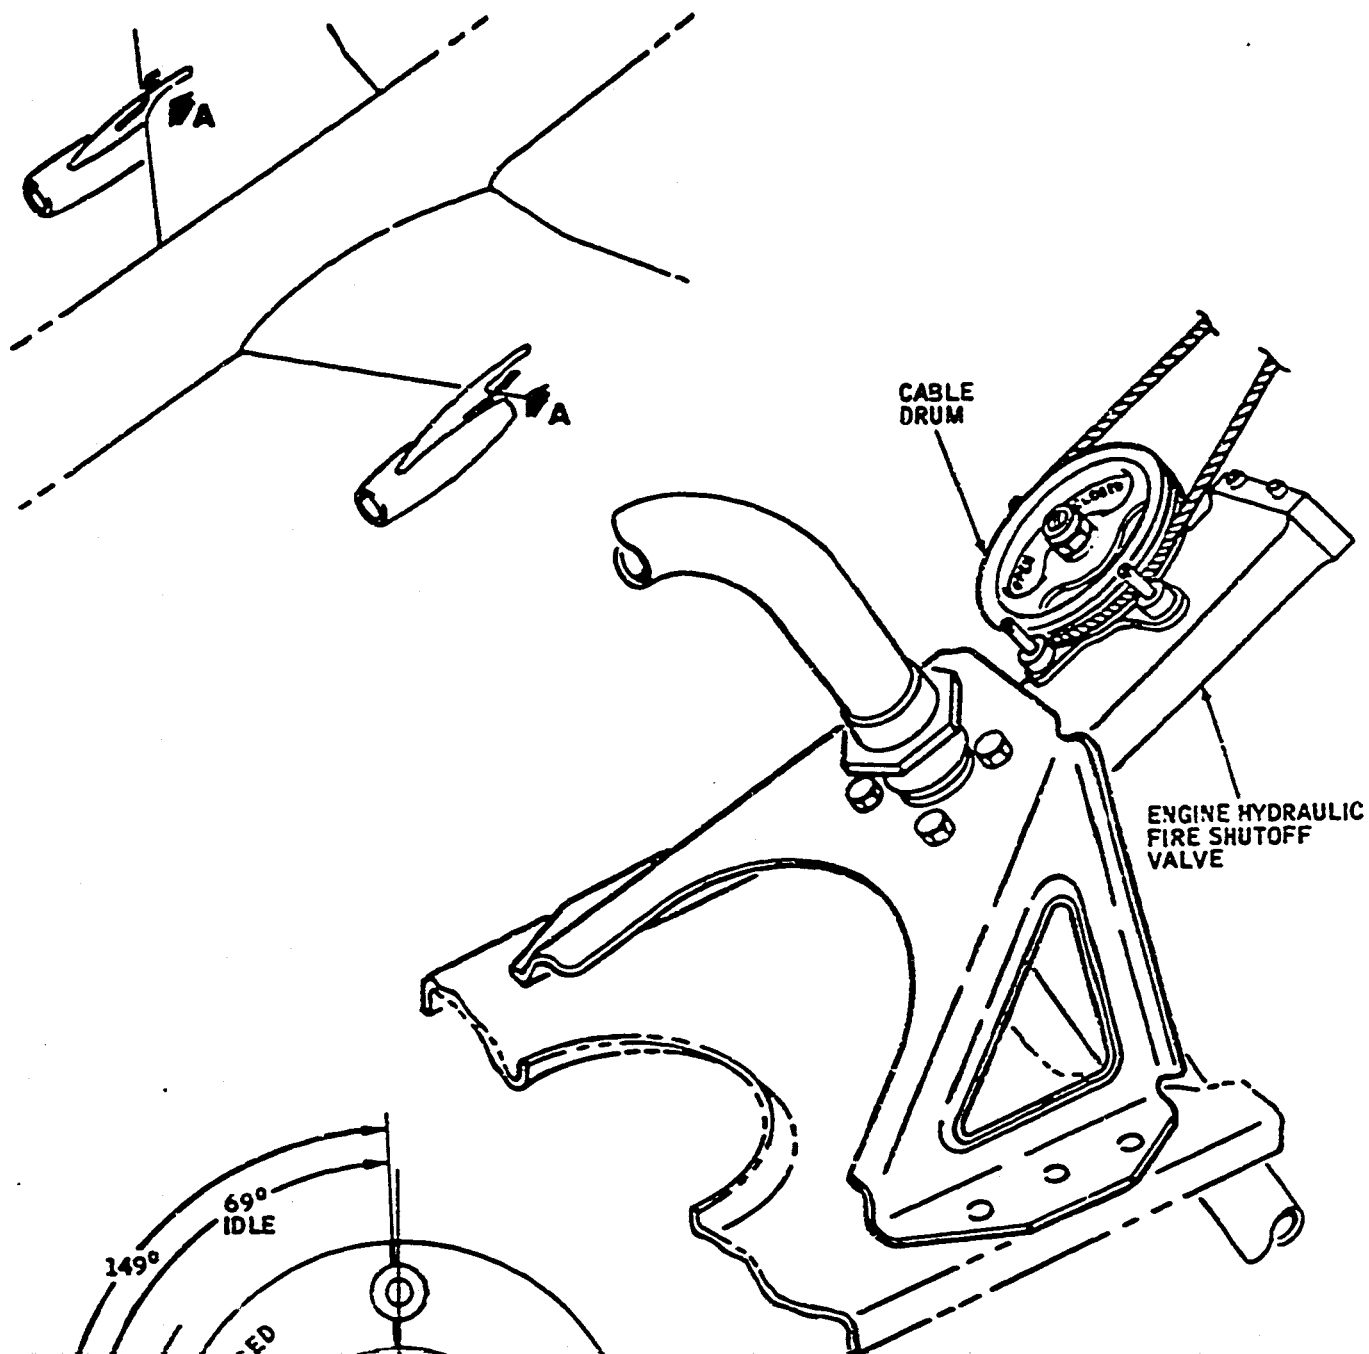

VALVE POSITION DIAGRAM

Engine Hydraulic Fire Shutoff Valve  
 (Airplanes 867 and Subsequent)  
 Figure 14 (Sheet 2)

HA2-2978

29-10-0  
 CODE 6

Page 38A

Aug 1/68

Printed in U.S.A.




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) The slide blade (gate of the valve) is slotted near the one end and also receives the link roller extending through the cam slot. The slide blade is positioned parallel to the cam plate and is guided by two grooves in the housing. This will allow the blade to open or close through porting of the valve by the action of the arm and link. The cam plate is pinned to the valve shaft, securing it rigidly in two positioning grooves in the housing. A pin-indicator is provided to relate valve position to a reference plate placarded open and closed.
- (6) The engine hydraulic fire shutoff valves are cable actuated by the fire control handles, located on the overhead switch panel in the flight compartment. When the fire control handles for either inboard engine is moved, the cable system rotates the drum which is attached to the corresponding shutoff valve shaft. This action extends the valve blade into the fluid passage to block the flow of fluid. The valve operates from open to close by clockwise rotation of the cable drum. The valve gage will idle during the first 8 degrees of rotation of the cable drum, and then will close in the next 72 degrees. The cable drum will continue to rotate the shaft for an additional 69 degrees after the gate valve is closed, locking it overcenter. Total travel of the cable drum is 149 degrees.

M. Engine-Driven Hydraulic Pump (See Figure 15.)

- (1) A variable-displacement, pressure-compensated, engine-driven hydraulic pump is installed on each inboard engine. The pump incorporates a solenoid bypass feature for reducing the output of the pump. The bypass valves are controlled by two engine hydraulic pump switches in the flight compartment. The switch for the hydraulic pump on engine No. 2 is placarded left, on and bypass. The switch for the hydraulic pump on engine No. 3 is placarded right, on and bypass. When either of the two engine hydraulic pump control switches is placed in the bypass position, the bypass valve solenoid for that hydraulic pump is energized and the pump pressure decreases to approximately 300 ( $\pm 100$ ) psi. When either switch is in the on position, the control circuit to the corresponding bypass valve is open and the hydraulic pump operates normally in the pressure range of 2850 to 3050 psi. The pump provides a continuous, nonpulsating flow of hydraulic fluid, under pressure, to the hydraulic manifolds for distribution throughout the hydraulic system. Each of the engine-driven pumps is located on the accessory drive pad of the inboard engines. These pumps are accessible through the doors on the right side of the nacelles.
- (2) Three case drain ports are provided: two are on the yoke assembly housing, and the third is on the casing for the pressure control valve, adjacent to the inlet port fitting. The case drain port on top of the yoke assembly housing is full of fluid at all times. This drain connection is ported back to the low-pressure return port at the reservoir. The inlet port fitting is on top of the pump housing and the outlet port fitting is opposite to it on the bottom of the housing.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

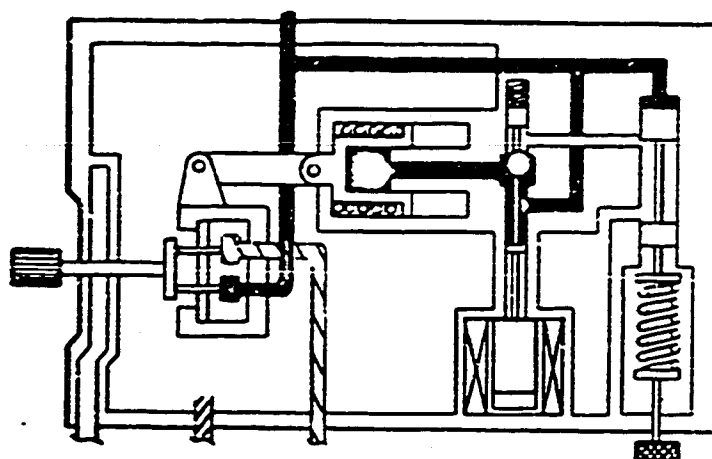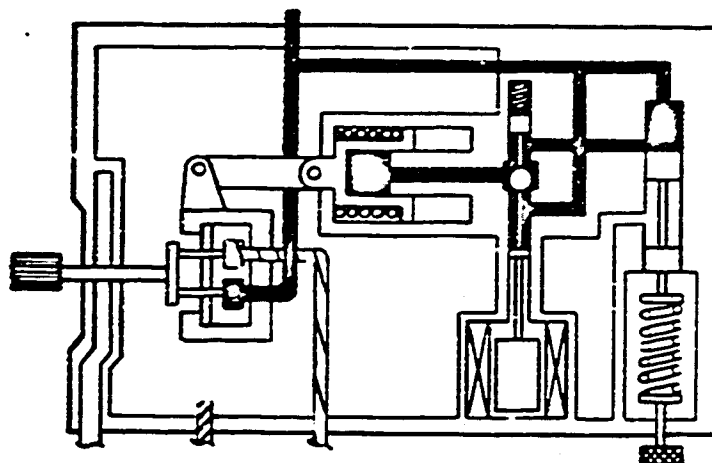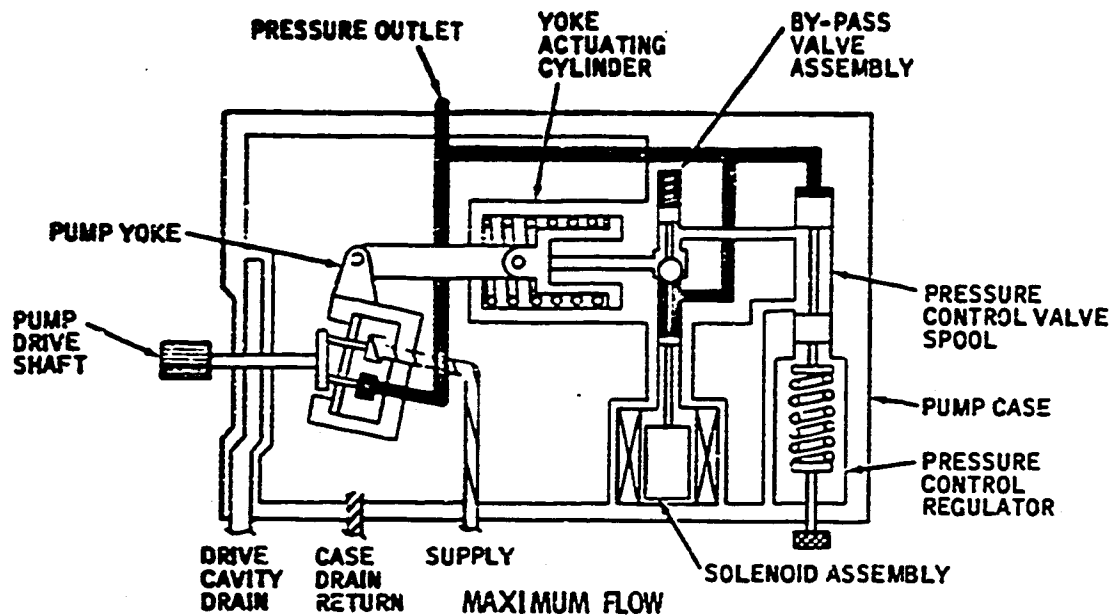

- PRESSURE
- CASE DRAIN
- SUPPLY
- DRIVE CAVITY DRAIN

HA2-837

Engine-Driven Hydraulic Pump Pressure  
 Flow -- Schematic  
 Figure 15

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The yoke control piston casing is an integral part of the pump case. Four self-locking nuts are used to hold the piston casing end-plate in position. The bypass valve assembly, consisting of the valve body and a solenoid assembly, is mounted externally on the pump case, under the yoke control piston casing. This solenoid valve is provided with an electrical connector. A pressure control regulator is installed on the bypass valve body by means of four bolts. This regulator is cylindrical and is provided with an external adjustment screw. A lock screw is used to retain the adjusting screw after the adjustment has been made.
- (4) Hydraulic fluid enters the pump through an inlet port. Passages in the yoke carry the fluid to the valve plate, which ports the fluid to the cylinder block. The nine pistons in the cylinder block are actuated by the rotating drive shaft, thereby pressurizing the fluid. From the cylinder block, the fluid is routed to the outlet port of the yoke and then to the pump pressure lines. The pressure control regulator is actuated by pump output pressure that is bled to the regulator. The regulator meters the pressure to the yoke control piston, which positions the yoke.
- (5) The maximum pump pressure is determined by the adjustment of the pressure control regulator. The pressure control regulator allows maximum output flow (22.5 gpm at 3500 rpm) up to 2850 psi system pressure. When this pressure is reached, the yoke assembly starts to move towards the zero flow position.
- (6) Pressure continues to rise until the displacement is reduced from maximum to zero flow and 3000 psi is reached. The pump stabilizes in accordance with system demand.

N. Engine-Driven Hydraulic Pump Check Valves (See Figure 12.)

- (1) Two check valves, rated at 3000 psi, are installed in the lines from each engine-driven hydraulic pump. One check valve is installed in the pressure line and the other is in the case drain line. The check valves in the pump pressure lines prevent reverse flow of hydraulic fluid through the pump, when the pump is inoperative or when external hydraulic pressure is supplied to the system. Access to the valves can be gained through an access door in the forward right apron of each inboard pylon. The valves are mounted on the exterior wall of the inlet box by means of the bulkhead fittings and retaining nuts.
- (2) Normal operating pressure will unseat the poppet, and fluid will flow through the valve. When pressure downstream of the valve exceeds pressure from the pump, the pressure, with the aid of the return spring, will seat the poppet. This prevents reverse flow of hydraulic fluid through the pumps.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


O. Engine-Driven Hydraulic Pump Case Drain Filter (See Figure 16.)

- (1) Airplanes 812-822, 860 and subsequent are equipped with an engine-driven hydraulic pump case drain filter. The case drain filter is a line-type, micronic filter, for use in a low-pressure hydraulic system, installed in the engine-driven hydraulic pump case drain return line between the pump flow check valve and the hydraulic system reservoir. The case drain filter is installed on the aft surface of the rear spar opposite the leading edge of the inboard flap assembly. One filter is used for each engine-driven pump. Access is gained to the filter by lowering the flaps. A second check valve is installed adjacent to the filter in the downstream side of the case drain return line.
- (2) Externally, the filter is approximately 5 inches high and 2 inches wide, with ports marked inlet and outlet. The bowl is cylindrical in shape, with hex-shaped wrench flats at the lower end. A self-sealing magnetic drain plug is installed in the bottom end of the filter bowl. The filter element is made of chemically treated paper.


P. Dual Filter and Relief Valve (See Figure 17.)

- (1) The hydraulic power system dual filter and relief valve consists of two filters and two relief valves installed in the same body. The unit filters the hydraulic fluid from the two engine-driven hydraulic pumps, and the pressure relief valves assure that excessive pressures do not build up in the pressure line from the pumps. The unit is located in the left main gear wheel well on the lower portion of the rear spar, approximately 1 foot outboard of the centerline shear web.
- (2) The unit consists of a casting with a flange-mounted pressure inlet port on each end. Two pressure outlets are located on the top of the casting. One outlet, centrally located, is the main pressure outlet to the system selector valve. The other, located to the left of the selector valve port, is the pressure outlet to the air pressure regulator-aspirator. The return outlet port for the relief valve portion of the unit is located on the center of the aft face of the body, canted upward. The nose gear return line is connected to a check valve installed in a return line port, located between the two filter bowls.
- (3) The pressure relief valves are located behind the pressure inlet ports and are connected to the return outlet port of the unit. The inlet from the nose gear return line is routed through the casting to the return outlet port.
- (4) If either of the filter elements becomes clogged, pressure above 3300 psi at the inlet port will unseat the poppet. Pressure above 3500 psi will allow full flow of 22.5 gpm to flow to the return port of the unit and back to the reservoir. The relief valves will reseal at approximately 3000 psi.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

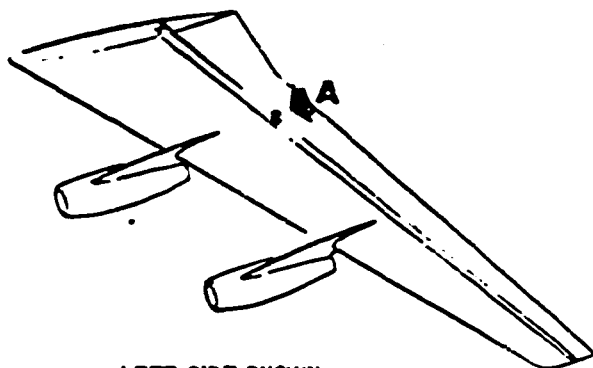

LEFT SIDE SHOWN  
 RIGHT SIDE OPPOSITE

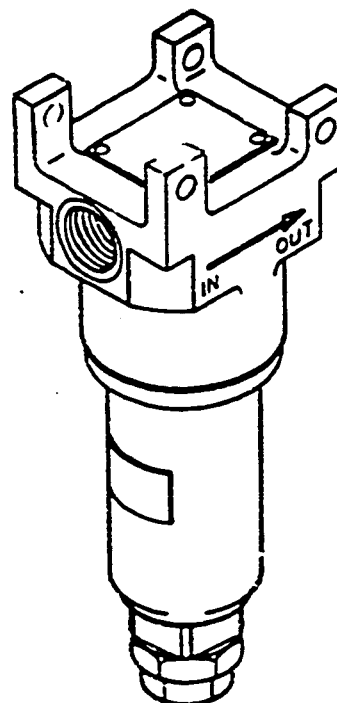

VIEW A

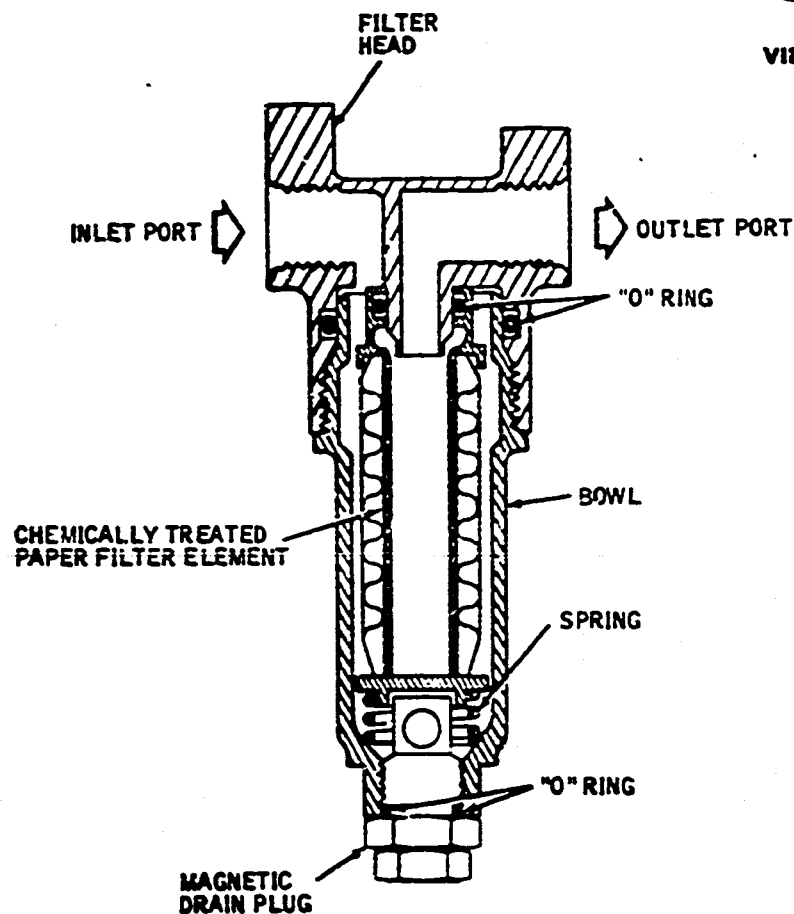


HA2-31

Engine-Driven Hydraulic Pump Case Drain  
 Filter -- Cutaway View  
 (Airplanes 812-822, 860 and Subsequent)  
 Figure 16

Aug 1/68

29-10-0  
 CODE 6  
 Page 43

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

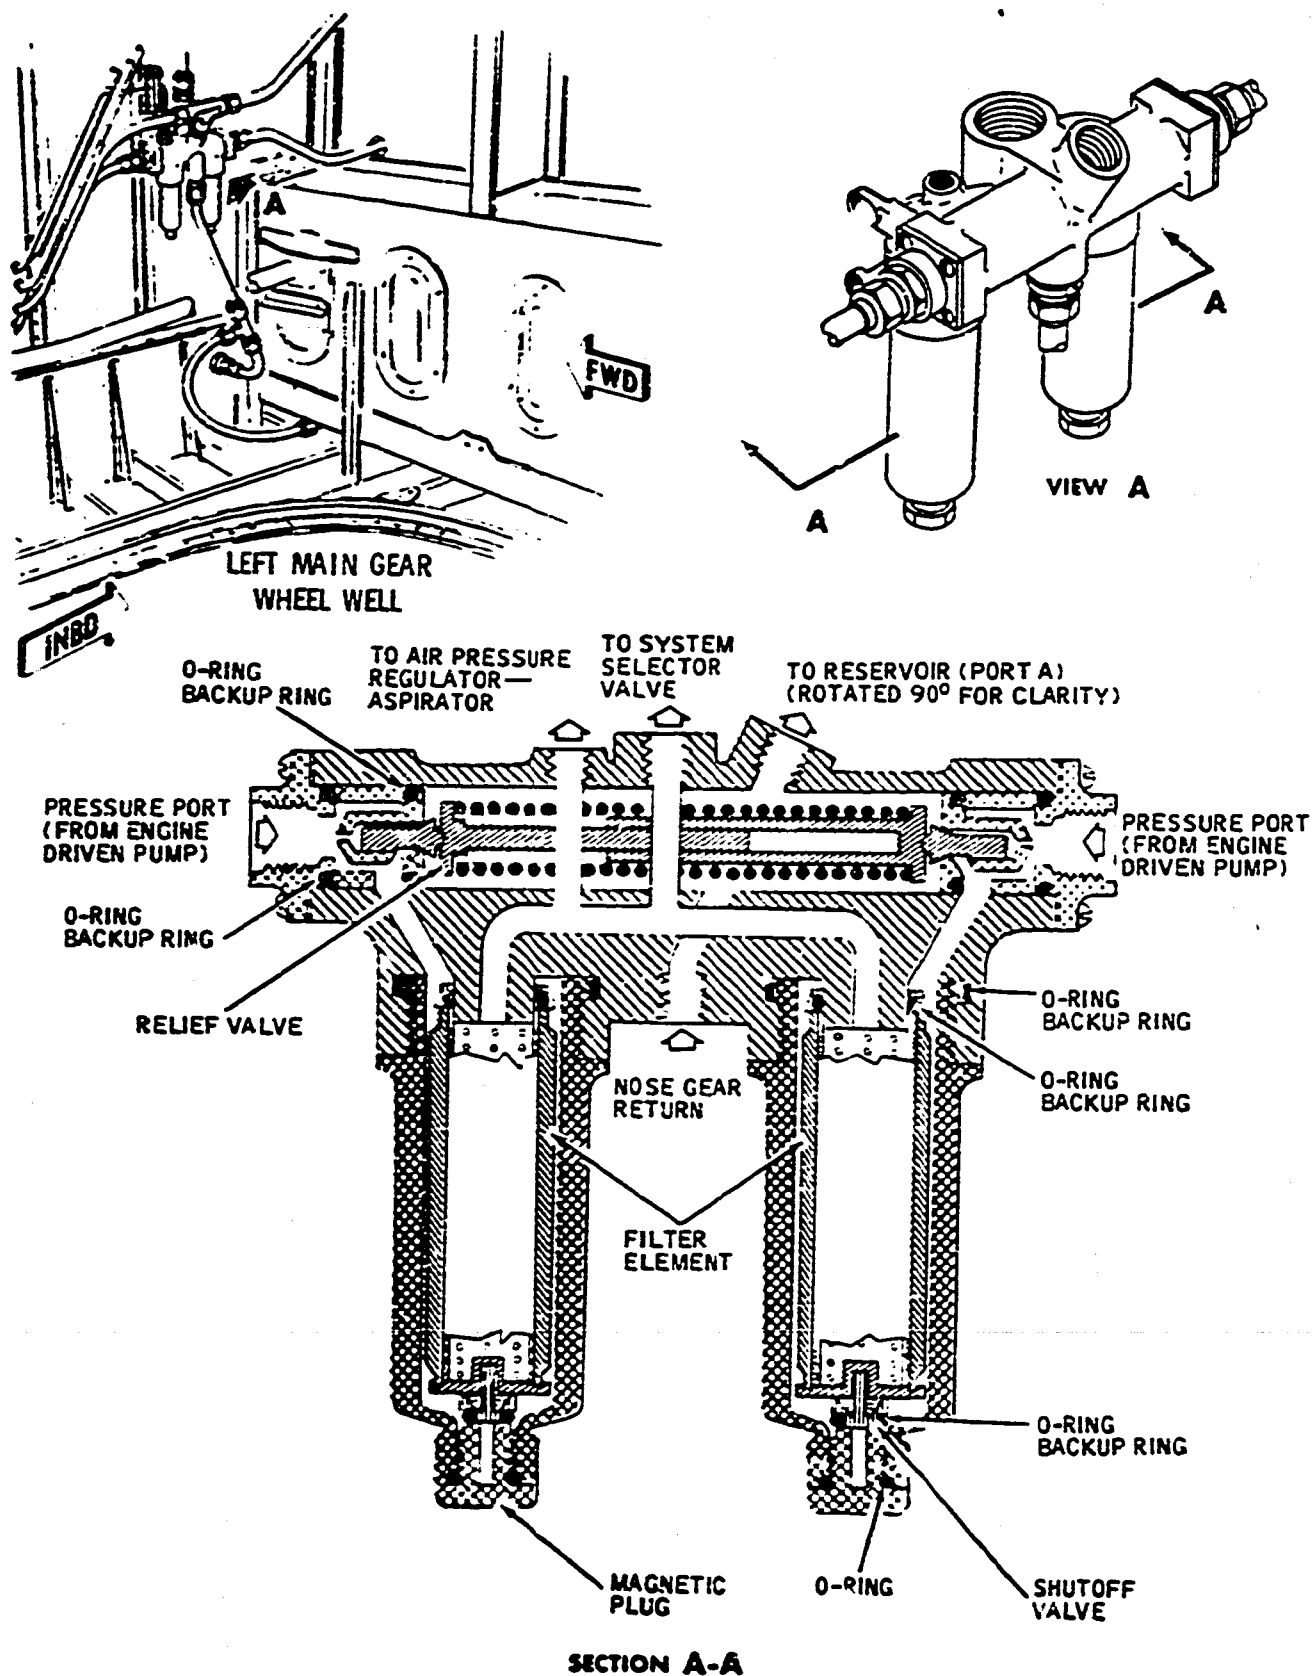

HA2-20

29-10-0  
 CODE 6  
 Page 44

Dual Filter and Relief Valve -- Cutaway View  
 Figure 17

Jan 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) A check valve is installed in the system selector valve port to prevent reverse flow of pressure through the filter during auxiliary hydraulic pump operation.

**Q. System Selector Valve (See Figure 18 and 19.)**


- (1) The system selector valve is a 3-position valve which permits directional control of fluid under pressure. The valve is installed on the left hydraulic power manifold and is accessible through the left main gear inboard door.
- (2) The selector valve pressure-to-system port and the return port are directly ported to the manifold. The engine pump pressure enters the valve through a port on the large end of the valve, and the auxiliary pump inlet and alternate ports are located at the top, toward the aft end of the valve. The valve control crank is attached to a push-pull rod and a cable sector.
- (3) Operation of the system selector valve is controlled by a lever located on the right side of the system engineer's control pedestal. When the control lever is moved to the selected position, the cable system, through the sector and crank, operates the valve positioning lever to drive the slide spool assembly to the selected position. When the control lever is placed in the general system (normal) position, the selector valve is actuated, causing hydraulic fluid to enter the valve through the system pressure port. The fluid is then directed into the manifold through the pressure-to-system port. In the general system (normal) position, fluid from the auxiliary pressure port is also routed to the pressure-to-system port. In the bypass/general system position, the selector valve ports engine pump pressure into the manifold through the return port. In this position, the auxiliary pump pressure is ported to the general system. In the general system/flaps only position, pump pressure is routed through the alternate port, at the top of the valve, for alternate operation of the flaps. Internal leakage provides lubrication for the moving parts of the valve.

**R. Left Hydraulic Power Manifold (See Figure 20.)**

- (1) The left hydraulic power manifold distributes fluid pressure from the hydraulic pump (any one of the three pumps), through control valves to the various airplane hydraulic subsystems. The left power manifold is located overhead in the left wheel well. Access to the left manifold is through the left main gear inboard door.
- (2) On airplanes 801-822 and 860-866, three valve-mounting pads are provided on the manifold. The system selector valve-mounting pad is located on top of the manifold body. Of the two remaining mounting pads, located on the underside of the manifold, the inboard pad is used for the engine ejector emergency air control valve on airplanes 801-811. On airplanes 812-822, 860-866, this pad is capped and not used. The outboard mounting pad is used for the bogie swivel unlock control valve on airplanes 801-822, 860-866. On airplanes 867 and subsequent, there is no bogie unlock system, and a different type of manifold is used.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

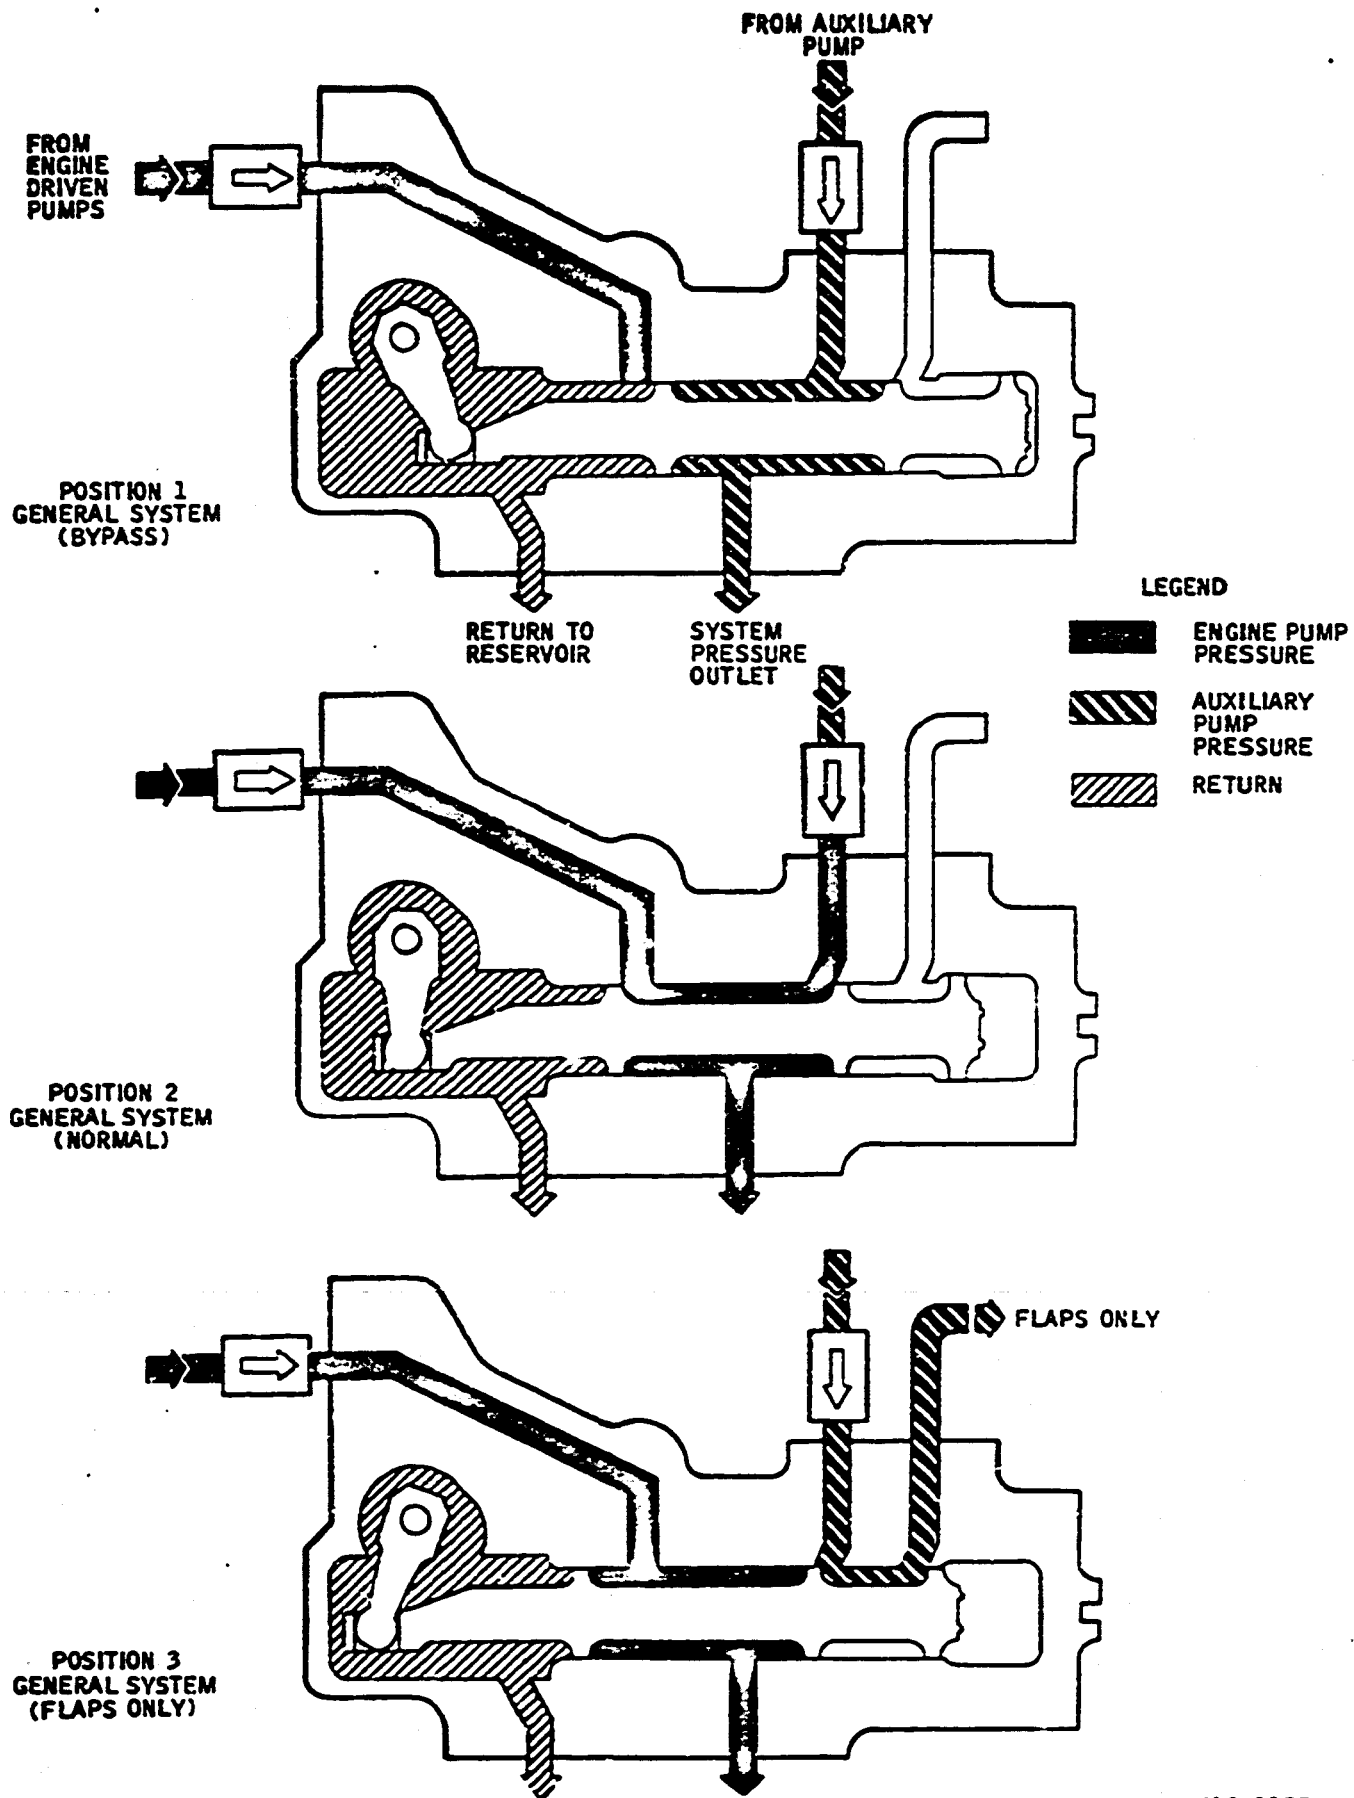





System Selector Valve -- Schematic  
 Figure 18

HA2-2155

Jan 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

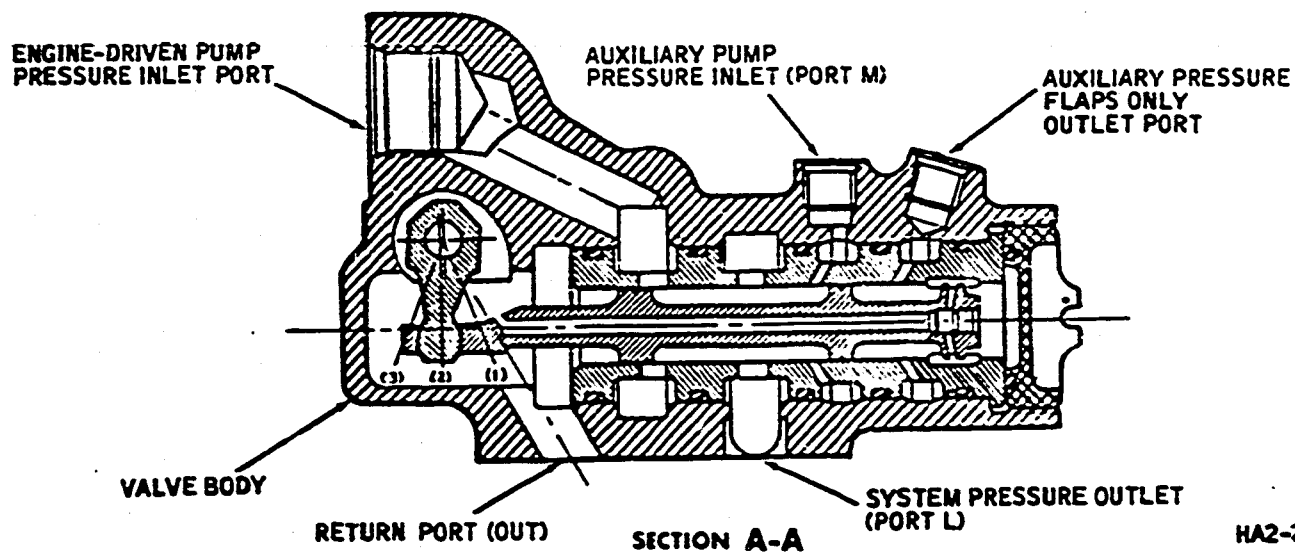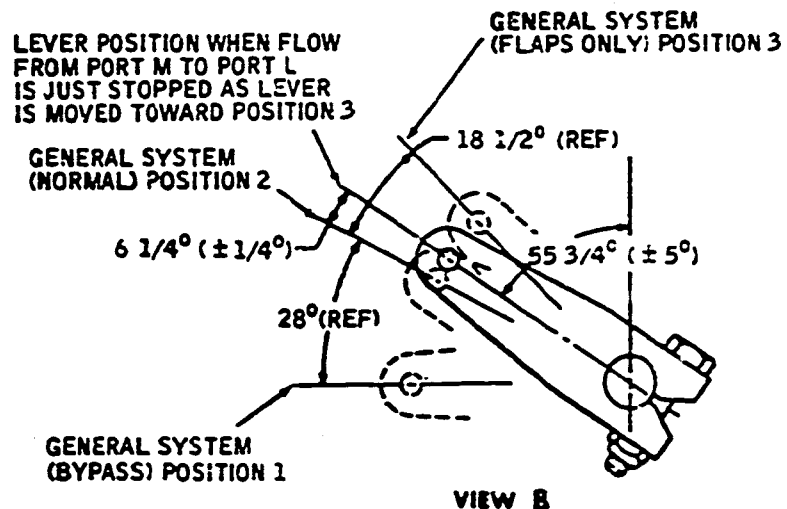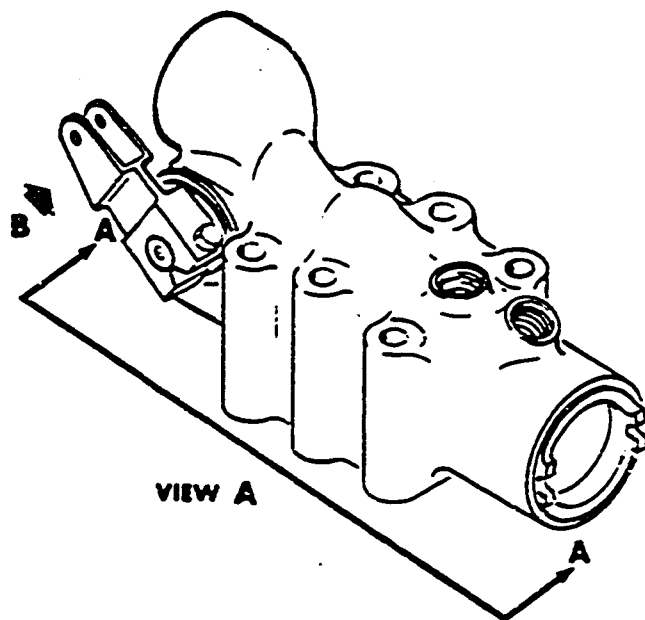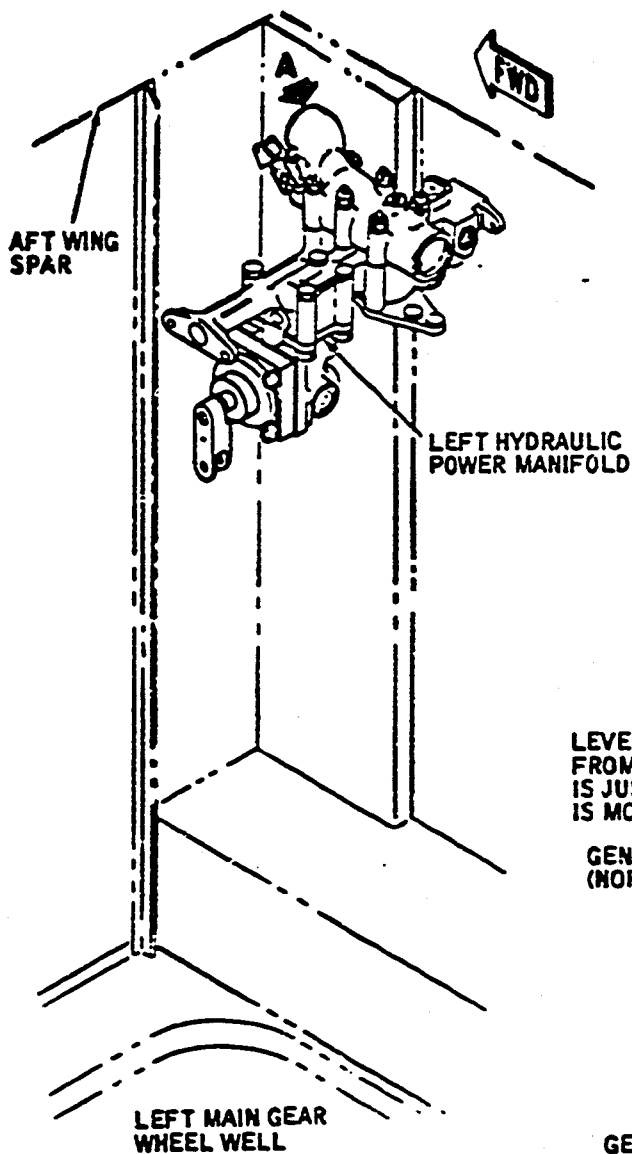

System Selector Valve -- Cutaway View  
 (Airplanes 801-822, 860-866)  
 Figure 19 (Sheet 1)


HA2-2154

Aug 1/68

29-10-0  
 CODE 6  
 Page 46A

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

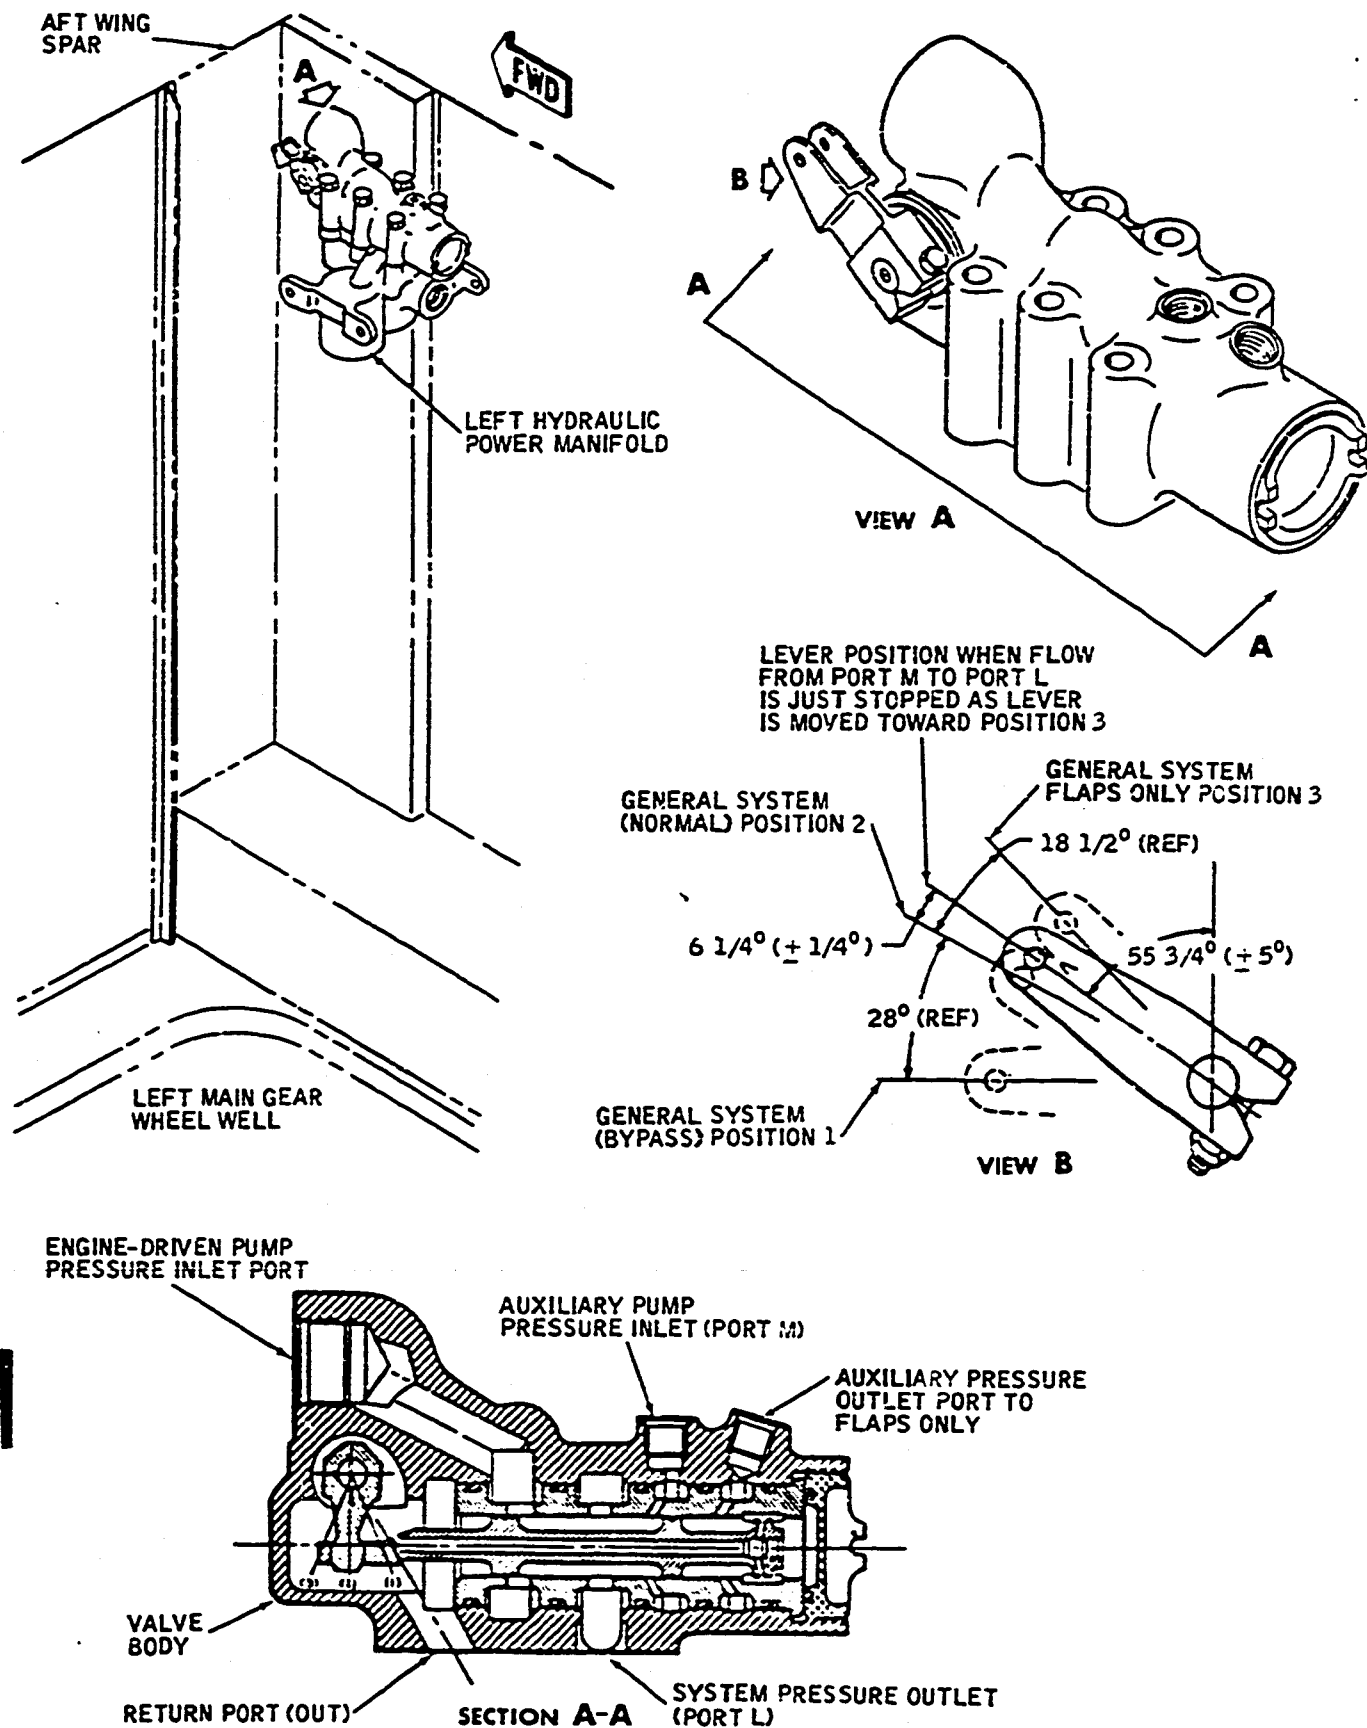



HA2-2943A

System Selector Valve -- Cutaway View  
 (Airplanes 867 and Subsequent)  
 Figure 19 (Sheet 2)

29-10-0  
 CODE 6  
 Page 47

Nov 1/69

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

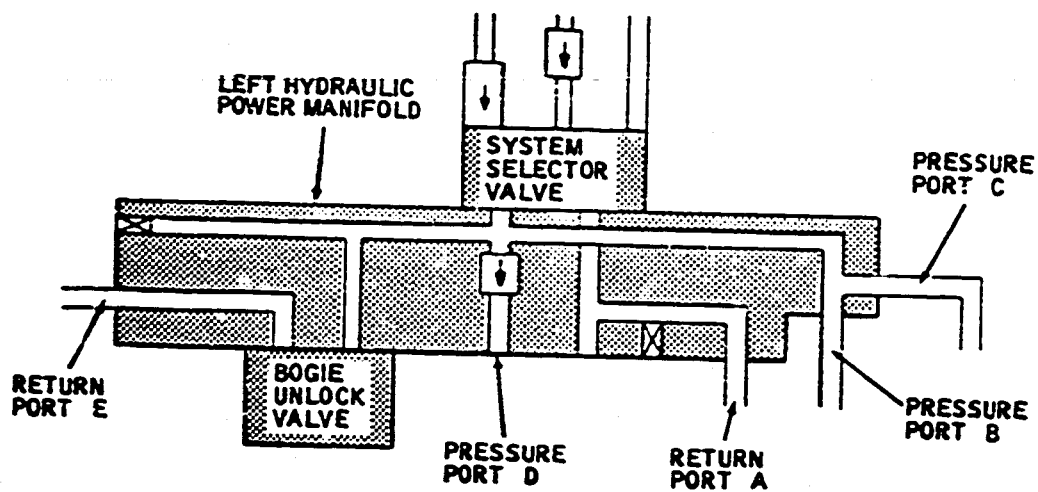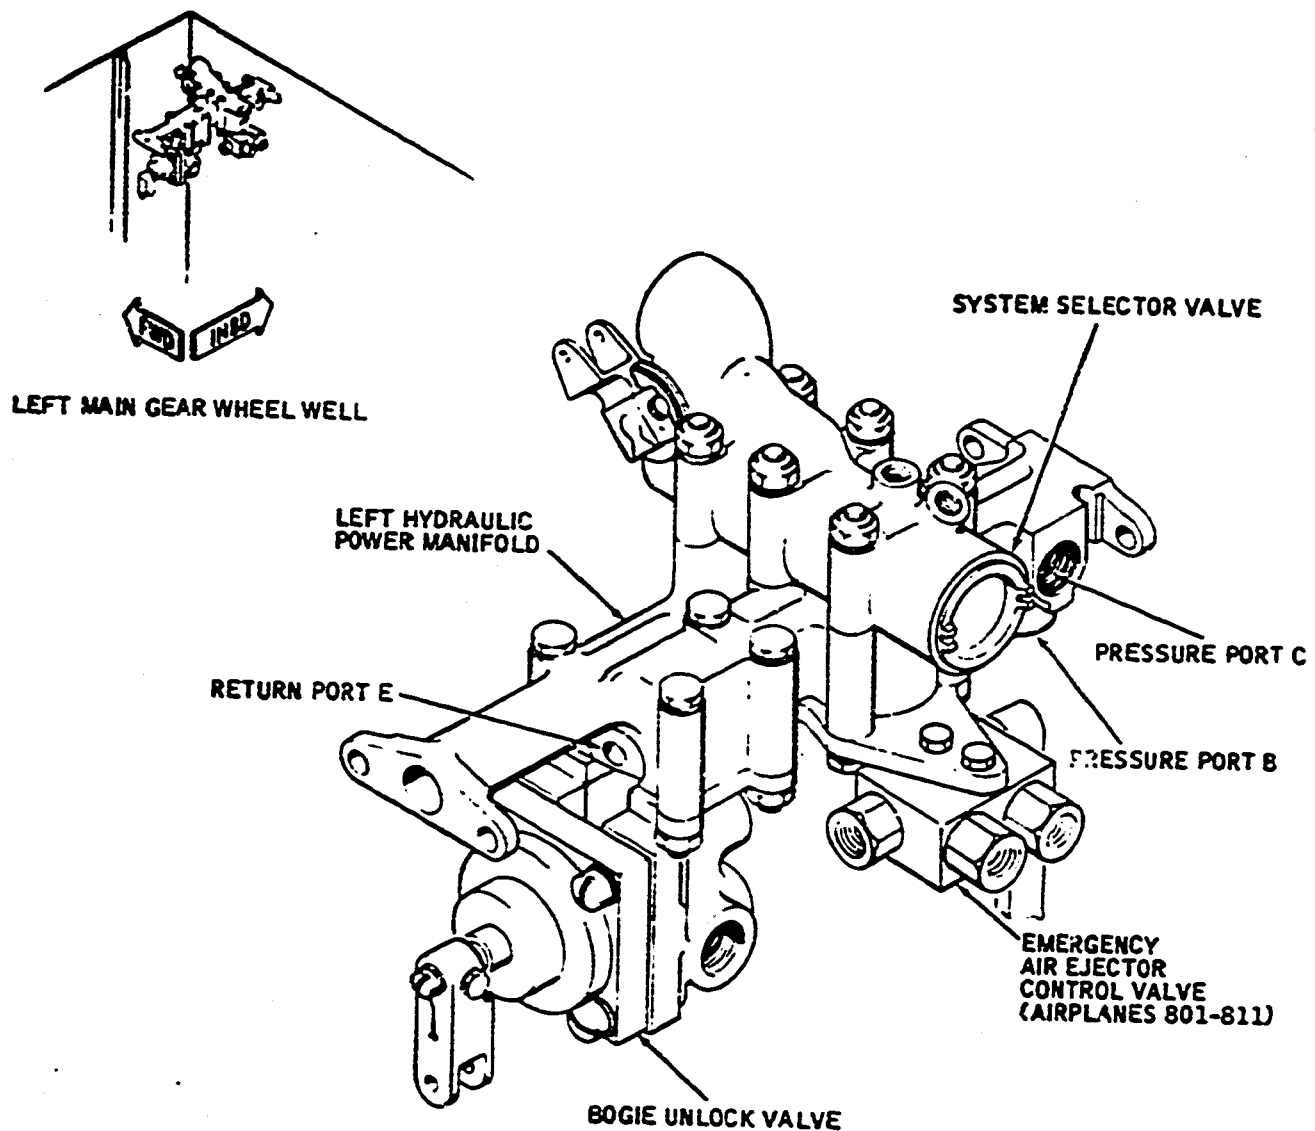

HA2-4653



29-10-0  
 CODE 6  
 Page 48

Left Hydraulic Power Manifold -- Schematic  
 (Airplanes 801-822, 860-866)  
 Figure 20 (Sheet 1)

Aug 1/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

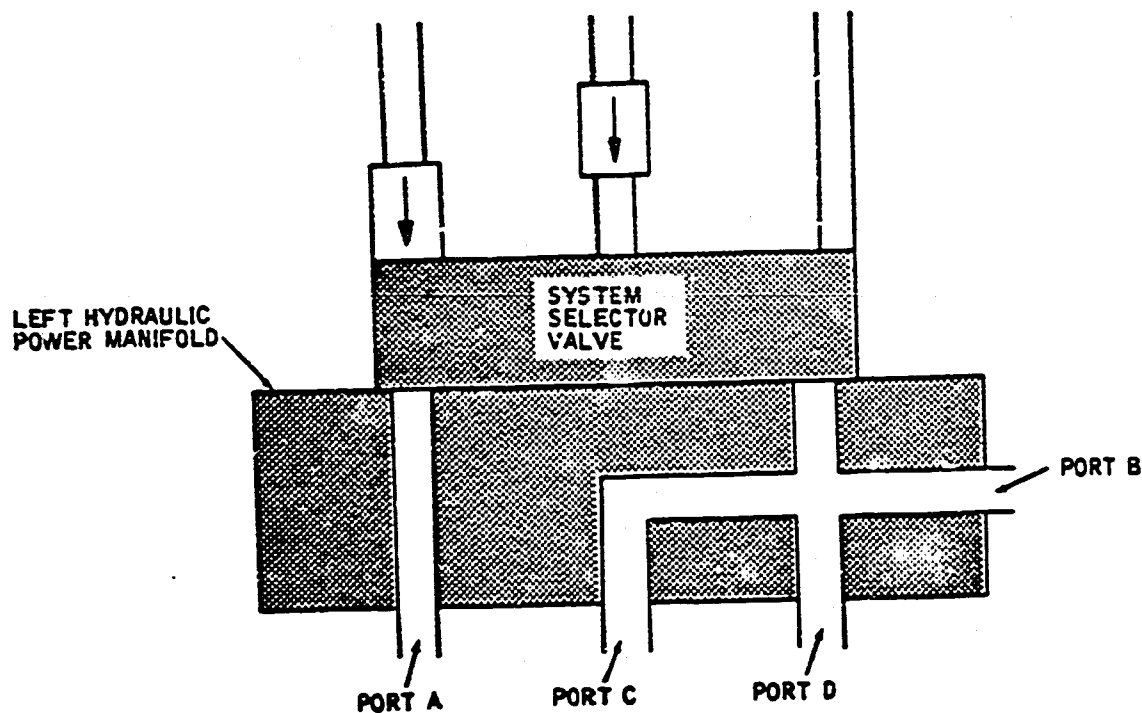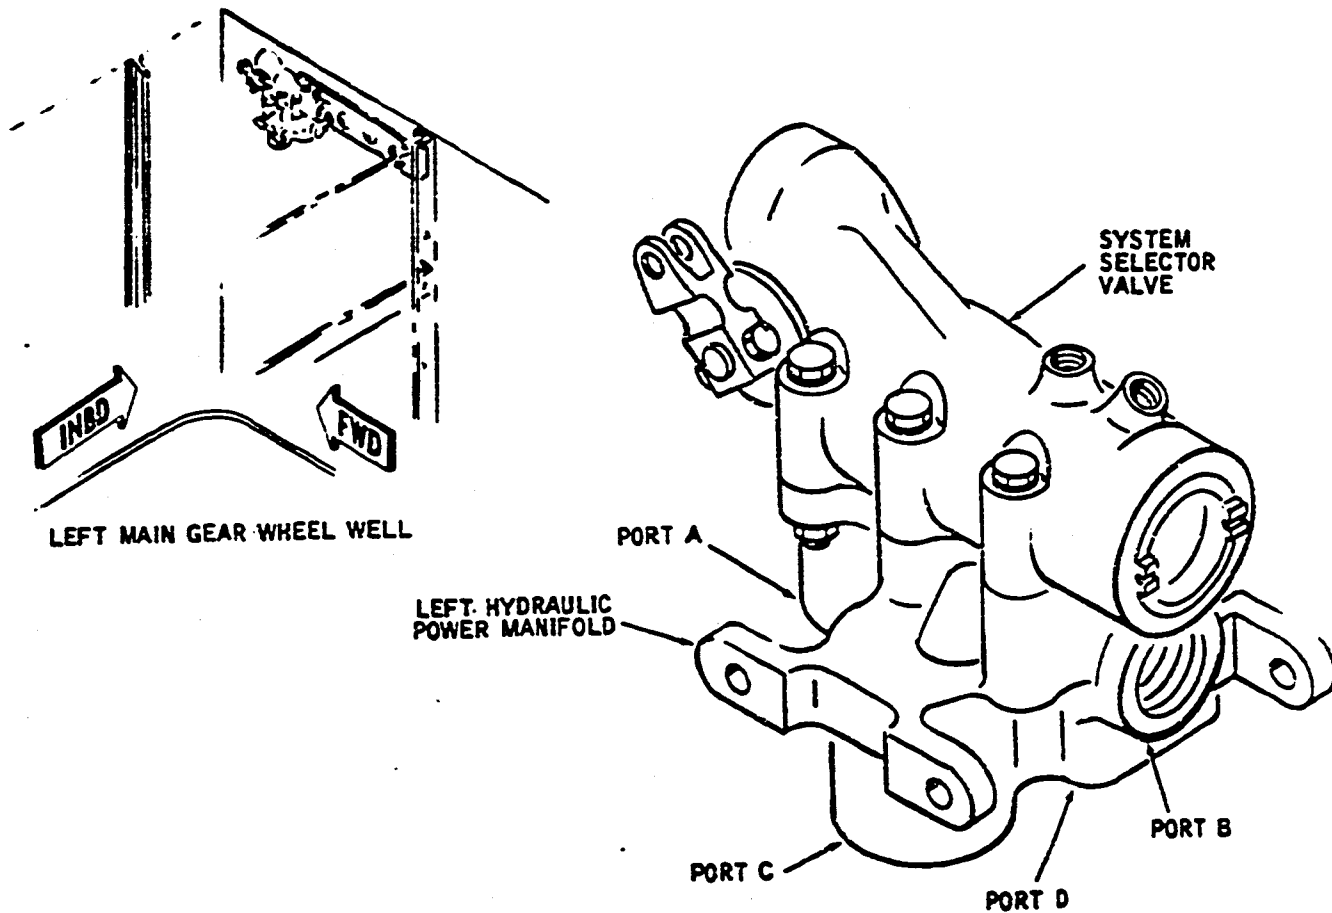

HA2-855

Left Hydraulic Power Manifold -- Schematic  
 (Airplanes 867 and Subsequent)  
 Figure 20 (Sheet 2)

Aug 1/68

29-10-0  
 CODE 6  
 Page 48A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Four ports are provided on the inboard end of the manifold. Two of these ports are pressure outlet ports: one, located on the aft face of the manifold, is for the flight controls; and, the other, located on the underside of the manifold, ports fluid to the priority valve, which, in turn, ports fluid to the nose gear and the right power manifold. The other two ports are return outlets, located immediately forward of the manifold pressure outlet port. One is connected by a line to the right manifold, and the other is connected to the low-pressure return port of the reservoir. The pressure line to the nose gear control valve is teed into the manifold pressure connecting line. A reservoir return line is teed into the manifold return line. The two ports on the inboard mounting flange were used for drilling the internal passages of the power manifold and are plugged and safety wired to prevent use.

- (3) On airplanes 867 and subsequent, one valve-mounting pad is provided on the top of the manifold for the system selector valve. Four ports are provided on the manifold for connection of hydraulic pressure and return lines. Three of these ports are pressure outlet ports; one, located on the aft face of the manifold and one located on the bottom of the manifold port fluid to the flight controls. The third pressure outlet port, located on the bottom of the manifold, ports fluid directly to the priority valve, which in turn, ports fluid to the nose gear and to the right power manifold. The fourth, a return port, located immediately forward of the pressure line port on the bottom of the manifold, is connected by a line to a return port of the reservoir.

S. Right Hydraulic Power Manifold (See Figure 21.)

- (1) The right hydraulic power manifold distributes fluid pressure from the hydraulic pumps (engine-driven or auxiliary, or any combination of these three pumps), through the control valves to the various hydraulic subsystems. The right hydraulic power manifold is located overhead in the right wheel well. The manifold is held in place with braces and is accessible through the right main gear inboard door.
- (2) The manifold contains passages for pressure and return fluid distribution, four check valves, ports for pressure and return lines, and mounting pads for the various control valves.
- (3) The right manifold receives fluid pressure from the left manifold. Pressure is ported through check valves to the wing flap control valve, to the slot control valve, to the main gear control valve, to the brake control valve, to the brake pressure transmitter, and to the brake accumulators.
- (4) Auxiliary hydraulic pressure is ported from the alternate port of the system selector control valve into port K in the right manifold. Port K is located inboard of the spoiler control valve. From port K, auxiliary hydraulic pressure is ported through a check valve to the downstream side of the wing flap control valve check valve and into the wing flap control valve for alternate operation of the wing flaps.


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) The return passage from the wing flap control valve ports fluid to return port A. The brake control valve return passage ports fluid into return line B through a two-way restrictor. The main gear control valve downline return fluid uses a separate port in the valve, bypasses the manifold, and returns the fluid directly to A return line to the reservoir. The upline in the main gear control valve uses the same return port, return port B, in the manifold as the brake control valve.


Oct 15/68

29-10-0  
CODE 6  
Page 49|


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

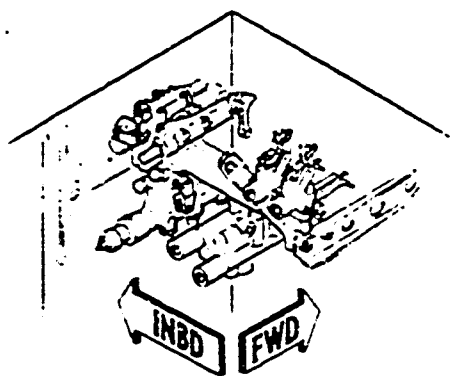

RIGHT MAIN GEAR  
WHEEL WELL

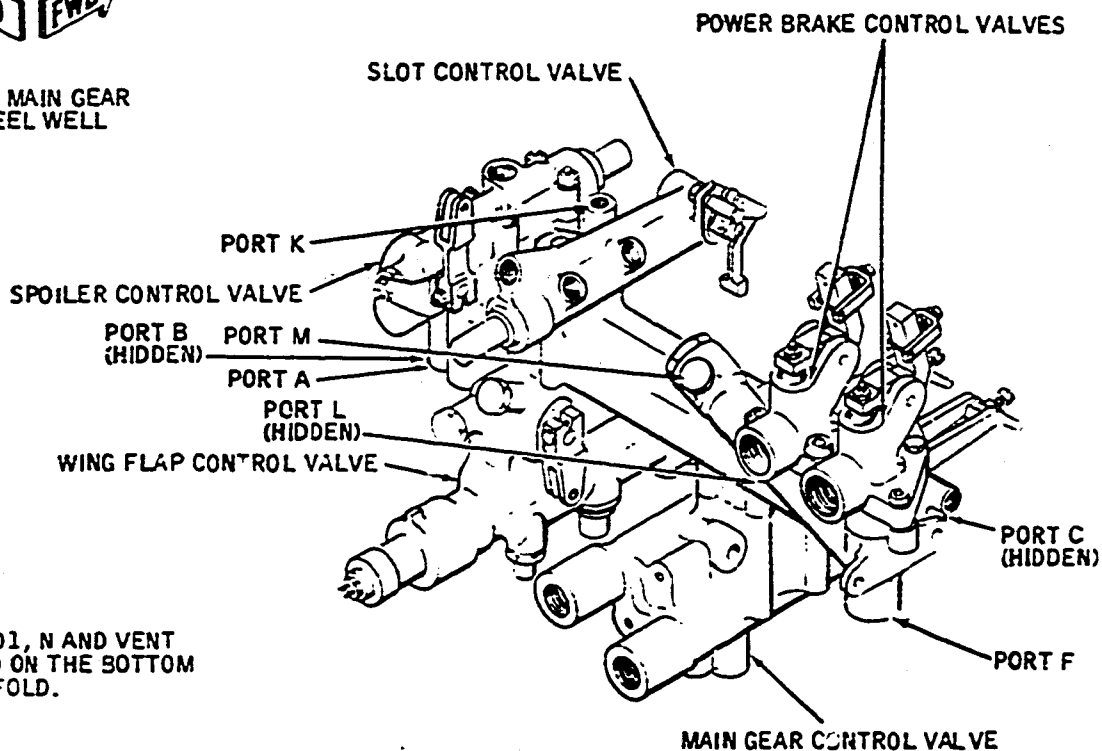

NOTE: PORTS B, C, D<sub>1</sub>, N AND VENT  
ARE LOCATED ON THE BOTTOM  
OF THE MANIFOLD.

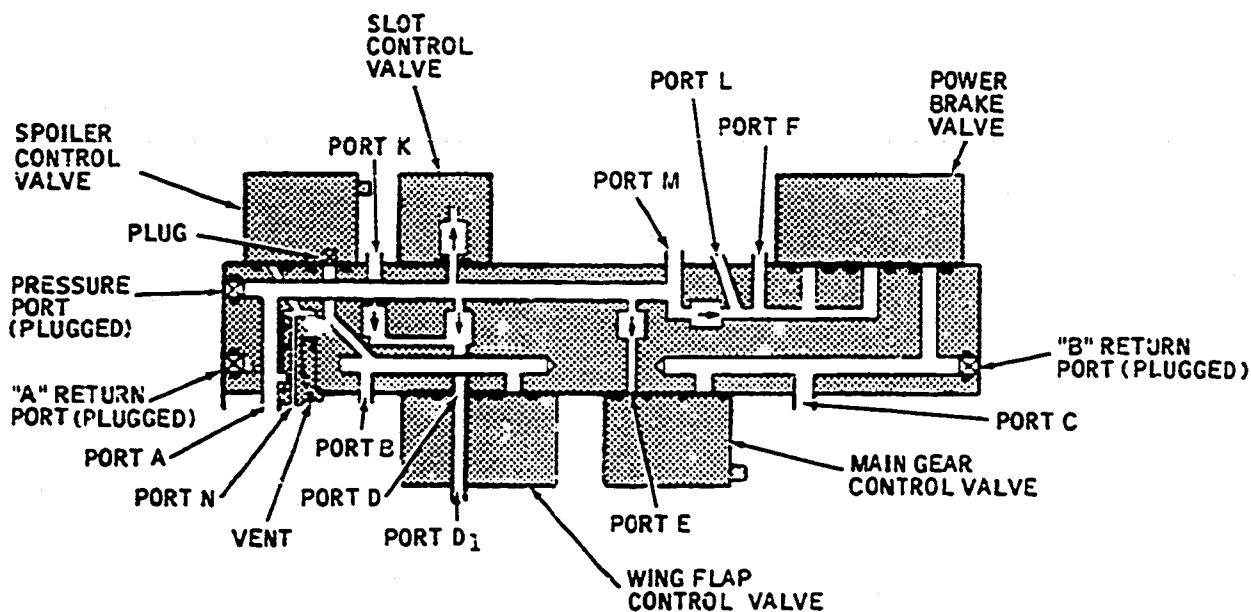

HA2-29A



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

T. Hydraulic Manifold Return Check Valves (Airplanes 801-822, 860-866, see Figure 12.)

- (1) The hydraulic manifold return check valve is installed in the hydraulic reservoir A return line to prevent reverse flow of fluid. This check valve is located on the shear web near the dual filter and relief valve. Access to the check valve is through the left main gear in inboard door.
- (2) The direction of flow is marked on one surface, and the rating of the check valve (1500 psi) is marked on the other surface.


U. Hydraulic Power System Accumulator (See Figure 22.)

- (1) The hydraulic power system accumulator is a spherical, welded-steel, fluid and air bladder-separated container. The accumulator is installed in the pressure line of the hydraulic power system to provide a reserve supply of fluid under pneumatic pressure and to act as a shock absorber for system pressure surges.
- (2) The accumulator is located immediately aft of the left hydraulic power manifold and is accessible through the left main gear inboard door. It is mounted with two corner brackets and clamp blocks at the upper and lower port fittings.
- (3) The accumulator is installed in the pressure line of the hydraulic power system and is initially charged with 1000 psi of dry nitrogen. As the system pressure builds up, fluid is forced into the upper chamber of the accumulator, further compressing the trapped nitrogen to approximately 3000 psi. With full hydraulic system pressure, 3000 psi is indicated on the pressure gage adjacent to the filler valve. This reserve pressure smoothes out any momentary lag in the pump's response to the system's demand for greater fluid flows. The accumulator permits a gradual rise in system pressure, thereby absorbing the shock of pump surges and relieving the piping and system operating units of high-impact loads. When the engine-driven hydraulic pumps are not operating, the accumulator provides system pressure (at a diminishing rate), until a quantity equal to the stored volume in the accumulator has been used by the system.

V. Hydraulic System Priority Valve (See Figure 23.)

- (1) The priority valve is located in the left wheel well near the left hydraulic power manifold. The valve is installed in the hydraulic pressure line, between the two power manifolds, downstream of the pressure supply takeoff port for the flight controls. The priority valve is a balanced relief valve which reserves initial hydraulic pressure (up to 2150 psi maximum) for use in the flight control systems. The valve consists of a body with an inlet, an outlet, and a breather port. Internally, the valve contains a poppet valve plate, a poppet, a poppet valve load-spring, a piston, a piston load-spring, and a piston load-spring housing. The piston load-spring housing chamber

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

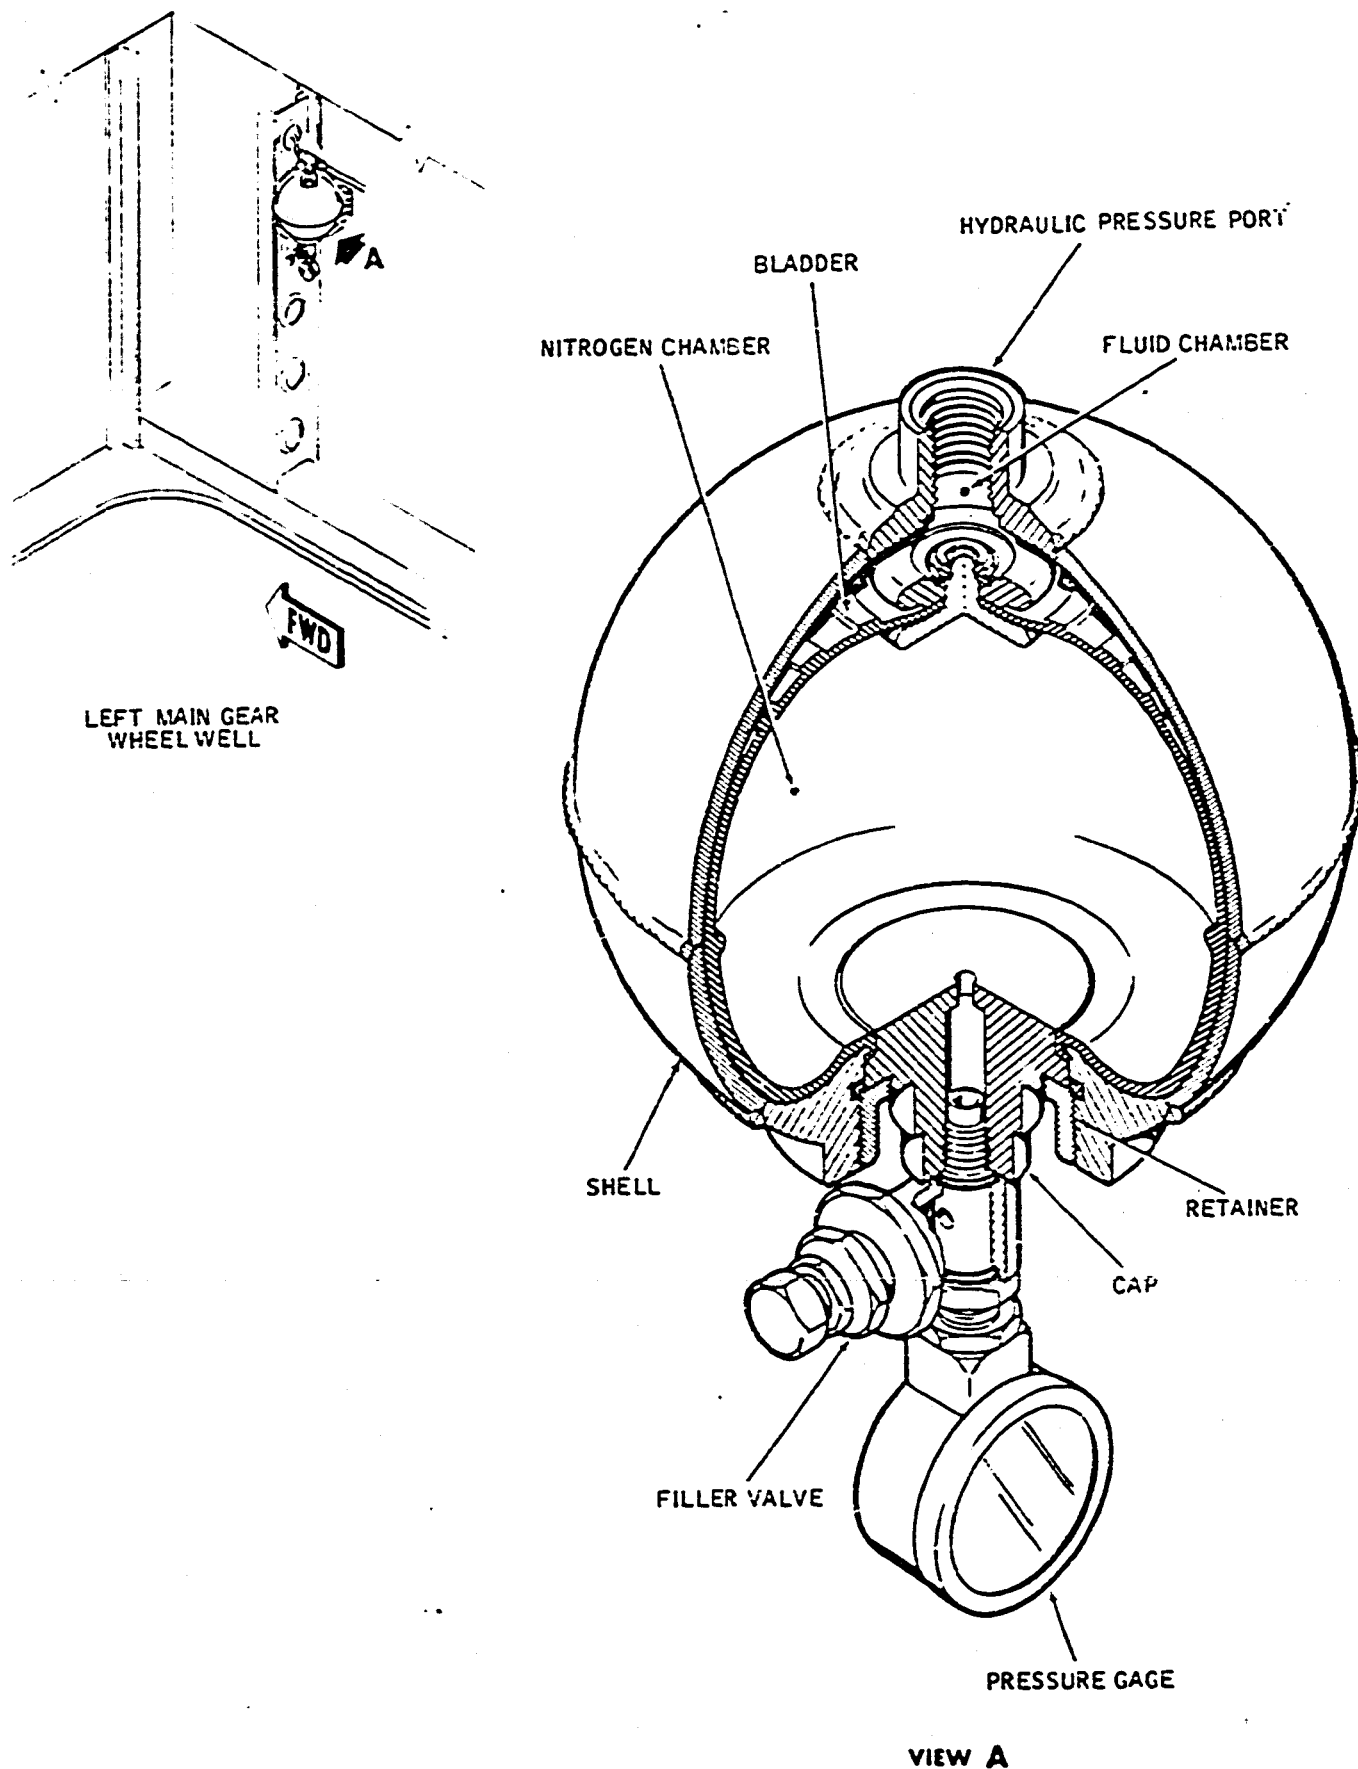


VIEW A



HA2-7578

Hydraulic Power System Accumulator --  
 Cutaway View  
 Figure 22

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

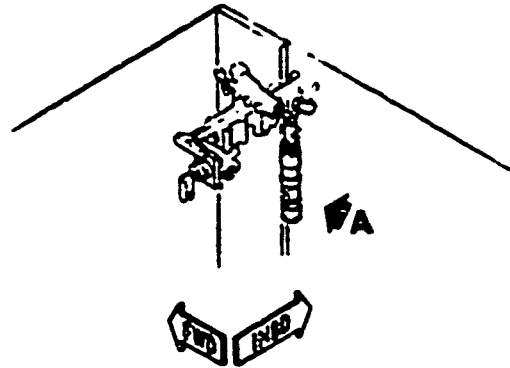

LEFT MAIN GEAR WHEEL WELL UPPER CORNER

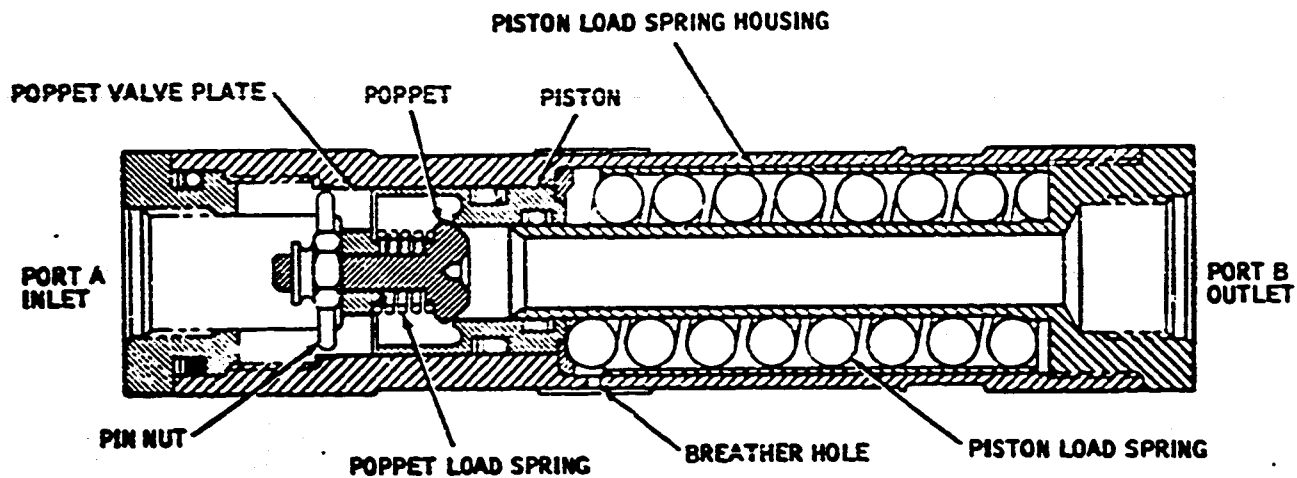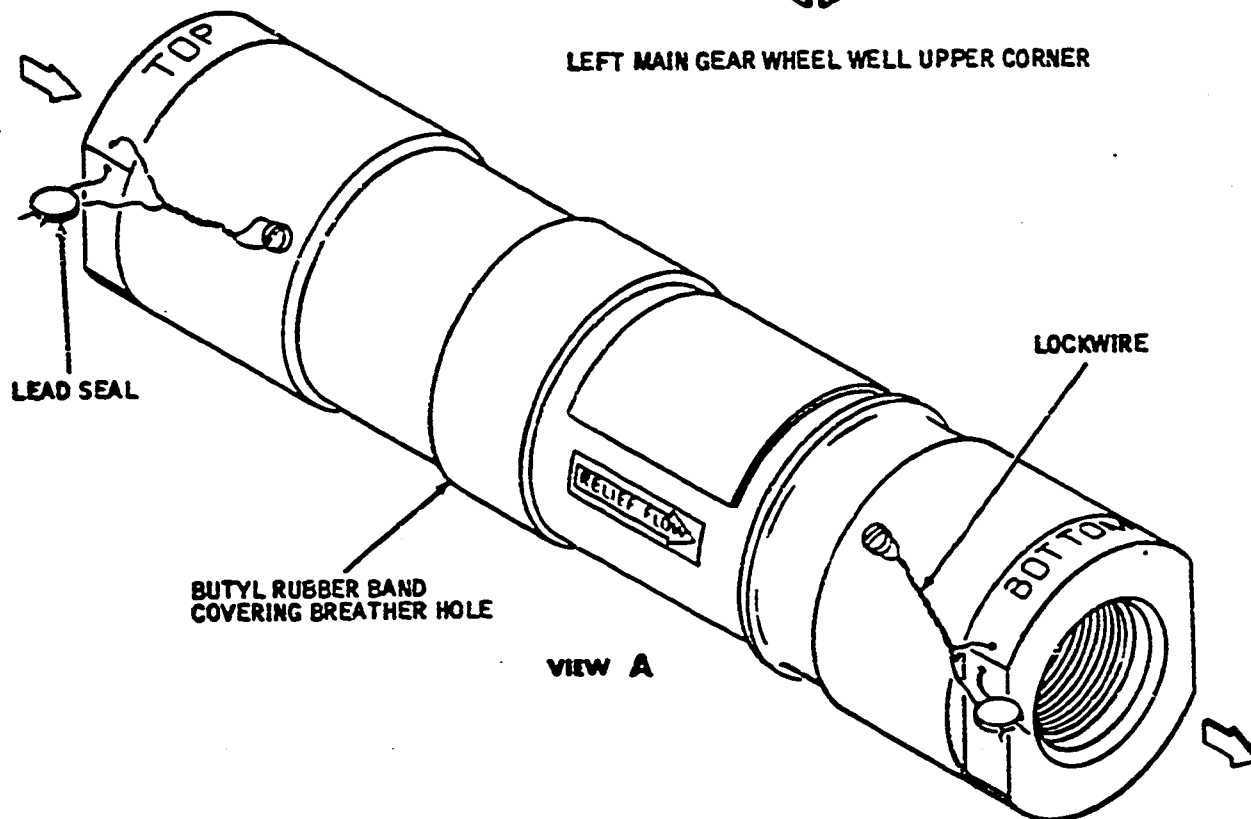

HA2-34

Hydraulic System Priority Valve -- Cutaway View  
 Figure 23

Jan 15/68

29-10-0  
 CODE 6  
 Page 53

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

is vented to ambient air through a breather hole which is covered by a butyl rubber band.

- (2) The priority valve shuts off hydraulic pressure to all subsystems downstream of the left power manifold, whenever the hydraulic pressure drops below 1700 psi minimum. At this point, the valve closes to reserve the hydraulic pressure for use in the flight control systems, preventing them from reverting to manual operation. When the hydraulic pressure rises to 2150 psi maximum, the priority valve opens and supplies pressure to the right manifold and all subsystems downstream of the priority valve.
- (3) Hydraulic fluid from the left power manifold enters the priority valve through the inlet port, passes through the poppet valve plate holes, and applies pressure against the piston. When sufficient hydraulic pressure is applied to the piston, the piston load-spring compresses, unseating the poppet and permitting full flow through the valve. When the hydraulic pressure decreases to less than the opposing force value of the piston load-spring, the load-spring forces the piston against the poppet and shuts off fluid flow through the valve.
- (4) The maximum flow available from both engine-driven hydraulic pumps is: 44 to 45 gpm at takeoff, climb, and cruise configurations; 26 to 28 gpm at descent, approach, and engine idle configurations.
- (5) Some of the larger hydraulic system demands are as follows:
  - (a) Gear retraction -- 17 gpm (10-12 seconds)
  - (b) Gear extension -- 14 gpm (10-12 seconds)
  - (c) Wing flaps down -- 8 gpm (10 seconds)
  - (d) Wing flaps up -- 3 gpm (22 seconds)
  - (e) Horizontal stabilizer -- 7 gpm
  - (f) Ailerons -- 17 gpm (25°/second)
  - (g) Rudder -- 3 gpm (25°/second)
- (6) There are various combinations of hydraulic system operations which could cause momentary reversion of the flight controls to manual operation. To prevent reversion to manual operation, the priority valve assures that the left power manifold receives all the hydraulic fluid pressure under conditions of very large flow demands.

#### W. Hydraulic System Selector Control Lever

- (1) The hydraulic system selector control lever is a manually actuated, mechanical lever detented to three positions. The lever provides a

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

mechanical means, through cables, for positioning the system selector valve and the auxiliary hydraulic pump supply selector valve. The hydraulic system selector control lever is located on the system engineer's control pedestal. The lever is attached to a drive sector, located on a common shaft with the other control pedestal sectors. The lever and sector are accessible through the cover plates on the system engineer's pedestal.

- (2) To put the hydraulic power system in the bypass condition, the system selector control lever is lifted out of detent and moved to bypass/general system position. At the same time, the cable moves the sector and pushrod of the system selector valve to the No. 1 position. The pushrod positions the system selector valve to the No. 1 bypass position. At the same time, the cables from the system selector valve sector move the auxiliary pump supply selector valve sector to No. 1 (auxiliary) position. The auxiliary pump supply selector valve remains in the auxiliary supply position through the idle feature of the sector rigging. In this condition, the engine-driven pump pressure is ported to the reservoir and the auxiliary pump supplies pressure to the general system. In this position, the fluid is supplied to the auxiliary pump from the low standpipe in the hydraulic system reservoir. To put the system into the alternate condition, the selector control lever is lifted out of detent and moved to the general system/flaps only position. The cables move the system selector valve sector to the No. 3 (alternate) position. The system selector valve sector moves the cables rotating the auxiliary pump supply selector valve sector to the No. 3 (alternate) position. As the sector rotates, the end of the arm moves away from the idle position. This positions the valves to the alternate position, supplying fluid to the auxiliary pump from the auxiliary pump alternate reservoir. In this position, fluid from the auxiliary pump is ported to the wing flap control valve only. Engine-driven pump pressure is ported to the general system.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - DESCRIPTION AND OPERATION

1. General

A. Description (See Figures 1 and 2.)

- (1) The hydraulic power system receives fluid pressure from the engine-driven hydraulic pumps, one installed on each inboard engine. The electrically driven auxiliary pump is used to supplement the engine-driven pumps, or to independently supply the system with fluid pressure.
- (2) The hydraulic system reservoir, located in the left wing root, has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir is used for fluid, and 1/10 is used for foam space. A separate air chamber is installed in the reservoir system to provide for a greater fluid capacity in the main reservoir. A reservoir filler assembly is installed in the piping between the reservoir and the air chamber and has a vent line from the filler neck to the tee at the top of the reservoir sight gage. The reservoir is pressurized to 30 to 35 psi by bleed pressure from the engine-driven pumps through an air pressure regulator-aspirator.
- (3) The engine-driven pumps receive fluid from the pressurized main reservoir through respective engine hydraulic fire shutoff valves. The engine hydraulic fire shutoff valves are normally open and can be mechanically controlled from the flight compartment. The pumps supply fluid pressure through respective check valves to the dual filter and relief valve. Some of the fluid from the filter is ported through the regulator-aspirator to pressurize the reservoir. Most of the fluid is routed through a check valve to the system selector valve, and then to the left and right hydraulic power manifolds. The manifolds distribute the fluid pressure to the subsystems.
- (4) Hydraulic fluid is normally supplied to the auxiliary hydraulic pump from a low standpipe in the main reservoir. During alternate operation, the auxiliary hydraulic pump receives fluid supply from the auxiliary pump alternate reservoir, which is located just aft of the auxiliary pump. From these reservoirs, the fluid is ported through the auxiliary pump selector valve which is mechanically controlled from the flight compartment by the system selector control lever. When operating, the auxiliary hydraulic pump supplies fluid pressure to the subsystems through the system selector valve which is also controlled by the system selector valve which is also controlled by the system selector control lever in the flight compartment. A filter and check valve are installed in the line from the auxiliary pump to the system selector valve.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) An accumulator is installed in the pressure line to the subsystems to provide a reserve supply of fluid and to act as a surge damper for the system.
- (6) Engine-driven pump fluid pressure is routed through the system selector valve to the left power manifold, where it is distributed to some of the subsystems and through the priority valve to the right power manifold. Fluid pressure from the right power manifold is distributed to the remaining subsystems.
- (7) The priority valve is a spring-loaded, poppet-type, balanced relief valve installed in the line downstream of the left power manifold. The priority valve's function in the system is to prevent the flight control systems from reverting to manual operation during high demands on the hydraulic system.
- (8) A fluid pressure transmitter, located in the nosewheel well, senses the system pressure, which is indicated on the hydraulic system pressure indicator in the flight compartment.

**B. Normal Operation**

- (1) Fluid is supplied to the hydraulic system from the pressurized hydraulic system reservoir. For operation of the hydraulic system under normal conditions, 8.1 US gallons (6.7 Imperial gallons; 30.6 liters) of hydraulic fluid are available to the engine-driven hydraulic pumps, and 12.9 US gallons (10.7 Imperial gallons; 48.8 liters) are available to the auxiliary hydraulic pump. Supply lines from the main reservoir carry fluid to each inboard pylon through normally open engine hydraulic fire shutoff valves to the engine-driven hydraulic pumps. Fluid is supplied to the auxiliary hydraulic pump from the main reservoir through a low standpipe at the base of the reservoir. Fluid is carried from the reservoir through the auxiliary pump selector valve to the auxiliary hydraulic pump.
- (2) The engine-driven hydraulic pumps supply full system pressure (3000 psi nominal) at any given engine speed, from idle to full power. The output flow of the pump is varied by sensing pressure from the outlet side of the pump. Each engine-driven pump contains a solenoid-operated bypass valve which, when energized, bypasses the pressure control regulator of the pump and ports fluid to the pump yoke control piston which feathers the pump. When the pump is feathered, flow rate is reduced to almost zero (1.0 gpm) and to a pressure of approximately 300 psi. Half of this flow maintains pump lubrication and cooling through internal leakage. This leakage is returned, through a check valve, the engine-driven pump case drain line filter, and another check valve to the case drain return port of the reservoir. The pressure fluid from each pump passes through a check valve to the dual filter and relief valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

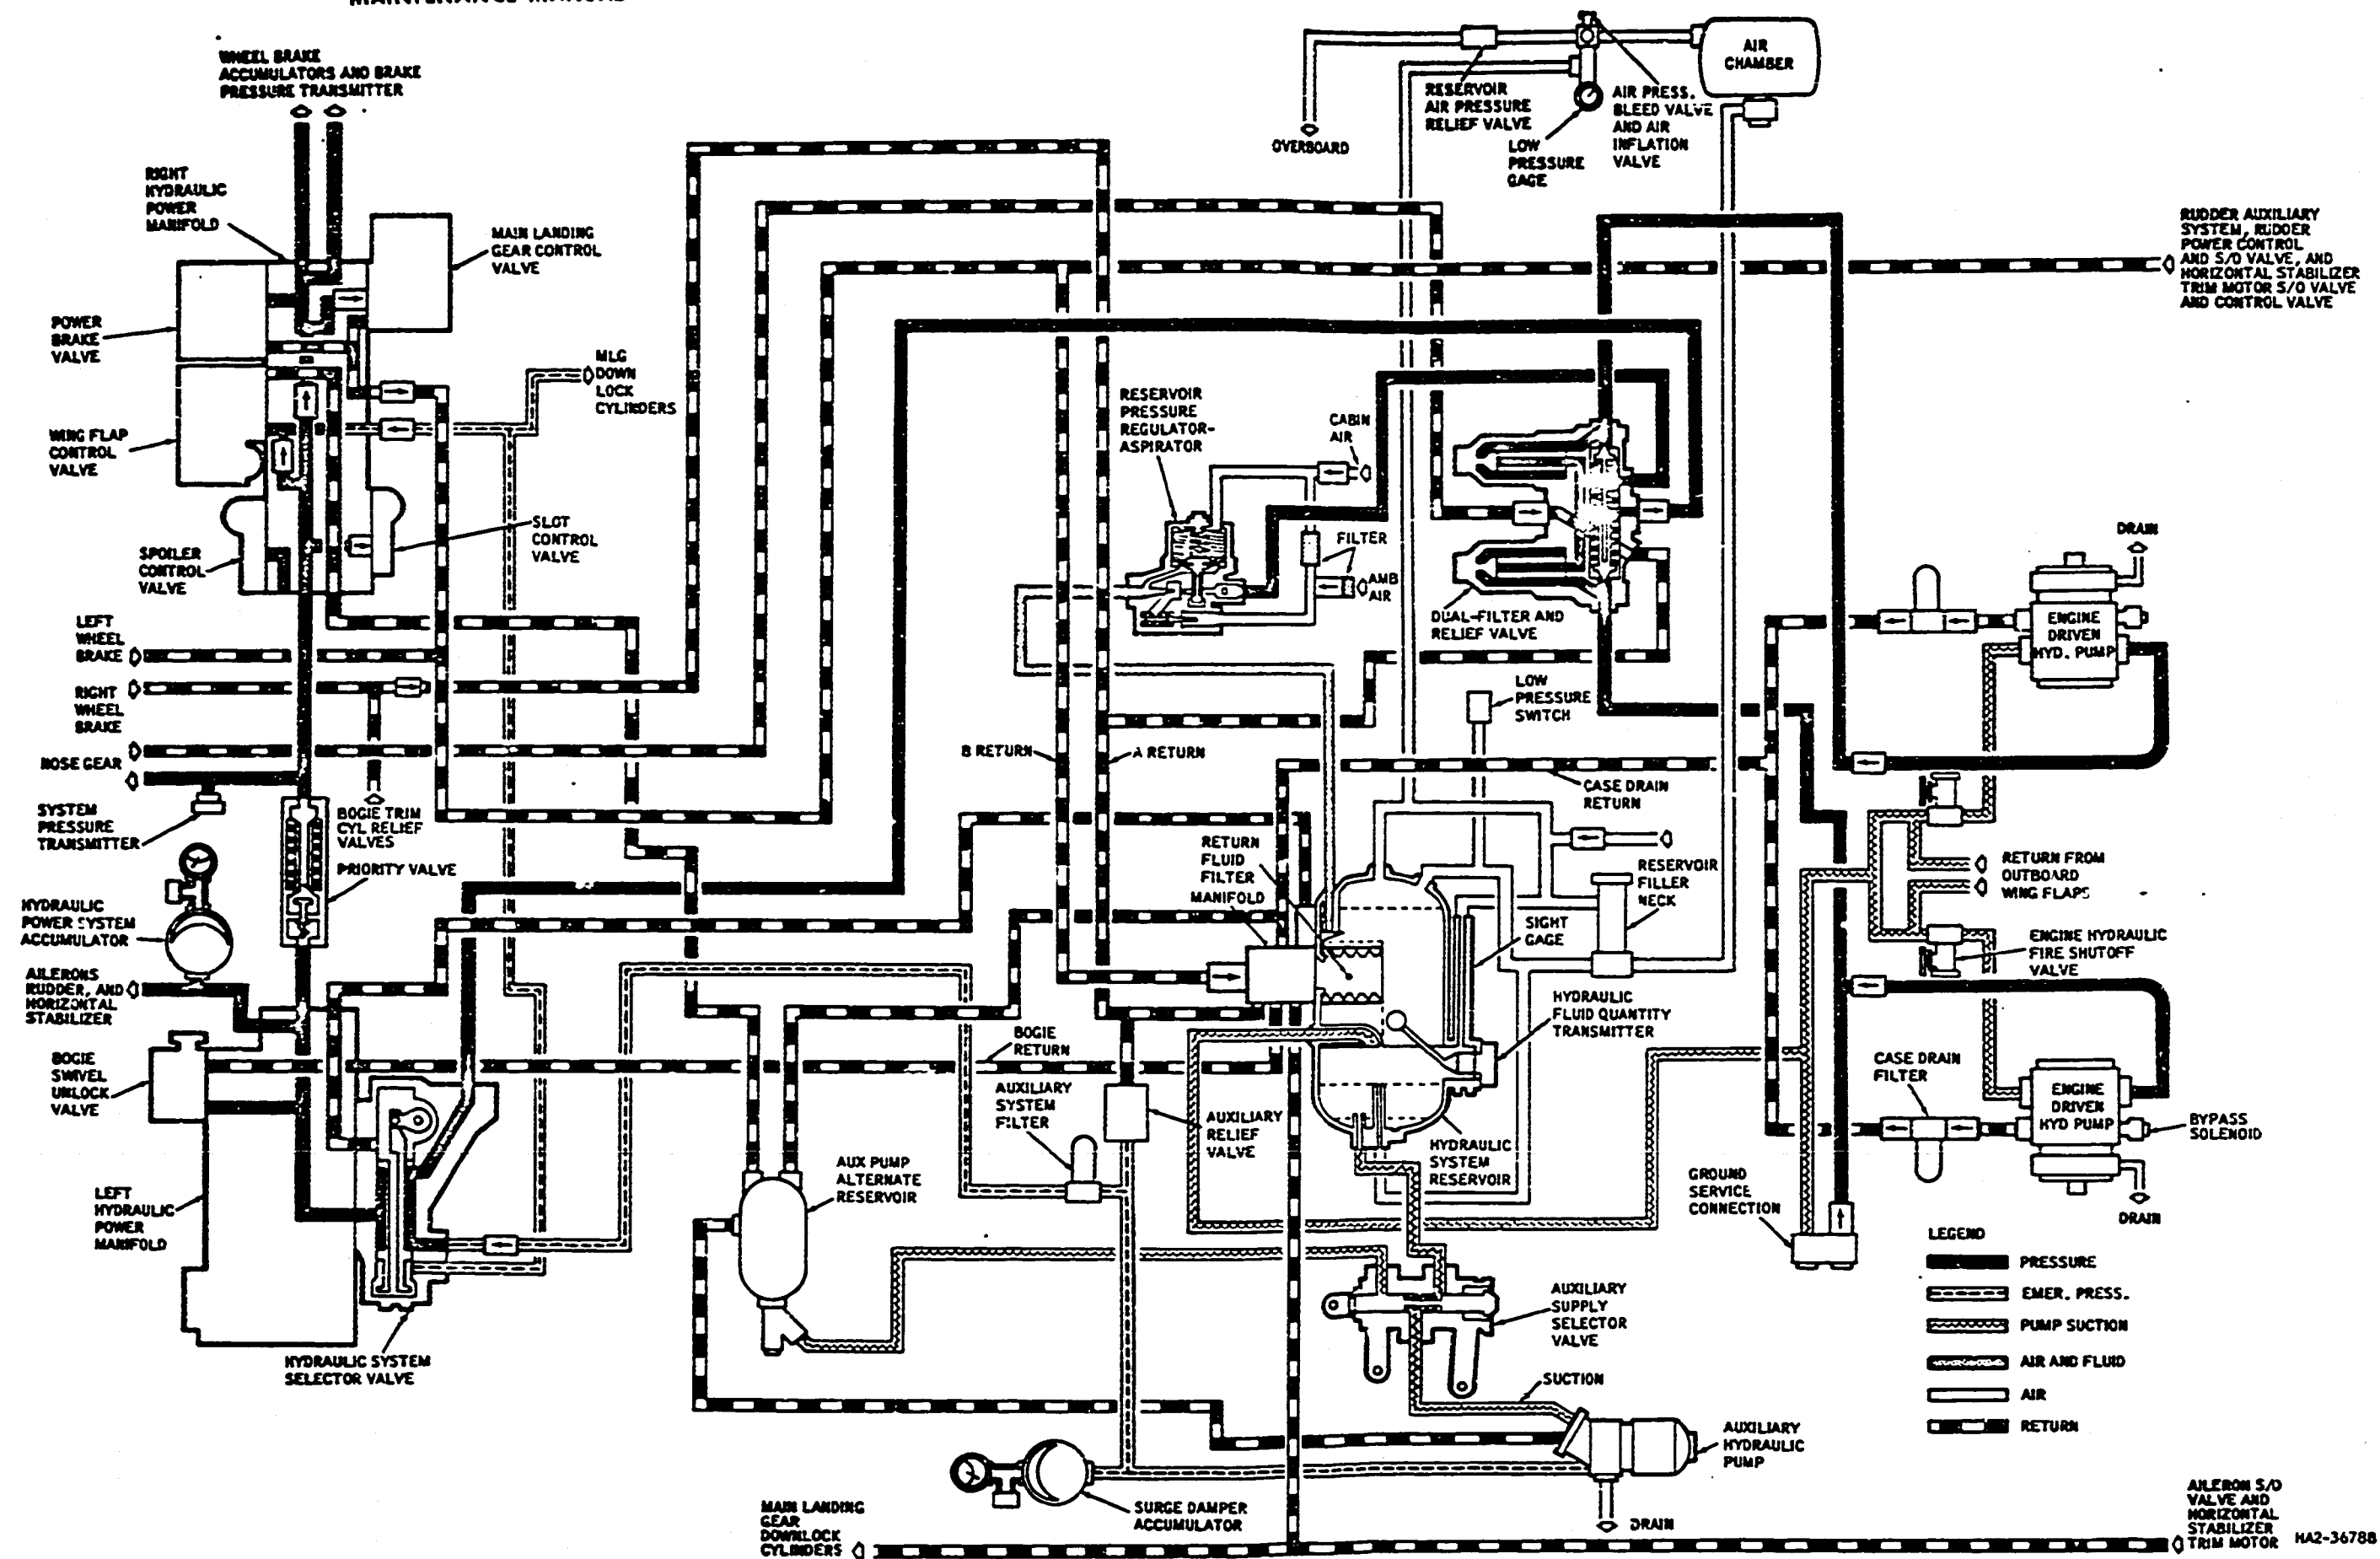

Hydraulic Power System -- Schematic Diagram  
 Figure 1

29-10-0  
 CODE 7  
 Page 3


Jan 15/68

Printed in U.S.A.

AILERON S/O  
 VALVE AND  
 HORIZONTAL  
 STABILIZER  
 TRIM MOTOR HA2-36788



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

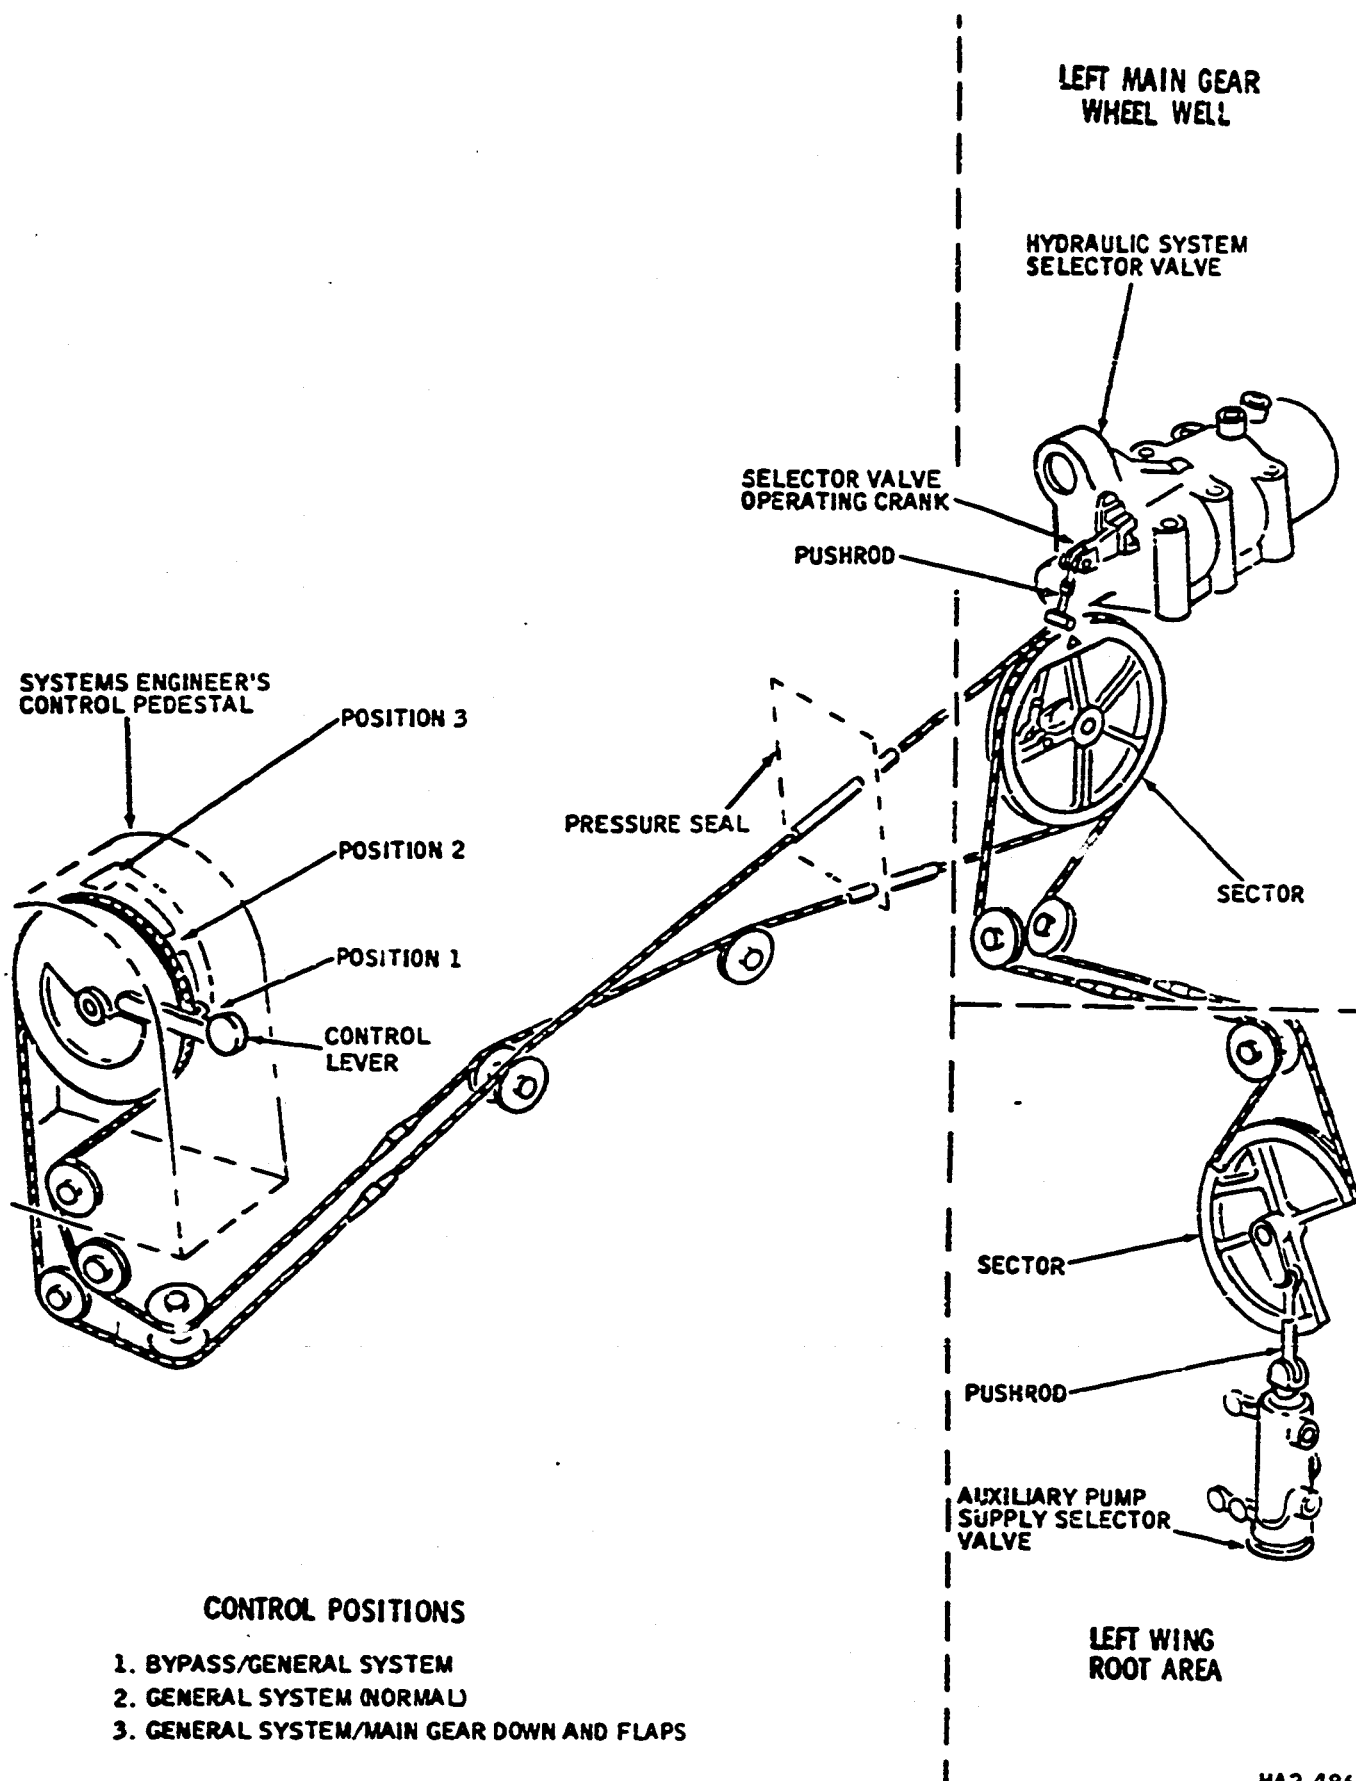

Hydraulic System Selector and Auxiliary Pump Supply  
 Selector Valves -- Mechanical Control Schematic  
 Figure 2

HA2-486

29-10-0  
 CODE 7  
 Page 5

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The fluid enters the dual filter and relief valve through the relief valve chamber. The fluid is passed through the filter element, through a manifold, and through a common outlet port. Fluid from the outlet port is routed through a check valve to the system selector valve. If back pressure in the system builds up to approximately 3300 psi, the relief valves in the dual filter and relief valve open and port fluid back to the reservoir via A return port. The relief valve poppet closes again when system pressure drops to approximately 3000 psi.
- (4) The aspirator receives filtered fluid (bleed pressure at normal 3000 psi) from the dual filter and relief valve. The aspirator operates on the jet pump principle. Hydraulic fluid is atomized and mixed with air within the unit by a nozzle and a venturi. The mixture is used to pressurize the reservoir and reservoir air chamber. The regulator diaphragm and the relief valve maintain 30 to 35 psi in the reservoir and air chamber. If there is a regulator malfunction, the aspirator stalls when the outlet pressure reaches a maximum of 40 psi. A reservoir relief valve in the reservoir vent line relieves thermal expansion pressure above 45 (+5, -0) psi.
- (5) Pump pressure fluid enters the system selector valve through the system pressure inlet port. When the pump selector control lever is in the general system (normal) position, fluid is ported to the pressure passages of the left power manifold. The fluid pressure in the left power manifold is ported through the priority valve to the nose gear and the right power manifold and directly to the following valves:
  - (a) Bogie unlock
  - (b) Aileron power shutoff
  - (c) Rudder power shutoff
  - (d) Longitudinal trim hydraulic motor shutoff
- (6) The right power manifold distributes fluid pressure to the brake accumulators, the pressure transmitter, and the following control valves:
  - (a) Wing flap
  - (b) Slot
  - (c) Main gear
  - (d) Power brake

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (7) The return fluid from the wing flap control valve is ported through the right power manifold and into the auxiliary hydraulic pump alternate reservoir. Return fluid from the outboard wing flaps is piped into the suction lines for each engine-driven hydraulic pump. Return fluid from the slot control valve is ported into the A return line to the main reservoir. The power brake and main gear control valve gear up return fluid is ported through a restrictor check valve into the B return line to the reservoir. The main gear control valve gear down return pressure bypasses the right manifold and returns to the reservoir through the A return line. The return port of the bogie unlock valve ports fluid from the left manifold to the bogie return port of the reservoir. All return fluid entering the reservoir is filtered through the return ports filter located within the reservoir.

C. Bypass Operation

- (1) The output of the engine-driven hydraulic pumps is bypassed by moving the system selector control lever out of the general system (normal) position to the bypass/general system position.
- (2) The system selector valve in the bypass position ports engine-driven pump pressure from the dual filter and relief valve directly to the return passage of the left power manifold. From the manifold, the fluid is ported directly to a tee in the wing flap return port of the hydraulic system reservoir. In the bypass condition, the auxiliary hydraulic pump receives fluid from the hydraulic system reservoir, pressurizes it to system pressure, and ports it to the left and right power manifolds for distribution to the subsystems.

D. Alternate Operation

- (1) When both engine-driven hydraulic pumps and the auxiliary hydraulic pump are rendered inoperative due to the loss of the normal supply of fluid, the hydraulic power system can be rigged for alternate operation. This is accomplished by placing the system selector control lever in the general system/main gear downlock and flaps position. When the system selector control lever is in this position, the auxiliary hydraulic pump supply selector valve is positioned to supply fluid from the auxiliary pump alternate reservoir to the auxiliary pump.
- (2) Fluid is supplied to the auxiliary pump from the outlet port of the auxiliary pump supply selector valve. Output pressure is ported through the auxiliary system filter and check valve to the auxiliary pressure inlet port of the system selector valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) In the general system/main gear downlock and flaps position, auxiliary pump pressure bypasses the manifold pressure passages and is ported from the alternate outlet port of the system selector valve. Fluid from this port flows directly to a port on the right power manifold, through an internal check valve in the manifold, to the wing flap control valve. A line, teed into the alternate supply line, runs directly to a shuttle valve in the main gear downlock cylinder line. When auxiliary pressure is applied, the shuttle valve shifts, porting fluid into the downlock bungee cylinder's downlock side.

E. Mechanical Control

- (1) The hydraulic power mechanical control system consists of the hydraulic system selector control lever cable drum, the system selector valve sector, the system selector valve, the auxiliary hydraulic pump supply selector valve sector, and the auxiliary hydraulic pump supply selector valve.
- (2) The control lever located on the system engineer's control pedestal is used to position the system selector valve and, in turn, the auxiliary hydraulic pump supply selector valve.
- (3) The control lever is spring loaded into general system (normal) position, and is connected to the control lever cable drum. Two cables run from the drum, under the cabin floor, aft through the pressure bulkhead at the rear wing spar, and into the left wheel well to the system selector valve sector. A pushrod connects the sector to the positioning lever of the system selector valve.
- (4) A second set of cables is routed from the system selector valve sector into the left wing root to the auxiliary hydraulic pump supply selector valve sector. When the system selector valve is in either bypass or normal, the auxiliary hydraulic pump supply selector valve sector is arranged so that the pushrod idles between the two positions. This allows the valve to remain in the auxiliary position. When the sector is moved to the alternate position, the pushrod is pulled by the sector to reposition the valve to the alternate position.
- (5) The control lever is normally in the general system (normal) position. To move the system selector valve to the bypass position, the control lever is moved to the bypass/general system position. When the system selector valve is moved to the bypass position, the auxiliary hydraulic pump supply selector valve sector is moved to a new position. Due to the idle feature on the auxiliary sector, the valve remains in the auxiliary position. With the valve in this position, fluid is supplied to the auxiliary pump through the low standpipe in the hydraulic system reservoir. In this condition, engine-driven pump pressure is ported to the reservoir and the auxiliary pump pressure is ported to the general system.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (6) To put the system in alternate operation, the control is moved to the general system/main gear downlock and flaps position. This moves the system selector valve to the alternate position, and simultaneously moves the auxiliary hydraulic pump supply selector valve to the alternate position. Fluid is supplied to the auxiliary pump from the auxiliary hydraulic pump alternate reservoir. Fluid pressure from the auxiliary pump is ported to the flap system control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported from the system selector valve to the general system.

## 2. System Components

### A. Hydraulic System Reservoir (See Figures 3 and 4.)

- (1) The hydraulic system reservoir is installed on the aft side of the wing rear spar in the left wing root and is accessible through the left wing root access door. The hydraulic system reservoir serves as the main source of hydraulic fluid for the engine-driven hydraulic pumps and the normal supply for the auxiliary hydraulic pump. The reservoir is cylindrical in shape and contains a filter, baffle, and a screen cover encasing the filter. The filter prevents foreign particles from contaminating the fluid supply. Mountings are provided on the exterior surface of the reservoir for return line ports, aspirator port, electrical sensing units, sight gage, instruction placards, magnetic drain plug, and system supply ports.
- (2) The reservoir is pressurized with air from the regulator-aspirator to between 30 and 35 psi and has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir volume is used for fluid and 1/10 is used for foam space.
- (3) The aspirator port through which the reservoir is pressurized is located in the recess on top of the reservoir. An aspirator-deaerator filter is supported in the reservoir by a screen and support box assembly which is mounted to the reservoir wall by two bolts.
- (4) The mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The return ports manifold is an open-centered ring, flanged at both sides and provided with five fluid ports around its circumference; return port A is located at the bottom, return port B is located at the lower right side, the wing flap return port is located at the upper left side, and the system selector valve bypass port is located at the top. One flange of the manifold is mounted with six bolts to the mounting flange on the reservoir. The return fluid filter cover fits into the open side of the manifold, and is attached to the outer manifold flange with six bolts to form a fluid-tight cover for both the manifold and the filter.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

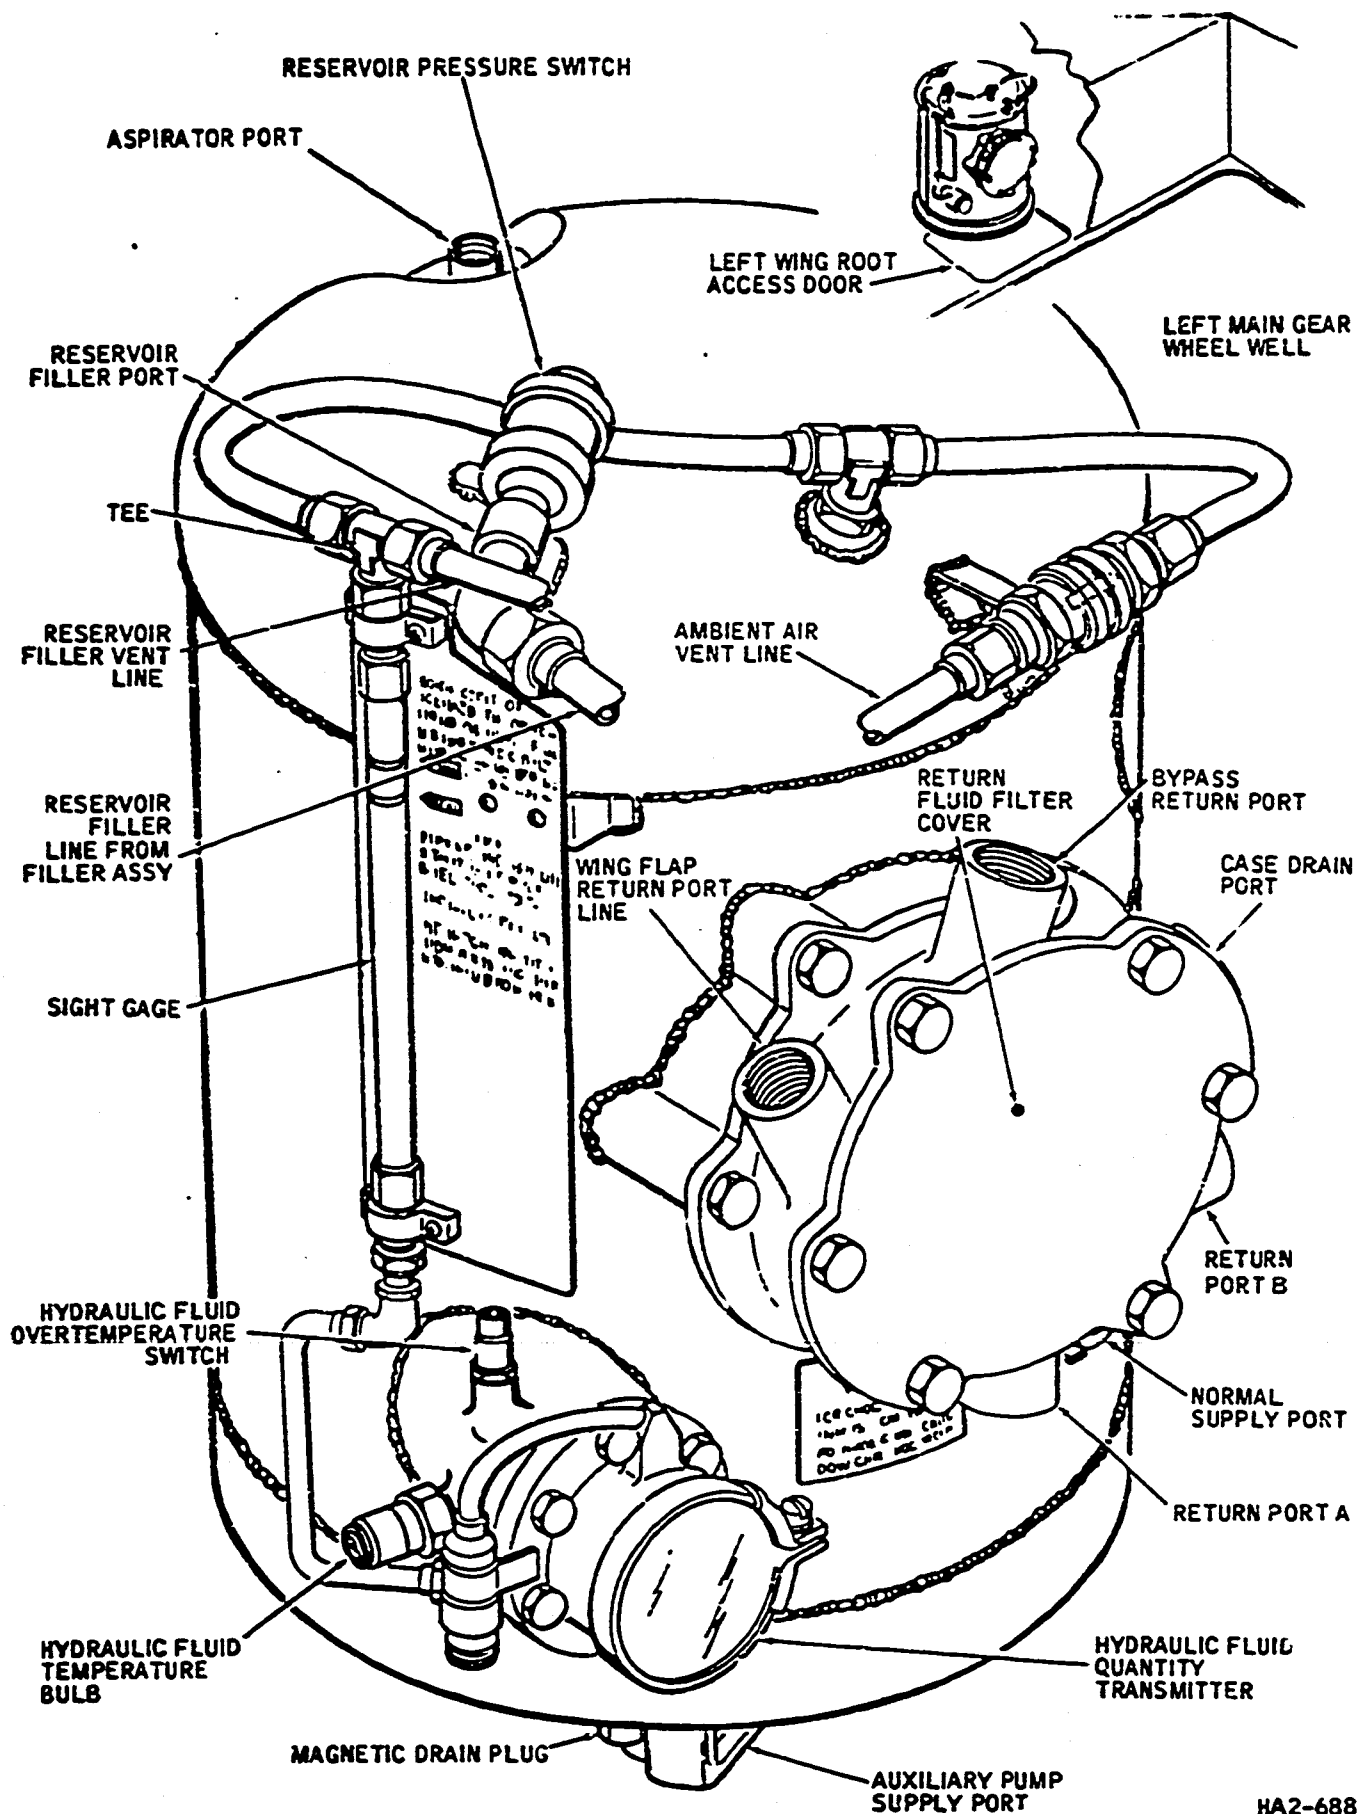

HA2-688


Hydraulic System Reservoir -- External View  
 Figure 3

29-10-0  
 CODE 7  
 Page 10

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

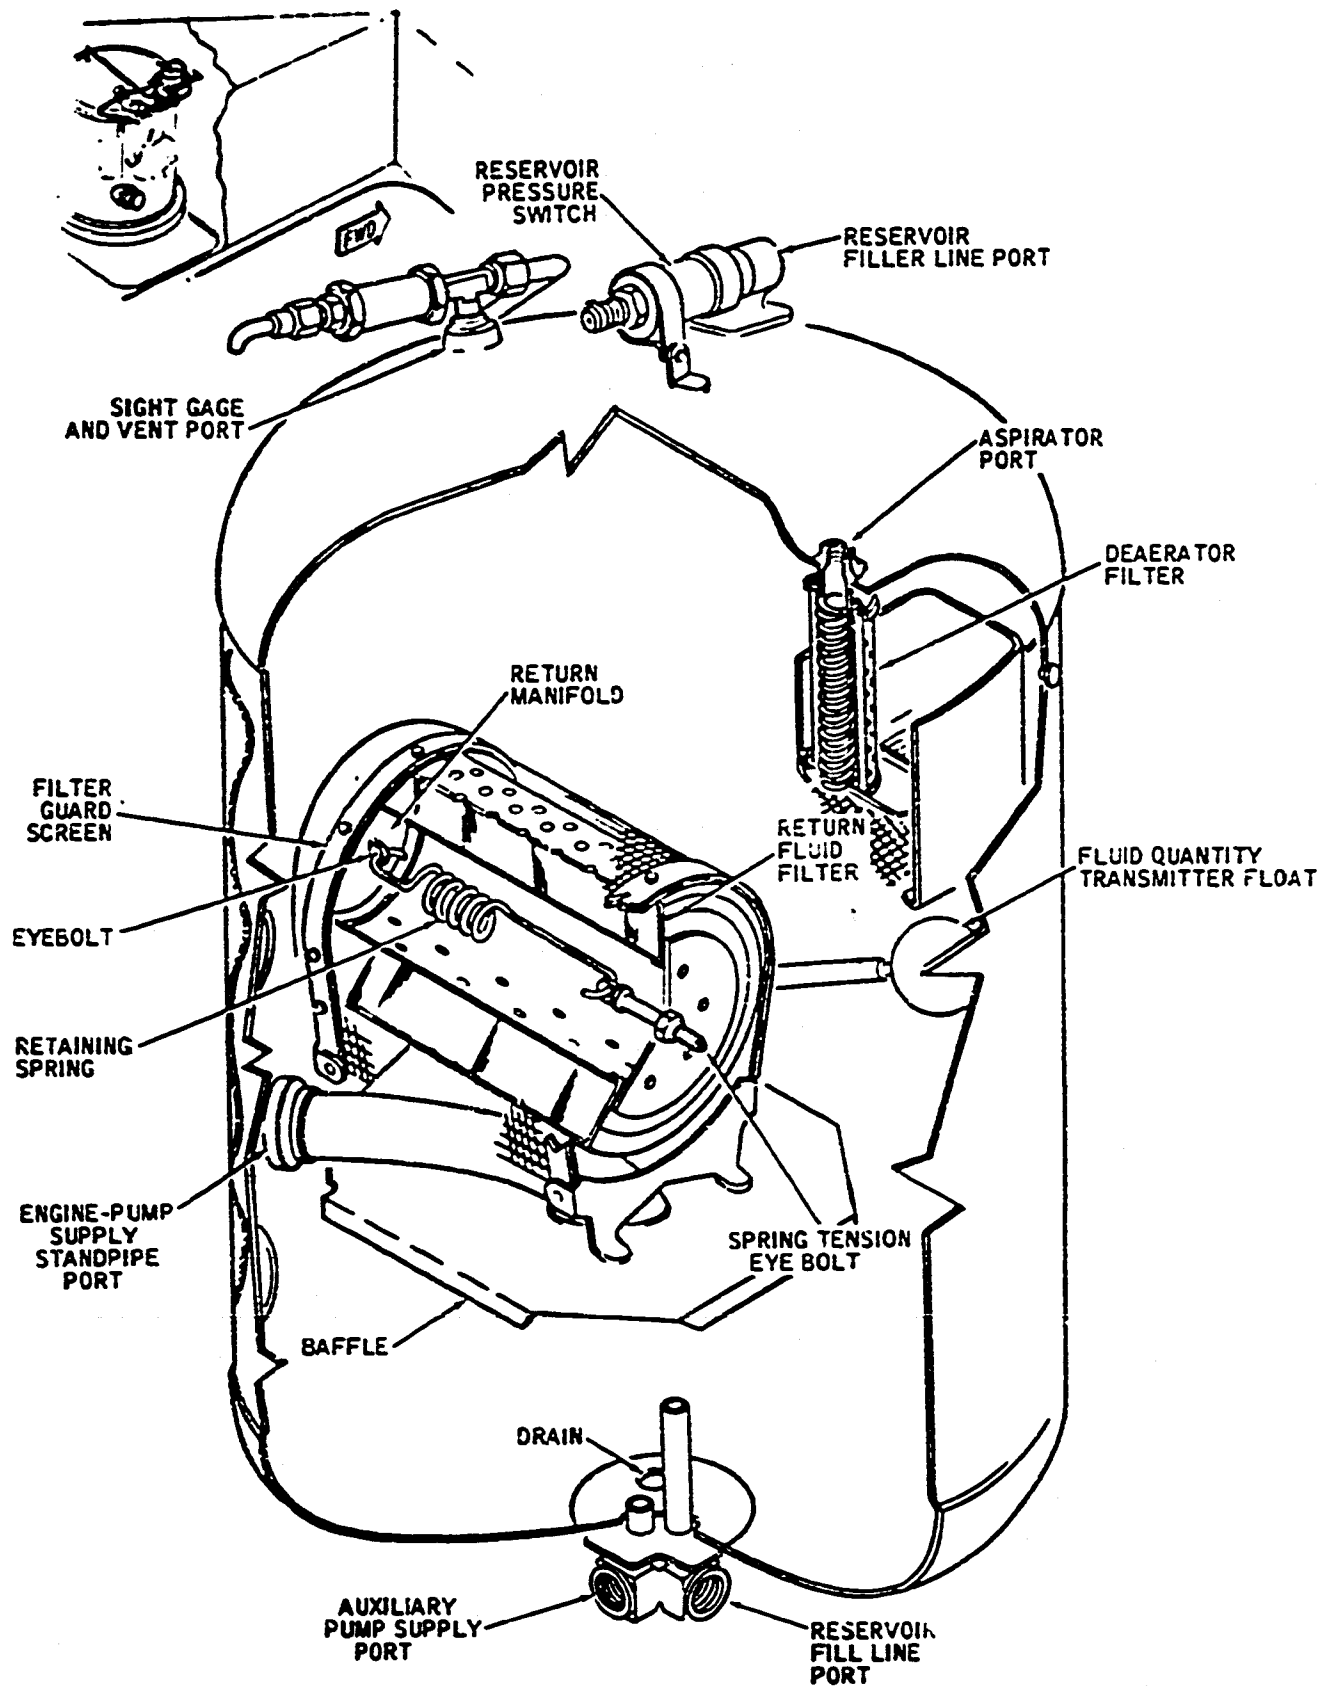

Hydraulic System Reservoir -- Cutaway View  
 Figure 4

HA2-689

29-10-0  
 CODE 7  
 Page 11

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) The return fluid filter is installed in the reservoir, behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the return fluid filter cover holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to the engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
- (6) A flanged adapter for the fluid quantity transmitter is welded to the reservoir below and to the left of the return ports manifold. The adapter is provided with two small port bosses for the hydraulic fluid temperature bulb and the hydraulic fluid overtemperature switch. The lower end of the sight gage connects to a third port in the adapter, while the top of the sight gage tees into a port at the top of the reservoir. An instruction plate is mounted behind the sight gage and the vacuum breaker check valve tees into the port at the top of the reservoir that is used by the sight gage.

B. Hydraulic Reservoir Return Fluid Filter (See Figure 4.)

- (1) The reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply. The filter is located behind the return ports manifold, and is spring loaded to act as its own relief valve. Access to the filter is by removing the return fluid filter cover from the return ports manifold by removal of six bolts. The filter is attached by the retaining spring to the cover and is withdrawn from the reservoir when the cover is removed.
- (2) Externally, the filter consists of two perforated concentric tubes. The area between the tubes is closed by metal end caps which are bonded to the two tubes. A resilient rubber gasket is bonded to each of the caps. Each gasket must be smooth and flat for proper sealing of the filter. The gaskets act as a static seal and a relief valve seat.
- (3) Internally, the filter has a 10-micron, resin-impregnated, convoluted paper-type filter element. The area of the filter element is approximately 1960 square inches. The filter is held in place by a retaining spring. One end of the spring is attached to an eyebolt located inside the return port's manifold cover. The spring passes through the center chamber of the filter and is connected to another eyebolt. This eyebolt is secured to a large washer and plate by means of a self-locking nut. The washer seats on the rubber gasket which is bonded to the filter. The fluid enters the center chamber of the filter and passes through the inner tube of the filter to the filter element by means of perforation holes. Foreign matter is filtered out by the filter element, and the fluid leaves the element through perforation holes in the outer tube. When the element becomes saturated with foreign matter, the filter acts as its own relief valve and unseats at 20 to 25 psi above normal return pressure which allows fluid to bypass the filter and enter the reservoir.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

C. Hydraulic Reservoir Air Pressure Regulator-Aspirator (See Figure 5.)


- (1) The reservoir air pressure regulator-aspirator is a jet-type air pump, regulated by a pressure-sensitive shutoff valve. The unit pressurizes the hydraulic reservoir with air to the operating pressure of 30 to 35 psi. The regulator-aspirator is located on the top inboard side of the reservoir and is mounted on the reservoir retainer ring. Access to regulator-aspirator is through the left wing root access door.
- (2) The regulator-aspirator assembly consists of a main aspirator body and a regulator housing. The main aspirator body has two inlet ports and one outlet port. The ports are permanently stamped inlet, outlet, and air inlet. The plug for an air check valve is located near the outlet port. A chemically treated paper filter is installed near the aspirator body air inlet port in the air line from the pressurized cabin area. A metal screen filter is installed on the check valve which tees into the aspirator body air inlet port.
- (3) The reservoir air pressure regulator-aspirator operates basically with a jet pump action which is regulator controlled. Fluid enters the assembly through the fluid inlet port where it is filtered and then ported through the valve assembly of the regulator. When air pressure at the outlet port is under 30 psi, the valve is open, porting fluid to the nozzle. The orifice in the nozzle sprays the fluid through the venturi of the outlet port, creating a vacuum in the chamber around the venturi. When the vacuum becomes great enough to create a pressure differential of approximately 1 psi, ambient air opens the air check valve. The air is ported to the chamber around the venturi and is siphoned, with the fluid, through the outlet port.
- (4) Hydraulic fluid inlet pressure at the engine-driven hydraulic pumps is improved at high altitude operation by supplying pressurized filtered cabin air to the reservoir regulator-aspirator instead of ambient outside air. Part of the inlet air is diverted by a tee fitting to the regulator chamber to provide a more positive regulating force on the diaphragm than would be obtained with low ambient pressures. The chemically treated paper filter, installed in the regulator-aspirator air supply line from the cabin, removes smoke tars and impurities from the pressurized cabin air. The steel mesh screen filter, installed on the check valve which tees into the regulator-aspirator air inlet port downstream of the paper filter, removes dust, dirt, and foreign particles from the ambient air and serves as a standby to supply filtered air in event the paper filter is clogged.
- (5) As pressure in the reservoir builds up, back pressure is bled from the outlet port to the diaphragm chamber. The reaction on the diaphragm begins to move the slide valve to cut off the fluid flow. At 30 to 35 psi of back pressure, the diaphragm completely closes the slide valve, cutting off the flow of fluid. If there is a regulator malfunction, the aspirator stalls when outlet pressure reaches a maximum of 40 psi.

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 7  
Page 13

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

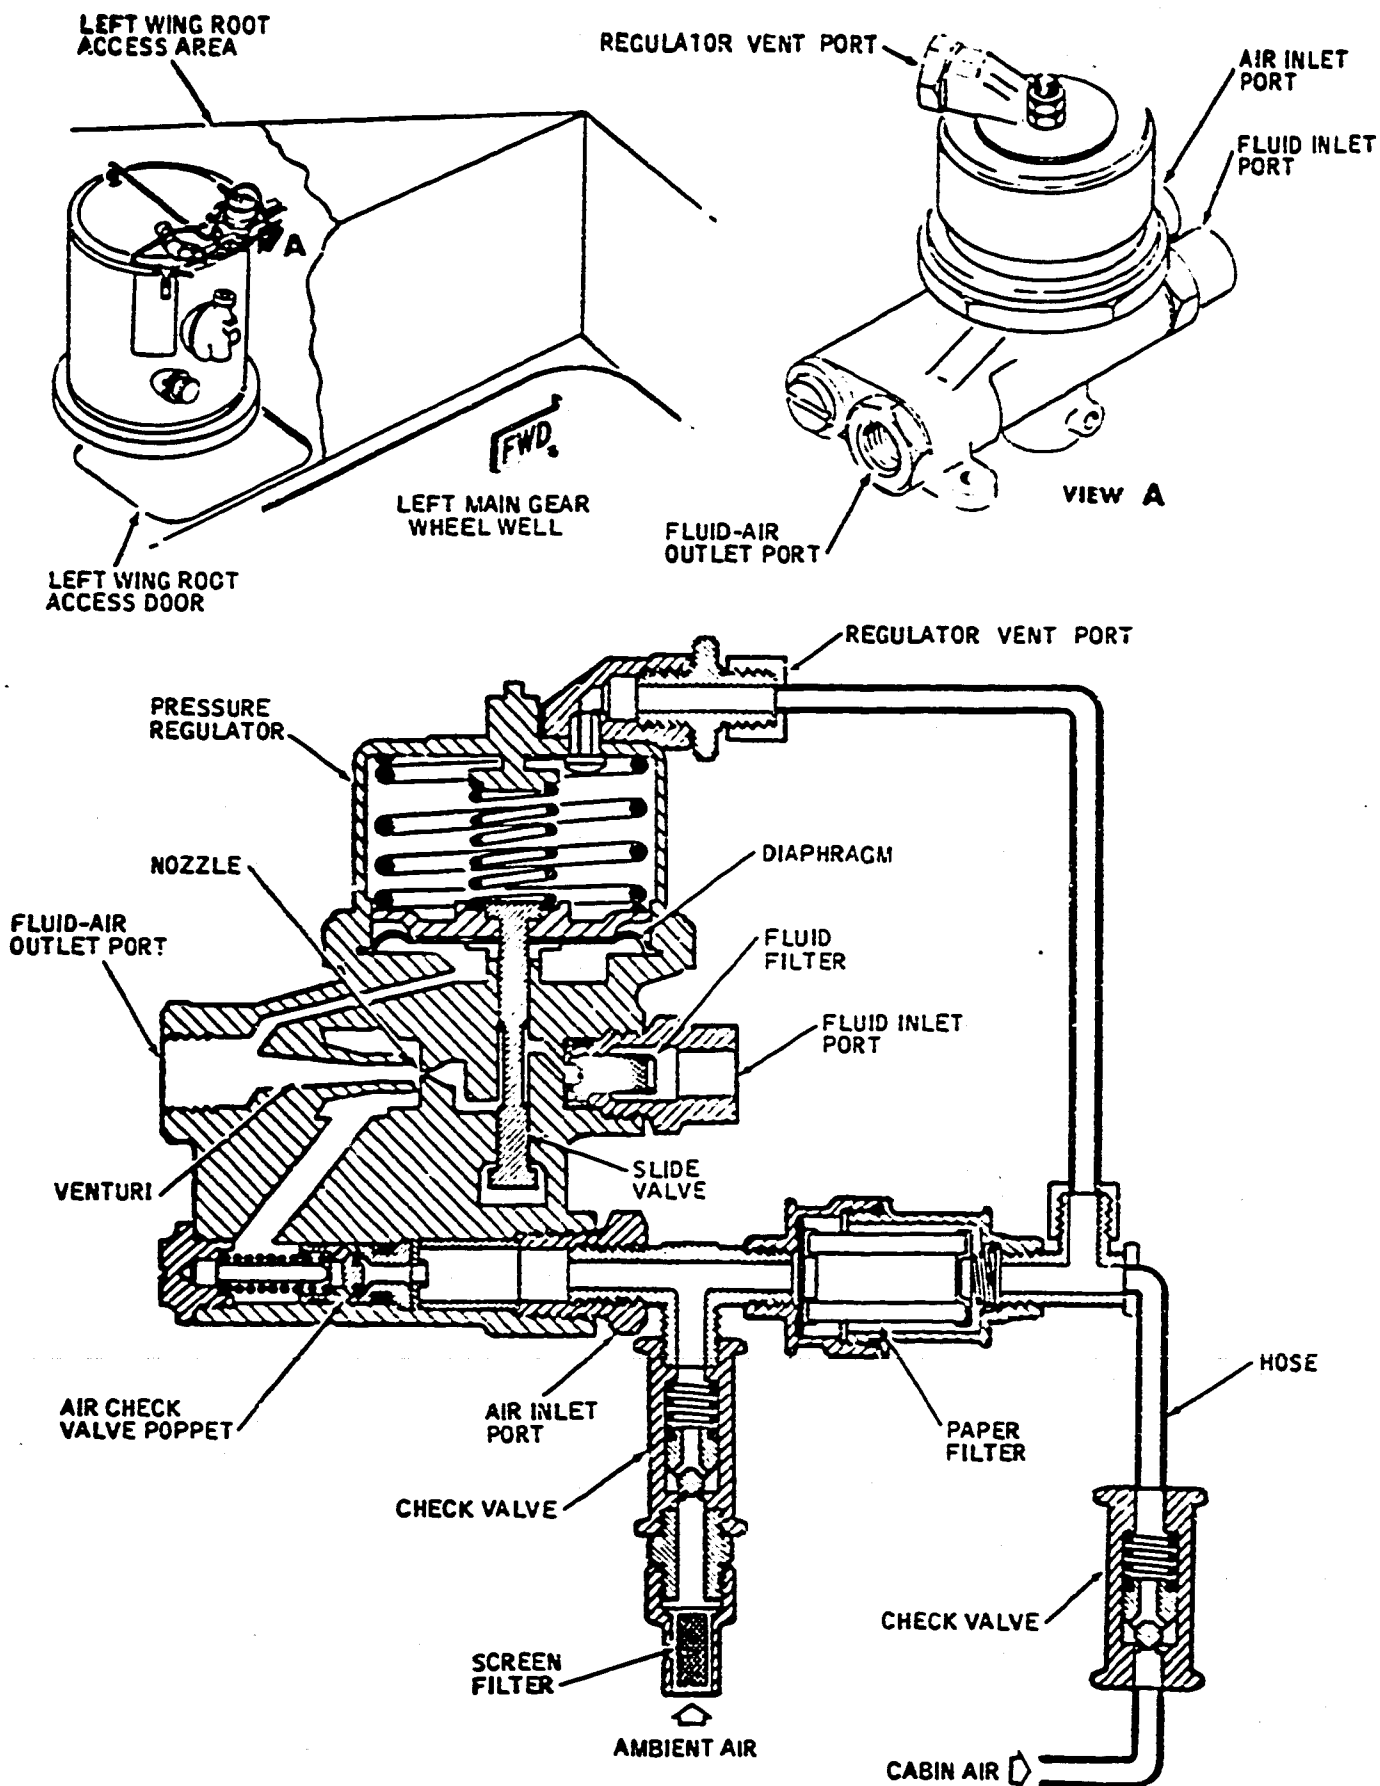

Reservoir Air Pressure Regulator-Aspirator --  
 Schematic  
 Figure 5

HA2-25

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) The aspirator is capable of pressurizing the reservoir to 30 to 35 psi in approximately 4 minutes at altitudes from sea level to 15,000 feet, when fluid is ported through the nozzle at 0.5 gpm at 3000 psi.

**D. Regulator-Aspirator Air Filters (See Figure 6.)**

- (1) The regulator-aspirator air filters remove ambient and cabin air impurities from the air which is used to pressurize the main hydraulic system reservoir. The filtering system is composed of two filters. One of which is a paper element filter, installed directly in the cabin air supply line near the regulator-aspirator. The other filter is a fine mesh, screen-type filter, installed on a check valve and positioned at right angles to the regulator-aspirator air inlet port. The screen filter, in addition to providing an immediate supply of ambient air during ground operations, serves as a standby air inlet to preclude air starvation of the regulator-aspirator in the event the paper element filter becomes clogged.


**E. Hydraulic Reservoir Relief Valve (See Figure 7.)**

- (1) The reservoir relief valve and the air pressure aspirator-regulator keep the reservoir pressurized to normal operating range. The valve relieves excess air pressure which may build up in the reservoir through thermal expansion in the system. The valve has an inlet port and an outlet port and consists, internally, of an inlet port seat and a spring-loaded poppet.
- (2) The relief valve is installed in the overboard vent line downstream of the hydraulic reservoir air bleed valve. In the event that excess pressure builds up in the reservoir, the poppet will start to relieve at 45 (+5, -0) psi. Full flow of 10 gpm is attained at 80 psi maximum. The poppet reseats at 90 percent of the opening pressure.


**F. Hydraulic Reservoir Air Bleed Valve (See Figure 8.)**

- (1) The hydraulic reservoir air bleed valve and pressure gage are located on the aft side of the rear spar in the left main gear wheel well, inboard of the hydraulic reservoir air chamber. The bleed valve and gage are installed in the overboard vent line, between the reservoir air chamber and the reservoir relief valve.
- (2) The bleed valve is used to relieve the reservoir air pressure prior to disconnecting lines or components in the hydraulic system. The pressure gage provides a ready indication of the hydraulic reservoir air pressure and is used in conjunction with the bleed valve to indicate the air pressure status.
- (3) The air inflation valve is installed on the same fitting as the bleed valve and pressure gage. The air inflation valve is used to manually charge the reservoir with air or dry nitrogen.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

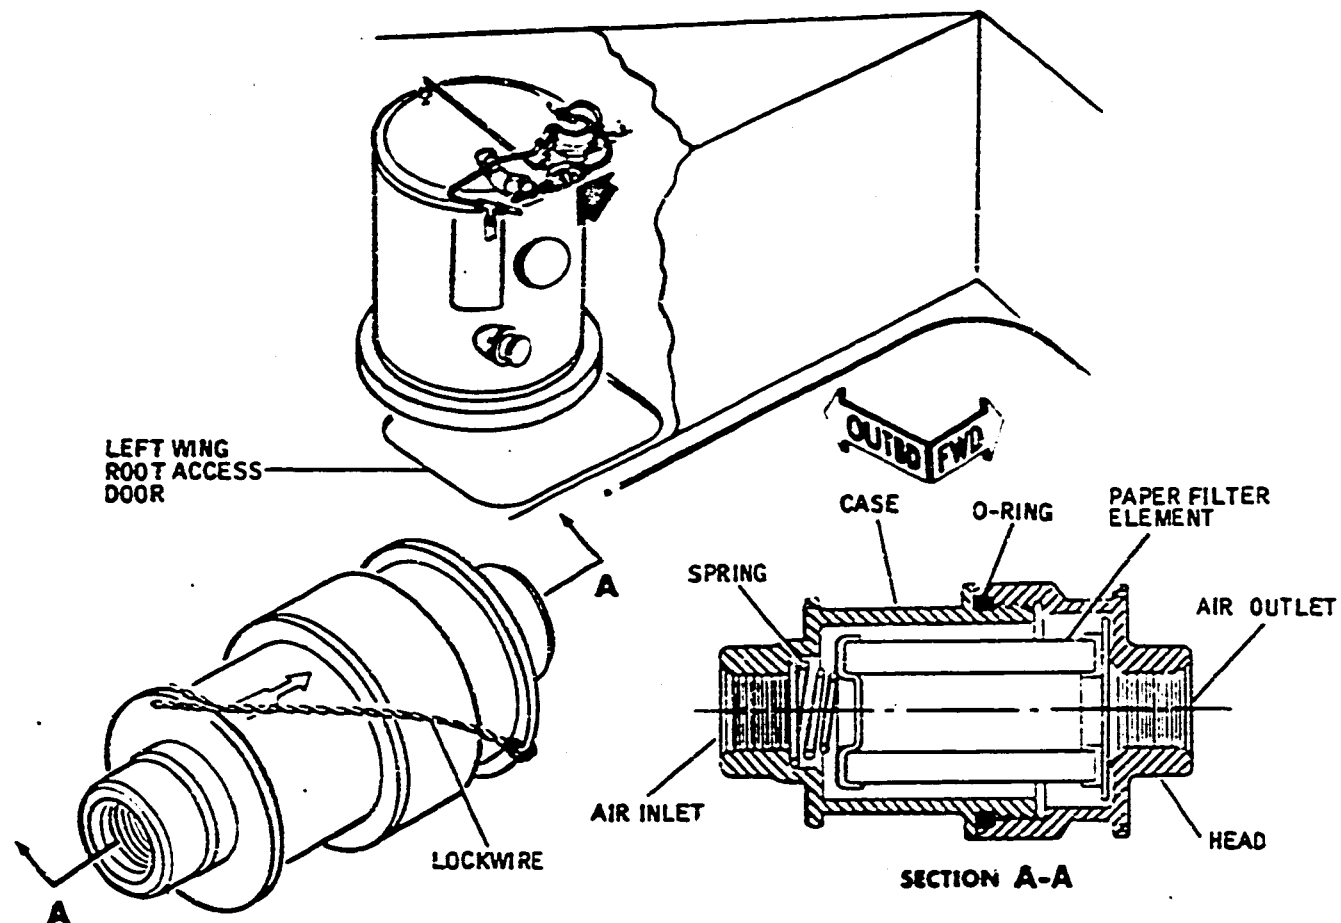

PAPER ELEMENT FILTER




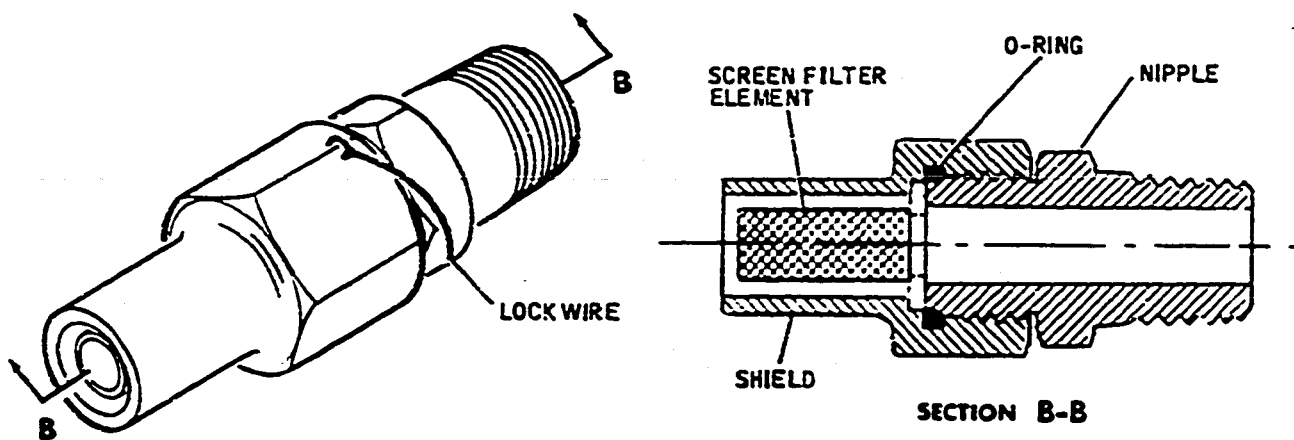


SCREEN FILTER

Regulator-Aspirator Air Filters --  
 Cutaway View  
 Figure 6

HA2-35

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

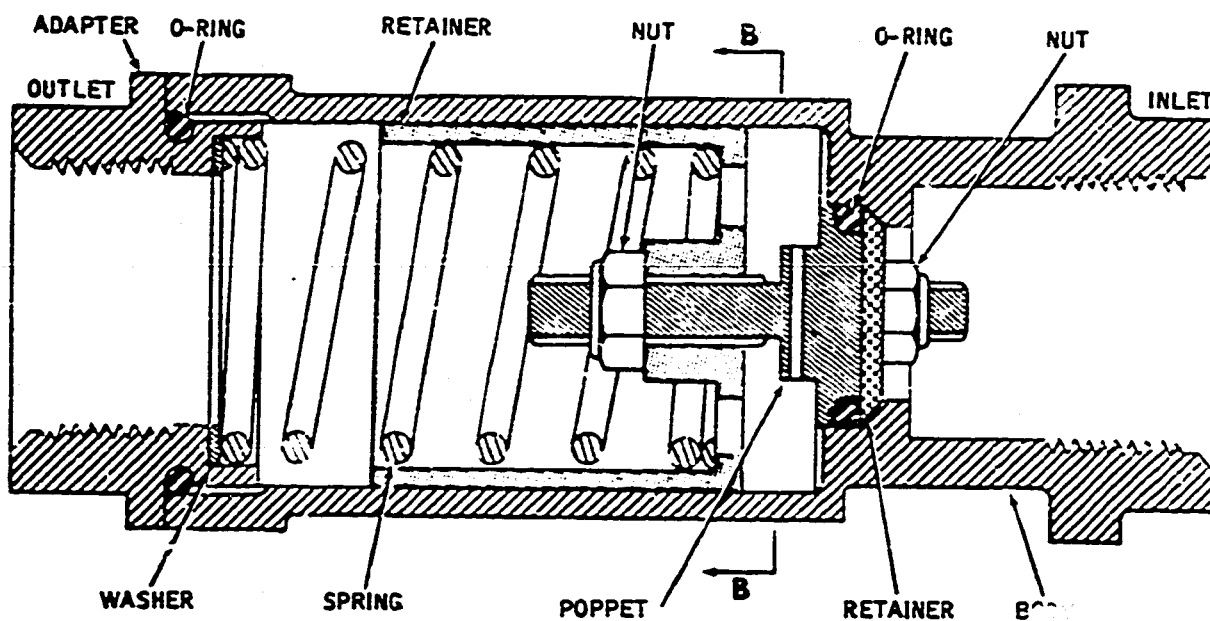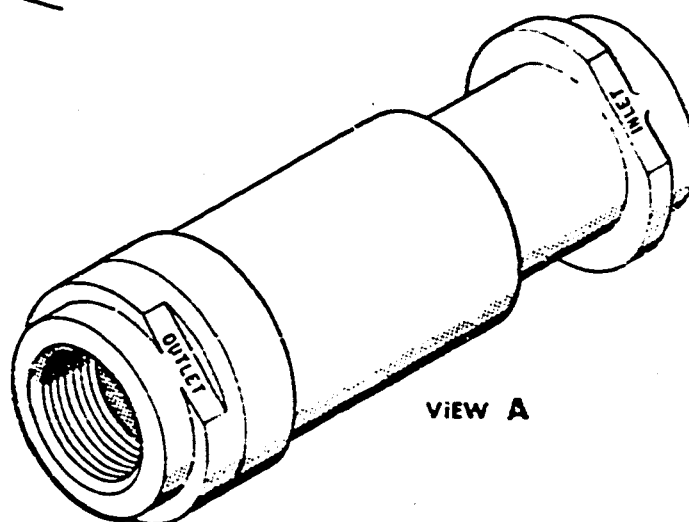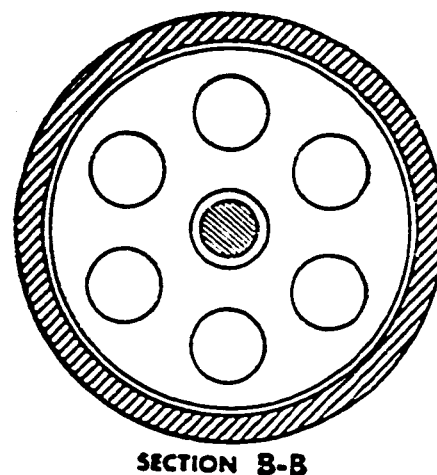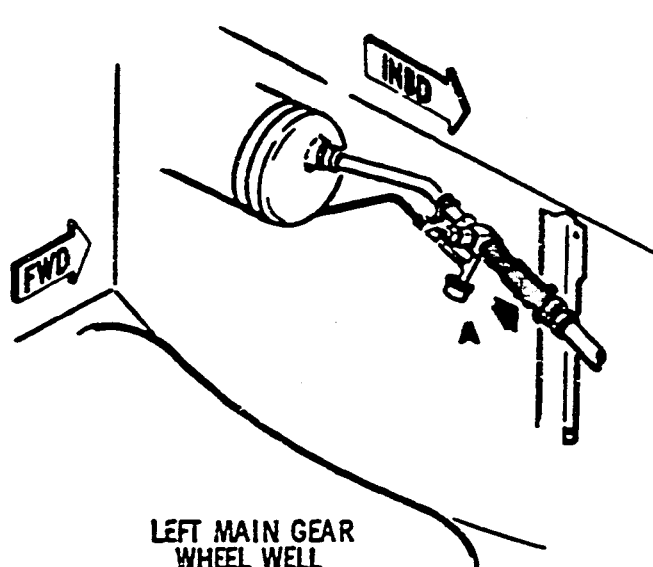

Hydraulic Reservoir Relief Valve  
 Figure 7


HA2-17

29-10-0  
 CODE 7  
 Page 17

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

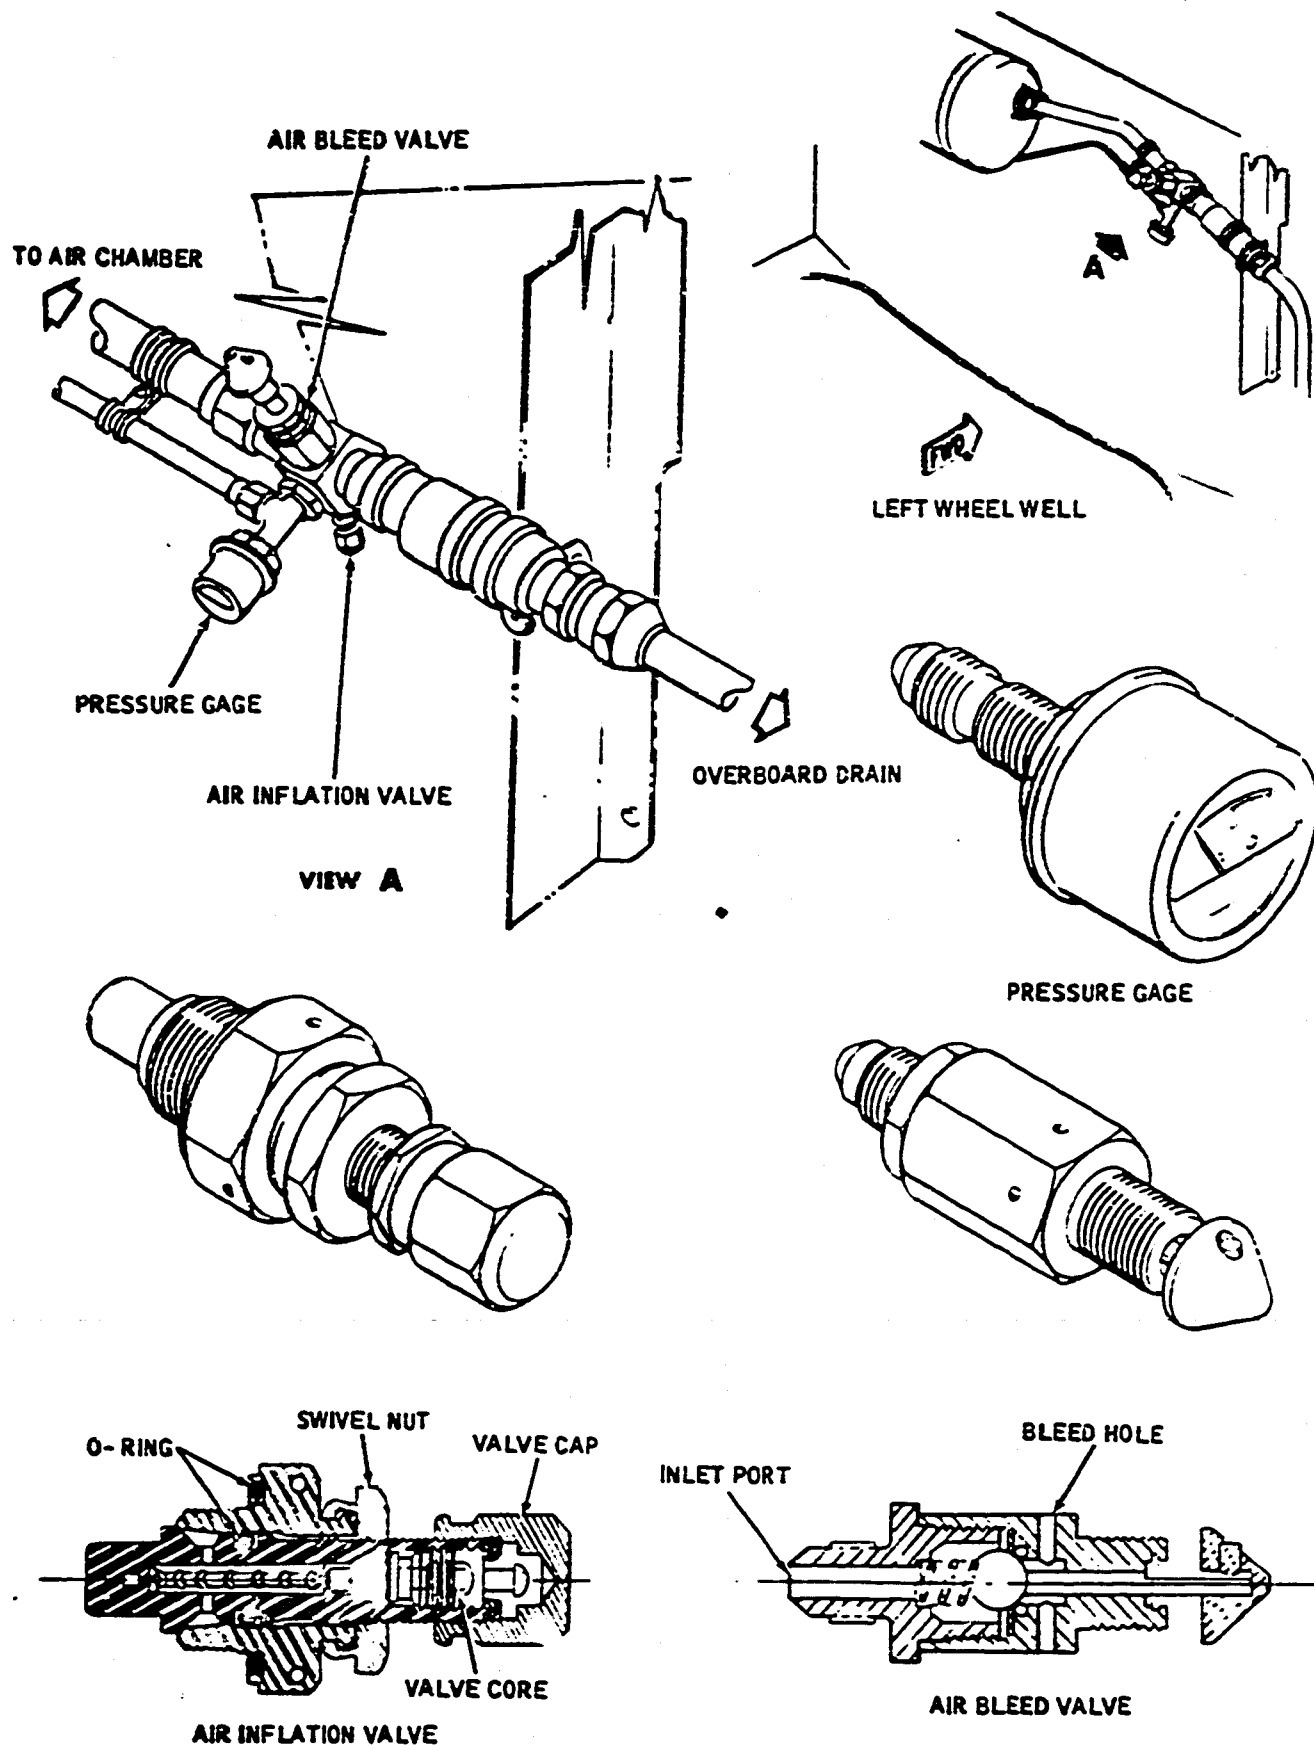

Reservoir Air Bleed Valve, Air Inflation  
 Valve, and Pressure Gage  
 Figure 8

HA2-32

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

G. Hydraulic Reservoir Vacuum Breaker Check Valve (See Figure 9.)

- (1) The hydraulic reservoir vacuum breaker check valve is installed on the regulator-aspirator mounting bracket, and connects to the tee fitting at the top of the reservoir. The valve is vented to ambient air. The purpose of this valve is to maintain atmospheric pressure in the reservoir, allowing hydraulic fluid to flow to the auxiliary hydraulic pump in the event of a failure of the reservoir pressurization system. The failure, or breakdown, of the pressurization system could cause a fluid starvation at the auxiliary hydraulic pump because of vacuum buildup in the reservoir.


H. Hydraulic Reservoir Air Chamber

- (1) The hydraulic reservoir air chamber is a small, cylindrical tank with a capacity of 700 cubic inches. It has two ports, an inlet port at the bottom of the chamber and an outlet port in one end of the chamber. The inlet port mounting boss is fitted with a drain plug. The air chamber is installed on the aft side of the rear spar in the left main gear wheel well, inboard and above the hydraulic reservoir filler assembly. Access to the air chamber is through the left main gear inboard door.
- (2) The air chamber provides for greater fluid capacity in the hydraulic reservoir by providing air and foam space for the reservoir in a separate container. Air pressure in the chamber is maintained by the regulator-aspirator and the air relief valve. The air pressure in the chamber and reservoir can be relieved, when desired, by the air bleed valve located downstream of the chamber. The air chamber is mounted higher than the reservoir filler assembly, to prevent overfilling of the reservoir from reducing the available air space and to prevent fluid from being vented overboard through the reservoir relief valve.

I. Hydraulic Reservoir Port B Return Check Valve (See Figure 10.)

- (1) The reservoir port B return check valve is installed in port B of the reservoir to prevent reverse flow of hydraulic fluid from the reservoir to the return line. The check valve is located on the reservoir in the left wing root and is accessible through the left wing root access door.
- (2) Externally and internally, the port B check valve is a standard-type check valve with a 1500-psi rating. A nominal pressure of approximately 8 psi unseats the poppet, permitting fluid to flow through the valve. When the reservoir pressure exceeds the return line pressure, the poppet will seat and reverse fluid flow will be prevented.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

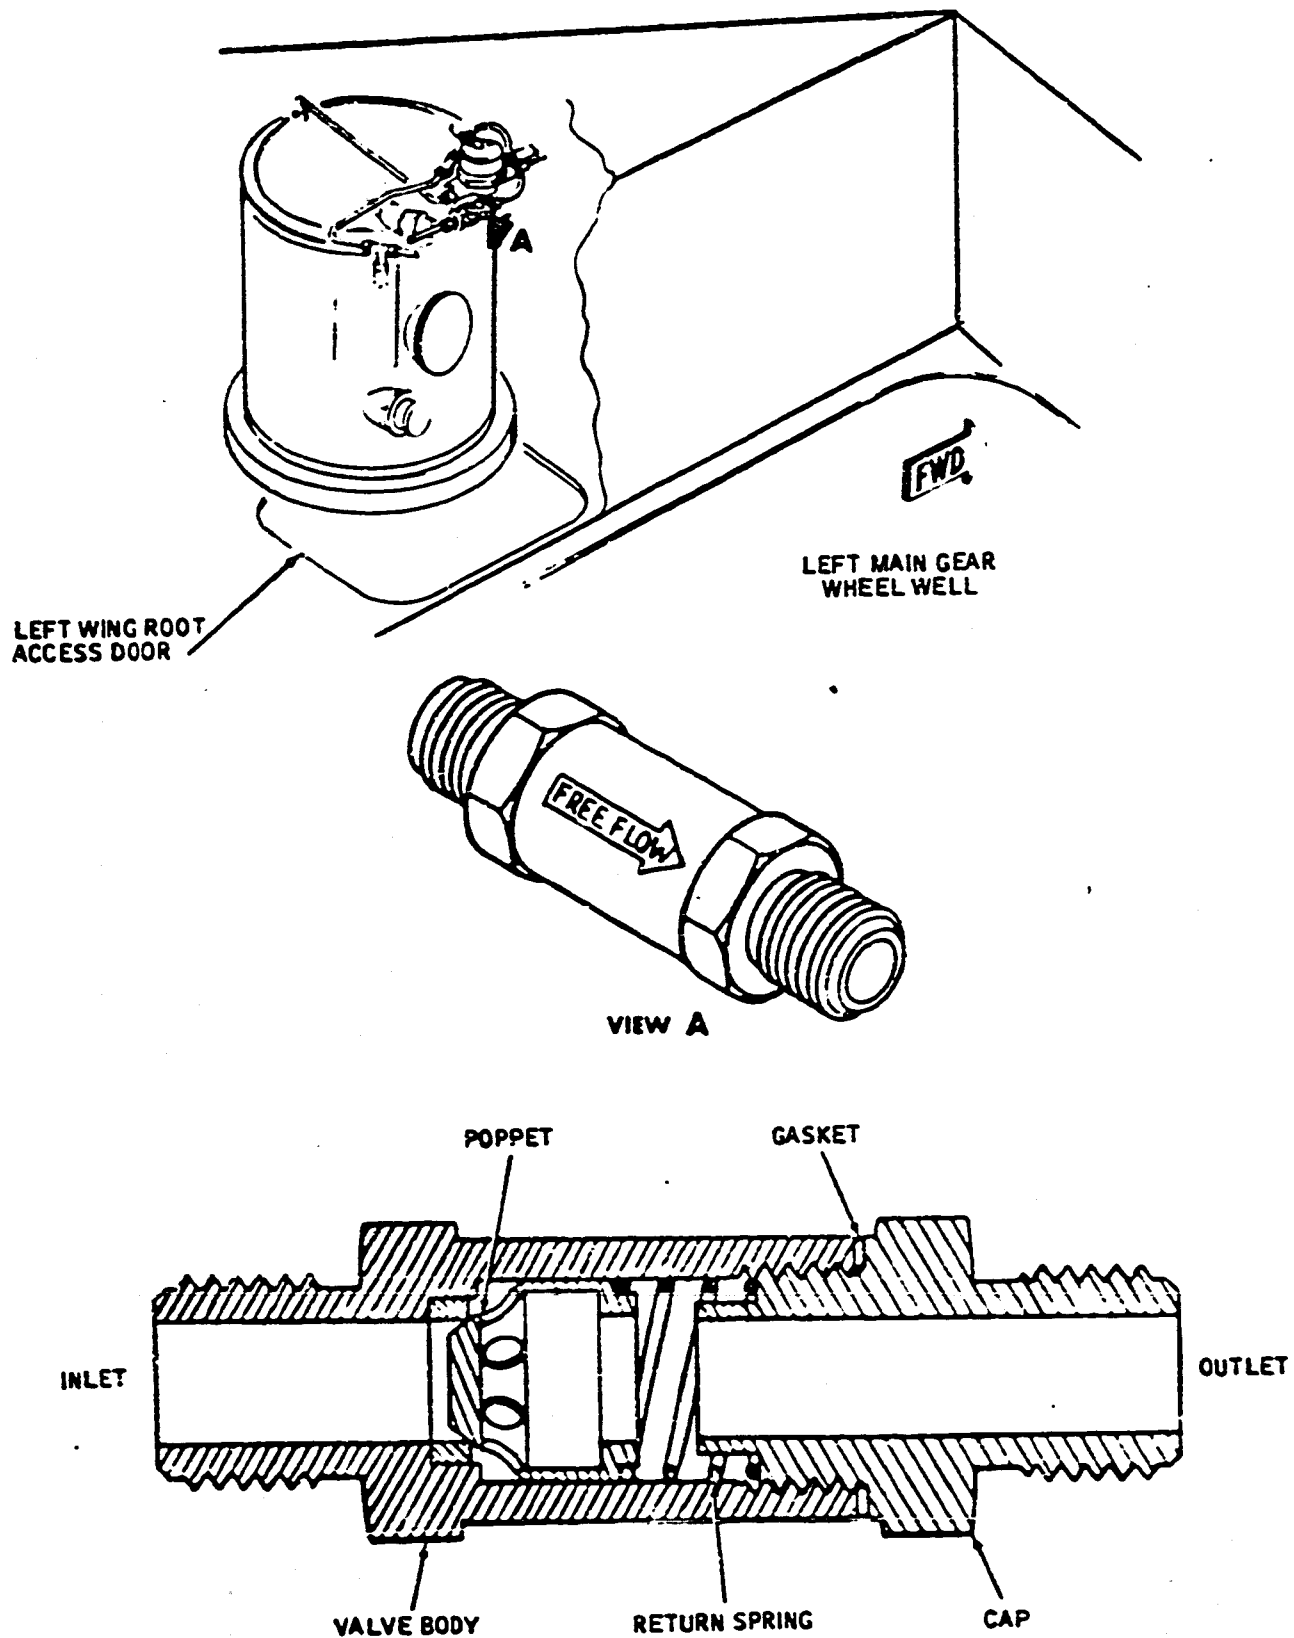


HA2-33


Hydraulic Reservoir Vacuum Breaker Check Valve  
 Figure 9



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

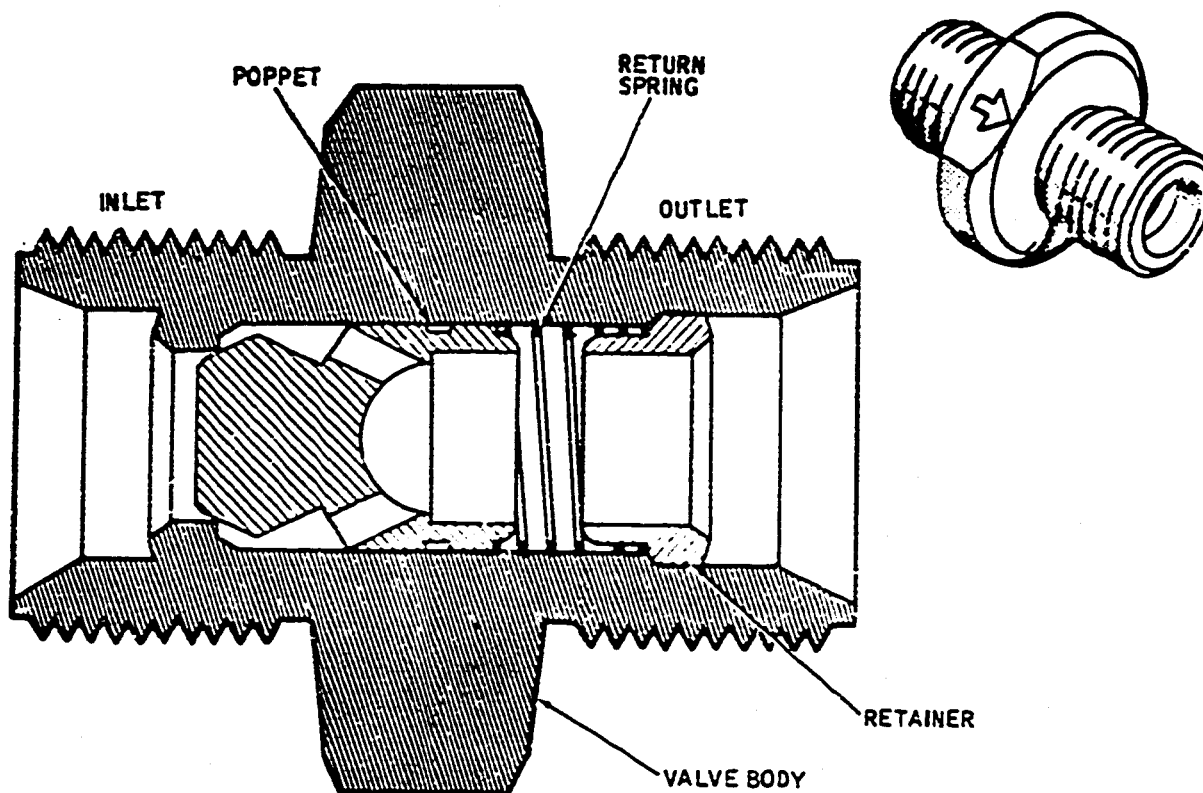

MINIATURE CHECK VALVE

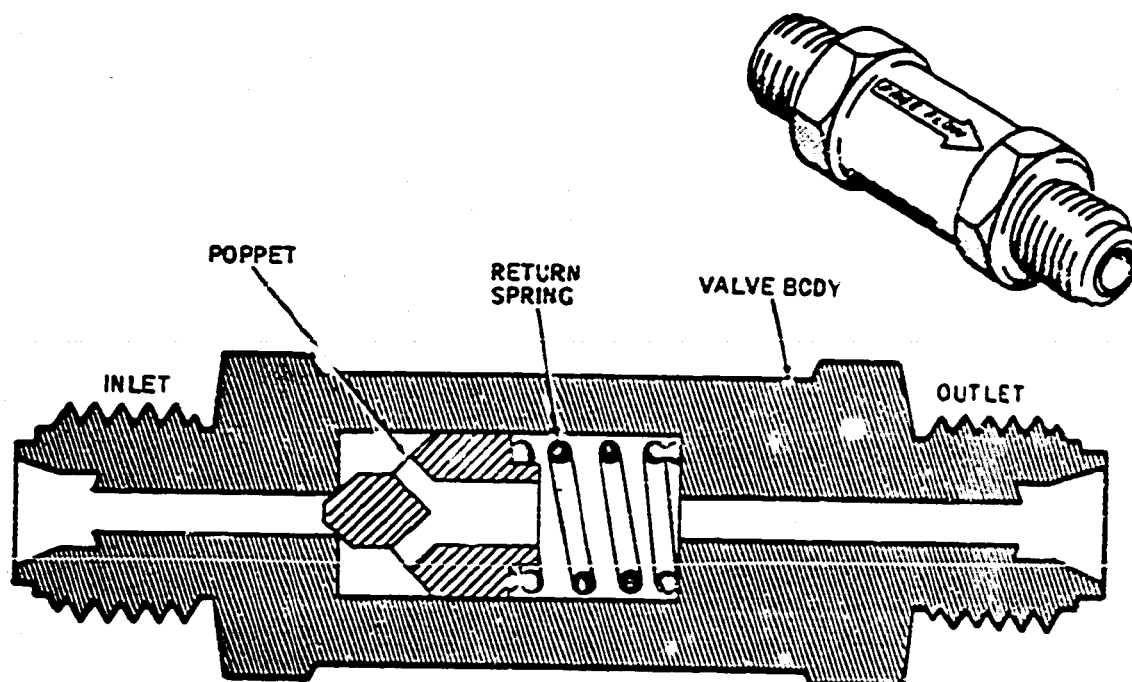

STANDARD CHECK VALVE

Hydraulic Check Valves -- Typical  
 Figure 10

HA2-18A

Oct 1/67

Printed in U.S.A.


29-10-0  
 CODE 7  
 Page 21

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

J. Engine Hydraulic Fire Shutoff Valve (See Figures 11 and 12.)

- (1) The engine hydraulic fire shutoff valve is a gate-type mechanically controlled valve, installed in the supply line of each engine-driven hydraulic pump. The engine hydraulic fire shutoff valve is actuated from the flight compartment to prevent the flow of hydraulic fluid into the engine section.
- (2) The engine hydraulic fire shutoff valve is mounted on a 2-piece channel bracket which is installed inside the wing leading edge, aft of the firewall of each inboard pylon. Access to the valve is through the access door located on the lower side of the wing leading edge, outboard of either the left or right inboard pylon. Each valve is located approximately 30 inches inboard of the access door.
- (3) Internally, the valve consists of a valve arm, valve arm link, cam plate, and slide blade. The valve arm link attaches to the valve arm and is allowed to swivel through an arc in relation to the valve arm. The link has a stop that will contact the arm when the two have traveled to the valve closed, full overtravel position. In the full open pretravel position, the link contacts the arm stop.
- (4) A roller attached to the end of the link rides in, and extends through, a J-shaped slot in the cam plate. The rotation of the valve arm causes the link roller to follow the cam slot, allowing the arm and link to move through independent arcs.
- (5) The slide blade (gate of the valve) is slotted near the one end and also receives the link roller extending through the cam slot. The slide blade is positioned parallel to the cam plate and is guided by two grooves in the housing. This will allow the blade to open or close through porting of the valve by the action of the arm and link. The cam plate is pinned to the valve shaft, securing it rigidly in two positioning grooves in the housing. A pin-indicator is provided to relate valve position to a reference plate placarded open and closed.
- (6) The engine hydraulic fire shutoff valves are cable actuated by the fire control handles, located on the overhead switch panel in the flight compartment. When the fire control handle for either inboard engine is moved, the cable system rotates the drum which is attached to the corresponding shutoff valve shaft. This action extends the valve blade into the fluid passage to block the flow to fluid. The valve operates from open to close by clockwise rotation of the cable drum. The valve gage will idle during the first 8 degrees of rotation of the cable drum, and then will close in the next 72 degrees. The cable drum will continue to rotate the shaft for an additional 69 degrees after the gate valve is closed, locking it overcenter. Total travel of the cable drum is 149 degrees.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

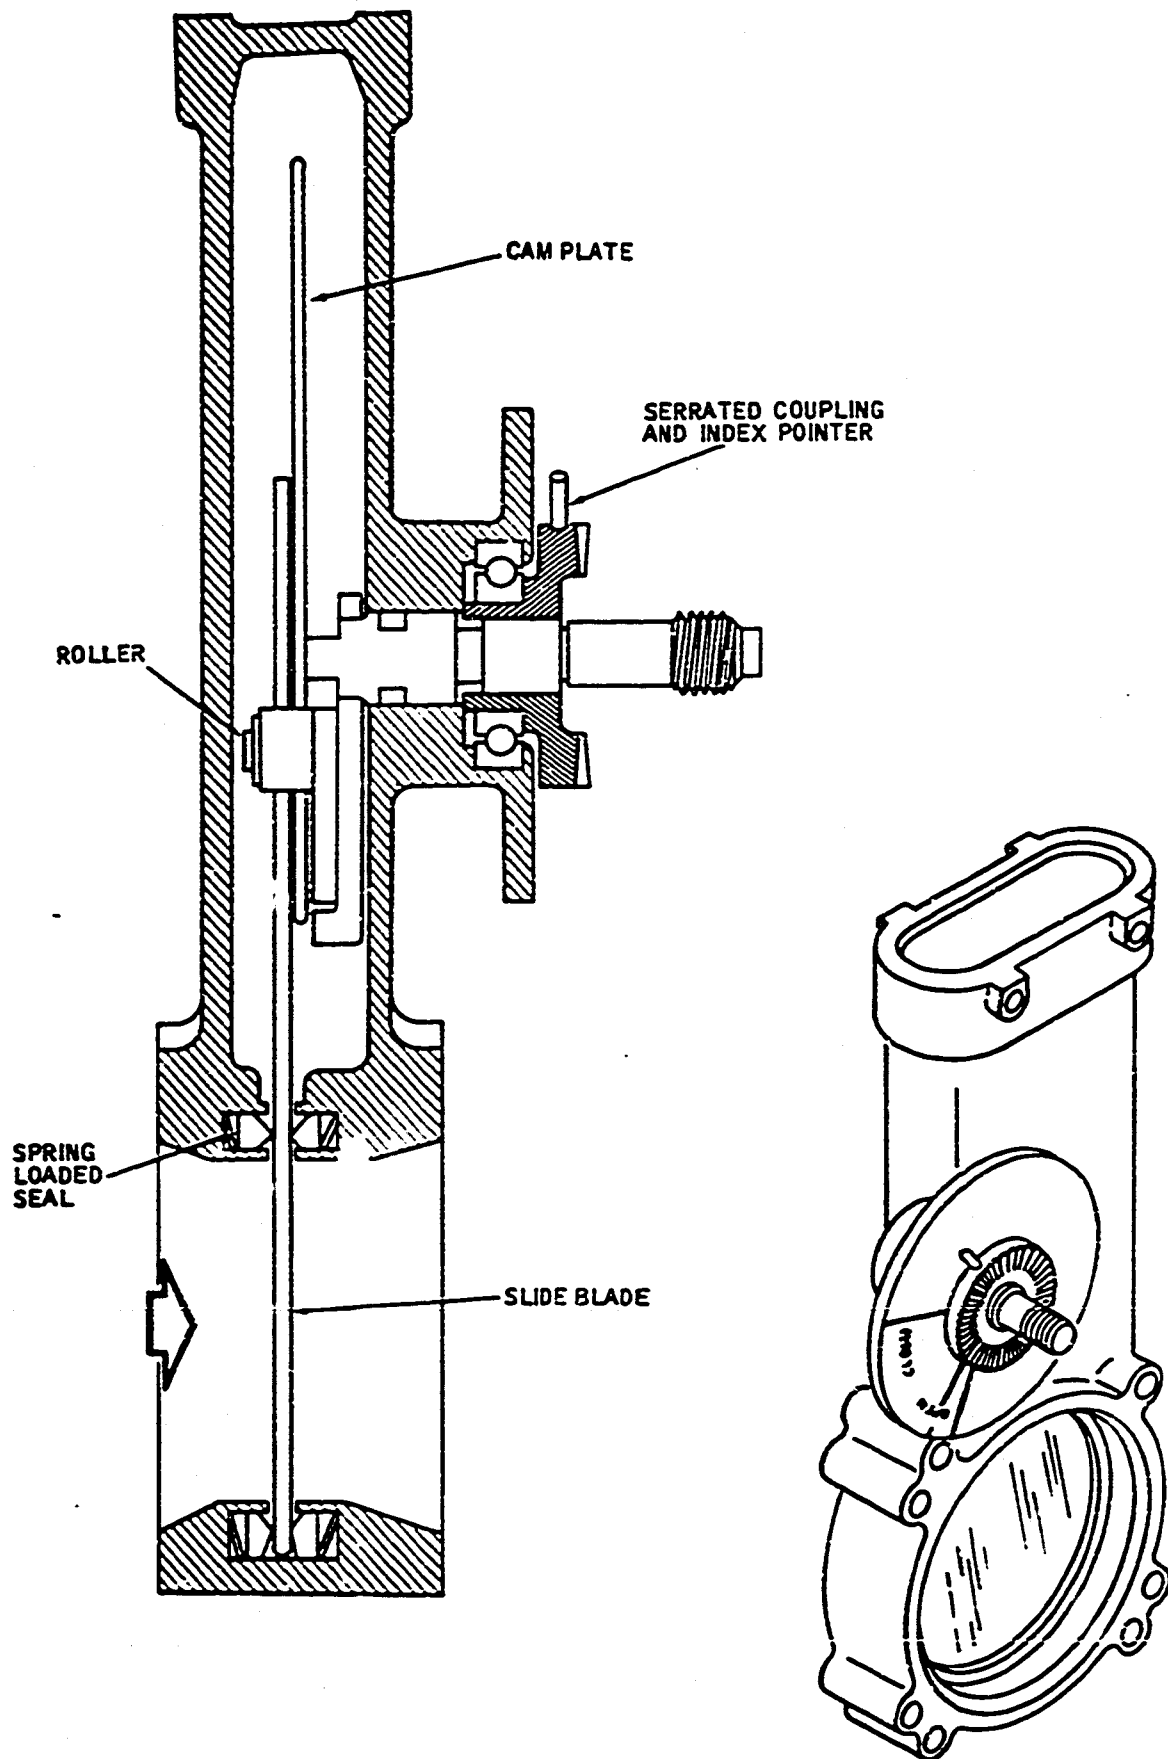

Engine Hydraulic Fire Shutoff Valve -- Schematic  
Figure 11


Jun 15/67

Printed in U.S.A.

HA2-2209

29-10-0  
CODE 7  
Page 23

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

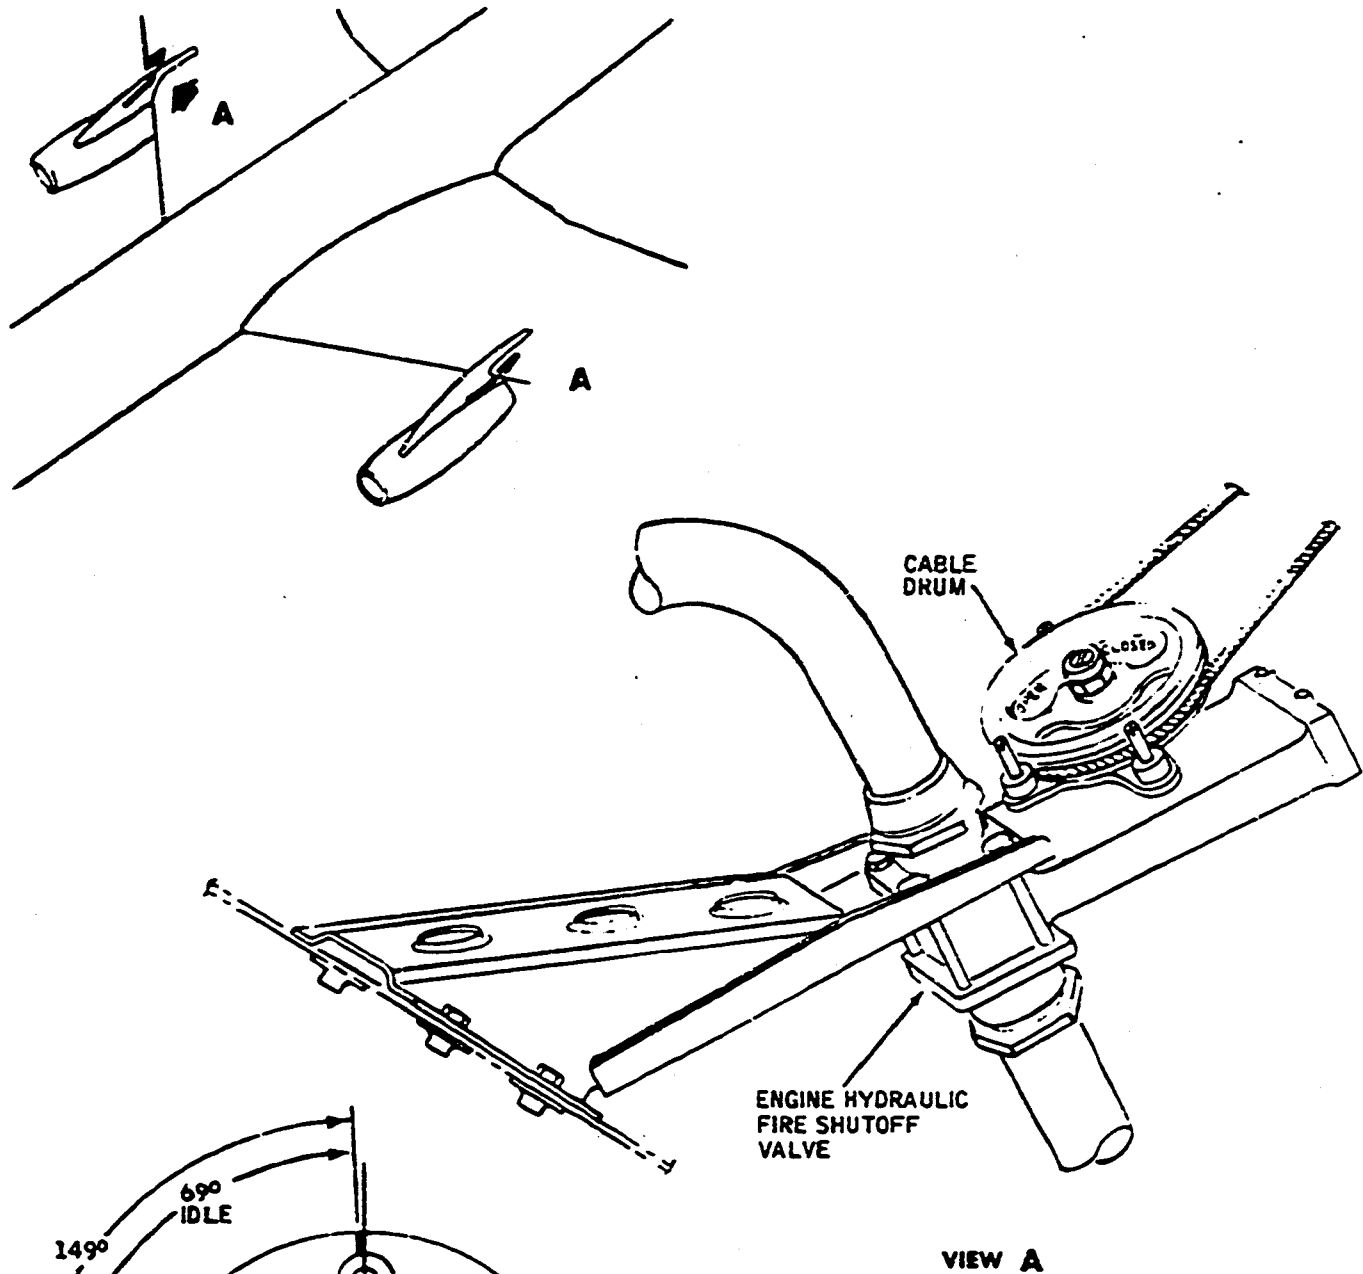

VALVE POSITION DIAGRAM

Engine Hydraulic Fire Shutoff Valve  
 Figure 12




HA2-22

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

K. Engine-Driven Hydraulic Pump (See Figure 13.)

- (1) A variable-displacement, pressure-compensated, engine-driven hydraulic pump is installed on each inboard engine. The pump incorporates a solenoid bypass feature for reducing the output of the pump. The bypass valves are controlled by two engine hydraulic pump switches in the flight compartment. The switch for the hydraulic pump on engine No. 2 is placarded left, on and bypass. The switch for the hydraulic pump on engine No. 3 is placarded right, on and bypass. When either of the two engine hydraulic pump control switches is placed in the bypass position, the bypass valve solenoid for that hydraulic pump is energized and the pump pressure decreases to approximately 300 ( $\pm 100$ ) psi. When either switch is in the on position, the control circuit to the corresponding bypass valve is open and the hydraulic pump operates normally in the pressure range of 2850 to 3050 psi. The pump provides a continuous, nonpulsating flow of hydraulic fluid, under pressure, to the hydraulic manifolds for distribution throughout the hydraulic system. Each of the engine-driven pumps is located on the accessory drive pad of the inboard engines. These pumps are accessible through the doors on the right side of the nacelles.
- (2) Three case drain ports are provided: two are on the yoke assembly housing, and the third is on the casing for the pressure control valve, adjacent to the inlet port fitting. The case drain port on top of the yoke assembly housing is full of fluid at all times. This drain connection is ported back to the low-pressure return port at the reservoir. The inlet port fitting is on top of the pump housing and the outlet port fitting is opposite to it on the bottom of the housing.
- (3) The yoke control piston casing is an integral part of the pump case. Four self-locking nuts are used to hold the piston casing end-plate in position. The bypass valve assembly, consisting of the valve body and a solenoid assembly, is mounted externally on the pump case, under the yoke control piston casing. This solenoid valve is provided with an electrical connector. A pressure control regulator is installed on the bypass valve body by means of four bolts. This regulator is cylindrical and is provided with an external adjustment screw. A lock screw is used to retain the adjusting screw after the adjustment has been made.
- (4) Hydraulic fluid enters the pump through an inlet port. Passages in the yoke carry the fluid to the valve plate, which ports the fluid to the cylinder block. The nine pistons in the cylinder block are actuated by the rotating drive shaft, thereby pressurizing the fluid. From the cylinder block, the fluid is routed to the outlet port of the yoke and then to the pump pressure lines. The pressure control regulator is actuated by pump output pressure that is bled to the regulator. The regulator meters the pressure to the yoke control piston, which positions the yoke.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

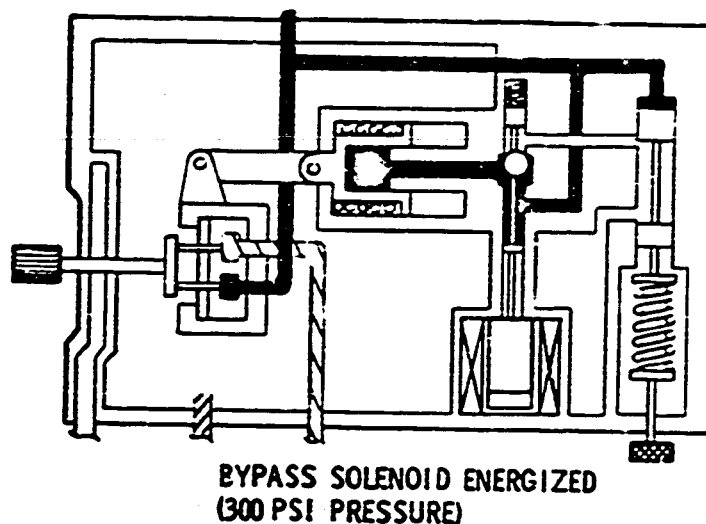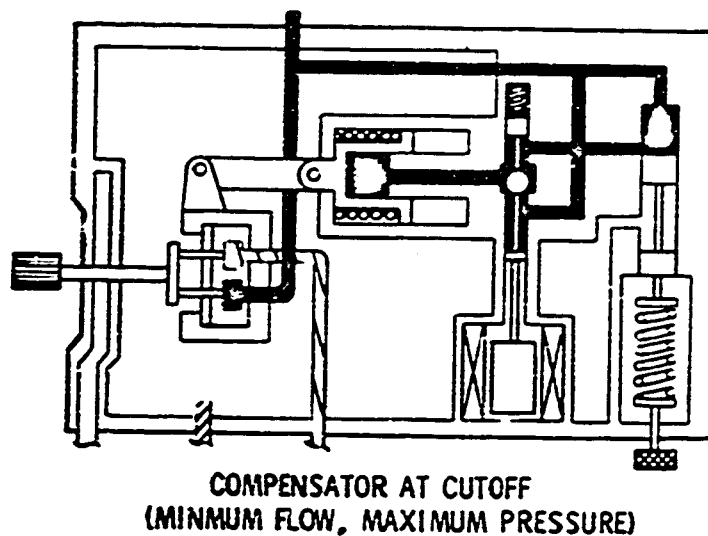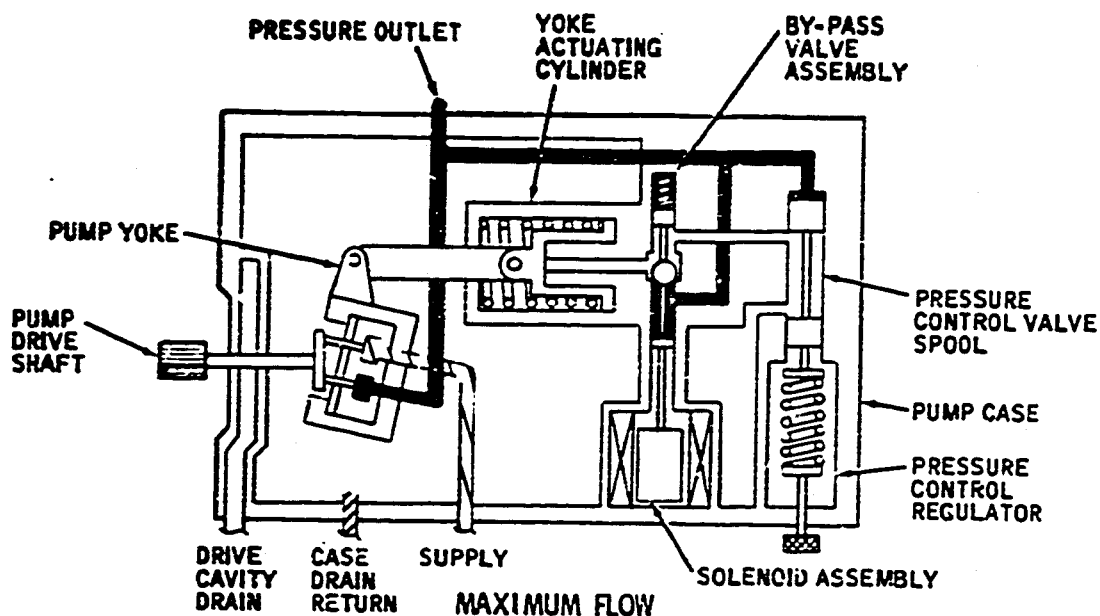

- PRESSURE
  - CASE DRAIN
  - SUPPLY
  - DRIVE CAVITY DRAIN
- HA2-837

Engine-Driven Hydraulic Pump Pressure  
 Flow -- Schematic  
 Figure 13

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) The maximum pump pressure is determined by the adjustment of the pressure control regulator. The pressure control regulator allows maximum output flow (22.5 gpm at 3500 rpm) up to 2850 psi system pressure. When this pressure is reached, the yoke assembly starts to move towards the zero flow position.
- (6) Pressure continues to rise until the displacement is reduced from maximum flow to zero flow and 3000 psi is reached. The pump pressure stabilizes in accordance with system demand.


L. Engine-Driven Hydraulic Pump Check Valves (See Figure 10.)

- (1) Two check valves, rated at 3000 psi, are installed in the lines from each engine-driven hydraulic pump. One check valve is installed in the pressure line and the other is in the case drain line. The check valves in the pump pressure lines prevent reverse flow of hydraulic fluid through the pump, when the pump is inoperative or when external hydraulic pressure is supplied to the system. Access to the valves can be gained through an access door in the forward right apron of each inboard pylon. The valves are mounted on the exterior wall of the inlet box by means of the bulkhead fittings and retaining nuts.
- (2) Normal operating pressure will unseat the poppet, and fluid will flow through the valve. When pressure downstream of the valve exceeds pressure from the pump, the pressure, with the aid of the return spring, will seat the poppet. This prevents reverse flow of hydraulic fluid through the pumps.


M. Engine-Driven Hydraulic Pump Case Drain Filter (See Figure 14.)

- (1) A line-type, micron filter, for use in a low-pressure hydraulic system, is installed in the engine-driven hydraulic pump case drain return line between the pump flow check valve and the hydraulic system reservoir. The case drain filter is installed on the aft surface of the rear spar opposite the leading edge of the inboard flap assembly. One filter is used for each engine-driven pump. Access is gained to the filter by lowering the flaps. A second check valve is installed adjacent to the filter in the downstream side of the case drain return line.
- (2) Externally, the filter is approximately 5 inches high and 2 inches wide, with ports marked inlet and outlet. The bowl is cylindrical in shape, with hex-shaped wrench flats at the lower end. A self-sealing, magnetic drain plug is installed in the bottom end of the filter bowl. The filter element is made of chemically treated paper.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

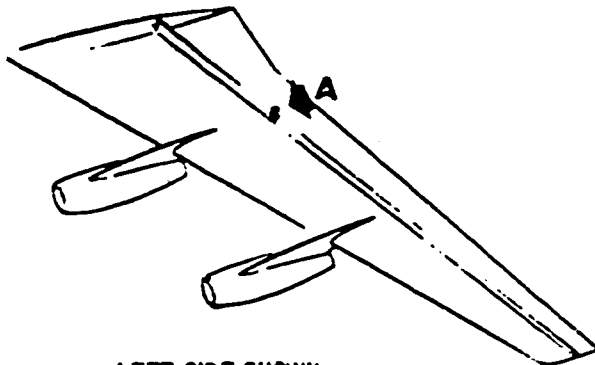

LEFT SIDE SHOWN  
RIGHT SIDE OPPOSITE

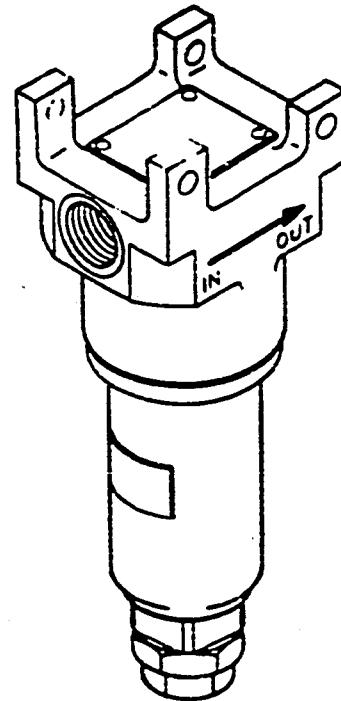

VIEW A

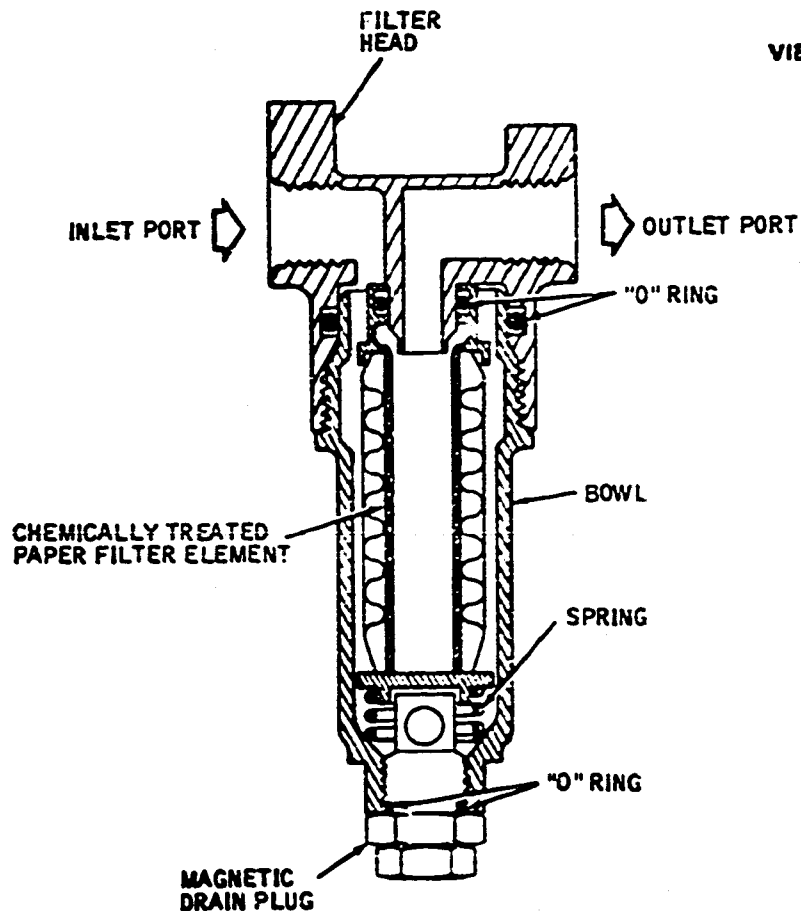

HA2-31

Engine Driven Hydraulic Pump Case Drain  
Filter -- Cutaway View  
Figure 14



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


N. Dual Filter and Relief Valve (See Figure 15.)

- (1) The hydraulic power system dual filter and relief valve consists of two filters and two relief valves installed in the same body. The unit filters the hydraulic fluid from the two engine-driven hydraulic pumps, and the pressure relief valves assure that excessive pressures do not build up in the pressure line from the pumps. The unit is located in the left main gear wheel well on the lower portion of the rear spar, approximately 1 foot outboard of the centerline shear web.
- (2) The unit consists of a casting with a flange-mounted pressure inlet port on each end. Two pressure outlets are located on the top of the casting. One outlet, centrally located, is the main pressure outlet to the system selector valve. The other, located to the left of the selector valve port, is the pressure outlet to the air pressure regulator-aspirator. The return outlet port for the relief valve portion of the unit is located on the center of the aft face of the body, canted upward. The nose gear return line is connected to a check valve installed in a return line port, located between the two filter bowls.
- (3) The pressure relief valves are located behind the pressure inlet ports and are connected to the return outlet port of the unit. The inlet from the nose gear return line is routed through the casting to the return outlet port.
- (4) If either of the filter elements becomes clogged, pressure above 3300 psi at the inlet port will unseat the poppet. Pressure above 3500 psi will allow full flow of 22.5 gpm to flow to the return port of the unit and back to the reservoir. The relief valves will reseal at approximately 3000 psi.
- (5) A check valve is installed in the system selector valve port to prevent reverse flow of pressure through the filter during auxiliary hydraulic pump operation.

O. System Selector Valve (See Figures 16 and 17.)

- (1) The system selector valve is a 3-position valve which permits directional control of fluid under pressure. The valve is installed on the left hydraulic power manifold and is accessible through the left main gear inboard door.
- (2) The selector valve pressure-to-system port and the return port are directly ported to the manifold. The engine pump pressure enters the valve through a port on the large end of the valve, and the auxiliary pump inlet and alternate ports are located at the top, toward the aft end of the valve. The valve control crank is attached to a push-pull rod and a cable sector.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

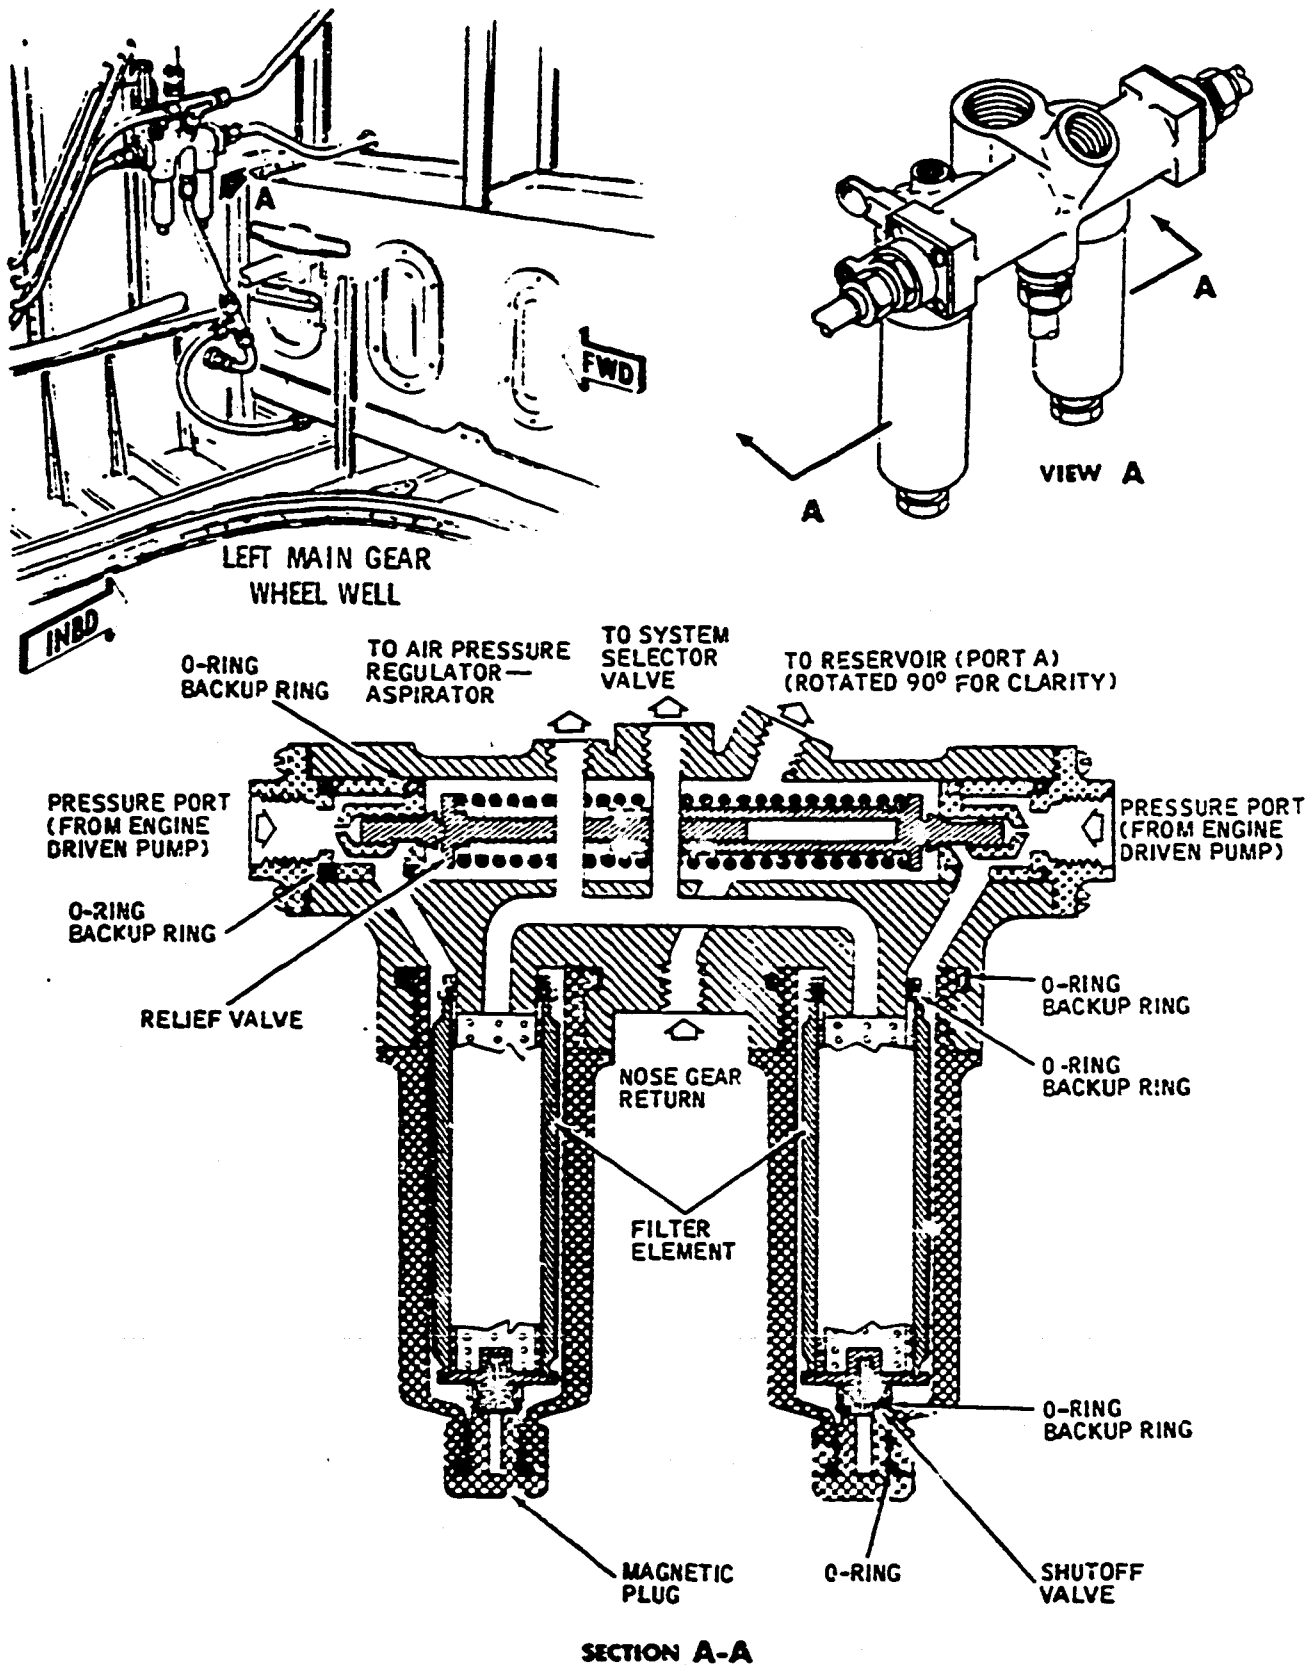

SECTION A-A

HA2-20


Dual Filter and Relief Valve -- Cutaway View  
 Figure 15

29-10-0  
 CODE 7  
 Page 30

Printed in U.S.A.

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

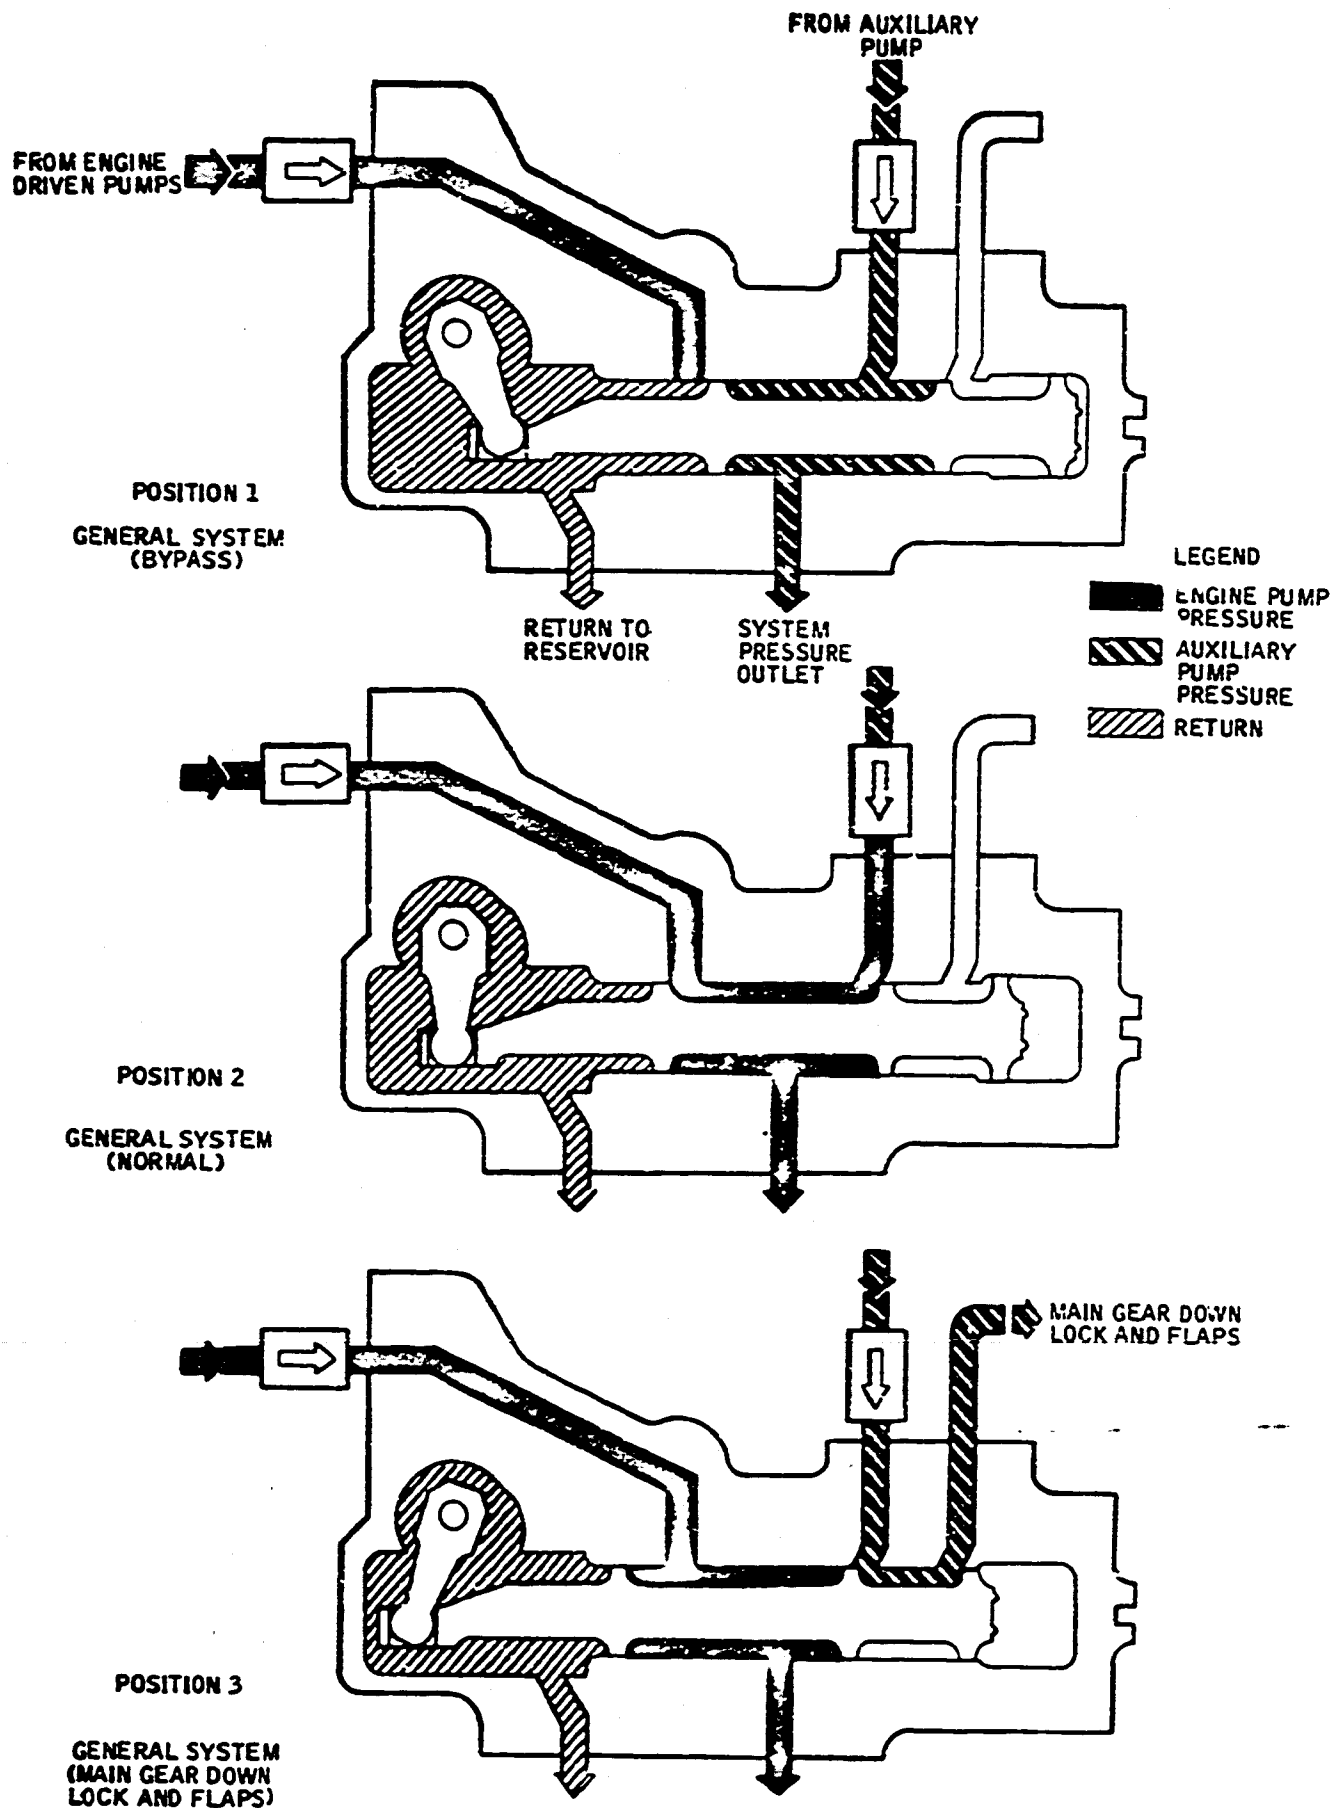

System Selector Valve -- Schematic  
 Figure 16



HA2-26

29-10-0  
 CODE 7  
 Page 31

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

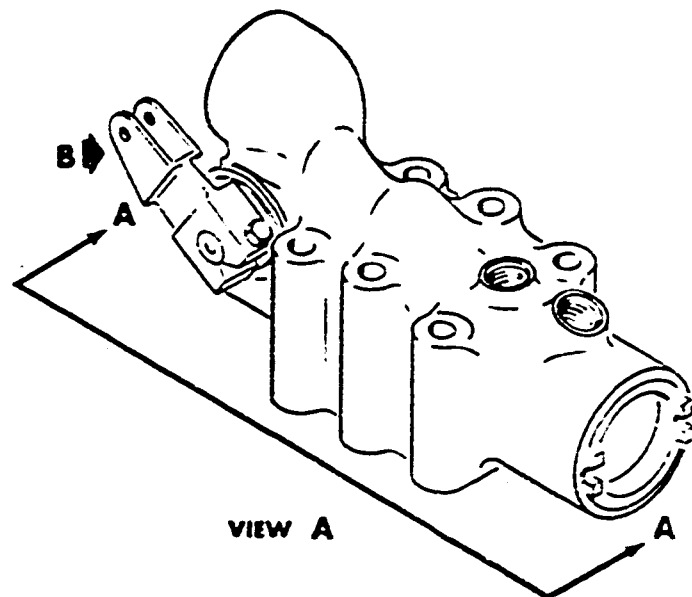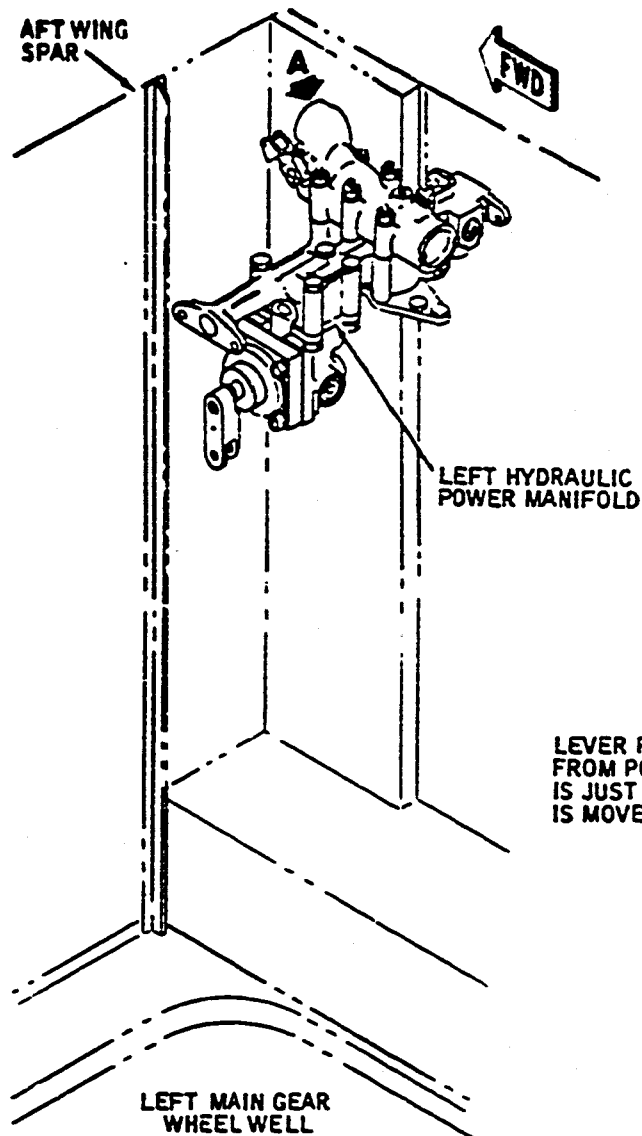

LEVER POSITION WHEN FLOW FROM PORT M TO PORT L IS JUST STOPPED AS LEVER IS MOVED TOWARD POSITION 3

GENERAL SYSTEM (NORMAL) POSITION 2

$6 \frac{1}{4}^{\circ} (\pm 1 \frac{1}{4}^{\circ})$

$28^{\circ}$  (REF)


GENERAL SYSTEM (BYPASS) POSITION 1

GENERAL SYSTEM (MAIN GEAR DOWNLOCK AND FLAPS) POSITION 3

$18 \frac{1}{2}^{\circ}$  (REF)

$55 \frac{3}{4}^{\circ} (\pm 5^{\circ})$

VIEW B

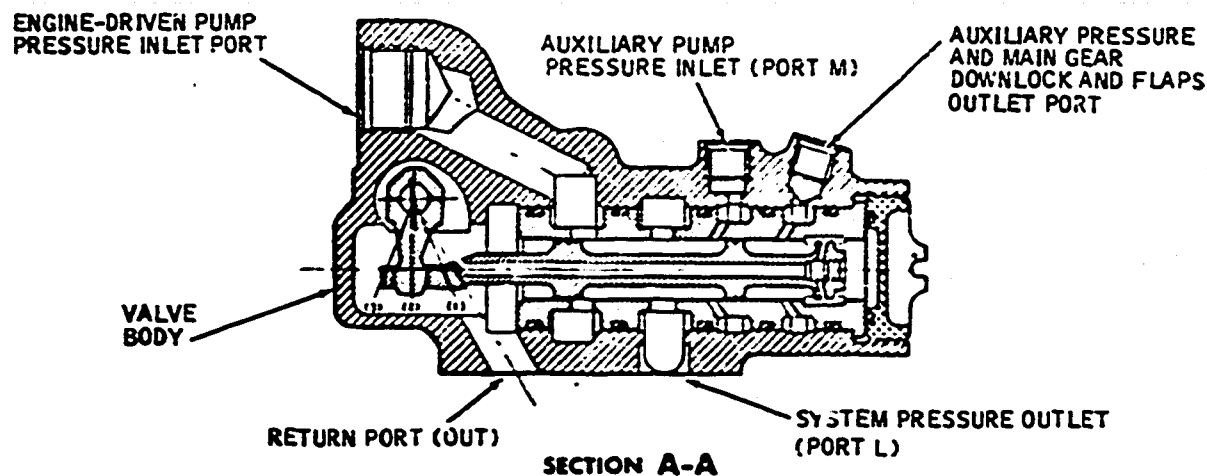

System Selector Valve -- Cutaway View  
 Figure 17

HA2-27

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Operation of the system selector valve is controlled by a lever located on the right side of the system engineer's control pedestal. When the control lever is moved to the selected position, the cable system, through the sector and crank, operates the valve positioning lever to drive the slide spool assembly to the selected position. When the control lever is placed in the general system (normal) position, the selector valve is actuated, causing hydraulic fluid to enter the valve through the system pressure port. The fluid is then directed into the manifold through the pressure-to-system port. In the general system (normal) position, fluid from the auxiliary pressure port is also routed to the pressure-to-system port. In the bypass/general system position, the selector valve ports engine pump pressure into the manifold through the return port. In this position, the auxiliary pump pressure is ported to the general system. In the general system/main gear down and flaps position, pump pressure is routed through the alternate port, at the top of the valve, for alternate operation of the flaps and the landing gear downlock cylinders. Internal leakage provides lubrication for the moving parts of the valve.



P. Left Hydraulic Power Manifold (See Figure 18.)

- (1) The left hydraulic power manifold distributes fluid pressure from the hydraulic pump (any one of the three pumps), through control valves to the various airplane hydraulic subsystems. The left power manifold is located overhead in the left wheel well. Access to the left manifold is through the left main gear inboard door.
- (2) Three valve-mounting pads are provided on the manifold. The system selector valve-mounting pad is located on top of the manifold body. Of the two remaining mounting pads, located on the underside of the manifold, the inboard pad is capped and not used. The outboard mounting pad is used for the bogie swivel unlock control valve. Four ports are provided on the inboard end of the manifold. Two of these ports are pressure outlet ports: one, located on the aft face of the manifold, is for the flight controls; and, the other, located on the underside of the manifold, ports fluid to the priority valve, which, in turn, ports fluid to the nose gear and the right power manifold. The other two ports are return outlets, located immediately forward of the manifold pressure outlet port. One is connected by a line to the right manifold, and the other is connected to the low-pressure return port of the reservoir. The pressure line to the nose gear control valve is teed into the manifold pressure connecting line. A reservoir return line is teed into the manifold return line. The two ports on the inboard mounting flange were used for drilling the internal passages of the power manifold and are plugged and safety wired to prevent use.

Q. Right Hydraulic Power Manifold (See Figure 19.)

- (1) The right hydraulic power manifold distributes fluid pressure from the hydraulic pumps (engine-driven or auxiliary, or any combination of these three pumps), through the control valves to the various hydraulic


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

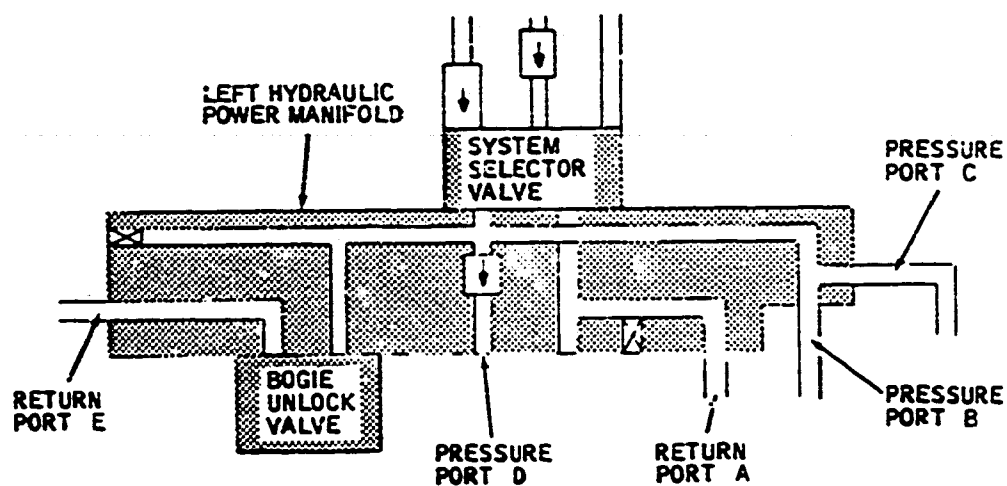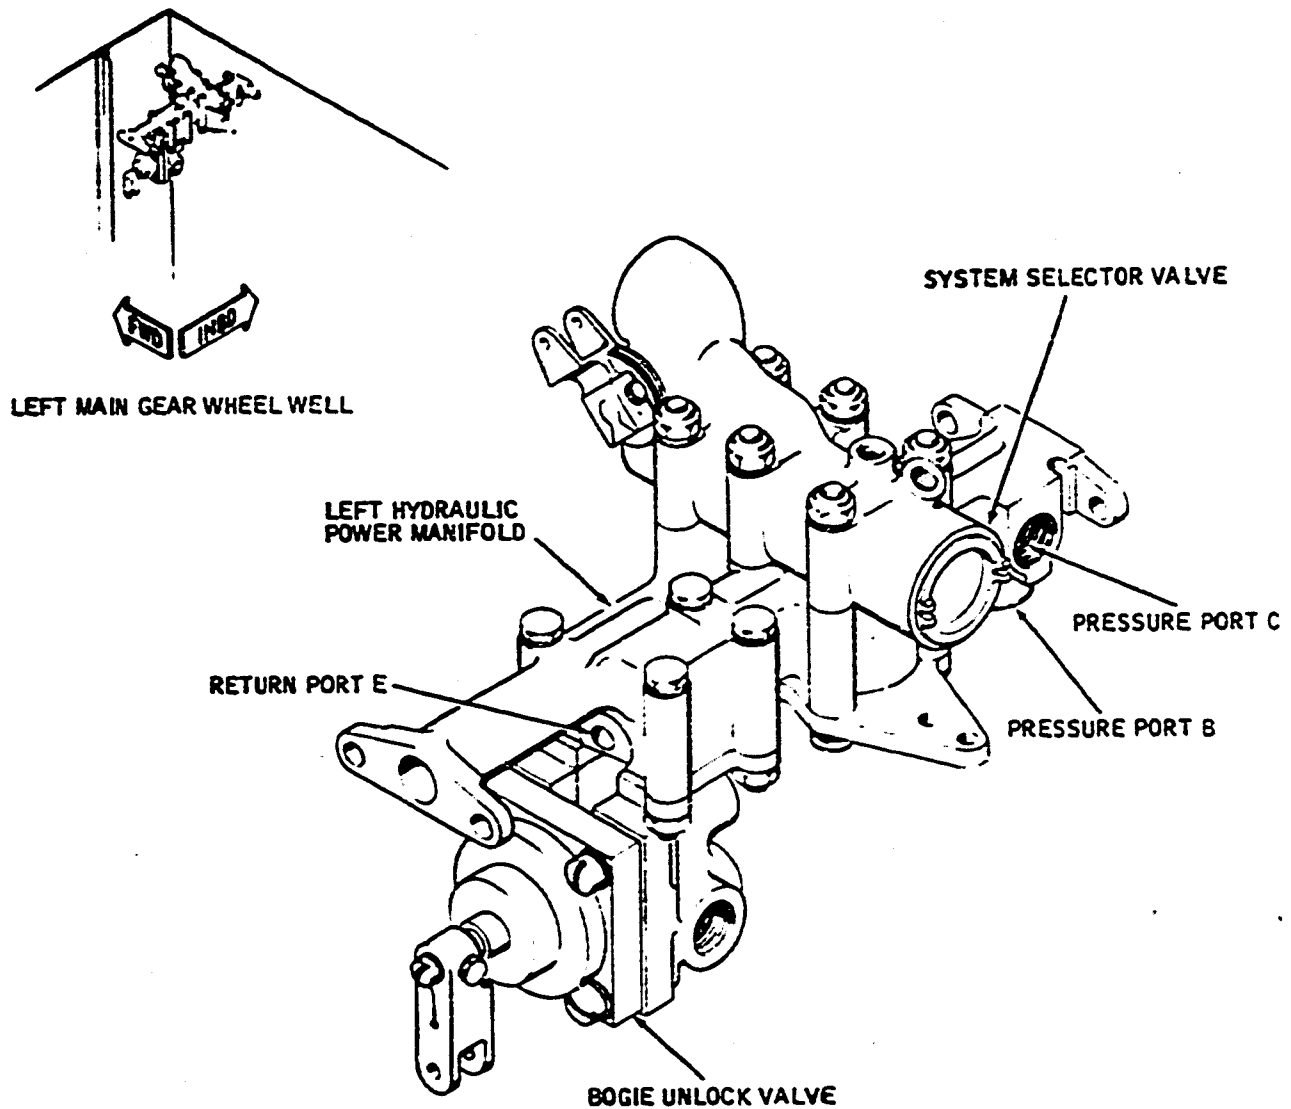


HA2-28

Left Hydraulic Power Manifold -- Schematic  
 Figure 18


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

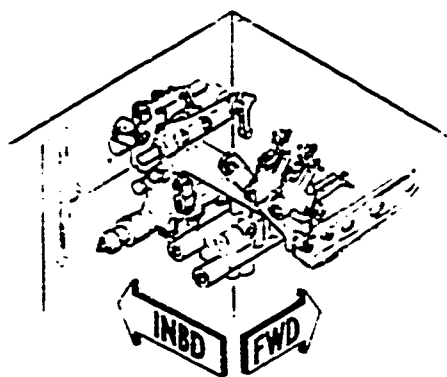

RIGHT MAIN GEAR  
WHEEL WELL

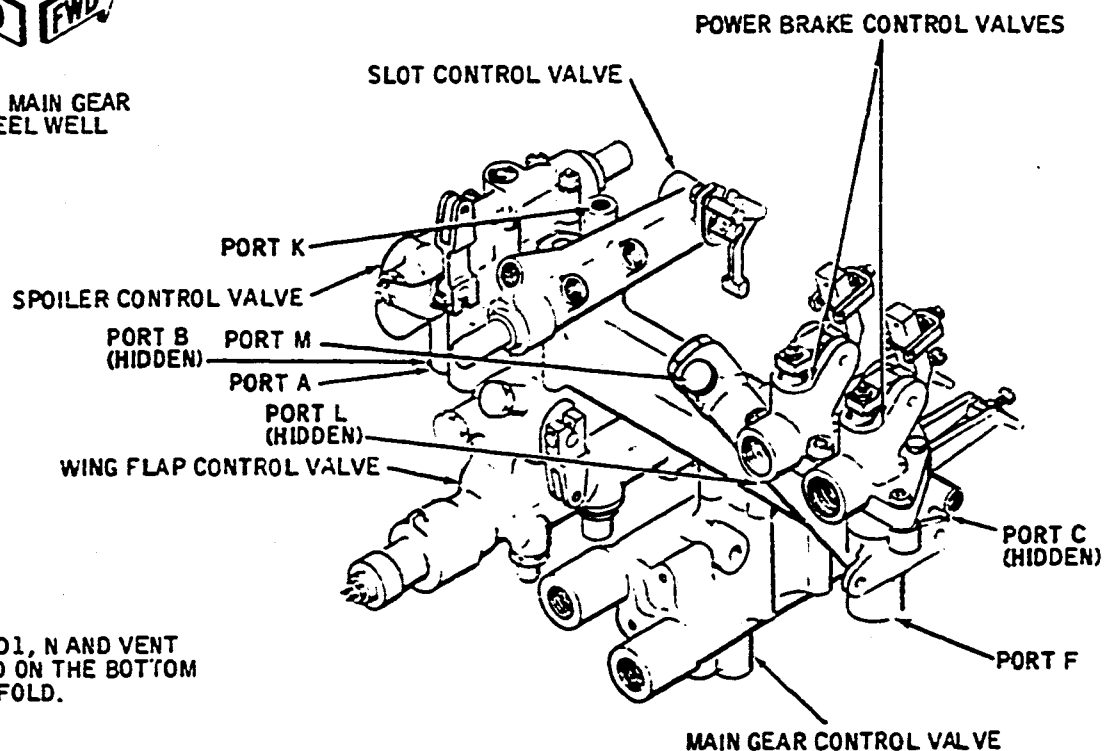

NOTE: PORTS B, C, D<sub>1</sub>, N AND VENT  
ARE LOCATED ON THE BOTTOM  
OF THE MANIFOLD.

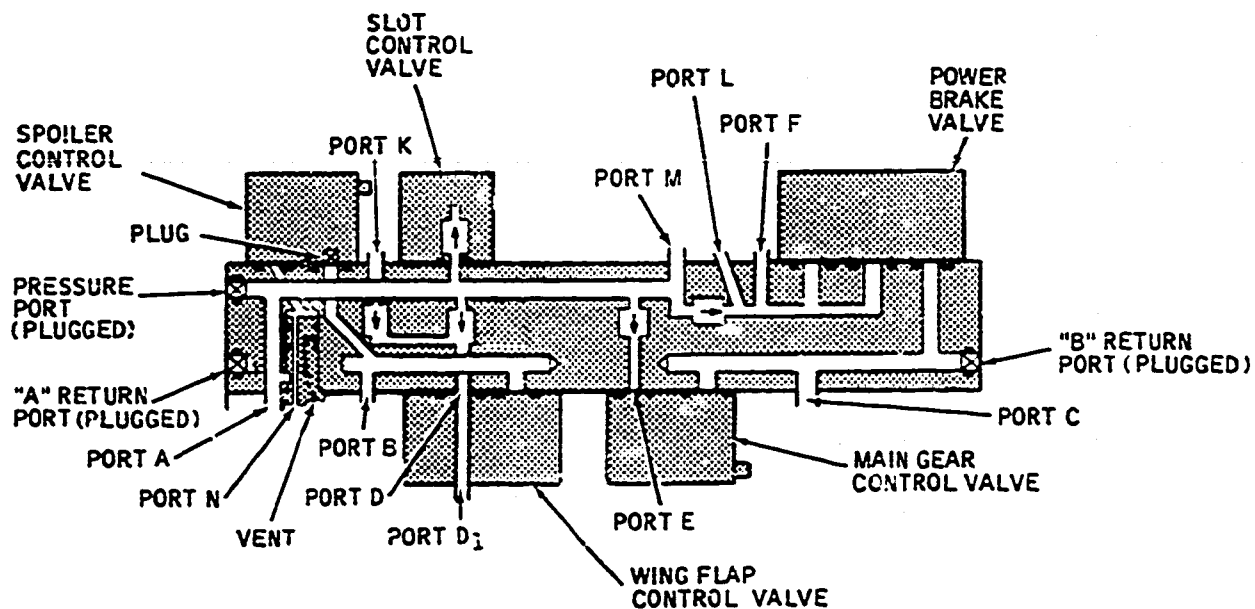

HA2-29A

Right Hydraulic Power Manifold -- Schematic  
 Figure 19

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

subsystems. The right hydraulic power manifold is located overhead in the right wheel well. The manifold is held in place with braces and is accessible through the right main gear inboard door.

- (2) The manifold contains passages for pressure and return fluid distribution, four check valves, ports for pressure and return lines, and mounting pads for the various control valves.
- (3) The right manifold receives fluid pressure from the left manifold. Pressure is ported through check valves to the wing flap control valve, to the slot control valve, to the main gear control valve, to the brake control valve, to the brake pressure transmitter, and to the brake accumulators.
- (4) Auxiliary hydraulic pressure is ported from the alternate port of the system selector control valve into port K in the right manifold. Port K is located inboard of the spoiler control valve. From port K, auxiliary hydraulic pressure is ported through a check valve to the downstream side of the wing flap control valve check valve and into the wing flap control valve for alternate operation of the wing flaps.
- (5) The return passage from the wing flap control valve ports fluid to return port A. The brake control valve return passage ports fluid into return line B through a two-way restrictor. The main gear control valve downline return fluid uses a separate port in the valve, bypasses the manifold, and returns the fluid directly to A return line to the reservoir. The upline in the main gear control valve uses the same return port, return port B, in the manifold as the brake control valve.

R. Hydraulic Manifold Return Check Valves (See Figure 10.)


- (1) The hydraulic manifold return check valve is installed in the hydraulic reservoir A return line to prevent reverse flow of fluid. This check valve is located on the shear web near the dual filter and relief valve. Access to the check valve is through the left main gear inboard door.
- (2) The direction of flow is marked on one surface, and the rating of the check valve (1500 psi) is marked on the other surface.

S. Hydraulic Power System Accumulator (See Figure 20.)


- (1) The hydraulic power system accumulator is a spherical, welded-steel, fluid and air bladder-separated container. The accumulator is installed in the pressure line of the hydraulic power system to provide a reserve supply of fluid under pneumatic pressure and to act as a shock absorber for system pressure surges.
- (2) The accumulator is located immediately aft of the left hydraulic power manifold and is accessible through the left main gear inboard door. It is mounted with two corner brackets and clamp blocks at the upper and lower port fittings.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

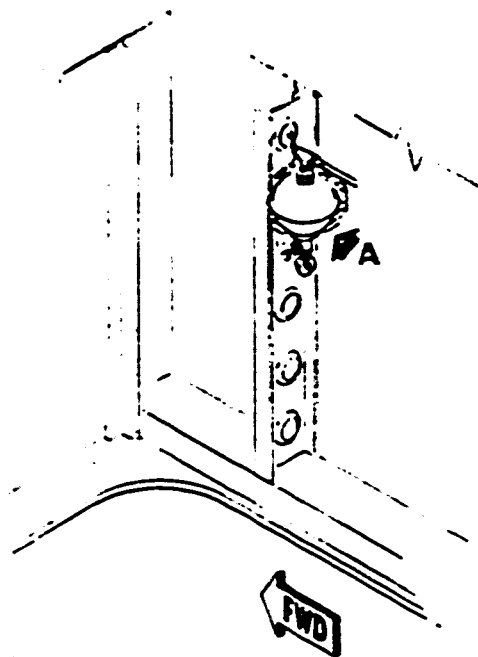

LEFT MAIN GEAR  
WHEEL WELL

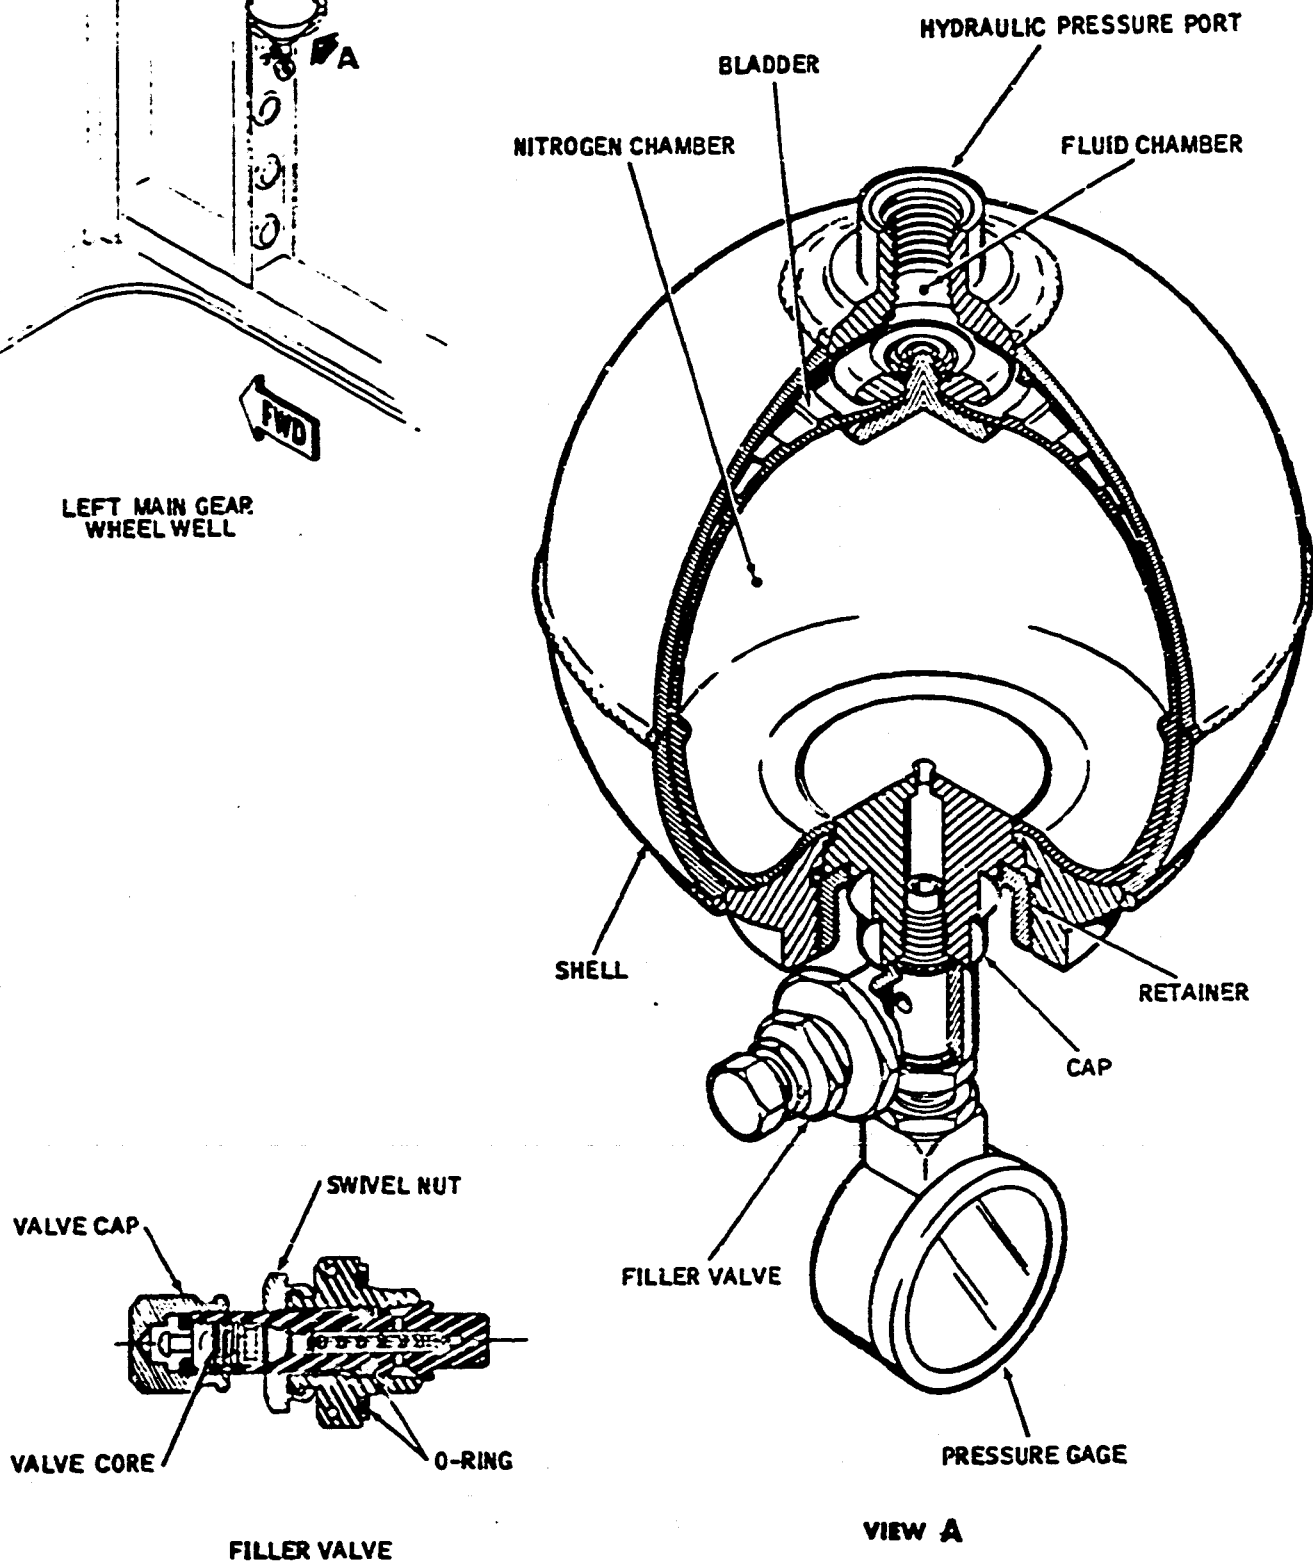

FILLER VALVE

VIEW A

Hydraulic Power System Accumulator --  
 Cutaway View  
 Figure 20

HA2-30

29-10-0  
 CODE 7  
 Page 37

Jun 15/67

Printed in U.S.A.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The accumulator is installed in the pressure line of the hydraulic power system and is initially charged with 1000 psi of dry nitrogen. As the system pressure builds up, fluid is forced into the upper chamber of the accumulator, further compressing the trapped nitrogen to approximately 3000 psi. With full hydraulic system pressure, 3000 psi is indicated on the pressure gage adjacent to the filler valve. This reserve pressure smooths out any momentary lag in the pump's response to the system's demand for greater fluid flows. The accumulator permits a gradual rise in system pressure, thereby absorbing the shock of pump surges and relieving the piping and system operating units of high-impact loads. When the engine-driven hydraulic pumps are not operating, the accumulator provides system pressure (at a diminishing rate) until a quantity equal to the stored volume in the accumulator has been used by the system.

T. Hydraulic System Priority Valve (See Figure 21.)

- (1) The priority valve is located in the left wheel well near the left hydraulic power manifold. The valve is installed in the hydraulic pressure line, between the two power manifolds, downstream of the pressure supply takeoff port for the flight controls. The priority valve is a balanced relief valve which reserves initial hydraulic pressure (up to 2150 psi maximum) for use in the flight control systems. The valve consists of a body with an inlet, an outlet, and a breather port. Internally, the valve contains a poppet valve plate, a poppet, a poppet valve load-spring, a piston, a piston load spring, and a piston load-spring housing. The piston load-spring housing chamber is vented to ambient air through a breather hole which is covered by a butyl rubber band.
- (2) The priority valve shuts off hydraulic pressure to all subsystems downstream of the left power manifold, whenever the hydraulic pressure drops below 1700 psi minimum. At this point, the valve closes to reserve the hydraulic pressure for use in the flight control systems, preventing them from reverting to manual operation. When the hydraulic pressure rises to 2150 psi maximum, the priority valve opens and supplies pressure to the right manifold and all subsystem downstream of the priority valve.
- (3) Hydraulic fluid from the left power manifold enters the priority valve through the inlet port, passes through the poppet valve plate holes, and applies pressure against the piston. When sufficient hydraulic pressure is applied to the piston, the piston load-spring compresses, unseating the poppet and permitting full flow through the valve. When the hydraulic pressure decreases to less than the opposing force value of the piston load-spring, the load-spring forces the piston against the poppet and shuts off fluid flow through the valve.
- (4) The maximum flow available from both engine-driven hydraulic pumps is: 44 to 45 gpm at takeoff, climb, and cruise configurations; 26 to 28 gpm at descent, approach, and engine idle configurations.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

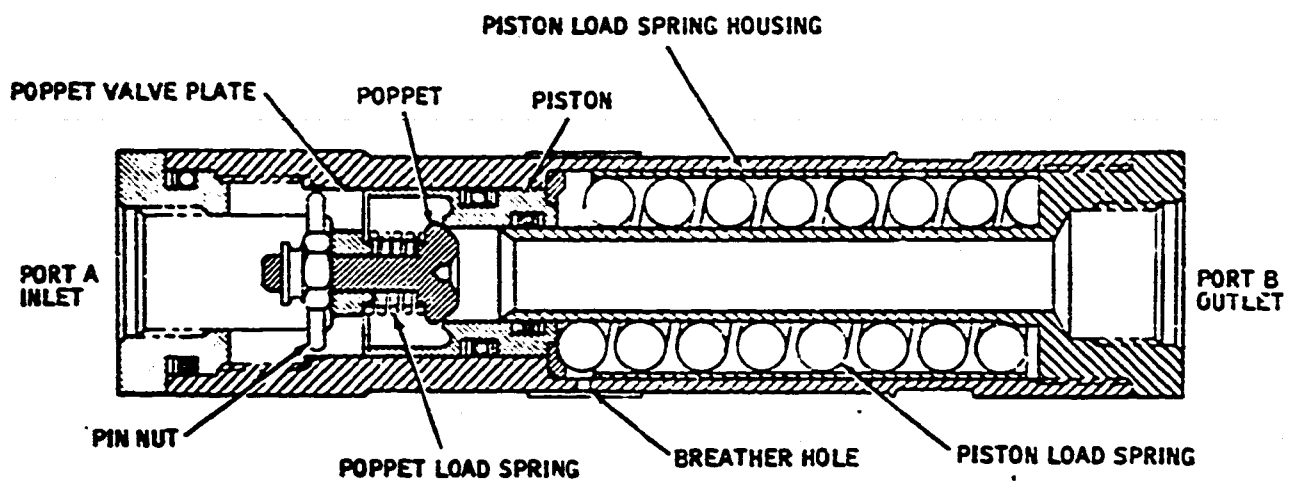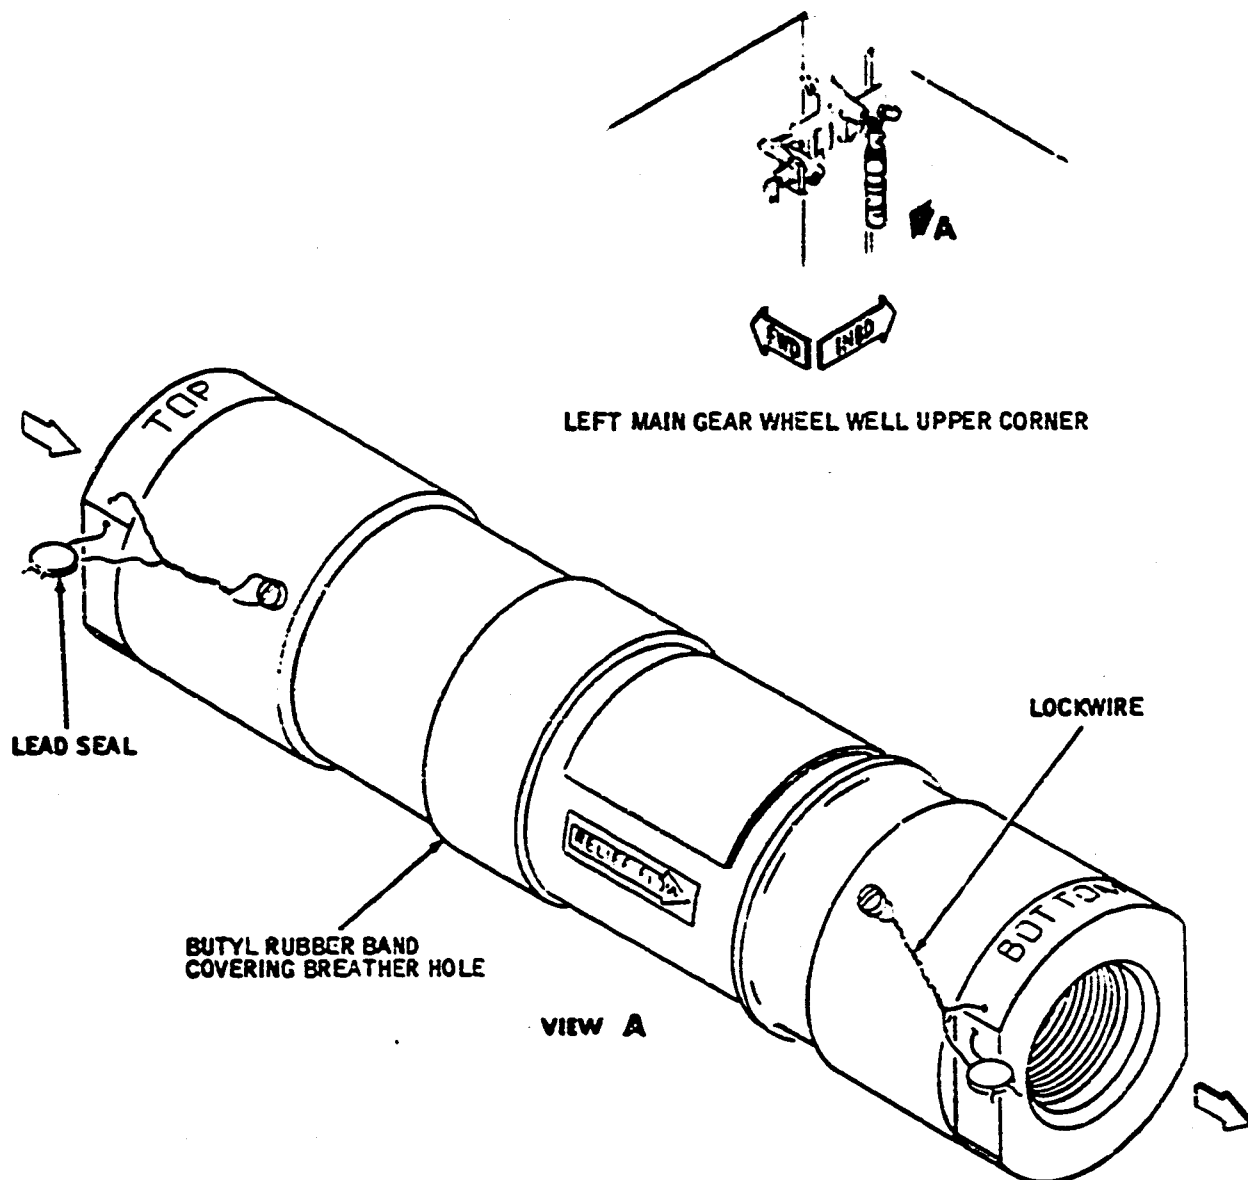

Hydraulic System Priority Valve -- Cutaway View  
 Figure 21

HA2-34

29-10-0  
 CODE 7  
 Page 39

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

(5) Some of the larger hydraulic system demands are as follows:

- (a) Gear retraction -- 17 gpm (10 - 12 seconds)
- (b) Gear extension -- 14 gpm (10 - 12 seconds)
- (c) Wing flaps down -- 8 gpm (10 seconds)
- (d) Wing flaps up -- 3 gpm (22 seconds)
- (e) Horizontal stabilizer -- 7 gpm
- (f) Ailerons -- 17 gpm (25°/second)
- (g) Rudder -- 3 gpm (25°/second)

(6) There are various combinations of hydraulic system operations which could cause momentary reversion of the flight controls to manual operation. To prevent reversion to manual operation, the priority valve assures that the left power manifold receives all the hydraulic fluid pressure under conditions of very large flow demands.

#### U. Hydraulic System Selector Control Lever

- (1) The hydraulic system selector control lever is a manually actuated, mechanical lever detented to three positions. The lever provides a mechanical means, through cables, for positioning the system selector valve and the auxiliary hydraulic pump supply selector valve. The hydraulic system selector control lever is located on the system engineer's control pedestal. The lever is attached to a drive sector, located on a common shaft with the other control pedestal sectors. The lever and sector are accessible through the cover plates on the system engineer's pedestal.
- (2) To put the hydraulic power system in the bypass condition, the system selector control lever is lifted out of detent and moved to bypass/general system position. At the same time, the cable moves the sector and pushrod of the system selector valve to the No. 1 position. The pushrod positions the system selector valve to the No. 1 bypass position. At the same time, the cables from the system selector valve sector move the auxiliary pump supply selector valve sector to No. 1 (auxiliary) position. The auxiliary pump supply selector valve remains in the auxiliary supply position through the idle feature of the sector rigging. In this condition, the engine-driven pump pressure is ported to the reservoir and the auxiliary pump supplies pressure to the general system. In this position, the fluid is supplied to the auxiliary pump from the low standpipe in the hydraulic system reservoir. To put the system into the alternate condition, the selector control lever is lifted out of detent and moved to the general system/main gear down lock and flaps position. The cables move the system selector valve sector to the No. 3 (alternate) position. The system selector valve sector moves

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

the cables rotating the auxiliary pump supply selector valve sector to the No. 3 (alternate) position. As the sector rotates, the end of the arm moves away from the idle position. This positions the valves to the alternate position, supplying fluid to the auxiliary pump from the auxiliary pump alternate reservoir. In this position, fluid from the auxiliary pump is ported to the wing flap control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported to the general system.

Jun 15/67

Printed in U.S.A.

29-10-0  
Page 7  
Page 41

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - DESCRIPTION AND OPERATION

1. General

A. Description (See Figures 1 and 2.)

- (1) The hydraulic power system receives fluid pressure from the engine-driven hydraulic pumps, one installed on each inboard engine. The electrically driven auxiliary pump is used to supplement the engine-driven pumps, or to independently supply the system with fluid pressure.
- (2) The hydraulic system reservoir, located in the left wing root, has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir is used for fluid, and 1/10 is used for foam space. A separate air chamber is installed in the reservoir system to provide for a greater fluid capacity in the main reservoir. A reservoir filler assembly is installed in the piping between the reservoir and the air chamber and has a vent line from the filler neck to the tee at the top of the reservoir sight gage. The reservoir is pressurized to 30 to 35 psi by bleed pressure from the engine-driven pumps through an air pressure regulator-aspirator.
- (3) The engine-driven pumps receive fluid from the pressurized main reservoir through respective engine hydraulic fire shutoff valves. The engine hydraulic fire shutoff valves are normally open and can be mechanically controlled from the flight compartment. The pumps supply fluid pressure through respective check valves to the dual filter and relief valve. Some of the fluid from the filter is ported through the regulator-aspirator to pressurize the reservoir. Most of the fluid is routed through a check valve to the system selector valve, and then to the left and right hydraulic power manifolds. The manifolds distribute the fluid pressure to the subsystems.
- (4) Hydraulic fluid is normally supplied to the auxiliary hydraulic pump from a low standpipe in the main reservoir. During alternate operation, the auxiliary hydraulic pump receives fluid supply from the auxiliary pump alternate reservoir, which is located just aft of the auxiliary pump. From these reservoirs, the fluid is ported through the auxiliary pump selector valve which is mechanically controlled from the flight compartment by the system selector control lever. When operating, the auxiliary hydraulic pump supplies fluid pressure to the subsystems through the system selector valve which is also controlled by the system selector control lever in the flight compartment. A filter and check valve are installed in the line from the auxiliary pump to the system selector valve.
- (5) An accumulator is installed in the pressure line to the subsystems to provide a reserve supply of fluid and to act as a surge damper for the system.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Engine-driven pump fluid pressure is routed through the system selector valve to the left power manifold, where it is distributed to some of the subsystems and through the priority valve to the right power manifold. Fluid pressure from the right power manifold is distributed to the remaining subsystems.
- (7) The priority valve is a spring-loaded, poppet-type, balanced relief valve installed in the line downstream of the left power manifold. The priority valve's function in the system is to prevent the flight control systems from reverting to manual operation during high demands on the hydraulic system.
- (8) A fluid pressure transmitter, located in the nosewheel well, senses the system pressure, which is indicated on the hydraulic system pressure indicator in the flight compartment.

**B. Normal Operation**

- (1) Fluid is supplied to the hydraulic system from the pressurized hydraulic system reservoir. For operation of the hydraulic system under normal conditions, 8.1 US gallons (6.7 Imperial gallons; 30.6 liters) of hydraulic fluid are available to the engine-driven hydraulic pumps, and 12.9 US gallons (10.7 Imperial gallons; 48.3 liters) are available to the auxiliary hydraulic pump. Supply lines from the main reservoir carry fluid to each inboard pylon through normally open engine hydraulic fire shutoff valves to the engine-driven hydraulic pumps. Fluid is supplied to the auxiliary hydraulic pump from the main reservoir through a low standpipe at the base of the reservoir. Fluid is carried from the reservoir through the auxiliary pump selector valve to the auxiliary hydraulic pump.
- (2) The engine-driven hydraulic pumps supply full system pressure (3000 psi nominal) at any given engine speed, from idle to full power. The output flow of the pump is varied by sensing pressure from the outlet side of the pump. Each engine-driven pump contains a solenoid-operated bypass valve which, when energized, bypasses the pressure control regulator of the pump and ports fluid to the pump yoke control piston which feathers the pump. When the pump is feathered, flow rate is reduced to almost zero (1.0 gpm) and to a pressure of approximately 300 psi. Half of this flow maintains pump lubrication and cooling through internal leakage. This leakage is returned, through a check valve, the engine-driven pump case drain line filter, and another check valve to the case drain return port of the reservoir. The pressure fluid from each pump passes through a check valve to the dual filter and relief valve.
- (3) The fluid enters the dual filter and relief valve through the relief valve chamber. The fluid is passed through the filter element, through a manifold, and through a common outlet port. Fluid from the outlet port is routed through a check valve to the system selector valve. If back pressure in the system builds up to approximately 3300 psi, the relief valves in the dual filter and relief valve open and port fluid

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

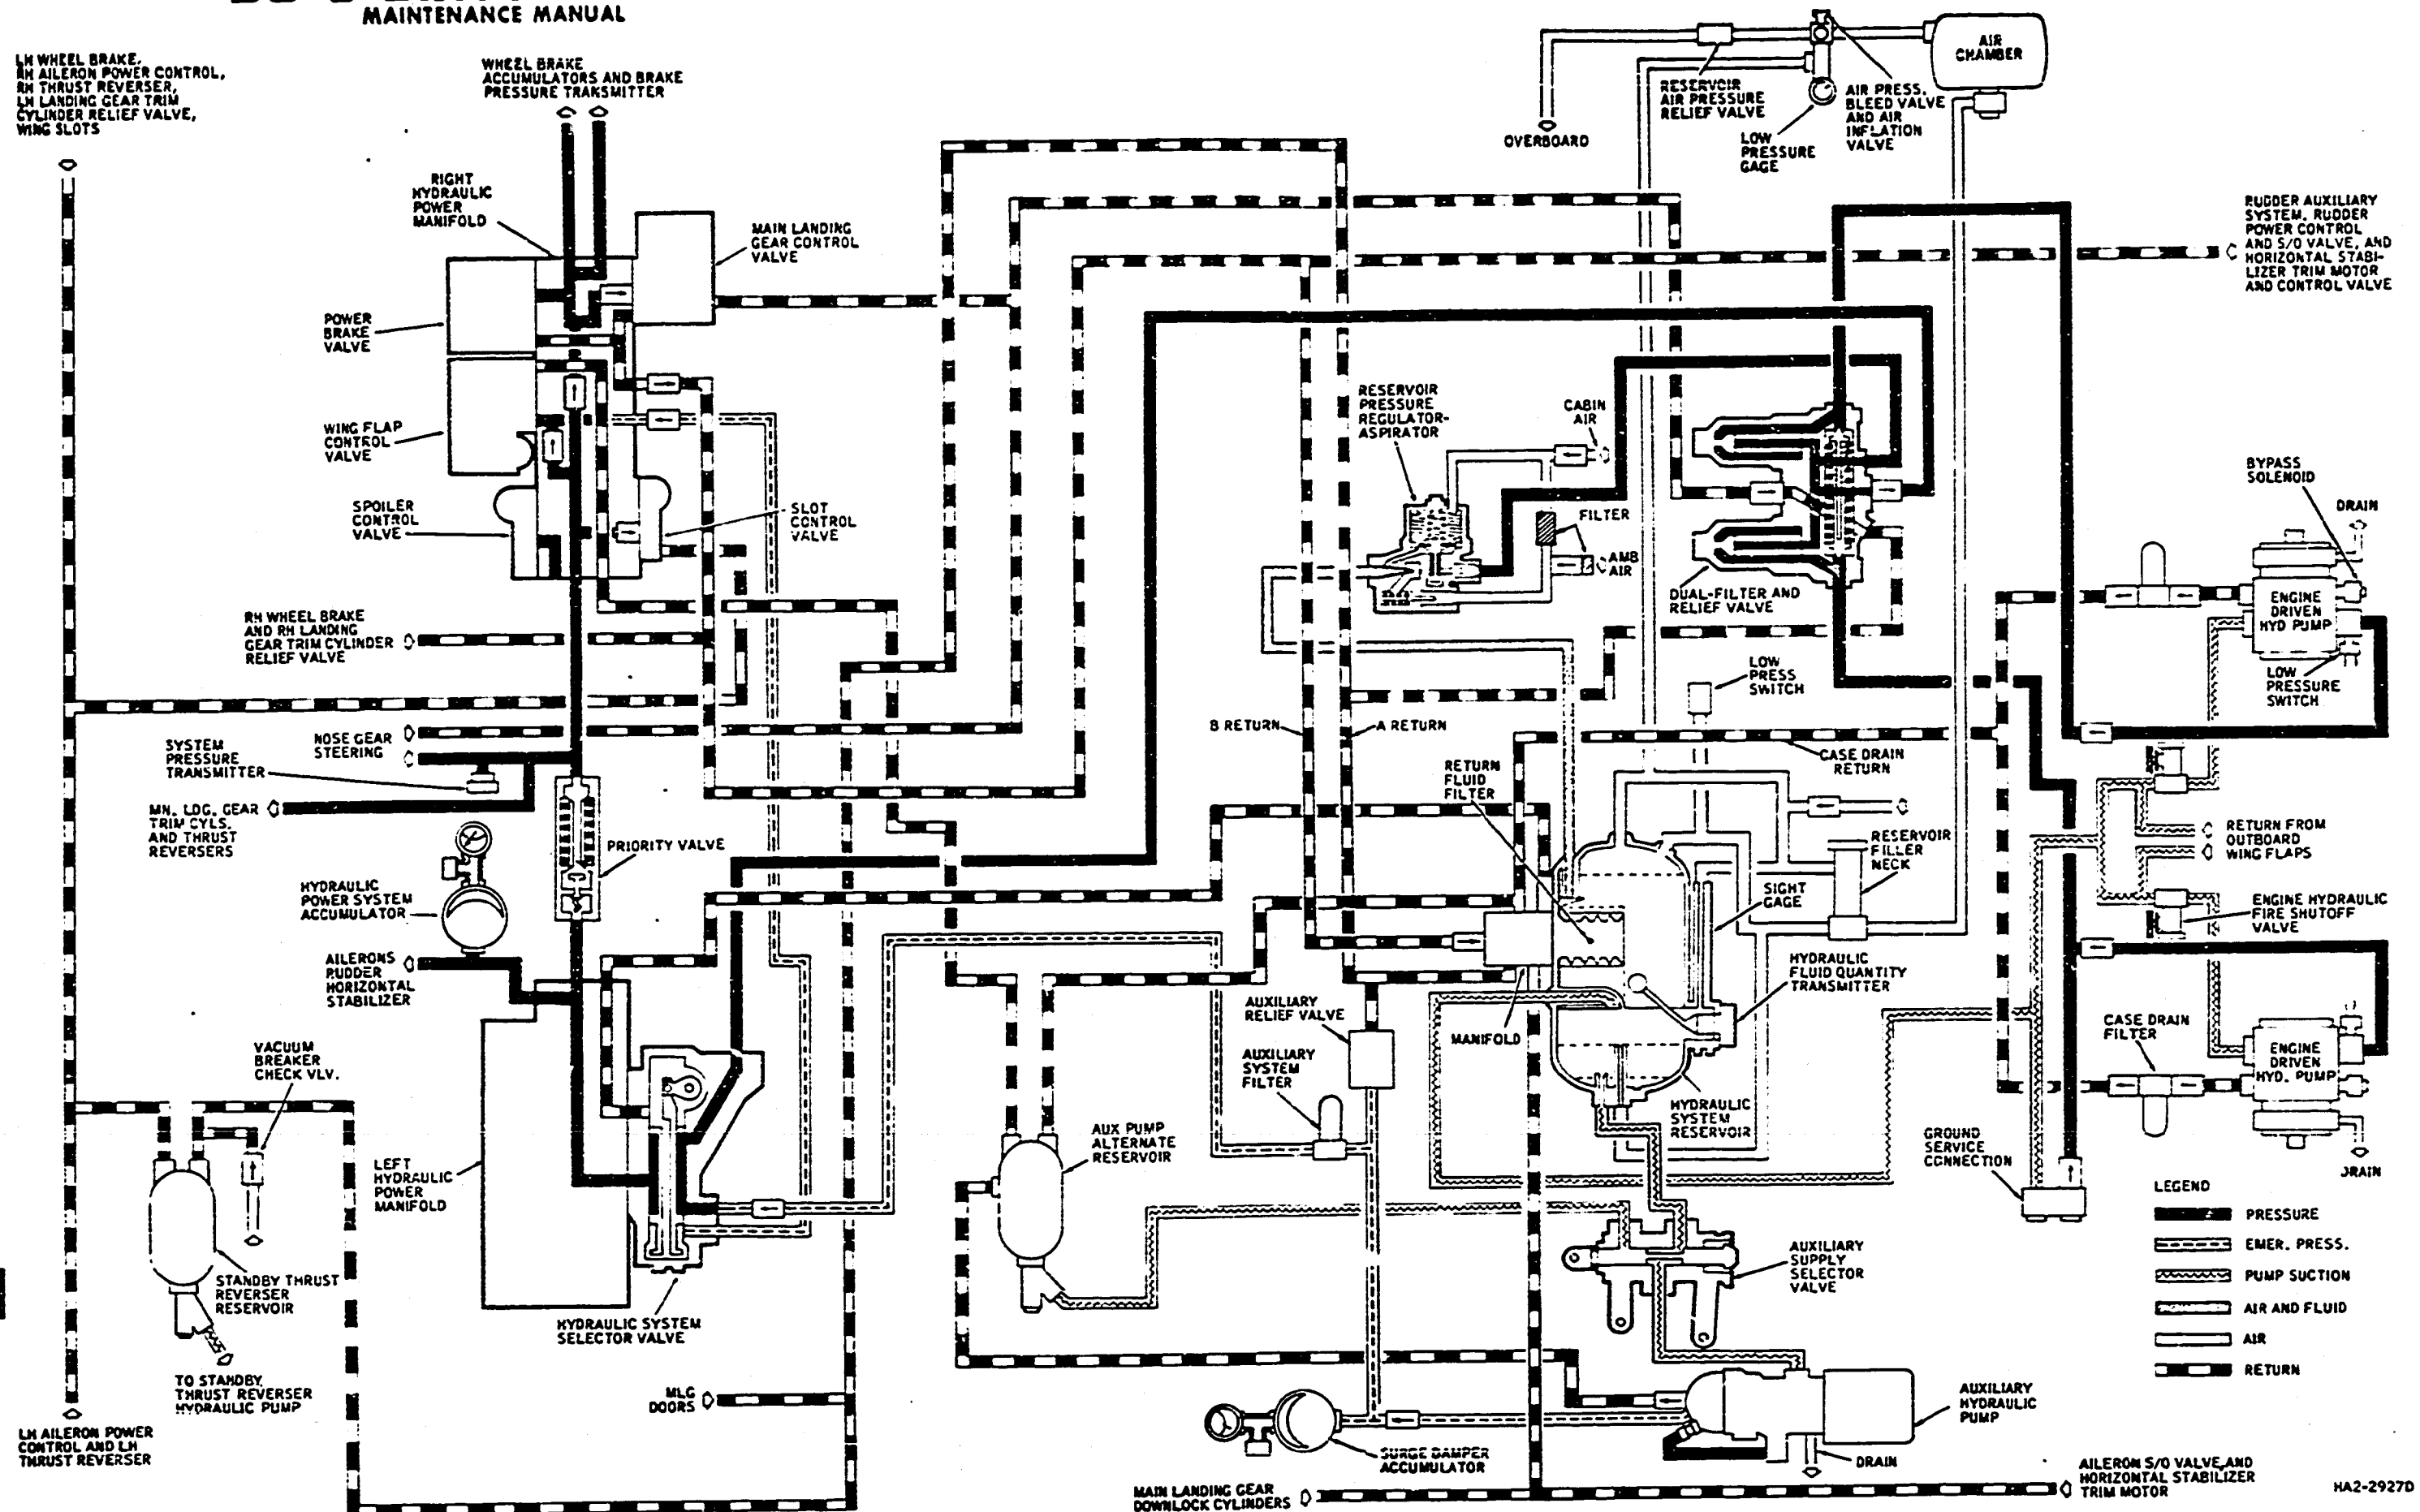

Hydraulic Power System -- Schematic Diagram  
 Figure 1

29-10-0  
 CODE 8  
 Page 3


Aug 1/68

Printed in U.S.A.

HA2-2927D



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

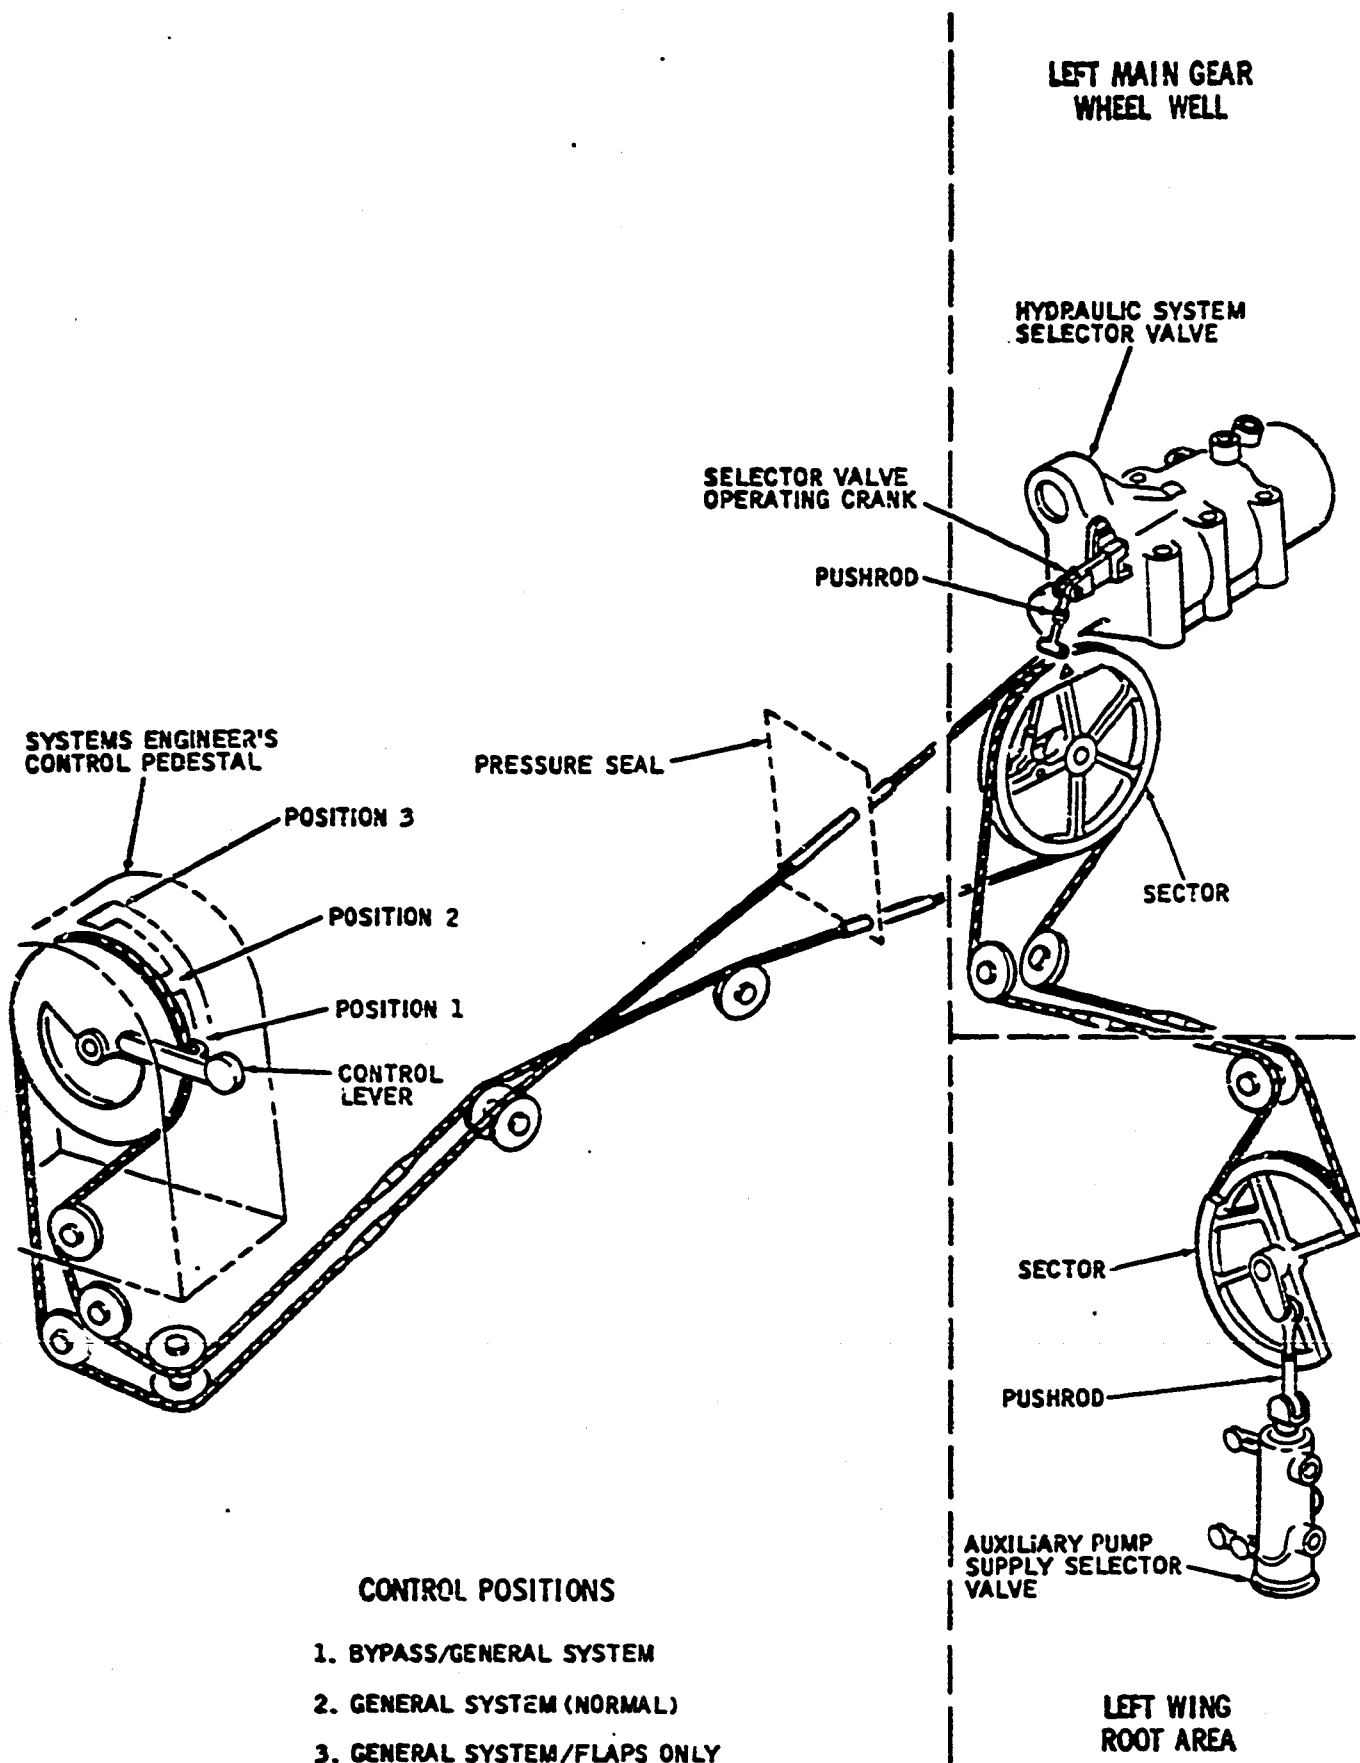

**CONTROL POSITIONS**

1. BYPASS/GENERAL SYSTEM
2. GENERAL SYSTEM (NORMAL)
3. GENERAL SYSTEM/FLAPS ONLY

Hydraulic System Selector and Auxiliary Pump Supply  
 Selector Valves -- Mechanical Control Schematic  
 Figure 2

HA2-2145

29-10-0  
 CODE 8  
 Page 5

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

back to the reservoir via a return port. The relief valve poppet closes again when system pressure drops to approximately 3000 psi.

- (4) The aspirator receives filtered fluid (bleed pressure at nominal 3000 psi) from the dual filter and relief valve. The aspirator operates on the jet pump principle. Hydraulic fluid is atomized and mixed with air within the unit by a nozzle and a venturi. The mixture is used to pressurize the reservoir and reservoir air chamber. The regulator diaphragm maintains a pressure range of 30 to 35 psi in the reservoir and air chamber. If there is a regulator malfunction, the aspirator stalls when the outlet pressure reaches a maximum of 40 psi. A reservoir relief valve in the reservoir vent line relieves thermal expansion pressure above 45 (+5, -0) psi.
- (5) Pump pressure fluid enters the system selector valve through the system pressure inlet port. When the pump selector control lever is in the general system (normal) position, fluid is ported to the pressure passages of the left power manifold. The fluid pressure in the left power manifold is ported through the priority valve to the nose gear and the right power manifold and directly to the following valves:
  - (a) Aileron power shutoff
  - (b) Rudder power shutoff
  - (c) Longitudinal trim hydraulic motor shutoff.
- (6) The right power manifold distributes fluid pressure to the brake accumulators, the pressure transmitter, and the following control valves:
  - (a) Wing flap
  - (b) Slot
  - (c) Main gear
  - (d) Power brake.
- (7) The return fluid from the wing flap control valve is ported through the right power manifold and into the auxiliary hydraulic pump alternate reservoir. Return fluid from the outboard wing flaps is piped into the suction lines for each engine-driven hydraulic pump. Return fluid from the slot control valve is ported into the A return line to the main reservoir. The power brake and main gear control valve gear up return fluid is ported through a restrictor check valve into the B return line to the reservoir. The main gear control valve gear down return pressure bypasses the right manifold and returns to the reservoir through the A return line. All return fluid entering the reservoir is filtered through the return ports filter located within the reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

**C. Bypass Operation**

- (1) The output of the engine-driven hydraulic pumps is bypassed by moving the system selector control lever out of the general system (normal) position to the bypass/general system position.
- (2) The system selector valve in the bypass position ports engine-driven pump pressure from the dual filter and relief valve directly to the return passage of the left power manifold. From the manifold the fluid is ported directly to a tee in the wing flap return port of the hydraulic system reservoir. In the bypass condition, the auxiliary hydraulic pump receives fluid from the hydraulic system reservoir, pressurizes it to system pressure and ports it to the left and right power manifolds for distribution to the subsystems.

**D. Alternate Operation**

- (1) When both engine-driven hydraulic pumps and the auxiliary hydraulic pump are rendered inoperative due to the loss of the normal supply of fluid, the hydraulic power system can be rigged for alternate operation. This is accomplished by placing the system selector control lever in the general system/flaps only position. When the system selector control lever is in this position, the auxiliary hydraulic pump supply selector valve is positioned to supply fluid from the auxiliary pump alternate reservoir to the auxiliary pump.
- (2) Fluid is supplied to the auxiliary pump from the outlet port of the auxiliary pump supply selector valve. Output pressure is ported through the auxiliary system filter and check valve to the auxiliary pressure inlet port of the system selector valve.
- (3) In the general system/flaps only position, auxiliary pump pressure bypasses the manifold pressure passages and is ported from the alternate outlet port of the system selector valve. Fluid from this port flows directly to a port on the right power manifold, through an internal check valve in the manifold, to the wing flap control valve.

**E. Mechanical Control**

- (1) The hydraulic power mechanical control system consists of the hydraulic system selector control lever cable drum, the system selector valve sector, the system selector valve, the auxiliary hydraulic pump supply selector valve sector, and the auxiliary hydraulic pump supply selector valve.
- (2) The control lever located on the system engineer's control pedestal is used to position the system selector valve and, in turn, the auxiliary hydraulic pump supply selector valve.

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 8  
Page 7

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (3) The control lever is spring loaded into general system (normal) position, and is connected to the control lever cable drum. Two cables run from the drum, under the cabin floor, aft through the pressure bulkhead at the rear wing spar, and into the left wheel well to the system selector valve sector. A pushrod connects the sector to the positioning lever of the system selector valve.
- (4) A second set of cables is routed from the system selector valve sector into the left wing root to the auxiliary hydraulic pump supply selector valve sector. When the system selector valve is in either bypass or normal, the auxiliary hydraulic pump supply selector valve sector is arranged so that the pushrod idles between the two positions. This allows the valve to remain in the auxiliary position. When the sector is moved to the alternate position, the pushrod is pulled by the sector to reposition the valve to the alternate position.
- (5) The control lever is normally in the general system (normal) position. To move the system selector valve to the bypass position, the control lever is moved to the bypass/general system position. When the system selector valve is moved to the bypass position, the auxiliary hydraulic pump supply selector valve sector is moved to a new position. Due to the idle feature on the auxiliary sector, the valve remains in the auxiliary position. With the valve in this position, fluid is supplied to the auxiliary pump through the low standpipe in the hydraulic system reservoir. In this condition, engine-driven pump pressure is ported to the reservoir and the auxiliary pump pressure is ported to the general system.
- (6) To put the system in alternate operation, the control is moved to the general system/flaps only position. This moves the system selector valve to the alternate position, and simultaneously moves the auxiliary hydraulic pump supply selector valve to the alternate position. Fluid is supplied to the auxiliary pump from the auxiliary hydraulic pump alternate reservoir. Fluid pressure from the auxiliary pump is ported to the flap system control valve. Engine-driven pump pressure is ported from the system selector valve to the general system.

## 2. System Components

### A. Hydraulic System Reservoir (See Figures 3 and 4.)

- (1) The hydraulic system reservoir is installed on the aft side of the wing spar in the left wing root and is accessible through the left wing root access door. The hydraulic system reservoir serves as the main source of hydraulic fluid for the engine-driven hydraulic pumps and the normal supply for the auxiliary hydraulic pump. The reservoir is cylindrical in shape and contains a filter, baffle, and a screen cover encasing the filter. The filter prevents foreign particles from contaminating the fluid supply. Mountings are provided on the exterior surface of the reservoir for return line ports, aspirator port, electrical sensing units, sight gage, instruction placards, magnetic drain plug, and system supply ports.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

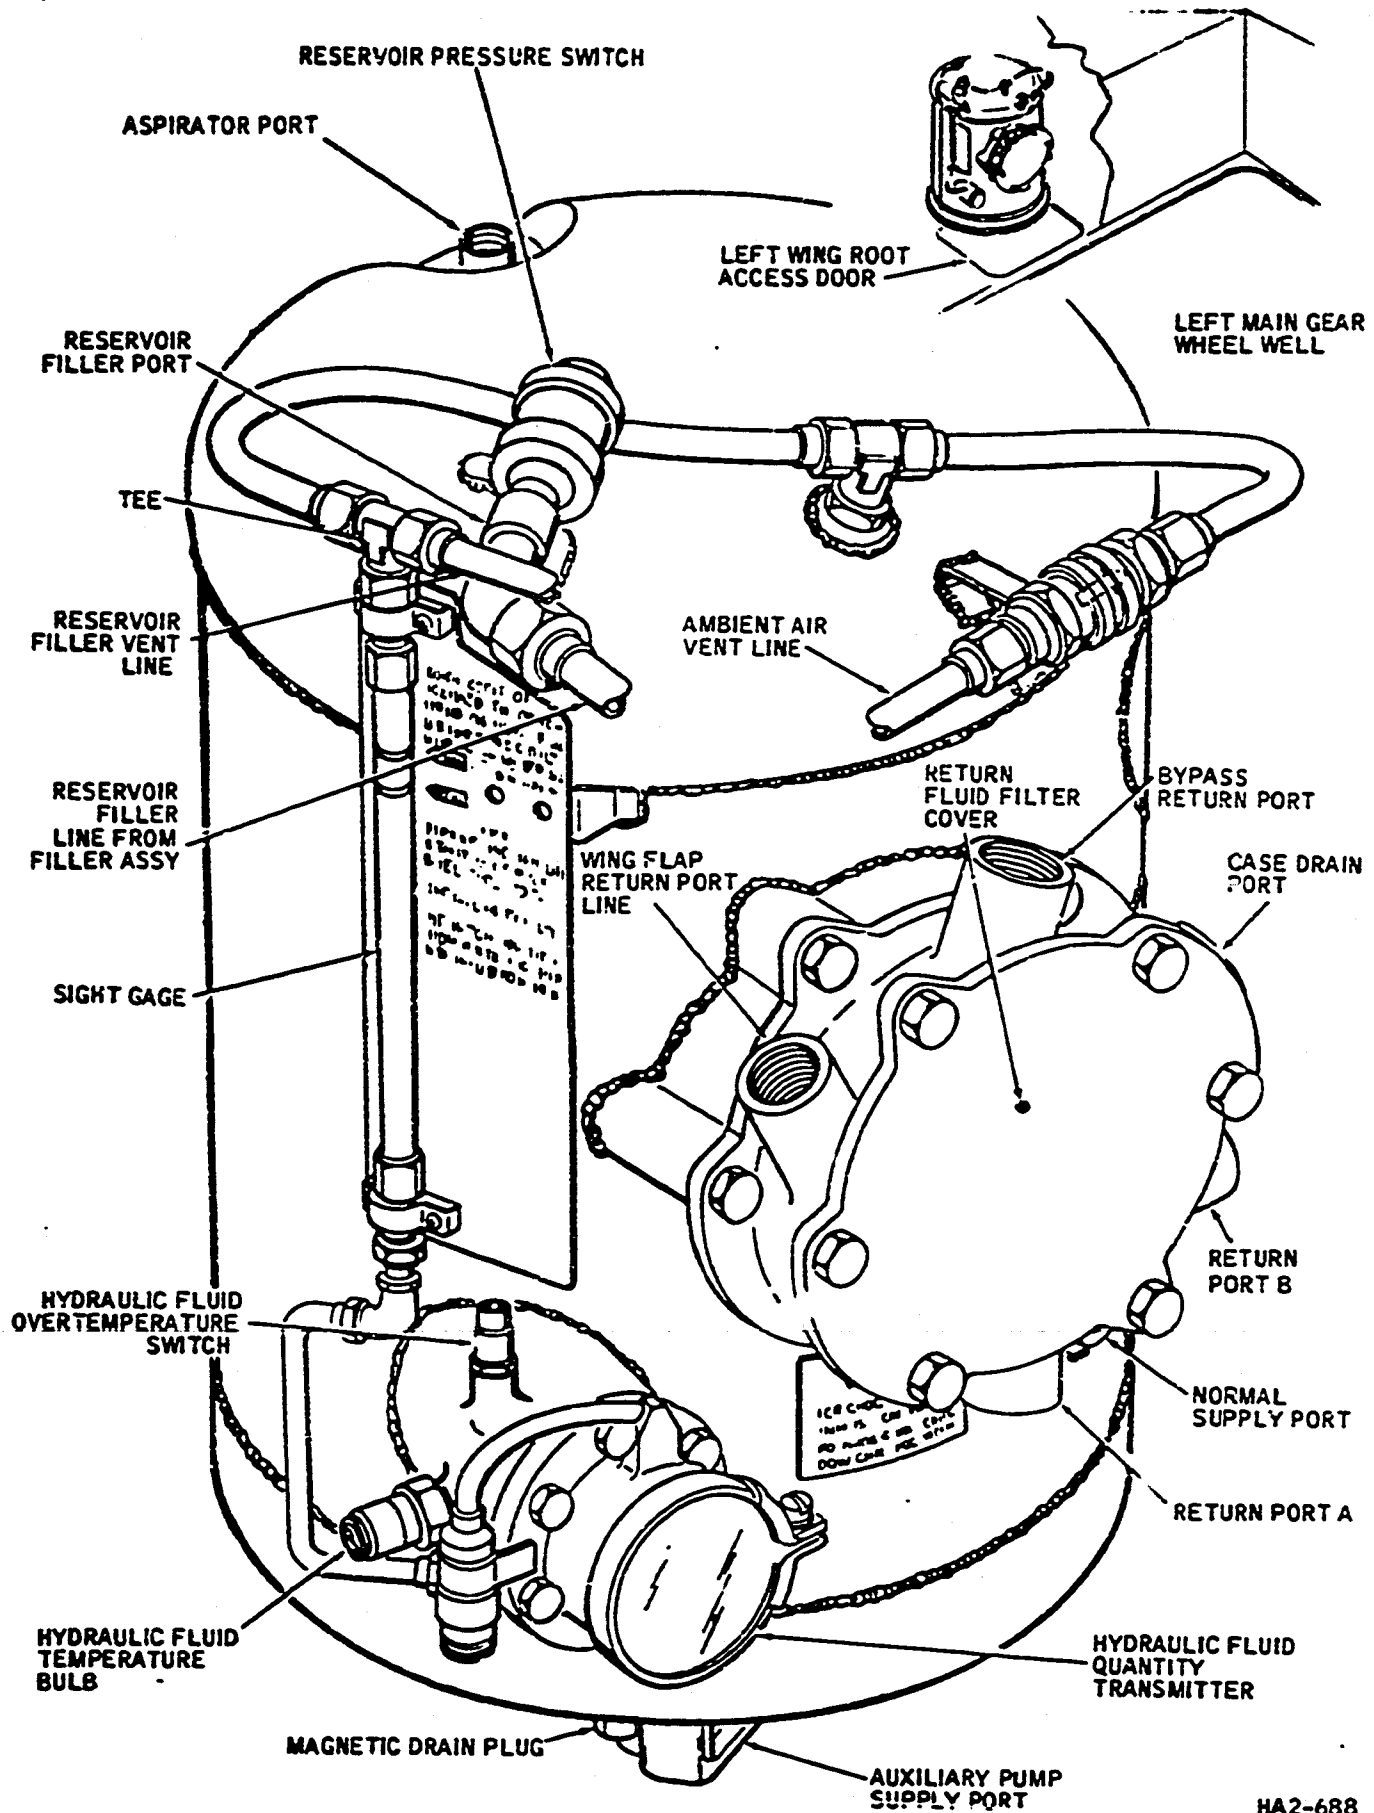

Hydraulic System Reservoir -- External View  
 Figure 3


HA2-688

29-10-0  
 CODE 8  
 Page 9

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

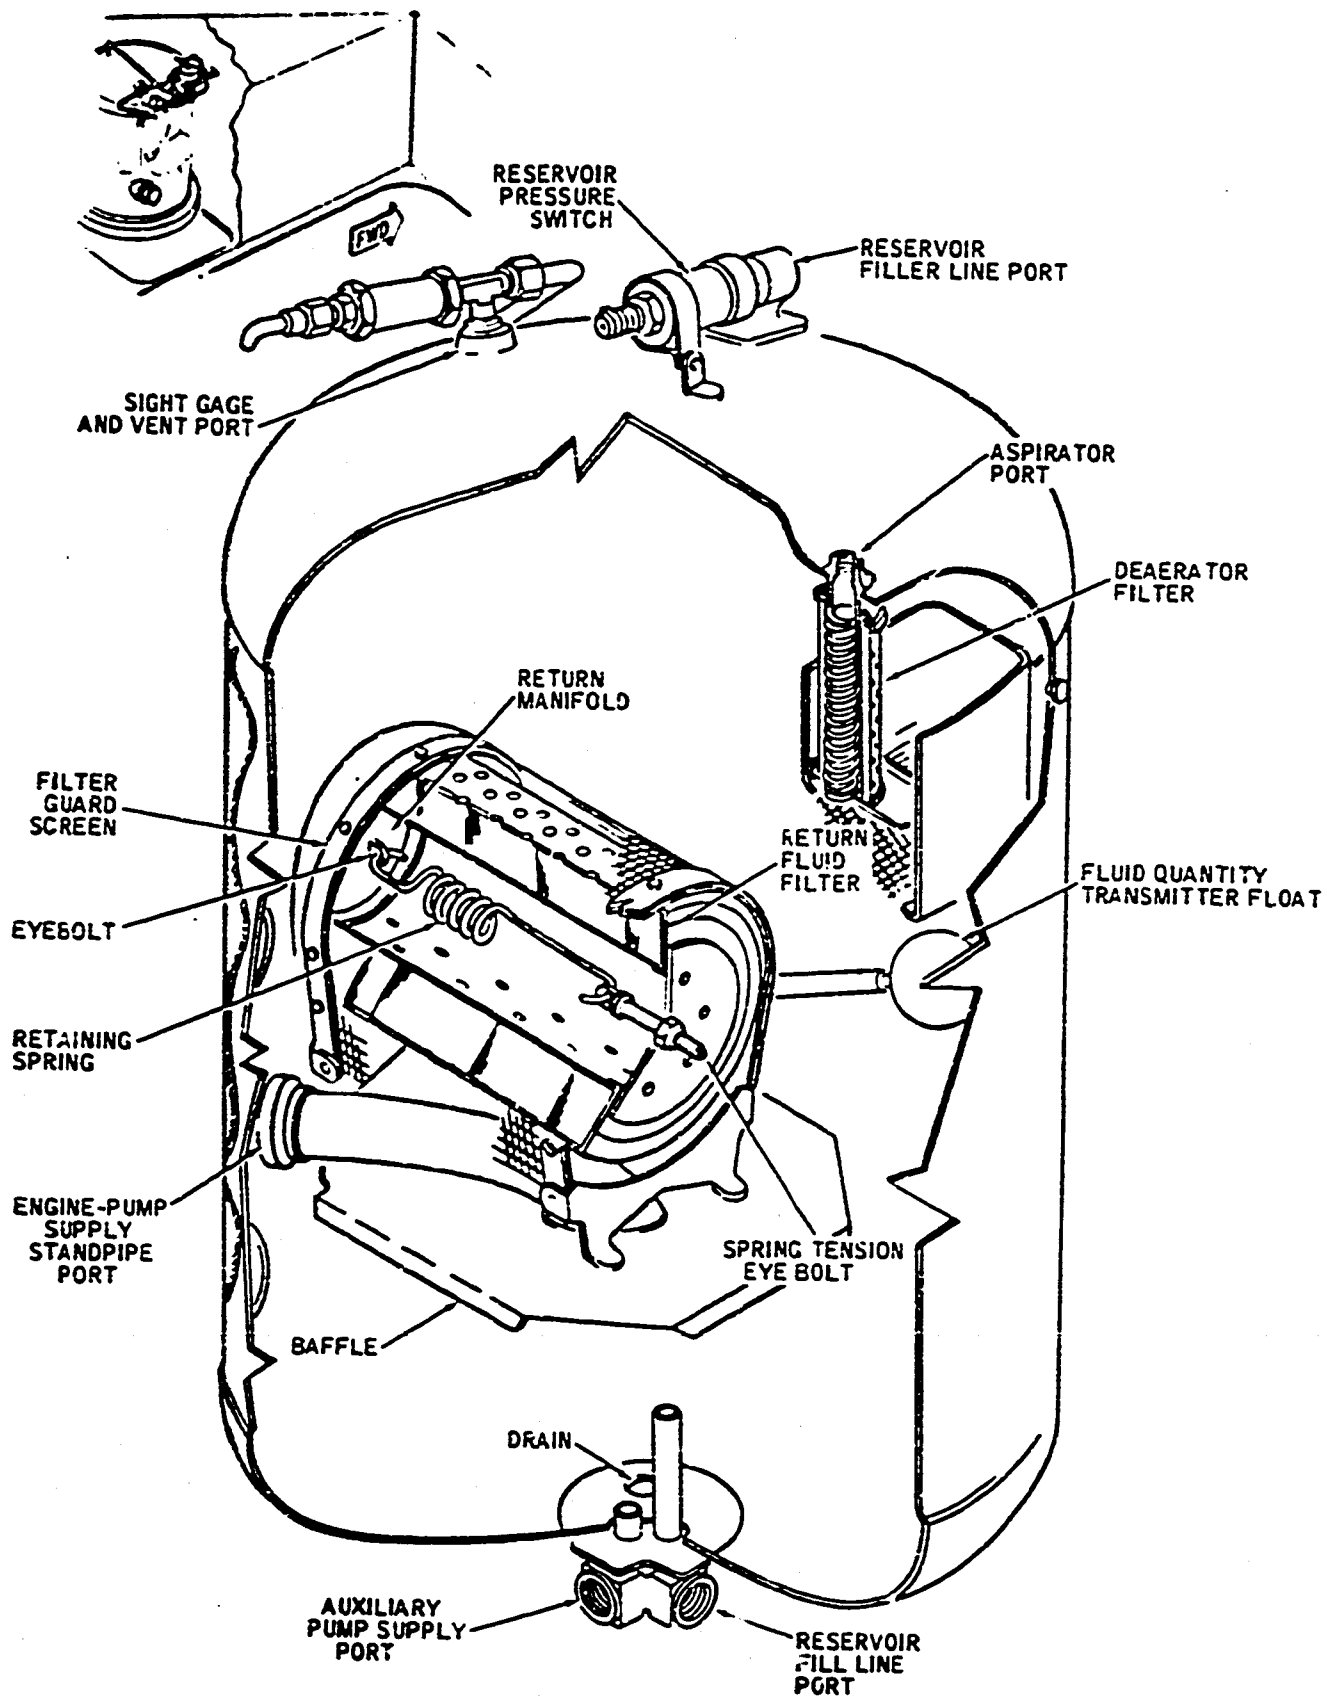

Hydraulic System Reservoir -- Cutaway View  
 Figure 4

HA2-689

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The reservoir is pressurized with air from the regulator-aspirator to a range of 30 to 35 psi and has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir volume is used for fluid and 1/10 is used for foam space.
- (3) The aspirator port through which the reservoir is pressurized is located in the recess on top of the reservoir. An aspirator-deaerator filter is supported in the reservoir by a screen and support box assembly which is mounted to the reservoir wall by two bolts.
- (4) The mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The return ports manifold is an open-centered ring, flanged at both sides and provided with five fluid ports around its circumference; return port A is located at the bottom, return port B is located at the lower right side, the wing flap return port is located at the upper left side, and the system selector valve bypass port is located at the top. One flange of the manifold is mounted with six bolts to the mounting flange on the reservoir. The return fluid filter cover fits into the open side of the manifold, and is attached to the outer manifold flange with six bolts to form a fluid-tight cover for both the manifold and the filter.
- (5) The return fluid filter is installed in the reservoir, behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the return fluid filter cover holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to the engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
- (6) A flanged adapter for the fluid quantity transmitter is welded to the reservoir below and to the left of the return ports manifold. The adapter is provided with two small port bosses for the hydraulic fluid temperature bulb and the hydraulic fluid overtemperature switch. The lower end of the sight gage connects to a third port in the adapter, while the top of the sight gage tees into a port at the top of the reservoir. An instruction plate is mounted behind the sight gage and the vacuum breaker check valve tees into the port at the top of the reservoir that is used by the sight gage.

B. Hydraulic Reservoir Return Fluid Filter (See Figure 4.)

- (1) The reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply. The filter is located behind the return ports manifold, and is spring loaded to act as its own relief valve. Access to the filter is by removing the return fluid filter cover from the return ports manifold by removal of six bolts. The filter is attached by the retaining spring to the cover and is withdrawn from the reservoir when the cover is removed.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (2) Externally, the filter consists of two perforated concentric tubes. The area between the tubes is closed by metal end caps which are bonded to the two tubes. A resilient rubber gasket is bonded to each of the caps. Each gasket must be smooth and flat for proper sealing of the filter. The gaskets act as a static seal and a relief valve seat.
- (3) Internally, the filter has a 10-micron, resin-impregnated convoluted paper-type filter element. The area of the filter element is approximately 1960 square inches. The filter is held in place by a retaining spring. One end of the spring is attached to an eyebolt located inside the return port's manifold cover. The spring passes through the center chamber of the filter and is connected to another eyebolt. This eyebolt is secured to a large washer and plate by means of a self-locking nut. The washer seats on the rubber gasket which is bonded to the filter. The fluid enters the center chamber of the filter and passes through the inner tube of the filter to the filter element by means of perforation holes. Foreign matter is filtered out by the filter element, and the fluid leaves the element through perforation holes in the outer tube. When the element becomes saturated with foreign matter, the filter acts as its own relief valve and unseats at 20 to 25 psi above normal return pressure which allows fluid to bypass the filter and enter the reservoir.

C. Hydraulic Reservoir Air Pressure Regulator-Aspirator (See Figure 5.)

- (1) The reservoir air pressure regulator-aspirator is a jet-type air pump, regulated by a pressure-sensitive shutoff valve. The unit pressurizes the hydraulic reservoir with air to the operating pressure range of 30 to 35 psi. The regulator-aspirator is located on the top inboard side of the reservoir and is mounted on the reservoir retainer ring. Access to regulator-aspirator is through the left wing root access door.
- (2) The regulator-aspirator assembly consists of a main aspirator body and a regulator housing. The main aspirator body has two inlet ports and one outlet port. The ports are permanently identified inlet, outlet, and air inlet. The plug for an air check valve is located near the outlet port. A chemically treated paper filter is installed near the aspirator body air inlet port in the air line from the pressurized cabin area. A metal screen filter is installed on the check valve which tees into the aspirator body air inlet port.
- (3) The reservoir air pressure regulator-aspirator operates basically with a jet pump action which is regulator controlled. Fluid enters the assembly through the fluid inlet port where it is filtered and then ported through the valve assembly of the regulator. During normal operation, when air pressure at the outlet port is under 30 psi, the valve is open, porting fluid to the nozzle. The orifice in the nozzle sprays the fluid through the venturi of the outlet port, creating a vacuum in the chamber around the venturi. When the vacuum becomes great enough to create a pressure differential of approximately 1 psi, ambient air opens the air check valve. The air is ported to the chamber around the venturi and is siphoned, with the fluid, through the outlet port.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

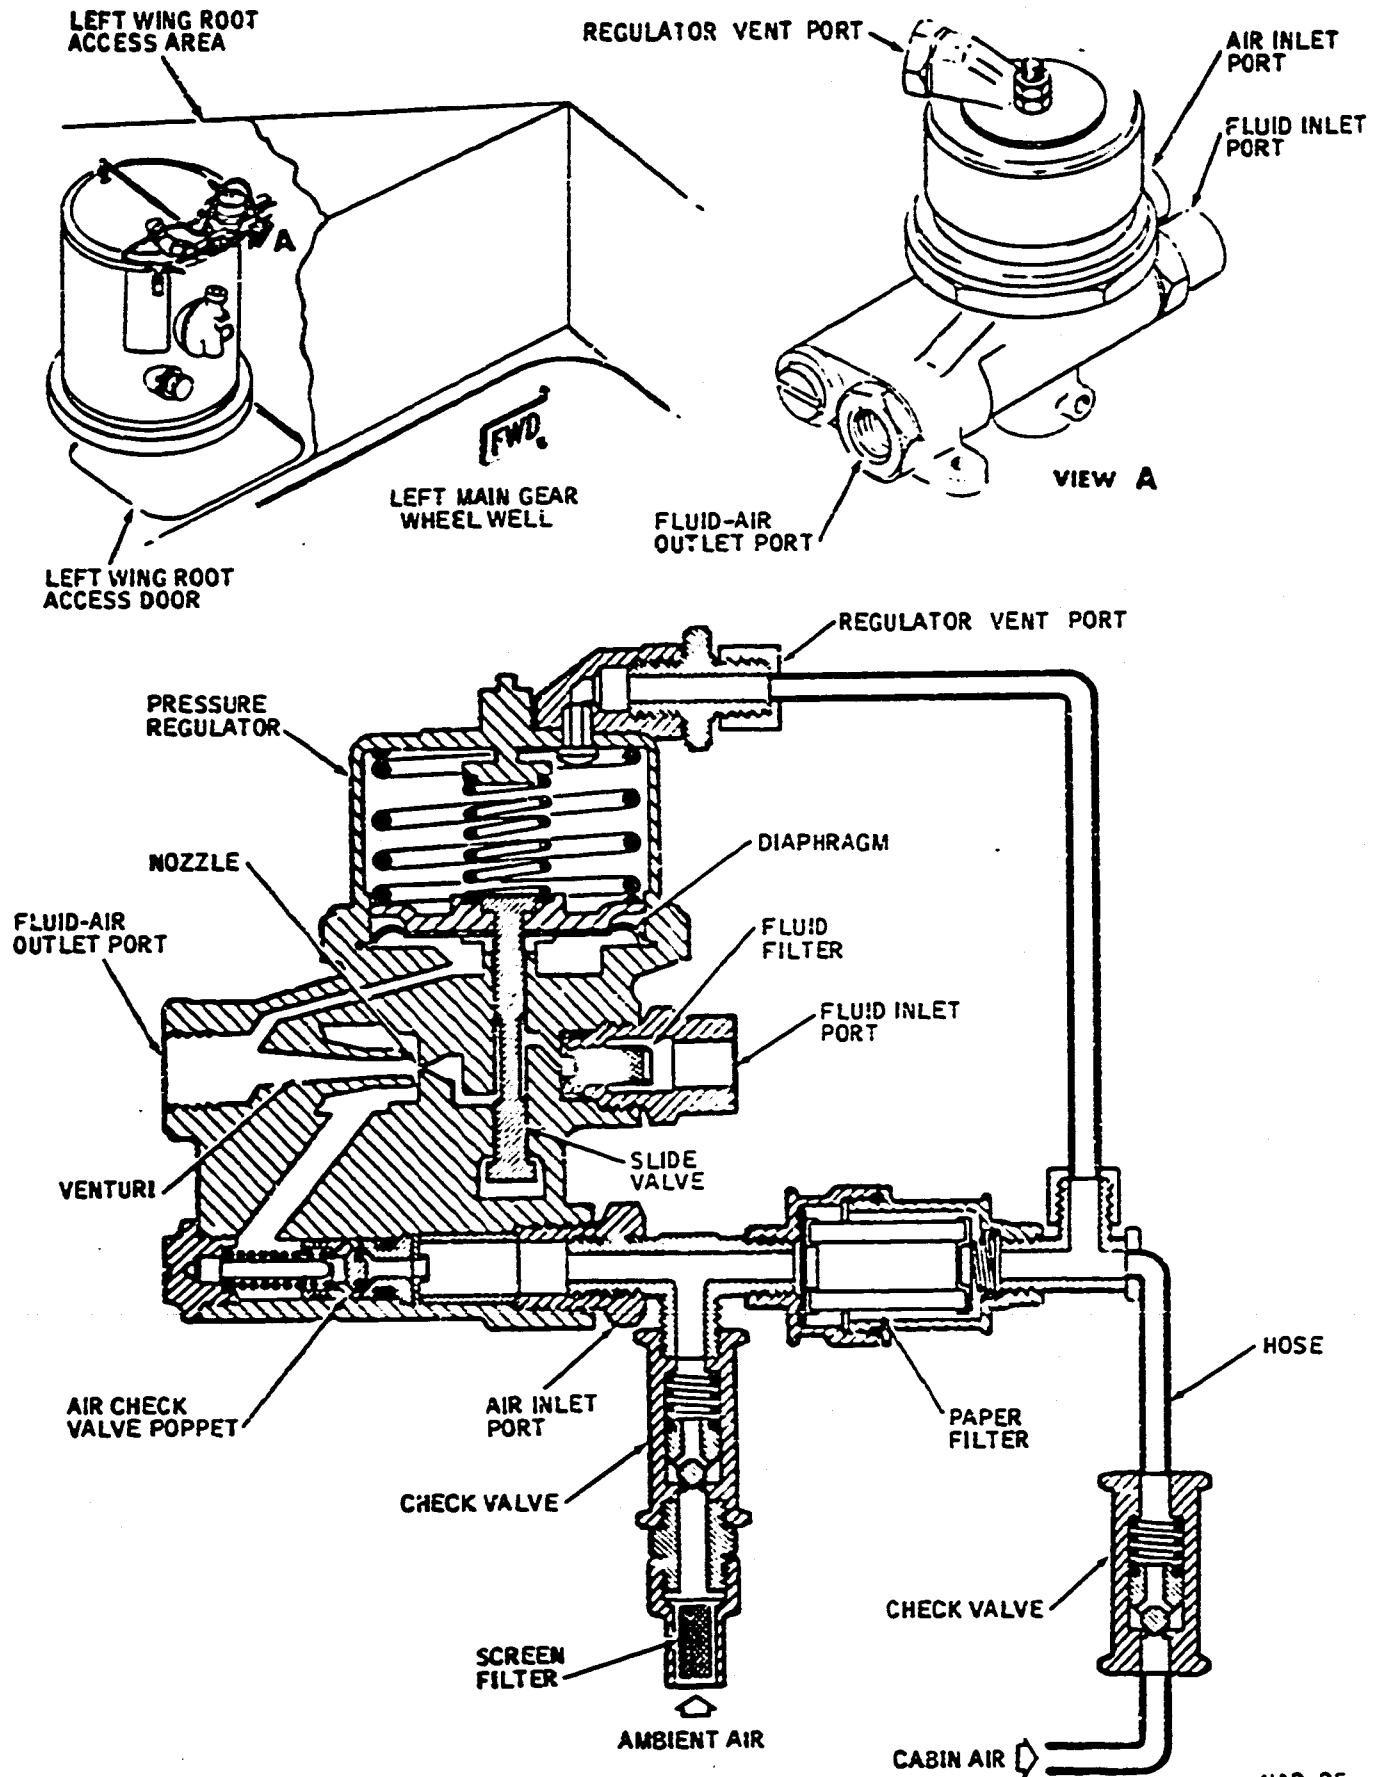

Reservoir Air Pressure Regulator-Aspirator -- Schematic  
 Figure 5

HA2-25

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 8  
 Page 13

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) Hydraulic fluid inlet pressure at the engine-driven hydraulic pumps is improved at high altitude operation by supplying pressurized filtered cabin air to the reservoir regulator-aspirator instead of ambient outside air. Part of the inlet air is diverted by a tee fitting to the regulator chamber to provide a more positive regulating force on the diaphragm than would be obtained with low ambient pressures. The chemically treated paper filter, installed in the regulator-aspirator air supply line from the cabin, removes smoke tars and impurities from the pressurized cabin air. The steel mesh screen filter, installed on the check valve which tees into the regulator-aspirator air inlet port downstream of the paper filter, removes dust, dirt, and foreign particles from the ambient air and serves as a standby to supply filtered air in event the paper filter is clogged.
- (5) As pressure in the reservoir builds up, back pressure is bled from the outlet port to the diaphragm chamber. The reaction on the diaphragm begins to move the slide valve to cut off the fluid flow. At 30 to 35 psi of back pressure, the diaphragm completely closes the slide valve, cutting off the flow of fluid. If there is a regulator malfunction, the aspirator stalls when outlet pressure reaches a maximum of 40 psi.
- (6) The aspirator is capable of pressurizing the reservoir to 30 to 35 psi in approximately 4 minutes at altitudes from sea level to 15,000 feet, when fluid is ported through the nozzle at 0.5 gpm at 3000 psi.


D. Regulator-Aspirator Air Filters (See Figure 6.)

- (1) The regulator-aspirator air filters remove ambient and cabin air impurities from the air which is used to pressurize the main hydraulic system reservoir. The filtering system is composed of two filters. One of which is a paper element filter, installed directly in the cabin air supply line near the regulator-aspirator. The other filter is a fine mesh, screen-type filter, installed on a check valve and positioned at right angles to the regulator-aspirator air inlet port. The screen filter, in addition to providing an immediate supply of ambient air during ground operations, serves as a standby air inlet to preclude air starvation of the regulator-aspirator in the event the paper element filter becomes clogged.


E. Hydraulic Reservoir Relief Valve (See Figure 7.)

- (1) The reservoir relief valve and the air pressure aspirator-regulator keep the reservoir pressurized to normal operating range. The valve relieves excess air pressure which may build up in the reservoir through thermal expansion in the system. The valve has an inlet port and an outlet port and consists, internally, of an inlet port seat and a spring-loaded poppet.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

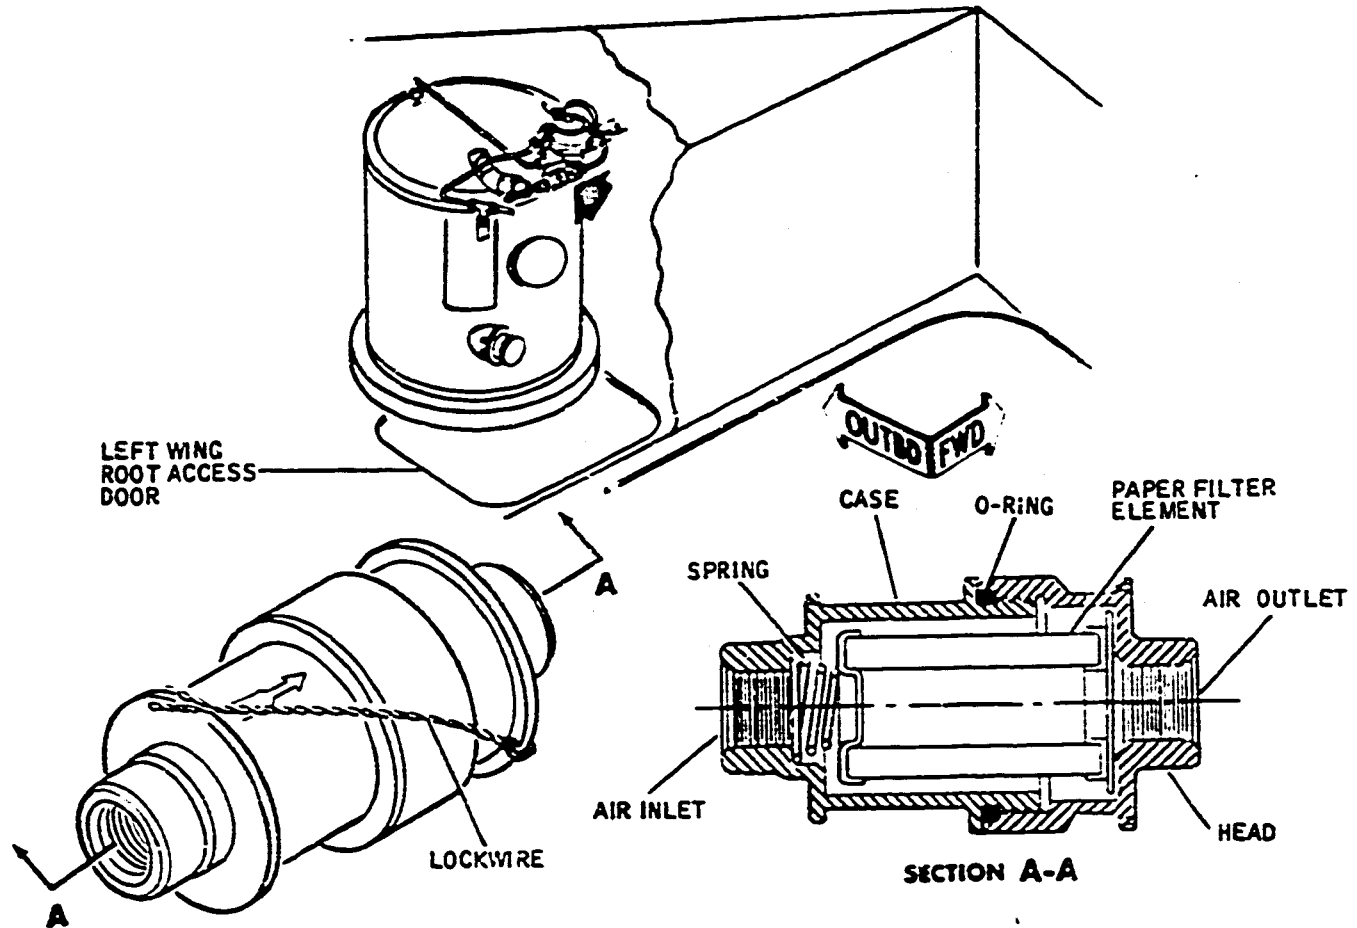

PAPER ELEMENT FILTER

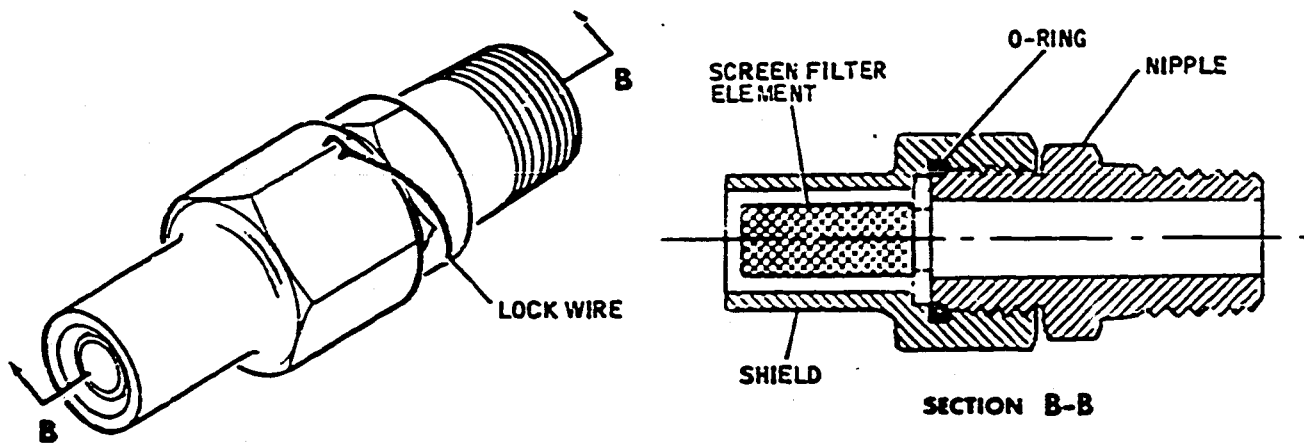

SCREEN FILTER

HA2-35


Regulator-Aspirator Air Filters -- Cutaway View  
 Figure 6

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 8  
 Page 15

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

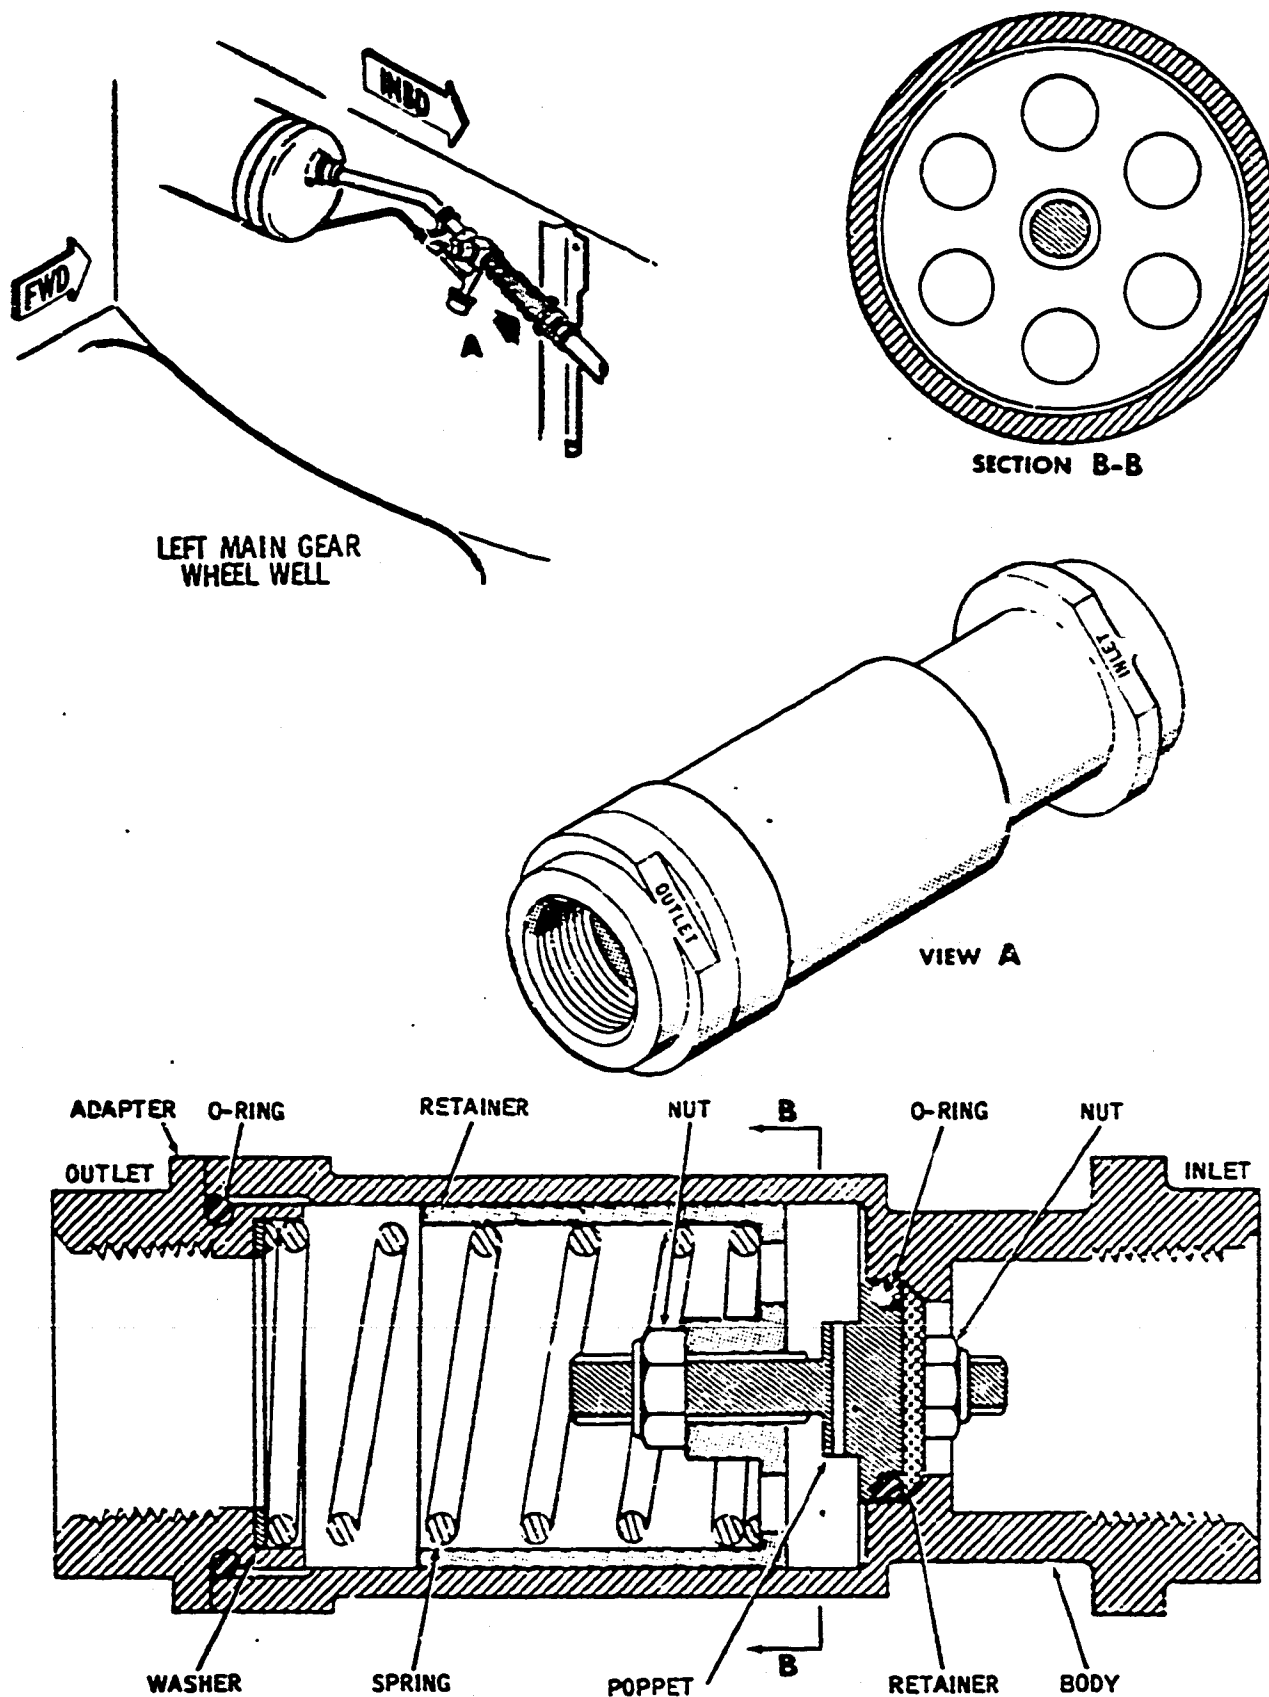

Hydraulic Reservoir Relief Valve  
 Figure 7

HA2-17

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The relief valve is installed in the overboard vent line downstream of the hydraulic reservoir air bleed valve. In the event that excess pressure builds up in the reservoir, the poppet will start to relieve at 45 (+5, -0) psi. Full flow of 10 gpm is attained at 80 psi maximum. The poppet reseats at 90 percent of the opening pressure.

F. Hydraulic Reservoir Air Bleed Valve (See Figure 8.)

- (1) The hydraulic reservoir air bleed valve and pressure gage are located on the aft side of the rear spar in the left main gear wheel well, inboard of the hydraulic reservoir air chamber. The bleed valve and gage are installed in the overboard vent line, between the reservoir air chamber and the reservoir relief valve.
- (2) The bleed valve is used to relieve the reservoir air pressure prior to disconnecting lines or components in the hydraulic system. The pressure gage provides a ready indication of the hydraulic reservoir air pressure and is used in conjunction with the bleed valve to indicate the air pressure status.
- (3) The air inflation valve is installed on the same fitting as the bleed valve and pressure gage. The air inflation valve is used to manually charge the reservoir with air or dry nitrogen.


G. Hydraulic Reservoir Vacuum Breaker Check Valve (See Figure 9.)

- (1) The hydraulic reservoir vacuum breaker check valve is installed on the regulator-aspirator mounting bracket, and connects to the tee fitting at the top of the reservoir. The valve is vented to ambient air. The purpose of this valve is to maintain atmospheric pressure in the reservoir, allowing hydraulic fluid to flow to the auxiliary hydraulic pump in the event of a failure of the reservoir pressurization system. The failure, or breakdown, of the pressurization system could cause a fluid starvation at the auxiliary hydraulic pump because of vacuum buildup in the reservoir.

H. Hydraulic Reservoir Air Chamber

- (1) The hydraulic reservoir air chamber is a small, cylindrical tank with a capacity of 700 cubic inches. It has two ports, an inlet port at the bottom of the chamber and an outlet port in one end of the chamber. The inlet port mounting boss is fitted with a drain plug. The air chamber is installed on the aft side of the rear spar in the left main gear wheel well, inboard and above the hydraulic reservoir filler assembly. Access to the air chamber is through the left main gear inboard door.
- (2) The air chamber provides for greater fluid capacity in the hydraulic reservoir by providing air and foam space for the reservoir in a separate container. Air pressure in the chamber is maintained by the regulator-aspirator and the air relief valve. The air pressure in the chamber and reservoir can be relieved, when desired, by the air bleed valve located downstream of the chamber. The air chamber is mounted


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

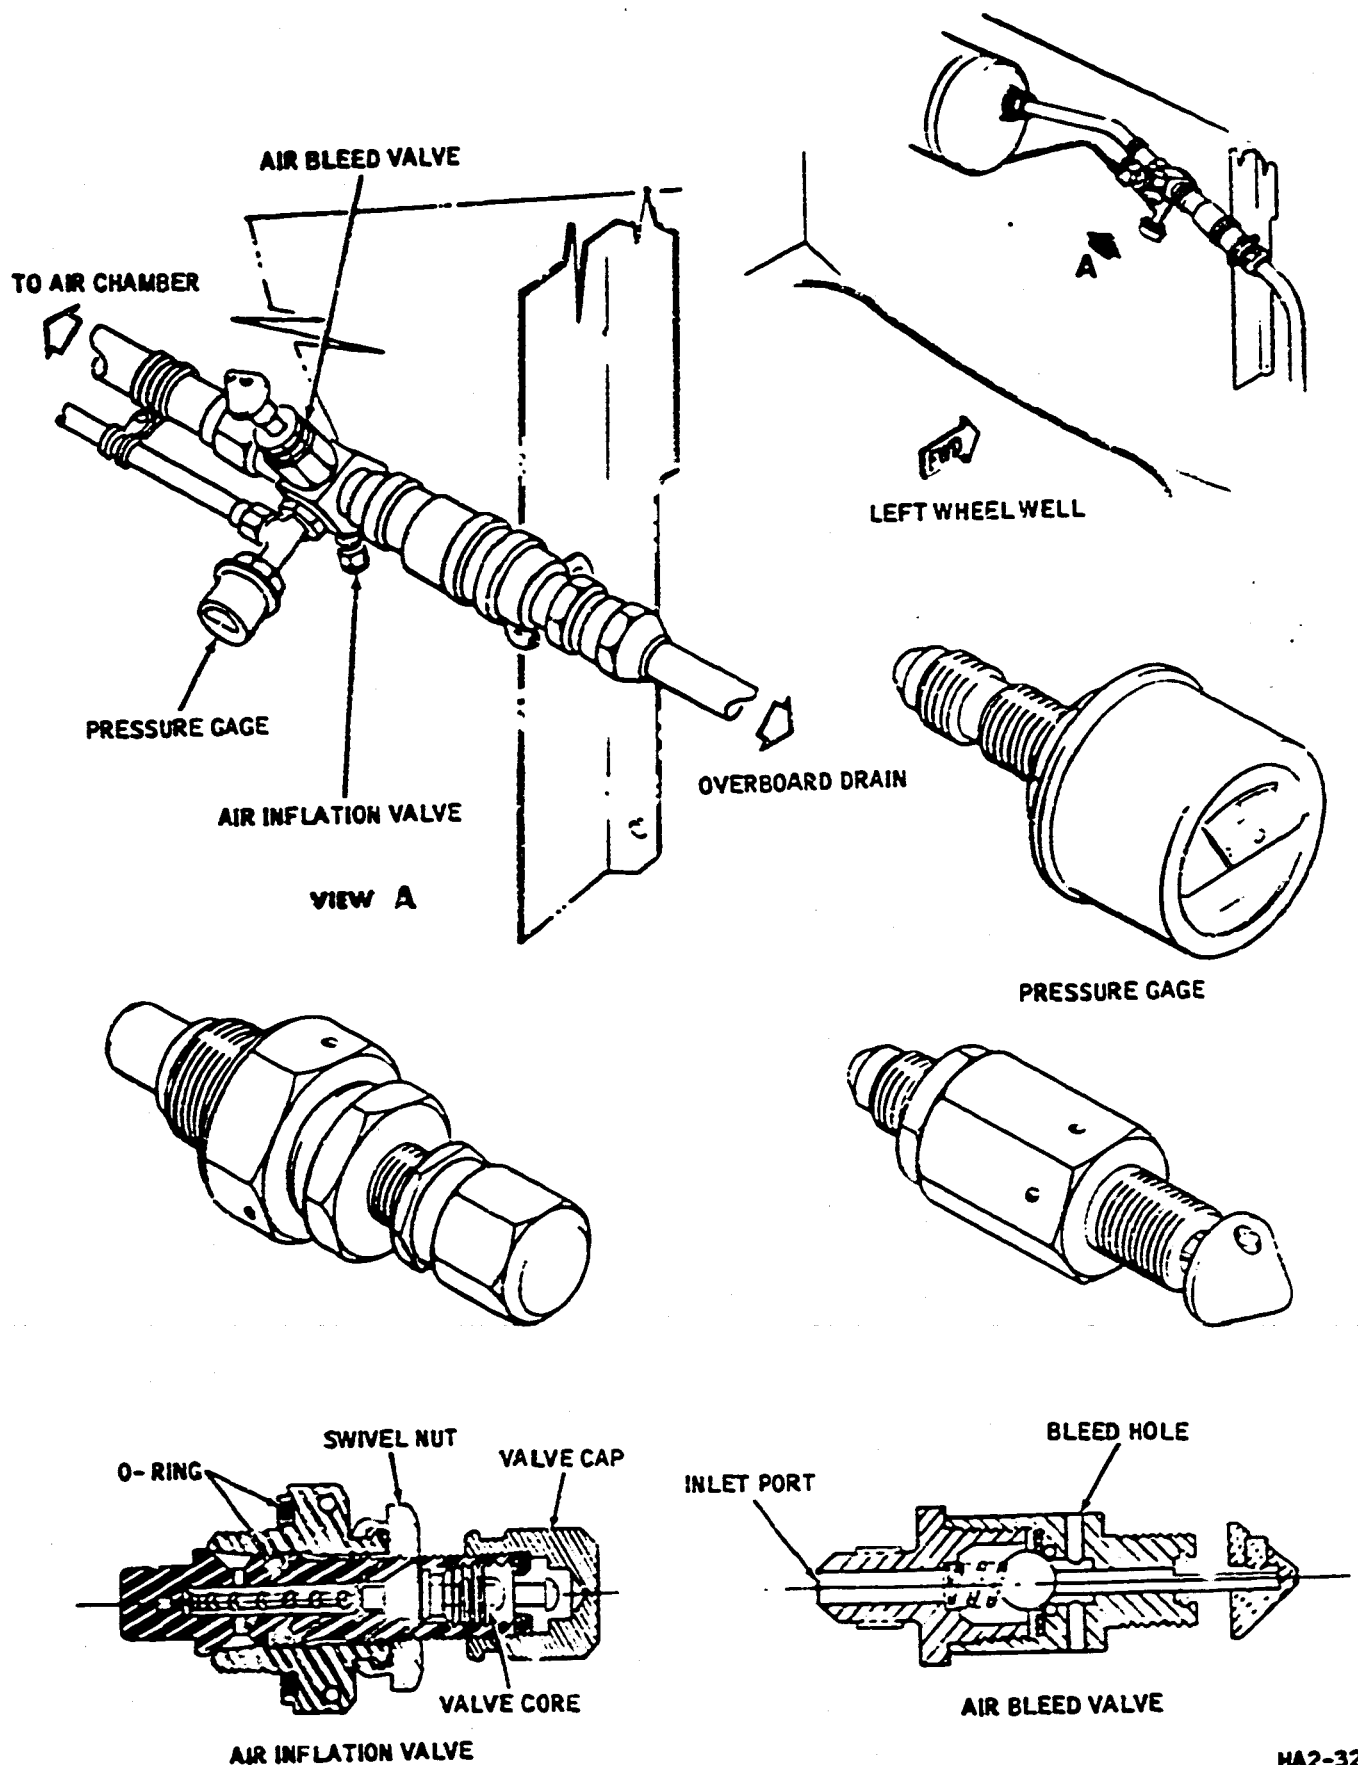

Reservoir Air Bleed Valve, Air Inflation  
 Valve, and Pressure Gage  
 Figure 8

HA2-32

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

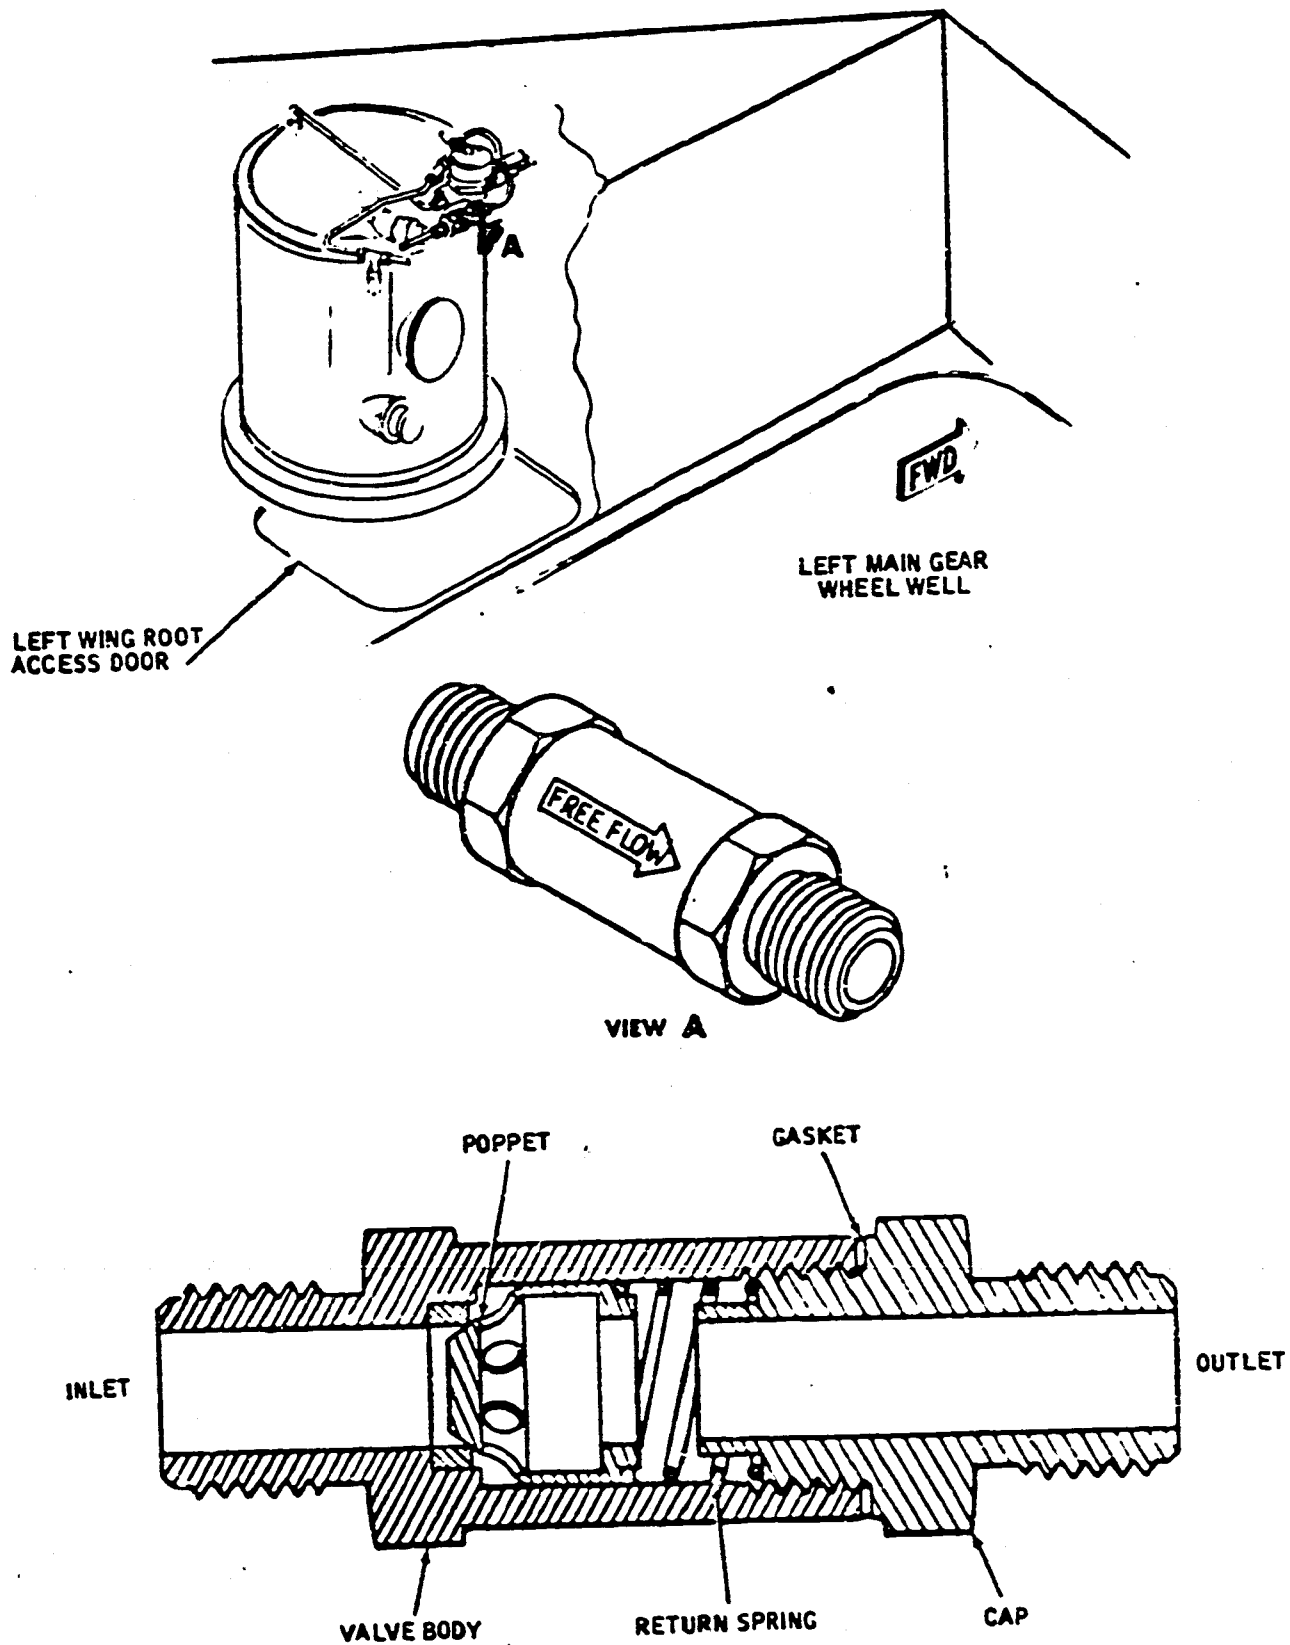

Hydraulic Reservoir Vacuum Breaker Check Valve  
 Figure 9

HA2-33

29-10-0  
 CODE 8  
 Page 19

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

higher than the reservoir filler assembly, to prevent overfilling of the reservoir from reducing the available air space and to prevent fluid from being vented overboard through the reservoir relief valve.

**I. Hydraulic Reservoir Port B Return Check Valve (See Figure 10.)**


- (1) The reservoir port B return check valve is installed in port B of the reservoir to prevent reverse flow of hydraulic fluid from the reservoir to the return line. The check valve is located on the reservoir in the left wing root and is accessible through the left wing root access door.
- (2) Externally and internally, the port B check valve is a standard-type check valve with a 1500-psi rating. A nominal pressure of approximately 8 psi unseats the poppet, permitting fluid to flow through the valve. When the reservoir pressure exceeds the return line pressure, the poppet will seat and reverse fluid flow will be prevented.

**J. Engine Hydraulic Fire Shutoff Valve (See Figures 11 and 12.)**


- (1) The engine hydraulic fire shutoff valve is a gate-type, mechanically controlled valve, installed in the supply line of each engine-driven hydraulic pump. The engine hydraulic fire shutoff valve is actuated from the flight compartment to prevent the flow of hydraulic fluid into the engine section.
- (2) The engine hydraulic fire shutoff valve is mounted on a 2-piece channel bracket which is installed inside the wing leading edge, aft of the firewall of each inboard pylon. Access to the valve is through the access door located on the lower side of the wing leading edge, cutboard of either the left or right inboard pylon. Each valve is located approximately 30 inches inboard of the access door.
- (3) Internally, the valve consists of a valve arm, valve arm link, cam plate, and slide blade. The valve arm link attaches to the valve arm and is allowed to swivel through an arc in relation to the valve arm. The link has a stop that will contact the arm when the two have traveled to the valve closed, full overtravel position. In the full open pretravel position, the link contacts the arm stop.
- (4) A roller attached to the end of the link rides in, and extends through, a J-shaped slot in the cam plate. The rotation of the valve arm causes the link roller to follow the cam slot, allowing the arm and link to move through independent arcs.
- (5) The slide blade (gate of the valve) is slotted near the one end and also receives the link roller extending through the cam slot. The slide blade is positioned parallel to the cam plate and is guided by two grooves in the housing. This will allow the blade to open or close through porting of the valve by the action of the arm and link. The cam plate is pinned to the valve shaft, securing it rigidly in two positioning grooves in the housing. A pin-indicator is provided to relate valve position to a reference plate placarded open and closed.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

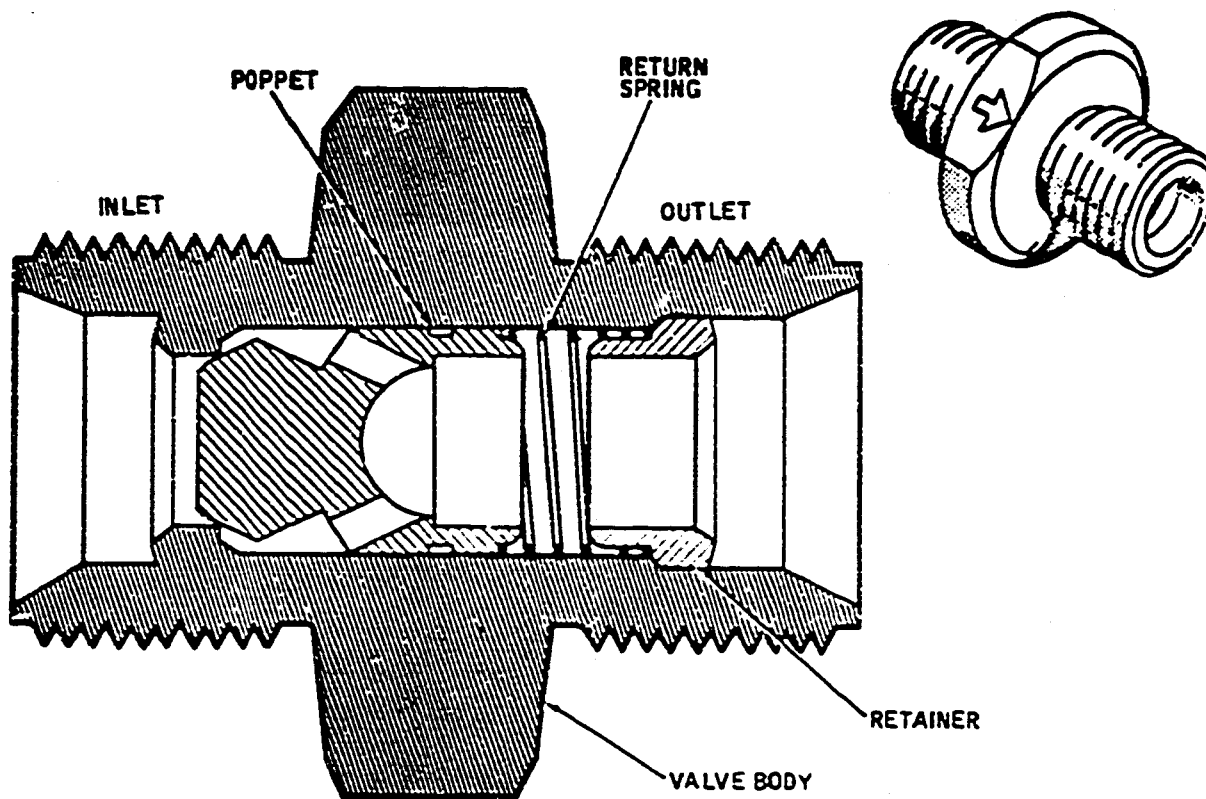

MINIATURE CHECK VALVE

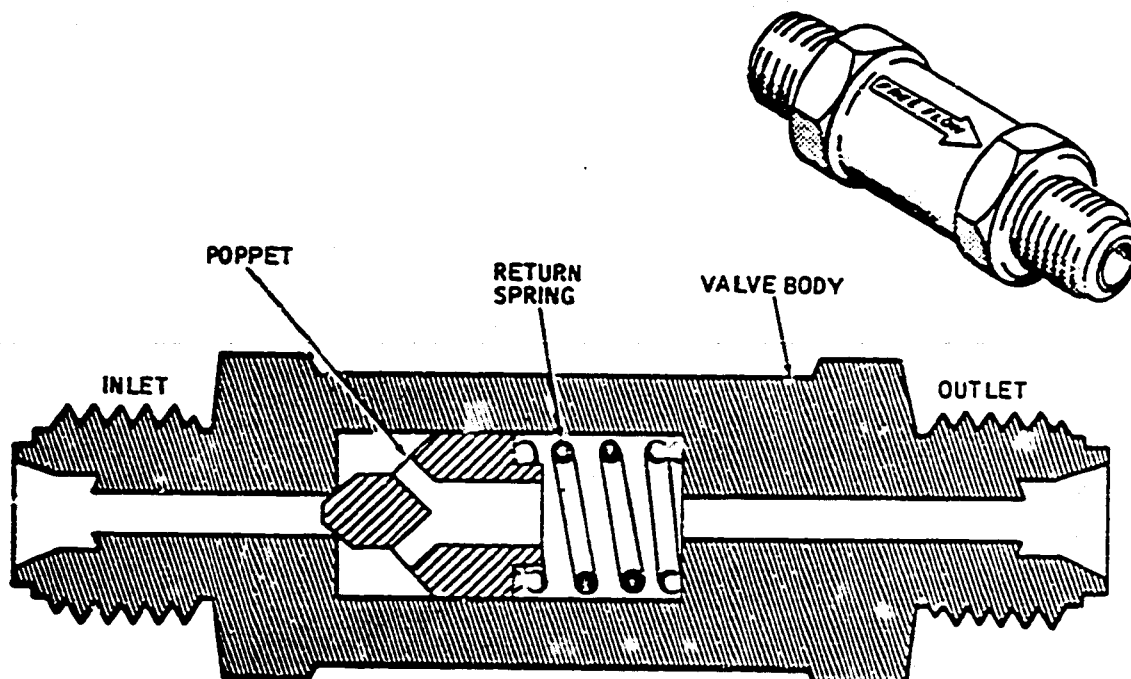

STANDARD CHECK VALVE

Hydraulic Check Valves -- Typical  
 Figure 10


HA2-18A

Oct 1/67

Printed in U.S.A.

29-10-0  
 CODE 8  
 Page 21


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

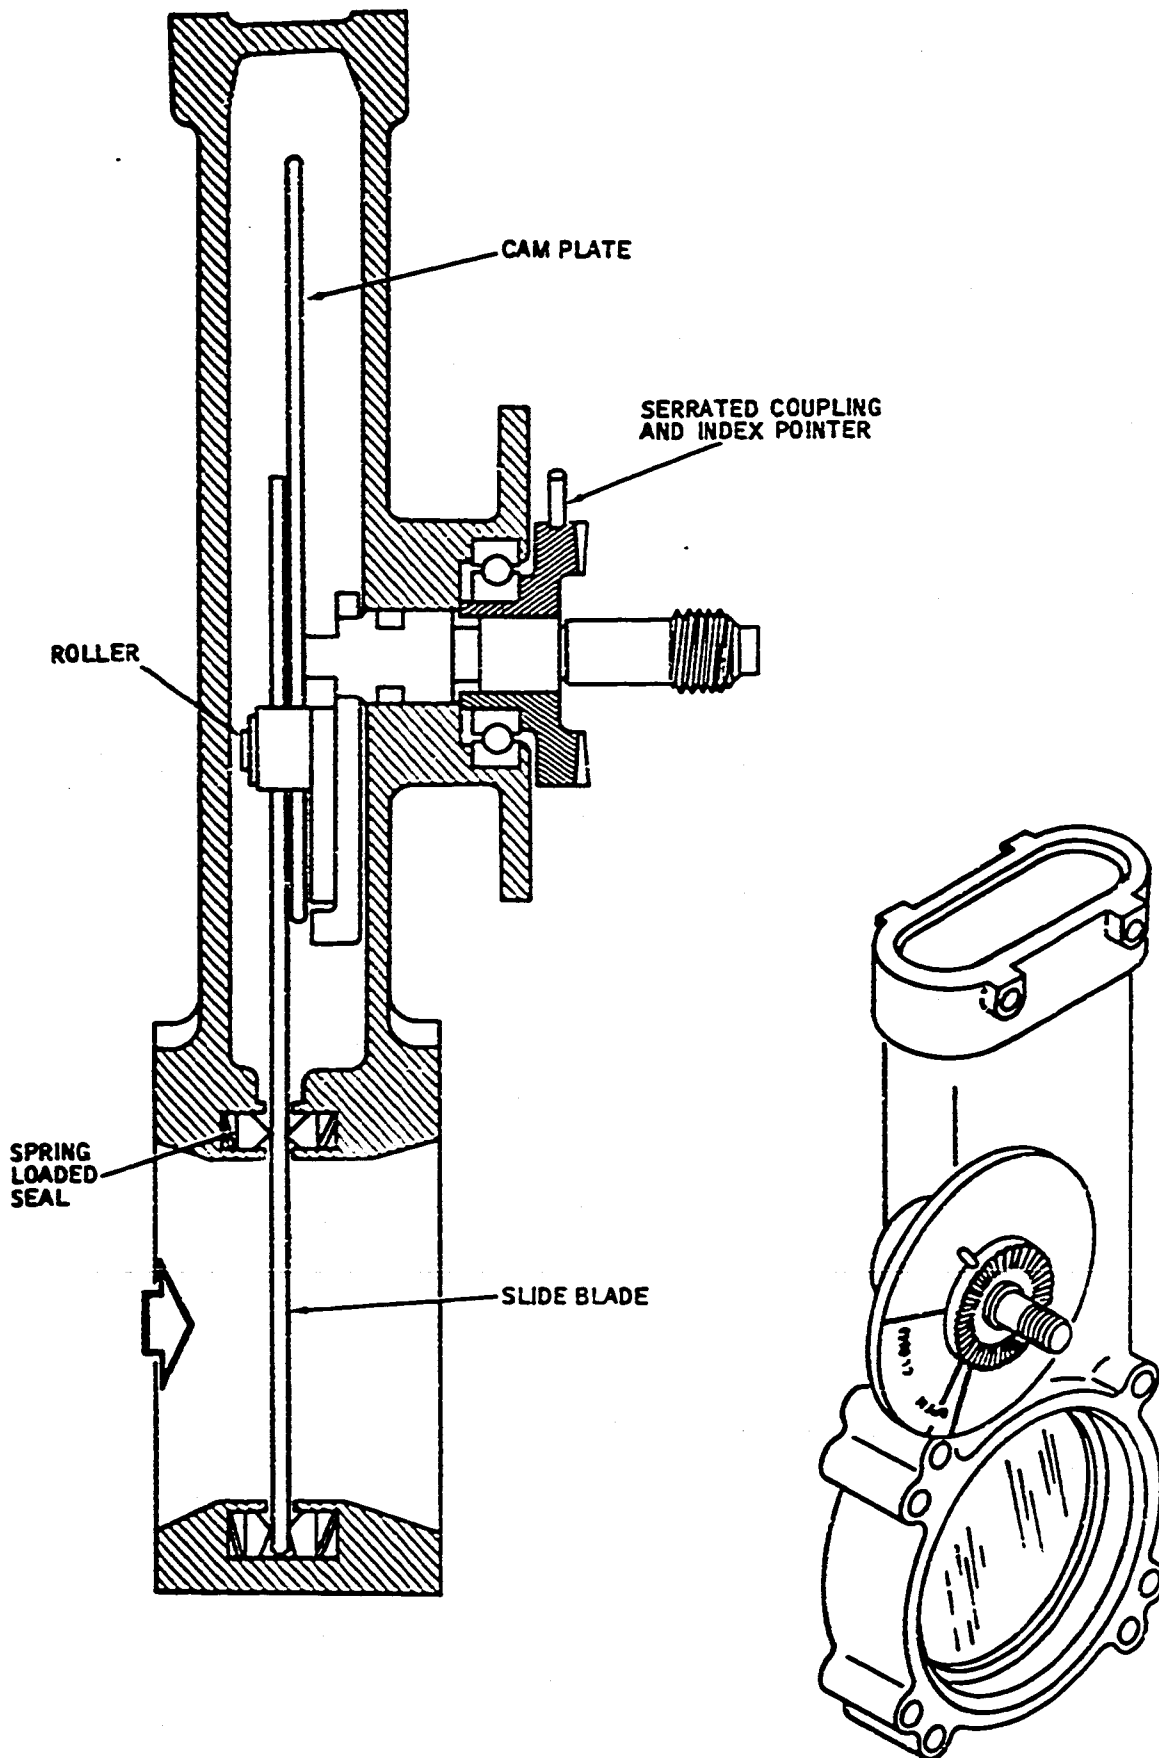

Engine Hydraulic Fire Shutoff Valve -- Schematic  
Figure 11

HA2-2209

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

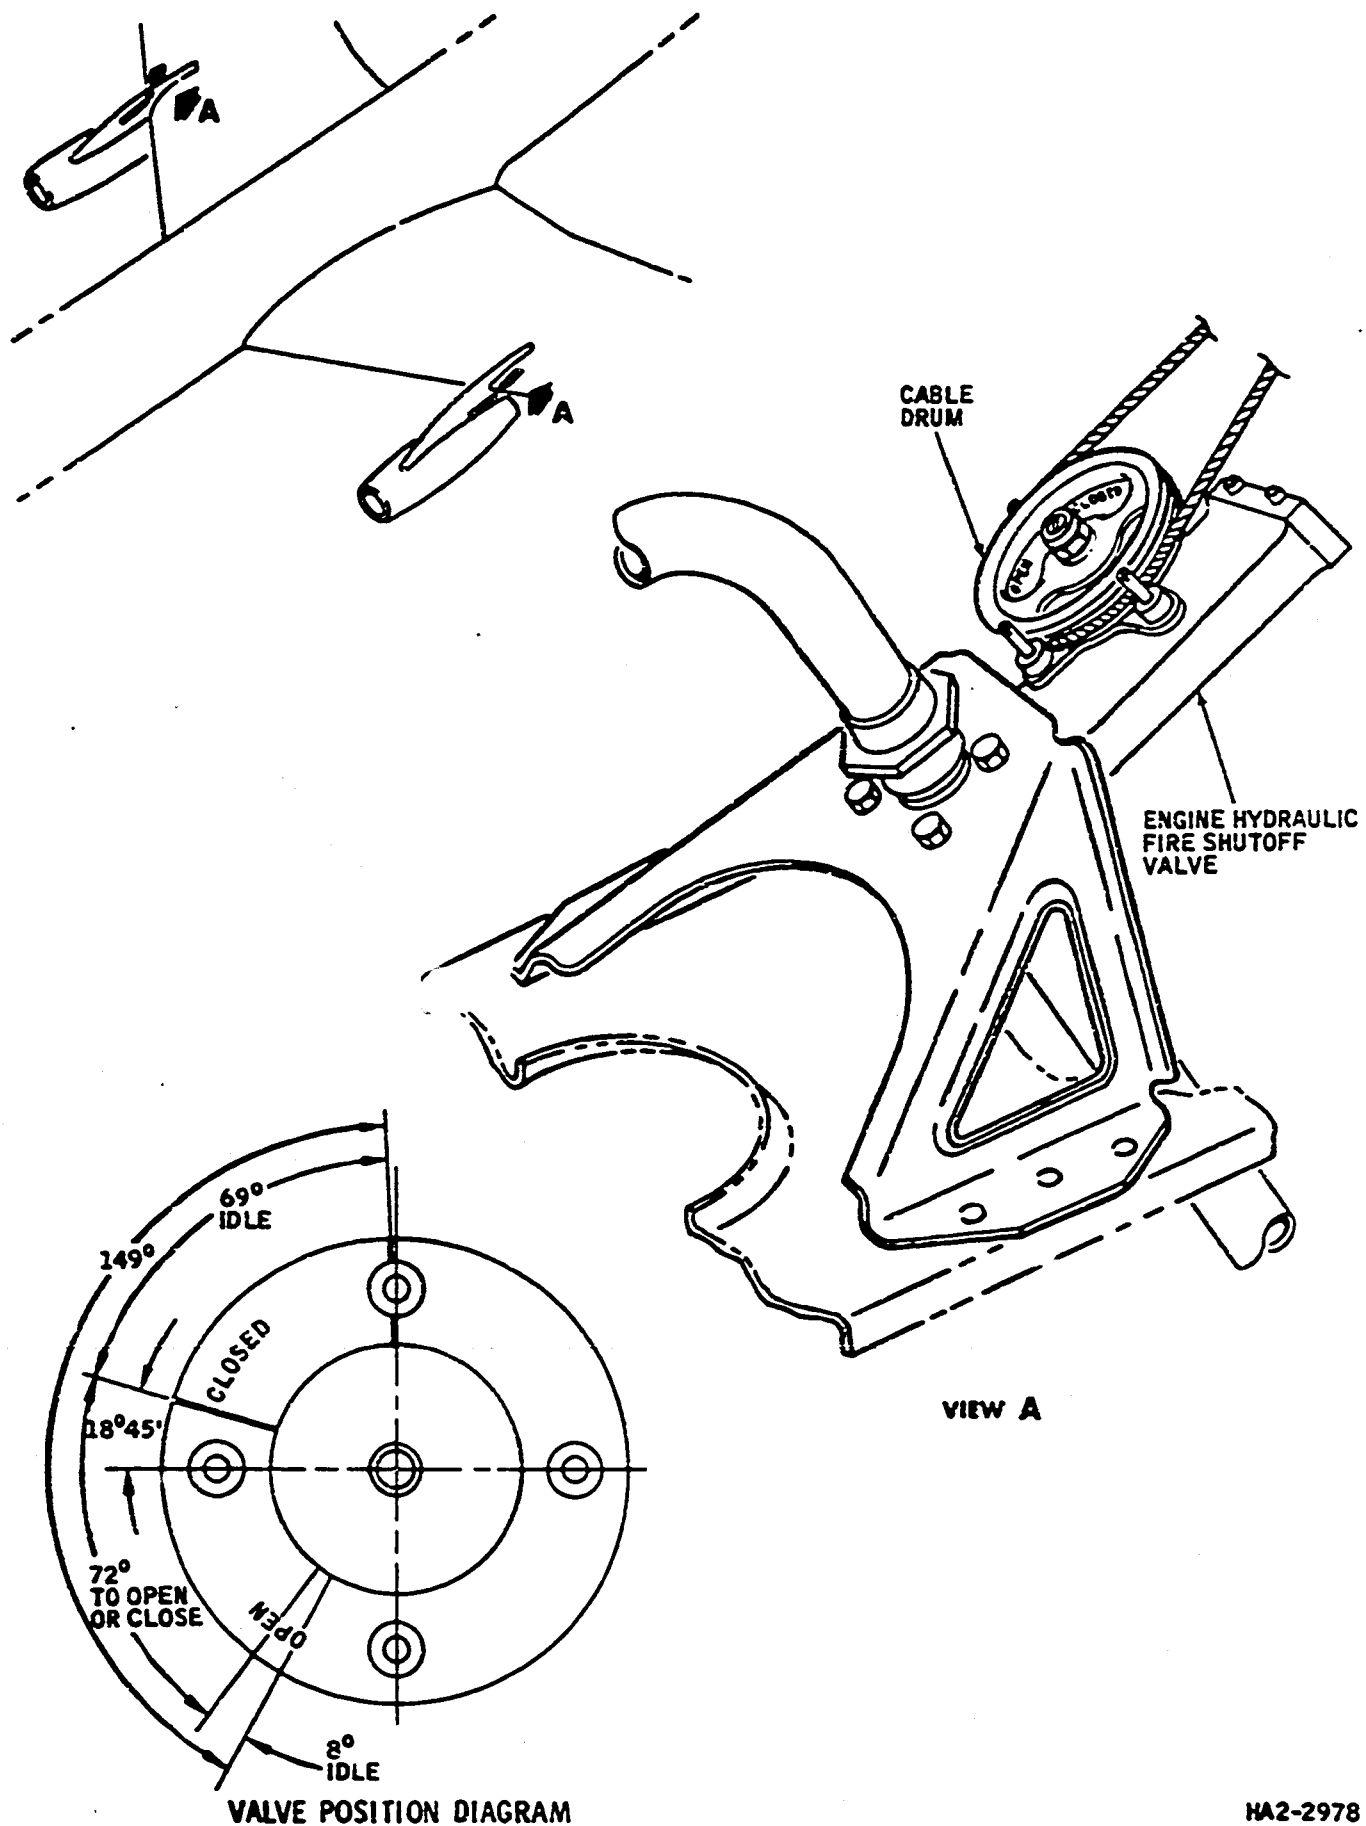

Engine Hydraulic Fire Shutoff Valve  
 Figure 12

HA2-2978

29-10-0  
 CODE 8  
 Page 23

Jun 15/67

Printed in U.S.A.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) The engine hydraulic fire shutoff valves are cable actuated by the fire control handles, located on the overhead switch panel in the flight compartment. When the fire control handle for either inboard engine is moved, the cable system rotates the drum which is attached to the corresponding shutoff valve shaft. This action extends the valve blade into the fluid passage to block the flow of fluid. The valve operates from open to close by clockwise rotation of the cable drum. The valve gage will idle during the first 8 degrees of rotation of the cable drum, and then will close in the next 72 degrees. The cable drum will continue to rotate the shaft for an additional 69 degrees after the gate valve is closed, locking it overcenter. Total travel of the cable drum is 149 degrees.


K. Engine-Driven Hydraulic Pump (See Figure 13.)

- (1) A variable-displacement, pressure-compensated, engine-driven hydraulic pump is installed on each inboard engine. The pump incorporates a solenoid bypass feature for reducing the output of the pump. The bypass valves are controlled by two engine hydraulic pump control switches in the flight compartment. The switch for the hydraulic pump on engine No. 2 is placarded left, on and bypass. The switch for the hydraulic pump on engine No. 3 is placarded right, on and bypass. When either of the two engine hydraulic pump control switches is placed in the bypass position, the bypass valve solenoid for that hydraulic pump is energized and the pump pressure decreases to 300 ( $\pm 100$ ) psi. When either switch is in the on position, the control circuit to the corresponding bypass valve is open and the hydraulic pump operates normally in the pressure range of 2850 to 3050 psi. The pump provides a continuous, non-pulsating flow of hydraulic fluid, under pressure, to the hydraulic manifolds for distribution throughout the hydraulic system. Each of the engine-driven pumps is located on the accessory drive pad of the inboard engines. These pumps are accessible through the access doors on the right side of the nacelles and removal of the engine bypass duct.
- (2) Three case drain ports are provided: two are on the yoke assembly housing, and the third is on the casing for the pressure control valve, adjacent to the inlet port fitting. The case drain port on top of the yoke assembly housing is used as the case drain connection to assure that the pump housing is full of fluid at all times. This drain connection is ported back to the low-pressure return port of the reservoir. The inlet port fitting is on top of the pump housing and the outlet port fitting is opposite to it on the bottom of the housing, and contains a low pressure indicating light switch.
- (3) The yoke control piston casing is an integral part of the pump case. Four self-locking nuts are used to hold the piston casing end-plate in position. The bypass valve assembly, consisting of the valve body and a solenoid, is mounted externally on the pump case, under the yoke control piston casing. This solenoid valve is provided with an electrical connector. A pressure control regulator is installed on the bypass valve body by means of four bolts. This regulator is cylindrical and is

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

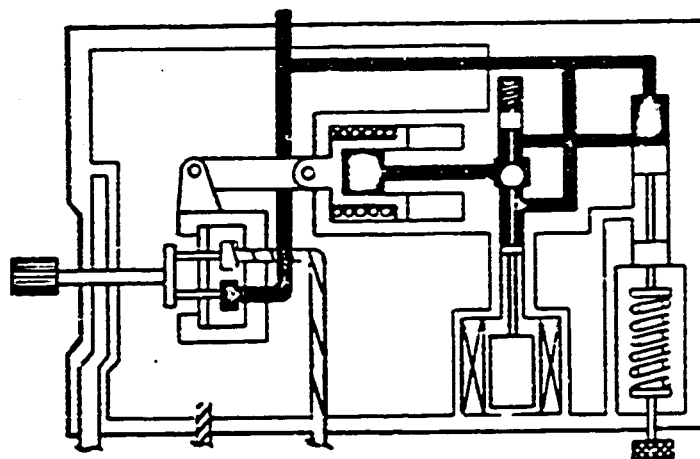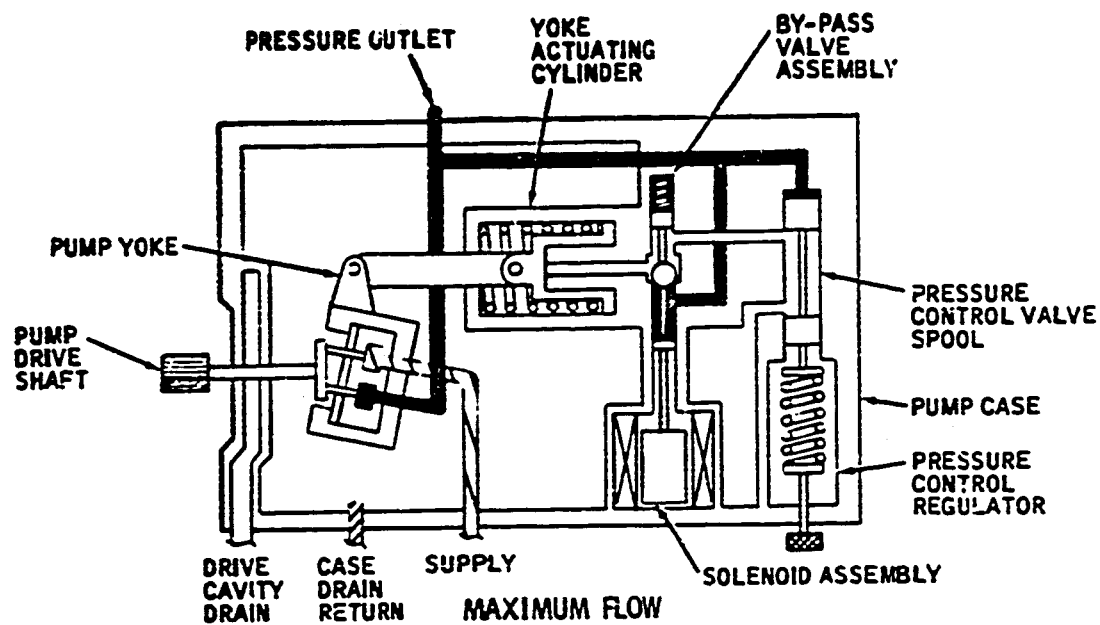

COMPENSATOR AT CUTOFF  
 (MINIMUM FLOW, MAXIMUM PRESSURE)

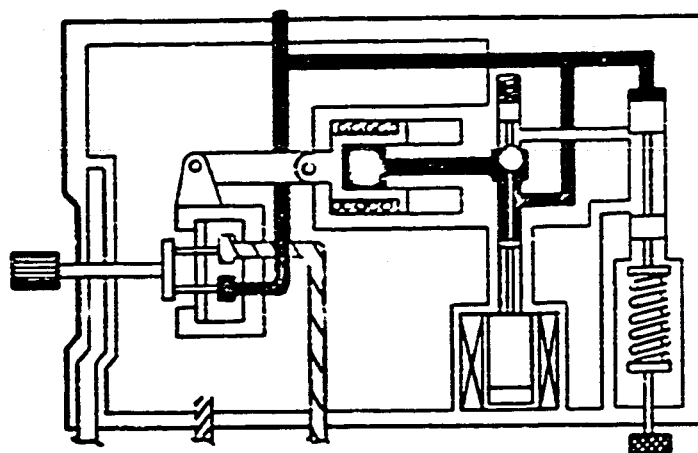

BYPASS SOLENOID ENERGIZED  
 (300 PSI PRESSURE)

- PRESSURE
- CASE DRAIN
- SUPPLY
- DRIVE CAVITY DRAIN

HA2-837

Engine-Driven Hydraulic Pump Pressure -  
 Flow -- Schematic  
 Figure 13

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 8  
 Page 25

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

provided with an external adjustment screw. A lock screw is used to retain the adjusting screw after the adjustment has been made.

- (4) Hydraulic fluid enters the pump through an inlet port. Passages in the yoke carry the fluid to the valve plate, which ports the fluid to the cylinder block. The nine pistons in the cylinder block are actuated by the rotating drive shaft, thereby pressurizing the fluid. From the cylinder block, the fluid is routed to the outlet port of the yoke and then to the pump pressure lines. The pressure control regulator is actuated by pump output pressure that is bled to the regulator. The regulators meter the pressure to the yoke control piston, which position the yoke.
- (5) The maximum pump pressure is determined by the adjustment of the pressure control regulator. The pressure control regulator allows maximum output flow (22.5 gpm at 3500 rpm) up to 2850 psi system pressure. When this pressure is reached, the yoke assembly starts to move towards the zero flow position.
- (6) Pressure continues to rise until the displacement is reduced from maximum flow to zero flow and 3000 psi is reached. If the engine-driven hydraulic pump control switches are in the on position, and the output pressure of either pump drops below 1500 psi, an amber indicating light located in the flight compartment comes on.


L. Engine-Driven Hydraulic Pump Check Valves (See Figure 10.)

- (1) Two check valves, rated at 3000 psi, are installed in the lines from each engine-driven hydraulic pump. One check valve is installed in the pressure line and the other is in the case drain line. The check valves in the pump pressure lines prevent reverse flow of hydraulic fluid through the pump, when the pump is inoperative or when external hydraulic pressure is supplied to the system. Access to the valves can be gained through an access door in the forward right apron of each inboard pylon. The valves are mounted on the exterior wall of the inlet box by means of the bulkhead fittings and retaining nuts.
- (2) Normal operating pressure will unseat the poppet, and fluid will flow through the valve. When pressure downstream of the valve exceeds pressure from the pump, the pressure, with the aid of the return spring, will seat the poppet. This prevents reverse flow of hydraulic fluid through the pumps.


M. Engine-Driven Hydraulic Pump Case Drain Filter (See Figure 14.)

- (1) A line-type, micronic filter, for use in a low-pressure hydraulic system, is installed in the engine-driven hydraulic pump case drain line between the pump flow check valve and the hydraulic system reservoir. The case drain filter is installed on the aft surface of the rear spar opposite the leading edge of the inboard flap assembly. One filter is used for each engine-driven pump. Access is gained to the filter by


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

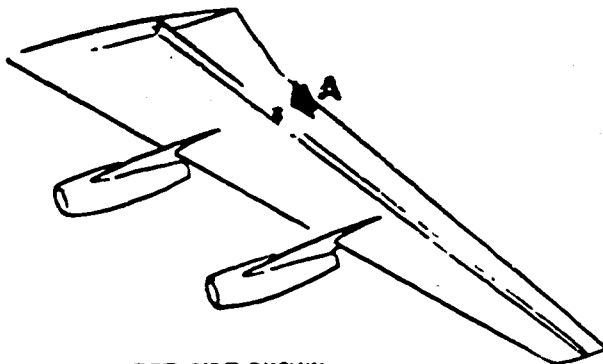

LEFT SIDE SHOWN  
 RIGHT SIDE OPPOSITE

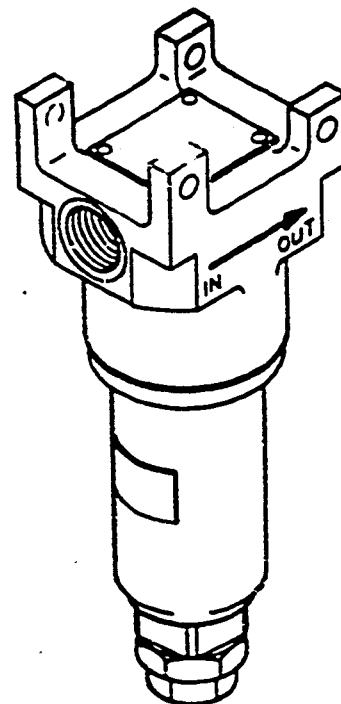

VIEW A

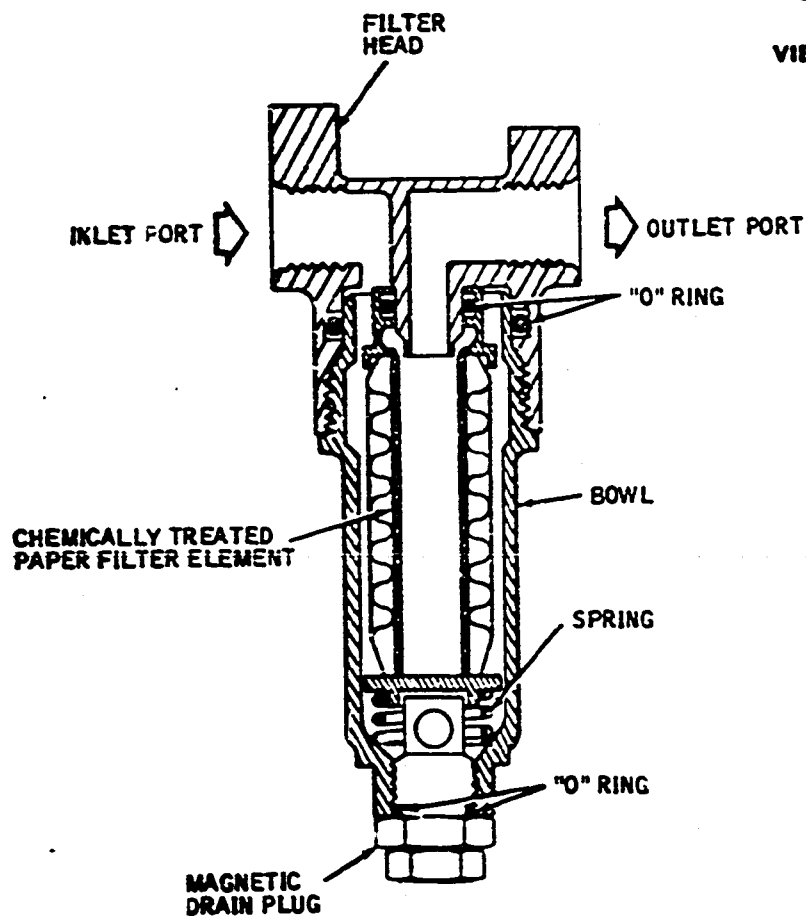

Engine Driven Hydraulic Pump Case Drain  
 Filter -- Cutaway View  
 Figure 14

HA2-31

29-10-0  
 CODE 8  
 Page 27

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

lowering the flaps. A second check valve is installed adjacent to the filter in the downstream side of the case drain return line.

- (2) Externally, the filter is approximately 5 inches high and 2 inches wide, with ports marked inlet and outlet. The bowl is cylindrical in shape, with hex-shaped wrench flats at the lower end. A self-sealing, magnetic drain plug is installed in the bottom end of the filter bowl. The filter element is made of chemically treated paper.

**N. Dual Filter and Relief Valve (See Figure 15.)**


- (1) The hydraulic power system dual filter and relief valve consists of two filters and two relief valves installed in the same body. The unit filters the hydraulic fluid from the two engine-driven hydraulic pumps, and the pressure relief valves assure that excessive pressures do not build up in the pressure line from the pumps. The unit is located in the left main gear wheel well on the lower portion of the rear spar, approximately 1 foot outboard of the centerline shear web.
- (2) The unit consists of a casting with a flange-mounted pressure inlet port on each end. Two pressure outlets are located on the top of the casting. One outlet, centrally located, is the main pressure outlet to the system selector valve. The other, located to the left of the selector valve port, is the pressure outlet to the air pressure regulator-aspirator. The return outlet port for the relief valve portion of the unit is located on the center of the aft face of the body, canted upward. The nose gear return line is connected to a check valve installed in a return line port, located between the two filter bowls.
- (3) The pressure relief valves are located behind the pressure inlet ports and are connected to the return outlet port of the unit. The inlet from the nose gear return line is routed through the casting to the return outlet port.
- (4) If either of the filter elements becomes clogged, pressure above 3000 psi at the inlet port will unseat the poppet. Pressure above 3500 psi will allow full flow of 22.5 gpm to flow to the return port of the unit and back to the reservoir. The relief valves will reseal at approximately 3000 psi.
- (5) A check valve is installed in the system selector valve port to prevent reverse flow or pressure through the filter during auxiliary hydraulic pump operation.

**O. System Selector Valve (See Figures 16 and 17.)**

- (1) The system selector valve is a 3-position valve which permits directional control of fluid under pressure. The valve is installed on the left hydraulic power manifold and is accessible through the left main gear inboard door.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

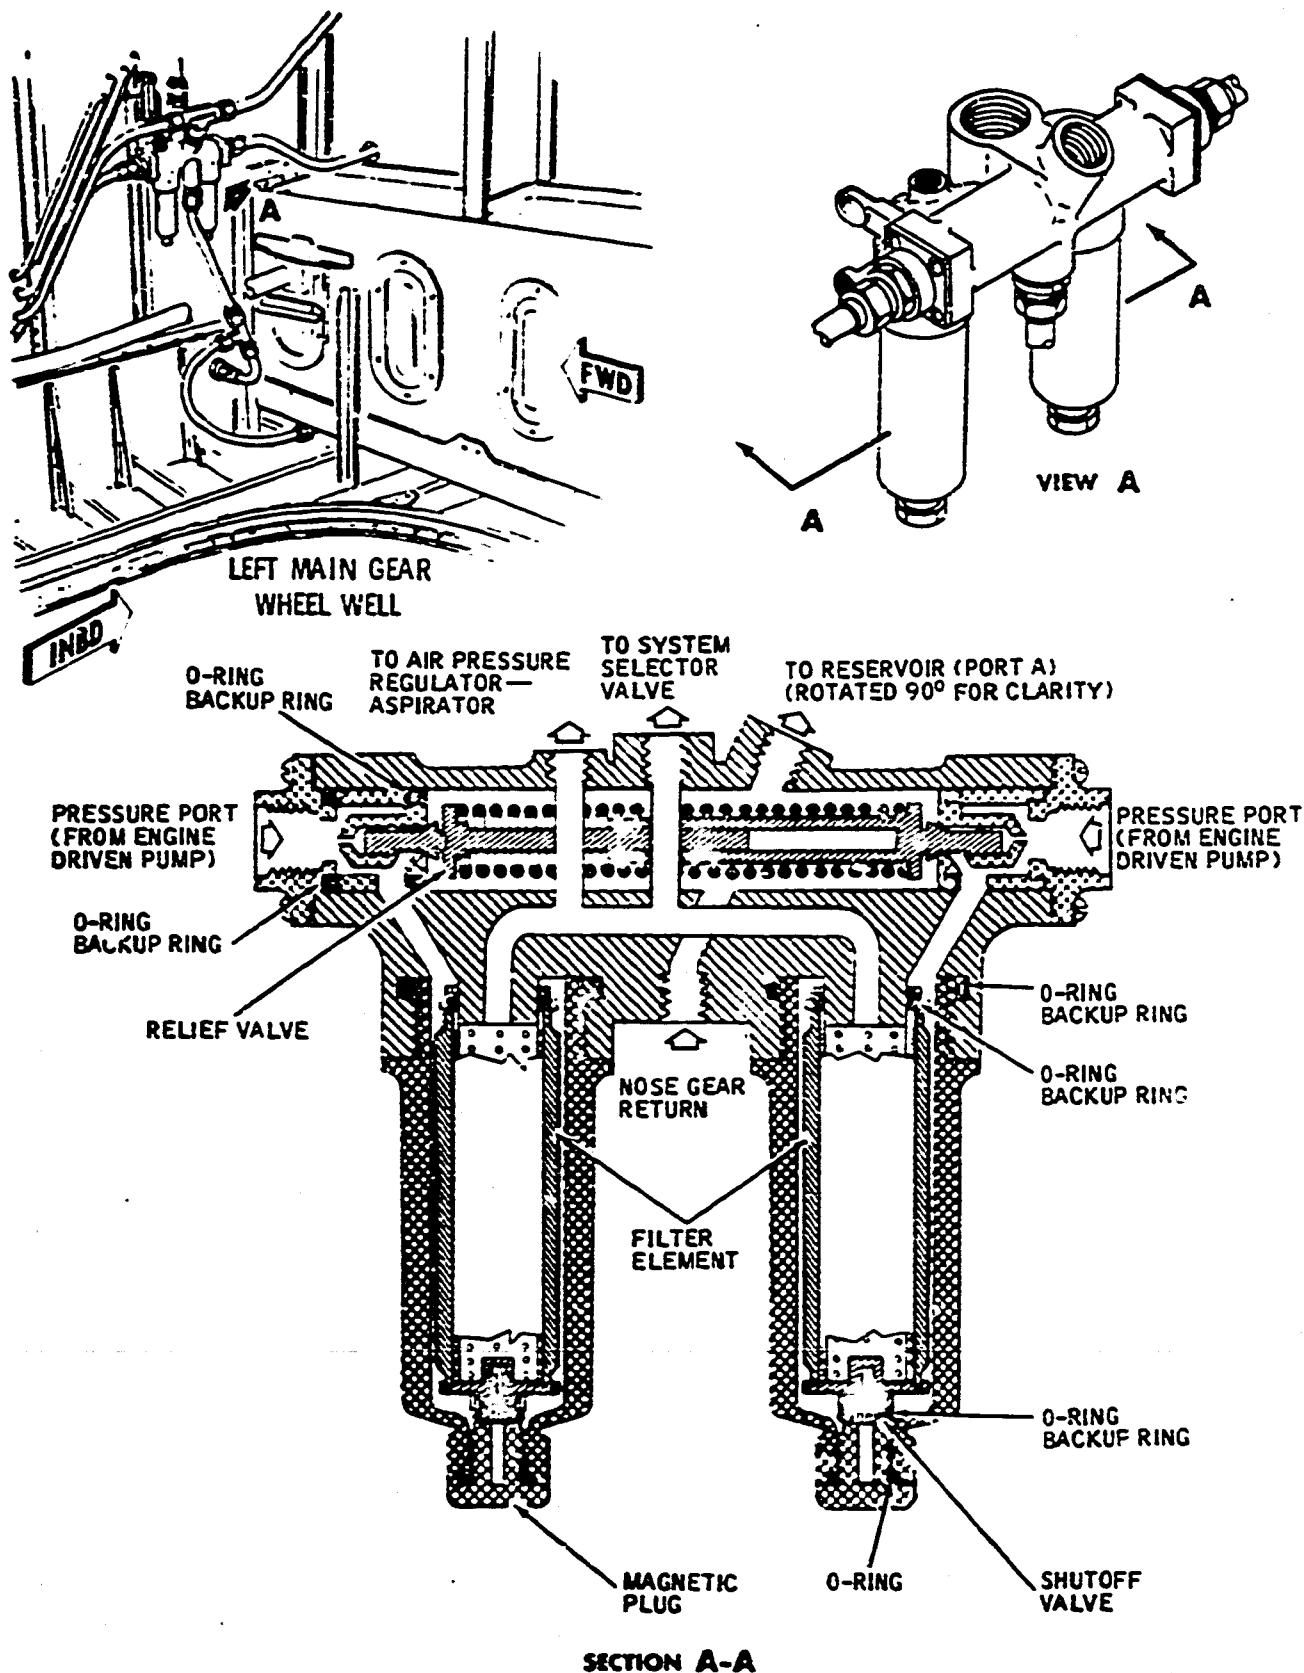

Dual-Filter and Relief Valve -- Cutaway Valve  
 Figure 15


HA2-20.

29-10-0  
 CODE 8  
 Page 29

Jun 15/67

Printed in U.S.A.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

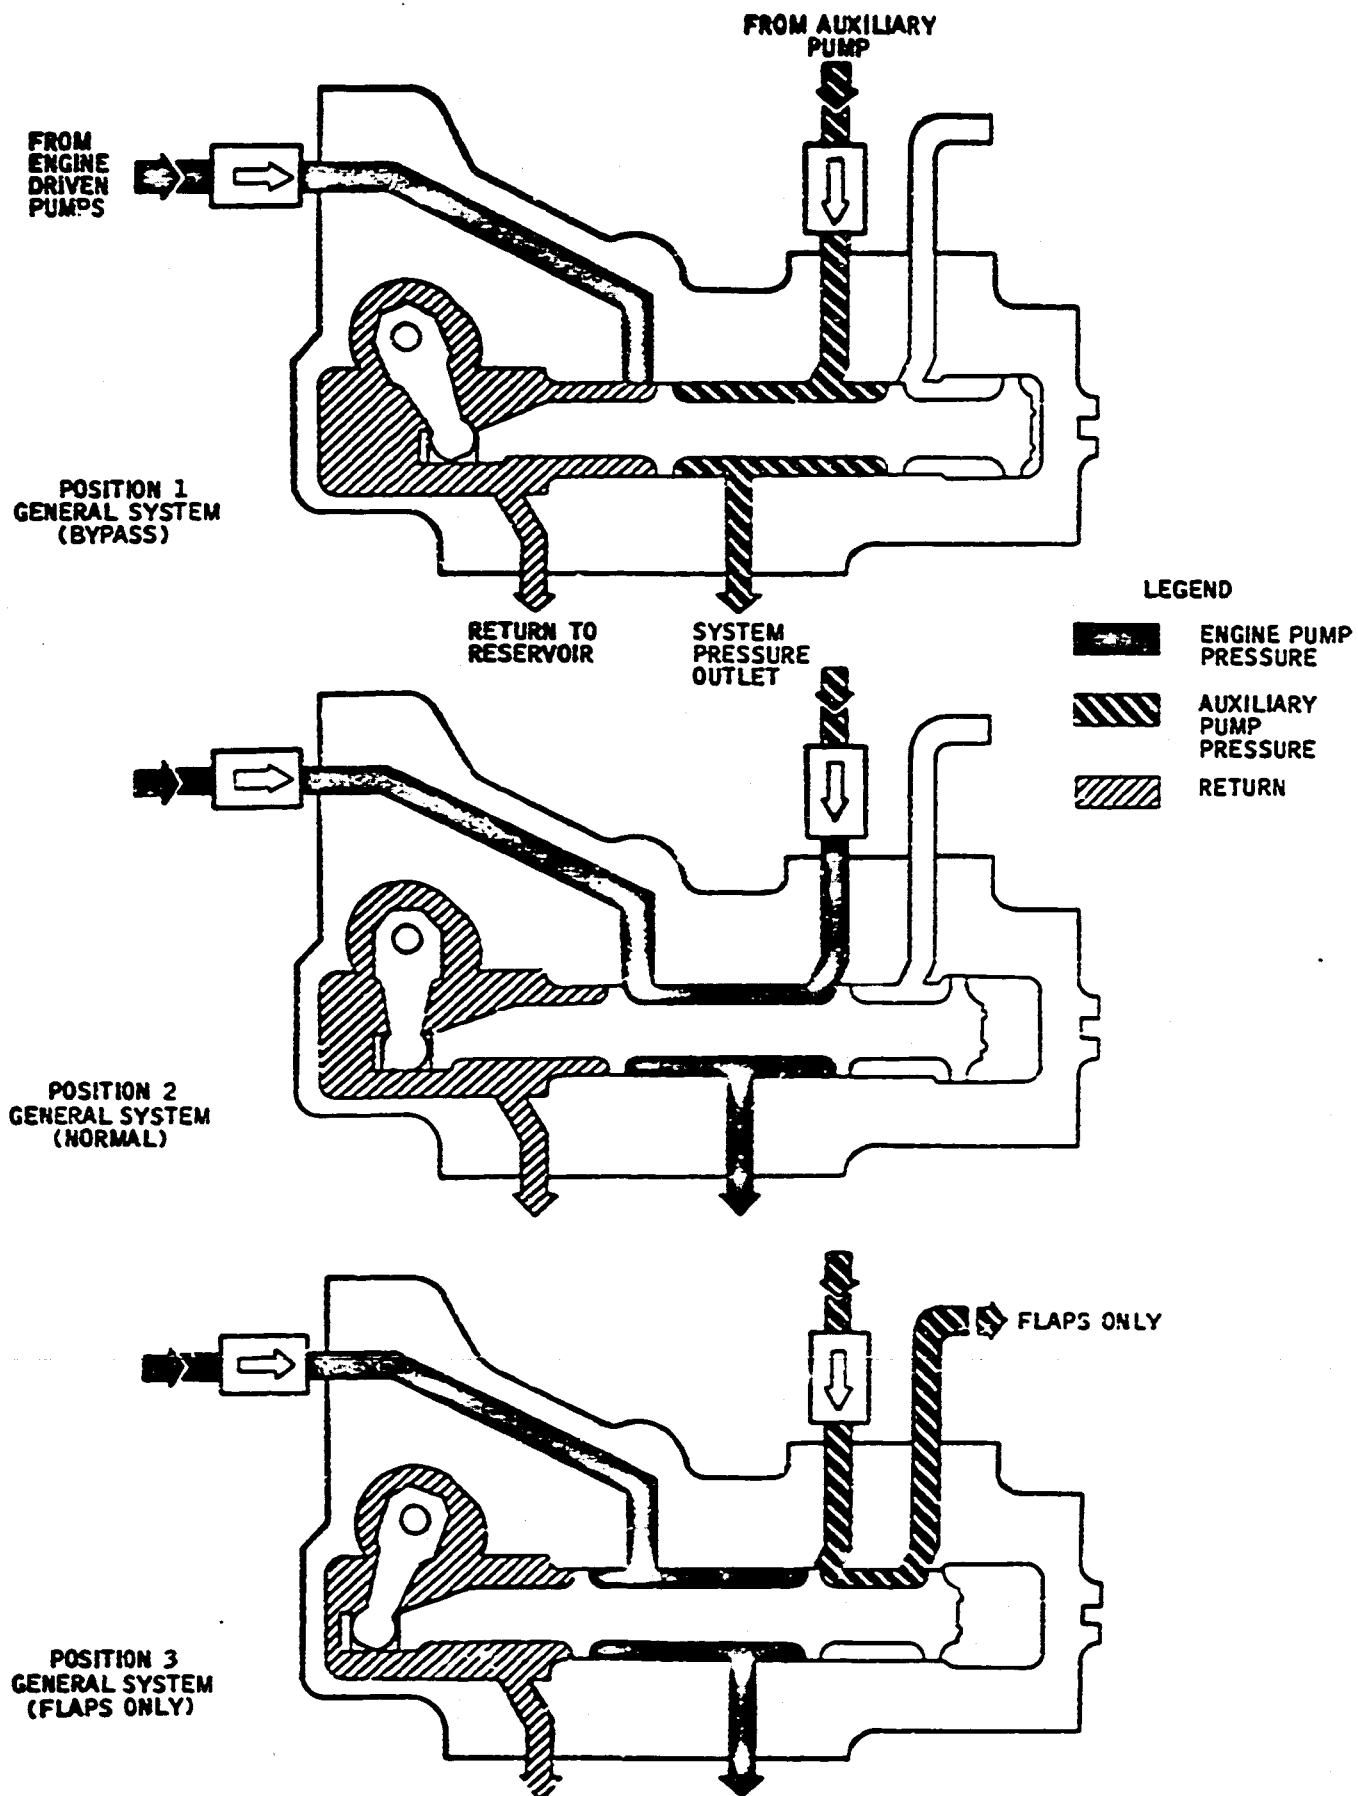

System Selector Valve -- Schematic  
 Figure 16

HA2-2155

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

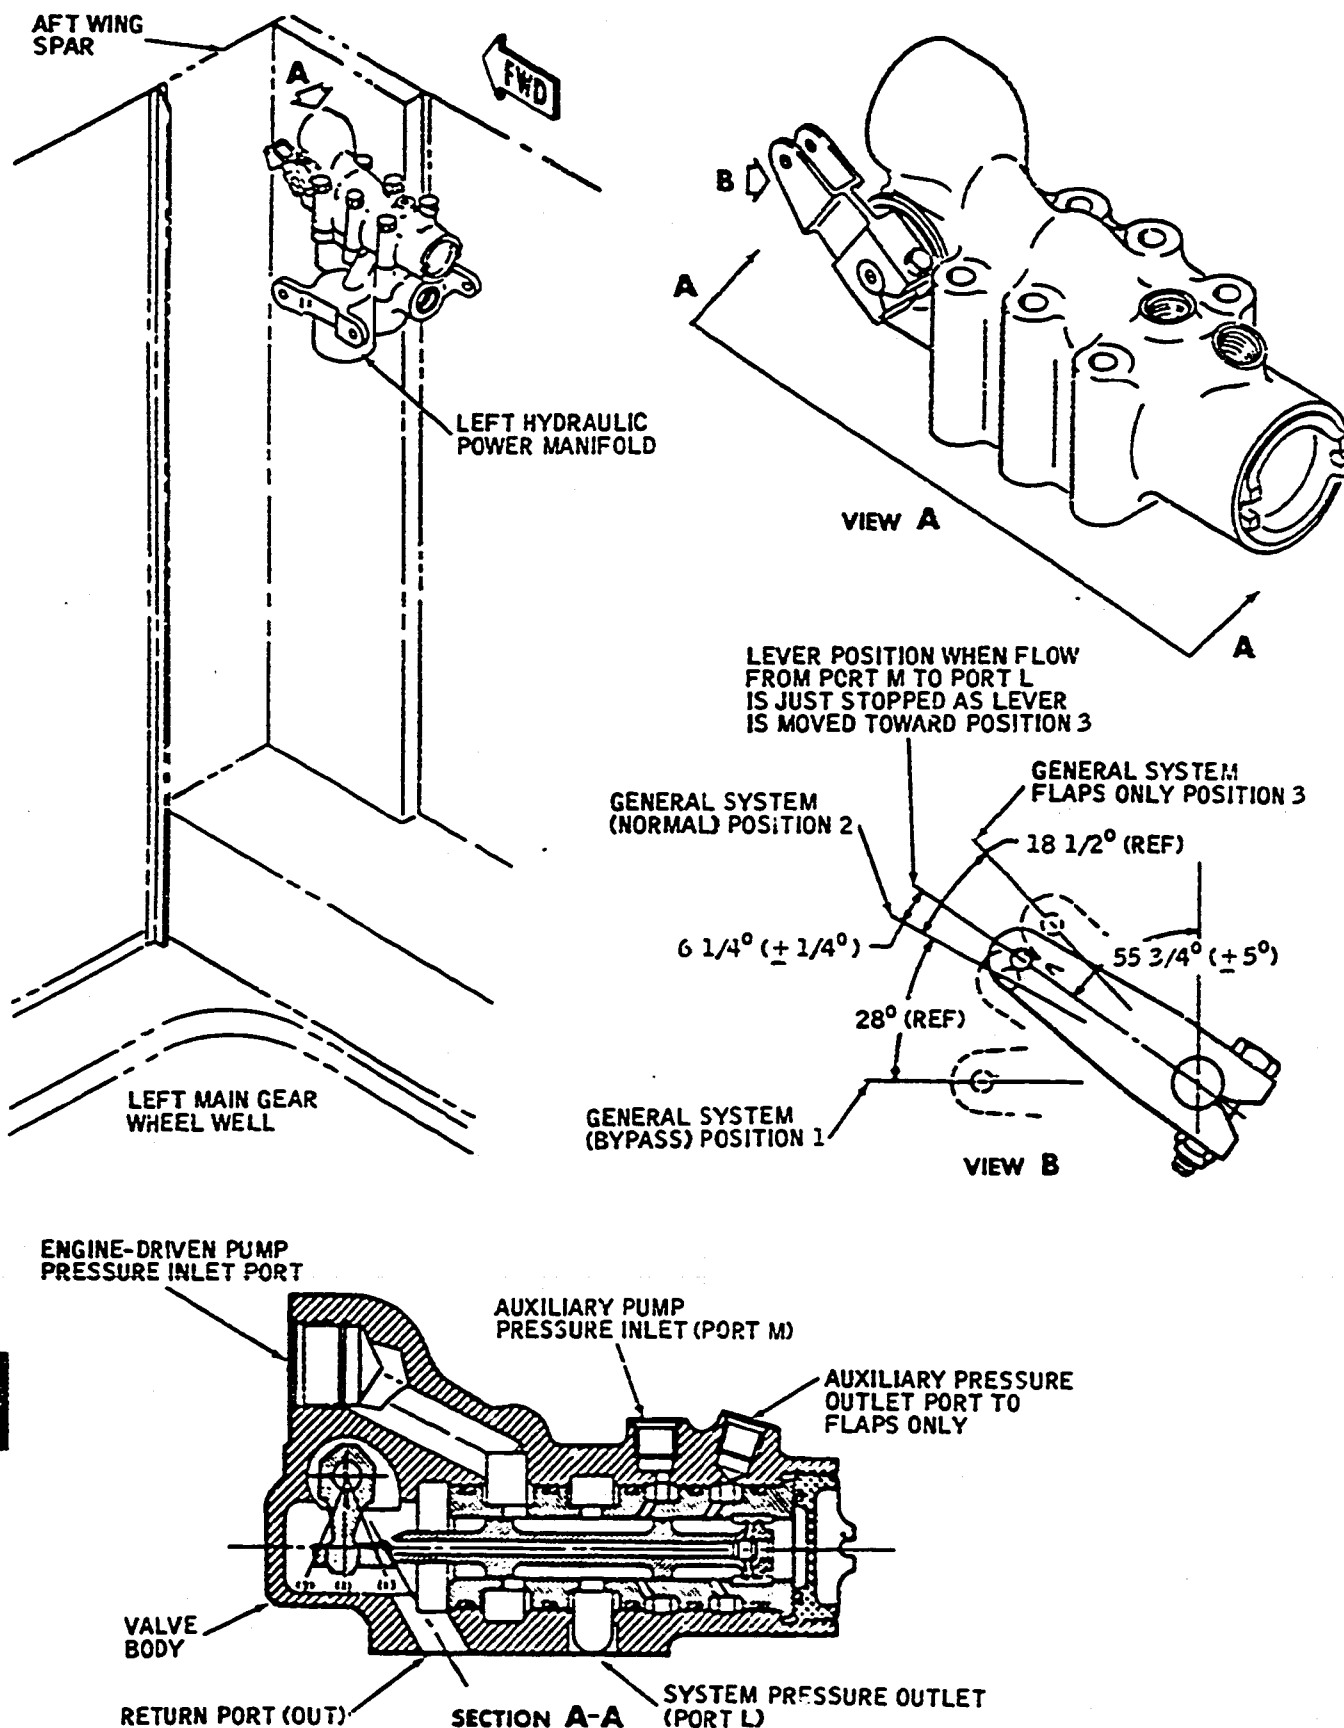

HA2-2943A

System Selector Valve -- Cutaway View  
 Figure 17

Nov 1/69

Printed in U.S.A.

29-10-0  
 CODE 8  
 Page 31

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The selector valve pressure-to-system port and the return port are directly ported to the manifold. The engine pump pressure enters the valve through a port on the large end of the valve, and the auxiliary pump inlet and alternate ports are located at the top, toward the aft end of the valve. The valve control crank is attached to a push-pull rod and a cable sector.
- (3) Operation of the system selector valve is controlled by a lever located on the right side of the system engineer's control pedestal. When the control lever is moved to the selected position, the cable system, through the sector and crank, operates the valve positioning lever to drive the slide spool assembly to the selected position. When the control lever is placed in the general system (normal) position, the selector valve is actuated, causing hydraulic fluid to enter the valve through the system pressure port. The fluid is then directed into the manifold through the pressure-to-system port. In the general system (normal) position, fluid from the auxiliary pressure port is also routed to the pressure-to-system port. In the bypass/general system position, the selector valve ports engine pump pressure into the manifold through the return port. In this position, the auxiliary pump pressure is ported to the general system. In the general system/flaps only position, pump pressure is routed through the alternate port, at the top of the valve, for alternate operation of the flaps. Internal leakage provides lubrication for the moving parts of the valve.



P. Left Hydraulic Power Manifold (See Figure 18.)

- (1) The left hydraulic power manifold distributes fluid pressure from the hydraulic pump (any one of the three pumps), through control valves to the various airplane hydraulic subsystems. The left power manifold is located overhead in the left wheel well. Access to the left manifold is through the left main gear inboard door.
- (2) One valve-mounting pad is provided on the top of the manifold for the system selector valve. Four ports are provided on the manifold for connection of hydraulic pressure and return lines. Three of these ports are pressure outlet ports; one, located on the aft face of the manifold and one located on the bottom of the manifold port fluid to the flight controls. The third pressure outlet port, located on the bottom of the manifold, ports fluid directly to the priority valve, which in turn, ports fluid to the nose gear and to the right power manifold. The fourth, a return port, located immediately forward of the pressure line port on the bottom of the manifold, is connected by a line to a return port of the reservoir.

Q. Right Hydraulic Power Manifold (See Figure 19.)

- (1) The right hydraulic power manifold distributes fluid pressure from the hydraulic pumps (engine-driven or auxiliary, or any combination of these three pumps), through the control valves to the various hydraulic subsystems. The right hydraulic power manifold is located overhead in

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

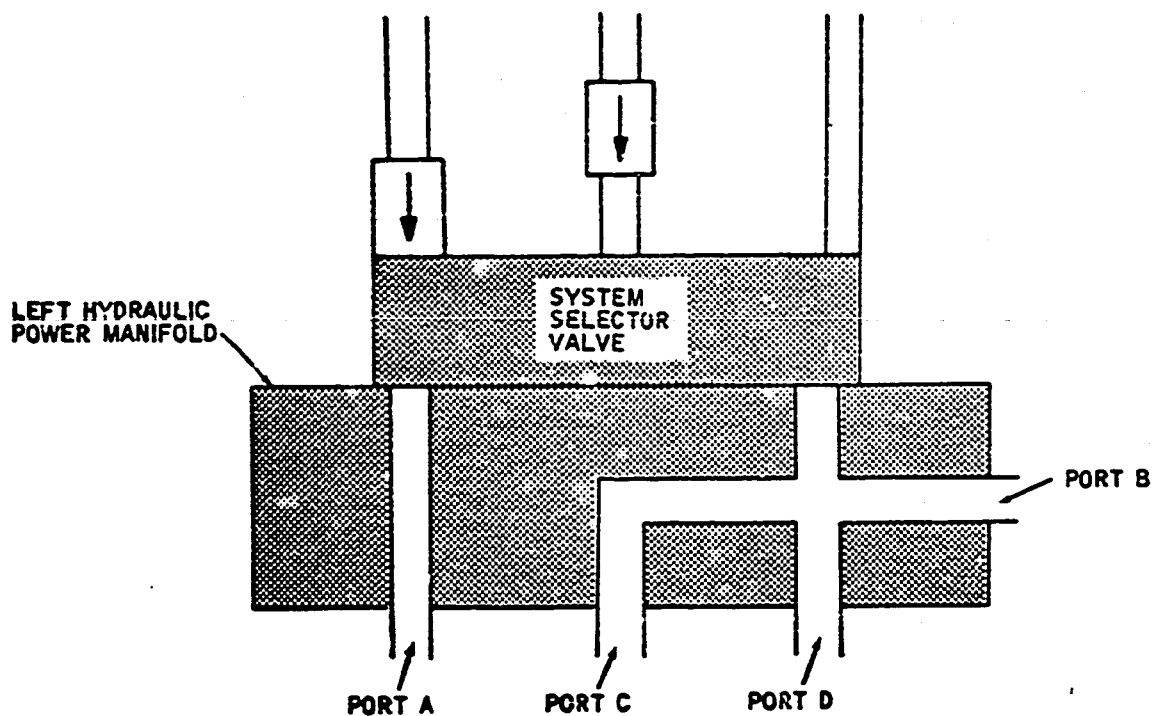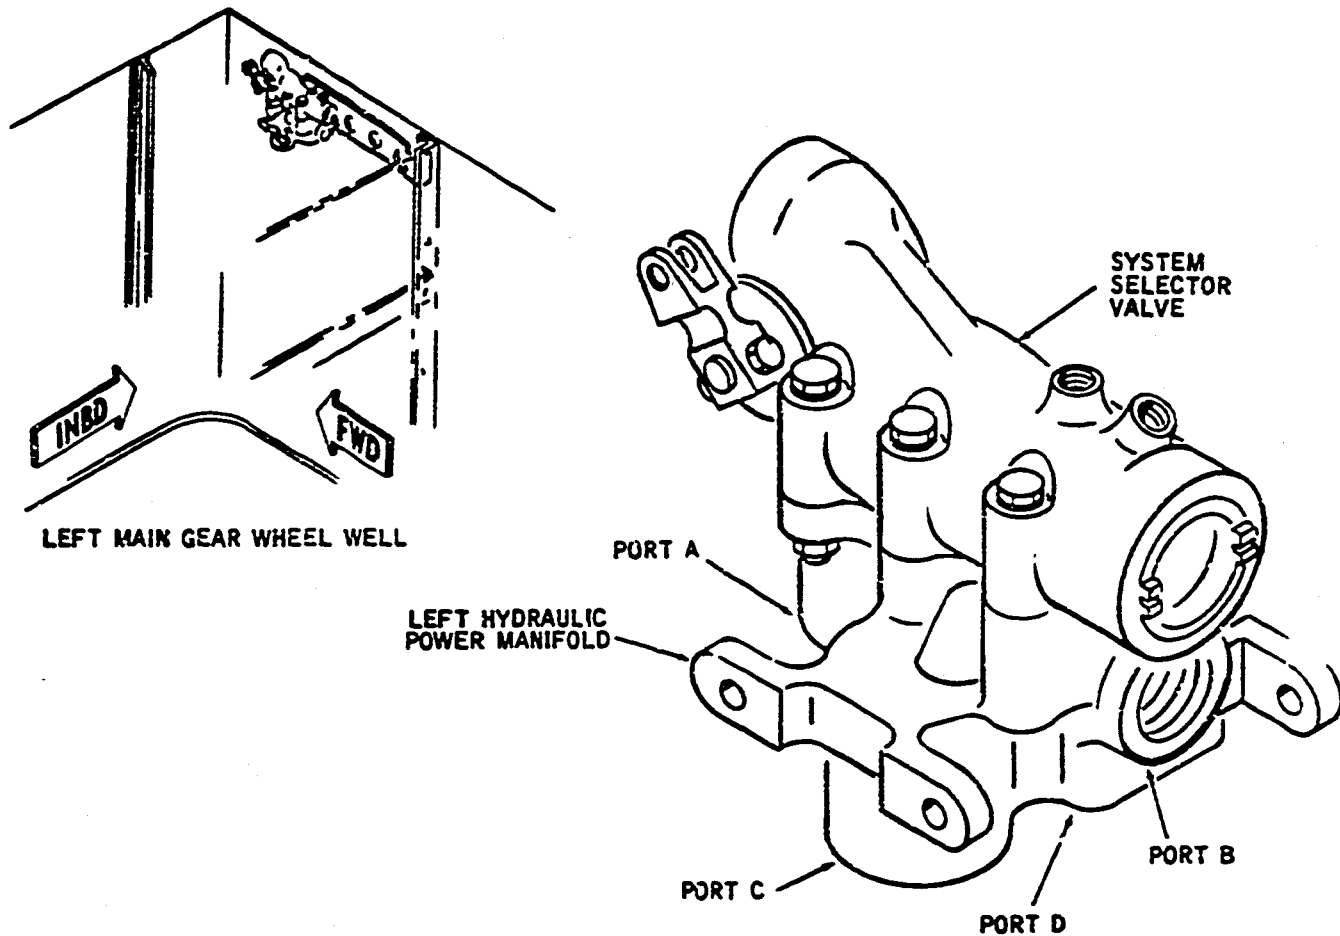

Left Hydraulic Power Manifold -- Schematic  
 Figure 18



HA2-855

29-10-0  
 CODE 8  
 Page 33

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

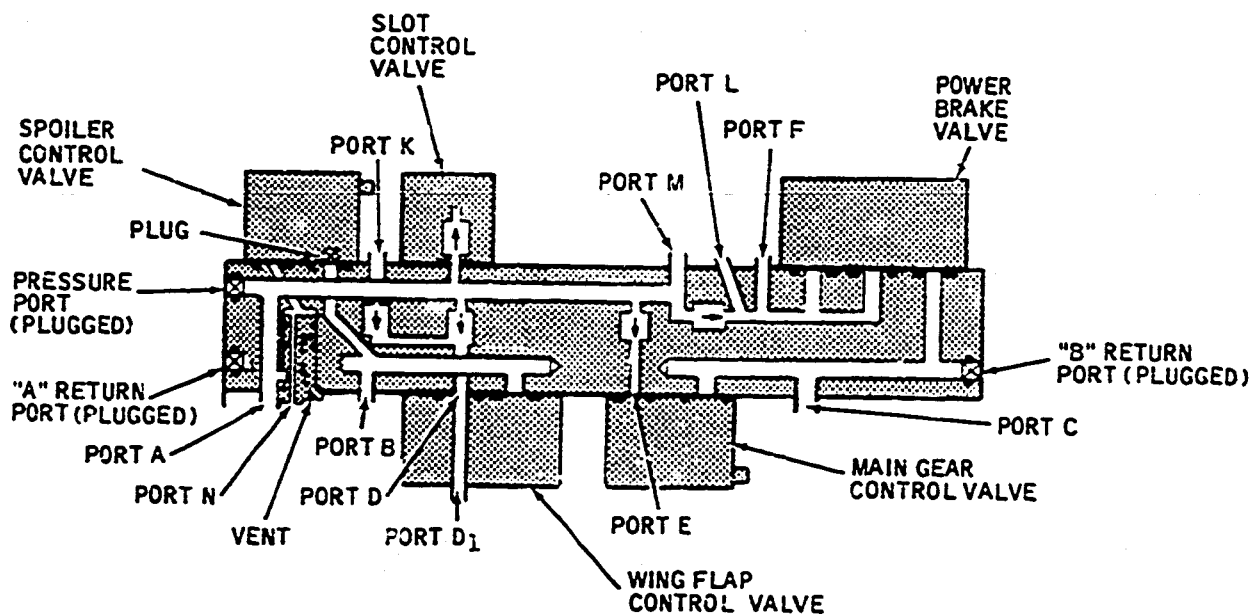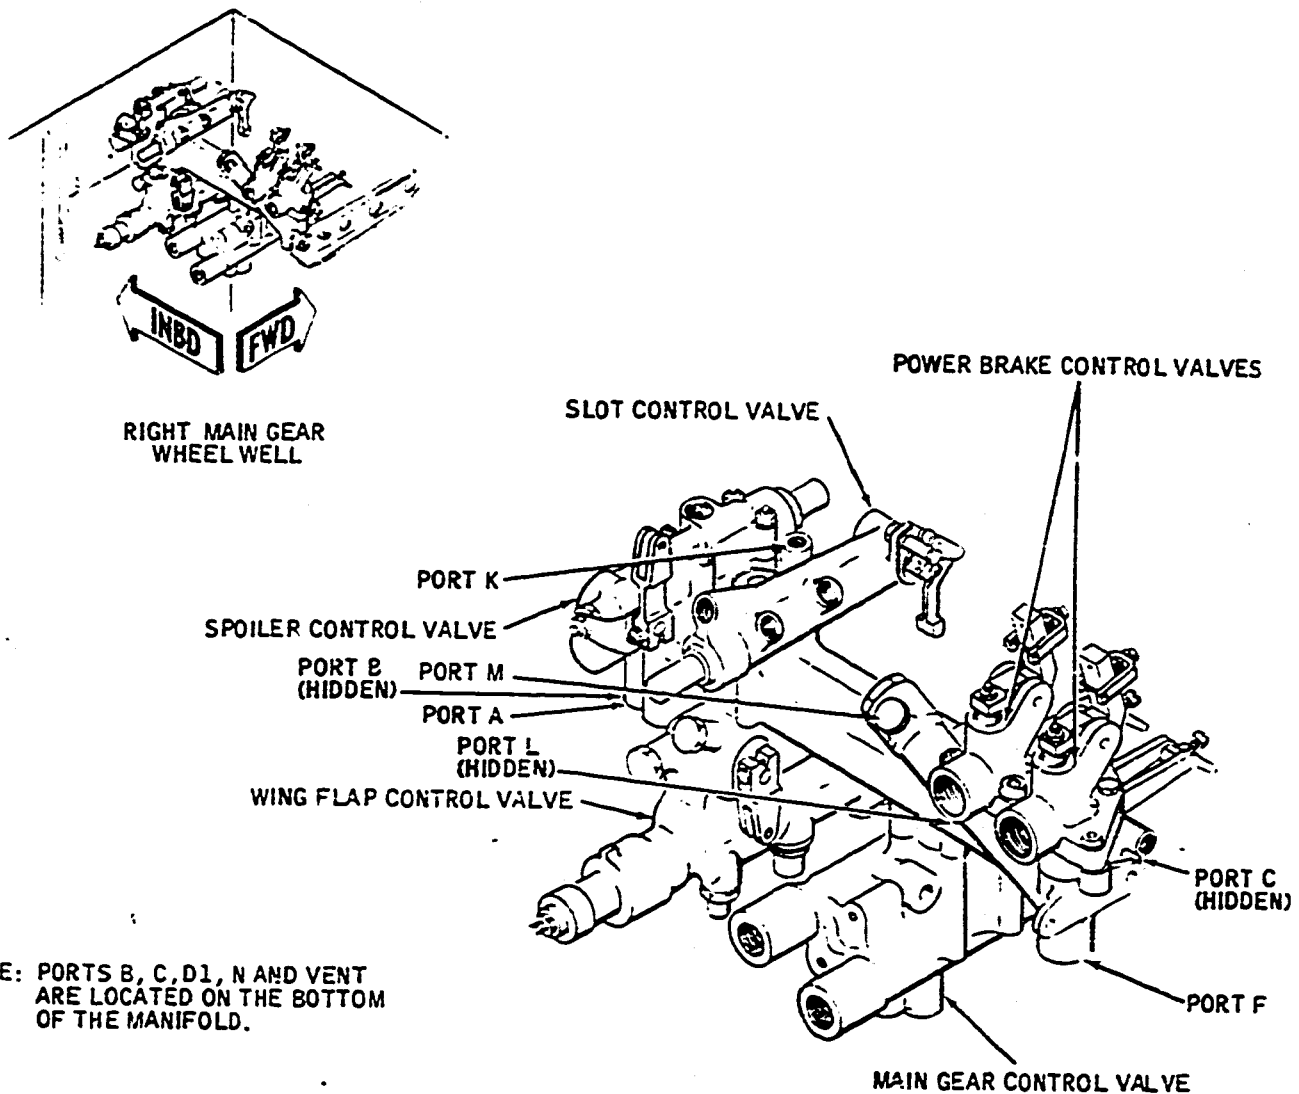

HA2-29A

Right Hydraulic Power Manifold -- Schematic  
 Figure 19

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

the right wheel well. The manifold is held in place with braces and is accessible through the right main gear inboard door.


- (2) The manifold contains passages for pressure and return fluid distribution, four check valves, ports for pressure and return lines, and mounting pads for the various control valves.
- (3) The right manifold receives fluid pressure from the left manifold. Pressure is ported through check valves to the wing flap control valve, to the slot control valve, to the main gear control valve, to the brake control valve, to the brake pressure transmitter, and to the brake accumulators.
- (4) Auxiliary hydraulic pressure is ported from the alternate port of the system selector control valve into port K in the right manifold. Port K is located inboard of the spoiler control valve. From port K, auxiliary hydraulic pressure is ported through a check valve to the downstream side of the wing flap control valve check valve and into the wing flap control valve for alternate operation of the wing flaps.
- (5) The return passage from the wing flap control valve ports fluid to return port A. The brake control valve return passage ports fluid into return line B through a two-way restrictor. The main gear control valve downline return fluid uses a separate port in the valve, bypasses the manifold, and returns the fluid directly to A return line to the reservoir. The upline in the main gear control valve uses the same return port, return port B, in the manifold as the brake control valve.

R. Deleted.


S. Hydraulic Power System Accumulator (See Figure 20.)

- (1) The hydraulic power system accumulator is a spherical, welded-steel, fluid and air bladder-separated container. The accumulator is installed in the pressure line of the hydraulic power system to provide a reserve supply of fluid under pneumatic pressure and to act as a shock absorber for system pressure surges.
- (2) The accumulator is located immediately aft of the left hydraulic power manifold and is accessible through the left main gear inboard door. It is mounted with two corner brackets and clamp blocks at the upper and lower port fittings.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

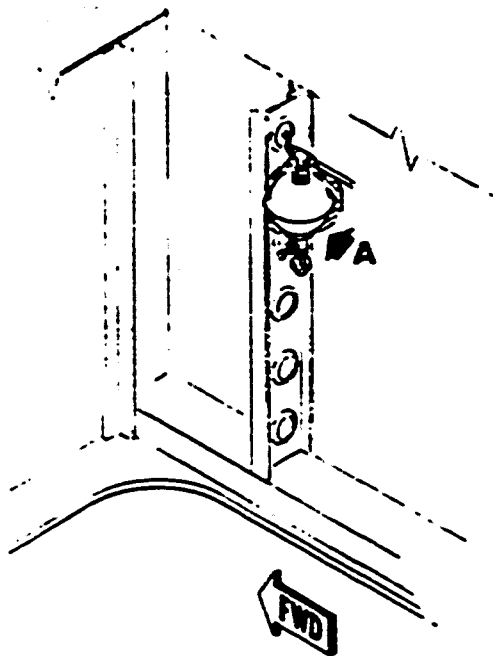

LEFT MAIN GEAR  
WHEEL WELL

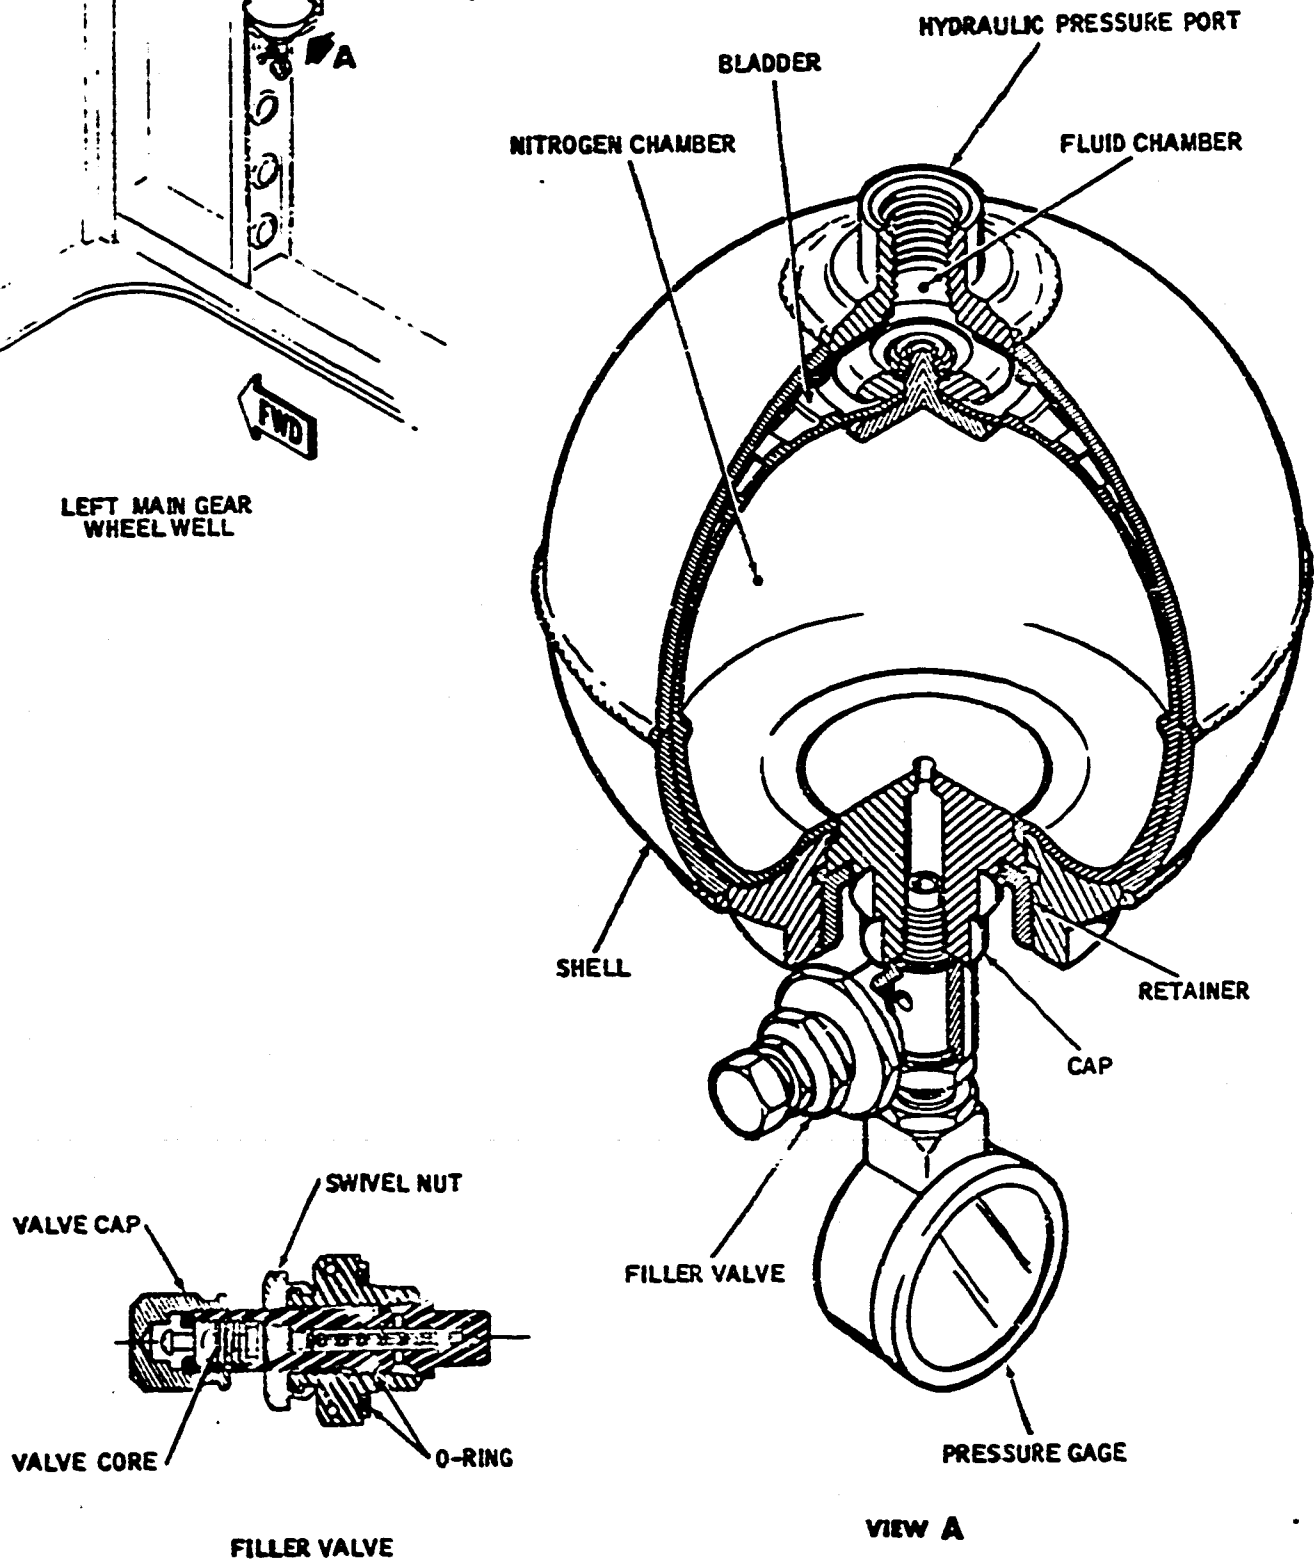

HA2-30

Hydraulic Power System Accumulator --  
 Cutaway View  
 Figure 20





DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The accumulator is installed in the pressure line of the hydraulic power system and is initially charged with 1000 psi of dry nitrogen. As the system pressure builds up, fluid is forced into the upper chamber of the accumulator, further compressing the trapped nitrogen to approximately 3000 psi. With full hydraulic system pressure, 3000 psi is indicated on the pressure gage adjacent to the filler valve. This reserve pressure smooths out any momentary lag in the pump's response to the system's demand for greater fluid flows. The accumulator permits a gradual rise in system pressure, thereby absorbing the shock of pump surges and relieving the piping and system operating units of high-impact loads. When the engine-driven hydraulic pumps are not operating, the accumulator provides system pressure (at a diminishing rate) until a quantity equal to the stored volume in the accumulator has been used by the system.

T. Hydraulic System Priority Valve (See Figure 21.)

- (1) The priority valve is located in the left wheel well near the left hydraulic power manifold. The valve is installed in the hydraulic pressure line, between the two power manifolds, downstream of the pressure supply takeoff port for the flight controls. The priority valve is a balanced relief valve which reserves initial hydraulic pressure (up to 2150 psi maximum) for use in the flight control systems. The valve consists of a body with an inlet, an outlet, and a breather port. Internally, the valve contains a poppet valve plate, a poppet, a poppet valve load-spring, a piston, a piston load-spring, and a piston load-spring housing. The piston load-spring housing chamber is vented to ambient air through a breather hole which is covered by a butyl rubber band.
- (2) The priority valve shuts off hydraulic pressure to all subsystems downstream of the left power manifold, whenever the hydraulic pressure drops below 1700 psi minimum. At this point, the valve closes to reserve the hydraulic pressure for use in the flight control systems, preventing them from reverting to manual operation. When the hydraulic pressure rises to 2150 psi maximum, the priority valve opens and supplies pressure to the right manifold and all subsystem downstream of the priority valve.
- (3) Hydraulic fluid from the left power manifold enters the priority valve through the inlet port, passes through the poppet valve plate holes, and applies pressure against the piston. When sufficient hydraulic pressure is applied to the piston, the piston load-spring compresses, unseating the poppet and permitting full flow through the valve. When the hydraulic pressure decreases to less than the opposing force value of the piston load-spring, the load-spring forces the piston against the poppet and shuts off fluid flow through the valve.
- (4) The maximum flow available from both engine-driven hydraulic pumps is: 44 to 45 gpm at takeoff, climb, and cruise configurations; 26 to 28 gpm at descent, approach, and engine idle configurations.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

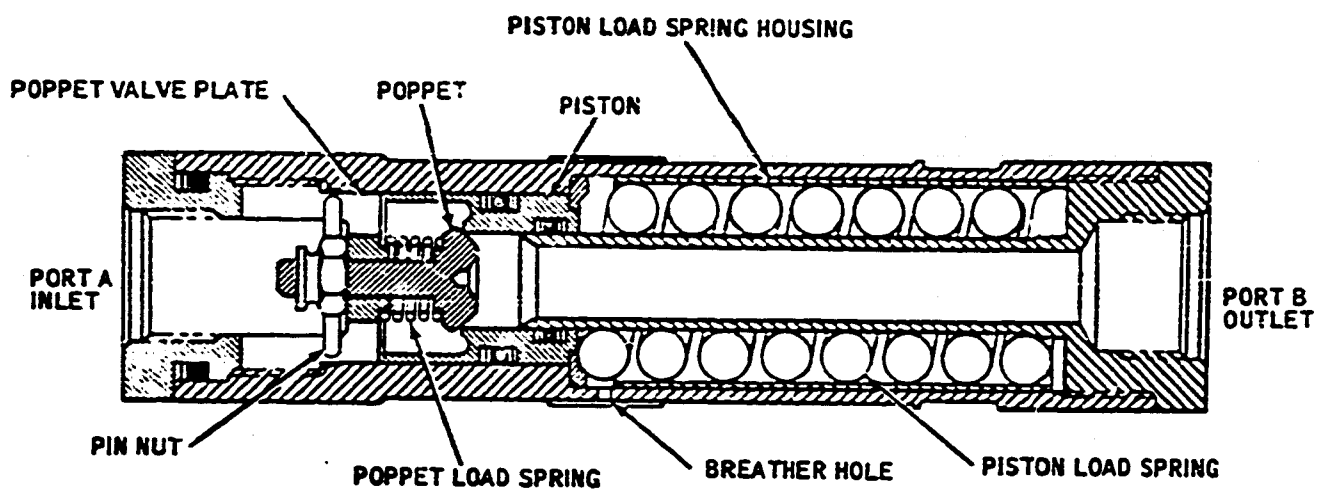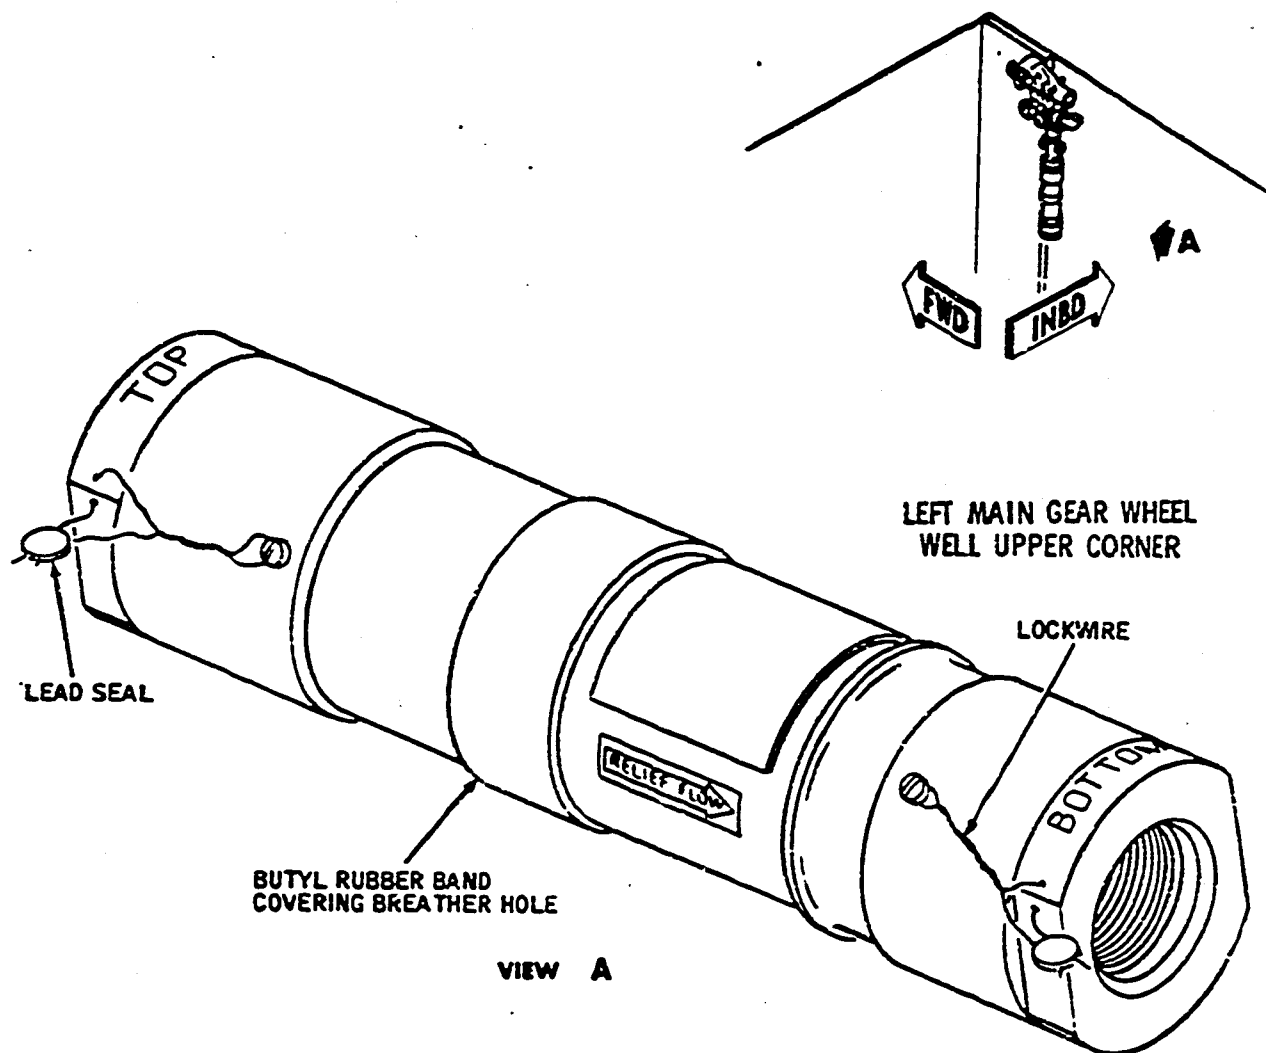

Hydraulic System Priority Valve -- Cutaway View  
 Figure 21

HA2-856

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

(5) Some of the larger hydraulic system demands are as follows:

- (a) Gear retraction -- 17 gpm (10 - 12 seconds)
- (b) Gear extension -- 14 gpm (10 - 12 seconds)
- (c) Wing flaps down -- 8 gpm (10 seconds)
- (d) Wing flaps up -- 3 gpm (22 seconds)
- (e) Horizontal stabilizer -- 7 gpm
- (f) Ailerons -- 17 gpm (25°/second)
- (g) Rudder -- 3 gpm (25°/second)

(6) There are various combinations of hydraulic system operations which could cause momentary reversion of the flight controls to manual operation, the priority valve assures that the left power manifold receives all the hydraulic fluid pressure under conditions of very large flow demands.

#### U. Hydraulic System Selector Control Lever

- (1) The hydraulic system selector control lever is a manually actuated, mechanical lever detented to three positions. The lever provides a mechanical means, through cables, for positioning the system selector valve and the auxiliary hydraulic pump supply selector valve. The hydraulic system selector control lever is located on the system engineer's control pedestal. The lever is attached to a drive sector, located on a common shaft with the other control pedestal sectors. The lever and sector are accessible through the cover plates on the system engineer's pedestal.
- (2) To put the hydraulic power system in the bypass condition, the system selector control lever is lifted out of detent and moved to bypass/general system position. At the same time, the cable moves the sector and pushrod of the system selector valve to the No. 1 position. The pushrod positions the system selector valve to the No. 1 bypass position. At the same time, the cables from the system selector valve sector move the auxiliary pump supply selector valve sector to No. 1 (auxiliary) position. The auxiliary pump supply selector valve remains in the auxiliary supply position through the idle feature of the sector rigging. In this condition, the engine-driven pump pressure is ported to the reservoir and the auxiliary pump supplies pressure to the general system. In this position, the fluid is supplied to the auxiliary pump from the low standpipe in the hydraulic system reservoir. To put the system into the alternate condition, the selector control lever is lifted out of detent and moved to the general system/flaps only position. The cables move the system selector valve sector to the No. 3 (alternate) position. The system selector valve sector moves the cables rotating the

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 8  
Page 39

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

auxiliary pump supply selector valve sector to the No. 3 (alternate) position. As the sector rotates, the end of the arm moves away from the idle position. This positions the valves to the alternate position, supplying fluid to the auxiliary pump from the auxiliary pump alternate reservoir. In this position, fluid from the auxiliary pump is ported to the wing flap control valve. Engine-driven pump pressure is ported to the general system.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - DESCRIPTION AND OPERATION

1. General

A. Description (See Figures 1 and 2.)

- (1) The hydraulic power system receives fluid pressure from the engine-driven hydraulic pumps, one installed on each inboard engine. The electrically driven auxiliary pump is used to supplement the engine-driven pumps, or to independently supply the system with fluid pressure.
- (2) The hydraulic system reservoir, located in the left wing root, has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir is used for fluid, and 1/10 is used for foam space. A separate air chamber is installed in the reservoir system to provide for a greater fluid capacity in the main reservoir. A reservoir filler assembly is installed in the piping between the reservoir and the air chamber and has a vent line from the filler neck to the tee at the top of the reservoir sight gage. The reservoir is pressurized to 30 to 35 psi by bleed pressure from the engine-driven pumps through an air pressure regulator-aspirator.
- (3) The engine-driven pumps receive fluid from the pressurized main reservoir through respective engine hydraulic fire shutoff valves. The engine hydraulic fire shutoff valves are normally open and can be mechanically controlled from the flight compartment. The pumps supply fluid pressure through respective check valves to the dual filter and relief valve. Some of the fluid from the filter is ported through the regulator-aspirator to pressurize the reservoir. Most of the fluid is routed through a check valve to the system selector valve, and then to the left and right hydraulic power manifolds. The manifolds distribute the fluid pressure to the subsystems.
- (4) Hydraulic fluid is normally supplied to the auxiliary hydraulic pump from a low standpipe in the main reservoir. During alternate operation, the auxiliary hydraulic pump receives fluid supply from the auxiliary pump alternate reservoir, which is located just aft of the auxiliary pump. From these reservoirs, the fluid is ported through the auxiliary pump selector valve which is mechanically controlled from the flight compartment by the system selector control lever. When operating, the auxiliary hydraulic pump supplies fluid pressure to the subsystems through the system selector valve which is also controlled by the system selector control lever in the flight compartment. A filter and check valve are installed in the line from the auxiliary pump to the system selector valve.
- (5) An accumulator is installed in the pressure line to the subsystems to provide a reserve supply of fluid and to act as a surge damper for the system.

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 9  
Page 1


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Engine-driven pump fluid pressure is routed through the system selector valve to the left power manifold, where it is distributed to some of the subsystems and through the priority valve to the right power manifold. Fluid pressure from the right power manifold is distributed to the remaining subsystems.
- (7) The priority valve is a spring-loaded, poppet-type, balanced relief valve installed in the line downstream of the left power manifold. The priority valve's function in the system is to prevent the flight control systems from reverting to manual operation during high demands on the hydraulic system.
- (8) A fluid pressure transmitter, located in the nosewheel well, senses the system pressure, which is indicated on the hydraulic system pressure indicator in the flight compartment.

**B. Normal Operation**

- (1) Fluid is supplied to the hydraulic system from the pressurized hydraulic system reservoir. For operation of the hydraulic system under normal conditions, 8.1 US gallons (6.7 Imperial gallons; 30.6 liters) of hydraulic fluid are available to the engine-driven hydraulic pumps, and 12.9 US gallons (10.7 Imperial gallons; 48.8 liters) are available to the auxiliary hydraulic pump. Supply lines from the main reservoir carry fluid to each inboard pylon through normally open engine hydraulic fire shutoff valves to the engine-driven hydraulic pumps. Fluid is supplied to the auxiliary hydraulic pump from the main reservoir through a low standpipe at the base of the reservoir. Fluid is carried from the reservoir through the auxiliary pump selector valve to the auxiliary hydraulic pump.
- (2) The engine-driven hydraulic pumps supply full system pressure (3000 psi nominal) at any given engine speed, from idle to full power. The output flow of the pump is varied by sensing pressure from the outlet side of the pump. Each engine-driven pump contains a solenoid-operated bypass valve which, when energized, bypasses the pressure control regulator of the pump and ports fluid to the pump yoke control piston which feathers the pump. When the pump is feathered, flow rate is reduced to almost zero (1.0 gpm) and to a pressure of approximately 300 psi. Half of this flow maintains pump lubrication and cooling through internal leakage. This leakage is returned, through a check valve, the engine-driven pump case drain line filter, and another check valve to the case drain return port of the reservoir. The pressure fluid from each pump passes through a check valve to the dual filter and relief valve.
- (3) The fluid enters the dual filter and relief valve through the relief valve chamber. The fluid is passed through the filter element, through a manifold, and through a common outlet port. Fluid from the outlet port is routed through a check valve to the system selector valve. If back pressure in the system builds up to approximately 3300 psi, the relief valves in the dual filter and relief valve open and port fluid

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

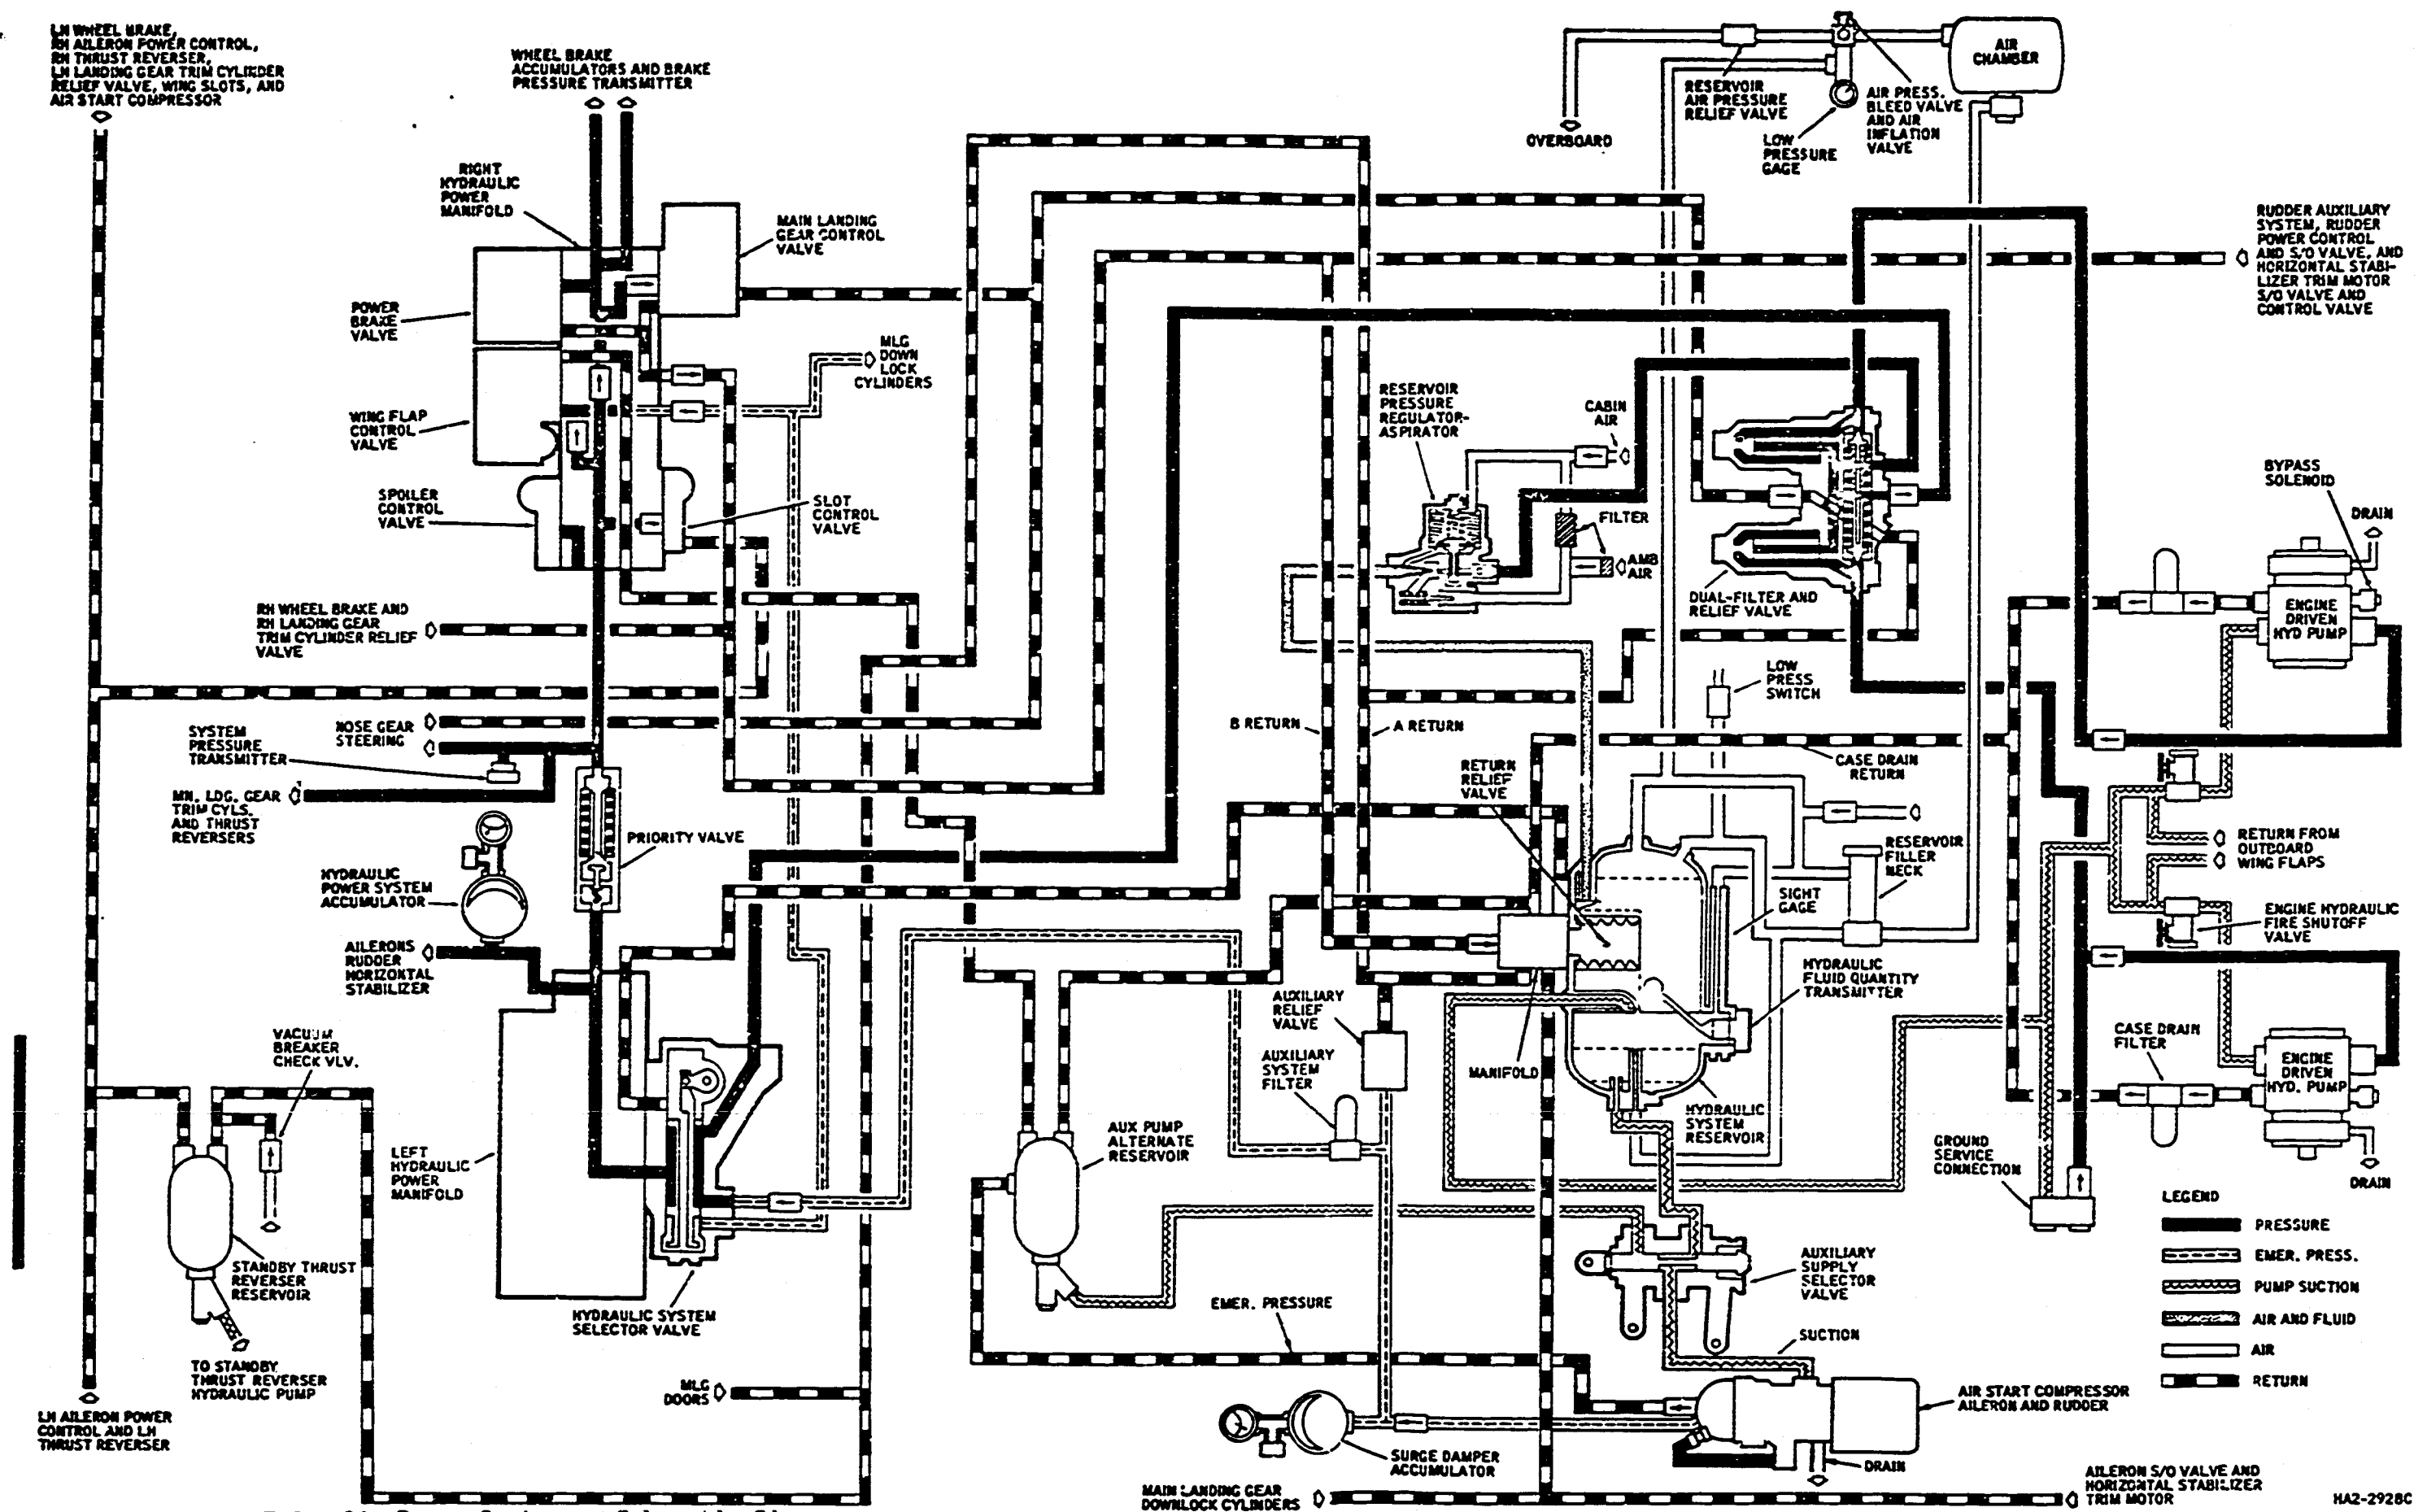

Hydraulic Power System -- Schematic Diagram  
 Figure 1


29-10-0  
 CODE 9  
 Page 3

Jan 15/68

Printed in U.S.A.

HA2-2928C

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

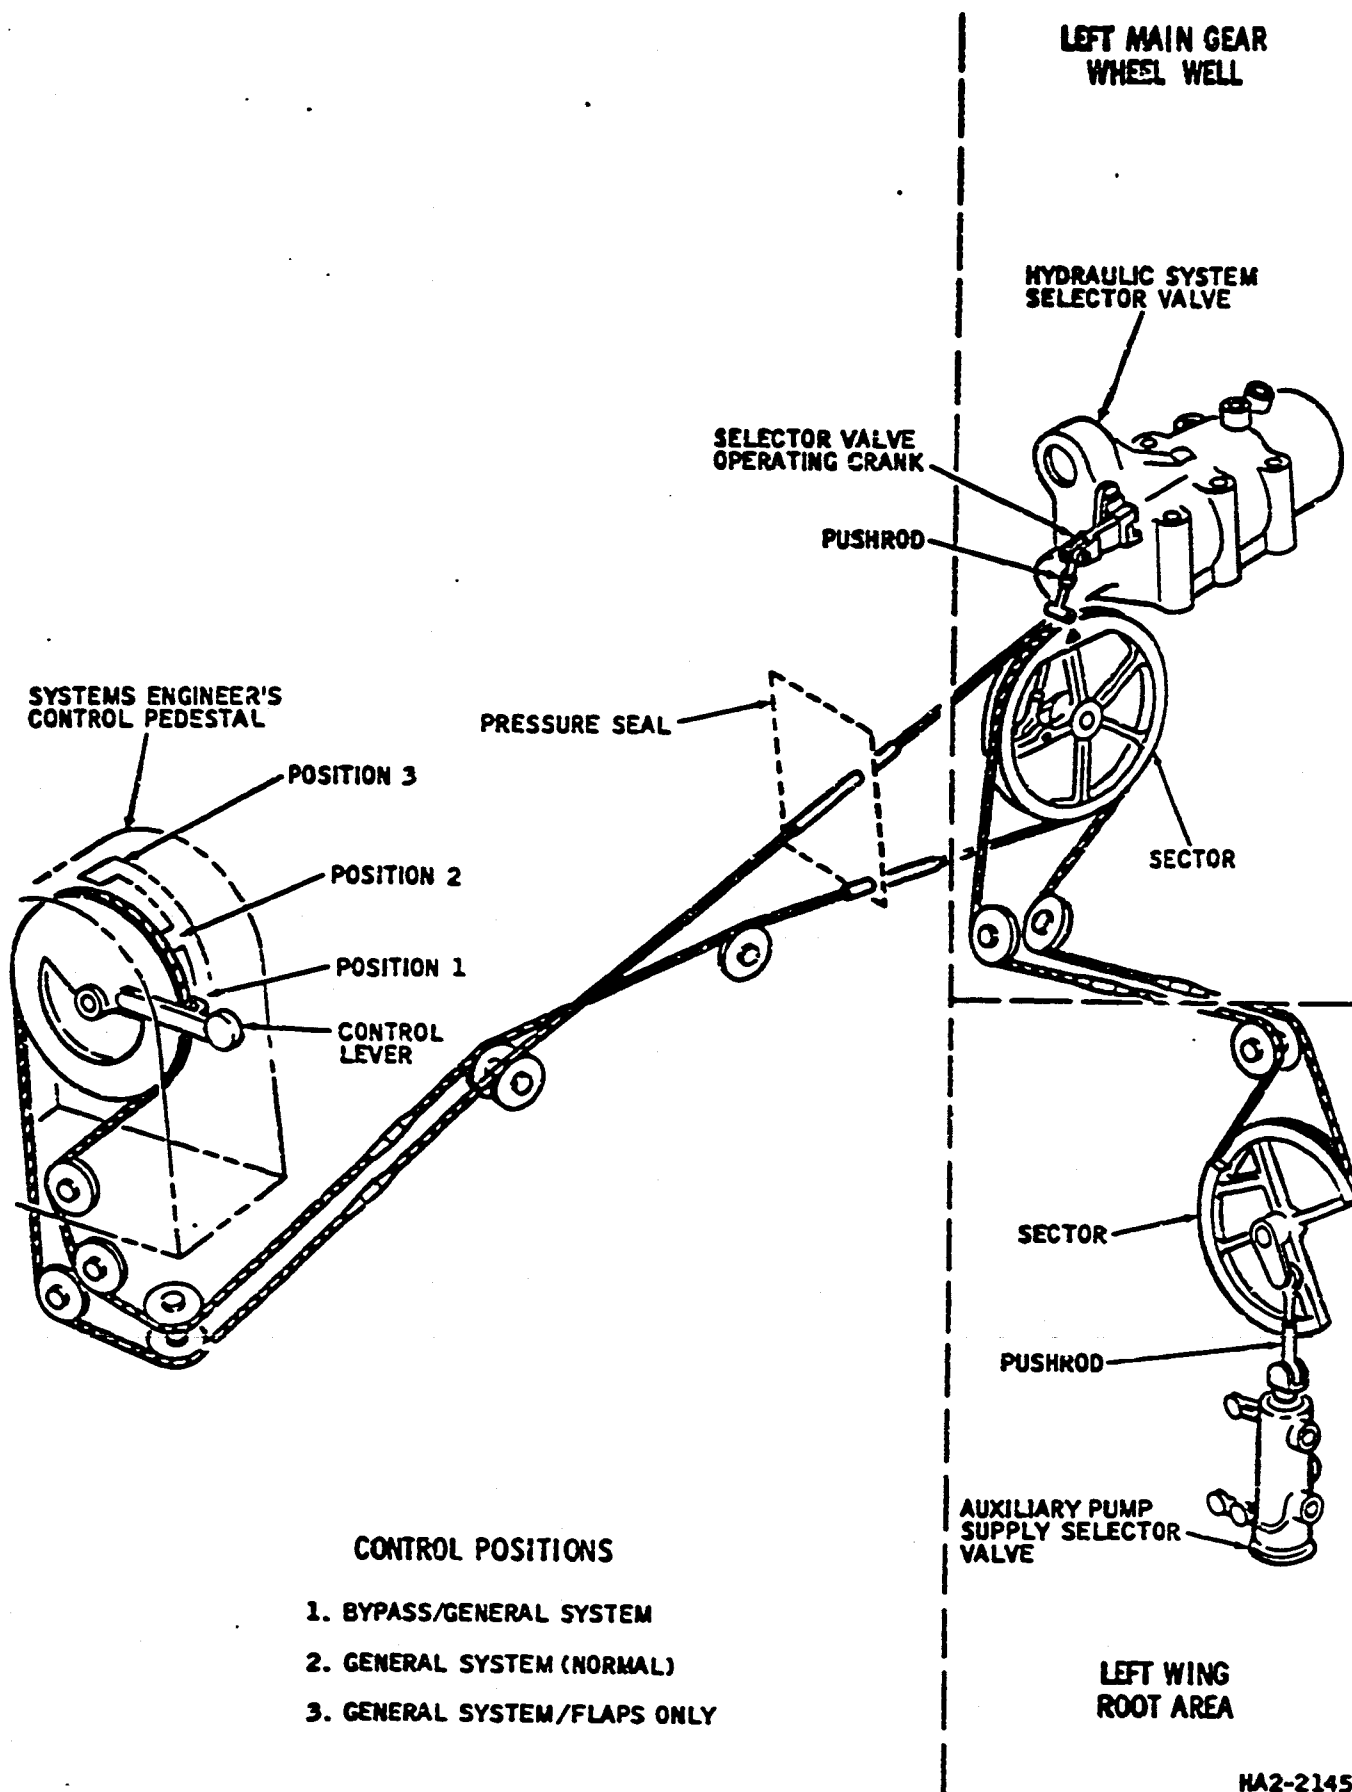

**CONTROL POSITIONS**

1. BYPASS/GENERAL SYSTEM
2. GENERAL SYSTEM (NORMAL)
3. GENERAL SYSTEM/FLAPS ONLY

Hydraulic System Selector and Auxiliary Pump Supply  
 Selector Valves -- Mechanical Control Schematic  
 Figure 2

HA2-2145

29-10-0  
 CODE 9  
 Page 5

Jun 15/67

Printed in U.S.A.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

back to the reservoir via A return port. The relief valve poppet closes again when system pressure drops to approximately 3000 psi.

- (4) The aspirator receives filtered fluid (bleed pressure at nominal 3000 psi) from the dual filter and relief valve. The aspirator operates on the jet pump principle. Hydraulic fluid is atomized and mixed with air within the unit by a nozzle and a venturi. The mixture is used to pressurize the reservoir and reservoir air chamber. The regulator diaphragm maintains a pressure range of 30 to 35 psi in the reservoir and air chamber. If there is a regulator malfunction, the aspirator stalls when the outlet pressure reaches a maximum of 40 psi. A reservoir relief valve in the reservoir vent line relieves thermal expansion pressure above 45 (+5, -0) psi.
- (5) Pump pressure fluid enters the system selector valve through the system pressure inlet port. When the pump selector control lever is in the general system (normal) position, fluid is ported to the pressure passages of the left power manifold. The fluid pressure in the left power manifold is ported through the priority valve to the nose gear and the right power manifold and directly to the following valves:
  - (a) Aileron power shutoff
  - (b) Rudder power shutoff
  - (c) Longitudinal trim hydraulic motor shutoff
- (6) The right power manifold distributes fluid pressure to the brake accumulators, the pressure transmitter, and the following control valves:
  - (a) Wing flap
  - (b) Slot
  - (c) Main gear
  - (d) Power brake
- (7) The return fluid from the wing flap control valve is ported through the right power manifold and into the auxiliary hydraulic pump alternate reservoir. Return fluid from the outboard wing flaps is piped into the suction lines for each engine-driven hydraulic pump. Return fluid from the slot control valve is ported into the A return line to the main reservoir. The power brake and main gear control valve gear up return fluid is ported through a restrictor check valve into the B return line to the reservoir. The main gear control valve gear down return pressure bypasses the right manifold and returns to the reservoir through the A return line. All return fluid entering the reservoir is filtered through the return ports filter located within the reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

C. Bypass Operation

- (1) The output of the engine-driven hydraulic pumps is bypassed by moving the system selector control lever out of the general system (normal) position to the bypass/general system position.
- (2) The system selector valve in the bypass position ports engine-driven pump pressure from the dual filter and relief valve directly to the return passage of the left power manifold. From the manifold, the fluid is ported directly to a tee in the wing flap return port of the hydraulic system reservoir. In the bypass condition, the auxiliary hydraulic pump receives fluid from the hydraulic system reservoir, pressurizes it to system pressure, and ports it to the left and right power manifolds for distribution to the subsystems.

D. Alternate Operation

- (1) When both engine-driven hydraulic pumps and the auxiliary hydraulic pump are rendered inoperative due to the loss of the normal supply of fluid, the hydraulic power system can be rigged for alternate operation. This is accomplished by placing the system selector control lever in the general system/flaps only position. When the system selector control lever is in this position, the auxiliary hydraulic pump supply selector valve is positioned to supply fluid from the auxiliary pump alternate reservoir to the auxiliary pump.
- (2) Fluid is supplied to the auxiliary pump from the outlet port of the auxiliary pump supply selector valve. Output pressure is ported through the auxiliary system filter and check valve to the auxiliary pressure inlet port of the system selector valve.
- (3) In the general system/flaps only position, auxiliary pump pressure bypasses the manifold pressure passages and is ported from the alternate outlet port of the system selector valve. Fluid from this port flows directly to a port on the right power manifold, through an internal check valve in the manifold, to the wing flap control valve.

E. Mechanical Control

- (1) The hydraulic power mechanical control system consists of the hydraulic system selector control lever cable drum, the system selector valve sector, the system selector valve, the auxiliary hydraulic pump supply selector valve sector, and the auxiliary hydraulic pump supply selector valve.
- (2) The control lever located on the system engineer's control pedestal is used to position the system selector valve and, in turn, the auxiliary hydraulic pump supply selector valve.

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 9  
Page 7

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (3) The control lever is spring loaded into general system (normal) position, and is connected to the control lever cable drum. Two cables run from the drum, under the cabin floor, aft through the pressure bulkhead at the rear wing spar, and into the left wheel well to the system selector valve sector. A pushrod connects the sector to the positioning lever of the system selector valve.
- (4) A second set of cables is routed from the system selector valve sector into the left wing root to the auxiliary hydraulic pump supply selector valve sector. When the system selector valve is in either bypass or normal, the auxiliary hydraulic pump supply selector valve sector is arranged so that the pushrod idles between the two positions. This allows the valve to remain in the auxiliary position. When the sector is moved to the alternate position, the pushrod is pulled by the sector to reposition the valve to the alternate position.
- (5) The control lever is normally in the general system (normal) position. To move the system selector valve to the bypass position, the control lever is moved to the bypass/general system position. When the system selector valve is moved to the bypass position, the auxiliary hydraulic pump supply selector valve sector is moved to a new position. Due to the idle feature on the auxiliary sector, the valve remains in the auxiliary position. With the valve in this position, fluid is supplied to the auxiliary pump through the low standpipe in the hydraulic system reservoir. In this condition, engine-driven pump pressure is ported to the reservoir and the auxiliary pump pressure is ported to the general system.
- (6) To put the system in alternate operation, the control is moved to the general system/flaps only position. This moves the system selector valve to the alternate position, and simultaneously moves the auxiliary hydraulic pump supply selector valve to the alternate position. Fluid is supplied to the auxiliary pump from the auxiliary hydraulic pump alternate reservoir. Fluid pressure from the auxiliary pump is ported to the flap system control valve. Engine-driven pump pressure is ported from the system selector valve to the general system.

## 2. System Components

### A. Hydraulic System Reservoir (See Figures 3 and 4.)

- (1) The hydraulic system reservoir is installed on the aft side of the wing rear spar in the left wing root and is accessible through the left wing root access door. The hydraulic system reservoir serves as the main source of hydraulic fluid for the engine-driven hydraulic pumps and the normal supply for the auxiliary hydraulic pump. The reservoir is cylindrical in shape and contains a filter, baffle, and a screen cover encasing the filter. The filter prevents foreign particles from contaminating the fluid supply. Mountings are provided on the exterior

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

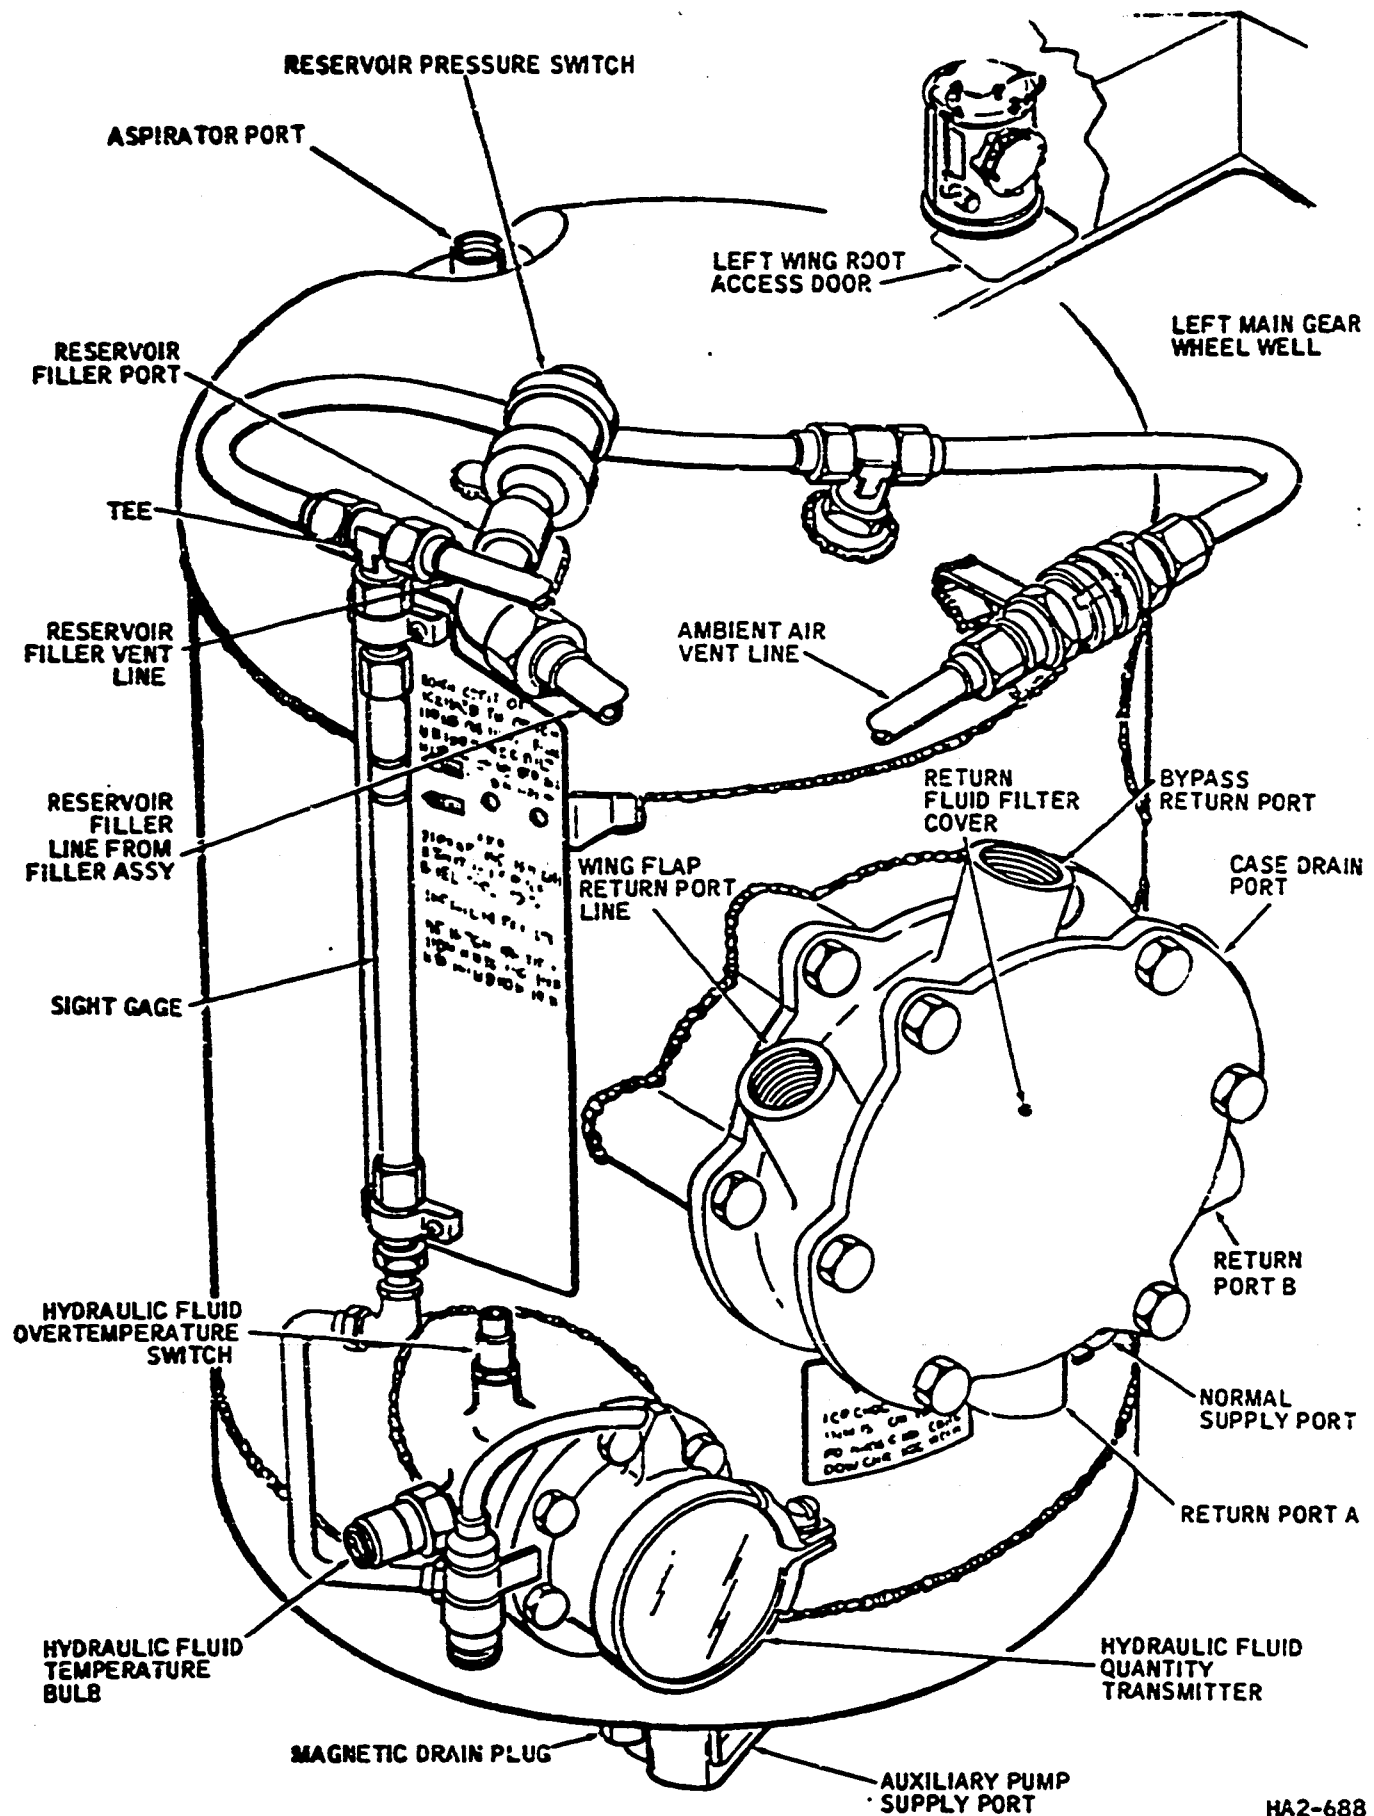

Hydraulic System Reservoir -- External View  
 Figure 3


HA2-688

29-10-0  
 CODE 9  
 Page 9

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

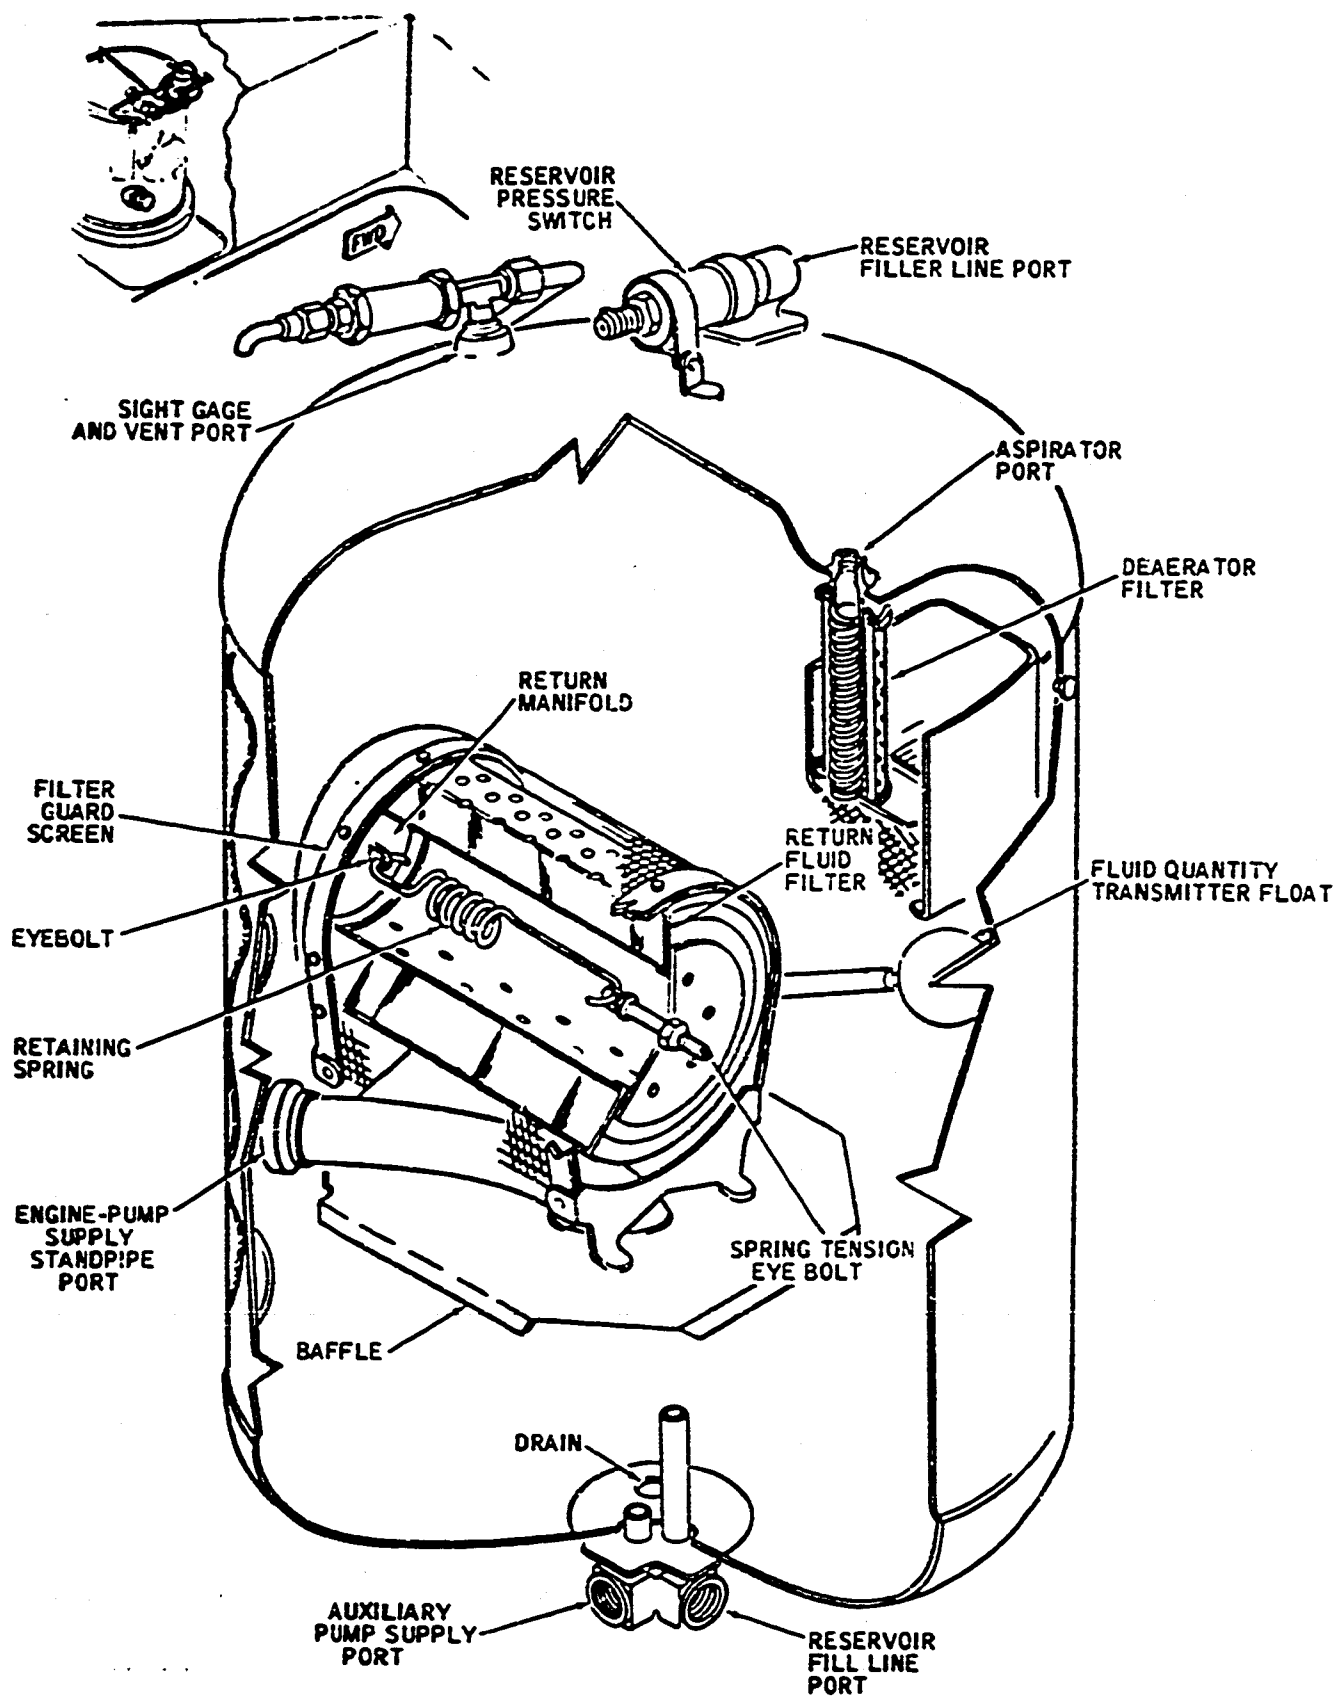

Hydraulic System Reservoir -- Cutaway View  
 Figure 4

HA2-689

29-10-0  
 CODE 9  
 Page 10

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

surface of the reservoir for return line ports, aspirator port, electrical sensing units, sight gage, instruction placards, magnetic drain plug, and system supply ports.

- (2) The reservoir is pressurized with air from the regulator-aspirator to a range of 30 to 35 psi and has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir volume is used for fluid and 1/10 is used for foam space.
- (3) The aspirator port through which the reservoir is pressurized is located in the recess on top of the reservoir. An aspirator-deaerator filter is supported in the reservoir by a screen and support box assembly which is mounted to the reservoir wall by two bolts.
- (4) The mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The return ports manifold is an open-centered ring, flanged at both sides and provided with five fluid ports around its circumference; return port A is located at the bottom, return port B is located at the lower right side, the wing flap return port is located at the upper left side, and the system selector valve bypass port is located at the top. One flange of the manifold is mounted with six bolts to the mounting flange on the reservoir. The return fluid filter cover fits into the open side of the manifold, and is attached to the outer manifold flange with six bolts to form a fluid-tight cover for both the manifold and the filter.
- (5) The return fluid filter is installed in the reservoir, behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the return fluid filter cover holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to the engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
- (6) A flanged adapter for the fluid quantity transmitter is welded to the reservoir below and to the left of the return ports manifold. The adapter is provided with two small port bosses for the hydraulic fluid temperature bulb and the hydraulic fluid overtemperature switch. The lower end of the sight gage connects to a third port in the adapter, while the top of the sight gage tees into a port at the top of the reservoir. An instruction plate is mounted behind the sight gage and the vacuum breaker check valve tees into the port at the top of the reservoir that is used by the sight gage.

**B. Hydraulic Reservoir Return Fluid Filter (See Figure 4.)**

- (1) The reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply. The filter is located behind the return ports manifold, and is spring loaded to act as its own relief valve. Access to the filter is by

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


removing the return fluid filter cover from the return ports manifold by removal of six bolts. The filter is attached by the retaining spring to the cover and is withdrawn from the reservoir when the cover is removed.

- (2) Externally, the filter consists of two perforated concentric tubes. The area between the tubes is closed by metal end caps which are bonded to the two tubes. A resilient rubber gasket is bonded to each of the caps. Each gasket must be smooth and flat for proper sealing of the filter. The gaskets act as a static seal and a relief valve seat.
- (3) Internally, the filter has a 10-micron, resin-impregnated, convoluted paper-type filter element. The area of the filter element is approximately 1960 square inches. The filter is held in place by a retaining spring. One end of the spring is attached to an eyebolt located inside the return port's manifold cover. The spring passes through the center chamber of the filter and is connected to another eyebolt. This eyebolt is secured to a large washer and plate by means of a self-locking nut. The washer seats on the rubber gasket which is bonded to the filter. The fluid enters the center chamber of the filter and passes through the inner tube of the filter to the filter element by means of perforation holes. Foreign matter is filtered out by the filter element, and the fluid leaves the element through perforation holes in the outer tube. When the element becomes saturated with foreign matter, the filter acts as its own relief valve and unseats at 20 to 25 psi above normal return pressure which allows fluid to bypass the filter and enter the reservoir.

C. Hydraulic Reservoir Air Pressure Regulator-Aspirator (See Figure 5.)

- (1) The reservoir air pressure regulator-aspirator is a jet-type air pump, regulated by a pressure-sensitive shutoff valve. The unit pressurizes the hydraulic reservoir with air to the operating pressure range of 30 to 35 psi. The regulator-aspirator is located on the top inboard side of the reservoir and is mounted on the reservoir retainer ring. Access to regulator-aspirator is through the left wing root access door.
- (2) The regulator-aspirator assembly consists of a main aspirator body and a regulator housing. The main aspirator body has two inlet ports and one outlet port. The ports are permanently identified inlet, outlet, and air inlet. The plug for an air check valve is located near the outlet port. A chemically treated paper filter is installed near the aspirator body air inlet port in the air line from the pressurized cabin area. A metal screen filter is installed on the check valve which tees into the aspirator body air inlet port.
- (3) The reservoir air pressure regulator-aspirator operates basically with a jet pump action which is regulator controlled. Fluid enters the assembly through the fluid inlet port where it is filtered and then ported through the valve assembly of the regulator. During normal operation, when air pressure at the outlet port is under 30 psi, the valve is open, porting fluid to the nozzle. The orifice in the nozzle sprays the fluid through

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

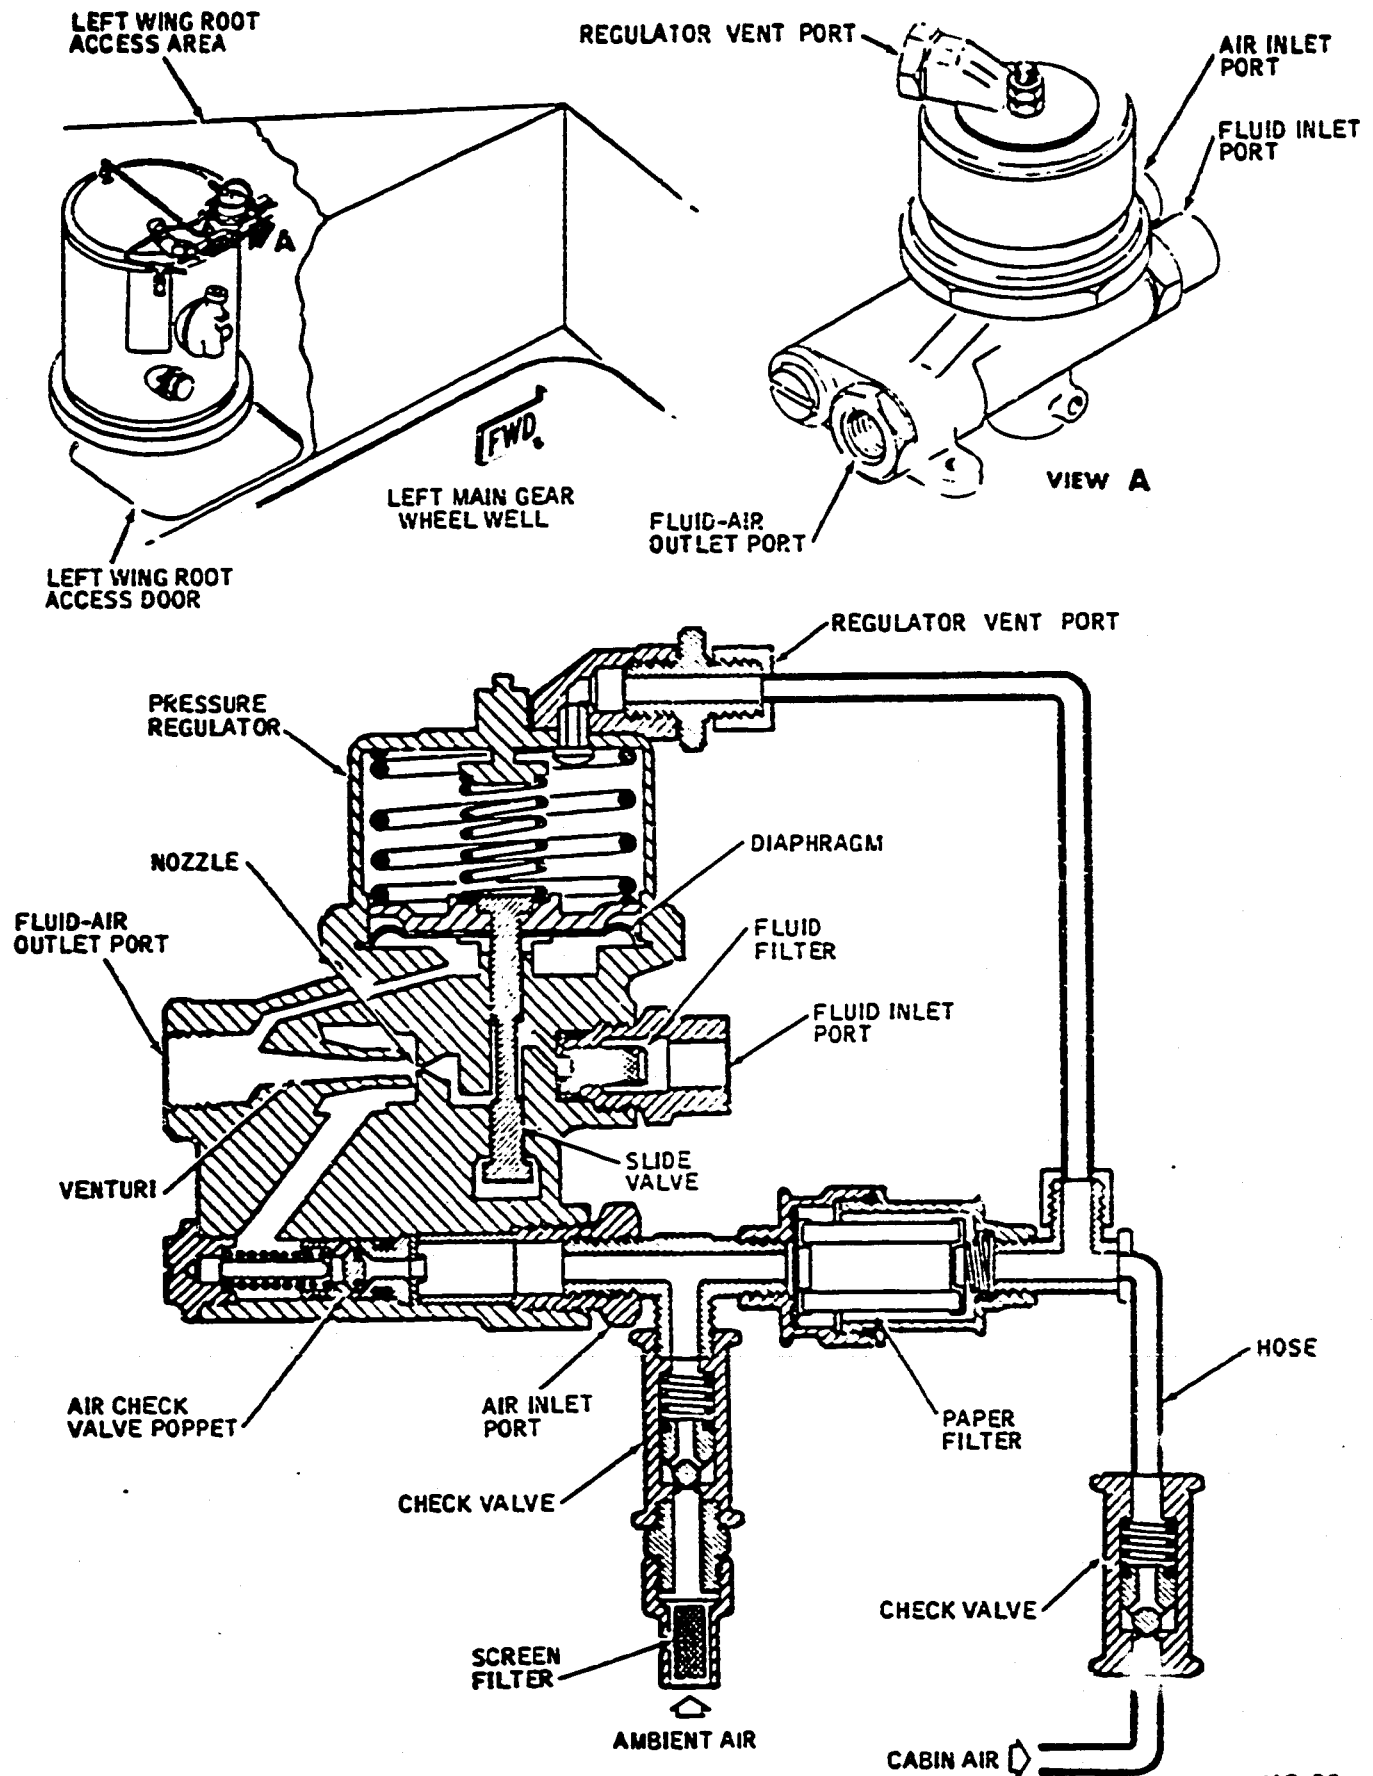

Reservoir Air Pressure Regulator-  
 Aspirator -- Schematic  
 Figure 5

HA2-25

29-10-0  
 CODE 9  
 Page 13

Jun 15/67

Printed in U.S.A.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

the venturi of the outlet port, creating a vacuum in the chamber around the venturi. When the vacuum becomes great enough to create a pressure differential of approximately 1 psi, ambient air opens the air check valve. The air is ported to the chamber around the venturi and is siphoned, with the fluid, through the outlet port.

- (4) Hydraulic fluid inlet pressure at the engine-driven hydraulic pumps is improved at high altitude operation by supplying pressurized filtered cabin air to the reservoir regulator-aspirator instead of ambient outside air. Part of the inlet air is diverted by a tee fitting to the regulator chamber to provide a more positive regulating force on the diaphragm than would be obtained with low ambient pressures. The chemically treated paper filter, installed in the regulator-aspirator air supply line from the cabin, removes smoke tars and impurities from the pressurized cabin air. The steel mesh screen filter, installed on the check valve which tees into the regulator-aspirator air inlet port downstream of the paper filter, removes dust, dirt, and foreign particles from the ambient air and serves as a standby to supply filtered air in event the paper filter is clogged.
- (5) As pressure in the reservoir builds up, back pressure is bled from the outlet port to the diaphragm chamber. The reaction on the diaphragm begins to move the slide valve to cut off the fluid flow. At 30 to 35 psi of back pressure, the diaphragm completely closes the slide valve, cutting off the flow of fluid. If there is a regulator malfunction, the aspirator stalls when outlet pressure reaches a maximum of 40 psi.
- .) The aspirator is capable of pressurizing the reservoir to 30 to 35 psi in approximately 4 minutes at altitudes from sea level to 15,000 feet, when fluid is ported through the nozzle at 0.5 gpm at 3000 psi.


**D. Regulator-Aspirator Air Filters (See Figure 6.)**

- (1) The regulator-aspirator air filters remove ambient and cabin air impurities from the air which is used to pressurize the main hydraulic system reservoir. The filtering system is composed of two filters. One of which is a paper element filter, installed directly in the cabin air supply line near the regulator-aspirator. The other filter is a fine mesh, screen-type filter, installed on a check valve and positioned at right angles to the regulator-aspirator air inlet port. The screen filter, in addition to providing an immediate supply of ambient air during ground operations, serves as a standby air inlet to preclude air starvation of the regulator-aspirator in the event the paper element filter becomes clogged.


**E. Hydraulic Reservoir Relief Valve (See Figure 7.)**

- (1) The reservoir relief valve and the air pressure aspirator-regulator keep the reservoir pressurized to normal operating range. The valve relieves excess air pressure which may build up in the reservoir through thermal expansion in the system. The valve has an inlet port

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

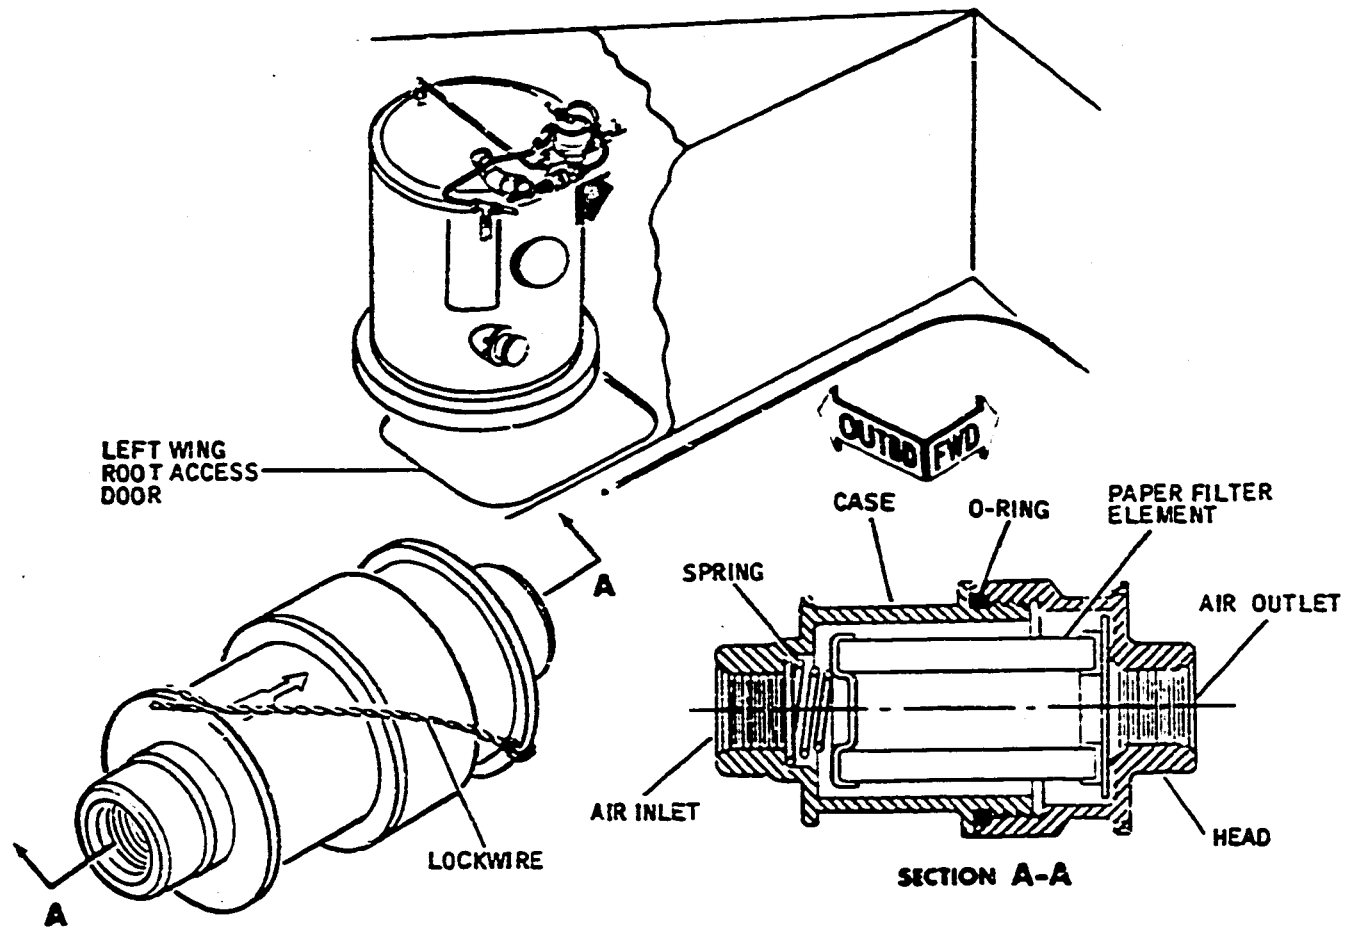

PAPER ELEMENT FILTER

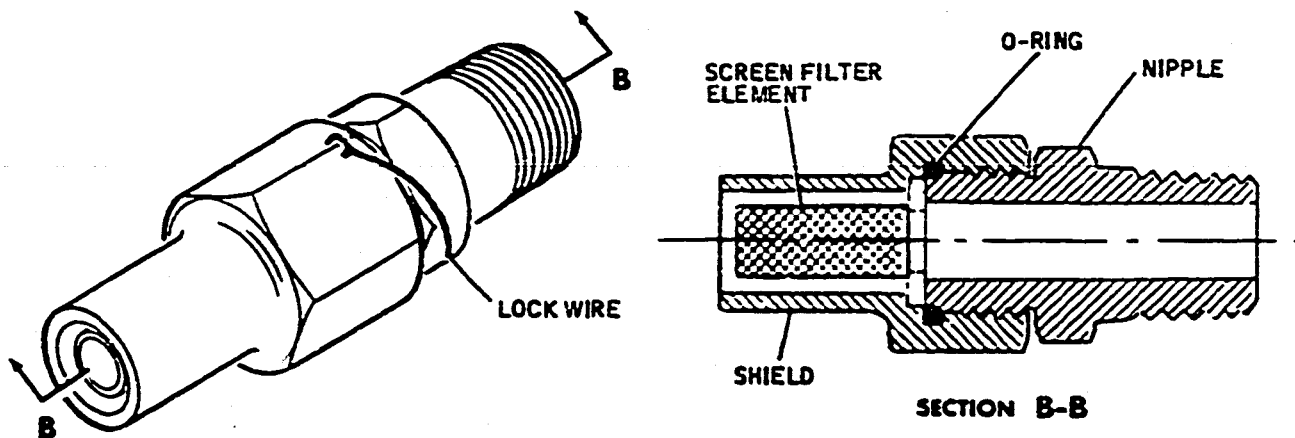

SCREEN FILTER

Regulator-Aspirator  
 Air Filters -- Cutaway View  
 Figure 6


HA2-35

29-10-0  
 CODE 9  
 Page 15

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

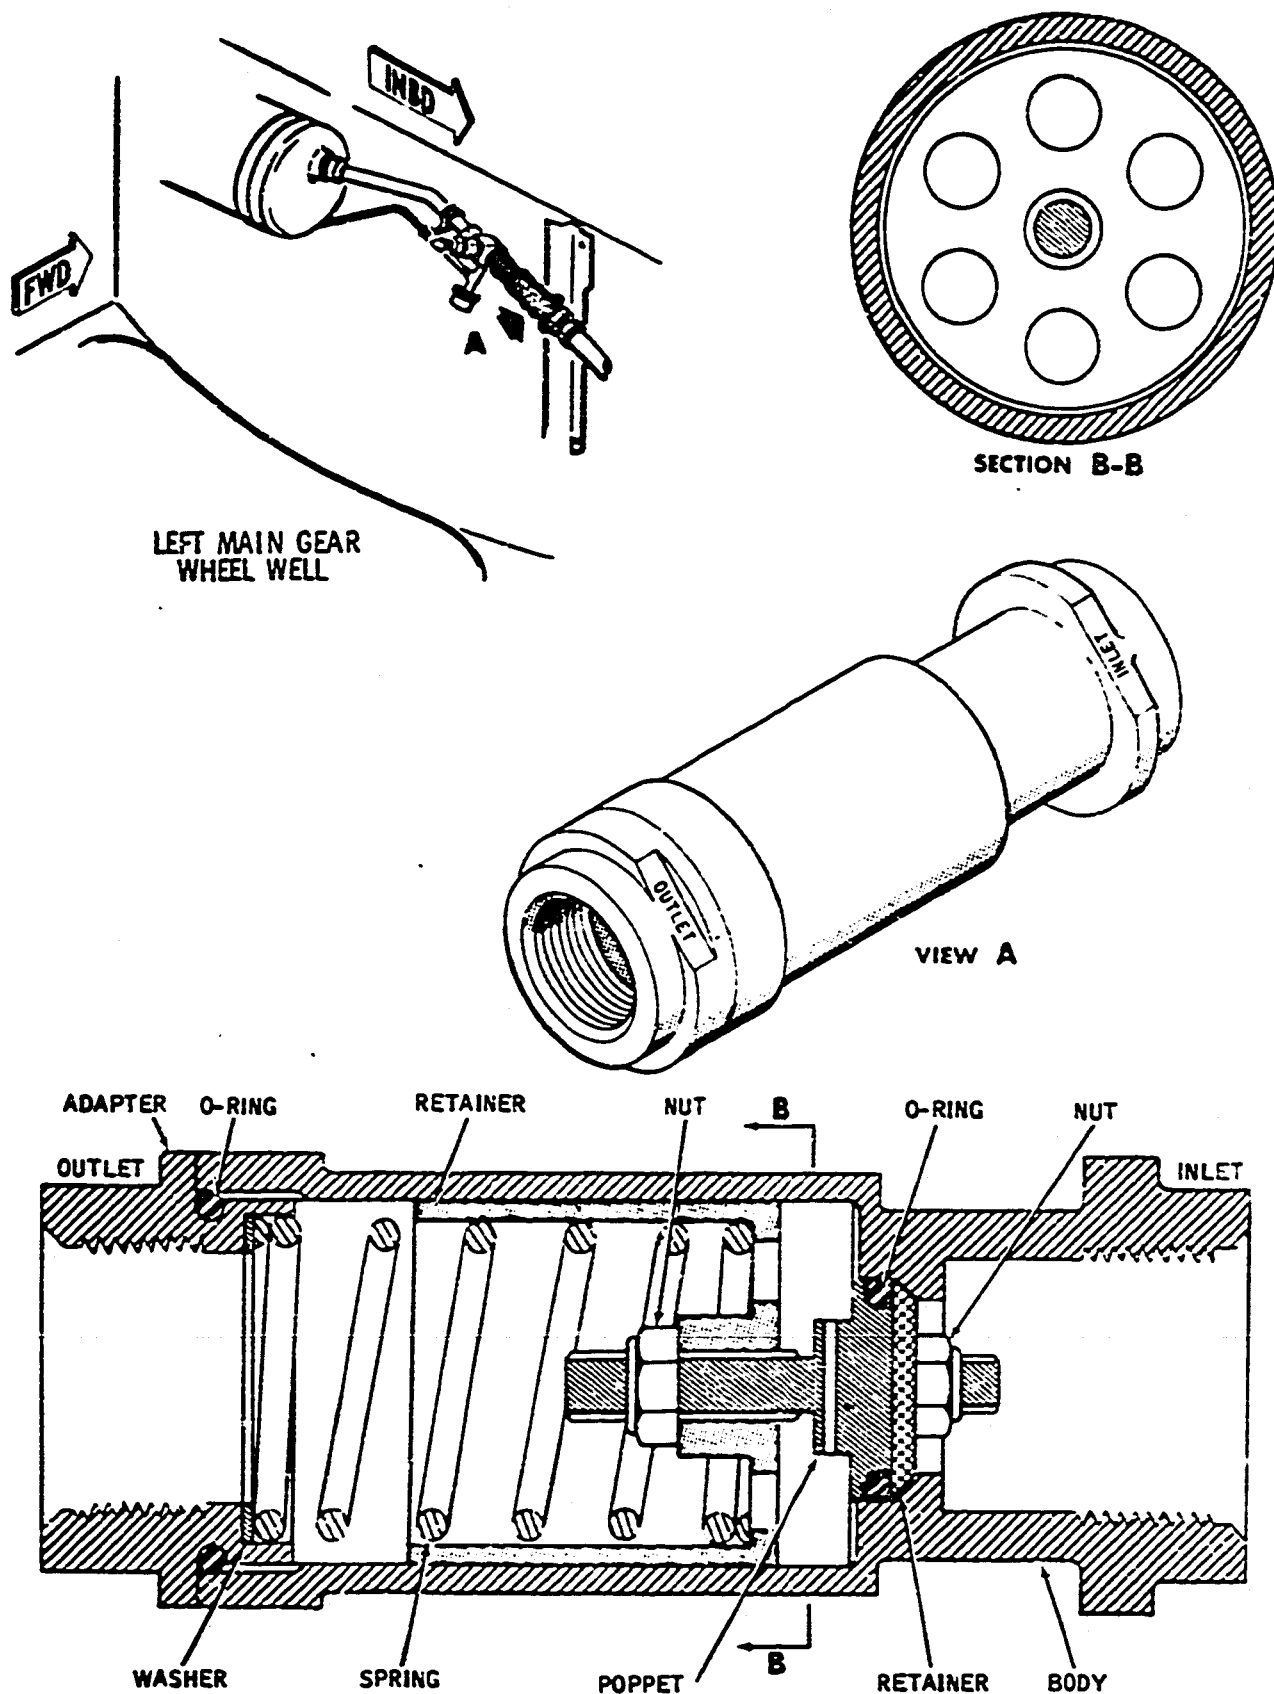

HA2-17

Hydraulic Reservoir Relief Valve  
 Figure 7

29-10-0  
 CODE 9  
 Page 16

Printed in U.S.A.

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

and an outlet port and consists, internally, of an inlet port seat and a spring-loaded poppet.

- (2) The relief valve is installed in the overboard vent line downstream of the hydraulic reservoir air bleed valve. In the event that excess pressure builds up in the reservoir, the poppet will start to relieve at 45 (+5, -0) psi. Full flow of 10 gpm is attained at 80 psi maximum. The poppet reseats at 90 percent of the opening pressure.

F. Hydraulic Reservoir Air Bleed Valve (See Figure 8.)

- (1) The hydraulic reservoir air bleed valve and pressure gage are located on the aft side of the rear spar in the left main gear wheel well, inboard of the hydraulic reservoir air chamber. The bleed valve and gage are installed in the overboard vent line, between the reservoir air chamber and the reservoir relief valve.
- (2) The bleed valve is used to relieve the reservoir air pressure prior to disconnecting lines or components in the hydraulic system. The pressure gage provides a ready indication of the hydraulic reservoir air pressure and is used in conjunction with the bleed valve to indicate the air pressure status.
- (3) The air inflation valve is installed on the same fitting as the bleed valve and pressure gage. The air inflation valve is used to manually charge the reservoir with air or dry nitrogen.


G. Hydraulic Reservoir Vacuum Breaker Check Valve (See Figure 9.)

- (1) The hydraulic reservoir vacuum breaker check valve is installed on the regulator-aspirator mounting bracket, and connects to the tee fitting at the top of the reservoir. The valve is vented to ambient air. The purpose of this valve is to maintain atmospheric pressure in the reservoir, allowing hydraulic fluid to flow to the auxiliary hydraulic pump in the event of a failure of the reservoir pressurization system. The failure, or breakdown, of the pressurization system could cause a fluid starvation at the auxiliary hydraulic pump because of vacuum buildup in the reservoir.

H. Hydraulic Reservoir Air Chamber

- (1) The hydraulic reservoir air chamber is a small, cylindrical tank with a capacity of 700 cubic inches. It has two ports, an inlet port at the bottom of the chamber and an outlet port in one end of the chamber. The inlet port mounting boss is fitted with a drain plug. The air chamber is installed on the aft side of the rear spar in the left main gear wheel well, inboard and above the hydraulic reservoir filler assembly. Access to the air chamber is through the left main gear inboard door.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

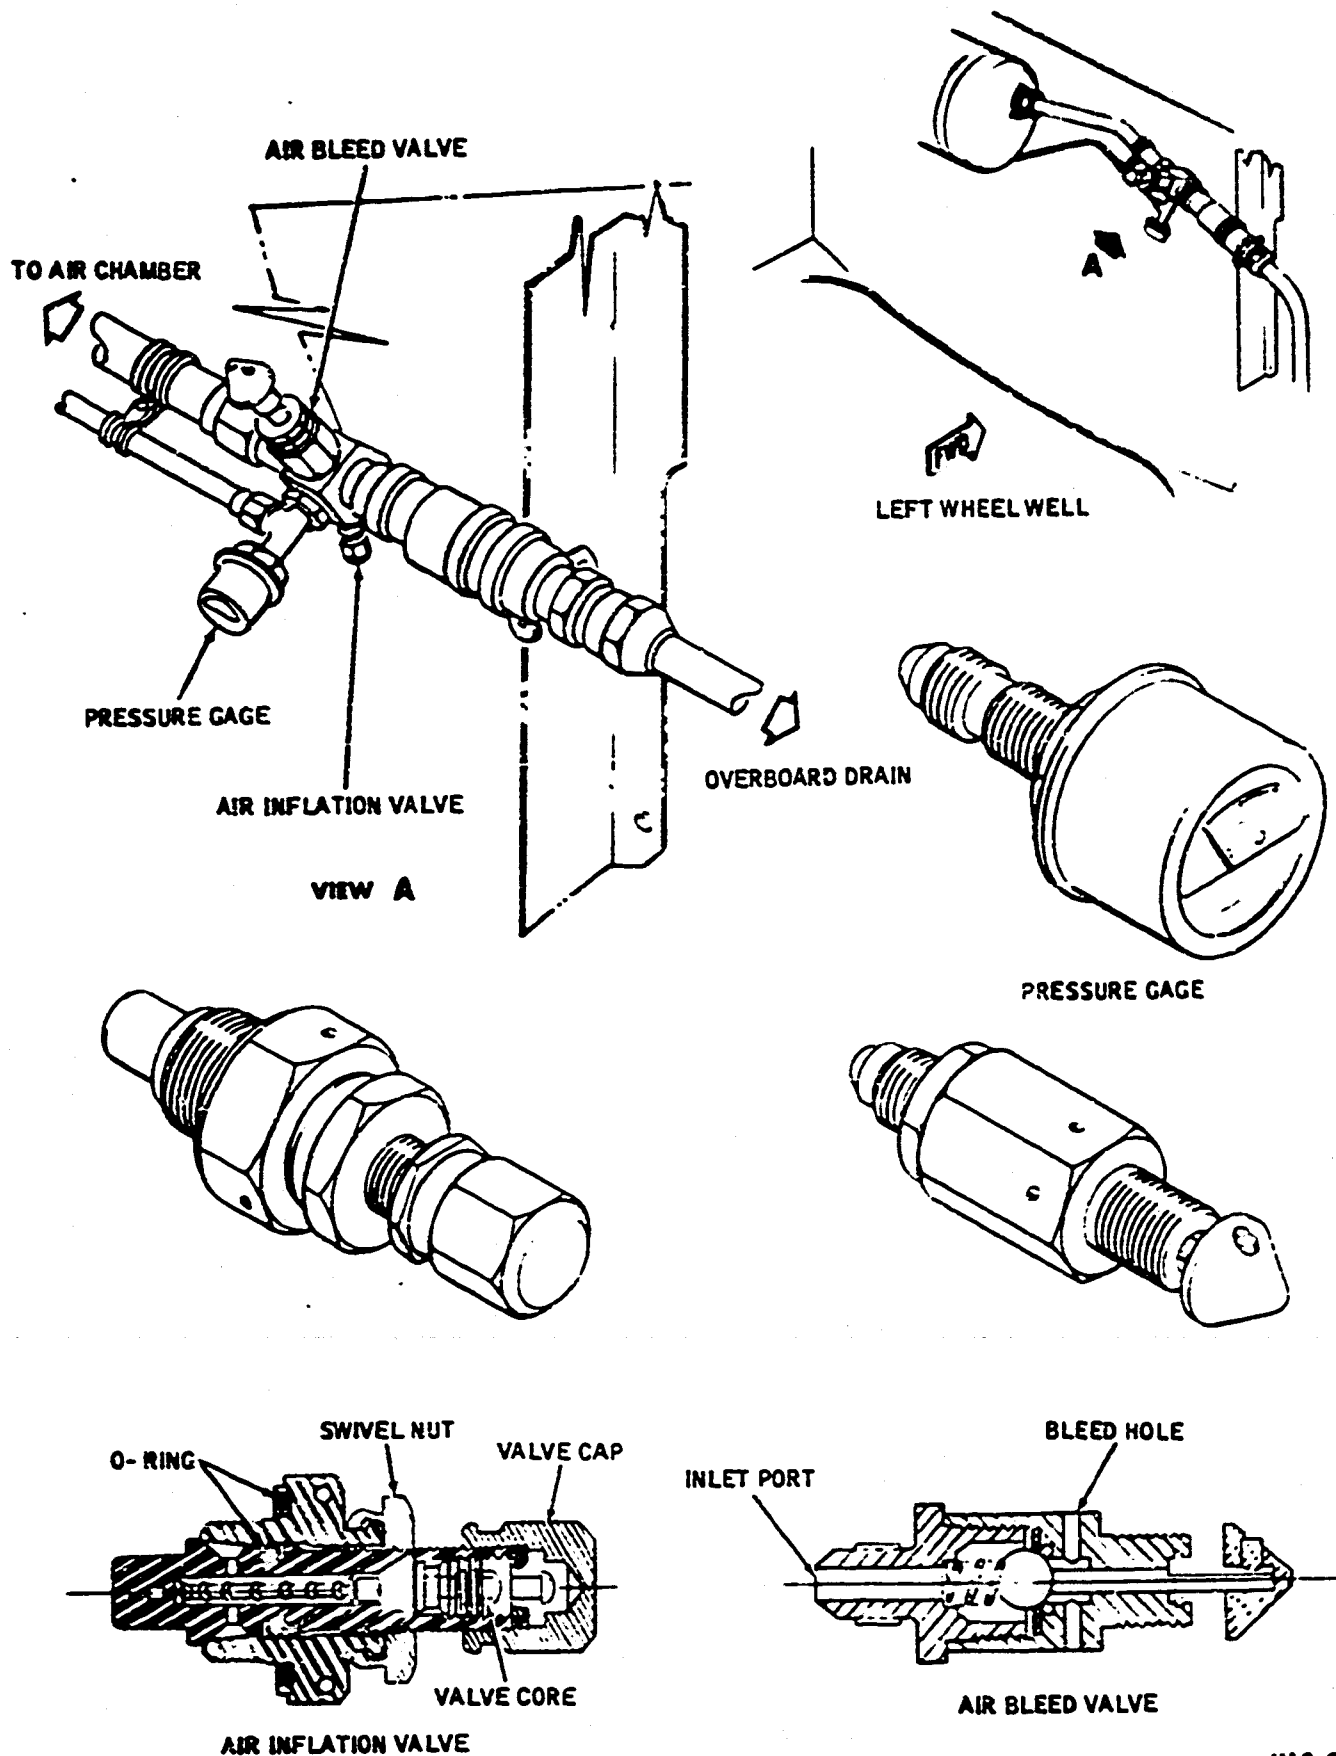

HA2-32

Reservoir Air Bleed Valve, Air Inflation  
 Valve, and Pressure Gage  
 Figure 8

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

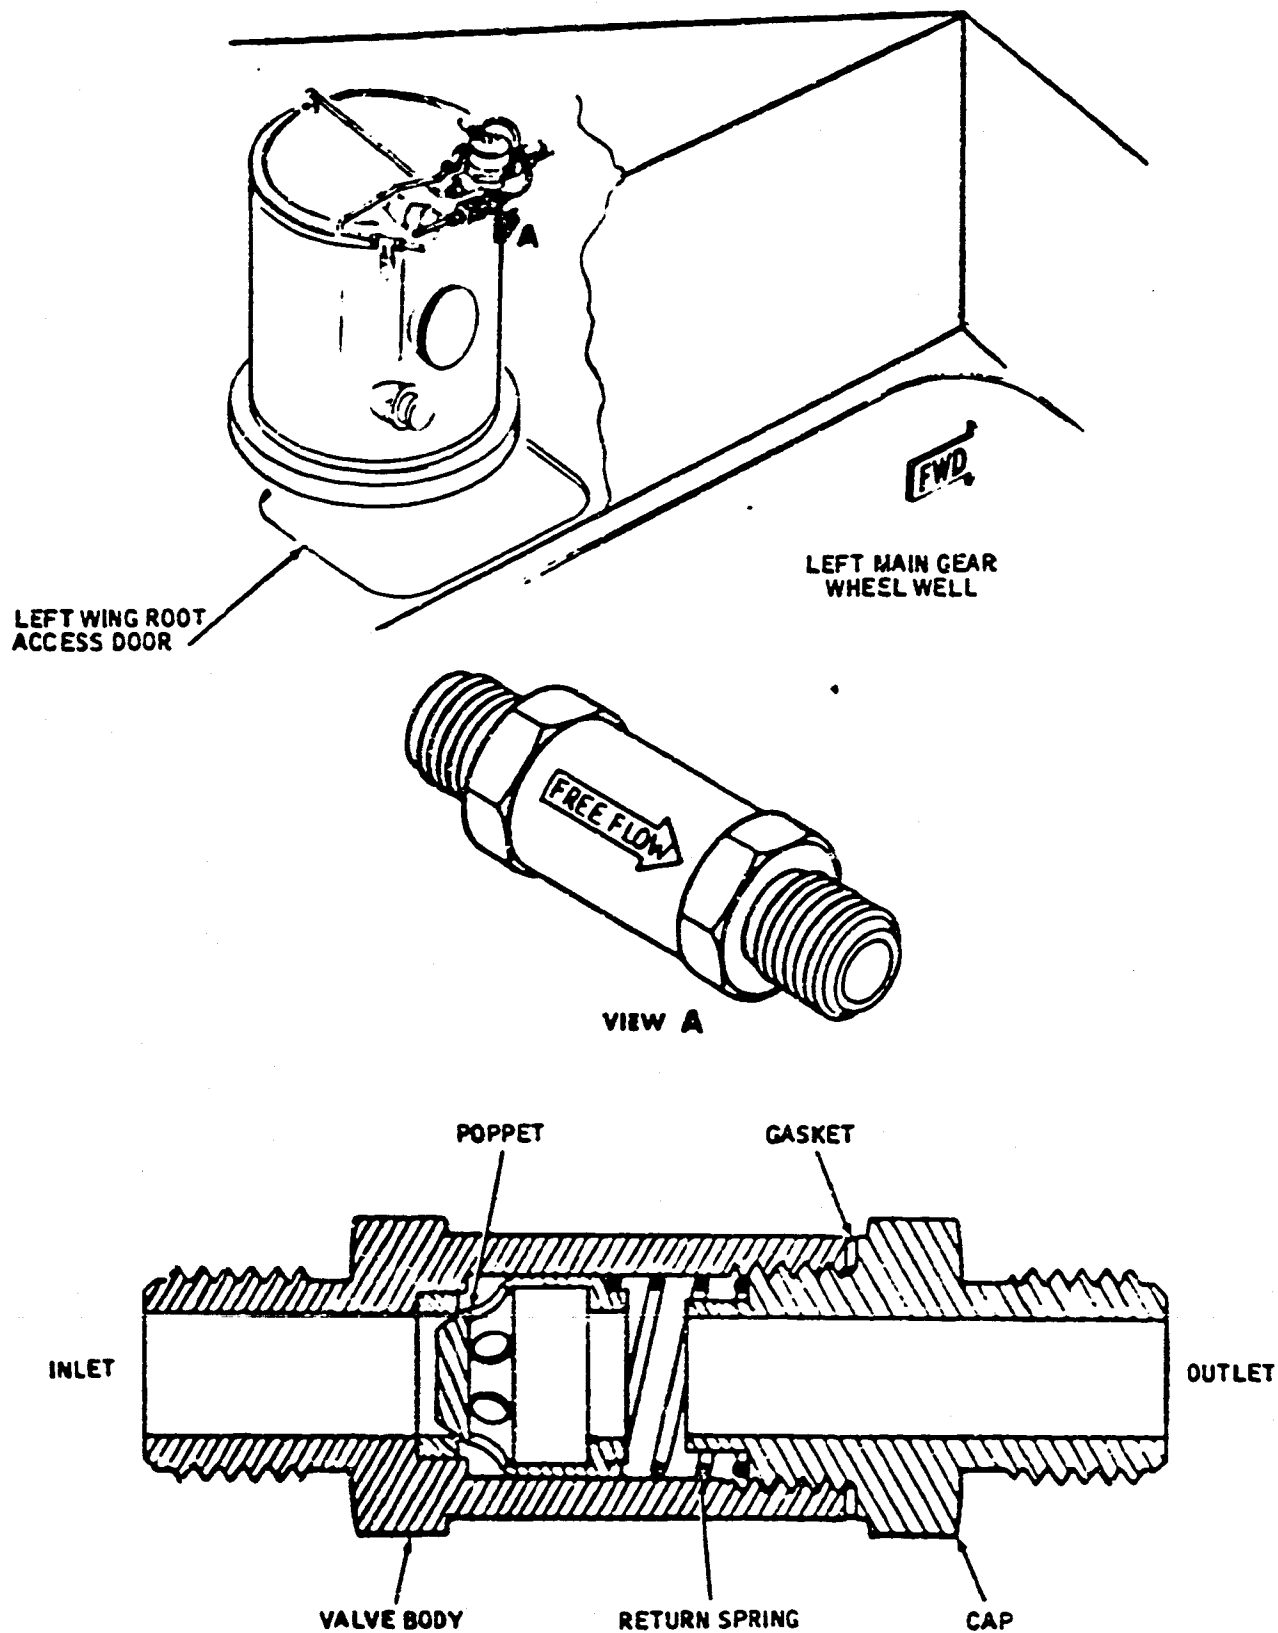

Hydraulic Reservoir Vacuum Breaker Check Valve  
 Figure 9

HA2-33

29-10-0  
 CODE 9  
 Page 19

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The air chamber provides for greater fluid capacity in the hydraulic reservoir by providing air and foam space for the reservoir in a separate container. Air pressure in the chamber is maintained by the regulator-aspirator and the air relief valve. The air pressure in the chamber and reservoir can be relieved, when desired, by the air bleed valve located downstream of the chamber. The air chamber is mounted higher than the reservoir filler assembly, to prevent overfilling of the reservoir from reducing the available air space and to prevent fluid from being vented overboard through the reservoir relief valve.


I. Hydraulic Reservoir Port B Return Check Valve (See Figure 10.)

- (1) The reservoir port B return check valve is installed in port B of the reservoir to prevent reverse flow of hydraulic fluid from the reservoir to the return line. The check valve is located on the reservoir in the left wing root and is accessible through the left wing root access door.
- (2) Externally and internally, the port B check valve is a standard-type check valve with a 1500-psi rating. A nominal pressure of approximately 8 psi unseats the poppet, permitting fluid to flow through the valve. When the reservoir pressure exceeds the return line pressure, the poppet will seat and reverse fluid flow will be prevented.


J. Engine Hydraulic Fire Shutoff Valve (See Figures 11 and 12.)

- (1) The engine hydraulic fire shutoff valve is a gate-type, mechanically controlled valve, installed in the supply line of each engine-driven hydraulic pump. The engine hydraulic fire shutoff valve is actuated from the flight compartment to prevent the flow of hydraulic fluid into the engine section.
- (2) The engine hydraulic fire shutoff valve is mounted on a 2-piece channel bracket which is installed inside the wing leading edge, aft of the firewall of each inboard pylon. Access to the valve is through the access door located on the lower side of the wing leading edge, outboard of either the left or right inboard pylon. Each valve is located approximately 30 inches inboard of the access door.
- (3) Internally, the valve consists of a valve arm, valve arm link, cam plate, and slide blade. The valve arm link attaches to the valve arm and is allowed to swivel through an arc in relation to the valve arm. The link has a stop that will contact the arm when the two have traveled to the valve closed, full overtravel position. In the full open pretravel position, the link contacts the arm stop.
- (4) A roller attached to the end of the link rides in, and extends through, a J-shaped slot in the cam plate. The rotation of the valve arm causes the link roller to follow the cam slot, allowing the arm and link to move through independent arcs.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

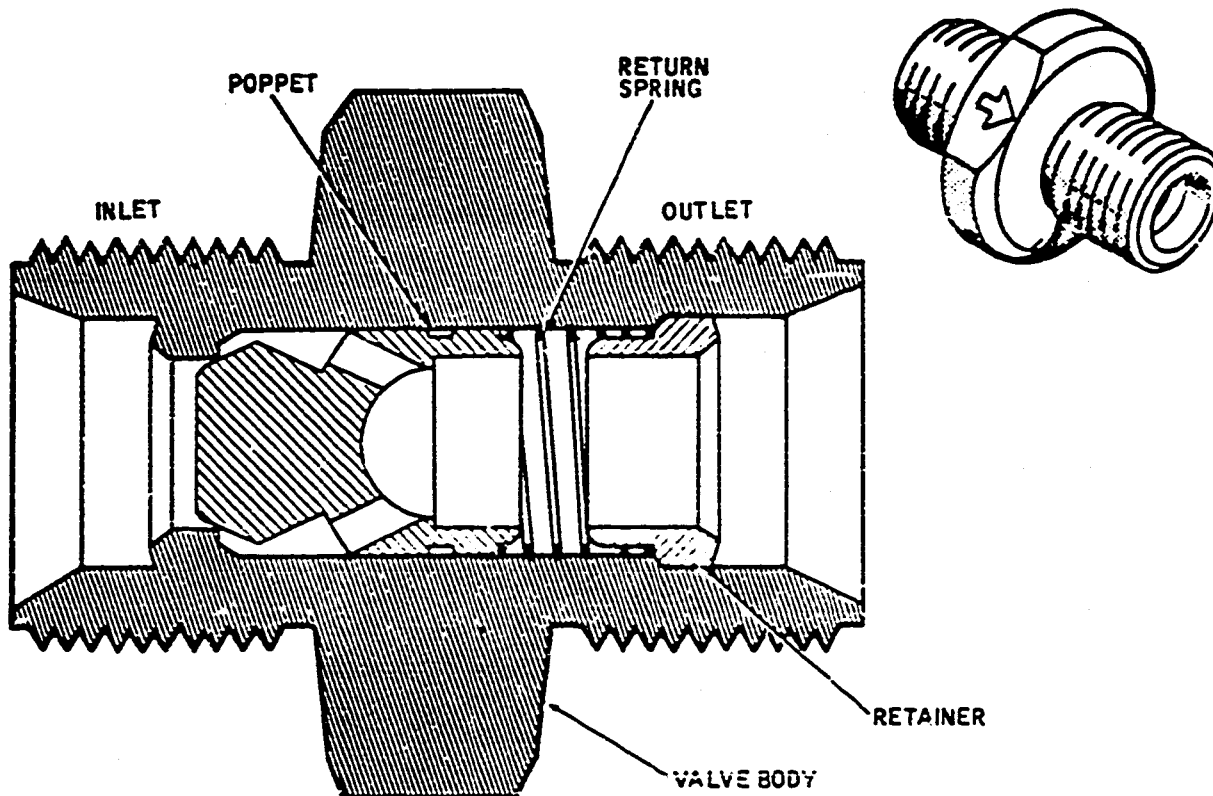

MINIATURE CHECK VALVE

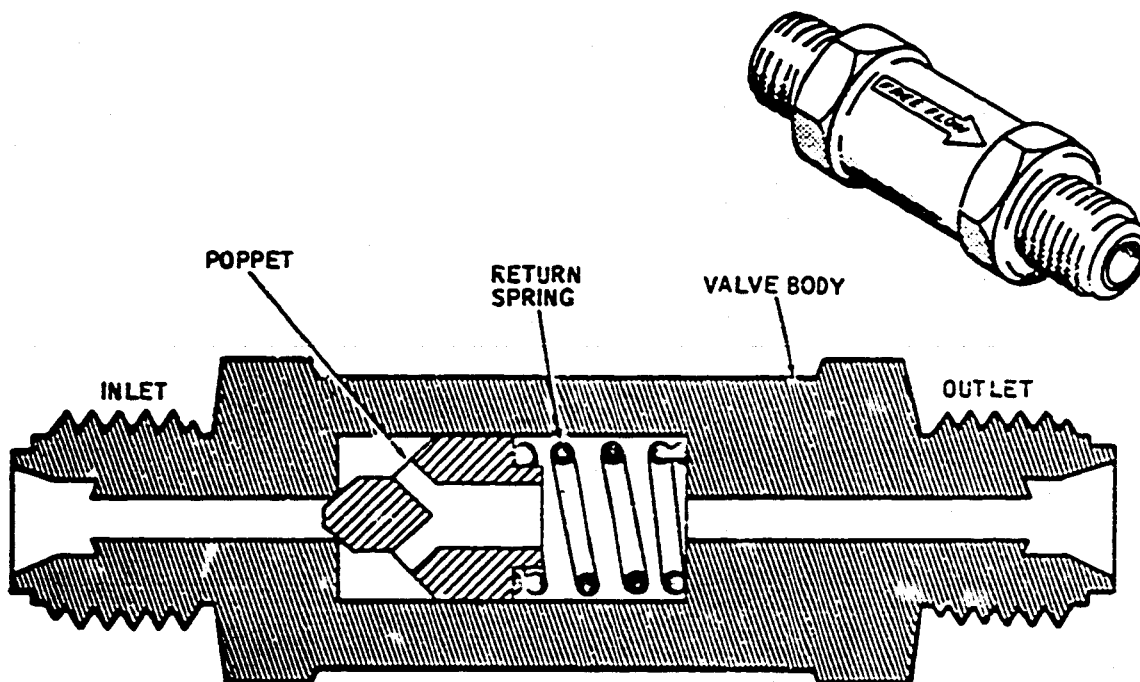

STANDARD CHECK VALVE

HA2-18A

Hydraulic Check Valves -- Typical  
 Figure 10


Oct 1/67

Printed in U.S.A.

29-10-0  
 CODE 9  
 Page 21




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

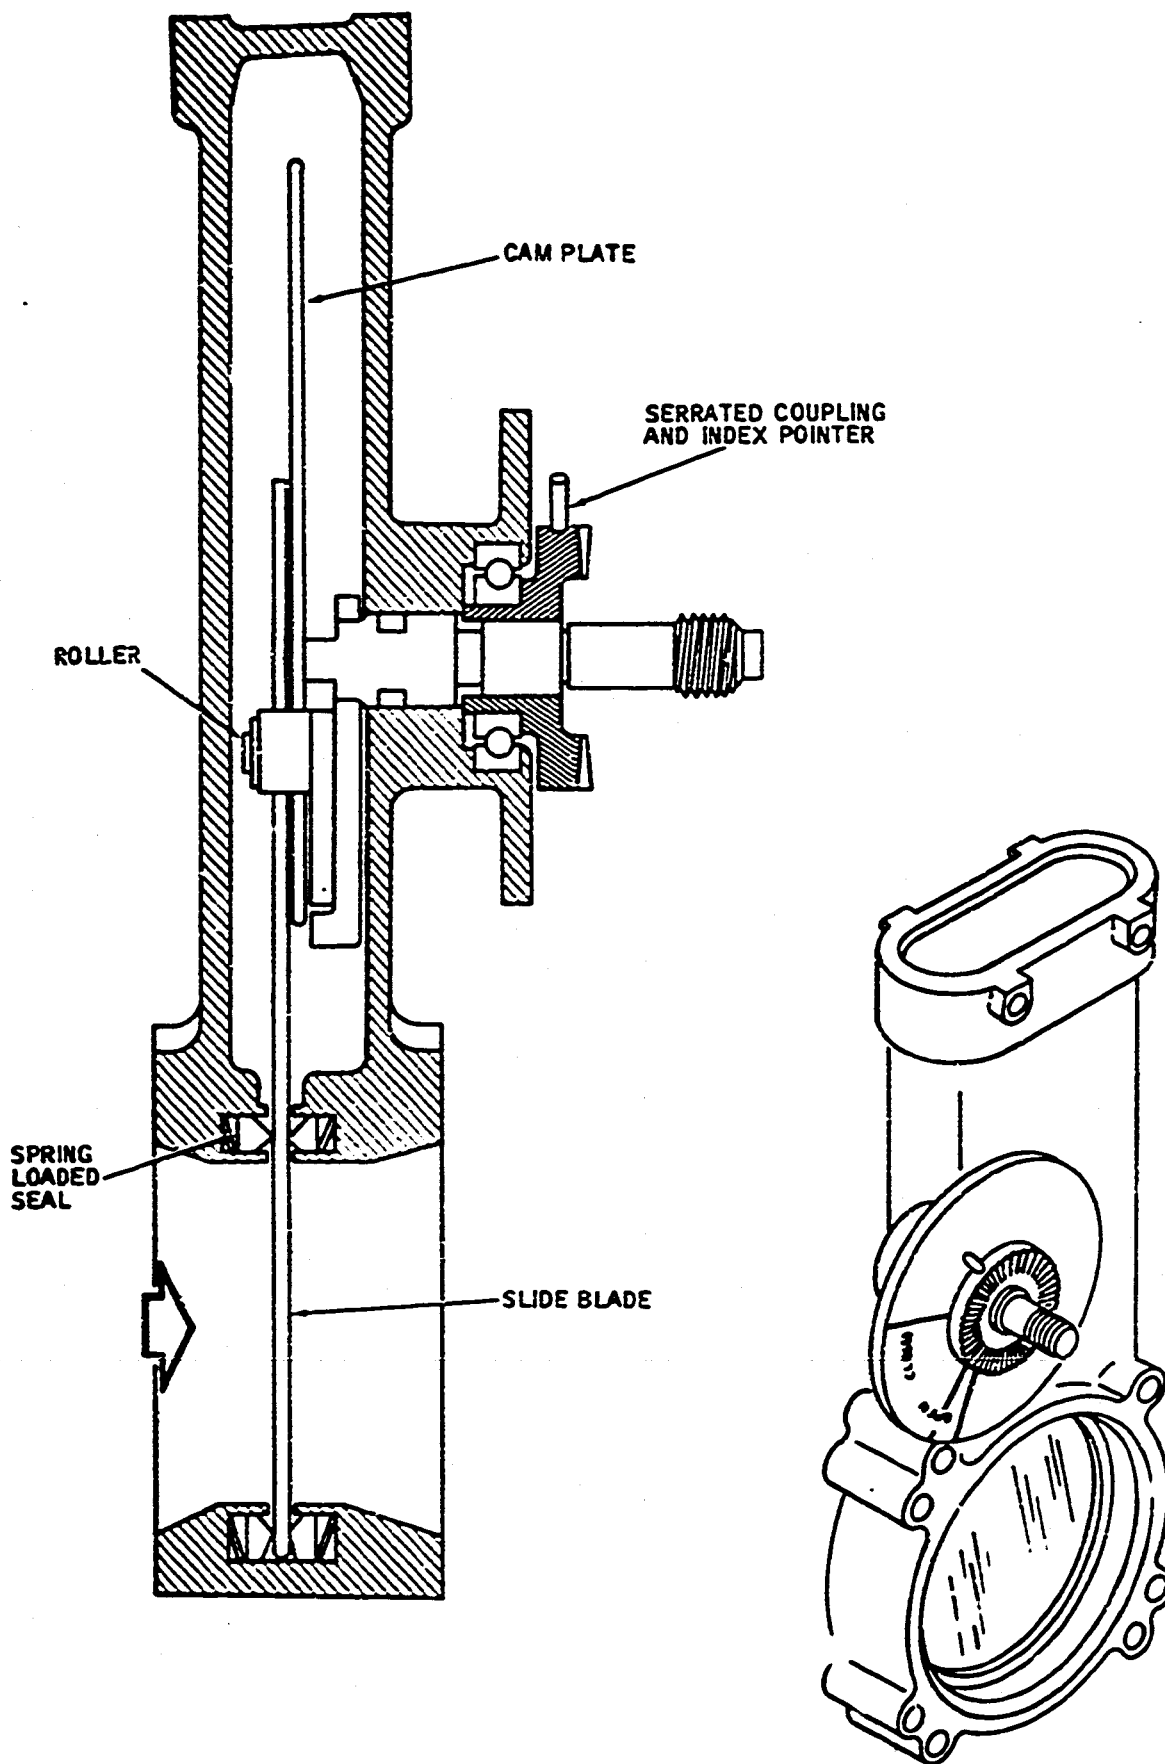

Engine Hydraulic Fire Shutoff  
Valve -- Schematic  
Figure 11

HA2-2209

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

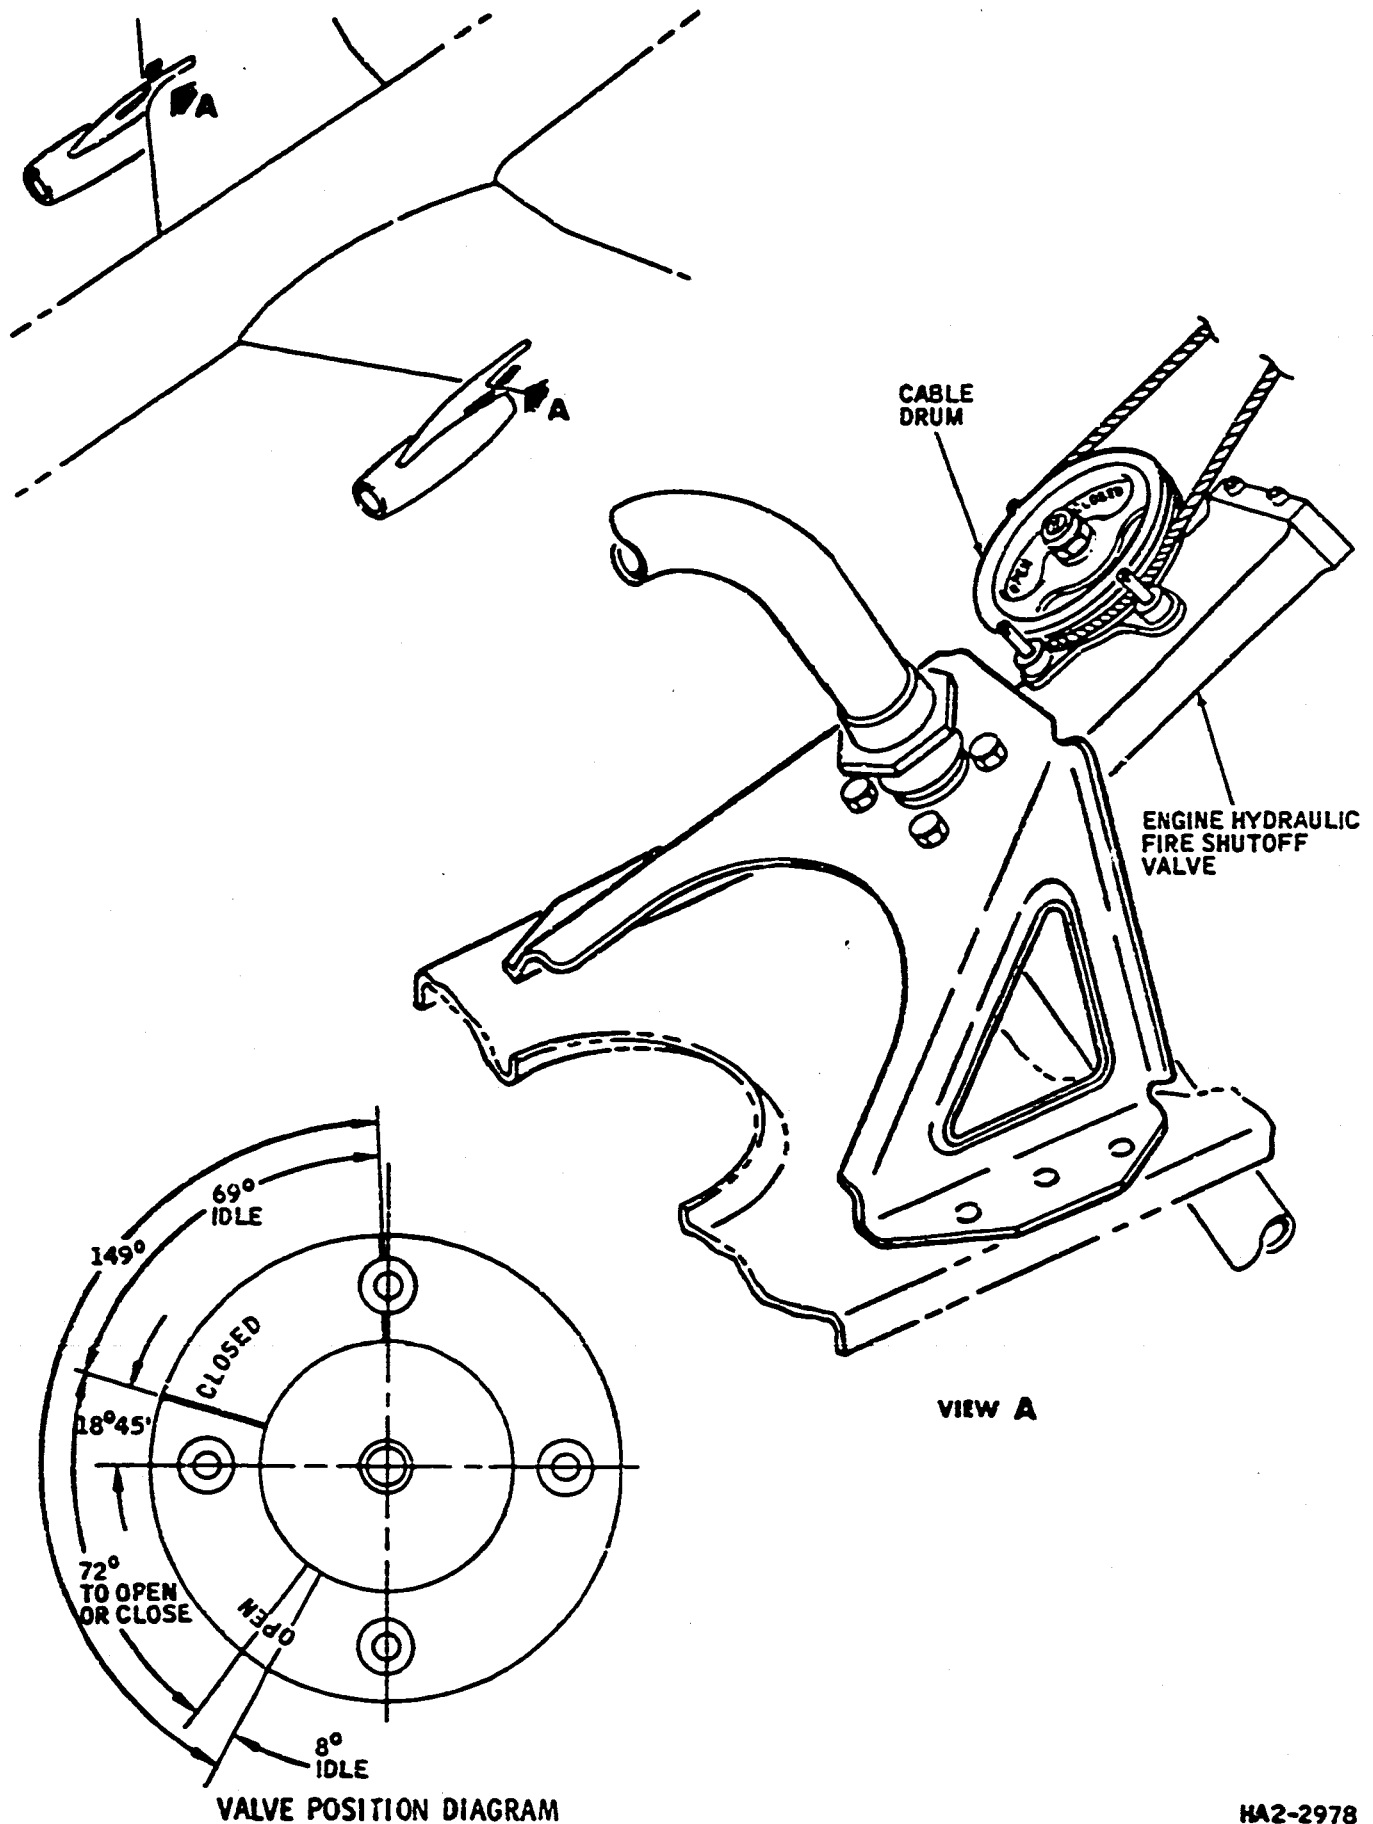

Engine Hydraulic Fire Shutoff Valve  
 Figure 12

HA2-2978

29-10-0  
 CODE 9  
 Page 23

Jun 15/67

Printed in U.S.A.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) The slide blade (gate of the valve) is slotted near the one end and also receives the link roller extending through the cam slot. The slide blade is positioned parallel to the cam plate and is guided by two grooves in the housing. This will allow the blade to open or close through porting of the valve by the action of the arm and link. The cam plate is pinned to the valve shaft, securing it rigidly in two positioning grooves in the housing. A pin-indicator is provided to relate valve position to a reference plate placarded open and closed.
- (6) The engine hydraulic fire shutoff valves are cable actuated by the fire control handles, located on the overhead switch panel in the flight compartment. When the fire control handle for either inboard engine is moved, the cable system rotates the drum which is attached to the corresponding shutoff valve shaft. This action extends the valve blade into the fluid passage to block the flow of fluid. The valve operates from open to close by clockwise rotation of the cable drum. The valve gage will idle during the first 8 degrees of rotation of the cable drum, and then will close in the next 72 degrees. The cable drum will continue to rotate the shaft for an additional 69 degrees after the gate valve is closed, locking it overcenter. Total travel of the cable drum is 149 degrees.


K. Engine-Driven Hydraulic Pump (See Figure 13.)

- (1) A variable-displacement, pressure-compensated, engine-driven hydraulic pump is installed on each inboard engine. The pump incorporates a solenoid bypass feature for reducing the output of the pump. The bypass valves are controlled by two engine hydraulic pump control switches in the flight compartment. The switch for the hydraulic pump on engine No. 2 is placarded left, on and bypass. The switch for the hydraulic pump on engine No. 3 is placarded right, on and bypass. When either of the two engine hydraulic pump control switches is placed in the bypass position, the bypass valve solenoid for that hydraulic pump is energized and the pump pressure decreases to 300 ( $\pm 100$ ) psi. When either switch is in the on position, the control circuit to the corresponding bypass valve is open and the hydraulic pump operates normally in the pressure range of 2850 to 3050 psi. The pump provides a continuous, non-pulsating flow of hydraulic fluid, under pressure, to the hydraulic manifolds for distribution throughout the hydraulic system. Each of the engine-driven pumps is located on the accessory drive pad of the inboard engines. These pumps are accessible through the access doors on the right side of the nacelles and removal of the engine bypass duct.
- (2) Three case drain ports are provided; two are on the yoke assembly housing, and the third is on the casing for the pressure control valve, adjacent to the inlet port fitting. The case drain port on top of the yoke assembly housing is used as the case drain connection to assure that the pump housing is full of fluid at all times. This drain connection is ported back to the low-pressure return port of the reservoir. The inlet port fitting is on top of the pump housing and the outlet port fitting is opposite to it on the bottom of the housing.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

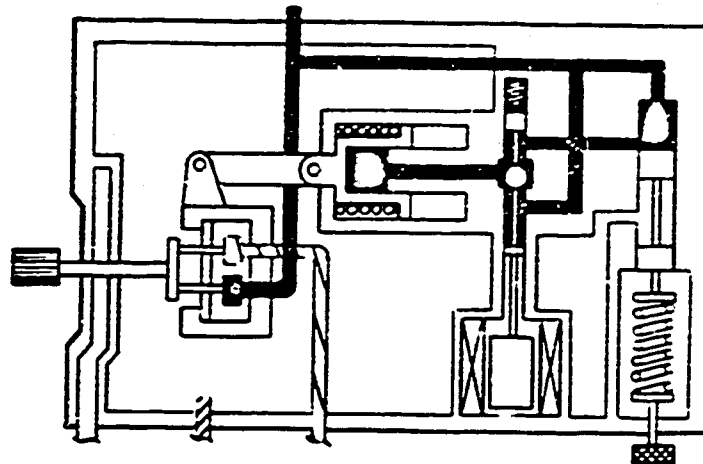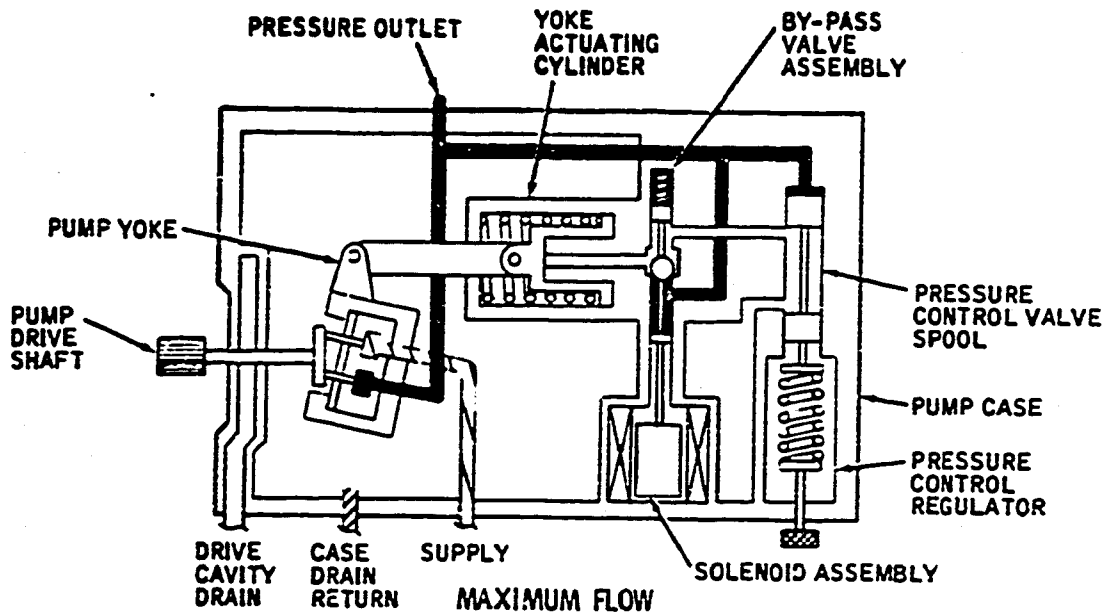

COMPENSATOR AT CUTOFF  
 (MINIMUM FLOW, MAXIMUM PRESSURE)

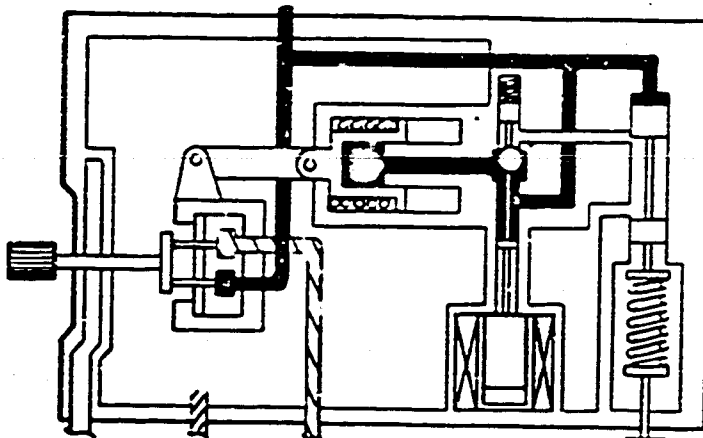

BYPASS SOLENOID ENERGIZED  
 (300 PSI PRESSURE)

- PRESSURE
- CASE DRAIN
- SUPPLY
- DRIVE CAVITY DRAIN

HA2-837

Engine-Driven Hydraulic Pump Pressure-  
 Flow -- Schematic  
 Figure 13

29-10-0  
 CODE 9  
 Page 25

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The yoke control piston casing is an integral part of the pump case. Four self-locking nuts are used to hold the piston casing end-plate in position. The bypass valve assembly, consisting of the valve body and a solenoid, is mounted externally on the pump case, under the yoke control piston casing. This solenoid valve is provided with an electrical connector. A pressure control regulator is installed on the bypass valve body by means of four bolts. This regulator is cylindrical and is provided with an external adjustment screw. A lock screw is used to retain the adjusting screw after the adjustment has been made.
- (4) Hydraulic fluid enters the pump through an inlet port. Passages in the yoke carry the fluid to the valve plate, which ports the fluid to the cylinder block. The nine pistons in the cylinder block are actuated by the rotating driven shaft, thereby pressurizing the fluid. From the cylinder block, the fluid is routed to the outlet port of the yoke and then to the pump pressure lines. The pressure control regulator is actuated by pump output pressure that is bled to the regulator. The regulator meters the pressure to the yoke control piston, which positions the yoke.
- (5) The maximum pump pressure is determined by the adjustment of the pressure control regulator. The pressure control regulator allows maximum output flow (22.5 gpm at 3500 rpm) up to 2850 psi system pressure. When this pressure is reached, the yoke assembly starts to move towards the zero flow position.
- (6) Pressure continues to rise until the displacement is reduced from maximum flow to zero flow and 3000 psi is reached. The pump pressure stabilizes in accordance with system demand.


L. Engine-Driven Hydraulic Pump Check Valves (See Figure 10.)

- (1) Two check valves, rated at 3000 psi, are installed in the lines from each engine-driven hydraulic pump. One check valve is installed in the pressure line and the other is in the case drain line. The check valves in the pump pressure lines prevent reverse flow of hydraulic fluid through the pump, when the pump is inoperative or when external hydraulic pressure is supplied to the system. Access to the valves can be gained through an access door in the forward right apron of each inboard pylon. The valves are mounted on the exterior wall of the inlet box by means of the bulkhead fittings and retaining nuts.
- (2) Normal operating pressure will unseat the poppet, and fluid will flow through the valve. When pressure downstream of the valve exceeds pressure from the pump, the pressure, with the aid of the return spring, will seat the poppet. This prevents reverse flow of hydraulic fluid through the pumps.


M. Engine-Driven Hydraulic Pump Case Drain Filter (See Figure 14.)

- (1) A line-type, micron filter, for use in a low-pressure hydraulic system, is installed in the engine-driven hydraulic pump case drain


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

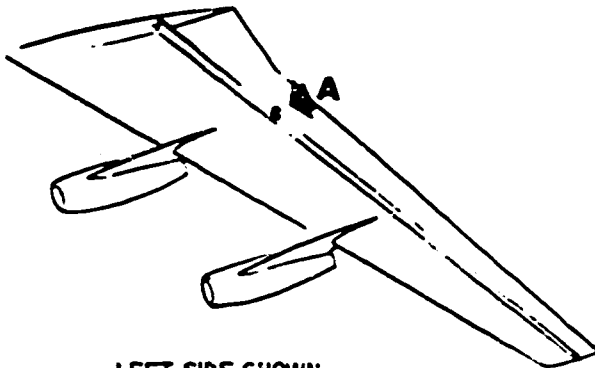

LEFT SIDE SHOWN  
 RIGHT SIDE OPPOSITE

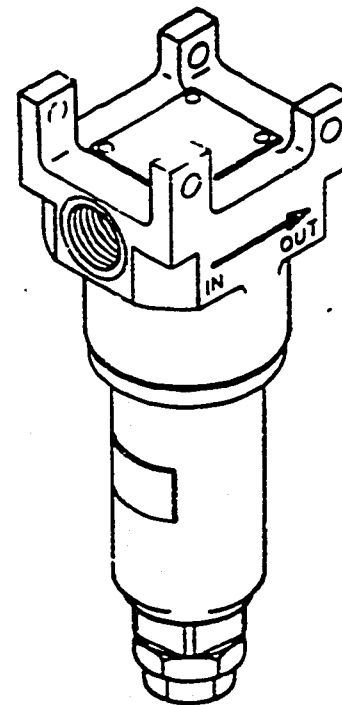

VIEW A

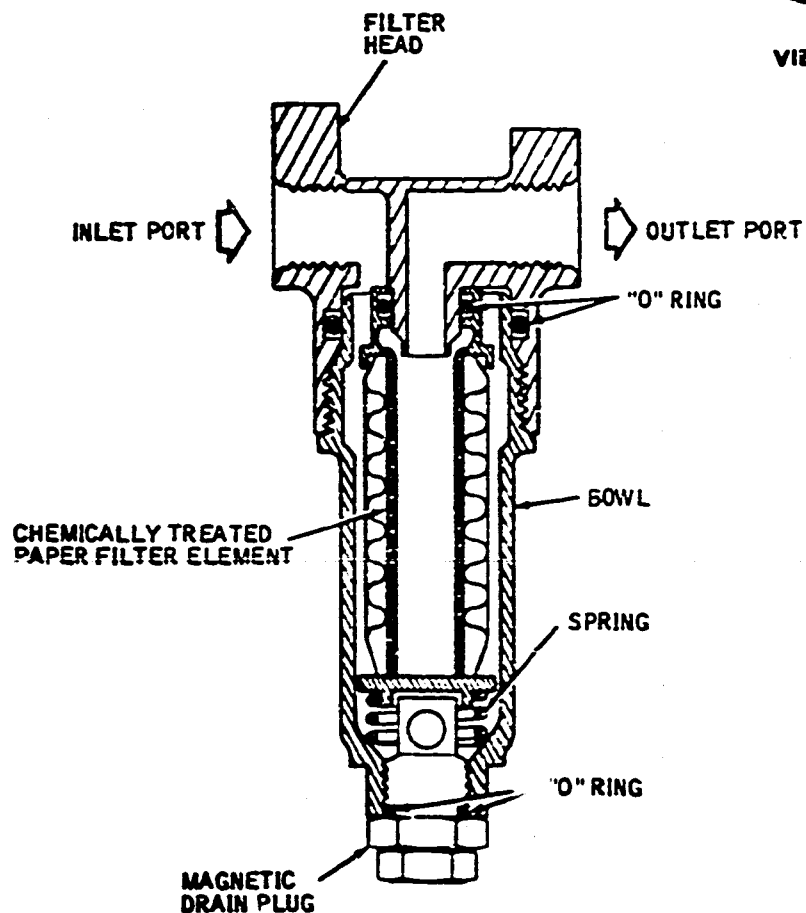

Engine Driven Hydraulic Pump Case Drain  
 Filter -- Cutaway View  
 Figure 14

HA2-31

29-10-0  
 CODE 9  
 Page 27

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL




return line between the pump flow check valve and the hydraulic system reservoir. The case drain filter is installed on the aft surface of the rear spar opposite the leading edge of the inboard flap assembly. One filter is used for each engine-driven pump. Access is gained to the filter by lowering the flaps. A second check valve is installed adjacent to the filter in the downstream side of the case drain return line.

- (2) Externally, the filter is approximately 5 inches high and 2 inches wide, with ports marked inlet and outlet. The bowl is cylindrical in shape, with hex-shaped wrench flats at the lower end. A self-sealing, magnetic drain plug is installed in the bottom end of the filter bowl. The filter element is made of chemically treated paper.

N. Dual Filter and Relief Valve (See Figure 15.)

- (1) The hydraulic power system dual filter and relief valve consists of two filters and two relief valves installed in the same body. The unit filters the hydraulic fluid from the two engine-driven hydraulic pumps, and the pressure relief valves assure that excessive pressures do not build up in the pressure line from the pumps. The unit is located in the left main gear wheel well on the lower portion of the rear spar, approximately 1 foot outboard of the centerline shear web.
- (2) The unit consists of a casting with a flange-mounted pressure inlet port on each end. Two pressure outlets are located on the top of the casting. One outlet, centrally located, is the main pressure outlet to the system selector valve. The other, located to the left of the selector valve port, is the pressure outlet to the air pressure regulator-aspirator. The return outlet port for the relief valve portion of the unit is located on the center of the aft face of the body, canted upward. The nose gear return line is connected to a check valve installed in a return line port, located between the two filter bowls.
- (3) The pressure relief valves are located behind the pressure inlet ports and are connected to the return outlet port of the unit. The inlet from the nose gear return line is routed through the casting to the return outlet port.
- (4) If either of the filter elements becomes clogged, pressure above 3300 psi at the inlet port will unseat the poppet. Pressure above 3500 psi will allow full flow of 22.5 gpm to flow to the return port of the unit and back to the reservoir. The relief valves will reseal at approximately 3000 psi.
- (5) A check valve is installed in the system selector valve port to prevent reverse flow of pressure through the filter during auxiliary hydraulic pump operation.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

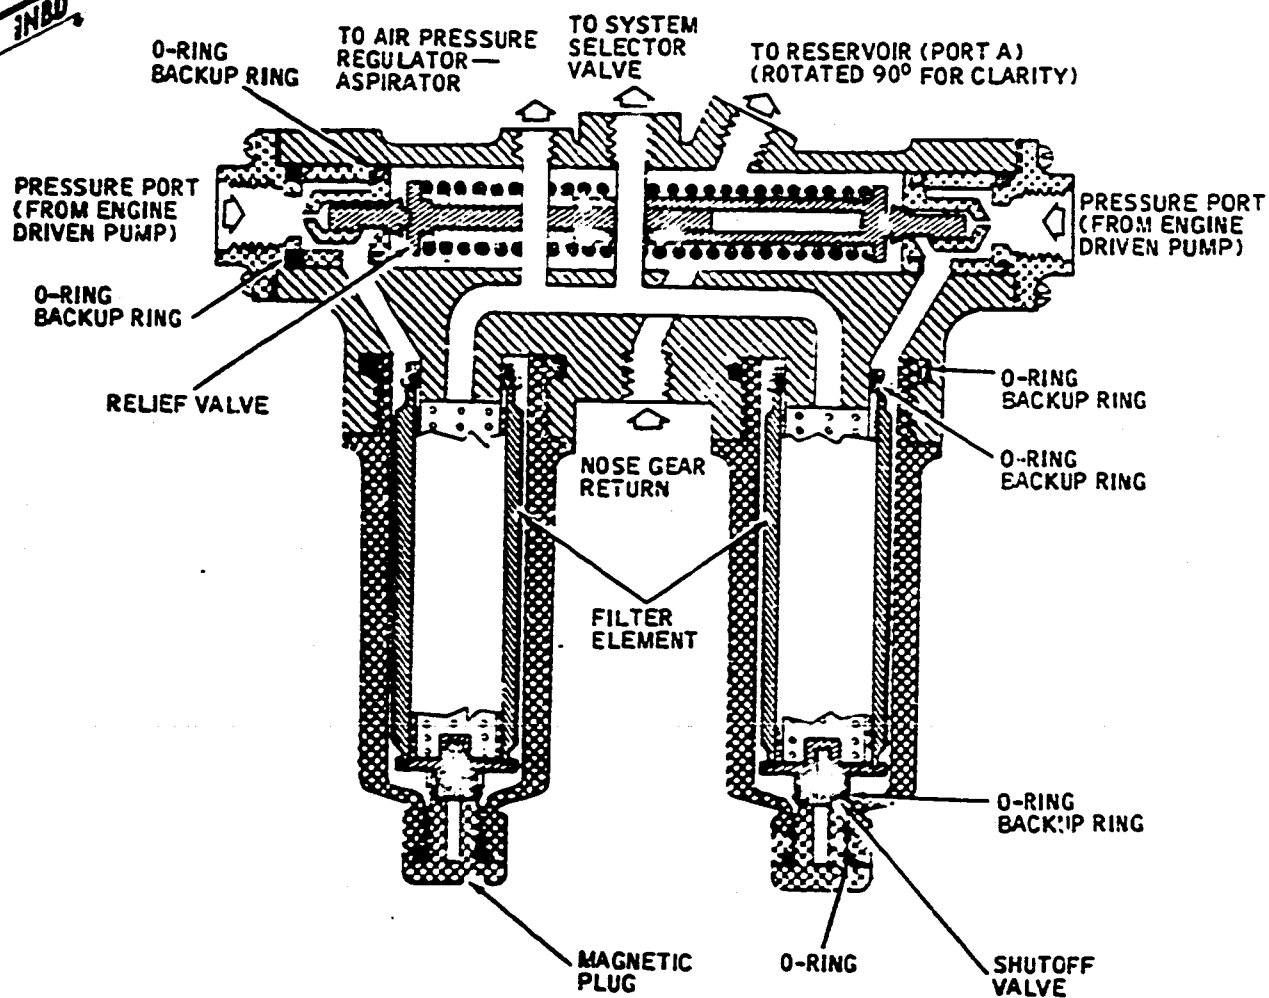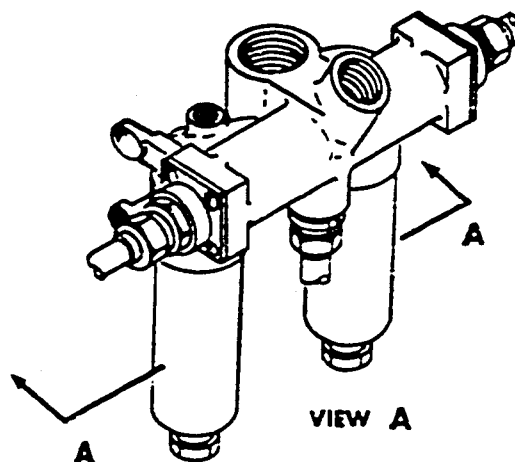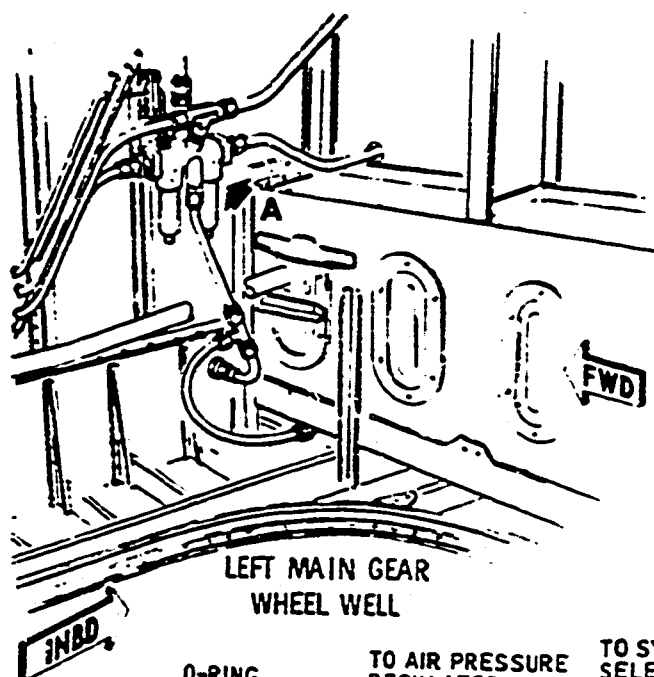

SECTION A-A

Dual-Filter and Relief Valve -- Cutaway Valve  
 Figure 15

HA2-20.

29-10-0  
 CODE 9  
 Page 29

Jun 15/67

Printed in U.S.A.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


0. System Selector Valve (See Figures 16 and 17.)

- (1) The system selector valve is a 3-position valve which permits directional control of fluid under pressure. The valve is installed on the left hydraulic power manifold and is accessible through the left main gear inboard door.
- (2) The selector valve pressure-to-system port and the return port are directly ported to the manifold. The engine pump pressure enters the valve through a port on the large end of the valve, and the auxiliary pump inlet and alternate ports are located at the top, toward the aft end of the valve. The valve control crank is attached to a push-pull rod and a cable sector.
- (3) Operation of the system selector valve is controlled by a lever located on the right side of the system engineer's control pedestal. When the control lever is moved to the selected position, the cable system, through the sector and crank, operates the valve positioning lever to drive the slide spool assembly to the selected position. When the control lever is placed in the general system (normal) position, the selector valve is actuated, causing hydraulic fluid to enter the valve through the system pressure port. The fluid is then directed into the manifold through the pressure-to-system port. In the general system (normal) position, fluid from the auxiliary pressure port is also routed to the pressure-to-system port. In the bypass/general system position, the selector valve ports engine pump pressure into the manifold through the return port. In this position, the auxiliary pump pressure is ported to the general system. In the general system/flaps only position, pump pressure is routed through the alternate port, at the top of the valve, for alternate operation of the flaps. Internal leakage provides lubrication for the moving parts of the valve.

P. Left Hydraulic Power Manifold (See Figure 18.)

- (1) The left hydraulic power manifold distributes fluid pressure from the hydraulic pump (any one of the three pumps), through control valves to the various airplane hydraulic subsystems. The left power manifold is located overhead in the left wheel well. Access to the left manifold is through the left main gear inboard door.
- (2) One valve-mounting pad is provided on the top of the manifold for the system selector valve. Four ports are provided on the manifold for connection of hydraulic pressure and return lines. Three of these ports are pressure outlet ports; one, located on the aft face of the manifold and one located on the bottom of the manifold port fluid to the flight controls. The third pressure outlet port, located on the bottom of the manifold, ports fluid directly to the priority valve, which in turn, ports fluid to the nose gear and to the right power manifold. The fourth, a return port, located immediately forward of the pressure line port on the bottom of the manifold, is connected by a line to a return port of the reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

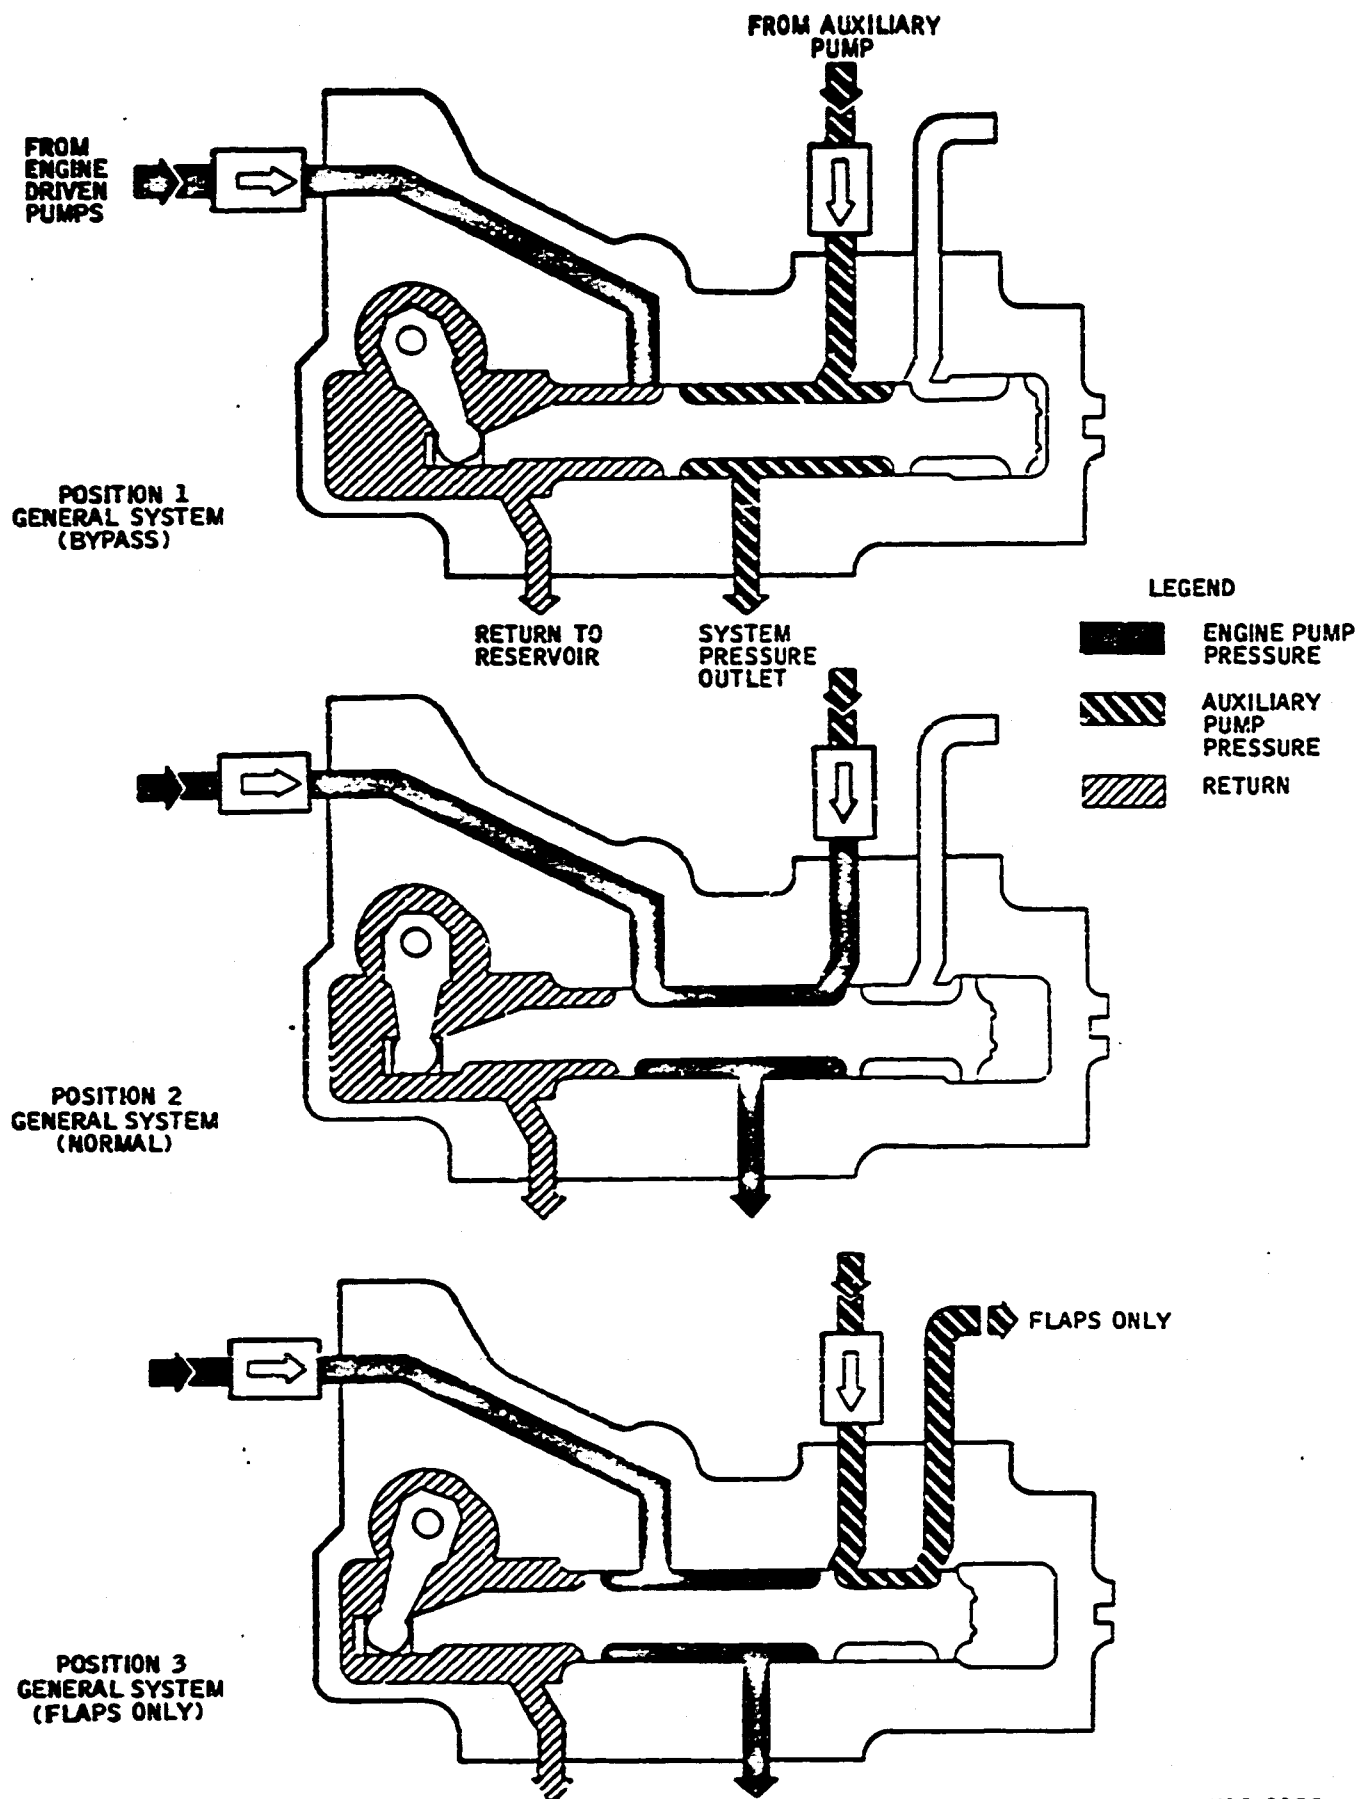

HA2-2155


System Selector Valve -- Schematic  
 Figure 16

Jun 15/67

Printed in U.S.A

29-10-0  
 CODE 9  
 Page 31



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

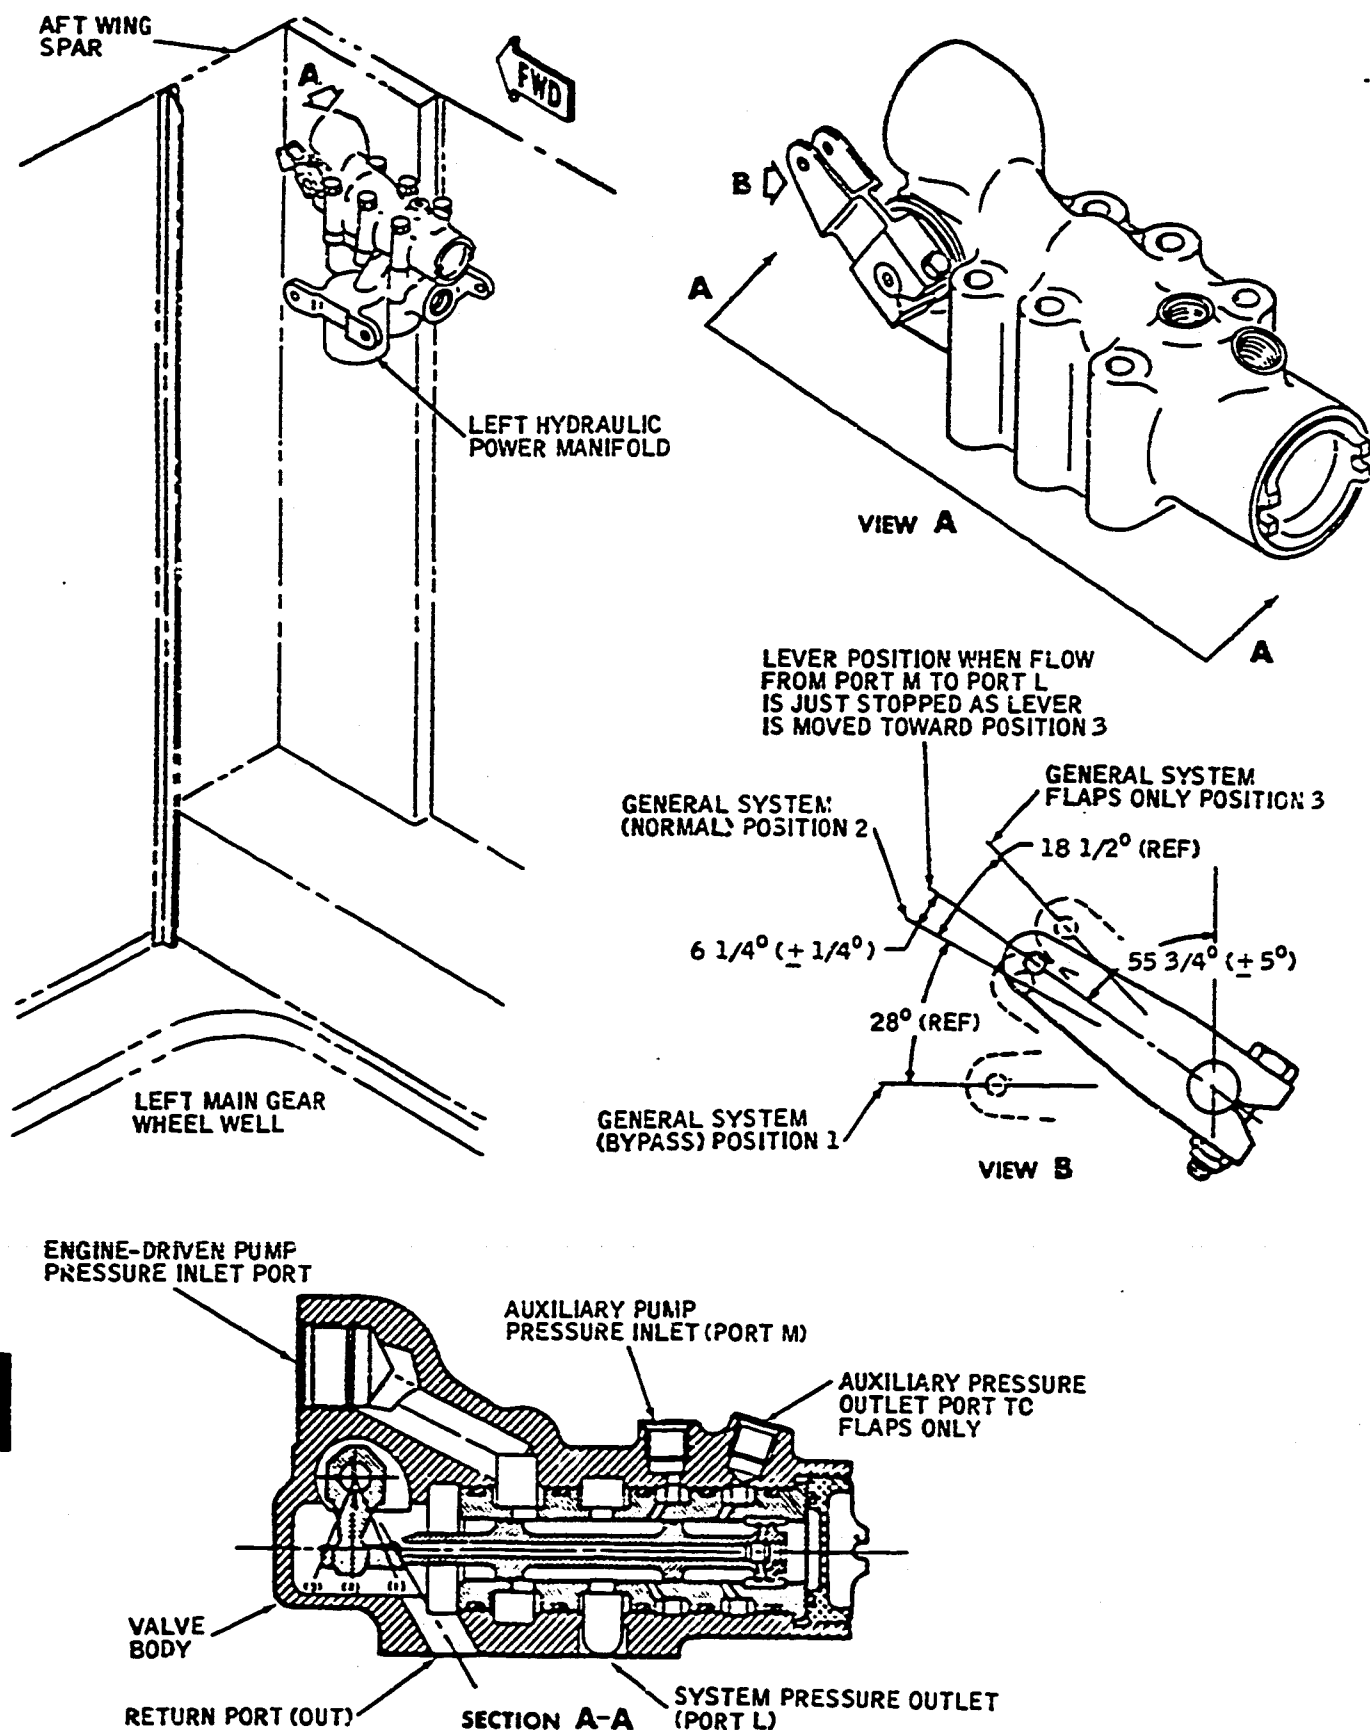

HA2-2943A

System Selector Valve -- Cutaway View  
 Figure 17

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

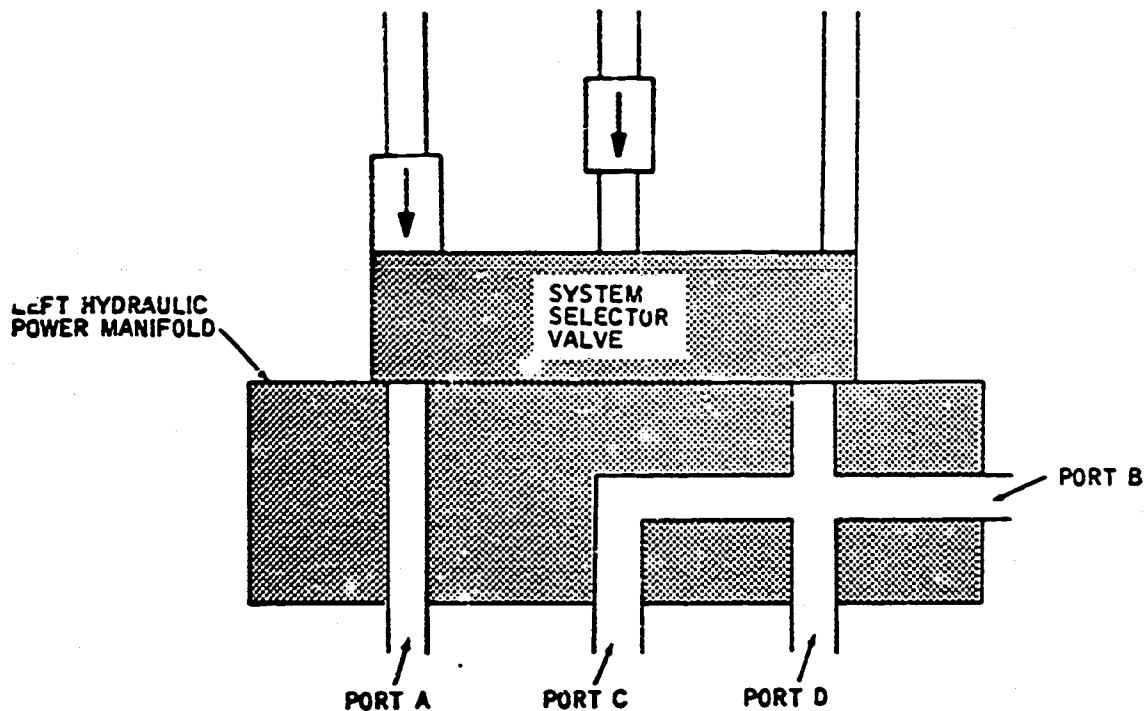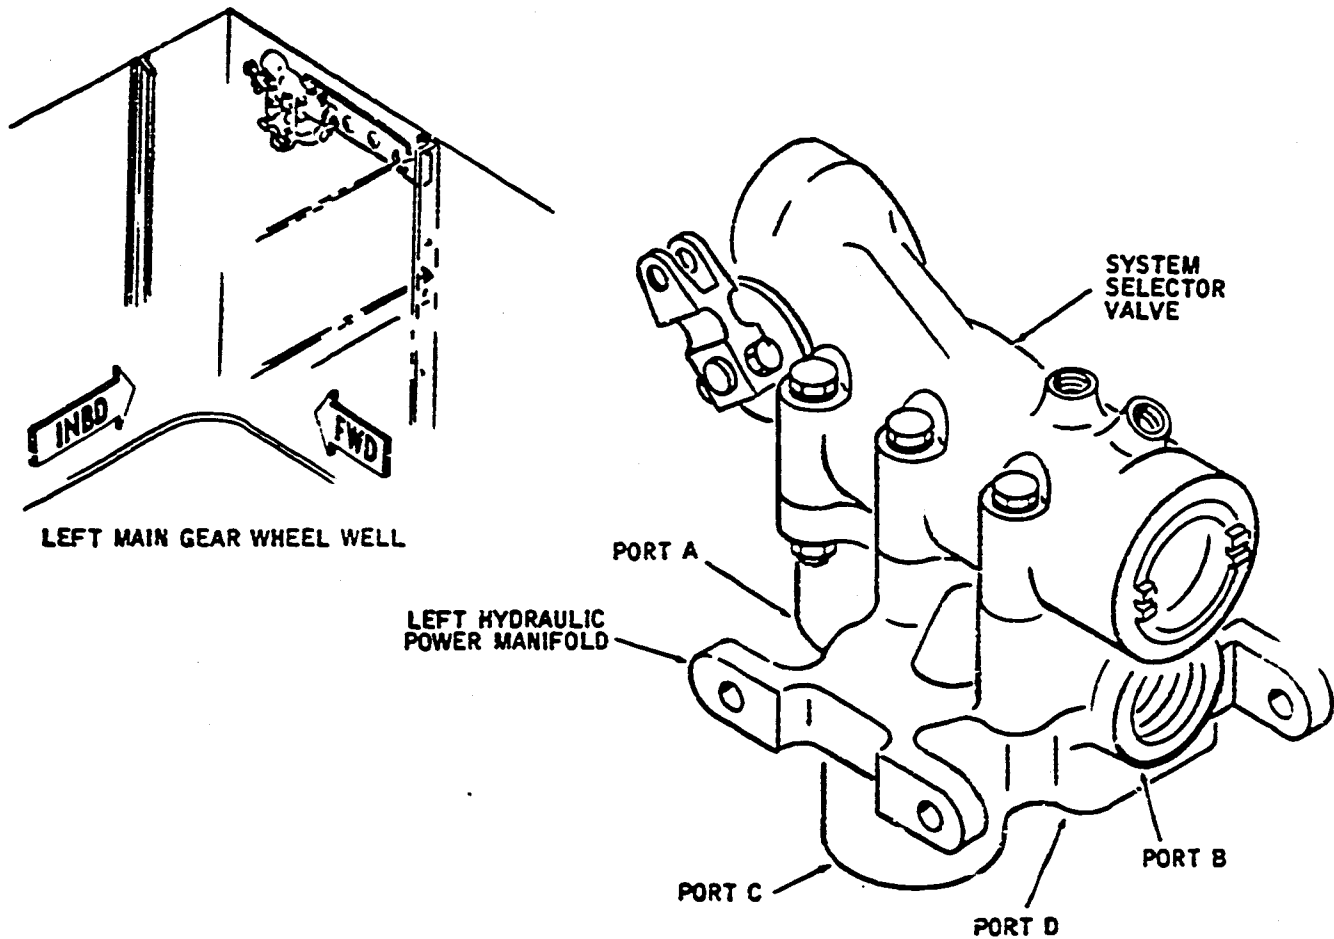

Left Hydraulic Power Manifold -- Schematic  
 Figure 18

Jun 15/67

Printed in U.S.A.

HA2-855

29-10-0  
 CODE 9  
 Page 33

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Q. Right Hydraulic Power Manifold (See Figure 19.)


- (1) The right hydraulic power manifold distributes fluid pressure from the hydraulic pumps (engine-driven or auxiliary, or any combination of these three pumps), through the control valves to the various hydraulic sub-systems. The right hydraulic power manifold is located overhead in the right wheel well. The manifold is held in place with braces and is accessible through the right main gear inboard door.
- (2) The manifold contains passages for pressure and return fluid distribution, four check valves, ports for pressure and return lines, and mounting pads for the various control valves.
- (3) The right manifold receives fluid pressure from the left manifold. Pressure is ported through check valves to the wing flap control valve, to the slot control valve, to the main gear control valve, to the brake control valve, to the brake pressure transmitter, and to the brake accumulators.
- (4) Auxiliary hydraulic pressure is ported from the alternate port of the system selector control valve into port K in the right manifold. Port K is located inboard of the spoiler control valve. From port K, auxiliary hydraulic pressure is ported through a check valve to the downstream side of the wing flap control valve check valve and into the wing flap control valve for alternate operation of the wing flaps.
- (5) The return passage from the wing flap control valve ports fluid to return port A. The brake control valve return passage ports fluid into return line B through a two-way restrictor. The main gear control valve downline return fluid uses a separate port in the valve, bypasses the manifold, and returns the fluid directly to A return line to the reservoir. The upline in the main gear control valve uses the same return port, return port B, in the manifold as the brake control valve.

R. Deleted.


S. Hydraulic Power System Accumulator (See Figure 20.)

- (1) The hydraulic power system accumulator is a spherical, welded-steel, fluid and air bladder-separated container. The accumulator is installed in the pressure line of the hydraulic power system to provide a reserve supply of fluid under pneumatic pressure and to act as a shock absorber for system pressure surges.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

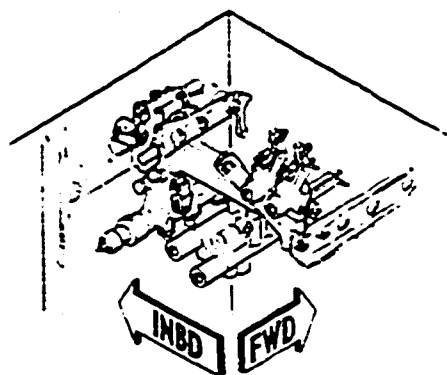

RIGHT MAIN GEAR  
WHEEL WELL

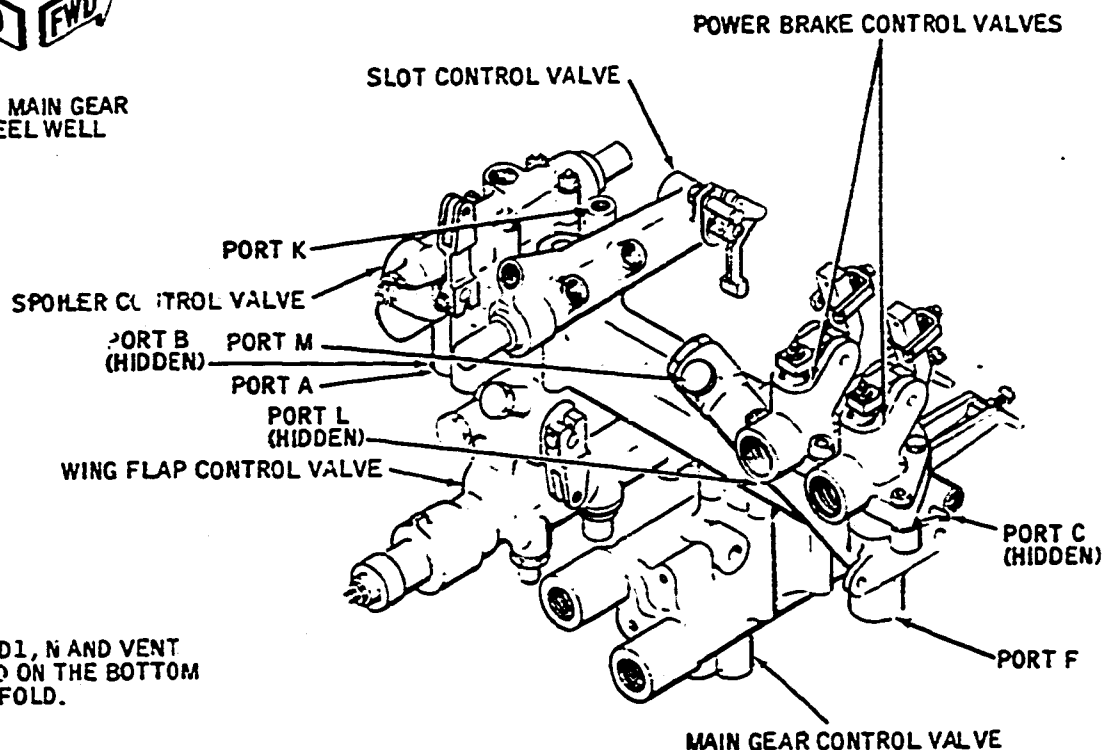

NOTE: PORTS B, C, D1, N AND VENT  
ARE LOCATED ON THE BOTTOM  
OF THE MANIFOLD.

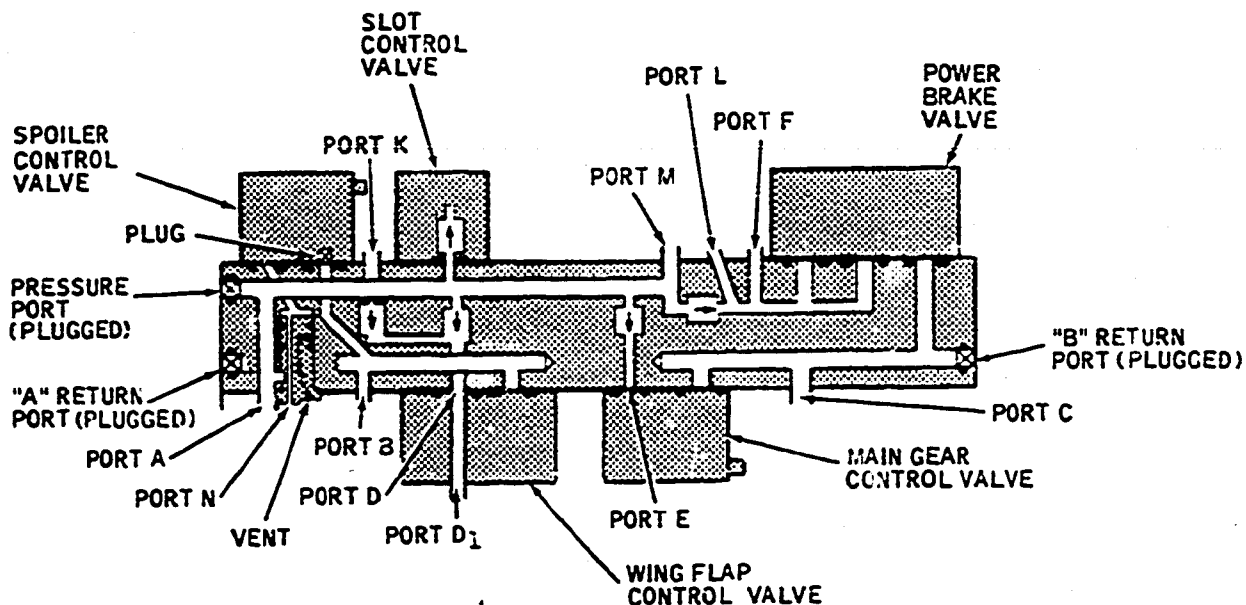

HA2-29A


Right Hydraulic Power Manifold -- Schematic  
 Figure 19

Nov 1/69

Printed in U.S.A.

29-10-0  
 CODE 9  
 Page 35

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

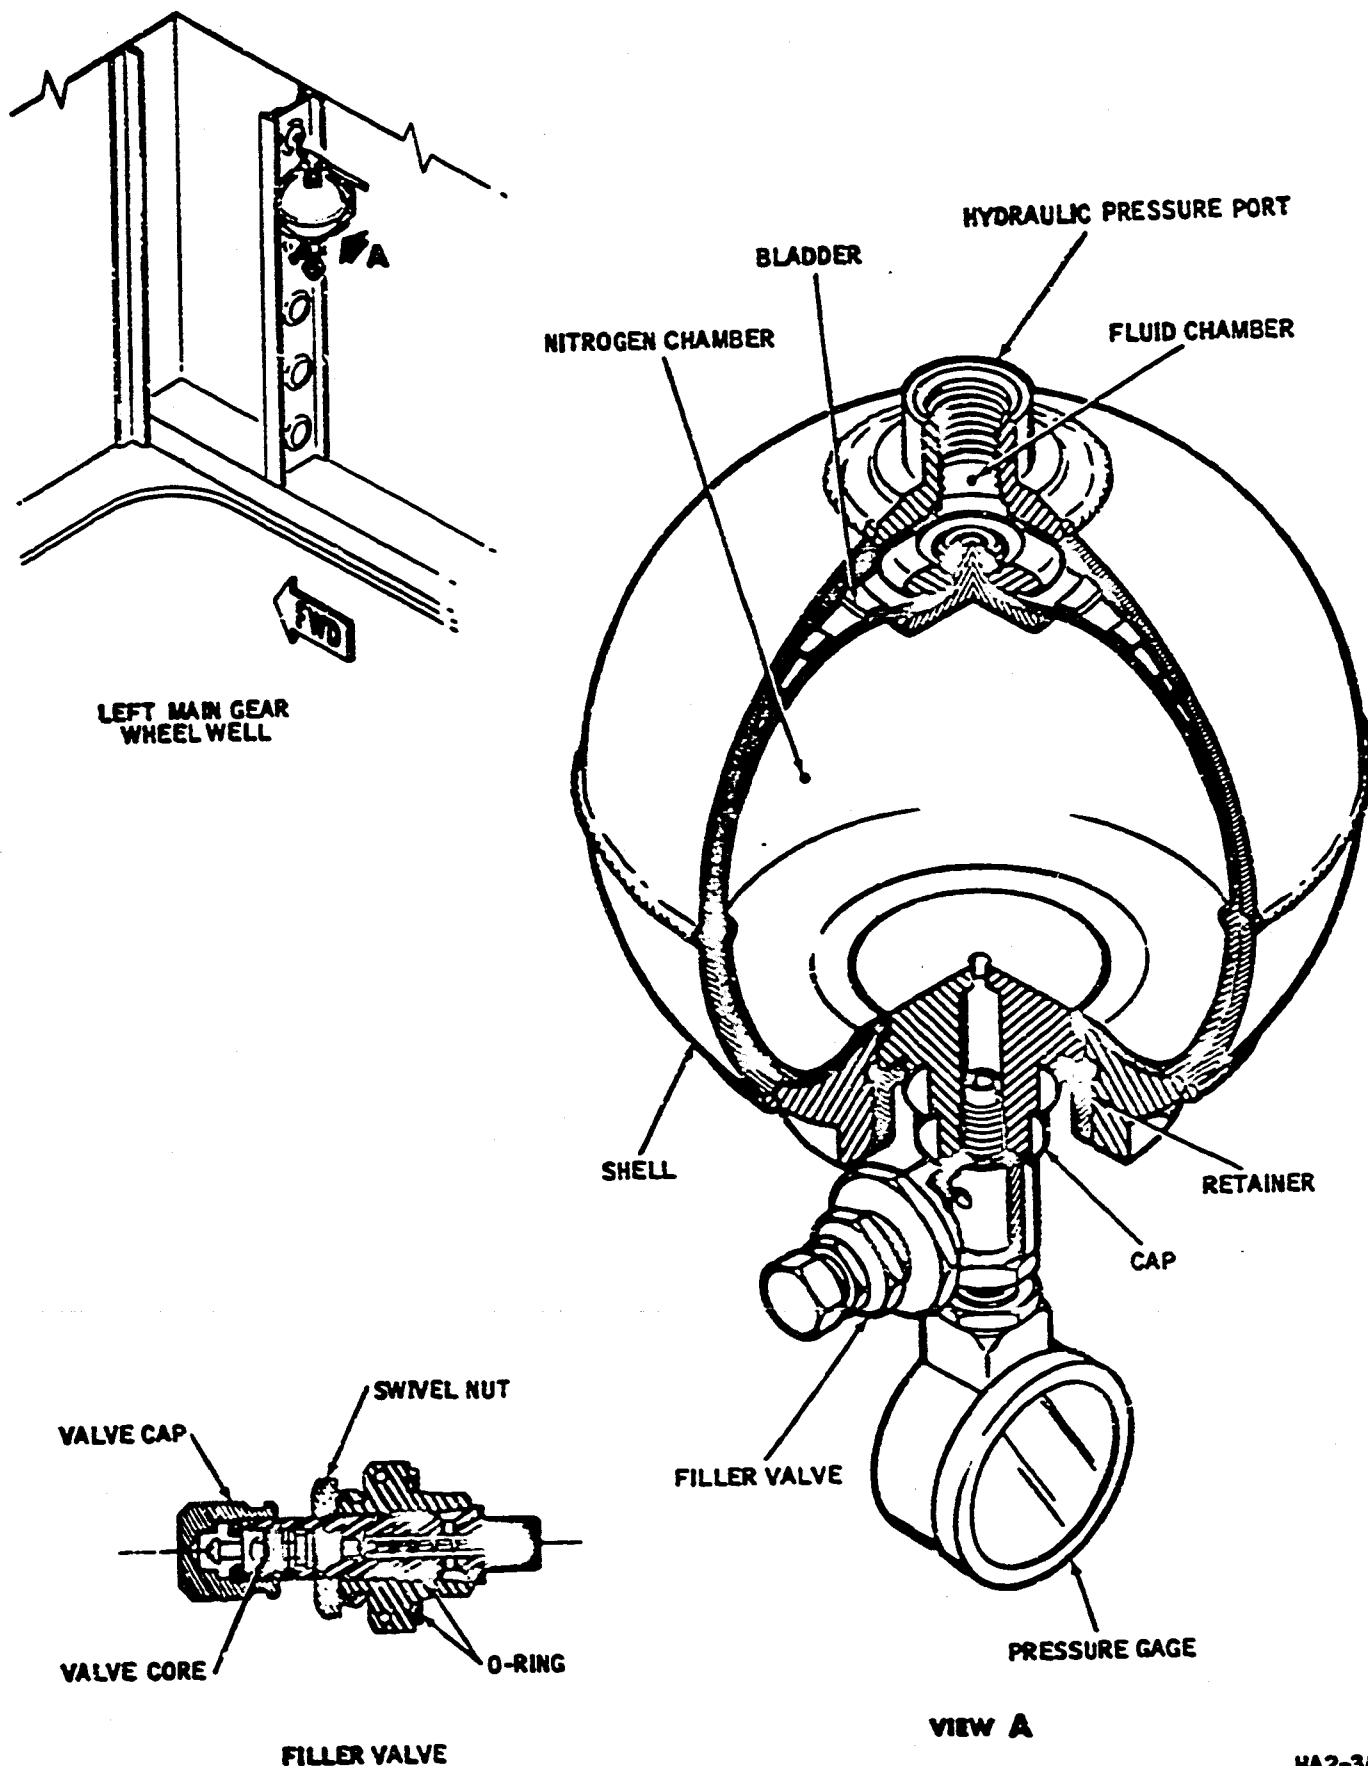

Hydraulic Power System Accumulator -- Cutaway View  
 Figure 20

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL



- (2) The accumulator is located immediately aft of the left hydraulic power manifold and is accessible through the left main gear inboard door. It is mounted with two corner brackets and clamp blocks at the upper and lower port fittings.
- (3) The accumulator is installed in the pressure line of the hydraulic power system and is initially charged with 1000 psi of dry nitrogen. As the system pressure builds up, fluid is forced into the upper chamber of the accumulator, further compressing the trapped nitrogen to approximately 3000 psi. With full hydraulic system pressure, 3000 psi is indicated on the pressure gage adjacent to the filler valve. This reserve pressure smooths out any momentary lag in the pump's response to the system's demand for greater fluid flows. The accumulator permits a gradual rise in system pressure, thereby absorbing the shock of pump surges and relieving the piping and system operating units of high-impact loads. When the engine-driven hydraulic pumps are not operating, the accumulator provides system pressure (at a diminishing rate) until a quantity equal to the stored volume in the accumulator has been used by the system.

T. Hydraulic System Priority Valve (See Figure 21.)

- (1) The priority valve is located in the left wheel well near the left hydraulic power manifold. The valve is installed in the hydraulic pressure line, between the two power manifolds, downstream of the pressure supply takeoff port for the flight controls. The priority valve is a balanced relief valve which reserves initial hydraulic pressure (up to 2150 psi maximum) for use in the flight control systems. The valve consists of a body with an inlet, an outlet, and a breather port. Internally, the valve contains a poppet valve plate, a poppet, a poppet valve load-spring, a piston load spring, and a piston load-spring housing. The piston load-spring housing chamber is vented to ambient air through a breather hole which is covered by a butyl rubber band.
- (2) The priority valve shuts off hydraulic pressure to all subsystems downstream of the left power manifold, whenever the hydraulic pressure drops below 1700 psi minimum. At this point, the valve closes to reserve the hydraulic pressure for use in the flight control systems, preventing them from reverting to manual operation. When the hydraulic pressure rises to 2150 psi maximum, the priority valve opens and supplies pressure to the right manifold and all subsystem downstream of the priority valve.
- (3) Hydraulic fluid from the left power manifold enters the priority valve through the inlet port, passes through the poppet valve plate holes, and applies pressure against the piston. When sufficient hydraulic pressure is applied to the piston, the piston load-spring compresses, unseating the poppet and premitting full flow through the valve. When the hydraulic pressure decreases to less than the opposing force value of the piston load-spring, the load-spring forces the piston against the poppet and shuts off fluid flow through the valve.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

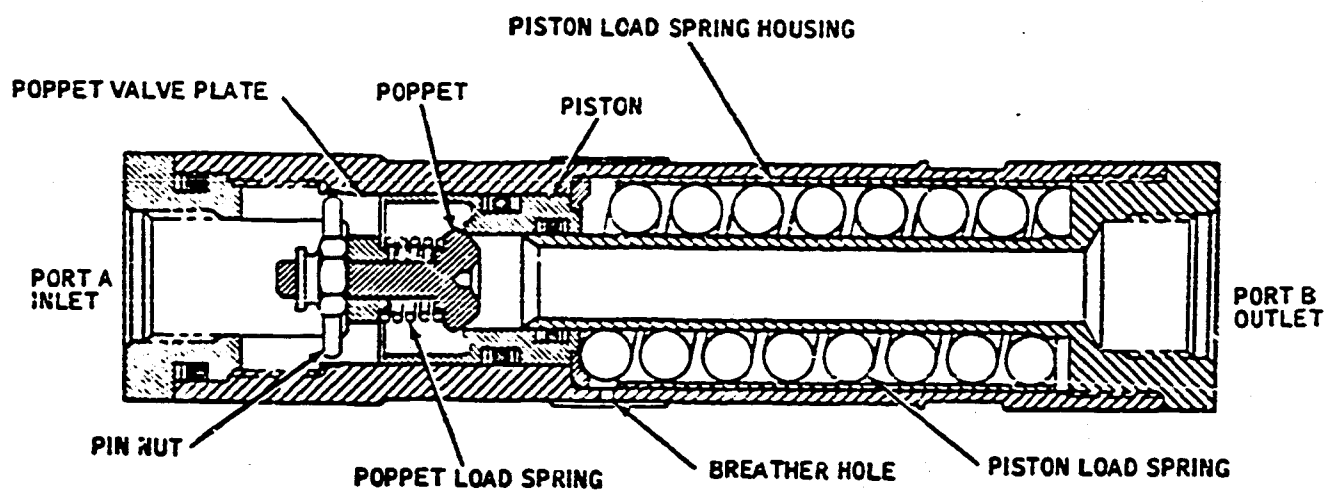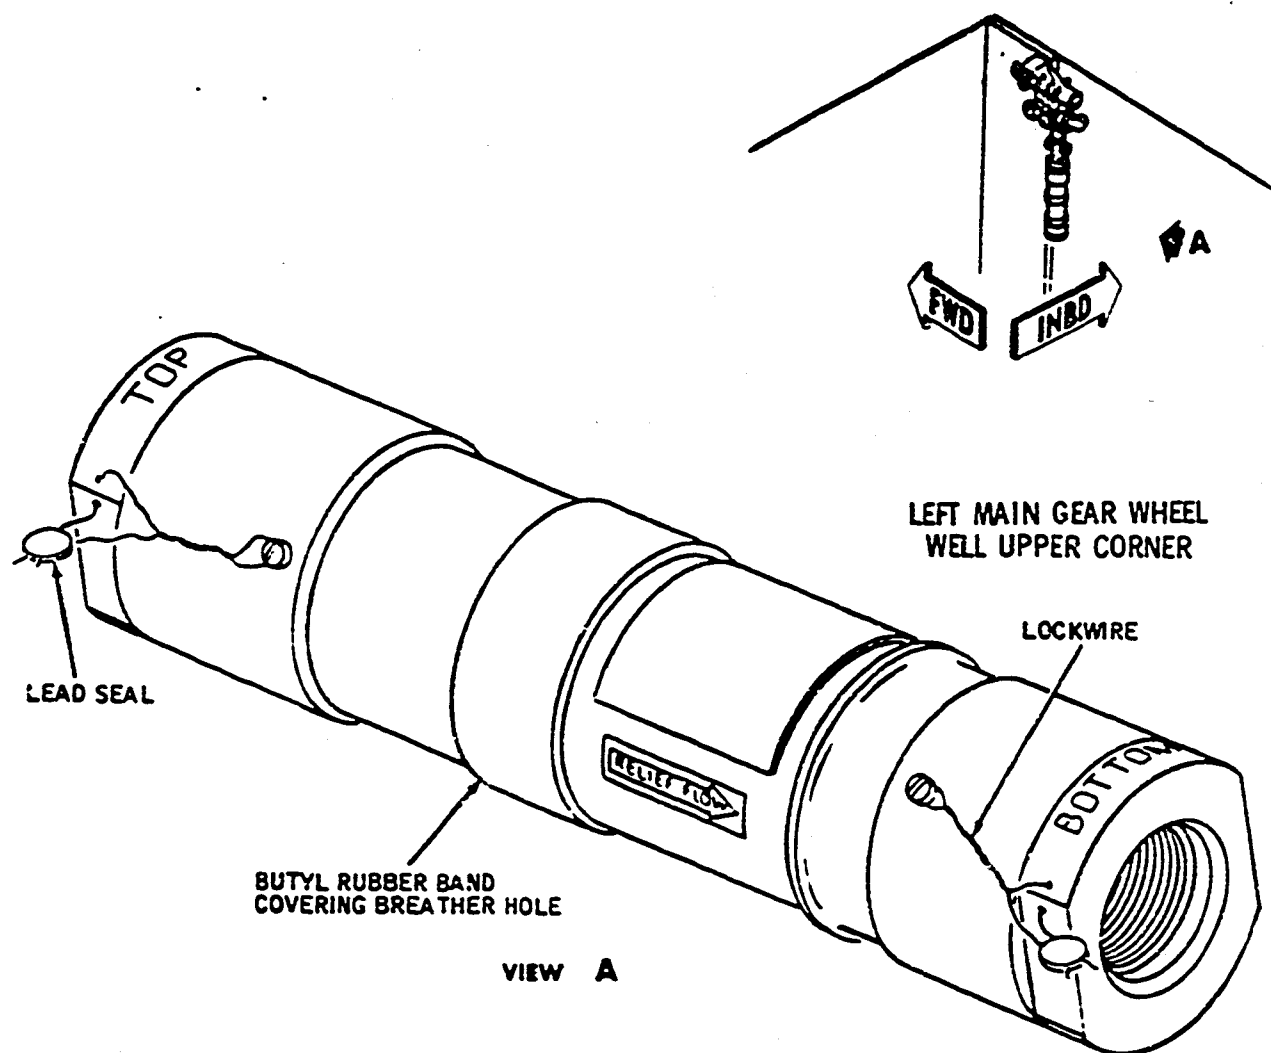

HA2-856

Hydraulic System Priority Valve -- Cutaway View  
 Figure 21

29-10-0  
 CODE 9  
 Page 38

Printed in U.S.A.

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) The maximum flow available from both engine-driven hydraulic pumps is: 44 to 45 gpm at takeoff, climb, and cruise configurations; 26 to 28 gpm at descent, approach, and engine idle configurations.
- (5) Some of the larger hydraulic system demands are as follows:
- (a) Gear retraction -- 17 gpm (10 - 12 seconds)
  - (b) Gear extension -- 14 gpm (10 - 12 seconds)
  - (c) Wing flaps down -- 8 gpm (10 seconds)
  - (d) Wing flaps up -- 3 gpm (22 seconds)
  - (e) Horizontal stabilizer -- 7 gpm
  - (f) Ailerons -- 17 gpm (25°/second)
  - (g) Rudder -- 3 gpm (25°/second)
- (6) There are various combinations of hydraulic system operations which could cause momentary reversion of the flight controls to manual operation. To prevent reversion to manual operation, the priority valve assures that the left power manifold receives all the hydraulic fluid pressure under conditions of very large flow demands.

U. Hydraulic System Selector Control Lever

- (1) The hydraulic system selector control lever is a manually actuated, mechanical lever detented to three positions. The lever provides a mechanical means, through cables, for positioning the system selector valve and the auxiliary hydraulic pump supply selector valve. The hydraulic system selector control lever is located on the system engineer's control pedestal. The lever is attached to a drive sector, located on a common shaft with the other control pedestal sectors. The lever and sector are accessible through the cover plates on the system engineer's pedestal.
- (2) To put the hydraulic power system in the bypass condition, the system selector control lever is lifted out of detent and moved to bypass/general system position. At the same time, the cable moves the sector and pushrod of the system selector valve to the No. 1 position. The pushrod positions the system selector valve to the No. 1 bypass position. At the same time, the cables from the system selector valve sector move the auxiliary pump supply selector valve sector to No. 1 (auxiliary) position. The auxiliary pump supply selector valve remains in the auxiliary supply position through the idle feature of the sector rigging. In this condition, the engine-driven pump pressure is ported to the reservoir and the auxiliary pump supplies pressure to the general system. In this position, the fluid is supplied to the auxiliary pump from the low stand-pipe in the hydraulic system reservoir. To put the system

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

into the alternate condition, the selector control lever is lifted out of detent and moved to the general system/flaps only position. The cables move the system selector valve sector to the No. 3 (alternate) position. The system selector valve sector moves the cables rotating the auxiliary pump supply selector valve sector to the No. 3 (alternate) position. As the sector rotates, the end of the arm moves away from the idle position. This positions the valves to the alternate position supplying fluid to the auxiliary pump from the auxiliary pump alternate reservoir. In this position, fluid from the auxiliary pump is ported to the wing flap control valve. Engine-driven pump pressure is ported to the general system.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - DESCRIPTION AND OPERATION

1. General

A. Description (See Figures 1 and 2.)

- (1) The hydraulic power system receives fluid pressure from the engine-driven hydraulic pumps, one installed on each inboard engine. The electrically driven auxiliary pump is used to supplement the engine-driven pumps, or to independently supply the system with fluid pressure.
- (2) The hydraulic system reservoir, located in the left wing root, has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir is used for fluid, and 1/10 is used for foam space. A separate air chamber is installed in the reservoir system to provide for a greater fluid capacity in the main reservoir. A reservoir filler assembly is installed in the piping between the reservoir and the air chamber and has a vent line from the filler neck to the tee at the top of the reservoir sight gage. The reservoir is pressurized to 30 to 35 psi by bleed pressure from the engine-driven pumps through an air pressure regulator-aspirator.
- (3) The engine-driven pumps receive fluid from the pressurized main reservoir through respective engine hydraulic fire shutoff valves. The engine hydraulic fire shutoff valves are normally open and can be mechanically controlled from the flight compartment. The pumps supply fluid pressure through respective check valves to the dual filter and relief valve. Some of the fluid from the filter is ported through the regulator-aspirator to pressurize the reservoir. Most of the fluid is routed through a check valve to the system selector valve, and then to the left and right hydraulic power manifolds. The manifolds distribute the fluid pressure to the subsystems.
- (4) Hydraulic fluid is normally supplied to the auxiliary hydraulic pump from a low standpipe in the main reservoir. During alternate operation, the auxiliary hydraulic pump receives fluid supply from the auxiliary pump alternate reservoir, which is located just aft of the auxiliary pump. From these reservoirs, the fluid is ported through the auxiliary pump selector valve which is mechanically controlled from the flight compartment by the system selector control lever. When operating, the auxiliary hydraulic pump supplies fluid pressure to the subsystems through the system selector valve which is also controlled by the system selector control lever in the flight compartment. A filter and check valve are installed in the line from the auxiliary pump to the system selector valve.
- (5) An accumulator is installed in the pressure line to the subsystems to provide a reserve supply of fluid and to act as a surge damper for the system.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Engine-driven pump fluid pressure is routed through the system selector valve to the left power manifold, where it is distributed to some of the subsystems and through the priority valve to the right power manifold. Fluid pressure from the right power manifold is distributed to the remaining subsystems.
- (7) The priority valve is a spring-loaded, poppet-type, balanced relief valve installed in the line downstream of the left power manifold. The priority valve's function in the system is to prevent the flight control systems from reverting to manual operation during high demands on the hydraulic system.
- (8) A fluid pressure transmitter, located in the nosewheel well, senses the system pressure, which is indicated on the hydraulic system pressure indicator in the flight compartment.

**B. Normal Operation**

- (1) Fluid is supplied to the hydraulic system from the pressurized hydraulic system reservoir. For operation of the hydraulic system under normal conditions, 8.1 US gallons (6.7 Imperial gallons; 30.6 liters) of hydraulic fluid are available to the engine-driven hydraulic pumps, and 12.9 US gallons (10.7 Imperial gallons; 48.8 liters) are available to the auxiliary hydraulic pump. Supply lines from the main reservoir carry fluid to each inboard pylon through normally open engine hydraulic fire shutoff valves to the engine-driven hydraulic pumps. Fluid is supplied to the auxiliary hydraulic pump from the main reservoir through a low standpipe at the base of the reservoir. Fluid is carried from the reservoir through the auxiliary pump selector valve to the auxiliary hydraulic pump.
- (2) The engine-driven hydraulic pumps supply full system pressure (3000 psi nominal) at any given engine speed, from idle to full power. The output flow of the pump is varied by sensing pressure from the outlet side of the pump. Each engine-driven pump contains a solenoid-operated bypass valve which, when energized, bypasses the pressure control regulator of the pump and ports fluid to the pump yoke control piston which feathers the pump. When the pump is feathered, flow rate is reduced to almost zero (1.0 gpm) and to a pressure of approximately 300 psi. Half of this flow maintains pump lubrication and cooling through internal leakage. This leakage is returned, through a check valve, the engine-driven pump case drain line filter, and another check valve to the case drain line filter, and another check valve to the case drain return port of the reservoir. The pressure fluid from each pump passes through a check valve to the dual filter and relief valve.
- (3) The fluid enters the dual filter and relief valve through the relief valve chamber. The fluid is passed through the filter element, through a manifold, and through a common outlet port. Fluid from the outlet port is routed through a check valve to the system selector valve. If back pressure in the system builds up to approximately 3300 psi, the

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

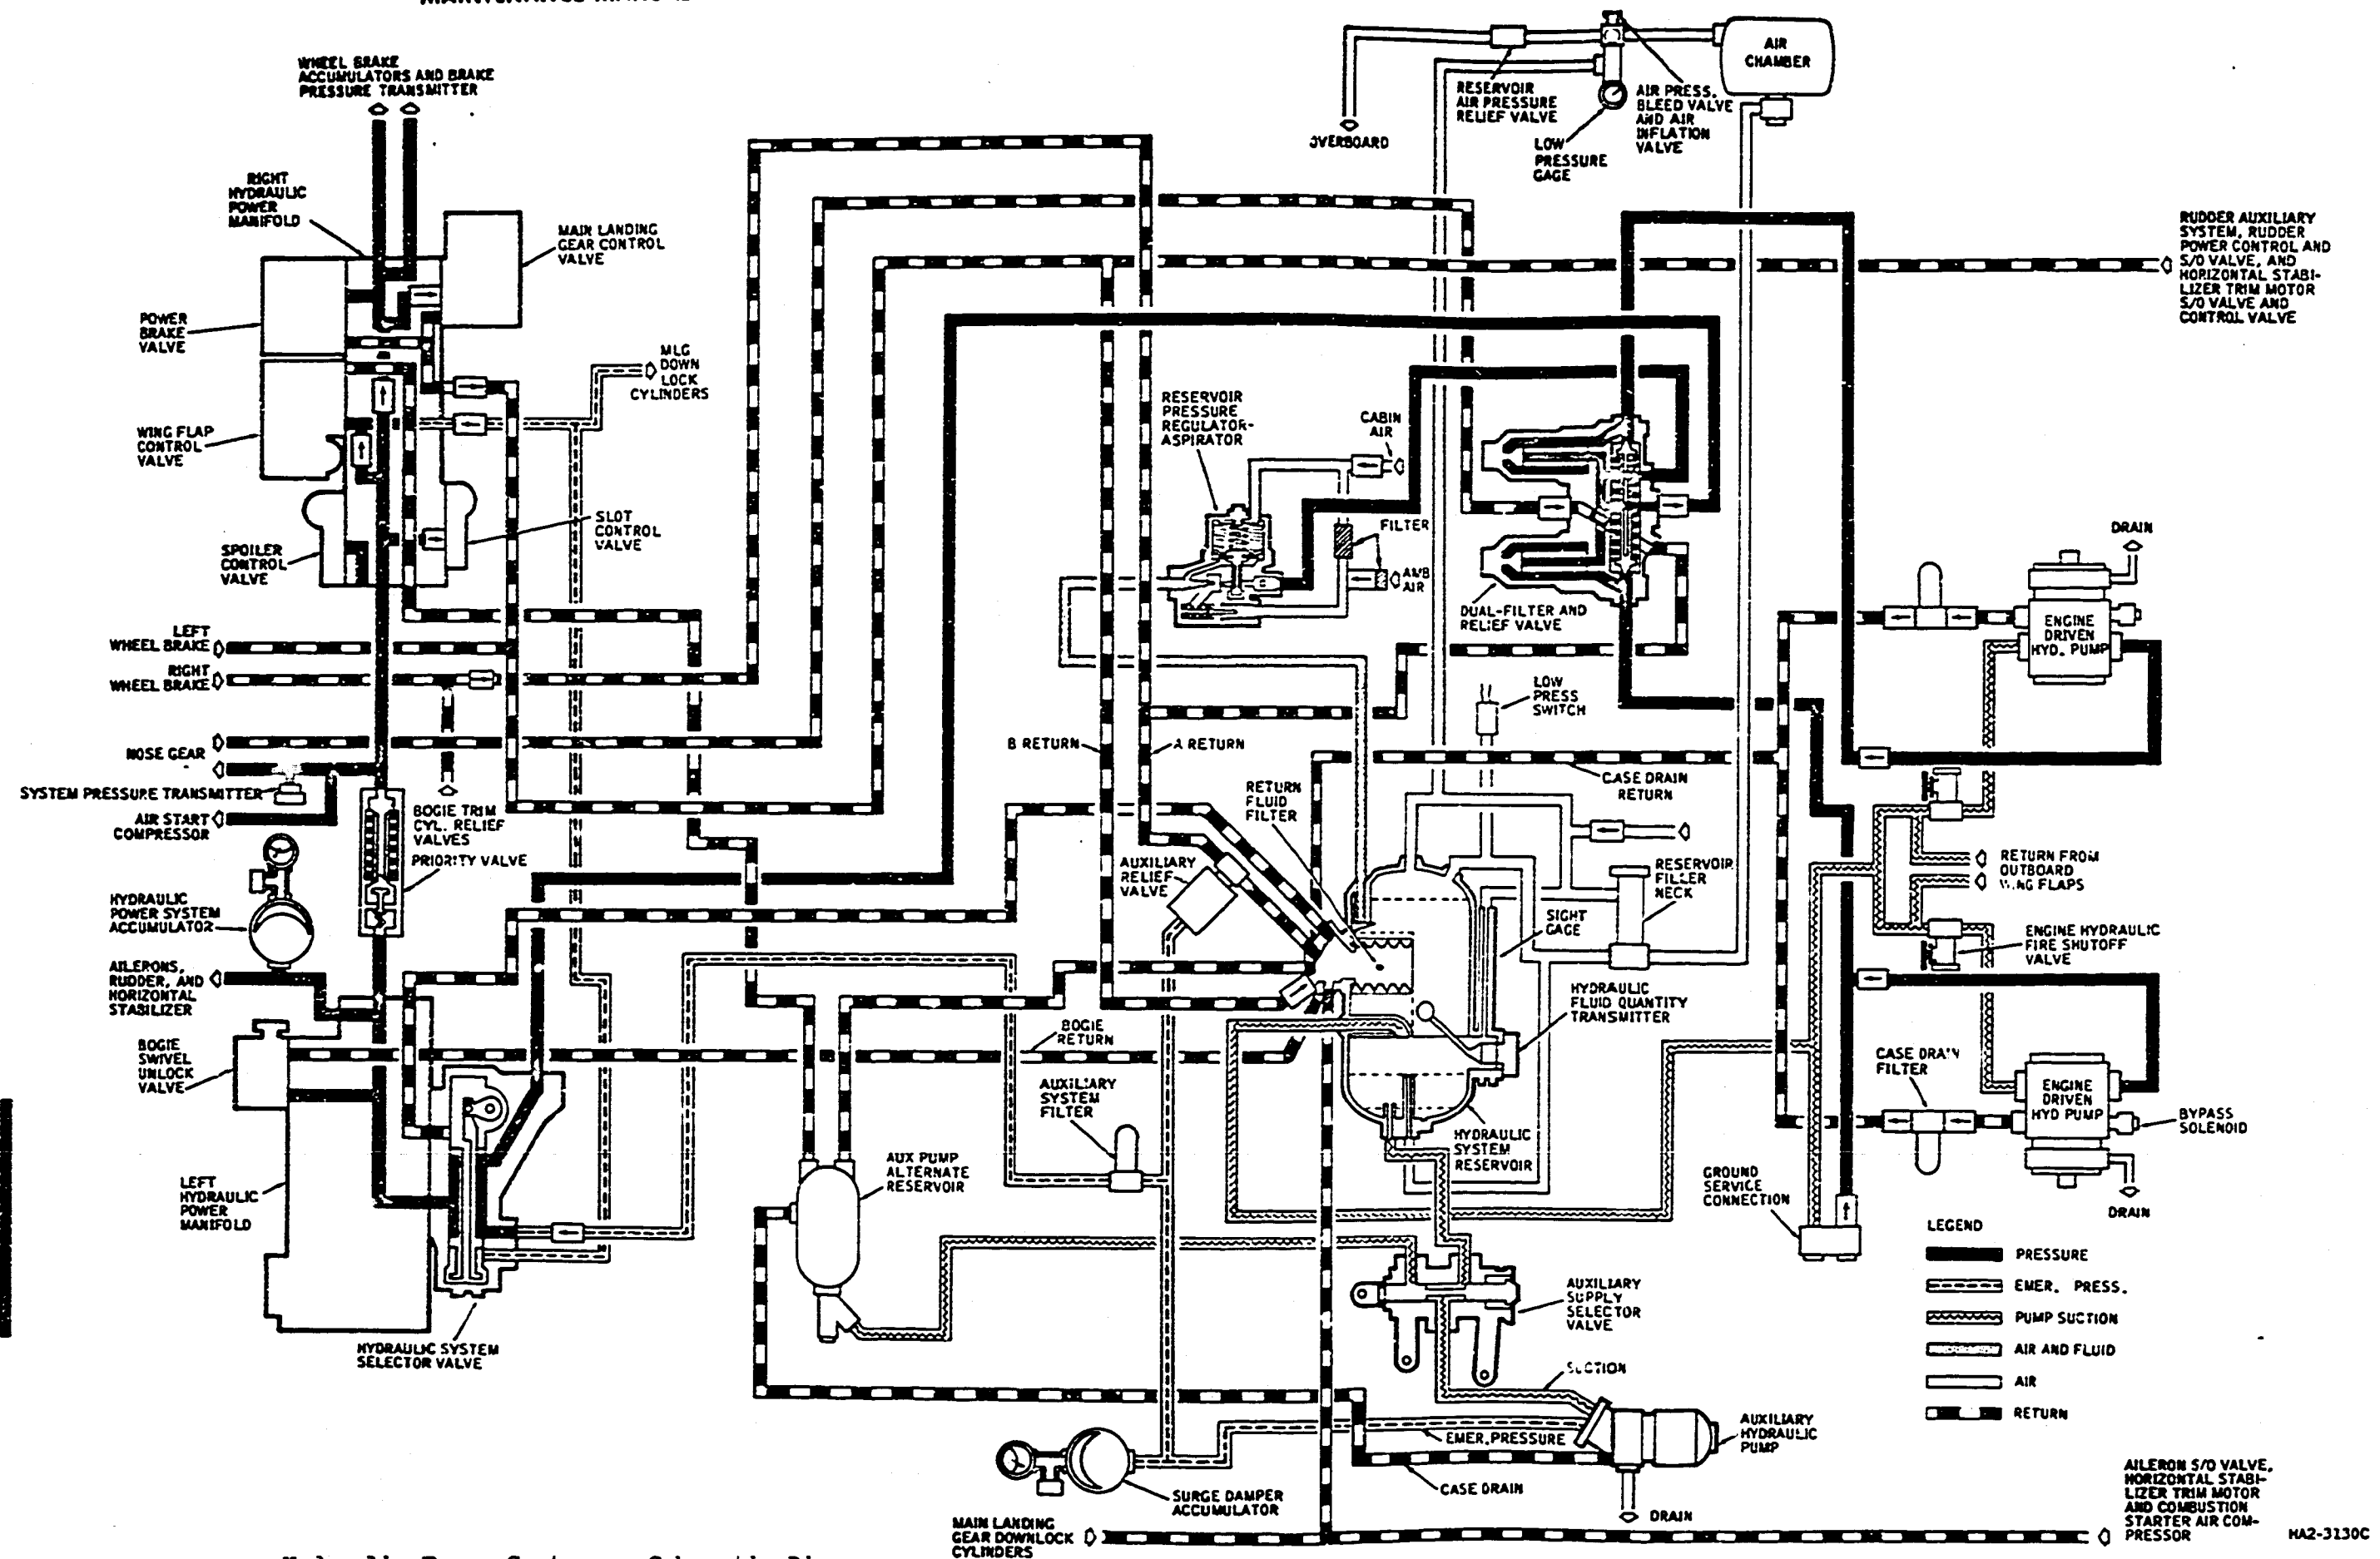

Hydraulic Power System -- Schematic Diagram  
 (Airplane N8961T)  
 Figure 1 (Sheet 1)


29-10-0  
 CODE 10  
 Page 3

Aug 1/68

Printed in U.S.A.

HA2-3130C

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

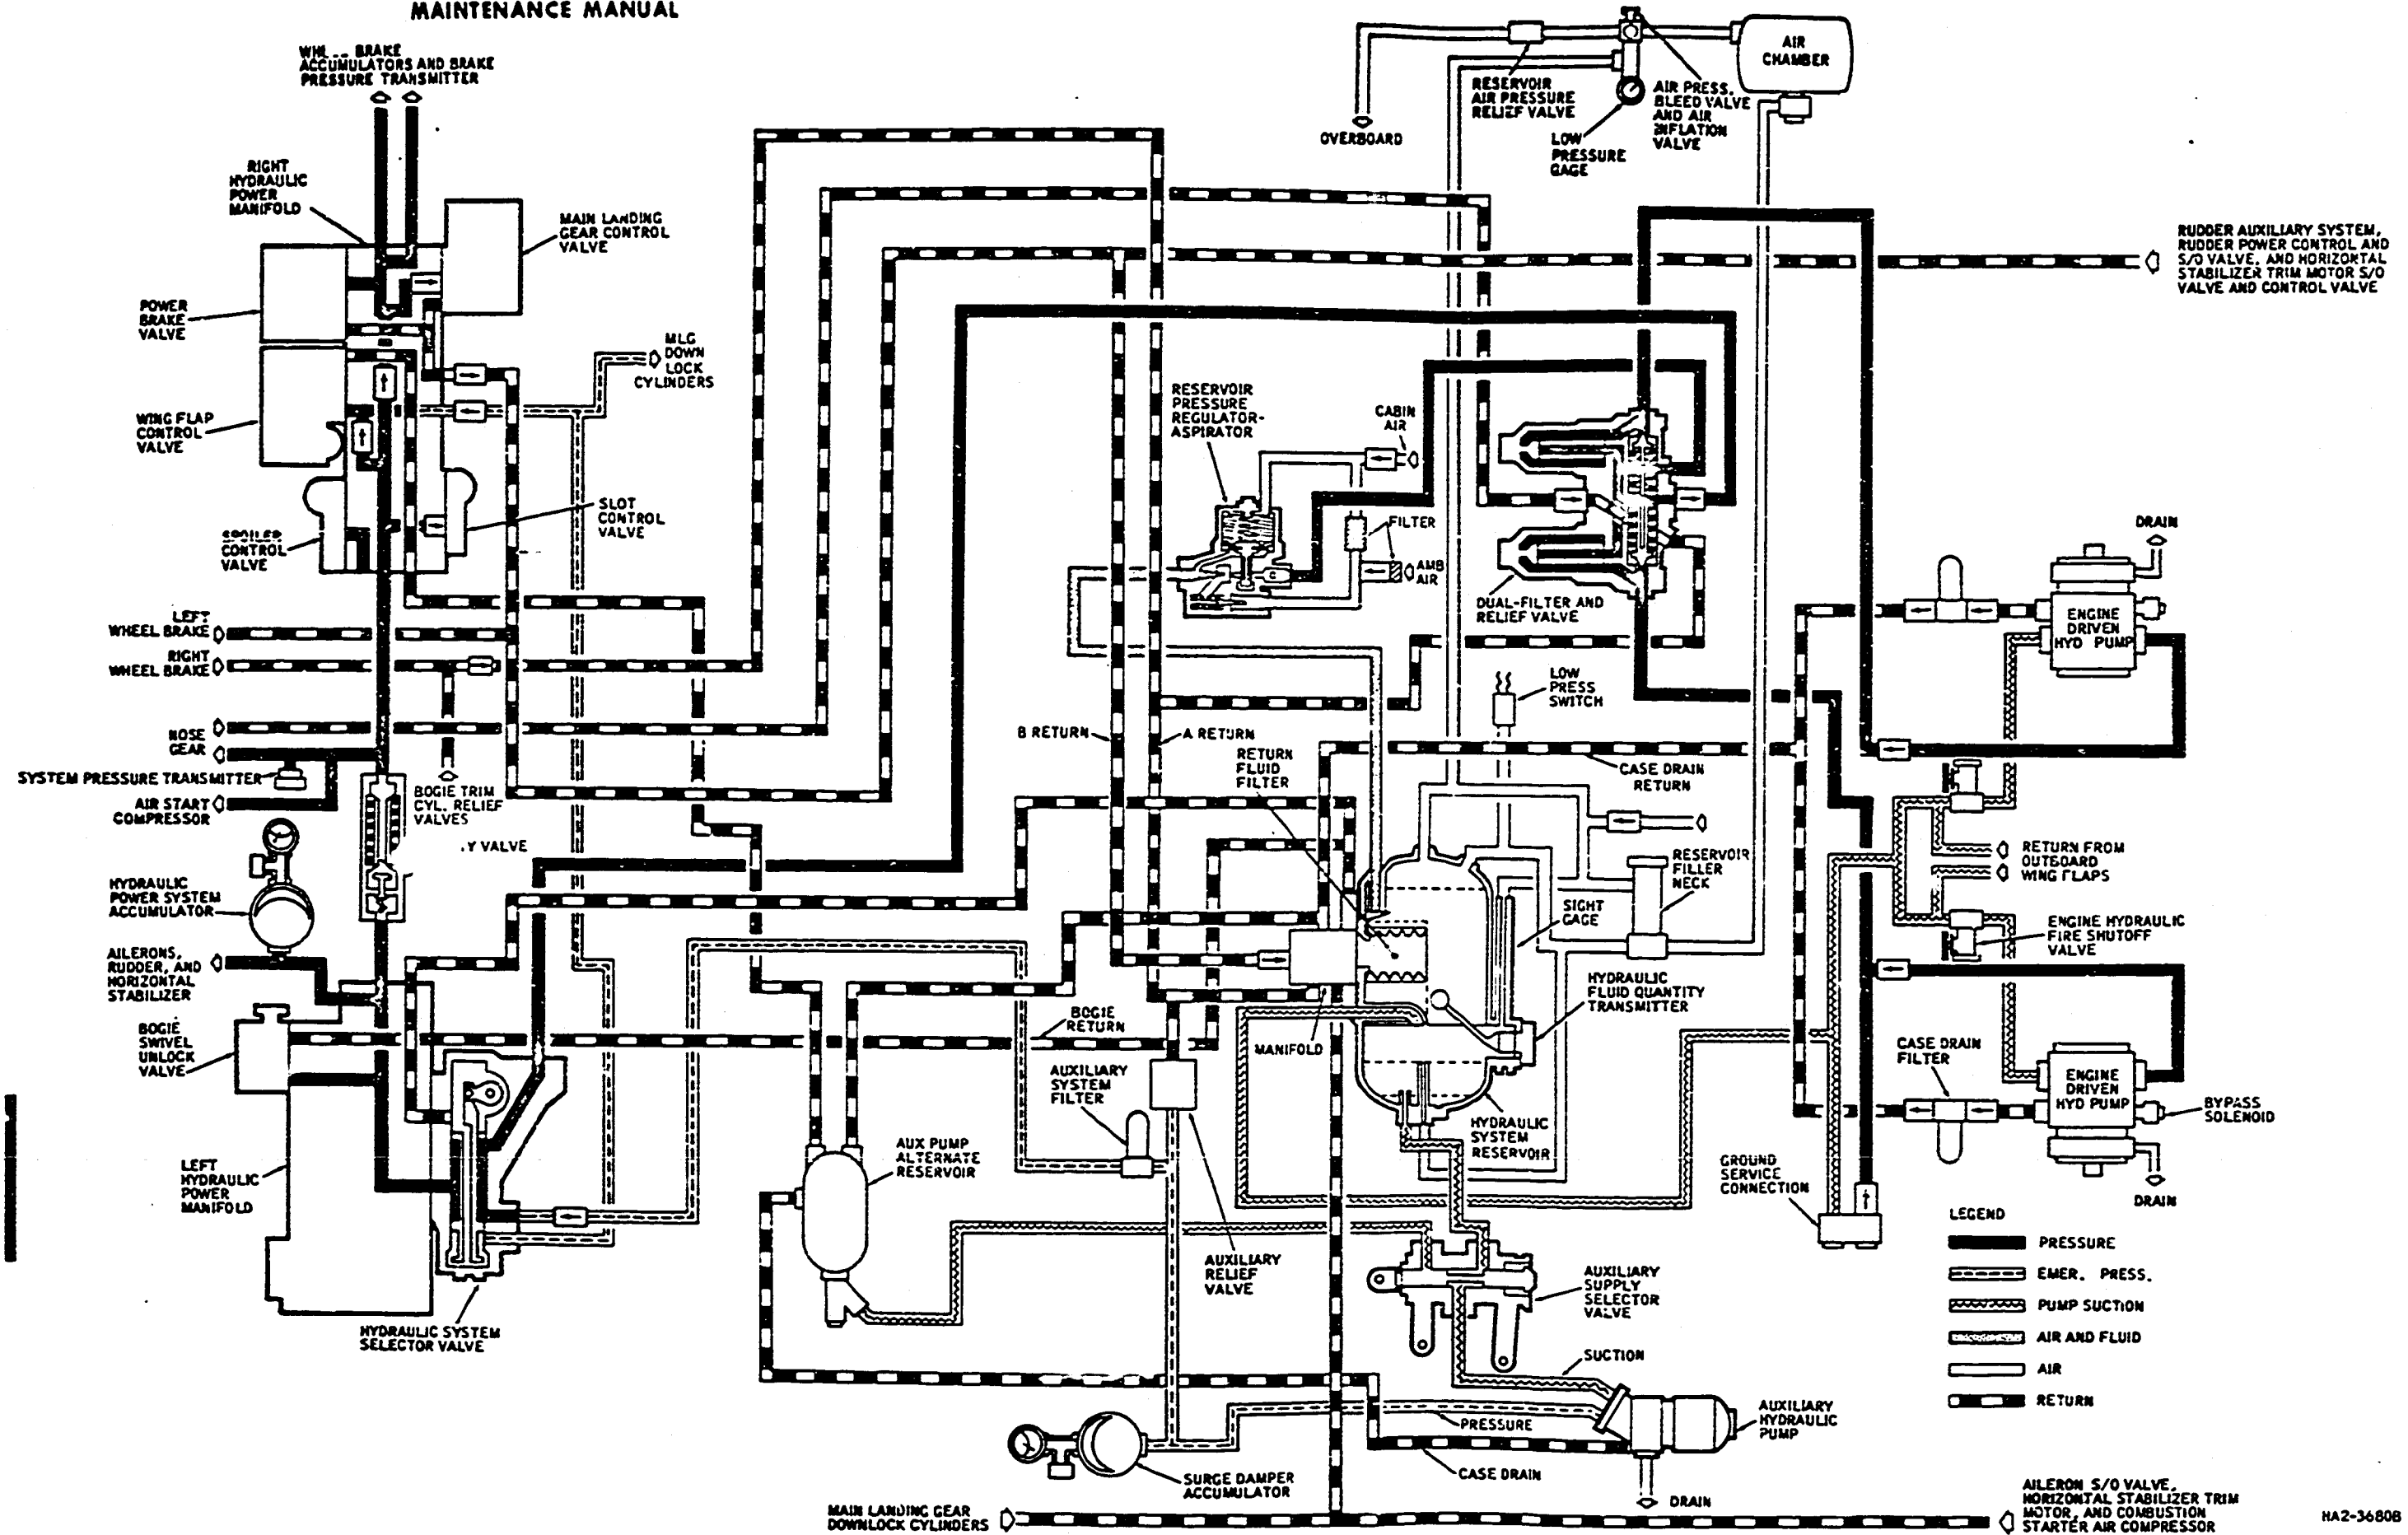

Hydraulic Power System -- Schematic Diagram  
 (Airplanes N8960T, N8962T)  
 Figure 1 (Sheet 2)

29-10-0  
 CODE 10  
 Page 4A


Aug 1/68

Printed in U.S.A.

HA2-36808

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

LH WHEEL BRAKE,  
 RH AILERON POWER CONTROL,  
 RH THRUST REVERSER,  
 LH LANDING-GEAR TRIM CYLINDER  
 RELIEF VALVE, WING SLOTS, AND  
 AIR START COMPRESSOR

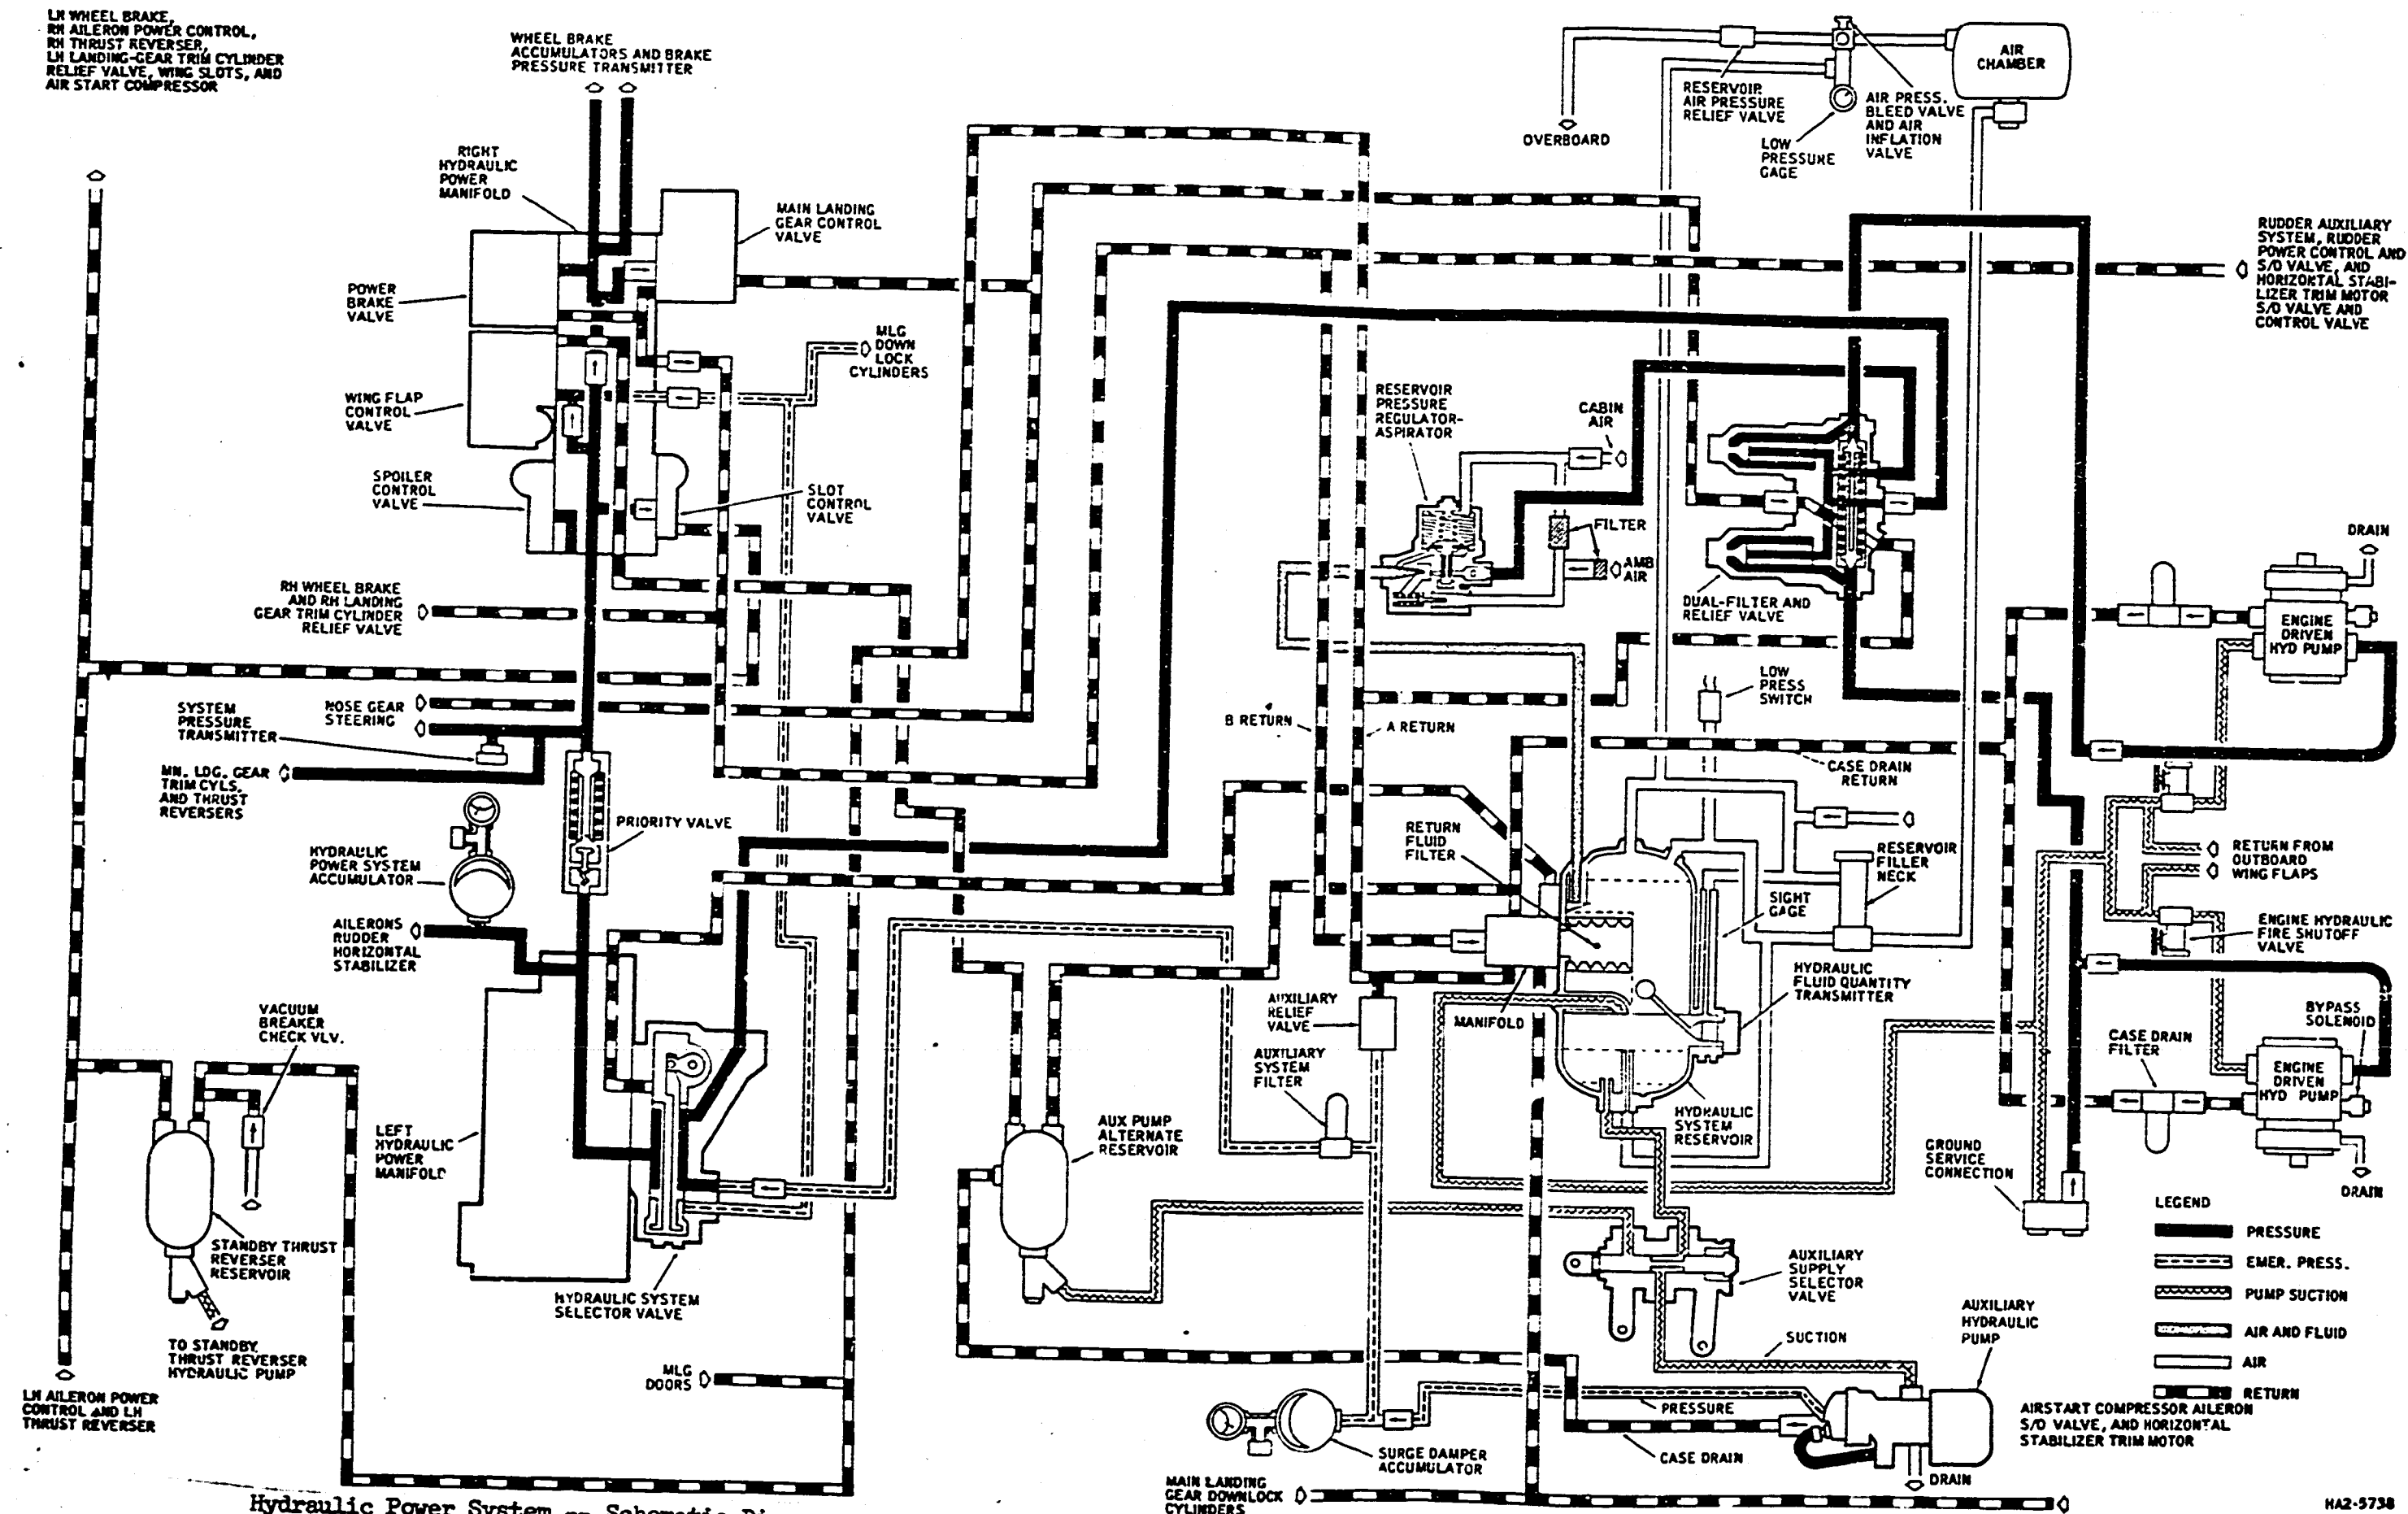

Hydraulic Power System -- Schematic Diagram  
 (Airplane N4663T and Subsequent)  
 Figure 1 (Sheet 3)

29-10-0  
 CODE 10  
 Page 4C


Aug 1/69

Printed in U.S.A.

HA2-5738



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

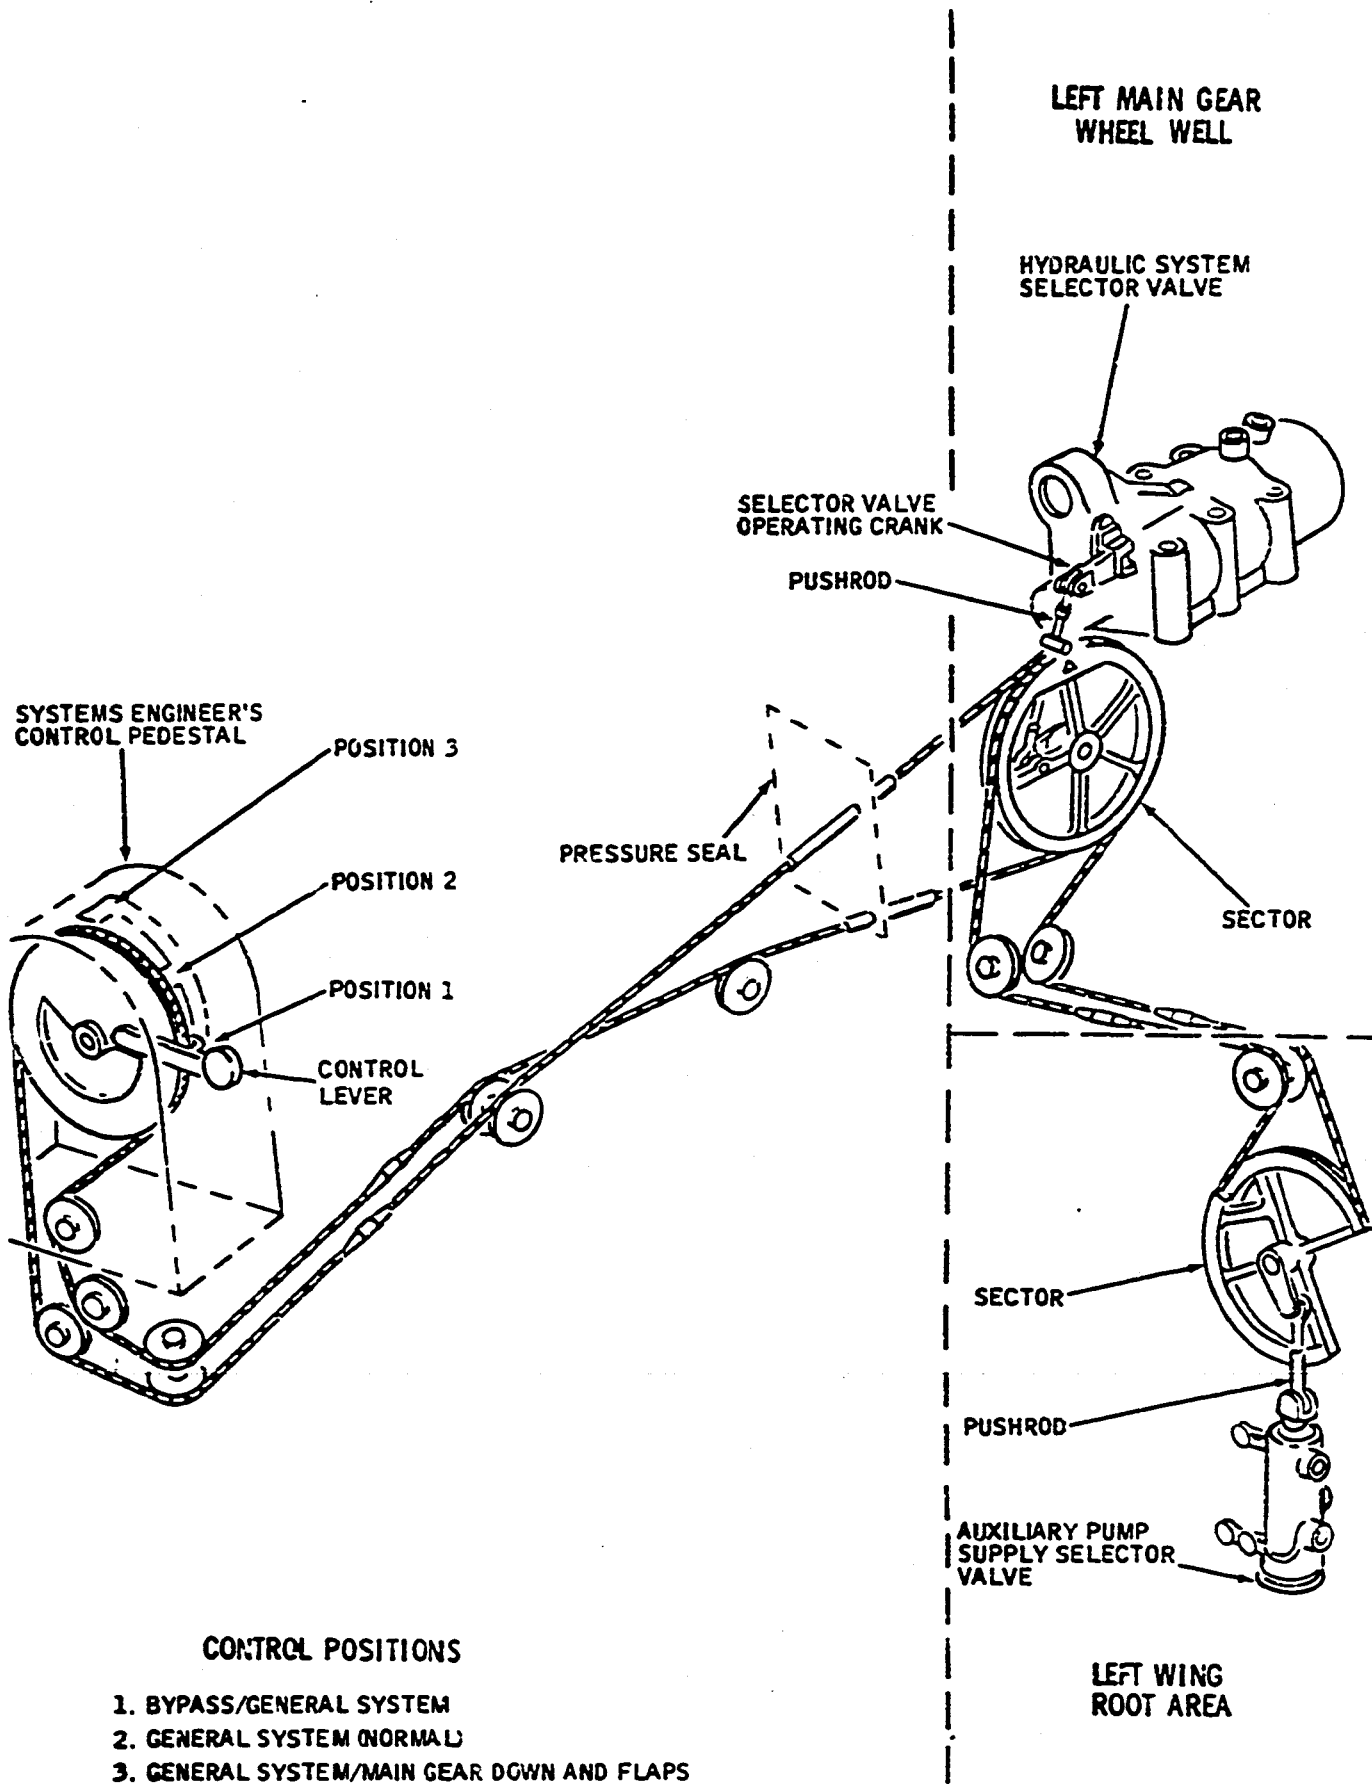

Hydraulic System Selector and Auxiliary Pump Supply  
 Selector Valves -- Mechanical Control Schematic  
 Figure 2

HA2-486

29-10-0  
 CODE 10  
 Page 5

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

relief valves in the dual filter and relief valve open and port fluid back to the reservoir via A return port. The relief valve poppet closes again when system pressure drops to approximately 3000 psi.

- (4) The aspirator receives filtered fluid (bleed pressure at normal 3000 psi) from the dual filter and relief valve. The aspirator operates on the jet pump principle. Hydraulic fluid is atomized and mixed with air within the unit by a nozzle and a venturi. The mixture is used to pressurize the reservoir and reservoir air chamber. The regulator diaphragm maintains a pressure range of 30 to 35 psi in the reservoir and air chamber. If there is a regulator malfunction, the aspirator stalls when the outlet pressure reaches a maximum of 40 psi. A reservoir relief valve in the reservoir vent line relieves thermal expansion pressure above 45 (+5, -0) psi.
- (5) Pump pressure fluid enters the system selector valve through the system pressure inlet port. When the pump selector control lever is in the general system (normal) position, fluid is ported to the pressure passages of the left power manifold. The fluid pressure in the left power manifold is ported through the priority valve to the nose gear and the right power manifold and directly to the following valves:
  - (a) Bogie unlock
  - (b) Aileron power shutoff
  - (c) Rudder power shutoff
  - (d) Longitudinal trim hydraulic motor shutoff
- (6) The right power manifold distributes fluid pressure to the brake accumulators, the pressure transmitter, and the following control valves:
  - (a) Wing flap
  - (b) Slot
  - (c) Main gear
  - (d) Power brake
- (7) The return fluid from the wing flap control valve is ported through the right power manifold and into the auxiliary hydraulic pump alternate reservoir. Return fluid from the outboard wing flaps is piped into the suction lines for each engine-driven hydraulic pump. Return fluid from the slot control valve is ported into the A return line to the main reservoir. The power brake and main gear control valve gear up return fluid is ported through a restrictor check valve into the B return line to the reservoir. The main gear control valve gear down return pressure

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

bypasses the right manifold and returns to the reservoir through the A return line. The return port of the bogie unlock valve ports fluid from the left manifold to the bogie return port of the reservoir. All return fluid entering the reservoir is filtered through the return ports filter located within the reservoir.

C. Bypass Operation

- (1) The output of the engine-driven hydraulic pumps is bypassed by moving the system selector control lever out of the general system (normal) position to the bypass/general system position.
- (2) The system selector valve in the bypass position ports engine-driven pump pressure from the dual filter and relief valve directly to the return passage of the left power manifold. From the manifold, the fluid is ported directly to a tee in the wing flap return port of the hydraulic system reservoir. In the bypass condition, the auxiliary hydraulic pump receives fluid from the hydraulic system reservoir, pressurizes it to system pressure, and ports it to the left and right power manifolds for distribution to the subsystems.

D. Alternate Operation

- (1) When both engine-driven hydraulic pumps and the auxiliary hydraulic pump are rendered inoperative due to the loss of the normal supply of fluid, the hydraulic power system can be rigged for alternate operation. This is accomplished by placing the system selector control lever in the general system/main gear downlock and flaps position. When the system selector control lever is in this position, the auxiliary hydraulic pump supply selector valve is positioned to supply fluid from the auxiliary pump alternate reservoir to the auxiliary pump.
- (2) Fluid is supplied to the auxiliary pump from the outlet port of the auxiliary pump supply selector valve. Output pressure is ported through the auxiliary system filter and check valve to the auxiliary pressure inlet port of the system selector valve.
- (3) In the general system/main gear downlock and flaps position, auxiliary pump pressure bypasses the manifold pressure passages and is ported from the alternate outlet port of the system selector valve. Fluid from this port flows directly to a port on the right power manifold, through an internal check valve in the manifold, to the wing flap control valve. A line, teed into the alternate supply line, runs directly to a shuttle valve in the main gear downlock cylinder line. When auxiliary pressure is applied, the shuttle valve shifts, porting fluid into the downlock bungee cylinder's downlock side.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

**E. Mechanical Control**

- (1) The hydraulic power mechanical control system consists of the hydraulic system selector control lever cable drum, the system selector valve sector, the system selector valve, the auxiliary hydraulic pump supply selector valve sector, and the auxiliary hydraulic pump supply selector valve.
- (2) The control lever located on the system engineer's control pedestal is used to position the system selector valve and, in turn, the auxiliary hydraulic pump supply selector valve.
- (3) The control lever is spring loaded into general system (normal) position, and is connected to the control lever cable drum. Two cables run from the drum, under the cabin floor, aft through the pressure bulkhead at the rear wing spar, and into the left wheel well to the system selector valve sector. A pushrod connects the sector to the positioning lever of the system selector valve.
- (4) A second set of cables is routed from the system selector valve sector into the left wing root to the auxiliary hydraulic pump supply selector valve sector. When the system selector valve is in either bypass or normal, the auxiliary hydraulic pump supply selector valve sector is arranged so that the pushrod idles between the two positions. This allows the valve to remain in the auxiliary position. When the sector is moved to the alternate position, the pushrod is pulled by the sector to reposition the valve to the alternate position.
- (5) The control lever is normally in the general system (normal) position. To move the system selector valve to the bypass position, the control lever is moved to the bypass/general system position. When the system selector valve is moved to the bypass position, the auxiliary hydraulic pump supply selector valve sector is moved to a new position. Due to the idle feature on the auxiliary sector, the valve remains in the auxiliary position. With the valve in this position, fluid is supplied to the auxiliary pump through the low standpipe in the hydraulic system reservoir. In this condition, engine-driven pump pressure is ported to the reservoir and the auxiliary pump pressure is ported to the general system.
- (6) To put the system in alternate operation, the control is moved to the general system/main gear downlock and flaps position. This moves the system selector valve to the alternate position, and simultaneously moves the auxiliary hydraulic pump supply selector valve to the alternate position. Fluid is supplied to the auxiliary pump from the auxiliary hydraulic pump alternate reservoir. Fluid pressure from the auxiliary pump is ported to the flap system control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported from the system selector valve to the general system.


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

2. System Components

A. Hydraulic System Reservoir (See Figures 3 and 4.)

- (1) The hydraulic system reservoir is installed on the aft side of the wing rear spar in the left wing root and is accessible through the left wing root access door. The hydraulic system reservoir serves as the main source of hydraulic fluid for the engine-driven hydraulic pumps and the normal supply for the auxiliary hydraulic pump. The reservoir is cylindrical in shape and contains a filter, baffle, and a screen cover encasing the filter. The filter prevents foreign particles from contaminating the fluid supply. Mountings are provided on the exterior surface of the reservoir for return line ports, aspirator port, electrical sensing units, sight gage, instruction placards, magnetic drain plug, and system supply ports.
- (2) The reservoir is pressurized with air from the regulator-aspirator to a range of 30 to 35 psi and has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir volume is used for fluid and 1/10 is used for foam space.
- (3) The aspirator port through which the reservoir is pressurized is located in the recess on top of the reservoir. An aspirator-deaerator filter is supported in the reservoir by a screen and support box assembly which is mounted to the reservoir wall by two bolts.
- (4) On airplane N8961T the mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The manifold is bolted to the flange and contains five ports: return port A, located at the bottom; return port B, located at the lower right side; the low-pressure return port, located at the upper right; the wing flap return port, located at the top; and the bogie return port, located on the face of the manifold just below the wing flap return port.
- (5) The return fluid filter is installed in the reservoir, behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the manifold holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
- (6) On airplanes N8960T, N8962T and subsequent, the mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The return ports manifold is an open-centered ring, flanged at both sides and provided with five fluid ports around its circumference; return port A is located at the bottom, return port B is located at the lower right side, the wing flap return port is located at the upper left side, and the system selector valve bypass port is located at the top. One flange of the manifold is mounted with six bolts to the mounting


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

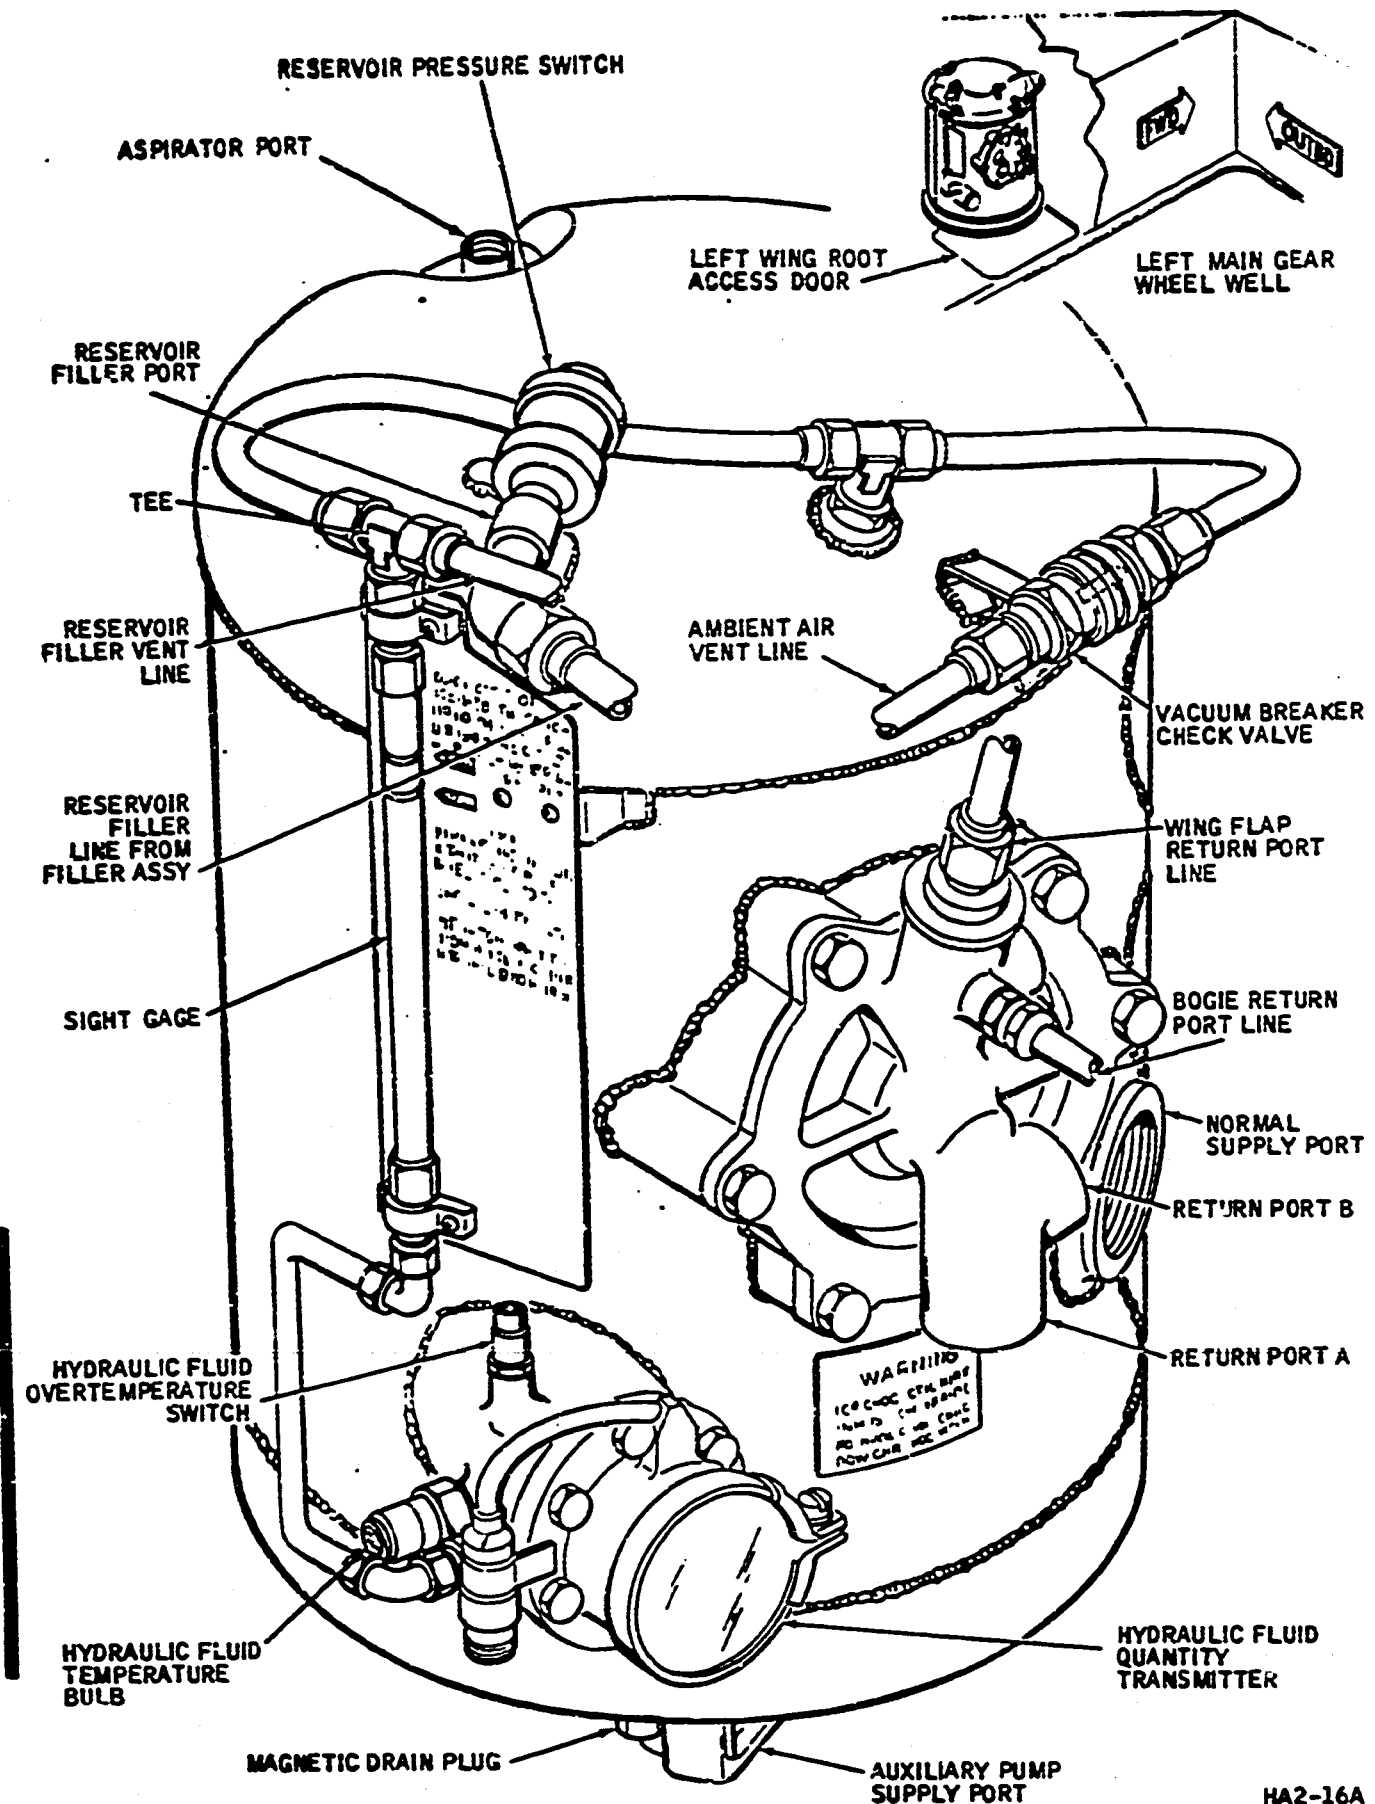

HA2-16A

Hydraulic System Reservoir -- External View  
 (Airplane N8961T)  
 Figure 3 (Sheet 1)

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

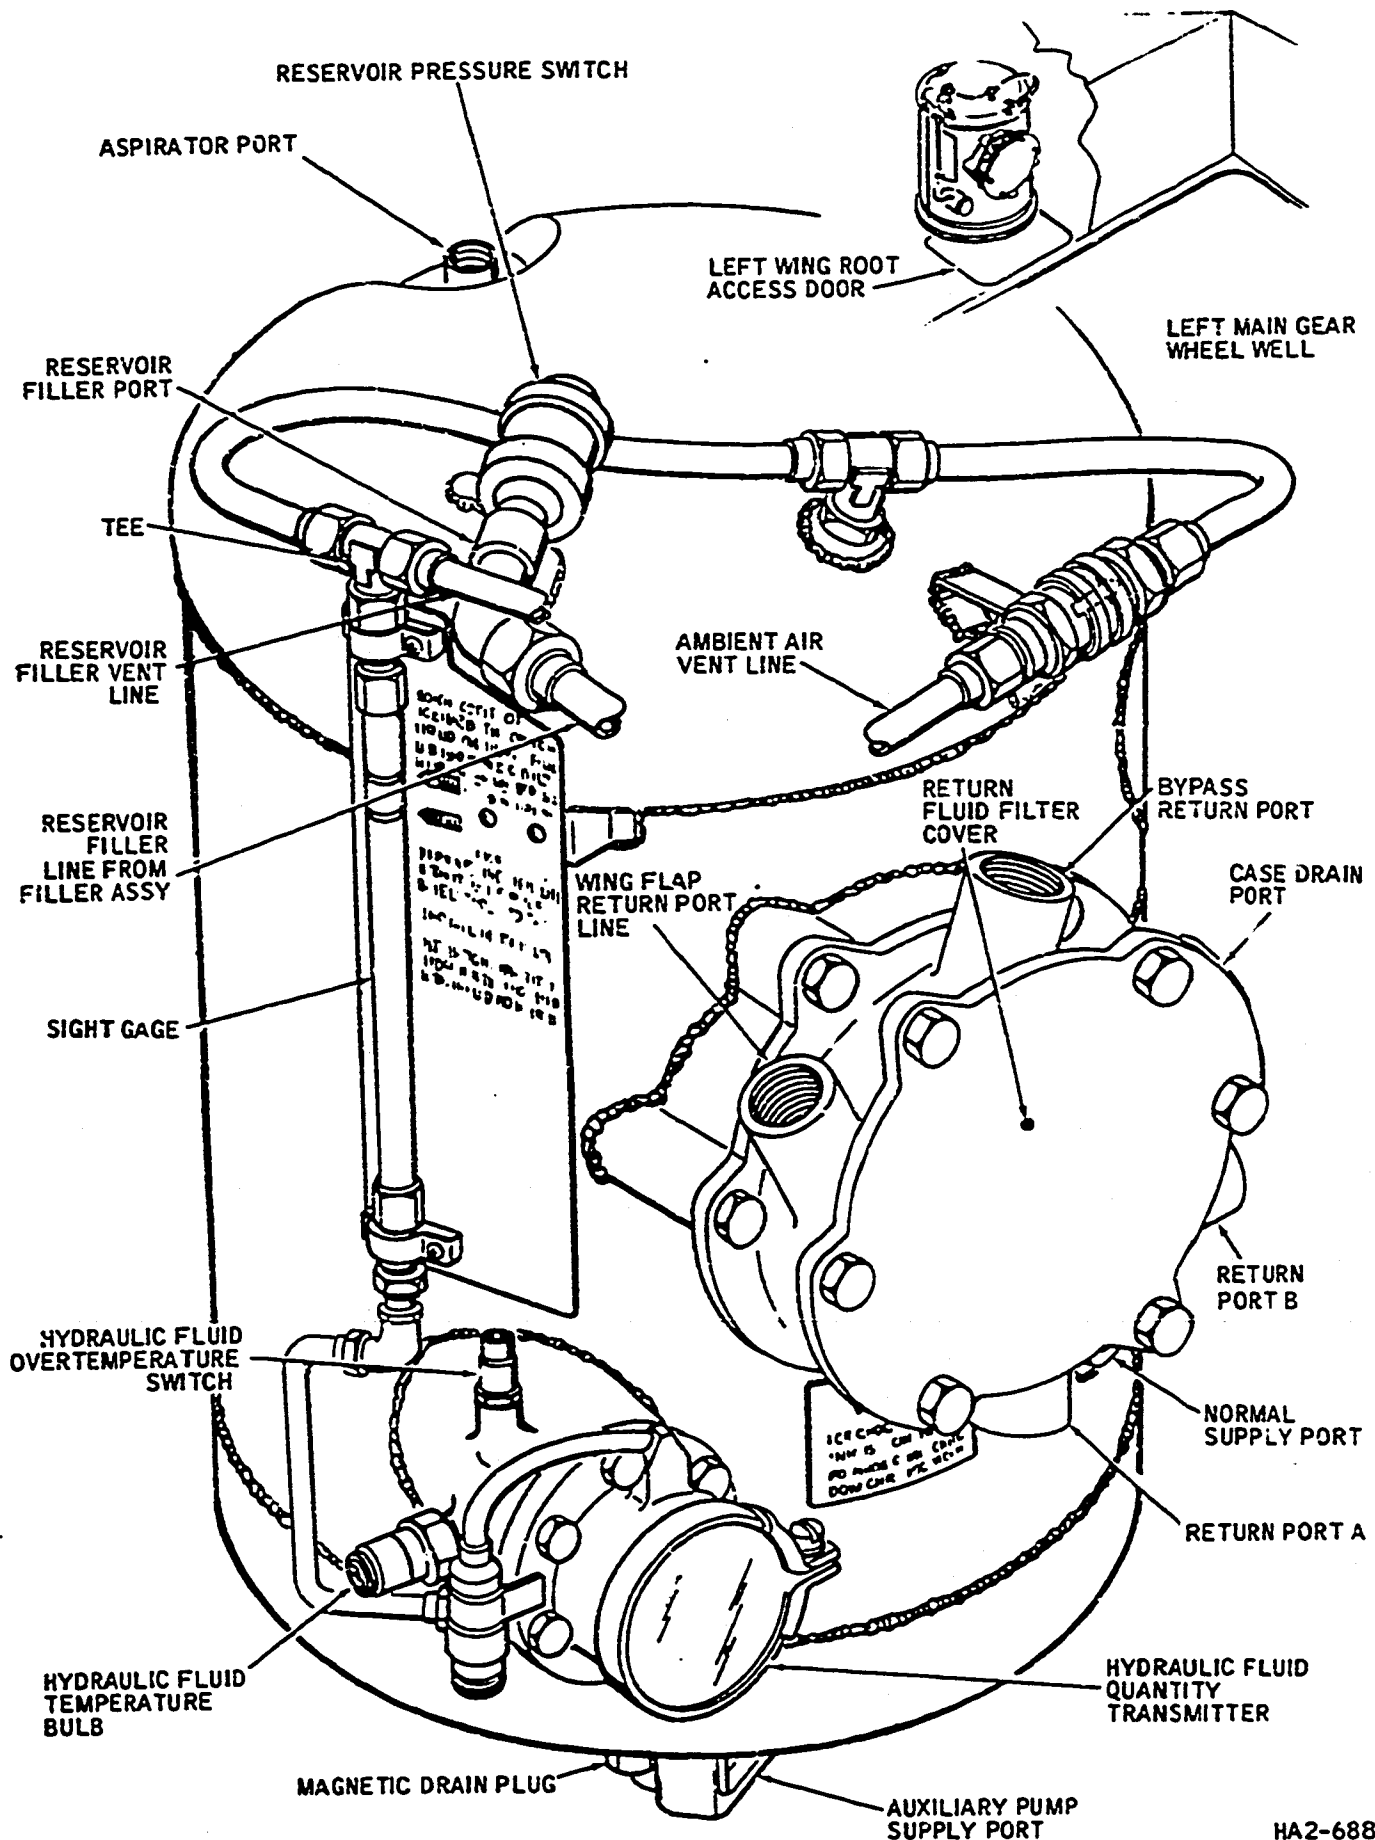

Hydraulic System Reservoir -- External View  
 (Airplanes N8960T, N8962T, N4863T and Subsequent)  
 Figure 3 (Sheet 2)

HA2-688

Aug 1/69

29-10-0  
 CODE 10  
 Page 10A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- flange on the reservoir. The return fluid filter cover fits into the open side of the manifold, and is attached to the outer manifold flange with six bolts to form a fluid-tight cover for both the manifold and the filter.
- (7) The return fluid filter is installed in the reservoir behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the return fluid filter cover holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to the engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
  - (8) A flanged adapter for the fluid quantity transmitter is welded to the reservoir below and to the left of the return ports manifold. The adapter is provided with two small port bosses for the hydraulic fluid temperature bulb and the hydraulic fluid overtemperature switch. The lower end of the sight gage connects to a third port in the adapter, while the top of the sight gage tees into a port at the top of the reservoir. An instruction plate is mounted behind the sight gage and the vacuum breaker check valve tees into the port at the top of the reservoir that is used by the sight gage.

**B. Hydraulic Reservoir Return Fluid Filter (See Figure 4.)**

- (1) The reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply. The filter is located behind the return ports manifold and is spring loaded to act as its own relief valve. On airplane N8961T access to the filter is by removing the return ports manifold. Removal of the return ports manifold necessitates disconnecting the return lines from the manifold and removal of six bolts which secure the manifold to the reservoir. The filter which is attached to the manifold is then withdrawn from the reservoir. On airplanes N8960T, N8962T and subsequent access to the filter is gained by removing the return filter cover from the return ports manifold by removal of six bolts. The filter is attached to the cover by a retaining spring, and is withdrawn from the reservoir when the cover is removed.
- (2) Externally, the filter consists of two perforated concentric tubes. The area between the tubes is closed by metal end caps which are bonded to each of the caps. Each gasket must be smooth and flat for proper sealing of the filter. The gaskets act as a static seal and a relief valve seat.
- (3) Internally, the filter has a 10-micron, resin-impregnated, convoluted paper-type filter element. The area of the filter element is approximately 1960 square inches. The filter is held in place by a retaining spring. One end of the spring is attached to an eyebolt located inside the return port's manifold. The spring passes through the center



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

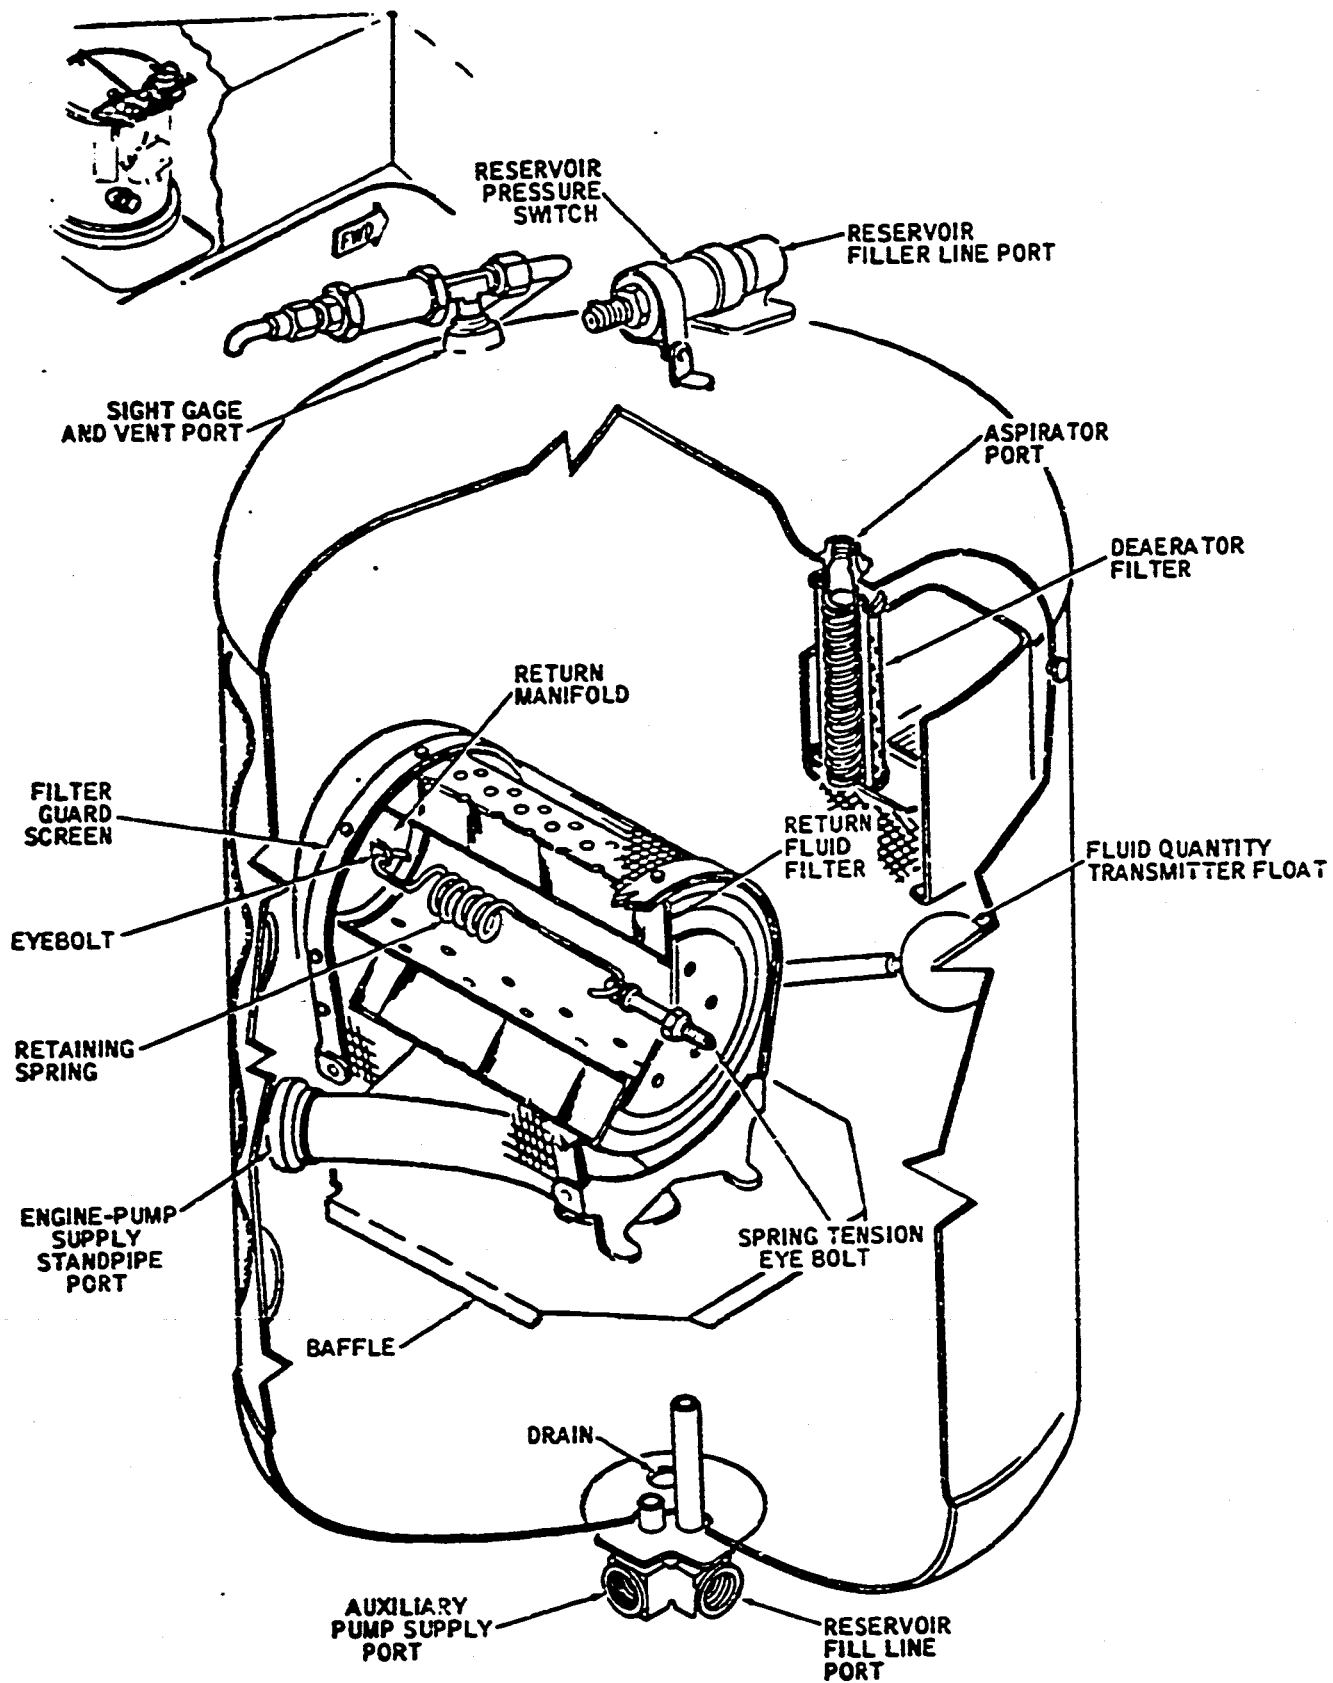

Hydraulic System Reservoir -- Cutaway View  
 Figure 4

HA2-689

29-10-0  
 CODE 10  
 Page 11

Aug 1/68

Printed in U.S.A.


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

chamber of the filter and is connected to another eyebolt. This eyebolt is secured to a large washer and plate by means of a self-locking nut. The washer seats on the rubber gasket which is bonded to the filter. The fluid enters the center chamber of the filter and passes through the inner tube of the filter to the filter element by means of perforation holes. Foreign matter is filtered out by the filter element, and the fluid leaves the element through perforation holes in the outer tube. When the element becomes saturated with foreign matter, the filter acts as its own relief valve and unseats at 20 to 25 psi above normal return pressure which allows fluid to bypass the filter and enter the reservoir.

C. Hydraulic Reservoir Air Pressure Regulator-Aspirator (See Figure 5.)

- (1) The reservoir air pressure regulator-aspirator is a jet-type air pump, regulated by a pressure-sensitive shutoff valve. The unit pressurizes the hydraulic reservoir with air to the operating pressure range of 30 to 35 psi. The regulator-aspirator is located on the top inboard side of the reservoir and is mounted on the reservoir retainer ring. Access to regulator-aspirator is through the left wing root access door.
- (2) The regulator-aspirator assembly consists of a main aspirator body and a regulator housing. The main aspirator body has two inlet ports and one outlet port. The ports are permanently identified inlet, outlet, and air inlet. The plug for an air check valve is located near the outlet port. A chemically treated paper filter is installed near the aspirator body air inlet port in the air line from the pressurized cabin area. A metal screen filter is installed on the check valve which tees into the aspirator body air inlet port.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

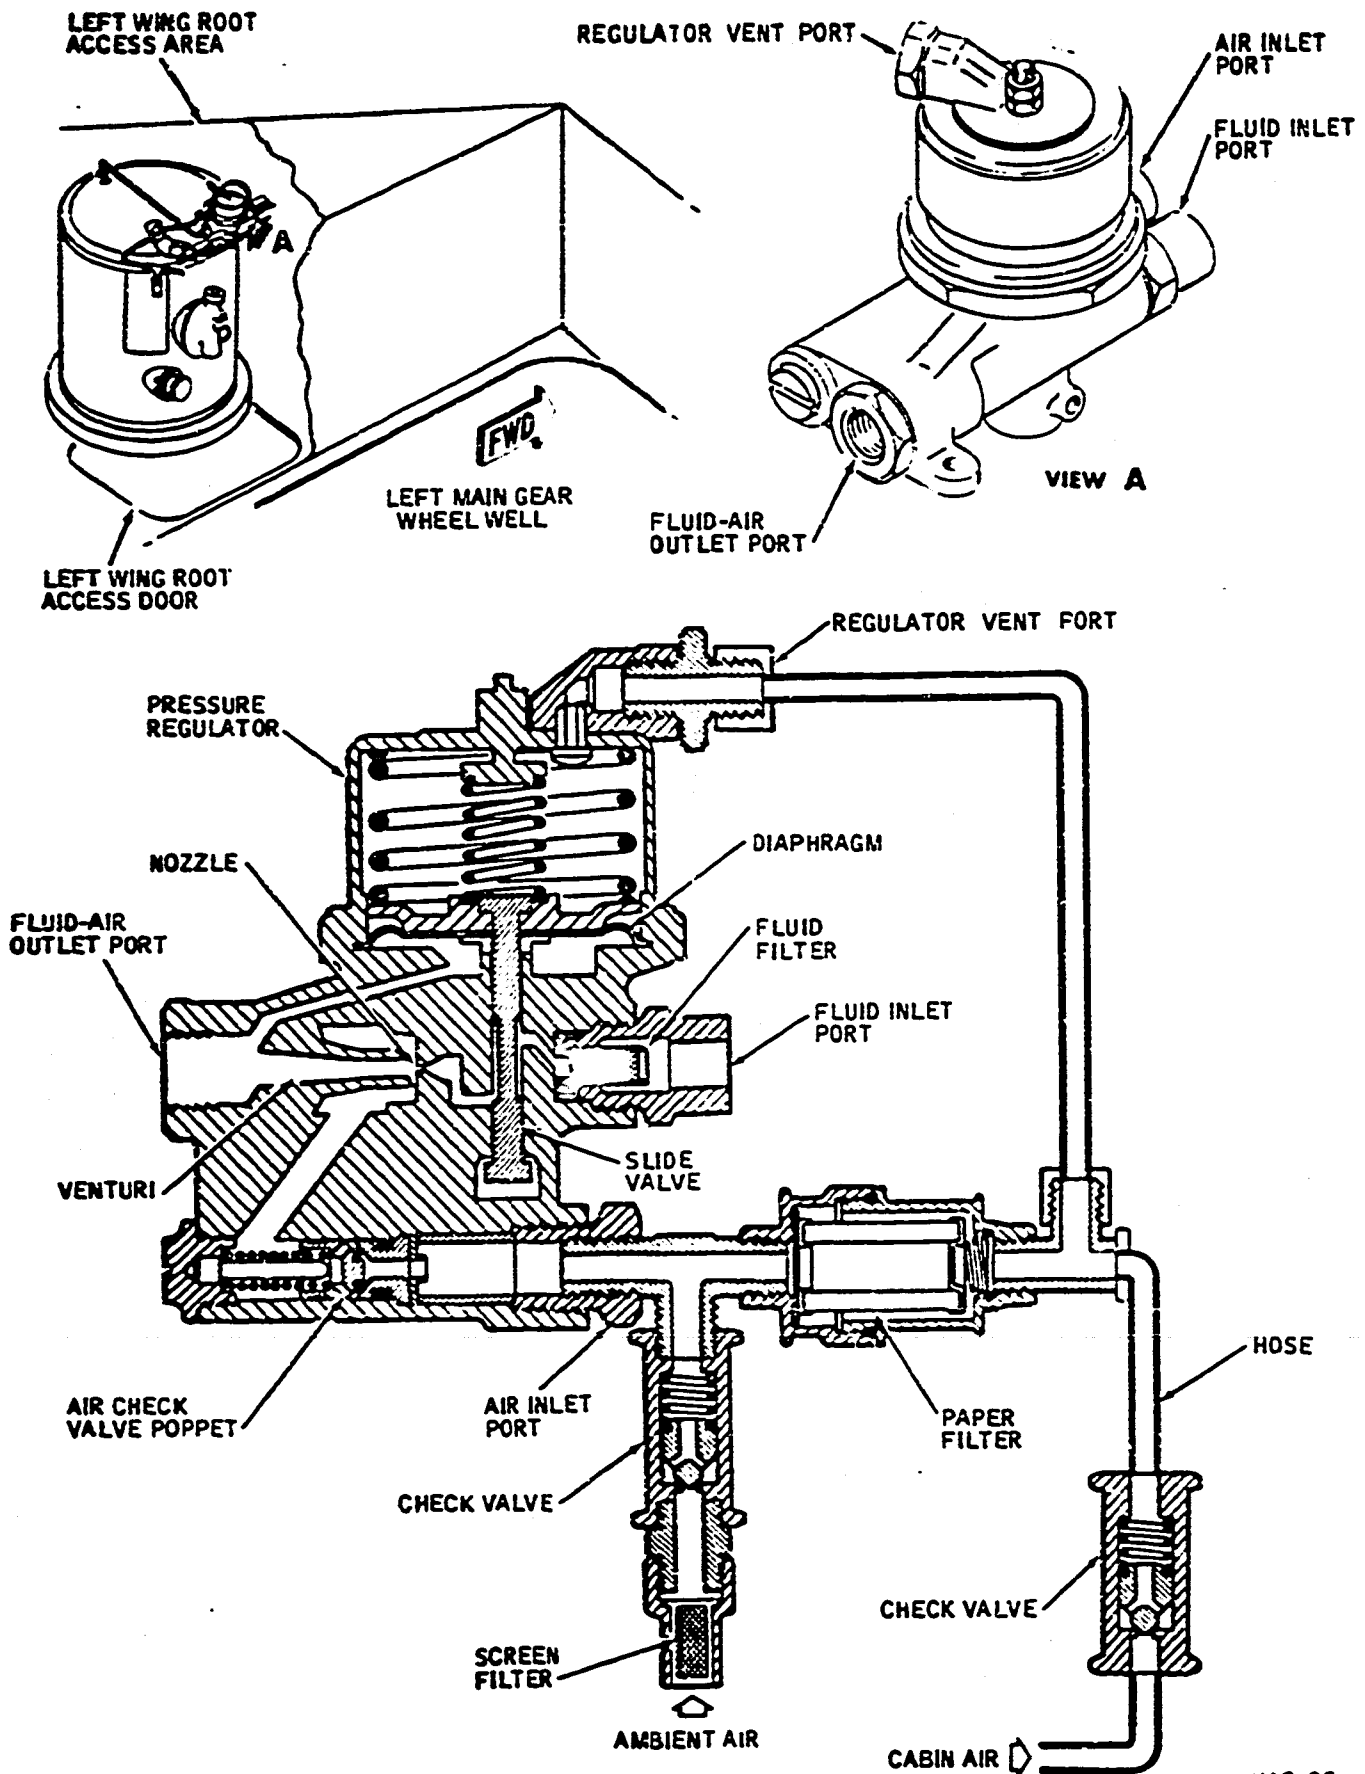

Reservoir Air Pressure Regulator-Aspirator -- Schematic  
 Figure 5

HA2-25

29-10-0  
 CODE 10  
 Page 13

Jun 15/67

Printed in U.S.A.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The reservoir air pressure regulator-aspirator operates basically with a jet pump action which is regulator controlled. Fluid enters the assembly through the fluid inlet port where it is filtered and then ported through the valve assembly of the regulator. During normal operation, when air pressure at the outlet port is under 30 psi, the valve is open porting fluid to the nozzle. The orifice in the nozzle sprays the fluid through the venturi of the outlet port, creating a vacuum in the chamber around the venturi. When the vacuum becomes great enough to create a pressure differential of approximately 1 psi, ambient air opens the air check valve. The air is ported to the chamber around the venturi and is siphoned, with the fluid, through the outlet port.
- (4) Hydraulic fluid inlet pressure at the engine-driven hydraulic pumps is improved at high altitude operation by supplying pressurized filtered cabin air to the reservoir regulator-aspirator instead of ambient outside air. Part of the inlet air is diverted by a tee fitting to the regulator chamber to provide a more positive regulating force on the diaphragm that would be obtained with low ambient pressures. The chemically treated paper filter, installed in the regulator-aspirator air supply line from the cabin, removed smoke tars and impurities from the pressurized cabin air. The steel mesh screen filter, installed on the check valve which tees into the regulator-aspirator air inlet port downstream of the paper filter, removes dust, dirt, and foreign particles from the ambient air and serves as a standby to supply filtered air in event the paper filter is clogged.
- (5) As pressure in the reservoir builds up, back pressure is bled from the outlet port to the diaphragm chamber. The reaction on the diaphragm begins to move the slide valve to cut off the fluid flow. At 30 to 35 psi of back pressure, the diaphragm completely closes the slide valve, cutting off the flow of fluid. If there is a regulator malfunction, the aspirator stalls when outlet pressure reaches a maximum of 40 psi.
- (6) The aspirator is capable of pressurizing the reservoir to 30 to 35 psi in approximately 4 minutes at altitudes from sea level to 15,000 feet, when fluid is ported through the nozzle at 0.5 gpm at 3000 psi.


D. Regulator-Aspirator Air Filters (See Figure 6.)

- (1) The regulator-aspirator air filters remove ambient and cabin air impurities from the air which is used to pressurize the main hydraulic system reservoir. The filtering system is composed of two filters. One of which is a paper element filter, installed directly in the cabin air supply line near the regulator-aspirator. The other filter is a fine mesh, screen-type filter, installed on a check valve and positioned at right angles to the regulator-aspirator air inlet port. The screen filter, in addition to providing an immediate supply of ambient air during ground operations, serves as a standby air inlet to preclude air starvation of the regulator-aspirator in the event the paper element filter becomes clogged.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

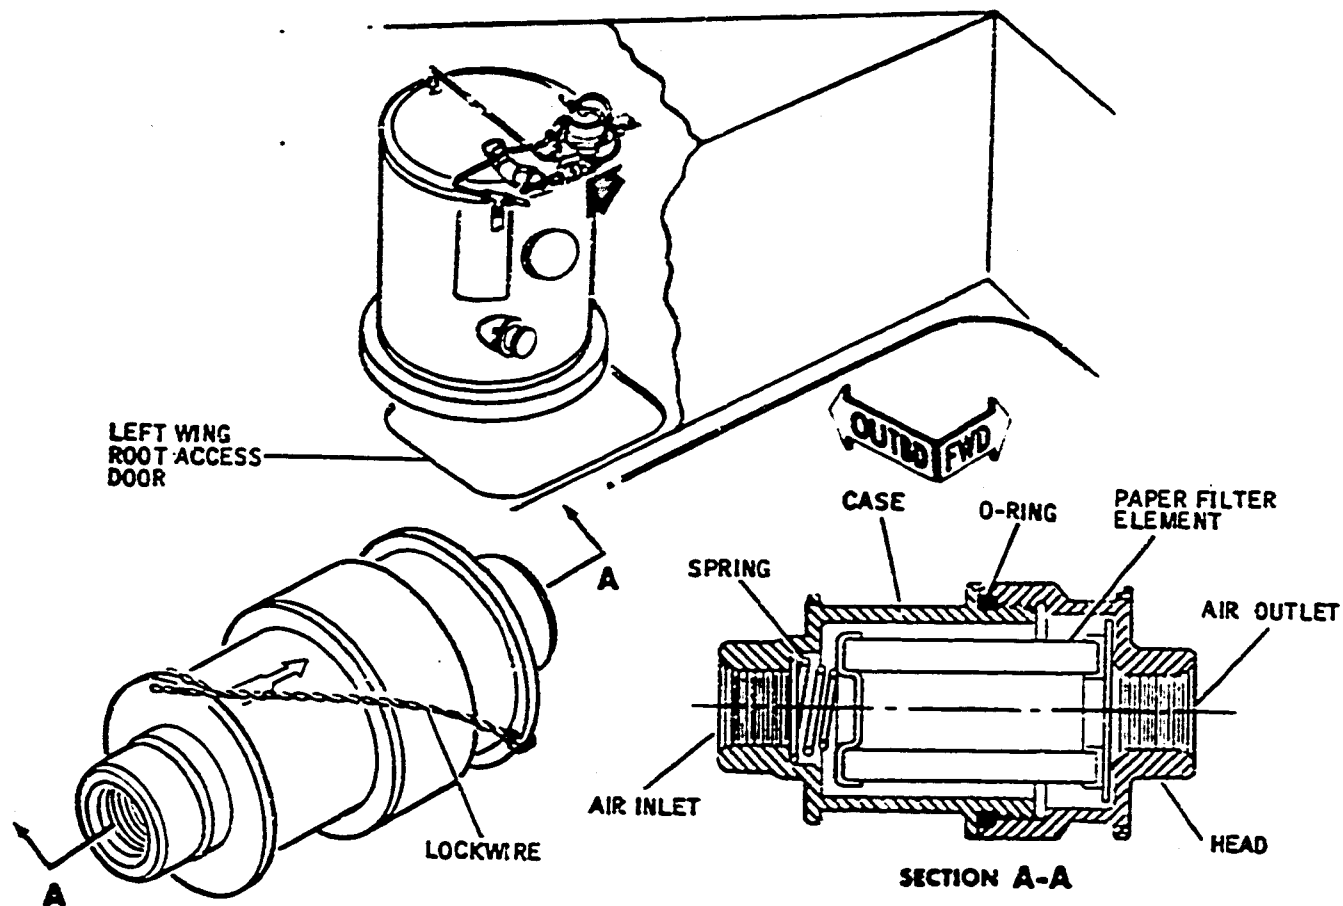

PAPER ELEMENT FILTER

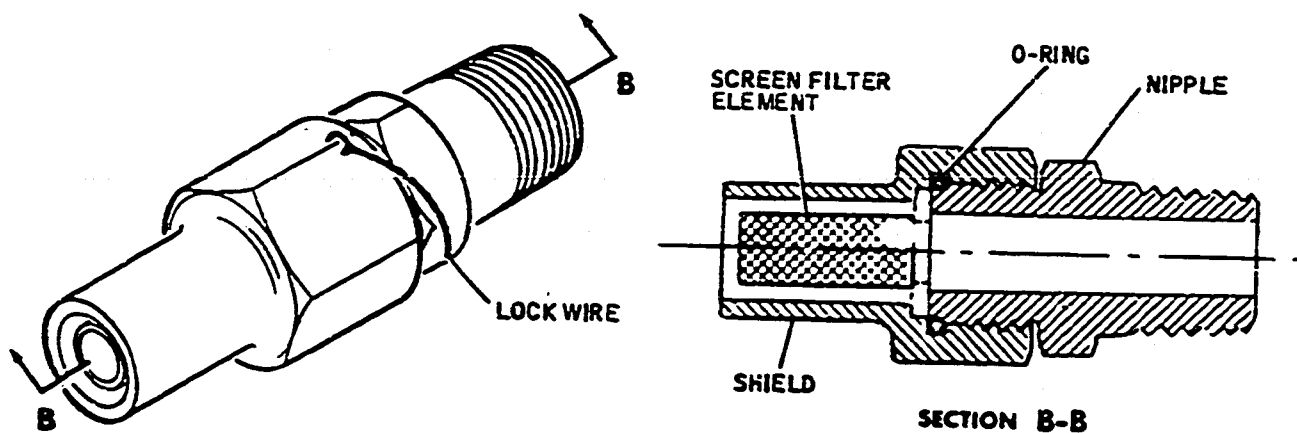

SCREEN FILTER

Regulator-Aspirator Air Filters -- Cutaway View  
 Figure 6

HA2-35

29-10-0  
 CODE 10  
 Page 15

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

**E. Hydraulic Reservoir Relief Valve (See Figure 7.)**

- (1) The reservoir relief valve and the air pressure aspirator-regulator keep the reservoir pressurized to normal operating range. The valve relieves excess air pressure which may build up in the reservoir through thermal expansion in the system. The valve has an inlet port and an outlet port and consists, internally, of an inlet port seat and a spring-loaded poppet.
- (2) The relief valve is installed in the overboard vent line downstream of the hydraulic reservoir air bleed valve. In the event that excess pressure builds up in the reservoir, the poppet will start to relieve at 45 (+5, -0) psi. Full flow of 10 gpm is attained at 60 psi maximum. The poppet reseats at 90 percent of the opening pressure.

**F. Hydraulic Reservoir Air Bleed Valve (See Figure 8.)**

- (1) The hydraulic reservoir air bleed valve and pressure gage are located on the aft side of the rear spar in the left main gear wheel well, inboard of the hydraulic reservoir air chamber. The bleed valve and gage are installed in the overboard vent line, between the reservoir air chamber and the reservoir relief valve.
- (2) The bleed valve is used to relieve the reservoir air pressure prior to disconnecting lines or components in the hydraulic system. The pressure gage provides a ready indication of the hydraulic reservoir air pressure and is used in conjunction with the bleed valve to indicate the air pressure status.
- (3) The air inflation valve is installed on the same fitting as the bleed valve and pressure gage. The air inflation valve is used to manually charge the reservoir with air or dry nitrogen.




**G. Hydraulic Reservoir Vacuum Breaker Check Valve (See Figure 9.)**

- (1) The hydraulic reservoir vacuum breaker check valve is installed on the regulator-aspirator mounting bracket, and connects to the tee fitting at the top of the reservoir. The valve is vented to ambient air. The purpose of this valve is to maintain atmospheric pressure in the reservoir, allowing hydraulic fluid to flow to the auxiliary hydraulic pump in the event of a failure of the reservoir pressurization system. The failure, or breakdown, of the pressurization system could cause a fluid starvation at the auxiliary hydraulic pump because of vacuum buildup in the reservoir.

**H. Hydraulic Reservoir Air Chamber**

- (1) The hydraulic reservoir air chamber is a small, cylindrical tank with a capacity of 700 cubic inches. It has two ports, an inlet port at the bottom of the chamber and an outlet port in one end of the chamber.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

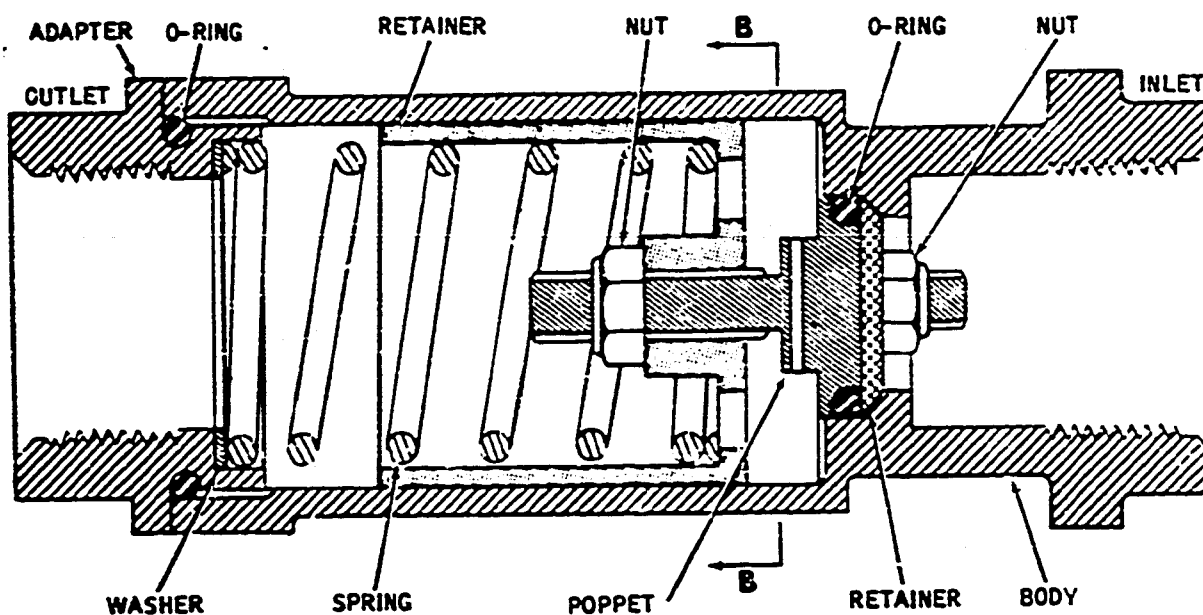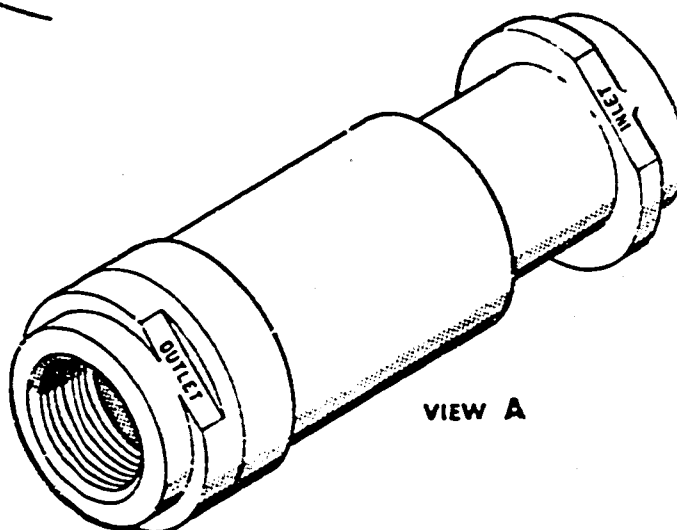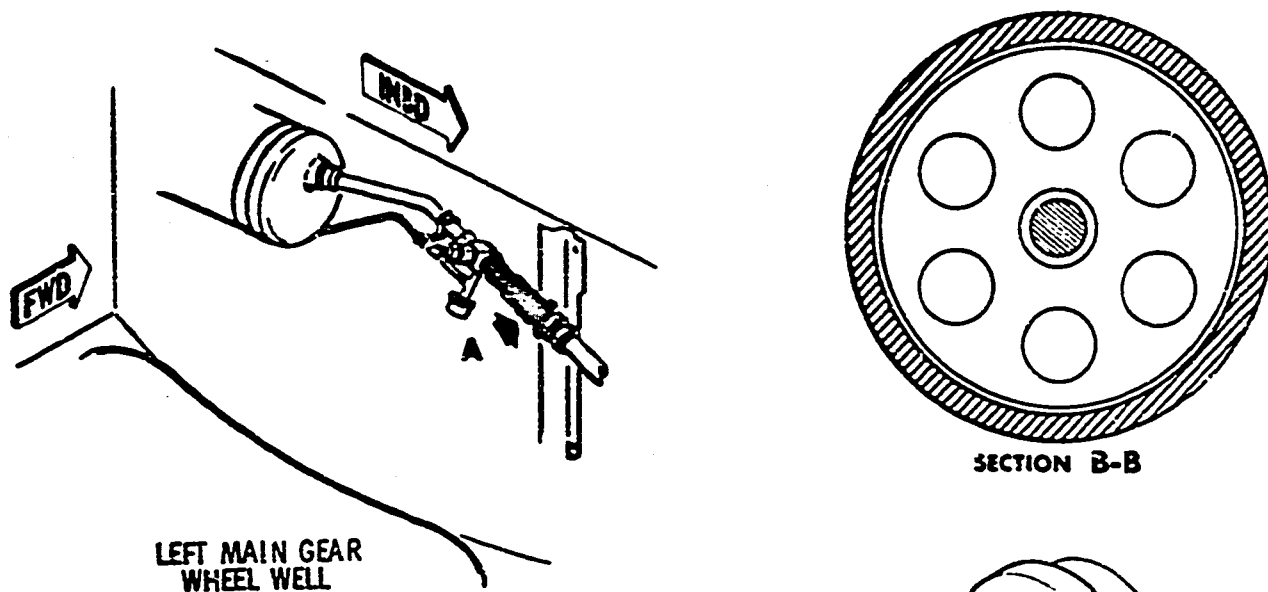

Hydraulic Reservoir Relief Valve  
 Figure 7


HA2-17

29-10-0  
 CODE 10  
 Page 17

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

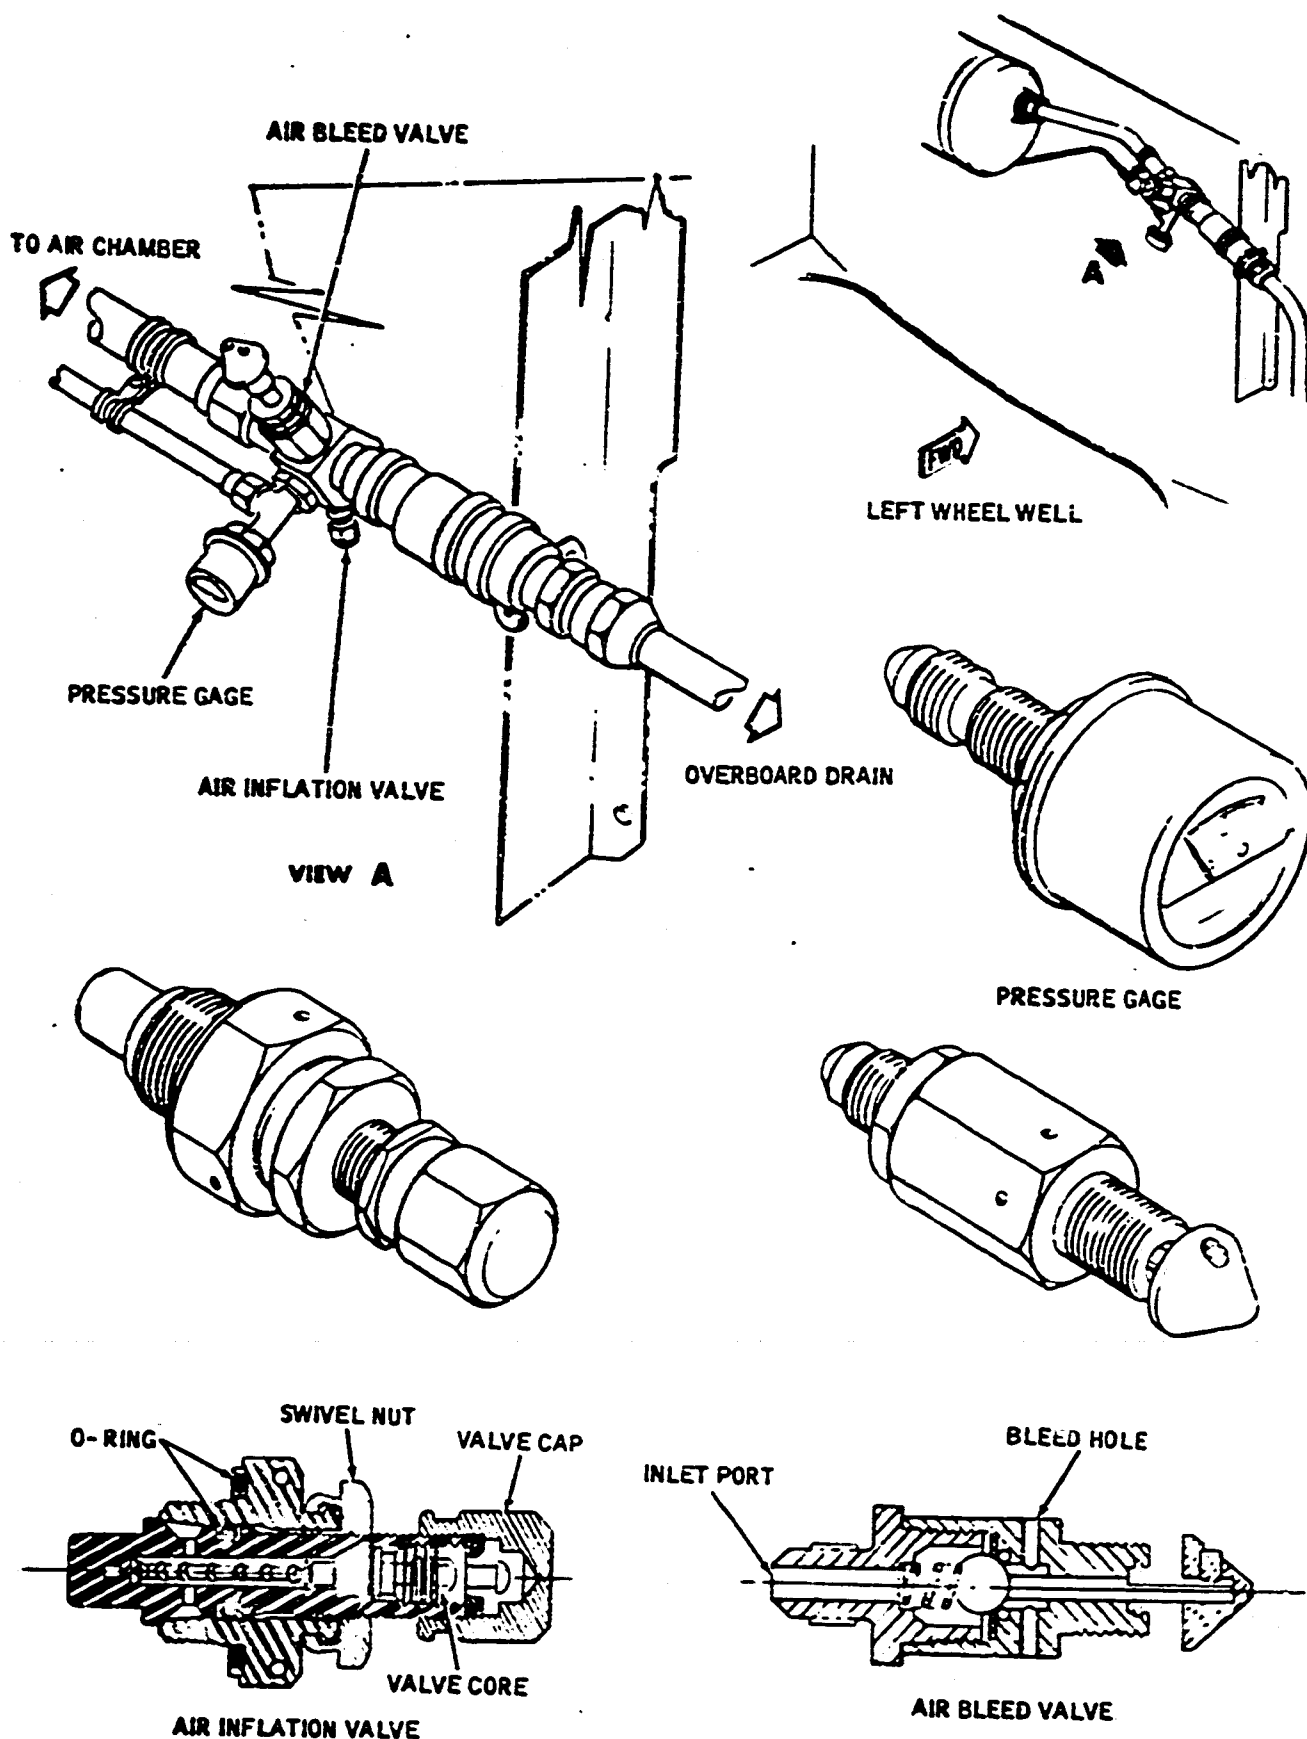


HA2-32

Reservoir Air Bleed Valve, Air Inflation  
 Valve, and Pressure Gage  
 Figure 8



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

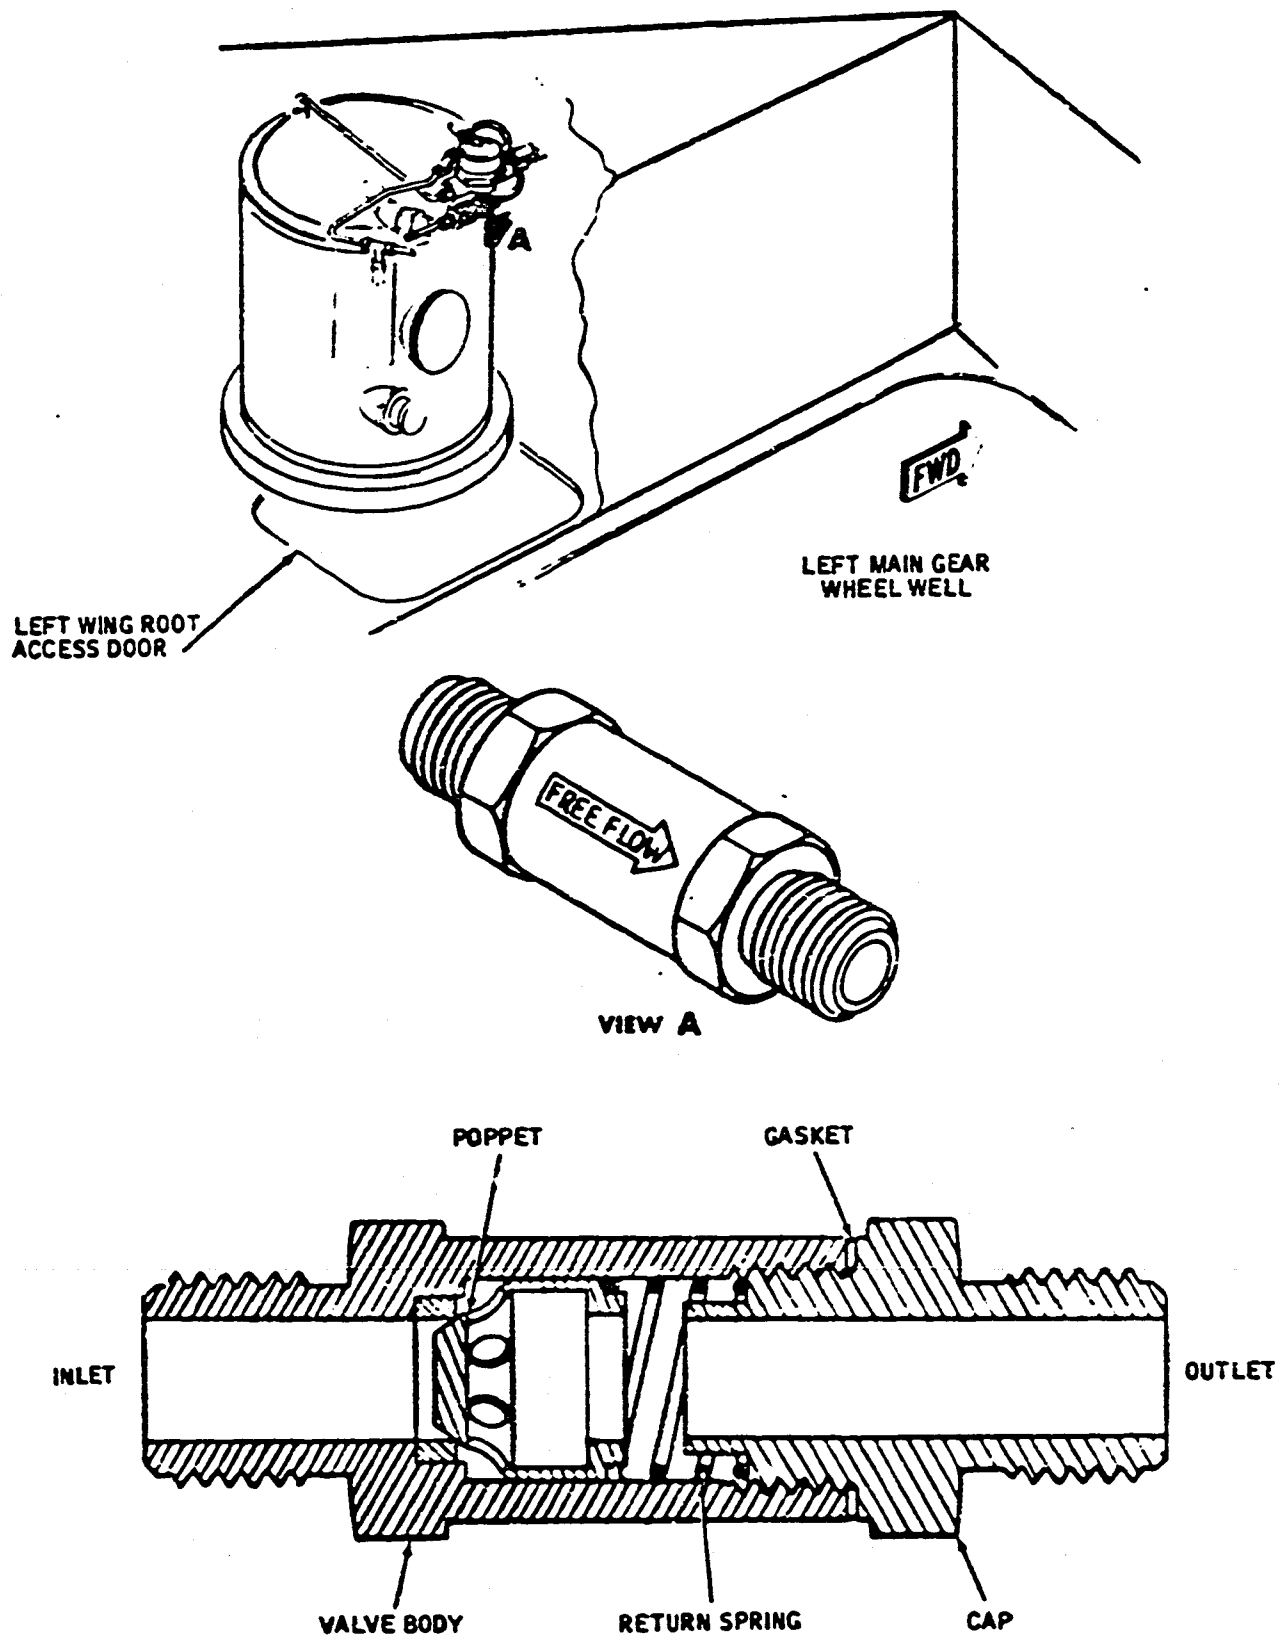

Hydraulic Reservoir Vacuum Breaker Check Valve  
Figure 9

Jun 15/67

Printed in U.S.A.

HA2-33

29-10-0  
CODE 10  
Page 19

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

The inlet port mounting boss is fitted with a drain plug. The air chamber is installed on the aft side of the rear spar in the left main gear wheel well, inboard and above the hydraulic reservoir filler assembly. Access to the air chamber is through the left main gear inboard door.

- (2) The air chamber provides for greater fluid capacity in the hydraulic reservoir by providing air and foam space for the reservoir in a separate container. Air pressure in the chamber is maintained by the regulator-aspirator and the air relief valve. The air pressure in the chamber and reservoir can be relieved, when desired, by the air bleed valve located downstream of the chamber. The air chamber is mounted higher than the reservoir filler assembly, to prevent overfilling of the reservoir from reducing the available air space and to prevent fluid from being vented overboard through the reservoir relief valve.


I. Hydraulic Reservoir Port B Return Check Valve (See Figure 10.)

- (1) The reservoir port B return check valve is installed in port B of the reservoir to prevent reverse flow of hydraulic fluid from the reservoir to the return line. The check valve is located on the reservoir in the left wing root and is accessible through the left wing root access door.
- (2) Externally and internally, the port B check valve is a standard-type check valve with a 1500-psi rating. A nominal pressure of approximately 8 psi unseats the poppet, permitting fluid to flow through the valve. When the reservoir pressure exceeds the return line pressure, the poppet will seat and reverse fluid flow will be prevented.


J. Engine Hydraulic Fire Shutoff Valve (See Figures 11 and 12.)

- (1) The engine hydraulic fire shutoff valve is a gate-type, mechanically controlled valve, installed in the supply line of each engine-driven hydraulic pump. The engine hydraulic fire shutoff valve is actuated from the flight compartment to prevent the flow of hydraulic fluid into the engine section.
- (2) The engine hydraulic fire shutoff valve is mounted on a 2-piece channel bracket which is installed inside the wing leading edge, aft of the firewall of each inboard pylon. Access to the valve is through the access door located on the lower side of the wing leading edge, outboard of either the left or right inboard pylon. Each valve is located approximately 30 inches inboard of the access door.
- (3) Internally, the valve consists of a valve arm, valve arm link, cam plate, and slide blade. The valve arm link attaches to the valve arm and is allowed to swivel through an arc in relation to the valve arm. The link has a stop that will contact the arm when the two have traveled to the valve closed, full overtravel position. In the full open pretravel position, the link contacts the arm stop.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

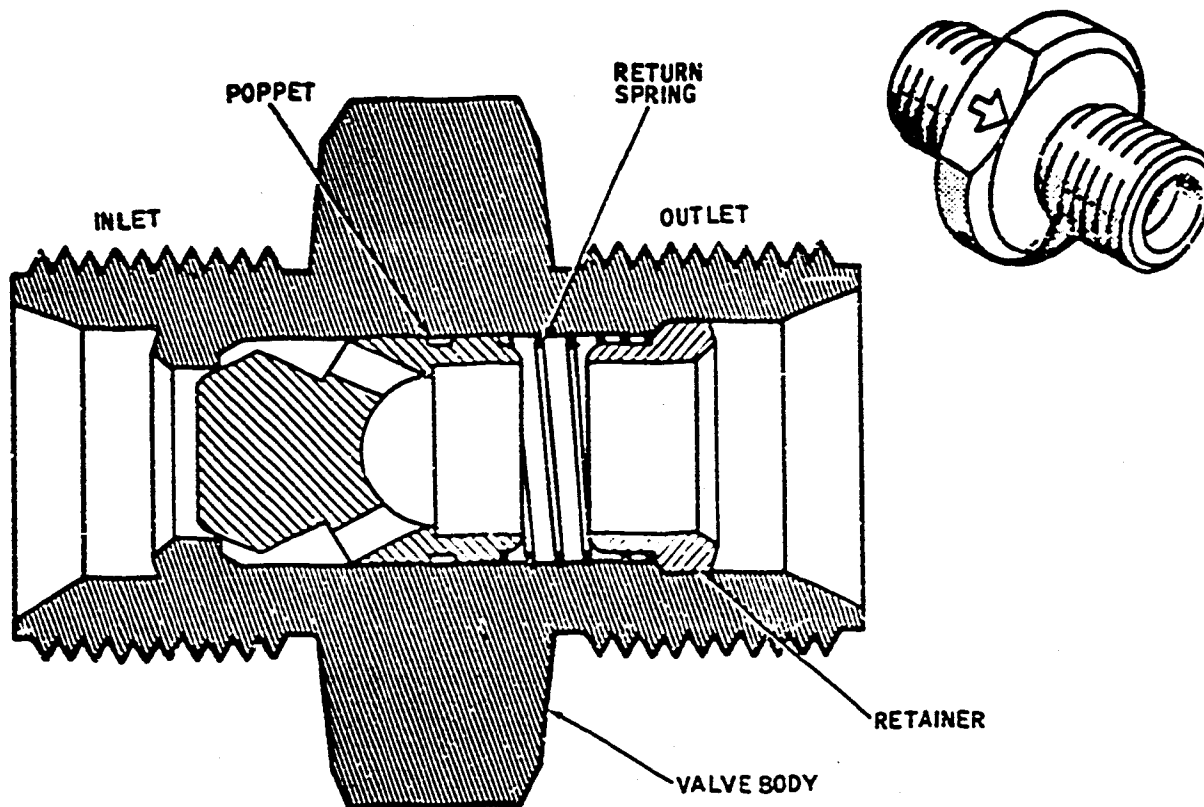

MINIATURE CHECK VALVE

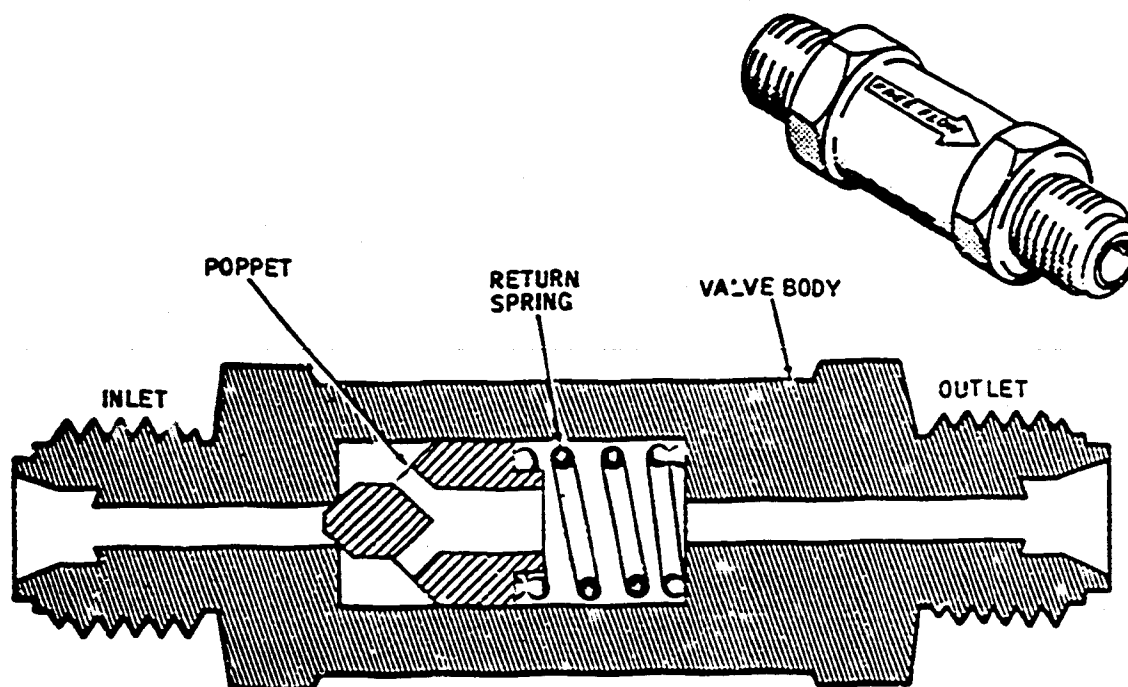

STANDARD CHECK VALVE

HA2-18A


Hydraulic Check Valves -- Typical  
 Figure 10

Oct 1/67

Printed in U.S.A.

29-10-0  
 CODE 10  
 Page 21

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

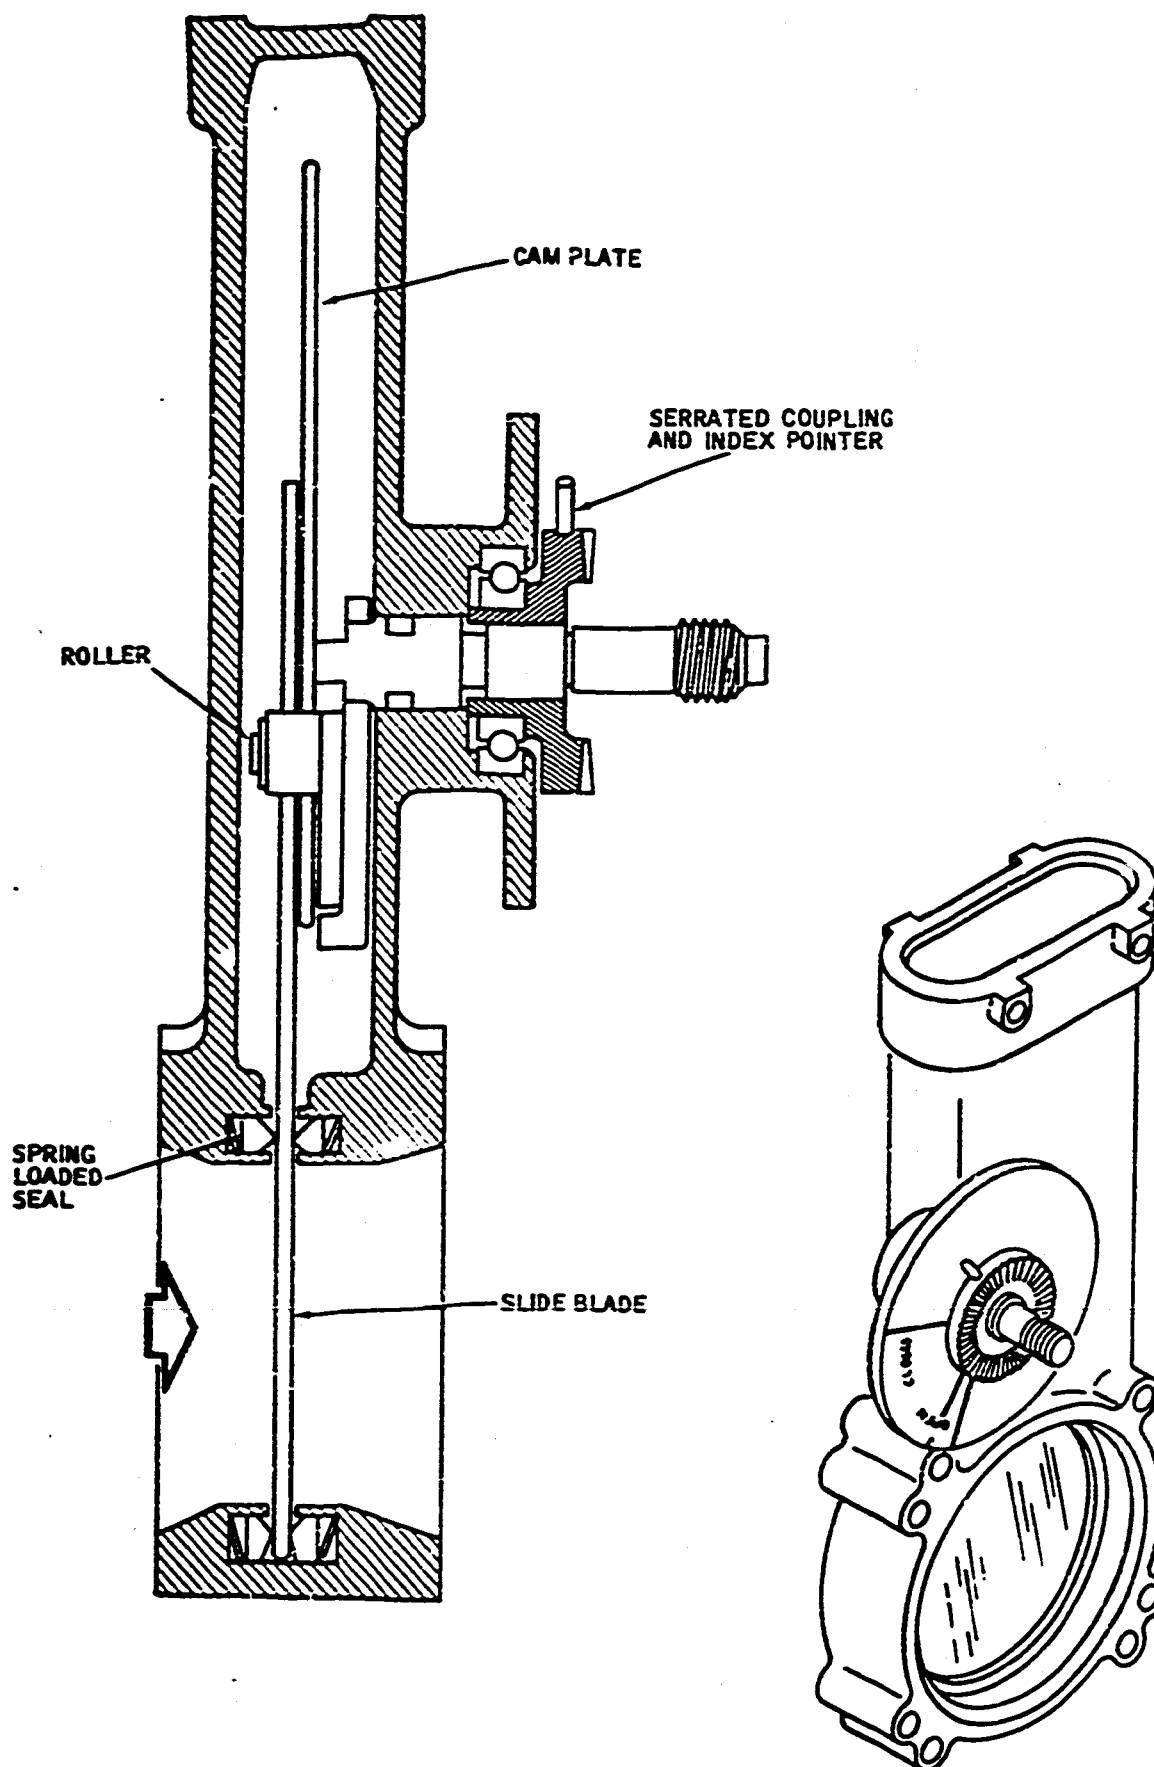

Engine Hydraulic Fire Shutoff Valve -- Schematic  
Figure 11


29-10-0  
CODE 10  
Page 22

Printed in U.S.A.

HA2-2209

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

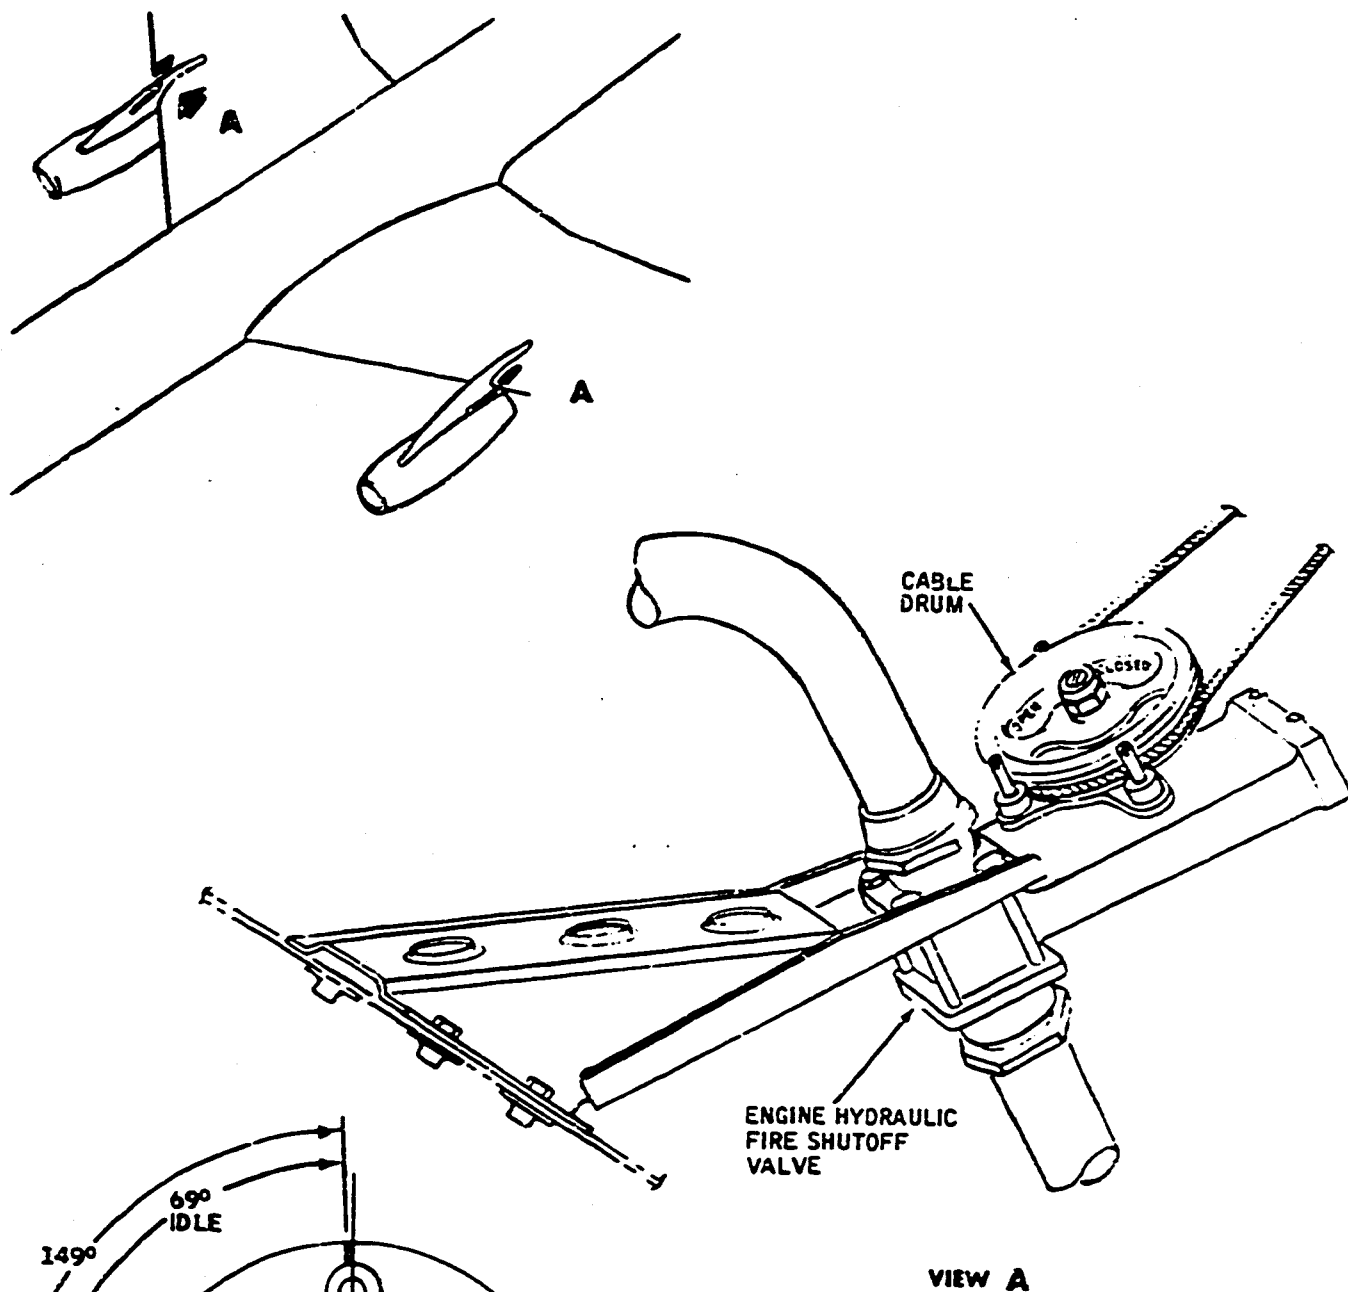

VALVE POSITION DIAGRAM


Engine Hydraulic Fire Shutoff Valve  
 (Airplanes N8960T-N8962T)  
 Figure 12 (Sheet 1)

Oct 15/68

Printed in U.S.A.

HA2-22  
 29-10-0  
 Code 10  
 Page 22A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

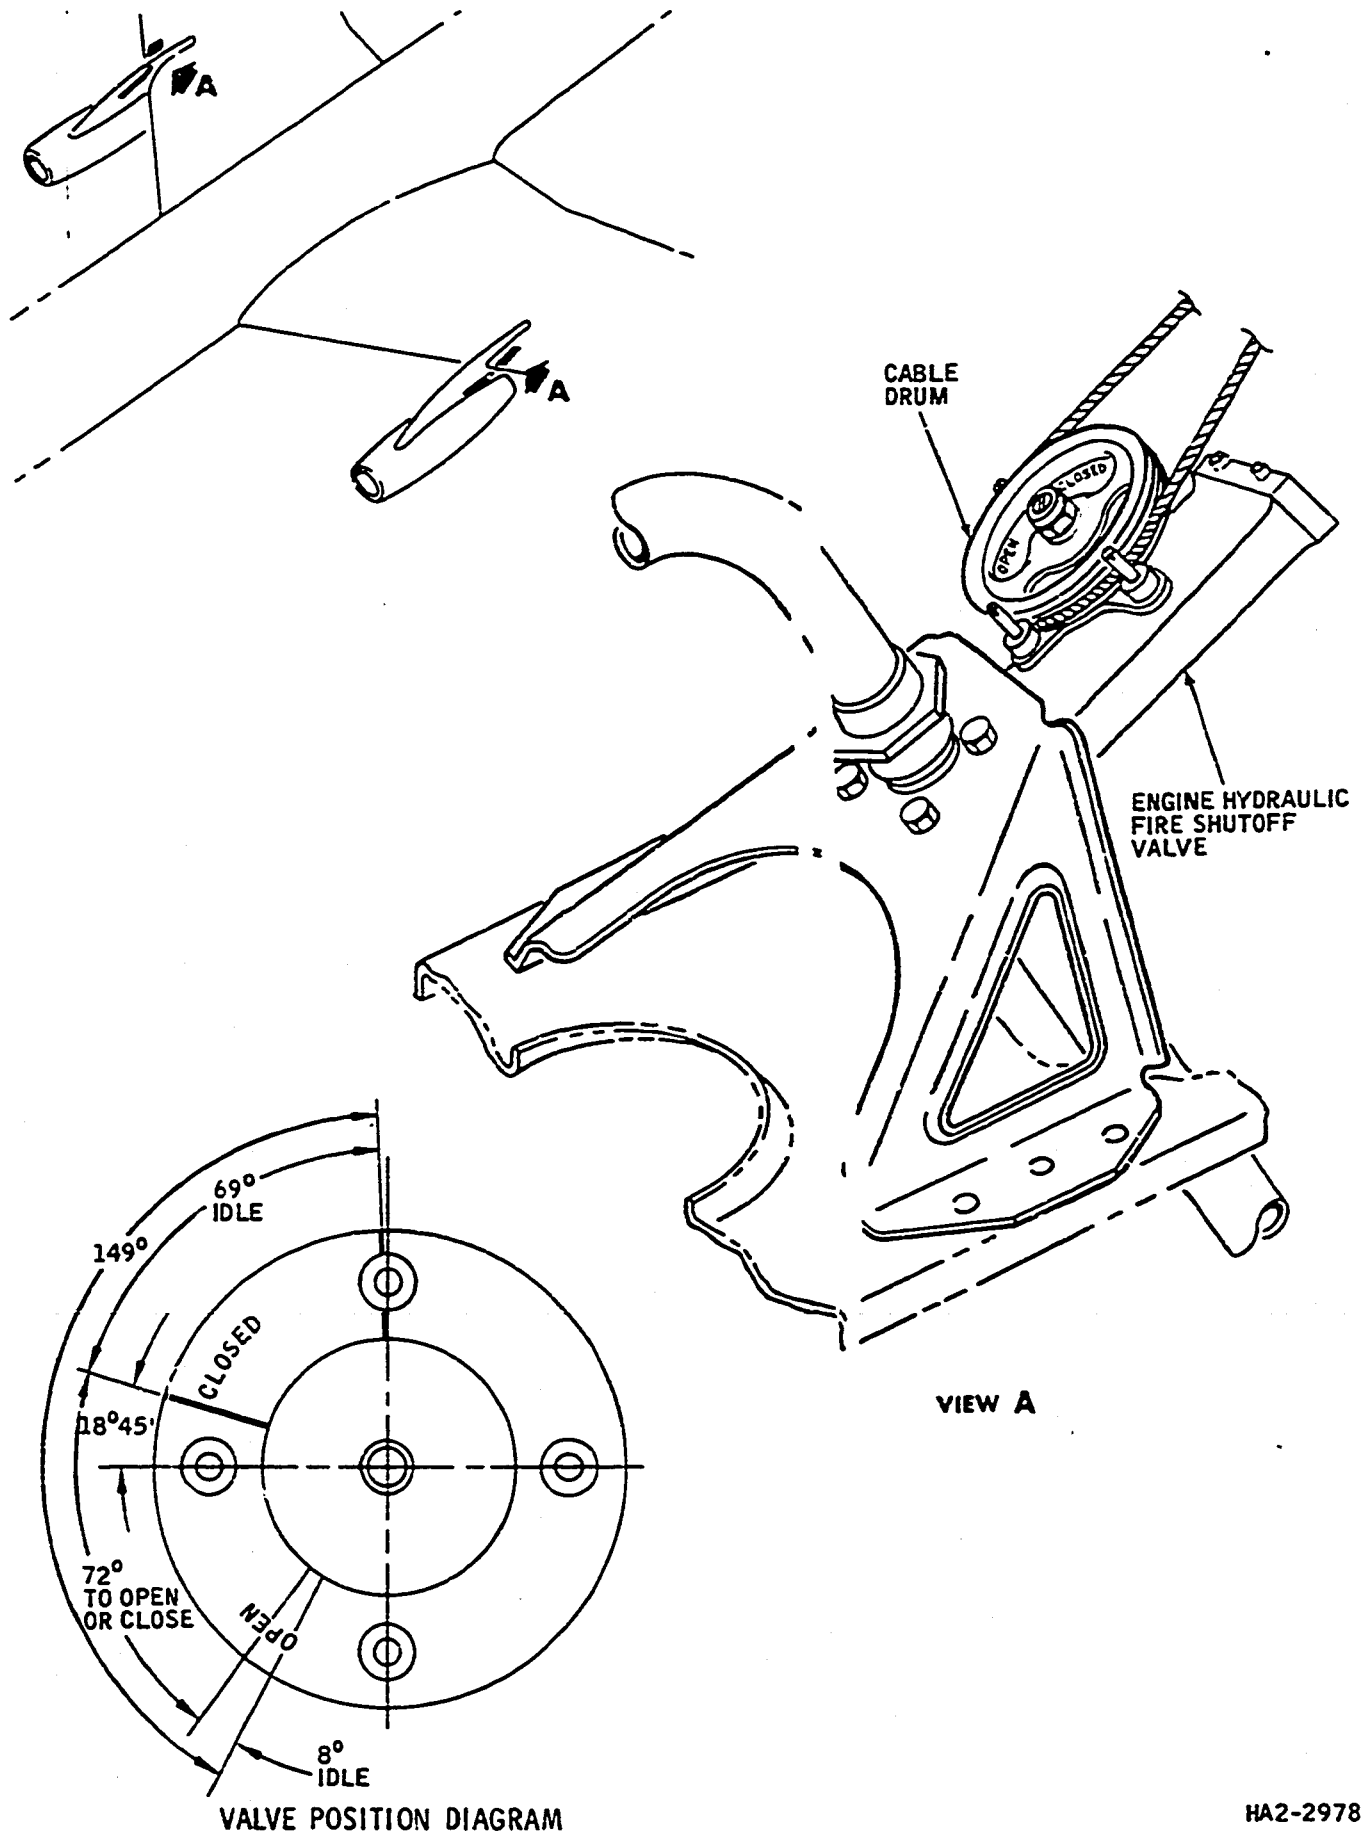

Engine Hydraulic Fire Shutoff Valve  
 (Airplane N4863T and Subsequent)  
 Figure 12 (Sheet 2)

HA2-2978

Aug 1/69

29-10-0  
 CODE 10  
 Page 23




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) A roller attached to the end of the link rides in, and extends through, a J-shaped slot in the cam plate. The rotation of the valve arm causes the link roller to follow the cam slot, allowing the arm and link to move through independent arcs.
- (5) The slide blade (gate of the valve) is slotted near the one end and also receives the link roller extending through the cam slot. The slide blade is positioned parallel to the cam plate and is guided by two grooves in the housing. This will allow the blade to open or close through porting of the valve by the action of the arm and link. The cam plate is pinned to the valve shaft, securing it rigidly in two positioning grooves in the housing. A pin-indicator is provided to relate valve position to a reference plate placarded open and closed.
- (6) The engine hydraulic fire shutoff valves are cable actuated by the fire control handles, located on the overhead switch panel in the flight compartment. When the fire control handle for either inboard engine is moved, the cable system rotates the drum which is attached to the corresponding shutoff valve shaft. This action extends the valve blade into the fluid passage to block the flow of fluid. The valve operates from open to close by clockwise rotation of the cable drum. The valve gate will idle during the first 8 degrees of rotation of the cable drum, and then will close in the next 72 degrees. The cable drum will continue to rotate the shaft for an additional 69 degrees after the gate valve is closed, locking it overcenter. Total travel of the cable drum is 149 degrees.

K. Engine-Driven Hydraulic Pump (See Figure 13.)

- (1) A variable-displacement, pressure-compensated, engine-driven hydraulic pump is installed on each inboard engine. The pump incorporates a solenoid bypass feature for reducing the output of the pump. The bypass valves are controlled by two engine hydraulic pump switches in the flight compartment. The switch for the hydraulic pump on engine No. 2 is placarded left, on and bypass. The switch for the hydraulic pump on engine No. 3 is placarded right, on and bypass. When either of the two engine hydraulic pump control switches is placed in the bypass position, the bypass valve solenoid for that hydraulic pump is energized and the pump pressure decreases to approximately 300 ( $\pm 100$ ) psi. When either switch is in the on position, the control circuit to the corresponding bypass valve is open and the hydraulic pump operates normally in the pressure range of 2850 to 3050 psi. The pump provides a continuous, nonpulsating flow of hydraulic fluid, under pressure, to the hydraulic manifolds for distribution throughout the hydraulic system. Each of the engine-driven pumps is located on the accessory drive pad of the inboard engines. These pumps are accessible through the doors on the right side of the nacelles.
- (2) Three case drain ports are provided: two are on the yoke assembly housing, and the third is on the casing for the pressure control valve, adjacent to the inlet port fitting. The case drain port on top of the yoke assembly housing is full of fluid at all times. This drain

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

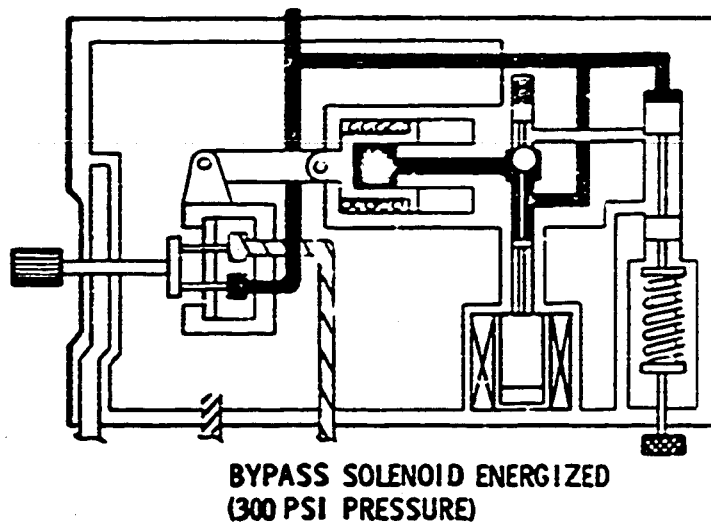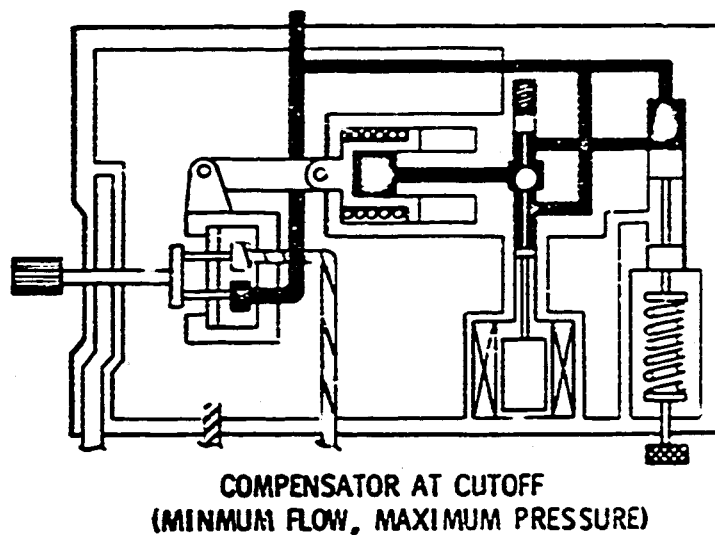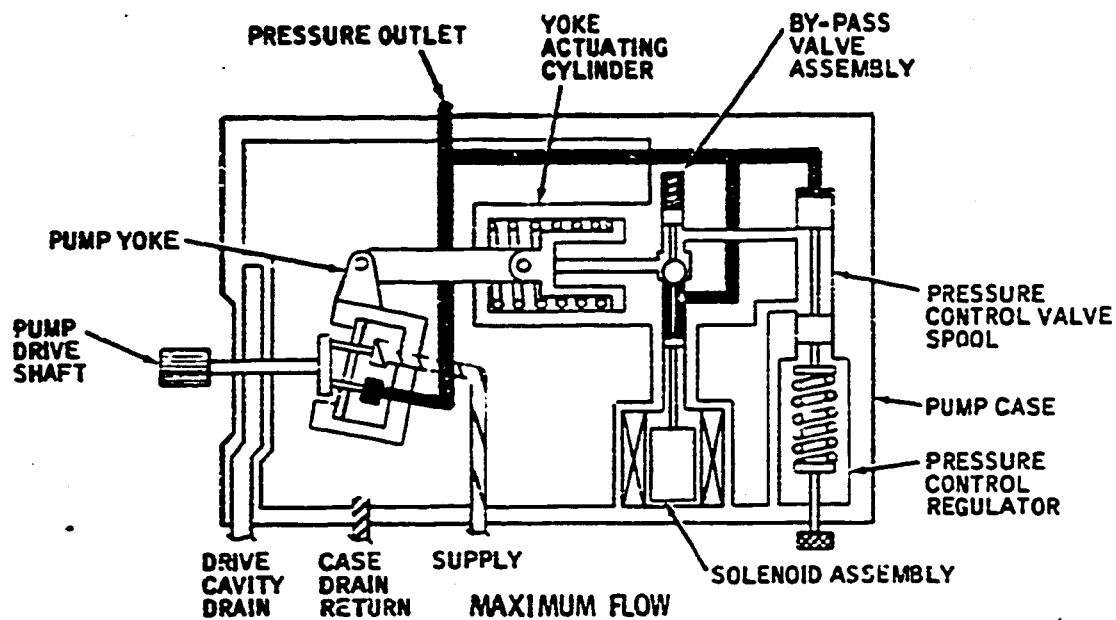

■ PRESSURE  
 ▨ CASE DRAIN  
 ▧ SUPPLY  
 □ DRIVE CAVITY DRAIN

HA2-837

Engine-Driven Hydraulic Pump Pressure  
 Flow -- Schematic  
 Figure 13

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 10  
 Page 25



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

connection is ported back to the low-pressure return port at the reservoir. The inlet port fitting is on top of the pump housing and the outlet port fitting is opposite to it on the bottom of the housing.

- (3) The yoke control piston casing is an integral part of the pump case. Four self-locking nuts are used to hold the piston casing end-plate in position. The bypass valve assembly, consisting of the valve body and a solenoid assembly, is mounted externally on the pump case, under the yoke control piston casing. This solenoid valve is provided with an electrical connector. A pressure control regulator is installed on the bypass valve body by means of four bolts. This regulator is cylindrical and is provided with an external adjustment screw. A lock screw is used to retain the adjusting screw after the adjustment has been made.
- (4) Hydraulic fluid enters the pump through an inlet port. Passages in the yoke carry the fluid to the valve plate, which ports the fluid to the cylinder block. The nine pistons in the cylinder block are actuated by the rotating drive shaft, thereby pressurizing the fluid. From the cylinder block, the fluid is routed to the outlet port of the yoke and then to the pump pressure lines. The pressure control regulator is actuated by pump output pressure that is bled to the regulator. The regulator meters the pressure to the yoke control piston, which positions the yoke.
- (5) The maximum pump pressure is determined by the adjustment of the pressure control regulator. The pressure control regulator allows maximum output flow (22.5 gpm at 3500 rpm) up to 2850 psi system pressure. When this pressure is reached, the yoke assembly starts to move towards the zero flow position.
- (6) Pressure continues to rise until the displacement is reduced from maximum flow to zero flow and 3000 psi is reached. The pump pressure stabilizes in accordance with system demand.

**L. Engine-Driven Hydraulic Pump Check Valves (See Figure 10.)**

- (1) Two check valves, rated at 3000 psi, are installed in the lines from each engine-driven hydraulic pump. One check valve is installed in the pressure line and the other is in the case drain line. The check valves in the pump pressure lines prevent reverse flow of hydraulic fluid through the pump, when the pump is inoperative or when external hydraulic pressure is supplied to the system. Access to the valves can be gained through an access door in the forward right apron of each inboard pylon. The valves are mounted on the exterior wall of the inlet box by means of the bulkhead fittings and retaining nuts.
- (2) Normal operating pressure will unseat the poppet, and fluid will flow through the valve. When pressure downstream of the valve exceeds pressure from the pump, the pressure, with the aid of the return spring, will seat the poppet. This prevents reverse flow of hydraulic fluid through the pumps.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

**M. Engine-Driven Hydraulic Pump Case Drain Filter (See Figure 14.)**

- (1) A line-type, micron filter, for use in a low-pressure hydraulic system, is installed in the engine-driven hydraulic pump case drain return line between the pump flow check valve and the hydraulic system reservoir. The case drain filter is installed on the aft surface of the rear spar opposite the leading edge of the inboard flap assembly. One filter is used for each engine-driven pump. Access is gained to the filter by lowering the flaps. A second check valve is installed adjacent to the filter in the downstream side of the case drain return line.
- (2) Externally, the filter is approximately 5 inches high and 2 inches wide, with ports marked inlet and outlet. The bowl is cylindrical in shape, with hex-shaped wrench flats at the lower end. A self-sealing, magnetic drain plug is installed in the bottom end of the filter bowl. The filter element is made of chemically treated paper.

**N. Dual Filter and Relief Valve (See Figure 15.)**


- (1) The hydraulic power system dual filter and relief valve consists of two filters and two relief valves installed in the same body. The unit filters the hydraulic fluid from the two engine-driven hydraulic pumps, and the pressure relief valves assure that excessive pressures do not build up in the pressure line from the pumps. The unit is located in the left main gear wheel well on the lower portion of the rear spar, approximately 1 foot outboard of the centerline shear web.
- (2) The unit consists of a casting with a flange-mounted pressure inlet port on each end. Two pressure outlets are located on the top of the casting. One outlet, centrally located, is the main pressure outlet to the system selector valve. The other, located to the left of the selector valve port, is the pressure outlet to the air pressure regulator-aspirator. The return outlet port for the relief valve portion of the unit is located on the center of the aft face of the body, canted upward. The nose gear return line is connected to a check valve installed in a return line port, located between the two filter bowls.
- (3) The pressure relief valves are located behind the pressure inlet ports and are connected to the return outlet port of the unit. The inlet from the nose gear return line is routed through the casting to the return outlet port.
- (4) If either of the filter elements becomes clogged, pressure above 3300 psi at the inlet port will unseat the poppet. Pressure above 3500 psi will allow full flow of 22.5 gpm to flow to the return port of the unit and back to the reservoir. The relief valves will reseal at approximately 3000 psi.
- (5) A check valve is installed in the system selector valve port to prevent reverse flow of pressure through the filter during auxiliary hydraulic pump operation.

Jun 15/67


Printed in U.S.A.

29-10-0  
CODE 10  
Page 27


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

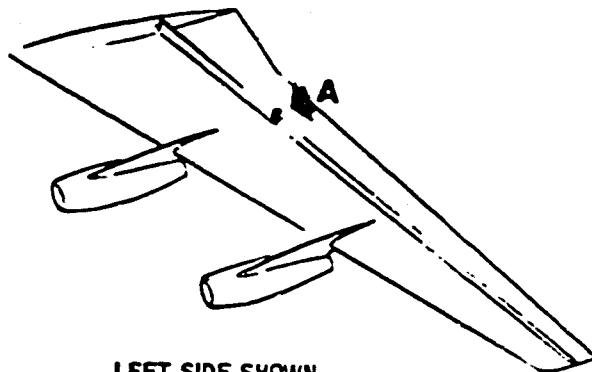

LEFT SIDE SHOWN  
 RIGHT SIDE OPPOSITE

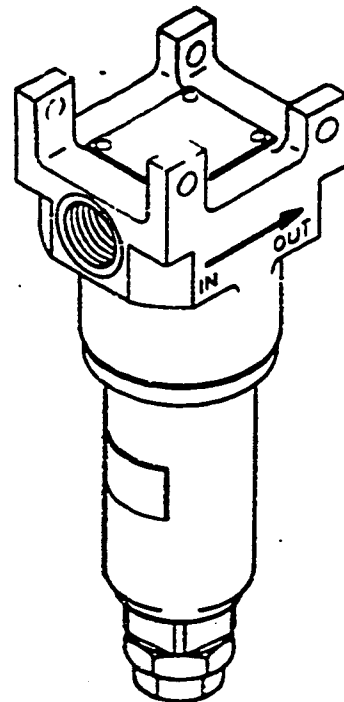


VIEW A

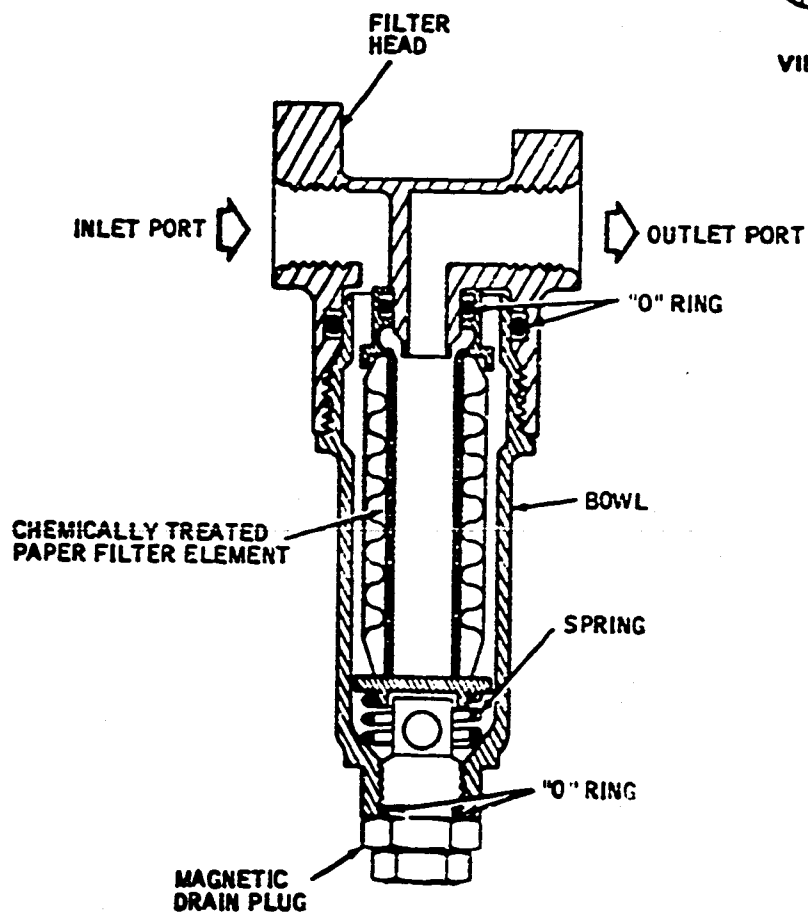

Engine-Driven Hydraulic Pump Case Drain  
 Filter -- Cutaway View  
 Figure 14

HA2-31

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

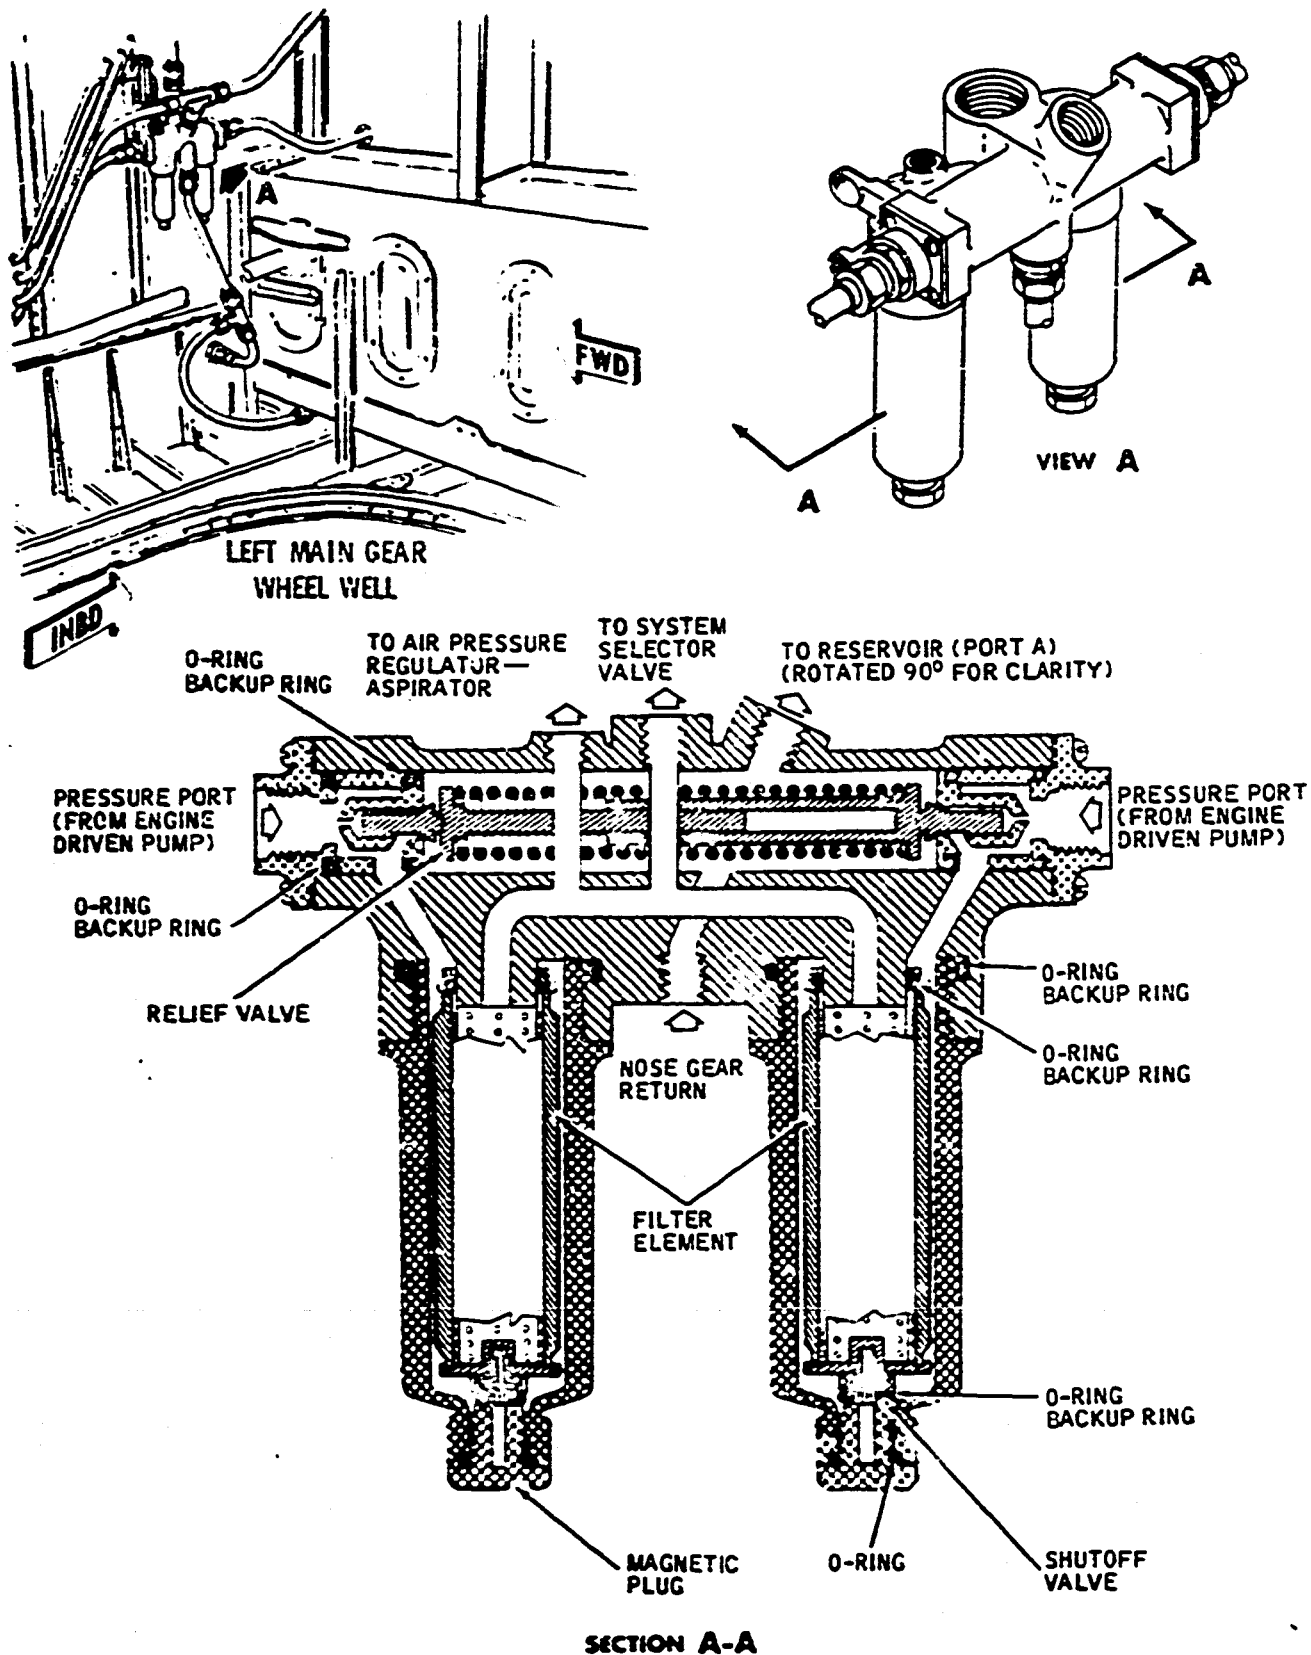

Dual Filter and Relief Valve -- Cutaway View  
 Figure 15

HA2-20

29-10-0  
 CODE 10  
 Page 29

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


O. System Selector Valve (See Figures 16 and 17.)

- (1) The system selector valve is a 3-position valve which permits directional control of fluid under pressure. The valve is installed on the left hydraulic power manifold and is accessible through the left main gear inboard door.
- (2) The selector valve pressure-to-system port and the return port are directly ported to the manifold. The engine pump pressure enters the valve through a port on the large end of the valve, and the auxiliary pump inlet and alternate ports are located at the top, toward the aft end of the valve. The valve control crank is attached to a push-pull rod and a cable sector.
- (3) Operation of the system selector valve is controlled by a lever located on the right side of the system engineer's control pedestal. When the control lever is moved to the selected position, the cable system, through the sector and crank, operates the valve positioning lever to drive the slide spool assembly to the selected position. When the control lever is placed in the general system (normal) position, the selector valve is actuated, causing hydraulic fluid to enter the valve through the system pressure port. The fluid is then directed into the manifold through the pressure-to-system port. In the general system (normal) position, fluid from the auxiliary pressure port is also routed to the pressure-to-system port. In the bypass/general system position, the selector valve ports engine pump pressure into the manifold through the return port. In this position, the auxiliary pump pressure is ported to the general system. In the general system/main gear down and flaps position, pump pressure is routed through the alternate port, at the top of the valve, for alternate operation of the flaps and the landing gear downlock cylinders. Internal leakage provides lubrication for the moving parts of the valve.

P. Left Hydraulic Power Manifold (See Figure 18.)

- (1) The left hydraulic power manifold distributes fluid pressure from the hydraulic pump (any one of the three pumps), through control valves to the various airplane hydraulic subsystems. The left power manifold is located overhead in the left wheel well. Access to the left manifold is through the left main gear inboard door.
- (2) On airplanes N8960T-N8962T, three valve-mounting pads are provided on the manifold. The system selector valve-mounting pad is located on top of the manifold body. Of the two remaining mounting pads, located on the underside of the manifold, the inboard pad is capped and not used. The outboard mounting pad is used for the bogie swivel unlock control valve. Four ports are provided on the inboard end of the manifold. Two of these ports are pressure outlet ports: one, located on the aft face of the manifold, is for the flight controls; and, the other, located on the underside of the manifold, ports fluid to the priority valve, which, in turn, ports fluid to the nose gear and the right power manifold. The other two ports are return outlets, located immediately forward of the manifold

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

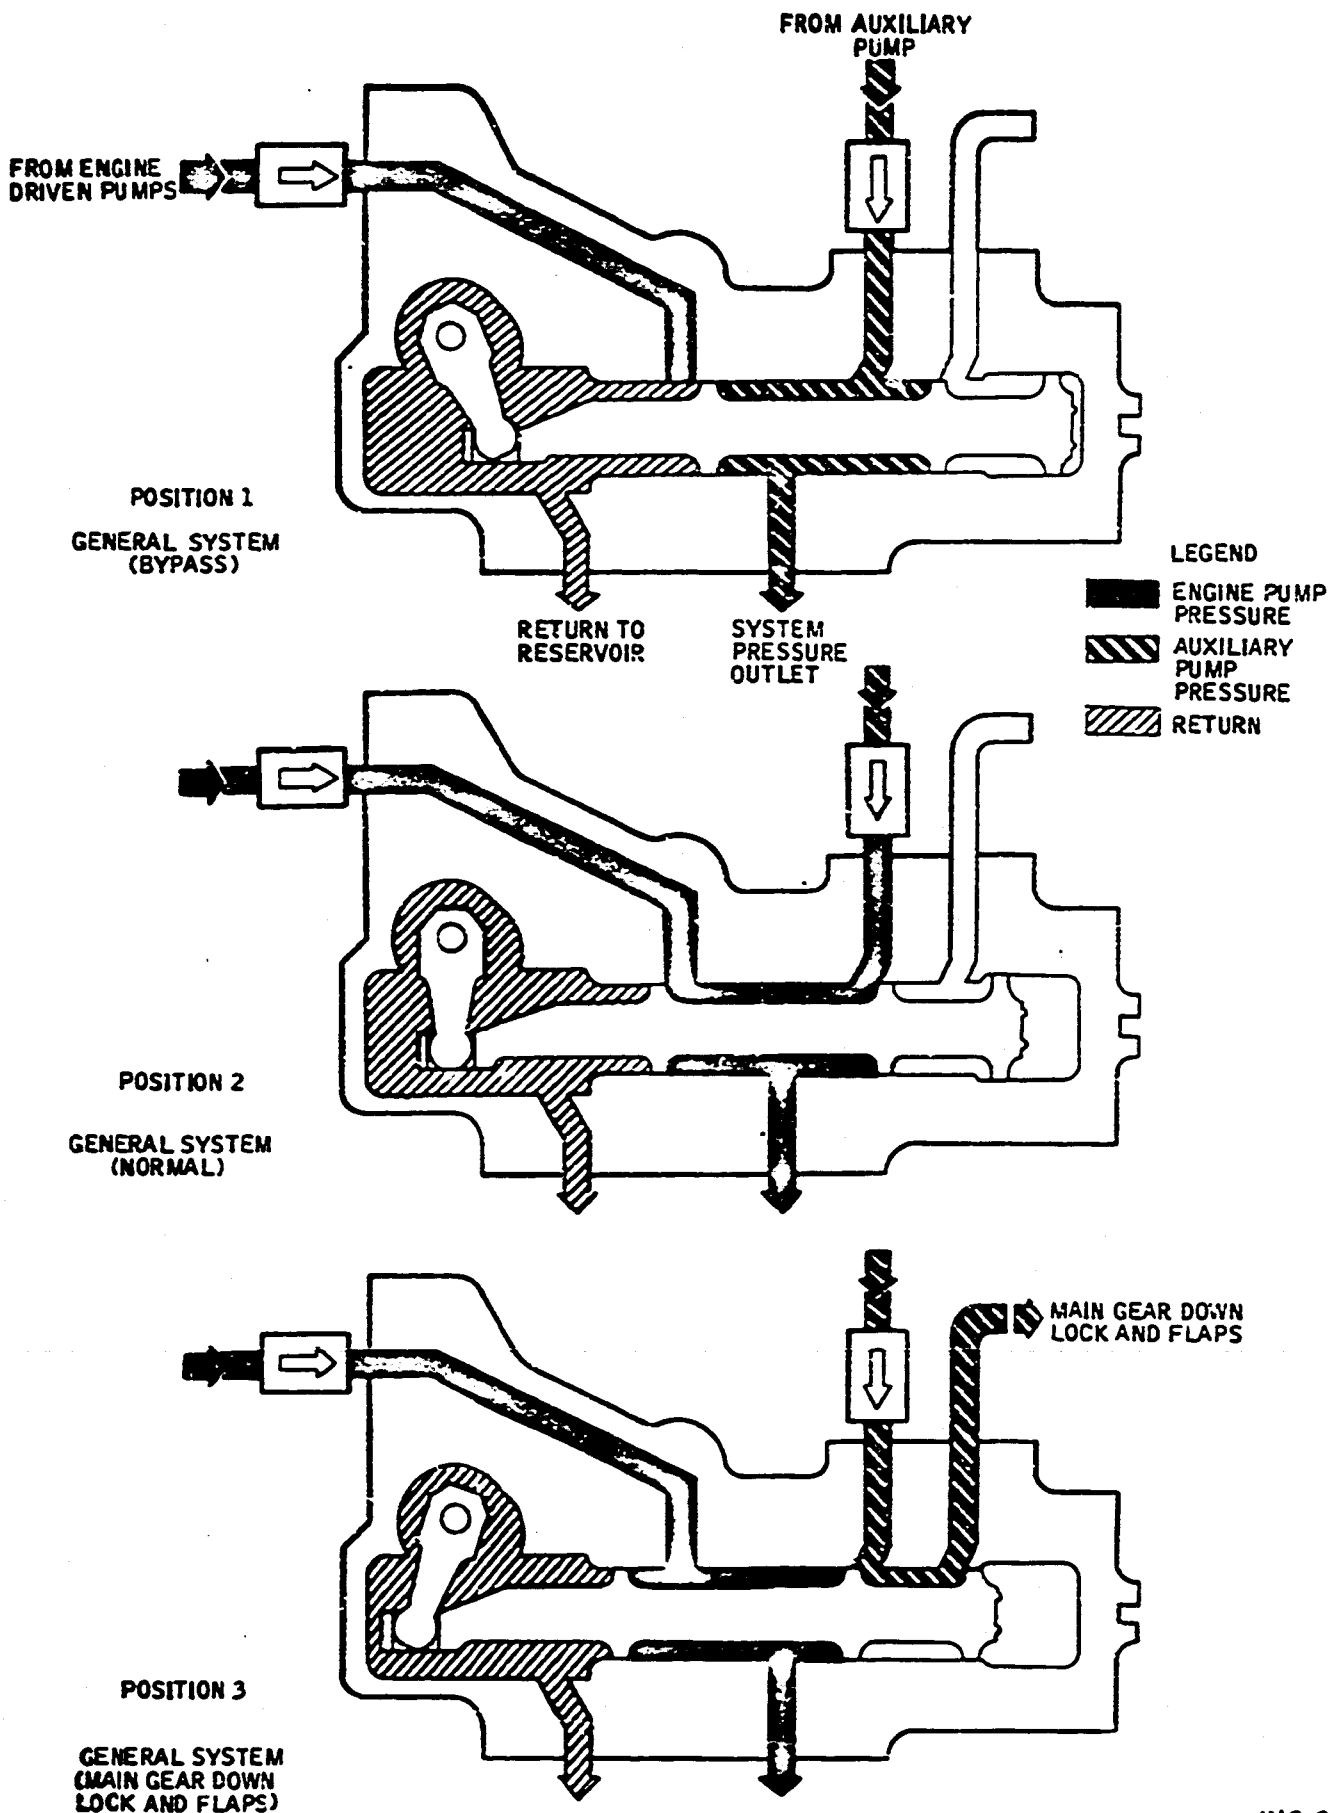

System Selector Valve -- Schematic  
 Figure 16



HA2-26

29-10-0  
 CODE 10  
 Page 31

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

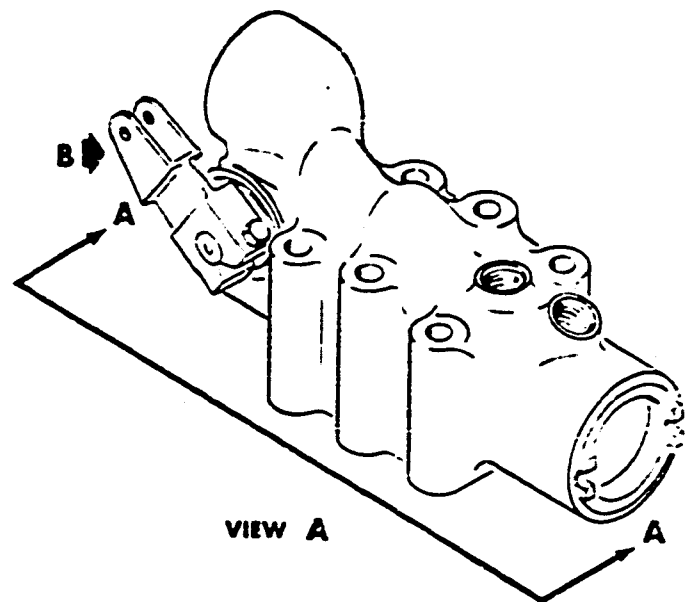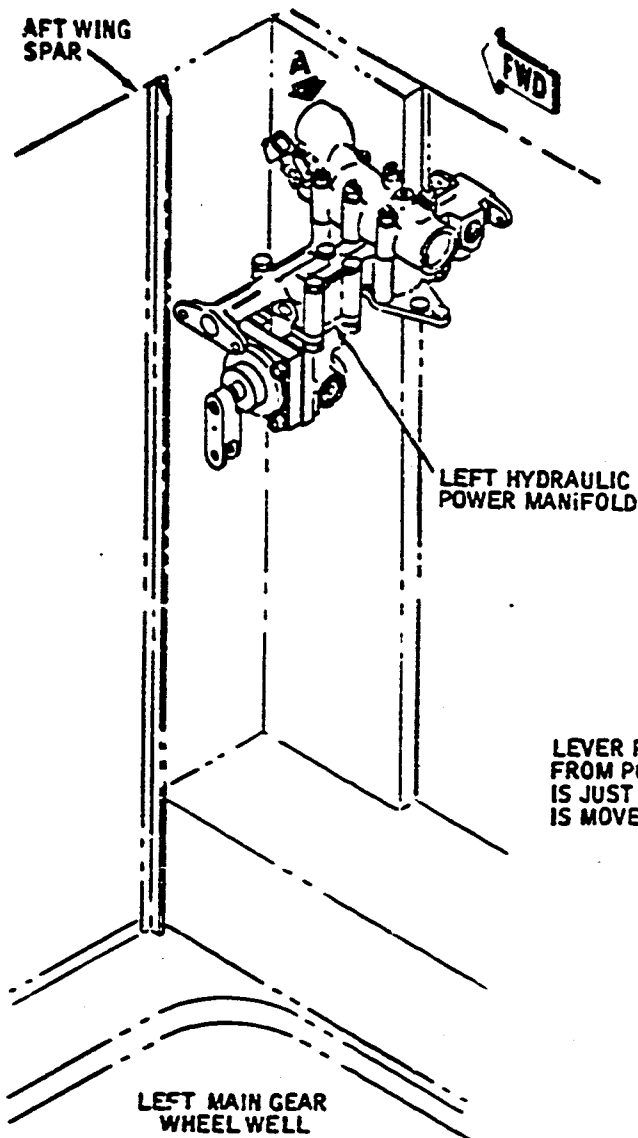

LEVER POSITION WHEN FLOW FROM PORT M TO PORT L IS JUST STOPPED AS LEVER IS MOVED TOWARD POSITION 3

GENERAL SYSTEM (NORMAL) POSITION 2

$6\frac{1}{4}^{\circ} (\pm 1\frac{1}{4}^{\circ})$

$28^{\circ} (\text{REF})$


GENERAL SYSTEM (BYPASS) POSITION 1

GENERAL SYSTEM (MAIN GEAR DOWNLOCK AND FLAPS) POSITION 3

$18\frac{1}{2}^{\circ} (\text{REF})$

$55\frac{3}{4}^{\circ} (\pm 5^{\circ})$


VIEW B

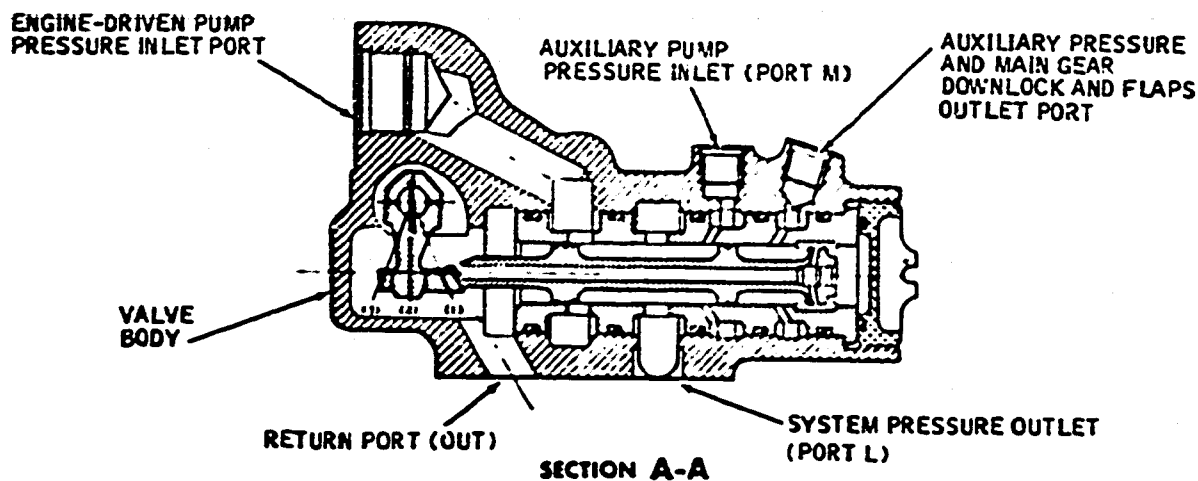

HA2-27

System Selector Valve -- Cutaway View  
 (Airplanes N8960T-N8962T)  
 Figure 17 (Sheet 1)

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

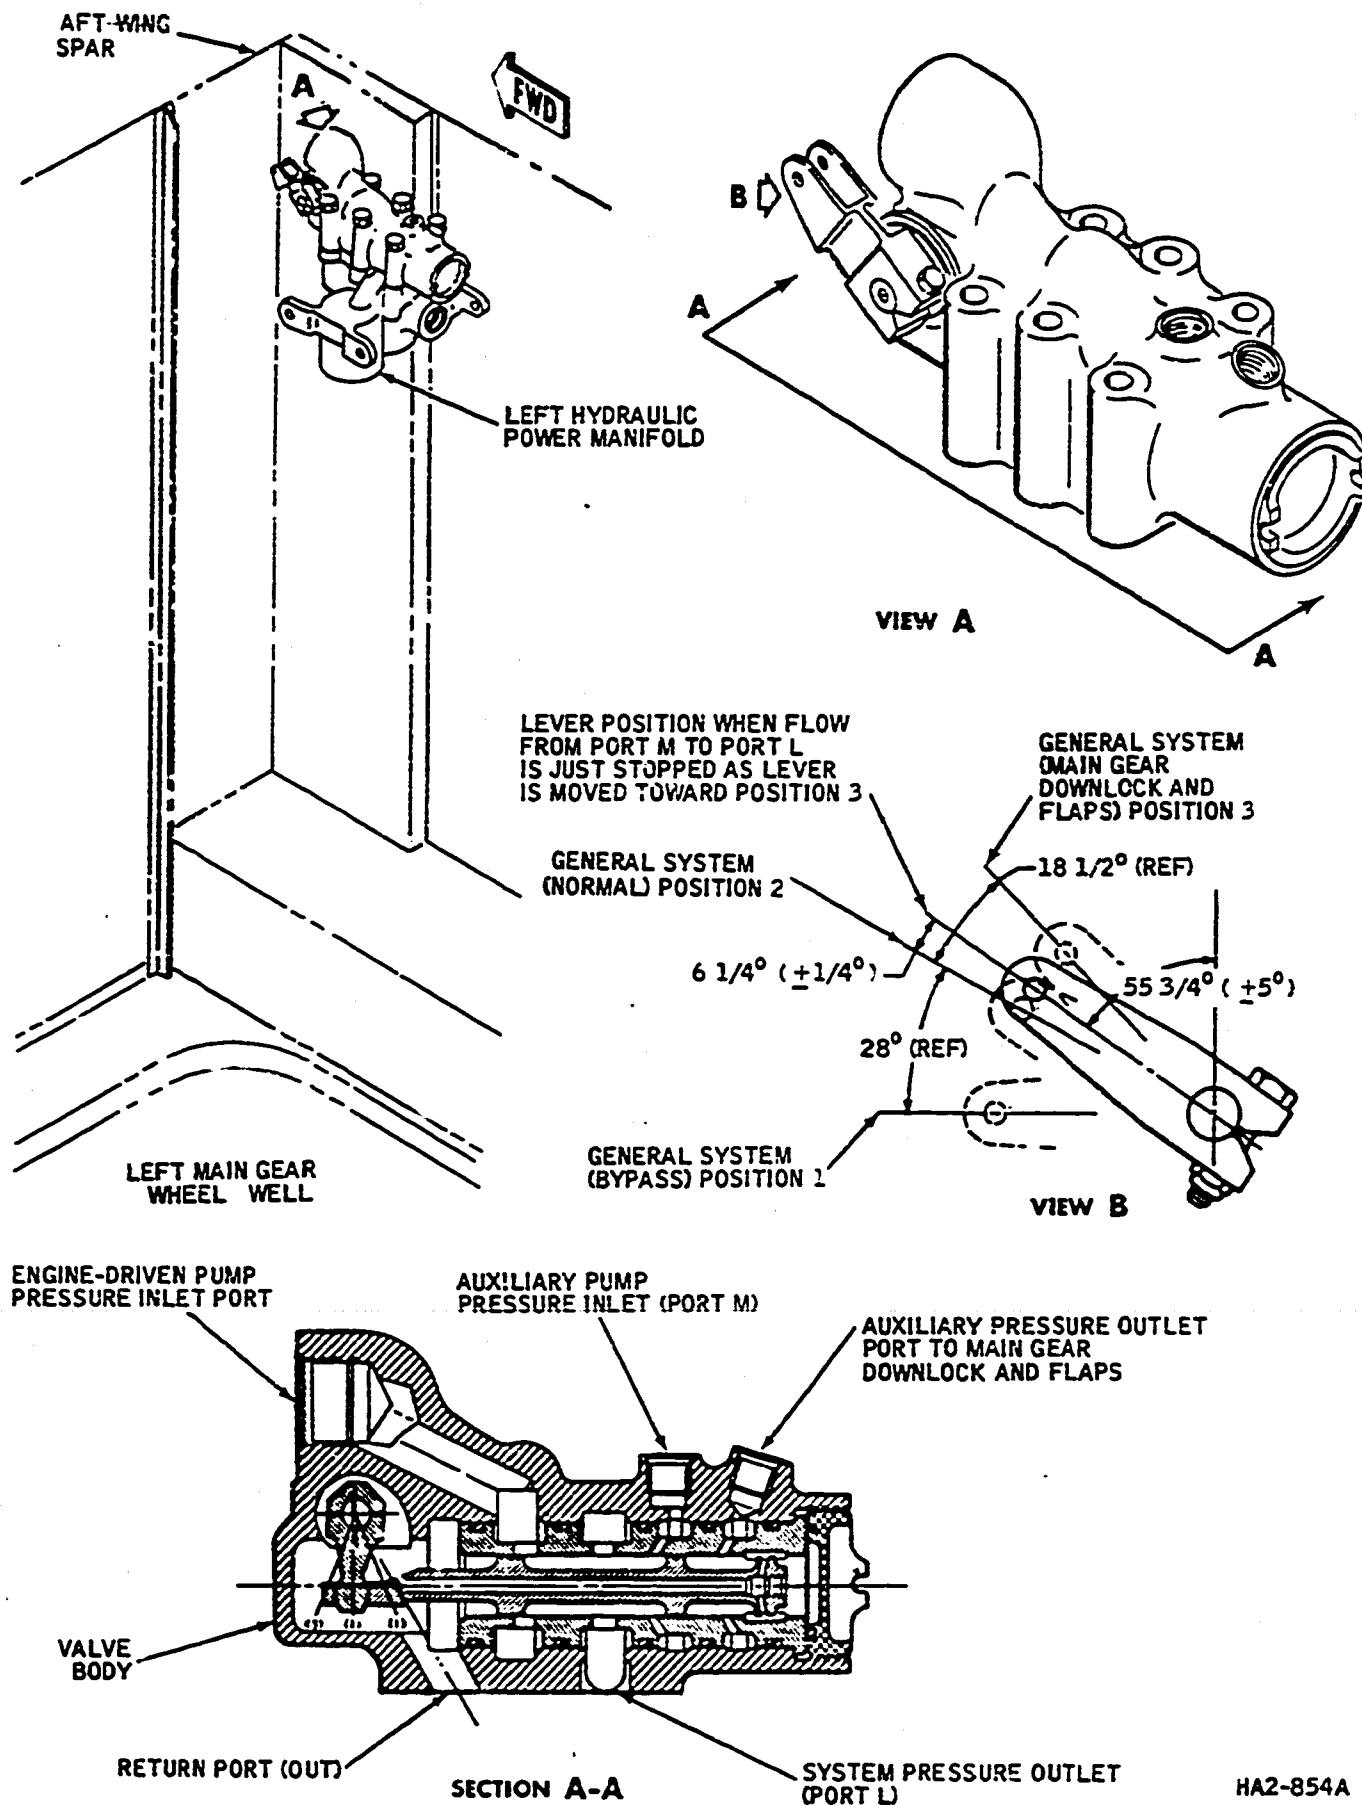

System Selector Valve -- Cutaway View  
 (Airplane N4863T and Subsequent)  
 Figure 17 (Sheet 2)



HA2-854A

29-10-0  
 CODE 10  
 Page 32A

Nov 1/69






DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

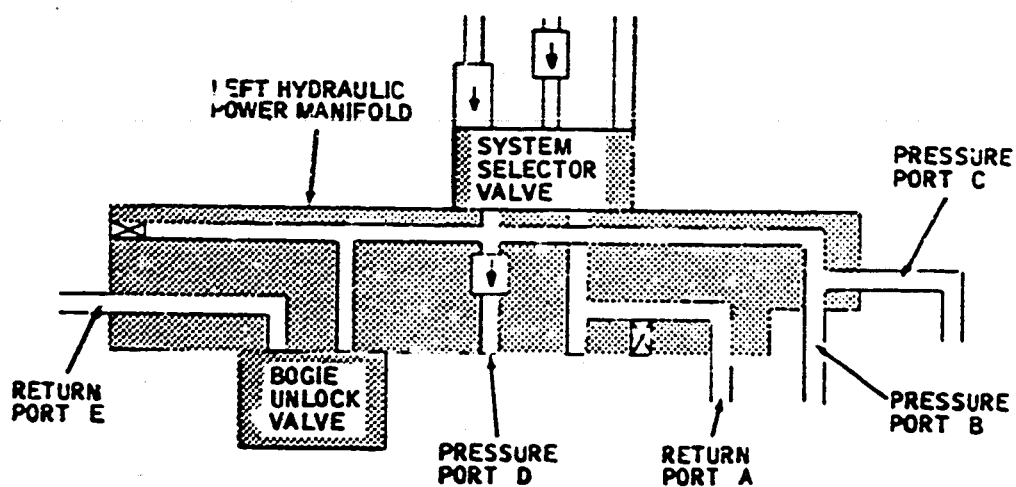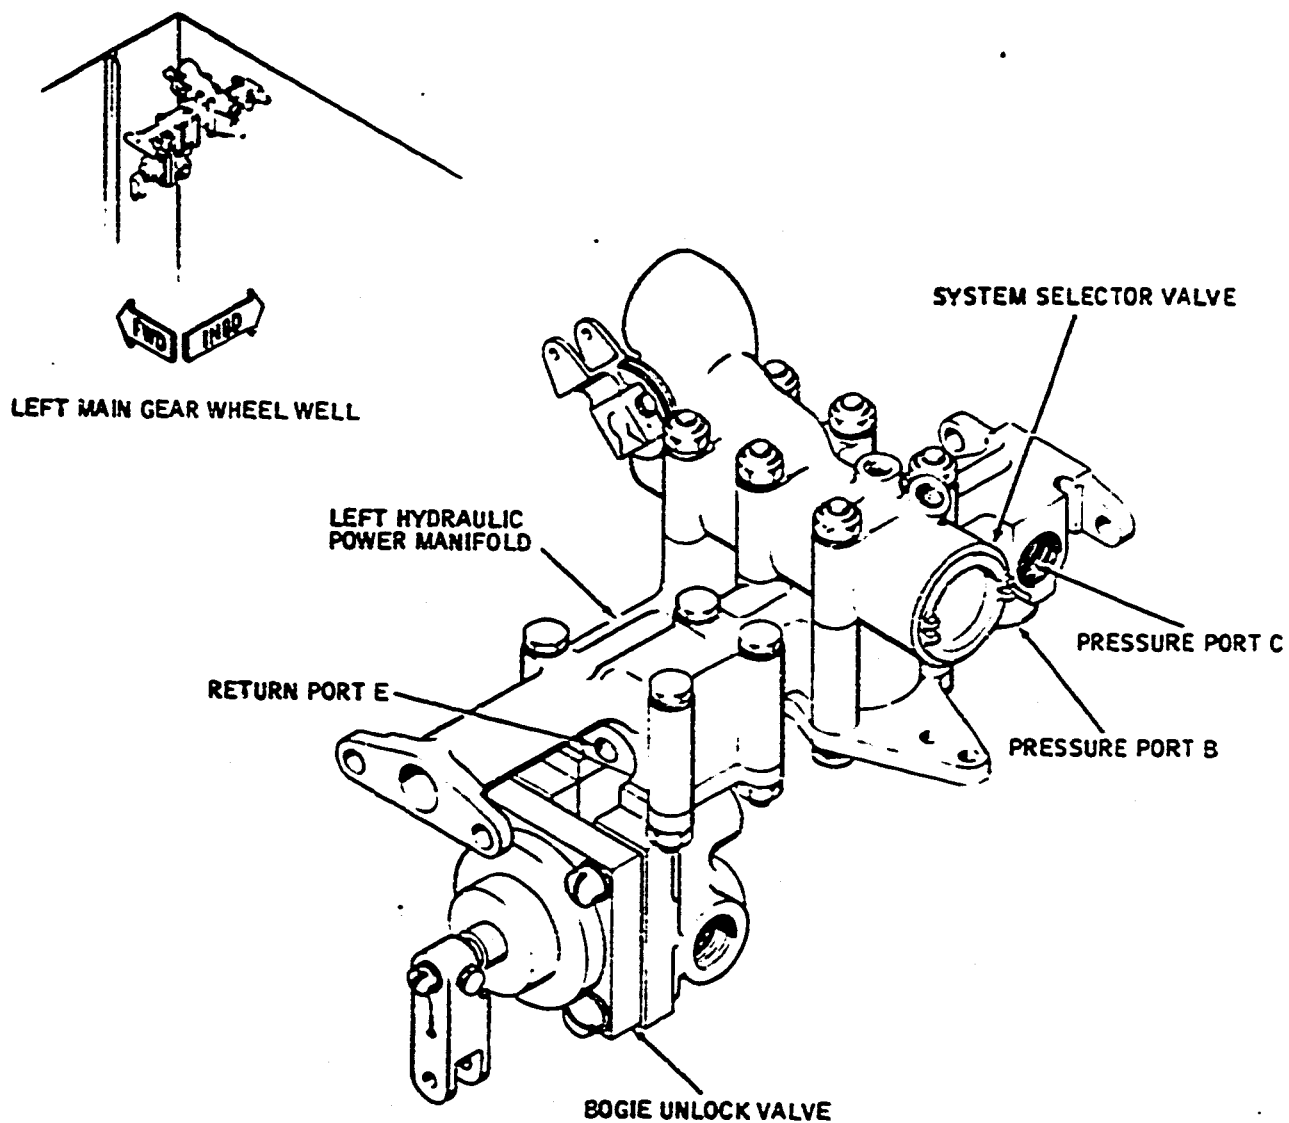

HA2-28

Left Hydraulic Power Manifold -- Schematic  
 (Airplanes N8960T-N8962T)  
 Figure 18 (Sheet 1)

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

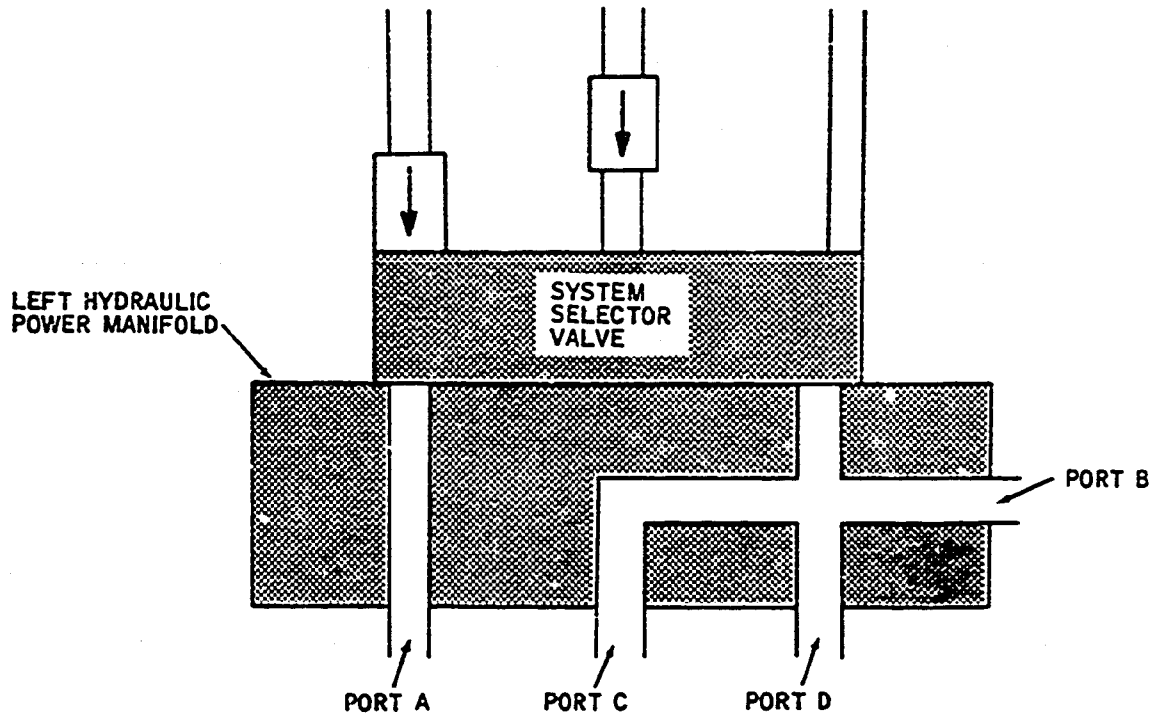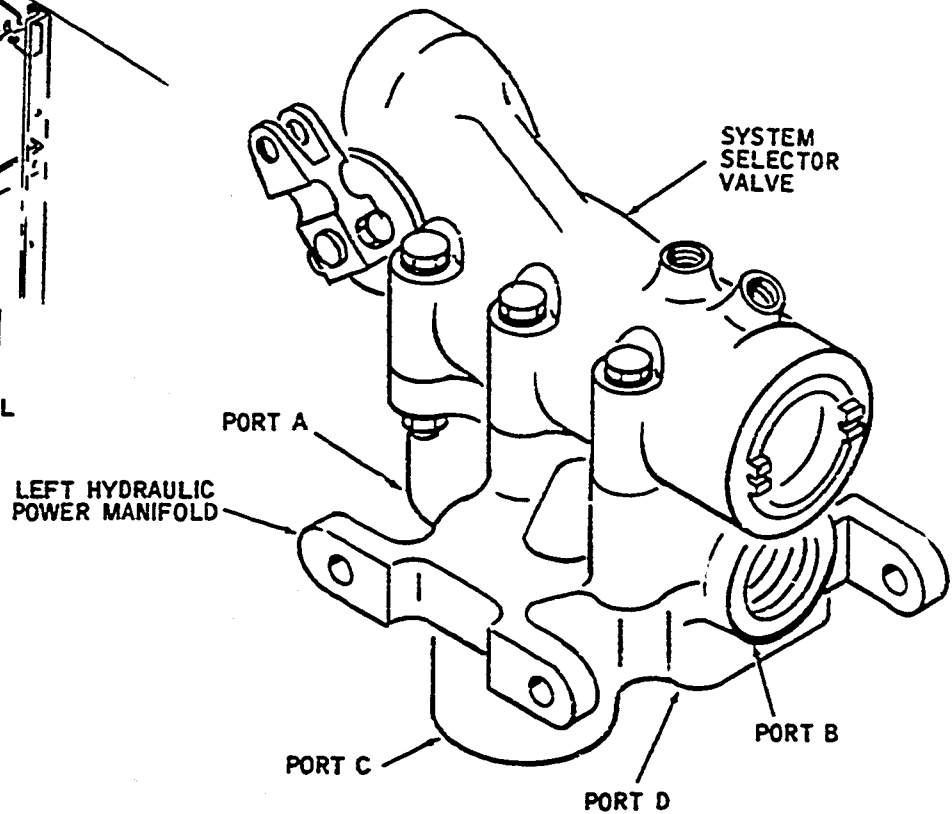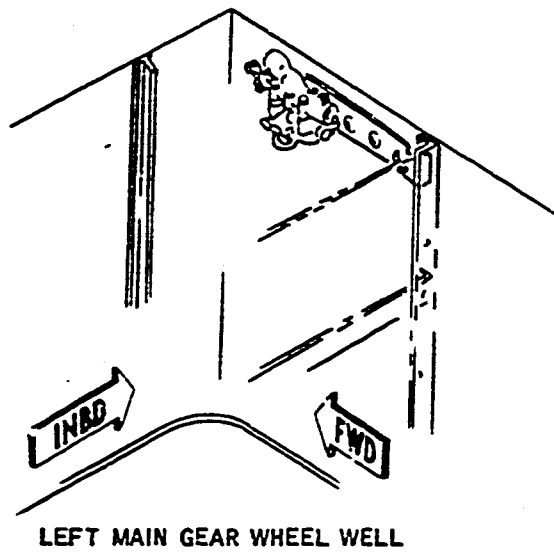

Left Hydraulic Power Manifold -- Schematic  
 (Airplane N4863T and Subsequent)  
 Figure 18 (Sheet 2)

HA2-855

29-10-0  
 CODE 10  
 Page 33

Aug 1/69

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

pressure outlet port. One is connected by a line to the right manifold, and the other is connected to the low-pressure return port of the reservoir. The pressure line to the nose gear control valve is teed into the manifold pressure connecting line. A reservoir return line is teed into the manifold return line. The two ports on the inboard mounting flange were used for drilling the internal passages of the power manifold and are plugged and safety wired to prevent use.

- (3) On airplanes N4863T and subsequent, one valve-mounting pad is provided on the top of the manifold for the system selector valve. Four ports are provided on the manifold for connection of hydraulic pressure and return lines. Three of these ports are pressure outlet ports; one, located on the aft face of the manifold and one located on the bottom of the manifold port fluid to the flight controls. The third pressure outlet port, located on the bottom of the manifold, ports fluid directly to the priority valve, which in turn, ports fluid to the nose gear and to the right power manifold. The fourth, a return port, located immediately forward of the pressure line port on the bottom of the manifold, is connected by a line to a return port of the reservoir.

Q. Right Hydraulic Power Manifold (See Figure 19.)

- (1) The right hydraulic power manifold distributes fluid pressure from the hydraulic pumps (engine-driven or auxiliary, or any combination of these three pumps), through the control valves to the various hydraulic subsystems. The right hydraulic power manifold is located overhead in the right wheel well. The manifold is held in place with braces and is accessible through the right main gear inboard door.
- (2) The manifold contains passages for pressure and return fluid distribution, four check valves, ports for pressure and return lines, and mounting pads for the various control valves.
- (3) The right manifold receives fluid pressure from the left manifold. Pressure is ported through check valves to the wing flap control valve, to the slot control valve, to the main gear control valve, to the brake control valve, to the brake pressure transmitter, and to the brake accumulators.
- (4) Auxiliary hydraulic pressure is ported from the alternate port of the system selector control valve into port K in the right manifold. Port K is located inboard of the spoiler control valve. From port K, auxiliary hydraulic pressure is ported through a check valve to the downstream side of the wing flap control valve check valve and into the wing flap control valve for alternate operation of the wing flaps.
- (5) The return passage from the wing flap control valve ports fluid to return port A. The brake control valve return passage ports fluid into return line B through a two-way restrictor. The main gear control valve downline return fluid uses a separate port in the valve, bypasses the manifold, and returns the fluid directly to A return line to the reservoir.


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

The upline in the main gear control valve uses the same return port, return port B, in the manifold as the brake control valve.


R. Hydraulic Manifold Return Check Valves (Airplanes N8960T-N8962T See Figure 10.)

- (1) The hydraulic manifold return check valve is installed in the hydraulic reservoir A return line to prevent reverse flow of fluid. This check valve is located on the shear web near the dual filter and relief valve. Access to the check valve is through the left main gear inboard door.
- (2) The direction of flow is marked on one surface, and the rating of the check valve (1500 psi) is marked on the other surface.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

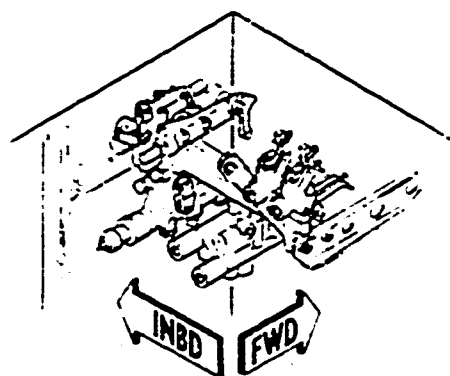

RIGHT MAIN GEAR  
WHEEL WELL

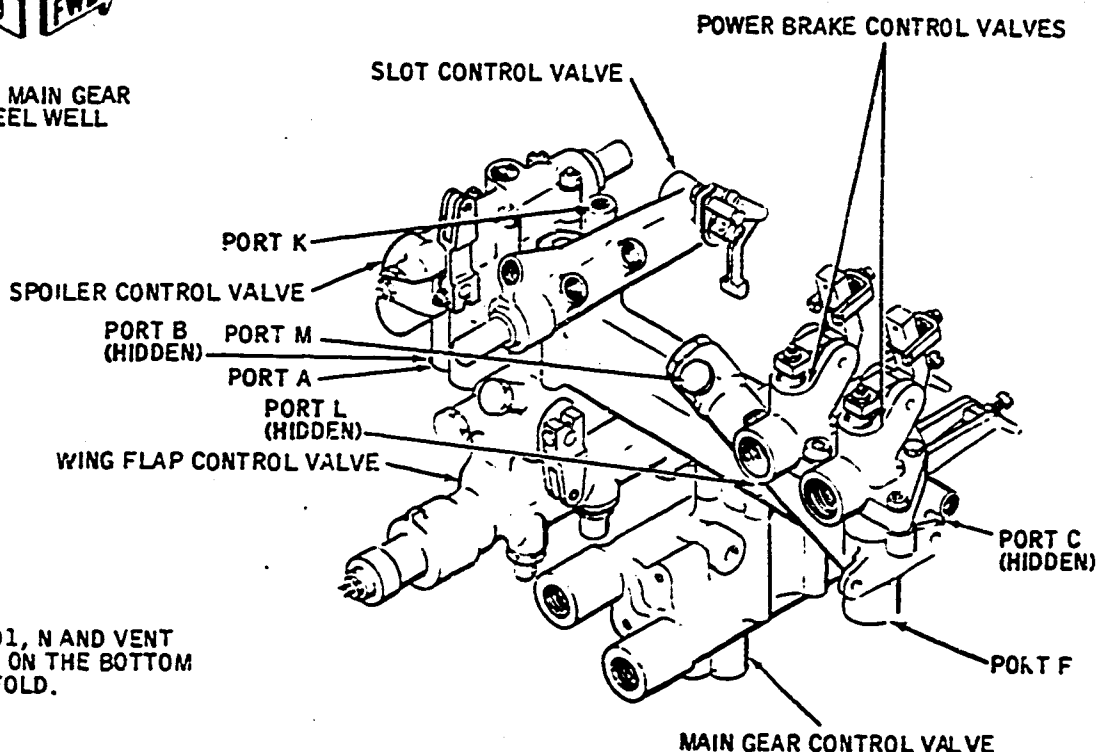

NOTE: PORTS B, C, D1, N AND VENT  
ARE LOCATED ON THE BOTTOM  
OF THE MANIFOLD.

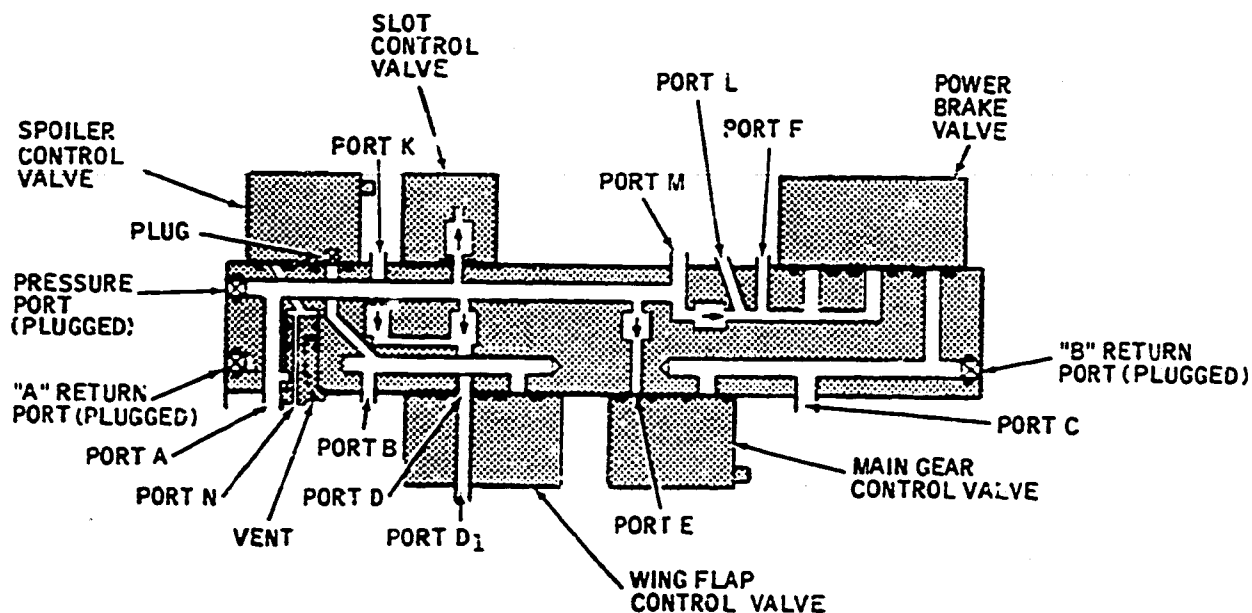

HA2-29A

Right Hydraulic Power Manifold -- Schematic  
 Figure 19

Nov 1/69

Printed in U.S.A.

29-10-0  
 CODE 10  
 Page 35

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


**S. Hydraulic Power System Accumulator (See Figure 20.)**

- (1) The hydraulic power system accumulator is a spherical, welded-steel, fluid and air bladder-separated container. The accumulator is installed in the pressure line of the hydraulic power system to provide a reserve supply of fluid under pneumatic pressure and to act as a shock absorber for system pressure surges..
- (2) The accumulator is located immediately aft of the left hydraulic power manifold and is accessible through the left main gear inboard door. It is mounted with two corner brackets and clamp blocks at the upper and lower port fittings.
- (3) The accumulator is installed in the pressure line of the hydraulic power system and is initially charged with 1000 psi of dry nitrogen. As the system pressure builds up, fluid is forced into the upper chamber of the accumulator, further compressing the trapped nitrogen to approximately 3000 psi. With full hydraulic system pressure, 3000 psi is indicated on the pressure gage adjacent to the filler valve. This reserve pressure smoothes out any momentary lag in the pump's response to the system's demand for greater fluid flows. The accumulator permits a gradual rise in system pressure, thereby absorbing the shock of pump surges and relieving the piping and system operating units of high-impact loads. When the engine-driven hydraulic pumps are not operating, the accumulator provides system pressure (at a diminishing rate) until a quantity equal to the stored volume in the accumulator has been used by the system.

**T. Hydraulic System Priority Valve (See Figure 21.)**

- (1) The priority valve is located in the left wheel well near the left hydraulic power manifold. The valve is installed in the hydraulic pressure line, between the two power manifolds, downstream of the pressure supply takeoff port for the flight controls. The priority valve is a balanced relief valve which reserves initial hydraulic pressure (up to 2150 psi maximum) for use in the flight control systems. The valve consists of a body with an inlet, an outlet, and a breather port. Internally, the valve contains a poppet valve plate, a poppet, a poppet valve load-spring, a piston a piston load-spring and a piston load-spring housing. The piston load-spring housing chamber is vented to ambient air through a breather hold which is covered by a butyl rubber band.
- (2) The priority valve shuts off hydraulic pressure to all subsystems downstream of the left power manifold, whenever the hydraulic pressure drops below 1700 psi minimum. At this point, the valve closes to reserve the hydraulic pressure for use in the flight control systems, preventing them from reverting to manual operation. When the hydraulic pressure rises to 2150 psi maximum, the priority valve opens and supplies pressure to the right manifold and all subsystems downstream of the priority valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

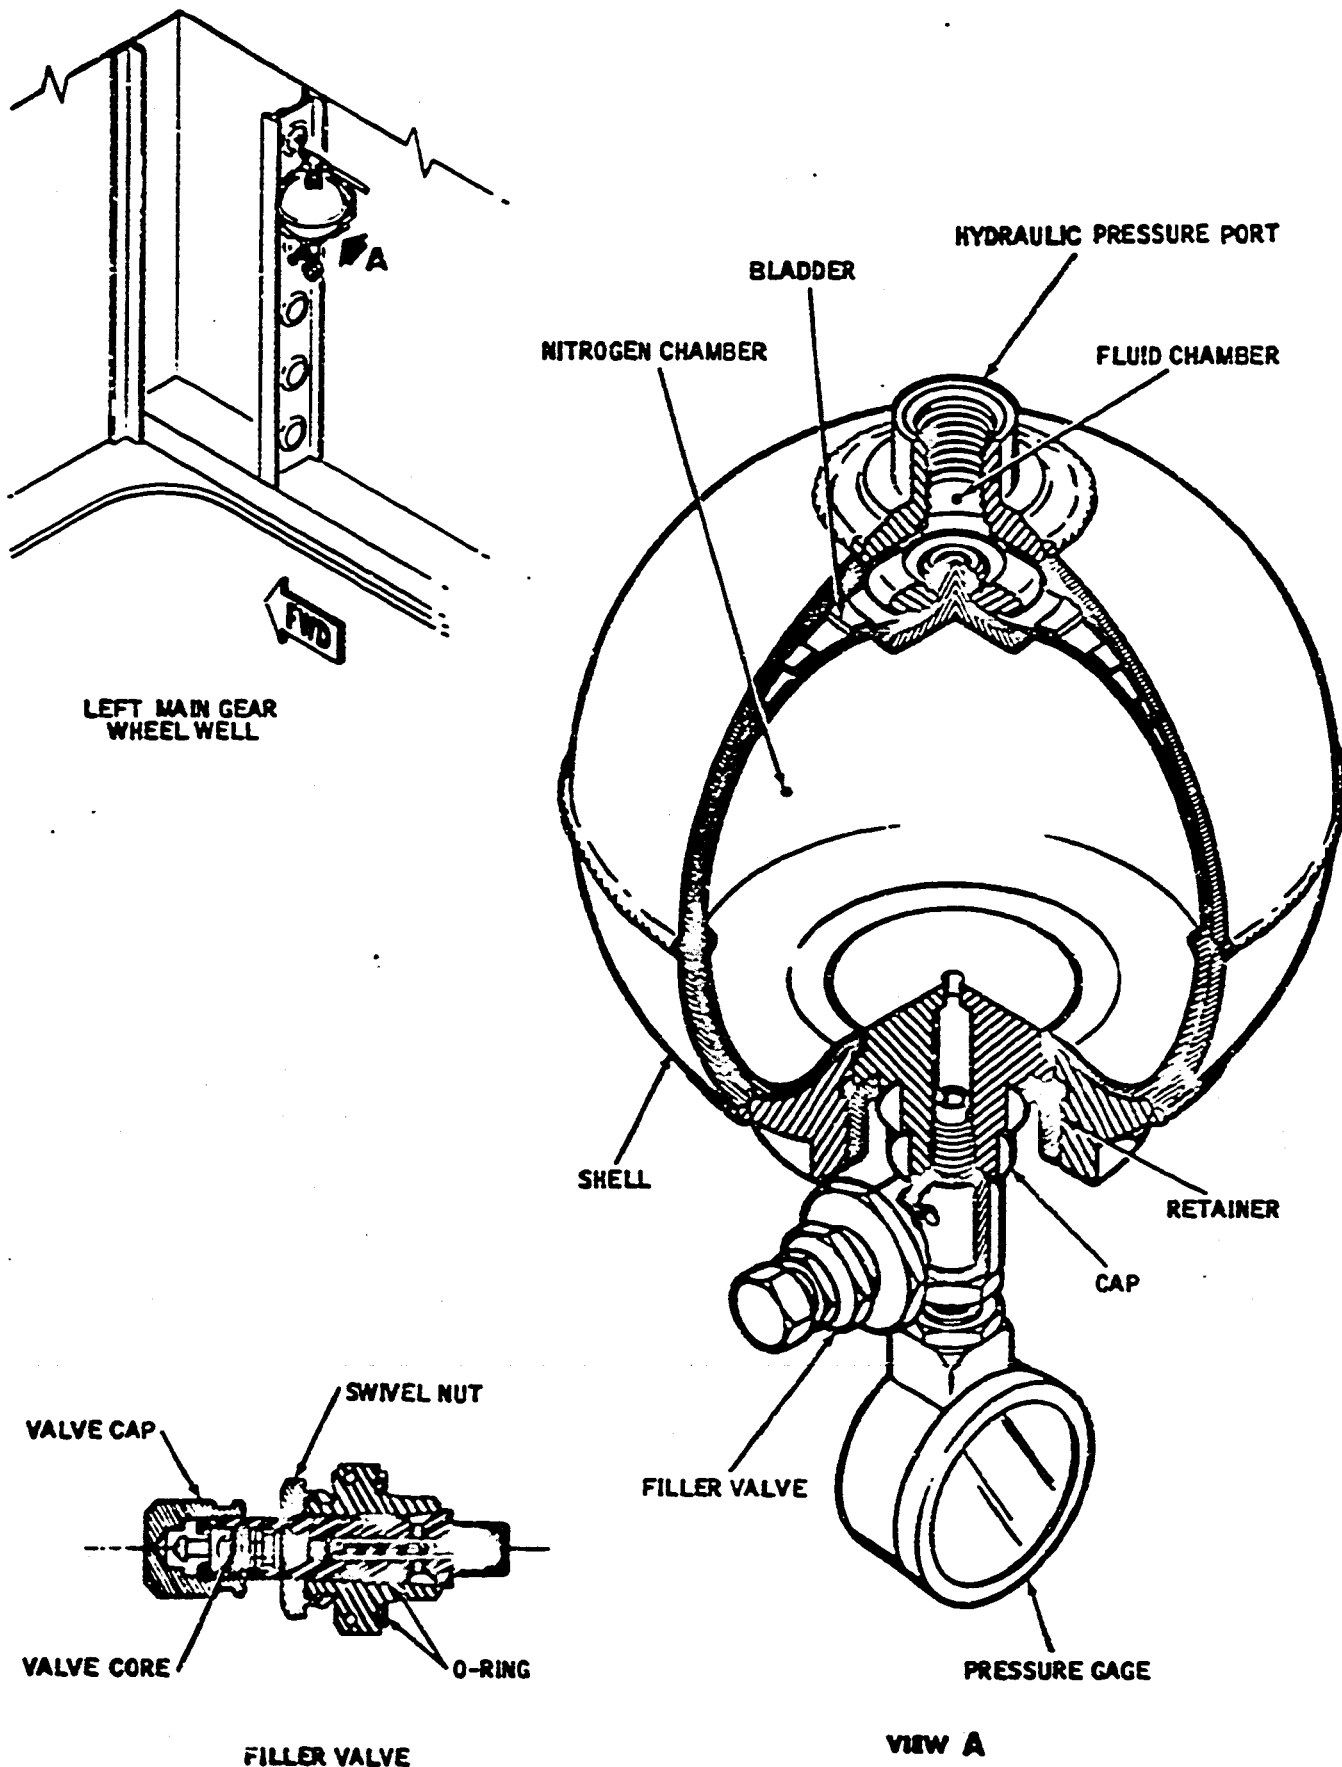

Hydraulic Power System Accumulator --  
 Cutaway View  
 Figure 20



HA2-30

29-10-0  
 CODE 10  
 Page 37

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

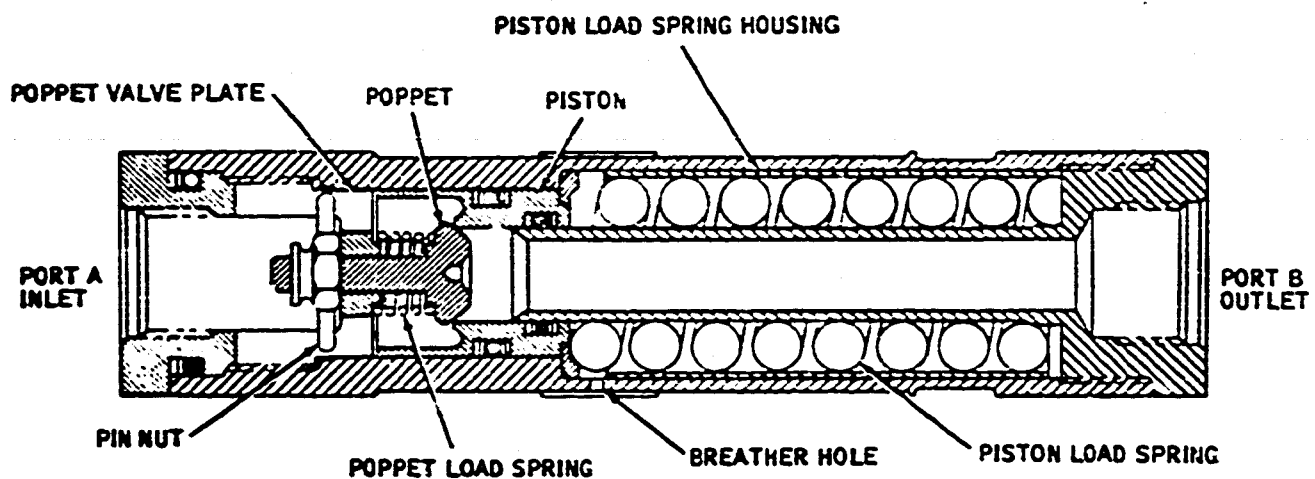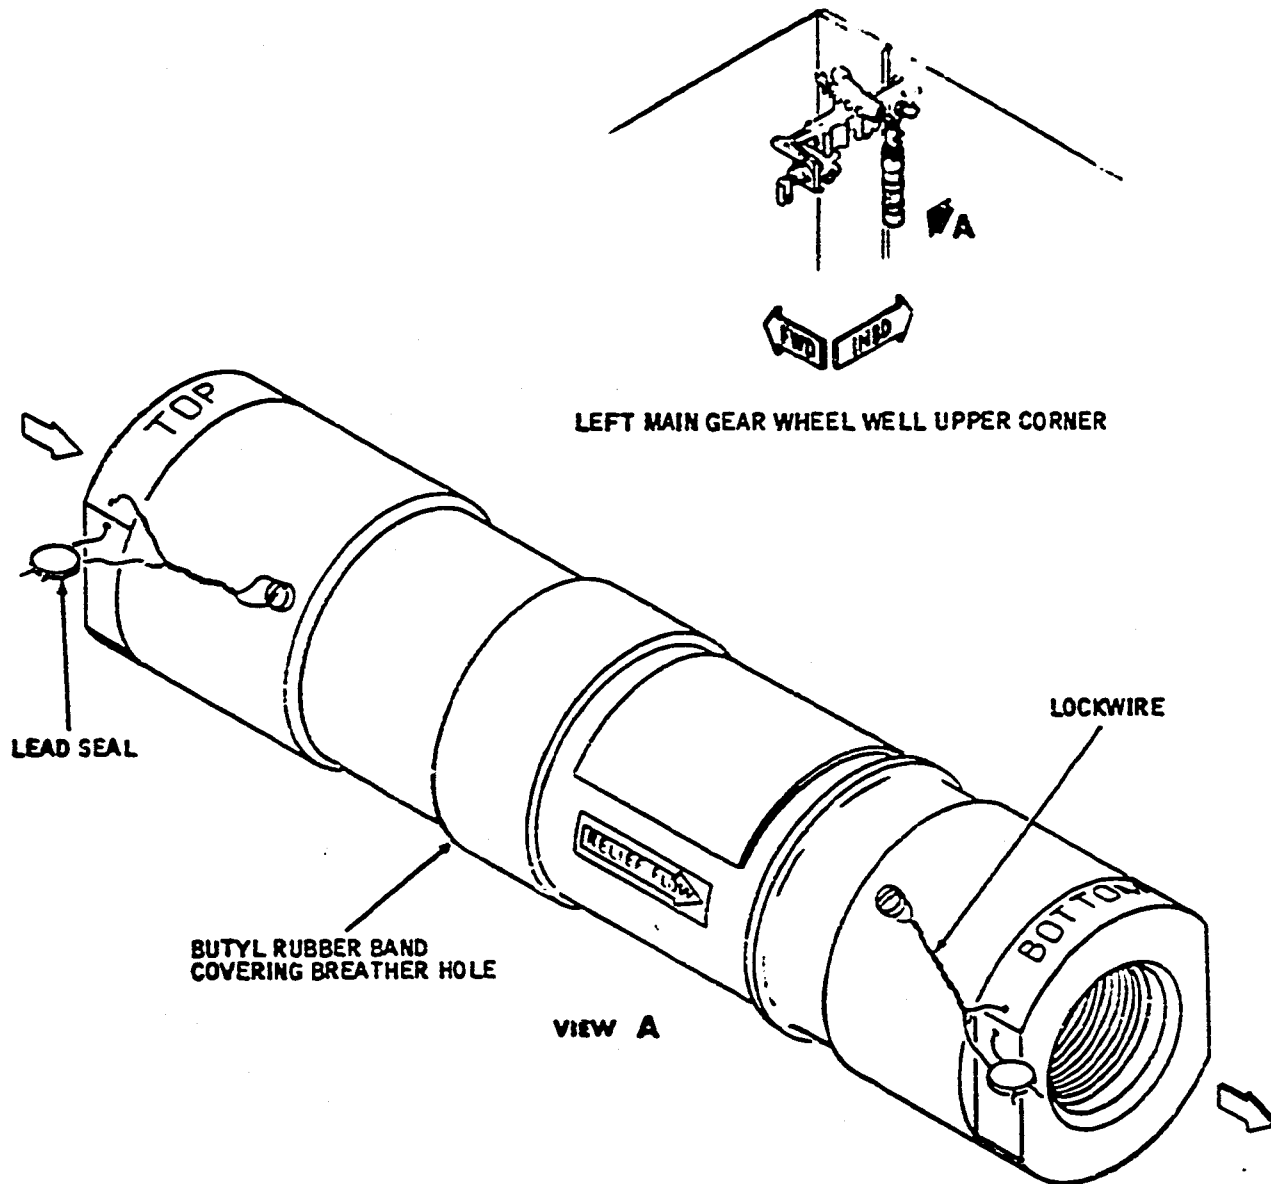

HA2-34

Hydraulic System Priority Valve -- Cutaway View  
 (Airplanes N8960T-N8962T)  
 Figure 21 (Sheet 1)



29-10-0  
 CODE 10  
 Page 38

Oct 15/68

Printed in U.S.A.



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

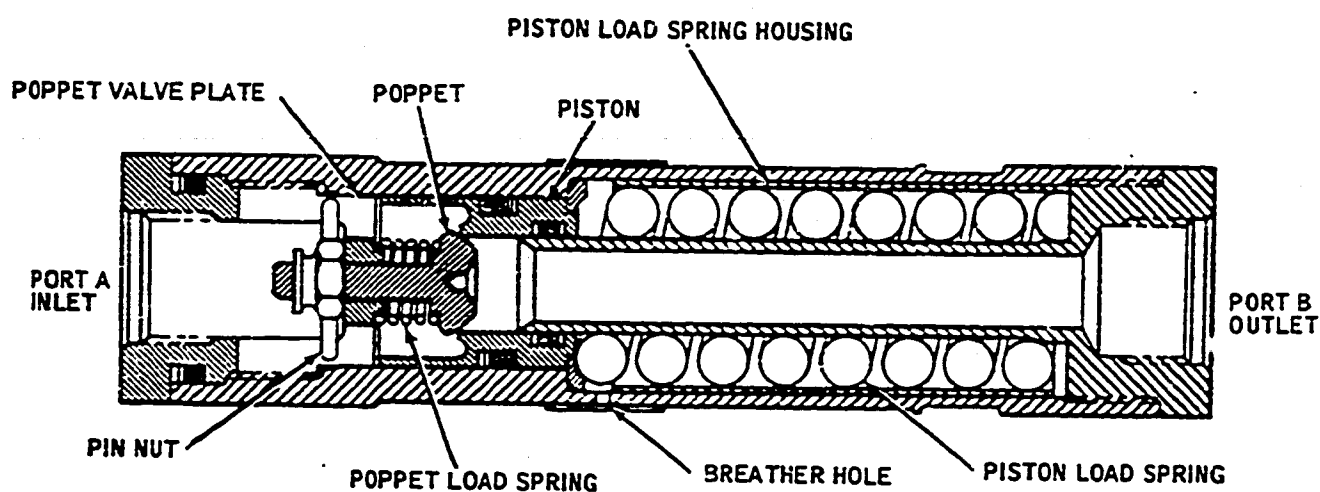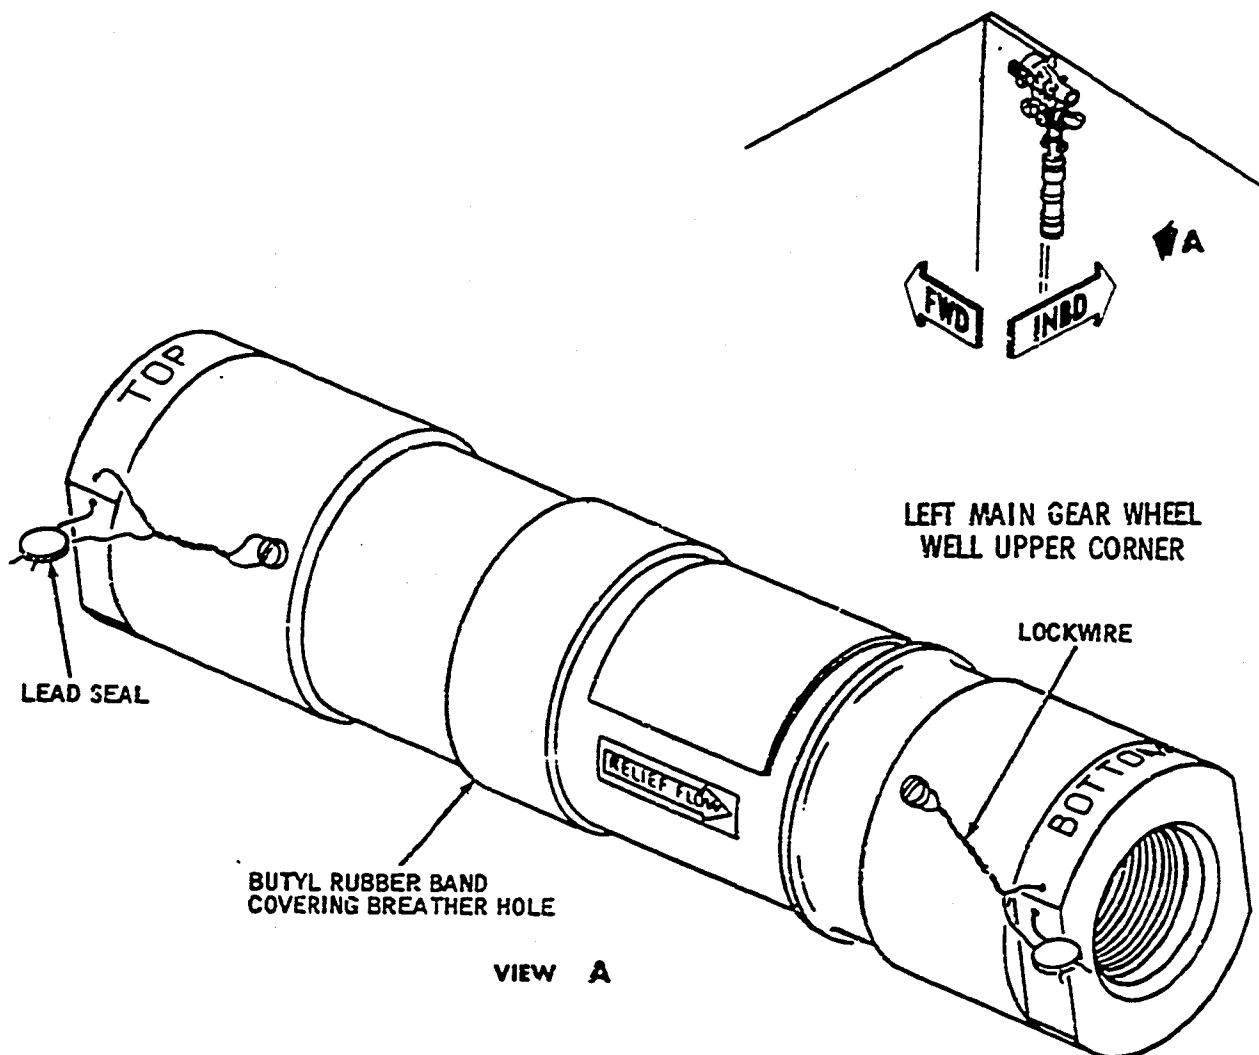

Hydraulic System Priority Valve -- Cutaway View  
 (Airplane N4863T and Subsequent)  
 Figure 21 (Sheet 2)

HA2-856

29-10-0  
 CODE 10  
 Page 38A

Aug 1/69

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Hydraulic fluid from the left power manifold enters the priority valve through the inlet port, passes through the poppet valve plate holes, and applies pressure against the piston. When sufficient hydraulic pressure is applied to the piston, the piston load-spring compresses, unseating the poppet and permitting full flow through the valve. When the hydraulic pressure decreases to less than the opposing force value of the piston load-spring, the load-spring forces the piston against the poppet and shuts off fluid flow through the valve.
- (4) The maximum flow available from both engine-driven hydraulic pumps is: 44 to 45 gpm at takeoff, climb, and cruise configurations; 26 to 28 gpm at descent, approach, and engine idle configurations.
- (5) Some of the larger hydraulic system demands are as follows:
  - (a) Gear retraction -- 17 gpm (10 - 12 seconds)
  - (b) Gear extension -- 14 gpm (10 - 12 seconds)
  - (c) Wing flaps down -- 8 gpm (10 seconds)
  - (d) Wing flaps up -- 3 gpm (22 seconds)
  - (e) Horizontal stabilizer -- 7 gpm
  - (f) Ailerons -- 17 gpm (25°/second)
  - (g) Rudder -- 3 gpm (25°/second)
- (6) There are various combinations of hydraulic system operations which could cause momentary reversion of the flight controls to manual operation. To prevent reversion to manual operation, the priority valve assures that the left power manifold receives all the hydraulic fluid pressure under conditions of very large flow demands.

U. Hydraulic System Selector Control Lever

- (1) The hydraulic system selector control lever is a manually actuated, mechanical lever detented to three positions. The lever provides a mechanical means, through cables, for positioning the system selector valve and the auxiliary hydraulic pump supply selector valve. The hydraulic system selector control lever is located on the system engineer's control pedestal. The lever is attached to a drive sector, located on a common shaft with the other control pedestal sectors. The lever and sector are accessible through the cover plates on the system engineer's pedestal.
- (2) To put the hydraulic power system in the bypass condition, the system selector control lever is lifted out of detent and moved to bypass/general system position. At the same time, the cable moves the sector and pushrod of the system selector valve to the No. 1 position. The pushrod positions the system selector valve to the No. 1 bypass position.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

At the same time, the cables from the system selector valve sector move the auxiliary pump supply selector valve sector to No. 1 (auxiliary) position. The auxiliary pump supply selector valve remains in the auxiliary supply position through the idle feature of the sector rigging. In this condition, the engine-driven pump pressure is ported to the reservoir and the auxiliary pump supplies pressure to the general system. In this position, the fluid is supplied to the auxiliary pump from the low standpipe in the hydraulic system reservoir. To put the system into the alternate condition, the selector control lever is lifted out of detent and moved to the general system/main gear downlock and flaps position. The cables move the system selector valve sector to the No. 3 (alternate) position. The system selector valve sector moves the cables rotating the auxiliary pump supply selector valve sector to the No. 3 (alternate) position. As the sector rotates, the end of the arm moves away from the idle position. This positions the valves to the alternate position, supplying fluid to the auxiliary pump from the auxiliary pump alternate reservoir. In this position, fluid from the auxiliary pump is ported to the wing flap control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported to the general system.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - DESCRIPTION AND OPERATION

1. General

A. Description (See Figures 1 and 2.)

- (1) The hydraulic power system receives fluid pressure from the engine-driven hydraulic pumps, one installed on each inboard engine. The electrically driven auxiliary pump is used to supplement the engine-driven pumps, or to independently supply the system with fluid pressure.
- (2) The hydraulic system reservoir, located in the left wing root, has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir is used for fluid, and 1/10 is used for foam space. A separate air chamber is installed in the reservoir system to provide for a greater fluid capacity in the main reservoir. A reservoir filler assembly is installed in the piping between the reservoir and the air chamber and has a vent line from the filler neck to the tee at the top of the reservoir sight gage. The reservoir is pressurized to 30 to 35 psi by bleed pressure from the engine-driven pumps through an air pressure regulator-aspirator.
- (3) The engine-driven pumps receive fluid from the pressurized main reservoir through respective engine hydraulic fire shutoff valves. The engine hydraulic fire shutoff valves are normally open and can be mechanically controlled from the flight compartment. The pumps supply fluid pressure through respective check valves to the dual filter and relief valve. Some of the fluid from the filter is ported through the regulator-aspirator to pressurize the reservoir. Most of the fluid is routed through a check valve to the system selector valve, and then to the left and right hydraulic power manifolds. The manifolds distribute the fluid pressure to the subsystems.
- (4) Hydraulic fluid is normally supplied to the auxiliary hydraulic pump from a low standpipe in the main reservoir. During alternate operation, the auxiliary hydraulic pump receives fluid supply from the auxiliary pump alternate reservoir, which is located just aft of the auxiliary pump. From these reservoirs, the fluid is ported through the auxiliary pump selector valve which is mechanically controlled from the flight compartment by the system selector control lever. When operating, the auxiliary hydraulic pump supplies fluid pressure to the subsystems through the system selector valve which is also controlled by the system selector control lever in the flight compartment. A filter and check valve are installed in the line from the auxiliary pump to the system selector valve.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) An accumulator is installed in the pressure line to the subsystems to provide a reserve supply of fluid and to act as a surge damper for the system.
- (6) Engine-driven pump fluid pressure is routed through the system selector valve to the left power manifold, where it is distributed to some of the subsystems and through the priority valve to the right power manifold. Fluid pressure from the right power manifold is distributed to the remaining subsystems.
- (7) The priority valve is a spring-loaded, poppet-type, balanced relief valve installed in the line downstream of the left power manifold. The priority valve's function in the system is to prevent the flight control systems from reverting to manual operation during high demands on the hydraulic system.
- (8) A fluid pressure transmitter, located in the nosewheel well, senses the system pressure, which is indicated on the hydraulic system pressure indicator in the flight compartment.

**B. Normal Operation**

- (1) Fluid is supplied to the hydraulic system from the pressurized hydraulic system reservoir. For operation of the hydraulic system under normal conditions, 8.1 US gallons (6.7 Imperial gallons; 30.6 liters) of hydraulic fluid are available to the engine-driven hydraulic pumps, and 12.9 US gallons (10.7 Imperial gallons; 48.8 liters) are available to the auxiliary hydraulic pump. Supply lines from the main reservoir carry fluid to each inboard pylon through normally open engine hydraulic fire shutoff valves to the engine-driven hydraulic pumps. Fluid is supplied to the auxiliary hydraulic pump from the main reservoir through a low standpipe at the base of the reservoir. Fluid is carried from the reservoir through the auxiliary pump selector valve to the auxiliary hydraulic pump.
- (2) The engine-driven hydraulic pumps supply full system pressure (3000 psi nominal) at any given engine speed, from idle to full power. The output flow of the pump is varied by sensing pressure from the outlet side of the pump. Each engine-driven pump contains a solenoid-operated bypass valve which, when energized, bypasses the pressure control regulator of the pump and ports fluid to the pump yoke control piston which feathers the pump. When the pump is feathered, flow rate is reduced to almost zero (1.0 gpm) and to a pressure of approximately 300 psi. Half of this flow maintains pump lubrication and cooling through internal leakage. This leakage is returned, through a check valve, the engine-driven pump case drain line filter, and another check valve to the case drain return port of the reservoir. The pressure fluid from each pump passes through a check valve to the dual filter and relief valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

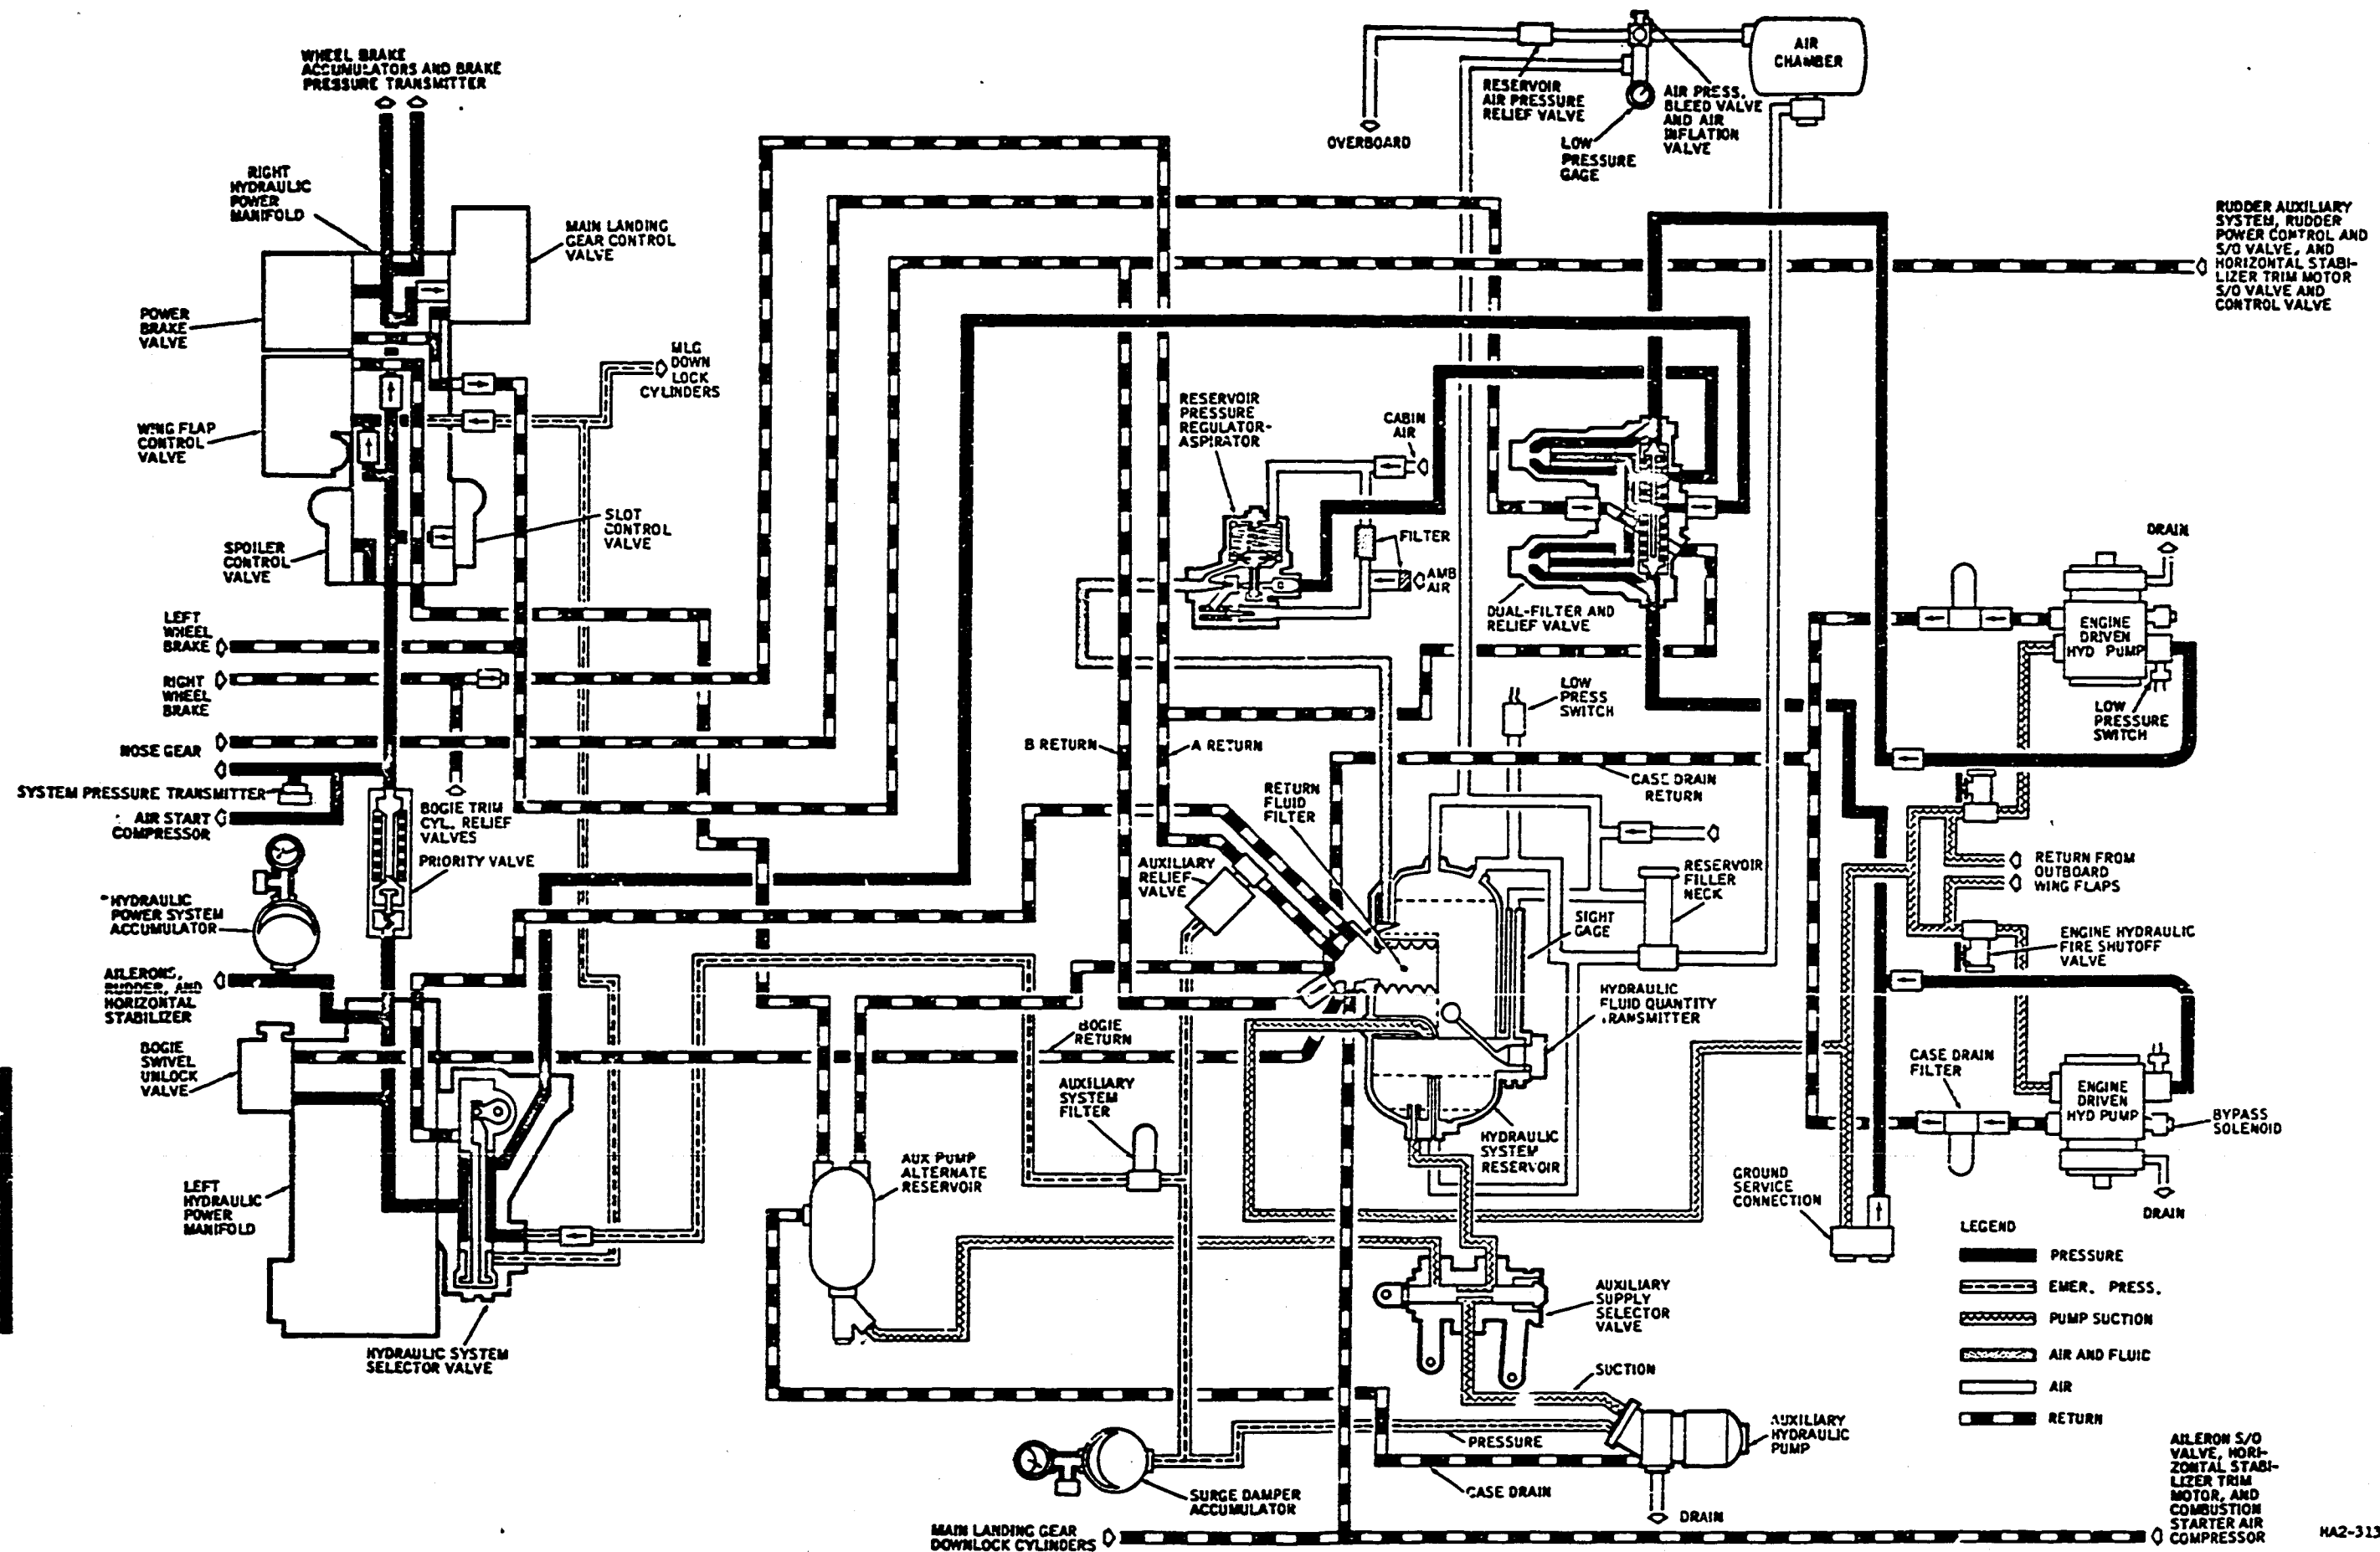

Hydraulic Power System -- Schematic Diagram  
 (Airplane N8786R)  
 Figure 1 (Sheet 1)


29-10-0  
 CODE 11  
 Page 3

Aug 1/68

Printed in U.S.A.

HA2-3131C

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

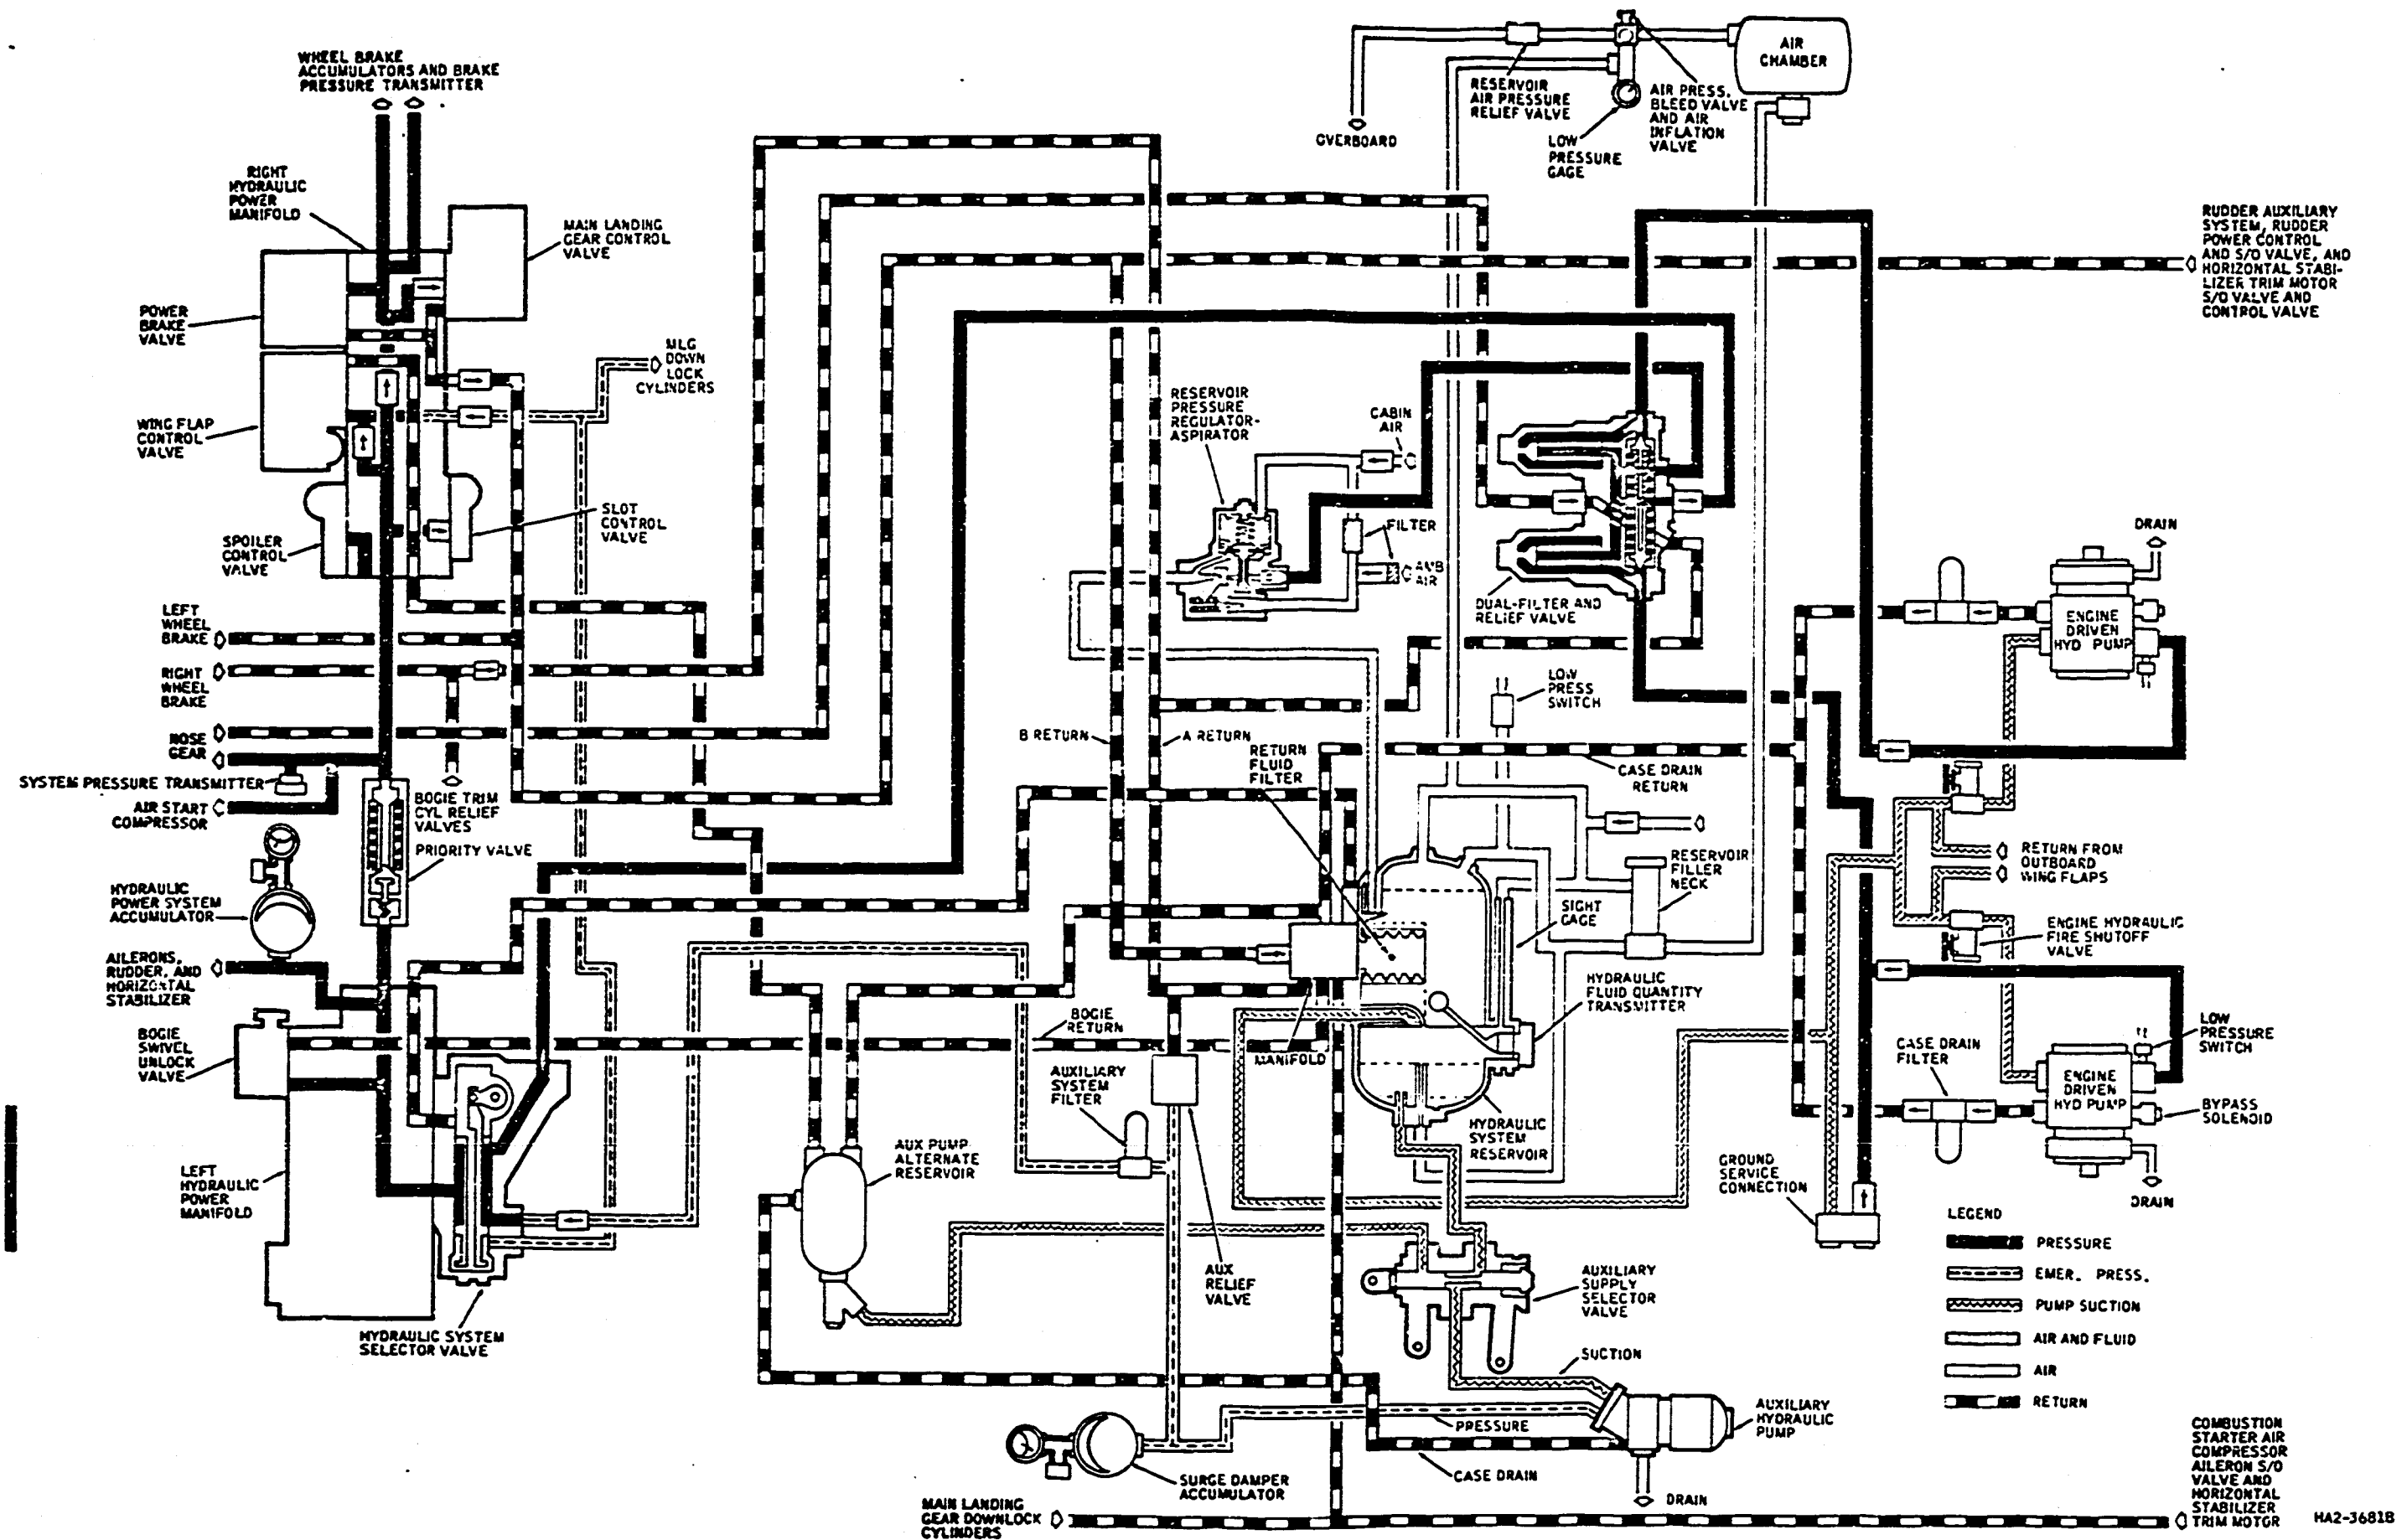


Hydraulic Power System -- Schematic Diagram  
 (Airplanes N8787R and Subsequent)  
 Figure 1 (Sheet 2)

29-10-0  
 CODE 11  
 Page 4A

Aug 1/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

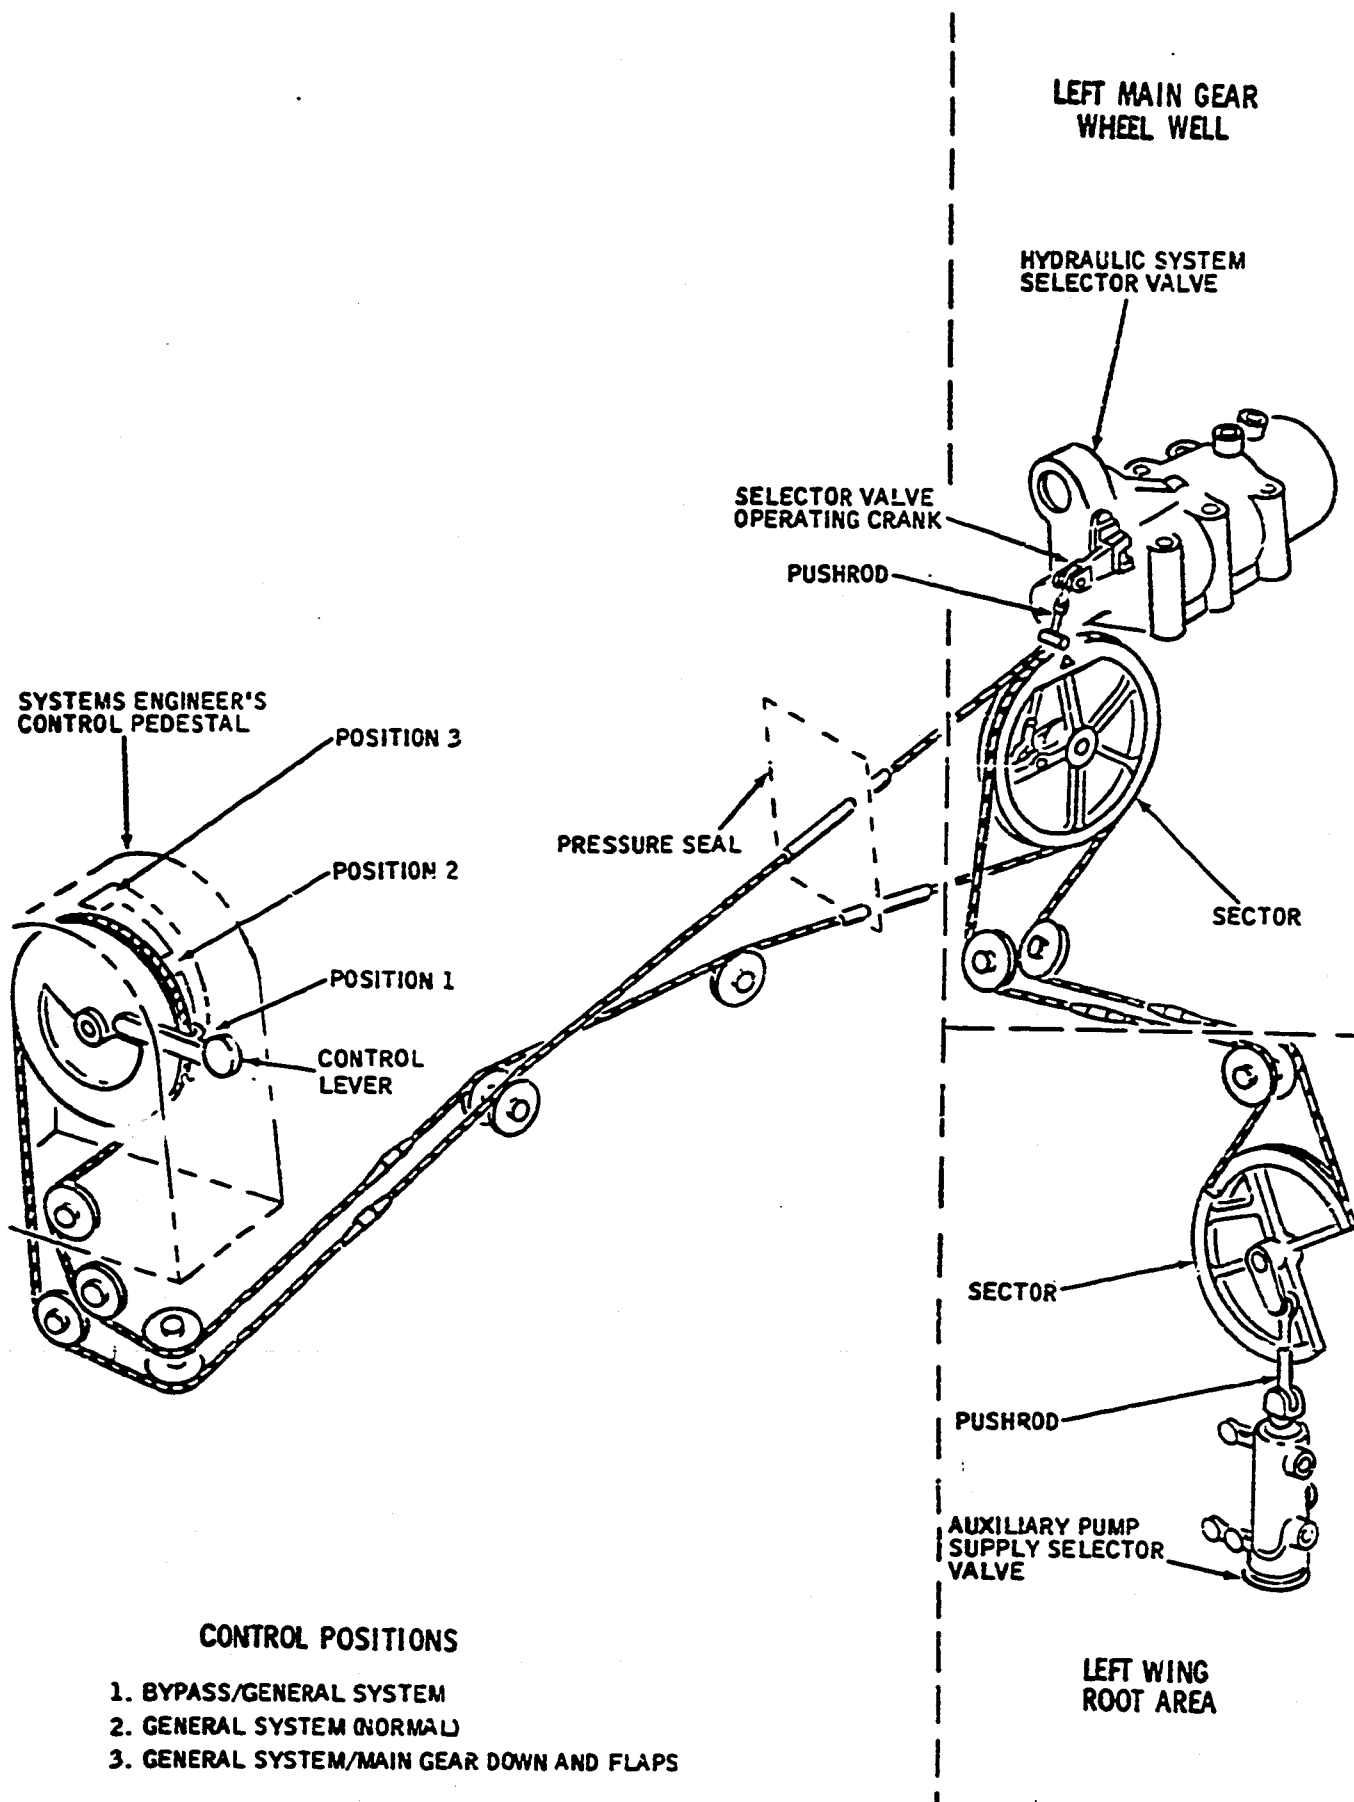

Hydraulic System Selector and Auxiliary Pump Supply  
 Selector Valves -- Mechanical Control Schematic  
 Figure 2

HA2-486

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 11  
 Page 5



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The fluid enters the dual filter and relief valve through the relief valve chamber. The fluid is passed through the filter element, through a manifold, and through a common outlet port. Fluid from the outlet port is routed through a check valve to the system selector valve. If back pressure in the system builds up to approximately 3300 psi, the relief valves in the dual filter and relief valve open and port fluid back to the reservoir via A return port. The relief valve poppet closes again when system pressure drops to approximately 3000 psi.
- (4) The aspirator receives filtered fluid (bleed pressure at normal 3000 psi) from the dual filter and relief valve. The aspirator operates on the jet pump principle. Hydraulic fluid is atomized and mixed with air within the unit by a nozzle and a venturi. The mixture is used to pressurize the reservoir and reservoir air chamber. The regulator diaphragm maintains a pressure range of 30 to 35 psi in the reservoir and air chamber. If there is a regulator malfunction, the aspirator stalls when the outlet pressure reaches a maximum of 40 psi. A reservoir relief valve in the reservoir vent line relieves thermal expansion pressure above 45 (+5, -0) psi.
- (5) Pump pressure fluid enters the system selector valve through the system pressure inlet port. When the pump selector control lever is in the general system (normal) position, fluid is ported to the pressure passages of the left power manifold. The fluid pressure in the left power manifold is ported through the priority valve to the nose gear and the right power manifold and directly to the following valves:
  - (a) Bogie unlock
  - (b) Aileron power shutoff
  - (c) Rudder power shutoff
  - (d) Longitudinal trim hydraulic motor shutoff.
- (6) The right power manifold distributes fluid pressure to the brake accumulators, the pressure transmitter, and the following control valves:
  - (a) Wing flap
  - (b) Slot
  - (c) Main gear
  - (d) Power brake.
- (7) The return fluid from the wing flap control valve is ported through the right power manifold and into the auxiliary hydraulic pump alternate reservoir. Return fluid from the outboard wing flaps is piped into the suction lines for each engine-driven hydraulic pump. Return fluid from slot control valve is ported into the A return line to the main

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

reservoir. The power brake and main gear control valve gear up return fluid is ported through a restrictor check valve into the B return line to the reservoir. The main gear control valve gear down return pressure bypasses the right manifold and returns to the reservoir through the A return line. The return port of the bogie unlock valve ports fluid from the left manifold to the bogie return port of the reservoir. All return fluid entering the reservoir is filtered through the return ports filter located within the reservoir.

C. Bypass Operation

- (1) The output of the engine-driven hydraulic pumps is bypassed by moving the system selector control lever out of the general system (normal) position to the bypass/general system position.
- (2) The system selector valve in the bypass position ports engine-driven pump pressure from the dual filter and relief valve directly to the return passage of the left power manifold. From the manifold, the fluid is ported directly to a tee in the wing flap return port of the hydraulic system reservoir. In the bypass condition, the auxiliary hydraulic pump receives fluid from the hydraulic system reservoir, pressurizes it to system pressure, and ports it to the left and right power manifolds for distribution to the subsystems.

D. Alternate Operation

- (1) When both engine-driven hydraulic pumps and the auxiliary hydraulic pump are rendered inoperative due to the loss of the normal supply of fluid, the hydraulic power system can be rigged for alternate operation. This is accomplished by placing the system selector control lever in the general system/main gear downlock and flaps position. When the system selector control lever is in this position, the auxiliary hydraulic pump supply selector valve is positioned to supply fluid from the auxiliary pump alternate reservoir to the auxiliary pump.
- (2) Fluid is supplied to the auxiliary pump from the outlet port of the auxiliary pump supply selector valve. Output pressure is ported through the auxiliary system filter and check valve to the auxiliary pressure inlet port of the system selector valve.
- (3) In the general system/main gear downlock and flaps position, auxiliary pump pressure bypasses the manifold pressure passages and is ported from the alternate outlet port of the system selector valve. Fluid from this port flows directly to a port on the right power manifold, through an internal check valve in the manifold, to the wing flap control valve. A line, teed into the alternate supply line, runs directly to a shuttle valve in the main gear downlock cylinder line. When auxiliary pressure is applied, the shuttle valve shifts, porting fluid into the downlock bungee cylinder's downlock side.

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 11  
Page 7

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

E. Mechanical Control

- (1) The hydraulic power mechanical control system consists of the hydraulic system selector control lever cable drum, the system selector valve sector, the system selector valve, the auxiliary hydraulic pump supply selector valve sector, and the auxiliary hydraulic pump supply selector valve.
- (2) The control lever located on the system engineer's control pedestal is used to position the system selector valve and, in turn, the auxiliary hydraulic pump supply selector valve.
- (3) The control lever is spring loaded into general system (normal) position, and is connected to the control lever cable drum. Two cables run from the drum, under the cabin floor, aft through the pressure bulkhead at the rear wing spar, and into the left wheel well to the system selector valve sector. A pushrod connects the sector to the positioning lever of the system selector valve.
- (4) A second set of cables is routed from the system selector valve sector into the left wing root to the auxiliary hydraulic pump supply selector valve sector. When the system selector valve is in either bypass or normal, the auxiliary hydraulic pump supply selector valve sector is arranged so that the pushrod idles between the two positions. This allows the valve to remain in the auxiliary position. When the sector is moved to the alternate position, the pushrod is pulled by the sector to reposition the valve to the alternate position.
- (5) The control lever is normally in the general system (normal) position. To move the system selector valve to the bypass position, the control lever is moved to the bypass/general system position. When the system selector valve is moved to the bypass position, the auxiliary hydraulic pump supply selector valve sector is moved to a new position. Due to the idle feature on the auxiliary sector, the valve remains in the auxiliary position. With the valve in this position, fluid is supplied to the auxiliary pump through the low standpipe in the hydraulic system reservoir. In this condition, engine-driven pump pressure is ported to the reservoir and the auxiliary pump pressure is ported to the general system.
- (6) To put the system in alternate operation, the control is moved to the general system/main gear downlock and flaps position. This moves the system selector valve to the alternate position, and simultaneously moves the auxiliary hydraulic pump supply selector valve to the alternate position. Fluid is supplied to the auxiliary pump from the auxiliary hydraulic pump alternate reservoir. Fluid pressure from the auxiliary pump is ported to the flap system control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported from the system selector valve to the general system.


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

2. System Components

A. Hydraulic System Reservoir (See Figures 3 and 4.)

- (1) The hydraulic system reservoir is installed on the aft side of the wing rear spar in the left wing root and is accessible through the left wing root access door. The hydraulic system reservoir serves as the main source of hydraulic fluid for the engine-driven hydraulic pumps and the normal supply for the auxiliary hydraulic pump. The reservoir is cylindrical in shape and contains a filter, baffle, and a screen cover encasing the filter. The filter prevents foreign particles from contaminating the fluid supply. Mountings are provided on the exterior surface of the reservoir for return line ports, aspirator port, electrical sensing units, sight gage, instruction placards, magnetic drain plug, and system supply ports.
- (2) The reservoir is pressurized with air from the regulator-aspirator to a range of 30 to 35 psi and has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir volume is used for fluid and 1/10 is used for foam space.
- (3) The aspirator port through which the reservoir is pressurized is located in the recess on top of the reservoir. An aspirator-deaerator filter is supported in the reservoir by a screen and support box assembly which is mounted to the reservoir wall by two bolts.
- (4) On airplane N8786R the mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The manifold is bolted to the flange and contains five ports: return port A, located at the bottom; return port B, located at the lower right side; the low-pressure return port, located at the upper right; the wing flap return port, located at the top; and the bogie return port, located on the face of the manifold just below the wing flap return port.
- (5) The return fluid filter is installed in the reservoir, behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the manifold holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
- (6) On airplanes N8787R and subsequent, the mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The return ports manifold is an open-centered ring, flanged at both sides and provided with five fluid ports around its circumference; return port A is located at the bottom, return port B is located at the lower right side, the wing flap return port is located at the upper left side, and the system selector valve bypass port is located at the top. One flange of the manifold is mounted with six bolts to the mounting flange


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

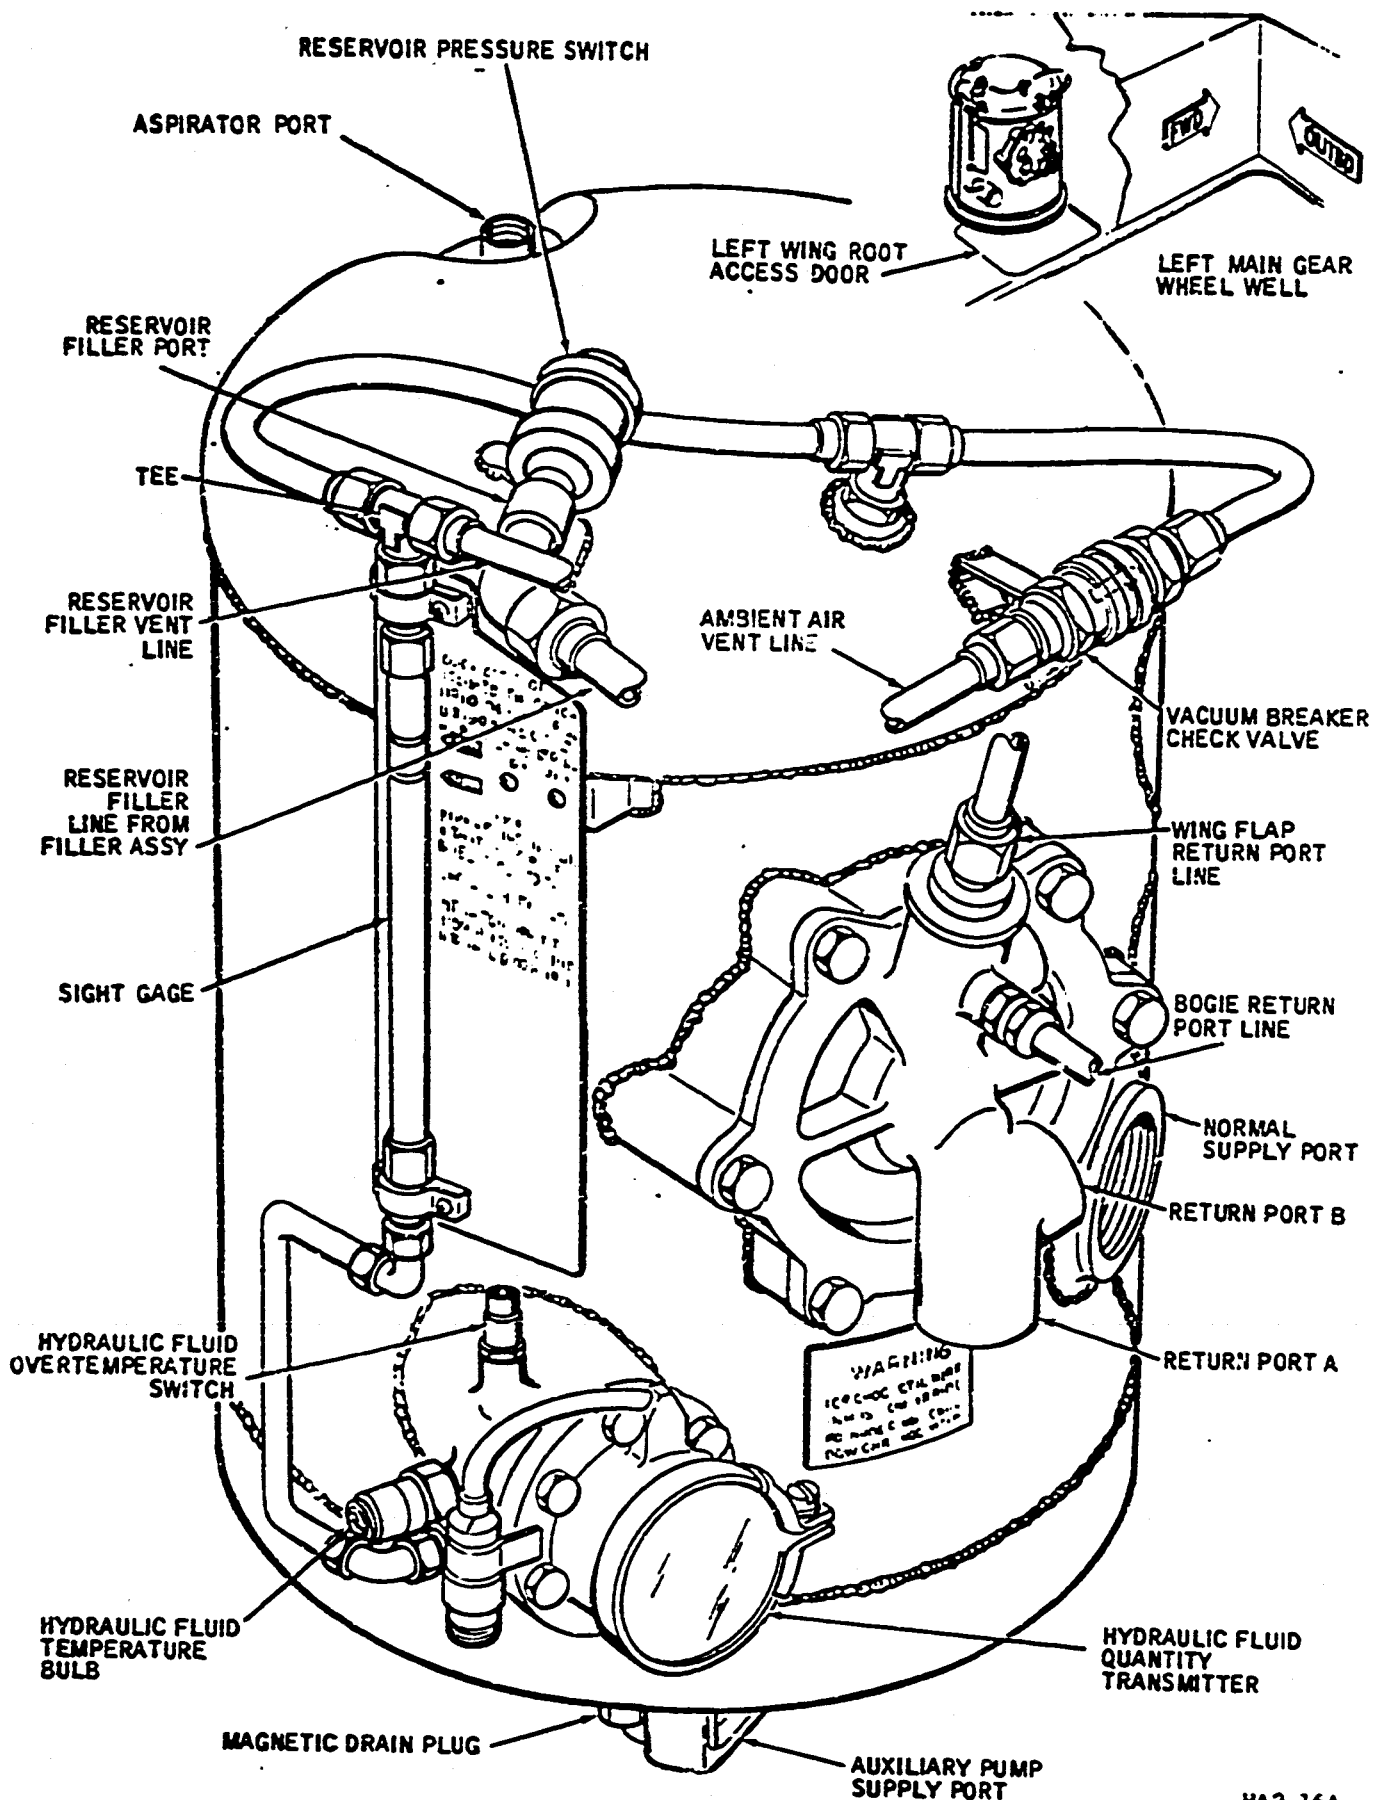

Hydraulic System Reservoir -- External View  
 (Airplane N8786R)  
 Figure 3 (Sheet 1)

HA2-16A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

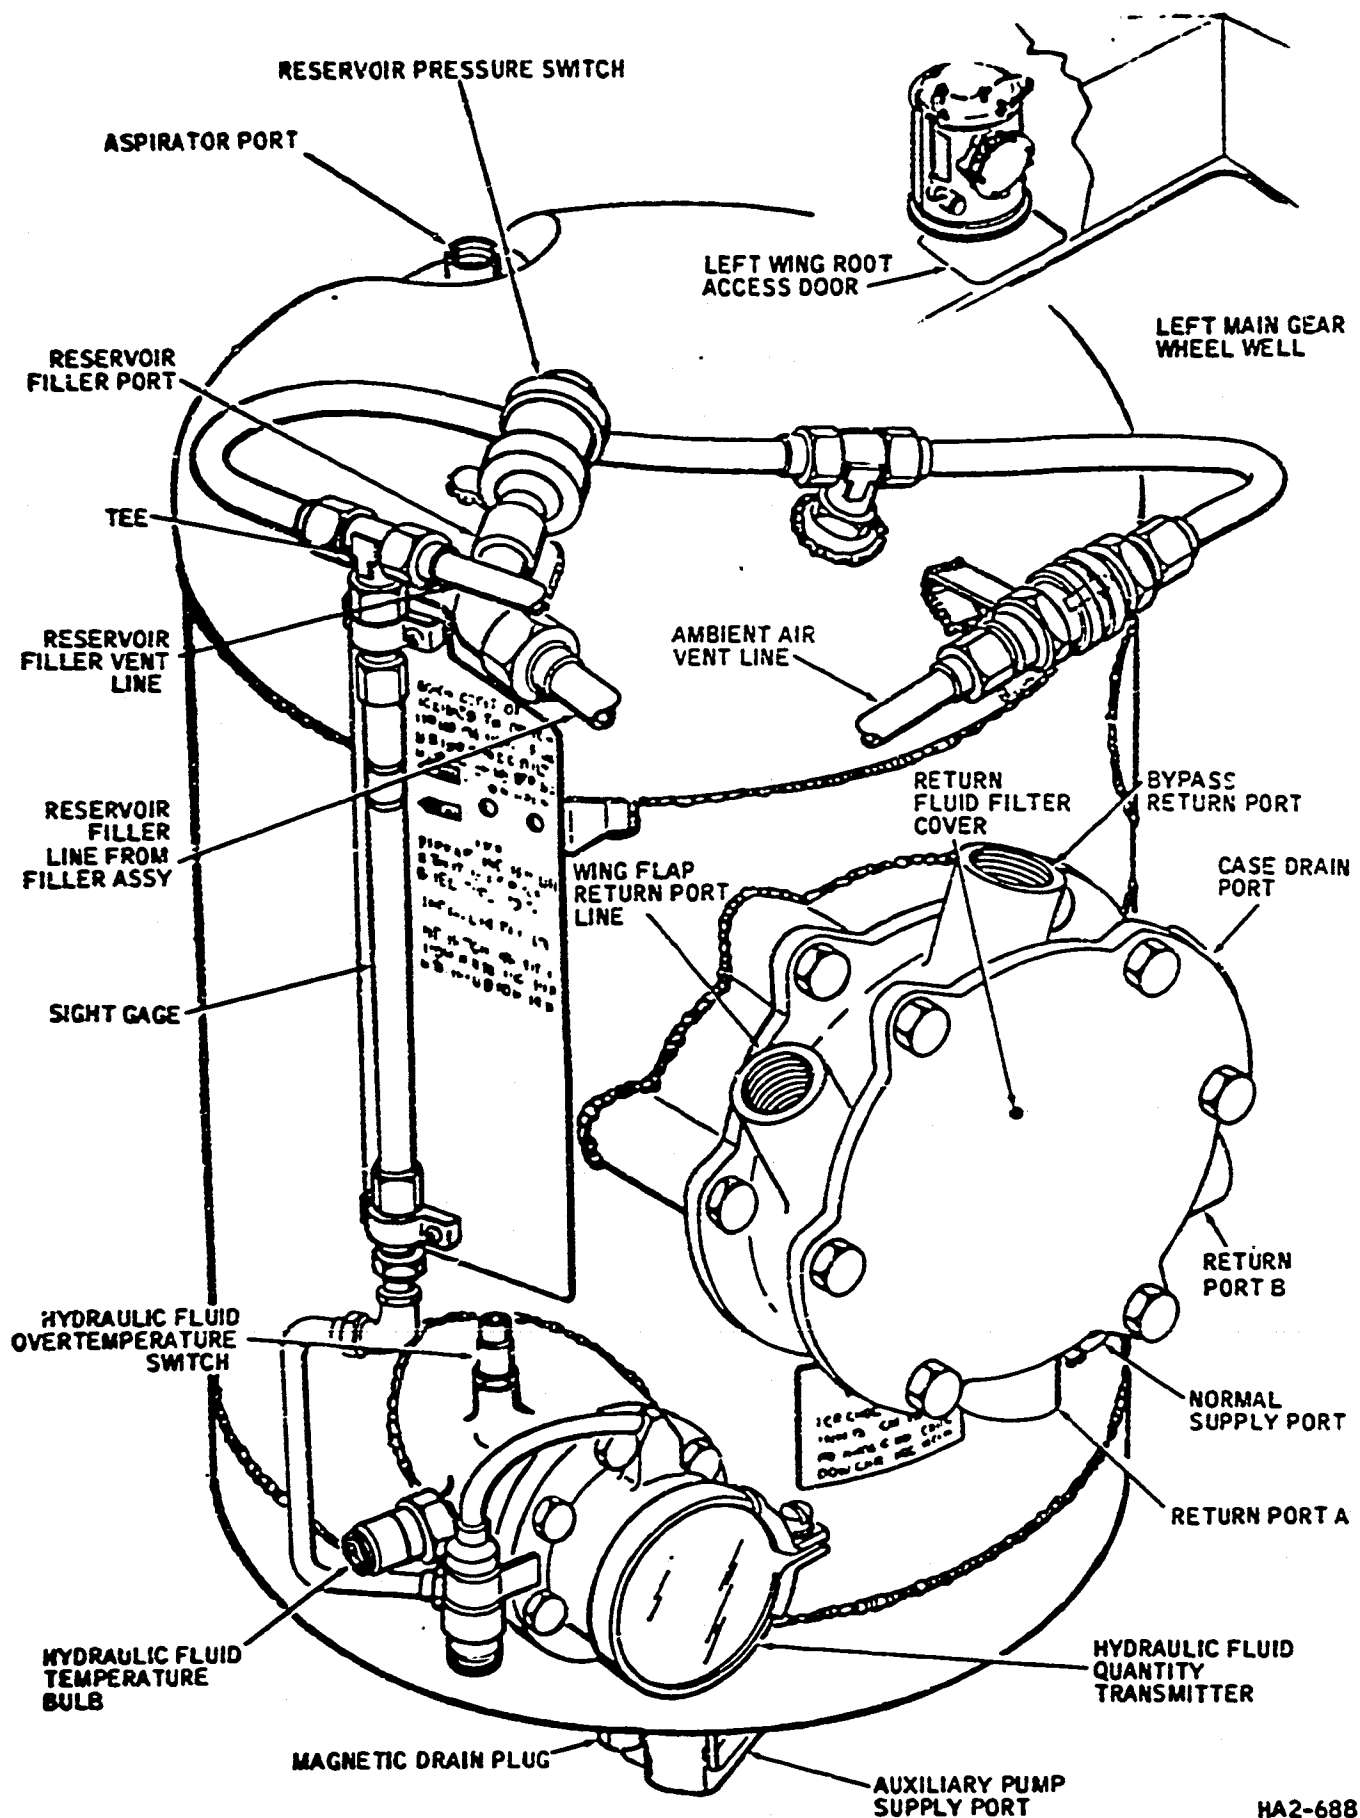

HA2-688

Hydraulic System Reservoir -- External View  
 (Airplanes N8787R and Subsequent)  
 Figure 3 (Sheet 2)

Aug 1/68

29-10-0  
 CODE 11  
 Page 10A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


on the reservoir. The return fluid filter cover fits into the open side of the manifold, and is attached to the outer manifold flange with six bolts to form a fluid-tight cover for both the manifold and the filter.

- (7) The return fluid filter is installed in the reservoir behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the return fluid filter cover holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to the engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
- (8) A flanged adapter for the fluid quantity transmitter is welded to the reservoir below and to the left of the return ports manifold. The adapter is provided with two small port bosses for the hydraulic fluid temperature bulb and the hydraulic fluid overtemperature switch. The lower end of the sight gage connects to a third port in the adapter, while the top of the sight gage tees into a port at the top of the reservoir. An instruction plate is mounted behind the sight gage and the vacuum breaker check valve tees into the port at the top of the reservoir that is used by the sight gage.

**B. Hydraulic Reservoir Return Fluid Filter (See Figure 4.)**

- (1) The reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply. The filter is located behind the return ports manifold and is spring loaded to act as its own relief valve. On airplane N8786R access to the filter is by removing the return ports manifold. Removal of the return ports manifold necessitates disconnecting the return lines from the manifold and removal of six bolts which secure the manifold to the reservoir. The filter which is attached to the manifold is then withdrawn from the reservoir. On airplanes N8787R and subsequent access to the filter is gained by removing the return filter cover from the return ports manifold by removal of six bolts. The filter is attached to the cover by a retaining spring, and is withdrawn from the reservoir when the cover is removed.
- (2) Externally, the filter consists of two perforated concentric tubes. The area between the tubes is closed by metal end caps which are bonded to the two tubes. A resilient rubber gasket is bonded to each of the caps. Each gasket must be smooth and flat for proper sealing of the filter. The gaskets act as a static seal and a relief valve seat.
- (3) Internally, the filter has a 10-micron, resin-impregnated, convoluted paper-type filter element. The area of the filter element is approximately 1960 square inches. The filter is held in place by a retaining spring. One end of the spring is attached to an eyebolt located inside the return port's manifold. The spring passes through the center

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

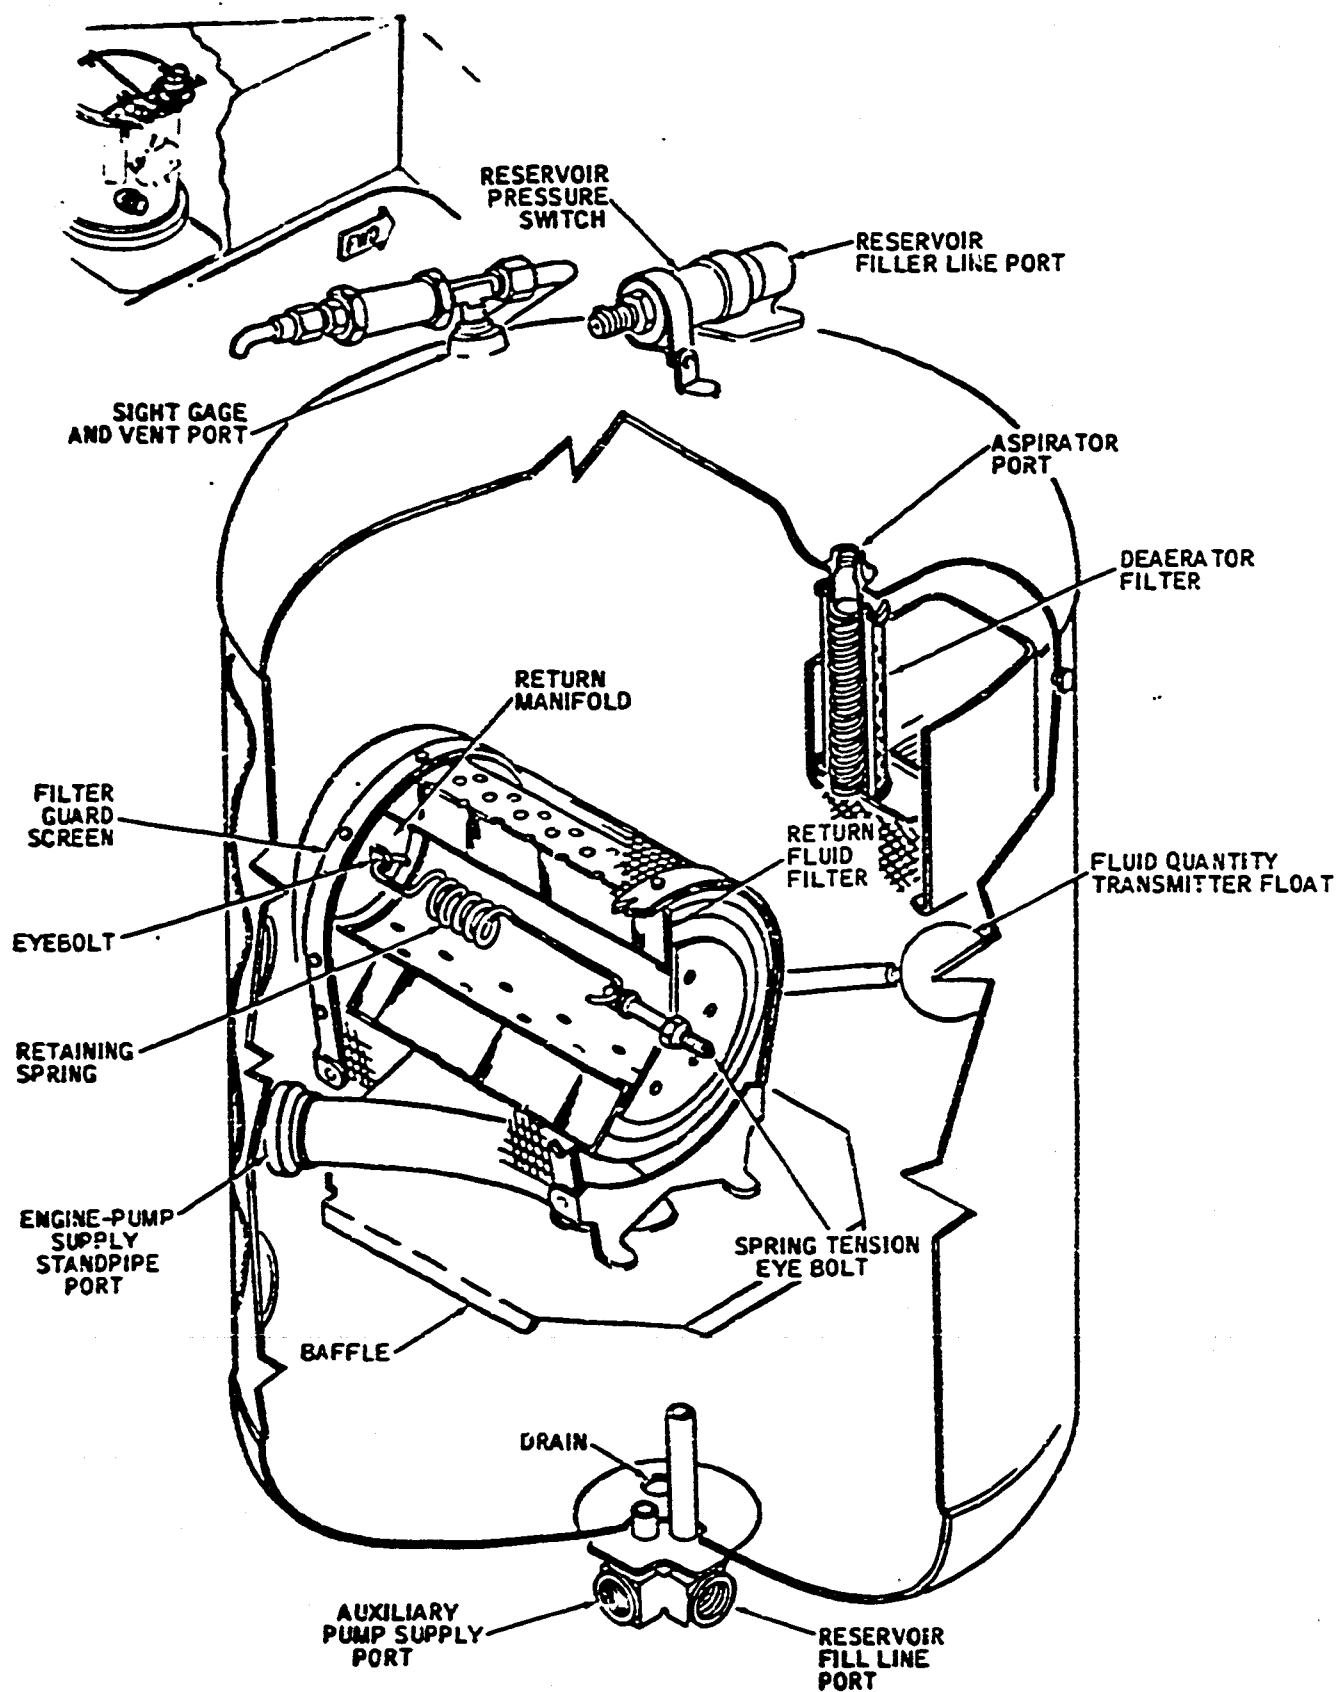

Hydraulic System Reservoir -- Cutaway View  
 Figure 4

HA2-689

Aug 1/68

Printed in U.S.A.

29-10-0  
 CODE 11  
 Page 11




DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

chamber of the filter and is connected to another eyebolt. This eyebolt is secured to a large washer and plate by means of a self-locking nut. The washer seats on the rubber gasket which is bonded to the filter. The fluid enters the center chamber of the filter and passes through the inner tube of the filter to the filter element by means of perforation holes. Foreign matter is filtered out by the filter element, and the fluid leaves the element through perforation holes in the outer tube. When the element becomes saturated with foreign matter, the filter acts as its own relief valve and unseats at 20 to 25 psi above normal return pressure which allows fluid to bypass the filter and enter the reservoir.

C. Hydraulic Reservoir Air Pressure Regulator-Aspirator (See Figure 5.)

- (1) The reservoir air pressure regulator-aspirator is a jet-type air pump, regulated by a pressure-sensitive shutoff valve. The unit pressurizes the hydraulic reservoir with air to the operating pressure range of 30 to 35 psi. The regulator-aspirator is located on the top inboard side of the reservoir and is mounted on the reservoir retainer ring. Access to regulator-aspirator is through the left wing root access door.
- (2) The regulator-aspirator assembly consists of a main aspirator body and a regulator housing. The main aspirator body has two inlet ports and one outlet port. The ports are permanently identified inlet, outlet, and air inlet. The plug for an air check valve is located near the outlet port. A chemically treated paper filter is installed near the aspirator body air inlet port in the air line from the pressurized cabin area. A metal screen filter is installed on the check valve which tees into the aspirator body air inlet port.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

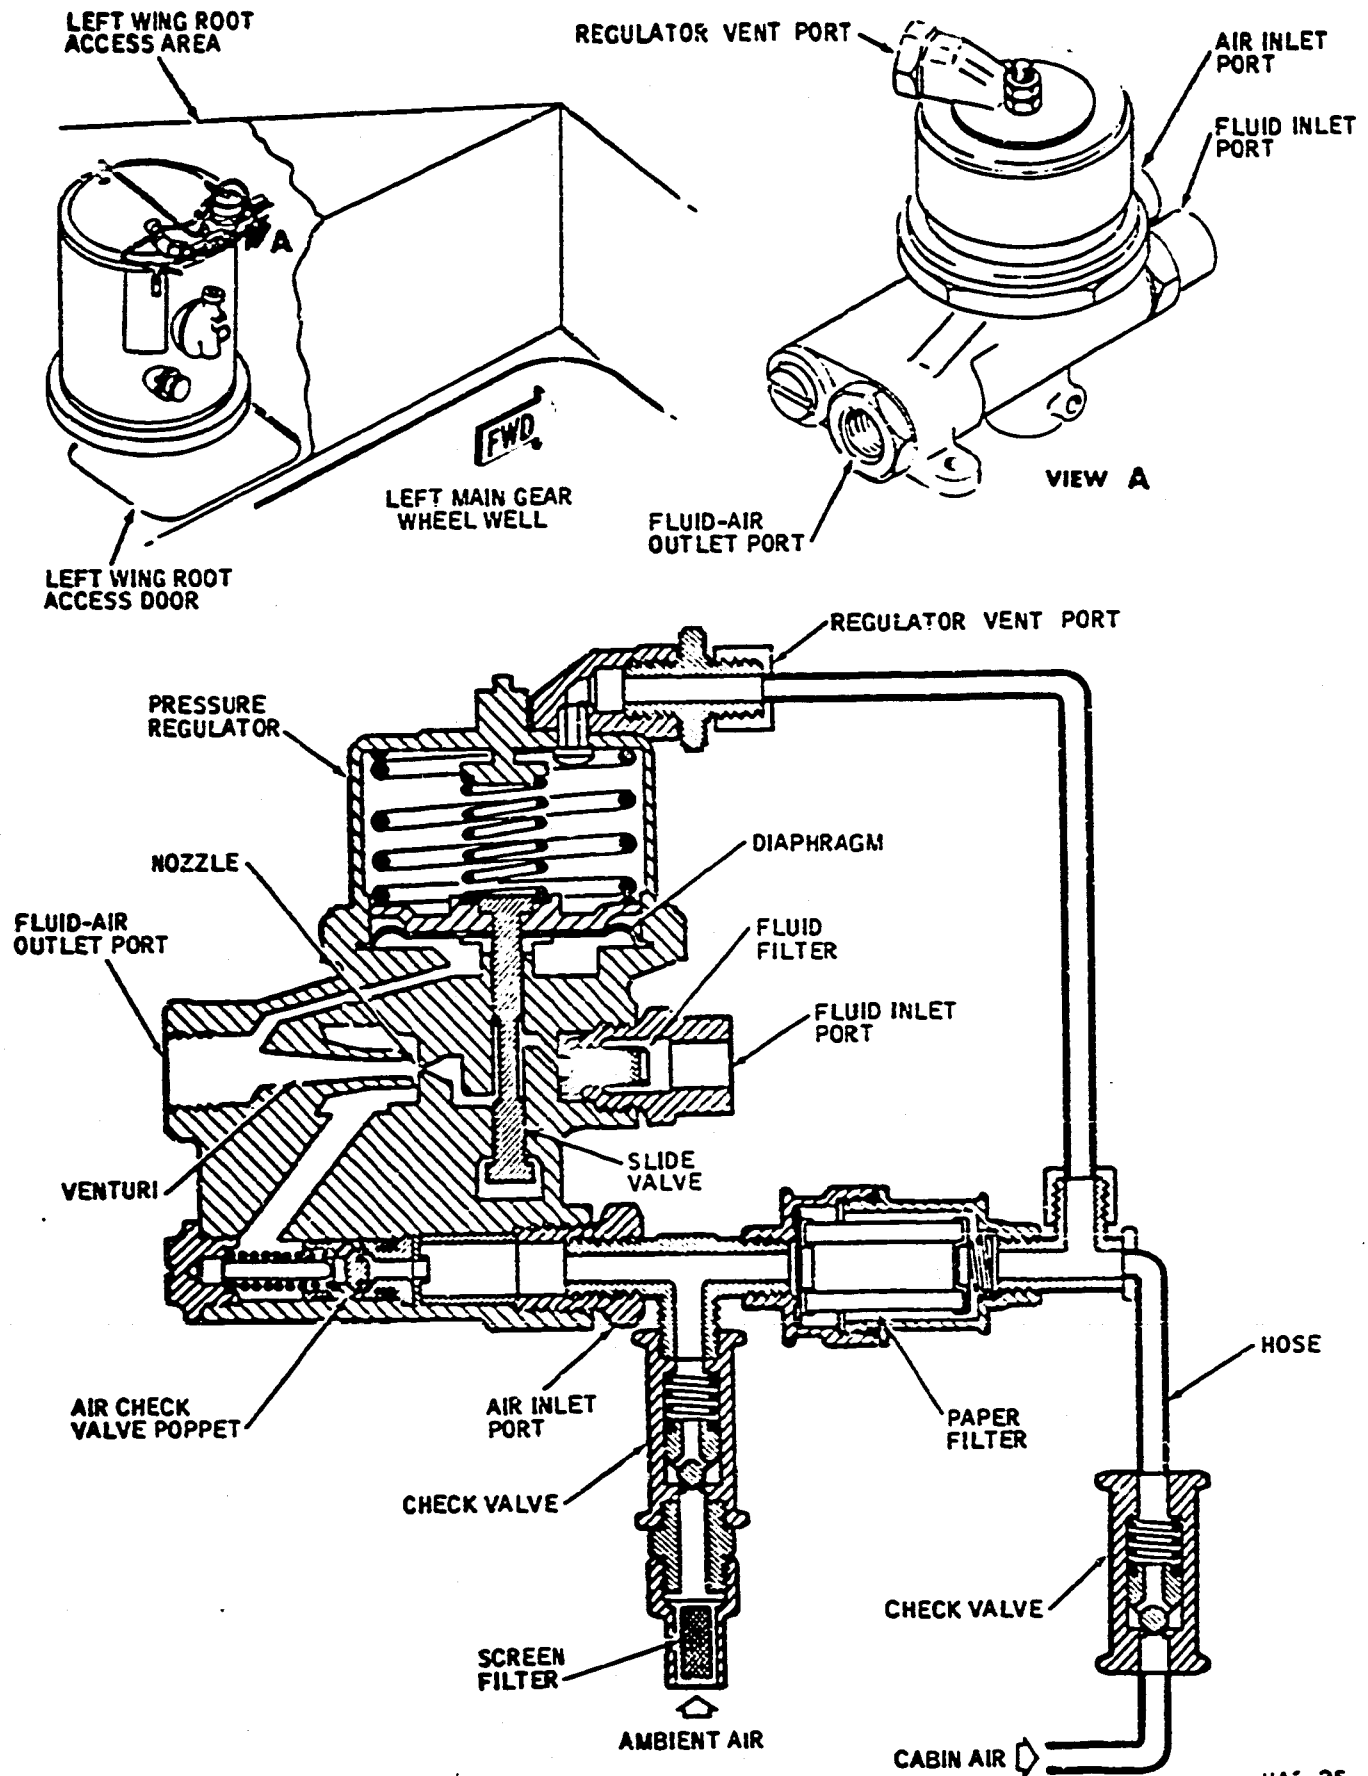

Reservoir Air Pressure  
 Regulator-Aspirator -- Schematic  
 Figure 5

HA: -25

29-10-0  
 CODE 11  
 Page 13

Jun 15/67

Printed in U.S.A.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The reservoir air pressure regulator-aspirator operates basically with a jet pump action which is regulator controlled. Fluid enters the assembly through the fluid inlet port where it is filtered and then ported through the valve assembly of the regulator. During normal operation, when air pressure at the outlet port is under 30 psi, the valve is open porting fluid to the nozzle. The orifice in the nozzle sprays the fluid through the venturi of the outlet port, creating a vacuum in the chamber around the venturi. When the vacuum becomes great enough to create a pressure differential of approximately 1 psi, ambient air opens the air check valve. The air is ported to the chamber around the venturi and is siphoned, with the fluid, through the outlet port.
- (4) Hydraulic fluid inlet pressure at the engine-driven hydraulic pumps is improved at high altitude operation by supplying pressurized filtered cabin air to the reservoir regulator-aspirator instead of ambient outside air. Part of the inlet air is diverted by a tee fitting to the regulator chamber to provide a more positive regulating force on the diaphragm than would be obtained with low ambient pressures. The chemically treated paper filter, installed in the regulator-aspirator air supply line from the cabin, removes smoke tars and impurities from the pressurized cabin air. The steel mesh screen filter, installed on the check valve which tees into the regulator-aspirator air inlet port downstream of the paper filter, removes dust, dirt, and foreign particles from the ambient air and serves as a standby to supply filtered air in event the paper filter is clogged.
- (5) As pressure in the reservoir builds up, back pressure is bled from the outlet port to the diaphragm chamber. The reaction on the diaphragm begins to move the slide valve to cut off the fluid flow. At 30 to 35 psi of back pressure, the diaphragm completely closes the slide valve, cutting off the flow of fluid. If there is a regulator malfunction, the aspirator stalls when outlet pressure reaches a maximum of 40 psi.
- (6) The aspirator is capable of pressurizing the reservoir to 30 to 35 psi in approximately 4 minutes at altitudes from sea level to 15,000 feet, when fluid is ported through the nozzle at 0.5 gpm at 3000 psi.


**D. Regulator-Aspirator Air Filters (See Figure 6.)**

- (1) The regulator-aspirator air filters remove ambient and cabin air impurities from the air which is used to pressurize the main hydraulic system reservoir. The filtering system is composed of two filters. One of which is a paper element filter, installed directly in the cabin air supply line near the regulator-aspirator. The other filter is a fine mesh, screen-type filter, installed on a check valve and positioned at right angles to the regulator-aspirator air inlet port. The screen filter, in addition to providing an immediate supply of ambient air during ground operations, serves as a standby air inlet to preclude air starvation of the regulator-aspirator in the event the paper element filter becomes clogged.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

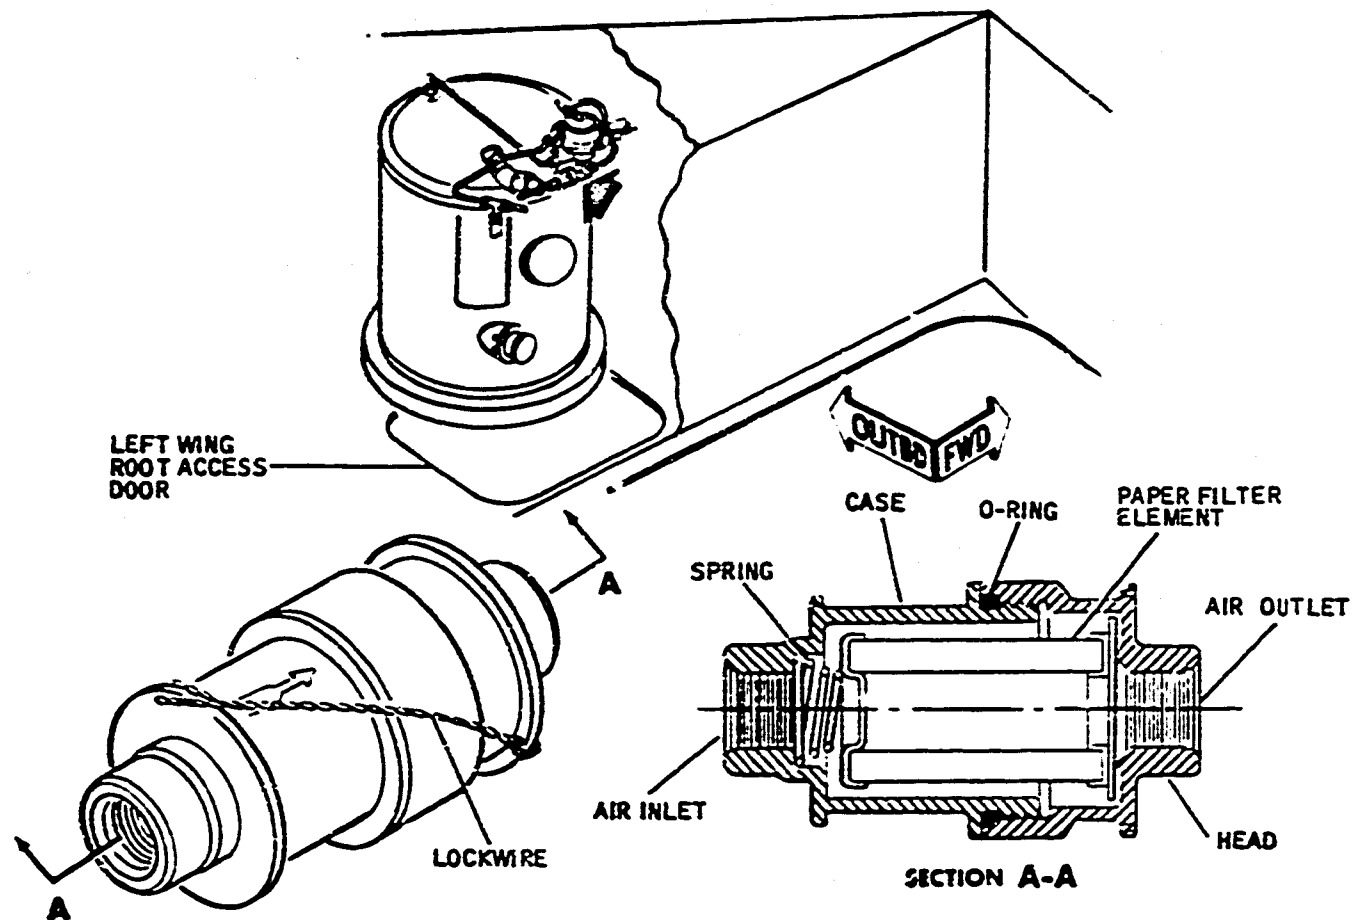

PAPER ELEMENT FILTER

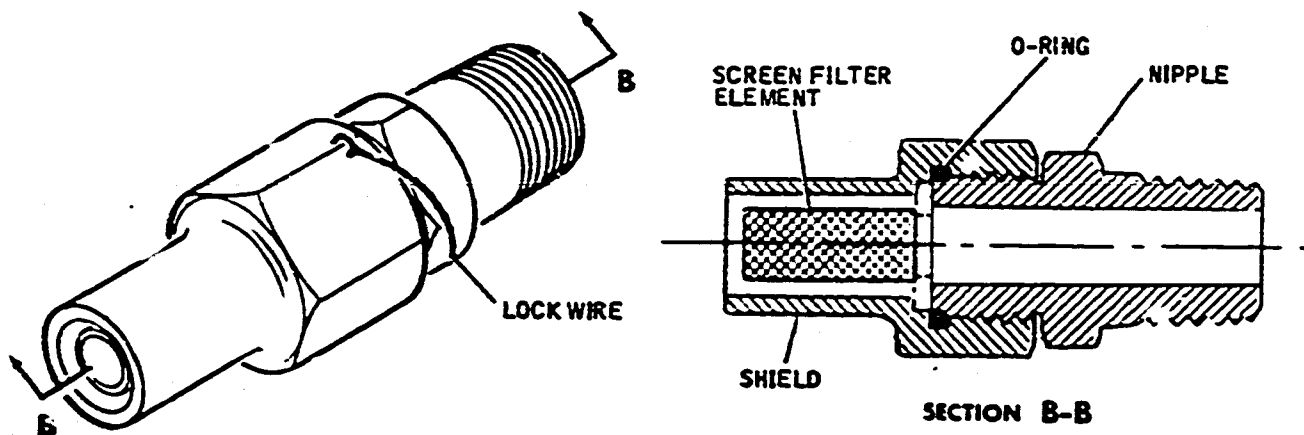

SCREEN FILTER

Regulator-Aspirator Air Filters --  
 Cutaway View  
 Figure 6

HA2-35

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 11  
 Page 15

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

**E. Hydraulic Reservoir Relief Valve (See Figure 7.)**

- (1) The reservoir relief valve and the air pressure aspirator-regulator keep the reservoir pressurized to normal operating range. The valve relieves excess air pressure which may build up in the reservoir through thermal expansion in the system. The valve has an inlet port and an outlet port and consists, internally, of an inlet port seat and a spring-loaded poppet.
- (2) The relief valve is installed in the overboard vent line downstream of the hydraulic reservoir air bleed valve. In the event that excess pressure builds up in the reservoir, the poppet will start to relieve at 45 (+5, -0) psi. Full flow of 10 gpm is attained at 80 psi maximum. The poppet reseats at 90 percent of the opening pressure.

**F. Hydraulic Reservoir Air Bleed Valve (See Figure 8.)**

- (1) The hydraulic reservoir air bleed valve and pressure gage are located on the aft side of the rear spar in the left main gear wheel well, inboard of the hydraulic reservoir air chamber. The bleed valve and gage are installed in the overboard vent line, between the reservoir air chamber and the reservoir relief valve.
- (2) The bleed valve is used to relieve the reservoir air pressure prior to disconnecting lines or components in the hydraulic system. The pressure gage provides a ready indication of the hydraulic reservoir air pressure and is used in conjunction with the bleed valve to indicate the air pressure status.
- (3) The air inflation valve is installed on the same fitting as the bleed valve and pressure gage. The air inflation valve is used to manually charge the reservoir with air or dry nitrogen.


**G. Hydraulic Reservoir Vacuum Breaker Check Valve (See Figure 9.)**

- (1) The hydraulic reservoir vacuum breaker check valve is installed on the regulator-aspirator mounting bracket, and connects to the tee fitting at the top of the reservoir. The valve is vented to ambient air. The purpose of this valve is to maintain atmospheric pressure in the reservoir, allowing hydraulic fluid to flow to the auxiliary hydraulic pump in the event of a failure of the reservoir pressurization system. The failure, or breakdown, of the pressurization system could cause a fluid starvation at the auxiliary hydraulic pump because of vacuum buildup in the reservoir.

**H. Hydraulic Reservoir Air Chamber**

- (1) The hydraulic reservoir air chamber is a small, cylindrical tank with a capacity of 700 cubic inches. It has two ports, an inlet port at the bottom of the chamber and an outlet port in one end of the chamber. The inlet port mounting boss is fitted with a drain plug. The air chamber is

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

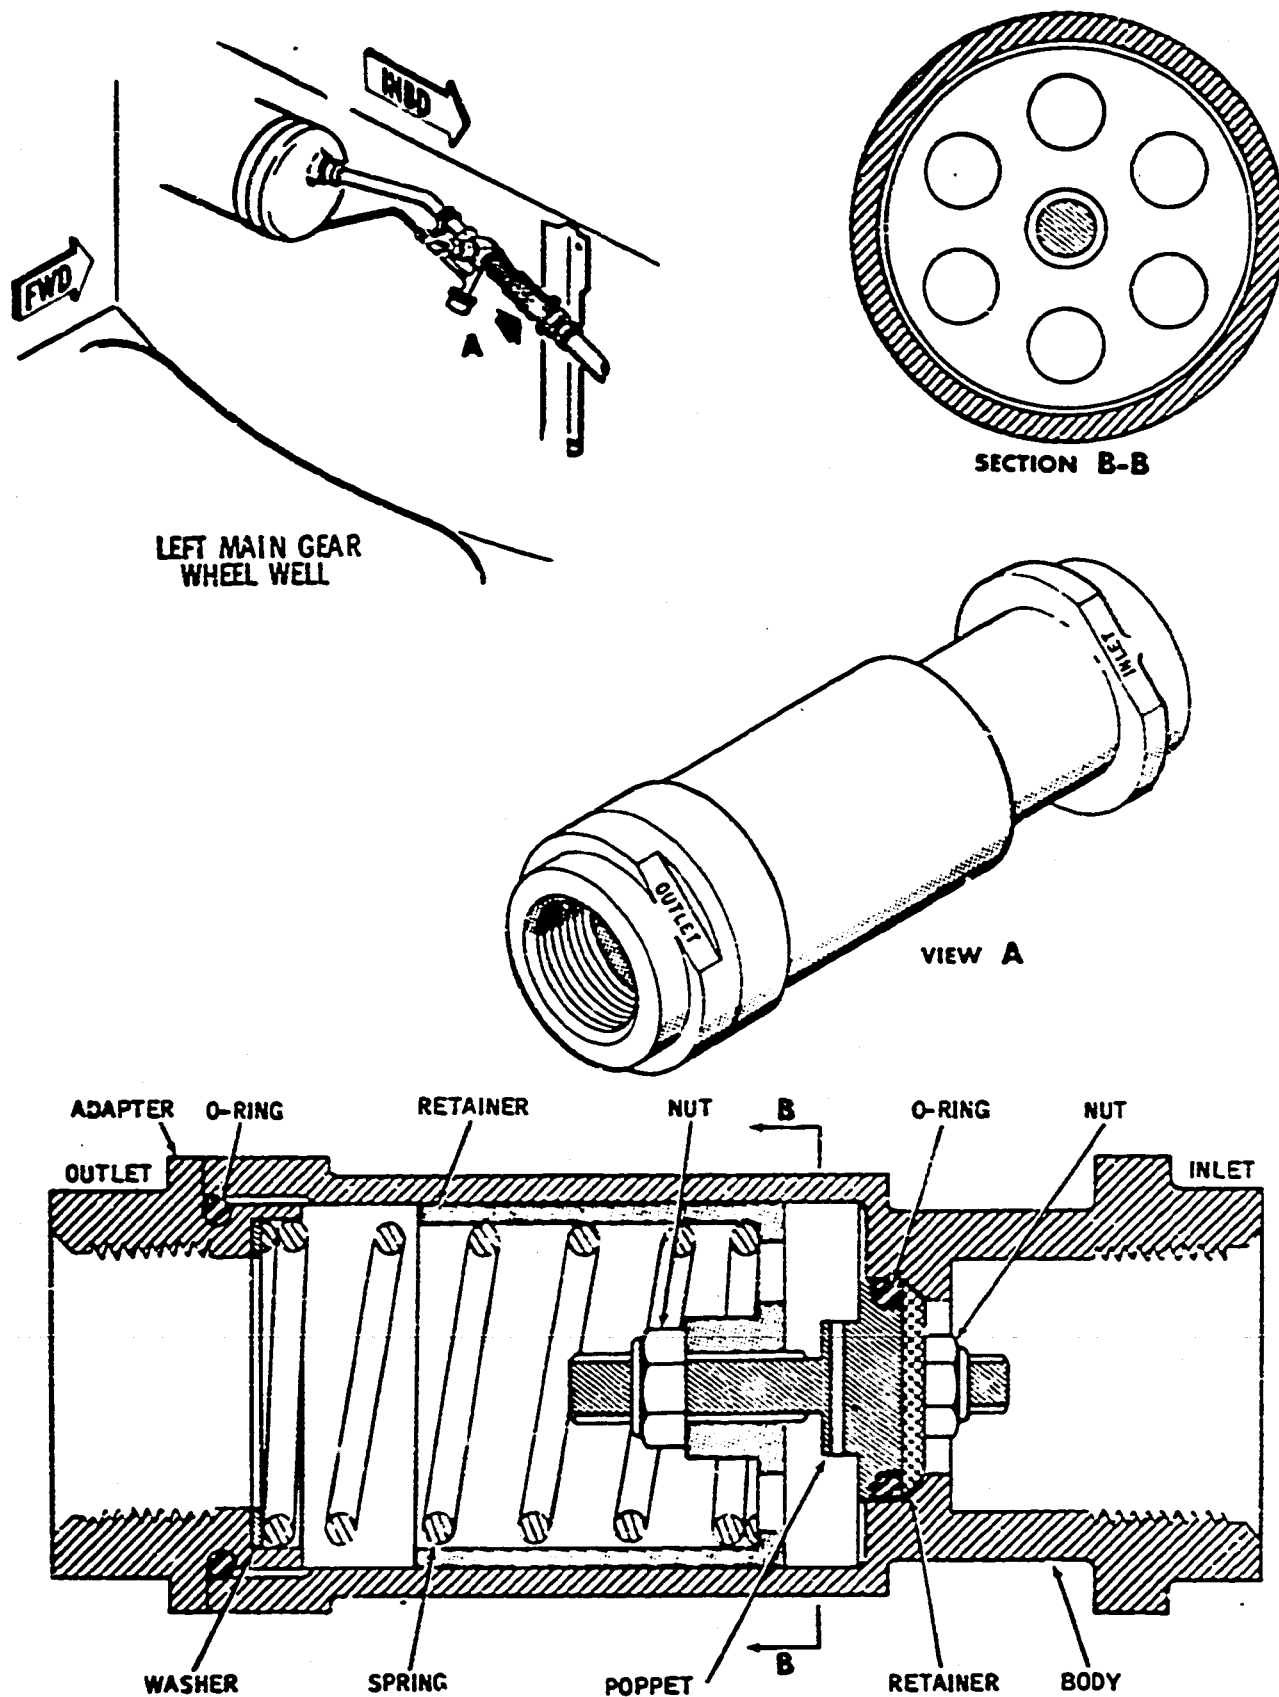

Hydraulic Reservoir Relief Valve  
 Figure 7


HA2-17

29-10-0  
 CODE 11  
 Page 17

Jun 15/67

Printed in U.S.A.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

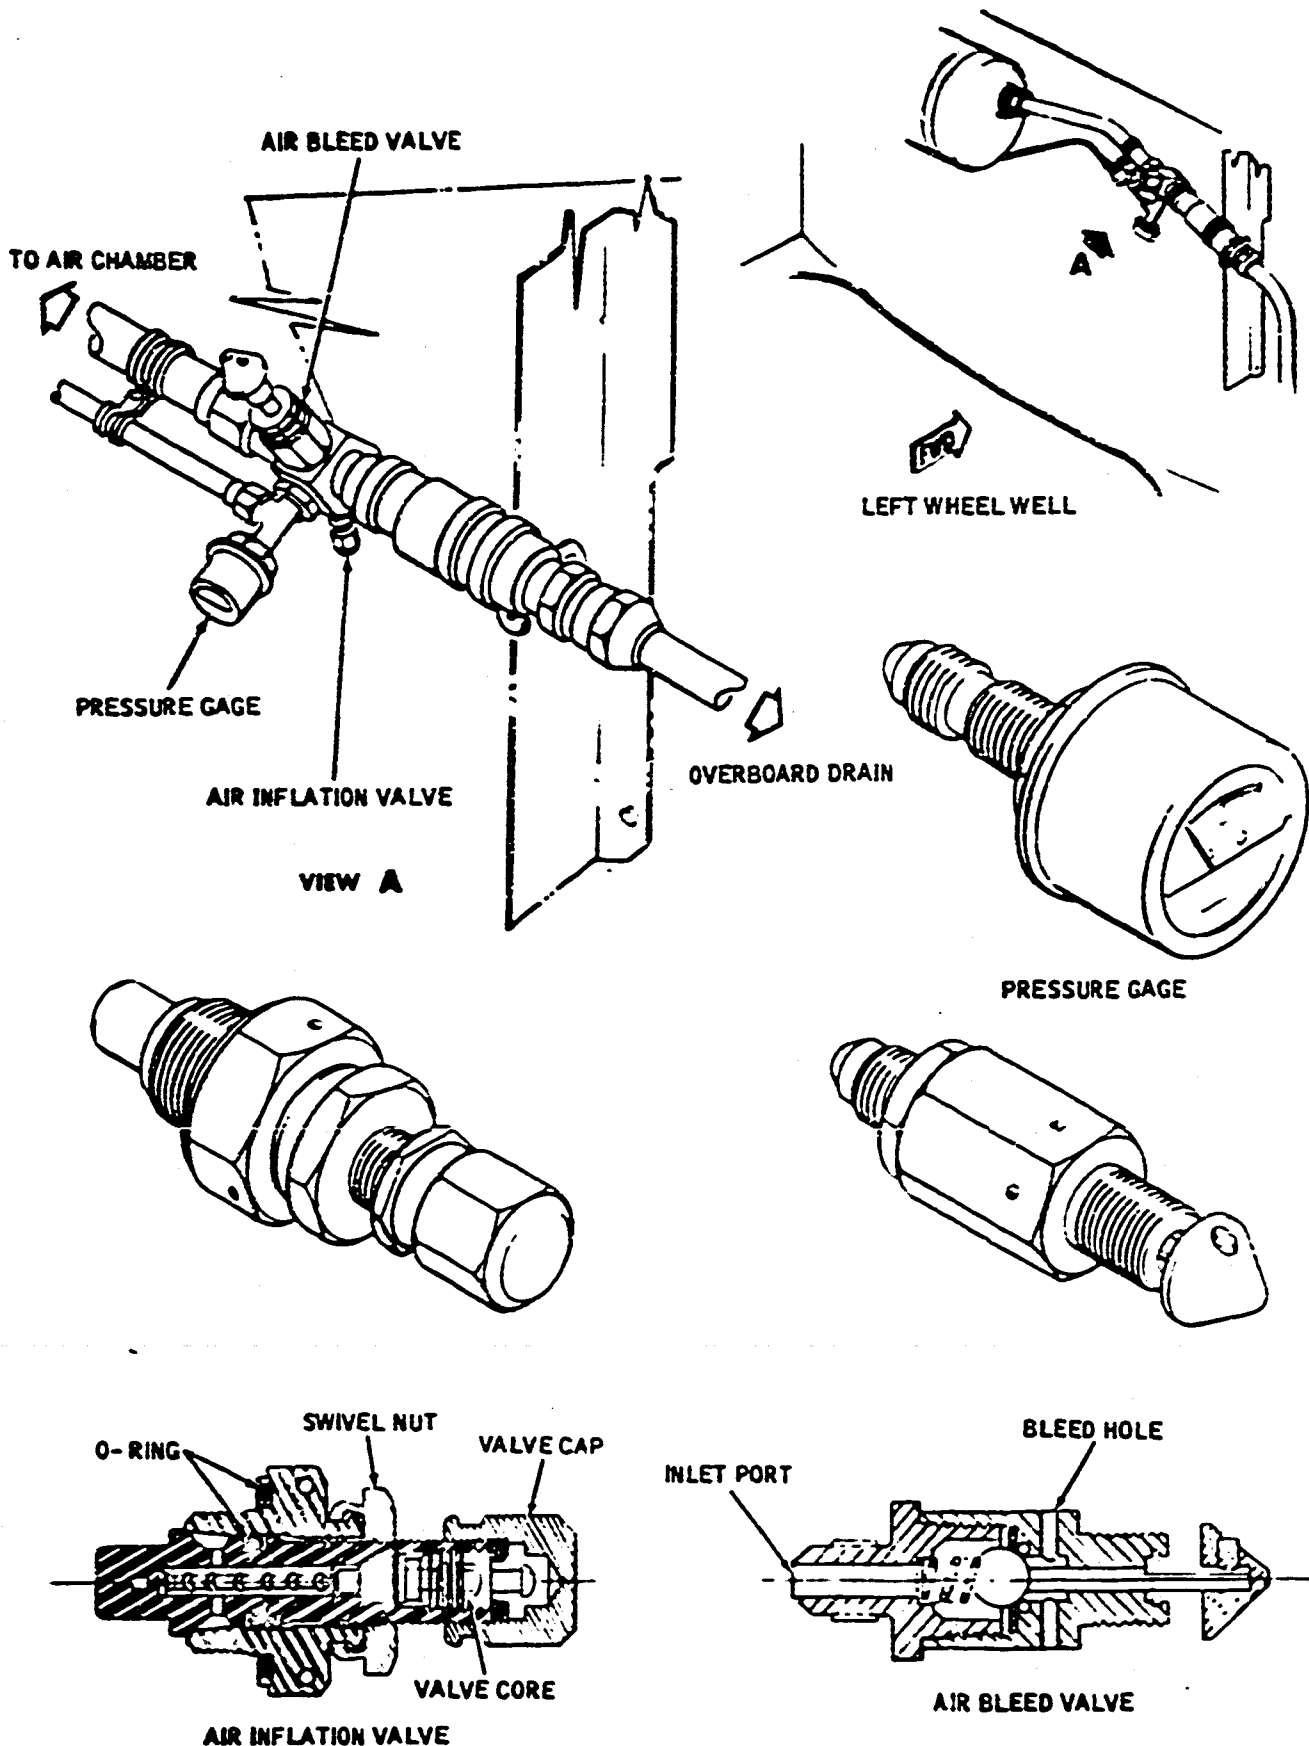

HA2-32

Reservoir Air Bleed Valve, Air Inflation  
 Valve, and Pressure Gage  
 Figure 8

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

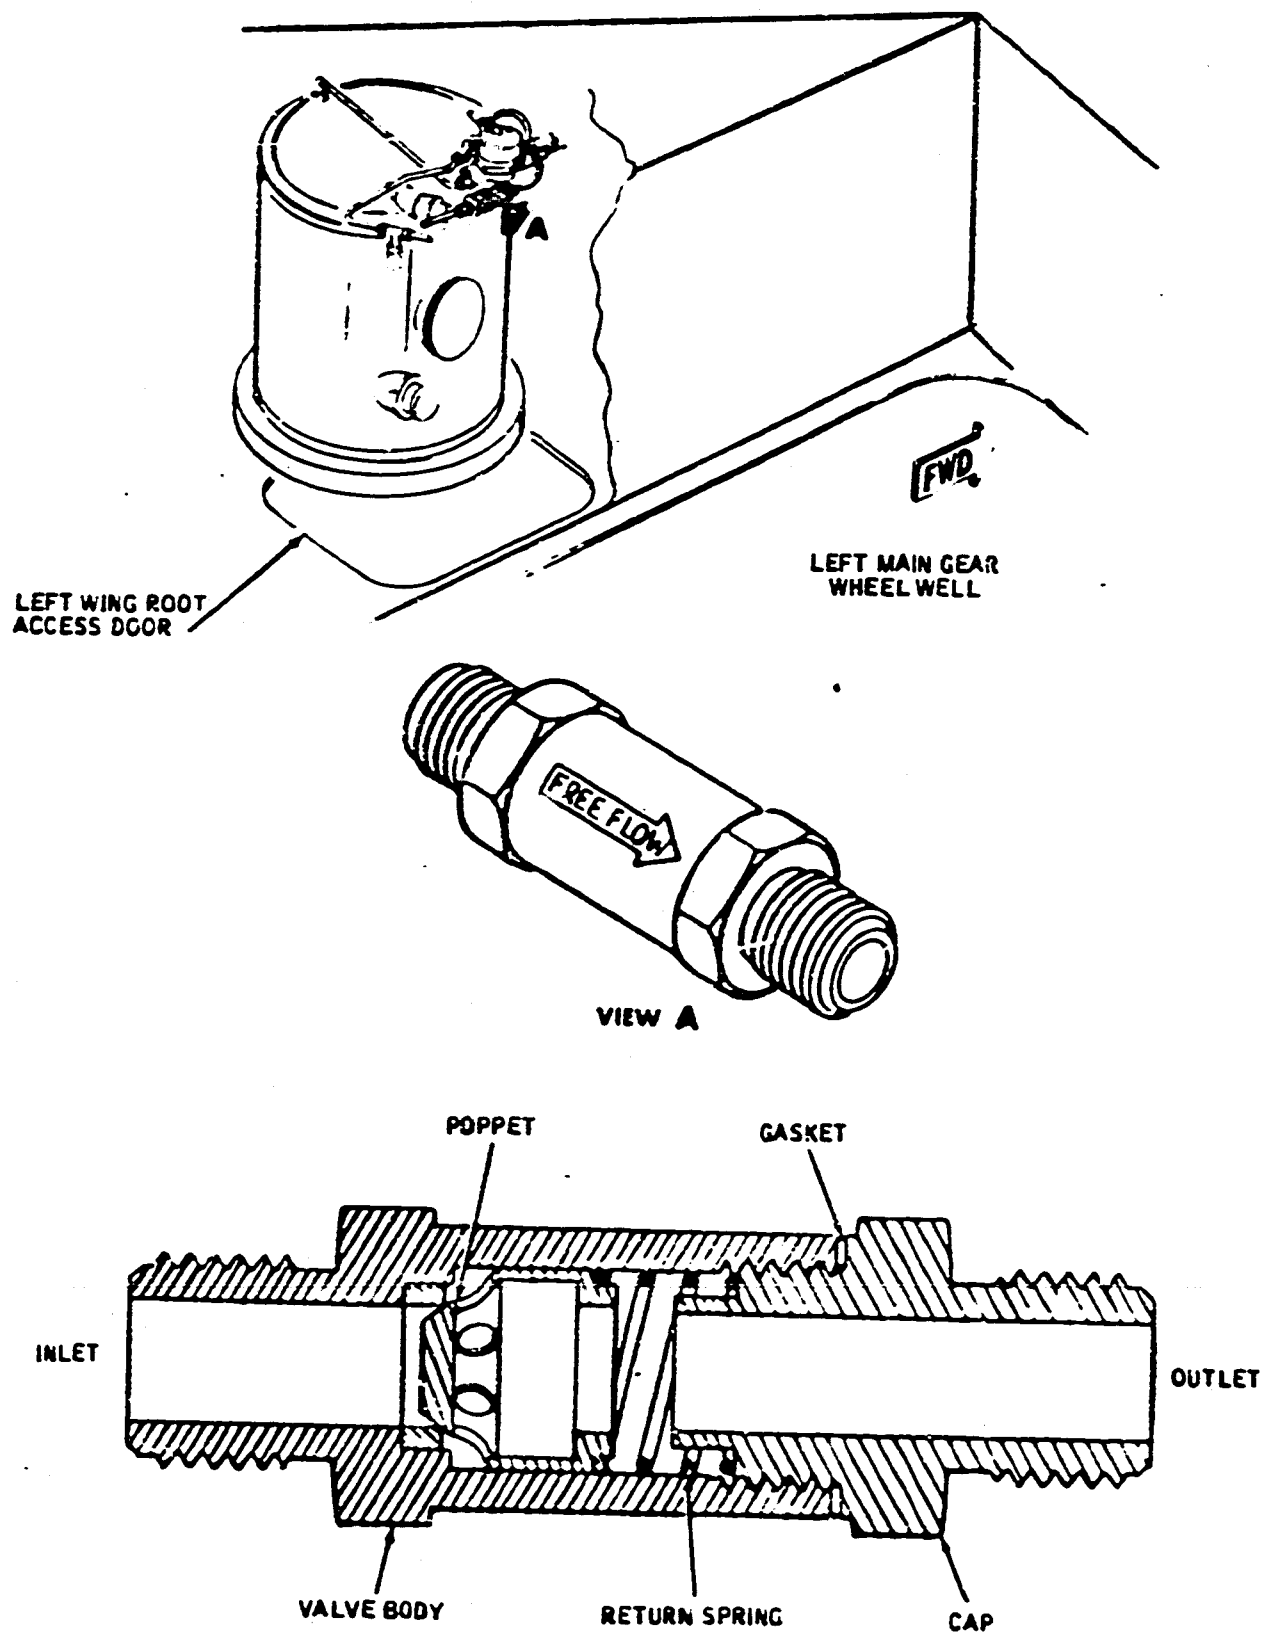

Hydraulic Reservoir Vacuum Breaker Check Valve  
 Figure 9

HA2-33

29-10-0  
 CODE 11  
 Page 19

Jun 15/67

Printed in U.S.A.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

installed on the aft side of the rear spar in the left main gear wheel well, inboard and above the hydraulic reservoir filler assembly. Access to the air chamber is through the left main gear inboard door.

- (2) The air chamber provides for greater fluid capacity in the hydraulic reservoir by providing air and foam space for the reservoir in a separate container. Air pressure in the chamber is maintained by the regulator-aspirator and the air relief valve. The air pressure in the chamber and reservoir can be relieved, when desired, by the air bleed valve located downstream of the chamber. The air chamber is mounted higher than the reservoir filler assembly, to prevent overflowing of the reservoir from reducing the available air space and to prevent fluid from being vented overboard through the reservoir relief valve.


I. Hydraulic Reservoir Port B Return Check Valve (See Figure 10.)

- (1) The reservoir port B return check valve is installed in port B of the reservoir to prevent reverse flow of hydraulic fluid from the reservoir to the return line. The check valve is located on the reservoir in the left wing root and is accessible through the left wing root access door.
- (2) Externally and internally, the port B check valve is a standard-type check valve with a 1500-psi rating. A nominal pressure of approximately 8 psi unseats the poppet, permitting fluid to flow through the valve. When the reservoir pressure exceeds the return line pressure, the poppet will seat and reverse fluid flow will be prevented.


J. Engine Hydraulic Fire Shutoff Valve (See Figures 11 and 12.)

- (1) The engine hydraulic fire shutoff valve is a gate-type, mechanically controlled valve, installed in the supply line of each engine-driven hydraulic pump. The engine hydraulic fire shutoff valve is actuated from the flight compartment to prevent the flow of hydraulic fluid into the engine section.
- (2) The engine hydraulic fire shutoff valve is mounted on a 2-piece channel bracket which is installed inside the wing leading edge, aft of the firewall of each inboard pylon. Access to the valve is through the access door located on the lower side of the wing leading edge, outboard of either the left or right inboard pylon. Each valve is located approximately 30 inches inboard of the access door.
- (3) Internally, the valve consists of a valve arm, valve arm link, cam plate, and slide blade. The valve arm link attaches to the valve arm and is allowed to swivel through an arc in relation to the valve arm. The link has a stop that will contact the arm when the two have traveled to the valve closed, full overtravel position. In the full open pretravel position, the link contacts the arm stop.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

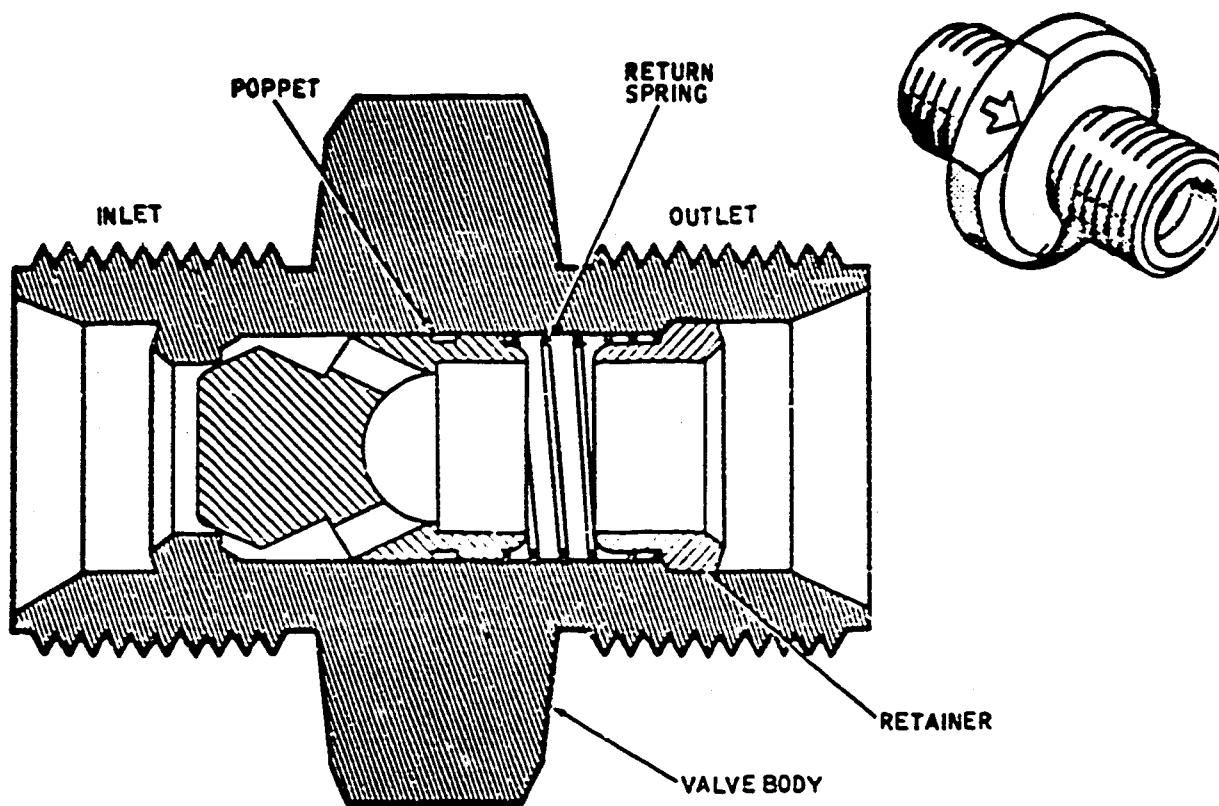

MINIATURE CHECK VALVE

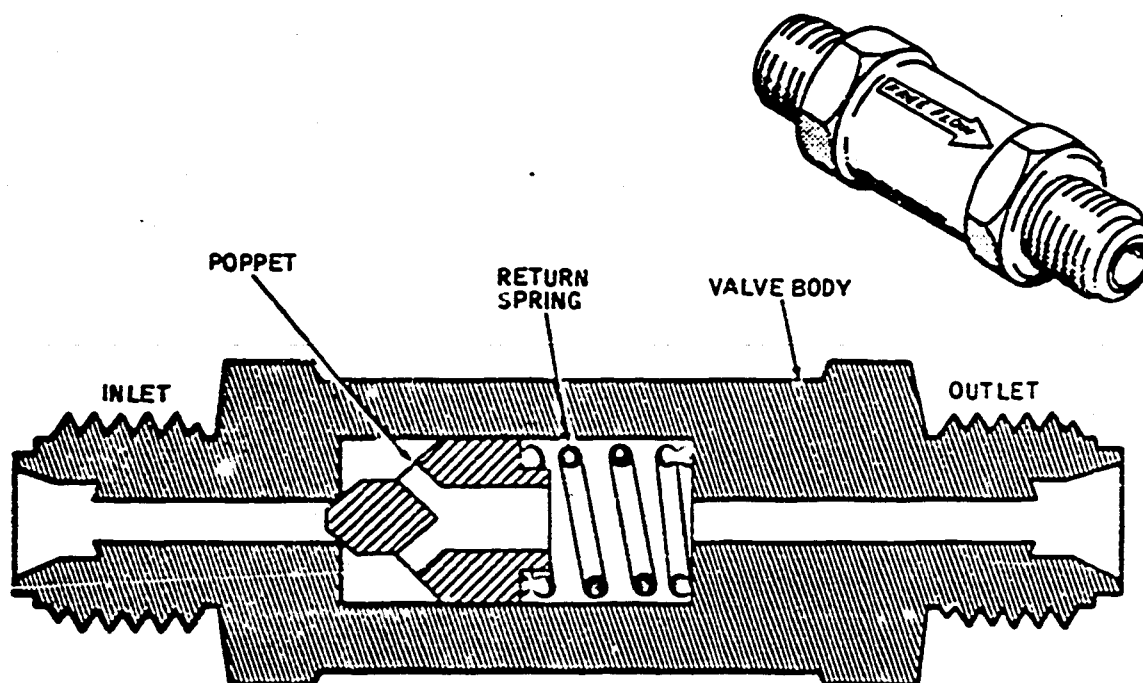

STANDARD CHECK VALVE

Hydraulic Check Valves -- Typical  
 Figure 10


HA2-18A

29-10-0  
 CODE 11  
 Page 21

Oct 1/67

Printed in U.S.A.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

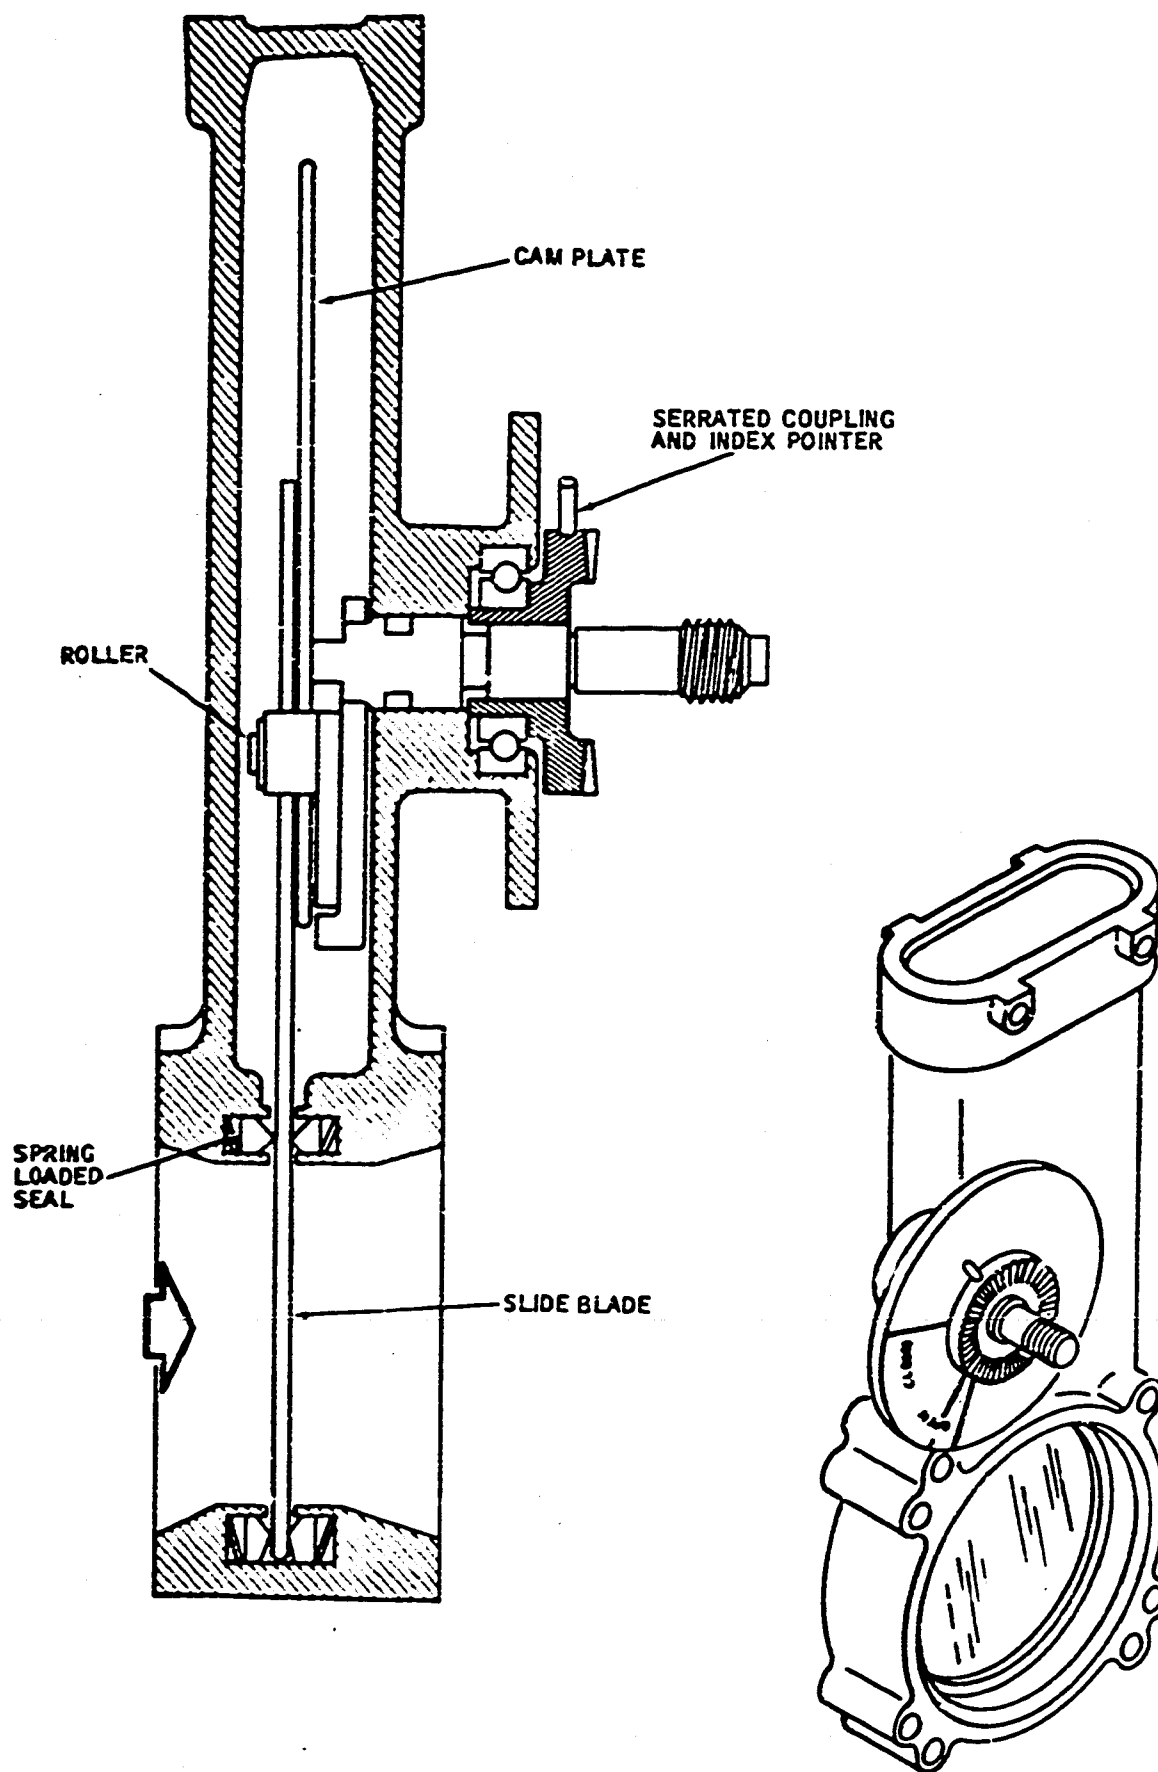

Engine Hydraulic Fire Shutoff Valve -- Schematic  
Figure 11

HA2-2209

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

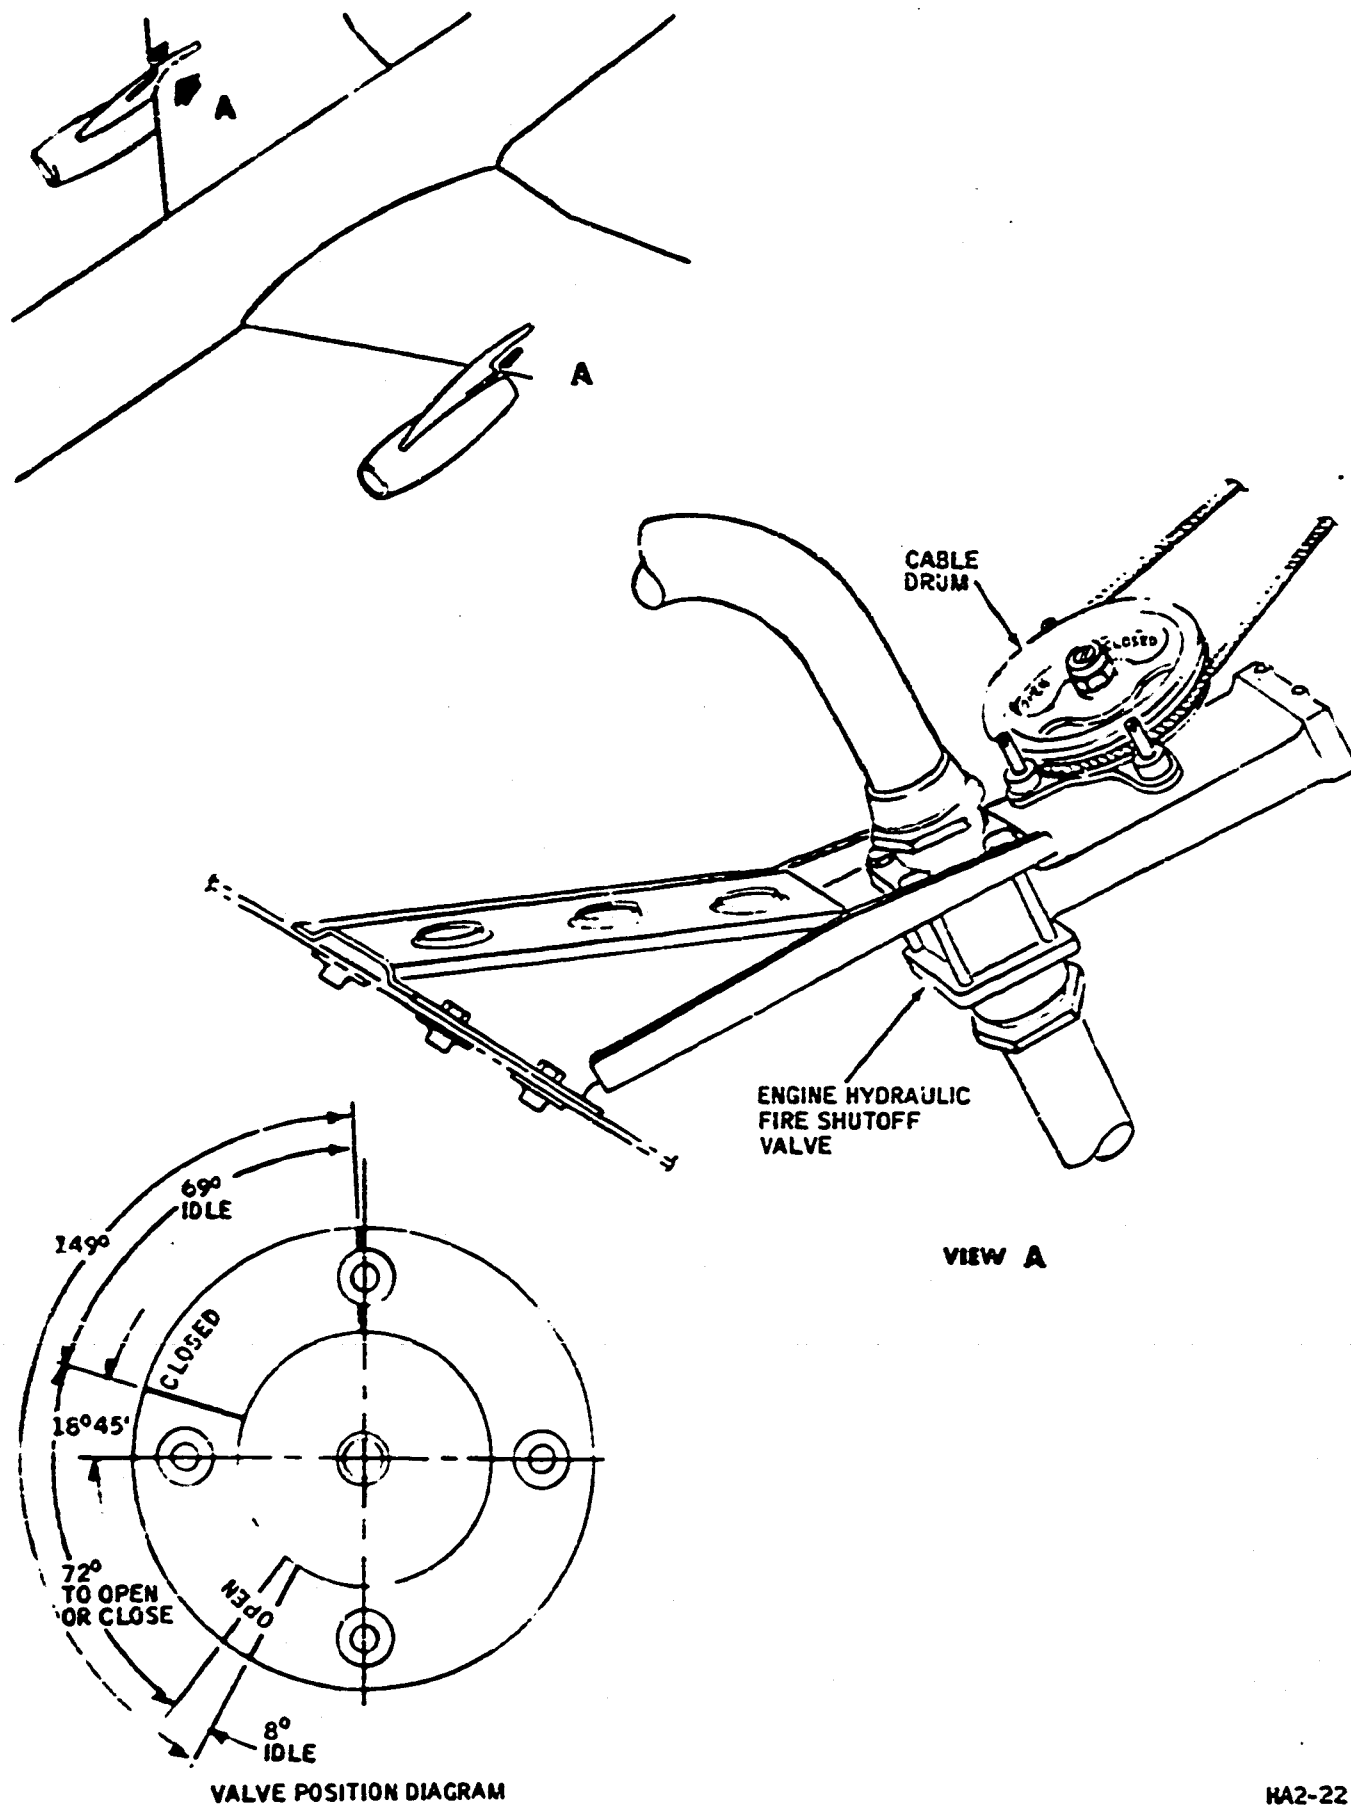

Engine Hydraulic Fire Shutoff Valve  
 Figure 12

HA2-22

29-10-0  
 CODE 11  
 Page 23

Jun 15/67

Printed in U S A




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) A roller attached to the end of the link rides in, and extends through, a J-shaped slot in the cam plate. The rotation of the valve arm causes the link roller to follow the cam slot, allowing the arm and link to move through independent arcs.
- (5) The slide blade (gate of the valve) is slotted near the one end and also receives the link roller extending through the cam slot. The slide blade is positioned parallel to the cam plate and is guided by two grooves in the housing. This will allow the blade to open or close through porting of the valve by the action of the arm and link. The cam plate is pinned to the valve shaft, securing it rigidly in two positioning grooves in the housing. A pin-indicator is provided to relate valve position to a reference plate placarded open and closed.
- (6) The engine hydraulic fire shutoff valves are cable actuated by the fire control handles, located on the overhead switch panel in the flight compartment. When the fire control handles for either inboard engine is moved, the cable system rotates the drum which is attached to the corresponding shutoff valve shaft. This action extends the valve blade into the fluid passage to block the flow of fluid. The valve operates from open to close by clockwise rotation of the cable drum. The valve gage will idle during the first 8 degrees of rotation of the cable drum, and then will close in the next 72 degrees. The cable drum will continue to rotate the shaft for an additional 69 degrees after the gate valve is closed, locking it overcenter. Total travel of the cable drum is 149 degrees.

K. Engine-Driven Hydraulic Pump (See Figure 13.)

- (1) A variable-displacement, pressure-compensated, engine-driven hydraulic pump is installed on each inboard engine. The pump incorporates a solenoid bypass feature for reducing the output of the pump. The bypass valves are controlled by two engine hydraulic pump switches in the flight compartment. The switch for the hydraulic pump on engine No. 2 is placarded left, on and bypass. The switch for the hydraulic pump on engine No. 3 is placarded right, on and bypass. When either of the two engine hydraulic pump control switches is placed in the bypass position, the bypass valve solenoid for that hydraulic pump is energized and the pump pressure decreases to approximately 300 ( $\pm 100$ ) psi. When either switch is in the on position, the control circuit to the corresponding bypass valve is open and the hydraulic pump operates normally in the pressure range of 2850 to 3050 psi. The pump provides a continuous, nonpulsating flow of hydraulic fluid, under pressure, to the hydraulic manifolds for distribution throughout the hydraulic system. Each of the engine-driven pumps is located on the accessory drive pad of the inboard engines. These pumps are accessible through the doors on the right side of the nacelles.
- (2) Three case drain ports are provided: two are on the yoke assembly housing, and the third is on the casing for the pressure control valve, adjacent to the inlet port fitting. The case drain port on top of the yoke assembly housing is full of fluid at all times. This drain

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

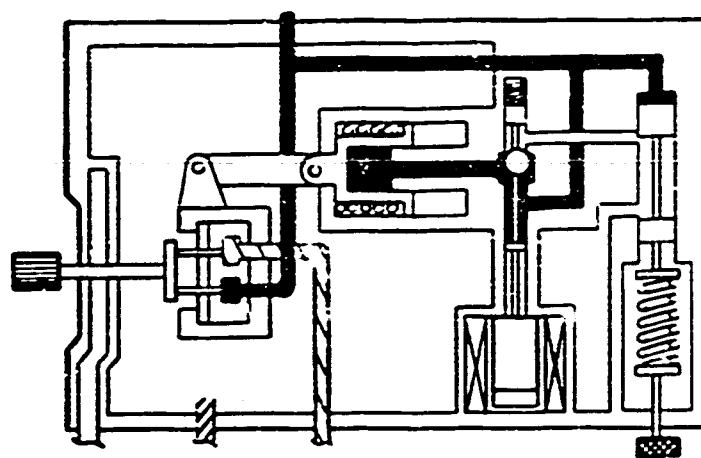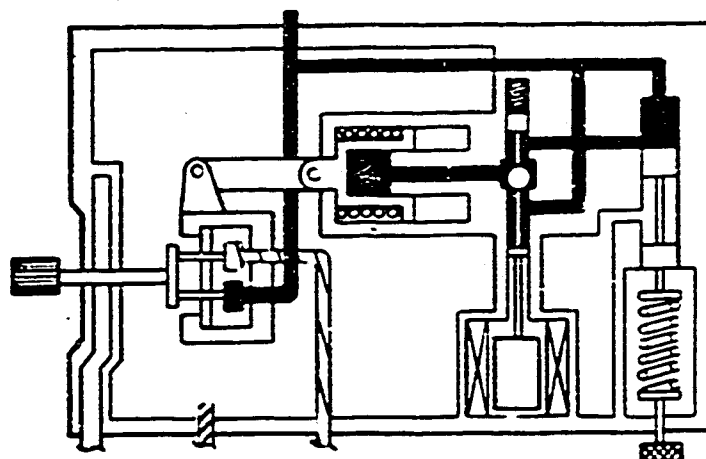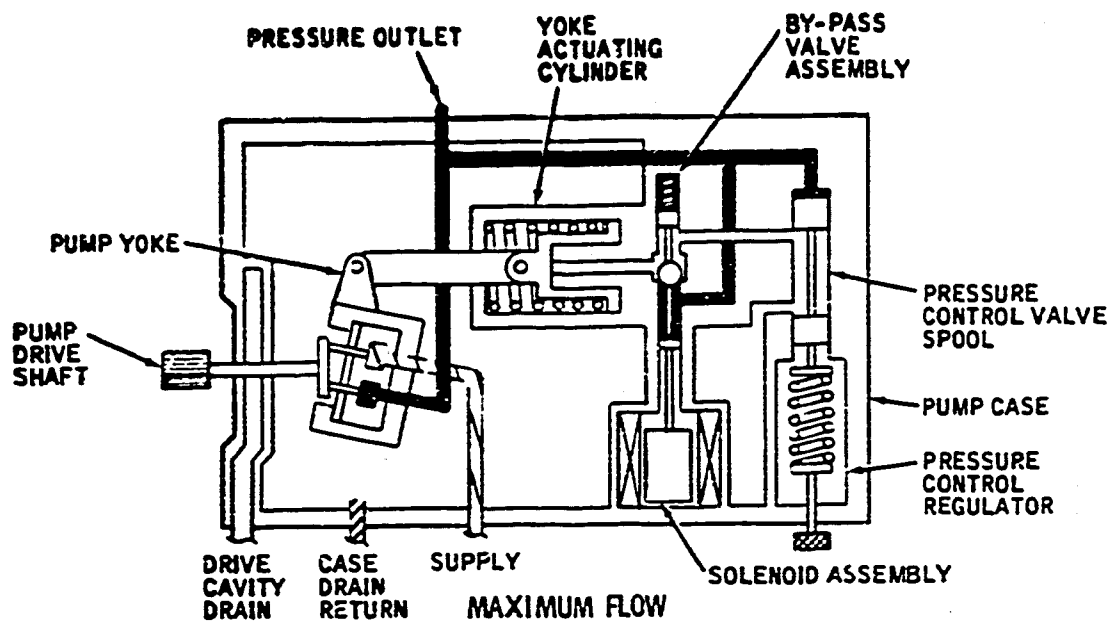

- PRESSURE
- CASE DRAIN
- SUPPLY
- DRIVE CAVITY DRAIN

HA2-837

Engine-Driven Hydraulic Pump Pressure  
 Flow -- Schematic  
 Figure 13

29-10-0  
 CODE 11  
 Page 25

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

connection is ported back to the low-pressure return port at the reservoir. The inlet port fitting is on top of the pump housing and the outlet port fitting is opposite to it on the bottom of the housing, and contains a low-pressure indicating light switch.

- (3) The yoke control piston casing is an integral part of the pump case. Four self-locking nuts are used to hold the piston casing end-plate in position. The bypass valve assembly, consisting of the valve body and a solenoid assembly, is mounted externally on the pump case under the yoke control piston casing. This solenoid valve is provided with an electrical connector. A pressure control regulator is installed on the bypass valve body by means of four bolts. This regulator is cylindrical and is provided with an external adjustment screw. A lock screw is used to retain the adjusting screw after the adjustment has been made.
- (4) Hydraulic fluid enters the pump through an inlet port. Passages in the yoke carry the fluid to the valve plate, which ports the fluid to the cylinder block. The nine pistons in the cylinder block are actuated by the rotating drive shaft, thereby pressurizing the fluid. From the cylinder block, the fluid is routed to the outlet port of the yoke and then to the pump pressure lines. The pressure control regulator is actuated by pump output pressure that is bled to the regulator. The regulator meters the pressure to the yoke control piston, which positions the yoke.
- (5) The maximum pump pressure is determined by the adjustment of the pressure control regulator. The pressure control regulator allows maximum output flow (22.5 gpm at 3500 rpm) up to 2850 psi system pressure. When this pressure is reached, the yoke assembly starts to move towards the zero flow position.
- (6) Pressure continues to rise until the displacement is reduced from maximum flow to zero flow and 3000 psi is reached. If the engine-driven hydraulic pump control switches are in the on position, and the output pressure of either pump drops below 1500 psi, an amber light located in the flight compartment comes on.

L. Engine-Driven Hydraulic Pump Check Valves (See Figure 10.)

- (1) Two check valves, rated at 3000 psi, are installed in the lines from each engine-driven hydraulic pump. One check valve is installed in the pressure line and the other is in the case drain line. The check valves in the pump pressure lines prevent reverse flow of hydraulic fluid through the pump, when the pump is inoperative or when external hydraulic pressure is supplied to the system. Access to the valves can be gained through an access door in the forward right apron of each inboard pylon. The valves are mounted on the exterior wall of the inlet box by means of the bulkhead fittings and retaining nuts.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Normal operating pressure will unseat the poppet, and fluid will flow through the valve. When pressure downstream of the valve exceeds pressure from the pump, the pressure, with the aid of the return spring, will seat the poppet. This prevents reverse flow of hydraulic fluid through the pumps.

M. Engine-Driven Hydraulic Pump Case Drain Filter (See Figure 14.)


- (1) A line-type, micron filter, for use in a low-pressure hydraulic system, is installed in the engine-driven hydraulic pump case drain return line between the pump flow check valve and the hydraulic system reservoir. The case drain filter is installed on the aft surface of the rear spar opposite the leading edge of the inboard flap assembly. One filter is used for each engine-driven pump. Access is gained to the filter by lowering the flaps. A second check valve is installed adjacent to the filter in the downstream side of the case drain return line.
- (2) Externally, the filter is approximately 5 inches high and 2 inches wide, with ports marked inlet and outlet. The bowl is cylindrical in shape, with hex-shaped wrench flats at the lower end. A self-sealing, magnetic drain plug is installed at the bottom end of the filter bowl. The filter element is made of chemically treated paper.

N. Dual Filter and Relief Valve (See Figure 15.)


- (1) The hydraulic power system dual filter and relief valve consists of two filters and two relief valves installed in the same body. The unit filters the hydraulic fluid from the two engine-driven hydraulic pumps, and the pressure relief valves assure that excessive pressures do not build up in the pressure line from the pumps. The unit is located in the left main gear wheel well on the lower portion of the rear spar, approximately 1 foot outboard of the centerline shear web.
- (2) The unit consists of a casting with a flange-mounted pressure inlet port on each end. Two pressure outlets are located on the top of the casting. One outlet, centrally located, is the main pressure outlet to the system selector valve. The other, located to the left of the selector valve port, is the pressure outlet to the air pressure regulator-aspirator. The return outlet port for the relief valve portion of the unit is located on the center of the aft face of the body, canted upward. The nose gear return line is connected to a check valve installed in a return line port, located between the two filter bowls.
- (3) The pressure relief valves are located behind the pressure inlet ports and are connected to the return outlet port of the unit. The inlet from the nose gear return line is routed through the casting to the return outlet port.




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

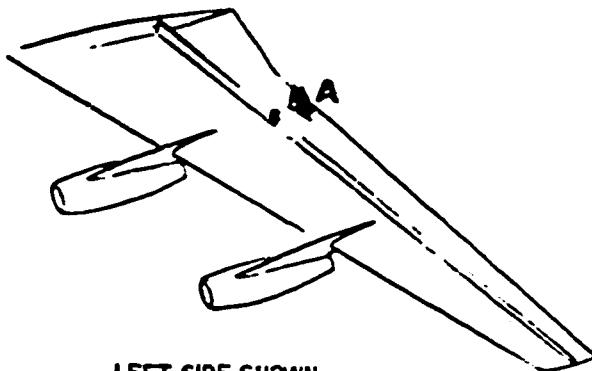

LEFT SIDE SHOWN  
 RIGHT SIDE OPPOSITE

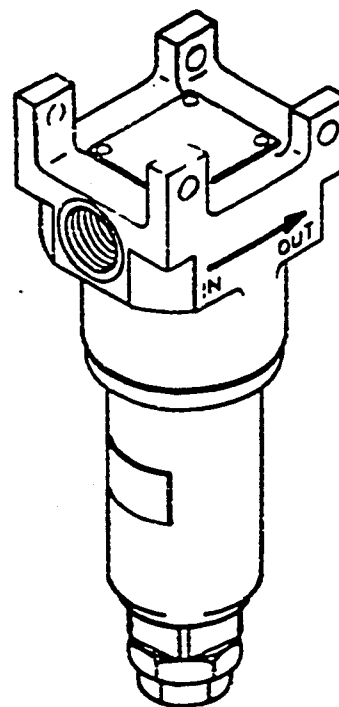


VIEW A

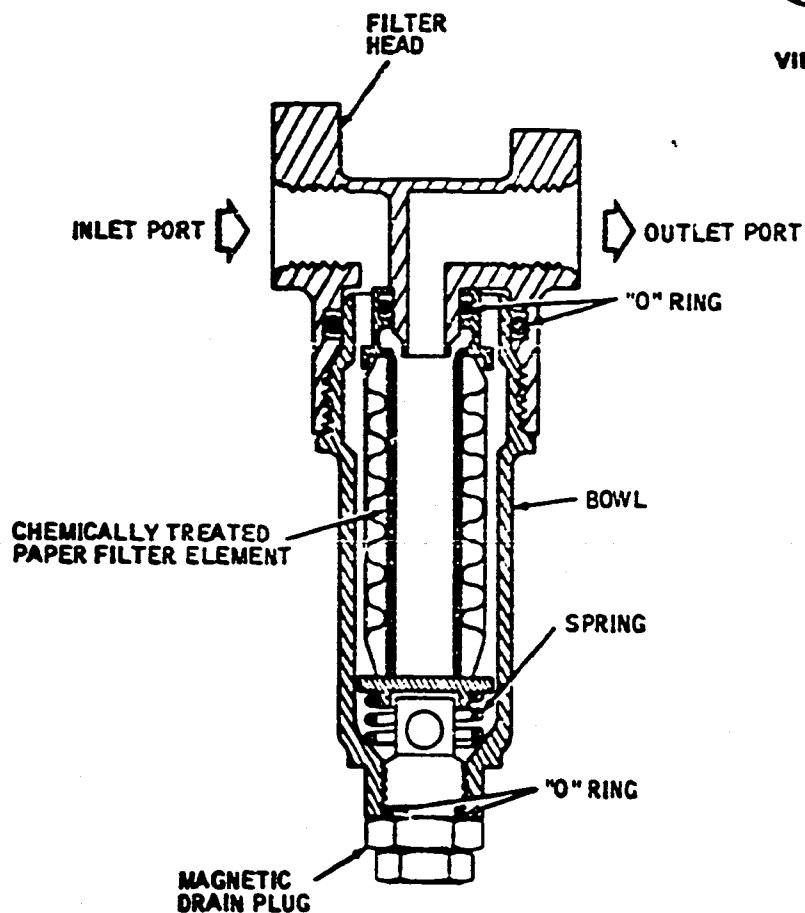

Engine Driven Hydraulic Pump Case Drain  
 Filter -- Cutaway View  
 Figure 14

HA2-31

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

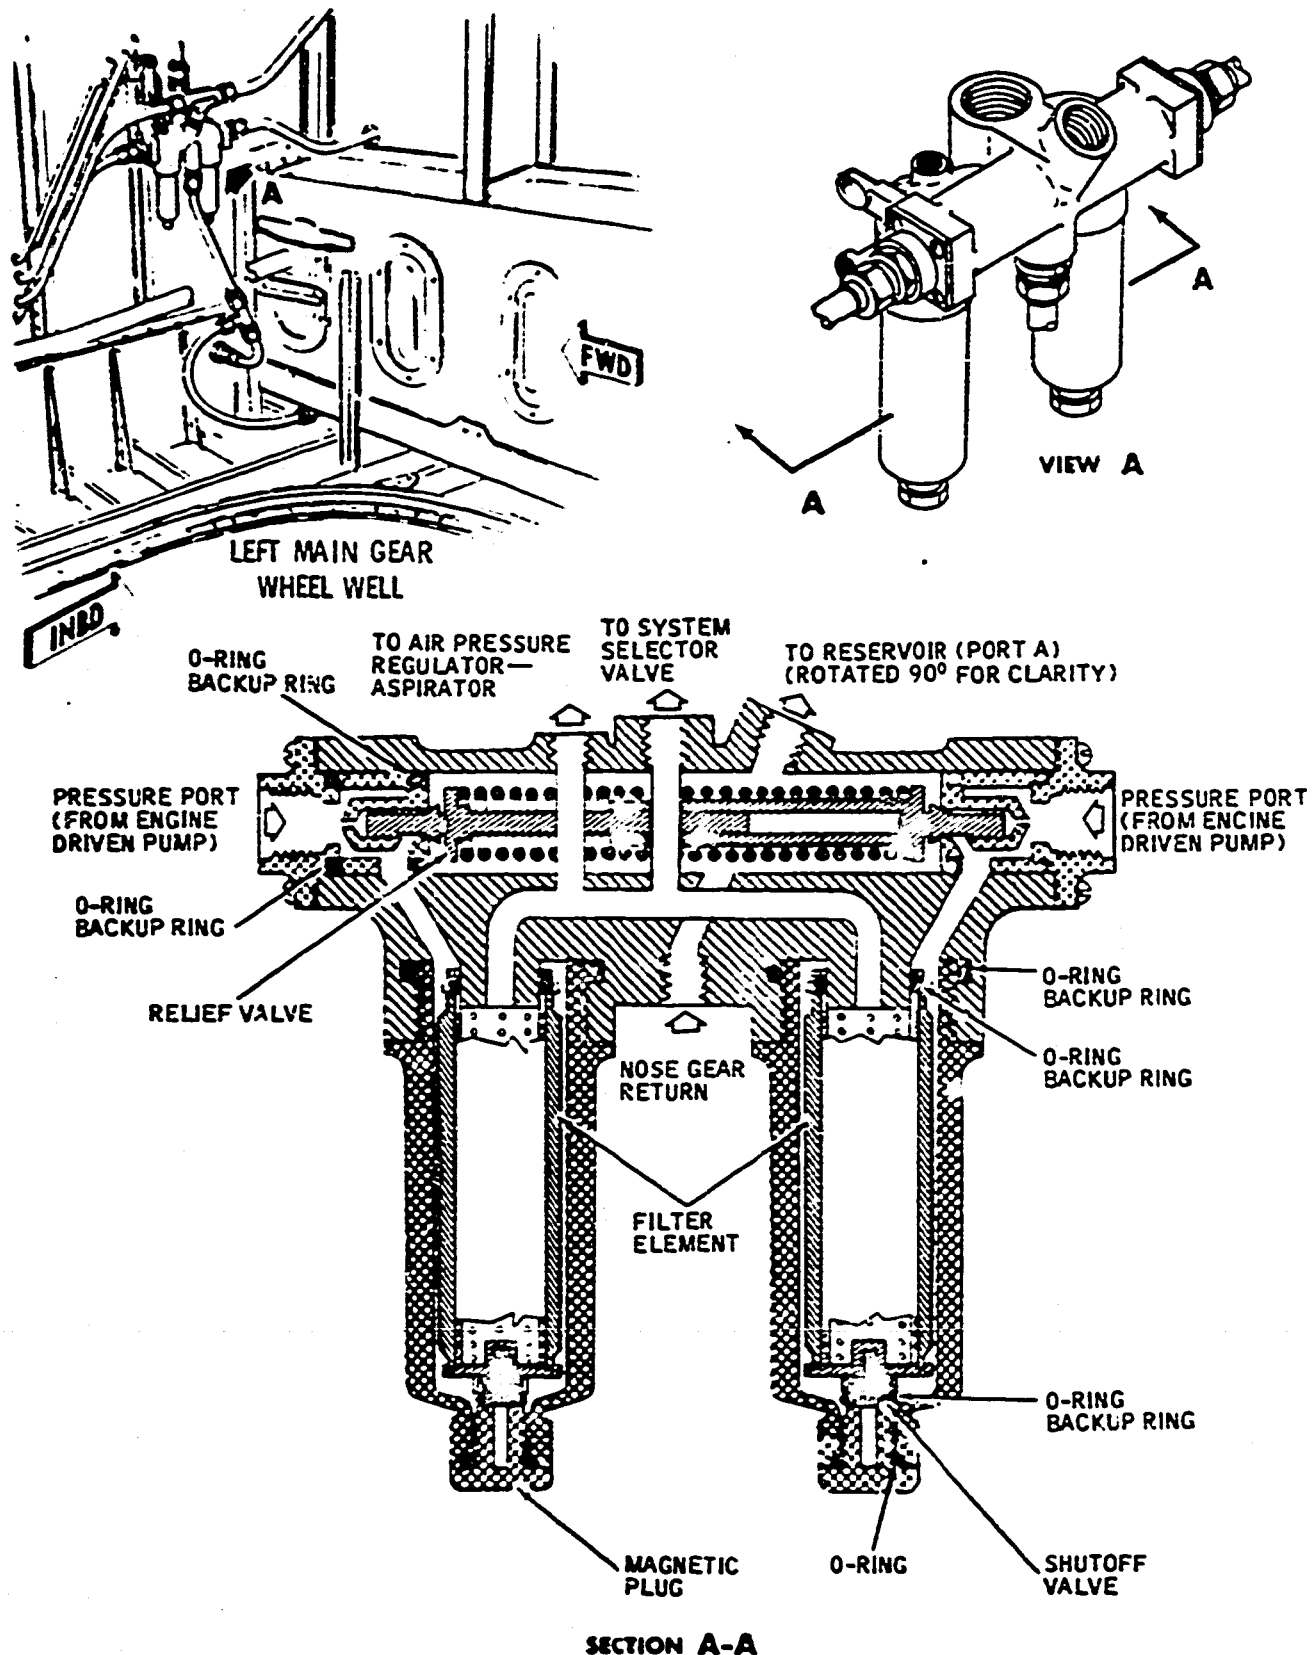

Dual Filter and Relief Valve -- Cutaway View  
 Figure 15

HA2-20

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 11  
 Page 29

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) If either of the filter elements becomes clogged, pressure above 3300 psi at the inlet port will unseat the poppet. Pressure above 3500 psi will allow full flow of 22.5 gpm to flow to the return port of the unit and back to the reservoir. The relief valves will reseal at approximately 3000 psi.
- (5) A check valve is installed in the system selector valve port to prevent reverse flow of pressure through the filter during auxiliary hydraulic pump operation.


C. System Selector Valve (See Figures 16 and 17.)

- (1) The system selector valve is a 3-position valve which permits directional control of fluid under pressure. The valve is installed on the left hydraulic power manifold and is accessible through the left main gear inboard door.
- (2) The selector valve pressure-to-system port and the return port are directly ported to the manifold. The engine pump pressure enters the valve through a port on the large end of the valve, and the auxiliary pump inlet and alternate ports are located at the top, toward the aft end of the valve. The valve control crank is attached to a push-pull rod and a cable sector.
- (3) Operation of the system selector valve is controlled by a lever located on the right side of the system engineer's control pedestal. When the control lever is moved to the selected position, the cable system, through the sector and crank, operates the valve positioning lever to drive the slide spool assembly to the selected position. When the control lever is placed in the general system (normal) position, the selector valve is actuated, causing hydraulic fluid to enter the valve through the system pressure port. The fluid is then directed into the manifold through the pressure-to-system port. In the general system (normal) position, fluid from the auxiliary pressure port is also routed to the pressure-to-system port. In the bypass/general system position, the selector valve ports engine pump pressure into the manifold through the return port. In this position, the auxiliary pump pressure is ported to the general system. In the general system/main gear down and flaps position, pump pressure is routed through the alternate port, at the top of the valve, for alternate operation of the flaps and the landing gear downlock cylinders. Internal leakage provides lubrication for the moving parts of the valve.

P. Left Hydraulic Power Manifold (See Figure 18.)

- (1) The left hydraulic power manifold distributes fluid pressure from the hydraulic pump (any one of the three pumps), through control valves to the various airplane hydraulic subsystems. The left power manifold is located overhead in the left wheel well. Access to the left manifold is through the left main gear inboard door.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

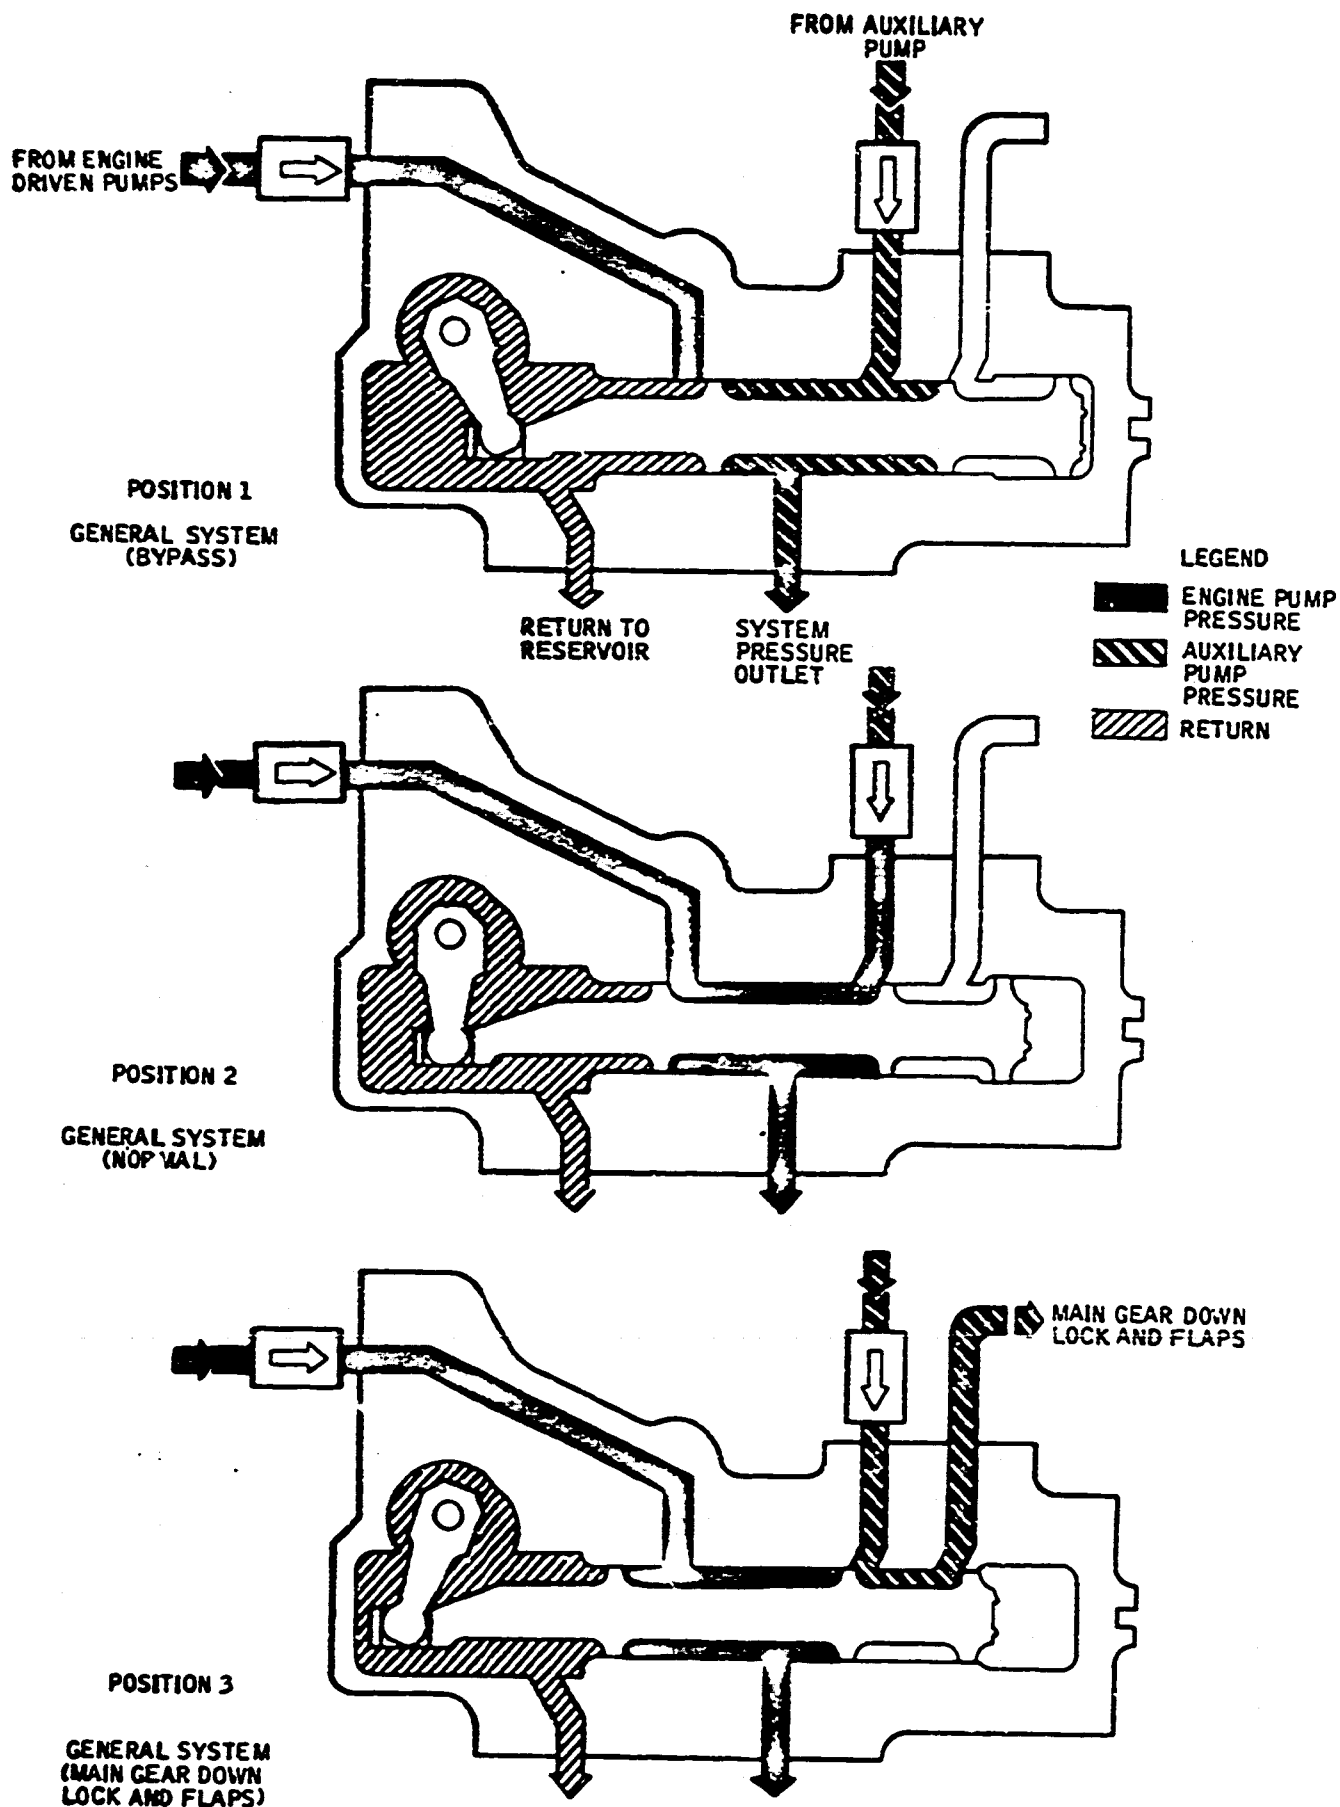

System Selector Valve -- Schematic  
 Figure 16



HA2-26

29-10-0  
 CODE 11  
 Page 31

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

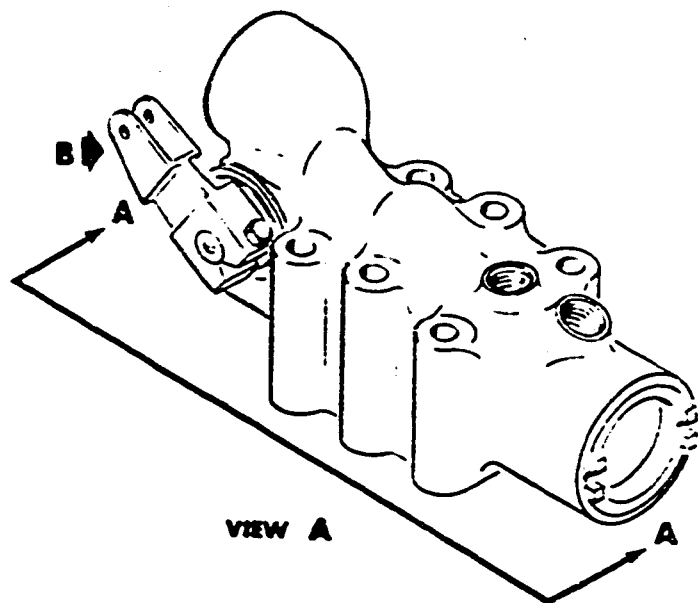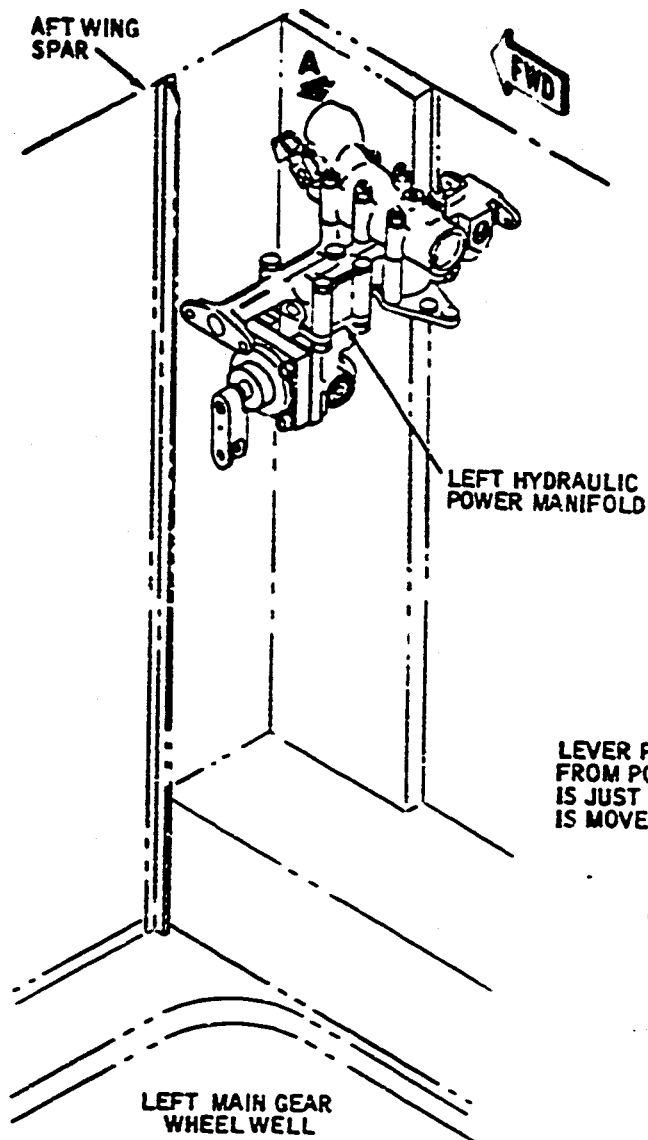

LEVER POSITION WHEN FLOW FROM PORT M TO PORT L IS JUST STOPPED AS LEVER IS MOVED TOWARD POSITION 3

GENERAL SYSTEM (NORMAL) POSITION 2

$61\frac{1}{4}^{\circ} (\pm 1\frac{1}{4}^{\circ})$

$28^{\circ} (\text{REF})$

GENERAL SYSTEM (BYPASS) POSITION 1

GENERAL SYSTEM (MAIN GEAR DOWNLOCK AND FLAPS) POSITION 3

$18\frac{1}{2}^{\circ} (\text{REF})$

$55\frac{3}{4}^{\circ} (\pm 5^{\circ})$

VIEW B

ENGINE-DRIVEN PUMP PRESSURE INLET PORT

AUXILIARY PUMP PRESSURE INLET (PORT M)

AUXILIARY PRESSURE AND MAIN GEAR DOWNLOCK AND FLAPS OUTLET PORT

VALVE BODY

RETURN PORT (OUT)



SYSTEM PRESSURE OUTLET (PORT L)

SECTION A-A

System Selector Valve -- Cutaway View  
 Figure 17

HA2-27

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

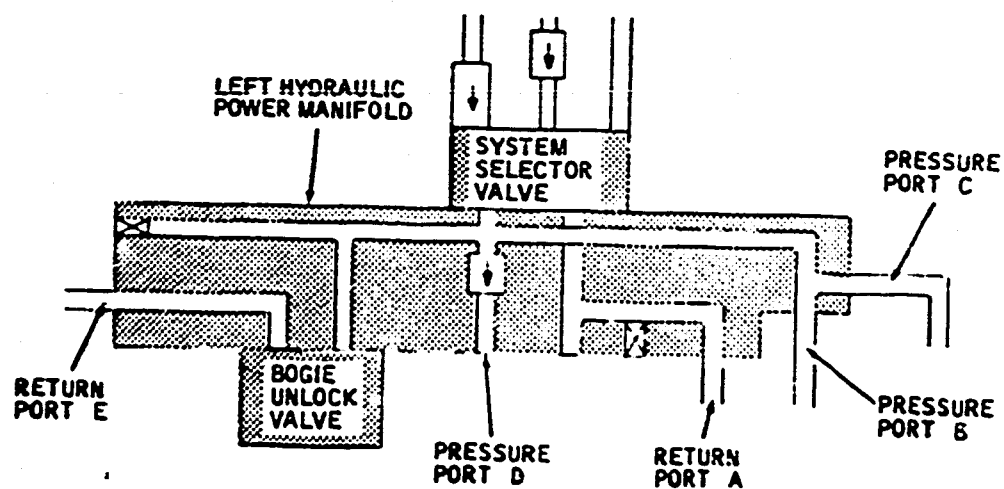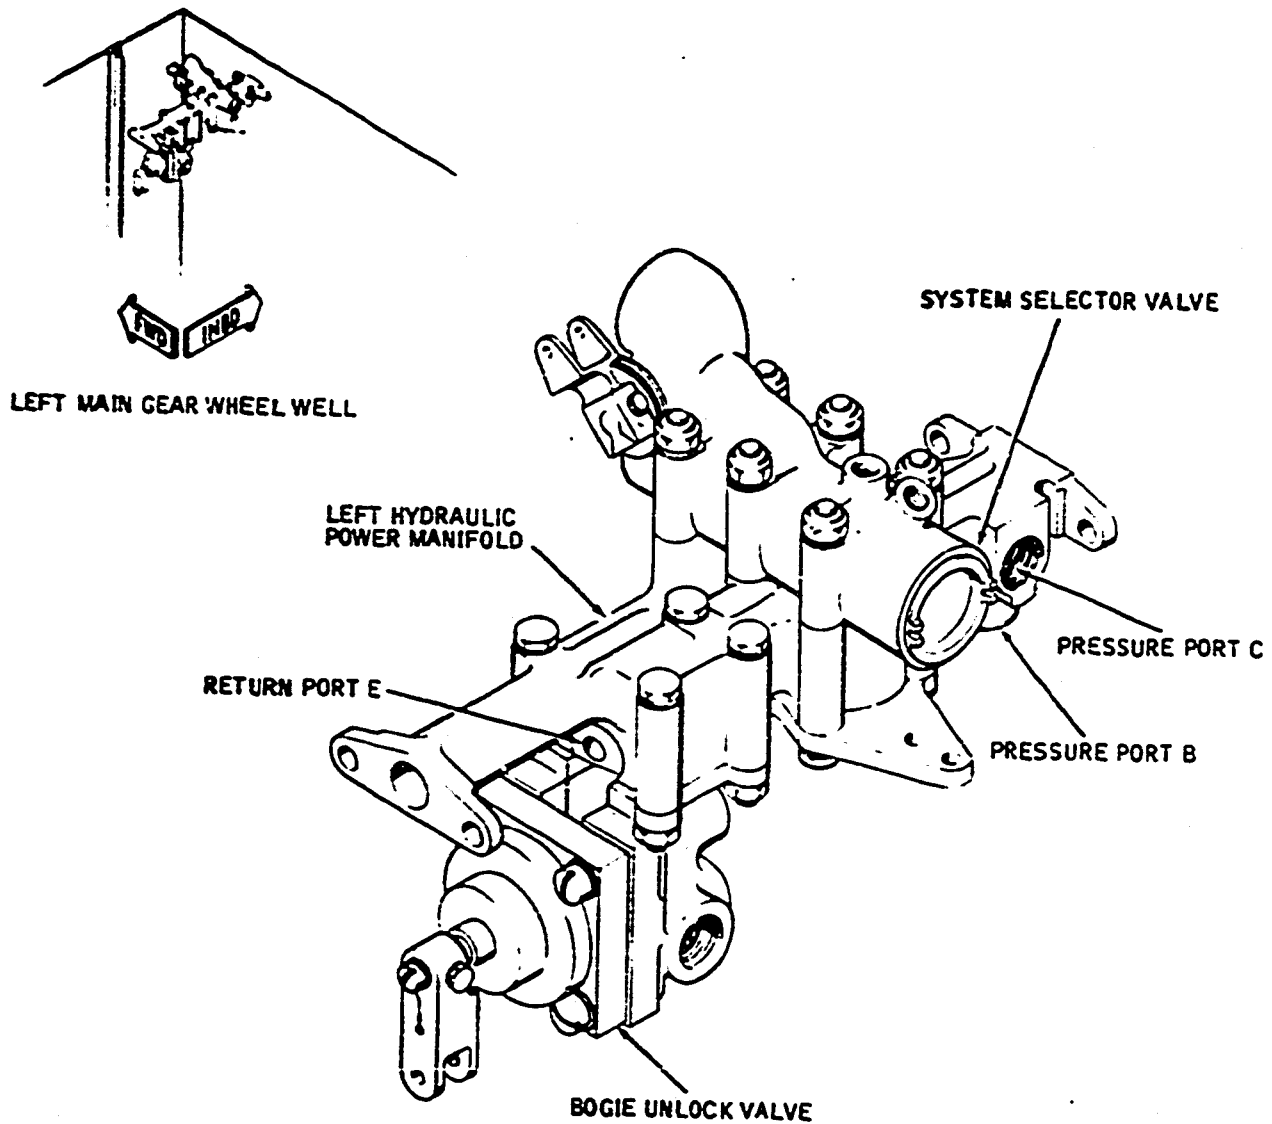

Left Hydraulic Power Manifold -- Schematic  
 Figure 18

HA2-28

29-10-0  
 CODE 11  
 Page 33


Jun 15/67

Printed in U S A


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Three valve-mounting pads are provided on the manifold. The system selector valve-mounting pad is located on top of the manifold body. Of the two remaining mounting pads, located on the underside of the manifold, the inboard pad is capped and not used. The outboard mounting pad is used for the bogie swivel unlock control valve. Four ports are provided on the inboard end of the manifold. Two of these ports are pressure outlet ports: one, located on the aft face of the manifold, is for the flight controls; and, the other, located on the underside of the manifold, ports fluid to the priority valve, which, in turn, ports fluid to the nose gear and the right power manifold. The other two ports are return outlets, located immediately forward of the manifold pressure outlet port. One is connected by a line to the right manifold, and the other is connected to the low-pressure return port of the reservoir. The pressure line to the nose gear control valve is teed into the manifold pressure connecting line. A reservoir return line is teed into the manifold return line. The two ports on the inboard mounting flange were used for drilling the internal passages of the power manifold and are plugged and safety wired to prevent use.
9. Right Hydraulic Power Manifold (See Figure 19.)
- (1) The right hydraulic power manifold distributes fluid pressure from the hydraulic pumps (engine-driven or auxiliary, or any combination of these three pumps), through the control valves to the various hydraulic subsystems. The right hydraulic power manifold is located overhead in the right wheel well. The manifold is held in place with braces and is accessible through the right main gear inboard door.
- (2) The manifold contains passages for pressure and return fluid distribution, four check valves, ports for pressure and return lines, and mounting pads for the various control valves.
- (3) The right manifold receives fluid pressure from the left manifold. Pressure is ported through check valves to the wing flap control valve, to the slot control valve, to the main gear control valve, to the brake control valve, to the brake pressure transmitter, and to the brake accumulators.
- (4) Auxiliary hydraulic pressure is ported from the alternate port of the system selector control valve into port K in the right manifold. Port K is located inboard of the spoiler control valve. From port K, auxiliary hydraulic pressure is ported through a check valve to the downstream side of the wing flap control valve check valve and into the wing flap control valve for alternate operation of the wing flaps.
- (5) The return passage from the wing flap control valve ports fluid to return port A. The brake control valve return passage ports fluid into return line B through a two-way restrictor. The main gear control valve downline return fluid uses a separate port in the valve, bypasses the manifold, and returns the fluid directly to A return line to the reservoir. The upline in the main gear control valve uses the same return port, return port B, in the manifold as the brake control valve.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

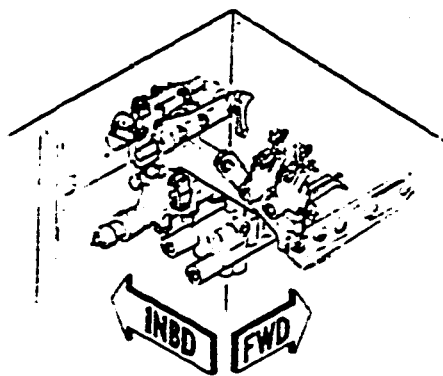

RIGHT MAIN GEAR  
WHEEL WELL

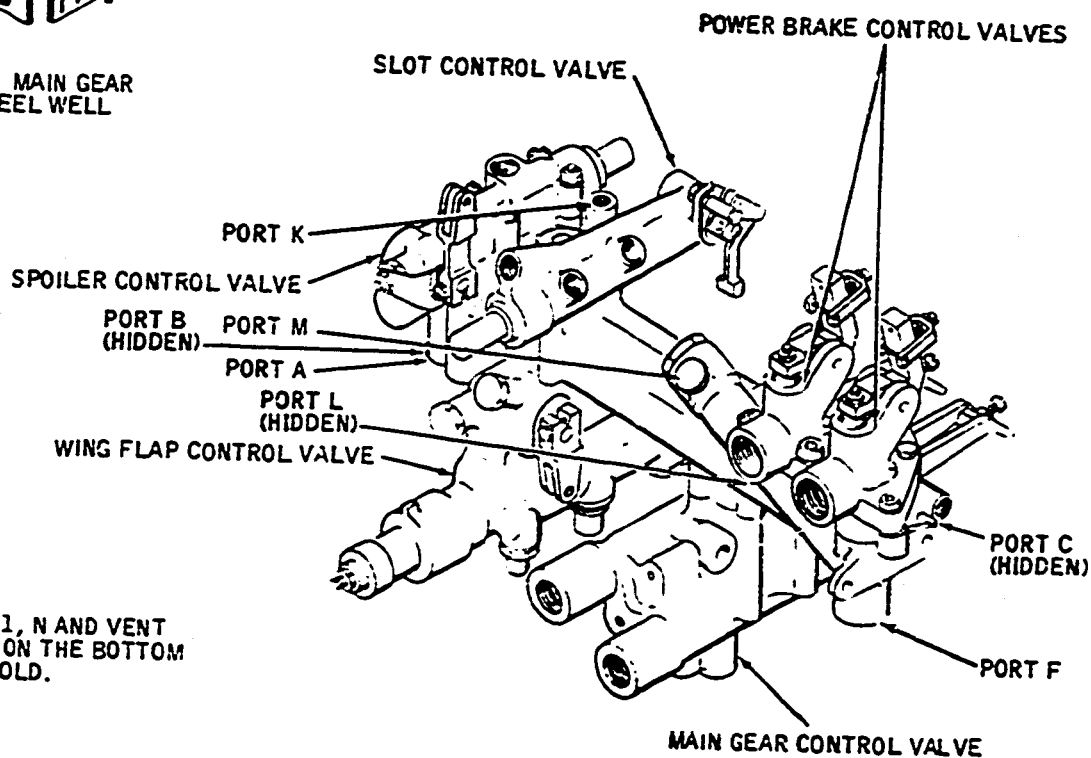

NOTE: PORTS B, C, D<sub>1</sub>, N AND VENT  
ARE LOCATED ON THE BOTTOM  
OF THE MANIFOLD.

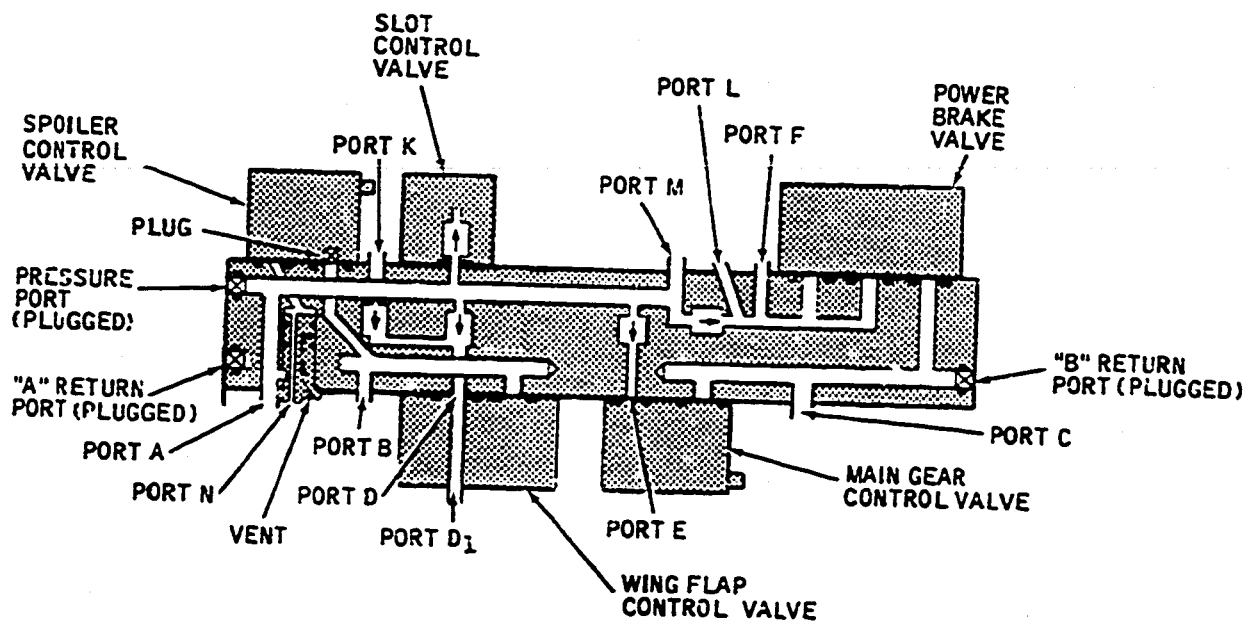

HA2-29A

Right Hydraulic Power Manifold -- Schematic  
 Figure 19

Nov 1/69

Printed in U.S.A.

29-10-0  
 CODE 11  
 Page 35



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

R. Hydraulic Manifold Return Check Valves (See Figure 10.)

- (1) The hydraulic manifold return check valve is installed in the hydraulic reservoir A return line to prevent reverse flow of fluid. This check valve is located on the shear web near the dual filter and relief valve. Access to the check valve is through the left main gear inboard door.
- (2) The direction of flow is marked on one surface, and the rating of the check valve (1500 psi) is marked on the other surface.


S. Hydraulic Power System Accumulator (See Figure 20.)

- (1) The hydraulic power system accumulator is a spherical, welded-steel, fluid and air bladder-separated container. The accumulator is installed in the pressure line of the hydraulic power system to provide a reserve supply of fluid under pneumatic pressure and to act as a shock absorber for system pressure surges.
- (2) The accumulator is located immediately aft of the left hydraulic power manifold and is accessible through the left main gear inboard door. It is mounted with two corner brackets and clamp blocks at the upper and lower port fittings.
- (3) The accumulator is installed in the pressure line of the hydraulic power system and is initially charged with 1000 psi of dry nitrogen. As the system pressure builds up, fluid is forced into the upper chamber of the accumulator, further compressing the trapped nitrogen to approximately 3000 psi. With full hydraulic system pressure, 3000 psi is indicated on the pressure gage adjacent to the filler valve. This reserve pressure smooths out any momentary lag in the pump's response to the system's demand for greater fluid flows. The accumulator permits a gradual rise in system pressure, thereby absorbing the shock of pump surges and relieving the piping and system operating units of high-impact loads. When the engine-driven hydraulic pumps are not operating, the accumulator provides system pressure (at a diminishing rate) until a quantity equal to the stored volume in the accumulator has been used by the system.

T. Hydraulic System Priority Valve (See Figure 21.)

- (1) The priority valve is located in the left wheel well near the left hydraulic power manifold. The valve is installed in the hydraulic pressure line, between the two power manifolds, downstream of the pressure supply takeoff port for the flight controls. The priority valve is a balanced relief valve which reserves initial hydraulic pressure (up to 2150 psi maximum) for use in the flight control systems. The valve consists of a body with an inlet, an outlet, and a breather port. Internally, the valve contains a poppet valve plate, a poppet, a poppet valve load-spring, a piston, a piston load spring, and a piston load-spring housing. The piston load-spring housing chamber is vented to ambient air through a breather hole which is covered by a butyl rubber band.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

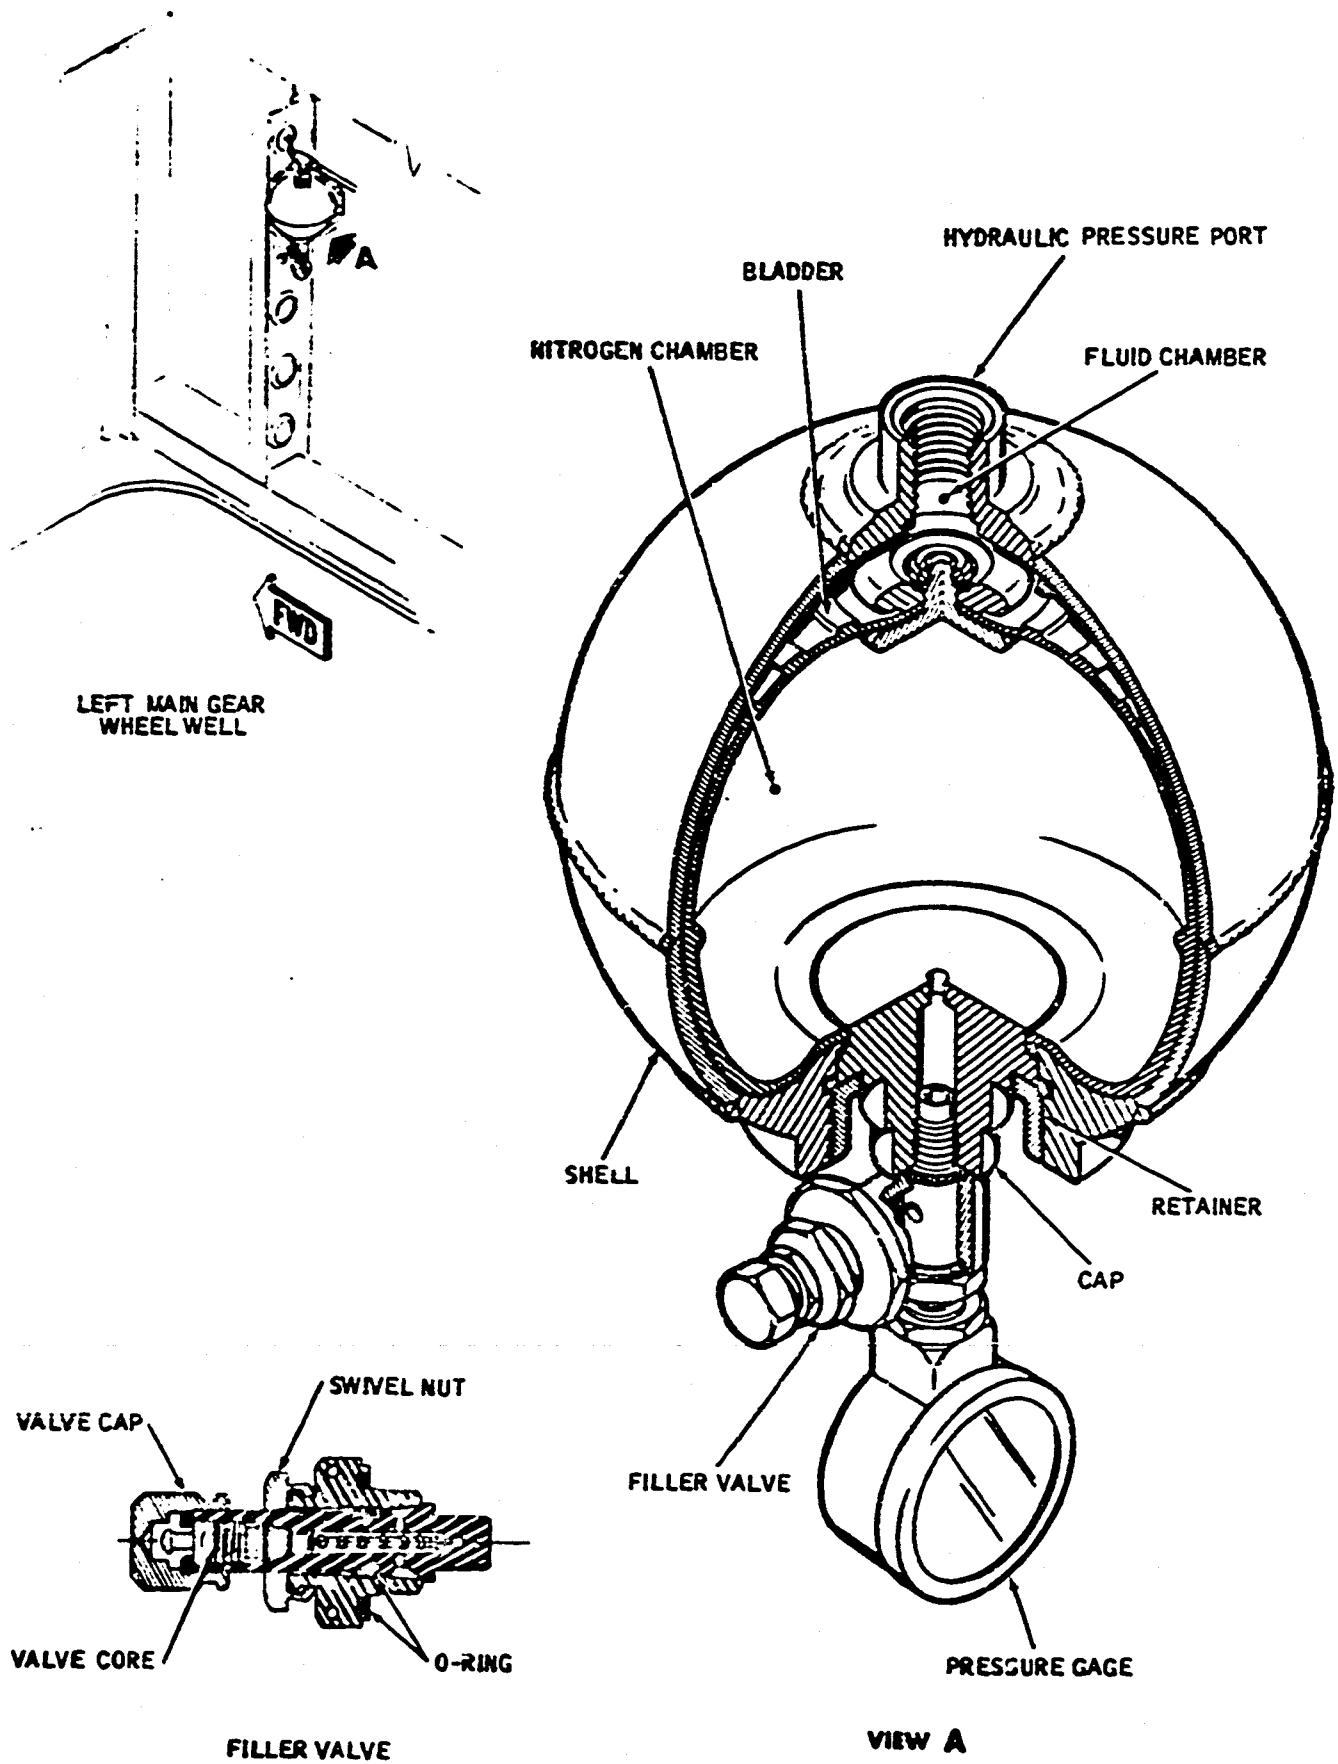

FILLER VALVE

VIEW A

Hydraulic Power System Accumulator --  
 Cutaway View  
 Figure 20



HA2-30

29-10-0  
 CODE 11  
 Page 37

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

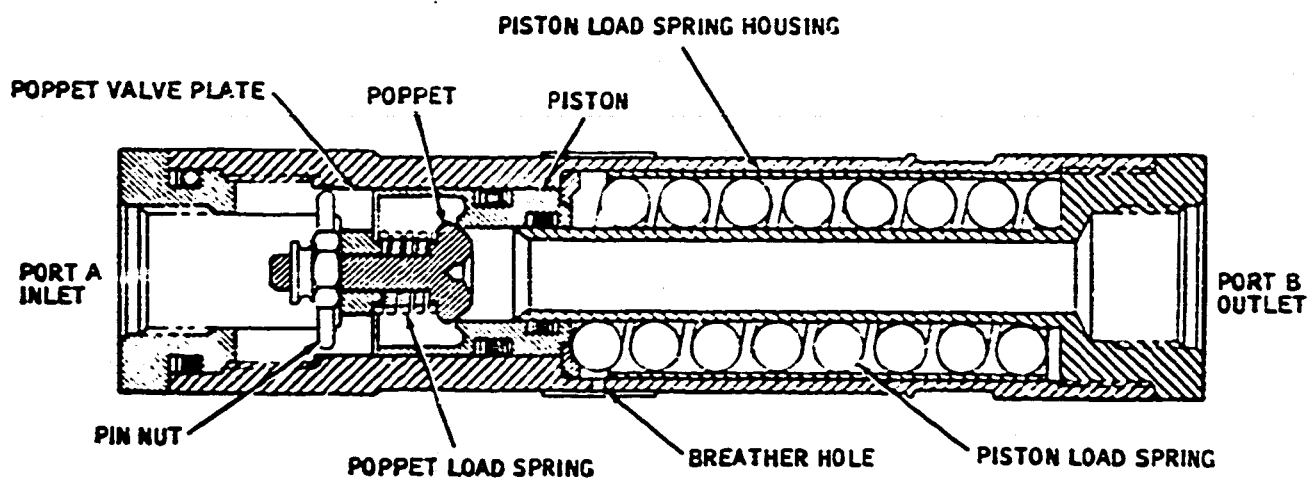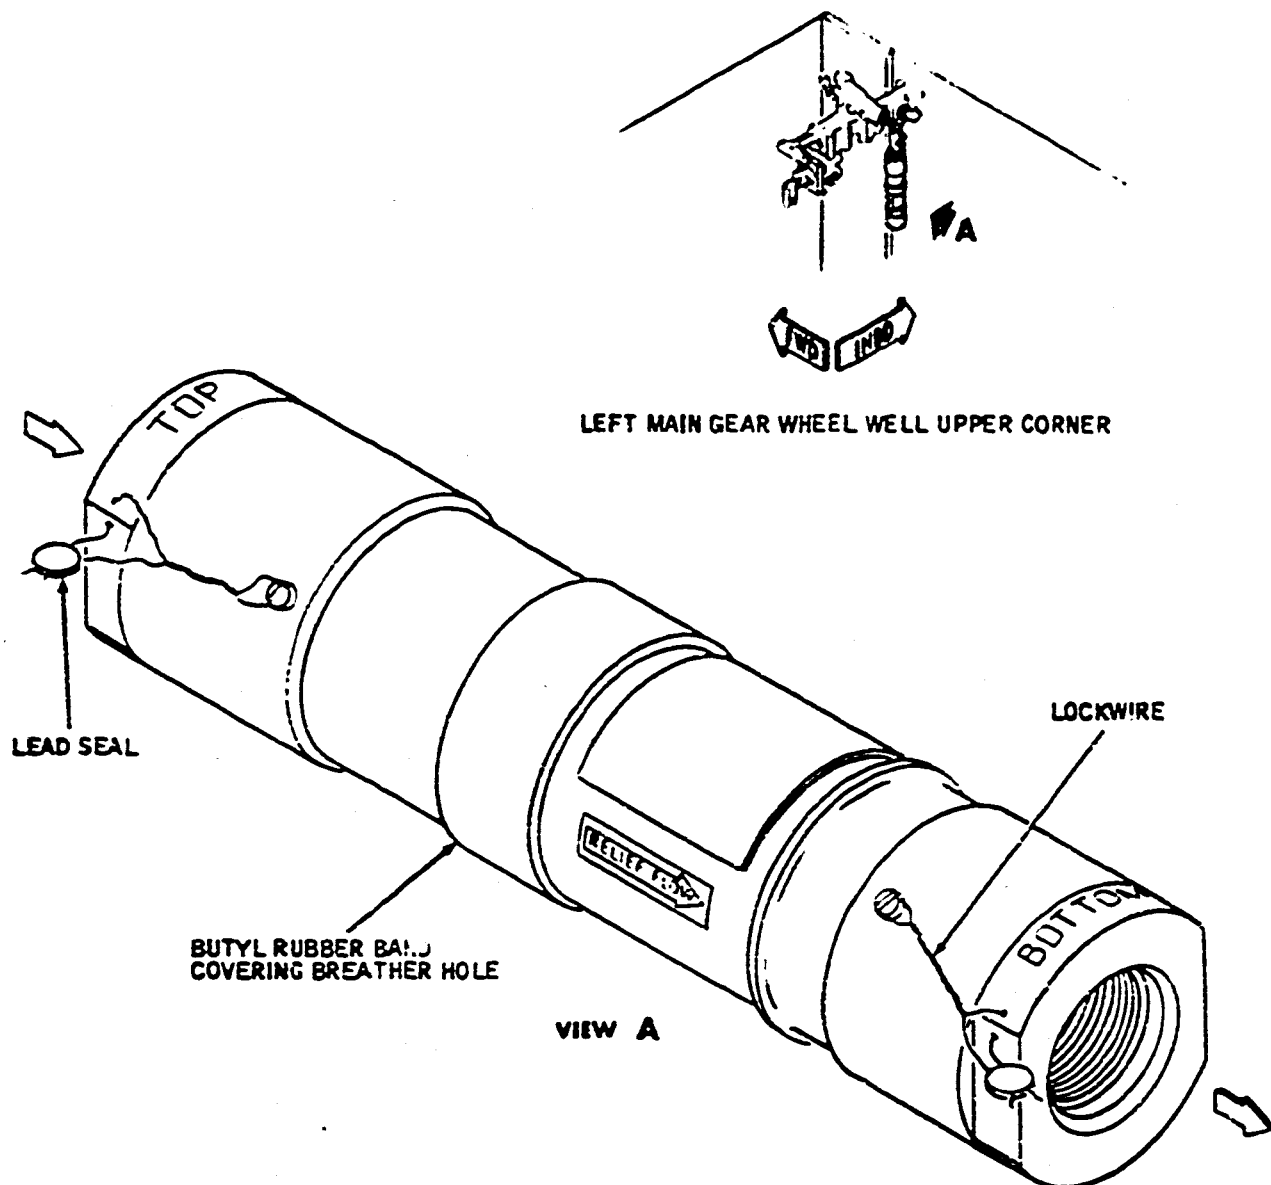

HA2-34

Hydraulic System Priority Valve -- Cutaway View  
 Figure 21

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The priority valve shuts off hydraulic pressure to all subsystems downstream of the left power manifold, whenever the hydraulic pressure drops below 1700 psi minimum. At this point, the valve closes to reserve the hydraulic pressure for use in the flight control systems, preventing them from reverting to manual operation. When the hydraulic pressure rises to 2150 psi maximum, the priority valve opens and supplies pressure to the right manifold and all subsystem downstream of the priority valve.
- (3) Hydraulic fluid from the left power manifold enters the priority valve through the inlet port, passes through the poppet valve plate holes, and applies pressure against the piston. When sufficient hydraulic pressure is applied to the piston, the piston load-spring compresses, unseating the poppet and permitting full flow through the valve. When the hydraulic pressure decreases to less than the opposing force value of the piston load-spring, the load-spring forces the piston against the poppet and shuts off fluid flow through the valve.
- (4) The maximum flow available from both engine-driven hydraulic pumps is: 44 to 45 gpm at takeoff, climb, and cruise configurations; 26 to 28 gpm at descent, approach, and engine idle configurations.
- (5) Some of the larger hydraulic system demands are as follows:
  - (a) Gear retraction -- 17 gpm (10 - 12 seconds)
  - (b) Gear extension -- 14 gpm (10 - 12 seconds)
  - (c) Wing flaps down -- 8 gpm (10 seconds)
  - (d) Wing flaps up -- 3 gpm (22 seconds)
  - (e) Horizontal stabilizer -- 7 gpm
  - (f) Ailerons 17 gpm (25°/second)
  - (g) Rudder -- 3 gpm (25°/second)
- (6) There are various combinations of hydraulic system operations which could cause momentary reversion of the flight controls to manual operation. To prevent reversion to manual operation, the priority valve assures that the left power manifold receives all the hydraulic fluid pressure under conditions of very large flow demands.

U. Hydraulic System Selector Control Lever

- (1) The hydraulic system selector control lever is a manually actuated, mechanical lever detented to three positions. The lever provides a mechanical means, through cables, for positioning the system selector valve and the auxiliary hydraulic pump supply selector valve. The hydraulic system selector control lever is located on the system

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 11  
Page 39

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

engineer's control pedestal. The lever is attached to a drive sector, located on a common shaft with the other control pedestal sectors. The lever and sector are accessible through the cover plates on the system engineer's pedestal.

- (2) To put the hydraulic power system in the bypass condition, the system selector control lever is lifted out of detent and moved to bypass/general system position. At the same time, the cable moves the sector and pushrod of the system selector valve to the No. 1 position. The pushrod positions the system selector valve to the No. 1 bypass position. At the same time, the cables from the system selector valve sector move the auxiliary pump supply selector valve sector to No. 1 (auxiliary) position. The auxiliary pump supply selector valve remains in the auxiliary supply position through the idle feature of the sector rigging. In this condition, the engine-driven pump pressure is ported to the reservoir and the auxiliary pump supplies pressure to the general system. In this position, the fluid is supplied to the auxiliary pump from the low standpipe in the hydraulic system reservoir. To put the system into the alternate condition, the selector control lever is lifted out of detent and moved to the general system/main gear downlock and flaps position. The cables move the system selector valve sector to the No. 3 (alternate) position. The system selector valve sector moves the cables rotating the auxiliary pump supply selector valve sector to the No. 3 (alternate) position. As the sector rotates, the end of the arm moves away from the idle position. This positions the valves to the alternate position, supplying fluid to the auxiliary pump from the auxiliary pump alternate reservoir. In this position, fluid from the auxiliary pump is ported to the wing flap control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported to the general system.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - DESCRIPTION AND OPERATION

1. General

A. Description (See Figures 1 and 2.)

- (1) The hydraulic power system receives fluid pressure from the engine-driven hydraulic pumps, one installed on each inboard engine. The electrically driven auxiliary pump is used to supplement the engine-driven pumps, or to independently supply the system with fluid pressure.
- (2) The hydraulic system reservoir, located in the left wing root, has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir is used for fluid, and 1/10 is used for foam space. A separate air chamber is installed in the reservoir system to provide for a greater fluid capacity in the main reservoir. A reservoir filler assembly is installed in the piping between the reservoir and the air chamber and has a vent line from the filler neck to the tee at the top of the reservoir sight gage. The reservoir is pressurized to 30 to 35 psi by bleed pressure from the engine-driven pumps through an air pressure regulator-aspirator.
- (3) The engine-driven pumps receive fluid from the pressurized main reservoir through respective engine hydraulic fire shutoff valves. The engine hydraulic fire shutoff valves are normally open and can be mechanically controlled from the flight compartment. The pumps supply fluid pressure through respective check valves to the dual filter and relief valve. Some of the fluid from the filter is ported through the regulator-aspirator to pressurize the reservoir. Most of the fluid is routed through a check valve to the system selector valve, and then to the left and right hydraulic power manifolds. The manifolds distribute the fluid pressure to the subsystems.
- (4) Hydraulic fluid is normally supplied to the auxiliary hydraulic pump from a low standpipe in the main reservoir. During alternate operation, the auxiliary hydraulic pump receives fluid supply from the auxiliary pump alternate reservoir, which is located just aft of the auxiliary pump. From these reservoirs, the fluid is ported through the auxiliary pump selector valve which is mechanically controlled from the flight compartment by the system selector control lever. When operating, the auxiliary hydraulic pump supplies fluid pressure to the subsystems through the system selector valve which is also controlled by the system selector control lever in the flight compartment. A filter and check valve are installed in the line from the auxiliary pump to the system selector valve.
- (5) An accumulator is installed in the pressure line to the subsystems to provide a reserve supply of fluid and to act as a surge damper for the system.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Engine-driven pump fluid pressure is routed through the system selector valve to the left power manifold, where it is distributed to some of the subsystems and through the priority valve to the right power manifold. Fluid pressure from the right power manifold is distributed to the remaining subsystems.
- (7) The priority valve is a spring-loaded, poppet-type, balanced relief valve installed in the line downstream of the left power manifold. The priority valve's function in the system is to prevent the flight control systems from reverting to manual operation during high demands on the hydraulic system.
- (8) A fluid pressure transmitter, located in the nosewheel well, senses the system pressure, which is indicated on the hydraulic system pressure indicator in the flight compartment.


B. Normal Operation

- (1) Fluid is supplied to the hydraulic system from the pressurized hydraulic system reservoir. For operation of the hydraulic system under normal conditions, 8.1 US gallons (6.7 Imperial gallons; 30.6 liters) of hydraulic fluid are available to the engine-driven hydraulic pumps, and 12.9 US gallons (10.7 Imperial gallons; 48.8 liters) are available to the auxiliary hydraulic pump. Supply lines from the main reservoir carry fluid to each inboard pylon through normally open engine hydraulic fire shutoff valves to the engine-driven hydraulic pumps. Fluid is supplied to the auxiliary hydraulic pump from the main reservoir through a low standpipe at the base of the reservoir. Fluid is carried from the reservoir through the auxiliary pump selector valve to the auxiliary hydraulic pump.
- (2) The engine-driven hydraulic pumps supply full system pressure (3000 psi nominal) at any given engine speed, from idle to full power. The output flow of the pump is varied by sensing pressure from the outlet side of the pump. Each engine-driven pump contains a solenoid-operated bypass valve which, when energized, bypasses the pressure control regulator of the pump and ports fluid to the pump yoke control piston which feathers the pump. When the pump is feathered, flow rate is reduced to almost zero (1.0 gpm) and to a pressure of approximately 300 psi. Half of this flow maintains pump lubrication and cooling through internal leakage. This leakage is returned, through a check valve, the engine-driven pump case drain line filter, and another check valve to the case drain return port of the reservoir. The pressure fluid from each pump passes through a check valve to the dual filter and relief valve.
- (3) The fluid enters the dual filter and relief valve through the relief valve chamber. The fluid is passed through the filter element, through a manifold, and through a common outlet port. Fluid from the outlet port is routed through a check valve to the system selector valve. If back pressure in the system builds up to approximately 3300 psi, the

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

LH WHEEL BRAKE,  
 RH AILERON POWER CONTROL,  
 RH THRUST REVERSER,  
 LH LANDING GEAR TRIM CYLINDER  
 RELIEF VALVE, WING SLOTS, AND  
 AIR START COMPRESSOR

NOTE:  
 AIR START COMPRESSOR ON  
 AIRPLANES I-DWJ, I-DWK,  
 I-DWN, I-DWV, I-DWW,  
 I-DWY, I-DWZ

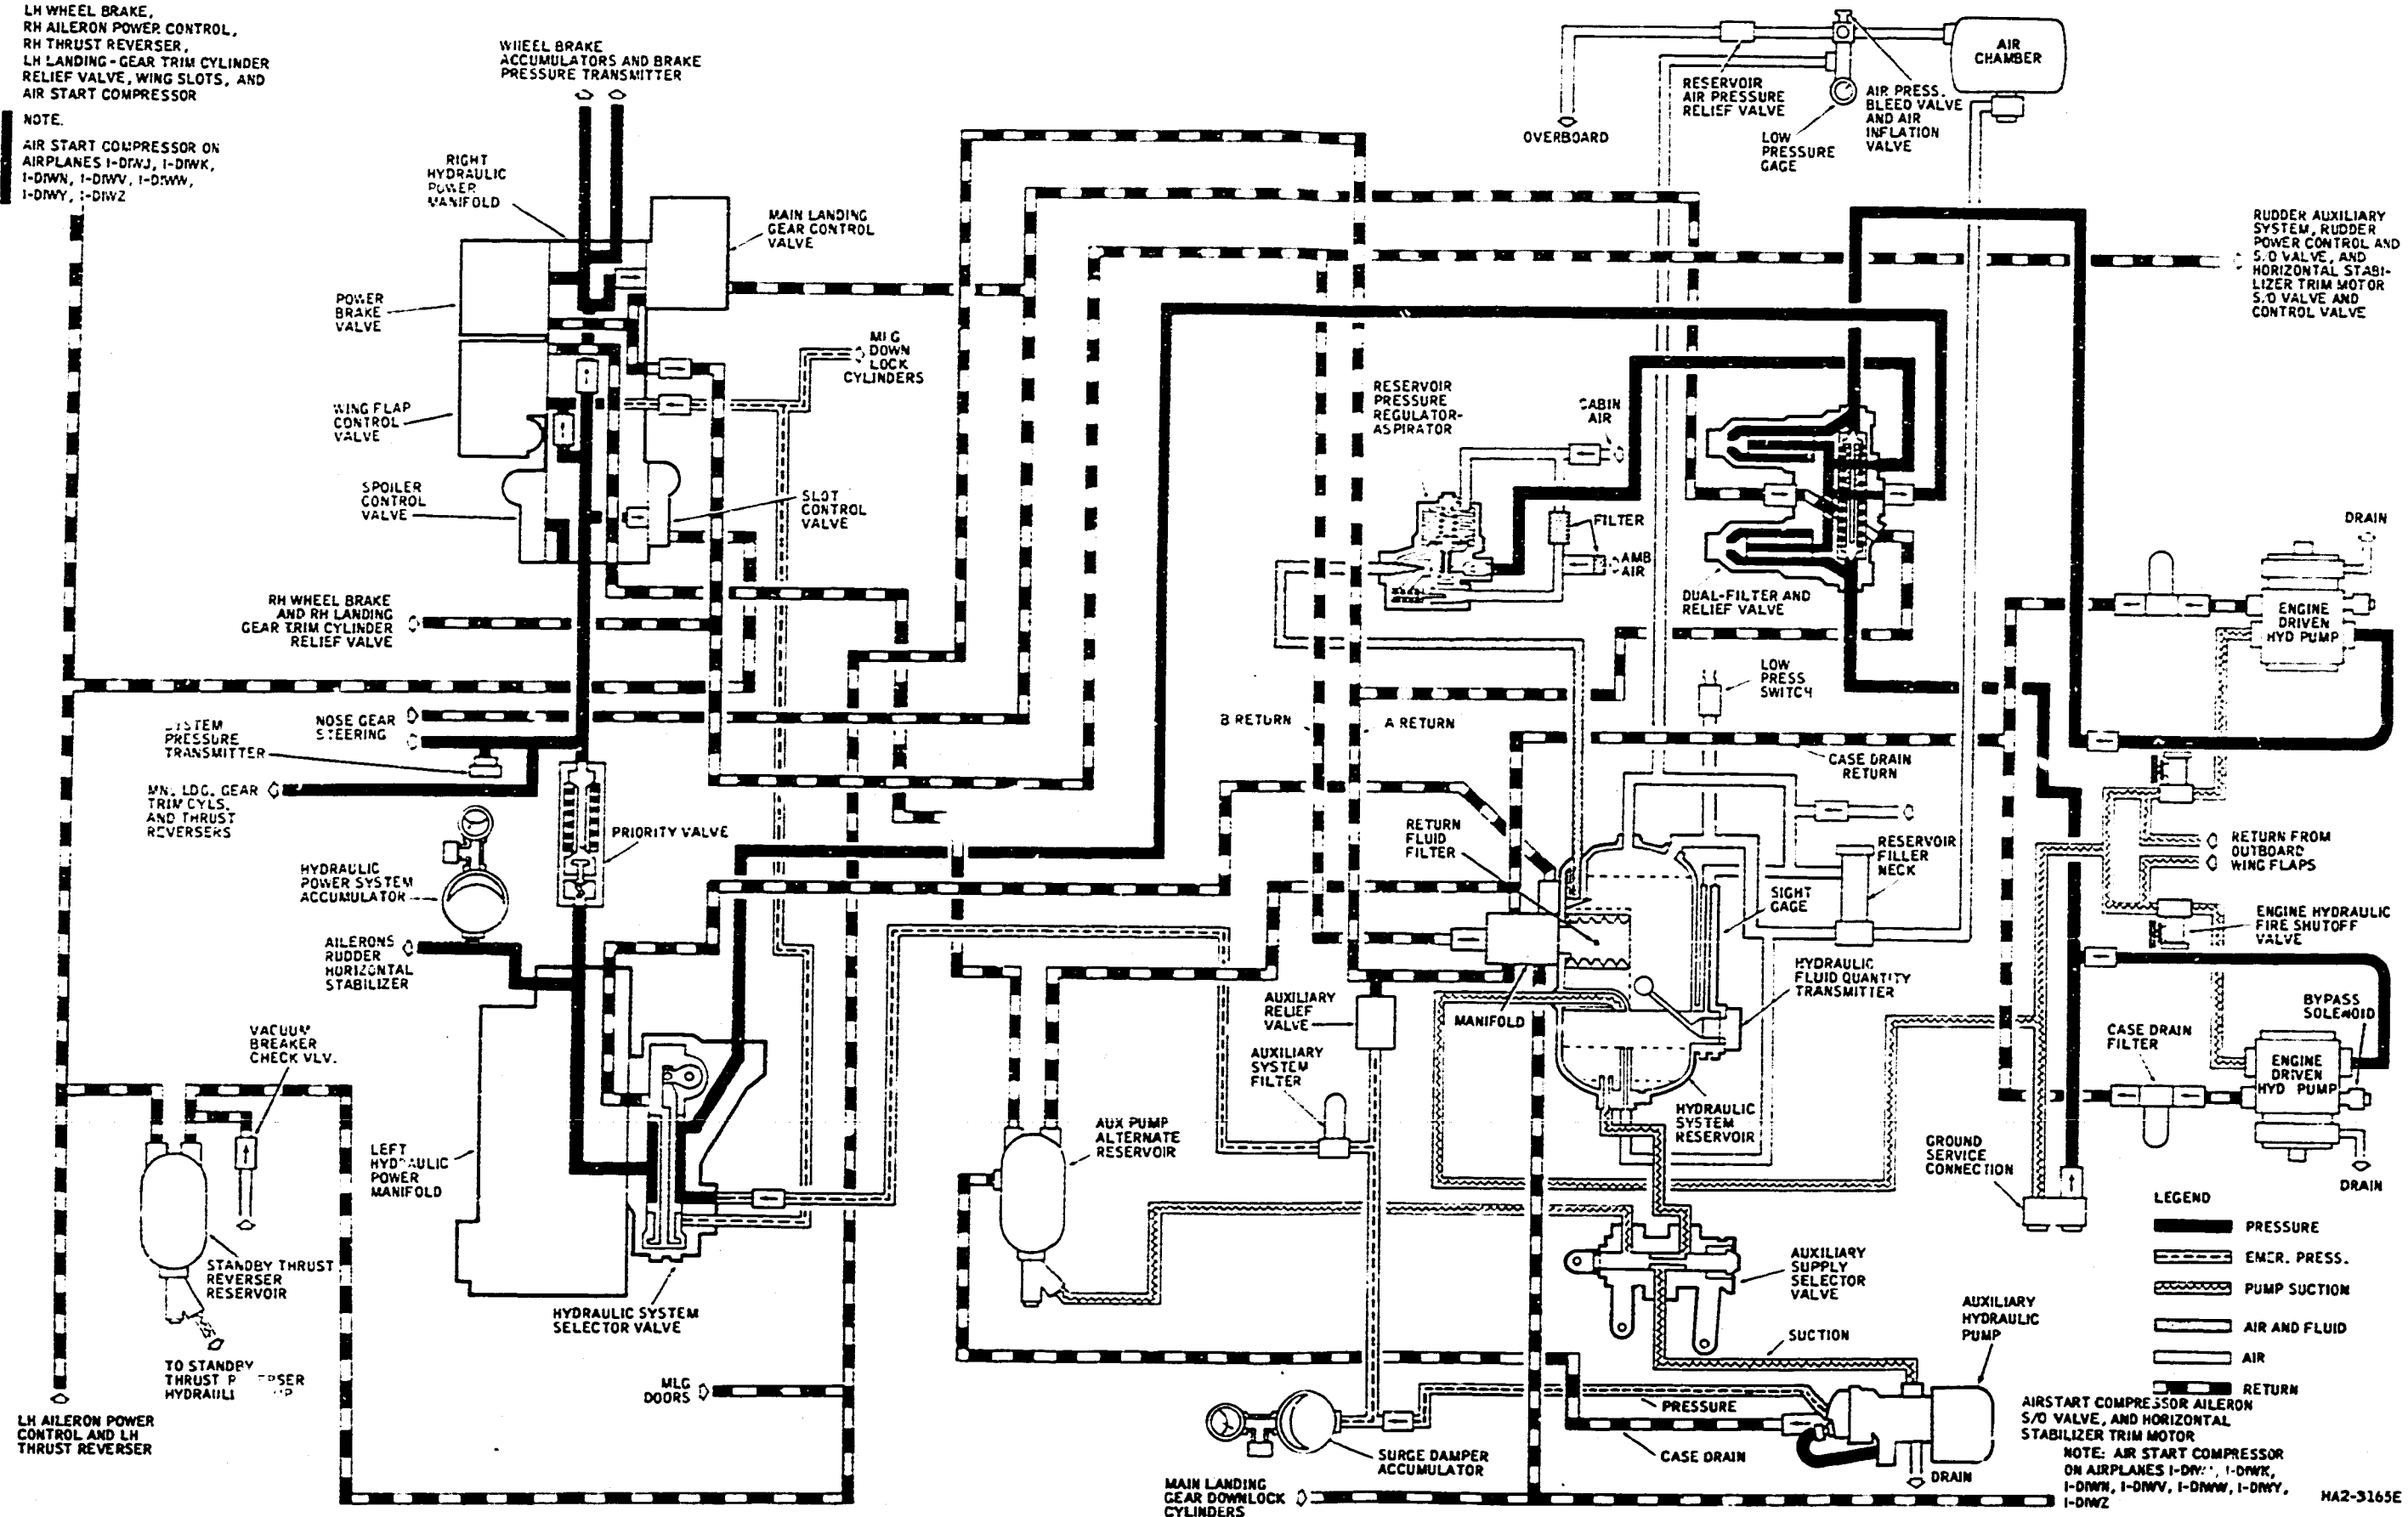

Hydraulic Power System -- Schematic Diagram  
 Figure 1


29-10-0  
 CODE 12  
 Page 3

Nov 1/69

Printed in U.S.A.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

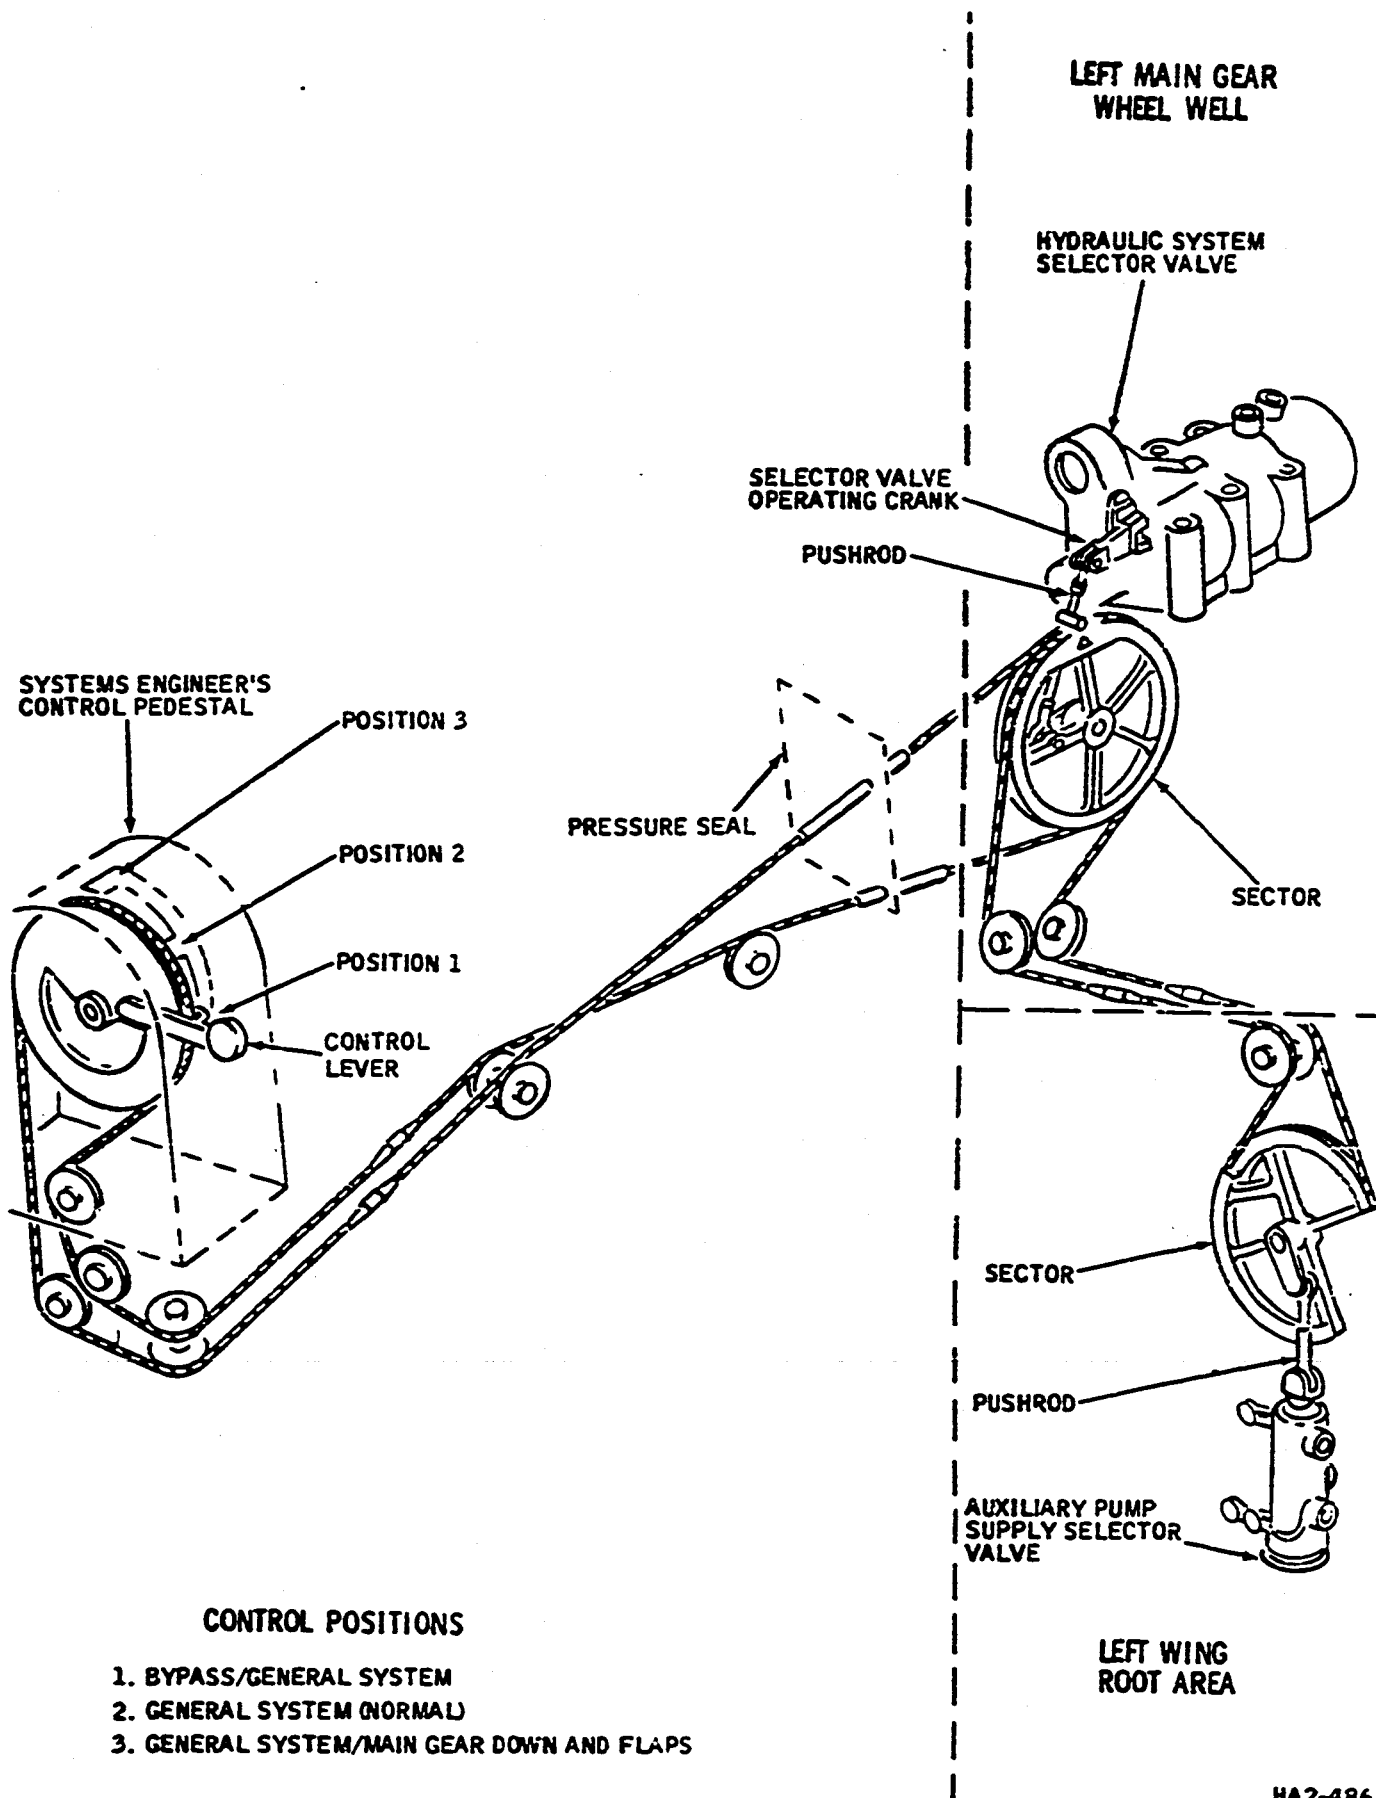

Hydraulic System Selector and Auxiliary Pump Supply  
 Selector Valves -- Mechanical Control Schematic  
 Figure 2

HA2-486

29-10-0  
 CODE 12  
 Page 5

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

relief valves in the dual filter and relief valve open and port fluid back to the reservoir via A return port. The relief valve poppet closes again when system pressure drops to approximately 3000 psi.

- (4) The aspirator receives filtered fluid (bleed pressure at nominal 3000 psi) from the dual filter and relief valve. The aspirator operates on the jet pump principle. Hydraulic fluid is atomized and mixed with air within the unit by a nozzle and a venturi. The mixture is used to pressurize the reservoir and reservoir air chamber. The regulator diaphragm maintains a pressure range of 30 to 35 psi in the reservoir and air chamber. If there is a regulator malfunction, the aspirator stalls when the outlet pressure reaches a maximum of 40 psi. A reservoir relief valve in the reservoir vent line relieves thermal expansion pressure above 45 (+5, -0) psi.
- (5) Pump pressure fluid enters the system selector valve through the system pressure inlet port. When the pump selector control lever is in the general system (normal) position, fluid is ported to the pressure passages of the left power manifold. The fluid pressure in the left power manifold is ported through the priority valve to the nose gear and the right power manifold and directly to the following valves:
  - (a) Aileron power shutoff
  - (b) Rudder power shutoff
  - (c) Longitudinal trim hydraulic motor shutoff
- (6) The right power manifold distributes fluid pressure to the brake accumulators, the pressure transmitter, and the following control valves:
  - (a) Wing flap
  - (b) Slot
  - (c) Main gear
  - (d) Power brake
- (7) The return fluid from the wing flap control valve is ported through the right power manifold and into the auxiliary hydraulic pump alternate reservoir. Return fluid from the outboard wing flaps is piped into the suction lines for each engine-driven hydraulic pump. Return fluid from the slot control valve is ported into the A return line to the main reservoir. The power brake and main gear control valve gear up return fluid is ported through a restrictor check valve into the B return line to the reservoir. The main gear control valve gear down return pressure bypasses the right manifold and returns to the reservoir through the A return line. All return fluid entering the reservoir is filtered through the return ports filter located within the reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

C. Bypass Operation

- (1) The output of the engine-driven hydraulic pumps is bypassed by moving the system selector control lever out of the general system (normal) position to the bypass/general system position.
- (2) The system selector valve in the bypass position ports engine-driven pump pressure from the dual filter and relief valve directly to the return passage of the left power manifold. From the manifold, the fluid is ported directly to a tee in the wing flap return port of the hydraulic system reservoir. In the bypass condition, the auxiliary hydraulic pump receives fluid from the hydraulic system reservoir, pressurizes it to system pressure, and ports it to the left and right power manifolds for distribution to the subsystems.

D. Alternate Operation

- (1) When both engine-driven hydraulic pumps and the auxiliary hydraulic pump are rendered inoperative due to the loss of the normal supply of fluid, the hydraulic power system can be rigged for alternate operation. This is accomplished by placing the system selector control lever in the general system/main gear downlock and flaps position. When the system selector control lever is in this position, the auxiliary hydraulic pump supply selector valve is positioned to supply fluid from the auxiliary pump alternate reservoir to the auxiliary pump.
- (2) Fluid is supplied to the auxiliary pump from the outlet port of the auxiliary pump supply selector valve. Output pressure is ported through the auxiliary system filter and check valve to the auxiliary pressure inlet port of the system selector valve.
- (3) In the general system/main gear downlock and flaps position, auxiliary pump pressure bypasses the manifold pressure passages and is ported from the alternate outlet port of the system selector valve. Fluid from this port flows directly to a port on the right power manifold, through an internal check valve in the manifold, to the wing flap control valve. A line, teed into the alternate supply line, runs directly to a shuttle valve in the main gear downlock cylinder line. When auxiliary pressure is applied, the shuttle valve shifts, porting fluid into the downlock bungee cylinder's downlock side.

E. Mechanical Control

- (1) The hydraulic power mechanical control system consists of the hydraulic system selector control lever cable drum, the system selector valve sector, the system selector valve, the auxiliary hydraulic pump supply selector valve sector, and the auxiliary hydraulic pump supply selector valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (2) The control lever located on the system engineer's control pedestal is used to position the system selector valve and, in turn, the auxiliary hydraulic pump supply selector valve.
- (3) The control lever is spring loaded into general system (normal) position, and is connected to the control lever cable drum. Two cables run from the drum, under the cabin floor, aft through the pressure bulkhead at the rear wing spar, and into the left wheel well to the system selector valve sector. A pushrod connects the sector to the positioning lever of the system selector valve.
- (4) A second set of cables is routed from the system selector valve sector into the left wing root to the auxiliary hydraulic pump supply selector valve sector. When the system selector valve is in either bypass or normal, the auxiliary hydraulic pump supply selector valve sector is arranged so that the pushrod idles between the two positions. This allows the valve to remain in the auxiliary position. When the sector is moved to the alternate position, the pushrod is pulled by the sector to reposition the valve to the alternate position.
- (5) The control lever is normally in the general system (normal) position. To move the system selector valve to the bypass position, the control lever is moved to the bypass/general system position. When the system selector valve is moved to the bypass position, the auxiliary hydraulic pump supply selector valve sector is moved to a new position. Due to the idle feature on the auxiliary sector, the valve remains in the auxiliary position. With the valve in this position, fluid is supplied to the auxiliary pump through the low standpipe in the hydraulic system reservoir. In this condition, engine-driven pump pressure is ported to the reservoir and the auxiliary pump pressure is ported to the general system.
- (6) To put the system in alternate operation, the control is moved to the general system/main gear downlock and flaps position. This moves the system selector valve to the alternate position, and simultaneously moves the auxiliary hydraulic pump supply selector valve to the alternate position. Fluid is supplied to the auxiliary pump from the auxiliary hydraulic pump alternate reservoir. Fluid pressure from the auxiliary pump is ported to the flap system control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported from the system selector valve to the general system.

## 2. System Components

### A. Hydraulic System Reservoir (See Figures 3 and 4.)

- (1) The hydraulic system reservoir is installed on the aft side of the wing rear spar in the left wing root and is accessible through the left wing root access door. The hydraulic system reservoir serves as the main

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

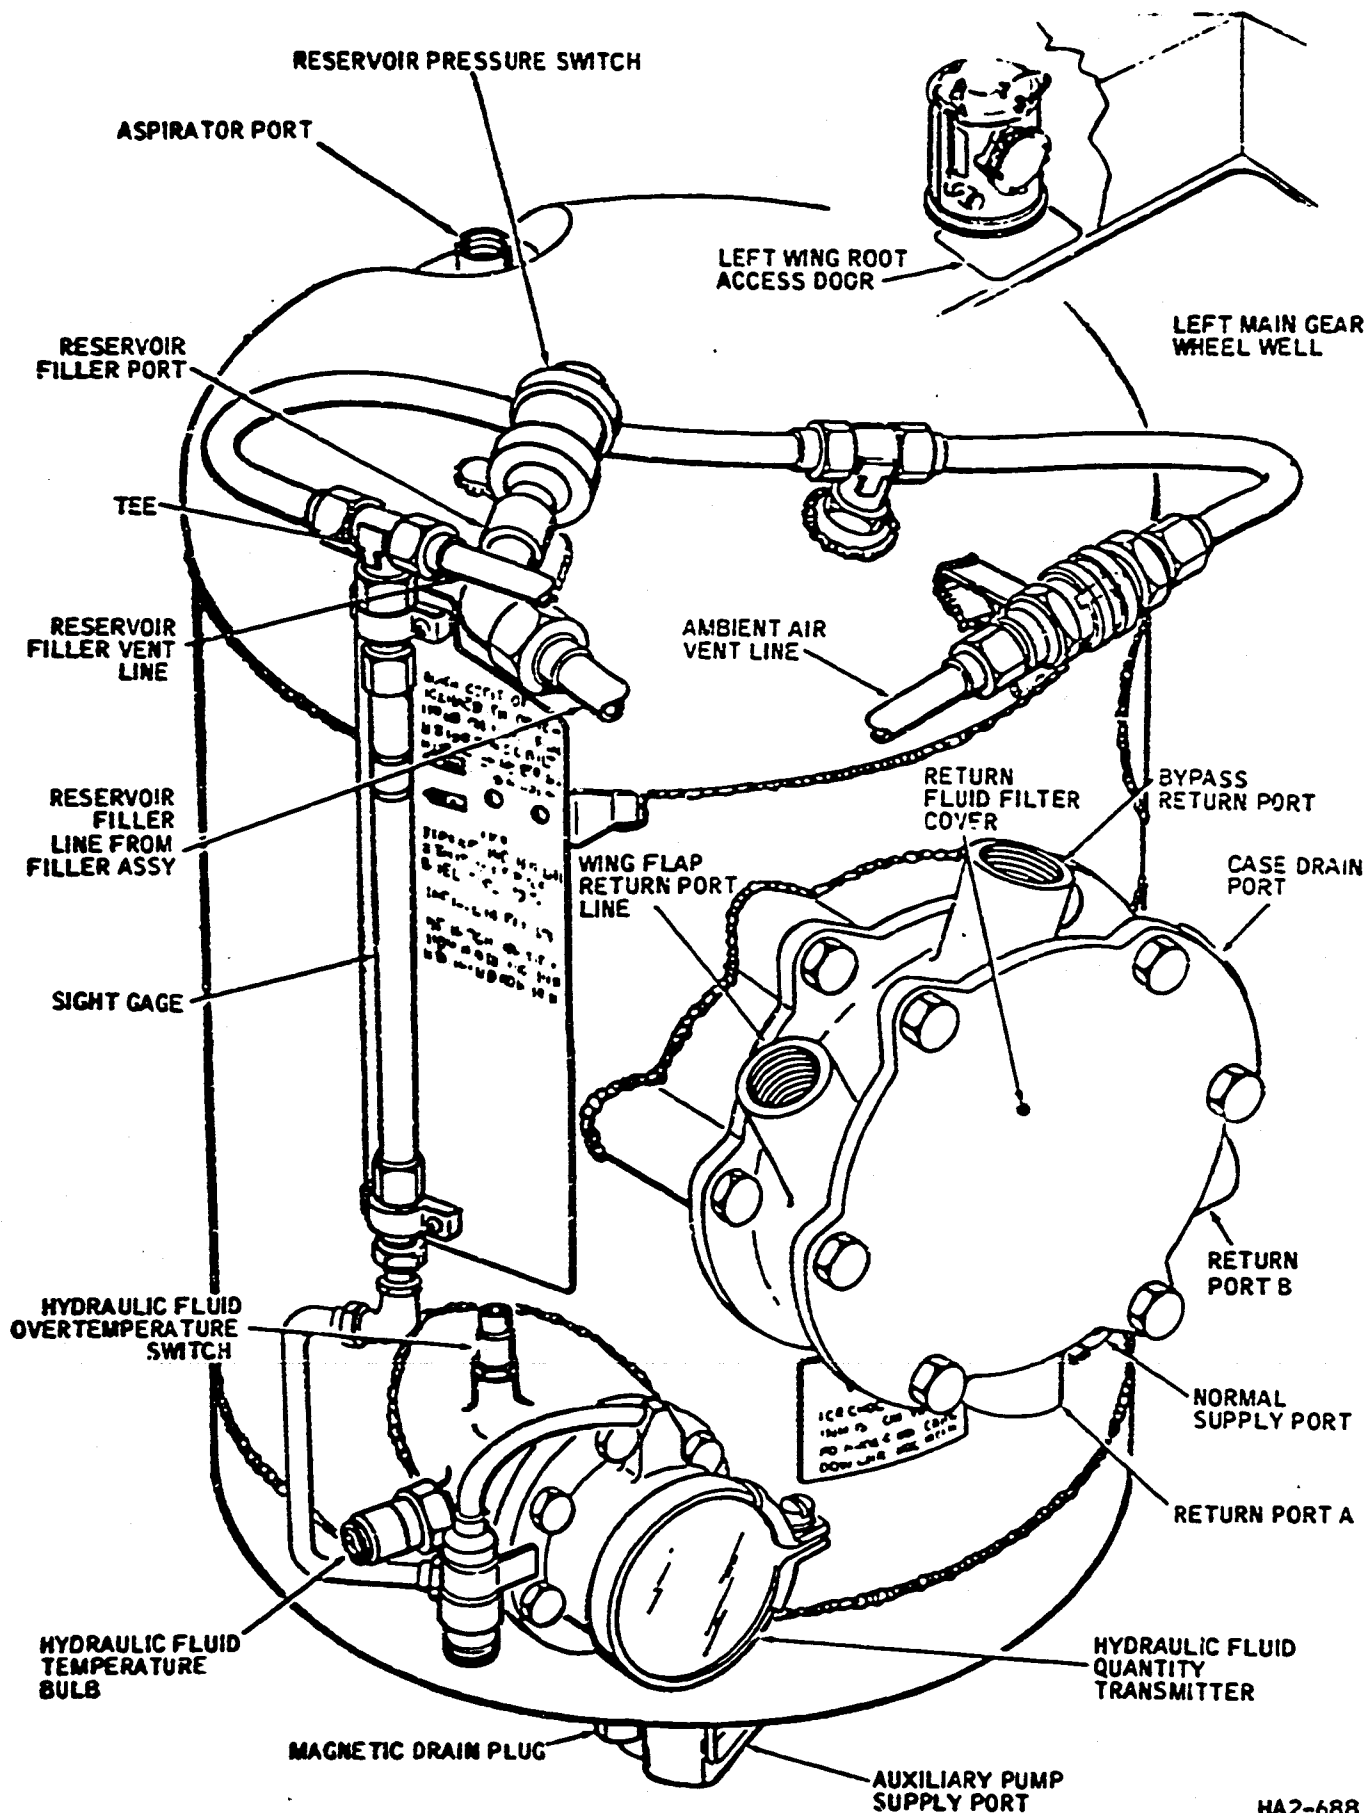

Hydraulic System Reservoir -- External View  
 Figure 3


HA2-688

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 12  
 Page 9

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

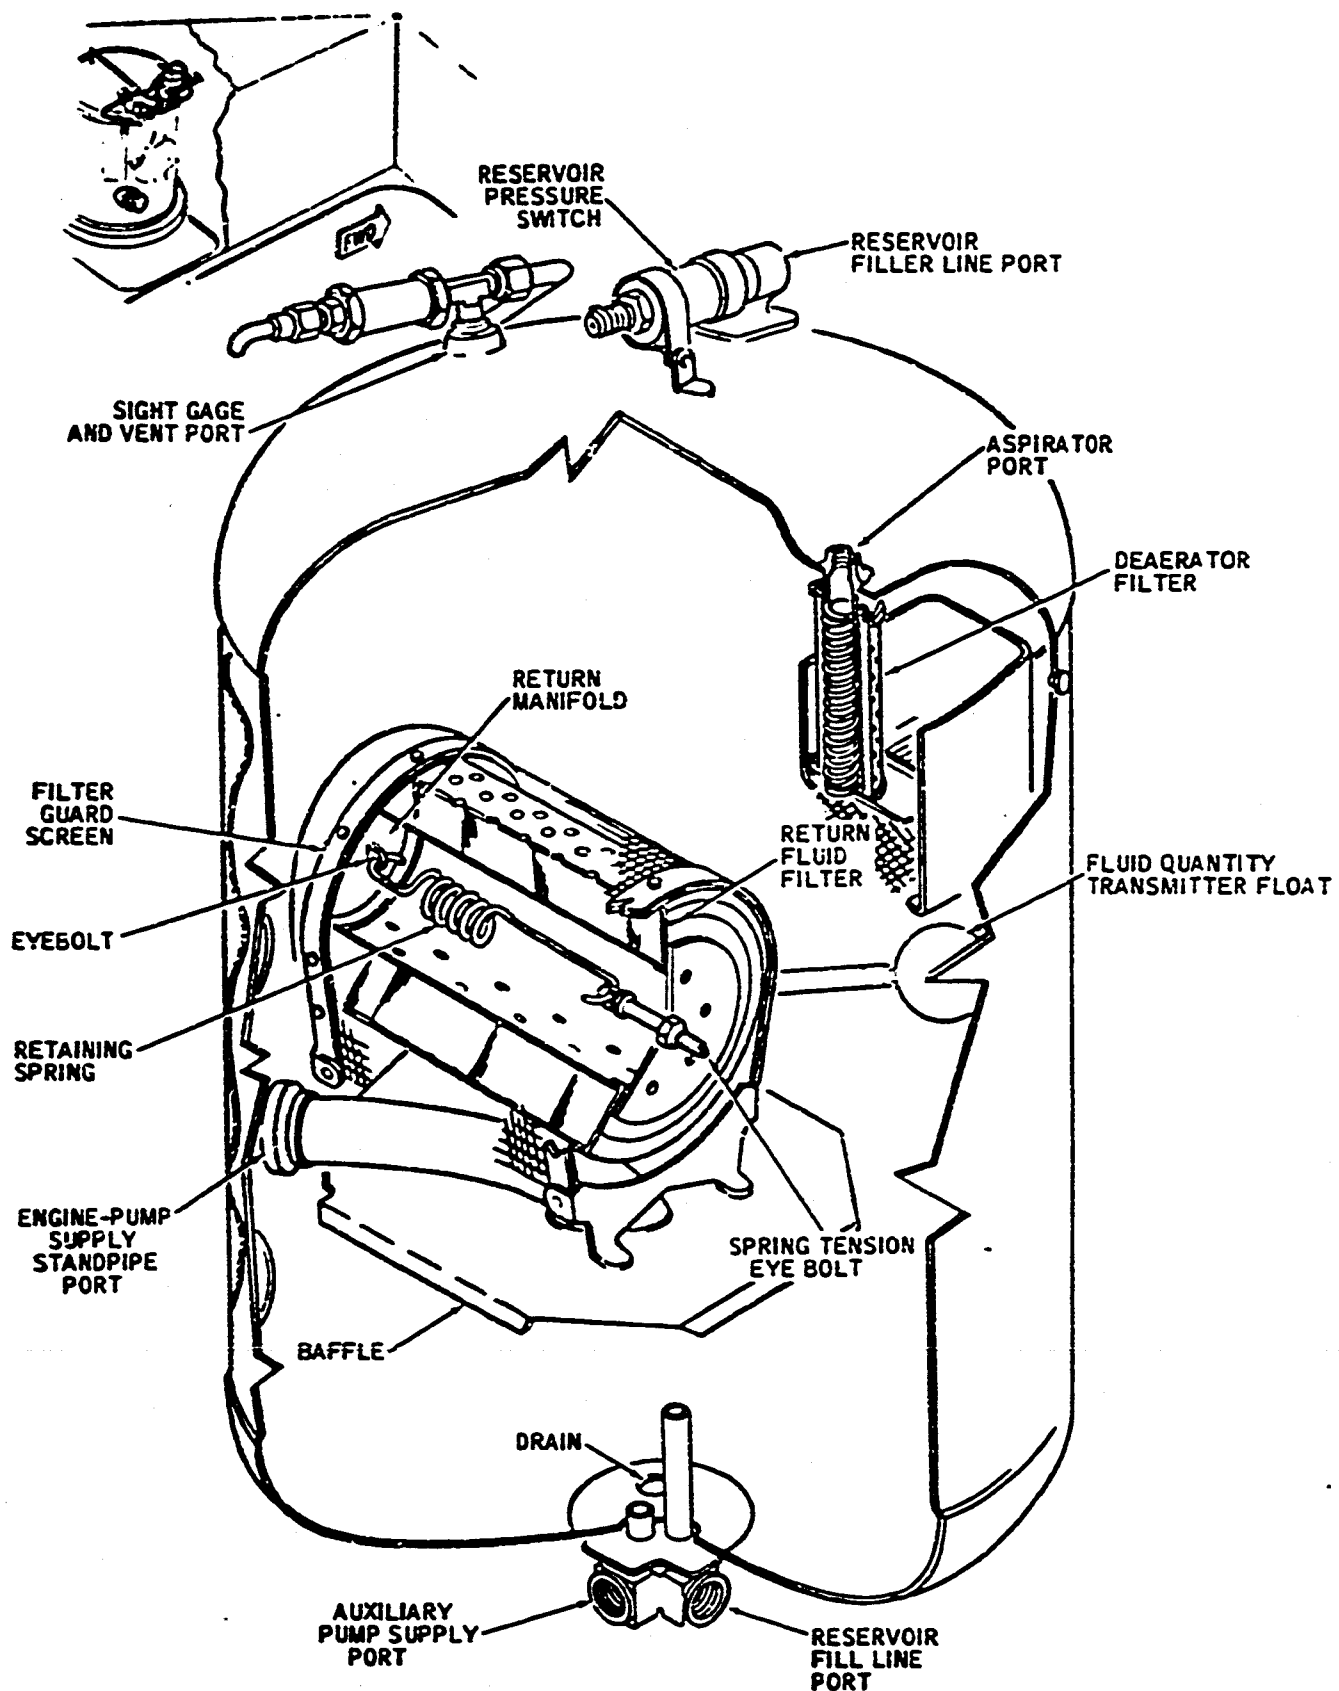

HA2-689

Hydraulic System Reservoir -- Cutaway View  
 Figure 4

29-10-0  
 CODE 12  
 Page 10

Printed in U.S.A.

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

source of hydraulic fluid for the engine-driven hydraulic pumps and the normal supply for the auxiliary hydraulic pump. The reservoir is cylindrical in shape and contains a filter, baffle, and a screen cover encasing the filter. The filter prevents foreign particles from contaminating the fluid supply. Mountings are provided on the exterior surface of the reservoir for return line ports, aspirator port, electrical sensing units, sight gage, instruction placards, magnetic drain plug, and system supply ports.

- (2) The reservoir is pressurized with air from the regulator-aspirator to a range of 30 to 35 psi and has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir volume is used for fluid and 1/10 is used for foam space.
- (3) The aspirator port through which the reservoir is pressurized is located in the recess on top of the reservoir. An aspirator-deaerator filter is supported in the reservoir by a screen and support box assembly which is mounted to the reservoir wall by two bolts.
- (4) The mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The return ports manifold is an open-centered ring, flanged at both sides and provided with five fluid ports around its circumference; return port A is located at the bottom, return port B is located at the lower right side, the wing flap return port is located at the upper left side, and the system selector valve bypass port is located at the top. One flange of the manifold is mounted with six bolts to the mounting flange on the reservoir. The return fluid filter cover fits into the open side of the manifold, and is attached to the outer manifold flange with six bolts to form a fluid-tight cover for both the manifold and the filter.
- (5) The return fluid filter is installed in the reservoir, behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the return fluid filter cover holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to the engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
- (6) A flanged adapter for the fluid quantity transmitter is welded to the reservoir below and to the left of the return ports manifold. The adapter is provided with two small port bosses for the hydraulic fluid temperature bulb and the hydraulic fluid overtemperature switch. The lower end of the sight gage connects to a third port in the adapter, while the top of the sight gage tees into a port at the top of the reservoir. An instruction plate is mounted behind the sight gage and the vacuum breaker check valve tees into the port at the top of the reservoir that is used by the sight gage.

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 12  
Page 11

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

**B. Hydraulic Reservoir Return Fluid Filter (See Figure 4.)**


- (1) The reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply. The filter is located behind the return ports manifold, and is spring loaded to act as its own relief valve. Access to the filter is by removing the return fluid filter cover from the return ports manifold by removal of six bolts. The filter is attached by the retaining spring to the cover and is withdrawn from the reservoir when the cover is removed.
- (2) Externally, the filter consists of two perforated concentric tubes. The area between the tubes is closed by metal end caps which are bonded to the two tubes. A resilient rubber gasket is bonded to each of the caps. Each gasket must be smooth and flat for proper sealing of the filter. The gaskets act as a static seal and a relief valve seat.
- (3) Internally, the filter has a 10-micron, resin-impregnated, convoluted paper-type filter element. The area of the filter element is approximately 1960 square inches. The filter is held in place by a retaining spring. One end of the spring is attached to an eyebolt located inside the return port's manifold cover. The spring passes through the center chamber of the filter and is connected to another eyebolt. This eyebolt is secured to a large washer and plate by means of a self-locking nut. The washer seats on the rubber gasket which is bonded to the filter. The fluid enters the center chamber of the filter and passes through the inner tube of the filter to the filter element by means of perforation holes. Foreign matter is filtered out by the filter element, and the fluid leaves the element through perforation holes in the outer tube. When the element becomes saturated with foreign matter, the filter acts as its own relief valve and unseats at 20 to 25 psi above normal return pressure which allows fluid to bypass the filter and enter the reservoir.

**C. Hydraulic Reservoir Air Pressure Regulator-Aspirator (See Figure 5.)**

- (1) The reservoir air pressure regulator-aspirator is a jet-type air pump, regulated by a pressure-sensitive shutoff valve. The unit pressurizes the hydraulic reservoir with air to the operating pressure range of 30 to 35 psi. The regulator-aspirator is located on the top inboard side of the reservoir and is mounted on the reservoir retainer ring. Access to regulator-aspirator is through the left wing root access door.
- (2) The regulator-aspirator assembly consists of a main aspirator body and a regulator housing. The main aspirator body has two inlet ports and one outlet port. The ports are permanently identified inlet, outlet, and air inlet. The plug for an air check valve is located near the outlet port. A chemically treated paper filter is installed near the aspirator body air inlet port in the air line from the pressurized cabin area. A metal screen filter is installed on the check valve which tees into the aspirator body air inlet port.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

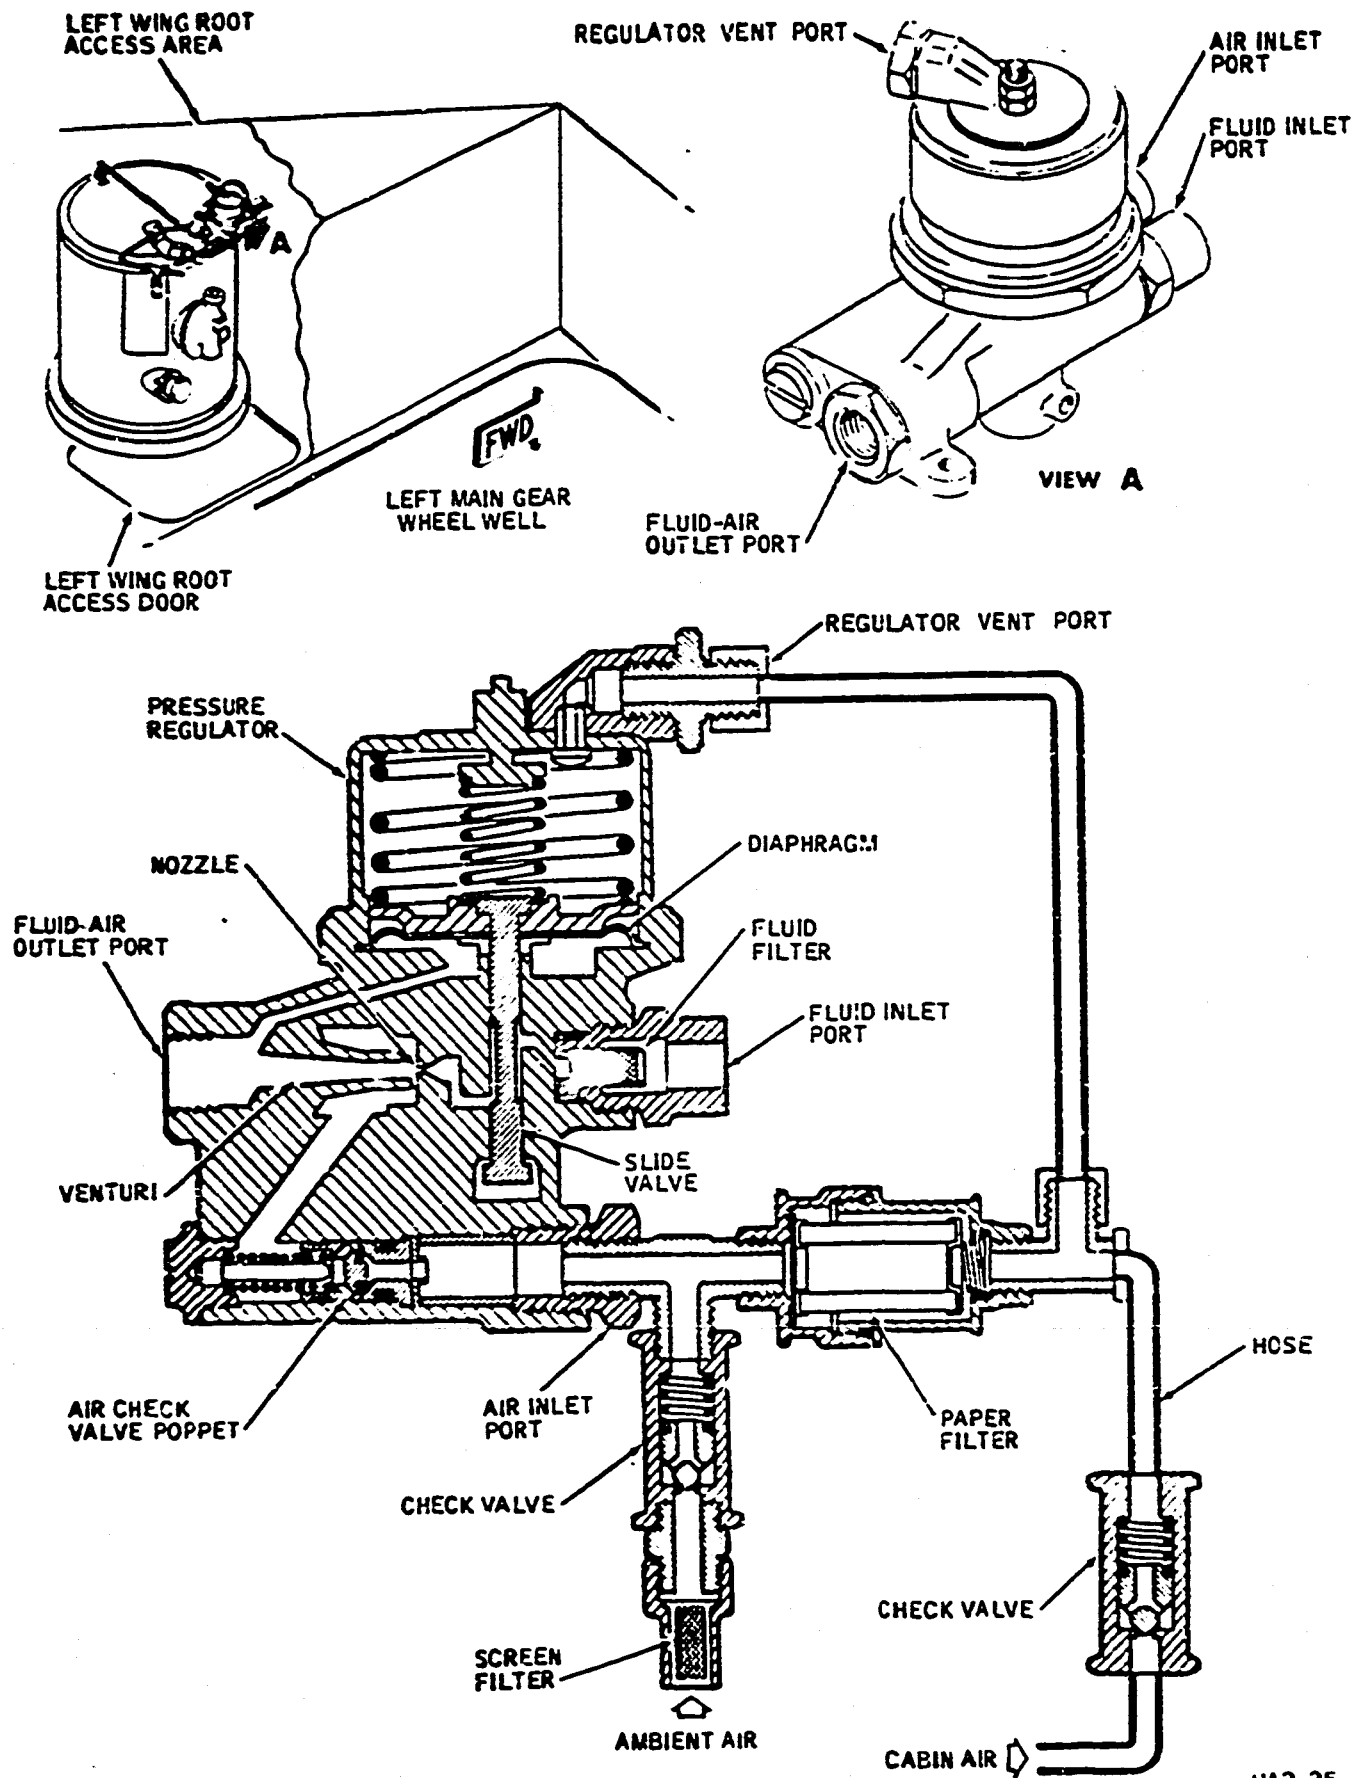

Reservoir Air Pressure Regulator-Aspirator -- Schematic  
 Figure 5

HA2-25

29-10-0  
 CODE 12  
 Page 13

Jun 15/67

Printed in U.S.A.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The reservoir air pressure regulator-aspirator operates basically with a jet pump action which is regulator controlled. Fluid enters the assembly through the fluid inlet port where it is filtered and then ported through the valve assembly of the regulator. During normal operation, when air pressure at the outlet port is under 30 psi, the valve is open porting fluid to the nozzle. The orifice in the nozzle sprays the fluid through the venturi of the outlet port, creating a vacuum in the chamber around the venturi. When the vacuum becomes great enough to create a pressure differential of approximately 1 psi, ambient air opens the air check valve. The air is ported to the chamber around the venturi and is siphoned, with the fluid, through the outlet port.
- (4) Hydraulic fluid inlet pressure at the engine-driven hydraulic pumps is improved at high altitude operation by supplying pressurized filtered cabin air to the reservoir regulator-aspirator instead of ambient outside air. Part of the inlet air is diverted by a tee fitting to the regulator chamber to provide a more positive regulating force on the diaphragm than would be obtained with low ambient pressures. The chemically treated paper filter, installed in the regulator-aspirator air supply line from the cabin, removes smoke tars and impurities from the pressurized cabin air. The steel mesh screen filter, installed on the check valve which tees into the regulator-aspirator air inlet port downstream of the paper filter, removes dust, dirt, and foreign particles from the ambient air and serves as a standby to supply filtered air in event the paper filter is clogged.
- (5) As pressure in the reservoir builds up, back pressure is bled from the outlet port to the diaphragm chamber. The reaction on the diaphragm begins to move the slide valve to cut off the fluid flow. At 30 to 35 psi of back pressure, the diaphragm completely closes the slide valve, cutting off the flow of fluid. If there is a regulator malfunction, the aspirator stalls when outlet pressure reaches a maximum of 40 psi.
- (6) The aspirator is capable of pressurizing the reservoir to 30 to 35 psi in approximately 4 minutes at altitudes from sea level to 15,000 feet, when fluid is ported through the nozzle at 0.5 gpm at 3000 psi.


**D. Regulator-Aspirator Air Filters (See Figure 6.)**

- (1) The regulator-aspirator air filters remove ambient and cabin air impurities from the air which is used to pressurize the main hydraulic system reservoir. The filtering system is composed of two filters. One of which is a paper element filter, installed directly in the cabin air supply line near the regulator-aspirator. The other filter is a fine mesh, screen-type filter, installed on a check valve and positioned at right angles to the regulator-aspirator air inlet port. The screen filter, in addition to providing an immediate supply of ambient air during ground operations, serves as a standby air inlet to preclude air starvation of the regulator-aspirator in the event the paper element filter becomes clogged.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

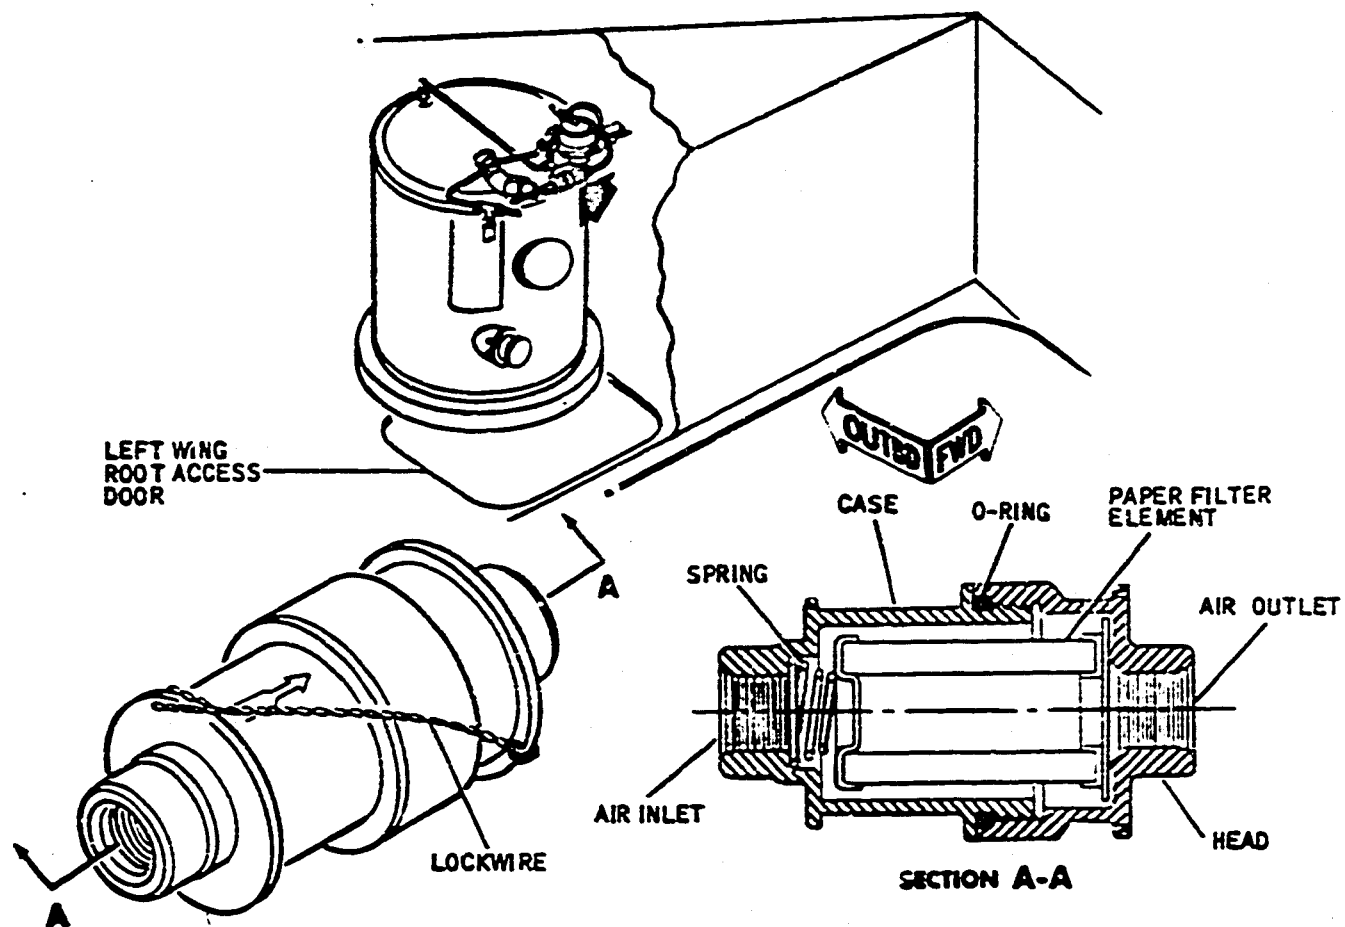

PAPER ELEMENT FILTER

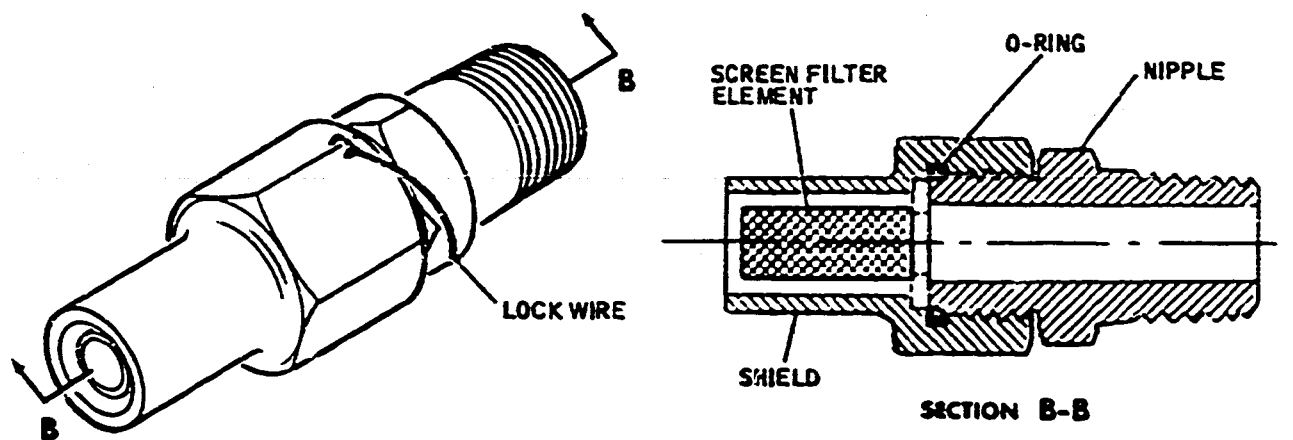

SCREEN FILTER

Regulator-Aspirator Air Filters -- Cutaway View  
 Figure 6

HA2-35

29-10-0  
 CODE 12  
 Page 15

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

**E. Hydraulic Reservoir Relief Valve (See Figure 7.)**

- (1) The reservoir relief valve and the air pressure aspirator-regulator keep the reservoir pressurized to normal operating range. The valve relieves excess air pressure which may build up in the reservoir through thermal expansion in the system. The valve has an inlet port and an outlet port and consists, internally, of an inlet port seat and a spring-loaded poppet.
- (2) The relief valve is installed in the overboard vent line downstream of the hydraulic reservoir air bleed valve. In the event that excess pressure builds up in the reservoir, the poppet will start to relieve at 45 (+5, -0) psi. Full flow of 10 gpm is attained at 80 psi maximum. The poppet reseats at 90 percent of the opening pressure.

**F. Hydraulic Reservoir Air Bleed Valve (See Figure 8.)**

- (1) The hydraulic reservoir air bleed valve and pressure gage are located on the aft side of the rear spar in the left main gear wheel well, inboard of the hydraulic reservoir air chamber. The bleed valve and gage are installed in the overboard vent line, between the reservoir air chamber and the reservoir relief valve.
- (2) The bleed valve is used to relieve the reservoir air pressure prior to disconnecting lines or components in the hydraulic system. The pressure gage provides a ready indication of the hydraulic reservoir air pressure and is used in conjunction with the bleed valve to indicate the air pressure status.
- (3) The air inflation valve is installed on the same fitting as the bleed valve and pressure gage. The air inflation valve is used to manually charge the reservoir with air or dry nitrogen.


**G. Hydraulic Reservoir Vacuum Breaker Check Valve (See Figure 9.)**

- (1) The hydraulic reservoir vacuum breaker check valve is installed on the regulator-aspirator mounting bracket, and connects to the tee fitting at the top of the reservoir. The valve is vented to ambient air. The purpose of this valve is to maintain atmospheric pressure in the reservoir, allowing hydraulic fluid to flow to the auxiliary hydraulic pump in the event of a failure of the reservoir pressurization system. The failure, or breakdown, of the pressurization system could cause a fluid starvation at the auxiliary hydraulic pump because of vacuum buildup in the reservoir.

**H. Hydraulic Reservoir Air Chamber**

- (1) The hydraulic reservoir air chamber is a small, cylindrical tank with a capacity of 700 cubic inches. It has two ports, an inlet port at the bottom of the chamber and an outlet port in one end of the chamber.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

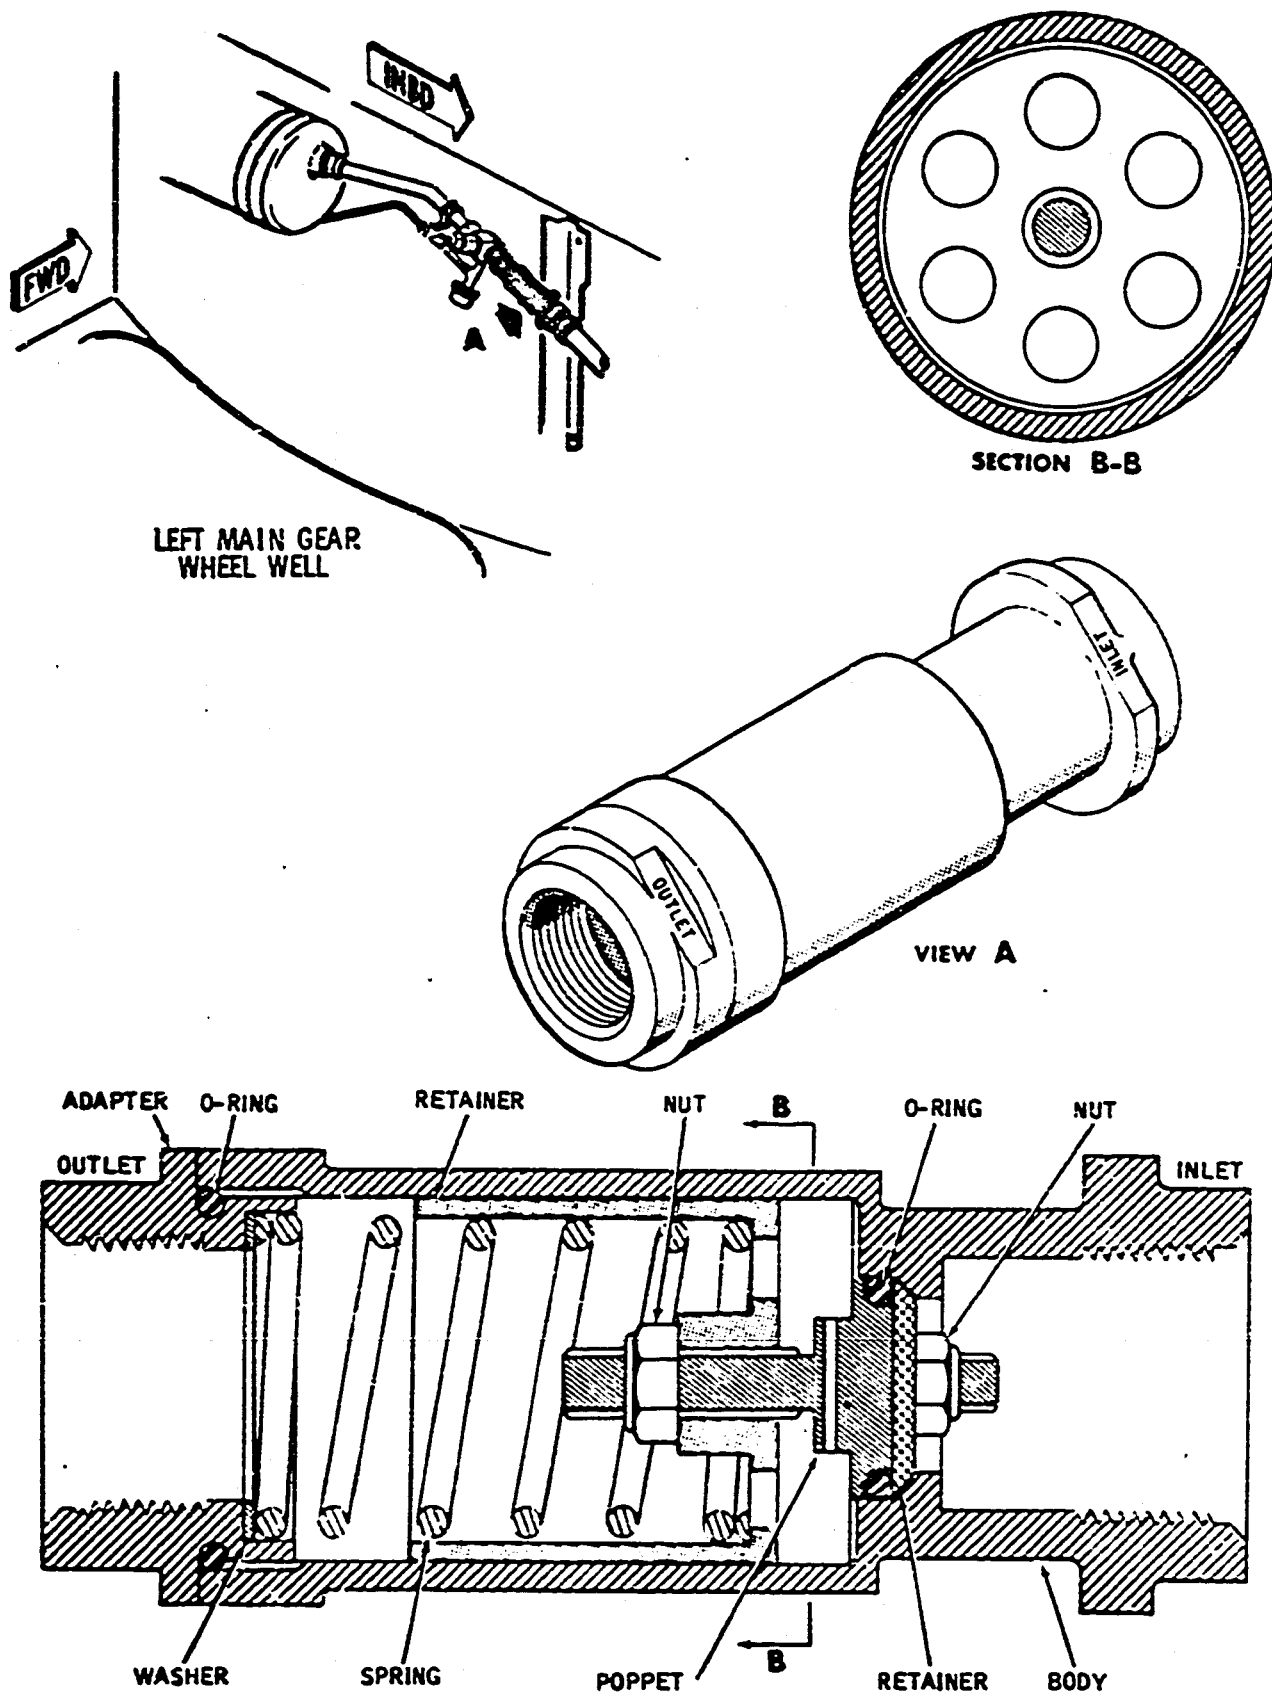

Hydraulic Reservoir Relief Valve  
 Figure 7


HA2-17

29-10-0  
 CODE 12  
 Page 17

Jun 15/67

Printed in U.S.A.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

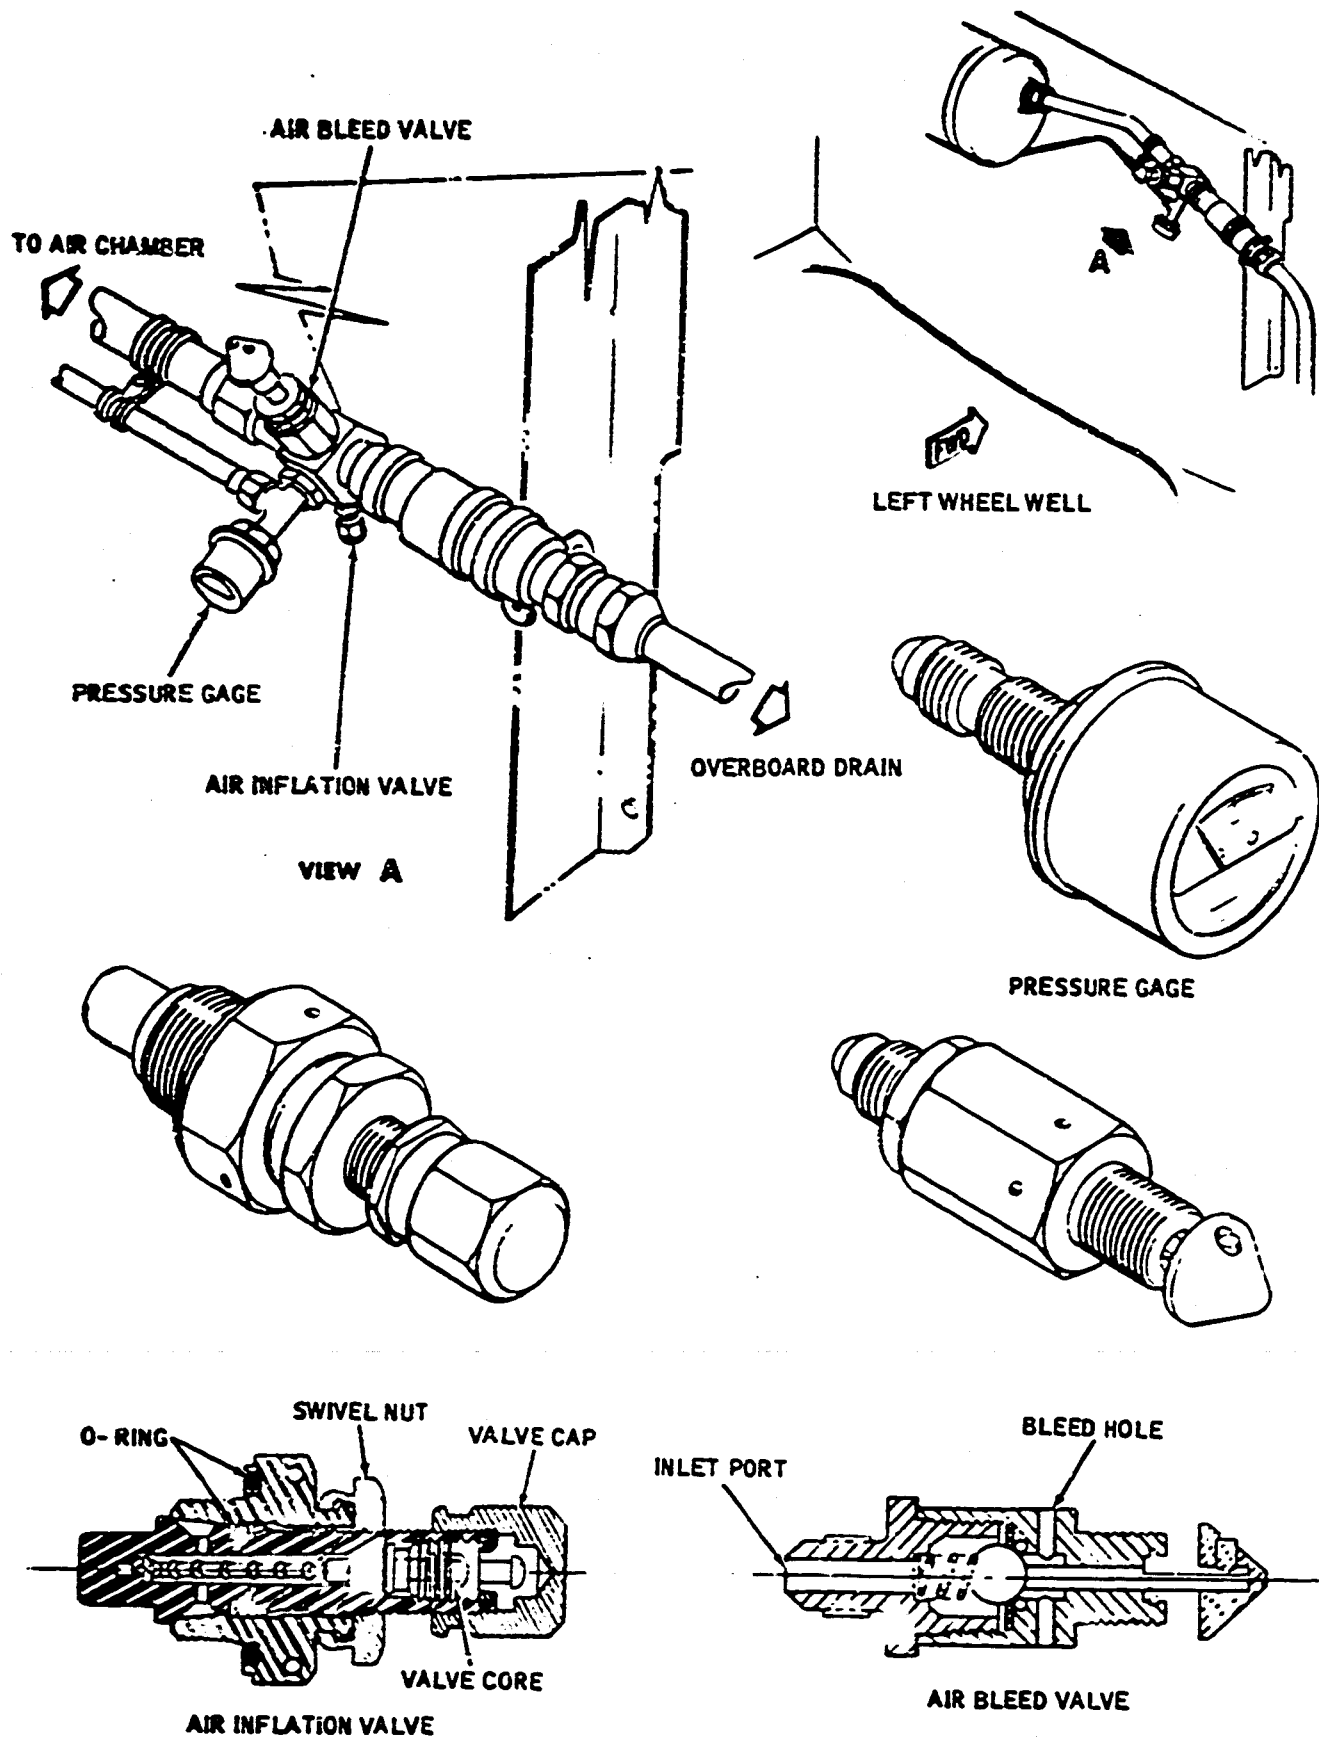

HA2-32

Reservoir Air Bleed Valve, Air Inflation  
 Valve, and Pressure Gage  
 Figure 8

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

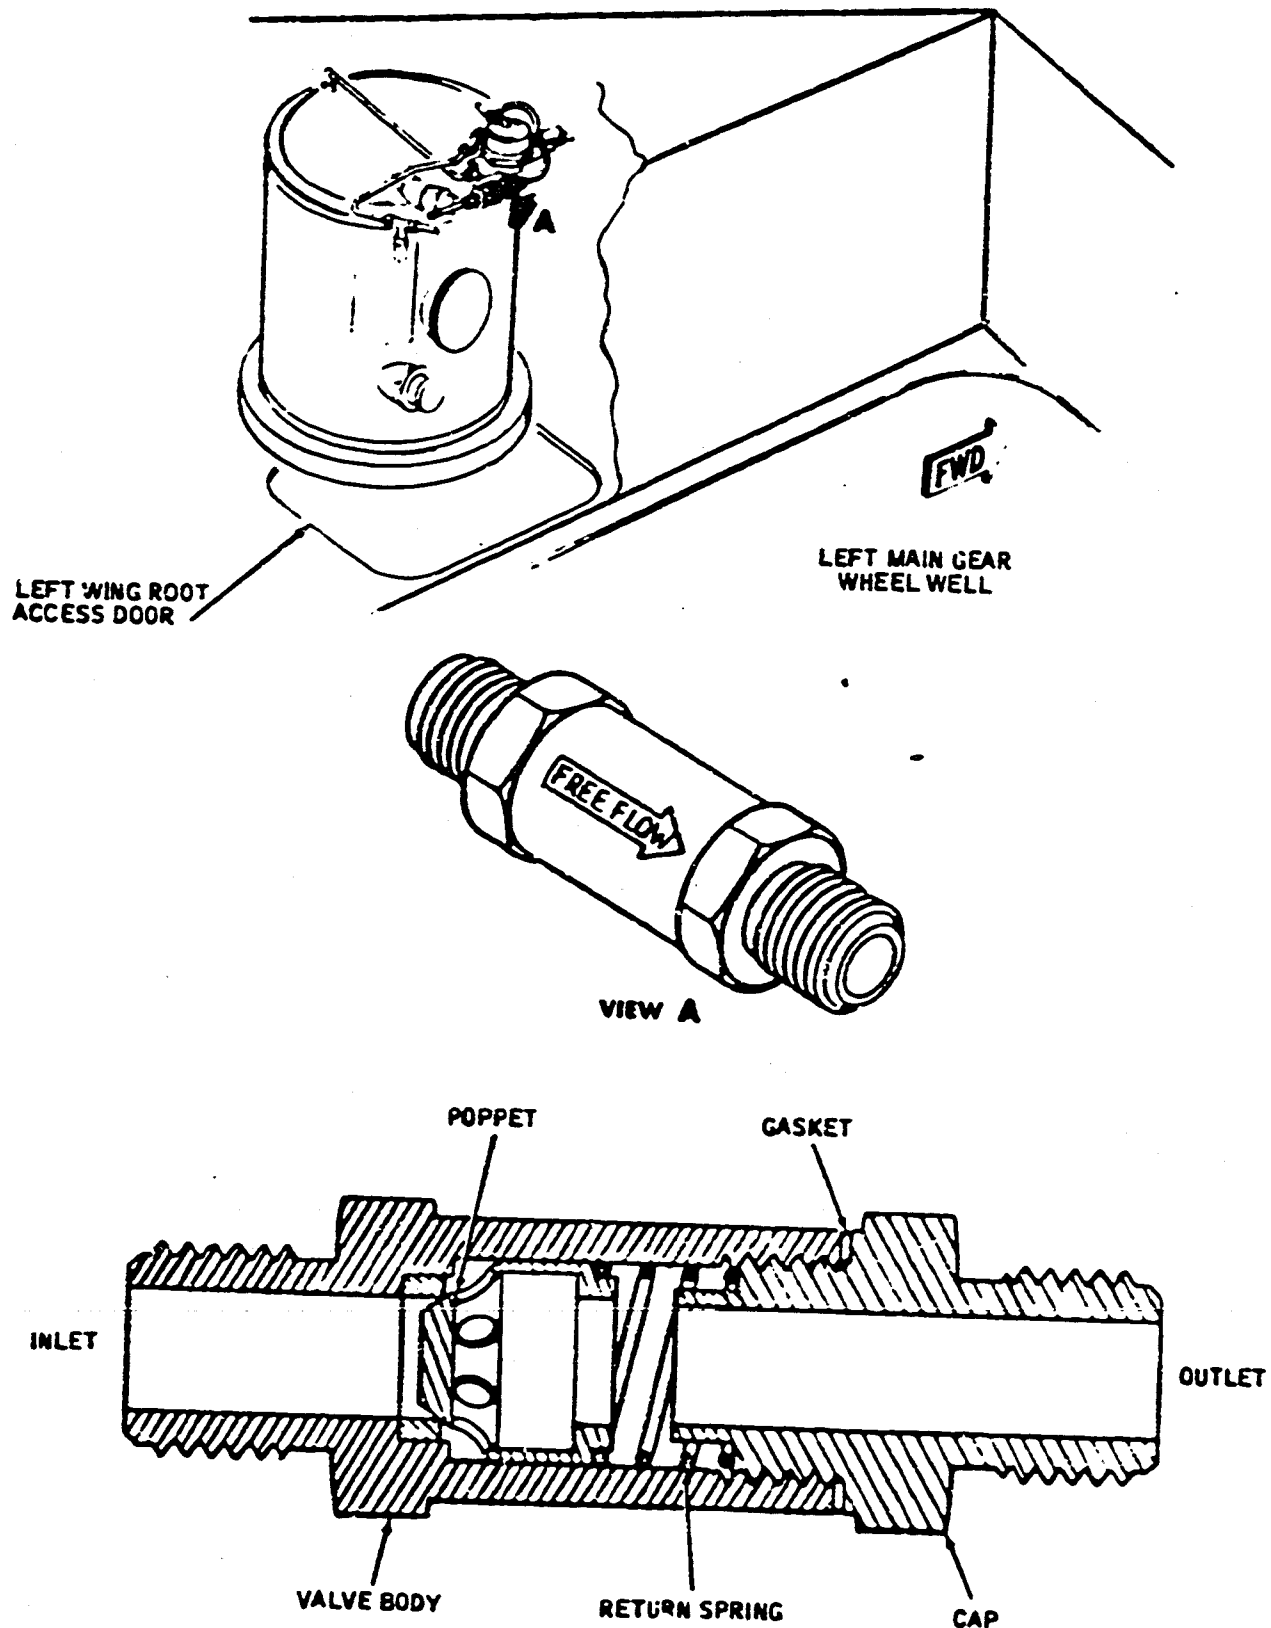

Hydraulic Reservoir Vacuum Breaker Check Valve  
 Figure 9

Jun 15/67

Printed in U.S.A.

HA2-33

29-10-0  
 CODE 12  
 Page 19

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

The inlet port mounting boss is fitted with a drain plug. The air chamber is installed on the aft side of the rear spar in the left main gear wheel well, inboard and above the hydraulic reservoir filler assembly. Access to the air chamber is through the left main gear inboard door.

- (2) The air chamber provides for greater fluid capacity in the hydraulic reservoir by providing air and foam space for the reservoir in a separate container. Air pressure in the chamber is maintained by the regulator-aspirator and the air relief valve. The air pressure in the chamber and reservoir can be relieved, when desired, by the air bleed valve located downstream of the chamber. The air chamber is mounted higher than the reservoir filler assembly, to prevent overfilling of the reservoir from reducing the available air space and to prevent fluid from being vented overboard through the reservoir relief valve.

**I. Hydraulic Reservoir Port B Return Check Valve (See Figure 10.)**


- (1) The reservoir port B return check valve is installed in port B of the reservoir to prevent reverse flow of hydraulic fluid from the reservoir to the return line. The check valve is located on the reservoir in the left wing root and is accessible through the left wing root access door.
- (2) Externally and internally, the port B check valve is a standard-type check valve with a 1500-psi rating. A nominal pressure of approximately 8 psi unseats the poppet, permitting fluid to flow through the valve. When the reservoir pressure exceeds the return line pressure, the poppet will seat and reverse fluid flow will be prevented.

**J. Engine Hydraulic Fire Shutoff Valve (See Figures 11 and 12.)**


- (1) The engine hydraulic fire shutoff valve is a gate-type, mechanically controlled valve, installed in the supply line of each engine-driven hydraulic pump. The engine hydraulic fire shutoff valve is actuated from the flight compartment to prevent the flow of hydraulic fluid into the engine section.
- (2) The engine hydraulic fire shutoff valve is mounted on a 2-piece channel bracket which is installed inside the wing leading edge, aft of the firewall of each inboard pylon. Access to the valve is through the access door located on the lower side of the wing leading edge, outboard of either the left or right inboard pylon. Each valve is located approximately 30 inches inboard of the access door.
- (3) Internally, the valve consists of a valve arm, valve arm link, cam plate, and slide blade. The valve arm link attaches to the valve arm and is allowed to swivel through an arc in relation to the valve arm. The link has a stop that will contact the arm when the two have traveled to the valve closed, full overtravel position. In the full open pretravel position, the link contacts the arm stop.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

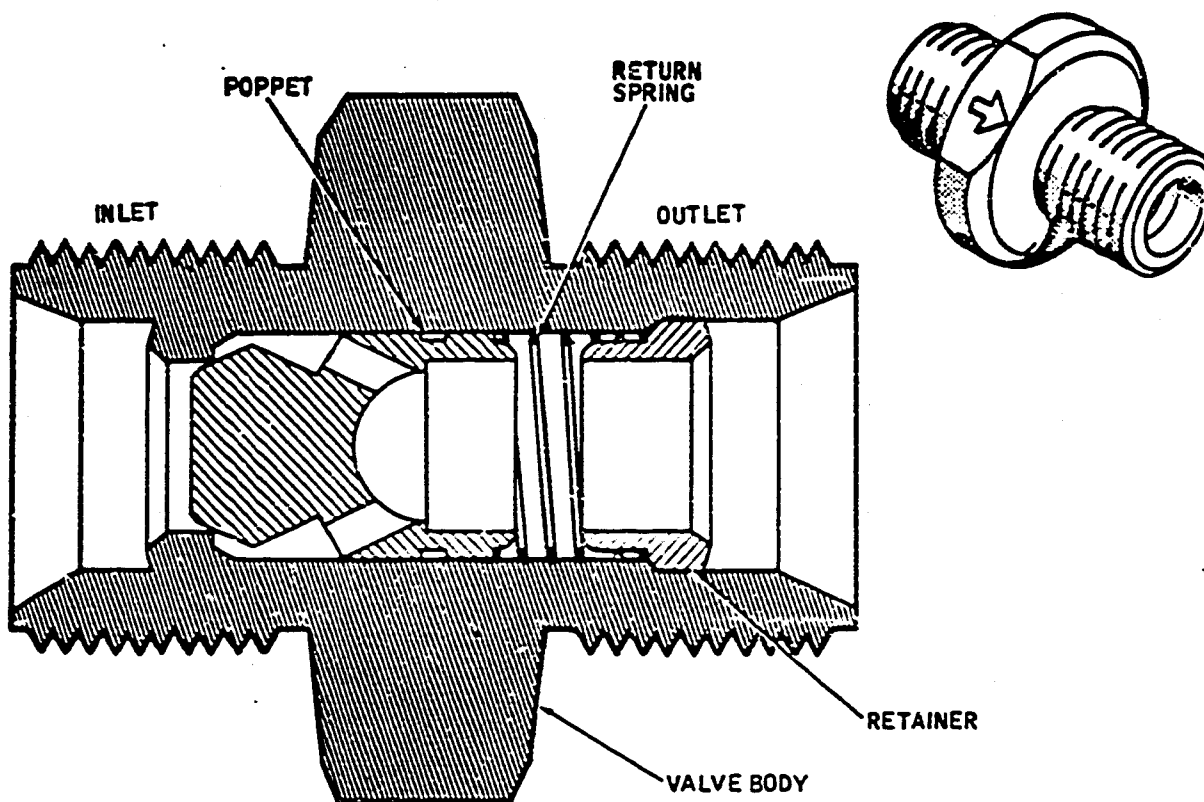

MINIATURE CHECK VALVE

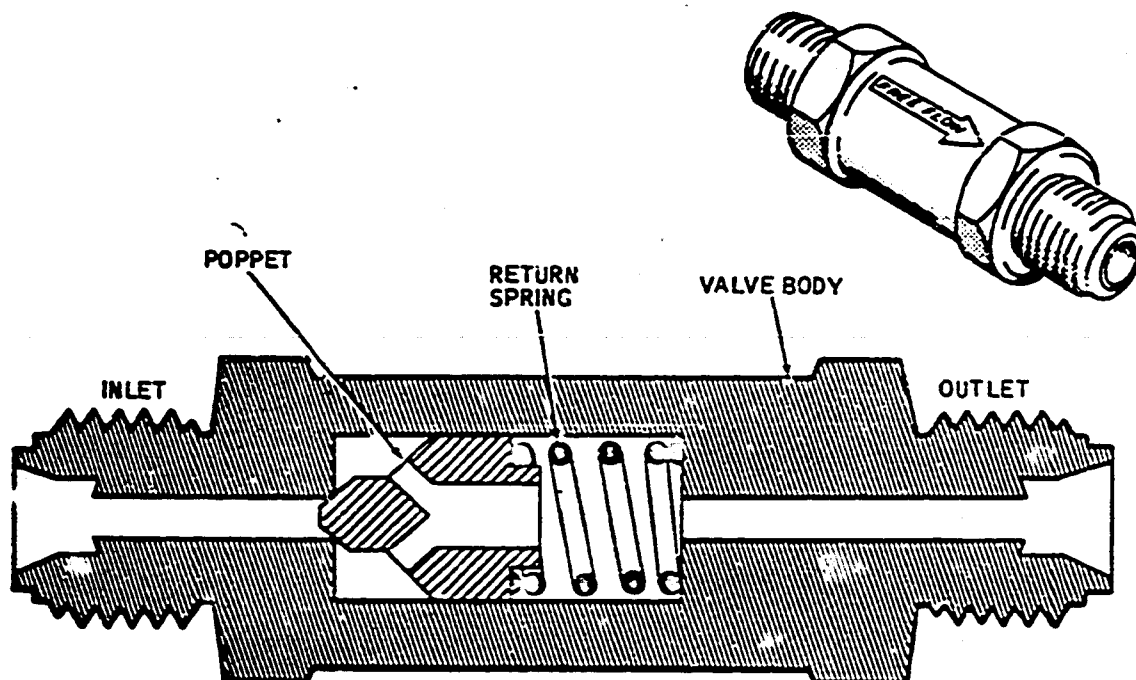

STANDARD CHECK VALVE

Hydraulic Check Valves -- Typical  
 Figure 10


HA2-18A

29-10-0  
 CODE 12  
 Page 21

Oct 1/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

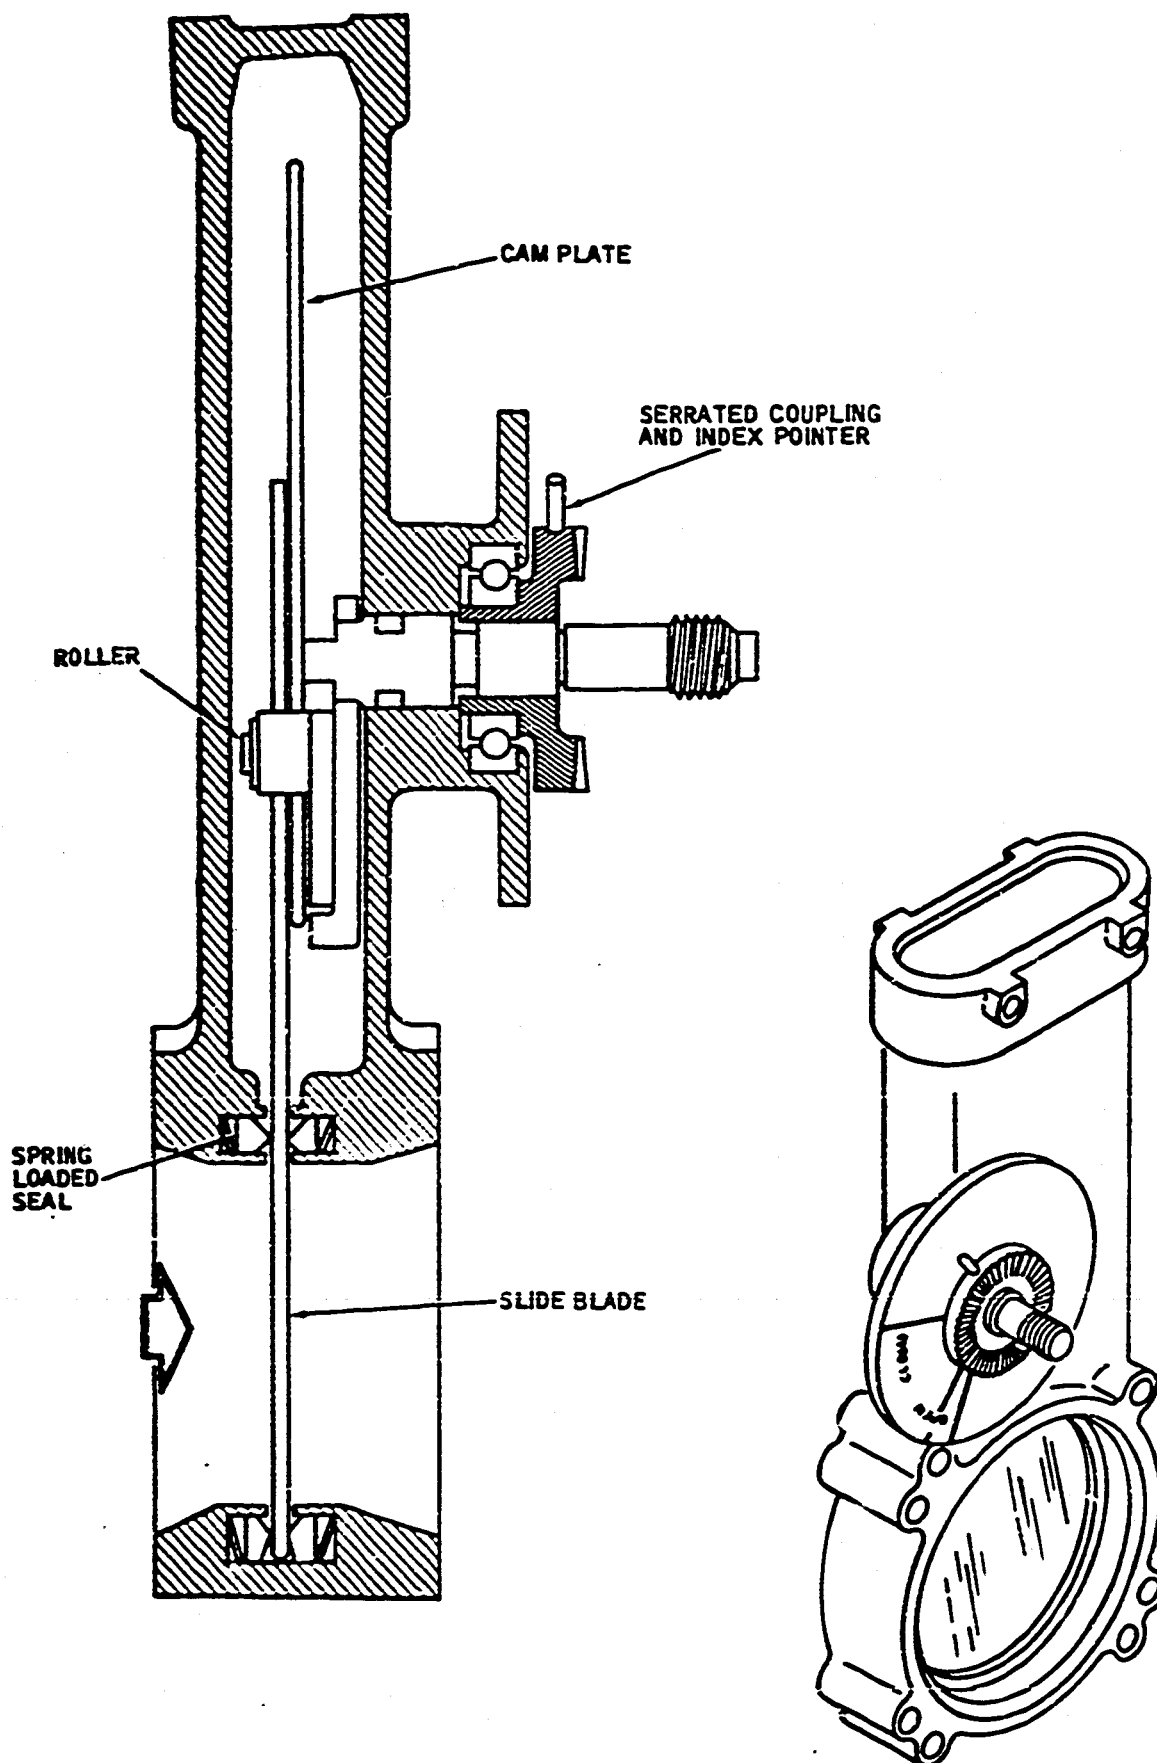

Engine Hydraulic Fire Shutoff Valve -- Schematic  
Figure 11


29-10-0  
CODE 12  
Page 22

Printed in U.S.A.


HA2-2209

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

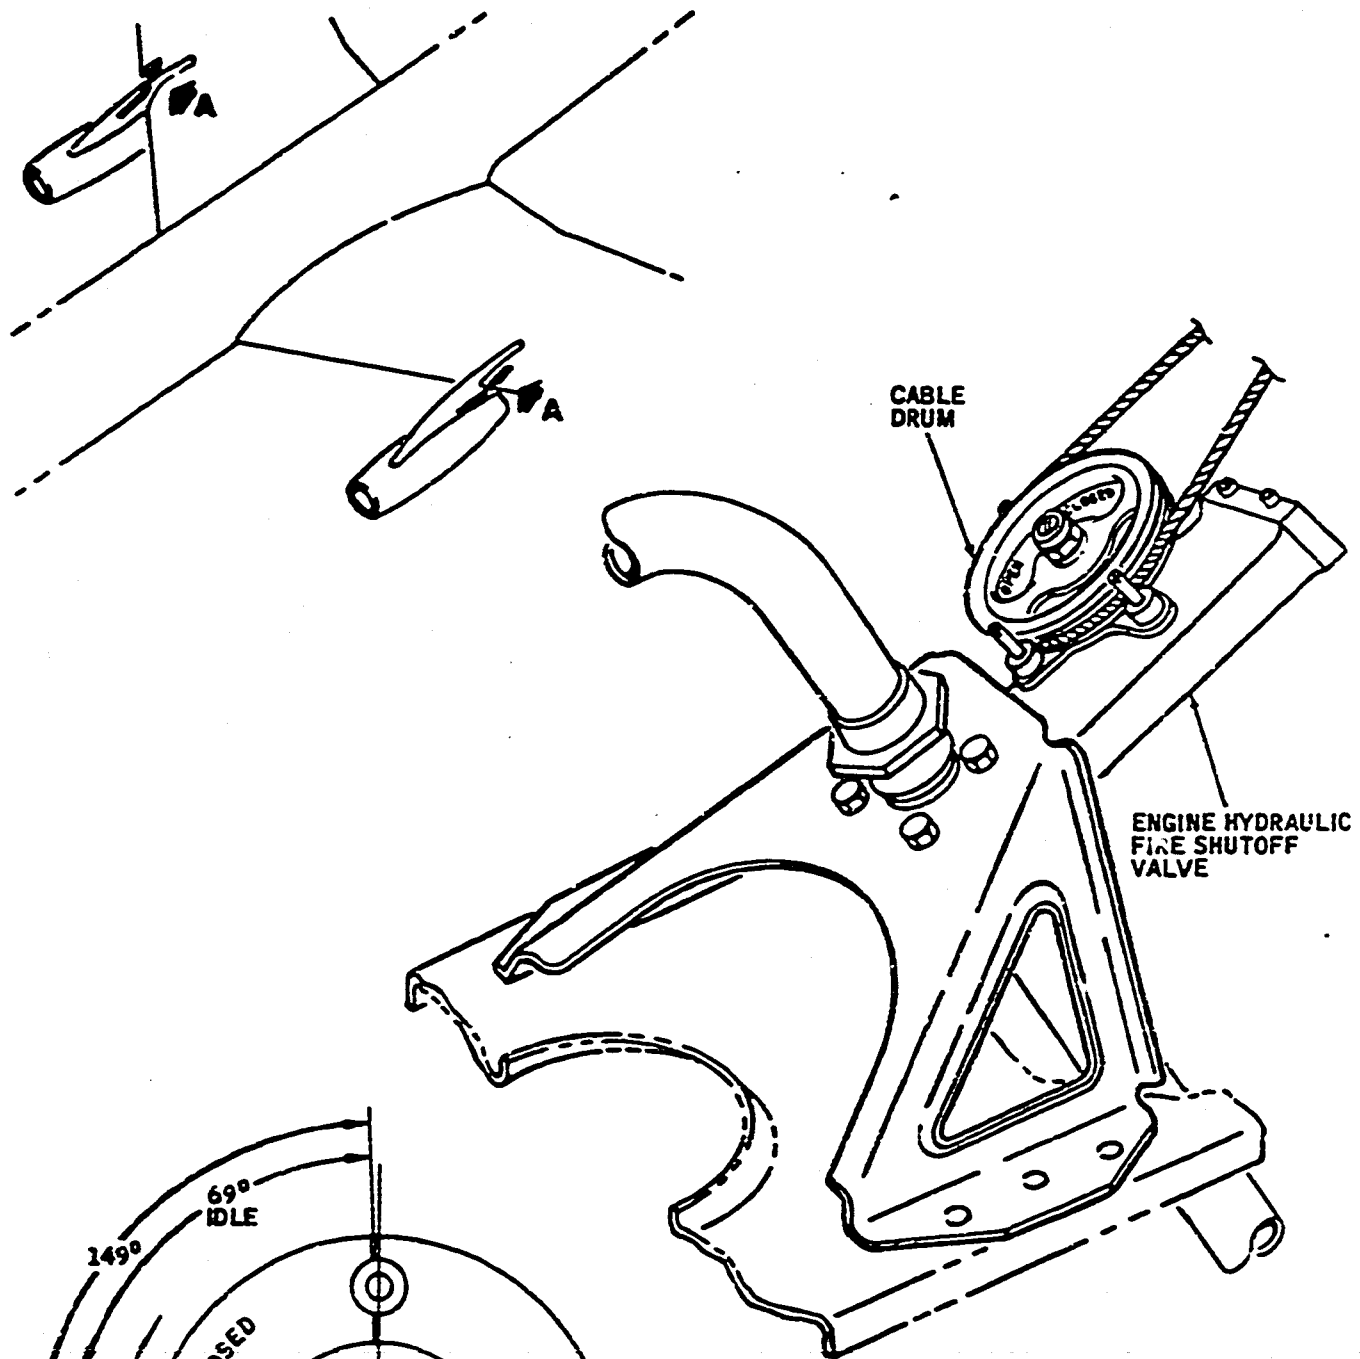

VIEW A

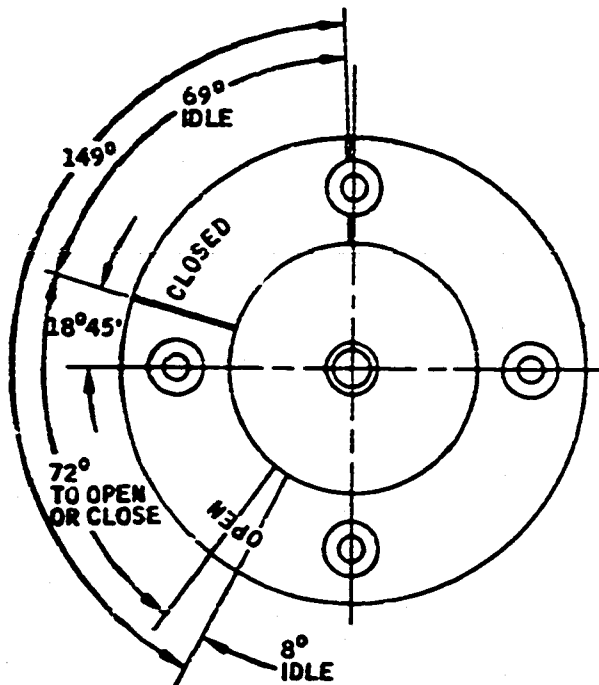

VALVE POSITION DIAGRAM

Engine Hydraulic Fire Shutoff Valve  
 Figure 12

HA2-2978

29-10-0  
 CODE 12  
 Page 23

Jun 15/67

Printed in U.S.A.




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) A roller attached to the end of the link rides in, and extends through, a J-shaped slot in the cam plate. The rotation of the valve arm causes the link roller to follow the cam slot, allowing the arm and link to move through independent arcs.
- (5) The slide blade (gate of the valve) is slotted near the one end and also receives the link roller extending through the cam slot. The slide blade is positioned parallel to the cam plate and is guided by two grooves in the housing. This will allow the blade to open or close through porting of the valve by the action of the arm and link. The cam plate is pinned to the valve shaft, securing it rigidly in two positioning grooves in the housing. A pin-indicator is provided to relate valve position to a reference plate placarded open and closed.
- (6) The engine hydraulic fire shutoff valves are cable actuated, by the fire control handles, located on the overhead switch panel in the flight compartment. When the fire control handle for either inboard engine is moved, the cable system rotates the drum which is attached to the corresponding shutoff valve shaft. This action extends the valve blade into the fluid passage to block the flow of fluid. The valve operates from open to close by clockwise rotation of the cable drum. The valve gage will idle during the first 8 degrees of rotation of the cable drum, and then will close in the next 72 degrees. The cable drum will continue to rotate the shaft for an additional 69 degrees after the gate valve is closed, locking it over-center. Total travel of the cable drum is 149 degrees.

K. Engine-Driven Hydraulic Pump (See Figure 13.)

- (1) A variable-displacement, pressure-compensated, engine-driven hydraulic pump is installed on each inboard engine. The pump incorporates a solenoid bypass feature for reducing the output of the pump. The bypass valves are controlled by two engine hydraulic pump control switches in the flight compartment. The switch for the hydraulic pump on engine No. 2 is placarded left, on and bypass. The switch for the hydraulic pump on engine No. 3 is placarded right, on and bypass. When either of the two engine hydraulic pump control switches is placed in the bypass position, the bypass valve solenoid for that hydraulic pump is energized and the pump pressure decreases to 300 ( $\pm 100$ ) psi. When either switch is in the on position, the control circuit to the corresponding bypass valve is open and the hydraulic pump operates normally in the pressure range of 2850 to 3050 psi. The pump provides a continuous, non-pulsating flow of hydraulic fluid, under pressure, to the hydraulic manifolds for distribution throughout the hydraulic system. Each of the engine-driven pumps is located on the accessory drive pad of the inboard engines. These pumps are accessible through the access doors on the right side of the nacelles and removal of the engine bypass duct.
- (2) Three case drain ports are provided: two are on the yoke assembly housing, and the third is on the casing for the pressure control valve, adjacent to the inlet port fitting. The case drain port on top of the

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

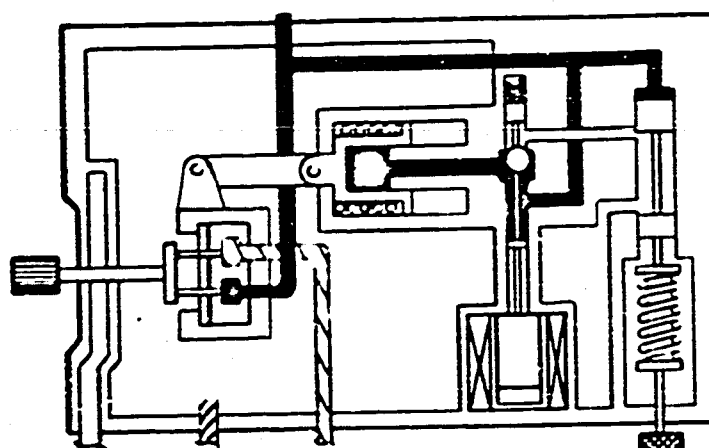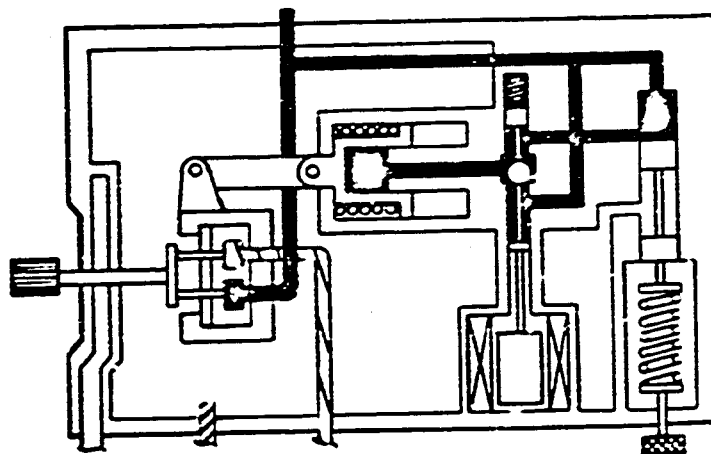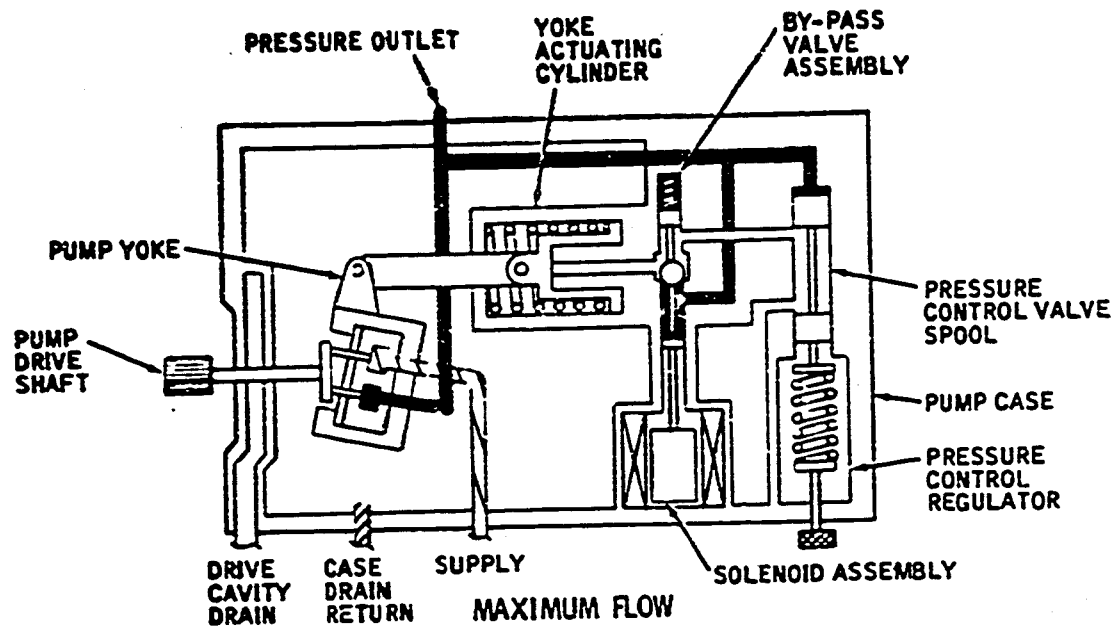

BYPASS SOLENOID ENERGIZED  
 (300 PSI PRESSURE)

■ PRESSURE  
 ▨ CASE DRAIN  
 ▩ SUPPLY  
 □ DRIVE CAVITY DRAIN

HA2-837

Engine-Driven Hydraulic Pump Pressure-Flow -- Schematic  
 Figure 13

29-10-0  
 CODE 12  
 Page 25

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

yoke assembly housing is used as the case drain connection to assure that the pump housing is full of fluid at all times. This drain connection is ported back to the low-pressure return port of the reservoir. The inlet port fitting is on top of the pump housing and the outlet port fitting is opposite to it on the bottom of the housing.

- (3) The yoke control piston casing is an integral part of the pump case. Four self-locking nuts are used to hold the piston casing end-plate in position. The bypass valve assembly, consisting of the valve body and a solenoid, is mounted externally on the pump case, under the yoke control piston casing. This solenoid valve is provided with an electrical connector. A pressure control regulator is installed on the bypass valve body by means of four bolts. This regulator is cylindrical and is provided with an external adjustment screw. A lock screw is used to retain the adjusting screw after the adjustment has been made.
- (4) Hydraulic fluid enters the pump through an inlet port. Passages in the yoke carry the fluid to the valve plate, which ports the fluid to the cylinder block. The nine pistons in the cylinder block are actuated by the rotating driven shaft, thereby pressurizing the fluid. From the cylinder block, the fluid is routed to the outlet port of the yoke and then to the pump pressure lines. The pressure control regulator is actuated by pump output pressure that is bled to the regulator. The regulator meters the pressure to the yoke control piston, which positions the yoke.
- (5) The maximum pump pressure is determined by the adjustment of the pressure control regulator. The pressure control regulator allows maximum output flow (22.5 gpm at 3500 rpm) up to 2850 psi system pressure. When this pressure is reached, the yoke assembly starts to move toward the zero flow position.
- (6) Pressure continues to rise until the displacement is reduced from maximum flow to zero flow and 3000 psi is reached. The pump pressure stabilizes in accordance with system demand.

L. Engine-Driven Hydraulic Pump Check Valves (See Figure 10.)

- (1) Two check valves, rated at 3000 psi, are installed in the lines from each engine-driven hydraulic pump. One check valve is installed in the pressure line and the other is in the case drain line. The check valves in the pump pressure lines prevent reverse flow of hydraulic fluid through the pump, when the pump is inoperative or when external hydraulic pressure is supplied to the system. Access to the valves can be gained through an access door in the forward right apron of each inboard pylon. The valves are mounted on the exterior wall of the inlet box by means of the bulkhead fittings and retaining nuts.
- (2) Normal operating pressure will unseat the poppet, and fluid will flow through the valve. When pressure downstream of the valve exceeds pressure from the pump, the pressure, with the aid of the return spring,

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

will seat the poppet. This prevents reverse flow of hydraulic fluid through the pumps.

**M. Engine-Driven Hydraulic Pump Case Drain Filter (See Figure 14.)**

- (1) A line-type, micron filter, for use in a low-pressure hydraulic system, is installed in the engine-driven hydraulic pump case drain return line between the pump flow check valve and the hydraulic system reservoir. The case drain filter is installed on the aft surface of the rear spar opposite the leading edge of the inboard flap assembly. One filter is used for each engine-driven pump. Access is gained to the filter by lowering the flaps. A second check valve is installed adjacent to the filter in the downstream side of the case drain return line.
- (2) Externally, the filter is approximately 5 inches high and 2 inches wide, with ports marked inlet and outlet. The bowl is cylindrical in shape, with hex-shaped wrench flats at the lower end. A self-sealing, magnetic drain plug is installed in the bottom end of the filter bowl. The filter element is made of chemically treated paper.

**N. Dual Filter and Relief Valve (See Figure 15.)**



- (1) The hydraulic power system dual filter and relief valve consists of two filters and two relief valves installed in the same body. The unit filters the hydraulic fluid from the two engine-driven hydraulic pumps, and the pressure relief valves assure that excessive pressures do not build up in the pressure line from the pumps. The unit is located in the left main gear wheel well on the lower portion of the rear spar, approximately 1 foot outboard of the centerline shear web.
- (2) The unit consists of a casting with a flange-mounted pressure inlet port on each end. Two pressure outlets are located on the top of the casting. One outlet, centrally located, is the main pressure outlet to the system selector valve. The other, located to the left of the selector valve port, is the pressure outlet to the air pressure regulator-aspirator. The return outlet port for the relief valve portion of the unit is located on the center of the aft face of the body, canted upward. The nose gear return line is connected to a check valve installed in a return line port, located between the two filter bowls.
- (3) The pressure relief valves are located behind the pressure inlet ports and are connected to the return outlet port of the unit. The inlet from the nose gear return line is routed through the casting to the return outlet port.
- (4) If either of the filter elements becomes clogged, pressure above 3300 psi at the inlet port will unseat the poppet. Pressure above 3500 psi will allow full flow of 22.5 gpm to flow to the return port of the unit and back to the reservoir. The relief valves will reseal at approximately 3000 psi.

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 12  
Page 27

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

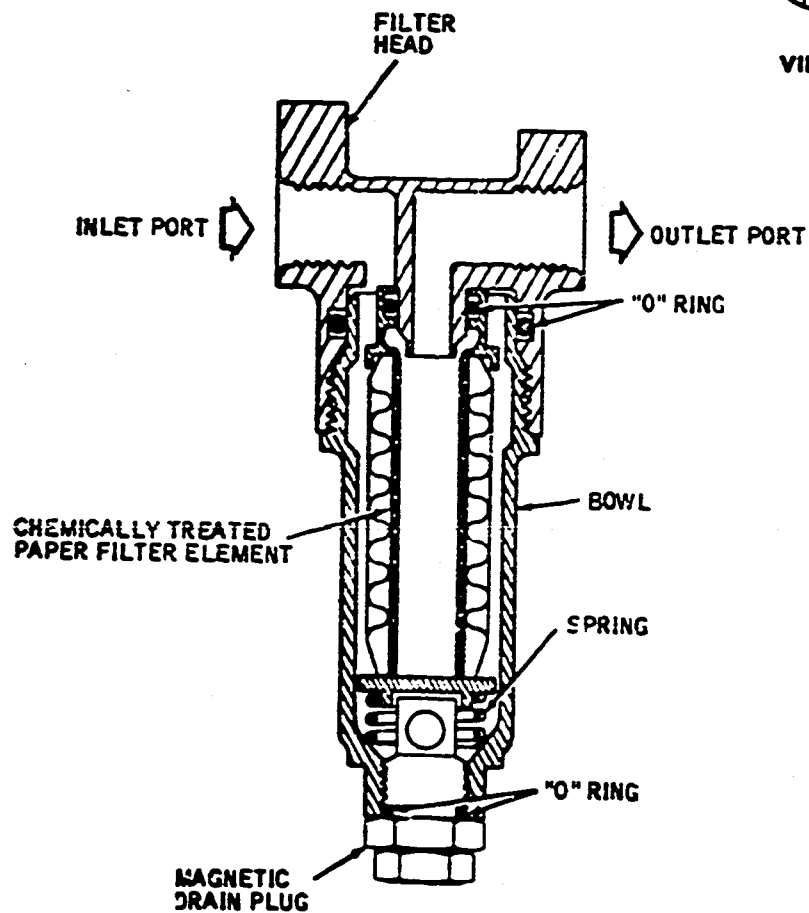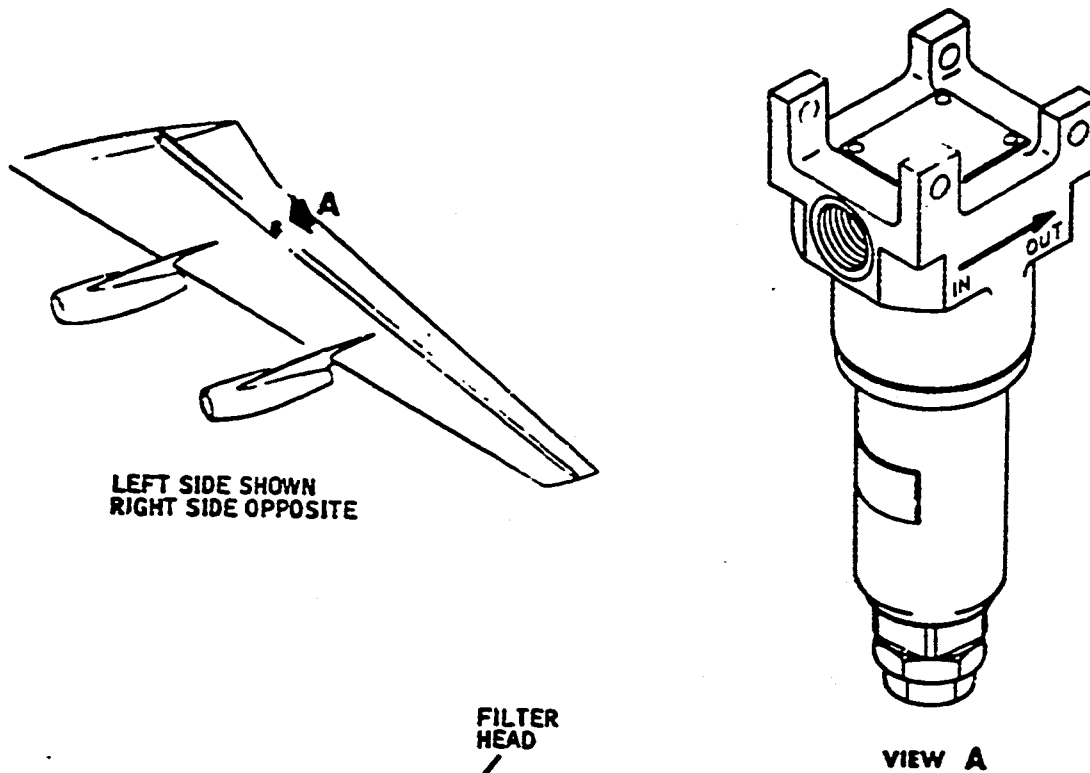


HA2-31

Engine Driven Hydraulic Pump Case Drain Filter -- Cutaway View  
Figure 14



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

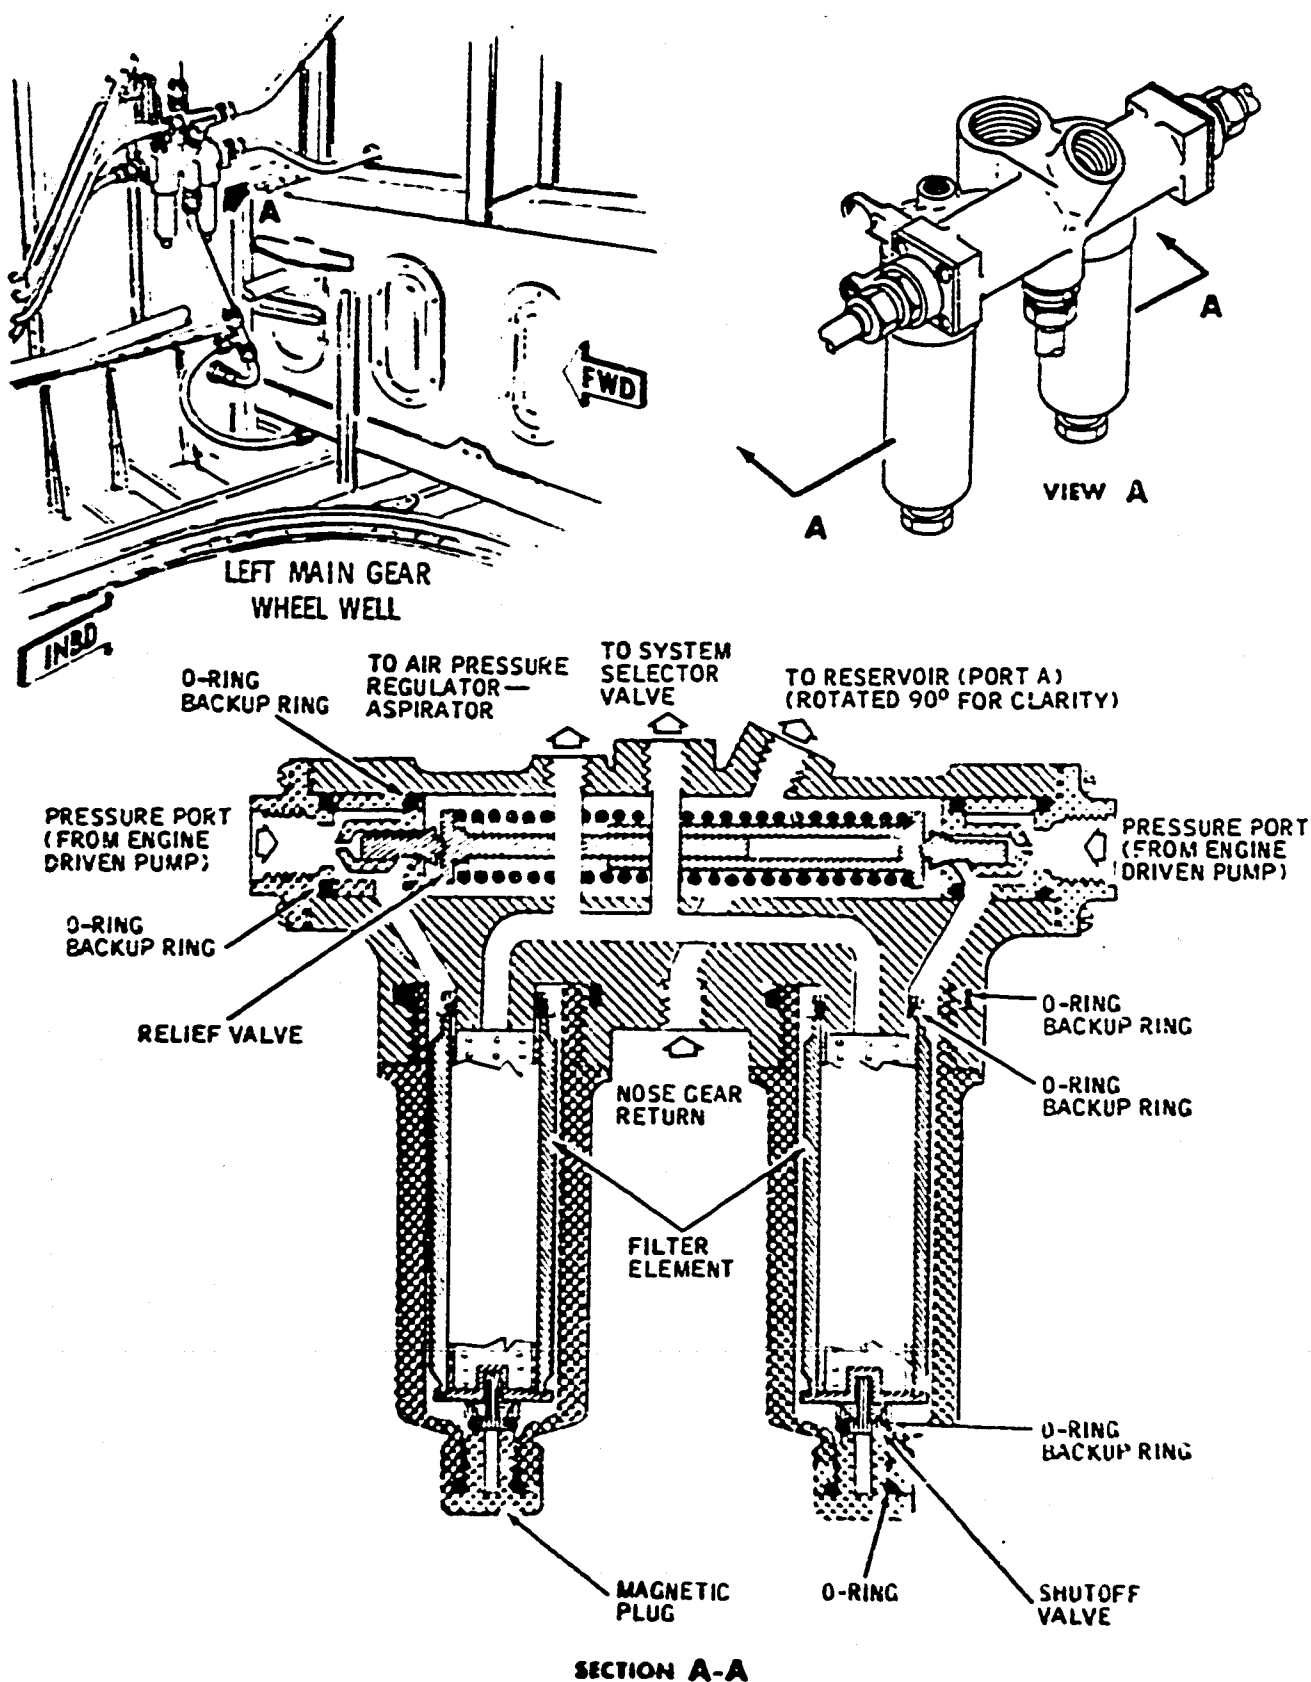

Dual-Filter and Relief Valve -- Cutaway Valve  
 Figure 15

HA2-20

29-10-0  
 CODE 12  
 Page 29

Jun 15/67

Printed in U S A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) A check valve is installed in the system selector valve port to prevent reverse flow of pressure through the filter during auxiliary hydraulic pump operation.


O. System Selector Valve (See Figures 16 and 17.)

- (1) The system selector valve is a 3-position valve which permits directional control of fluid under pressure. The valve is installed on the left hydraulic power manifold and is accessible through the left main gear inboard door.
- (2) The selector valve pressure-to-system port and the return port are directly ported to the manifold. The engine pump pressure enters the valve through a port on the large end of the valve, and the auxiliary pump inlet and alternate ports are located at the top, toward the aft end of the valve. The valve control crank is attached to a push-pull rod and a cable sector.
- (3) Operation of the system selector valve is controlled by a lever located on the right side of the system engineer's control pedestal. When the control lever is moved to the selected position, the cable system, through the sector and crank, operates the valve positioning lever to drive the slide spool assembly to the selected position. When the control lever is placed in the general system (normal) position, the selector valve is actuated, causing hydraulic fluid to enter the valve through the system pressure port. The fluid is then directed into the manifold through the pressure-to-system port. In the general system (normal) position, fluid from the auxiliary pressure port is also routed to the pressure-to-system port. In the bypass/general system position, the selector valve ports engine pump pressure into the manifold through the return port. In this position, the auxiliary pump pressure is ported to the general system. In the general system/main gear down and flaps position, pump pressure is routed through the alternate port, at the top of the valve, for alternate operation of the flaps and the landing gear downlock cylinders. Internal leakage provides lubrication for the moving parts of the valve.

P. Left Hydraulic Power Manifold (See Figure 18.)

- (1) The left hydraulic power manifold distributes fluid pressure from the hydraulic pump (any one of the three pumps), through control valves to the various airplane hydraulic subsystems. The left power manifold is located overhead in the left wheel well. Access to the left manifold is through the left main gear inboard door.
- (2) One valve-mounting pad is provided on the top of the manifold for the system selector valve. Four ports are provided on the manifold for connection of hydraulic pressure and return lines. Three of these ports are pressure outlet ports; one, located on the aft face of the manifold and one located on the bottom of the manifold port fluid to the flight controls. The third pressure outlet port, located on the

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

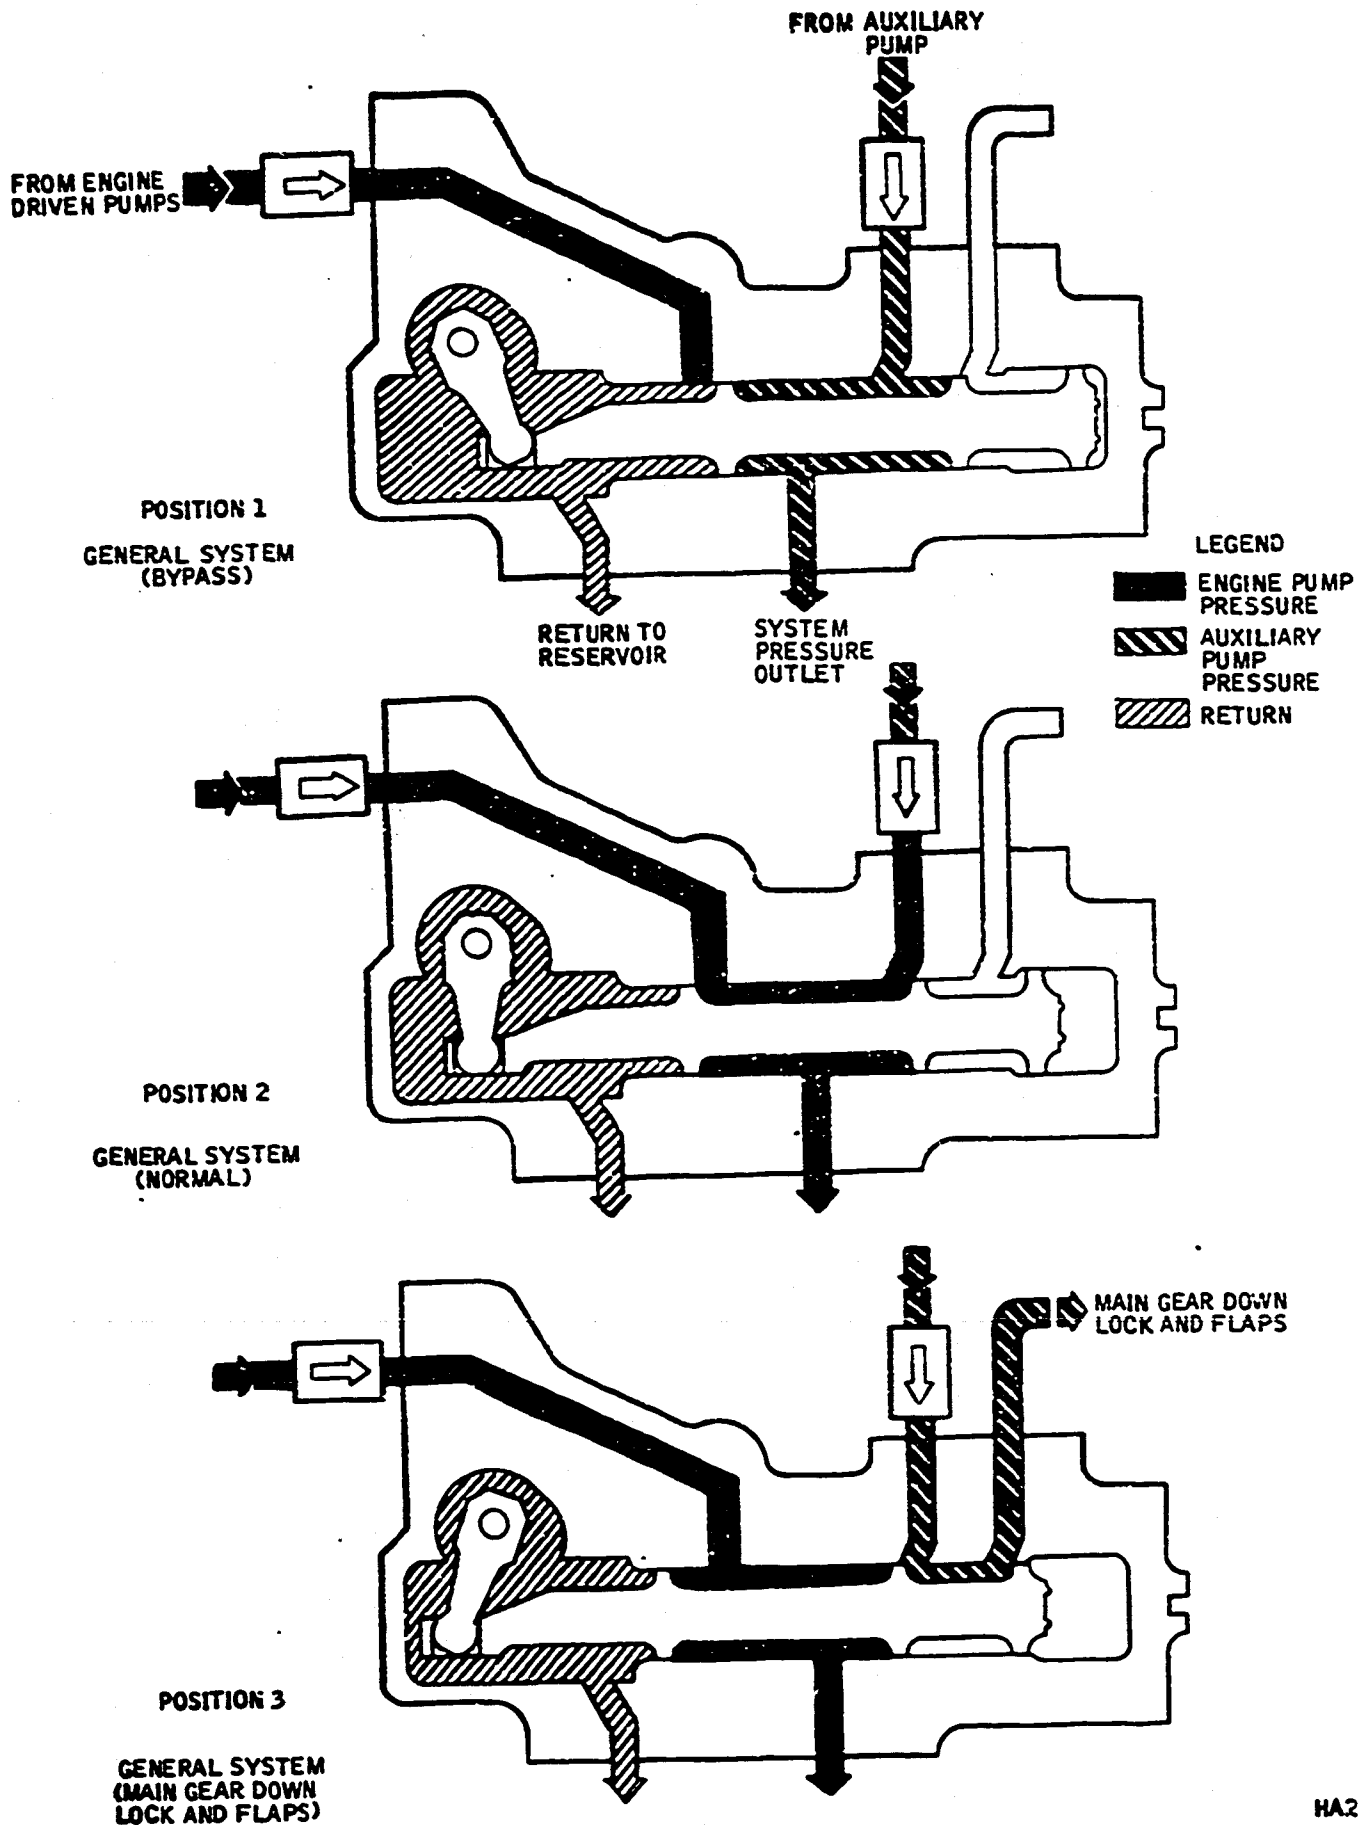

System Selector Valve -- Schematic  
 Figure 16


HA2-26

29-10-0  
 CODE 12  
 Page 31

Jun 15/67



Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

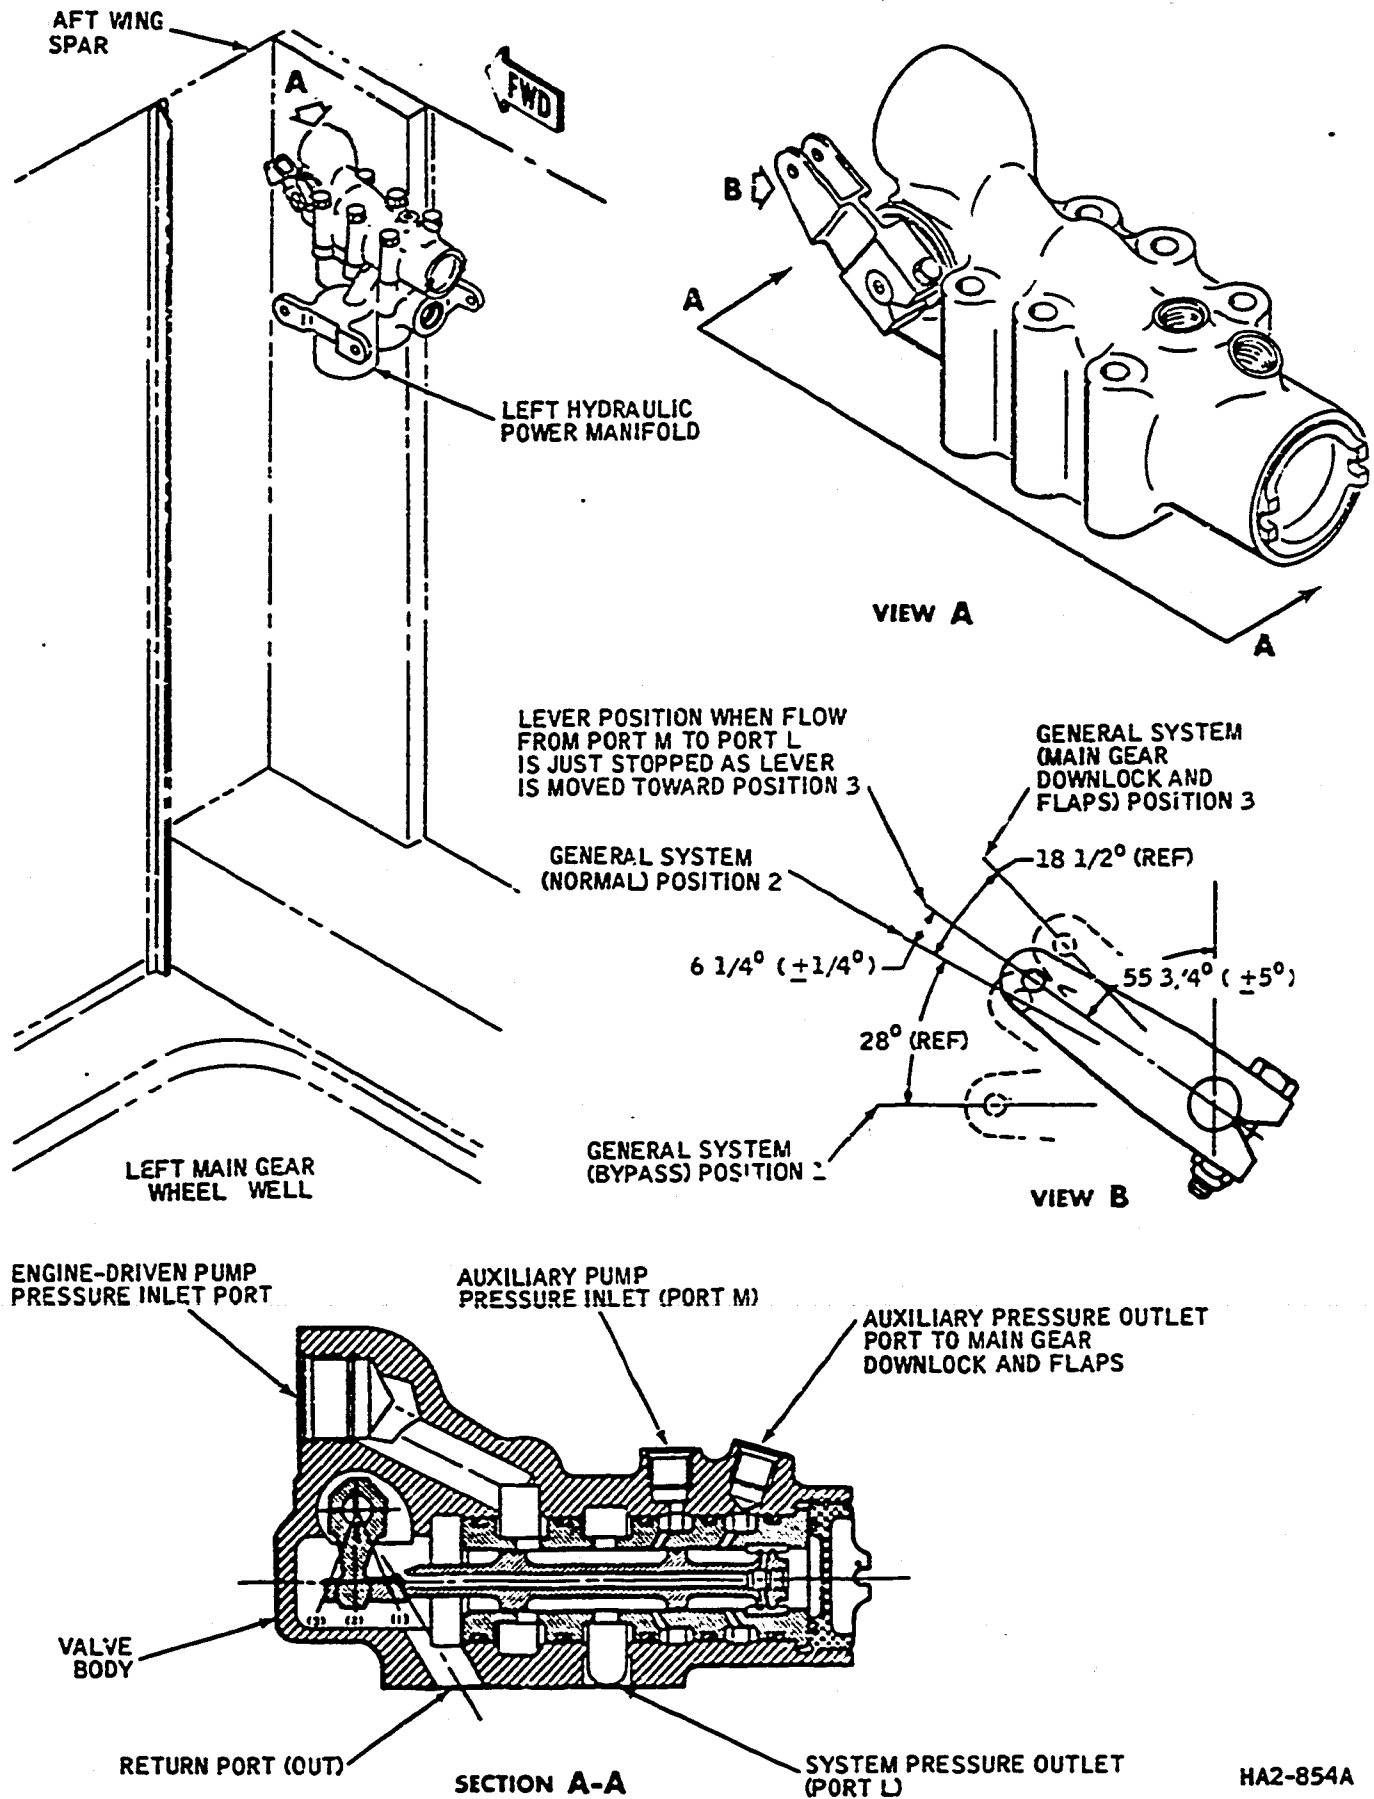

System Selector Valve -- Cutaway View  
 Figure 17

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

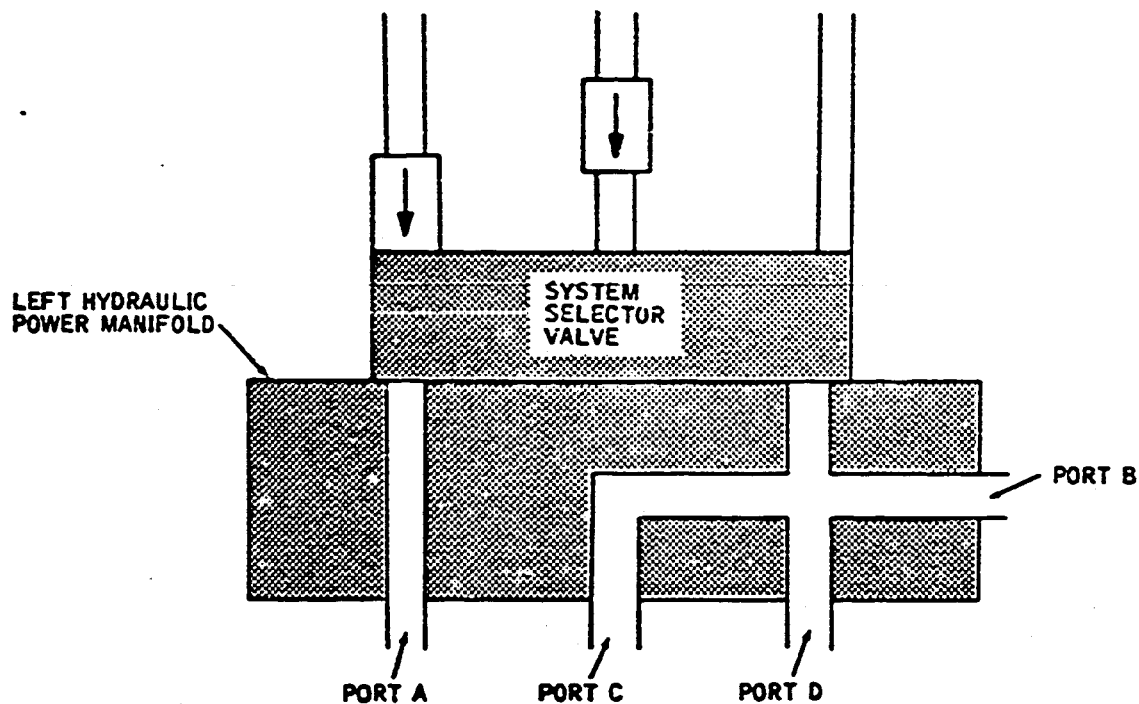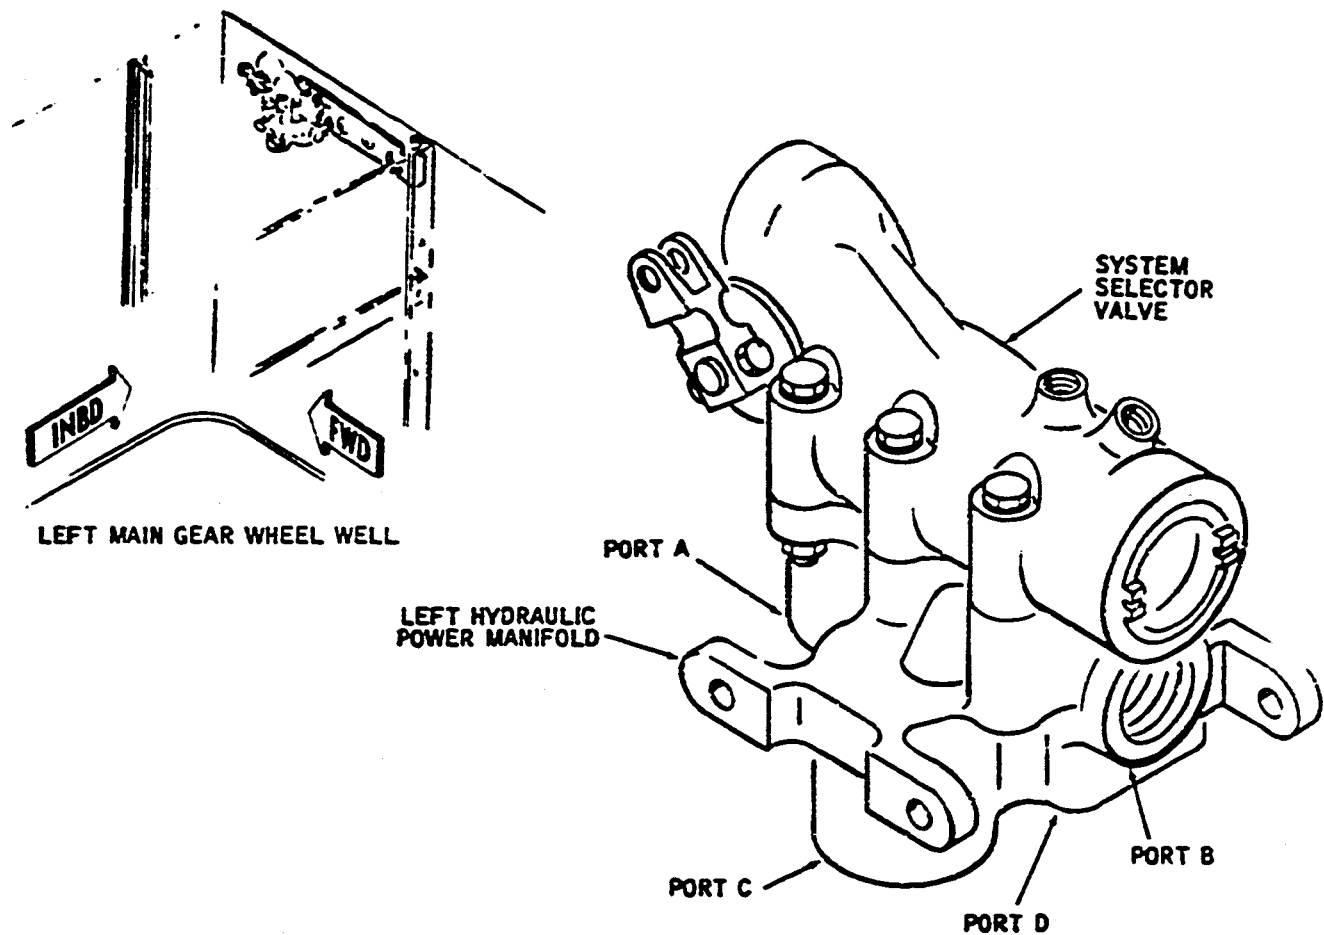

Left Hydraulic Power Manifold -- Schematic  
 Figure 18

HA2-855

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 12  
 Page 33

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


bottom of the manifold, ports fluid directly to the priority valve, which in turn, ports fluid to the nose gear and to the right power manifold. The fourth, a return port, located immediately forward of the pressure line port on the bottom of the manifold, is connected by a line to a return port of the reservoir.

Q. Right Hydraulic Power Manifold (See Figure 19.)


- (1) The right hydraulic power manifold distributes fluid pressure from the hydraulic pumps (engine-driven or auxiliary, or any combination of these three pumps), through the control valves to the various hydraulic sub-systems. The right hydraulic power manifold is located overhead in the right wheel well. The manifold is held in place with braces and is accessible through the right main gear inboard door.
- (2) The manifold contains passages for pressure and return fluid distribution, four check valves, ports for pressure and return lines, and mounting pads for the various control valves.
- (3) The right manifold receives fluid pressure from the left manifold. Pressure is ported through check valves to the wing flap control valve, to the slot control valve, to the main gear control valve, to the brake control valve, to the brake pressure transmitter, and to the brake accumulators.
- (4) Auxiliary hydraulic pressure is ported from the alternate port of the system selector control valve into port K in the right manifold. Port K is located inboard of the spoiler control valve. From port K, auxiliary hydraulic pressure is ported through a check valve to the downstream side of the wing flap control valve check valve and into the wing flap control valve for alternate operation of the wing flaps.
- (5) The return passage from the wing flap control valve ports fluid to return port A. The brake control valve return passage ports fluid into return line B through a two-way restrictor. The main gear control valve downline return fluid uses a separate port in the valve, bypasses the manifold, and returns the fluid directly to A return line to the reservoir. The upline in the main gear control valve uses the same return port, return port B, in the manifold as the brake control valve.

R. Deleted.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

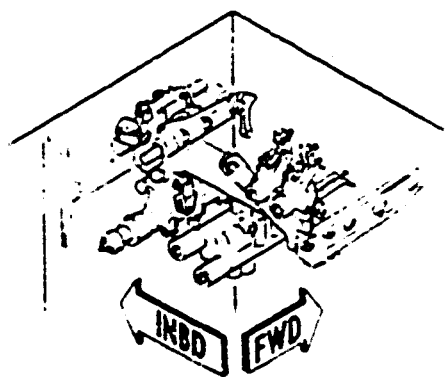

RIGHT MAIN GEAR  
WHEEL WELL

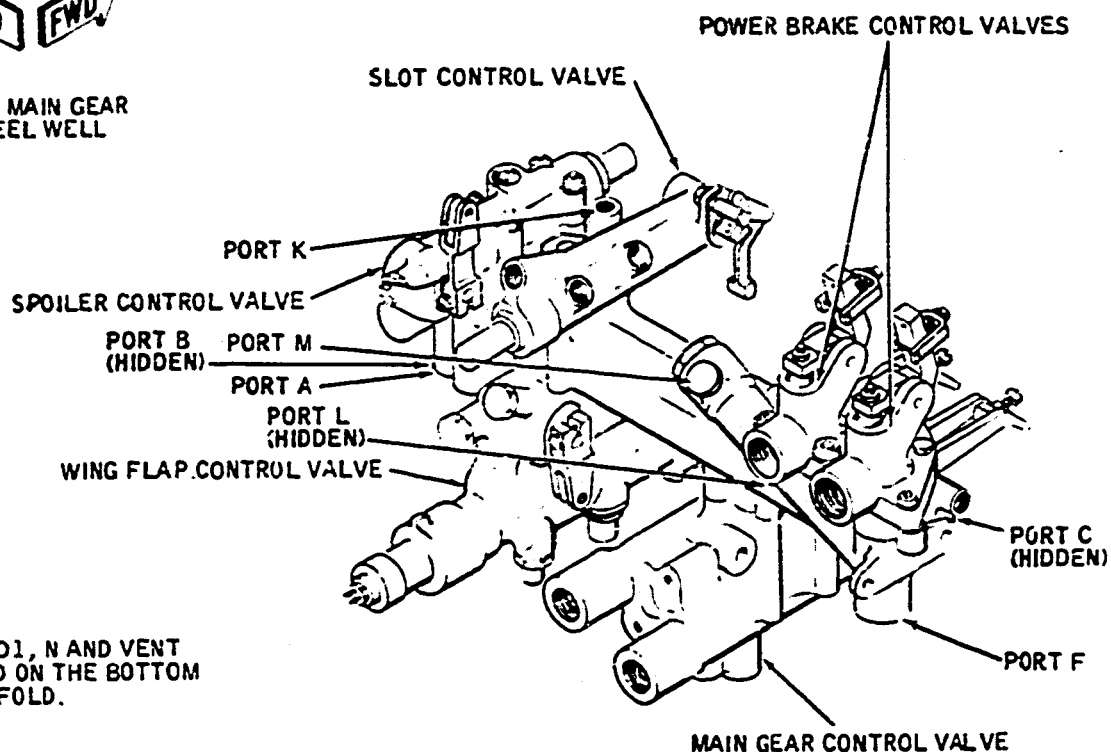

NOTE: PORTS B, C, D<sub>1</sub>, N AND VENT  
ARE LOCATED ON THE BOTTOM  
OF THE MANIFOLD.

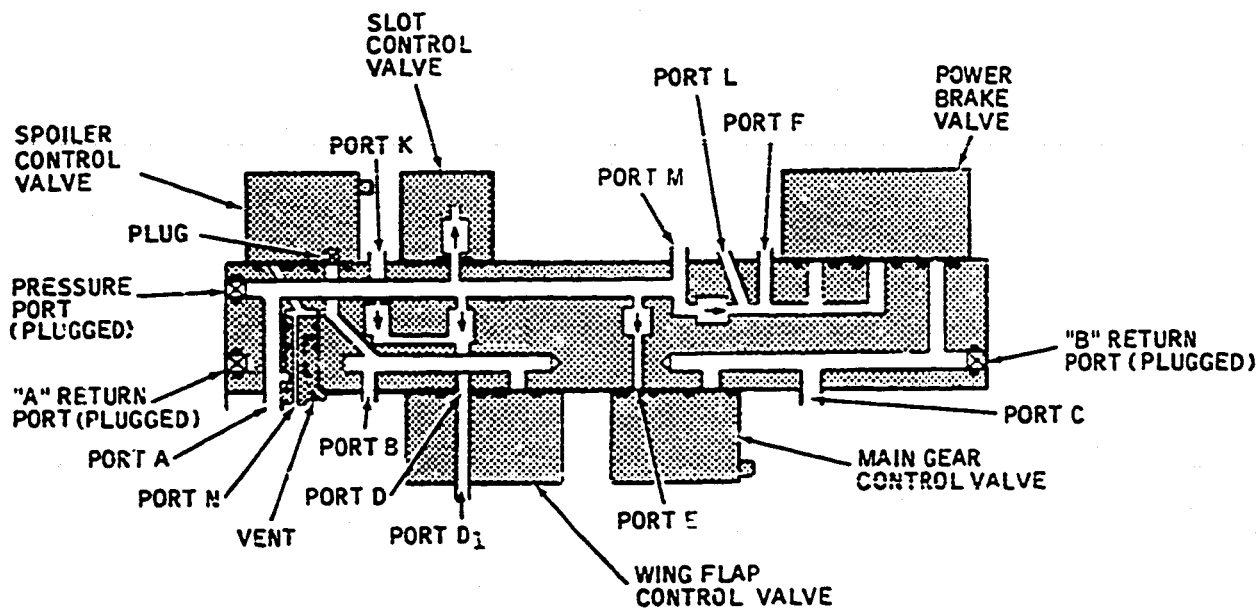

Right Hydraulic Power Manifold -- Schematic  
 Figure 19

HA2-29A

29-10-0  
 CODE 12  
 Page 35

Nov 1/69

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

S. Hydraulic Power System Accumulator (See Figure 20.)


- (1) The hydraulic power system accumulator is a spherical, welded-steel, fluid and air bladder-separated container. The accumulator is installed in the pressure line of the hydraulic power system to provide a reserve supply of fluid under pneumatic pressure and to act as a shock absorber for system pressure surges.
- (2) The accumulator is located immediately aft of the left hydraulic power manifold and is accessible through the left main gear inboard door. It is mounted with two corner brackets and clamp blocks at the upper and lower port fittings.
- (3) The accumulator is installed in the pressure line of the hydraulic power system and is initially charged with 1000 psi of dry nitrogen. As the system pressure builds up, fluid is forced into the upper chamber of the accumulator, further compressing the trapped nitrogen to approximately 3000 psi. With full hydraulic system pressure, 3000 psi is indicated on the pressure gage adjacent to the filler valve. This reserve pressure smooths out any momentary lag in the pump's response to the system's demand for greater fluid flows. The accumulator permits a gradual rise in system pressure, thereby absorbing the shock of pump surges and relieving the piping and system operating units of high-impact loads. When the engine-driven hydraulic pumps are not operating, the accumulator provides system pressure (at a diminishing rate) until a quantity equal to the stored volume in the accumulator has been used by the system.

T. Hydraulic System Priority Valve (See Figure 21.)


- (1) The priority valve is located in the left wheel well near the left hydraulic power manifold. The valve is installed in the hydraulic pressure line, between the two power manifolds, downstream of the pressure supply takeoff port for the flight controls. The priority valve is a balanced relief valve which reserves initial hydraulic pressure (up to 2150 psi maximum) for use in the flight control systems. The valve consists of a body with an inlet, an outlet, and a breather port. Internally, the valve contains a poppet valve plate, a poppet, a poppet valve load-spring, a piston, a piston load spring, and a piston load-spring housing. The piston load-spring housing chamber is vented to ambient air through a breather hole which is covered by a butyl rubber band.
- (2) The priority valve shuts off hydraulic pressure to all subsystems downstream of the left power manifold, whenever the hydraulic pressure drops below 1700 psi minimum. At this point, the valve closes to reserve the hydraulic pressure for use in the flight control systems, preventing them from reverting to manual operation. When the hydraulic pressure rises to 2150 psi maximum, the priority valve opens and supplies pressure to the right manifold and all subsystems downstream of the priority valve.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

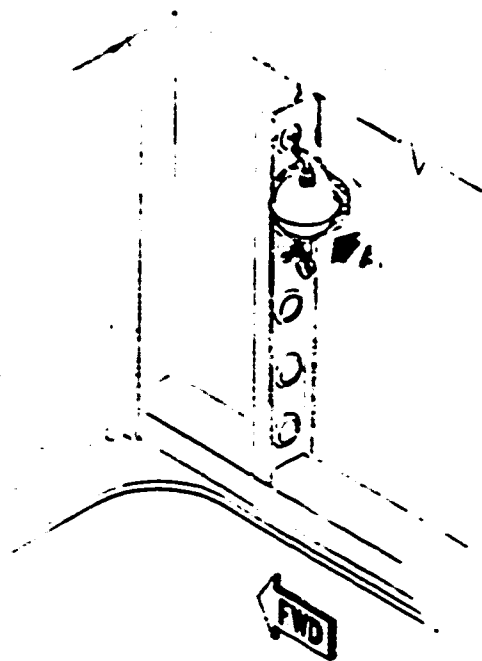

LEFT MAIN GEAR  
WHEEL WELL

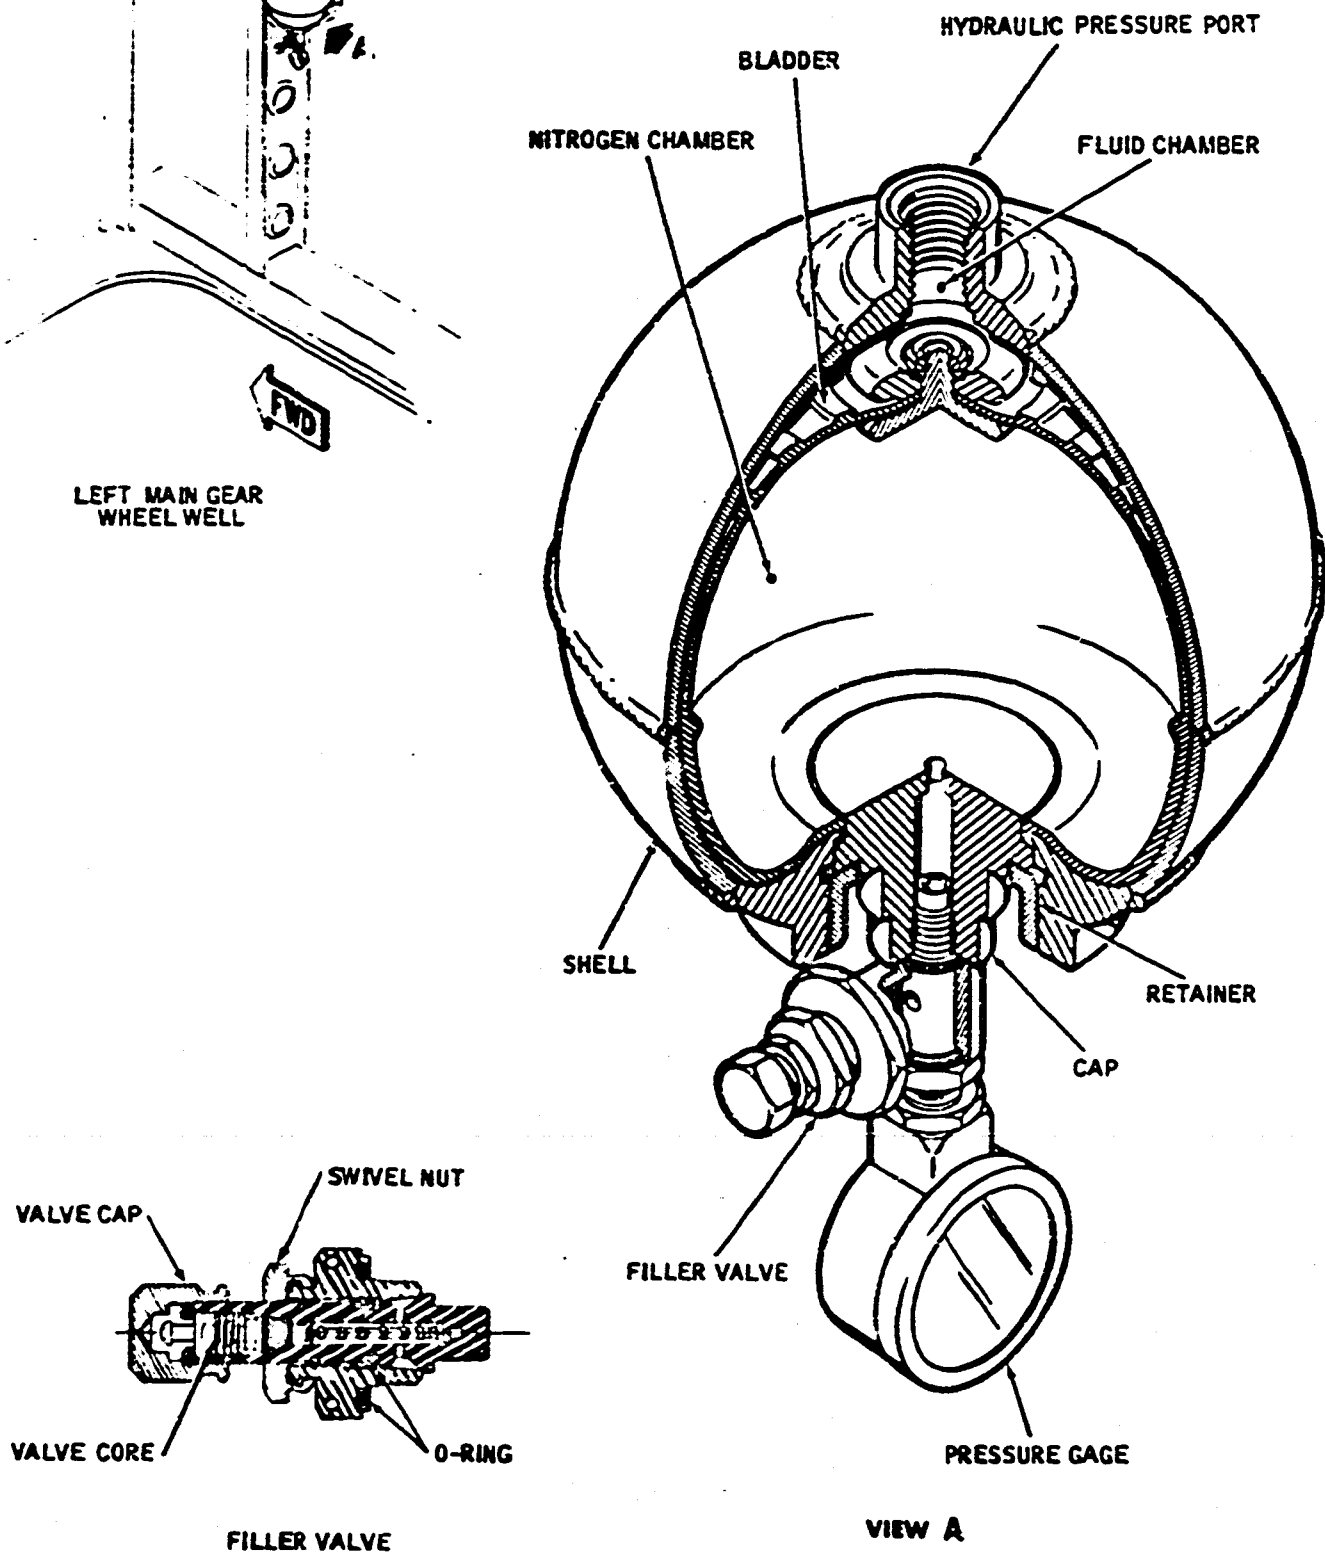

Hydraulic Power System Accumulator -- Cutaway View  
 Figure 20



HA2-30

29-10-0  
 CODE 12  
 Page 37

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

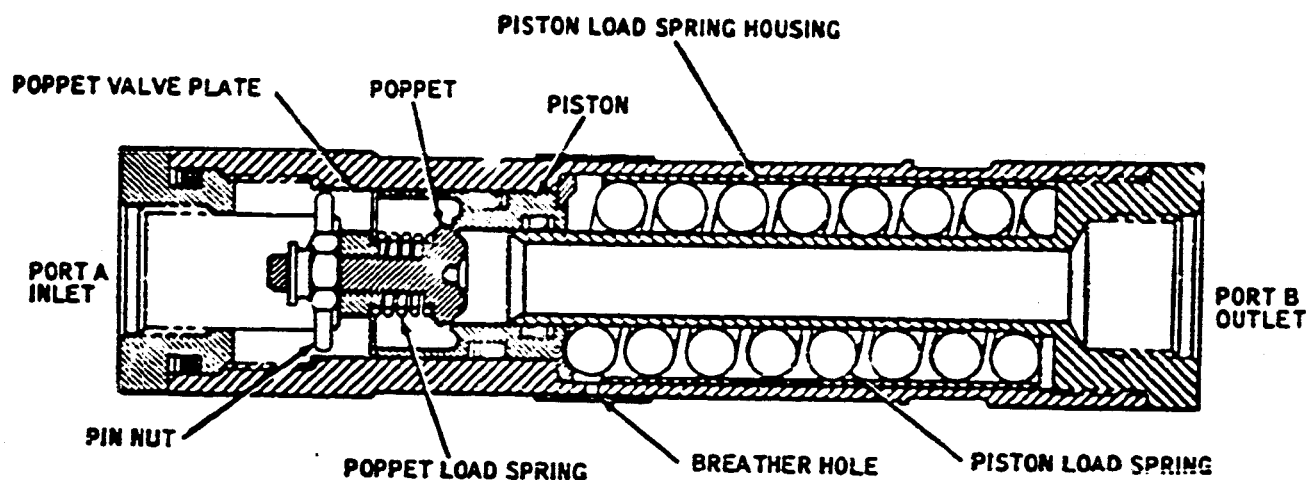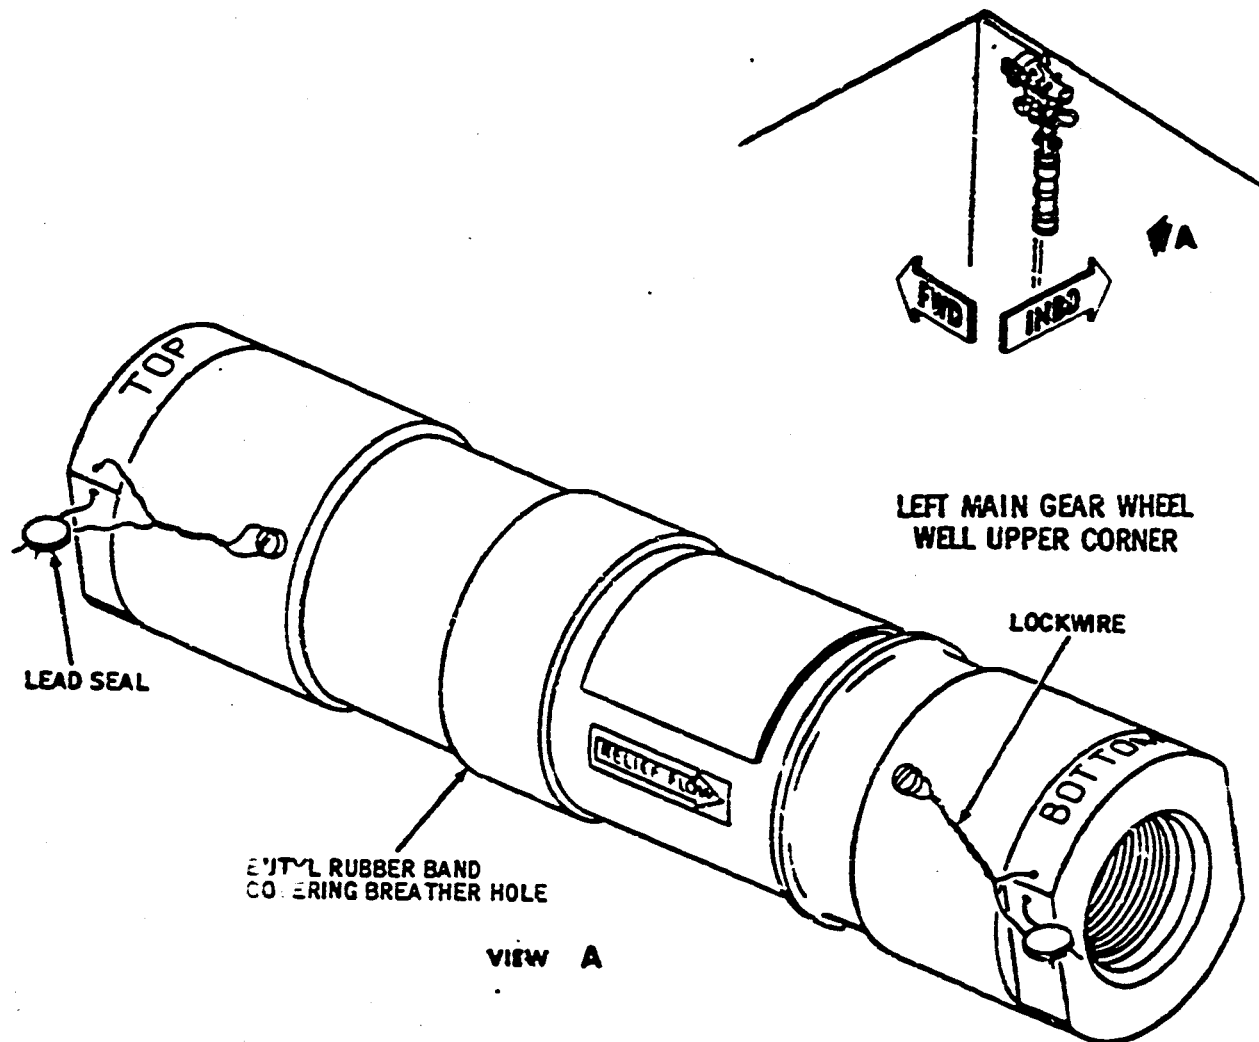

HA2-856

Hydraulic System Priority Valve -- Cutaway View  
 Figure 21

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Hydraulic fluid from the left power manifold enters the priority valve through the inlet port, passes through the poppet valve plate holes, and applies pressure against the piston. When sufficient hydraulic pressure is applied to the piston, the piston load-spring compresses, unseating the poppet and permitting full flow through the valve. When the hydraulic pressure decreases to less than the opposing force value of the piston load-spring, the load-spring forces the piston against the poppet and shuts off fluid flow through the valve.
- (4) The maximum flow available from both engine-driven hydraulic pumps is: 44 to 45 gpm at takeoff, climb, and cruise configurations; 26 to 28 gpm at descent, approach, and engine idle configurations.
- (5) Some of the larger hydraulic system demands are as follows:
  - (a) Gear retraction -- 17 gpm (10 - 12 seconds)
  - (b) Gear extension -- 14 gpm (10 - 12 seconds)
  - (c) Wing flaps down -- 8 gpm (10 seconds)
  - (d) Wing flaps up -- 3 gpm (22 seconds)
  - (e) Horizontal stabilizer -- 7 gpm
  - (f) Ailerons 17 gpm (25°/second)
  - (g) Rudder -- 3 gpm (25°/second)
- (6) There are various combinations of hydraulic system operations which could cause momentary reversion of the flight controls to manual operation. To prevent reversion to manual operation, the priority valve assures that the left power manifold receives all the hydraulic fluid pressure under conditions of very large flow demands.

**U. Hydraulic System Selector Control Lever**

- (1) The hydraulic system selector control lever is a manually actuated, mechanical lever detented to three positions. The lever provides a mechanical means, through cables, for positioning the system selector valve and the auxiliary hydraulic pump supply selector valve. The hydraulic system selector control lever is located on the system engineer's control pedestal. The lever is attached to a drive sector, located on a common shaft with the other control pedestal sectors. The lever and sector are accessible through the cover plates on the system engineer's pedestal.
- (2) To put the hydraulic power system in the bypass condition, the system selector control lever is lifted out of detent and moved to bypass/general system position. At the same time, the cable moves the sector and pushrod of the system selector valve to the No. 1 position. The pushrod positions the system selector valve to the No. 1 bypass position.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

At the same time, the cables from the system selector valve sector move the auxiliary pump supply selector valve sector to No. 1 (auxiliary) position. The auxiliary pump supply selector valve remains in the auxiliary supply position through the idle feature of the sector rigging. In this condition, the engine-driven pump pressure is ported to the reservoir and the auxiliary pump supplies pressure to the general system. In this position, the fluid is supplied to the auxiliary pump from the low standpipe in the hydraulic system reservoir. To put the system into the alternate condition, the selector control lever is lifted out of detent and moved to the general system/main gear downlock and flaps position. The cables move the system selector valve sector to the No. 3 (alternate) position. The system selector valve sector moves the cables rotating the auxiliary pump supply selector valve sector to the No. 3 (alternate) position. As the sector rotates, the end of the arm moves away from the idle position. This positions the valves to the alternate position, supplying fluid to the auxiliary pump from the auxiliary pump alternate reservoir. In this position, fluid from the auxiliary pump is ported to the wing flap control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported to the general system.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - DESCRIPTION AND OPERATION

1. General

A. Description (See Figures 1 and 2.)

- (1) The hydraulic power system receives fluid pressure from the engine-driven hydraulic pumps, one installed on each inboard engine. The electrically driven auxiliary pump is used to supplement the engine-driven pumps, or to independently supply the system with fluid pressure.
- (2) The hydraulic system reservoir, located in the left wing root, has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir is used for fluid, and 1/10 is used for foam space. A separate air chamber is installed in the reservoir system to provide for a greater fluid capacity in the main reservoir. A reservoir filler assembly is installed in the piping between the reservoir and the air chamber and has a vent line from the filler neck to the tee at the top of the reservoir sight gage. The reservoir is pressurized to 30 to 35 psi by bleed pressure from the engine-driven pumps through an air pressure regulator-aspirator.
- (3) The engine-driven pumps receive fluid from the pressurized main reservoir through respective engine hydraulic fire shutoff valves. The engine hydraulic fire shutoff valves are normally open and can be mechanically controlled from the flight compartment. The pumps supply fluid pressure through respective check valves to the dual filter and relief valve. Some of the fluid from the filter is ported through the regulator-aspirator to pressurize the reservoir. Most of the fluid is routed through a check valve to the system selector valve, and then to the left and right hydraulic power manifolds. The manifolds distribute the fluid pressure to the subsystems.
- (4) Hydraulic fluid is normally supplied to the auxiliary hydraulic pump from a low standpipe in the main reservoir. During alternate operation, the auxiliary hydraulic pump receives fluid supply from the auxiliary pump alternate reservoir, which is located just aft of the auxiliary pump. From these reservoirs, the fluid is ported through the auxiliary pump selector valve which is mechanically controlled from the flight compartment by the system selector control lever. When operating, the auxiliary hydraulic pump supplies fluid pressure to the subsystems through the system selector valve which is also controlled by the system selector control lever in the flight compartment. A filter and check valve are installed in the line from the auxiliary pump to the system selector valve.
- (5) An accumulator is installed in the pressure line to the subsystems to provide a reserve supply of fluid and to act as a surge damper for the system.

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 13  
Page 1


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Engine-driven pump fluid pressure is routed through the system selector valve to the left power manifold, where it is distributed to some of the subsystems and through the priority valve to the right power manifold. Fluid pressure from the right power manifold is distributed to the remaining subsystems.
- (7) The priority valve is a spring-loaded, poppet-type, balanced relief valve installed in the line downstream of the left power manifold. The priority valve's function in the system is to prevent the flight control systems from reverting to manual operation during high demands on the hydraulic system.
- (8) A fluid pressure transmitter, located in the nosewheel well, senses the system pressure, which is indicated on the hydraulic system pressure indicator in the flight compartment.

**B. Normal Operation**

- (1) Fluid is supplied to the hydraulic system from the pressurized hydraulic system reservoir. For operation of the hydraulic system under normal conditions, 8.1 US gallons (6.7 Imperial gallons; 30.6 liters) of hydraulic fluid are available to the engine-driven hydraulic pumps, and 12.9 US gallons (10.7 Imperial gallons; 48.8 liters) are available to the auxiliary hydraulic pump. Supply lines from the main reservoir carry fluid to each inboard pylon through normally open engine hydraulic fire shutoff valves to the engine-driven hydraulic pumps. Fluid is supplied to the auxiliary hydraulic pump from the main reservoir through a low standpipe at the base of the reservoir. Fluid is carried from the reservoir through the auxiliary pump selector valve to the auxiliary hydraulic pump.
- (2) The engine-driven hydraulic pumps supply full system pressure (3000 psi nominal) at any given engine speed, from idle to full power. The output flow of the pump is varied by sensing pressure from the outlet side of the pump. Each engine-driven pump contains a solenoid-operated bypass valve which, when energized, bypasses the pressure control regulator of the pump and ports fluid to the pump yoke control piston which feathers the pump. When the pump is feathered, flow rate is reduced to almost zero (1.0 gpm) and to a pressure of approximately 300 psi. Half of this flow maintains pump lubrication and cooling through internal leakage. This leakage is returned, through a check valve, the engine-driven pump case drain line filter, and another check valve to the case drain return port of the reservoir. The pressure fluid from each pump passes through a check valve to the dual filter and relief valve.
- (3) The fluid enters the dual filter and relief valve through the relief valve chamber. The fluid is passed through the filter element, through a manifold, and through a common outlet port. Fluid from the outlet port is routed through a check valve to the system selector valve. If back pressure in the system builds up to approximately 3300 psi, the relief valves in the dual filter and relief valve open and port fluid back to

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

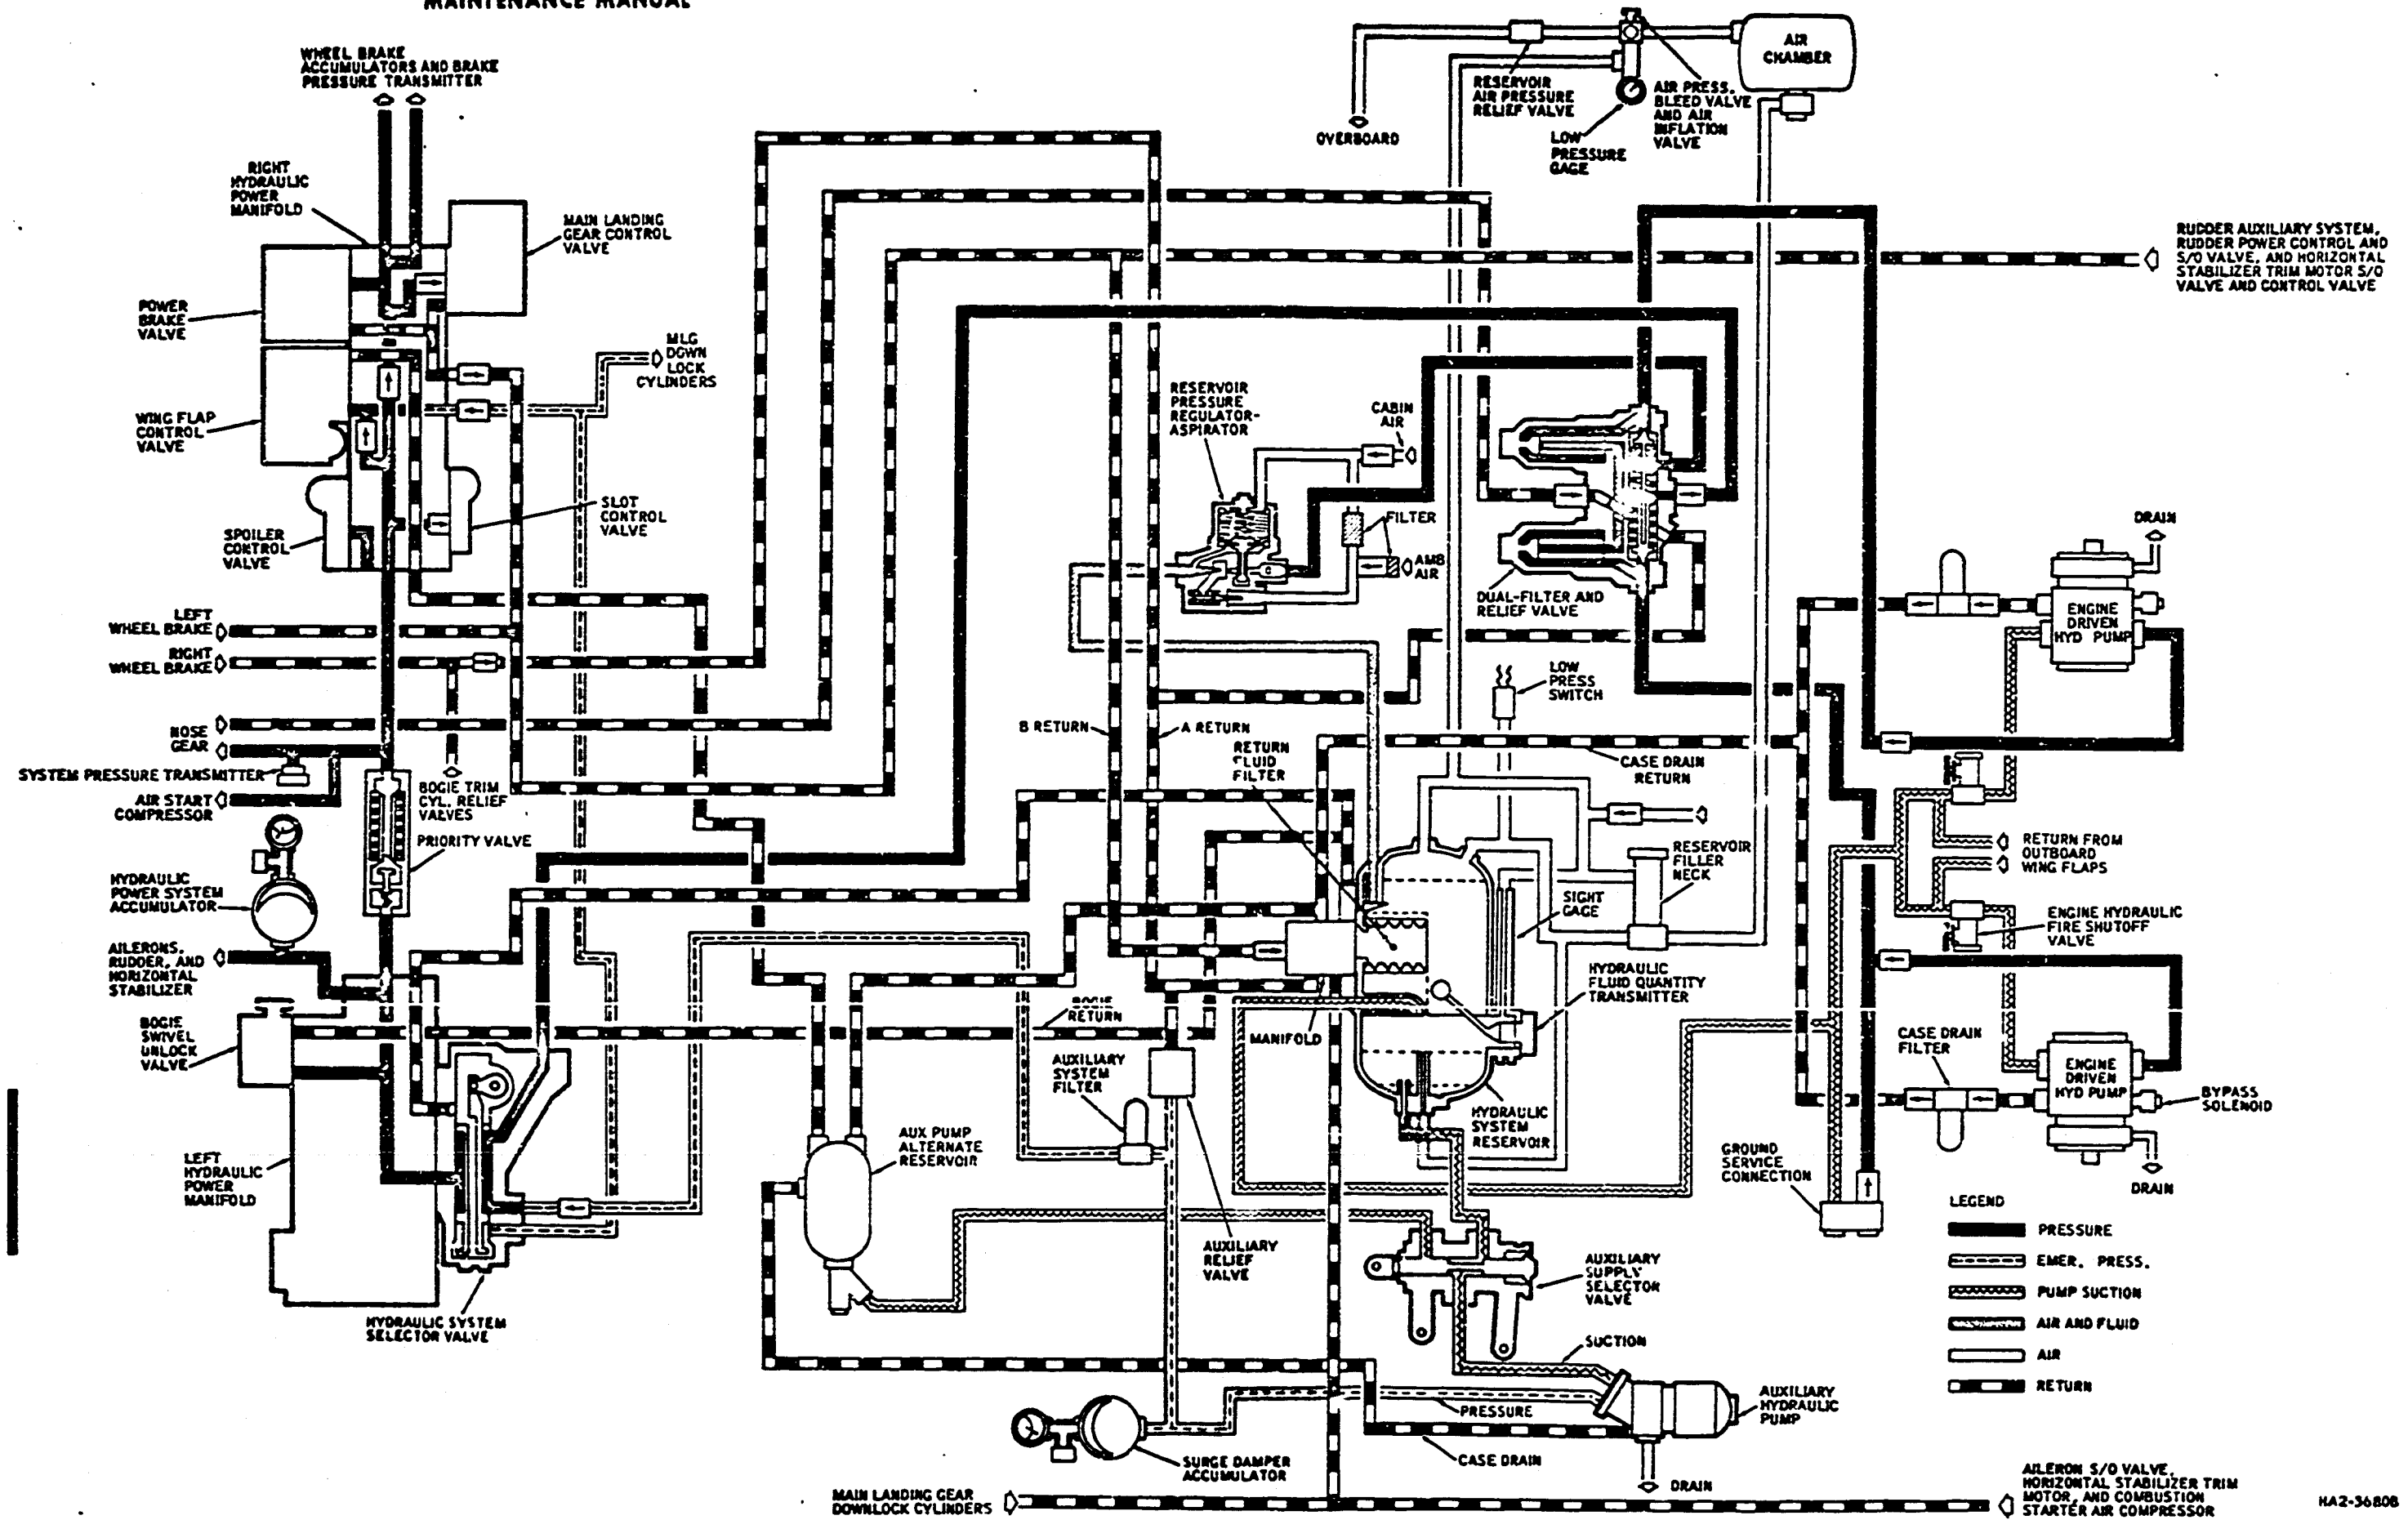

Hydraulic Power System -- Schematic Diagram  
 Figure 1


29-10-0  
 CODE 13  
 Page 3

Jan 15/68

Printed in U.S.A.

HA2-36808

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

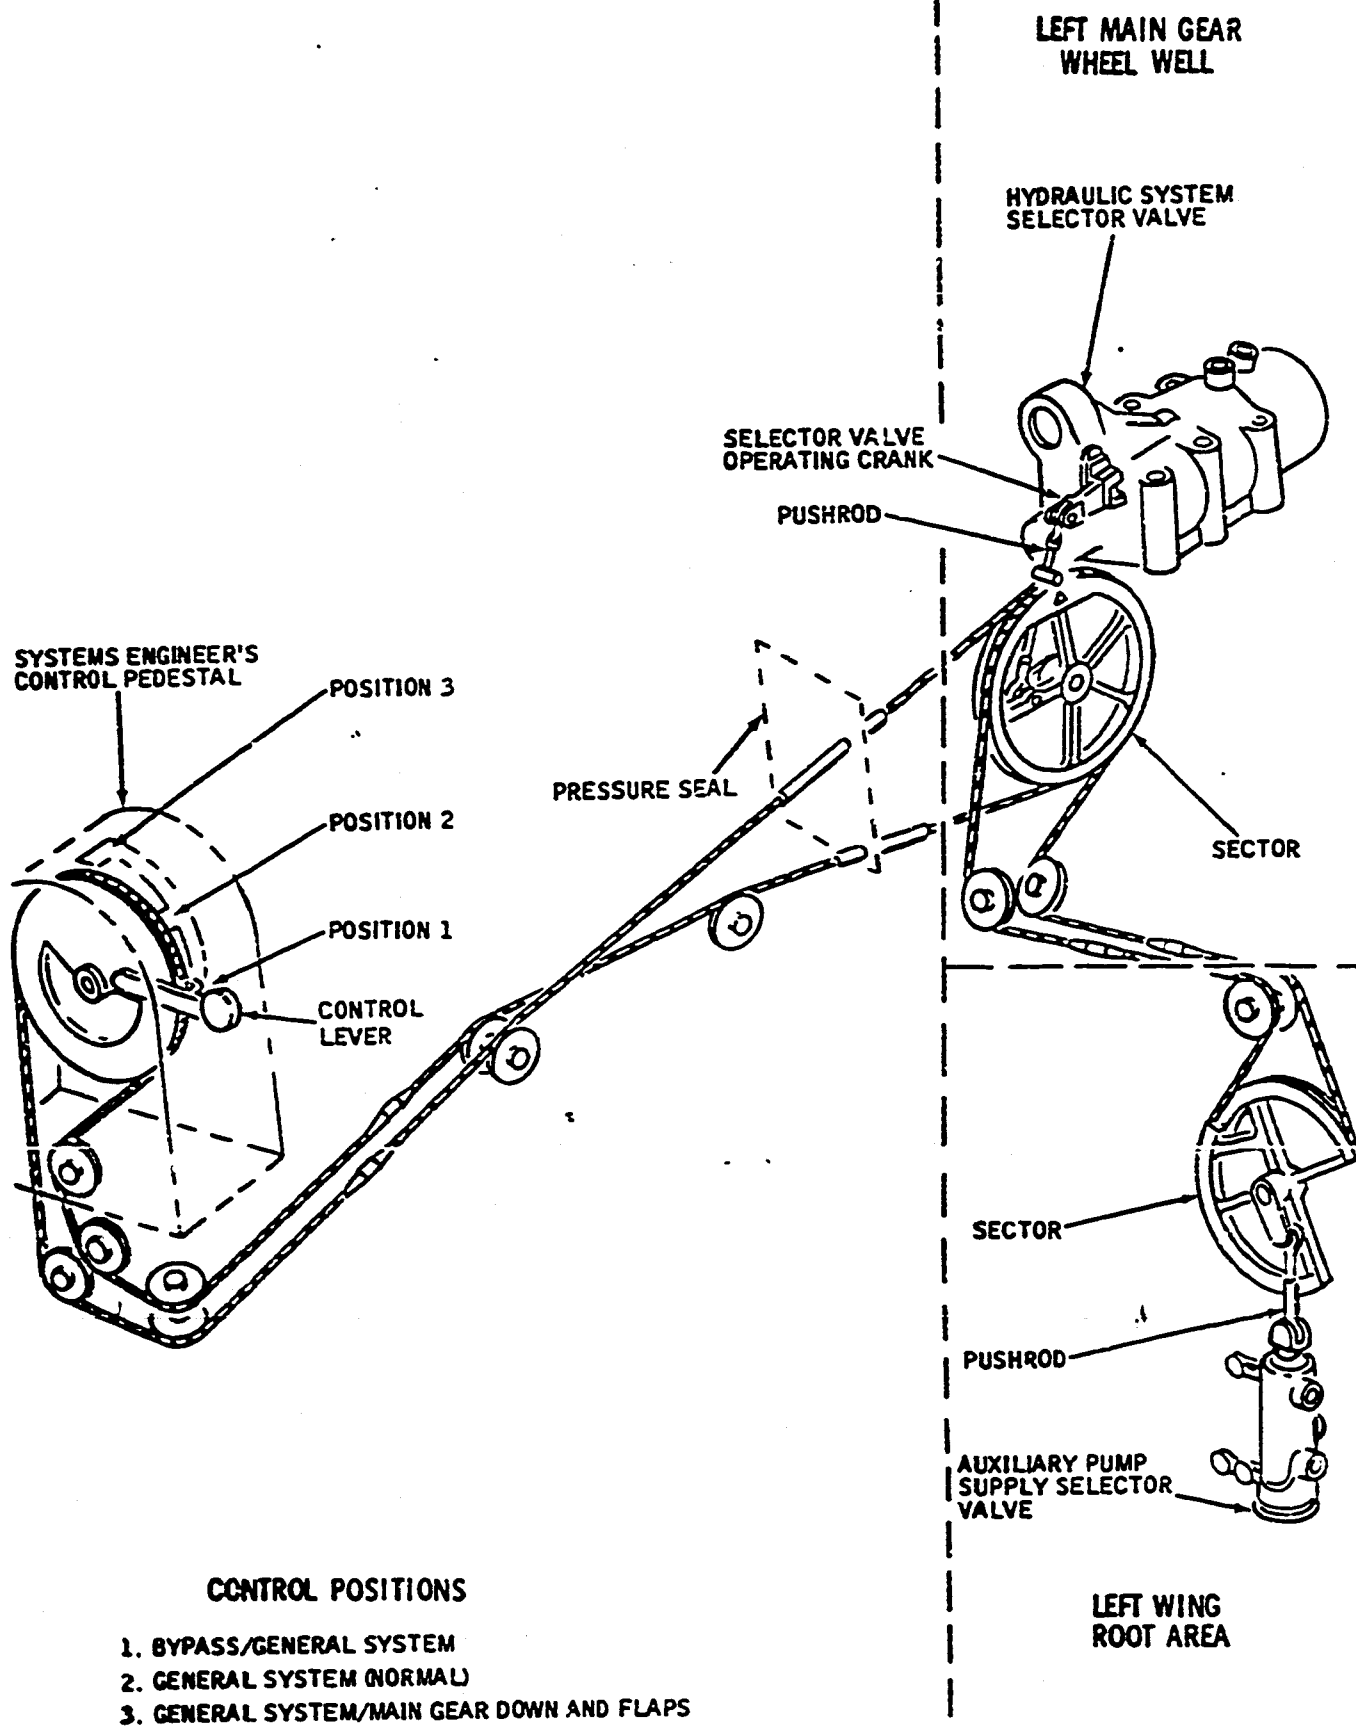

Hydraulic System Selector and Auxiliary Pump Supply  
 Selector Valves -- Mechanical Control Schematic  
 Figure 2

HA2-486

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 13  
 Page 5



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

the reservoir via A return port. The relief valve poppet closes again when system pressure drops to approximately 3000 psi.

- (4) The aspirator receives filtered fluid (bleed pressure at normal 3000 psi) from the dual filter and relief valve. The aspirator operates on the jet pump principle. Hydraulic fluid is atomized and mixed with air within the unit by a nozzle and a venturi. The mixture is used to pressurize the reservoir and reservoir air chamber. The regulator diaphragm and the relief valve maintain 30 to 35 psi in the reservoir and air chamber. If there is a regulator malfunction, the aspirator stalls when the outlet pressure reaches a maximum of 40 psi. A reservoir relief valve in the reservoir vent line relieves thermal expansion pressure above 45 (+5, -0) psi.
- (5) Pump pressure fluid enters the system selector valve through the system pressure inlet port. When the pump selector control lever is in the general system (normal) position, fluid is ported to the pressure passages of the left power manifold. The fluid pressure in the left power manifold is ported through the priority valve to the nose gear and the right power manifold and directly to the following valves:
  - (a) Bogie unlock
  - (b) Aileron power shutoff
  - (c) Rudder power shutoff
  - (d) Longitudinal trim hydraulic motor shutoff
- (6) The right power manifold distributes fluid pressure to the brake accumulators, the pressure transmitter, and the following control valves:
  - (a) Wing flap
  - (b) Slot
  - (c) Main gear
  - (d) Power brake
- (7) The return fluid from the wing flap control valve is ported through the right power manifold and into the auxiliary hydraulic pump alternate reservoir. Return fluid from the outboard wing flaps is piped into the suction lines for each engine-driven hydraulic pump. Return fluid from the slot control valve is ported into the A return line to the main reservoir. The power brake and main gear control valve gear up return fluid is ported through a restrictor check valve into the B return line to the reservoir. The main gear control valve gear down return pressure bypasses the right manifold and returns to the reservoir through the A return line. The return port of the bogie unlock valve ports fluid from the left manifold to the bogie return port of the reservoir. All

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

return fluid entering the reservoir is filtered through the return ports filter located within the reservoir.

**C. Bypass Operation**

- (1) The output of the engine-driven hydraulic pumps is bypassed by moving the system selector control lever out of the general system (normal) position to the bypass/general system position.
- (2) The system selector valve in the bypass position ports engine-driven pump pressure from the dual filter and relief valve directly to the return passage of the left power manifold. From the manifold, the fluid is ported directly to a tee in the wing flap return port of the hydraulic system reservoir. In the bypass condition, the auxiliary hydraulic pump receives fluid from the hydraulic system reservoir, pressurizes it to system pressure, and ports it to the left and right power manifolds for distribution to the subsystems.

**D. Alternate Operation**

- (1) When both engine-driven hydraulic pumps and the auxiliary hydraulic pump are rendered inoperative due to the loss of the normal supply of fluid, the hydraulic power system can be rigged for alternate operation. This is accomplished by placing the system selector control lever in the general system/main gear downlock and flaps position. When the system selector control lever is in this position, the auxiliary hydraulic pump supply selector valve is positioned to supply fluid from the auxiliary pump alternate reservoir to the auxiliary pump.
- (2) Fluid is supplied to the auxiliary pump from the outlet port of the auxiliary pump supply selector valve. Output pressure is ported through the auxiliary system filter and check valve to the auxiliary pressure inlet port of the system selector valve.
- (3) In the general system/main gear downlock and flaps position, auxiliary pump pressure bypasses the manifold pressure passages and is ported from the alternate outlet port of the system selector valve. Fluid from this port flows directly to a port on the right power manifold, through an internal check valve in the manifold, to the wing flap control valve. A line, teed into the alternate supply line, runs directly to a shuttle valve in the main gear downlock cylinder line. When auxiliary pressure is applied, the shuttle valve shifts, porting fluid into the downlock bungee cylinder's downlock side.

**E. Mechanical Control**

- (1) The hydraulic power mechanical control system consists of the hydraulic system selector control lever cable drum, the system selector valve sector, the system selector valve, the auxiliary hydraulic pump supply selector valve sector, and the auxiliary hydraulic pump supply selector valve.

Jun. 15/67

Printed in U.S.A.

29-10-0  
CODE 13  
Page 7

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (2) The control lever located on the system engineer's control pedestal is used to position the system selector valve and, in turn, the auxiliary hydraulic pump supply selector valve.
- (3) The control lever is spring loaded into general system (normal) position, and is connected to the control lever cable drum. Two cables run from the drum, under the cabin floor, aft through the pressure bulkhead at the rear wing spar, and into the left wheel well to the system selector valve sector. A pushrod connects the sector to the positioning lever of the system selector valve.
- (4) A second set of cables is routed from the system selector valve sector into the left wing root to the auxiliary hydraulic pump supply selector valve sector. When the system selector valve is in either bypass or normal, the auxiliary hydraulic pump supply selector valve sector is arranged so that the pushrod idles between the two positions. This allows the valve to remain in the auxiliary position. When the sector is moved to the alternate position, the pushrod is pulled by the sector to reposition the valve to the alternate position.
- (5) The control lever is normally in the general system (normal) position. To move the system selector valve to the bypass position, the control lever is moved to the bypass/general system position. When the system selector valve is moved to the bypass position, the auxiliary hydraulic pump supply selector valve sector is moved to a new position. Due to the idle feature on the auxiliary sector, the valve remains in the auxiliary position. With the valve in this position, fluid is supplied to the auxiliary pump through the low standpipe in the hydraulic system reservoir. In this condition, engine-driven pump pressure is ported to the reservoir and the auxiliary pump pressure is ported to the general system.
- (6) To put the system in alternate operation, the control is moved to the general system/main gear downlock and flaps position. This moves the system selector valve to the alternate position, and simultaneously moves the auxiliary hydraulic pump supply selector valve to the alternate position. Fluid is supplied to the auxiliary pump from the auxiliary hydraulic pump alternate reservoir. Fluid pressure from the auxiliary pump is ported to the flap system control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported from the system selector valve to the general system.

## 2. System Components

### A. Hydraulic System Reservoir (See Figures 3 and 4.)

- (1) The hydraulic system reservoir is installed on the aft side of the wing rear spar in the left wing root and is accessible through the left wing root access door. The hydraulic system reservoir serves as the main source of hydraulic fluid for the engine-driven hydraulic pumps and the

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

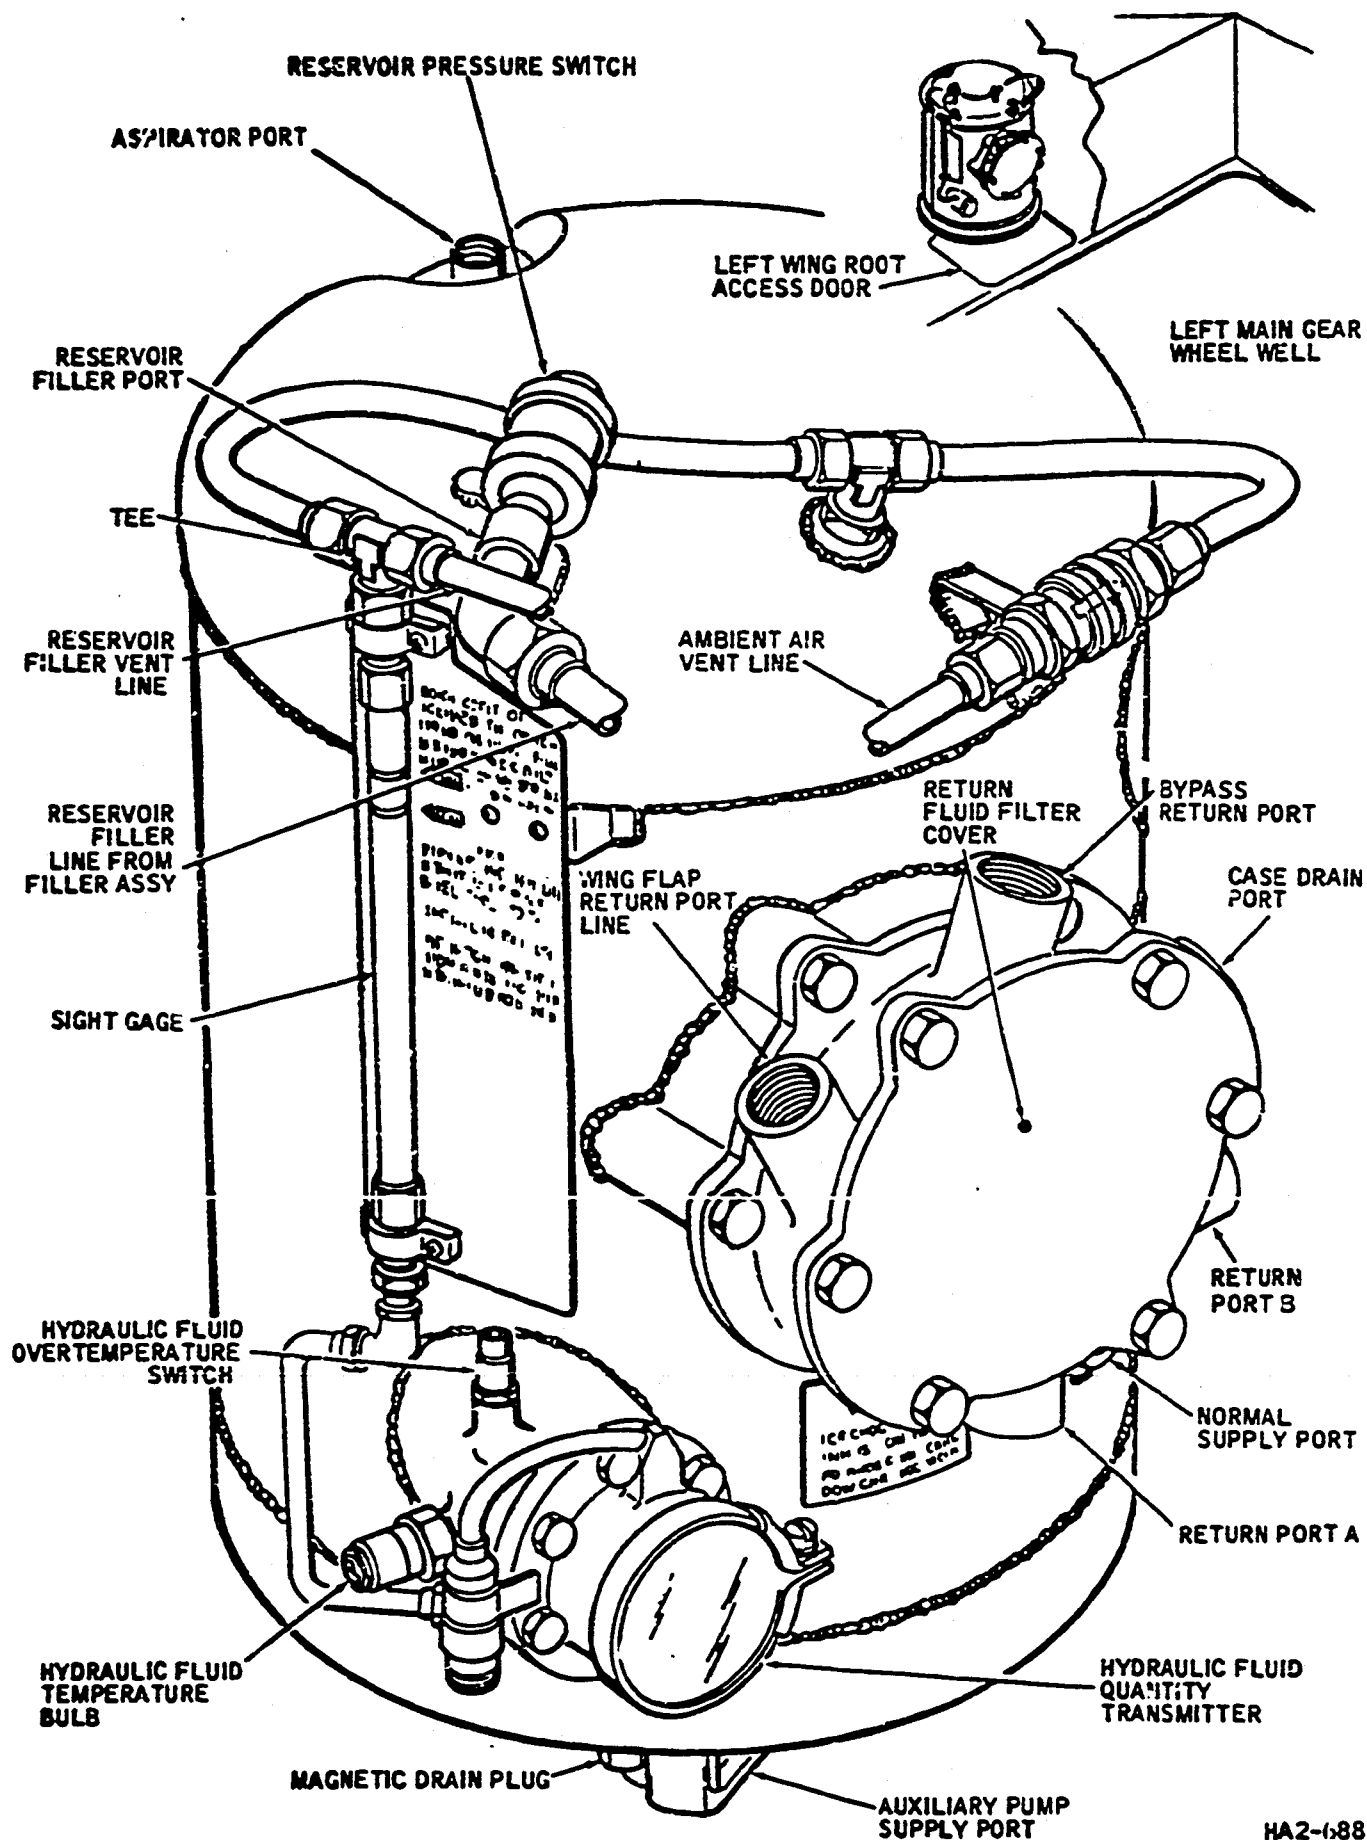

Hydraulic System Reservoir -- External View  
Figure 3


HA2-1588

29-10-0  
CODE 13  
Page 9

Jun 15/67

**Printed in U.S.A.**

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

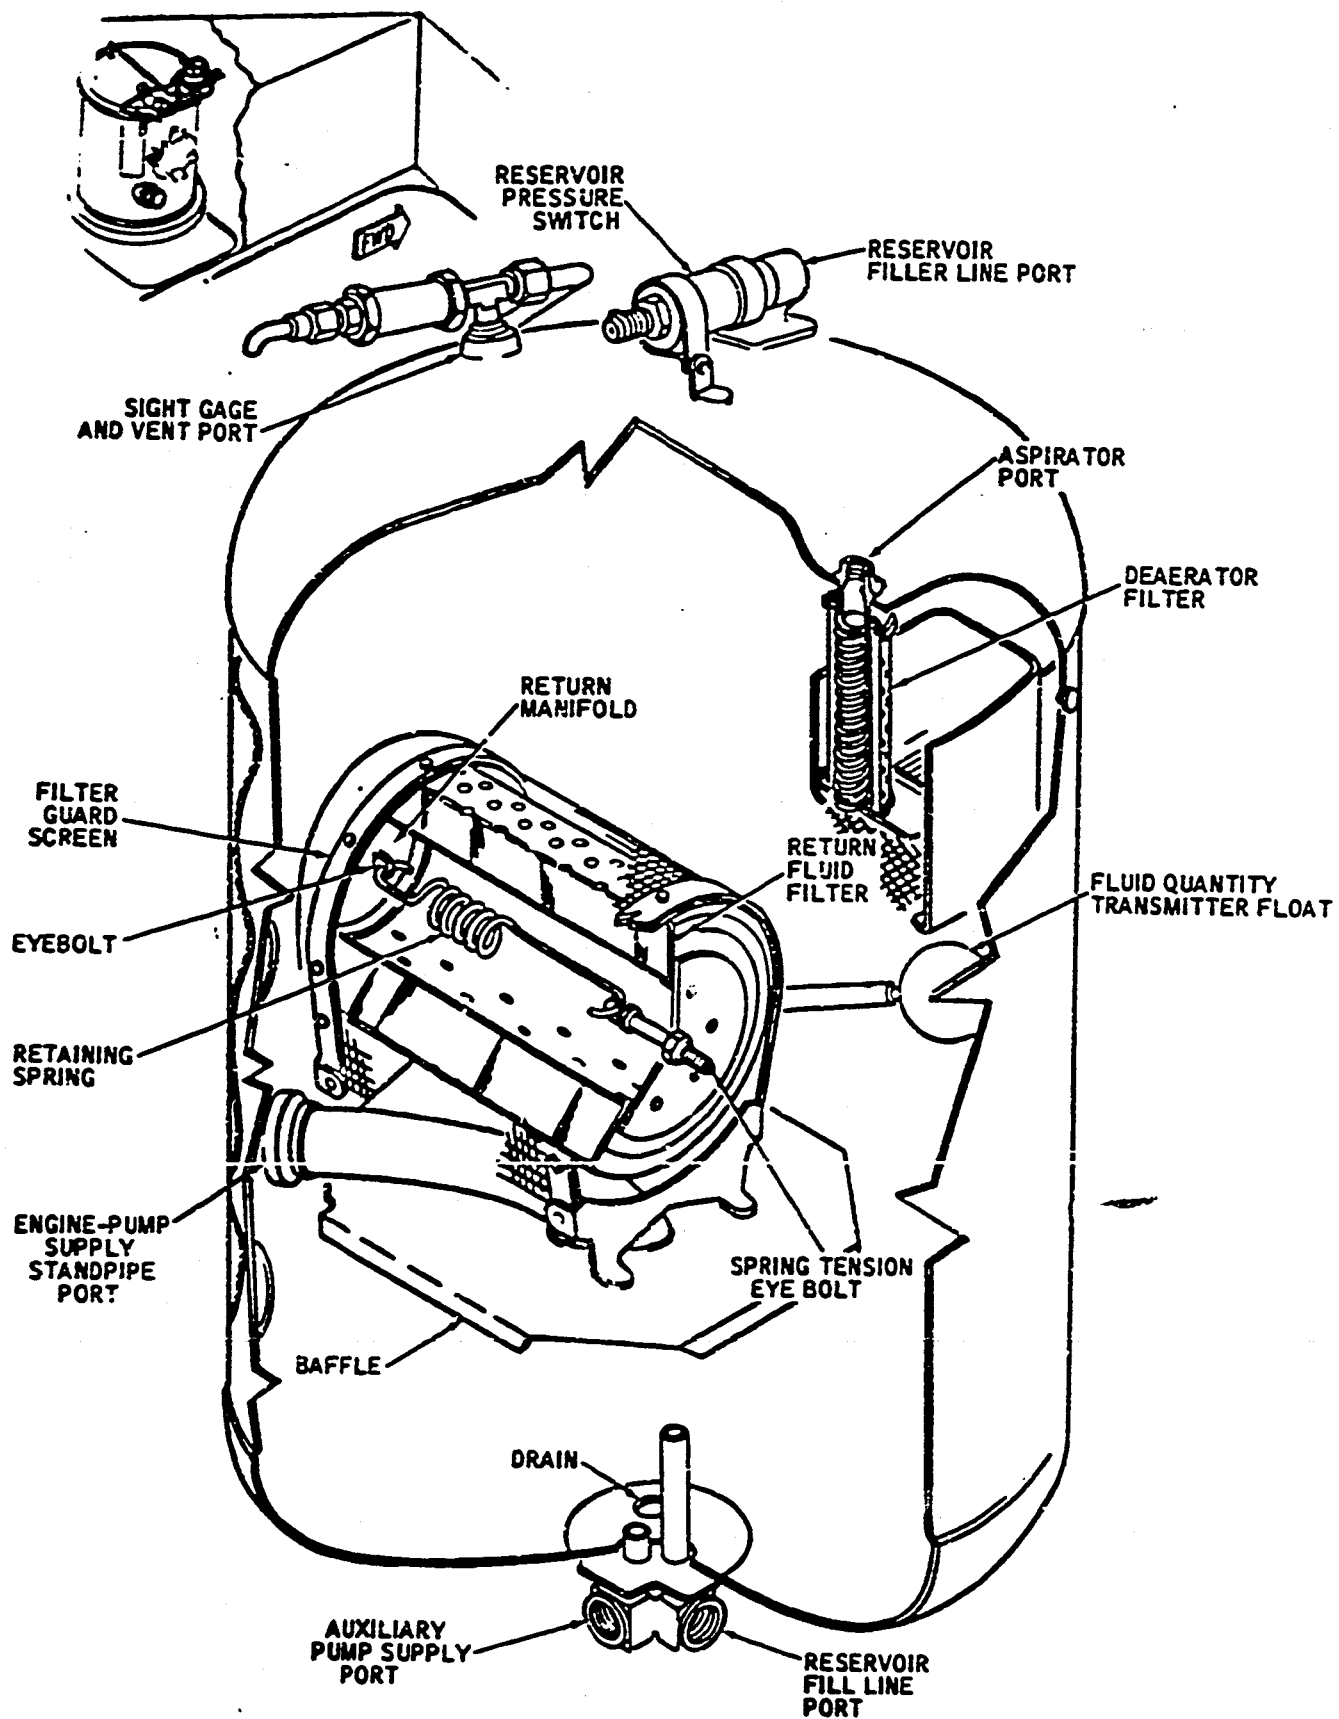

Hydraulic System Reservoir -- Cutaway View  
 Figure 4

HA2-689

29-10-0  
 CODE 13  
 Page 10

Printed in U.S.A.

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

normal supply for the auxiliary hydraulic pump. The reservoir is cylindrical in shape and contains a filter, baffle, and a screen cover encasing the filter. The filter prevents foreign particles from contaminating the fluid supply. Mountings are provided on the exterior surface of the reservoir for return line ports, aspirator port, electrical sensing units, sight gage, instruction placards, magnetic drain plug, and system supply ports.

- (2) The reservoir is pressurized with air from the regulator-aspirator to between 30 and 35 psi and has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir volume is used for fluid and 1/10 is used for foam space.
- (3) The aspirator port through which the reservoir is pressurized is located in the recess on top of the reservoir. An aspirator-deaerator filter is supported in the reservoir by a screen and support box assembly which is mounted to the reservoir wall by two bolts.
- (4) The mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The return ports manifold is an open-centered ring, flanged at both sides and provided with five fluid ports around its circumference; return port A is located at the bottom, return port B is located at the lower right side, the wing flap return port is located at the upper left side, and the system selector valve bypass port is located at the top. One flange of the manifold is mounted with six bolts to the mounting flange on the reservoir. The return fluid filter cover fits into the open side of the manifold, and is attached to the outer manifold flange with six bolts to form a fluid-tight cover for both the manifold and the filter.
- (5) The return fluid filter is installed in the reservoir, behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the return fluid filter cover holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to the engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
- (6) A flanged adapter for the fluid quantity transmitter is welded to the reservoir below and to the left of the return ports manifold. The adapter is provided with two small port bosses for the hydraulic fluid temperature bulb and the hydraulic fluid overtemperature switch. The lower end of the sight gage connects to a third port in the adapter, while the top of the sight gage tees into a port at the top of the reservoir. An instruction plate is mounted behind the sight gage and the vacuum breaker check valve tees into the port at the top of the reservoir that is used by the sight gage.

Jun 15/67

Printed in U. S. A.

29-10-0  
CODE 13  
Page 11

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


**B. Hydraulic Reservoir Return Fluid Filter (See Figure 4.)**

- (1) The reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply. The filter is located behind the return ports manifold, and is spring loaded to act as its own relief valve. Access to the filter is by removing the return fluid filter cover from the return ports manifold by removal of six bolts. The filter is attached by the retaining spring to the cover and is withdrawn from the reservoir when the cover is removed.
- (2) Externally, the filter consists of two perforated concentric tubes. The area between the tubes is closed by metal end caps which are bonded to the two tubes. A resilient rubber gasket is bonded to each of the caps. Each gasket must be smooth and flat for proper sealing of the filter. The gaskets act as a static seal and a relief valve seat.
- (3) Internally, the filter has a 10-micron, resin-impregnated, convoluted paper-type filter element. The area of the filter element is approximately 1960 square inches. The filter is held in place by a retaining spring. One end of the spring is attached to an eyebolt located inside the return port's manifold cover. The spring passes through the center chamber of the filter and is connected to another eyebolt. This eyebolt is secured to a large washer and plate by means of a self-locking nut. The washer seats on the rubber gasket which is bonded to the filter. The fluid enters the center chamber of the filter and passes through the inner tube of the filter to the filter element by means of perforation holes. Foreign matter is filtered out by the filter element, and the fluid leaves the element through perforation holes in the outer tube. When the element becomes saturated with foreign matter, the filter acts as its own relief valve and unseats at 20 to 25 psi above normal return pressure which allows fluid to bypass the filter and enter the reservoir.

**C. Hydraulic Reservoir Air Pressure Regulator-Aspirator (See Figure 5.)**

- (1) The reservoir air pressure regulator-aspirator is a jet-type air pump, regulated by a pressure-sensitive shutoff valve. The unit pressurizes the hydraulic reservoir with air to the operating pressure of 30 to 35 psi. The regulator-aspirator is located on the top inboard side of the reservoir and is mounted on the reservoir retainer ring. Access to regulator-aspirator is through the left wing root access door.
- (2) The regulator-aspirator assembly consists of a main aspirator body and a regulator housing. The main aspirator body has two inlet ports and one outlet port. The ports are permanently stamped inlet, outlet, and air inlet. The plug for an air check valve is located near the outlet port. A chemically treated paper filter is installed near the aspirator body air inlet port in the air line from the pressurized cabin area. A metal screen filter is installed on the check valve which tees into the aspirator body air inlet port.

DOUGLAS AIRCRAFT CO., INC.  
**DC-6 SIXTY SERIES**  
 MAINTENANCE MANUAL

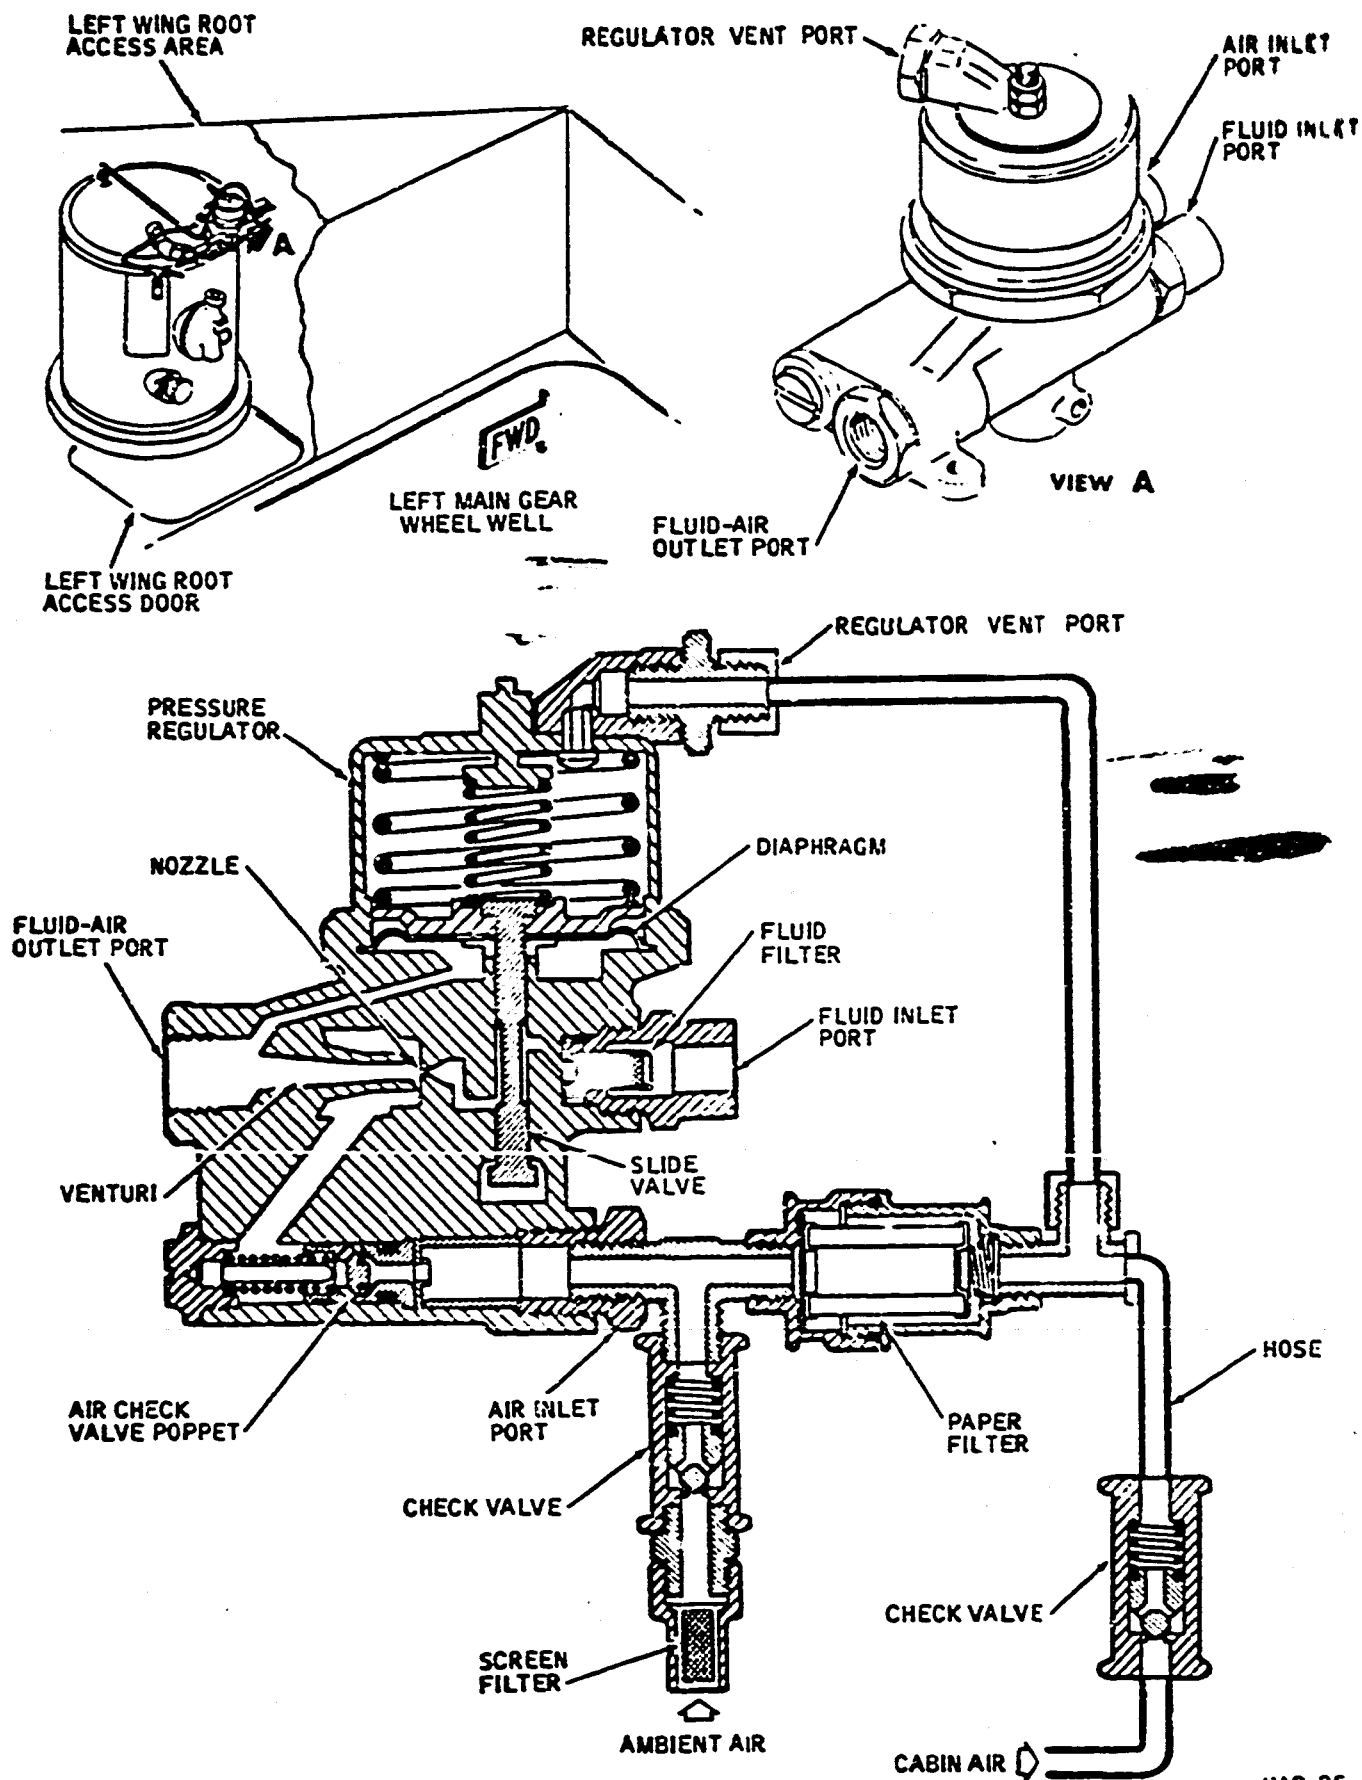

Reservoir Air Pressure Regulator-Aspirator -- Schematic  
 Figure 5

HA2-25

29-10-0  
 CODE 13  
 Page 13

Jun 15/67

Printed in U.S.A




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The reservoir air pressure regulator-aspirator operates basically with a jet pump action which is regulator controlled. Fluid enters the assembly through the fluid inlet port where it is filtered and then ported through the valve assembly of the regulator. When air pressure at the outlet port is under 30 psi, the valve is open, porting fluid to the nozzle. The orifice in the nozzle sprays the fluid through the venturi of the outlet port, creating a vacuum in the chamber around the venturi. When the vacuum becomes great enough to create a pressure differential of approximately 1 psi, ambient air opens the air check valve. The air is ported to the chamber around the venturi and is siphoned, with the fluid, through the outlet port.
- (4) Hydraulic fluid inlet pressure at the engine-driven hydraulic pumps is improved at high altitude operation by supplying pressurized filtered cabin air to the reservoir regulator-aspirator instead of ambient outside air. Part of the inlet air is diverted by a tee fitting to the regulator chamber to provide a more positive regulating force on the diaphragm than would be obtained with low ambient pressures. The chemically treated paper filter, installed in the regulator-aspirator air supply line from the cabin, removes smoke tars and impurities from the pressurized cabin air. The steel mesh screen filter, installed on the check valve which tees into the regulator-aspirator air inlet port downstream of the paper filter, removes dust, dirt, and foreign particles from the ambient air and serves as a standby to supply filtered air in event the paper filter is clogged.
- (5) As pressure in the reservoir builds up, back pressure is bled from the outlet port to the diaphragm chamber. The reaction on the diaphragm begins to move the slide valve to cut off the fluid flow. At 30 to 35 psi of back pressure, the diaphragm completely closes the slide valve, cutting off the flow of fluid. If there is a regulator malfunction, the aspirator stalls when outlet pressure reaches a maximum of 40 psi.
- (6) The aspirator is capable of pressurizing the reservoir to 30 to 35 psi in approximately 4 minutes at altitudes from sea level to 15,000 feet, when fluid is ported through the nozzle at 0.5 gpm at 3000 psi.


D. Regulator-Aspirator Air Filters (See Figure 6.)

- (1) The regulator-aspirator air filters remove ambient and cabin air impurities from the air which is used to pressurize the main hydraulic system reservoir. The filtering system is composed of two filters. One of which is a paper element filter, installed directly in the cabin air supply line near the regulator-aspirator. The other filter is a fine mesh, screen-type filter, installed on a check valve and positioned at right angles to the regulator-aspirator air inlet port. The screen filter, in addition to providing an immediate supply of ambient air during ground operations, serves as a standby air inlet to preclude air starvation of the regulator-aspirator in the event the paper element filter becomes clogged.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

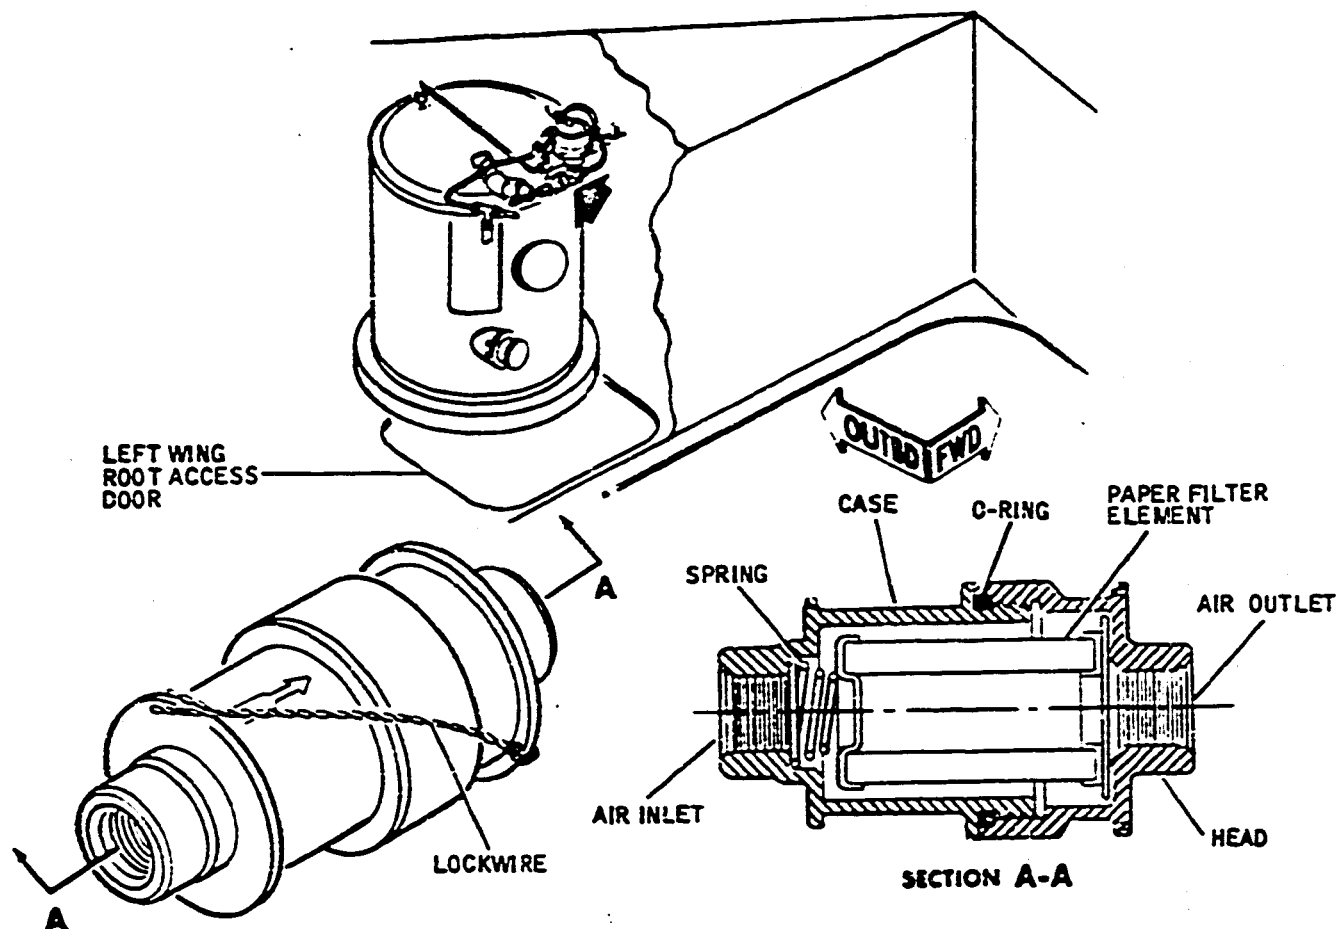

PAPER ELEMENT FILTER

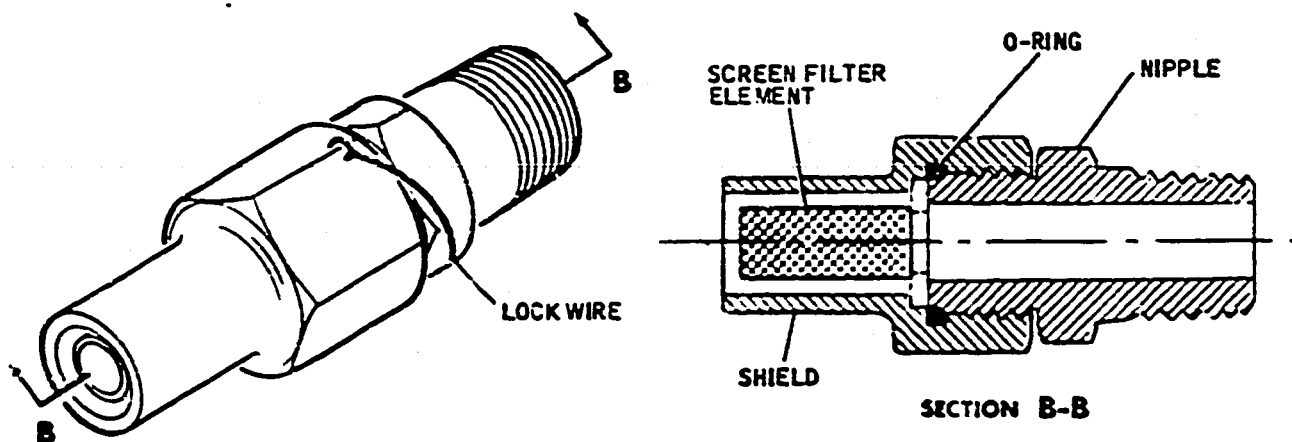

SCREEN FILTER

Regulator-Aspirator Air Filters -- Cutaway View  
 Figure 6

HA2-35

29-10-0  
 CODE 13  
 Page 15

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

E. Hydraulic Reservoir Relief Valve (See Figure 7.)

- (1) The reservoir relief valve and the air pressure aspirator-regulator keep the reservoir pressurized to normal operating range. The valve relieves excess air pressure which may build up in the reservoir through thermal expansion in the system. The valve has an inlet port and an outlet port and consists, internally, of an inlet port seat and a spring-loaded poppet.
- (2) The relief valve is installed in the overboard vent line downstream of the hydraulic reservoir air bleed valve. In the event that excess pressure builds up in the reservoir, the poppet will start to relieve at 45 (+5, -0) psi. Full flow of 10 gpm is attained at 80 psi maximum. The poppet reseats at 90 percent of the opening pressure.

F. Hydraulic Reservoir Air Bleed Valve (See Figure 8.)

- (1) The hydraulic reservoir air bleed valve and pressure gage are located on the aft side of the rear spar in the left main gear wheel well, inboard of the hydraulic reservoir air chamber. The bleed valve and gage are installed in the overboard vent line, between the reservoir air chamber and the reservoir relief valve.
- (2) The bleed valve is used to relieve the reservoir air pressure prior to disconnecting lines or components in the hydraulic system. The pressure gage provides a ready indication of the hydraulic reservoir air pressure and is used in conjunction with the bleed valve to indicate the air pressure status.
- (3) The air inflation valve is installed on the same fitting as the bleed valve and pressure gage. The air inflation valve is used to manually charge the reservoir with air or dry nitrogen.


G. Hydraulic Reservoir Vacuum Breaker Check Valve (See Figure 9.)

- (1) The hydraulic reservoir vacuum breaker check valve is installed on the regulator-aspirator mounting bracket, and connects to the tee fitting at the top of the reservoir. The valve is vented to ambient air. The purpose of this valve is to maintain atmospheric pressure in the reservoir, allowing hydraulic fluid to flow to the auxiliary hydraulic pump in the event of a failure of the reservoir pressurization system. The failure, or breakdown, of the pressurization system could cause a fluid starvation at the auxiliary hydraulic pump because of vacuum buildup in the reservoir.

H. Hydraulic Reservoir Air Chamber

- (1) The hydraulic reservoir air chamber is a small, cylindrical tank with a capacity of 700 cubic inches. It has two ports, an inlet port at the bottom of the chamber and an outlet port in one end of the chamber. The inlet port mounting boss is fitted with a drain plug. The air chamber is

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

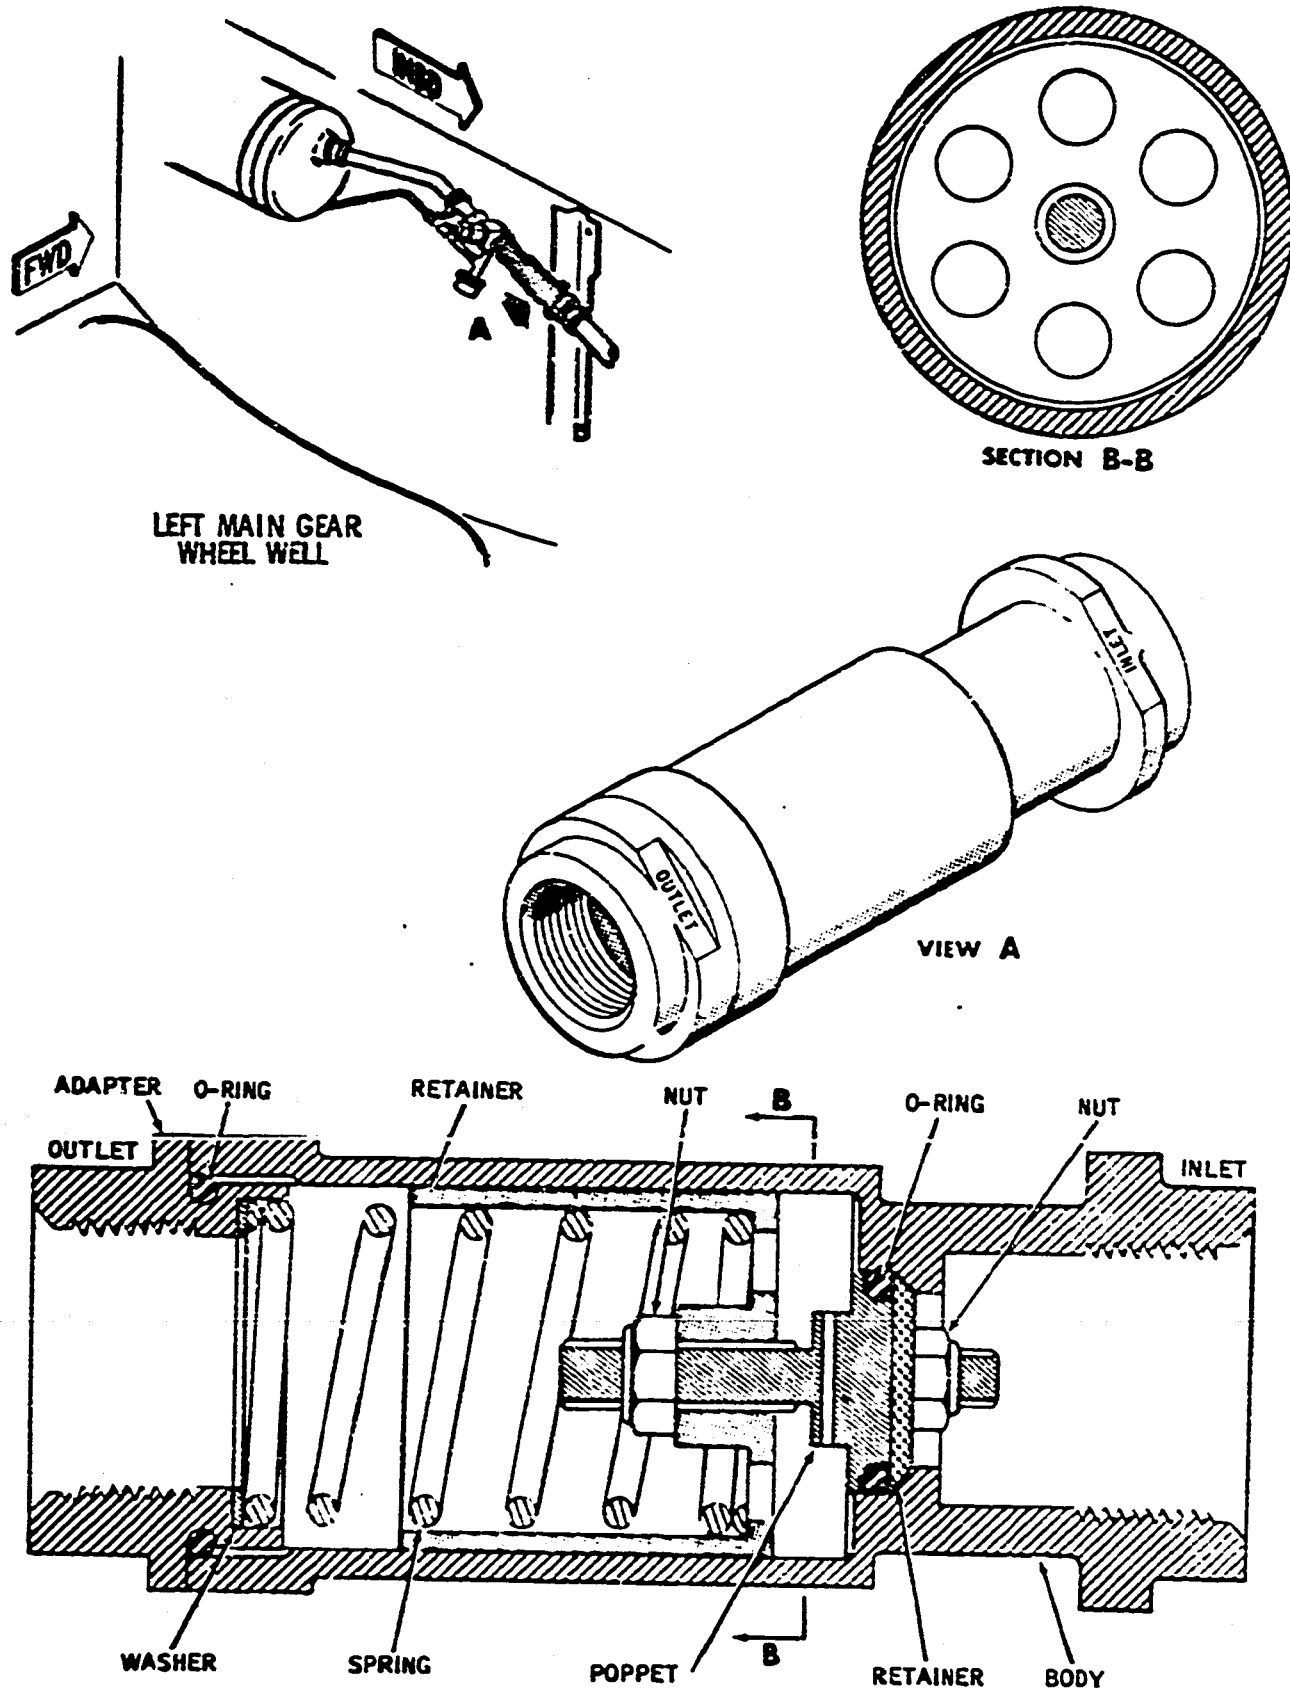

Hydraulic Reservoir Relief Valve  
 Figure 7


HA2-17

29-10-0  
 CODE 13  
 Page 17

Jun 15/67

Printed in U.S.A.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

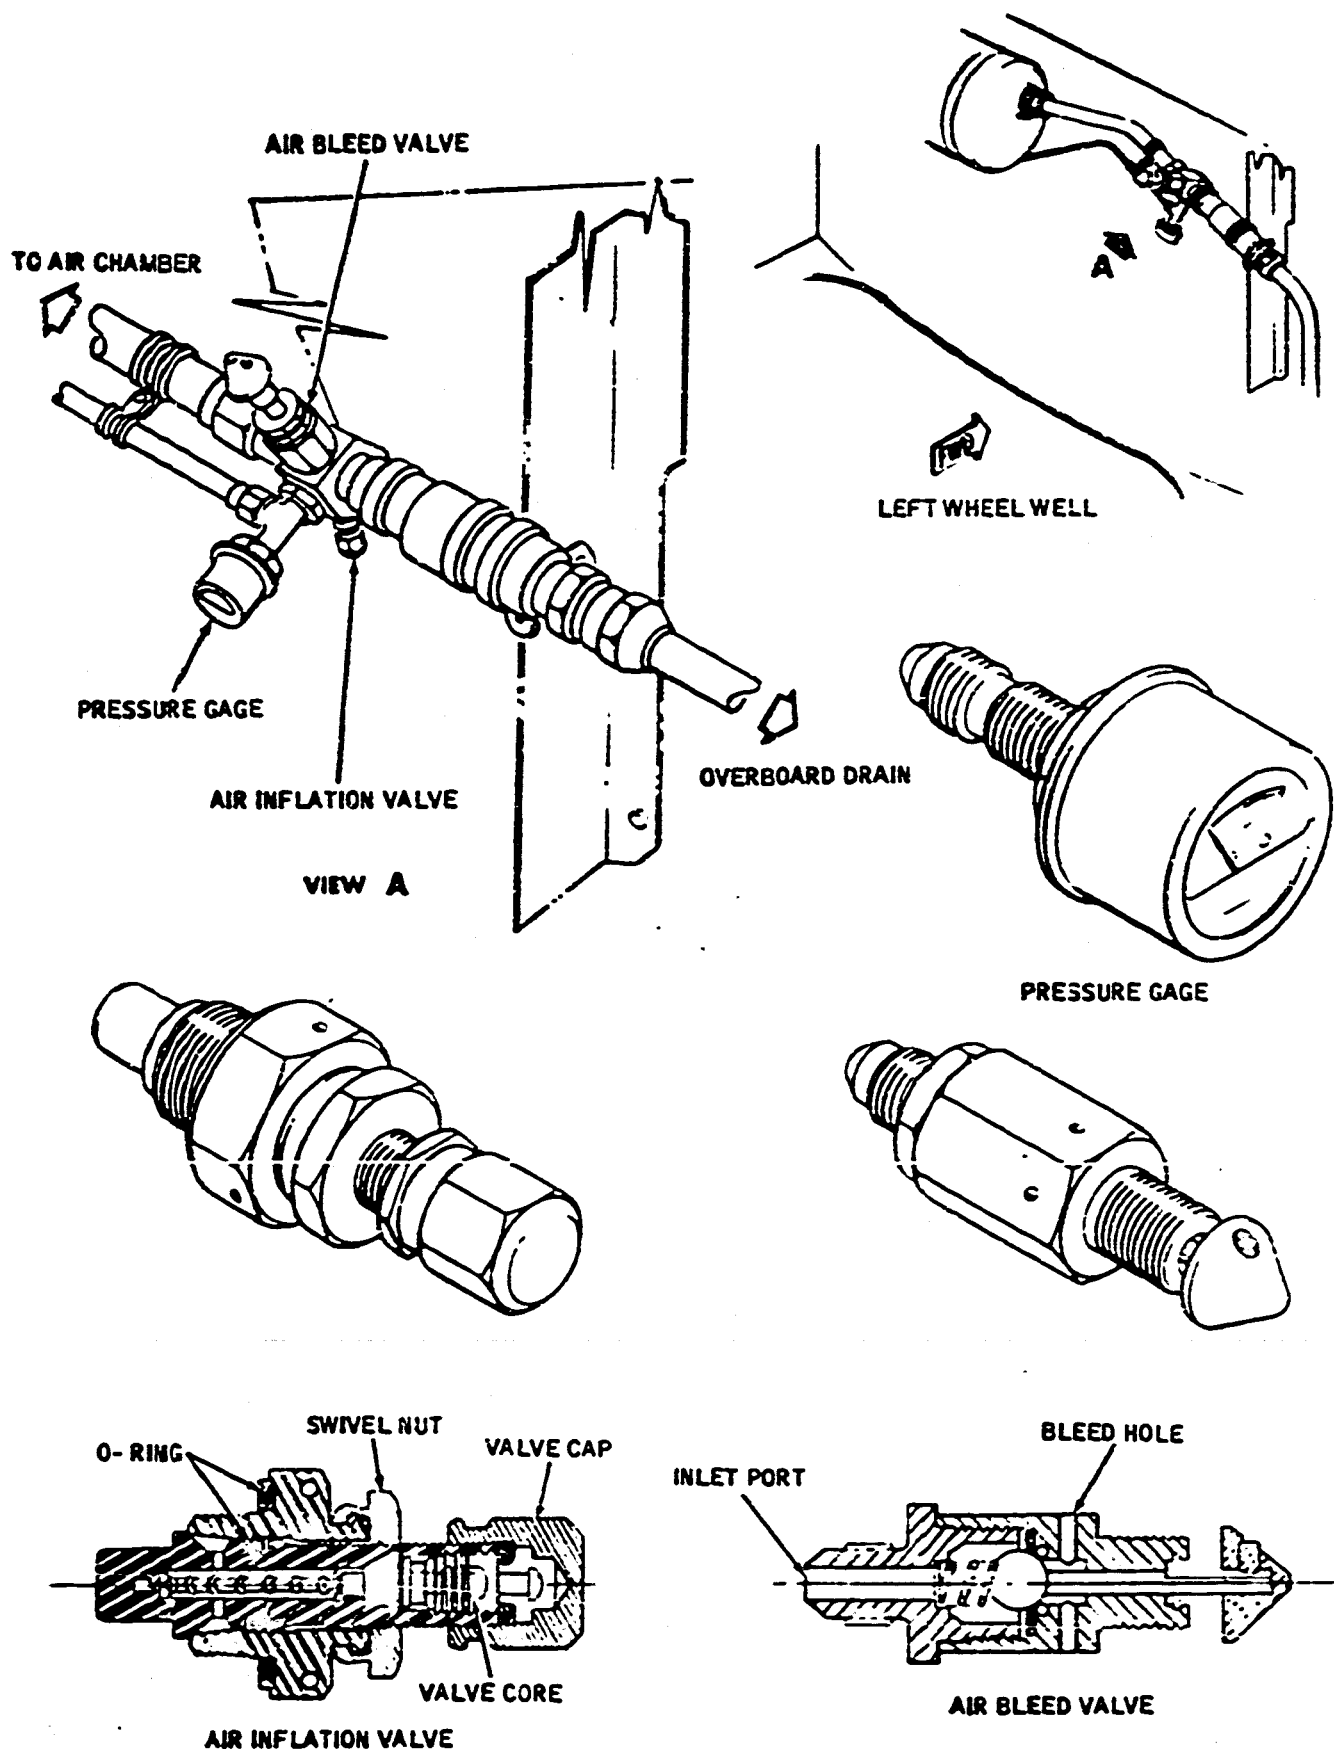

HA2-32

Reservoir Air Bleed Valve, Air Inflation  
 Valve, and Pressure Gage  
 Figure 8

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

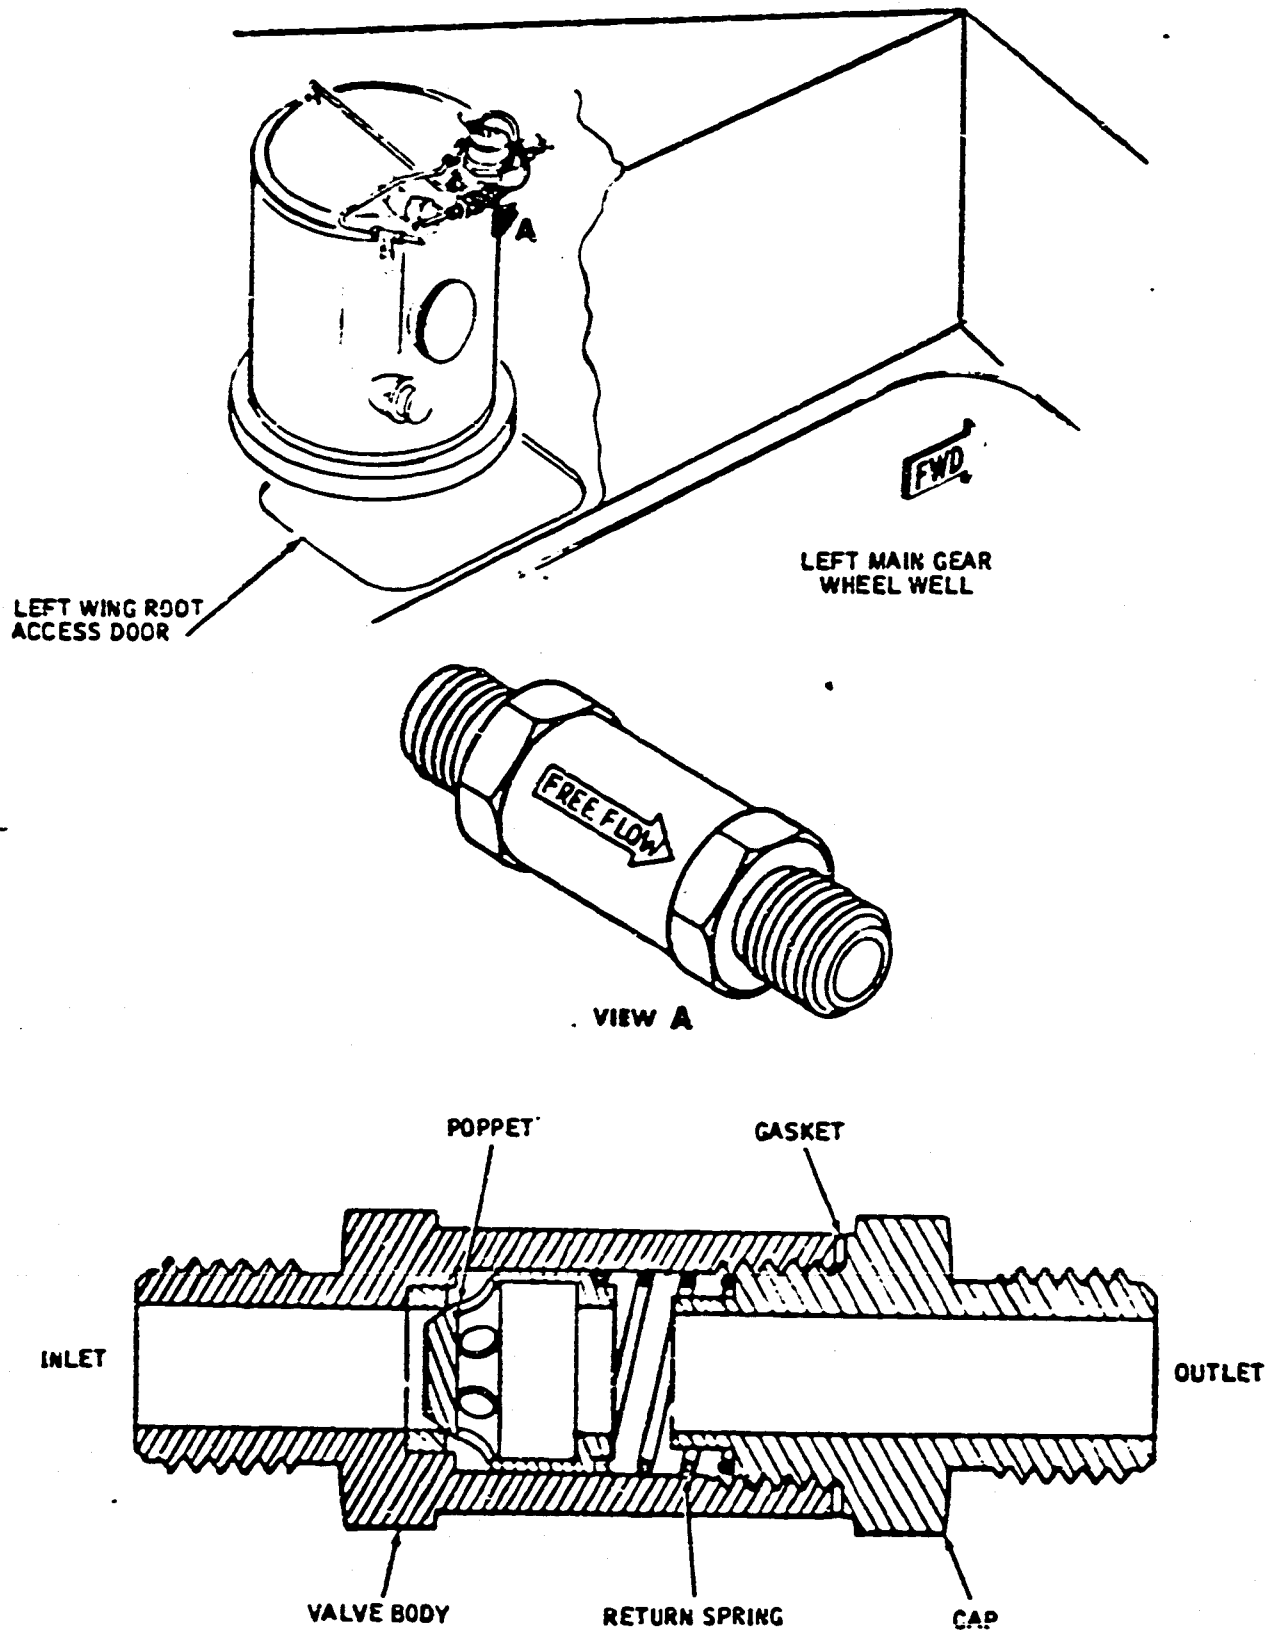

Hydraulic Reservoir Vacuum Breaker Check Valve  
Figure 9

HA2-33

29-10-0  
CODE 13  
Page 19

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

installed on the aft side of the rear spar in the left main gear wheel well, inboard and above the hydraulic reservoir filler assembly. Access to the air chamber is through the left main gear inboard door.

- (2) The air chamber provides for greater fluid capacity in the hydraulic reservoir by providing air and foam space for the reservoir in a separate container. Air pressure in the chamber is maintained by the regulator-aspirator and the air relief valve. The air pressure in the chamber and reservoir can be relieved, when desired, by the air bleed valve located downstream of the chamber. The air chamber is mounted higher than the reservoir filler assembly, to prevent overfilling of the reservoir from reducing the available air space and to prevent fluid from being vented overboard through the reservoir relief valve.


I. Hydraulic Reservoir Port B Return Check Valve (See Figure 10.)

- (1) The reservoir port B return check valve is installed in port B of the reservoir to prevent reverse flow of hydraulic fluid from the reservoir to the return line. The check valve is located on the reservoir in the left wing root and is accessible through the left wing root access door.
- (2) Externally and internally, the port B check valve is a standard-type check valve with a 1500-psi rating. A nominal pressure of approximately 8 psi unseats the poppet, permitting fluid to flow through the valve. When the reservoir pressure exceeds the return line pressure, the poppet will seat and reverse fluid flow will be prevented.


J. Engine Hydraulic Fire Shutoff Valve (See Figures 11 and 12.)

- (1) The engine hydraulic fire shutoff valve is a gate-type, mechanically controlled valve, installed in the supply line of each engine-driven hydraulic pump. The engine hydraulic fire shutoff valve is actuated from the flight compartment to prevent the flow of hydraulic fluid into the engine section.
- (2) The engine hydraulic fire shutoff valve is mounted on a 2-piece channel bracket which is installed inside the wing leading edge, aft of the firewall of each inboard pylon. Access to the valve is through the access door located on the lower side of the wing leading edge, outboard of either the left or right inboard pylon. Each valve is located approximately 30 inches inboard of the access door.
- (3) Internally, the valve consists of a valve arm, valve arm link, cam plate, and slide blade. The valve arm link attaches to the valve arm and is allowed to swivel through an arc in relation to the valve arm. The link has a stop that will contact the arm when the two have traveled to the valve closed, full overtravel position. In the full open pretravel position, the link contacts the arm stop.
- (4) A roller attached to the end of the link rides in, and extends through, a J-shaped slot in the cam plate. The rotation of the valve arm causes

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

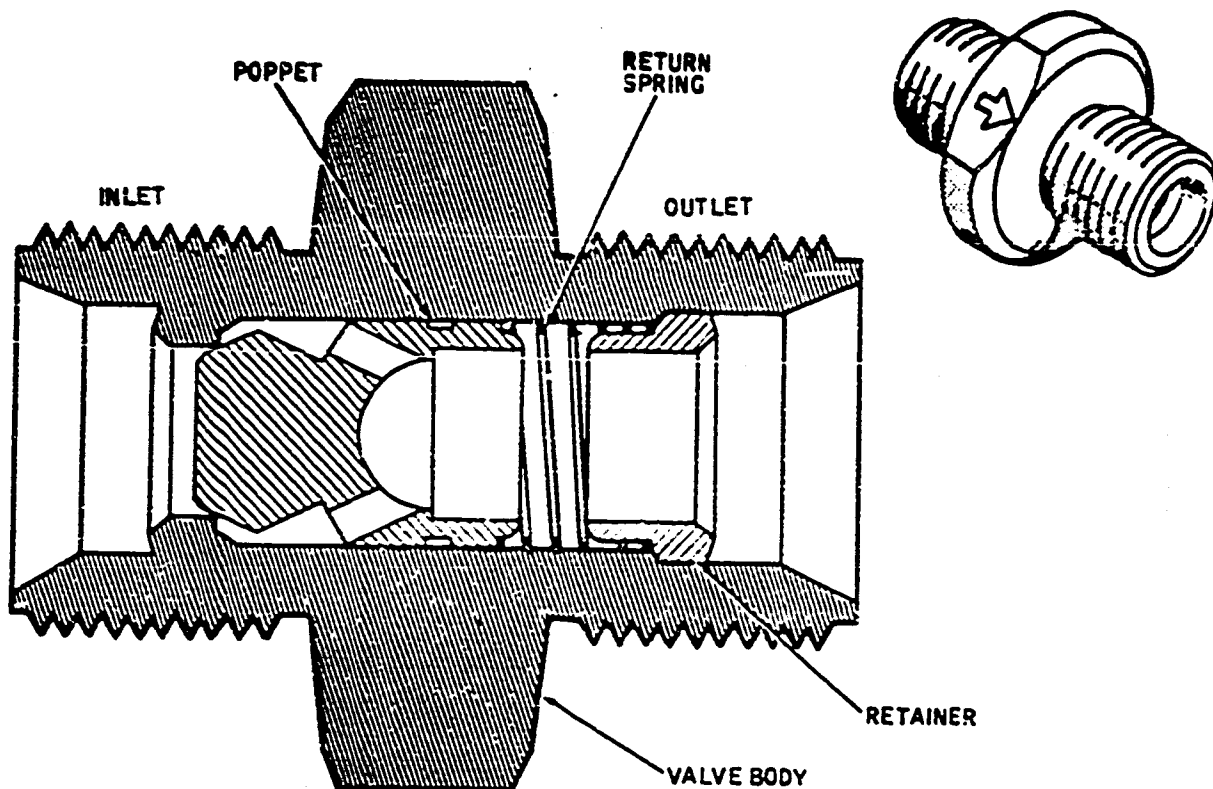

MINIATURE CHECK VALVE

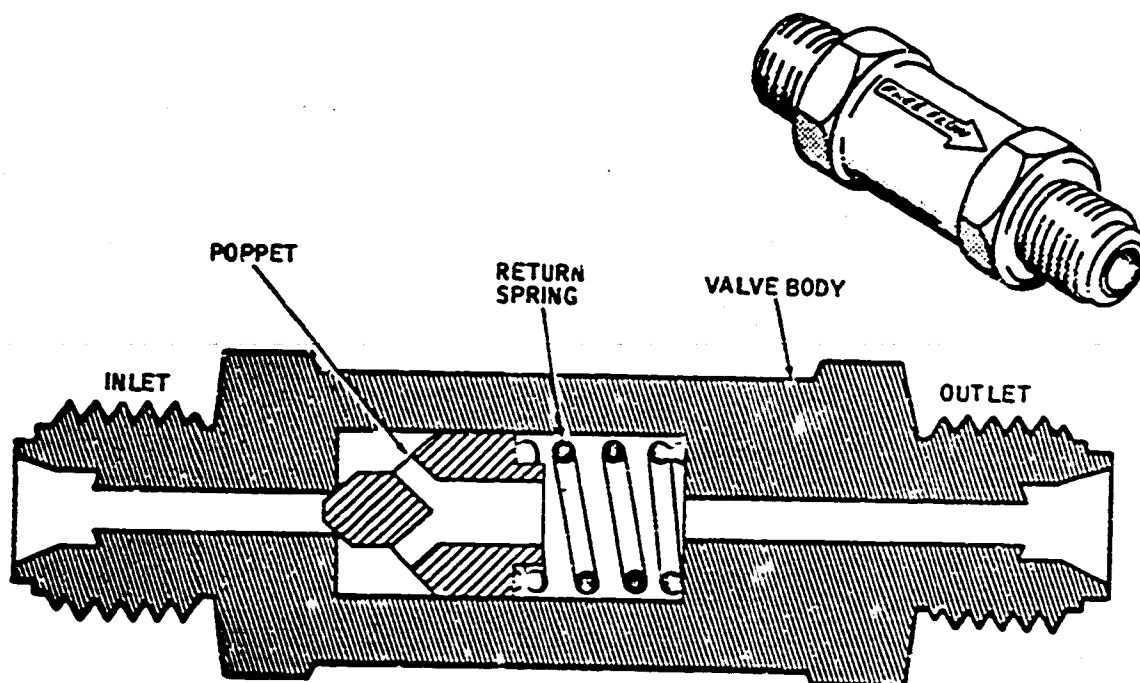

STANDARD CHECK VALVE

HA2-18A

Hydraulic Check Valves -- Typical  
 Figure 10


Oct 1/67

Printed in U.S.A.

29-10-0  
 CODE 13  
 Page 21



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

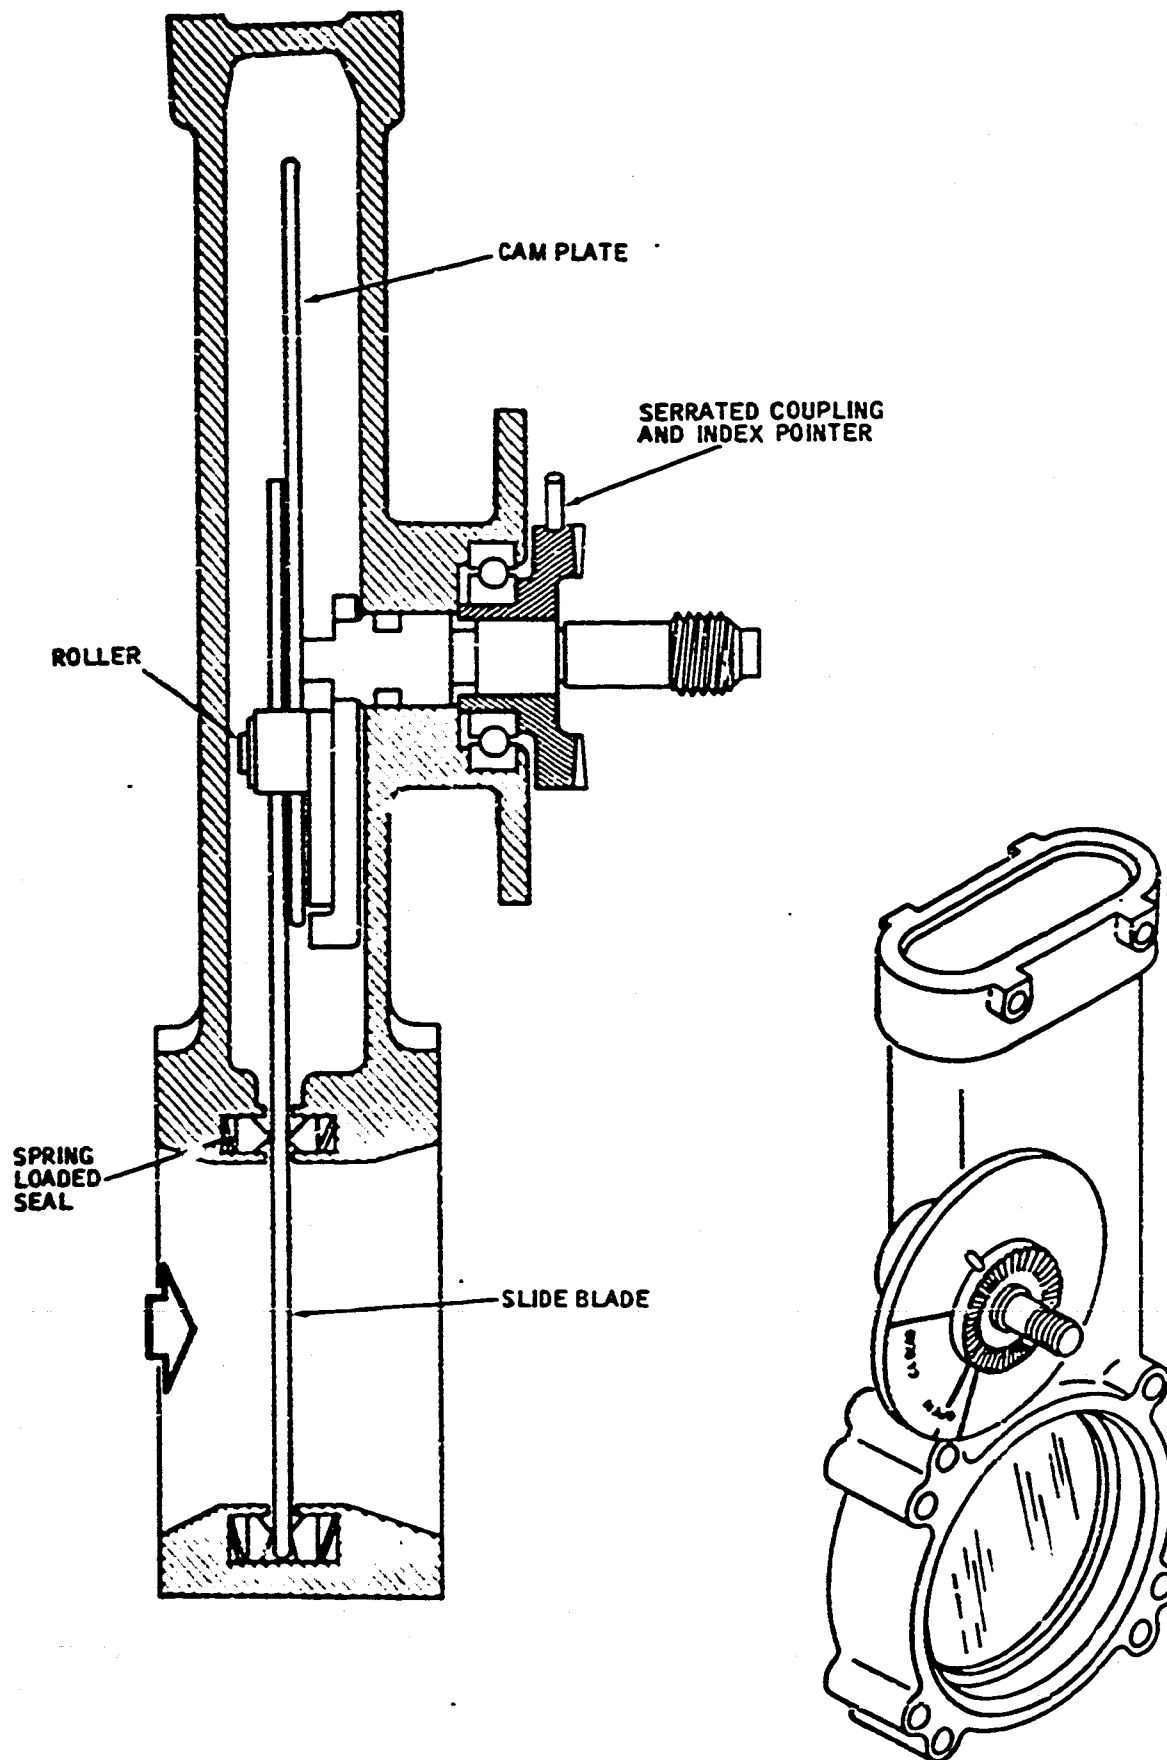

Engine Hydraulic Fire Shutoff Valve -- Schematic  
 Figure 11


29-10-0  
 CODE 13  
 Page 22

Printed in U S A

HA2-2209

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

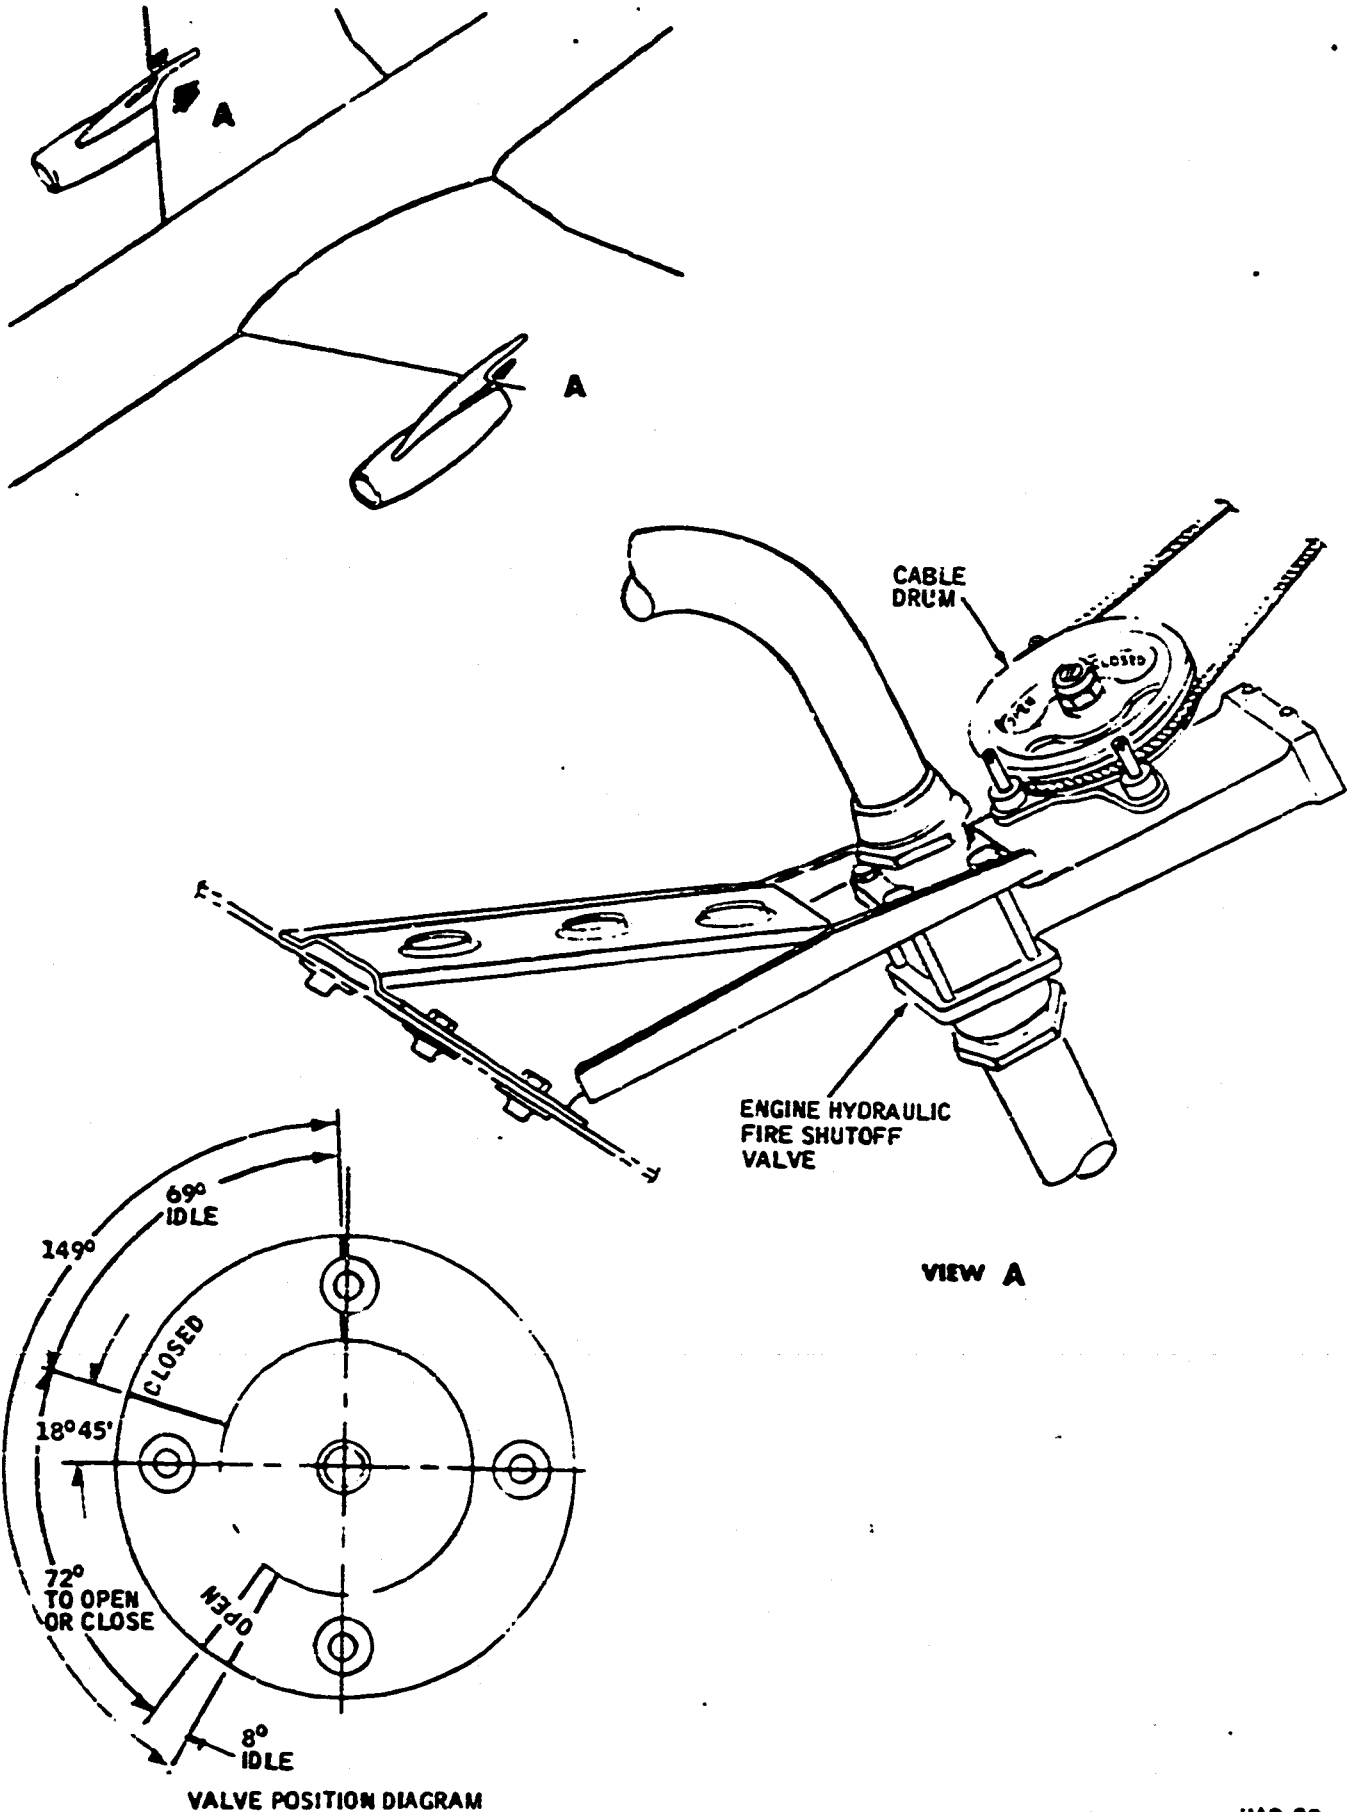

Engine Hydraulic Fire Shutoff Valve  
 Figure 12

HA2-22

29-10-0  
 CODE 13  
 Page 23

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

the link roller to follow the cam slot, allowing the arm and link to move through independent arcs.




- (5) The slide blade (gate of the valve) is slotted near the one end and also receives the link roller extending through the cam slot. The slide blade is positioned parallel to the cam plate and is guided by two grooves in the housing. This will allow the blade to open or close through porting of the valve by the action of the arm and link. The cam plate is pinned to the valve shaft, securing it rigidly in two positioning grooves in the housing. A pin-indicator is provided to relate valve position to a reference plate placarded open and closed.
- (6) The engine hydraulic fire shutoff valves are cable actuated by the fire control handles, located on the overhead switch panel in the flight compartment. When the fire control handle for either inboard engine is moved, the cable system rotates the drum which is attached to the corresponding shutoff valve shaft. This action extends the valve blade into the fluid passage to block the flow to fluid.

The valve operates from open to close by clockwise rotation of the cable drum. The valve gage will idle during the first 8 degrees of rotation of the cable drum, and then will close in the next 72 degrees. The cable drum will continue to rotate the shaft for an additional 69 degrees after the gate valve is closed, locking it overcenter. Total travel of the cable drum is 149 degrees.

#### K. Engine-Driven Hydraulic Pump (See Figure 13.)

- (1) A variable-displacement, pressure-compensated, engine-driven hydraulic pump is installed on each inboard engine. The pump incorporates a solenoid bypass feature for reducing the output of the pump. The bypass valves are controlled by two engine hydraulic pump switches in the flight compartment. The switch for the hydraulic pump on engine No. 2 is placarded left, on and bypass. The switch for the hydraulic pump on engine No. 3 is placarded right, on and bypass. When either of the two engine hydraulic pump control switches is placed in the bypass position, the bypass valve solenoid for that hydraulic pump is energized and the pump pressure decreases to approximately 300 ( $\pm 100$ ) psi. When either switch is in the on position, the control circuit to the corresponding bypass valve is open and the hydraulic pump operates normally in the pressure range of 2850 to 3050 psi. The pump provides a continuous, non-pulsating flow of hydraulic fluid, under pressure, to the hydraulic manifolds for distribution throughout the hydraulic system. Each of the engine-driven pumps is located on the accessory drive pad of the inboard engines. These pumps are accessible through the doors on the right side of the nacelles.
- (2) Three case drain ports are provided: two are on the yoke assembly housing, and the third is on the casing for the pressure control valve, adjacent to the inlet port fitting. The case drain port on top of the yoke assembly housing is full of fluid at all times. This drain connection is ported back to the low-pressure return port at the reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

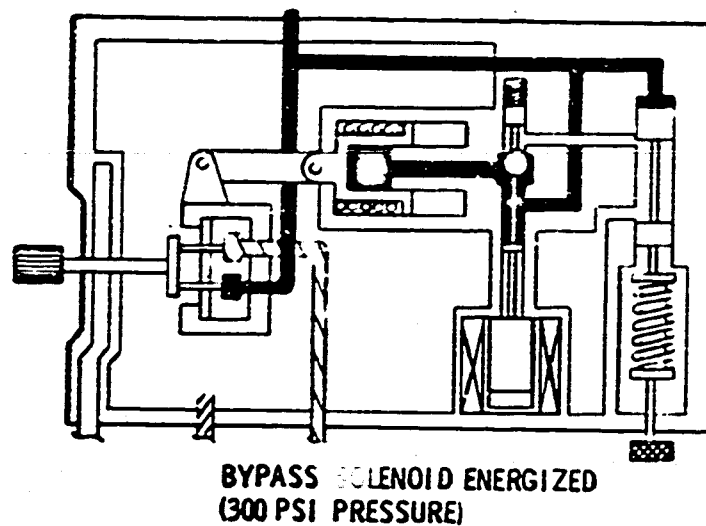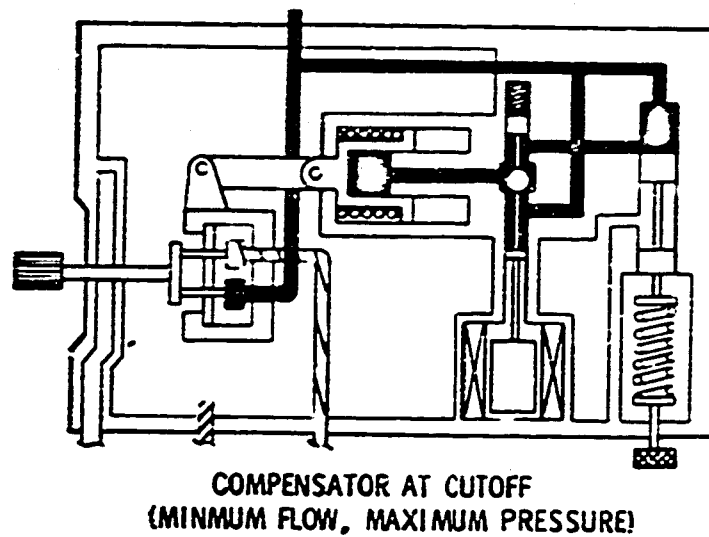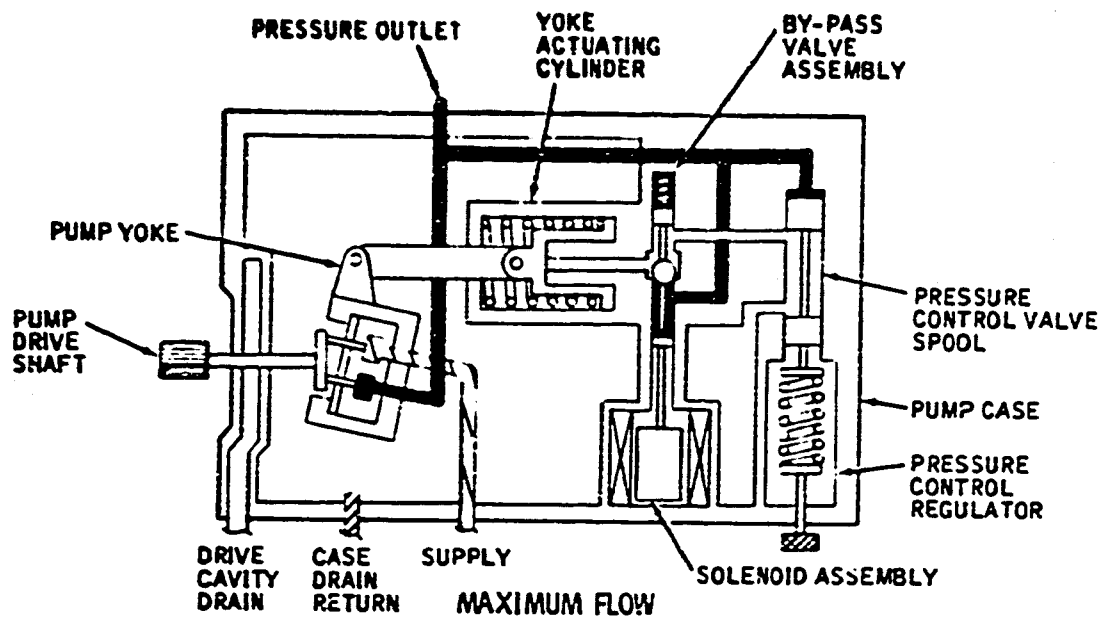

- PRESSURE
  - CASE DRAIN
  - SUPPLY
  - DRIVE CAVITY DRAIN
- HA2-837

Engine-Driven Hydraulic Pump Pressure  
 Flow -- Schematic  
 Figure 13

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 13  
 Page 25

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

The inlet port fitting is on top of the pump housing and the outlet port fitting is opposite to it on the bottom of the housing.

- (3) The yoke control piston casing is an integral part of the pump case. Four self-locking nuts are used to hold the piston casing end-plate in position. The bypass valve assembly, consisting of the valve body and a solenoid assembly, is mounted externally on the pump case, under the yoke control piston casing. This solenoid valve is provided with an electrical connector. A pressure control regulator is installed on the bypass valve body by means of four bolts. This regulator is cylindrical and is provided with an external adjustment screw. A lock screw is used to retain the adjusting screw after the adjustment has been made.
- (4) Hydraulic fluid enters the pump through an inlet port. Passages in the yoke carry the fluid to the valve plate, which ports the fluid to the cylinder block. The nine pistons in the cylinder block are actuated by the rotating drive shaft, thereby pressurizing the fluid. From the cylinder block, the fluid is routed to the outlet port of the yoke and then to the pump pressure lines. The pressure control regulator is actuated by pump output pressure that is bled to the regulator. The regulator meters the pressure to the yoke control piston, which positions the yoke.
- (5) The maximum pump pressure is determined by the adjustment of the pressure control regulator. The pressure control regulator allows maximum output flow (22.5 gpm at 3500 rpm) up to 2850 psi system pressure. When this pressure is reached, the yoke assembly starts to move towards the zero flow position.
- (6) Pressure continues to rise until the displacement is reduced from maximum flow to zero flow and 3000 psi is reached. The pump pressure stabilizes in accordance with system demand.

L. Engine-Driven Hydraulic Pump Check Valves (See Figure 10.)

- (1) Two check valves, rated at 3000 psi, are installed in the lines from each engine-driven hydraulic pump. One check valve is installed in the pressure line and the other is in the case drain line. The check valves in the pump pressure lines prevent reverse flow of hydraulic fluid through the pump, when the pump is inoperative or when external hydraulic pressure is supplied to the system. Access to the valves can be gained through an access door in the forward right apron of each inboard pylon. The valves are mounted on the exterior wall of the inlet box by means of the bulkhead fittings and retaining nuts.
- (2) Normal operating pressure will unseat the poppet, and fluid will flow through the valve. When pressure downstream of the valve exceeds pressure from the pump, the pressure, with the aid of the return spring, will seat the poppet. This prevents reverse flow of hydraulic fluid through the pumps.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


M. Engine-Driven Hydraulic Pump Case Drain Filter (See Figure 14.)

- (1) A line-type, micron filter, for use in a low-pressure hydraulic system, is installed in the engine-driven hydraulic pump case drain return line between the pump flow check valve and the hydraulic system reservoir. The case drain filter is installed on the aft surface of the rear spar opposite the leading edge of the inboard flap assembly. One filter is used for each engine-driven pump. Access is gained to the filter by lowering the flaps. A second check valve is installed adjacent to the filter in the downstream side of the case drain return line.
- (2) Externally, the filter is approximately 5 inches high and 2 inches wide, with ports marked inlet and outlet. The bowl is cylindrical in shape, with hex-shaped wrench flats at the lower end. A self-sealing, magnetic drain plug is installed in the bottom end of the filter bowl. The filter element is made of chemically treated paper.


N. Dual Filter and Relief Valve (See Figure 15.)

- (1) The hydraulic power system dual filter and relief valve consists of two filters and two relief valves installed in the same body. The unit filters the hydraulic fluid from the two engine-driven hydraulic pumps, and the pressure relief valves assure that excessive pressures do not build up in the pressure line from the pumps. The unit is located in the left main gear wheel well on the lower portion of the rear spar, approximately 1 foot outboard of the centerline shear web.
- (2) The unit consists of a casting with a flange-mounted pressure inlet port on each end. Two pressure outlets are located on the top of the casting. One outlet, centrally located, is the main pressure outlet to the system selector valve. The other, located to the left of the selector valve port, is the pressure outlet to the air pressure regulator-aspirator. The return outlet port for the relief valve portion of the unit is located on the center of the aft face of the body, canted upward. The nose gear return line is connected to a check valve installed in a return line port, located between the two filter bowls.
- (3) The pressure relief valves are located behind the pressure inlet ports and are connected to the return outlet port of the unit. The inlet from the nose gear return line is routed through the casting to the return outlet port.
- (4) If either of the filter elements becomes clogged, pressure above 3300 psi at the inlet port will unseat the poppet. Pressure above 3500 psi will allow full flow of 22.5 gpm to flow to the return port of the unit and back to the reservoir. The relief valves will reseal at approximately 3000 psi.
- (5) A check valve is installed in the system selector valve port to prevent reverse flow of pressure through the filter during auxiliary hydraulic pump operation.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

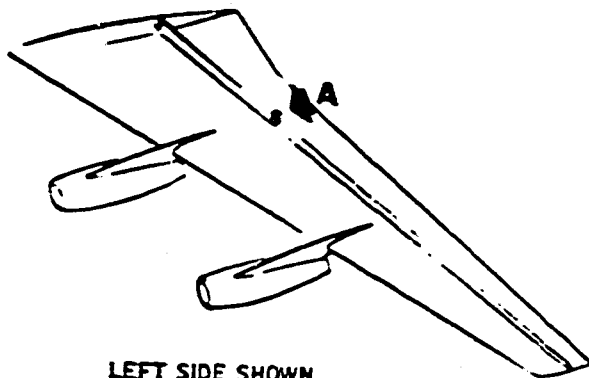

LEFT SIDE SHOWN  
 RIGHT SIDE OPPOSITE

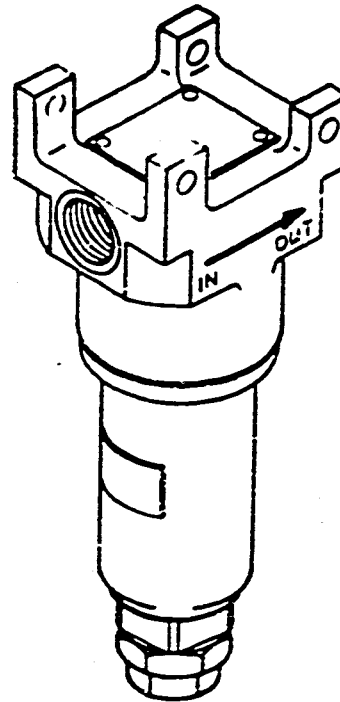


VIEW A

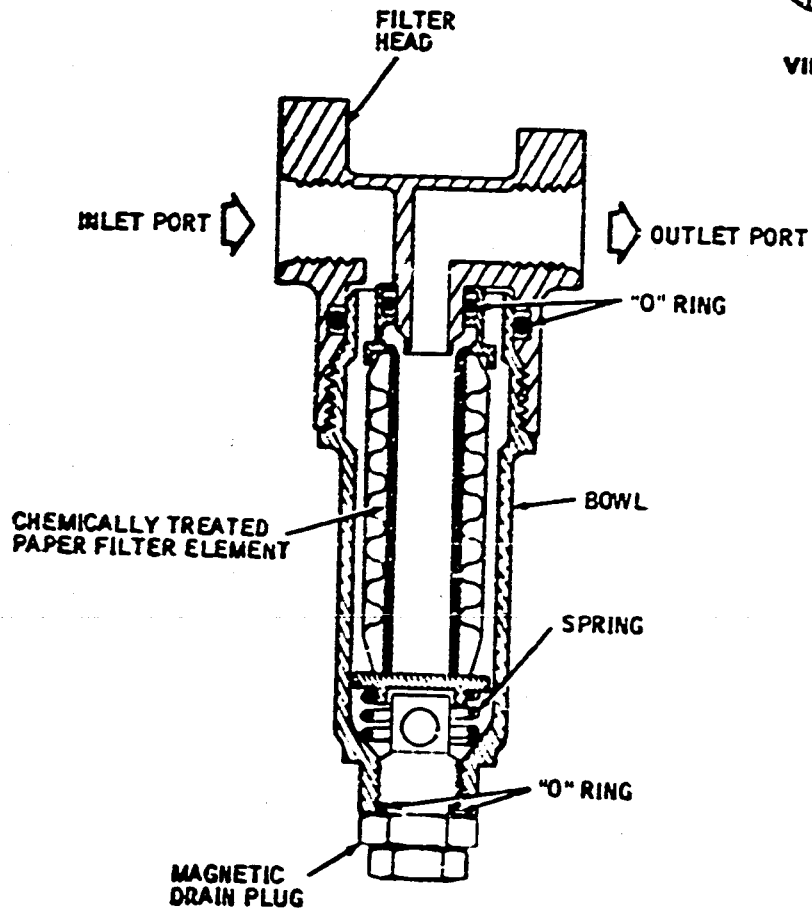

HA2-31

Engine Driven Hydraulic Pump Case Drain  
 Filter -- Cutaway View  
 Figure 14

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

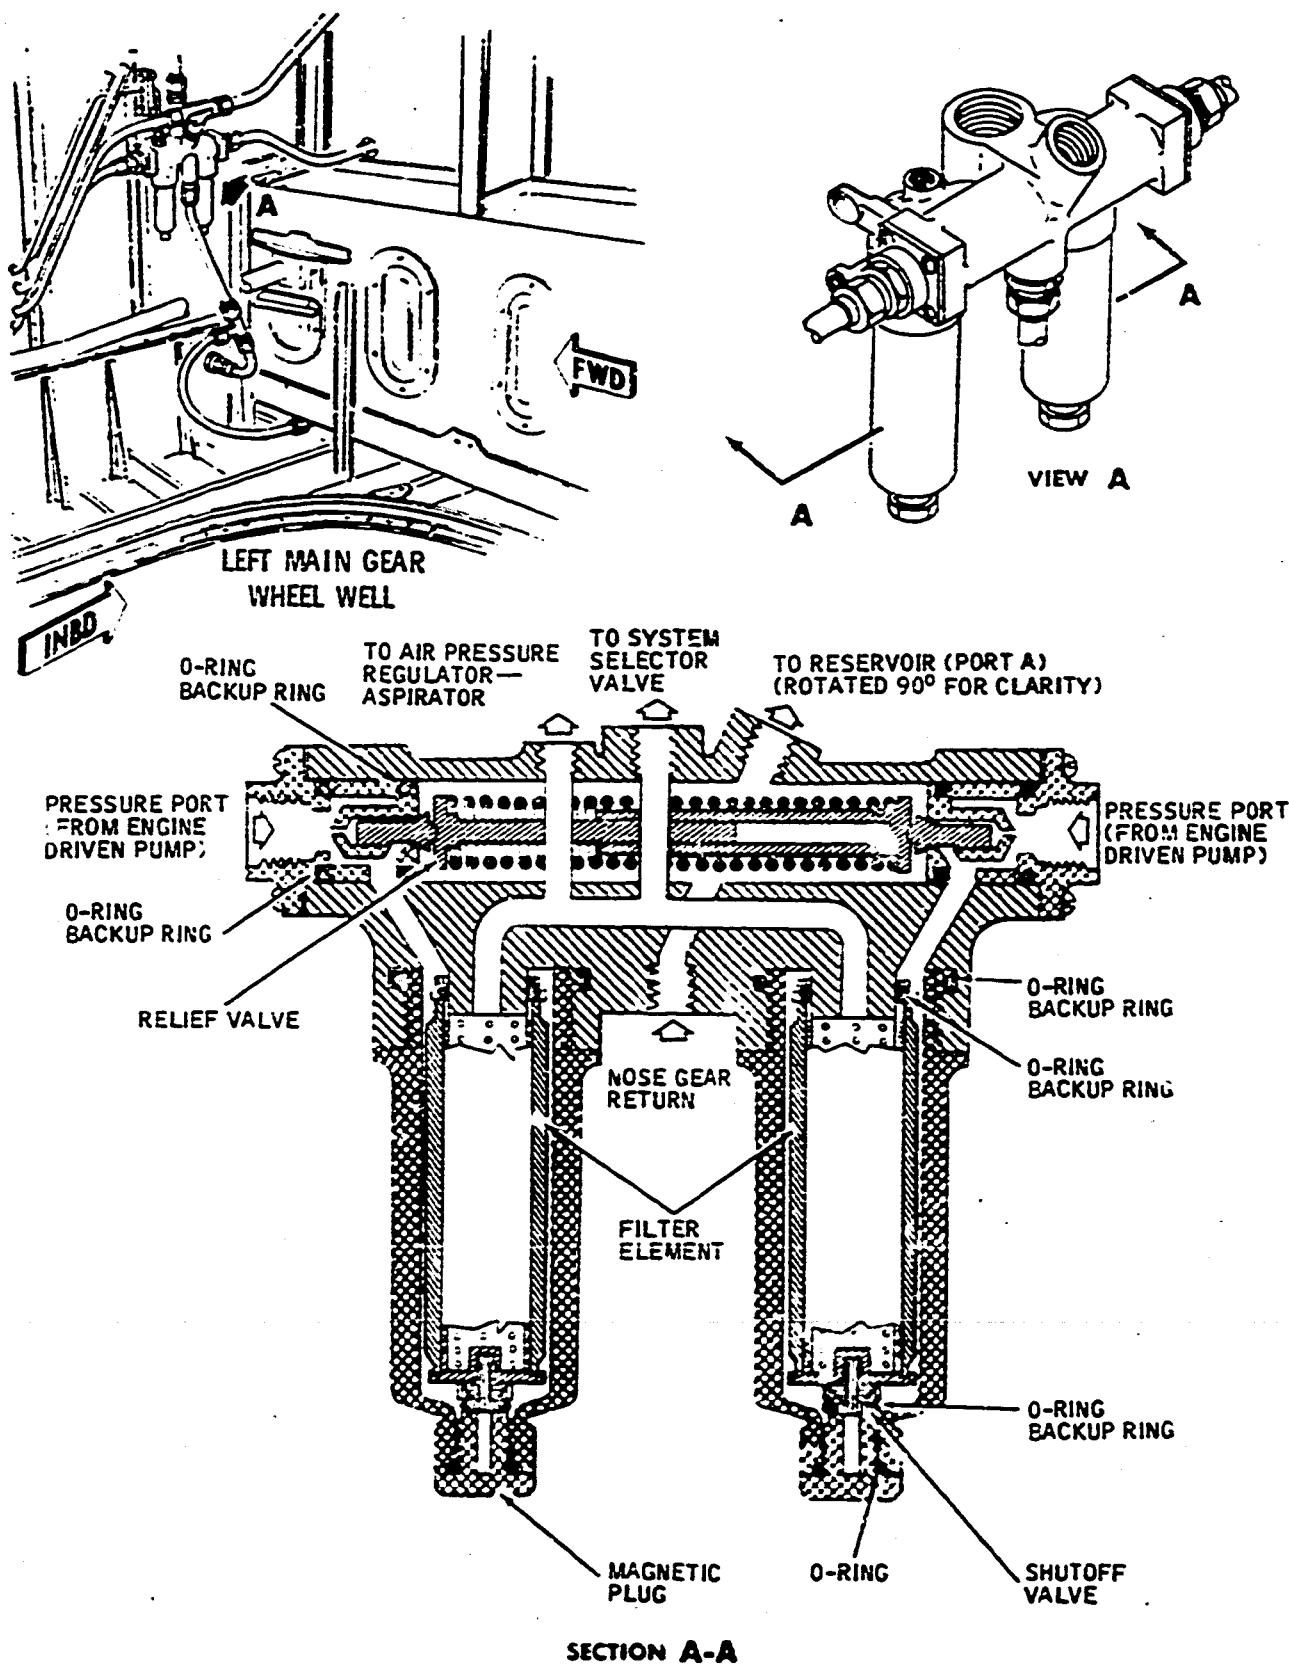

Dual Filter and Relief Valve -- Cutaway View  
 Figure 15

Jun 15/67

Printed in U.S.A.

HA2-20

29-10-0  
 CODE 13  
 Page 29



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


O. System Selector Valve (See Figures 16 and 17.)

- (1) The system selector valve is a 3-position valve which permits directional control of fluid under pressure. The valve is installed on the left hydraulic power manifold and is accessible through the left main gear inboard door.
- (2) The selector valve pressure-to-system port and the return port are directly ported to the manifold. The engine pump pressure enters the valve through a port on the large end of the valve, and the auxiliary pump inlet and alternate ports are located at the top, toward the aft end of the valve. The valve control crank is attached to a push-pull rod and a cable sector.
- (3) Operation of the system selector valve is controlled by a lever located on the right side of the system engineer's control pedestal. When the control lever is moved to the selected position, the cable system, through the sector and crank, operates the valve positioning lever to drive the slide spool assembly to the selected position. When the control lever is placed in the general system (normal) position, the selector valve is actuated, causing hydraulic fluid to enter the valve through the system pressure port. The fluid is then directed into the manifold through the pressure-to-system port. In the general system (normal) position, fluid from the auxiliary pressure port is also routed to the pressure-to-system port. In the bypass/general system position, the selector valve ports engine pump pressure into the manifold through the return port. In this position, the auxiliary pump pressure is ported to the general system. In the general system/main gear down and flaps position, pump pressure is routed through the alternate port, at the top of the valve, for alternate operation of the flaps and the landing gear downlock cylinders. Internal leakage provides lubrication for the moving parts of the valve.

P. Left Hydraulic Power Manifold (See Figure 18.)

- (1) The left hydraulic power manifold distributes fluid pressure from the hydraulic pump (any one of the three pumps), through control valves to the various airplane hydraulic subsystems. The left power manifold is located overhead in the left wheel well. Access to the left manifold is through the left main gear inboard door.
- (2) Three valve-mounting pads are provided on the manifold. The system selector valve-mounting pad is located on top of the manifold body. Of the two remaining mounting pads, located on the underside of the manifold, the inboard pad is capped and not used. The outboard mounting pad is used for the bogie swivel unlock control valve. Four ports are provided on the inboard end of the manifold. Two of these ports are pressure outlet ports: one, located on the aft face of the manifold, is for the flight controls; and, the other, located on the underside of the manifold, ports fluid to the priority valve, which, in turn, ports fluid to the nose gear and the right power manifold. The other two ports are return outlets, located immediately forward of the manifold pressure

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

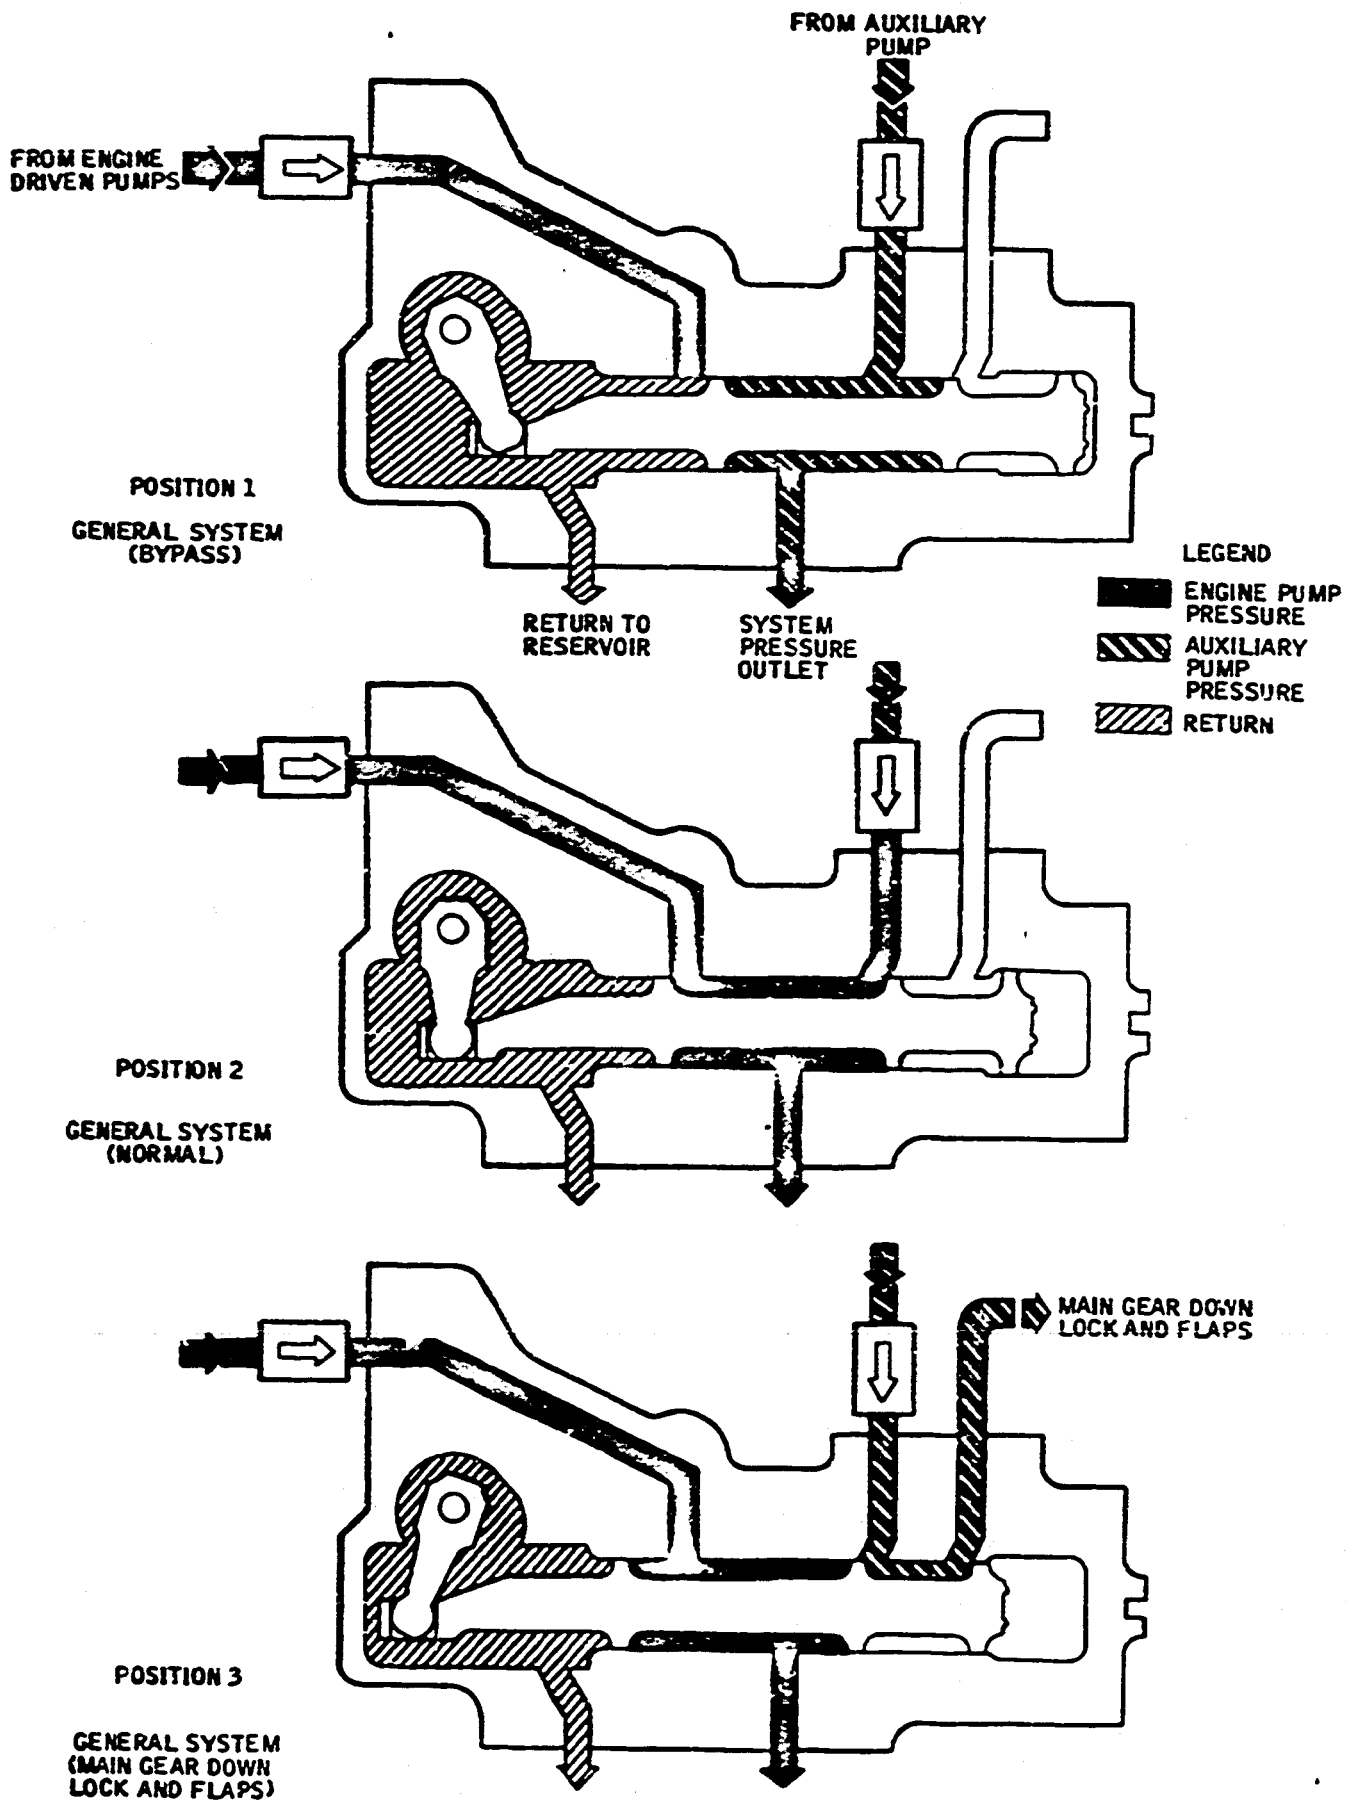

System Selector Valve -- Schematic  
 Figure 16



HA2-26

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 13  
 Page 31

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

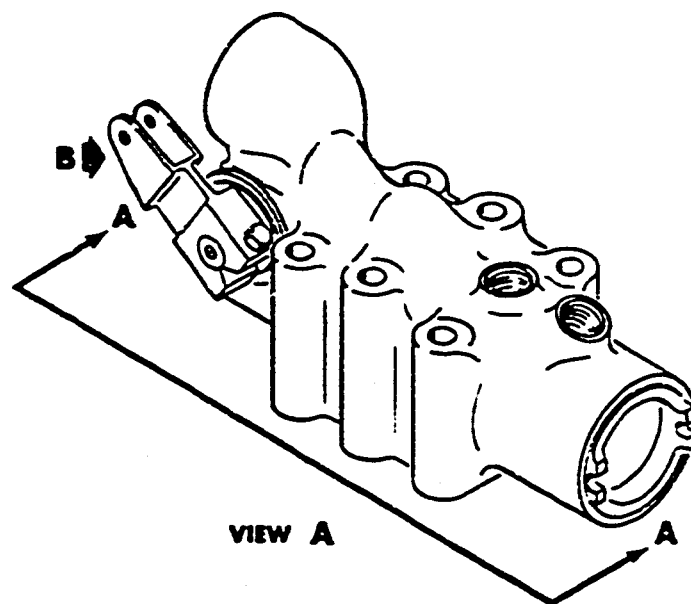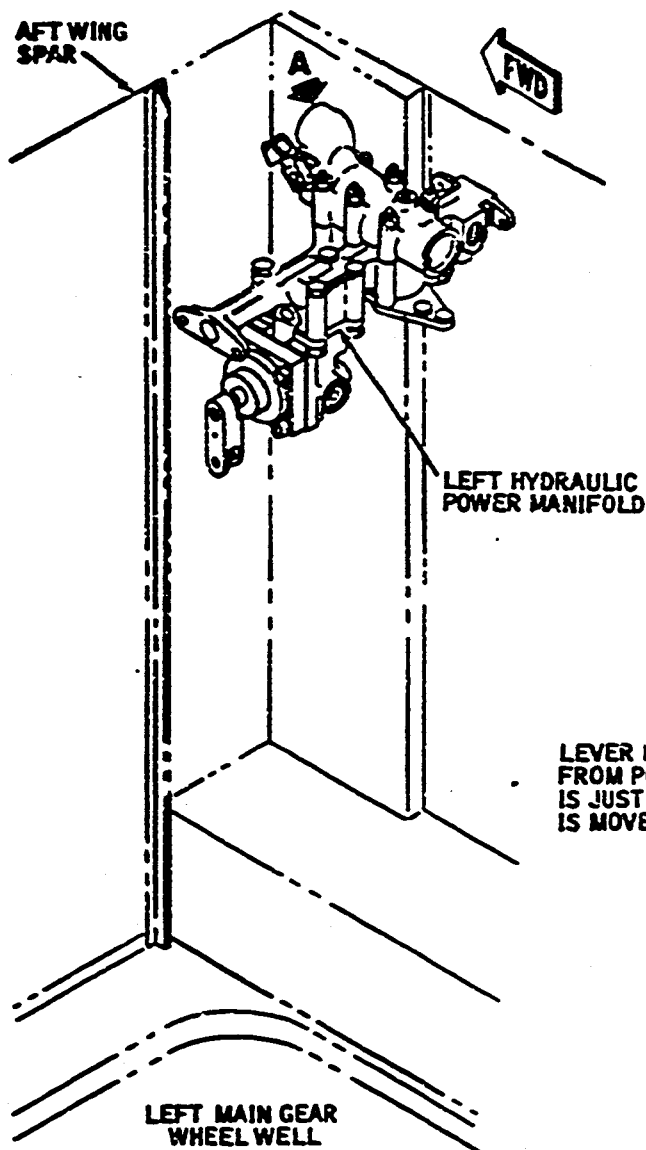

LEVER POSITION WHEN FLOW FROM PORT M TO PORT L IS JUST STOPPED AS LEVER IS MOVED TOWARD POSITION 3

GENERAL SYSTEM (NORMAL) POSITION 2

GENERAL SYSTEM (MAIN GEAR DOWNLOCK AND FLAPS) POSITION 3

$6\frac{1}{4}^{\circ} (\pm 1/4^{\circ})$


$18\frac{1}{2}^{\circ}$  (REF)

$28^{\circ}$  (REF)

$55\frac{3}{4}^{\circ} (\pm 5^{\circ})$

GENERAL SYSTEM (BYPASS) POSITION 1



VIEW B

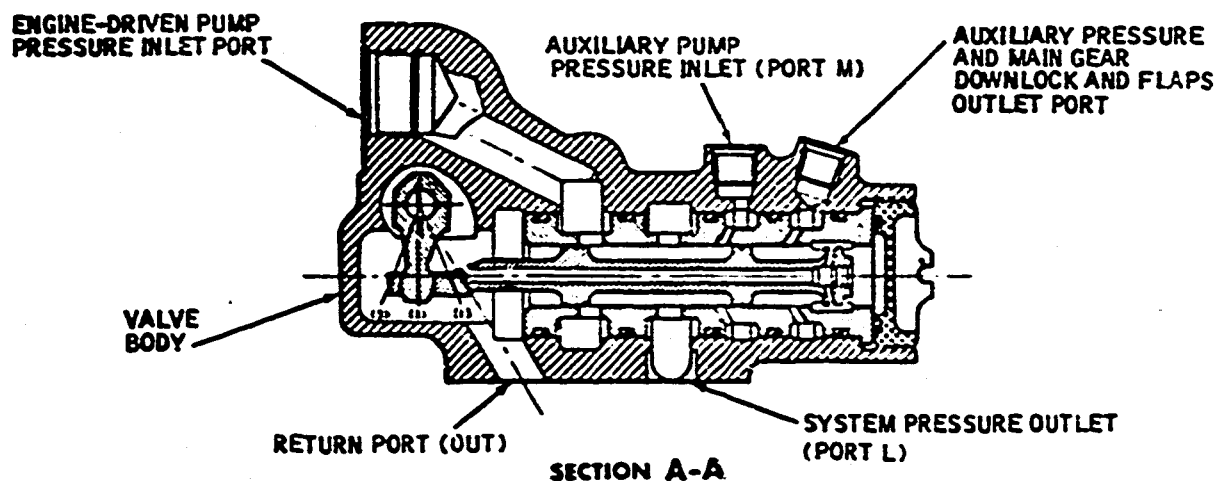

HA2-27

System Selector Valve -- Cutaway View  
 Figure 17

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

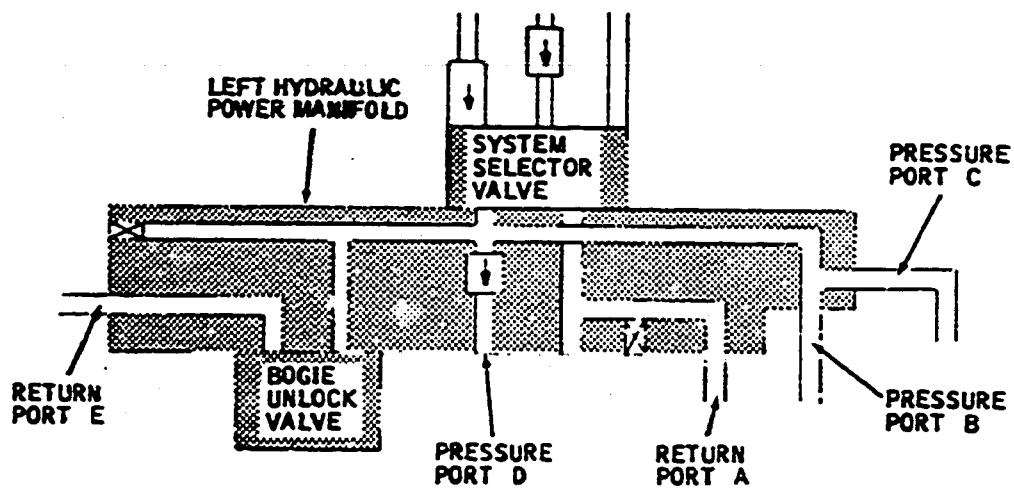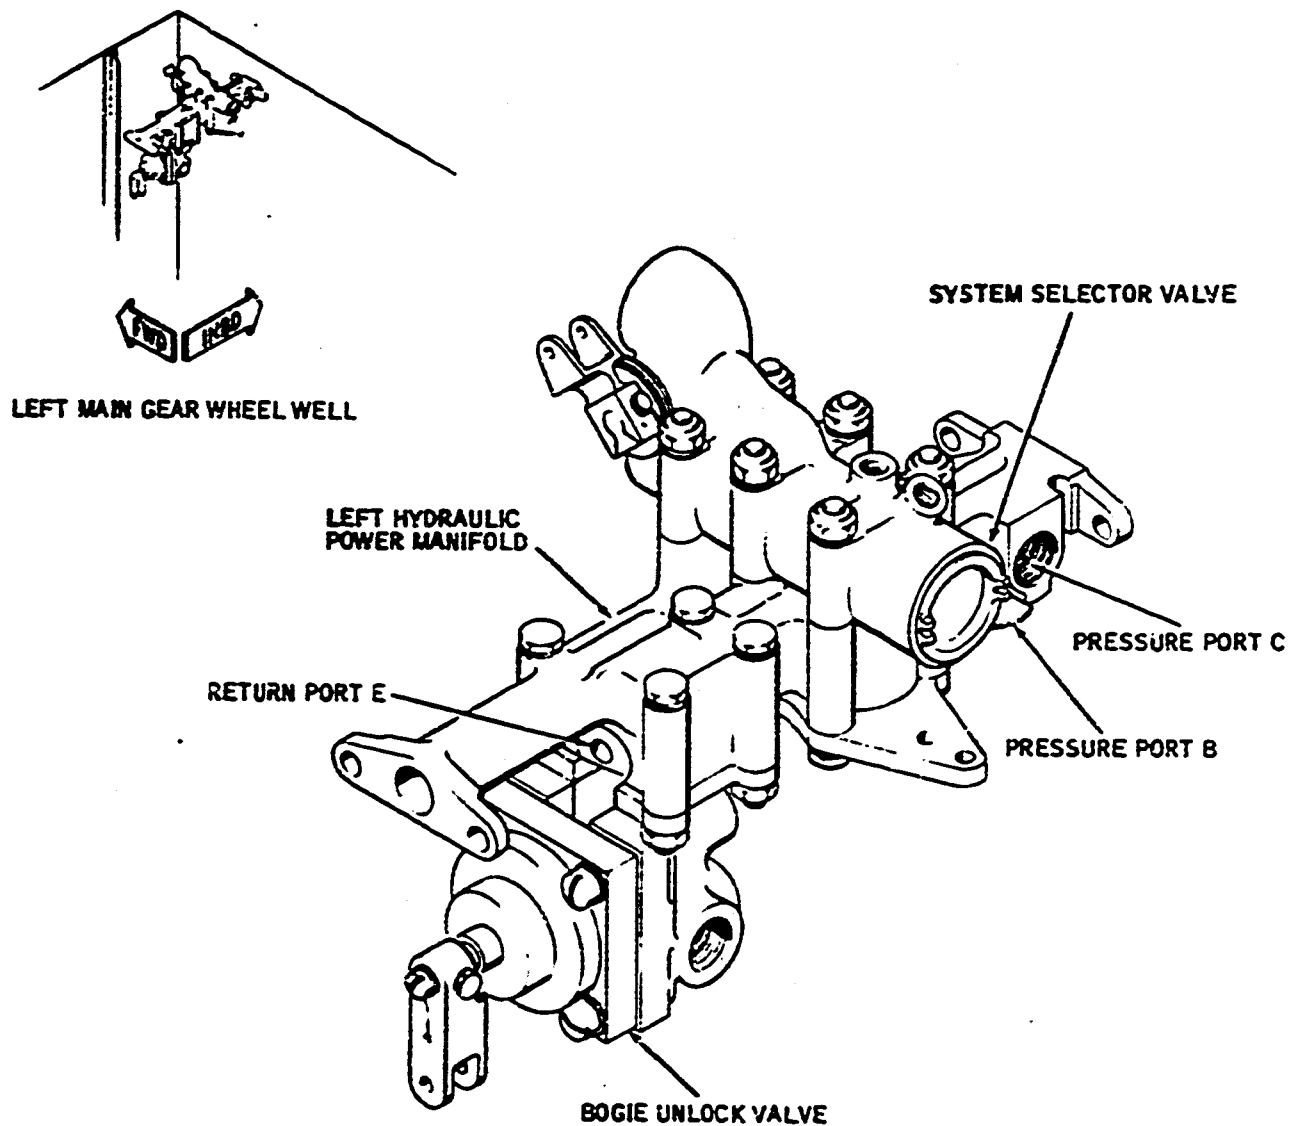

Left Hydraulic Power Manifold -- Schematic  
 Figure 18

HA2-28

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 13  
 Page 33

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

outlet port. One is connected by a line to the right manifold, and the other is connected to the low-pressure return port of the reservoir. The pressure line to the nose gear control valve is teed into the manifold pressure connecting line. A reservoir return line is teed into the manifold return line. The two ports on the inboard mounting flange were used for drilling the internal passages of the power manifold and are plugged and safety wired to prevent use.


**Q. Right Hydraulic Power Manifold (See Figure 19.)**

- (1) The right hydraulic power manifold distributes fluid pressure from the hydraulic pumps (engine-driven or auxiliary, or any combination of these three pumps), through the control valves to the various hydraulic subsystems. The right hydraulic power manifold is located overhead in the right wheel well. The manifold is held in place with braces and is accessible through the right main gear inboard door.
- (2) The manifold contains passages for pressure and return fluid distribution, four check valves, ports for pressure and return lines, and mounting pads for the various control valves.
- (3) The right manifold receives fluid pressure from the left manifold. Pressure is ported through check valves to the wing flap control valve, to the slot control valve, to the main gear control valve, to the brake control valve, to the brake pressure transmitter, and to the brake accumulators.
- (4) Auxiliary hydraulic pressure is ported from the alternate port of the system selector control valve into port K in the right manifold. Port K is located inboard of the spoiler control valve. From port K, auxiliary hydraulic pressure is ported through a check valve to the downstream side of the wing flap control valve check valve and into the wing flap control valve for alternate operation of the wing flaps.
- (5) The return passage from the wing flap control valve ports fluid to return port A. The brake control valve return passage ports fluid into return line B through a two-way restrictor. The main gear control valve downline return fluid uses a separate port in the valve, bypasses the manifold, and returns the fluid directly to A return line to the reservoir. The upline in the main gear control valve uses the same return port, return port B, in the manifold as the brake control valve.


**R. Hydraulic Manifold Return Check Valves (See Figure 10.)**

- (1) The hydraulic manifold return check valve is installed in the hydraulic reservoir A return line to prevent reverse flow of fluid. This check valve is located on the shear web near the dual filter and relief valve. Access to the check valve is through the left main gear inboard door.
- (2) The direction of flow is marked on one surface, and the rating of the check valve (1500 psi) is marked on the other surface.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

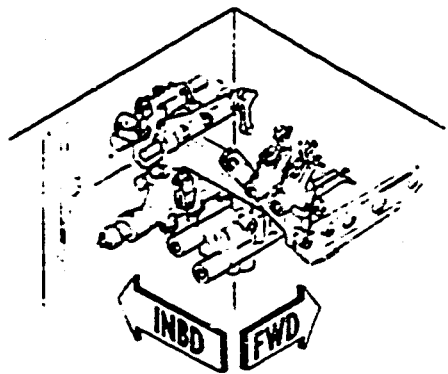

RIGHT MAIN GEAR  
WHEEL WELL

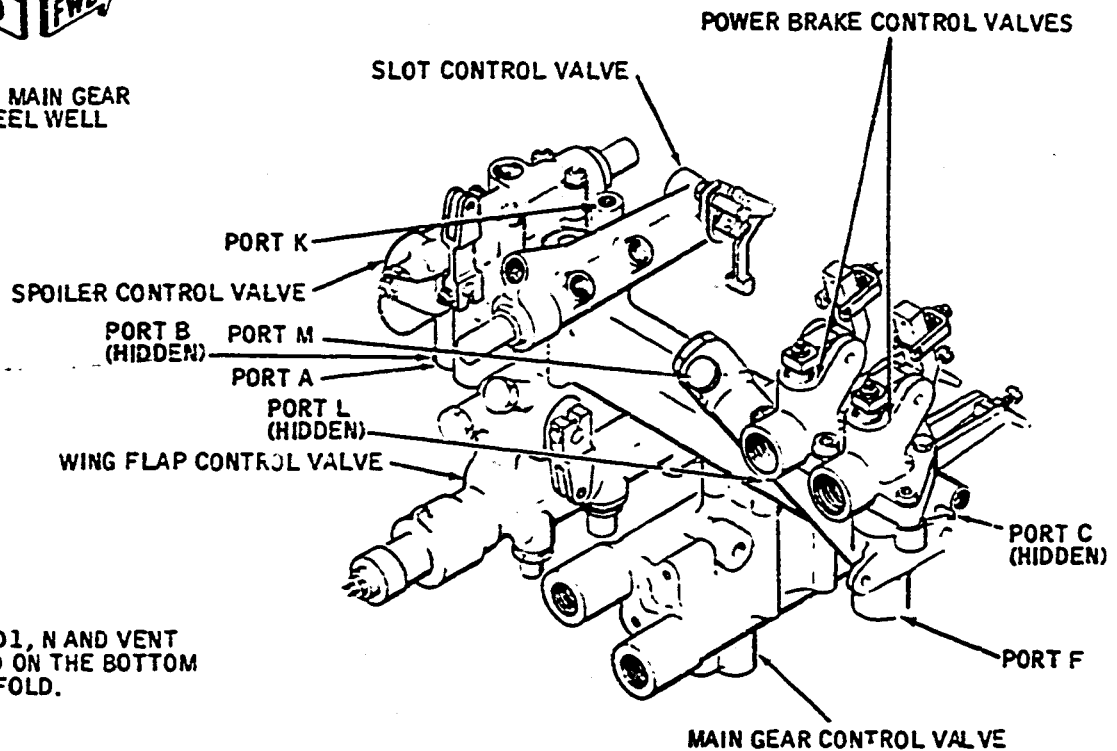

NOTE: PORTS B, C, D1, N AND VENT  
ARE LOCATED ON THE BOTTOM  
OF THE MANIFOLD.

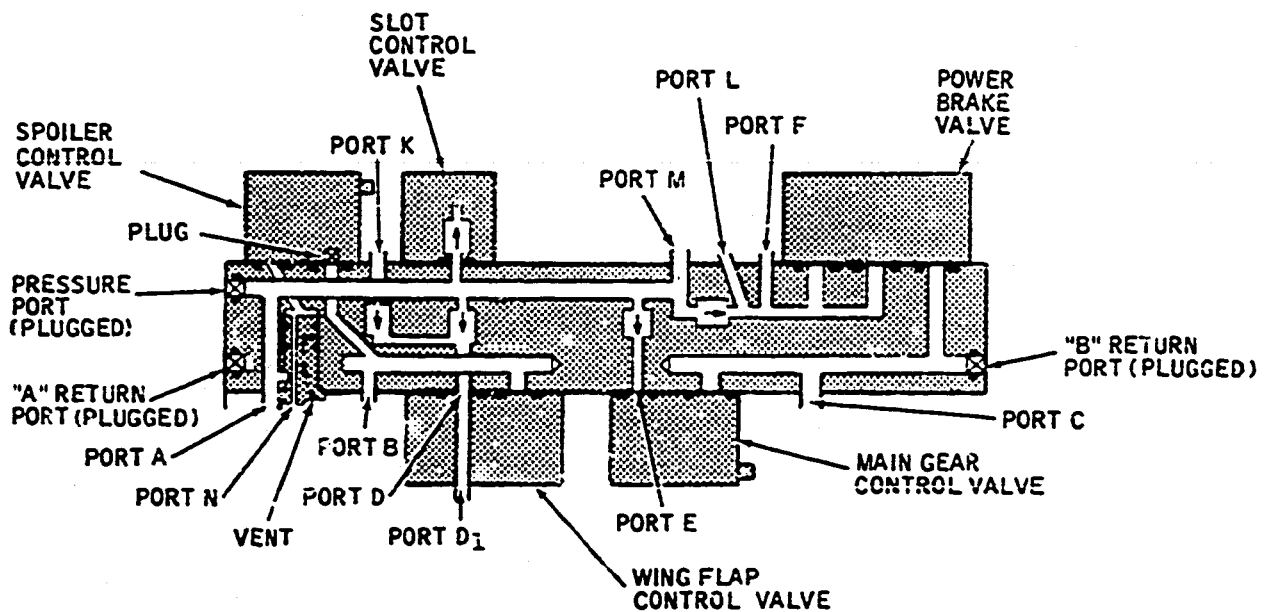

HA2-29A

Right Hydraulic Power Manifold -- Schematic  
 Figure 19

29-10-0  
 CODE 13  
 Page 35

Nov 1/69

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


S. Hydraulic Power System Accumulator (See Figure 20.)

- (1) The hydraulic power system accumulator is a spherical, welded-steel, fluid and air bladder-separated container. The accumulator is installed in the pressure line of the hydraulic power system to provide a reserve supply of fluid under pneumatic pressure and to act as a shock absorber for system pressure surges.
- (2) The accumulator is located immediately aft of the left hydraulic power manifold and is accessible through the left main gear inboard door. It is mounted with two corner brackets and clamp blocks at the upper and lower port fittings.
- (3) The accumulator is installed in the pressure line of the hydraulic power system and is initially charged with 1000 psi of dry nitrogen. As the system pressure builds up, fluid is forced into the upper chamber of the accumulator, further compressing the trapped nitrogen to approximately 3000 psi. With full hydraulic system pressure, 3000 psi is indicated on the pressure gage adjacent to the filler valve. This reserve pressure smoothes out any momentary lag in the pump's response to the system's demand for greater fluid flows. The accumulator permits a gradual rise in system pressure, thereby absorbing the shock of pump surges and relieving the piping and system operating units of high-impact loads. When the engine-driven hydraulic pumps are not operating, the accumulator provides system pressure (at a diminishing rate) until a quantity equal to the stored volume in the accumulator has been used by the system.

T. Hydraulic System Priority Valve (See Figure 21.)

- (1) The priority valve is located in the left wheel well near the left hydraulic power manifold. The valve is installed in the hydraulic pressure line, between the two power manifolds, downstream of the pressure supply takeoff port for the flight controls. The priority valve is a balanced relief valve which reserves initial hydraulic pressure (up to 2150 psi maximum) for use in the flight control systems. The valve consists of a body with an inlet, an outlet, and a breather port. Internally, the valve contains a poppet valve plate, a poppet, a poppet valve load-spring, a piston, a piston load-spring, and a piston load-spring housing. The piston load-spring housing chamber is vented to ambient air through a breather hole which is covered by a butyl rubber band.
- (2) The priority valve shuts off hydraulic pressure to all subsystems downstream of the left power manifold, whenever the hydraulic pressure drops below 1700 psi minimum. At this point, the valve closes to reserve the hydraulic pressure for use in the flight control systems, preventing them from reverting to manual operation. When the hydraulic pressure rises to 2150 psi maximum, the priority valve opens and supplies pressure to the right manifold and all subsystems downstream of the priority valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

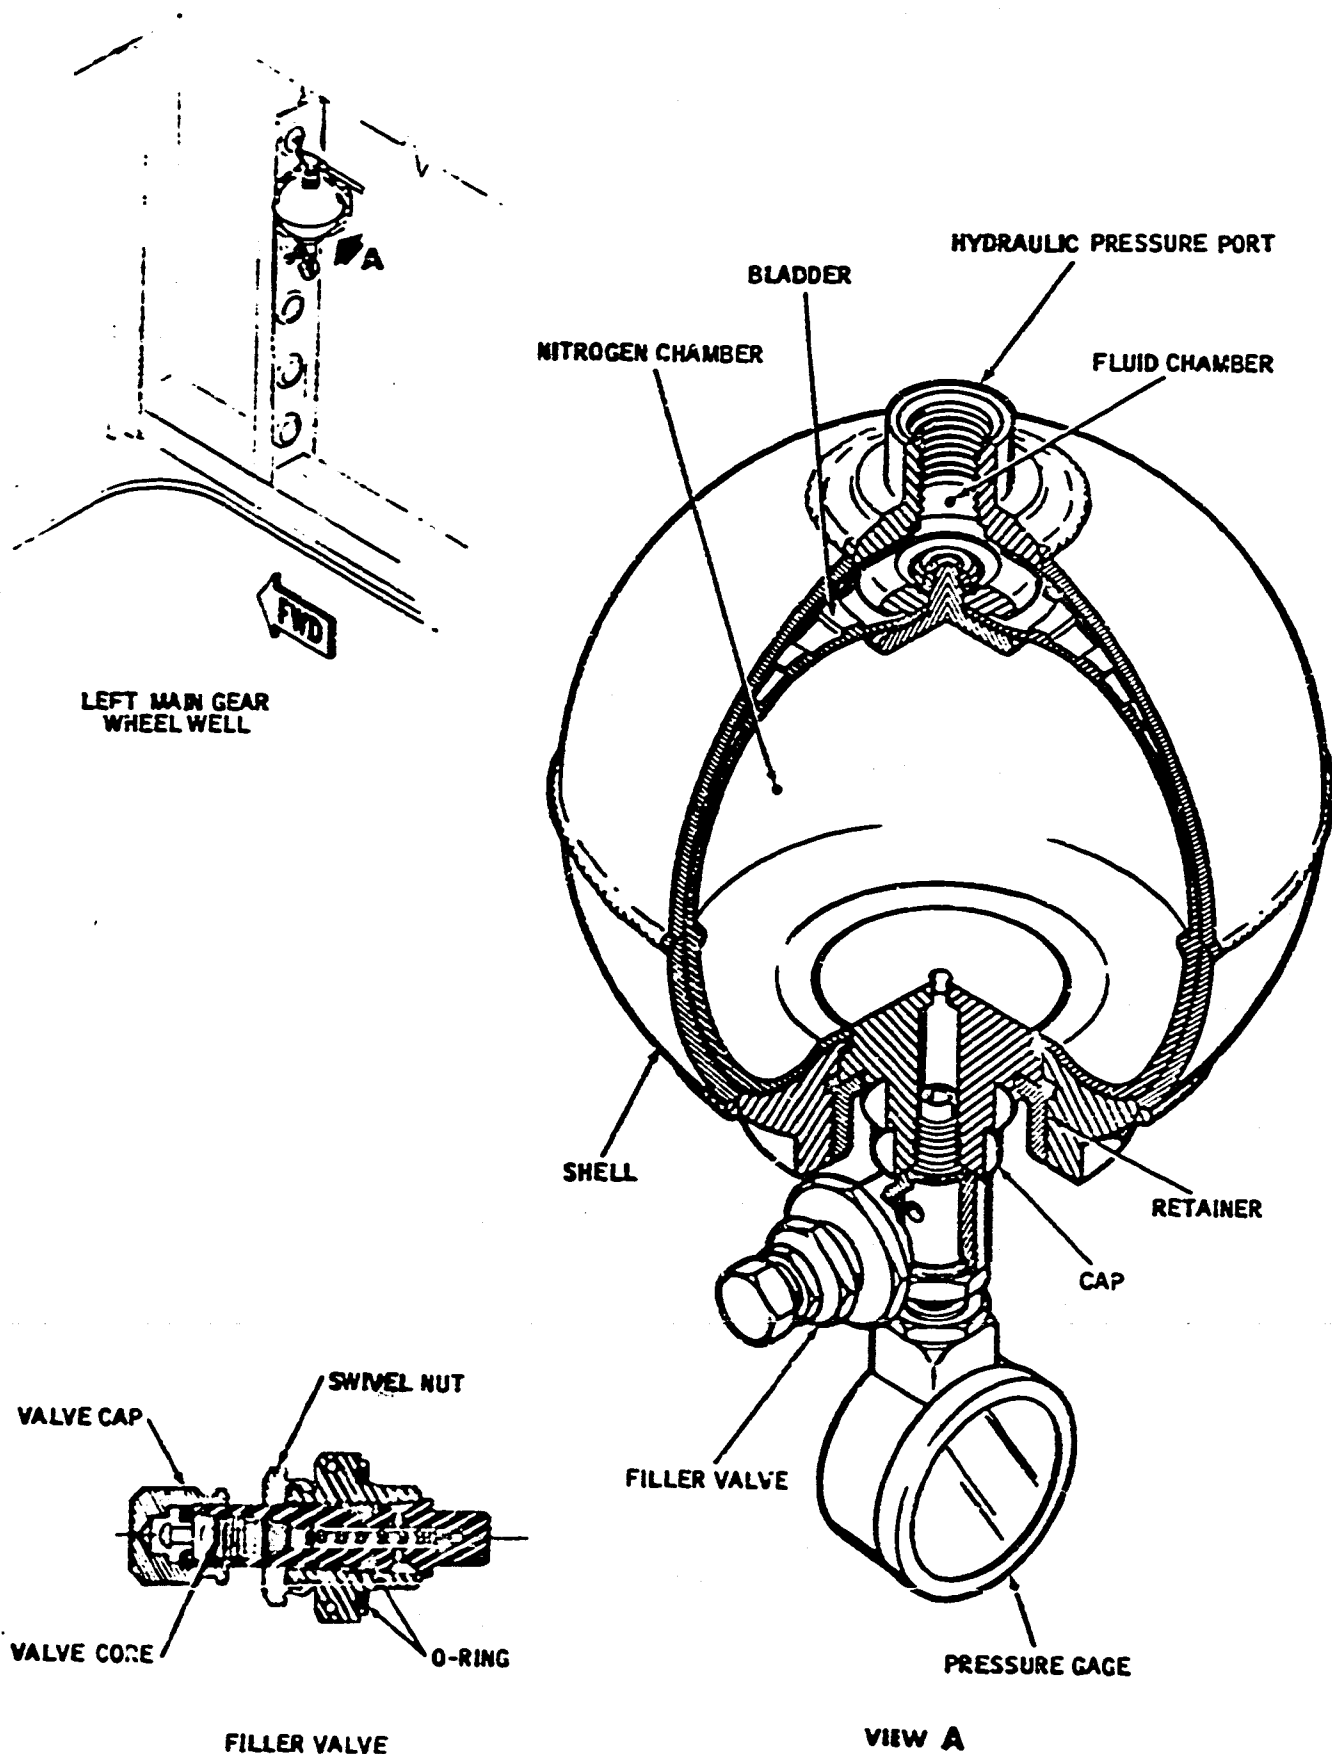

Hydraulic Power System Accumulator -- Cutaway View  
 Figure 20

HA2-30


29-10-0  
 CODE 13  
 Page 37

Jun 15/67

Printed in U.S.A.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

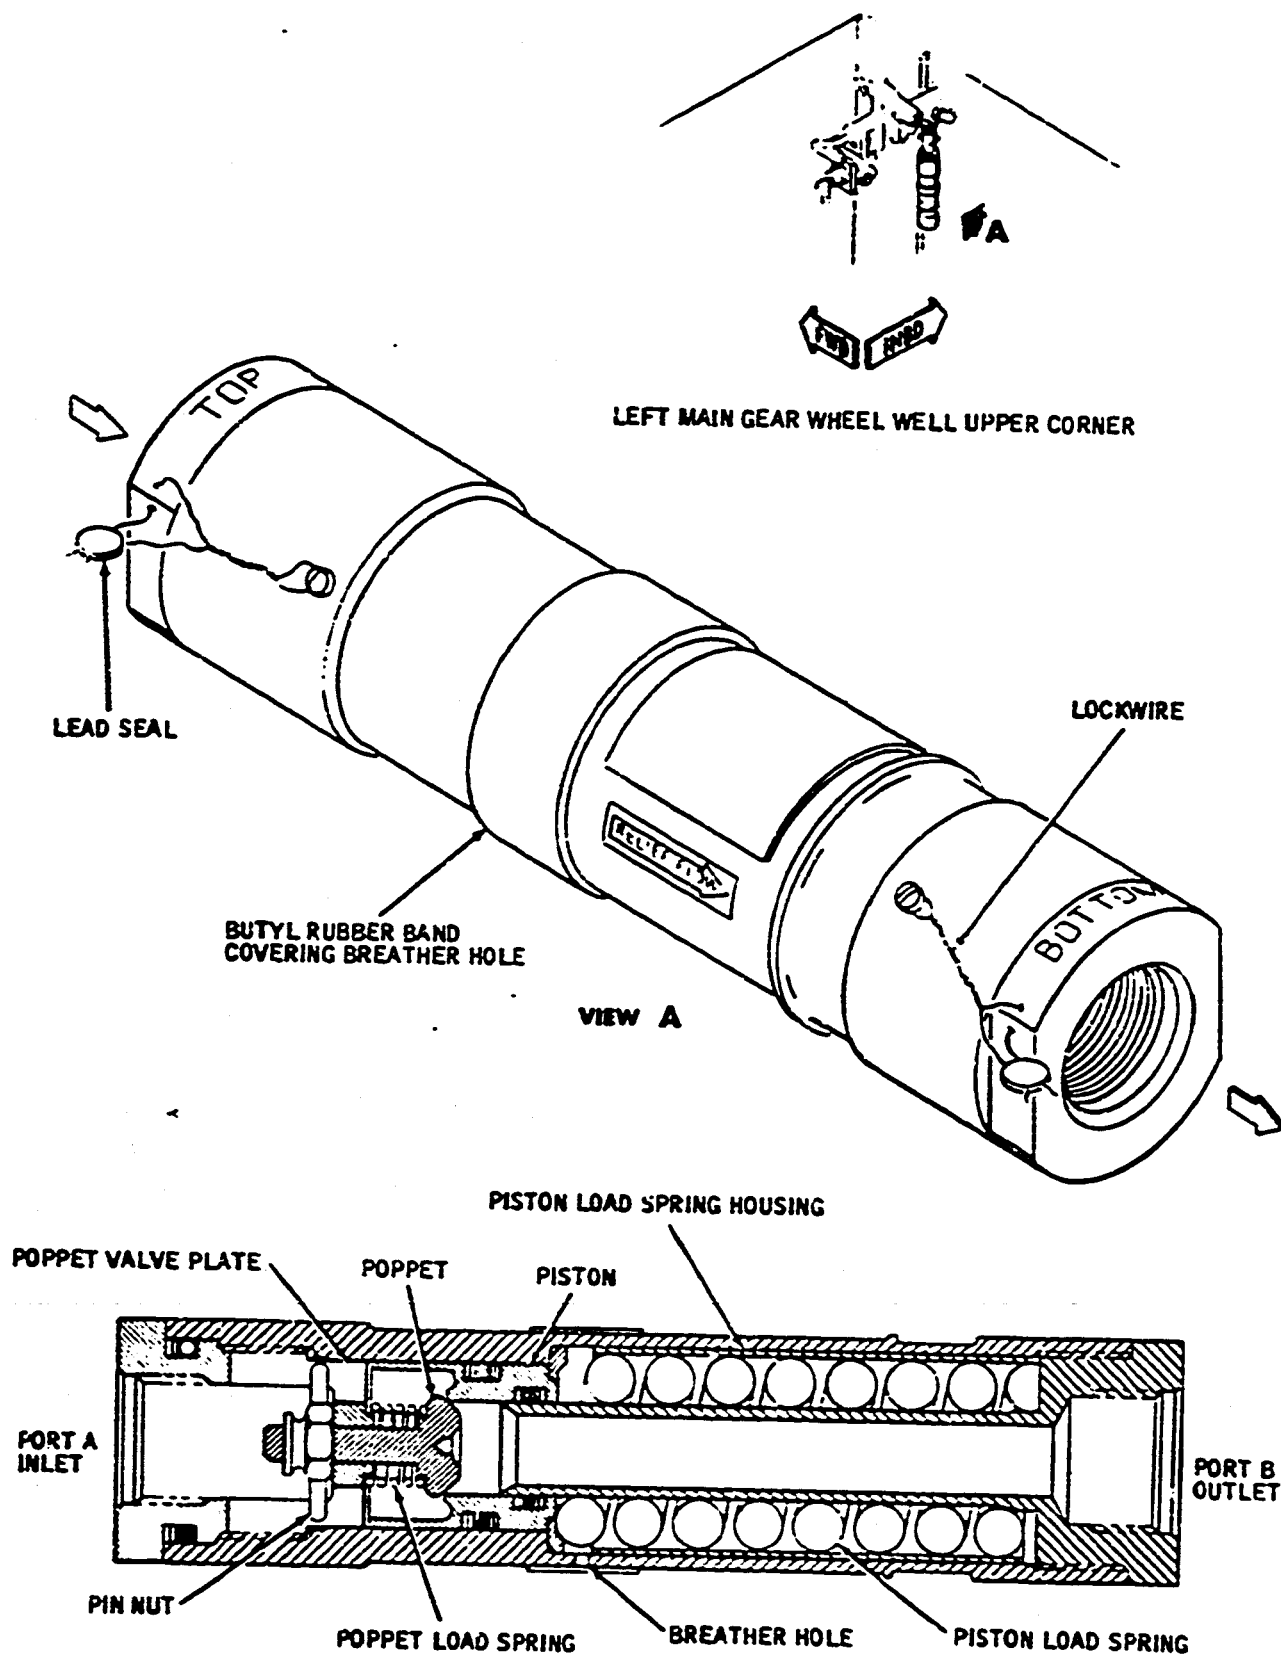

Hydraulic System Priority Valve -- Cutaway View  
 Figure 21

HA2-34

29-10-0  
 CODE 13  
 Page 38

Printed in U.S.A.

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Hydraulic fluid from the left power manifold enters the priority valve through the inlet port, passes through the poppet valve plate holes, and applies pressure against the piston. When sufficient hydraulic pressure is applied to the piston, the piston load-spring compresses, unseating the poppet and permitting full flow through the valve. When the hydraulic pressure decreases to less than the opposing force value of the piston load-spring, the load-spring forces the piston against the poppet and shuts off fluid flow through the valve.
- (4) The maximum flow available from both engine-driven hydraulic pumps is: 44 to 45 gpm at takeoff, climb, and cruise configurations; 26 to 28 gpm at descent, approach, and engine idle configurations.
- (5) Some of the larger hydraulic system demands are as follows:
  - (a) Gear retraction -- 17 gpm (10 - 12 seconds)
  - (b) Gear extension -- 14 gpm (10 - 12 seconds)
  - (c) Wing flaps down -- 8 gpm (10 seconds)
  - (d) Wing flaps up -- 3 gpm (22 seconds)
  - (e) Horizontal stabilizer -- 7 gpm
  - (f) Ailerons -- 17 gpm (25°/second)
  - (g) Rudder -- 3 gpm (25°/second)
- (6) There are various combinations of hydraulic system operations which could cause momentary reversion of the flight controls to manual operation. To prevent reversion to manual operation, the priority valve assures that the left power manifold receives all the hydraulic fluid pressure under conditions of very large flow demands.

U. Hydraulic System Selector Control Lever

- (1) The hydraulic system selector control lever is a manually actuated, mechanical lever detented to three positions. The lever provides a mechanical means, through cables, for positioning the system selector valve and the auxiliary hydraulic pump supply selector valve. The hydraulic system selector control lever is located on the system engineer's control pedestal. The lever is attached to a drive sector, located on a common shaft with the other control pedestal sectors. The lever and sector are accessible through the cover plates on the system engineer's pedestal.
- (2) To put the hydraulic power system in the bypass condition, the system selector control lever is lifted out of detent and moved to bypass/general system position. At the same time, the cable moves the sector and pushrod of the system selector valve to the No. 1 position. The pushrod positions the system selector valve to the No. 1 bypass position.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

At the same time, the cables from the system selector valve sector move the auxiliary pump supply selector valve sector to No. 1 (auxiliary) position. The auxiliary pump supply selector valve remains in the auxiliary supply position through the idle feature of the sector rigging. In this condition, the engine-driven pump pressure is ported to the reservoir and the auxiliary pump supplies pressure to the general system. In this position, the fluid is supplied to the auxiliary pump from the low standpipe in the hydraulic system reservoir. To put the system into the alternate condition, the selector control lever is lifted out of detent and moved to the general system/main gear down lock and flaps position. The cables move the system selector valve sector to the No. 3 (alternate) position. The system selector valve sector moves the cables rotating the auxiliary pump supply selector valve sector to the No. 3 (alternate) position. As the sector rotates, the end of the arm moves away from the idle position. This positions the valves to the alternate position, supplying fluid to the auxiliary pump from the auxiliary pump alternate reservoir. In this position, fluid from the auxiliary pump is ported to the wing flap control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported to the general system.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - DESCRIPTION AND OPERATION

1. General

A. Description (See Figures 1 and 2.)

- (1) The hydraulic power system receives fluid pressure from the engine-driven hydraulic pumps, one installed on each inboard engine. The electrically driven auxiliary pump is used to supplement the engine-driven pumps, or to independently supply the system with fluid pressure.
- (2) The hydraulic system reservoir, located in the left wing root, has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir is used for fluid, and 1/10 is used for foam space. A separate air chamber is installed in the reservoir system to provide for a greater fluid capacity in the main reservoir. A reservoir filler assembly is installed in the piping between the reservoir and the air chamber and has a vent line from the filler neck to the tee at the top of the reservoir sight gage. The reservoir is pressurized to 30 to 35 psi by bleed pressure from the engine-driven pumps through an air pressure regulator-aspirator.
- (3) The engine-driven pumps receive fluid from the pressurized main reservoir through respective engine hydraulic fire shutoff valves. The engine hydraulic fire shutoff valves are normally open and can be mechanically controlled from the flight compartment. The pumps supply fluid pressure through respective check valves to the dual filter and relief valve. Some of the fluid from the filter is ported through the regulator-aspirator to pressurize the reservoir. Most of the fluid is routed through a check valve to the system selector valve, and then to the left and right hydraulic power manifolds. The manifolds distribute the fluid pressure to the subsystems.
- (4) Hydraulic fluid is normally supplied to the auxiliary hydraulic pump from a low standpipe in the main reservoir. During alternate operation, the auxiliary hydraulic pump receives fluid supply from the auxiliary pump alternate reservoir, which is located just aft of the auxiliary pump. From these reservoirs, the fluid is ported through the auxiliary pump selector valve which is mechanically controlled from the flight compartment by the system selector control lever. When operating, the auxiliary hydraulic pump supplies fluid pressure to the subsystems through the system selector valve which is also controlled by the system selector control lever in the flight compartment. A filter and check valve are installed in the line from the auxiliary pump to the system selector valve.
- (5) An accumulator is installed in the pressure line to the subsystems to provide a reserve supply of fluid and to act as a surge damper for the system.

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 14  
Page 1


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Engine-driven pump fluid pressure is routed through the system selector valve to the left power manifold, where it is distributed to some of the subsystems and through the priority valve to the right power manifold. Fluid pressure from the right power manifold is distributed to the remaining subsystems.
- (7) The priority valve is a spring-loaded, poppet-type, balanced relief valve installed in the line downstream of the left power manifold. The priority valve's function in the system is to prevent the flight control systems from reverting to manual operation during high demands on the hydraulic system.
- (8) A fluid pressure transmitter, located in the nosewheel well, senses the system pressure, which is indicated on the hydraulic system pressure indicator in the flight compartment.

**B. Normal Operation**

- (1) Fluid is supplied to the hydraulic system from the pressurized hydraulic system reservoir. For operation of the hydraulic system under normal conditions, 8.1 US gallons (6.7 Imperial gallons; 30.6 liters) of hydraulic fluid are available to the engine-driven hydraulic pumps, and 12.9 US gallons (10.7 Imperial gallons; 48.8 liters) are available to the auxiliary hydraulic pump. Supply lines from the main reservoir carry fluid to each inboard pylon through normally open engine hydraulic fire shutoff valves to the engine-driven hydraulic pumps. Fluid is supplied to the auxiliary hydraulic pump from the main reservoir through a low standpipe at the base of the reservoir. Fluid is carried from the reservoir through the auxiliary pump selector valve to the auxiliary hydraulic pump.
- (2) The engine-driven hydraulic pumps supply full system pressure (3000 psi nominal) at any given engine speed, from idle to full power. The output flow of the pump is varied by sensing pressure from the outlet side of the pump. Each engine-driven pump contains a solenoid-operated bypass valve which, when energized, bypasses the pressure control regulator of the pump and ports fluid to the pump yoke control piston which feathers the pump. When the pump is feathered, flow rate is reduced to almost zero (1.0 gpm) and to a pressure of approximately 300 psi. Half of this flow maintains pump lubrication and cooling through internal leakage. This leakage is returned, through a check valve, the engine-driven pump case drain line filter, and another check valve to the case drain return port of the reservoir. The pressure fluid from each pump passes through a check valve to the dual filter and relief valve.
- (3) The fluid enters the dual filter and relief valve through the relief valve chamber. The fluid is passed through the filter element, through a manifold, and through a common outlet port. Fluid from the outlet port is routed through a check valve to the system selector valve. If back pressure in the system builds up to approximately 3300 psi, the relief valves in the dual filter and relief valve open and port fluid

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

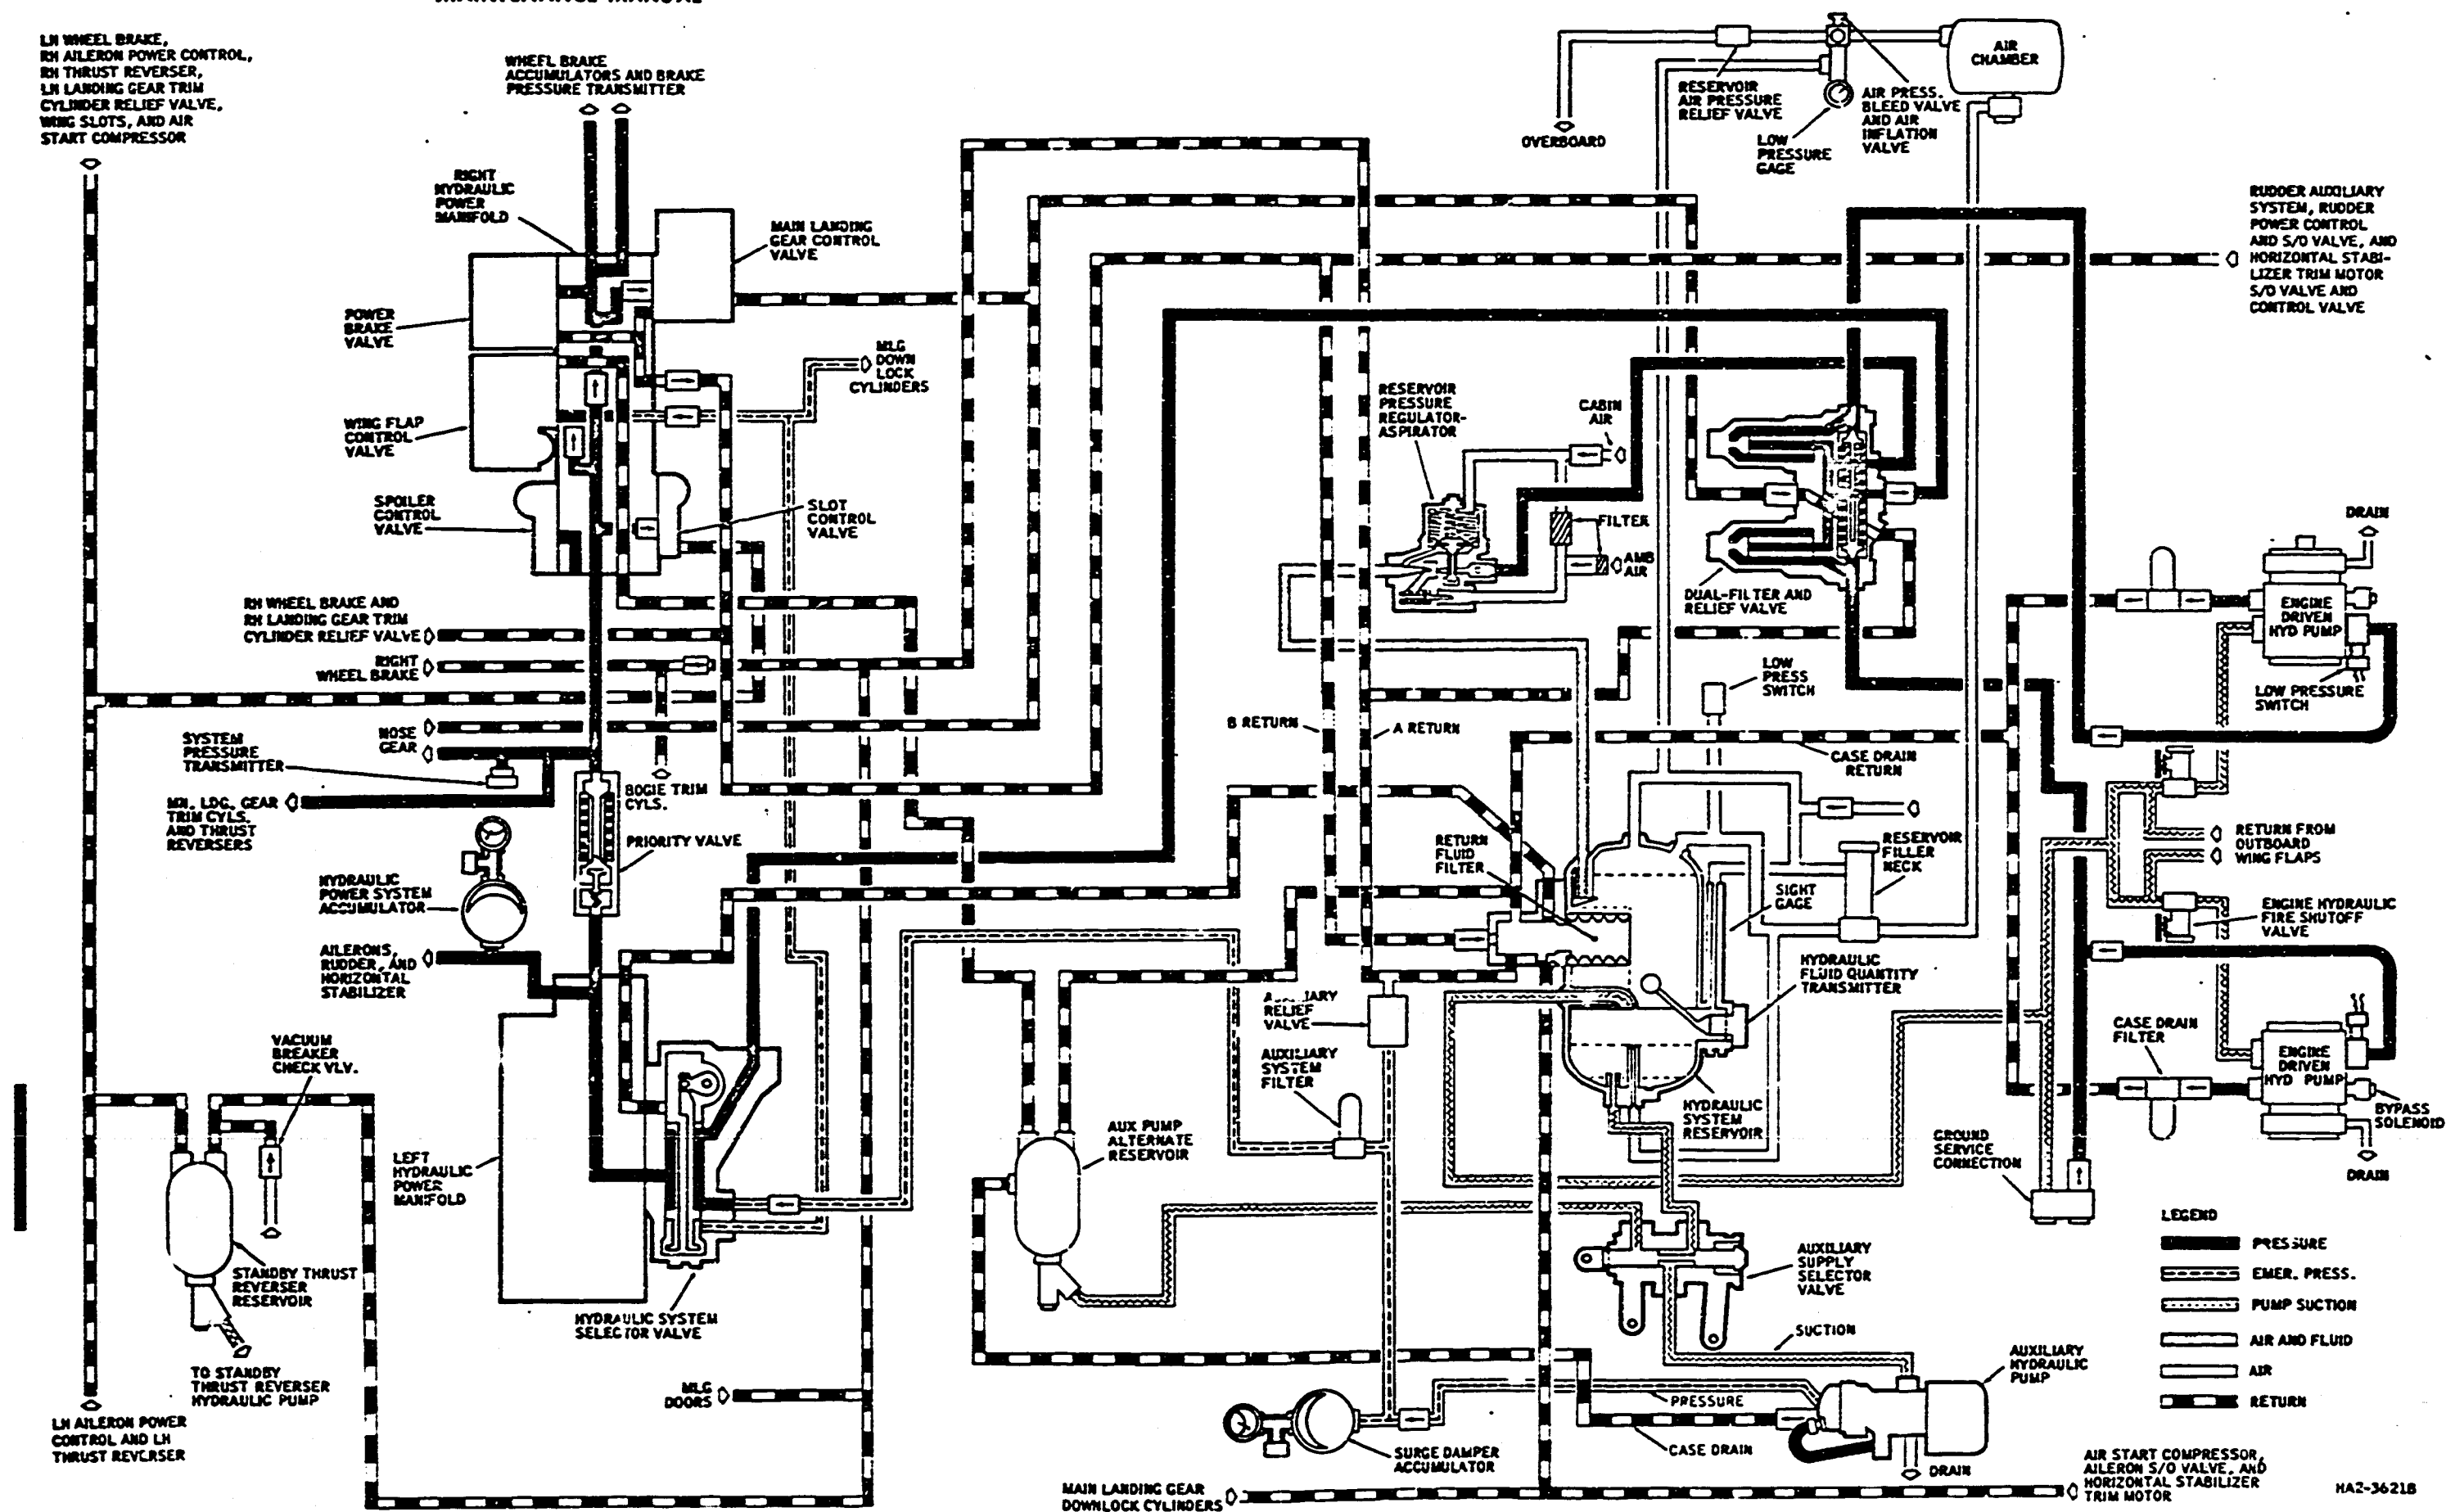

Hydraulic Power System -- Schematic Diagram  
 Figure 1


29-10-0  
 CODE 14  
 Page 3

Jan 15/68

Printed in U.S.A.

HA2-3621B

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

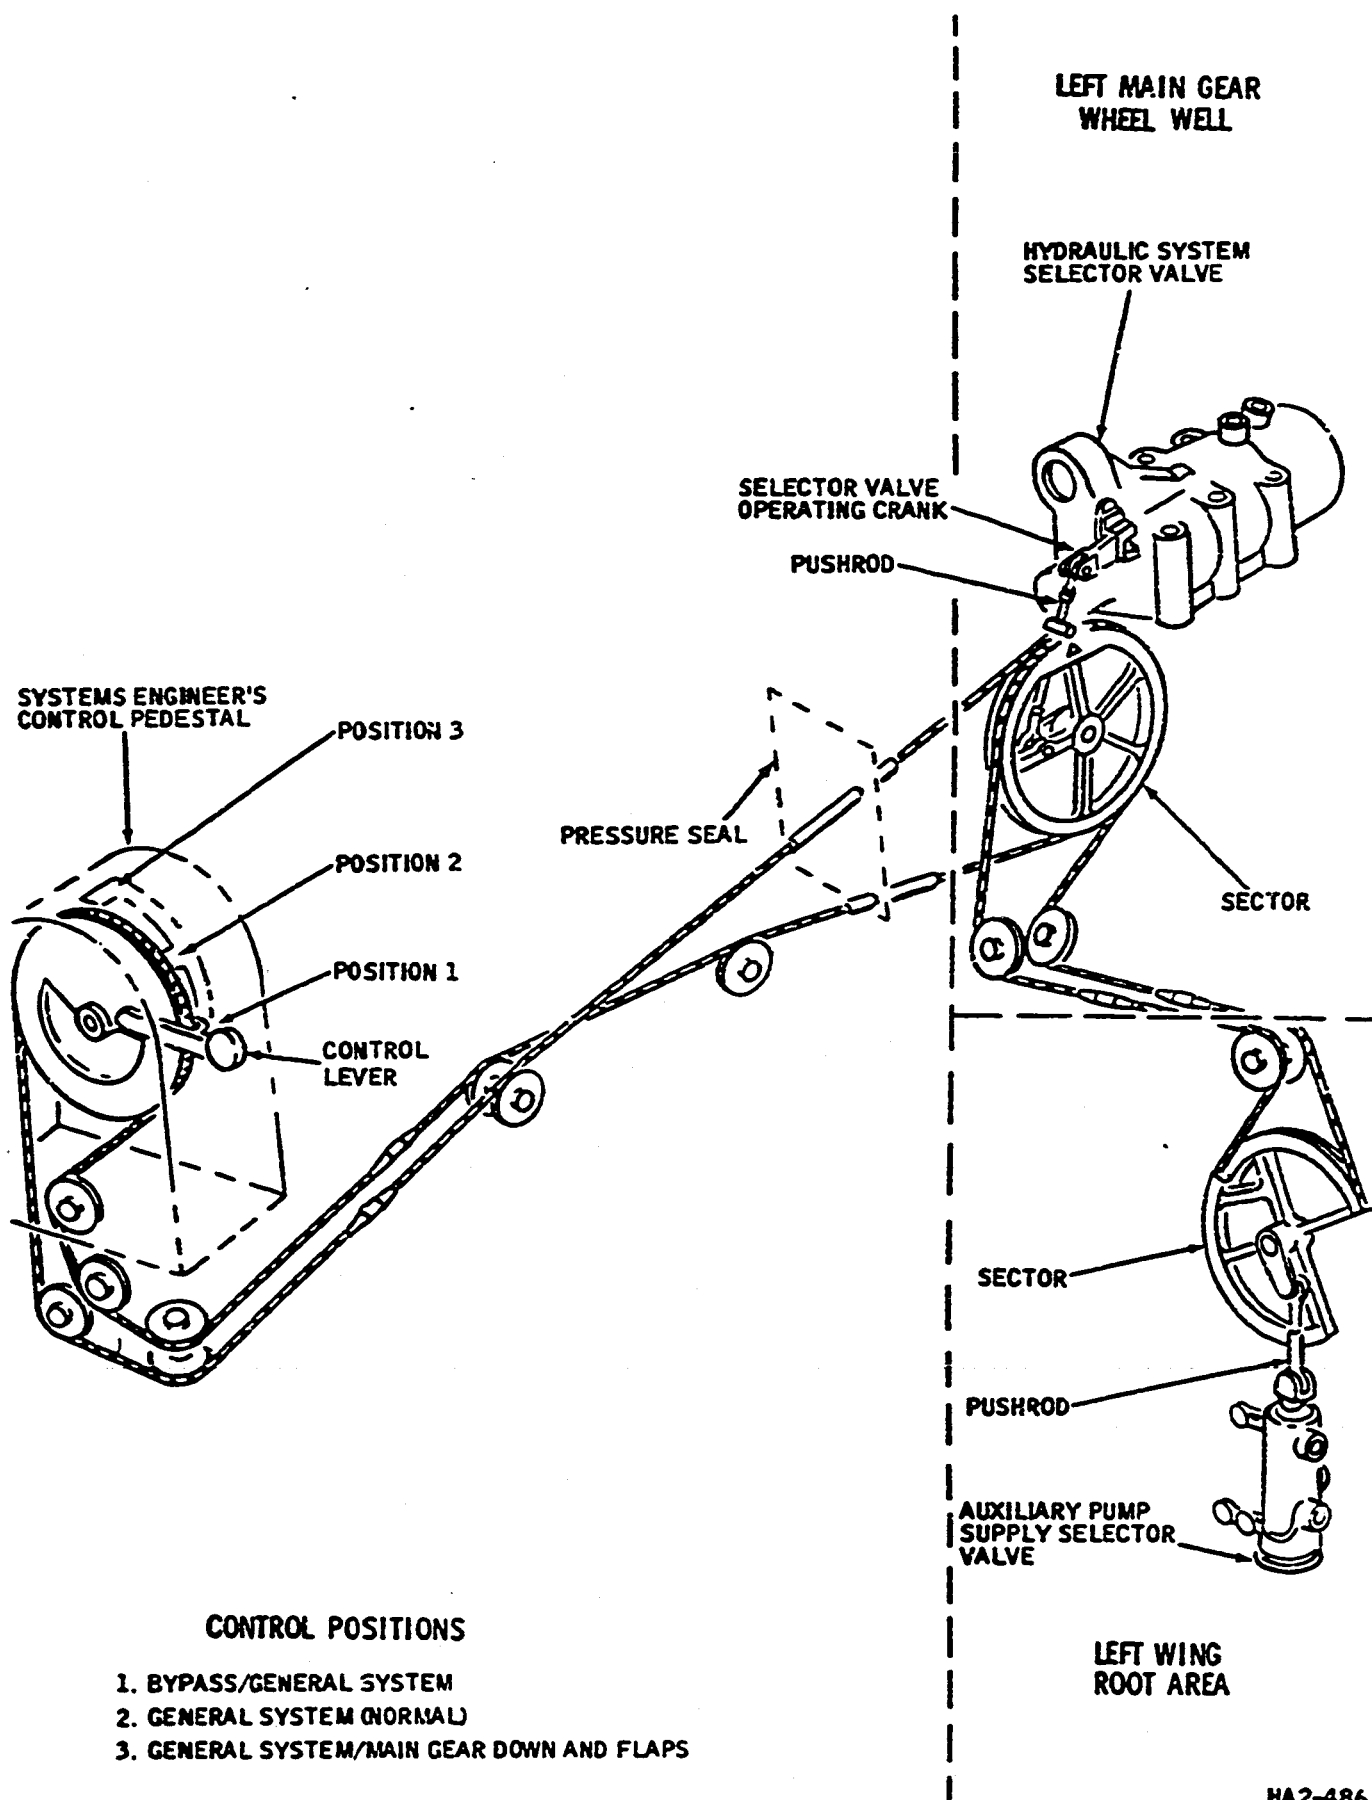

**CONTROL POSITIONS**

1. BYPASS/GENERAL SYSTEM
2. GENERAL SYSTEM (NORMAL)
3. GENERAL SYSTEM/MAIN GEAR DOWN AND FLAPS

Hydraulic System Selector and Auxiliary Pump Supply Selector Valves --  
 Mechanical Control Schematic  
 Figure 2

HA2-486

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 14  
 Page 5

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

back to the reservoir via A return port. The relief valve poppet closes again when system pressure drops to approximately 3000 psi.

- (4) The aspirator receives filtered fluid (bleed pressure at nominal 3000 psi) from the dual filter and relief valve. The aspirator operates on the jet pump principle. Hydraulic fluid is atomized and mixed with air within the unit by a nozzle and a venturi. The mixture is used to pressurize the reservoir and reservoir air chamber. The regulator diaphragm maintains a pressure range of 30 to 35 psi in the reservoir and air chamber. If there is a regulator malfunction, the aspirator stalls when the outlet pressure reaches a maximum of 40 psi. A reservoir relief valve in the reservoir vent line relieves thermal expansion pressure above 45 (+5, -0) psi.
- (5) Pump pressure fluid enters the system selector valve through the system pressure inlet port. When the pump selector control lever is in the general system (normal) position, fluid is ported to the pressure passages of the left power manifold. The fluid pressure in the left power manifold is ported through the priority valve to the nose gear and the right power manifold and directly to the following valves:
  - (a) Aileron power shutoff
  - (b) Rudder power shutoff
  - (c) Longitudinal trim hydraulic motor shutoff
- (6) The right power manifold distributes fluid pressure to the brake accumulators, the pressure transmitter, and the following control valves:
  - (a) Wing flap
  - (b) lot
  - (c) Main gear
  - (d) Power brake
- (7) The return fluid from the wing flap control valve is ported through the right power manifold and into the auxiliary hydraulic pump alternate reservoir. Return fluid from the outboard wing flaps is piped into the suction lines for each engine-driven hydraulic pump. Return fluid from the slot control valve is ported into the A return line to the main reservoir. The power brake and main gear control valve gear up return fluid is ported through a restrictor check valve into the B return line to the reservoir. The main gear control valve gear down return pressure bypasses the right manifold and returns to the reservoir through the A return line. All return fluid entering the reservoir is filtered through the return ports filter located within the reservoir.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

C. Bypass Operation

- (1) The output of the engine-driven hydraulic pumps is bypassed by moving the system selector control lever out of the general system (normal) position to the bypass/general system position.
- (2) The system selector valve in the bypass position ports engine-driven pump pressure from the dual filter and relief valve directly to the return passage of the left power manifold. From the manifold, the fluid is ported directly to a tee in the wing flap return port of the hydraulic system reservoir. In the bypass condition, the auxiliary hydraulic pump receives fluid from the hydraulic system reservoir, pressurizes it to system pressure, and ports it to the left and right power manifolds for distribution to the subsystems.

D. Alternate Operation

- (1) When both engine-driven hydraulic pumps and the auxiliary hydraulic pump are rendered inoperative due to the loss of the normal supply of fluid, the hydraulic power system can be rigged for alternate operation. This is accomplished by placing the system selector control lever in the general system/main gear downlock and flaps position. When the system selector control lever is in this position, the auxiliary hydraulic pump supply selector valve is positioned to supply fluid from the auxiliary pump alternate reservoir to the auxiliary pump.
- (2) Fluid is supplied to the auxiliary pump from the outlet port of the auxiliary pump supply selector valve. Output pressure is ported through the auxiliary system filter and check valve to the auxiliary pressure inlet port of the system selector valve.
- (3) In the general system/main gear downlock and flaps position, auxiliary pump pressure bypasses the manifold pressure passages and is ported from the alternate outlet port of the system selector valve. Fluid from this port flows directly to a port on the right power manifold, through an internal check valve in the manifold, to the wing flap control valve. A line, teed into the alternate supply line, runs directly to a shuttle valve in the main gear downlock cylinder line. When auxiliary pressure is applied, the shuttle valve shifts, porting fluid into the downlock bungee cylinder's downlock side.

E. Mechanical Control

- (1) The hydraulic power mechanical control system consists of the hydraulic system selector control lever cable drum, the system selector valve sector, the system selector valve, the auxiliary hydraulic pump supply selector valve sector, and the auxiliary hydraulic pump supply selector valve.

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 14  
Page 7

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (2) The control lever located on the system engineer's control pedestal is used to position the system selector valve and, in turn, the auxiliary hydraulic pump supply selector valve.
- (3) The control lever is spring loaded into general system (normal) position, and is connected to the control lever cable drum. Two cables run from the drum, under the cabin floor, aft through the pressure bulkhead at the rear wing spar, and into the left wheel well to the system selector valve sector. A pushrod connects the sector to the positioning lever of the system selector valve.
- (4) A second set of cables is routed from the system selector valve sector into the left wing root to the auxiliary hydraulic pump supply selector valve sector. When the system selector valve is in either bypass or normal, the auxiliary hydraulic pump supply selector valve sector is arranged so that the pushrod idles between the two positions. This allows the valve to remain in the auxiliary position. When the sector is moved to the alternate position, the pushrod is pulled by the sector to reposition the valve to the alternate position.
- (5) The control lever is normally in the general system (normal) position. To move the system selector valve to the bypass position, the control lever is moved to the bypass/general system position. When the system selector valve is moved to the bypass position, the auxiliary hydraulic pump supply selector valve sector is moved to a new position. Due to the idle feature on the auxiliary sector, the valve remains in the auxiliary position. With the valve in this position, fluid is supplied to the auxiliary pump through the low standpipe in the hydraulic system reservoir. In this condition, engine-driven pump pressure is ported to the reservoir and the auxiliary pump pressure is ported to the general system.
- (6) To put the system in alternate operation, the control is moved to the general system/main gear downlock and flaps position. This moves the system selector valve to the alternate position, and simultaneously moves the auxiliary hydraulic pump supply selector valve to the alternate position. Fluid is supplied to the auxiliary pump from the auxiliary hydraulic pump alternate reservoir. Fluid pressure from the auxiliary pump is ported to the flap system control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported from the system selector valve to the general system.

## 2. System Components

### A. Hydraulic System Reservoir (See Figures 3 and 4.)

- (1) The hydraulic system reservoir is installed on the aft side of the wing rear spar in the left wing root and is accessible through the left wing root access door. The hydraulic system reservoir serves as the main source of hydraulic fluid for the engine-driven hydraulic pumps and the normal supply for the auxiliary hydraulic pump. The reservoir is

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

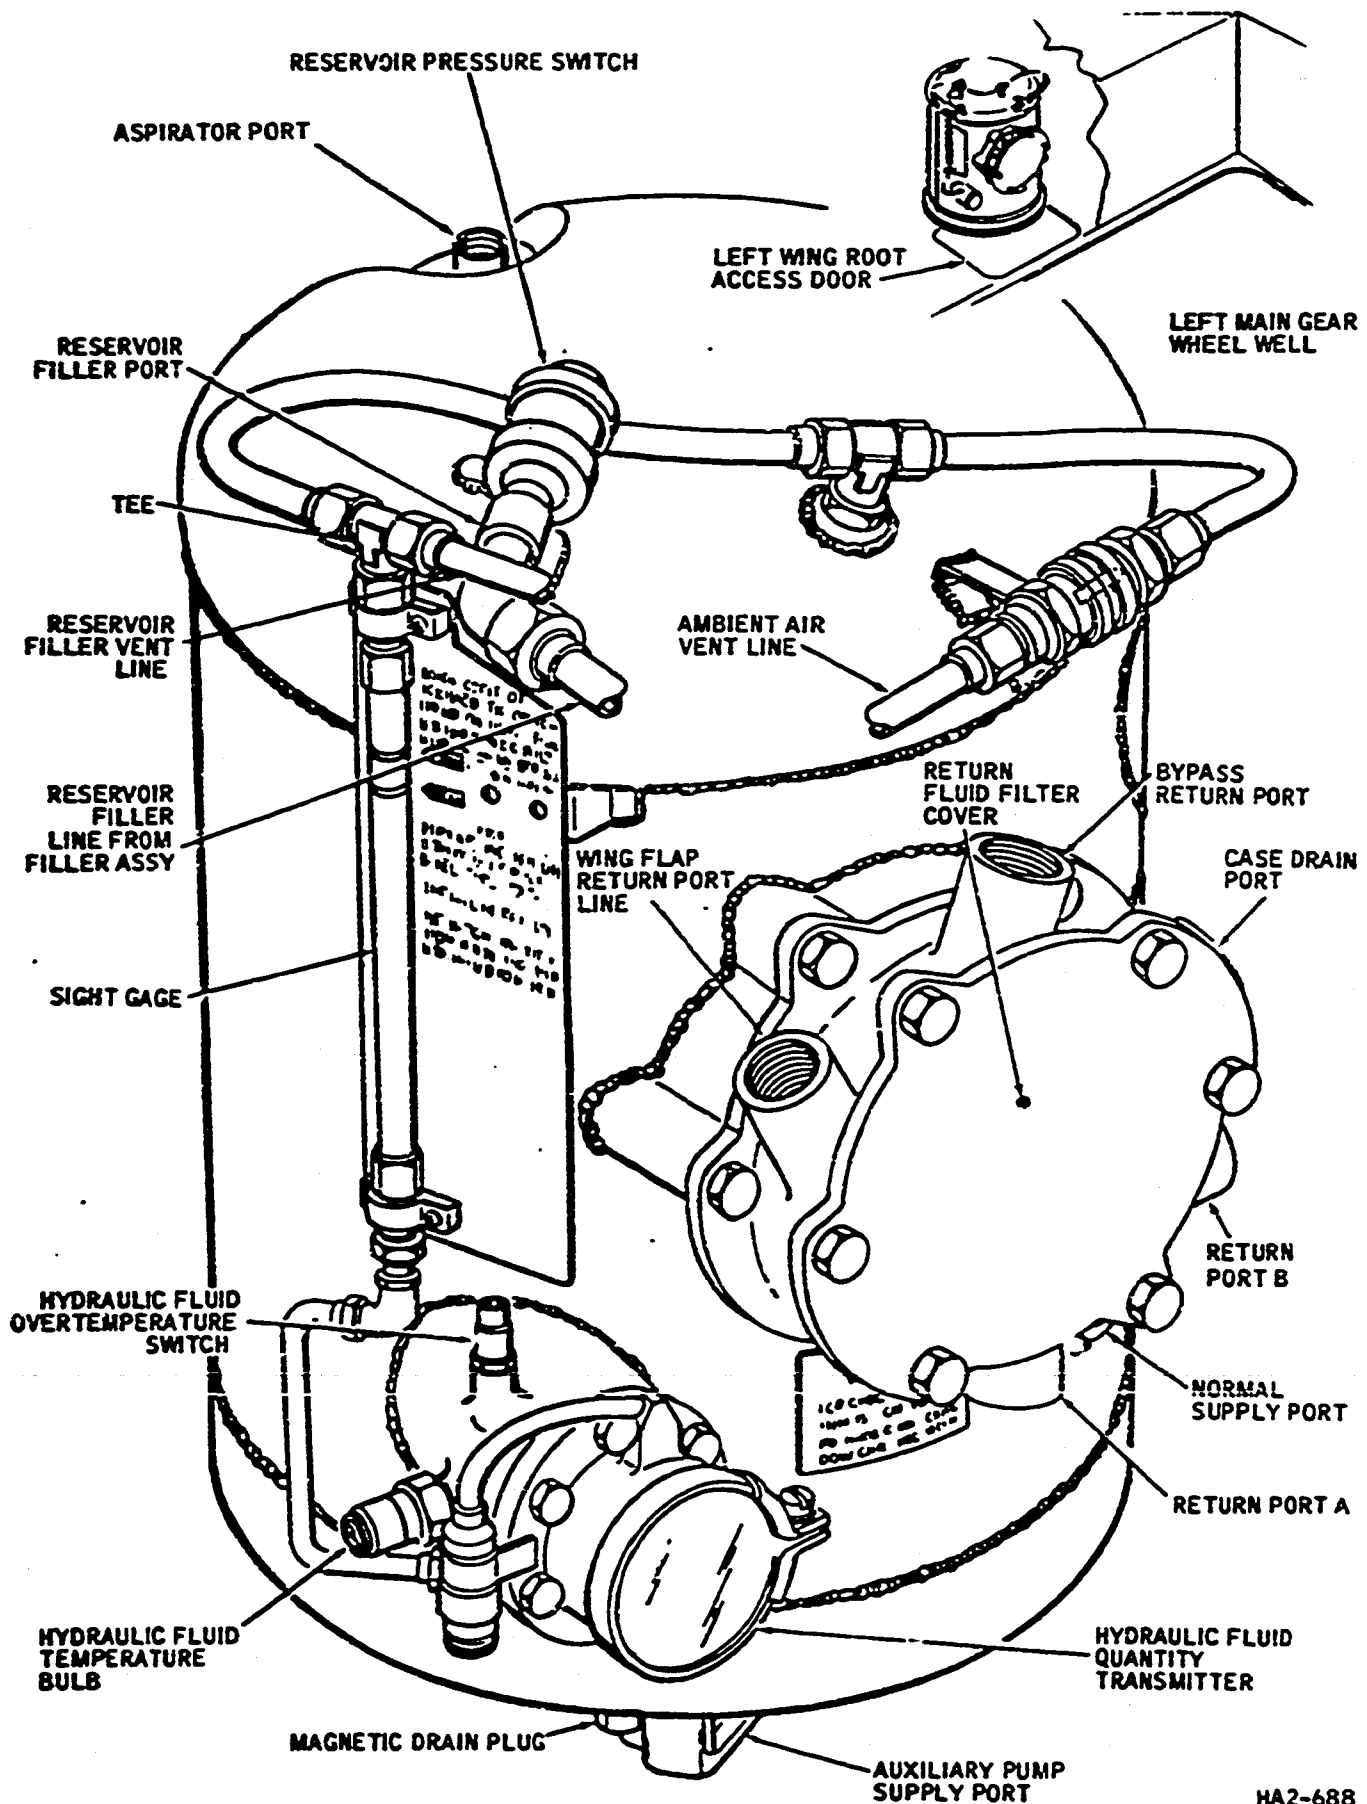


Hydraulic System Reservoir -- External View  
 Figure 3

HA2-688

29-10-0  
 CODE 14  
 Page 9

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

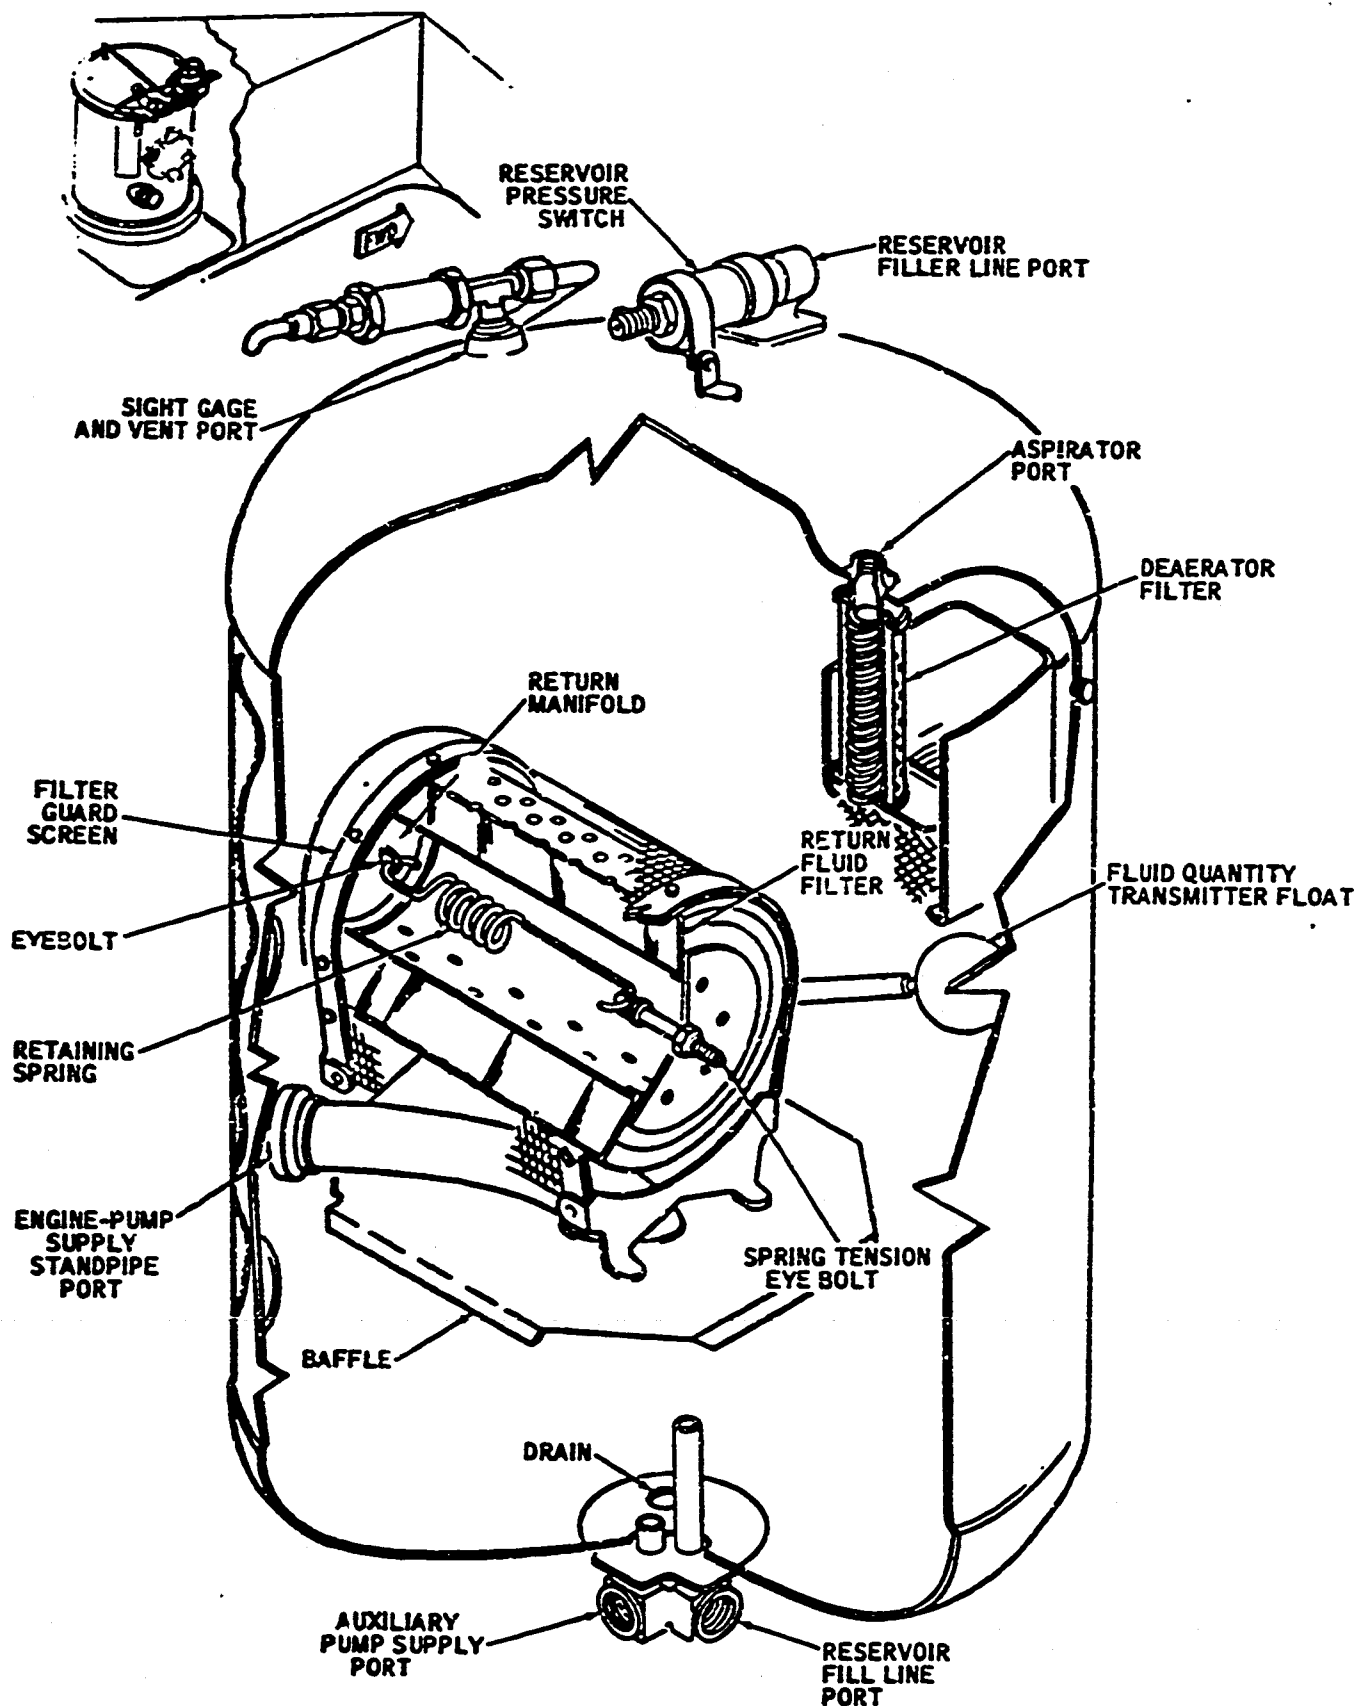

Hydraulic System Reservoir -- Cutaway View  
 Figure 4

HA2-689

29-10-0  
 CODE 14  
 Page 10

Printed in U.S.A.

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

cylindrical in shape and contains a filter, baffle, and a screen cover encasing the filter. The filter prevents foreign particles from contaminating the fluid supply. Mountings are provided on the exterior surface of the reservoir for return line ports, aspirator port, electrical sensing units, sight gage, instruction placards, magnetic drain plug, and system supply ports.

- (2) The reservoir is pressurized with air from the regulator-aspirator to a range of 30 to 35 psi and has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir volume is used for fluid and 1/10 is used for foam space.
- (3) The aspirator port through which the reservoir is pressurized is located in the recess on top of the reservoir. An aspirator-deaerator filter is supported in the reservoir by a screen and support box assembly which is mounted to the reservoir wall by two bolts.
- (4) The mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The return ports manifold is an open-centered ring, flanged at both sides and provided with five fluid ports around its circumference; return port A is located at the bottom, return port B is located at the lower right side, the wing flap return port is located at the upper left side, and the system selector valve bypass port is located at the top. One flange of the manifold is mounted with six bolts to the mounting flange on the reservoir. The return fluid filter cover fits into the open side of the manifold, and is attached to the outer manifold flange with six bolts to form a fluid-tight cover for both the manifold and the filter.
- (5) The return fluid filter is installed in the reservoir, behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the return fluid filter cover holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to the engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
- (6) A flanged adapter for the fluid quantity transmitter is welded to the reservoir below and to the left of the return ports manifold. The adapter is provided with two small port bosses for the hydraulic fluid temperature bulb and the hydraulic fluid overtemperature switch. The lower end of the sight gage connects to a third port in the adapter, while the top of the sight gage tees into a port at the top of the reservoir. An instruction plate is mounted behind the sight gage and the vacuum breaker check valve tees into the port at the top of the reservoir that is used by the sight gage.

**B. Hydraulic Reservoir Return Fluid Filter (See Figure 4.)**

- (1) The reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply. The

29-10-0  
CODE 14  
Page 11

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


filter is located behind the return ports manifold, and is spring loaded to act as its own relief valve. Access to the filter is by removing the return fluid filter cover from the return ports manifold by removal of six bolts. The filter is attached by the retaining spring to the cover and is withdrawn from the reservoir when the cover is removed.

- (2) Externally, the filter consists of two perforated concentric tubes. The area between the tubes is closed by metal end caps which are bonded to the two tubes. A resilient rubber gasket is bonded to each of the caps. Each gasket must be smooth and flat for proper sealing of the filter. The gaskets act as a static seal and a relief valve seat.
- (3) Internally, the filter has a 10-micron, resin-impregnated, convoluted paper-type filter element. The area of the filter element is approximately 1960 square inches. The filter is held in place by a retaining spring. One end of the spring is attached to an eyebolt located inside the return port's manifold cover. The spring passes through the center chamber of the filter and is connected to another eyebolt. This eyebolt is secured to a large washer and plate by means of a self-locking nut. The washer seats on the rubber gasket which is bonded to the filter. The fluid enters the center chamber of the filter and passes through the inner tube of the filter to the filter element by means of perforation holes. Foreign matter is filtered out by the filter element, and the fluid leaves the element through perforation holes in the outer tube. When the element becomes saturated with foreign matter, the filter acts as its own relief valve and unseats at 20 to 25 psi above normal return pressure which allows fluid to bypass the filter and enter the reservoir.

C. Hydraulic Reservoir Air Pressure Regulator-Aspirator (See Figure 5.)

- (1) The reservoir air pressure regulator-aspirator is a jet-type air pump, regulated by a pressure-sensitive shutoff valve. The unit pressurizes the hydraulic reservoir with air to the operating pressure range of 30 to 35 psi. The regulator-aspirator is located on the top inboard side of the reservoir and is mounted on the reservoir retainer ring. Access to regulator-aspirator is through the left wing root access door.
- (2) The regulator-aspirator assembly consists of a main aspirator body and a regulator housing. The main aspirator body has two inlet ports and one outlet port. The ports are permanently identified inlet, outlet, and air inlet. The plug for an air check valve is located near the outlet plug. A chemically treated paper filter is installed near the aspirator body air inlet port in the air line from the pressurized cabin area. A metal screen filter is installed on the check valve which tees into the aspirator body air inlet port.
- (3) The reservoir air pressure regulator-aspirator operates basically with a jet pump action which is regulator controlled. Fluid enters the assembly through the fluid inlet port where it is filtered and then ported through the valve assembly of the regulator. During normal operation, when air pressure at the outlet port is under 30 psi, the

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

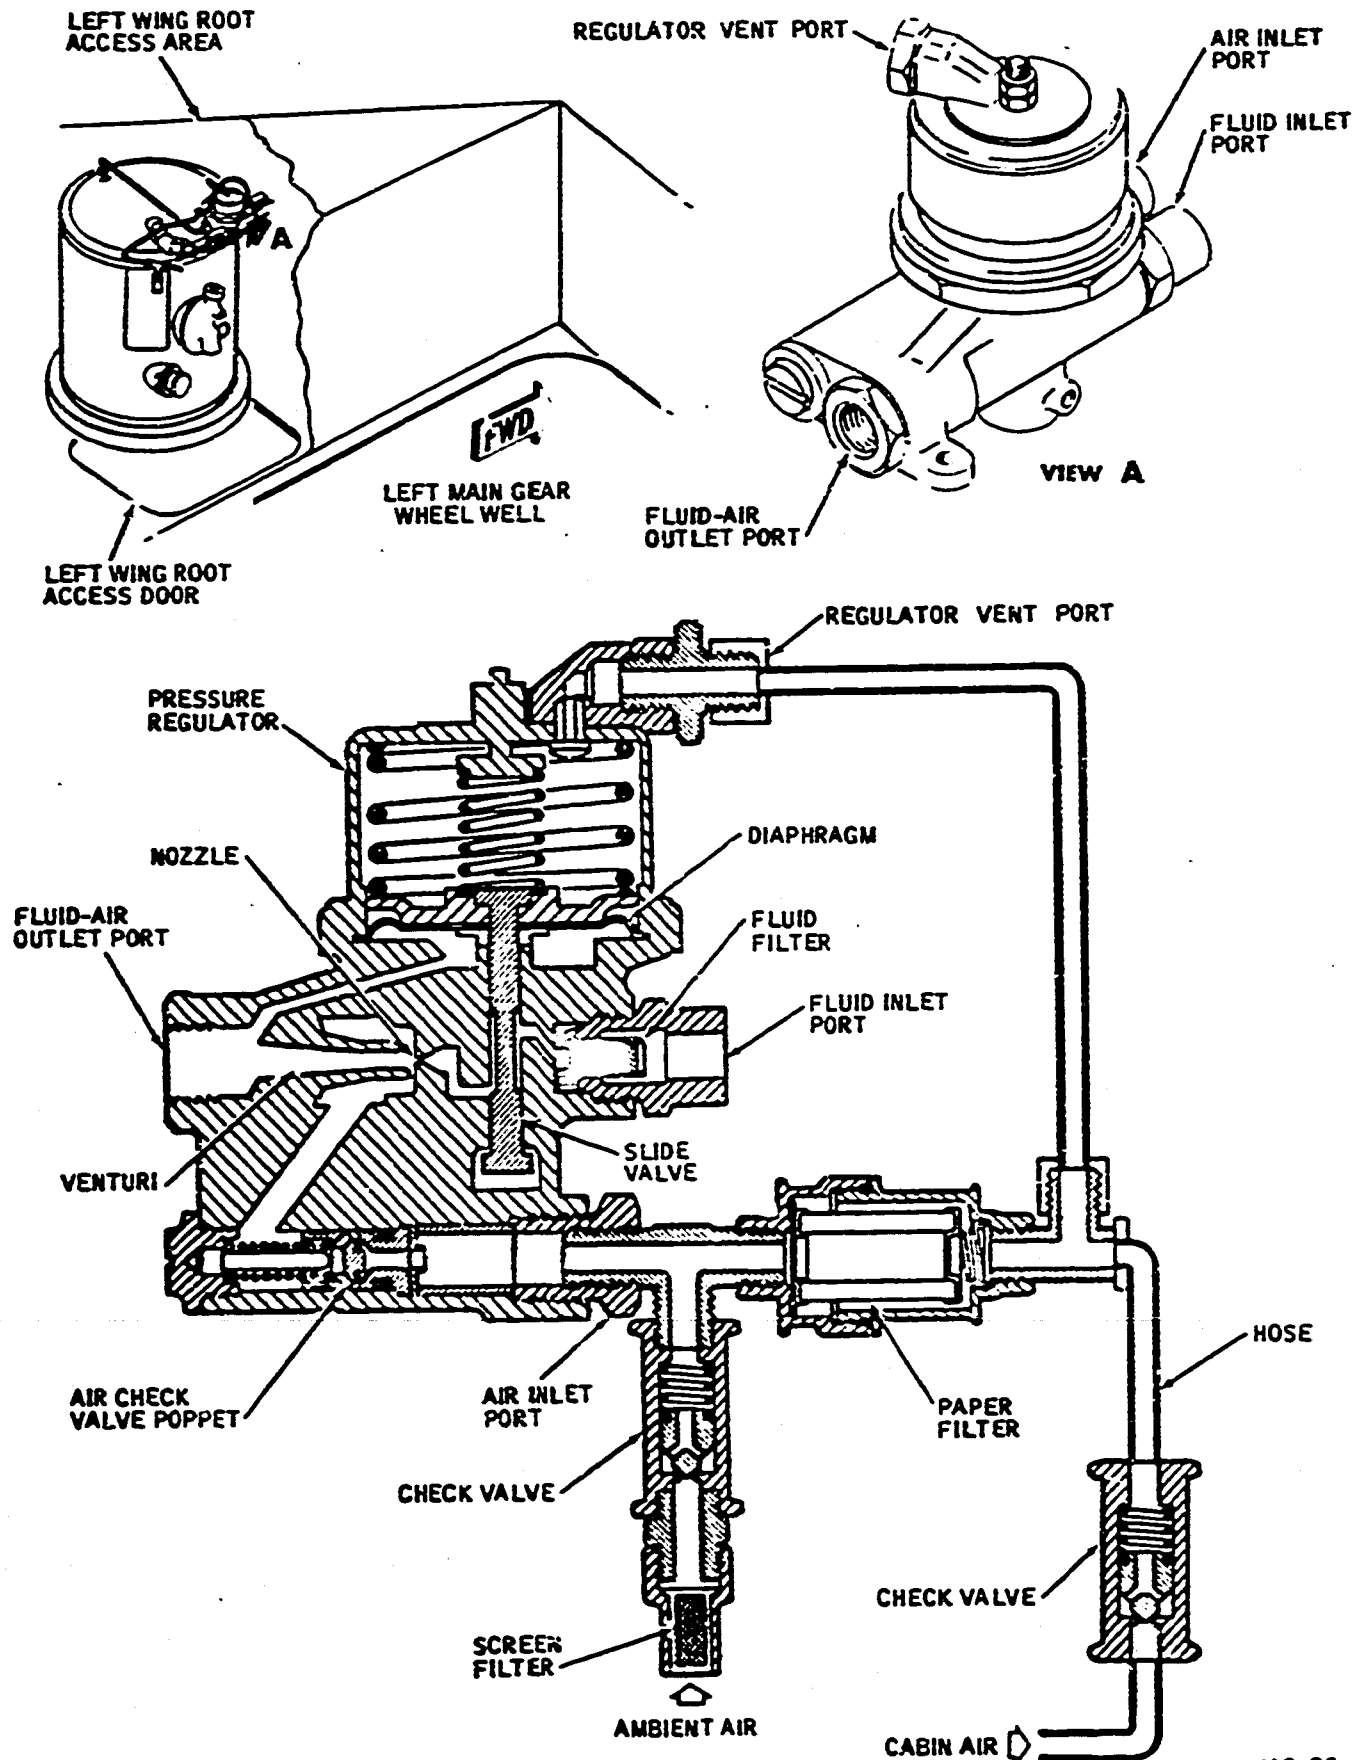

HA2-25

Reservoir Air Pressure Regulator-Aspirator -- Schematic  
 Figure 5

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 14  
 Page 13

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

valve is open, porting fluid to the nozzle. The orifice in the nozzle sprays the fluid through the venturi of the outlet port, creating a vacuum in the chamber around the venturi. When the vacuum becomes great enough to create a pressure differential of approximately 1 psi, ambient air opens the air check valve. The air is ported to the chamber around the venturi and is siphoned, with the fluid, through the outlet port.

- (4) Hydraulic fluid inlet pressure at the engine-driven hydraulic pumps is improved at high altitude operation by supplying pressurized filtered cabin air to the reservoir regulator-aspirator instead of ambient outside air. Part of the inlet air is diverted by a tee fitting to the regulator chamber to provide a more positive regulating force on the diaphragm than would be obtained with low ambient pressures. The chemically treated paper filter, installed in the regulator-aspirator air supply line from the cabin, removes smoke tars and impurities from the pressurized cabin air. The steel mesh screen filter, installed on the check valve which tees into the regulator-aspirator air inlet port downstream of the paper filter, removes dust, dirt, and foreign particles from the ambient air and serves as a standby to supply filtered air in event the paper filter is clogged.
- (5) As pressure in the reservoir builds up, back pressure is bled from the outlet port to the diaphragm chamber. The reaction on the diaphragm begins to move the slide valve to cut off the fluid flow. At 30 to 35 psi of back pressure, the diaphragm completely closes the slide valve, cutting off the flow of fluid. If there is a regulator malfunction, the aspirator stalls when outlet pressure reaches a maximum of 40 psi.
- (6) The aspirator is capable of pressurizing the reservoir to 30 to 35 psi in approximately 4 minutes at altitudes from sea level to 15,000 feet, when fluid is ported through the nozzle at 0.5 gpm at 3000 psi.

**D. Regulator-Aspirator Air Filters (See Figure 6.)**


- (1) The regulator-aspirator air filters remove ambient and cabin air impurities from the air which is used to pressurize the main hydraulic system reservoir. The filtering system is composed of two filters. One of which is a paper element filter, installed directly in the cabin air supply line near the regulator-aspirator. The other filter is a fine mesh, screen-type filter, installed on a check valve and positioned at right angles to the regulator-aspirator air inlet port. The screen filter, in addition to providing an immediate supply of ambient air during ground operations, serves as a standby air inlet to preclude air starvation of the regulator-aspirator in the event the paper element filter becomes clogged.

**E. Hydraulic Reservoir Relief Valve (See Figure 7.)**


- (1) The reservoir relief valve and the air pressure aspirator-regulator keep the reservoir pressurized to normal operating range. The valve relieves excess air pressure which may build up in the reservoir



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

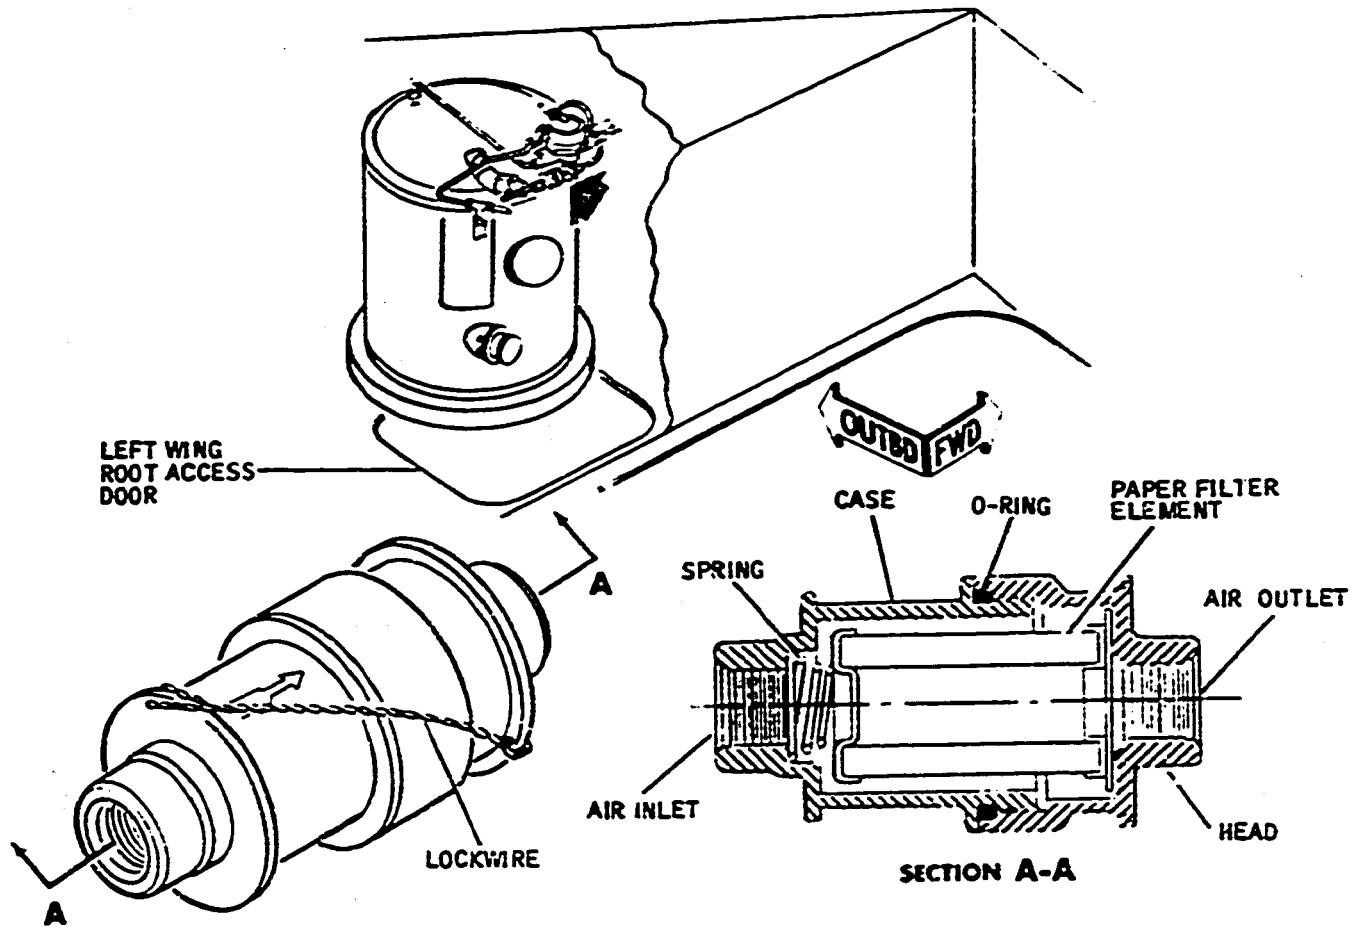

PAPER ELEMENT FILTER

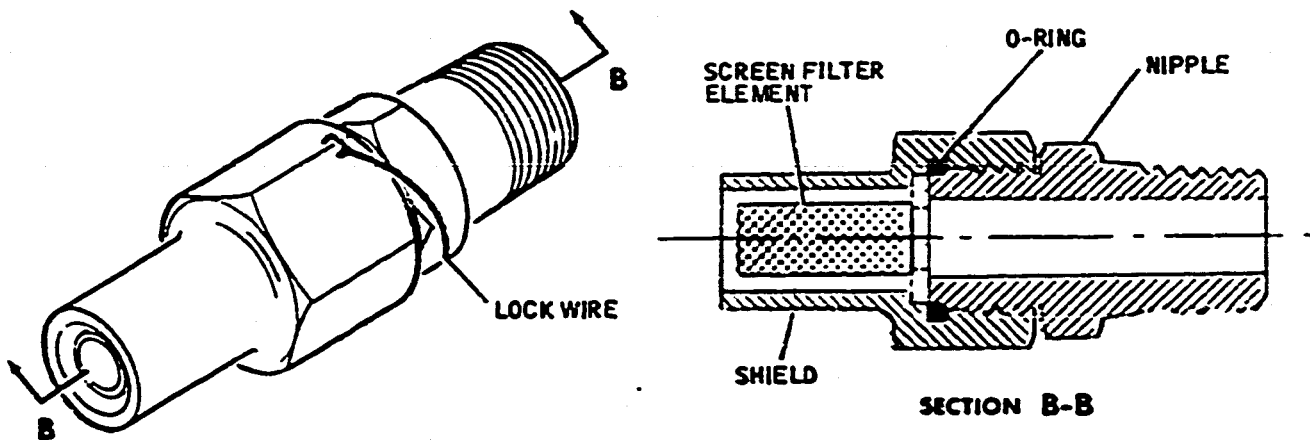

SCREEN FILTER

Regulator-Aspirator Air Filters -- Cutaway View  
 Figure 6




HA2-35

29-10-0  
 CODE 14  
 Page 15

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

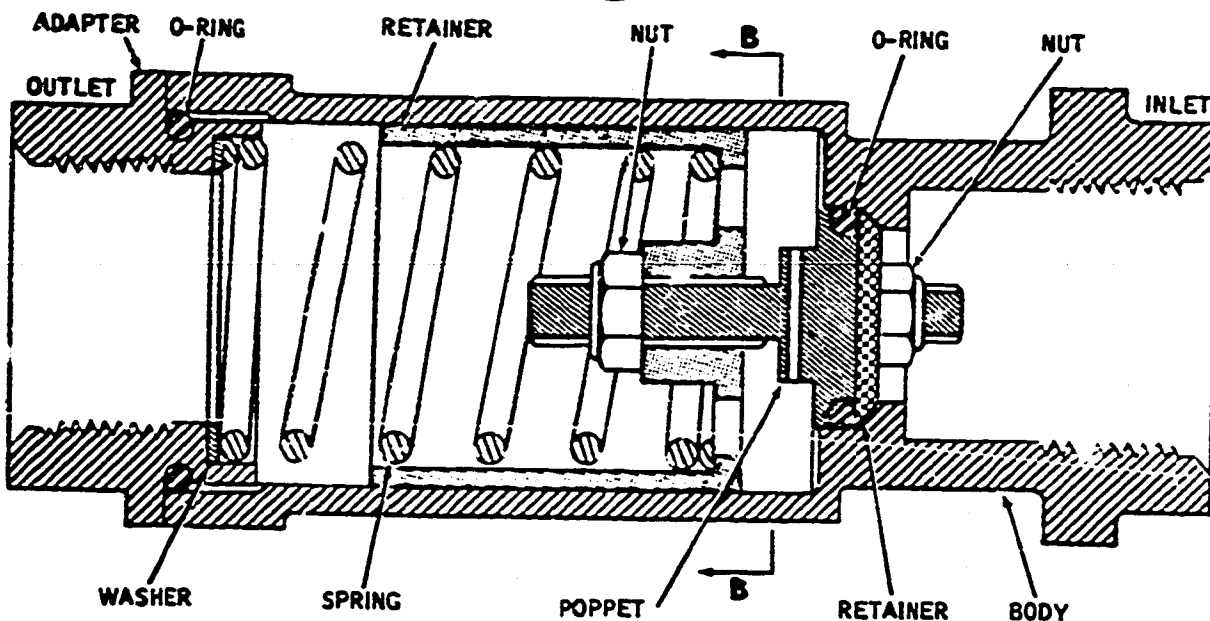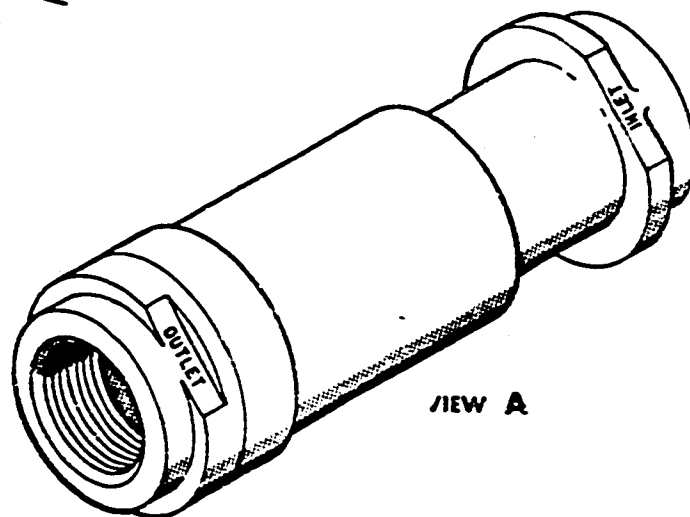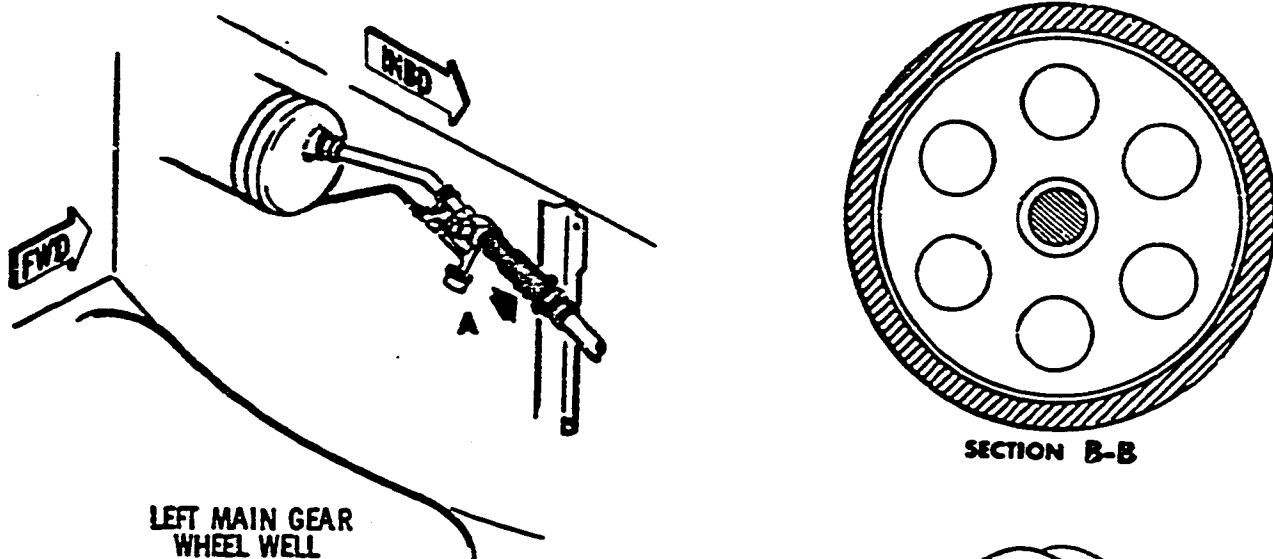

Hydraulic Reservoir Relief Valve  
 Figure 7

HA2-17

29-10-0  
 CODE 14  
 Page 16

Printed in U.S.A.

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

through thermal expansion in the system. The valve has an inlet port and an outlet port and consists, internally, of an inlet port seat and a spring-loaded poppet.

- (2) The relief valve is installed in the overboard vent line downstream of the hydraulic reservoir air bleed valve. In the event that excess pressure builds up in the reservoir, the poppet will start to relieve at 45 (+5, -0) psi. Full flow of 10 gpm is attained at 80 psi maximum. The poppet reseats at 90 percent of the opening pressure.

F. Hydraulic Reservoir Air Bleed Valve (See Figure 8.)

- (1) The hydraulic reservoir air bleed valve and pressure gage are located on the aft side of the rear spar in the left main gear wheel well, inboard of the hydraulic reservoir air chamber. The bleed valve and gage are installed in the overboard vent line, between the reservoir air chamber and the reservoir relief valve.
- (2) The bleed valve is used to relieve the reservoir air pressure prior to disconnecting lines or components in the hydraulic system. The pressure gage provides a ready indication of the hydraulic reservoir air pressure and is used in conjunction with the bleed valve to indicate the air pressure status.
- (3) The air inflation valve is installed on the same fitting as the bleed valve and pressure gage. The air inflation valve is used to manually charge the reservoir with air or dry nitrogen.


G. Hydraulic Reservoir Vacuum Breaker Check Valve (See Figure 9.)

- (1) The hydraulic reservoir vacuum breaker check valve is installed on the regulator-aspirator mounting bracket, and connects to the tee fitting at the top of the reservoir. The valve is vented to ambient air. The purpose of this valve is to maintain atmospheric pressure in the reservoir, allowing hydraulic fluid to flow to the auxiliary hydraulic pump in the event of a failure of the reservoir pressurization system. The failure, or breakdown, of the pressurization system could cause a fluid starvation at the auxiliary hydraulic pump because of vacuum buildup in the reservoir.

H. Hydraulic Reservoir Air Chamber

- (1) The hydraulic reservoir air chamber is a small, cylindrical tank with a capacity of 700 cubic inches. It has two ports, an inlet port at the bottom of the chamber and an outlet port in one end of the chamber. The inlet port mounting boss is fitted with a drain plug. The air chamber is installed on the aft side of the rear spar in the left main gear wheel well, inboard and above the hydraulic reservoir filler assembly. Access to the air chamber is through the left main gear inboard door.
- (2) The air chamber provides for greater fluid capacity in the hydraulic reservoir by providing air and foam space for the reservoir in a


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

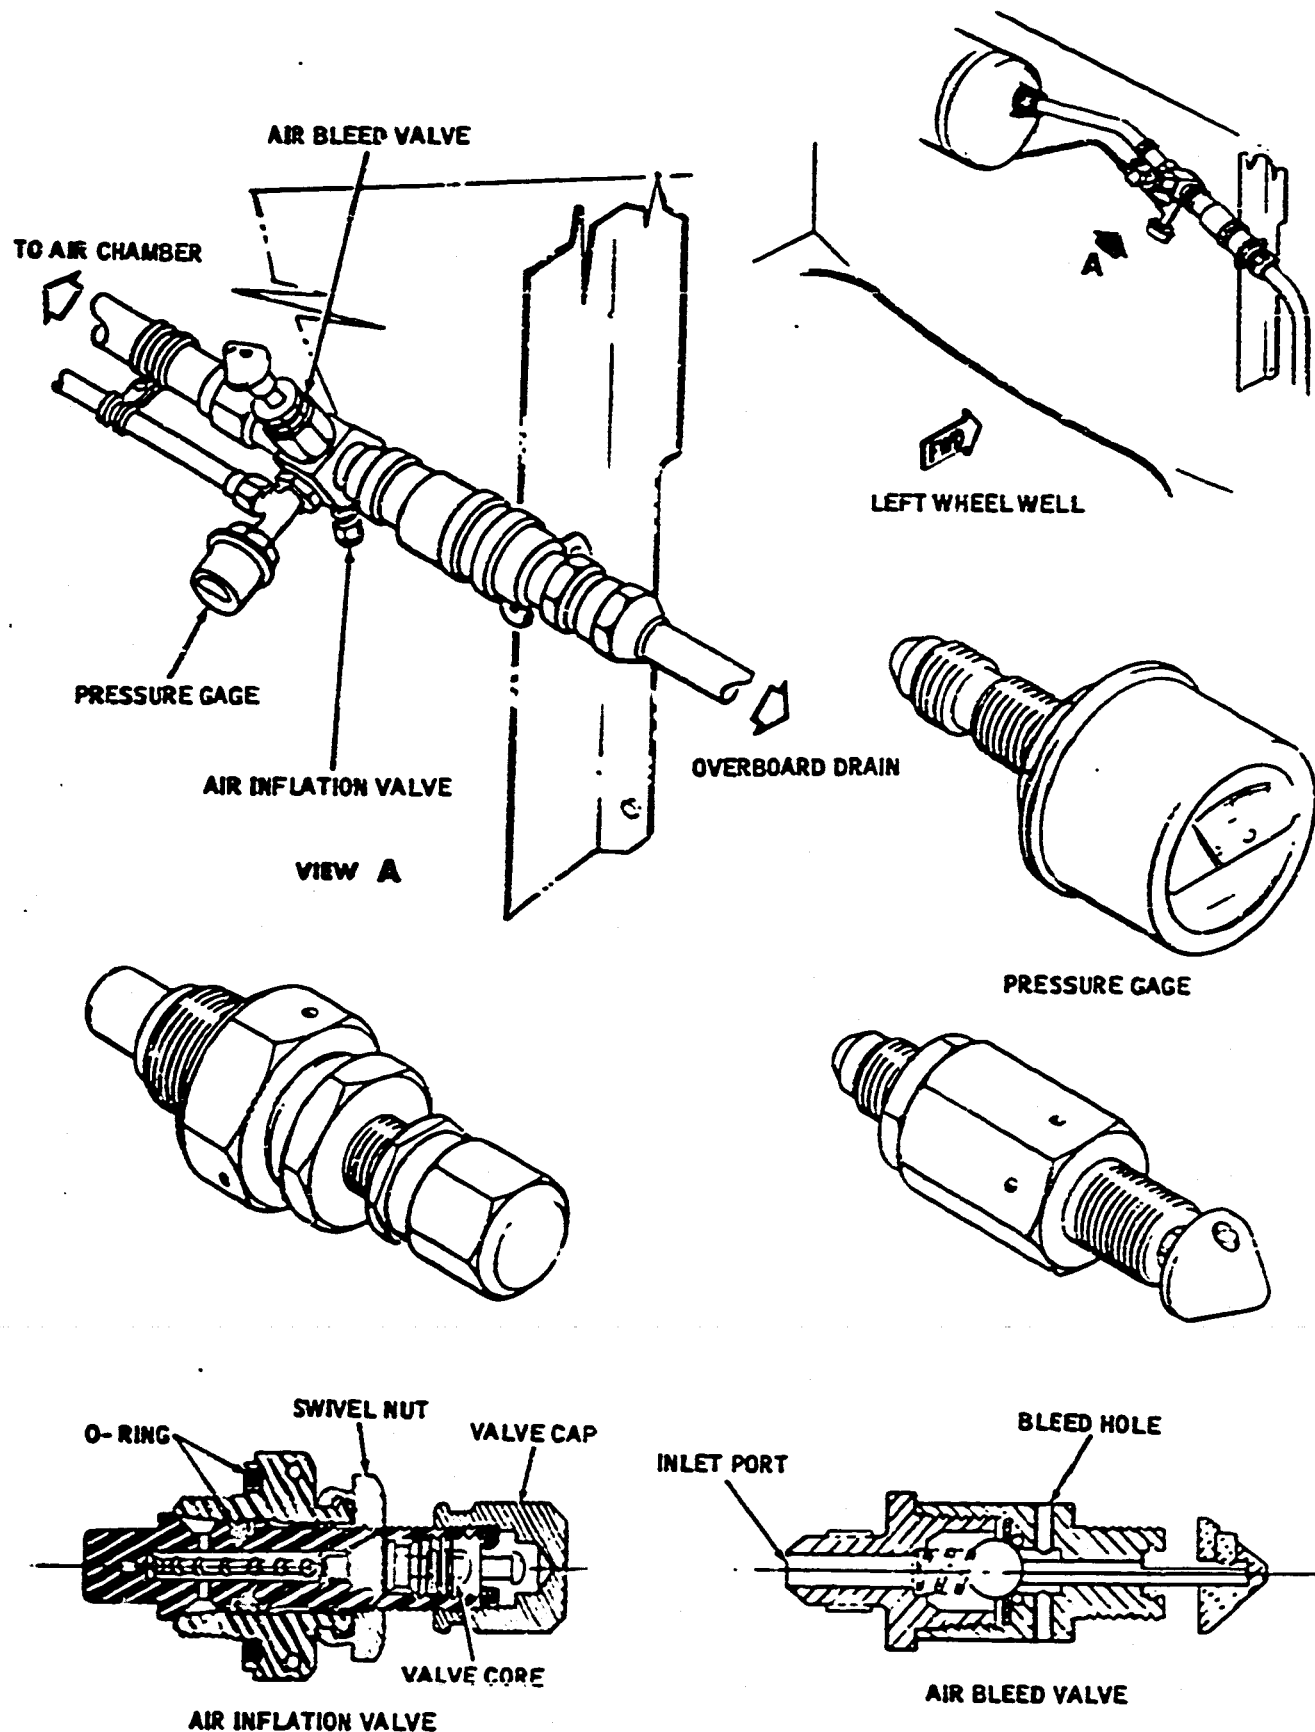

Reservoir Air Bleed Valve, Air Inflation  
 Valve, and Pressure Gage  
 Figure 8

HA2-32

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

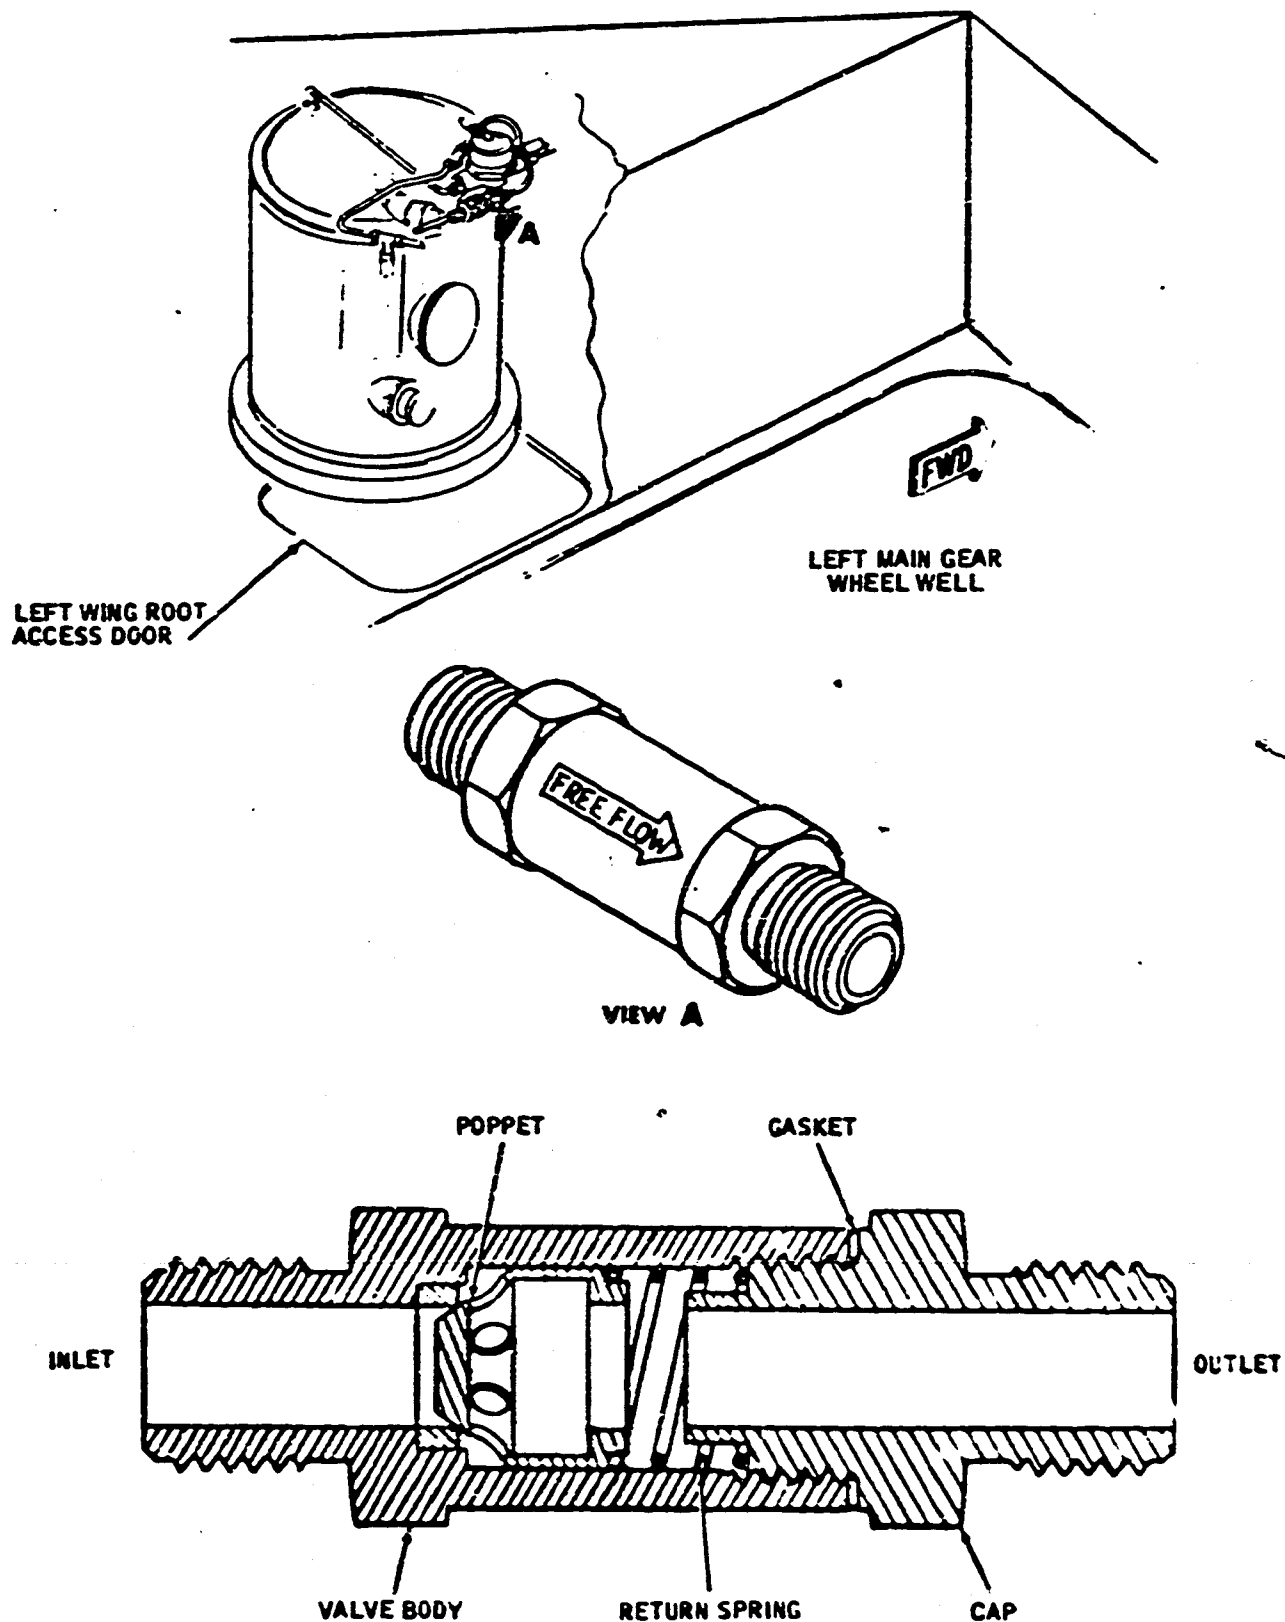

Hydraulic Reservoir Vacuum Breaker Check Valve  
 Figure 9

Jun 15/67

Printed in U S A

HA2-33  
 29-10-0  
 CODE 14  
 Page 19

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

separate container. Air pressure in the chamber is maintained by the regulator-aspirator and the air relief valve. The air pressure in the chamber and reservoir can be relieved, when desired, by the air bleed valve located downstream of the chamber. The air chamber is mounted higher than the reservoir filler assembly, to prevent overfilling of the reservoir from reducing the available air space and to prevent fluid from being vented overboard through the reservoir relief valve.


I. Hydraulic Reservoir Port B Return Check Valve (See Figure 10.)

- (1) The reservoir port B return check valve is installed in port B of the reservoir to prevent reverse flow of hydraulic fluid from the reservoir to the return line. The check valve is located on the reservoir in the left wing root and is accessible through the left wing root access door.
- (2) Externally and internally, the port B check valve is a standard-type check valve with a 1500-psi rating. A nominal pressure of approximately 8 psi unseats the poppet, permitting fluid to flow through the valve. When the reservoir pressure exceeds the return line pressure, the poppet will seat and reverse fluid flow will be prevented.


J. Engine Hydraulic Fire Shutoff Valve (See Figures 11 and 12.)

- (1) The engine hydraulic fire shutoff valve is a gate-type, mechanically controlled valve, installed in the supply line of each engine-driven hydraulic pump. The engine hydraulic fire shutoff valve is actuated from the flight compartment to prevent the flow of hydraulic fluid into the engine section.
- (2) The engine hydraulic fire shutoff valve is mounted on a 2-piece channel bracket which is installed inside the wing leading edge, aft of the firewall of each inboard pylon. Access to the valve is through the access door located on the lower side of the wing leading edge, outboard of either the left or right inboard pylon. Each valve is located approximately 30 inches inboard of the access door.
- (3) Internally, the valve consists of a valve arm, valve arm link, cam plate, and slide blade. The valve arm link attaches to the valve arm and is allowed to swivel through an arc in relation to the valve arm. The link has a stop that will contact the arm when the two have traveled to the valve closed, full overtravel position. In the full open pretravel position, the link contacts the arm stop.
- (4) A roller attached to the end of the link rides in, and extends through, a J-shaped slot in the cam plate. The rotation of the valve arm causes the link roller to follow the cam slot, allowing the arm and link to move through independent arcs.
- (5) The slide blade (gate of the valve) is slotted near the one end and also receives the link roller extending through the cam slot. The slide blade is positioned parallel to the cam plate and is guided by two

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

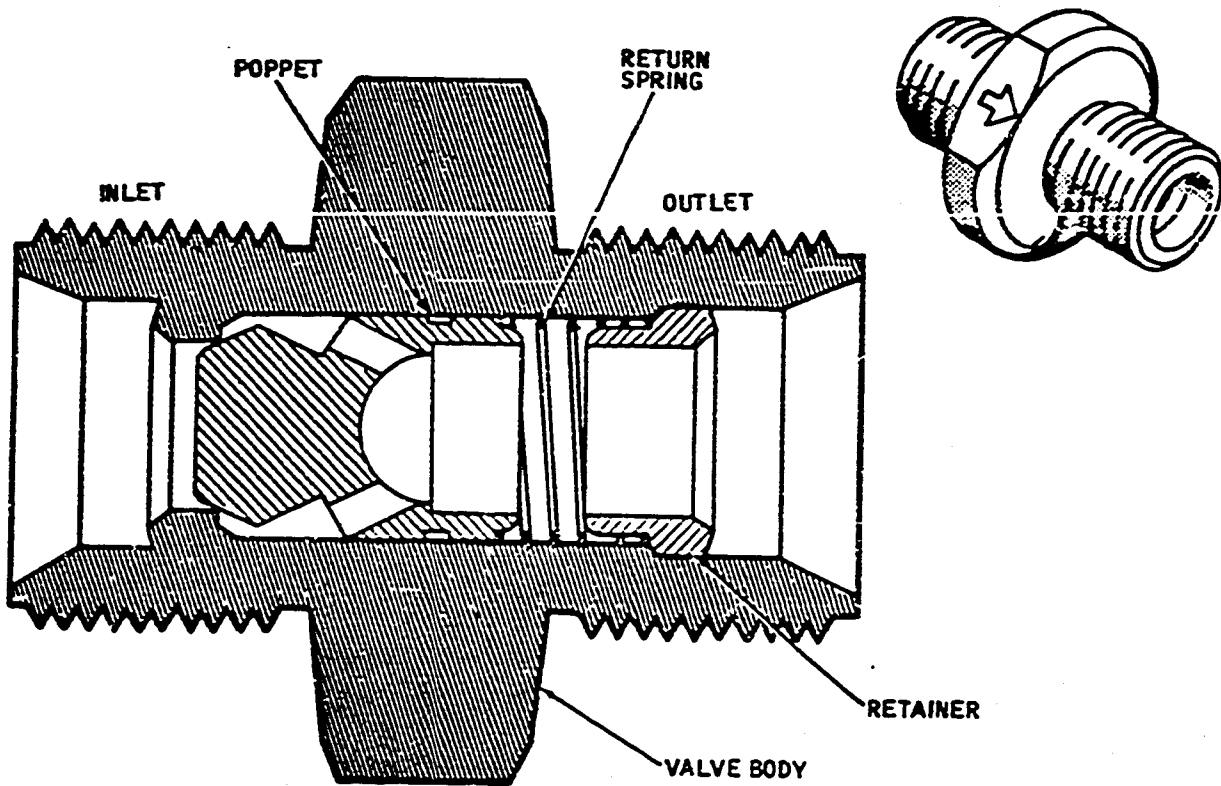

MINIATURE CHECK VALVE

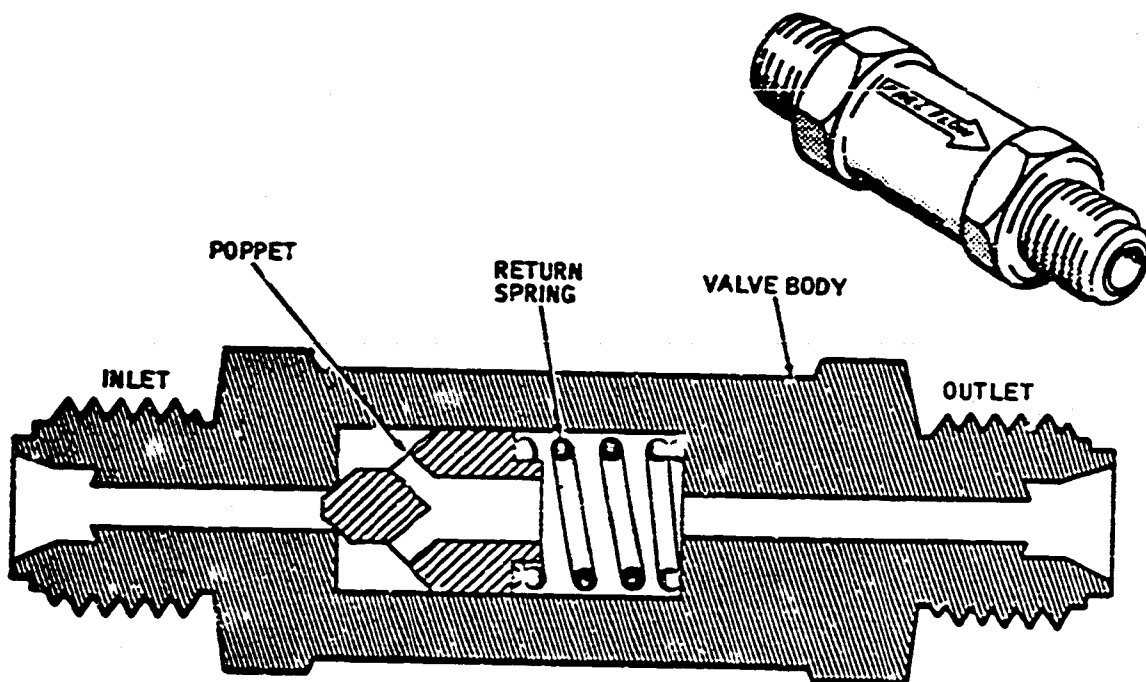

STANDARD CHECK VALVE

Hydraulic Check Valves -- Typical  
Figure 10


HA2-18A

Oct 1/67

Printed in U.S.A.

29-10-0  
CODE 14  
Page 21

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


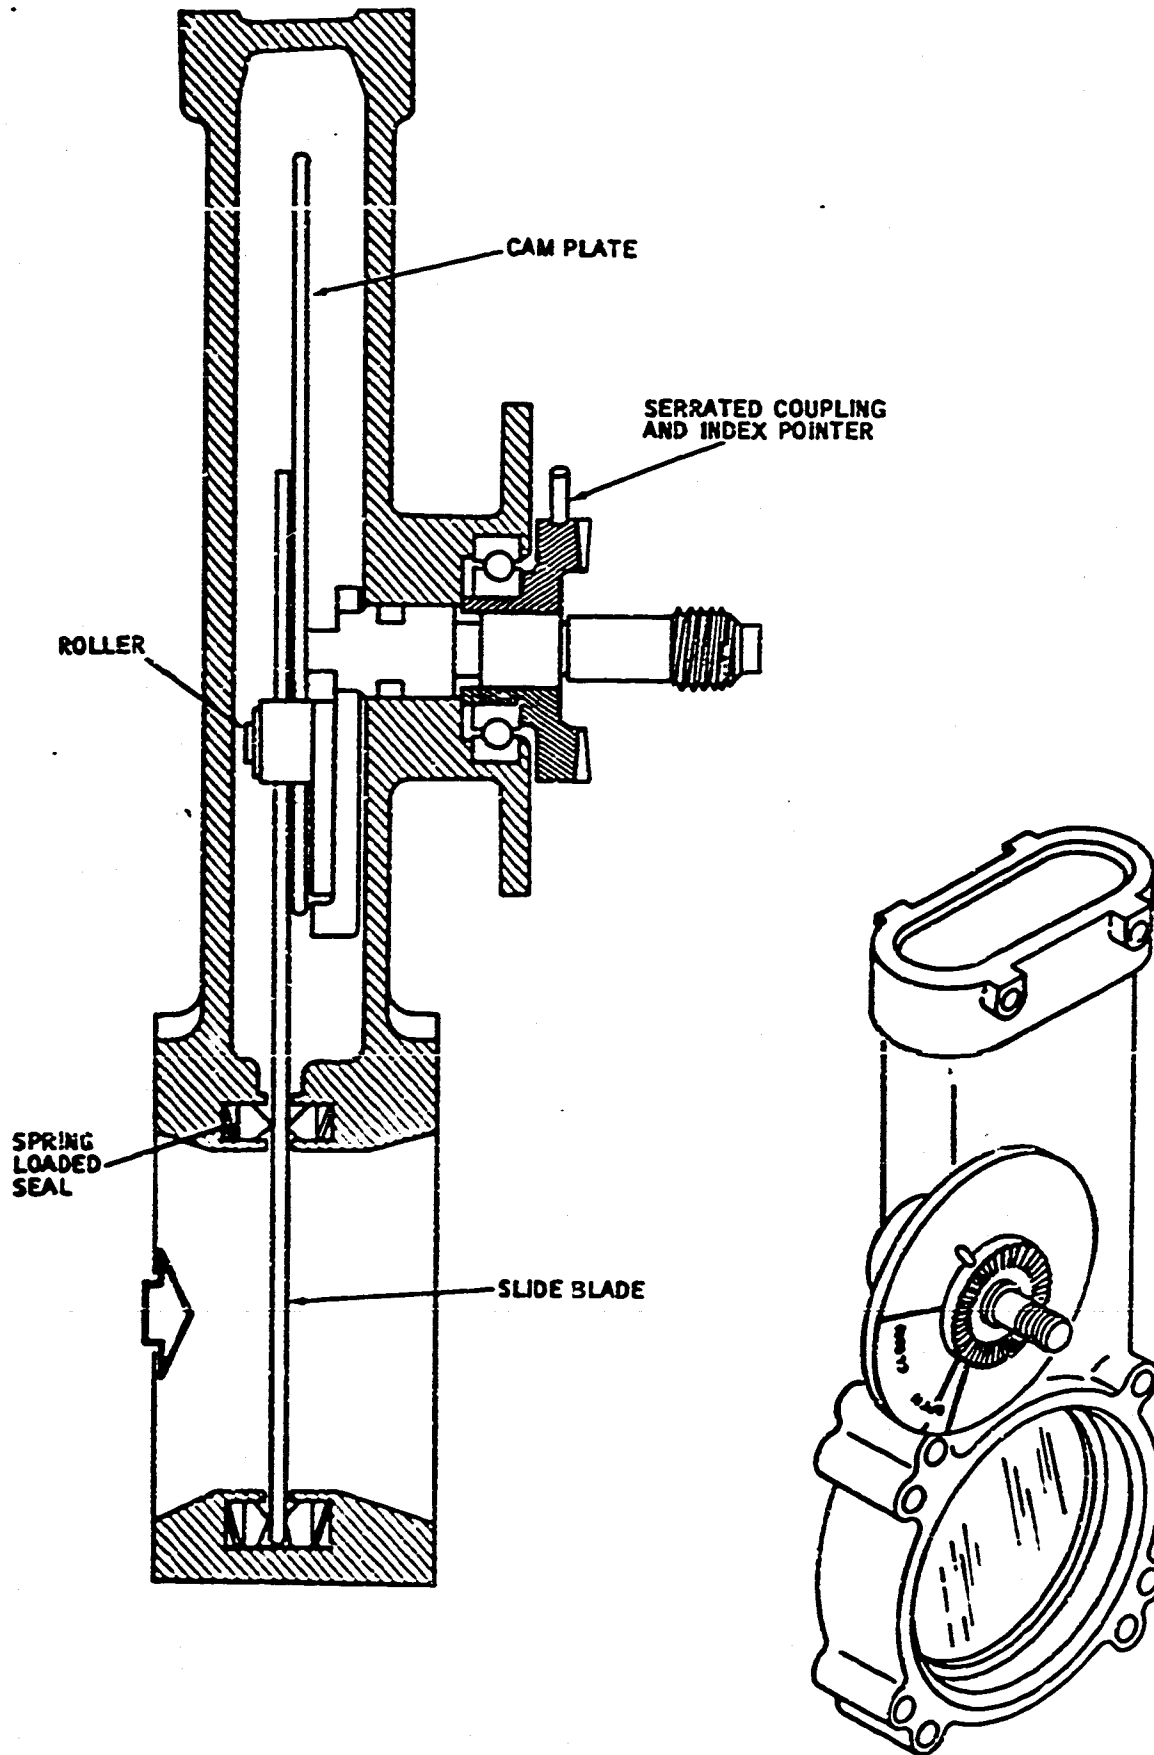


Engine Hydraulic Fire Shutoff Valve -- Schematic  
Figure 11

HA2-2209



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

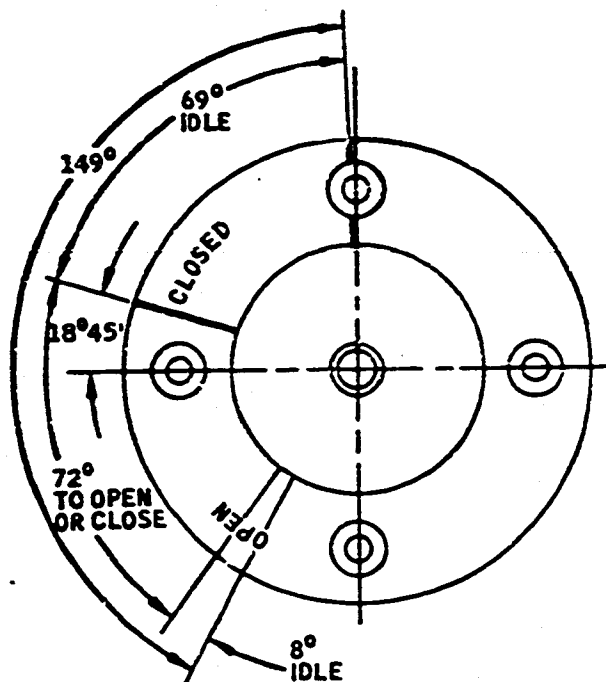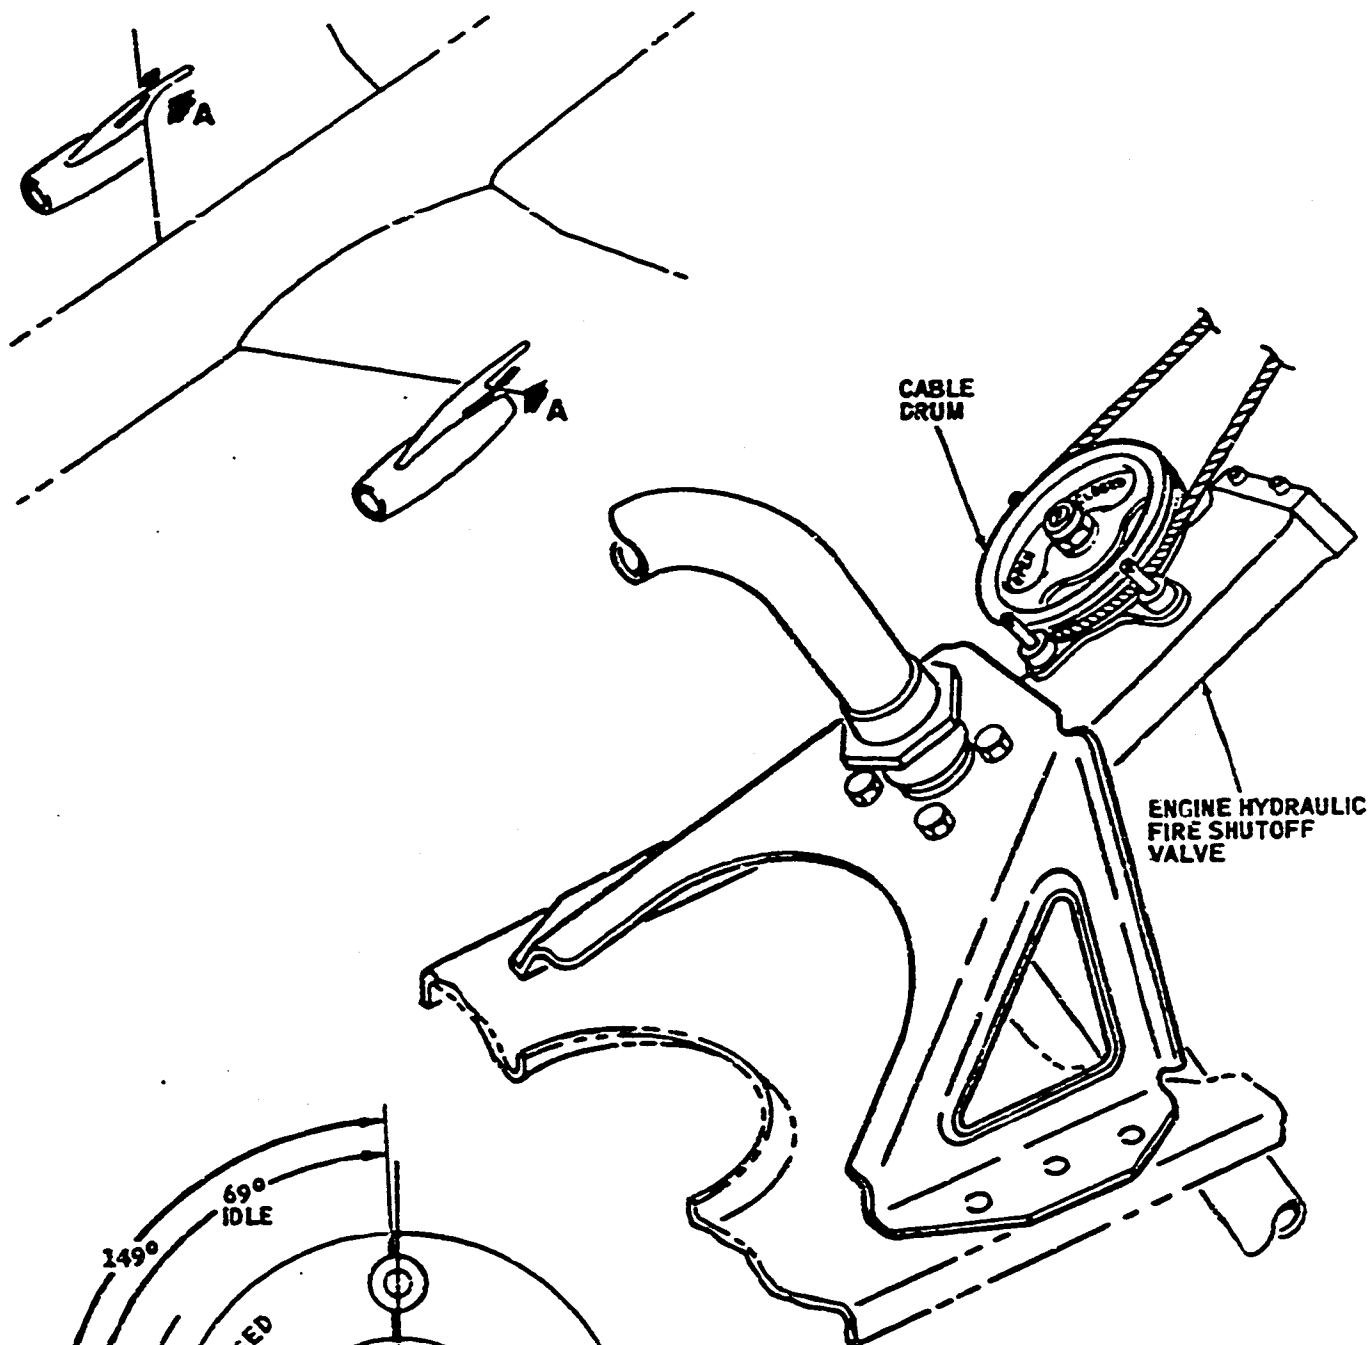

VALVE POSITION DIAGRAM

Engine Hydraulic Fire Shutoff Valve  
 Figure 12

HA2-2978

29-10-0  
 CODE 14  
 Page 23

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL




grooves in the housing. This will allow the blade to open or close through porting of the valve by the action of the arm and link. The cam plate is pinned to the valve shaft, securing it rigidly in two positioning grooves in the housing. A pin-indicator is provided to relate valve position to a reference plate placarded open and closed.

- (6) The engine hydraulic fire shutoff valves are cable actuated by the fire control handles, located on the overhead switch panel in the flight compartment. When the fire control handle for either inboard engine is moved, the cable system rotates the drum which is attached to the corresponding shutoff valve shaft. This action extends the valve blade into the fluid passage to block the flow of fluid. The valve operates from open to close by clockwise rotation of the cable drum. The valve gage will idle during the first 8 degrees of rotation of the cable drum, and then will close in the next 72 degrees. The cable drum will continue to rotate the shaft for an additional 69 degrees after the gate valve is closed, locking it overcenter. Total travel of the cable drum is 149 degrees.

**K. Engine-Driven Hydraulic Pump (See Figure 13.)**

- (1) A variable-displacement, pressure-compensated, engine-driven hydraulic pump is installed on each inboard engine. The pump incorporates a solenoid bypass feature for reducing the output of the pump. The bypass valves are controlled by two engine hydraulic pump control switches in the flight compartment. The switch for the hydraulic pump on engine No. 2 is placarded left, on and bypass. The switch for the hydraulic pump on engine No. 3 is placarded right, on and bypass. When either of the two engine hydraulic pump control switches is placed in the bypass position, the bypass valve solenoid for that hydraulic pump is energized and the pump pressure decreases to 300 ( $\pm 100$ ) psi. When either switch is in the on position, the control circuit to the corresponding bypass valve is open and the hydraulic pump operates normally in the pressure range of 2850 to 3050 psi. The pump provides a continuous, nonpulsating flow of hydraulic fluid, under pressure, to the hydraulic manifolds for distribution throughout the hydraulic system. Each of the engine-driven pumps is located on the accessory drive pad of the inboard engines. These pumps are accessible through the access doors on the right side of the nacelles and removal of the engine bypass duct.
- (2) Three case drain ports are provided: two are on the yoke assembly housing, and the third is on the casing for the pressure control valve, adjacent to the inlet port fitting. The case drain port on top of the yoke assembly housing is used as the case drain connection to assure that the pump housing is full of fluid at all times. This drain connection is ported back to the low-pressure return port of the reservoir. The inlet port fitting is on top of the pump housing and the outlet port fitting is opposite to it on the bottom of the housing, and contains a low pressure indicating light switch.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

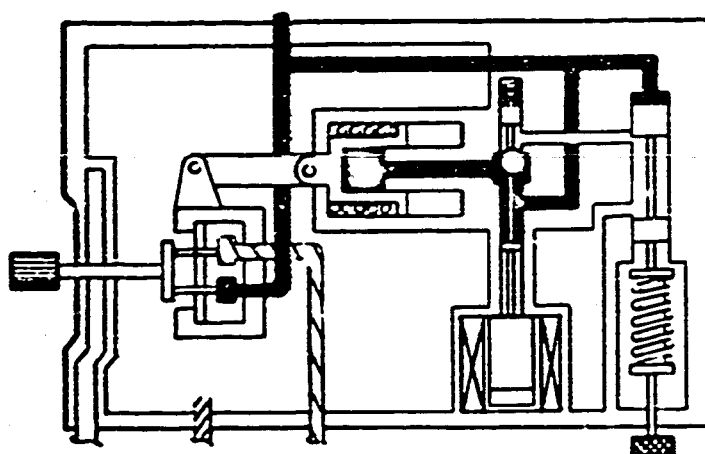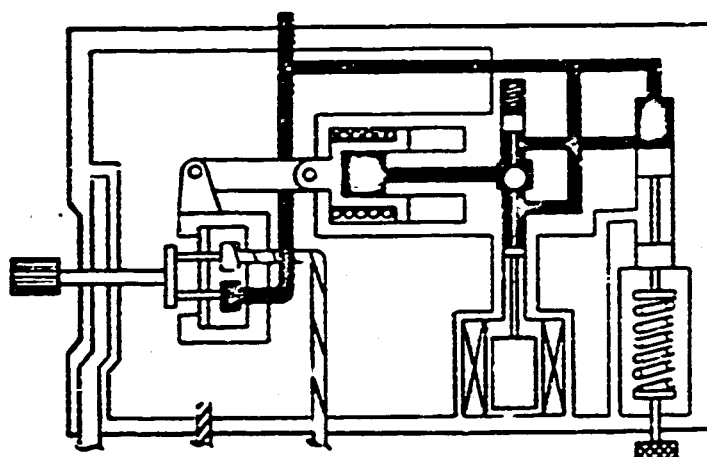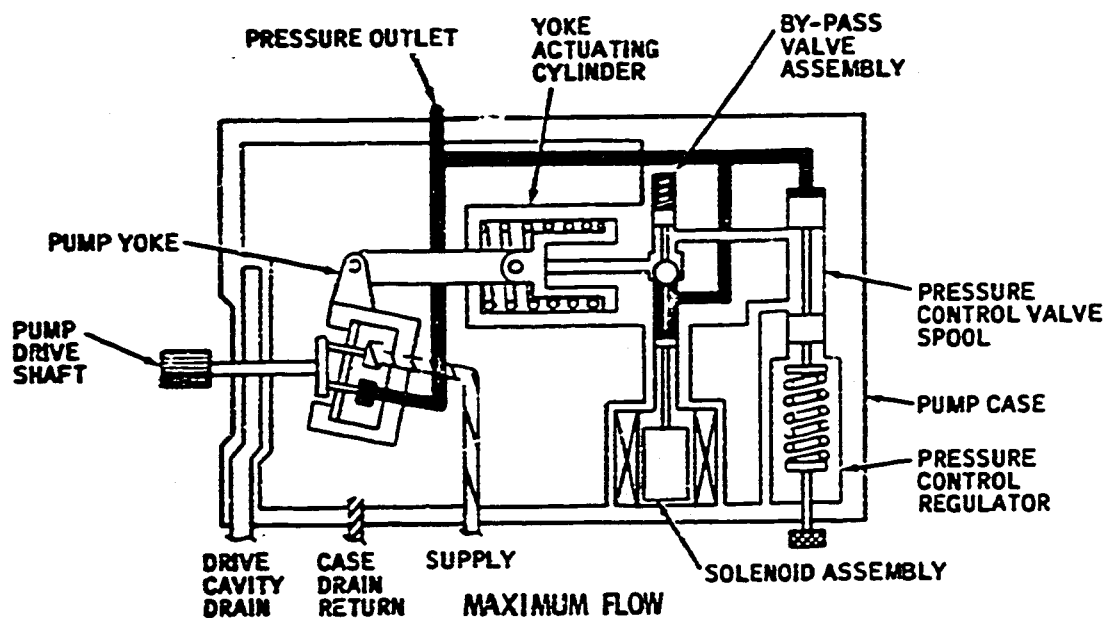

■ PRESSURE  
 ▨ CASE DRAIN  
 ▧ SUPPLY  
 □ DRIVE CAVITY DRAIN  
 HA2-837

Engine-Driven Hydraulic Pump Pressure Flow -- Schematic  
 Figure 13

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 14  
 Page 25

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The yoke control piston casing is an integral part of the pump case. Four self-locking nuts are used to hold the piston casing end-plate in position. The bypass valve assembly, consisting of the valve body and a solenoid, is mounted externally on the pump case, under the yoke control piston casing. This solenoid valve is provided with an electrical connector. A pressure control regulator is installed on the bypass valve body by means of four bolts. This regulator is cylindrical and is provided with an external adjustment screw. A lock screw is used to retain the adjusting screw after the adjustment has been made.
- (4) Hydraulic fluid enters the pump through an inlet port. Passages in the yoke carry the fluid to the valve plate, which ports the fluid to the cylinder block. The nine pistons in the cylinder block are actuated by the rotating driven shaft, thereby pressurizing the fluid. From the cylinder block, the fluid is routed to the outlet port of the yoke and then to the pump pressure lines. The pressure control regulator is actuated by pump output pressure that is bled to the regulator. The regulator meters the pressure to the yoke control piston, which positions the yoke.
- (5) The maximum pump pressure is determined by the adjustment of the pressure control regulator. The pressure control regulator allows maximum output flow (22.5 gpm at 3500 rpm) up to 2850 psi system pressure. When this pressure is reached, the yoke assembly starts to move towards the zero flow position.
- (6) Pressure continues to rise until the displacement is reduced from maximum flow to zero flow and 3000 psi is reached. If the engine-driven hydraulic pump control switches are in the on position and the output pressure of either pump drops below 1500 psi, an amber light located in the flight compartment comes on.

L. Engine-Driven Hydraulic Pump Check Valves (See Figure 10.)

- (1) Two check valves, rated at 3000 psi, are installed in the lines from each engine-driven hydraulic pump. One check valve is installed in the pressure line and the other is in the case drain line. The check valves in the pump pressure lines prevent reverse flow of hydraulic fluid through the pump, when the pump is inoperative or when external hydraulic pressure is supplied to the system. Access to the valves can be gained through an access door in the forward right apron of each inboard pylon. The valves are mounted on the exterior wall of the inlet box by means of the bulkhead fittings and retaining nuts.
- (2) Normal operating pressure will unseat the poppet, and fluid will flow through the valve. When pressure downstream of the valve exceeds pressure from the pump, the pressure, with the aid of the return spring, will seat the poppet. This prevents reverse flow of hydraulic fluid through the pumps.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

**M. Engine-Driven Hydraulic Pump Case Drain Filter (See Figure 14.)**

- (1) A line-type, micron filter, for use in a low-pressure hydraulic system, is installed in the engine-driven hydraulic pump case drain return line between the pump flow check valve and the hydraulic system reservoir. The case drain filter is installed on the aft surface of the rear spar opposite the leading edge of the inboard flap assembly. One filter is used for each engine-driven pump. Access is gained to the filter by lowering the flaps. A second check valve is installed adjacent to the filter in the downstream side of the case drain return line.
- (2) Externally, the filter is approximately 5 inches high and 2 inches wide, with ports marked inlet and outlet. The bowl is cylindrical in shape, with hex-shaped wrench flats at the lower end. A self-sealing, magnetic drain plug is installed in the bottom end of the filter bowl. The filter element is made of chemically treated paper.

**N. Dual Filter and Relief Valve (See Figure 15.)**


- (1) The hydraulic power system dual filter and relief valve consists of two filters and two relief valves installed in the same body. The unit filters the hydraulic fluid from the two engine-driven hydraulic pumps, and the pressure relief valves assure that excessive pressures do not build up in the pressure line from the pumps. The unit is located in the left main gear wheel well on the lower portion of the rear spar, approximately 1 foot outboard of the centerline shear web.
- (2) The unit consists of a casting with a flange-mounted pressure inlet port on each end. Two pressure outlets are located on the top of the casting. One outlet, centrally located, is the main pressure outlet to the system selector valve. The other, located to the left of the selector valve port, is the pressure outlet to the air pressure regulator-aspirator. The return outlet port for the relief valve portion of the unit is located on the center of the aft face of the body, canted upward. The nose gear return line is connected to a check valve installed in a return line port, located between the two filter bowls.
- (3) The pressure relief valves are located behind the pressure inlet ports and are connected to the return outlet port of the unit. The inlet from the nose gear return line is routed through the casting to the return outlet port.
- (4) If either of the filter elements becomes clogged, pressure above 3300 psi at the inlet port will unseat the poppet. Pressure above 3500 psi will allow full flow of 22.5 gpm to flow to the return port of the unit and back to the reservoir. The relief valves will reseal at approximately 3000 psi.
- (5) A check valve is installed in the system selector valve port to prevent reverse flow of pressure through the filter during auxiliary hydraulic pump operation.

Jun 15/67


Printed in U.S.A.

29-10-0  
CODE 14  
Page 27


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

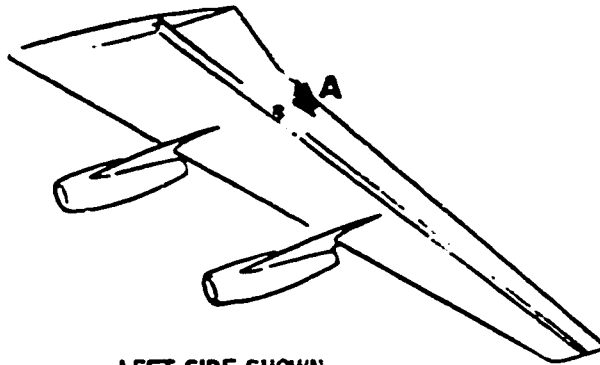

LEFT SIDE SHOWN  
 RIGHT SIDE OPPOSITE

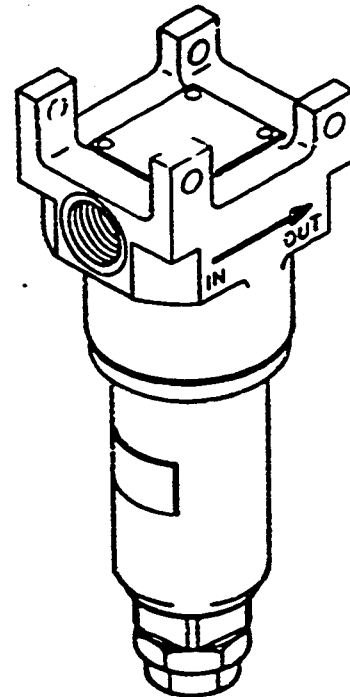




VIEW A

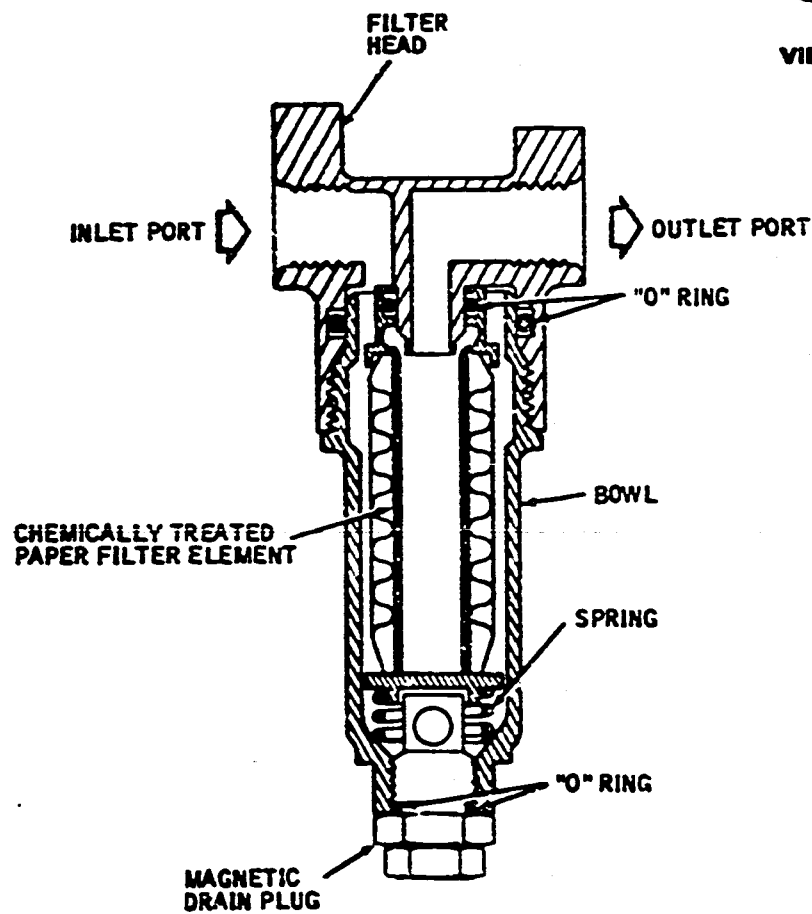

HA2-31

Engine-Driven Hydraulic Pump Case Drain Filter -- Cutaway View  
 Figure 14

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

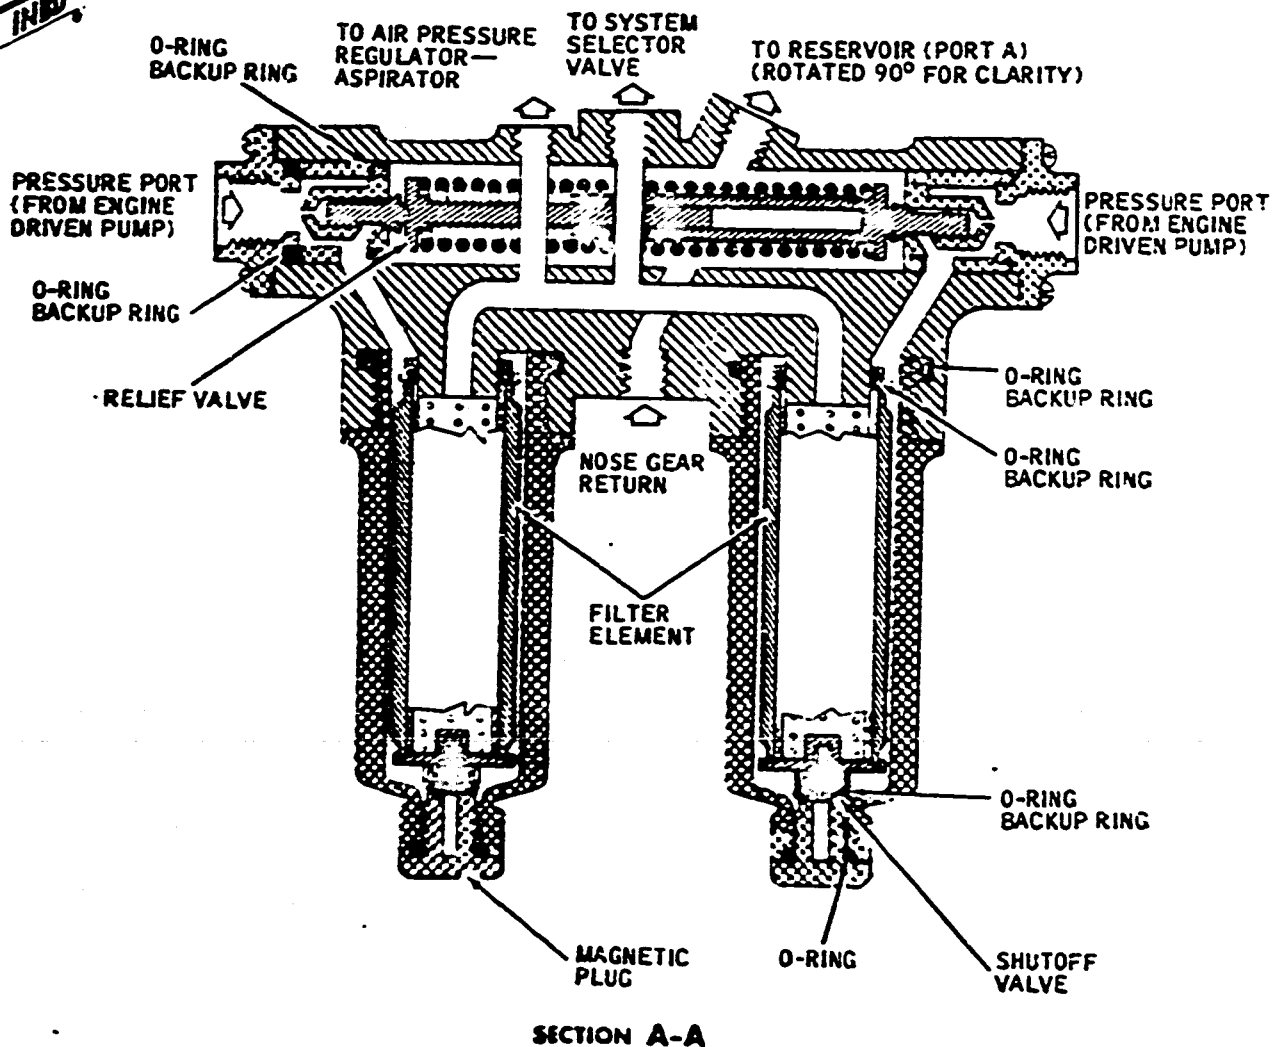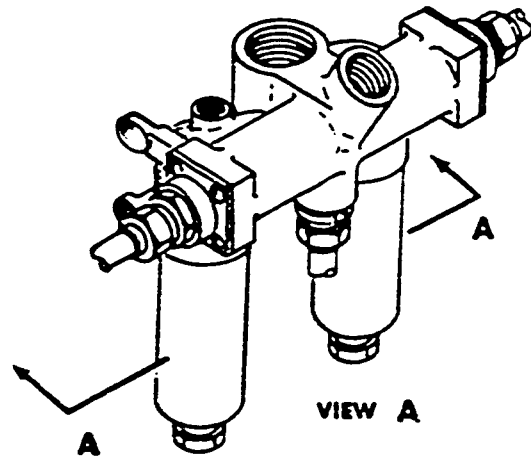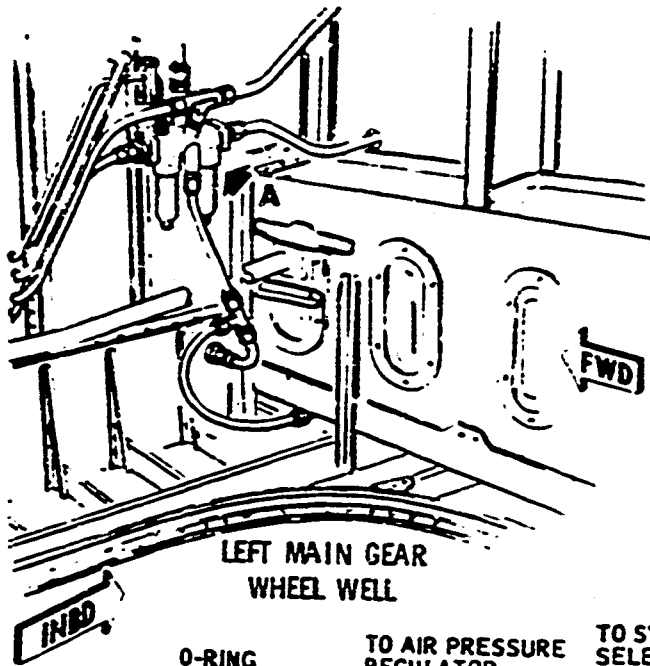

Dual-Filter and Relief Valve -- Cutaway Valve  
 Figure 15

Jun 15/67

Printed in U.S.A.

HA2-20

29-10-0  
 CODE 14  
 Page 29

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

O. System Selector Valve (See Figures 16 and 17.)


- (1) The system selector valve is a 3-position valve which permits directional control of fluid under pressure. The valve is installed on the left hydraulic power manifold and is accessible through the left main gear inboard door.
- (2) The selector valve pressure-to-system port and the return port are directly ported to the manifold. The engine pump pressure enters the valve through a port on the large end of the valve, and the auxiliary pump inlet and alternate ports are located at the top, toward the aft end of the valve. The valve control crank is attached to a push-pull rod and a cable sector.
- (3) Operation of the system selector valve is controlled by a lever located on the right side of the system engineer's control pedestal. When the control lever is moved to the selected position, the cable system, through the sector and crank, operates the valve positioning lever to drive the slide spool assembly to the selected position. When the control lever is placed in the general system (normal) position, the selector valve is actuated, causing hydraulic fluid to enter the valve through the system pressure port. The fluid is then directed into the manifold through the pressure-to-system port. In the general system (normal) position, fluid from the auxiliary pressure port is also routed to the pressure-to-system port. In the bypass/general system position, the selector valve ports engine pump pressure into the manifold through the return port. In this position, the auxiliary pump pressure is ported to the general system. In the general system/main gear down and flaps position, pump pressure is routed through the alternate port, at the top of the valve, for alternate operation of the flaps and the landing gear downlock cylinders. Internal leakage provides lubrication for the moving parts of the valve.

P. Left Hydraulic Power Manifold (See Figure 18.)

- (1) The left hydraulic power manifold distributes fluid pressure from the hydraulic pump (any one of the three pumps), through control valves to the various airplane hydraulic subsystems. The left power manifold is located overhead in the left wheel well. Access to the left manifold is through the left main gear inboard door.
- (2) One valve-mounting pad is provided on the top of the manifold for the system selector valve. Four ports are provided on the manifold for connection of hydraulic pressure and return lines. Three of these ports are pressure outlet ports; one, located on the aft face of the manifold and one located on the bottom of the manifold port fluid to the flight controls. The third pressure outlet port, located on the bottom of the manifold, ports fluid directly to the priority valve, which in turn, ports fluid to the nose gear and to the right power manifold. The fourth, a return port, located immediately forward of the pressure line port on the bottom of the manifold, is connected by a line to a return port of the reservoir.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

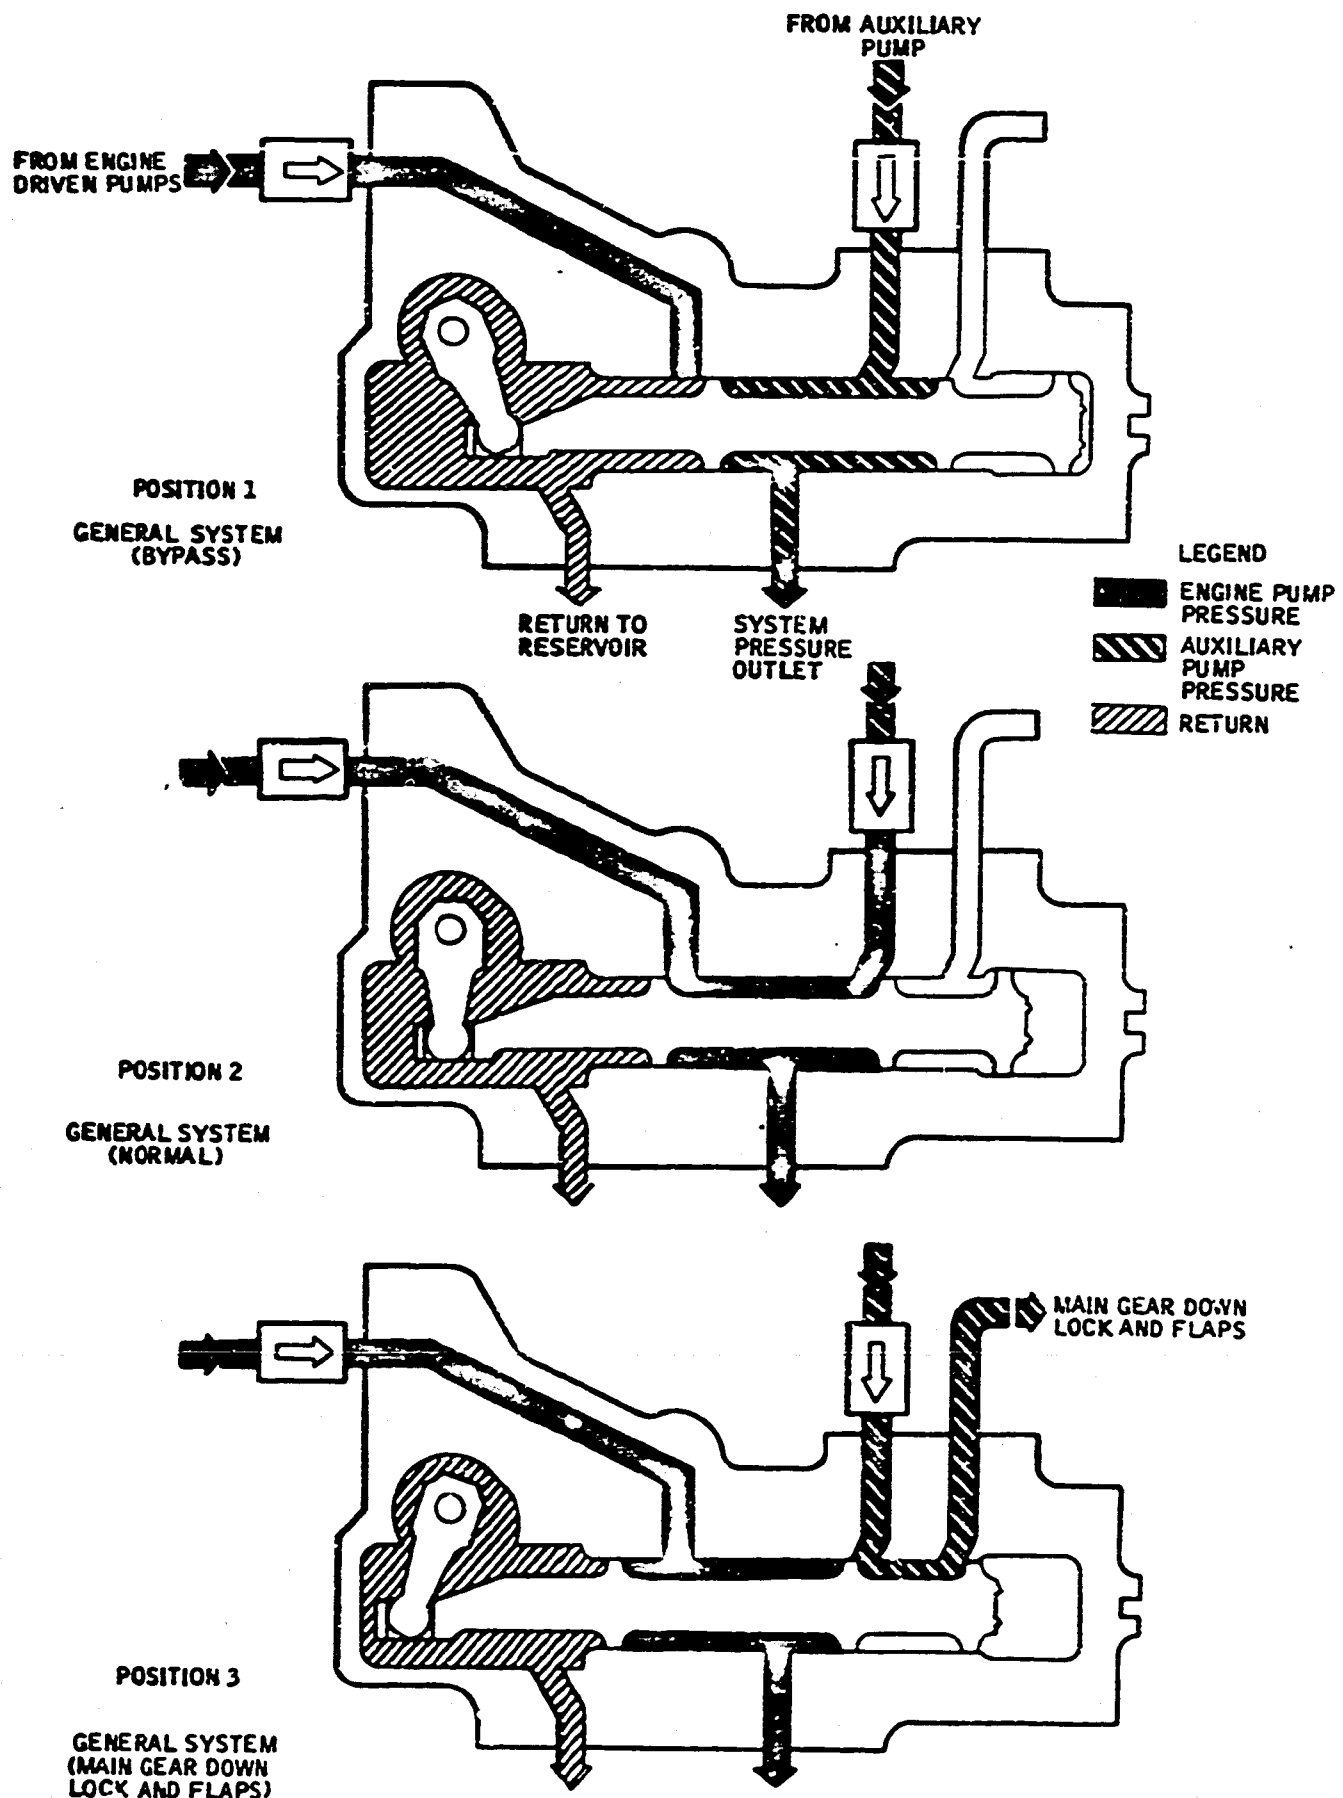

System Selector Valve -- Schematic  
 Figure 16


JUN 15/67

Printed in U.S.A.

HA2-26



29-10-0  
 CODE 14  
 Page 31

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

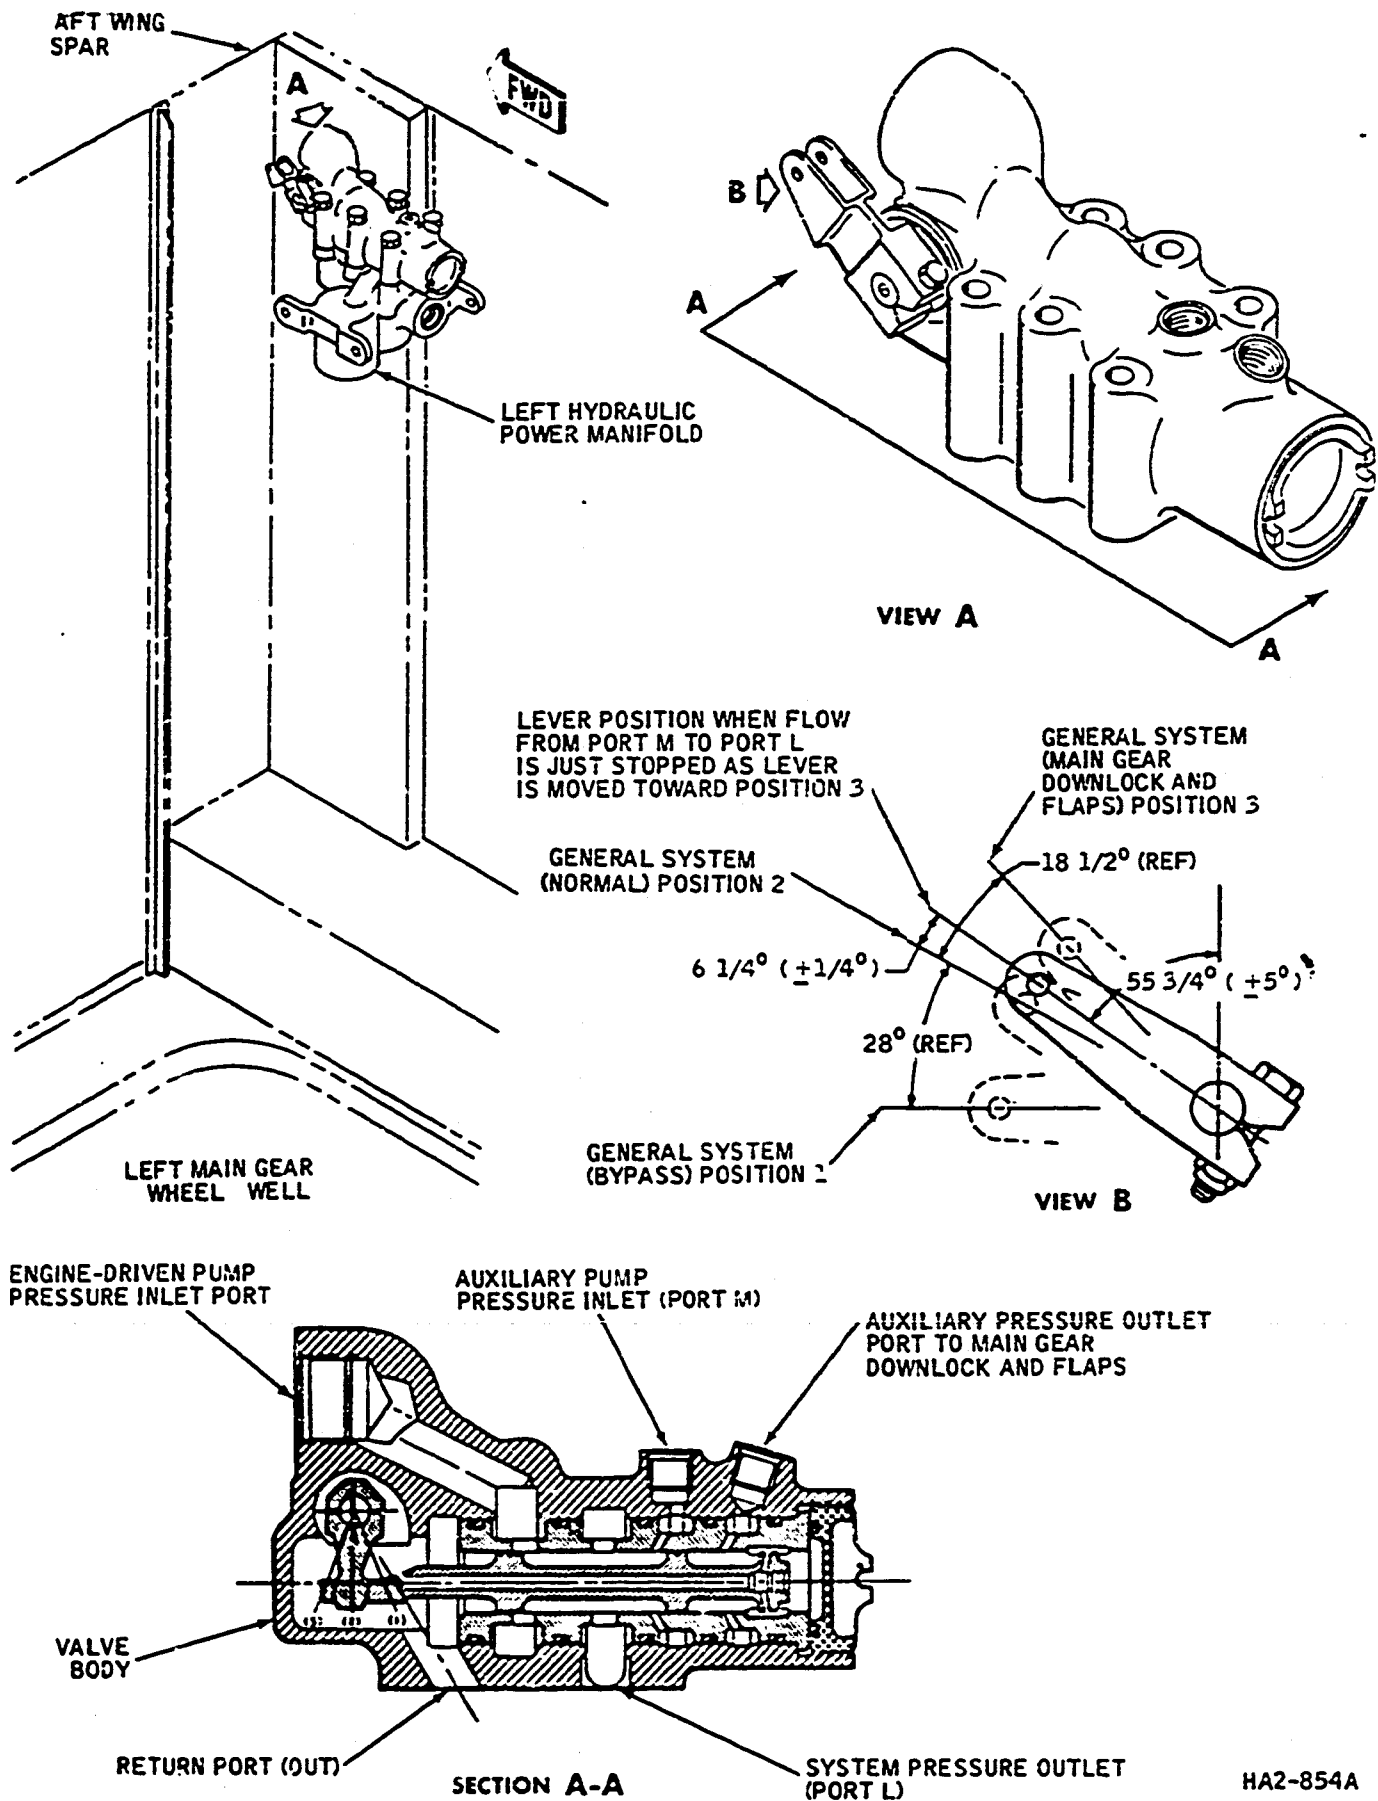

System Selector Valve -- Cutaway View  
 Figure 17

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

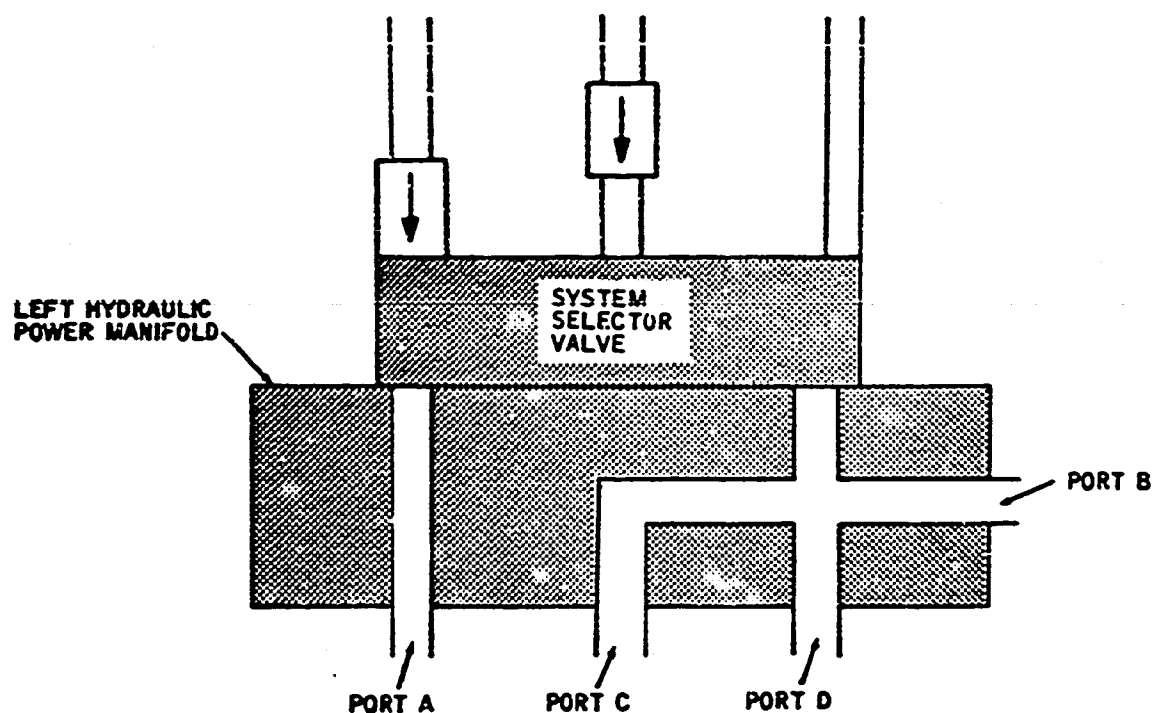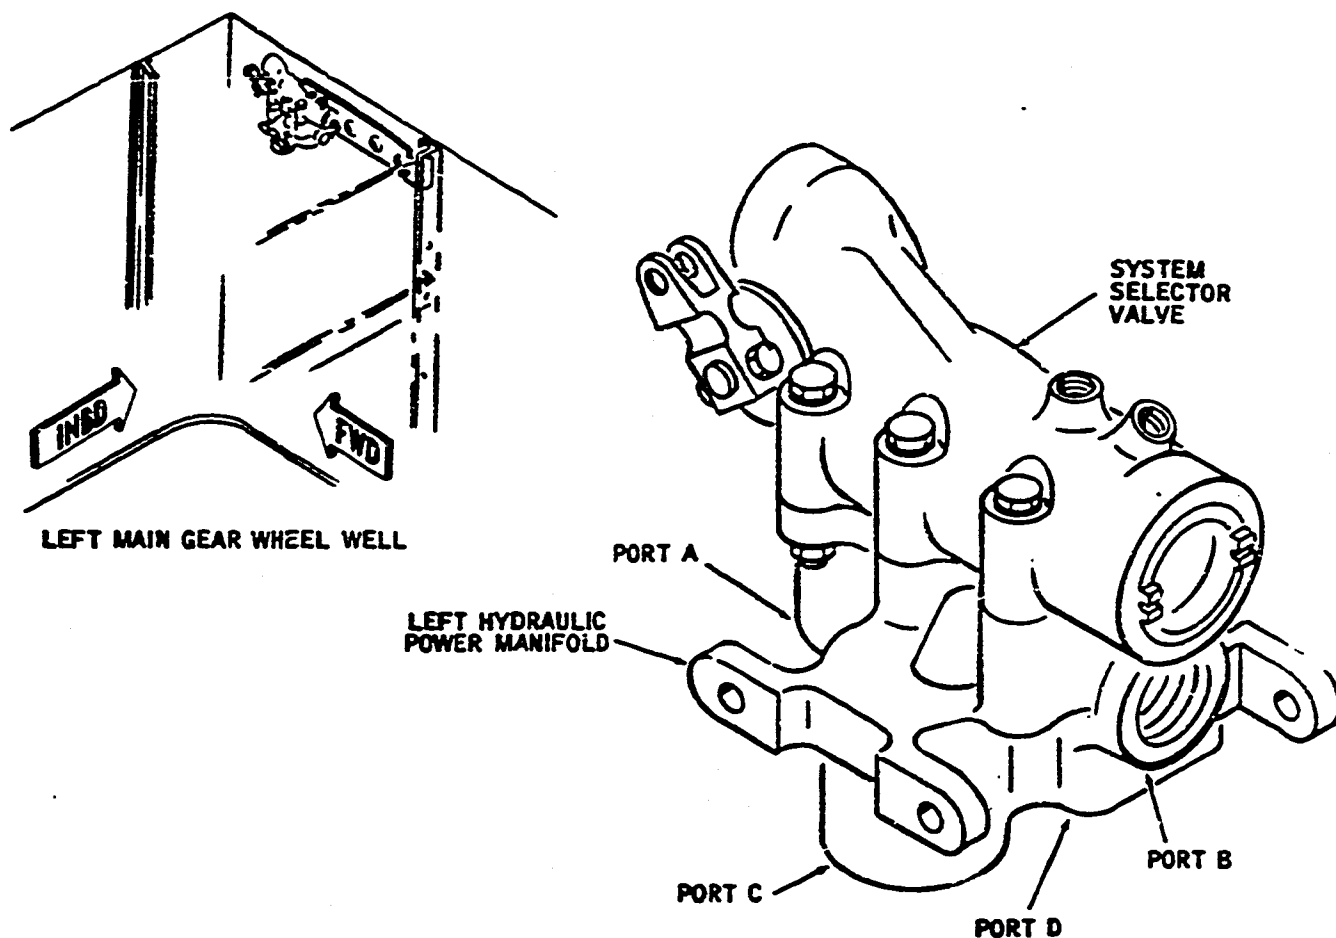

Left Hydraulic Power Manifold -- Schematic  
 Figure 18

HA2-855

Jun 15/67

Printed in U.S.A.

29-10-C  
 CODE 14  
 Page 33

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Q. Right Hydraulic Power Manifold (See Figure 19.)


- (1) The right hydraulic power manifold distributes fluid pressure from the hydraulic pumps (engine-driven or auxiliary, or any combination of these three pumps), through the control valves to the various hydraulic sub-systems. The right hydraulic power manifold is located overhead in the right wheel well. The manifold is held in place with braces and is accessible through the right main gear inboard door.
- (2) The manifold contains passages for pressure and return fluid distribution, four check valves, ports for pressure and return lines, and mounting pads for the various control valves.
- (3) The right manifold receives fluid pressure from the left manifold. Pressure is ported through check valves to the wing flap control valve, to the slot control valve, to the main gear control valve, to the brake control valve, to the brake pressure transmitter, and to the brake accumulators.
- (4) Auxiliary hydraulic pressure is ported from the alternate port of the system selector control valve into port K in the right manifold. Port K is located inboard of the spoiler control valve. From port K, auxiliary hydraulic pressure is ported through a check valve to the downstream side of the wing flap control valve check valve and into the wing flap control valve for alternate operation of the wing flaps.
- (5) The return passage from the wing flap control valve ports fluid to return port A. The brake control valve return passage ports fluid into return line B through a two-way restrictor. The main gear control valve downline return fluid uses a separate port in the valve, bypasses the manifold, and returns the fluid directly to A return line to the reservoir. The upline in the main gear control valve uses the same return port, return port B, in the manifold as the brake control valve.

R. Deleted.


S. Hydraulic Power System Accumulator (See Figure 20.)

- (1) The hydraulic power system accumulator is a spherical, welded-steel, fluid and air bladder-separated container. The accumulator is installed in the pressure line of the hydraulic power system to provide a reserve supply of fluid under pneumatic pressure and to act as a shock absorber for system pressure surges.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

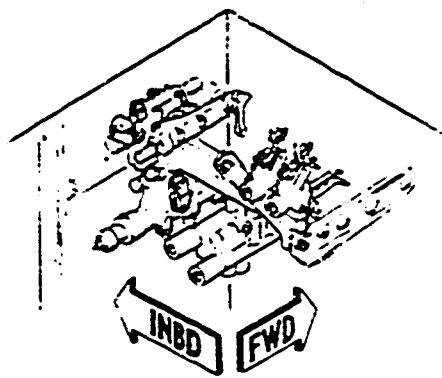

RIGHT MAIN GEAR  
WHEEL WELL

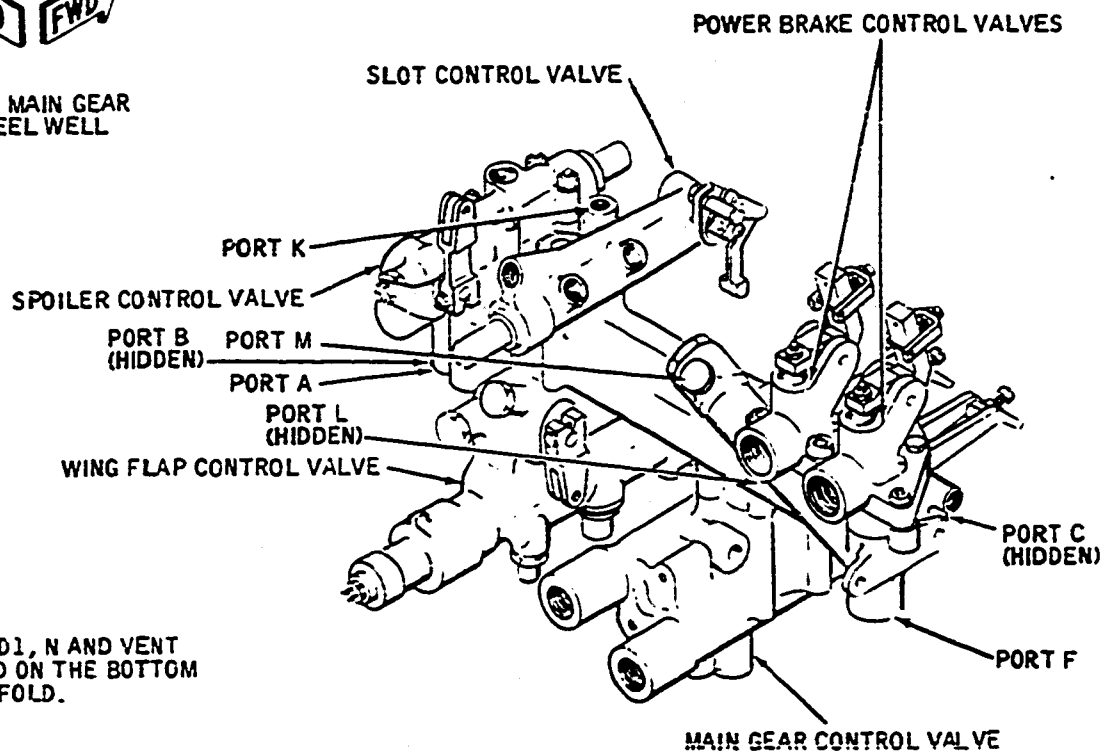

NOTE: PORTS B, C, D<sub>1</sub>, N AND VENT  
ARE LOCATED ON THE BOTTOM  
OF THE MANIFOLD.

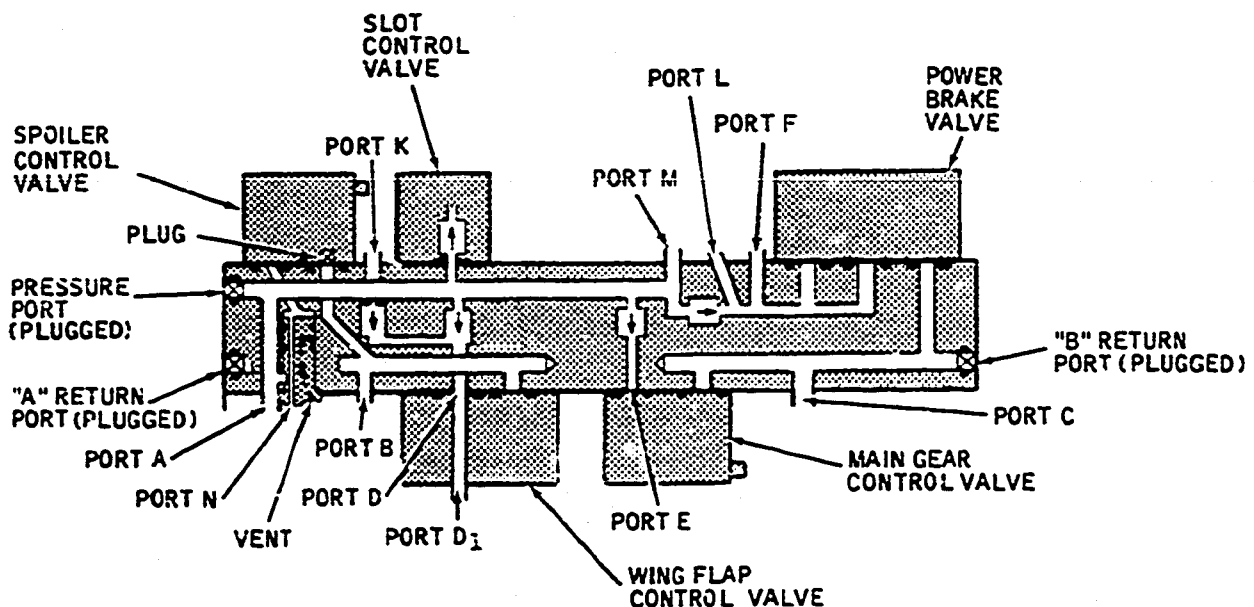

HA2-29A


Right Hydraulic Power Manifold -- Schematic  
 Figure 19

Nov 1/69

Printed in U.S.A.

29-10-0  
 CODE 14  
 Page 35

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

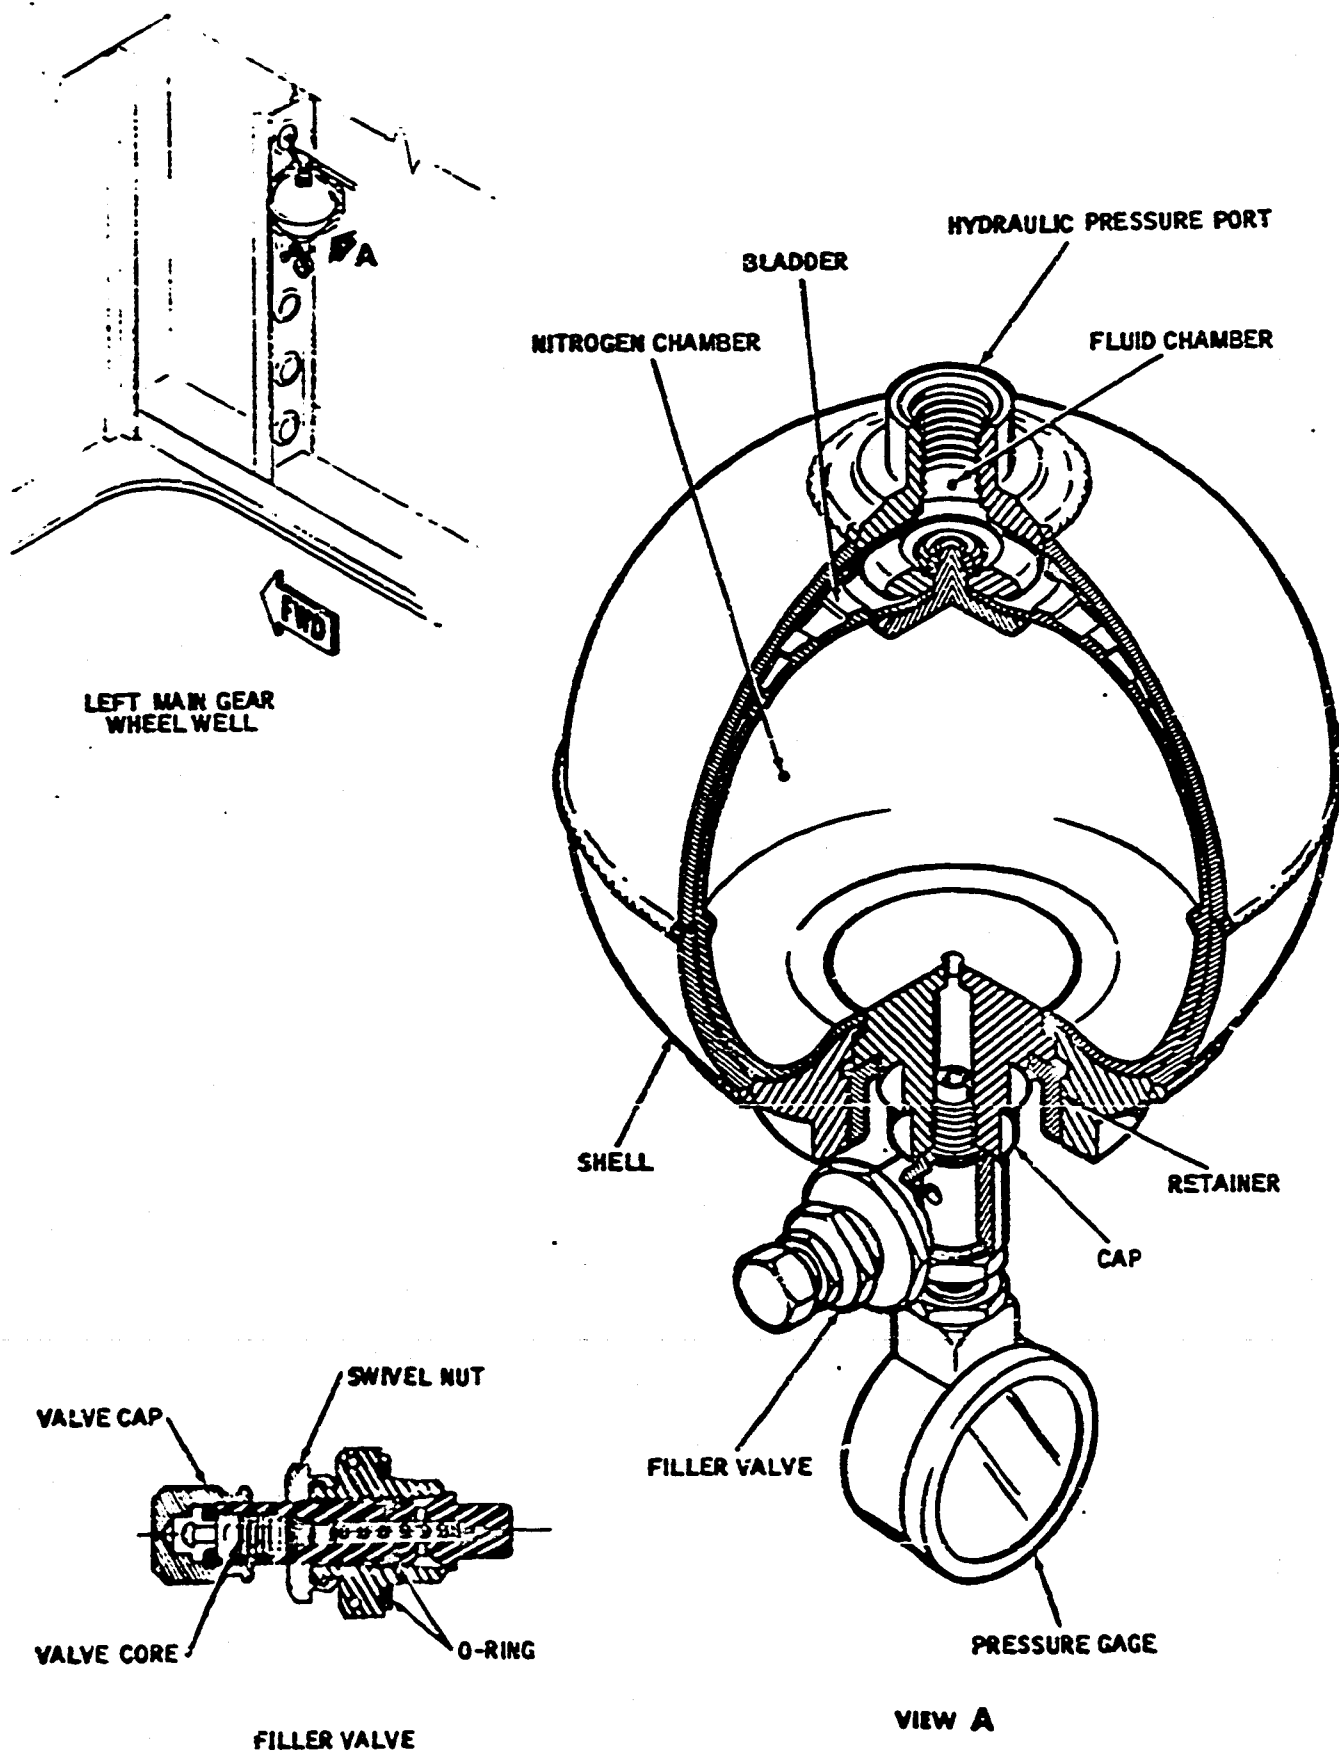

Hydraulic Power System Accumulator -- Cutaway View  
 Figure 20



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The accumulator is located immediately aft of the left hydraulic power manifold and is accessible through the left main gear inboard door. It is mounted with two corner brackets and clamp blocks at the upper and lower port fittings.
- (3) The accumulator is installed in the pressure line of the hydraulic power system and is initially charged with 1000 psi of dry nitrogen. As the system pressure builds up, fluid is forced into the upper chamber of the accumulator, further compressing the trapped nitrogen to approximately 3000 psi. With full hydraulic system pressure, 3000 psi is indicated on the pressure gage adjacent to the filler valve. This reserve pressure smooths out any momentary lag in the pump's response to the system's demand for greater fluid flows. The accumulator permits a gradual rise in system pressure, thereby absorbing the shock of pump surges and relieving the piping and system operating units of high-impact loads. When the engine-driven hydraulic pumps are not operating, the accumulator provides system pressure (at a diminishing rate) until a quantity equal to the stored volume in the accumulator has been used by the system.

T. Hydraulic System Priority Valve (See Figure 21.)

- (1) The priority valve is located in the left wheel well near the left hydraulic power manifold. The valve is installed in the hydraulic pressure line, between the two power manifolds, downstream of the pressure supply takeoff port for the flight controls. The priority valve is a balanced relief valve which reserves initial hydraulic pressure (up to 2150 psi maximum) for use in the flight control systems. The valve consists of a body with an inlet, an outlet, and a breather port. Internally, the valve contains a poppet valve plate, a poppet, a poppet valve load-spring, a piston, a piston load spring, and a piston load-spring housing. The piston load-spring housing chamber is vented to ambient air through a breather hole which is covered by a butyl rubber band.
- (2) The priority valve shuts off hydraulic pressure to all subsystems downstream of the left power manifold, whenever the hydraulic pressure drops below 1700 psi minimum. At this point, the valve closes to reserve the hydraulic pressure for use in the flight control systems, preventing them from reverting to manual operation. When the hydraulic pressure rises to 2150 psi maximum, the priority valve opens and supplies pressure to the right manifold and all subsystems downstream of the priority valve.
- (3) Hydraulic fluid from the left power manifold enters the priority valve through the inlet port, passes through the poppet valve plate holes, and applies pressure against the piston. When sufficient hydraulic pressure is applied to the piston, the piston load-spring compresses, unseating the poppet and permitting full flow through the valve. When the hydraulic pressure decreases to less than the opposing force value of the piston load-spring, the load-spring forces the piston against the poppet and shuts off fluid flow through the valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

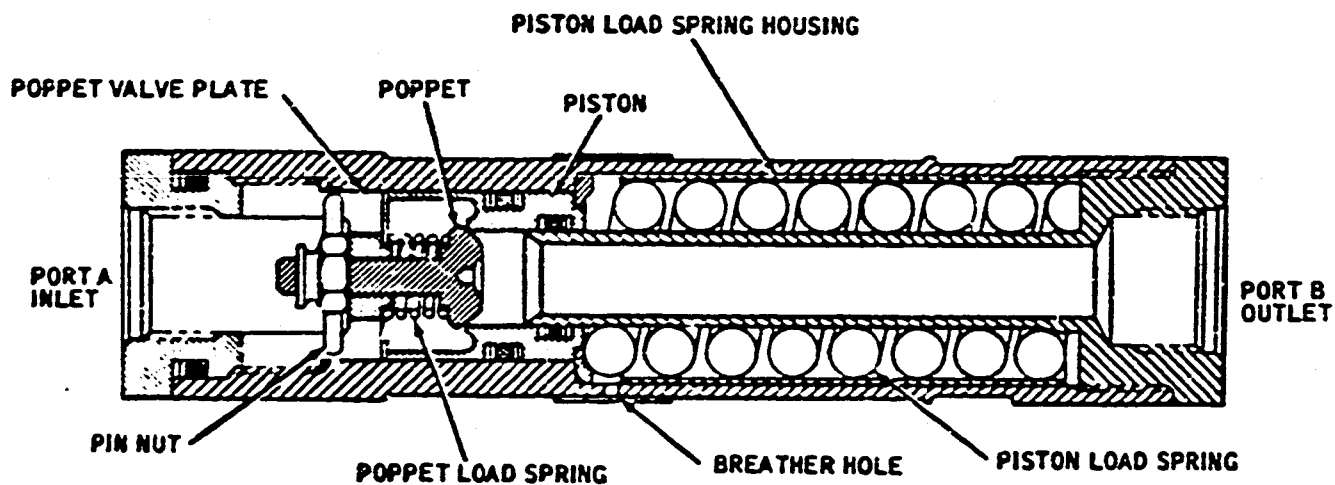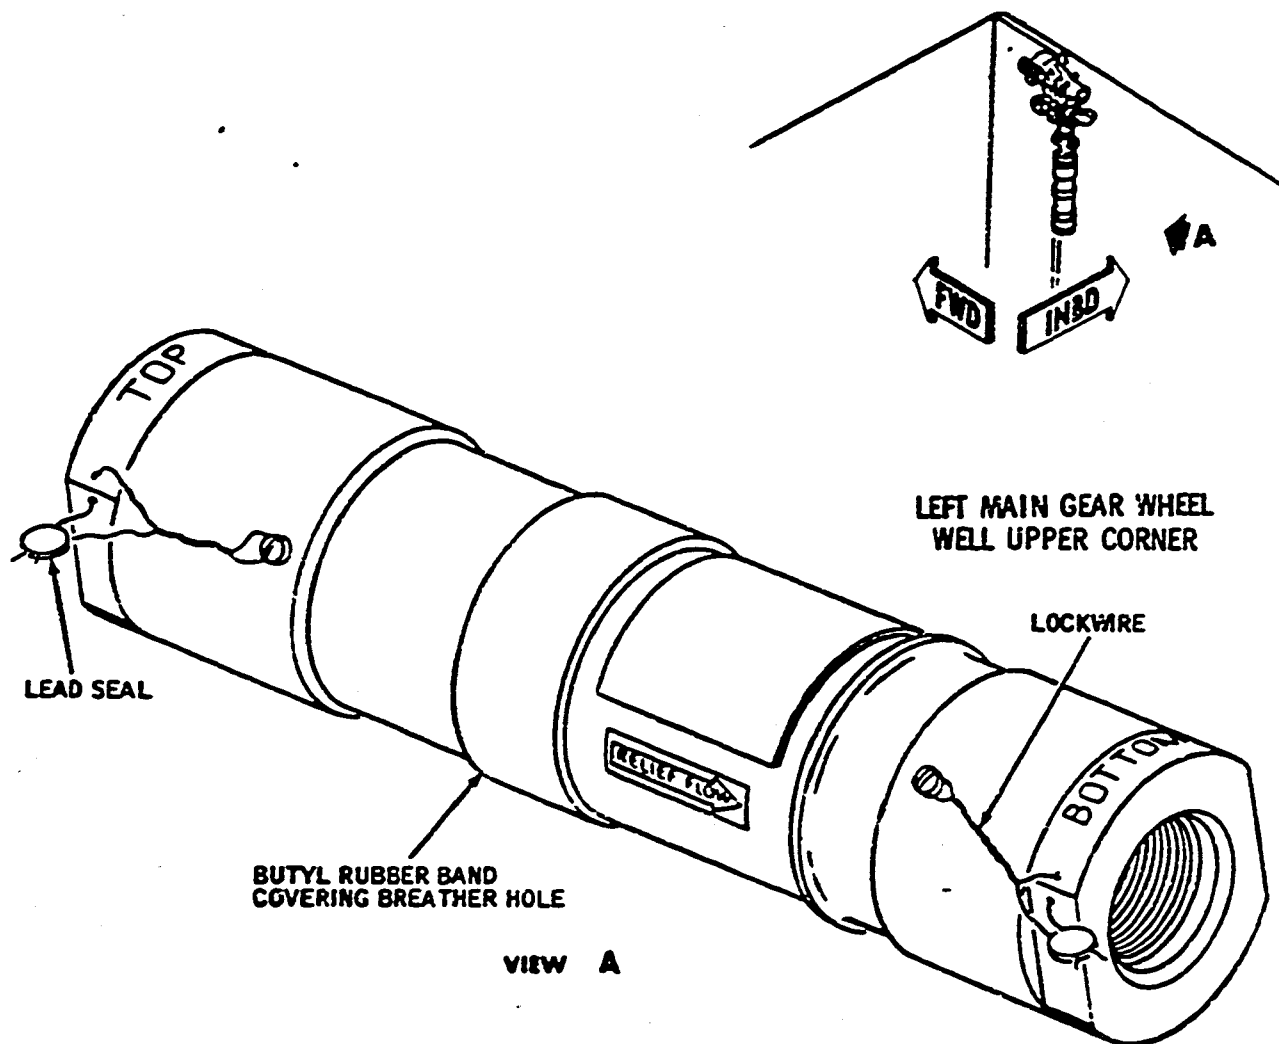

HA2-856

Hydraulic System Priority Valve -- Cutaway View  
 Figure 21

29-10-0  
 CODE 14  
 Page 38

Printed in U.S.A.

Jun 15/67



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) The maximum flow available from both engine-driven hydraulic pumps is: 44 to 45 gpm at takeoff, climb, and cruise configurations; 26 to 28 gpm at descent, approach, and engine idle configurations.
- (5) Some of the larger hydraulic system demands are as follows:
- (a) Gear retraction -- 17 gpm (10 - 12 seconds)
  - (b) Gear extension -- 14 gpm (10 - 12 seconds)
  - (c) Wing flaps down -- 8 gpm (10 seconds)
  - (d) Wing flaps up -- 3 gpm (22 seconds)
  - (e) Horizontal stabilizer -- 7 gpm
  - (f) Ailerons -- 17 gpm (25°/second)
  - (g) Rudder -- 3 gpm (25°/second)
- (6) There are various combinations of hydraulic system operations which could cause momentary reversion of the flight controls to manual operation. To prevent reversion to manual operation, the priority valve assures that the left power manifold receives all the hydraulic fluid pressure under conditions of very large flow demands.

U. Hydraulic System Selector Control Lever

- (1) The hydraulic system selector control lever is a manually actuated, mechanical lever detented to three positions. The lever provides mechanical means, through cables, for positioning the system selector valve and the auxiliary hydraulic pump supply selector valve. The hydraulic system selector control lever is located on the system engineer's control pedestal. The lever is attached to a drive sector, located on a common shaft with the other control pedestal sectors. The lever and sector are accessible through the cover plates on the system engineer's pedestal.
- (2) To put the hydraulic power system in the bypass condition, the system selector control lever is lifted out of detent and moved to bypass/general system position. At the same time, the cable moves the sector and pushrod of the system selector valve to the No. 1 position. The pushrod positions the system selector valve to the No. 1 bypass position. At the same time, the cables from the system selector valve sector move the auxiliary pump supply selector valve sector to No. 1 (auxiliary) position. The auxiliary pump supply selector valve remains in the auxiliary supply position through the idle feature of the sector rigging. In this condition, the engine-driven pump pressure is ported to the reservoir and the auxiliary pump supplies pressure to the general system. In this position, the fluid is supplied to the auxiliary pump from the low standpipe in the hydraulic system reservoir. To put the system into the alternate condition, the selector control lever is lifted out

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

of detent and moved to the general system/main gear downlock and flaps position. The cables move the system selector valve sector to the No. 3 (alternate) position. The system selector valve sector moves the cables rotating the auxiliary pump supply selector valve sector to the No. 3 (alternate) position. As the sector rotates, the end of the arm moves away from the idle position. This positions the valves to the alternate position, supplying fluid to the auxiliary pump from the auxiliary pump alternate reservoir. In this position, fluid from the auxiliary pump is ported to the wing flap control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported to the general system.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - DESCRIPTION AND OPERATION

1. General

A. Description (See Figures 1 and 2.)

- (1) The hydraulic power system receives fluid pressure from the engine-driven hydraulic pumps, one installed on each inboard engine. The electrically driven auxiliary pump is used to supplement the engine-driven pumps, or to independently supply the system with fluid pressure.
- (2) The hydraulic system reservoir, located in the left wing root, has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir is used for fluid, and 1/10 is used for foam space. A separate air chamber is installed in the reservoir system to provide for a greater fluid capacity in the main reservoir. A reservoir filler assembly is installed in the piping between the reservoir and the air chamber and has a vent line from the filler neck to the tee at the top of the reservoir sight gage. The reservoir is pressurized to 30 to 35 psi by bleed pressure from the engine-driven pumps through an air pressure regulator-aspirator.
- (3) The engine-driven pumps receive fluid from the pressurized main reservoir through respective engine hydraulic fire shutoff valves. The engine hydraulic fire shutoff valves are normally open and can be mechanically controlled from the flight compartment. The pumps supply fluid pressure through respective check valves to the dual filter and relief valve. Some of the fluid from the filter is ported through the regulator-aspirator to pressurize the reservoir. Most of the fluid is routed through a check valve to the system selector valve, and then to the left and right hydraulic power manifolds. The manifolds distribute the fluid pressure to the subsystems.
- (4) Hydraulic fluid is normally supplied to the auxiliary hydraulic pump from a low standpipe in the main reservoir. During alternate operation, the auxiliary hydraulic pump receives fluid supply from the auxiliary pump alternate reservoir, which is located just aft of the auxiliary pump. From these reservoirs, the fluid is ported through the auxiliary pump selector valve which is mechanically controlled from the flight compartment by the system selector control lever. When operating, the auxiliary hydraulic pump supplies fluid pressure to the subsystems through the system selector valve which is also controlled by the system selector control lever in the flight compartment. A filter and check valve are installed in the line from the auxiliary pump to the system selector valve.
- (5) An accumulator is installed in the pressure line to the subsystems to provide a reserve supply of fluid and to act as a surge damper for the system.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (6) Engine-driven pump fluid pressure is routed through the system selector valve to the left power manifold, where it is distributed to some of the subsystems and through the priority valve to the right power manifold. Fluid pressure from the right power manifold is distributed to the remaining subsystems.
- (7) The priority valve is a spring-loaded, poppet-type, balanced relief valve installed in the line downstream of the left power manifold. The priority valve's function in the system is to prevent the flight control systems from reverting to manual operation during high demands on the hydraulic system.
- (8) A fluid pressure transmitter, located in the nosewheel well, senses the system pressure, which is indicated on the hydraulic system pressure indicator in the flight compartment.

**B. Normal Operation**

- (1) Fluid is supplied to the hydraulic system from the pressurized hydraulic system reservoir. For operation of the hydraulic system under normal conditions, 8.1 US gallons (6.7 Imperial gallons; 30.6 liters) of hydraulic fluid are available to the engine-driven hydraulic pumps, and 12.9 US gallons (10.7 Imperial gallons; 48.8 liters) are available to the auxiliary hydraulic pump. Supply lines from the main reservoir carry fluid to each inboard pylon through normally open engine hydraulic fire shutoff valves to the engine-driven hydraulic pumps. Fluid is supplied to the auxiliary hydraulic pump from the main reservoir through a low standpipe at the base of the reservoir. Fluid is carried from the reservoir through the auxiliary pump selector valve to the auxiliary hydraulic pump.
- (2) The engine-driven hydraulic pumps supply full system pressure (3000 psi nominal) at any given engine speed, from idle to full power. The output flow of the pump is varied by sensing pressure from the outlet side of the pump. Each engine-driven pump contains a solenoid-operated bypass valve which, when energized, bypasses the pressure control regulator of the pump and ports fluid to the pump yoke control piston which feathers the pump. When the pump is feathered, flow rate is reduced to almost zero (1.0 gpm) and to a pressure of approximately 300 psi. Half of this flow maintains pump lubrication and cooling through internal leakage. This leakage is returned, through a check valve, the engine-driven pump case drain line filter, and another check valve to the case drain return port of the reservoir. The pressure fluid from each pump passes through a check valve to the dual filter and relief valve.
- (3) The fluid enters the dual filter and relief valve through the relief valve chamber. The fluid is passed through the filter element, through a manifold, and through a common outlet port. Fluid from the outlet port is routed through a check valve to the system selector valve. If back pressure in the system builds up to approximately 3300 psi, the

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

LN WHEEL BRAKE,  
 RH AILERON POWER CONTROL,  
 RH THRUST REVERSER,  
 LH LANDING GEAR TRIM  
 CYLINDER RELIEF VALVE, AND  
 WING SLOTS.

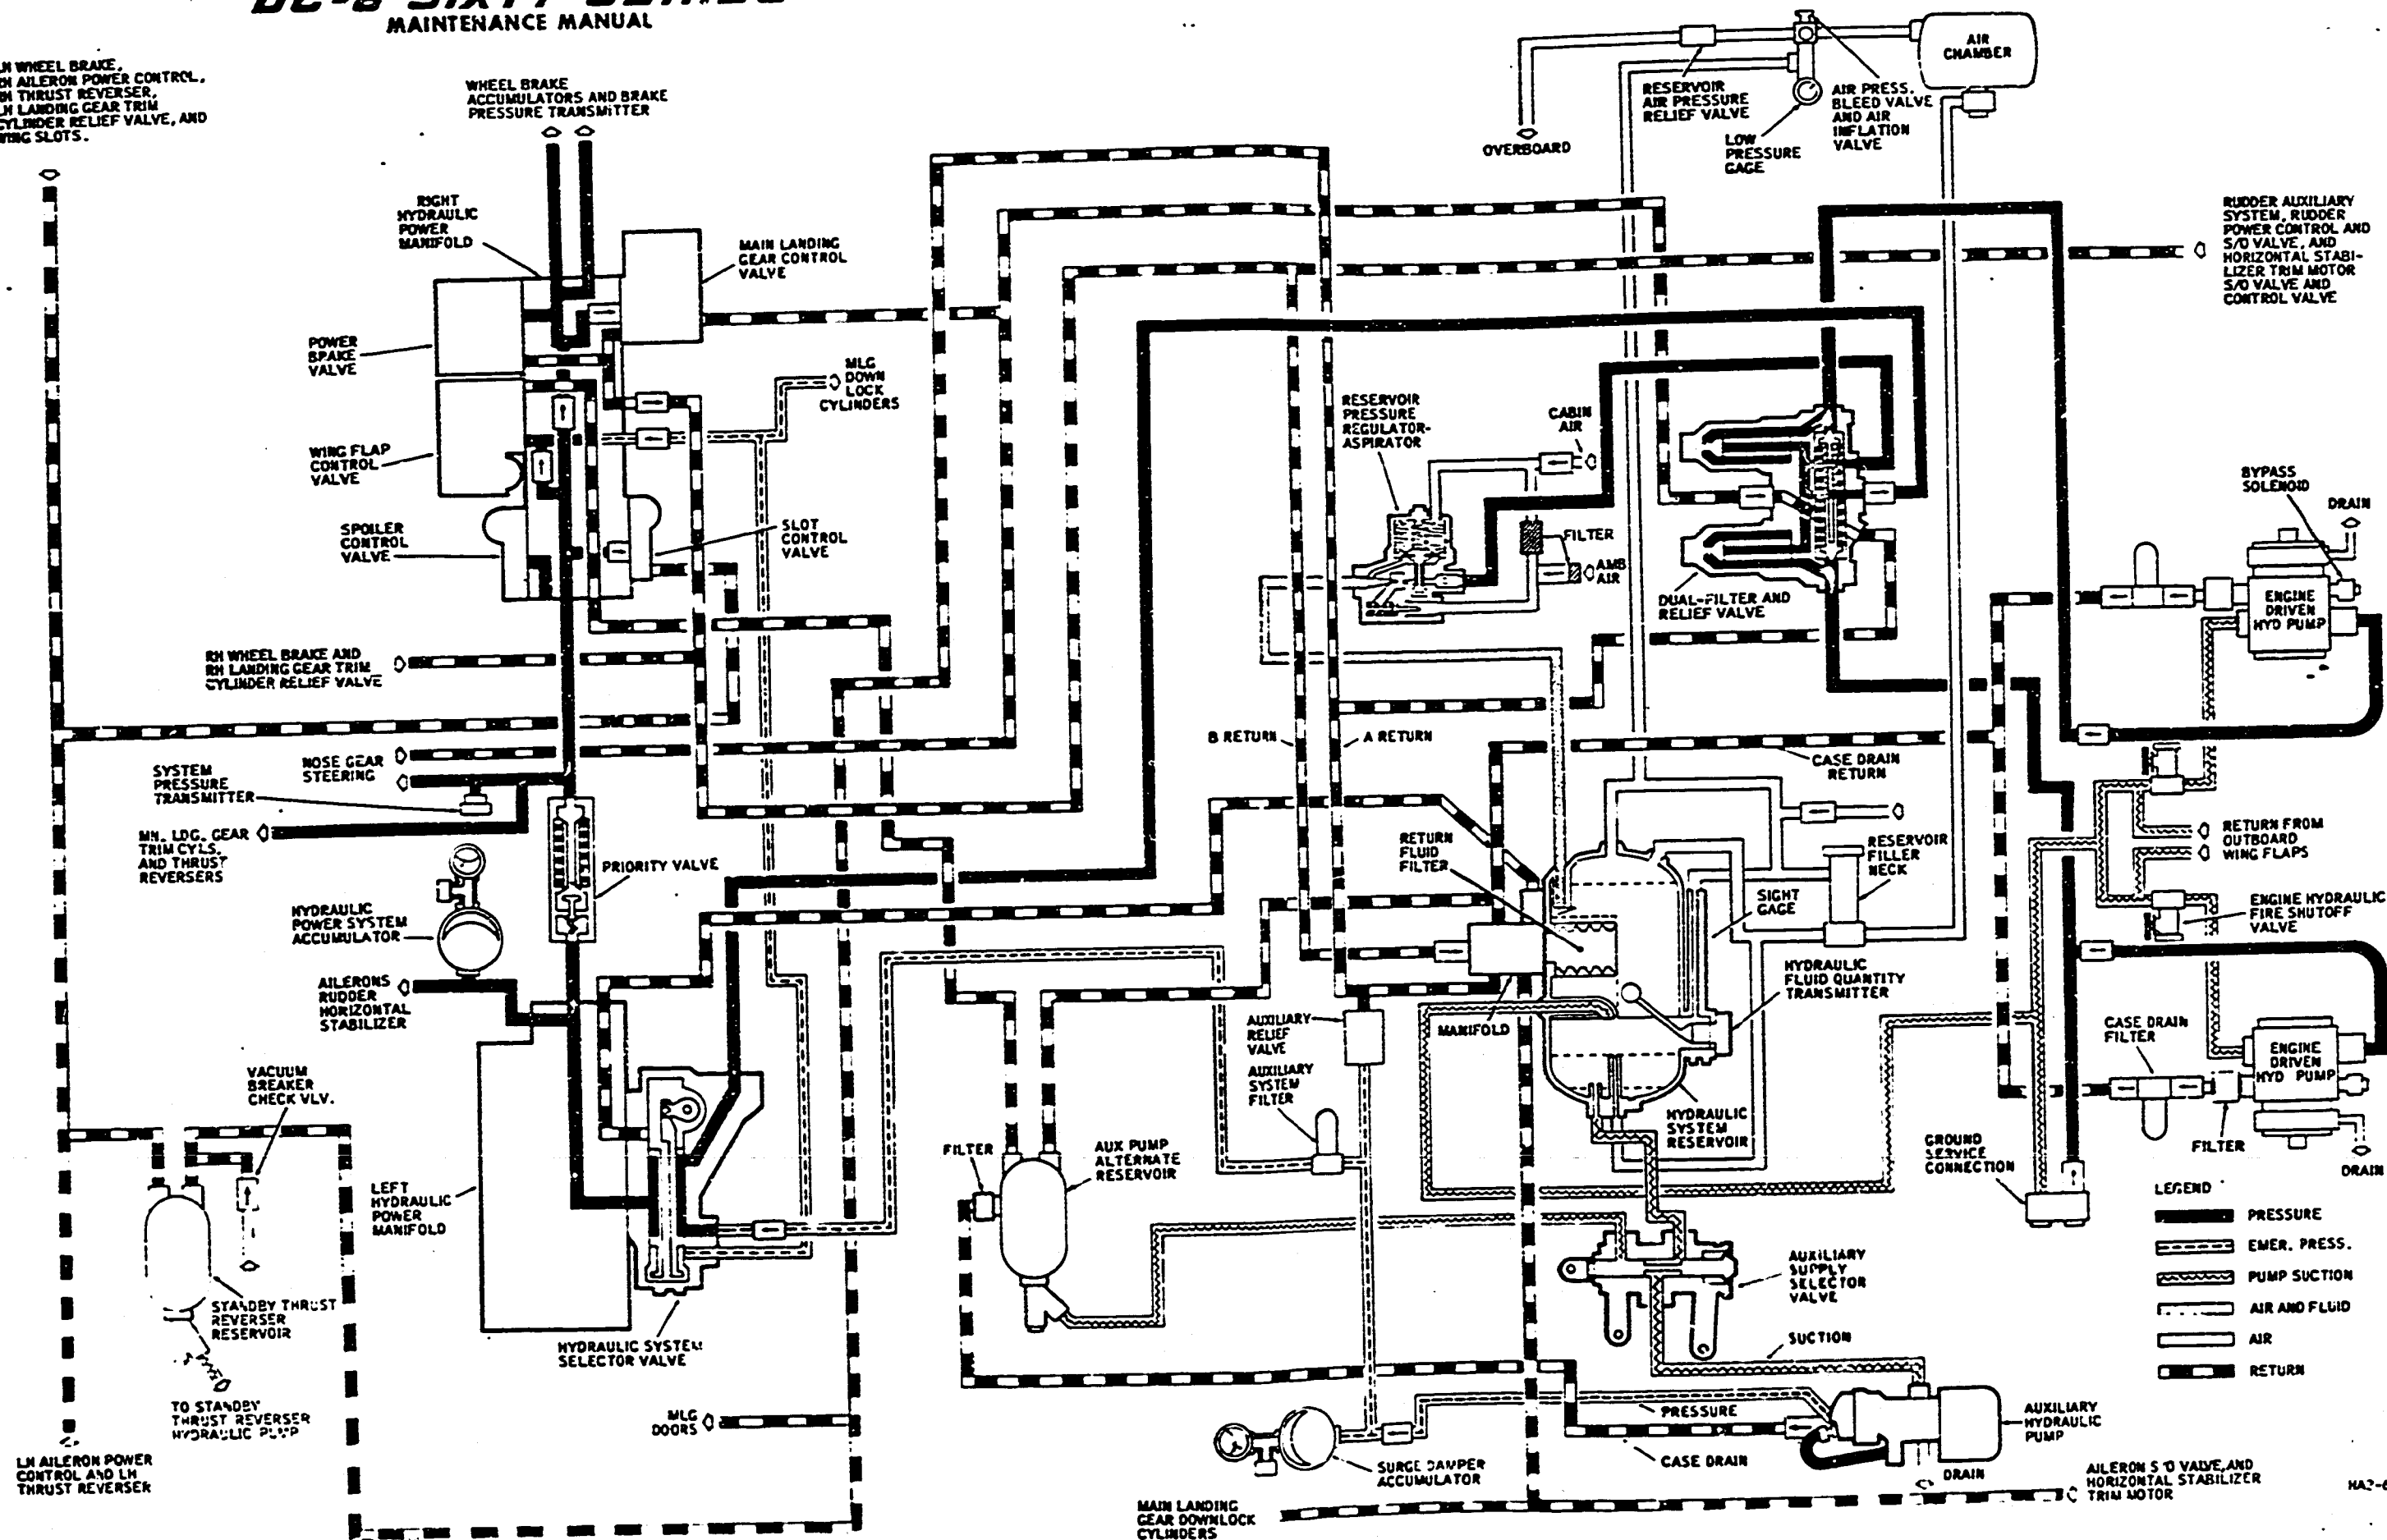

Hydraulic Power System -- Schematic Diagram  
 Figure 1


29-10-0  
 CODE 15  
 Page 3

-- Feb 1/69

Printed in U.S.A.

HA2-6036

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

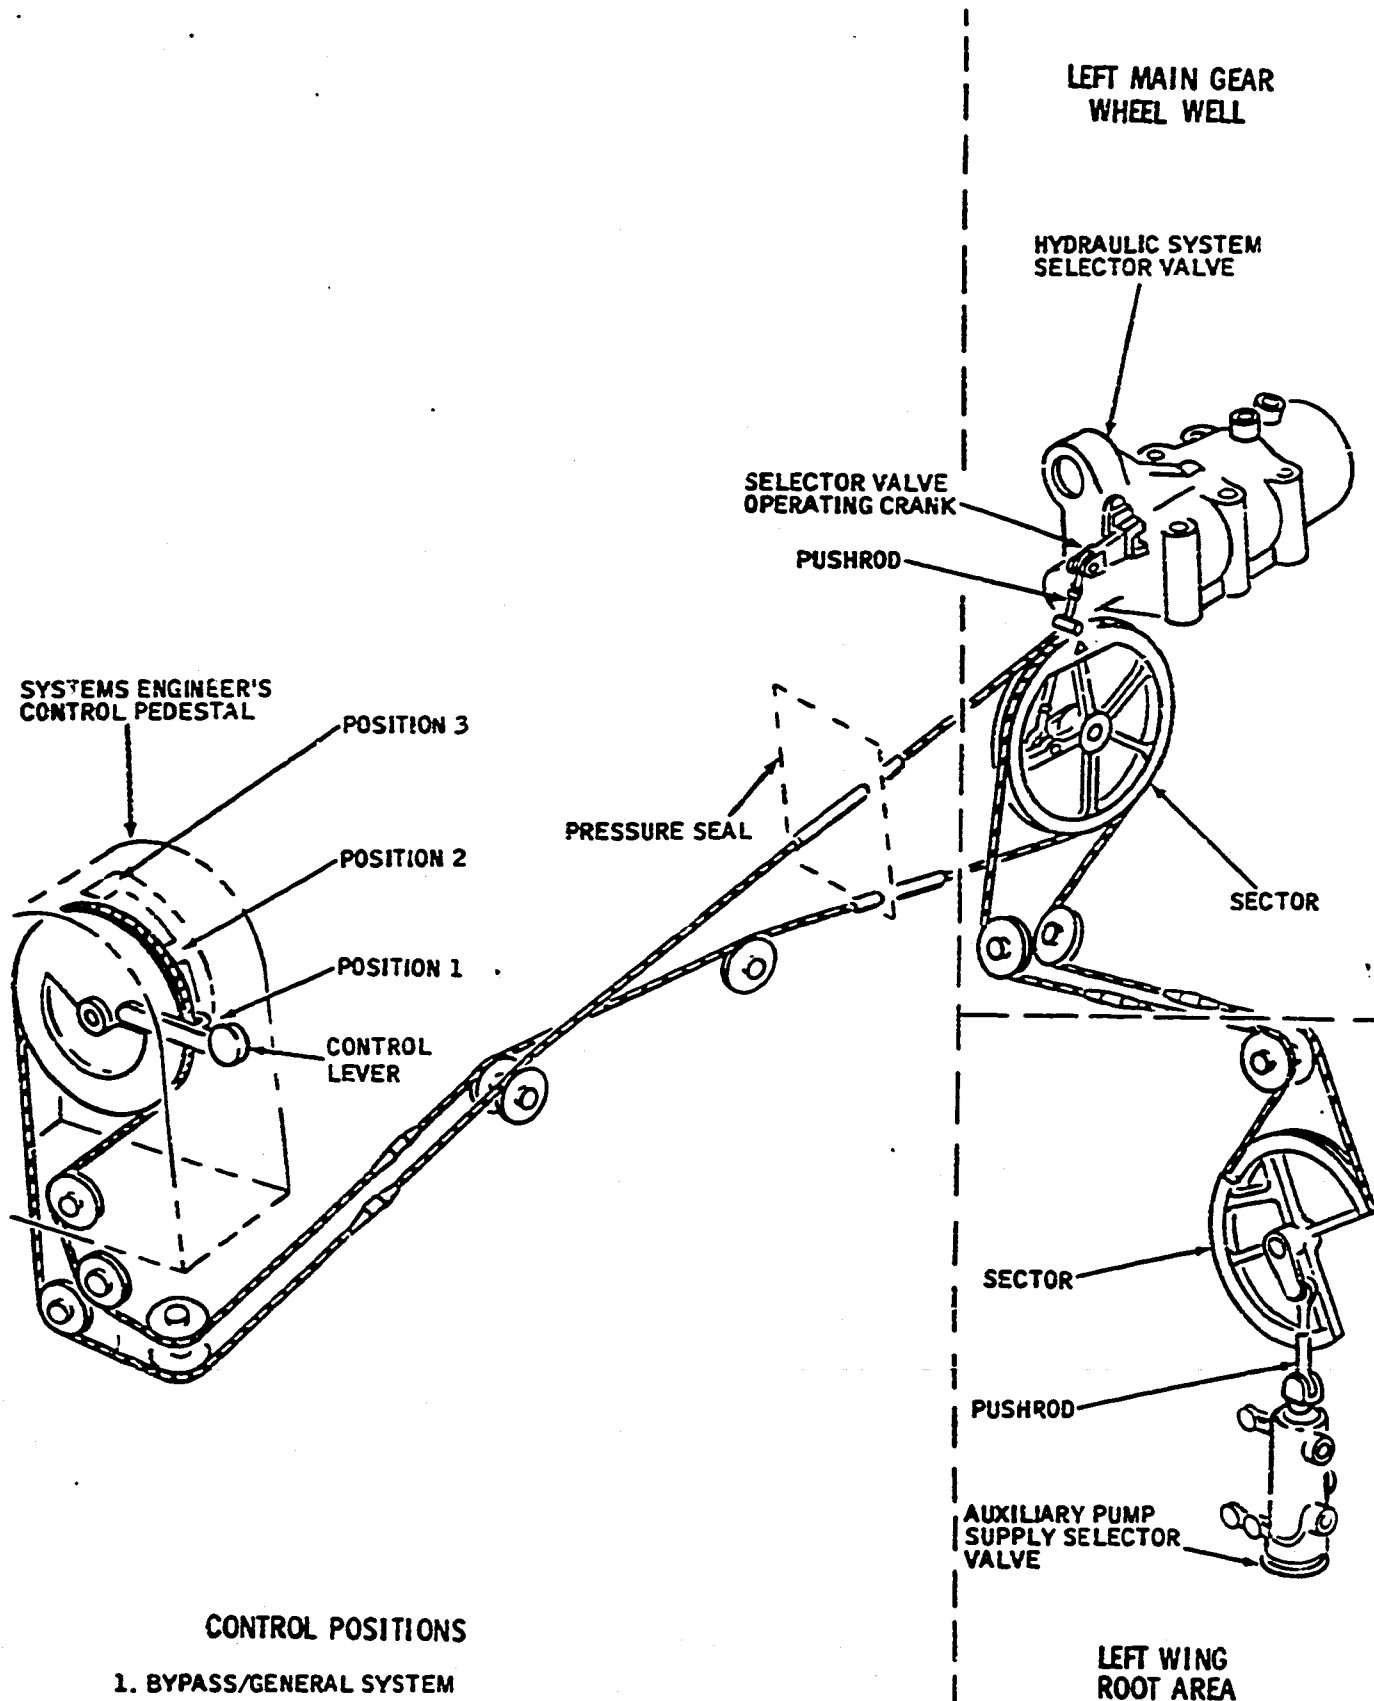

**CONTROL POSITIONS**

1. BYPASS/GENERAL SYSTEM
2. GENERAL SYSTEM (NORMAL)
3. GENERAL SYSTEM/MAIN GEAR DOWN AND FLAPS

Hydraulic System Selector and Auxiliary Pump Supply  
 Selector Valves -- Mechanical Control Schematic  
 Figure 2

HA2-486

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 15  
 Page 5

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

relief valves in the dual filter and relief valve open and port fluid back to the reservoir via A return port. The relief valve poppet closes again when system pressure drops to approximately 3000 psi.

- (4) The aspirator receives filtered fluid (bleed pressure at nominal 3000 psi) from the dual filter and relief valve. The aspirator operates on the jet pump principle. Hydraulic fluid is atomized and mixed with air within the unit by a nozzle and a venturi. The mixture is used to pressurize the reservoir and reservoir air chamber. The regulator diaphragm maintains a pressure range of 30 to 35 psi in the reservoir and air chamber. If there is a regulator malfunction, the aspirator stalls when the outlet pressure reaches a maximum of 40 psi. A reservoir relief valve in the reservoir vent line relieves thermal expansion pressure above 45 (+5, -0) psi.
- (5) Pump pressure fluid enters the system selector valve through the system pressure inlet port. When the pump selector control lever is in the general system (normal) position, fluid is ported to the pressure passages of the left power manifold. The fluid pressure in the left power manifold is ported through the priority valve to the nose gear and the right power manifold and directly to the following valves:
  - (a) Bogie unlock
  - (b) Aileron power shutoff
  - (c) Rudder power shutoff
  - (d) Longitudinal trim hydraulic motor shutoff
- (6) The right power manifold distributes fluid pressure to the brake accumulators, the pressure transmitter, and the following control valves:
  - (a) Wing flap
  - (b) Slot
  - (c) Main gear
  - (d) Power brake
- (7) The return fluid from the wing flap control valve is ported through the right power manifold and into the auxiliary hydraulic pump alternate reservoir. Return fluid from the outboard wing flaps is piped into the suction lines for each engine-driven hydraulic pump. Return fluid from the slot control valve is ported into the A return line to the main reservoir. The power brake and main gear control valve gear up return fluid is ported through a restrictor check valve into the B return line to the reservoir. The main gear control valve gear down return pressure bypasses the right manifold and returns to the reservoir through the A return line. The return port of the bogie unlock valve ports fluid

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

from the left manifold to the bogie return port of the reservoir. All return fluid entering the reservoir is filtered through the return ports filter located within the reservoir.

C. Bypass Operation

- (1) The output of the engine-driven hydraulic pumps is bypassed by moving the system selector control lever out of the general system (normal) position to the bypass/general system position.
- (2) The system selector valve in the bypass position ports engine-driven pump pressure from the dual filter and relief valve directly to the return passage of the left power manifold. From the manifold, the fluid is ported directly to a tee in the wing flap return port of the hydraulic system reservoir. In the bypass condition, the auxiliary hydraulic pump receives fluid from the hydraulic system reservoir, pressurizes it to system pressure, and ports it to the left and right power manifolds for distribution to the subsystems.

D. Alternate Operation

- (1) When both engine-driven hydraulic pumps and the auxiliary hydraulic pump are rendered inoperative due to the loss of the normal supply of fluid, the hydraulic power system can be rigged for alternate operation. This is accomplished by placing the system selector control lever in the general system/main gear downlock and flaps position. When the system selector control lever is in this position, the auxiliary hydraulic pump supply selector valve is positioned to supply fluid from the auxiliary pump alternate reservoir to the auxiliary pump.
- (2) Fluid is supplied to the auxiliary pump from the outlet port of the auxiliary pump supply selector valve. Output pressure is ported through the auxiliary system filter and check valve to the auxiliary pressure inlet port of the system selector valve.
- (3) In the general system/main gear downlock and flaps position, auxiliary pump pressure bypasses the manifold pressure passages and is ported from the alternate outlet port of the system selector valve. Fluid from this port flows directly to a port on the right power manifold, through an internal check valve in the manifold, to the wing flap control valve. A line, teed into the alternate supply line, runs directly to a shuttle valve in the main gear downlock cylinder line. When auxiliary pressure is applied, the shuttle valve shifts, porting fluid into the downlock bungee cylinder's downlock side.

E. Mechanical Control

- (1) The hydraulic power mechanical control system consists of the hydraulic system selector control lever cable drum, the system selector valve sector, the system selector valve, the auxiliary hydraulic pump supply selector valve sector, and the auxiliary hydraulic pump supply selector valve.

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 15  
Page 7



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (2) The control lever located on the system engineer's control pedestal is used to position the system selector valve and, in turn, the auxiliary hydraulic pump supply selector valve.
- (3) The control lever is spring loaded into general system (normal) position, and is connected to the control lever cable drum. Two cables run from the drum, under the cabin floor, aft through the pressure bulkhead at the rear wing spar, and into the left wheel well to the system selector valve sector. A pushrod connects the sector to the positioning lever of the system selector valve.
- (4) A second set of cables is routed from the system selector valve sector into the left wing root to the auxiliary hydraulic pump supply selector valve sector. When the system selector valve is in either bypass or normal, the auxiliary hydraulic pump supply selector valve sector is arranged so that the pushrod idles between the two positions. This allows the valve to remain in the auxiliary position. When the sector is moved to the alternate position, the pushrod is pulled by the sector to reposition the valve to the alternate position.
- (5) The control lever is normally in the general system (normal) position. To move the system selector valve to the bypass position, the control lever is moved to the bypass/general system position. When the system selector valve is moved to the bypass position, the auxiliary hydraulic pump supply selector valve sector is moved to a new position. Due to the idle feature on the auxiliary sector, the valve remains in the auxiliary position. With the valve in this position, fluid is supplied to the auxiliary pump through the low standpipe in the hydraulic system reservoir. In this condition, engine-driven pump pressure is ported to the reservoir and the auxiliary pump pressure is ported to the general system.
- (6) To put the system in alternate operation, the control is moved to the general system/main gear downlock and flaps position. This moves the system selector valve to the alternate position, and simultaneously moves the auxiliary hydraulic pump supply selector valve to the alternate position. Fluid is supplied to the auxiliary pump from the auxiliary hydraulic pump alternate reservoir. Fluid pressure from the auxiliary pump is ported to the flap system control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported from the system selector valve to the general system.

## 2. System Components

### A. Hydraulic System Reservoir (See Figures 3 and 4.)

- (1) The hydraulic system reservoir is installed on the aft side of the wing rear spar in the left wing root and is accessible through the left wing root access door. The hydraulic system reservoir serves as the main source of hydraulic fluid for the engine-driven hydraulic pumps and the

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

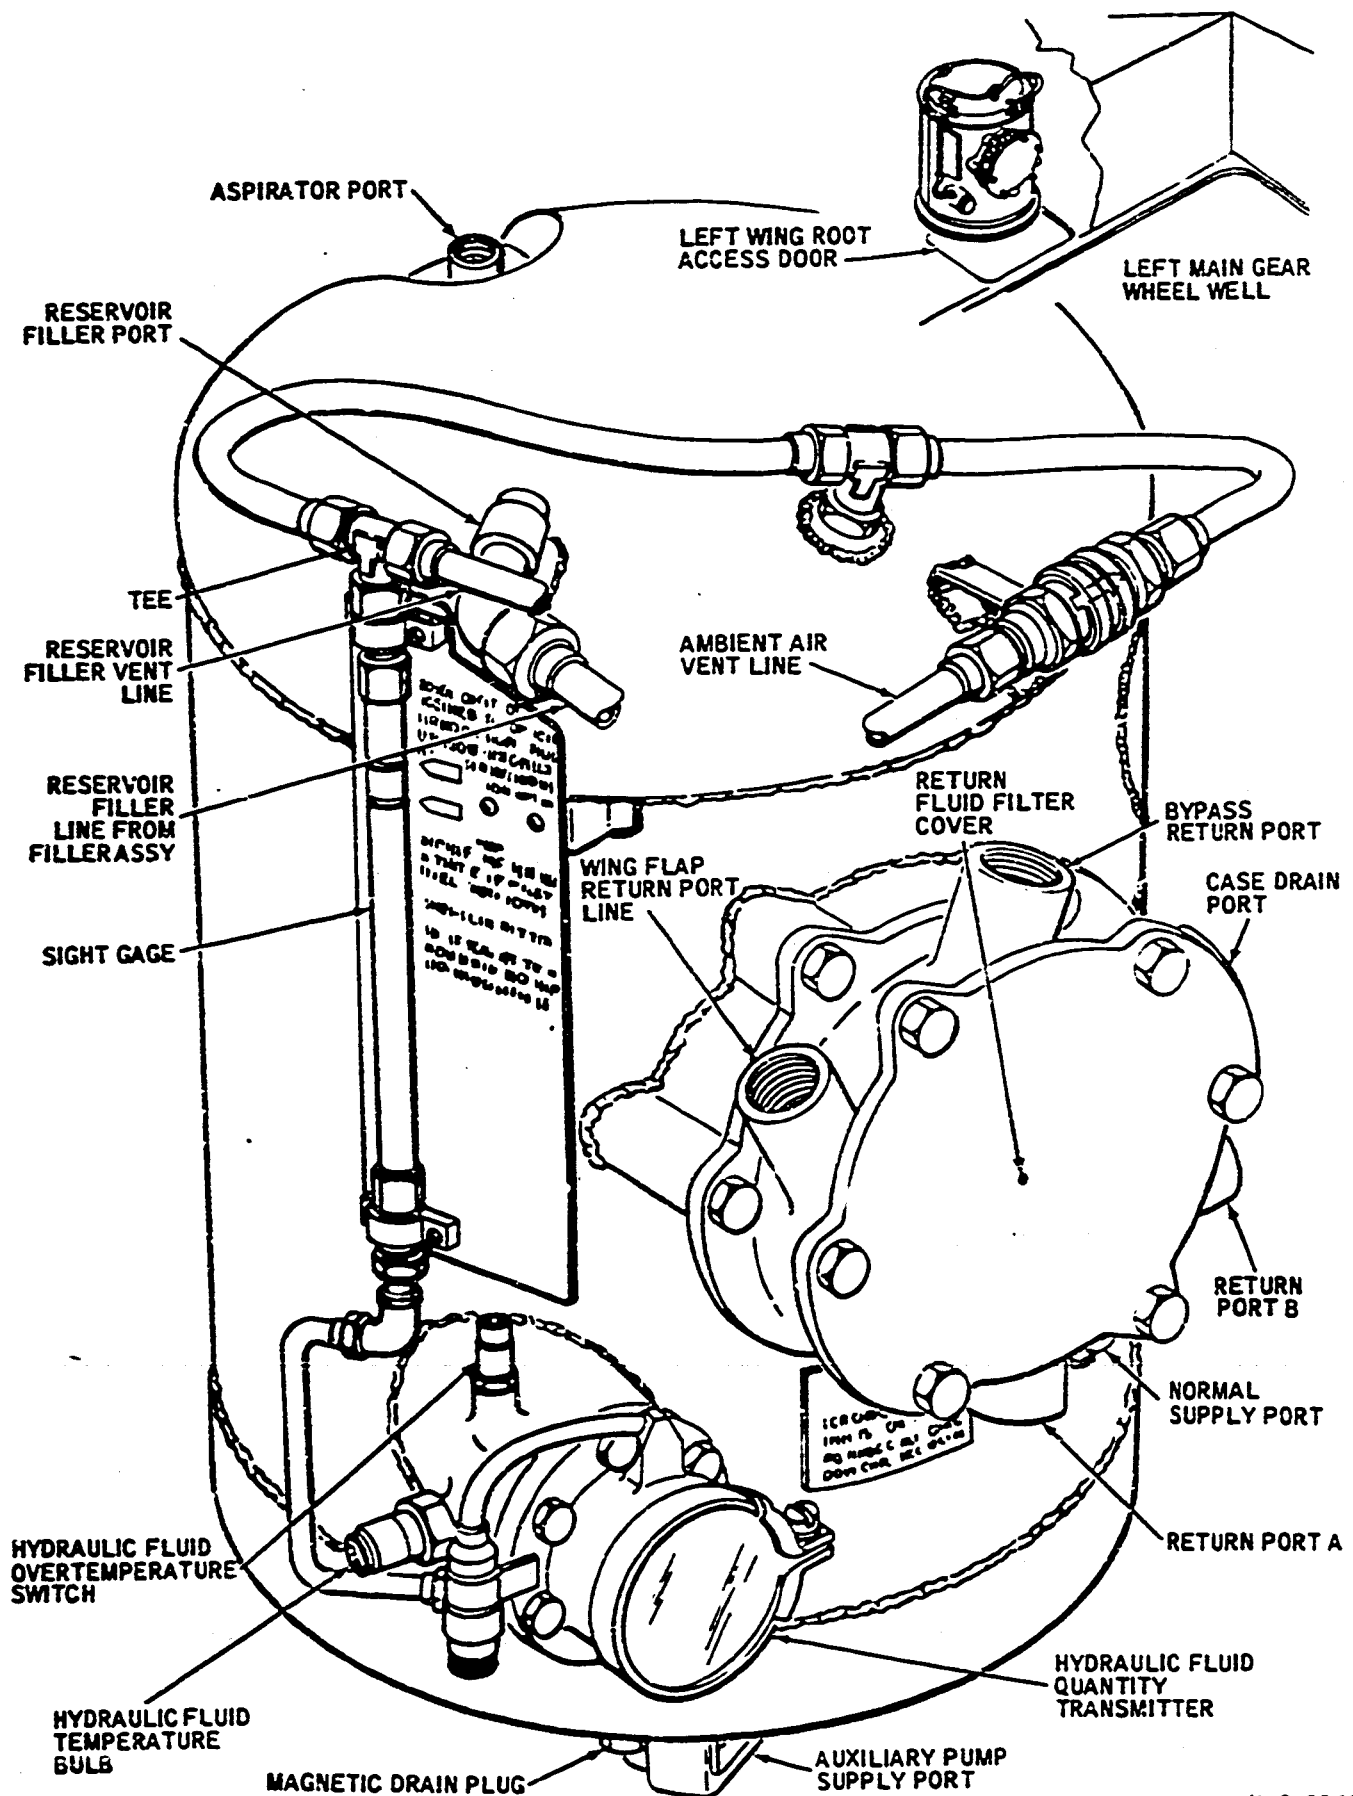

HA2-2142


Hydraulic System Reservoir -- External View  
 Figure 3

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 15  
 Page 9

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

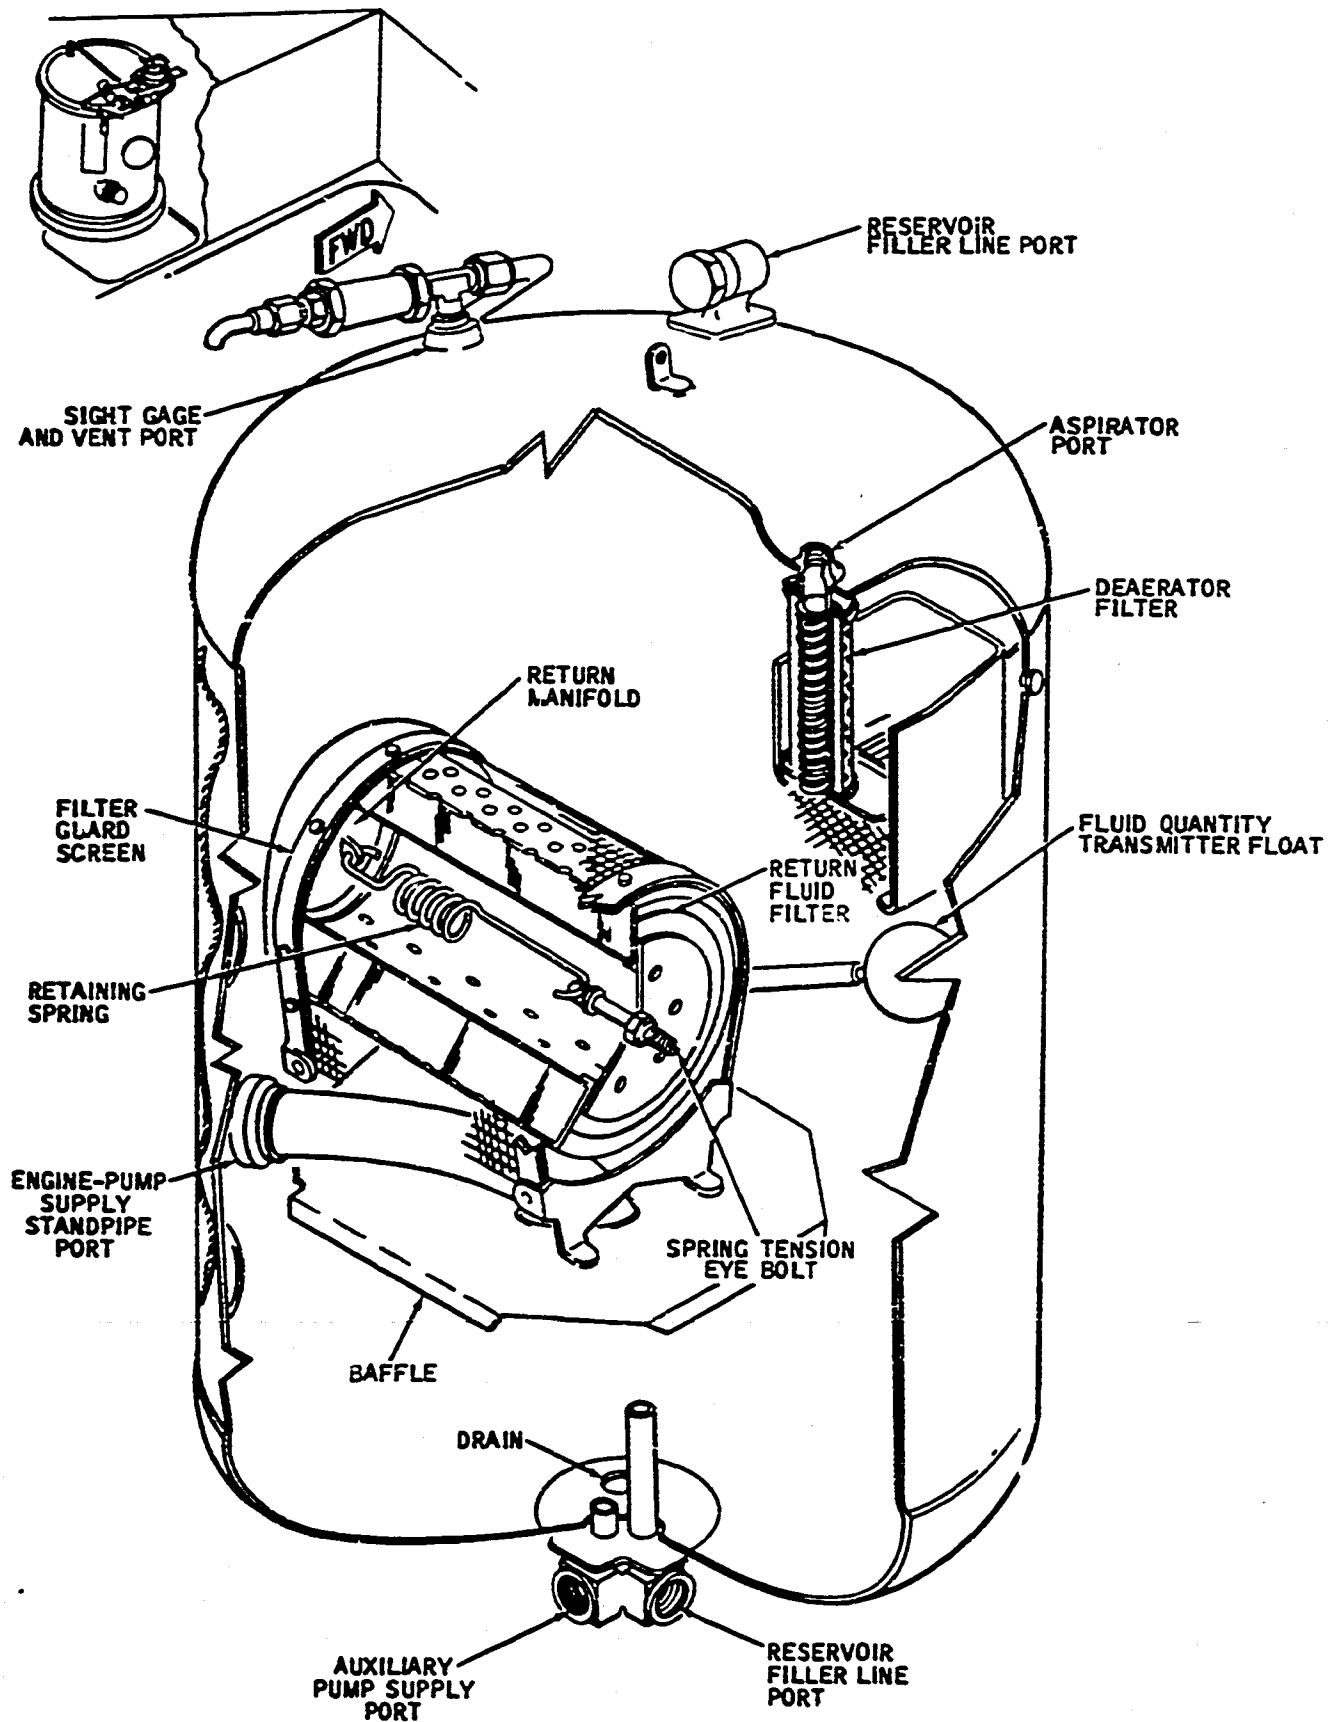

HA2-2143A

Hydraulic System Reservoir -- Cutaway View  
 Figure 4

29-10-0  
 CODE 15  
 Page 10

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

normal supply for the auxiliary hydraulic pump. The reservoir is cylindrical in shape and contains a filter, baffle, and a screen cover encasing the filter. The filter prevents foreign particles from contaminating the fluid supply. Mountings are provided on the exterior surface of the reservoir for return line ports, aspirator port, electrical sensing units, sight gage, instruction placards, magnetic drain plug, and system supply ports.

- (2) The reservoir is pressurized with air from the regulator-aspirator to between 30 and 35 psi and has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir volume is used for fluid and 1/10 is used for foam space.
- (3) The aspirator port through which the reservoir is pressurized is located in the recess on top of the reservoir. An aspirator-deaerator filter is supported in the reservoir by a screen and support box assembly which is mounted to the reservoir wall by two bolts.
- (4) The mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The return ports manifold is an open-centered ring, flanged at both sides and provided with five fluid ports around its circumference; return port A is located at the bottom, return port B is located at the lower right side, the wing flap return port is located at the upper left side, and the system selector valve bypass port is located at the top. One flange of the manifold is mounted with six bolts to the mounting flange on the reservoir. The return fluid filter cover fits into the open side of the manifold, and is attached to the other manifold flange with six bolts to form a fluid-tight cover for both the manifold and the filter.
- (5) The return fluid filter is installed in the reservoir, behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the return fluid filter cover holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to the engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
- (6) A flanged adapter for the fluid quantity transmitter is welded to the reservoir below and to the left of the return ports manifold. The adapter is provided with two small port bosses for the hydraulic fluid temperature bulb and the hydraulic fluid overtemperature switch. The lower end of the sight gage connects to a third port in the adapter, while the top of the sight gage tees into a port at the top of the reservoir. An instruction plate is mounted behind the sight gage and the vacuum breaker check valve tees into the port at the top of the reservoir that is used by the sight gage.

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


B. Hydraulic Reservoir Return Fluid Filter (See Figure 4.)

- (1) The reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply. The filter is located behind the return ports manifold, and is spring loaded to act as its own relief valve. Access to the filter is by removing the return fluid filter cover from the return ports manifold by removal of six bolts. The filter is attached by the retaining spring to the cover and is withdrawn from the reservoir when the cover is removed.
- (2) Externally, the filter consists of two perforated concentric tubes. The area between the tubes is closed by metal end caps which are bonded to the two tubes. A resilient rubber gasket is bonded to each of the caps. Each gasket must be smooth and flat for proper sealing of the filter. The gaskets act as a static seal and a relief valve seat.
- (3) Internally, the filter has a 10-micron, resin-impregnated, convoluted paper-type filter element. The area of the filter element is approximately 1960 square inches. The filter is held in place by a retaining spring. One end of the spring is attached to an eyebolt located inside the return port's manifold cover. The spring passes through the center chamber of the filter and is connected to another eyebolt. This eyebolt is secured to a large washer and plate by means of a self-locking nut. The washer seats on the rubber gasket which is bonded to the filter. The fluid enters the center chamber of the filter and passes through the inner tube of the filter to the filter element by means of perforation holes. Foreign matter is filtered out by the filter element, and the fluid leaves the element through perforation holes in the outer tube. When the element becomes saturated with foreign matter, the filter acts as its own relief valve and unseats at 20 to 25 psi above normal return pressure which allows fluid to bypass the filter and enter the reservoir.

C. Hydraulic Reservoir Air Pressure Regulator-Aspirator (See Figure 5.)

- (1) The reservoir air pressure regulator-aspirator is a jet-type air pump, regulated by a pressure-sensitive shutoff valve. The unit pressurizes the hydraulic reservoir with air to the operating pressure range of 30 to 35 psi. The regulator-aspirator is located on the top inboard side of the reservoir and is mounted on the reservoir retainer ring. Access to regulator-aspirator is through the left wing root access door.
- (2) The regulator-aspirator assembly consists of a main aspirator body and a regulator housing. The main aspirator body has two inlet ports and one outlet port. The ports are permanently identified inlet, outlet, and air inlet. The plug for an air check valve is located near the outlet port. A chemically treated paper filter is installed near the

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

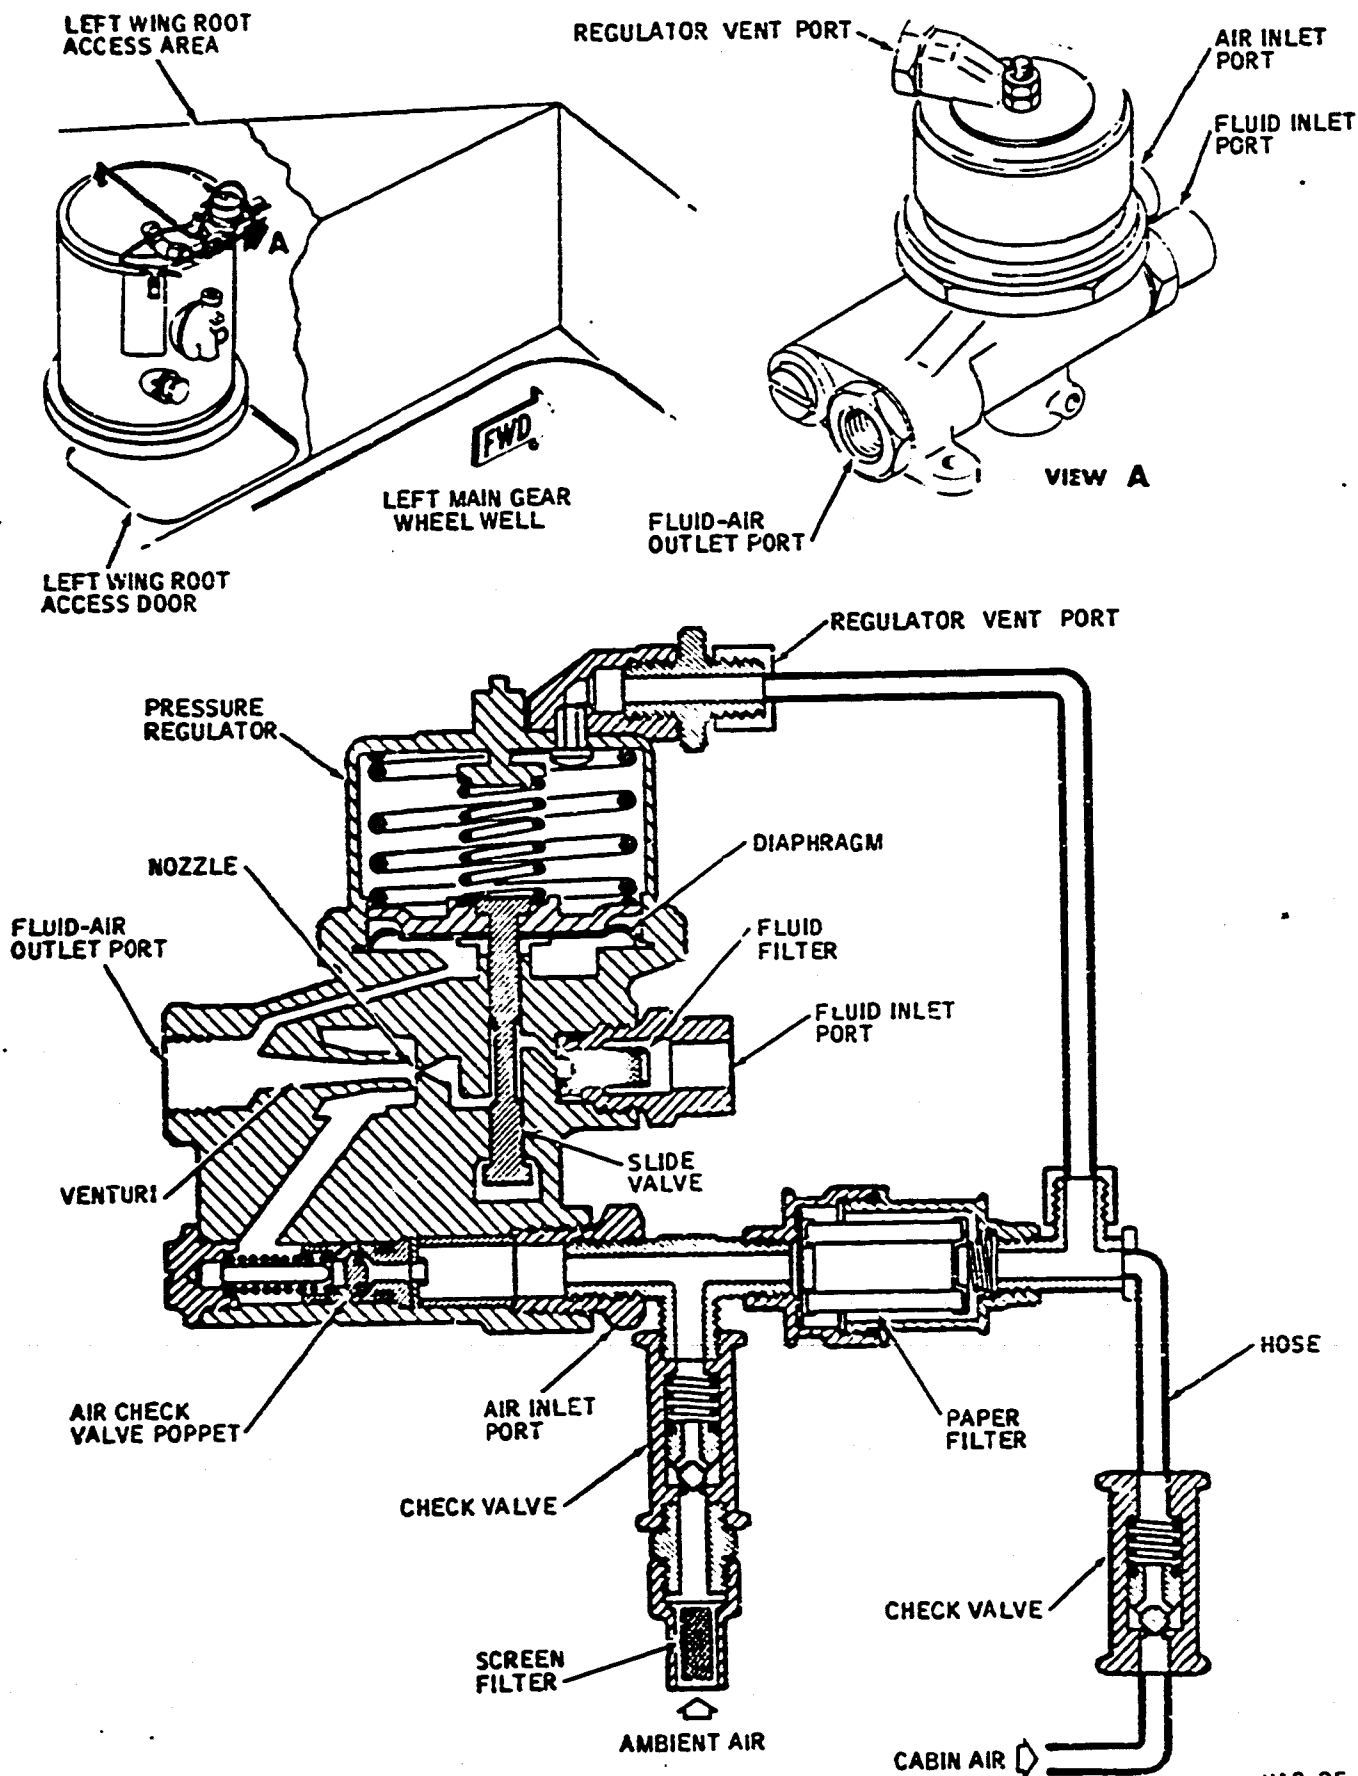

Reservoir Air Pressure Regulator-Aspirator -- Schematic  
 Figure 5

HA2-25

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 15  
 Page 13

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


aspirator body air inlet port in the air line from the pressurized cabin area. A metal screen filter is installed on the check valve which tees into the aspirator body air inlet port.

- (3) The reservoir air pressure regulator-aspirator operates basically with a jet pump action which is regulator controlled. Fluid enters the assembly through the fluid inlet port where it is filtered and then ported through the valve assembly of the regulator. During normal operation, when air pressure at the outlet port is under 30 psi, the valve is open, porting fluid to the nozzle. The orifice in the nozzle sprays the fluid through the venturi of the outlet port, creating a vacuum in the chamber around the venturi. When the vacuum becomes great enough to create a pressure differential of approximately 1 psi, ambient air opens the air check valve. The air is ported to the chamber around the venturi and is siphoned, with the fluid, through the outlet port.
- (4) Hydraulic fluid inlet pressure at the engine-driven hydraulic pumps is improved at high altitude operation by supplying pressurized filtered cabin air to the reservoir regulator-aspirator instead of ambient outside air. Part of the inlet air is diverted by a tee fitting to the regulator chamber to provide a more positive regulating force on the diaphragm than would be obtained with low ambient pressures. The chemically treated paper filter, installed in the regulator-aspirator air supply line from the cabin, removes smoke tars and impurities from the pressurized cabin air. The steel mesh screen filter, installed on the check valve which tees into the regulator-aspirator air inlet port downstream of the paper filter, removes dust, dirt, and foreign particles from the ambient air and serves as a standby to supply filtered air in event the paper filter is clogged.
- (5) As pressure in the reservoir builds up, back pressure is bled from the outlet port to the diaphragm chamber. The reaction on the diaphragm begins to move the slide valve to cut off the fluid flow. At 30 to 35 psi of back pressure, the diaphragm completely closes the slide valve, cutting off the flow of fluid. If there is a regulator malfunction, the aspirator stalls when outlet pressure reaches a maximum of 40 psi.
- (6) The aspirator is capable of pressurizing the reservoir to 30 to 35 psi in approximately 4 minutes at altitudes from sea level to 15,000 feet, when fluid is ported through the nozzle at 0.5 gpm at 3000 psi.


**D. Regulator-Aspirator Air Filters (See Figure 6.)**

- (1) The regulator-aspirator air filters remove ambient and cabin air impurities from the air which is used to pressurize the main hydraulic system reservoir. The filtering system is composed of two filters. One of which is a paper element filter, installed directly in the cabin air supply line near the regulator-aspirator. The other filter is a fine mesh, screen-type filter, installed on a check valve and positioned at right angles to the regulator-aspirator air inlet port. The screen

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

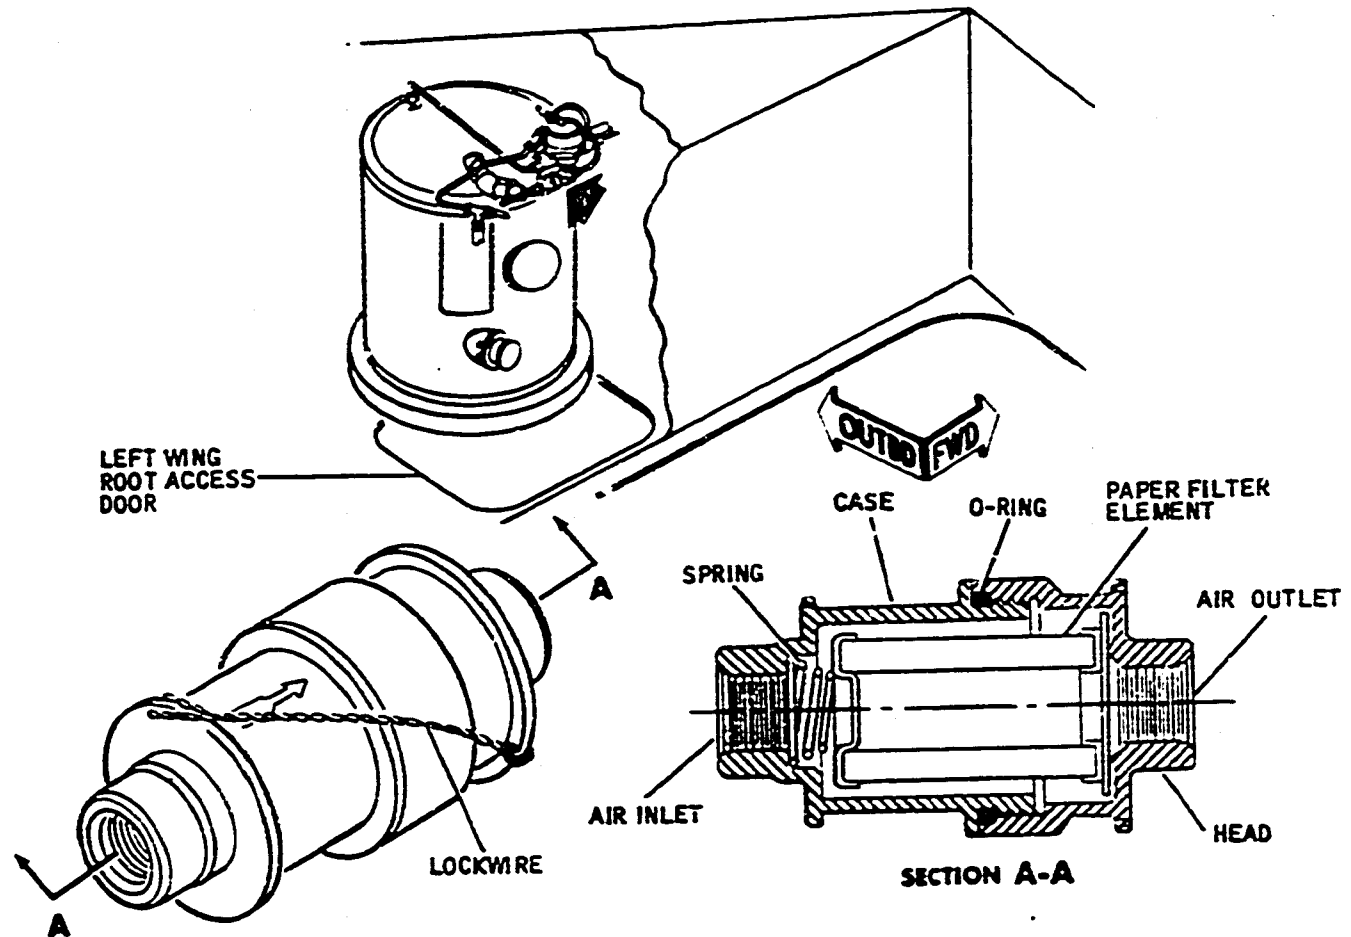

PAPER ELEMENT FILTER

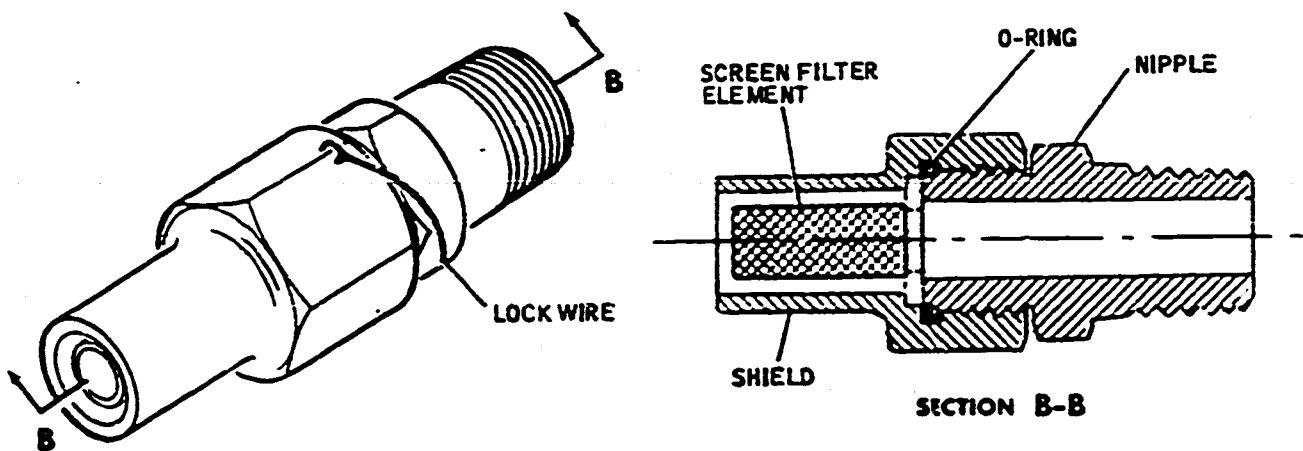

SCREEN FILTER

HA2-35

Regulator-Aspirator Air Filters -- Cutaway View  
 Figure 6

29-10-0  
 CODE 15  
 Page 15

Jun 15/67

Printed in U.S.A.



filter, in addition to providing an immediate supply of ambient air during ground operations, serves as a standby air inlet to preclude air starvation of the regulator-aspirator in the event the paper element filter becomes clogged.

**E. Hydraulic Reservoir Relief Valve (See Figure 7.)**

- (1) The reservoir relief valve and the air pressure aspirator-regulator keep the reservoir pressurized to normal operating range. The valve relieves excess air pressure which may build up in the reservoir through thermal expansion in the system. The valve has an inlet port and an outlet port and consists, internally, of an inlet port seat and a spring-loaded poppet.
- (2) The relief valve is installed in the overboard vent line downstream of the hydraulic reservoir air bleed valve. In the event that excess pressure builds up in the reservoir, the poppet will start to relieve at 45 (+5, -0) psi. Full flow of 10 gpm is attained at 80 psi maximum. The poppet reseats at 90 percent of the opening pressure.




**F. Hydraulic Reservoir Air Bleed Valve (See Figure 8.)**

- (1) The hydraulic reservoir air bleed valve and pressure gage are located on the aft side of the rear spar in the left main gear wheel well, inboard of the hydraulic reservoir air chamber. The bleed valve and gage are installed in the overboard vent line, between the reservoir air chamber and the reservoir relief valve.
- (2) The bleed valve is used to relieve the reservoir air pressure prior to disconnecting lines or components in the hydraulic system. The pressure gage provides a ready indication of the hydraulic reservoir air pressure and is used in conjunction with the bleed valve to indicate the air pressure status.
- (3) The air inflation valve is installed on the same fitting as the bleed valve and pressure gage. The air inflation valve is used to manually charge the reservoir with air or dry nitrogen.

**G. Hydraulic Reservoir Vacuum Breaker Check Valve (See Figure 9.)**

- (1) The hydraulic reservoir vacuum breaker check valve is installed on the regulator-aspirator mounting bracket, and connects to the tee fitting at the top of the reservoir. The valve is vented to ambient air. The purpose of this valve is to maintain atmospheric pressure in the reservoir, allowing hydraulic fluid to flow to the auxiliary hydraulic pump in the event of a failure of the reservoir pressurization system. The failure, or breakdown, of the pressurization system could cause a fluid starvation at the auxiliary hydraulic pump because of vacuum buildup in the reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

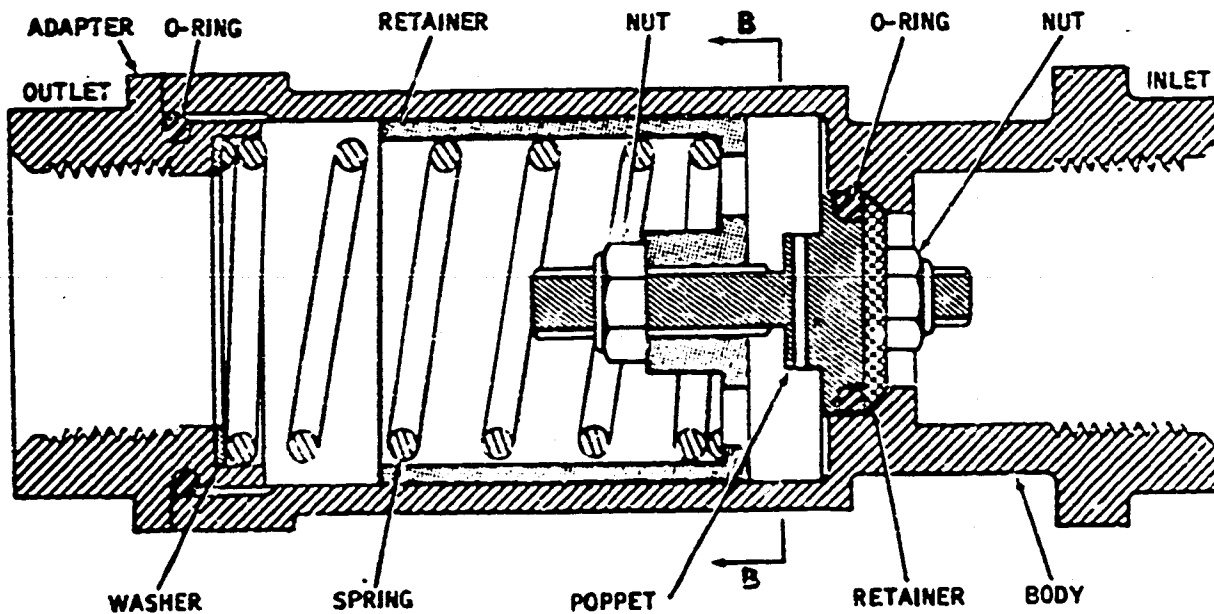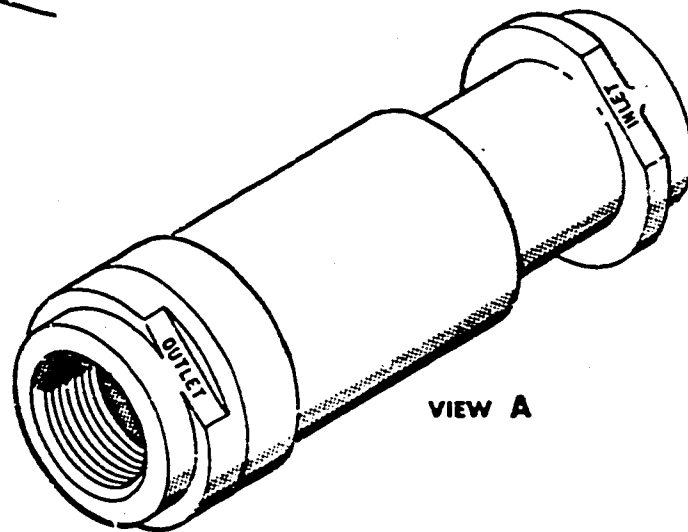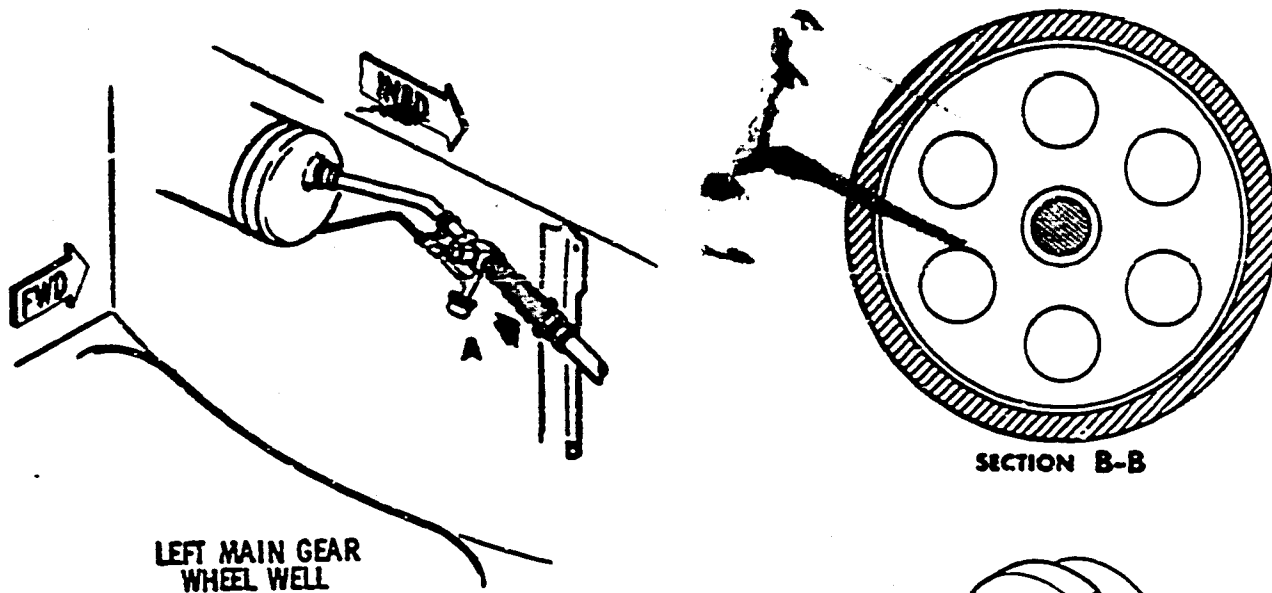

Hydraulic Reservoir Relief Valve  
 Figure 7


Jun 15/67

Printed in U S A

HA2-17

29-10-0  
 CODE 15  
 Page 17

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

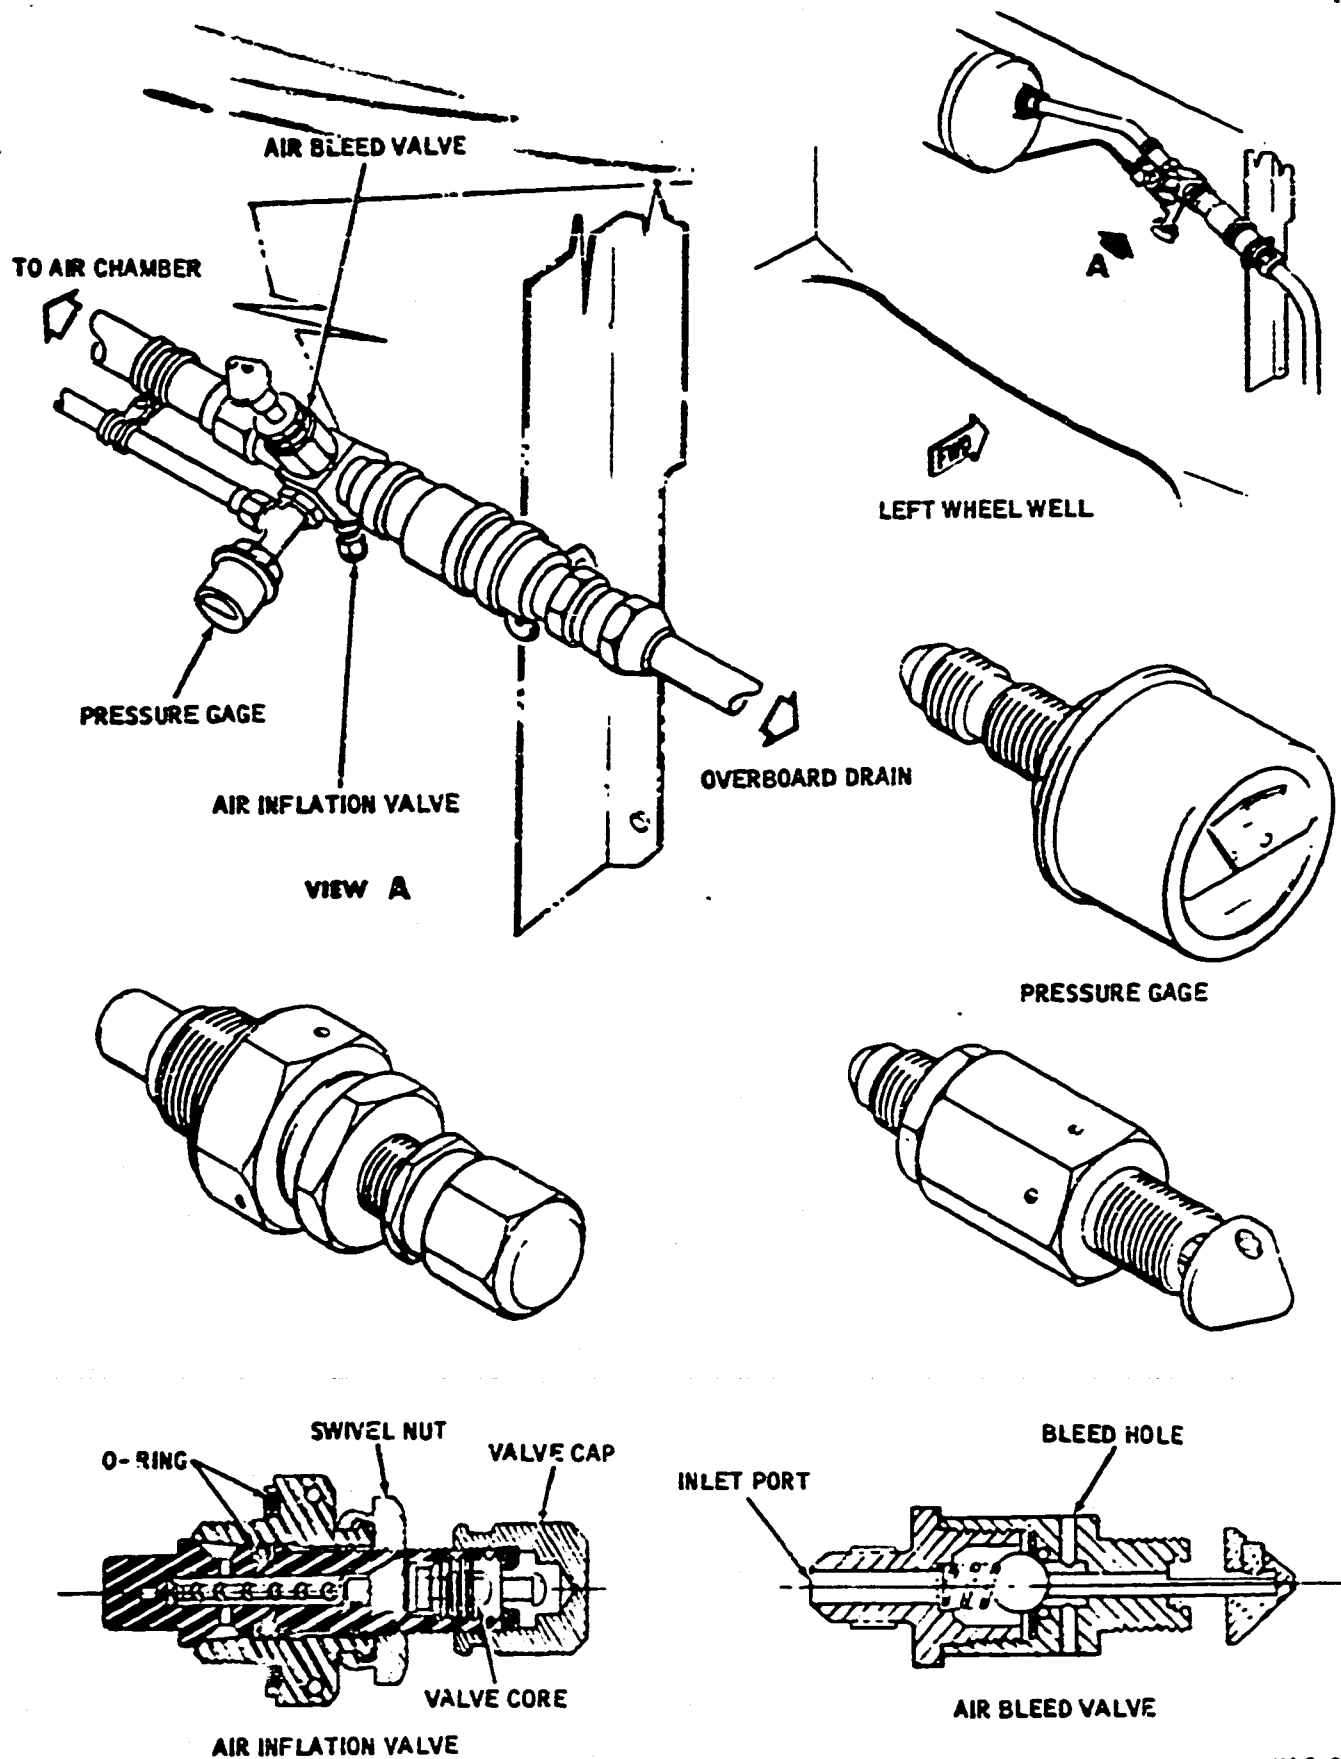




HA2-32

Reservoir Air Bleed Valve, Air Inflation  
 Valve, and Pressure Gage  
 Figure 8

29-10-0  
 CODE 15  
 Page 18

Jun 15/67

DOUGLAS AIRCRAFT COMPANY  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

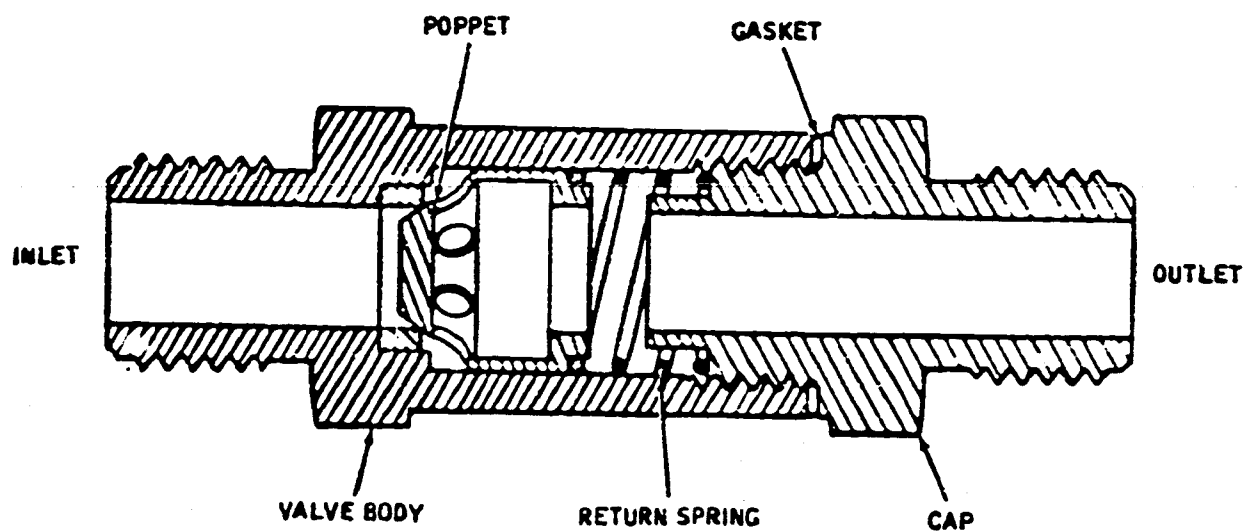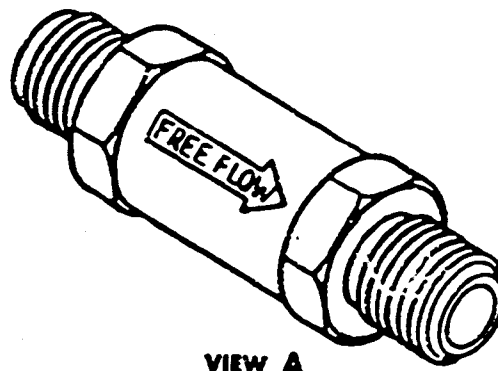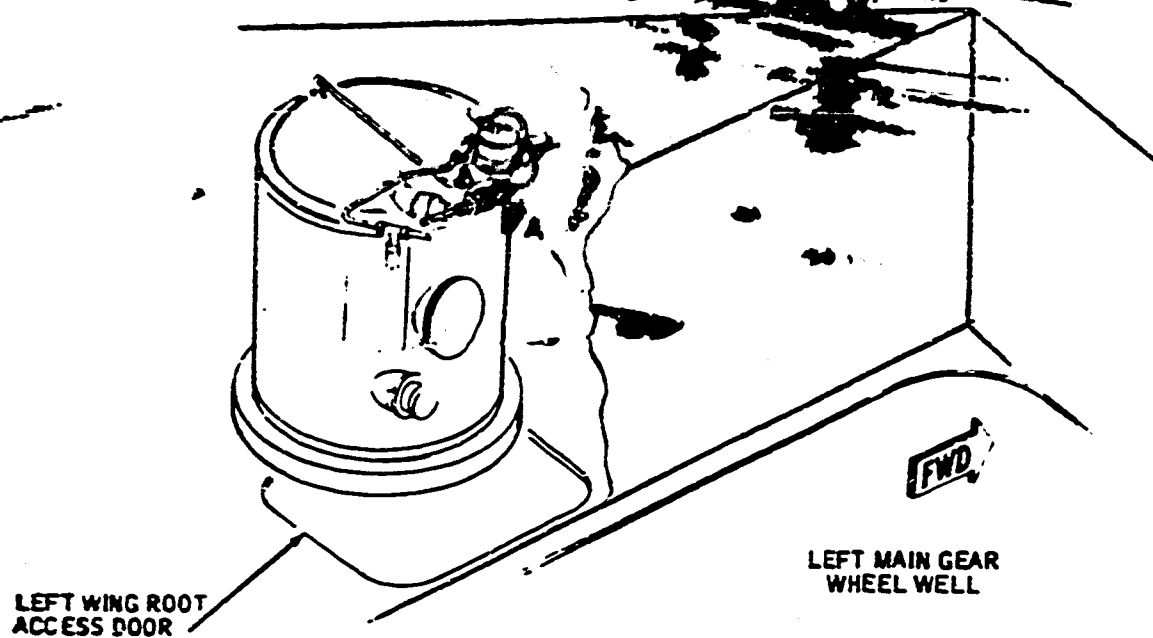

Hydraulic Reservoir Vacuum Breaker Check Valve  
 Figure 9

Jun 15/67

Printed in U.S.A.

HA2-33  
 29-10-0  
 CODE 15  
 Page 19

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

H. Hydraulic Reservoir Air Chamber

- (1) The hydraulic reservoir air chamber is a small, cylindrical tank with a capacity of 700 cubic inches. It has two ports, an inlet port at the bottom of the chamber and an outlet port in one end of the chamber. The inlet port mounting boss is fitted with a drain plug. The air chamber is installed on the aft side of the rear spar in the left main gear wheel well, inboard and above the hydraulic reservoir filler assembly. Access to the air chamber is through the left main gear inboard door.
- (2) The air chamber provides for greater fluid capacity in the hydraulic reservoir by providing air and foam space for the reservoir in a separate container. Air pressure in the chamber is maintained by the regulator-aspirator and the air relief valve. The air pressure in the chamber and reservoir can be relieved, when desired, by the air bleed valve located downstream of the chamber. The air chamber is mounted higher than the reservoir filler assembly, to prevent overfilling of the reservoir from reducing the available air space and to prevent fluid from being vented overboard through the reservoir relief valve.


I. Hydraulic Reservoir Port B Return Check Valve (See Figure 10.)

- (1) The reservoir port B return check valve is installed in port B of the reservoir to prevent reverse flow of hydraulic fluid from the reservoir to the return line. The check valve is located on the reservoir in the left wing root and is accessible through the left wing root access door.
- (2) Externally and internally, the port B check valve is a standard-type check valve with a 1500-psi rating. A nominal pressure of approximately 8 psi unseats the poppet, permitting fluid to flow through the valve. When the reservoir pressure exceeds the return line pressure, the poppet will seat and reverse fluid flow will be prevented.


J. Engine Hydraulic Fire Shutoff Valve (See Figures 11 and 12.)

- (1) The engine hydraulic fire shutoff valve is a gate-type, mechanically controlled valve, installed in the supply line of each engine-driven hydraulic pump. The engine hydraulic fire shutoff valve is actuated from the flight compartment to prevent the flow of hydraulic fluid into the engine section.
- (2) The engine hydraulic fire shutoff valve is mounted on a 2-piece channel bracket which is installed inside the wing leading edge, aft of the firewall of each inboard pylon. Access to the valve is through the access door located on the lower side of the wing leading edge, outboard of either the left or right inboard pylon. Each valve is located approximately 30 inches inboard of the access door.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

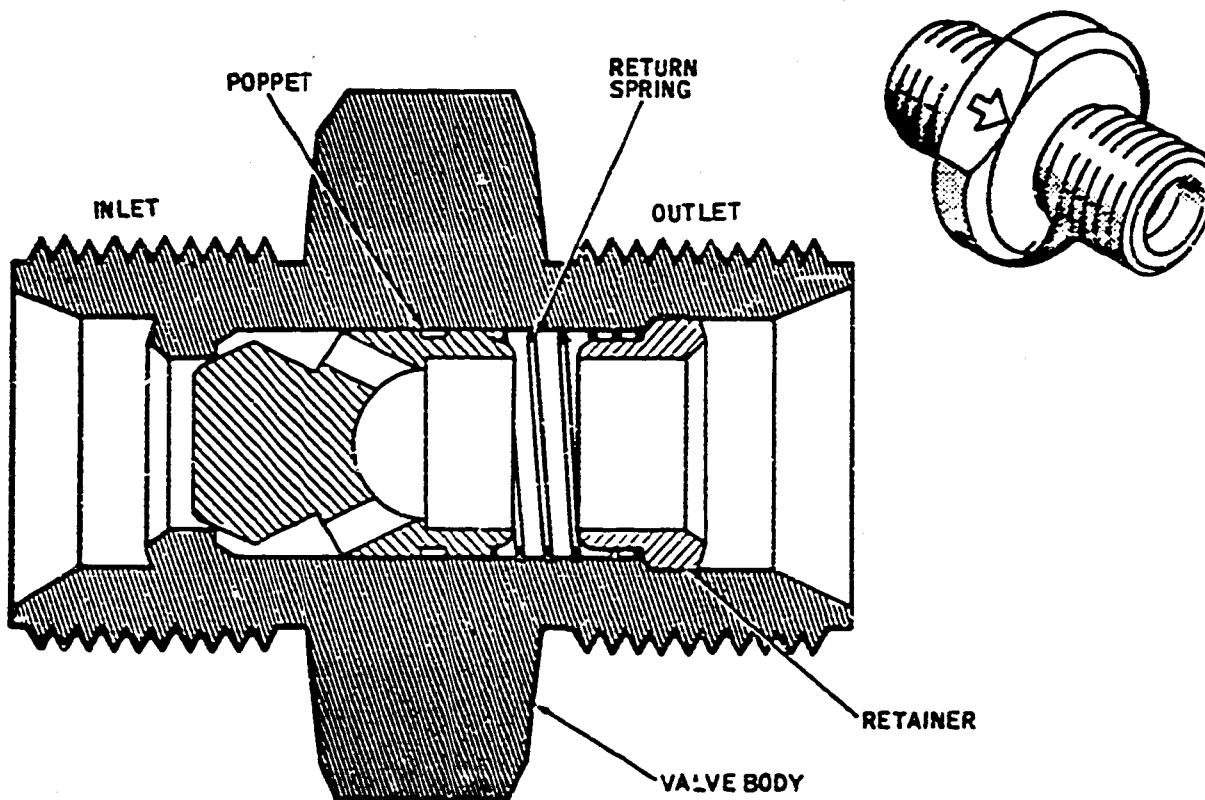

MINIATURE CHECK VALVE

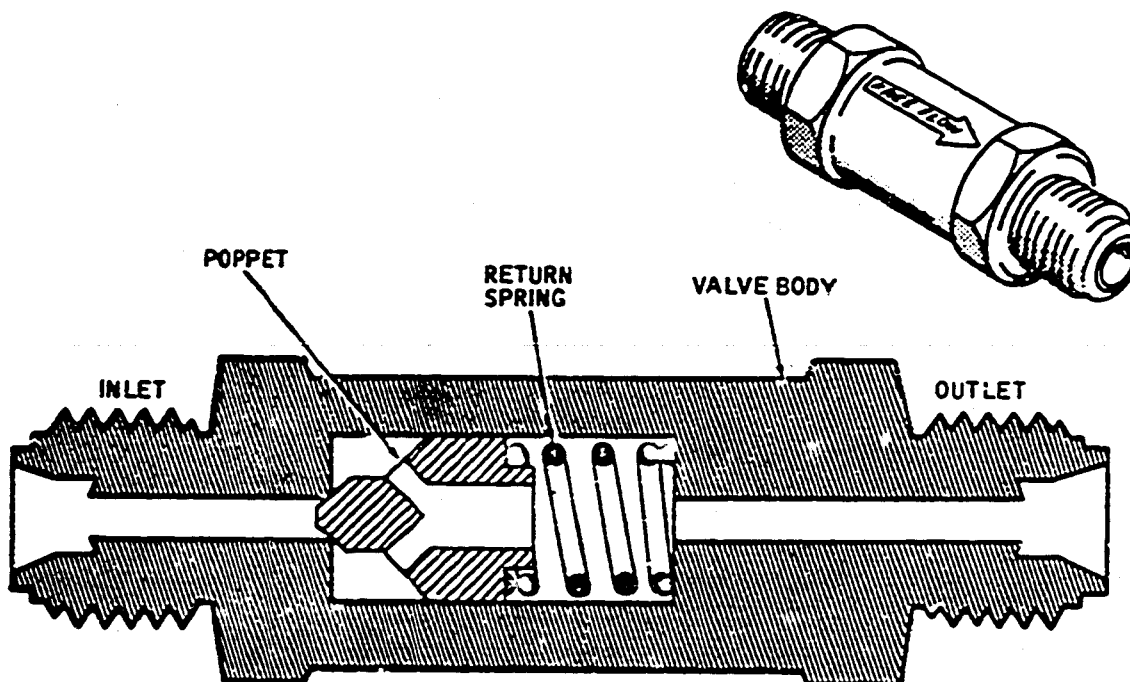

STANDARD CHECK VALVE

Hydraulic Check Valves -- Typical  
 Figure 10


HA2-18A

29-10-0  
 CODE 15  
 Page 21

Oct 1/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

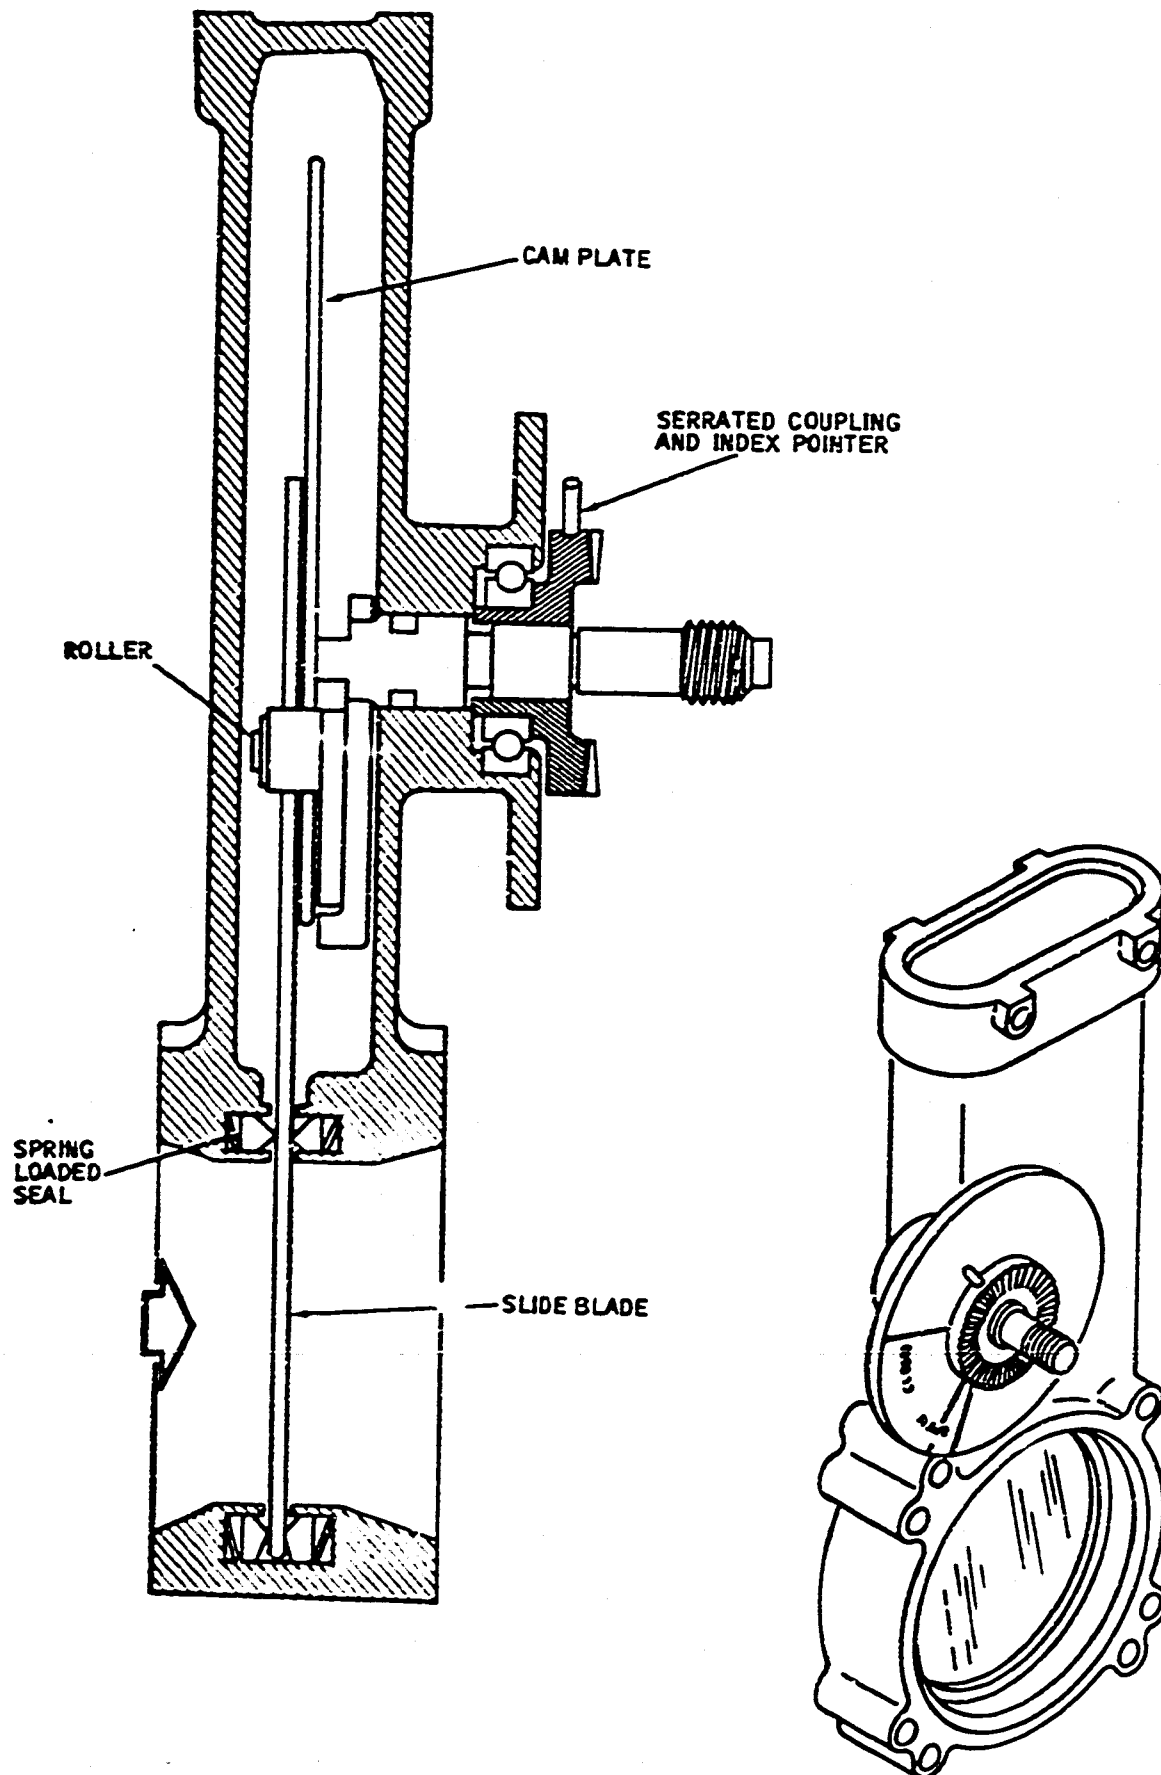

HA2-2209


Engine Hydraulic Fire Shutoff Valve -- Schematic  
Figure 11

29-10-0  
CODE 15  
Page 22

Printed in U.S.A.

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

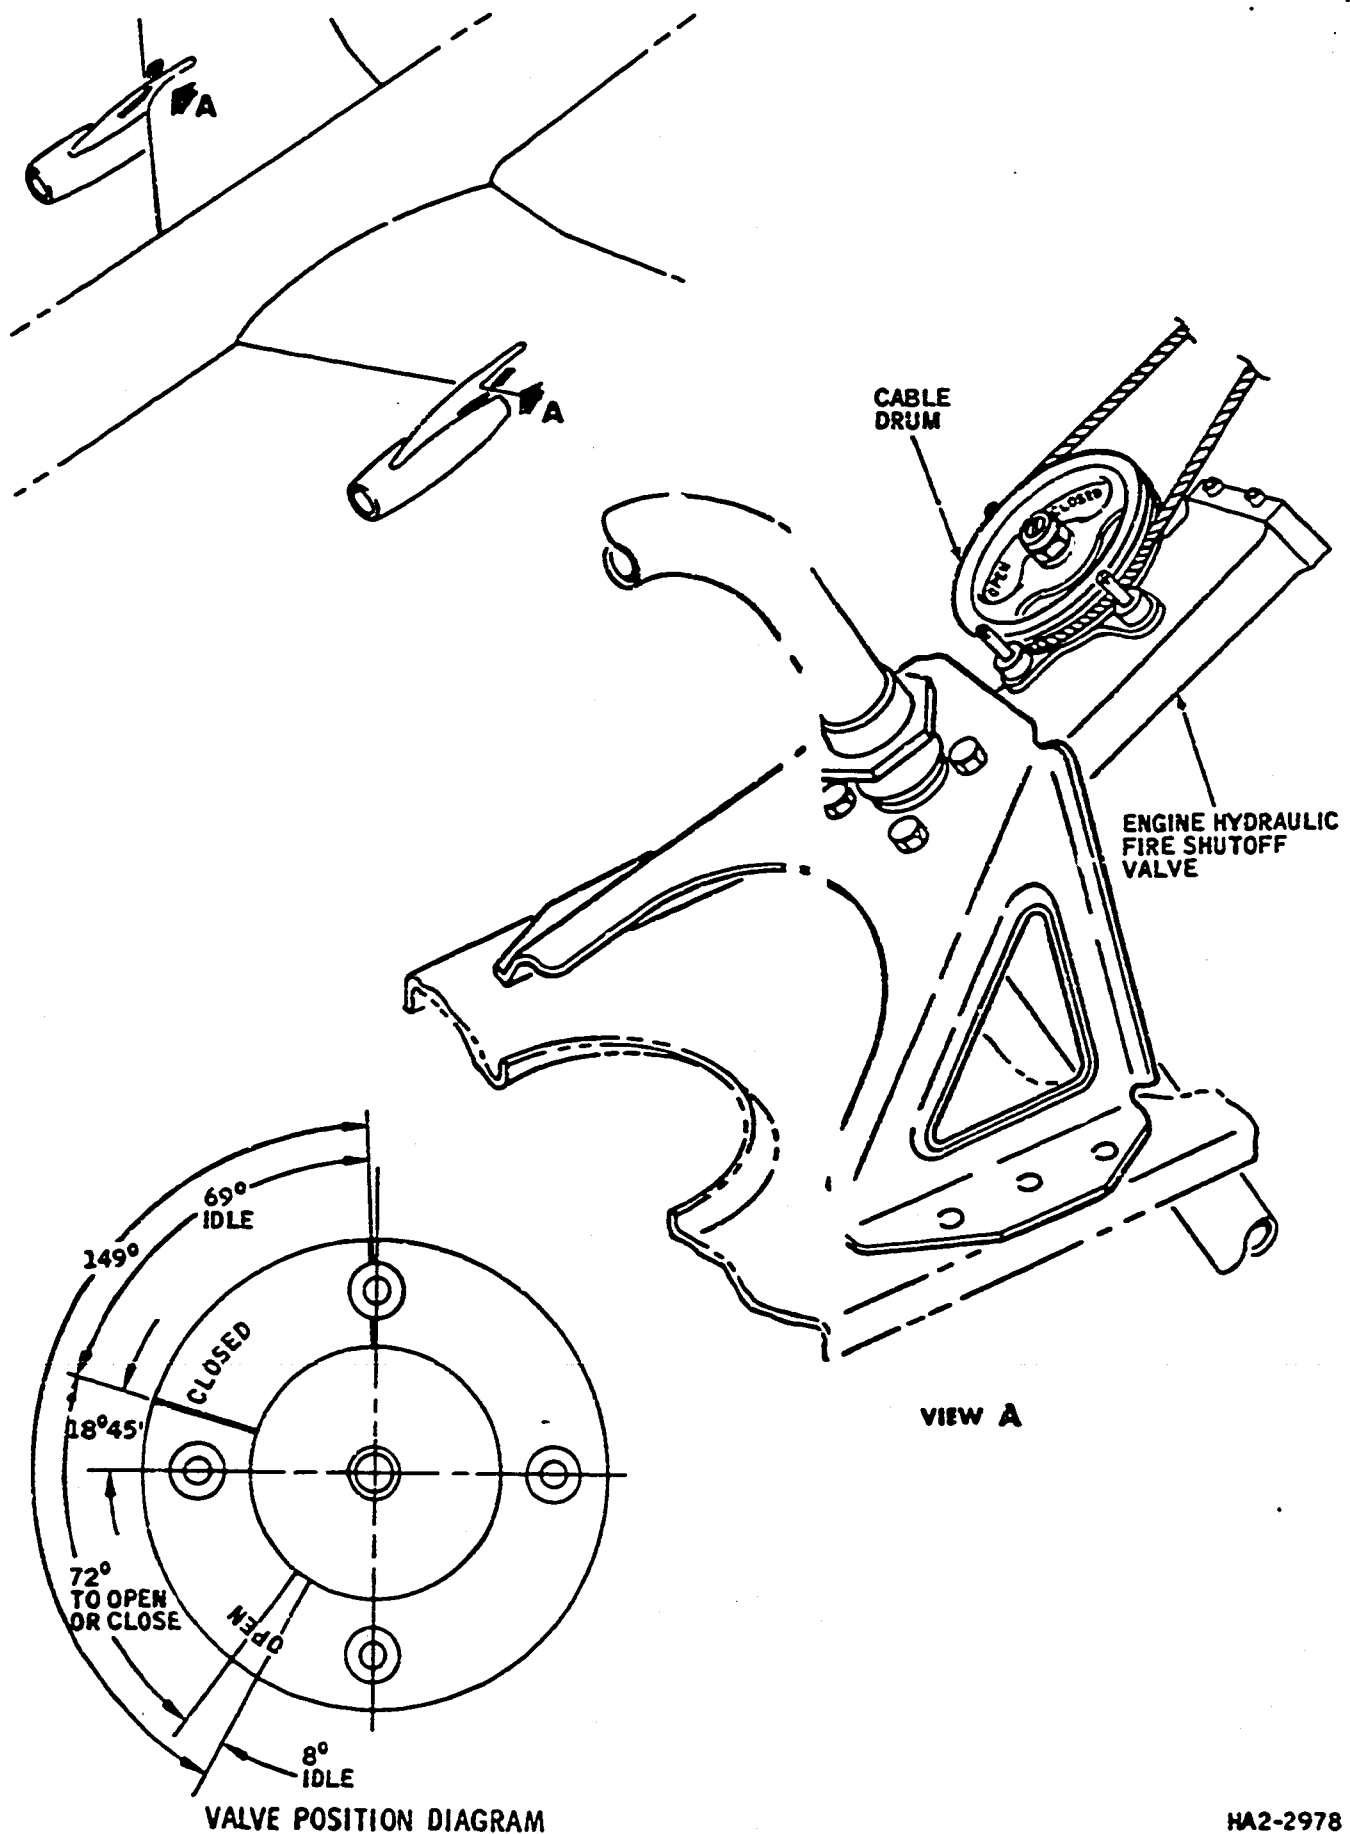

VALVE POSITION DIAGRAM

Engine Hydraulic Fire Shutoff Valve  
 Figure 12

HA2-2978

29-10-0  
 CODE 15  
 Page 23

— Feb 1/69

Printed in U.S.A.




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Internally, the valve consists of a valve arm, valve arm link, cam plate, and slide blade. The valve arm link attaches to the valve arm and is allowed to swivel through an arc in relation to the valve arm. The link has a stop that will contact the arm when the two have traveled to the valve closed, full overtravel position. In the full open pretravel position, the link contacts the arm stop.
- (4) A roller attached to the end of the link rides in, and extends through, a J-shaped slot in the cam plate. The rotation of the valve arm causes the link roller to follow the cam slot, allowing the arm and link to move through independent arcs.
- (5) The slide blade (gate of the valve) is slotted near the one end and also receives the link roller extending through the cam slot. The slide blade is positioned parallel to the cam plate and is guided by two grooves in the housing. This will allow the blade to open or close through porting of the valve by the action of the arm and link. The cam plate is pinned to the valve shaft, securing it rigidly in two positioning grooves in the housing. A pin-indicator is provided to relate valve position to a reference plate placarded open and closed.
- (6) The engine hydraulic fire shutoff valves are cable actuated by the fire control handles, located on the overhead switch panel in the flight compartment. When the fire control handle for either inboard engine is moved, the cable system rotates the drum which is attached to the corresponding shutoff valve shaft. This extends the valve blade into the fluid passage to block the flow of fluid. The valve operates from open to close by clockwise rotation of the cable drum. The valve gage will idle during the first 8 degrees of rotation of the cable drums, and then will close in the next 72 degrees. The cable drum will continue to rotate the shaft for an additional 69 degrees after the gate valve is closed, locking it overcenter. Total travel of the cable drum is 149 degrees.

K. Engine-Driven Hydraulic Pump (See Figures 13 and 14.)

- (1) The two, single-stage, variable-displacement, cam-actuated, pressure-compensated, engine-driven hydraulic pumps are installed, one each, on the inboard engines. The pump incorporates a solenoid-operated bypass feature for reducing the output pressure to zero psi. Each bypass valve solenoid is controlled by a corresponding engine hydraulic pump control switch in the flight compartment. The switch for the hydraulic pump on engine 2 is placarded left, on, and bypass. The switch for engine 3 is placarded right, on, and bypass. When a switch is placed in the bypass position, the bypass valve for that pump is actuated and the pump pressure is reduced to zero psi. When the switch is placed in the on position, the bypass valve is open and the pump operates normally in a pressure range of 2850 to 3050 psi. The pump provides a continuous, nonpulsating flow of hydraulic fluid, under pressure, to the hydraulic manifolds for distribution throughout the hydraulic system.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

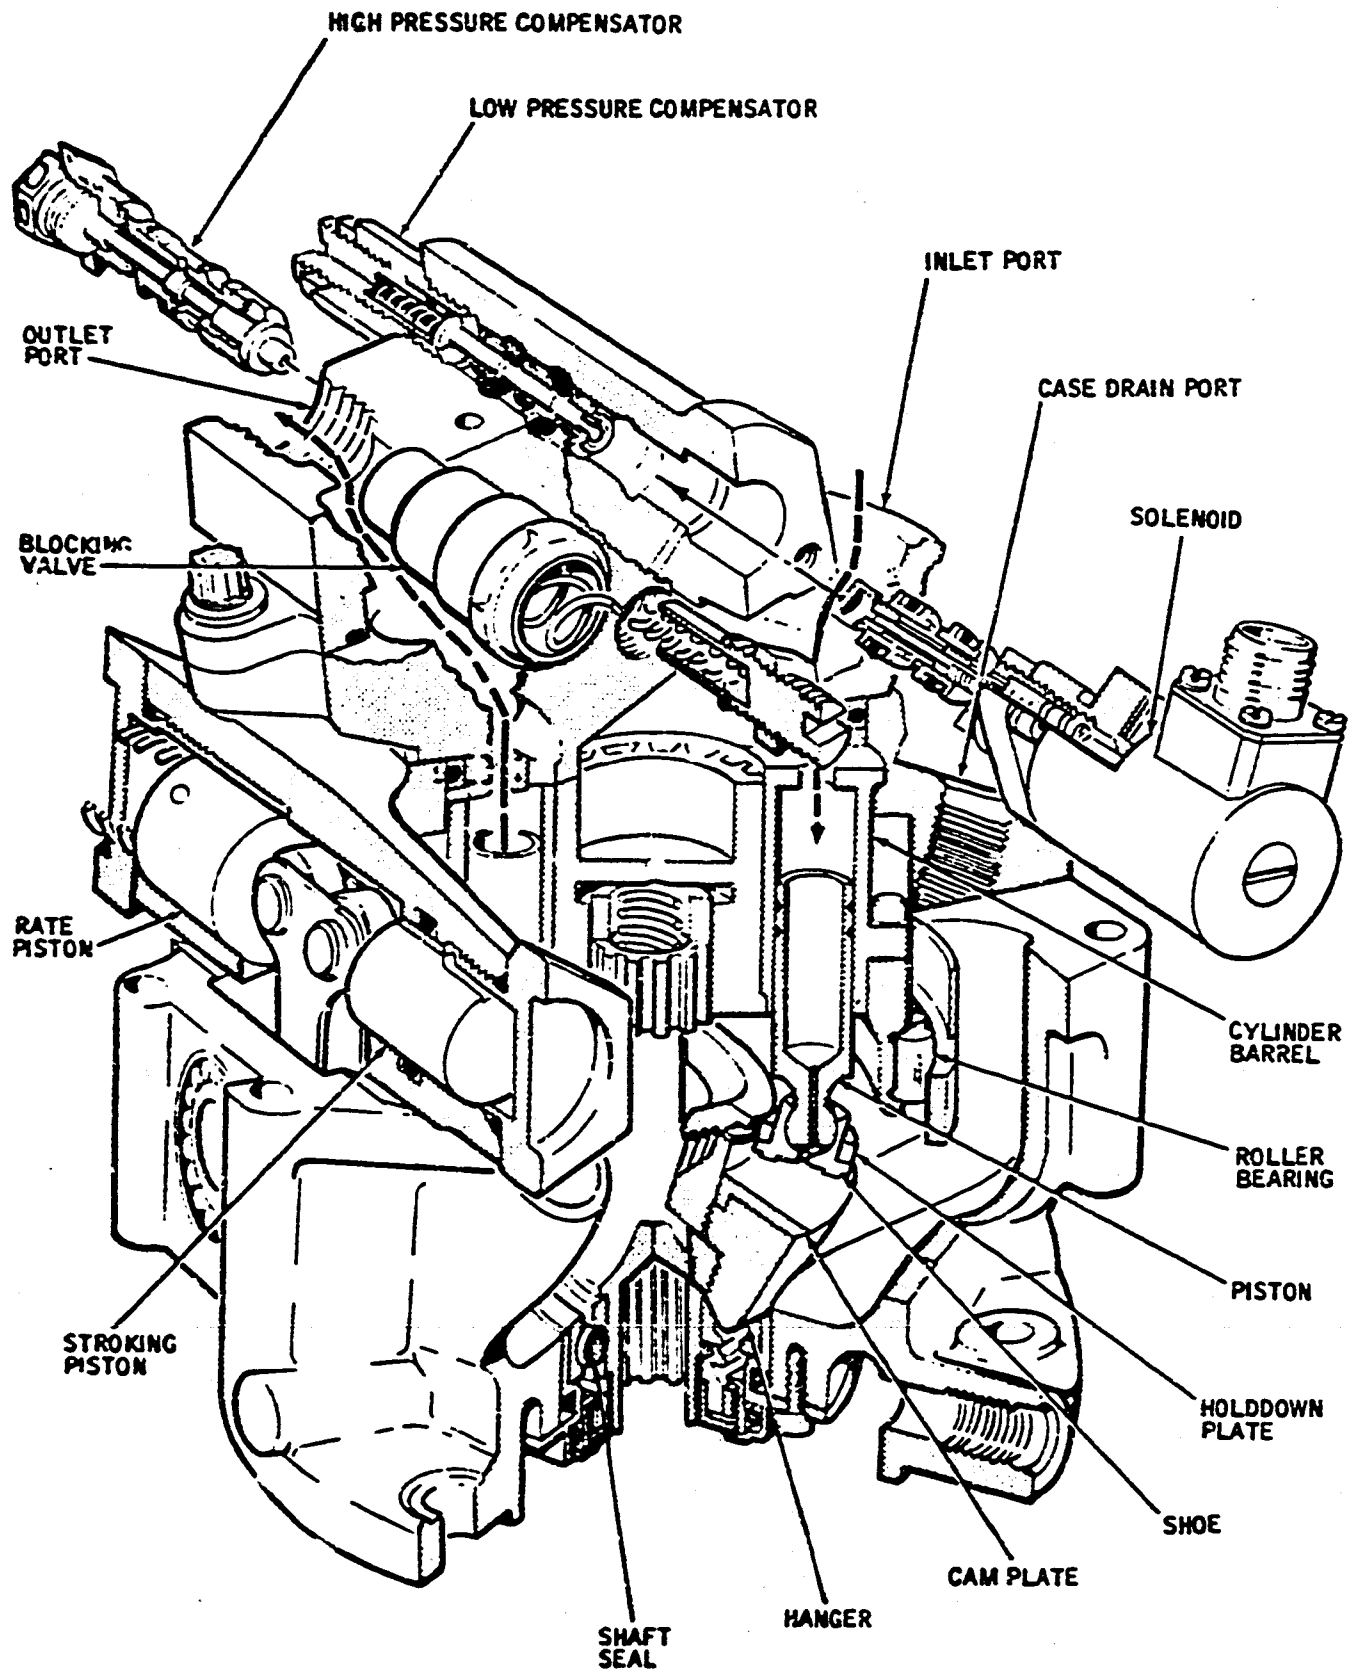

HA2-21


Engine-Driven Hydraulic Pump -- Cutaway View  
Figure 13

29-10-0  
CODE 15  
Page 25


Jun 15/67

Printed in U.S.A.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

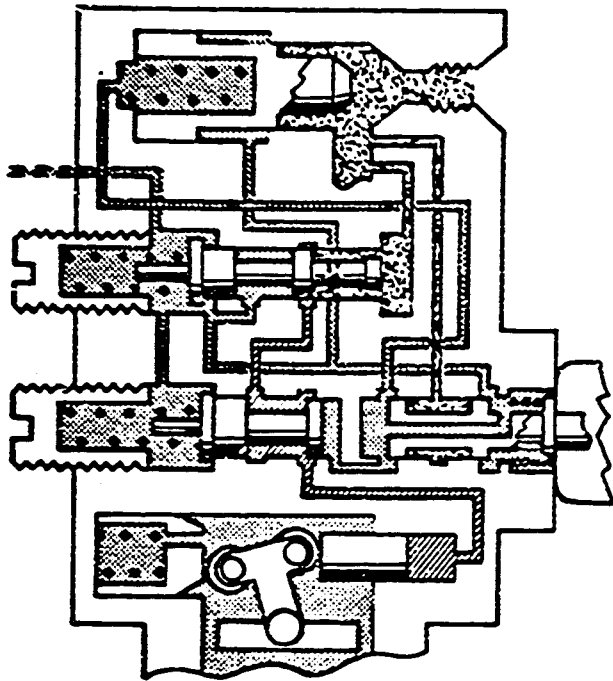

**A. FULL PRESSURE, NO FLOW CONDITION**  
 BLOCKING VALVE OPEN, 3,000 PSI  
 FLUID AVAILABLE, NO DEMAND.

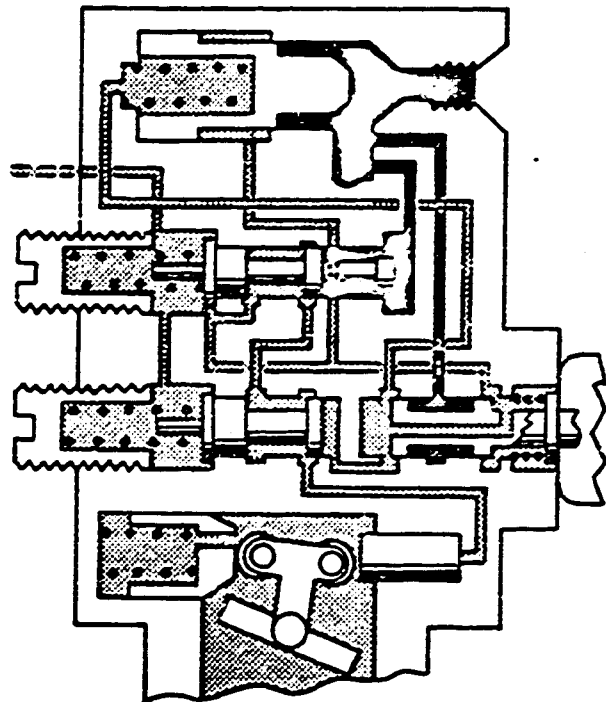

**B. FULL FLOW CONDITION**  
 BLOCKING VALVE OPEN, HANGER "ON STROKE" 3,000  
 PSI FLUID FLOWING FROM PUMP.

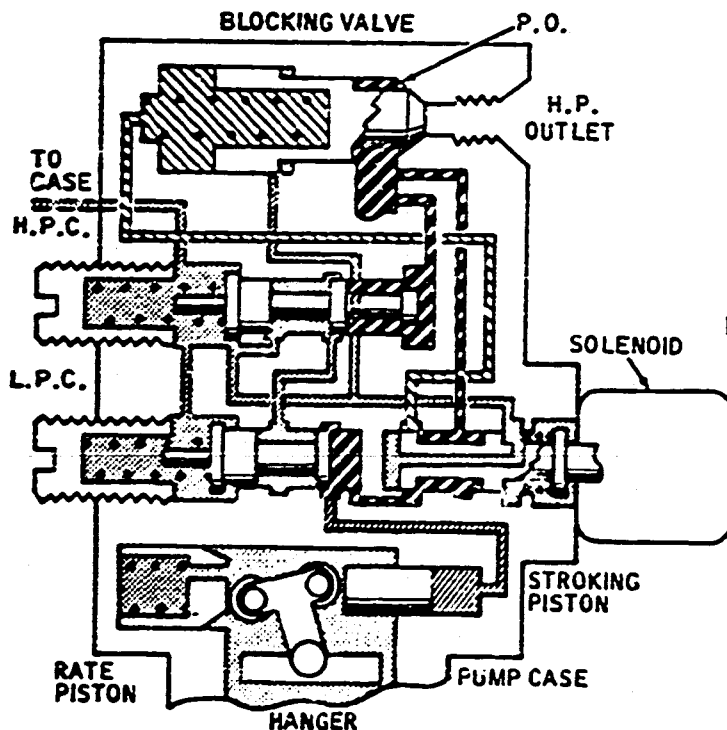

**C. DEPRESSURIZED AND BLOCKED CONDITION**  
 SOLENOID ENERGIZED, BLOCKING VALVE CLOSED,  
 PUMP COMPENSATED AT 500 PSI.

**KEY**

- COMPENSATED PRESSURE: 3,000  $\pm$  50
- CONTROL PRESSURE: 200-300
- CASE PRESSURE: 45-55
- FULL FLOW PRESSURE: TO 2,950
- DEPRESSURIZED PRESSURE: 400-500
- BLOCKING VALVE PRESSURE: 400-500
- P.O. = PUMP OUTLET
- H.P.C. = HIGH PRESSURE COMPENSATOR
- L.P.C. = LOW PRESSURE COMPENSATOR

HA2-19

Engine-Driven Hydraulic Pump Pressure Flow -- Schematic  
 Figure 14

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The heart of the pump is a revolving cylinder barrel which contains nine pistons. By means of a hold-down plate and hydraulically balanced shoes, the pistons are supported on an inclined cam plate which causes them to reciprocate as the barrel revolves. The hold-down plate ensures positive stroking of the pistons during the suction stroke. The angle of the cam plate is varied by moving the trunnioned hanger on which it is mounted, thereby changing the displacement of the pump. The hanger, in turn, is controlled by a pressure compensator.
- (3) Oil passes through the main inlet and then through porting in the end of the cylinder barrel to the cylinders from which the pistons are being withdrawn. As the cylinder barrel revolves, these pistons are forced into their bores and discharge high-pressure oil through porting in the end of the barrel to the outlet port.
- (4) The cylinder barrel, supported by a radial bearing, is driven by an internal shaft which passes through the trunnioned hanger. A hydraulically balanced, face-type, carbon shaft seal is used to assure optimum sealing. Sealing pressure increases as case pressure increases, and the seal adjusts itself to compensate for any wear which takes place.
- (5) The pressure compensator regulates the volume delivered in accordance with the demand of the system and maintains the predetermined pressure. When the pressure is less than the spring load, the spring moves the spool to vent oil in the stroking cylinder to the case. The stroking piston then retracts and a spring load on the hanger moves it to a greater angle and increases the volume pumped. The axial thrust of the pistons against the cam plate during power stroke is balanced hydraulically. Oil, at system pressure, is admitted through holes in the piston and shoe to an undercut area in the face of the piston shoe. The pressure applied to the undercut area, which is slightly less than the piston area, effectively balances the forces so that the shoe is supported on an oil film at all times. Balance is controlled to such a degree that there is no excessive leakage, and high volumetric efficiency is maintained.
- (6) The axial thrust of the cylinder barrel is also balanced hydraulically against the port plate.
- (7) Because of these features, the axial thrust of the pistons is transferred hydraulically, eliminating the need for antifriction thrust bearings. This increases the reliability factor, if contamination or other adverse conditions exist.
- (8) The pump functions as a standard, pressure-compensated pump, when the bypass solenoid is not energized. Energizing the solenoid allows the pump to compensate at a reduced, controlled pressure of approximately 500 psi. Also incorporated in the cap is a blocking valve. The valve shuts off the discharge flow from the pump, when the 500 psi compensating valve takes over as a result of the solenoid being energized. Hence,

Jun 15/67

Printed in U S A

29-10-0  
CODE 15  
Page 27

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

depressurizing the pump permits operation with the pump completely feathered at approximately 1/2 drive torque required at 3000 psi. The blocking valve is automatically controlled by the depressurizing valve. When the solenoid is energized, the blocking valve prevents flow from the pump discharge port. When the solenoid is deenergized, the blocking valve automatically opens as the pump builds up pressure to match the system demand.

**L. Engine-Driven Hydraulic Pump Check Valves (See Figure 10.)**

- (1) Two check valves, rated at 3000 psi, are installed in the lines from each engine-driven hydraulic pump. One check valve is installed in the pressure line and the other is in the case drain line. The check valves in the pump pressure lines prevent reverse flow of hydraulic fluid through the pump, when the pump is inoperative or when external hydraulic pressure is supplied to the system. Access to the valves can be gained through an access door in the forward right apron of each inboard pylon. The valves are mounted on the exterior wall of the inlet box by means of the bulkhead fittings and retaining nuts.
- (2) Normal operating pressure will unseat the poppet, and fluid will flow through the valve. When pressure downstream of the valve exceeds pressure from the pump, the pressure, with the aid of the return spring, will seat the poppet. This prevents reverse flow of hydraulic fluid through the pumps.


**M. Engine-Driven Hydraulic Pump Case Drain Filter (See Figure 15.)**

- (1) A line-type, micron filter, for use in a low-pressure hydraulic system, is installed in the engine-driven hydraulic pump case drain return line between the pump flow check valve and the hydraulic system reservoir. The case drain filter is installed on the aft surface of the rear spar opposite the leading edge of the inboard flap assembly. One filter is used for each engine-driven pump. Access is gained to the filter by lowering the flaps. A second check valve is installed adjacent to the filter in the downstream side of the case drain return line.
- (2) Externally, the filter is approximately 5 inches high and 2 inches wide, with ports marked inlet and outlet. The bowl is cylindrical in shape, with hex-shaped wrench flats at the lower end. A self-sealing, magnetic drain plug is installed in the bottom end of the filter bowl. The filter element is made of chemically treated paper.
- (3) A second line type disposable filter is installed at the case drain port of the engine-driven hydraulic pump.


**N. Dual Filter and Relief Valve (See Figure 16.)**

- (1) The hydraulic power system dual filter and relief valve consists of two filters and two relief valves installed in the same body. The unit filters the hydraulic fluid from the two engine-driven hydraulic pumps, and the pressure relief valves assure that excessive pressures do not build up in the pressure line from the pumps. The unit is located in the left main gear wheel well on the lower portion of the rear spar, approximately 1 foot outboard of the centerline shear web.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

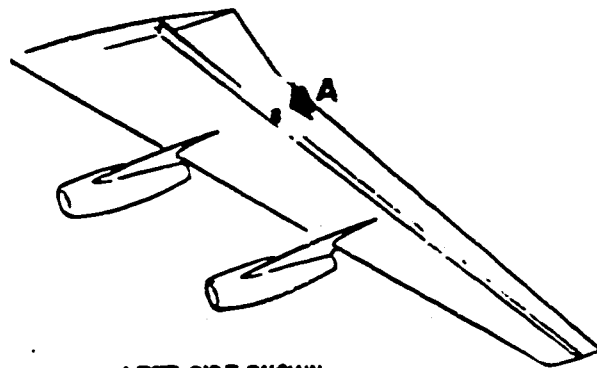

LEFT SIDE SHOWN  
 RIGHT SIDE OPPOSITE

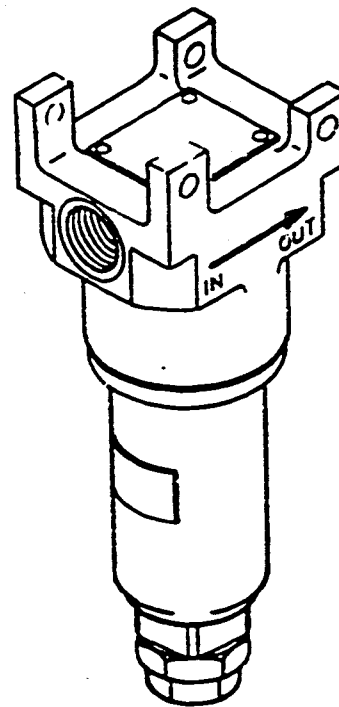

VIEW A

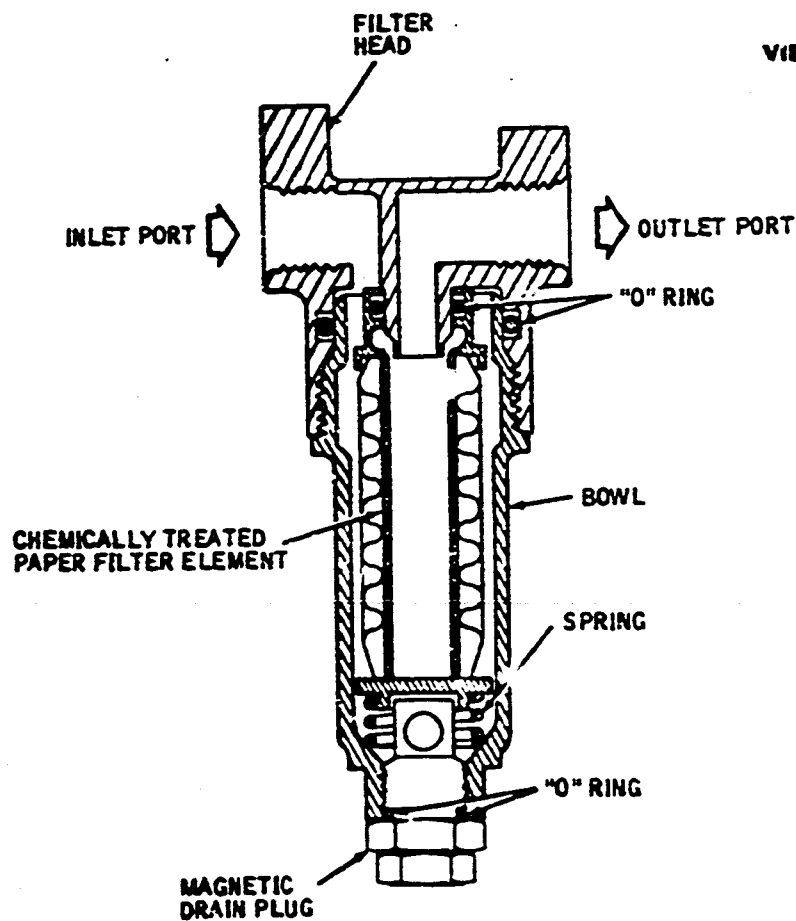

HA2-31


Engine Driven Hydraulic Pump Case Drain Filter -- Cutaway View  
 Figure 15

29-10-0  
 CODE 15  
 Page 29

Jun 15/67

Printed in U S A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

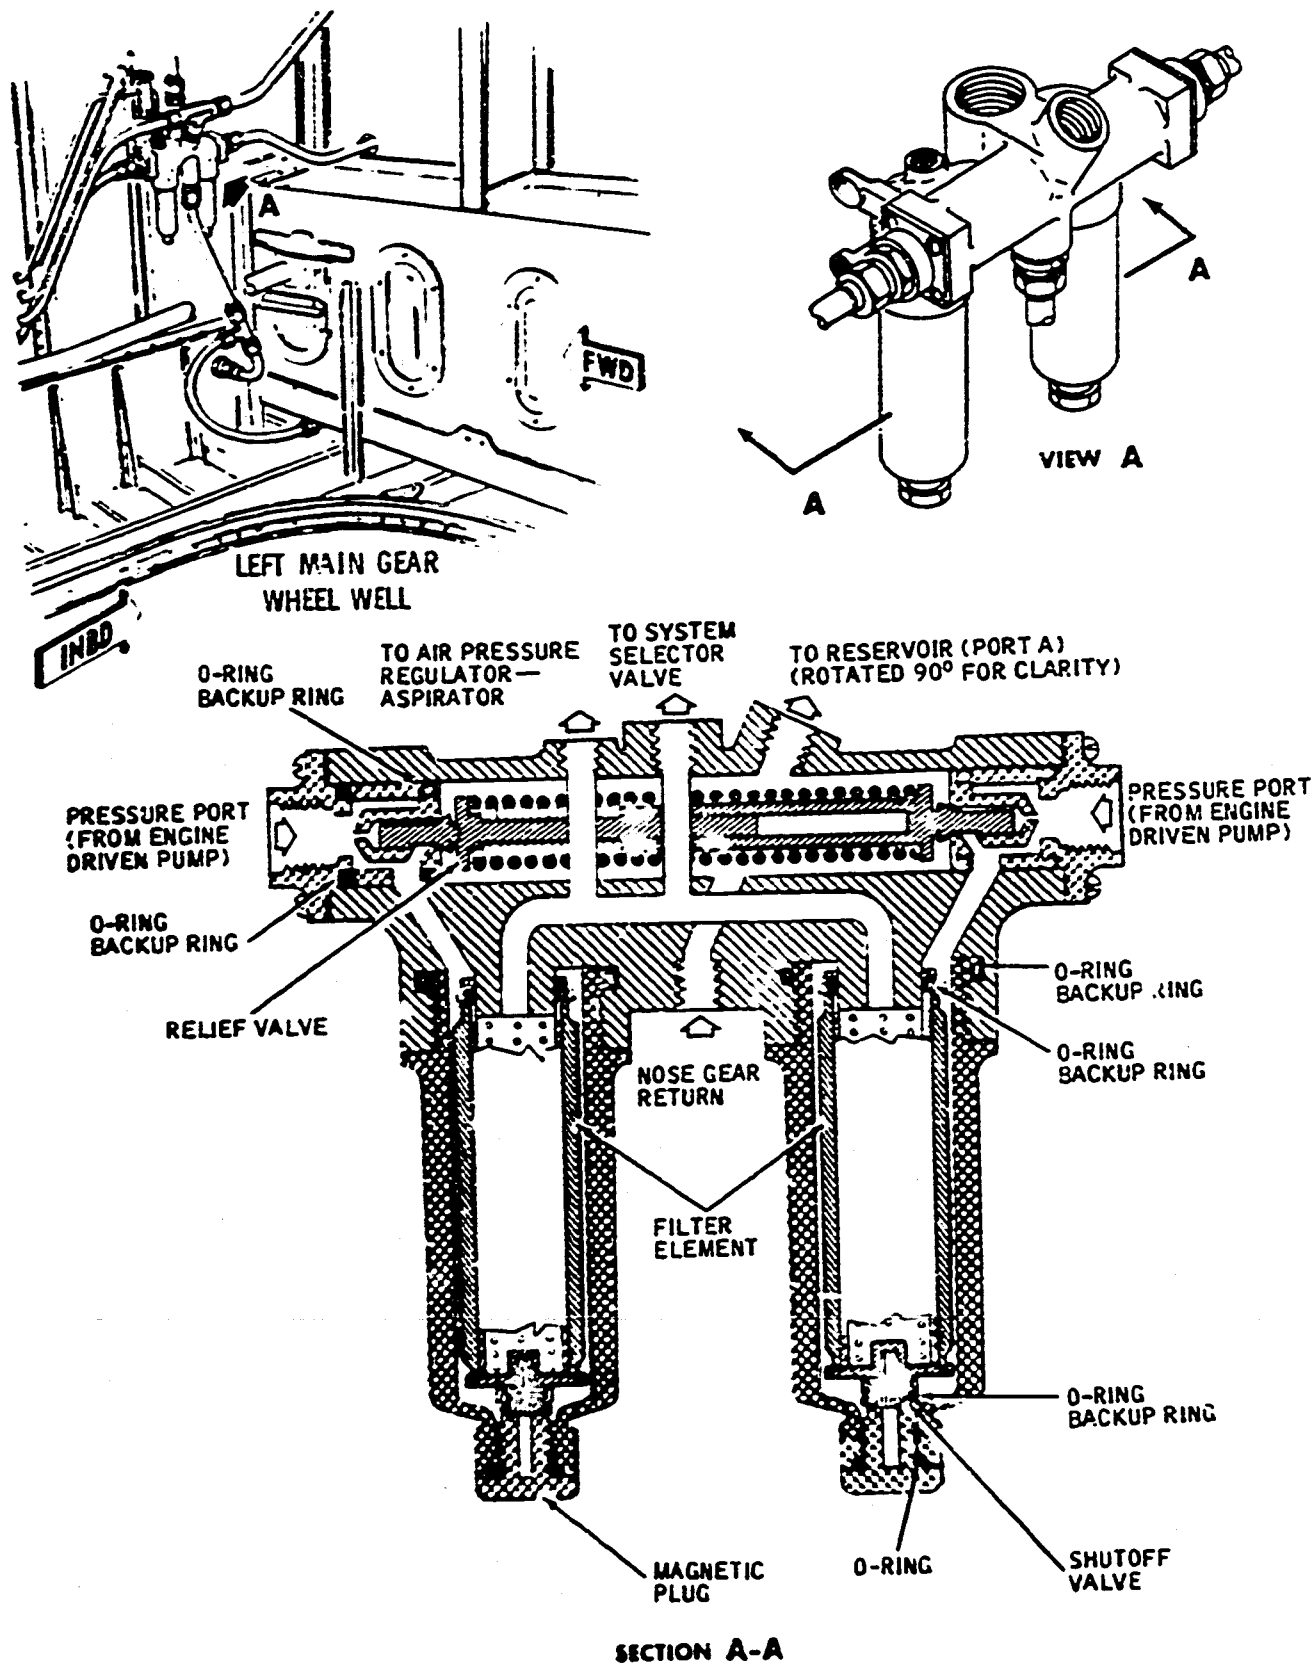

HA2-20

Dual-Filter and Relief Valve -- Cutaway View  
 Figure 16

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The unit consists of a casting with a flange-mounted pressure inlet port on each end. Two pressure outlets are located on the top of the casting. One outlet, centrally located, is the main pressure outlet to the system selector valve. The other, located to the left of the selector valve port, is the pressure outlet to the air pressure regulator-aspirator. The return outlet port for the relief valve portion of the unit is located on the center of the aft face of the body, canted upward. The nose gear return line is connected to a check valve installed in a return line port, located between the two filter bowls.
- (3) The pressure relief valves are located behind the pressure inlet ports and are connected to the return outlet port of the unit. The inlet from the nose gear return line is routed through the casting to the return outlet port.
- (4) If either of the filter elements becomes clogged, pressure above 3300 psi at the inlet port will unseat the poppet. Pressure above 3500 psi will allow full flow of 22.5 gpm to flow to the return port of the unit and back to the reservoir. The relief valves will reseal at approximately 3000 psi.
- (5) A check valve is installed in the system selector valve port to prevent reverse flow of pressure through the filter during auxiliary hydraulic pump operation.

0. System Selector Valve (See Figures 17 and 18.)

- (1) The system selector valve is a 3-position valve which permits directional control of fluid under pressure. The valve is installed on the left hydraulic power manifold and is accessible through the left main gear inboard door.
- (2) The selector valve pressure-to-system port and the return port are directly ported to the manifold. The engine pump pressure enters the valve through a port on the large end of the valve, and the auxiliary pump inlet and alternate ports are located at the top, toward the aft end of the valve. The valve control crank is attached to a push-pull rod and a cable sector.
- (3) Operation of the system selector valve is controlled by a lever located on the right side of the system engineer's control pedestal. When the control lever is moved to the selected position, the cable system, through the sector and crank, operates the valve positioning lever to drive the slide spool assembly to the selected position. When the control lever is placed in the general system (normal) position, the selector valve is actuated, causing hydraulic fluid to enter the valve through the system pressure port. The fluid is then directed into the manifold through the pressure-to-system port. In the general system (normal) position, fluid from the auxiliary pressure port is also routed to the pressure-to-system port. In the bypass/general system position, the selector valve ports engine pump pressure into the


Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 15  
Page 31




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

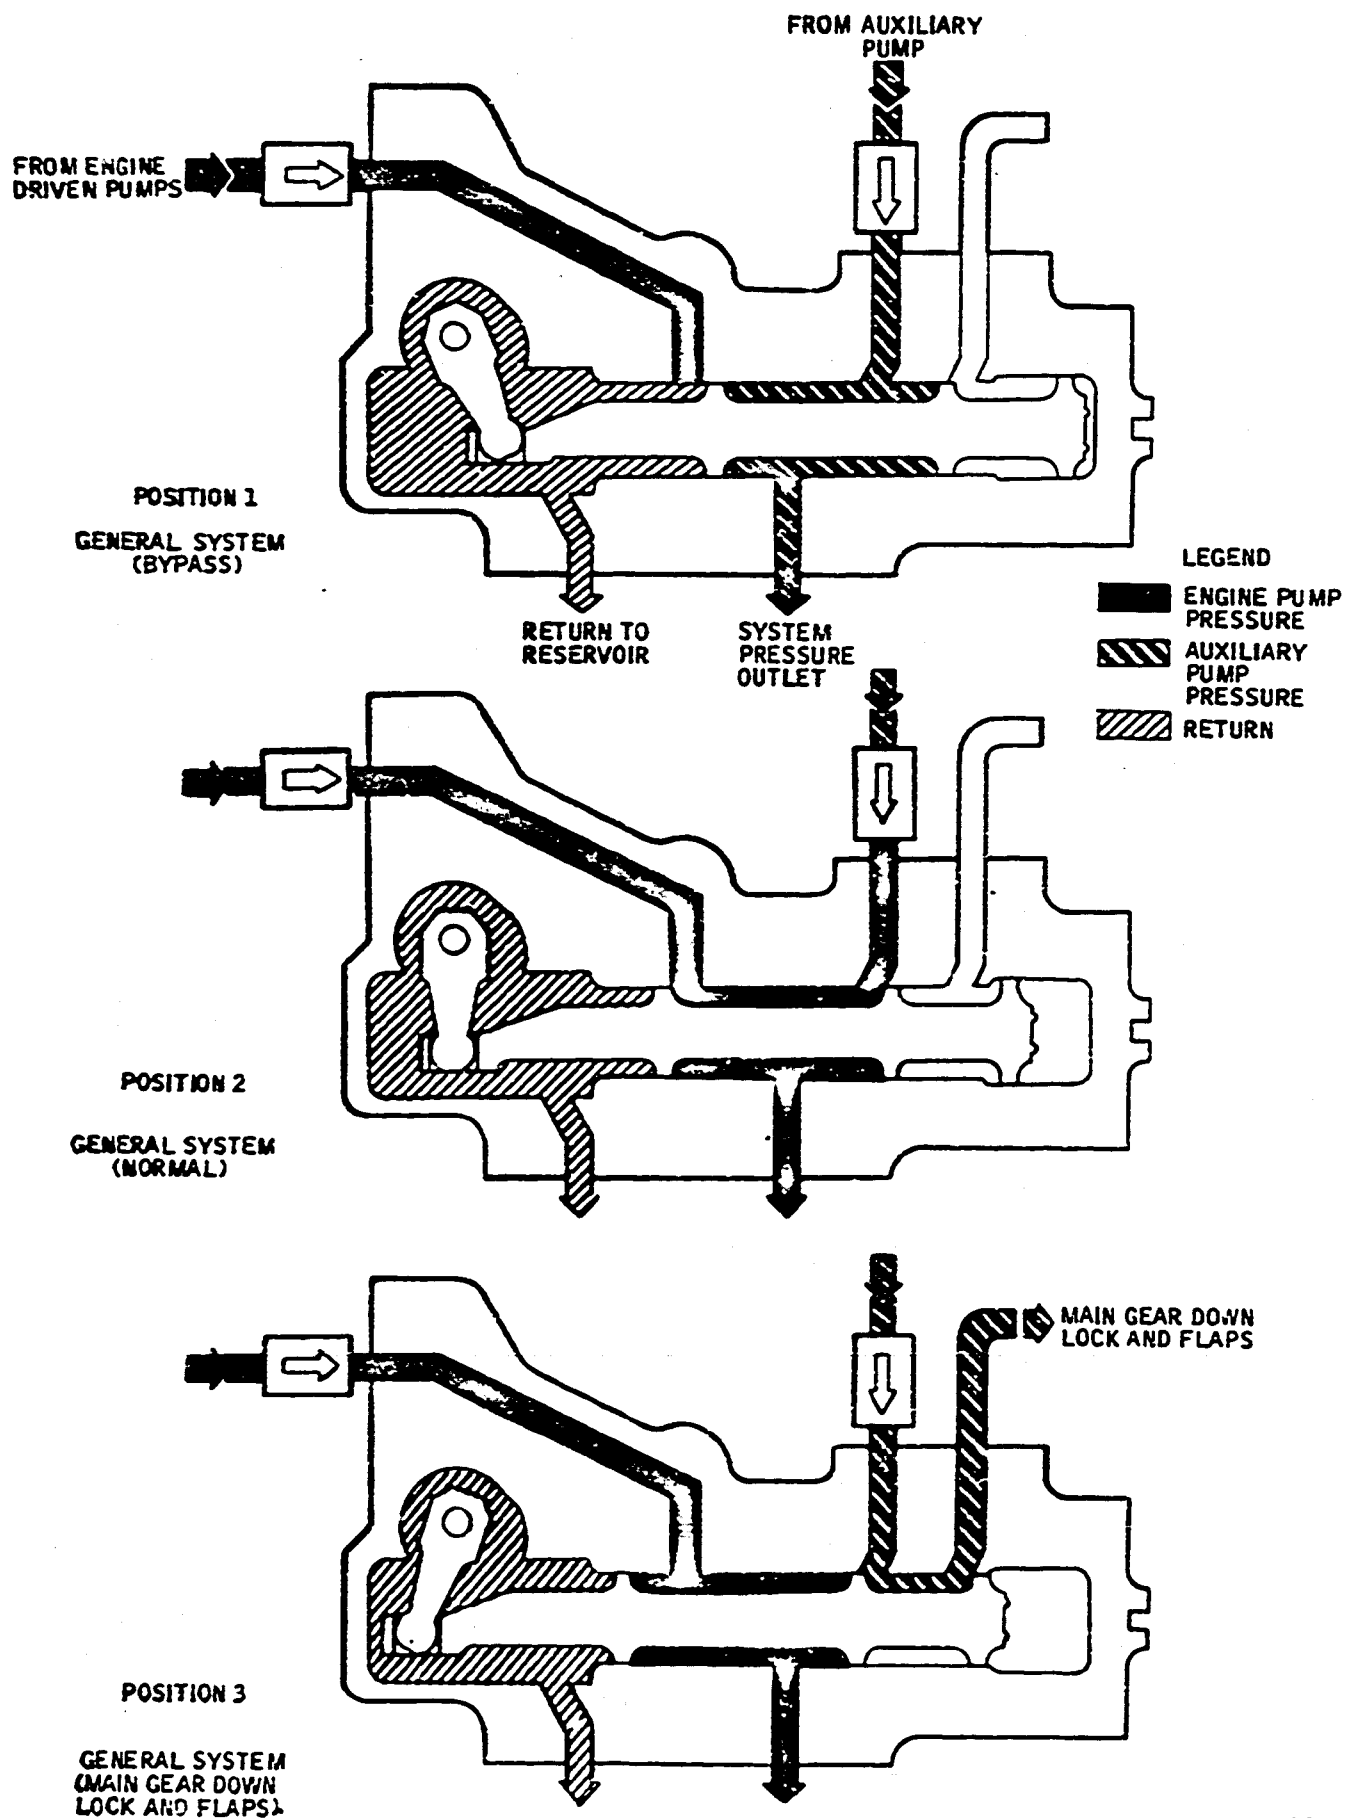

System Selector Valve -- Schematic  
 Figure 17

HA2-26

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

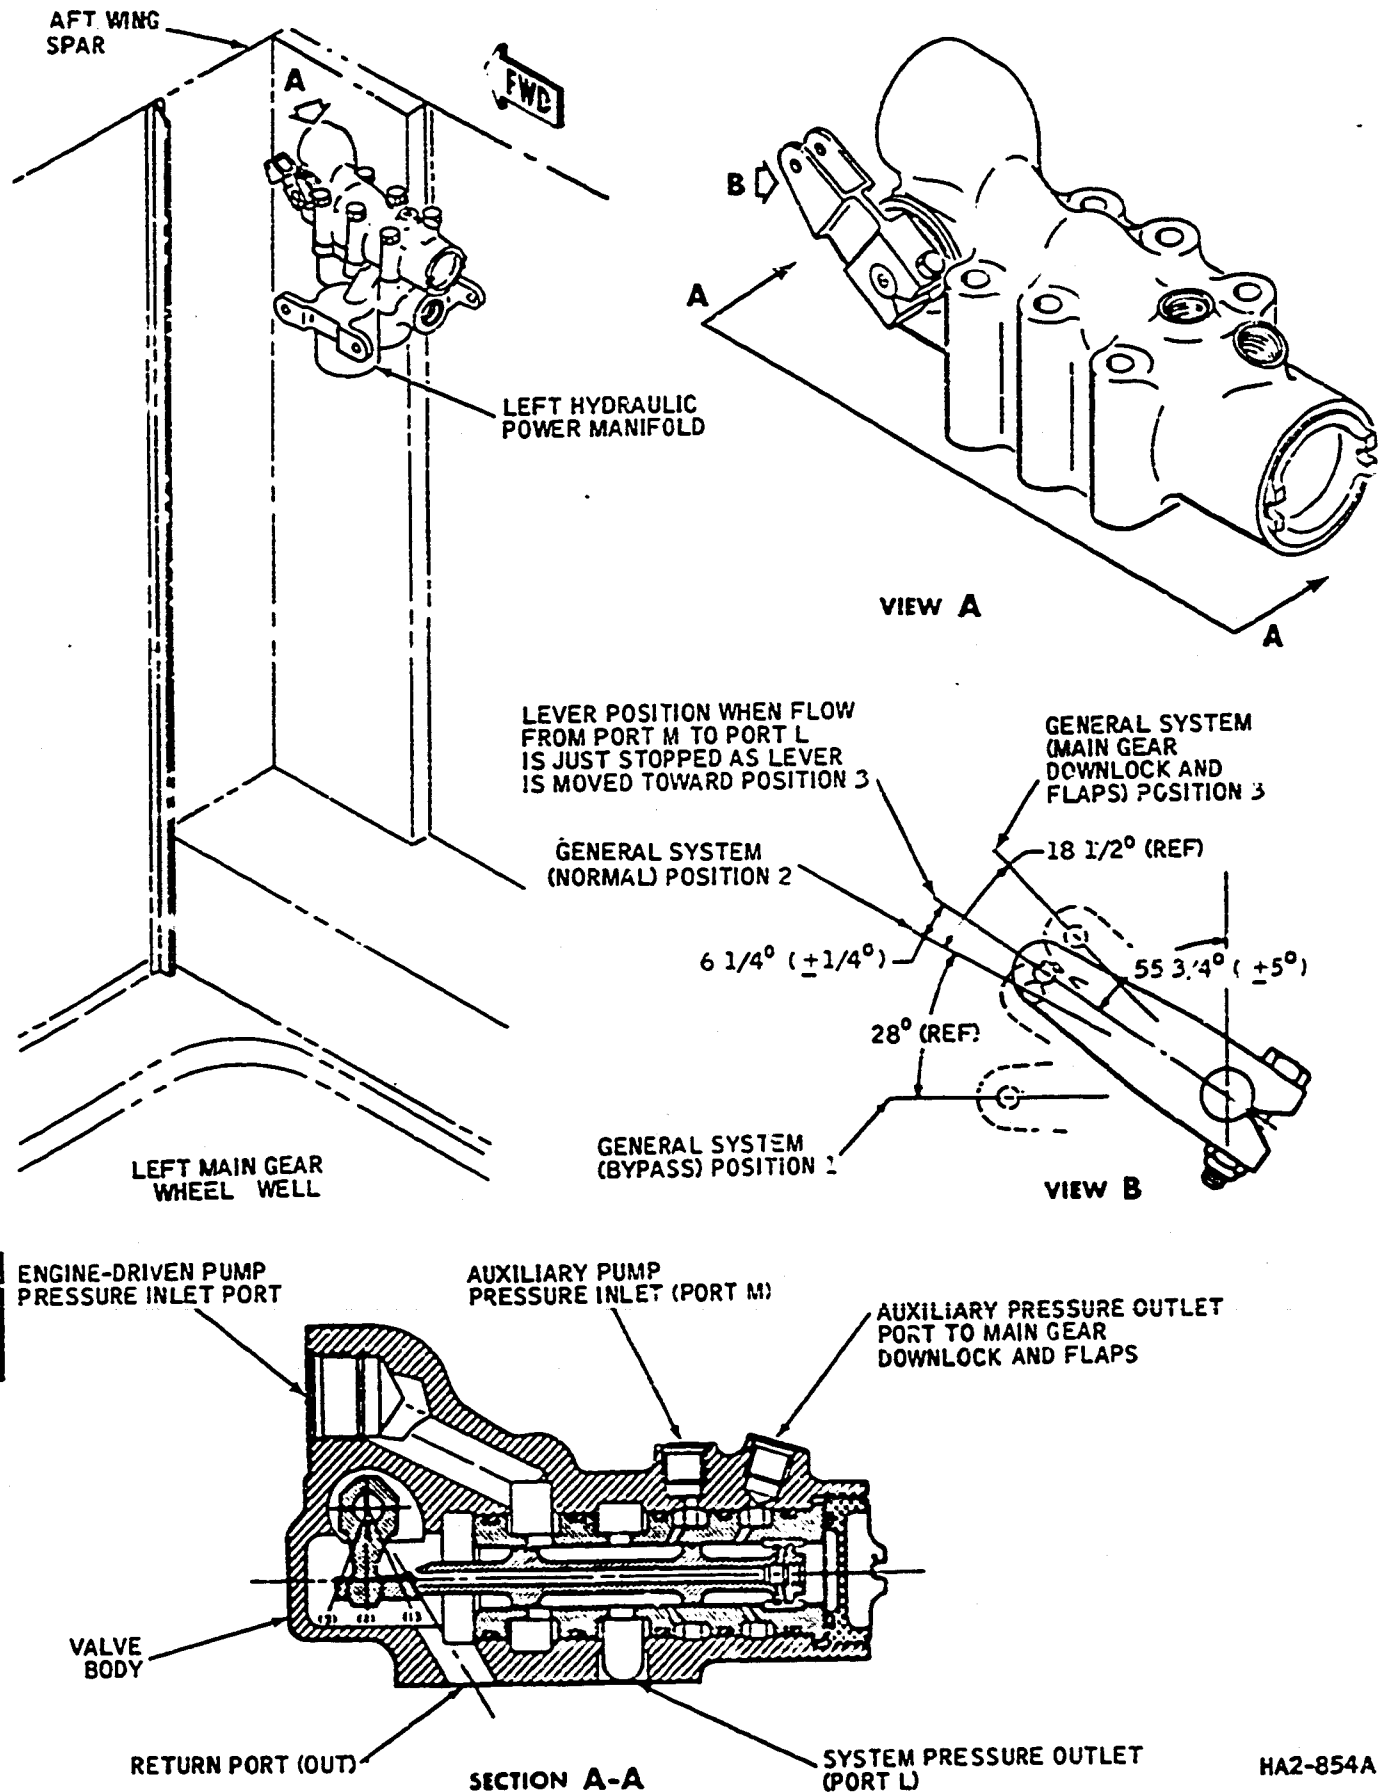

System Selector Valve -- Cutaway View  
 Figure 17

Nov 1/69

HA2-854A

29-10-0  
 CODE 15  
 Page 33

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

the manifold through the return port. In this position, the auxiliary pump pressure is ported to the general system. In the general system/main gear down and flaps position, pump pressure is routed through the alternate port, at the top of the valve, for alternate operation of the flaps and the landing gear downlock cylinders. Internal leakage provides lubrication for the moving parts of the valve.




P. Left Hydraulic Power Manifold (See Figure 19.)

- (1) The left hydraulic power manifold distributes fluid pressure from the hydraulic pump (any one of the three pumps), through control valves to the various airplane hydraulic subsystems. The left power manifold is located overhead in the left wheel well. Access to the left manifold is through the left main gear inboard door.
- (2) One valve-mounting pad is provided on the top of the manifold for the system selector valve. Four ports are provided on the manifold for connection of hydraulic pressure and return lines. Three of these ports are pressure outlet ports; one, located on the aft face of the manifold and one located on the bottom of the manifold port fluid to the flight controls. The third pressure outlet port, located on the bottom of the manifold, ports fluid directly to the priority valve, which in turn, ports fluid to the nose gear and to the right power manifold. The fourth, a return port, located immediately forward of the pressure line port on the bottom of the manifold, is connected by a line to a return port of the reservoir.

Q. Right Hydraulic Power Manifold (See Figure 20.)

- (1) The right hydraulic power manifold distributes fluid pressure from the hydraulic pumps (engine-driven or auxiliary, or any combination of these three pumps), through the control valves to the various hydraulic subsystems. The right hydraulic power manifold is located overhead in the right wheel well. The manifold is held in place with braces and is accessible through the right main gear inboard door.
- (2) The manifold contains passages for pressure and return fluid distribution, four check valves, ports for pressures and return lines, and mounting pads for the various control valves.
- (3) The right manifold receives fluid pressure from the left manifold. Pressure is ported through check valves to the wing flap control valve, to the slot control valve, to the main gear control valve, to the brake control valve, to the brake pressure transmitter, and to the brake accumulators.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

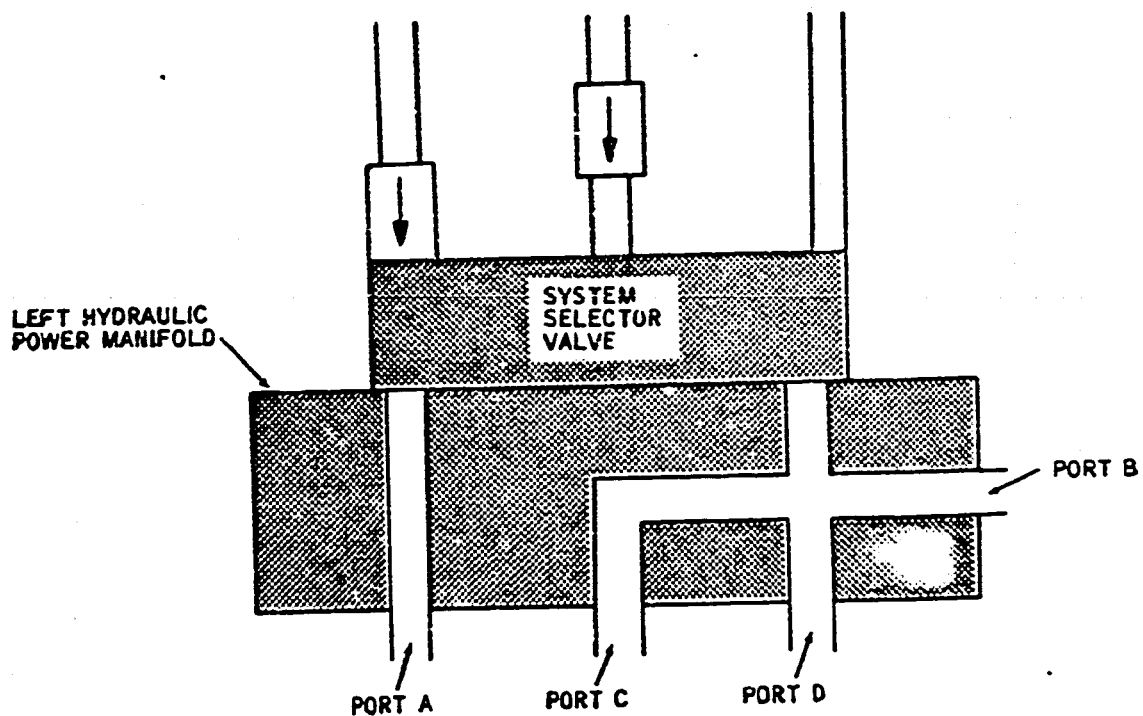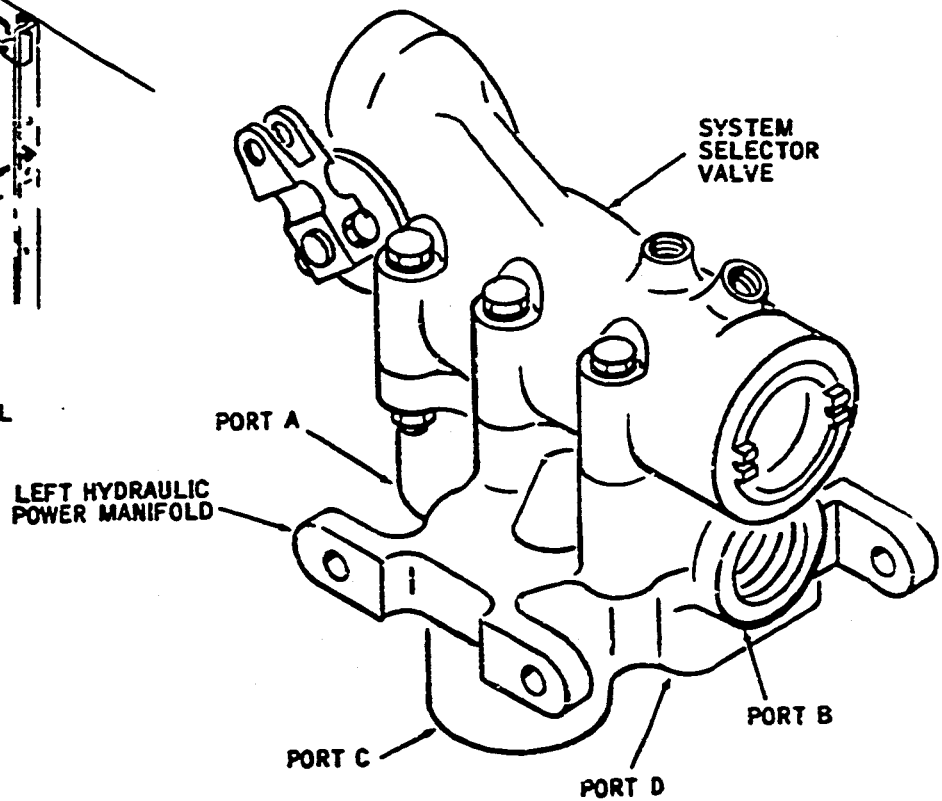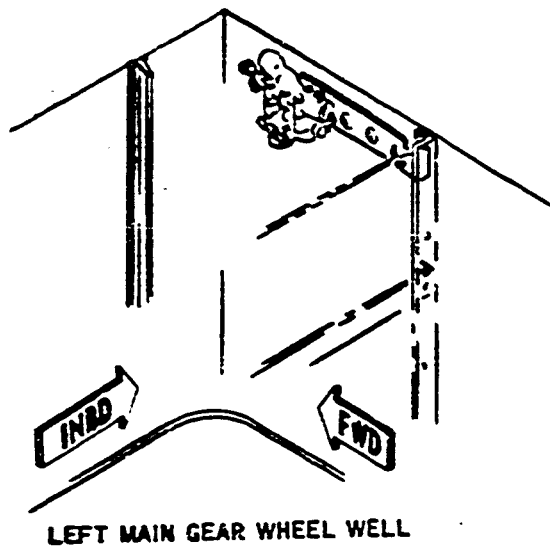

Left Hydraulic Power Manifold -- Schematic  
 Figure 18


HA2-855

Feb 1/69


Printed in U.S.A.

29-10-0  
 CODE 15  
 Page 35


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

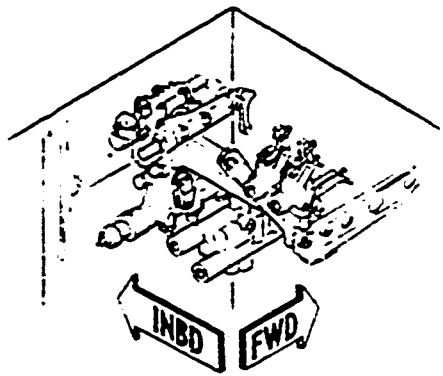

RIGHT MAIN GEAR  
WHEEL WELL

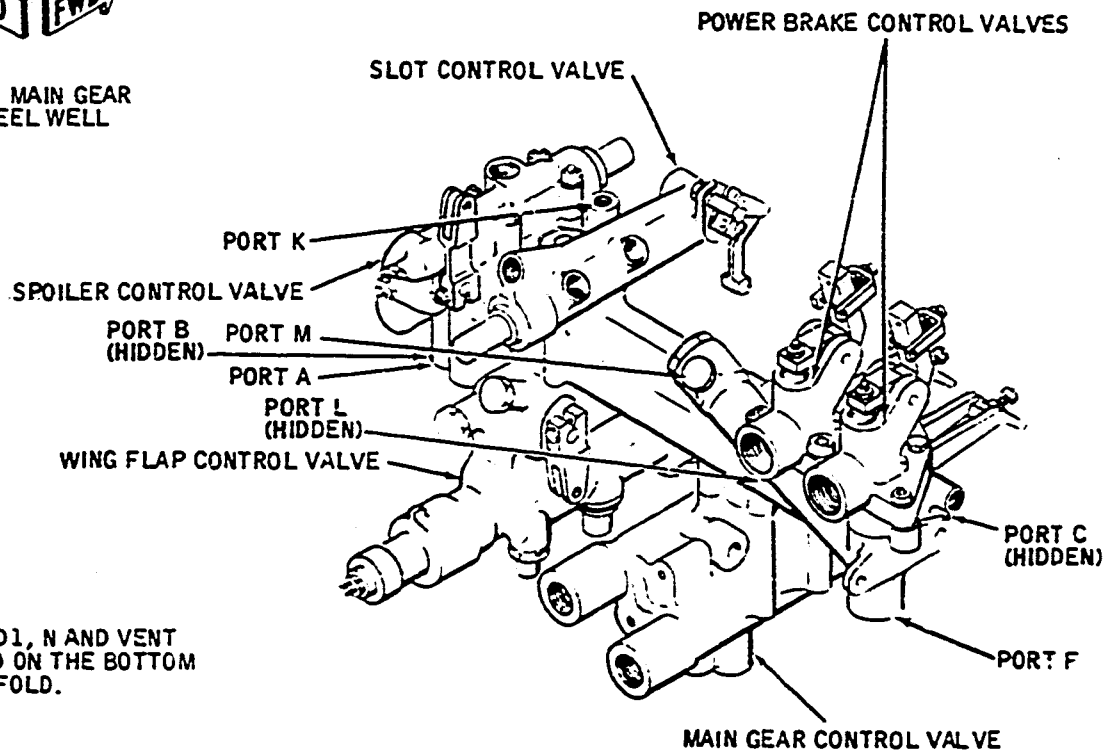

NOTE: PORTS B, C, D<sub>1</sub>, N AND VENT  
ARE LOCATED ON THE BOTTOM  
OF THE MANIFOLD.

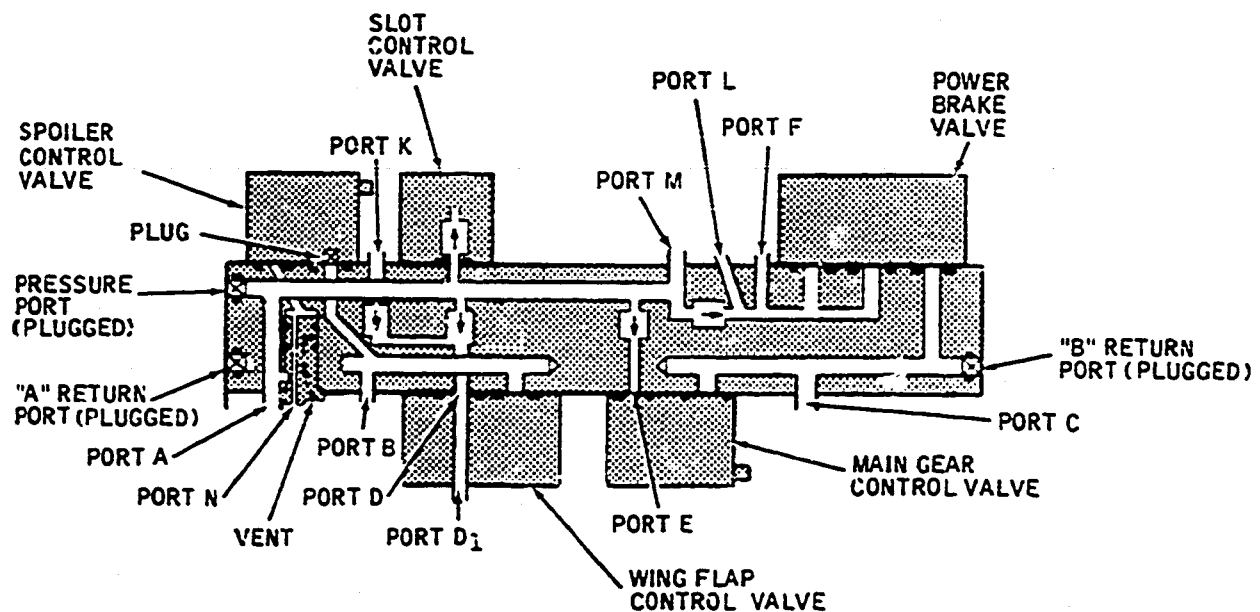

HA2-29A

Right Hydraulic Power Manifold -- Schematic  
 Figure 20

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (4) Auxiliary hydraulic pressure is ported from the alternate port of the system selector control valve into port K in the right manifold. Port K is located inboard of the spoiler control valve. From port K, auxiliary hydraulic pressure is ported through a check valve to the downstream side of the wing flap control valve check valve and into the wing flap control valve for alternate operation of the wing flaps.
- (5) The return passage from the wing flap control valve ports fluid to return port A. The brake control valve return passage ports fluid into return line B through a two-way restrictor. The main gear control valve downline return fluid uses a separate port in the valve, bypasses the manifold, and returns the fluid directly to A return line to the reservoir. The upline in the main gear control valve uses the same return port, return port B, in the manifold as the brake control valve.

R. Deleted.

S. Hydraulic Power System Accumulator (See Figure 21.)

- (1) The hydraulic power system accumulator is a spherical, welded-steel, fluid and air bladder-separated container. The accumulator is installed in the pressure line of the hydraulic power system to provide a reserve supply of fluid under pneumatic pressure and to act as a shock absorber for system pressure surges.
- (2) The accumulator is located immediately aft of the left hydraulic power manifold and is accessible through the left main gear inboard door. It is mounted with two corner brackets and clamp blocks at the upper and lower port fittings.
- (3) The accumulator is installed in the pressure line of the hydraulic power system and is initially charged with 1000 psi of dry nitrogen. As the system pressure builds up, fluid is forced into the upper chamber of the accumulator, further compressing the trapped nitrogen to approximately 3000 psi. With full hydraulic system pressure, 3000 psi is indicated on the pressure gage adjacent to the filler valve. This reserve pressure smooths out any momentary lag in the pump's response to the system's demand for greater fluid flows. The accumulator permits a gradual rise in system pressure, thereby absorbing the shock of pump surges and relieving the piping and system operating units of high-impact loads. When the engine-driven hydraulic pumps are not operating, the accumulator provides system pressure (at a diminishing rate) until a quantity equal to the stored volume in the accumulator has been used by the system.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

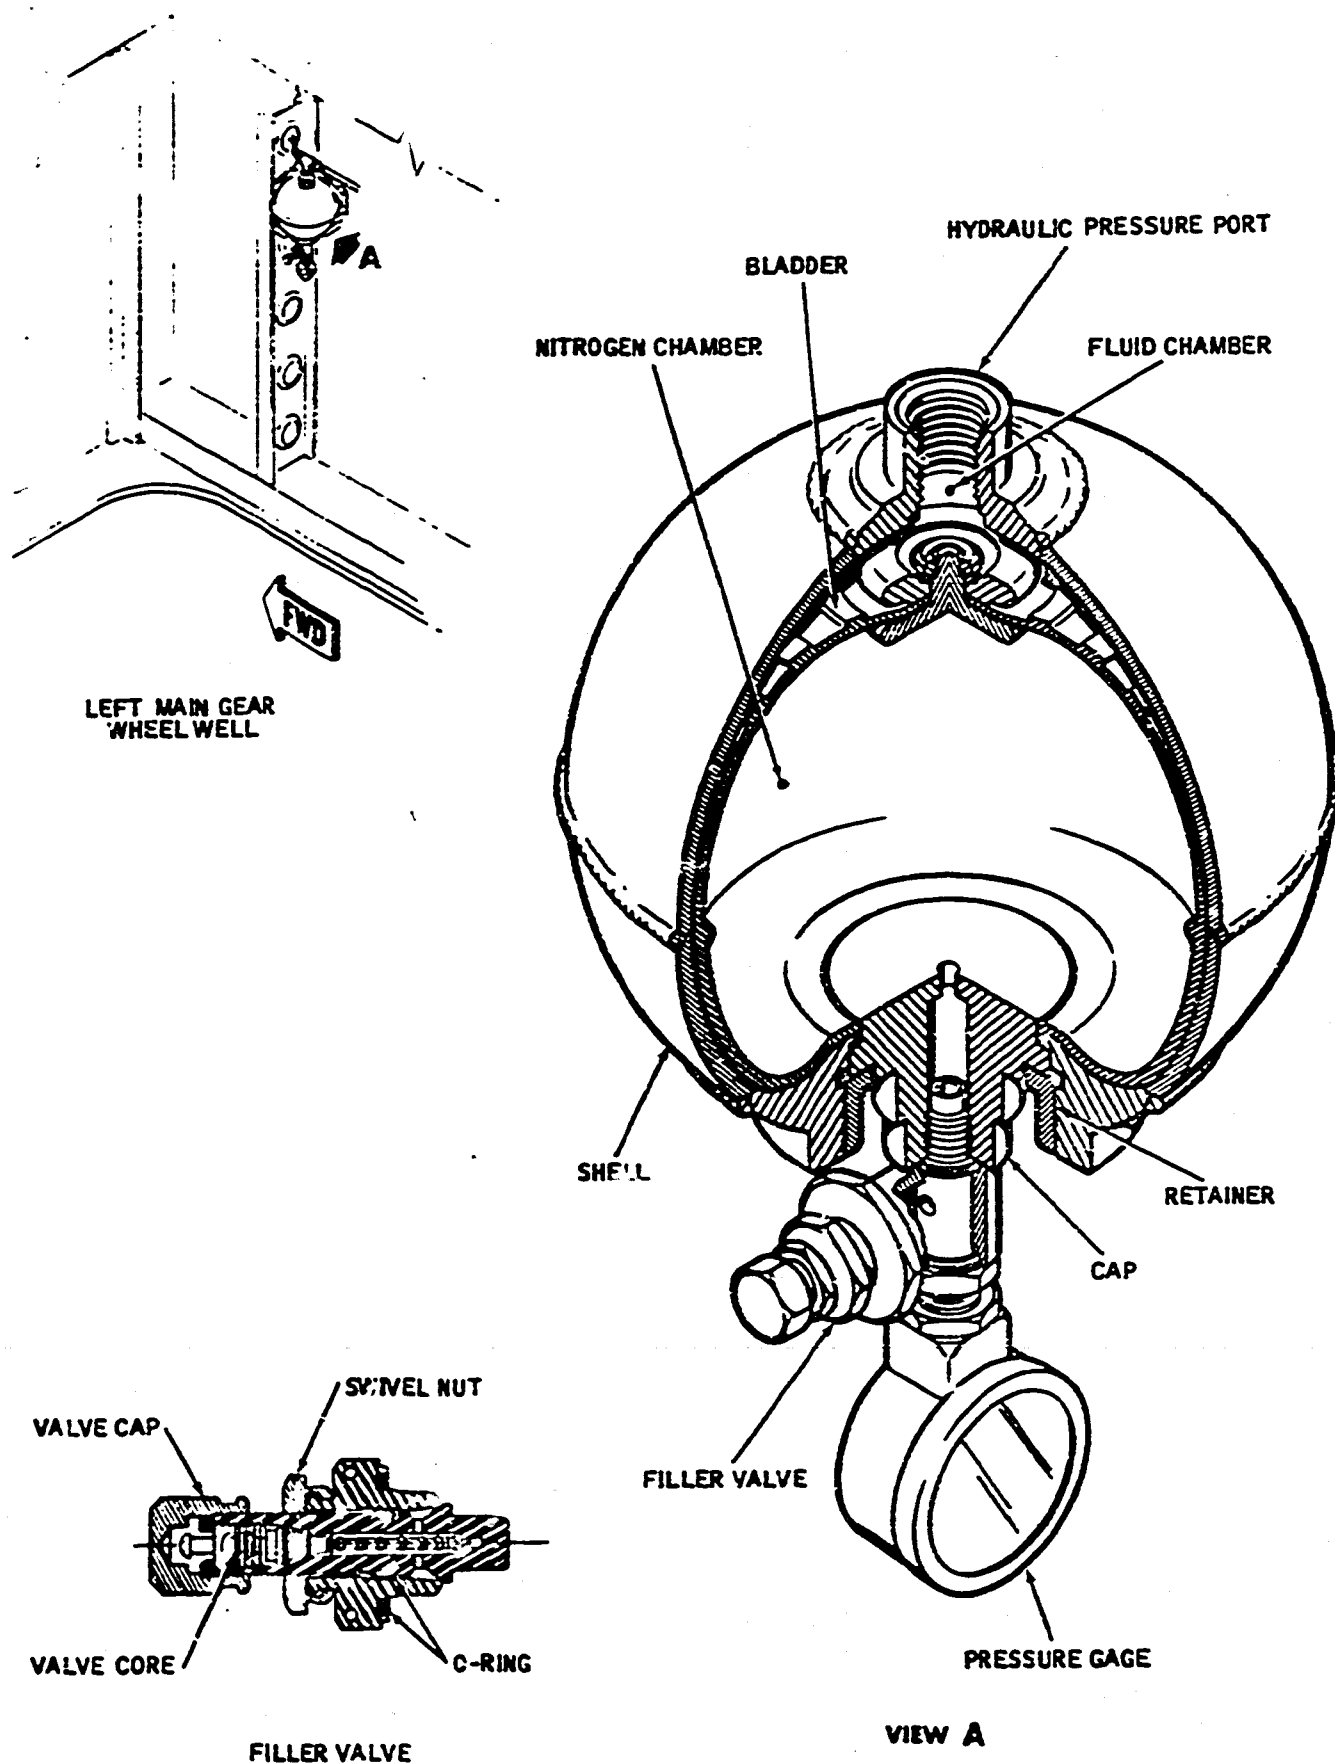

Hydraulic Power System Accumulator -- Cutaway View  
 Figure 21

HA2-30



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

T. Hydraulic System Priority Valve (See Figure 22.)

- (1) The priority valve is located in the left wheel well near the left hydraulic power manifold. The valve is installed in the hydraulic pressure line, between the two power manifolds, downstream of the pressure supply takeoff port for the flight controls. The priority valve is a balanced relief valve which reserves initial hydraulic pressure (up to 2150 psi maximum) for use in the flight control systems. The valve consists of a body with an inlet, an outlet, and a breather port. Internally, the valve contains a poppet valve plate, a poppet, a poppet valve load-spring, a piston, a piston load spring, and a piston load-spring housing. The piston load-spring housing chamber is vented to ambient air through a breather hole which is covered by a butyl rubber band.
- (2) The priority valve shuts off hydraulic pressure to all subsystems downstream of the left power manifold, whenever the hydraulic pressure drops below 1700 psi minimum. At this point, the valve closes to reserve the hydraulic pressure for use in the flight control systems, preventing them from reverting to manual operation. When the hydraulic pressure rises to 2150 psi maximum, the priority valve opens and supplies pressure to the right manifold and all subsystems downstream of the priority valve.
- (3) Hydraulic fluid from the left power manifold enters the priority valve through the inlet port, passes through the poppet valve plate holes, and applies pressure against the piston. When sufficient hydraulic pressure is applied to the piston, the piston load-spring compresses, unseating the poppet and permitting full flow through the valve. When the hydraulic pressure decreases to less than the opposing force value of the piston load-spring, the load-spring forces the piston against the poppet and shuts off fluid flow through the valve.
- (4) The maximum flow available from both engine-driven hydraulic pumps is: 44 to 45 gpm at takeoff, climb, and cruise configurations; 26 to 28 gpm at descent, approach, and engine idle configurations.
- (5) Some of the larger hydraulic system demands are as follows:
  - (a) Gear retraction -- 17 gpm (10 - 12 seconds)
  - (b) Gear extension -- 14 gpm (10 - 12 seconds)
  - (c) Wing flaps down -- 8 gpm (10 seconds)
  - (d) Wing flaps up -- 3 gpm (22 seconds)
  - (e) Horizontal stabilizer -- 7 gpm
  - (f) Ailerons -- 17 gpm (25°/second)
  - (g) Rudder -- 3 gpm (25°/second)



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

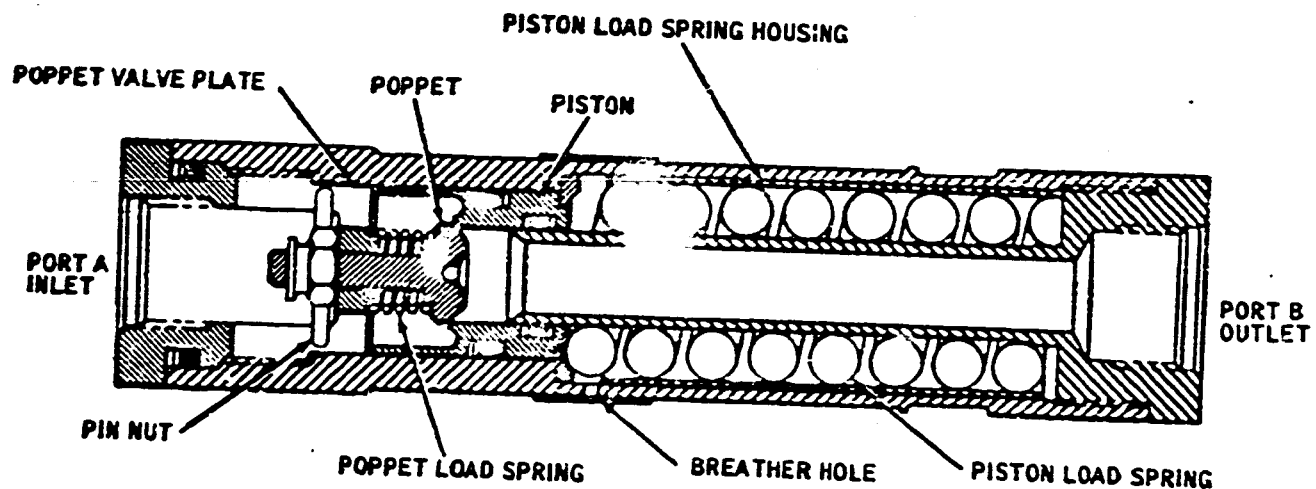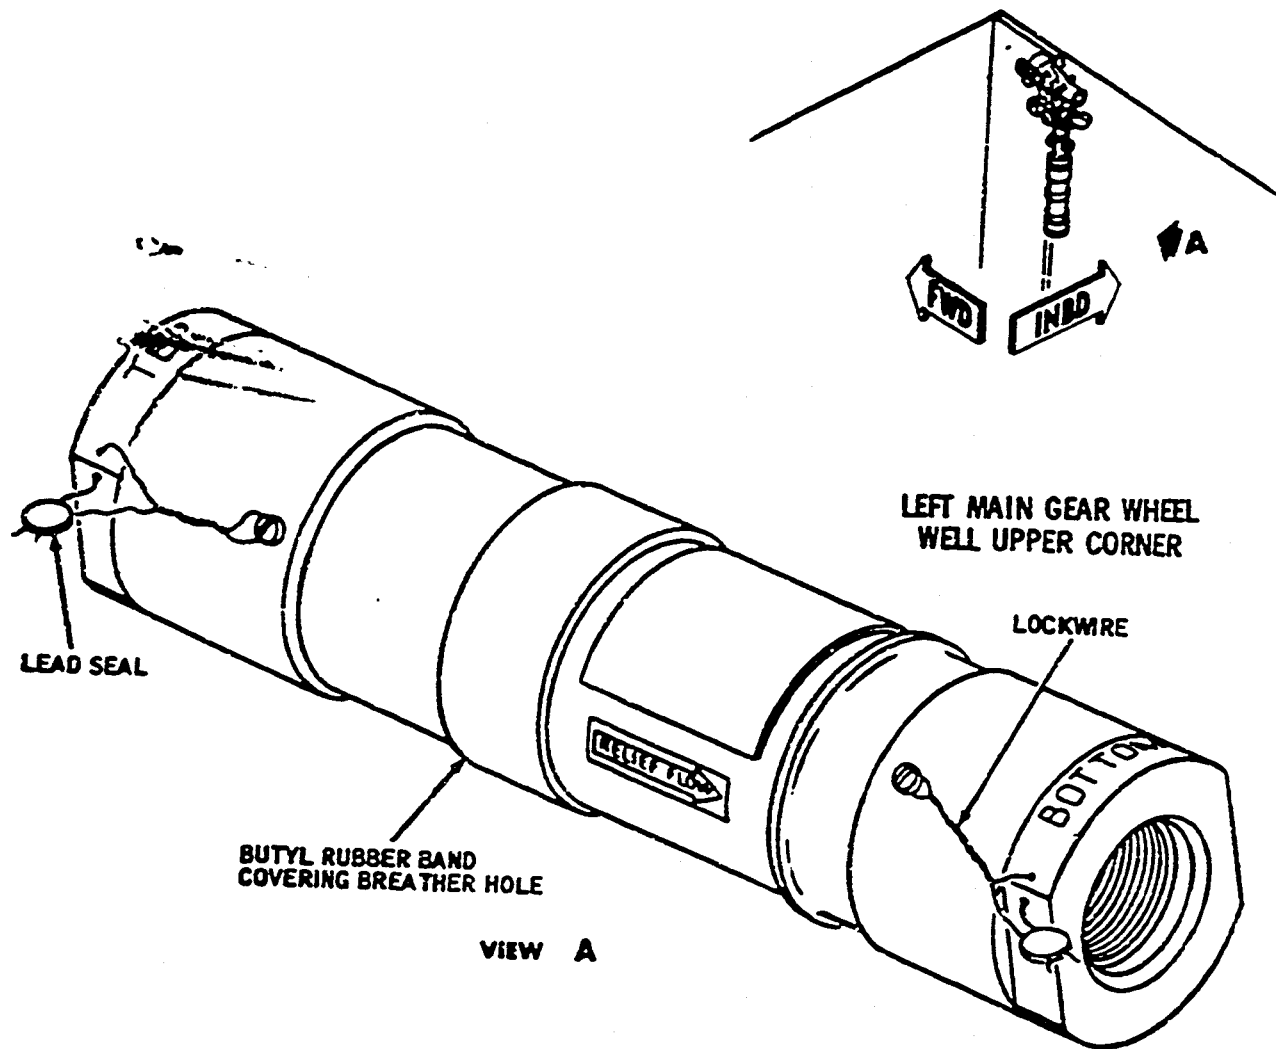

Hydraulic System Priority Valve -- Cutaway View  
 Figure 21

HA2-856

29-10-0  
 CODE 15  
 Page 40

Printed in USA

Feb 1/69

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) There are various combinations of hydraulic system operations which could cause momentary reversion of the flight controls to manual operation. To prevent reversion to manual operation, the priority valve assures that the left power manifold receives all the hydraulic fluid pressure under conditions of very large flow demands.

U. Hydraulic System Selector Control Lever

- (1) The hydraulic system selector control lever is a manually actuated, mechanical lever ~~detented~~ to three positions. The lever provides a mechanical means, ~~through~~ cables, for positioning the system selector valve and the auxiliary hydraulic pump supply selector valve. The hydraulic system selector control lever is located on the system engineer's control pedestal. The lever is attached to a drive sector, located on a common shaft with the other control pedestal sectors. The lever and sector are accessible through the cover plates on the system engineer's pedestal.
- (2) To put the hydraulic power system in the bypass condition, the system selector control lever is lifted out of detent and moved to bypass/general system position. At the same time, the cable moves the sector and pushrod of the system selector valve to the No. 1 position. The pushrod positions the system selector valve to the No. 1 bypass position. At the same time, the cables from the system selector valve sector move the auxiliary pump supply selector valve sector to No. 1 (auxiliary) position. The auxiliary pump supply selector valve remains in the auxiliary supply position through the idle feature of the sector rigging. In this condition, the engine-driven pump pressure is ported to the reservoir and the auxiliary pump supplies pressure to the general system. In this position, the fluid is supplied to the auxiliary pump from the low standpipe in the hydraulic system reservoir. To put the system into the alternate condition, the selector control lever is lifted out of detent and moved to the general system/main gear downlock and flaps position. The cables move the system selector valve sector to the No. 3 (alternate) position. The system selector valve sector moves the cables rotating the auxiliary pump supply selector valve sector to the No. 3 (alternate) position. As the sector rotates, the end of the arm moves away from the idle position. This positions the valves to the alternate position, supplying fluid to the auxiliary pump from the auxiliary pump alternate reservoir. In this position, fluid from the auxiliary pump is ported to the wing flap control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported to the general system.

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 15  
Page 41

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - DESCRIPTION AND OPERATION

1. General

A. Description (See Figures 1 and 2.)

- (1) The hydraulic power system receives fluid pressure from the engine-driven hydraulic pumps, one installed on each inboard engine. The electrically driven auxiliary pump is used to supplement the engine-driven pumps, or to independently supply the system with fluid pressure.
- (2) The hydraulic system reservoir, located in the left wing root, has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir is used for fluid, and 1/10 is used for foam space. A separate air chamber is installed in the reservoir system to provide for a greater fluid capacity in the main reservoir. A reservoir filler assembly is installed in the piping between the reservoir and the air chamber and has a vent line from the filler neck to the tee at the top of the reservoir sight gage. The reservoir is pressurized to 30 to 35 psi by bleed pressure from the engine-driven pumps through an air pressure regulator-aspirator.
- (3) The engine-driven pumps receive fluid from the pressurized main reservoir through respective engine hydraulic fire shutoff valves. The engine hydraulic fire shutoff valves are normally open and can be mechanically controlled from the flight compartment. The pumps supply fluid pressure through respective check valves to the dual filter and relief valve. Some of the fluid from the filter is ported through the regulator-aspirator to pressurize the reservoir. Most of the fluid is routed through a check valve to the system selector valve, and then to the left and right hydraulic power manifolds. The manifolds distribute the fluid pressure to the subsystems.
- (4) Hydraulic fluid is normally supplied to the auxiliary hydraulic pump from a low standpipe in the main reservoir. During alternate operation, the auxiliary hydraulic pump receives fluid supply from the auxiliary pump alternate reservoir, which is located just aft of the auxiliary pump. From these reservoirs, the fluid is ported through the auxiliary pump selector valve which is mechanically controlled from the flight compartment by the system selector control lever. When operating, the auxiliary hydraulic pump supplies fluid pressure to the subsystems through the system selector valve which is also controlled by the system selector control lever in the flight compartment. A filter and check valve are installed in the line from the auxiliary pump to the system selector valve.
- (5) An accumulator is installed in the pressure line to the subsystems to provide a reserve supply of fluid and to act as a surge damper for the system.

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 17  
Page 1


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Engine-driven pump fluid pressure is routed through the system selector valve to the left power manifold, where it is distributed to some of the subsystems and through the priority valve to the right power manifold. Fluid pressure from the right power manifold is distributed to the remaining subsystems.
- (7) The priority valve is a spring-loaded, poppet-type, balanced relief valve installed in the line downstream of the left power manifold. The priority valve's function in the system is to prevent the flight control systems from reverting to manual operation during high demands on the hydraulic system.
- (8) A fluid pressure transmitter, located in the nosewheel well, senses the system pressure, which is indicated on the hydraulic system pressure indicator in the flight compartment.

**B. Normal Operation**

- (1) Fluid is supplied to the hydraulic system from the pressurized hydraulic system reservoir. For operation of the hydraulic system under normal conditions, 8.1 US gallons (6.7 Imperial gallons; 30.6 liters) of hydraulic fluid are available to the engine-driven hydraulic pumps, and 12.9 US gallons (10.7 Imperial gallons; 48.8 liters) are available to the auxiliary hydraulic pump. Supply lines from the main reservoir carry fluid to each inboard pylon through normally open engine hydraulic fire shutoff valves to the engine-driven hydraulic pumps. Fluid is supplied to the auxiliary hydraulic pump from the main reservoir through a low standpipe at the base of the reservoir. Fluid is carried from the reservoir through the auxiliary pump selector valve to the auxiliary hydraulic pump.
- (2) The engine-driven hydraulic pumps supply full system pressure (3000 psi nominal) at any given engine speed, from idle to full power. The output flow of the pump is varied by sensing pressure from the outlet side of the pump. Each engine-driven pump contains a solenoid-operated bypass valve which, when energized, bypasses the pressure control regulator of the pump and ports fluid to the pump yoke control piston which feathers the pump. When the pump is feathered, flow rate is reduced to almost zero (1.0 gpm) and to a pressure of approximately 300 psi. Half of this flow maintains pump lubrication and cooling through internal leakage. This leakage is returned, through a check valve, the engine-driven pump case drain line filter, and another check valve to the case drain return port of the reservoir. The pressure fluid from each pump passes through a check valve to the dual filter and relief valve.
- (3) The fluid enters the dual filter and relief valve through the relief valve chamber. The fluid is passed through the filter element, through a manifold, and through a common outlet port. Fluid from the outlet port is routed through a check valve to the system selector valve. If back pressure in the system builds up to approximately 3300 psi, the relief valves in the dual filter and relief valve open and port fluid back to

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

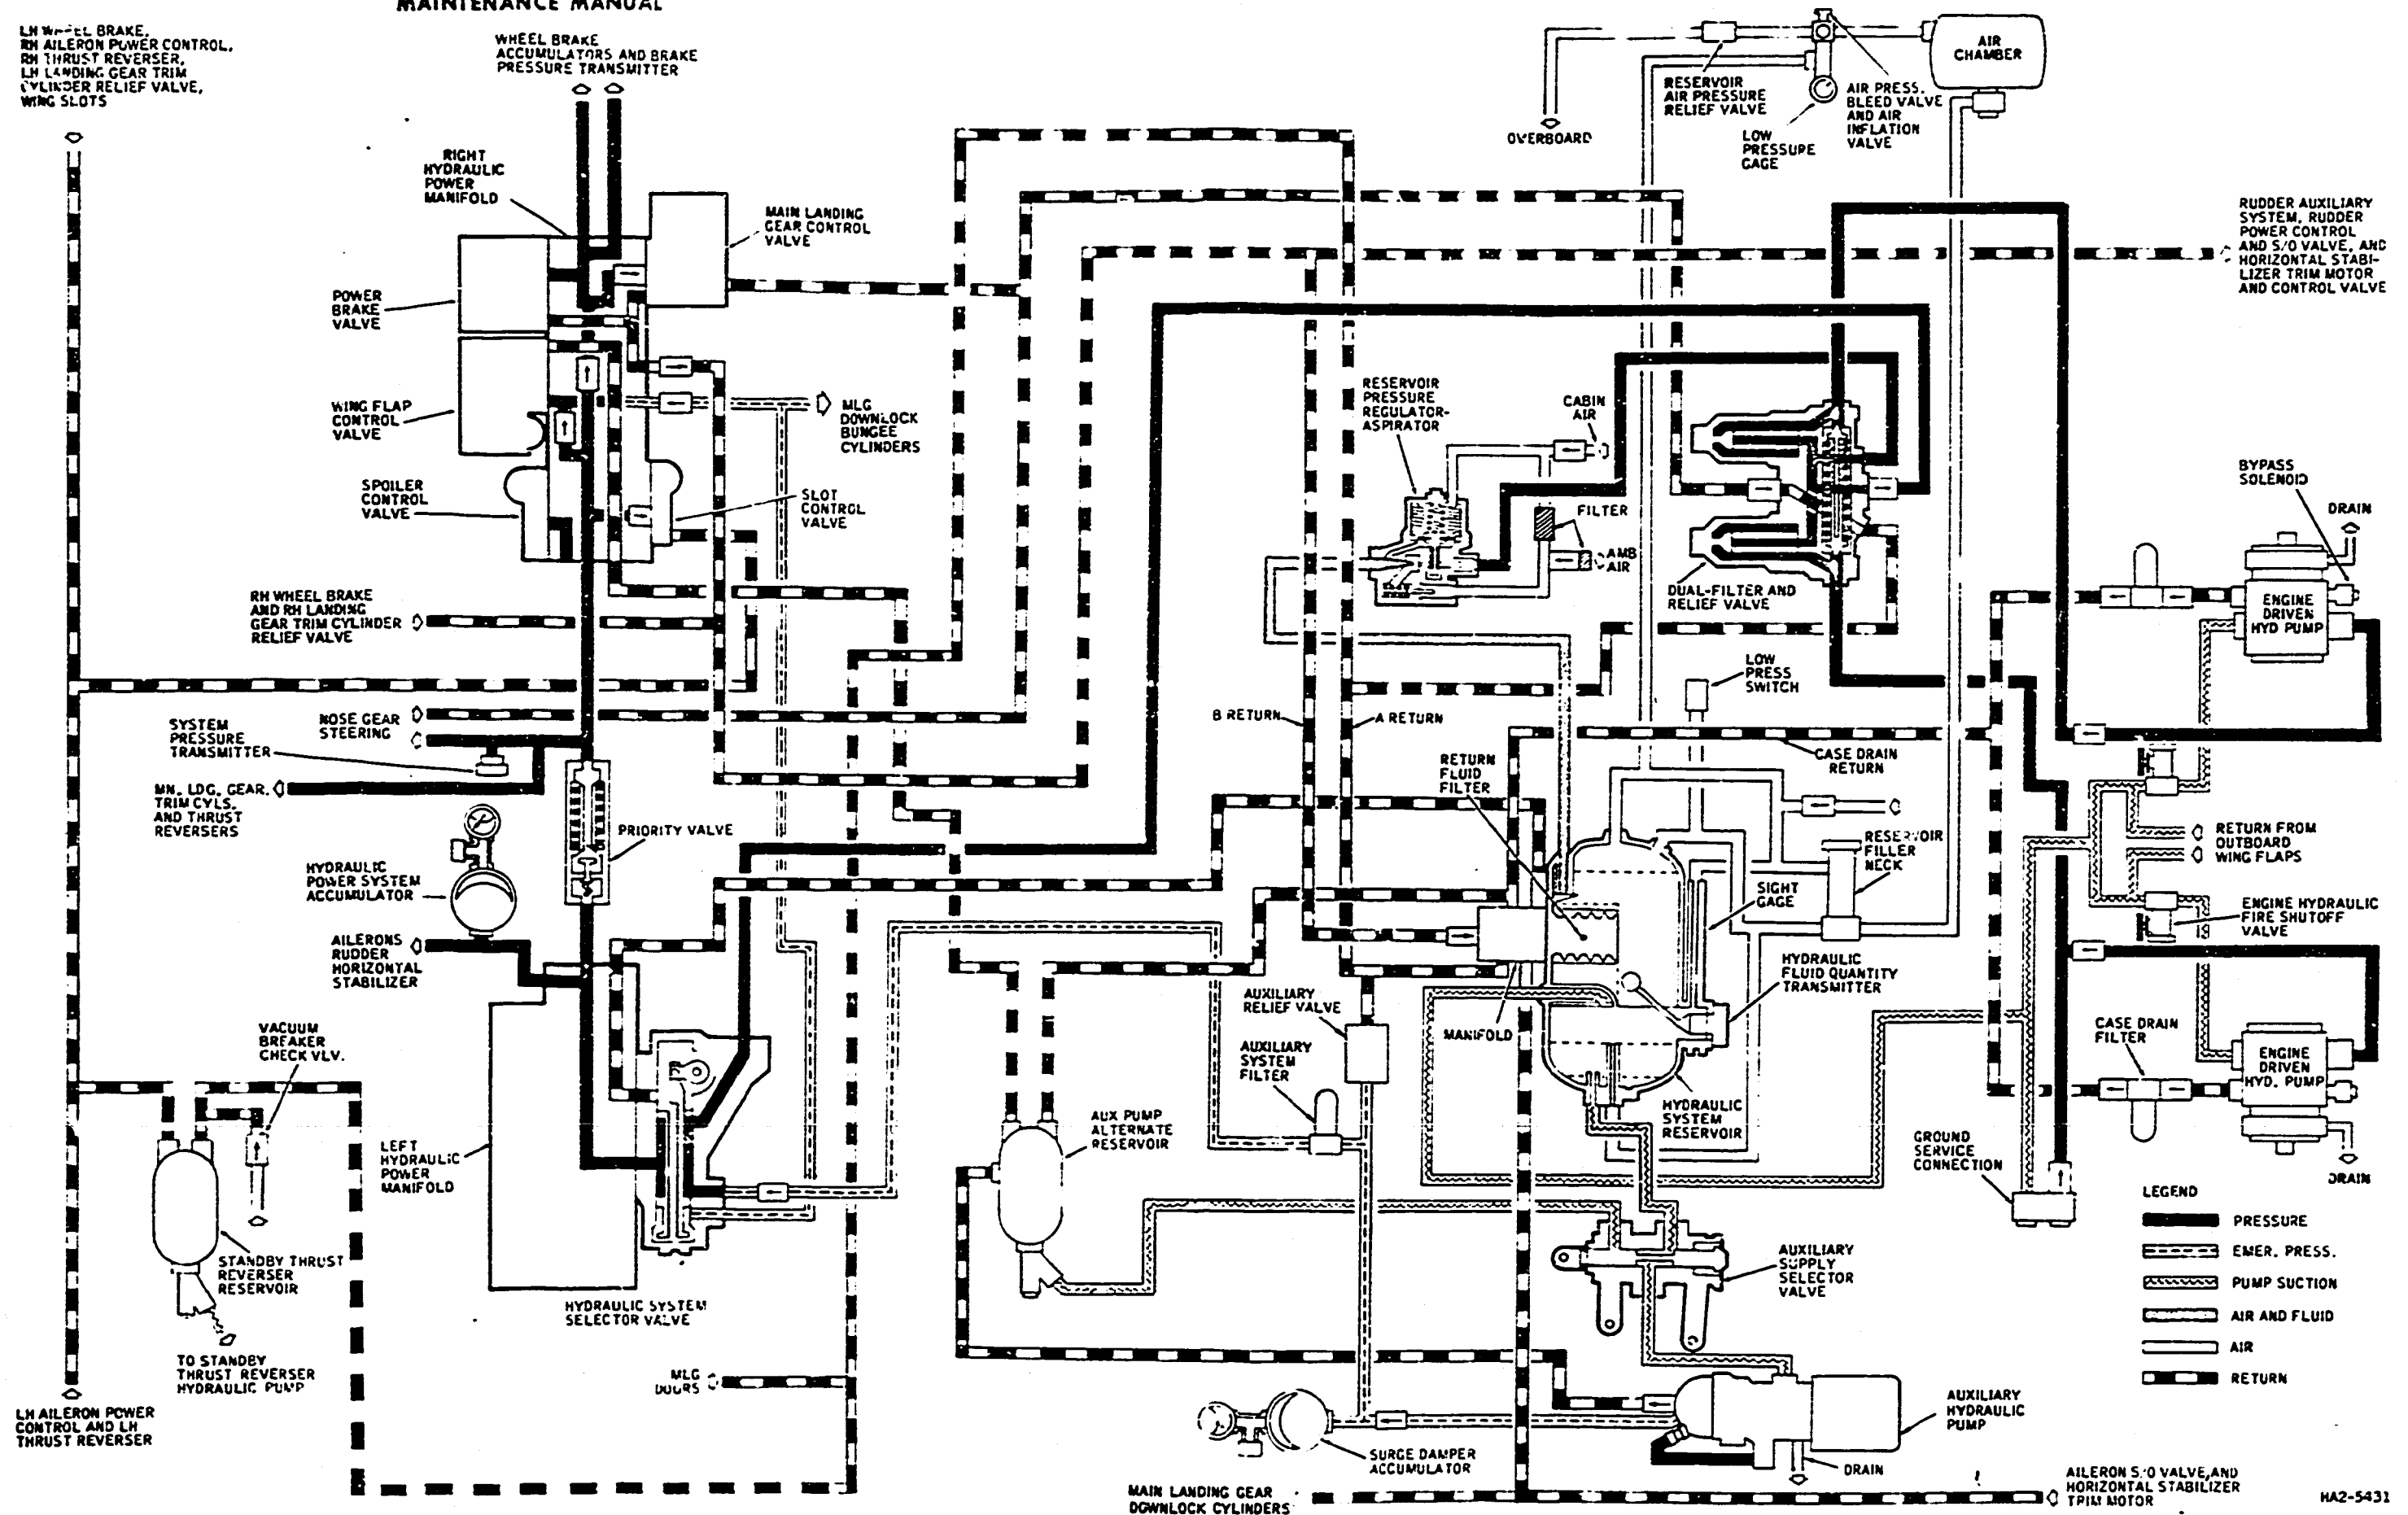

Hydraulic Power System -- Schematic Diagram  
 Figure 1


Aug 1/68

29-10-0  
 CODE 17  
 Page 3

Printed in U.S.A.

HA2-5431

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

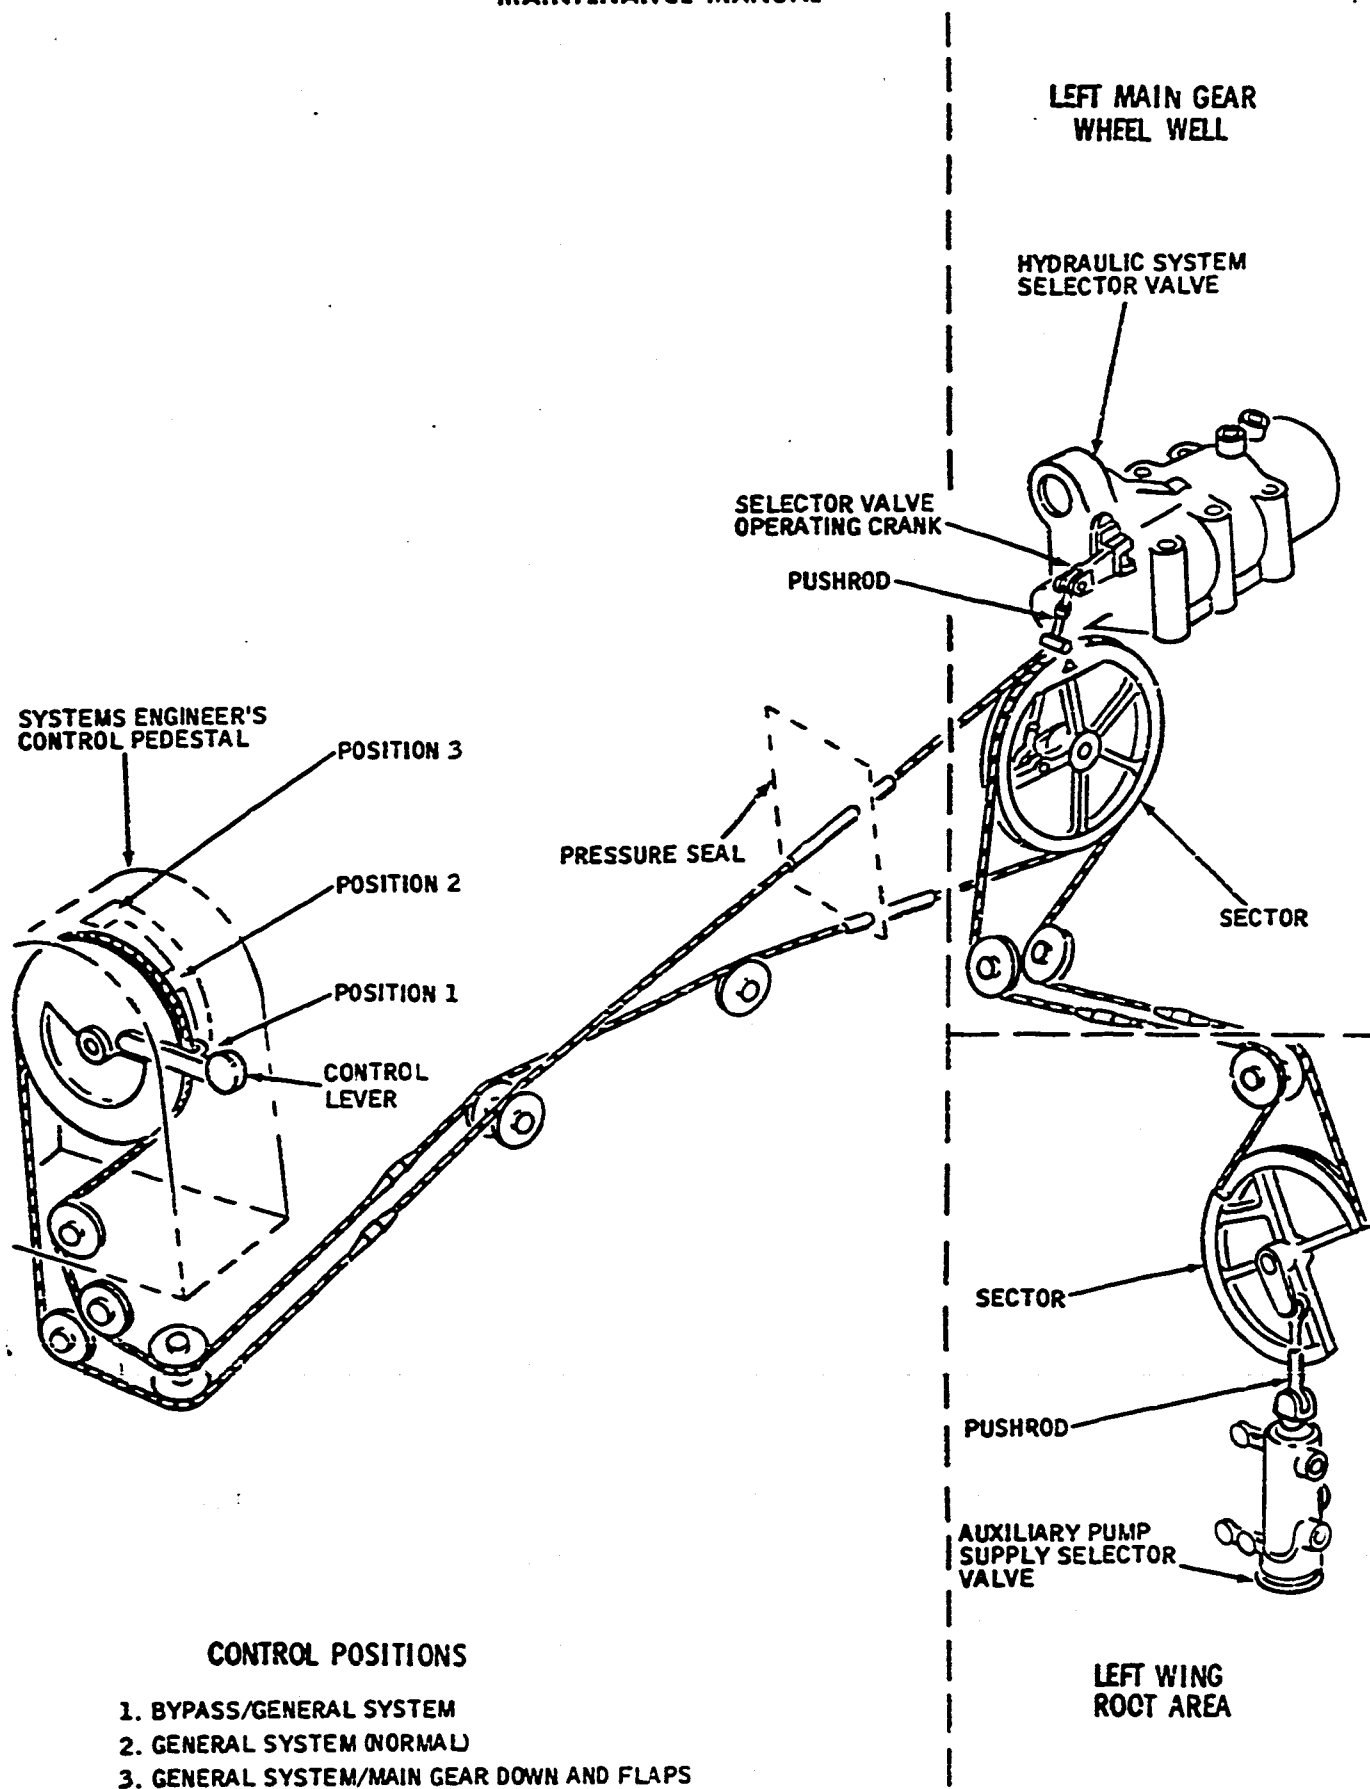

Hydraulic System Selector and Auxiliary Pump Supply  
 Selector Valves -- Mechanical Control Schematic  
 Figure 2

HA2-486

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 17  
 Page 5

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

the reservoir via the A return port. The relief valve poppet closes again when system pressure drops to approximately 3000 psi.

- (4) The aspirator receives filtered fluid (bleed pressure at normal 3000 psi) from the dual filter and relief valve. The aspirator operates on the jet pump principle. Hydraulic fluid is atomized and mixed with air within the unit by a nozzle and a venturi. The mixture is used to pressurize the reservoir and reservoir air chamber. The regulator diaphragm maintains a pressure range of 30 to 35 psi in the reservoir and air chamber. If there is a regulator malfunction, the aspirator stalls when the outlet pressure reaches a maximum of 40 psi. A reservoir relief valve in the reservoir vent line relieves thermal expansion pressure above 45 (+5, -0) psi.
- (5) Pump pressure fluid enters the system selector valve through the system pressure inlet port. When the pump selector control lever is in the general system (normal) position, fluid is ported to the pressure passages of the left power manifold. The fluid pressure in the left power manifold is ported through the priority valve to the nose gear and the right power manifold and directly to the following valves:
  - (a) Aileron power shutoff
  - (b) Rudder power shutoff
  - (c) Longitudinal trim hydraulic motor shutoff.
- (6) The right power manifold distributes fluid pressure to the brake accumulators, the pressure transmitter, and the following control valves:
  - (a) Wing flap
  - (b) Slot
  - (c) Main gear
  - (d) Power brake
- (7) The return fluid from the wing flap control valve is ported through the right power manifold and into the auxiliary hydraulic pump alternate reservoir. Return fluid from the outboard wing flaps is piped into the suction lines for each engine-driven hydraulic pump. Return fluid from the slot control valve is ported into the A return line to the main reservoir. The power brake and main gear control valve gear up return fluid is ported through a restrictor check valve into the B return line to the reservoir. The main gear control valve gear down return pressure bypasses the right manifold and returns to the reservoir through the A return line. All return fluid entering the reservoir is filtered through the return ports filter located within the reservoir.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

C. Bypass Operation

- (1) The output of the engine-driven hydraulic pumps is bypassed by moving the system selector control lever out of the general system (normal) position to the bypass/general system position.
- (2) The system selector valve in the bypass position ports engine-driven pump pressure from the dual filter and relief valve directly to the return passage of the left power manifold. From the manifold, the fluid is ported directly to a tee in the wing flap return port of the hydraulic system reservoir. In the bypass condition, the auxiliary hydraulic pump receives fluid from the hydraulic system reservoir, pressurizes it to system pressure, and ports it to the left and right power manifolds for distribution to the subsystems.

D. Alternate Operation

- (1) When both engine-driven hydraulic pumps and the auxiliary hydraulic pump are rendered inoperative due to the loss of the normal supply of fluid, the hydraulic power system can be rigged for alternate operation. This is accomplished by placing the system selector control lever in the general system/main gear downlock and flaps position. When the system selector control lever is in this position, the auxiliary hydraulic pump supply selector valve is positioned to supply fluid from the auxiliary pump alternate reservoir to the auxiliary pump.
- (2) Fluid is supplied to the auxiliary pump from the outlet port of the auxiliary pump supply selector valve. Output pressure is ported through the auxiliary system filter and check valve to the auxiliary pressure inlet port of the system selector valve.
- (3) In the general system/main gear downlock and flaps position, auxiliary pump pressure bypasses the manifold pressure passages and is ported from the alternate outlet port of the system selector valve. Fluid from this port flows directly to a port on the right power manifold, through an internal check valve in the manifold, to the wing flap control valve. A line, teed into the alternate supply line, runs directly to a shuttle valve at each main gear downlock bungee cylinder. When auxiliary pressure is applied, the shuttle valves shift and port fluid into the downlock side of the bungee cylinders.

E. Mechanical Control

- (1) The hydraulic power mechanical control system consists of the hydraulic system selector control lever and cable drum, the system selector valve sector and system selector valve, and the auxiliary hydraulic pump supply selector valve sector and auxiliary hydraulic pump supply selector valve.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (2) The control lever located on the system engineer's control pedestal is used to position the system selector valve and, in turn, the auxiliary hydraulic pump supply selector valve.
- (3) The control lever is spring loaded into general system (normal) position, and is connected to the control lever cable drum. Two cables run from the drum, under the cabin floor, aft through the pressure bulkhead at the rear wing spar, and into the left wheel well to the system selector valve sector. A pushrod connects the sector to the positioning lever of the system selector valve.
- (4) A second set of cables is routed from the system selector valve sector into the left wing root to the auxiliary hydraulic pump supply selector valve sector. When the system selector valve is in either bypass or normal, the auxiliary hydraulic pump supply selector valve sector is arranged so that the pushrod idles between the two positions. This allows the valve to remain in the auxiliary position. When the sector is moved to the alternate position, the pushrod is pulled by the sector to reposition the valve to the alternate position.
- (5) The control lever is normally in the general system (normal) position. To move the system selector valve to the bypass position, the control lever is moved to the bypass/general system position. When the system selector valve is moved to the bypass position, the auxiliary hydraulic pump supply selector valve sector is moved to a new position. Due to the idle feature on the auxiliary sector, the valve remains in the auxiliary position. With the valve in this position, fluid is supplied to the auxiliary pump through the low standpipe in the hydraulic system reservoir. In this condition, engine-driven pump pressure is ported to the reservoir and the auxiliary pump pressure is ported to the general system.
- (6) To put the system in alternate operation, the control is moved to the general system/main gear downlock and flaps position. This moves the system selector valve to the alternate position, and simultaneously moves the auxiliary hydraulic pump supply selector valve to the alternate position. Fluid is supplied to the auxiliary pump from the auxiliary hydraulic pump alternate reservoir. Fluid pressure from the auxiliary pump is ported to the flap system control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported from the system selector valve to the general system.

## 2. System Components

### A. Hydraulic System Reservoir (See Figures 3 and 4.)

- (1) The hydraulic system reservoir is installed on the aft side of the wing rear spar in the left wing root and is accessible through the left wing root access door. The hydraulic system reservoir serves as the main source of hydraulic fluid for the engine-driven hydraulic pumps and the

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

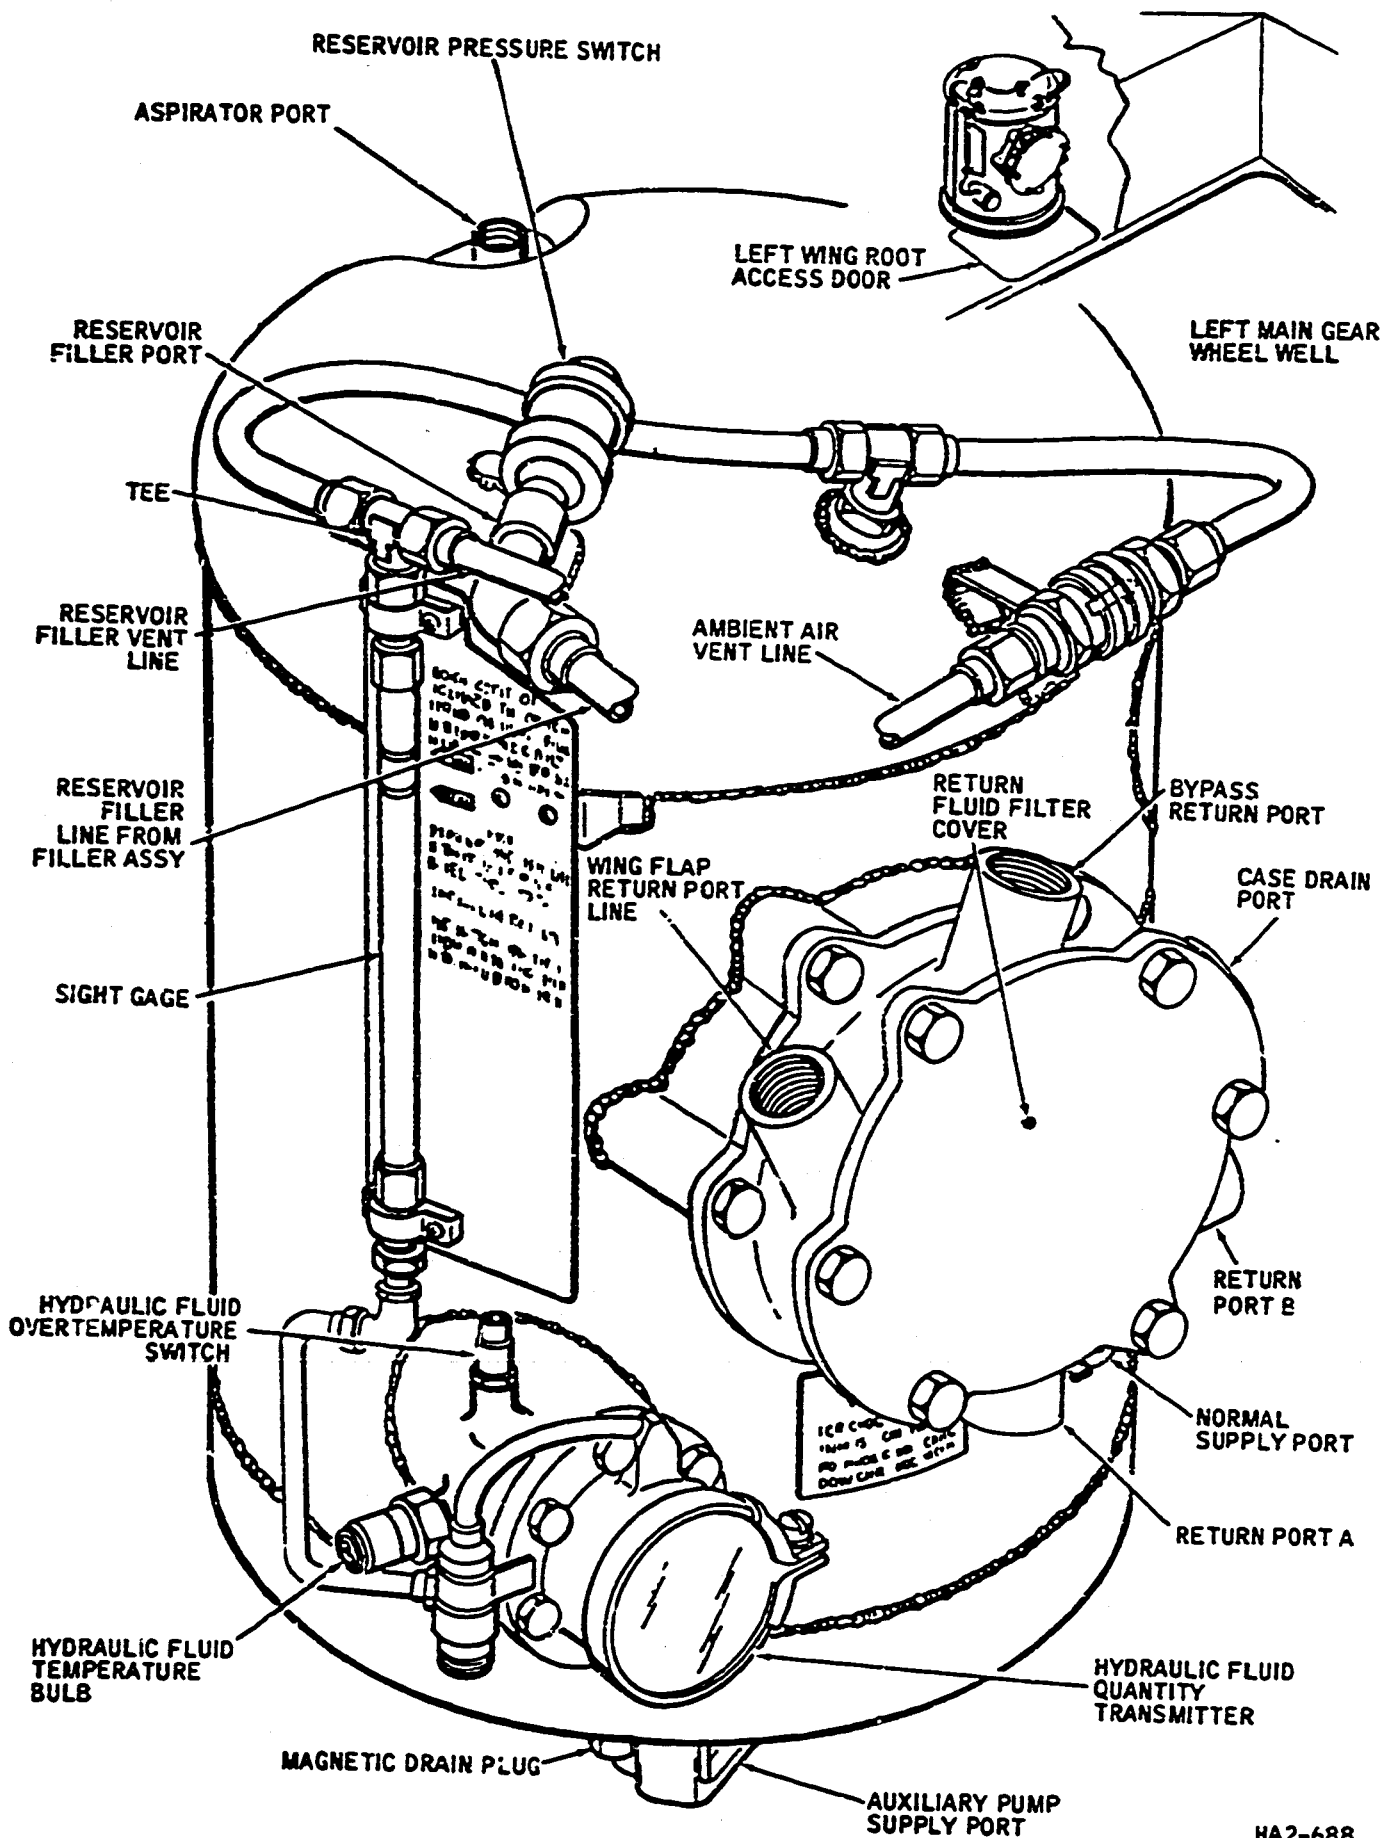

Hydraulic System Reservoir -- External View  
 Figure 3


HA2-688

29-10-0  
 CODE 17  
 Page 9

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

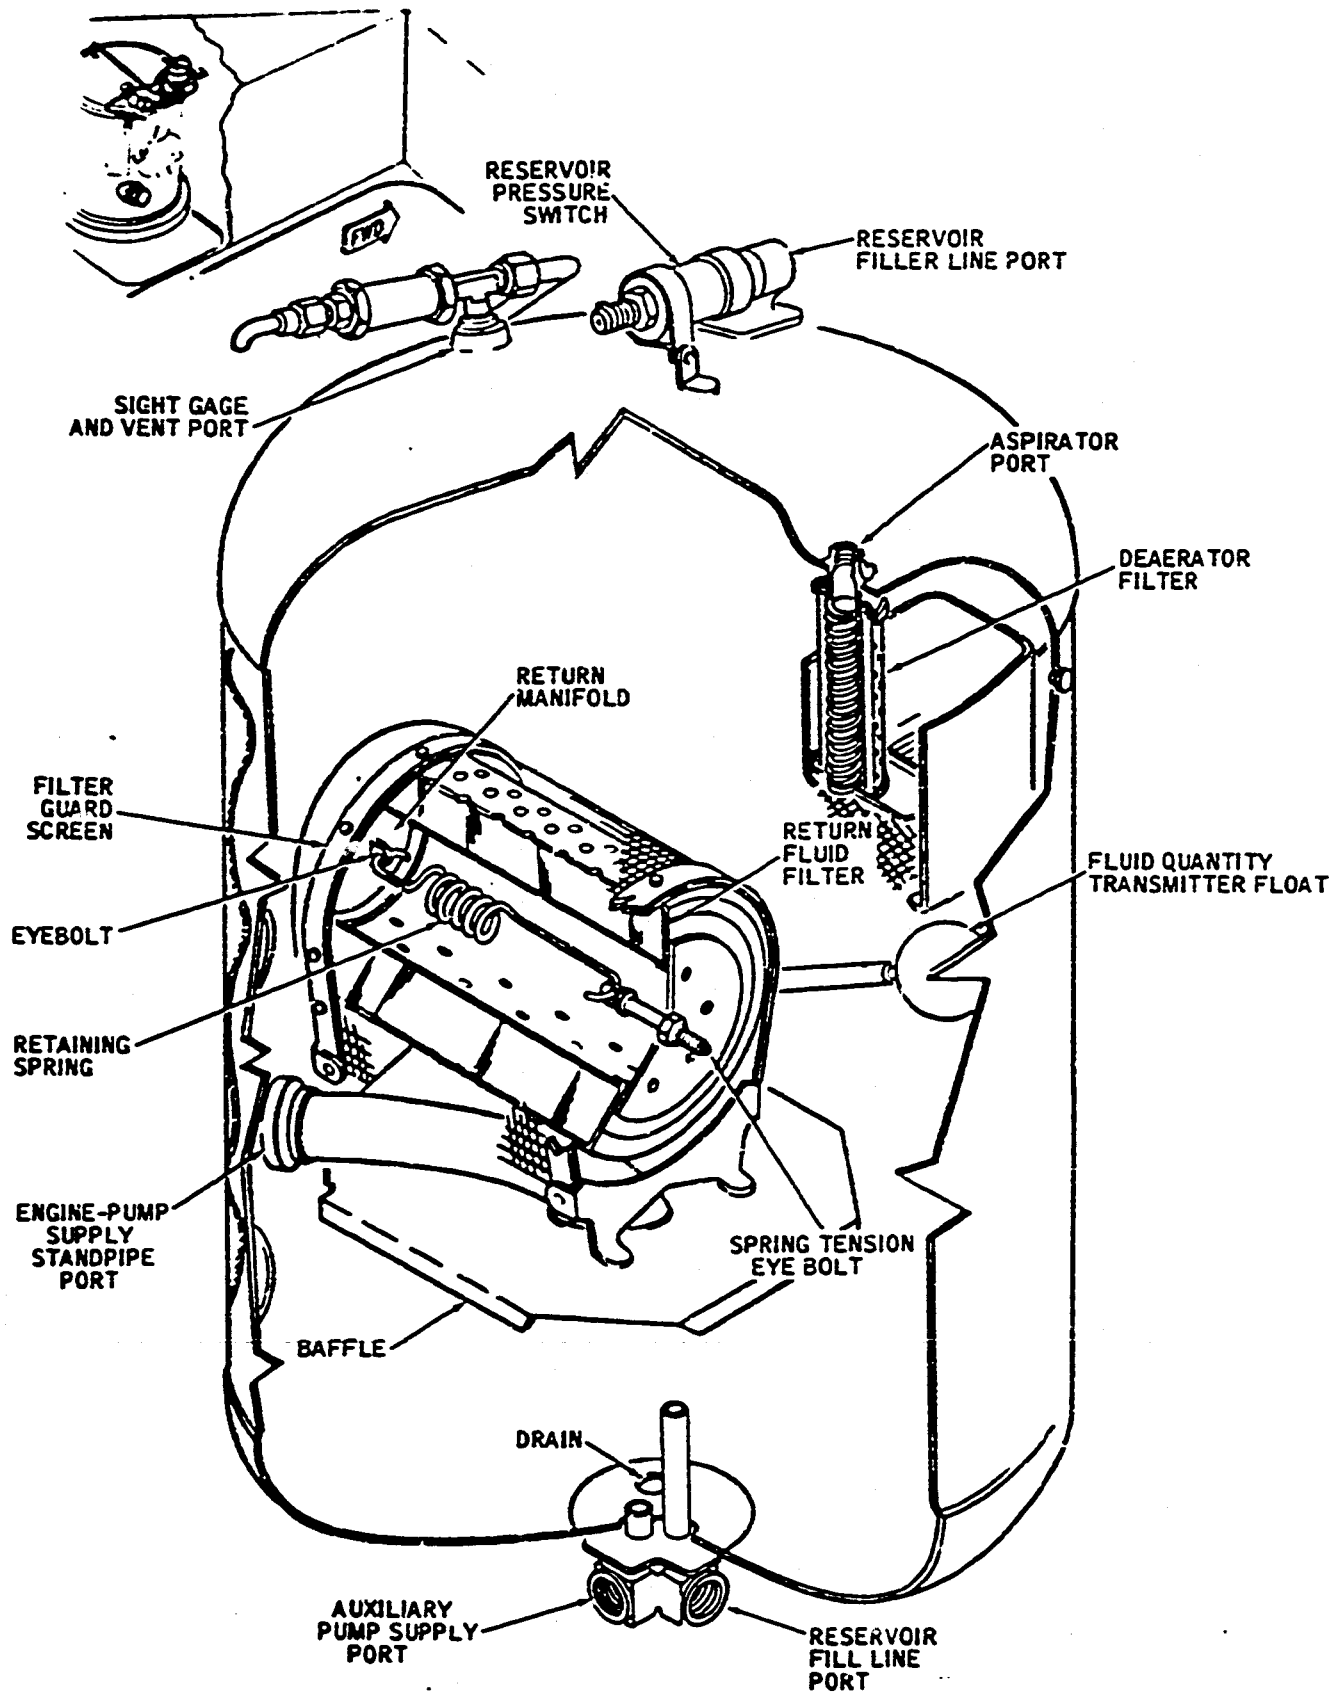

HA2-689

Hydraulic System Reservoir -- Cutaway View  
 Figure 4

29-10-0  
 CODE 17  
 Page 10

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

normal supply for the auxiliary hydraulic pump. The reservoir is cylindrical in shape and contains a filter, baffle, and a screen cover encasing the filter. The filter prevents foreign particles from contaminating the fluid supply. Mountings are provided on the exterior surface of the reservoir for return line ports, aspirator port, electrical sensing units, sight gage, instruction placards, magnetic drain plug, and system supply ports.

- (2) The reservoir is pressurized with air from the regulator-aspirator to between 30 and 35 psi and has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir volume is used for fluid and 1/10 is used for foam space.
- (3) The aspirator port through which the reservoir is pressurized is located in the recess on top of the reservoir. An aspirator-deaerator filter is supported in the reservoir by a screen and support box assembly which is mounted to the reservoir wall by two bolts.
- (4) The mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The return ports manifold is an open-centered ring, flanged at both sides and provided with five fluid ports around its circumference; return port A is located at the bottom, return port B is located at the lower right side, the wing flap return port is located at the upper left side, and the system selector valve bypass port is located at the top. One flange of the manifold is mounted with six bolts to the mounting flange on the reservoir. The return fluid filter cover fits into the open side of the manifold, and is attached to the outer manifold flange with six bolts to form a fluid-tight cover for both the manifold and the filter.
- (5) The return fluid filter is installed in the reservoir, behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the return fluid filter cover holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to the engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
- (6) A flanged adapter for the fluid quantity transmitter is welded to the reservoir below and to the left of the return ports manifold. The adapter is provided with two small port bosses for the hydraulic fluid temperature bulb and the hydraulic fluid overtemperature switch. The lower end of the sight gage connects to a third port in the adapter, while the top of the sight gage tees into a port at the top of the reservoir. An instruction plate is mounted behind the sight gage and the vacuum breaker check valve tees into the port at the top of the reservoir that is used by the sight gage.

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 17  
Page 11

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


B. Hydraulic Reservoir Return Fluid Filter (See Figure 4.)

- (1) The reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply. The filter is located behind the return ports manifold, and is spring loaded to act as its own relief valve. Access to the filter is by removing the return fluid filter cover from the return ports manifold by removal of six bolts. The filter is attached by the retaining spring to the cover and is withdrawn from the reservoir when the cover is removed.
- (2) Externally, the filter consists of two perforated concentric tubes. The area between the tubes is closed by metal end caps which are bonded to the two tubes. A resilient rubber gasket is bonded to each of the caps. Each gasket must be smooth and flat for proper sealing of the filter. The gaskets act as a static seal and a relief valve seat.
- (3) Internally, the filter has a 10-micron, resin-impregnated, convoluted paper-type filter element. The area of the filter element is approximately 1960 square inches. The filter is held in place by a retaining spring. One end of the spring is attached to an eyebolt located inside the return port's manifold cover. The spring passes through the center chamber of the filter and is connected to another eyebolt. This eyebolt is secured to a large washer and plate by means of a self-locking nut. The washer seats on the rubber gasket which is bonded to the filter. The fluid enters the center chamber of the filter and passes through the inner tube of the filter to the filter element by means of perforation holes. Foreign matter is filtered out by the filter element, and the fluid leaves the element through perforation holes in the outer tube. When the element becomes saturated with foreign matter, the filter acts as its own relief valve and unseats at 20 to 25 psi above normal return pressure which allows fluid to bypass the filter and enter the reservoir.

C. Hydraulic Reservoir Air Pressure Regulator-Aspirator (See Figure 5.)

- (1) The reservoir air pressure regulator-aspirator is a jet-type air pump, regulated by a pressure-sensitive shutoff valve. The unit pressurizes the hydraulic reservoir with air to the operating pressure range of 30 to 35 psi. The regulator-aspirator is located on the top inboard side of the reservoir and is mounted on the reservoir retainer ring. Access to regulator-aspirator is through the left wing root access door.
- (2) The regulator-aspirator assembly consists of a main aspirator body and a regulator housing. The main aspirator body has two inlet ports and one outlet port. The ports are permanently identified inlet, outlet, and air inlet. The plug for an air check valve is located near the outlet port. A chemically treated paper filter is installed near the aspirator body air inlet port in the air line from the pressurized cabin area. A metal screen filter is installed on the check valve which tees into the aspirator body air inlet port.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

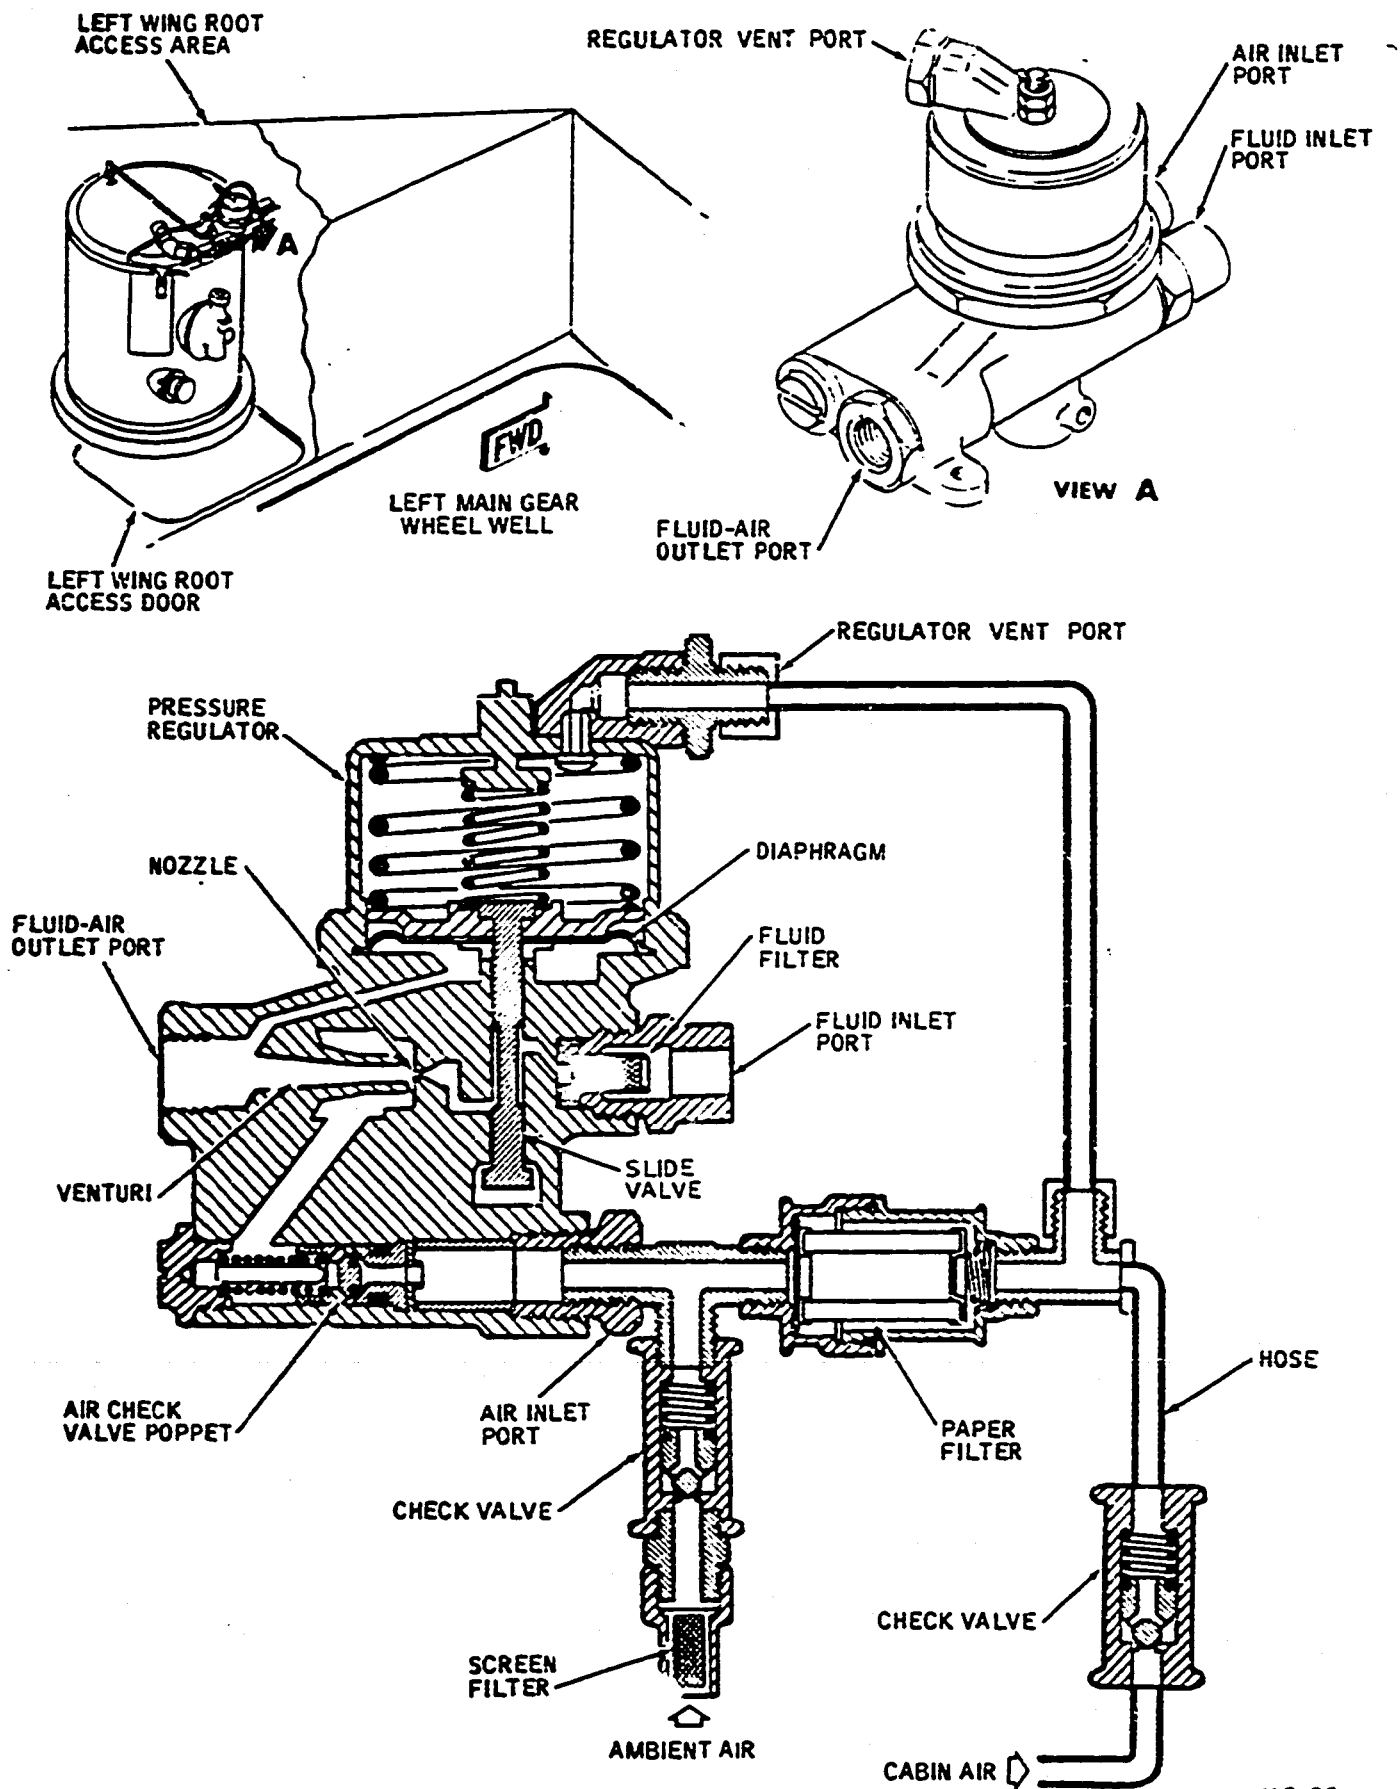

Reservoir Air Pressure Regulator-Aspirator -- Schematic  
 Figure 5

Jun 15/67

Printed in U.S.A.

HA2-25

29-10-0  
 CODE 17  
 Page 13


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The reservoir air pressure regulator-aspirator operates basically with a jet pump action which is regulator controlled. Fluid enters the assembly through the fluid inlet port where it is filtered and then ported through the valve assembly of the regulator. During normal operation, when air pressure at the outlet port is under 30 psi, the valve is open porting fluid to the nozzle. The orifice in the nozzle sprays the fluid through the venturi of the outlet port, creating a vacuum in the chamber around the venturi. When the vacuum becomes great enough to create a pressure differential of approximately 1 psi, ambient air opens the air check valve. The air is ported to the chamber around the venturi and is siphoned, with the fluid, through the outlet port.
- (4) Hydraulic fluid inlet pressure at the engine-driven hydraulic pumps is improved at high altitude operation by supplying pressurized filtered cabin air to the reservoir regulator-aspirator instead of ambient outside air. Part of the inlet air is diverted by a tee fitting to the regulator chamber to provide a more positive regulating force on the diaphragm than would be obtained with low ambient pressures. The chemically treated paper filter, installed in the regulator-aspirator air supply line from the cabin, removes smoke tars and impurities from the pressurized cabin air. The steel mesh screen filter, installed on the check valve which tees into the regulator-aspirator air inlet port downstream of the paper filter, removes dust, dirt, and foreign particles from the ambient air and serves as a standby to supply filtered air in event the paper filter is clogged.
- (5) As pressure in the reservoir builds up, back pressure is bled from the outlet port to the diaphragm chamber. The reaction on the diaphragm begins to move the slide valve to cut off the fluid flow. At 30 to 35 psi of back pressure, the diaphragm completely closes the slide valve, cutting off the flow of fluid. If there is a regulator malfunction, the aspirator stalls when outlet pressure reaches a maximum of 40 psi.
- (6) The aspirator is capable of pressurizing the reservoir to 30 to 35 psi in approximately 4 minutes at altitudes from sea level to 15,000 feet, when fluid is ported through the nozzle at 0.5 gpm at 3000 psi.


D. Regulator-Aspirator Air Filters (See Figure 6.)

- (1) The regulator-aspirator air filters remove ambient and cabin air impurities from the air which is used to pressurize the main hydraulic system reservoir. The filtering system is composed of two filters. One of which is a paper element filter, installed directly in the cabin air supply line near the regulator-aspirator. The other filter is a fine mesh, screen-type filter, installed on a check valve and positioned at right angles to the regulator-aspirator air inlet port. The screen filter, in addition to providing an immediate supply of ambient air during ground operations, serves as a standby air inlet to preclude air starvation of the regulator-aspirator in the event the paper element filter becomes clogged.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

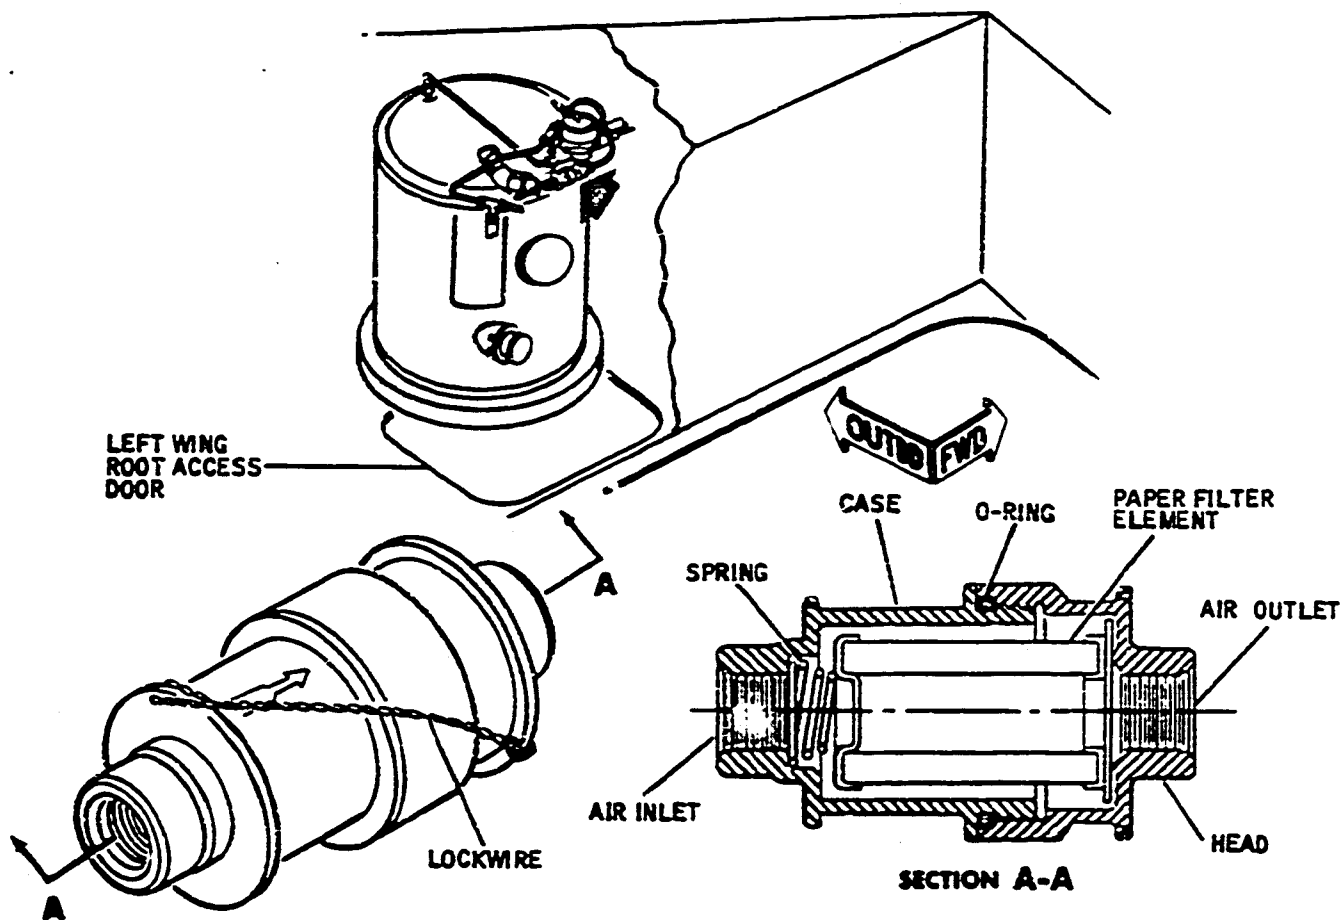

PAPER ELEMENT FILTER

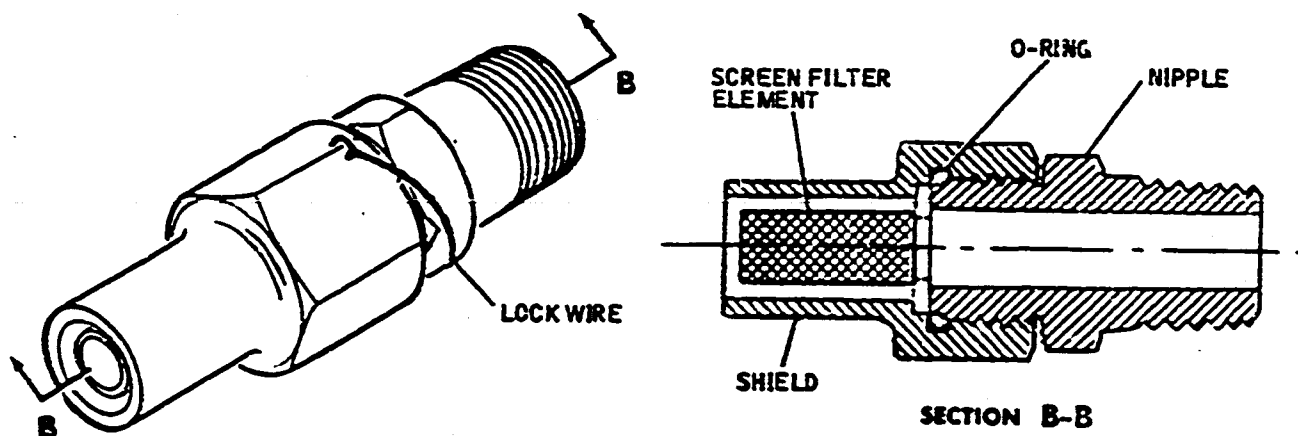

SCREEN FILTER

HA2-35

Regulator-Aspirator Air Filters -- Cutaway View  
 Figure 6

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 17  
 Page 15



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

E. Hydraulic Reservoir Relief Valve (See Figure 7.)

- (1) The reservoir relief valve and the air pressure aspirator-regulator keep the reservoir pressurized to normal operating range. The valve relieves excess air pressure which may build up in the reservoir through thermal expansion in the system. The valve has an inlet port and an outlet port and consists, internally, of an inlet port seat and a spring-loaded poppet.
- (2) The relief valve is installed in the overboard vent line downstream of the hydraulic reservoir air bleed valve. In the event that excess pressure builds up in the reservoir, the poppet will start to relieve at 45 (+5, -0) psi. Full flow of 10 gpm is attained at 80 psi maximum. The poppet reseats at 90 percent of the opening pressure.

F. Hydraulic Reservoir Air Bleed Valve (See Figure 8.)

- (1) The hydraulic reservoir air bleed valve and pressure gage are located on the aft side of the rear spar in the left main gear wheel well, inboard of the hydraulic reservoir air chamber. The bleed valve and gage are installed in the overboard vent line, between the reservoir air chamber and the reservoir relief valve.
- (2) The bleed valve is used to relieve the reservoir air pressure prior to disconnecting lines or components in the hydraulic system. The pressure gage provides a ready indication of the hydraulic reservoir air pressure and is used in conjunction with the bleed valve to indicate the air pressure status.
- (3) The air inflation valve is installed on the same fitting as the bleed valve and pressure gage. The air inflation valve is used to manually charge the reservoir with air or dry nitrogen.


G. Hydraulic Reservoir Vacuum Breaker Check Valve (See Figure 9.)

- (1) The hydraulic reservoir vacuum breaker check valve is installed on the regulator-aspirator mounting bracket, and connects to the tee fitting at the top of the reservoir. The valve is vented to ambient air. The purpose of this valve is to maintain atmospheric pressure in the reservoir, allowing hydraulic fluid to flow to the auxiliary hydraulic pump in the event of a failure of the reservoir pressurization system. The failure, or breakdown, of the pressurization system could cause a fluid starvation at the auxiliary hydraulic pump because of vacuum buildup in the reservoir.

H. Hydraulic Reservoir Air Chamber

- (1) The hydraulic reservoir air chamber is a small, cylindrical tank with a capacity of 700 cubic inches. It has two ports, an inlet port at the bottom of the chamber and an outlet port in one end of the chamber. The inlet port mounting boss is fitted with a drain plug. The air chamber is installed on the aft side of the rear spar in the left main gear

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

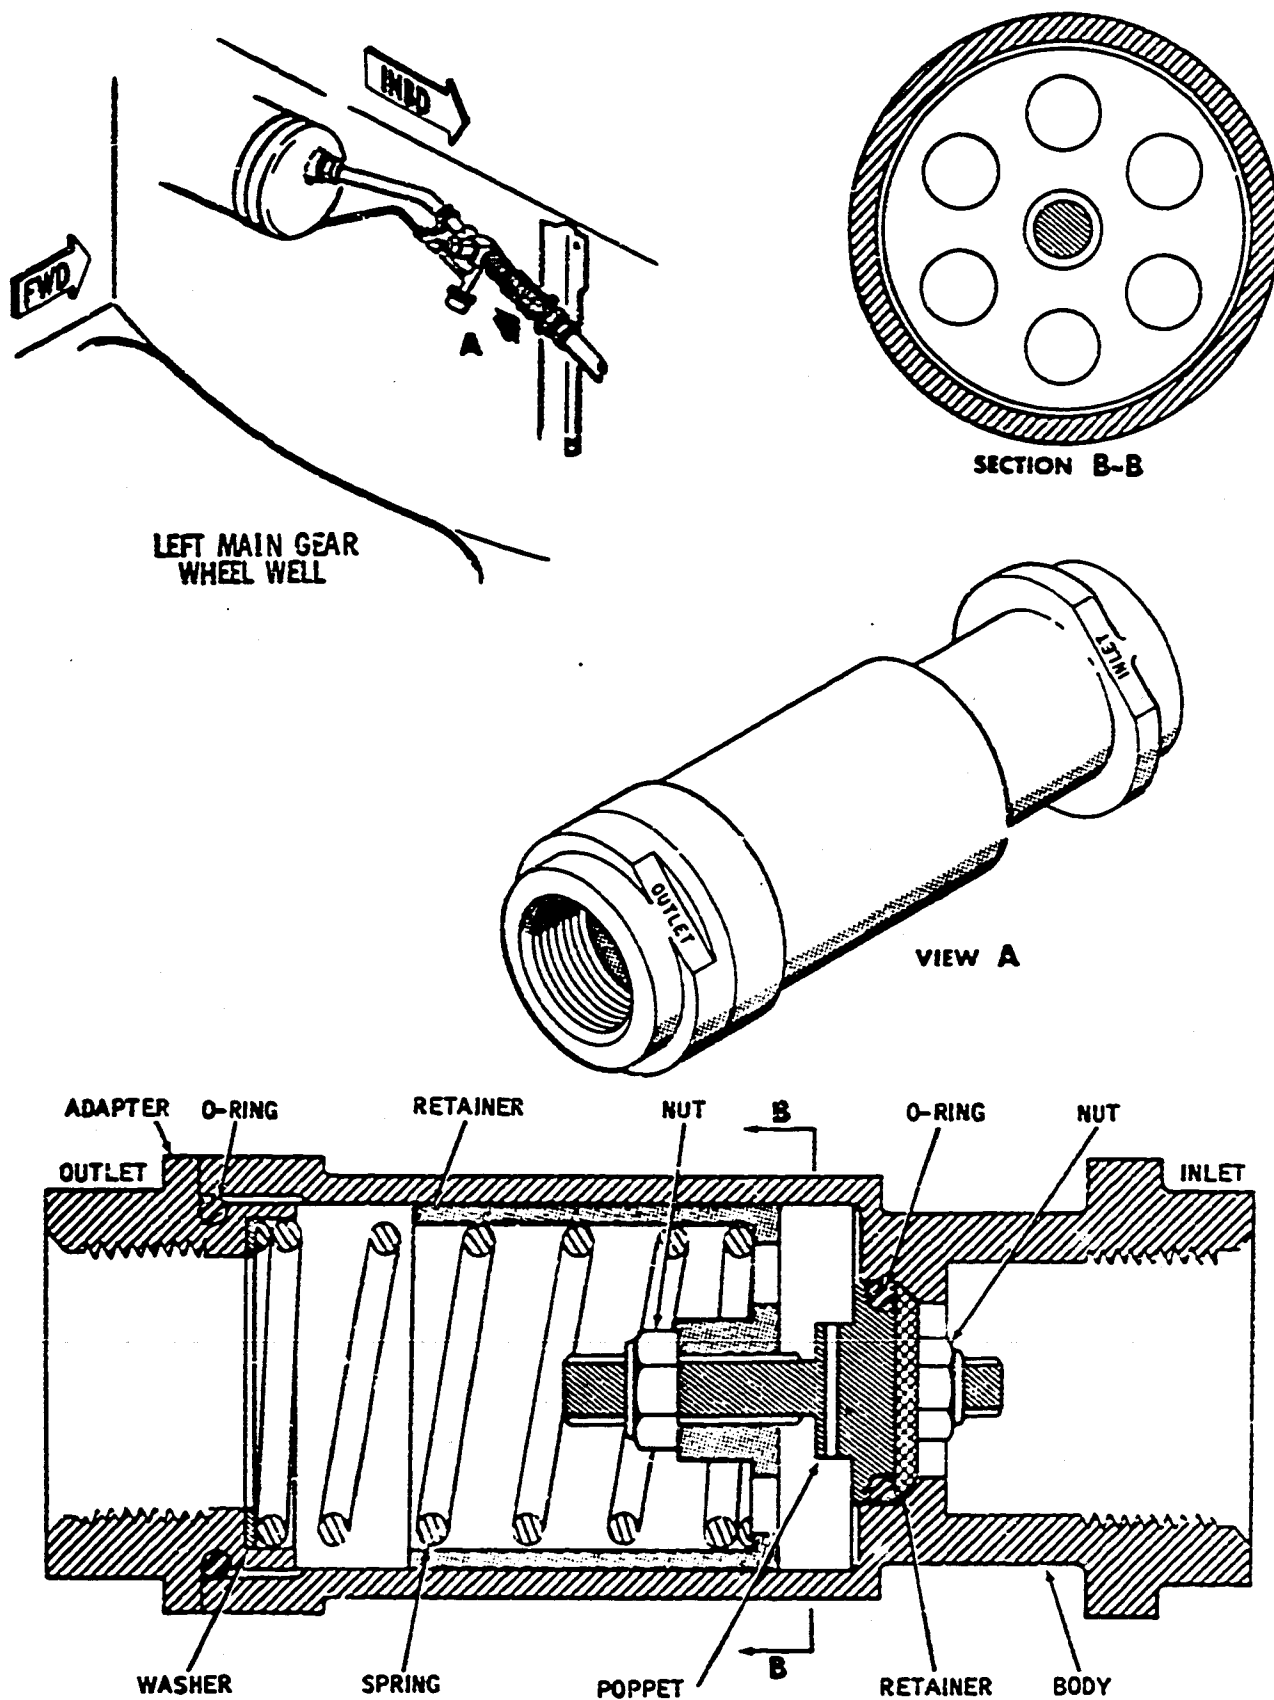

Hydraulic Reservoir Relief Valve  
 Figure 7


HA2-17

29-10-0  
 CODE 17  
 Page 17

Jun 15/67

Printed in U.S.A


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

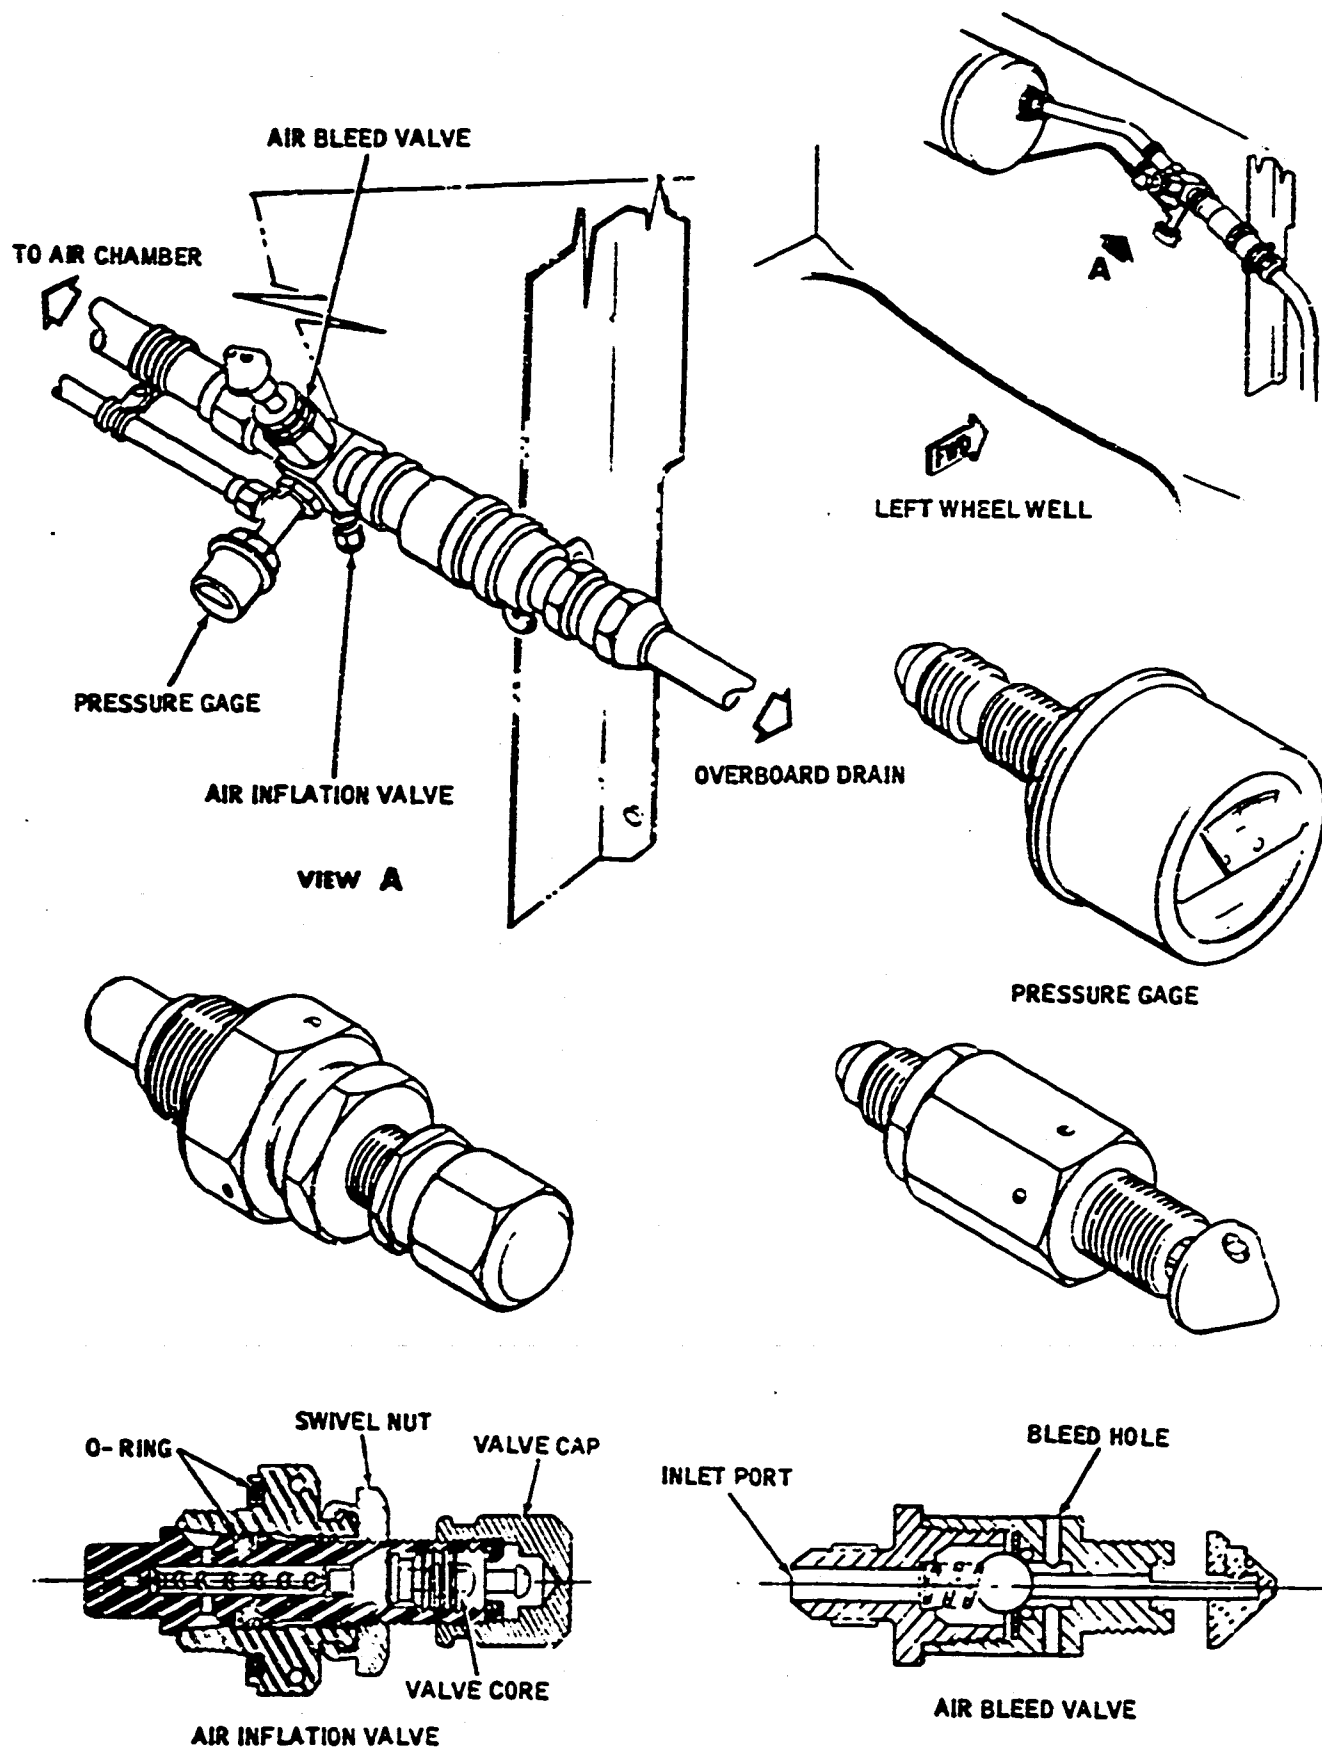

HA2-32

Reservoir Air Bleed Valve, Air Inflation  
 Valve, and Pressure Gage  
 Figure 8

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

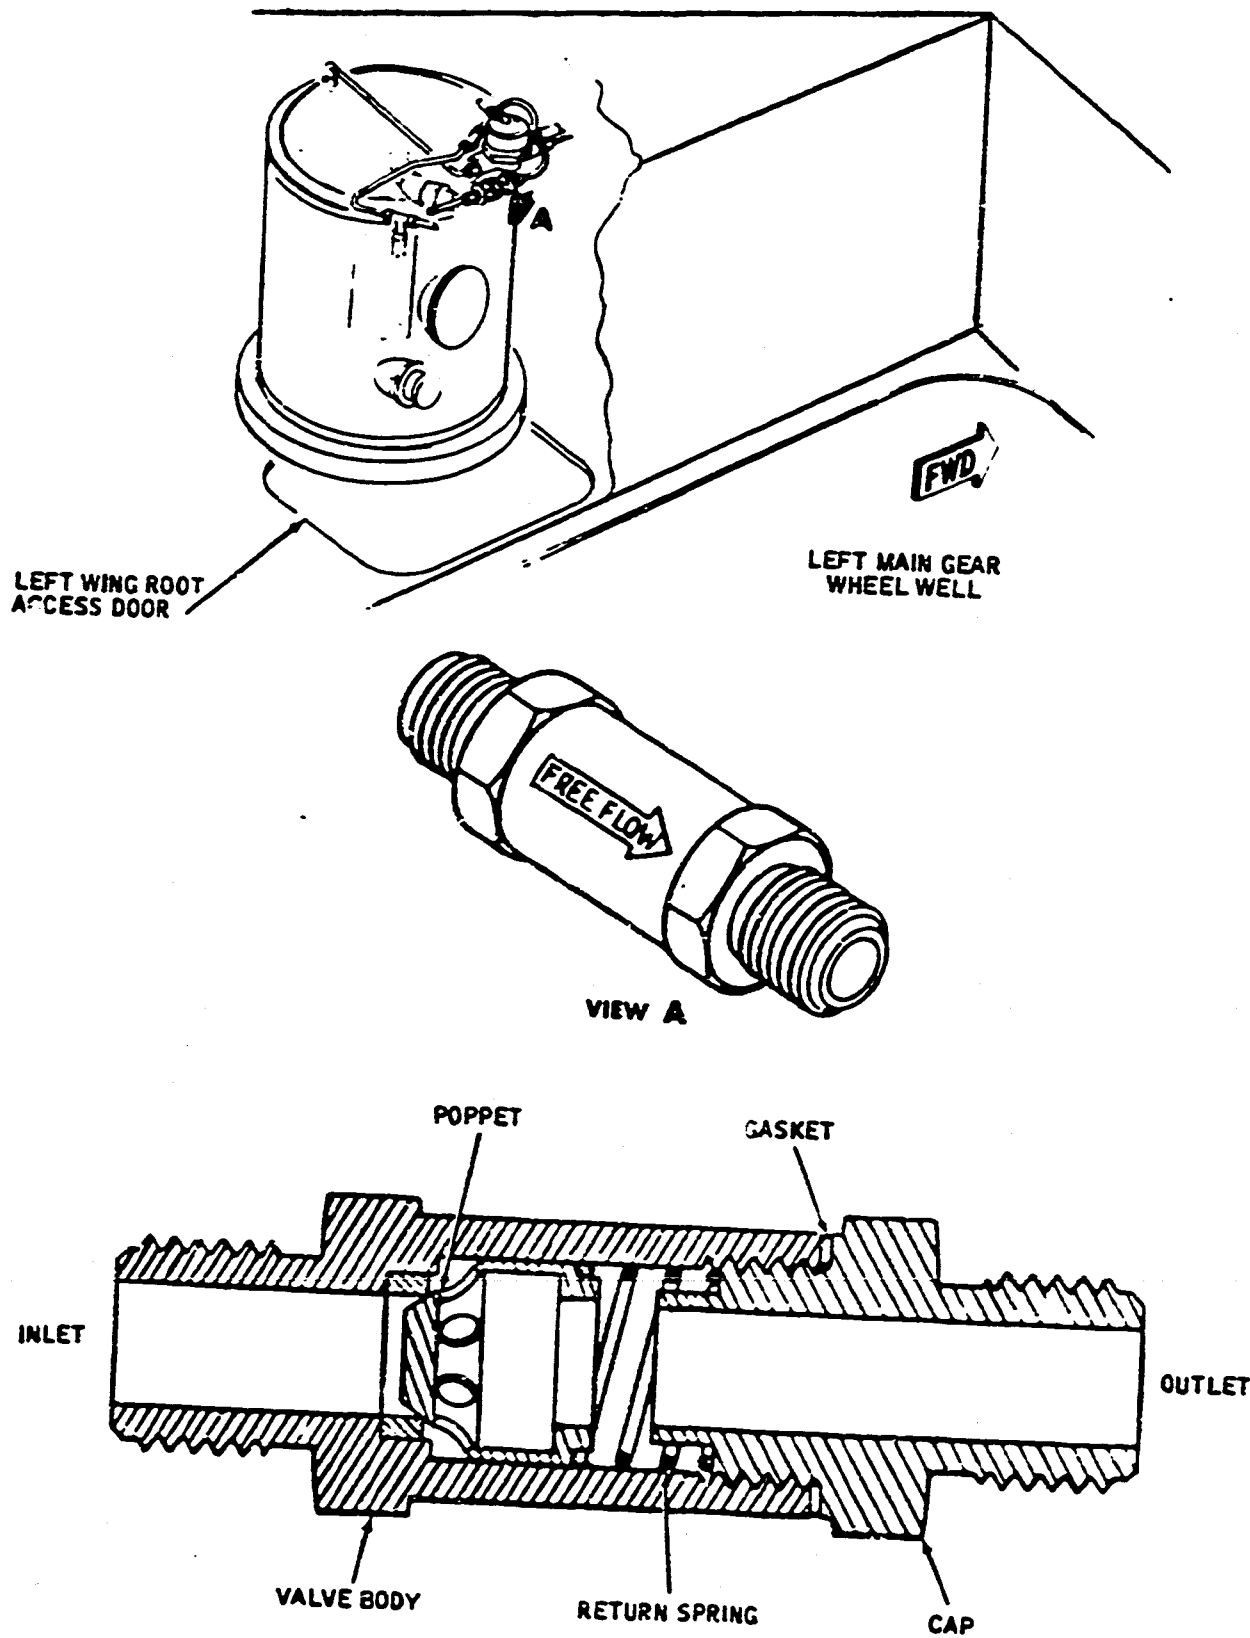

Hydraulic Reservoir Vacuum Breaker Check Valve  
 Figure 9

HA2-33

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 17  
 Page 19

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

wheel well, inboard and above the hydraulic reservoir filler assembly. Access to the air chamber is through the left main gear inboard door.

- (2) The air chamber provides for greater fluid capacity in the hydraulic reservoir by providing air and foam space for the reservoir in a separate container. Air pressure in the chamber is maintained by the regulator-aspirator and the air relief valve. The air pressure in the chamber and reservoir can be relieved, when desired, by the air bleed valve located downstream of the chamber. The air chamber is mounted higher than the reservoir filler assembly, to prevent overfilling of the reservoir from reducing the available air space and to prevent fluid from being vented overboard through the reservoir relief valve.



I. Hydraulic Reservoir Port B Return Check Valve (See Figure 10.)

- (1) The reservoir port B return check valve is installed in port B of the reservoir to prevent reverse flow of hydraulic fluid from the reservoir to the return line. The check valve is located on the reservoir in the left wing root and is accessible through the left wing root access door.
- (2) Externally and internally, the port B check valve is a standard-type check valve with a 1500-psi rating. A nominal pressure of approximately 8 psi unseats the poppet, permitting fluid to flow through the valve. When the reservoir pressure exceeds the return line pressure, the poppet will seat and reverse fluid flow will be prevented.

J. Engine Hydraulic Fire Shutoff Valve (See Figures 11 and 12.)

- (1) The engine hydraulic fire shutoff valve is a gate-type, mechanically controlled valve, installed in the supply line of each engine-driven hydraulic pump. The engine hydraulic fire shutoff valve is actuated from the flight compartment to prevent the flow of hydraulic fluid into the engine section.
- (2) The engine hydraulic fire shutoff valve is mounted on a 2-piece channel bracket which is installed inside the wing leading edge, aft of the firewall of each inboard pylon. Access to the valve is through the access door located on the lower side of the wing leading edge, outboard of either the left or right inboard pylon. Each valve is located approximately 30 inches inboard of the access door.
- (3) Internally, the valve consists of a valve arm, valve arm link, cam plate, and slide blade. The valve arm link attaches to the valve arm and is allowed to swivel through an arc in relation to the valve arm. The link has a stop that will contact the arm when the two have traveled to the valve closed, full overtravel position. In the full open pretravel position, the link contacts the arm stop.
- (4) A roller attached to the end of the link rides in, and extends through, a J-shaped slot in the cam plate. The rotation of the valve arm causes the link roller to follow the cam slot, allowing the arm and link to move through independent arcs.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

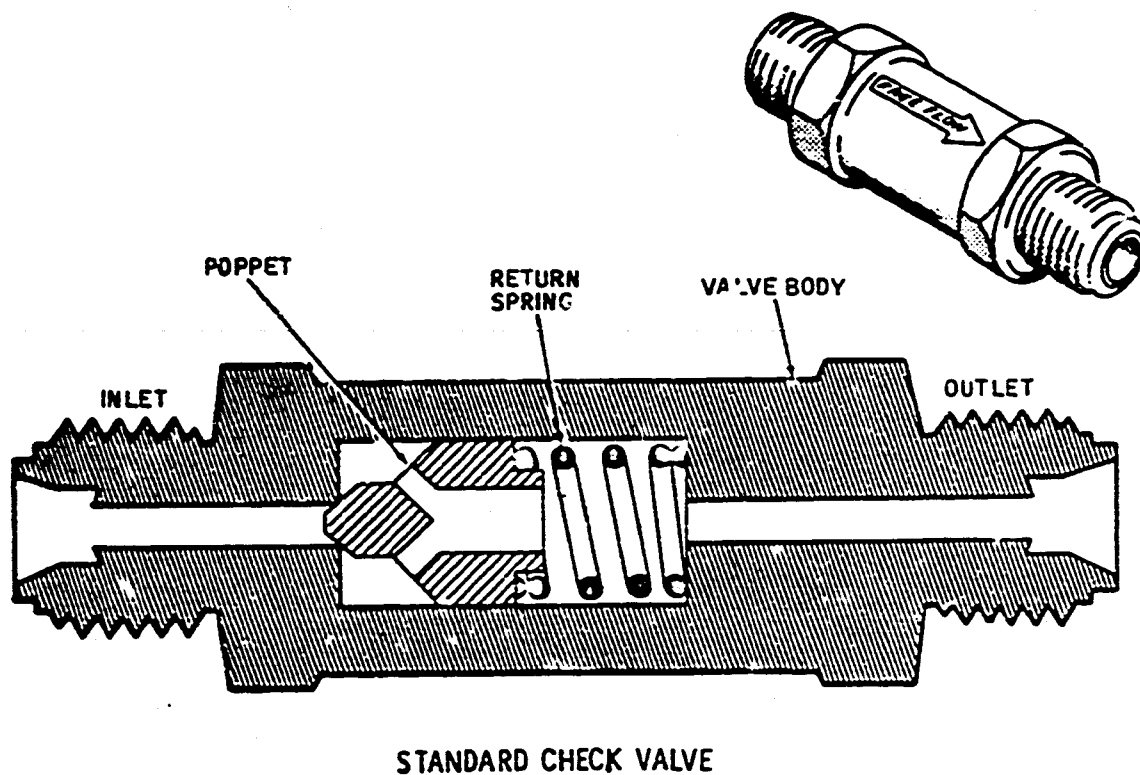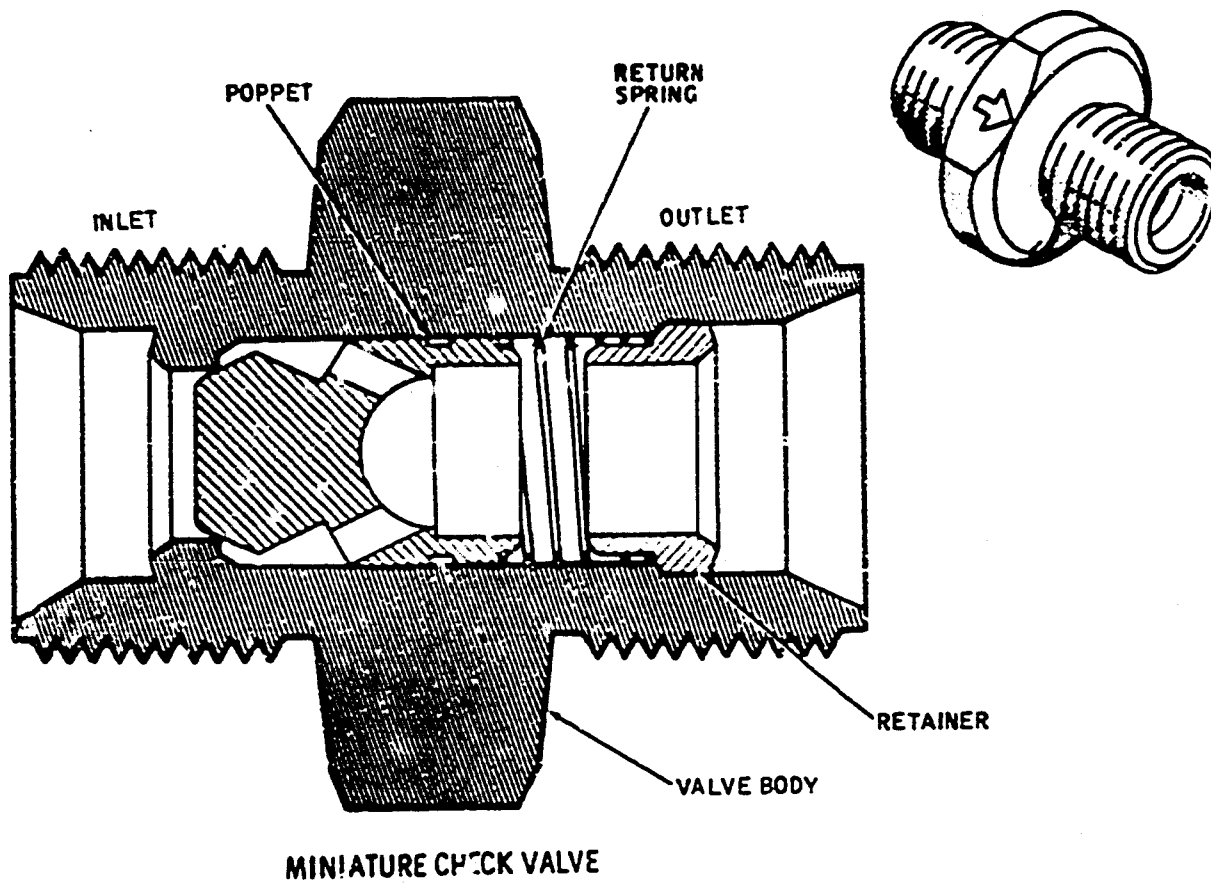

Hydraulic Check Valves -- Typical  
Figure 10


HA2-18A

29-10-0  
CODE 17  
Page 21

Oct 1/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

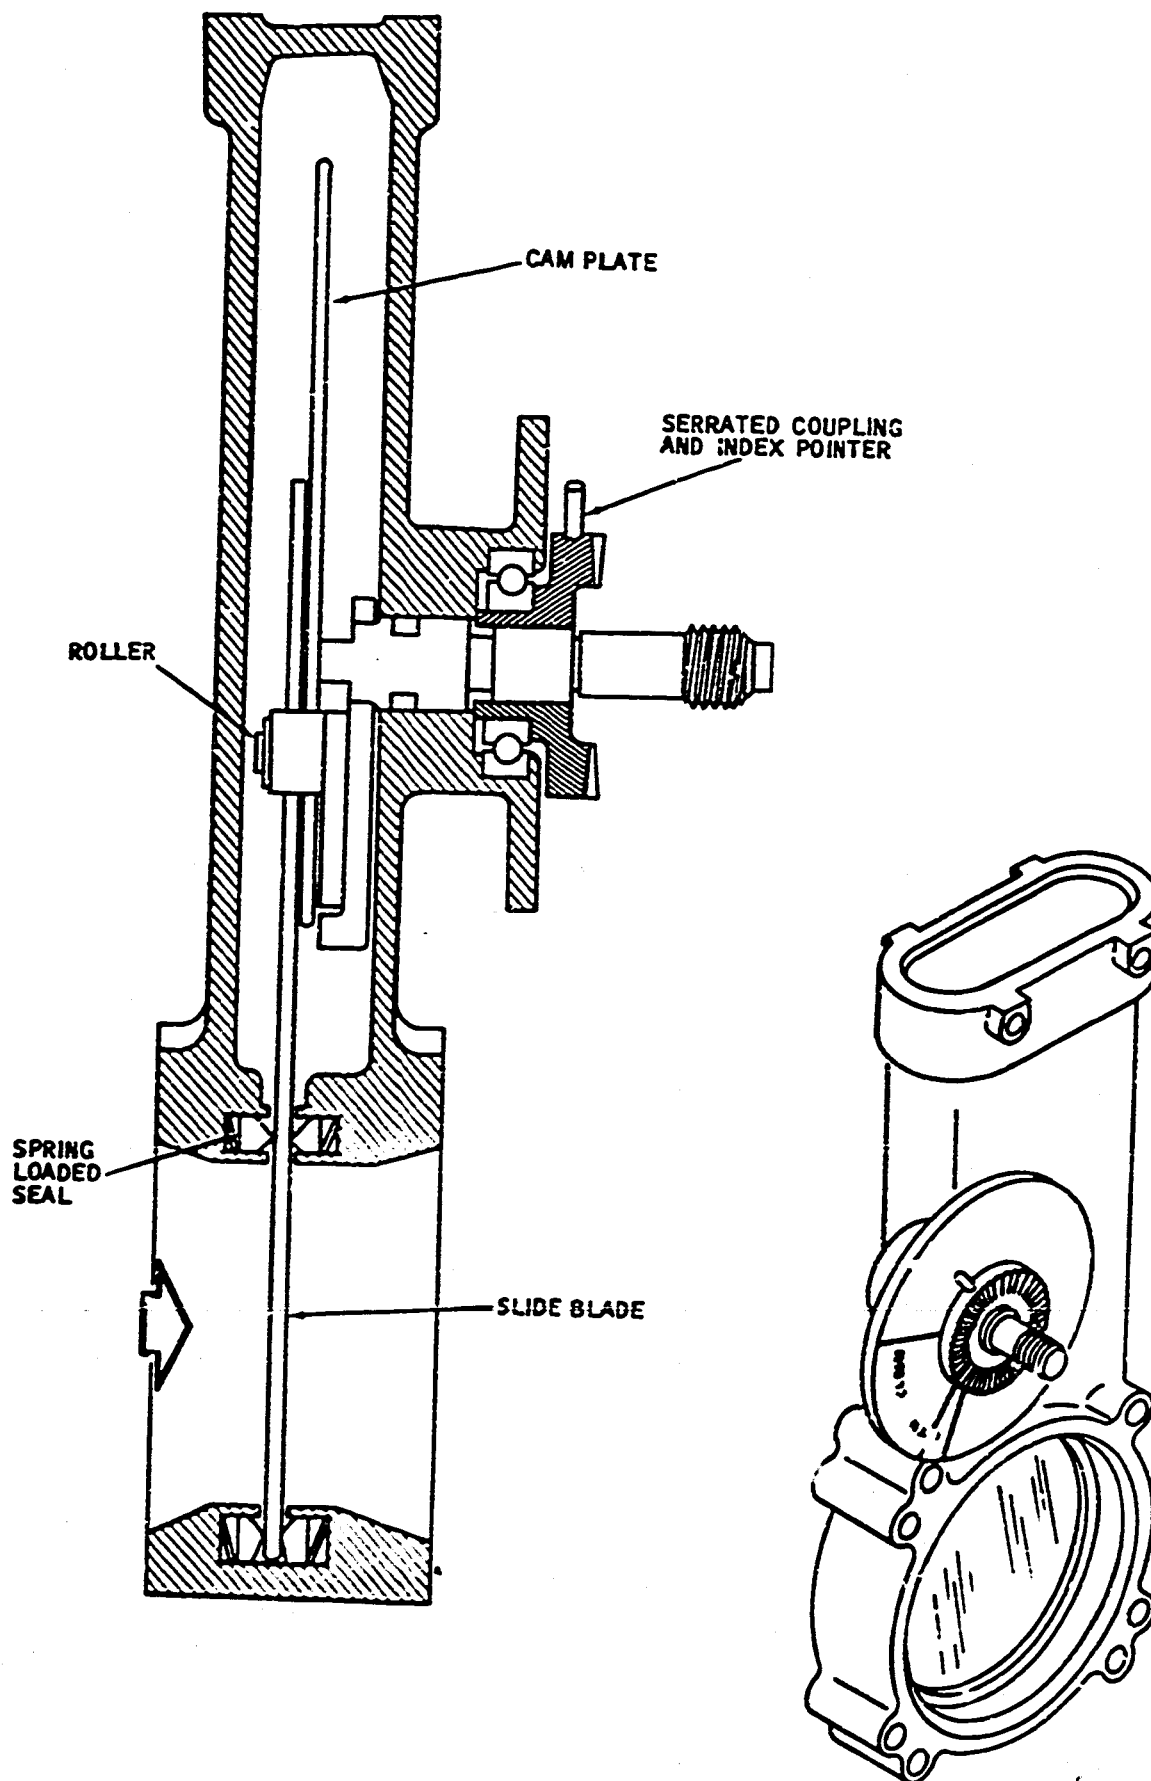

Engine Hydraulic Fire Shutoff Valve -- Schematic  
Figure 11


HA2-2209

29-10-0  
CODE 17  
Page 22


Printed in U.S.A.

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

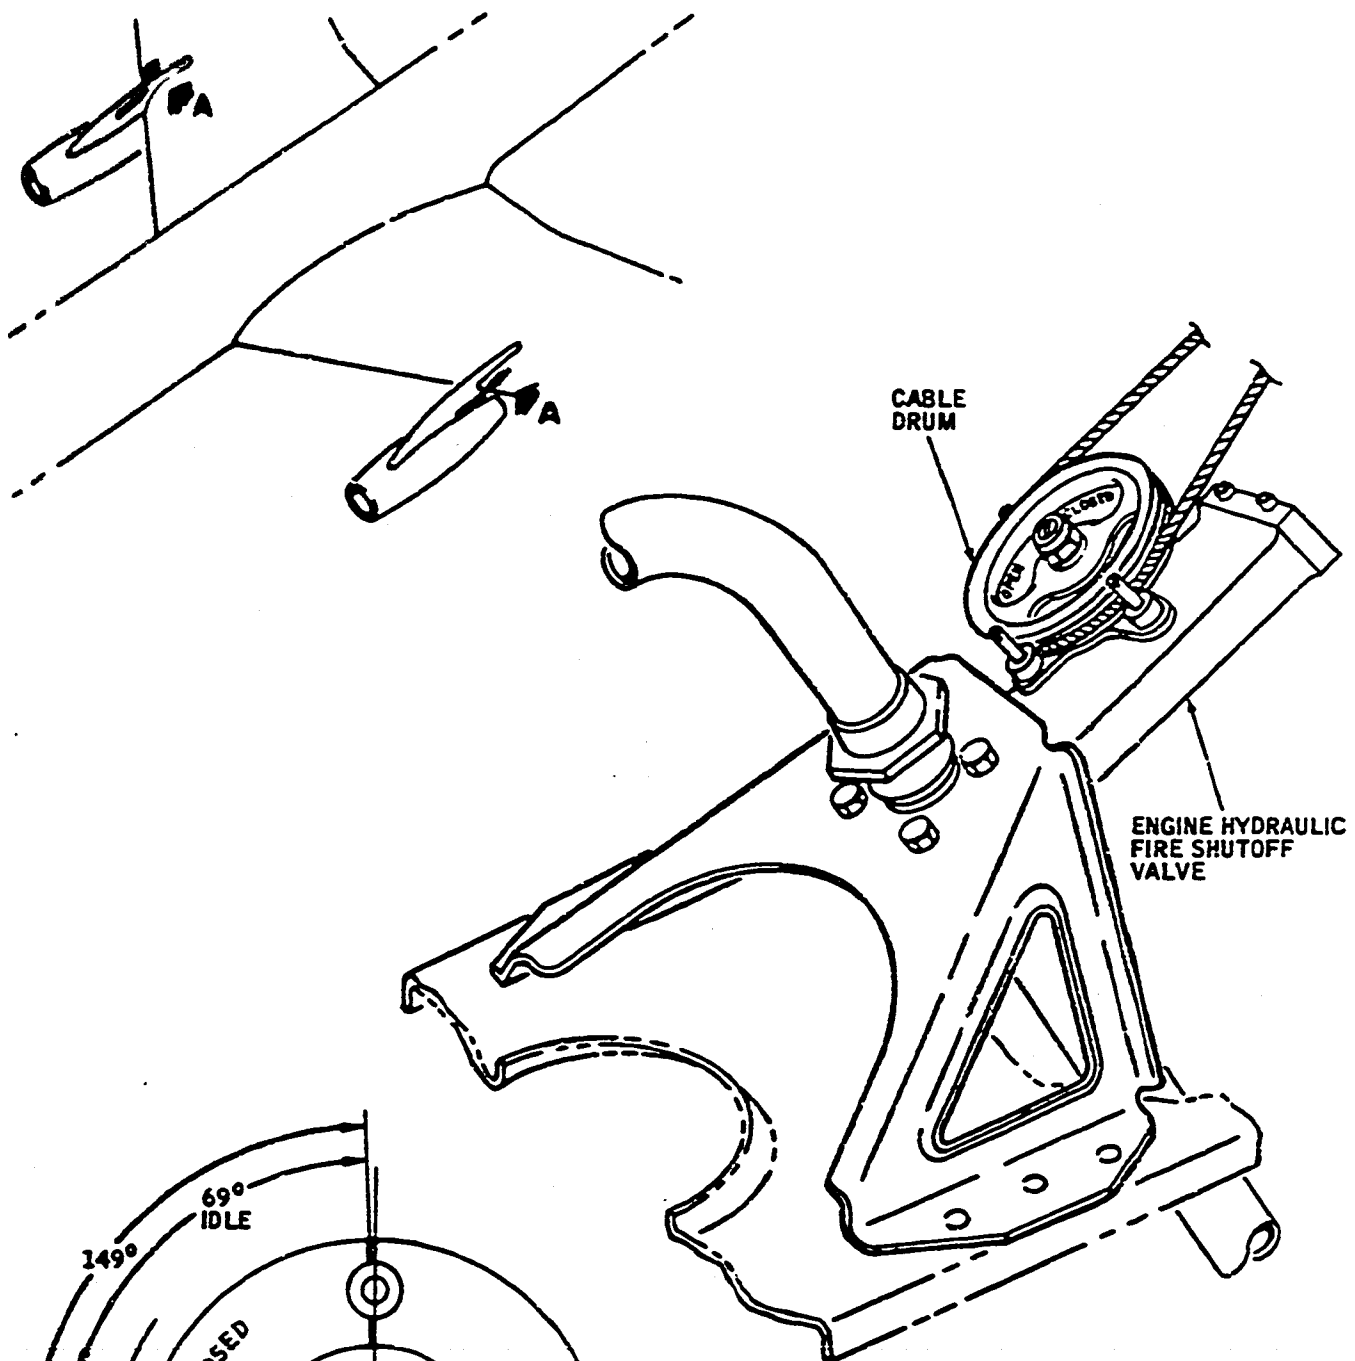

VIEW A

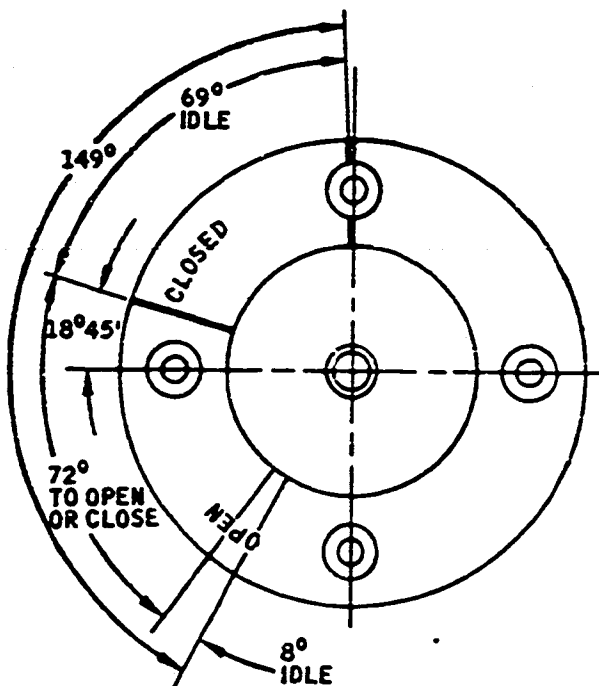

VALVE POSITION DIAGRAM

Engine Hydraulic Fire Shutoff Valve  
 Figure 12

HA2-2978

29-10-0  
 CODE 17  
 Page 23

Aug 1/68

Printed in U.S.A.






DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) The slide blade (gate of the valve) is slotted near the one end and also receives the link roller extending through the cam slot. The slide blade is positioned parallel to the cam plate and is guided by two grooves in the housing. This will allow the blade to open or close through porting of the valve by the action of the arm and link. The cam plate is pinned to the valve shaft, securing it rigidly in two positioning grooves in the housing. A pin-indicator is provided to relate valve position to a reference plate placarded open and closed.
- (6) The engine hydraulic fire shutoff valves are cable actuated by the fire control handles, located on the overhead switch panel in the flight compartment. When the fire control handles for either inboard engine is moved, the cable system rotates the drum which is attached to the corresponding shutoff valve shaft. This action extends the valve blade into the fluid passage to block the flow of fluid. The valve operates from open to close by clockwise rotation of the cable drum. The valve gate will idle during the first 8 degrees of rotation of the cable drum, and then will close in the next 72 degrees. The cable drum will continue to rotate the shaft for an additional 69 degrees after the gate valve is closed, locking it overcenter. Total travel of the cable drum is 149 degrees.

**K. Engine-Driven Hydraulic Pump (See Figure 13.)**

- (1) A variable-displacement, pressure-compensated, engine-driven hydraulic pump is installed on each inboard engine. The pump incorporates a solenoid bypass feature for reducing the output of the pump. The bypass valves are controlled by two engine hydraulic pump switches in the flight compartment. The switch for the hydraulic pump on engine No. 2 is placarded left, on, and bypass. The switch for the hydraulic pump on engine No. 3 is placarded right, on, and bypass. When either of the two engine hydraulic pump control switches is placed in the bypass position, the bypass valve solenoid for that hydraulic pump is energized and the pump pressure decreases to approximately 300 ( $\pm 100$ ) psi. When either switch is in the on position, the control circuit to the corresponding bypass valve is open and the hydraulic pump operates normally in the pressure range of 2850 to 3050 psi. The pump provides a continuous, non-pulsating flow of hydraulic fluid, under pressure, to the hydraulic manifolds for distribution throughout the hydraulic system. Each of the engine-driven pumps is located on the accessory drive pad of the inboard engines. These pumps are accessible through the access doors on the right side of the nacelles, and removal of the engine bypass duct.
- (2) Three case drain ports are provided: two are on the yoke assembly housing, and the third is on the casing for the pressure control valve adjacent to the inlet port fitting. The case drain port on top of the yoke assembly housing is full of fluid at all times. This drain connection is ported back to the low-pressure return port at the reservoir. The inlet port fitting is on top of the pump housing and the outlet port fitting is opposite to it on the bottom of the housing, and contains a low pressure indicating light switch.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

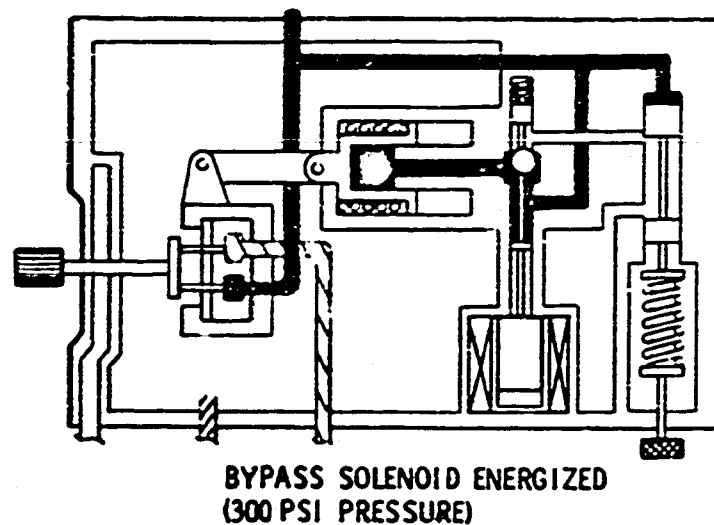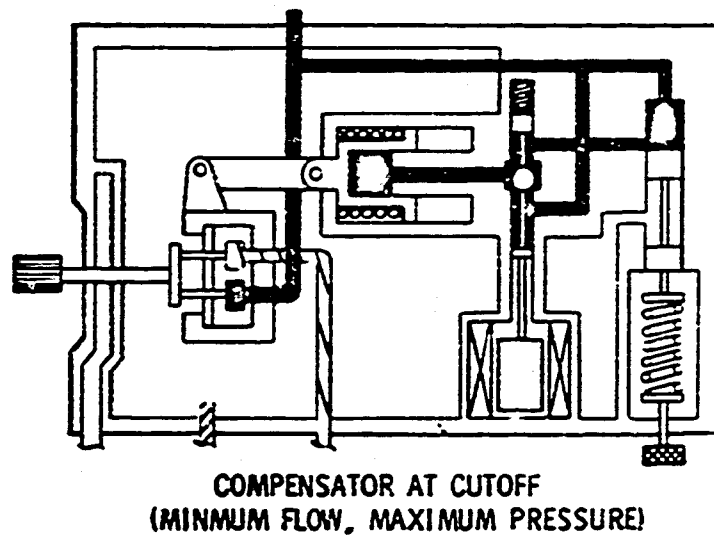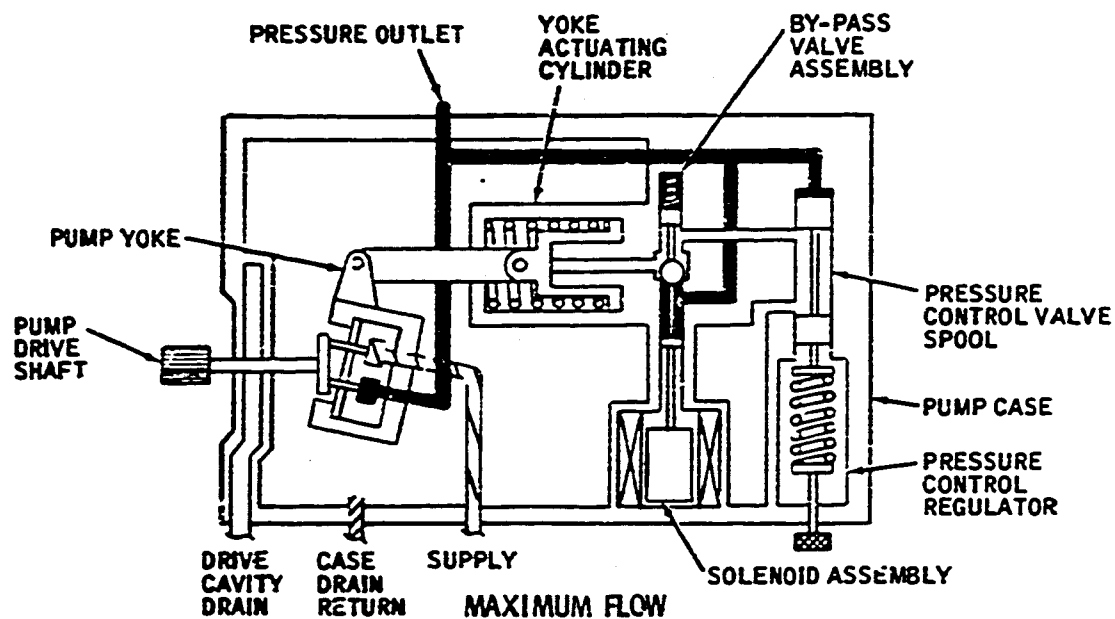

- PRESSURE
- CASE DRAIN
- SUPPLY
- DRIVE CAVITY DRAIN

HA2-837

Engine-Driven Hydraulic Pump Pressure Flow -- Schematic  
 Figure 13

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 17  
 Page 25

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The yoke control piston casing is an integral part of the pump case. Four self-locking nuts are used to hold the piston casing end-plate in position. The bypass valve assembly, consisting of the valve body and a solenoid, is mounted externally on the pump case, under the yoke control piston casing. This solenoid valve is provided with an electrical connector. A pressure control regulator is installed on the bypass valve body by means of four bolts. This regulator is cylindrical and is provided with an external adjustment screw. A lock screw is used to retain the adjusting screw after the adjustment has been made.
- (4) Hydraulic fluid enters the pump through an inlet port. Passages in the yoke carry the fluid to the valve plate, which ports the fluid to the cylinder block. The nine pistons in the cylinder block are actuated by the rotating drive shaft, thereby pressurizing the fluid. From the cylinder block, the fluid is routed to the outlet port of the yoke and then to the pump pressure lines. The pressure control regulator is actuated by pump output pressure that is bled to the regulator. The regulator meters the pressure to the yoke control piston, which positions the yoke.
- (5) The maximum pump pressure is determined by the adjustment of the pressure control regulator. The pressure control regulator allows maximum output flow (22.5 gpm at 3500 rpm) up to 2850 psi system pressure. When this pressure is reached, the yoke assembly starts to move towards the zero flow position.
- (6) Pressure continues to rise until the displacement is reduced from maximum flow to zero flow and 3000 psi is reached. The pump pressure stabilizes in accordance with system demand.

L. Engine-Driven Hydraulic Pump Check Valves (See Figure 10.)

- (1) Two check valves, rated at 3000 psi, are installed in the lines from each engine-driven hydraulic pump. One check valve is installed in the pressure line and the other is in the case drain line. The check valves in the pump pressure lines prevent reverse flow of hydraulic fluid through the pump, when the pump is inoperative or when external hydraulic pressure is supplied to the system. Access to the valves can be gained through an access door in the forward right apron of each inboard pylon. The valves are mounted on the exterior wall of the inlet box by means of the bulkhead fittings and retaining nuts.
- (2) Normal operating pressure will unseat the poppet, and fluid will flow through the valve. When pressure downstream of the valve exceeds pressure from the pump, the pressure, with the aid of the return spring, will seat the poppet. This prevents reverse flow of hydraulic fluid through the pumps.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


M. Engine-Driven Hydraulic Pump Case Drain Filter (See Figure 14.)

- (1) A line-type, micron filter, for use in a low-pressure hydraulic system, is installed in the engine-driven hydraulic pump case drain return line between the pump flow check valve and the hydraulic system reservoir. The case drain filter is installed on the aft surface of the rear spar opposite the leading edge of the inboard flap assembly. One filter is used for each engine-driven pump. Access is gained to the filter by lowering the flaps. A second check valve is installed adjacent to the filter in the downstream side of the case drain return line.
- (2) Externally, the filter is approximately 5 inches high and 2 inches wide, with ports marked inlet and outlet. The bowl is cylindrical in shape, with hex-shaped wrench flats at the lower end. A self-sealing, magnetic drain plug is installed in the bottom end of the filter bowl. The filter element is made of chemically treated paper.


N. Dual Filter and Relief Valve (See Figure 15.)

- (1) The hydraulic power system dual filter and relief valve consists of two filters and two relief valves installed in the same body. The unit filters the hydraulic fluid from the two engine-driven hydraulic pumps, and the pressure relief valves assure that excessive pressures do not build up in the pressure line from the pumps. The unit is located in the left main gear wheel well on the lower portion of the rear spar, approximately 1 foot outboard of the centerline shear web.
- (2) The unit consists of a casting with a flange-mounted pressure inlet port on each end. Two pressure outlets are located on the top of the casting. One outlet, centrally located, is the main pressure outlet to the system selector valve. The other, located to the left of the selector valve port, is the pressure outlet to the air pressure regulator-aspirator. The return outlet port for the relief valve portion of the unit is located on the center of the aft face of the body, canted upward. The nose gear return line is connected to a check valve installed in a return line port, located between the two filter bowls.
- (3) The pressure relief valves are located behind the pressure inlet ports and are connected to the return outlet port of the unit. The inlet from the nose gear return line is routed through the casting to the return outlet port.
- (4) If either of the filter elements becomes clogged, pressure above 3300 psi at the inlet port will unseat the poppet. Pressure above 3500 psi will allow full flow of 22.5 gpm to flow to the return port of the unit and back to the reservoir. The relief valves will reseal at approximately 3000 psi.
- (5) A check valve is installed in the system selector valve port to prevent reverse flow of pressure through the filter during auxiliary hydraulic pump operation.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

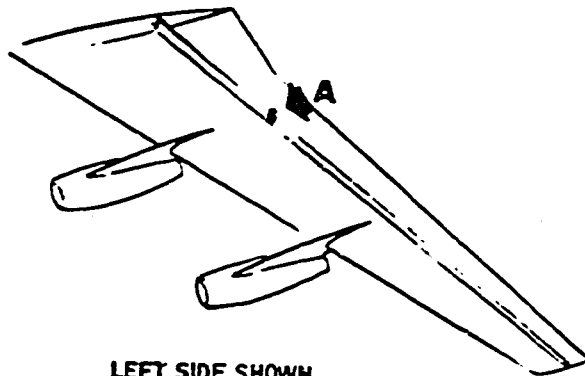

LEFT SIDE SHOWN  
 RIGHT SIDE OPPOSITE

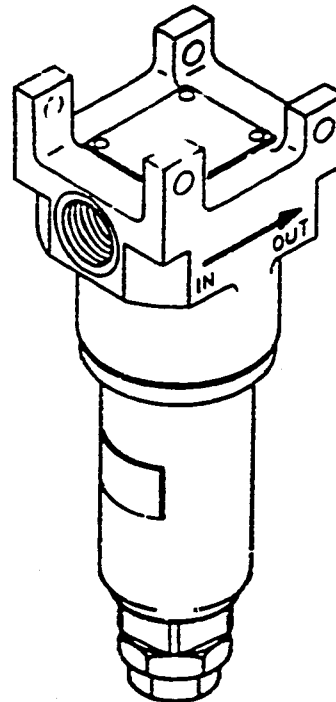


VIEW A

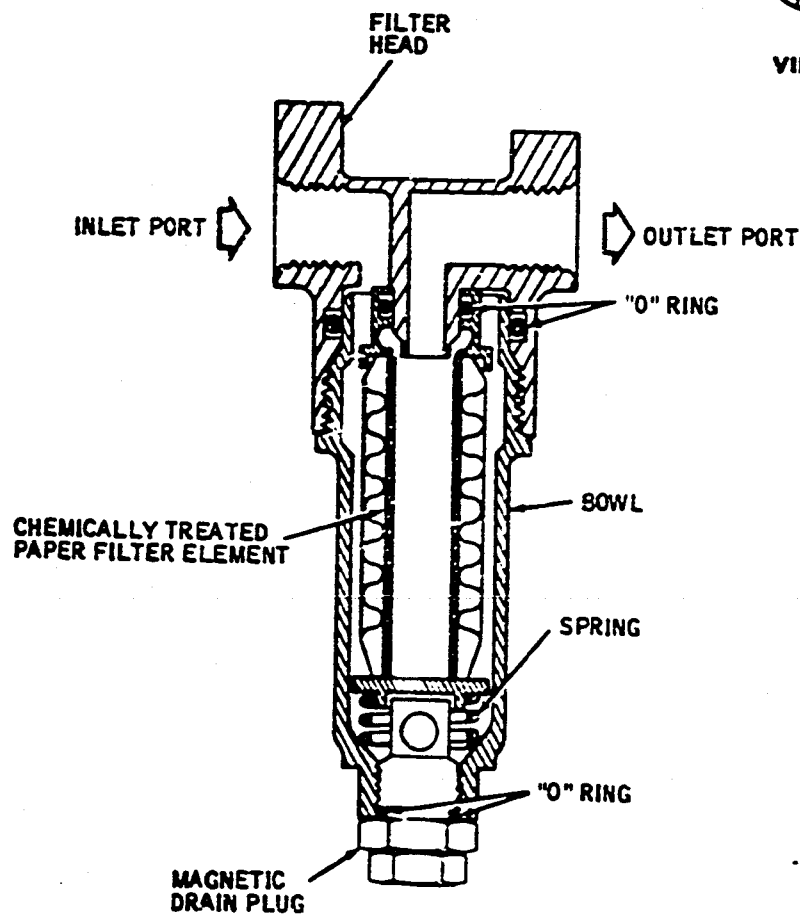

HA2-31

Engine-Driven Hydraulic Pump Case Drain  
 Filter -- Cutaway View  
 Figure 14

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

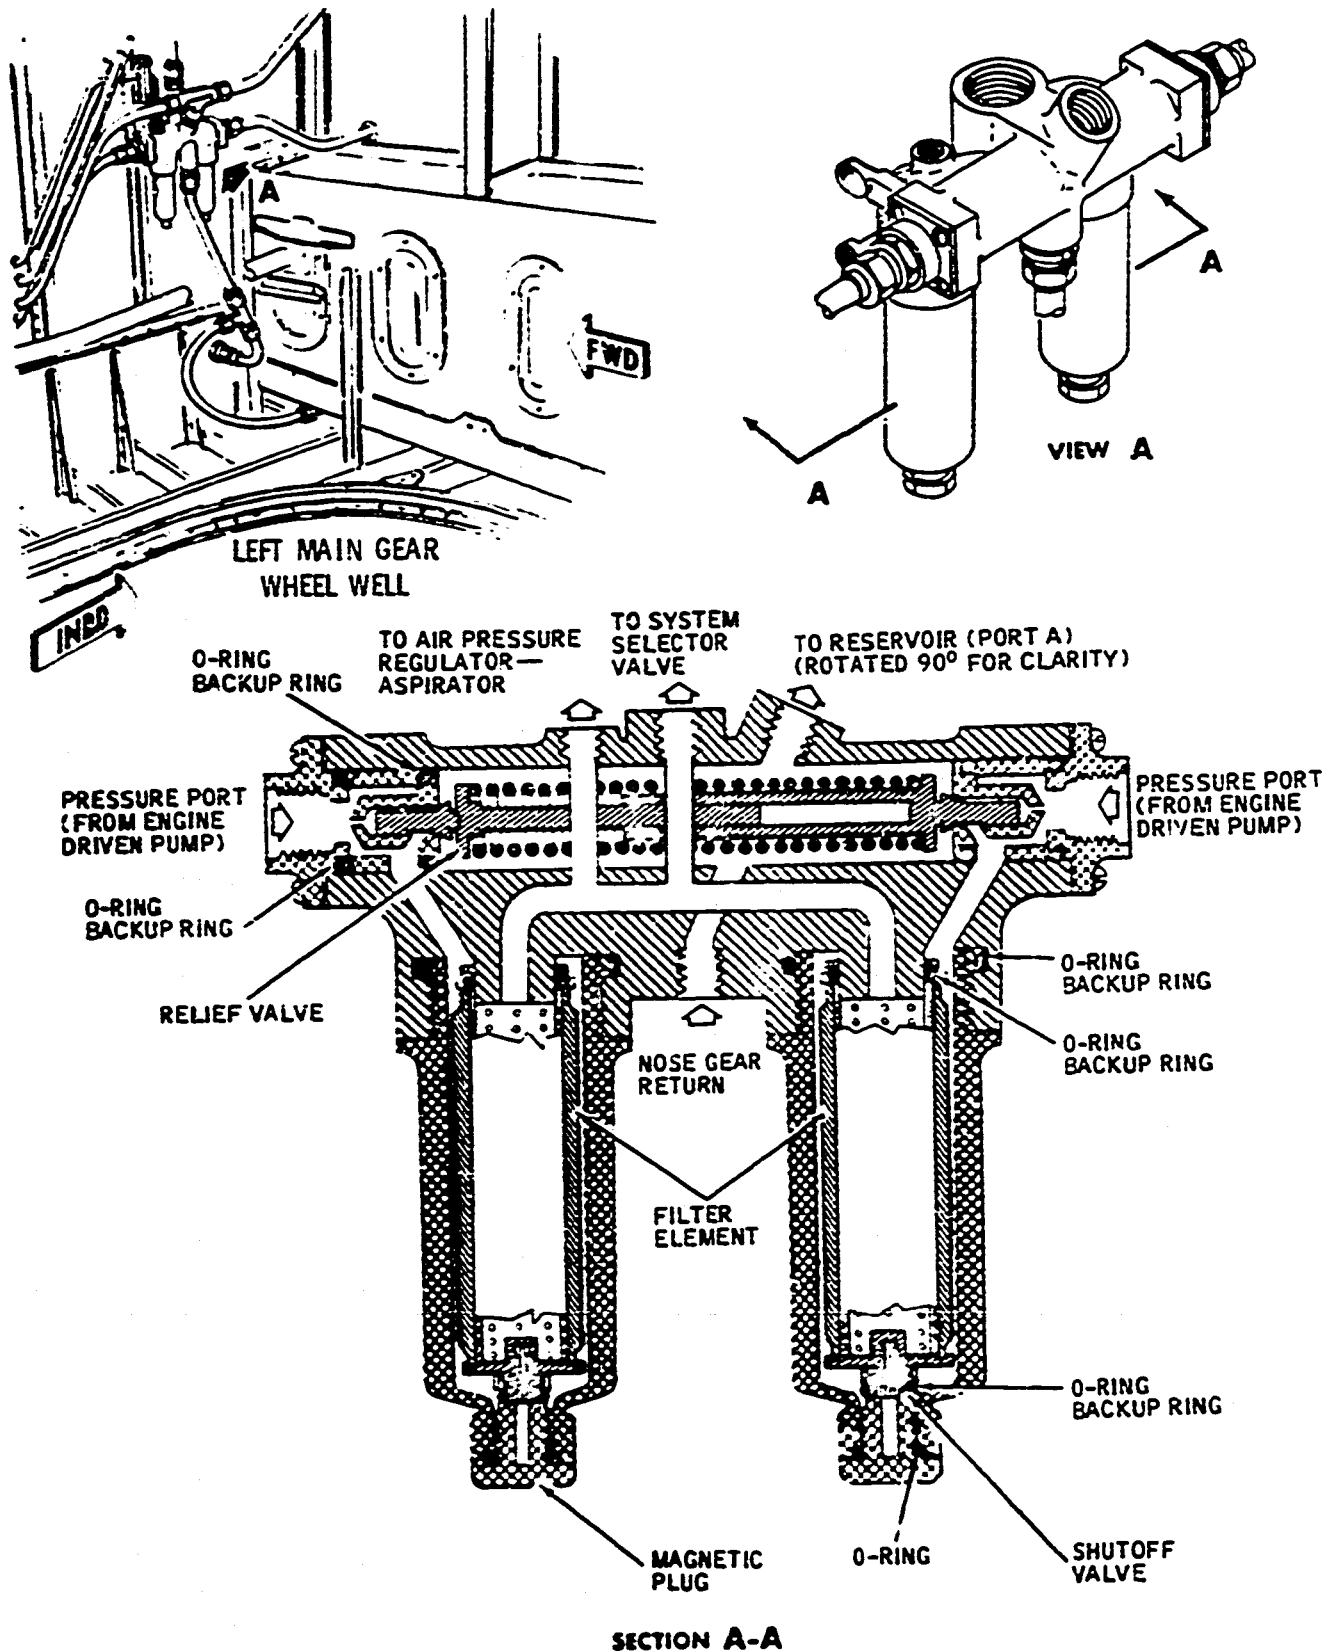

Dual Filter and Relief Valve -- Cutaway View  
 Figure 15

Jun 15/67

Printed in U.S.A.

HA2-20

29-10-0  
 CODE 17  
 Page 29

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


O. System Selector Valve (See Figures 16 and 17.)

- (1) The system selector valve is a 3-position valve which permits directional control of fluid under pressure. The valve is installed on the left hydraulic power manifold and is accessible through the left main gear inboard door.
- (2) The selector valve pressure-to-system port and the return port are directly ported to the manifold. The engine pump pressure enters the valve through a port on the large end of the valve, and the auxiliary pump inlet and alternate ports are located at the top, toward the aft end of the valve. The valve control crank is attached to a push-pull rod and a cable sector.
- (3) Operation of the system selector valve is controlled by a lever located on the right side of the system engineer's control pedestal. When the control lever is moved to the selected position, the cable system, through the sector and crank, operates the valve positioning lever to drive the slide spool assembly to the selected position. When the control lever is placed in the general system (normal) position, the selector valve is actuated, causing hydraulic fluid to enter the valve through the system pressure port. The fluid is then directed into the manifold through the pressure-to-system port. In the general system (normal) position, fluid from the auxiliary pressure port is also routed to the pressure-to-system port. In the bypass/general system position, the selector valve ports engine pump pressure into the manifold through the return port. In this position, the auxiliary pump pressure is ported to the general system. In the general system/main gear down and flaps position, pump pressure is routed through the alternate port, at the top of the valve, for alternate operation of the flaps and the landing gear downlock cylinders. Internal leakage provides lubrication for the moving parts of the valve.

P. Left Hydraulic Power Manifold (See Figure 18.)

- (1) The left hydraulic power manifold distributes fluid pressure from the hydraulic pump (any one of the three pumps), through control valves to the various airplane hydraulic subsystems. The left power manifold is located overhead in the left wheel well. Access to the left manifold is through the left main gear inboard door.
- (2) One valve-mounting pad is provided on the top of the manifold for the system selector valve. Four ports are provided on the manifold for connection of hydraulic pressure and return lines. Three of these ports are pressure outlet ports; one, located on the aft face of the manifold and one located on the bottom of the manifold port fluid to the flight controls. The third pressure outlet port, located on the bottom of the manifold, ports fluid directly to the priority valve, which in turn, ports fluid to the nosegear and to the right power manifold. The fourth, a return port, located immediately forward of the pressure line port on the bottom of the manifold, is connected by a line to a return port of the reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

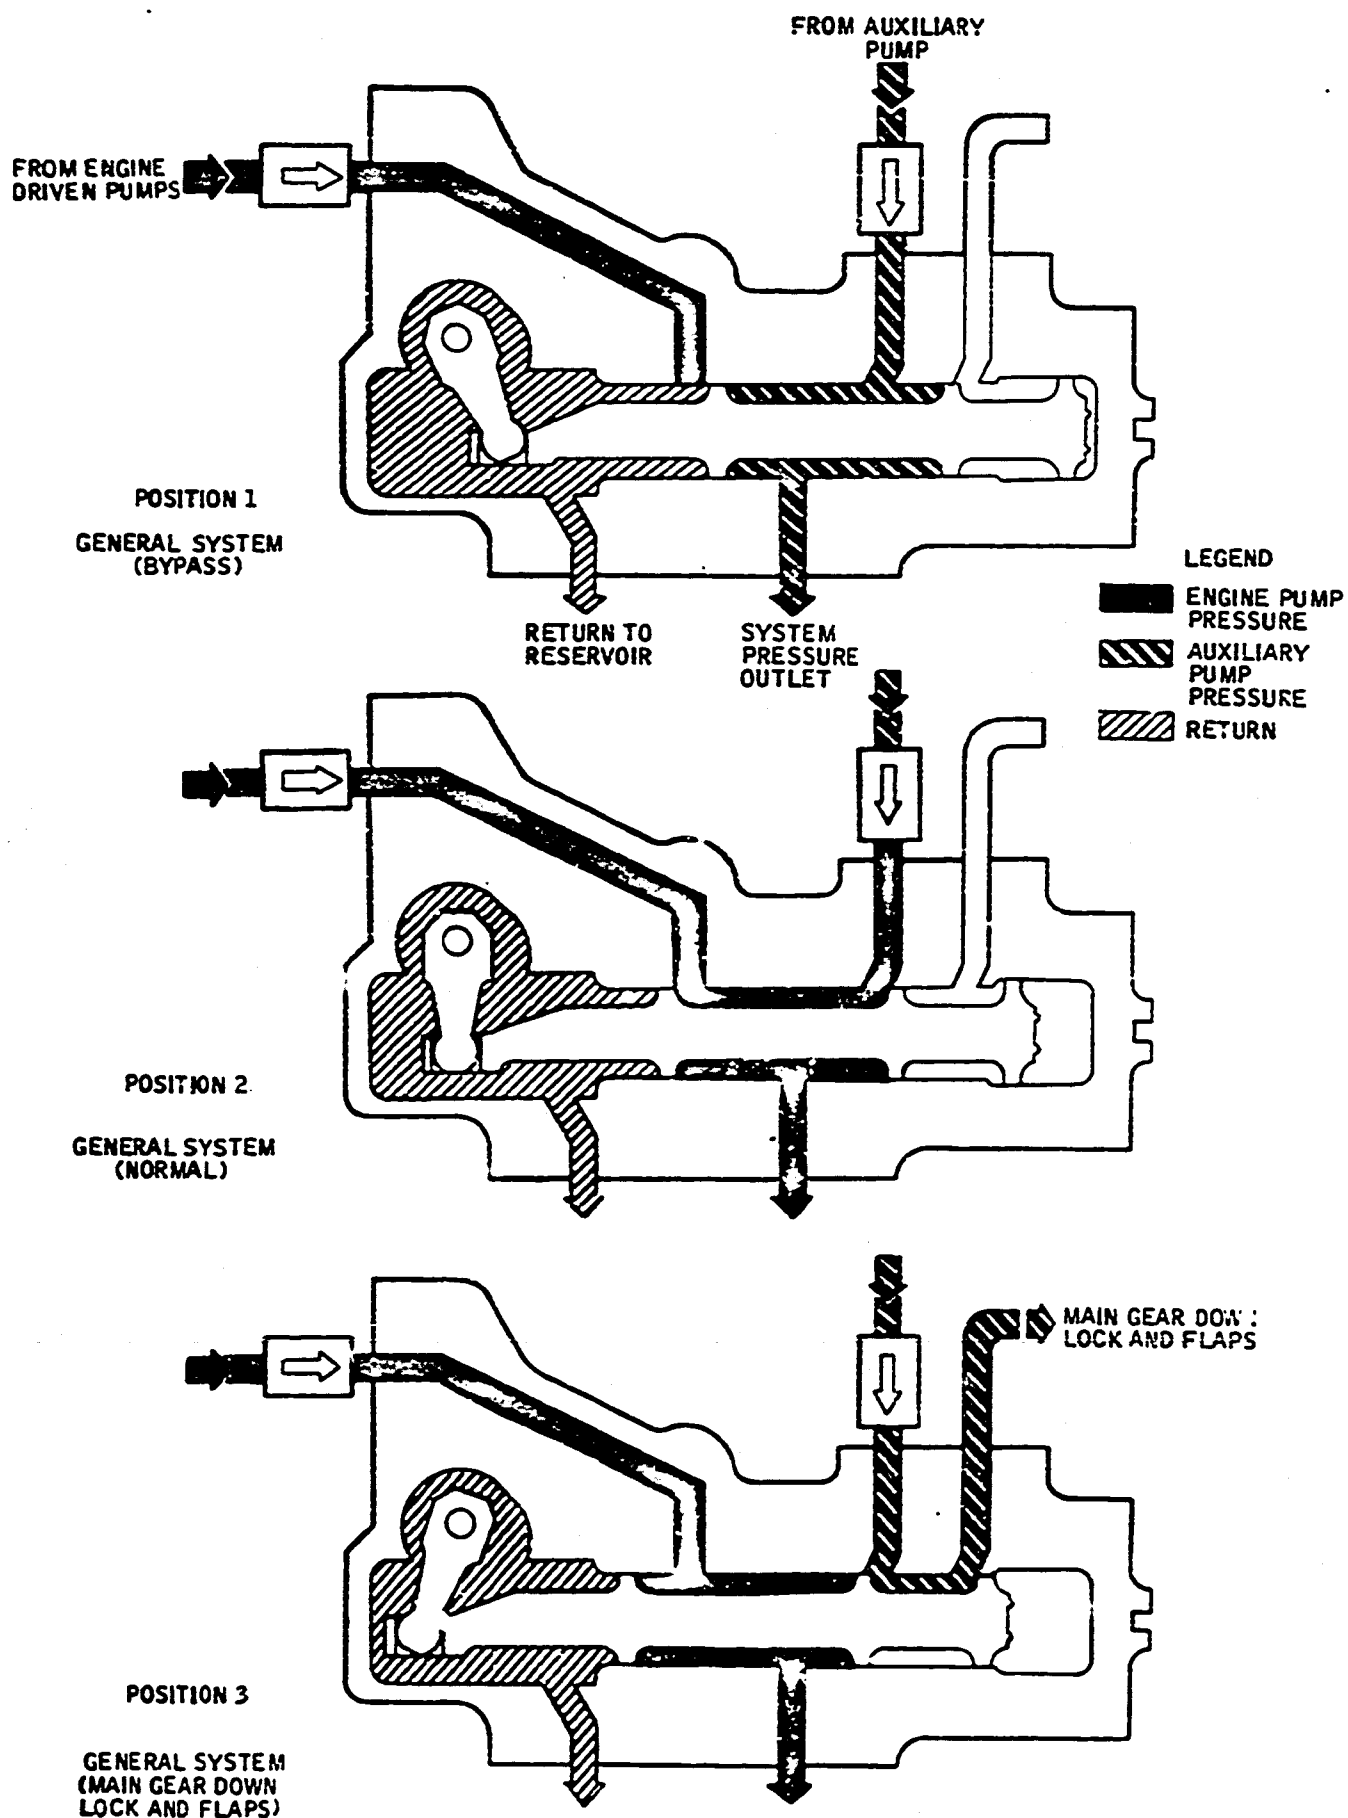

System Selector Valve -- Schematic  
 Figure 16



Jun 15/67

Printed in U.S.A.

HA2-26  
 29-10-0  
 CODE 17  
 Page 31





DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

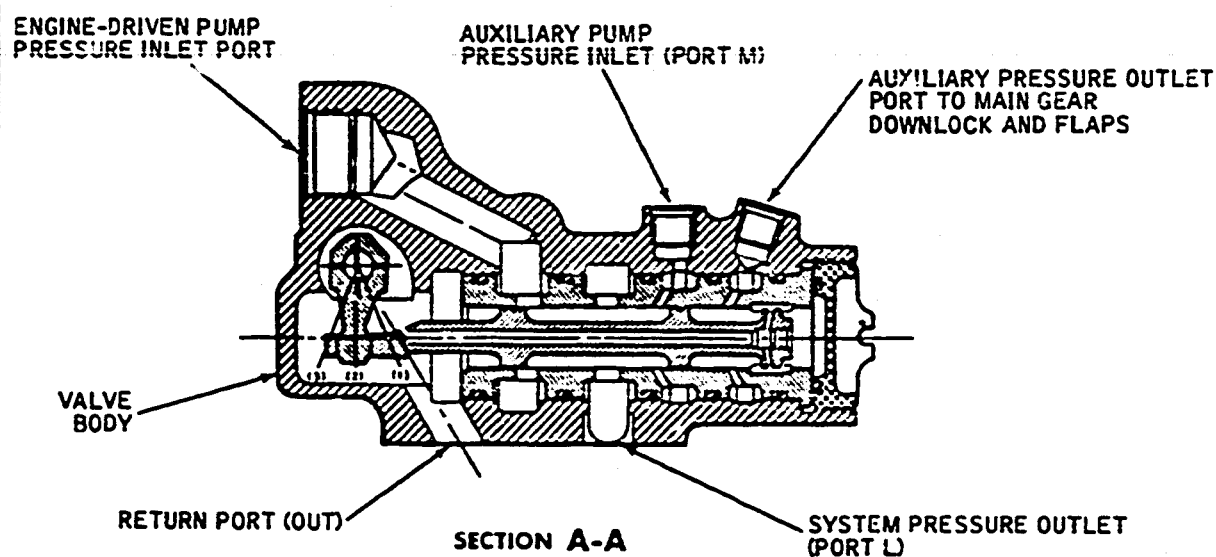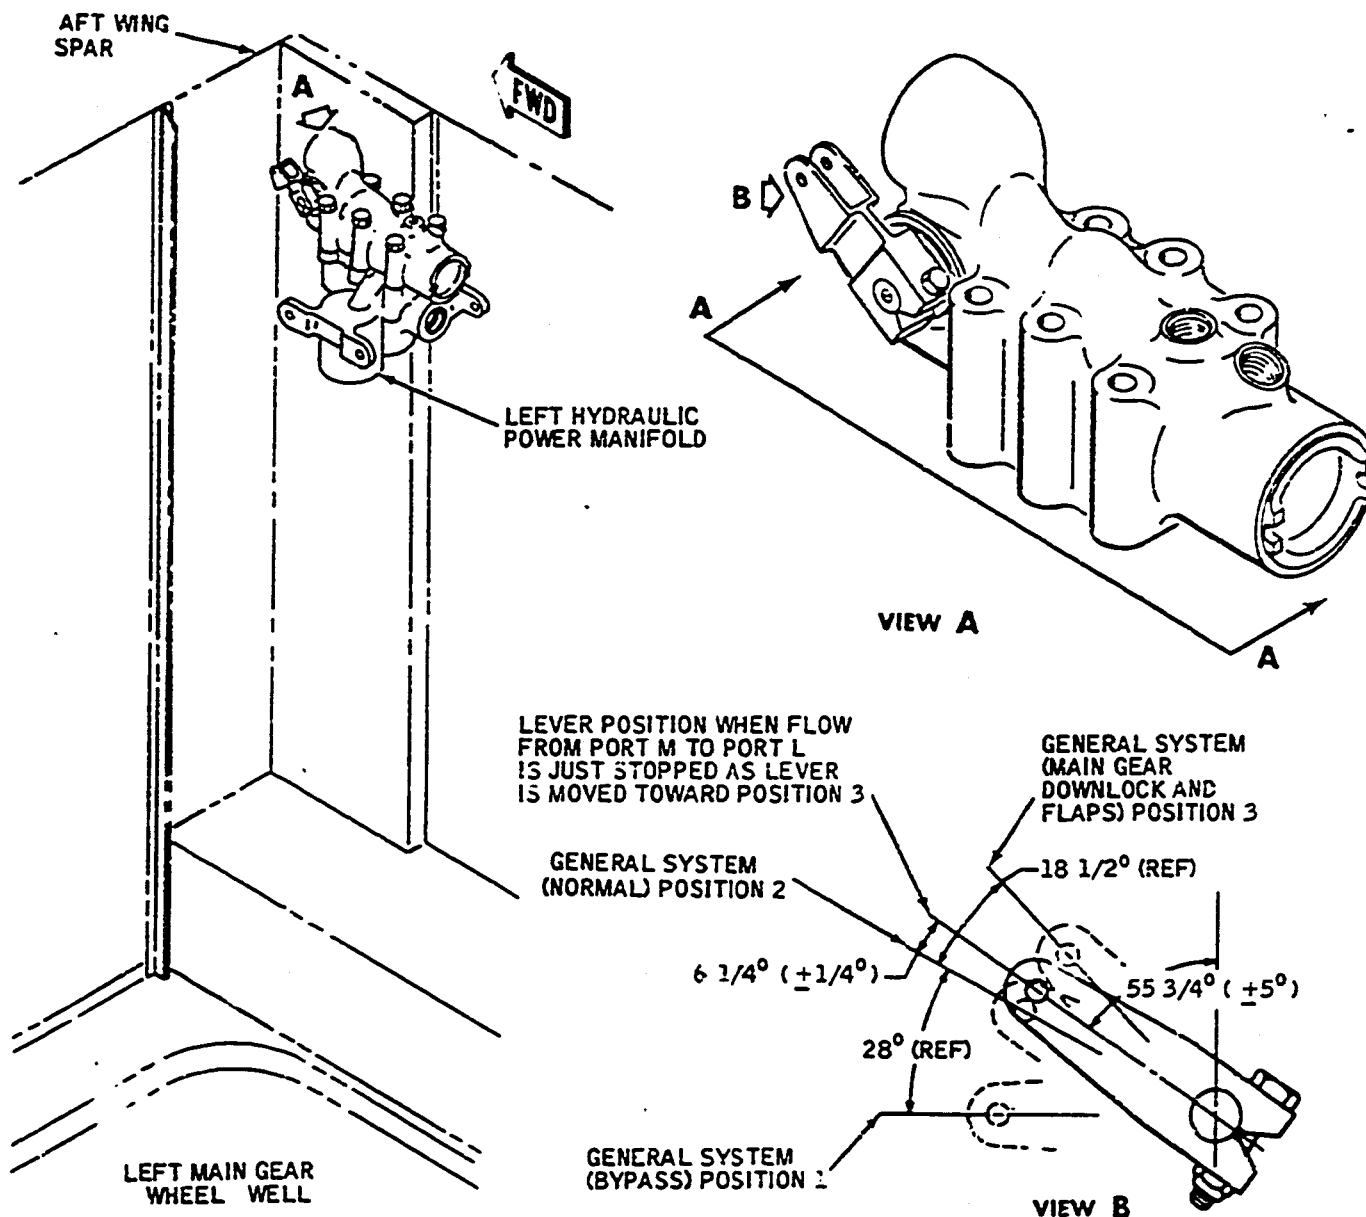

HA2-854A

System Selector Valve -- Cutaway View  
 Figure 17

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

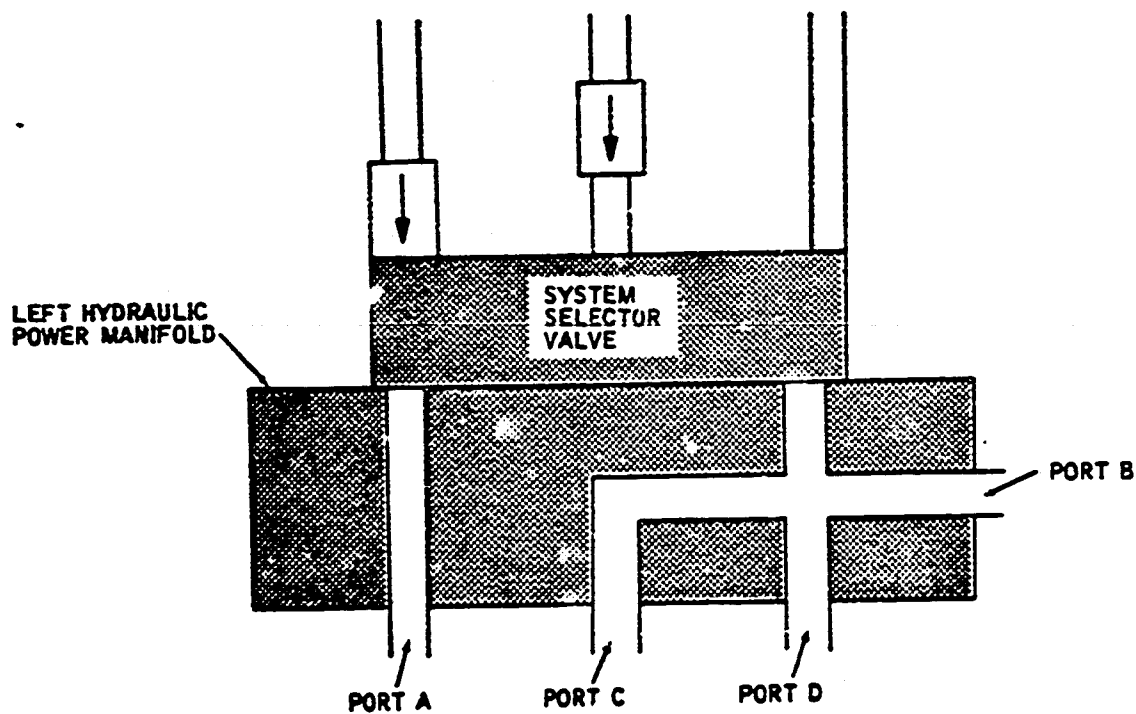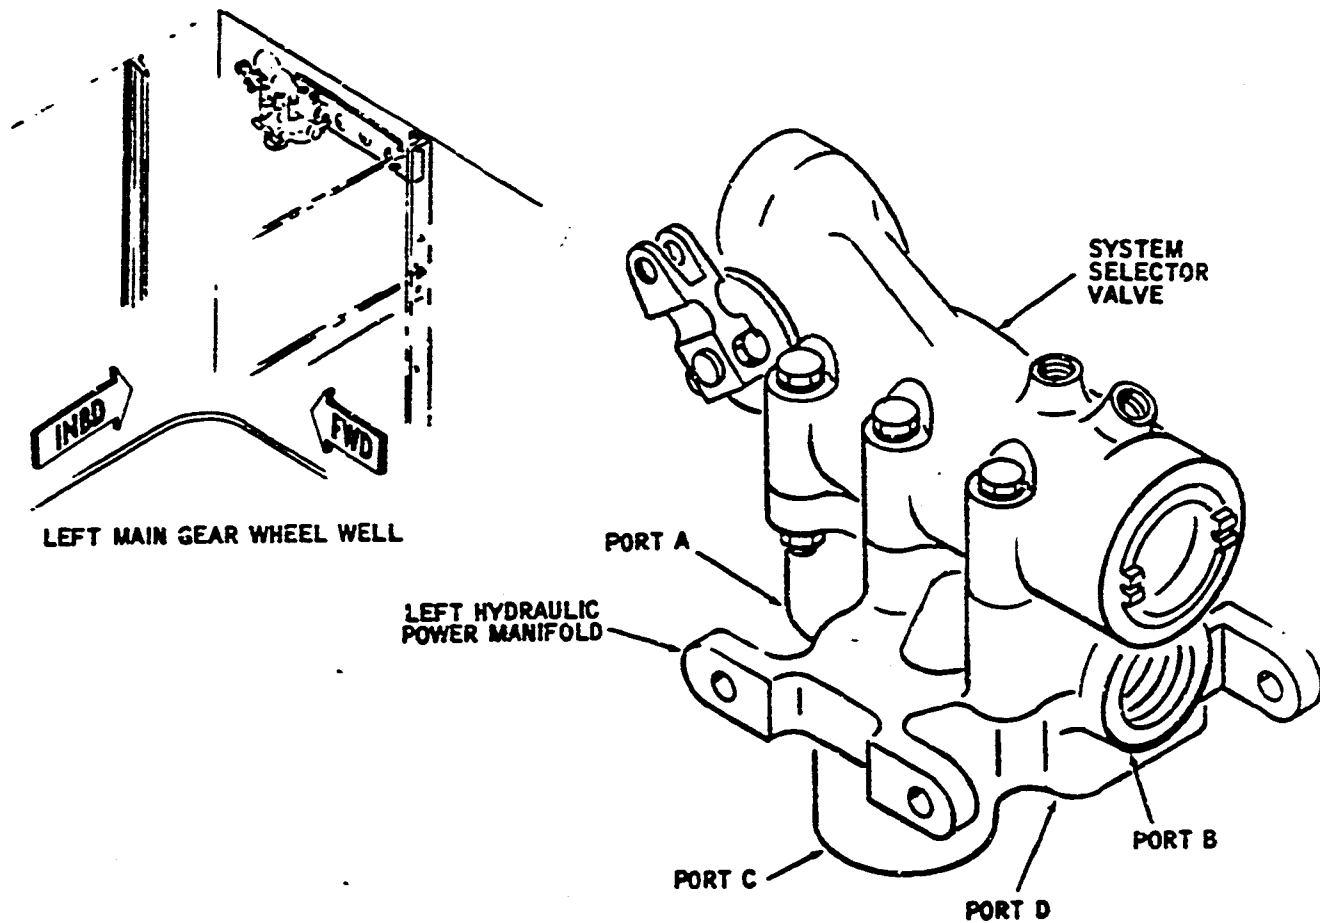

HA2-855

Left Hydraulic Power Manifold -- Schematic  
 Figure 18

Aug 1/68

Printed in U.S.A.

29-10-0  
 CODE 17  
 Page 33


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Q. Right Hydraulic Power Manifold (See Figure 19.)


- (1) The right hydraulic power manifold distributes fluid pressure from the hydraulic pumps (engine-driven or auxiliary, or any combination of these three pumps), through the control valves to the various hydraulic subsystems. The right hydraulic power manifold is located overhead in the right wheel well. The manifold is held in place with braces and is accessible through the right main gear inboard door.
- (2) The manifold contains passages for pressure and return fluid distribution, four check valves, ports for pressure and return lines, and mounting pads for the various control valves.
- (3) The right manifold receives fluid pressure from the left manifold. Pressure is ported through check valves to the wing flap control valve, to the slot control valve, to the main gear control valve, to the brake control valve, to the brake pressure transmitter, and to the brake accumulators.
- (4) Auxiliary hydraulic pressure is ported from the alternate port of the system selector control valve into port K in the right manifold. Port K is located inboard of the spoiler control valve. From port K, auxiliary hydraulic pressure is ported through a check valve to the downstream side of the wing flap control valve check valve and into the wing flap control valve for alternate operation of the wing flaps.
- (5) The return passage from the wing flap control valve ports fluid to return port A. The brake control valve return passage ports fluid into return line B through a two-way restrictor. The main gear control valve downline return fluid uses a separate port in the valve, bypasses the manifold, and returns the fluid directly to A return line to the reservoir. The upline in the main gear control valve uses the same return port, return port B, in the manifold as the brake control valve.

R. Deleted.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

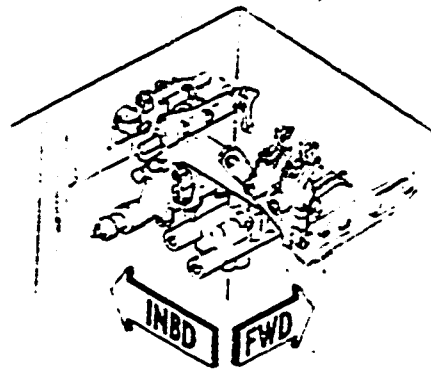

RIGHT MAIN GEAR  
WHEEL WELL

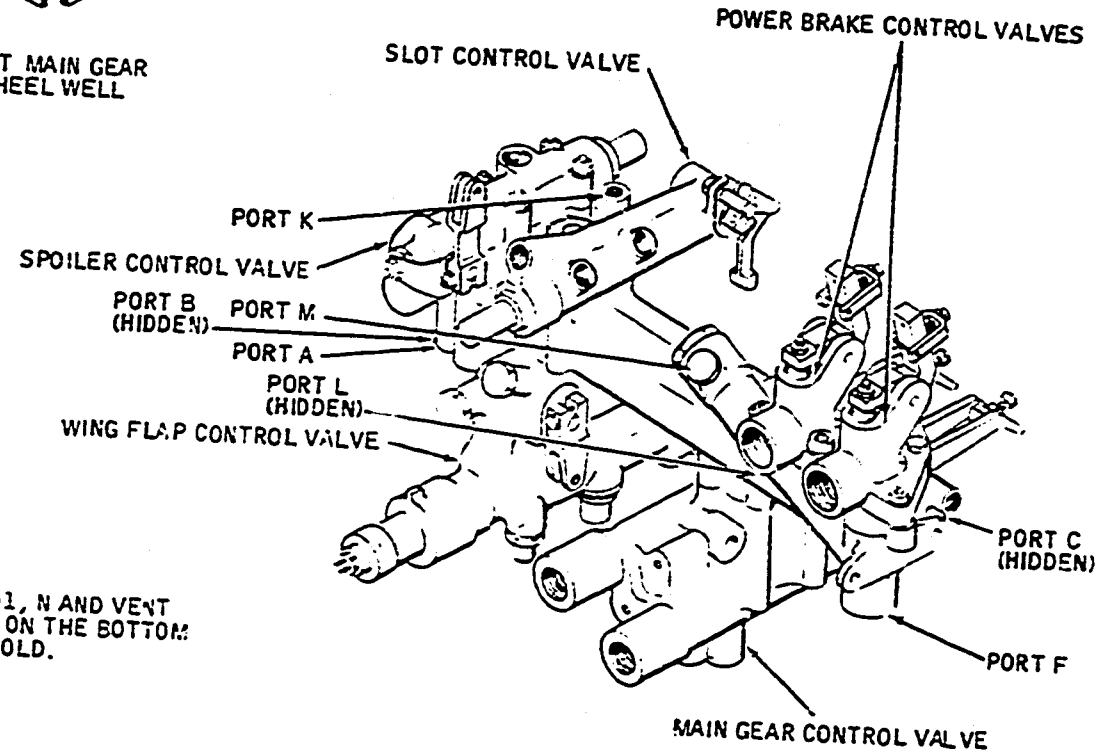

NOTE: PORTS B, C, D<sub>1</sub>, N AND VENT  
ARE LOCATED ON THE BOTTOM  
OF THE MANIFOLD.

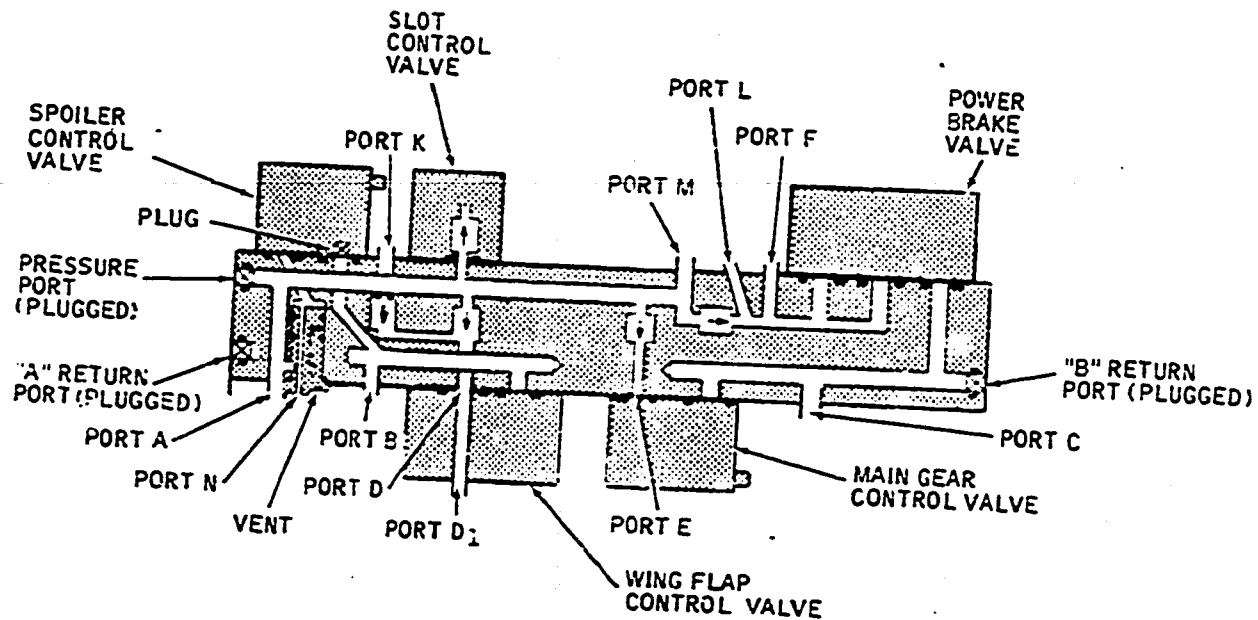

Right Hydraulic Power Manifold -- Schematic  
 Figure 19

HA2-29A

Nov 1/69

Printed in U.S.A.

29-10-0  
 CODE 17  
 Page 35

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


S. Hydraulic Power System Accumulator (See Figure 20.)

- (1) The hydraulic power system accumulator is a spherical, welded-steel, fluid and air bladder-separated container. The accumulator is installed in the pressure line of the hydraulic power system to provide a reserve supply of fluid under pneumatic pressure and to act as a shock absorber for system pressure surges.
- (2) The accumulator is located immediately aft of the left hydraulic power manifold and is accessible through the left main gear inboard door. It is mounted with two corner brackets and clamp blocks at the upper and lower port fittings.
- (3) The accumulator is installed in the pressure line of the hydraulic power system and is initially charged with 1000 psi of dry nitrogen. As the system pressure builds up, fluid is forced into the upper chamber of the accumulator, further compressing the trapped nitrogen to approximately 3000 psi. With full hydraulic system pressure, 3000 psi is indicated on the pressure gage adjacent to the filler valve. This reserve pressure smooths out any momentary lag in the pump's response to the system's demand for greater fluid flows. The accumulator permits a gradual rise in system pressure, thereby absorbing the shock of pump surges and relieving the piping and system operating units of high-impact loads. When the engine-driven hydraulic pumps are not operating, the accumulator provides system pressure (at a diminishing rate) until a quantity equal to the stored volume in the accumulator has been used by the system.

T. Hydraulic System Priority Valve (See Figure 21.)

- (1) The priority valve is located in the left wheel well near the left hydraulic power manifold. The valve is installed in the hydraulic pressure line, between the two power manifolds, downstream of the pressure supply takeoff port for the flight controls. The priority valve is a balanced relief valve which reserves initial hydraulic pressure (up to 2150 psi maximum) for use in the flight control systems. The valve consists of a body with an inlet, an outlet, and a breather port. Internally, the valve contains a poppet valve plate, a poppet, a poppet valve load-spring, a piston, a piston load-spring, and a piston load-spring housing. The piston load-spring housing chamber is vented to ambient air through a breather hole which is covered by a butyl rubber band.
- (2) The priority valve shuts off hydraulic pressure to all subsystems downstream of the left power manifold, whenever the hydraulic pressure drops below 1700 psi minimum. At this point, the valve closes to reserve the hydraulic pressure for use in the flight control systems, preventing them from reverting to manual operation. When the hydraulic pressure rises to 2150 psi maximum, the priority valve opens and supplies pressure to the right manifold and all subsystem downstream of the priority valve.
- (3) Hydraulic fluid from the left power manifold enters the priority valve through the inlet port, passes through the poppet valve plate holes, and

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

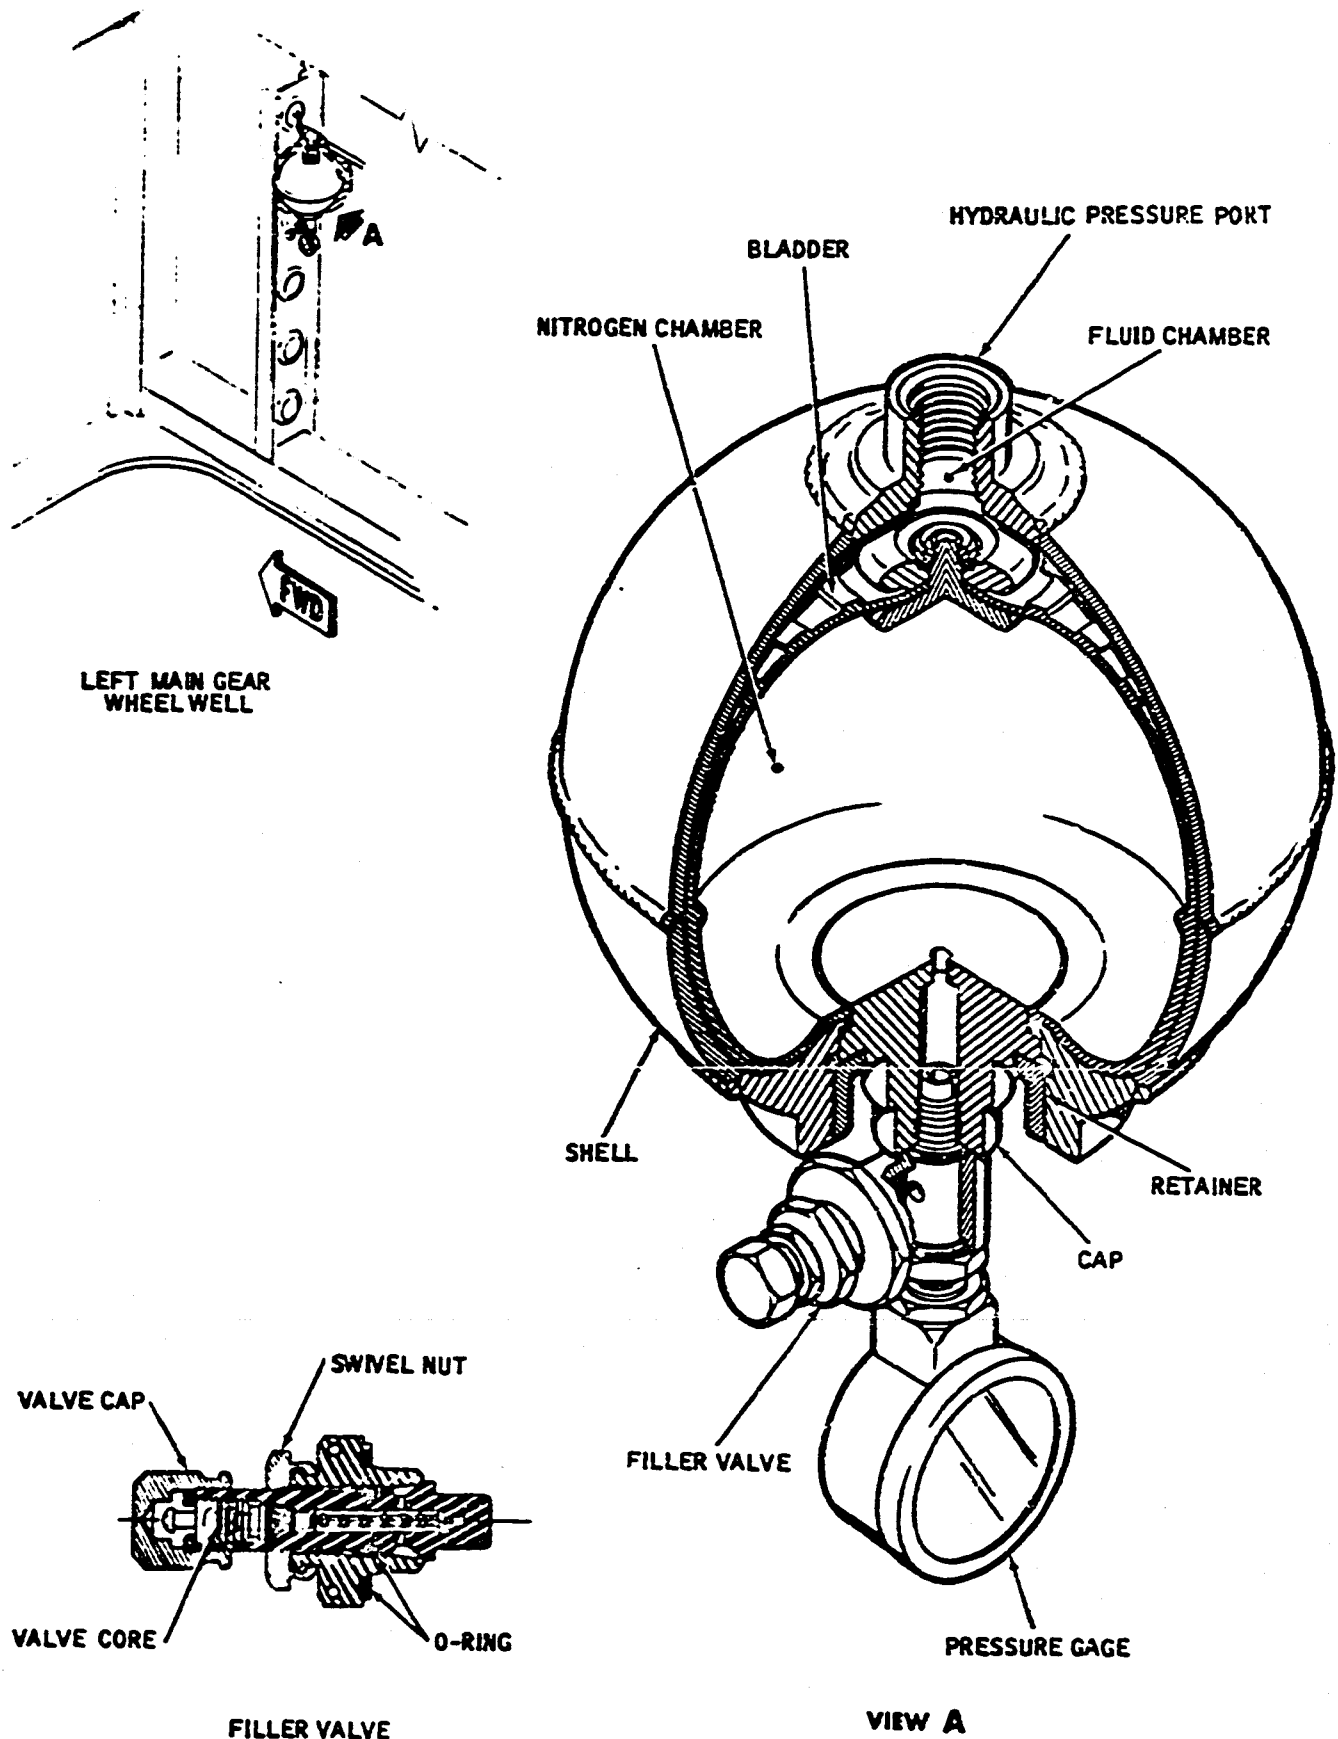

Hydraulic Power System Accumulator -- Cutaway View  
 Figure 20



HA2-30

29-10-0  
 CODE 17  
 Page 37

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

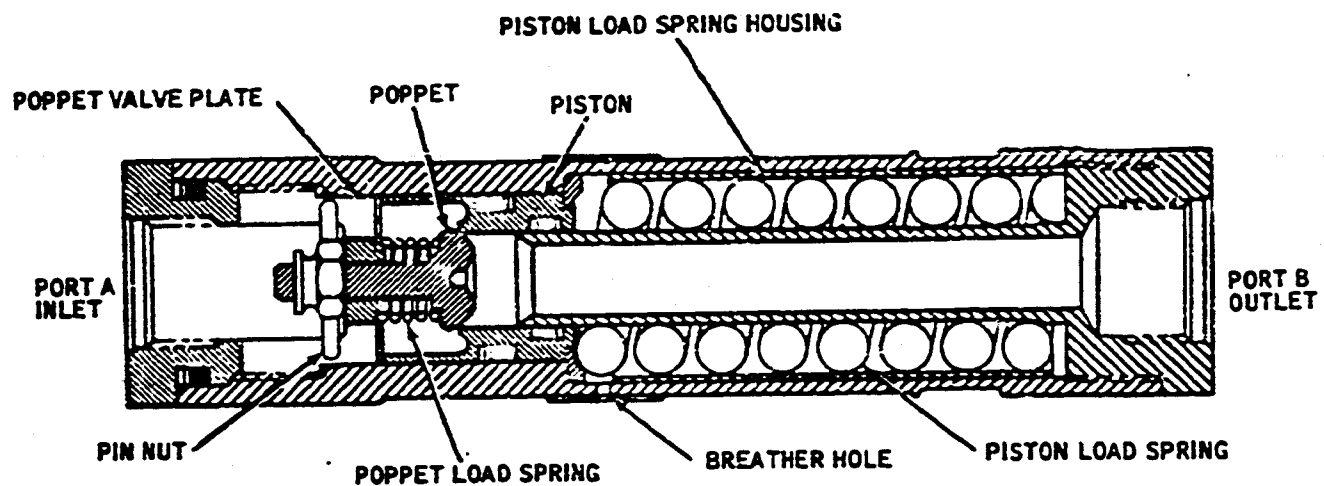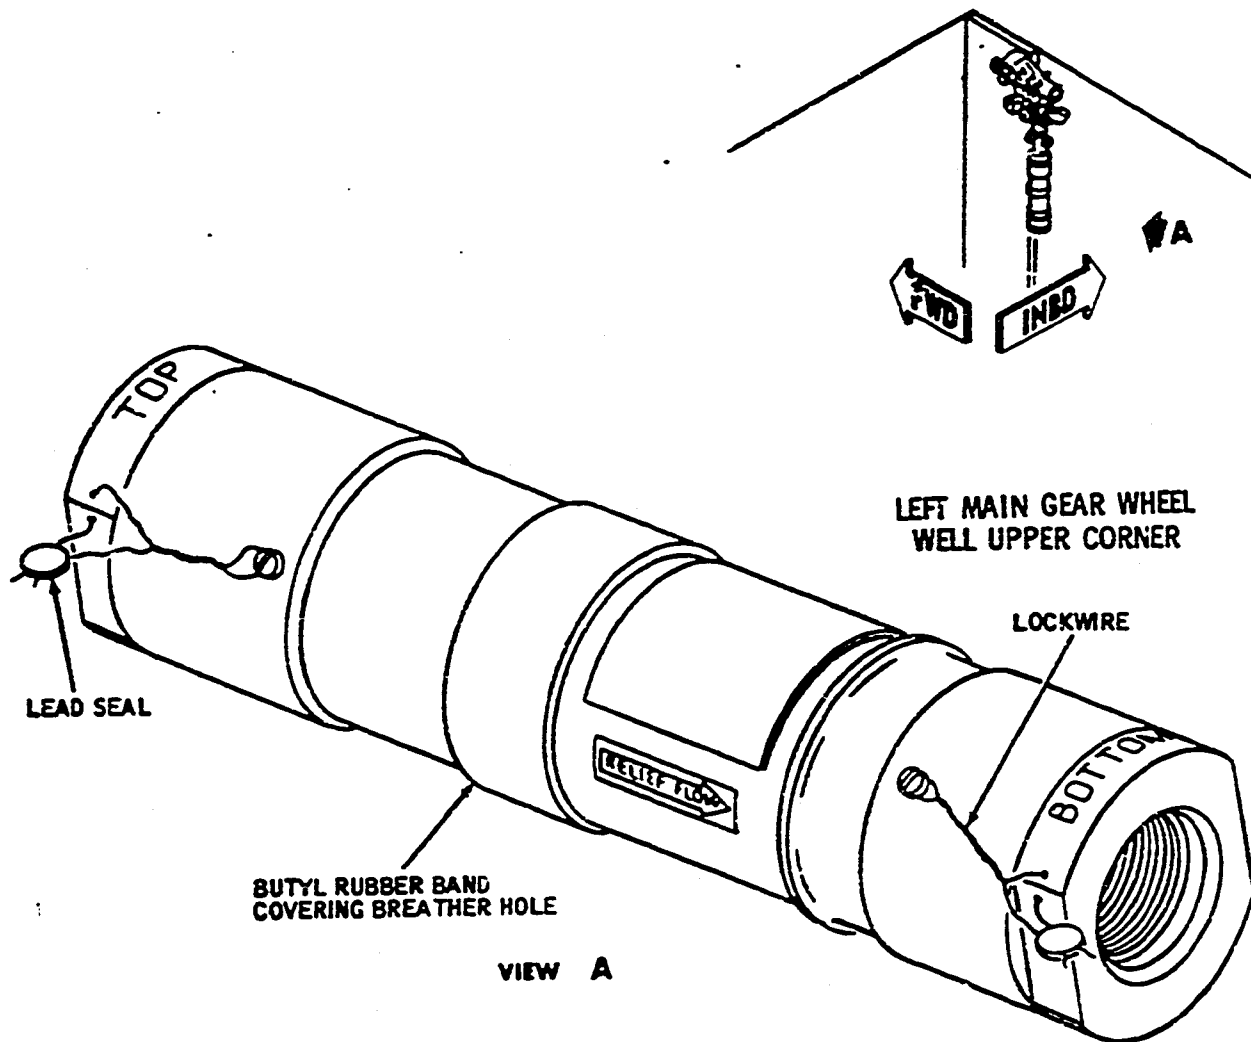

HA2-856

Hydraulic System Priority Valve -- Cutaway View  
 Figure 21

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

applies pressure against the piston. When sufficient hydraulic pressure is applied to the piston, the piston load-spring compresses, unseating the poppet and permitting full flow through the valve. When the hydraulic pressure decreases to less than the opposing force value of the piston load-spring, the load-spring forces the piston against the poppet and shuts off fluid flow through the valve.

- (4) The maximum flow available from both engine-driven hydraulic pumps is: 44 to 45 gpm at takeoff, climb, and cruise configurations; 26 to 28 gpm at descent, approach, and engine idle configurations.
- (5) Some of the larger hydraulic system demands are as follows:
  - (a) Gear retraction -- 17 gpm (10 - 12 seconds)
  - (b) Gear extension -- 14 gpm (10 - 12 seconds)
  - (c) Wing flaps down -- 8 gpm (10 seconds)
  - (d) Wing flaps up -- 3 gpm (22 seconds)
  - (e) Horizontal stabilizer -- 7 gpm
  - (f) Ailerons -- 17 gpm (25°/second)
  - (g) Rudder -- 3 gpm (25°/second)
- (6) There are various combinations of hydraulic system operations which could cause momentary reversion of the flight controls to manual operation. To prevent reversion to manual operation, the priority valve assures that the left power manifold receives all the hydraulic fluid pressure under conditions of very large flow demands.

#### U. Hydraulic System Selector Control Lever

- (1) The hydraulic system selector control lever is a manually actuated, mechanical lever detented to three positions. The lever provides a mechanical means, through cables, for positioning the system selector valve and the auxiliary hydraulic pump supply selector valve. The hydraulic system selector control lever is located on the system engineer's control pedestal. The lever is attached to a drive sector, located on a common shaft with the other control pedestal sectors. The lever and sector are accessible through the cover plates on the system engineer's pedestal.
- (2) To put the hydraulic power system in the bypass condition, the system selector control lever is lifted out of detent and moved to bypass/general system position. At the same time, the cable moves the sector and pushrod of the system selector valve to the No. 1 position. The pushrod positions the system selector valve to the No. 1 bypass position. At the same time, the cables from the system selector valve sector move



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

the auxiliary pump supply selector valve sector to No. 1 (auxiliary) position. The auxiliary pump supply selector valve remains in the auxiliary supply position through the idle feature of the sector rigging. In this condition, the engine-driven pump pressure is ported to the reservoir and the auxiliary pump supplies pressure to the general system. In this position, the fluid is supplied to the auxiliary pump from the low standpipe in the hydraulic system reservoir. To put the system into the alternate condition, the selector control lever is lifted out of detent and moved to the general system/main gear down lock and flaps position. The cables move the system selector valve sector to the No. 2 (alternate) position. The system selector valve sector moves the cables rotating the auxiliary pump supply selector valve sector to the No. 3 (alternate) position. As the sector rotates, the end of the arm moves away from the idle position. This positions the valves to the alternate position, supplying fluid to the auxiliary pump from the auxiliary pump alternate reservoir. In this position, fluid from the auxiliary pump is ported to the wing flap control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported to the general system.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - DESCRIPTION AND OPERATION

1. General

A. Description (See Figures 1 and 2.)

- (1) The hydraulic power system receives fluid pressure from the engine-driven hydraulic pumps, one installed on each inboard engine. The electrically driven auxiliary pump is used to supplement the engine-driven pumps, or to independently supply the system with fluid pressure.
- (2) The hydraulic system reservoir, located in the left wing root, has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir is used for fluid, and 1/10 is used for foam space. A separate air chamber is installed in the reservoir system to provide for a greater fluid capacity in the main reservoir. A reservoir filler assembly is installed in the piping between the reservoir and the air chamber and has a vent line from the filler neck to the tee at the top of the reservoir sight gage. The reservoir is pressurized to 30 to 35 psi by bleed pressure from the engine-driven pumps through an air pressure regulator-aspirator.
- (3) The engine-driven pumps receive fluid from the pressurized main reservoir through respective engine hydraulic fire shutoff valves. The engine hydraulic fire shutoff valves are normally open and can be mechanically controlled from the flight compartment. The pumps supply fluid pressure through respective check valves to the dual filter and relief valve. Some of the fluid from the filter is ported through the regulator-aspirator to pressurize the reservoir. Most of the fluid is routed through a check valve to the system selector valve, and then to the left and right hydraulic power manifolds. The manifolds distribute the fluid pressure to the subsystems.
- (4) Hydraulic fluid is normally supplied to the auxiliary hydraulic pump from a low standpipe in the main reservoir. During alternate operation, the auxiliary hydraulic pump receives fluid supply from the auxiliary pump alternate reservoir, which is located just aft of the auxiliary pump. From these reservoirs, the fluid is ported through the auxiliary pump selector valve which is mechanically controlled from the flight compartment by the system selector control lever. When operating, the auxiliary hydraulic pump supplies fluid pressure to the subsystems through the system selector valve which is also controlled by the system selector control lever in the flight compartment. A filter and check valve are installed in the line from the auxiliary pump to the system selector valve.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) An accumulator is installed in the pressure line to the subsystems to provide a reserve supply of fluid and to act as a surge damper for the system.
- (6) Engine-driven pump fluid pressure is routed through the system selector valve to the left power manifold, where it is distributed to some of the subsystems and through the priority valve to the right power manifold. Fluid pressure from the right power manifold is distributed to the remaining subsystems.
- (7) The priority valve is a spring-loaded, poppet-type, balanced relief valve installed in the line downstream of the left power manifold. The priority valve's function in the system is to prevent the flight control systems from reverting to manual operation during high demands on the hydraulic system.
- (8) A fluid pressure transmitter, located in the nosewheel well, senses the system pressure, which is indicated on the hydraulic system pressure indicator in the flight compartment.

**B. Normal Operation**

- (1) Fluid is supplied to the hydraulic system from the pressurized hydraulic system reservoir. For operation of the hydraulic system under normal conditions, 8.1 US gallons (6.7 Imperial gallons; 30.6 liters) of hydraulic fluid are available to the engine-driven hydraulic pumps, and 12.9 US gallons (10.7 Imperial gallons; 48.8 liters) are available to the auxiliary hydraulic pump. Supply lines from the main reservoir carry fluid to each inboard pylon through normally open engine hydraulic fire shutoff valves to the engine-driven hydraulic pumps. Fluid is supplied to the auxiliary hydraulic pump from the main reservoir through a low standpipe at the base of the reservoir. Fluid is carried from the reservoir through the auxiliary pump selector valve to the auxiliary hydraulic pump.
- (2) The engine-driven hydraulic pumps supply full system pressure (3000 psi nominal) at any given engine speed, from idle to full power. The output flow of the pump is varied by sensing pressure from the outlet side of the pump. Each engine-driven pump contains a solenoid-operated bypass valve which, when energized, bypasses the pressure control regulator of the pump and ports fluid to the pump yoke control piston which feathers the pump. When the pump is feathered, flow rate is reduced to almost zero (1.0 gpm) and to a pressure of approximately 300 psi. Half of this flow maintains pump lubrication and cooling through internal leakage. This leakage is returned, through a check valve, the engine-driven pump case drain line filter, and another check valve to the case drain return port of the reservoir. The pressure fluid from each pump passes through a check valve to the dual filter and relief valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

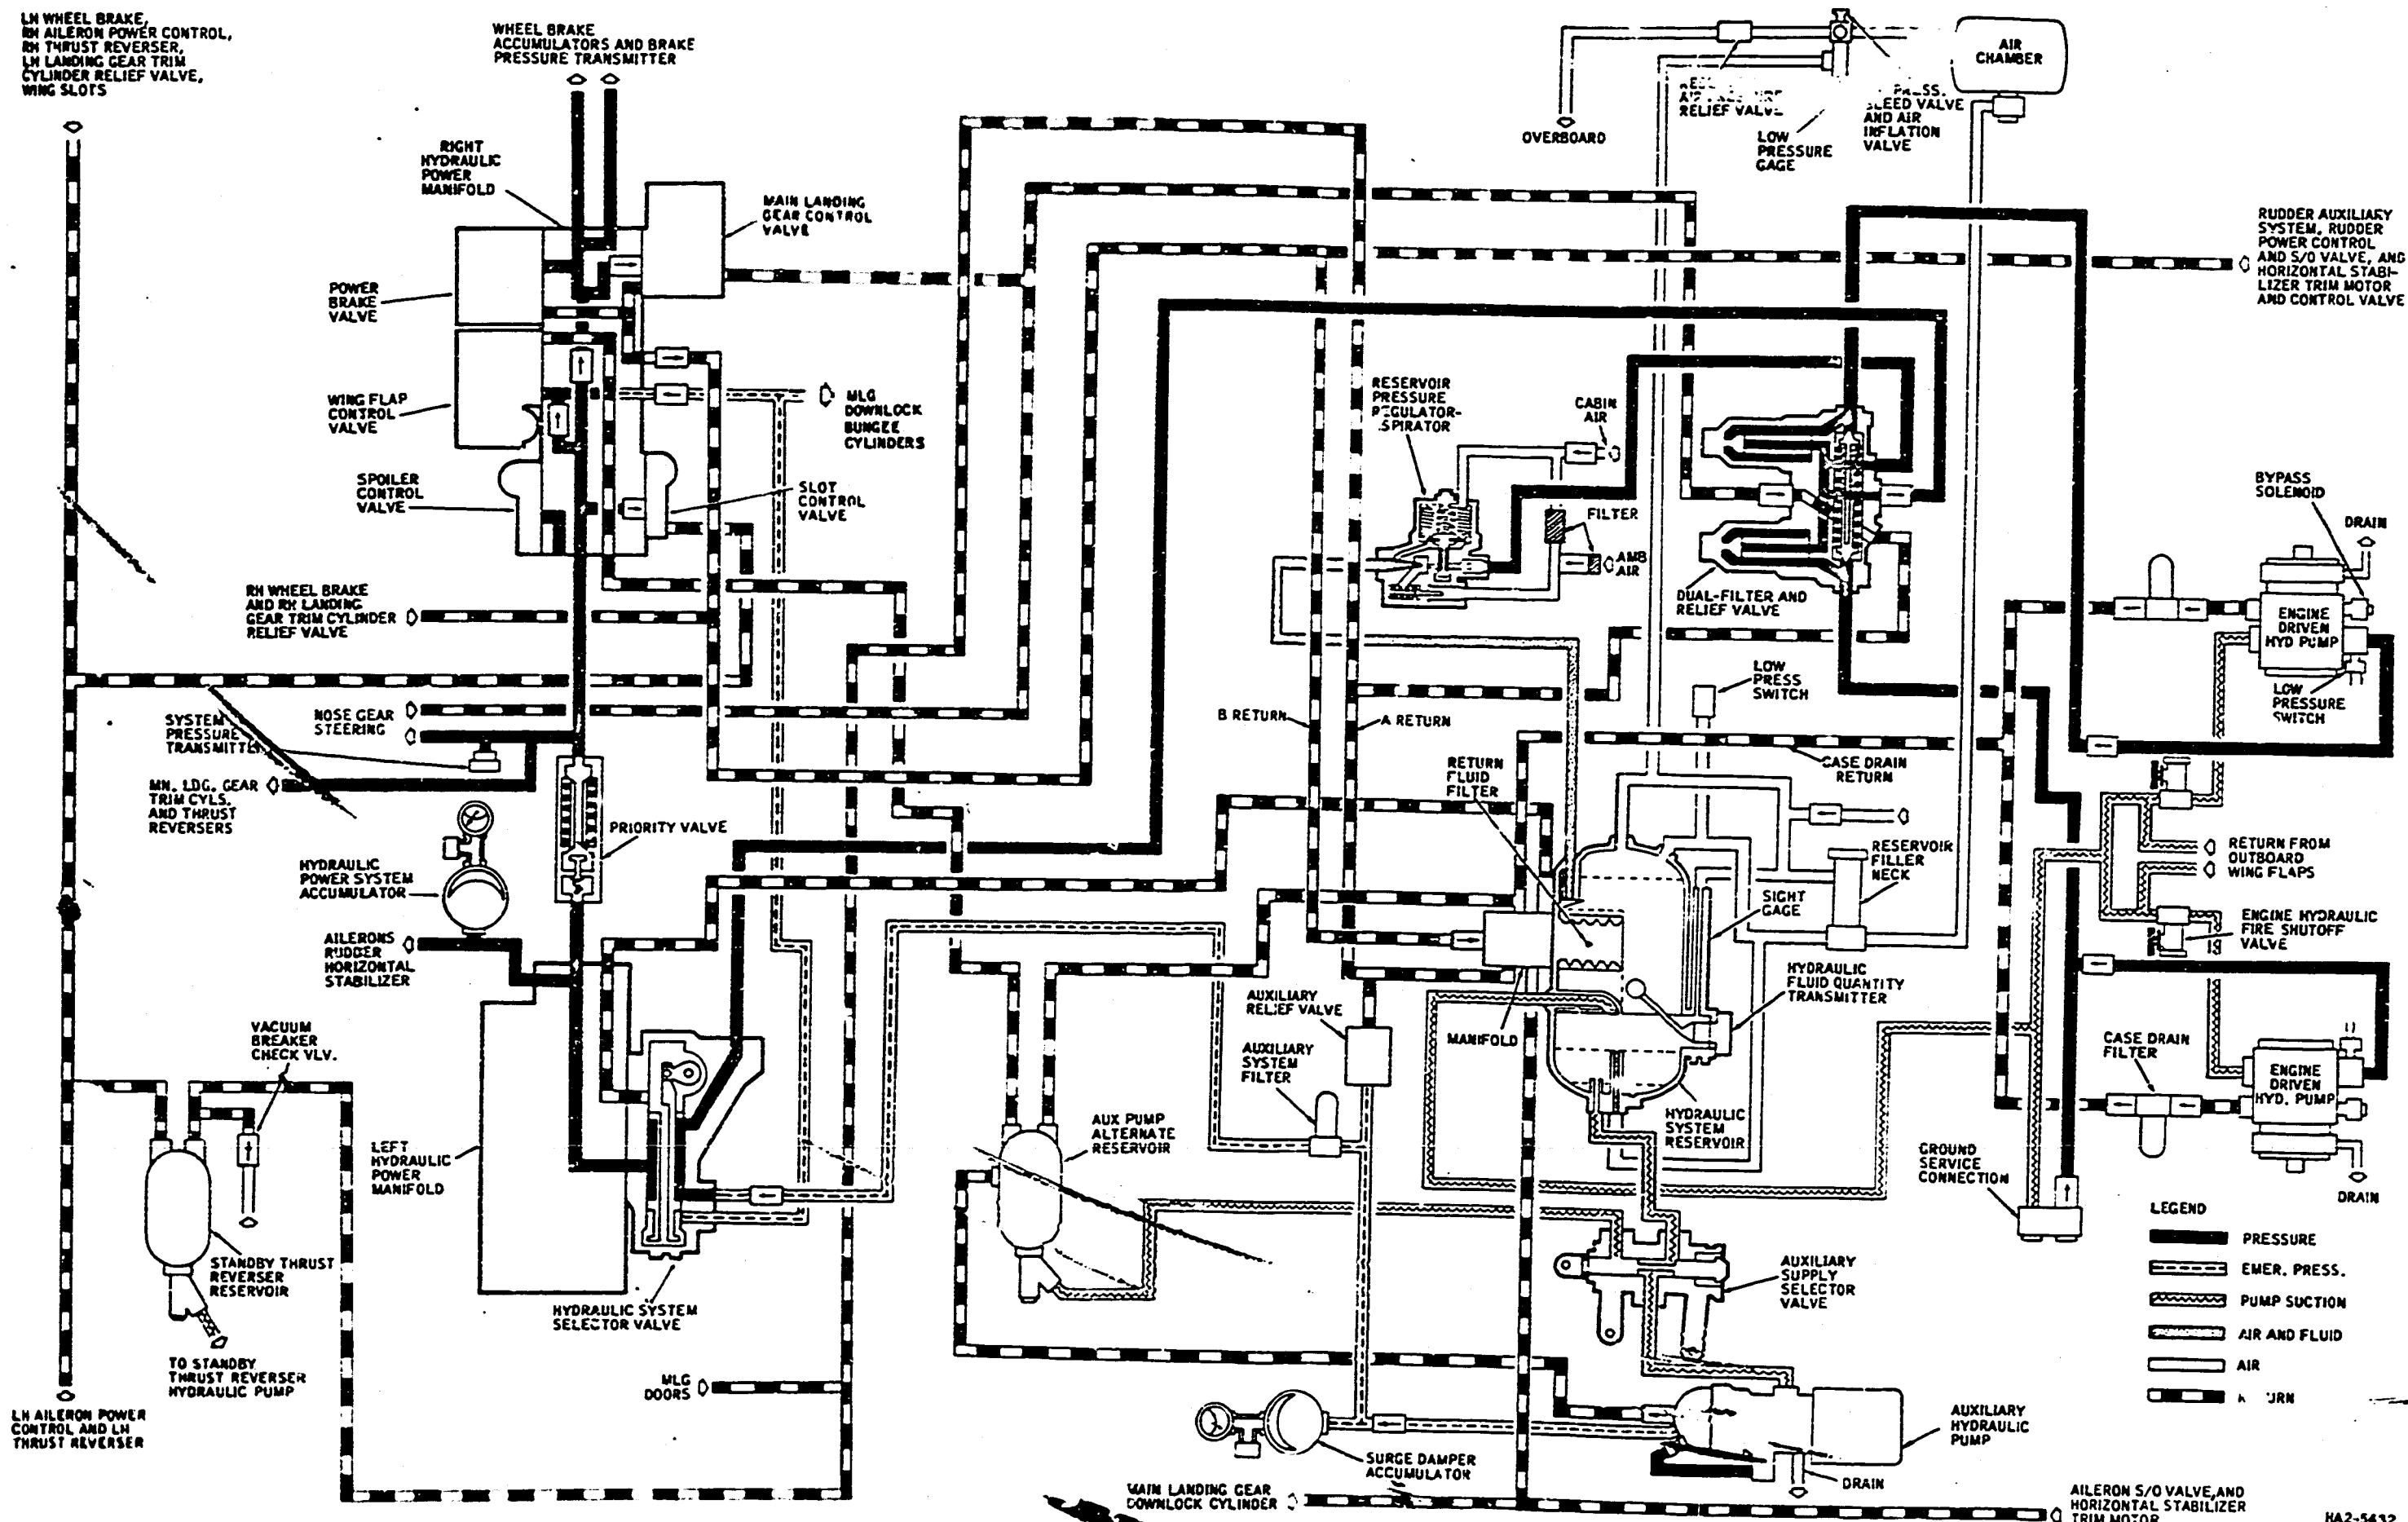

Hydraulic Power System -- Schematic Diagram  
 Figure 1


29-10-0  
 CODE 18  
 Page 3

Aug 1/68

Printed in U.S.A.

HA2-5432

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

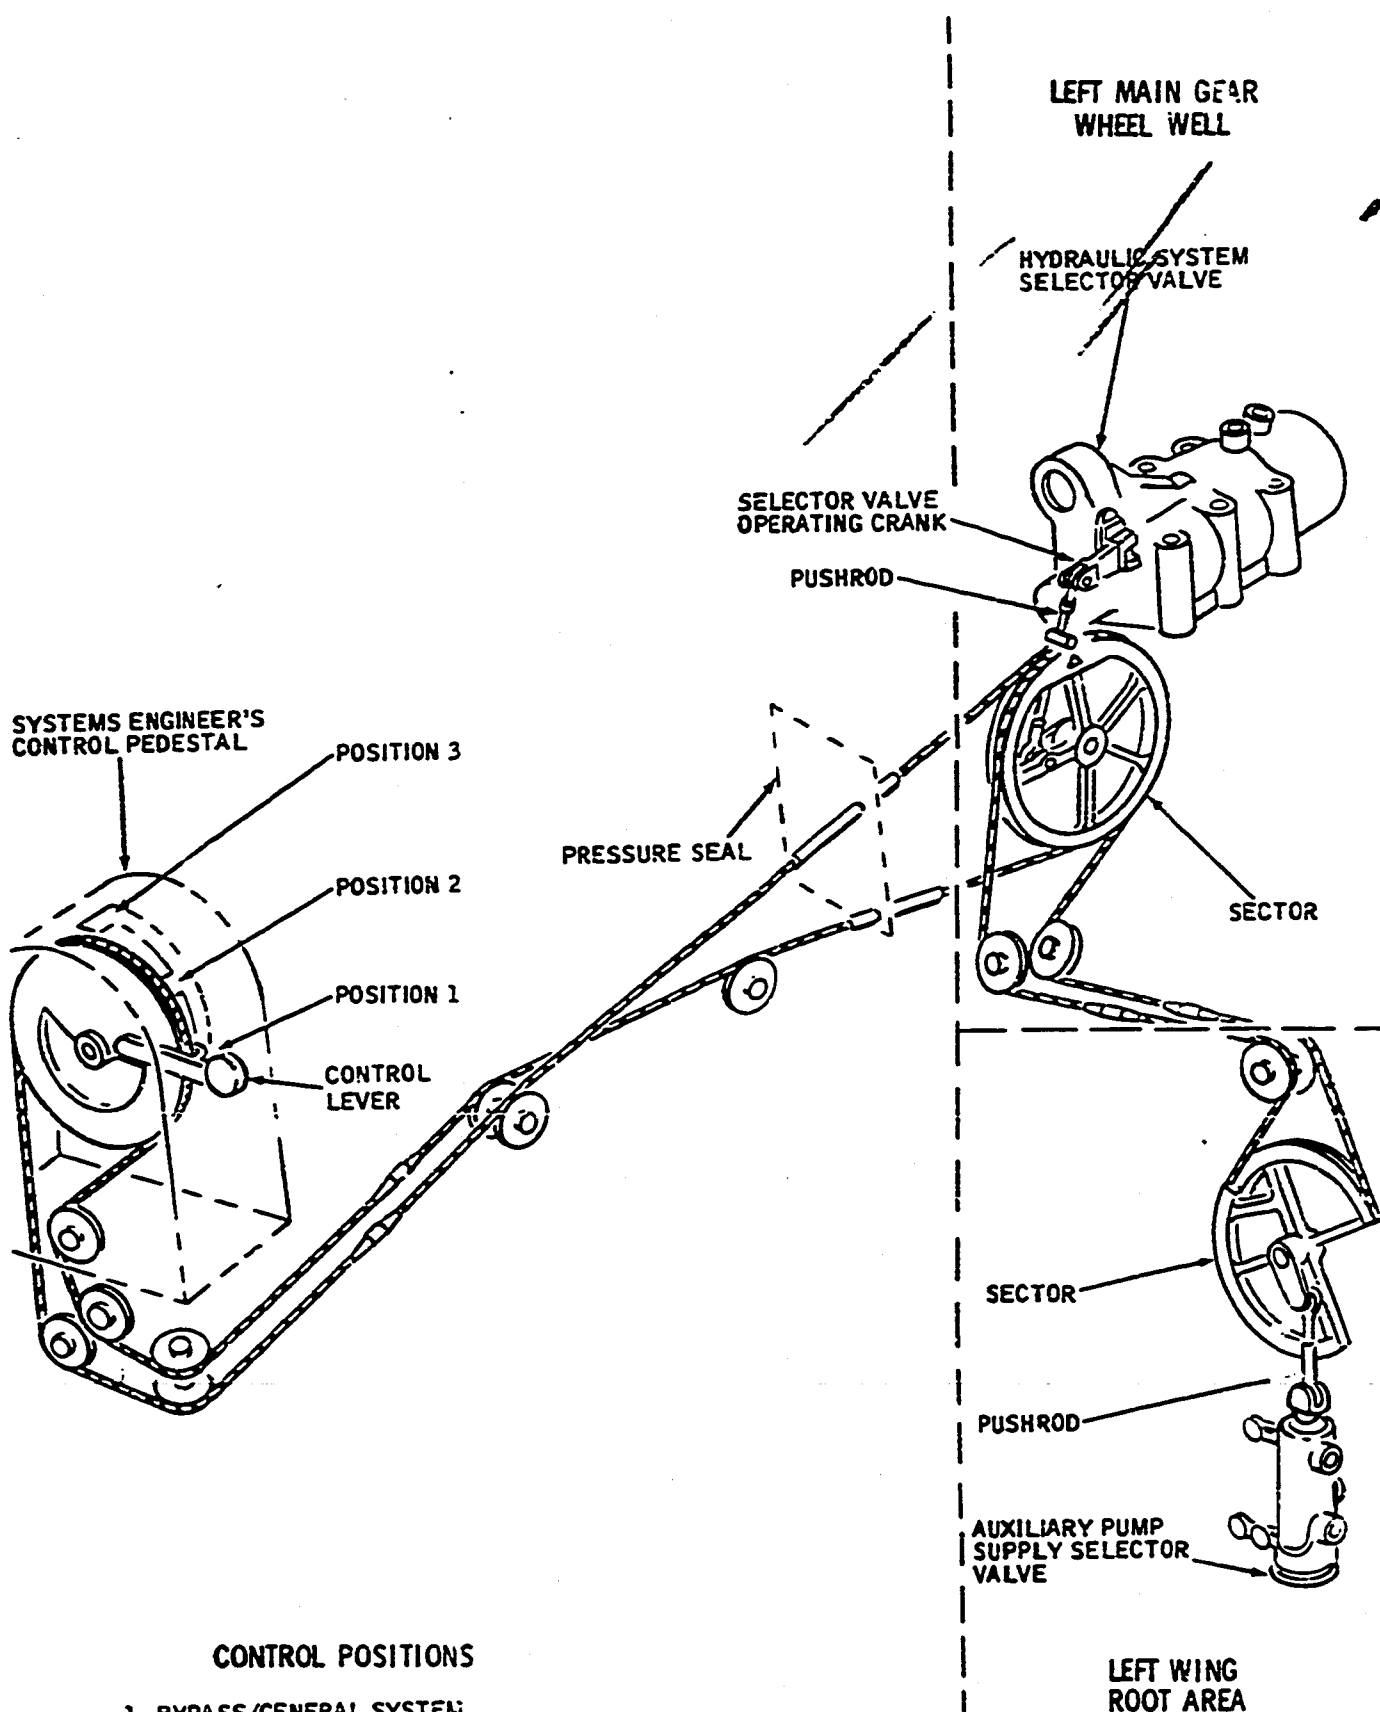

**CONTROL POSITIONS**

1. BYPASS/GENERAL SYSTEM
2. GENERAL SYSTEM (NORMAL)
3. GENERAL SYSTEM/MAIN GEAR DOWN AND FLAPS

Hydraulic System Selector and Auxiliary Pump Supply  
 Selector Valves -- Mechanical Control Schematic  
 Figure 2

HA2-486

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 18  
 Page 5

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The fluid enters the dual filter and relief valve through the relief valve chamber. The fluid is passed through the filter element, through a manifold, and through a common outlet port. Fluid from the outlet port is routed through a check valve to the system selector valve. If back pressure in the system builds up to approximately 3300 psi, the relief valves in the dual filter and relief valve open and port fluid back to the reservoir via A return port. The relief valve poppet closes again when system pressure drops to approximately 3000 psi.
- (4) The aspirator receives filtered fluid (bleed pressure at normal 3000 psi) from the dual filter and relief valve. The aspirator operates on the jet pump principle. Hydraulic fluid is atomized and mixed with air within the unit by a nozzle and a venturi. The mixture is used to pressurize the reservoir and reservoir air chamber. The regulator diaphragm maintains a pressure range of 30 to 35 psi in the reservoir and air chamber. If there is a regulator malfunction, the aspirator stalls when the outlet pressure reaches a maximum of 40 psi. A reservoir relief valve in the reservoir vent line relieves thermal expansion pressure above 45 (+5, -0) psi.
- (5) Pump pressure fluid enters the system selector valve through the system pressure inlet port. When the pump selector control lever is in the general system (normal) position, fluid is ported to the pressure passages of the left power manifold. The fluid pressure in the left power manifold is ported through the priority valve to the nose gear and the right power manifold and directly to the following valves:
  - (a) Aileron power shutoff
  - (b) Rudder power shutoff
  - (c) Longitudinal trim hydraulic motor shutoff
- (6) The right power manifold distributes fluid pressure to the brake accumulators, the pressure transmitter, and the following control valves:
  - (a) Wing flap
  - (b) Slot
  - (c) Main gear
  - (d) Power brake

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (7) The return fluid from the wing flap control valve is ported through the right power manifold and into the auxiliary hydraulic pump alternate reservoir. Return fluid from the outboard wing flaps is piped into the suction lines for each engine-driven hydraulic pump. Return fluid from the slot control valve is ported into the A return line to the main reservoir. The power brake and main gear control valve gear up return fluid is ported through a restrictor check valve into the B return line to the reservoir. The main gear control valve gear down return pressure bypasses the right manifold and returns to the reservoir through the A return line. All return fluid entering the reservoir is filtered through the return ports filter located within the reservoir.

C. Bypass Operation

- (1) The output of the engine-driven hydraulic pumps is bypassed by moving the system selector control lever out of the general system (normal) position to the bypass/general system position.
- (2) The system selector valve in the bypass position ports engine-driven pump pressure from the dual filter and relief valve directly to the return passage of the left power manifold. From the manifold, the fluid is ported directly to a tee in the wing flap return port of the hydraulic system reservoir. In the bypass condition, the auxiliary hydraulic pump receives fluid from the hydraulic system reservoir, pressurizes it to system pressure, and ports it to the left and right power manifolds for distribution to the subsystems.

D. Alternate Operation

- (1) When both engine-driven hydraulic pumps and the auxiliary hydraulic pump are rendered inoperative due to the loss of the normal supply of fluid, the hydraulic power system can be rigged for alternate operation. This is accomplished by placing the system selector control lever in the general system/main gear downlock and flaps position. When the system selector control lever is in this position, the auxiliary hydraulic pump supply selector valve is positioned to supply fluid from the auxiliary pump alternate reservoir to the auxiliary pump.
- (2) Fluid is supplied to the auxiliary pump from the outlet port of the auxiliary pump supply selector valve. Output pressure is ported through the auxiliary system filter and check valve to the auxiliary pressure inlet port of the system selector valve.
- (3) In the general system/main gear downlock and flaps position, auxiliary pump pressure bypasses the manifold pressure passages and is ported from the alternate outlet port of the system selector valve. Fluid from this port flows directly to a port on the right power manifold, through an internal check valve in the manifold, to the wing flap control valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

A line, teed into the alternate supply line, runs directly to a shuttle valve in the main gear downlock cylinder line. When auxiliary pressure is applied, the shuttle valve shifts, porting fluid into the downlock bungee cylinder's downlock side.

**E. Mechanical Control**

- (1) The hydraulic power mechanical control system consists of the hydraulic system selector control lever cable drum, the system selector valve sector, the system selector valve, the auxiliary hydraulic pump supply selector valve sector, and the auxiliary hydraulic pump supply selector valve.
- (2) The control lever located on the system engineer's control pedestal is used to position the system selector valve and, in turn, the auxiliary hydraulic pump supply selector valve.
- (3) The control lever is spring-loaded into general system (normal) position, and is connected to the control lever cable drum. Two cables run from the drum, under the cabin floor, aft through the pressure bulkhead at the rear wing spar, and into the left wheel well to the system selector valve sector. A pushrod connects the sector to the positioning lever of the system selector valve.
- (4) A second set of cables is routed from the system selector valve sector into the left wing root to the auxiliary hydraulic pump supply selector valve sector. When the system selector valve is in either bypass or normal, the auxiliary hydraulic pump supply selector valve sector is arranged so that the pushrod idles between the two positions. This allows the valve to remain in the auxiliary position. When the sector is moved to the alternate position, the pushrod is pulled by the sector to reposition the valve to the alternate position.
- (5) The control lever is normally in the general system (normal) position. To move the system selector valve to the bypass position, the control lever is moved to the bypass/general system position. When the system selector valve is moved to the bypass position, the auxiliary hydraulic pump supply selector valve sector is moved to a new position. Due to the idle feature on the auxiliary sector, the valve remains in the auxiliary position. With the valve in this position, fluid is supplied to the auxiliary pump through the low standpipe in the hydraulic system reservoir. In this condition, engine-driven pump pressure is ported to the reservoir and the auxiliary pump pressure is ported to the general system.
- (6) To put the system in alternate operation, the control is moved to the general system/main gear downlock and flaps position. This moves the system selector valve to the alternate position, and simultaneously moves the auxiliary hydraulic pump supply selector valve to the alternate position. Fluid is supplied to the auxiliary pump from the



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


auxiliary hydraulic pump alternate reservoir. Fluid pressure from the auxiliary pump is ported to the flap system control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported from the system selector valve to the general system.

## 2. System Components

### A. Hydraulic System Reservoir (See Figures 3 and 4.)

- (1) The hydraulic system reservoir is installed on the aft side of the wing rear spar in the left wing root and is accessible through the left wing root access door. The hydraulic system reservoir serves as the main source of hydraulic fluid for the engine-driven hydraulic pumps and the normal supply for the auxiliary hydraulic pump. The reservoir is cylindrical in shape and contains a filter, baffle, and a screen cover encasing the filter. The filter prevents foreign particles from contaminating the fluid supply. Mountings are provided on the exterior surface of the reservoir for return line ports, aspirator port, electrical sensing units, sight gage, instruction placards, magnetic drain plug, and system supply ports.
- (2) The reservoir is pressurized with air from the regulator-aspirator to between 30 and 35 psi and has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir volume is used for fluid and 1/10 is used for foam space.
- (3) The aspirator port through which the reservoir is pressurized is located in the recess on top of the reservoir. An aspirator-deaerator filter is supported in the reservoir by a screen and support box assembly which is mounted to the reservoir wall by two bolts.
- (4) The mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The return ports manifold is an open-centered ring, flanged at both sides and provided with five fluid ports around its circumference; return port A is located at the bottom, return port B is located at the lower right side, the wing flap return port is located at the upper left side, and the system selector valve bypass port is located at the top. One flange of the manifold is mounted with six bolts to the mounting flange on the reservoir. The return fluid filter cover fits into the open side of the manifold, and is attached to the outer manifold flange with six bolts to form a fluid-tight cover for both the manifold and the filter.
- (5) The return fluid filter is installed in the reservoir, behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the return fluid filter cover holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to the engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

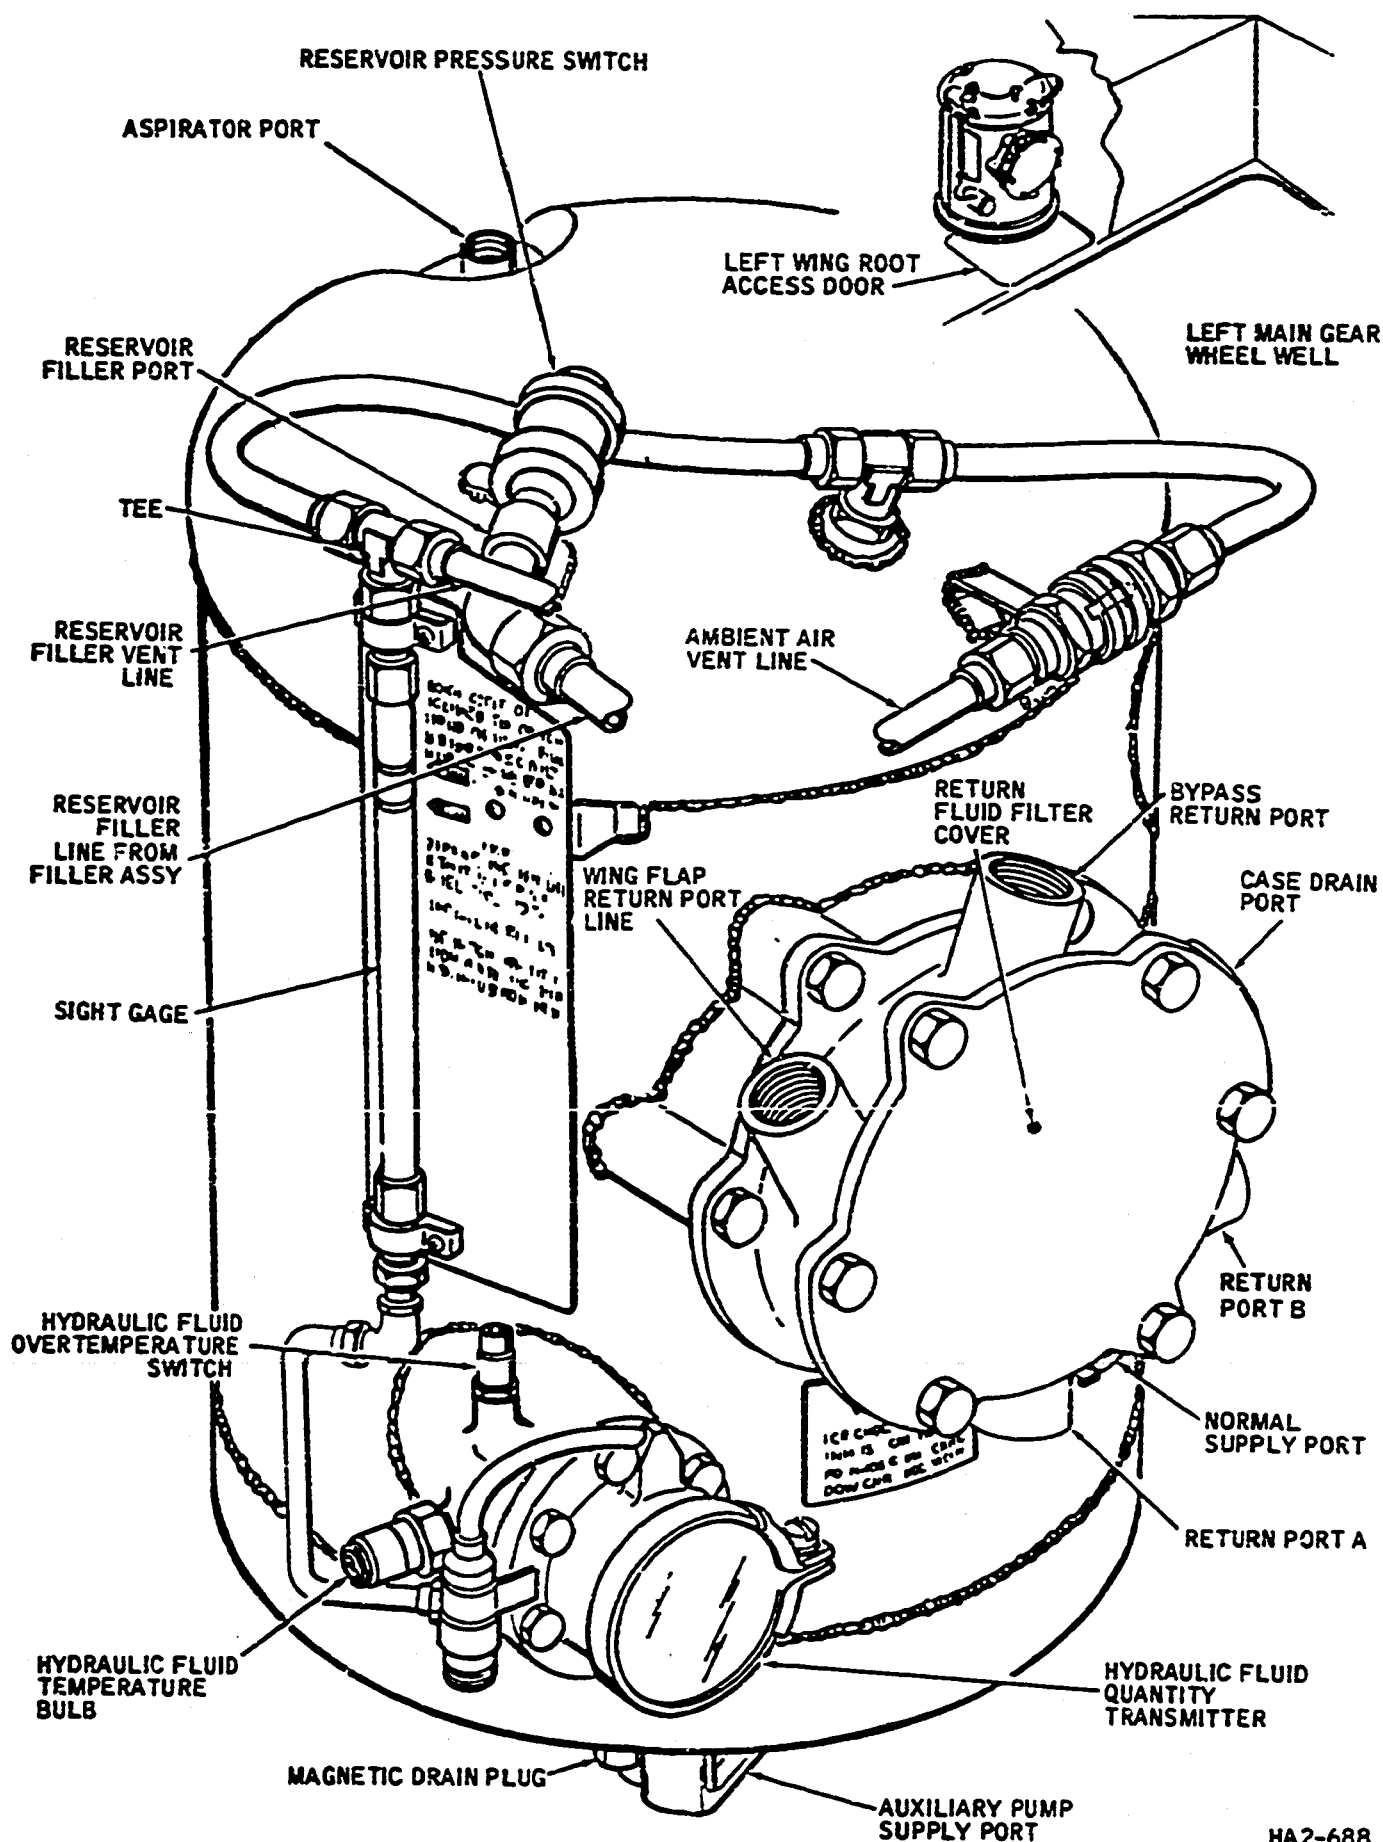


Hydraulic System Reservoir -- External View  
 Figure 3

HA2-688

29-10-0  
 CODE 18  
 Page 10

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

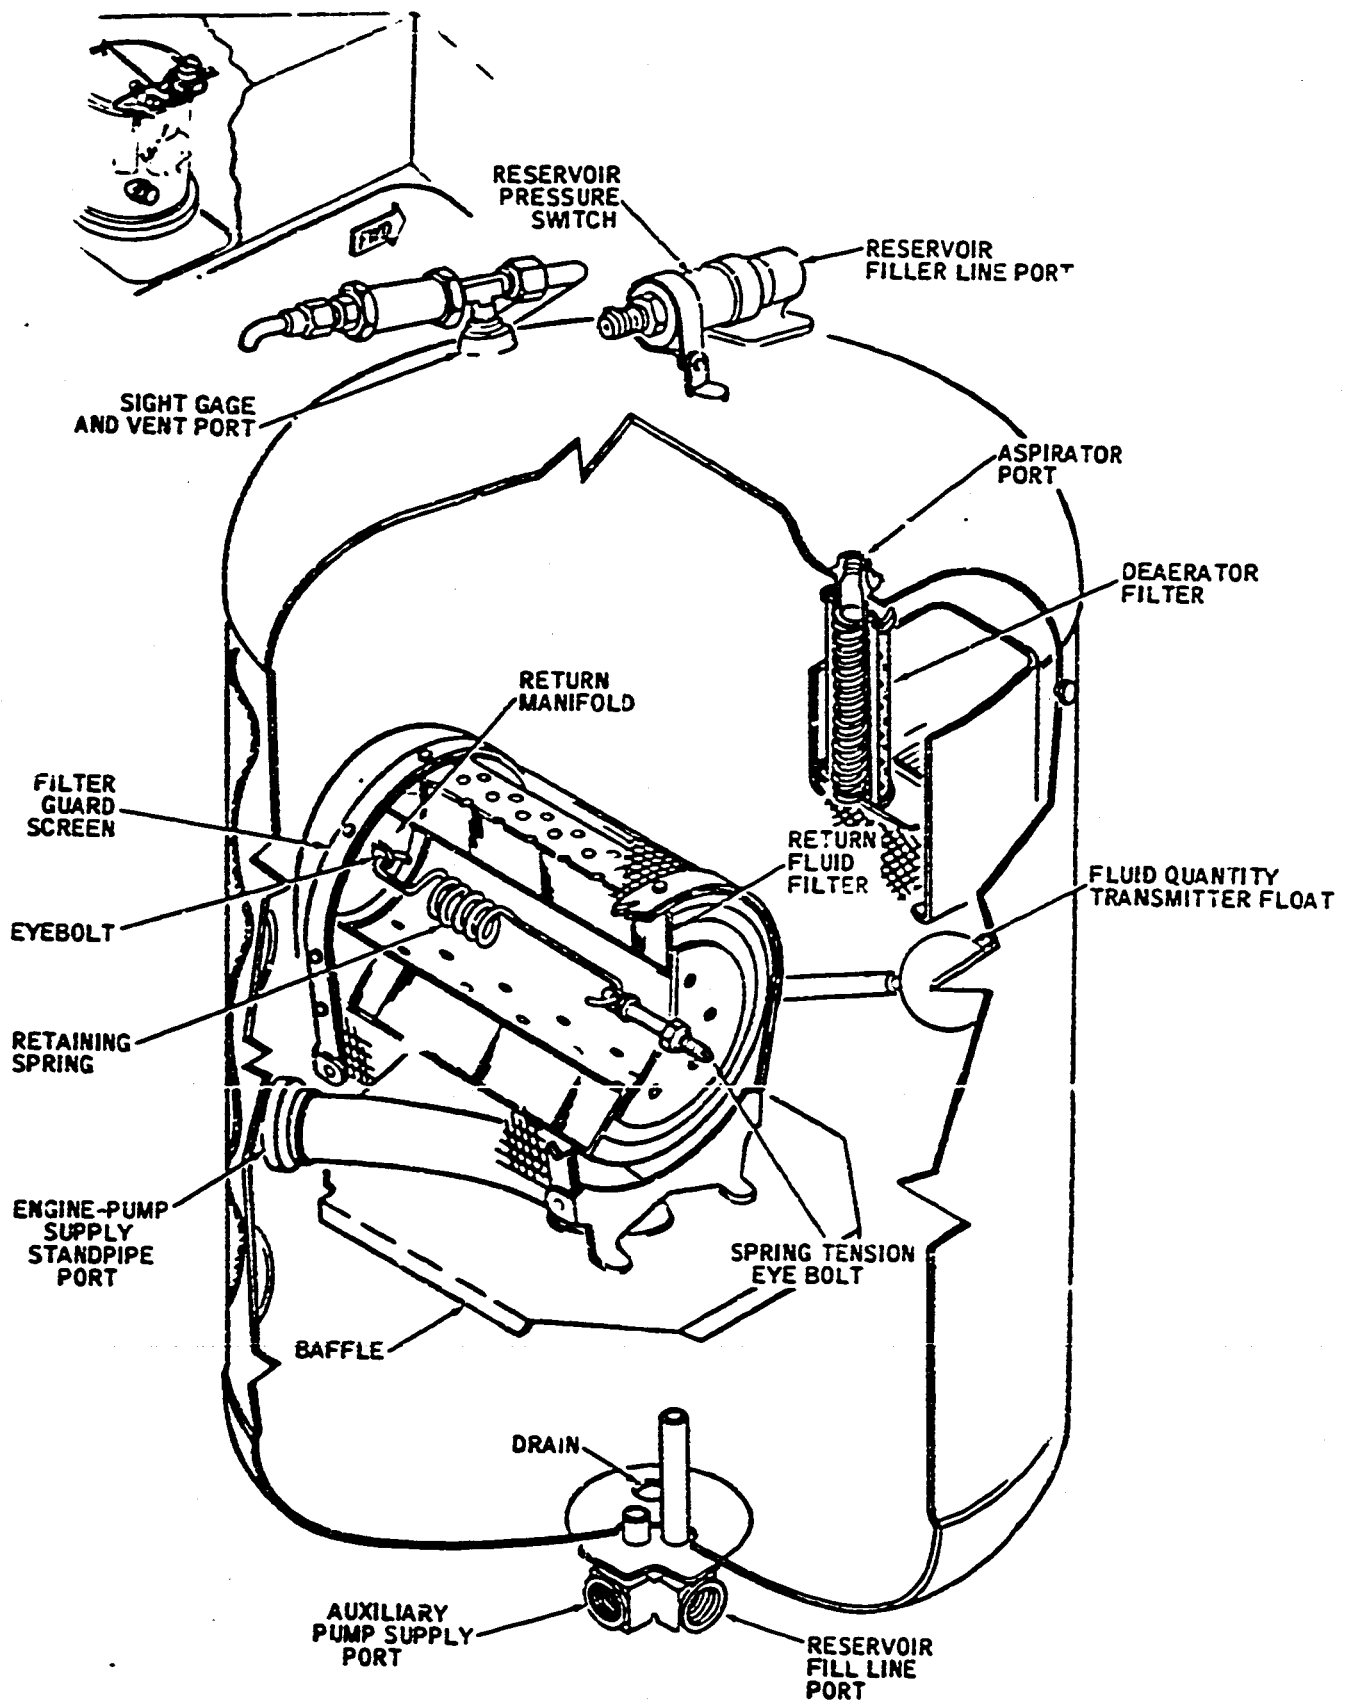

Hydraulic System Reservoir -- Cutaway View  
 Figure 4

HA2-689

29-10-0  
 CODE 18  
 Page 11

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) A flanged adapter for the fluid quantity transmitter is welded to the reservoir below and to the left of the return ports manifold. The adapter is provided with two small port bosses for the hydraulic fluid temperature bulb and the hydraulic fluid overtemperature switch. The lower end of the sight gage connects to a third port in the adapter, while the top of the sight gage tees into a port at the top of the reservoir. An instruction plate is mounted behind the sight gage and the vacuum breaker check valve tees into the port at the top of the reservoir that is used by the sight gage.


**B. Hydraulic Reservoir Return Fluid Filter (See Figure 4.)**

- (1) The reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply. The filter is located behind the return ports manifold, and is spring loaded to act as its own relief valve. Access to the filter is by removing the return fluid filter cover from the return ports manifold by removal of six bolts. The filter is attached by the retaining spring to the cover and is withdrawn from the reservoir when the cover is removed.
- (2) Externally, the filter consists of two perforated concentric tubes. The area between the tubes is closed by metal end caps which are bonded to the two tubes. A resilient rubber gasket is bonded to each of the caps. Each gasket must be smooth and flat for proper sealing of the filter. The gaskets act as a static seal and a relief valve seat.
- (3) Internally, the filter has a 10-micron, resin-impregnated, convoluted paper-type filter element. The area of the filter element is approximately 1960 square inches. The filter is held in place by a retaining spring. One end of the spring is attached to an eyebolt located inside the return port's manifold cover. The spring passes through the center chamber of the filter and is connected to another eyebolt. This eyebolt is secured to a large washer and plate by means of a self-locking nut. The washer seats on the rubber gasket which is bonded to the filter. The fluid enters the center chamber of the filter and passes through the inner tube of the filter to the filter element by means of perforation holes. Foreign matter is filtered out by the filter element and the fluid leaves the element through perforation holes in the outer tube. When the element becomes saturated with foreign matter, the filter acts as its own relief valve and unseats at 20 to 25 psi above normal return pressure which allows fluid to bypass the filter and enter the reservoir.

**C. Hydraulic Reservoir Air Pressure Regulator-Aspirator (See Figure 5.)**

- (1) The reservoir air pressure regulator-aspirator is a jet-type air pump, regulated by a pressure-sensitive shutoff valve. The unit pressurizes the hydraulic reservoir with air to the operating pressure range of 30 to 35 psi. The regulator-aspirator is located on the top inboard side of the reservoir and is mounted on the reservoir retainer ring. Access to regulator-aspirator is through the left wing root access door.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

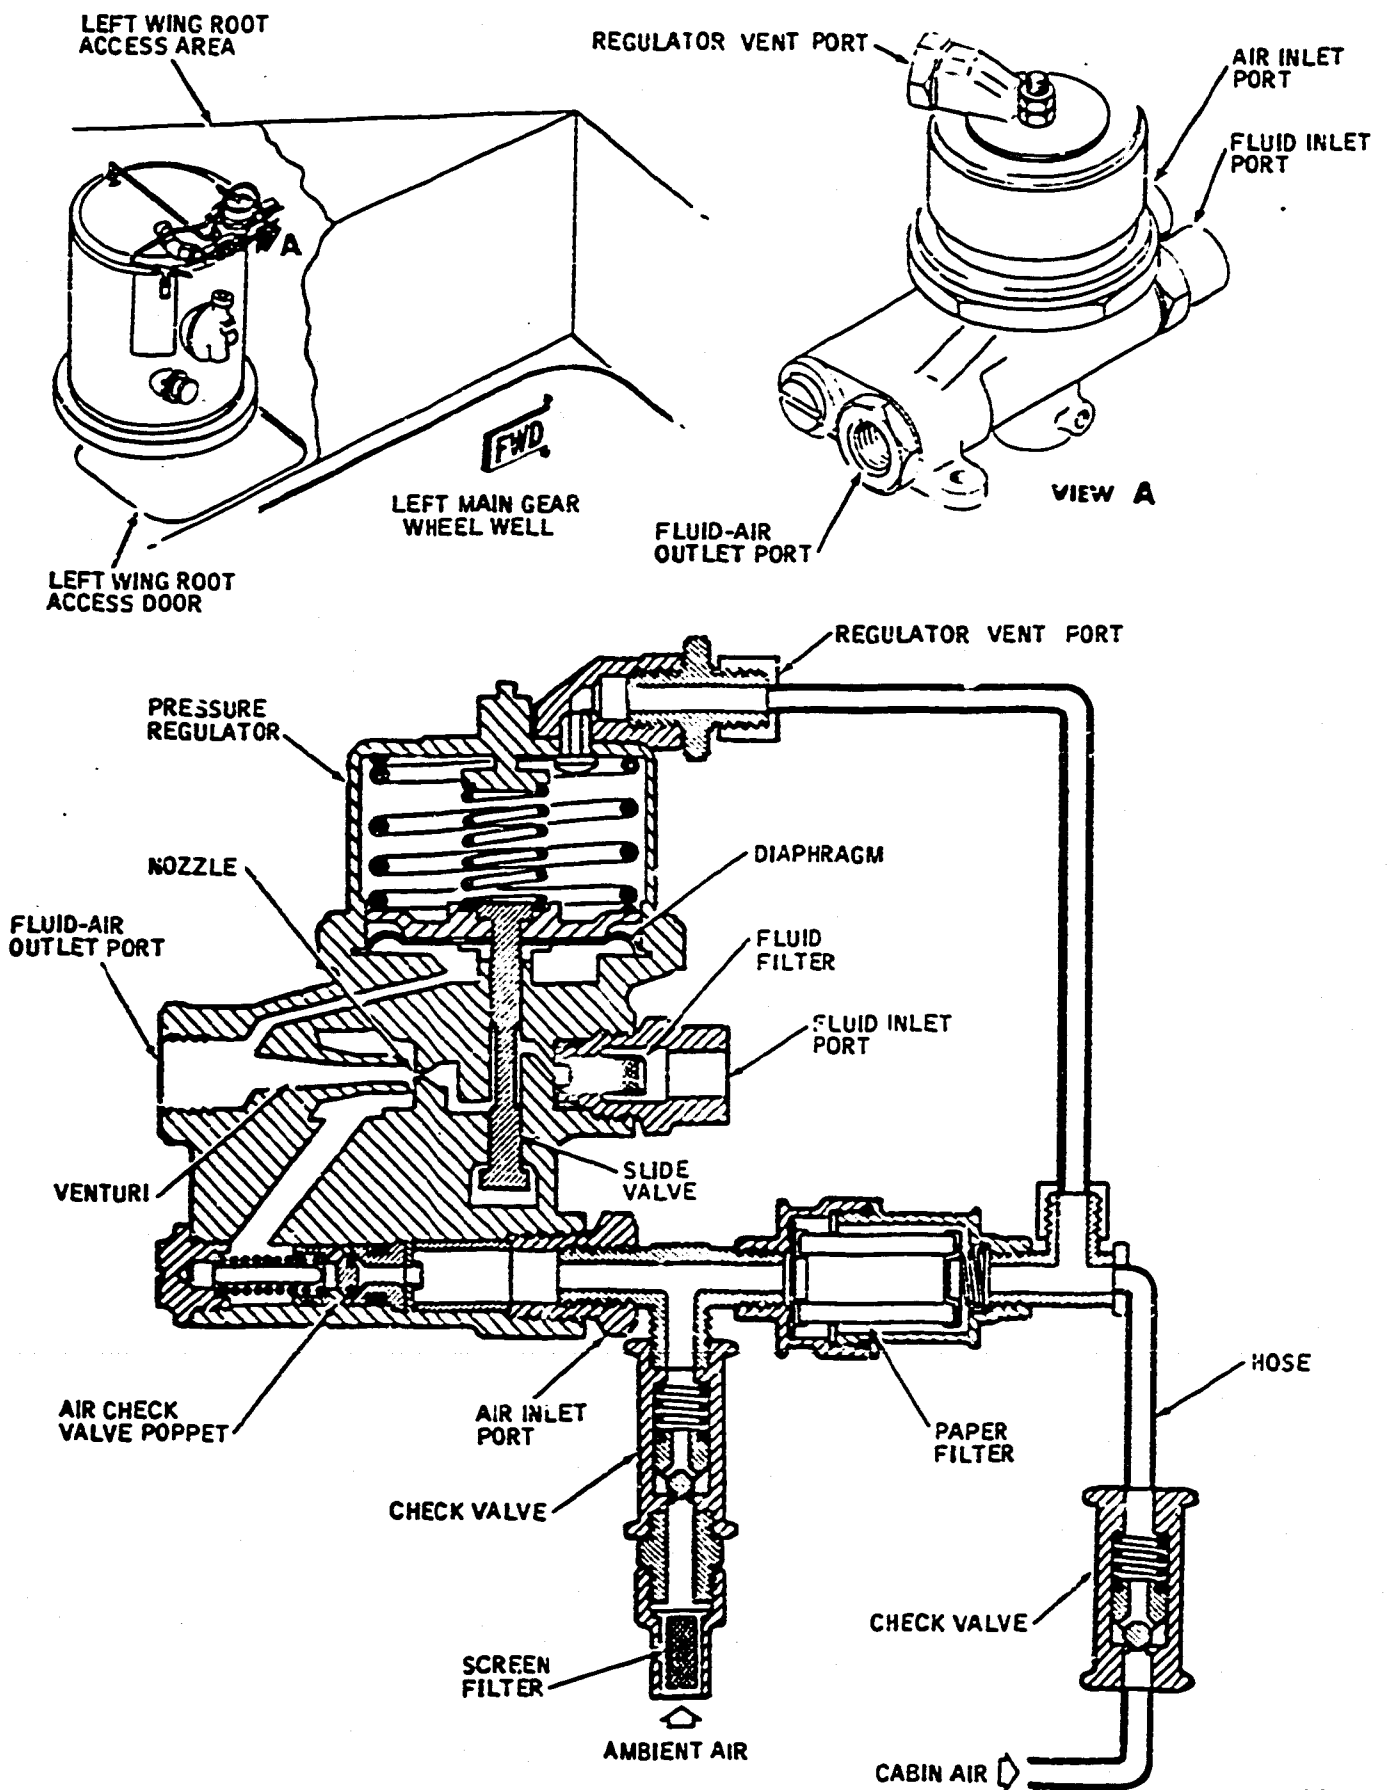

Reservoir Air Pressure Regulator-Aspirator -- Schematic  
 Figure 5

HA2-25

29-10-0  
 CODE 18  
 Page 13

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The regulator-aspirator assembly consists of a main aspirator body and a regulator housing. The main aspirator body has two inlet ports and one outlet port. The ports are permanently identified inlet, outlet, and air inlet. The plug for an air check valve is located near the outlet port. A chemically treated paper filter is installed near the aspirator body air inlet port in the air line from the pressurized cabin area. A metal screen filter is installed on the check valve which tees into the aspirator body air inlet port.
- (3) The reservoir air pressure regulator-aspirator operates basically with a jet pump action which is regulator controlled. Fluid enters the assembly through the fluid inlet port where it is filtered and then ported through the valve assembly of the regulator. During normal operation, when air pressure at the outlet port is under 30 psi, the valve is open porting fluid to the nozzle. The orifice in the nozzle sprays the fluid through the venturi of the outlet port, creating a vacuum in the chamber around the venturi. When the vacuum becomes great enough to create a pressure differential of approximately 1 psi, ambient air opens the air check valve. The air is ported to the chamber around the venturi and is siphoned, with the fluid, through the outlet port.
- (4) Hydraulic fluid inlet pressure at the engine-driven hydraulic pumps is improved at high altitude operation by supplying pressurized filtered cabin air to the reservoir regulator-aspirator instead of ambient outside air. Part of the inlet air is diverted by a tee fitting to the regulator chamber to provide a more positive regulating force on the diaphragm than would be obtained with low ambient pressures. The chemically treated paper filter, installed in the regulator-aspirator air supply line from the cabin, removes smoke tars and impurities from the pressurized cabin air. The steel mesh screen filter, installed on the check valve which tees into the regulator-aspirator air inlet port downstream of the paper filter, removes dust, dirt, and foreign particles from the ambient air and serves as a standby to supply filtered air in event the paper filter is clogged.
- (5) As pressure in the reservoir builds up, back pressure is bled from the outlet port to the diaphragm chamber. The reaction on the diaphragm begins to move the slide valve to cut off the fluid flow. At 30 to 35 psi of back pressure, the diaphragm completely closes the slide valve, cutting off the flow of fluid. If there is a regulator malfunction, the aspirator stalls when outlet pressure reaches a maximum of 40 psi.
- (6) The aspirator is capable of pressurizing the reservoir to 30 to 35 psi in approximately 4 minutes at altitudes from sea level to 15,000 feet, when fluid is ported through the nozzle at 0.5 gpm at 3000 psi.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

D. Regulator-Aspirator Air Filters (See Figure 6.)

- (1) The regulator-aspirator air filters remove ambient and cabin air impurities from the air which is used to pressurize the main hydraulic system reservoir. The filtering system is composed of two filters. One of which is a paper element filter, installed directly in the cabin air supply line near the regulator-aspirator. The other filter is a fine mesh, screen-type filter, installed on a check valve and positioned at right angles to the regulator-aspirator air inlet port. The screen filter, in addition to providing an immediate supply of ambient air during ground operations, serves as a standby air inlet to preclude air starvation of the regulator-aspirator in the event the paper element filter becomes clogged.


E. Hydraulic Reservoir Relief Valve (See Figure 7.)

- (1) The reservoir relief valve and the air pressure aspirator-regulator keep the reservoir pressurized to normal operating range. The valve relieves excess air pressure which may build up in the reservoir through thermal expansion in the system. The valve has an inlet port and an outlet port and consists, internally, of an inlet port seat and a spring-loaded poppet.
- (2) The relief valve is installed in the overboard vent line downstream of the hydraulic reservoir air bleed valve. In the event that excess pressure builds up in the reservoir, the poppet will start to relieve at 45 (+5, -0) psi. Full flow of 10 gpm is attained at 80 psi maximum. The poppet reseats at 90 percent of the opening pressure.


F. Hydraulic Reservoir Air Bleed Valve (See Figure 8.)

- (1) The hydraulic reservoir air bleed valve and pressure gage are located on the aft side of the rear spar in the left main gear wheel well, inboard of the hydraulic reservoir air chamber. The bleed valve and gage are installed in the overboard vent line, between the reservoir air chamber and the reservoir relief valve.
- (2) The bleed valve is used to relieve the reservoir air pressure prior to disconnecting lines or components in the hydraulic system. The pressure gage provides a ready indication of the hydraulic reservoir air pressure and is used in conjunction with the bleed valve to indicate the air pressure status.
- (3) The air inflation valve is installed on the same fitting as the bleed valve and pressure gage. The air inflation valve is used to manually charge the reservoir with air or dry nitrogen.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

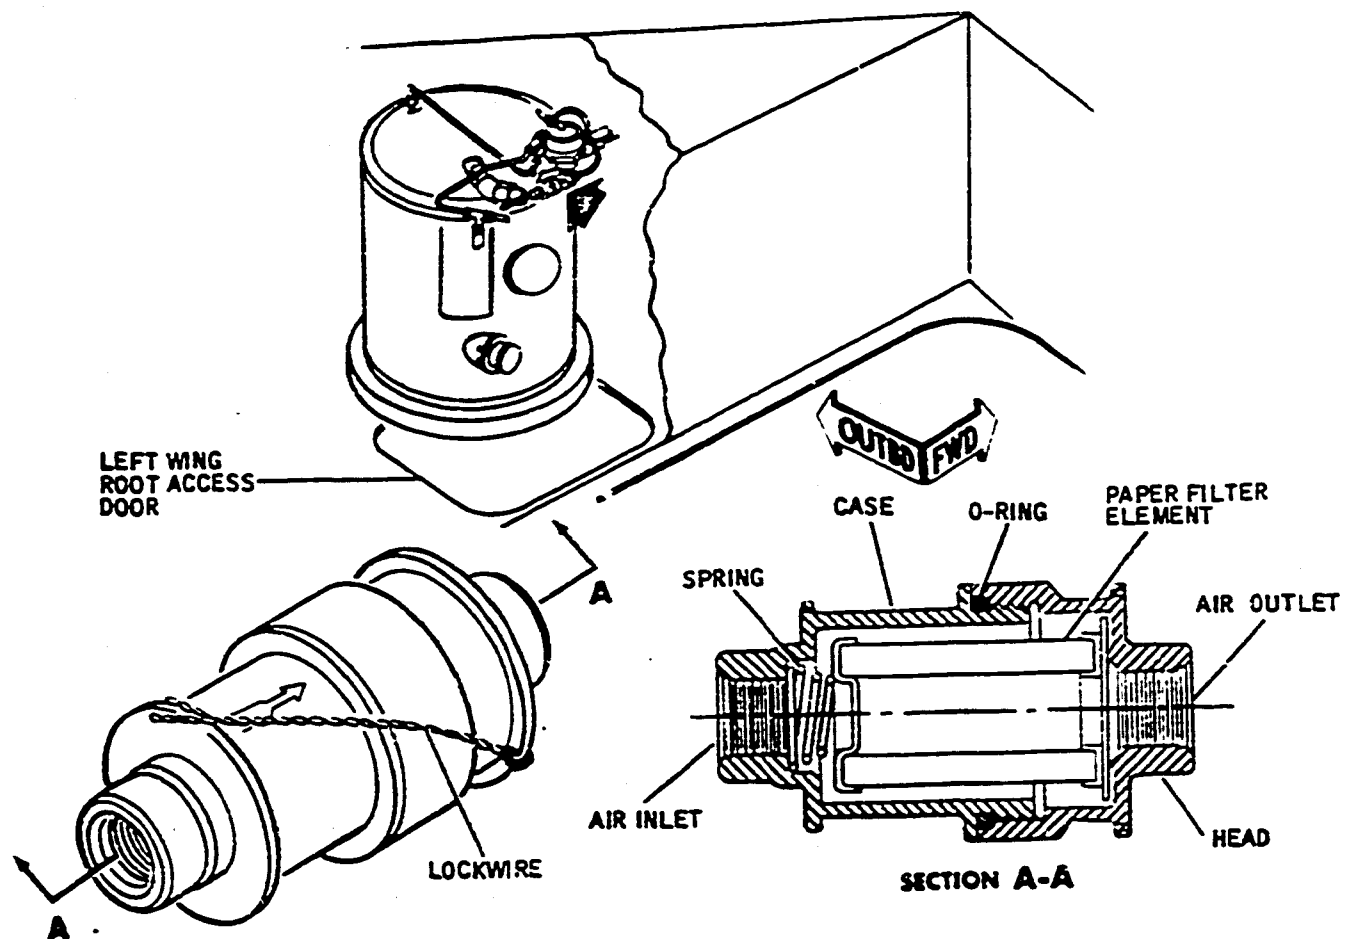

PAPER ELEMENT FILTER

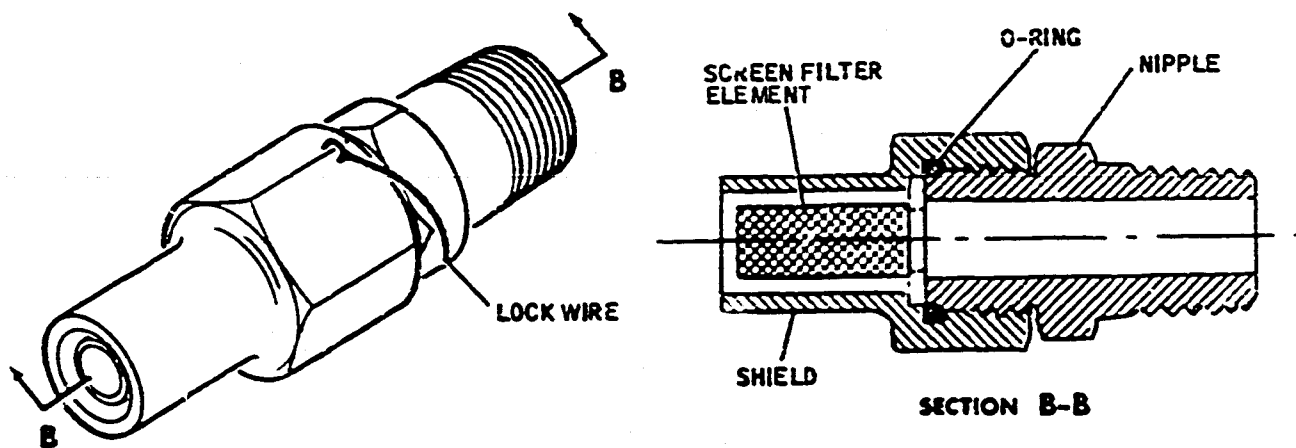


SCREEN FILTER

HA2-35

Regulator-Aspirator Air Filters - Cutaway View  
 Figure 6



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

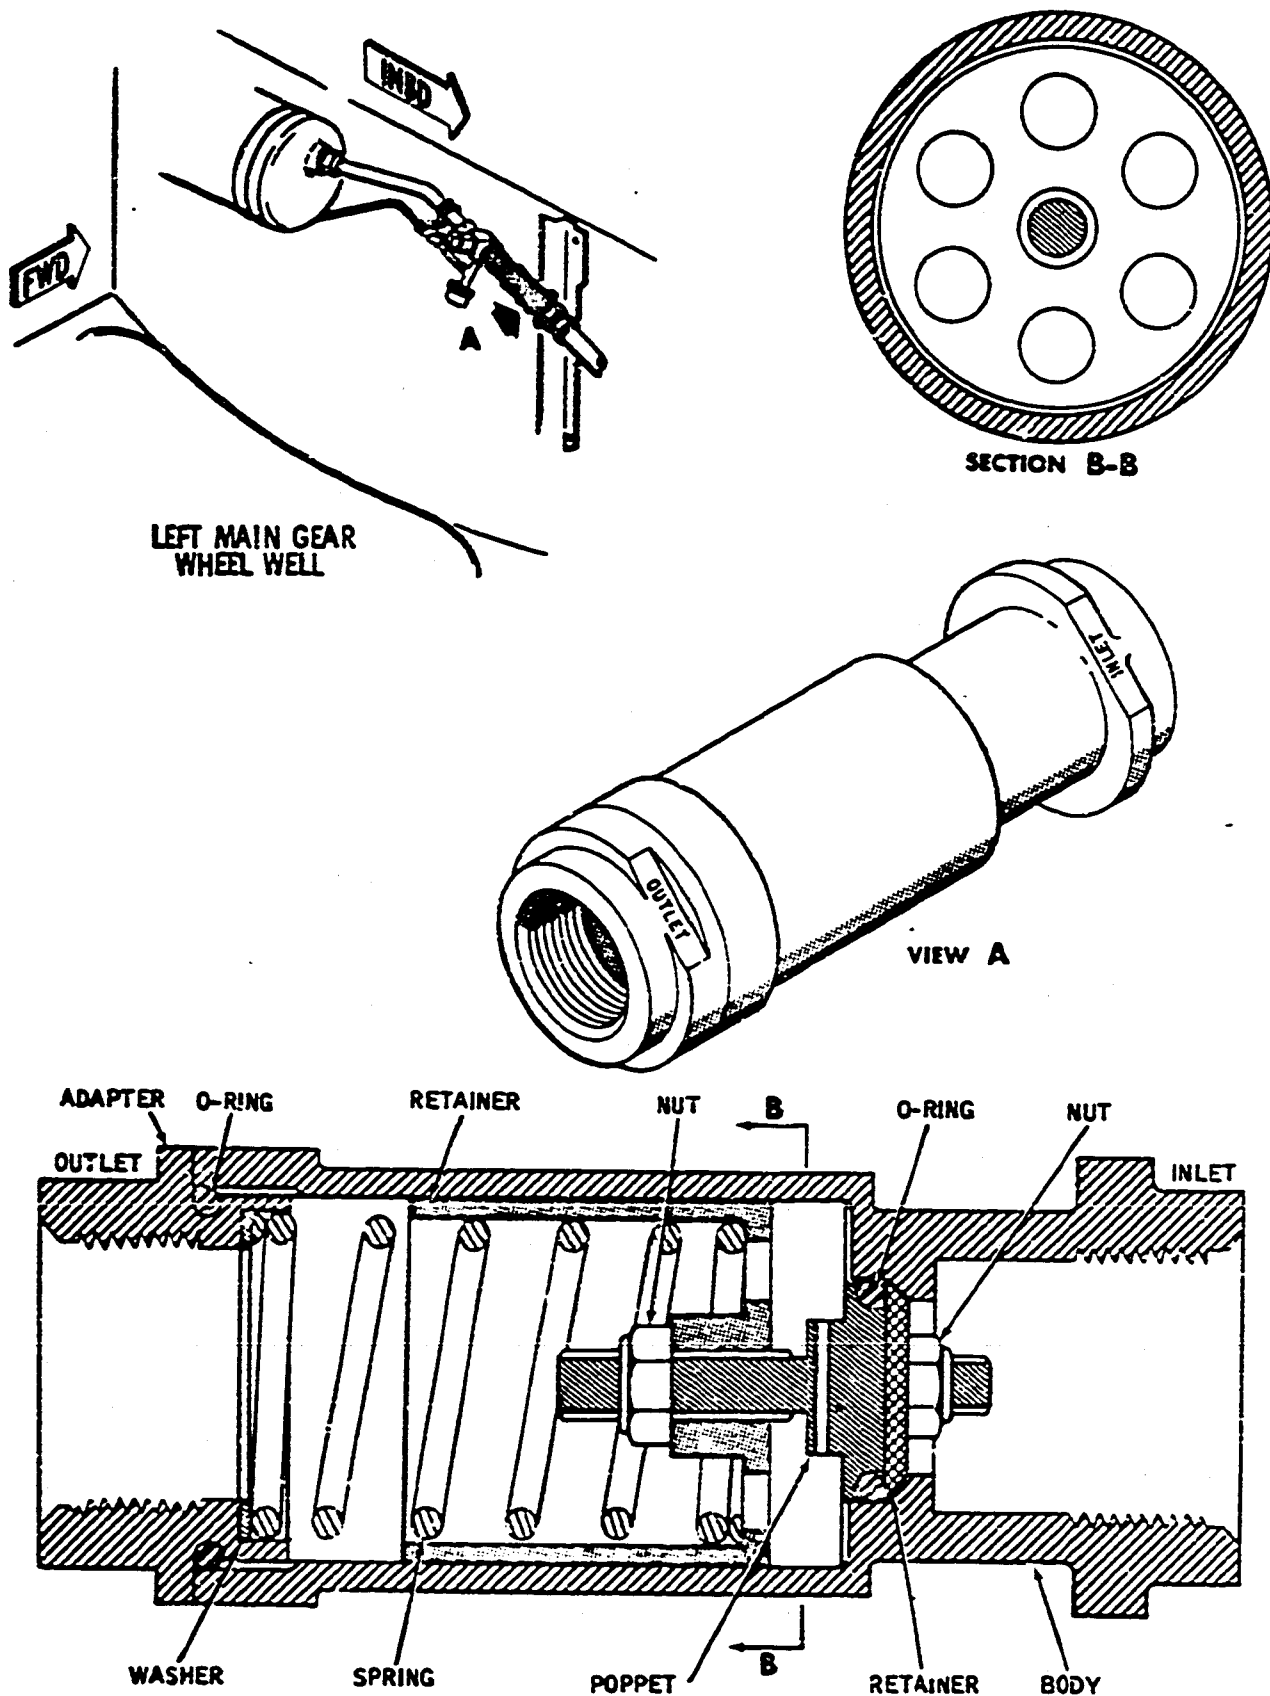

Hydraulic Reservoir Relief Valve  
 Figure 7


HA2-17

29-10-0  
 CODE 18  
 Page 17

Jun 15/67

Printed in U S A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

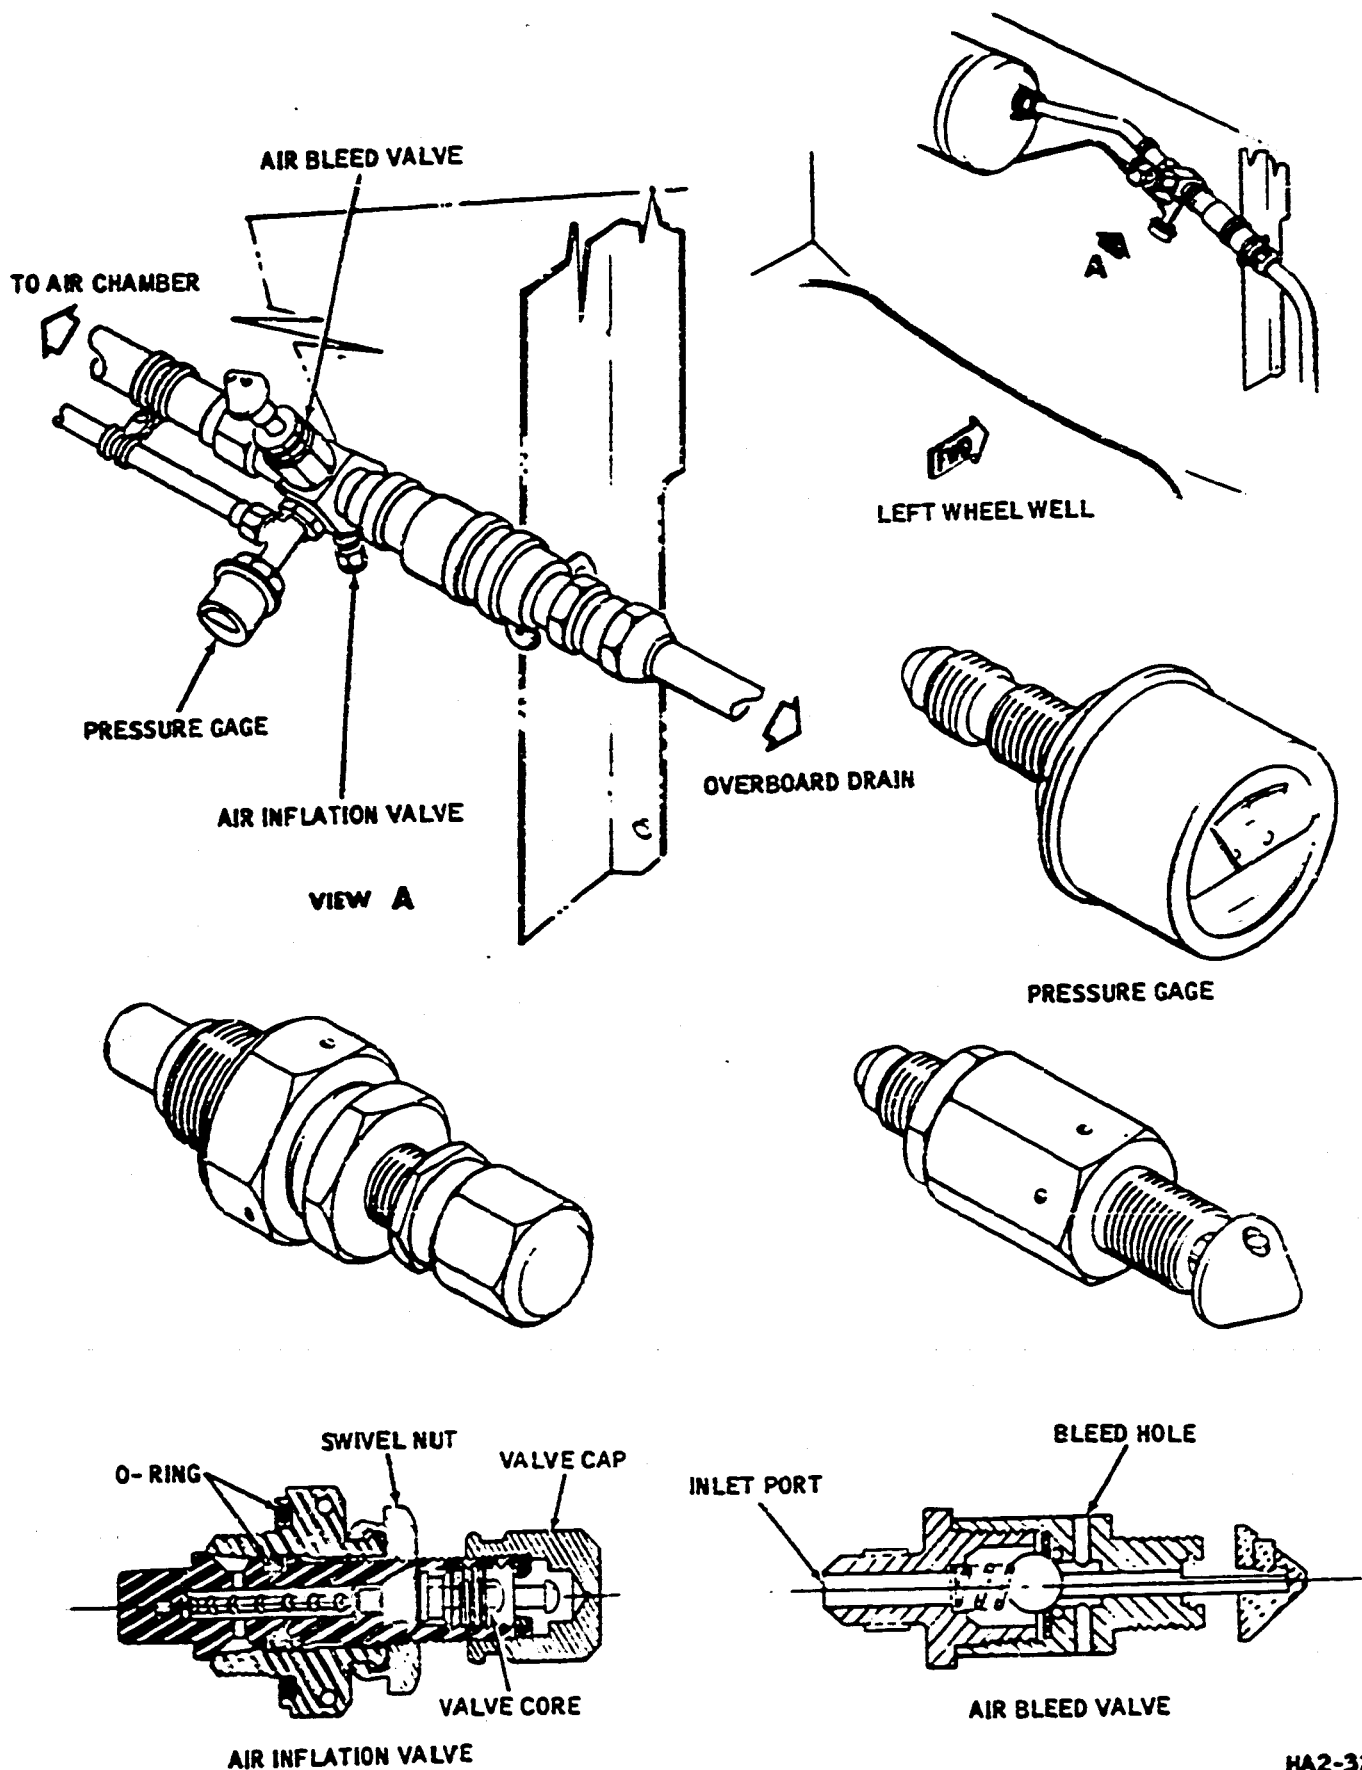

HA2-32

Reservoir Air Bleed Valve, Air Inflation  
 Valve, and Pressure Gage  
 Figure 8

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

G. Hydraulic Reservoir Vacuum Breaker Check Valve (See Figure 9.)

- (1) The hydraulic reservoir vacuum breaker check valve is installed on the regulator-aspirator mounting bracket, and connects to the tee fitting at the top of the reservoir. The valve is vented to ambient air. The purpose of this valve is to maintain atmospheric pressure in the reservoir, allowing hydraulic fluid to flow to the auxiliary hydraulic pump in the event of a failure of the reservoir pressurization system. The failure, or breakdown, of the pressurization system could cause a fluid starvation at the auxiliary hydraulic pump because of vacuum buildup in the reservoir.

H. Hydraulic Reservoir Air Chamber

- (1) The hydraulic reservoir air chamber is a small, cylindrical tank with a capacity of 700 cubic inches. It has two ports, an inlet port at the bottom of the chamber and an outlet port in one end of the chamber. The inlet port mounting boss is fitted with a drain plug. The air chamber is installed on the aft side of the rear spar in the left main gear wheel well, inboard and above the hydraulic reservoir filler assembly. Access to the air chamber is through the left main gear inboard door.
- (2) The air chamber provides for greater fluid capacity in the hydraulic reservoir by providing air and foam space for the reservoir in a separate container. Air pressure in the chamber is maintained by the regulator-aspirator and the air relief valve. The air pressure in the chamber and reservoir can be relieved, when desired, by the air bleed valve located downstream of the chamber. The air chamber is mounted higher than the reservoir filler assembly, to prevent overfilling of the reservoir from reducing the available air space and to prevent fluid from being vented overboard through the reservoir relief valve.



I. Hydraulic Reservoir Port B Return Check Valve (See Figure 10.)

- (1) The reservoir port B return check valve is installed in port B of the reservoir to prevent reverse flow of hydraulic fluid from the reservoir to the return line. The check valve is located on the reservoir in the left wing root and is accessible through the left wing root access door.
- (2) Externally and internally, the port B check valve is a standard-type check valve with a 1500-psi rating. A nominal pressure of approximately 8 psi unseats the poppet, permitting fluid to flow through the valve. When the reservoir pressure exceeds the return line pressure, the poppet will seat and reverse fluid flow will be prevented.


J. Engine Hydraulic Fire Shutoff Valve (See Figures 11 and 12.)

- (1) The engine hydraulic fire shutoff valve is a gate-type, mechanically controlled valve, installed in the supply line of each engine-driven hydraulic pump. The engine hydraulic fire shutoff valve is actuated

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

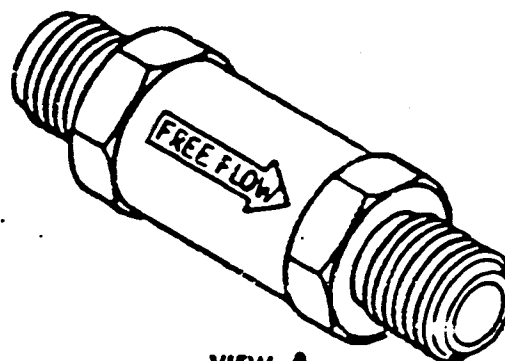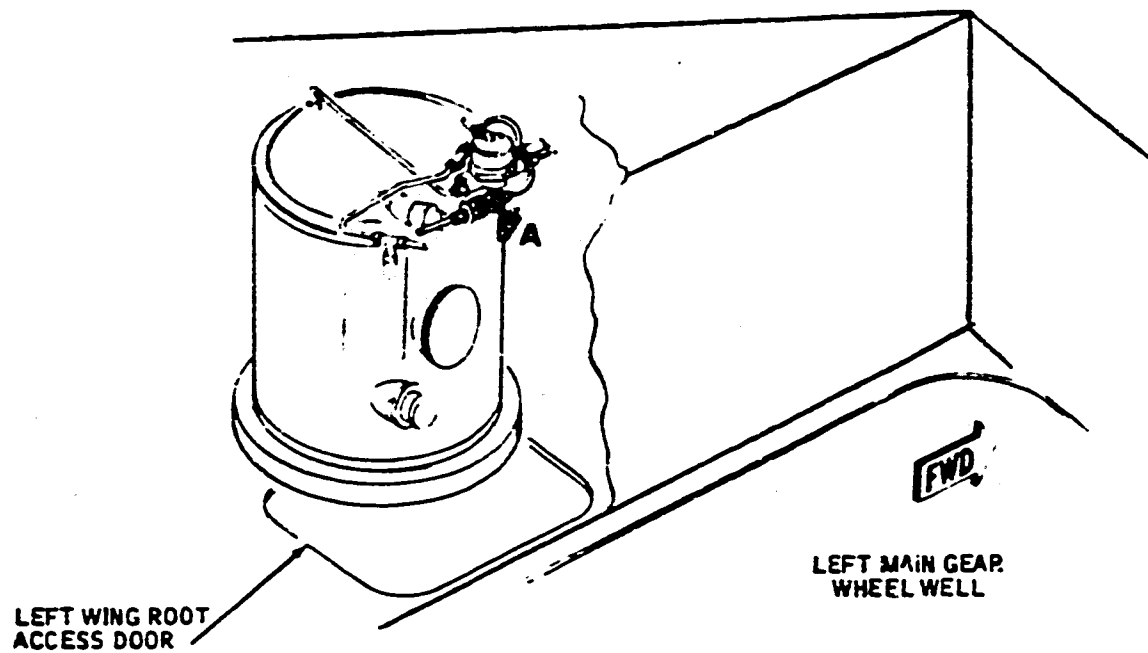


VIEW A

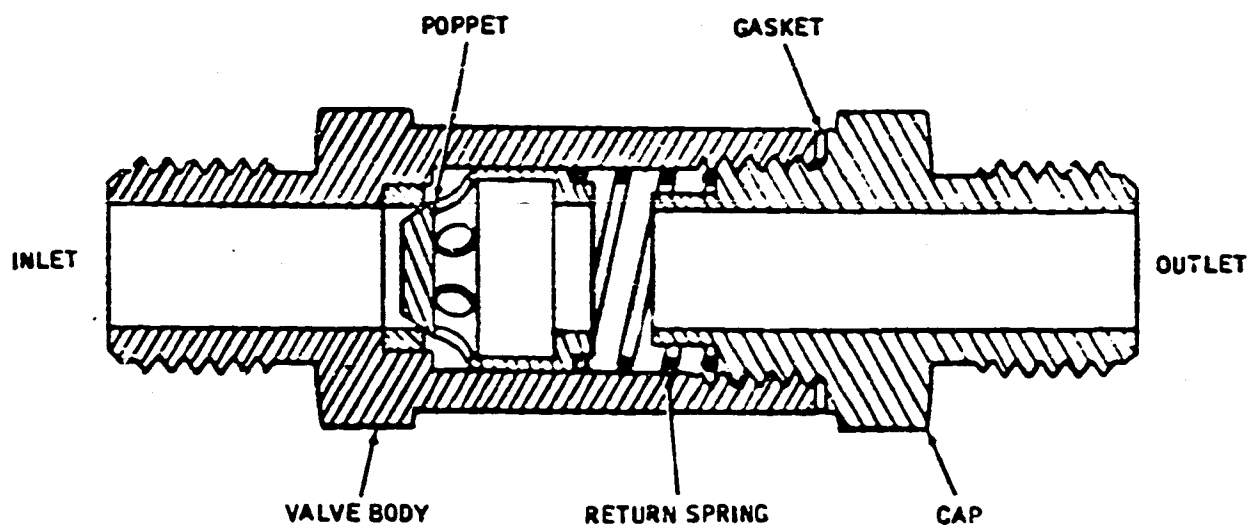


HA2-33

Hydraulic Reservoir Vacuum Breaker Check Valve  
 Figure 9

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

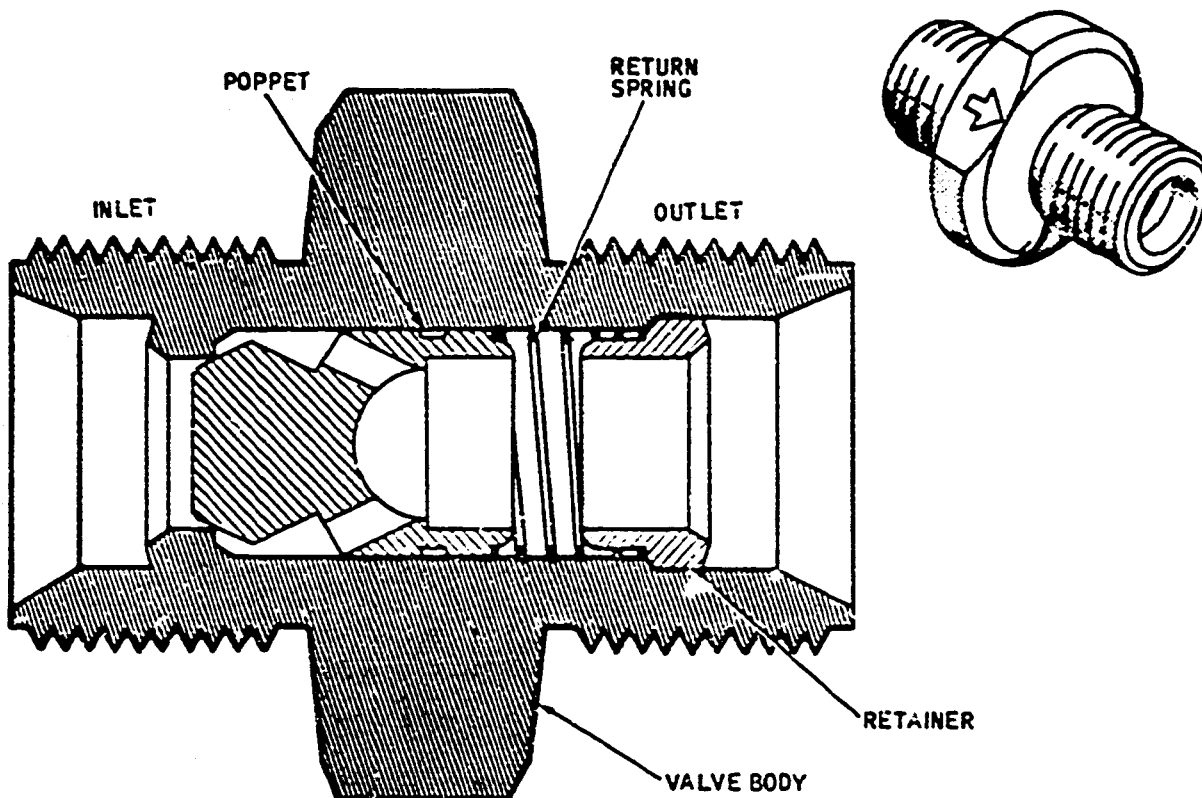

MINIATURE CHECK VALVE

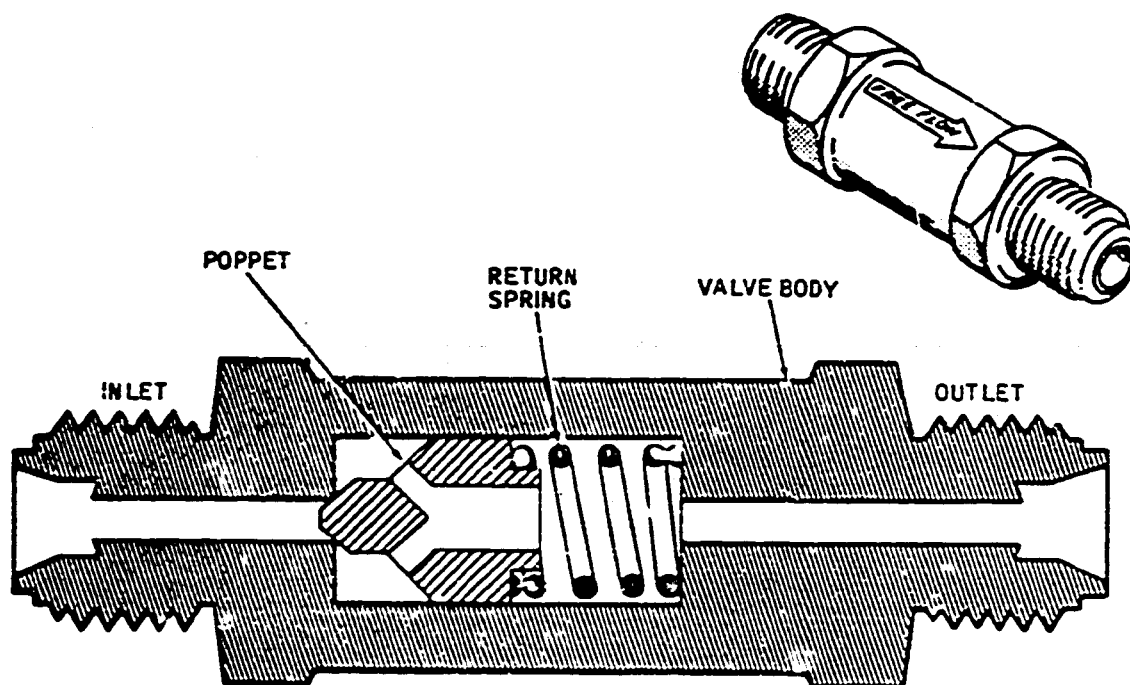

STANDARD CHECK VALVE

HA2-18A


Hydraulic Check Valves -- Typical  
Figure 10

Oct 1/67

Printed in U.S.A.

29-10-0  
CODE 18  
Page 21

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

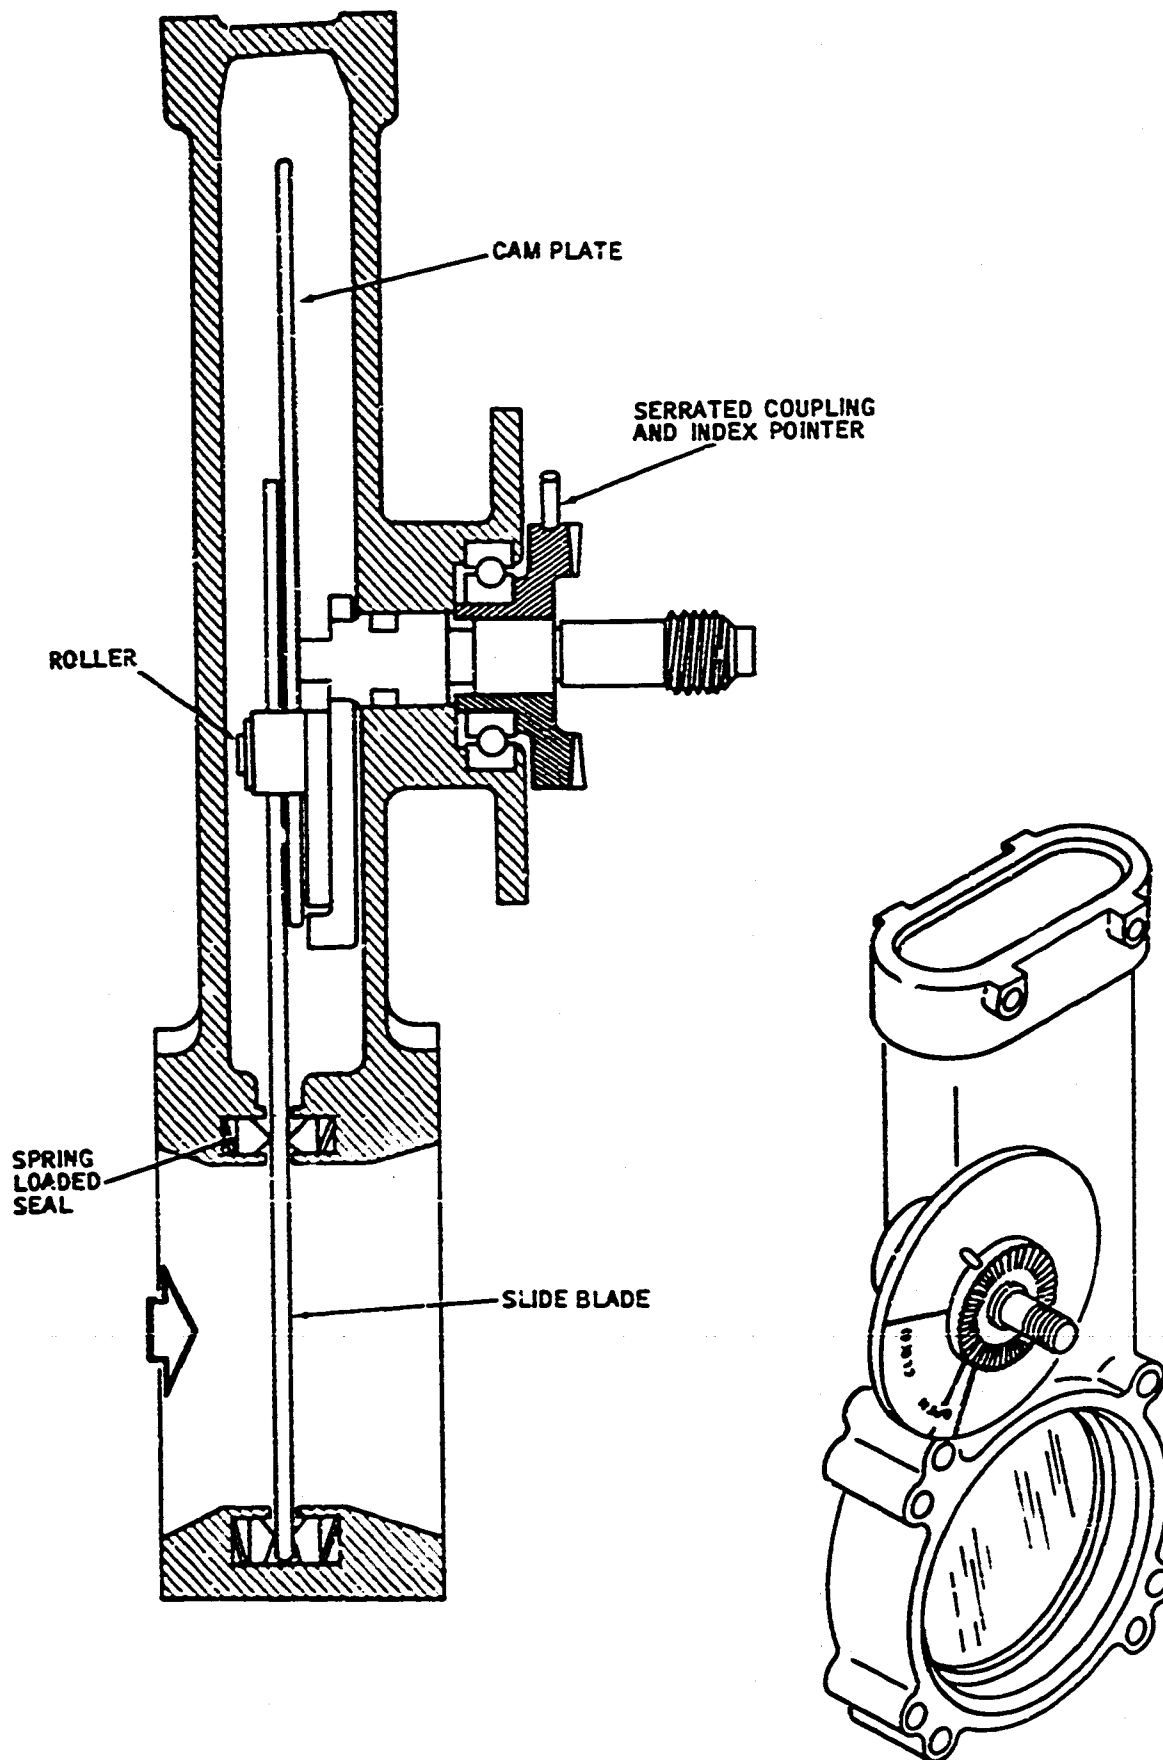

HA2-2209


Engine Hydraulic Fire Shutoff Valve -- Schematic  
Figure 11

29-10-0  
CODE 18  
Page 22


Printed in U.S.A.

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

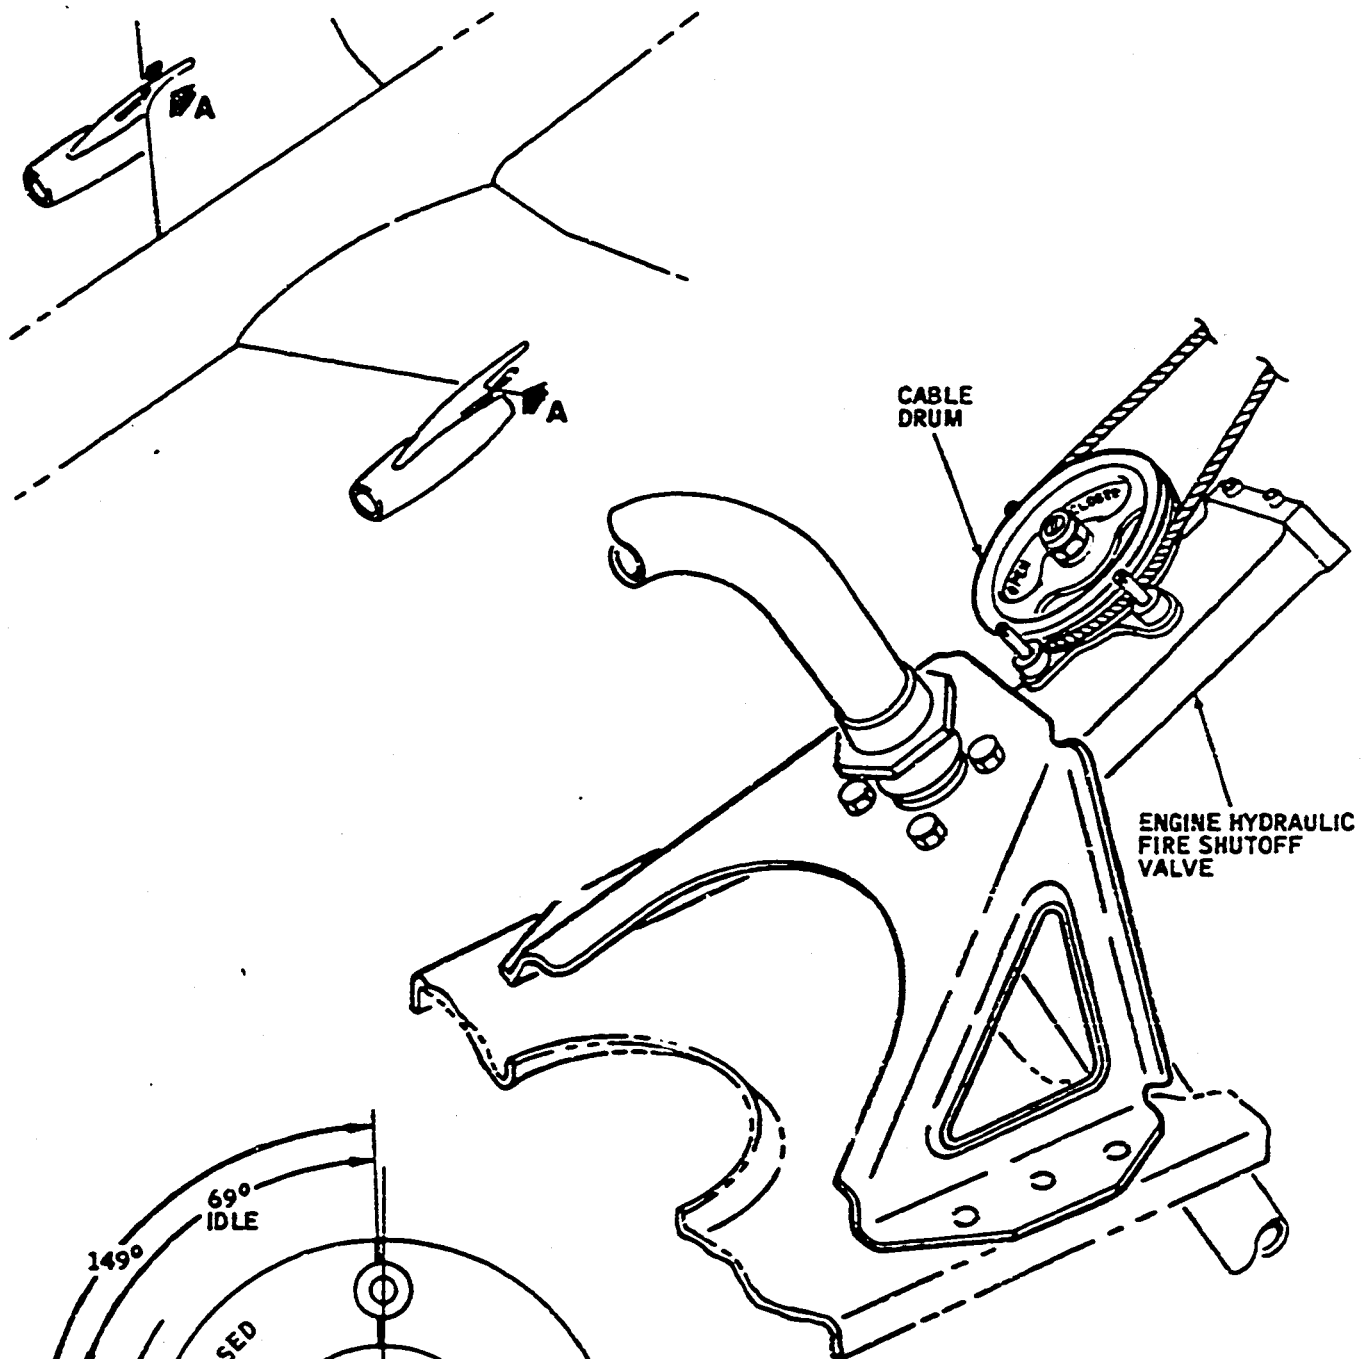

VIEW A

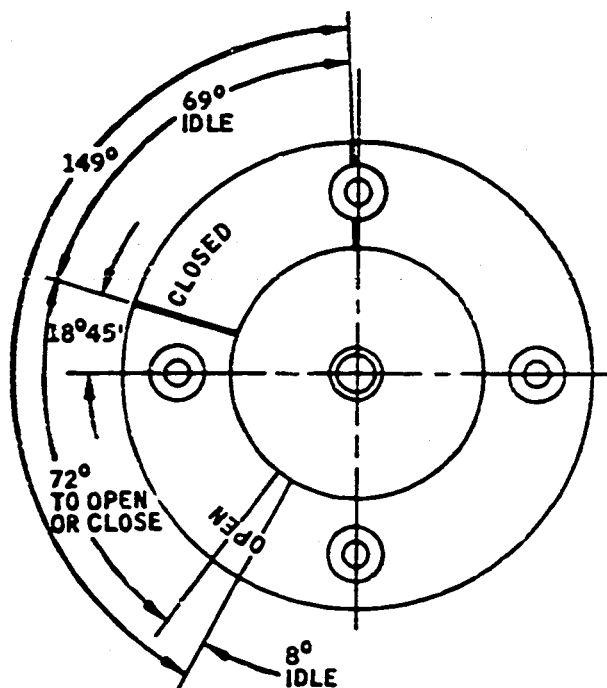

VALVE POSITION DIAGRAM

Engine Hydraulic Fire Shutoff Valve  
 Figure 12

HA2-2978

29-10-0  
 CODE 18  
 Page 23

Aug 1/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

from the flight compartment to prevent the flow of hydraulic fluid into the engine section.




- (2) The engine hydraulic fire shutoff valve is mounted on a 2-piece channel bracket which is installed inside the wing leading edge, aft of the firewall of each inboard pylon. Access to the valve is through the access door located on the lower side of the wing leading edge, outboard of either the left or right inboard pylon. Each valve is located approximately 30 inches inboard of the access door.
- (3) Internally, the valve consists of a valve arm, valve arm link, cam plate, and slide blade. The valve arm link attaches to the valve arm and is allowed to swivel through an arc in relation to the valve arm. The link has a stop that will contact the arm when the two have traveled to the valve closed, full overtravel position. In the full open pretravel position, the link contacts the arm stop.
- (4) A roller attached to the end of the link rides in, and extends through, a J-shaped slot in the cam plate. The rotation of the valve arm causes the link roller to follow the cam slot, allowing the arm and link to move through independent arcs.
- (5) The slide blade (gate of the valve) is slotted near the one end and also receives the link roller extending through the cam slot. The slide blade is positioned parallel to the cam plate and is guided by two grooves in the housing. This will allow the blade to open or close through porting of the valve by the action of the arm and link. The cam plate is pinned to the valve shaft, securing it rigidly in two positioning grooves in the housing. A pin-indicator is provided to relate valve position to a reference plate placarded open and closed.
- (6) The engine hydraulic fire shutoff valves are cable actuated by the fire control handles, located on the overhead switch panel in the flight compartment. When the fire control handles for either inboard engine is moved, the cable system rotates the drum which is attached to the corresponding shutoff valve shaft. This action extends the valve blade into the fluid passage to block the flow of fluid. The valve operates from open to close by clockwise rotation of the cable drum. The valve gage will idle during the first 8 degrees of rotation of the cable drum, and then will close in the next 72 degrees. The cable drum will continue to rotate the shaft for an additional 69 degrees after the gate valve is closed, locking it overcenter. Total travel of the cable drum is 149 degrees.

K. Engine-Driven Hydraulic Pump (See Figure 13.)

- (1) A variable-displacement, pressure-compensated, engine-driven hydraulic pump is installed on each inboard engine. The pump incorporates a solenoid bypass feature for reducing the output of the pump. The bypass valves are controlled by two engine hydraulic pump switches in the



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

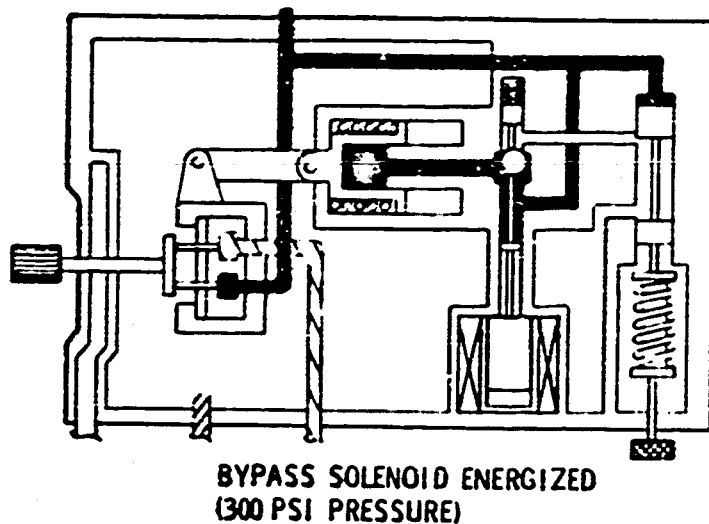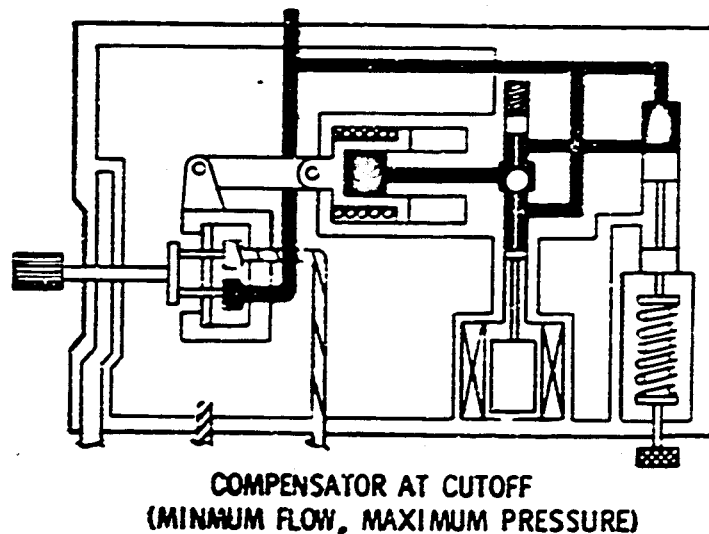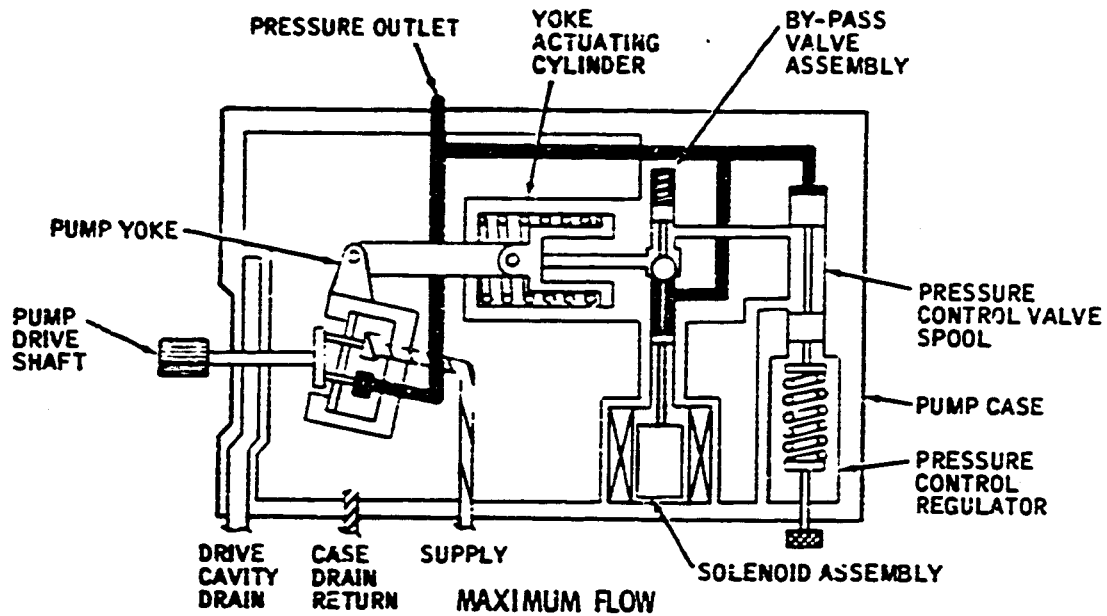

- PRESSURE
- CASE DRAIN
- SUPPLY
- DRIVE CAVITY DRAIN

HA2-837

Engine-Driven Hydraulic Pump Pressure  
 Flow -- Schematic  
 Figure 13

Jun 15/67

Printed in U S A

29-10-0  
 CODE 18  
 Page 25

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

flight compartment. The switch for the hydraulic pump on engine No. 2 is placarded left, on and bypass. The switch for the hydraulic pump on engine No. 3 is placarded right, on and bypass. When either of the two engine hydraulic pump control switches is placed in the bypass position, the bypass valve solenoid for that hydraulic pump is energized and the pump pressure decreases to approximately 300 ( $\pm 100$ ) psi. When either switch is in the on position, the control circuit to the corresponding bypass valve is open and the hydraulic pump operates normally in the pressure range of 2850 to 3050 psi. The pump provides a continuous, nonpulsating flow of hydraulic fluid, under pressure, to the hydraulic manifolds for distribution throughout the hydraulic system. Each of the engine-driven pumps is located on the accessory drive pad of the inboard engines. These pumps are accessible through the doors on the right side of the nacelles, and removal of the engine bypass duct.

- (2) Three case drain ports are provided: two are on the yoke assembly housing, and the third is on the casing for the pressure control valve, adjacent to the inlet port fitting. The case drain port on top of the yoke assembly housing is full of fluid at all times. This drain connection is ported back to the low-pressure return port at the reservoir. The inlet port fitting is on top of the pump housing and the outlet port fitting is opposite to it on the bottom of the housing, and contains a low-pressure indicating light switch.
- (3) The yoke control piston casing is an integral part of the pump case. Four self-locking nuts are used to hold the piston casing end-plate in position. The bypass valve assembly, consisting of the valve body and a solenoid assembly, is mounted externally on the pump case, under the yoke control piston casing. This solenoid valve is provided with an electrical connector. A pressure control regulator is installed on the bypass valve body by means of four bolts. This regulator is cylindrical and is provided with an external adjustment screw. A lock screw is used to retain the adjusting screw after the adjustment has been made.
- (4) Hydraulic fluid enters the pump through an inlet port. Passages in the yoke carry the fluid to the valve plate, which ports the fluid to the cylinder block. The nine pistons in the cylinder block are actuated by the rotating drive shaft, thereby pressurizing the fluid. From the cylinder block, the fluid is routed to the outlet port of the yoke and then to the pump pressure lines. The pressure control regulator is actuated by pump output pressure that is bled to the regulator. The regulator meters the pressure to the yoke control piston, which positions the yoke.
- (5) The maximum pump pressure is determined by the adjustment of the pressure control regulator. The pressure control regulator allows maximum output flow (22.5 gpm at 3500 rpm) up to 2850 psi system pressure. When this pressure is reached, the yoke assembly starts to move towards the zero flow position.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Pressure continues to rise until the displacement is reduced from maximum flow to zero flow and 3000 psi is reached. If the engine-driven hydraulic pump control switches are in the on position, and the output pressure of either pump drops below 1500 psi, an amber light located in the flight compartment comes on.

L. Engine-Driven Hydraulic Pump Check Valves (See Figure 10.)

- (1) Two check valves, rated at 3000 psi, are installed in the lines from each engine-driven hydraulic pump. One check valve is installed in the pressure line and the other is in the case drain line. The check valves in the pump pressure lines prevent reverse flow of hydraulic fluid through the pump, when the pump is inoperative or when external hydraulic pressure is supplied to the system. Access to the valves can be gained through an access door in the forward right apron of each inboard pylon. The valves are mounted on the exterior wall of the inlet box by means of the bulkhead fittings and retaining nuts.
- (2) Normal operating pressure will unseat the poppet, and fluid will flow through the valve. When pressure downstream of the valve exceeds pressure from the pump, the pressure, with the aid of the return spring, will seat the poppet. This prevents reverse flow of hydraulic fluid through the pumps.


M. Engine-Driven Hydraulic Pump Case Drain Filter (See Figure 14.)

- (1) A line-type, micronic filter, for use in a low-pressure hydraulic system, is installed in the engine-driven hydraulic pump case drain return line between the pump flow check valve and the hydraulic system reservoir. The case drain filter is installed on the aft surface of the rear spar opposite the leading edge of the inboard flap assembly. One filter is used for each engine-driven pump. Access is gained to the filter by lowering the flaps. A second check valve is installed adjacent to the filter in the downstream side of the case drain return line.
- (2) Externally, the filter is approximately 5 inches high and 2 inches wide, with ports marked inlet and outlet. The bowl is cylindrical in shape, with hex-shaped wrench flats at the lower end. A self-sealing, magnetic drain plug is installed in the bottom end of the filter bowl. The filter element is made of chemically treated paper.


N. Dual Filter and Relief Valve (See Figure 15.)

- (1) The hydraulic power system dual filter and relief valve consists of two filters and two relief valves installed in the same body. The unit filters the hydraulic fluid from the two engine-driven hydraulic pumps, and the pressure relief valves assure that excessive pressures do not build up in the pressure line from the pumps. The unit is located in the left main gear wheel well on the lower portion of the rear spar, approximately 1 foot outboard of the centerline shear web.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

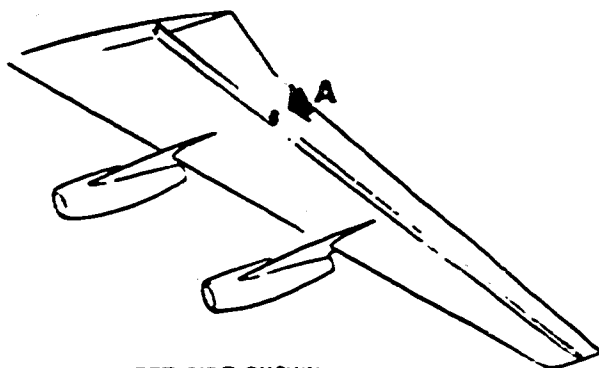

LEFT SIDE SHOWN  
 RIGHT SIDE OPPOSITE

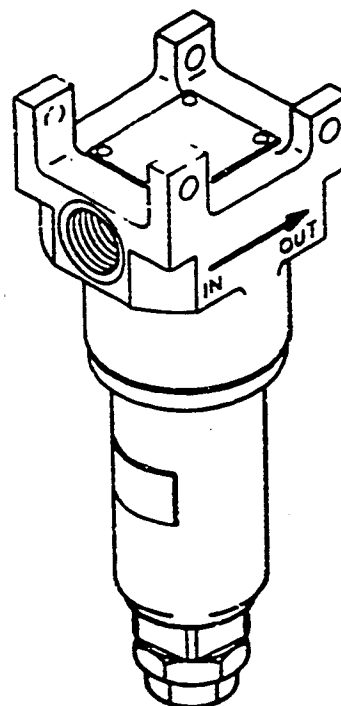


VIEW A

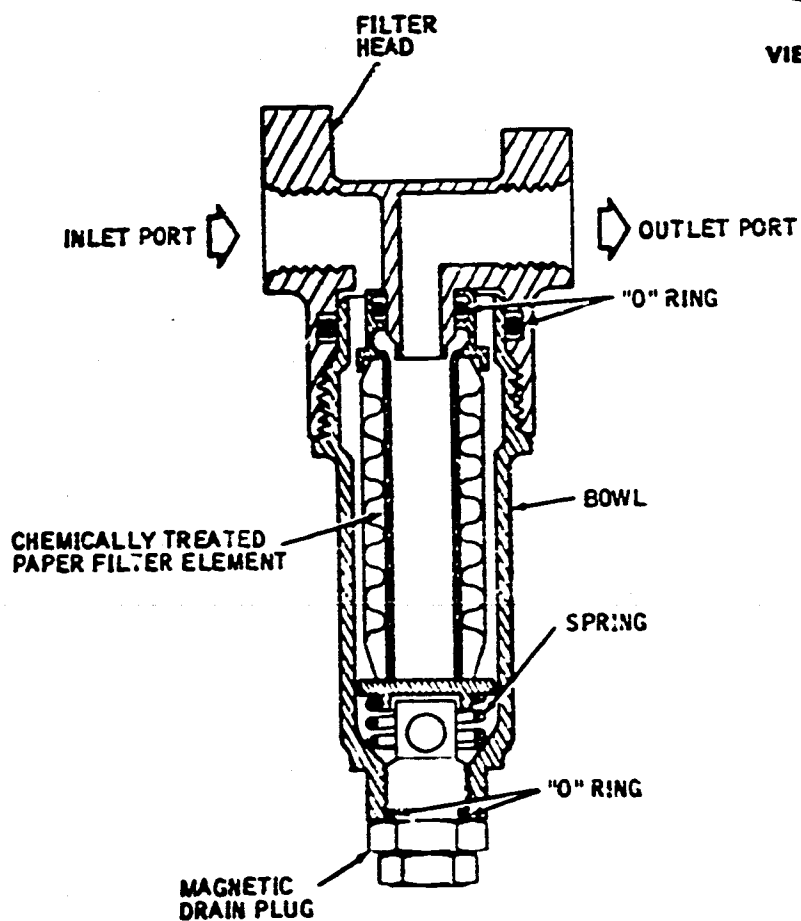

HA2-31

Engine Driven Hydraulic Pump Case Drain  
 Filter -- Cutaway View  
 Figure 14

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

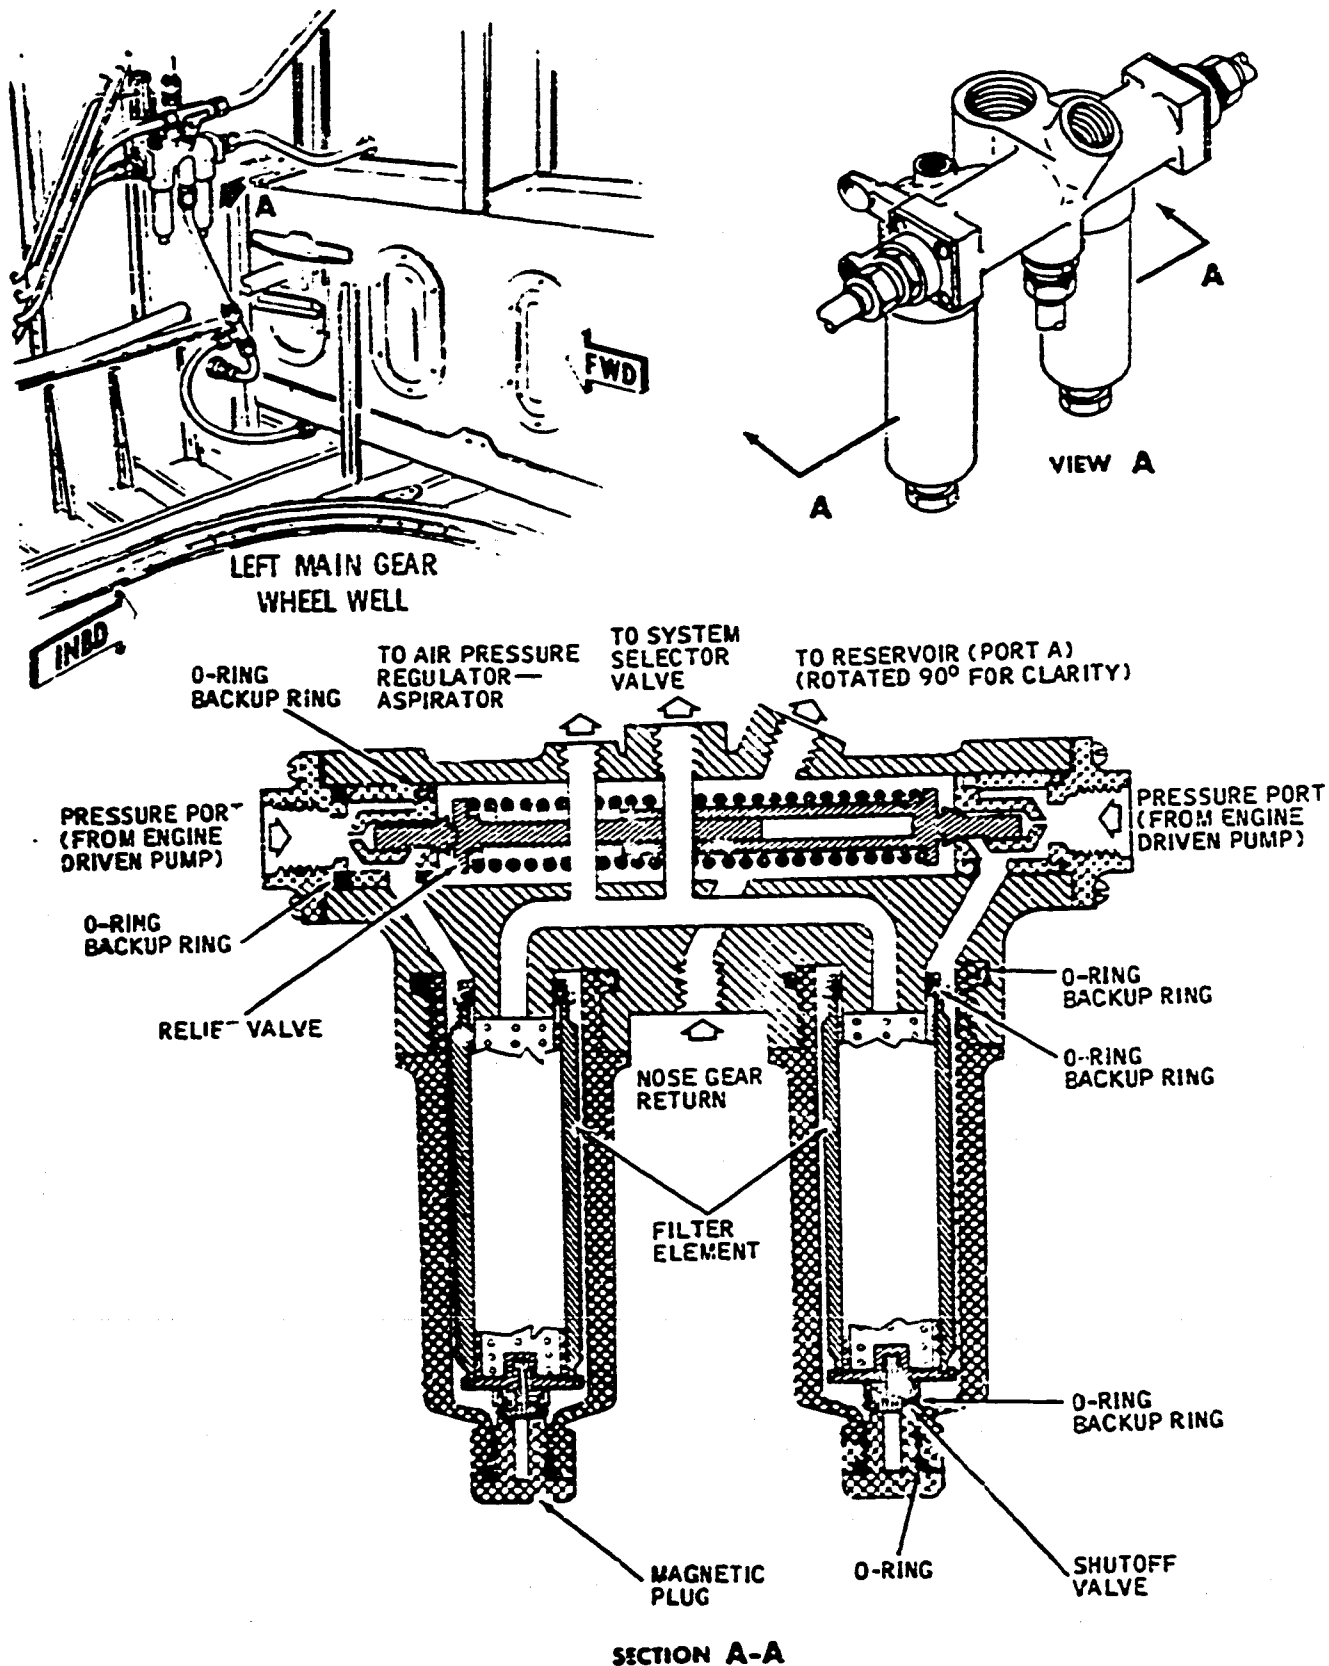

Dual Filter and Relief Valve -- Cutaway View  
 Figure 15

Jun 15/67

Printed in U.S.A.


HA2-20

29-10-0  
 CODE 18  
 Page 29

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The unit consists of a casting with a flange-mounted pressure inlet port on each end. Two pressure outlets are located on the top of the casting. One outlet, centrally located, is the main pressure outlet to the system selector valve. The other, located to the left of the selector valve port, is the pressure outlet to the air pressure regulator-aspirator. The return outlet port for the relief valve portion of the unit is located on the center of the aft face of the body, canted upward. The nose gear return line is connected to a check valve installed in a return line port, located between the two filter bowls.
  - (3) The pressure relief valves are located behind the pressure inlet ports and are connected to the return outlet port of the unit. The inlet from the nose gear return line is routed through the casting to the return outlet port.
  - (4) If either of the filter elements becomes clogged, pressure above 3300 psi at the inlet port will unseat the poppet. Pressure above 3500 psi will allow full flow of 22.5 gpm to flow to the return port of the unit and back to the reservoir. The relief valves will reseal at approximately 3000 psi.
  - (5) A check valve is installed in the system selector valve port to prevent reverse flow of pressure through the filter during auxiliary hydraulic pump operation.
0. System Selector Valve (See Figures 16 and 17.)
- (1) The system selector valve is a 3-position valve which permits directional control of fluid under pressure. The valve is installed on the left hydraulic power manifold and is accessible through the left main gear inboard door.
  - (2) The selector valve pressure-to-system port and the return port are directly ported to the manifold. The engine pump pressure enters the valve through a port on the large end of the valve, and the auxiliary pump inlet and alternate ports are located at the top, toward the aft end of the valve. The valve control crank is attached to a push-pull rod and a cable sector.
  - (3) Operation of the system selector valve is controlled by a lever located on the right side of the system engineer's control pedestal. When the control lever is moved to the selected position, the cable system, through the sector and crank, operates the valve positioning lever to drive the slide spool assembly to the selected position. When the control lever is placed in the general system (normal) position, the selector valve is actuated, causing hydraulic fluid to enter the valve through the system pressure port. The fluid is then directed into the manifold through the pressure-to-system port. In the general system (normal) position, fluid from the auxiliary pressure port is also routed to the pressure-to-system port. In the bypass/general system position, the selector valve ports engine pump pressure into the manifold through the return port. In this position, the auxiliary pump pressure is ported

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

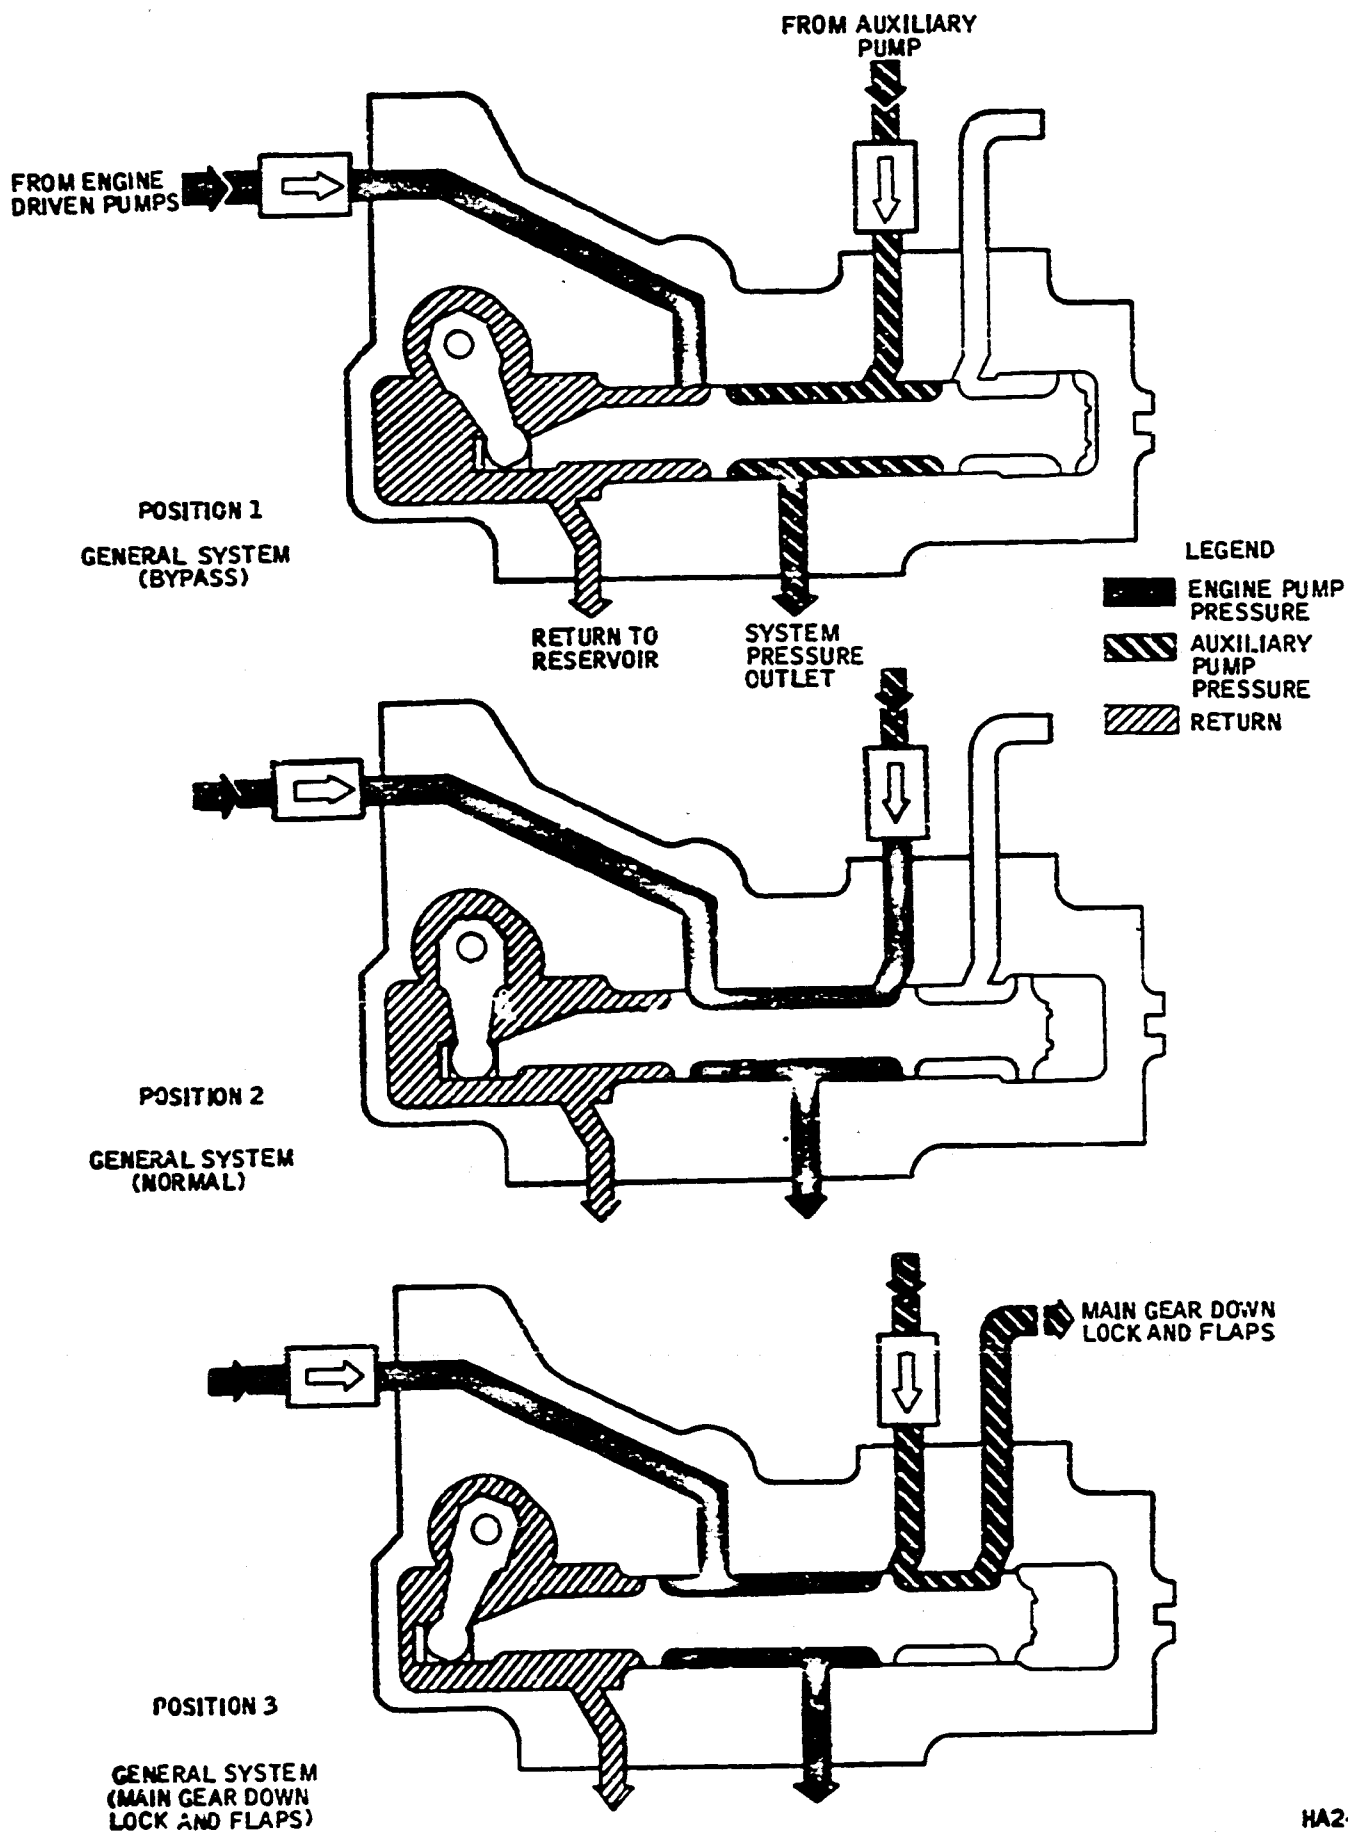

System Selector Valve -- Schematic  
 Figure 16


HA2-26

29-10-0  
 CODE 18  
 Page 31

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

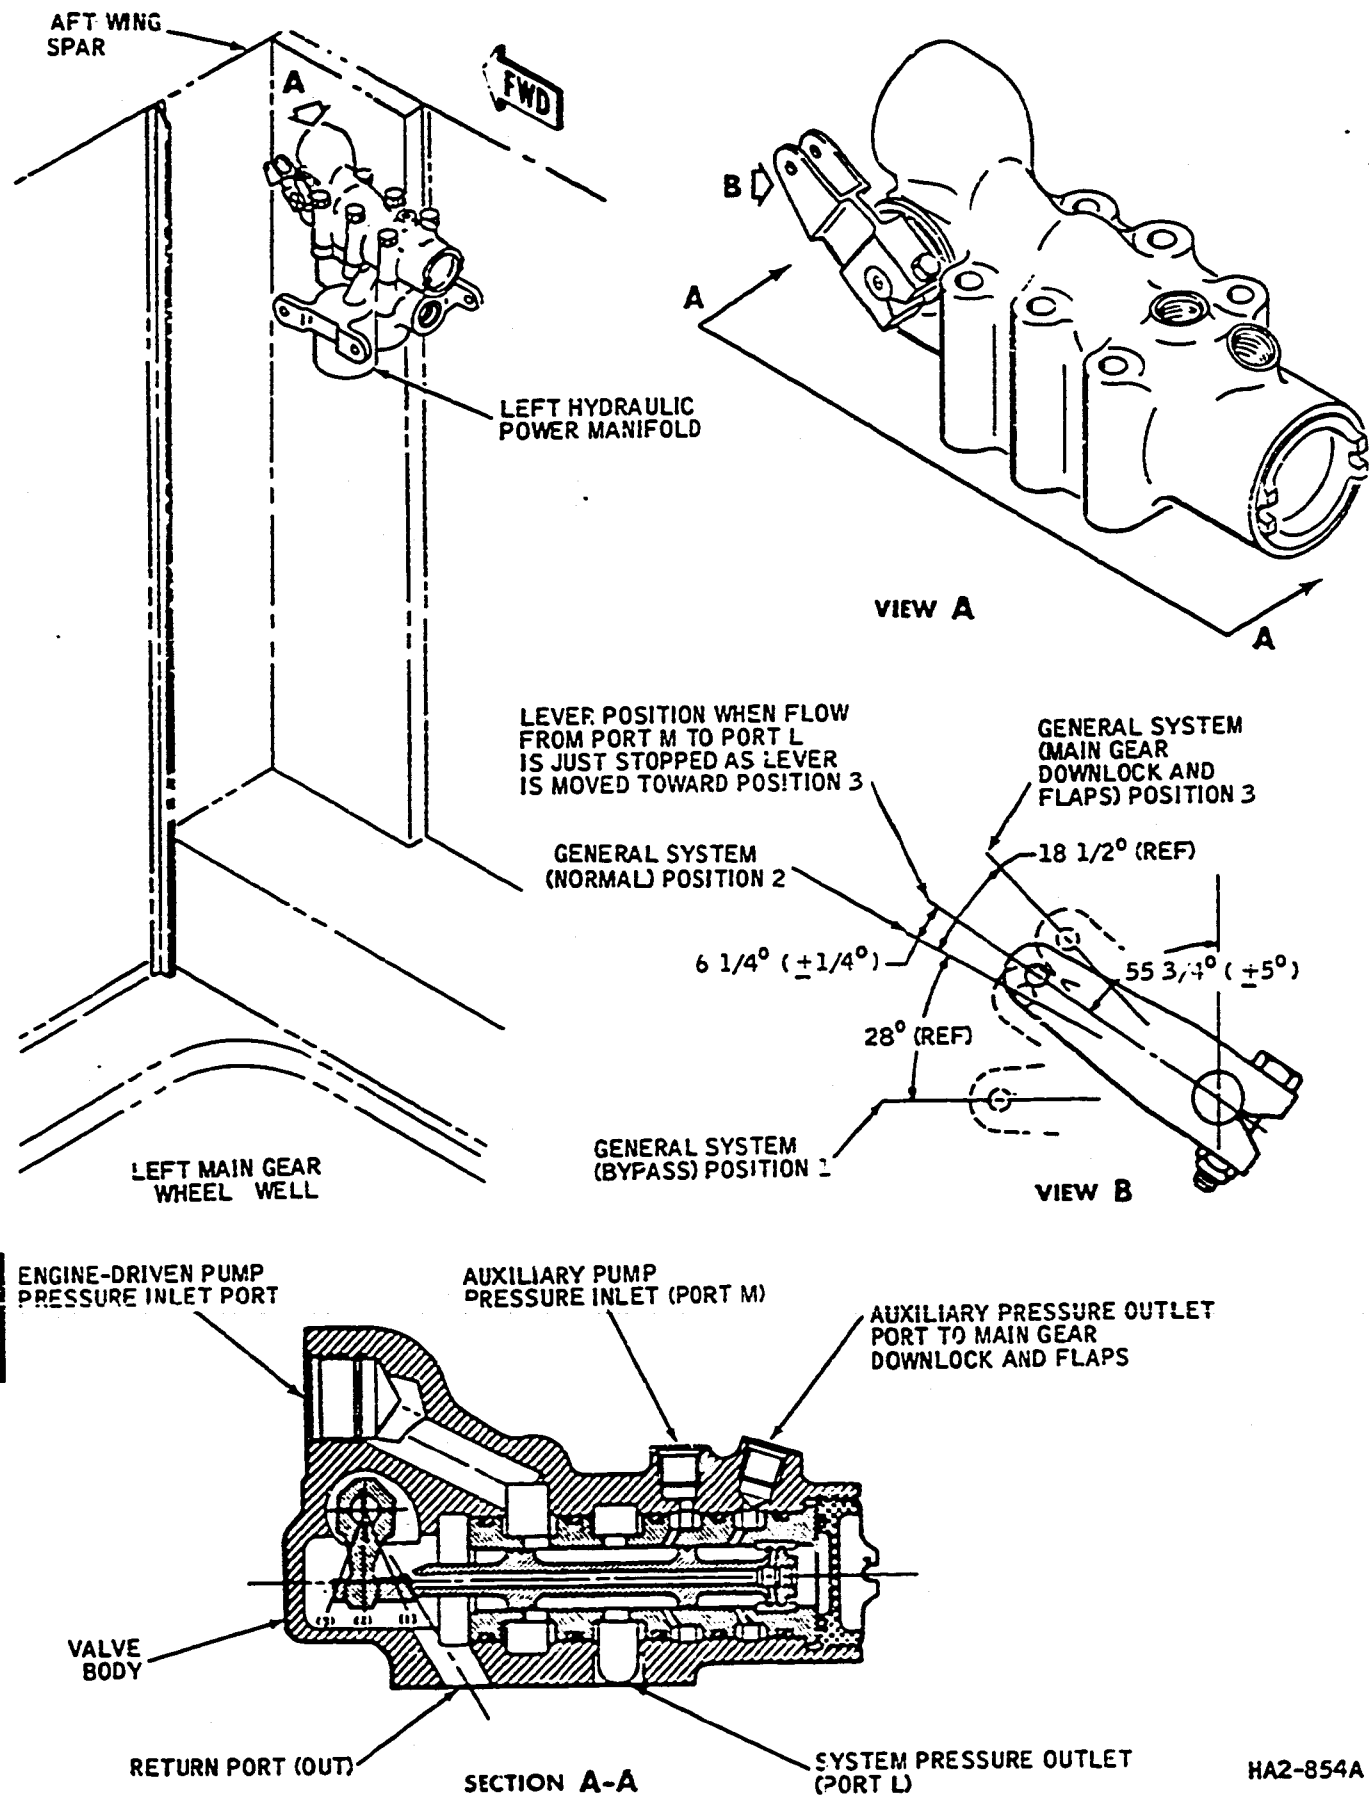

System Selector Valve -- Cutaway View  
 Figure 17



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

to the general system. In the general system/main gear down and flaps position, pump pressure is routed through the alternate port, at the top of the valve, for alternate operation of the flaps and the landing gear downlock cylinders. Internal leakage provides lubrication for the moving parts of the valve.



P. Left Hydraulic Power Manifold (See Figure 18.)

- (1) The left hydraulic power manifold distributes fluid pressure from the hydraulic pump (any one of the three pumps), through control valves to the various airplane hydraulic subsystems. The left power manifold is located overhead in the left wheel well. Access to the left manifold is through the left main gear inboard door.
- (2) One valve-mounting pad is provided on the top of the manifold for the system selector valve. Four ports are provided on the manifold for connection of hydraulic pressure and return lines. Three of these ports are pressure outlet ports; one, located on the aft face of the manifold and one located on the bottom of the manifold port fluid to the flight controls. The third pressure outlet port, located on the bottom of the manifold, ports fluid directly to the priority valve, which in turn, ports fluid to the nose gear and to the right power manifold. The fourth, a return port, located immediately forward of the pressure line port on the bottom of the manifold, is connected by a line to a return port of the reservoir.

Q. Right Hydraulic Power Manifold (See Figure 19.)

- (1) The right hydraulic power manifold distributes fluid pressure from the hydraulic pumps (engine-driven or auxiliary, or any combination of these three pumps), through the control valves to the various hydraulic subsystems. The right hydraulic power manifold is located overhead in the right wheel well. The manifold is held in place with braces and is accessible through the right main gear inboard door.
- (2) The manifold contains passages for pressure and return fluid distribution, four check valves, ports for pressure and return lines, and mounting pads for the various control valves.
- (3) The right manifold receives fluid pressure from the left manifold. Pressure is ported through check valves to the wing flap control valve, to the slot control valve, to the main gear control valve, to the brake control valve, to the brake pressure transmitter, and to the brake accumulators.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

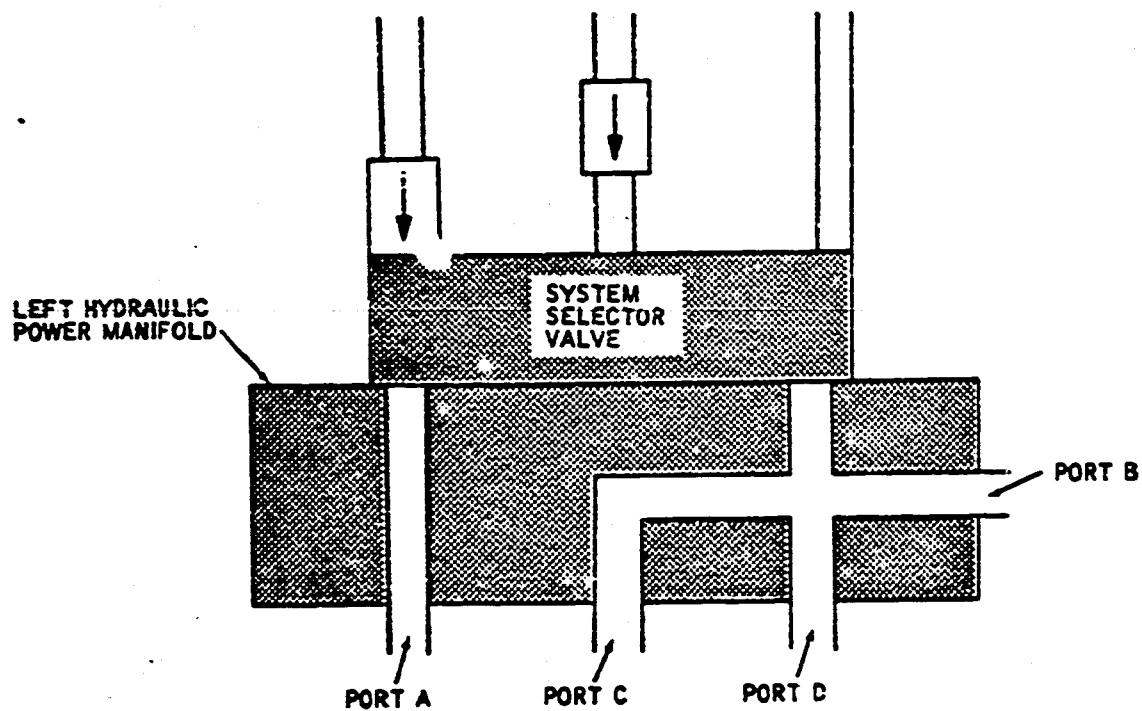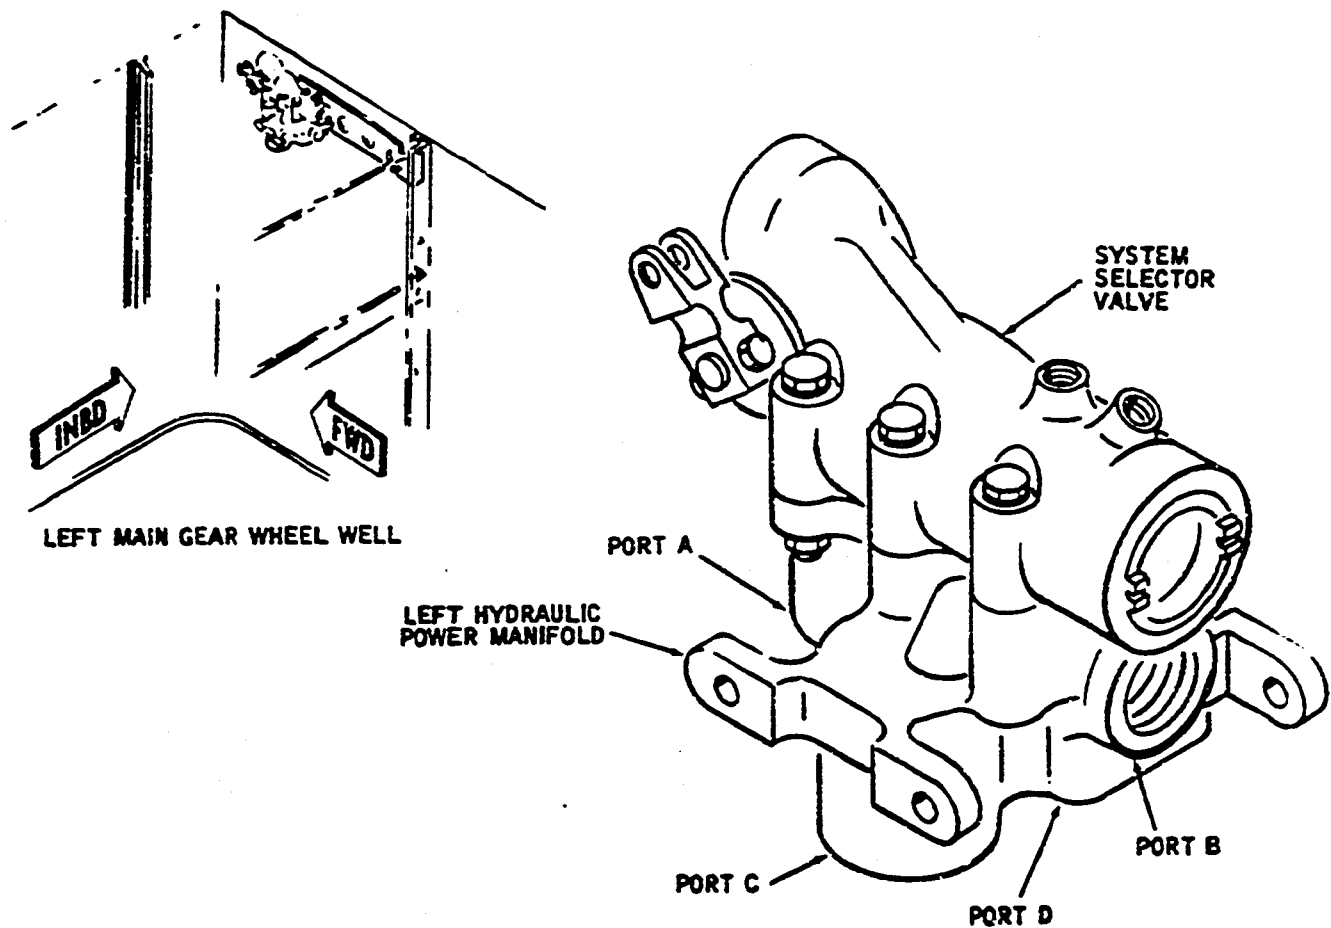


HA2-855

Left Hydraulic Power Manifold -- Schematic  
 Figure 18


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

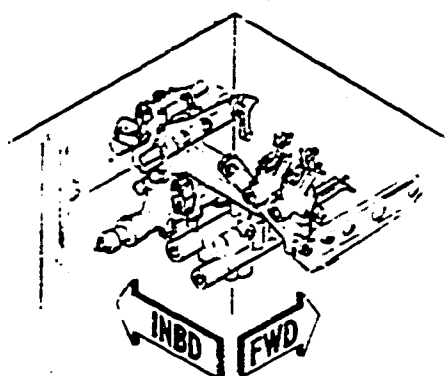

RIGHT MAIN GEAR  
WHEEL WELL

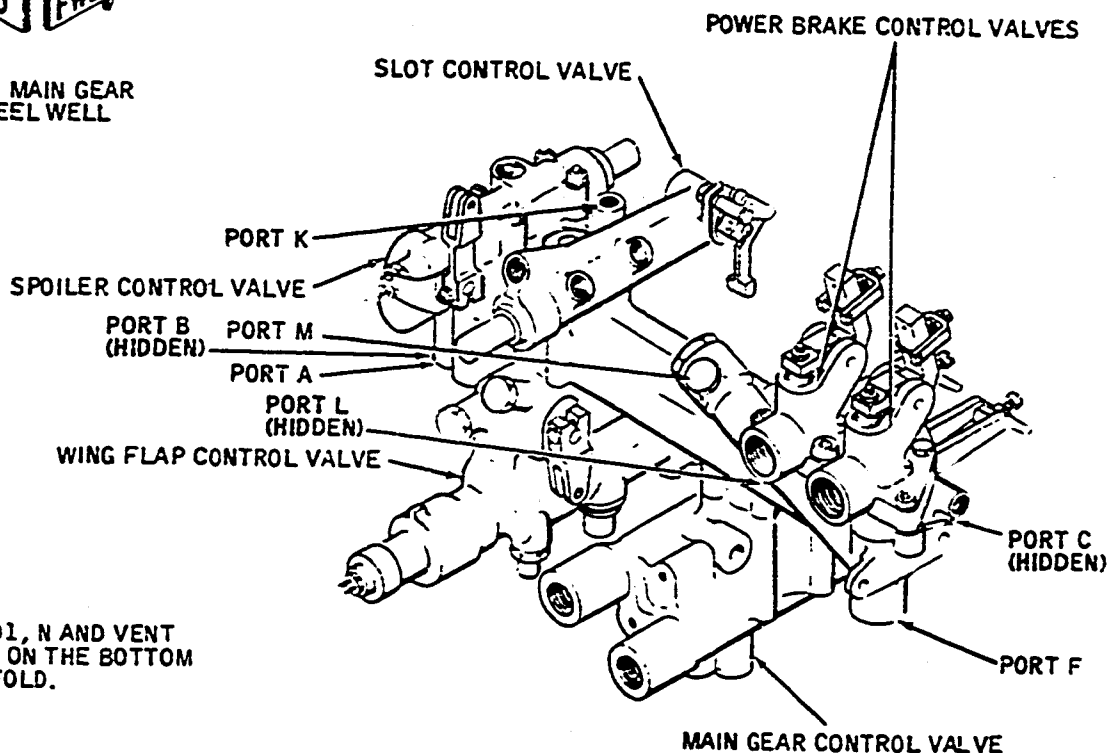

NOTE: PORTS B, C, D<sub>1</sub>, N AND VENT  
ARE LOCATED ON THE BOTTOM  
OF THE MANIFOLD.

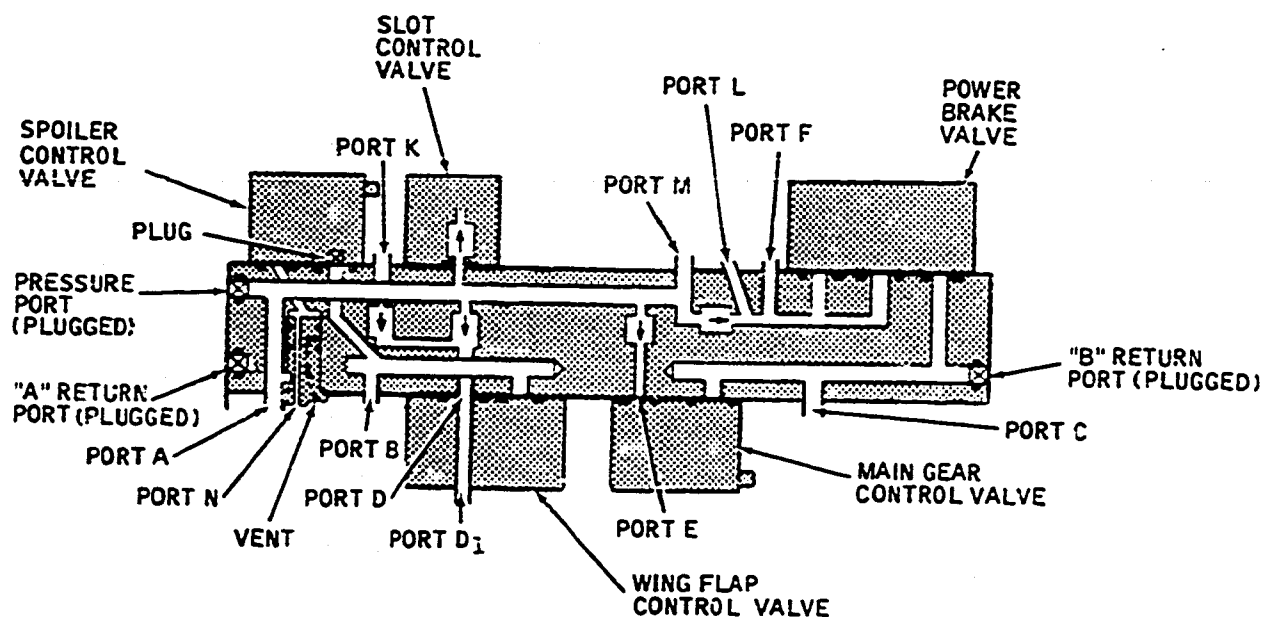

HA2-29A

Right Hydraulic Power Manifold -- Schematic  
 Figure 19

Nov 1/69

Printed in U.S.A.

29-10-0  
 CODE 18  
 Page 35

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (4) Auxiliary hydraulic pressure is ported from the alternate port of the system selector control valve into port K in the right manifold. Port K is located inboard of the spoiler control valve. From port K, auxiliary hydraulic pressure is ported through a check valve to the downstream side of the wing flap control valve check valve and into the wing flap control valve for alternate operation of the wing flaps.
- (5) The return passage from the wing flap control valve ports fluid to return port A. The brake control valve return passage ports fluid into return line B through a two-way restrictor. The main gear control valve downline return fluid uses a separate port in the valve, bypasses the manifold, and returns the fluid directly to A return line to the reservoir. The upline in the main gear control valve uses the same return port, return port B, in the manifold as the brake control valve.

R. Deleted.

S. Hydraulic Power System Accumulator (See Figure 20.)

- (1) The hydraulic power system accumulator is a spherical welded-steel, fluid and air bladder-separated container. The accumulator is installed in the pressure line of the hydraulic power system to provide a reserve supply of fluid under pneumatic pressure and to act as a shock absorber for system pressure surges.
- (2) The accumulator is located immediately aft of the left hydraulic power manifold and is accessible through the left main gear inboard door. It is mounted with two corner brackets and clamp blocks at the upper and lower port fittings.
- (3) The accumulator is installed in the pressure line of the hydraulic power system and is initially charged with 1000 psi of dry nitrogen. As the system pressure builds up, fluid is forced into the upper chamber of the accumulator, further compressing the trapped nitrogen to approximately 3000 psi. With full hydraulic system pressure, 3000 psi is indicated on the pressure gage adjacent to the filler valve. This reserve pressure smooths out any momentary lag in the pump's response to the system's demand for greater fluid flows. The accumulator permits a gradual rise in system pressure, thereby absorbing the shock of pump surges and relieving the piping and system operating units of high-impact loads. When the engine-driven hydraulic pumps are not operating, the accumulator provides system pressure (at a diminishing rate) until a quantity equal to the stored volume in the accumulator has been used by the system.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

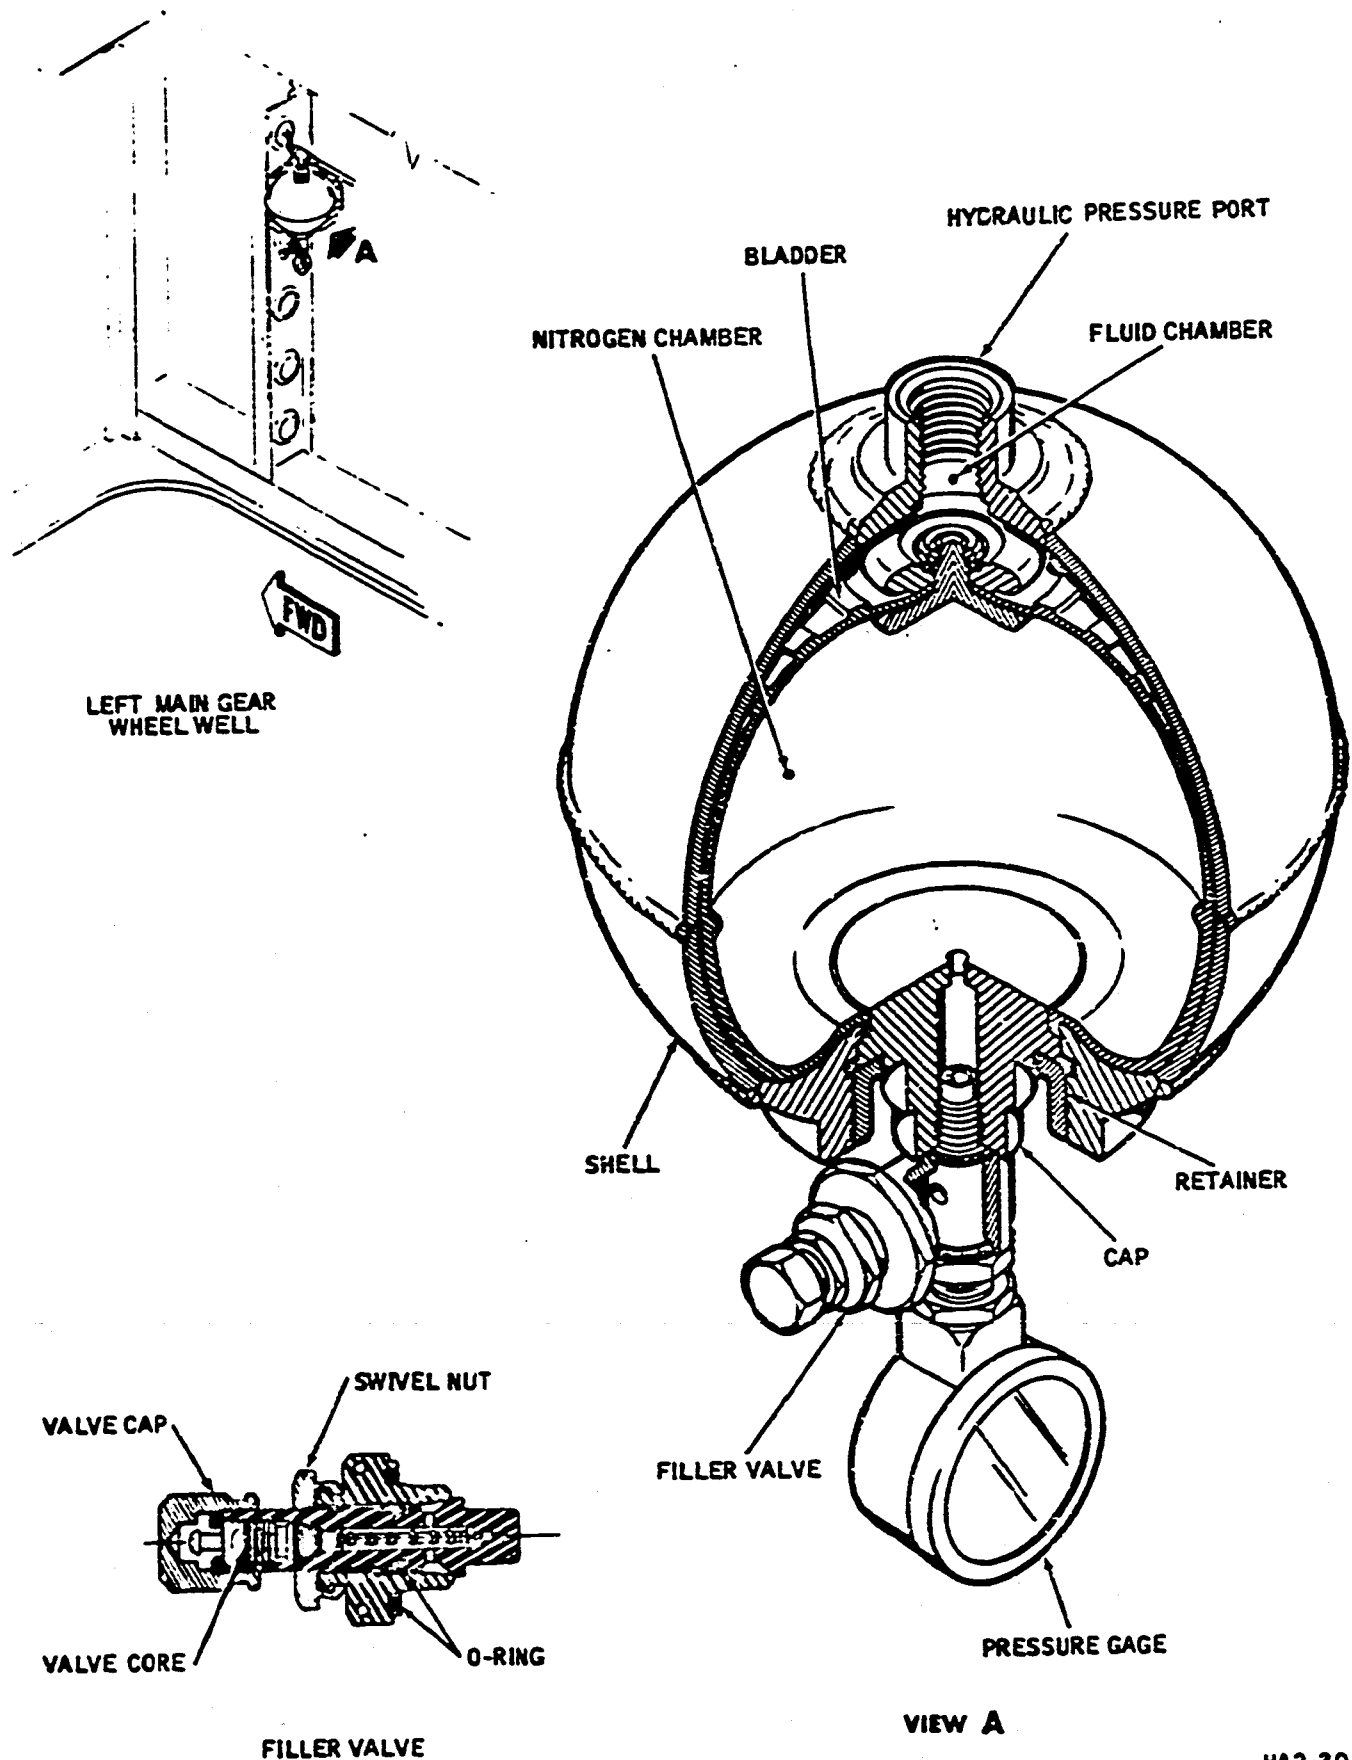

Hydraulic Power System Accumulator --  
 Cutaway View  
 Figure 20

HA2-30

29-10-0  
 CODE 18  
 Page 37

Jun 15/67



Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

T. Hydraulic System Priority Valve (See Figure 21.)

- (1) The priority valve is located in the left wheel well near the left hydraulic power manifold. The valve is installed in the hydraulic pressure line, between the two power manifolds, downstream of the pressure supply takeoff port for the flight controls. The priority valve is a balanced relief valve which reserves initial hydraulic pressure (up to 2150 psi maximum) for use in the flight control systems. The valve consists of a body with an inlet, an outlet, and a breather port. Internally, the valve contains a poppet valve plate, a poppet, a poppet valve load-spring, a piston, a piston load-spring, and a piston load-spring housing. The piston load-spring housing chamber is vented to ambient air through a breather hole which is covered by a butyl rubber band.
- (2) The priority valve shuts off hydraulic pressure to all subsystems downstream of the left power manifold, whenever the hydraulic pressure drops below 1700 psi minimum. At this point, the valve closes to reserve the hydraulic pressure for use in the flight control systems, preventing them from reverting to manual operation. When the hydraulic pressure rises to 2150 psi maximum, the priority valve opens and supplies pressure to the right manifold and all subsystems downstream of the priority valve.
- (3) Hydraulic fluid from the left power manifold enters the priority valve through the inlet port, passes through the poppet valve plate holes, and applies pressure against the piston. When sufficient hydraulic pressure is applied to the piston, the piston load-spring compresses, unseating the poppet and permitting full flow through the valve. When the hydraulic pressure decreases to less than the opposing force value of the piston load-spring, the load-spring forces the piston against the poppet and shuts off fluid flow through the valve.
- (4) The maximum flow available from both engine-driven hydraulic pumps is: 44 to 45 gpm at takeoff, climb, and cruise configurations; 26 to 28 gpm at descent, approach, and engine idle configurations.
- (5) Some of the larger hydraulic system demands are as follows:
  - (a) Gear retraction -- 17 gpm (10 - 12 seconds)
  - (b) Gear extension -- 14 gpm (10 - 12 seconds)
  - (c) Wing flaps down -- 8 gp (10 seconds)
  - (d) Wing flaps up -- 3 gpm (22 seconds)
  - (e) Horizontal stabilizer -- 7 gpm
  - (f) Ailerons -- 17 gpm (25°/second)
  - (g) Rudder -- 3 gpm (25°/second)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

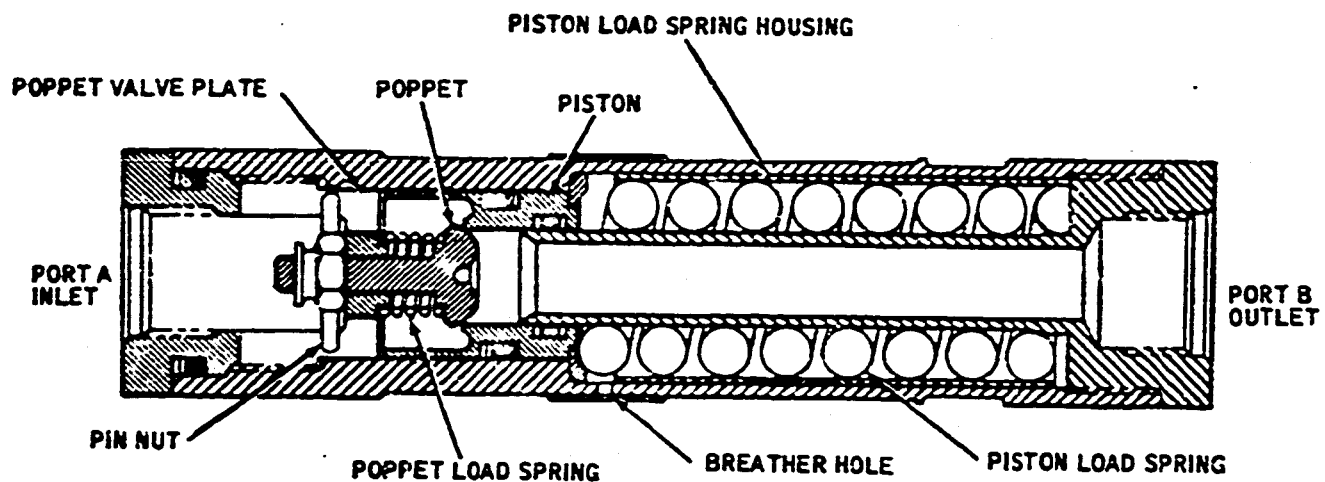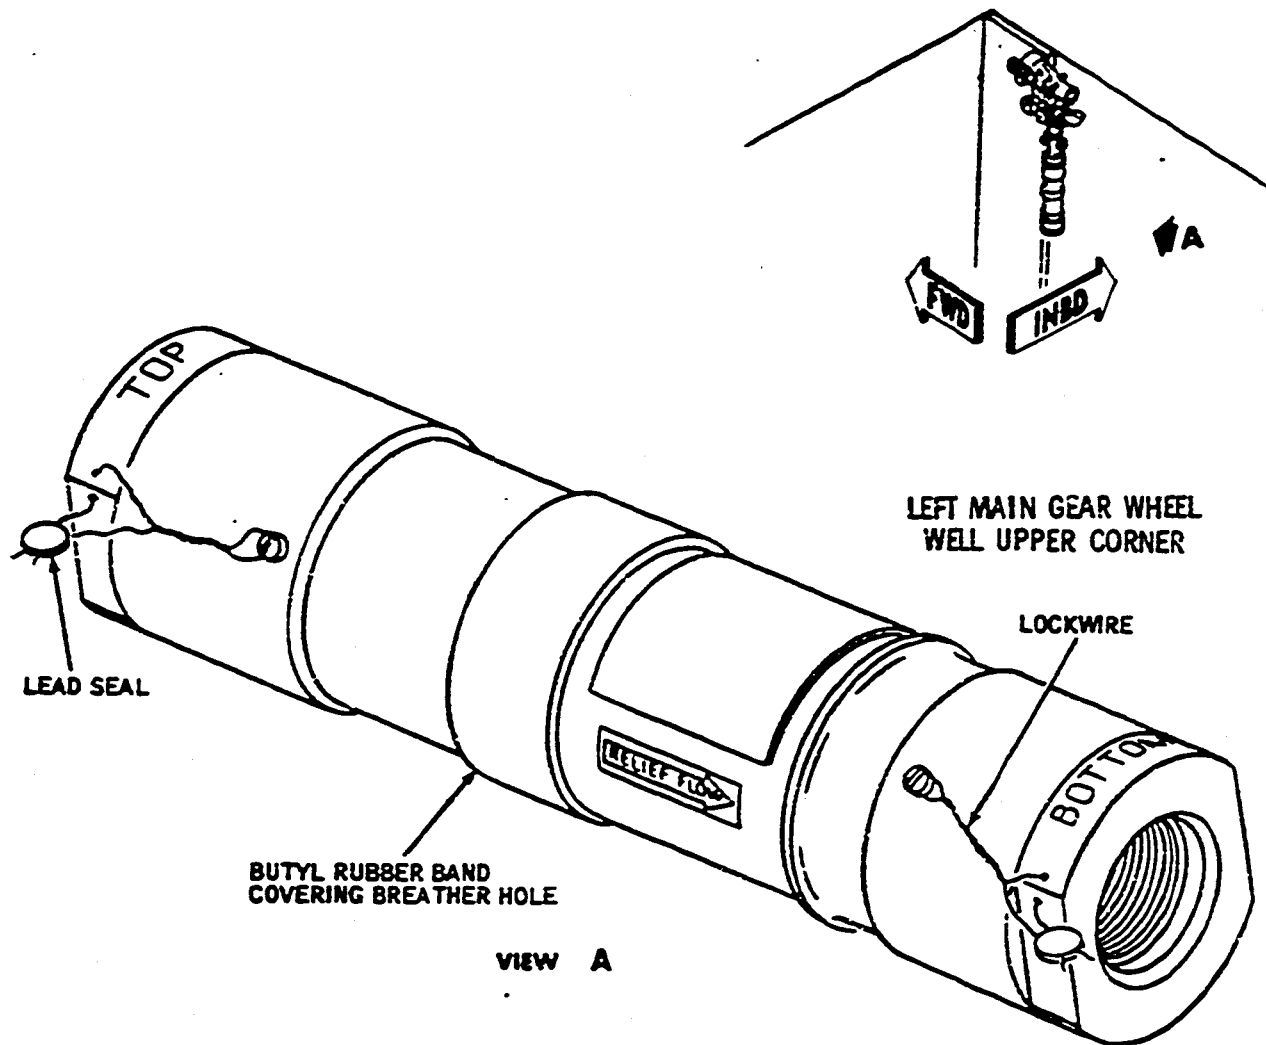

Hydraulic System Priority Valve -- Cutaway View  
 Figure 21

Aug 1/68

Printed in U.S.A.

HA2-856

29-10-0  
 CODE 18  
 Page 39

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) There are various combinations of hydraulic system operations which could cause momentary reversion of the flight controls to manual operation. To prevent reversion to manual operation, the priority valve assures that the left power manifold receives all the hydraulic fluid pressure under conditions of very large flow demands.

U. Hydraulic System Selector Control Lever

- (1) The hydraulic system selector control lever is a manually actuated, mechanical lever detented to three positions. The lever provides a mechanical means, through cables, for positioning the system selector valve and the auxiliary hydraulic pump supply selector valve. The hydraulic system selector control lever is located on the system engineer's control pedestal. The lever is attached to a drive sector, located on a common shaft with the other control pedestal sectors. The lever and sector are accessible through the cover plates on the system engineer's pedestal.
- (2) To put the hydraulic power system in the bypass condition, the system selector control lever is lifted out of detent and moved to bypass/general system position. At the same time, the cable moves the sector and pushrod of the system selector valve to the No. 1 position. The pushrod positions the system selector valve to the No. 1 bypass position. At the same time, the cables from the system selector valve sector move the auxiliary pump supply selector valve sector to No. 1 (auxiliary) position. The auxiliary pump supply selector valve remains in the auxiliary supply position through the idle feature of the sector rigging. In this condition, the engine-driven pump pressure is ported to the reservoir and the auxiliary pump supplies pressure to the general system. In this position, the fluid is supplied to the auxiliary pump from the low standpipe in the hydraulic system reservoir. To put the system into the alternate condition, the selector control lever is lifted out of detent and moved to the general system/main gear downlock and flaps position. The cables move the system selector valve sector to the No. 3 (alternate) position. The system selector valve sector moves the cables rotating the auxiliary pump supply selector valve sector to the No. 3 (alternate) position. As the sector rotates, the end of the arm moves away from the idle position. This positions the valves to the alternate position, supplying fluid to the auxiliary pump from the auxiliary pump alternate reservoir. In this position, fluid from the auxiliary pump is ported to the wing flap control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported to the general system.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - DESCRIPTION AND OPERATION

1. General

A. Description (See Figures 1 and 2.)

- (1) The hydraulic power system receives fluid pressure from the engine-driven hydraulic pumps, one installed on each inboard engine. The electrically driven auxiliary pump is used to supplement the engine-driven pumps, or to independently supply the system with fluid pressure.
- (2) The hydraulic system reservoir, located in the left wing root, has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir is used for fluid, and 1/10 is used for foam space. A separate air chamber is installed in the reservoir system to provide for a greater fluid capacity in the main reservoir. A reservoir filler assembly is installed in the piping between the reservoir and the air chamber and has a vent line from the filler neck to the tee at the top of the reservoir sight gage. The reservoir is pressurized to 30 to 35 psi by bleed pressure from the engine-driven pumps through an air pressure regulator-aspirator.
- (3) The engine-driven pumps receive fluid from the pressurized main reservoir through respective engine hydraulic fire shutoff valves. The engine hydraulic fire shutoff valves are normally open and can be mechanically controlled from the flight compartment. The pumps supply fluid pressure through respective check valves to the dual filter and relief valve. Some of the fluid from the filter is ported through the regulator-aspirator to pressurize the reservoir. Most of the fluid is routed through a check valve to the system selector valve, and then to the left and right hydraulic power manifolds. The manifolds distribute the fluid pressure to the subsystems.
- (4) Hydraulic fluid is normally supplied to the auxiliary hydraulic pump from a low standpipe in the main reservoir. During alternate operation, the auxiliary hydraulic pump receives fluid supply from the auxiliary pump alternate reservoir, which is located just aft of the auxiliary pump. From these reservoirs, the fluid is ported through the auxiliary pump selector valve which is mechanically controlled from the flight compartment by the system selector control lever. When operating, the auxiliary hydraulic pump supplies fluid pressure to the subsystems through the system selector valve which is also controlled by the system selector control lever in the flight compartment. A filter and check valve are installed in the line from the auxiliary pump to the system selector valve.
- (5) An accumulator is installed in the pressure line to the subsystems to provide a reserve supply of fluid and to act as a surge damper for the system.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Engine-driven pump fluid pressure is routed through the system selector valve to the left power manifold, where it is distributed to some of the subsystems and through the priority valve to the right power manifold. Fluid pressure from the right power manifold is distributed to the remaining subsystems.
- (7) The priority valve is a spring-loaded, poppet-type, balanced relief valve installed in the line downstream of the left power manifold. The priority valve's function in the system is to prevent the flight control systems from reverting to manual operation during high demands on the hydraulic system.
- (8) A fluid pressure transmitter, located in the nosewheel well, senses the system pressure, which is indicated on the hydraulic system pressure indicator in the flight compartment.

**B. Normal Operation**

- (1) Fluid is supplied to the hydraulic system from the pressurized hydraulic system reservoir. For operation of the hydraulic system under normal conditions, 8.1 US gallons (6.7 Imperial gallons; 30.6 liters) of hydraulic fluid are available to the engine-driven hydraulic pumps, and 12.9 US gallons (10.7 Imperial gallons; 48.8 liters) are available to the auxiliary hydraulic pump. Supply lines from the main reservoir carry fluid to each inboard pylon through normally open engine hydraulic fire shutoff valves to the engine-driven hydraulic pumps. Fluid is supplied to the auxiliary hydraulic pump from the main reservoir through a low standpipe at the base of the reservoir. Fluid is carried from the reservoir through the auxiliary pump selector valve to the auxiliary hydraulic pump.
- (2) The engine-driven hydraulic pumps supply full system pressure (3000 psi nominal) at any given engine speed, from idle to full power. The output flow of the pump is varied by sensing pressure from the outlet side of the pump. Each engine-driven pump contains a solenoid-operated bypass valve which, when energized, bypasses the pressure control regulator of the pump and ports fluid to the pump yoke control piston which feathers the pump. When the pump is feathered, flow rate is reduced to almost zero (1.0 gpm) and to a pressure of approximately 300 psi. Half of this flow maintains pump lubrication and cooling through a check valve, the engine-driven pump case drain line filter, and another check valve to the case drain return port of the reservoir. The pressure fluid from each pump passes through a check valve to the dual filter and relief valve.
- (3) The fluid enters the dual filter and relief valve through the relief valve chamber. The fluid is passed through the filter element, through a manifold, and through a common outlet port. Fluid from the outlet port is routed through a check valve to the system selector valve.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

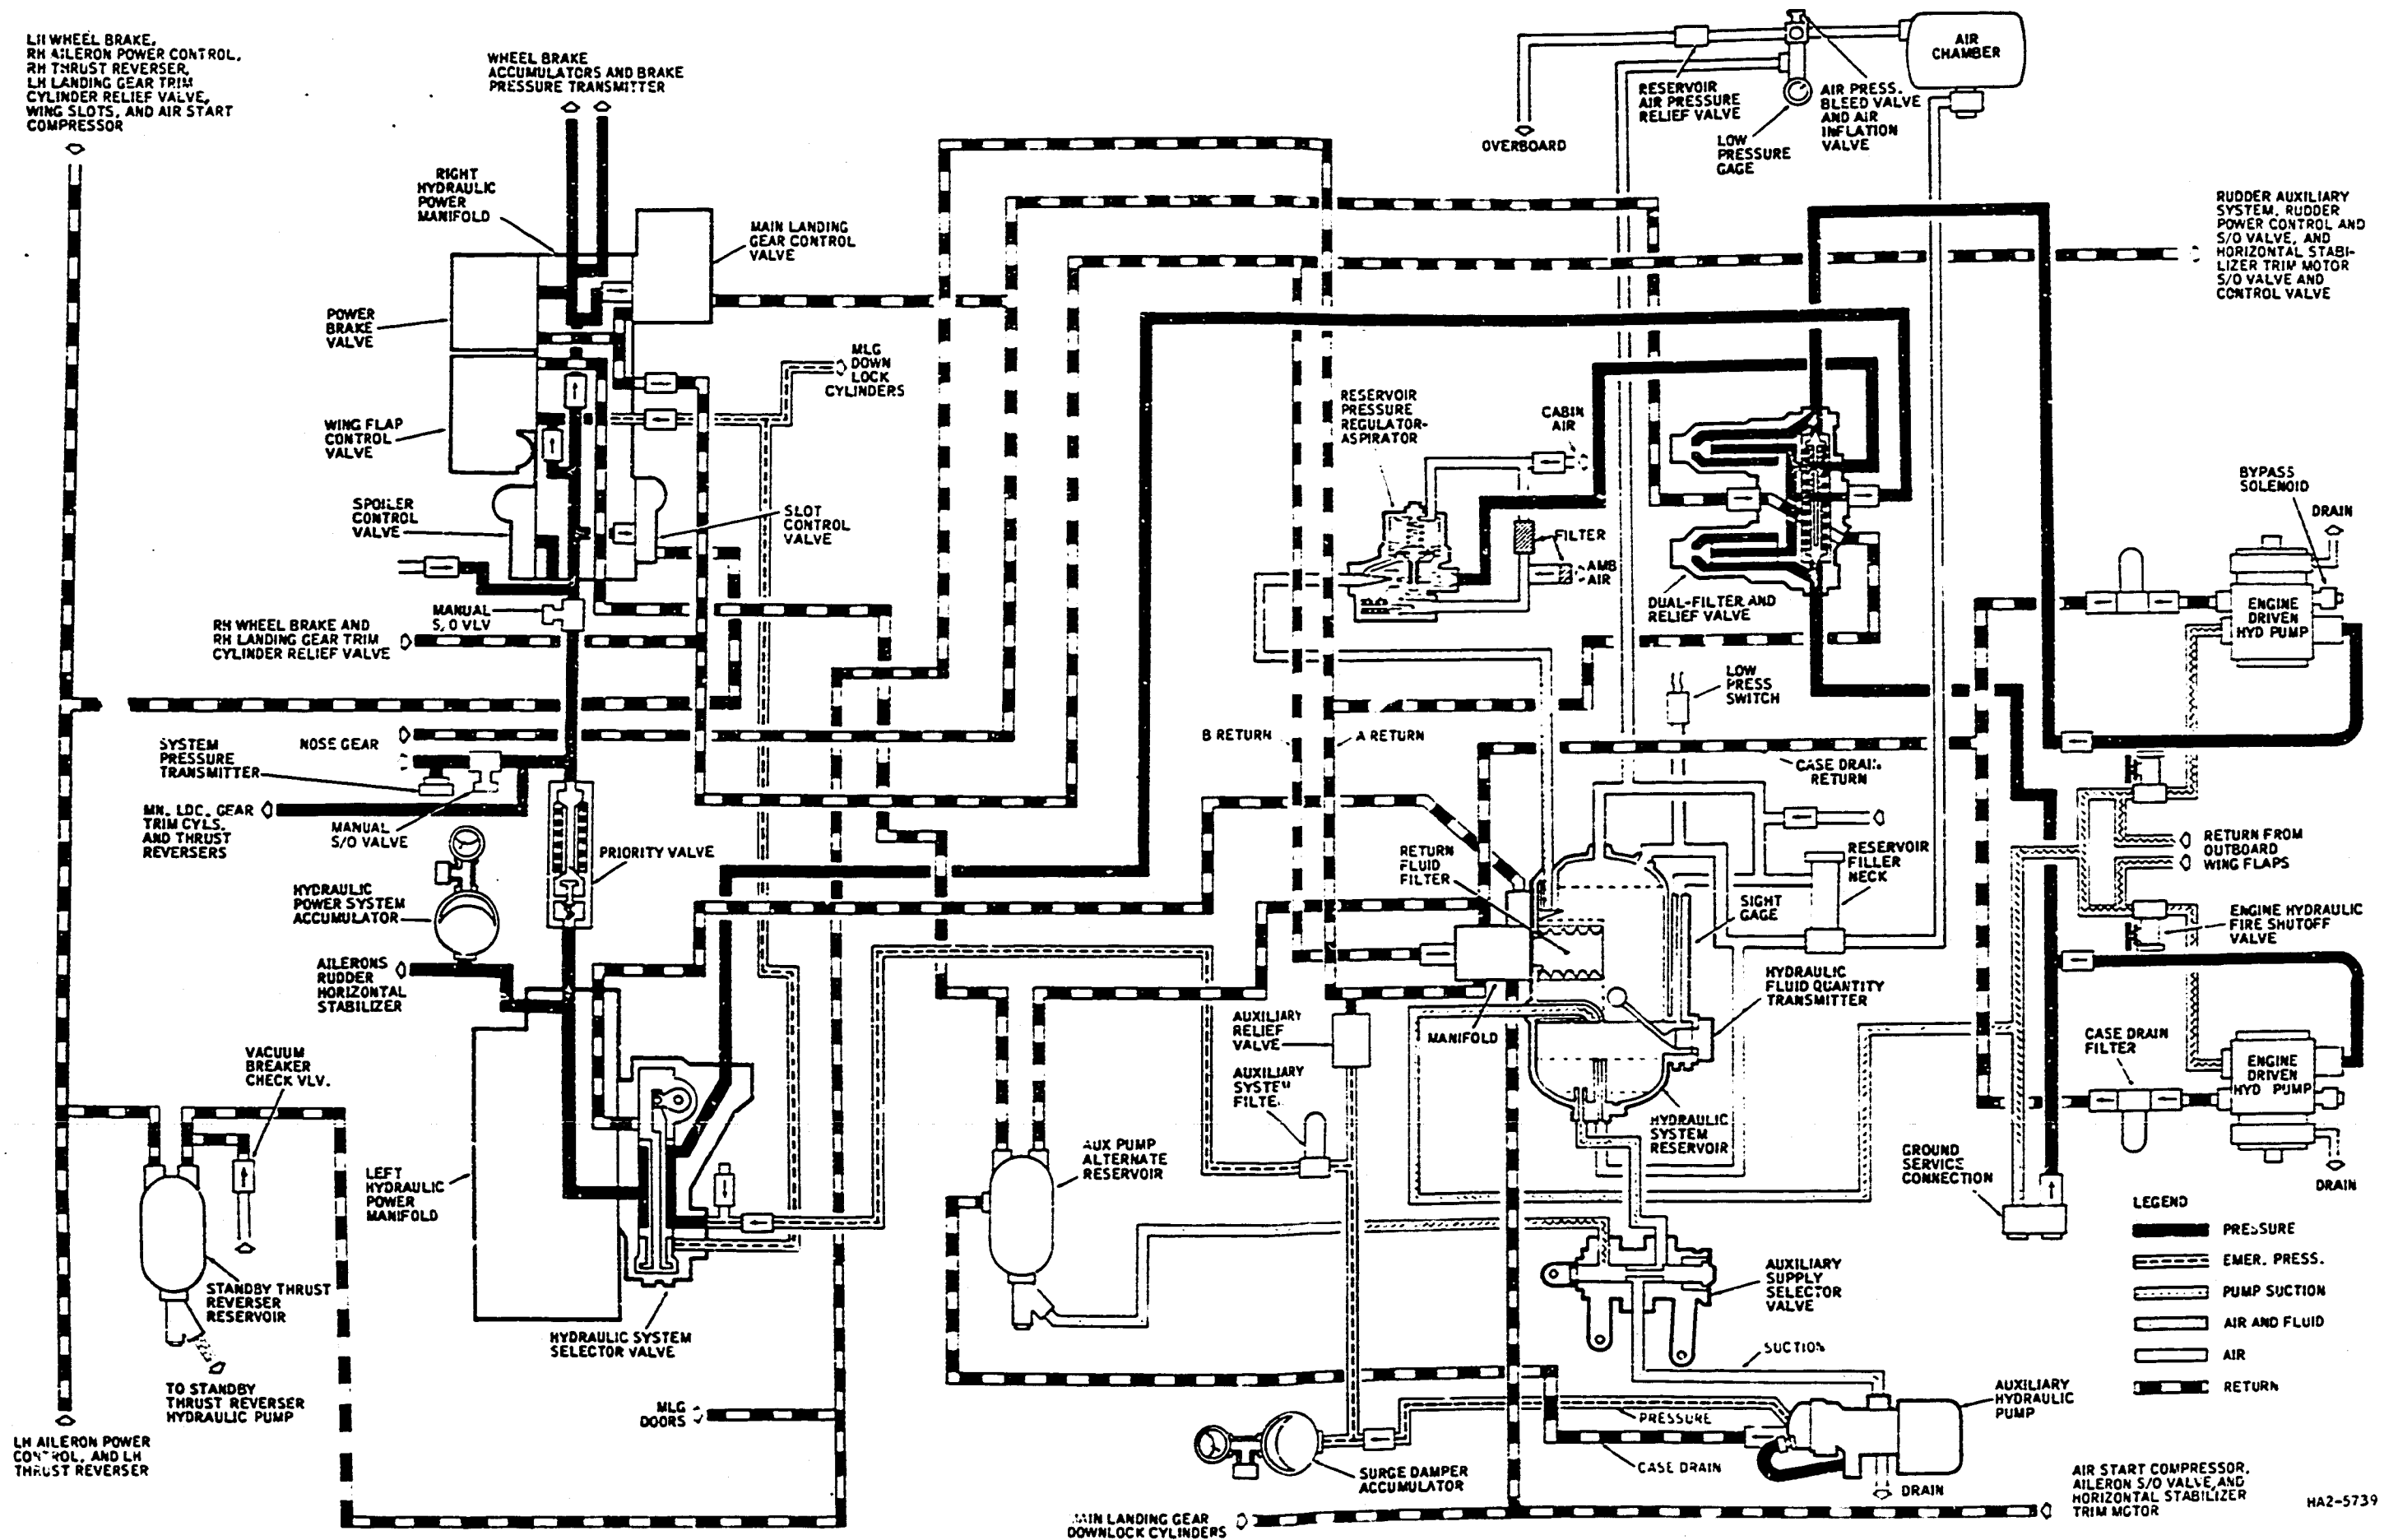

Hydraulic Power System -- Schematic Diagram  
 Figure 1


29-10-0  
 CODE 19  
 Page 3

Oct 15/68

Printed in U.S.A.

HA2-5739

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

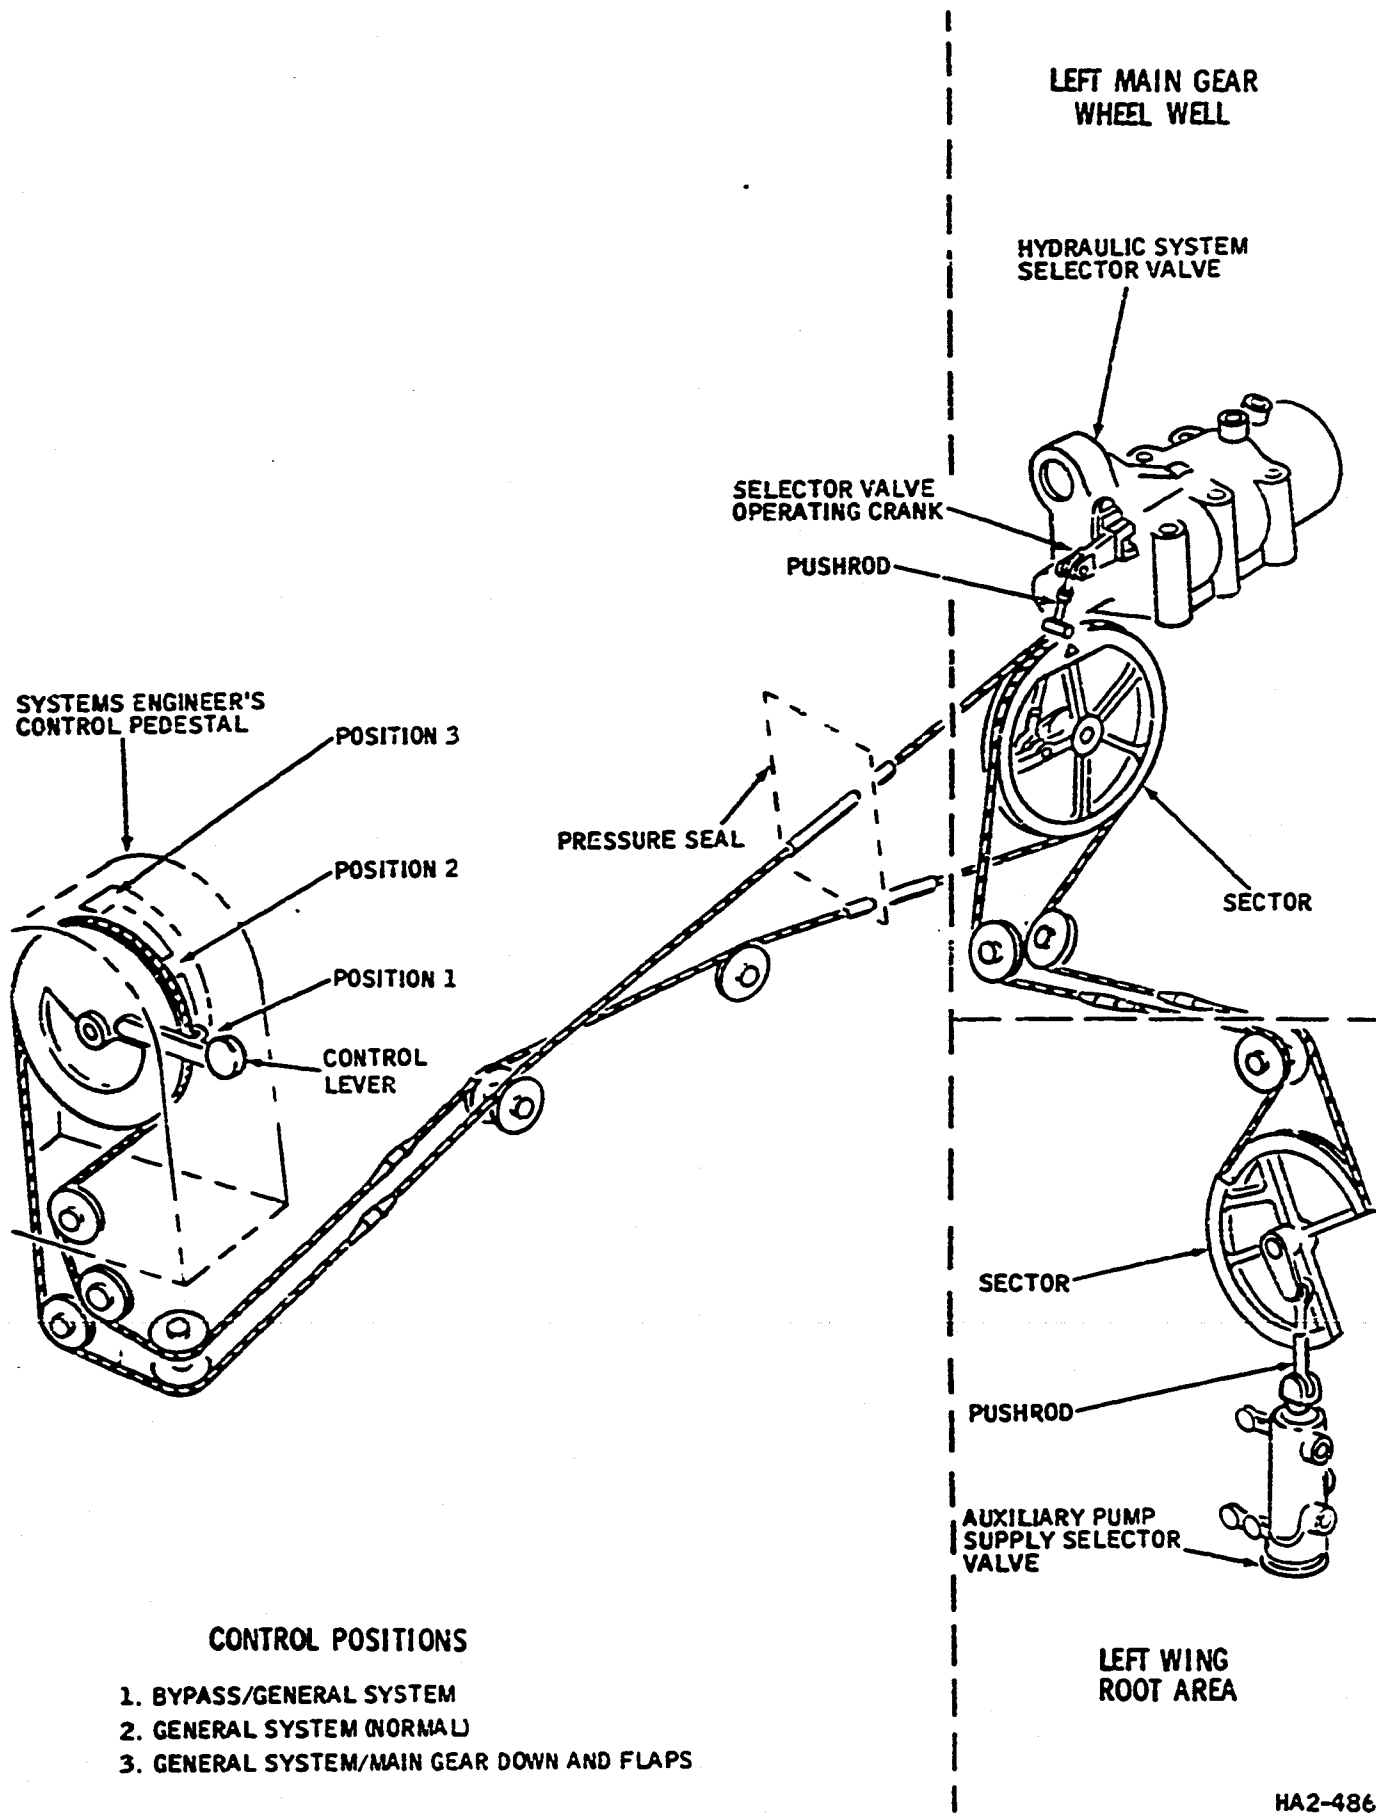

Hydraulic System Selector and Auxiliary Pump Supply  
 Selector Valves -- Mechanical Control Schematic  
 Figure 2

HA2-486

29-10-0  
 CODE 19  
 Page 5

Oct 15/68

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

If back pressure in the system builds up to approximately 3300 psi, the relief valves in the dual filter and relief valve open and port fluid back to the reservoir via A return port. The relief valve poppet closes again when system pressure drops to approximately 3000 psi.

- (4) The aspirator receives filtered fluid (bleed pressure at nominal 3000 psi) from the dual filter and relief valve. The aspirator operates on the jet pump principle. Hydraulic fluid is atomized and mixed with air within the unit by a nozzle and a venturi. The mixture is used to pressurize the reservoir and reservoir air chamber. The regulator diaphragm maintains a pressure range of 30 to 35 psi in the reservoir and air chamber. If there is a regulator malfunction, the aspirator stalls when the outlet pressure reaches a maximum of 40 psi. A reservoir relief valve in the reservoir vent line relieves thermal expansion pressure above 45 (+5, -0) psi.
- (5) Pump pressure fluid enters the system selector valve through the system pressure inlet port. When the pump selector control lever is in the general system (normal) position, fluid is ported to the pressure passages of the left power manifold. The fluid pressure in the left power manifold is ported through the priority valve to the nose gear and the right power manifold and directly to the following valves:
  - (a) Aileron power shutoff
  - (b) Rudder power shutoff
  - (c) Longitudinal trim hydraulic motor shutoff
- (6) The right power manifold distributes fluid pressure to the brake accumulators, the pressure transmitter, and the following control valves:
  - (a) Wing flap
  - (b) Slot
  - (c) Main gear
  - (d) Power brake
- (7) The return fluid from the wing flap control valve is ported through the right power manifold and into the auxiliary hydraulic pump alternate reservoir. Return fluid from the outboard wing flaps is piped into the suction lines for each engine-driven hydraulic pump. Return fluid from the slot control valve is ported into the A return line to the main reservoir. The power brake and main gear control valve gear up return fluid is ported through a restrictor check valve into the B return line to the reservoir. The main gear control valve gear down return pressure

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

bypasses the right manifold and returns to the reservoir through the A return line. All return fluid entering the reservoir is filtered through the return ports filter located within the reservoir.

**C. Bypass Operation**

- (1) The output of the engine-driven hydraulic pumps is bypassed by moving the system selector control lever out of the general system (normal) position to the bypass/general system position.
- (2) The system selector valve in the bypass position ports engine-driven pump pressure from the dual filter and relief valve directly to the return passage of the left power manifold. From the manifold, the fluid is ported directly to a tee in the wing flap return port of the hydraulic system reservoir. In the bypass condition, the auxiliary hydraulic pump receives fluid from the hydraulic system reservoir, pressurizes it to system pressure, and ports it to the left and right power manifolds for distribution to the subsystems.

**D. Alternate Operation**

- (1) When both engine-driven hydraulic pumps and the auxiliary hydraulic pump are rendered inoperative due to the loss of the normal supply of fluid, the hydraulic power system can be rigged for alternate operation. This is accomplished by placing the system selector control lever in the general system/main gear downlock and flaps position. When the system selector control lever is in this position, the auxiliary hydraulic pump supply selector valve is positioned to supply fluid from the auxiliary pump alternate reservoir to the auxiliary pump.
- (2) Fluid is supplied to the auxiliary pump from the outlet port of the auxiliary pump supply selector valve. Output pressure is ported through the auxiliary system filter and check valve to the auxiliary pressure inlet port of the system selector valve.
- (3) In the general system/main gear downlock and flaps position, auxiliary pump pressure bypasses the manifold pressure passages and is ported from the alternate outlet port of the system selector valve. Fluid from this port flows directly to a port on the right power manifold, through an internal check valve in the manifold, to the wing flap control valve. A line, teed into the alternate supply line, runs directly to a shuttle valve in the main gear downlock cylinder line. When auxiliary pressure is applied, the shuttle valve shifts, porting fluid into the downlock bungee cylinder's downlock side.

**E. Mechanical Control**

- (1) The hydraulic power mechanical control system consists of the hydraulic system selector control lever cable drum, the system selector valve

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

sector, the system selector valve, the auxiliary hydraulic pump supply selector valve sector, and the auxiliary hydraulic pump supply selector valve.

- (2) The control lever located on the system engineer's control pedestal is used to position the system selector valve and, in turn, the auxiliary hydraulic pump supply selector valve.
- (3) The control lever is spring loaded into general system (normal) position, and is connected to the control lever cable drum. Two cables run from the drum, under the cabin floor, aft through the pressure bulkhead at the rear wing spar, and into the left wheel well to the system selector valve sector. A pushrod connects the sector to the positioning lever of the system selector valve.
- (4) A second set of cables is routed from the system selector valve sector into the left wing root to the auxiliary hydraulic pump supply selector valve sector. When the system selector valve is in either bypass or normal, the auxiliary hydraulic pump supply selector valve sector is arranged so that the pushrod idles between the two positions. This allows the valve to remain in the auxiliary position. When the sector is moved to the alternate position, the pushrod is pulled by the sector to reposition the valve to the alternate position.
- (5) The control lever is normally in the general system (normal) position. To move the system selector valve to the bypass position, the control lever is moved to the bypass/general system position. When the system selector valve is moved to the bypass position, the auxiliary hydraulic pump supply selector valve sector is moved to a new position. Due to the idle feature on the auxiliary sector, the valve remains in the auxiliary position. With the valve in this position, fluid is supplied to the auxiliary pump through the low standpipe in the hydraulic system reservoir. In this condition, engine-driven pump pressure is ported to the reservoir and the auxiliary pump pressure is ported to the general system.
- (6) To put the system in alternate operation, the control is moved to the general system/main gear downlock and flaps position. This moves the system selector valve to the alternate position, and simultaneously moves the auxiliary hydraulic pump supply selector valve to the alternate position. Fluid is supplied to the auxiliary pump from the auxiliary hydraulic pump alternate reservoir. Fluid pressure from the auxiliary pump is ported to the flap system control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported from the system selector valve to the general system.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


2. System Components

A. Hydraulic System Reservoir (See Figures 3 and 4.)

- (1) The hydraulic system reservoir is installed on the aft side of the wing rear spar in the left wing root and is accessible through the left wing root access door. The hydraulic system reservoir serves as the main source of hydraulic fluid for the engine-driven hydraulic pumps and the normal supply for the auxiliary hydraulic pump. The reservoir is cylindrical in shape and contains a filter, baffle, and a screen cover encasing the filter. The filter prevents foreign particles from contaminating the fluid supply. Mountings are provided on the exterior surface of the reservoir for return line ports, aspirator port, electrical sensing units, sight gage, instruction placards, magnetic drain plug, and system supply ports.
- (2) The reservoir is pressurized with air from the regulator-aspirator to a range of 30 to 35 psi and has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir volume is used for fluid and 1/10 is used for foam space.
- (3) The aspirator port through which the reservoir is pressurized is located in the recess on top of the reservoir. An aspirator-deaerator filter is supported in the reservoir by a screen and support box assembly which is mounted to the reservoir wall by two bolts.
- (4) The mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The return ports manifold is an open-centered ring, flanged at both sides and provided with five fluid ports around its circumference; return port A is located at the bottom, return port B is located at the lower right side, the wing flap return port is located at the upper left side, and the system selector valve bypass port is located at the top. One flange of the manifold is mounted with six bolts to the mounting flange on the reservoir. The return fluid filter cover fits into the open side of the manifold, and is attached to the outer manifold flange with six bolts to form a fluid-tight cover for both the manifold and the filter.
- (5) The return fluid filter is installed in the reservoir, behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the return fluid filter cover holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to the engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
- (6) A flanged adapter for the fluid quantity transmitter is welded to the reservoir below and to the left of the return ports manifold. The adapter is provided with two small port bosses for the hydraulic fluid



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

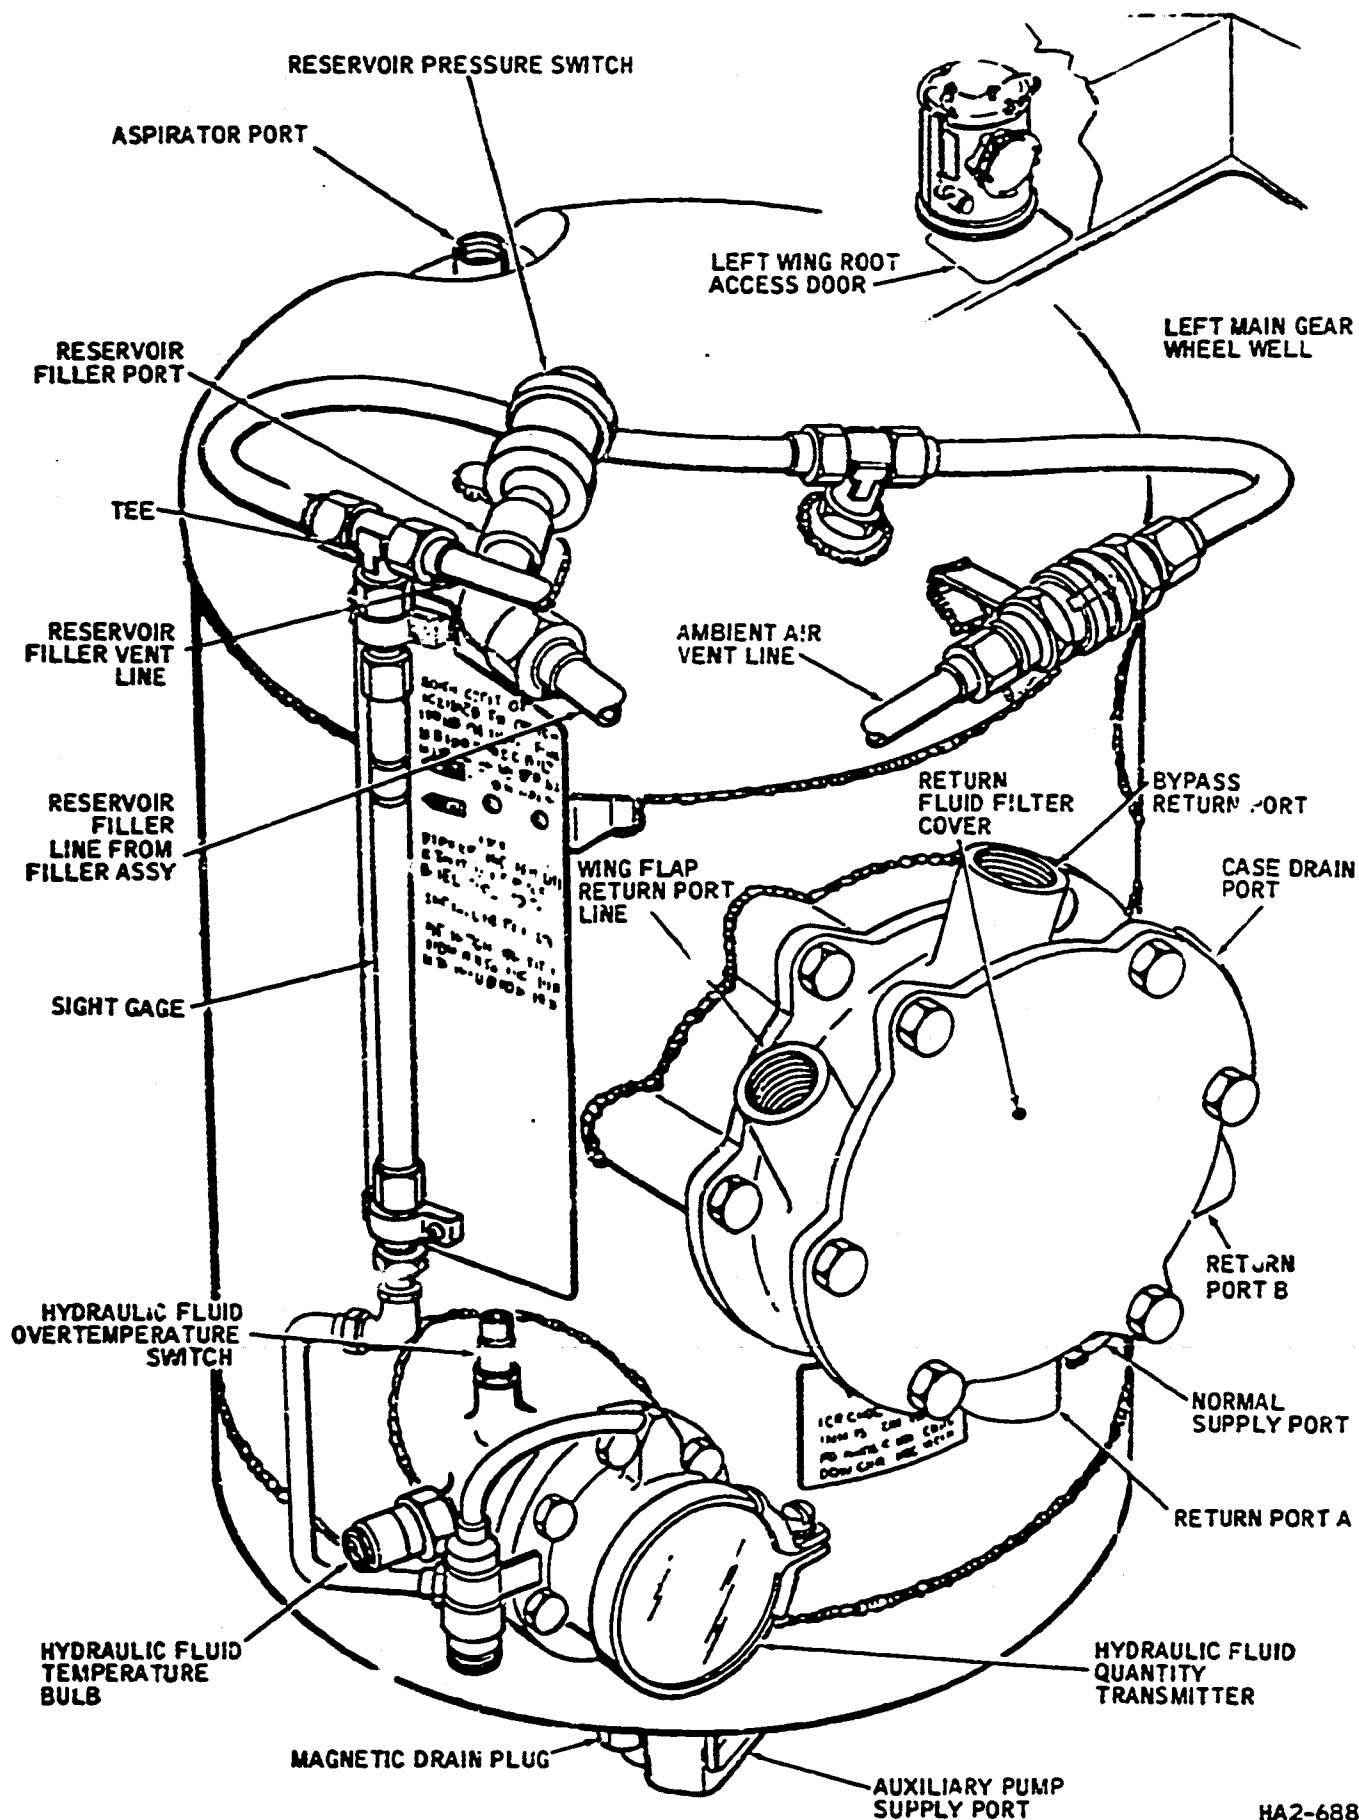


HA2-688

29-10-0  
 CODE 19  
 Page 10

Hydraulic System Reservoir -- External View  
 Figure 3

Oct 15/68

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

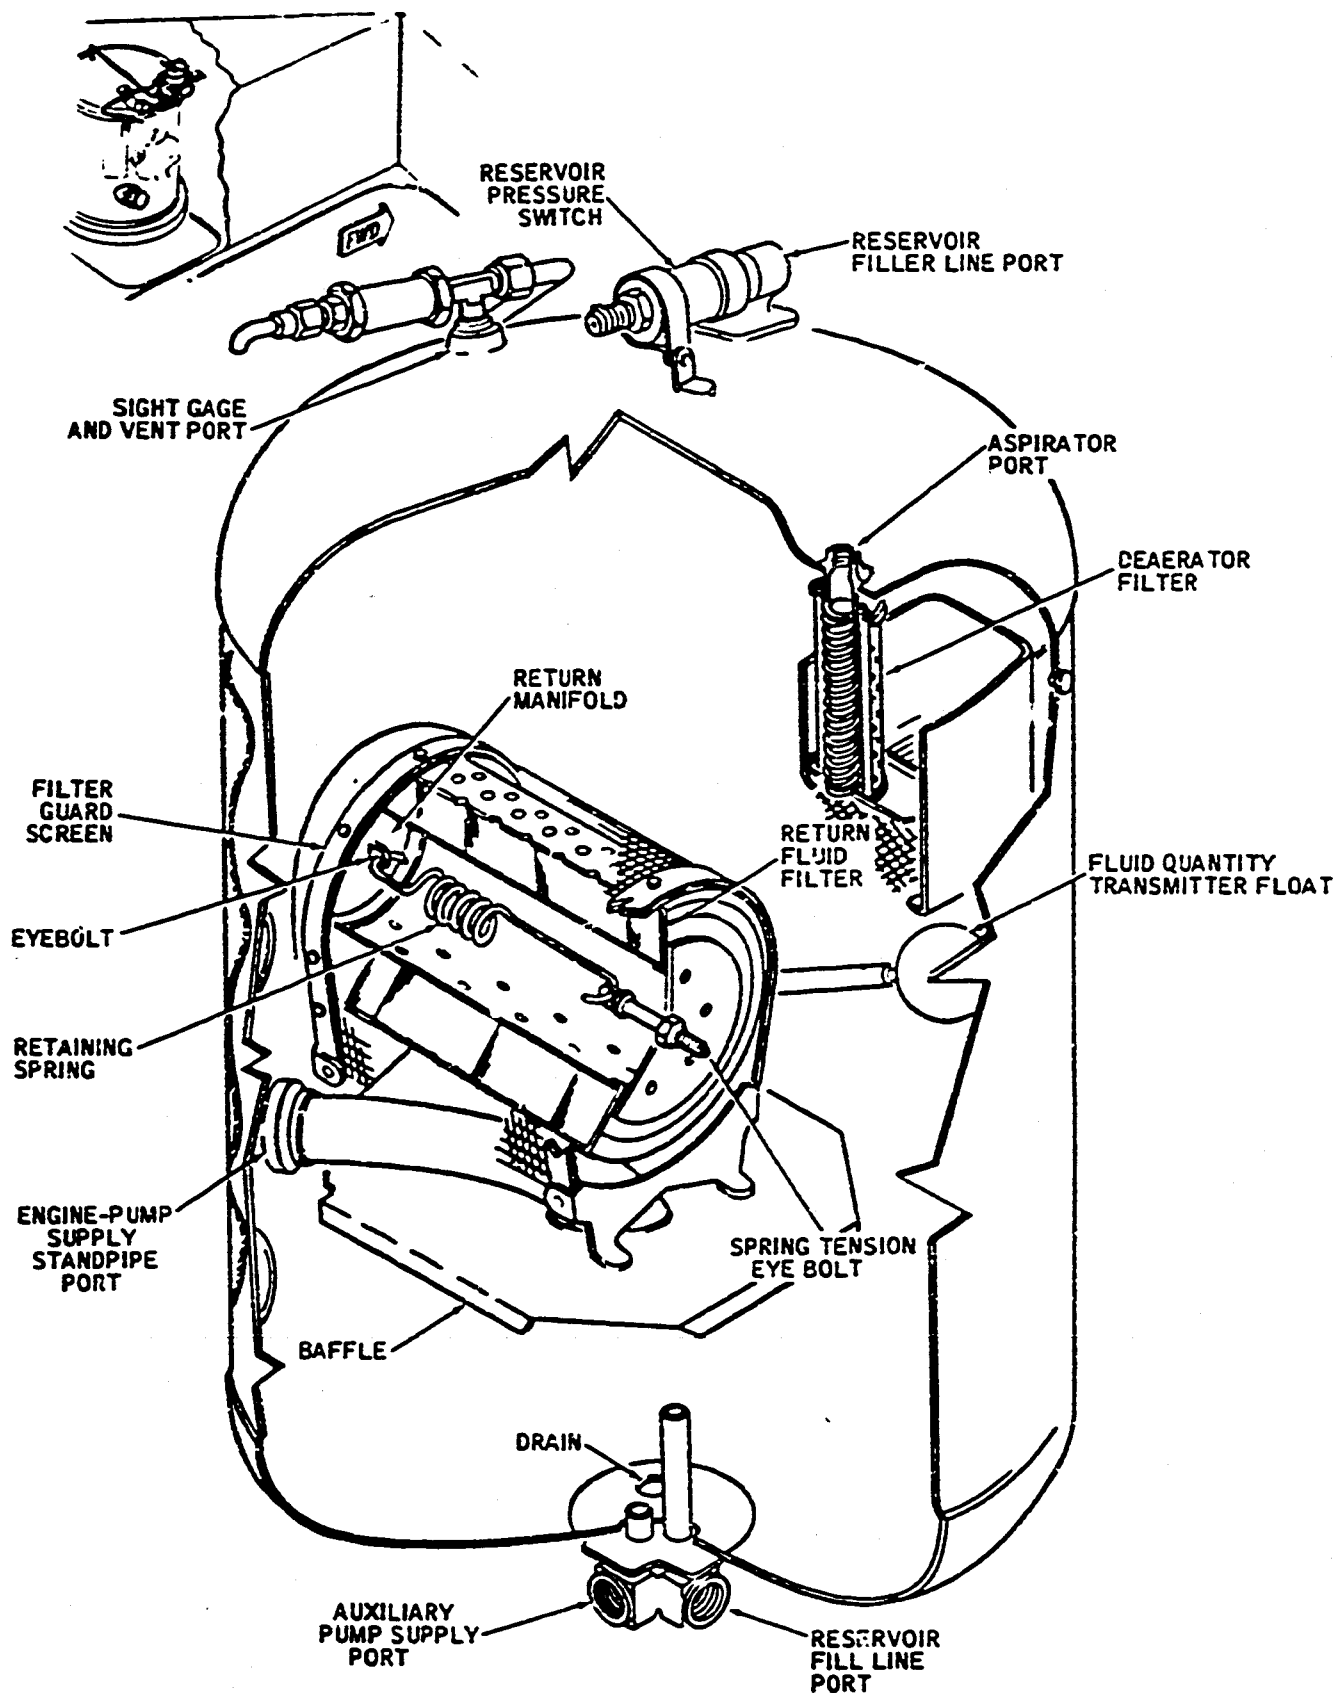

Hydraulic System Reservoir -- Cutaway View  
 Figure 4

HA2-689

29-10-0  
 CODE 19  
 Page 11

Oct 15/68

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

temperature bulb and the hydraulic fluid overtemperature switch. The lower end of the sight gage connects to a third port in the adapter, while the top of the sight gage tees into a port at the top of the reservoir. An instruction plate is mounted behind the sight gage and the vacuum breaker check valve tees into the port at the top of the reservoir that is used by the sight gage.


**B. Hydraulic Reservoir Return Fluid Filter (See Figure 4.)**

- (1) The reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply. The filter is located behind the return ports manifold, and is spring loaded to act as its own relief valve. Access to the filter is by removing the return fluid filter cover from the return ports manifold by removal of six bolts. The filter is attached by the retaining spring to the cover and is withdrawn from the reservoir when the cover is removed.
- (2) Externally, the filter consists of two perforated concentric tubes. The area between the tubes is closed by metal end caps which are bonded to the two tubes. A resilient rubber gasket is bonded to each of the caps. Each gasket must be smooth and flat for proper sealing of the filter. The gaskets act as a static seal and a relief valve seat.
- (3) Internally, the filter has a 10-micron, resin-impregnated, convoluted paper-type filter element. The area of the filter element is approximately 1960 square inches. The filter is held in place by a retaining spring. One end of the spring is attached to an eyebolt located inside the return port's manifold cover. The spring passes through the center chamber of the filter and is connected to another eyebolt. This eyebolt is secured to a large washer and plate by means of a self-locking nut. The washer seats on the rubber gasket which is bonded to the filter. The fluid enters the center chamber of the filter and passes through the inner tube of the filter to the filter element by means of perforation holes. Foreign matter is filtered out by the filter element, and the fluid leaves the element through perforation holes in the outer tube. When the element becomes saturated with foreign matter, the filter acts as its own relief valve and unseats at 20 to 25 psi above normal return pressure which allows fluid to bypass the filter and enter the reservoir.

**C. Hydraulic Reservoir Air Pressure Regulator-Aspirator (See Figure 5.)**

- (1) The reservoir air pressure regulator-aspirator is a jet-type air pump, regulated by a pressure-sensitive shutoff valve. The unit pressurizes the hydraulic reservoir with air to the operating pressure range of 30 to 35 psi. The regulator-aspirator is located on the top inboard side of the reservoir and is mounted on the reservoir retainer ring. Access to regulator-aspirator is through the left wing root access door.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

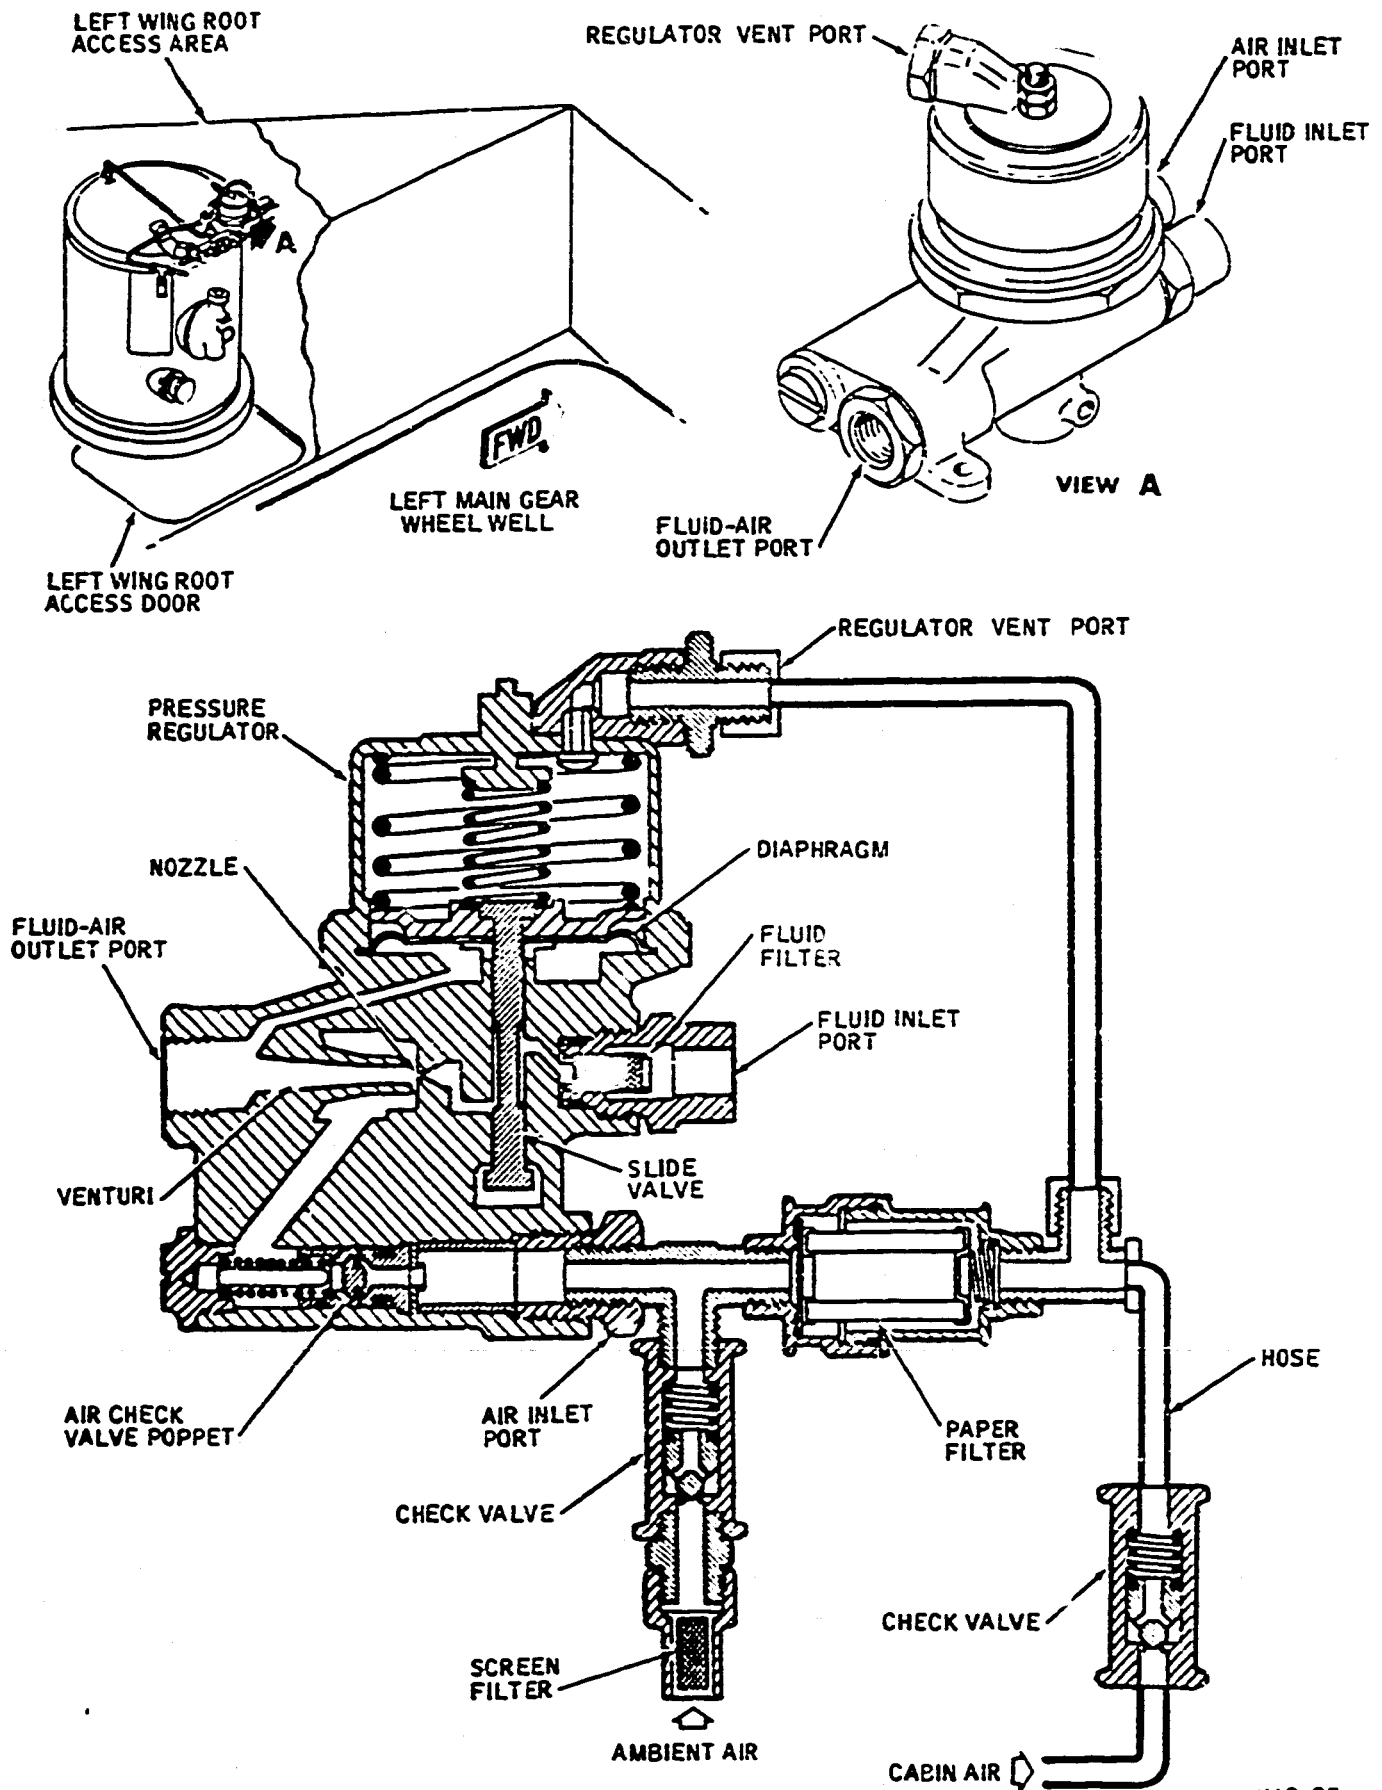

Reservoir Air Pressure Regulator-Aspirator -- Schematic  
 Figure 5

Oct 15/68

Printed in U.S.A.

HA2-25

29-10-0  
 CODE 19  
 Page 13


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The regulator-aspirator assembly consists of a main aspirator body and a regulator housing. The main aspirator body has two inlet ports and one outlet port. The ports are permanently identified inlet, outlet, and air inlet. The plug for an air check valve is located near the outlet plug. A chemically treated paper filter is installed near the aspirator body air inlet port in the air line from the pressurized cabin area. A metal screen filter is installed on the check valve which tees into the aspirator body air inlet port.
- (3) The reservoir air pressure regulator-aspirator operates basically with a jet pump action which is regulator controlled. Fluid enters the assembly through the fluid inlet port where it is filtered and then ported through the valve assembly of the regulator. During normal operation, when air pressure at the outlet port is under 30 psi, the valve is open, porting fluid to the nozzle. The orifice in the nozzle sprays the fluid through the venturi of the outlet port, creating a vacuum in the chamber around the venturi. When the vacuum becomes great enough to create a pressure differential of approximately 1 psi, ambient air opens the air check valve. The air is ported to the chamber around the venturi and is siphoned, with the fluid, through the outlet port.
- (4) Hydraulic fluid inlet pressure at the engine-driven hydraulic pumps is improved at high altitude operation by supplying pressurized filtered cabin air to the reservoir regulator-aspirator instead of ambient outside air. Part of the inlet air is diverted by a tee fitting to the regulator chamber to provide a more positive regulating force on the diaphragm than would be obtained with low ambient pressures. The chemically treated paper filter, installed in the regulator-aspirator air supply line from the cabin, removes smoke tars and impurities from the pressurized cabin air. The steel mesh screen filter, installed on the check valve which tees into the regulator-aspirator air inlet port downstream of the paper filter, removes dust, dirt, and foreign particles from the ambient air and serves as a standby to supply filtered air in event the paper filter is clogged.
- (5) As pressure in the reservoir builds up, back pressure is bled from the outlet port to the diaphragm chamber. The reaction on the diaphragm begins to move the slide valve to cut off the fluid flow. At 30 to 35 psi of back pressure, the diaphragm completely closes the slide valve, cutting off the flow of fluid. If there is a regulator malfunction, the aspirator stalls when outlet pressure reaches a maximum of 40 psi.
- (6) The aspirator is capable of pressurizing the reservoir to 30 to 35 psi in approximately 4 minutes at altitudes from sea level to 15,000 feet, when fluid is ported through the nozzle at 0.5 gpm at 3000 psi.


**D. Regulator-Aspirator Air Filters (See Figure 6.)**

- (1) The regulator-aspirator air filters remove ambient and cabin air impurities from the air which is used to pressurize the main hydraulic system

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

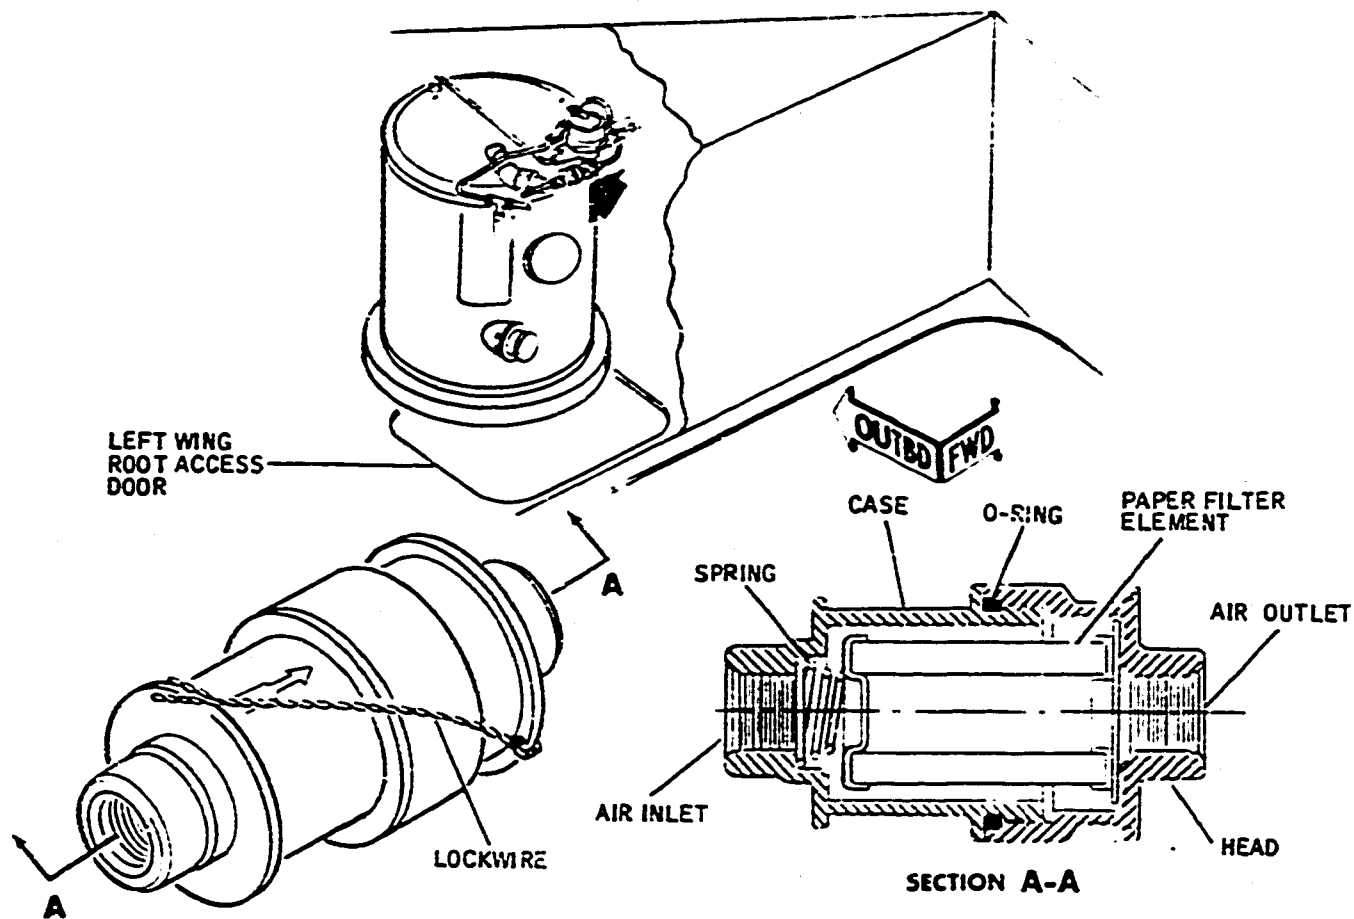

PAPER ELEMENT FILTER

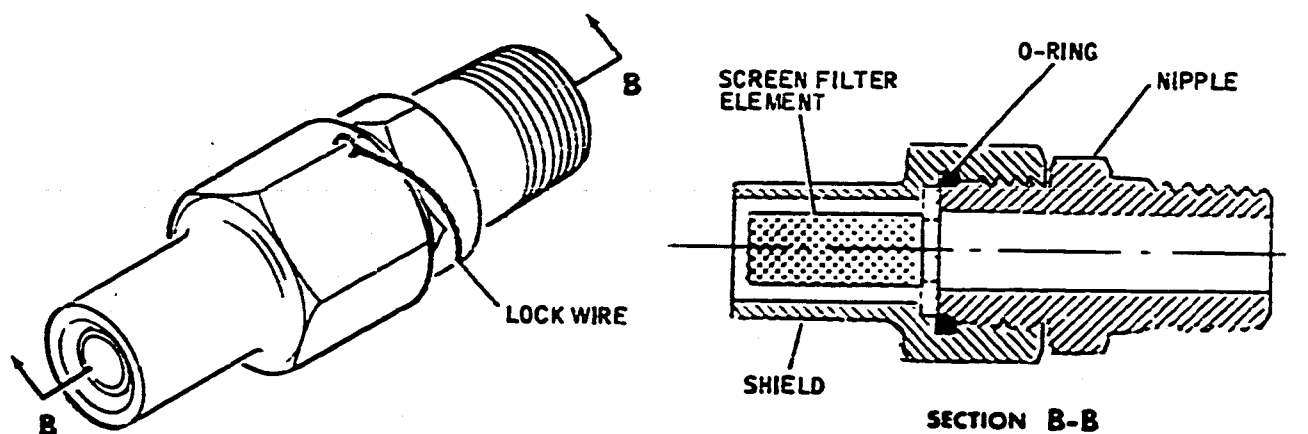

SCREEN FILTER

HA2-35

Regulator-Aspirator Air Filters -- Cutaway View  
 Figure 6

Oct 15/68

29-10-0  
 CODE 19  
 Page 15

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

reservoir. The filtering system is composed of two filters. One of which is a paper element filter, installed directly in the cabin air supply line near the regulator-aspirator. The outer filter is a fine mesh, screen-type filter, installed on a check valve and positioned at right angles to the regulator-aspirator air inlet port. The screen filter, in addition to providing an immediate supply of ambient air during ground operations, serves as a standby air inlet to preclude air starvation of the regulator-aspirator in the event the paper element filter becomes clogged.

E. Hydraulic Reservoir Relief Valve (See Figure 7.)

- (1) The reservoir relief valve and the air pressure aspirator-regulator keep the reservoir pressurized to normal operating range. The valve relieves excess air pressure which may build up in the reservoir through thermal expansion in the system. The valve has an inlet port and an outlet port and consists, internally, of an inlet port seat and a spring-loaded poppet.
- (2) The relief valve is installed in the overboard vent line downstream of the hydraulic reservoir air bleed valve. In the event that excess pressure builds up in the reservoir, the poppet will start to relieve at 45 (+5, -0) psi. Full flow of 10 gpm is attained at 80 psi maximum. The poppet reseats at 90 percent of the opening pressure.


F. Hydraulic Reservoir Air Bleed Valve (See Figure 8.)

- (1) The hydraulic reservoir air bleed valve and pressure gage are located on the aft side of the rear spar in the left main gear wheel well, inboard of the hydraulic reservoir air chamber. The bleed valve and gage are installed in the overboard vent line, between the reservoir air chamber and the reservoir relief valve.
- (2) The bleed valve is used to relieve the reservoir air pressure prior to disconnecting lines or components in the hydraulic system. The pressure gage provides a ready indication of the hydraulic reservoir air pressure and is used in conjunction with the bleed valve to indicate the air pressure status.
- (3) The air inflation valve is installed on the same fitting as the bleed valve and pressure gage. The air inflation valve is used to manually charge the reservoir with air or dry nitrogen.

G. Hydraulic Reservoir Vacuum Breaker Check Valve (See Figure 9.)

- (1) The hydraulic reservoir vacuum breaker check valve is installed on the regulator-aspirator mounting bracket, and connects to the tee fitting at the top of the reservoir. The valve is vented to ambient air. The purpose of this valve is to maintain atmospheric pressure in the reservoir, allowing hydraulic fluid to flow to the auxiliary hydraulic pump in the

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

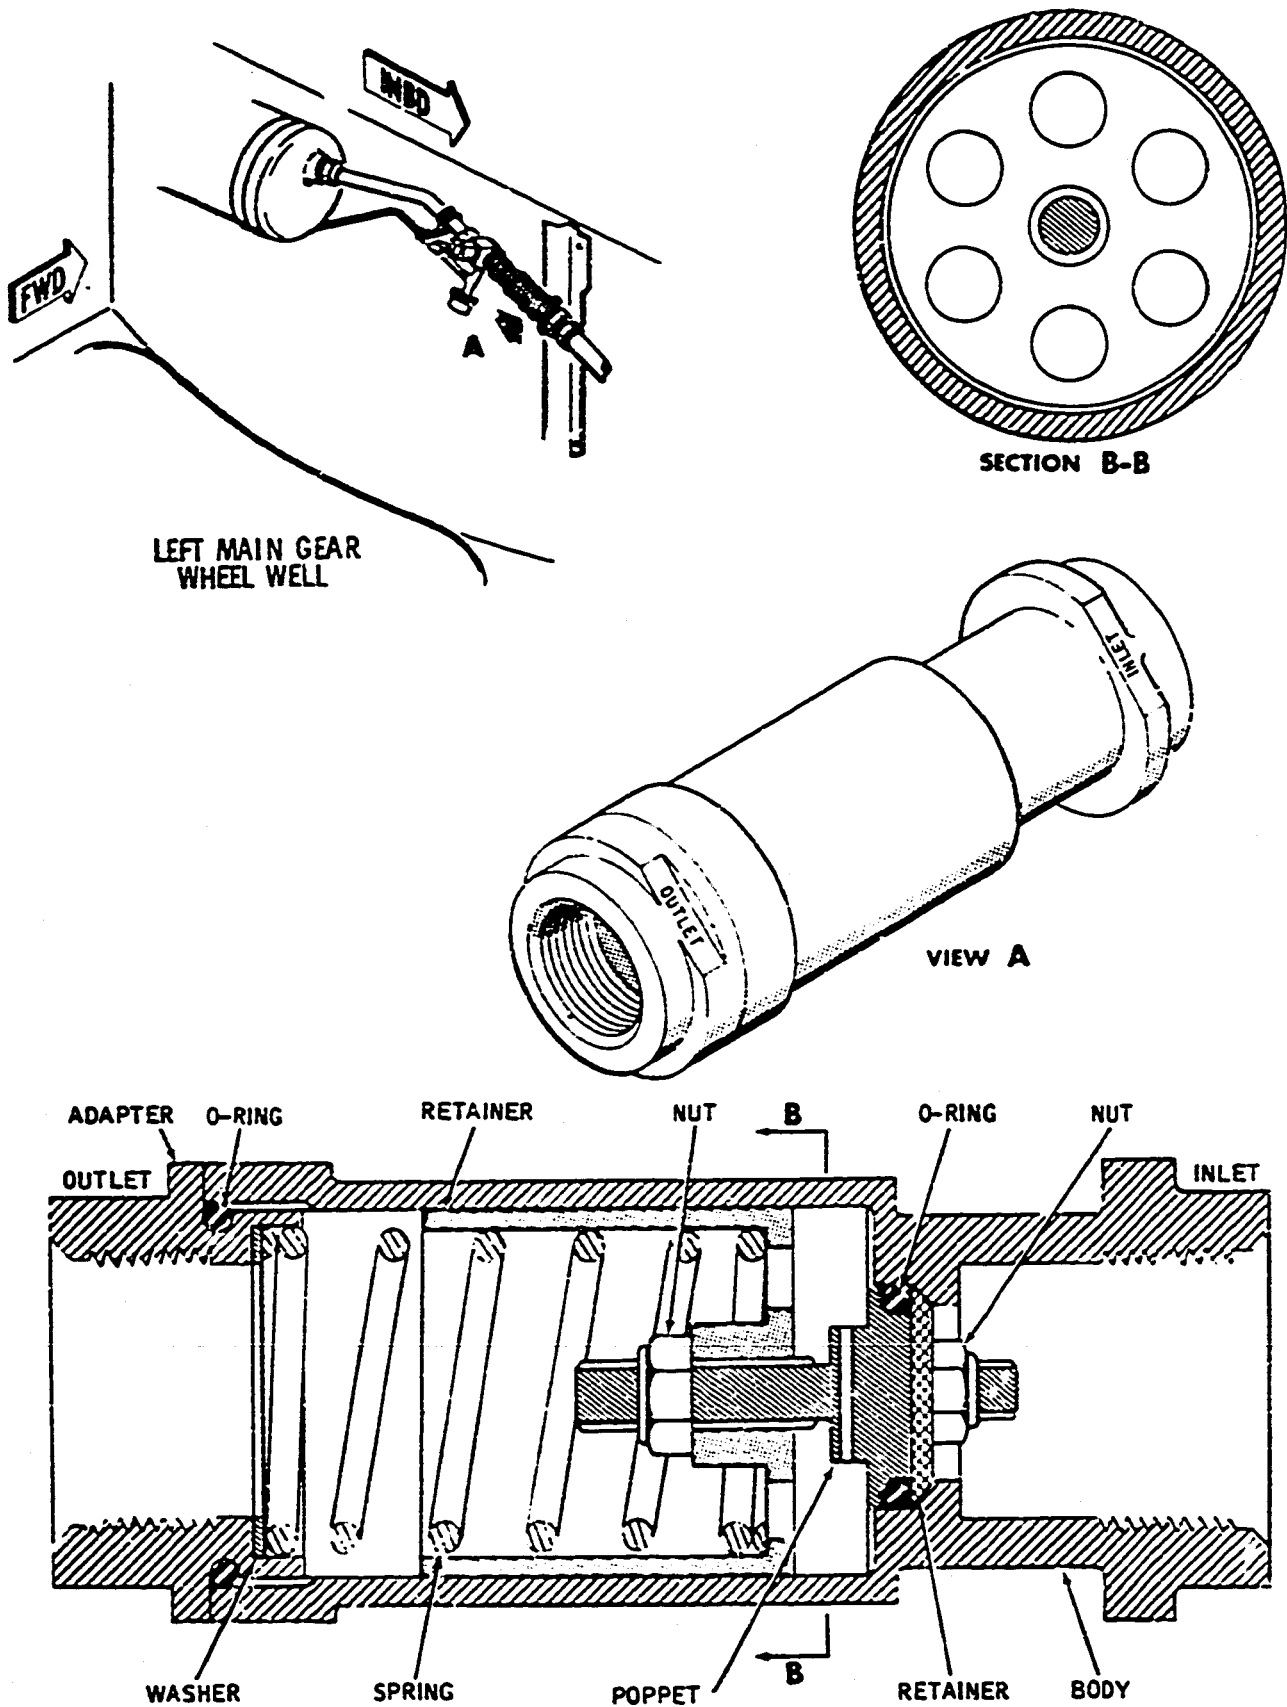

Hydraulic Reservoir Relief Valve  
 Figure 7


Oct 15/68

HA2-17

29-10-0  
 CODE 19  
 Page 17



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

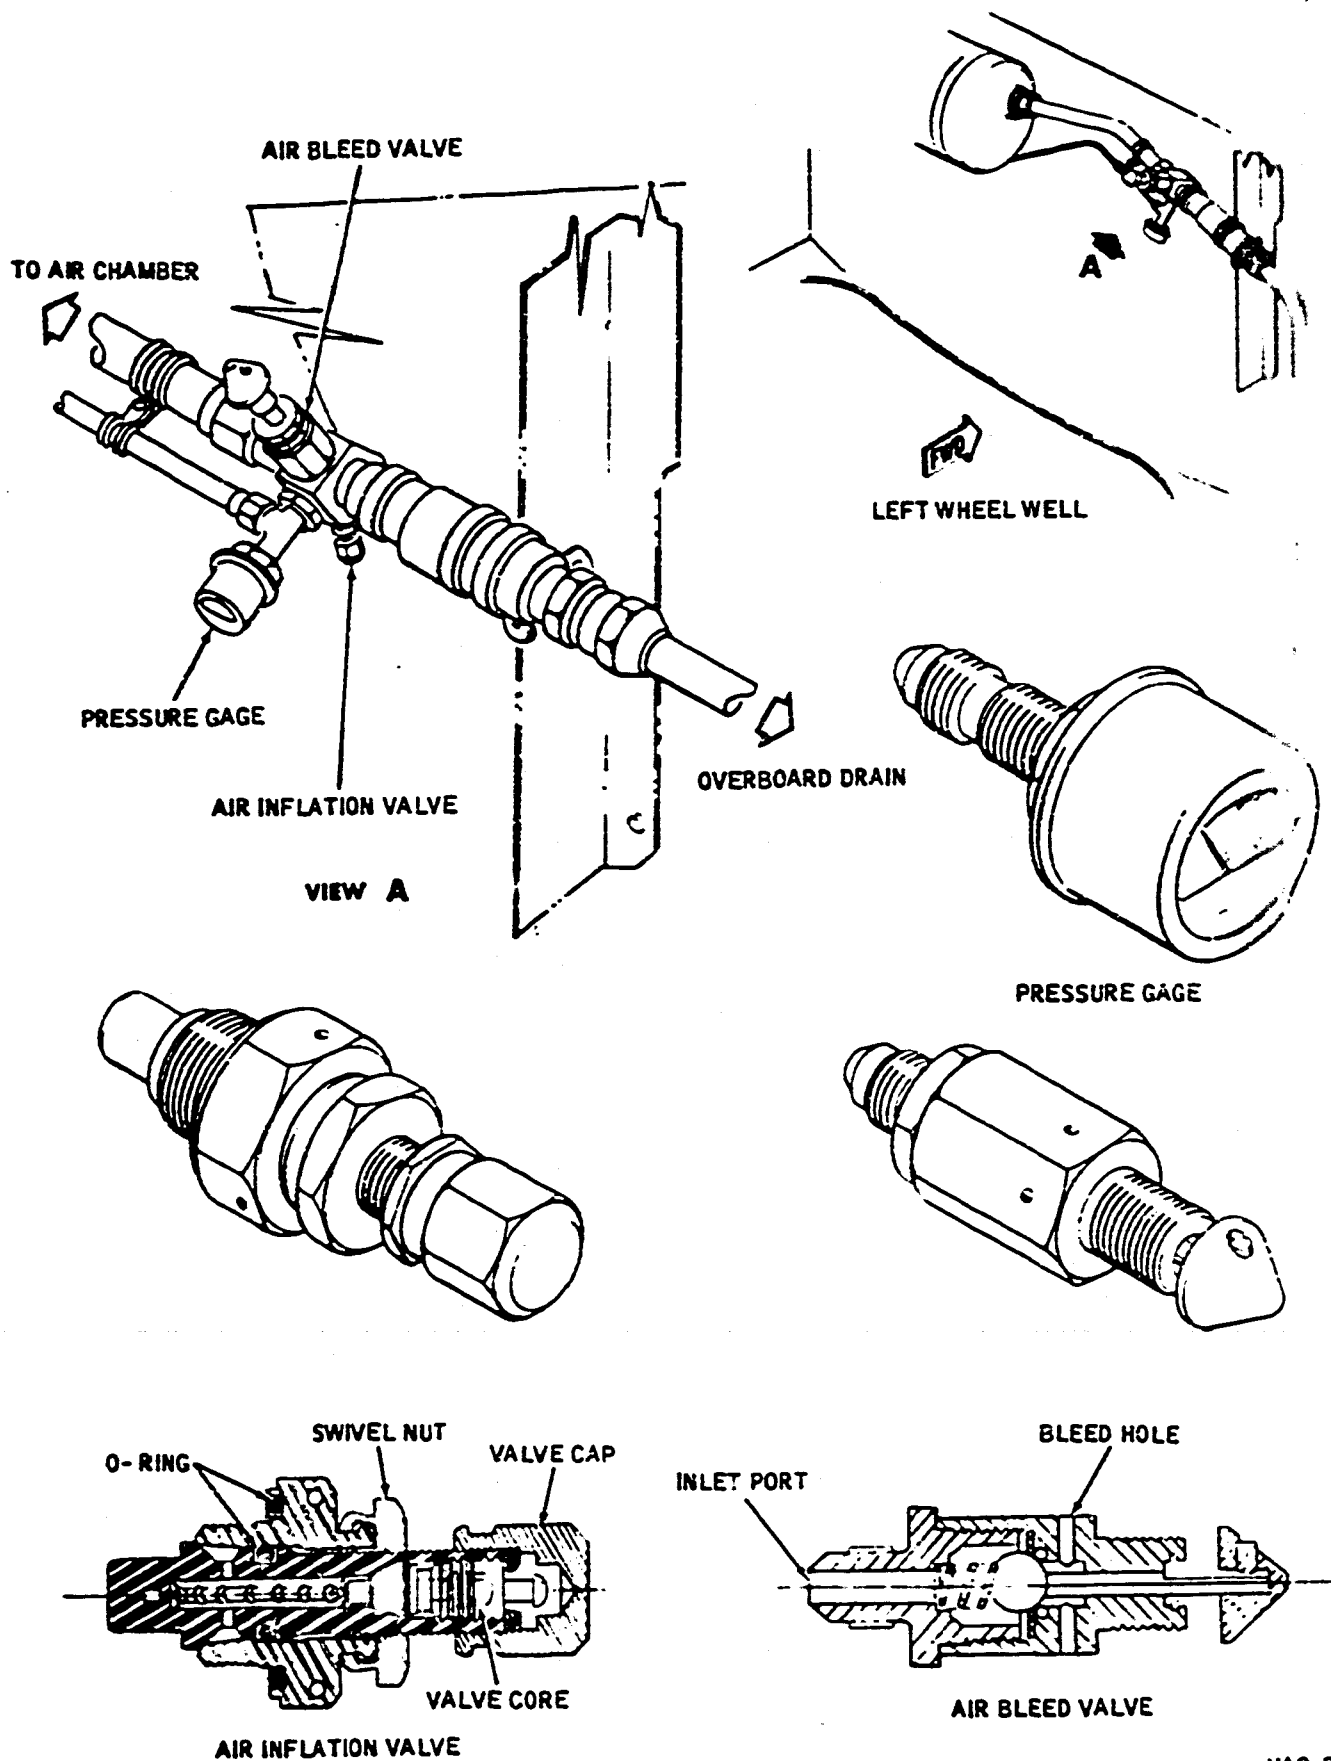


HA2-32

Reservoir Air Bleed Valve, Air Inflation  
 Valve, and Pressure Gage  
 Figure 8

29-10-0  
 CODE 19  
 Page 18

Oct 15/68

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

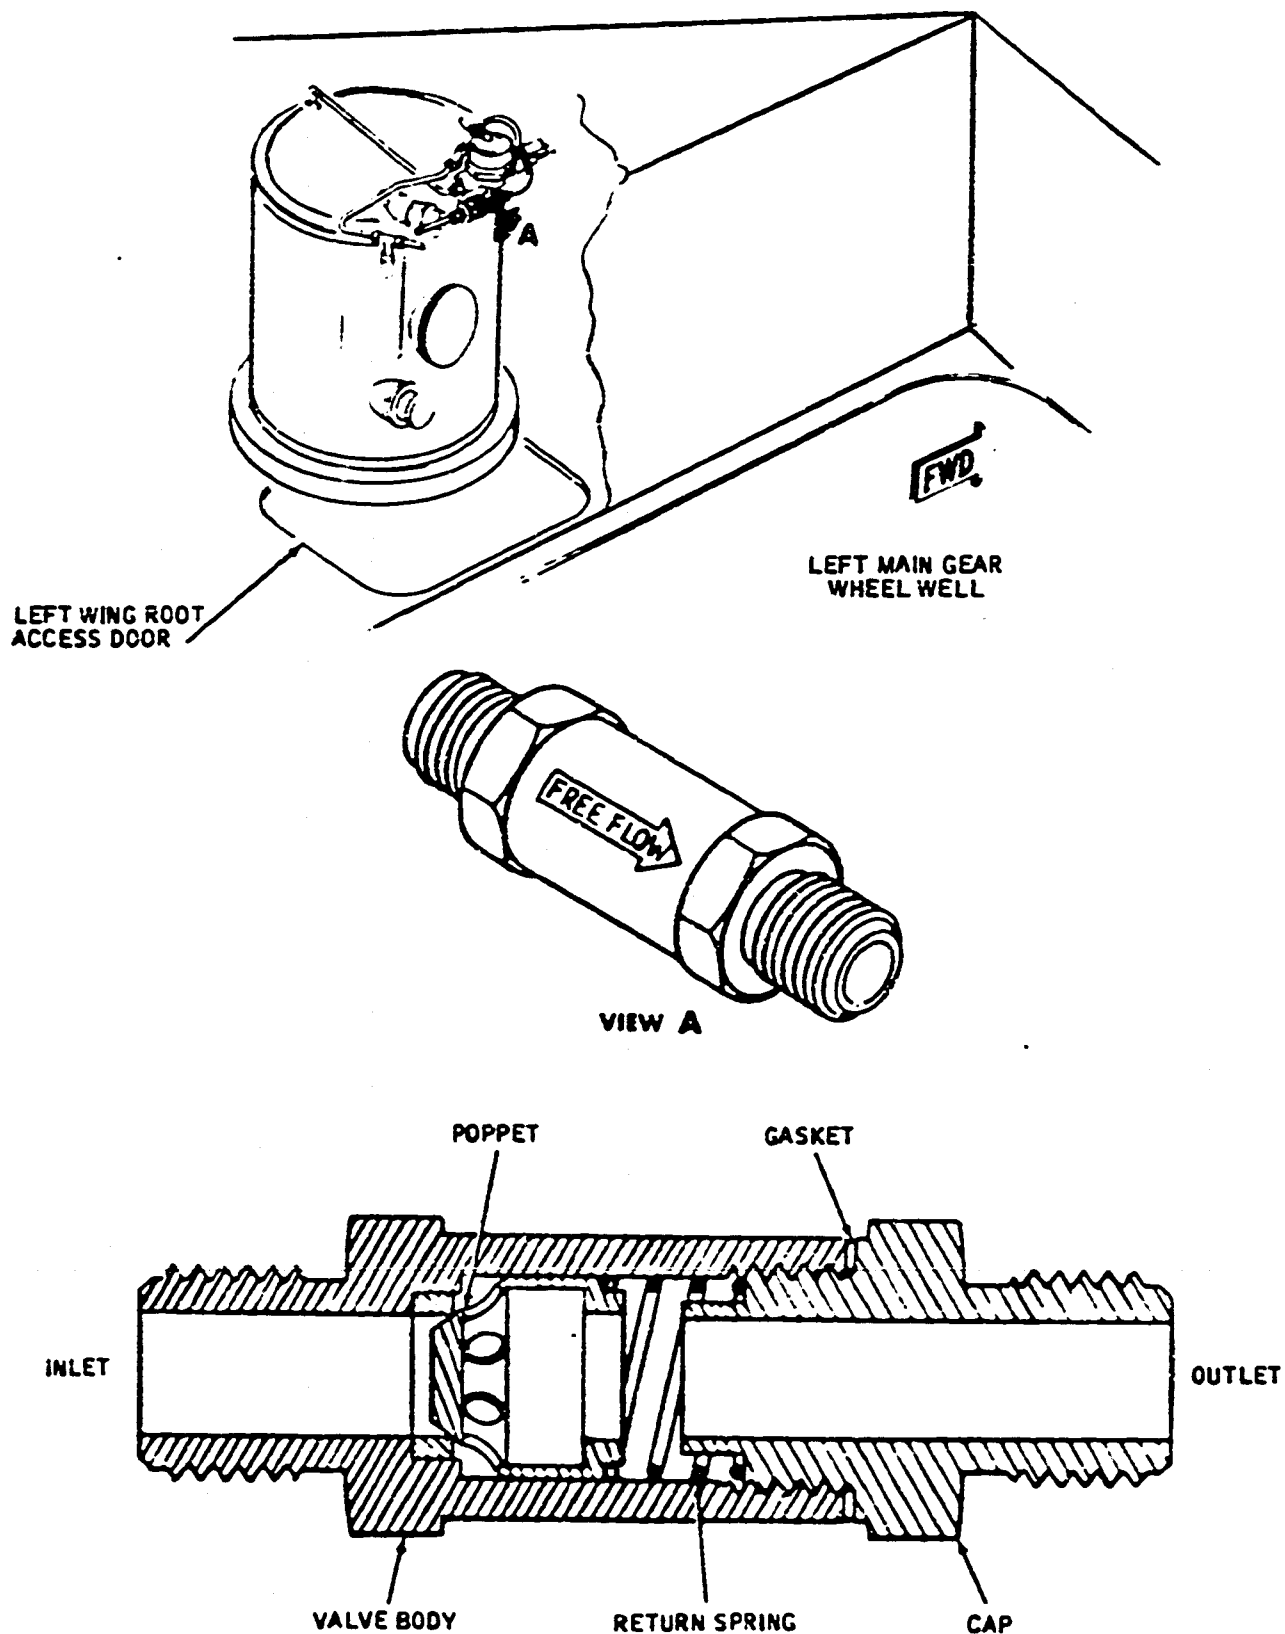

Hydraulic Reservoir Vacuum Breaker Check Valve  
Figure 9

Oct 15/68

Printed in U.S.A.

HA2-33

29-10-0  
CODE 19  
Page 19

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

event of a failure of the reservoir pressurization system. The failure, or breakdown, of the pressurization system could cause a fluid starvation at the auxiliary hydraulic pump because of vacuum buildup in the reservoir.

#### H. Hydraulic Reservoir Air Chamber

- (1) The hydraulic reservoir air chamber is a small, cylindrical tank with a capacity of 700 cubic inches. It has two ports, an inlet port at the bottom of the chamber and an outlet port in one end of the chamber. The inlet port mounting boss is fitted with a drain plug. The air chamber is installed on the aft side of the rear spar in the left main gear wheel well, inboard and above the hydraulic reservoir filler assembly. Access to the air chamber is through the left main gear inboard door.
- (2) The air chamber provides for greater fluid capacity in the hydraulic reservoir by providing air and foam space for the reservoir in a separate container. Air pressure in the chamber is maintained by the regulator-aspirator and the air relief valve. The air pressure in the chamber and reservoir can be relieved, when desired, by the air bleed valve located downstream of the chamber. The air chamber is mounted higher than the reservoir filler assembly, to prevent overfilling of the reservoir from reducing the available air space and to prevent fluid from being vented overboard through the reservoir relief valve.


#### I. Hydraulic Reservoir Port B Return Check Valve (See Figure 10.)

- (1) The reservoir port B return check valve is installed in port B of the reservoir to prevent reverse flow of hydraulic fluid from the reservoir to the return line. The check valve is located on the reservoir in the left wing root and is accessible through the left wing root access door.
- (2) Externally and internally, the port B check valve is a standard-type check valve with a 1500-psi rating. A nominal pressure of approximately 8 psi unseats the poppet, permitting fluid to flow through the valve. When the reservoir pressure exceeds the return line pressure, the poppet will seat and reverse fluid flow will be prevented.


#### J. Engine Hydraulic Fire Shutoff Valve (See Figures 11 and 12.)

- (1) The engine hydraulic fire shutoff valve is a gate-type, mechanically controlled valve, installed in the supply line of each engine-driven hydraulic pump. The engine hydraulic fire shutoff valve is actuated from the flight compartment to prevent the flow of hydraulic fluid into the engine section.
- (2) The engine hydraulic fire shutoff valve is mounted on a 2-piece channel bracket which is installed inside the wing leading edge, aft of the firewall of each inboard pylon. Access to the valve is through the access

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

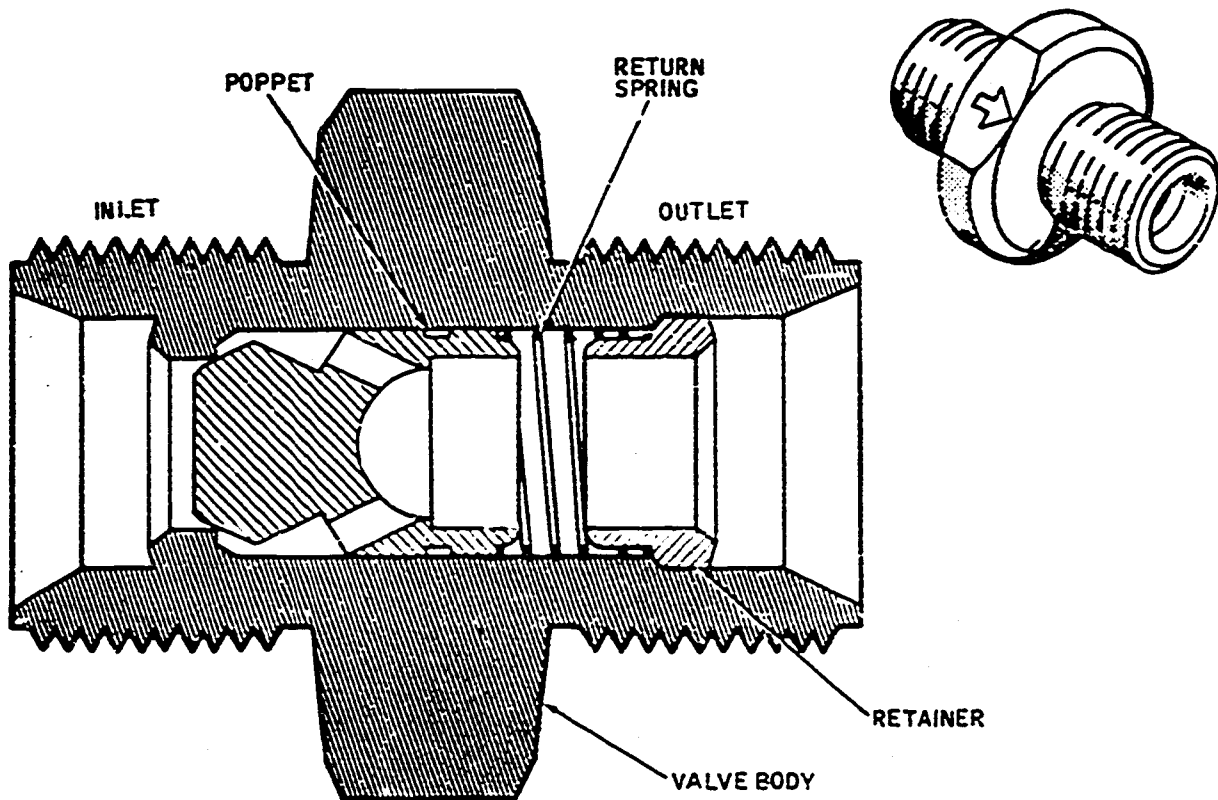

MINIATURE CHECK VALVE

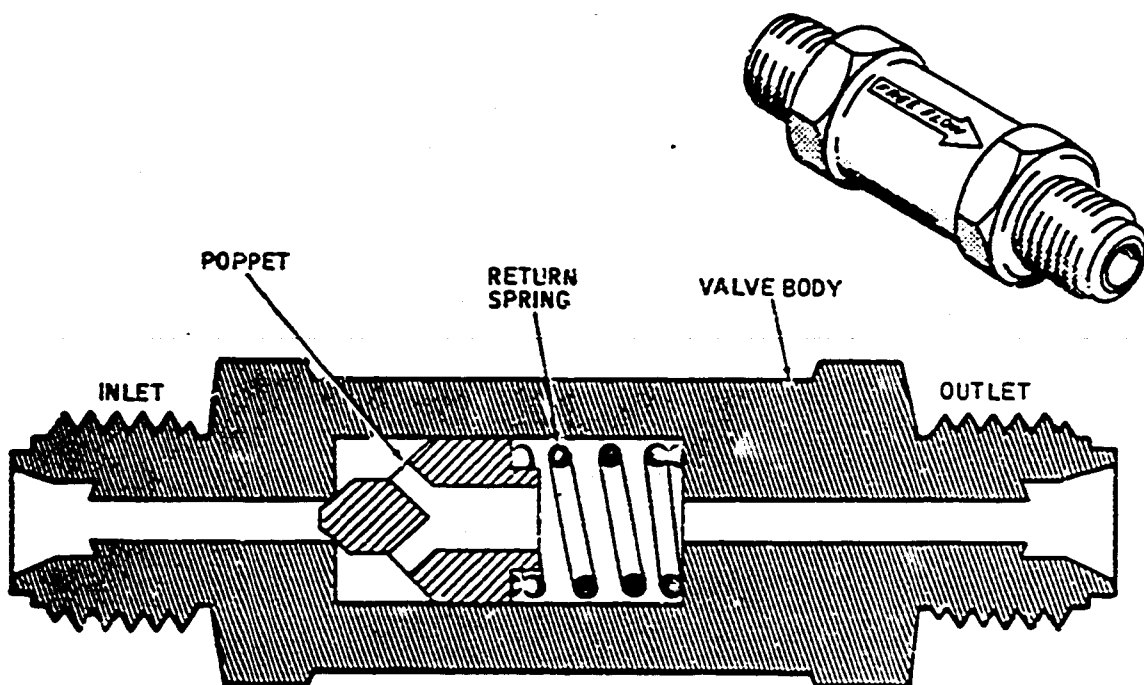

STANDARD CHECK VALVE

HA2-18A


Hydraulic Check Valves -- Typical  
 Figure 10

29-10-0  
 CODE 19  
 Page 21

Oct 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

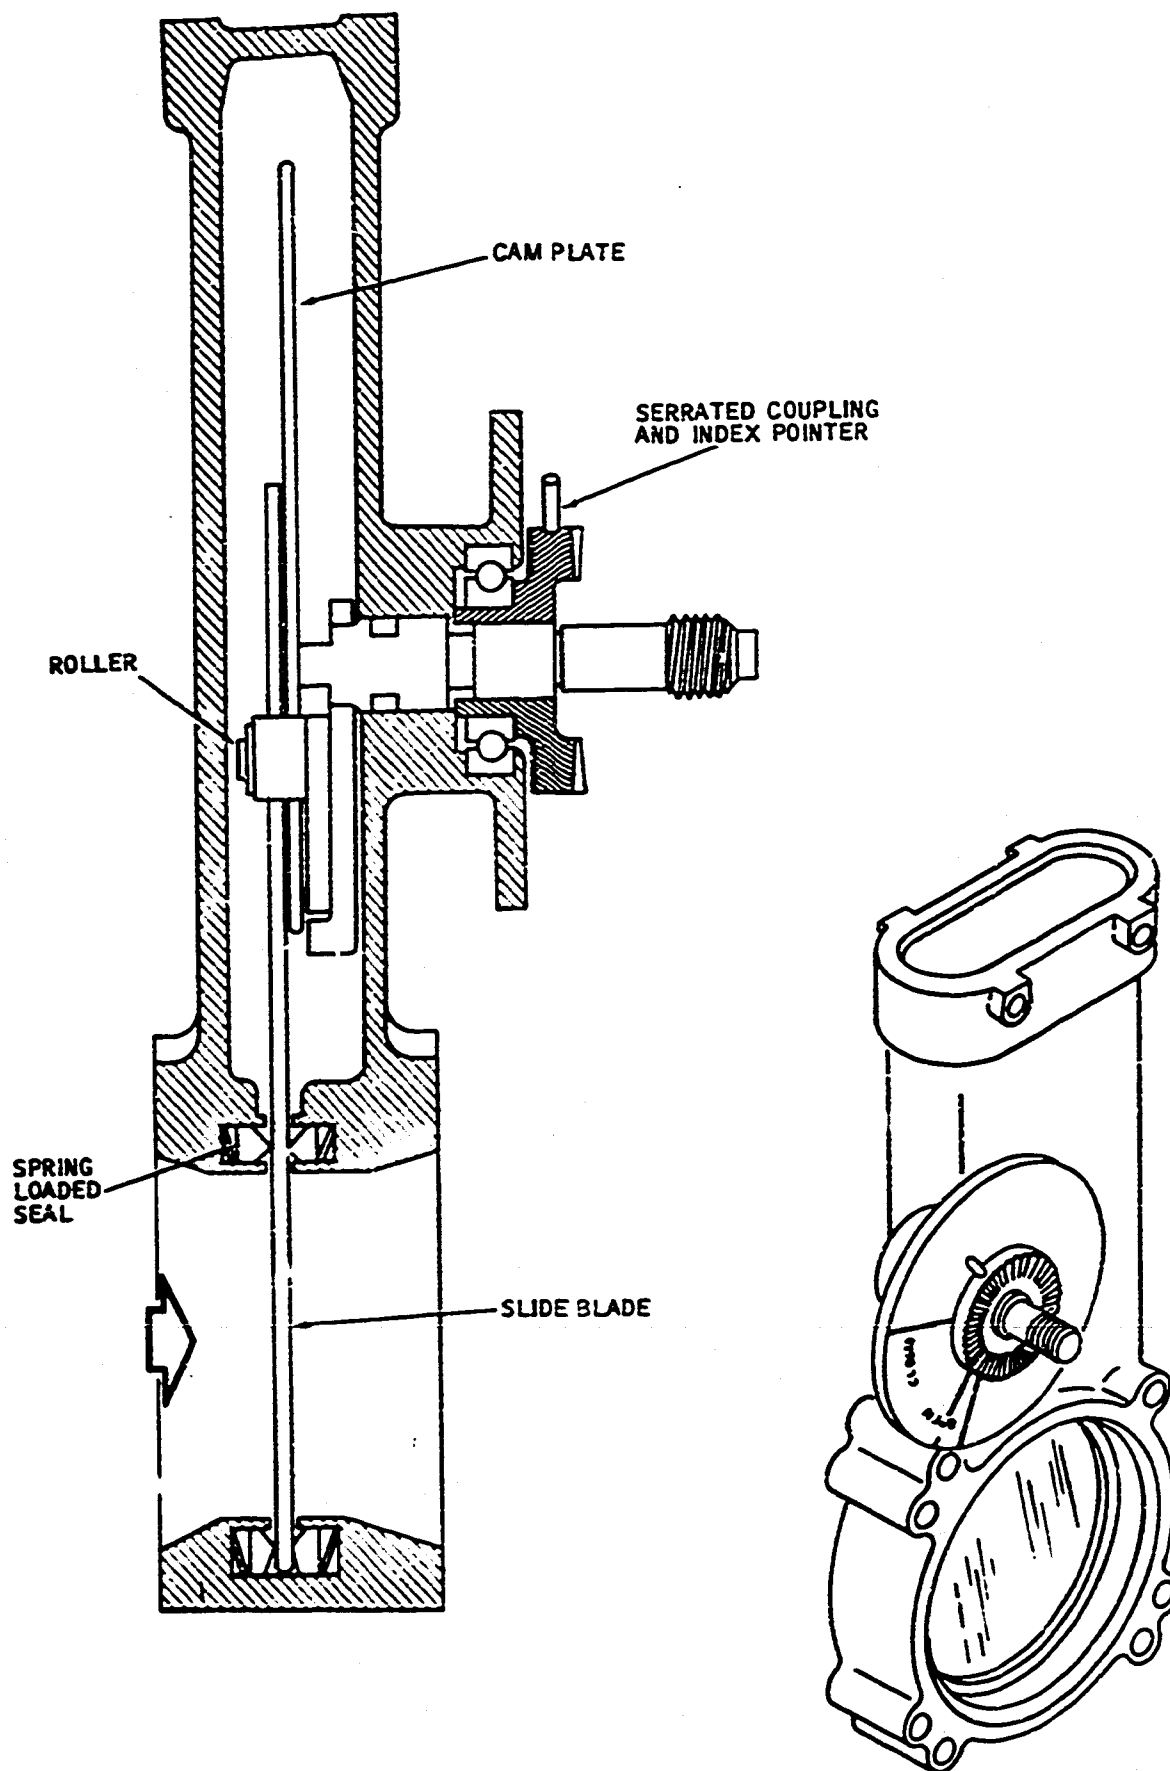


HA2-2209

29-10-0  
CODE 19  
Page 22

Engine Hydraulic Fire Shutoff Valve -- Schematic  
Figure 11

Oct 15/68

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

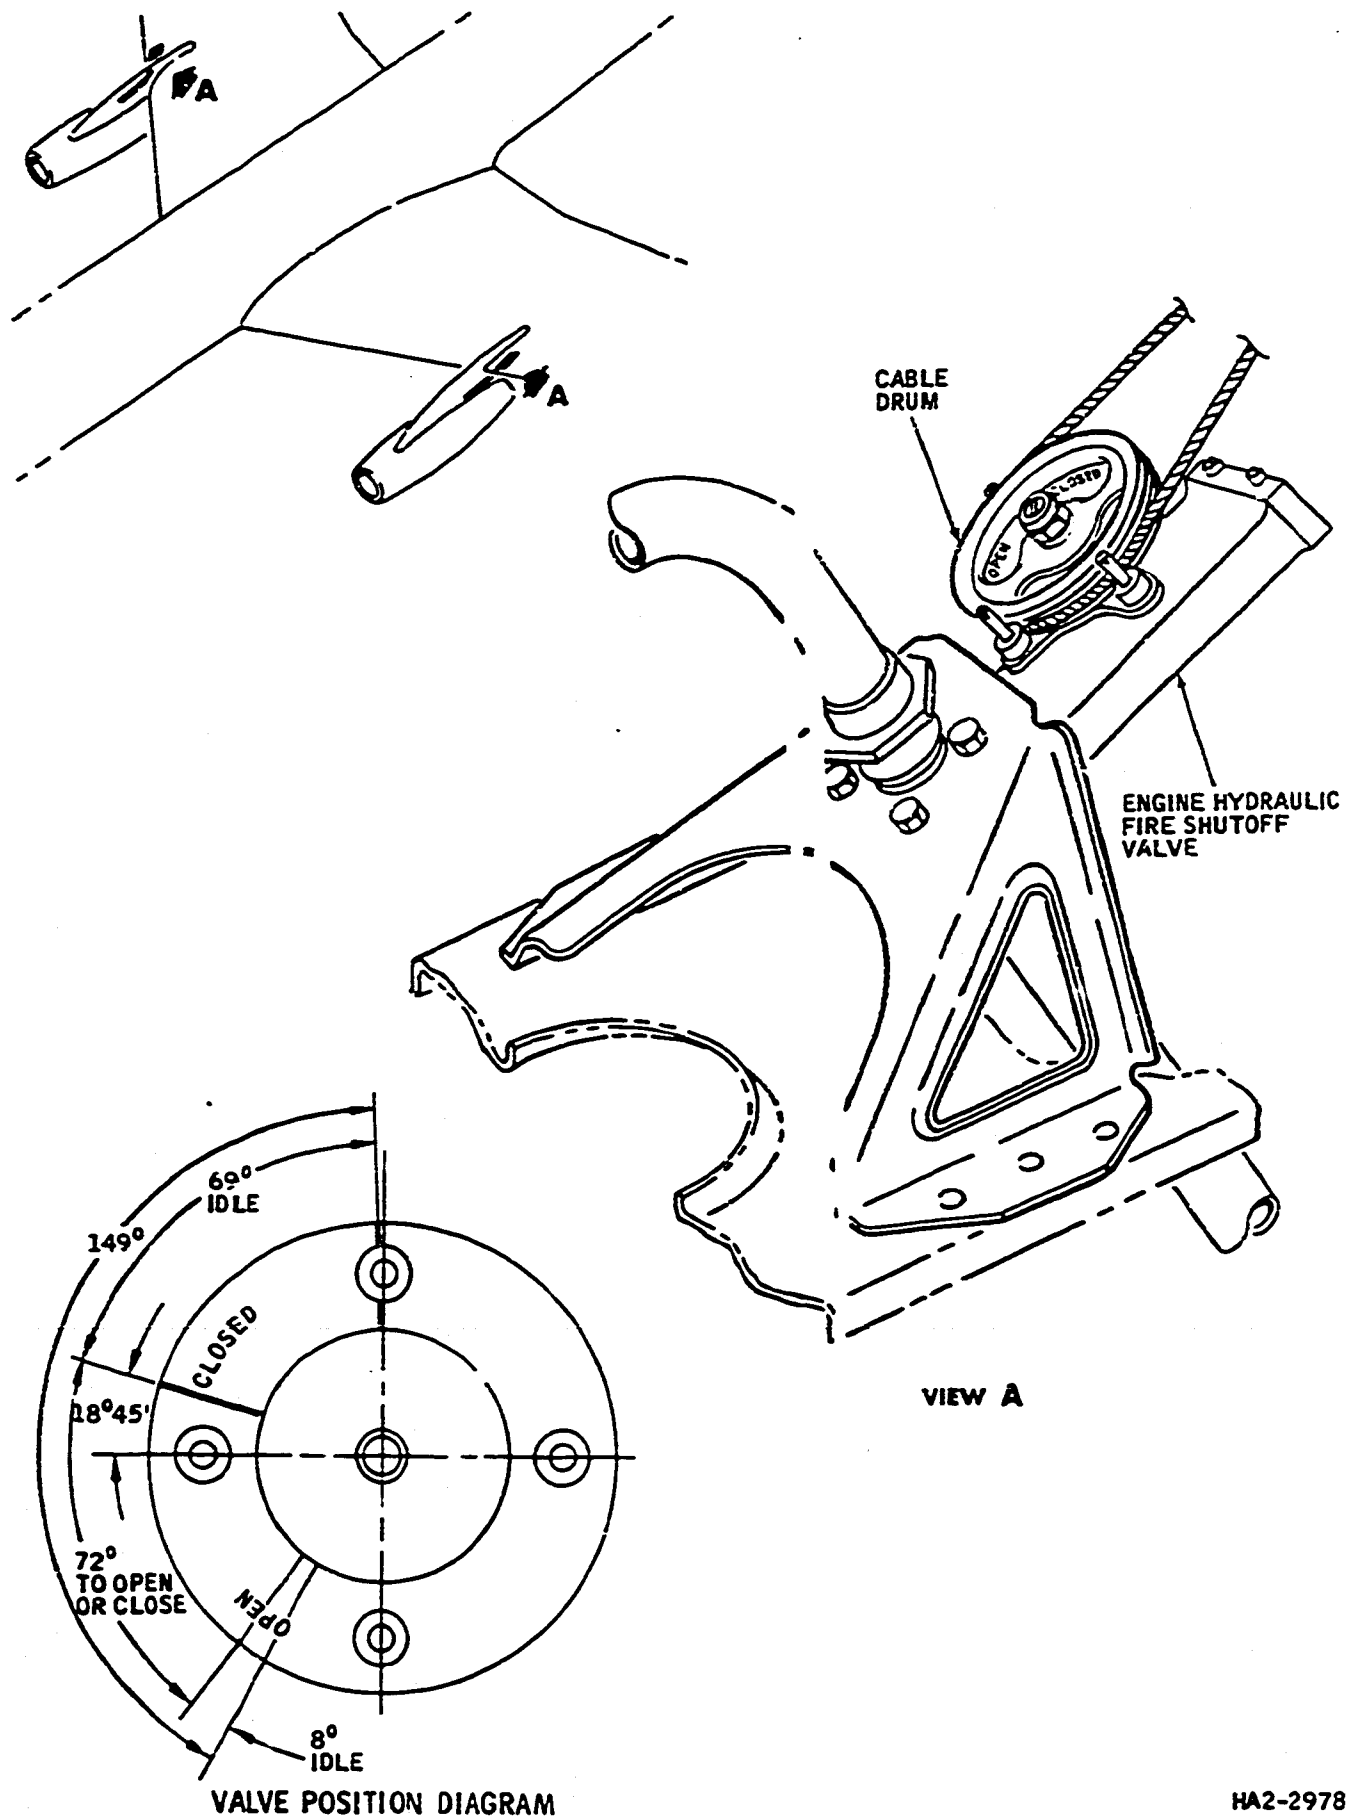

Engine Hydraulic Fire Shutoff Valve  
 Figure 12

HA2-2978

Oct 15/68

29-10-0  
 CODE 19  
 Page 23

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


door located on the lower side of the wing leading edge, outboard of either the left or right inboard pylon. Each valve is located approximately 30 inches inboard of the access door.

- (3) Internally, the valve consists of a valve arm, valve arm link, cam plate, and slide blade. The valve arm link attaches to the valve arm and is allowed to swivel through an arc in relation to the valve arm. The link has a stop that will contact the arm when the two have traveled to the valve closed, full overtravel position. In the full open pretravel position, the link contacts the arm stop.
- (4) A roller attached to the end of the link rides in, and extends through, a J-shaped slot in the cam plate. The rotation of the valve arm causes the link roller to follow the cam slot, allowing the arm and link to move through independent arcs.
- (5) The slide blade (gate of the valve) is slotted near the one end and also receives the link roller extending through the cam slot. The slide blade is positioned parallel to the cam plate and is guided by two grooves in the housing. This will allow the blade to open or close through porting of the valve by the action of the arm and link. The cam plate is pinned to the valve shaft, securing it rigidly in two positioning grooves in the housing. A pin-indicator is provided to relate valve position to a reference plate placarded open and closed.
- (6) The engine hydraulic fire shutoff valves are cable actuated by the fire control handles, located on the overhead switch panel in the flight compartment. When the fire control handle for either inboard engine is moved, the cable system rotates the drum which is attached to the corresponding shutoff valve shaft. This action extends the valve blade into the fluid passage to block the flow of fluid. The valve operates from open to close by clockwise rotation of the cable drum. The valve gage will idle during the first 8 degrees of rotation of the cable drum, and then will close in the next 72 degrees. The cable drum will continue to rotate the shaft for an additional 69 degrees after the gate valve is closed, locking it overcenter. Total travel of the cable drum is 149 degrees.

K. Engine-Driven Hydraulic Pump (See Figures 13 and 14.)

- (1) The two, single-stage, variable-displacement, cam-actuated, pressure-compensated, engine-driven hydraulic pumps are installed, one each, on the inboard engines. The pump incorporates a solenoid-operated bypass feature for reducing the output pressure to zero psi. Each bypass valve solenoid is controlled by a corresponding engine hydraulic pump control switch in the flight compartment. The switch for the hydraulic pump on engine 2 is placarded left, on, and bypass. The switch for engine 3 is placarded right, on, and bypass. When a switch is placed in the bypass position, the bypass valve for that pump is actuated and the pump pressure is reduced to zero psi. When the switch is placed in the on

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

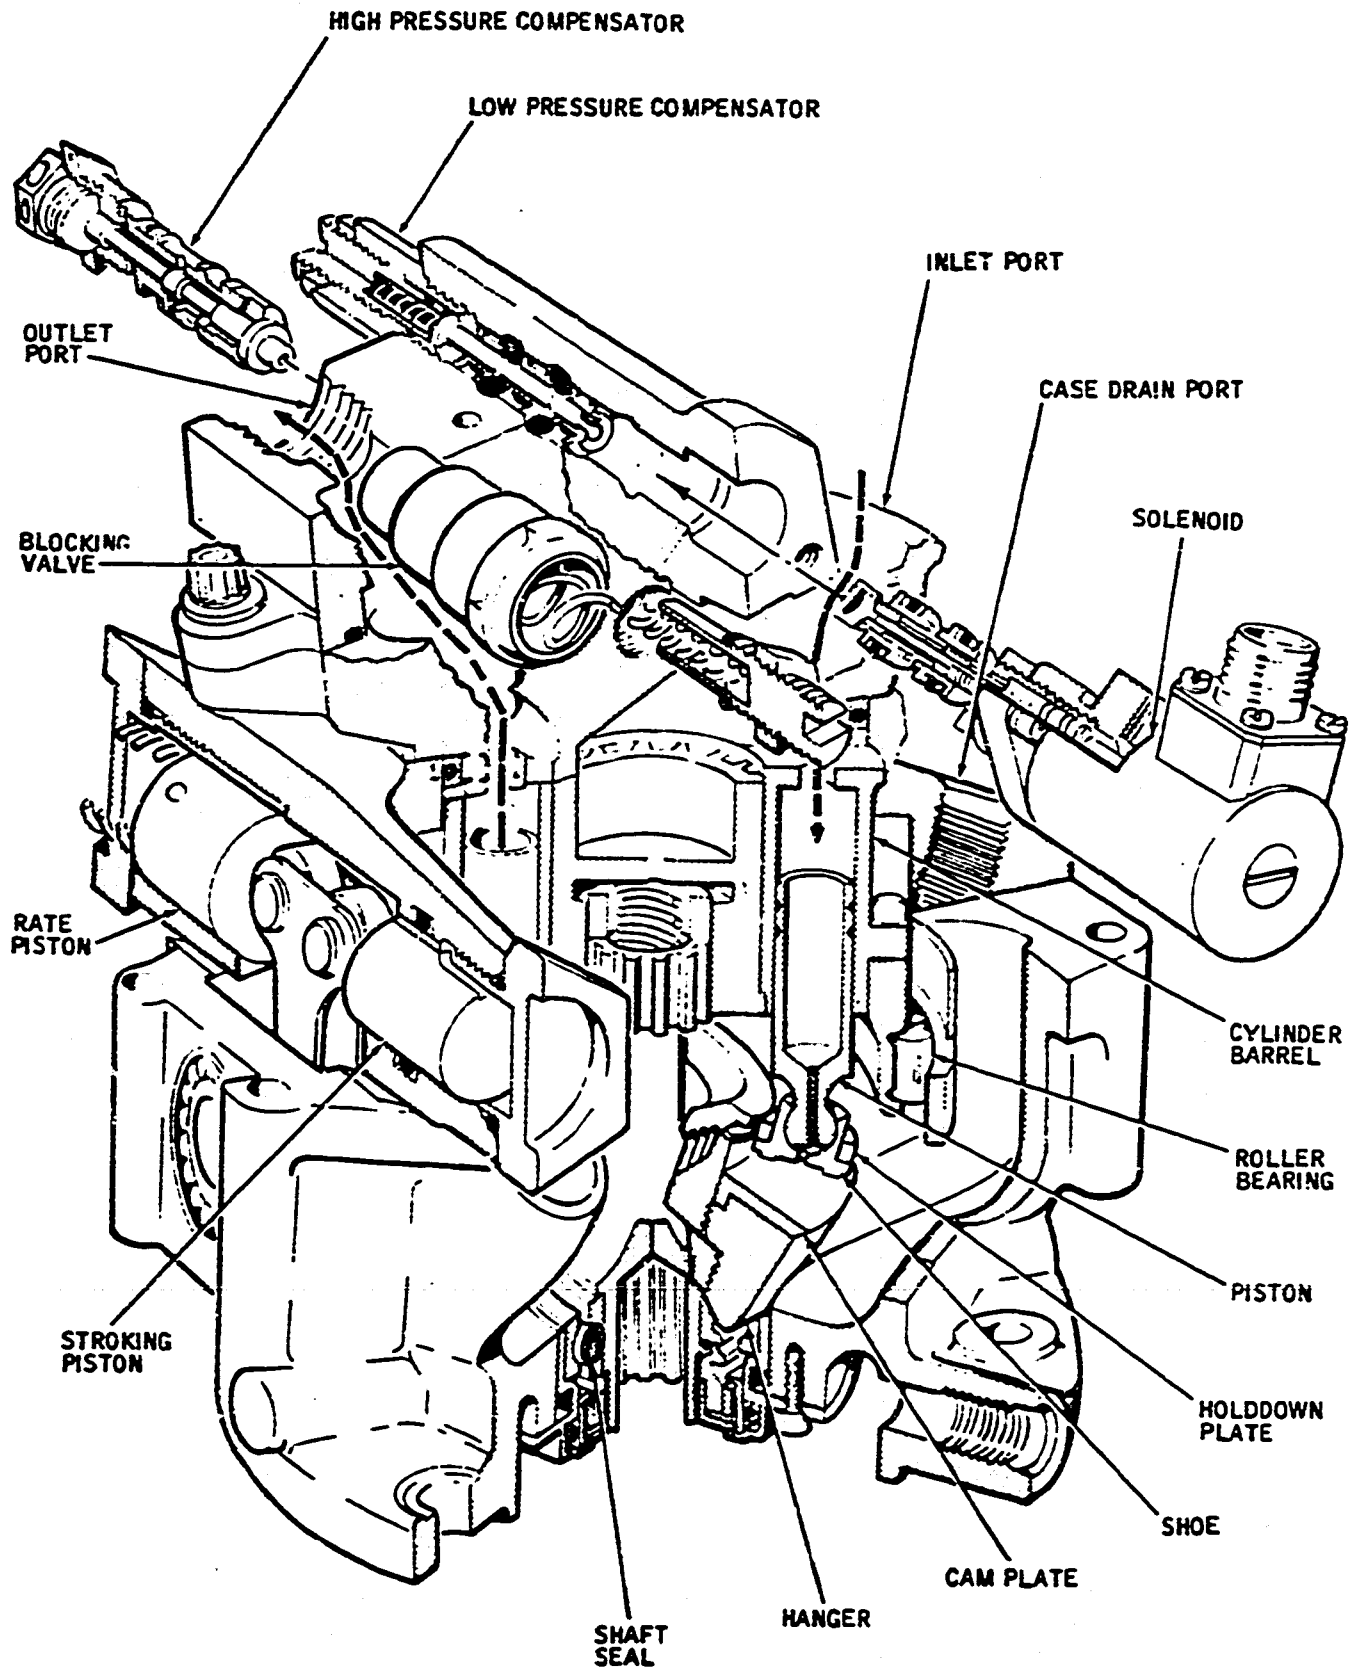

HA2-21


Engine-Driven Hydraulic Pump -- Cutaway View  
Figure 13

Oct 15/68

29-10-0  
CODE 19  
Page 25




DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

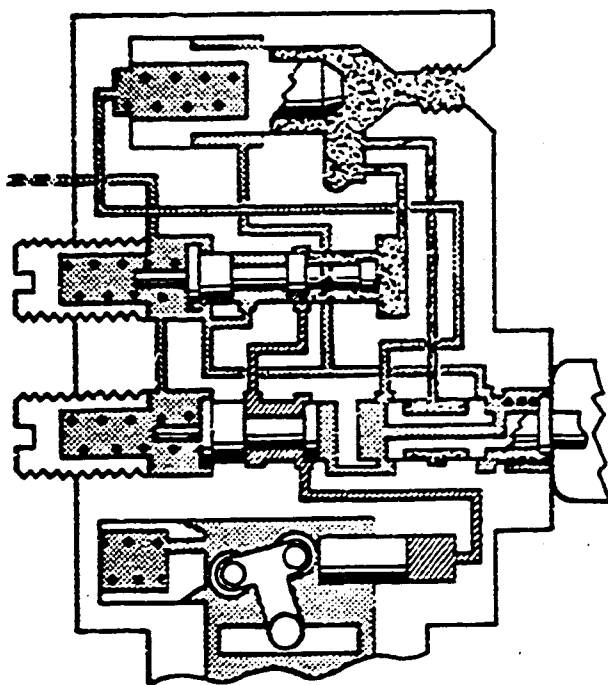


**A. FULL PRESSURE, NO FLOW CONDITION**

BLOCKING VALVE OPEN, 3,000 PSI  
 FLUID AVAILABLE, NO DEMAND.

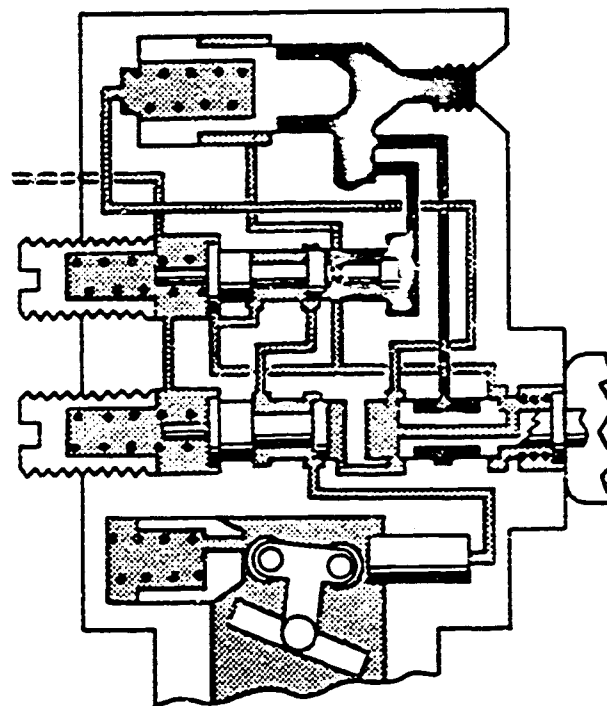

**B. FULL FLOW CONDITION**

BLOCKING VALVE OPEN, HANGER "ON STROKE" 3,000  
 PSI FLUID FLOWING FROM PUMP.

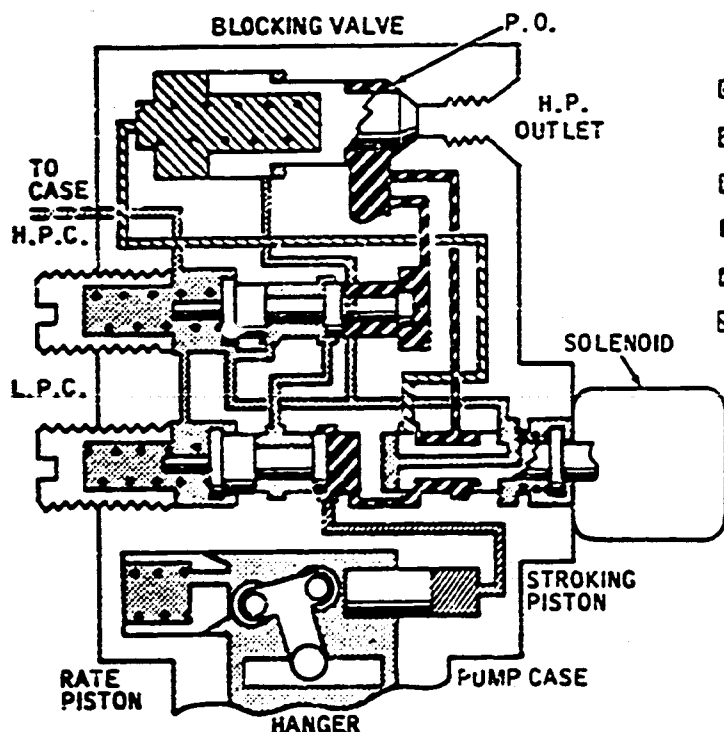

**C. DEPRESSURIZED AND BLOCKED CONDITION**

SOLENOID ENERGIZED, BLOCKING VALVE CLOSED,  
 PUMP COMPENSATED AT 500 PSI.

**KEY**

- COMPENSATED PRESSURE: 3,000  $\pm$  50
- CONTROL PRESSURE: 200-300
- CASE PRESSURE: 45-55
- FULL FLOW PRESSURE: TO 2,950
- DEPRESSURIZED PRESSURE: 400-500
- BLOCKING VALVE PRESSURE: 400-500
- P.O. = PUMP OUTLET
- H.P.C. = HIGH PRESSURE COMPENSATOR
- L.P.C. = LOW PRESSURE COMPENSATOR

HA2-19

Engine-Driven Hydraulic Pump Pressure  
 Flow -- Schematic  
 Figure 14

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

position, the bypass valve is open and the pump operates normally in a pressure range of 2850 to 3050 psi. The pump provides a continuous, nonpulsating flow of hydraulic fluid, under pressure, to the hydraulic manifolds for distribution throughout the hydraulic system.

- (2) The heart of the pump is a revolving cylinder barrel which contains nine pistons. By means of a hold-down plate and hydraulically balanced shoes, the pistons are supported on an inclined cam plate which causes them to reciprocate as the barrel revolves. The hold-down plate ensures positive stroking of the pistons during the suction stroke. The angle of the cam plate is varied by moving the trunnioned hanger on which it is mounted, thereby changing the displacement of the pump. The hanger, in turn, is controlled by a pressure compensator.
- (3) Oil passes through the main inlet and then through porting in the end of the cylinder barrel to the cylinders from which the pistons are being withdrawn. As the cylinder barrel revolves, these pistons are forced into their bores and discharge high-pressure oil through porting in the end of the barrel to the outlet port.
- (4) The cylinder barrel, supported by a radial bearing, is driven by an internal shaft which passes through the trunnioned hanger. A hydraulically balanced, face-type, carbon shaft seal is used to assure optimum sealing. Sealing pressure increases as case pressure increases, and the seal adjusts itself to compensate for any wear which takes place.
- (5) The pressure compensator regulates the volume delivered in accordance with the demand of the system and maintains the predetermined pressure. When the pressure is less than the spring load, the spring moves the spool to vent oil in the stroking cylinder to the case. The stroking piston then retracts and a spring load on the hanger moves it to a greater angle and increases the volume pumped. The axial thrust of the pistons against the cam plate during power stroke is balanced hydraulically. Oil, at system pressure, is admitted through holes in the piston and shoe to an undercut area in the face of the piston shoe. The pressure applied to the undercut area, which is slightly less than the piston area, effectively balances the forces so that the shoe is supported on an oil film at all times. Balance is controlled to such a degree that there is no excessive leakage, and high volumetric efficiency is maintained.
- (6) The axial thrust of the cylinder barrel is also balanced hydraulically against the port plate.
- (7) Because of these features, the axial thrust of the pistons is transferred hydraulically, eliminating the need for antifriction thrust bearings. This increases the reliability factor, if contamination or other adverse conditions exist.
- (8) The pump functions as a standard, pressure-compensated pump, when the bypass solenoid is not energized. Energizing the solenoid allows the pump to compensate at a reduced, controlled pressure of approximately

Oct 15/68

29-10-0  
CODE 19  
Page 27

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

500 psi. Also incorporated in the cap is a blocking valve. The valve shuts off the discharge flow from the pump, when the 500 psi compensating valve takes over as a result of the solenoid being energized. Hence, depressurizing the pump permits operation with the pump completely feathered at approximately 1/2 drive torque required at 3000 psi. The blocking valve is automatically controlled by the depressurizing valve. When the solenoid is energized, the blocking valve prevents flow from the pump discharge port. When the solenoid is deenergized, the blocking valve automatically opens as the pump builds up pressure to match the system demand.

**L. Engine-Driven Hydraulic Pump Check Valves (See Figure 10.)**

- (1) Two check valves, rated at 3000 psi, are installed in the lines from each engine-driven hydraulic pump. One check valve is installed in the pressure line and the other is in the case drain line. The check valves in the pump pressure lines prevent reverse flow of hydraulic fluid through the pump, when the pump is inoperative or when external hydraulic pressure is supplied to the system. Access to the valves can be gained through an access door in the forward right apron of each inboard pylon. The valves are mounted on the exterior wall of the inlet box by means of the bulkhead fittings and retaining nuts.
- (2) Normal operating pressure will unseat the poppet, and fluid will flow through the valve. When pressure downstream of the valve exceeds pressure from the pump, the pressure, with the aid of the return spring, will seat the poppet. This prevents reverse flow of hydraulic fluid through the pumps.


**M. Engine-Driven Hydraulic Pump Case Drain Filter (See Figure 15.)**

- (1) A line-type, micron filter, for use in a low-pressure hydraulic system, is installed in the engine-driven hydraulic pump case drain return line between the pump flow check valve and the hydraulic system reservoir. The case drain filter is installed on the aft surface of the rear spar opposite the leading edge of the inboard flap assembly. One filter is used for each engine-driven pump. Access is gained to the filter by lowering the flaps. A second check valve is installed adjacent to the filter in the downstream side of the case drain return line.
- (2) Externally, the filter is approximately 5 inches high and 2 inches wide, with ports marked inlet and outlet. The bowl is cylindrical in shape, with hex-shaped wrench flats at the lower end. A self-sealing, magnetic drain plug is installed in the bottom end of the filter bowl. The filter element is made of chemically treated paper.


**N. Dual Filter and Relief Valve (See Figure 16.)**

- (1) The hydraulic power system dual filter and relief valve consists of two filters and two relief valves installed in the same body. The unit filters the hydraulic fluid from the two engine-driven hydraulic pumps, and the pressure relief valves assure that excessive pressures do not build


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

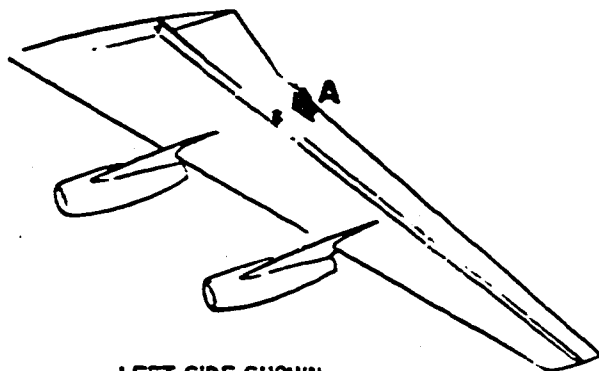

LEFT SIDE SHOWN  
 RIGHT SIDE OPPOSITE

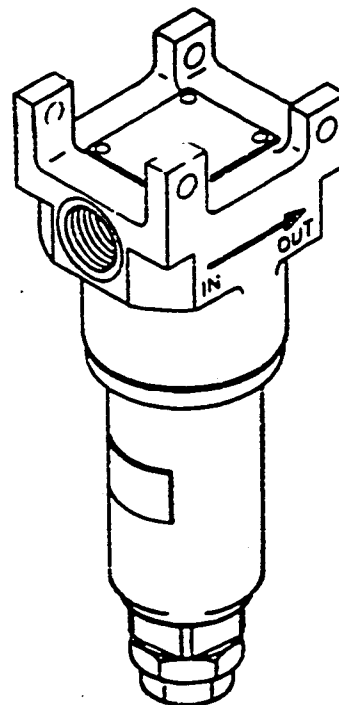

VIEW A

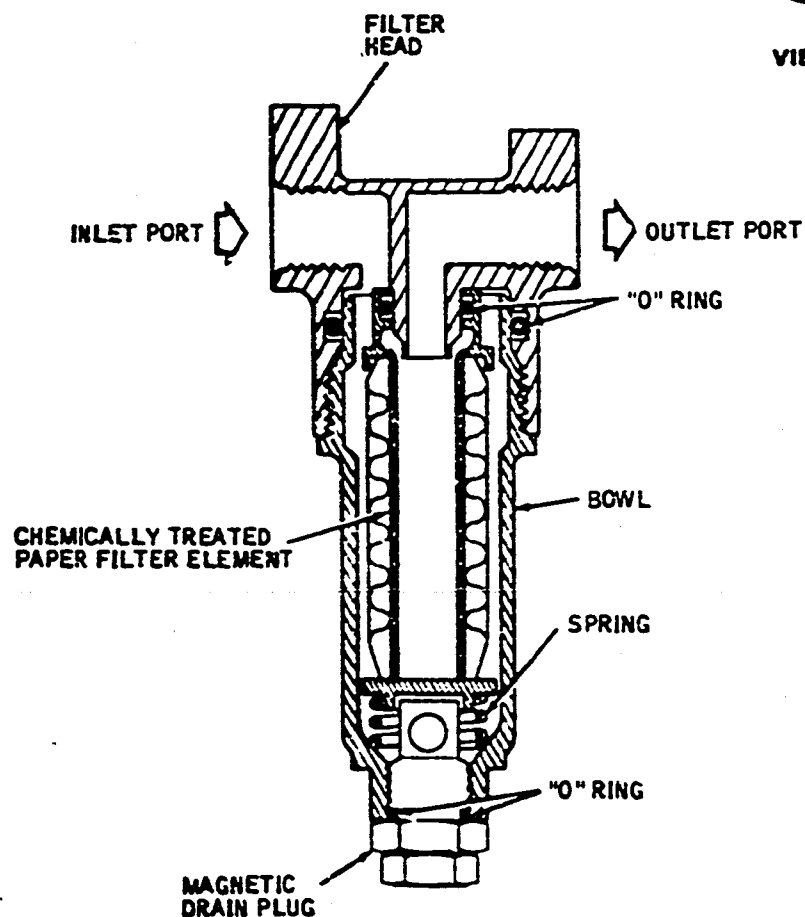


HA2-31

Engine Driven Hydraulic Pump Case Drain  
 Filter -- Cutaway View  
 Figure 15

Oct 15/68

29-10-0  
 CODE 19  
 Page 29

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

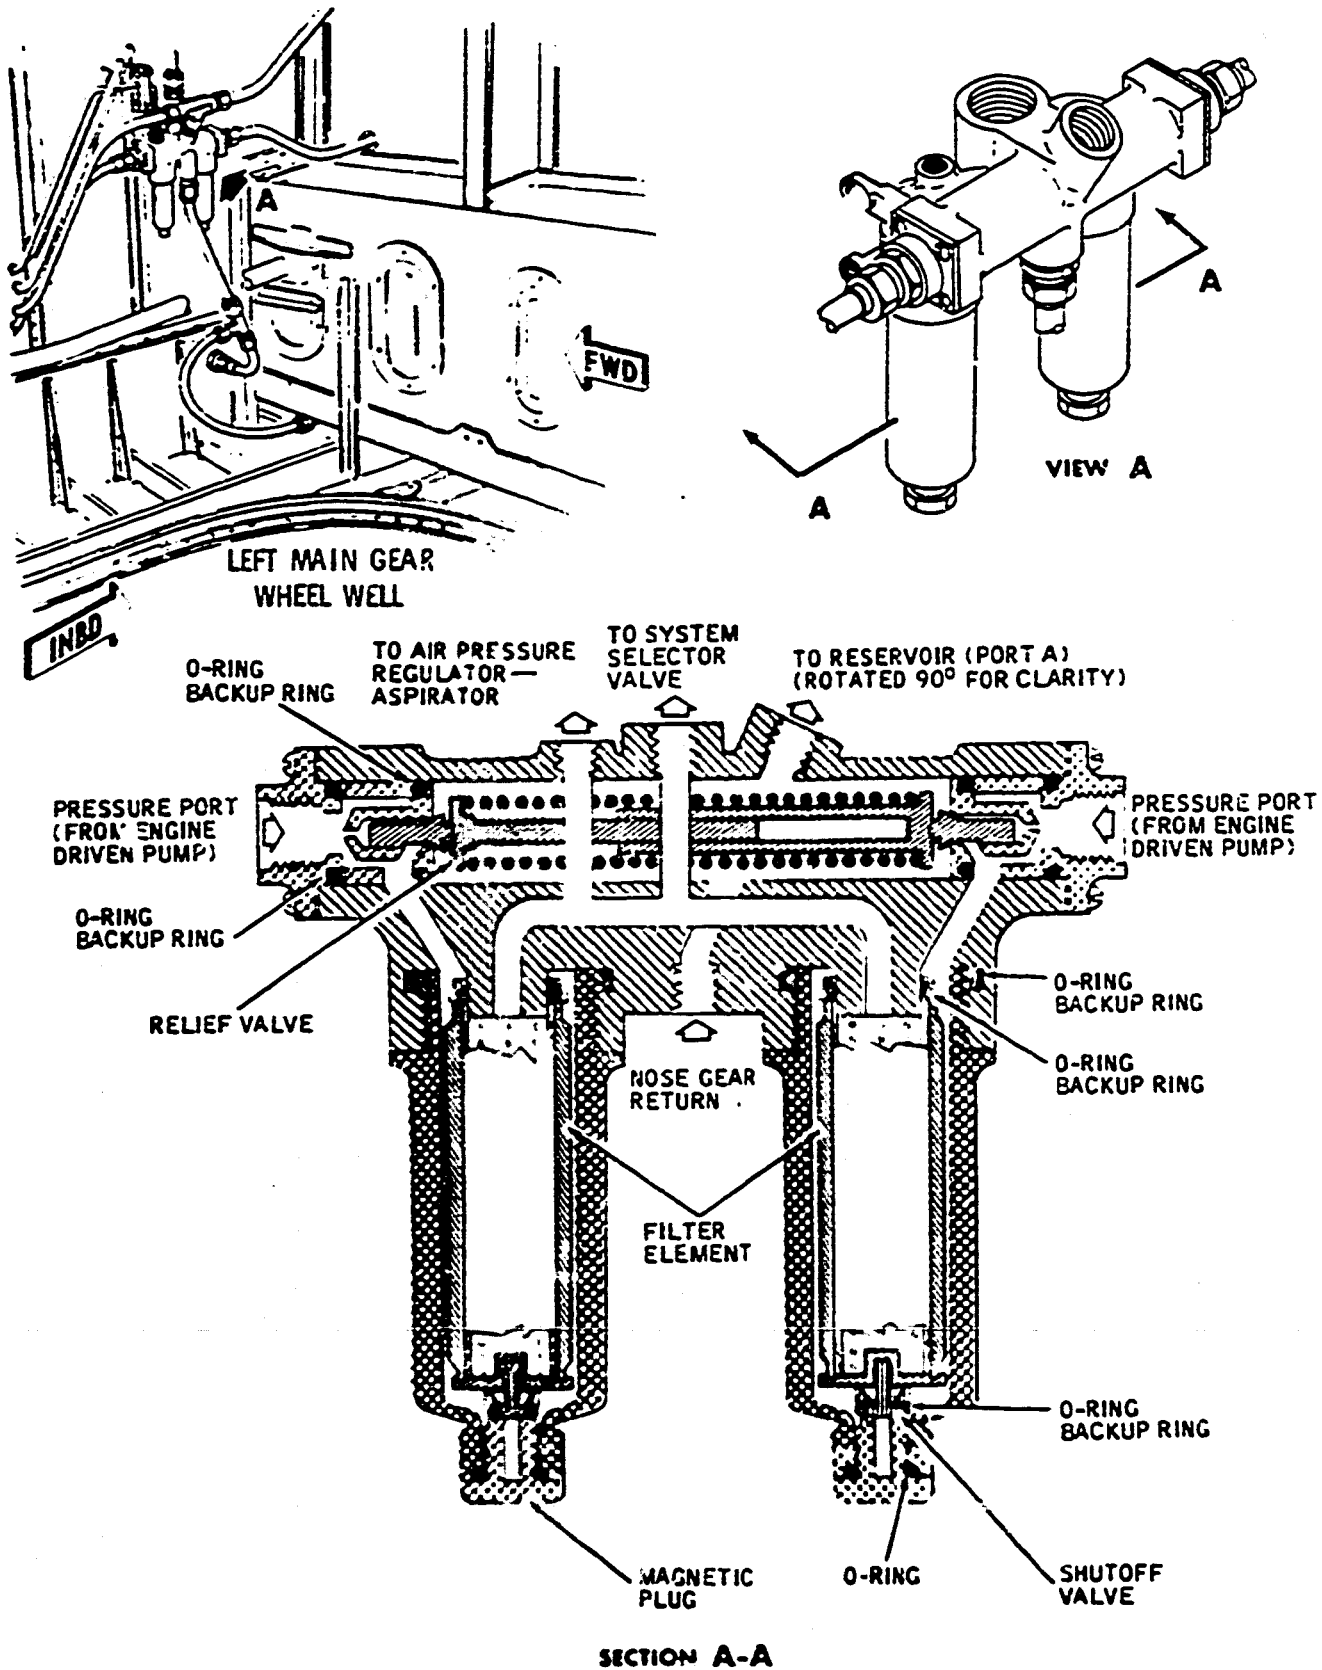

HA2-20

29-10-0  
 CODE 19  
 Page 30

Dual-Filter and Relief Valve -- Cutaway Valve  
 Figure 16

Oct 15/68

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

up in the pressure line from the pumps. The unit is located in the left main gear wheel well on the lower portion of the rear spar, approximately 1 foot outboard of the centerline shear web.

- (2) The unit consists of a casting with a flange-mounted pressure inlet port on each end. Two pressure outlets are located on the top of the casting. One outlet, centrally located, is the main pressure outlet to the system selector valve. The other, located to the left of the selector valve port, is the pressure outlet to the air pressure regulator-aspirator. The return outlet port for the relief valve portion of the unit is located on the center of the aft face of the body, canted upward. The nose gear return line is connected to a check valve installed in a return line port, located between the two filter bowls.
- (3) The pressure relief valves are located behind the pressure inlet ports and are connected to the return outlet port of the unit. The inlet from the nose gear return line is routed through the casting to the return outlet port.
- (4) If either of the filter elements becomes clogged, pressure above 3300 psi at the inlet port will unseat the poppet. Pressure above 3500 psi will allow full flow of 22.5 gpm to flow to the return port of the unit and back to the reservoir. The relief valves will reseal at approximately 3000 psi.
- (5) A check valve is installed in the system selector valve port to prevent reverse flow of pressure through the filter during auxiliary hydraulic pump operation.


0. System Selector Valve (See Figures 17 and 18.)

- (1) The system selector valve is a 3-position valve which permits directional control of fluid under pressure. The valve is installed on the left hydraulic power manifold and is accessible through the left main gear inboard door.
- (2) The selector valve pressure-to-system port and the return port are directly ported to the manifold. The engine pump pressure enters the valve through a port on the large end of the valve, and the auxiliary pump inlet and alternate ports are located at the top, toward the aft end of the valve. The valve control crank is attached to a push-pull rod and a cable sector.
- (3) Operation of the system selector valve is controlled by a lever located on the right side of the system engineer's control pedestal. When the control lever is moved to the selected position, the cable system, through the sector and crank, operates the valve positioning lever to drive the slide spool assembly to the selected position. When the control lever is placed in the general system (normal) position, the selector valve is actuated, causing hydraulic fluid to enter the valve through the system pressure port. The fluid is then directed into the manifold through the pressure-to-system port. In the general system (normal)

Oct 15/68



29-10-0  
CODE 19  
Page 31

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

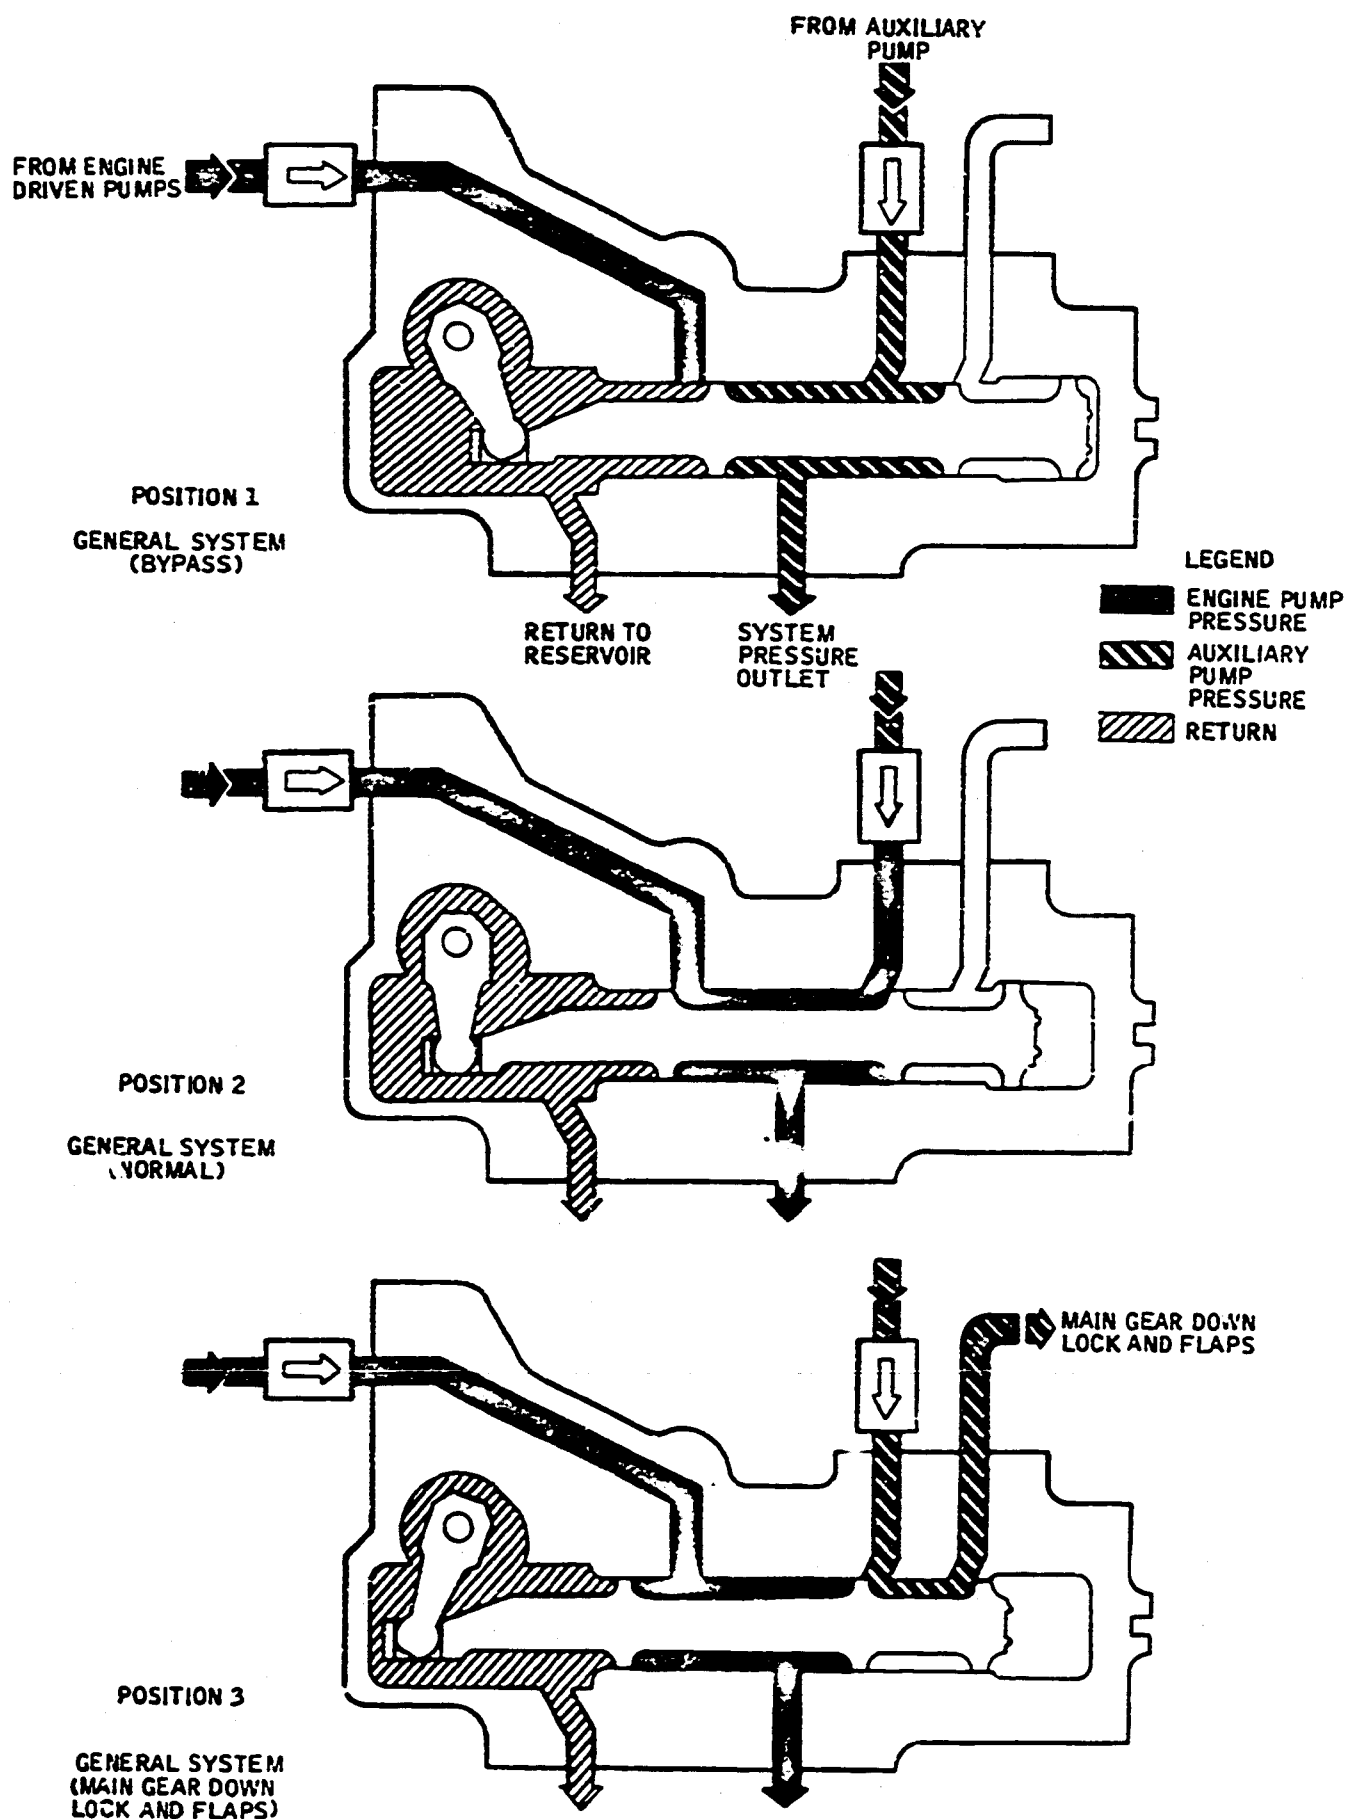

HA2-26

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

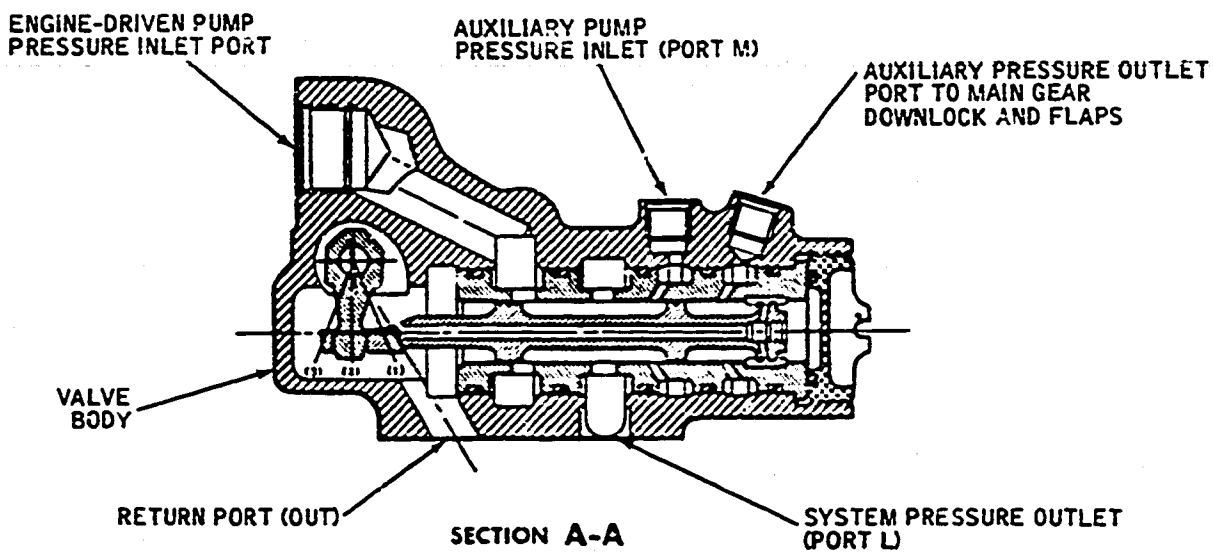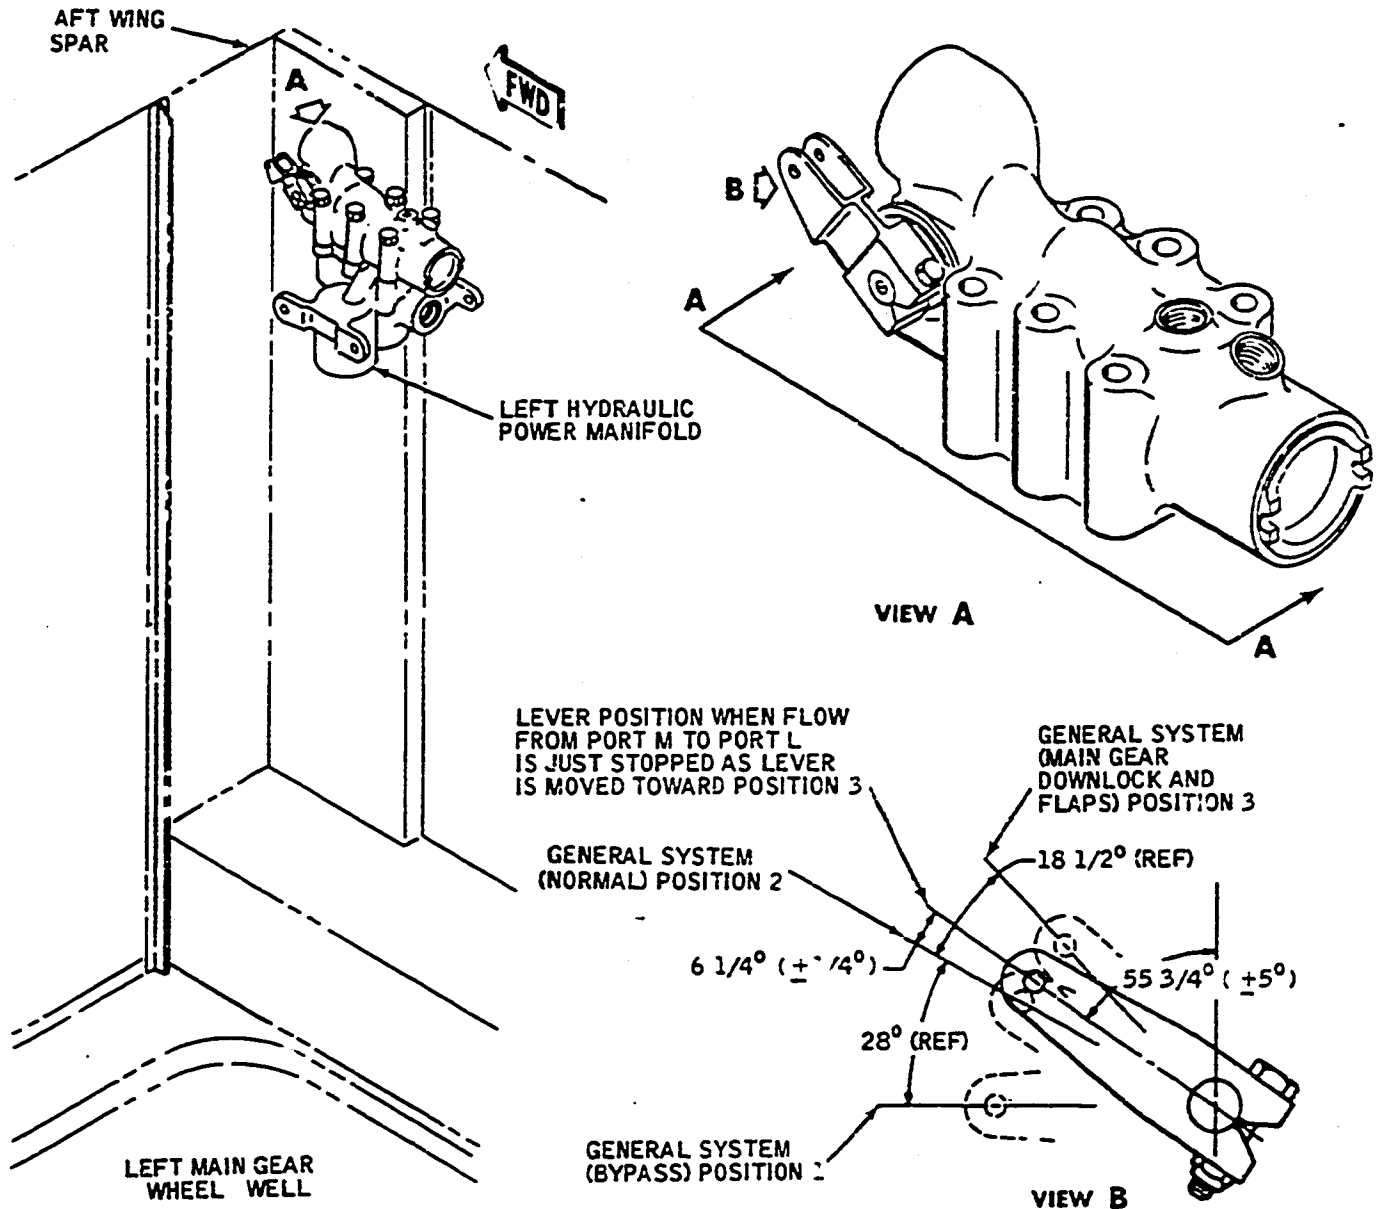

HA2-854A

System Selector Valve -- Cutaway View  
 Figure 18

Nov 1/69

29-10-0  
 CODE 19  
 Page 33



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

position, fluid from the auxiliary pressure port is also routed to the pressure-to-system port. In the bypass/general system position, the selector valve ports engine pump pressure into the manifold through the return port. In this position, the auxiliary pump pressure is ported to the general system. In the general system/main gear down and flaps position, pump pressure is routed through the alternate port, at the top of the valve, for alternate operation of the flaps and the landing gear downlock cylinders. Internal leakage provides lubrication for the moving parts of the valve.



**P. Left Hydraulic Power Manifold (See Figure 19.)**

- (1) The left hydraulic power manifold distributes fluid pressure from the hydraulic pump (any one of the three pumps), through control valves to the various airplane hydraulic subsystems. The left power manifold is located overhead in the left wheel well. Access to the left manifold is through the left main gear inboard door.
- (2) One valve-mounting pad is provided on the top of the manifold for the system selector valve. Four ports are provided on the manifold for connection of hydraulic pressure and return lines. Three of these ports are pressure outlet ports; one, located on the aft face of the manifold and one located on the bottom of the manifold port fluid to the flight controls. The third pressure outlet port, located on the bottom of the manifold, ports fluid directly to the priority valve, which in turn, ports fluid to the nose gear and to the right power manifold. The fourth, a return port, located immediately forward of the pressure line port on the bottom of the manifold, is connected by a line to a return port of the reservoir.

**Q. Right Hydraulic Power Manifold (See Figure 20.)**

- (1) The right hydraulic power manifold distributes fluid pressure from the hydraulic pumps (engine-driven or auxiliary, or any combination of these three pumps), through the control valves to the various hydraulic subsystems. The right hydraulic power manifold is located overhead in the right wheel well. The manifold is held in place with braces and is accessible through the right main gear inboard door.
- (2) The manifold contains passages for pressure and return fluid distribution, four check valves, ports for pressure and return lines, and mounting pads for the various control valves.
- (3) The right manifold receives fluid pressure from the left manifold. Pressure is ported through check valves to the wing flap control valve, to the slot control valve, to the main gear control valve, to the brake control valve, to the brake pressure transmitter, and to the brake accumulators.
- (4) Auxiliary hydraulic pressure is ported from the alternate port of the system selector control valve into port K in the right manifold. Port K is located inboard of the spoiler control valve. From port K, auxiliary

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

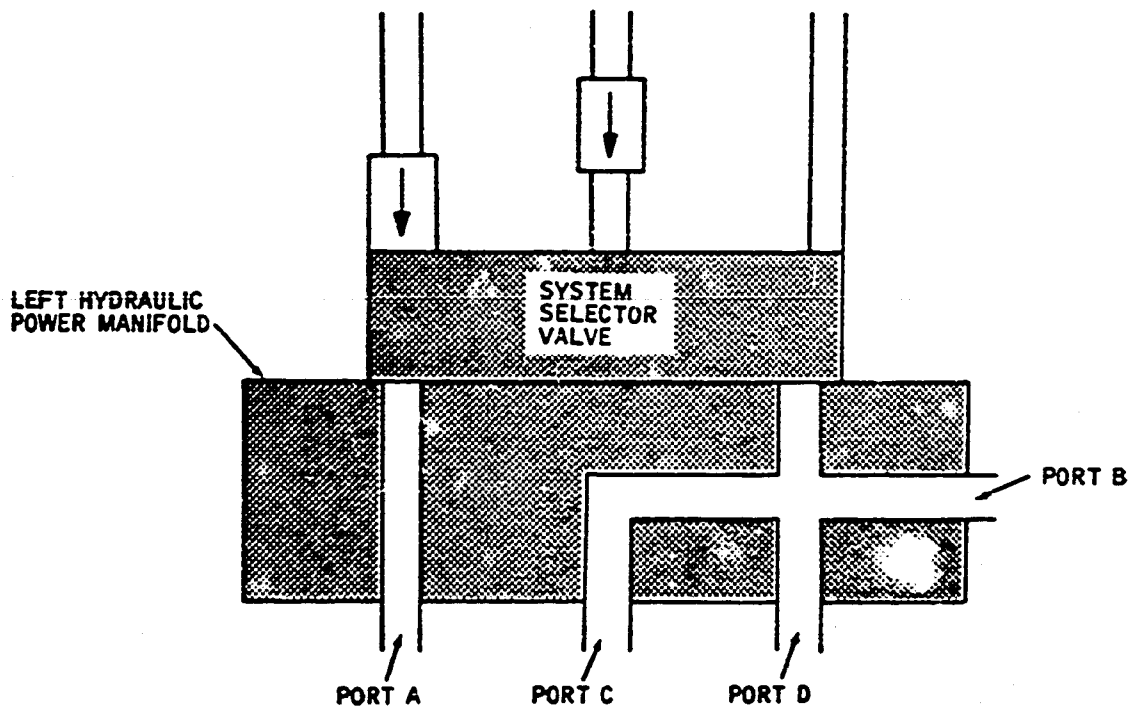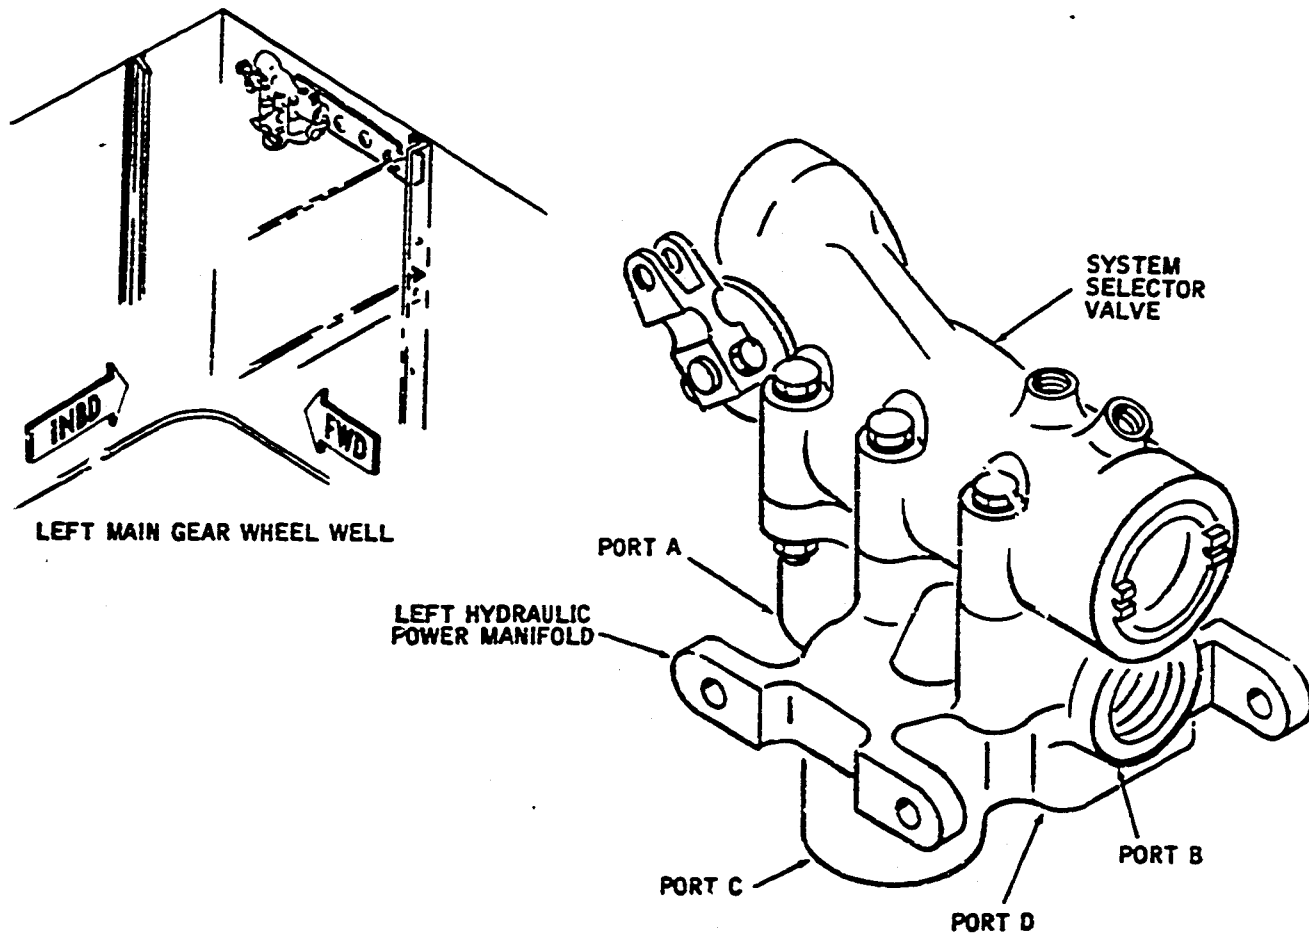

Left Hydraulic Power Manifold -- Schematic  
 Figure 19


Oct 15/68

Printed in U S A


HA2-855

29-10-0  
 CODE 19  
 Page 35


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

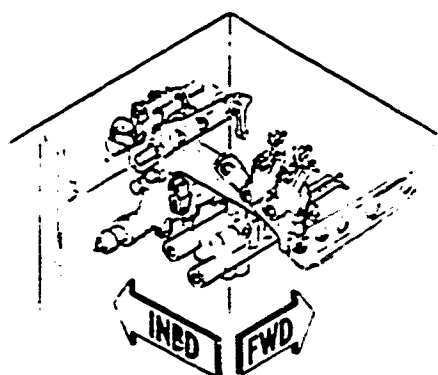

RIGHT MAIN GEAR  
WHEEL WELL

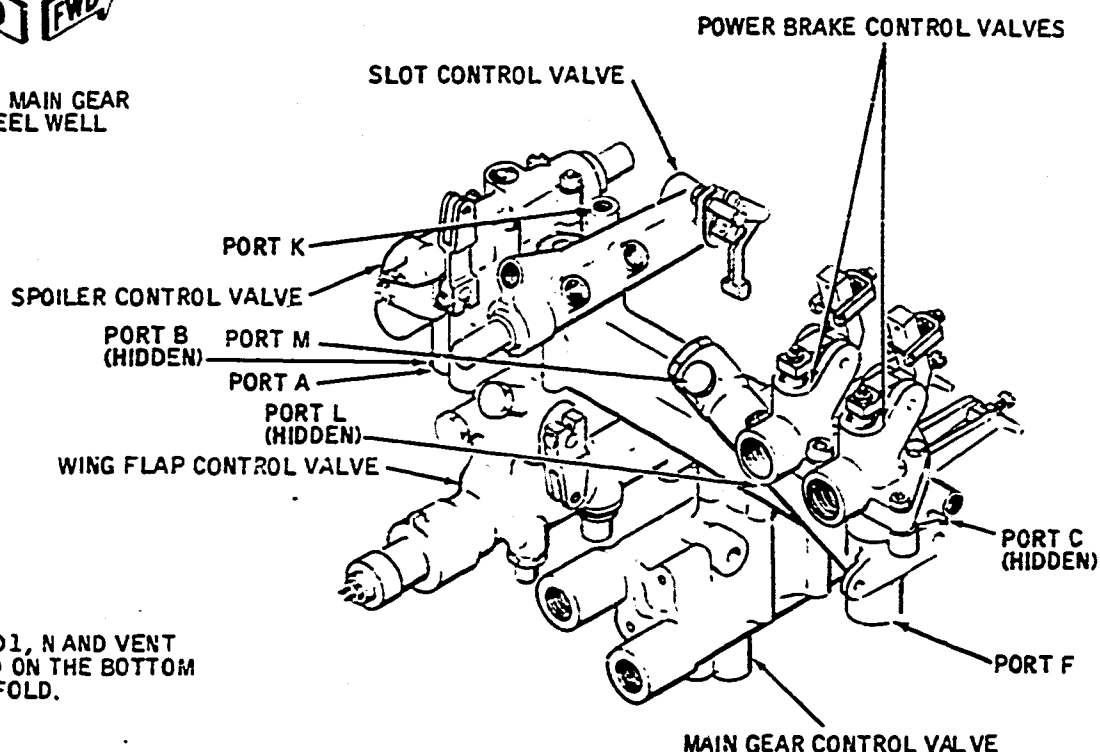

NOTE: PORTS B, C, D<sub>1</sub>, N AND VENT  
ARE LOCATED ON THE BOTTOM  
OF THE MANIFOLD.

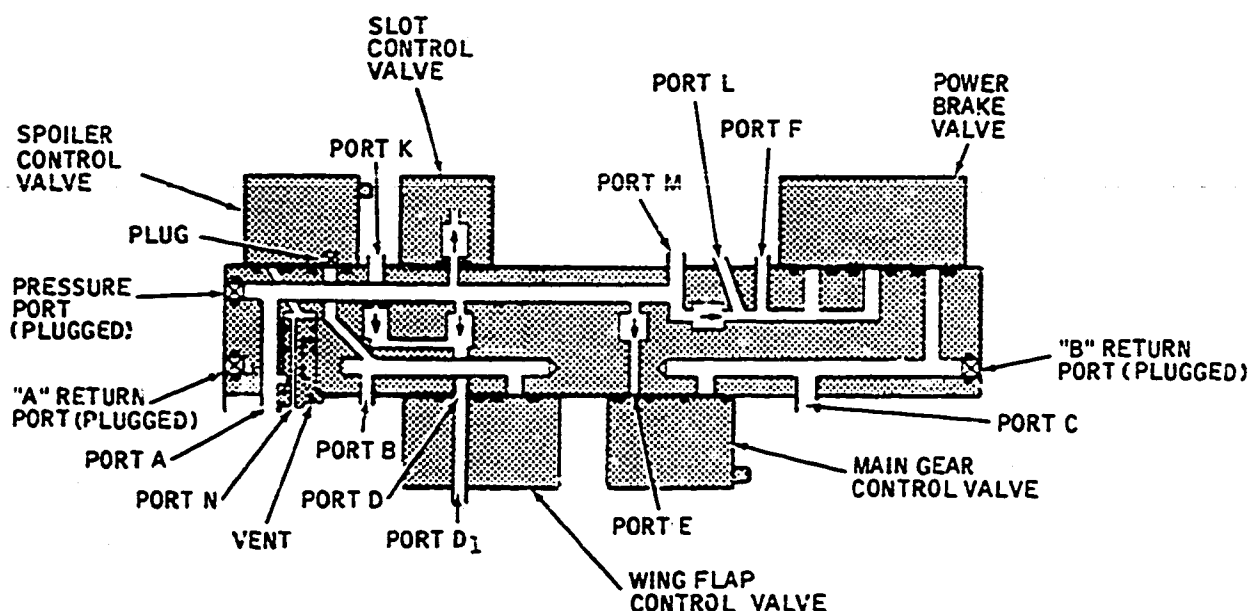

HA2-29A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

hydraulic pressure is ported through a check valve to the downstream side of the wing flap control valve check valve and into the wing flap control valve for alternate operation of the wing flaps.



- (5) The return passage from the wing flap control valve ports fluid to return port A. The brake control valve return passage ports fluid into return line B through a two-way restrictor. The main gear control valve down-line return fluid uses a separate port in the valve, bypasses the manifold, and returns the fluid directly to A return line to the reservoir. The upline in the main gear control valve uses the same return port, return port B, in the manifold as the brake control valve.

R. Deleted.

S. Hydraulic Power System Accumulator (See Figure 21.)

- (1) The hydraulic power system accumulator is a spherical, welded-steel, fluid and air bladder-separated container. The accumulator is installed in the pressure line of the hydraulic power system to provide a reserve supply of fluid under pneumatic pressure and to act as a shock absorber for system pressure surges.
- (2) The accumulator is located immediately aft of the left hydraulic power manifold and is accessible through the left main gear inboard door. It is mounted with two corner brackets and clamp blocks at the upper and lower port fittings.
- (3) The accumulator is installed in the pressure line of the hydraulic power system and is initially charged with 1000 psi of dry nitrogen. As the system pressure builds up, fluid is forced into the upper chamber of the accumulator, further compressing the trapped nitrogen to approximately 3000 psi. With full hydraulic system pressure, 3000 psi is indicated on the pressure gage adjacent to the filler valve. This reserve pressure smoothes out any momentary lag in the pump's response to the system's demand for greater fluid flows. The accumulator permits a gradual rise in system pressure, thereby absorbing the shock of pump surges and relieving the piping and system operating units of high-impact loads. When the engine-driven hydraulic pumps are not operating, the accumulator provides system pressure (at a diminishing rate) until a quantity equal to the stored volume in the accumulator has been used by the system.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

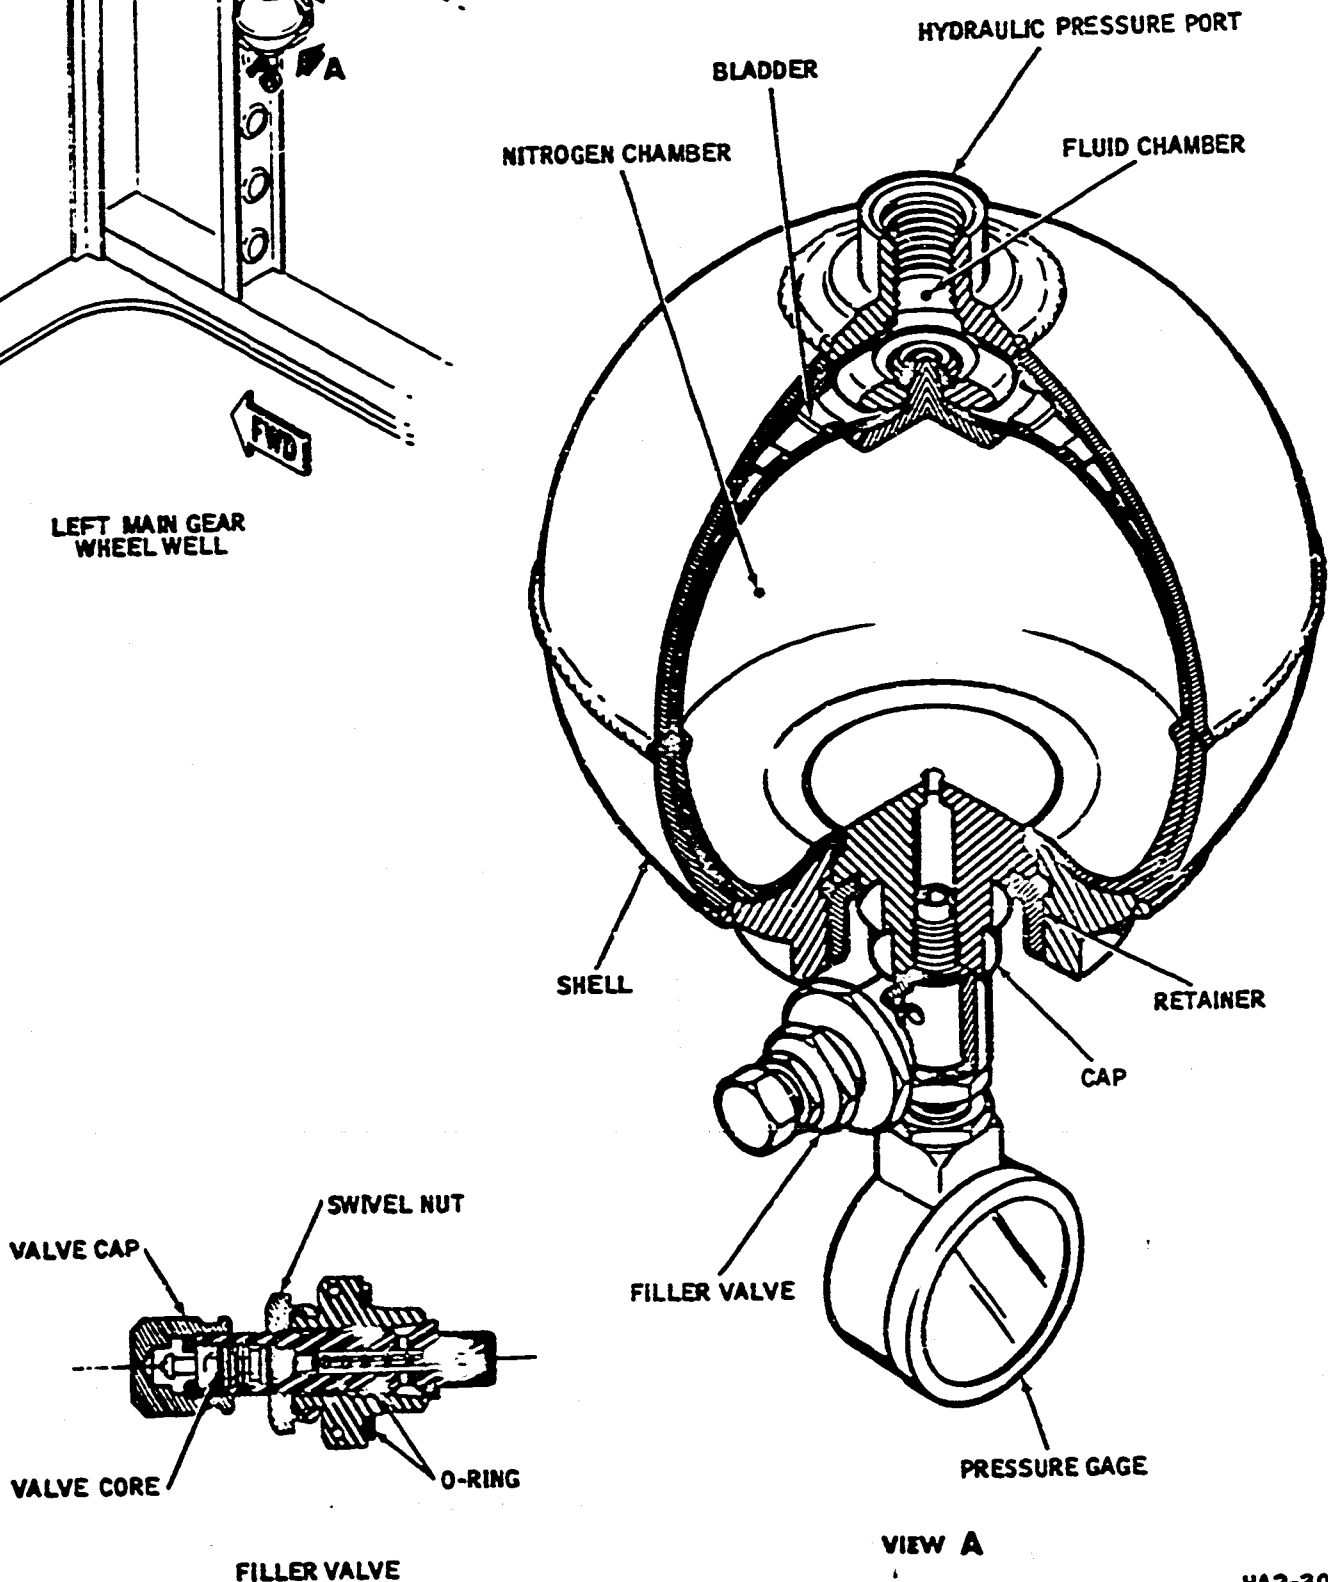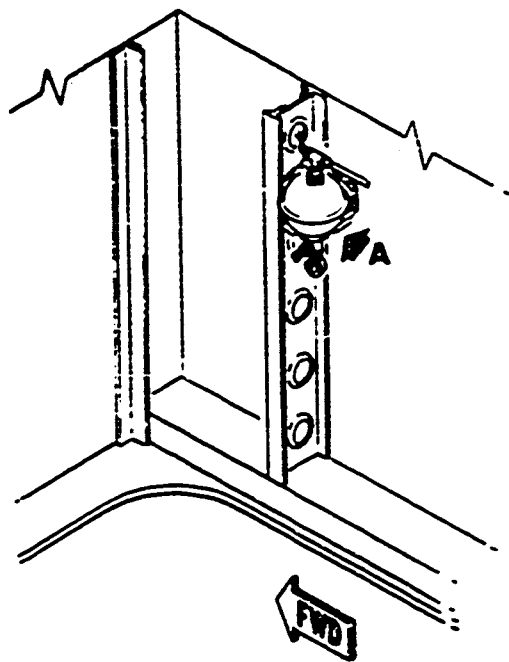



Hydraulic Power System Accumulator --  
 Cutaway View  
 Figure 21

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

T. Hydraulic System Priority Valve (See Figure 22.)

- (1) The priority valve is located in the left wheel well near the left hydraulic power manifold. The valve is installed in the hydraulic pressure line, between the two power manifolds, downstream of the pressure supply takeoff port for the flight controls. The priority valve is a balanced relief valve which reserves initial hydraulic pressure (up to 2150 psi maximum) for use in the flight control systems. The valve consists of a body with an inlet, an outlet, and a breather port. Internally, the valve contains a poppet valve plate, a poppet, a poppet valve load-spring, a piston, a piston load-spring, and a piston load-spring housing. The piston load-spring housing chamber is vented to ambient air through a breather hole which is covered by a butyl rubber band.
- (2) The priority valve shuts off hydraulic pressure to all subsystems downstream of the left power manifold, whenever the hydraulic pressure drops below 1700 psi minimum. At this point, the valve closes to reserve the hydraulic pressure for use in the flight control systems, preventing them from reverting to manual operation. When the hydraulic pressure rises to 2150 psi maximum, the priority valve opens and supplies pressure to the right manifold and all subsystems downstream of the priority valve.
- (3) Hydraulic fluid from the left power manifold enters the priority valve through the inlet port, passes through the poppet valve plate holes, and applies pressure against the piston. When sufficient hydraulic pressure is applied to the piston, the piston load-spring compresses, unseating the poppet and permitting full flow through the valve. When the hydraulic pressure decreases to less than the opposing force value of the piston load-spring, the load-spring forces the piston against the poppet and shuts off fluid flow through the valve.
- (4) The maximum flow available from both engine-driven hydraulic pumps is: 44 to 45 gpm at takeoff, climb, and cruise configurations; 26 to 28 gpm at descent, approach, and engine idle configurations.
- (5) Some of the larger hydraulic system demands are as follows:
  - (a) Gear retraction -- 17 gpm (10 - 12 seconds)
  - (b) Gear extension -- 14 gpm (10 - 12 seconds)
  - (c) Wing flaps down -- 8 gpm (10 seconds)
  - (d) Wing flaps up -- 3 gpm (22 seconds)
  - (e) Horizontal stabilizer -- 7 gpm
  - (f) Ailerons -- 17 gpm (25°/second)
  - (g) Rudder -- 3 gpm (25°/second)

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

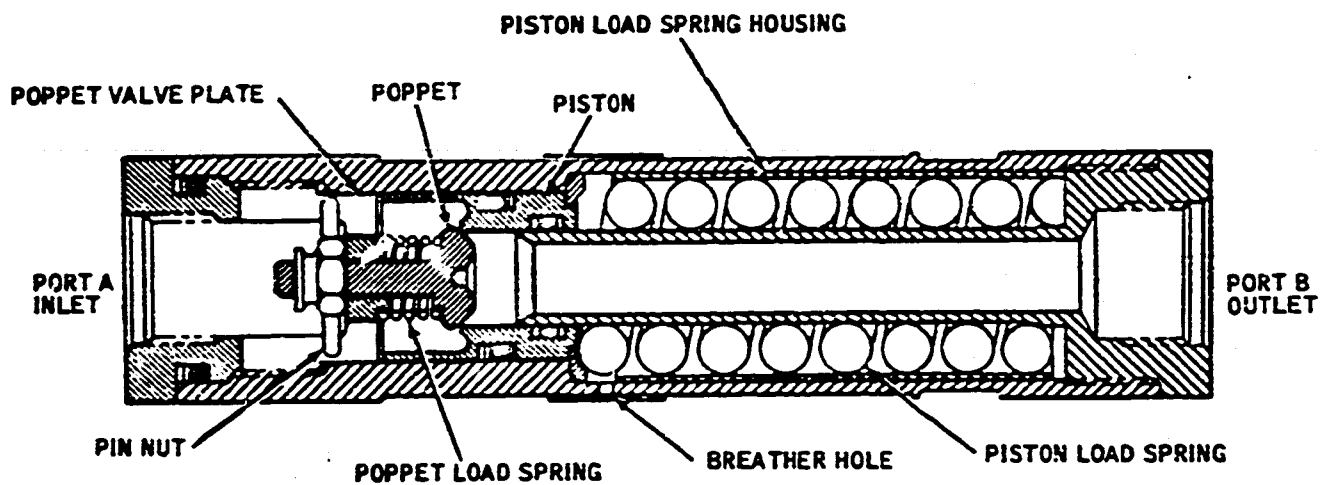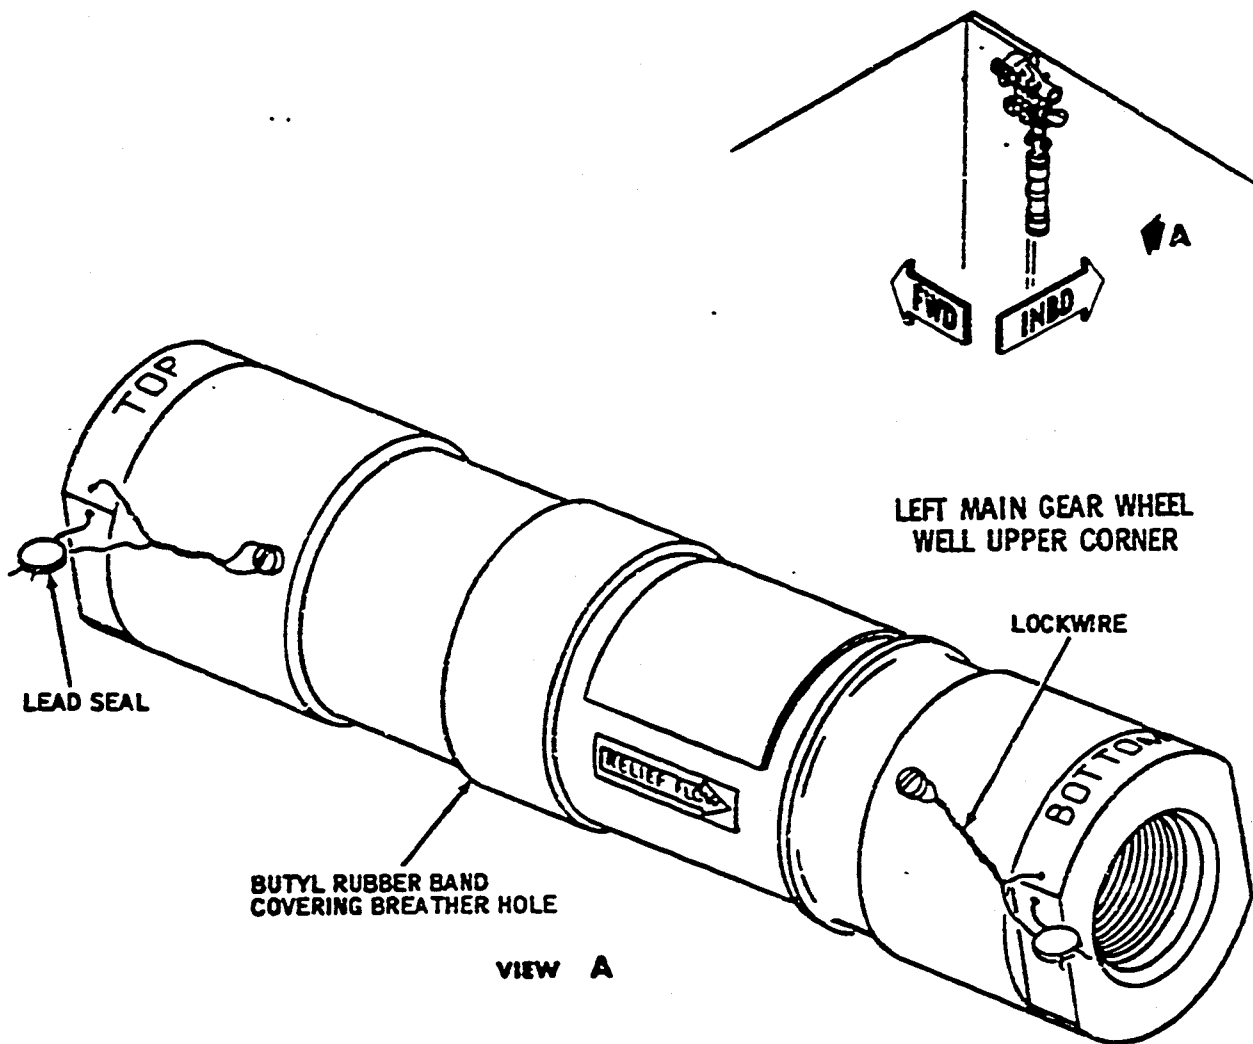

HA2-856

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) There are various combinations of hydraulic system operations which could cause momentary reversion of the flight controls to manual operation. To prevent reversion to manual operation, the priority valve assures that the left power manifold receives all the hydraulic fluid pressure under conditions of very large flow demands.

U. Manual Shutoff Valve (See Figure 23.)


- (1) Two manually operated shutoff valves are provided just downstream of the priority valve for isolation of non-priority subsystems during maintenance operations. One valve shuts off pressure to the following subsystems:
  - (a) Wing flaps
  - (b) Wing slots
  - (c) Main landing gear retraction
  - (d) Power wheel brakes
- (2) The other valve shuts off pressure to the nosegear retraction and nose-wheel steering subsystems.
- (3) The manual shutoff valves are located in the upper inboard forward corner of the left main gear wheel well. One valve is mounted on the left power manifold support, the other is mounted to a structure stiffener.
- (4) The valves consist of two position (on-off), rotary type, valves with identical and interchangeable inlet and outlet ports. A T shaped handle is provided on each valve for manual operation and lockwire holes are provided in the base of the handle for safetying the valve in the open position.

V. Hydraulic System Selector Control Lever

- (1) The hydraulic system selector control lever is a manually actuated, mechanical lever detented to three positions. The lever provides a mechanical means, through cables, for positioning the system selector valve and the auxiliary hydraulic pump supply selector valve. The hydraulic system selector control lever is located on the system engineer's control pedestal. The lever is attached to a drive sector, located on a common shaft with the other control pedestal sectors. The lever and sector are accessible through the cover plates on the system engineer's pedestal.



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

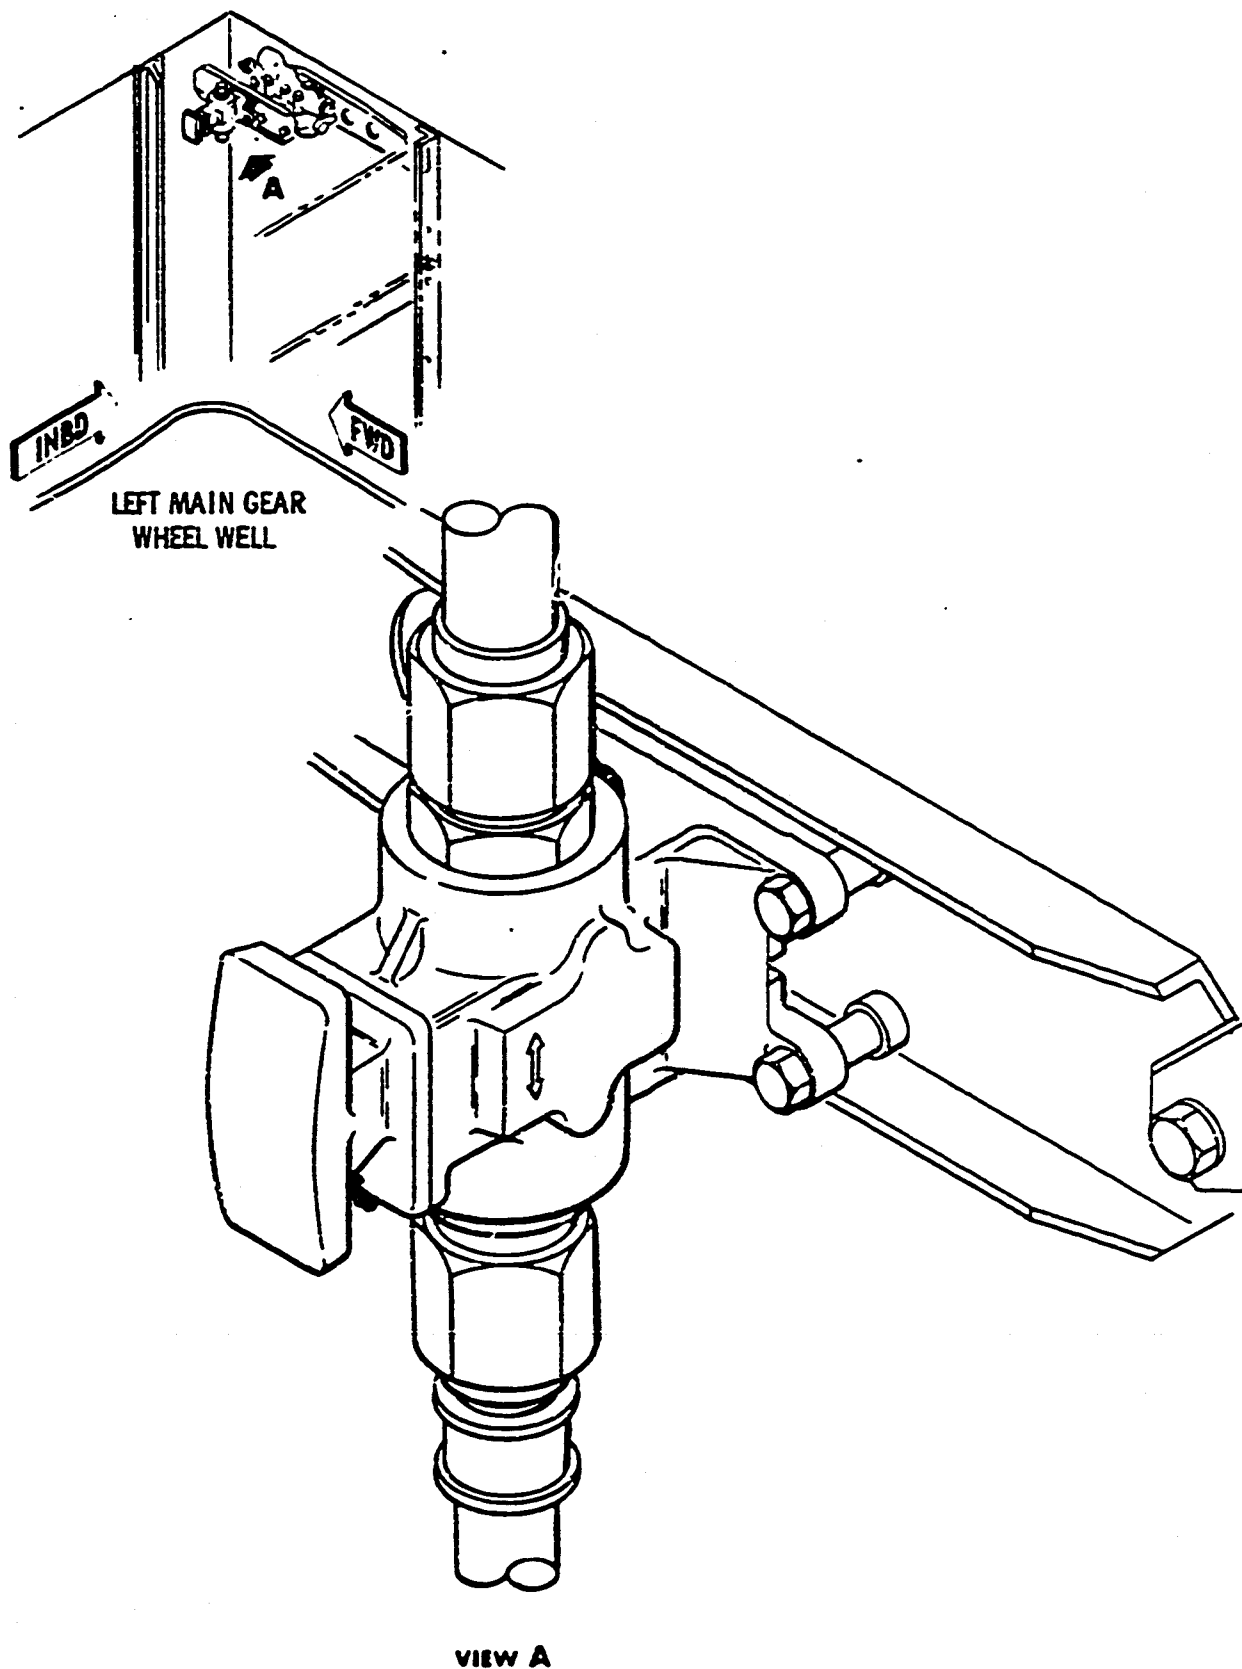

HA2-2937

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) To put the hydraulic power system in the bypass condition, the system selector control lever is lifted out of detent and moved to bypass/general system position. At the same time, the cable moves the sector and pushrod of the system selector valve to the No. 1 position. The pushrod positions the system selector valve to the No. 1 bypass position. At the same time, the cables from the system selector valve sector move the auxiliary pump supply selector valve sector to No. 1 (auxiliary) position. The auxiliary pump supply selector valve remains in the auxiliary supply position through the idle feature of the sector rigging. In this condition, the engine-driven pump pressure is ported to the reservoir and the auxiliary pump supplies pressure to the general system. In this position, the fluid is supplied to the auxiliary pump from the low standpipe in the hydraulic system reservoir. To put the system into the alternate condition, the selector control lever is lifted out of detent and moved to the general system/main gear down lock and flaps position. The cables move the system selector valve sector to the No. 3 (alternate) position. The system selector valve sector moves the cables rotating the auxiliary pump supply selector valve sector to the No. 3 (alternate) position. As the sector rotates, the end of the arm moves away from the idle position. This positions the valves to the alternate position, supplying fluid to the auxiliary pump from the auxiliary pump alternate reservoir. In this position, fluid from the auxiliary pump is ported to the wing flap control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported to the general system.

Oct 15/68

29-10-0  
CODE 19  
Page 43

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - DESCRIPTION AND OPERATION

1. General

A. Description (See Figures 1 and 2.)

- (1) The hydraulic power system receives fluid pressure from the engine-driven hydraulic pumps, one installed on each inboard engine. The electrically driven auxiliary pump is used to supplement the engine-driven pumps, or to independently supply the system with fluid pressure.
- (2) The hydraulic system reservoir, located in the left wing root, has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir is used for fluid; and 1/10 is used for foam space. A separate air chamber is installed in the reservoir system to provide for a greater fluid capacity in the main reservoir. A reservoir filler assembly is installed in the piping between the reservoir and the air chamber and has a vent line from the filler neck to the tee at the top of the reservoir sight gage. The reservoir is pressurized to 30 to 35 psi by bleed pressure from the engine-driven pumps through an air pressure regulator-aspirator.
- (3) The engine-driven pumps receive fluid from the pressurized main reservoir through respective engine hydraulic fire shutoff valves. The engine hydraulic fire shutoff valves are normally open and can be mechanically controlled from the flight compartment. The pumps supply fluid pressure through respective check valves to the dual filter and relief valve. Some of the fluid from the filter is ported through the regulator-aspirator to pressurize the reservoir. Most of the fluid is routed through a check valve to the system selector valve, and then to the left and right hydraulic power manifolds. The manifolds distribute the fluid pressure to the subsystems.
- (4) Hydraulic fluid is normally supplied to the auxiliary hydraulic pump from a low standpipe in the main reservoir. During alternate operation, the auxiliary hydraulic pump receives fluid supply from the auxiliary pump alternate reservoir, which is located just aft of the auxiliary pump. From these reservoirs, the fluid is ported through the auxiliary pump selector valve which is mechanically controlled from the flight compartment by the system selector control lever. When operating, the auxiliary hydraulic pump supplies fluid pressure to the subsystems through the system selector valve which is also controlled by the system selector control lever in the flight compartment. A filter and check valve are installed in the line from the auxiliary pump to the system selector valve.
- (5) An accumulator is installed in the pressure line to the subsystems to provide a reserve supply of fluid and to act as a surge damper for the system.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Engine-driven pump fluid pressure is routed through the system selector valve to the left power manifold, where it is distributed to some of the subsystems and through the priority valve to the right power manifold. Fluid pressure from the right power manifold is distributed to the remaining subsystems.
- (7) The priority valve is a spring-loaded, poppet-type, balanced relief valve installed in the line downstream of the left power manifold. The priority valve's function in the system is to prevent the flight control systems from reverting to manual operation during high demands on the hydraulic system.
- (8) A fluid pressure transmitter, located in the nosewheel well, senses the system pressure, which is indicated on the hydraulic system pressure indicator in the flight compartment.

B. Normal Operation

- (1) Fluid is supplied to the hydraulic system from the pressurized hydraulic system reservoir. For operation of the hydraulic system under normal conditions, 8.1 US gallons (6.7 Imperial gallons; 30.6 liters) of hydraulic fluid are available to the engine-driven hydraulic pumps, and 12.9 US gallons (10.7 Imperial gallons; 48.8 liters) are available to the auxiliary hydraulic pump. Supply lines from the main reservoir carry fluid to each inboard pylon through normally open engine hydraulic fire shutoff valves to the engine-driven hydraulic pumps. Fluid is supplied to the auxiliary hydraulic pump from the main reservoir through a low standpipe at the base of the reservoir. Fluid is carried from the reservoir through the auxiliary pump selector valve to the auxiliary hydraulic pump.
- (2) The engine-driven hydraulic pump supply full system pressure (3000 psi nominal) at any given engine speed, from idle to full power. The output flow of the pump is varied by sensing pressure from the outlet side of the pump. Each engine-driven pump contains a solenoid-operated bypass valve which, when energized, bypasses the pressure control regulator of the pump and ports fluid to the pump yoke control piston which feathers the pump. When the pump is feathered, flow rate is reduced to almost zero (1.0 gpm) and to a pressure of approximately 300 psi. Half of this flow maintains pump lubrication and cooling through internal leakage. This leakage is returned, through a check valve, the engine-driven pump case drain line filter, and another check valve to the case drain return port of the reservoir. The pressure fluid from each pump passes through a check valve to the dual filter and relief valve.
- (3) The fluid enters the dual filter and relief valve through the relief valve chamber. The fluid is passed through the filter element, through a manifold, and through a common outlet port. Fluid from the outlet port is routed through a check valve to the system selector valve. If back pressure in the system builds up to approximately 3300 psi, the relief valves in the dual filter and relief valve open and port fluid

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

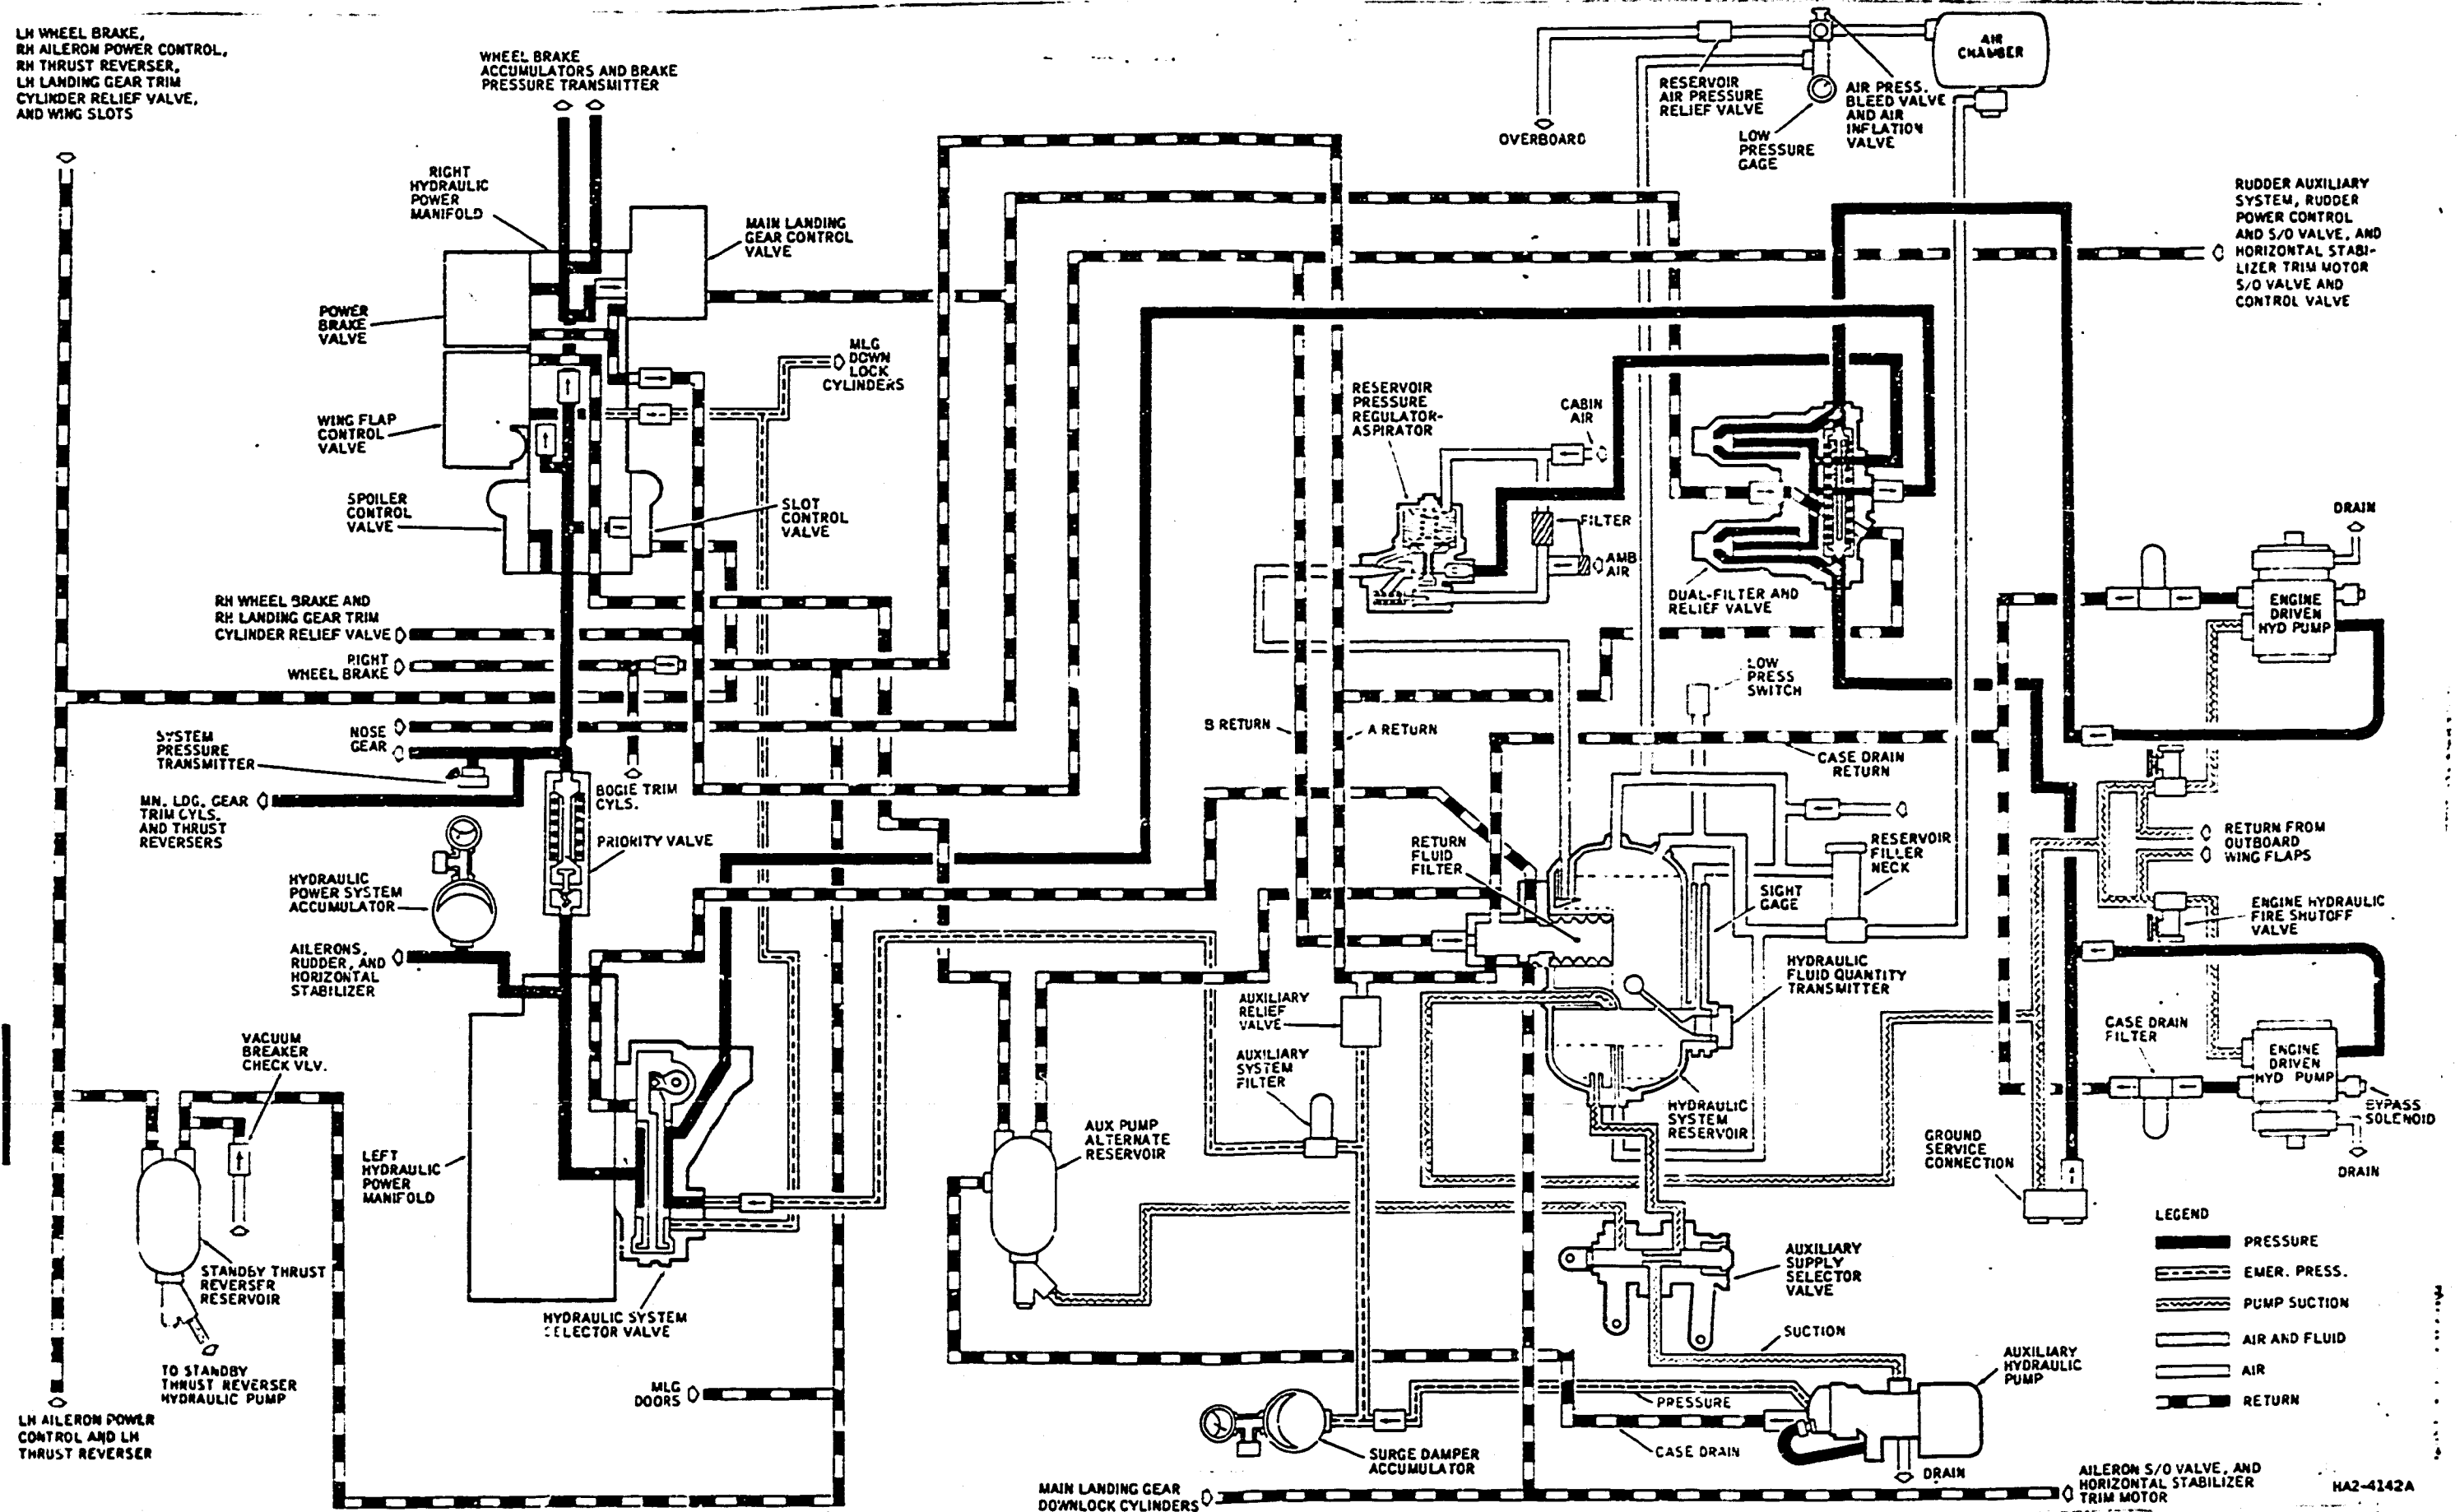

Hydraulic Power System -- Schematic Diagram (Airplanes  
 JA8031 - JA8037, JA8040, JA8044, JA8051 and Subsequent)  
 Figure 1 (Sheet 1)


29-10-0  
 CODE 20  
 Page 3

May 1/71

Printed in U.S.A.

HA2-4142A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

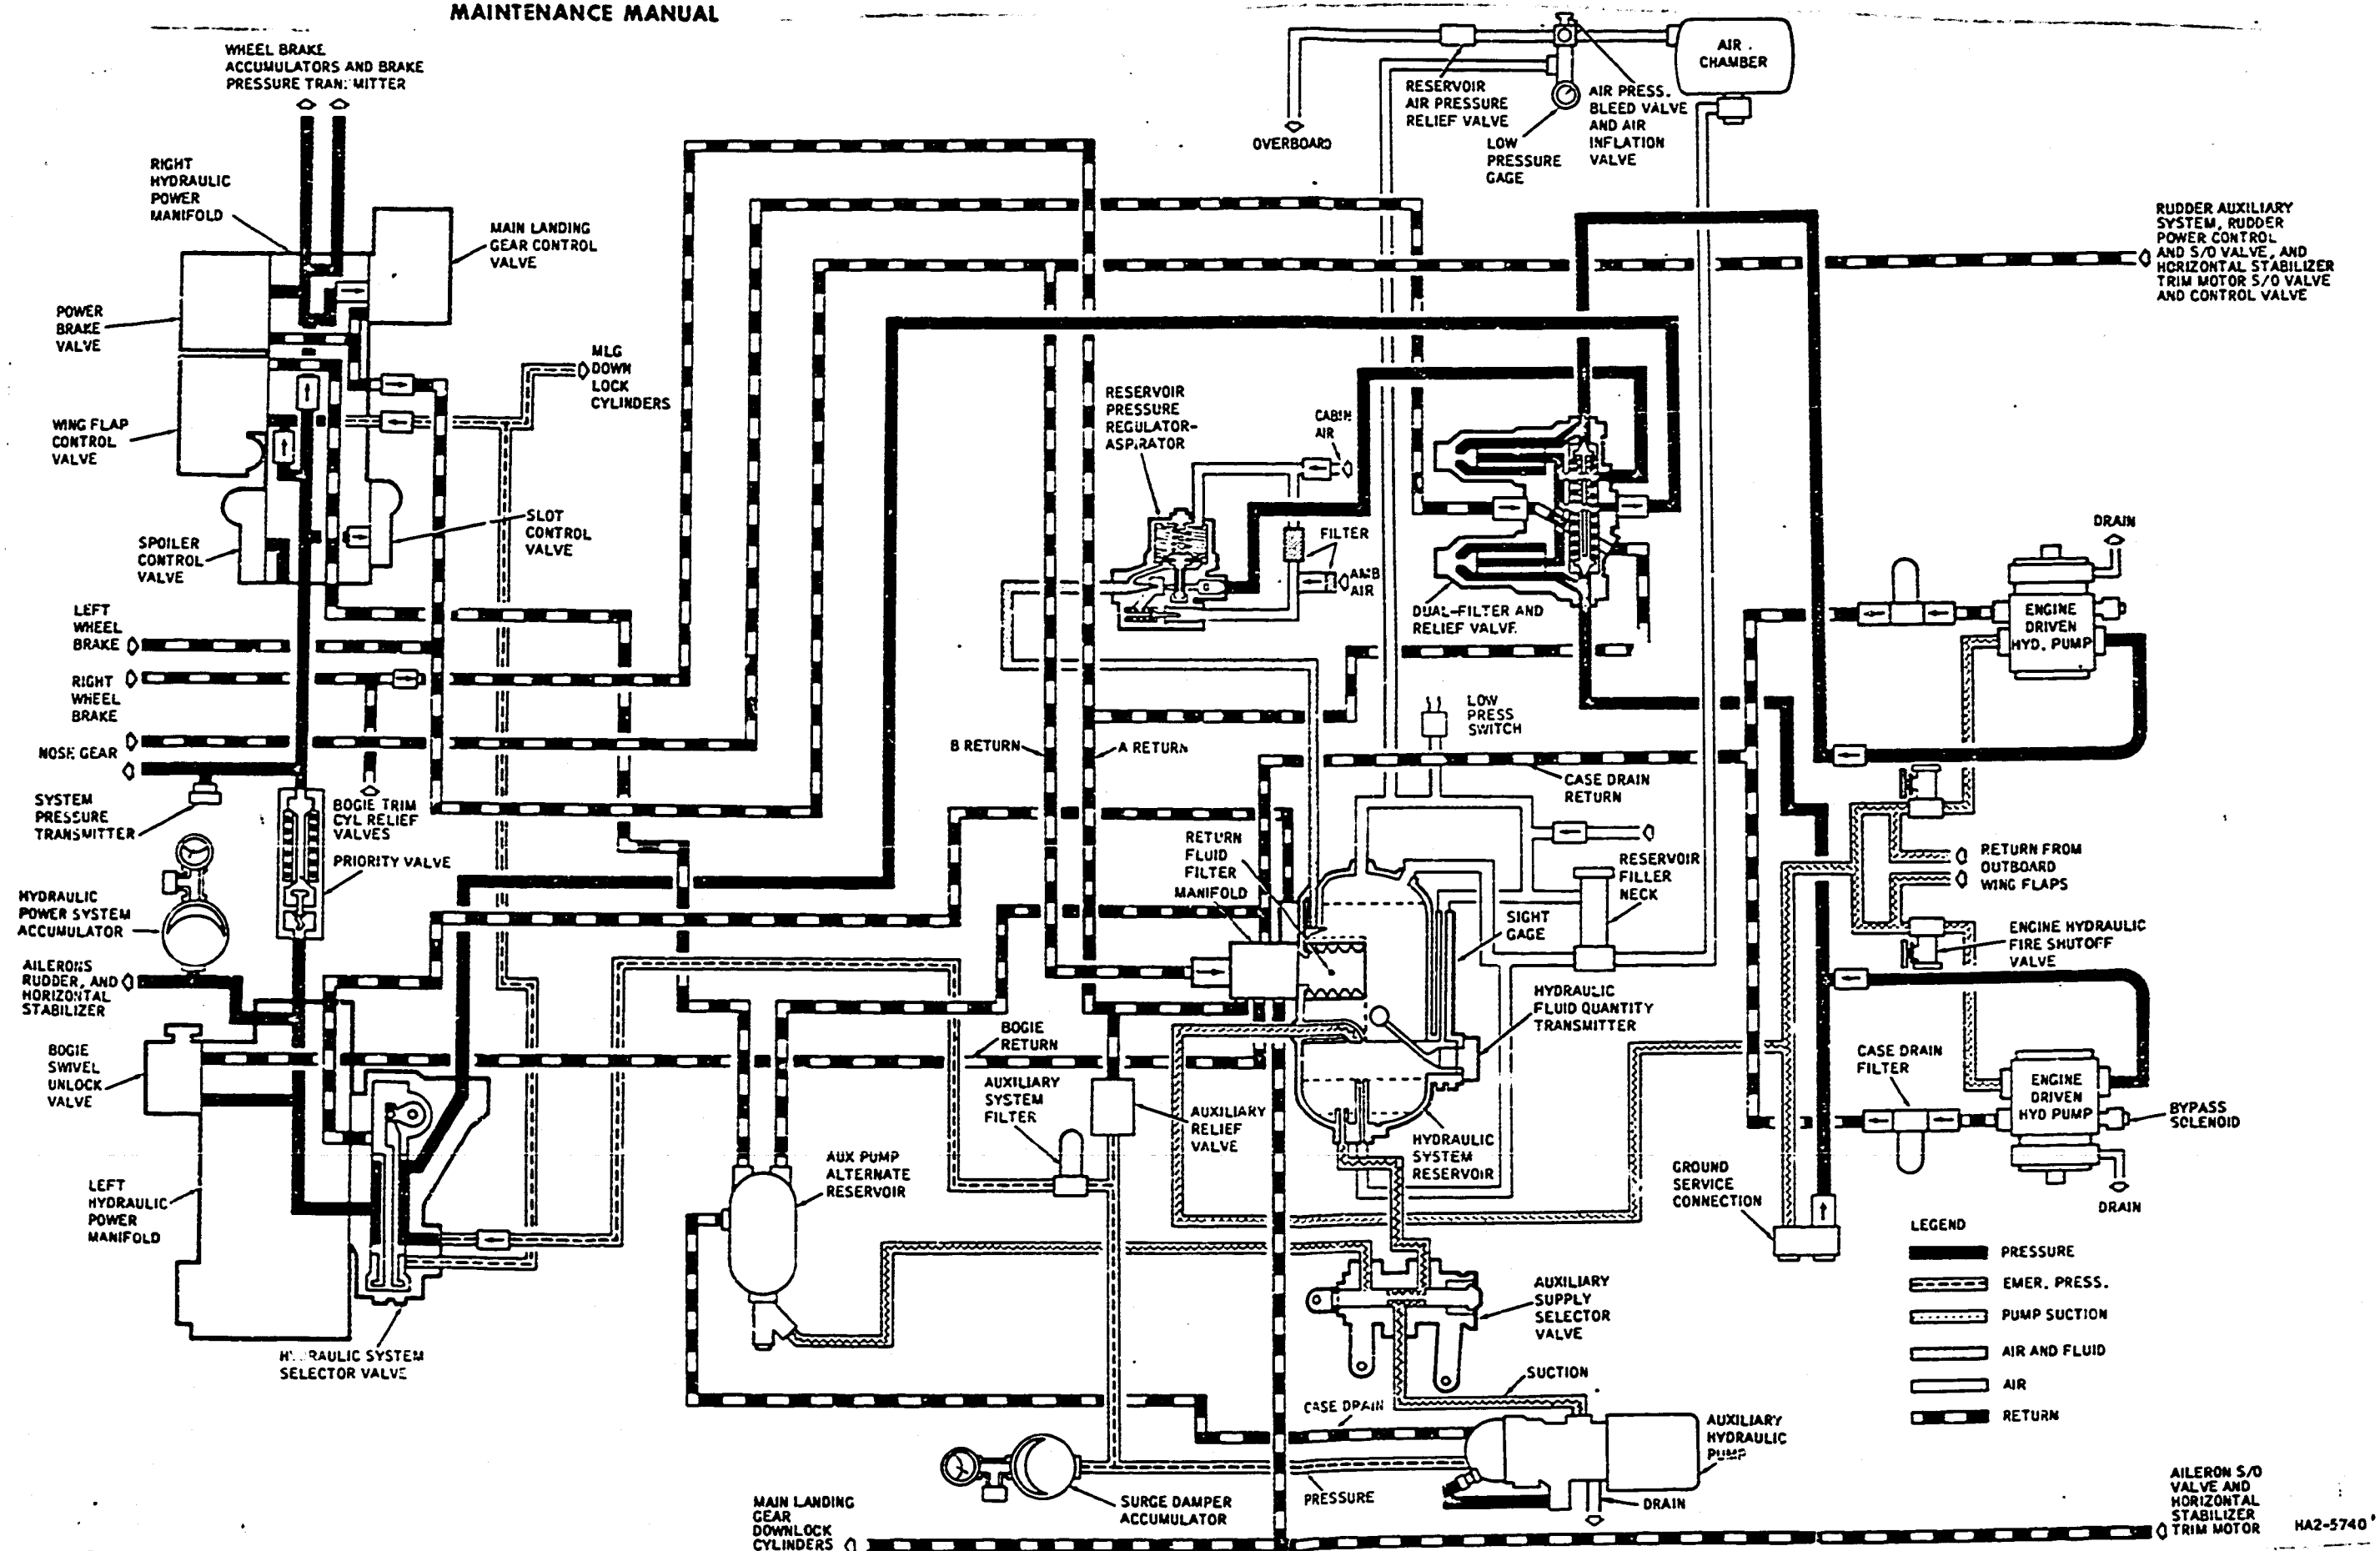

Hydraulic Power System -- Schematic Diagram (Airplanes  
 JA8038, JA8039, JA8041-JA8043, JA8045-JA8048)  
 Figure 1 (Sheet 2)


29-10-0  
 CODE 20  
 Page 4A

May 1/71

Printed in U.S.A.

HA2-5740

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

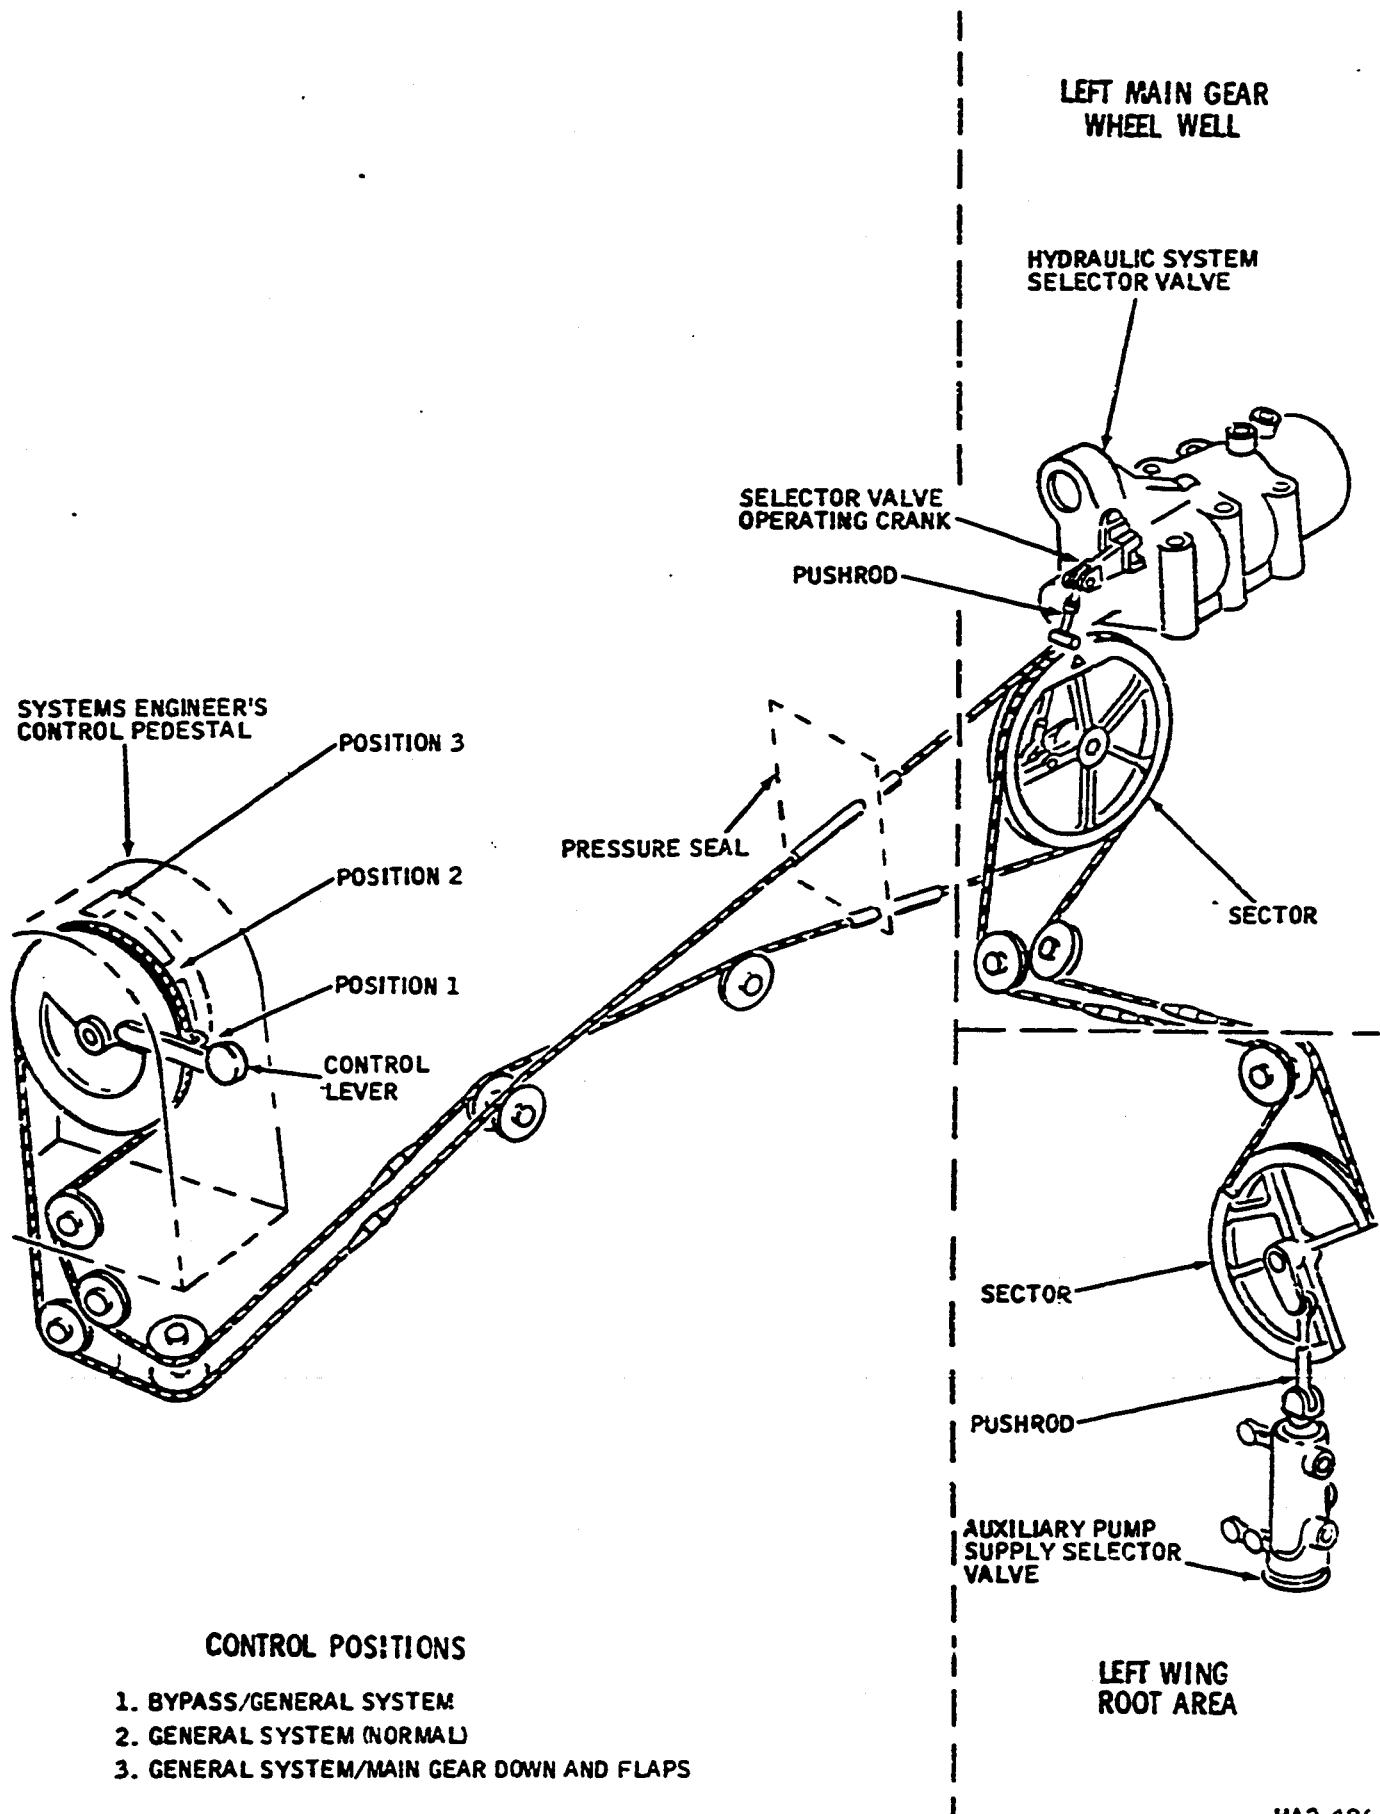

**CONTROL POSITIONS**

1. BYPASS/GENERAL SYSTEM
2. GENERAL SYSTEM (NORMAL)
3. GENERAL SYSTEM/MAIN GEAR DOWN AND FLAPS

Hydraulic System Selector and Auxiliary Pump Supply  
 Selector Valves -- Mechanical Control Schematic  
 Figure 2

HA2-486

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 20  
 Page 5

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

back to the reservoir via A return port. The relief valve poppet closes again when system pressure drops to approximately 3000 psi.

- (4) The aspirator receives filtered fluid (bleed pressure at nominal 3000 psi) from the dual filter and relief valve. The aspirator operates on the jet pump principle. Hydraulic fluid is atomized and mixed with air within the unit by a nozzle and a venturi. The mixture is used to pressurize the reservoir and reservoir air chamber. The regulator diaphragm maintains a pressure range of 30 to 35 psi in the reservoir and air chamber. If there is a regulator malfunction, the aspirator stalls when the outlet pressure reaches a maximum of 40 psi. A reservoir relief valve in the reservoir vent line relieves thermal expansion pressure above 45 (+5, -0) psi.
- (5) Pump pressure fluid enters the system selector valve through the system pressure inlet port. When the pump selector control lever is in the general system (normal) position, fluid is ported to the pressure passages of the left power manifold. The fluid pressure in the left power manifold is ported through the priority valve to the nose gear and the right power manifold and directly to the following valves:
  - (a) Aileron power shutoff
  - (b) Rudder power shutoff
  - (c) Longitudinal trim hydraulic motor shutoff
- (6) The right power manifold distributes fluid pressure to the brake accumulators, the pressure transmitter, and the following control valves:
  - (a) Wing flap
  - (b) Slot
  - (c) Main gear
  - (d) Power brake
- (7) The return fluid from the wing flap control valve is ported through the right power manifold and into the auxiliary hydraulic pump alternate reservoir. Return fluid from the outboard wing flaps is piped into the suction lines for each engine-driven hydraulic pump. Return fluid from the slot control valve is ported into the A return line to the main reservoir. The power brake and main gear control valve gear up return fluid is ported through a restrictor check valve into the B return line to the reservoir. The main gear control valve gear down return pressure bypasses the right manifold and returns to the reservoir through the A return line. All return fluid entering the reservoir is filtered through the return ports filter located within the reservoir.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

C. Bypass Operation

- (1) The output of the engine-driven hydraulic pumps is bypassed by moving the system selector control lever out of the general system (normal) position to the bypass/general system position.
- (2) The system selector valve in the bypass position ports engine-driven pump pressure from the dual filter and relief valve directly to the return passage of the left power manifold. From the manifold, the fluid is ported directly to a tee in the wing flap return port of the hydraulic system reservoir. In the bypass condition, the auxiliary hydraulic pump receives fluid from the hydraulic system reservoir, pressurizes it to system pressure, and ports it to the left and right power manifolds for distribution to the subsystems.

D. Alternate Operation

- (1) When both engine-driven hydraulic pumps and the auxiliary hydraulic pump are rendered inoperative due to the loss of the normal supply of fluid, the hydraulic power system can be rigged for alternate operation. This is accomplished by placing the system selector control lever in the general system/main gear downlock and flaps position. When the system selector control lever is in this position, the auxiliary hydraulic pump supply selector valve is positioned to supply fluid from the auxiliary pump alternate reservoir to the auxiliary pump.
- (2) Fluid is supplied to the auxiliary pump from the outlet port of the auxiliary pump supply selector valve. Output pressure is ported through the auxiliary system filter and check valve to the auxiliary pressure inlet port of the system selector valve.
- (3) In the general system/main gear downlock and flaps position, auxiliary pump pressure bypasses the manifold pressure passages and is ported from the alternate outlet port of the system selector valve. Fluid from this port flows directly to a port on the right power manifold, through an internal check valve in the manifold, to the wing flap control valve. A line, teed into the alternate supply line, runs directly to a shuttle valve in the main gear downlock cylinder line. When auxiliary pressure is applied, the shuttle valve shifts, porting fluid into the downlock bungee cylinder's downlock side.

E. Mechanical Control

- (1) The hydraulic power mechanical control system consists of the hydraulic system selector control lever cable drum, the system selector valve sector, the system selector valve, the auxiliary hydraulic pump supply selector valve sector, and the auxiliary hydraulic pump supply selector valve.
- (2) The control lever located on the system engineer's control pedestal is used to position the system selector valve and, in turn, the auxiliary hydraulic pump supply selector valve.

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 20  
Page 7

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (3) The control lever is spring loaded into general system (normal) position, and is connected to the control lever cable drum. Two cables run from the drum, under the cabin floor, aft through the pressure bulkhead at the rear wing spar, and into the left wheel well to the system selector valve sector. A pushrod connects the sector to the positioning lever of the system selector valve.
- (4) A second set of cables is routed from the system selector valve sector into the left wing root to the auxiliary hydraulic pump supply selector valve sector. When the system selector valve is in either bypass or normal, the auxiliary hydraulic pump supply selector valve sector is arranged so that the pushrod idles between the two positions. This allows the valve to remain in the auxiliary position. When the sector is moved to the alternate position, the pushrod is pulled by the sector to reposition the valve to the alternate position.
- (5) The control lever is normally in the general system (normal) position. To move the system selector valve to the bypass position, the control lever is moved to the bypass/general system position. When the system selector valve is moved to the bypass position, the auxiliary hydraulic pump supply selector valve sector is moved to a new position. Due to the idle feature on the auxiliary sector, the valve remains in the auxiliary position. With the valve in this position, fluid is supplied to the auxiliary pump through the low standpipe in the hydraulic system reservoir. In this condition, engine-driven pump pressure is ported to the reservoir and the auxiliary pump pressure is ported to the general system.
- (6) To put the system in alternate operation, the control is moved to the general system/main gear downlock and flaps position. This moves the system selector valve to the alternate position, and simultaneously moves the auxiliary hydraulic pump supply selector valve to the alternate position. Fluid is supplied to the auxiliary pump from the auxiliary hydraulic pump alternate reservoir. Fluid pressure from the auxiliary pump is ported to the flap system control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported from the system selector valve to the general system.

## 2. System Components

### A. Hydraulic System Reservoir (See Figures 3 and 4.)

- (1) The hydraulic system reservoir is installed on the aft side of the wing rear spar in the left wing root and is accessible through the left wing root access door. The hydraulic system reservoir serves as the main source of hydraulic fluid for the engine-driven hydraulic pumps and the normal supply for the auxiliary hydraulic pump. The reservoir is cylindrical in shape and contains a filter, baffle, and a screen cover encasing the filter. The filter prevents foreign particles from contaminating the fluid supply. Mountings are provided on the exterior surface of the reservoir for return line ports, aspirator port,

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

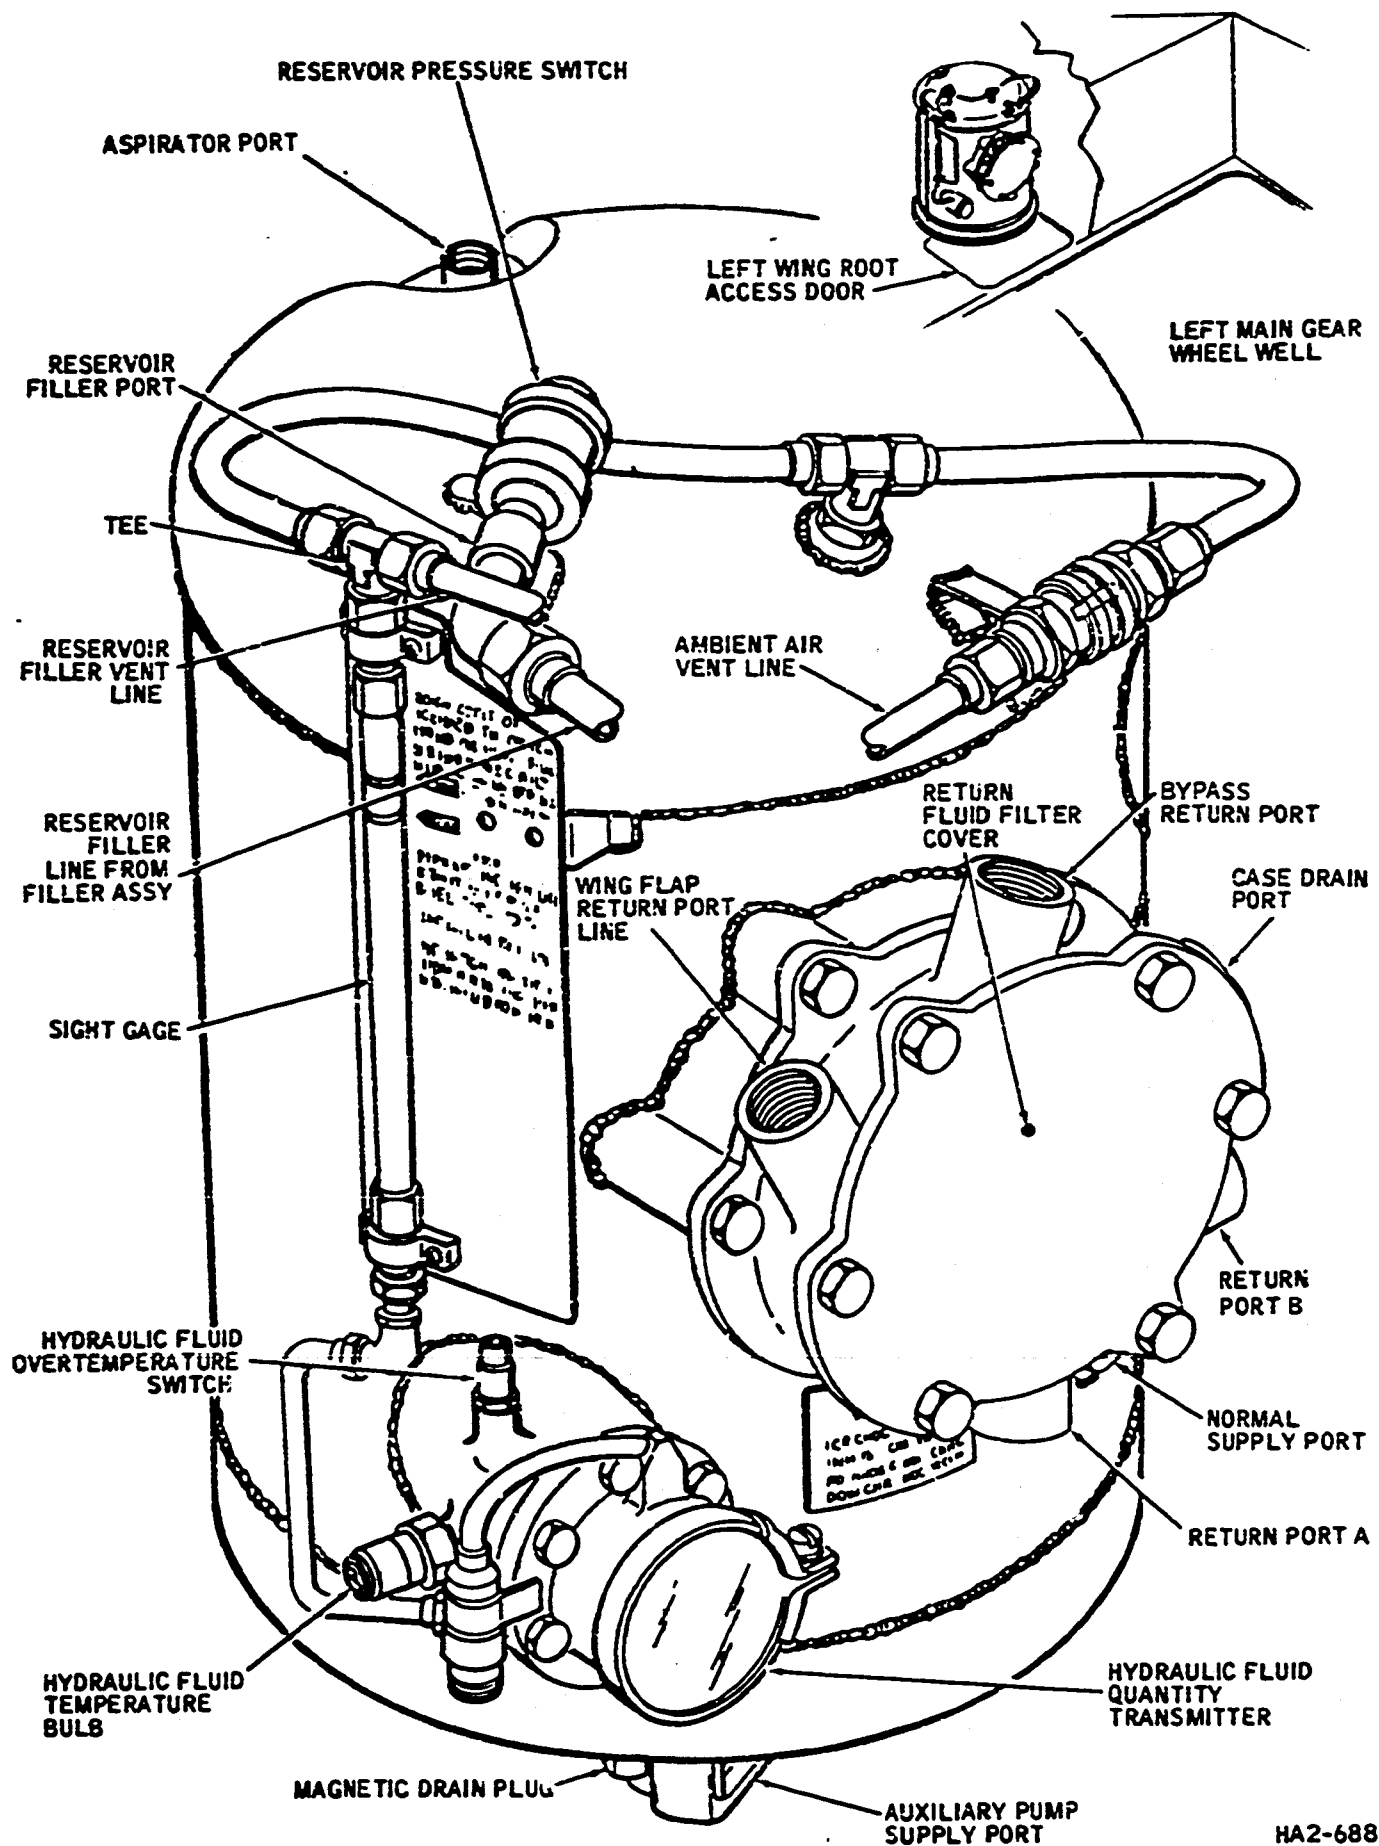

Hydraulic System Reservoir -- External View  
 Figure 3


HA2-688

29-10-0  
 CODE 20  
 Page 9

Jun 15/67

Printed in U S A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

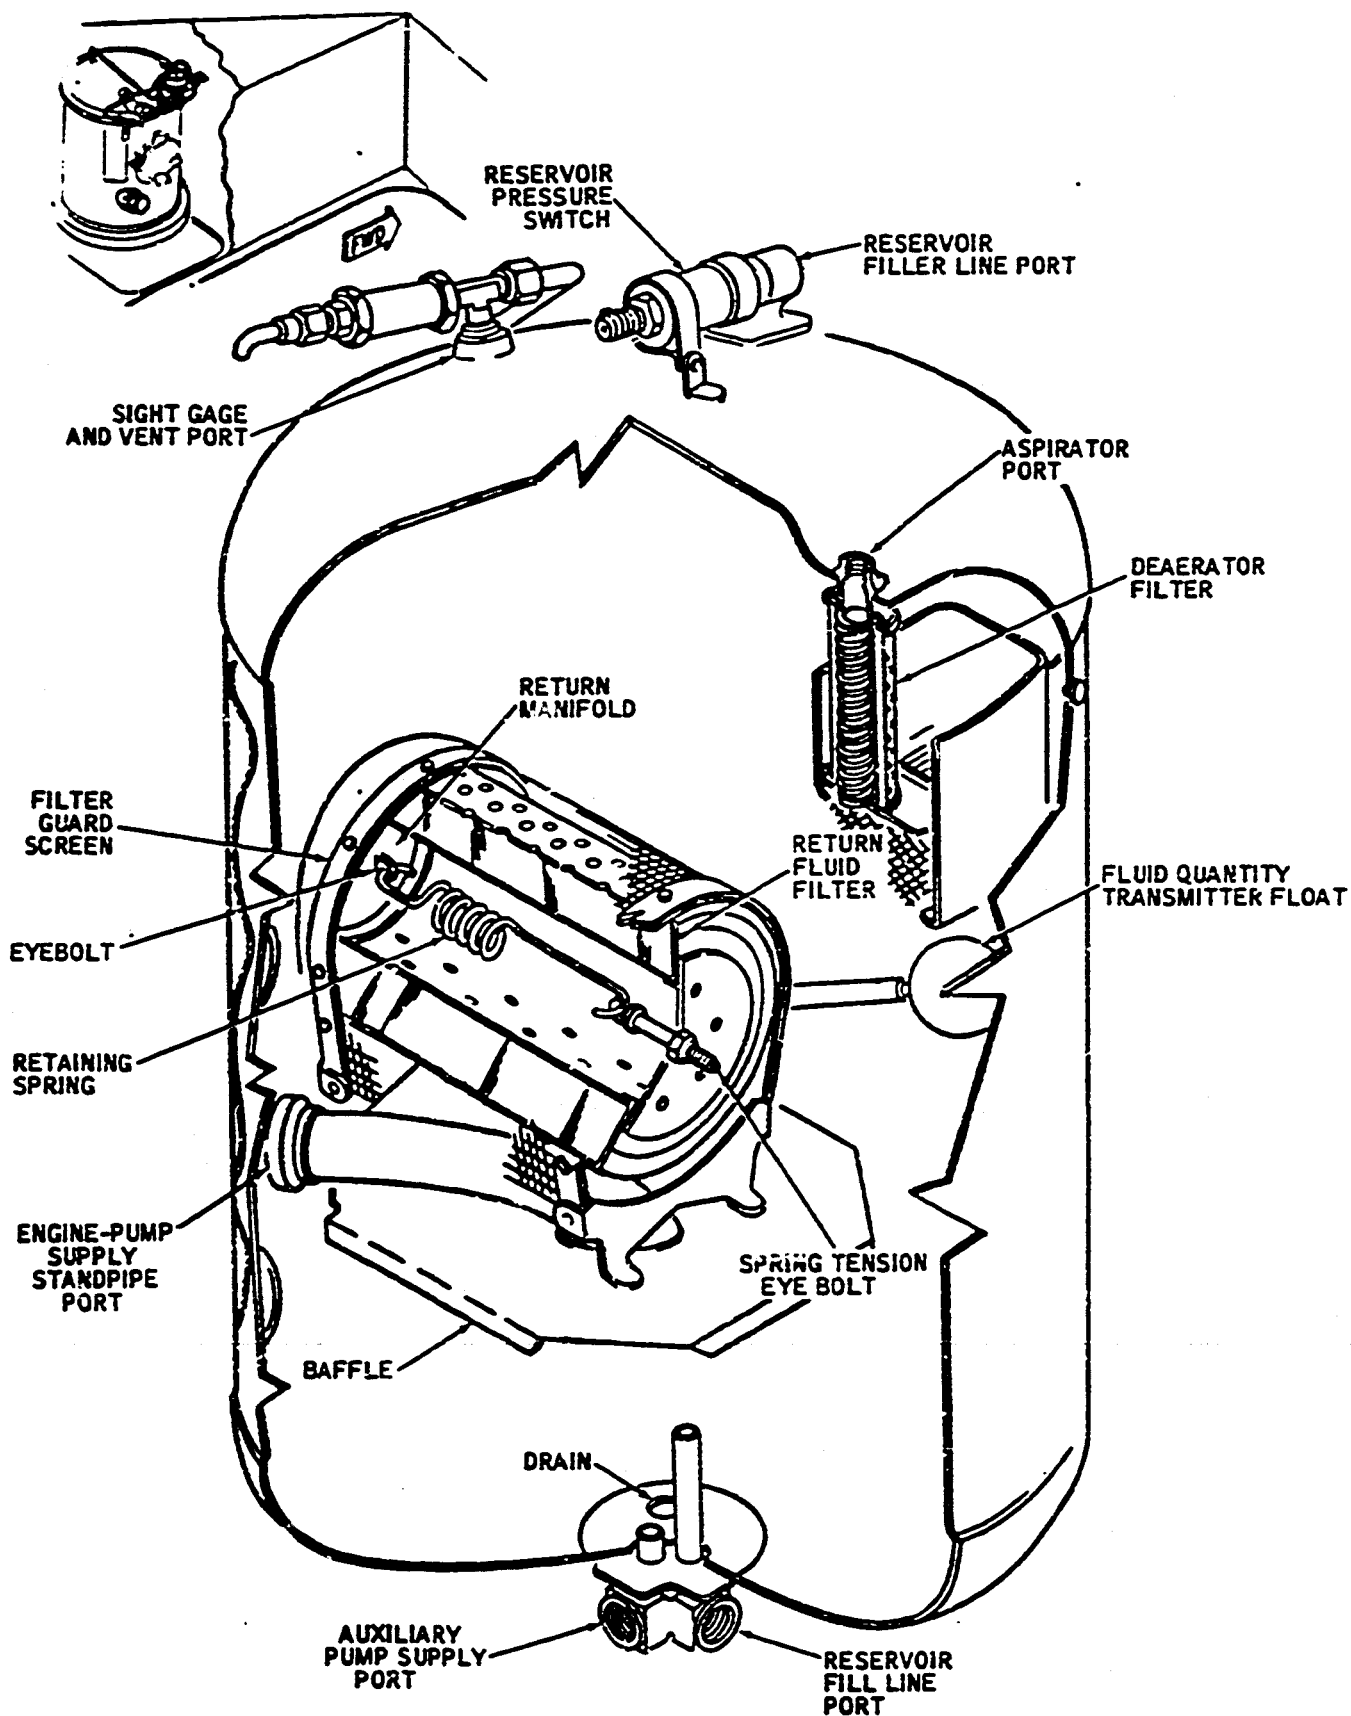

Hydraulic System Reservoir -- Cutaway View  
 Figure 4

HA2-689

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

electrical sensing units, sight gage, instruction placards, magnetic drain plug, and system supply ports.

- (2) The reservoir is pressurized with air from the regulator-aspirator to a range of 30 to 35 psi and has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir volume is used for fluid and 1/10 is used for foam space.
- (3) The aspirator port through which the reservoir is pressurized is located in the recess on top of the reservoir. An aspirator-deaerator filter is supported in the reservoir by a screen and support box assembly which is mounted to the reservoir wall by two bolts.
- (4) The mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The return ports manifold is an open-centered ring, flanged at both sides and provided with five fluid ports around its circumference; return port A is located at the bottom, return port B is located at the lower right side, the wing flap return port is located at the upper left side, and the system selector valve bypass port is located at the top. One flange of the manifold is mounted with six bolts to the mounting flange on the reservoir. The return fluid filter cover fits into the open side of the manifold, and is attached to the outer manifold flange with six bolts to form a fluid-tight cover for both the manifold and the filter.
- (5) The return fluid filter is installed in the reservoir, behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the return fluid filter cover holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to the engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
- (6) A flanged adapter for the fluid quantity transmitter is welded to the reservoir below and to the left of the return ports manifold. The adapter is provided with two small port bosses for the hydraulic fluid temperature bulb and the hydraulic fluid overtemperature switch. The lower end of the sight gage connects to a third port in the adapter, while the top of the sight gage tees into a port at the top of the reservoir. An instruction plate is mounted behind the sight gage and the vacuum breaker check valve tees into the port at the top of the reservoir that is used by the sight gage.

**B. Hydraulic Reservoir Return Fluid Filter (See Figure 4.)**

- (1) The reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply. The filter is located behind the return ports manifold, and is spring loaded to act as its own relief valve. Access to the filter is by removing the return fluid filter cover from the return ports manifold

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 20  
Page 11

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


by removal of six bolts. The filter is attached by the retaining spring to the cover and is withdrawn from the reservoir when the cover is removed.

- (2) Externally, the filter consists of two perforated concentric tubes. The area between the tubes is closed by metal end caps which are bonded to the two tubes. A resilient rubber gasket is bonded to each of the caps. Each gasket must be smooth and flat for proper sealing of the filter. The gaskets act as a static seal and a relief valve seat.
- (3) Internally, the filter has a 3-micron, resin-impregnated, convoluted paper-type filter element. The area of the filter element is approximately 1960 square inches. The filter is held in place by a retaining spring. One end of the spring is attached to an eyebolt located inside the return port's manifold cover. The spring passes through the center chamber of the filter and is connected to another eyebolt. This eyebolt is secured to a large washer and plate by means of a self-locking nut. The washer seats on the rubber gasket which is bonded to the filter. The fluid enters the center chamber of the filter and passes through the inner tube of the filter to the filter element by means of perforation holes. Foreign matter is filtered out by the filter element, and the fluid leaves the element through perforation holes in the outer tube. When the element becomes saturated with foreign matter, the filter acts as its own relief valve and unseats at 20 to 25 psi above normal return pressure foreign matter, the filter acts as its own relief valve which allows fluid to bypass the filter and enter the reservoir.

C. Hydraulic Reservoir Air Pressure Regulator-Aspirator (See Figure 5.)

- (1) The reservoir air pressure regulator-aspirator is a jet-type air pump, regulated by a pressure-sensitive shutoff valve. The unit pressurizes the hydraulic reservoir with air to the operating pressure range of 30 to 35 psi. The regulator-aspirator is located on the top inboard side of the reservoir and is mounted on the reservoir retainer ring. Access to regulator-aspirator is through the left wing root access door.
- (2) The regulator-aspirator assembly consists of a main aspirator body and a regulator housing. The main aspirator body has two inlet ports and one outlet port. The ports are permanently identified inlet, outlet, and air inlet. The plug for an air check valve is located near the outlet plug. A chemically treated paper filter is installed near the aspirator body air inlet port in the air line from the pressurized cabin area. A metal screen filter is installed on the check valve which tees into the aspirator body air inlet port.
- (3) The reservoir air pressure regulator-aspirator operates basically with a jet pump action which is regulator controlled. Fluid enters the assembly through the fluid inlet port where it is filtered and then ported through the valve assembly of the regulator. During normal operation, when air pressure at the outlet port is under 30 psi, the valve is open, porting fluid to the nozzle. The orifice in the nozzle

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

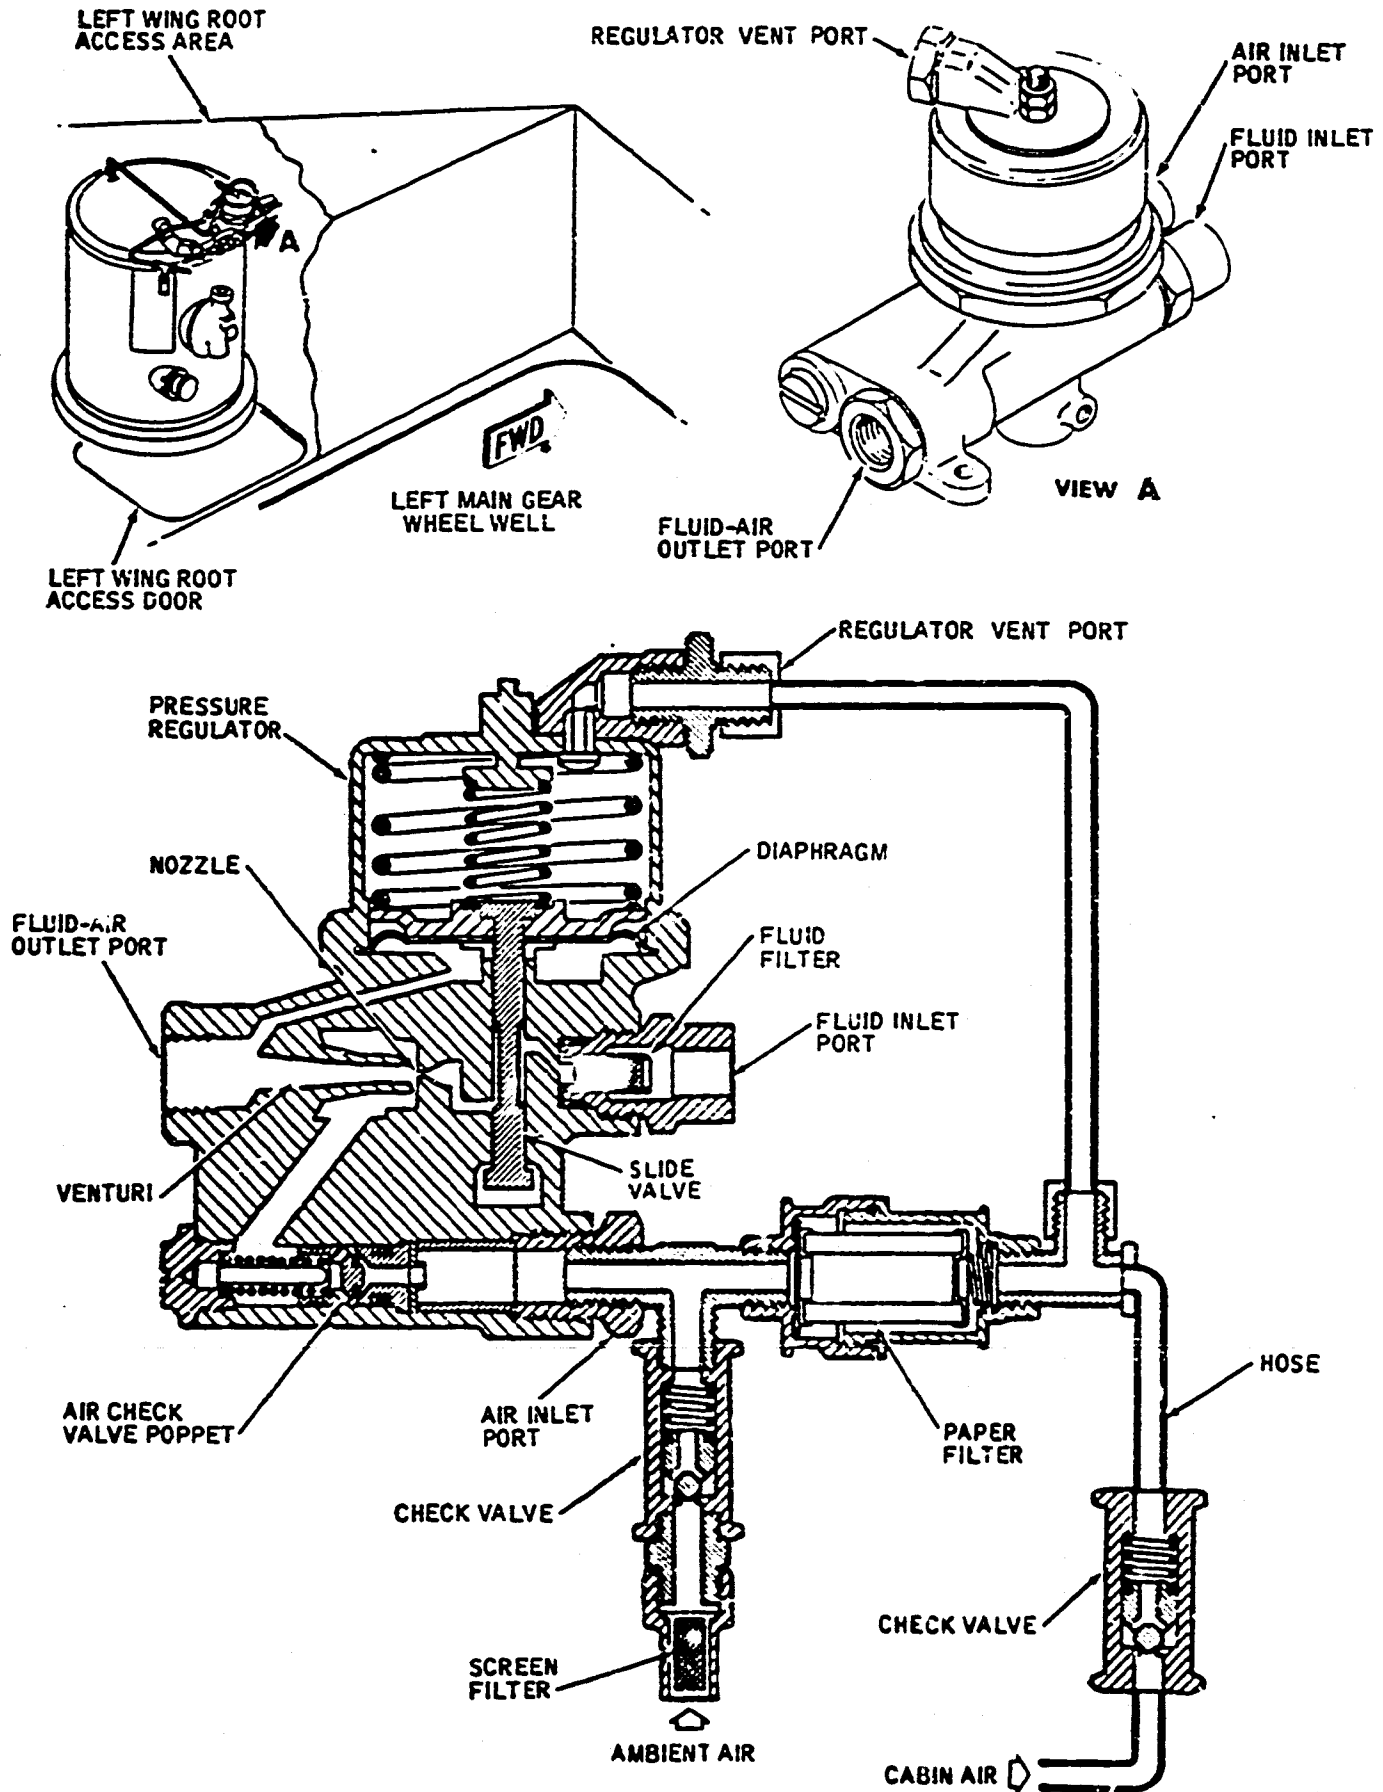

Reservoir Air Pressure Regulator-Aspirator -- Schematic  
 Figure 5

HA2-25

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 20  
 Page 13

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

sprays the fluid through the venturi of the outlet port, creating a vacuum in the chamber around the venturi. When the vacuum becomes great enough to create a pressure differential of approximately 1 psi, ambient air opens the air check valve. The air is ported to the chamber around the venturi and is siphoned, with the fluid, through the outlet port.

- (4) Hydraulic fluid inlet pressure at the engine-driven hydraulic pumps is improved at high altitude operation by supplying pressurized filtered cabin air to the reservoir regulator-aspirator instead of ambient outside air. Part of the inlet air is diverted by a tee fitting to the regulator chamber to provide a more positive regulating force on the diaphragm than would be obtained with low ambient pressures. The chemically treated paper filter, installed in the regulator-aspirator air supply line from the cabin, removes smoke tars and impurities from the pressurized cabin air. The steel mesh screen filter, installed on the check valve which tees into the regulator-aspirator air inlet port downstream of the paper filter, removes dust, dirt, and foreign particles from the ambient air and serves as a standby to supply filtered air in event the paper filter is clogged.
- (5) As pressure in the reservoir builds up, back pressure is bled from the outlet port to the diaphragm chamber. The reaction on the diaphragm begins to move the slide valve to cut off the fluid flow. At 30 to 35 psi of back pressure, the diaphragm completely closes the slide valve, cutting off the flow of fluid. If there is a regulator malfunction, the aspirator stalls when outlet pressure reaches a maximum of 40 psi.
- (6) The aspirator is capable of pressurizing the reservoir to 30 to 35 psi in approximately 4 minutes at altitudes from sea level to 15,000 feet, when fluid is ported through the nozzle at 0.5 gpm at 3000 psi.

D. Regulator-Aspirator Air Filters (See Figure 6.)


- (1) The regulator-aspirator air filters remove ambient and cabin air impurities from the air which is used to pressurize the main hydraulic system reservoir. The filtering system is composed of two filters. One of which is a paper element filter, installed directly in the cabin air supply line near the regulator-aspirator. The other filter is a fine mesh, screen-type filter, installed on a check valve and positioned at right angles to the regulator-aspirator air inlet port. The screen filter, in addition to providing an immediate supply of ambient air during ground operations, serves as a standby air inlet to preclude air starvation of the regulator-aspirator in the event the paper element filter becomes clogged.

E. Hydraulic Reservoir Relief Valve (See Figure 7.)


- (1) The reservoir relief valve and the air pressure aspirator-regulator keep the reservoir pressurized to normal operating range. The valve relieves excess air pressure which may build up in the reservoir through thermal expansion in the system. The valve has an inlet port and an outlet port



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

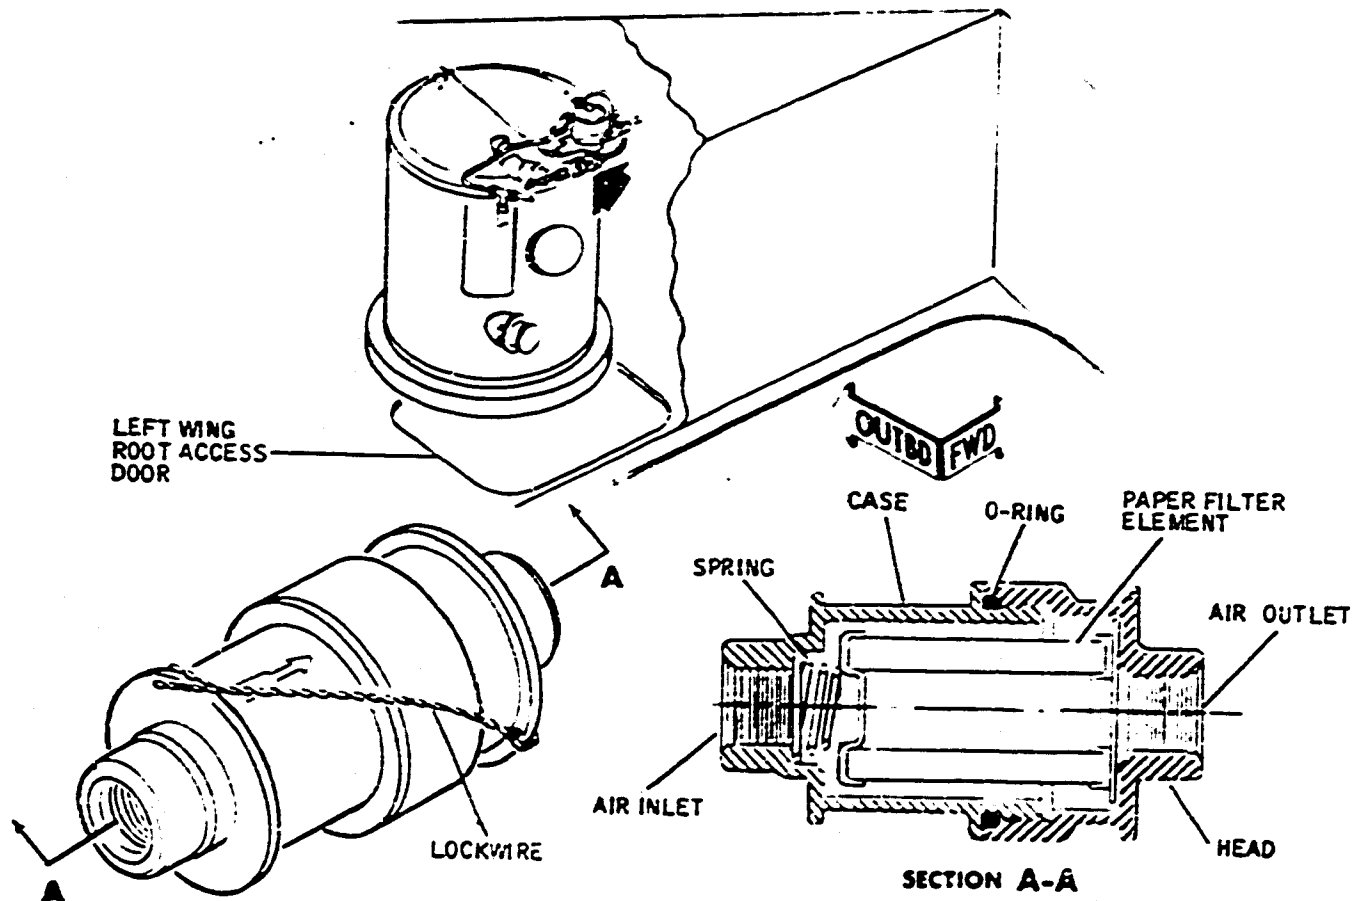

PAPER ELEMENT FILTER

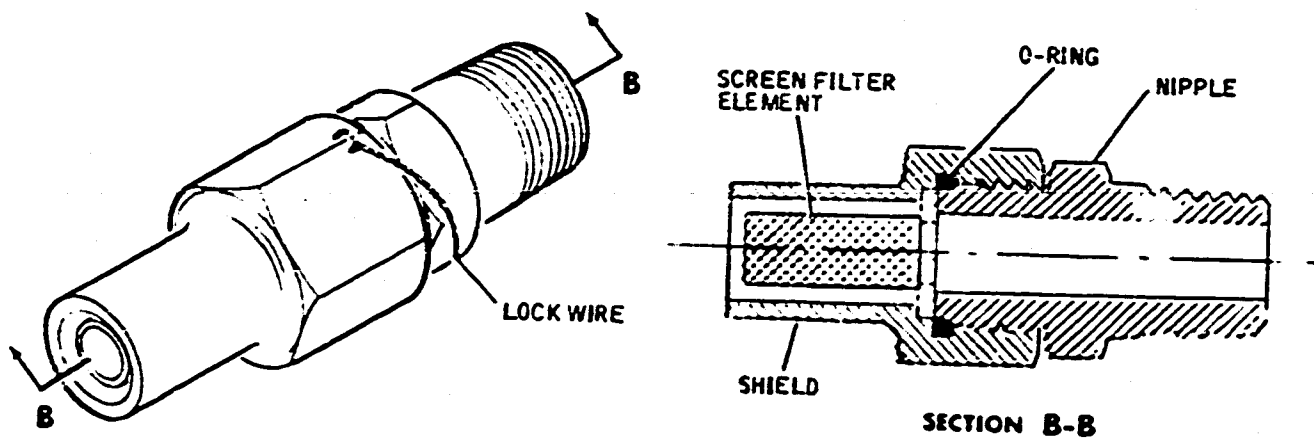

SCREEN FILTER

Regulator-Aspirator Air Filters -- Cutaway View  
 Figure 6


HA2-35

Jun 15/67

Printed in U.S.A.

29-10-0  
 CODE 20  
 Page 15

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

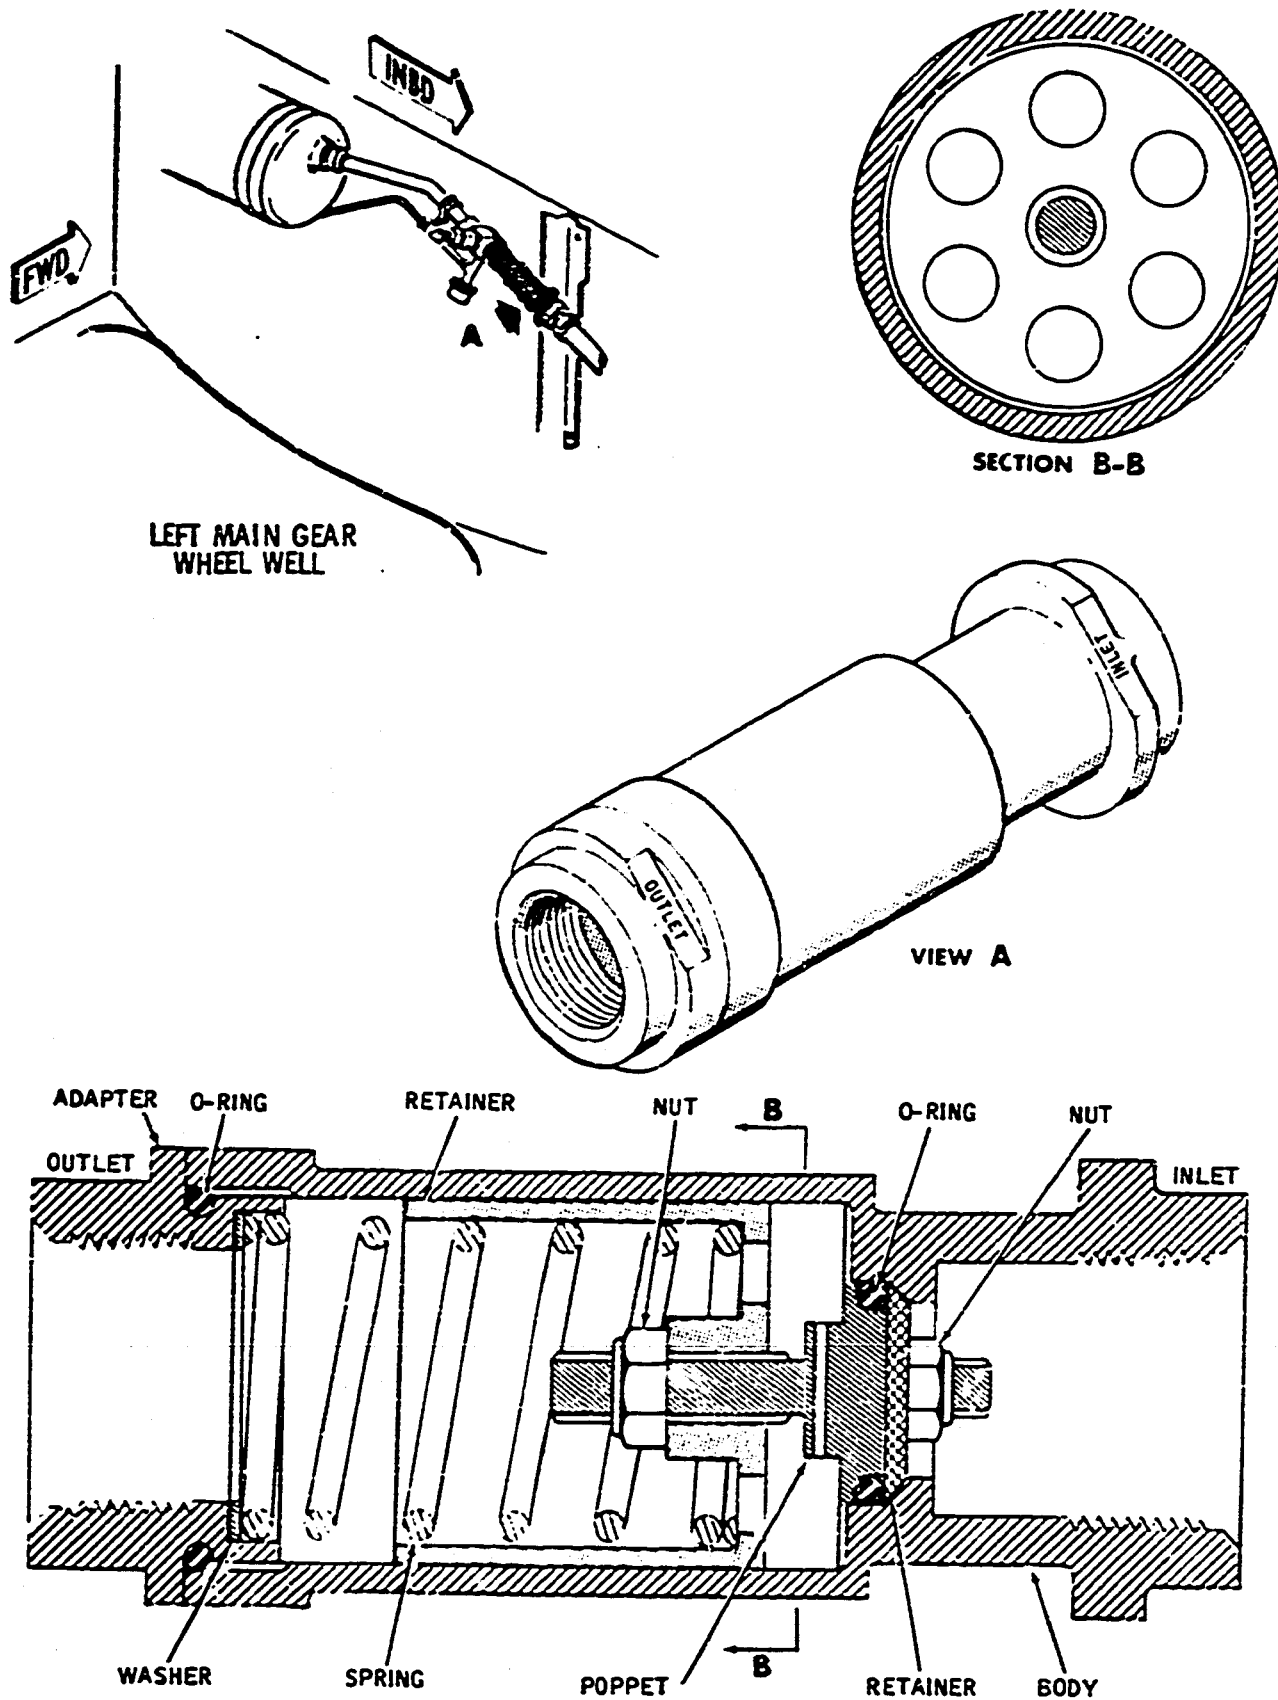

Hydraulic Reservoir Relief Valve  
 Figure 7

HA2-17

29-10-0  
 CODE 20  
 Page 16

Printed in U.S.A.

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

and consists, internally, of an inlet port seat and a spring-loaded poppet.

- (2) The relief valve is installed in the overboard vent line downstream of the hydraulic reservoir air bleed valve. In the event that excess pressure builds up in the reservoir, the poppet will start to relieve at 45 (+5, -0) psi. Full flow of 10 gpm is attained at 80 psi maximum. The poppet reseats at 90 percent of the opening pressure.

F. Hydraulic Reservoir Air Bleed Valve (See Figure 8.)

- (1) The hydraulic reservoir air bleed valve and pressure gage are located on the aft side of the rear spar in the left main gear wheel well, inboard of the hydraulic reservoir air chamber. The bleed valve and gage are installed in the overboard vent line, between the reservoir air chamber and the reservoir relief valve.
- (2) The bleed valve is used to relieve the reservoir air pressure prior to disconnecting lines or components in the hydraulic system. The pressure gage provides a ready indication of the hydraulic reservoir air pressure and is used in conjunction with the bleed valve to indicate the air pressure status.
- (3) The air inflation valve is installed on the same fitting as the bleed valve and pressure gage. The air inflation valve is used to manually charge the reservoir with air or dry nitrogen.


G. Hydraulic Reservoir Vacuum Breaker Check Valve (See Figure 9.)

- (1) The hydraulic reservoir vacuum breaker check valve is installed on the regulator-aspirator mounting bracket, and connects to the tee fitting at the top of the reservoir. The valve is vented to ambient air. The purpose of this valve is to maintain atmospheric pressure in the reservoir, allowing hydraulic fluid to flow to the auxiliary hydraulic pump in the event of a failure of the reservoir pressurization system. The failure, or breakdown, of the pressurization system could cause a fluid starvation at the auxiliary hydraulic pump because of vacuum buildup in the reservoir.

H. Hydraulic Reservoir Air Chamber

- (1) The hydraulic reservoir air chamber is a small, cylindrical tank with a capacity of 700 cubic inches. It has two ports, an inlet port at the bottom of the chamber and an outlet port in one end of the chamber. The inlet port mounting boss is fitted with a drain plug. The air chamber is installed on the aft side of the rear spar in the left main gear wheel well, inboard and above the hydraulic reservoir filler assembly. Access to the air chamber is through the left main gear inboard door.
- (2) The air chamber provides for greater fluid capacity in the hydraulic reservoir by providing air and foam space for the reservoir in a


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

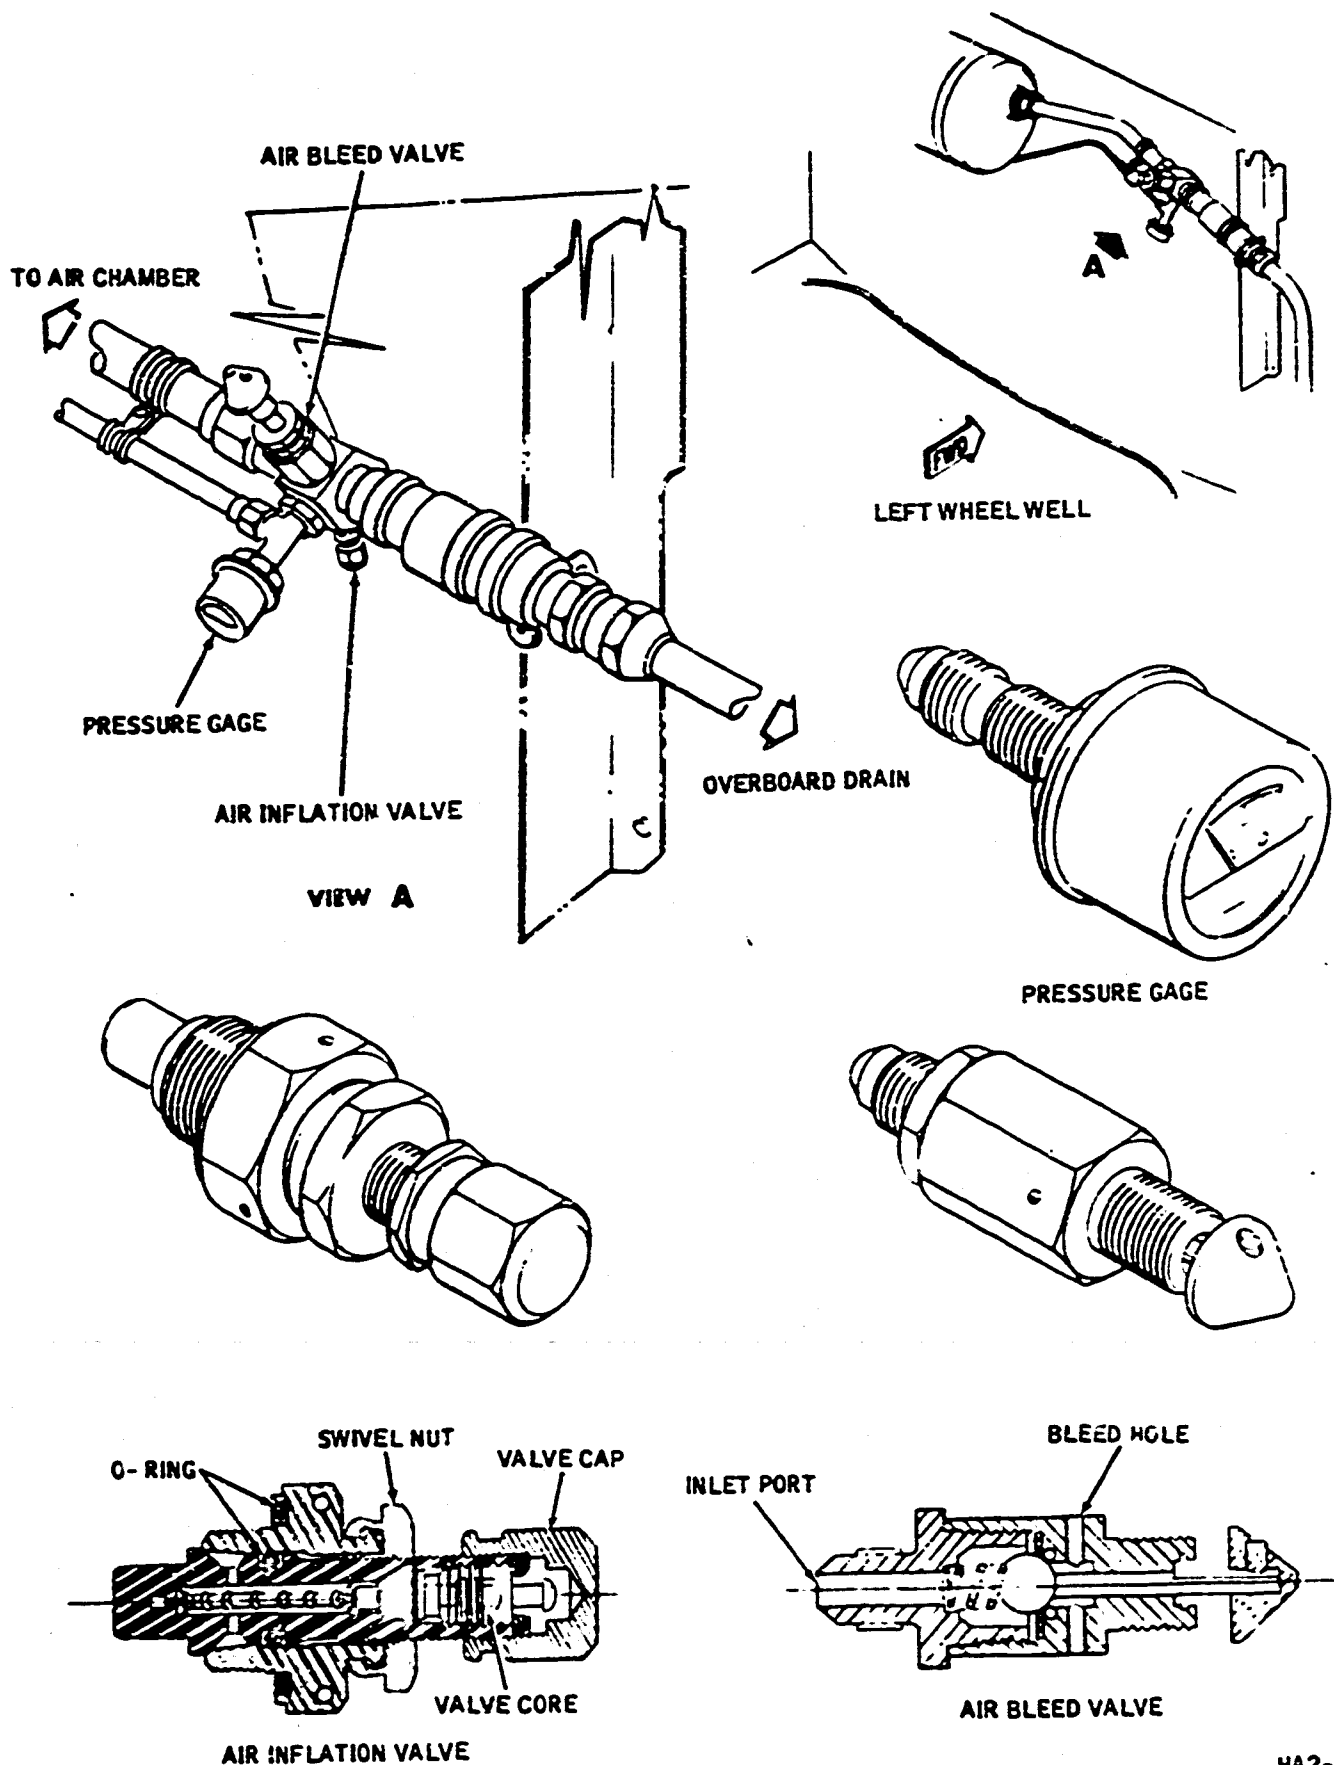

HA2-32

Reservoir Air Bleed Valve, Air Inflation Valve, and Pressure Gage  
 Figure 8

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

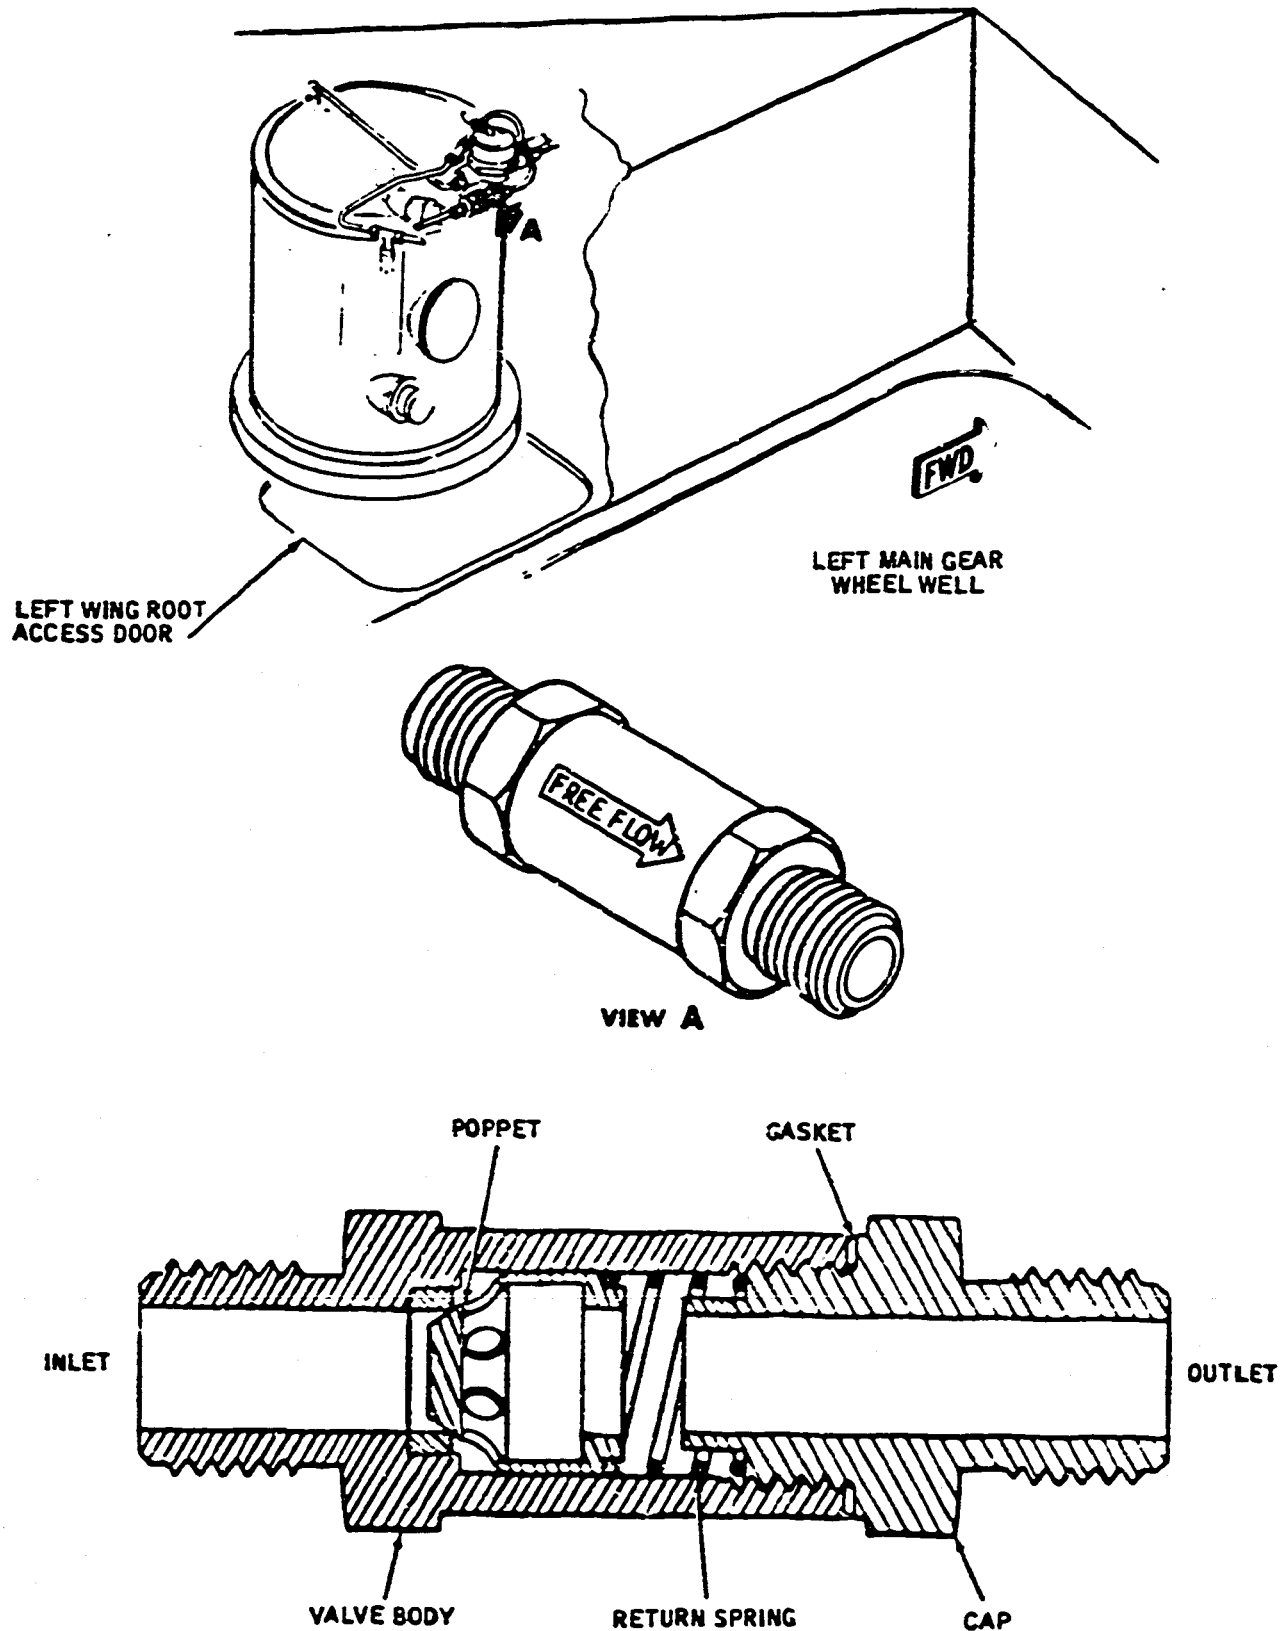

Hydraulic Reservoir Vacuum Breaker Check Valve  
Figure 9

Jun 15/67

Printed in U.S.A.

HA2-33

29-10-0  
CODE 20  
Page 19

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

separate container. Air pressure in the chamber is maintained by the regulator-aspirator and the air relief valve. The air pressure in the chamber and reservoir can be relieved, when desired, by the air bleed valve located downstream of the chamber. The air chamber is mounted higher than the reservoir filler assembly, to prevent overfilling of the reservoir from reducing the available air space and to prevent fluid from being vented overboard through the reservoir relief valve.


I. Hydraulic Reservoir Port B Return Check Valve (See Figure 10.)

- (1) The reservoir port B return check valve is installed in port B of the reservoir to prevent reverse flow of hydraulic fluid from the reservoir to the return line. The check valve is located on the reservoir in the left wing root and is accessible through the left wing root access door.
- (2) Externally and internally, the port B check valve is a standard-type check valve with a 1500-psi rating. A nominal pressure of approximately 8 psi unseats the poppet, permitting fluid to flow through the valve. When the reservoir pressure exceeds the return line pressure, the poppet will seat and reverse fluid flow will be prevented.


J. Engine Hydraulic Fire Shutoff Valve (See Figures 11 and 12.)

- (1) The engine hydraulic fire shutoff valve is a gate-type, mechanically controlled valve, installed in the supply line of each engine-driven hydraulic pump. The engine hydraulic fire shutoff valve is actuated from the flight compartment to prevent the flow of hydraulic fluid into the engine section.
- (2) The engine hydraulic fire shutoff valve is mounted on a 2-piece channel bracket which is installed inside the wing leading edge, aft of the firewall of each inboard pylon. Access to the valve is through the access door located on the lower side of the wing leading edge, outboard of either the left or right inboard pylon. Each valve is located approximately 30 inches inboard of the access door.
- (3) Internally, the valve consists of a valve arm, valve arm link, cam plate, and slide blade. The valve arm link attaches to the valve arm and is allowed to swivel through an arc in relation to the valve arm. The link has a stop that will contact the arm when the two have traveled to the valve closed, full overtravel position. In the full open pretravel position, the link contacts the arm stop.
- (4) A roller attached to the end of the link rides in, and extends through, a J-shaped slot in the cam plate. The rotation of the valve arm causes the link roller to follow the cam slot, allowing the arm and link to move through independent arcs.
- (5) The slide blade (gate of the valve) is slotted near the one end and also receives the link roller extending through the cam slot. The slide blade is positioned parallel to the cam plate and is guided by two grooves in the housing. This will allow the blade to open or close

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

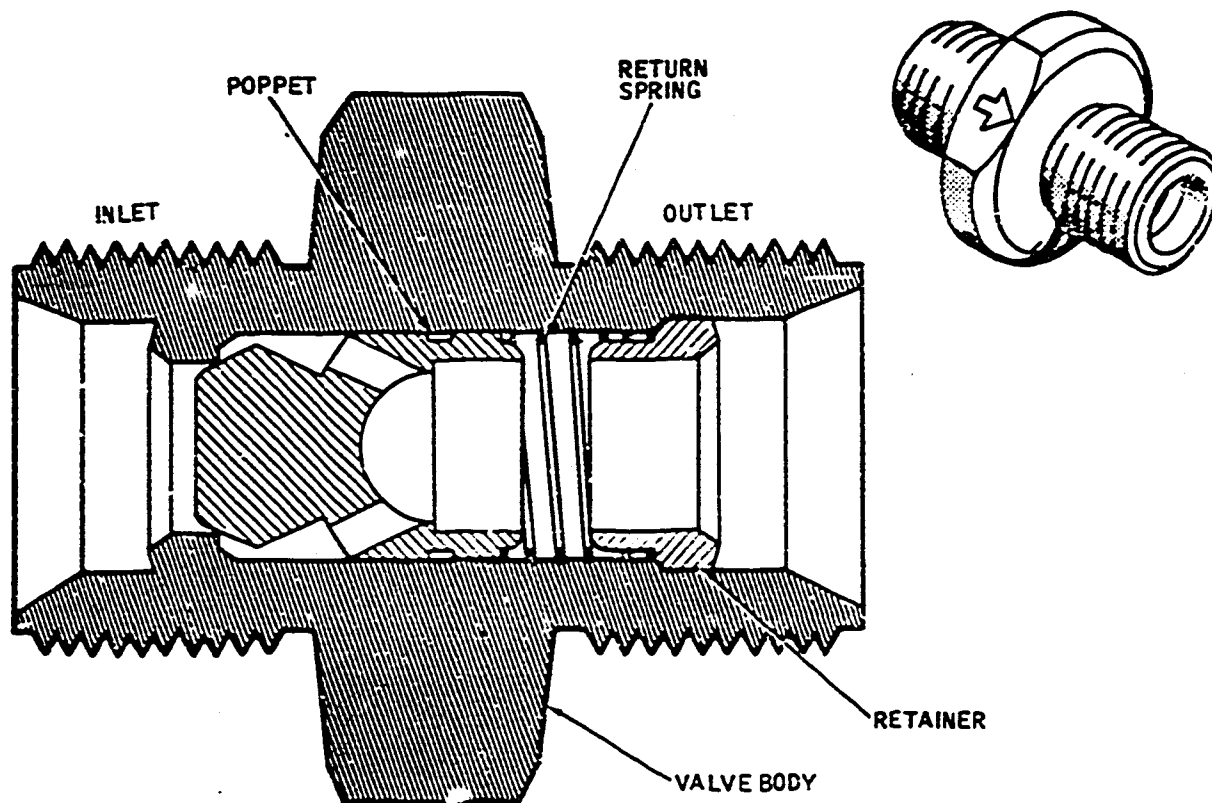

MINIATURE CHECK VALVE

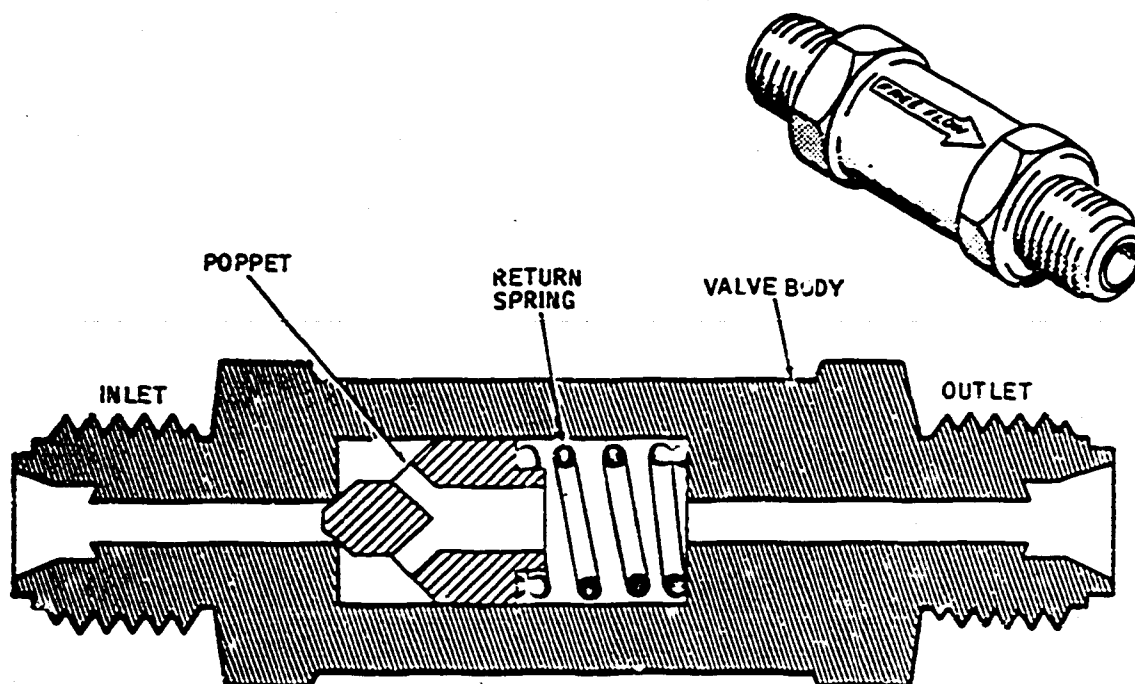

STANDARD CHECK VALVE

Hydraulic Check Valves -- Typical  
Figure 10


HA2-18A

Oct 1/67

Printed in U.S.A.

29-10-0  
CODE 20  
Page 21

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

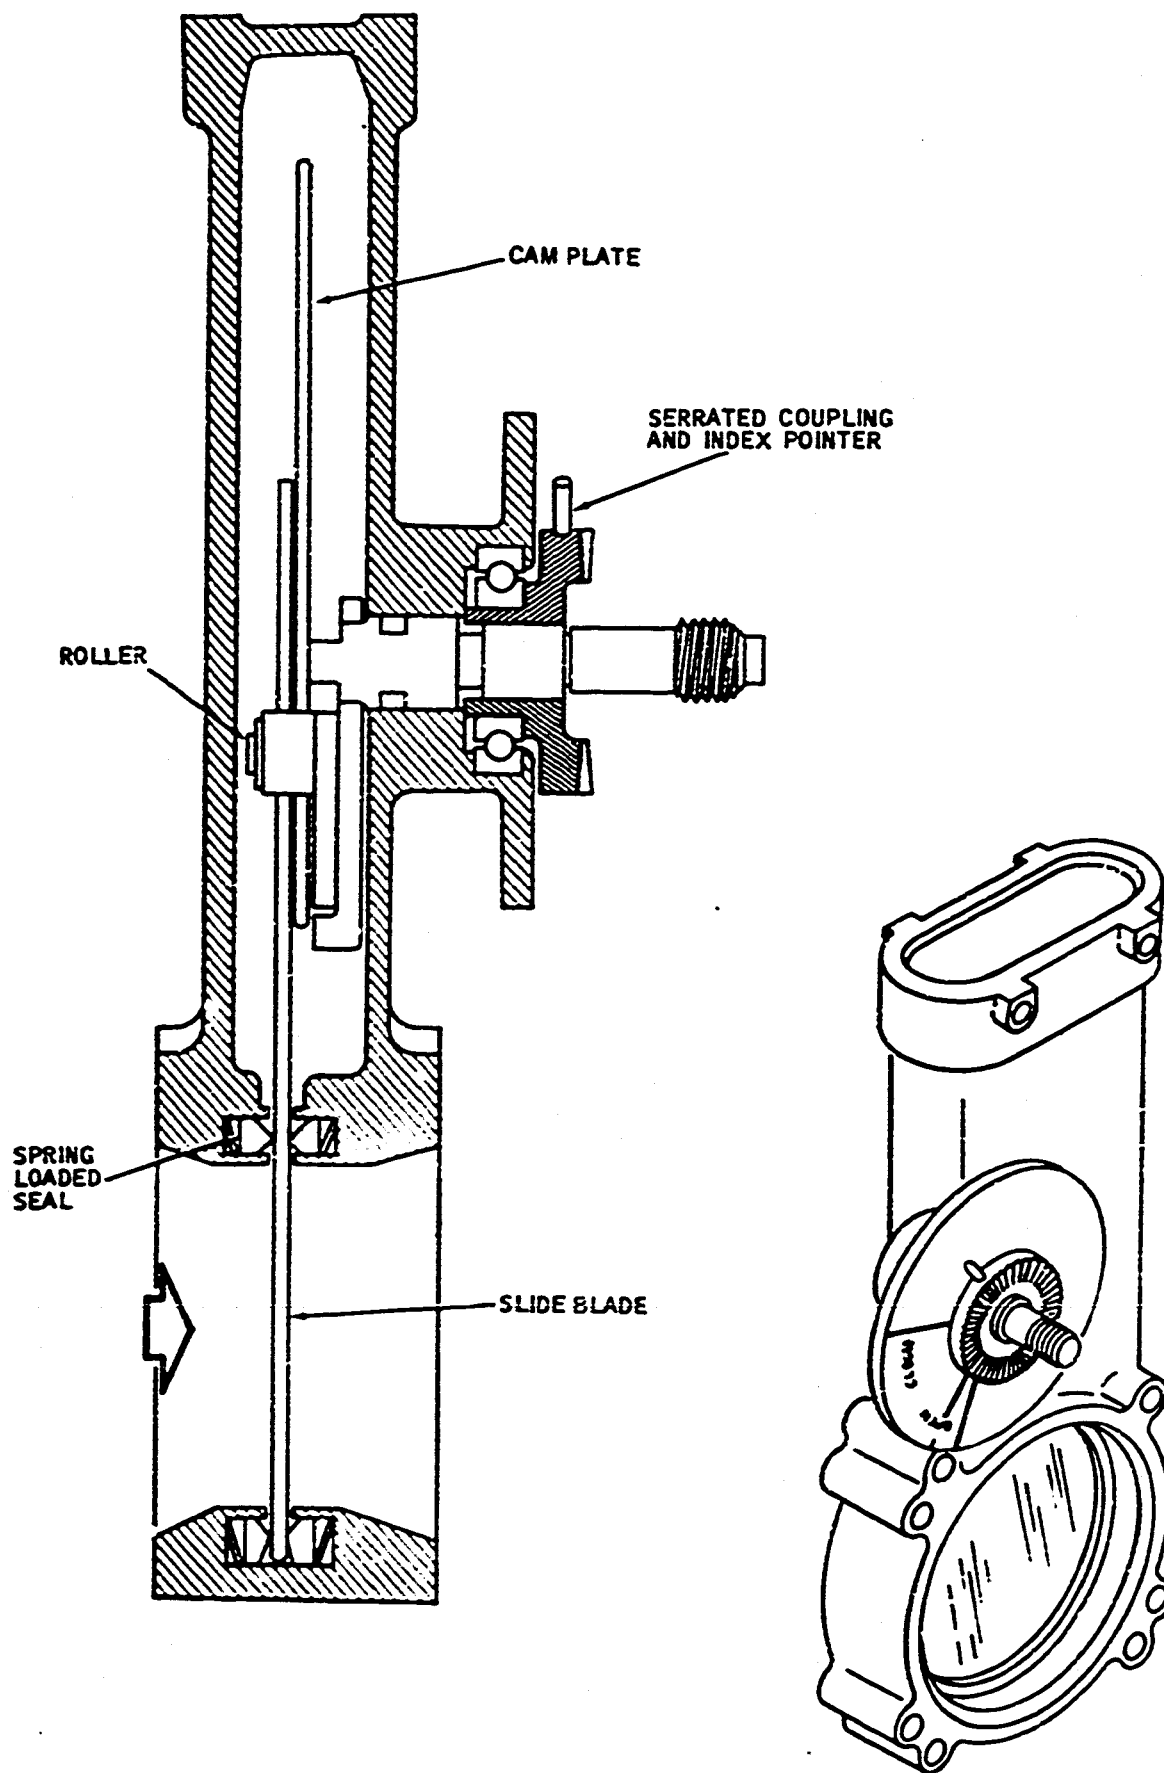


Engine Hydraulic Fire Shutoff Valve -- Schematic  
Figure 11

HA2-2209



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

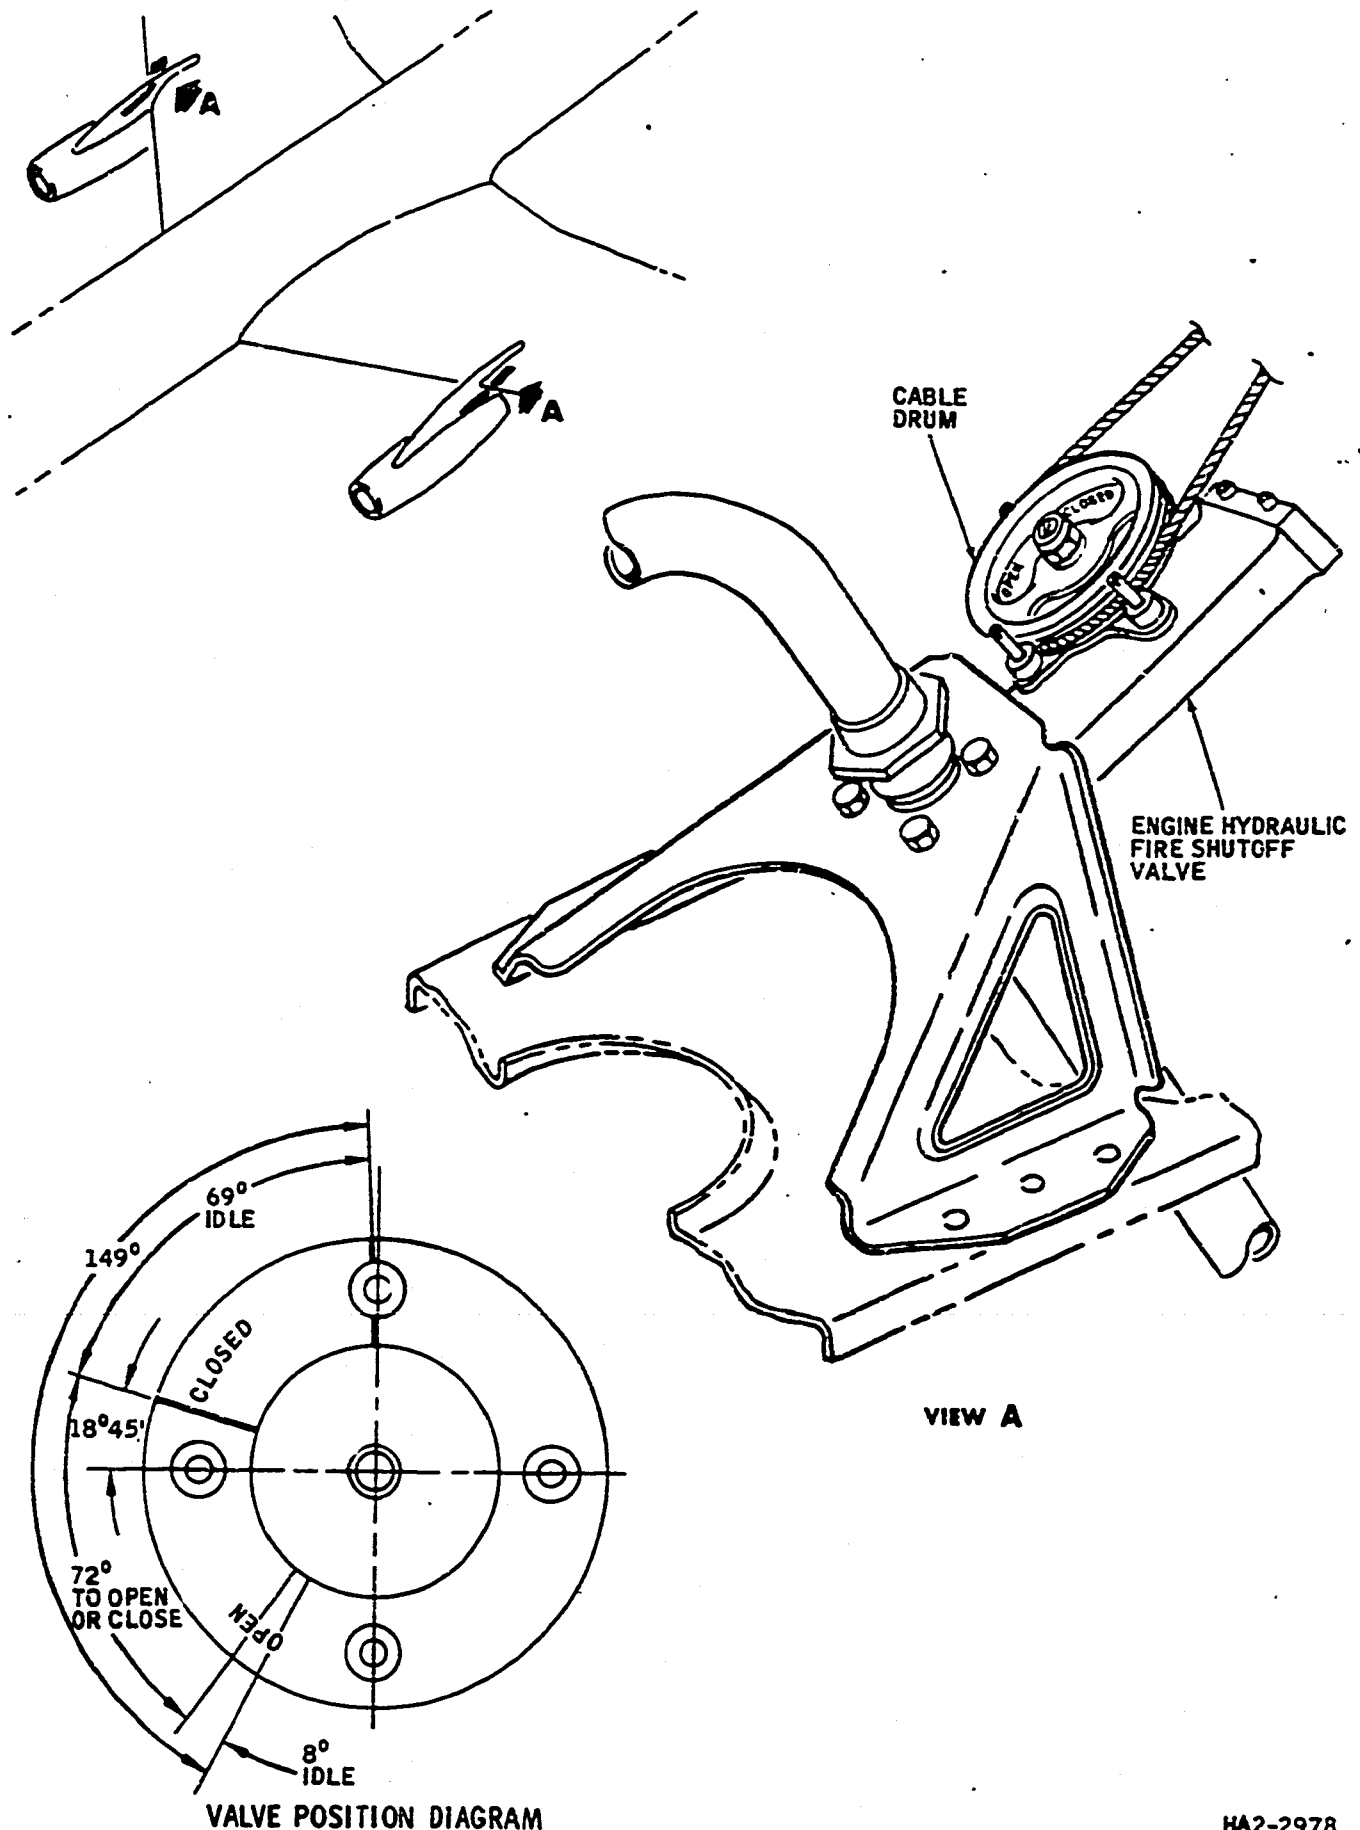


Engine Hydraulic Fire Shutoff Valve  
 (Airplanes JA8031-JA8037, JA8040, JA8044,  
 JA8051 and Subsequent)  
 Figure 12 (Sheet 1)

May 1/71


HA2-2978

29-10-0  
 CODE 20  
 Page 22A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

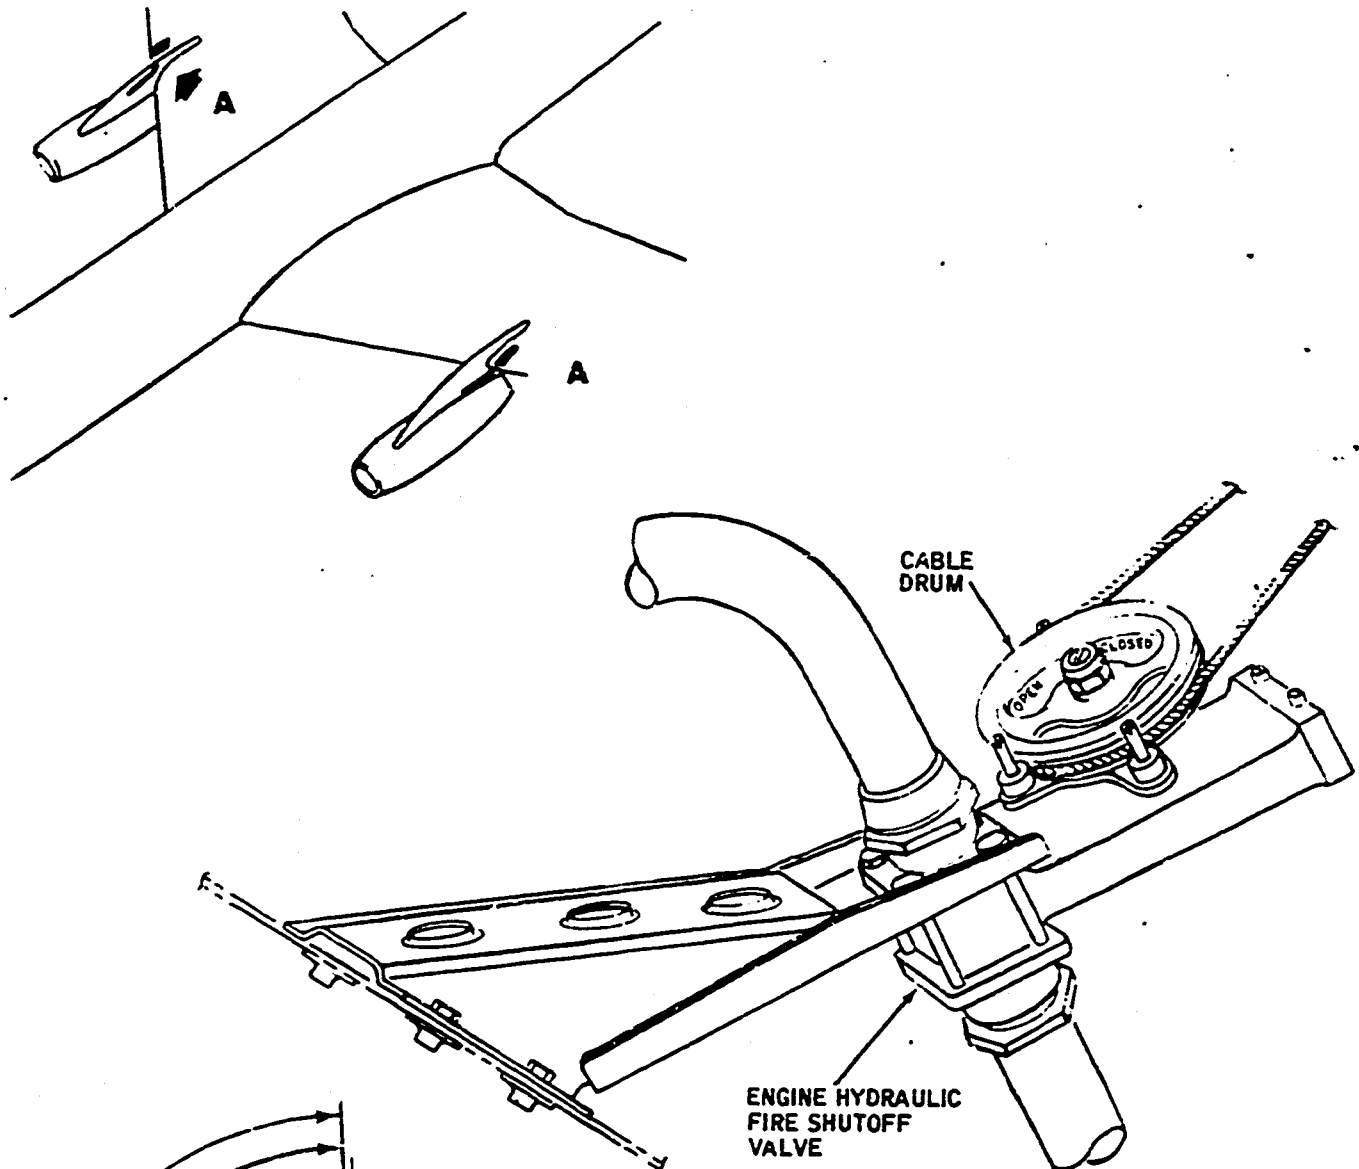

VIEW A

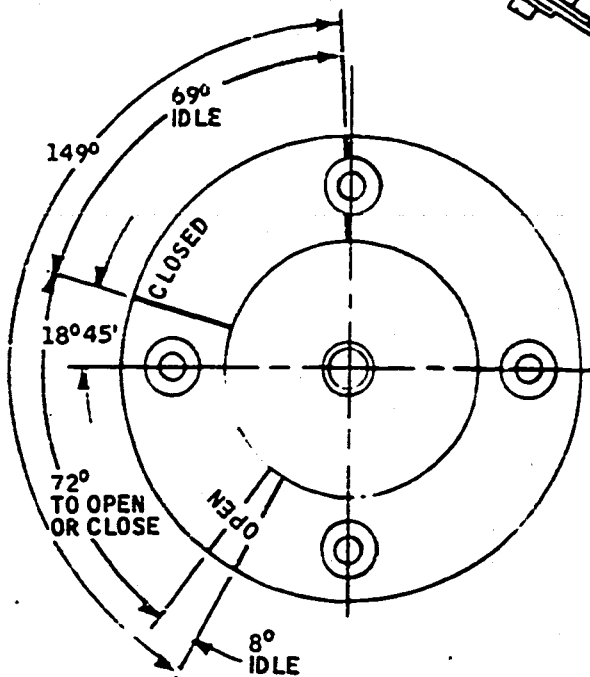

VALVE POSITION DIAGRAM

HA2-22

Engine Hydraulic Fire Shutoff Valve  
 (Airplanes JA8038, JA8039, JA8041-JA8043, JA8045-JA8048)  
 Figure 12 (Sheet 2)

29-10-0  
 CODE 20  
 Page 23

May 1/71

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL




through porting of the valve by the action of the arm and link. The cam plate is pinned to the valve shaft, securing it rigidly in two positioning grooves in the housing. A pin-indicator is provided to relate valve position to a reference plate placarded open and closed.

- (6) The engine hydraulic fire shutoff valves are cable actuated by the fire control handles, located on the overhead switch panel in the flight compartment. When the fire control handle for either inboard engine is moved, the cable system rotates the drum which is attached to the corresponding shutoff valve shaft. This action extends the valve blade into the fluid passage to block the flow of fluid. The valve operates from open to close by clockwise rotation of the cable drum. The valve gate will idle during the first 8 degrees of rotation of the cable drum, and then will close in the next 72 degrees. The cable drum will continue to rotate the shaft for an additional 69 degrees after the gate valve is closed, locking it overcenter. Total travel of the cable drum is 149 degrees.

K. Engine-Driven Hydraulic Pump (See Figure 13.)

- (1) A variable-displacement, pressure-compensated, engine-driven hydraulic pump is installed on each inboard engine. The pump incorporates a solenoid bypass feature for reducing the output of the pump. The bypass valves are controlled by two engine hydraulic pump control switches in the flight compartment. The switch for the hydraulic pump on engine No. 2 is placarded left, on and bypass. The switch for the hydraulic pump on engine No. 3 is placarded right, on and bypass. When either of the two engine hydraulic pump control switches is placed in the bypass position, the bypass valve solenoid for that hydraulic pump is energized and the pump pressure decreases to 300 ( $\pm 100$ ) psi. When either switch is in the on position, the control circuit to the corresponding bypass valve is open and the hydraulic pump operates normally in the pressure range of 2850 to 3050 psi. The pump provides a continuous, non-pulsating flow of hydraulic fluid, under pressure, to the hydraulic manifolds for distribution throughout the hydraulic system. Each of the engine-driven pumps is located on the accessory drive pad of the inboard engines. These pumps are accessible through the access doors on the right side of the nacelles and removal of the engine bypass duct.
- (2) Three case drain ports are provided: two are on the yoke assembly housing, and the third is on the casing for the pressure control valve, adjacent to the inlet port fitting. The case drain port on top of the yoke assembly housing is used as the case drain connection to assure that the pump housing is full of fluid at all times. This drain connection is ported back to the low-pressure return port of the reservoir. The inlet port fitting is on top of the pump housing and the outlet port fitting is opposite to it on the bottom of the housing.
- (3) The yoke control piston casing is an integral part of the pump case. Four self-locking nuts are used to hold the piston casing end-plate in position. The bypass valve assembly, consisting of the valve body and a solenoid, is mounted externally on the pump case, under the yoke

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

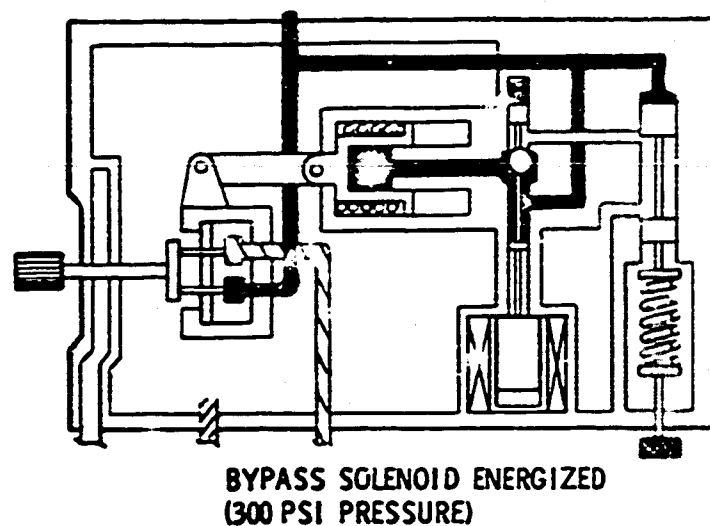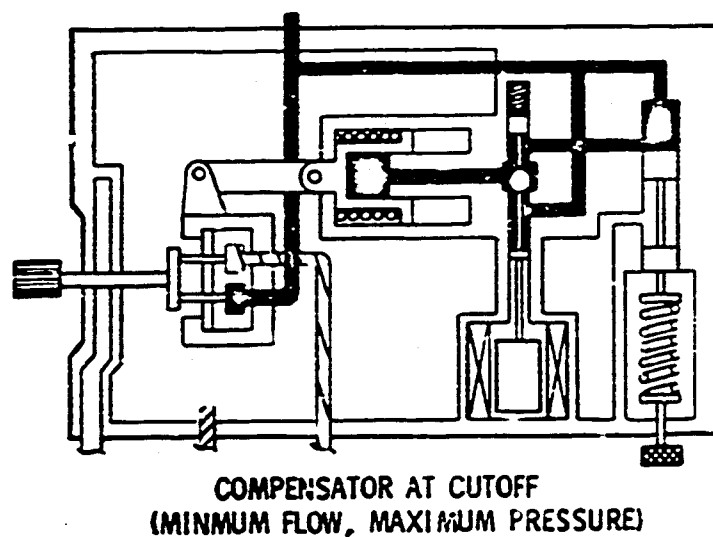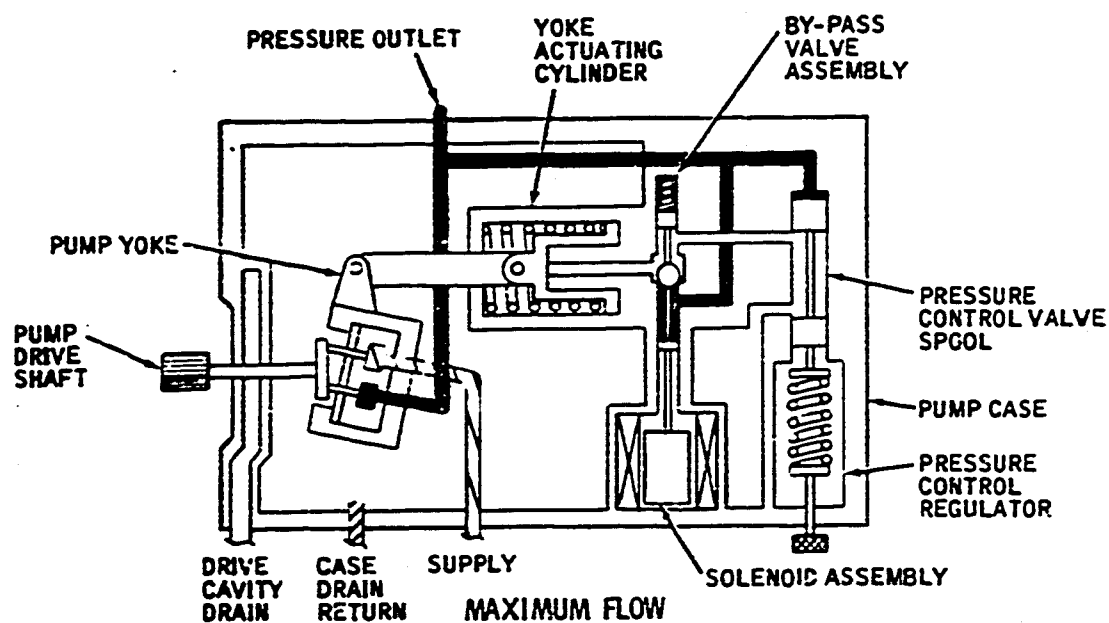

- PRESSURE
- CASE DRAIN
- SUPPLY
- DRIVE CAVITY DRAIN

HA2-837

Engine-Driven Hydraulic Pump Pressure  
 Flow -- Schematic  
 Figure 13

Jun 15/67

Printed in U S A

29-10-0  
 CODE 20  
 Page 25

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

control piston casing. This solenoid valve is provided with an electrical connector. A pressure control regulator is installed on the bypass valve body by means of four bolts. This regulator is cylindrical and is provided with an external adjustment screw. A lock screw is used to retain the adjusting screw after the adjustment has been made.

- (4) Hydraulic fluid enters the pump through an inlet port. Passages in the yoke carry the fluid to the valve plate, which ports the fluid to the cylinder block. The nine pistons in the cylinder block are actuated by the rotating drive shaft, thereby pressurizing the fluid. From the cylinder block, the fluid is routed to the outlet port of the yoke and then to the pump pressure lines. The pressure control regulator is actuated by pump output pressure that is bled to the regulator. The regulator meters the pressure to the yoke control piston, which positions the yoke.
- (5) The maximum pump pressure is determined by the adjustment of the pressure control regulator. The pressure control regulator allows maximum output flow (22.5 gpm at 3500 rpm) up to 2850 psi system pressure. When this pressure is reached, the yoke assembly starts to move towards the zero flow position.
- (6) Pressure continues to rise until the displacement is reduced from maximum flow to zero flow and 3000 psi is reached. The pump stabilizes in accordance with system demand.


**L. Engine-Driven Hydraulic Pump Check Valves (See Figure 10.)**

- (1) Two check valves, rated at 3000 psi, are installed in the lines from each engine-driven hydraulic pump. One check valve is installed in the pressure line and the other is in the case drain line. The check valves in the pump pressure lines prevent reverse flow of hydraulic fluid through the pump, when the pump is inoperative or when external hydraulic pressure is supplied to the system. Access to the valves can be gained through an access door in the forward right apron of each inboard pylon. The valves are mounted on the exterior wall of the inlet box by means of the bulkhead fittings and retaining nuts.
- (2) Normal operating pressure will unseat the poppet, and fluid will flow through the valve. When pressure downstream of the valve exceeds pressure from the pump, the pressure, with the aid of the return spring, will seat the poppet. This prevents reverse flow of hydraulic fluid through the pumps.


**M. Engine-Driven Hydraulic Pump Case Drain Filter (See Figure 14.)**

- (1) A line-type, micron filter, for use in a low-pressure hydraulic system, is installed in the engine-driven hydraulic pump case drain return line between the pump flow check valve and the hydraulic system reservoir. The case drain filter is installed on the aft surface of the rear spar opposite the leading edge of the inboard flap assembly. One filter is used for each engine-driven pump. Access is gained to the


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

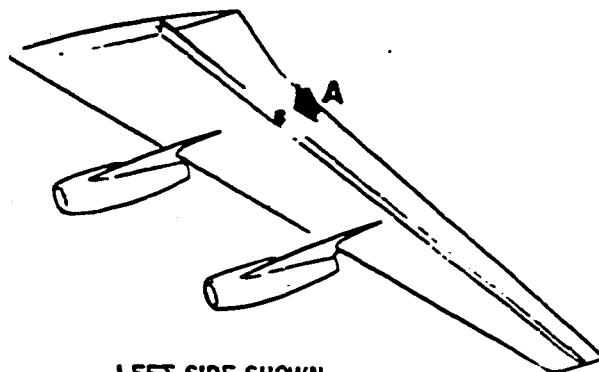

LEFT SIDE SHOWN  
RIGHT SIDE OPPOSITE

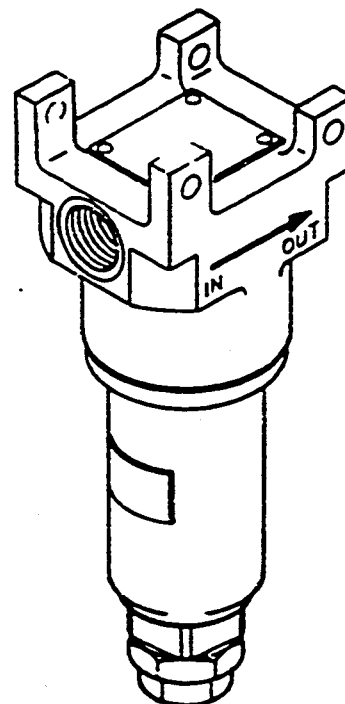

VIEW A

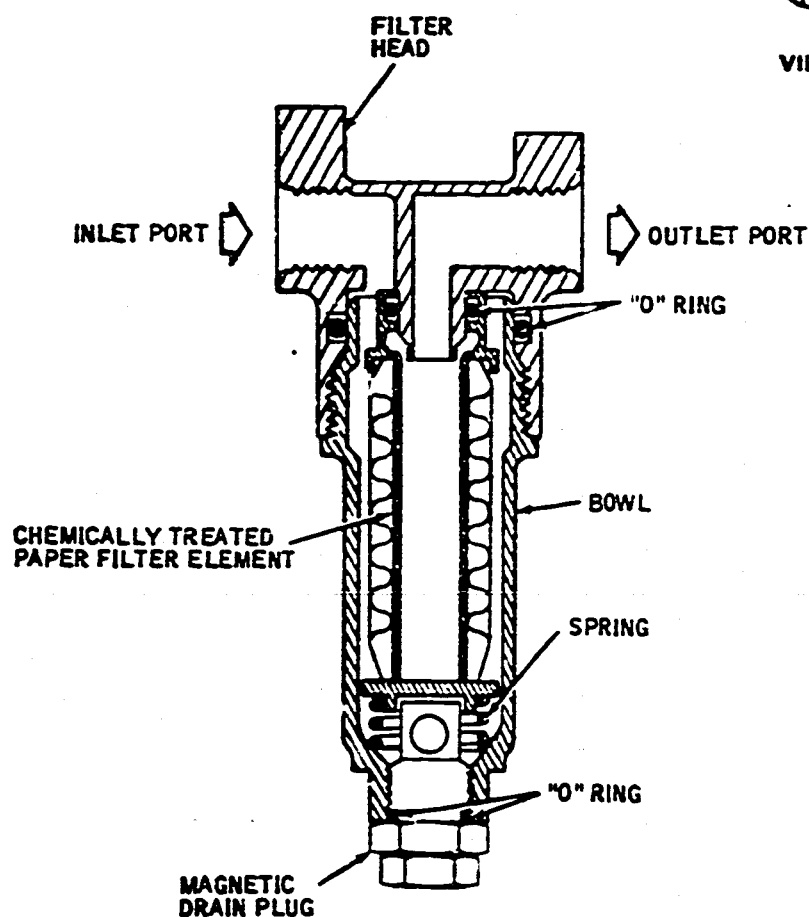

HA2-31

Engine-Driven Hydraulic Pump Case Drain  
Filter -- Cutaway View  
Figure 14

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 20  
Page 27

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

filter by lowering the flaps. A second check valve is installed adjacent to the filter in the downstream side of the case drain return line.

- (2) Externally, the filter is approximately 5 inches high and 2 inches wide, with ports marked inlet and outlet. The bowl is cylindrical in shape, with hex-shaped wrench flats at the lower end. A self-sealing, magnetic drain plug is installed in the bottom end of the filter bowl. The filter element is made of chemically treated paper.


N. Dual Filter and Relief Valve (See Figure 15.)

- (1) The hydraulic power system dual filter and relief valve consists of two filters and two relief valves installed in the same body. The unit filters the hydraulic fluid from the two engine-driven hydraulic pumps, and the pressure relief valves assure that excessive pressures do not build up in the pressure line from the pumps. The unit is located in the left main gear wheel well on the lower portion of the rear spar, approximately 1 foot outboard of the centerline shear web.
- (2) The unit consists of a casting with a flange-mounted pressure inlet port on each end. Two pressure outlets are located on the top of the casting. One outlet, centrally located, is the main pressure outlet to the system selector valve. The other, located to the left of the selector valve port, is the pressure outlet to the air pressure regulator-aspirator. The return outlet port for the relief valve portion of the unit is located on the center of the aft face of the body, canted upward. The nose gear return line is connected to a check valve installed in a return line port, located between the two filter bowls.
- (3) The pressure relief valves are located behind the pressure inlet ports and are connected to the return outlet port of the unit. The inlet from the nose gear return line is routed through the casting to the return outlet port.
- (4) If either of the filter elements becomes clogged, pressure above 3300 psi at the inlet port will unseat the poppet. Pressure above 3500 psi will allow full flow of 22.5 gpm to flow to the return port of the unit and back to the reservoir. The relief valves will reseal at approximately 3000 psi.
- (5) A check valve is installed in the system selector valve port to prevent reverse flow of pressure through the filter during auxiliary hydraulic pump operation.

O. System Selector Valve (See Figures 16 and 17.)

- (1) The system selector valve is a 3-position valve which permits directional control of fluid under pressure. The valve is installed on the left hydraulic power manifold and is accessible through the left main gear inboard door.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

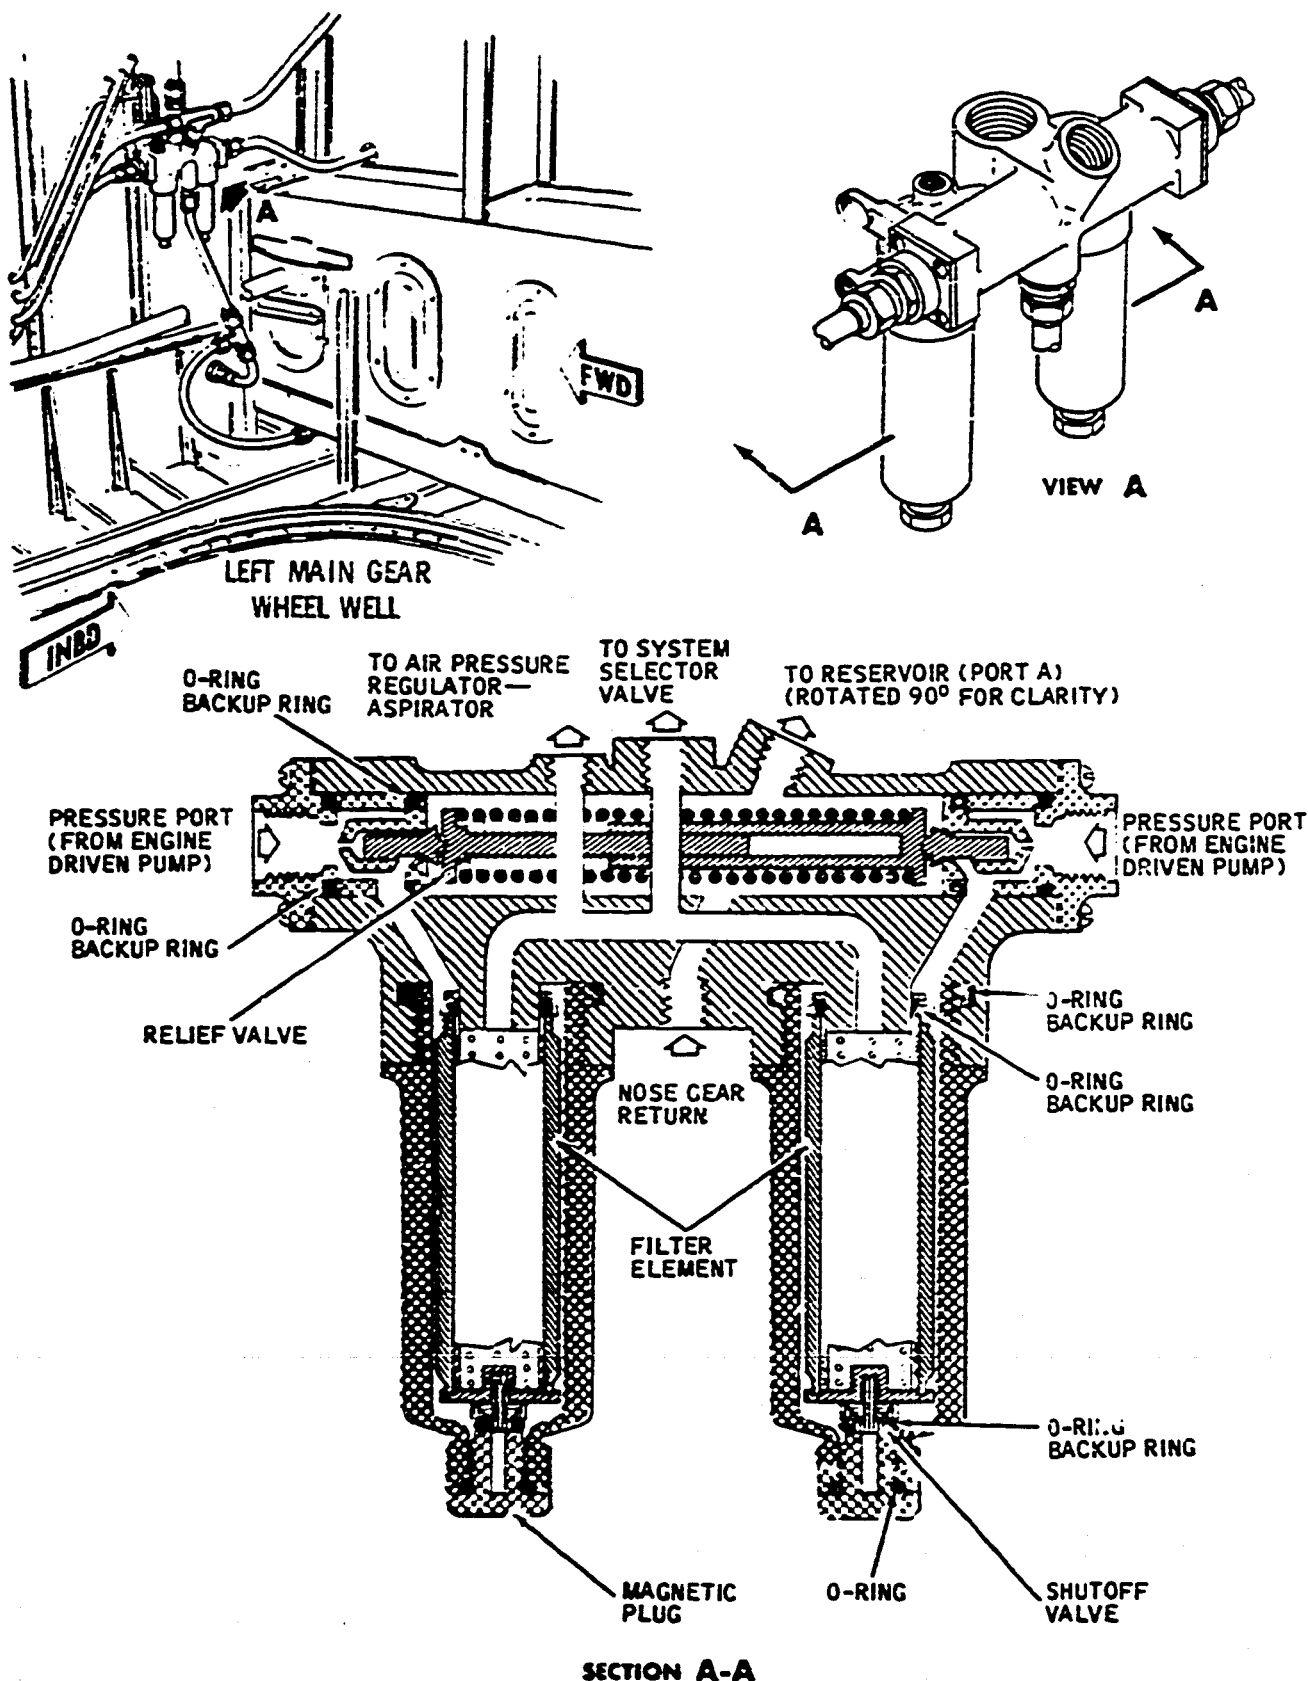

Dual-Filter and Relief Valve -- Cutaway View  
 Figure 15

Jun 15/67


Printed in U.S.A.

HA2-20

29-10-0  
 CODE 20  
 Page 29





DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

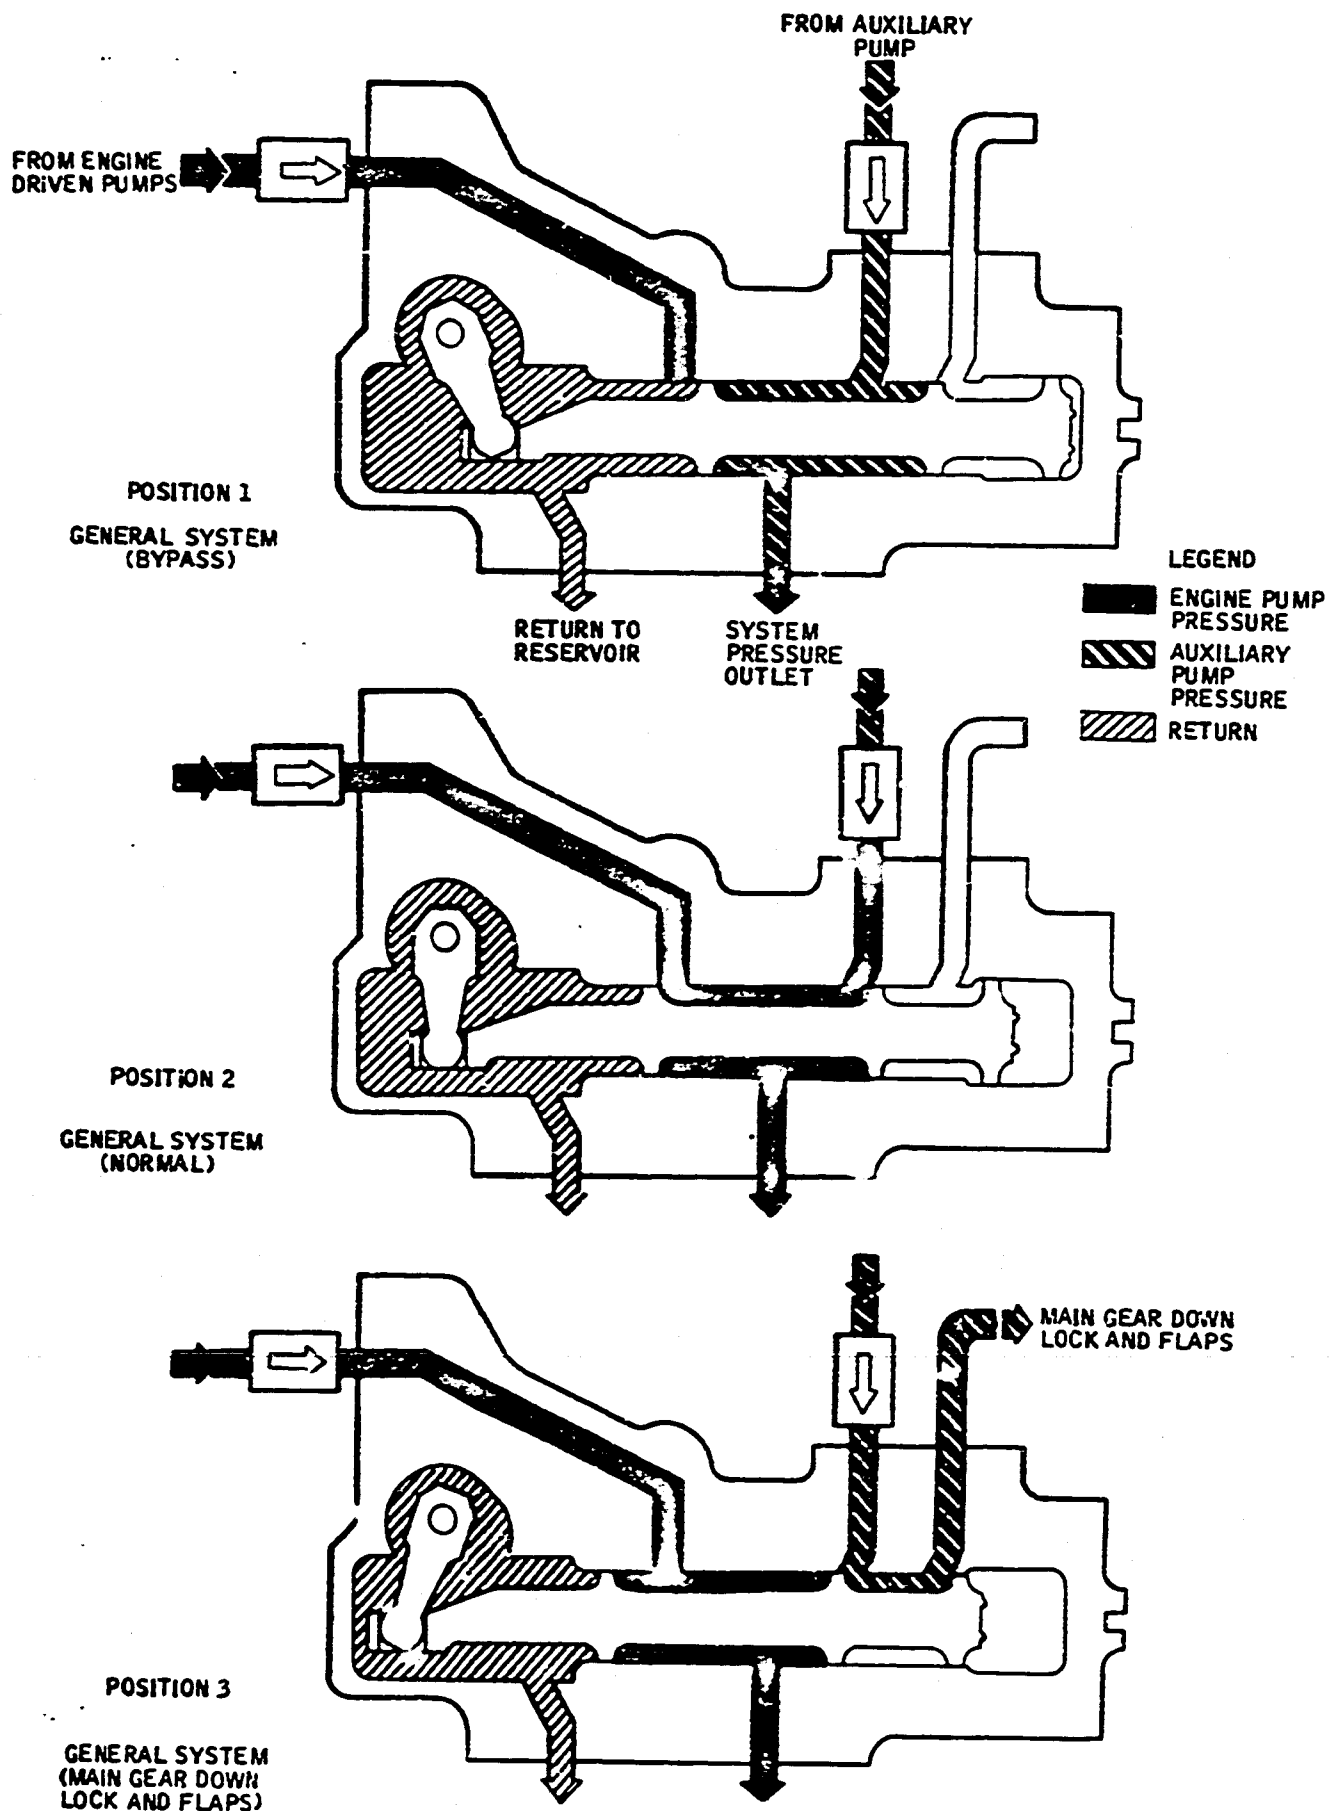

System Selector Valve -- Schematic  
 Figure 16

HA2-26

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

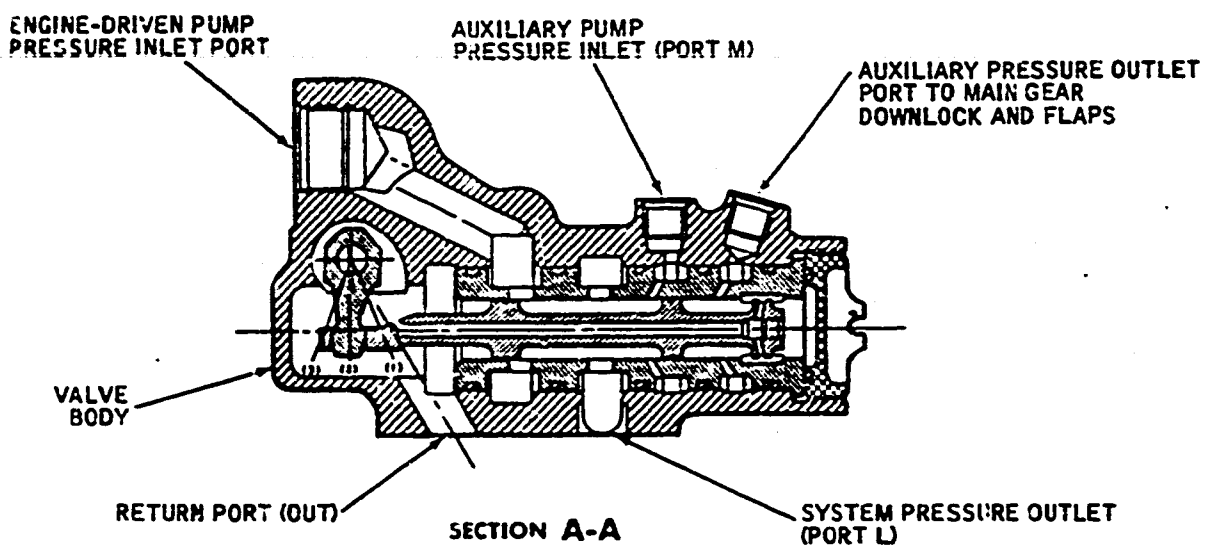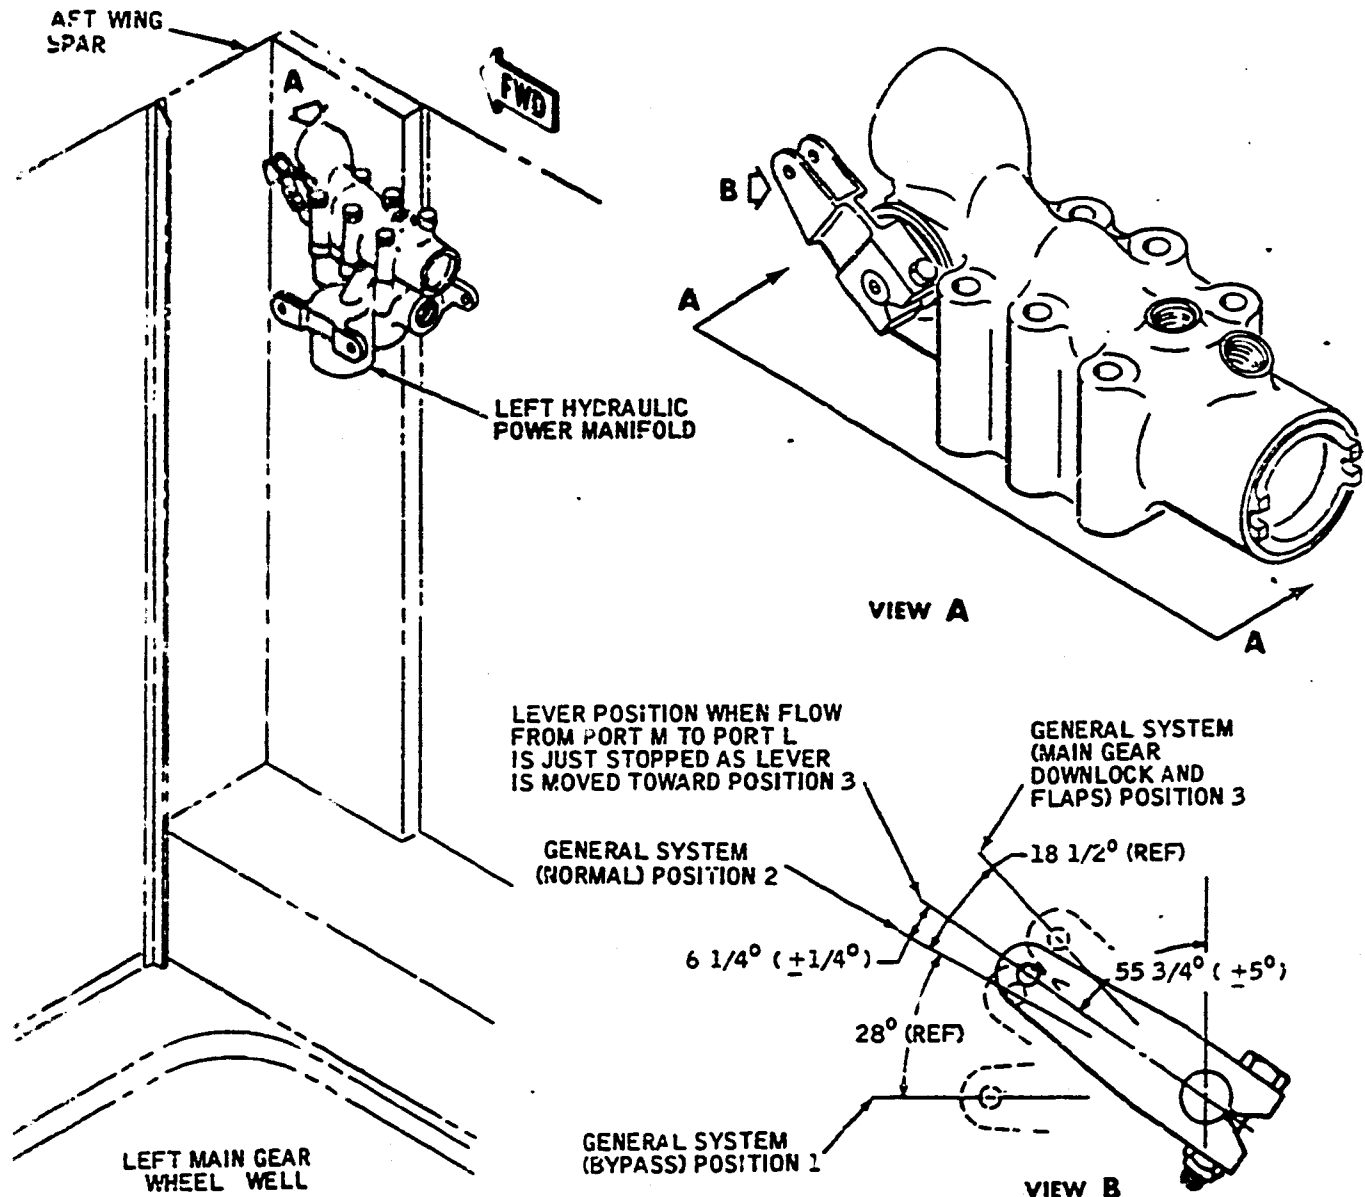


System Selector Valve — Cutaway View  
 (Airplanes JA8031-JA8037, JA8040, JA8044,  
 JA8051 and Subsequent)  
 Figure 17 (Sheet 1)

HA2-854A

May 1/71

29-10-0  
 CODE 20  
 Page 30A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

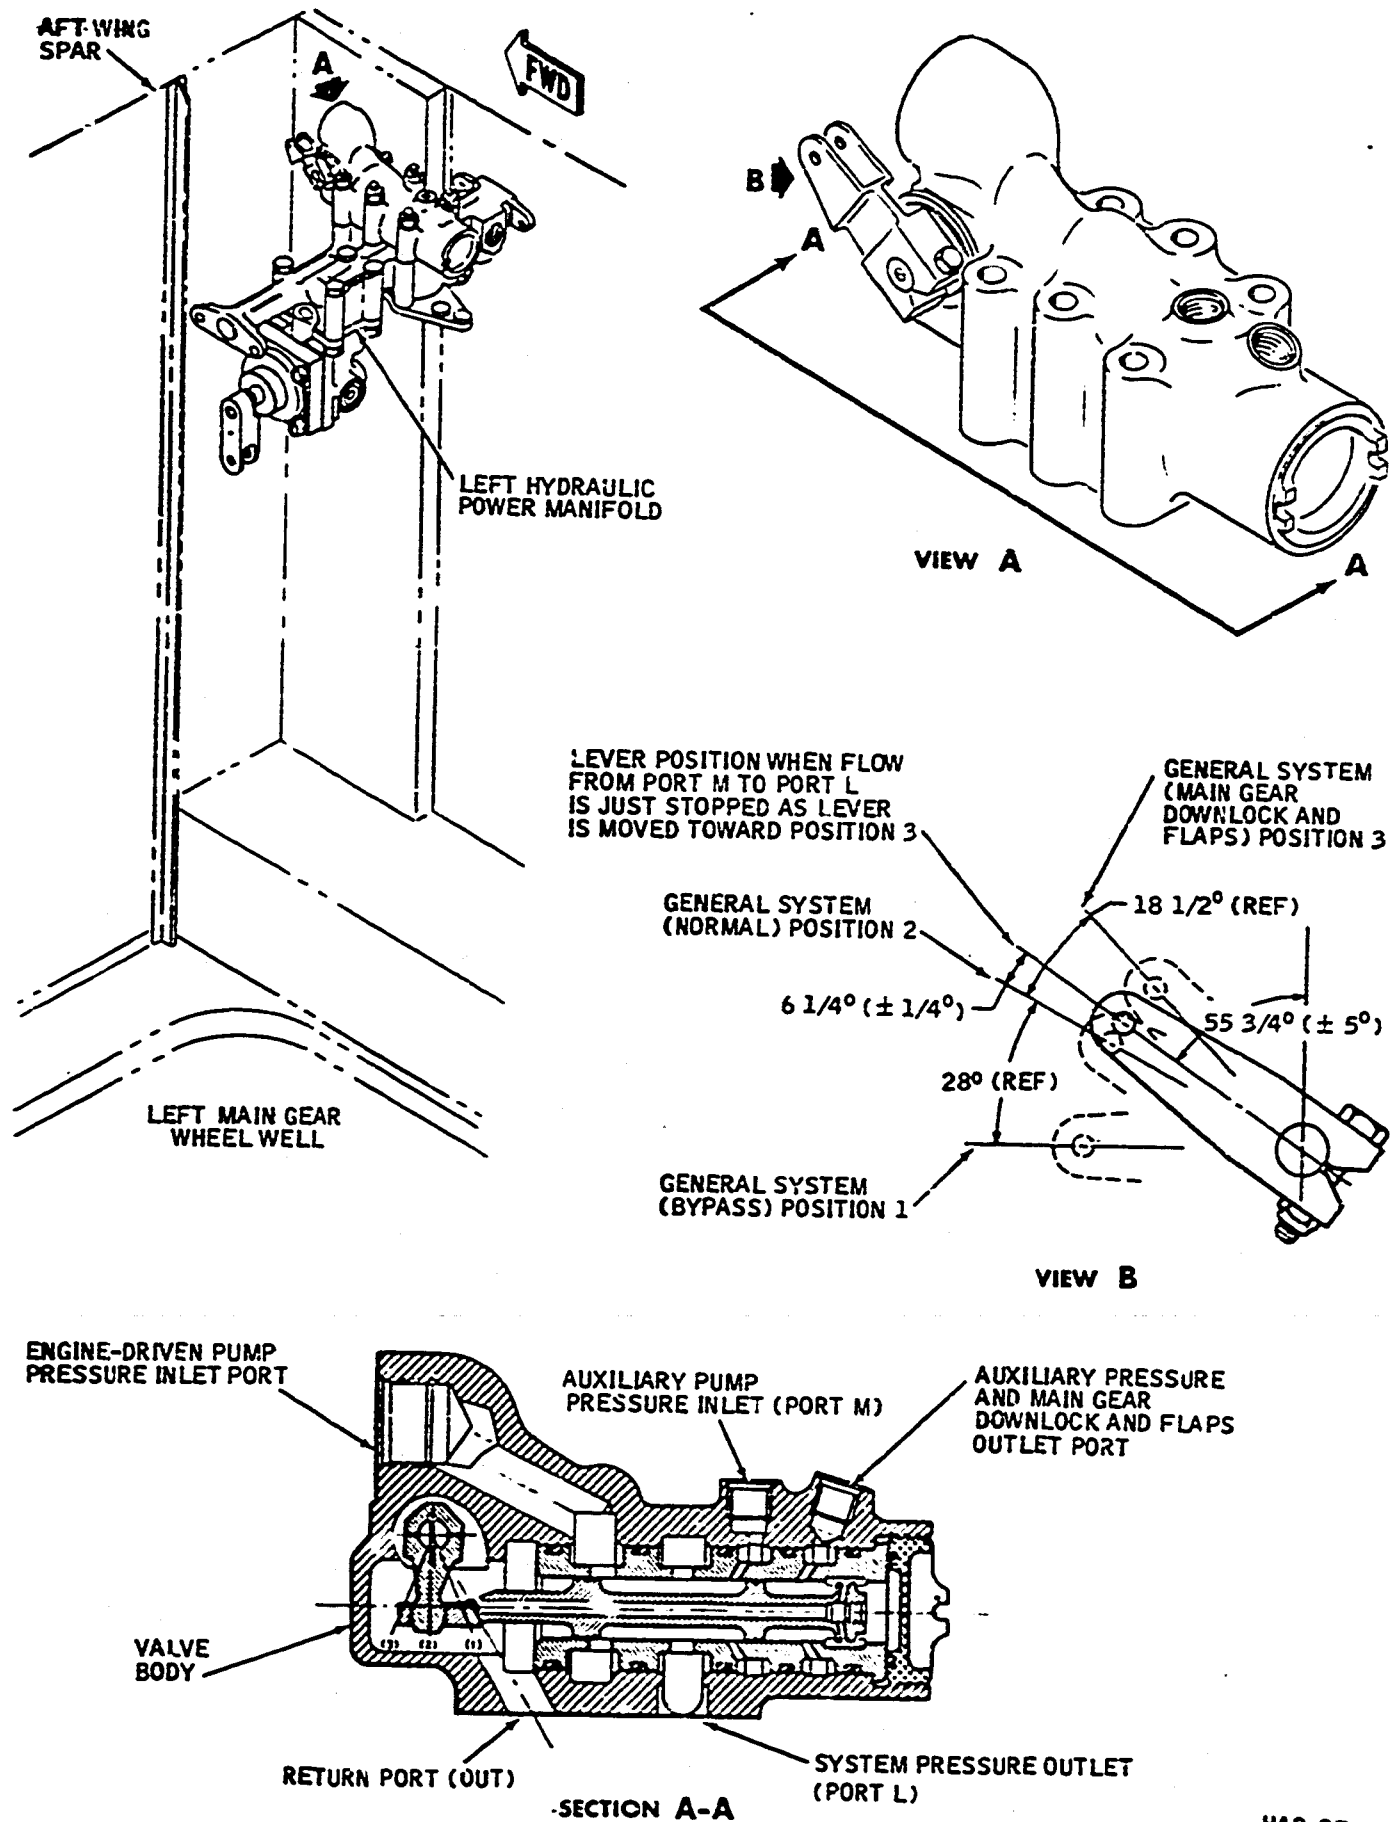

System Selector Valve — Cutaway View  
 (Airplanes JA8038, JA8039, JA8041-JA8043, JA8045-JA8048)  
 Figure 17 (Sheet 2)

HA2-27

May 1/71

29-10-0  
 CODE 20  
 Page 31

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY' SERIES**  
MAINTENANCE MANUAL

- (2) The selector valve pressure-to-system port and the return port are directly ported to the manifold. The engine pump pressure enters the valve through a port on the large end of the valve, and the auxiliary pump inlet and alternate ports are located at the top, toward the aft end of the valve. The valve control crank is attached to a push-pull rod and a cable sector.
- (3) Operation of the system selector valve is controlled by a lever located on the right side of the system engineer's control pedestal. When the control lever is moved to the selected position, the cable system, through the sector and crank, operates the valve positioning lever to drive the slide spool assembly to the selected position. When the control lever is placed in the general system (normal) position, the selector valve is actuated, causing hydraulic fluid to enter the valve through the system pressure port. The fluid is then directed into the manifold through the pressure-to-system port. In the general system (normal) position, fluid from the auxiliary pressure port is also routed to the pressure-to-system port. In the bypass/general system position, the selector valve ports engine pump pressure into the manifold through the return port. In this position, the auxiliary pump pressure is ported to the general system. In the general system/main gear down and flaps position, pump pressure is routed through the alternate port, at the top of the valve, for alternate operation of the flaps and the landing gear downlock cylinders. Internal leakage provides lubrication for the moving parts of the valve.

P. Left Hydraulic Power Manifold (See Figure 18.)

- (1) The left hydraulic power manifold distributes fluid pressure from the hydraulic pump (any one of the three pumps), through control valves to the various airplane hydraulic subsystems. The left power manifold is located overhead in the left wheel well. Access to the left manifold is through the left main gear inboard door.
- (2) On airplanes JA8031-JA8037, JA8040, JA8044, JA8051 and subsequent, one valve-mounting pad is provided on the top of the manifold for the system selector valve. Four ports are provided on the manifold for connection of hydraulic pressure and return lines. Three of these ports are pressure outlet ports; one, located on the aft face of the manifold and one located on the bottom of the manifold port fluid to the flight controls. The third pressure outlet port, located on the bottom of the manifold, ports fluid directly to the priority valve, which in turn, ports fluid to the nose gear and to the right power manifold. The fourth, a return port, located immediately forward of the pressure line port on the bottom of the manifold, is connected by a line to a return port of the reservoir.
- (3) On airplanes JA8038 and JA8039, JA8041-JA8043, JA8045-JA8048, three valve-mounting pads are provided on the manifold. The system selector valve-mounting pad is located on top of the manifold body. Of the two remaining mounting pads, located on the underside of the manifold, the



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

inboard pad is capped and not used. The outboard mounting pad is used for the bogie swivel unlock control valve. Four ports are provided on the inboard end of the manifold. Two of these ports are pressure outlet ports: one, located on the aft face of the manifold, is for the flight controls; and, the other, located on the underside of the manifold, ports fluid to the priority valve, which, in turn, ports fluid to the nose gear and the right power manifold. The other two ports are return outlets, located immediately forward of the manifold pressure outlet port. One is connected by a line to the right manifold, and the other is connected to the low-pressure return port of the reservoir. The pressure line to the nose gear control valve is teed into the manifold pressure connecting line. A reservoir return line is teed into the manifold return line. The two ports on the inboard mounting flange were used for drilling the internal passages of the power manifold and are plugged and safety wired to prevent use.

Q. Right Hydraulic Power Manifold (See Figure 19.)

- (1) The right hydraulic power manifold distributes fluid pressure from the hydraulic pumps (engine-driven or auxiliary, or any combination of these three pumps), through the control valves to the various hydraulic subsystems. The right hydraulic power manifold is located overhead.



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

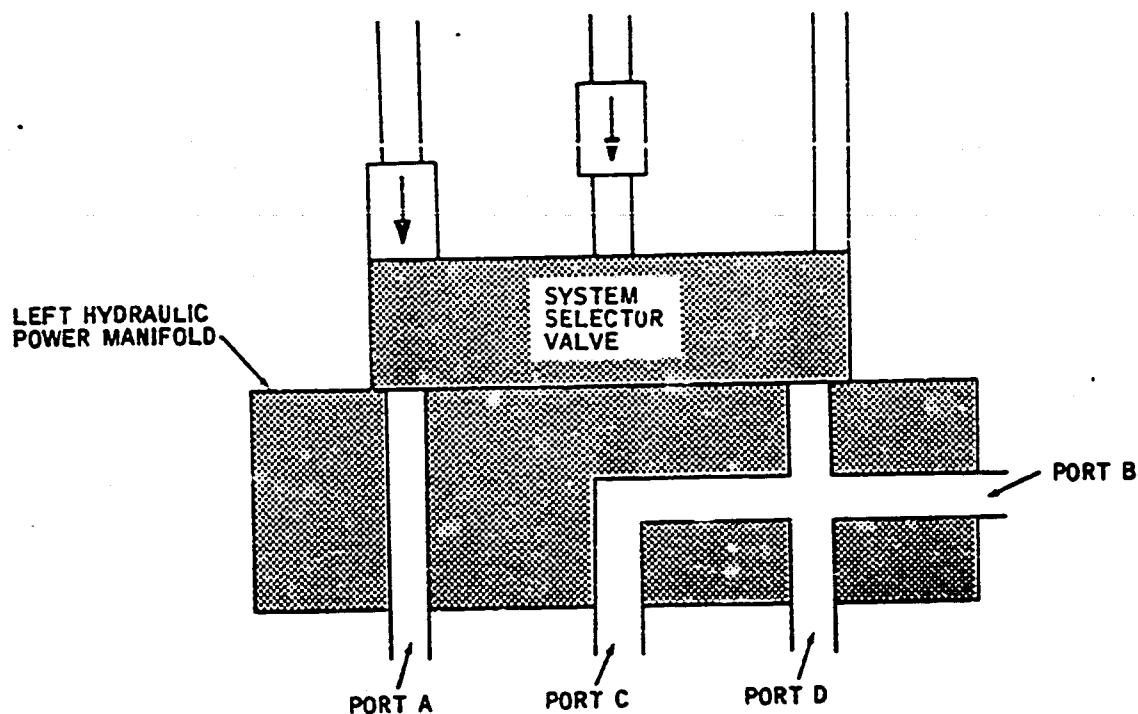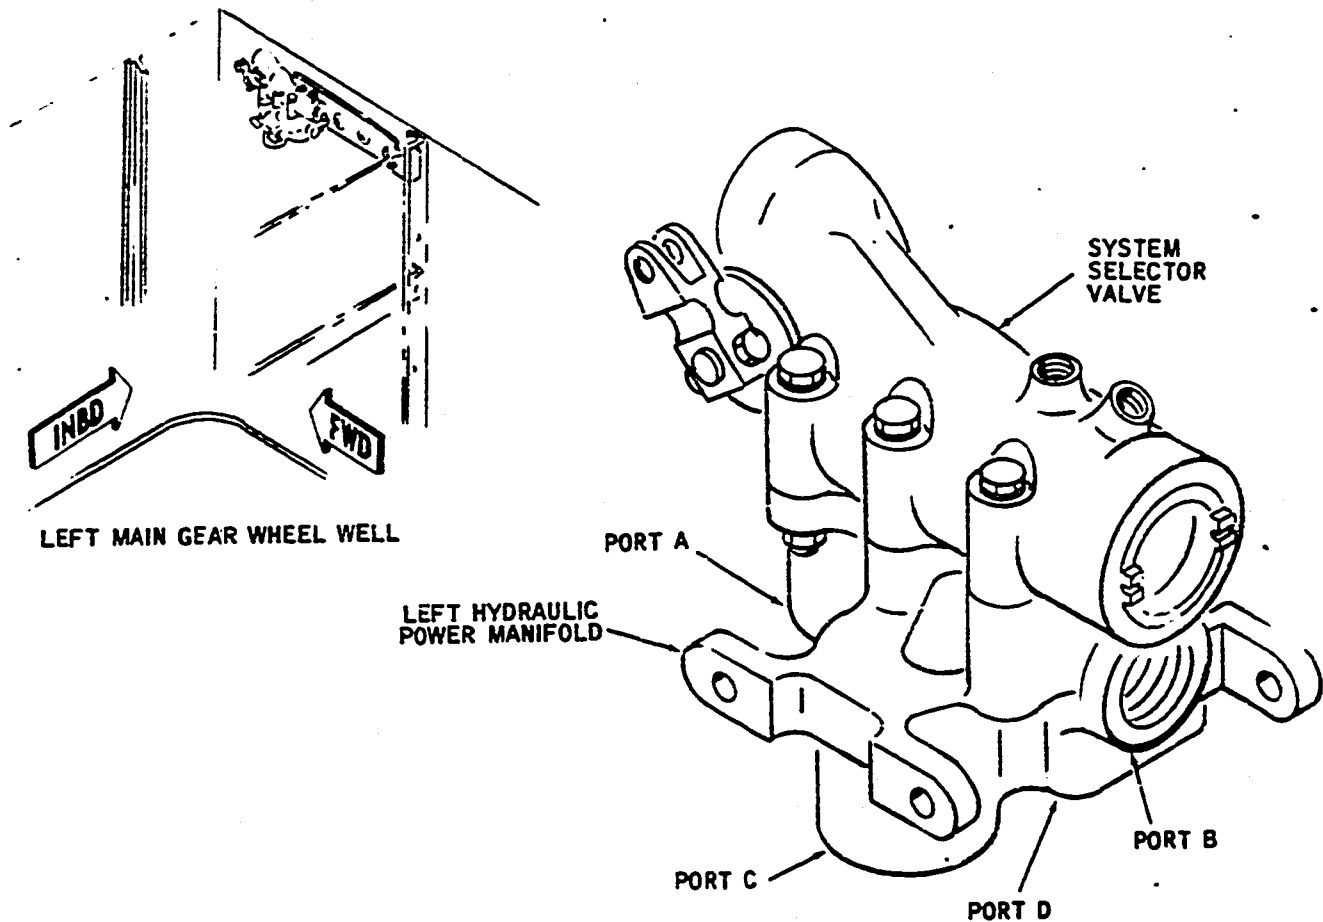

Left Hydraulic Power Manifold — Schematic  
 (Airplanes JA8031-JA8037, JA8040, JA8044,  
 JA8051 and Subsequent)  
 Figure 18 (Sheet 1)

HA2-855

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

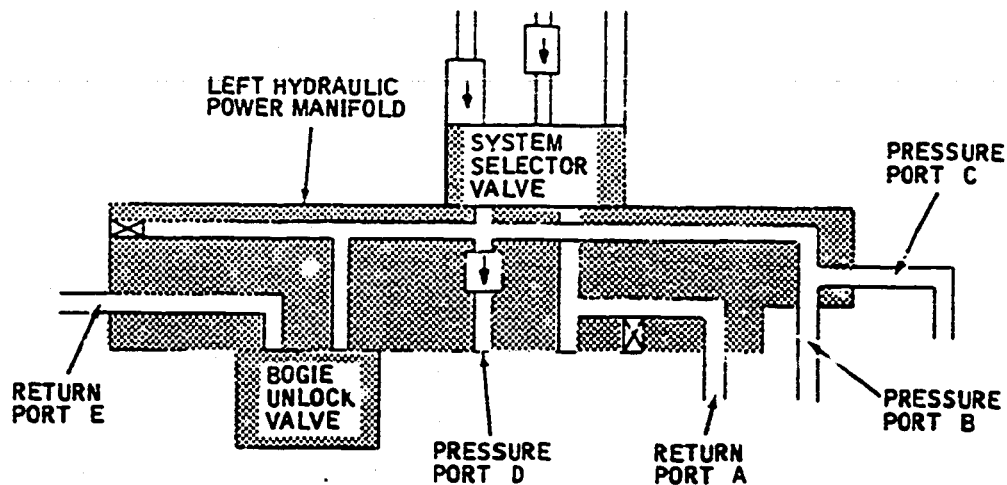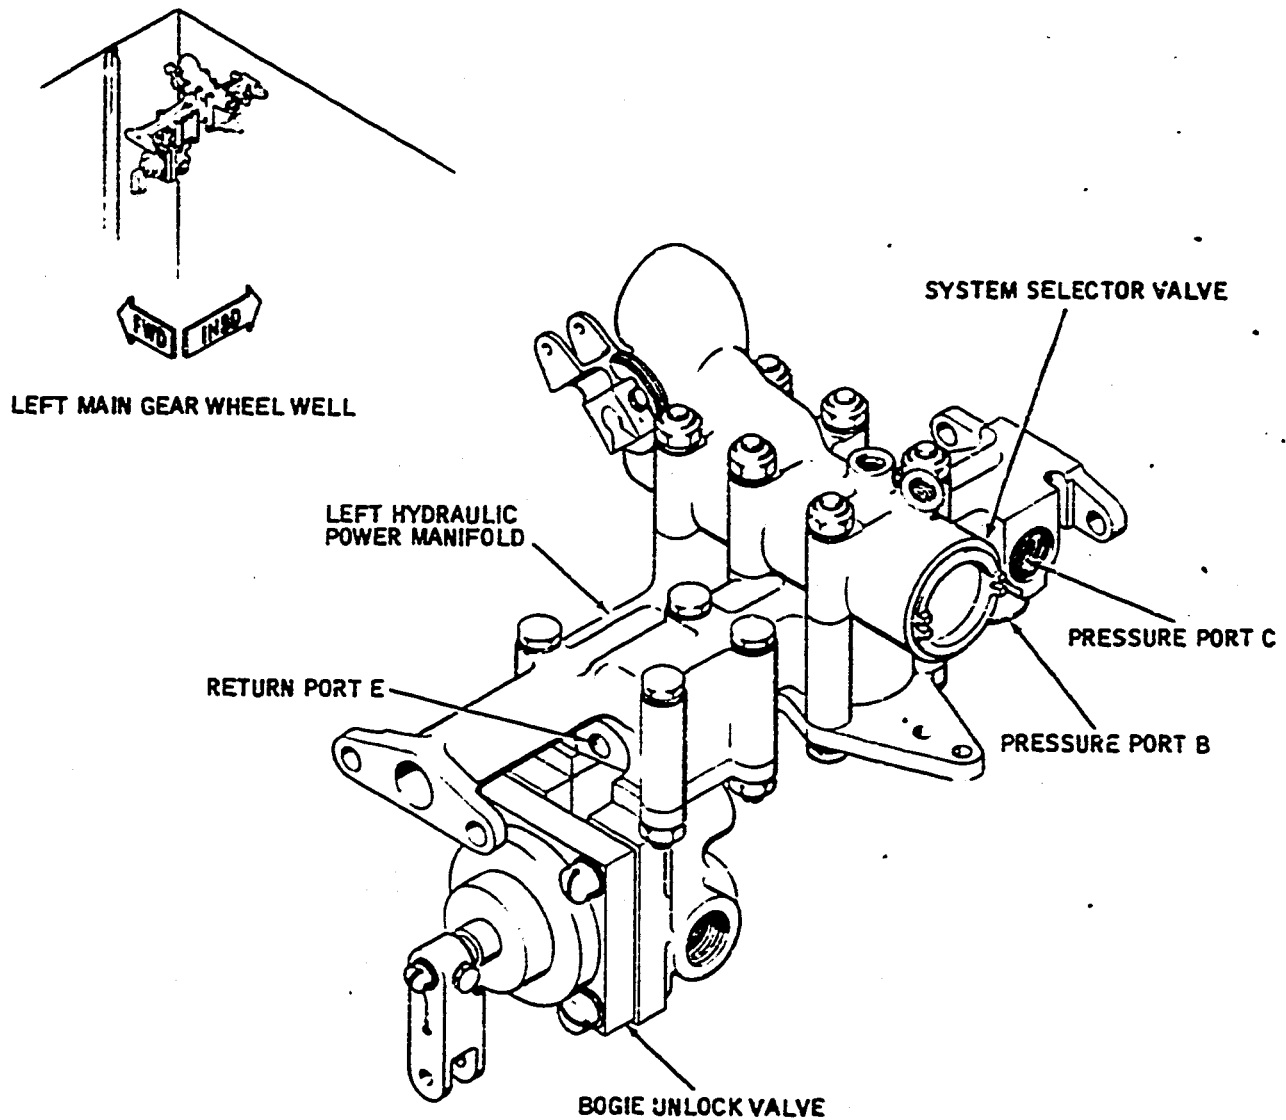


HA2-28

Left Hydraulic Power Manifold -- Schematic  
 (Airplanes JA8038, JA8039, JA8041-JA8043, JA8045-JA8048)  
 Figure 18 (Sheet 2)


May 1/71

29-10-0  
 CODE 20  
 Page 33


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

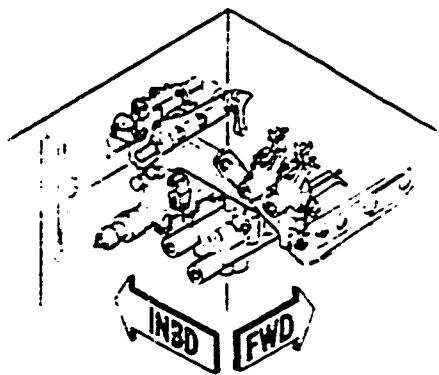

RIGHT MAIN GEAR  
WHEEL WELL

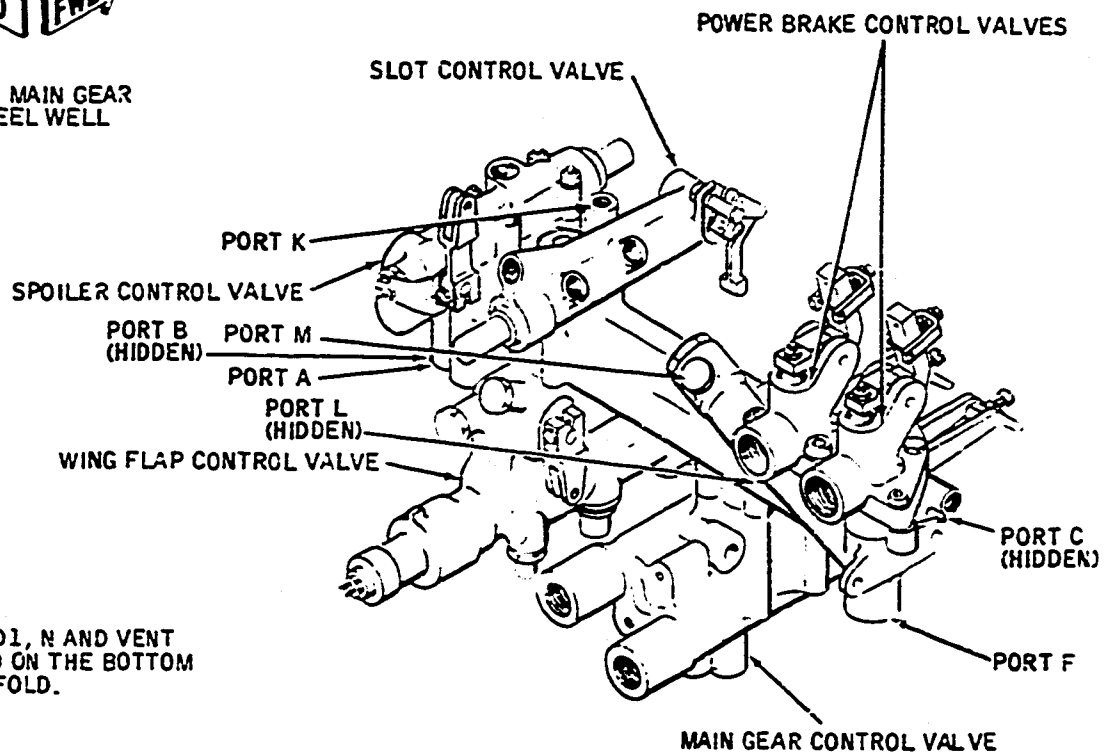

NOTE: PORTS B, C, D<sub>1</sub>, N AND VENT  
ARE LOCATED ON THE BOTTOM  
OF THE MANIFOLD.

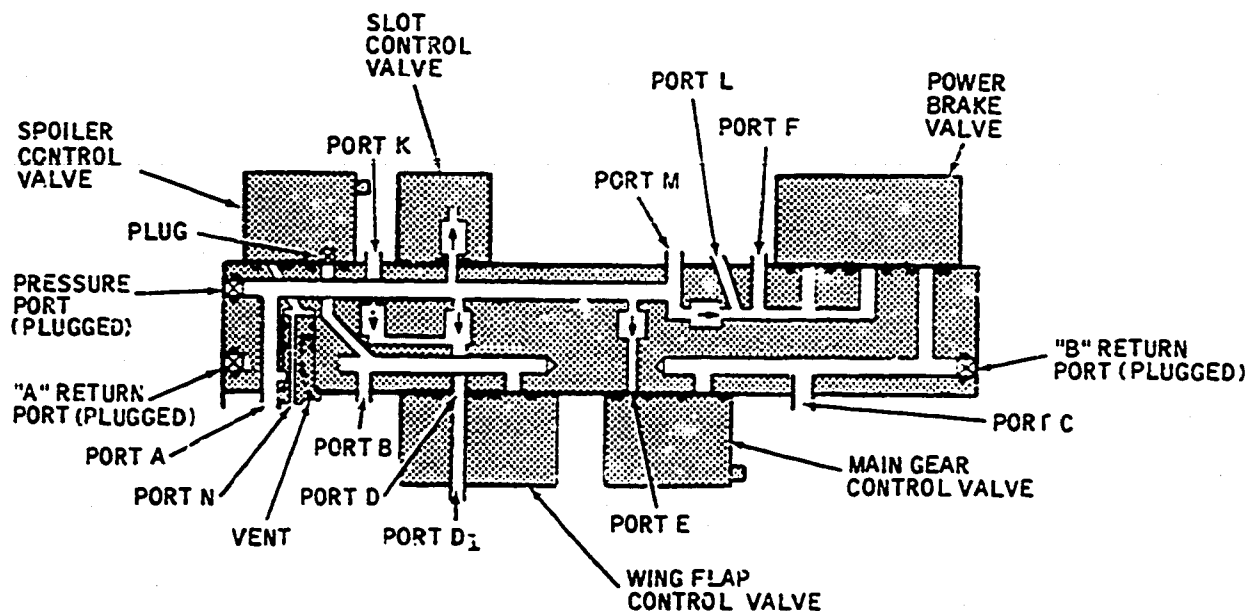

HA2-29A

Right Hydraulic Power Manifold -- Schematic  
 Figure 19



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXT/ SERIES**  
MAINTENANCE MANUAL

in the right wheel well. The manifold is held in place with braces and is accessible through the right main gear inboard door.

- (2) The manifold contains passages for pressure and return fluid distribution, four check valves, ports for pressure and return lines, and mounting pads for the various control valves.
- (3) The right manifold receives fluid pressure from the left manifold. Pressure is ported through check valves to the wing flap control valve, to the slot control valve, to the main gear control valve, to the brake control valve, to the brake pressure transmitter, and to the brake accumulators.
- (4) Auxiliary hydraulic pressure is ported from the alternate port of the system selector control valve into port K in the right manifold. Port K is located inboard of the spoiler control valve. From port K, auxiliary hydraulic pressure is ported through a check valve to the downstream side of the wing flap control valve check valve and into the wing flap control valve for alternate operation of the wing flaps.
- (5) The return passage from the wing flap control valve ports fluid to return port A. The brake control valve return passage ports fluid into return line B through a two-way restrictor. The main gear control valve downline return fluid uses a separate port in the valve, bypasses the manifold, and returns the fluid directly to A return line to the reservoir. The upline in the main gear control valve uses the same return port, return port B, in the manifold as the brake control valve.


R. Hydraulic Manifold Return Check Valves, Airplanes JA8038, JA8039, JA8041-JA8043, JA8045-JA8048 (See Figure 10.)

- (1) The hydraulic manifold return check valve is installed in the hydraulic reservoir A return line to prevent reverse flow of fluid. This check valve is located on the shear web near the dual filter and relief valve. Access to the check valve is through the left main gear inboard door.
- (2) The direction of flow is marked on one surface, and the rating of the check valve (1500 psi) is marked on the other surface.


S. Hydraulic Power System Accumulator (See Figure 20.)

- (1) The hydraulic power system accumulator is a spherical, welded-steel, fluid and air bladder-separated container. The accumulator is installed in the pressure line of the hydraulic power system to provide a reserve supply of fluid under pneumatic pressure and to act as a shock absorber for system pressure surges.
- (2) The accumulator is located immediately aft of the left hydraulic power manifold and is accessible through the left main gear inboard door. It is mounted with two corner brackets and clamp blocks at the upper and lower port fittings.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

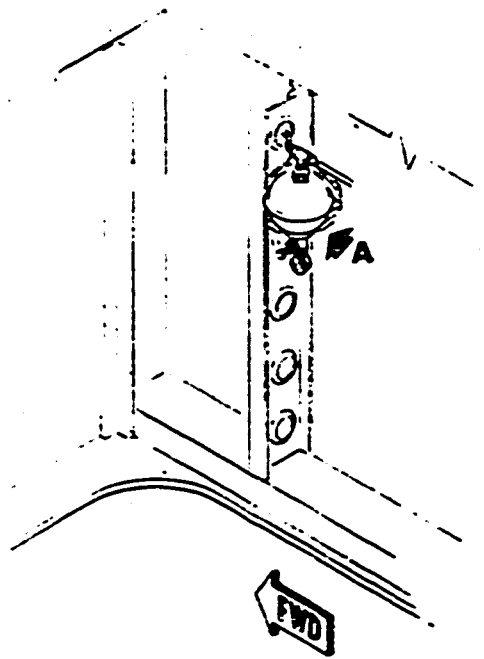

LEFT MAIN GEAR  
WHEEL WELL

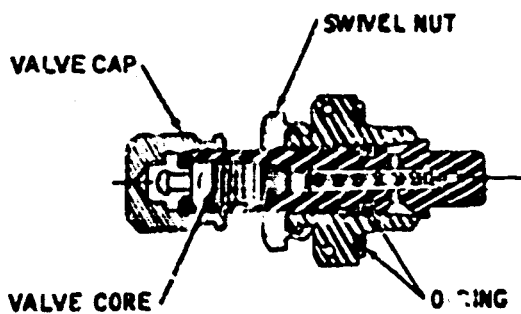

FILLER VALVE

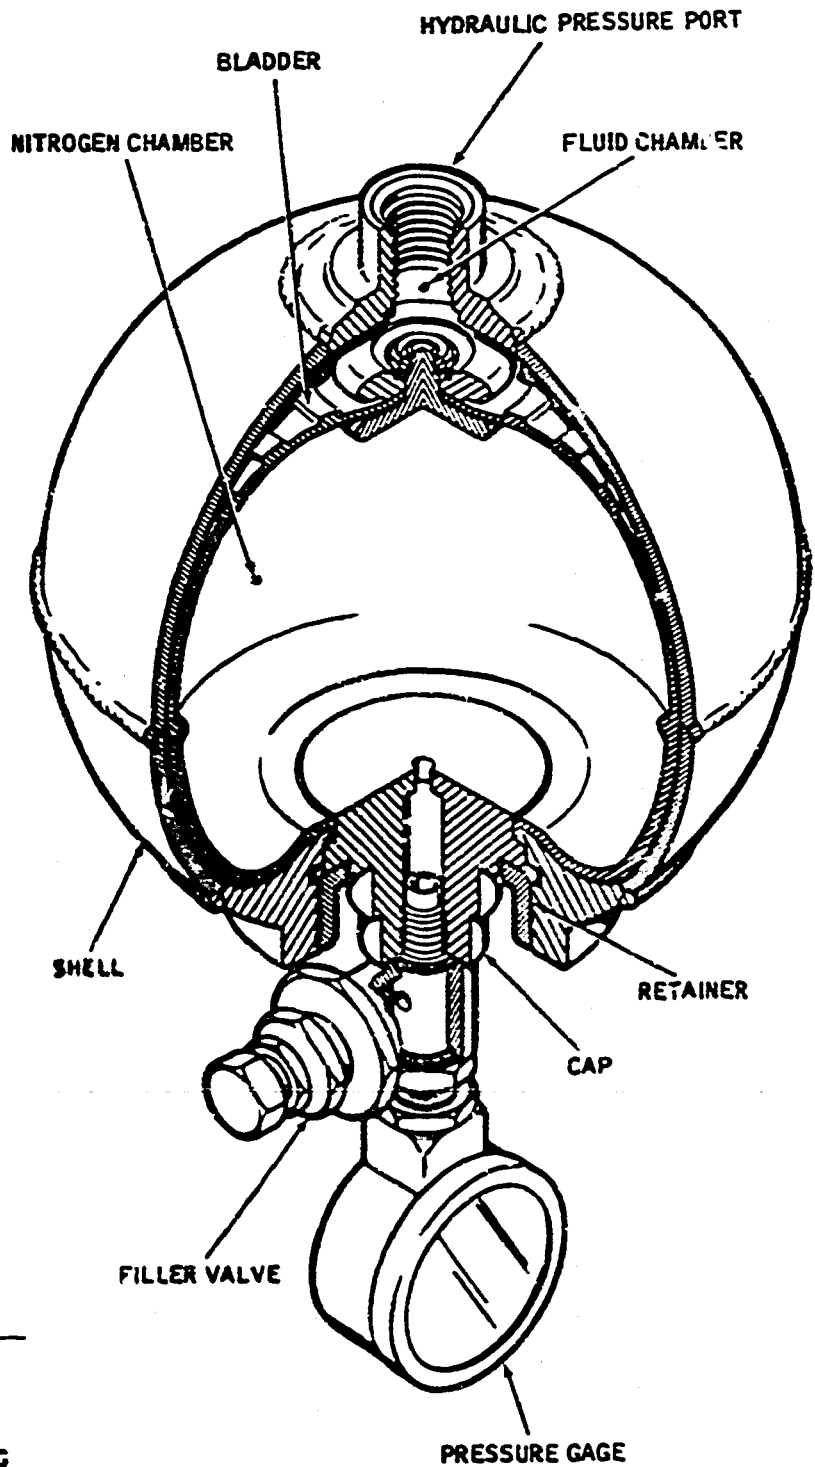

VIEW A

HA2-30

Hydraulic Power System Accumulator -- Cutaway View  
 Figure 20



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The accumulator is installed in the pressure line of the hydraulic power system and is initially charged with 1000 psi of dry nitrogen. As the system pressure builds up, fluid is forced into the upper chamber of the accumulator, further compressing the trapped nitrogen to approximately 3000 psi. With full hydraulic system pressure, 3000 psi is indicated on the pressure gage adjacent to the filler valve. This reserve pressure smooths out any momentary lag in the pump's response to the system's demand for greater fluid flows. The accumulator permits a gradual rise in system pressure, thereby absorbing the shock of pump surges and relieving the piping and system operating units of high-impact loads. When the engine-driven hydraulic pumps are not operating, the accumulator provides system pressure (at a diminishing rate) until a quantity equal to the stored volume in the accumulator has been used by the system.

T. Hydraulic System Priority Valve (See Figure 21.)

- (1) The priority valve is located in the left wheel well near the left hydraulic power manifold. The valve is installed in the hydraulic pressure line, between the two power manifolds, downstream of the pressure supply takeoff port for the flight controls. The priority valve is a balanced relief valve which reserves initial hydraulic pressure (up to 2150 psi maximum) for use in the flight control systems. The valve consists of a body with an inlet, an outlet, and a breather port. Internally, the valve contains a poppet valve plate, a poppet, a poppet valve load-spring, a piston, a piston load-spring, and a piston load-spring housing. The piston load-spring housing chamber is vented to ambient air through a breather hole which is covered by a butyl rubber band.
- (2) The priority valve shuts off hydraulic pressure to all subsystems downstream of the left power manifold, whenever the hydraulic pressure drops below 1700 psi minimum. At this point, the valve closes to reserve the hydraulic pressure for use in the flight control systems, preventing them from reverting to manual operation. When the hydraulic pressure rises to 2150 psi maximum, the priority valve opens and supplies pressure to the right manifold and all subsystem downstream of the priority valve.
- (3) Hydraulic fluid from the left power manifold enters the priority valve through the inlet port, passes through the poppet valve plate holes, and applied pressure against the piston. When sufficient hydraulic pressure is applied to the piston, the piston load-spring compresses, unseating the poppet and permitting full flow through the valve. When the hydraulic pressure decreases to less than the opposing force value of the piston load-spring, the load-spring forces the piston against the poppet and shuts off fluid flow through the valve.
- (4) The maximum flow available from both engine-driven hydraulic pumps is: 44 to 45 gpm at takeoff, climb, and cruise configurations; 26 to 28 gpm at descent, approach, and engine idle configurations.



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

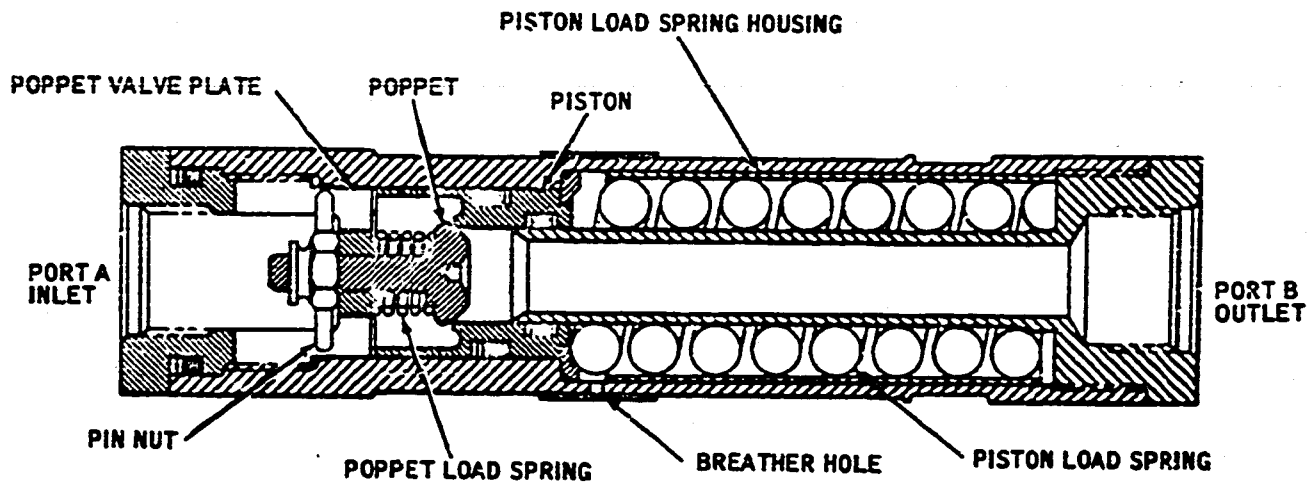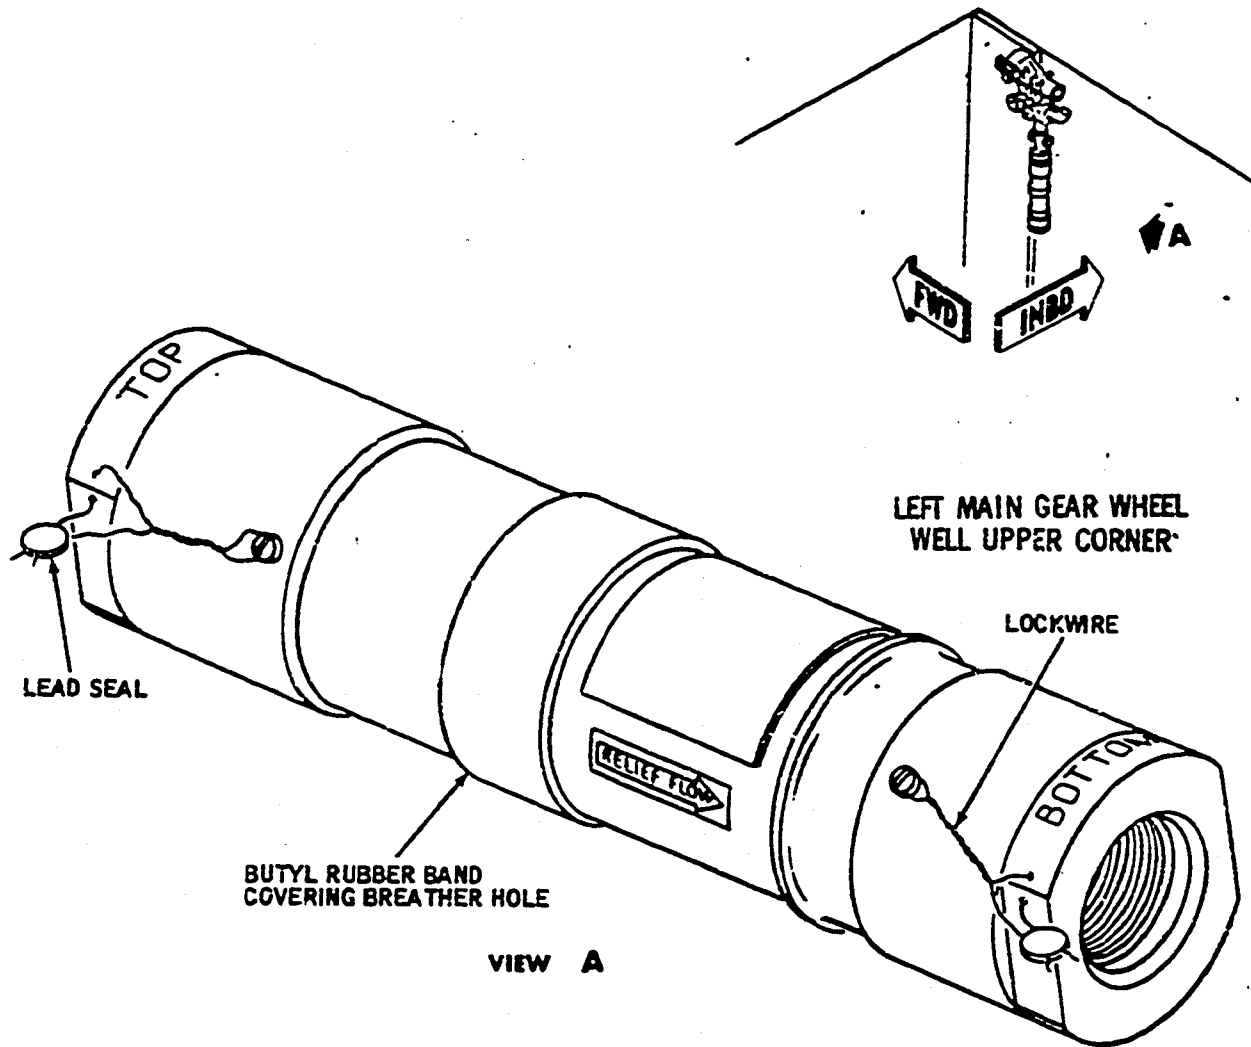

Hydraulic System Priority Valve — Cutaway View  
 (Airplanes JA8031-JA8037, JA8040, JA8044,  
 JA8051 and Subsequent  
 Figure 21 (Sheet 1)

HA2-856

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

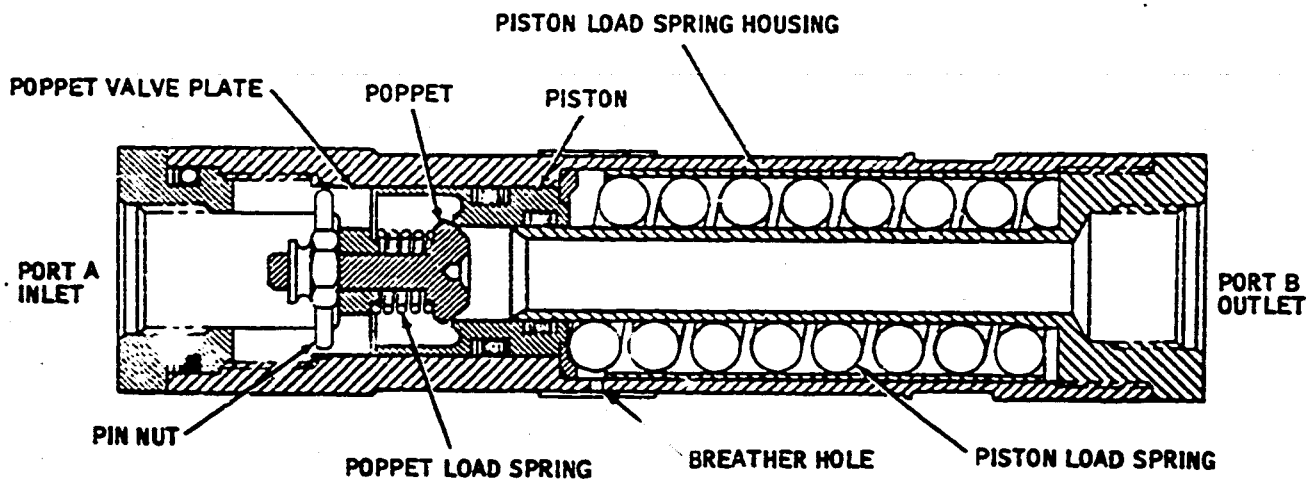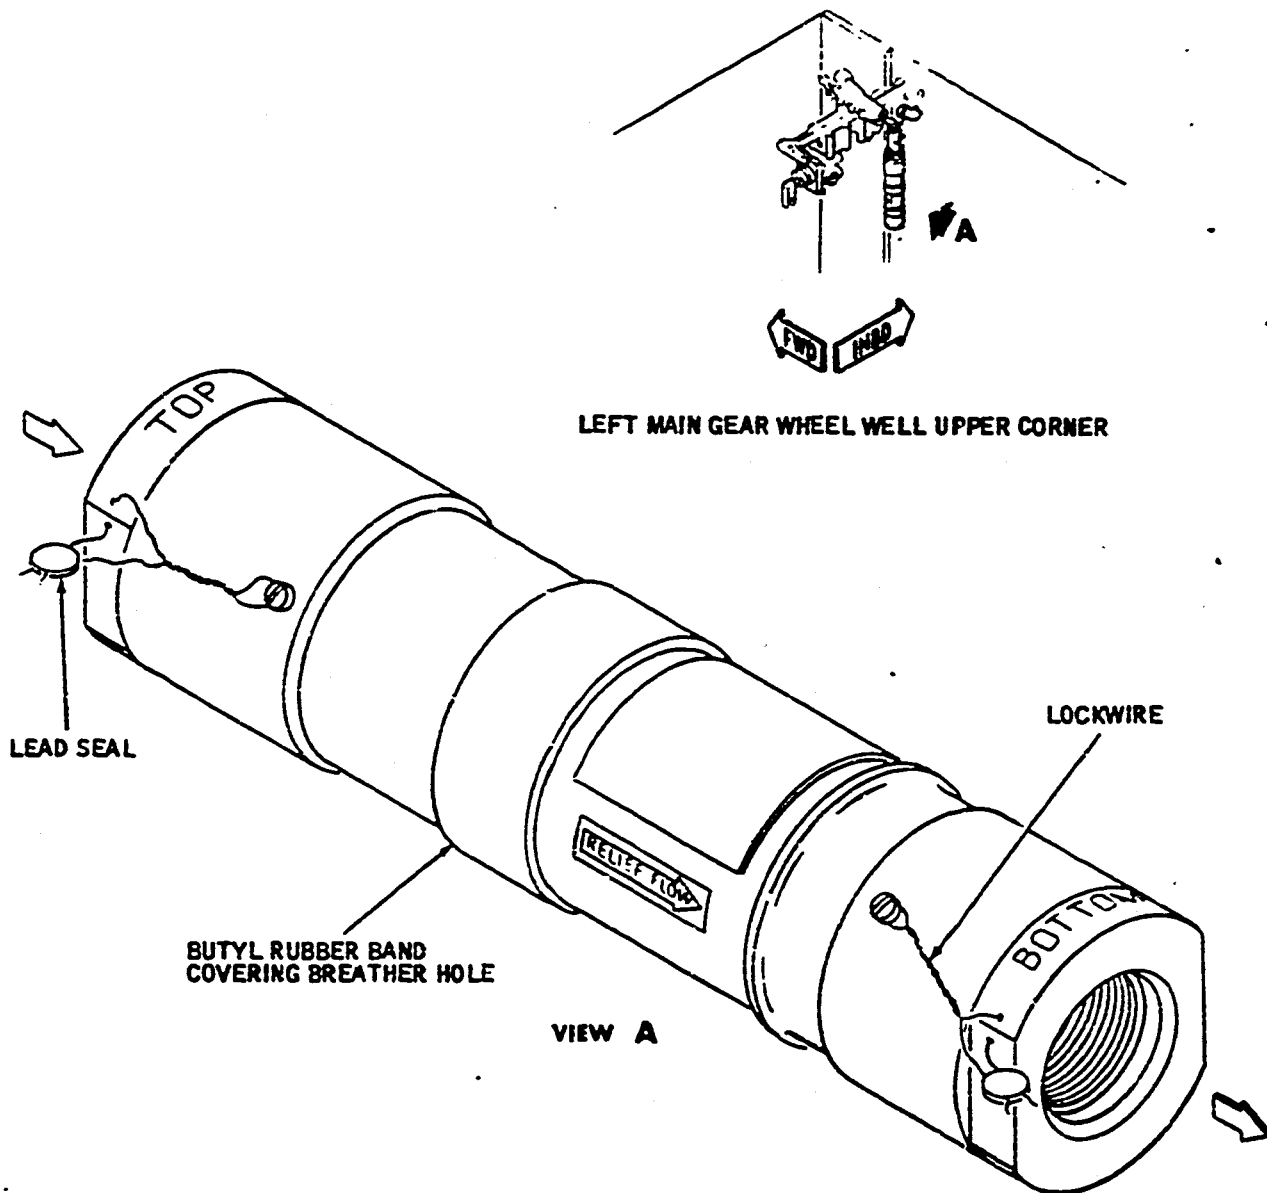

HA2-34

Hydraulic System Priority Valve — Cutaway View  
 (Airplanes JA8038, JA8039, JA8041-JA8043, JA8045-JA8048)  
 Figure 21 (Sheet 2)

May 1/71

29-10-0  
 CODE 20  
 Page 38A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Some of the larger hydraulic system demands are as follows:
- (a) Gear retraction -- 17 gpm (10 - 12 seconds)
  - (b) Gear extension -- 14 gpm (10 - 12 seconds)
  - (c) Wing flaps down -- 8 gpm (10 seconds)
  - (d) Wing flaps up -- 3 gpm (22 seconds)
  - (e) Horizontal stabilizer -- 7 gpm
  - (f) Ailerons -- 17 gpm (25°/second)
  - (g) Rudder -- 3 gpm (25°/second)
- (6) There are various combinations of hydraulic system operations which could cause momentary reversion of the flight controls to manual operation. To prevent reversion to manual operation, the priority valve assures that the left power manifold receives all the hydraulic fluid pressure under conditions of very large flow demands.

**U. Hydraulic System Selector Control Lever**

- (1) The hydraulic system selector control lever is a manually actuated, mechanical lever detented to three positions. The lever provides a mechanical means, through cables, for positioning the system selector valve and the auxiliary hydraulic pump supply selector valve. The hydraulic system selector control lever is located on the system engineer's control pedestal. The lever is attached to a drive sector, located on a common shaft with the other control pedestal sectors. The lever and sector are accessible through the cover plates on the system engineer's pedestal.
- (2) To put the hydraulic power system in the bypass condition, the system selector control lever is lifted out of detent and moved to bypass/general system position. At the same time, the cable moves the sector and pushrod of the system selector valve to the No. 1 position. The pushrod positions the system selector valve to the No. 1 bypass position. At the same time, the cables from the system selector valve sector move the auxiliary pump supply selector valve sector to No. 1 (auxiliary) position. The auxiliary pump supply selector valve remains in the auxiliary supply position through the idle feature of the sector rigging. In this condition, the engine-driven pump pressure is ported to the reservoir and the auxiliary pump supplies pressure to the general system. In this position, the fluid is supplied to the auxiliary pump from the low standpipe in the hydraulic system reservoir. To put the system into the alternate condition, the selector control lever is lifted out of detent and moved to the general system/main gear down lock and flaps position. The cables move the system selector valve sector to the No. 3 (alternate) position. The system selector valve sector moves the cables rotating the auxiliary pump supply selector

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

valve sector to the No. 3 (alternate) position. As the sector rotates, the end of the arm moves away from the idle position. This positions the valves to the alternate position, supplying fluid to the auxiliary pump from the auxiliary pump alternate reservoir. In this position, fluid from the auxiliary pump is ported to the wing flap control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported to the general system.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - DESCRIPTION AND OPERATION

1. General

A. Description (See Figures 1 and 2.)

- (1) The hydraulic power system receives fluid pressure from the engine-driven hydraulic pumps, one installed on each inboard engine. The electrically driven auxiliary pump is used to supplement the engine-driven pumps, or to independently supply the system with fluid pressure.
- (2) The hydraulic system reservoir, located in the left wing root, has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir is used for fluid, and 1/10 is used for foam space. A separate air chamber is installed in the reservoir system to provide for a greater fluid capacity in the main reservoir. A reservoir filler assembly is installed in the piping between the reservoir and the air chamber and has a vent line from the filler neck to the tee at the top of the reservoir sight gage. The reservoir is pressurized to 30 to 35 psi by bleed pressure from the engine-driven pumps through an air pressure regulator-aspirator.
- (3) The engine-driven pumps receive fluid from the pressurized main reservoir through respective engine hydraulic fire shutoff valves. The engine hydraulic fire shutoff valves are normally open and can be mechanically controlled from the flight compartment. The pumps supply fluid pressure through respective check valves to the dual filter and relief valve. Some of the fluid from the filter is ported through the regulator-aspirator to pressurize the reservoir. Most of the fluid is routed through a check valve to the system selector valve, and then to the left and right hydraulic power manifolds. The manifolds distribute the fluid pressure to the subsystems.
- (4) Hydraulic fluid is normally supplied to the auxiliary hydraulic pump from a low standpipe in the main reservoir. During alternate operation, the auxiliary hydraulic pump receives fluid supply from the auxiliary pump alternate reservoir, which is located just aft of the auxiliary pump. From these reservoirs, the fluid is ported through the auxiliary pump selector valve which is mechanically controlled from the flight compartment by the system selector control lever. When operating, the auxiliary hydraulic pump supplies fluid pressure to the subsystems through the system selector valve which is also controlled by the system selector control lever in the flight compartment. A filter and check valve are installed in the line from the auxiliary pump to the system selector valve.
- (5) An accumulator is installed in the pressure line to the subsystems to provide a reserve supply of fluid and to act as a surge damper for the system.




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Engine-driven pump fluid pressure is routed through the system selector valve to the left power manifold, where it is distributed to some of the subsystems and through the priority valve to the right power manifold. Fluid pressure from the right power manifold is distributed to the remaining subsystems.
- (7) The priority valve is a spring-loaded, poppet-type, balanced relief valve installed in the line downstream of the left power manifold. The priority valve's function in the system is to prevent the flight control systems from reverting to manual operation during high demands on the hydraulic system.
- (8) A fluid pressure transmitter, located in the nosewheel well, senses the system pressure, which is indicated on the hydraulic system pressure indicator in the flight compartment.

**B. Normal Operation**

- (1) Fluid is supplied to the hydraulic system from the pressurized hydraulic system reservoir. For operation of the hydraulic system under normal conditions, 8.1 US gallons (6.7 Imperial gallons; 30.6 liters) of hydraulic fluid are available to the engine-driven hydraulic pumps, and 12.7 US gallons (10.7 Imperial gallons; 48.8 liters) are available to the auxiliary hydraulic pump. Supply lines from the main reservoir carry fluid to each inboard pylon through normally open engine hydraulic fire shutoff valves to the engine-driven hydraulic pumps. Fluid is supplied to the auxiliary hydraulic pump from the main reservoir through a low standpipe at the base of the reservoir. Fluid is carried from the reservoir through the auxiliary pump selector valve to the auxiliary hydraulic pump.
- (2) The engine-driven hydraulic pumps supply full system pressure (3000 psi nominal) at any given engine speed, from idle to full power. The output flow of the pump is varied by sensing pressure from the outlet side of the pump. Each engine-driven pump contains a solenoid-operated bypass valve which, when energized, bypasses the pressure control regulator of the pump and ports fluid to the pump yoke control piston which feathers the pump. When the pump is feathered, flow rate is reduced to almost zero (1.0 gpm) and to a pressure of approximately 300 psi. Half of this flow maintains pump lubrication and cooling through internal leakage. This leakage is returned, through a check valve, the engine-driven pump case drain line filter, and another check valve to the case drain return port of the reservoir. The pressure fluid from each pump passes through a check valve to the dual filter and relief valve.
- (3) The fluid enters the dual filter and relief valve through the relief valve chamber. The fluid is passed through the filter element, through a manifold, and through a common outlet port. Fluid from the outlet port is routed through a check valve to the system selector valve. If back pressure in the system builds up to approximately 3300 psi, the relief valves in the dual filter and relief valve open and port fluid

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

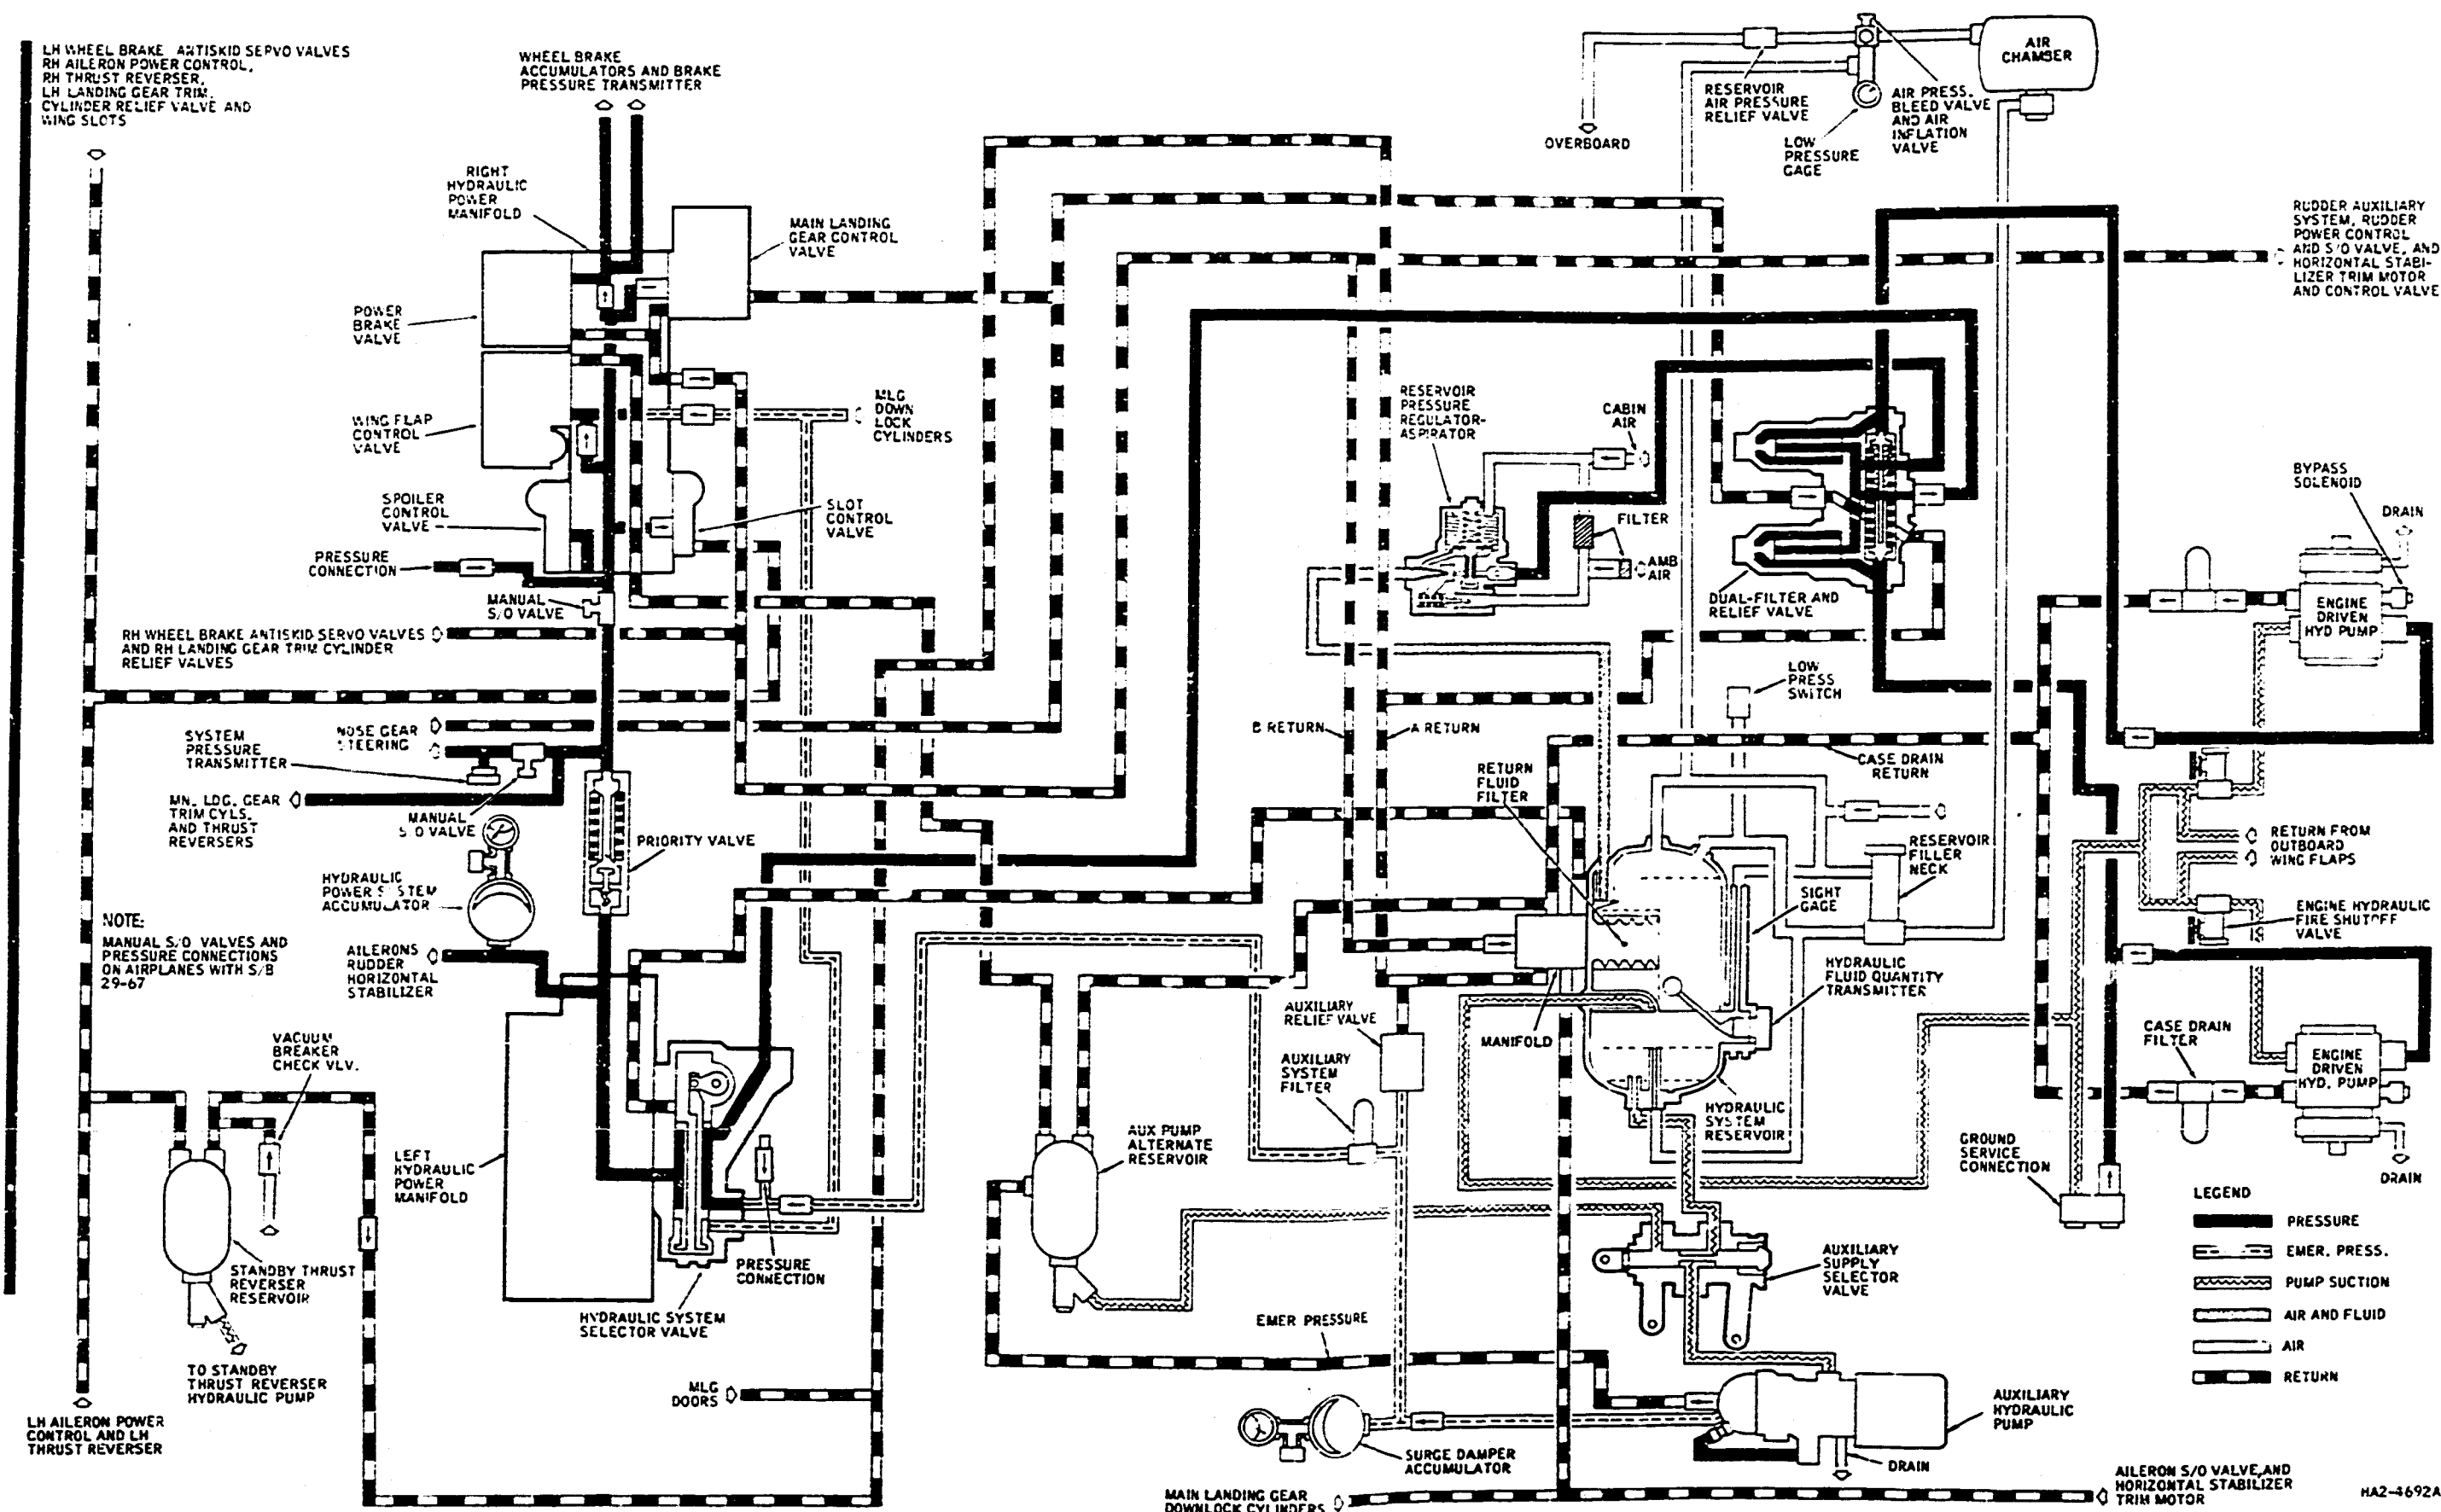


Hydraulic Power System -- Schematic Diagram  
 Figure 1

Nov 1/69

Printed in U.S.A.

29-10-0  
 CODE 21  
 Page 3

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

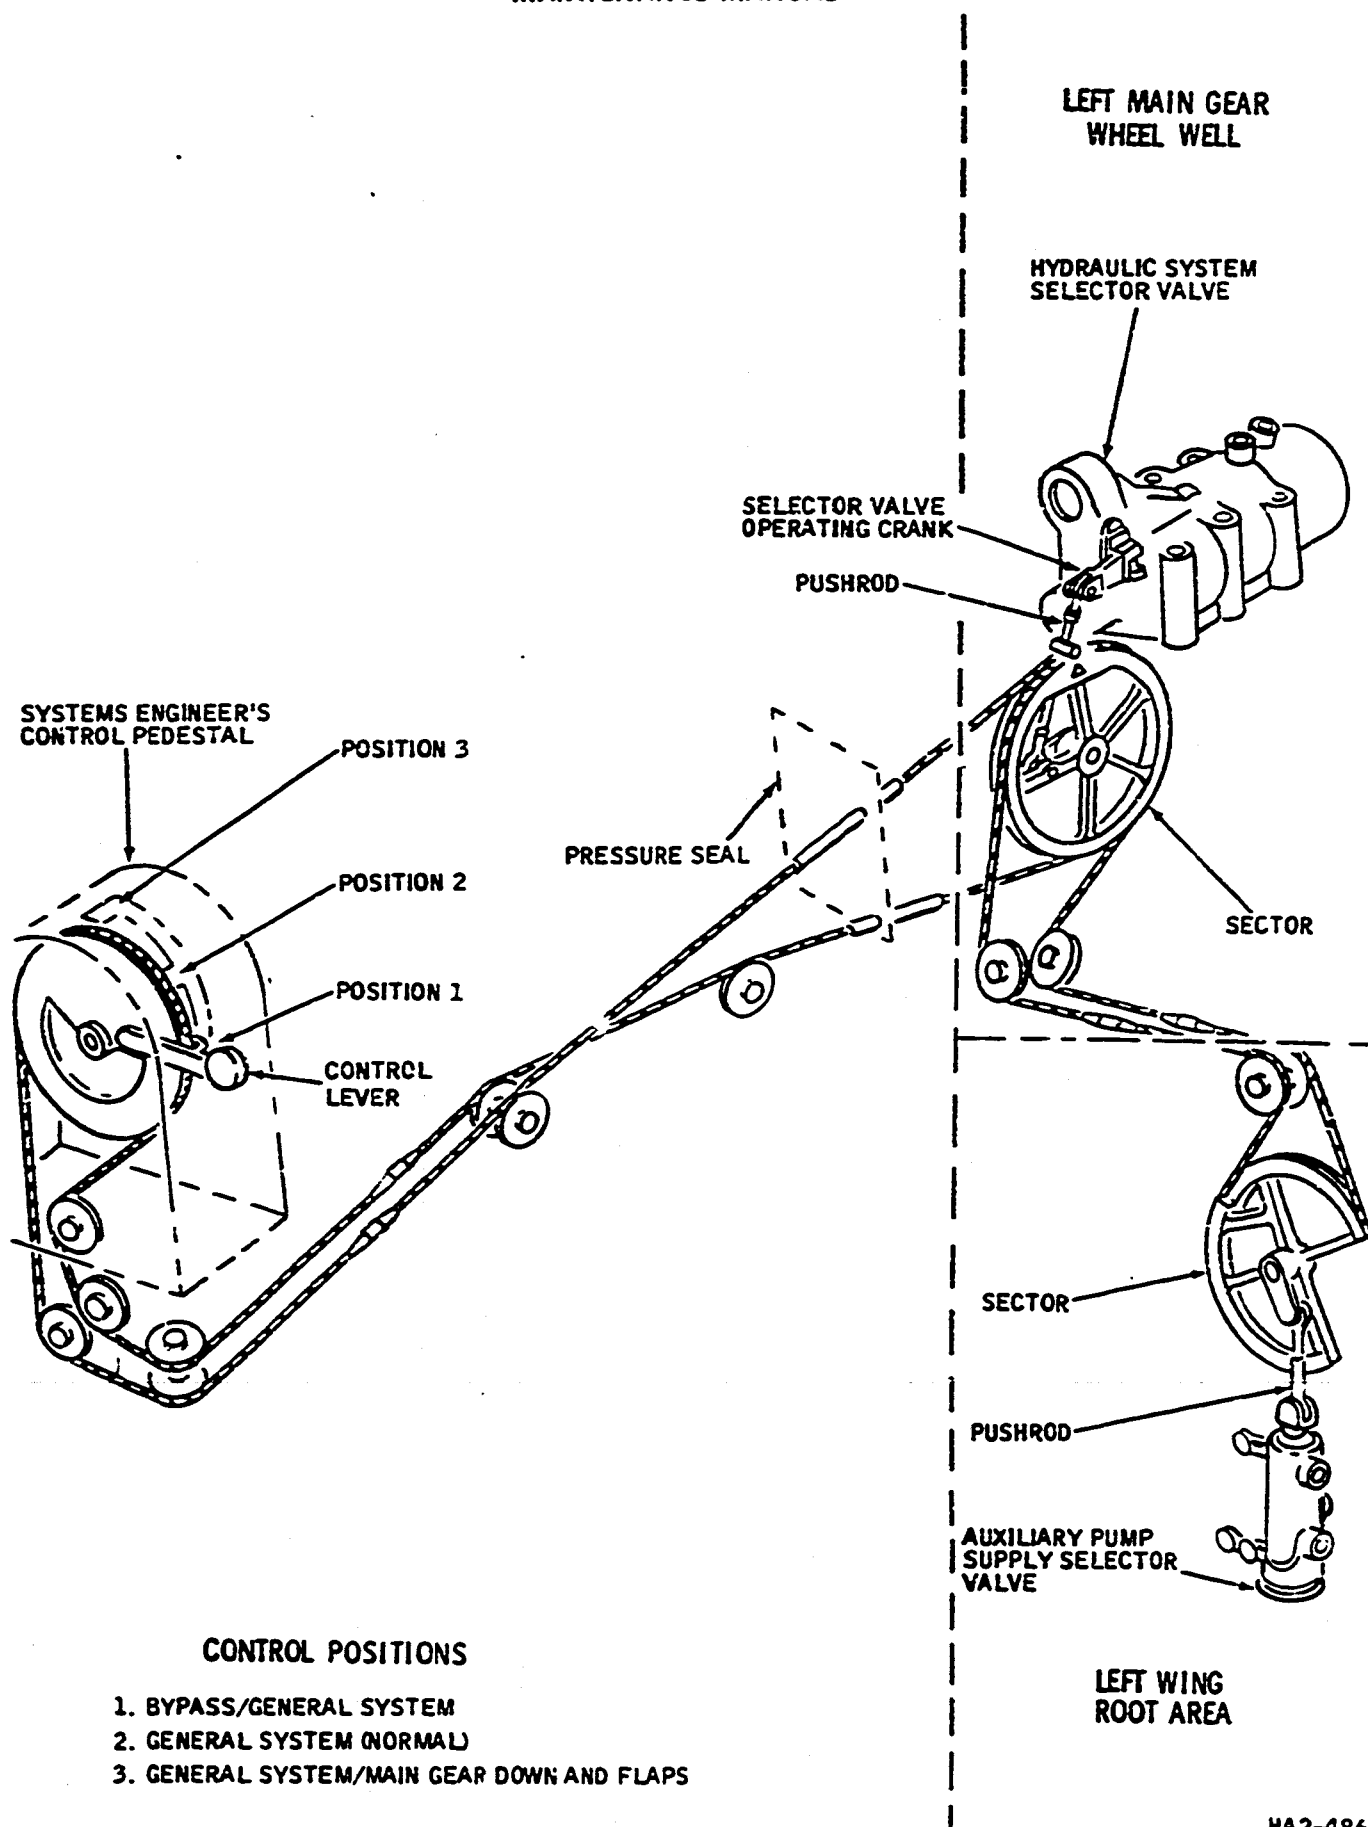

Hydraulic System Selector and Auxiliary Pump Supply  
 Selector Valves -- Mechanical Control Schematic  
 Figure 2

HA2-486

Jan 15/68

Printed in U.S.A.

29-10-0  
 CODE 21  
 Page 5

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

back to the reservoir via a return port. The relief valve poppet closes again when system pressure drops to approximately 3000 psi.

- (4) The aspirator receives filtered fluid (bleed pressure at nominal 3000 psi) from the dual filter and relief valve. The aspirator operates on the jet pump principle. Hydraulic fluid is atomized and mixed with air within the unit by a nozzle and a venturi. The mixture is used to pressurize the reservoir and reservoir air chamber. The regulator diaphragm maintains a pressure range of 30 to 35 psi in the reservoir and air chamber. If there is a regulator malfunction, the aspirator stalls when the outlet pressure reaches a maximum of 40 psi. A reservoir relief valve in the reservoir vent line relieves thermal expansion pressure above 45 (+5, -0) psi.
- (5) Pump pressure fluid enters the system selector valve through the system pressure inlet port. When the pump selector control lever is in the general system (normal) position, fluid is ported to the pressure passages of the left power manifold. The fluid pressure in the left power manifold is ported through the priority valve to the nose gear and the right power manifold and directly to the following valves:
  - (a) Aileron power shutoff
  - (b) Rudder power shutoff
  - (c) Longitudinal trim hydraulic motor shutoff.
- (6) The right power manifold distributes fluid pressure to the brake accumulators, the pressure transmitter, and the following control valves:
  - (a) Wing flap
  - (b) Slot
  - (c) Main gear
  - (d) Power brake.
- (7) The return fluid from the wing flap control valve is ported through the right power manifold and into the auxiliary hydraulic pump alternate reservoir. Return fluid from the outboard wing flaps is piped into the suction lines for each engine-driven hydraulic pump. Return fluid from the slot control valve is ported into the A return line to the main reservoir. The power brake and main gear control valve gear up return fluid is ported through a restrictor check valve into the B return line to the reservoir. The main gear control valve gear down return pressure bypasses the right manifold and returns to the reservoir through the A return line. All return fluid entering the reservoir is filtered through the return ports filter located within the reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

C. Bypass Operation

- (1) The output of the engine-driven hydraulic pumps is bypassed by moving the system selector control lever out of the general system (normal) position to the bypass/general system position.
- (2) The system selector valve in the bypass position ports engine-driven pump pressure from the dual filter and relief valve directly to the return passage of the left power manifold. From the manifold the fluid is ported directly to a tee in the wing flap return port of the hydraulic system reservoir. In the bypass condition, the auxiliary hydraulic pump receives fluid from the hydraulic system reservoir, pressurizes it to system pressure and ports it to the left and right power manifolds for distribution to the subsystems.

D. Alternate Operation

- (1) When both engine-driven hydraulic pumps and the auxiliary hydraulic pump are rendered inoperative due to the loss of the normal supply of fluid, the hydraulic power system can be rigged for alternate operation. This is accomplished by placing the system selector control lever in the general system/main gear downlock and flaps position. When the system selector control lever is in this position, the auxiliary hydraulic pump supply selector valve is positioned to supply fluid from the auxiliary pump alternate reservoir to the auxiliary pump.
- (2) Fluid is supplied to the auxiliary pump from the outlet port of the auxiliary pump supply selector valve. Output pressure is ported through the auxiliary system filter and check valve to the auxiliary pressure inlet port of the system selector valve.
- (3) In the general system/main gear downlock and flaps position, auxiliary pump pressure bypasses the manifold pressure passages and is ported from the alternate outlet port of the system selector valve. Fluid from this port flows directly to a port on the right power manifold, through an internal check valve in the manifold, to the wing flap control valve.

E. Mechanical Control

- (1) The hydraulic power mechanical control system consists of the hydraulic system selector control lever cable drum, the system selector valve sector, the system selector valve, the auxiliary hydraulic pump supply selector valve sector, and the auxiliary hydraulic pump supply selector valve.
- (2) The control lever located on the system engineer's control pedestal is used to position the system selector valve and, in turn, the auxiliary hydraulic pump supply selector valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (3) The control lever is spring loaded into general system (normal) position, and is connected to the control lever cable drum. Two cables run from the drum, under the cabin floor, aft through the pressure bulkhead at the rear wing spar, and into the left wheel well to the system selector valve sector. A pushrod connects the sector to the positioning lever of the system selector valve.
- (4) A second set of cables is routed from the system selector valve sector into the left wing root to the auxiliary hydraulic pump supply selector valve sector. When the system selector valve is in either bypass or normal, the auxiliary hydraulic pump supply selector valve sector is arranged so that the pushrod idles between the two positions. This allows the valve to remain in the auxiliary position. When the sector is moved to the alternate position, the pushrod is pulled by the sector to reposition the valve to the alternate position.
- (5) The control lever is normally in the general system (normal) position. To move the system selector valve to the bypass position, the control lever is moved to the bypass/general system position. When the system selector valve is moved to the bypass position, the auxiliary hydraulic pump supply selector valve sector is moved to a new position. Due to the idle feature on the auxiliary sector, the valve remains in the auxiliary position. With the valve in this position, fluid is supplied to the auxiliary pump through the low standpipe in the hydraulic system reservoir. In this condition, engine-driven pump pressure is ported to the reservoir and the auxiliary pump pressure is ported to the general system.
- (6) To put the system in alternate operation, the control is moved to the general system/main gear downlock and flaps position. This moves the system selector valve to the alternate position, and simultaneously moves the auxiliary hydraulic pump supply selector valve to the alternate position. Fluid is supplied to the auxiliary pump from the auxiliary hydraulic pump alternate reservoir. Fluid pressure from the auxiliary pump is ported to the flap system control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported from the system selector valve to the general system.

## 2. System Components

### A. Hydraulic System Reservoir (See Figures 3 and 4.)

- (1) The hydraulic system reservoir is installed on the aft side of the wing spar in the left wing root and is accessible through the left wing root access door. The hydraulic system reservoir serves as the main source of hydraulic fluid for the engine-driven hydraulic pumps and the normal supply for the auxiliary hydraulic pump. The reservoir is cylindrical in shape and contains a filter, baffle, and a screen cover encasing the filter. The filter prevents foreign particles from contaminating the fluid supply. Mountings are provided on the exterior surface of the reservoir for return line ports, aspirator port, electrical sensing units, sight gage, instruction placards, magnetic drain plug, and system supply ports.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

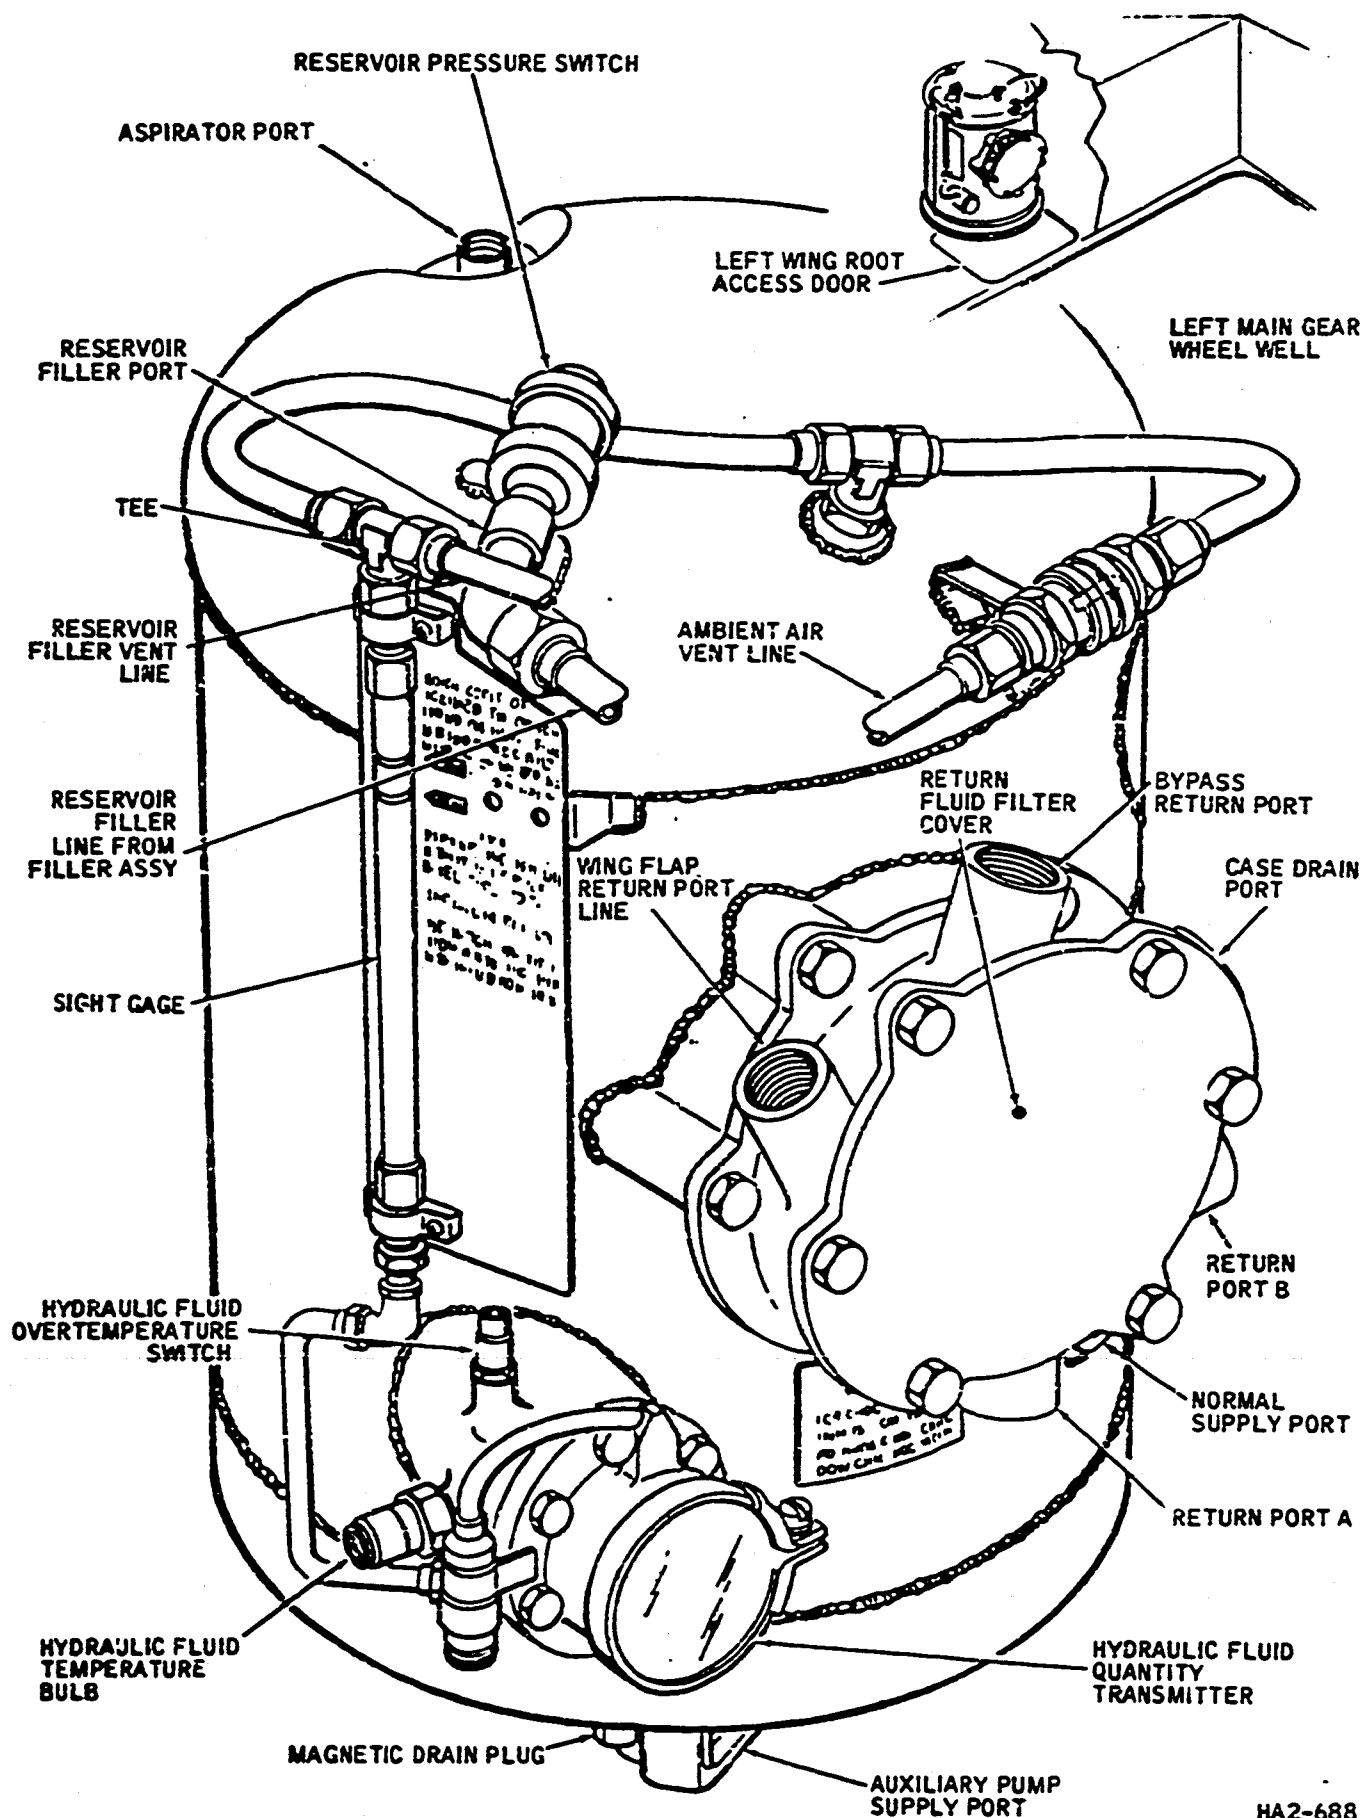

HA2-688


Hydraulic System Reservoir -- External View  
 Figure 3

29-10-0  
 CODE 21  
 Page 9

Jan 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

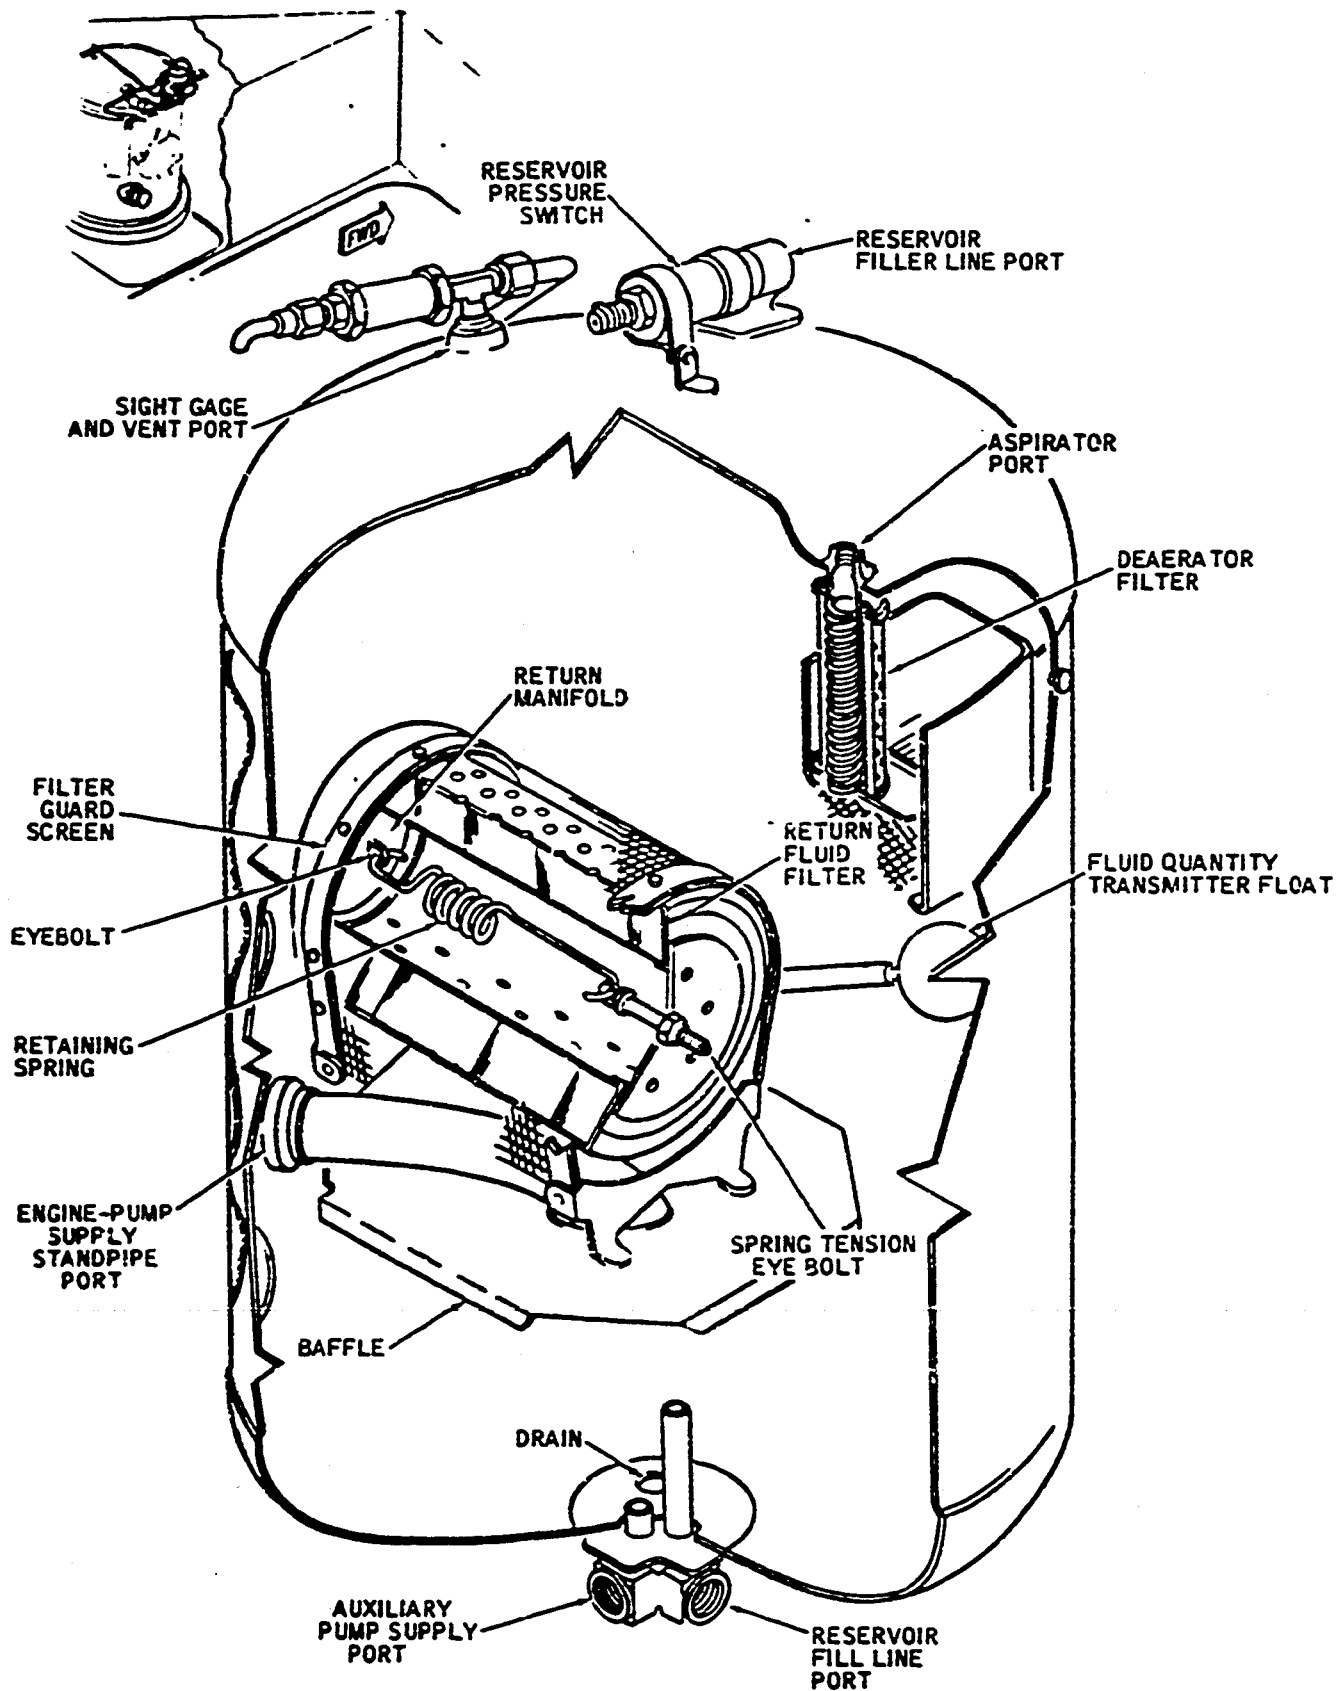

HA2-689

29-10-0  
 CODE 21  
 Page 10

Hydraulic System Reservoir -- Cutaway View  
 Figure 4

Printed in U.S.A.

Jan 15/68



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The reservoir is pressurized with air from the regulator-aspirator to a range of 30 to 35 psi and has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir volume is used for fluid and 1/10 is used for foam space.
- (3) The aspirator port through which the reservoir is pressurized is located in the recess on top of the reservoir. An aspirator-deaerator filter is supported in the reservoir by a screen and support box assembly which is mounted to the reservoir wall by two bolts.
- (4) The mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The return ports manifold is an open-centered ring, flanged at both sides and provided with five fluid ports around its circumference; return port A is located at the bottom, return port B is located at the lower right side, the wing flap return port is located at the upper left side, and the system selector valve bypass port is located at the top. One flange of the manifold is mounted with six bolts to the mounting flange on the reservoir. The return fluid filter cover fits into the open side of the manifold, and is attached to the outer manifold flange with six bolts to form a fluid-tight cover for both the manifold and the filter.
- (5) The return fluid filter is installed in the reservoir, behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the return fluid filter cover holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to the engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
- (6) A flanged adapter for the fluid quantity transmitter is welded to the reservoir below and to the left of the return ports manifold. The adapter is provided with two small port bosses for the hydraulic fluid temperature bulb and the hydraulic fluid overtemperature switch. The lower end of the sight gage connects to a third port in the adapter, while the top of the sight gage tees into a port at the top of the reservoir. An instruction plate is mounted behind the sight gage and the vacuum breaker check valve tees into the port at the top of the reservoir that is used by the sight gage.

**B. Hydraulic Reservoir Return Fluid Filter (See Figure 4.)**

- (1) The reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply. The filter is located behind the return ports manifold, and is spring loaded to act as its own relief valve. Access to the filter is by removing the return fluid filter cover from the return ports manifold by removal of six bolts. The filter is attached by the retaining spring to the cover and is withdrawn from the reservoir when the cover is removed.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Externally, the filter consists of two perforated concentric tubes. The area between the tubes is closed by metal end caps which are bonded to the two tubes. A resilient rubber gasket is bonded to each of the caps. Each gasket must be smooth and flat for proper sealing of the filter. The gaskets act as a static seal and a relief valve seat.
- (3) Internally, the filter has a 10-micron, resin-impregnated convoluted paper-type filter element. The area of the filter element is approximately 1960 square inches. The filter is held in place by a retaining spring. One end of the spring is attached to an eyebolt located inside the return port's manifold cover. The spring passes through the center chamber of the filter and is connected to another eyebolt. This eyebolt is secured to a large washer and plate by means of a self-locking nut. The washer seats on the rubber gasket which is bonded to the filter. The fluid enters the center chamber of the filter and passes through the inner tube of the filter to the filter element by means of perforation holes. Foreign matter is filtered out by the filter element, and the fluid leaves the element through perforation holes in the outer tube. When the element becomes saturated with foreign matter, the filter acts as its own relief valve and unseats at 20 to 25 psi above normal return pressure which allows fluid to bypass the filter and enter the reservoir.

C. Hydraulic Reservoir Air Pressure Regulator-Aspirator (See Figure 5.)

- (1) The reservoir air pressure regulator-aspirator is a jet-type air pump, regulated by a pressure-sensitive shutoff valve. The unit pressurizes the hydraulic reservoir with air to the operating pressure range of 30 to 35 psi. The regulator-aspirator is located on the top inboard side of the reservoir and is mounted on the reservoir retainer ring. Access to regulator-aspirator is through the left wing root access door.
- (2) The regulator-aspirator assembly consists of a main aspirator body and a regulator housing. The main aspirator body has two inlet ports and one outlet port. The ports are permanently identified inlet, outlet, and air inlet. The plug for an air check valve is located near the outlet port. A chemically treated paper filter is installed near the aspirator body air inlet port in the air line from the pressurized cabin area. A metal screen filter is installed on the check valve which tees into the aspirator body air inlet port.
- (3) The reservoir air pressure regulator-aspirator operates basically with a jet pump action which is regulator controlled. Fluid enters the assembly through the fluid inlet port where it is filtered and then ported through the valve assembly of the regulator. During normal operation, when air pressure at the outlet port is under 30 psi, the valve is open, porting fluid to the nozzle. The orifice in the nozzle sprays the fluid through the venturi of the outlet port, creating a vacuum in the chamber around the venturi. When the vacuum becomes great enough to create a pressure differential of approximately 1 psi, ambient air opens the air check valve. The air is ported to the chamber around the venturi and is siphoned, with the fluid, through the outlet port.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

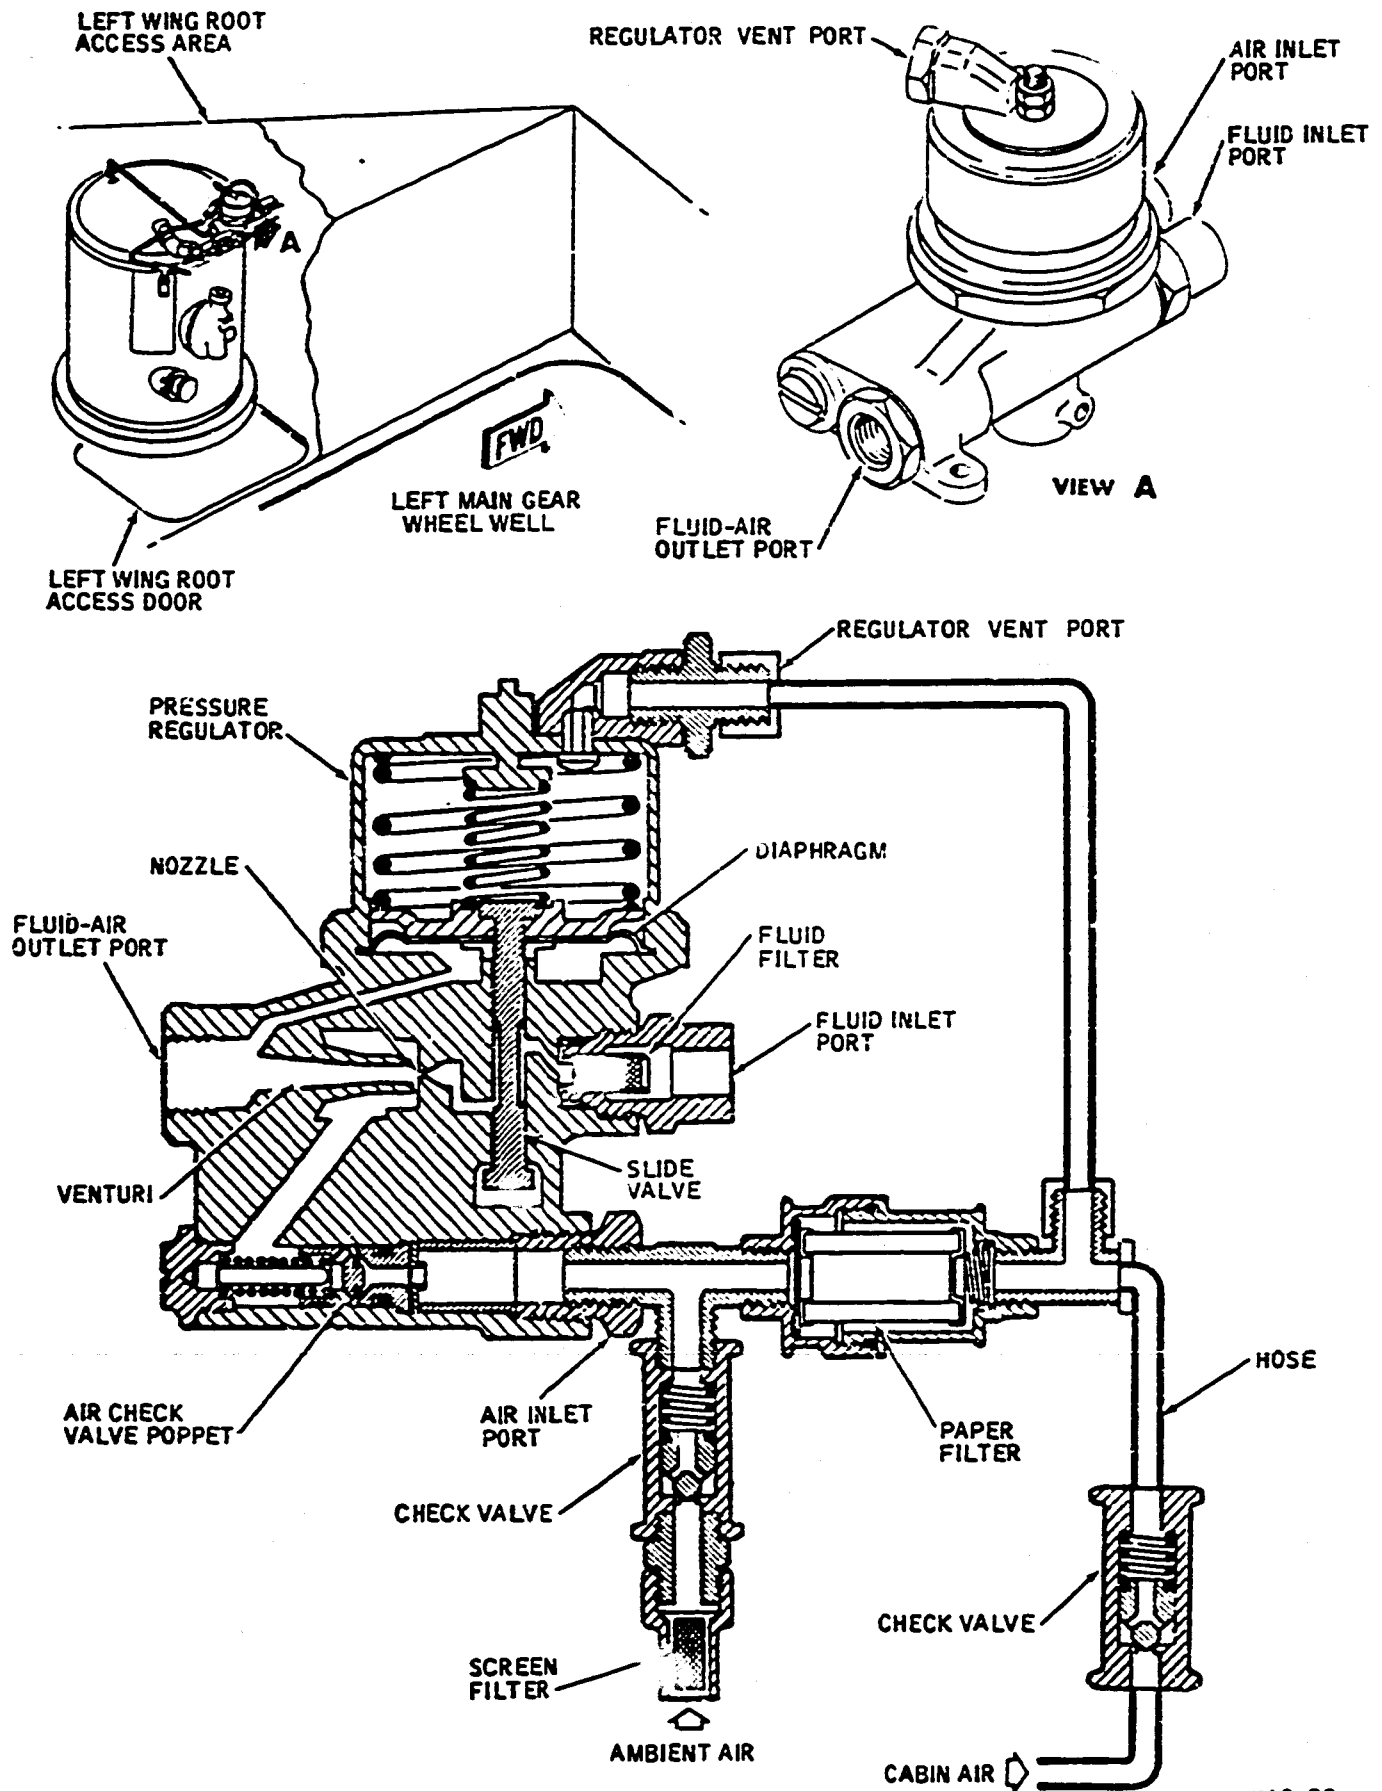

Reservoir Air Pressure Regulator-Aspirator -- Schematic  
 Figure 5

Jan 15/68

Printed in U.S.A.

HA2-25

29-10-0  
 CODE 21  
 Page 13

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) Hydraulic fluid inlet pressure at the engine-driven hydraulic pumps is improved at high altitude operation by supplying pressurized filtered cabin air to the reservoir regulator-aspirator instead of ambient outside air. Part of the inlet air is diverted by a tee fitting to the regulator chamber to provide a more positive regulating force on the diaphragm than would be obtained with low ambient pressures. The chemically treated paper filter, installed in the regulator-aspirator air supply line from the cabin, removes smoke tars and impurities from the pressurized cabin air. The steel mesh screen filter, installed on the check valve which tees into the regulator-aspirator air inlet port downstream of the paper filter, removes dust, dirt, and foreign particles from the ambient air and serves as a standby to supply filtered air in event the paper filter is clogged.
- (5) As pressure in the reservoir builds up, back pressure is bled from the outlet port to the diaphragm chamber. The reaction on the diaphragm begins to move the slide valve to cut off the fluid flow. At 30 to 35 psi of back pressure, the diaphragm completely closes the slide valve, cutting off the flow of fluid. If there is a regulator malfunction, the aspirator stalls when outlet pressure reaches a maximum of 40 psi.
- (6) The aspirator is capable of pressurizing the reservoir to 30 to 35 psi in approximately 4 minutes at altitudes from sea level to 15,000 feet, when fluid is ported through the nozzle at 0.5 gpm at 3000 psi.


D. Regulator-Aspirator Air Filters (See Figure 6.)

- (1) The regulator-aspirator air filters remove ambient and cabin air impurities from the air which is used to pressurize the main hydraulic system reservoir. The filtering system is composed of two filters. One of which is a paper element filter, installed directly in the cabin air supply line near the regulator-aspirator. The other filter is a fine mesh, screen-type filter, installed on a check valve and positioned at right angles to the regulator-aspirator air inlet port. The screen filter, in addition to providing an immediate supply of ambient air during ground operations, serves as a standby air inlet to preclude air starvation of the regulator-aspirator in the event the paper element filter becomes clogged.


E. Hydraulic Reservoir Relief Valve (See Figure 7.)

- (1) The reservoir relief valve and the air pressure aspirator-regulator keep the reservoir pressurized to normal operating range. The valve relieves excess air pressure which may build up in the reservoir through thermal expansion in the system. The valve has an inlet port and an outlet port and consists, internally, of an inlet port seat and a spring-loaded poppet.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

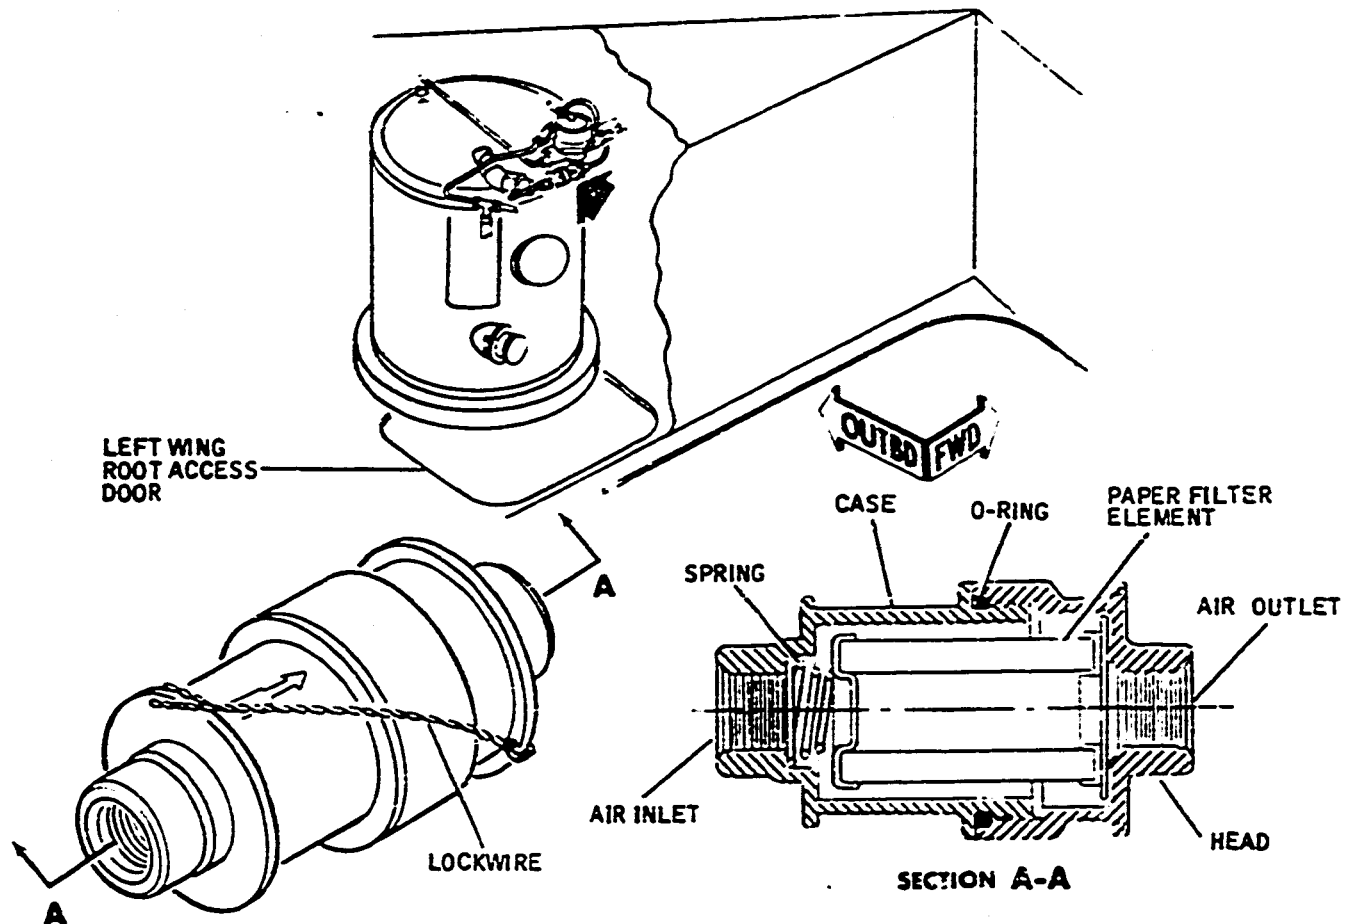

PAPER ELEMENT FILTER

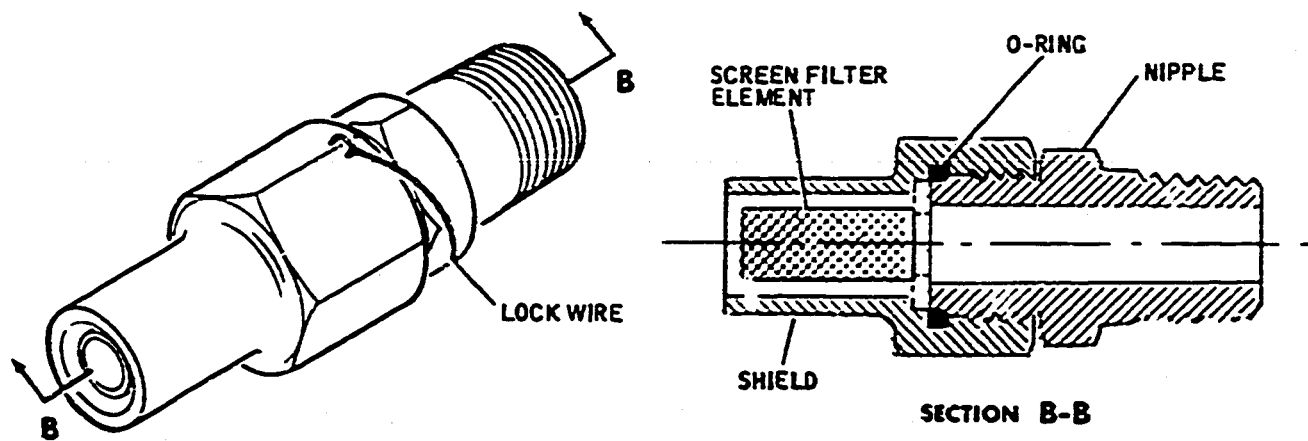

SCREEN FILTER

Regulator-Aspirator Air Filters -- Cutaway View  
 Figure 6


Jan 15/68

Printed in U.S.A.

HA2-35

29-10-0  
 CODE 21  
 Page 15

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

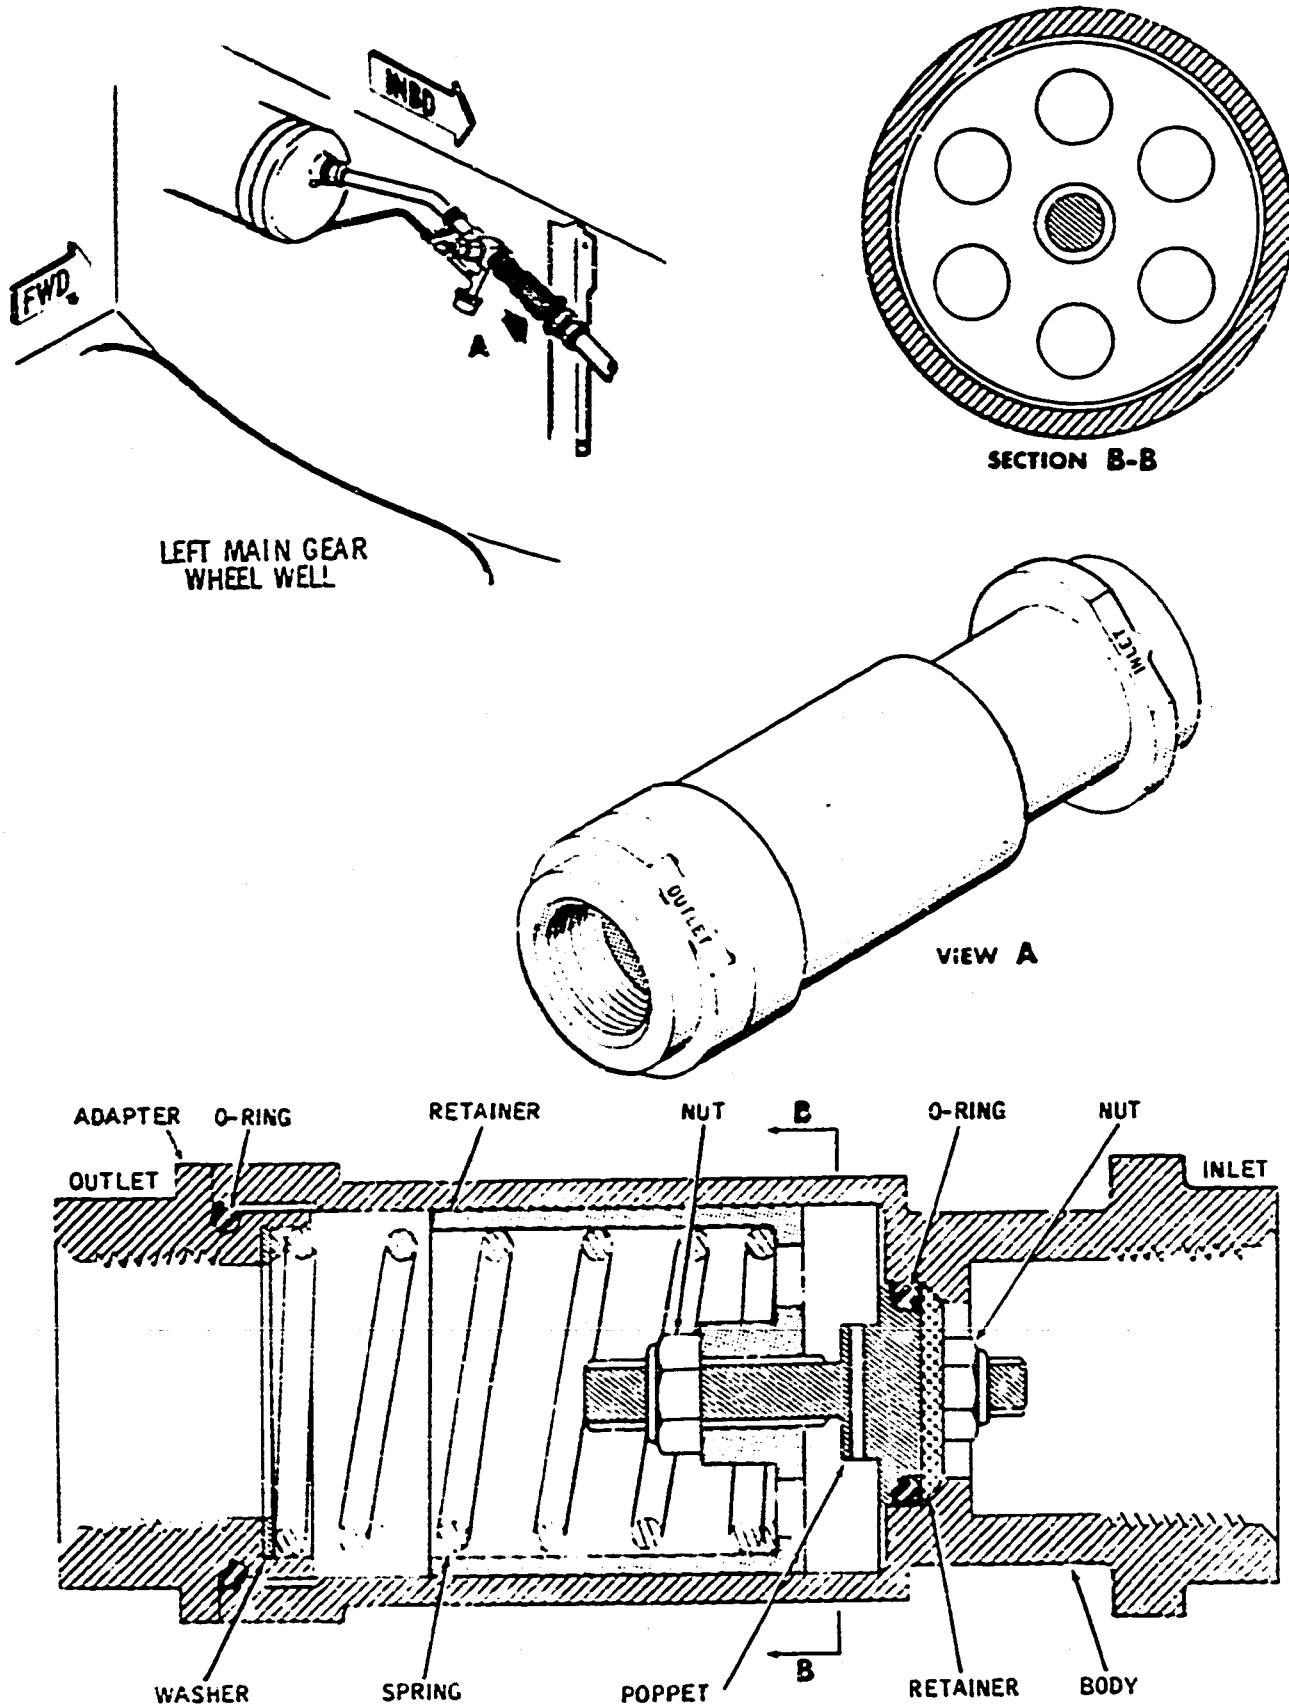

HA2-17

29-10-C  
 CODE 21  
 Page 16

Hydraulic Reservoir Relief Valve  
 Figure 7

Printed in U.S.A.

Jan 15/68

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The relief valve is installed in the overboard vent line downstream of the hydraulic reservoir air bleed valve. In the event that excess pressure builds up in the reservoir, the poppet will start to relieve at 45 (+5, -0) psi. Full flow of 10 gpm is attained at 80 psi maximum. The poppet reseats at 90 percent of the opening pressure.

F. Hydraulic Reservoir Air Bleed Valve (See Figure 8.)

- (1) The hydraulic reservoir air bleed valve and pressure gage are located on the aft side of the rear spar in the left main gear wheel well, inboard of the hydraulic reservoir air chamber. The bleed valve and gage are installed in the overboard vent line, between the reservoir air chamber and the reservoir relief valve.
- (2) The bleed valve is used to relieve the reservoir air pressure prior to disconnecting lines or components in the hydraulic system. The pressure gage provides a ready indication of the hydraulic reservoir air pressure and is used in conjunction with the bleed valve to indicate the air pressure status.
- (3) The air inflation valve is installed on the same fitting as the bleed valve and pressure gage. The air inflation valve is used to manually charge the reservoir with air or dry nitrogen.

G. Hydraulic Reservoir Vacuum Breaker Check Valve (See Figure 9.)

- (1) The hydraulic reservoir vacuum breaker check valve is installed on the regulator-aspirator mounting bracket, and connects to the tee fitting at the top of the reservoir. The valve is vented to ambient air. The purpose of this valve is to maintain atmospheric pressure in the reservoir, allowing hydraulic fluid to flow to the auxiliary hydraulic pump in the event of a failure of the reservoir pressurization system. The failure, or breakdown, of the pressurization system could cause a fluid starvation at the auxiliary hydraulic pump because of vacuum buildup in the reservoir.

H. Hydraulic Reservoir Air Chamber


- (1) The hydraulic reservoir air chamber is a small, cylindrical tank with a capacity of 700 cubic inches. It has two ports, an inlet port at the bottom of the chamber and an outlet port in one end of the chamber. The inlet port mounting boss is fitted with a drain plug. The air chamber is installed on the aft side of the rear spar in the left main gear wheel well, inboard and above the hydraulic reservoir filler assembly. Access to the air chamber is through the left main gear inboard door.
- (2) The air chamber provides for greater fluid capacity in the hydraulic reservoir by providing air and foam space for the reservoir in a separate container. Air pressure in the chamber is maintained by the regulator-aspirator and the air relief valve. The air pressure in the chamber and reservoir can be relieved, when desired, by the air bleed valve located downstream of the chamber. The air chamber is mounted

Jan 15/68

Printed in U.S.A.

28-10-0  
CODE 21  
Page 17

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

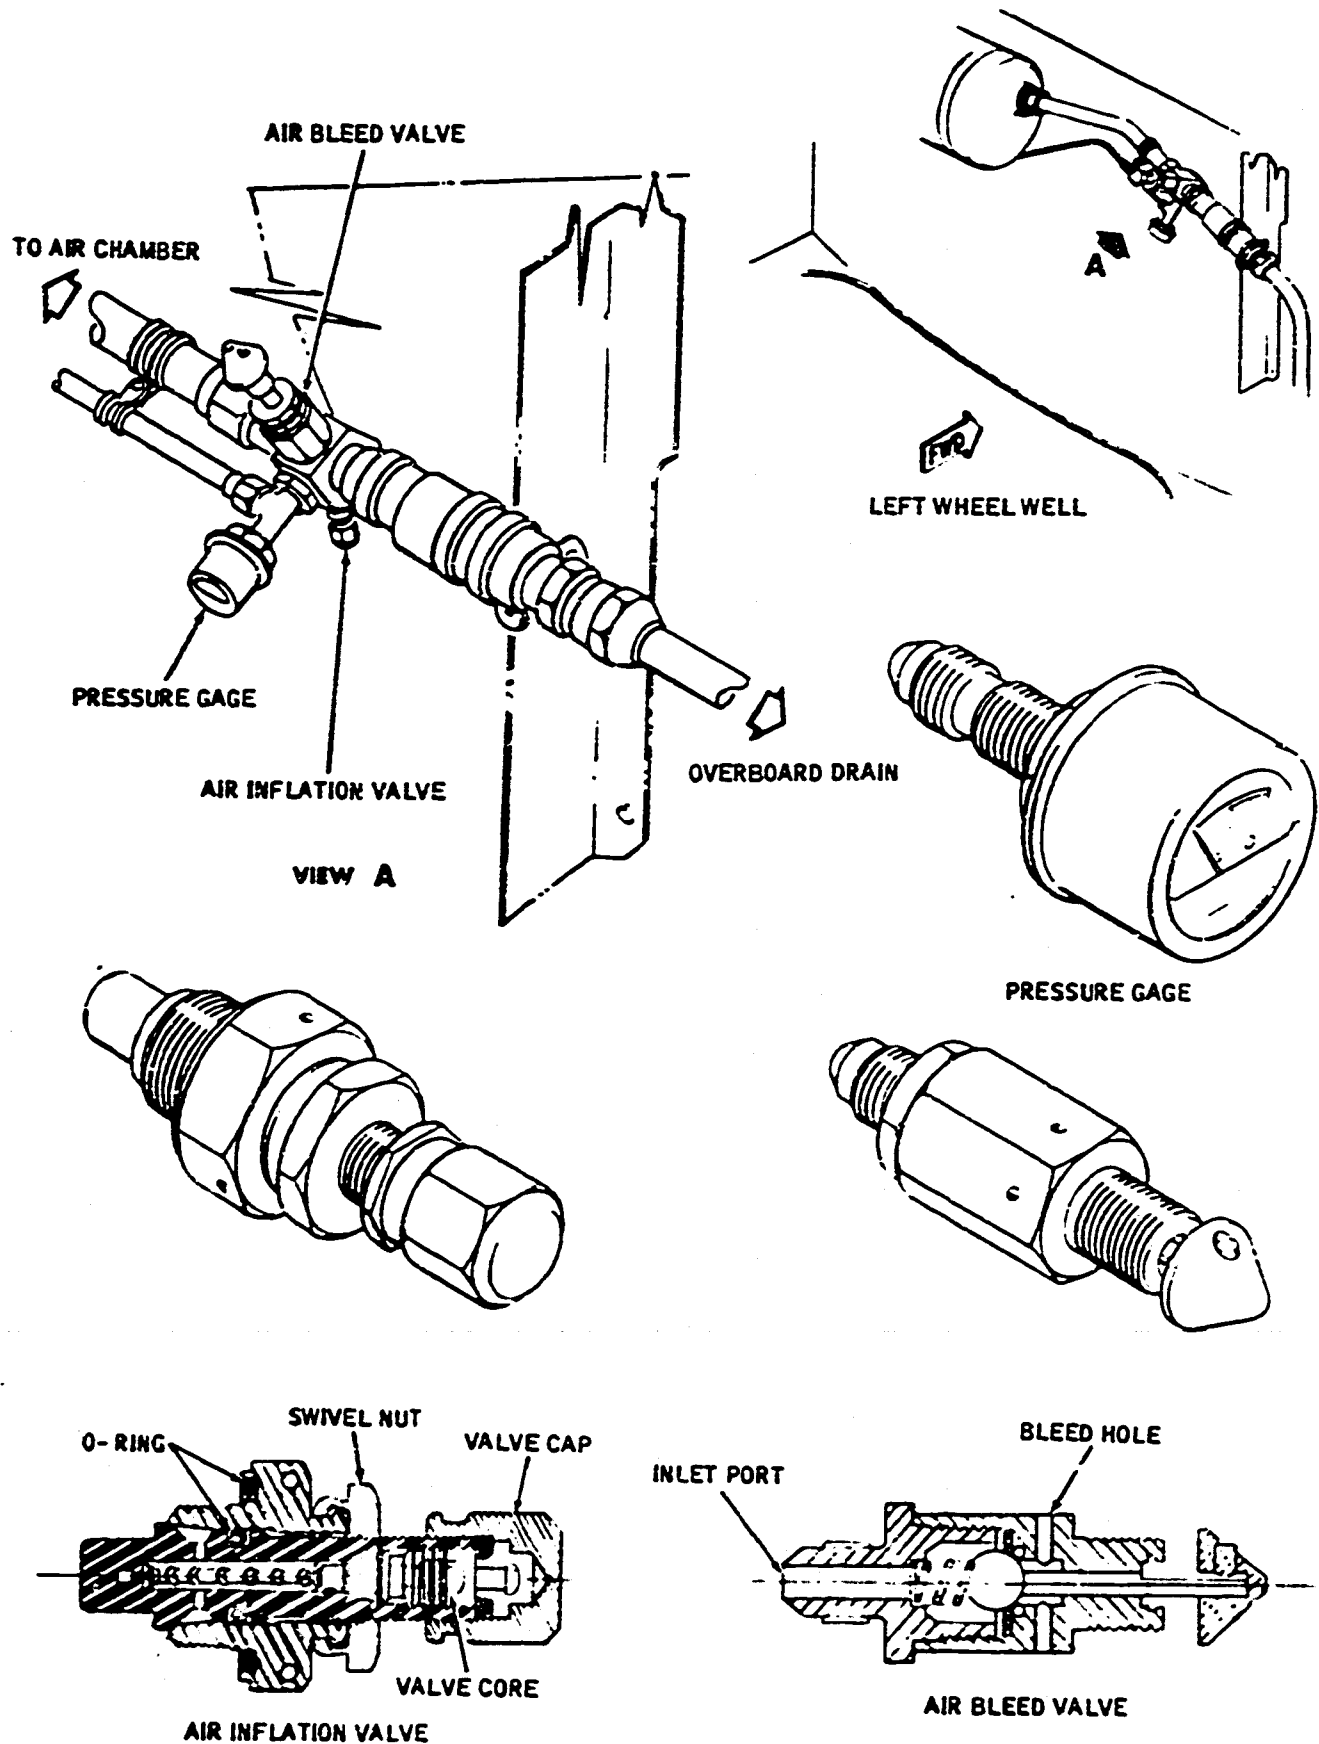

HA2-32

Reservoir Air Bleed Valve, Air Inflation  
 Valve, and Pressure Gage  
 Figure 8



29-10-0  
 CODE 21  
 Page 18

Printed in U.S.A.


Jan 15/68



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

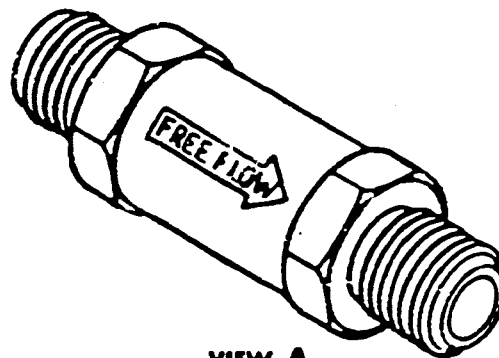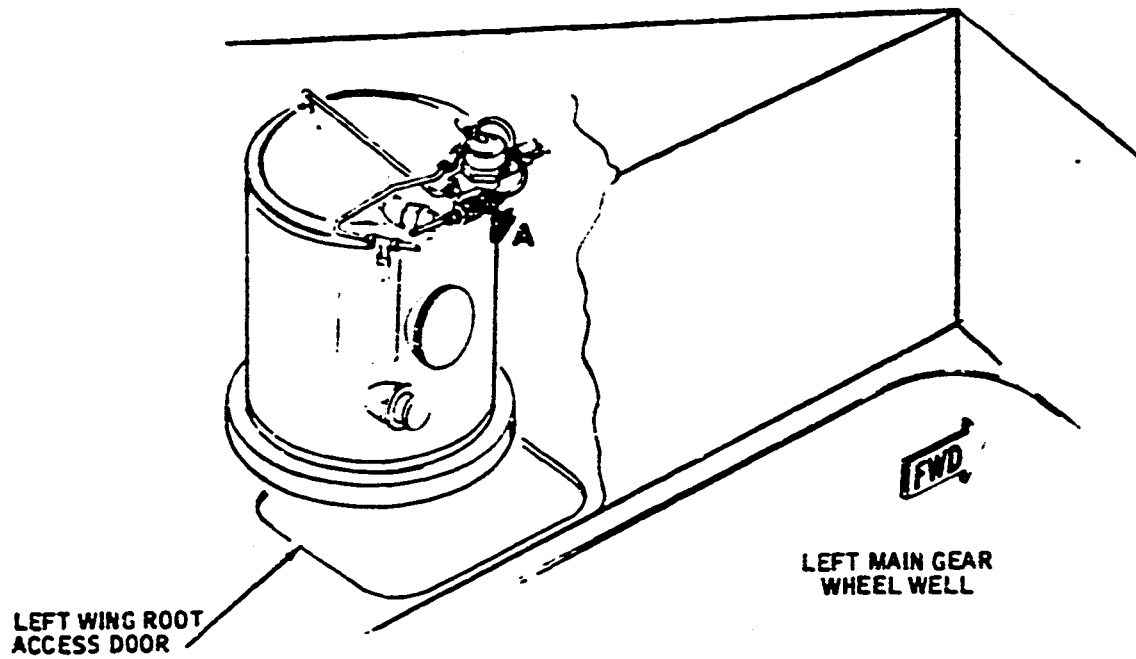

VIEW A

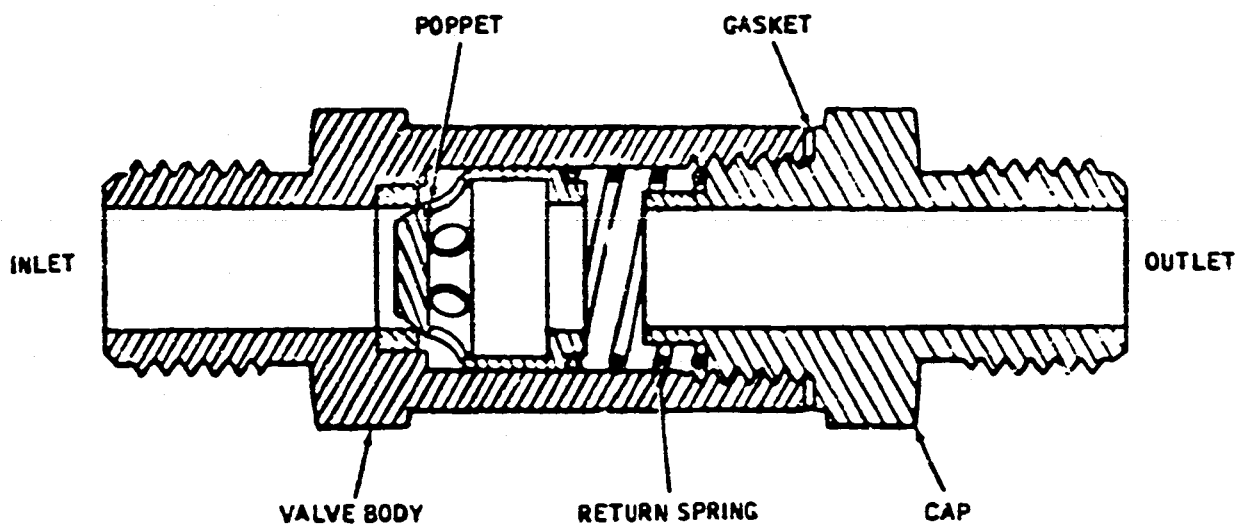

HA2-33

Hydraulic Reservoir Vacuum Breaker Check Valve  
 Figure 9

Jan 15/68

Printed in U.S.A.

29-10-0  
 CODE 21  
 Page 19

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

higher than the reservoir filler assembly, to prevent overfilling of the reservoir from reducing the available air space and to prevent fluid from being vented overboard through the reservoir relief valve.


I. Hydraulic Reservoir Port B Return Check Valve (See Figure 10.)

- (1) The reservoir port B return check valve is installed in port B of the reservoir to prevent reverse flow of hydraulic fluid from the reservoir to the return line. The check valve is located on the reservoir in the left wing root and is accessible through the left wing root access door.
- (2) Externally and internally, the port B check valve is a standard-type check valve with a 1500-psi rating. A nominal pressure of approximately 8 psi unseats the poppet, permitting fluid to flow through the valve. When the reservoir pressure exceeds the return line pressure, the poppet will seat and reverse fluid flow will be prevented.


J. Engine Hydraulic Fire Shutoff Valve (See Figures 11 and 12.)

- (1) The engine hydraulic fire shutoff valve is a gate-type, mechanically controlled valve, installed in the supply line of each engine-driven hydraulic pump. The engine hydraulic fire shutoff valve is actuated from the flight compartment to prevent the flow of hydraulic fluid into the engine section.
- (2) The engine hydraulic fire shutoff valve is mounted on a 2-piece channel bracket which is installed inside the wing leading edge, aft of the firewall of each inboard pylon. Access to the valve is through the access door located on the lower side of the wing leading edge, outboard of either the left or right inboard pylon. Each valve is located approximately 30 inches inboard of the access door.
- (3) Internally, the valve consists of a valve arm, valve arm link, cam plate, and slide blade. The valve arm link attaches to the valve arm and is allowed to swivel through an arc in relation to the valve arm. The link has a stop that will contact the arm when the two have traveled to the valve closed, full overtravel position. In the full open pretravel position, the link contacts the arm stop.
- (4) A roller attached to the end of the link rides in, and extends through, a J-shaped slot in the cam plate. The rotation of the valve arm causes the link roller to follow the cam slot, allowing the arm and link to move through independent arcs.
- (5) The slide blade (gate of the valve) is slotted near the one end and also receives the link roller extending through the cam slot. The slide blade is positioned parallel to the cam plate and is guided by two grooves in the housing. This will allow the blade to open or close through porting of the valve by the action of the arm and link. The cam plate is pinned to the valve shaft, securing it rigidly in two positioning grooves in the housing. A pin-indicator is provided to relate valve position to a reference plate placarded open and closed.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

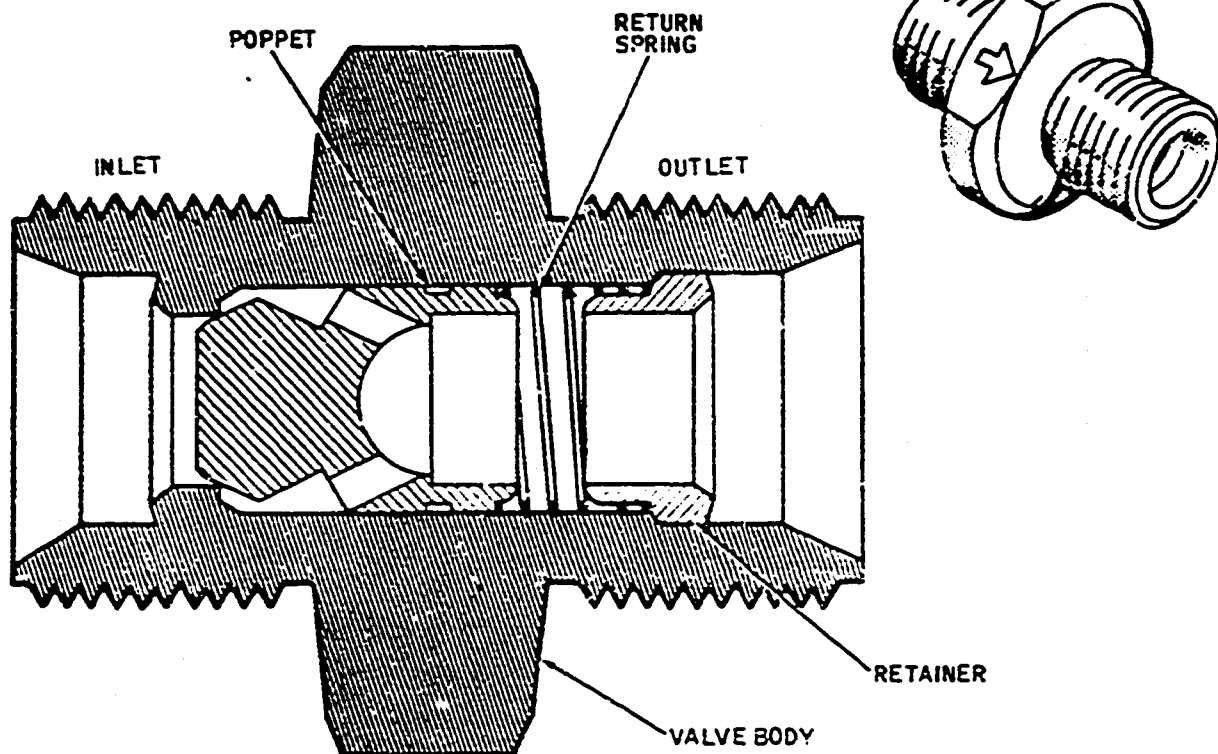

MINIATURE CHECK VALVE

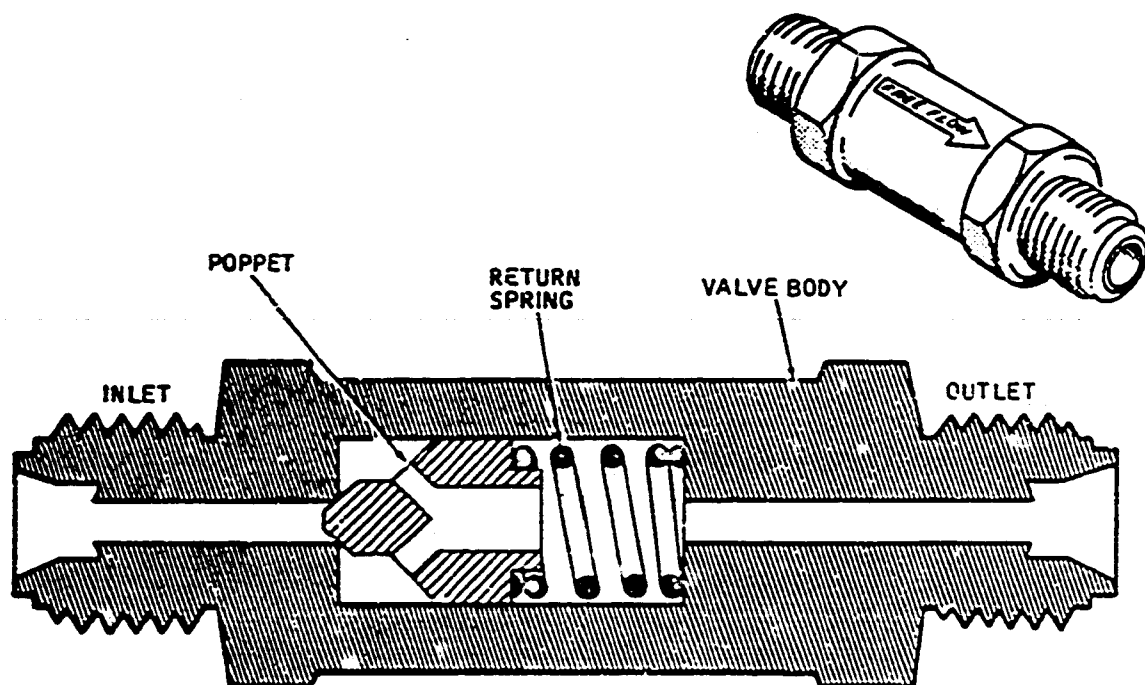

STANDARD CHECK VALVE

Hydraulic Check Valves -- Typical  
 Figure 10


Jan 15/68

Printed in U.S.A.

HA2-18A

29-10-0  
 CODE 21  
 Page 21

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

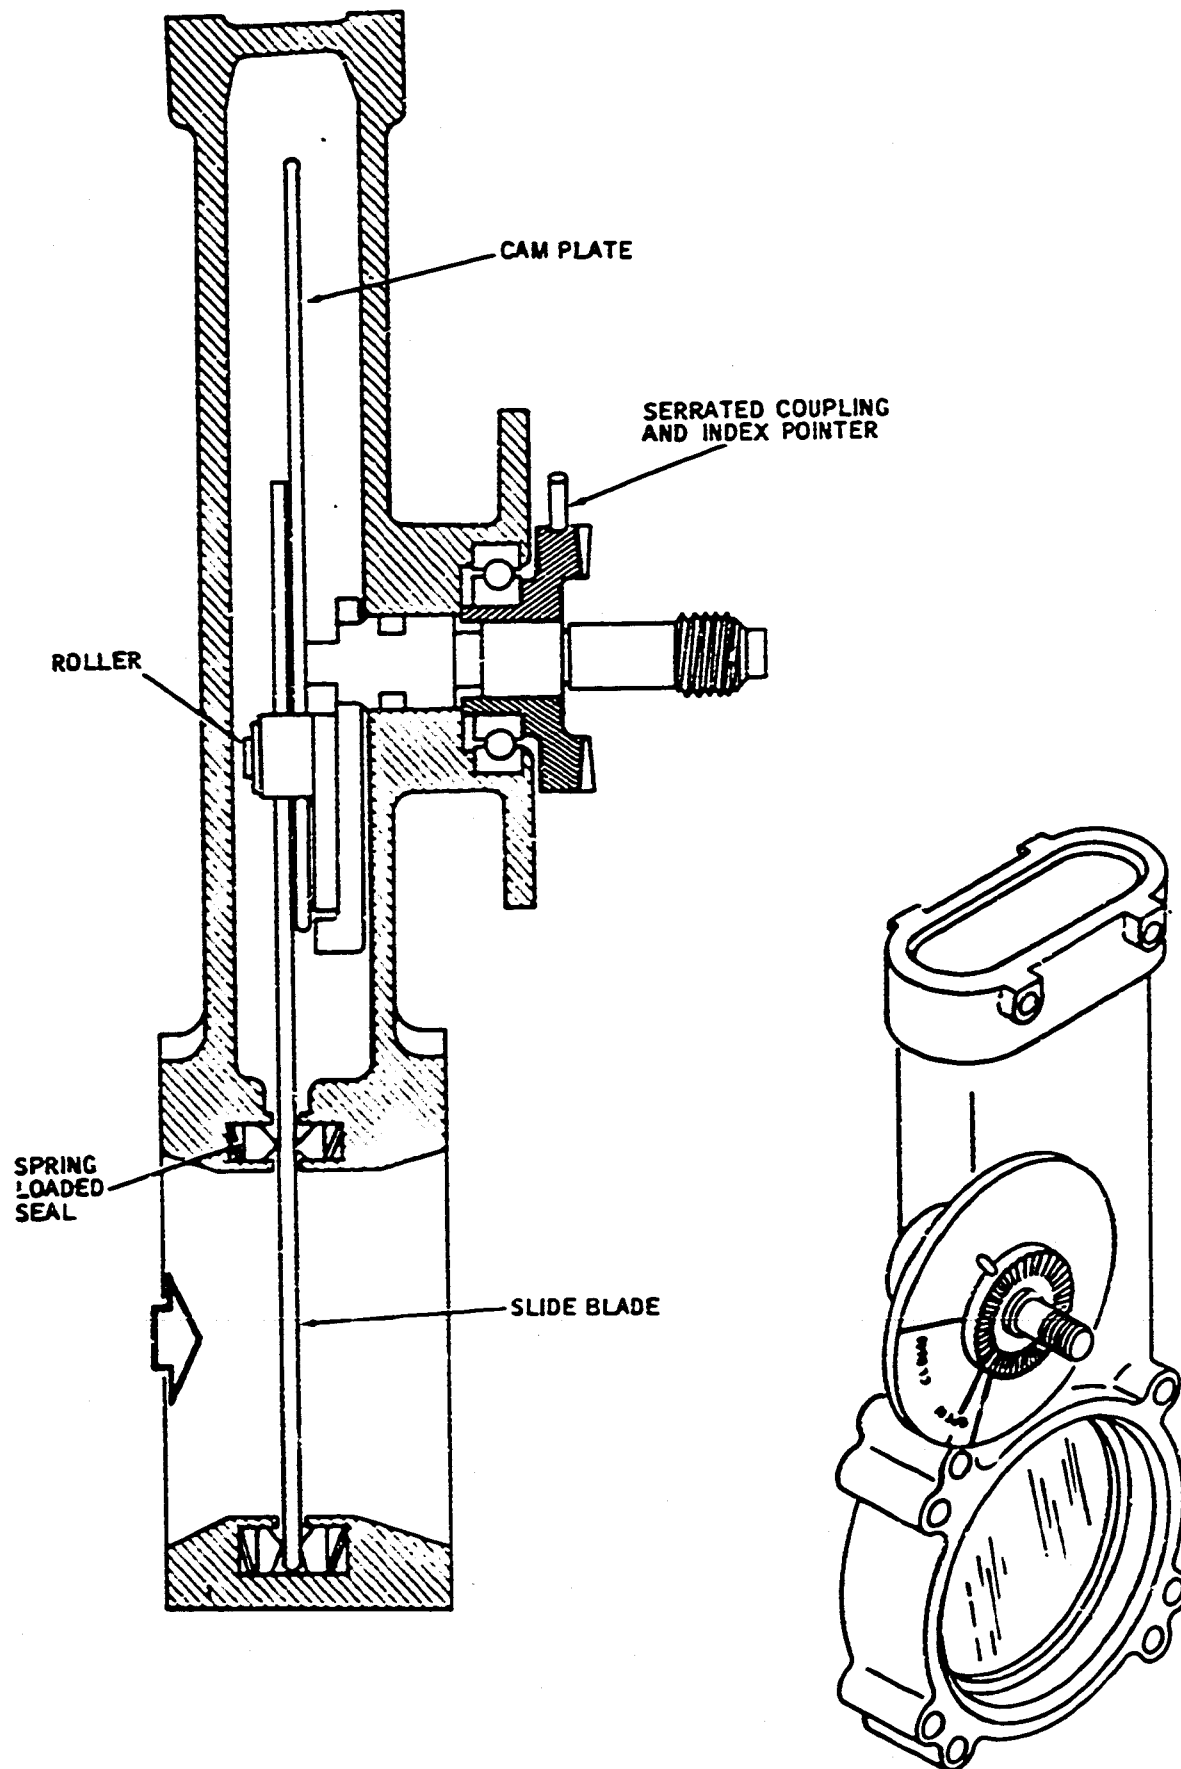

HA2-2209


29-10-0  
 CODE 21  
 Page 22

Engine Hydraulic Fire Shutoff Valve -- Schematic  
 Figure 11


Printed in U.S.A.

Jan 15/68

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

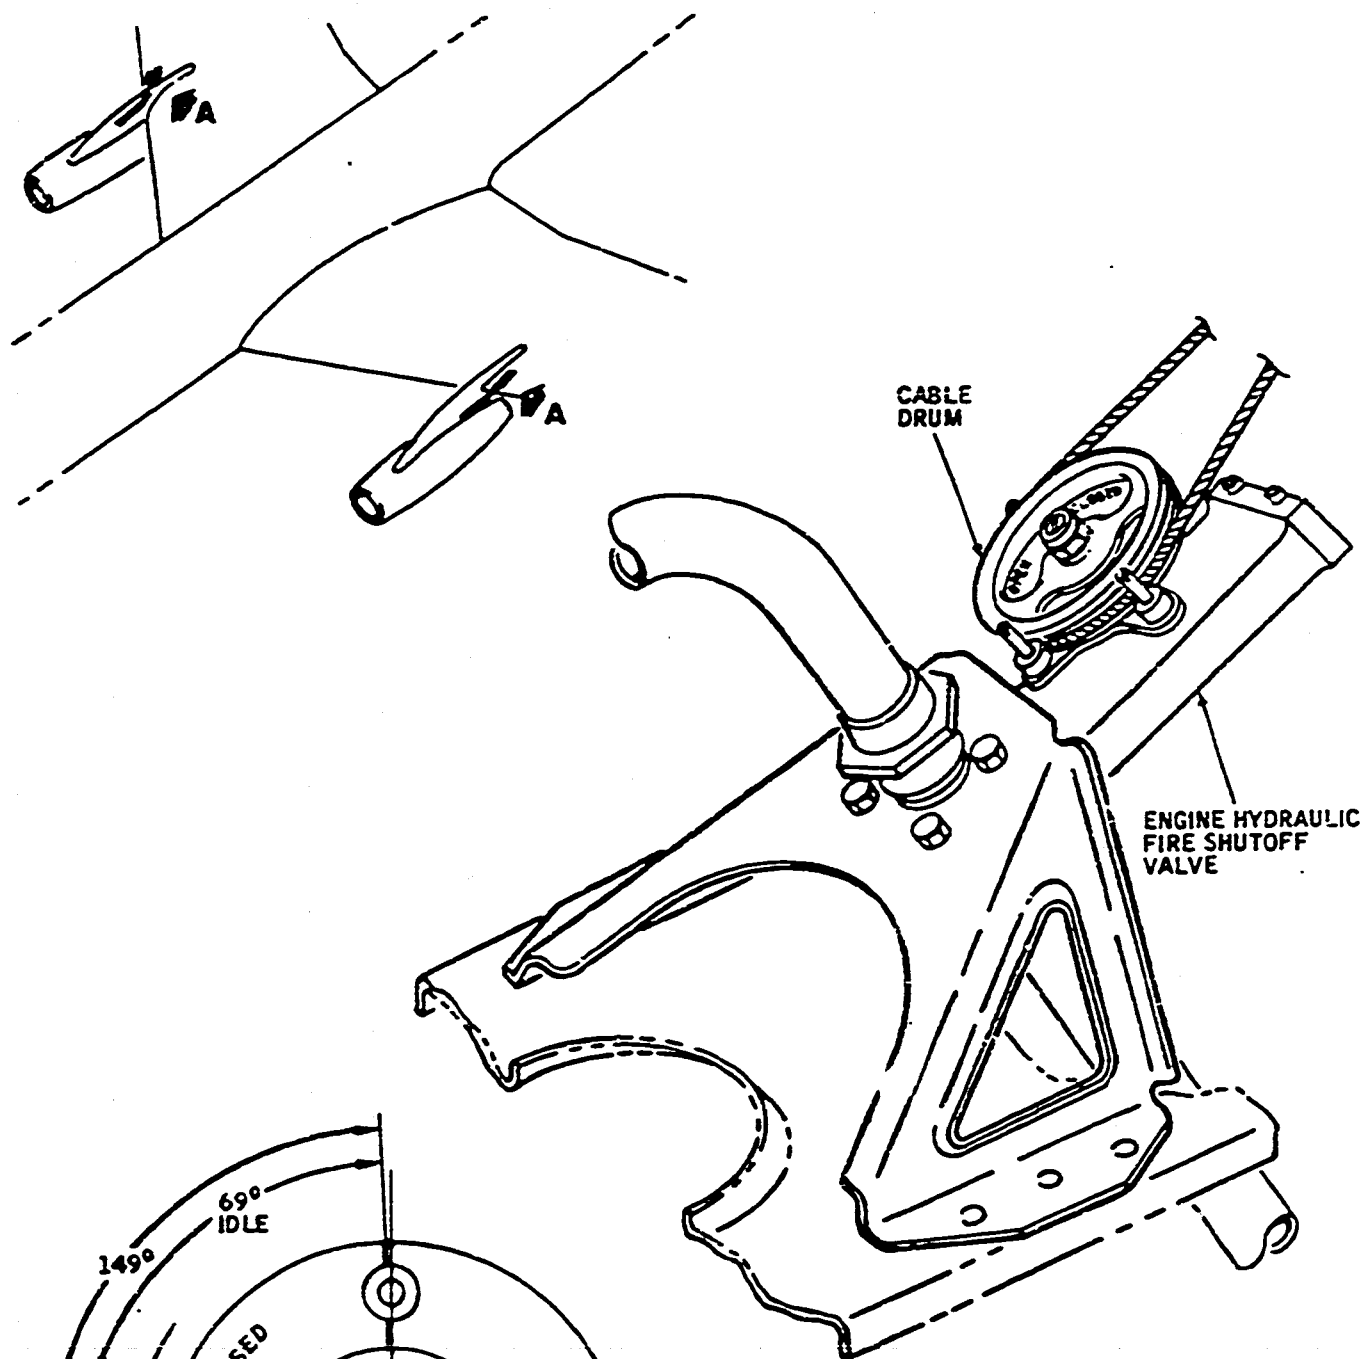

VIEW A

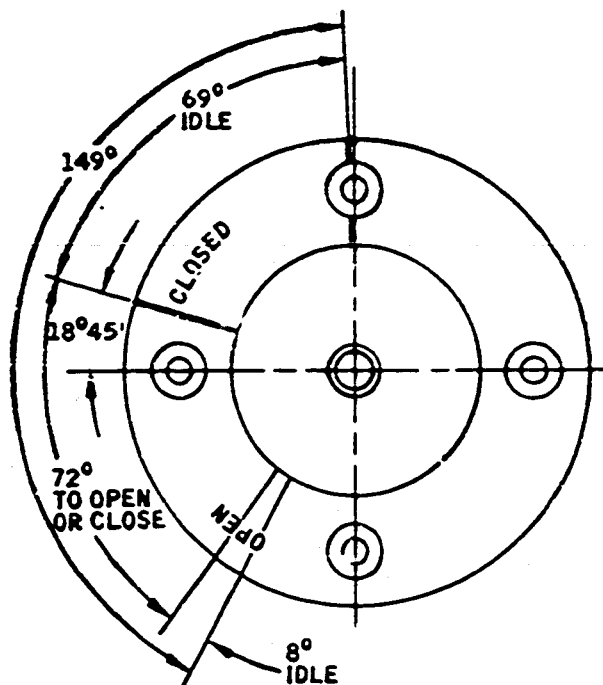

VALVE POSITION DIAGRAM

Engine Hydraulic Fire Shutoff Valve  
 Figure 12

Jan 15/68

Printed in USA

HA2-2978

29-10-0  
 COL: 21  
 Page 23


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) The engine hydraulic fire shutoff valves are cable actuated by the fire control handles, located on the overhead switch panel in the flight compartment. When the fire control handle for either inboard engine is moved, the cable system rotates the drum which is attached to the corresponding shutoff valve shaft. This action extends the valve blade into the fluid passage to block the flow of fluid. The valve operates from open to close by clockwise rotation of the cable drum. The valve gage will idle during the first 8 degrees of rotation of the cable drum, and then will close in the next 72 degrees. The cable drum will continue to rotate the shaft for an additional 69 degrees after the gate valve is closed, locking it overcenter. Total travel of the cable drum is 149 degrees.

K. Engine-Driven Hydraulic Pump (See Figures 13 and 14.)

- (1) The two, single-stage, variable-displacement, cam-actuated, pressure-compensated, engine-driven hydraulic pumps are installed, one each, on the inboard engines. The pump incorporates a solenoid-operated bypass feature for reducing the output pressure to zero psi. Each bypass valve solenoid is controlled by a corresponding engine hydraulic pump control switch in the flight compartment. The switch for the hydraulic pump on engine 2 is placarded left, on, and bypass. The switch for engine 3 is placarded right, on, and bypass. When a switch is placed in the bypass position, the bypass valve for that pump is actuated and the pump pressure is reduced to zero psi. When the switch is placed in the on position, the bypass valve is open and the pump operates normally in a pressure range of 2850 to 3050 psi. The pump provides a continuous, nonpulsating flow of hydraulic fluid, under pressure, to the hydraulic manifolds for distribution throughout the hydraulic system.
- (2) The heart of the pump is a revolving cylinder barrel which contains nine pistons. By means of a hold-down plate and hydraulically balanced shoes, the pistons are supported on an inclined cam plate which causes them to reciprocate as the barrel revolves. The hold-down plate ensures positive stroking of the pistons during the suction stroke. The angle of the cam plate is varied by moving the trunnioned hanger on which it is mounted, thereby changing the displacement of the pump. The hanger, in turn, is controlled by a pressure compensator.
- (3) Oil passes through the main inlet and then through porting in the end of the cylinder barrel to the cylinders from which the pistons are being withdrawn. As the cylinder barrel revolves, these pistons are forced into their bores and discharge high-pressure oil through porting in the end of the barrel to the outlet port.
- (4) The cylinder barrel, supported by a radial bearing, is driven by an internal shaft which passes through the trunnioned hanger. A hydraulically balanced, face-type, carbon shaft seal is used to assure optimum sealing. Sealing pressure increases as case pressure increases, and the seal adjusts itself to compensate for any wear which takes place.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

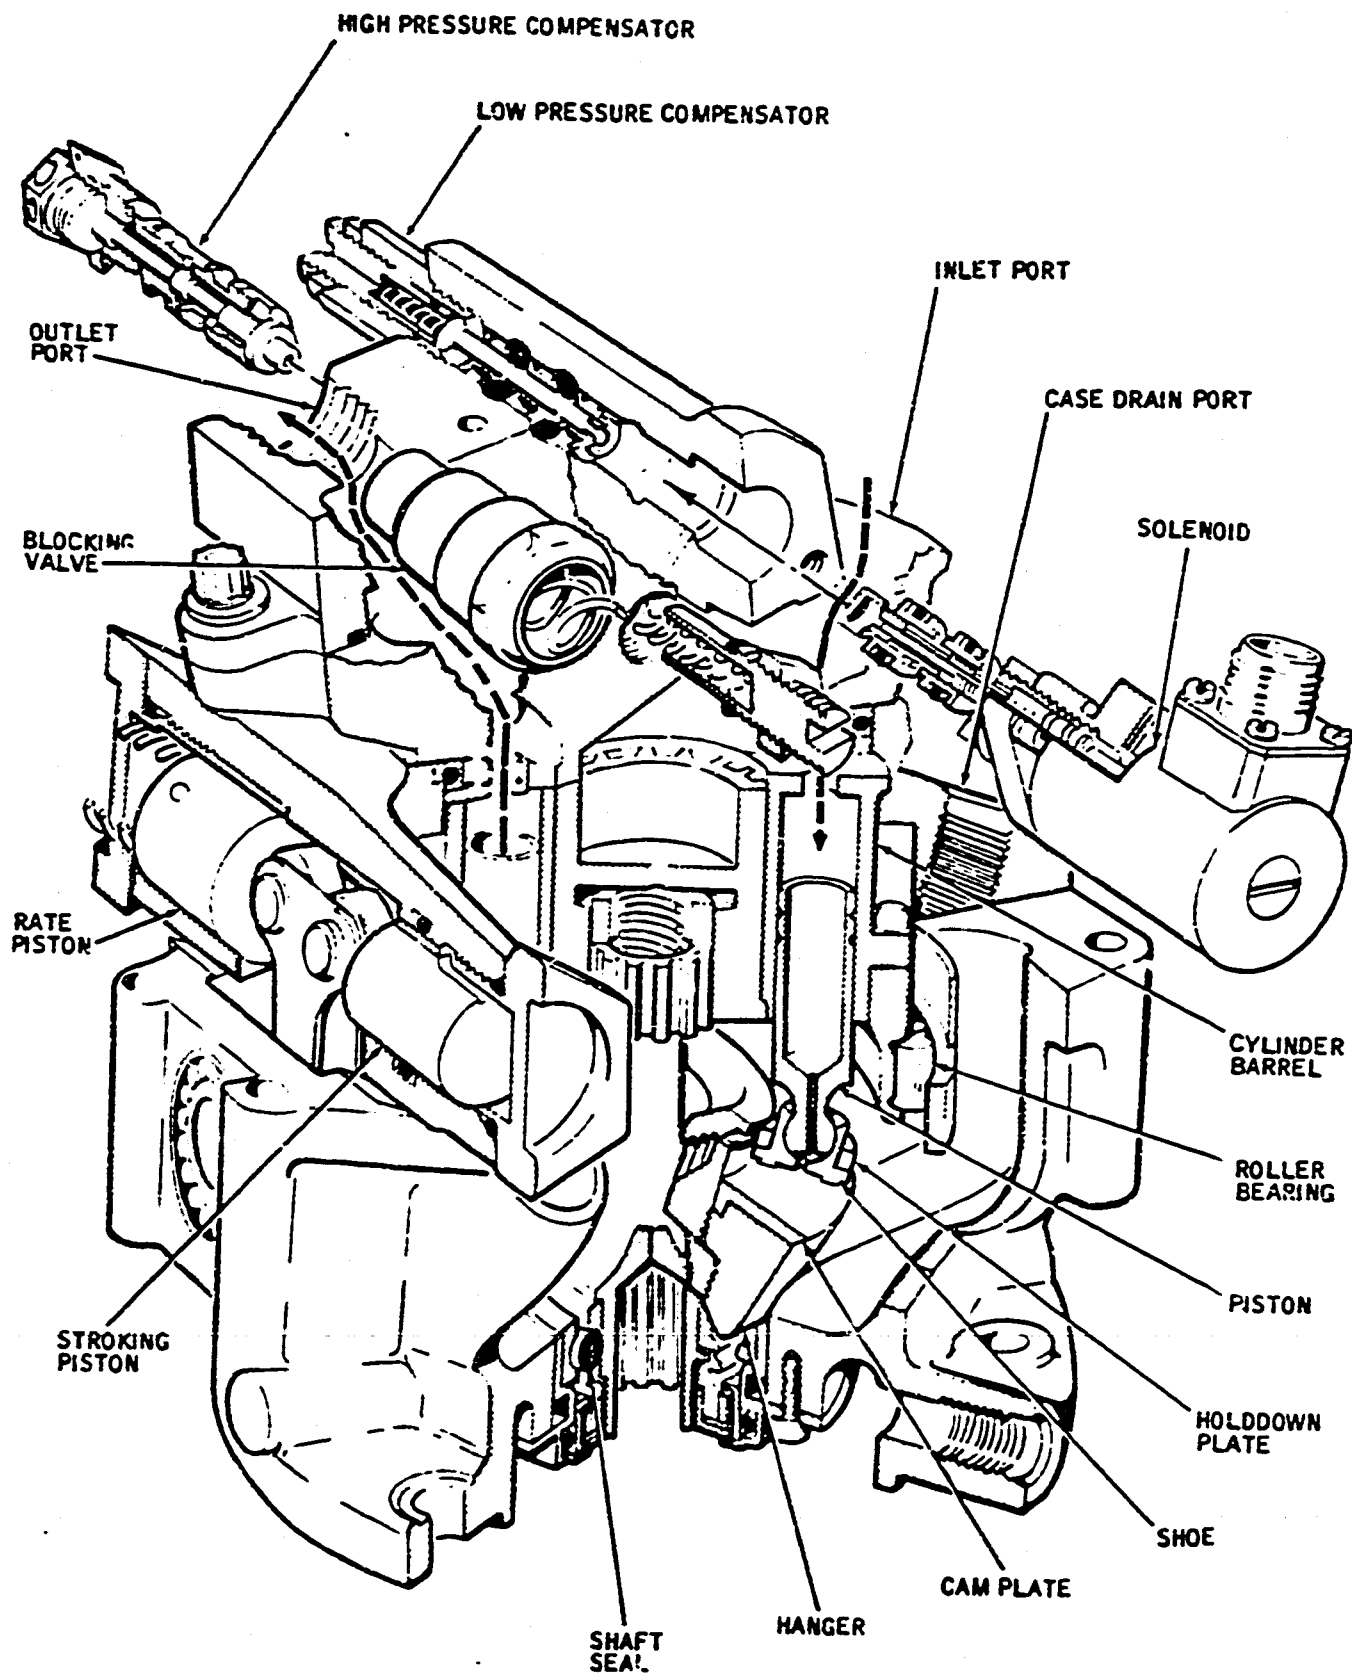

HA2-21


Engine-Driven Hydraulic Pump -- Cutaway View  
 Figure 13

Jan 15/68

Printed in U.S.A.


29-10-0  
 CODE 21  
 Page 25

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

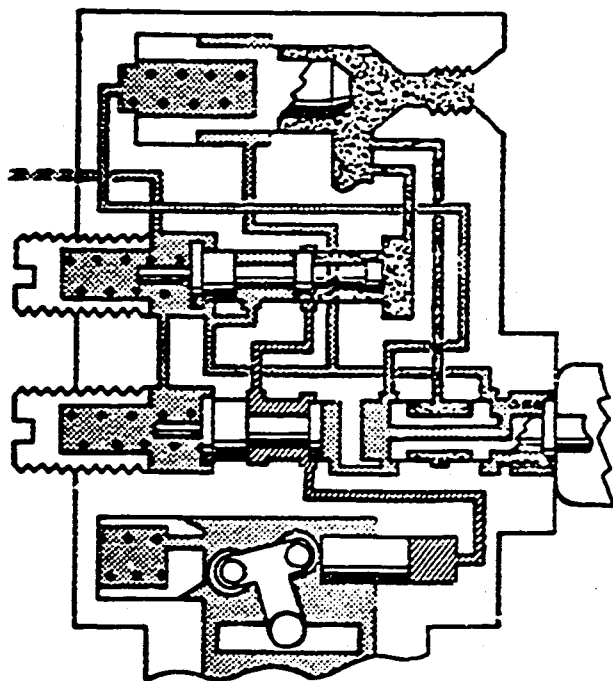


**A. FULL PRESSURE, NO FLOW CONDITION**

BLOCKING VALVE OPEN, 3,000 PSI  
 FLUID AVAILABLE, NO DEMAND.

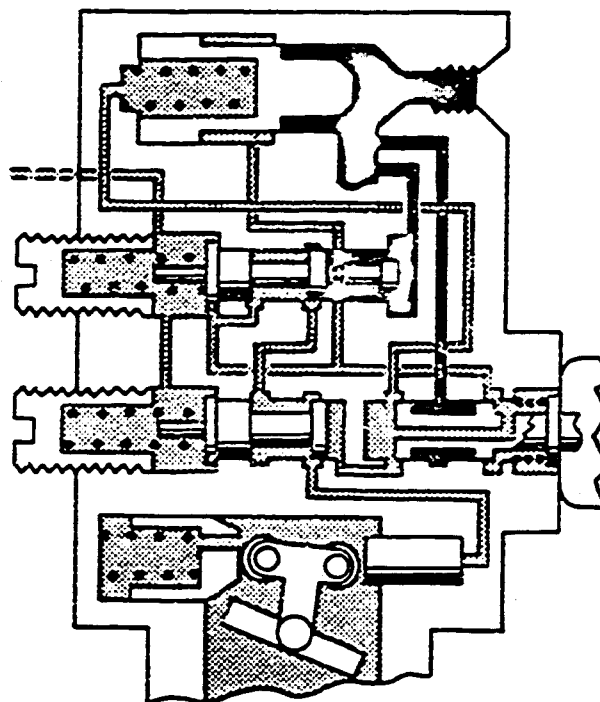

**B. FULL FLOW CONDITION**

BLOCKING VALVE OPEN, HANGER "ON STROKE" 3,000  
 PSI FLUID FLOWING FROM PUMP.

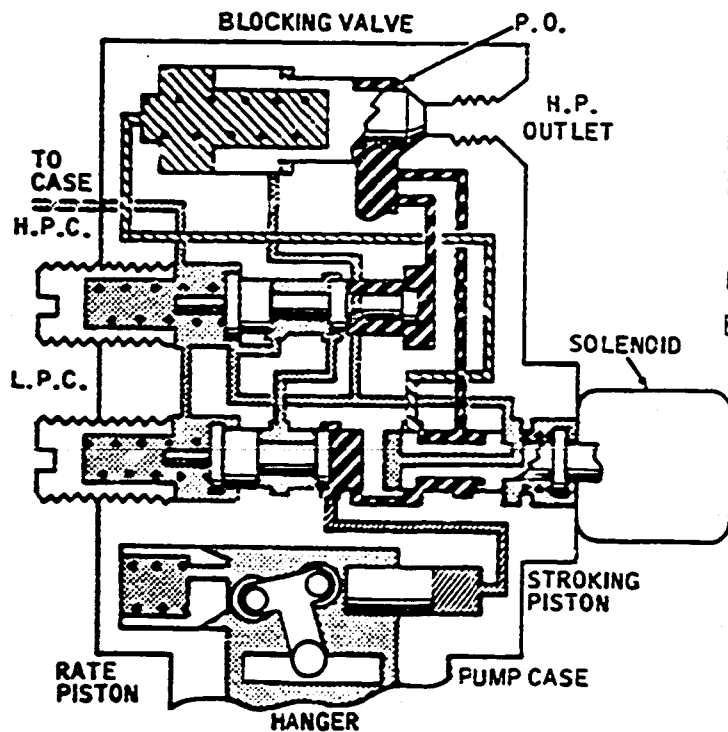

**C. DEPRESSURIZED AND BLOCKED CONDITION**

SOLENOID ENERGIZED, BLOCKING VALVE CLOSED,  
 PUMP COMPENSATED AT 500 PSI.

**KEY**

- COMPENSATED PRESSURE: 3,000  $\pm$  50
- CONTROL PRESSURE: 200-300
- CASE PRESSURE: 45-55
- FULL FLOW PRESSURE: TO 2,950
- DEPRESSURIZED PRESSURE: 400-500
- BLOCKING VALVE PRESSURE: 400-500
- P.O. = PUMP OUTLET
- H.P.C. = HIGH PRESSURE COMPENSATOR
- L.P.C. = LOW PRESSURE COMPENSATOR

HA2-19



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) The pressure compensator regulates the volume delivered in accordance with the demand of the system and maintains the predetermined pressure. When the pressure is less than the spring load, the spring moves the spool to vent oil in the stroking cylinder to the case. The stroking piston then retracts and a spring load on the hanger moves it to a greater angle and increases the volume pumped. The axial thrust of the pistons against the cam plate during power stroke is balanced hydraulically. Oil, at system pressure, is admitted through holes in the piston and shoe to an undercut area in the face of the piston shoe. The pressure applied to the undercut area, which is slightly less than the piston area, effectively balances the forces so that the shoe is supported on an oil film at all times. Balance is controlled to such a degree that there is no excessive leakage, and high volumetric efficiency is maintained.
- (6) The axial thrust of the cylinder barrel is also balanced hydraulically against the port plate.
- (7) Because of these features, the axial thrust of the pistons is transferred hydraulically, eliminating the need for antifriction thrust bearings. This increases the reliability factor, if contamination or other adverse conditions exist.
- (8) The pump functions as a standard, pressure-compensated pump, when the bypass solenoid is not energized. Energizing the solenoid allows the pump to compensate at a reduced, controlled pressure of approximately 500 psi. Also incorporated in the cap is a blocking valve. The valve shuts off the discharge flow from the pump, when the 500 psi compensating valve takes over as a result of the solenoid being energized. Hence, depressurizing the pump permits operation with the pump completely feathered at approximately 1/2 drive torque required at 3000 psi. The blocking valve is automatically controlled by the depressurizing valve. When the solenoid is energized, the blocking valve prevents flow from the pump discharge port. When the solenoid is deenergized, the blocking valve automatically opens as the pump builds up pressure to match the system demand.

**2. Engine-Driven Hydraulic Pump Check Valves (See Figure 10.)**

- (1) Two check valves, rated at 3000 psi, are installed in the lines from each engine-driven hydraulic pump. One check valve is installed in the pressure line and the other is in the case drain line. The check valves in the pump pressure lines prevent reverse flow of hydraulic fluid through the pump, when the pump is inoperative or when external hydraulic pressure is supplied to the system. Access to the valves can be gained through an access door in the forward right apron of each inboard pylon. The valves are mounted on the exterior wall of the inlet box by means of the bulkhead fittings and retaining nuts.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Normal operating pressure will unseat the poppet, and fluid will flow through the valve. When pressure downstream of the valve exceeds pressure from the pump, the pressure, with the aid of the return spring, will seat the poppet. This prevents reverse flow of hydraulic fluid through the pumps.


M. Engine-Driven Hydraulic Pump Case Drain Filter (See Figure 15.)

- (1) A line-type, micron filter, for use in a low-pressure hydraulic system, is installed in the engine-driven hydraulic pump case drain line between the pump flow check valve and the hydraulic system reservoir. The case drain filter is installed on the aft surface of the rear spar opposite the leading edge of the inboard flap assembly. One filter is used for each engine-driven pump. Access is gained to the filter by lowering the flaps. A second check valve is installed adjacent to the filter in the downstream side of the case drain return line.
- (2) Externally, the filter is approximately 5 inches high and 2 inches wide, with ports marked inlet and outlet. The bowl is cylindrical in shape, with hex-shaped wrench flats at the lower end. A self-sealing, magnetic drain plug is installed in the bottom end of the filter bowl. The filter element is made of chemically treated paper.


N. Dual Filter and Relief Valve (See Figure 16.)

- (1) The hydraulic power system dual filter and relief valve consists of two filters and two relief valves installed in the same body. The unit filters the hydraulic fluid from the two engine-driven hydraulic pumps, and the pressure relief valves assure that excessive pressures do not build up in the pressure line from the pumps. The unit is located in the left main gear wheel well on the lower portion of the rear spar, approximately 1 foot outboard of the centerline shear web.
- (2) The unit consists of a casting with a flange-mounted pressure inlet port on each end. Two pressure outlets are located on the top of the casting. One outlet, centrally located, is the main pressure outlet to the system selector valve. The other, located to the left of the selector valve port, is the pressure outlet to the air pressure regulator-aspirator. The return outlet port for the relief valve portion of the unit is located on the center of the aft face of the body, canted upward. The nose gear return line is connected to a check valve installed in a return line port, located between the two filter bowls.
- (3) The pressure relief valves are located behind the pressure inlet ports and are connected to the return outlet port of the unit. The inlet from the nose gear return line is routed through the casting to the return outlet port.
- (4) If either of the filter elements becomes clogged, pressure above 3000 psi at the inlet port will unseat the poppet. Pressure above 3500 psi will allow full flow of 22.5 gpm to flow to the return port of the unit and back to the reservoir. The relief valves will reseal at approximately 3000 psi.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

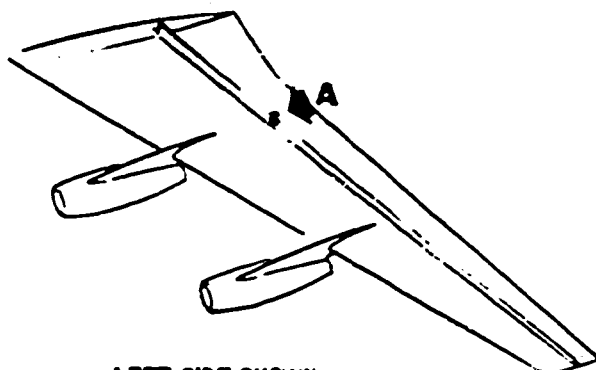

LEFT SIDE SHOWN  
 RIGHT SIDE OPPOSITE

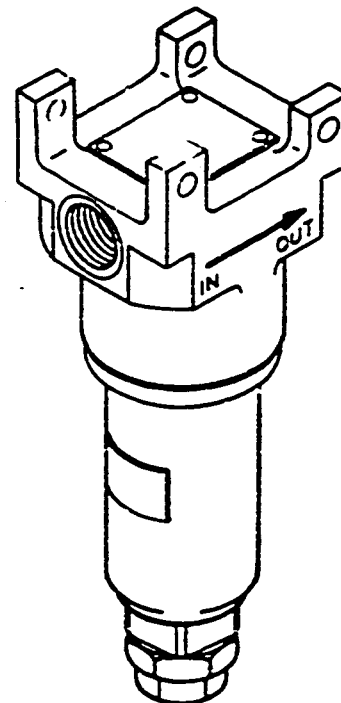

VIEW A

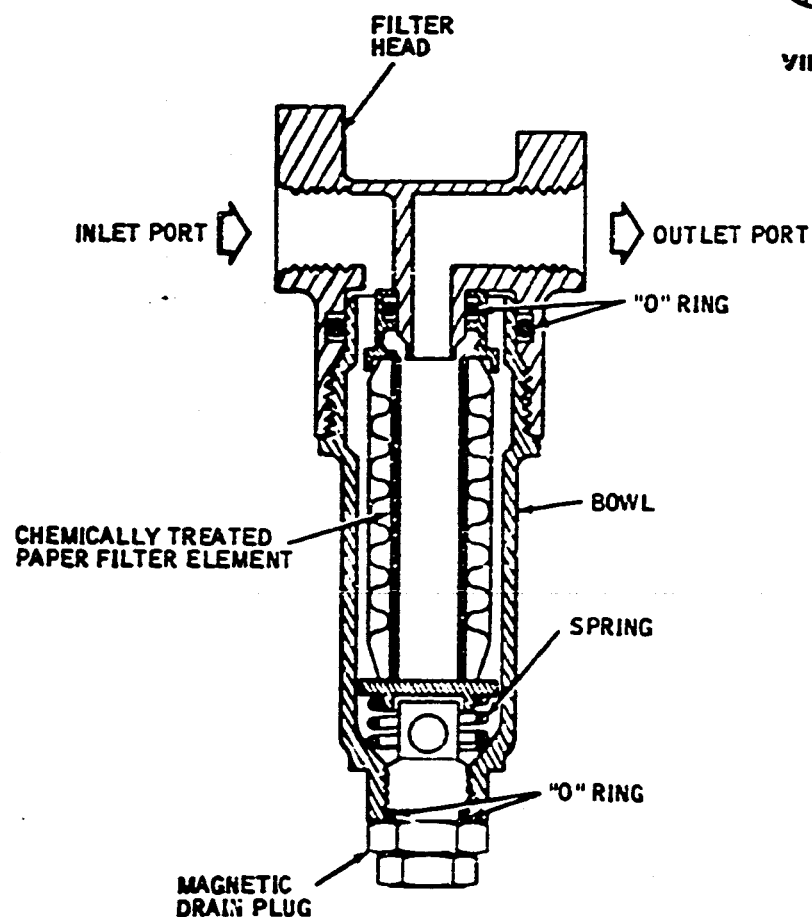


HA2-31

Engine-Driven Hydraulic Pump Case Drain  
 Filter -- Cutaway View  
 Figure 15

Jan 15/68

29-10-0  
 CODE 21  
 Page 29

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

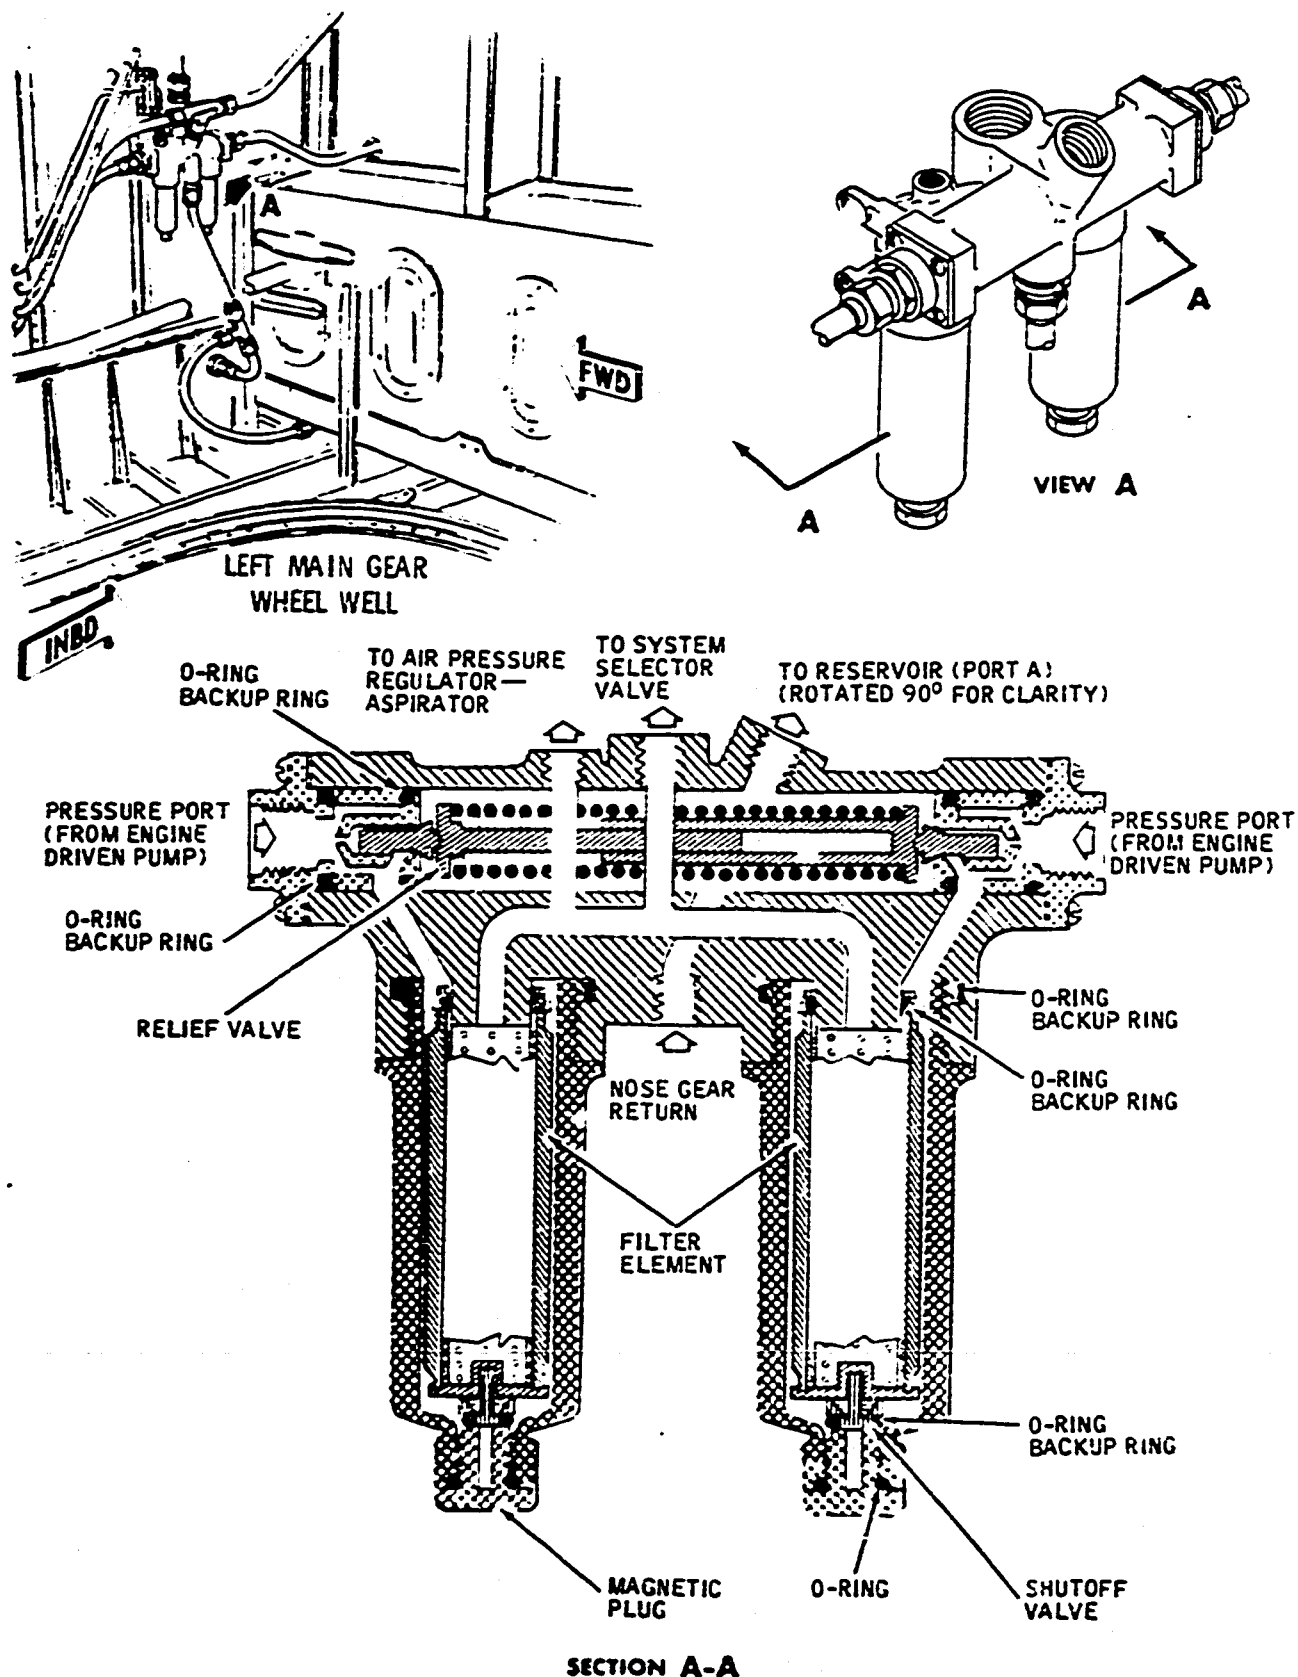

HA2-20

29-10-0  
 CODE 21  
 Page 30

Dual-Filter and Relief Valve -- Cutaway Valve  
 Figure 16

Jan 15/68

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) A check valve is installed in the system selector valve port to prevent reverse flow or pressure through the filter during auxiliary hydraulic pump operation.


O. System Selector Valve (See Figures 17 and 18.)

- (1) The system selector valve is a 3-position valve which permits directional control of fluid under pressure. The valve is installed on the left hydraulic power manifold and is accessible through the left main gear inboard door.
- (2) The selector valve pressure-to-system port and the return port are directly ported to the manifold. The engine pump pressure enters the valve through a port on the large end of the valve, and the auxiliary pump inlet and alternate ports are located at the top, toward the aft end of the valve. The valve control crank is attached to a push-pull rod and a cable sector.
- (3) Operation of the system selector valve is controlled by a lever located on the right side of the system engineer's control pedestal. When the control lever is moved to the selected position, the cable system, through the sector and crank, operates the valve positioning lever to drive the slide spool assembly to the selected position. When the control lever is placed in the general system (normal) position, the selector valve is actuated, causing hydraulic fluid to enter the valve through the system pressure port. The fluid is then directed into the manifold through the pressure-to-system port. In the general system (normal) position, fluid from the auxiliary pressure port is also routed to the pressure-to-system port. In the bypass/general system position, the selector valve ports engine pump pressure into the manifold through the return port. In this position, the auxiliary pump pressure is ported to the general system. In the general system/main gear downlock and flaps position, pump pressure is routed through the alternate port, at the top of the valve, for alternate operation of the flaps. Internal leakage provides lubrication for the moving parts of the valve.

P. Left Hydraulic Power Manifold (See Figure 19.)



- (1) The left hydraulic power manifold distributes fluid pressure from the hydraulic pump (any one of the three pumps), through control valves to the various airplane hydraulic subsystems. The left power manifold is located overhead in the left wheel well. Access to the left manifold is through the left main gear inboard door.
- (2) One valve-mounting pad is provided on the top of the manifold for the system selector valve. Four ports are provided on the manifold for connection of hydraulic pressure and return lines. Three of these ports are pressure outlet ports; one, located on the aft face of the manifold and one located on the bottom of the manifold port fluid to the flight controls. The third pressure outlet port, located on the bottom of the manifold, ports fluid directly to the priority valve, which in turn,

DOUGLAS AIRCRAFT CO., INC  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

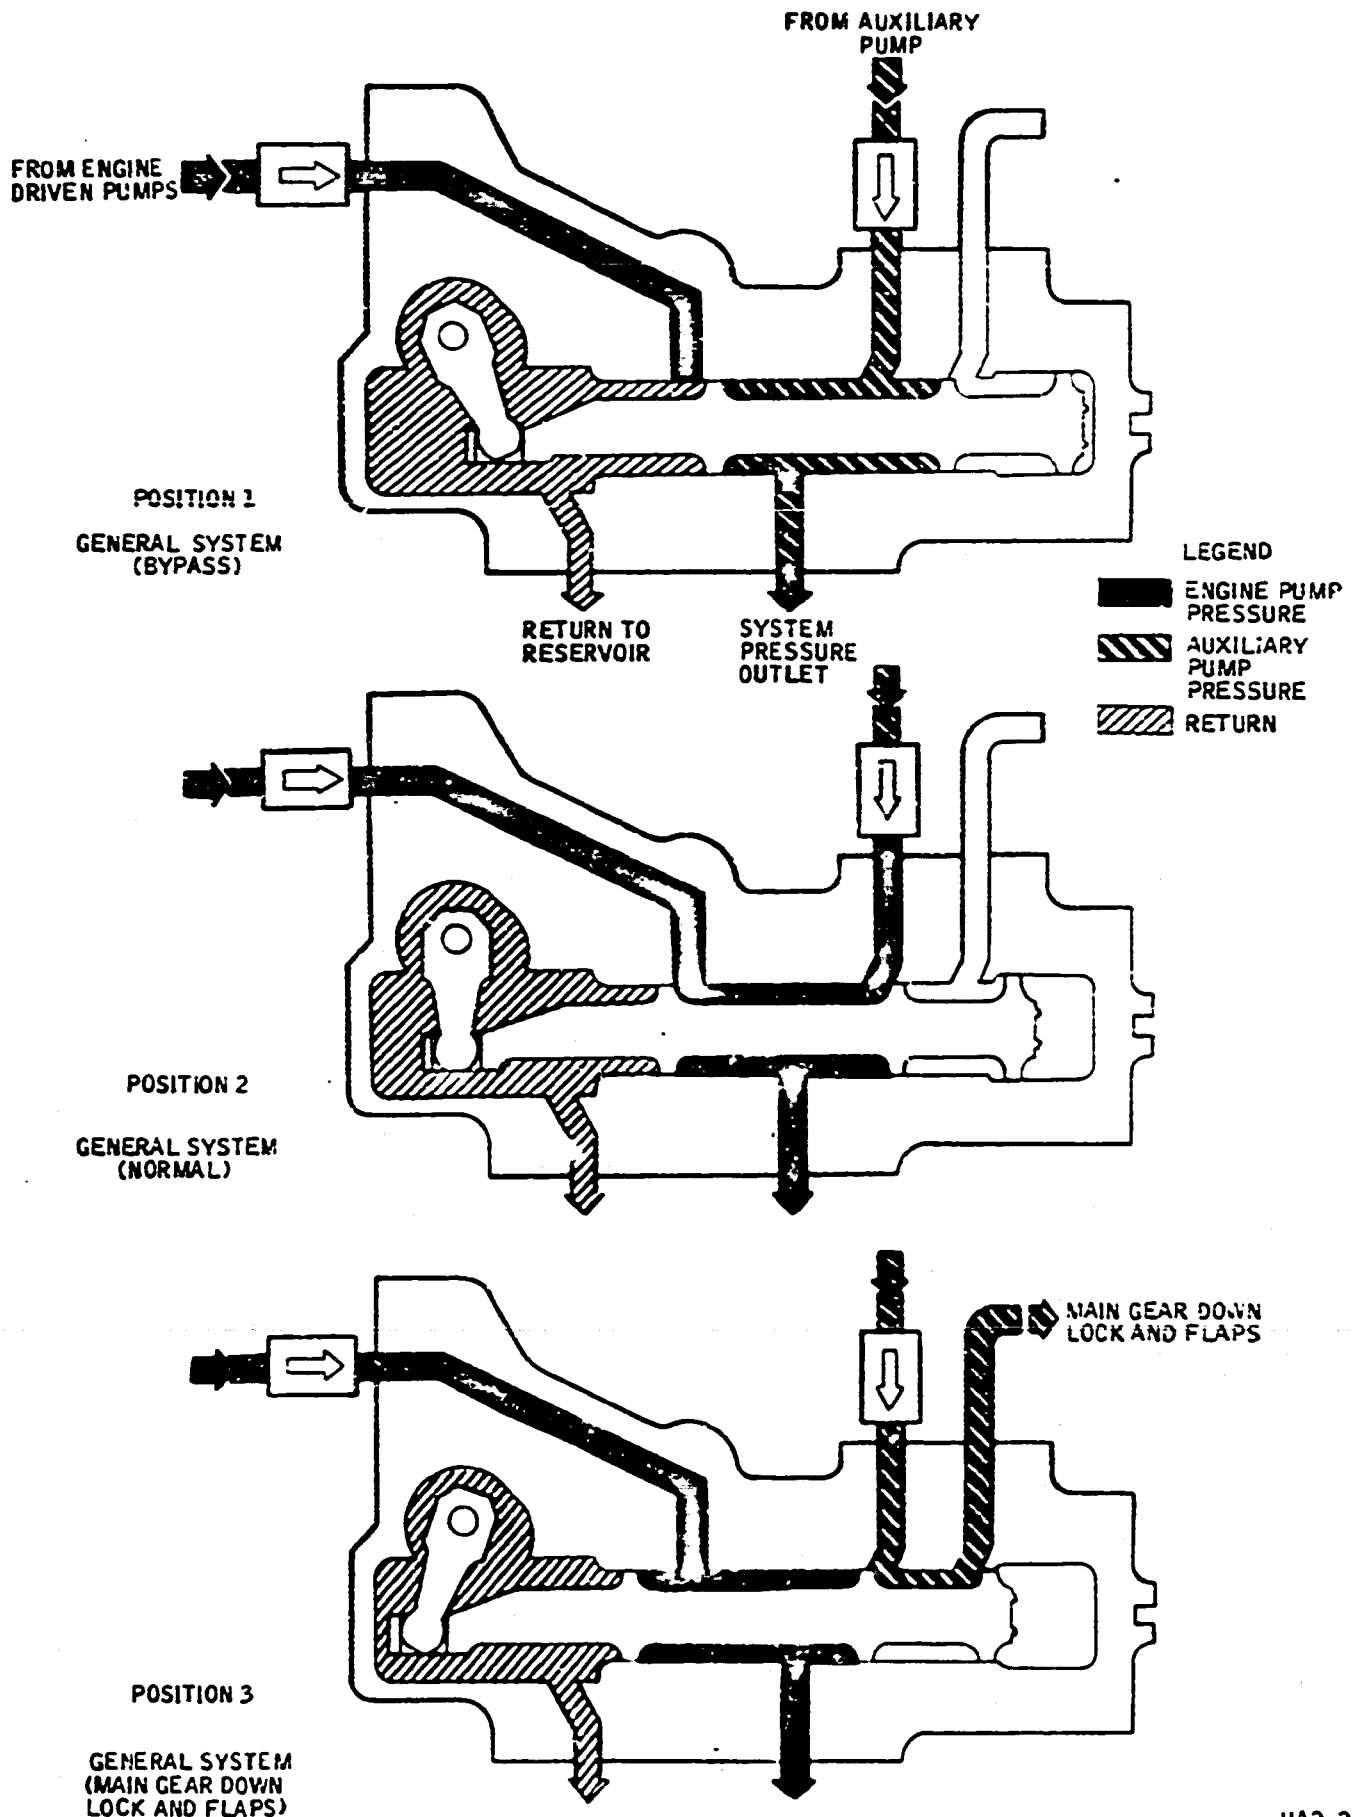

HA2-26

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

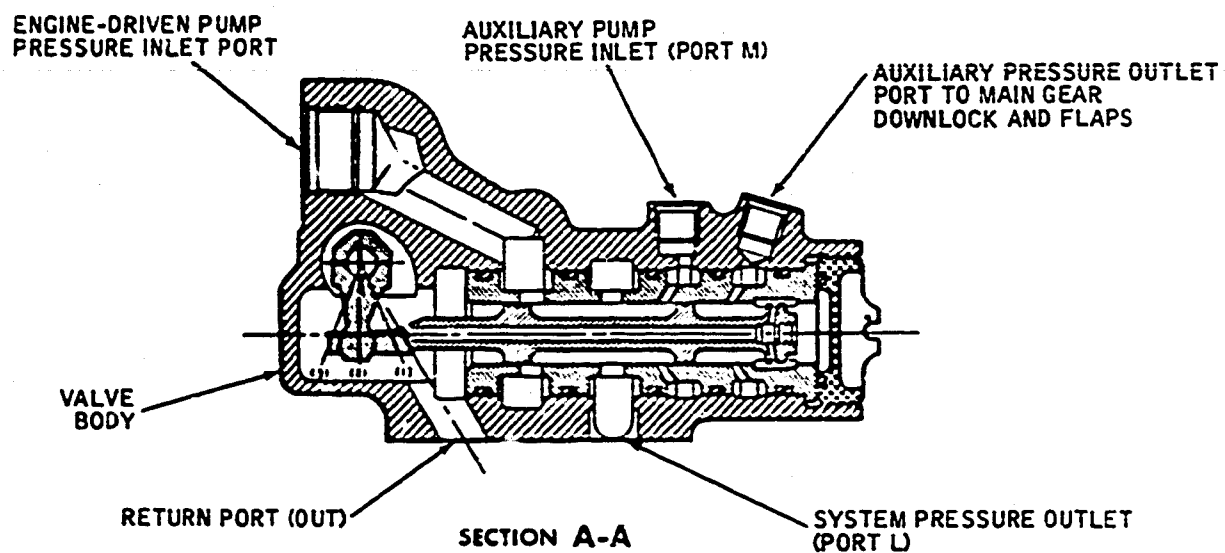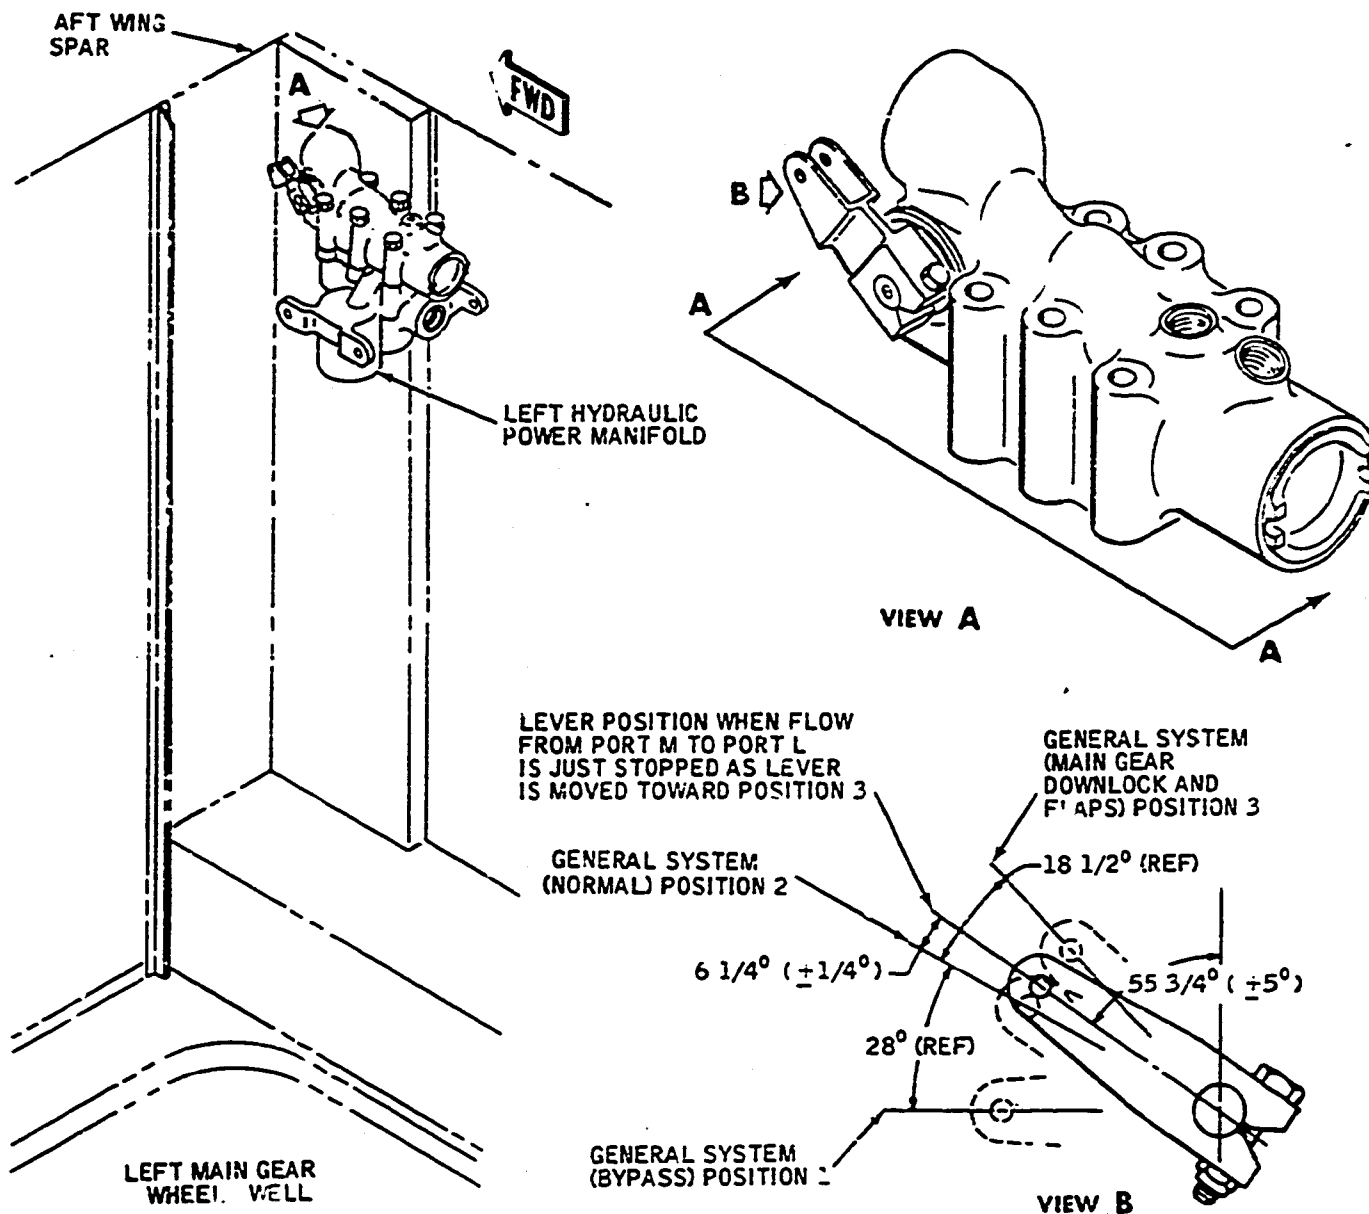

HA2-854A



System Selector Valve -- Cutaway View  
 Figure 18

Nov 1/69

Printed in U.S.A.

29-10-0  
 CODE 21  
 Page 33

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

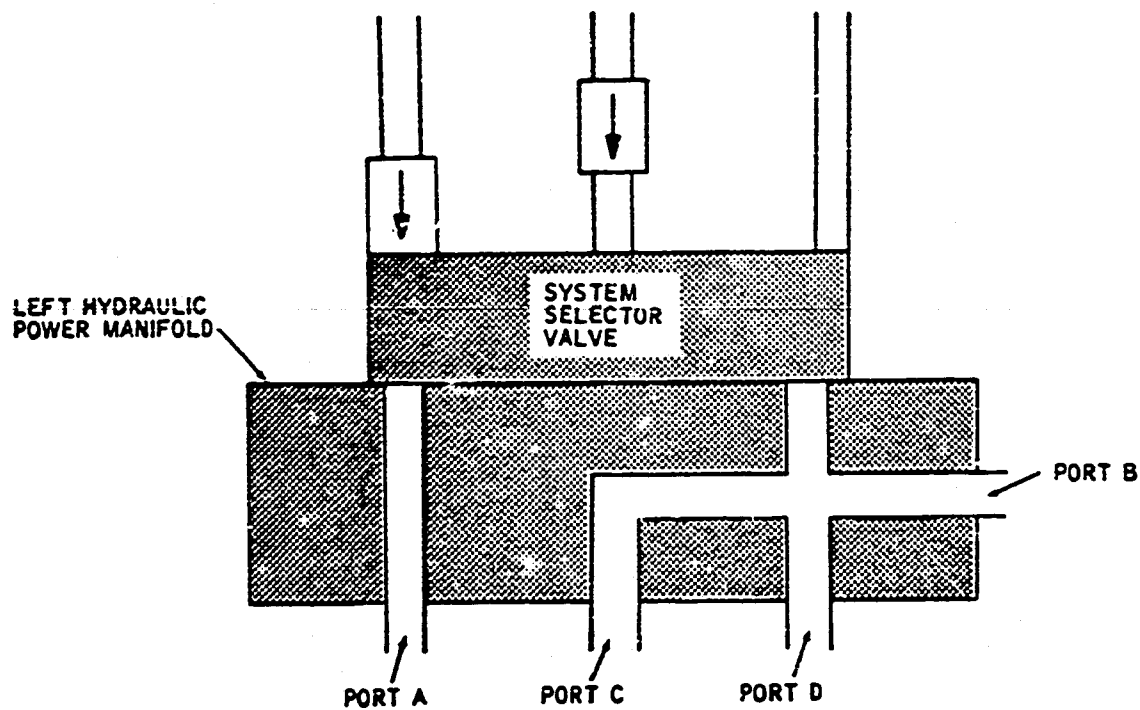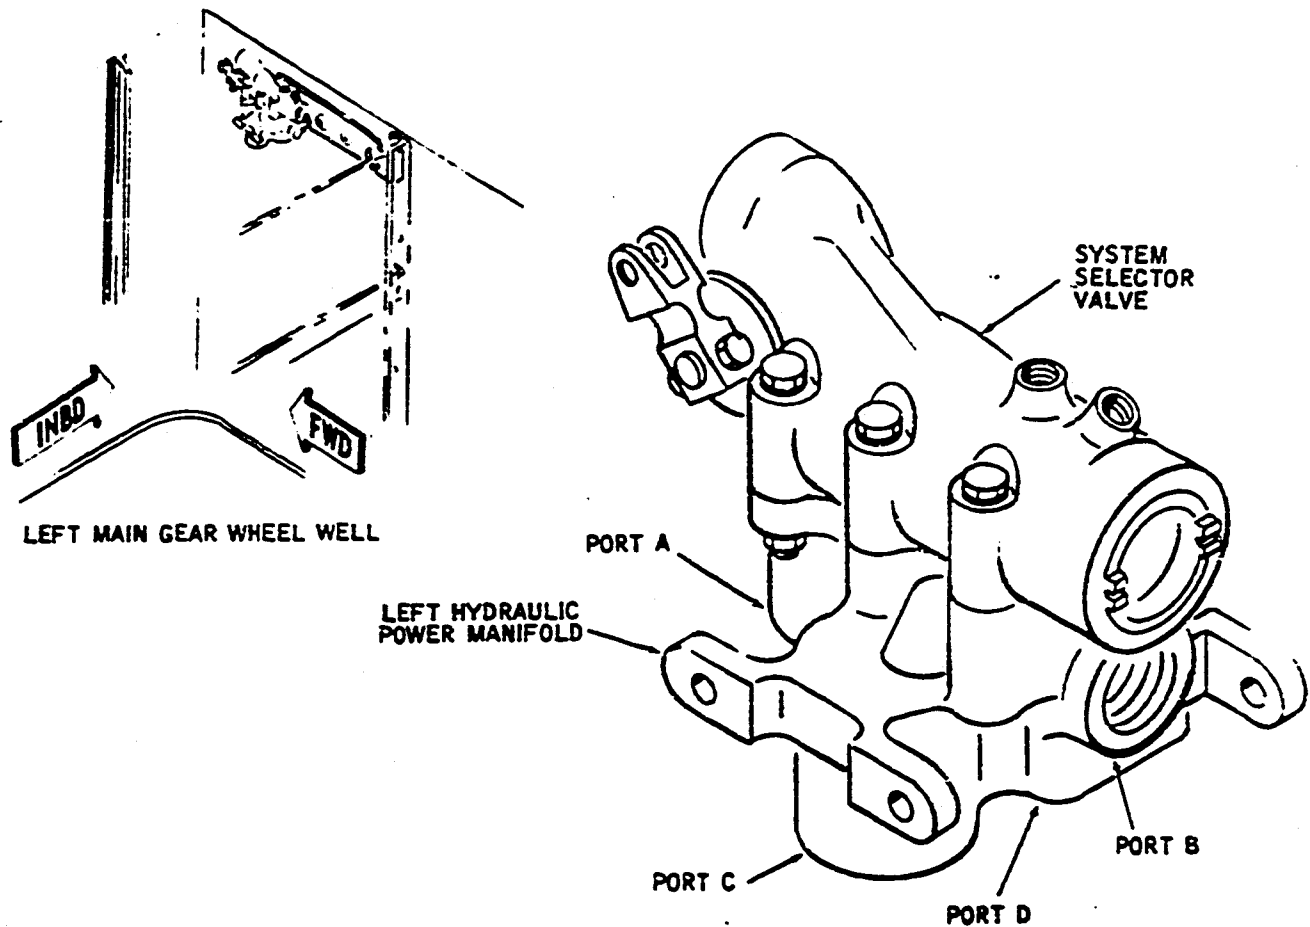

HA2-855

29-10-0  
 CODE 21  
 Page 34

Left Hydraulic Power Manifold -- Schematic  
 Figure 19

Jan. 15/68



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


ports fluid to the nose gear and to the right power manifold. The fourth, a return port, located immediately forward of the pressure line port on the bottom of the manifold, is connected by a line to a return port of the reservoir.

Q. Right Hydraulic Power Manifold (See Figure 20.)


- (1) The right hydraulic power manifold distributes fluid pressure from the hydraulic pumps (engine-driven or auxiliary, or any combination of these three pumps), through the control valves to the various hydraulic subsystems. The right hydraulic power manifold is located overhead in the right wheel well. The manifold is held in place with braces and is accessible through the right main gear inboard door.
- (2) The manifold contains passages for pressure and return fluid distribution, four check valves, ports for pressure and return lines, and mounting pads for the various control valves.
- (3) The right manifold receives fluid pressure from the left manifold. Pressure is ported through check valves to the wing flap control valve, to the slot control valve, to the main gear control valve, to the brake control valve, to the brake pressure transmitter, and to the brake accumulators.
- (4) Auxiliary hydraulic pressure is ported from the alternate port of the system selector control valve into port K in the right manifold. Port K is located inboard of the spoiler control valve. From port K, auxiliary hydraulic pressure is ported through a check valve to the downstream side of the wing flap control valve check valve and into the wing flap control valve for alternate operation of the wing flaps.
- (5) The return passage from the wing flap control valve ports fluid to return port A. The brake control valve return passage ports fluid into return line B through a two-way restrictor. The main gear control valve downline return fluid uses a separate port in the valve, bypasses the manifold, and returns the fluid directly to A return line to the reservoir. The upline in the main gear control valve uses the same return port, return port B, in the manifold as the brake control valve.

R. Deleted


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

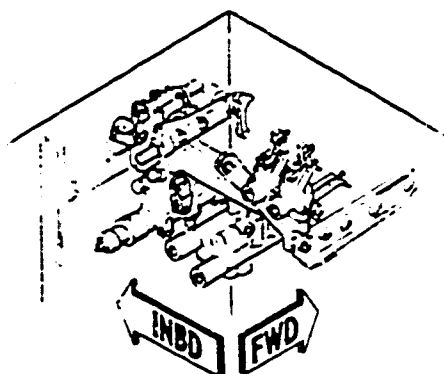

RIGHT MAIN GEAR  
WHEEL WELL

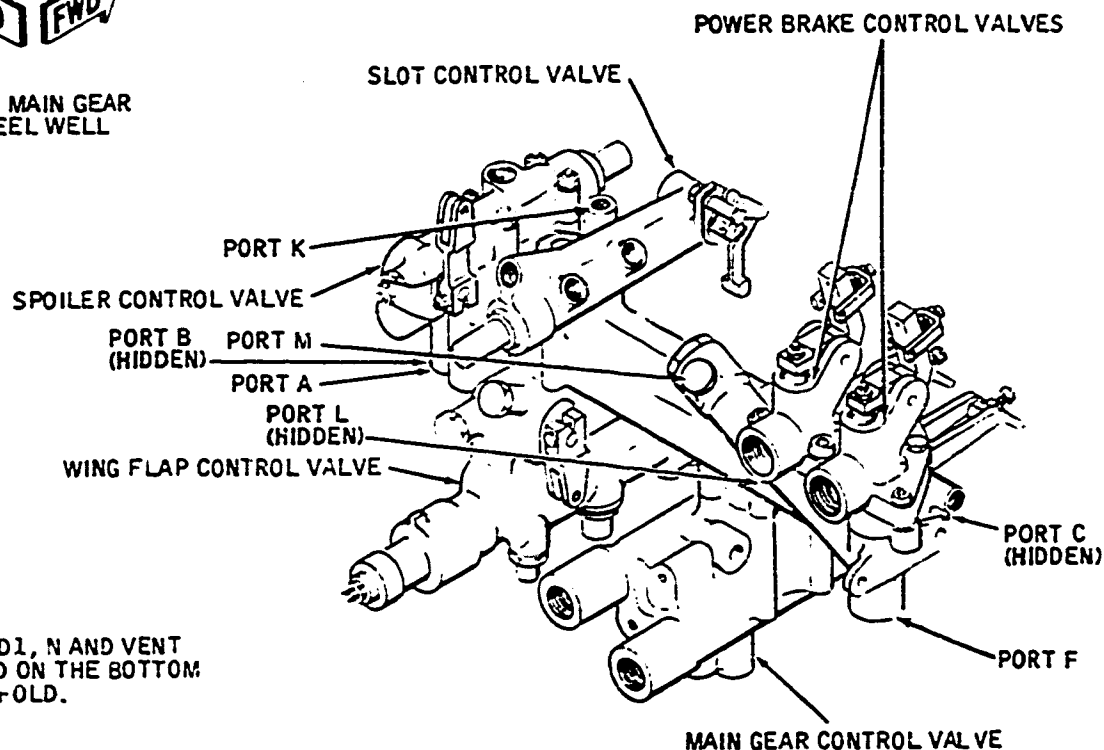

NOTE: PORTS B, C, D<sub>1</sub>, N AND VENT  
ARE LOCATED ON THE BOTTOM  
OF THE MANIFOLD.

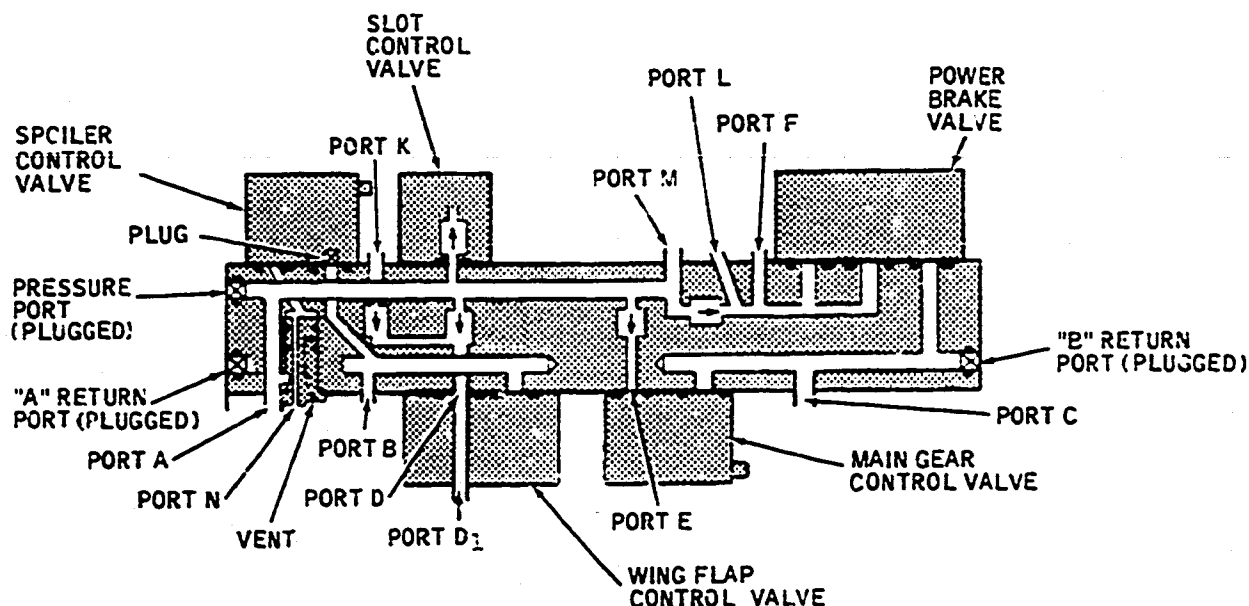

HA2-29A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


**S. Hydraulic Power System Accumulator (See Figure 21.)**

- (1) The hydraulic power system accumulator is a spherical, welded-steel, fluid and air bladder-separated container. The accumulator is installed in the pressure line of the hydraulic power system to provide a reserve supply of fluid under pneumatic pressure and to act as a shock absorber for system pressure surges.
- (2) The accumulator is located immediately aft of the left hydraulic power manifold and is accessible through the left main gear inboard door. It is mounted with two corner brackets and clamp blocks at the upper and lower port fittings.
- (3) The accumulator is installed in the pressure line of the hydraulic power system and is initially charged with 1000 psi of dry nitrogen. As the system pressure builds up, fluid is forced into the upper chamber of the accumulator, further compressing the trapped nitrogen to approximately 3000 psi. With full hydraulic system pressure, 3000 psi is indicated on the pressure gage adjacent to the filler valve. This reserve pressure smooths out any momentary lag in the pump's response to the system's demand for greater fluid flows. The accumulator permits a gradual rise in system pressure, thereby absorbing the shock of pump surges and relieving the piping and system operating units of high-impact loads. When the engine-driven hydraulic pumps are not operating, the accumulator provides system pressure (at a diminishing rate) until a quantity equal to the stored volume in the accumulator has been used by the system.

**T Hydraulic System Priority Valve (See Figure 22.)**

- (1) The priority valve is located in the left wheel well near the left hydraulic power manifold. The valve is installed in the hydraulic pressure line, between the two power manifolds, downstream of the pressure supply takeoff port for the flight controls. The priority valve is a balanced relief valve which reserves initial hydraulic pressure (up to 2150 psi maximum) for use in the flight control systems. The valve consists of a body with an inlet, an outlet, and a breather port. Internally, the valve contains a poppet valve plate, a poppet, a poppet valve load-spring, a piston, a piston load-spring, and a piston load-spring housing. The piston load-spring housing chamber is vented to ambient air through a breather hole which is covered by a butyl rubber band.
- (2) The priority valve shuts off hydraulic pressure to all subsystems downstream of the left power manifold, whenever the hydraulic pressure drops below 1700 psi minimum. At this point, the valve closes to reserve the hydraulic pressure for use in the flight control systems, preventing them from reverting to manual operation. When the hydraulic pressure rises to 2150 psi maximum, the priority valve opens and supplies pressure to the right manifold and all subsystems downstream of the priority valve.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

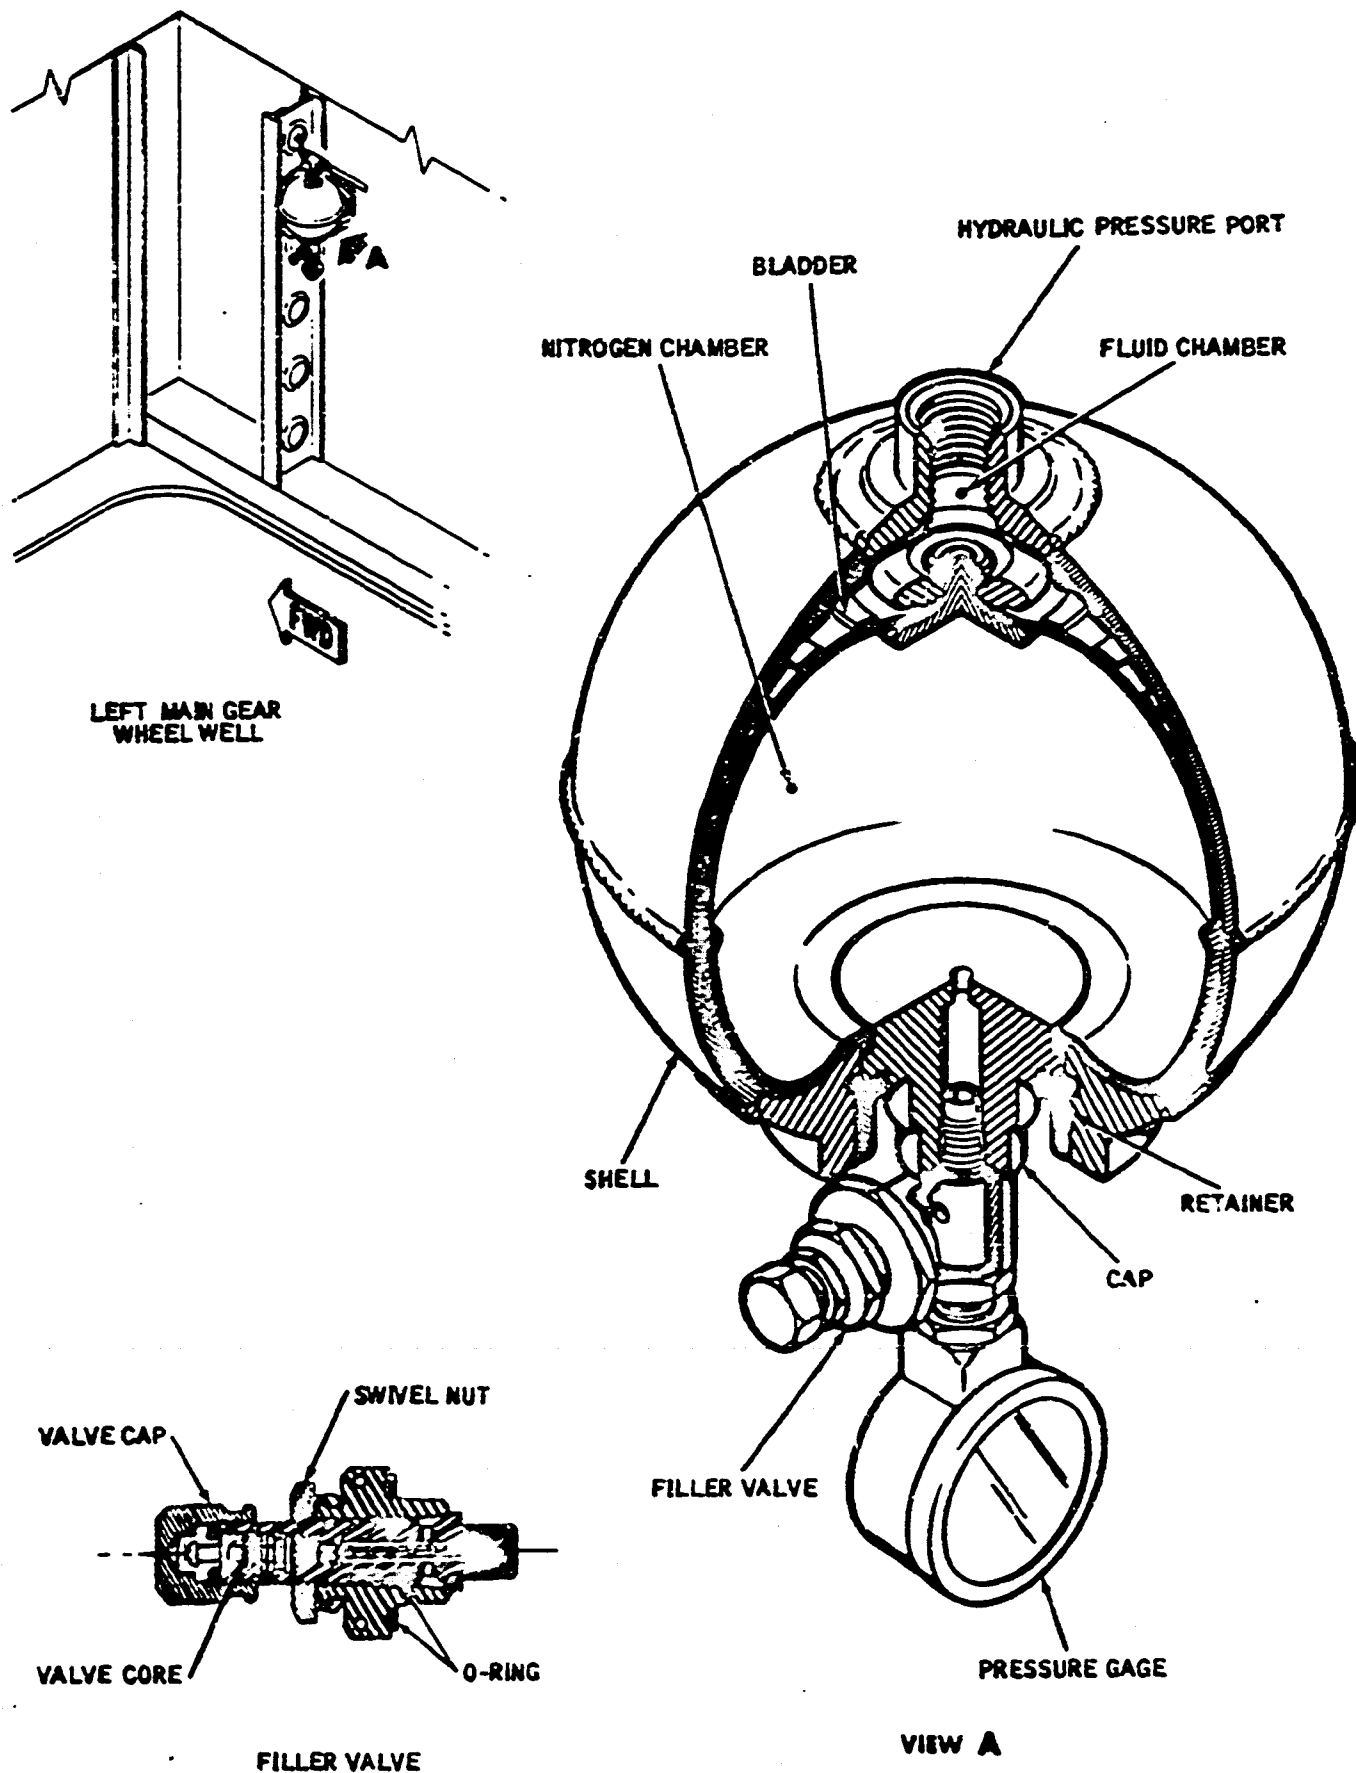

HA2-30

Hydraulic Power System Accumulator --  
 Cutaway View  
 Figure 21

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

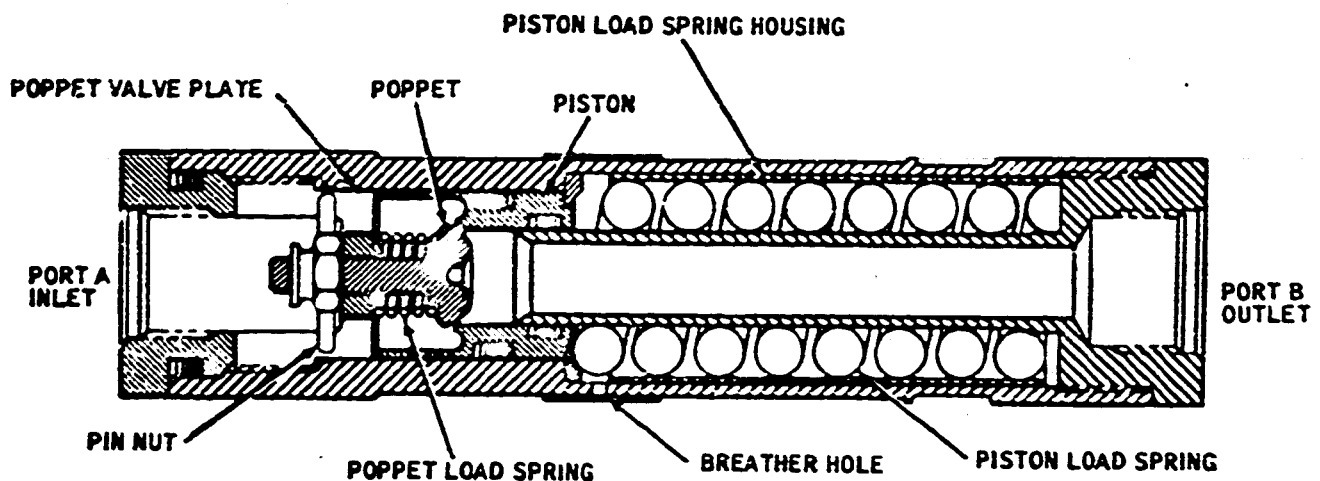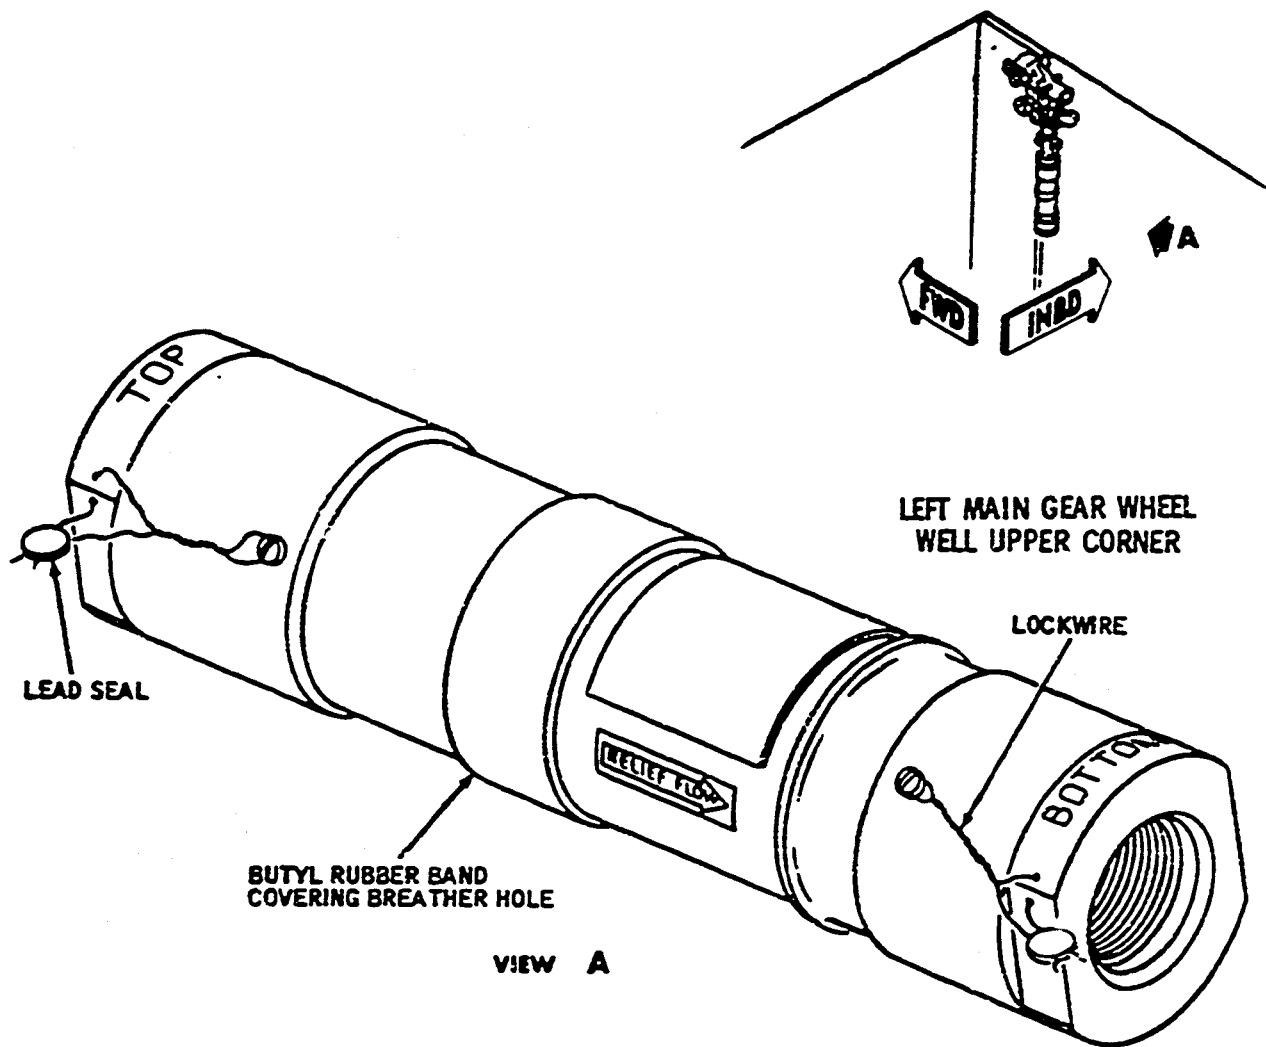

HA2-856

Hydraulic System Priority Valve -- Cutaway View  
 Figure 22

Jan 15/68

29-10-0  
 CODE 21  
 Page 39

Printed in U S A


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Hydraulic fluid from the left power manifold enters the priority valve through the inlet port, passes through the poppet valve plate holes, and applies pressure against the piston. When sufficient hydraulic pressure is applied to the piston, the piston load-spring compresses, unseating the poppet and permitting full flow through the valve. When the hydraulic pressure decreases to less than the opposing force value of the piston load-spring, the load-spring forces the piston against the poppet and shuts off fluid flow through the valve.
- (4) The maximum flow available from both engine-driven hydraulic pumps is: 44 to 45 gpm at takeoff, climb, and cruise configurations; 26 to 28 gpm at descent, approach, and engine idle configurations.
- (5) Some of the larger hydraulic system demands are as follows:
  - (a) Gear retraction -- 17 gpm (10-12 seconds)
  - (b) Gear extension -- 14 gpm (10-12 seconds)
  - (c) Wing flaps down -- 8 gpm (10 seconds)
  - (d) Wing flaps up -- 3 gpm (22 seconds)
  - (e) Horizontal stabilizer -- 7 gpm
  - (f) Ailerons -- 17 gpm (25°/second)
  - (g) Rudder -- 3 gpm (25°/second)
- (6) There are various combinations of hydraulic system operations which could cause momentary reversion of the flight controls to manual operation, the priority valve assures that the left power manifold receives all the hydraulic fluid pressure under conditions of very large flow demands.

U. Manual Shutoff Valve (Airplanes With S/B 29-67, See Figure 23)

- (1) Two manually operated shutoff valves are provided just downstream of the priority valve for isolation of non-priority subsystems during maintenance operations. One valve shuts off pressure to the following subsystems:
  - (a) Wing flaps
  - (b) Wing slots
  - (c) Main landing gear retraction
  - (d) Power wheel brakes
- (2) The other valve shuts off pressure to the nosegear retraction and nose-wheel steering subsystems.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

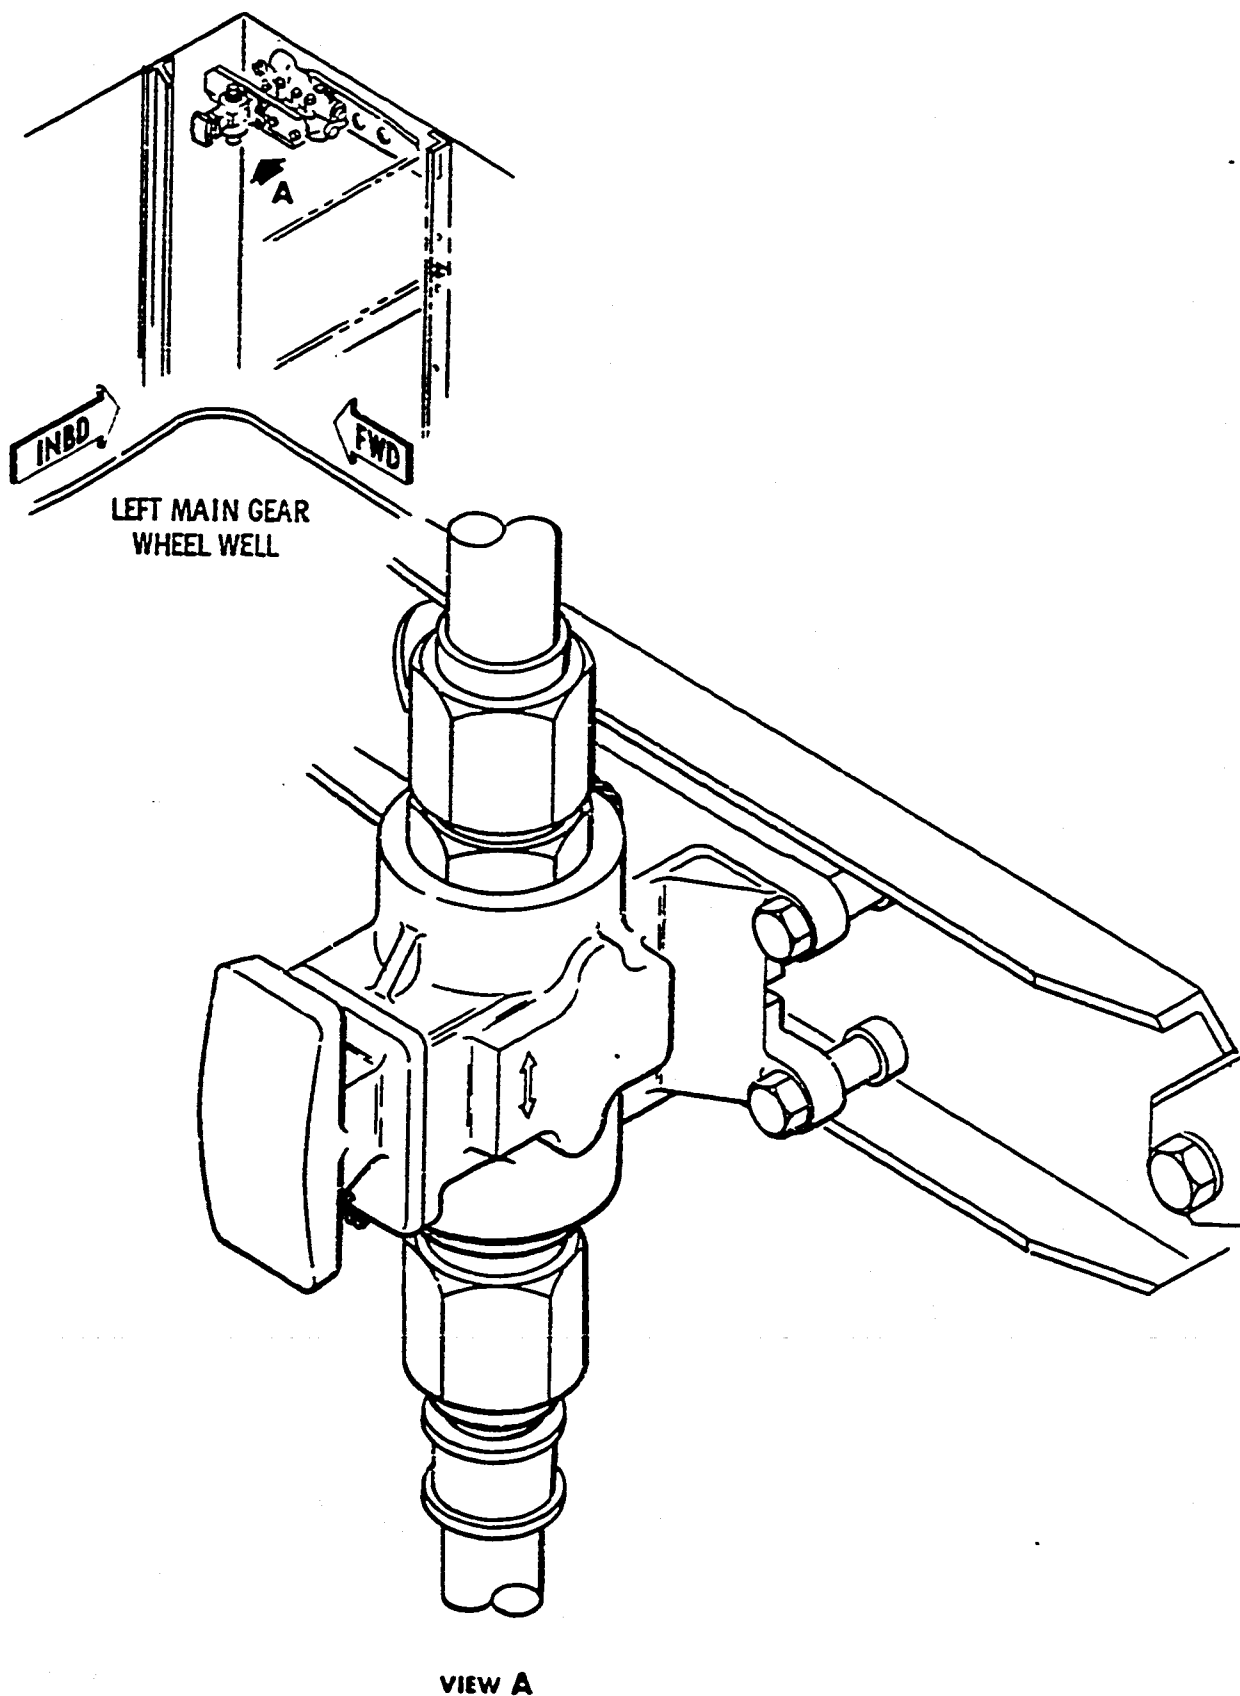

VIEW A

HA2-2937

Manual Shutoff Valve  
Figure 23

Nov 1/69

29-10-0  
CODE 21  
Page 41

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The manual shutoff valves are located in the upper inboard forward corner of the left main gear wheel well. One valve is mounted on the left power manifold support, the other is mounted to a structure stiffener.
- (4) The valves consist of two position (on-off), rotary type, valves with identical and interchangeable inlet and outlet ports. A T shaped handle is provided on each valve for manual operation and lockwire holes are provided in the base of the handle for safetying the valve in the open position.

V. Hydraulic System Selector Control Lever

- (1) The hydraulic system selector control lever is a manually actuated, mechanical lever detented to three positions. The lever provides a mechanical means, through cables, for positioning the system selector valve and the auxiliary hydraulic pump supply selector valve. The hydraulic system selector control lever is located on the system engineer's control pedestal. The lever is attached to a drive sector, located on a common shaft with the other control pedestal sectors. The lever and sector are accessible through the cover plates on the system engineer's pedestal.
- (2) To put the hydraulic power system in the bypass condition, the system selector control lever is lifted out of detent and moved to bypass/general system position. At the same time, the cable moves the sector and pushrod of the system selector valve to the No. 1 position. The pushrod positions the system selector valve to the No. 1 bypass position. At the same time, the cables from the system selector valve sector move the auxiliary pump supply selector valve sector to No. 1 (auxiliary) position. The auxiliary pump supply selector valve remains in the auxiliary supply position through the idle feature of the sector rigging. In this condition, the engine-driven pump pressure is ported to the reservoir and the auxiliary pump supplies pressure to the general system. In this position, the fluid is supplied to the auxiliary pump from the low standpipe in the hydraulic system reservoir. To put the system into the alternate condition, the selector control lever is lifted out of detent and moved to the general system/main gear downlock and flaps position. The cables move the system selector valve sector to the No. 3 (alternate) position. The system selector valve sector moves the cables rotating the auxiliary pump supply selector valve sector to the No. 3 (alternate) position. As the sector rotates, the end of the arm moves away from the idle position. This positions the valves to the alternate position; supplying fluid to the auxiliary pump from the auxiliary pump alternate reservoir. In this position, fluid from the auxiliary pump is ported to the wing flap control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported to the general system.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - DESCRIPTION AND OPERATION

1. General

A. Description (See Figures 1 and 2.)

- (1) The hydraulic power system receives fluid pressure from the engine-driven hydraulic pumps, one installed on each inboard engine. The electrically driven auxiliary pump is used to supplement the engine-driven pumps, or to independently supply the system with fluid pressure.
- (2) The hydraulic system reservoir, located in the left wing root, has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir is used for fluid, and 1/10 is used for foam space. A separate air chamber is installed in the reservoir system to provide for a greater fluid capacity in the main reservoir. A reservoir filler assembly is installed in the piping between the reservoir and the air chamber and has a vent line from the filler neck to the tee at the top of the reservoir sight gage. The reservoir is pressurized to 30 to 35 psi by bleed pressure from the engine-driven pumps through an air pressure regulator-aspirator.
- (3) The engine-driven pumps receive fluid from the pressurized main reservoir through respective engine hydraulic fire shutoff valves. The engine hydraulic fire shutoff valves are normally open and can be mechanically controlled from the flight compartment. The pumps supply fluid pressure through respective check valves to the dual filter and relief valve. Some of the fluid from the filter is ported through the regulator-aspirator to pressurize the reservoir. Most of the fluid is routed through a check valve to the system selector valve, and then to the left and right hydraulic power manifolds. The manifolds distribute the fluid pressure to the subsystems.
- (4) Hydraulic fluid is normally supplied to the auxiliary hydraulic pump from a low standpipe in the main reservoir. During alternate operation, the auxiliary hydraulic pump receives fluid supply from the auxiliary pump alternate reservoir, which is located just aft of the auxiliary pump. From these reservoirs, the fluid is ported through the auxiliary pump selector valve which is mechanically controlled from the flight compartment by the system selector control lever. When operating, the auxiliary hydraulic pump supplies fluid pressure to the subsystems through the system selector valve which is also controlled by the system selector control lever in the flight compartment. A filter and check valve are installed in the line from the auxiliary pump to the system selector valve.
- (5) An accumulator is installed in the pressure line to the subsystems to provide a reserve supply of fluid and to act as a surge damper for the system.

Jan 15/68

Printed in U.S.A.

29-10-0  
CODE 22  
Page 1


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Engine-driven pump fluid pressure is routed through the system selector valve to the left power manifold, where it is distributed to some of the subsystems and through the priority valve to the right power manifold. Fluid pressure from the right power manifold is distributed to the remaining subsystems.
- (7) The priority valve is a spring-loaded, poppet-type, balanced relief valve installed in the line downstream of the left power manifold. The priority valve's function in the system is to prevent the flight control systems from reverting to manual operation during high demands on the hydraulic system.
- (8) A fluid pressure transmitter, located in the nosewheel well, senses the system pressure, which is indicated on the hydraulic system pressure indicator in the flight compartment.

**B. Normal Operation**

- (1) Fluid is supplied to the hydraulic system from the pressurized hydraulic system reservoir. For operation of the hydraulic system under normal conditions, 8.1 US gallons (6.7 Imperial gallons; 30.6 liters) of hydraulic fluid are available to the engine-driven hydraulic pumps, and 12.9 US gallons (10.7 Imperial gallons; 48.8 liters) are available to the auxiliary hydraulic pump. Supply lines from the main reservoir carry fluid to each inboard pylon through normally open engine hydraulic fire shutoff valves to the engine-driven hydraulic pumps. Fluid is supplied to the auxiliary hydraulic pump from the main reservoir through a low standpipe at the base of the reservoir. Fluid is carried from the reservoir through the auxiliary pump selector valve to the auxiliary hydraulic pump.
- (2) The engine-driven hydraulic pumps supply full system pressure (3000 psi nominal) at any given engine speed, from idle to full power. The output flow of the pump is varied by sensing pressure from the outlet side of the pump. Each engine-driven pump contains a solenoid-operated bypass valve which, when energized, bypasses the pressure control regulator of the pump and ports fluid to the pump yoke control piston which feathers the pump. When the pump is feathered, flow rate is reduced to almost zero (1.0 gpm) and to a pressure of approximately 300 psi. Half of this flow maintains pump lubrication and cooling through internal leakage. This leakage is returned, through a check valve, the engine-driven pump case drain line filter, and another check valve to the case drain return port of the reservoir. The pressure fluid from each pump passes through a check valve to the dual filter and relief valve.
- (3) The fluid enters the dual filter and relief valve through the relief valve chamber. The fluid is passed through the filter element, through a manifold, and through a common outlet port. Fluid from the outlet port is routed through a check valve to the system selector valve. If back pressure in the system builds up to approximately 3300 psi, the relief valves in the dual filter and relief valve open and port fluid

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

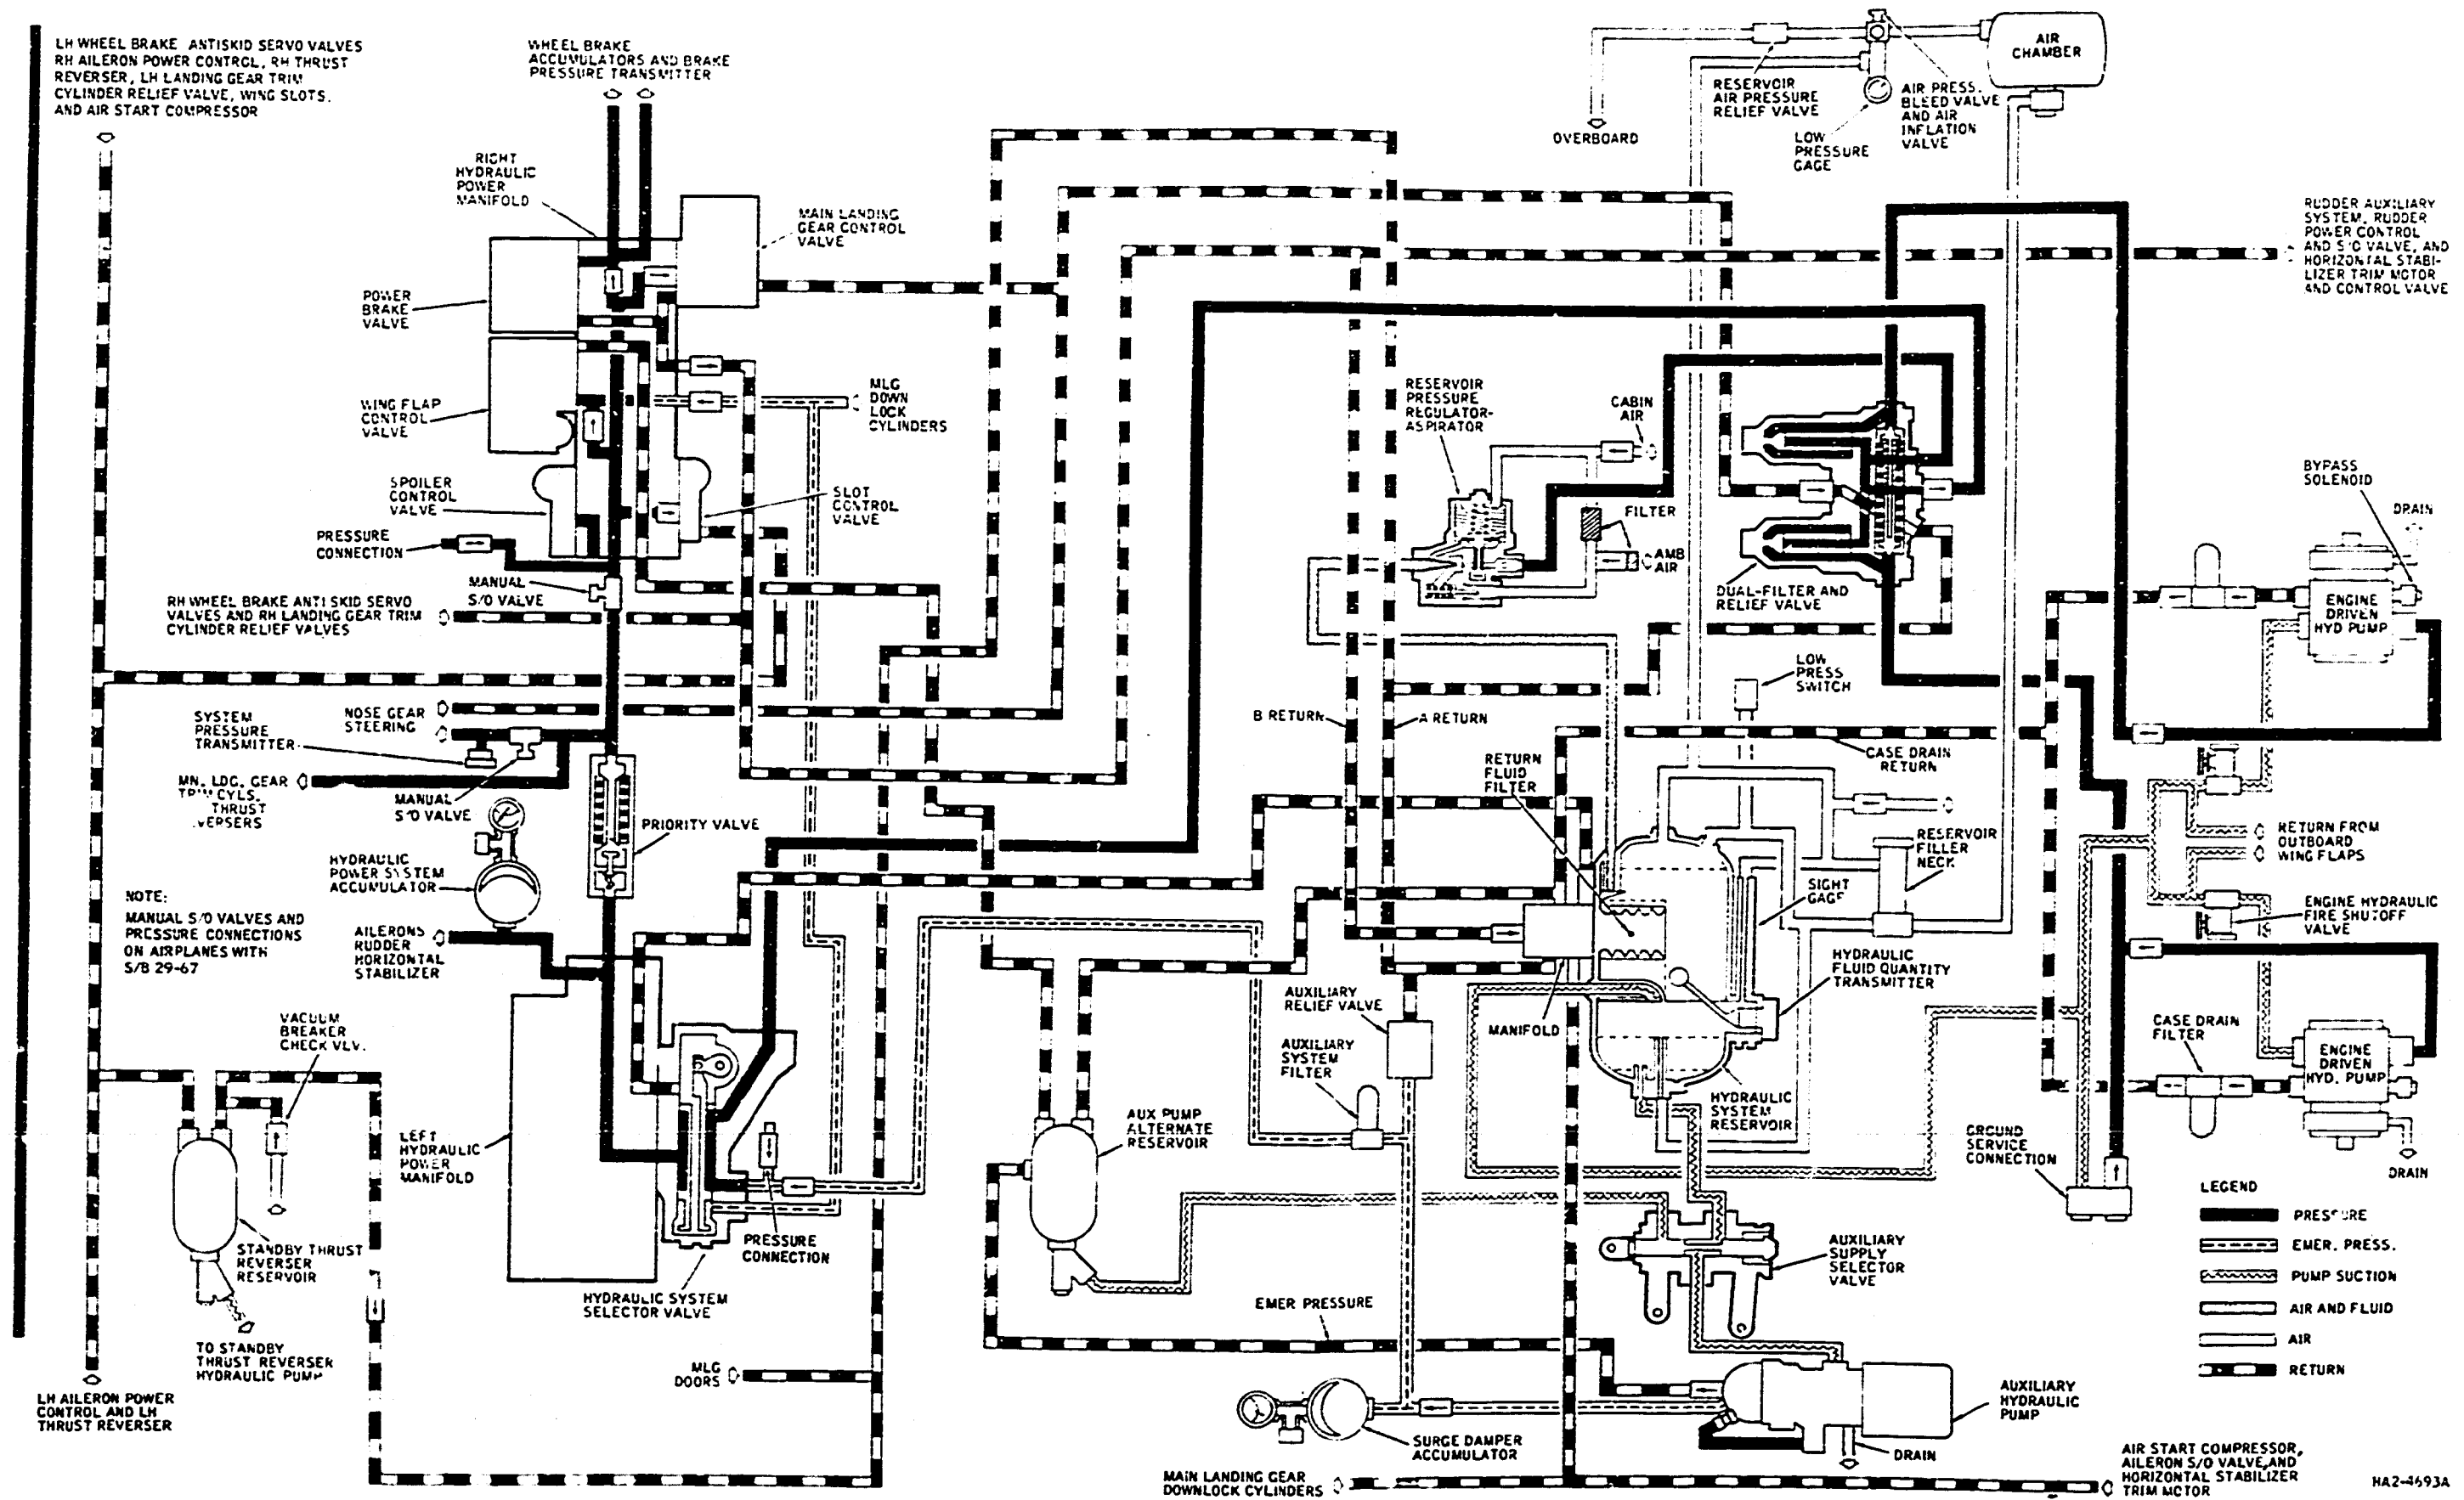

Hydraulic Power System -- Schematic Diagram  
 Figure 1


29-10-0  
 CODE 22  
 Page 3

Nov 1/69

Printed in U.S.A.

HA2-4693A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

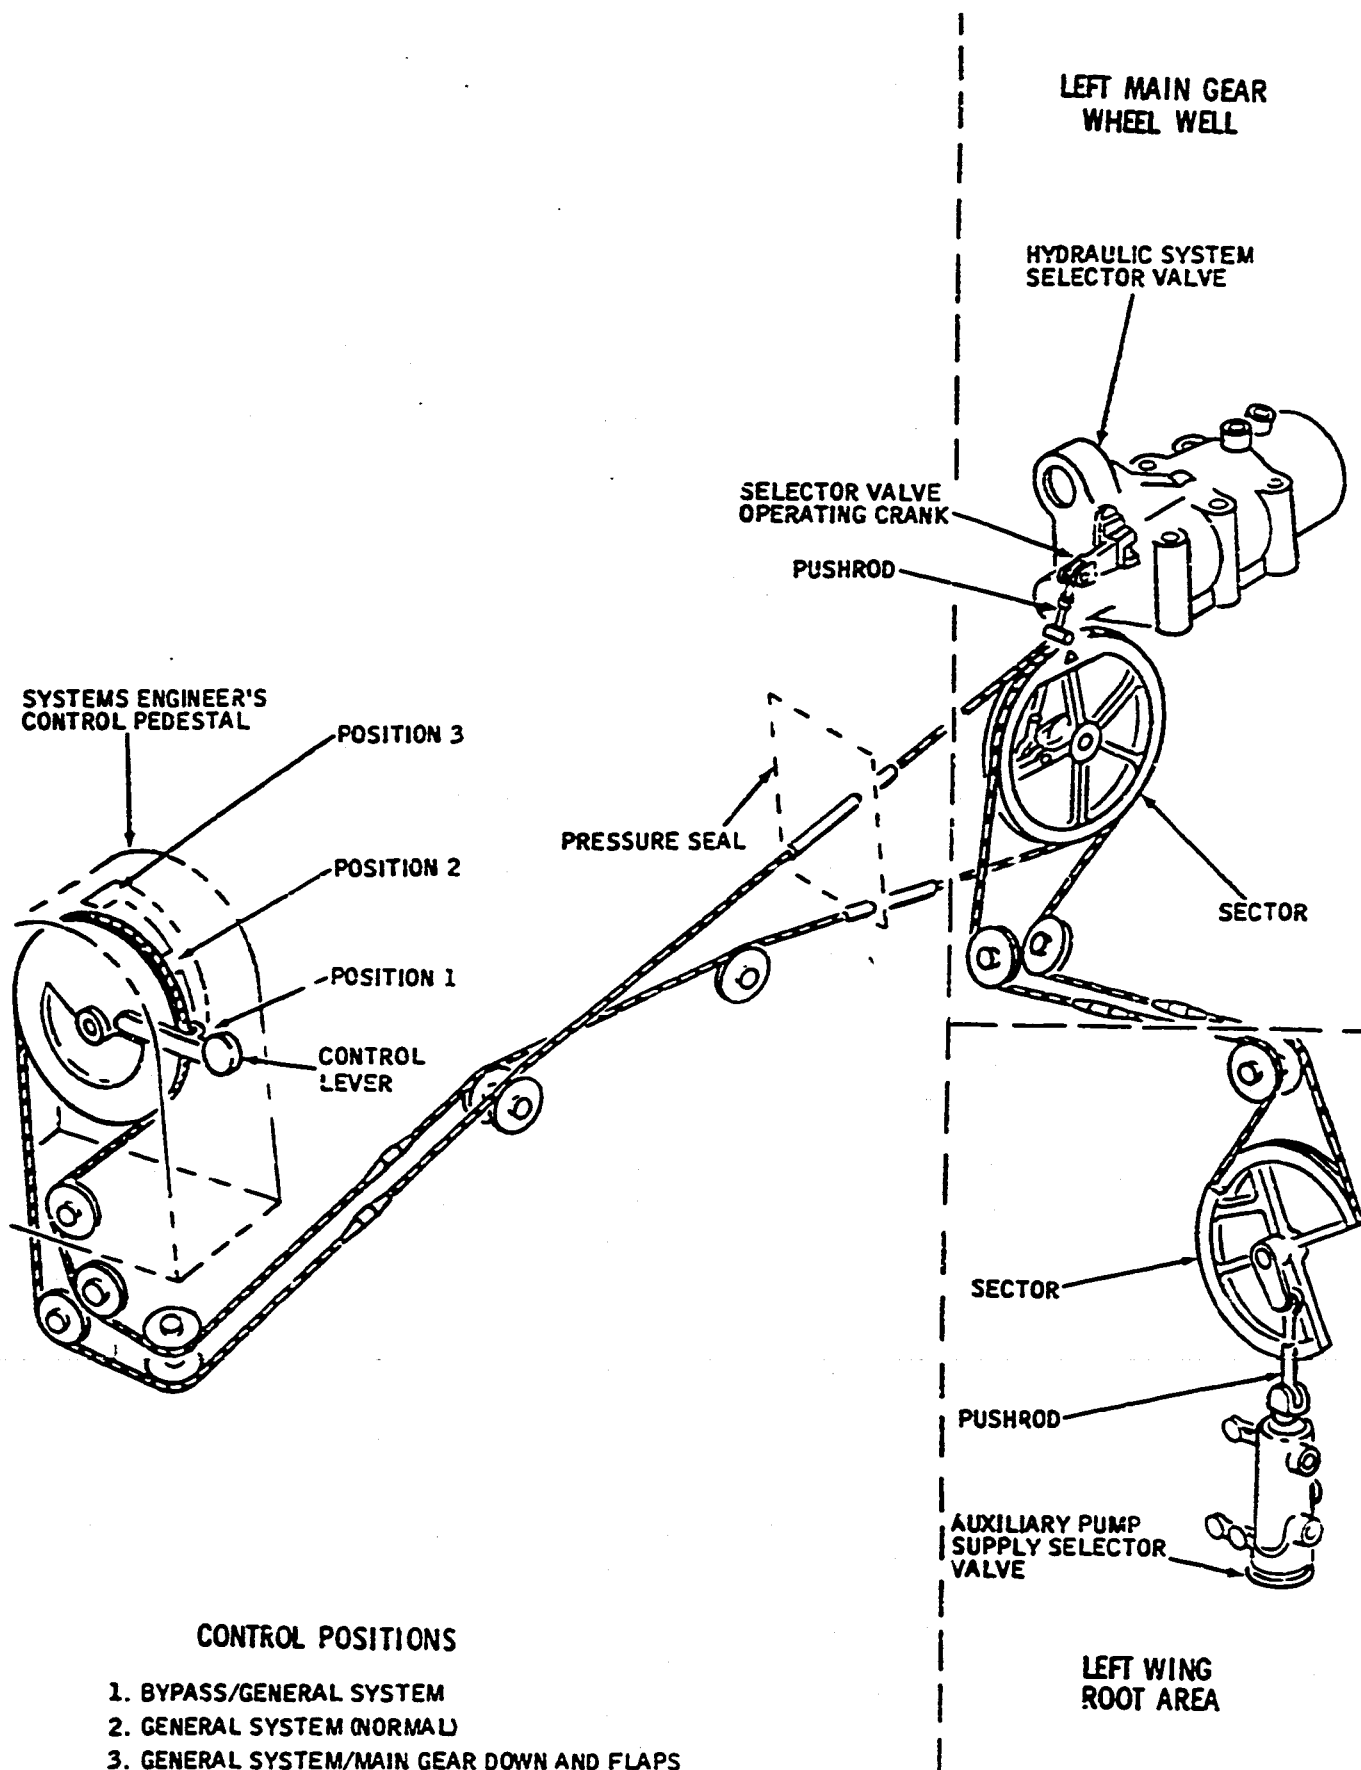

Hydraulic System Selector and Auxiliary Pump Supply  
 Selector Valves -- Mechanical Control Schematic  
 Figure 2

Jan 15/68

Printed in U.S.A.

HA2-486

29-10-0  
 CODE 22  
 Page 5

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

back to the reservoir via a return port. The relief valve poppet closes again when system pressure drops to approximately 3000 psi.

- (4) The aspirator receives filtered fluid (bleed pressure at nominal 3000 psi) from the dual filter and relief valve. The aspirator operates on the jet pump principle. Hydraulic fluid is atomized and mixed with air within the unit by a nozzle and a venturi. The mixture is used to pressurize the reservoir and reservoir air chamber. The regulator diaphragm maintains a pressure range of 30 to 35 psi in the reservoir and air chamber. If there is a regulator malfunction, the aspirator stalls when the outlet pressure reaches a maximum of 40 psi. A reservoir relief valve in the reservoir vent line relieves thermal expansion pressure above 45 (+5, -0) psi.
- (5) Pump pressure fluid enters the system selector valve through the system pressure inlet port. When the pump selector control lever is in the general system (normal) position, fluid is ported to the pressure passages of the left power manifold. The fluid pressure in the left power manifold is ported through the priority valve to the nose gear and the right power manifold and directly to the following valves:
  - (a) Aileron power shutoff
  - (b) Rudder power shutoff
  - (c) Longitudinal trim hydraulic motor shutoff
- (6) The right power manifold distributes fluid pressure to the brake accumulators, the pressure transmitter, and the following control valves:
  - (a) Wing flap
  - (b) Slot
  - (c) Main gear
  - (d) Power brake
- (7) The return fluid from the wing flap control valve is ported through the right power manifold and into the auxiliary hydraulic pump alternate reservoir. Return fluid from the outboard wing flaps is piped into the suction lines for each engine-driven hydraulic pump. Return fluid from the slot control valve is ported into the A return line to the main reservoir. The power brake and main gear control valve gear up return fluid is ported through a restrictor check valve into the B return line to the reservoir. The main gear control valve gear down return pressure bypasses the right manifold and returns to the reservoir through the A return line. All return fluid entering the reservoir is filtered through the return ports filter located within the reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-3 SIXTY SERIES**  
MAINTENANCE MANUAL

C. Bypass Operation

- (1) The output of the engine-driven hydraulic pumps is bypassed by moving the system selector control lever out of the general system (normal) position to the bypass/general system position.
- (2) The system selector valve in the bypass position ports engine-driven pump pressure from the dual filter and relief valve directly to the return passage of the left power manifold. From the manifold the fluid is ported directly to a tee in the wing flap return port of the hydraulic system reservoir. In the bypass condition, the auxiliary hydraulic pump receives fluid from the hydraulic system reservoir, pressurizes it to system pressure and ports it to the left and right power manifolds for distribution to the subsystems.

D. Alternate Operation

- (1) When both engine-driven hydraulic pumps and the auxiliary hydraulic pump are rendered inoperative due to the loss of the normal supply of fluid, the hydraulic power system can be rigged for alternate operation. This is accomplished by placing the system selector control lever in the general system/main gear downlock and flaps position. When the system selector control lever is in this position, the auxiliary hydraulic pump supply selector valve is positioned to supply fluid from the auxiliary pump alternate reservoir to the auxiliary pump.
- (2) Fluid is supplied to the auxiliary pump from the outlet port of the auxiliary pump supply selector valve. Output pressure is ported through the auxiliary system filter and check valve to the auxiliary pressure inlet port of the system selector valve.
- (3) In the general system/main gear downlock and flaps position, auxiliary pump pressure bypasses the manifold pressure passages and is ported from the alternate outlet port of the system selector valve. Fluid from this port flows directly to a port on the right power manifold, through an internal check valve in the manifold, to the wing flap control valve.

E. Mechanical Control

- (1) The hydraulic power mechanical control system consists of the hydraulic system selector control lever cable drum, the system selector valve sector, the system selector valve, the auxiliary hydraulic pump supply selector valve sector, and the auxiliary hydraulic pump supply selector valve.
- (2) The control lever located on the system engineer's control pedestal is used to position the system selector valve and, in turn, the auxiliary hydraulic pump supply selector valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (3) The control lever is spring loaded into general system (normal) position, and is connected to the control lever cable drum. Two cables run from the drum, under the cabin floor, aft through the pressure bulkhead at the rear wing spar, and into the left wheel well to the system selector valve sector. A pushrod connects the sector to the positioning lever of the system selector valve.
- (4) A second set of cables is routed from the system selector valve sector into the left wing root to the auxiliary hydraulic pump supply selector valve sector. When the system selector valve is in either bypass or normal, the auxiliary hydraulic pump supply selector valve sector is arranged so that the pushrod idles between the two positions. This allows the valve to remain in the auxiliary position. When the sector is moved to the alternate position, the pushrod is pulled by the sector to reposition the valve to the alternate position.
- (5) The control lever is normally in the general system (normal) position. To move the system selector valve to the bypass position, the control lever is moved to the bypass/general system position. When the system selector valve is moved to the bypass position, the auxiliary hydraulic pump supply selector valve sector is moved to a new position. Due to the idle feature on the auxiliary sector, the valve remains in the auxiliary position. With the valve in this position, fluid is supplied to the auxiliary pump through the low standpipe in the hydraulic system reservoir. In this condition, engine-driven pump pressure is ported to the reservoir and the auxiliary pump pressure is ported to the general system.
- (6) To put the system in alternate operation, the control is moved to the general system/main gear downlock and flaps position. This moves the system selector valve to the alternate position, and simultaneously moves the auxiliary hydraulic pump supply selector valve to the alternate position. Fluid is supplied to the auxiliary pump from the auxiliary hydraulic pump alternate reservoir. Fluid pressure from the auxiliary pump is ported to the flap system control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported from the system selector valve to the general system.

## 2. System Components

### A. Hydraulic System Reservoir (See Figures 3 and 4.)

- (1) The hydraulic system reservoir is installed on the aft side of the wing spar in the left wing root and is accessible through the left wing root access door. The hydraulic system reservoir serves as the main source of hydraulic fluid for the engine-driven hydraulic pumps and the normal supply for the auxiliary hydraulic pump. The reservoir is cylindrical in shape and contains a filter, baffle, and a screen cover encasing the

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

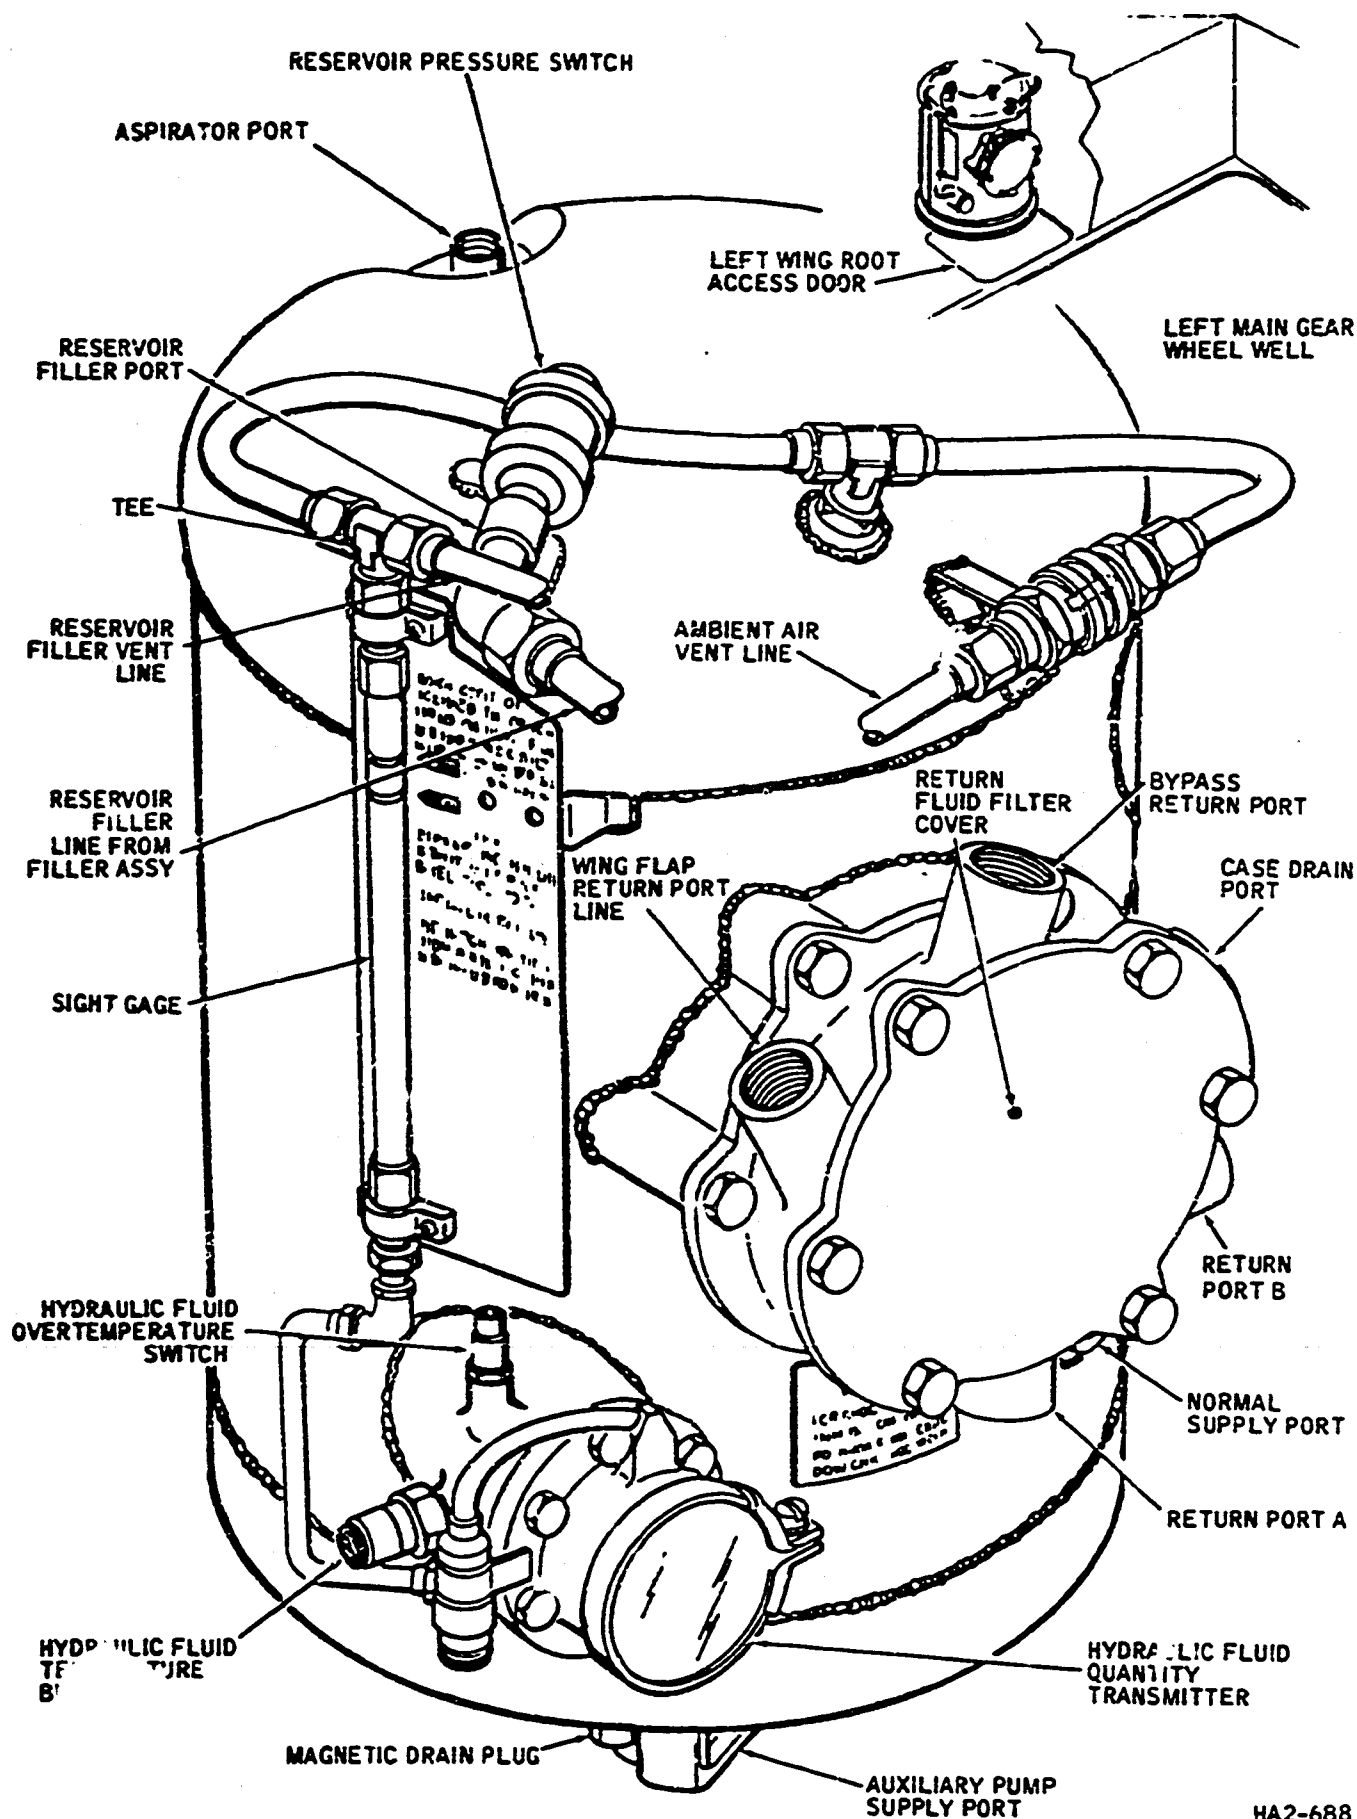

Hydraulic System Reservoir -- External View  
 Figure 3

Jan 15/68


Printed in U.S.A.

HA2-688

29-10-0  
 CODE 22  
 Page 9



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

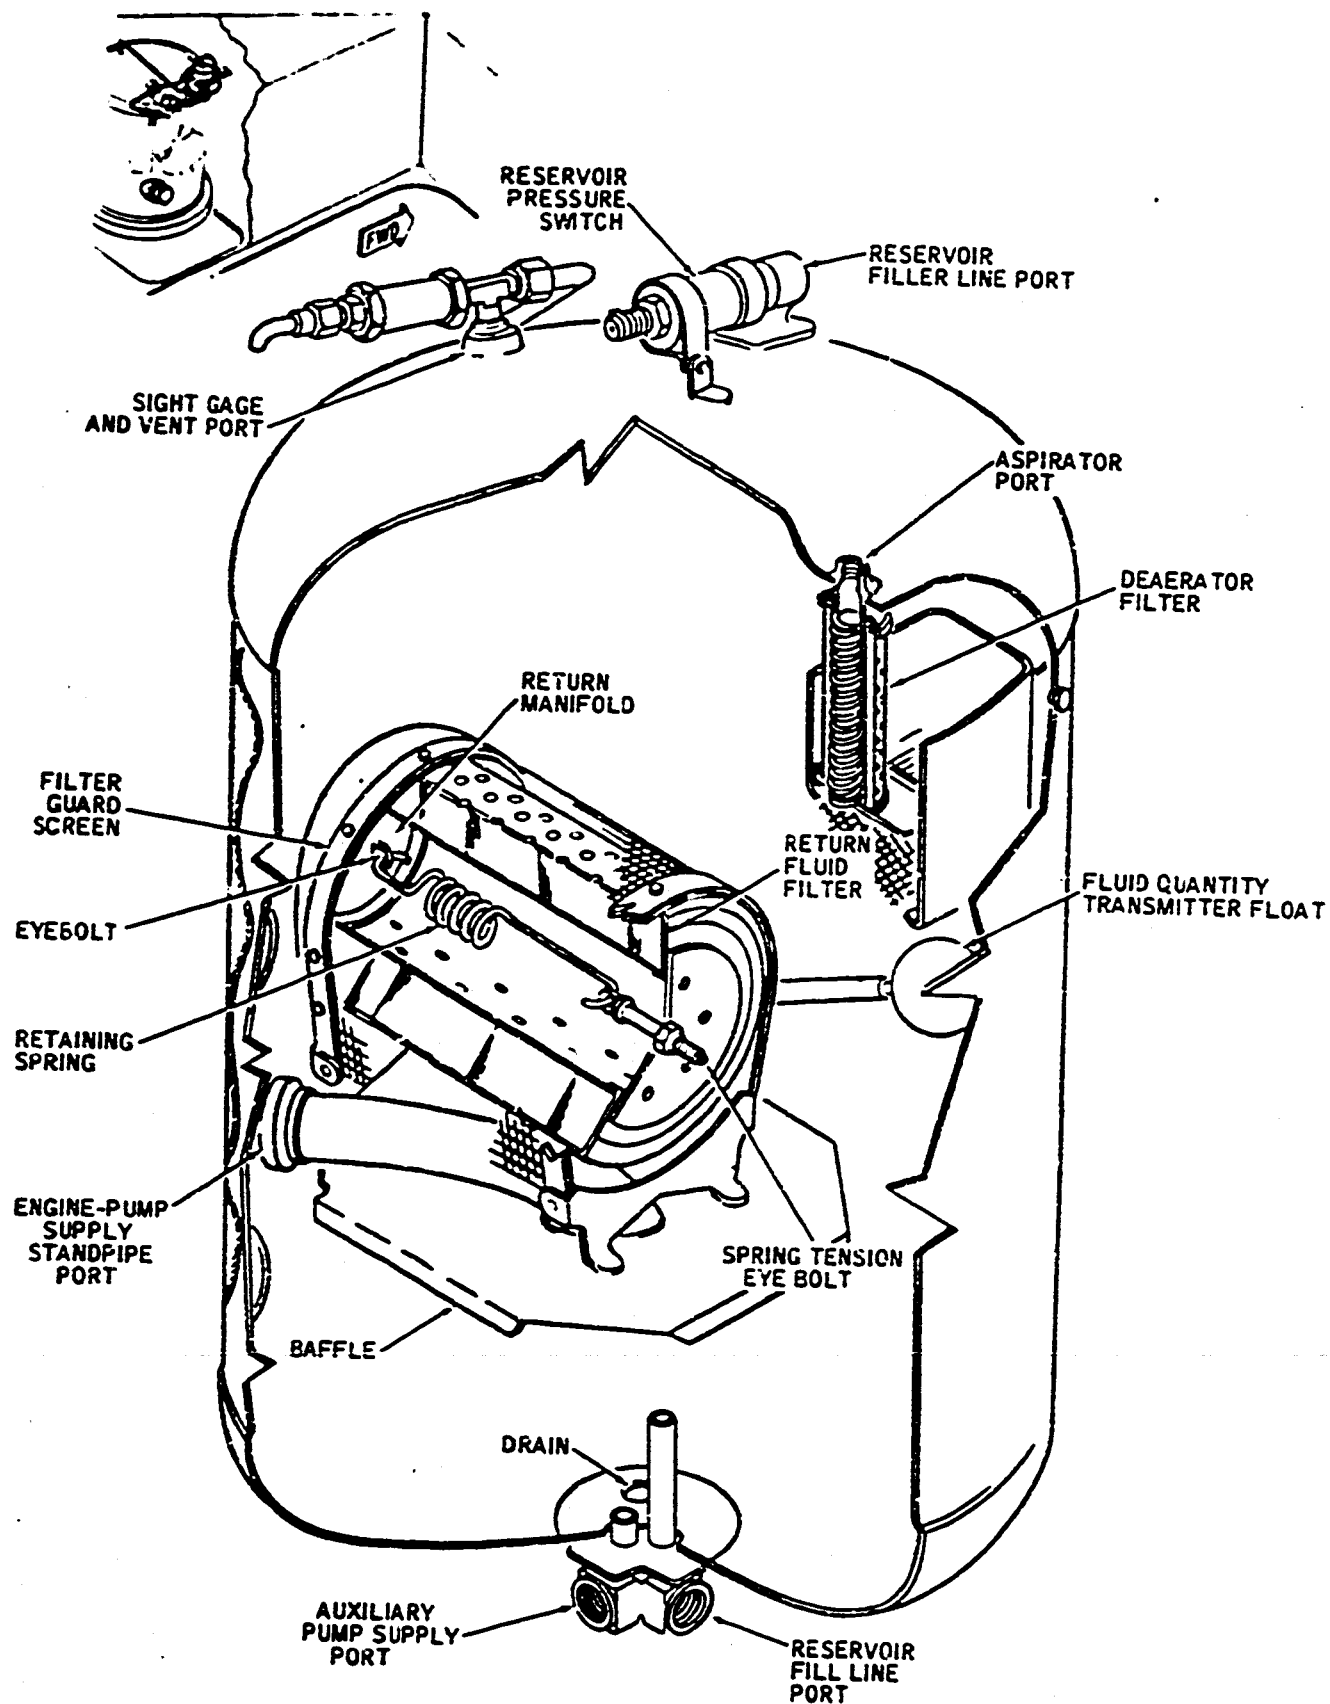

HA2-689

29-10-0  
 CODE 22  
 Page 10

Hydraulic System Reservoir -- Cutaway View  
 Figure 4

Printed in U.S.A.

Jan 15/68

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

filter. The filter prevents foreign particles from contaminating the fluid supply. Mountings are provided on the exterior surface of the reservoir for return line ports, aspirator port, electrical sensing units, sight gage, instruction placards, magnetic drain plug, and system supply ports.

- (2) The reservoir is pressurized with air from the regulator-aspirator to a range of 30 to 35 psi and has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir volume is used for fluid and 1/10 is used for foam space.
- (3) The aspirator port through which the reservoir is pressurized is located in the recess on top of the reservoir. An aspirator-deaerator filter is supported in the reservoir by a screen and support box assembly which is mounted to the reservoir wall by two bolts.
- (4) The mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The return ports manifold is an open-centered ring, flanged at both sides and provided with five fluid ports around its circumference; return port A is located at the bottom, return port B is located at the lower right side, the wing flap return port is located at the upper left side, and the system selector valve bypass port is located at the top. One flange of the manifold is mounted with six bolts to the mounting flange on the reservoir. The return fluid filter cover fits into the open side of the manifold, and is attached to the outer manifold flange with six bolts to form a fluid-tight cover for both the manifold and the filter.
- (5) The return fluid filter is installed in the reservoir, behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the return fluid filter cover holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to the engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
- (6) A flanged adapter for the fluid quantity transmitter is welded to the reservoir below and to the left of the return ports manifold. The adapter is provided with two small port bosses for the hydraulic fluid temperature bulb and the hydraulic fluid overtemperature switch. The lower end of the sight gage connects to a third port in the adapter, while the top of the sight gage tees into a port at the top of the reservoir. An instruction plate is mounted behind the sight gage and the vacuum breaker check valve tees into the port at the top of the reservoir that is used by the sight gage.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


B. Hydraulic Reservoir Return Fluid Filter (See Figure 4.)

- (1) The reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply. The filter is located behind the return ports manifold, and is spring loaded to act as its own relief valve. Access to the filter is by removing the return fluid filter cover from the return ports manifold by removal of six bolts. The filter is attached by the retaining spring to the cover and is withdrawn from the reservoir when the cover is removed.
- (2) Externally, the filter consists of two perforated concentric tubes. The area between the tubes is closed by metal end caps which are bonded to the two tubes. A resilient rubber gasket is bonded to each of the caps. Each gasket must be smooth and flat for proper sealing of the filter. The gaskets act as a static seal and a relief valve seat.
- (3) Internally, the filter has a 10-micron, resin-impregnated convoluted paper-type filter element. The area of the filter element is approximately 1960 square inches. The filter is held in place by a retaining spring. One end of the spring is attached to an eyebolt located inside the return port's manifold cover. The spring passes through the center chamber of the filter and is connected to another eyebolt. This eyebolt is secured to a large washer and plate by means of a self-locking nut. The washer seats on the rubber gasket which is bonded to the filter. The fluid enters the center chamber of the filter and passes through the inner tube of the filter to the filter element by means of perforation holes. Foreign matter is filtered out by the filter element, and the fluid leaves the element through perforation holes in the outer tube. When the element becomes saturated with foreign matter, the filter acts as its own relief valve and unseats at 20 to 25 psi above normal return pressure which allows fluid to bypass the filter and enter the reservoir.

C. Hydraulic Reservoir Air Pressure Regulator-Aspirator (See Figure 5.)

- (1) The reservoir air pressure regulator-aspirator is a jet-type air pump, regulated by a pressure-sensitive shutoff valve. The unit pressurizes the hydraulic reservoir with air to the operating pressure range of 30 to 35 psi. The regulator-aspirator is located on the top inboard side of the reservoir and is mounted on the reservoir retainer ring. Access to regulator-aspirator is through the left wing root access door.
- (2) The regulator-aspirator assembly consists of a main aspirator body and a regulator housing. The main aspirator body has two inlet ports and one outlet port. The ports are permanently identified inlet, outlet, and air inlet. The plug for an air check valve is located near the outlet port. A chemically treated paper filter is installed near the aspirator body air inlet port in the air line from the pressurized cabin area. A metal screen filter is installed on the check valve which tees into the aspirator body air inlet port.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

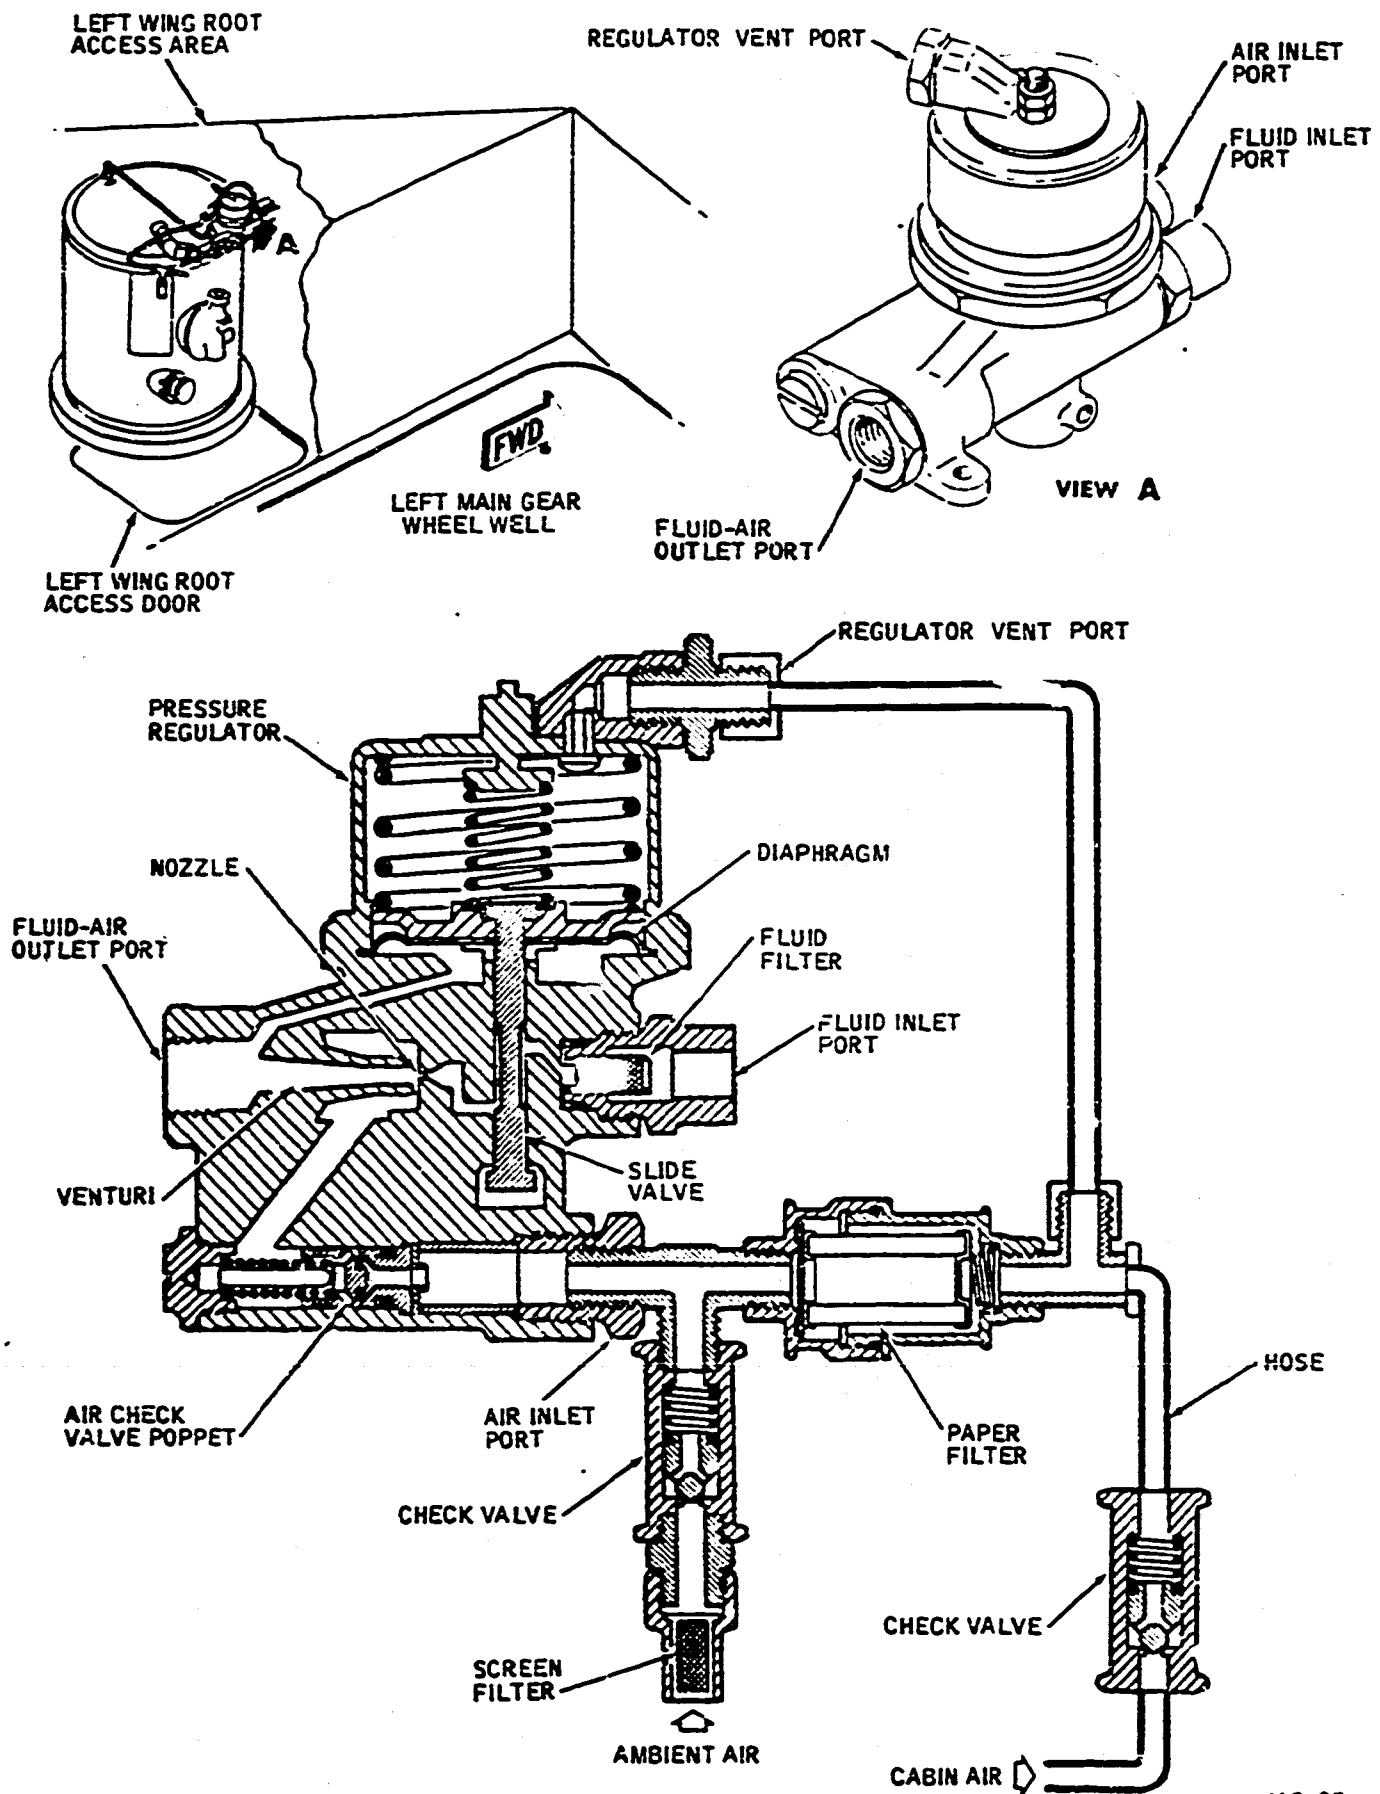

HA2-25

Reservoir Air Pressure Regulator-Aspirator -- Schematic  
 Figure 5

Jan 15/68

Printed in U.S.A.

29-10-0  
 CODE 22  
 Page 13


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The reservoir air pressure regulator-aspirator operates basically with a jet pump action which is regulator controlled. Fluid enters the assembly through the fluid inlet port where it is filtered and then ported through the valve assembly of the regulator. During normal operation, when air pressure at the outlet port is under 30 psi, the valve is open, porting fluid to the nozzle. The orifice in the nozzle sprays the fluid through the venturi of the outlet port, creating a vacuum in the chamber around the venturi. When the vacuum becomes great enough to create a pressure differential of approximately 1 psi, ambient air opens the air check valve. The air is ported to the chamber around the venturi and is siphoned, with the fluid, through the outlet port.
- (4) Hydraulic fluid inlet pressure at the engine-driven hydraulic pumps is improved at high altitude operation by supplying pressurized filtered cabin air to the reservoir regulator-aspirator instead of ambient outside air. Part of the inlet air is diverted by a tee fitting to the regulator chamber to provide a more positive regulating force on the diaphragm than would be obtained with low ambient pressures. The chemically treated paper filter, installed in the regulator-aspirator air supply line from the cabin, removes smoke tars and impurities from the pressurized cabin air. The steel mesh screen filter, installed on the check valve which tees into the regulator-aspirator air inlet port downstream of the paper filter, removes dust, dirt, and foreign particles from the ambient air and serves as a standby to supply filtered air in event the paper filter is clogged.
- (5) As pressure in the reservoir builds up, back pressure is bled from the outlet port to the diaphragm chamber. The reaction on the diaphragm begins to move the slide valve to cut off the fluid flow. At 30 to 35 psi of back pressure, the diaphragm completely closes the slide valve, cutting off the flow of fluid. If there is a regulator malfunction, The aspirator stalls when outlet pressure reaches a maximum of 40 psi.
- (6) The aspirator is capable of pressurizing the reservoir to 30 to 35 psi in approximately 4 minutes at altitudes from sea level to 15,000 feet, when fluid is ported through the nozzle at 0.5 gpm at 3000 psi.


D. Regulator-Aspirator Air Filters (See Figure 6.)

- (1) The regulator-aspirator air filters remove ambient and cabin air impurities from the air which is used to pressurize the main hydraulic system reservoir. The filtering system is composed of two filters, one of which is a paper element filter, installed directly in the cabin air supply line near the regulator-aspirator. The other filter is a fine mesh, screen-type filter, installed on a check valve and positioned at right angles to the regulator-aspirator air inlet port. The screen filter, in addition to providing an immediate supply of ambient air during ground operations, serves as a standby air inlet to preclude air starvation of the regulator-aspirator in the event the paper element filter becomes clogged.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

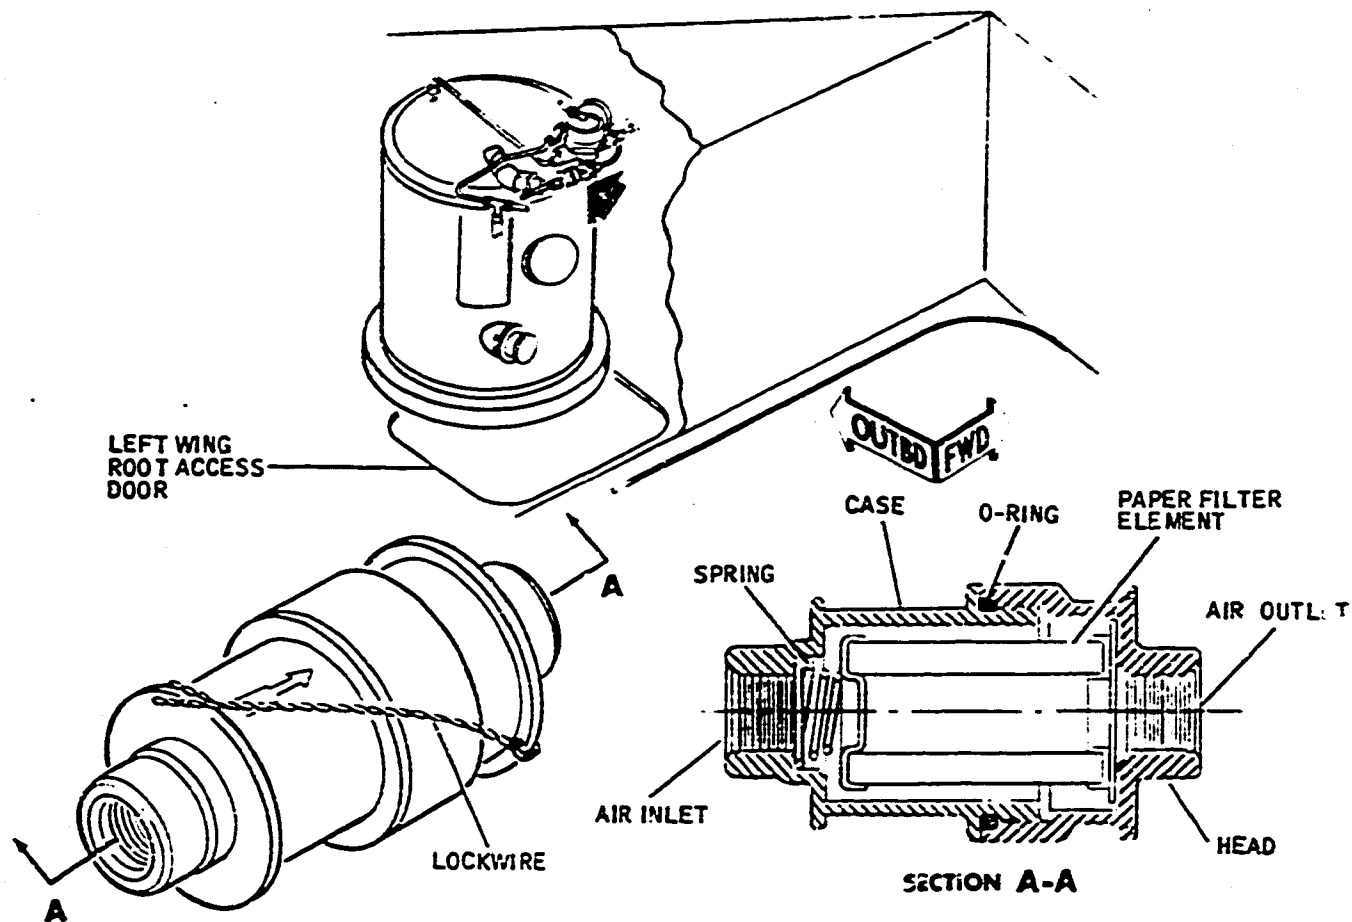

PAPER ELEMENT FILTER

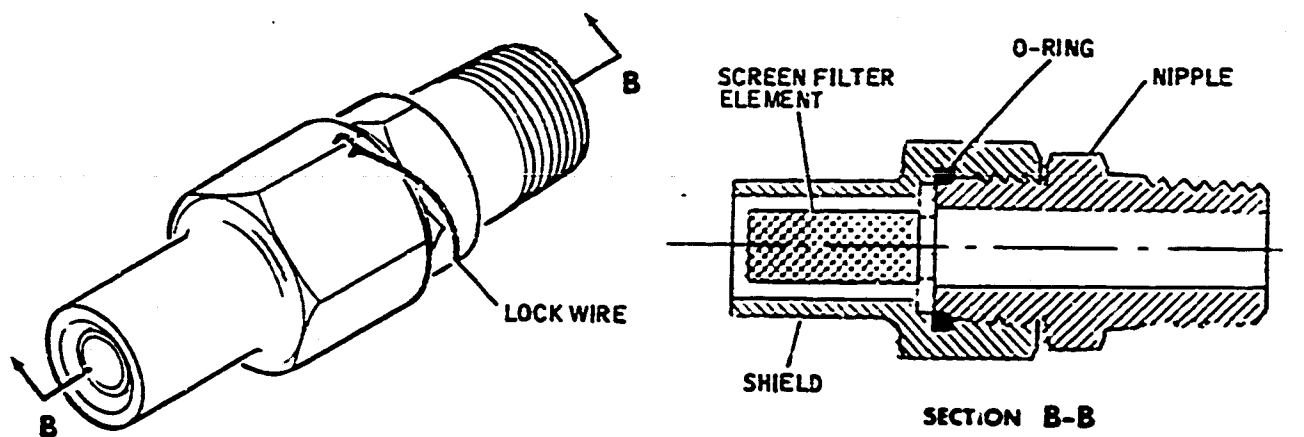

SCREEN FILTER

HA2-35

Regulator-Aspirator Air Filters -- Cutaway View  
 Figure 6

29-10-0  
 CODE 22  
 Page 15

Jan 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

E. Hydraulic Reservoir Relief Valve (See Figure 7.)

- (1) The reservoir relief valve and the air pressure aspirator-regulator keep the reservoir pressurized to normal operating range. The valve relieves excess air pressure which may build up in the reservoir through thermal expansion in the system. The valve has an inlet port and an outlet port and consists, internally, of an inlet port seat and a spring-loaded poppet.
- (2) The relief valve is installed in the overboard vent line downstream of the hydraulic reservoir air bleed valve. In the event that excess pressure builds up in the reservoir, the poppet will start to relieve at 45 (+5, -0) psi. Full flow of 10 gpm is attained at 80 psi maximum. The poppet reseats at 90 percent of the opening pressure.

F. Hydraulic Reservoir Air Bleed Valve (See Figure 8.)

- (1) The hydraulic reservoir air bleed valve and pressure gage are located on the aft side of the rear spar in the left main gear wheel well, inboard of the hydraulic reservoir air chamber. The bleed valve and gage are installed in the overboard vent line, between the reservoir air chamber and the reservoir relief valve.
- (2) The bleed valve is used to relieve the reservoir air pressure prior to disconnecting lines or components in the hydraulic system. The pressure gage provides a ready indication of the hydraulic reservoir air pressure and is used in conjunction with the bleed valve to indicate the air pressure status.
- (3) The air inflation valve is installed on the same fitting as the bleed valve and pressure gage. The air inflation valve is used to manually charge the reservoir with air or dry nitrogen.




G. Hydraulic Reservoir Vacuum Breaker Check Valve (See Figure 9.)

- (1) The hydraulic reservoir vacuum breaker check valve is installed on the regulator-aspirator mounting bracket, and connects to the tee fitting at the top of the reservoir. The valve is vented to ambient air. The purpose of this valve is to maintain atmospheric pressure in the reservoir, allowing hydraulic fluid to flow to the auxiliary hydraulic pump in the event of a failure of the reservoir pressurization system. The failure, or breakdown, of the pressurization system could cause a fluid starvation at the auxiliary hydraulic pump because of vacuum buildup in the reservoir.

H. Hydraulic Reservoir Air Chamber

- (1) The hydraulic reservoir air chamber is a small, cylindrical tank with a capacity of 700 cubic inches. It has two ports, an inlet port at the bottom of the chamber and an outlet port in one end of the chamber. The inlet port mounting boss is fitted with a drain plug. The air chamber

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

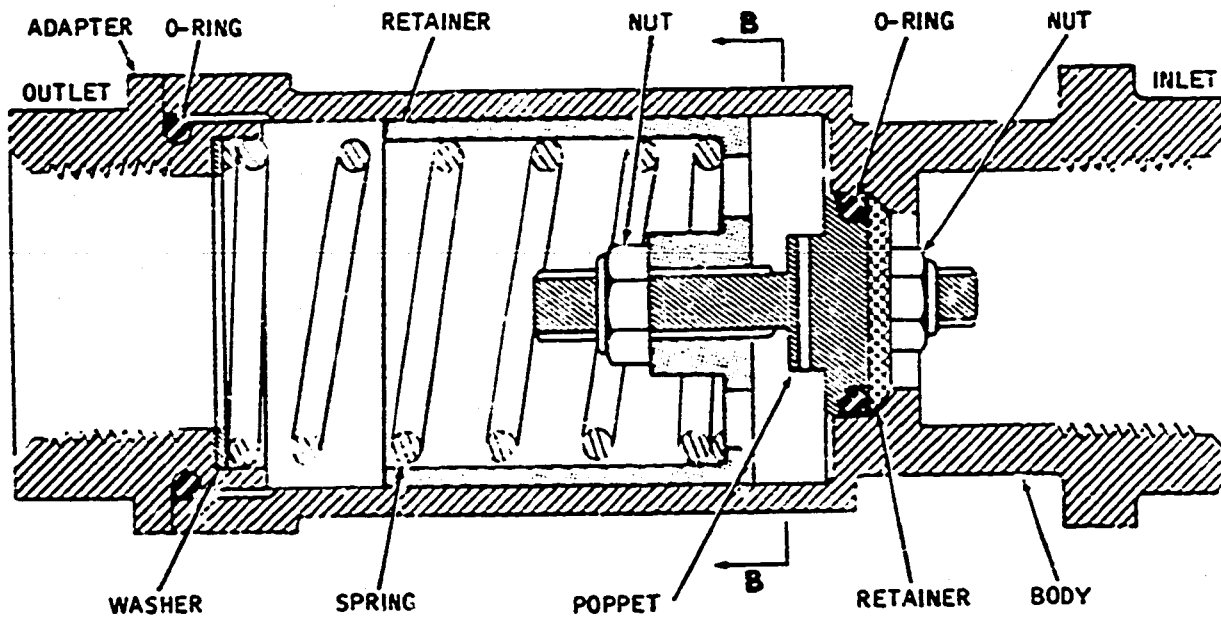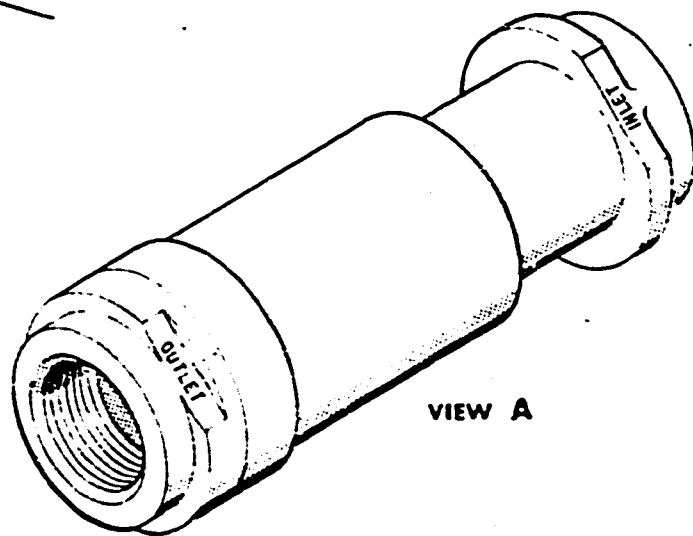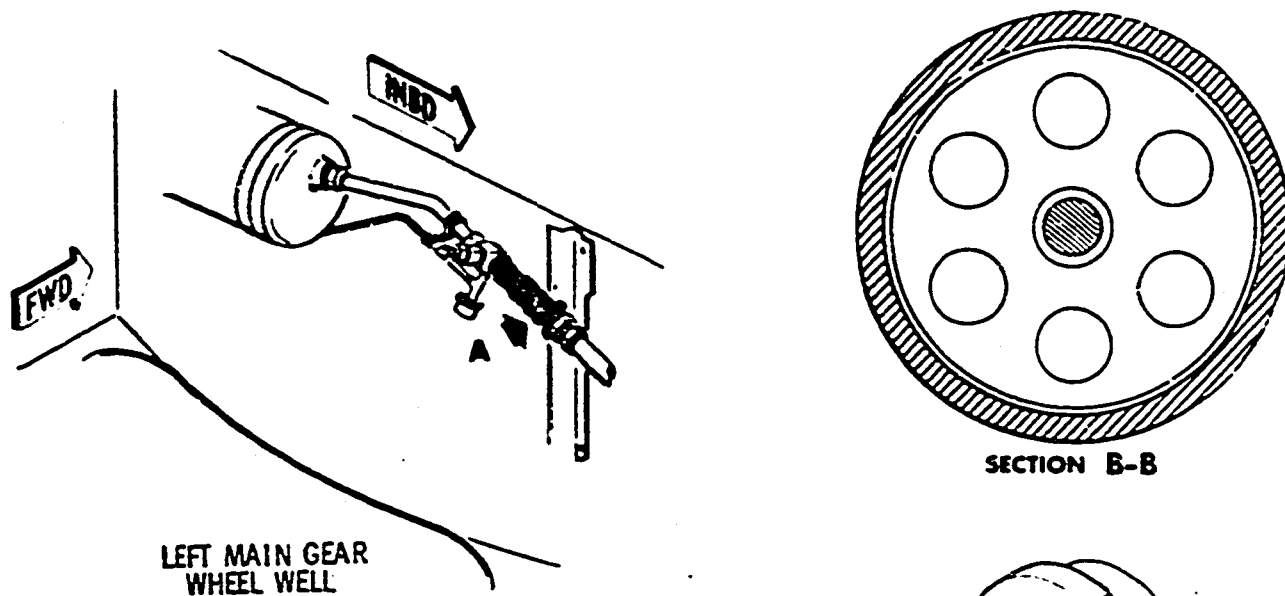

Hydraulic Reservoir Relief Valve  
 Figure 7

Jan 15/68


Printed in U.S.A.

HA2-17

29-10-0  
 CODE 22  
 Page 17



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

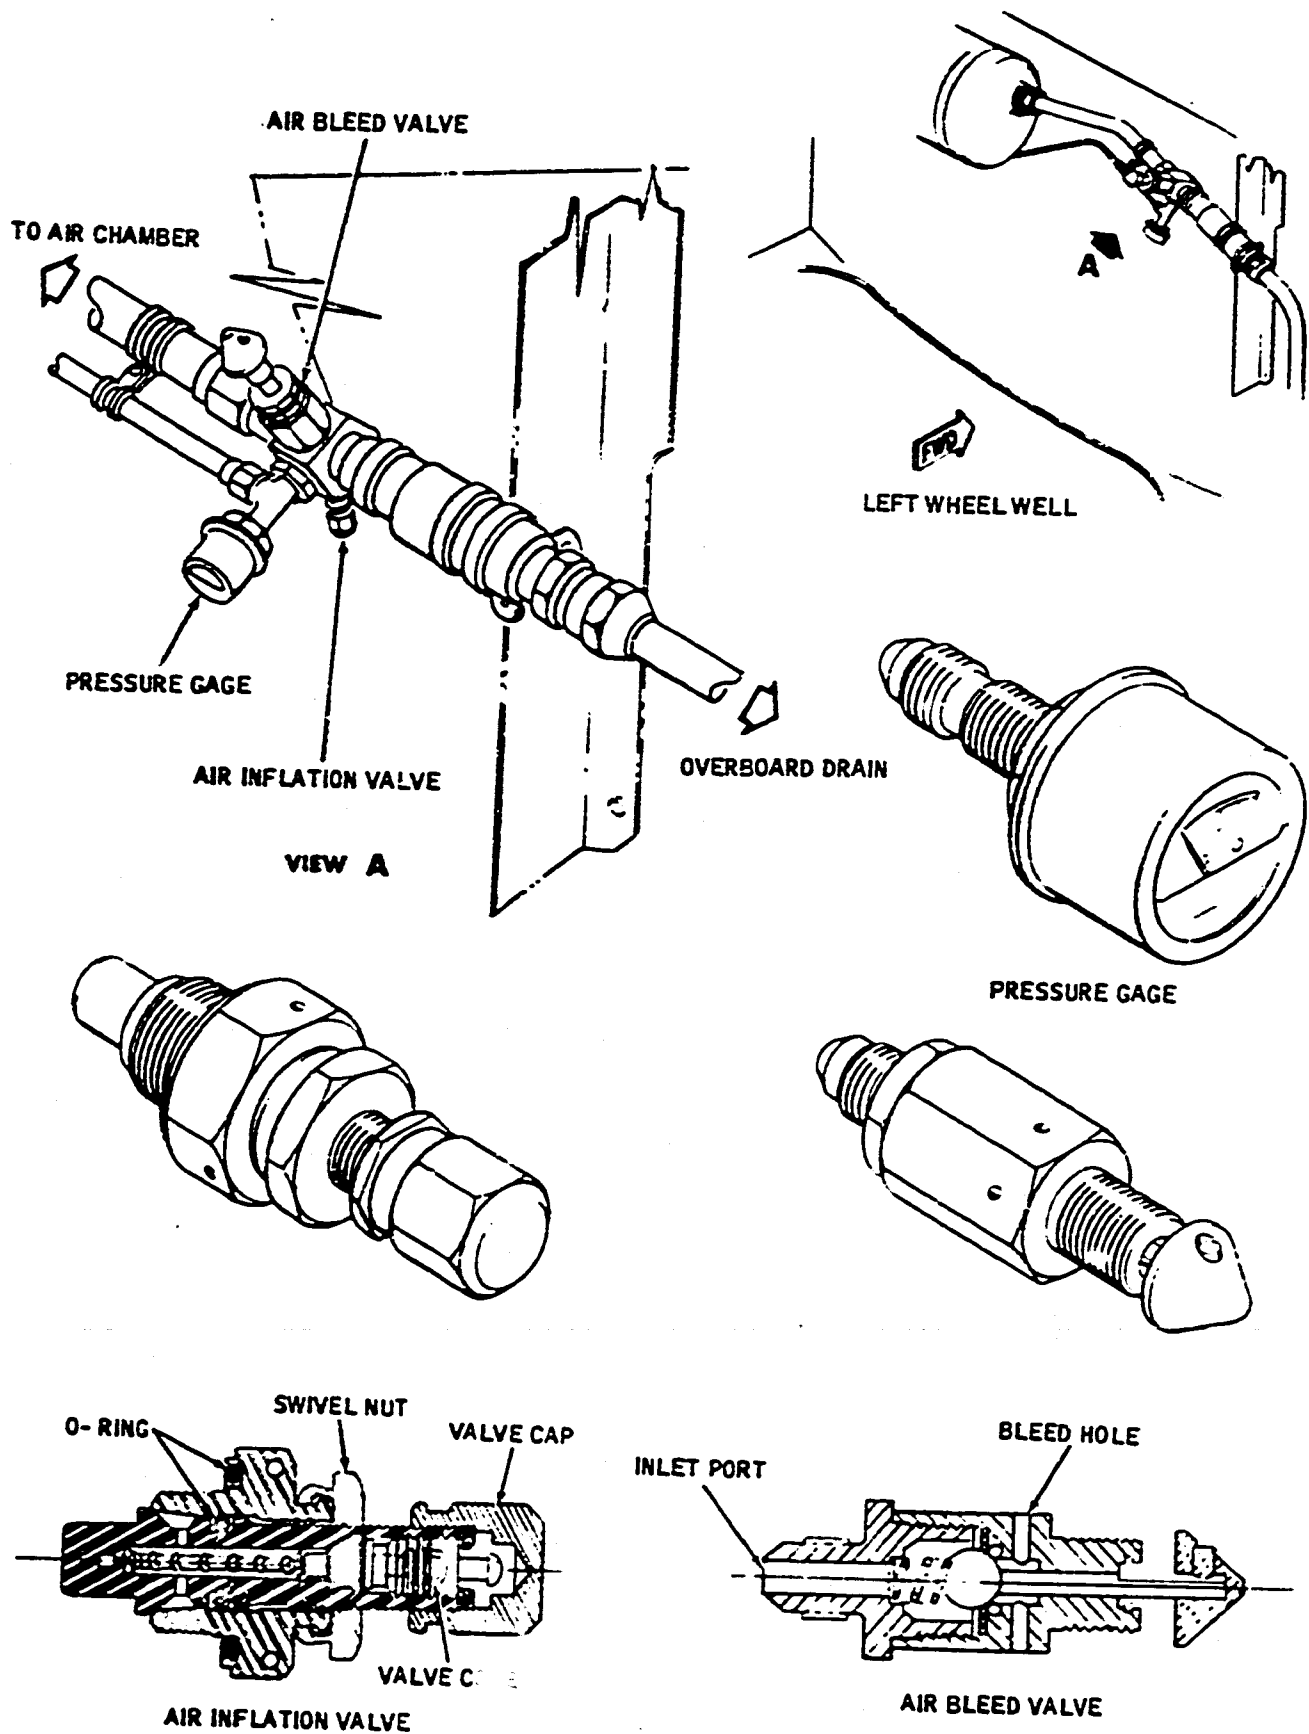

HA2-32


Reservoir Air Bleed Valve, Air Inflation  
 Valve, and Pressure Gage  
 Figure 8

29-10-0  
 CODE 22  
 Page 18

Printed in U.S.A.

Jan 15/68

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

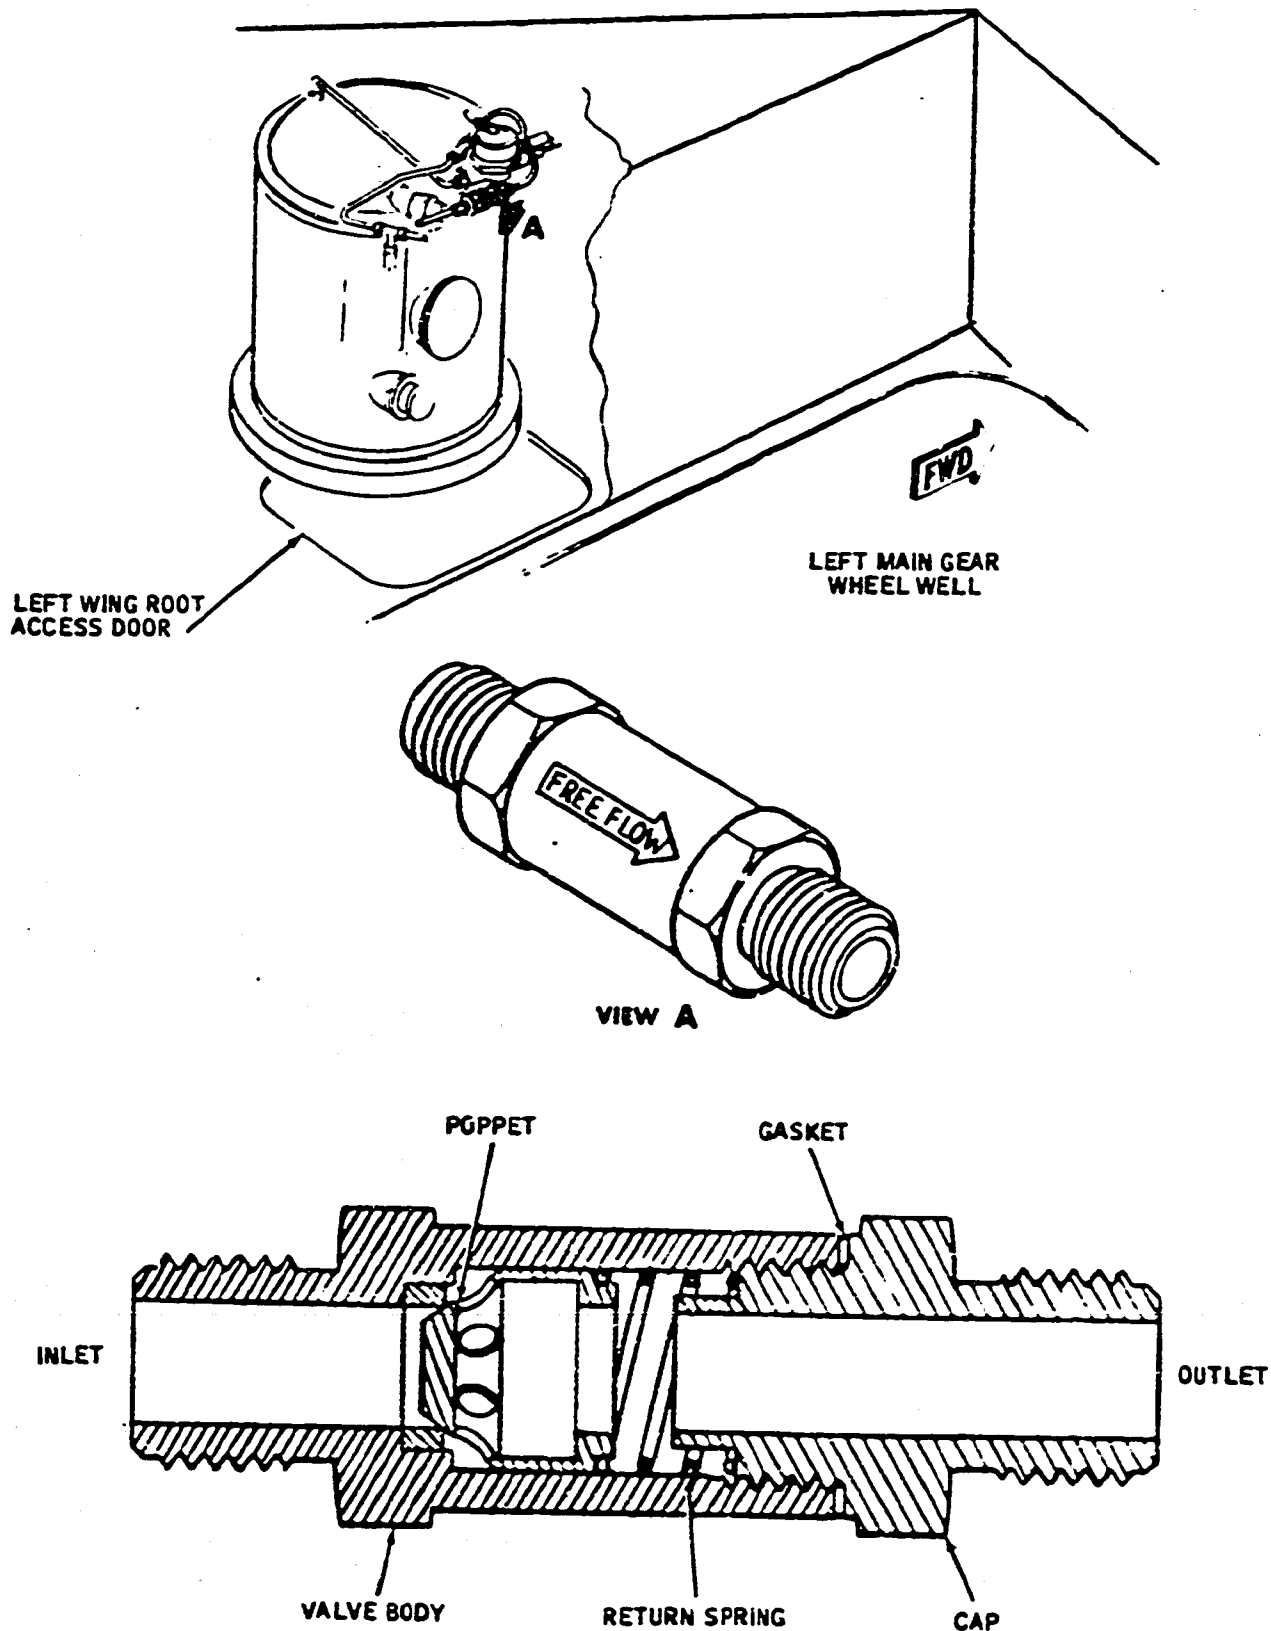

Hydraulic Reservoir Vacuum Breaker Check Valve  
 Figure 9

Jan 15/68

Printed in U.S.A.

HA2-33

29-10-0  
 CODE 22  
 Page 19

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

is installed on the aft side of the rear spar in the left main gear wheel well, inboard and above the hydraulic reservoir filler assembly. Access to the air chamber is through the left main gear inboard door.

- (2) The air chamber provides for greater fluid capacity in the hydraulic reservoir by providing air and foam space for the reservoir in a separate container. Air pressure in the chamber is maintained by the regulator-aspirator and the air relief valve. The air pressure in the chamber and reservoir can be relieved, when desired, by the air bleed valve located downstream of the chamber. The air chamber is mounted higher than the reservoir filler assembly, to prevent overfilling of the reservoir from reducing the available air space and to prevent fluid from being vented overboard through the reservoir relief valve.


I. Hydraulic Reservoir Port B Return Check Valve (See Figure 10.)

- (1) The reservoir port B return check valve is installed in port B of the reservoir to prevent reverse flow of hydraulic fluid from the reservoir to the return line. The check valve is located on the reservoir in the left wing root and is accessible through the left wing root access door.
- (2) Externally and internally, the port B check valve is a standard-type check valve with a 1500-psi rating. A nominal pressure of approximately 8 psi unseats the poppet, permitting fluid to flow through the valve. When the reservoir pressure exceeds the return line pressure, the poppet will seat and reverse fluid flow will be prevented.


J. Engine Hydraulic Fire Shutoff Valve (See Figures 11 and 12.)

- (1) The engine hydraulic fire shutoff valve is a gate-type, mechanically controlled valve, installed in the supply line of each engine-driven hydraulic pump. The engine hydraulic fire shutoff valve is actuated from the flight compartment to prevent the flow of hydraulic fluid into the engine section.
- (2) The engine hydraulic fire shutoff valve is mounted on a 2-piece channel bracket which is installed inside the wing leading edge, aft of the firewall of each inboard pylon. Access to the valve is through the access door located on the lower side of the wing leading edge, outboard of either the left or right inboard pylon. Each valve is located approximately 30 inches inboard of the access door.
- (3) Internally, the valve consists of a valve arm, valve arm link, cam plate, and slide blade. The valve arm link attaches to the valve arm and is allowed to swivel through an arc in relation to the valve arm. The link has a stop that will contact the arm when the two have traveled to the valve closed, full overtravel position. In the full open pretravel position, the link contacts the arm stop.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

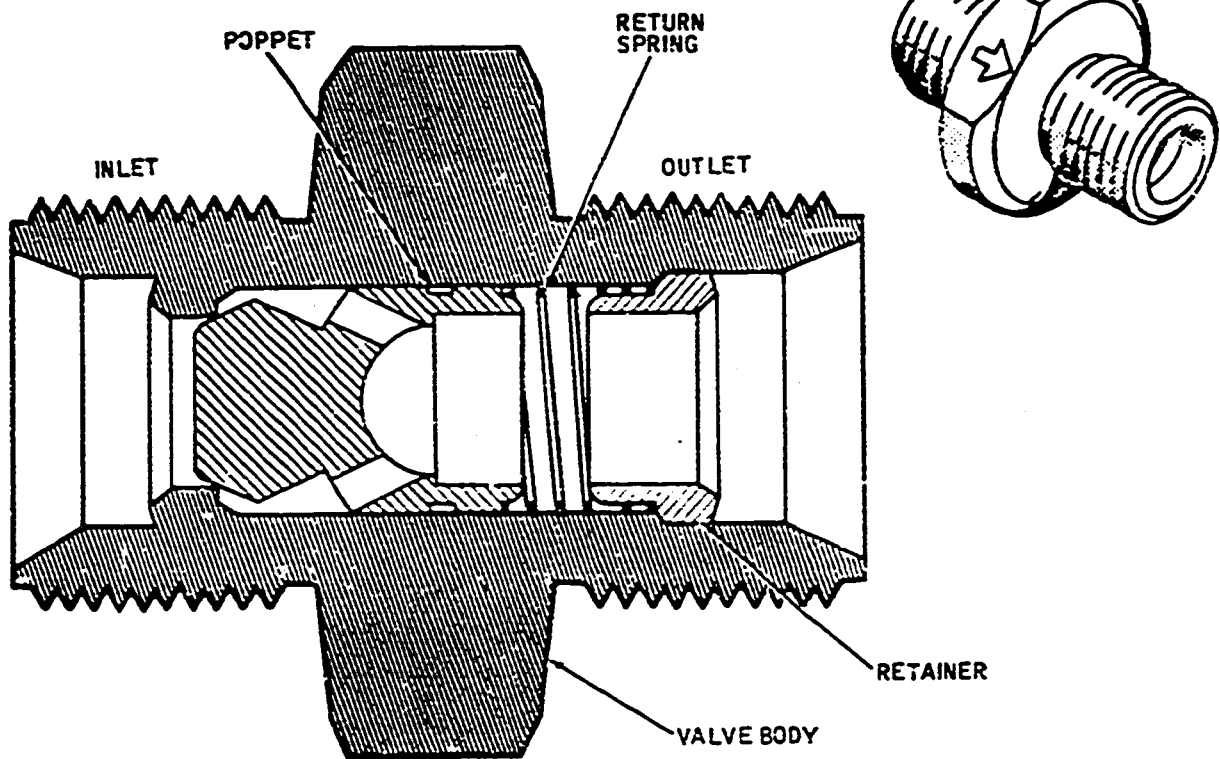

MINIATURE CHECK VALVE

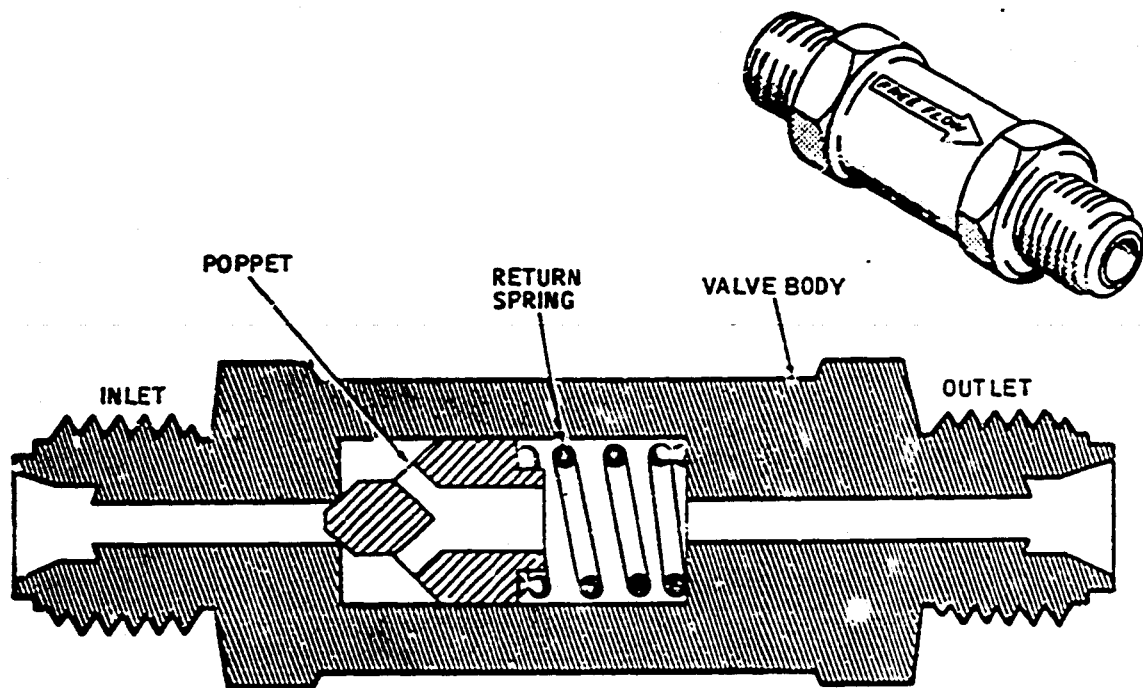

STANDARD CHECK VALVE

Hydraulic Check Valves -- Typical  
Figure 10

Jan 15/68

Printed in U.S.A.


HA2-18A

29-10-0

CODE 22

Page 21

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

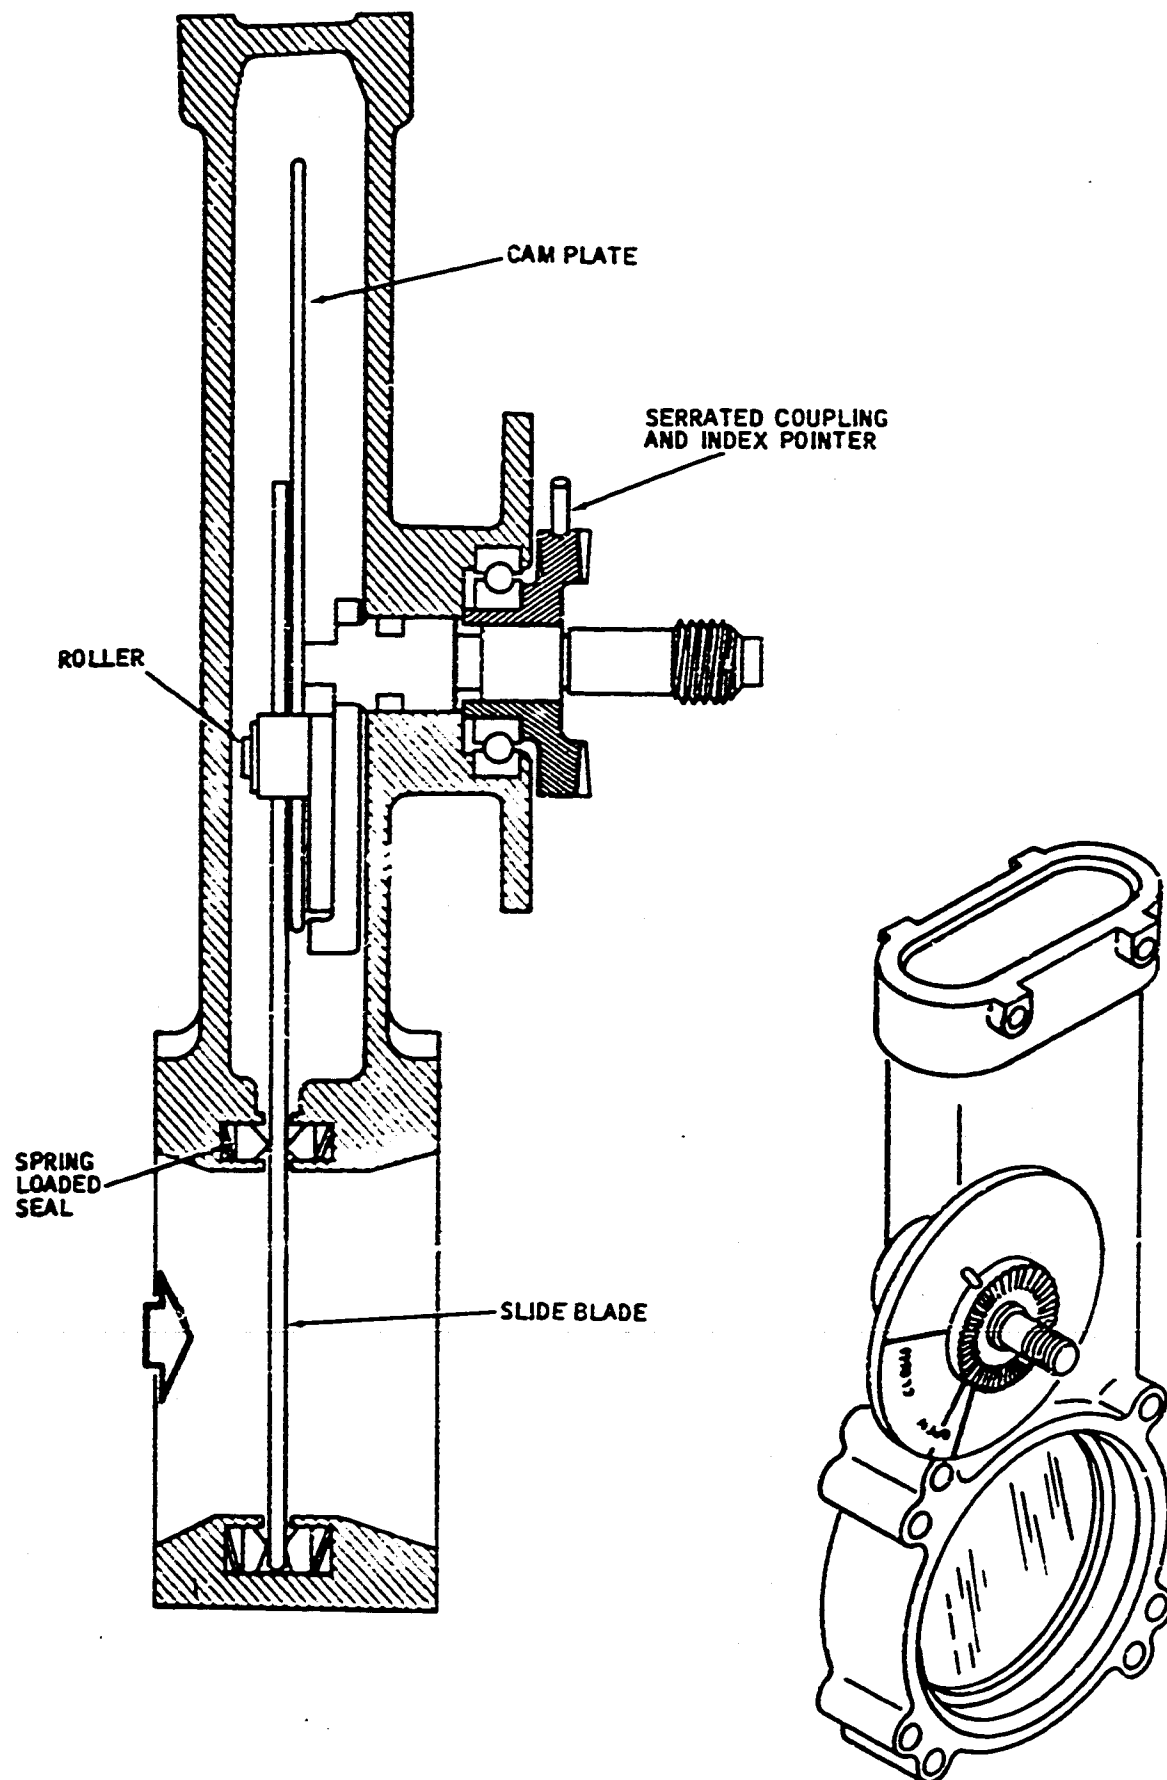

Engine Hydraulic Fire Shutoff Valve -- Schematic  
Figure 11


29-10-0  
CODE 22  
Page 22

Printed in U S A

HA2-2209

Jan 15/68

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

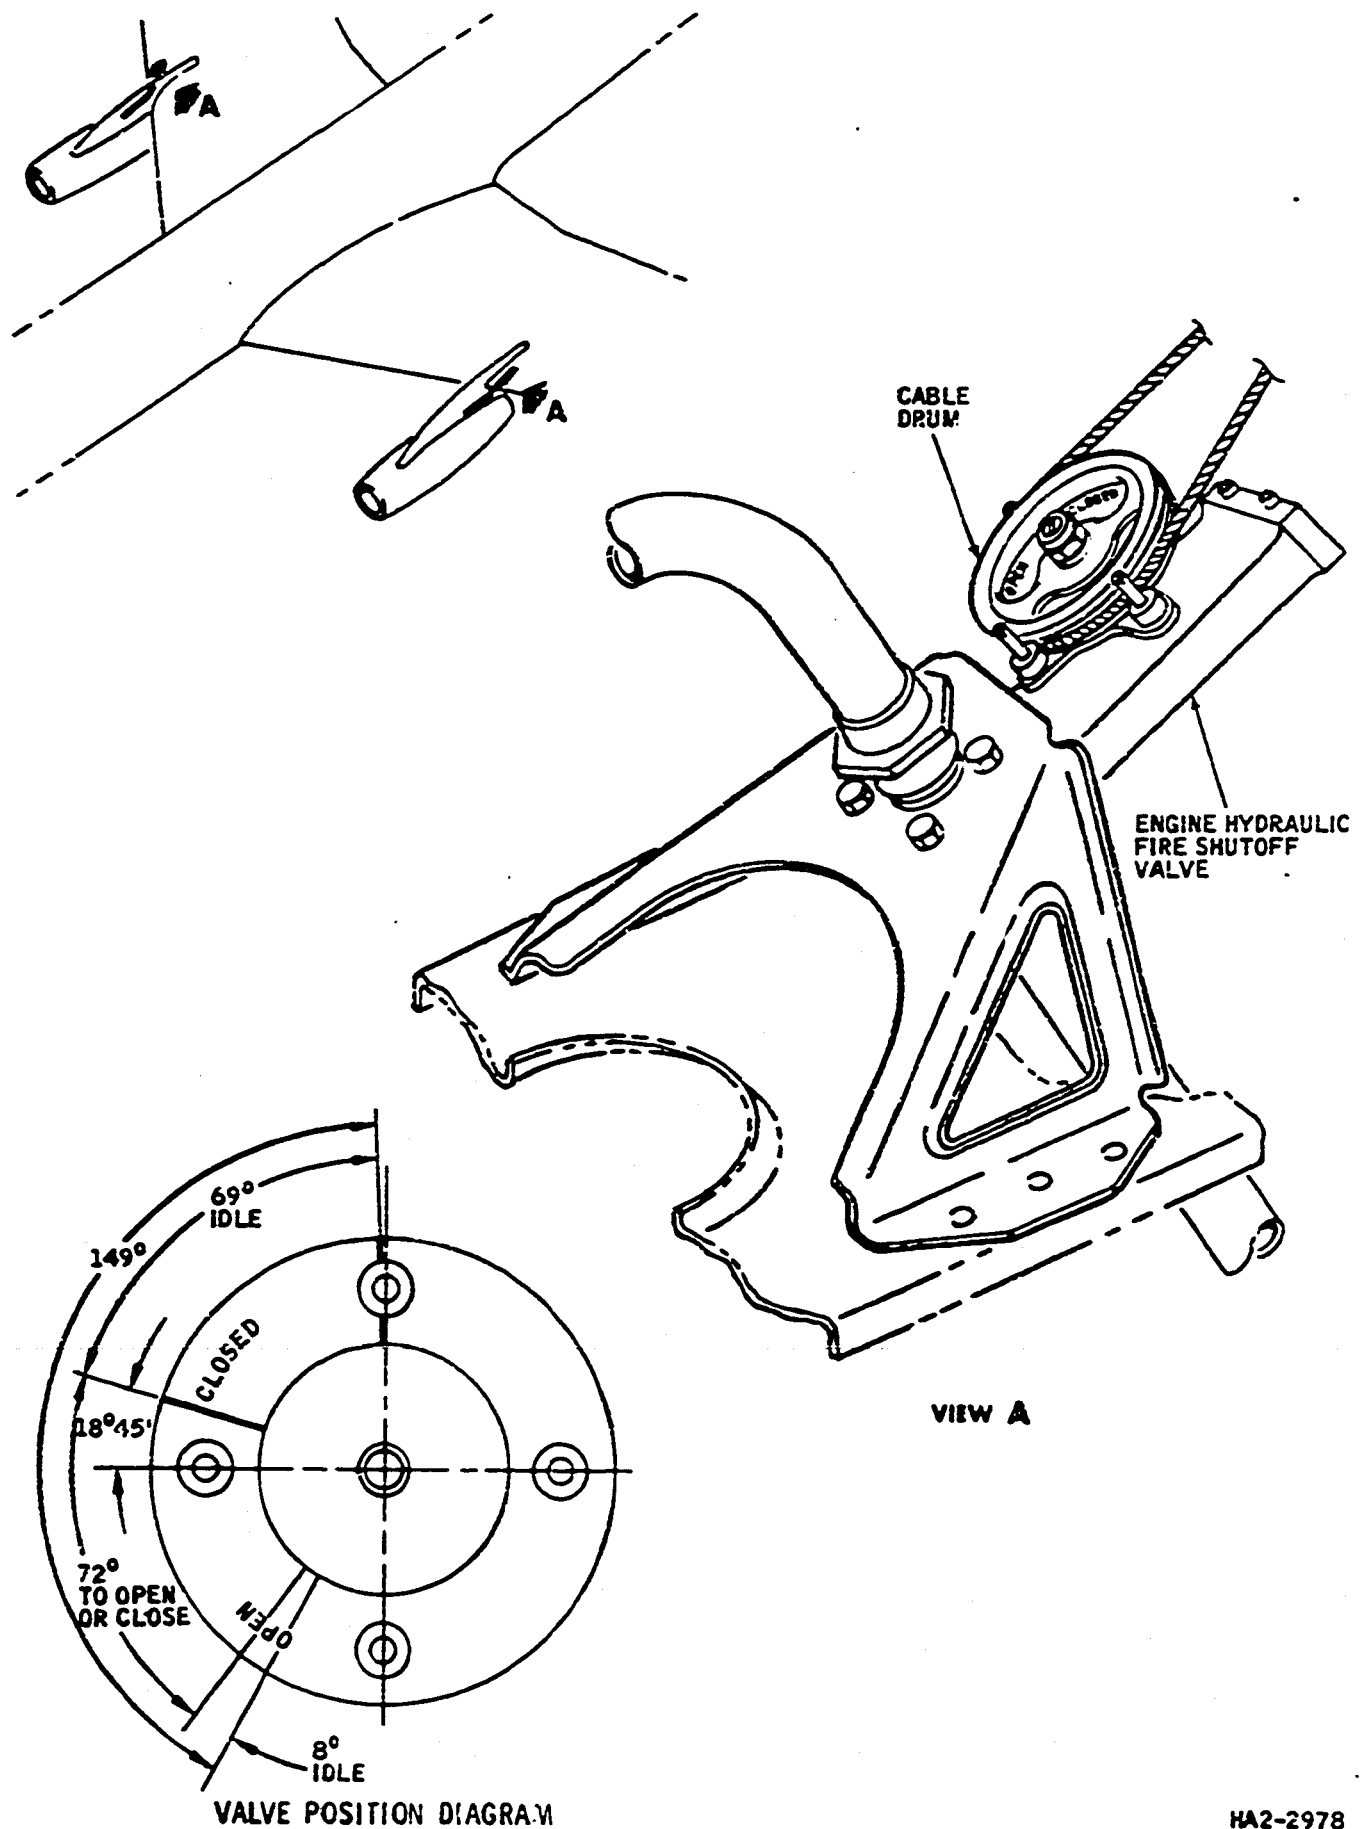

Engine Hydraulic Fire Shutoff Valve  
 Figure 12

HA2-2978

29-10-0  
 CODE 22  
 Page 23

Jan 15/68

Printed in U.S.A.




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) A roller attached to the end of the link rides in, and extends through, a J-shaped slot in the cam plate. The rotation of the valve arm causes the link roller to follow the cam slot, allowing the arm and link to move through independent arcs.
- (5) The slide blade (gate of the valve) is slotted near the one end and also receives the link roller extending through the cam slot. The slide blade is positioned parallel to the cam plate and is guided by two grooves in the housing. This will allow the blade to open or close through porting of the valve by the action of the arm and link. The cam plate is pinned to the valve shaft, securing it rigidly in two positioning grooves in the housing. A pin-indicator is provided to relate valve position to a reference plate placarded open and closed.
- (6) The engine hydraulic fire shutoff valves are cable actuated by the fire control handles, located on the overhead switch panel in the flight compartment. When the fire control handle for either inboard engine is moved, the cable system rotates the drum which is attached to the corresponding shutoff valve shaft. This action extends the valve blade into the fluid passage to block the flow of fluid. The valve operates from open to close by clockwise rotation of the cable drum. The valve gage will idle during the first 8 degrees of rotation of the cable drum, and then will close in the next 72 degrees. The cable drum will continue to rotate the shaft for an additional 69 degrees after the gate valve is closed, locking it overcenter. Total travel of the cable drum is 149 degrees.

K. Engine-Driven Hydraulic Pump (Airplanes N4907C and N4908C, See Figure 13.)

- (1) A variable-displacement, pressure-compensated, engine-driven hydraulic pump is installed on each inboard engine. The pump incorporates a solenoid bypass feature for reducing the output of the pump. The bypass valves are controlled by two engine hydraulic pump control switches in the flight compartment. The switch for the hydraulic pump on engine No. 2 is placarded left, on and bypass. The switch for the hydraulic pump on engine No. 3 is placarded right, on and bypass. When either of the two engine hydraulic pump control switches is placed in the bypass position, the bypass valve solenoid for that hydraulic pump is energized and the pump pressure decreases to 300 ( $\pm 100$ ) psi. When either switch is in the on position, the control circuit to the corresponding bypass valve is open and the hydraulic pump operates normally in the pressure range of 2850 to 3050 psi. The pump provides a continuous, non-pulsating flow of hydraulic fluid, under pressure, to the hydraulic manifolds for distribution throughout the hydraulic system. Each of the engine-driven pumps is located on the accessory drive pad of the inboard engines. These pumps are accessible through the access doors on the right side of the nacelles and removal of the engine bypass duct.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

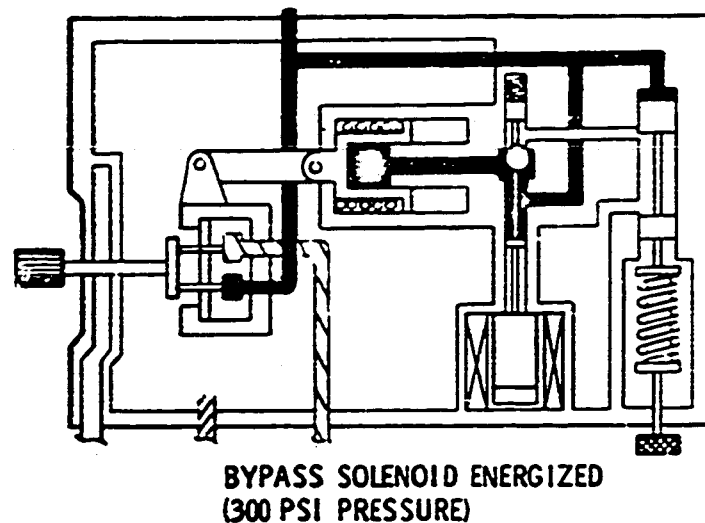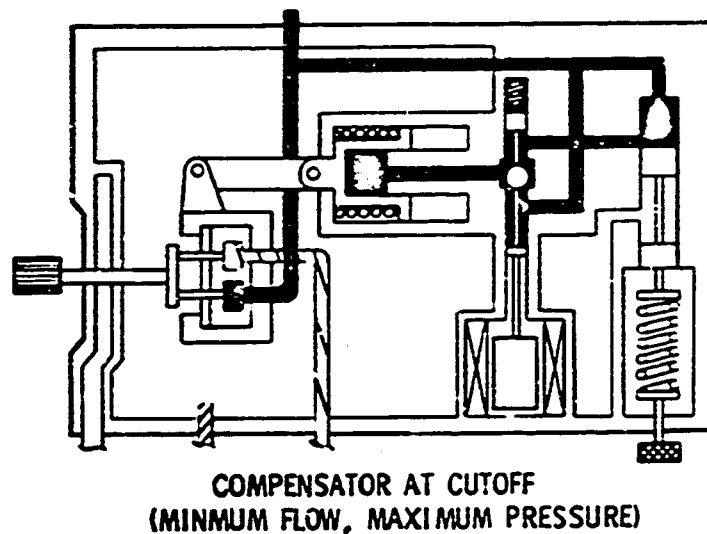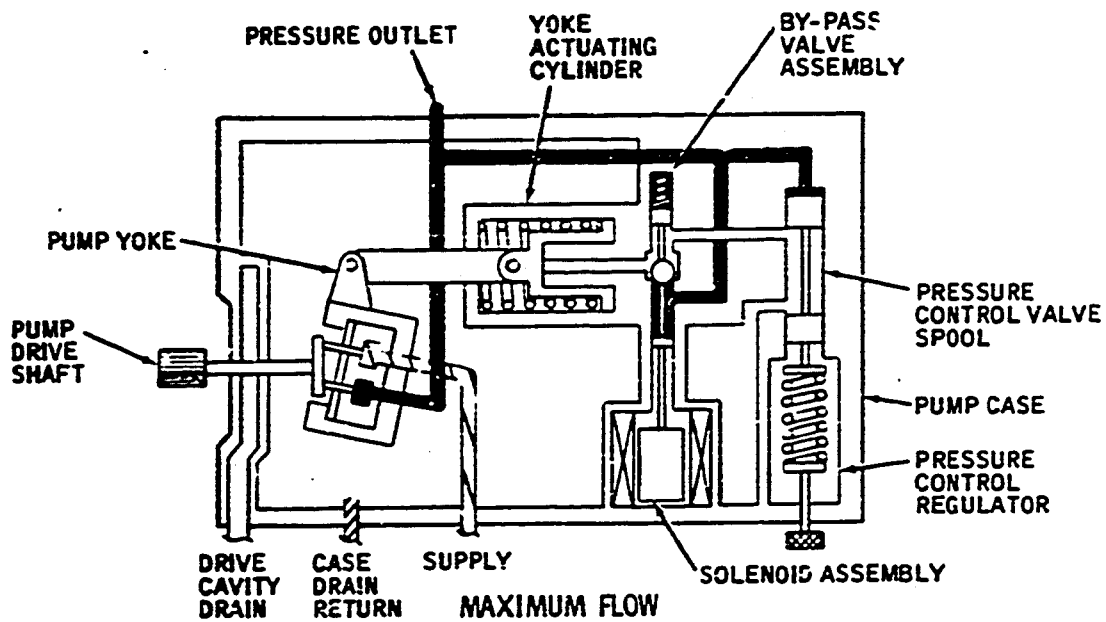

■■■■ PRESSURE  
 ▨▨▨▨ CASE DRAIN  
 ▧▧▧▧ SUPPLY  
 □□□□ DRIVE CAVITY DRAIN

HA2-837

Engine-Driven Hydraulic Pump Pressure  
 Flow -- Schematic  
 Figure 13

Jan 15/68

Printed in U.S.A.

29-10-0  
 CODE 22  
 Page 25



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Three case drain ports are provided: two are on the yoke assembly housing, and the third is on the casing for the pressure control valve, adjacent to the inlet port fitting. The case drain port on top of the yoke assembly housing is used as the case drain connection to assure that the pump housing is full of fluid at all times. This drain connection is ported back to the low-pressure return port of the reservoir. The inlet port fitting is on top of the pump housing and the outlet port fitting is opposite to it on the bottom of the housing, and contains a low pressure indicating light switch.
- (3) The yoke control piston casing is an integral part of the pump case. Four self-locking nuts are used to hold the piston casing end-plate in position. The bypass valve assembly, consisting of the valve body and a solenoid, is mounted externally on the pump case, under the yoke control piston casing. This solenoid valve is provided with an electrical connector. A pressure control regulator is installed on the bypass valve body by means of four bolts. This regulator is cylindrical and is provided with an external adjustment screw. A lock screw is used to retain the adjusting screw after the adjustment has been made.
- (4) Hydraulic fluid enters the pump through an inlet port. Passages in the yoke carry the fluid to the valve plate, which ports the fluid to the cylinder block. The nine pistons in the cylinder block are actuated by the rotating drive shaft, thereby pressurizing the fluid. From the cylinder block, the fluid is routed to the outlet port of the yoke and then to the pump pressure lines. The pressure control regulator is actuated by pump output pressure that is bled to the regulator. The regulators meter the pressure to the yoke control piston, which positions the yoke.
- (5) The maximum pump pressure is determined by the adjustment of the pressure control regulator. The pressure control regulator allows maximum output flow (22.5 gpm at 3500 rpm) up to 2850 psi system pressure. When this pressure is reached, the yoke assembly starts to move towards the zero flow position.
- (6) Pressure continues to rise until the displacement is reduced from maximum flow to zero flow and 3000 psi is reached. The pump pressure stabilizes in accordance with system demand.

**K1. Engine-Driven Hydraulic Pump (Airplanes N4909C and Subsequent, See Figures 13A and 13B.)**


- (1) The two, single-stage, variable-displacement, cam-actuated, pressure-compensated, engine-driven hydraulic pumps are installed, one each, on the inboard engines. The pump incorporates a solenoid-operated bypass feature for reducing the output pressure to zero psi. Each bypass valve solenoid is controlled by a corresponding engine hydraulic pump control switch in the flight compartment. The switch for the hydraulic pump on engine 2 is placarded left, on, and bypass. The switch for engine 3 is placarded right, on, and bypass. When a switch is placed in the bypass

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

position, the bypass valve for that pump is actuated and the pump pressure is reduced to zero psi. When the switch is placed in the on position, the bypass valve is open and the pump operates normally in a pressure range of 2850 to 3050 psi. The pump provides a continuous, nonpulsating flow of hydraulic fluid, under pressure, to the hydraulic manifolds for distribution throughout the hydraulic system.

- (2) The heart of the pump is a revolving cylinder barrel which contains nine pistons. By means of a hold-down plate and hydraulically balanced shoes, the pistons are supported on an inclined cam plate which causes them to reciprocate as the barrel revolves. The hold-down plate ensures positive stroking of the pistons during the suction stroke. The angle of the cam plate is varied by moving the trunnioned hanger on which it is mounted, thereby changing the displacement of the pump. The hanger, in turn, is controlled by a pressure compensator.
- (3) Oil passes through the main inlet and then through porting in the end of the cylinder barrel to the cylinders from which the pistons are being withdrawn. As the cylinder barrel revolves, these pistons are forced into their bores and discharge high-pressure oil through porting in the end of the barrel to the outlet port.
- (4) The cylinder barrel, supported by a radial bearing, is driven by an internal shaft which passes through the trunnioned hanger. A hydraulically balanced, face-type, carbon shaft seal is used to assure optimum sealing. Sealing pressure increases as case pressure increases, and the seal adjusts itself to compensate for any wear which takes place.
- (5) The pressure compensator regulates the volume delivered in accordance with the demand of the system and maintains the predetermined pressure. When the pressure is less than the spring load, the spring moves the spool to vent oil in the stroking cylinder to the case. The stroking piston then retracts and a spring load on the hanger moves it to a greater angle and increases the volume pumped. The axial thrust of the pistons against the cam plate during power stroke is balanced hydraulically. Oil, at system pressure, is admitted through holes in the piston and shoe to an undercut area in the face of the piston shoe. The pressure applied to the undercut area, which is slightly less than the piston area, effectively balances the forces so that the shoe is supported on an oil film at all times. Balance is controlled to such a degree that there is no excessive leakage, and high volumetric efficiency is maintained.
- (6) The axial thrust of the cylinder barrel is also balanced hydraulically against the port plate.
- (7) Because of these features, the axial thrust of the pistons is transferred hydraulically, eliminating the need for anti-friction thrust bearings. This increases the reliability factor, if contamination or other adverse conditions exist.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

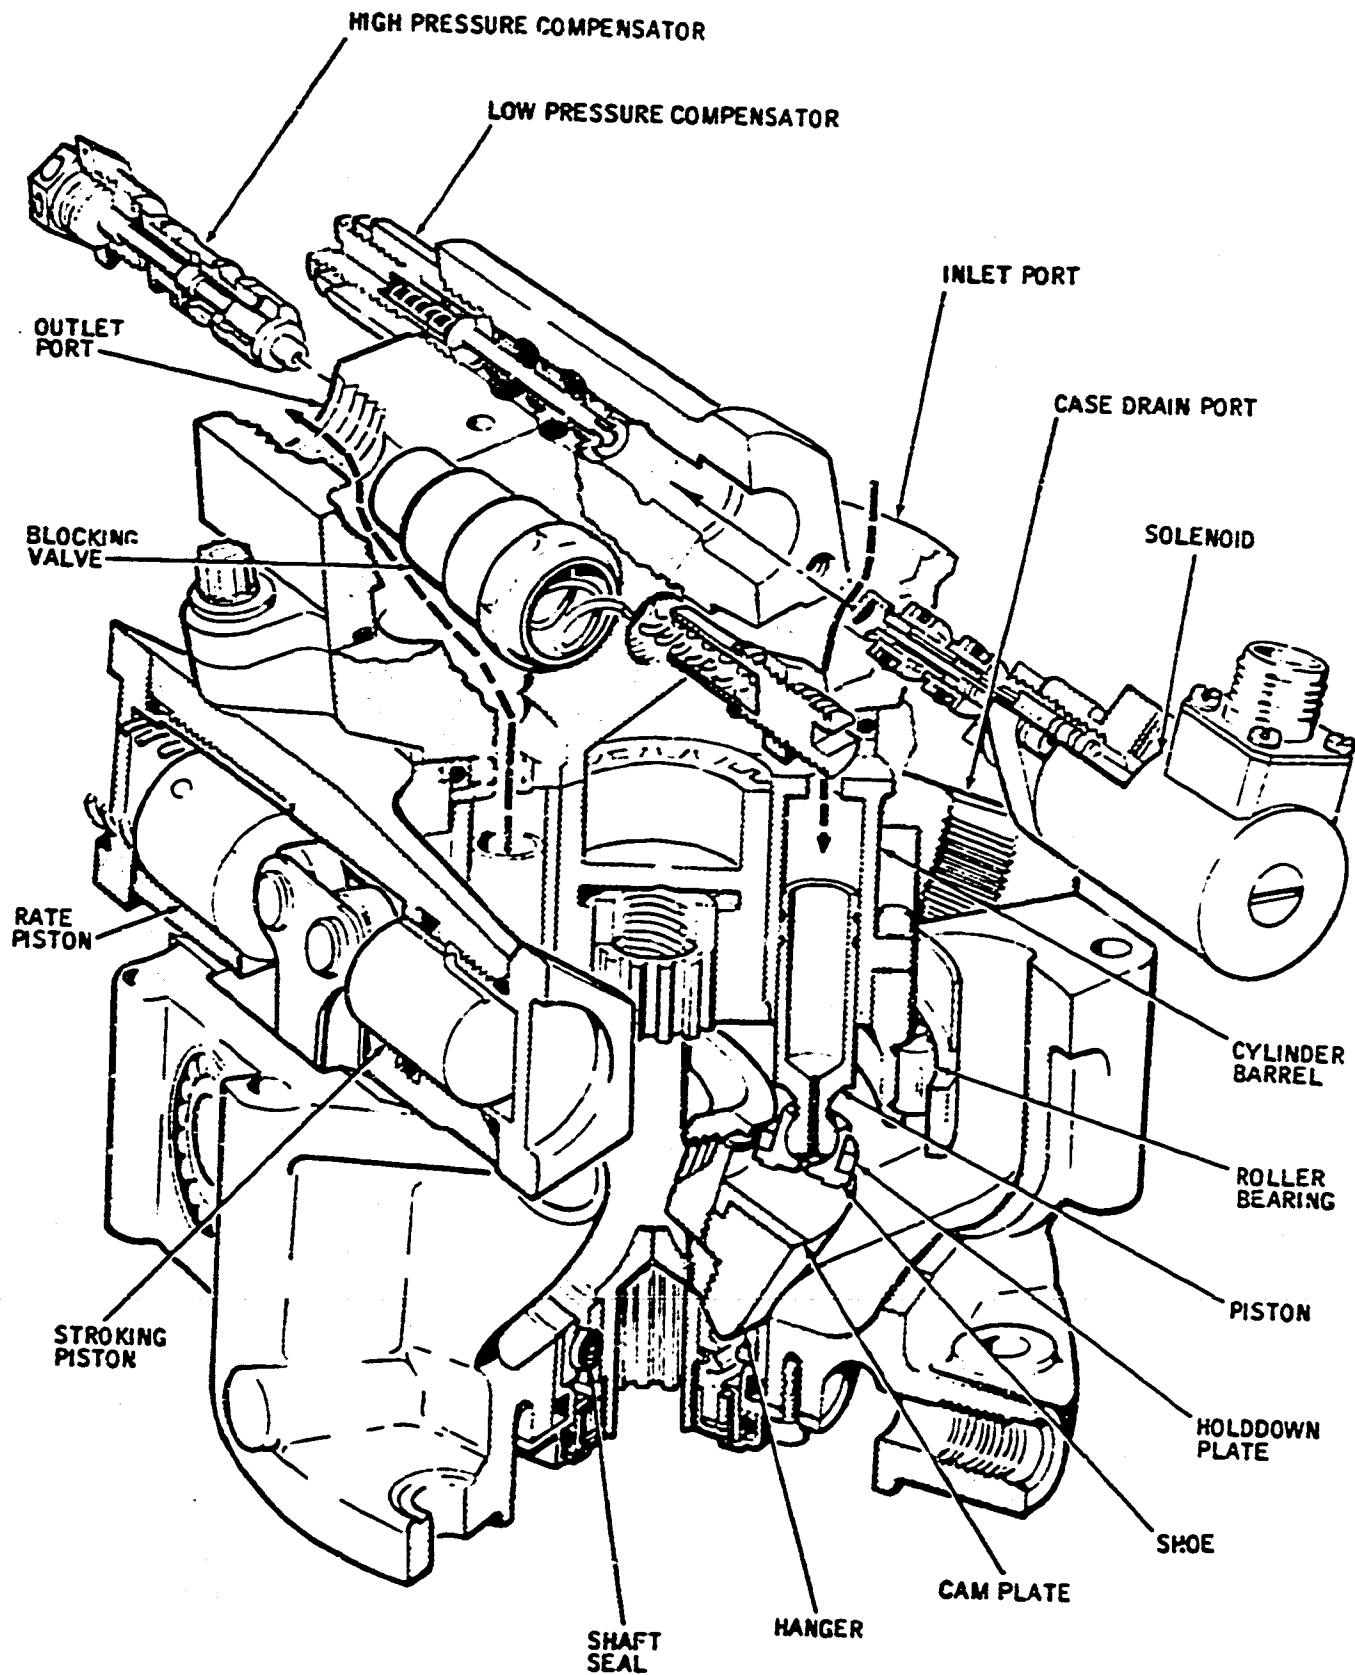

HA2-21


29-10-0  
CODE 22  
Page 26B

Engine-Driven Hydraulic Pump -- Cutaway View  
Figure 13A

Printed in U.S.A.


May 1/69

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

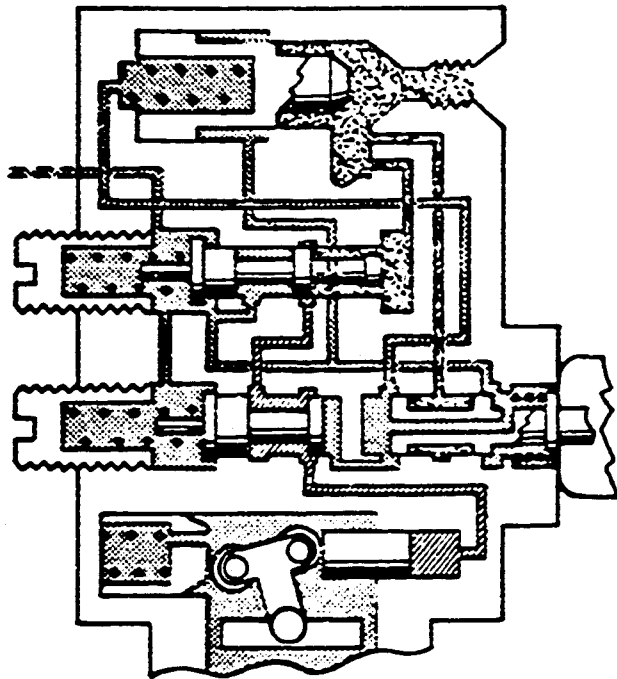


**A. FULL PRESSURE, NO FLOW CONDITION**

BLOCKING VALVE OPEN, 3,000 PSI  
 FLUID AVAILABLE, NO DEMAND.

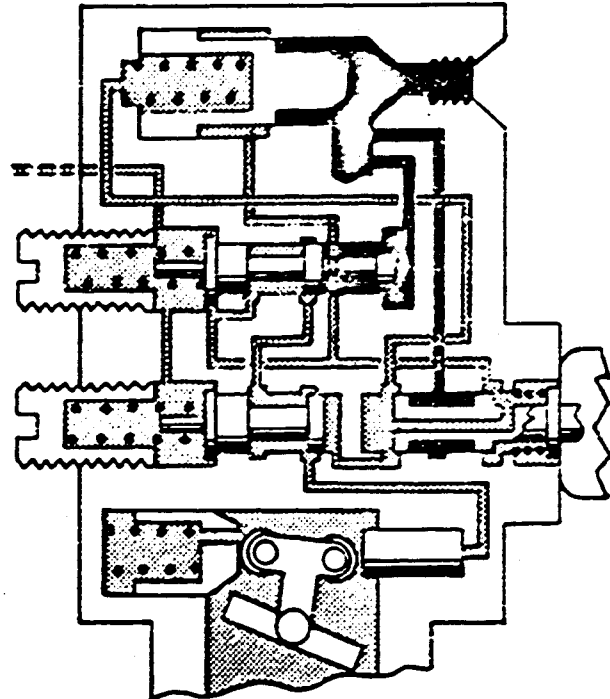

**B. FULL FLOW CONDITION**

BLOCKING VALVE OPEN, HANGER "ON STROKE" 3,000  
 PSI FLUID FLOWING FROM PUMP.

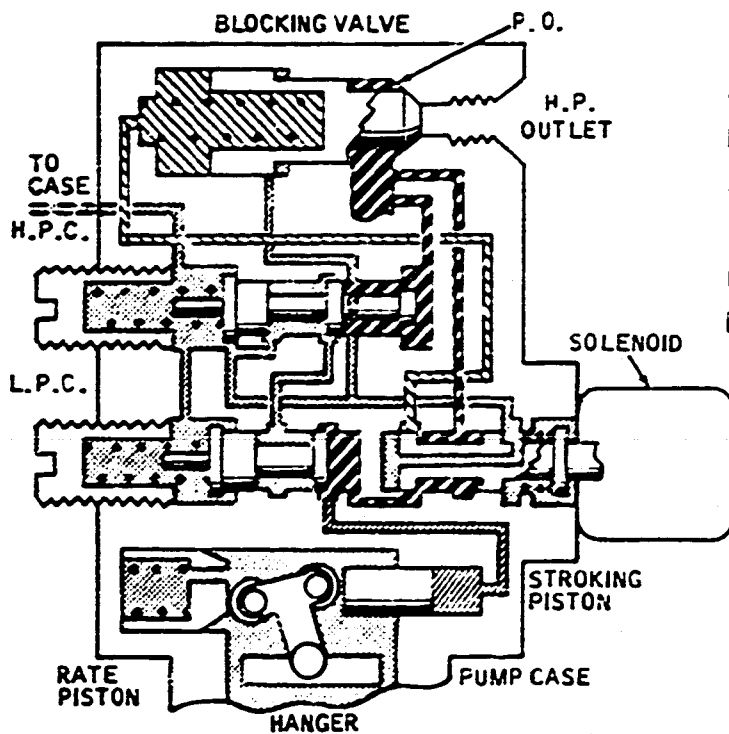

**C. DEPRESSURIZED AND BLOCKED CONDITION**

SOLENOID ENERGIZED, BLOCKING VALVE CLOSED,  
 PUMP COMPENSATED AT 500 PSI.

**KEY**

- COMPENSATED PRESSURE: 3,000  $\pm$  50
- CONTROL PRESSURE: 200-300
- CASE PRESSURE: 45-55
- FULL FLOW PRESSURE: TO 2,950
- DEPRESSURIZED PRESSURE: 400-500
- BLOCKING VALVE PRESSURE: 400-500
- P.O. = PUMP OUTLET
- H.P.C. = HIGH PRESSURE COMPENSATOR
- L.P.C. = LOW PRESSURE COMPENSATOR

HA2-19

Engine-Driven Hydraulic Pump Pressure  
 Flow -- Schematic  
 Figure 13B

29-10-0  
 CODE 22  
 Page 26C

May 1/69

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) The pump functions as a standard, pressure-compensated pump, when the bypass solenoid is not energized. Energizing the solenoid allows the pump to compensate at a reduced, controlled pressure of approximately 500 psi. Also incorporated in the cap is a blocking valve. The valve shuts off the discharge flow from the pump, when the 500 psi compensating valve takes over as a result of the solenoid being energized. Hence, depressurizing the pump permits operation with the pump completely feathered at approximately 1/2 drive torque required at 3000 psi. The blocking valve is automatically controlled by the depressurizing valve. When the solenoid is energized, the blocking valve prevents flow from the pump discharge port. When the solenoid is deenergized, the blocking valve automatically opens as the pump builds up pressure to match the system demand.

L. Engine-Driven Hydraulic Pump Check Valves (See Figure 10.)

- (1) Two check valves, rated at 3000 psi, are installed in the lines from each engine-driven hydraulic pump. One check valve is installed in the pressure line and the other is in the case drain line. The check valves in the pump pressure lines prevent reverse flow of hydraulic fluid through the pump, when the pump is inoperative or when external hydraulic pressure is supplied to the system. Access to the valves can be gained through an access door in the forward right apron of each inboard pylon. The valves are mounted on the exterior wall of the inlet box by means of the bulkhead fittings and retaining nuts.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Normal operating pressure will unseat the poppet, and fluid will flow through the valve. When pressure downstream of the valve exceeds pressure from the pump, the pressure, with the aid of the return spring, will seat the poppet. This prevents reverse flow of hydraulic fluid through the pumps.


M. Engine-Driven Hydraulic Pump Case Drain Filter (See Figure 14.)

- (1) A line-type, micron filter, for use in a low-pressure hydraulic system, is installed in the engine-driven hydraulic pump case drain line between the pump flow check valve and the hydraulic system reservoir. The case drain filter is installed on the aft surface of the rear spar opposite the leading edge of the inboard flap assembly. One filter is used for each engine-driven pump. Access is gained to the filter by lowering the flaps. A second check valve is installed adjacent to the filter in the downstream side of the case drain return line.
- (2) Externally, the filter is approximately 5 inches high and 2 inches wide, with ports marked inlet and outlet. The bowl is cylindrical in shape, with hex-shaped wrench flats at the lower end. A self-sealing, magnetic drain plug is installed in the bottom end of the filter bowl. The filter element is made of chemically treated paper.


N. Dual Filter and Relief Valve (See Figure 15.)

- (1) The hydraulic power system dual filter and relief valve consists of two filters and two relief valves installed in the same body. The unit filters the hydraulic fluid from the two engine-driven hydraulic pumps, and the pressure relief valves assure that excessive pressures do not build up in the pressure line from the pumps. The unit is located in the left main gear wheel well on the lower portion of the rear spar, approximately 1 foot outboard of the centerline shear web.
- (2) The unit consists of a casting with a flange-mounted pressure inlet port on each end. Two pressure outlets are located on the top of the casting. One outlet, centrally located, is the main pressure outlet to the system selector valve. The other, located to the left of the selector valve port, is the pressure outlet to the air pressure regulator-aspirator. The return outlet port for the relief valve portion of the unit is located on the center of the aft face of the body, canted upward. The nose gear return line is connected to a check valve installed in a return line port, located between the two filter bowls.
- (3) The pressure relief valves are located behind the pressure inlet ports and are connected to the return outlet port of the unit. The inlet from the nose gear return line is routed through the casting to the return outlet port.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

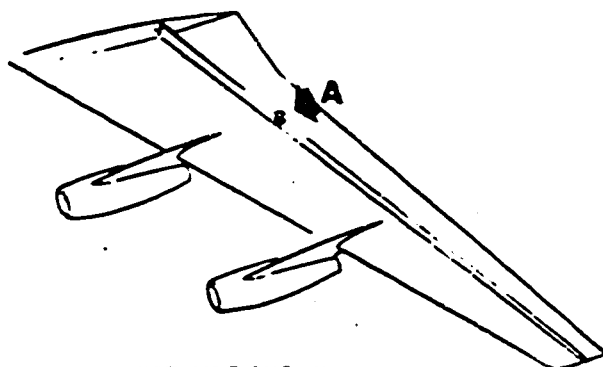

LEFT SIDE SHOWN  
 RIGHT SIDE OPPOSITE

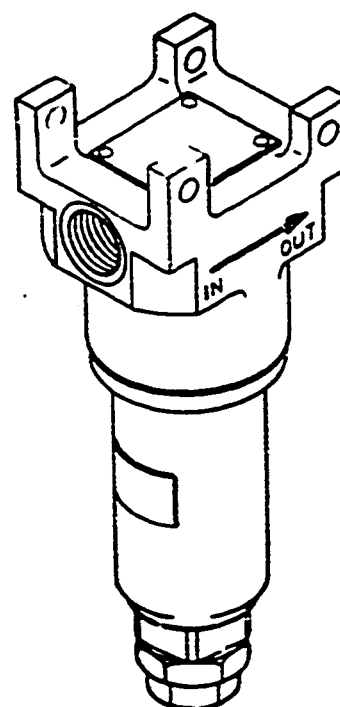

VIEW A

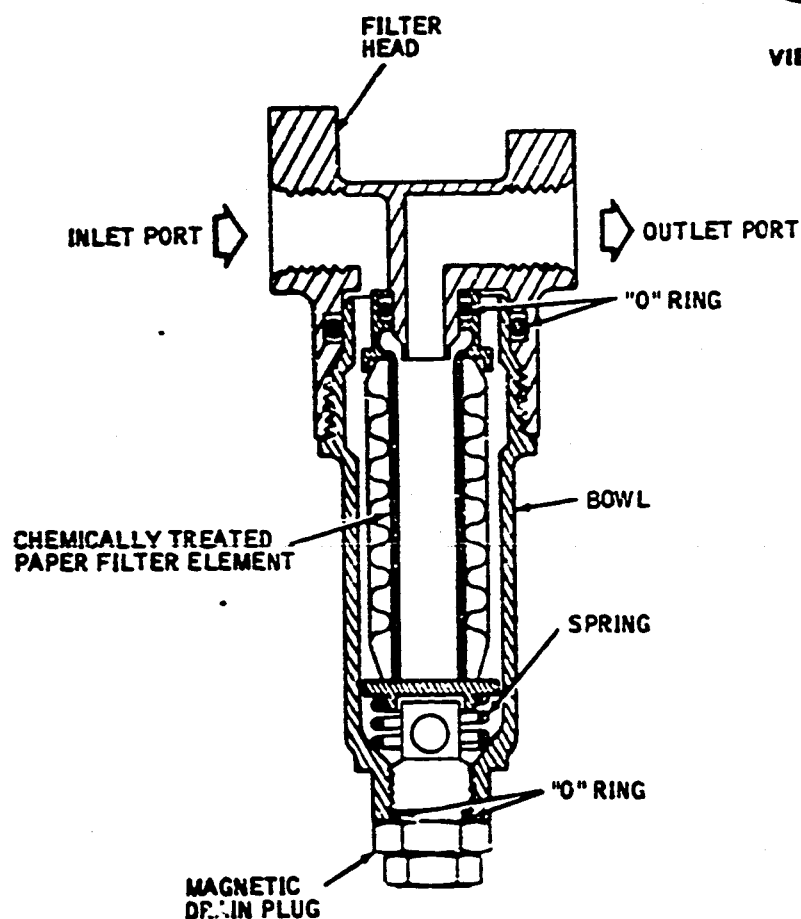

HA2-31


Engine Driven Hydraulic Pump Case Drain  
 Filter -- Cutaway View  
 Figure 14

29-10-0  
 CODE 22  
 Page 28

Printed in U.S.A.

Jan 15/68

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

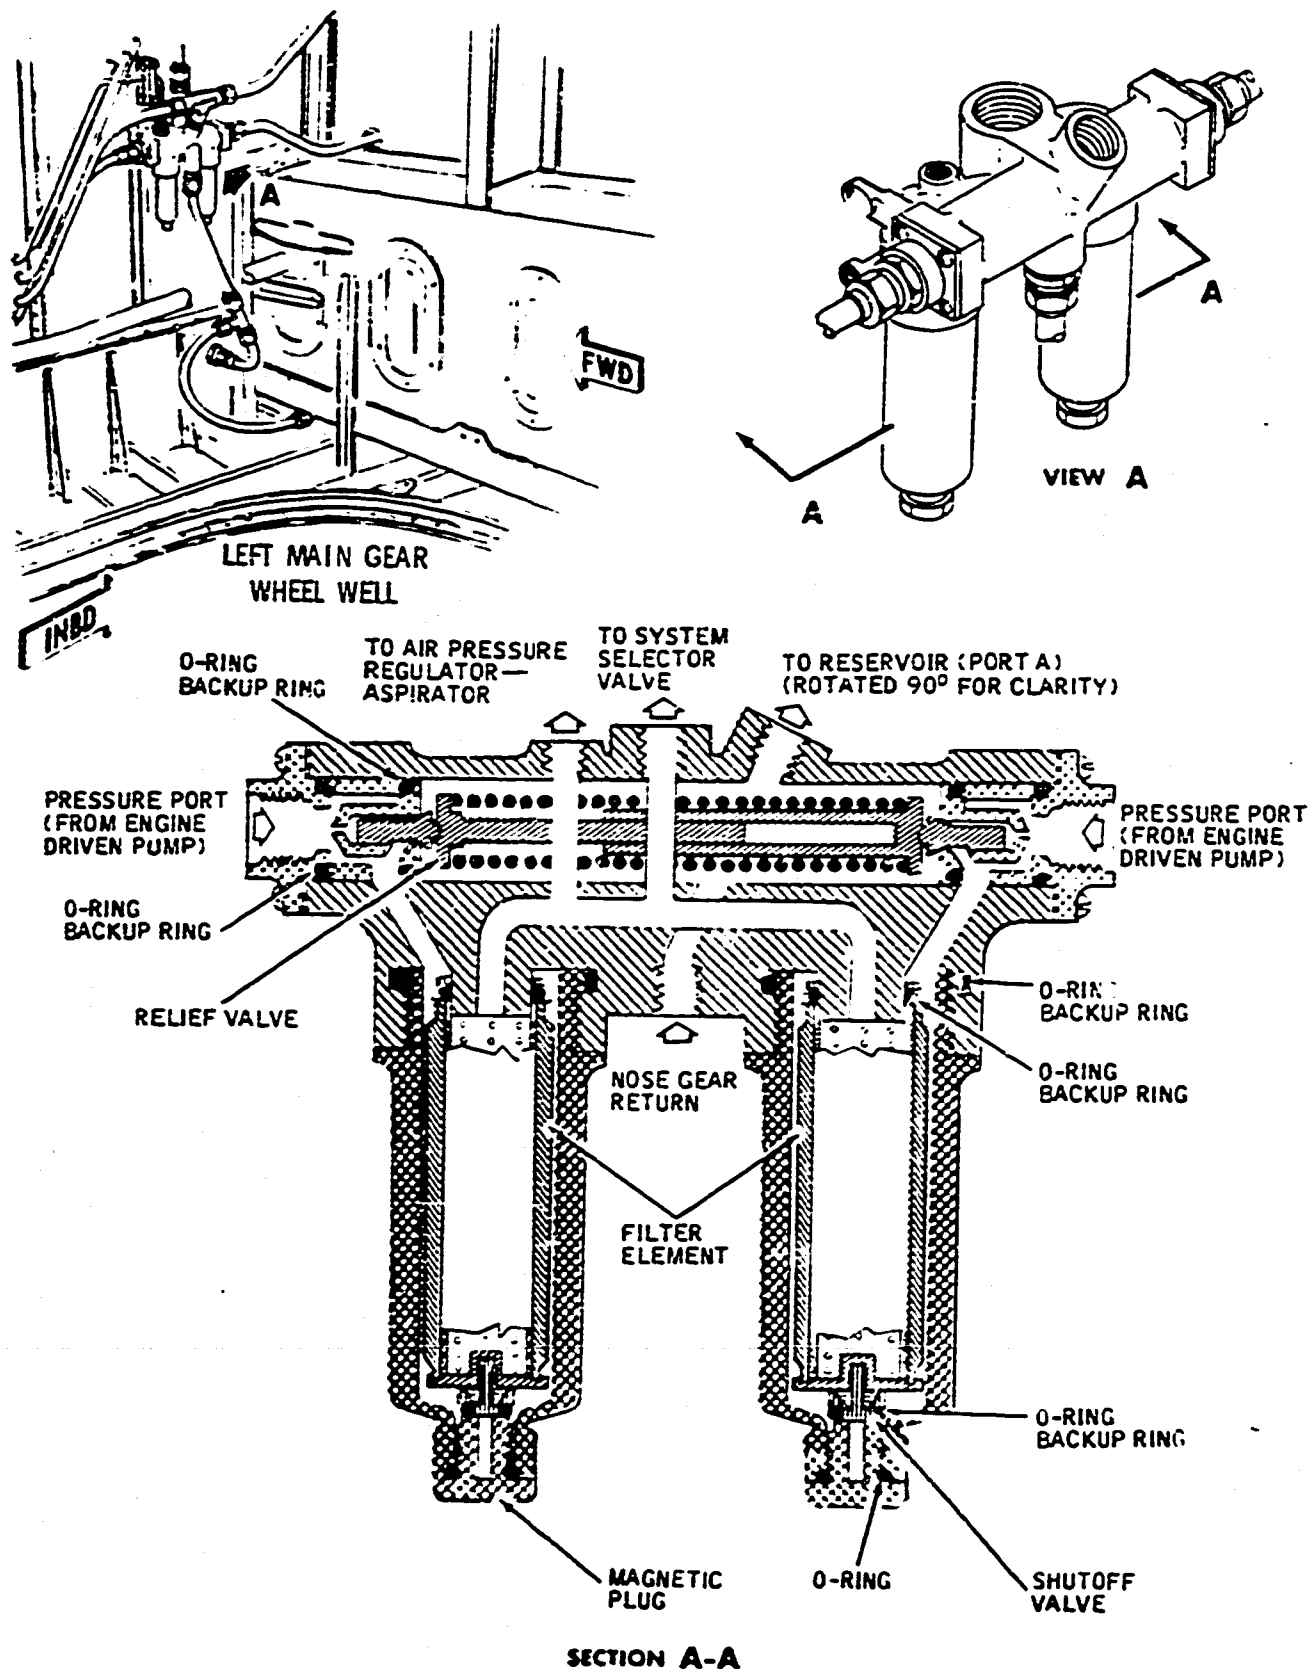

Dual-Filter and Relief Valve -- Cutaway View  
 Figure 15

Jan 15/68

Printed in U S A

HA2-20

29-10-0  
 CODE 22  
 Page 29



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) If either of the filter elements becomes clogged, pressure above 3000 psi at the inlet port will unseat the poppet. Pressure above 3500 psi will allow full flow of 22.5 gpm to flow to the return port of the unit and back to the reservoir. The relief valves will reseal at approximately 3000 psi.
- (5) A check valve is installed in the system selector valve port to prevent reverse flow or pressure through the filter during auxiliary hydraulic pump operation.


O. System Selector Valve (See Figures 16 and 17.)

- (1) The system selector valve is a 3-position valve which permits directional control of fluid under pressure. The valve is installed on the left hydraulic power manifold and is accessible through the left main gear inboard door.
- (2) The selector valve pressure-to-system port and the return port are directly ported to the manifold. The engine pump pressure enters the valve through a port on the large end of the valve, and the auxiliary pump inlet and alternate ports are located at the top, toward the aft end of the valve. The valve control crank is attached to a push-pull rod and a cable sector.
- (3) Operation of the system selector valve is controlled by a lever located on the right side of the system engineer's control pedestal. When the control lever is moved to the selected position, the cable system, through the sector and crank, actuates the valve positioning lever to drive the slide spool assembly to the selected position. When the control lever is placed in the general system (normal) position, the selector valve is actuated, causing hydraulic fluid to enter the valve through the system pressure port. The fluid is then directed into the manifold through the pressure-to-system port. In the general system (normal) position, fluid from the auxiliary pressure port is also routed to the pressure-to-system port. In the bypass/general system position, the selector valve ports engine pump pressure into the manifold through the return port. In this position, the auxiliary pump pressure is ported to the general system. In the general system/main gear downlock and flaps position, pump pressure is routed through the alternate port, at the top of the valve, for alternate operation of the flaps. Internal leakage provides lubrication for the moving parts of the valve.

P. Left Hydraulic Power Manifold (See Figure 18.)

- (1) The left hydraulic power manifold distributes fluid pressure from the hydraulic pump (any one of the three pumps), through control valves to the various airplane hydraulic subsystems. The left power manifold is located overhead in the left wheel well. Access to the left manifold is through the left main gear inboard door.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

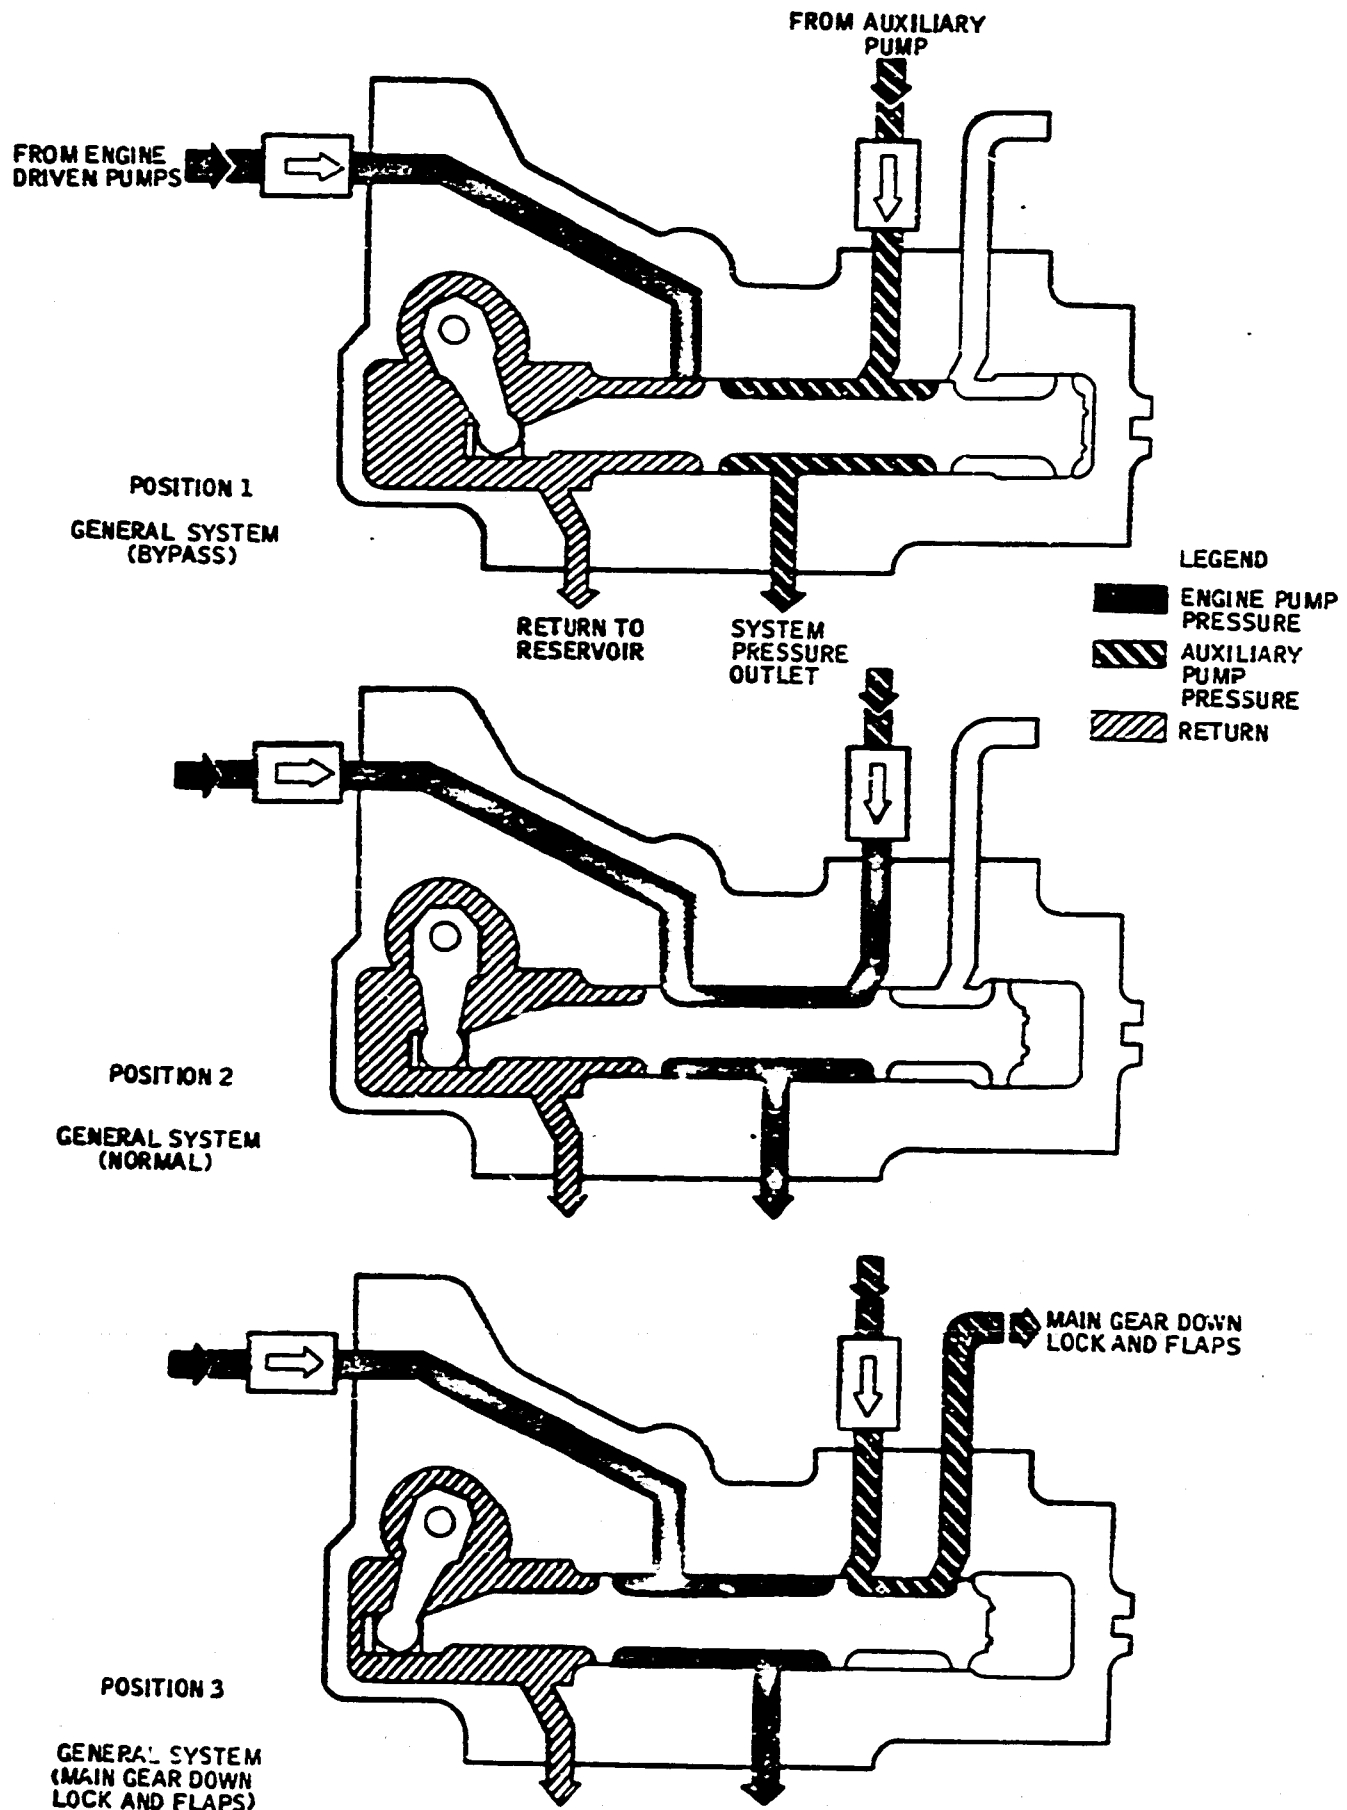


System Selector Valve -- Schematic  
 Figure 16

Jan 15/68

Printed in U.S.A.



HA2-26  
 29-10-0  
 CODE 22  
 Page 31

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

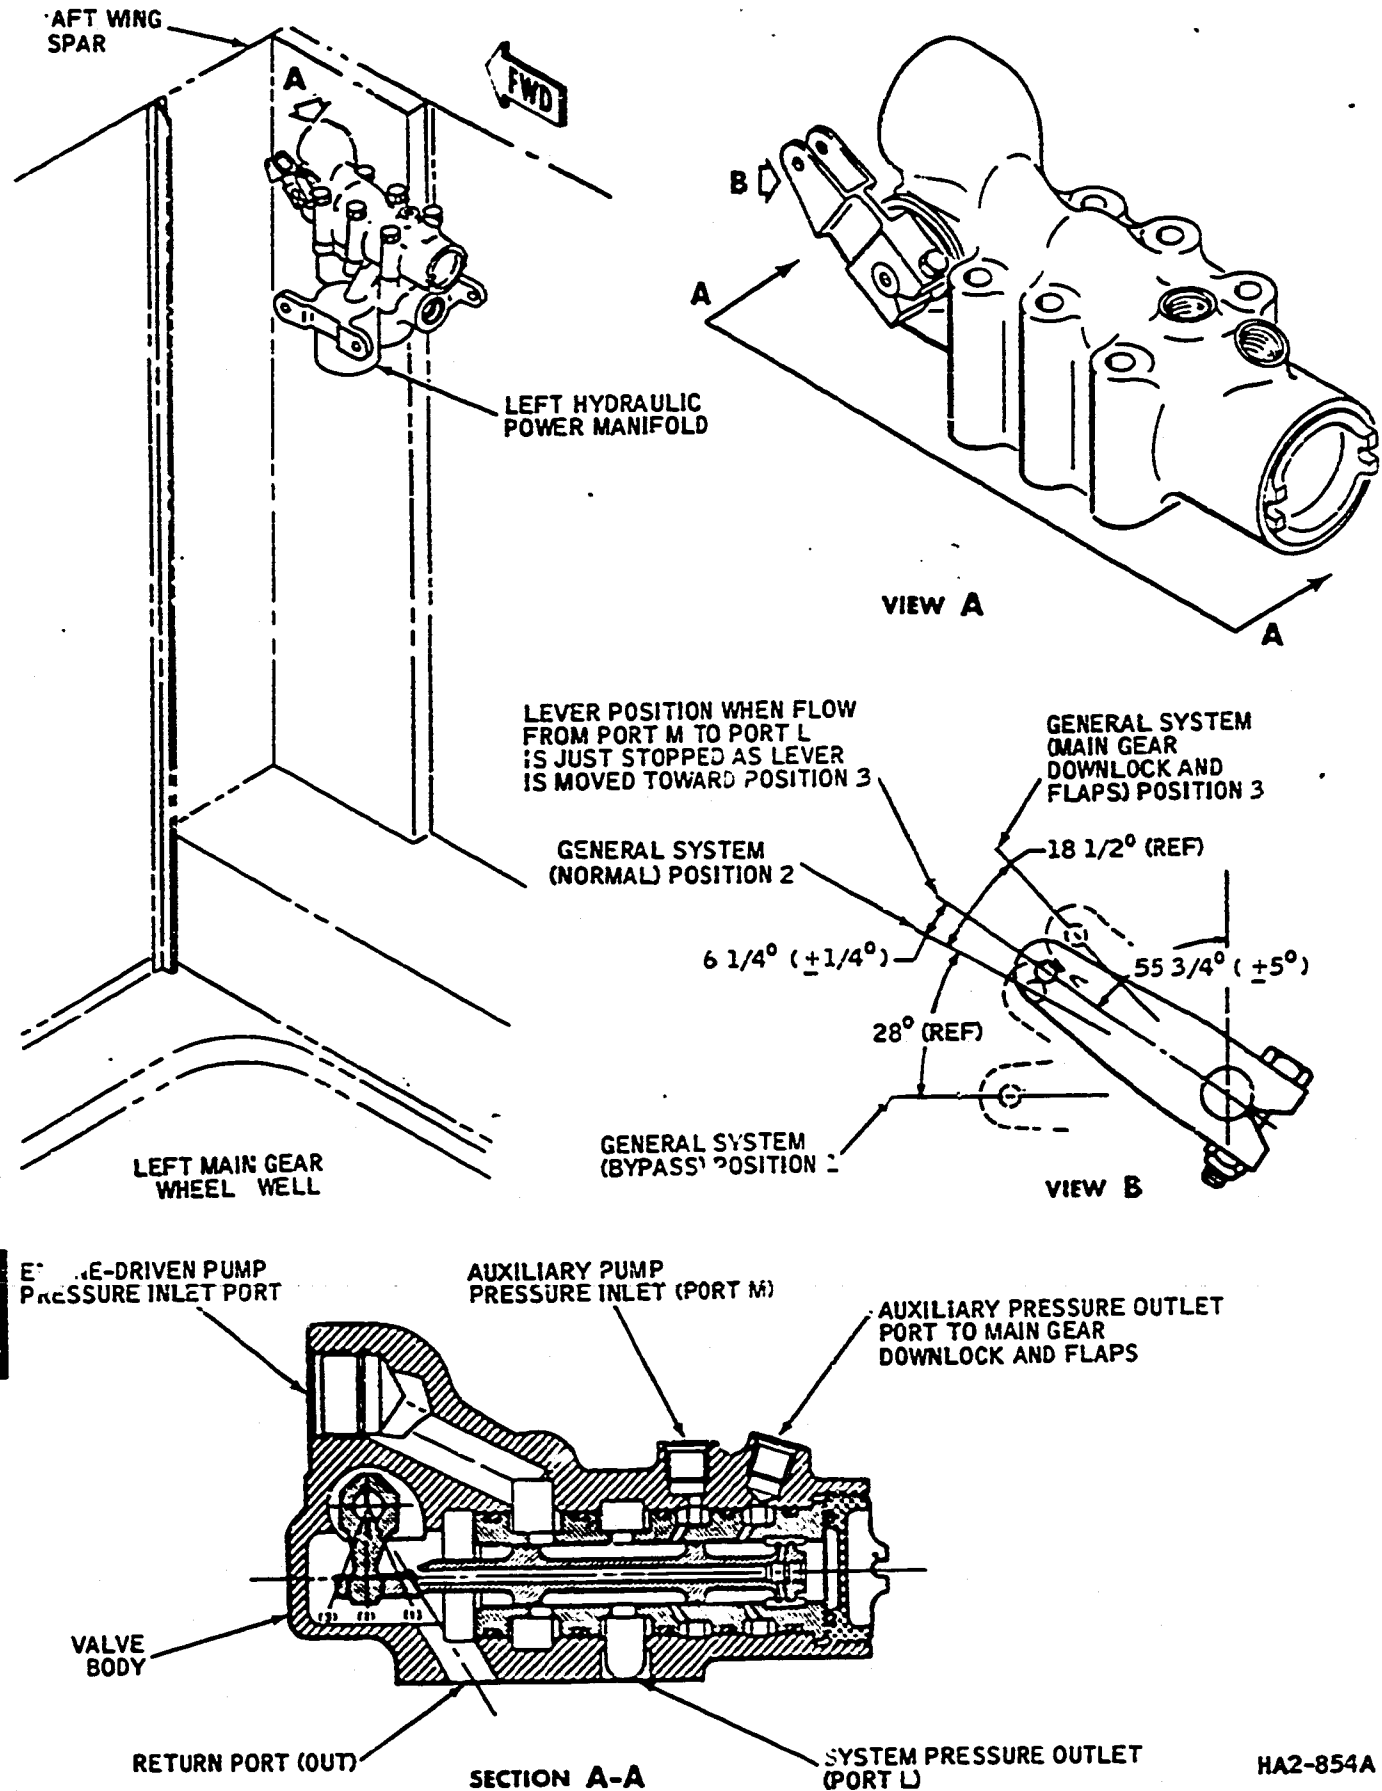

HA2-854A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

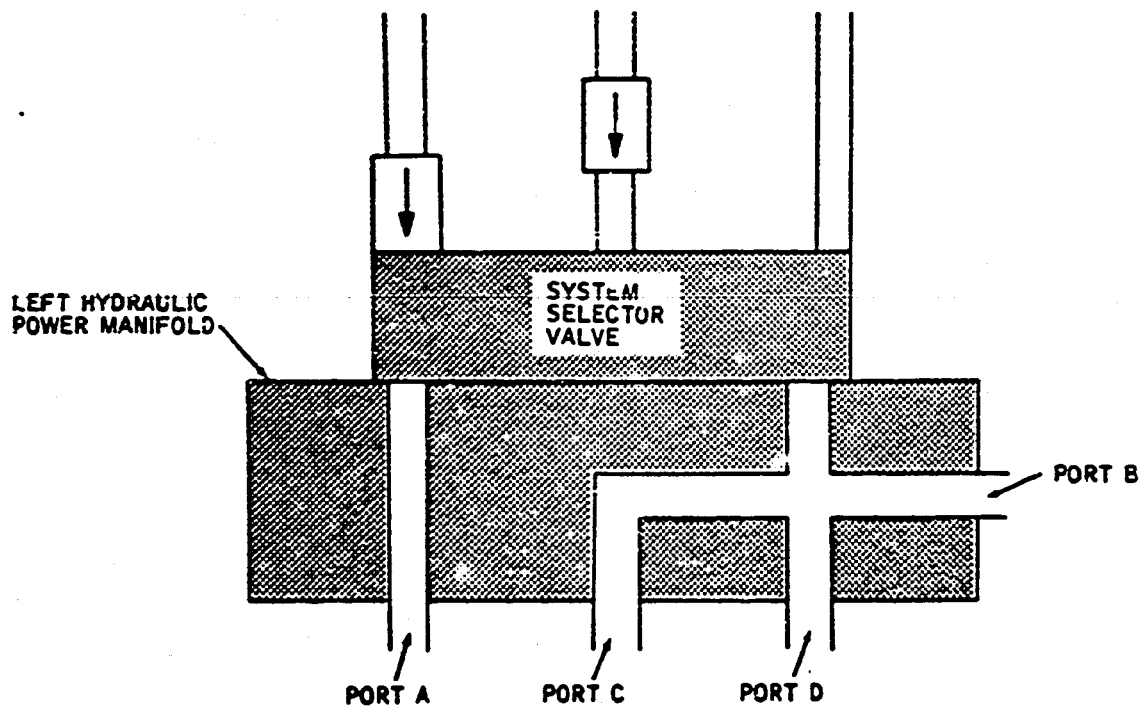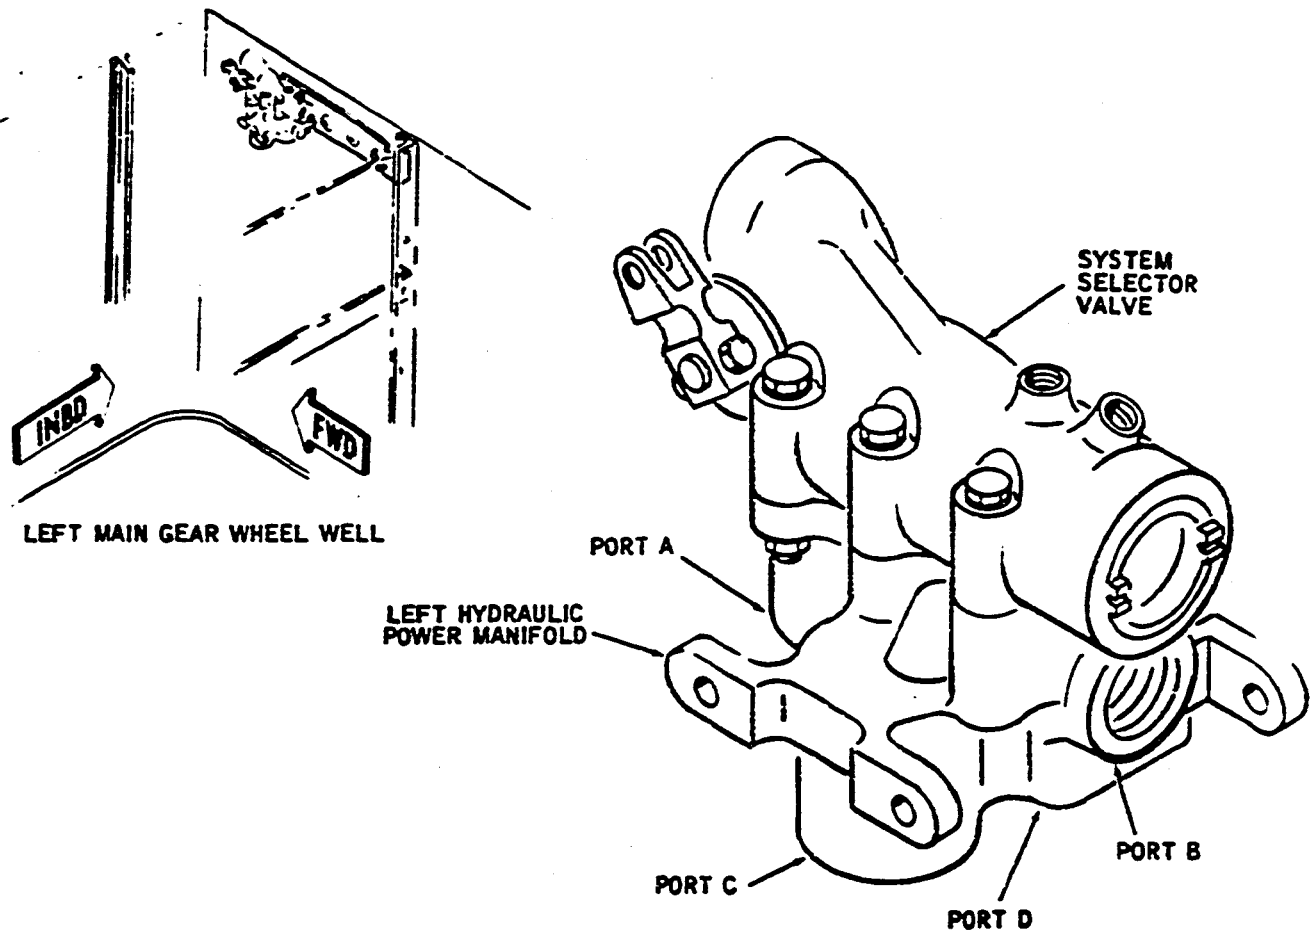

HA2-855

Left Hydraulic Power Manifold -- Schematic  
 Figure 18

Jan 15/68

Printed in U.S.A.

29-10-0  
 CODE 22  
 Page 33


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) One valve-mounting pad is provided on the top of the manifold for the system selector valve. Four ports are provided on the manifold for connection of hydraulic pressure and return lines. Three of these ports are pressure outlet ports; one, located on the aft face of the manifold and one located on the bottom of the manifold port fluid to the flight controls. The third pressure outlet port, located on the bottom of the manifold, ports fluid directly to the priority valve, which in turn, ports fluid to the nose gear and to the right power manifold. The fourth, a return port, located immediately forward of the pressure line port on the bottom of the manifold, is connected by a line to a return port of the reservoir.


Q. Right Hydraulic Power Manifold (See Figure 19.)

- (1) The right hydraulic power manifold distributes fluid pressure from the hydraulic pumps (engine-driven or auxiliary, or any combination of these three pumps), through the control valves to the various hydraulic subsystems. The right hydraulic power manifold is located overhead in the right wheel well. The manifold is held in place with braces and is accessible through the right main gear inboard door.
- (2) The manifold contains passages for pressure and return fluid distribution, four check valves, ports for pressure and return lines, and mounting pads for the various control valves.
- (3) The right manifold receives fluid pressure from the left manifold. Pressure is ported through check valves to the wing flap control valve, to the slot control valve, to the main gear control valve, to the brake control valve, to the brake pressure transmitter, and to the brake accumulators.
- (4) Auxiliary hydraulic pressure is ported from the alternate port of the system selector control valve into port K in the right manifold. Port K is located inboard of the spoiler control valve. From port K, auxiliary hydraulic pressure is ported through a check valve to the downstream side of the wing flap control valve check valve and into the wing flap control valve for alternate operation of the wing flaps.
- (5) The return passage from the wing flap control valve ports fluid to return port A. The brake control valve return passage ports fluid into return line B through a two-way restrictor. The main gear control valve downline return fluid uses a separate port in the valve, bypasses the manifold, and returns the fluid directly to A return line to the reservoir. The upline in the main gear control valve uses the same return port, return port B, in the manifold as the brake control valve.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

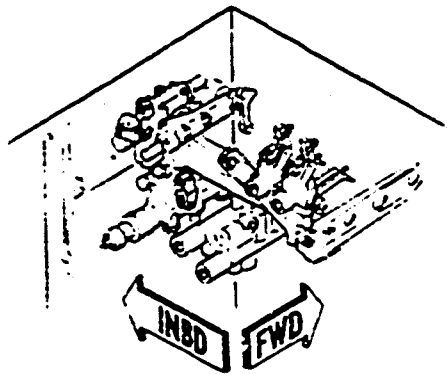

RIGHT MAIN GEAR  
WHEEL WELL

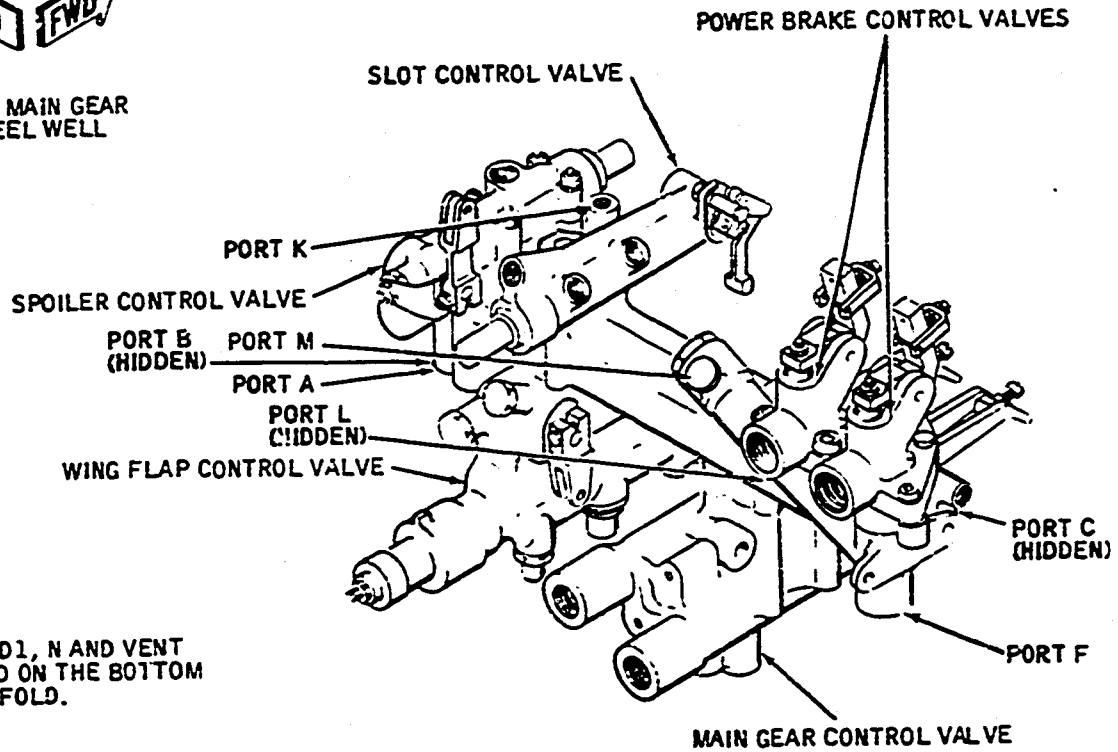

NOTE: PORTS B, C, D1, N AND VENT  
ARE LOCATED ON THE BOTTOM  
OF THE MANIFOLD.

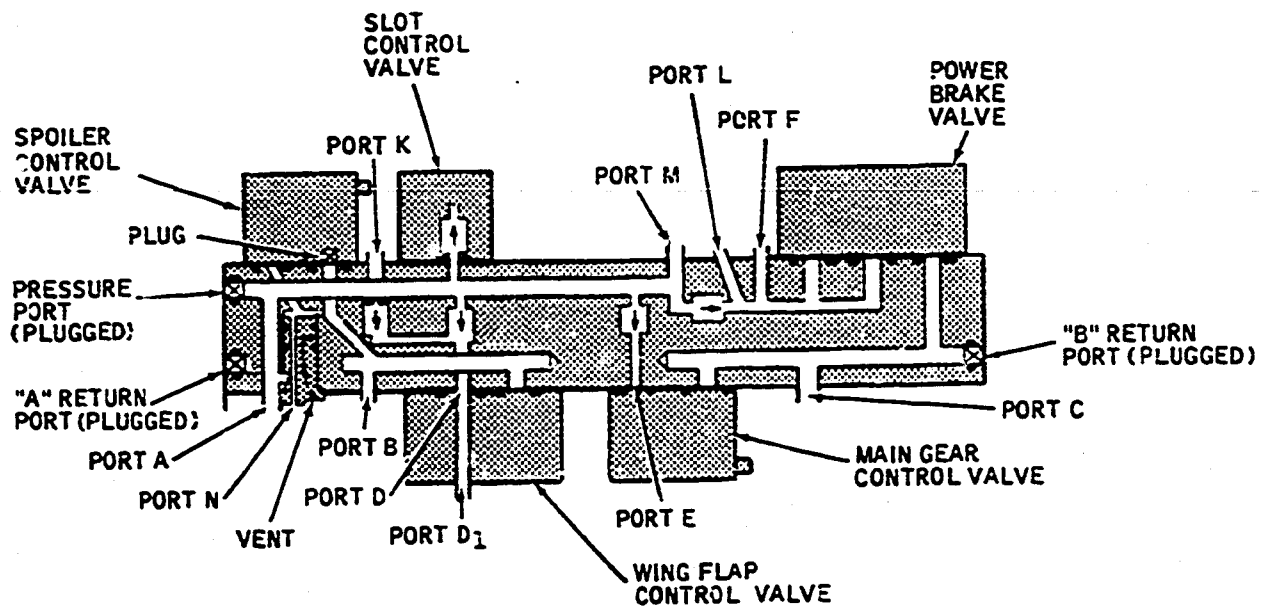

HA2-29A

Right Hydraulic Power Manifold -- Schematic  
 Figure 19

Nov 1/69

Printed in U.S.A.

29-10-0  
 CODE 22  
 Page 35

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

R. Deleted.


S. Hydraulic Power System Accumulator (See Figure 20.)

- (1) The hydraulic power system accumulator is a spherical, welded-steel, fluid and air bladder-separated container. The accumulator is installed in the pressure line of the hydraulic power system to provide a reserve supply of fluid under pneumatic pressure and to act as a shock absorber for system pressure surges.
- (2) The accumulator is located immediately aft of the left hydraulic power manifold and is accessible through the left main gear inboard door. It is mounted with two corner brackets and clamp blocks at the upper and lower port fittings.
- (3) The accumulator is installed in the pressure line of the hydraulic power system and is initially charged with 1000 psi of dry nitrogen. As the system pressure builds up, fluid is forced into the upper chamber of the accumulator, further compressing the trapped nitrogen to approximately 3000 psi. With full hydraulic system pressure, 3000 psi is indicated on the pressure gage adjacent to the filler valve. This reserve pressure smooths out any momentary lag in the pump's response to the system's demand for greater fluid flows. The accumulator permits a gradual rise in system pressure, thereby absorbing the shock of pump surges and relieving the piping and system operating units of high-impact loads. When the engine-driven hydraulic pumps are not operating, the accumulator provides system pressure (at a diminishing rate) until a quantity equal to the stored volume in the accumulator has been used by the system.

T. Hydraulic System Priority Valve (See Figure 21.)

- (1) The priority valve is located in the left wheel well near the left hydraulic power manifold. The valve is installed in the hydraulic pressure line, between the two power manifolds, downstream of the pressure supply takeoff port for the flight controls. The priority valve is a balanced relief valve which reserves initial hydraulic pressure (up to 2150 psi maximum) for use in the flight control systems. The valve consists of a body with an inlet, an outlet, and a breather port. Internally, the valve contains a poppet valve plate, a poppet, a poppet valve load-spring, a piston, a piston load-spring, and a piston load-spring housing. The piston load-spring housing chamber is vented to ambient air through a breather hole which is covered by a butyl rubber band.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

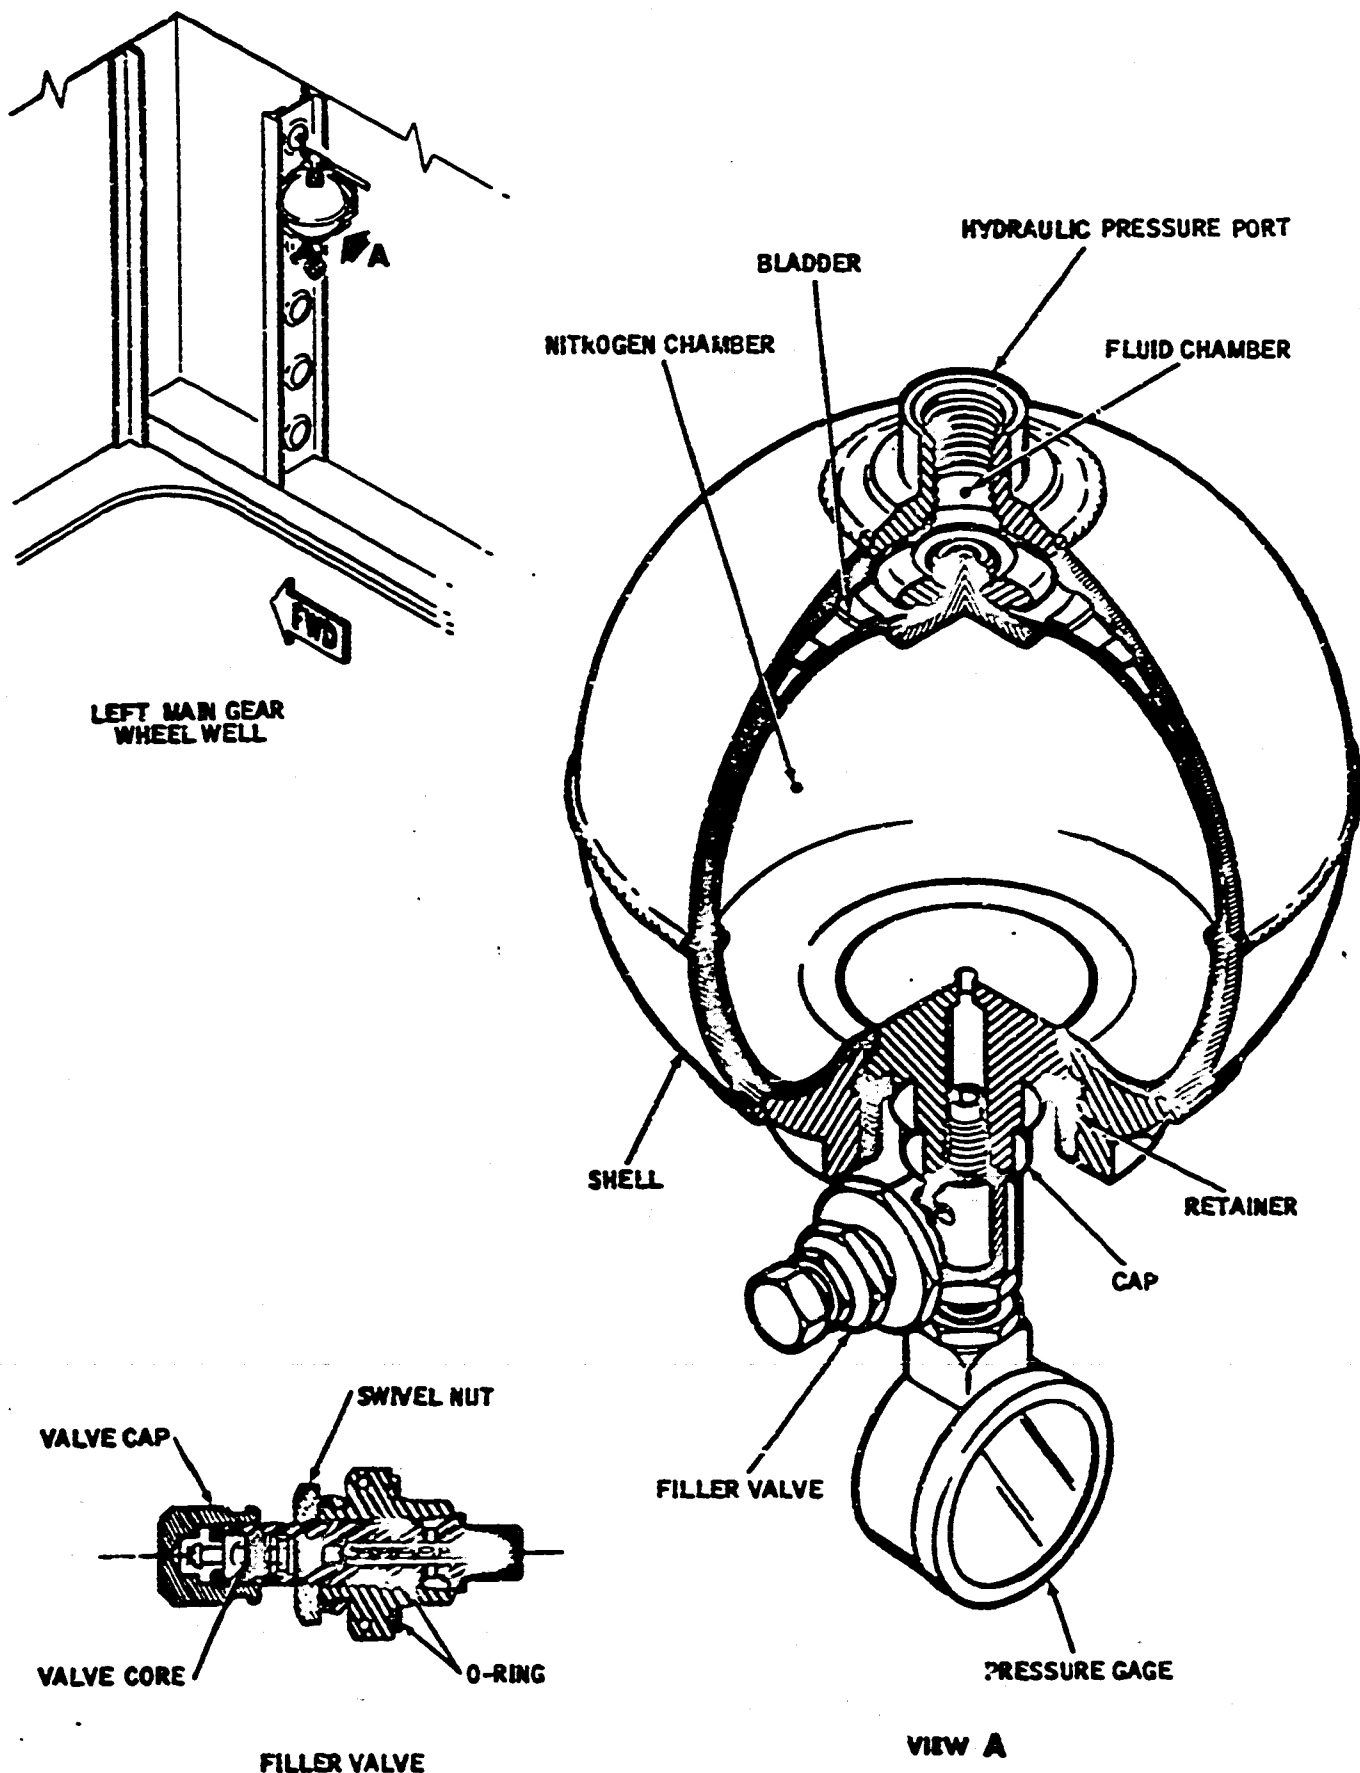

Hydraulic Power System Accumulator --  
 Cutaway View  
 Figure 20

HA2-30



29-10-0  
 CODE 22  
 Page 37

Jan 15/68

Printed in U.S.A.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

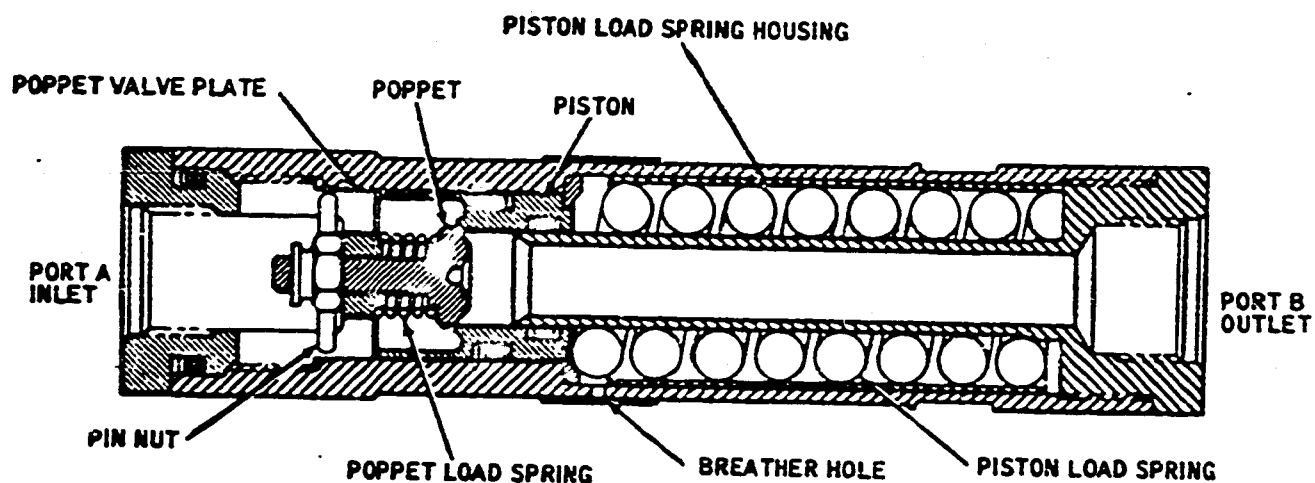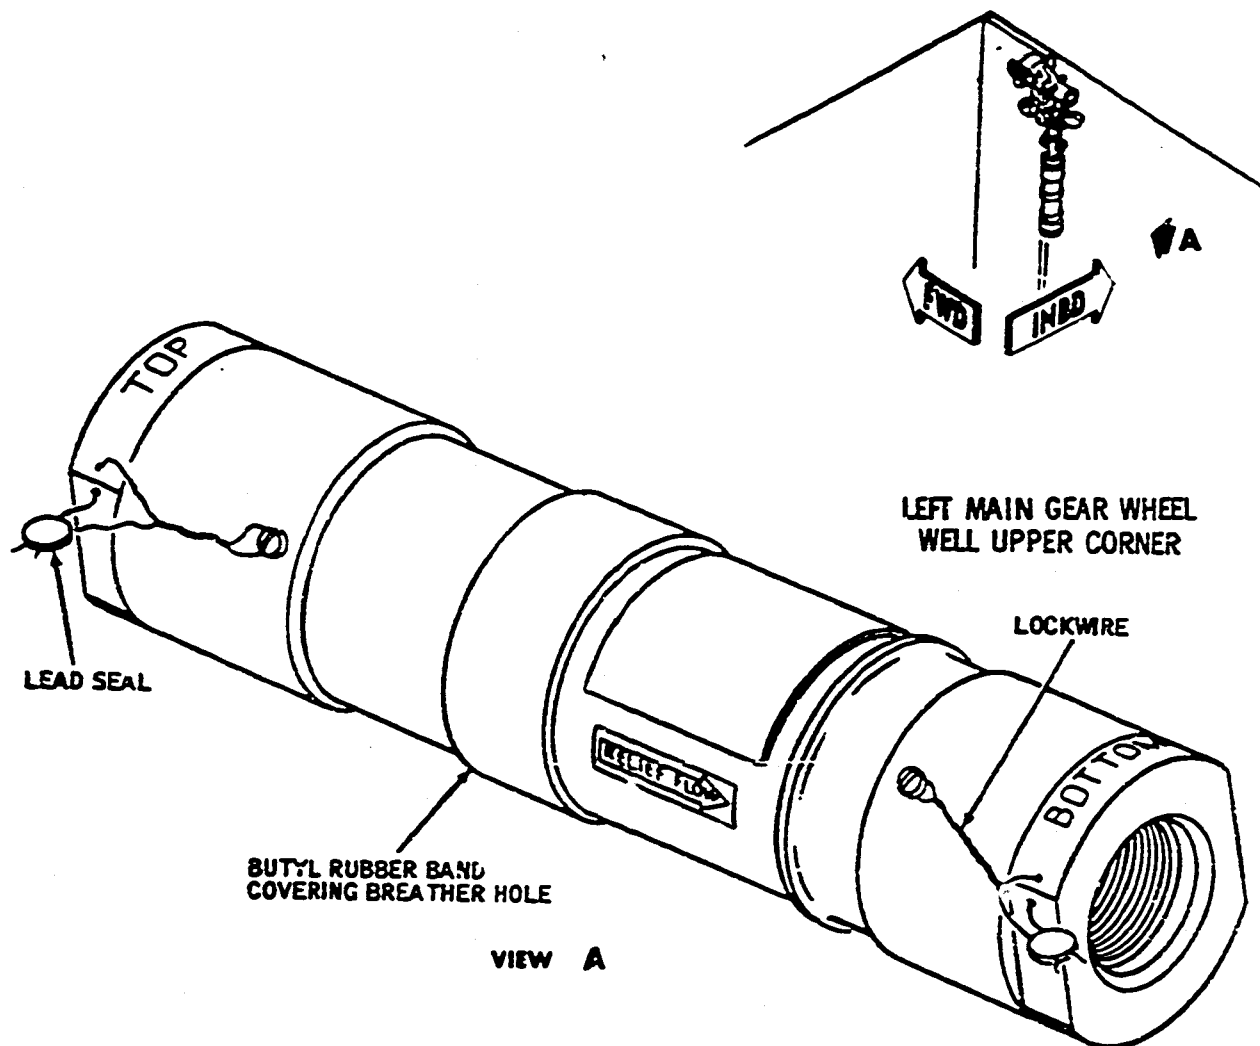

HA2-856

29-10-0  
 CODE 22  
 Page 38

Hydraulic System Priority Valve -- Cutaway View  
 Figure 21


Printed in U.S.A.

Jan 15/68

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The priority valve shuts off hydraulic pressure to all subsystems downstream of the left power manifold, whenever the hydraulic pressure drops below 1700 psi minimum. At this point, the valve closes to reserve the hydraulic pressure for use in the flight control systems, preventing them from reverting to manual operation. When the hydraulic pressure rises to 2150 psi maximum, the priority valve opens and supplies pressure to the right manifold and all subsystems downstream of the priority valve.
- (3) Hydraulic fluid from the left power manifold enters the priority valve through the inlet port, passes through the poppet valve plate holes, and applies pressure against the piston. When sufficient hydraulic pressure is applied to the piston, the piston load-spring compresses, unseating the poppet and permitting full flow through the valve. When the hydraulic pressure decreases to less than the opposing force value of the piston load-spring, the load-spring forces the piston against the poppet and shuts off fluid flow through the valve.
- (4) The maximum flow available from both engine-driven hydraulic pumps is: 44 to 45 gpm at takeoff, climb, and cruise configurations; 26 to 28 gpm at descent, approach, and engine idle configurations.
- (5) Some of the larger hydraulic system demands are as follows:
  - (a) Gear retraction -- 17 gpm (10 - 12 seconds)
  - (b) Gear extension -- 14 gpm (10 - 12 seconds)
  - (c) Wing flaps down -- 8 gpm (10 seconds)
  - (d) Wing flaps up -- 3 gpm (22 seconds)
  - (e) Horizontal stabilizer -- 7 gpm
  - (f) Ailerons -- 17 gpm (25°/second)
  - (g) Rudder -- 3 gpm (25°/second)
- (6) There are various combinations of hydraulic system operations which could cause momentary reversion of the flight controls to manual operation, the priority valve assures that the left power manifold receives all the hydraulic fluid pressure under conditions of very large flow demands.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

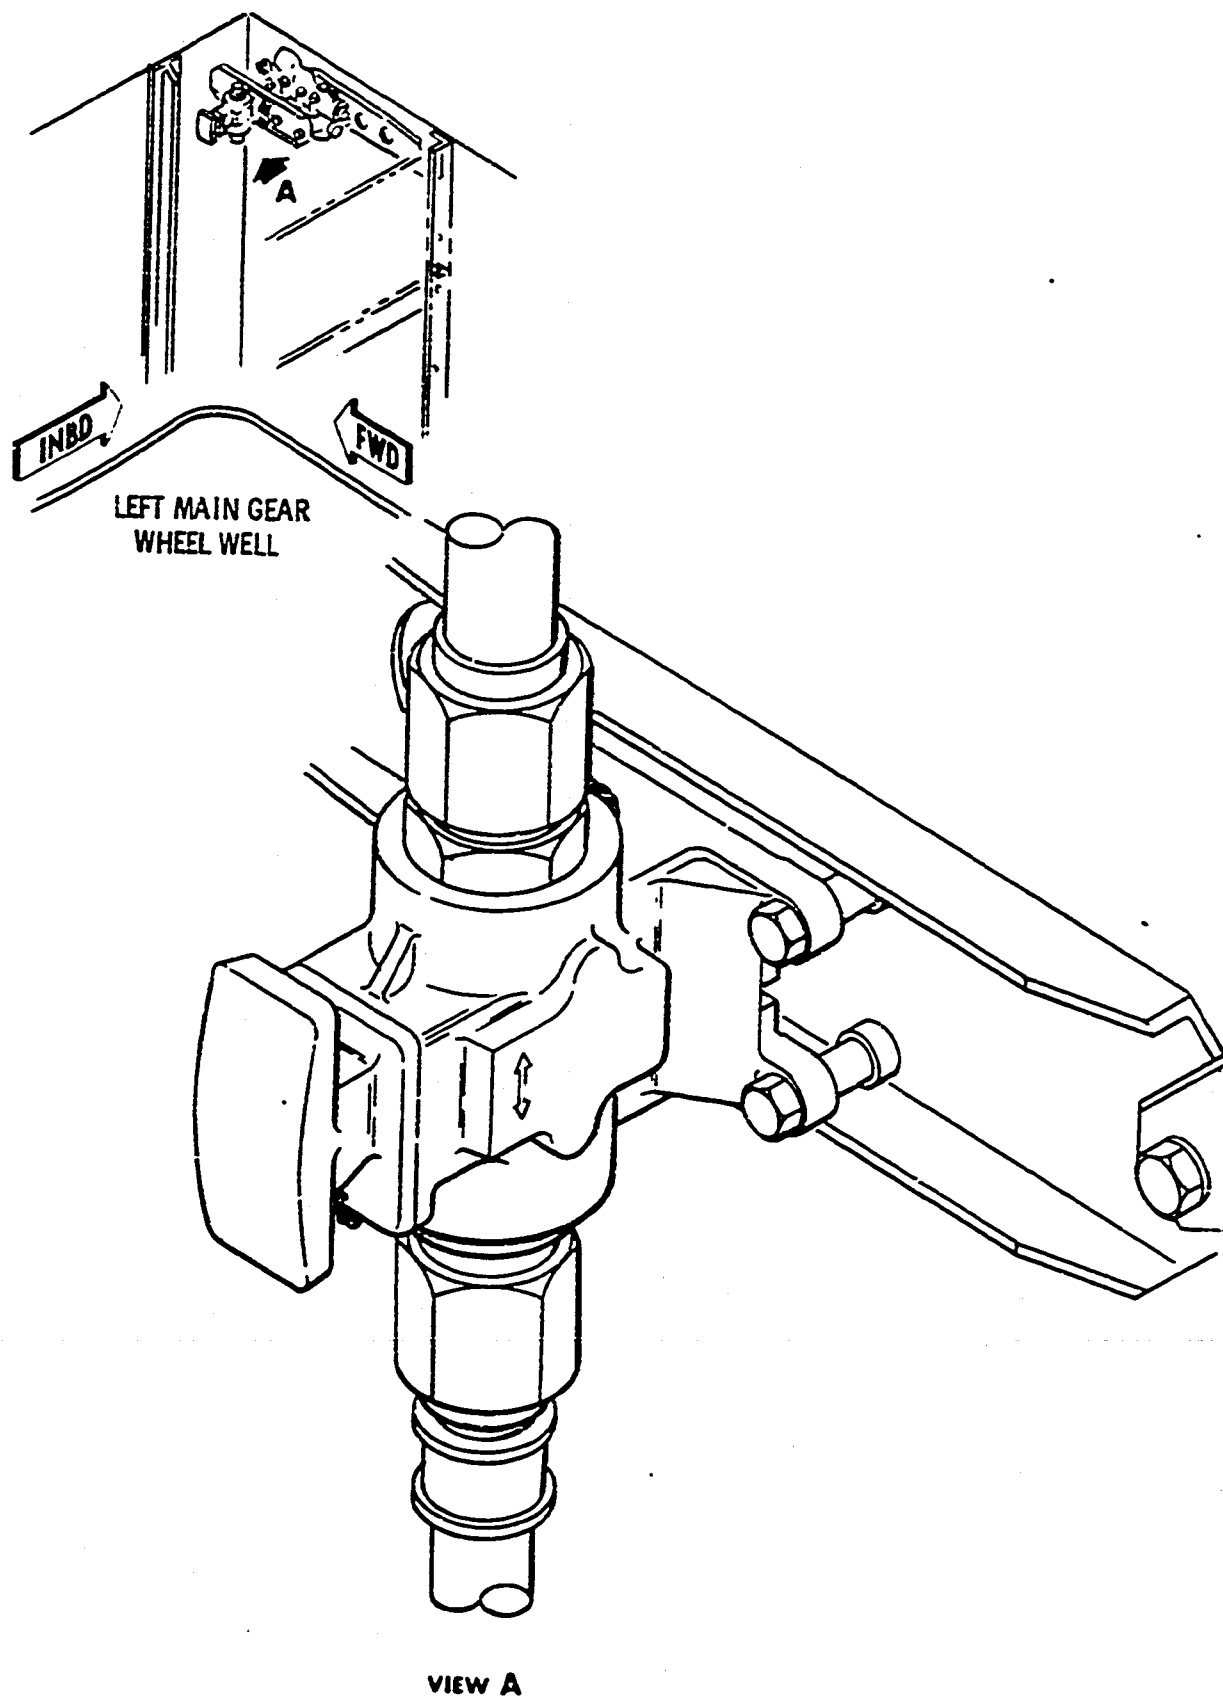

HA2-2937

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

U. Manual Shutoff Valve (Airplane With S/B 29-67, See Figure 22)

- (1) Two manually operated shutoff valves are provided just downstream of the priority valve for isolation of non-priority subsystems during maintenance operations. One valve shuts off pressure to the following subsystems:
  - (a) Wing flaps
  - (b) Wing slots
  - (c) Main landing gear retraction
  - (d) Power wheel brakes
- (2) The other valve shuts off pressure to the nosegear retraction and nose-wheel steering subsystems.
- (3) The manual shutoff valves are located in the upper inboard forward corner of the left main gear wheel well. One valve is mounted on the left power manifold support, the other is mounted to a structure stiffener.
- (4) The valves consist of two position (on-off), rotary type, valves with identical and interchangeable inlet and outlet ports. A T shaped handle is provided on each valve for manual operation and lockwire holes are provided in the base of the handle for safetying the valve in the open position.

V. Hydraulic System Selector Control Lever

- (1) The hydraulic system selector control lever is a manually actuated, mechanical lever detented to three positions. The lever provides a mechanical means, through cables, for positioning the system selector valve and the auxiliary hydraulic pump supply selector valve. The hydraulic system selector control lever is located on the system engineer's control pedestal. The lever is attached to a drive sector, located on a common shaft with the other control pedestal sectors. The lever and sector are accessible through the cover plates on the system engineer's pedestal.
- (2) To put the hydraulic power system in the bypass condition, the system selector control lever is lifted out of detent and moved to bypass/general system position. At the same time, the cable moves the sector and pushrod of the system selector valve to the No. 1 position. The pushrod positions the system selector valve to the No. 1 bypass position. At the same time, the cables from the system selector valve sector move the auxiliary pump supply selector valve sector to No. 1 (auxiliary) position. The auxiliary pump supply selector valve remains in the auxiliary supply position through the idle feature of the sector rigging. In this condition, the engine-driven pump pressure is ported to the reservoir and the auxiliary pump supplies pressure to the general system. In this position, the fluid is supplied to the auxiliary pump

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

from the low standpipe in the hydraulic system reservoir. To put the system into the alternate condition, the selector control lever is lifted out of detent and moved to the general system/main gear downlock and flaps position. The cables move the system selector valve sector to the No. 3 (alternate) position. The system selector valve sector moves the cables rotating the auxiliary pump supply selector valve sector to the No. 3 (alternate) position. As the sector rotates, the end of the arm moves away from the idle position. This positions the valves to the alternate position, supplying fluid to the auxiliary pump from the auxiliary pump alternate reservoir. In this position, fluid from the auxiliary pump is ported to the wing flap control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported to the general system.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - DESCRIPTION AND OPERATION

1. General

A. Description (See Figures 1 and 2.)

- (1) The hydraulic power system receives fluid pressure from the engine-driven hydraulic pumps, one installed on each inboard engine. The electrically driven auxiliary pump is used to supplement the engine-driven pumps, or to independently supply the system with fluid pressure.
- (2) The hydraulic system reservoir, located in the left wing root, has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir is used for fluid, and 1/10 is used for foam space. A separate air chamber is installed in the reservoir system to provide for a greater fluid capacity in the main reservoir. A reservoir filler assembly is installed in the piping between the reservoir and the air chamber and has a vent line from the filler neck to the tee at the top of the reservoir sight gage. The reservoir is pressurized to 30 to 35 psi by bleed pressure from the engine-driven pumps through an air pressure regulator-aspirator.
- (3) The engine-driven pumps receive fluid from the pressurized main reservoir through respective engine hydraulic fire shutoff valves. The engine hydraulic fire shutoff valves are normally open and can be mechanically controlled from the flight compartment. The pumps supply fluid pressure through respective check valves to the dual filter and relieve valve. Some of the fluid from the filter is ported through the regulator-aspirator to pressurize the reservoir. Most of the fluid is routed through a check valve to the system selector valve, and then to the left and right hydraulic power manifolds. The manifolds distribute the fluid pressure to the subsystems.
- (4) Hydraulic fluid is normally supplied to the auxiliary hydraulic pump from a low standpipe in the main reservoir. During alternate operation, the auxiliary hydraulic pump receives fluid supply from the auxiliary pump alternate reservoir, which is located just aft of the auxiliary pump. From these reservoirs, the fluid is ported through the auxiliary pump selector valve which is mechanically controlled from the flight compartment by the system selector control lever. When operating, the auxiliary hydraulic pump supplies fluid pressure to the subsystems through the system selector valve which is also controlled by the system selector control lever in the flight compartment. A filter and check valve are installed in the line from the auxiliary pump to the system selector valve.
- (5) An accumulator is installed in the pressure line to the subsystems to provide a reserve supply of fluid and to act as a surge damper for the system.

Jan 15/68

Printed in U.S.A.

29-10-0  
CODE 23  
Page 1


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Engine-driven pump fluid pressure is routed through the system selector valve to the left power manifold, where it is distributed to some of the subsystems and through the priority valve to the right power manifold. Fluid pressure from the right power manifold is distributed to the remaining subsystems.
- (7) The priority valve is a spring-loaded, poppet-type, balanced relief valve installed in the line downstream of the left power manifold. The priority valve's function in the system is to prevent the flight control systems from reverting to manual operation during high demands on the hydraulic system.
- (8) A fluid pressure transmitter, located in the nosewheel well, senses the system pressure, which is indicated on the hydraulic system pressure indicator in the flight compartment.

B. Normal Operation

- (1) Fluid is supplied to the hydraulic system from the pressurized hydraulic system reservoir. For operation of the hydraulic system under normal conditions, 8.1 US gallons (6.7 Imperial gallons; 30.6 liters) of hydraulic fluid are available to the engine-driven hydraulic pumps, and 12.9 US gallons (10.7 Imperial gallons; 48.8 liters) are available to the auxiliary hydraulic pump. Supply lines from the main reservoir carry fluid to each inboard pylon through normally open engine hydraulic fire shutoff valves to the engine-driven hydraulic pumps. Fluid is supplied to the auxiliary hydraulic pump from the main reservoir through a low standpipe at the base of the reservoir. Fluid is carried from the reservoir through the auxiliary pump selector valve to the auxiliary hydraulic pump.
- (2) The engine-driven hydraulic pumps supply full system pressure (3000 psi nominal) at any given engine speed, from idle to full power. The output flow of the pump is varied by sensing pressure from the outlet side of the pump. Each engine-driven pump contains a solenoid-operated bypass valve which, when energized, bypasses the pressure control regulator of the pump and ports fluid to the pump yoke control piston which feathers the pump. When the pump is feathered, flow rate is reduced to almost zero (1.0 gpm) and to a pressure of approximately 300 psi. Half of this flow maintains pump lubrication and cooling through internal leakage. This leakage is returned, through a check valve, the engine-driven pump case drain line filter, and another check valve to the case drain return port of the reservoir. The pressure fluid from each pump passes through a check valve to the dual filter and relief valve.
- (3) The fluid enters the dual filter and relief valve through the relief valve chamber. The fluid is passed through the filter element, through a manifold, and through a common outlet port. Fluid from

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

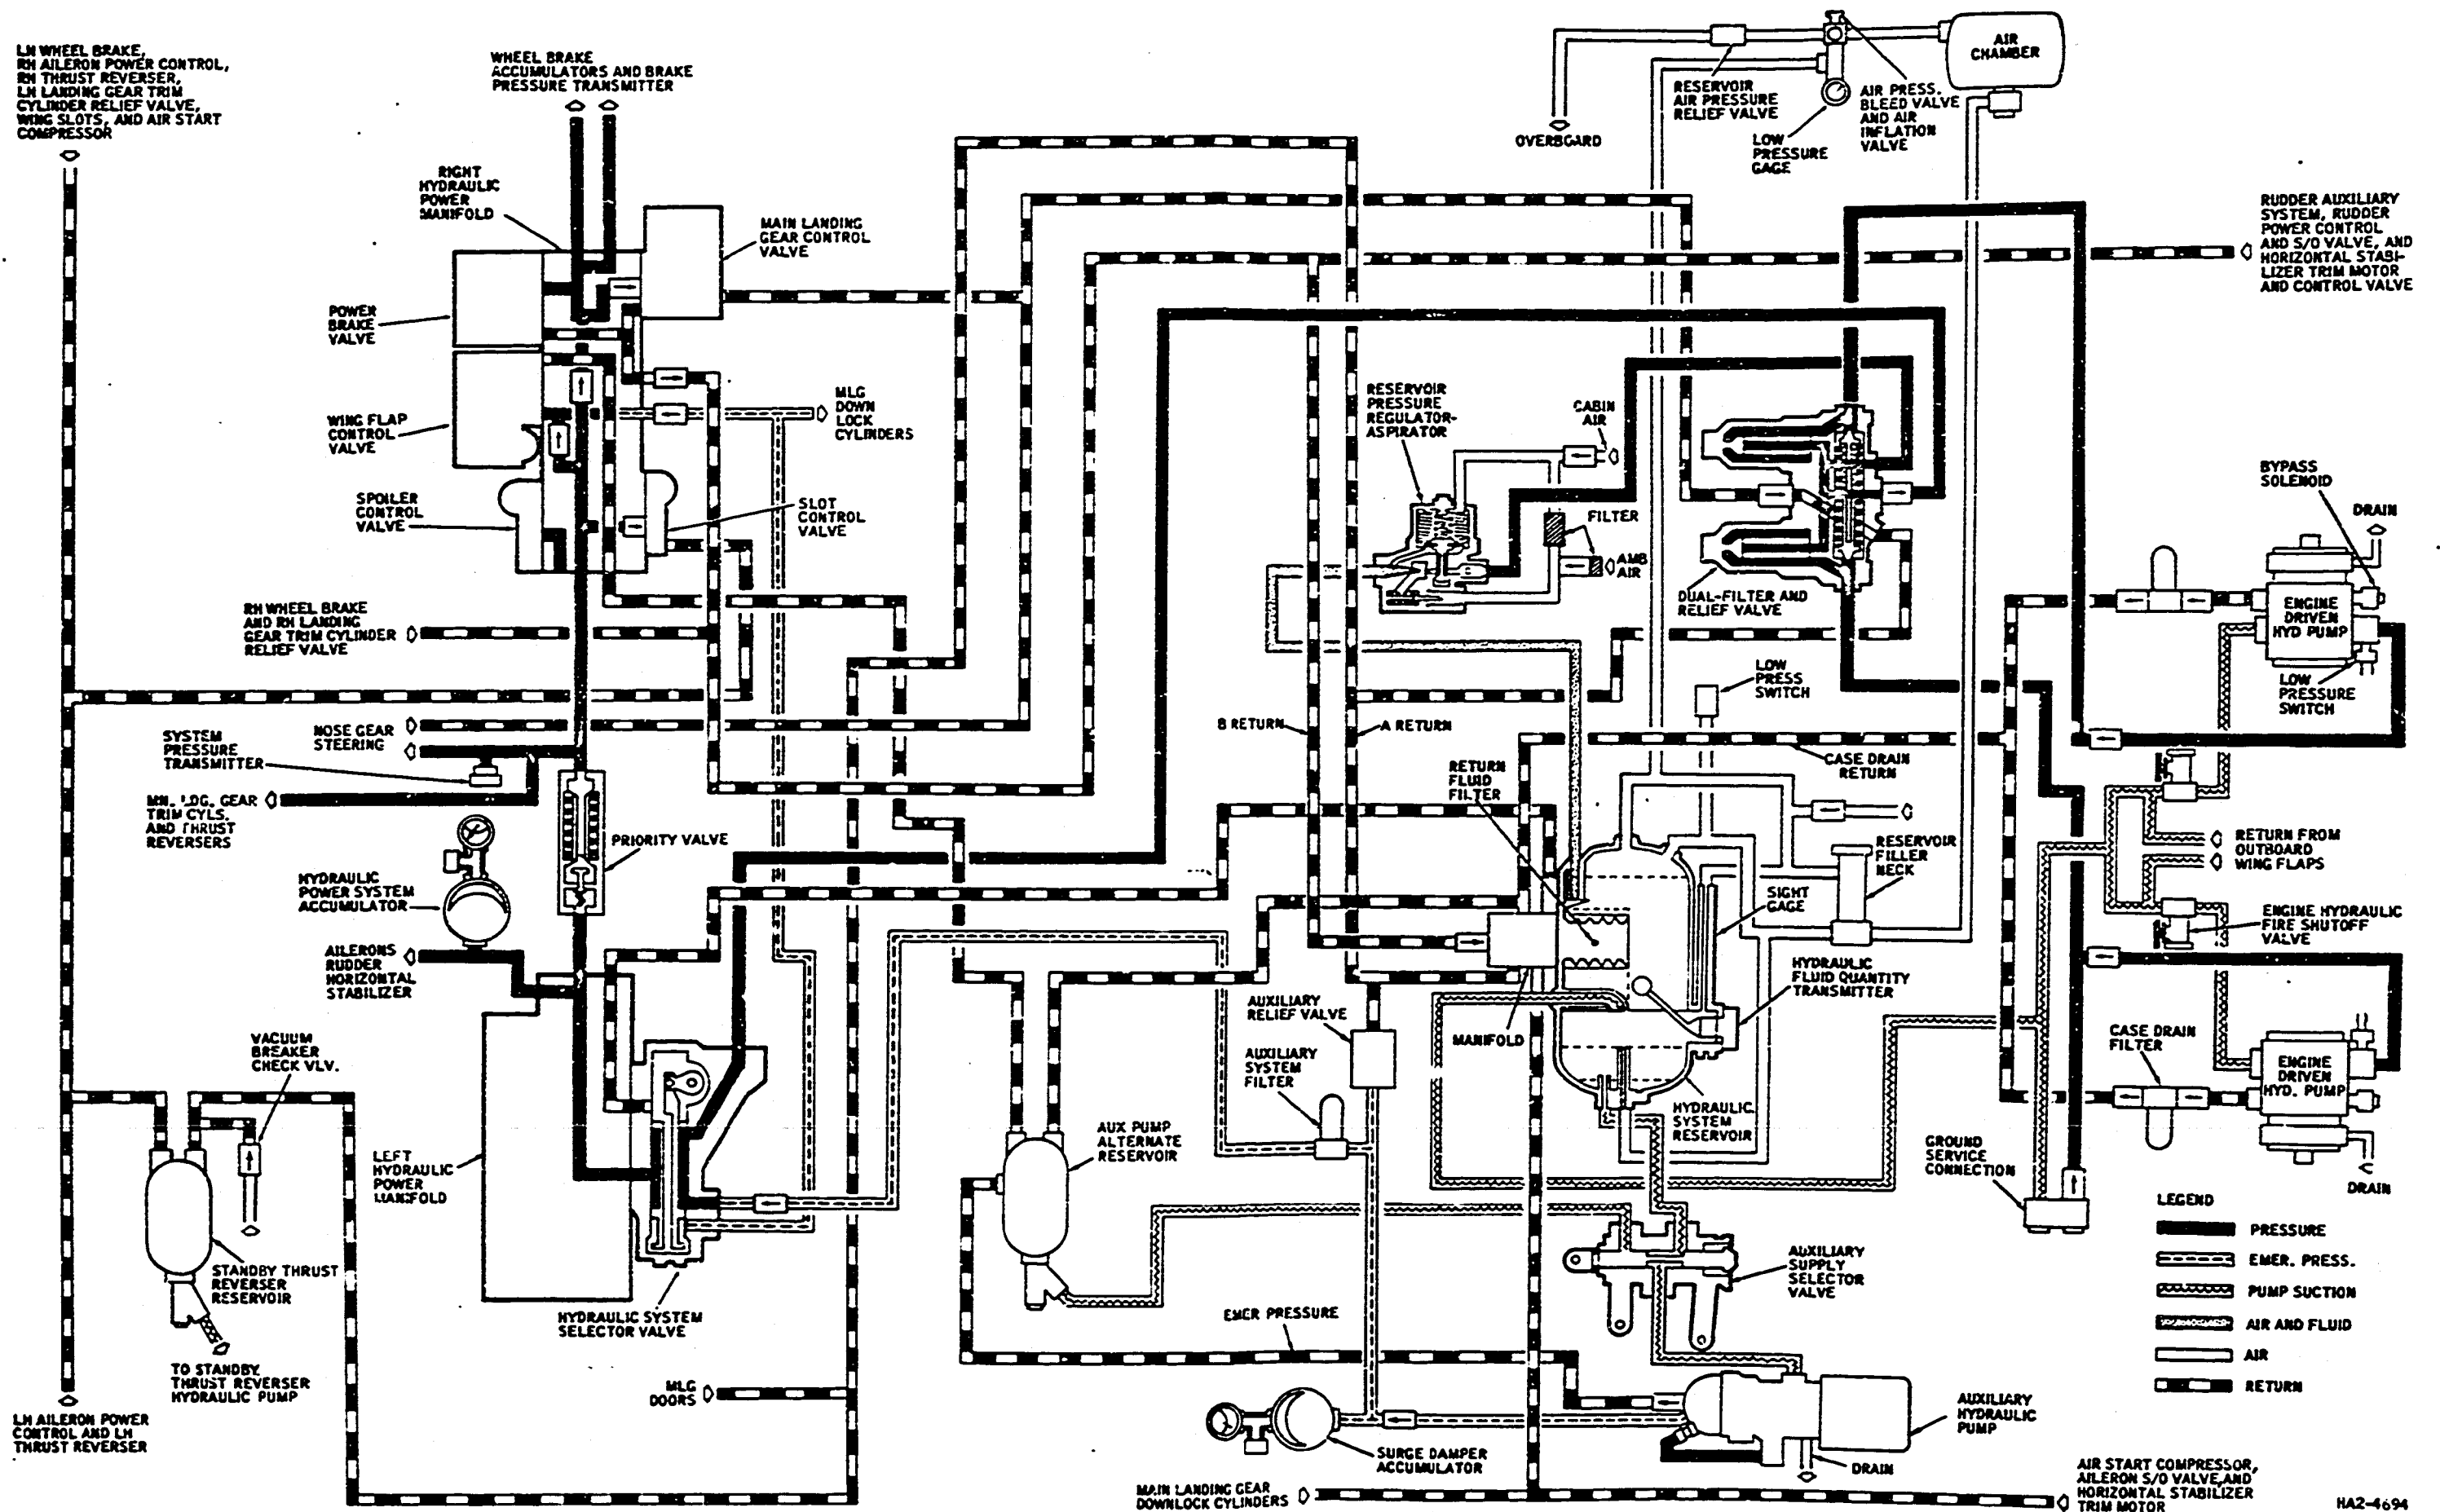

Hydraulic Power System -- Schematic Diagram  
 Figure 1

29-10-0  
 CODE 23  
 Page 3

Jan 15/68


Printed in U.S.A.

AIR START COMPRESSOR,  
 AILERON S/O VALVE, AND  
 HORIZONTAL STABILIZER  
 TRIM MOTOR

HA2-4694



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

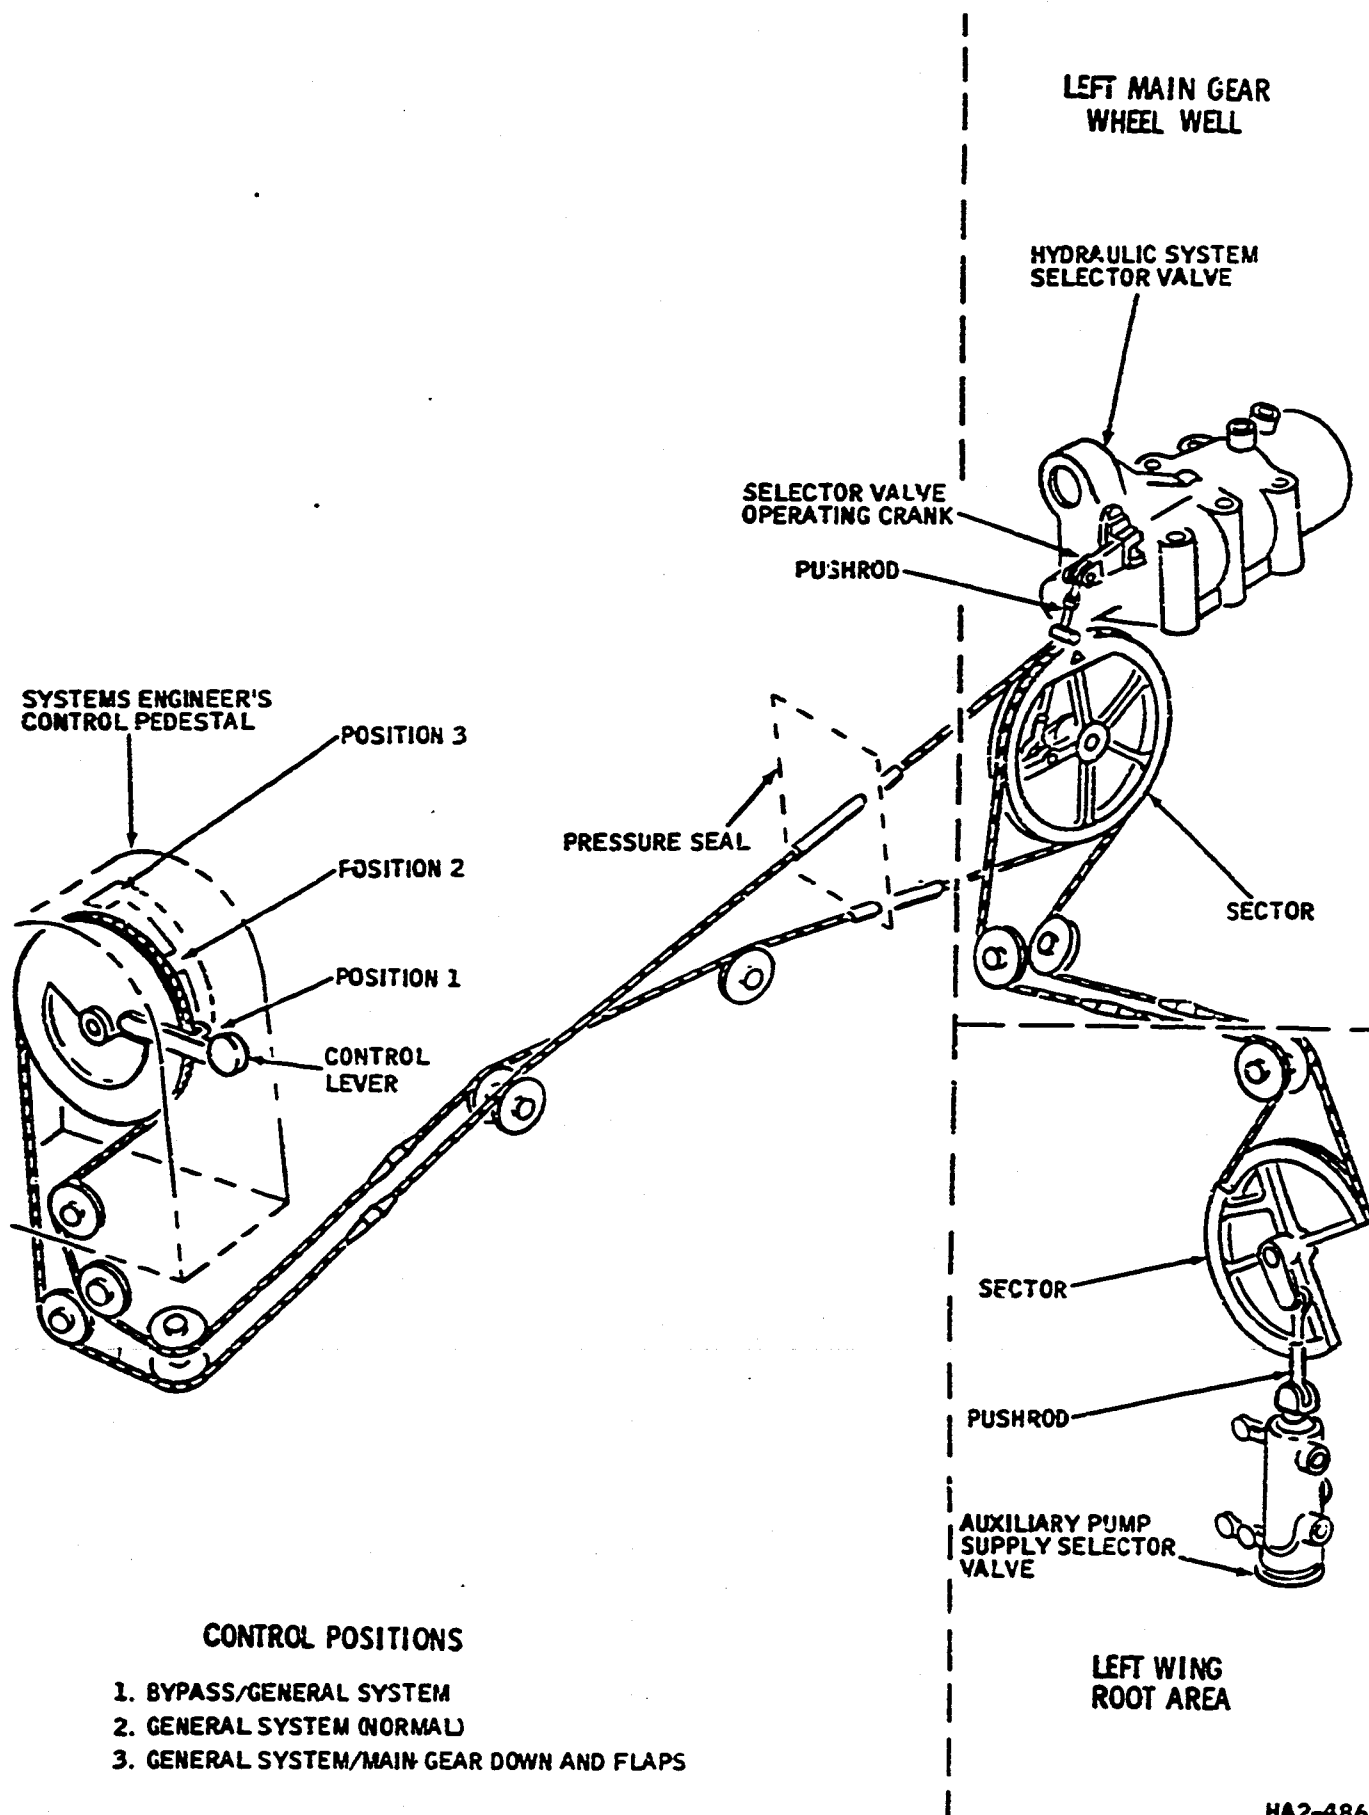

Hydraulic System Selector and Auxiliary Pump Supply  
 Selector Valves -- Mechanical Control Schematic  
 Figure 2

Jan 15/68

Printed in U.S.A.

HA2-486

29-10-0  
 CODE 23  
 Page 5

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

the outlet port is routed through a check valve to the system selector valve. If back pressure in the system builds up to approximately 3300 psi, the relief valves in the dual filter and relief valve open and port fluid back to the reservoir via a return port. The relief valve poppet closes again when system pressure drops to approximately 3000 psi.

- (4) The aspirator receives filtered fluid (bleed pressure at nominal 3000 psi) from the dual filter and relief valve. The aspirator operates on the jet pump principle. Hydraulic fluid is atomized and mixed with air within the unit by a nozzle and a venturi. The mixture is used to pressurize the reservoir and reservoir air chamber. The regulator diaphragm maintains a pressure range of 30 to 35 psi in the reservoir and air chamber. If there is a regulator malfunction, the aspirator stalls when the outlet pressure reaches a maximum of 40 psi. A reservoir relief valve in the reservoir vent line relieves thermal expansion pressure above 45 (+5, -0) psi.
- (5) Pump pressure fluid enters the system selector valve through the system pressure inlet port. When the pump selector control lever is in the general system (normal) position, fluid is ported to the pressure passages of the left power manifold. The fluid pressure in the left power manifold is ported through the priority valve to the nose gear and the right power manifold and directly to the following valves:
  - (a) Aileron power shutoff
  - (b) Rudder power shutoff
  - (c) Longitudinal trim hydraulic motor shutoff.
- (6) The right power manifold distributes fluid pressure to the brake accumulators, the pressure transducer, and the following control valves:
  - (a) Wing flap
  - (b) Slot
  - (c) Main gear
  - (d) Power brake
- (7) The return fluid from the wing flap control valve is ported through the right power manifold and into the auxiliary hydraulic pump alternate reservoir. Return fluid from the outboard wing flaps is piped into the suction lines for each engine-driven hydraulic pump. Return fluid from the slot control valve is ported into the A return line to the main reservoir. The power brake and main gear control valve gear up return fluid is ported through a restrictor check valve into the B return line to the reservoir. The main gear control valve gear down return pressure bypasses the right manifold and returns to the reservoir through the A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

return line. All return fluid entering the reservoir is filtered through the return ports filter located within the reservoir.

C. Bypass Operation

- (1) The output of the engine-driven hydraulic pumps is bypassed by moving the systems selector control lever out of the general system (normal) position to the bypass/general system position.
- (2) The system selector valve in the bypass position ports engine-driven pump pressure from the dual filter and relief valve directly to the return passage of the left power manifold. From the manifold the fluid is ported directly to a tee in the wing flap return port of the hydraulic system reservoir. In the bypass condition, the auxiliary hydraulic pump receives fluid from the hydraulic system reservoir, pressurizes it to system pressure and ports it to the left and right power manifolds for distribution to the subsystems.

D. Alternate Operation

- (1) When both engine-driven hydraulic pumps and the auxiliary hydraulic pump are rendered inoperative due to the loss of the normal supply of fluid, the hydraulic power system can be rigged for alternate operation. This is accomplished by placing the system selector control lever in the general system/main gear downlock and flaps position. When the system selector control lever is in this position, the auxiliary hydraulic pump supply selector valve is positioned to supply fluid from the auxiliary pump alternate reservoir to the auxiliary pump.
- (2) Fluid is supplied to the auxiliary pump from the outlet port of the auxiliary pump supply selector valve. Output pressure is ported through the auxiliary system filter and check valve to the auxiliary pressure inlet port of the system selector valve.
- (3) In the general system/main gear downlock and flaps position, auxiliary pump pressure bypasses the manifold pressure passages and is ported from the alternate outlet port of the system selector valve. Fluid from this port flows directly to a port on the right power manifold, through an internal check valve in the manifold, to the wing flap control valve.

E. Mechanical Control

- (1) The hydraulic power mechanical control system consists of the hydraulic system selector control lever cable drum, the system selector valve sector, the system selector valve, the auxiliary hydraulic pump supply selector valve sector, and the auxiliary hydraulic pump supply selector valve.
- (2) The control lever located on the system engineer's control pedestal is used to position the system selector valve and, in turn, the auxiliary hydraulic pump supply selector valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (3) The control lever is spring loaded into general system (normal) position, and is connected to the control lever cable drum. Two cables run from the drum, under the cabin floor, aft through the pressure bulkhead at the rear wing spar, and into the left wheel well to the system selector valve sector. A pushrod connects the sector to the positioning lever of the system selector valve.
- (4) A second set of cables is routed from the system selector valve sector into the left wing root to the auxiliary hydraulic pump supply selector valve sector. When the system selector valve is in either bypass or normal, the auxiliary hydraulic pump supply selector valve sector is arranged so that the pushrod idles between the two positions. This allows the valve to remain in the auxiliary position. When the sector is moved to the alternate position, the pushrod is pulled by the sector to reposition the valve to the alternate position.
- (5) The control lever is normally in the general system (normal) position. To move the system selector valve to the bypass position, the control lever is moved to the bypass/general system position. When the system selector valve is moved to the bypass position, the auxiliary hydraulic pump supply selector valve sector is moved to a new position. Due to the idle feature on the auxiliary sector, the valve remains in the auxiliary position. With the valve in this position, fluid is supplied to the auxiliary pump through the low standpipe in the hydraulic system reservoir. In this condition, engine-driven pump pressure is ported to the reservoir and the auxiliary pump pressure is ported to the general system.
- (6) To put the system in alternate operation, the control is moved to the general system/main gear downlock and flaps position. This moves the system selector valve to the alternate position, and simultaneously moves the auxiliary hydraulic pump supply selector valve to the alternate position. Fluid is supplied to the auxiliary pump from the auxiliary hydraulic pump alternate reservoir. Fluid pressure from the auxiliary pump is ported to the flap system control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported from the system selector valve to the general system.

## 2. System Components

### A. Hydraulic System Reservoir (See Figures 3 and 4.)

- (1) The hydraulic system reservoir is installed on the aft side of the wing spar in the left wing root and is accessible through the left wing root access door. The hydraulic system reservoir serves as the main source of hydraulic fluid for the engine-driven hydraulic pumps and the normal supply for the auxiliary hydraulic pump. The reservoir is cylindrical in shape and contains a filter, baffle, and a screen cover encasing the filter. The filter prevents foreign particles from contaminating the fluid supply. Mountings are provided on the exterior surface of the

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

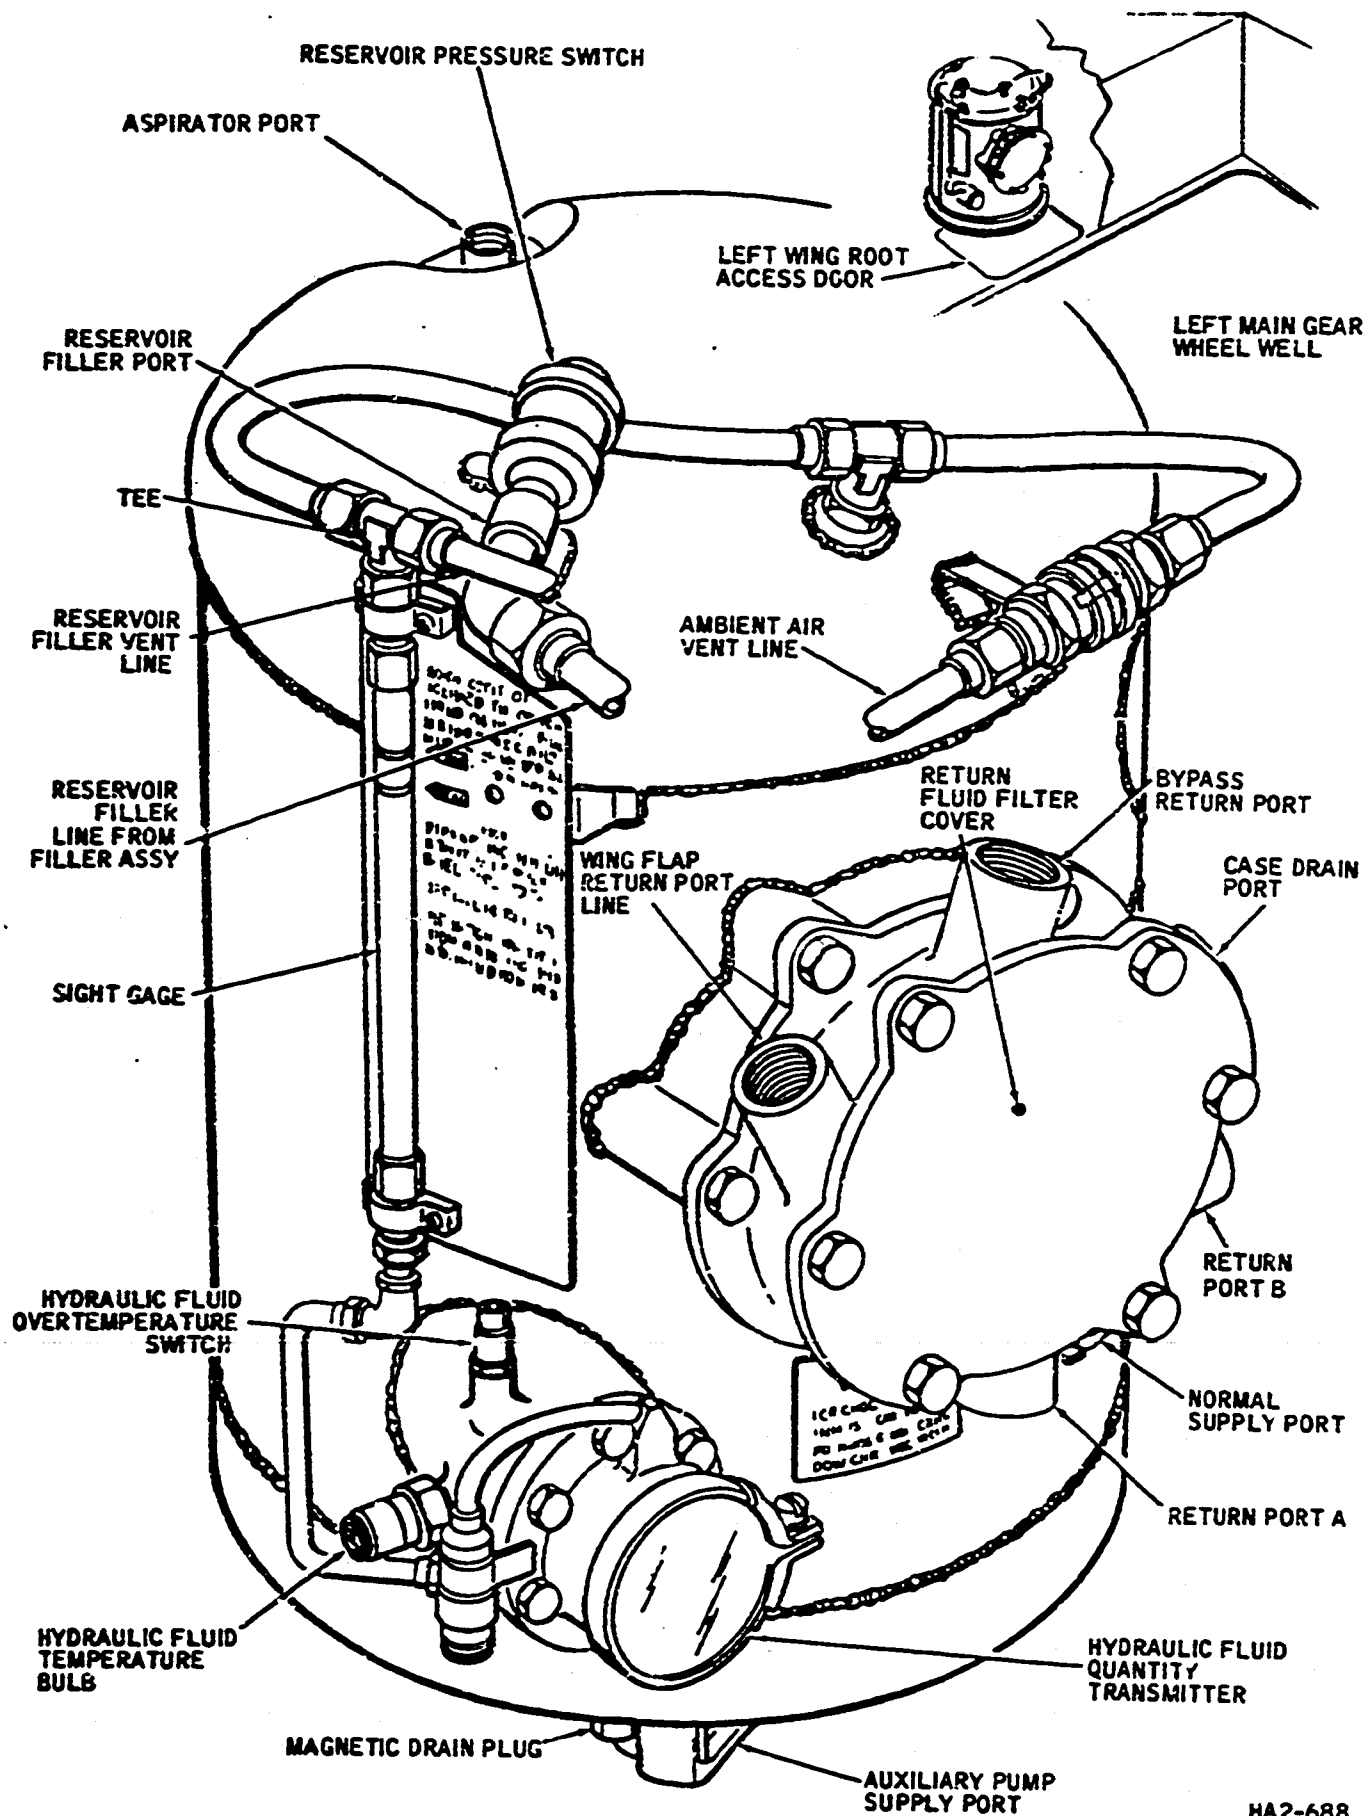


HA2-688

Hydraulic System Reservoir -- External View  
 Figure 3

Jan 15/68

29-10-0  
 CODE 23  
 Page 9

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

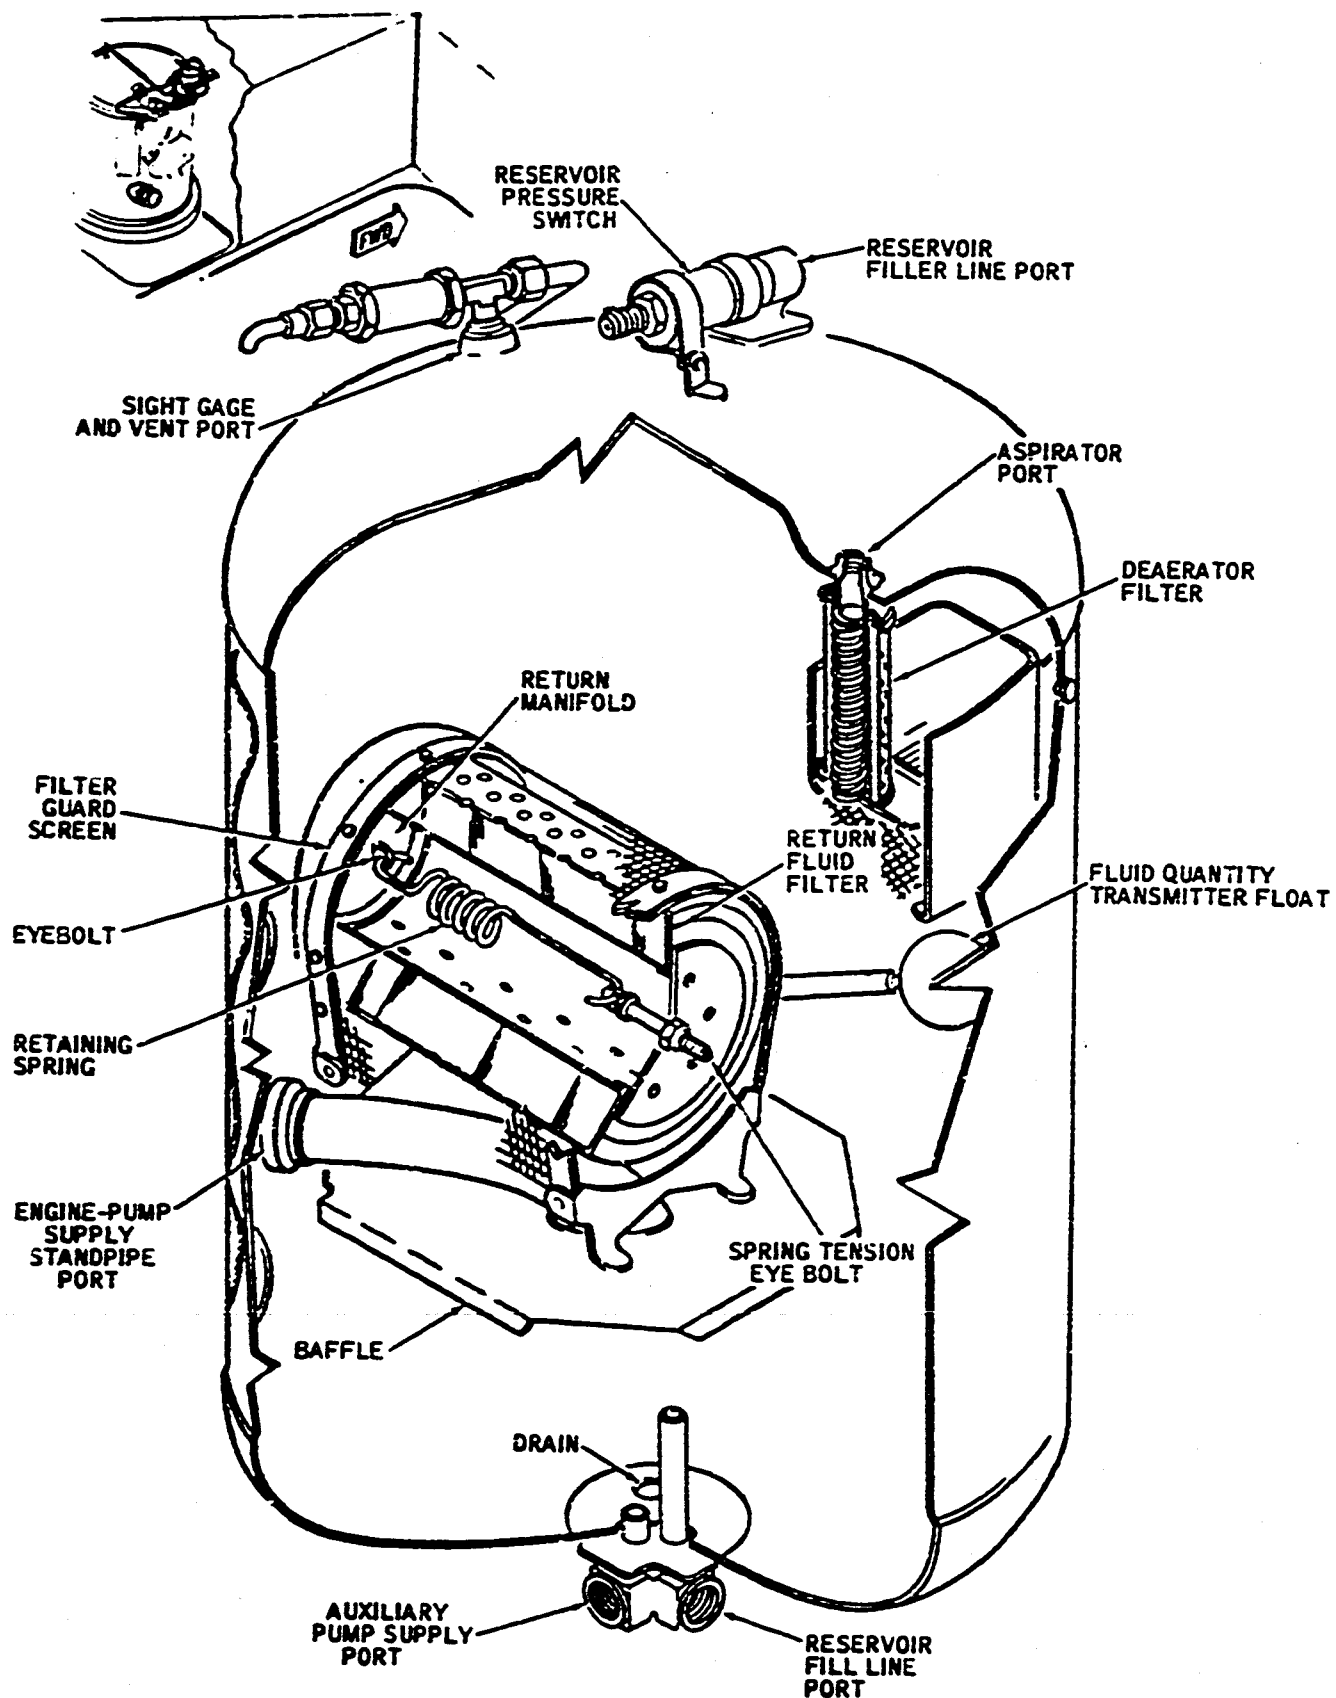

HA2-689

29-10-0  
 CODE 23  
 Page 10

Hydraulic System Reservoir -- Cutaway View  
 Figure 4

Printed in U.S.A.

Jan 15/68

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

reservoir for return line ports, aspirator port, electrical sensing units, sight gage, instruction placards, magnetic drain plug, and system supply ports.

- (2) The reservoir is pressurized with air from the regulator-aspirator to a range of 30 to 35 psi and has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir volume is used for fluid and 1/10 is used for foam space.
- (3) The aspirator port through which the reservoir is pressurized is located in the recess on top of the reservoir. An aspirator-deaerator filter is supported in the reservoir by a screen and support box assembly which is mounted to the reservoir wall by two bolts.
- (4) The mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The return ports manifold is an open-centered ring, flanged at both sides and provided with five fluid ports around its circumference; return port A is located at the bottom, return port B is located at the lower right side, the wing flap return port is located at the upper left side, and the system selector valve bypass port is located at the top. One flange of the manifold is mounted with six bolts to the mounting flange on the reservoir. The return fluid filter cover fits into the open side of the manifold, and is attached to the outer manifold flange with six bolts to form a fluid-tight cover for both the manifold and the filter.
- (5) The return fluid filter is installed in the reservoir, behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the return fluid filter cover holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to the engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
- (6) A flanged adapter for the fluid quantity transmitter is welded to the reservoir below and to the left of the return ports manifold. The adapter is provided with two small port bosses for the hydraulic fluid temperature bulb and the hydraulic fluid overtemperature switch. The lower end of the sight gage connects to a third port in the adapter, while the top of the sight gage tees into a port at the top of the reservoir. An instruction plate is mounted behind the sight gage and the vacuum breaker check valve tees into the port at the top of the reservoir that is used by the sight gage.

**B. Hydraulic Reservoir Return Fluid Filter (See Figure 4.)**

- (1) The reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply. The filter is located behind the return ports manifold, and is spring loaded to act as its own relief valve. Access to the filter is by removing the return fluid filter cover from the return ports manifold

Jan 15/68

Printed in U.S.A.

29-10-0  
CODE 23  
Page 11

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

by removal of six bolts. The filter is attached by the retaining spring to the cover and is withdrawn from the reservoir when the cover is removed.

- (2) Externally, the filter consists of two perforated concentric tubes. The area between the tubes is closed by metal end caps which are bonded to the two tubes. A resilient rubber gasket is bonded to each of the caps. Each gasket must be smooth and flat for proper sealing of the filter. The gaskets act as a static seal and a relief valve seat.
- (3) Internally, the filter has a 10-micron, resin-impregnated convoluted paper-type filter element. The area of the filter element is approximately 1960 square inches. The filter is held in place by a retaining spring. One end of the spring is attached to an eyebolt located inside the return port's manifold cover. The spring passes through the center chamber of the filter and is connected to another eyebolt. This eyebolt is secured to a large washer and plate by means of a self-locking nut. The washer seats on the rubber gasket which is bonded to the filter. The fluid enters the center chamber of the filter and passes through the inner tube of the filter to the filter element by means of perforation holes. Foreign matter is filtered out by the filter element, and the fluid leaves the element through perforation holes in the outer tube. When the element becomes saturated with foreign matter, the filter acts as its own relief valve and unseats at 20 to 25 psi above normal return pressure which allows fluid to bypass the filter and enter the reservoir.


C. Hydraulic Reservoir Air Pressure Regulator-Aspirator (See Figure 5.)

- (1) The reservoir air pressure regulator-aspirator is a jet-type air pump, regulated by a pressure-sensitive shutoff valve. The unit pressurizes the hydraulic reservoir with air to the operating pressure range of 30 to 35 psi. The regulator-aspirator is located on the top inboard side of the reservoir and is mounted on the reservoir retainer ring. Access to regulator-aspirator is through the left wing root access door.
- (2) The regulator-aspirator assembly consists of a main aspirator body and a regulator housing. The main aspirator body has two inlet ports and one outlet port. The ports are permanently identified inlet, outlet, and air inlet. The plug for an air check valve is located near the outlet port. A chemically treated paper filter is installed near the aspirator body air inlet port in the air line from the pressurized cabin area. A metal screen filter is installed on the check valve which tees into the aspirator body air inlet port.

The reservoir air pressure regulator-aspirator operates basically with a jet pump action which is regulator controlled. Fluid enters the assembly through the fluid inlet port where it is filtered and then ported through the valve assembly of the regulator. During normal operation, when air pressure at the outlet port is under 30 psi, the valve is open, porting fluid to the nozzle. The orifice in the nozzle sprays the fluid through the venturi of the outlet port, creating a vacuum in the chamber around



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

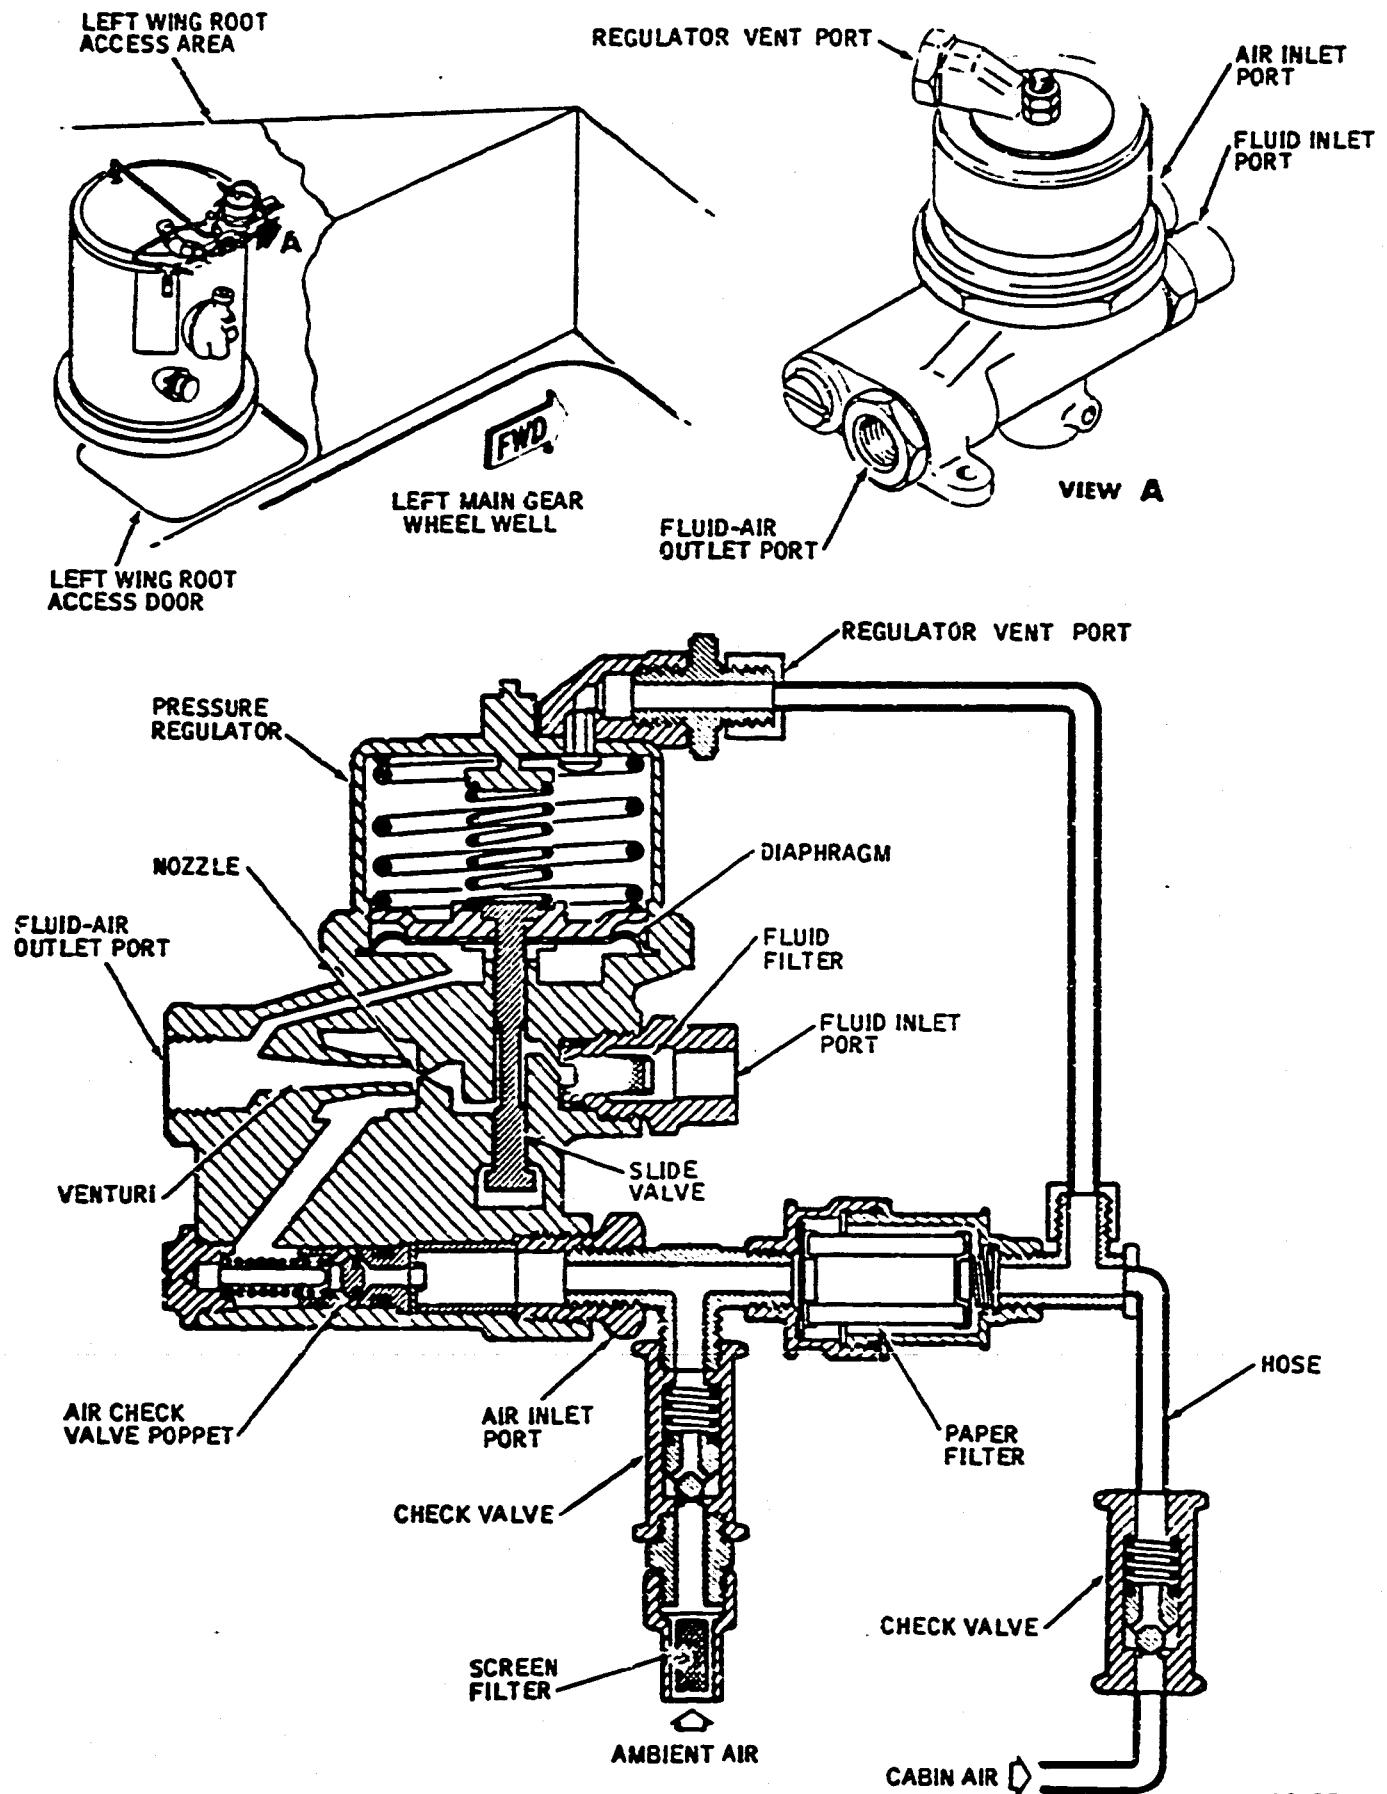

HA2-25

Reservoir Air Pressure Regulator-Aspirator -- Schematic  
 Figure 5

Jan 15/68

29-10-0  
 CODE 23  
 Page 13

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

the venturi. When the vacuum becomes great enough to create a pressure differential of approximately 1 psi, ambient air opens the air check valve. The air is ported to the chamber around the venturi and is siphoned, with the fluid, through the outlet port.

- (4) Hydraulic fluid inlet pressure at the engine-driven hydraulic pumps is improved at high altitude operation by supplying pressurized filtered cabin air to the reservoir regulator-aspirator instead of ambient outside air. Part of the inlet air is diverted by a tee fitting to the regulator chamber to provide a more positive regulating force on the diaphragm than would be obtained with low ambient pressures. The chemically treated paper filter, installed in the regulator-aspirator air supply line from the cabin, removes smoke tars and impurities from the pressurized cabin air. The steel mesh screen filter, installed on the check valve which tees into the regulator-aspirator air inlet port downstream of the paper filter, removes dust, dirt, and foreign particles from the ambient air and serves as a standby to supply filtered air in event the paper filter is clogged.
- (5) As pressure in the reservoir builds up, back pressure is bled from the outlet port to the diaphragm chamber. The reaction on the diaphragm begins to move the slide valve to cut off the fluid flow. At 30 to 35 psi of back pressure, the diaphragm completely closes the slide valve, cutting off the flow of fluid. If there is a regulator malfunction, the aspirator stalls when outlet pressure reaches a maximum of 40 psi.
- (6) The aspirator is capable of pressurizing the reservoir to 30 to 35 psi in approximately 4 minutes at altitudes from sea level to 15,000 feet, when fluid is ported through the nozzle at 0.5 gpm at 3000 psi.


D. Regulator-Aspirator Air Filters (See Figure 6.)

- (1) The regulator-aspirator air filters remove ambient and cabin air impurities from the air which is used to pressurize the main hydraulic system reservoir. The filtering system is composed of two filters, one of which is a paper element filter, installed directly in the cabin air supply line near the regulator-aspirator. The other filter is a fine mesh, screen-type filter, installed on a check valve and positioned at right angles to the regulator-aspirator air inlet port. The screen filter, in addition to providing an immediate supply of ambient air during ground operations, serves as a standby air inlet to preclude air starvation of the regulator-aspirator in the event the paper element filter becomes clogged.


E. Hydraulic Reservoir Relief Valve (See Figure 7.)

- (1) The reservoir relief valve and the air pressure aspirator-regulator keep the reservoir pressurized to normal operating range. The valve relieves excess air pressure which may build up in the reservoir through thermal expansion in the system. The valve has an inlet port and an outlet port and consists, internally, of an inlet port seat and a spring-loaded poppet.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

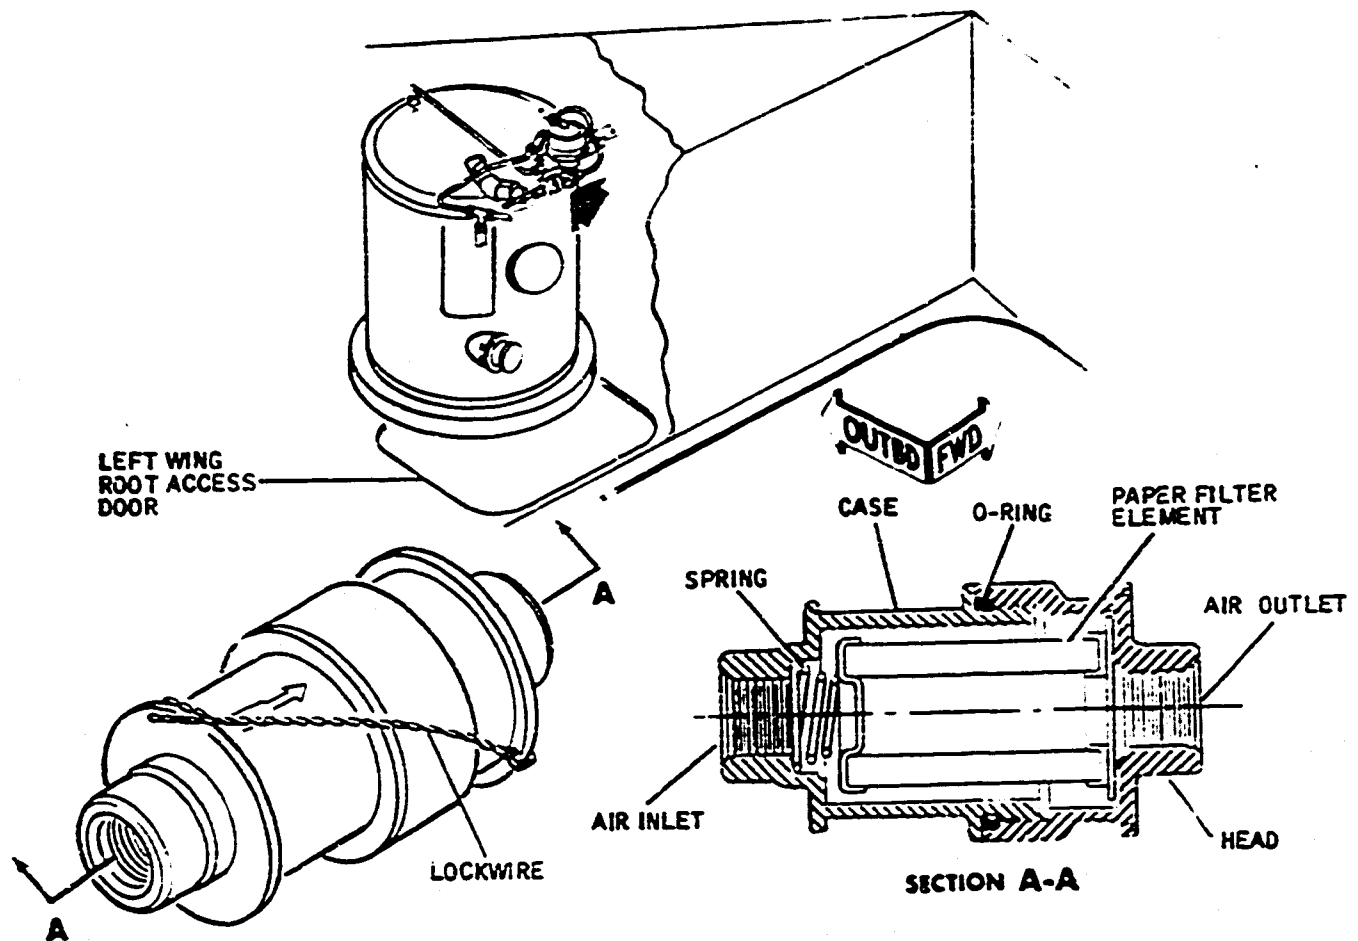

PAPER ELEMENT FILTER

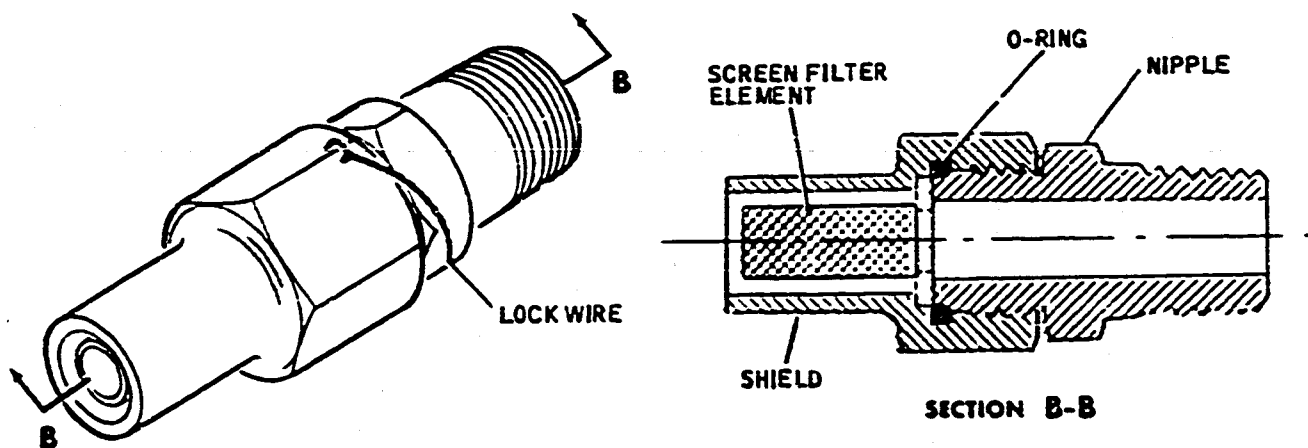

SCREEN FILTER

Regulator-Aspirator Air Filters -- Cutaway View  
 Figure 6


Jan 15/68

Printed in U.S.A.

HA2-35

29-10-0  
 CODE 23  
 Page 15

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

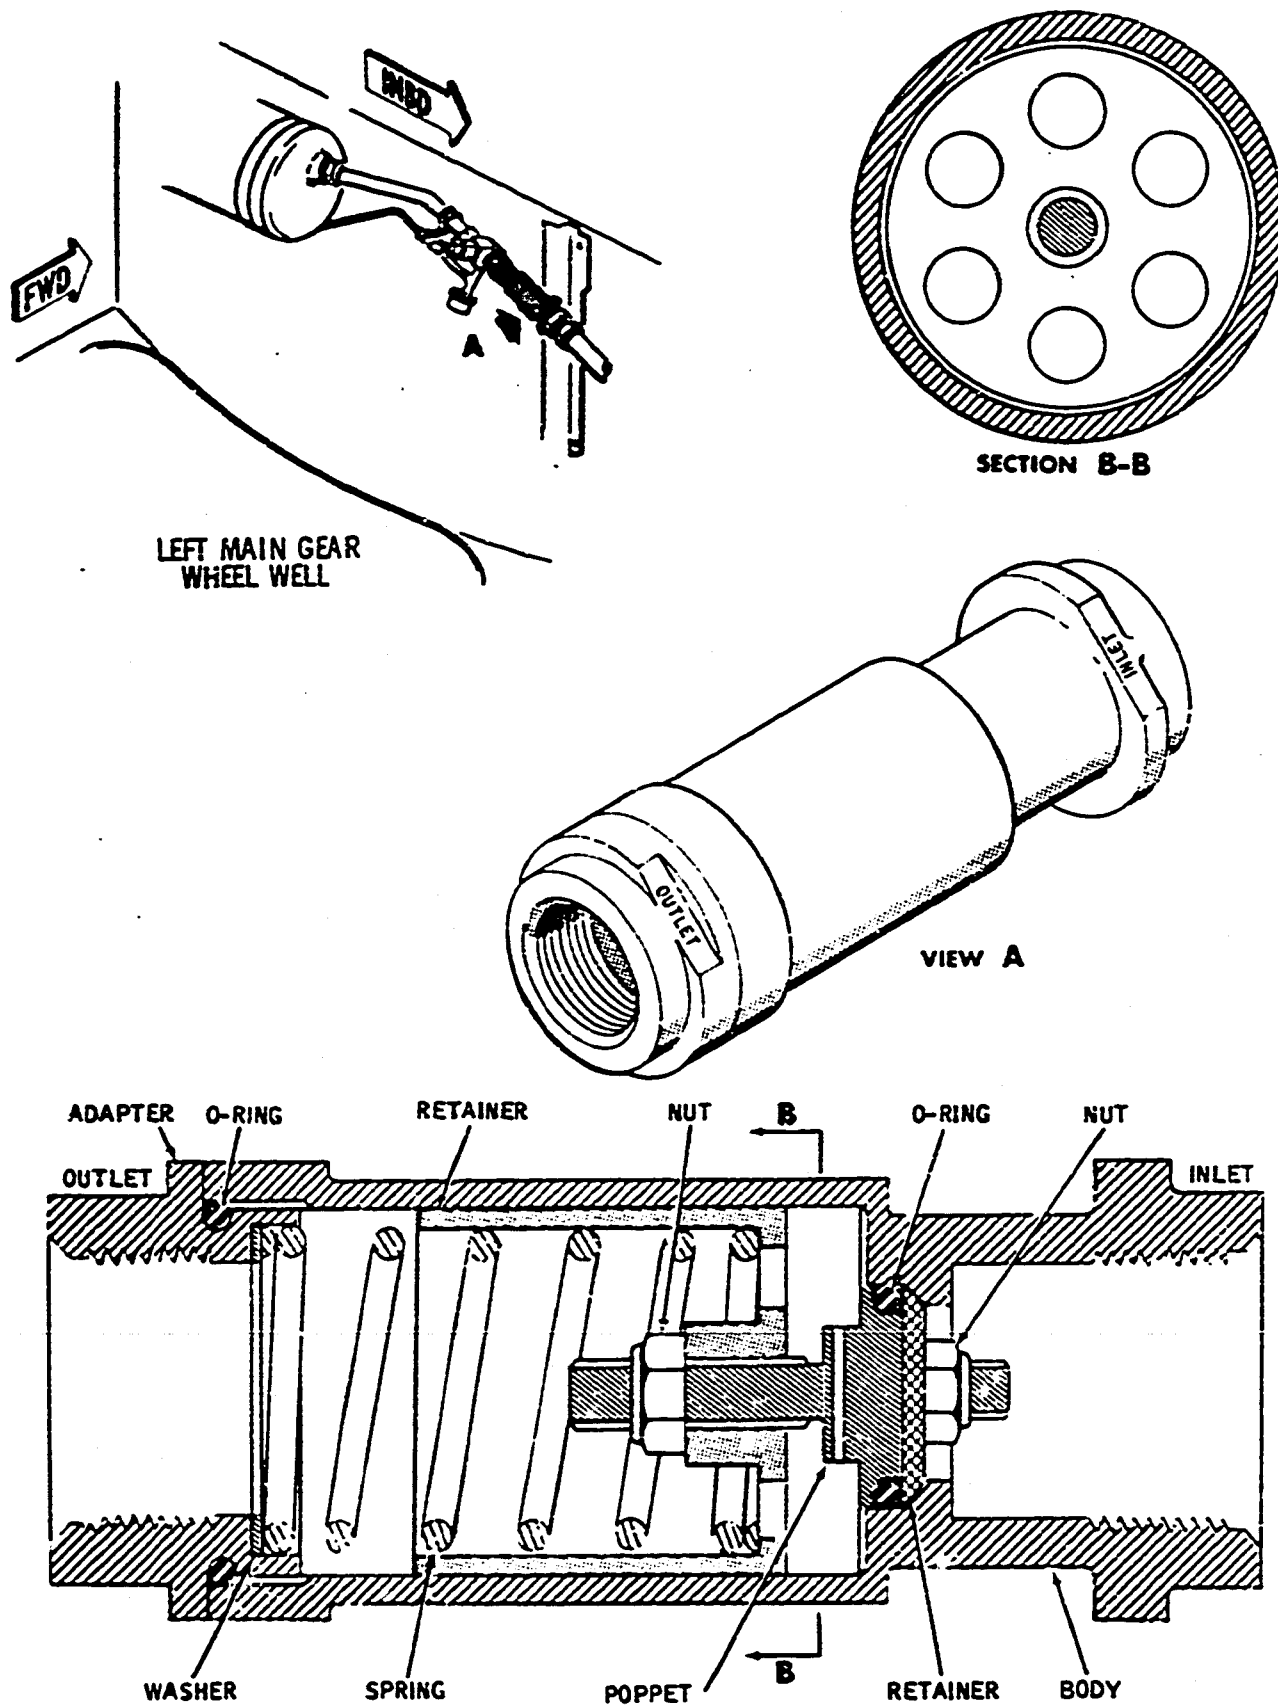

HA2-17

29-10-0  
 CODE 23  
 Page 16

Hydraulic Reservoir Relief Valve  
 Figure 7

Printed in U.S.A.

Jan 15/68

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The relief valve is installed in the overboard vent line downstream of the hydraulic reservoir air bleed valve. In the event that excess pressure builds up in the reservoir, the poppet will start to relieve at 45 (+5, -0) psi. Full flow of 10 gpm is attained at 80 psi maximum. The poppet reseats at 90 percent of the opening pressure.

**F. Hydraulic Reservoir Air Bleed Valve (See Figure 8.)**

- (1) The hydraulic reservoir air bleed valve and pressure gage are located on the aft side of the rear spar in the left main gear wheel well, inboard of the hydraulic reservoir air chamber. The bleed valve and gage are installed in the overboard vent line, between the reservoir air chambers and the reservoir relief valve.
- (2) The bleed valve is used to relieve the reservoir air pressure prior to disconnecting lines or components in the hydraulic system. The pressure gage provides a ready indication of the hydraulic reservoir air pressure and is used in conjunction with the bleed valve to indicate the air pressure status.
- (3) The air inflation valve is installed on the same fitting as the bleed valve and pressure gage. The air inflation valve is used to manually charge the reservoir with air or dry nitrogen.


**G. Hydraulic Reservoir Vacuum Breaker Check Valve (See Figure 9.)**

- (1) The hydraulic reservoir vacuum breaker check valve is installed on the regulator-aspirator mounting bracket, and connects to the tee fitting at the top of the reservoir. The valve is vented to ambient air. The purpose of this valve is to maintain atmospheric pressure in the reservoir, allowing hydraulic fluid to flow to the auxiliary hydraulic pump in the event of a failure of the reservoir pressurization system. The failure, or breakdown, of the pressurization system could cause a fluid starvation at the auxiliary hydraulic pump because of vacuum buildup in the reservoir.

**H. Hydraulic Reservoir Air Chamber**

- (1) The hydraulic reservoir air chamber is a small, cylindrical tank with a capacity of 700 cubic inches. It has two ports, an inlet port at the bottom of the chamber and an outlet port in one end of the chamber. The inlet port mounting boss is fitted with a drain plug. The air chamber is installed on the aft side of the rear spar in the left main gear wheel well, inboard and above the hydraulic reservoir filler assembly. Access to the air chamber is through the left main gear inboard door.
- (2) The air chamber provides for greater fluid capacity in the hydraulic reservoir by providing air and foam space for the reservoir in a separate container. Air pressure in the chamber is maintained by the regulator-aspirator and the air relief valve. The air pressure in the chamber and reservoir can be relieved, when desired, by the air bleed valve located downstream of the chamber. The air chamber is mounted


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

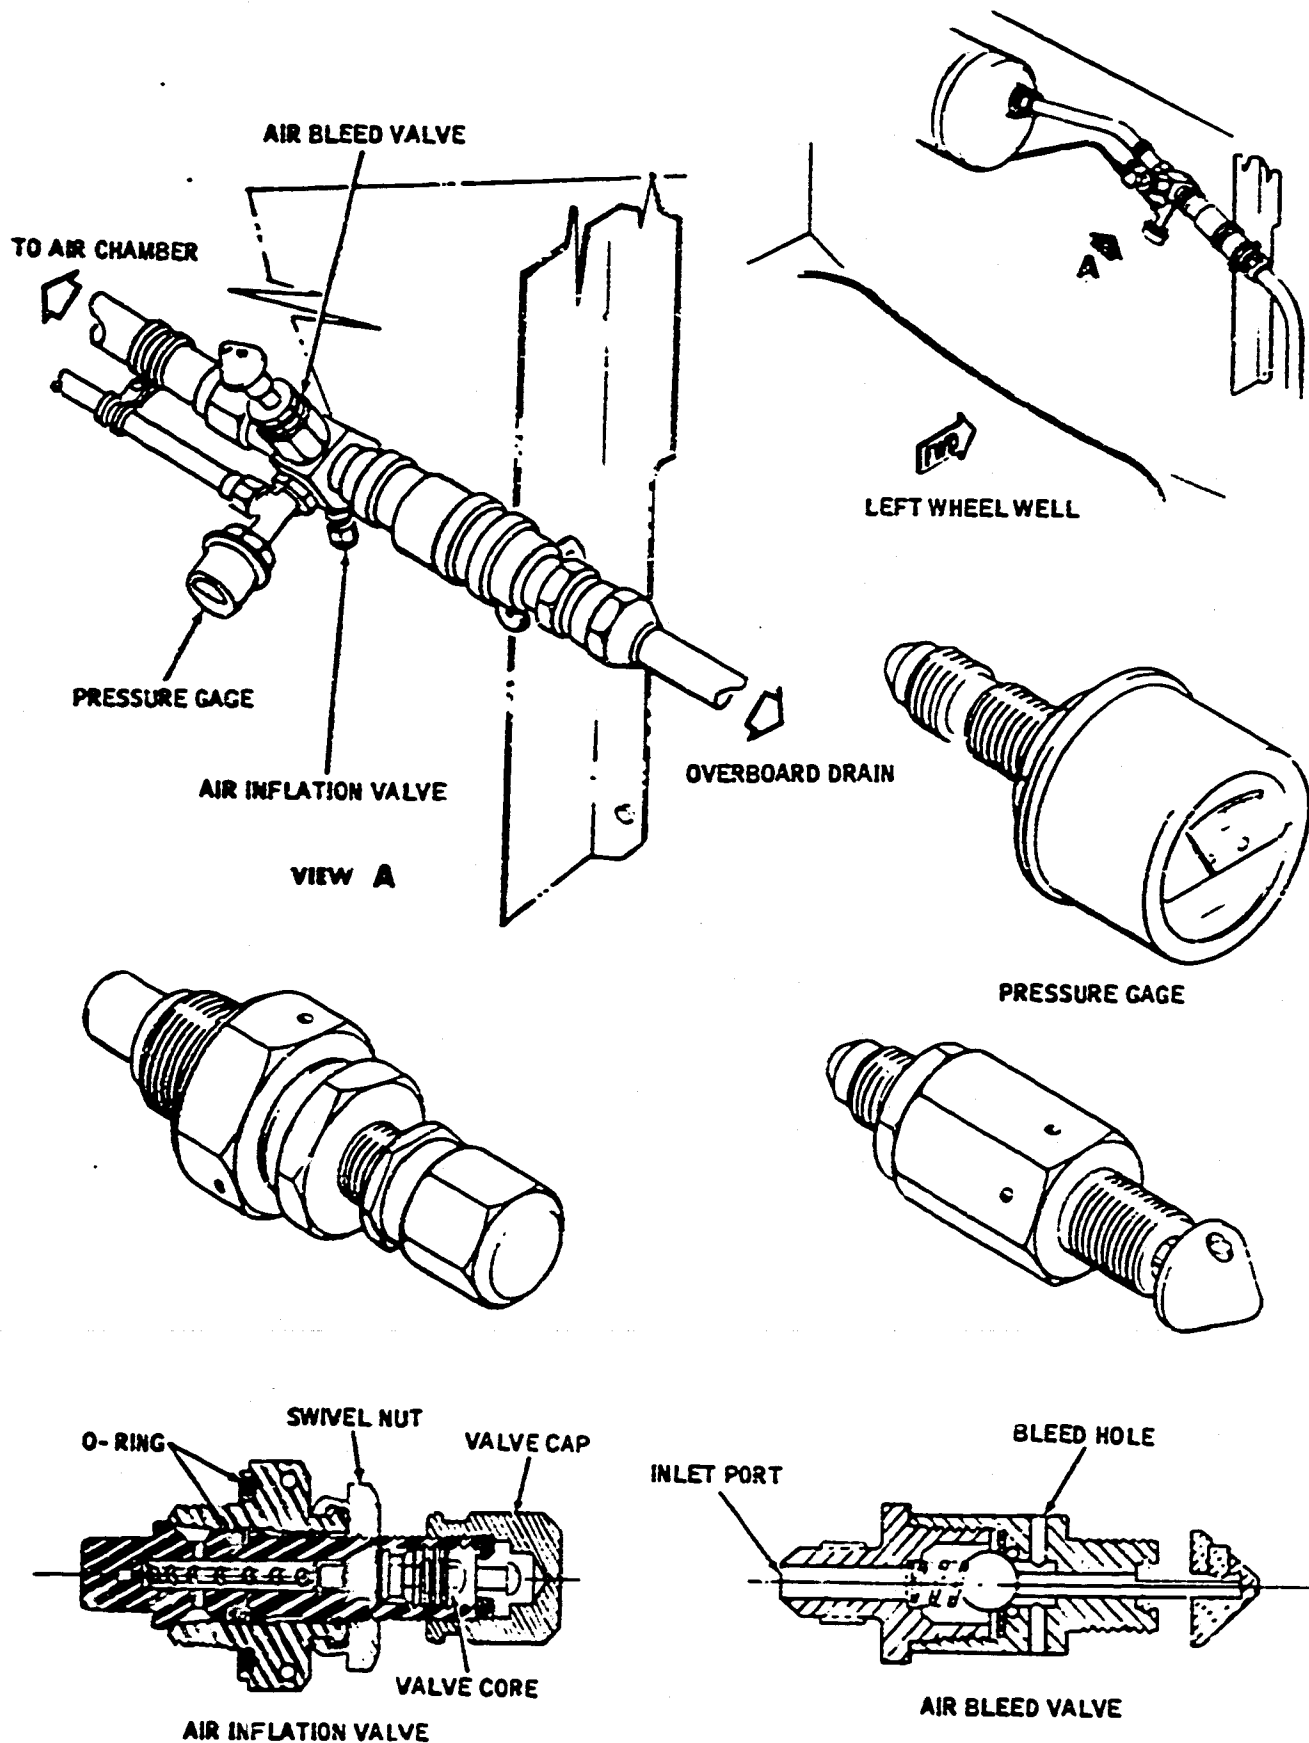

HA2-32

Reservoir Air Bleed Valve, Air Inflation  
 Valve, and Pressure Gage  
 Figure 8

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

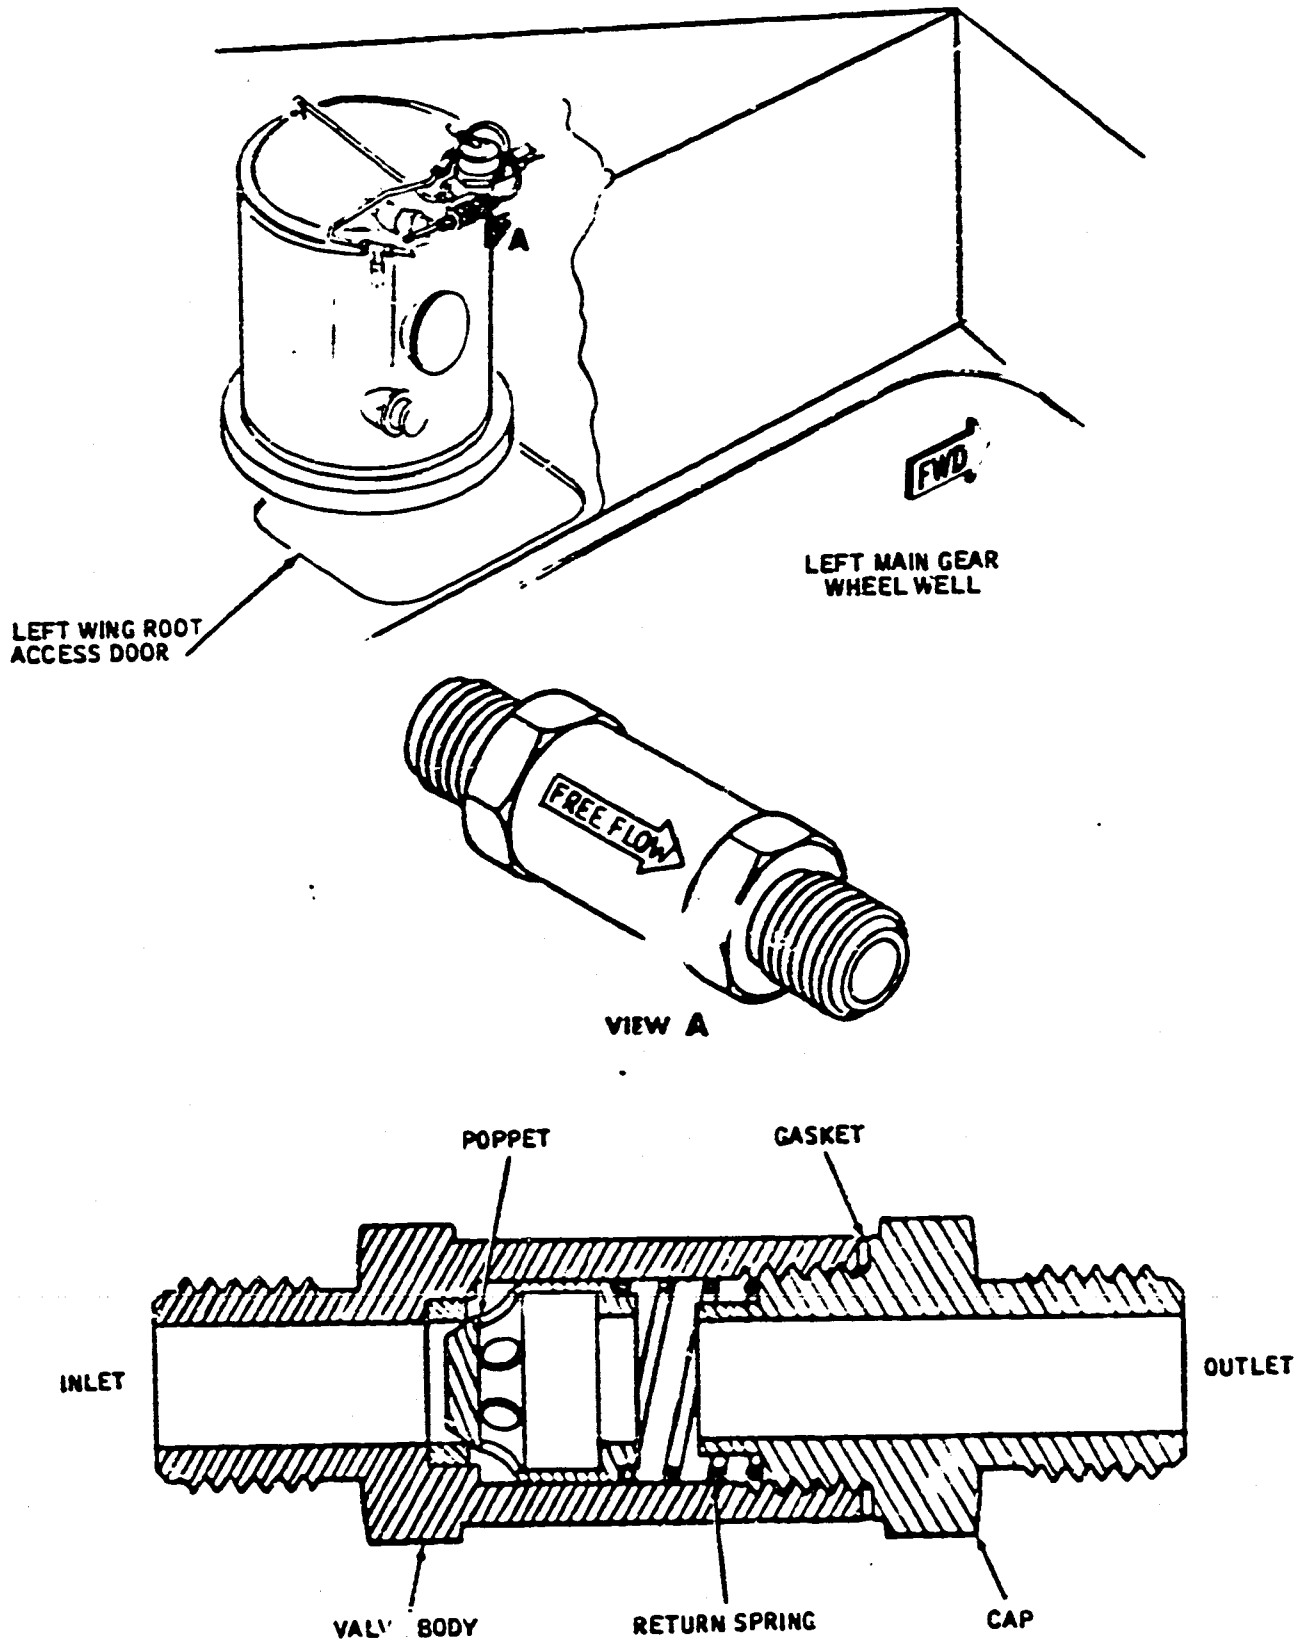

Hydraulic Reservoir Vacuum Breaker Check Valve  
Figure 9

Jan 15/68

Printed in U.S.A.

HA2-33

29-10-0  
CODE 23  
Page 19

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

higher than the reservoir filler assembly, to prevent overfilling of the reservoir from reducing the available air space and to prevent fluid from being vented overboard through the reservoir relief valve.

**I. Hydraulic Reservoir Port B Return Check Valve (See Figure 10.)**


- (1) The reservoir port B return check valve is installed in port B of the reservoir to prevent reverse flow of hydraulic fluid from the reservoir to the return line. The check valve is located on the reservoir in the left wing root and is accessible through the left wing root access door.
- (2) Externally and internally, the port B check valve is a standard-type check valve with a 1500-psi rating. A nominal pressure of approximately 8 psi unseats the poppet, permitting fluid to flow through the valve. When the reservoir pressure exceeds the return line pressure, the poppet will seat and reverse fluid flow will be prevented.

**J. Engine Hydraulic Fire Shutoff Valve (See Figures 11 and 12.)**


- (1) The engine hydraulic fire shutoff valve is a gate-type, mechanically controlled valve, installed in the supply line of each engine-driven hydraulic pump. The engine hydraulic fire shutoff valve is actuated from the flight compartment to prevent the flow of hydraulic fluid into the engine section.
- (2) The engine hydraulic fire shutoff valve is mounted on a 2-piece channel bracket which is installed inside the wing leading edge, aft of the firewall of each inboard pylon. Access to the valve is through the access door located on the lower side of the wing leading edge, outboard of either the left or right inboard pylon. Each valve is located approximately 30 inches inboard of the access door.
- (3) Internally, the valve consists of a valve arm, valve arm link, cam plate, and slide blade. The valve arm link attaches to the valve arm and is allowed to swivel through an arc in relation to the valve arm. The link has a stop that will contact the arm when the two have traveled to the valve closed, full overtravel position. In the full open pretravel position, the link contacts the arm stop.
- (4) A roller attached to the end of the link rides in, and extends through, a J-shaped slot in the cam plate. The rotation of the valve arm causes the link-roller to follow the cam slot, allowing the arm and link to move through independent arcs.
- (5) The slide blade (gate of the valve) is slotted near the one end and also receives the link roller extending through the cam slot. The slide blade is positioned parallel to the cam plate and is guided by two grooves in the housing. This will allow the blade to open or close through porting of the valve by the action of the arm and link. The cam plate is pinned to the valve shaft, securing it rigidly in two positioning grooves in the housing. A pin-indicator is provided to relate valve position to a reference plate placarded open and closed.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

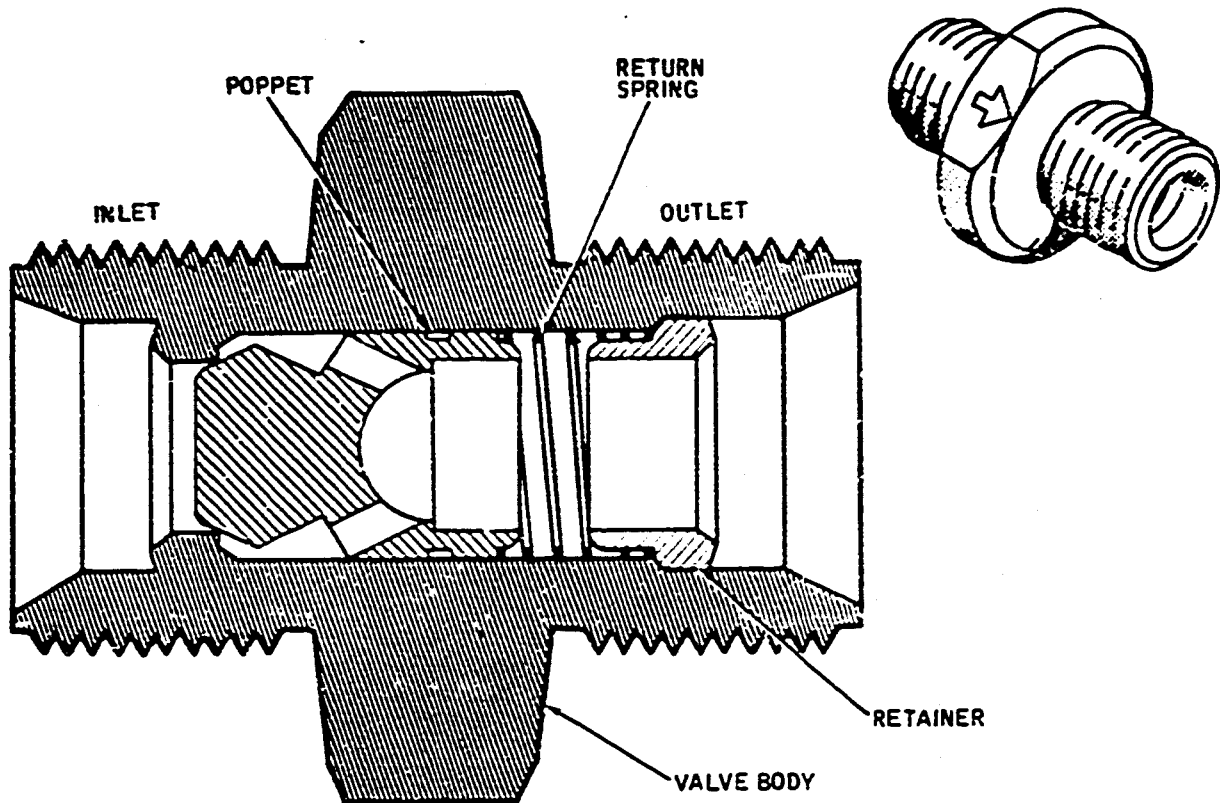

MINIATURE CHECK VALVE

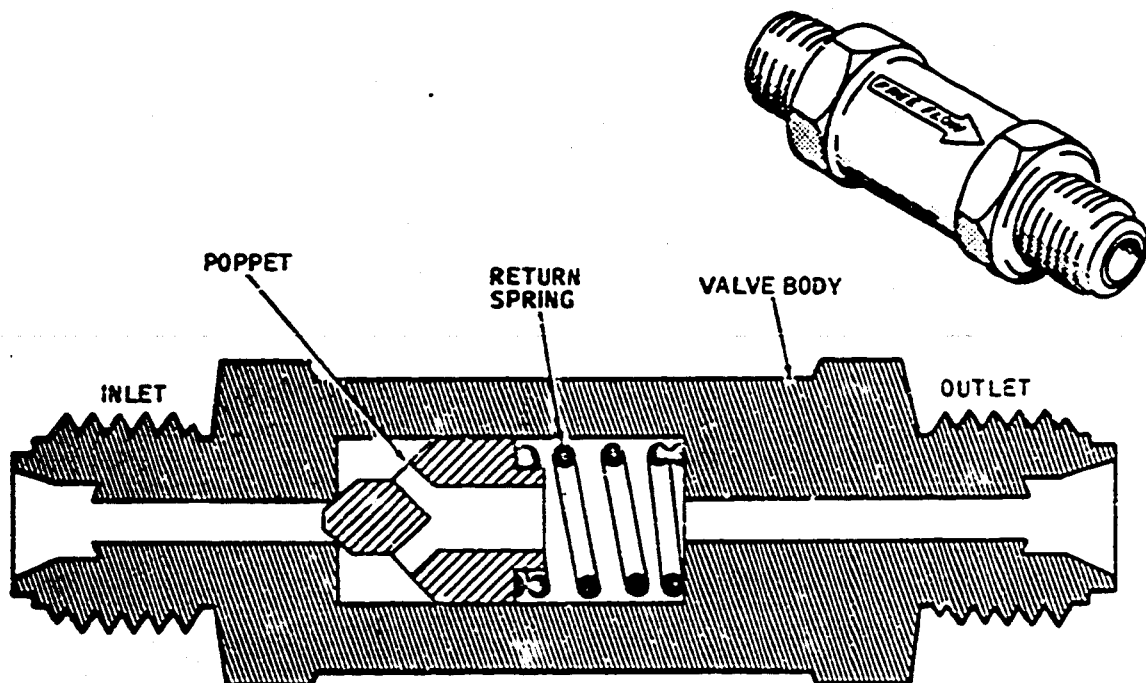

STANDARD CHECK VALVE

Hydraulic Check Valves -- Typical  
Figure 10


Jan 15/68

Printed in U.S.A.

HA2-18A

29-10-0  
CODE 23  
Page 21

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

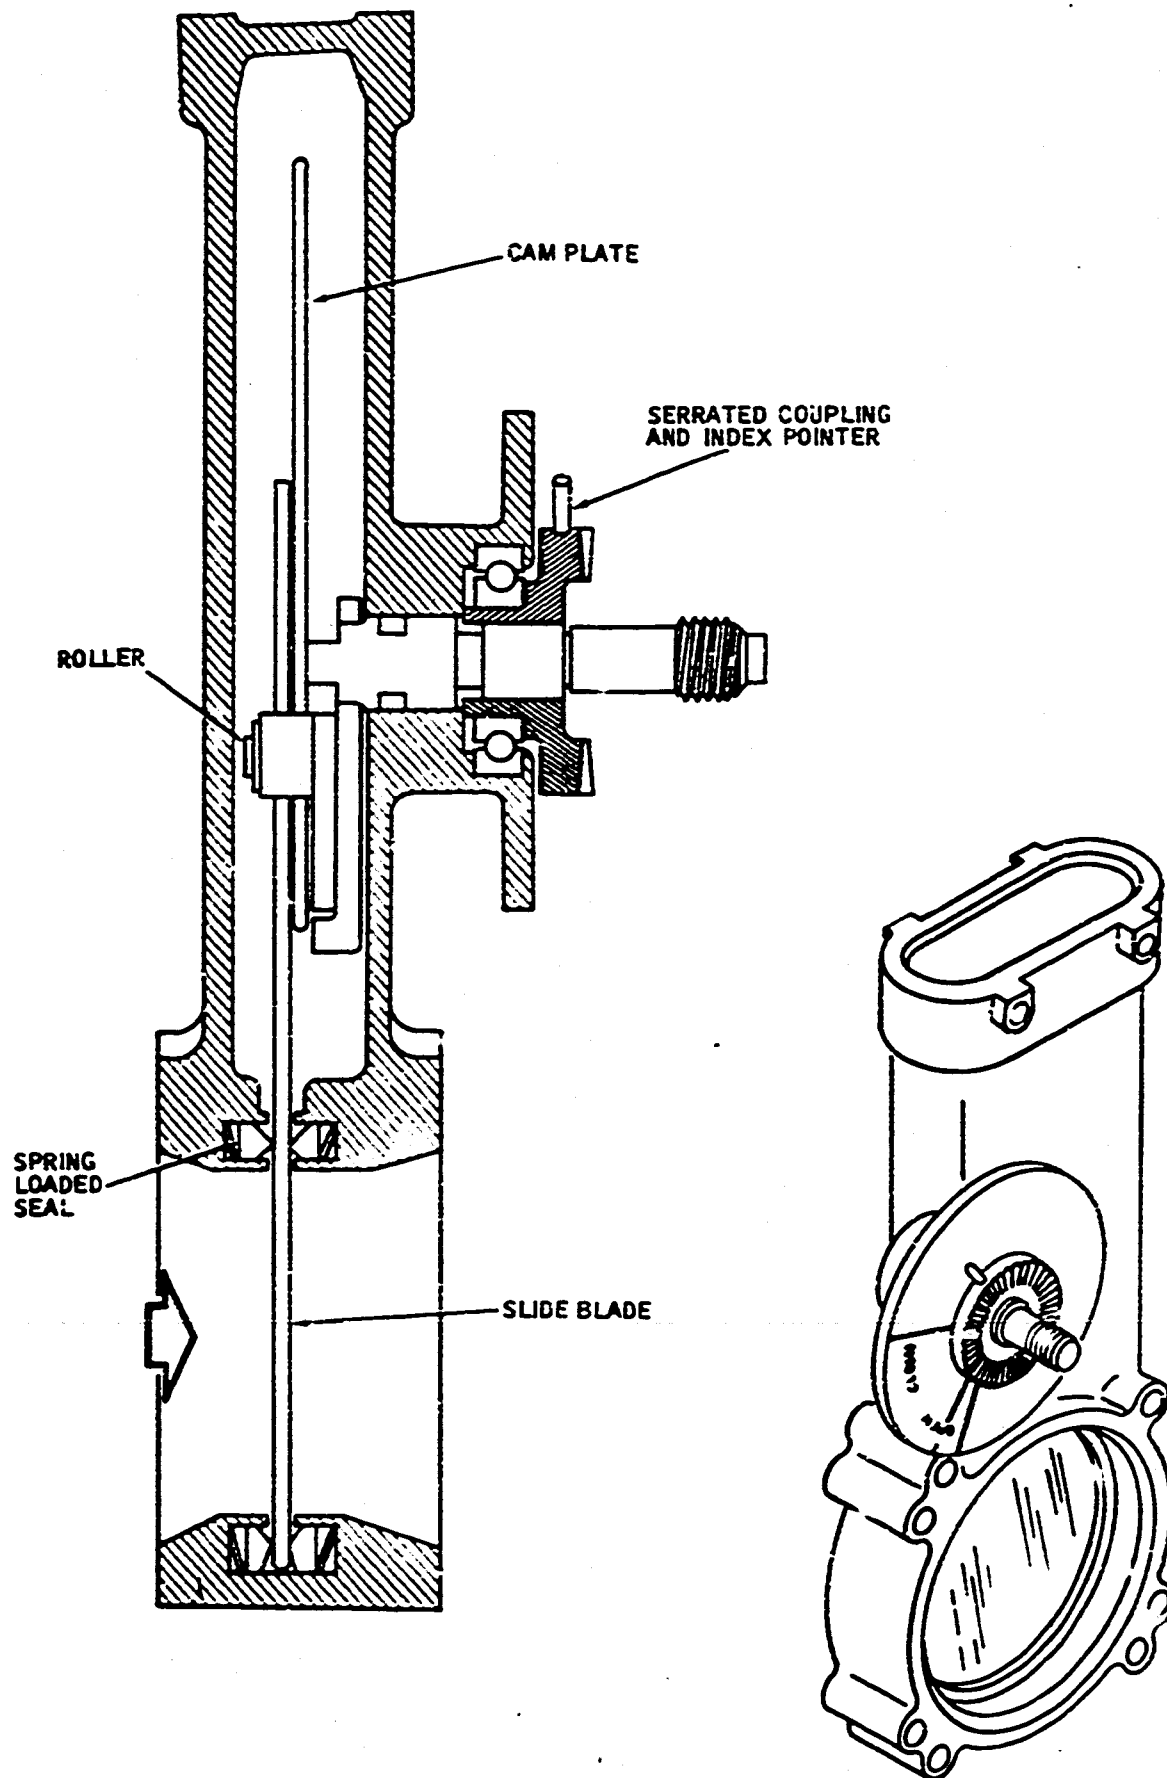

HA2-2209


29-10-0  
CODE 23  
Page 22

Engine Hydraulic Fire Shutoff Valve -- Schematic  
Figure 11

Printed in U.S.A.

Jan 15/68

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

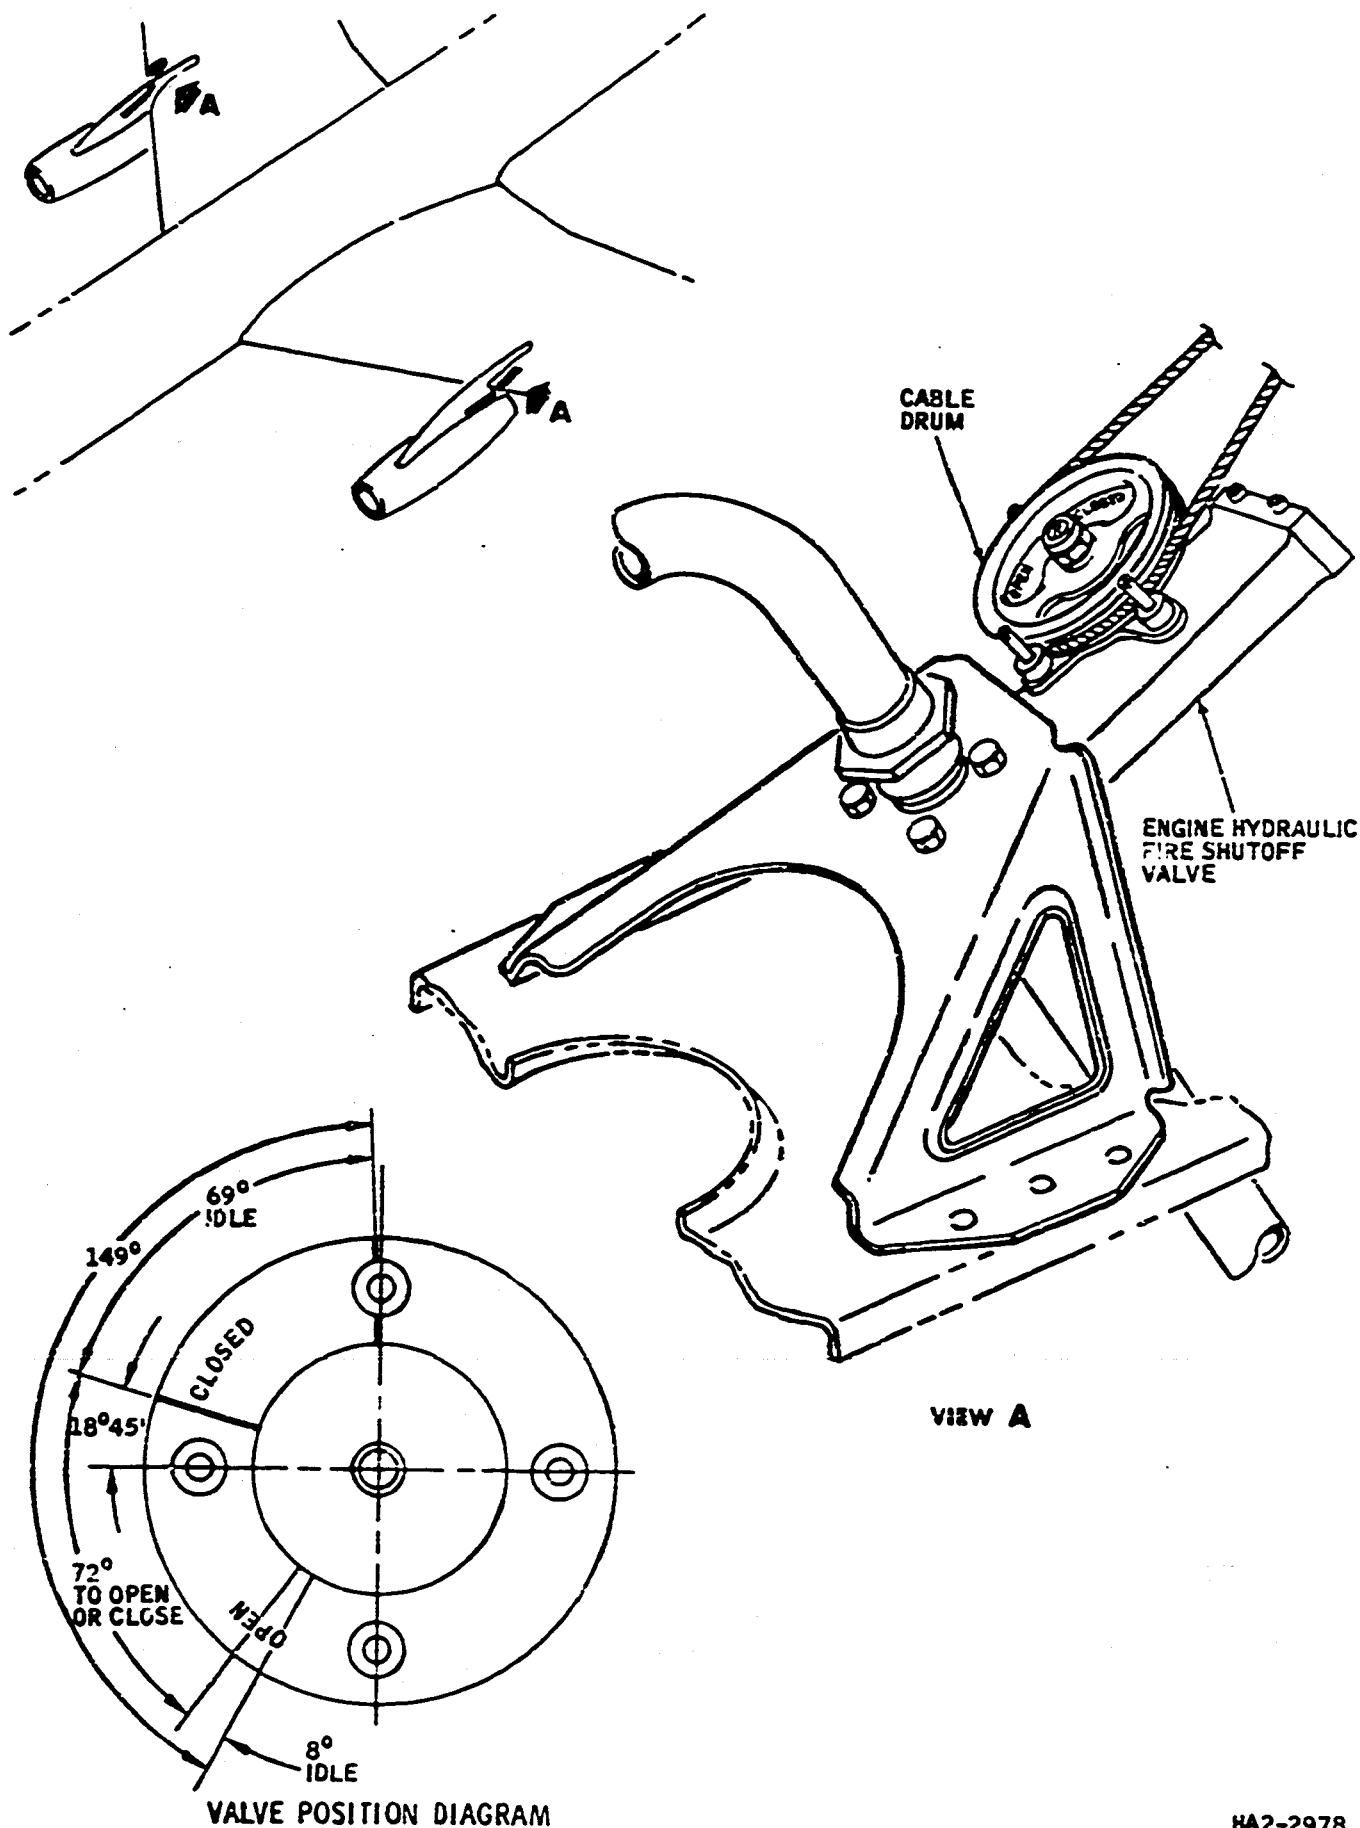

Engine Hydraulic Fire Shutoff Valve  
 Figure 12

Jan 15/68

Printed in U S A

HA2-2978

29-10-0  
 CODE 23  
 Page 23




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) The engine hydraulic fire shutoff valves are cable actuated by the fire control handles located on the overhead switch panel in the flight compartment. When the fire control handle for either inboard engine is moved, the cable system rotates the drum which is attached to the corresponding shutoff valve shaft. This action extends the valve blade into the fluid passage to block the flow of fluid. The valve operates from open to close by clockwise rotation of the cable drum. The valve gage will idle during the first 8 degrees of rotation of the cable drum, and then will close in the next 72 degrees. The cable drum will continue to rotate the shaft for an additional 69 degrees after the gate valve is closed, locking it overcenter. Total travel of the cable drum is 149 degrees.

K. Engine-Driven Hydraulic Pump (See Figure 13.)

- (1) A variable-displacement, pressure-compensated, engine-driven hydraulic pump is installed on each inboard engine. The pump incorporates a solenoid bypass feature for reducing the output of the pump. The bypass valves are controlled by two engine hydraulic pump control switches in the flight compartment. The switch for the hydraulic pump on engine No 2 is placarded left, on and bypass. The switch for the hydraulic pump on engine No. 3 is placarded right, on and bypass. When either of the two engine hydraulic pump control switches is placed in the bypass position, the bypass valve solenoid for that hydraulic pump is energized and the pump pressure decreases to 300 ( $\pm 100$ ) psi. When either switch is in the on position, the control circuit to the corresponding bypass valve is open and the hydraulic pump operates normally in the pressure range of 2850 to 3050 psi. The pump provides a continuous, non-pulsating flow of hydraulic fluid, under pressure, to the hydraulic manifolds for distribution throughout the hydraulic system. Each of the engine-driven pumps is located on the accessory drive pad of the inboard engines. These pumps are accessible through the access doors on the right side of the nacelles and removal of the engine bypass duct.
- (2) Three case drain ports are provided: two are on the yoke assembly housing, and the third is on the casing for the pressure control valve, adjacent to the inlet port fitting. The case drain port on top of the yoke assembly housing is used as the case drain connection to assure that the pump housing is full of fluid at all times. This drain connection is ported back to the low-pressure return port of the reservoir. The inlet port fitting is on top of the pump housing and the outlet port fitting is opposite to it on the bottom of the housing, and contains a low pressure indicating light switch.
- (3) The yoke control piston casing is an integral part of the pump case. Four self-locking nuts are used to hold the piston casing end-plate in position. The bypass valve assembly, consisting of the valve body and a solenoid, is mounted externally on the pump case, under the yoke control piston casing. This solenoid valve is provided with an electrical connector. A pressure control regulator is installed on the bypass valve body by means of four bolts. This regulator is cylindrical and is

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

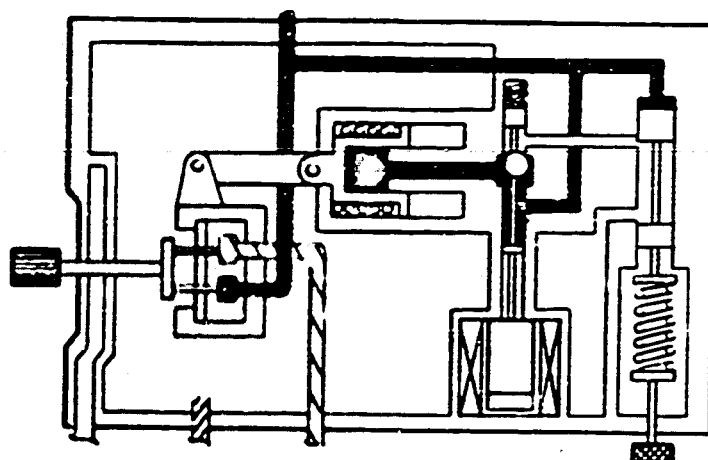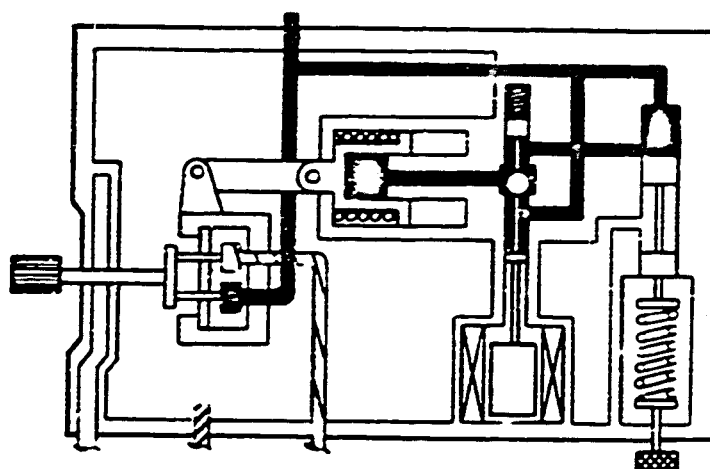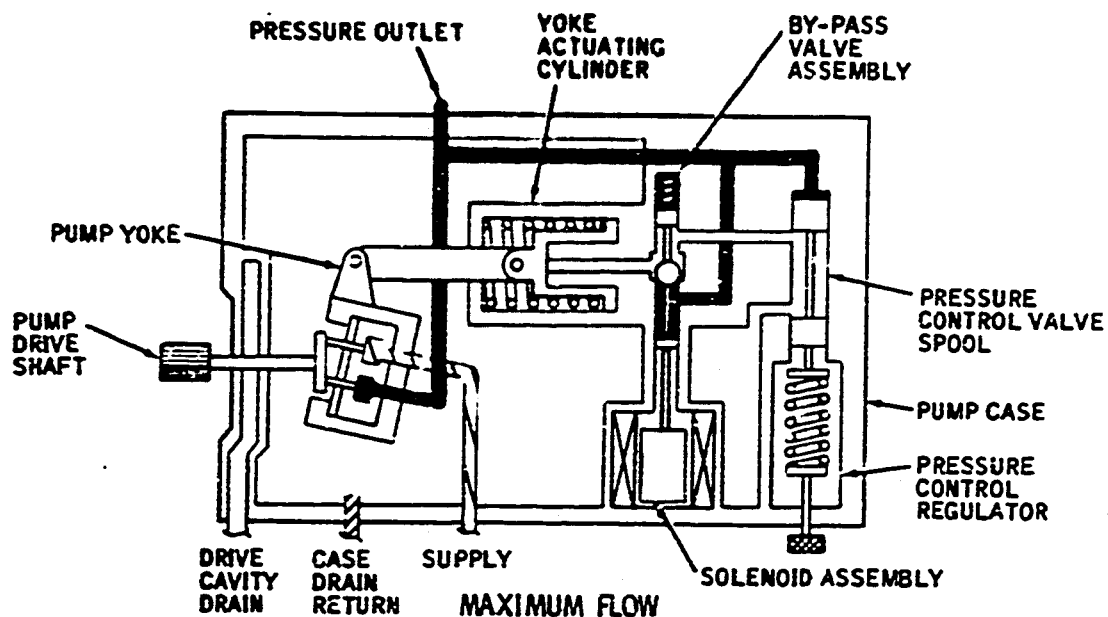

- PRESSURE
- CASE DRAIN
- SUPPLY
- DRIVE CAVITY DRAIN

HA2-837

Engine-Driven Hydraulic Pump Pressure  
 Flow -- Schematic  
 Figure 13

Jan 15/68

Printed in U.S.A.

29-10-0  
 CODE 23  
 Page 25

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

provided with an external adjustment screw. A lock screw is used to retain the adjusting screw after the adjustment has been made.

- (4) Hydraulic fluid enters the pump through an inlet port. Passages in the yoke carry the fluid to the valve plate which ports the fluid to the cylinder block. The nine pistons in the cylinder block are actuated by the rotating drive shaft, thereby pressurizing the fluid. From the cylinder block, the fluid is routed to the outlet port of the yoke and then to the pump pressure lines. The pressure control regulator is actuated by pump output pressure that is bled to the regulator. The regulators meter the pressure to the yoke control piston, which position the yoke.
- (5) The maximum pump pressure is determined by the adjustment of the pressure control regulator. The pressure control regulator allows maximum output flow (22.5 gpm at 3500 rpm) up to 2850 psi system pressure. When this pressure is reached, the yoke assembly starts to move towards the zero flow position.
- (6) Pressure continues to rise until the displacement is reduced from maximum flow to zero flow and 3000 psi is reached. The pump stabilizes in accordance with system demand.


**L. Engine-Driven Hydraulic Pump Check Valves (See Figure 10.)**

- (1) Two check valves, rated at 3000 psi, are installed in the lines from each engine-driven hydraulic pump. One check valve is installed in the pressure line and the other is in the case drain line. The check valves in the pump pressure lines prevent reverse flow of hydraulic fluid through the pump, when the pump is inoperative or when external hydraulic pressure is supplied to the system. Access to the valves can be gained through an access door in the forward right apron of each inboard pylon. The valves are mounted on the exterior wall of the inlet box by means of the bulkhead fittings and retaining nuts.
- (2) Normal operating pressure will unseat the poppet, and fluid will flow through the valve. When pressure downstream of the valve exceeds pressure from the pump, the pressure, with the aid of the return spring, will seat the poppet. This prevents reverse flow of hydraulic fluid through the pumps.


**M. Engine-Driven Hydraulic Pump Case Drain Filter (See Figure 14.)**

- (1) A line-type, micronic filter, for use in a low-pressure hydraulic system, is installed in the engine-driven hydraulic pump case drain line between the pump flow check valve and the hydraulic system reservoir. The case drain filter is installed on the aft surface of the rear spar opposite the leading edge of the inboard flap assembly. One filter is used for each engine-driven pump. Access is gained to the filter by


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

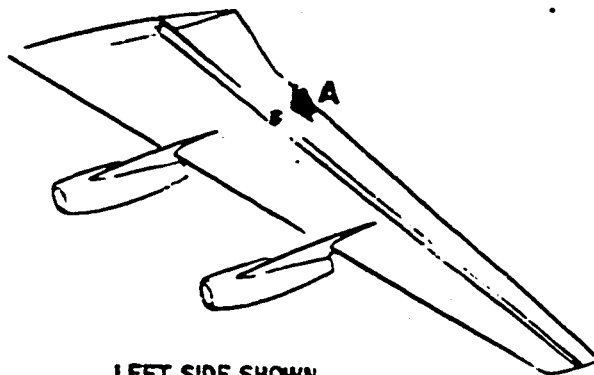

LEFT SIDE SHOWN  
 RIGHT SIDE OPPOSITE

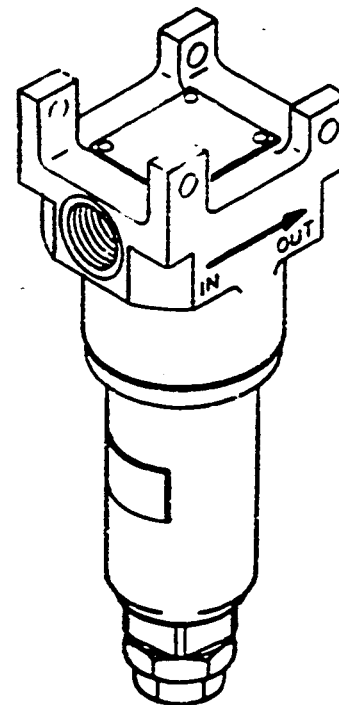

VIEW A

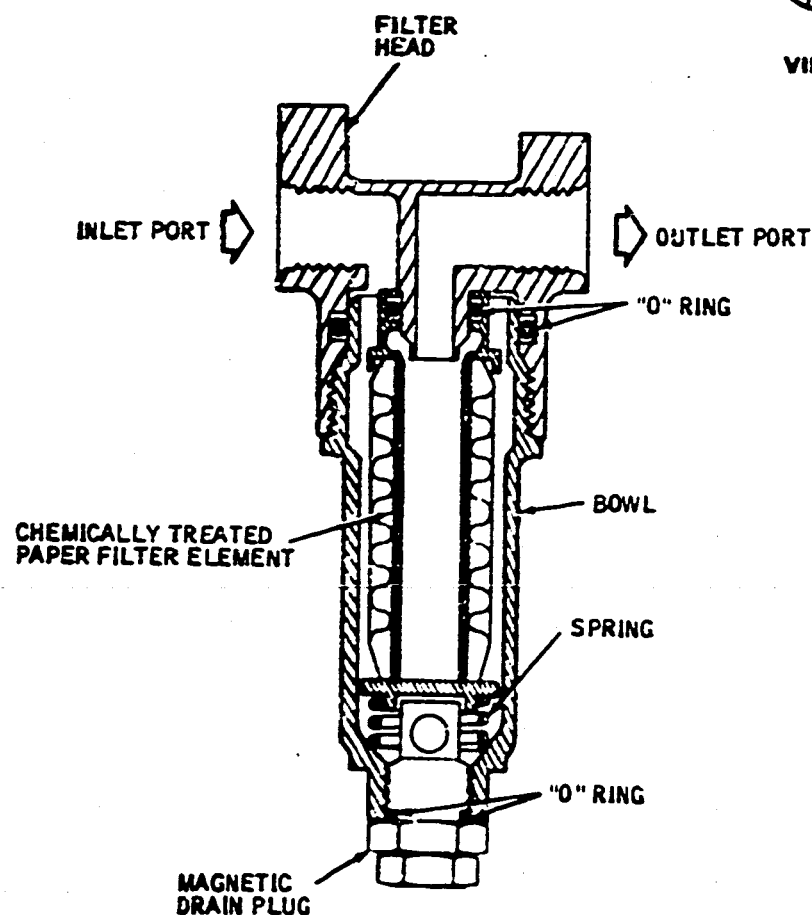

HA2-31

Engine Driven Hydraulic Pump Case Drain  
 Filter -- Cutaway View  
 Figure 14

Jan 15/68

29-10-0  
 CODE 23  
 Page 27

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

lowering the flaps. A second check valve is installed adjacent to the filter in the downstream side of the case drain return line.

- (2) Externally, the filter is approximately 5 inches high and 2 inches wide, with ports marked inlet and outlet. The bowl is cylindrical in shape, with hex-shaped wrench flats at the lower end. A self-sealing, magnetic drain plug is installed in the bottom end of the filter bowl. The filter element is made of chemically treated paper.

**N. Dual Filter and Relief Valve (See Figure 15.)**


- (1) The hydraulic power system dual filter and relief valve consists of two filters and two relief valves installed in the same body. The unit filters the hydraulic fluid from the two engine-driven hydraulic pumps, and the pressure relief valves assure that excessive pressures do not build up in the pressure line from the pumps. The unit is located in the left main gear wheel well on the lower portion of the rear spar, approximately 1 foot outboard of the centerline shear web.
- (2) The unit consists of a casting with a flange-mounted pressure inlet port on each end. Two pressure outlets are located on the top of the casting. One outlet, centrally located, is the main pressure outlet to the system selector valve. The other, located to the left of the selector valve port, is the pressure outlet to the air pressure regulator-aspirator. The return outlet port for the relief valve portion of the unit is located on the center of the aft face of the body, canted upward. The nose gear return line is connected to a check valve installed in a return line port, located between the two filter bowls.
- (3) The pressure relief valves are located behind the pressure inlet ports and are connected to the return outlet port of the unit. The inlet from the nose gear return line is routed through the casting to the return outlet port.
- (4) If either of the filter elements becomes clogged, pressure above 3000 psi at the inlet port will unseat the poppet. Pressure above 3500 psi will allow full flow of 22.5 gpm to flow to the return port of the unit and back to the reservoir. The relief valves will reseal at approximately 3000 psi.
- (5) A check valve is installed in the system selector valve port to prevent reverse flow or pressure through the filter during auxiliary hydraulic pump operation.

**O. System Selector Valve (See Figures 16 and 17.)**

- (1) The system selector valve is a 3-position valve which permits directional control of fluid under pressure. The valve is installed on the left hydraulic power manifold and is accessible through the left main gear inboard door.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

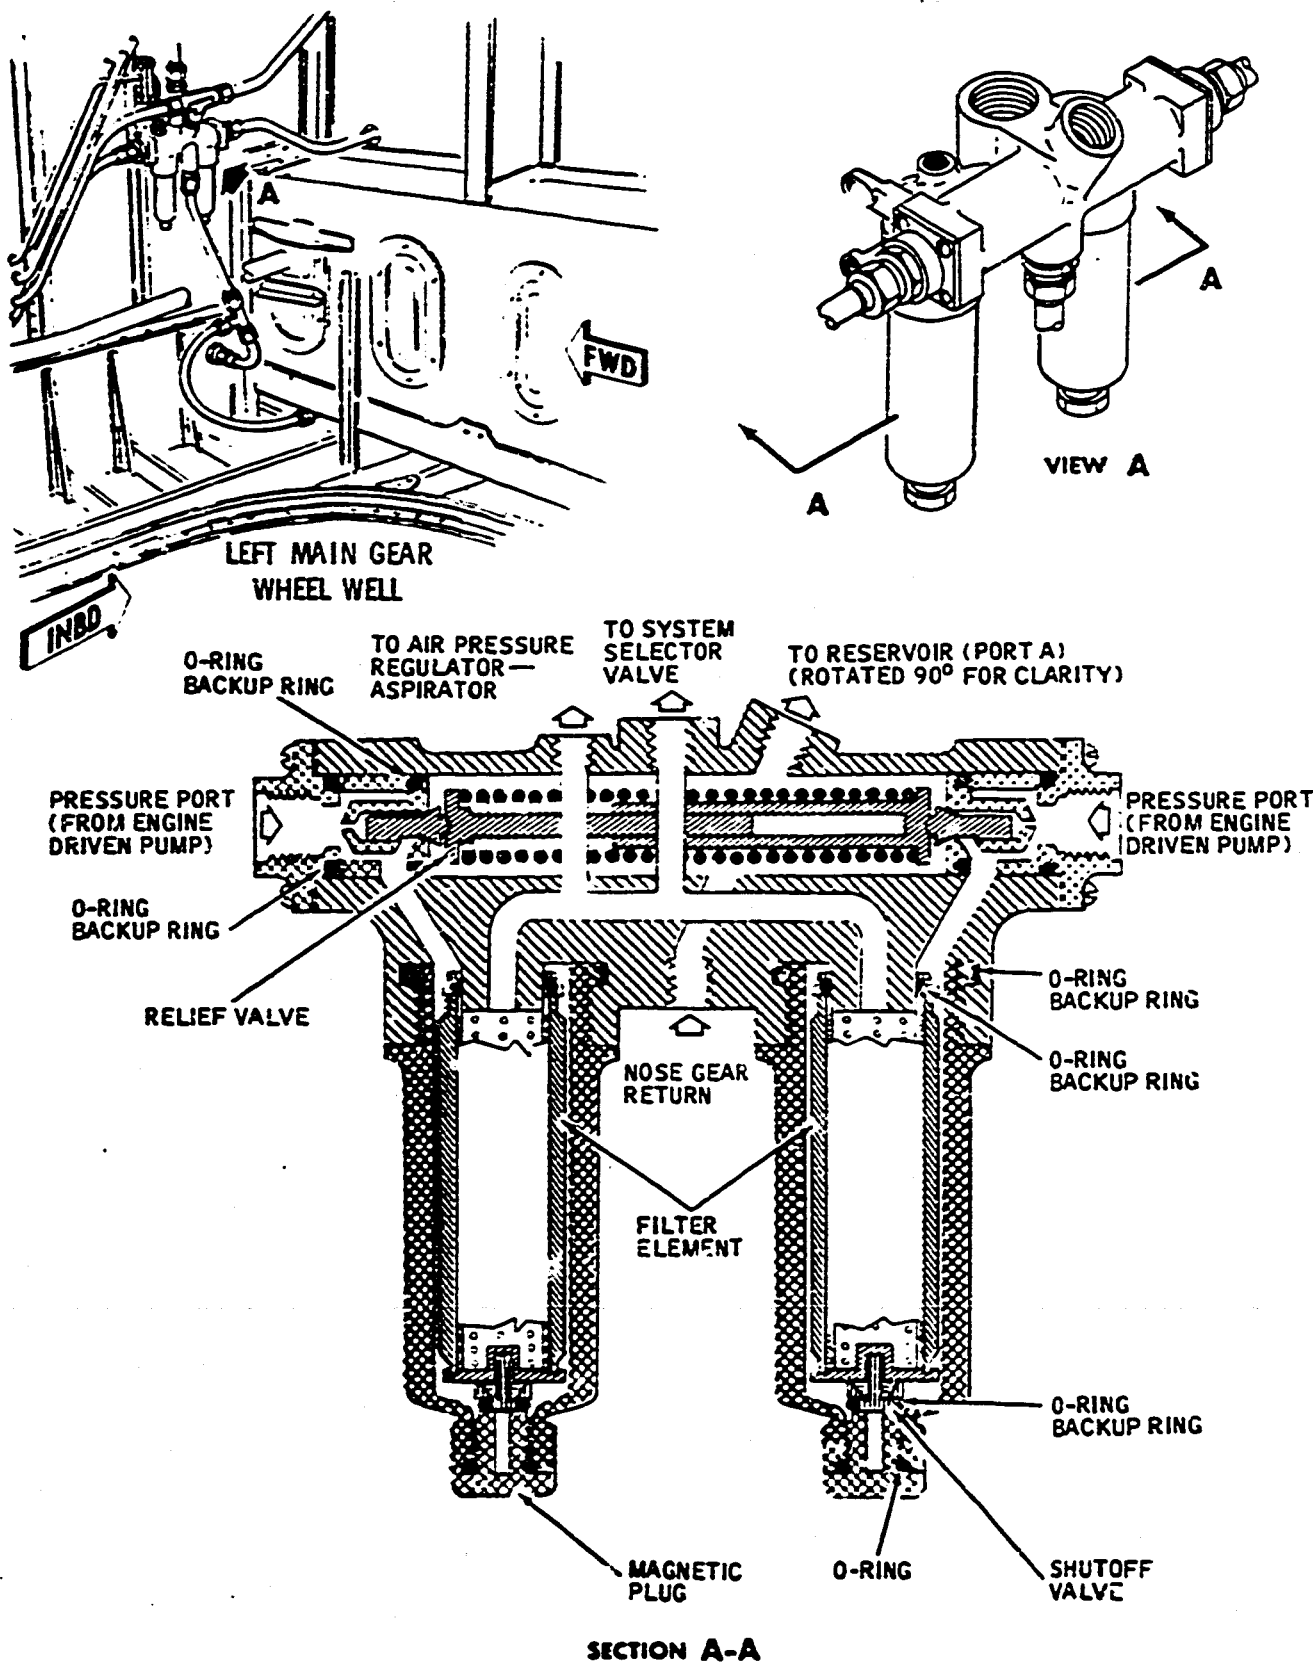

SECTION A-A

Dual-Filter and Relief Valve -- Cutaway View  
 Figure 15


Jan 15/68

Printed in U.S.A.

HA2-20


29-10-0  
 CODE 23  
 Page 29

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

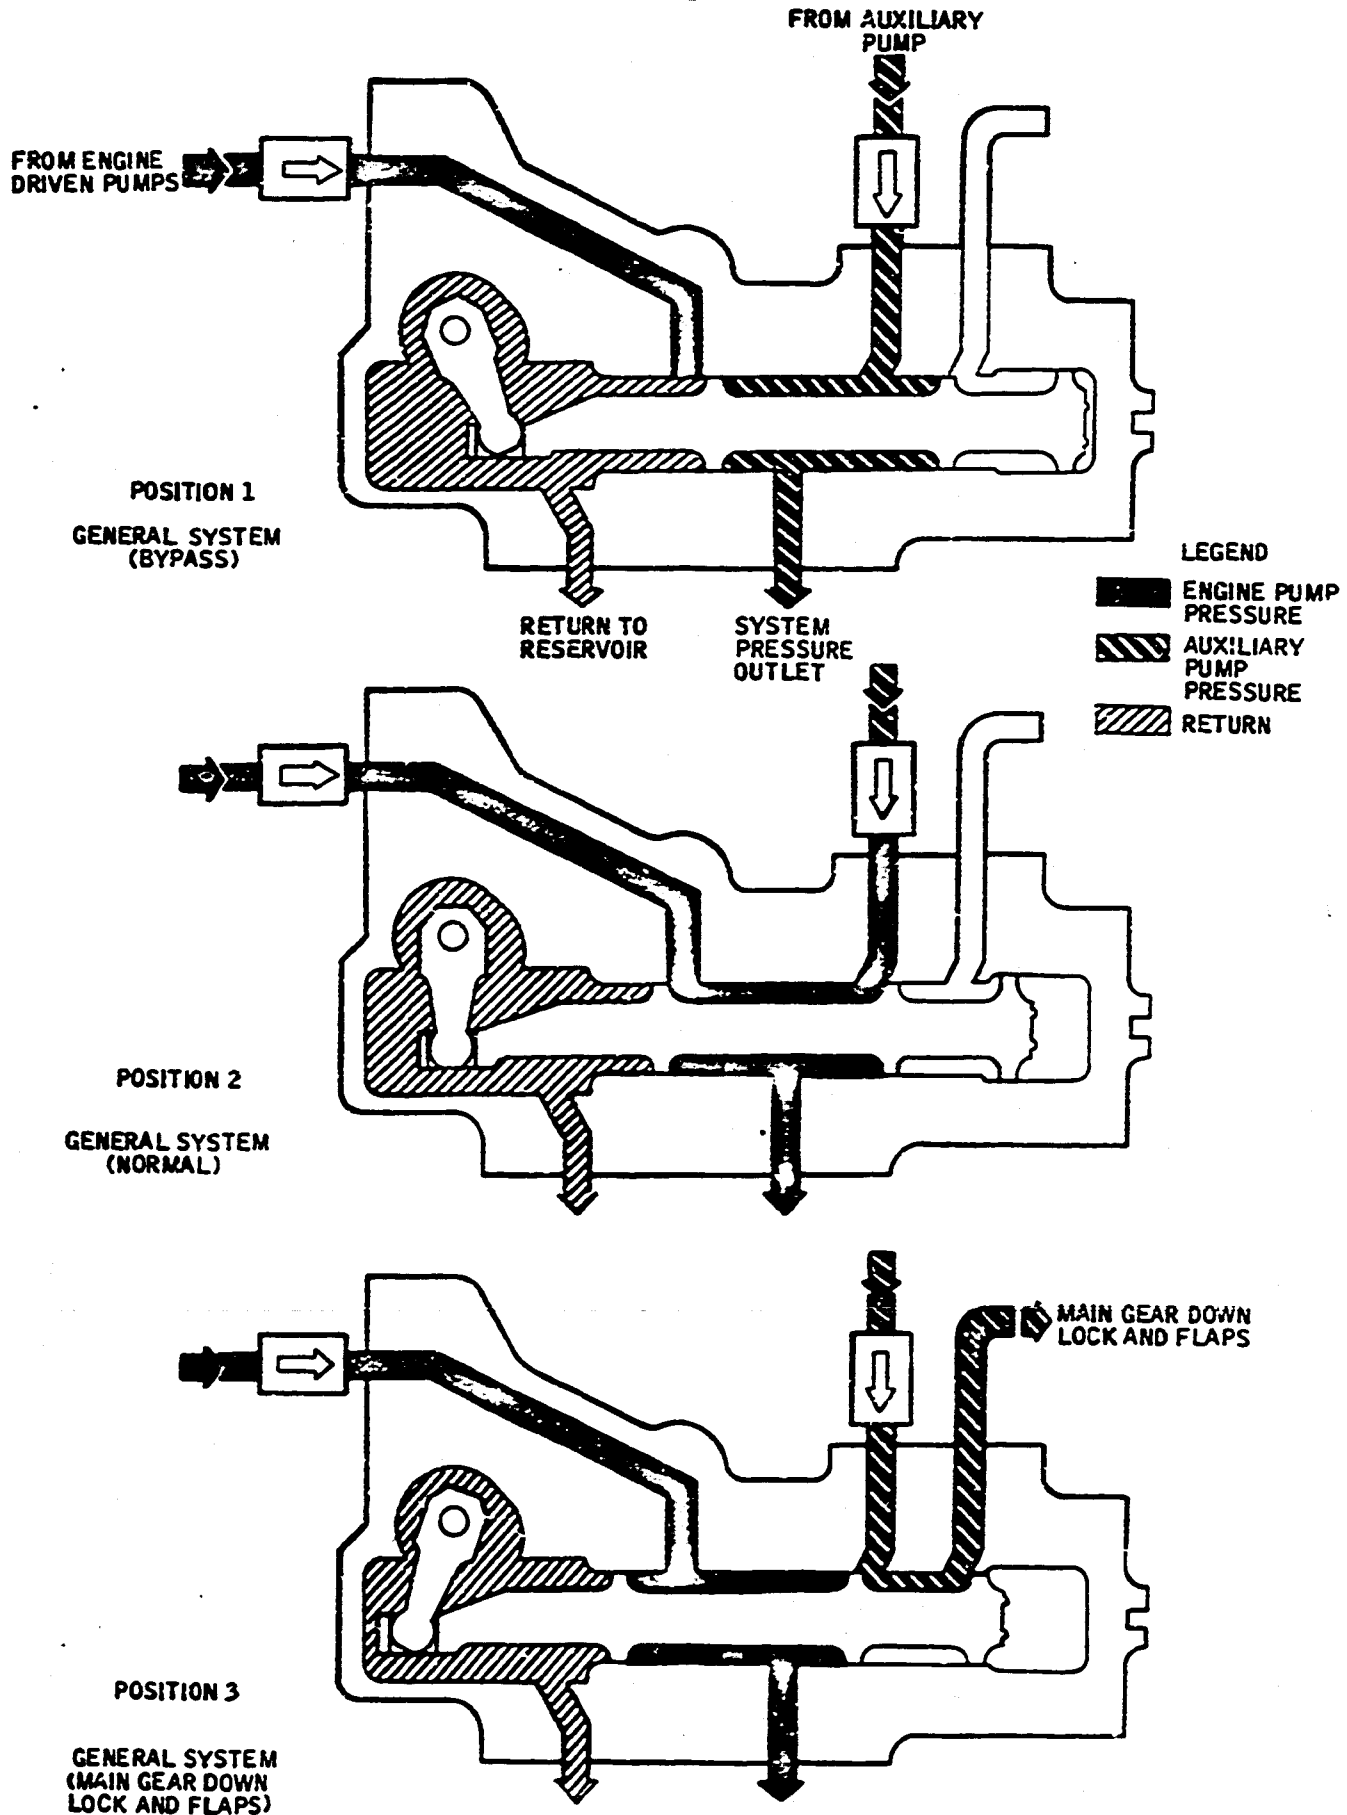

HA2-26

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

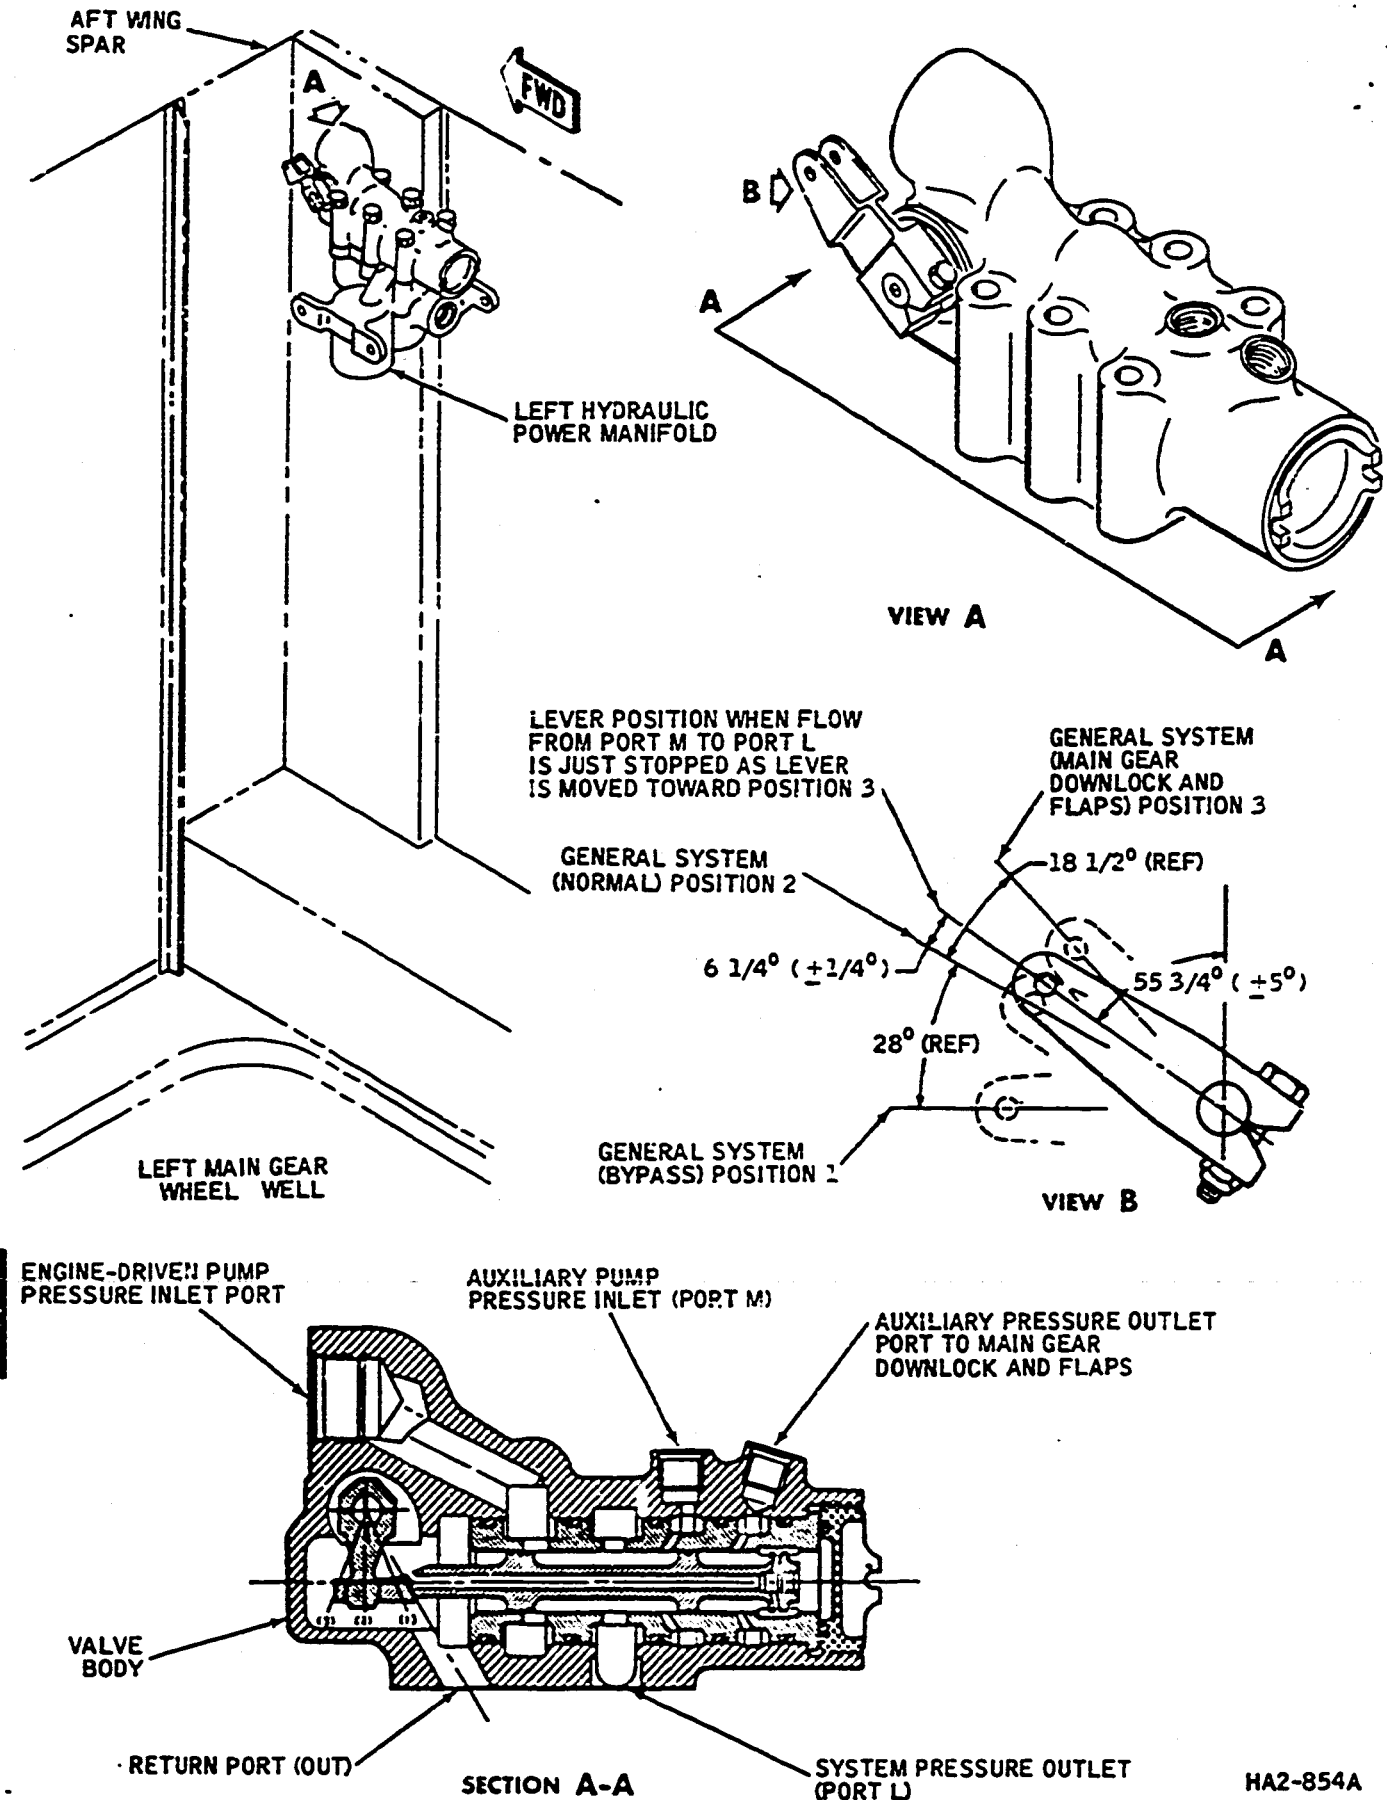

HA2-854A

System Selector Valve -- Cutaway View  
 Figure 17

Nov 1/69

29-10-0  
 CODE 23  
 Page 31

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The selector valve pressure-to-system port and the return port are directly ported to the manifold. The engine pump pressure enters the valve through a port on the large end of the valve, and the auxiliary pump inlet and alternate ports are located at the top, toward the aft end of the valve. The valve control crank is attached to a push-pull rod and a cable sector.
- (3) Operation of the system selector valve is controlled by a lever located on the right side of the system engineer's control pedestal. When the control lever is moved to the selected position, the cable system, through the sector and crank, operates the valve positioning lever to drive the slide spool assembly to the selected position. When the control lever is placed in the general system (normal) position, the selector valve is actuated, causing hydraulic fluid to enter the valve through the system pressure port. The fluid is then directed into the manifold through the pressure-to-system port. In the general system (normal) position, fluid from the auxiliary pressure port is also routed to the pressure-to-system port. In the bypass/general system position, the selector valve ports engine pump pressure into the manifold through the return port. In this position, the auxiliary pump pressure is ported to the general system. In the general system/main gear downlock and flaps position, pump pressure is routed through the alternate port, at the top of the valve, for alternate operation of the flaps. Internal leakage provides lubrication for the moving parts of the valve.



P. Left Hydraulic Power Manifold (See Figure 18.)

- (1) The left hydraulic power manifold distributes fluid pressure from the hydraulic pump (any one of the three pumps), through control valves to the various airplane hydraulic subsystems. The left power manifold is located overhead in the left wheel well. Access to the left manifold is through the left main gear inboard door.
- (2) One valve-mounting pad is provided on the top of the manifold for the system selector valve. Four ports are provided on the manifold for connection of hydraulic pressure and return lines. Three of these ports are pressure outlet ports; one, located on the aft face of the manifold and one located on the bottom of the manifold port fluid to the flight controls. The third pressure outlet port, located on the bottom of the manifold, ports fluid directly to the priority valve, which in turn, ports fluid to the nose gear and to the right power manifold. The fourth, a return port, located immediately forward of the pressure line port on the bottom of the manifold, is connected by a line to a return port of the reservoir.

Q. Right Hydraulic Power Manifold (See Figure 19.)

- (1) The right hydraulic power manifold distributes fluid pressure from the hydraulic pumps (engine-driven or auxiliary, or any combination of these three pumps), through the control valves to the various hydraulic subsystems. The right hydraulic power manifold is located overhead in

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

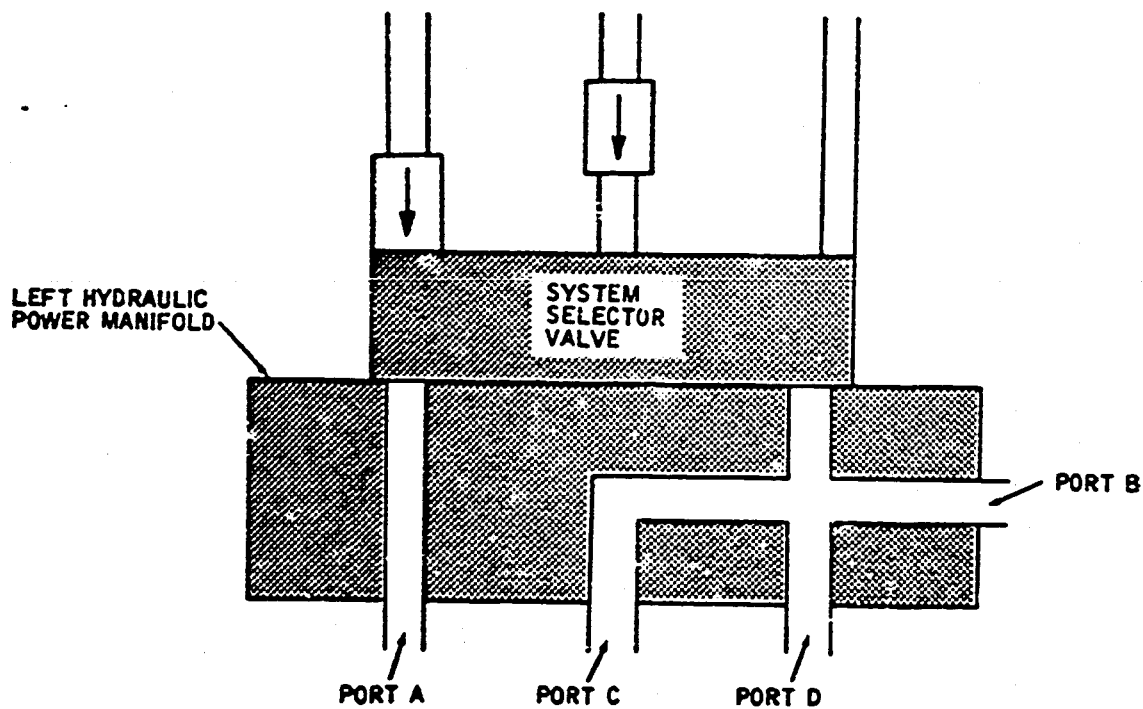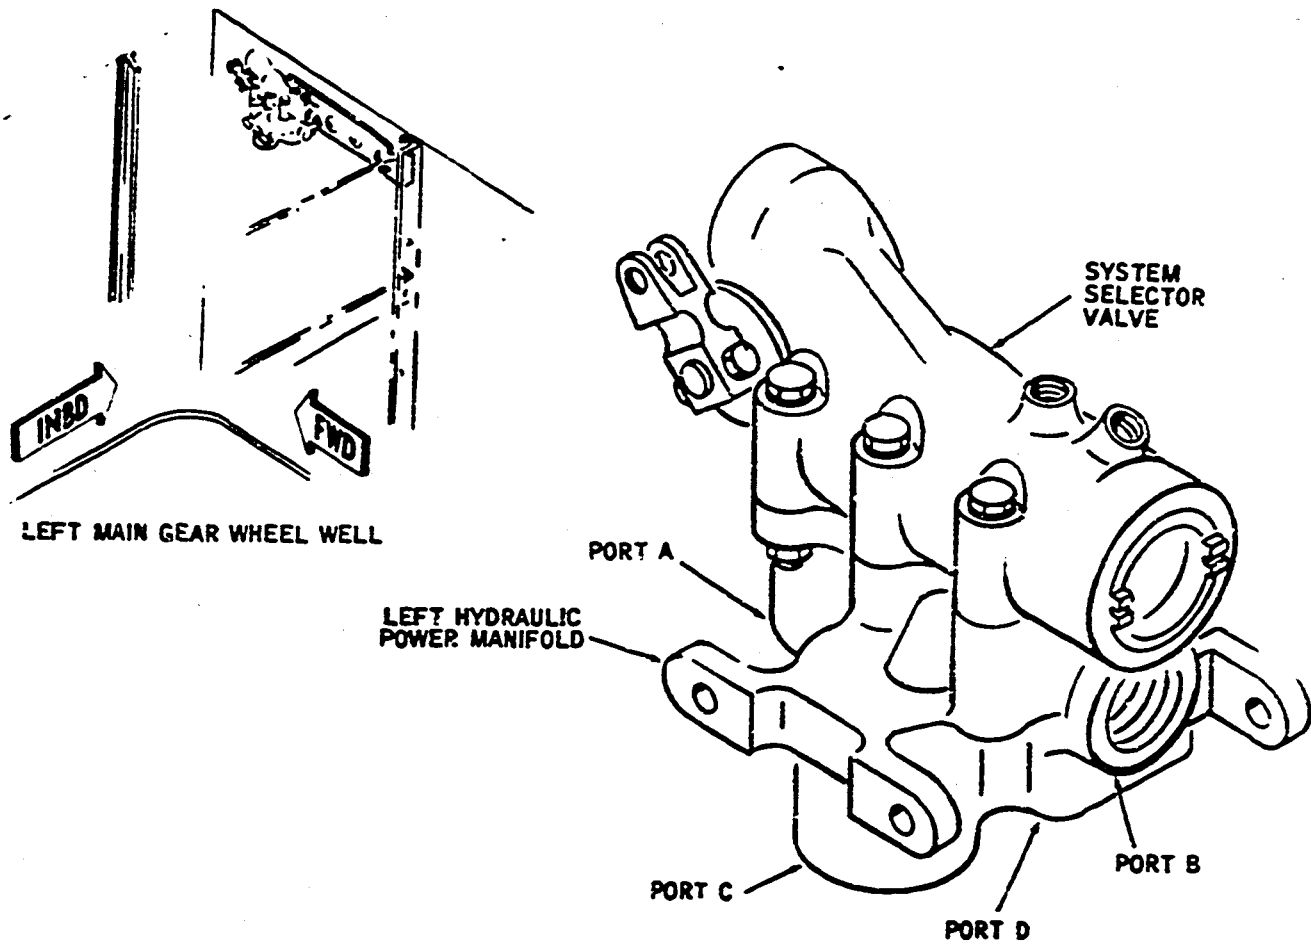

HA2-855


Left Hydraulic Power Manifold -- Schematic  
 Figure 18

Jan 15/68


29-10-0  
 CODE 23  
 Page 33

Printed in U.S.A.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

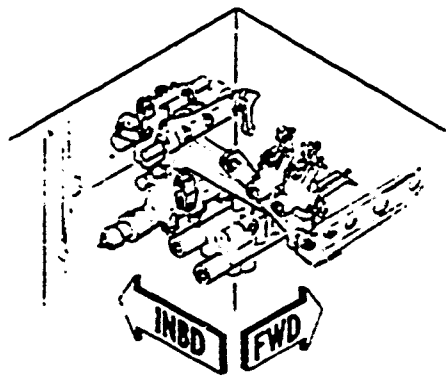

RIGHT MAIN GEAR  
WHEEL WELL

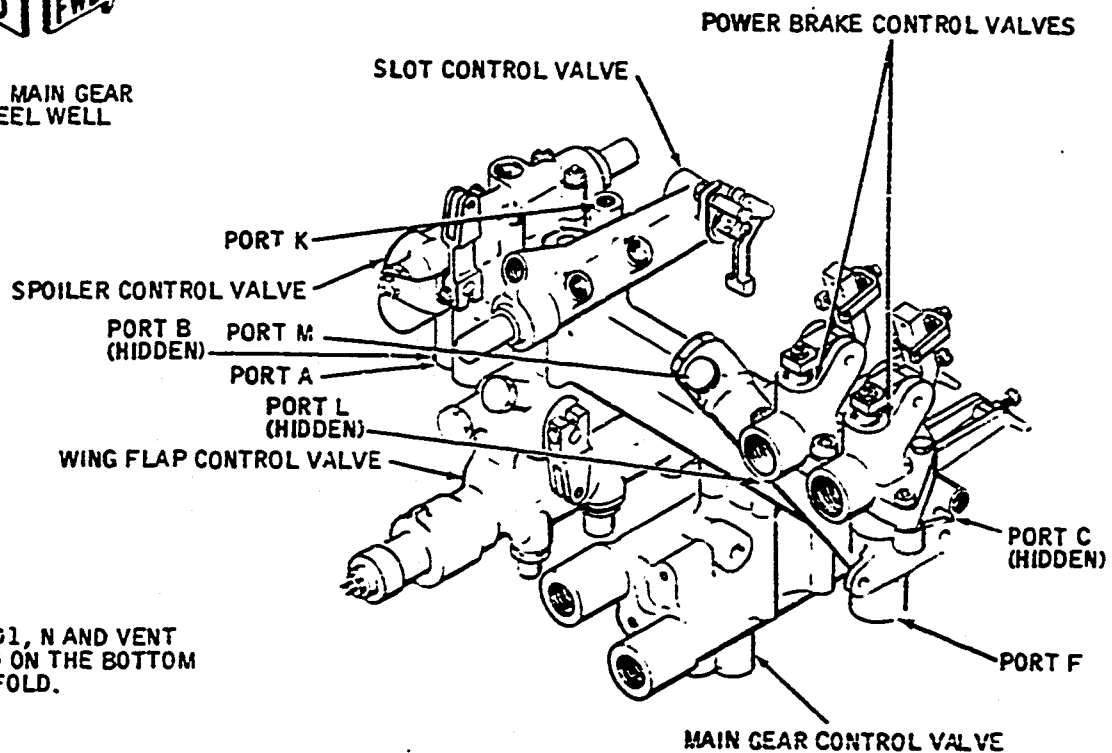

NOTE: PORTS B, C, D<sub>1</sub>, N AND VENT  
ARE LOCATED ON THE BOTTOM  
OF THE MANIFOLD.

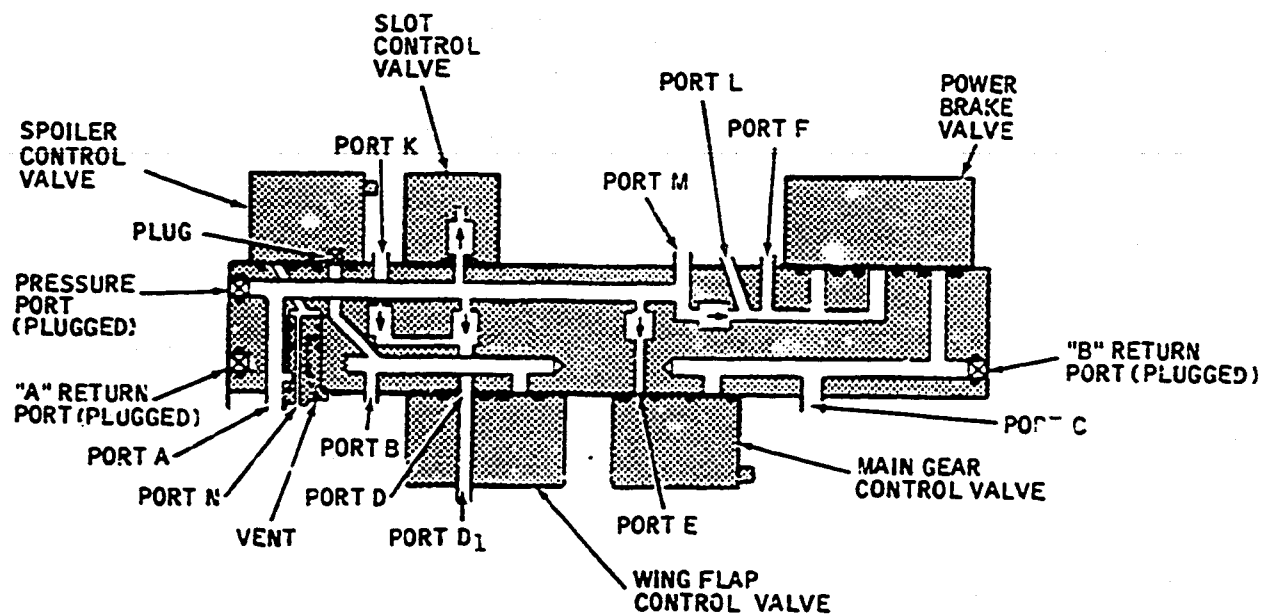

HA2-29A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

the right wheel well. The manifold is held in place with braces and is accessible through the right main gear inboard door.


- (2) The manifold contains passages for pressure and return fluid distribution, four check valves, ports for pressure and return lines, and mounting pads for the various control valves.
- (3) The right manifold receives fluid pressure from the left manifold. Pressure is ported through check valves to the wing flap control valve, to the slot control valve, to the main gear control valve, to the brake control valve, to the brake pressure transmitter, and to the brake accumulators.
- (4) Auxiliary hydraulic pressure is ported from the alternate port of the system selector control valve into port K in the right manifold. Port K is located inboard of the spoiler control valve. From port K, auxiliary hydraulic pressure is ported through a check valve to the downstream side of the wing flap control valve check valve and into the wing flap control valve for alternate operation of the wing flaps.
- (5) The return passage from the wing flap control valve ports fluid to return port A. The brake control valve return passage ports fluid into return line B through a two-way restrictor. The main gear control valve downline return fluid uses a separate port in the valve, bypasses the manifold, and returns the fluid directly to A return line to the reservoir. The upline in the main gear control valve uses the same return port, return port B, in the manifold as the brake control valve.

R. Deleted.


S. Hydraulic Power System Accumulator (See Figure 20.)

- (1) The hydraulic power system accumulator is a spherical, welded-steel, fluid and air bladder-separated container. The accumulator is installed in the pressure line of the hydraulic power system to provide a reserve supply of fluid under pneumatic pressure and to act as a shock absorber for the system pressure surges.
- (2) The accumulator is located immediately aft of the left hydraulic power manifold and is accessible through the left main gear inboard door. It is mounted with two corner brackets and clamp blocks at the upper and lower port fittings.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

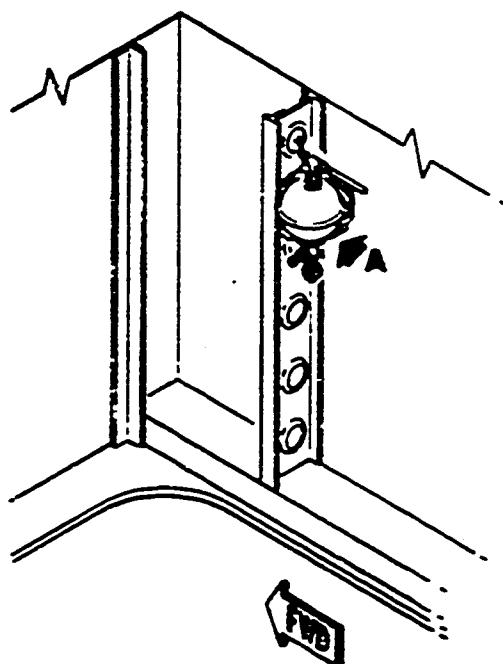

LEFT MAIN GEAR  
WHEEL WELL

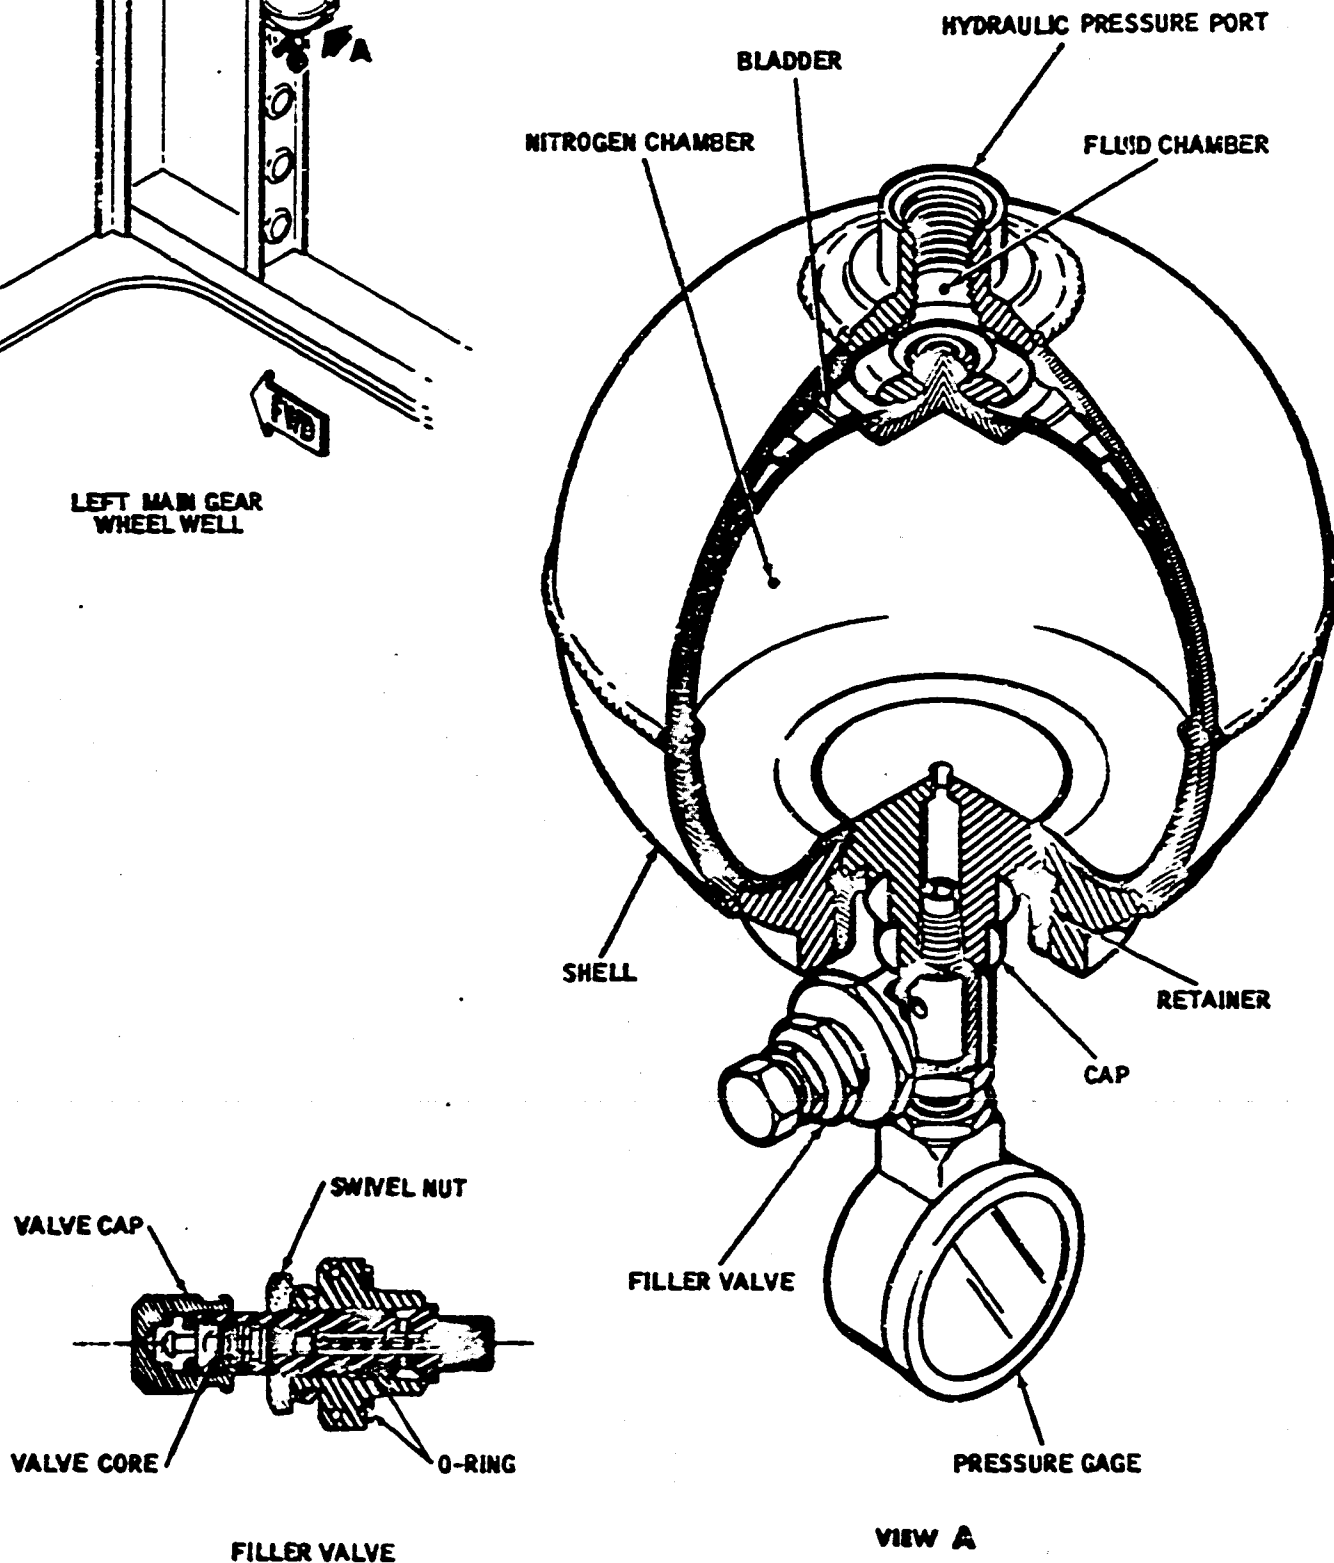

HA2-30

Hydraulic Power System Accumulator --  
 Cutaway View  
 Figure 20





DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The accumulator is installed in the pressure line of the hydraulic power system and is initially charged with 1000 psi of dry nitrogen. As the system pressure builds up, fluid is forced into the upper chamber of the accumulator, further compressing the trapped nitrogen to approximately 3000 psi. With full hydraulic system pressure, 3000 psi is indicated on the pressure gage adjacent to the filler valve. This reserve pressure smooths out any momentary lag in the pump's response to the system's demand for greater fluid flows. The accumulator permits a gradual rise in system pressure, thereby absorbing the shock of pump surges and relieving the piping and system operating units of high-impact loads. When the engine-driven hydraulic pumps are not operating, the accumulator provides system pressure (at a diminishing rate) until a quantity equal to the stored volume in the accumulator has been used by the system.

T. Hydraulic System Priority Valve (See Figure 21.)

- (1) The priority valve is located in the left wheel well near the left hydraulic power manifold. The valve is installed in the hydraulic pressure line, between the two power manifolds, downstream of the pressure supply takeoff port for the flight controls. The priority valve is a balanced relief valve which reserves initial hydraulic pressure (up to 2150 psi maximum) for use in the flight control systems. The valve consists of a body with an inlet, an outlet, and a breather port. Internally, the valve contains a poppet valve plate, a poppet, a poppet valve load-spring; a piston, a piston load-spring, and a piston load-spring housing. The piston load-spring housing chamber is vented to ambient air through a breather hold which is covered by a butyl rubber band.
- (2) The priority valve shuts off hydraulic pressure to all subsystems downstream of the left power manifold, whenever the hydraulic pressure drops below 1700 psi minimum. At this point, the valve closes to reserve the hydraulic pressure for use in the flight control systems, preventing them from reverting to manual operation. When the hydraulic pressure rises to 2150 psi maximum, the priority valve opens and supplies pressure to the right manifold and all subsystems downstream of the priority valve.
- (3) Hydraulic fluid from the left power manifold enters the priority valve through the inlet port, passes through the poppet valve plate holes, and applies pressure against the piston. When sufficient hydraulic pressure is applied to the piston, the piston load-spring compresses, unseating the poppet and permitting full flow through the valve. When the hydraulic pressure decreases to less than the opposing force value of the piston load-spring, the load-spring forces the piston against the poppet and shuts off fluid flow through the valve.
- (4) The maximum flow available from both engine-driven hydraulic pumps is: 44 to 45 gpm at takeoff, climb, and cruise configurations; 26 to 28 gpm at descent, approach, and engine idle configurations.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

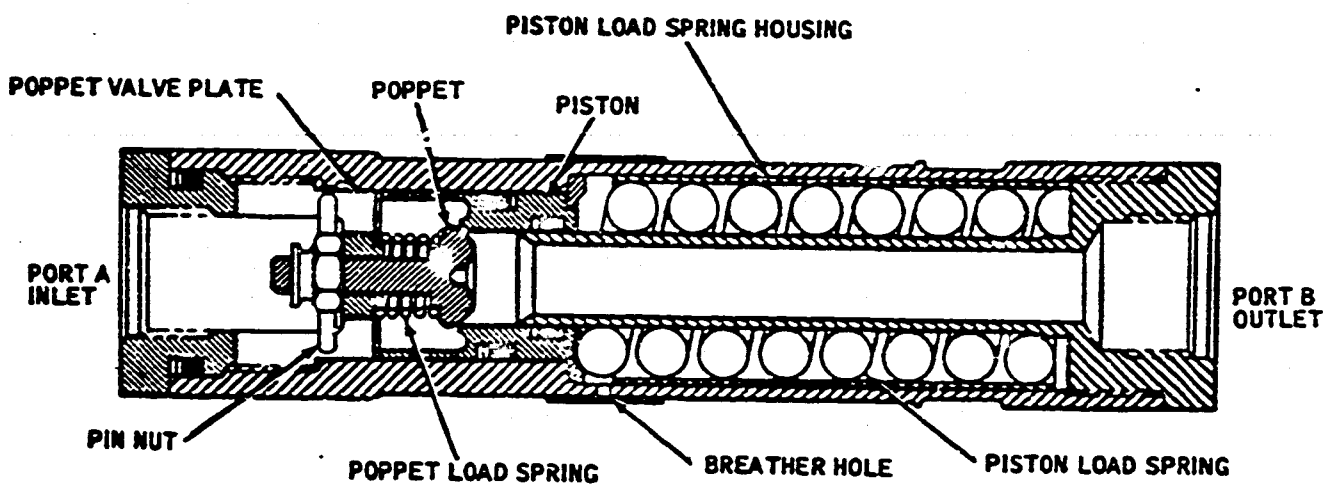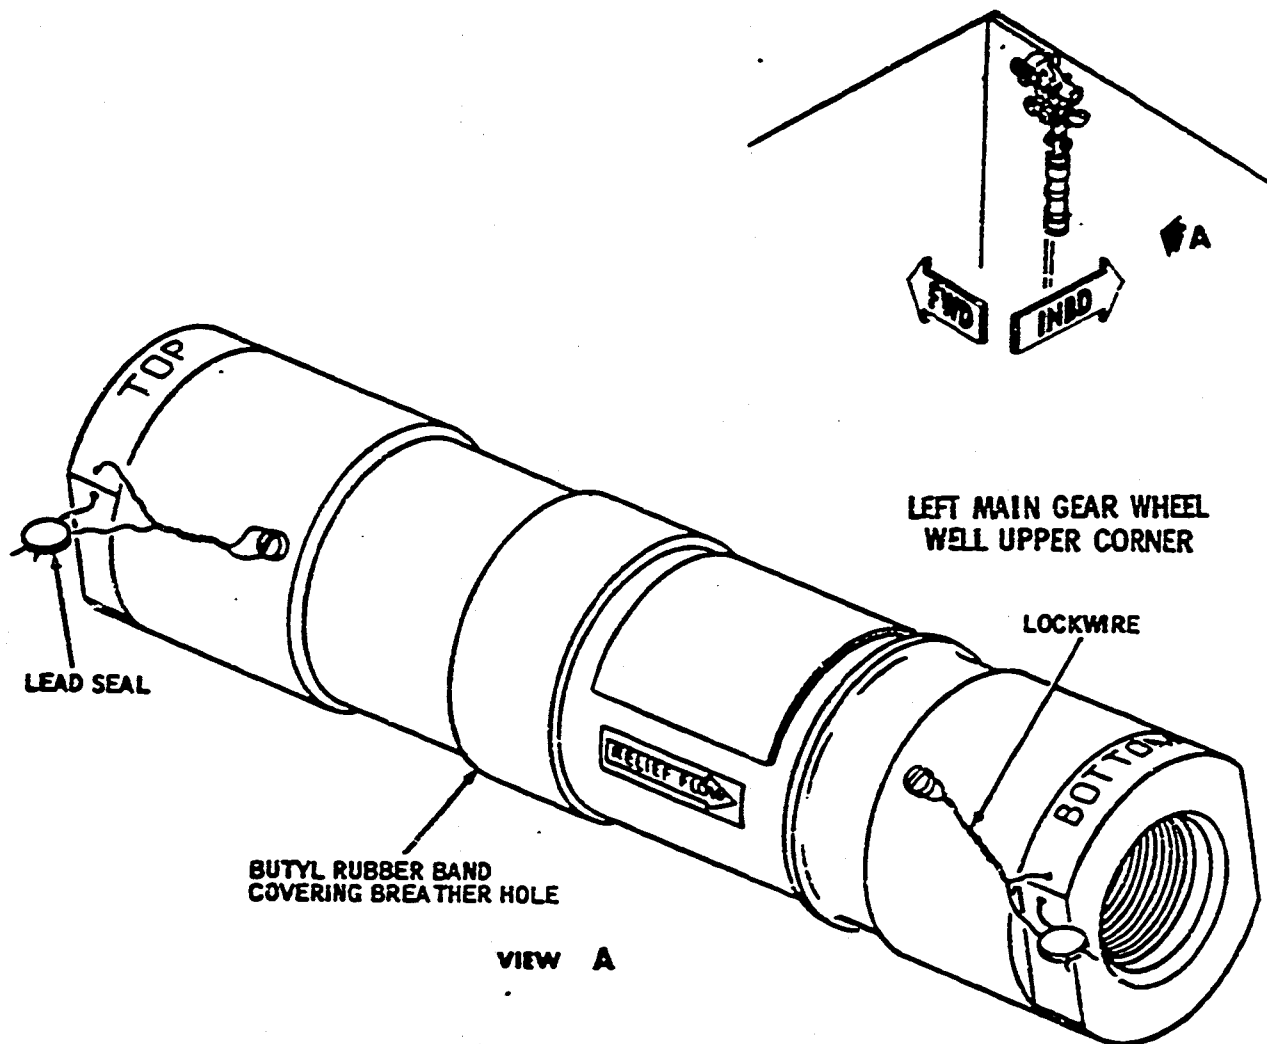

HA2-856

29-10-0  
 CODE 23  
 Page 38

Hydraulic System Priority Valve -- Cutaway View  
 Figure 21

Printed in U.S.A.

Jan 15/68

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Some of the larger hydraulic system demands are as follows:
- (a) Gear retraction -- 17 gpm (10-12 seconds)
  - (b) Gear extension -- 14 gpm (10-12 seconds)
  - (c) Wing flaps down -- 8 gpm (10 seconds)
  - (d) Wing flaps up -- 3 gpm (22 seconds)
  - (e) Horizontal stabilizer -- 7 gpm
  - (f) Ailerons -- 17 gpm (25°/second)
  - (g) Rudder -- 3 gpm (25°/second)
- (6) There are various combinations of hydraulic system operations which could cause momentary reversion of the flight controls to manual operation, the priority valve assures that the left power manifold receives all the hydraulic fluid pressure under conditions of very large flow demands.

U. Hydraulic System Selector Control Lever

- (1) The hydraulic system selector control lever is a manually actuated, mechanical lever detented to three positions. The lever provides a mechanical means, through cables, for positioning the system selector valve and the auxiliary hydraulic pump supply selector valve. The hydraulic system selector control lever is located on the system engineer's control pedestal. The lever is attached to a drive sector, located on a common shaft with the other control pedestal sectors. The lever and sector are accessible through the cover plates on the system engineer's pedestal.
- (2) To put the hydraulic power system in the bypass condition, the system selector control lever is lifted out of detent and moved to bypass/general system position. At the same time, the cable moves the sector and pushrod of the system selector valve to the No. 1 position. The pushrod positions the system selector valve to the No. 1 bypass position. At the same time, the cables from the system selector valve sector move the auxiliary pump supply selector valve sector to No. 1 (auxiliary) position. The auxiliary pump supply selector valve remains in the auxiliary supply position through the idle feature of the sector rigging. In this condition, the engine-driven pump pressure is ported to the reservoir and the auxiliary pump from the low standpipe in the hydraulic system reservoir. To put the system into the alternate condition, the selector control lever is lifted out of detent and moved to the general system/flaps only position. The cables move the system selector valve sector to the No. 3 (alternate) position. The system selector valve sector moves the cables rotating the auxiliary pump supply selector valve sector to the No. 3 (alternate) position. As the

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

sector rotates, the end of the arm moves away from the idle position. This positions the valves to the alternate position, supplying fluid to the auxiliary pump from the auxiliary pump alternate reservoir. In this position, fluid from the auxiliary pump is ported to the wing flap control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported to the general system.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - DESCRIPTION AND OPERATION

1. General

A. Description (See Figures 1 and 2.)

- (1) The hydraulic power system receives fluid pressure from the engine-driven hydraulic pumps, one installed on each inboard engine. The electrically driven auxiliary pump is used to supplement the engine-driven pumps, or to independently supply the system with fluid pressure.
- (2) The hydraulic system reservoir, located in the left wing root, has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir is used for fluid, and 1/10 is used for foam space. A separate air chamber is installed in the reservoir system to provide for a greater fluid capacity in the main reservoir. A reservoir filler assembly is installed in the piping between the reservoir and the air chamber and has a vent line from the filler neck to the tee at the top of the reservoir sight gage. The reservoir is pressurized to 30 to 35 psi by bleed pressure from the engine-driven pumps through an air pressure regulator-aspirator.
- (3) The engine-driven pumps receive fluid from the pressurized main reservoir through respective engine hydraulic fire shutoff valves. The engine hydraulic fire shutoff valves are normally open and can be mechanically controlled from the flight compartment. The pumps supply fluid pressure through respective check valves to the dual filter and relief valve. Some of the fluid from the filter is ported through the regulator-aspirator to pressurize the reservoir. Most of the fluid is routed through a check valve to the system selector valve, and then to the left and right hydraulic power manifolds. The manifolds distribute the fluid pressure to the subsystems.
- (4) Hydraulic fluid is normally supplied to the auxiliary hydraulic pump from a low standpipe in the main reservoir. During alternate operation, the auxiliary hydraulic pump receives fluid supply from the auxiliary pump alternate reservoir, which is located just aft of the auxiliary pump. From these reservoirs, the fluid is ported through the auxiliary pump selector valve which is mechanically controlled from the flight compartment by the system selector control lever. When operating, the auxiliary hydraulic pump supplies fluid pressure to the subsystems through the system selector valve which is also controlled by the system selector control lever in the flight compartment. A filter and check valve are installed in the line from the auxiliary pump to the system selector valve.
- (5) An accumulator is installed in the pressure line to the subsystems to provide a reserve supply of fluid and to act as a surge damper for the system.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Engine-driven pump fluid pressure is routed through the system selector valve to the left power manifold, where it is distributed to some of the subsystems and through the priority valve to the right power manifold. Fluid pressure from the right power manifold is distributed to the remaining subsystems.
- (7) The priority valve is a spring-loaded, poppet-type, balanced relief valve installed in the line downstream of the left power manifold. The priority valve's function in the system is to prevent the flight control systems from reverting to manual operation during high demands on the hydraulic system.
- (8) A fluid pressure transmitter, located in the nosewheel well, senses the system pressure, which is indicated on the hydraulic system pressure indicator in the flight compartment.

**B. Normal Operation**

- (1) Fluid is supplied to the hydraulic system from the pressurized hydraulic system reservoir. For operation of the hydraulic system under normal conditions, 8.1 US gallons (6.7 Imperial gallons; 30.6 liters) of hydraulic fluid are available to the engine-driven hydraulic pumps, and 12.9 US gallons (10.7 Imperial gallons; 48.8 liters) are available to the auxiliary hydraulic pump. Supply lines from the main reservoir carry fluid to each inboard pylon through normally open engine hydraulic fire shutoff valves to the engine-driven hydraulic pumps. Fluid is supplied to the auxiliary hydraulic pump from the main reservoir through a low standpipe at the base of the reservoir. Fluid is carried from the reservoir through the auxiliary pump selector valve to the auxiliary hydraulic pump.
- (2) The engine-driven hydraulic pumps supply full system pressure (3000 psi nominal) at any given engine speed, from idle to full power. The output flow of the pump is varied by sensing pressure from the outlet side of the pump. Each engine-driven pump contains a solenoid-operated bypass valve which, when energized, bypasses the pressure control regulator of the pump and ports fluid to the pump yoke control piston which feathers the pump. When the pump is feathered, flow rate is reduced to almost zero (1.0 gpm) and to a pressure of approximately 300 psi. Half of this flow maintains pump lubrication and cooling through internal leakage. This leakage is returned, through a check valve, the engine-driven pump case drain line filter, and another check valve to the case drain return port of the reservoir. The pressure fluid from each pump passes through a check valve to the dual filter and relief valve.
- (3) The fluid enters the dual filter and relief valve through the relief valve chamber. The fluid is passed through the filter element, through a manifold, and through a common outlet port. Fluid from the outlet port is routed through a check valve to the system selector valve. If back pressure in the system builds up to approximately

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

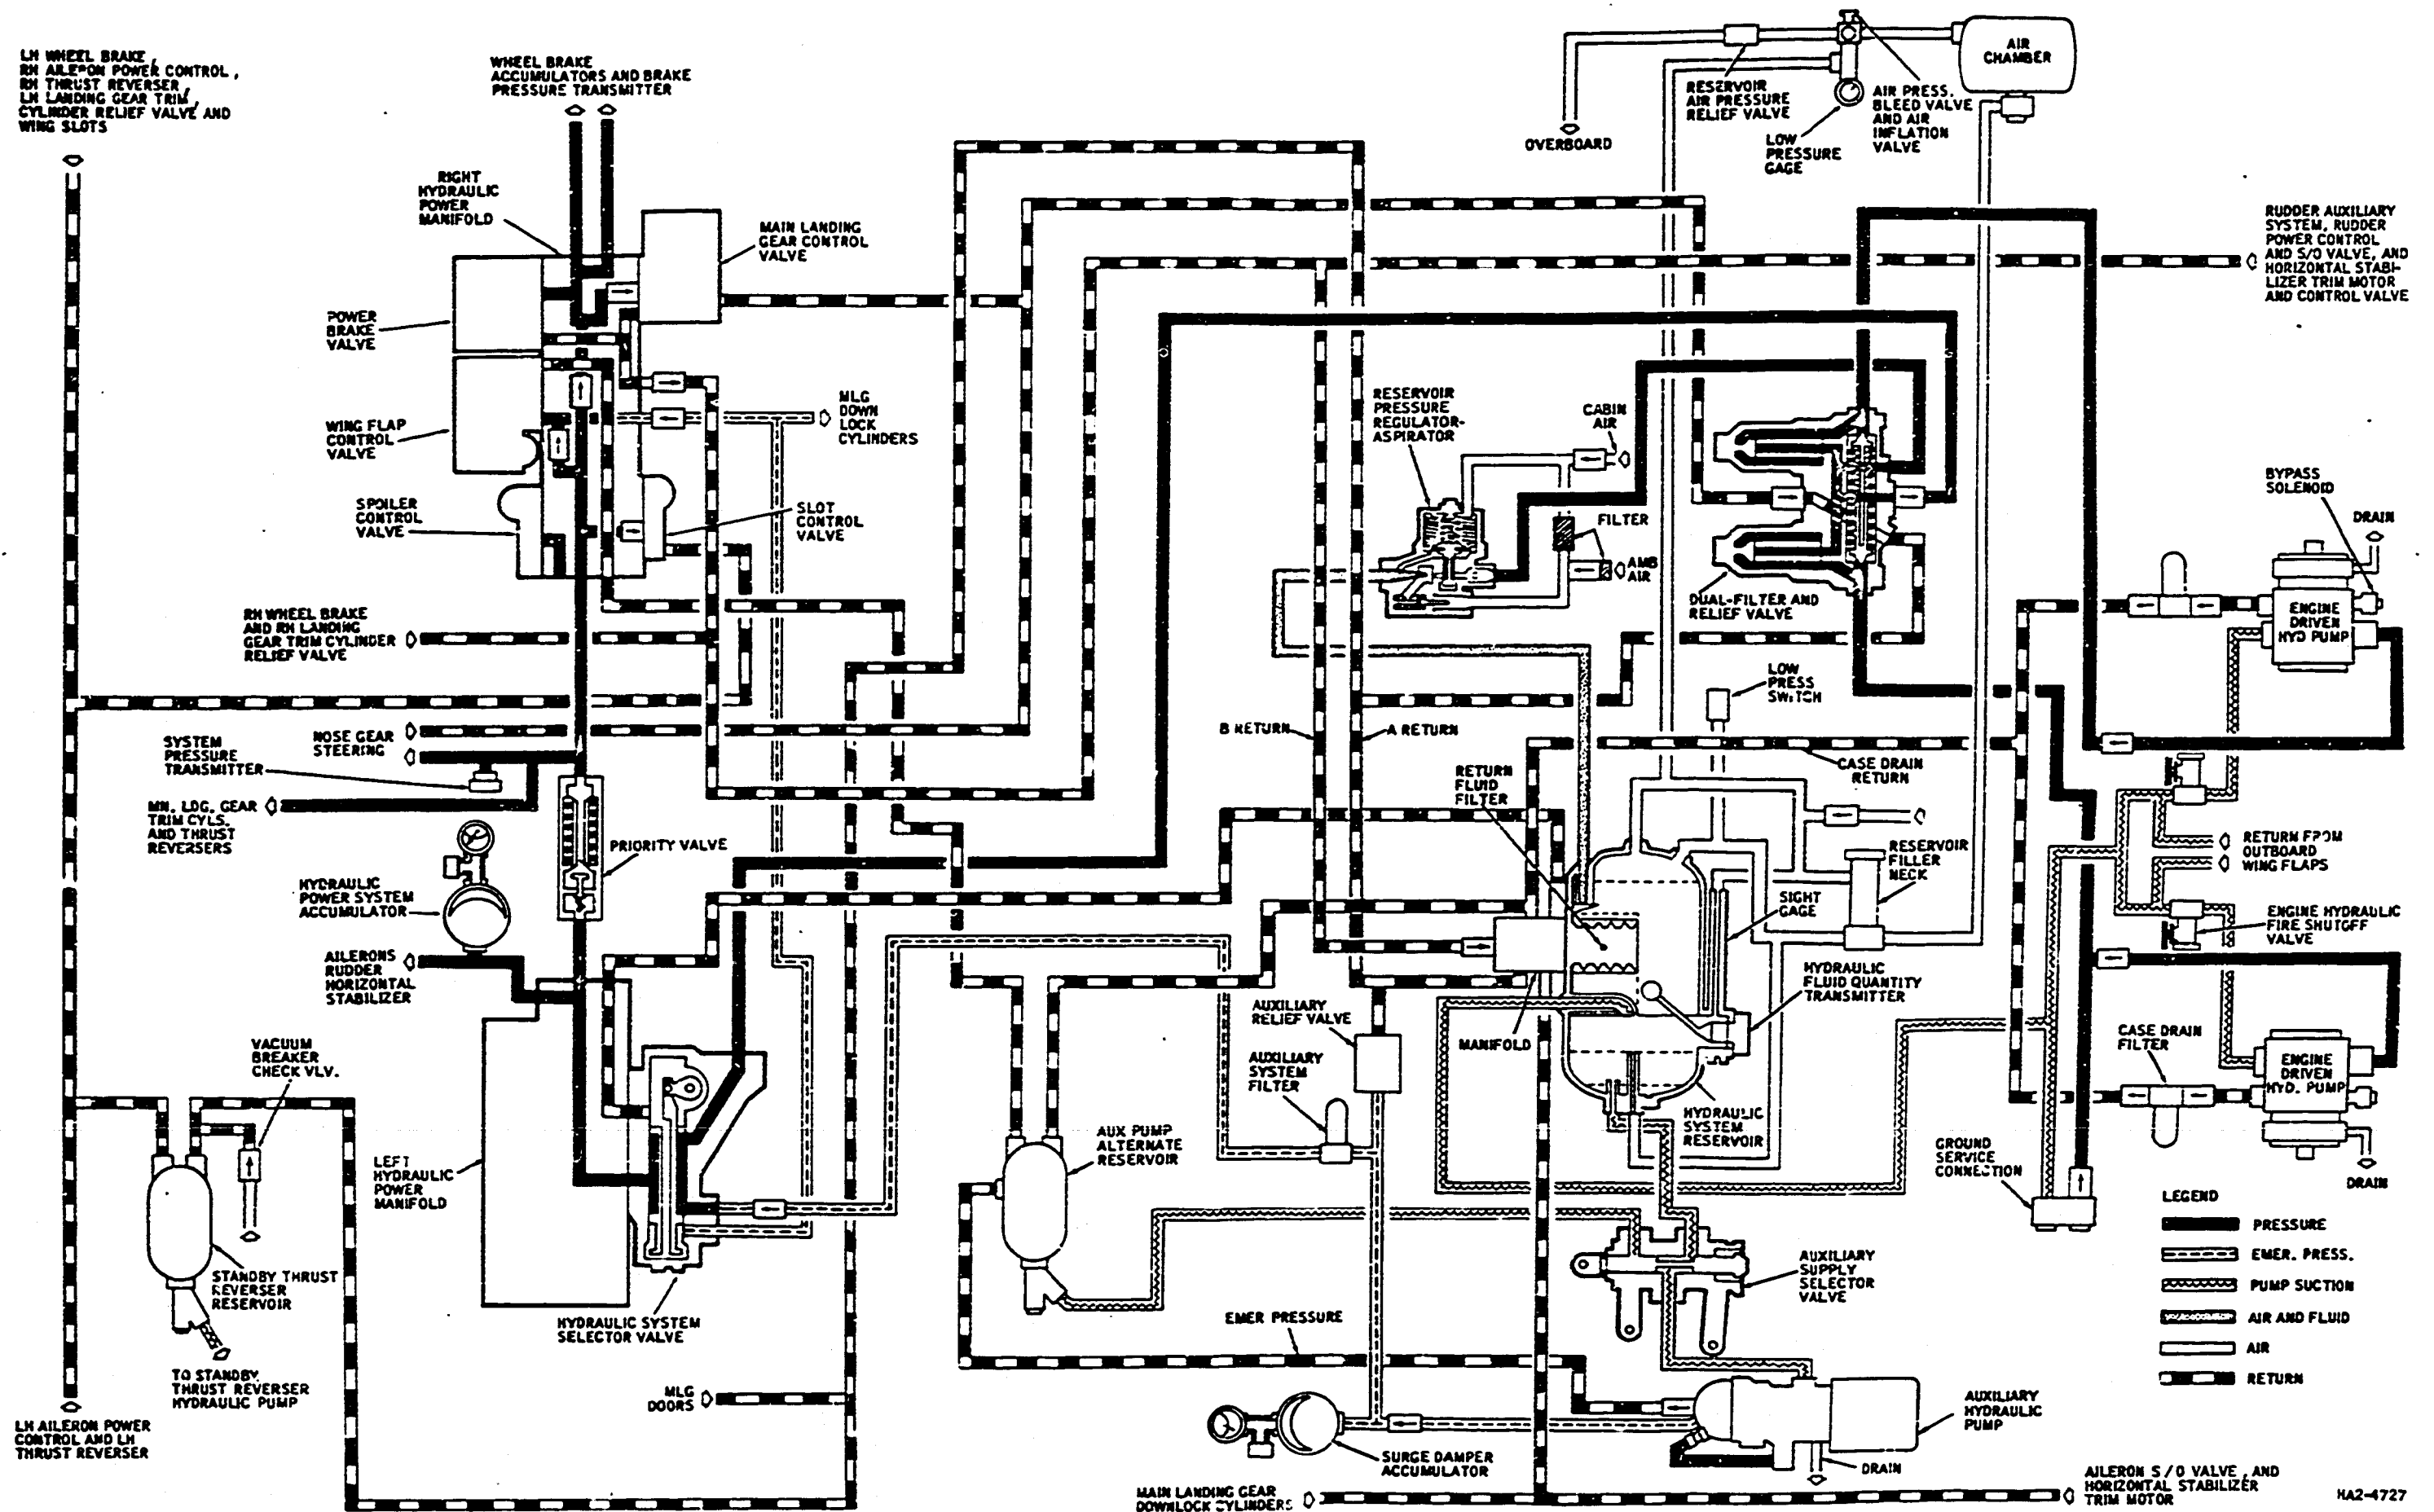

Hydraulic Power System -- Schematic Diagram  
 Figure 1


29-10-0  
 CODE 24  
 Page 3

Jan 15/68

Printed in U.S.A.

HA2-4727

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

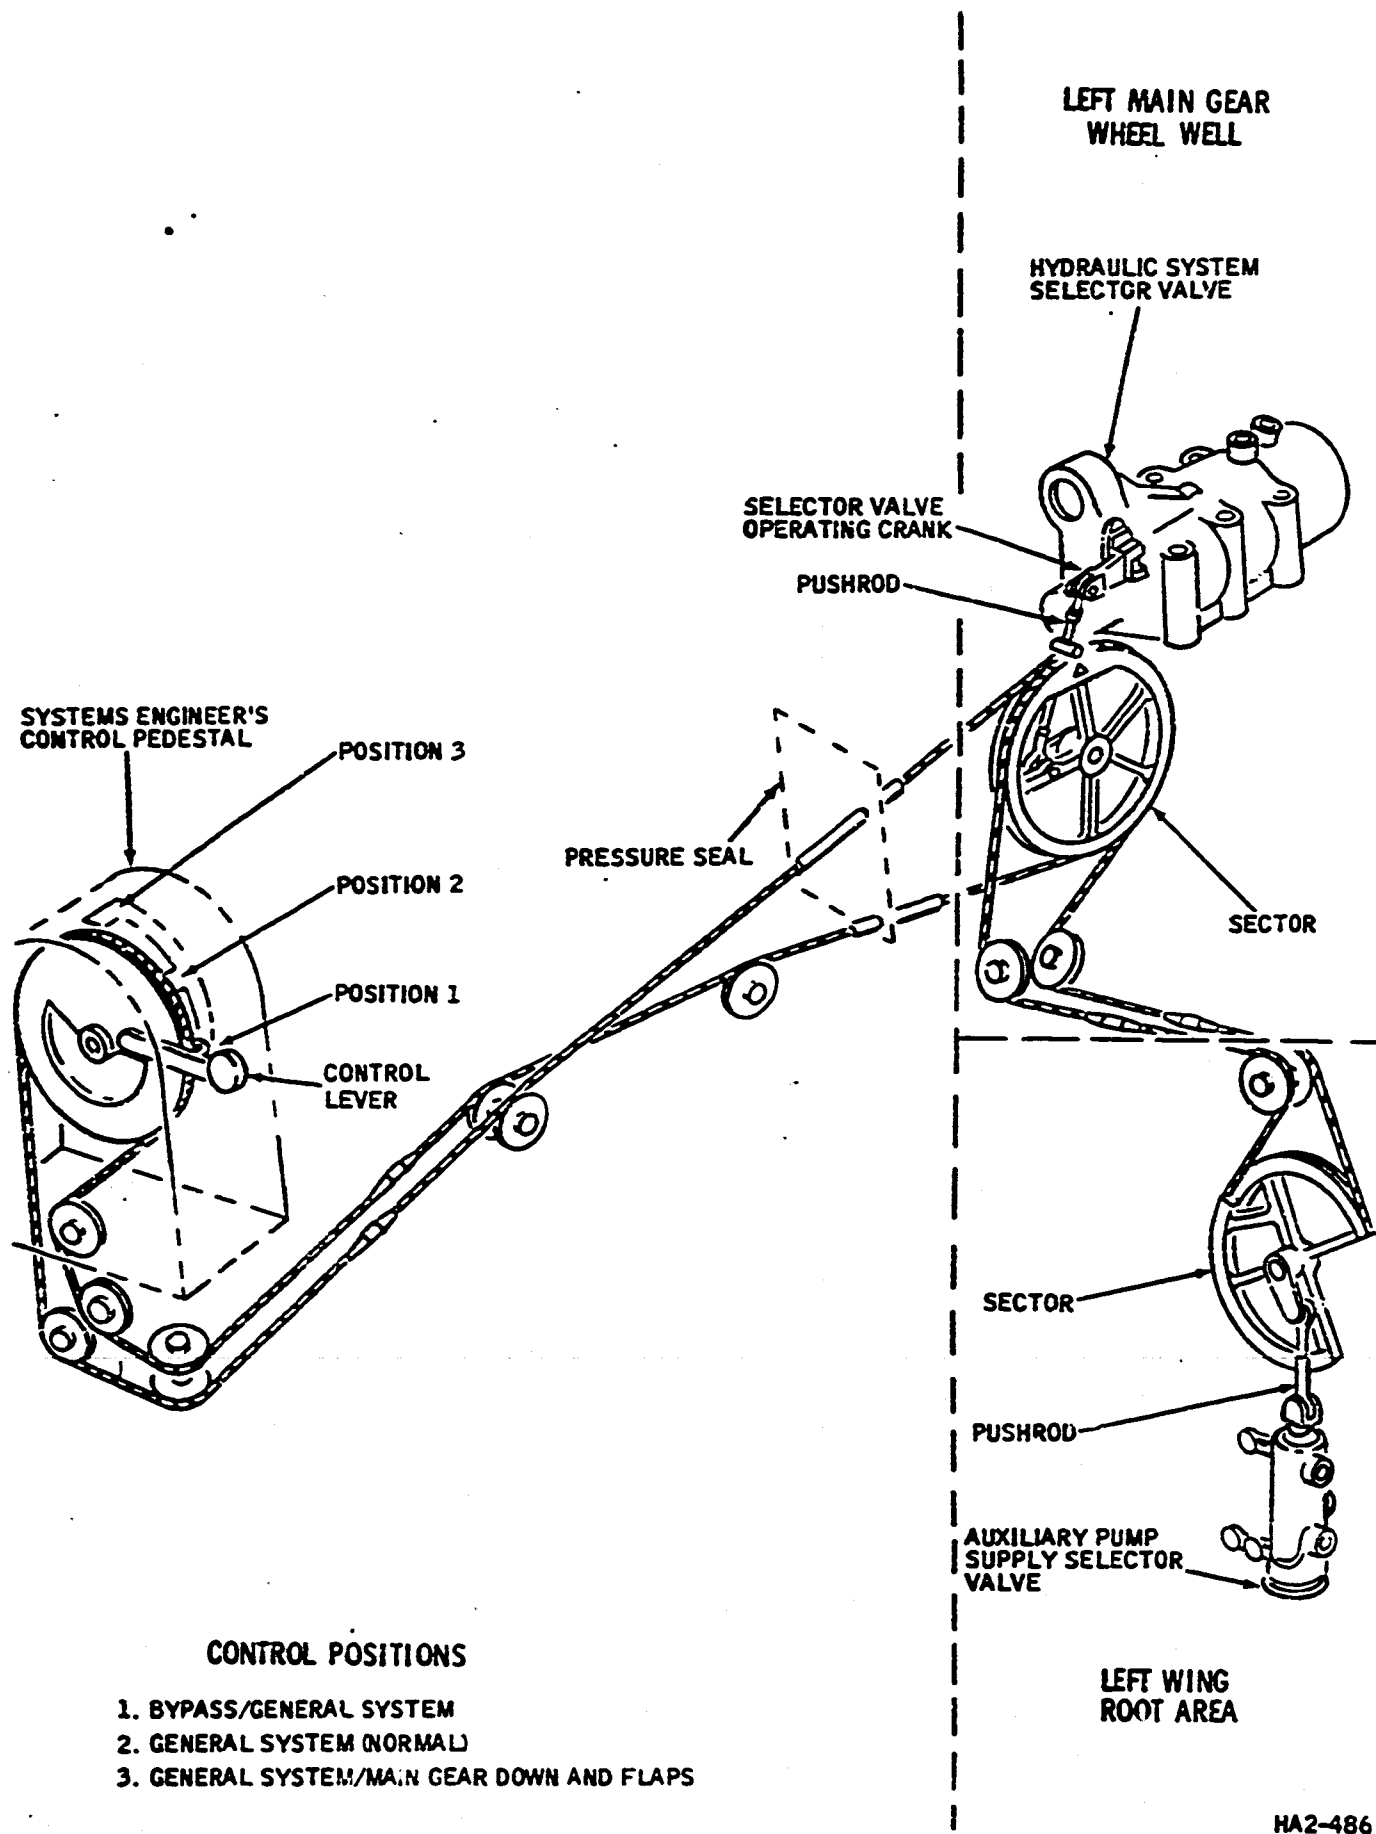

Hydraulic System Selector and Auxiliary Pump Supply  
 Selector Valves -- Mechanical Control Schematic  
 Figure 2

HA2-486

Jan 15/68

Printed in U.S.A.

29-10-0  
 CODE 24  
 Page 5



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

3300 psi, the relief valves in the dual filter and relief valve open and port fluid back to the reservoir via a return port. The relief valve poppet closes again when system pressure drops to approximately 3000 psi.

- (4) The aspirator receives filtered fluid (bleed pressure at nominal 3000 psi) from the dual filter and relief valve. The aspirator operates on the jet pump principle. Hydraulic fluid is atomized and mixed with air within the unit by a nozzle and a venturi. The mixture is used to pressurize the reservoir and reservoir air chamber. The regulator diaphragm maintains a pressure range of 30 to 35 psi in the reservoir and air chamber. If there is a regulator malfunction, the aspirator stalls when the outlet pressure reaches a maximum of 40 psi. A reservoir relief valve in the reservoir vent line relieves thermal expansion pressure above 45 (+5, -0) psi.
- (5) Pump pressure fluid enters the system selector valve through the system pressure inlet port. When the pump selector control lever is in the general system (normal) position, fluid is ported to the pressure passages of the left power manifold. The fluid pressure in the left power manifold is ported through the priority valve to the nose gear and the right power manifold and directly to the following valves:
  - (a) Aileron power shutoff
  - ( ) Rudder power shutoff
  - (c) Longitudinal trim hydraulic motor shutoff
- (6) The right power manifold distributes fluid pressure to the brake accumulators, the pressure transmitter, and the following control valves:
  - (a) Wing flap
  - (b) Slot
  - (c) Main gear
  - (d) Power brake
- (7) The return fluid from the wing flap control valve is ported through the right power manifold and into the auxiliary hydraulic pump alternate reservoir. Return fluid from the outboard wing flaps is piped into the suction lines for each engine-driven hydraulic pump. Return fluid from the slot control valve is ported into the A return line to the main reservoir. The power brake and main gear control valve gear up return fluid is ported through a restrictor check valve into the B return line to the reservoir. The main gear control valve gear down return pressure bypasses the right manifold and returns to the reservoir through the A return line. All return fluid entering the

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

reservoir is filtered through the return ports filter located within the reservoir.

C. Bypass Operation

- (1) The output of the engine-driven hydraulic pumps is bypassed by moving the system selector control lever out of the general system (normal) position to the bypass/general system position.
- (2) The system selector valve in the bypass position ports engine-driven pump pressure from the dual filter and relief valve directly to the return passage of the left power manifold. From the manifold the fluid is ported directly to a tee in the wing flap return port of the hydraulic system reservoir. In the bypass condition, the auxiliary hydraulic pump receives fluid from the hydraulic system reservoir, pressurizes it to system pressure and ports it to the left and right power manifolds for distribution to the subsystems.

D. Alternate Operation

- (1) When both engine-driven hydraulic pumps and the auxiliary hydraulic pump are rendered inoperative due to the loss of the normal supply of fluid, the hydraulic power system can be rigged for alternate operation. This is accomplished by placing the system selector control lever in the general system/main gear downlock and flaps position. When the system selector control lever is in this position, the auxiliary hydraulic pump supply selector valve is positioned to supply fluid from the auxiliary pump alternate reservoir to the auxiliary pump.
- (2) Fluid is supplied to the auxiliary pump from the outlet port of the auxiliary pump supply selector valve. Output pressure is ported through the auxiliary system filter and check valve to the auxiliary pressure inlet port of the system selector valve.
- (3) In the general system/main gear downlock and flaps position, auxiliary pressure bypasses the manifold pressure passages and is ported from the alternate outlet port of the system selector valve. Fluid from this port flows directly to a port on the right power manifold, through an internal check valve in the manifold, to the wing flap control valve.

E. Mechanical Control

- (1) The hydraulic power mechanical control system consists of the hydraulic system selector control lever cable drum, the system selector valve sector, the system selector valve, the auxiliary hydraulic pump supply selector valve sector, and the auxiliary hydraulic pump supply selector valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


- (2) The control lever located on the system engineer's control pedestal is used to position the system selector valve and, in turn, the auxiliary hydraulic pump supply selector valve.
- (3) The control lever is spring loaded into general system (normal) position, and is connected to the control lever cable drum. Two cables run from the drum, under the cabin floor, aft through the pressure bulkhead at the rear wing spar, and into the left wheel well to the system selector valve sector. A pushrod connects the sector to the positioning lever of the system selector valve.
- (4) A second set of cables is routed from the system selector valve sector into the left wing root to the auxiliary hydraulic pump supply selector valve sector. When the system selector valve is in either bypass or normal, the auxiliary hydraulic pump supply selector valve sector is arranged so that the pushrod idles between the two positions. This allows the valve to remain in the auxiliary position. When the sector is moved to the alternate position, the pushrod is pulled by the sector to reposition the valve to the alternate position.
- (5) The control lever is normally in the general system (normal) position. To move the system selector valve to the bypass position, the control lever is moved to the bypass/general system position. When the system selector valve is moved to the bypass position, the auxiliary hydraulic pump supply selector valve sector is moved to a new position. Due to the idle feature on the auxiliary sector, the valve remains in the auxiliary position. With the valve in this position, fluid is supplied to the auxiliary pump through the low standpipe in the hydraulic system reservoir. In this condition, engine-driven pump pressure is ported to the reservoir and the auxiliary pump pressure is ported to the general system.
- (6) To put the system in alternate operation, the control is moved to the general system/main gear downlock and flaps position. This moves the system selector valve to the alternate position, and simultaneously moves the auxiliary hydraulic pump supply selector valve to the alternate position. Fluid is supplied to the auxiliary pump from the auxiliary hydraulic pump alternate reservoir. Fluid pressure from the auxiliary pump is ported to the flap system control valve and the main gear downlock cylinders. Engine-driven pump pressure is ported from the system selector valve to the general system.

## 2. System Components

### A. Hydraulic System Reservoir (See Figures 3 and 4.)

- (1) The hydraulic system reservoir is installed on the aft side of the wing spar in the left wing root and is accessible through the left wing root access door. The hydraulic system reservoir serves as the main source of hydraulic fluid for the engine-driven hydraulic pumps and the normal

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

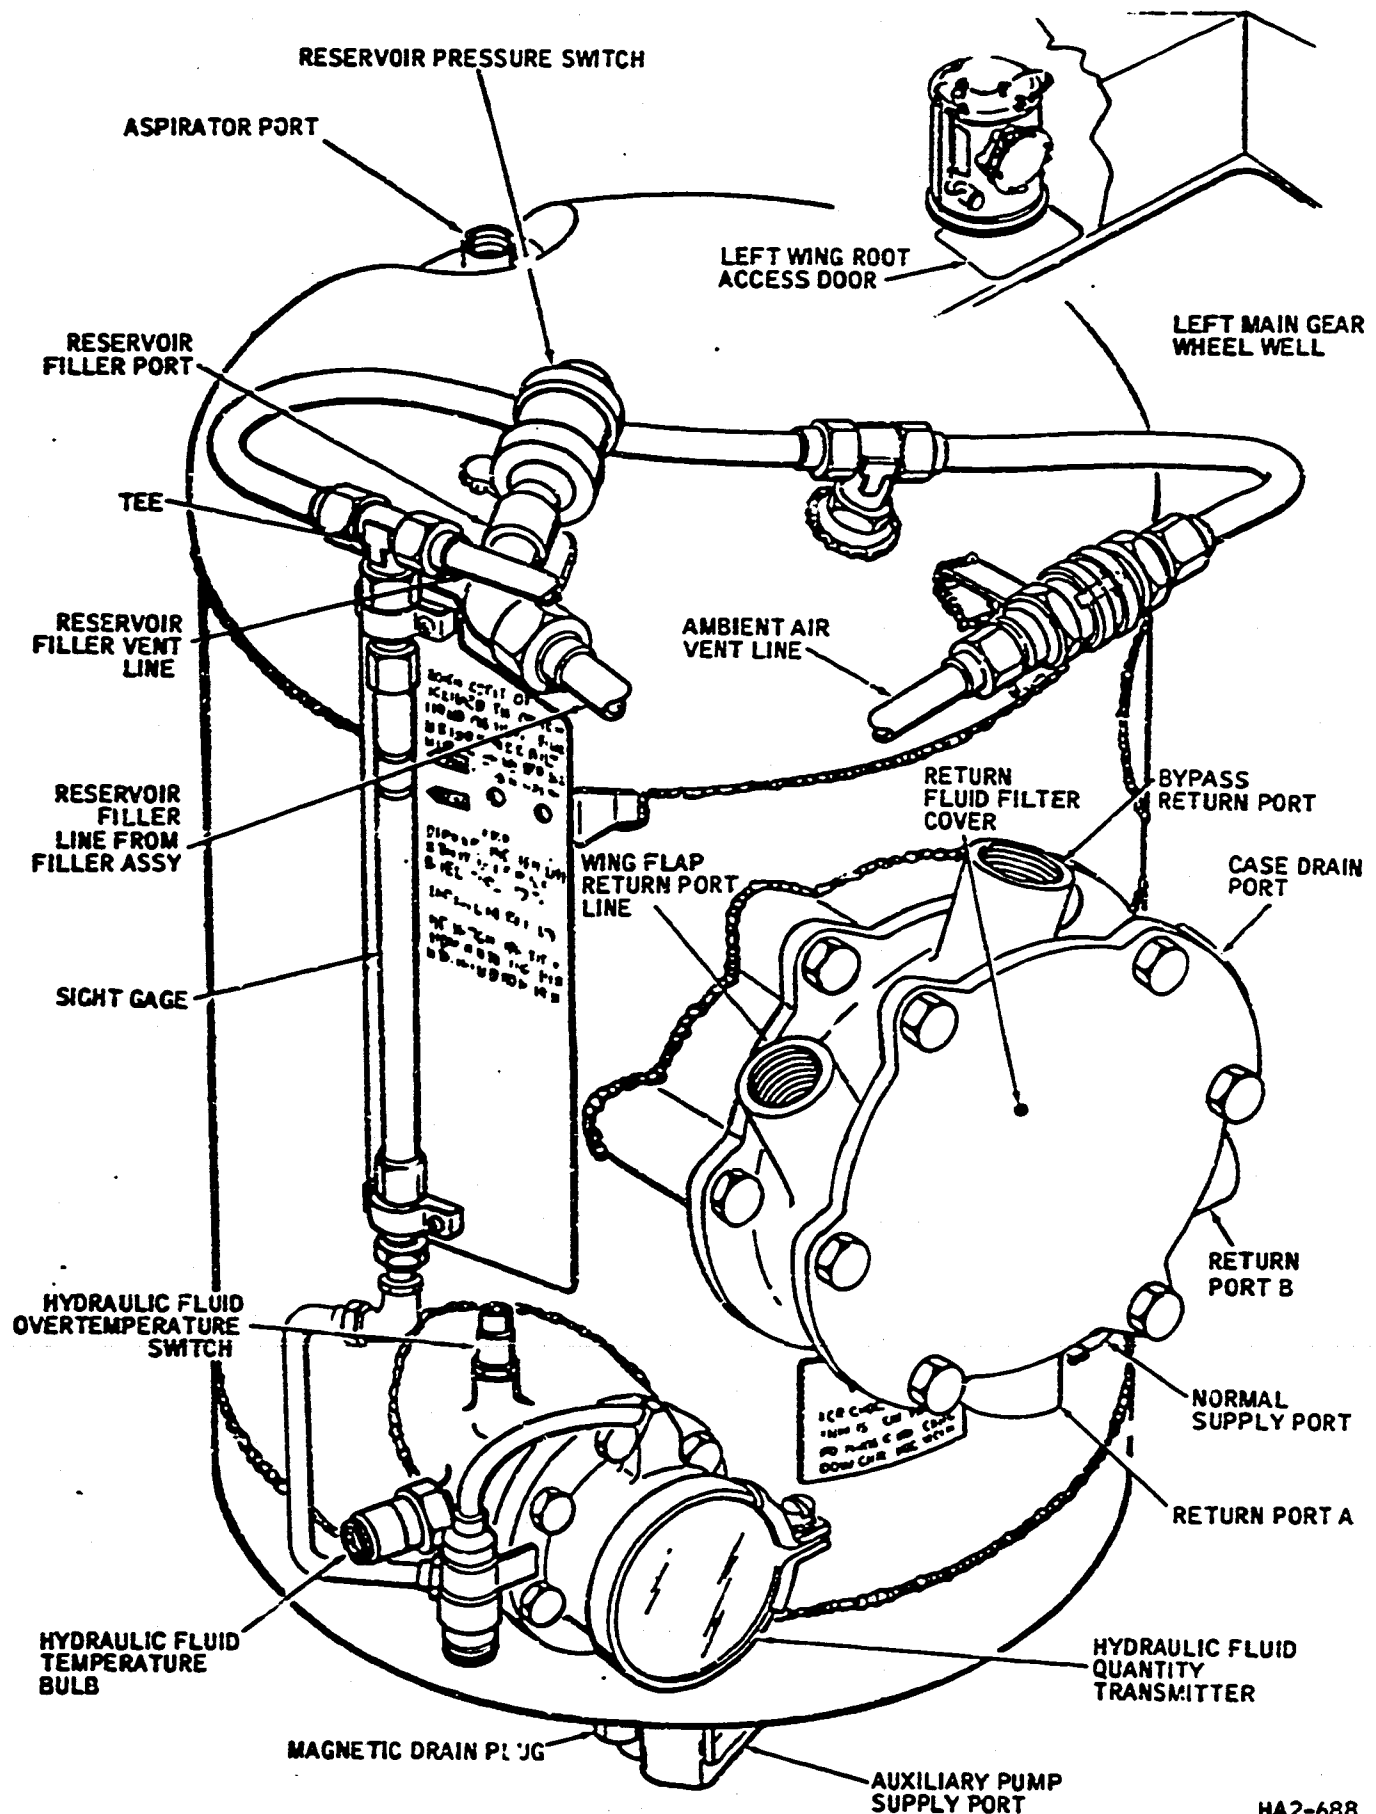

Hydraulic System Reservoir -- External View  
 Figure 3


HA2-688

29-10-0  
 CODE 24  
 Page 9

Jan 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

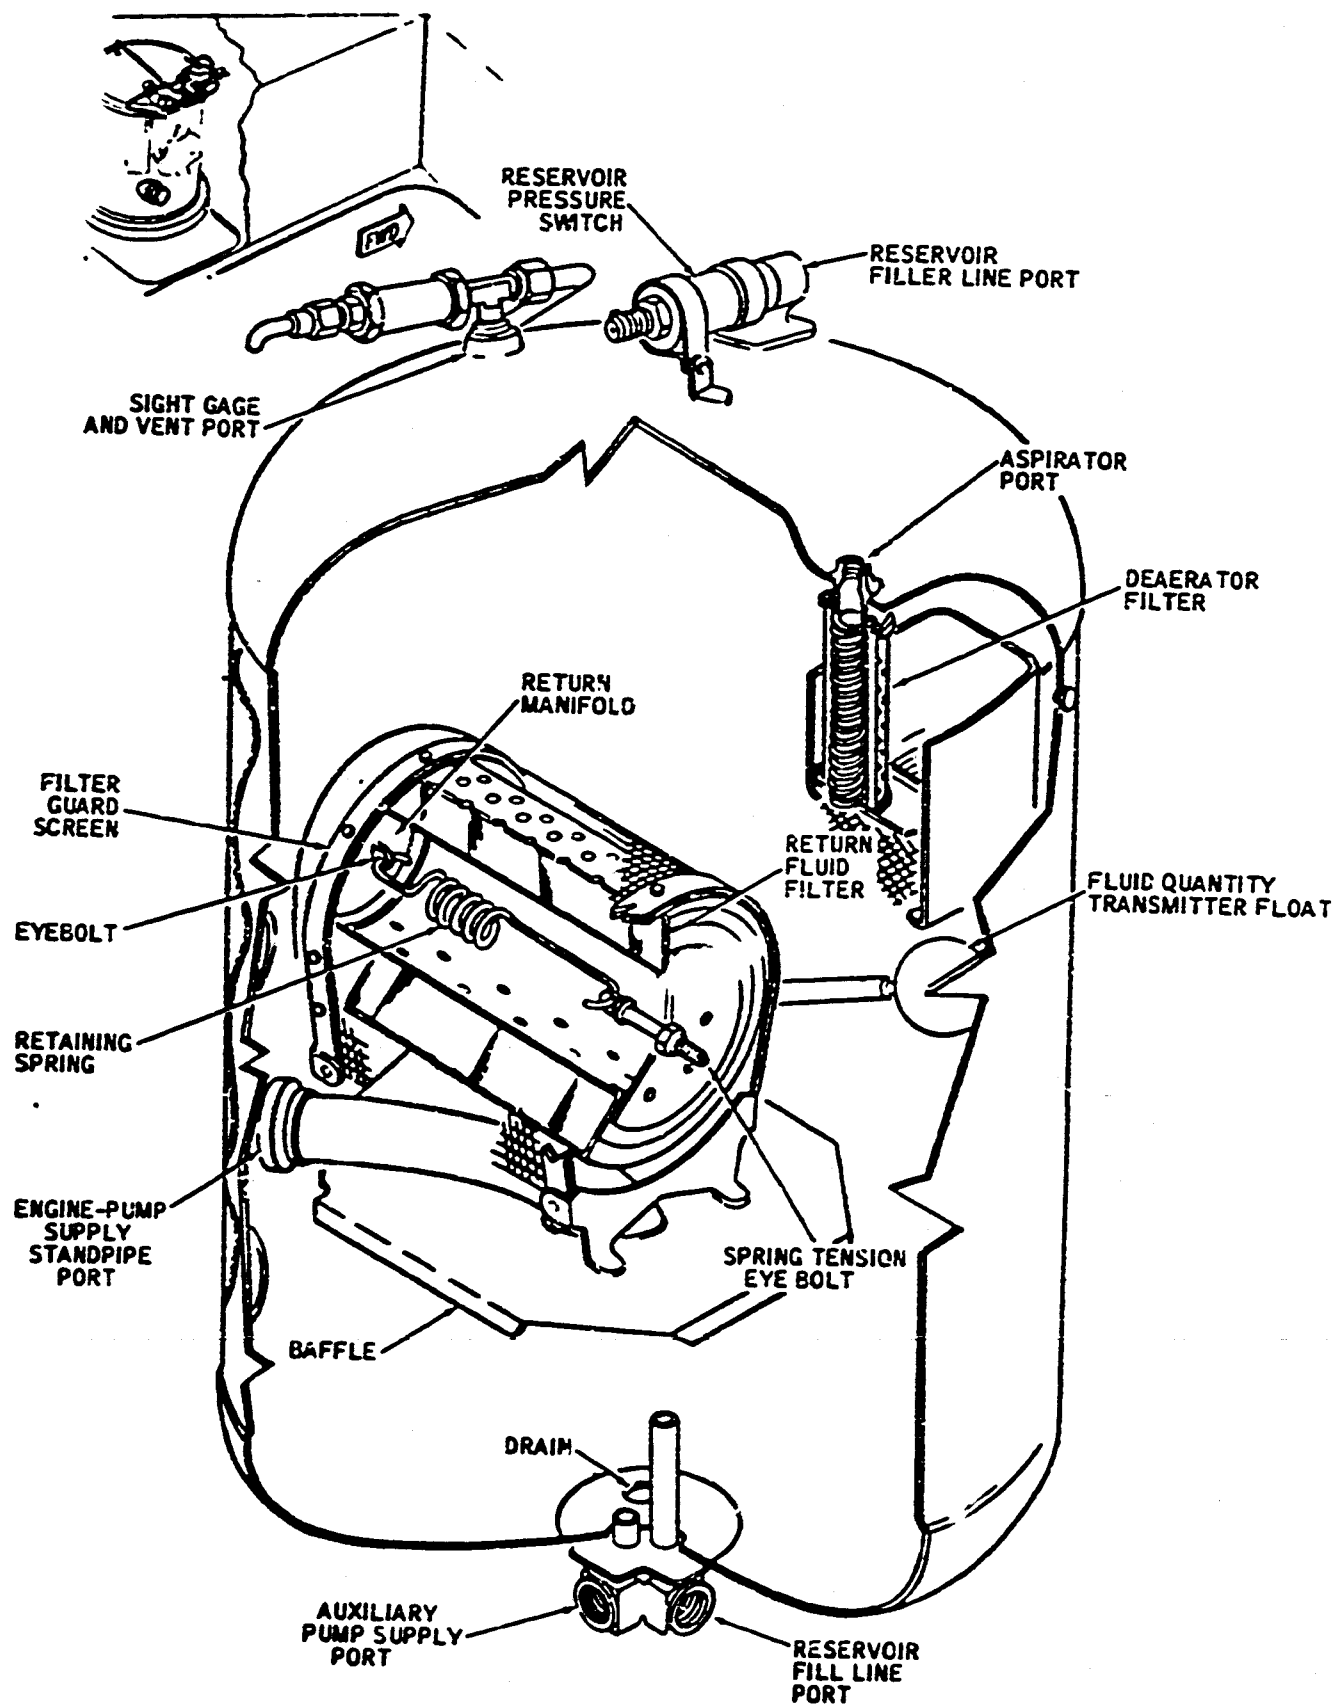

HA2-689

29-10-0  
 CODE 24  
 Page 10

Hydraulic System Reservoir -- Cutaway View  
 Figure 4

Printed in USA

Jan 15/68

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

supply for the auxiliary hydraulic pump. The reservoir is cylindrical in shape and contains a filter, baffle, and a screen cover encasing the filter. The filter prevents foreign particles from contaminating the fluid supply. Mountings are provided on the exterior surface of the reservoir for return line ports, aspirator port, electrical sensing units, sight gage, instruction placards, magnetic drain plug, and system supply ports.

- (2) The reservoir is pressurized with air from the regulator-aspirator to a range of 30 to 35 psi and has a total volume of approximately 14.4 US gallons (11.9 Imperial gallons; 54.5 liters). Approximately 9/10 of the reservoir volume is used for fluid and 1/10 is used for foam space.
- (3) The aspirator port through which the reservoir is pressurized is located in the recess on top of the reservoir. An aspirator-deaerator filter is supported in the reservoir by a screen and support box assembly which is mounted to the reservoir wall by two bolts.
- (4) The mounting flange for the return ports manifold is welded to the inboard side of the reservoir. The return ports manifold is an open-centered ring, flanged at both sides and provided with five fluid ports around its circumference; return port A is located at the bottom, return port B is located at the lower right side, the wing flap return port is located at the upper left side, and the system selector valve bypass port is located at the top. One flange of the manifold is mounted with six bolts to the mounting flange on the reservoir. The return fluid filter cover fits into the open side of the manifold, and is attached to the outer manifold flange with six bolts to form a fluid-tight cover for both the manifold and the filter.
- (5) The return fluid filter is installed in the reservoir, behind the return ports manifold. A retaining spring attached to an eyebolt on the inner side of the return fluid filter cover holds the filter in position. A baffle plate is welded to the inside of the reservoir opening and to the engine pump supply standpipe within the reservoir. A screen that reduces aeration of the fluid is snap-mounted to two brackets that are welded to the baffle. The screen is U-shaped and is mounted so that it encloses the filter.
- (6) A flanged adapter for the fluid quantity transmitter is welded to the reservoir below and to the left of the return ports manifold. The adapter is provided with two small port bosses for the hydraulic fluid temperature bulb and the hydraulic fluid overtemperature switch. The lower end of the sight gage connects to a third port in the adapter, while the top of the sight gage tees into a port at the top of the reservoir. An instruction plate is mounted behind the sight gage and the vacuum breaker check valve tees into the port at the top of the reservoir that is used by the sight gage.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


B. Hydraulic Reservoir Return Fluid Filter (See Figure 4.)

- (1) The reservoir return fluid filter is installed in the hydraulic reservoir to prevent foreign matter from contaminating the fluid supply. The filter is located behind the return ports manifold, and is spring loaded to act as its own relief valve. Access to the filter is by removing the return fluid filter cover from the return ports manifold by removal of six bolts. The filter is attached by the retaining spring to the cover and is withdrawn from the reservoir when the cover is removed.
- (2) Externally, the filter consists of two perforated concentric tubes. The area between the tubes is closed by metal end caps which are bonded to the two tubes. A resilient rubber gasket is bonded to each of the caps. Each gasket must be smooth and flat for proper sealing of the filter. The gaskets act as a static seal and a relief valve seat.
- (3) Internally, the filter has a 10-micron, resin-impregnated convoluted paper-type filter element. The area of the filter element is approximately 1960 square inches. The filter is held in place by a retaining spring. One end of the spring is attached to an eyebolt located inside the return port's manifold cover. The spring passes through the center chamber of the filter and is connected to another eyebolt. This eyebolt is secured to a large washer and plate by means of a self-locking nut. The washer seats on the rubber gasket which is bonded to the filter. The fluid enters the center chamber of the filter and passes through the inner tube of the filter to the filter element by means of perforation holes. Foreign matter is filtered out by the filter element, and the fluid leaves the element through perforation holes in the outer tube. When the element becomes saturated with foreign matter, the filter acts as its own relief valve and unseats at 20 to 25 psi above normal return pressure which allows fluid to bypass the filter and enter the reservoir.

C. Hydraulic Reservoir Air Pressure Regulator-Aspirator (See Figure 5.)

- (1) The reservoir air pressure regulator-aspirator is a jet-type air pump, regulated by a pressure-sensitive shutoff valve. The unit pressurizes the hydraulic reservoir with air to the operating pressure range of 30 to 35 psi. The regulator-aspirator is located on the top inboard side of the reservoir and is mounted on the reservoir retainer ring. Access to regulator-aspirator is through the left wing root access door.
- (2) The regulator-aspirator assembly consists of a main aspirator body and a regulator housing. The main aspirator body has two inlet ports and one outlet port. The ports are permanently identified inlet, outlet, and air inlet. The plug for an air check valve is located near the outlet port. A chemically treated paper filter is installed near the aspirator body air inlet port in the air line from the pressurized

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

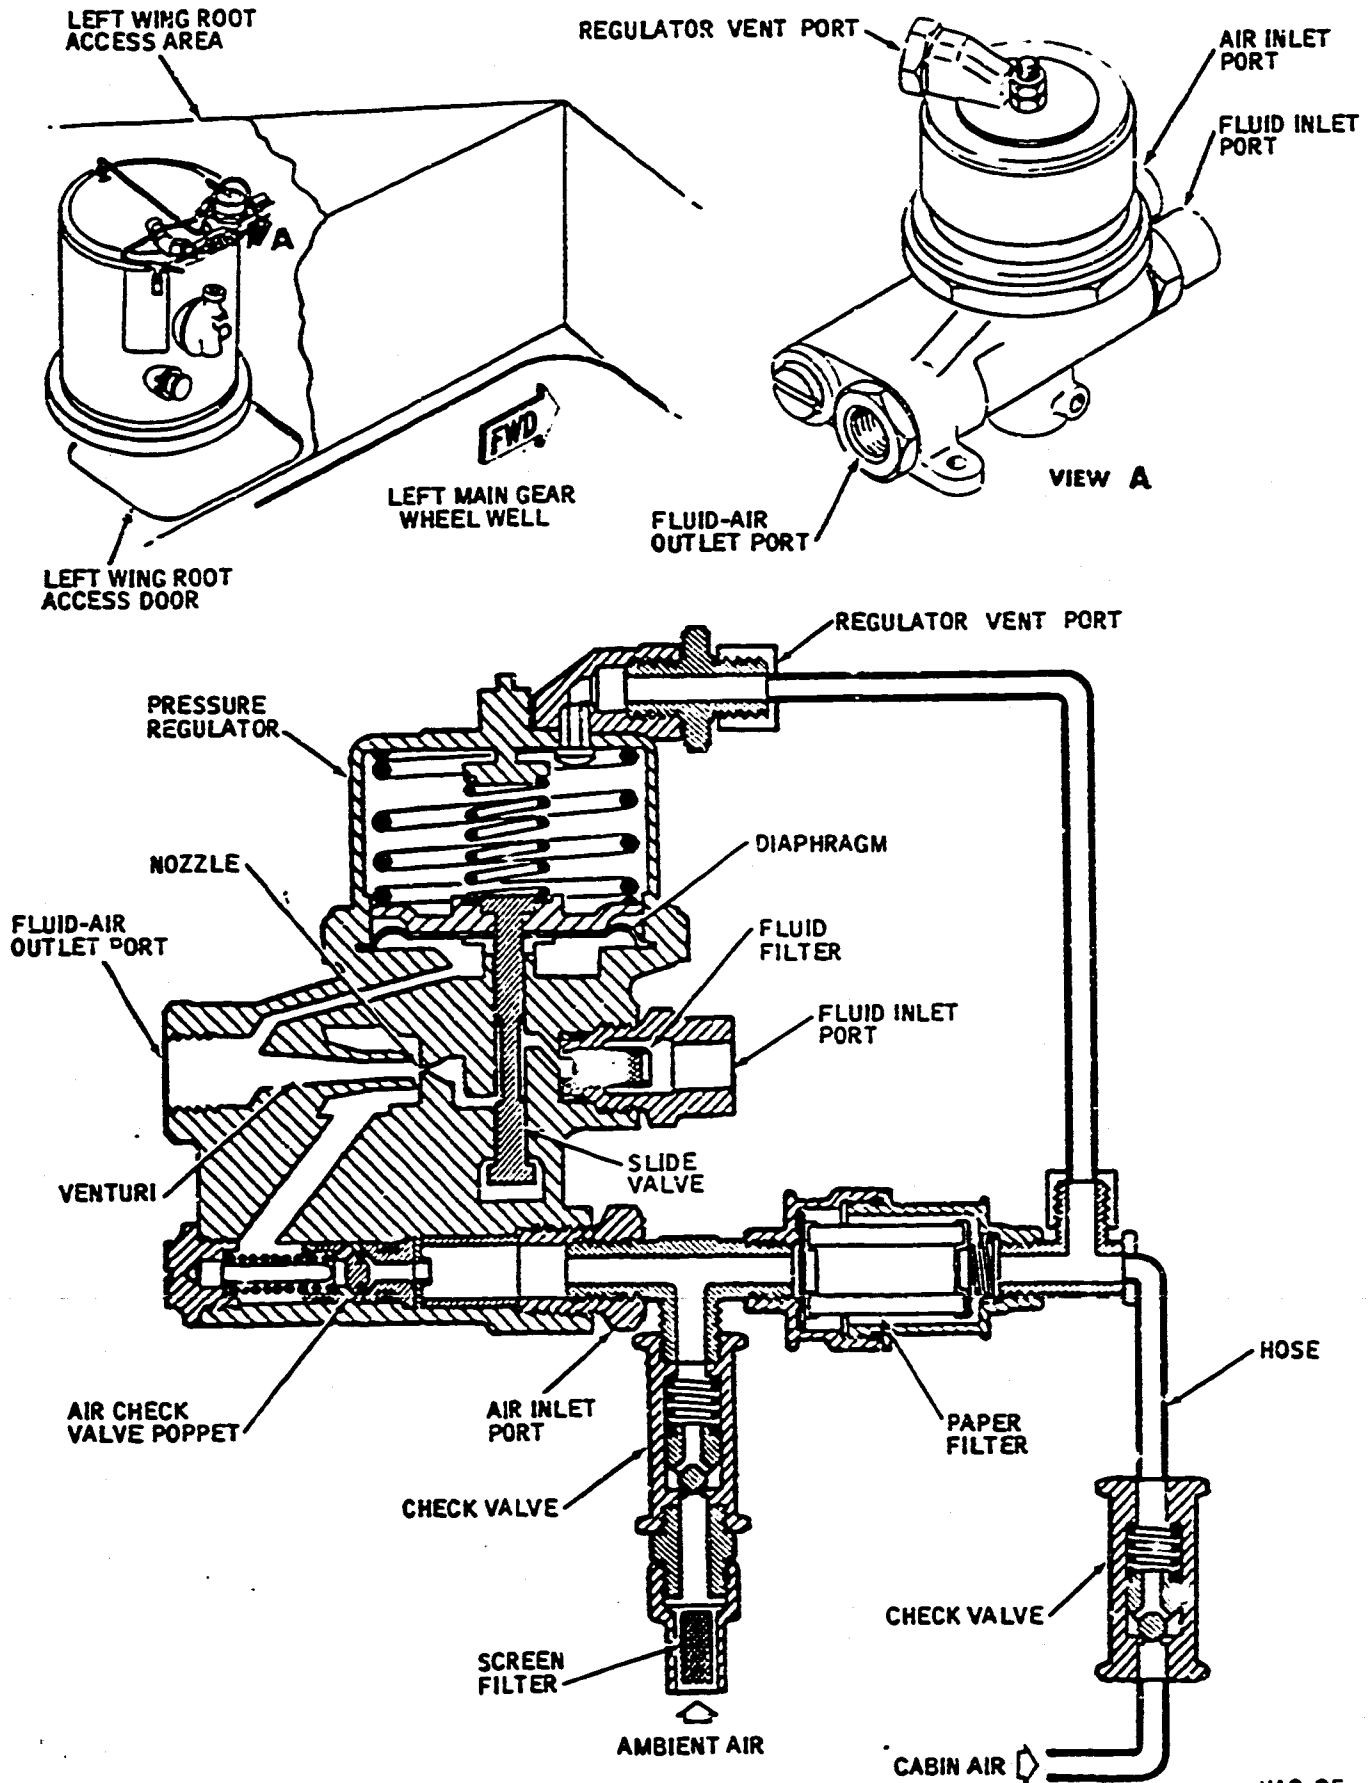

HA2-25

Reservoir Air Pressure Regulator-Aspirator -- Schematic  
 Figure 5

Jan 15/68

29-10-0  
 CODE 24  
 Page 13



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL


cabin area. A metal screen filter is installed on the check valve which tees into the aspirator body air inlet port.

- (3) The reservoir air pressure regulator-aspirator operates basically with a jet pump action which is regulator controlled. Fluid enters the assembly through the fluid inlet port where it is filtered and then ported through the valve assembly of the regulator. During normal operation, when air pressure at the outlet port is under 30 psi, the valve is open, porting fluid to the nozzle. The orifice in the nozzle sprays the fluid through the venturi of the outlet port, creating a vacuum in the chamber around the venturi. When the vacuum becomes great enough to create a pressure differential of approximately 1 psi, ambient air opens the air check valve. The air is ported to the chamber around the venturi and is siphoned, with the fluid, through the outlet port.
- (4) Hydraulic fluid inlet pressure at the engine-driven hydraulic pumps is improved at high altitude operation by supplying pressurized filtered cabin air to the reservoir regulator-aspirator instead of ambient outside air. Part of the inlet air is diverted by a tee fitting to the regulator chamber to provide a more positive regulating force on the diaphragm than would be obtained with low ambient pressures. The chemically treated paper filter, installed in the regulator-aspirator air supply line from the cabin, removes smoke tars and impurities from the pressurized cabin air. The steel mesh screen filter, installed on the check valve which tees into the regulator-aspirator air inlet port downstream of the paper filter, removes dust, dirt, and foreign particles from the ambient air and serves as a standby to supply filtered air in event the paper filter is clogged.
- (5) As pressure in the reservoir builds up, back pressure is bled from the outlet port to the diaphragm chamber. The reaction on the diaphragm begins to move the slide valve to cut off the fluid flow. At 30 to 35 psi of back pressure, the diaphragm completely closes the slide valve, cutting off the flow of fluid. If there is a regulator malfunction, the aspirator stalls when outlet pressure reaches a maximum of 40 psi.
- (6) The aspirator is capable of pressurizing the reservoir to 30 to 35 psi in approximately 4 minutes at altitudes from sea level to 15,000 feet, when fluid is ported through the nozzle at 0.5 gpm at 3000 psi.


D. Regulator-Aspirator Air Filters (See Figure 6.)

- (1) The regulator-aspirator air filters remove ambient and cabin air impurities from the air which is used to pressurize the main hydraulic system reservoir. The filtering system is composed of two filters. One of which is a paper element filter, installed directly in the cabin air supply line near the regulator-aspirator. The other filter is a fine mesh, screen-type filter, installed on a check valve and positioned at right angles to the regulator-aspirator air inlet port. The screen filter, in addition to providing an immediate supply of

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

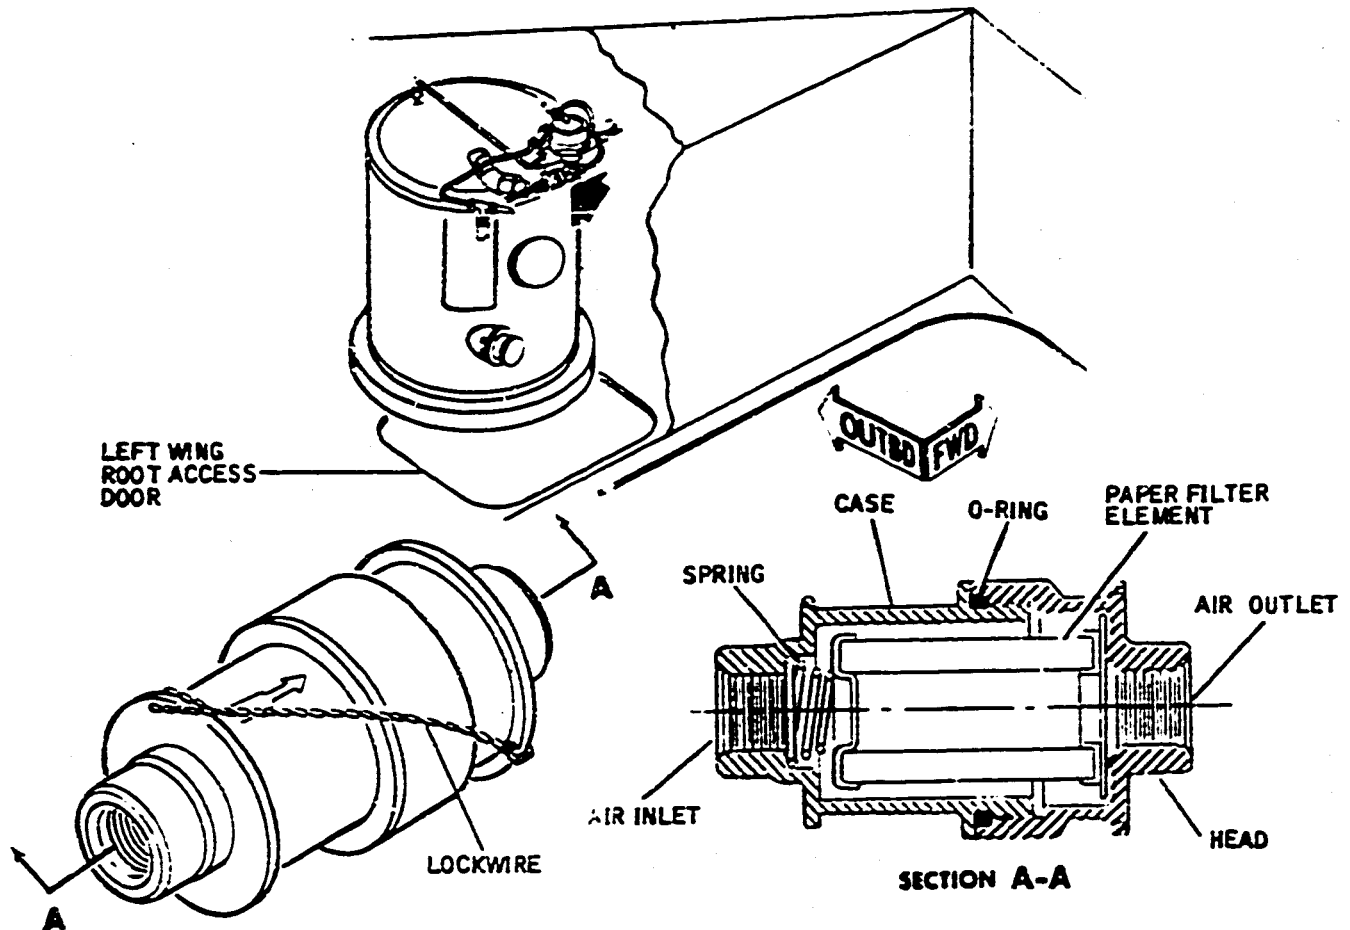

PAPER ELEMENT FILTER

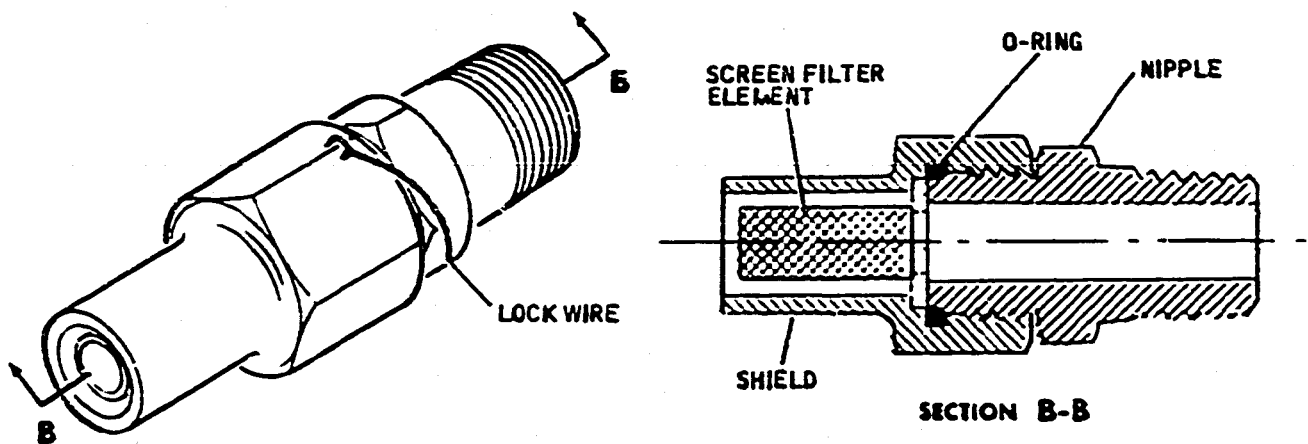

SCREEN FILTER

Regulator-Aspirator Air Filters -- Cutaway View  
 Figure 6

Jan 15/68

Printed in USA

HA2-35

29-10-0  
 CODE 24  
 Page 15

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

ambient air during ground operations, serves as a standby air inlet to preclude air starvation of the regulator-aspirator in the event the paper element filter becomes clogged.

E. Hydraulic Reservoir Relief Valve (See Figure 7.)

- (1) The reservoir relief valve and the air pressure aspirator-regulator keep the reservoir pressurized to normal operating range. The valve relieves excess air pressure which may build up in the reservoir through thermal expansion in the system. The valve has an inlet port and an outlet port and consists, internally, of an inlet port seat and a spring-loaded poppet.
- (2) The relief valve is installed in the overboard vent line downstream of the hydraulic reservoir air bleed valve. In the event that excess pressure builds up in the reservoir, the poppet will start to relieve at 45 (+5, -0) psi. Full flow of 10 gpm is attained at 80 psi maximum. The poppet reseats at 90 percent of the opening pressure.


F. Hydraulic Reservoir Air Bleed Valve (See Figure 8.)

- (1) The hydraulic reservoir air bleed valve and pressure gage are located on the aft side of the rear spar in the left main gear wheel well, inboard of the hydraulic reservoir air chamber. The bleed valve and gage are installed in the overboard vent line, between the reservoir air chamber and the reservoir relief valve.
- (2) The bleed valve is used to relieve the reservoir air pressure prior to disconnecting lines or components in the hydraulic system. The pressure gage provides a ready indication of the hydraulic reservoir air pressure and is used in conjunction with the bleed valve to indicate the air pressure status.
- (3) The air inflation valve is installed on the same fitting as the bleed valve and pressure gage. The air inflation valve is used to manually charge the reservoir with air or dry nitrogen.

G. Hydraulic Reservoir Vacuum Breaker Check Valve (See Figure 9.)

- (1) The hydraulic reservoir vacuum breaker check valve is installed on the regulator-aspirator mounting bracket, and connects to the tee fitting at the top of the reservoir. The valve is vented to ambient air. The purpose of this valve is to maintain atmospheric pressure in the reservoir, allowing hydraulic fluid to flow to the auxiliary hydraulic pump in the event of a failure of the reservoir pressurization system. The failure, or breakdown, of the pressurization system could cause a fluid starvation at the auxiliary hydraulic pump because of vacuum buildup in the reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

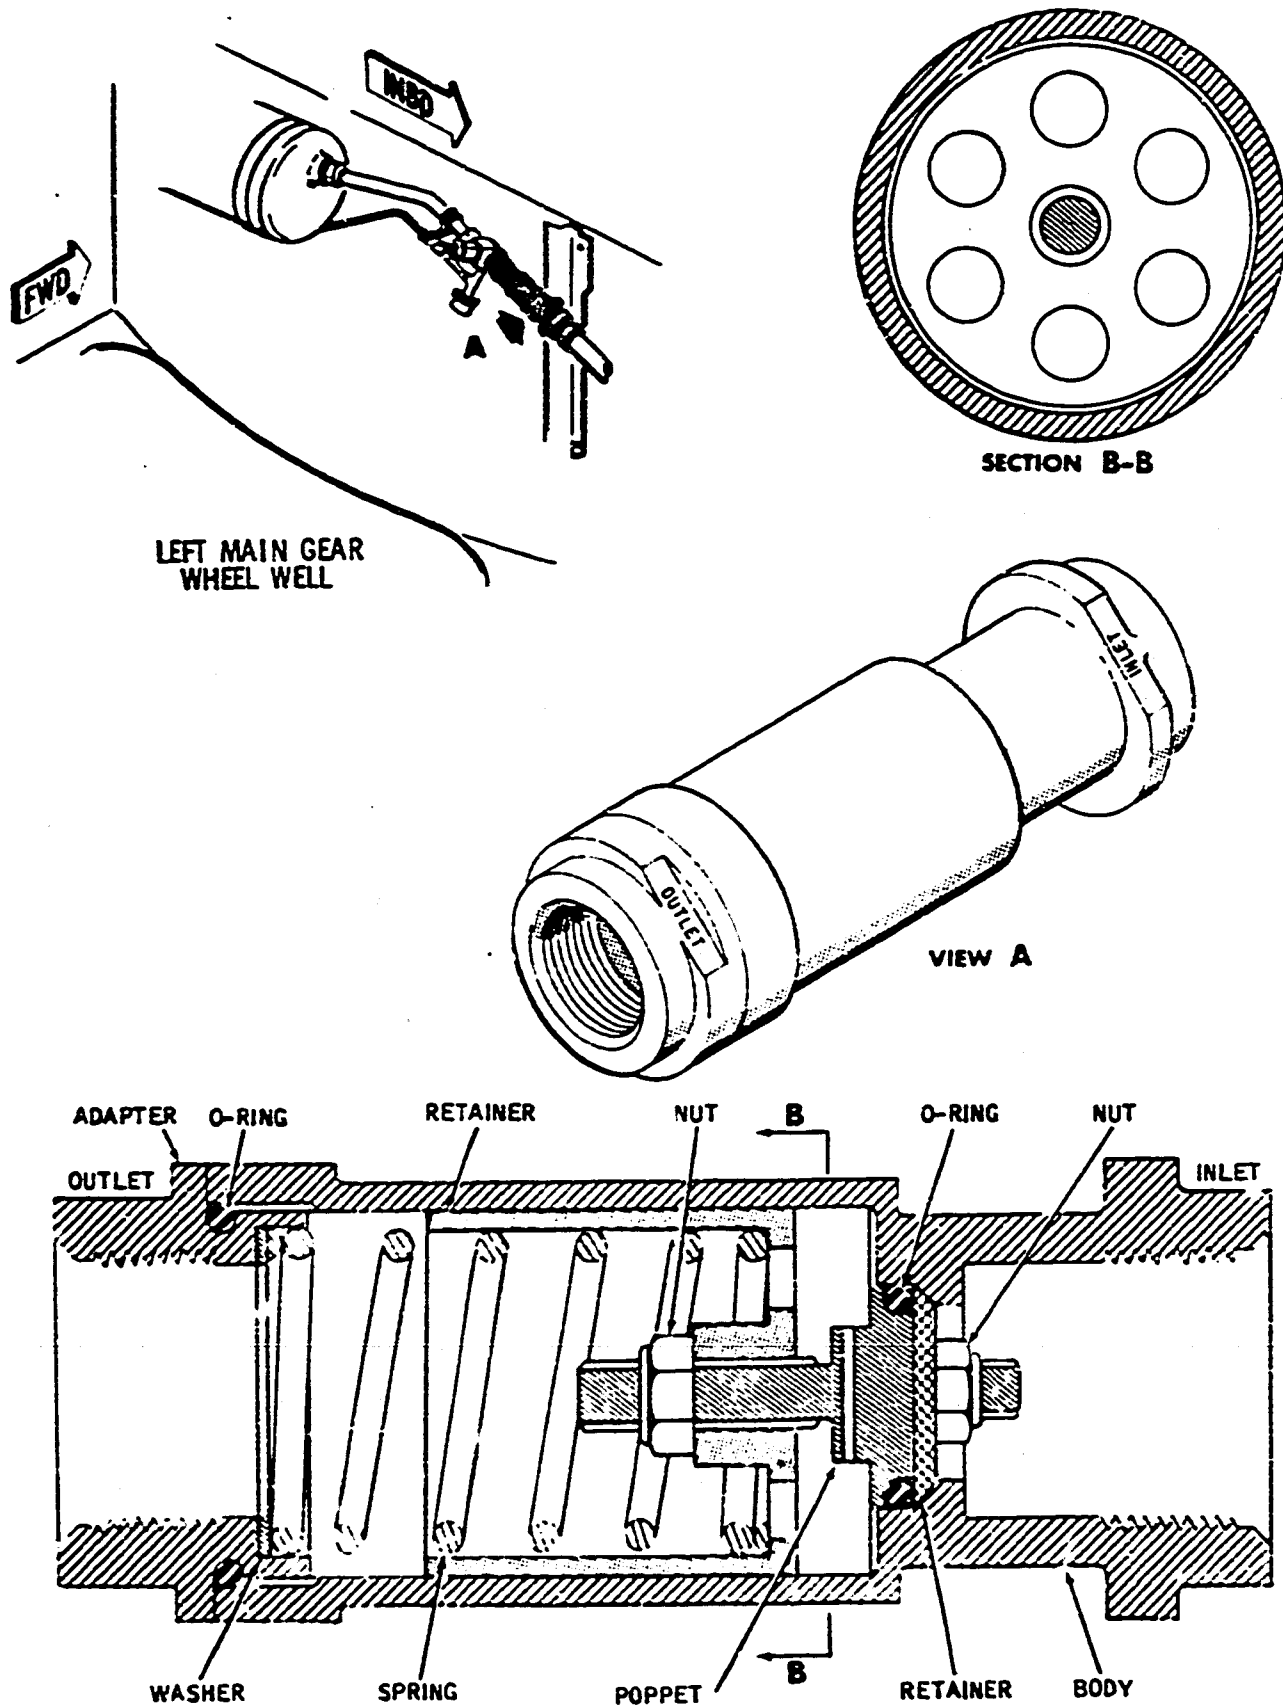

Hydraulic Reservoir Relief Valve  
 Figure 7


Jan 15/68

Printed in U.S.A.

HA2-17

29-10-0  
 CODE 24  
 Page 17


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

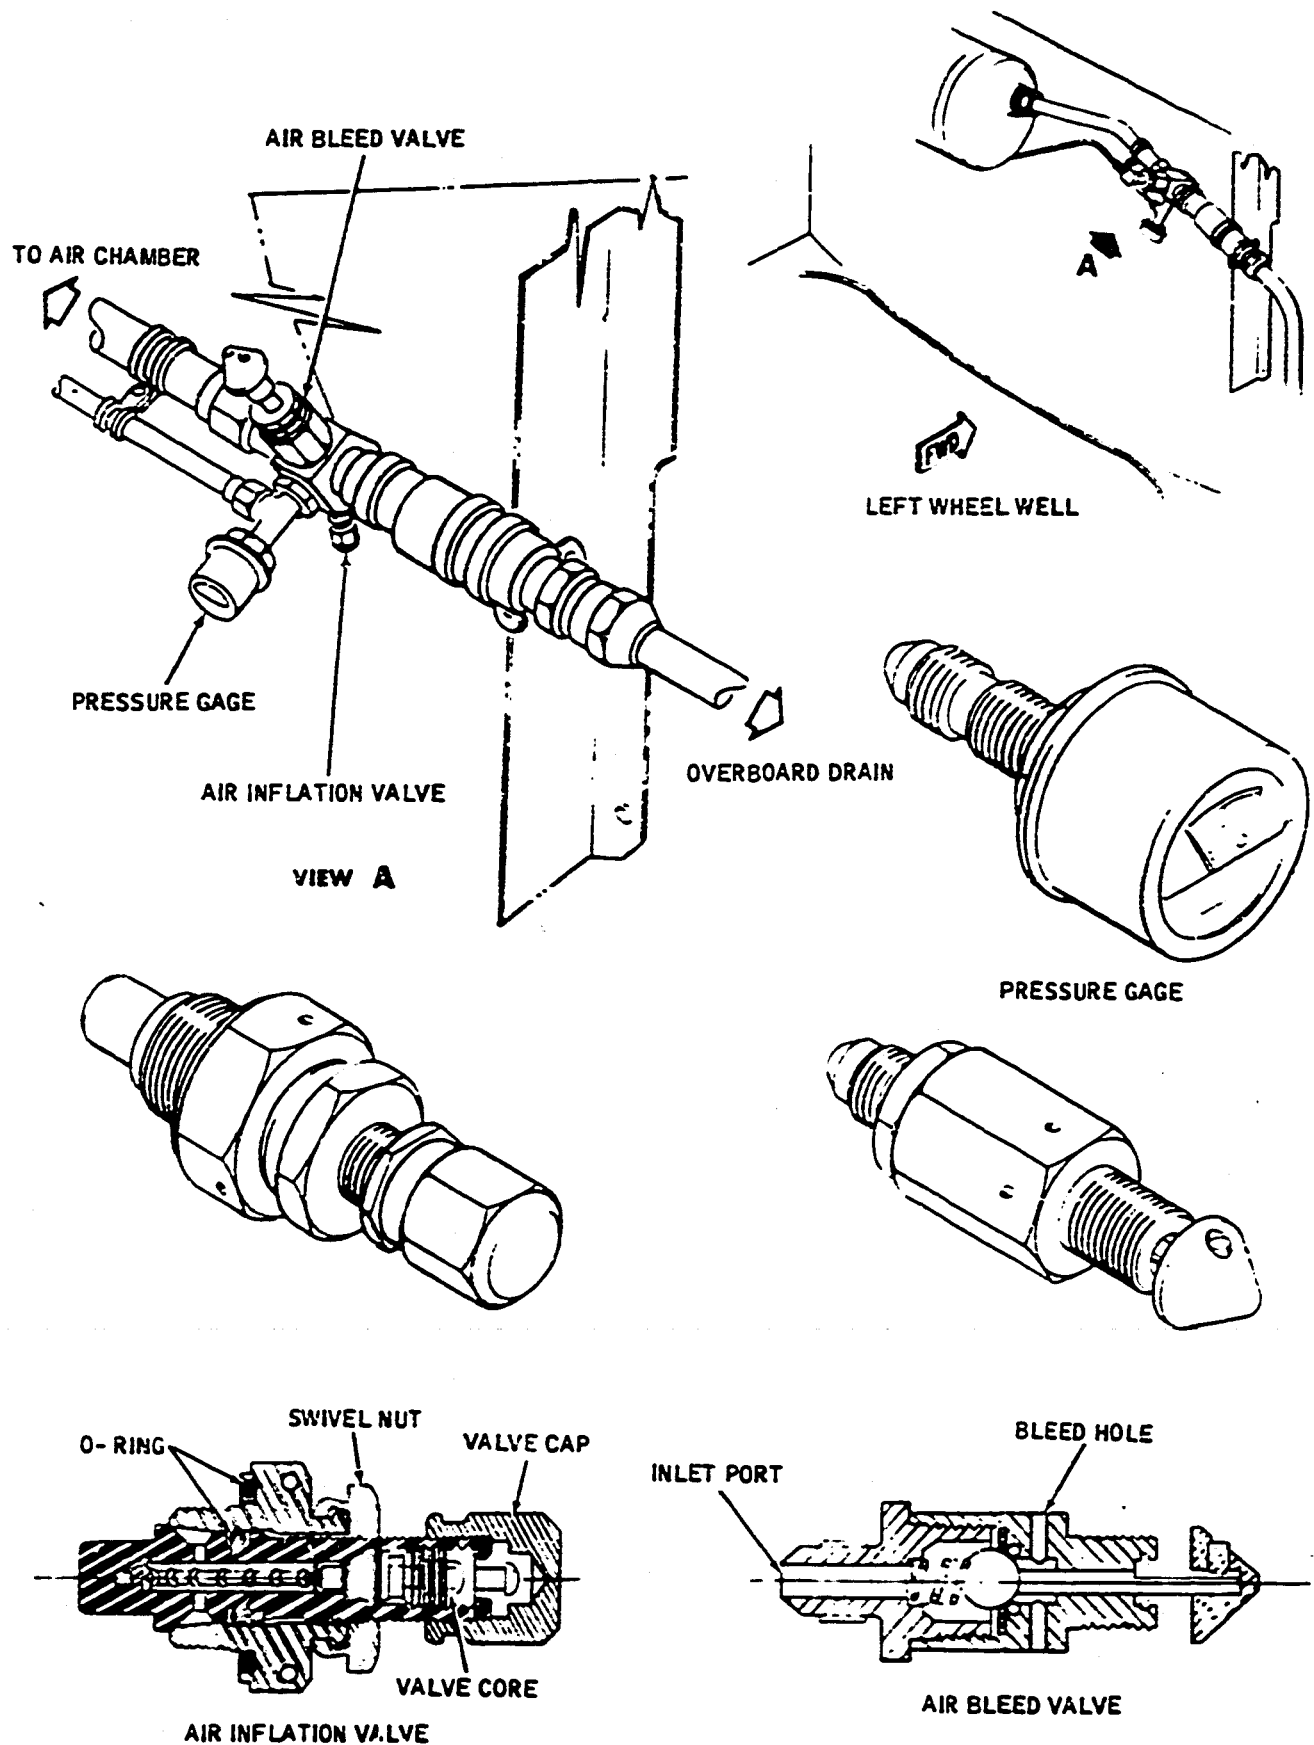

HA2-32

Reservoir Air Bleed Valve, Air Inflation  
 Valve, and Pressure Gage  
 Figure 8

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

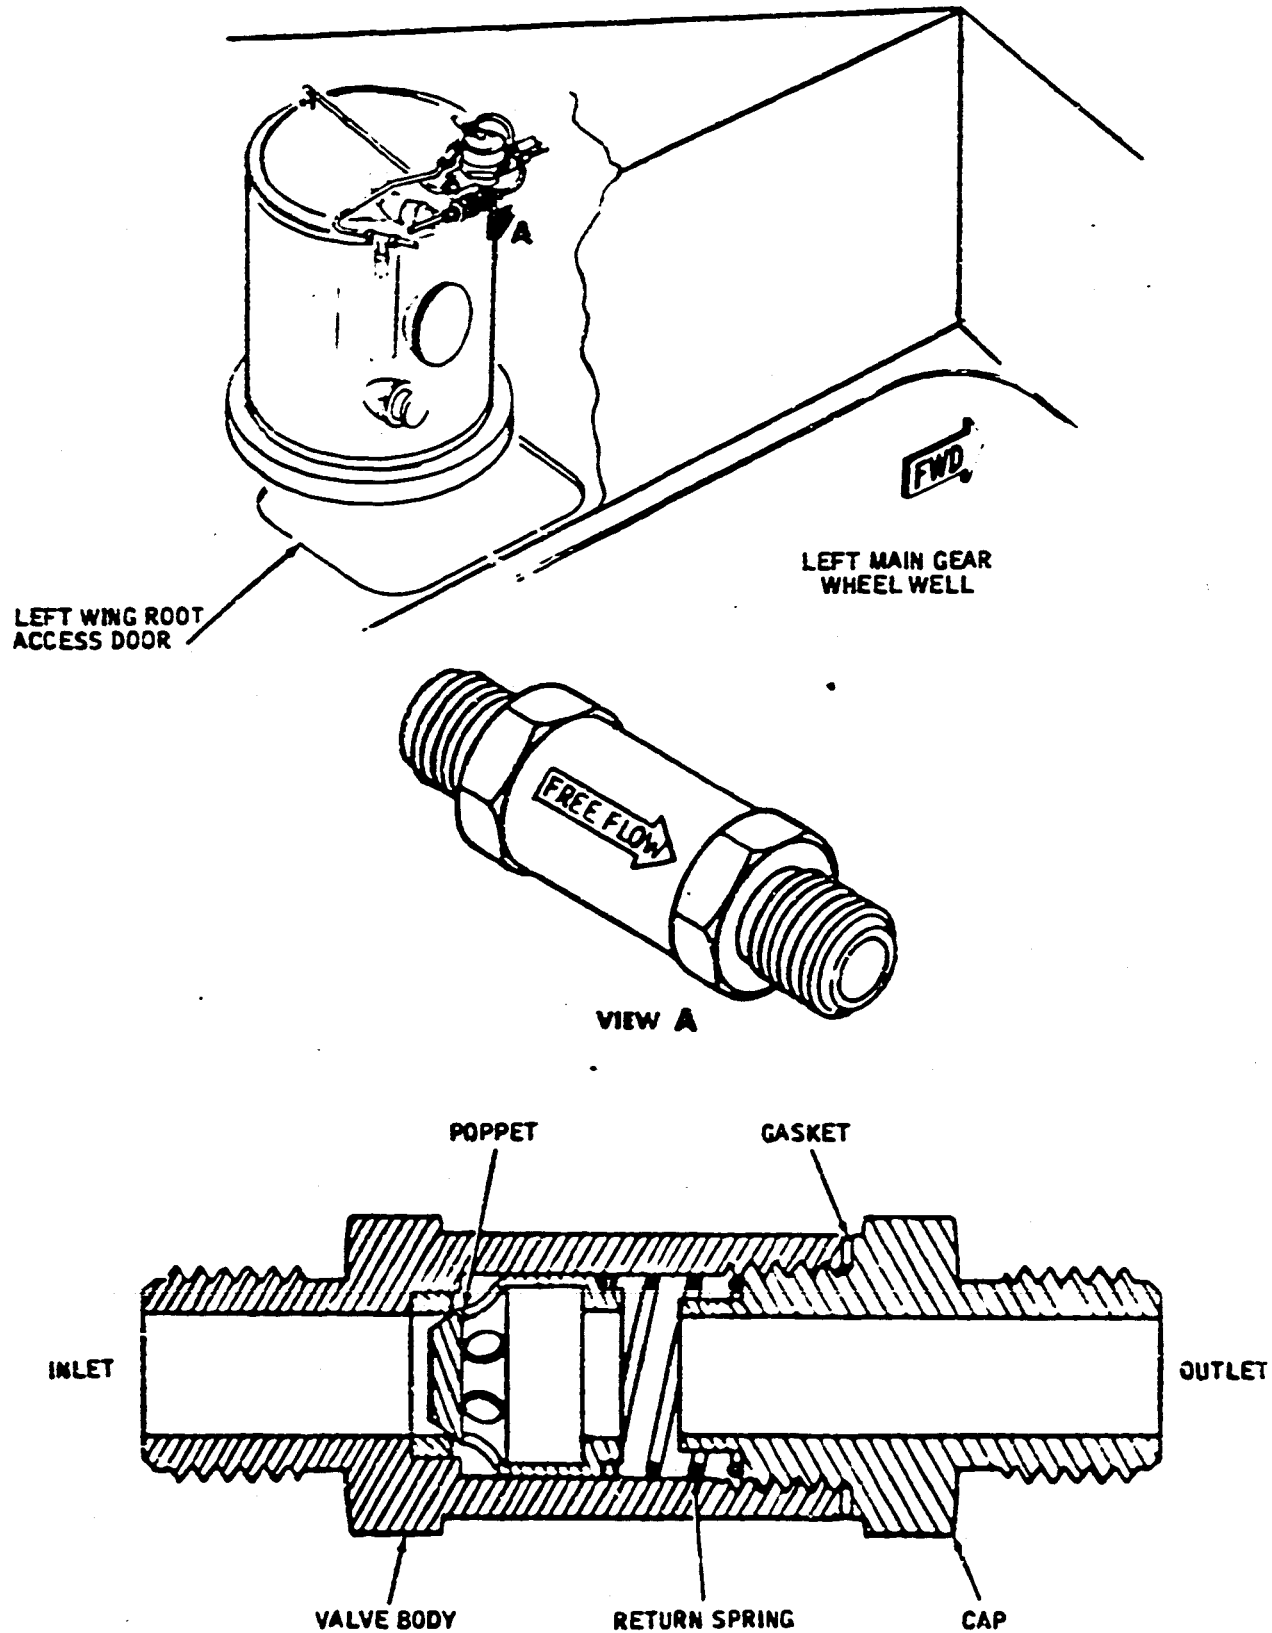

Hydraulic Reservoir Vacuum Breaker Check Valve  
 Figure 9

Jan 15/68

Printed in U.S.A.

HA2-33

29-10-0  
 CODE 24  
 Page 19

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

H. Hydraulic Reservoir Air Chamber

- (1) The hydraulic reservoir air chamber is a small, cylindrical tank with a capacity of 700 cubic inches. It has two ports, an inlet port at the bottom of the chamber and an outlet port in one end of the chamber. The inlet port mounting boss is fitted with a drain plug. The air chamber is installed on the aft side of the rear spar in the left main gear wheel well, inboard and above the hydraulic reservoir filler assembly. Access to the air chamber is through the left main gear inboard door.
- (2) The air chamber provides for greater fluid capacity in the hydraulic reservoir by providing air and foam space for the reservoir in a separate container. Air pressure in the chamber is maintained by the regulator-aspirator and the air relief valve. The air pressure in the chamber and reservoir can be relieved, when desired, by the air bleed valve located downstream of the chamber. The air chamber is mounted higher than the reservoir filler assembly, to prevent overfilling of the reservoir from reducing the available air space and to prevent fluid from being vented overboard through the reservoir relief valve.


I. Hydraulic Reservoir Port B Return Check Valve (See Figure 10.)

- (1) The reservoir port B return check valve is installed in port B of the reservoir to prevent reverse flow of hydraulic fluid from the reservoir to the return line. The check valve is located on the reservoir in the left wing root and is accessible through the left wing root access door.
- (2) Externally and internally, the port B check valve is a standard-type check valve with a 1500-psi rating. A nominal pressure of approximately 8 psi unseats the poppet, permitting fluid to flow through the valve. When the reservoir pressure exceeds the return line pressure, the poppet will seat and reverse fluid flow will be prevented.


J. Engine Hydraulic Fire Shutoff Valve (See Figures 11 and 12.)

- (1) The engine hydraulic fire shutoff valve is a gate-type, mechanically controlled valve, installed in the supply line of each engine-driven hydraulic pump. The engine hydraulic fire shutoff valve is actuated from the flight compartment to prevent the flow of hydraulic fluid into the engine section.
- (2) The engine hydraulic fire shutoff valve is mounted on a 2-piece channel bracket which is installed inside the wing leading edge, aft of the firewall of each inboard pylon. Access to the valve is through the access door located on the lower side of the wing leading edge, outboard of either the left or right inboard pylon. Each valve is located approximately 30 inches inboard of the access door.
- (3) Internally, the valve consists of a valve arm, valve arm link, cam plate, and slide blade. The valve arm link attaches to the valve

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

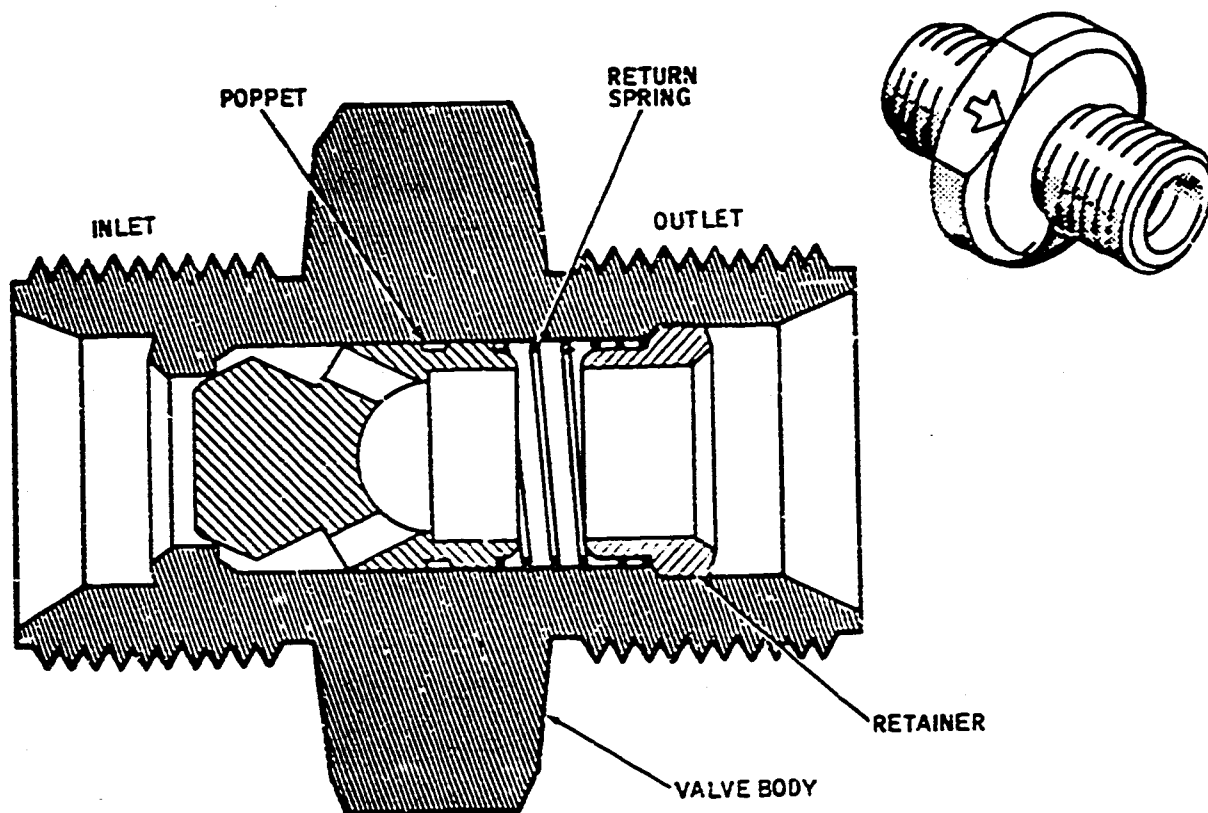

MINIATURE CHECK VALVE

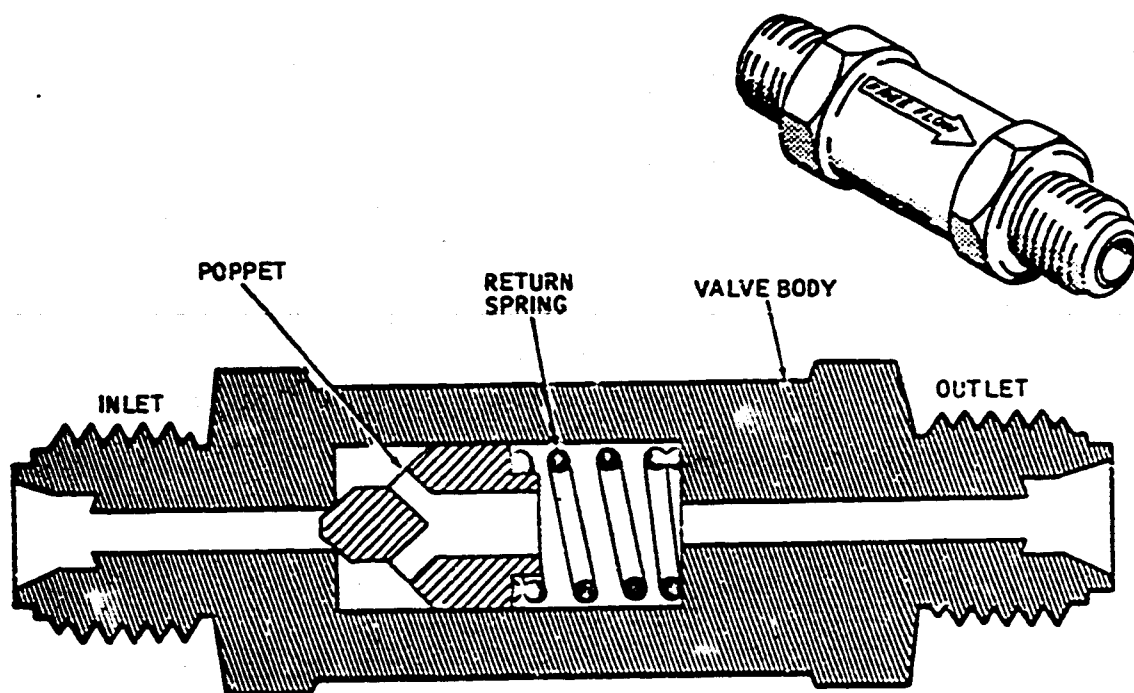

STANDARD CHECK VALVE

Hydraulic Check Valves -- Typical  
 Figure 10

Jan 15/68


Printed in U.S.A.

HA2-18A

29-10-0  
 CODE 24  
 Page 21



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

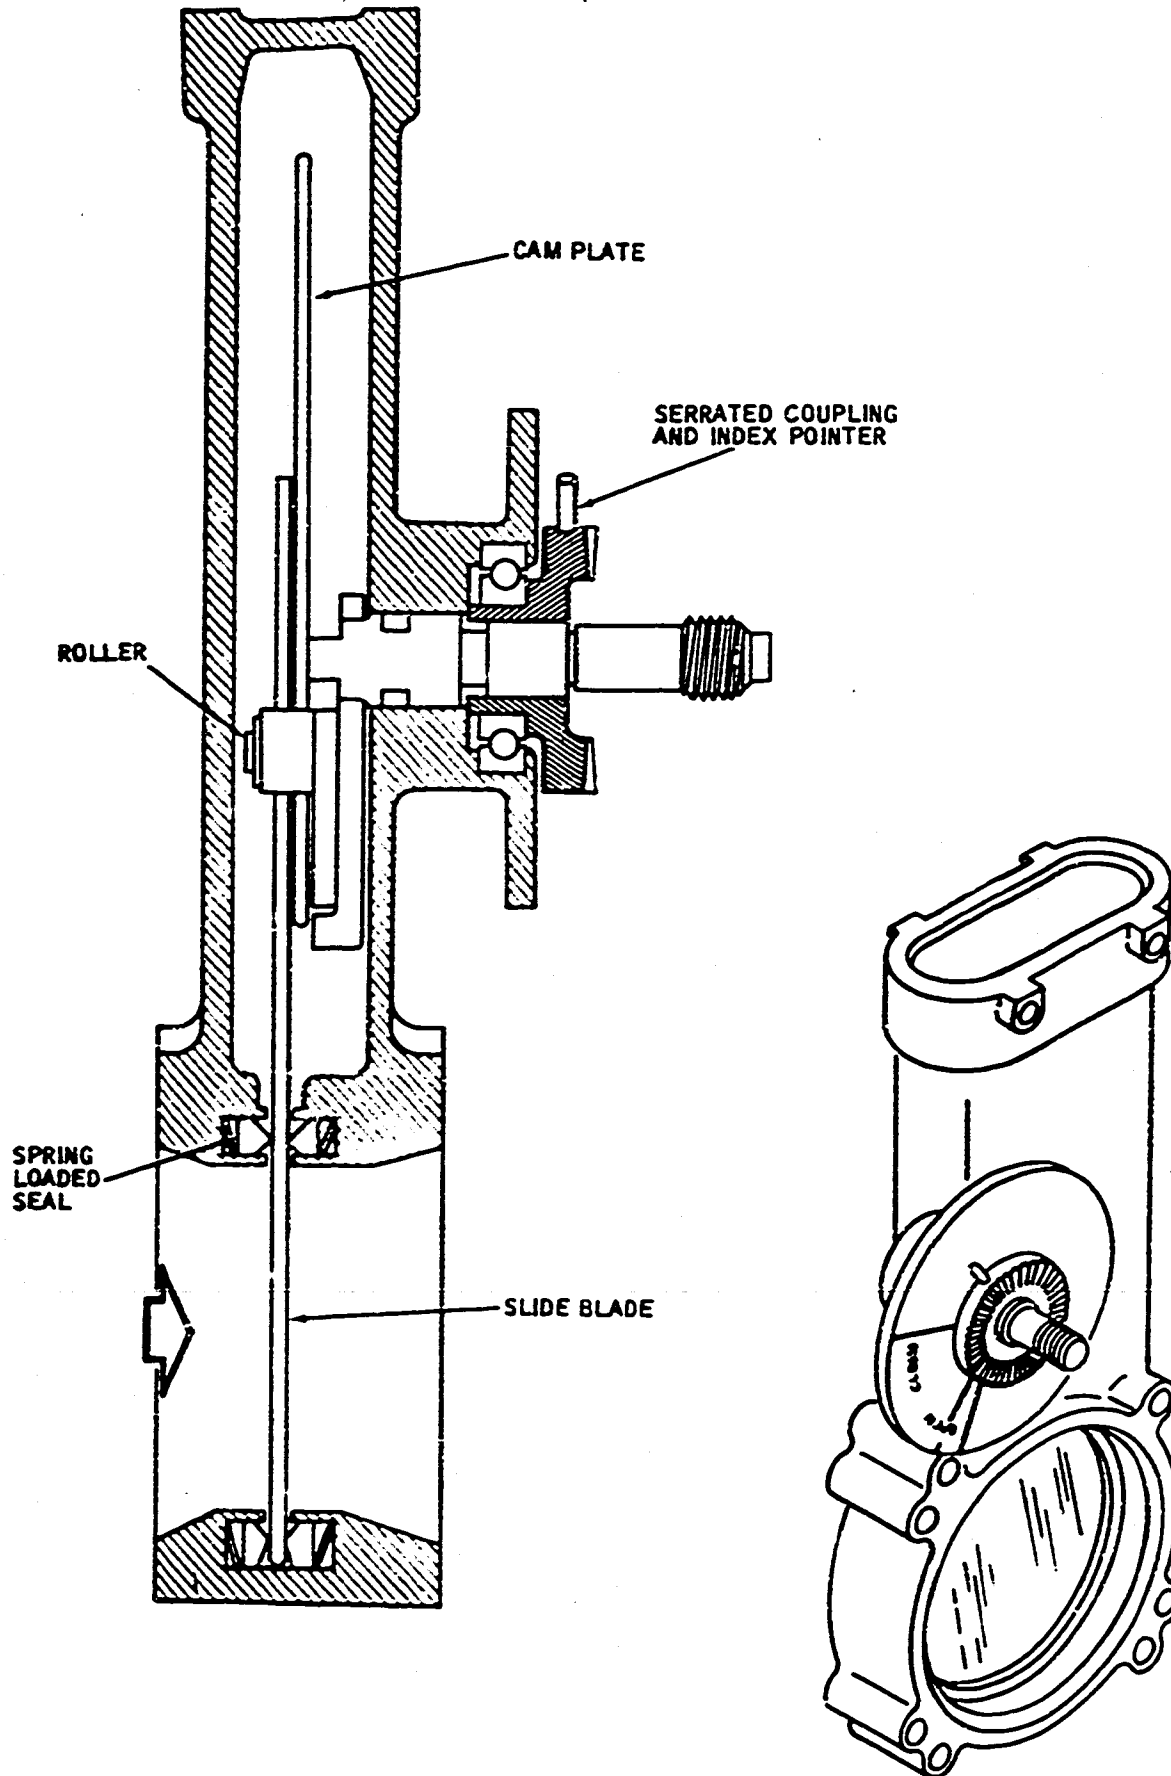

29-10-0  
CODE 24  
Page 22


Engine Hydraulic Fire Shutoff Valve -- Schematic  
Figure 11

Printed in U.S.A.

HA2-2209

Jan 15/68

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

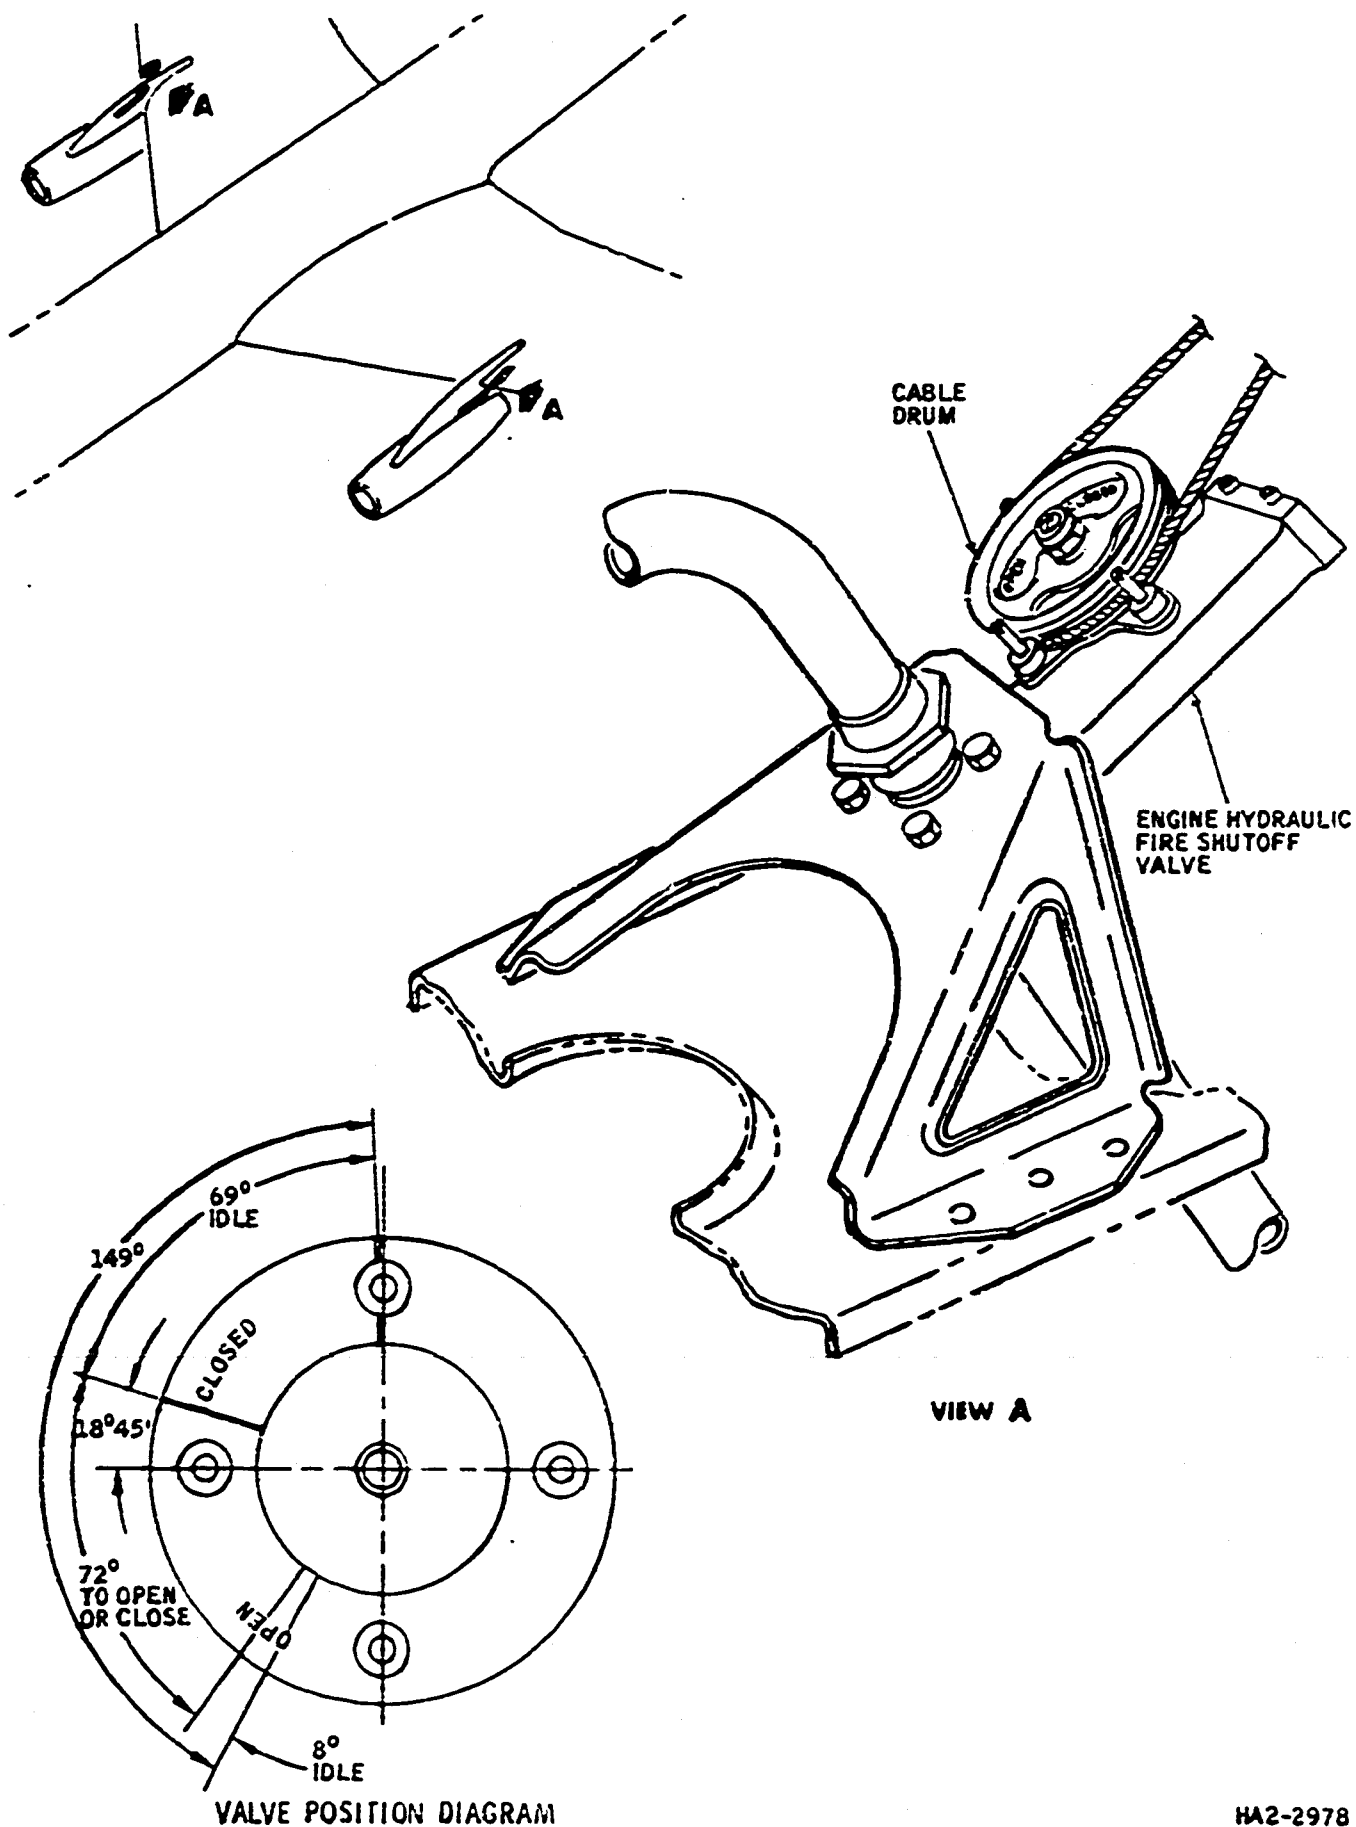

Engine Hydraulic Fire Shutoff Valve  
 Figure 12

HA2-2978

29-10-0  
 CODE 24  
 Page 23

Jan 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL



arm and is allowed to swivel through an arc in relation to the valve arm. The link has a stop that will contact the arm when the two have traveled to the valve closed, full overtravel position. In the full open pretravel position, the link contacts the arm stop.

- (4) A roller attached to the end of the link rides in, and extends through, a J-shaped slot in the cam plate. The rotation of the valve arm causes the link roller to follow the cam slot, allowing the arm and link to move through independent arcs.
- (5) The slide blade (gate of the valve) is slotted near the one end and also receives the link roller extending through the cam slot. The slide blade is positioned parallel to the cam plate and is guided by two grooves in the housing. This will allow the blade to open or close through porting of the valve by the action of the arm and link. The cam plate is pinned to the valve shaft, securing it rigidly in two positioning grooves in the housing. A pin-indicator is provided to relate valve position to a reference plate placarded open and closed.
- (6) The engine hydraulic fire shutoff valves are cable actuated by the fire control handles, located on the overhead switch panel in the flight compartment. When the fire control handle for either inboard engine is moved, the cable system rotates the drum which is attached to the corresponding shutoff valve shaft. This action extends the valve blade into the fluid passage to block the flow of fluid. The valve operates from open to close by clockwise rotation of the cable drum. The valve gage will idle during the first 8 degrees of rotation of the cable drum, and then will close in the next 72 degrees. The cable drum will continue to rotate the shaft for an additional 69 degrees after the gate valve is closed, locking it overcenter. Total travel of the cable drum is 149 degrees.


**K. Engine-Driven Hydraulic Pump (See Figure 13.)**

- (1) A variable-displacement, pressure-compensated, engine-driven hydraulic pump is installed on each inboard engine. The pump incorporates a solenoid bypass feature for reducing the output of the pump. The bypass valves are controlled by two engine hydraulic pump control switches in the flight compartment. The switch for the hydraulic pump on engine No. 2 is placarded left, on and bypass. The switch for the hydraulic pump on engine No. 3 is placarded right, on and bypass. When either of the two engine hydraulic pump control switches is placed in the bypass position, the bypass valve solenoid for that hydraulic pump is energized and the pump pressure decreases to 300 ( $\pm 100$ ) psi. When either switch is in the on position, the control circuit to the corresponding bypass valve is open and the hydraulic pump operates normally in the pressure range of 2850 to 3050 psi. The pump provides a continuous, non-pulsating flow of hydraulic fluid, under pressure, to the hydraulic manifolds for distribution throughout the hydraulic system. Each of the engine-driven pumps is located on the accessory drive pad of the inboard engines. These pumps are accessible through the access

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

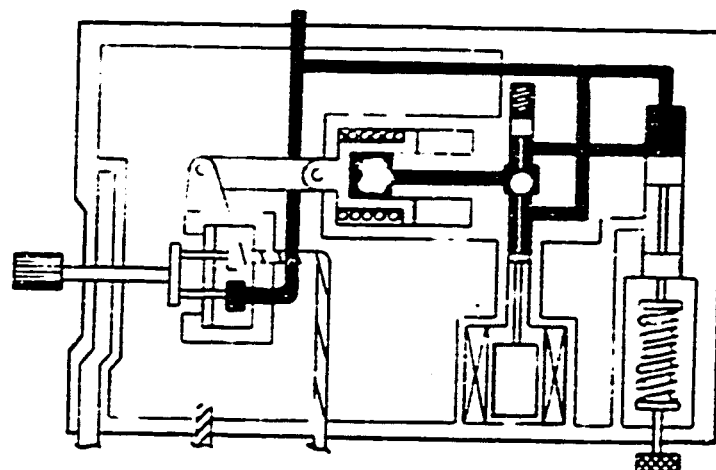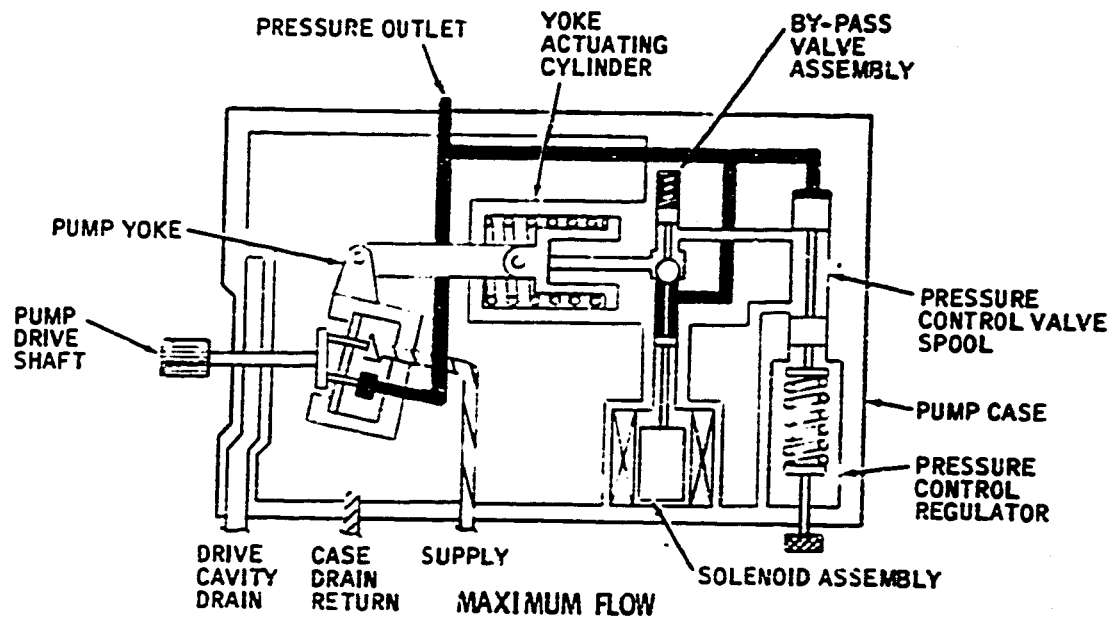

COMPENSATOR AT CUTOFF  
 (MINIMUM FLOW, MAXIMUM PRESSURE)

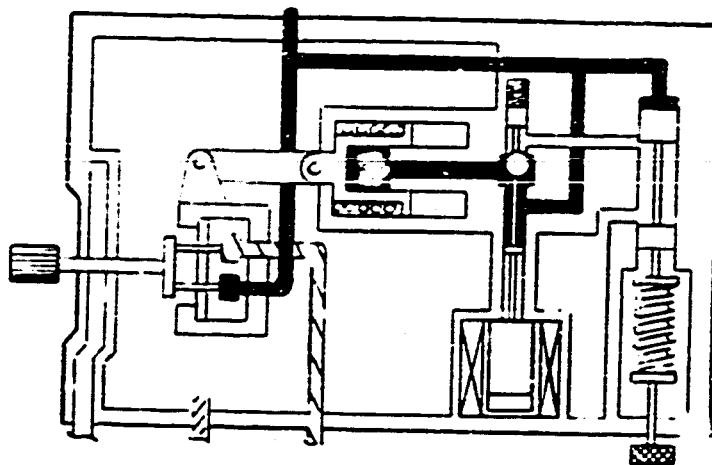

BYPASS SOLENOID ENERGIZED  
 (300 PSI PRESSURE)

- PRESSURE
- CASE DRAIN
- SUPPLY
- DRIVE CAVITY DRAIN

HA2-837

Engine-Driven Hydraulic Pump Pressure  
 Flow -- Schematic  
 Figure 13

Jan 15/68

Printed in U.S.A.

29-10-0  
 CODE 24  
 Page 25

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

doors on the right side of the nacelles and removal of the engine bypass duct.

- (2) Three case drain ports are provided: two are on the yoke assembly housing, and the third is on the casing for the pressure control valve, adjacent to the inlet port fitting. The case drain port on top of the yoke assembly housing is used as the case drain connection to assure that the pump housing is full of fluid at all times. This drain connection is ported back to the low-pressure return port of the reservoir. The inlet port fitting is on top of the pump housing and the outlet port fitting is opposite to it on the bottom of the housing, and contains a low pressure indicating light switch.
- (3) The yoke control piston casing is an integral part of the pump case. Four self-locking nuts are used to hold the piston casing end-plate in position. The bypass valve assembly, consisting of the valve body and a solenoid, is mounted externally on the pump case, under the yoke control piston casing. This solenoid valve is provided with an electrical connector. A pressure control regulator is installed on the bypass valve body by means of four bolts. This regulator is cylindrical and is provided with an external adjustment screw. A lock screw is used to retain the adjusting screw after the adjustment has been made.
- (4) Hydraulic fluid enters the pump through an inlet port. Passages in the yoke carry the fluid to the valve plate, which ports the fluid to the cylinder block. The nine pistons in the cylinder block are actuated by the rotating drive shaft, thereby pressurizing the fluid. From the cylinder block, the fluid is routed to the outlet port of the yoke and then to the pump pressure lines. The pressure control regulator is actuated by pump output pressure that is bled to the regulator. The regulators meter the pressure to the yoke control piston, which position the yoke.
- (5) The maximum pump pressure is determined by the adjustment of the pressure control regulator. The pressure control regulator allows maximum output flow (22.5 gpm at 3500 rpm) up to 2850 psi system pressure. When this pressure is reached, the yoke assembly starts to move towards the zero flow position.
- (6) Pressure continues to rise until the displacement is reduced from maximum flow to zero flow and 3000 psi is reached. If the engine-driven hydraulic pump control switches are in the on position, and the output pressure of either pump drops below 1500 psi, an amber indicating light located in the flight compartment comes on.

L. Engine-Driven Hydraulic Pump Check Valves (See Figure 10.)

- (1) Two check valves, rated at 3000 psi, are installed in the lines from each engine-driven hydraulic pump. One check valve is installed in the pressure line and the other is in the case drain line. The check valves in the pump pressure lines prevent reverse flow of hydraulic

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

fluid through the pump, when the pump is inoperative or when external hydraulic pressure is supplied to the system. Access to the valves can be gained through an access door in the forward right apron of each inboard pylon. The valves are mounted on the exterior wall of the inlet box by means of the bulkhead fittings and retaining nuts.

- (2) Normal operating pressure will unseat the poppet, and fluid will flow through the valve. When pressure downstream of the valve exceeds pressure from the pump, the pressure, with the aid of the return spring, will seat the poppet. This prevents reverse flow of hydraulic fluid through the pumps.


M. Engine-Driven Hydraulic Pump Case Drain Filter (See Figure 14.)

- (1) A line-type, micronic filter, for use in a low-pressure hydraulic system, is installed in the engine-driven hydraulic pump case drain line between the pump flow check valve and the hydraulic system reservoir. The case drain filter is installed on the aft surface of the rear spar opposite the leading edge of the inboard flap assembly. One filter is used for each engine-driven pump. Access is gained to the filter by lowering the flaps. A second check valve is installed adjacent to the filter in the downstream side of the case drain return line.
- (2) Externally, the filter is approximately 5 inches high and 2 inches wide, with ports marked inlet and outlet. The bowl is cylindrical in shape, with hex-shaped wrench flats at the lower end. A self-sealing, magnetic drain plug is installed in the bottom end of the filter bowl. The filter element is made of chemically treated paper.


N. Dual Filter and Relief Valve (See Figure 15.)

- (1) The hydraulic power system dual filter and relief valve consists of two filters and two relief valves installed in the same body. The unit filters the hydraulic fluid from the two engine-driven hydraulic pumps, and the pressure relief valves assure that excessive pressures do not build up in the pressure line from the pumps. The unit is located in the left main gear wheel well on the lower portion of the rear spar, approximately 1 foot outboard of the centerline shear web.
- (2) The unit consists of a casting with a flange-mounted pressure inlet port on each end. Two pressure outlets are located on the top of the casting. One outlet, centrally located, is the main pressure outlet to the system selector valve. The other, located to the left of the selector valve port, is the pressure outlet to the air pressure regulator-aspirator. The return outlet port for the relief valve portion of the unit is located on the center of the aft face of the body, canted upward. The nose gear return line is connected to a check valve installed in a return line port, located between the two filter bowls.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

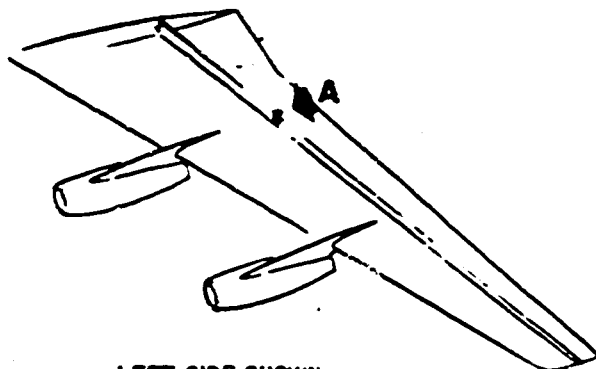

LEFT SIDE SHOWN  
 RIGHT SIDE OPPOSITE

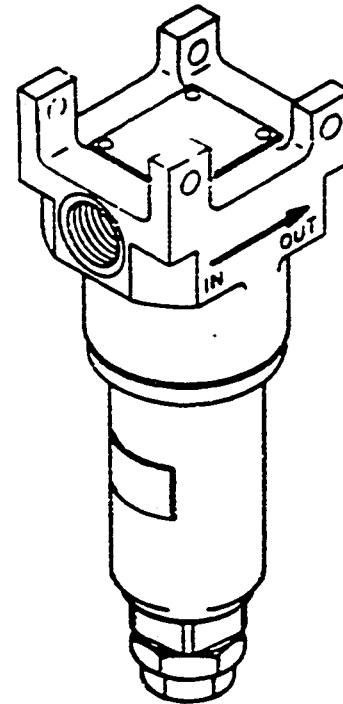

VIEW A

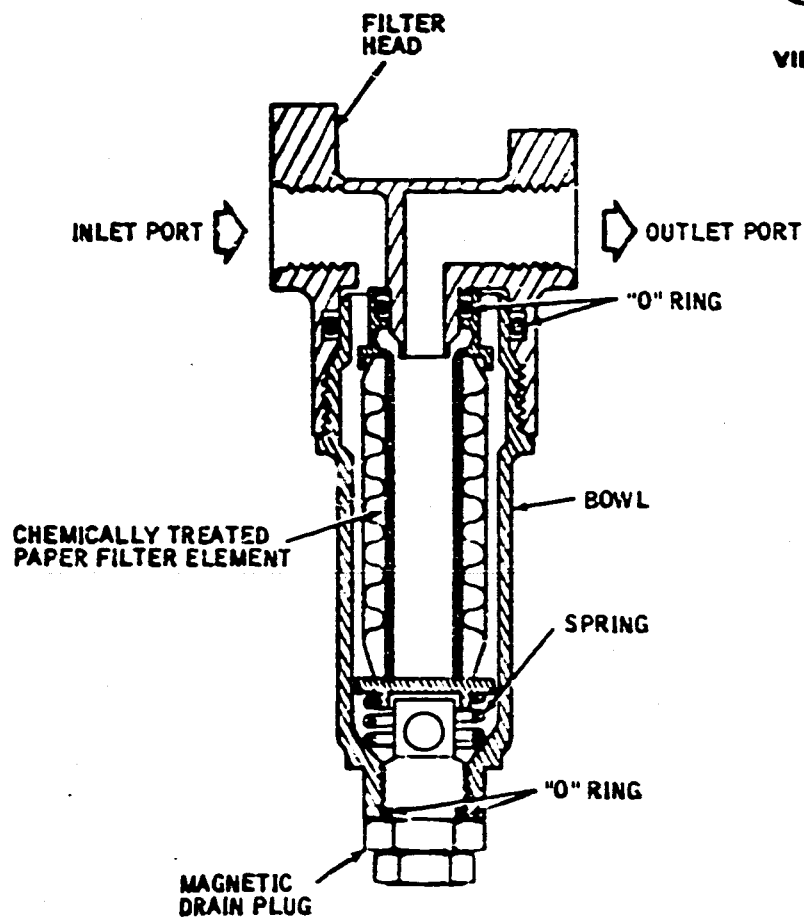

HA2-31


Engine Driven Hydraulic Pump Case Drain  
 Filter -- Cutaway View  
 Figure 14

29-10-0  
 CODE 24  
 Page 28

Jan. 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

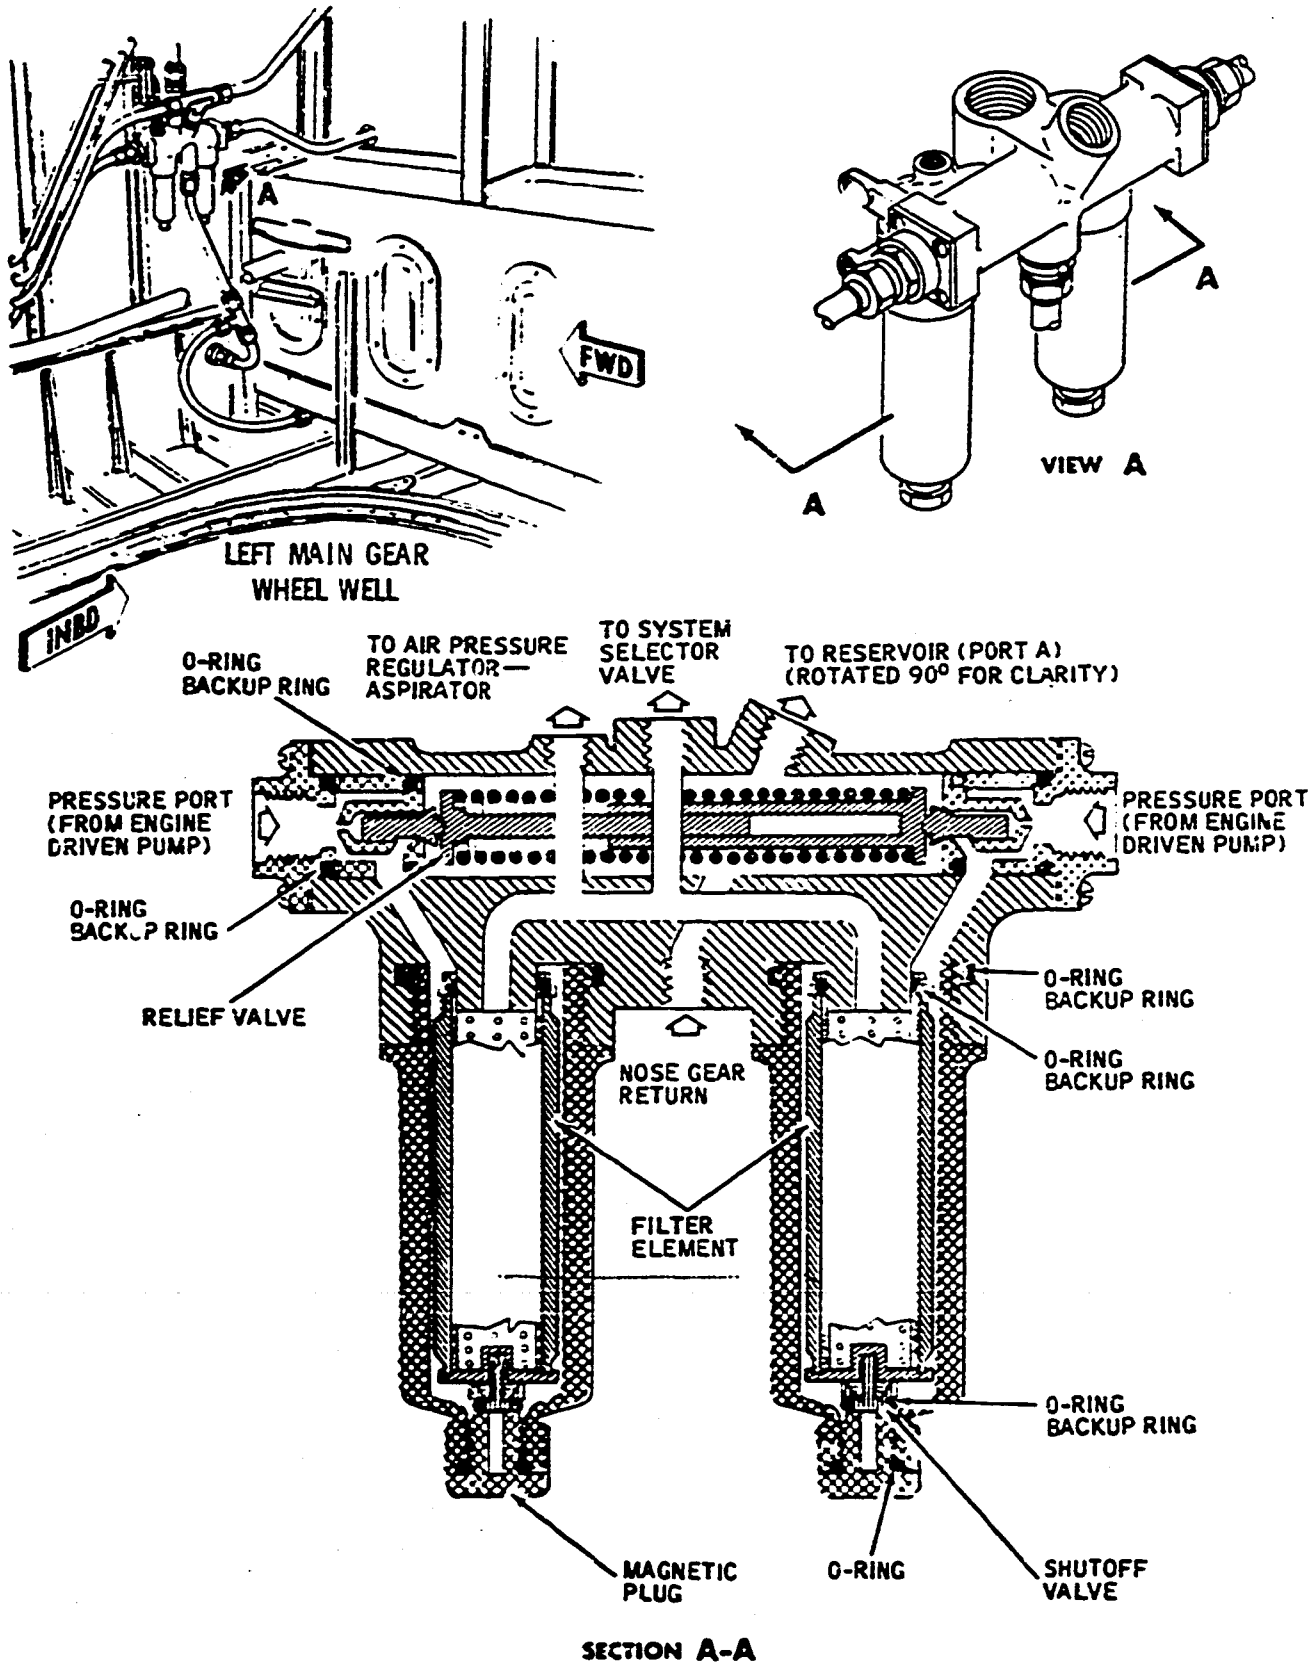

Dual-Filter and Relief Valve -- Cutaway View  
 Figure 15

Jan 15/68

Printed in U.S.A.

HA2-20


29-10-0  
 CODE 24  
 Page 29



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The pressure relief valves are located behind the pressure inlet ports and are connected to the return outlet port of the unit. The inlet from the nose gear return line is routed through the casting to the return outlet port.
  - (4) If either of the filter elements becomes clogged, pressure above 3000 psi at the inlet port will unseat the poppet. Pressure above 3500 psi will allow full flow of 22.5 gpm to flow to the return port of the unit and back to the reservoir. The relief valves will reseal at approximately 3000 psi.
  - (5) A check valve is installed in the system selector valve port to prevent reverse flow or pressure through the filter during auxiliary hydraulic pump operation.
0. System Selector Valve (See Figures 16 and 17.)
- (1) The system selector valve is a 3-position valve which permits directional control of fluid under pressure. The valve is installed on the left hydraulic power manifold and is accessible through the left main gear inboard door.
  - (2) The selector valve pressure-to-system port and the return port are directly ported to the manifold. The engine pump pressure enters the valve through a port on the large end of the valve, and the auxiliary pump inlet and alternate ports are located at the top, toward the aft end of the valve. The valve control crank is attached to a push-pull rod and a cable sector.
  - (3) Operation of the system selector valve is controlled by a lever located on the right side of the system engineer's control pedestal. When the control lever is moved to the selected position, the cable system, through the sector and crank, operates the valve positioning lever to drive the slide spool assembly to the selected position. When the control lever is placed in the general system (normal) position; the selector valve is actuated, causing hydraulic fluid to enter the valve through the system pressure port. The fluid is then directed into the manifold through the pressure-to-system port. In the general system (normal) position, fluid from the auxiliary pressure port is also routed to the pressure-to-system port. In the bypass/general system position, the selector valve ports engine pump pressure into the manifold through the return port. In this position, the auxiliary pump pressure is ported to the general system. In the general system/main gear downlock and flaps position, pump pressure is routed through the alternate port, at the top of the valve, for alternate operation of the flaps. Internal leakage provides lubrication for the moving parts of the valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

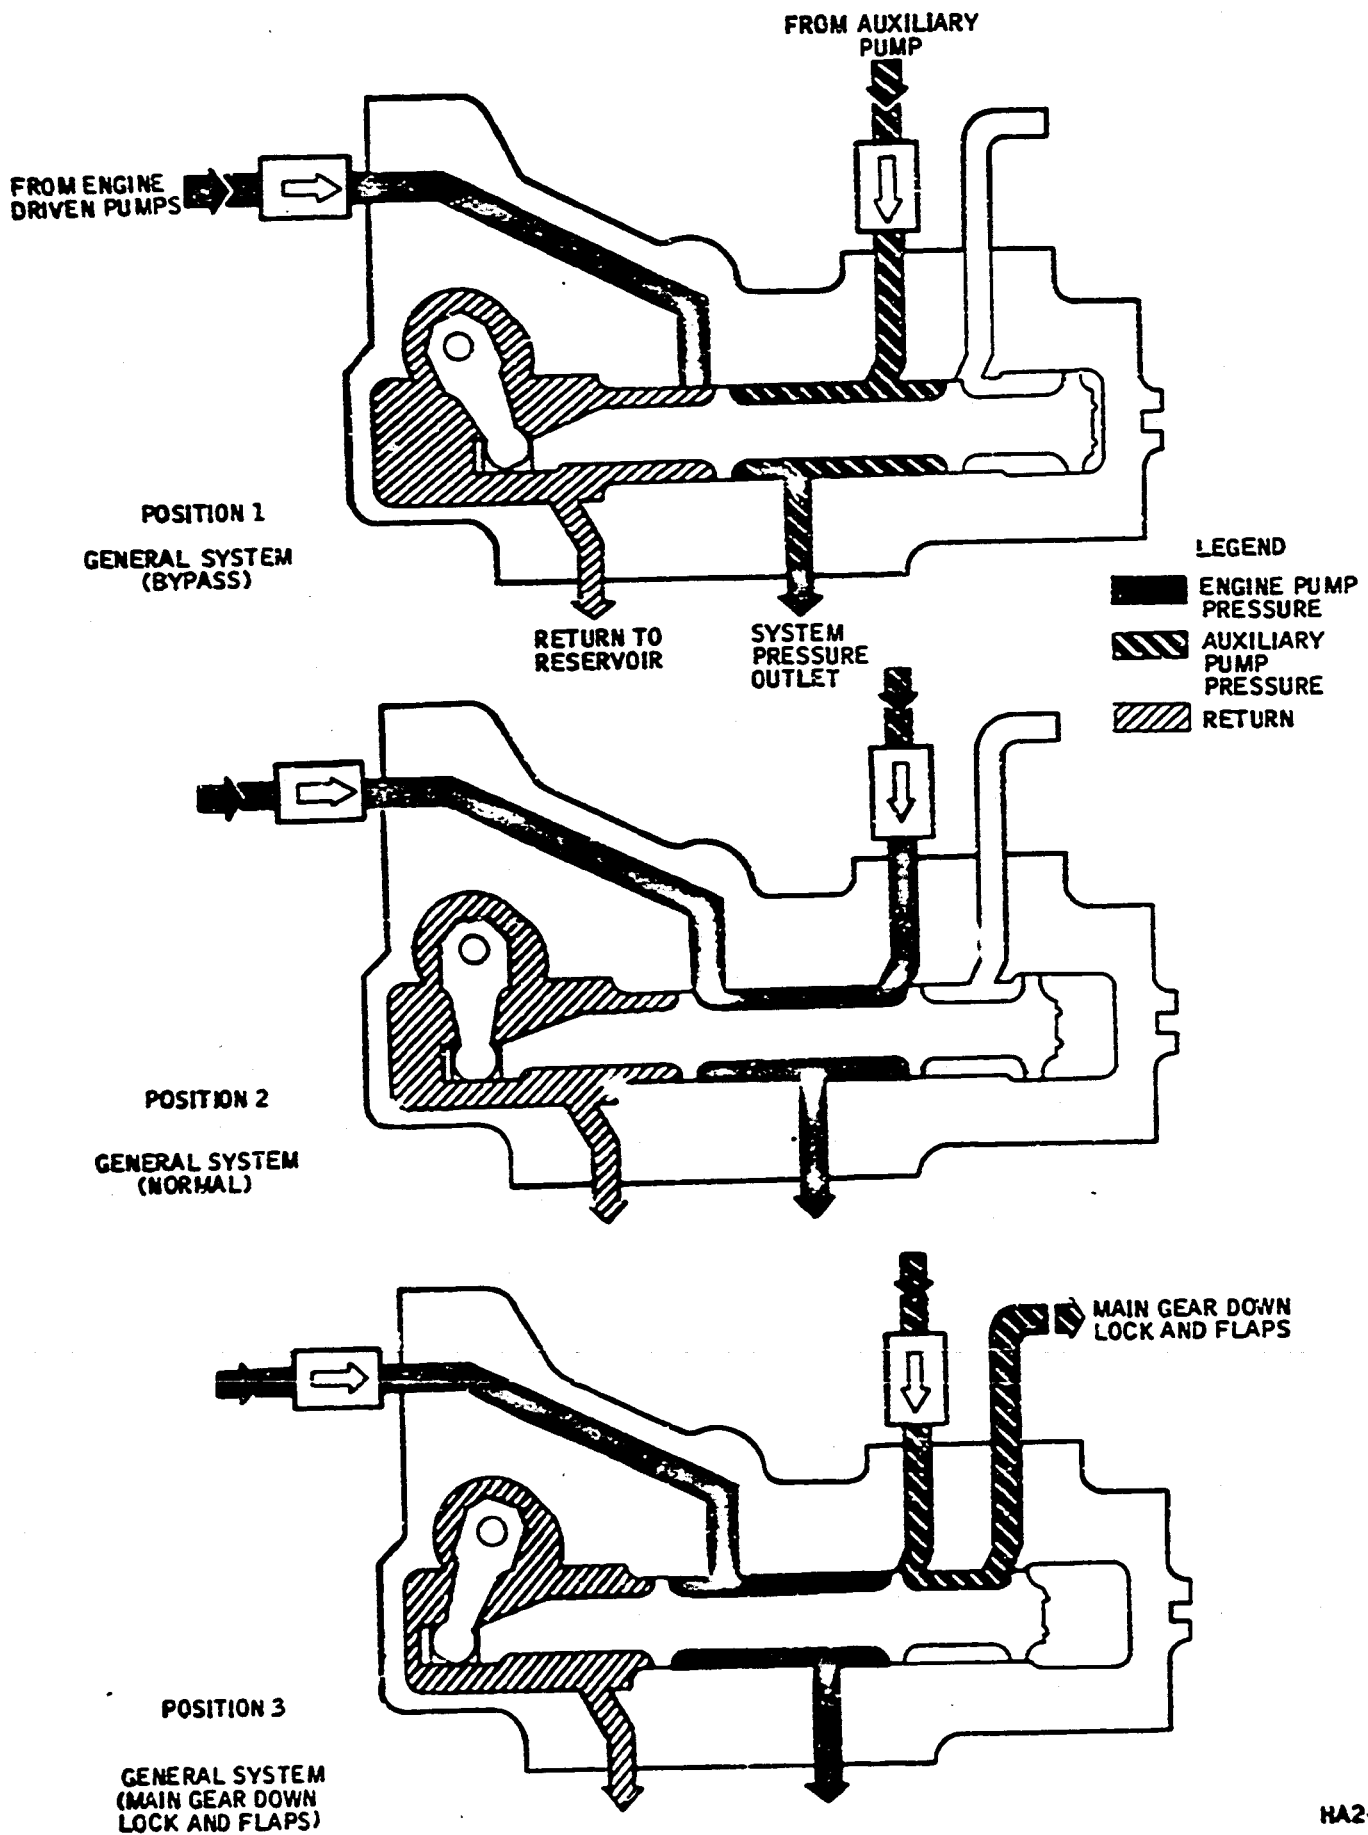

System Selector Valve -- Schematic  
 Figure 16


Jan 15/68

Printed in U.S.A.

HA2-26

29-10-0  
 CODE 24  
 Page 31

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

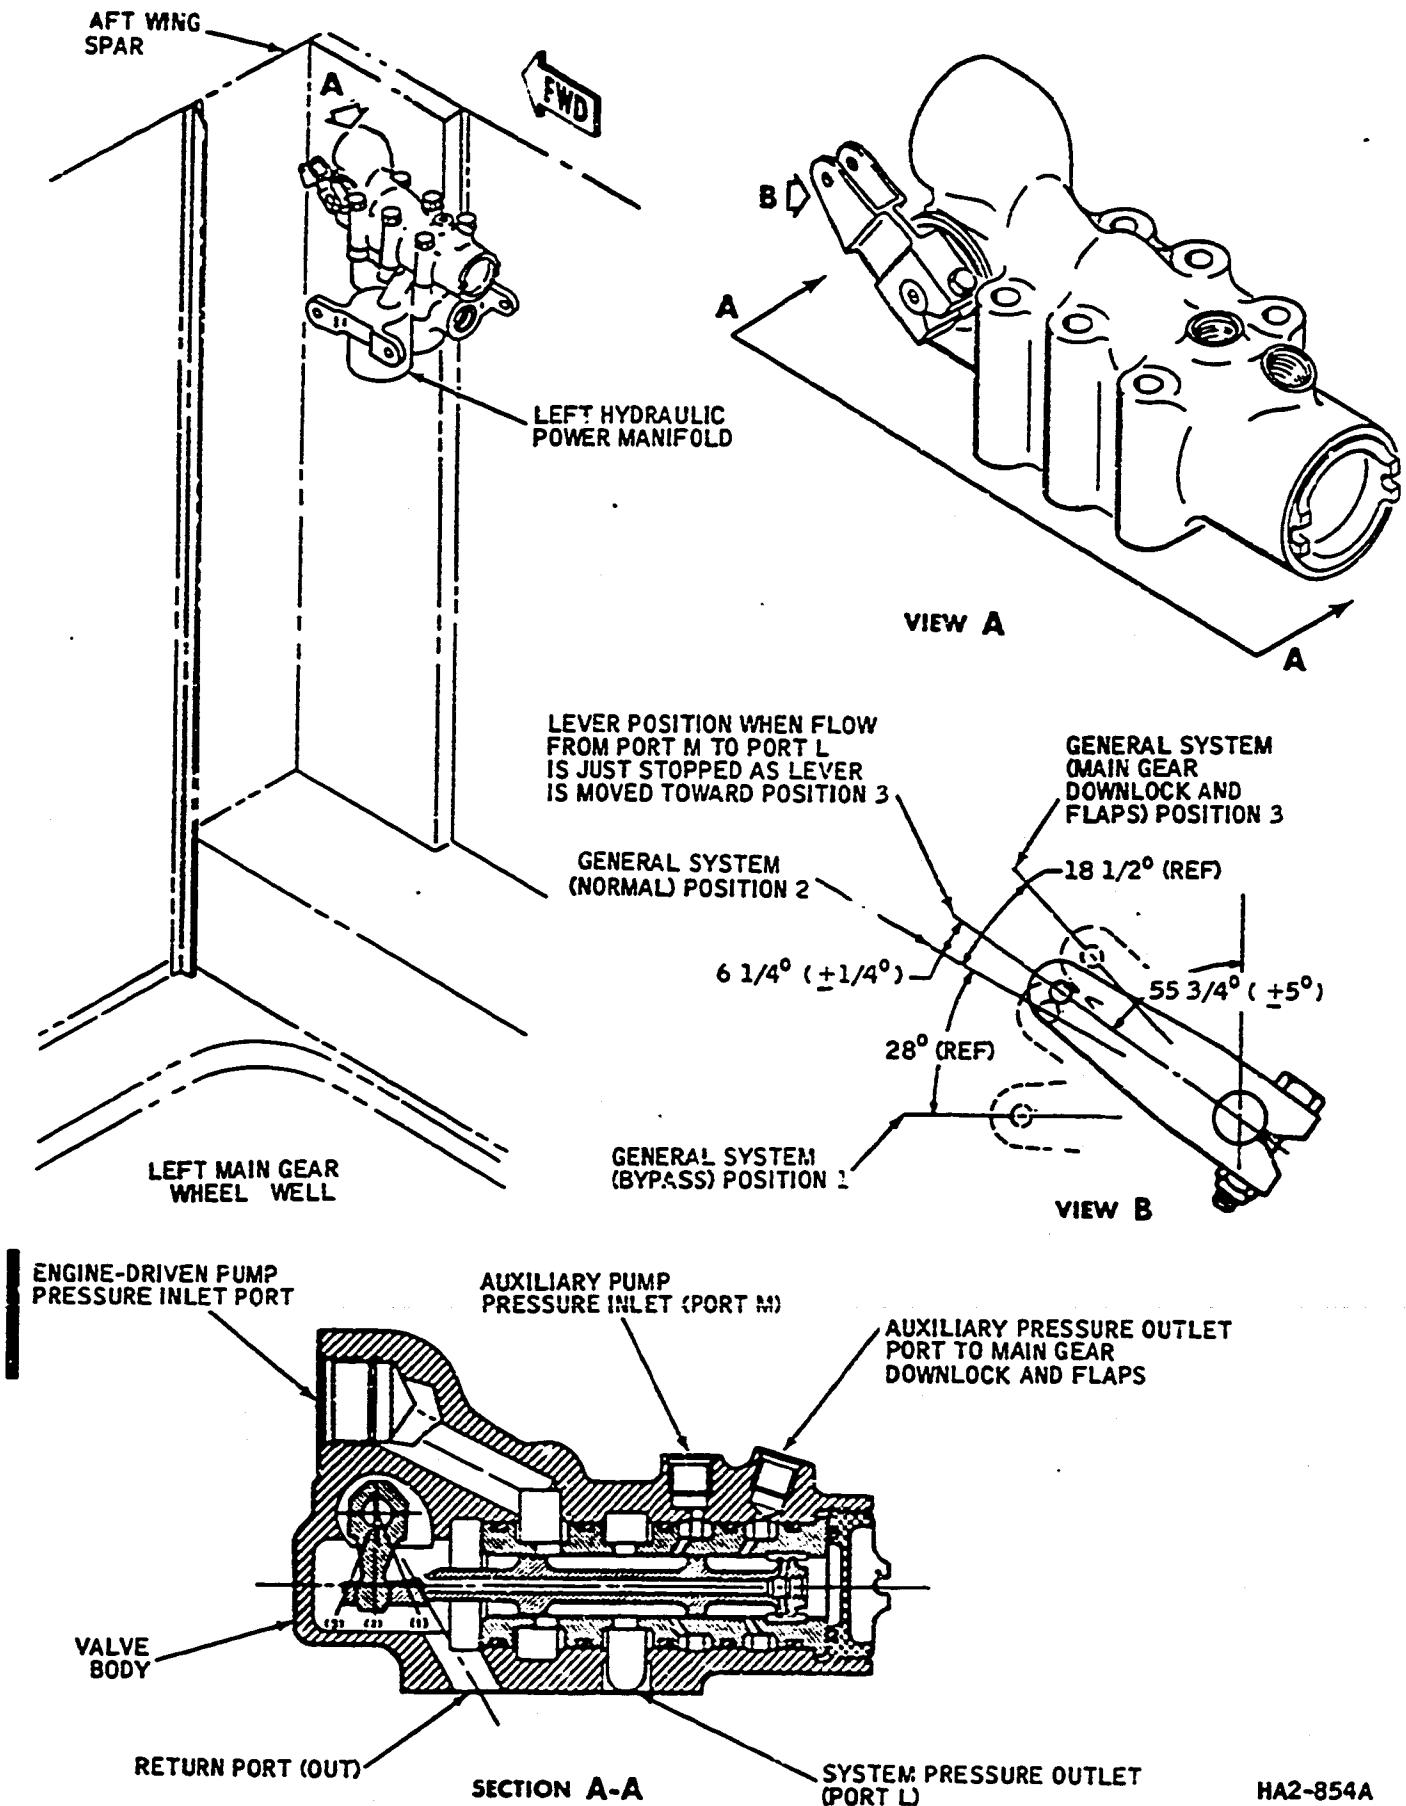

HA2-854A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL



P. Left Hydraulic Power Manifold (See Figure 18.)

- (1) The left hydraulic power manifold distributes fluid pressure from the hydraulic pump (any one of the three pumps), through control valves to the various airplane hydraulic subsystems. The left power manifold is located overhead in the left wheel well. Access to the left manifold is through the left main gear inboard door.
- (2) One valve-mounting pad is provided on the top of the manifold for the system selector valve. Four ports are provided on the manifold for connection of hydraulic pressure and return lines. Three of these ports are pressure outlet ports; one, located on the aft face of the manifold and one located on the bottom of the manifold port fluid to the flight controls. The third pressure outlet port, located on the bottom of the manifold, ports fluid directly to the priority valve, which in turn, ports fluid to the nose gear and to the right power manifold. The fourth, a return port, located immediately forward of the pressure line port on the bottom of the manifold, is connected by a line to a return port of the reservoir.

Q. Right Hydraulic Power Manifold (See Figure 19.)

- (1) The right hydraulic power manifold distributes fluid pressure from the hydraulic pumps (engine-driven or auxiliary, or any combination of these three pumps), through the control valves to the various hydraulic subsystems. The right hydraulic power manifold is located overhead in the right wheel well. The manifold is held in place with braces and is accessible through the right main gear inboard door.
- (2) The manifold contains passages for pressure and return fluid distribution, four check valves, ports for pressure and return lines, and mounting pads for the various control valves.
- (3) The right manifold receives fluid pressure from the left manifold. Pressure is ported through check valves to the wing flap control valve, to the slot control valve, to the main gear control valve, to the brake control valve, to the brake pressure transmitter, and to the brake accumulators.
- (4) Auxiliary hydraulic pressure is ported from the alternate port of the system selector control valve into port K in the right manifold. Port K is located inboard of the spoiler control valve. From port K, auxiliary hydraulic pressure is ported through a check valve to the downstream side of the wing flap control valve check valve and into the wing flap control valve for alternate operation of the wing flaps.
- (5) The return passage from the wing flap control valve ports fluid to return port A. The brake control valve return passage ports fluid into return line B through a two-way restrictor. The main gear control valve downline return fluid uses a separate port in the valve, bypasses the

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

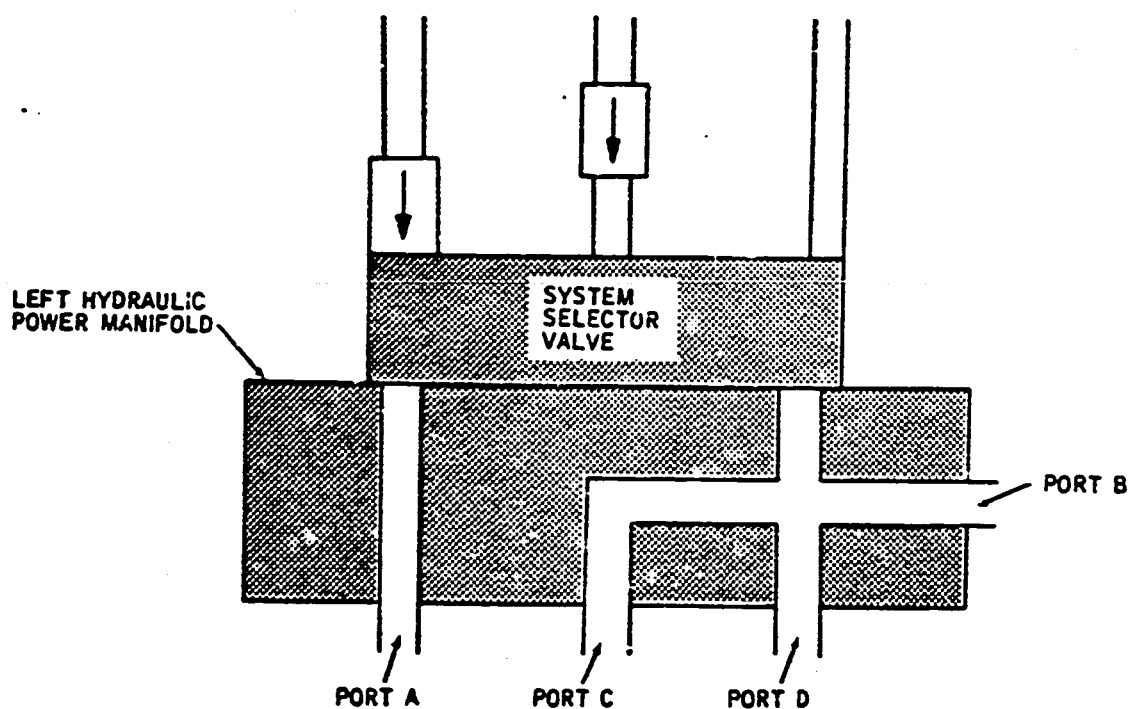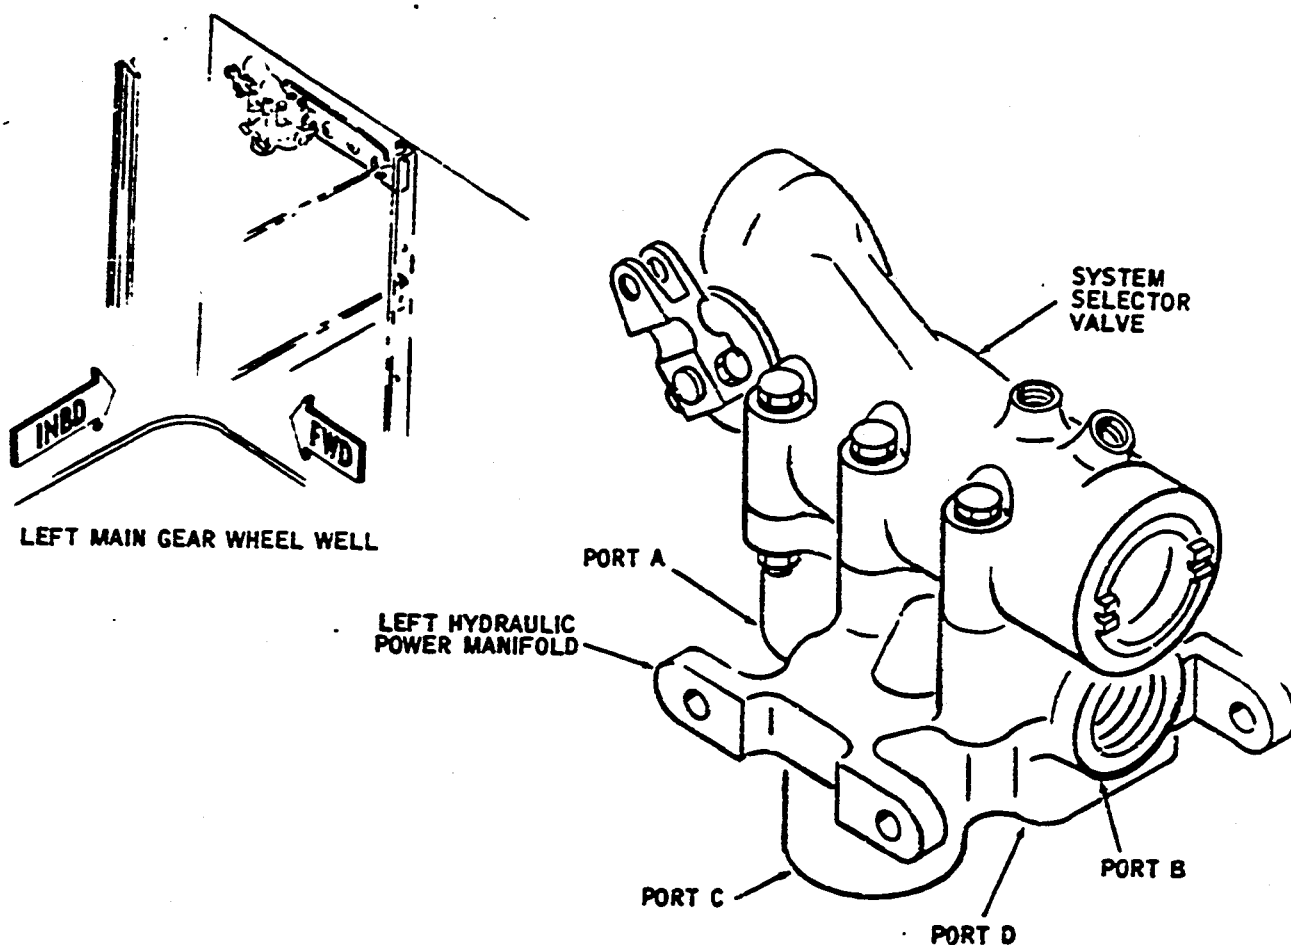

HA2-855


29-10-0  
 CODE 24  
 Page 34

Left Hydraulic Power Manifold -- Schematic  
 Figure 18


Printed in U.S.A.

Jan 15/68


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

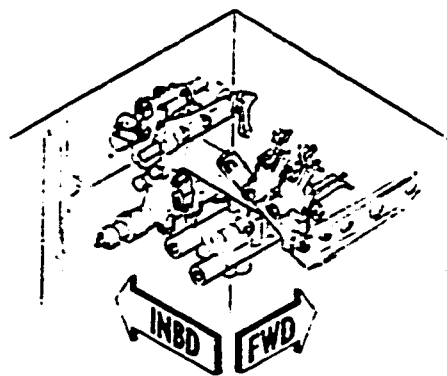

RIGHT MAIN GEAR  
WHEEL WELL

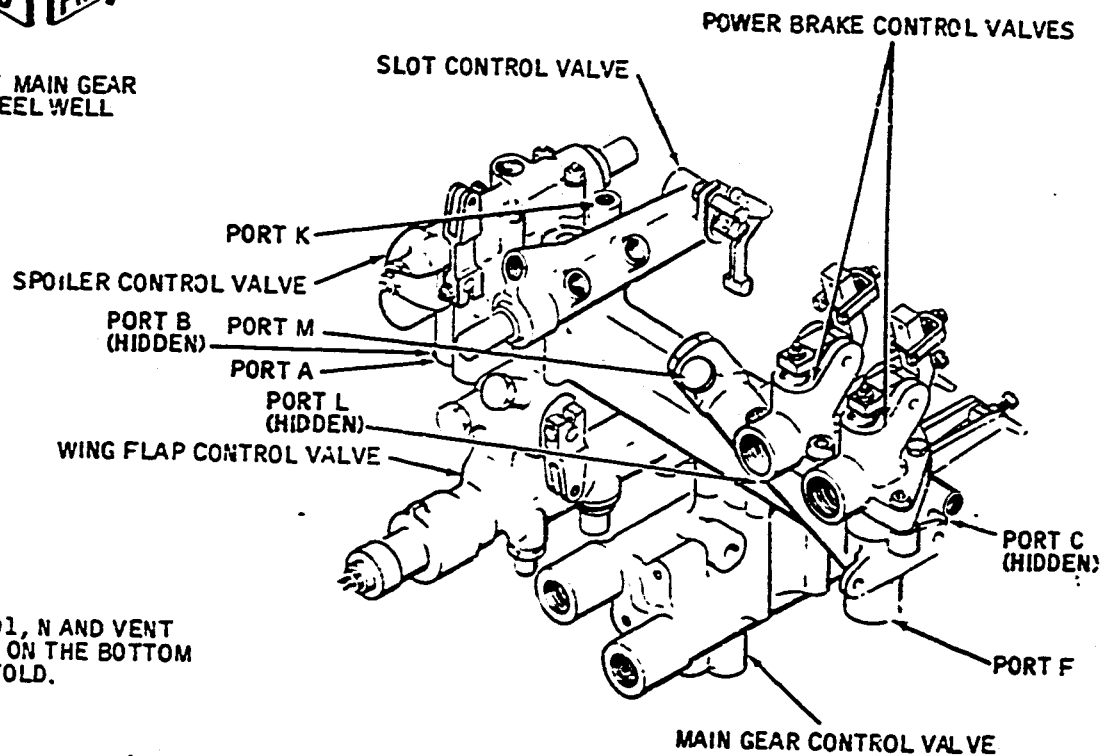

NOTE: PORTS B, C, D1, N AND VENT  
ARE LOCATED ON THE BOTTOM  
OF THE MANIFOLD.

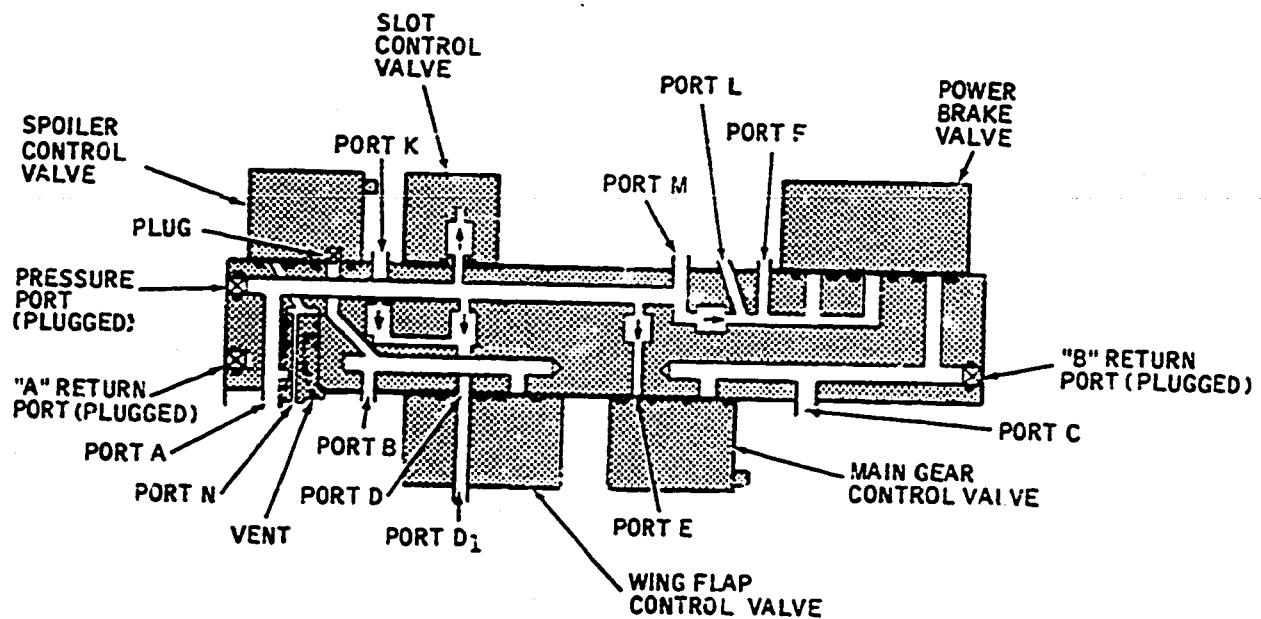

HA2-29A

Right Hydraulic Power Manifold -- Schematic  
 Figure 19

Nov 1/69

Printed in U.S.A.

29-10-0  
 CODE 24  
 Page 35

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

manifold, and returns the fluid directly to A return line to the reservoir. The upline in the main gear control valve uses the same return port, return port B, in the manifold as the brake control valve.

R. Deleted.


S. Hydraulic Power System Accumulator (See Figure 20.)

- (1) The hydraulic power system accumulator is a spherical, welded-steel, fluid and air bladder-separated container. The accumulator is installed in the pressure line of the hydraulic power system to provide a reserve supply of fluid under pneumatic pressure and to act as a shock absorber for system pressure surges.
- (2) The accumulator is located immediately aft of the left hydraulic power manifold and is accessible through the left main gear inboard door. It is mounted with two corner brackets and clamp blocks at the upper and lower port fittings.
- (3) The accumulator is installed in the pressure line of the hydraulic power system and is initially charged with 1000 psi of dry nitrogen. As the system pressure builds up, fluid is forced into the upper chamber of the accumulator, further compressing the trapped nitrogen to approximately 3000 psi. With full hydraulic system pressure, 3000 psi is indicated on the pressure gage adjacent to the filler valve. This reserve pressure smooths out any momentary lag in the pump's response to the system's demand for greater fluid flows. The accumulator permits a gradual rise in system pressure, thereby absorbing the shock of pump surges and relieving the piping and system operating units of high-impact loads. When the engine-driven hydraulic pumps are not operating, the accumulator provides system pressure (at a diminishing rate) until a quantity equal to the stored volume in the accumulator has been used by the system.


T. Hydraulic System Priority Valve (See Figure 21.)

- (1) The priority valve is located in the left wheel well near the left hydraulic power manifold. The valve is installed in the hydraulic pressure line, between the two power manifolds, downstream of the pressure supply takeoff port for the flight controls. The priority valve is a


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

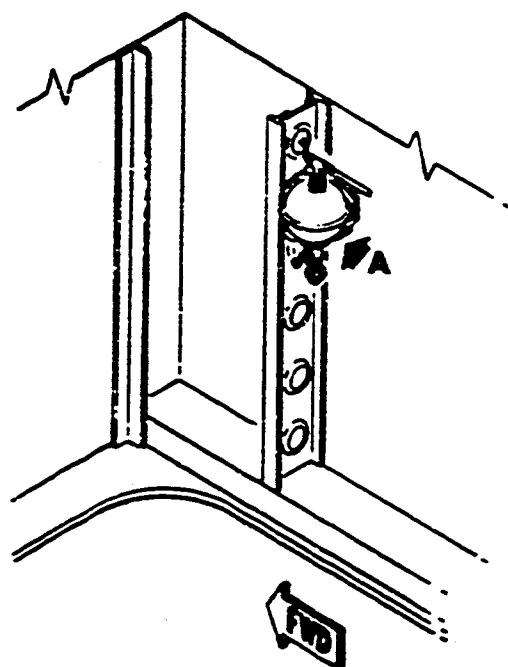

LEFT MAIN GEAR  
WHEEL WELL

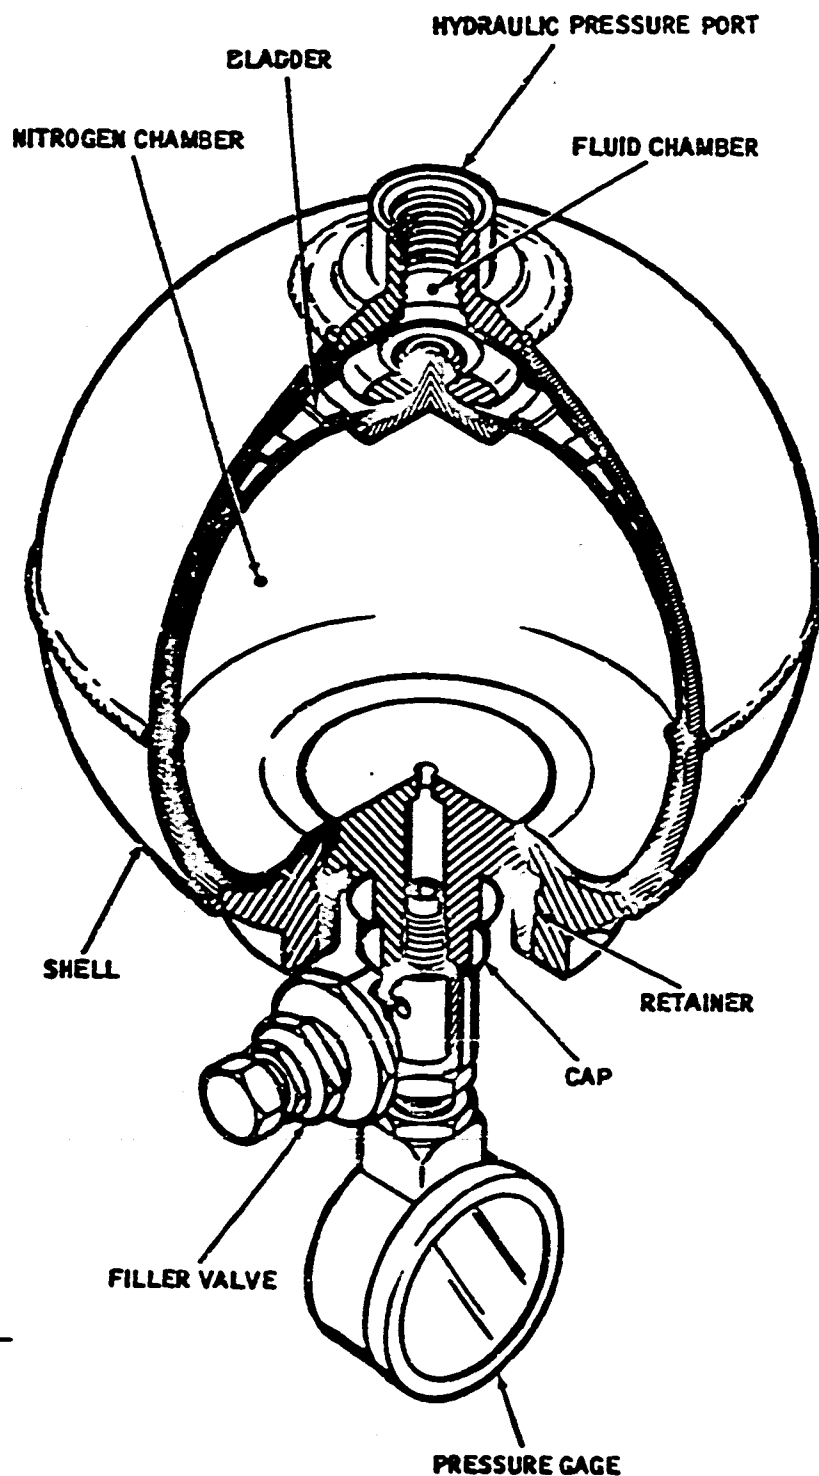

VIEW A

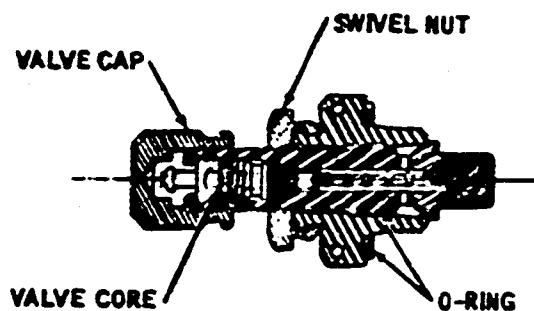

FILLER VALVE

Hydraulic Power System Accumulator --  
 Cutaway View  
 Figure 20

HA2-30



29-10-0  
 CODE 24  
 Page 37

Jan 15/68

Printed in U.S.A.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

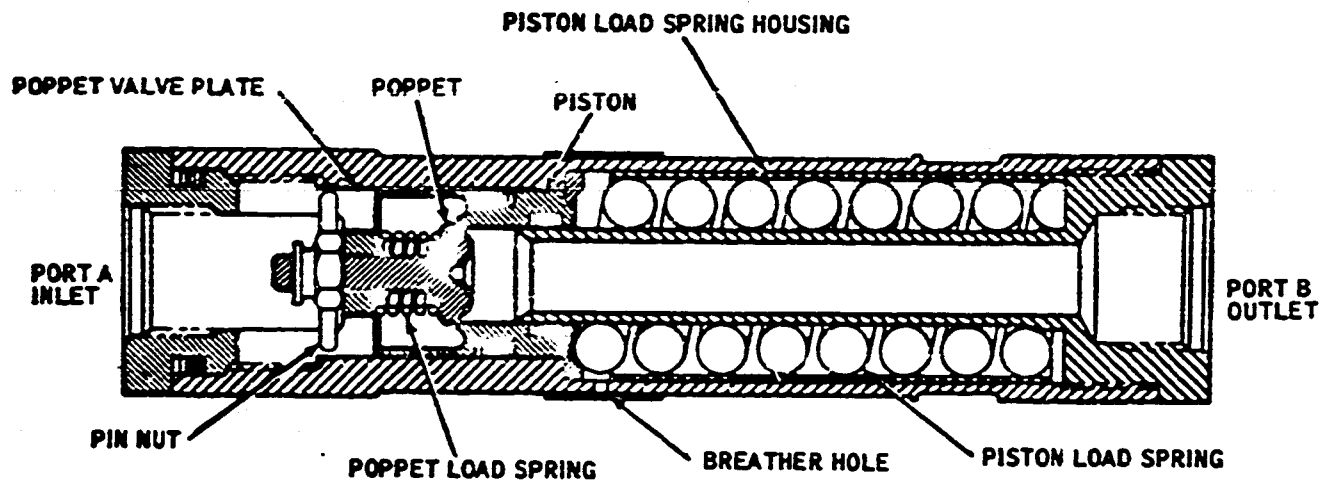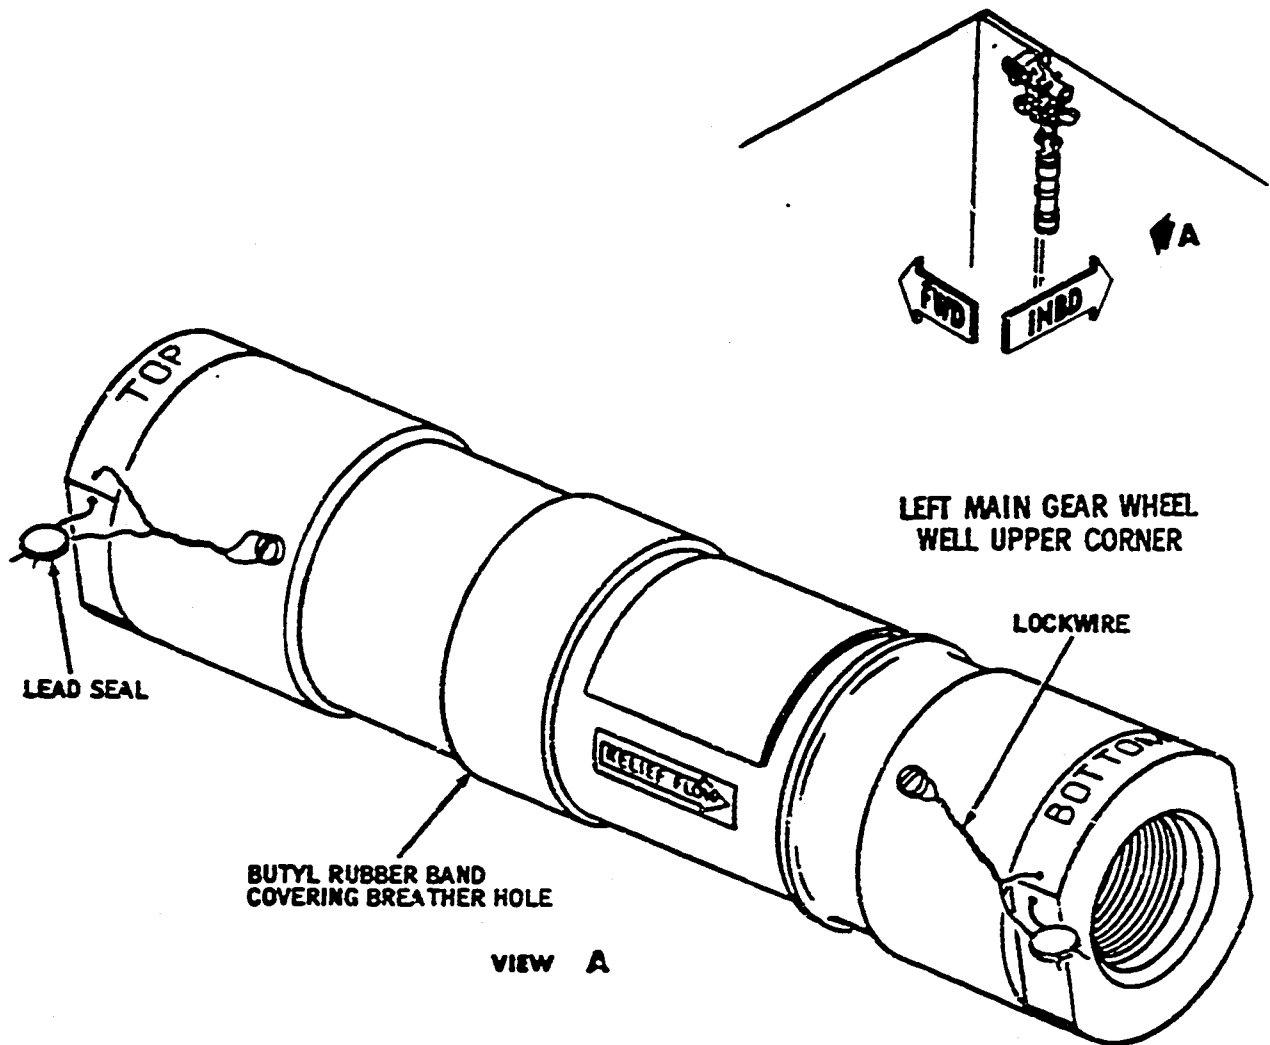

HA2-856

29-10-0  
 CODE 24  
 Page 38

Hydraulic System Priority Valve -- Cutaway View  
 Figure 21

Printed in U.S.A.

Jan 15/68

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

balanced relief valve which reserves initial hydraulic pressure (up to 2150 psi maximum) for use in the flight control systems. The valve consists of a body with an inlet, an outlet, and a breather port. Internally, the valve contains a poppet valve plate, a poppet, a poppet valve load-spring, a piston, a piston load-spring, and a piston load-spring housing. The piston load-spring housing chamber is vented to ambient air through a breather hole which is covered by a butyl rubber band.

- (2) The priority valve shuts off hydraulic pressure to all subsystems downstream of the left power manifold, whenever the hydraulic pressure drops below 1700 psi minimum. At this point, the valve closes to reserve the hydraulic pressure for use in the flight control systems, preventing them from reverting to manual operation. When the hydraulic pressure rises to 2150 maximum, the priority valve opens and supplies pressure to the right manifold and all subsystems downstream of the priority valve.
- (3) Hydraulic fluid from the left power manifold enters the priority valve through the inlet port, passes through the poppet valve plate holes, and applies pressure against the piston. When sufficient hydraulic pressure is applied to the piston, the piston load-spring compresses, unseating the poppet and permitting full flow through the valve. When the hydraulic pressure decreases to less than the opposing force value of the piston load-spring, the load-spring forces the piston against the poppet and shuts off fluid flow through the valve.
- (4) The maximum flow available from both engine-driven hydraulic pumps is: 44 to 45 gpm at takeoff, climb, and cruise configurations; 26 to 28 gpm at descent, approach, and engine idle configurations.
- (5) Some of the larger hydraulic system demands are as follows:
  - (a) Gear retraction -- 17 gpm (10 - 12 seconds)
  - (b) Gear extension -- 14 gpm (10 - 12 seconds)
  - (c) Wing flaps down -- 8 gpm (10 seconds)
  - (d) Wing flaps up -- 3 gpm (22 seconds)
  - (e) Horizontal stabilizer -- 7 gpm
  - (f) Ailerons -- 17 gpm (25°/second)
  - (g) Rudder -- 3 gpm (25°/second)
- (6) There are various combinations of hydraulic system operations which could cause momentary reversion of the flight controls to manual operation, the priority valve assures that the left power manifold receives all the hydraulic fluid pressure under conditions of very large flow demands.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

U. Hydraulic System Selector Control Lever

- (1) The hydraulic system selector control lever is a manually actuated, mechanical lever detented to three positions. The lever provides a mechanical means, through cables, for positioning the system selector valve and the auxiliary hydraulic pump supply selector valve. The hydraulic system selector control lever is located on the system engineer's control pedestal. The lever is attached to a drive sector, located on a common shaft with the other control pedestal sectors. The lever and sector are accessible through the cover plates on the system engineer's pedestal.
- (2) To put the hydraulic power system in the bypass condition, the system selector control lever is lifted out of detent and moved to bypass/general system position. At the same time, the cable moves the sector and pushrod of the system selector valve to the No. 1 position. The pushrod positions the system selector valve to the No. 1 bypass position. At the same time, the cables from the system selector valve sector move the auxiliary pump supply selector valve sector to No. 1 (auxiliary) position. The auxiliary pump supply selector valve remains in the auxiliary supply position through the idle feature of the sector rigging. In this condition, the engine-driven pump pressure is ported to the reservoir and the auxiliary pump supplies pressure to the general system. In this position, the fluid is supplied to the auxiliary pump from the low standpipe in the hydraulic system reservoir. To put the system into the alternate condition, the selector control lever is lifted out of detent and moved to the general system/main gear downlock and flaps position. The cables move the system selector valve sector to the No. 3 (alternate) position. The system selector valve sector moves the cables rotating the auxiliary pump supply selector valve sector to the No. 3 (alternate) position. As the sector rotates, the end of the arm moves away from the idle position. This positions the valves to the alternate position, supplying fluid to the auxiliary pump from the auxiliary pump alternate reservoir. In this position, fluid from the auxiliary pump is ported to the wing flap control valve and main gear downlock cylinders. Engine-driven pump pressure is ported to the general system.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - TROUBLESHOOTING

1. Troubleshooting

Possible Causes	Isolation Procedure	Correction
<b>A. NO ENGINE-DRIVEN PUMP HYDRAULIC SYSTEM PRESSURE</b>		
(1) Hydraulic system selector control lever in bypass/general system position.	Check control lever for selection.	Place control lever in system (normal position).
(2) Hydraulic pump switches in bypass position.	Check position of switches.	Place switches in on position.
(3) Hydraulic reservoir fluid too low.	Check fluid level or reservoir.	Fill reservoir to proper level.
(4) Dual-filter and relief valve bypassing or filters clogged.	Check function of valve or condition of filters.	Replace relief valve or filters.
(5) Failure of system selector valve.	Check function of valve.	Replace valve.
(6) System selector control valve blocking pressure to system.	Check rigging of valve linkage.	Rig system selector mechanical control system.
	Check for broken or loose cable in control system.	Replace cable if broken, and rig system.
	Check linkage from cable drum to valve operating crank.	Rig system and adjust crank.

Jun 15/67

Printed in U S A

29-10-C  
CODE 1  
Page 101

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
<b>A. NO ENGINE-DRIVEN PUMP HYDRAULIC SYSTEM PRESSURE (Continued)</b>		
(7) Defective engine-driven hydraulic pump.	Check pump for proper function.	Replace pump.
(8) Fire shutoff valve closed.	Check valve for proper position, function, and rigging.	Repair, replace, or rig valve as necessary.
<b>B. LOW ENGINE-DRIVEN PUMP HYDRAULIC SYSTEM PRESSURE</b>		
(1) Malfunction or dual-filter and relief valve.	Check function of valve.	Replace valve.
(2) Hydraulic leaks in system.	Check for broken lines or loose fittings.	Replace lines or tighten fittings.
(3) Defective hydraulic engine-driven pump.	Check pump for proper function.	Replace pump.
<b>C. FAILURE OF MECHANICAL CONTROL SYSTEM</b>		
(1) Misalignment of system selector control lever and system selector valve.	Check alignment of lever and valve.	Adjust control system to correct alignment.
(2) Too much slack in system cable run.	Check rigging load of cables.	Adjust rigging.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
<b>C. FAILURE OF MECHANICAL CONTROL SYSTEM (Continued)</b>		
(3) Broken system selector valve pushrod.	Check condition of pushrod.	Replace pushrod.
<b>D. SLUGGISH ACTION OF MECHANICAL CONTROL SYSTEM</b>		
(1) Frayed cable runs.	Check cables for fraying.	Replace frayed cables.
(2) Binding or cables or pulleys.	Check for obstructions on cables or pulleys	Remove obstructions.
(3) Damaged pulleys.	Check pulleys.	Replace pulleys.

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 1  
Page 103

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - ADJUSTMENT/TEST

1. General

- A. The hydraulic system selector valve and the auxiliary pump supply selector valve are mechanically connected with a cable system and pushrods. Both valves are simultaneously controlled by the hydraulic system selector control lever in the flight compartment. The following procedures provide adjustment instructions for the system selector valve and auxiliary pump supply selector valve control systems.
- B. Turnbuckles on the system selector valve control cables are located in the forward cargo compartment ceiling.
- C. Turnbuckles on the auxiliary hydraulic pump supply selector valve control cables are located in the left main gear wheel well.
- D. The numbers in parentheses in the following text correspond to callouts in Figure 501.


2. Adjustment/Test Hydraulic Power Mechanical Control System

A. Adjust Control System

- (1) Remove hydraulic system selector valve pushrod (4) and auxiliary pump supply selector valve pushrod (8).
- (2) Place hydraulic system selector control lever (1) in bypass/general system detent position.
- (3) Adjust turnbuckles (2 and 12) on system selector valve control cables to obtain standard rig for 1/16-inch cables (see Figure 502).
- (4) Differentially adjust turnbuckles (2 and 12) on system selector valve control cables, to align indicating mark (3) on drum (11) with upper guard pin (14) in bracket assembly.
- (5) Safety turnbuckles (2 and 12) with lockwire.
- (6) Place hydraulic system selector control lever (1) in general system (normal) position.
- (7) Manually position operating crank (5) of system selector valve (13) so that crank is pointing forward (see Figure 501, view B-B).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL


HA2-517A

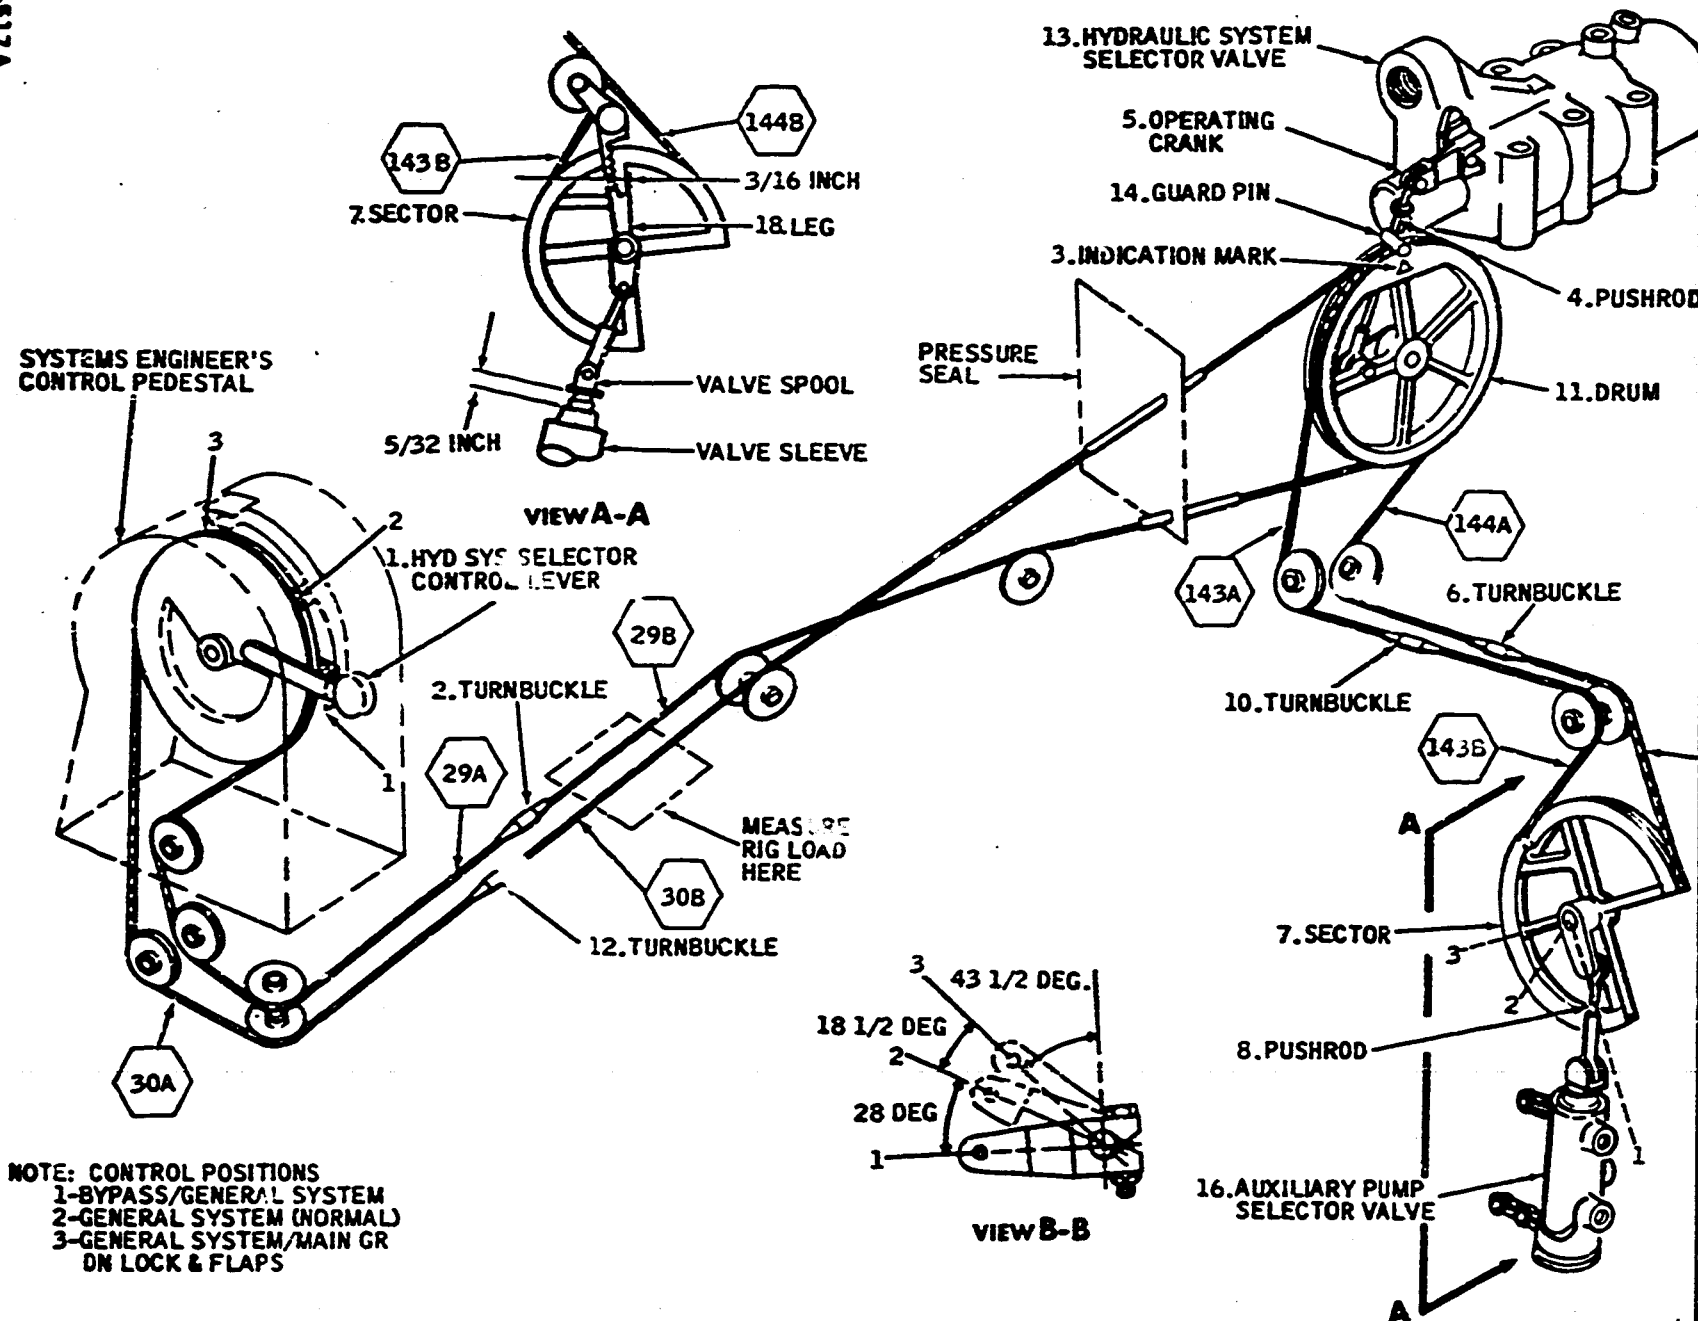

Hydraulic Power Mechanical Control  
 System -- Adjustment Diagram  
 Figure 501



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

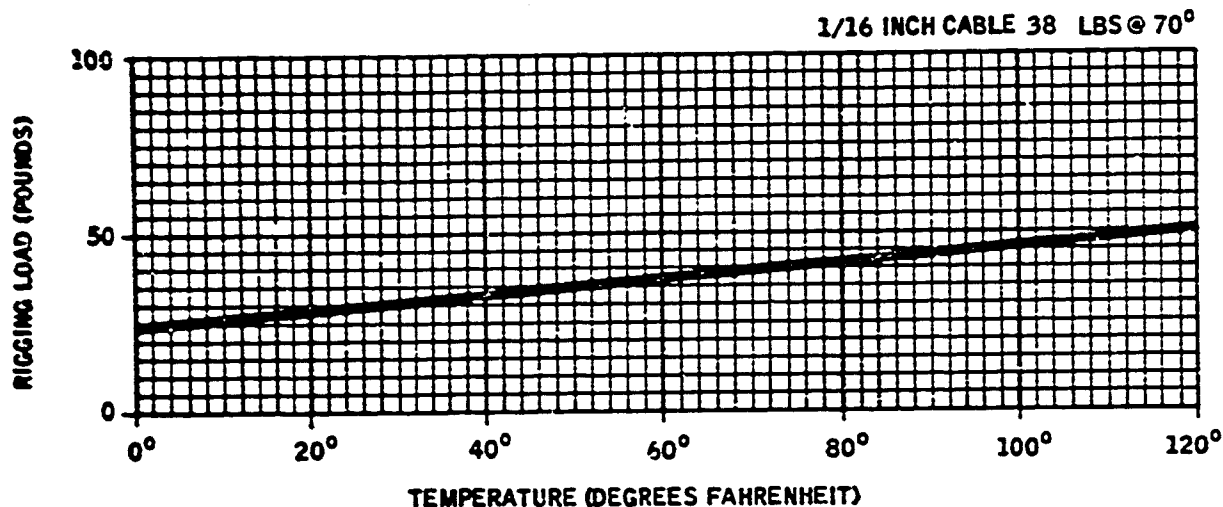

1. GRAPH VALUES INCLUDE 10% STRUCTURAL DEFLECTION.
2. RELIABLE TENSIO METERS MUST BE USED FOR ADJUSTING THE RIGGING LOADS. THE ACCURACY OF THE RIGGING LOAD MUST BE MAINTAINED WITHIN  $\pm 5$  POUNDS ON 1/16 INCH CABLE

HA2-199

Cable Rigging Tension Chart  
Figure 502

- (8) Connect hydraulic test stand to ground service connections, and pressurize hydraulic system (see 29-00).

**CAUTION:** MAKE CERTAIN THAT LANDING GEAR GROUND LOCKPINS ARE INSTALLED AND THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION.

- (9) Rotate operating crank (5) up and aft to position where flow through system selector valve stops.

**NOTE:** Flow stoppage is indicated by a momentary increase in pressure reading of system accumulator pressure gage.

Operating crank (5) is positioned on control valve, during bench check (see Figure 501, view B-B).

- (10) Adjust length of system selector valve pushrod (4) to equal measurement between attaching points on drum (11) and operating crank (5) of valve (13).
- (11) Lengthen system selector valve pushrod (4) 7/32 inch by rotating each end of pushrod three turns. Secure ends of pushrod, and install on crank (5) and drum (11).

29-10-0  
CODE 1  
Page 503

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (12) Depressurize hydraulic system (see 29-00).
- (13) Place hydraulic system selector control lever in bypass/general system position.
- (14) Check alignment of indicating mark on drum (11) with upper guard pin (14) of bracket.
- (15) Adjust turnbuckles (6 and 10) on auxiliary pump selector valve (16) control cables to obtain standard rig for 1/16 inch cables (see Figure 502).
- (16) Differentially adjust turnbuckles (6 and 10) on auxiliary pump selector valve (16) control cables, to position spoke of auxiliary pump selector valve sector (7) 3/16 inch past edge of leg (18) of its support bracket (see Figure 501, view A-A).
- (17) Safety turnbuckles (6 and 10) with lockwire.
- (18) Extend spool of auxiliary pump selector valve (16) 5/32 inch beyond valve sleeve (see Figure 501, view A-A).
- (19) Adjust length of auxiliary pump selector valve (16) pushrod (8) to match measurement between sector (7) and valve spool. Install pushrod and secure.

**B. Test Control System**

**CAUTION:** BEFORE PERFORMING FOLLOWING STEPS, MAKE CERTAIN THAT LANDING GEAR GROUND LOCKPINS ARE INSTALLED AND THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION.

- (1) Pressurize hydraulic system (see 29-00).
- (2) Operate hydraulic system selector control lever several times through full travel.  
  
**NOTE:** Swaged tubes should extend a minimum of 3/4 inch from the pressure seal at the extremes of cable travel.
- (3) Check each lever position in relation to operating crank position (see Figure 501, view B-B).
- (4) Place hydraulic system selector control lever in bypass/general system position. Measurement between valve spool and sleeve should be 5/32 inch (see Figure 501, view A-A).
- (5) Check that measurement between valve spool and valve sleeve, as pushrod passes over top dead center, is 1/16 inch.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Place hydraulic system selector control lever in general system/main gear downlock and flaps position. Measurement between valve spool and valve sleeve should be 13/16 inch.
- (7) Depressurize hydraulic system (see 29-00).

C. Cable Assemblies

NOTE: The cable run numbers and the segment letters in the following chart correspond to the callouts in Figure 501.

Function	Cable Run Number	Segment Letter
Hydraulic bypass (normal and bypass)	29/30	A/A B/B
Hydraulic suction (open and closed)	143/144	A/A
Hydraulic suction (open)	143	B
Hydraulic suction (close)	144	B

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 1  
Page 505

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - ADJUSTMENT/TEST

1. General


- A. The hydraulic system selector valve and the auxiliary pump supply selector valve are mechanically connected with a cable system and pushrods. Both valves are simultaneously controlled by the hydraulic system selector control lever in the flight compartment. The following procedures provide adjustment instructions for the system selector valve and auxiliary pump supply selector valve control systems.
- B. Turnbuckles on the system selector valve control cables are located in the forward cargo compartment ceiling.
- C. Turnbuckles on the auxiliary hydraulic pump supply selector valve control cables are located in the left main gear wheel well.
- D. The numbers in parentheses in the following text correspond to callouts in Figure 501.

2. Adjustment/Test Hydraulic Power Mechanical Control System

A. Adjust Control System


- (1) Remove hydraulic system selector valve pushrod (4) and auxiliary pump supply selector valve pushrod (8).
- (2) Place hydraulic system selector control lever (1) in bypass/general system detent position.
- (3) Adjust turnbuckles (2 and 12) on system selector valve control cables to obtain standard rig for 1/16-inch cables (see Figure 502).
- (4) Differentially adjust turnbuckles (2 and 12) on system selector valve control cables, to align indicating mark (3) on drum (11) with upper guard pin (14) in bracket assembly.
- (5) Safety turnbuckles (2 and 12) with lockwire.
- (6) Place hydraulic system selector control lever (1) in general system (normal) position.
- (7) Manually position operating crank (5) of system selector valve (13) so that crank is pointing forward (see Figure 501, view B-B).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

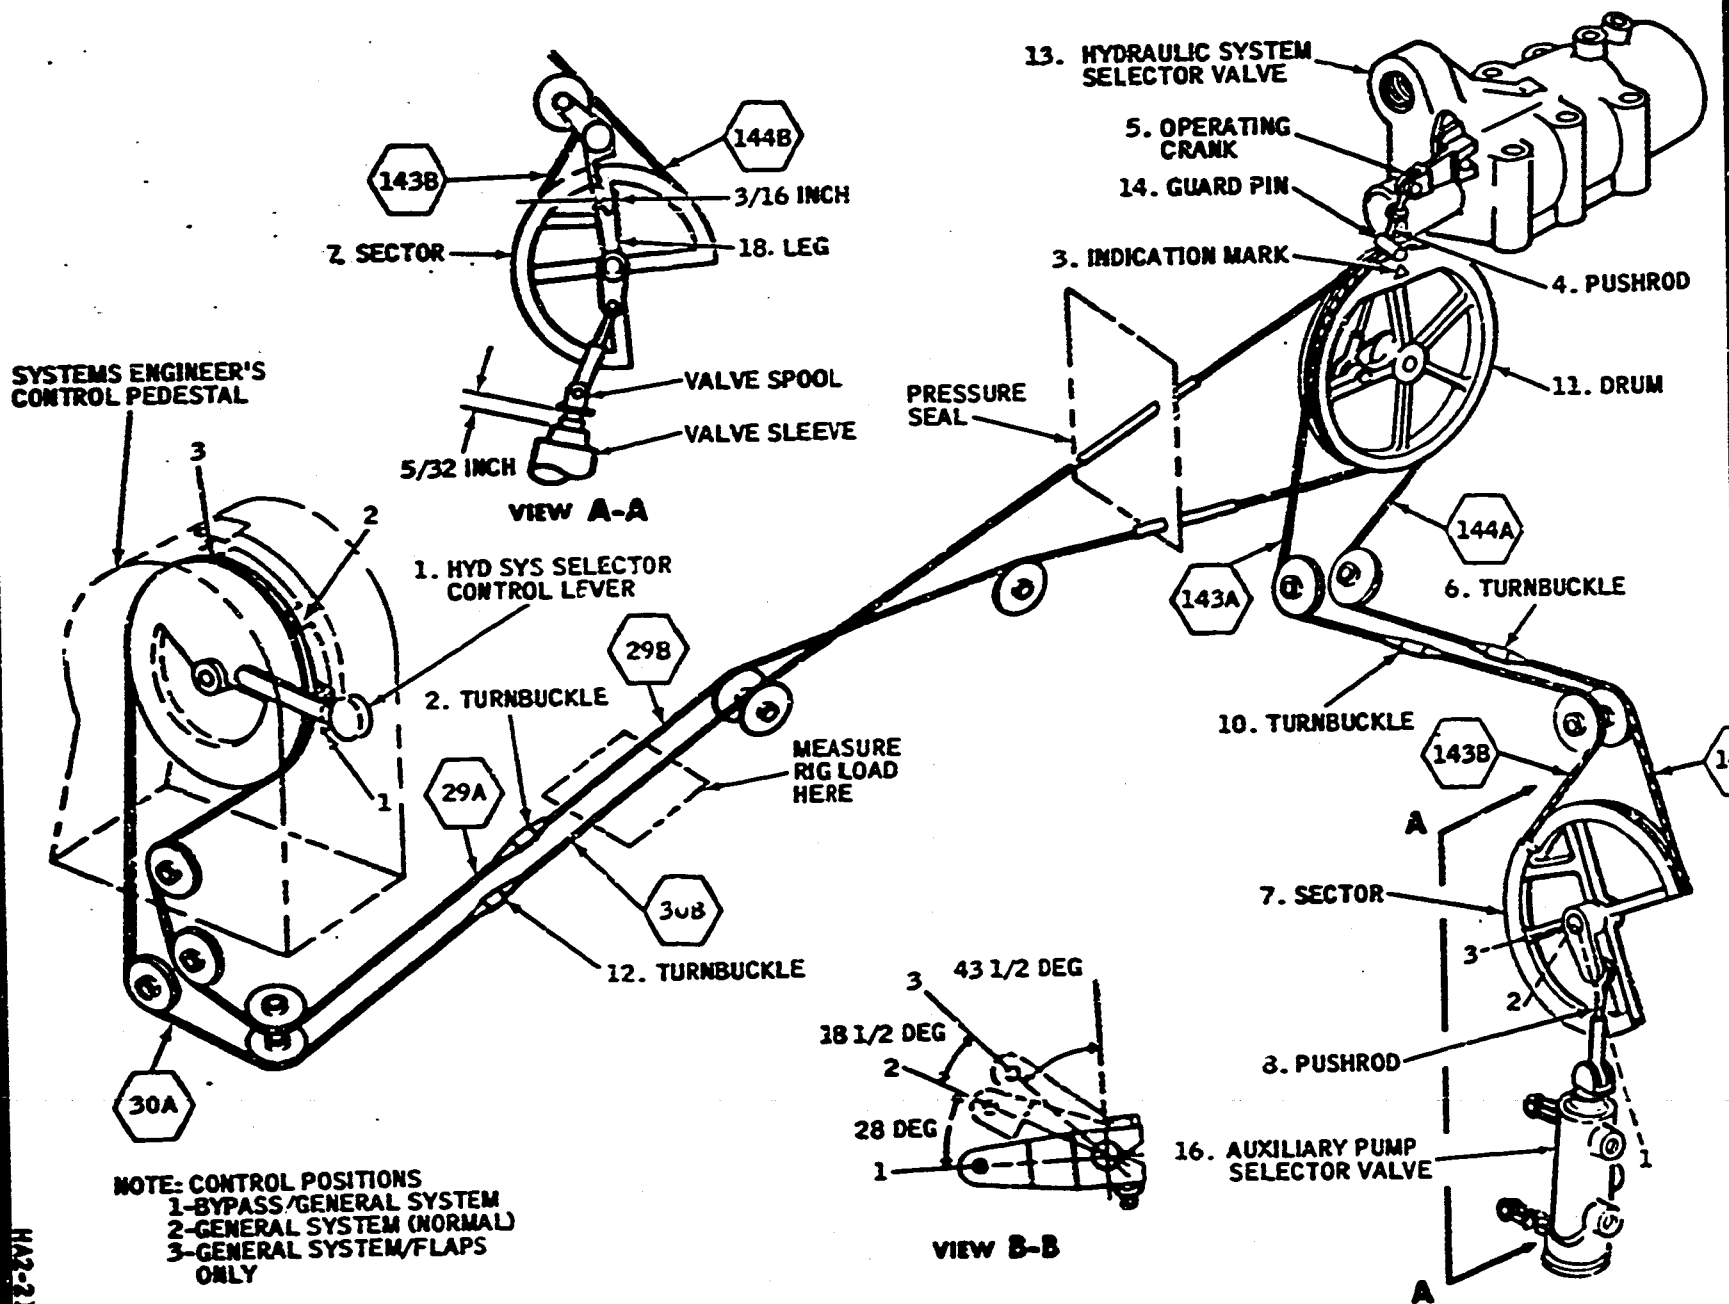

Hydraulic Power Mechanical Control  
 System -- Adjustment Diagram  
 Figure 501

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

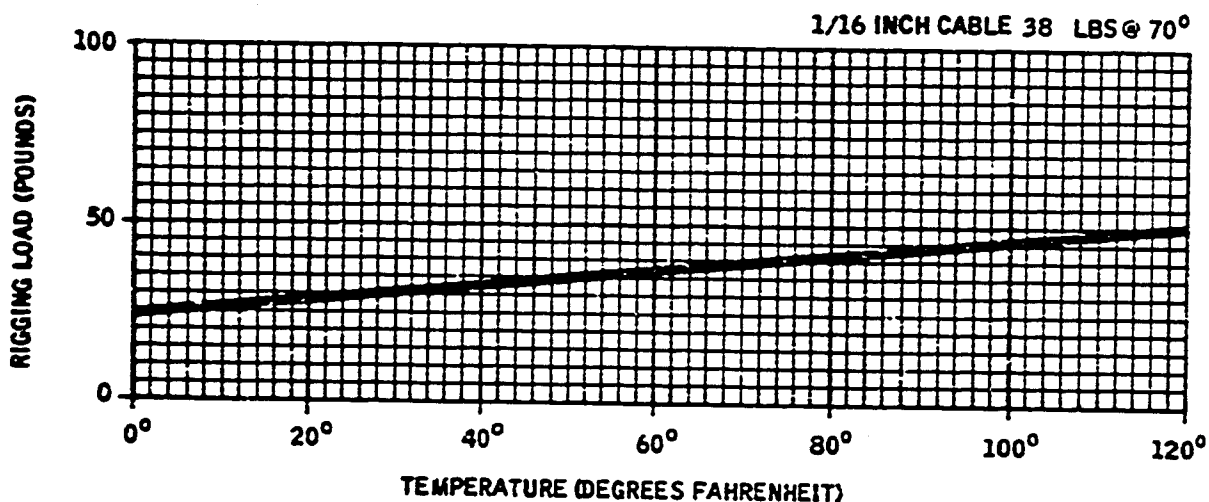

1. GRAPH VALUES INCLUDE 10% STRUCTURAL DEFLECTION.
2. RELIABLE TENSIMETERS MUST BE USED FOR ADJUSTING THE RIGGING LOADS. THE ACCURACY OF THE RIGGING LOAD MUST BE MAINTAINED WITHIN  $\pm 5$  POUNDS ON 1/16 INCH CABLE

HA2-199

Cable Rigging Tension Chart  
Figure 502

- (8) Connect hydraulic test stand to ground service connections, and pressurize hydraulic system (see 29-00).

**CAUTION:** MAKE CERTAIN THAT LANDING GEAR GROUND LOCKPINS ARE INSTALLED AND THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION.

- (9) Rotate operating crank (5) up and aft to position where flow through system selector valve stops.

**NOTE:** Flow stoppage is indicated by a momentary increase in pressure reading of system accumulator pressure gage.

Operating crank (5) is positioned on control valve, during bench check (see Figure 501, view B-B).

- (10) Adjust length of system selector valve pushrod (4) to equal measurement between attaching points on drum (11) and operating crank (5) of valve (13).
- (11) Lengthen system selector valve pushrod (4)  $7/32$  inch by rotating each end of pushrod three turns. Secure ends of pushrod, and install on crank (5) and drum (11).

Jun 15/67

Printed in U.S.A.

29-10-0  
CODE 2  
Page 503

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (12) Depressurize hydraulic system (see 29-00).
- (13) Place hydraulic system selector control lever in bypass/general system position.
- (14) Check alignment of indicating mark on drum (11) with upper guard pin (14) of bracket.
- (15) Adjust turnbuckles (6 and 10) on auxiliary pump selector valve (16) control cables to obtain standard rig for 1/16 inch cables (see Figure 502).
- (16) Differentially adjust turnbuckles (6 and 10) on auxiliary pump selector valve (16) control cables, to position spoke of auxiliary pump selector valve sector (7) 3/16 inch past edge of leg (13) of its support bracket (see Figure 501, view A-A).
- (17) Safety turnbuckles (6 and 10) with lockwire.
- (18) Extend spool of auxiliary pump selector valve (16) 5/32 inch beyond valve sleeve (see Figure 501, view A-A).
- (19) Adjust length of auxiliary pump selector valve (16) pushrod (8) to match measurement between sector (7) and valve spool. Install pushrod and secure.

**B. Test Control System**

**CAUTION:** BEFORE PERFORMING FOLLOWING STEPS, MAKE CERTAIN THAT LANDING GEAR GROUND LOCKPINS ARE INSTALLED AND THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION.

- (1) Pressurize hydraulic system (see 29-00).
- (2) Operate hydraulic system selector control lever several times through full travel.

**NOTE:** Swaged tubes should extend a minimum of 3/4 inch from the pressure seal at the extremes of cable travel.

- (3) Check each lever position in relation to operating crank position (see Figure 501, view B-B).
- (4) Place hydraulic system selector control lever in bypass/general system position. Measurement between valve spool and sleeve should be 5/32 inch (see Figure 501, view A-A).
- (5) Check that measurement between valve spool and valve sleeve, as pushrod passes over top dead center, is 1/16 inch.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Place hydraulic system selector control lever in general system/flaps only position. Measurement between valve spool and valve sleeve should be 13/16 inch.
- (7) Depressurize hydraulic system (see 29-00).

C. Cable Assemblies

NOTE: The cable run numbers and the segment letters in the following chart correspond to the callouts in Figure 501.

Function	Cable Run Number	Segment Letter
Hydraulic bypass (normal and bypass)	29/30	A/A B/B
Hydraulic suction (open and closed)	143/144	A/A
Hydraulic suction (open)	143	B
Hydraulic suction (close)	144	B



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - INSPECTION/CHECK

1. General

- A. When any portion of the hydraulic system has been replaced or repaired, the affected system should be checked for normal operation and for leakage. To check a system for leaks, follow the basic instructions in the applicable paragraph of the leak check procedure using normal pressure of 3000 psi on the system. The operational test procedures for each subsystem will be found in the applicable chapter and section for that system. Examples: Landing gear, Chapter 32; Flight Controls, Chapter 27, etc.

2. Tools and Equipment Required

- A. Hydraulic test stand equipped with a variable-displacement hydraulic pump capable of delivering 20 gpm and 3000 psi using Skydrol hydraulic fluid. The maximum operating temperature should not exceed 180°F (82.2°C).
- B. Hydraulic gage capable of indicating 4000 psi maximum for reading brake pressures.
- C. Pressure cylinder equipped with pressure regulator (3000 psi, clean, dry compressed nitrogen or air) for checking airbrake system, reservoir pressurization system, and suction system.
- D. Bubble fluid solution, MIL-L-25567, for leak checking reservoir air connections.

3. Inspection/Check Main Hydraulic System

A. Leak Check Main Hydraulic System Preliminary Procedures

- (1) Open main gear inboard doors (see Chapter 32).

WARNING: MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION, AND THAT LANDING GEAR GROUND LOCKPINS ARE INSTALLED.

- (2) Make certain that all control valves have been properly adjusted and that all hydraulic lines and air brake lines are properly connected.
- (3) Connect hydraulic test stand to airplane ground service pressure and supply connections (see 29-00).
- (4) Pressurize hydraulic system to 3000 psi (see 29-00).

WARNING: BEFORE PRESSURIZING HYDRAULIC SYSTEM MAKE CERTAIN THAT POSITION OF FLAP CONTROL LEVER AGREES WITH FLAP POSITION.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

B. Leak Check General System and Landing Gear Downlines

- (1) Perform leak check preliminary procedures.
- (2) Check main gear wheels, release parking brakes, and check parking brake lever linkage for freedom of movement. If linkage is not free, refer to Chapter 32.
- (3) Place aileron and rudder hydraulic power shutoff valve control levers in off position.
- (4) Hold pressure on system for at least 5 minutes. Check all pressure lines, return lines, and fittings in general system, landing gear downlines, nose gear downlines, brake accumulator lines, nosewheel steering lines, and nosewheel steering reserve accumulator lines for leaks.
- (5) Disconnect nosewheel torque links, and place upper torque link in compressed oleo position.
- (6) Operate nosewheel steering fully in both directions. Hold pressure in each position for 5 minutes. Check all lines and fittings in nosewheel steering and reserve pressure accumulator system and bogie swivel unlock system for external leaks.
- (7) Depressurize hydraulic system.

C. Leak Check Landing Gear Uplines and Fittings

- (1) Perform leak check preliminary procedures.
- (2) Place landing gear control lever in up position.

**WARNING:** MAKE CERTAIN THAT LANDING GEAR LOCKPINS ARE PROPERLY INSTALLED.

- (3) Close main gear inboard doors; hold pressure for at least 5 minutes, open doors, and check landing gear uplines and fittings for leaks.
- (4) Place landing gear control lever in down position.
- (5) Depressurize hydraulic system (see 29-00).

D. Leak Check Wing Flap Lines and Fittings

- (1) Perform leak check preliminary procedures.
- (2) Place wing flap handle in up position.

**WARNING:** MAKE CERTAIN THAT WING FLAP AREA IS CLEAR OF PERSONNEL AND OBSTRUCTIONS.

- (3) Hold pressure on system for at least 5 minutes. Place wing flap handle in down position, and hold pressure on system for at least 5 minutes.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) Depressurize hydraulic system.
- (5) Check all wing flap lines and fittings for leaks.

E. Leak Check Control Surface Systems Lines and Fittings

- (1) Perform leak check preliminary procedures.
- (2) Place aileron and rudder hydraulic power shutoff valve control levers in on position, and place wing flap handle in down position.
- (3) Move rudder, ailerons, and horizontal stabilizer surfaces to their extreme positions.
- (4) Hold pressure on these systems for at least 5 minutes, and then check all lines and fittings in the aileron and rudder systems for leaks.
- (5) Move surfaces in the opposite direction.
- (6) Hold pressure for at least 5 minutes, and then check all lines and fittings for leaks.
- (7) Place aileron and rudder shutoff valves in off position.
- (8) Depressurize hydraulic system.

F. Leak Check Brake System Lines and Fittings

- (1) Install a 3000 psi gage at one pair of brakes of each main gear.
- (2) Perform leak check preliminary procedures.
- (3) Depress each brake pedal to give 2000 psi indication on gages installed at brakes.

CAUTION: DO NOT EXCEED 2500 PSI AT THE BRAKES.

- (4) Hold pressure for at least 5 minutes, and check all lines and fittings for leaks.
- (5) Depressurize hydraulic system.
- (6) Remove gages from brakes.
- (7) Bleed brakes (see Chapter 32).

G. Leak Check Emergency Airbrake System

- (1) Make certain airbrake control lever in flight compartment is on off position.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Pressurize emergency airbrake air bottle to 3000 psi (see Chapter 32); hold pressure, and check lines, fittings, and valves for external leaks. Allow for temperature variations during check (see Chapter 12 for variation chart).
- (3) Depressurize airbrake air bottle (see Chapter 32).
- (4) Disconnect and plug airbrake lines at shuttle valves, located at lower side of brake lockout cylinders on each main gear strut.
- (5) Disconnect brake outlet lines from air brake control valve, and connect lines to compressed air or nitrogen cylinder.
- (6) Apply 2500 psi air pressure to airbrake lines; hold pressure, and check lines and fittings for leaks.
- (7) Relieve air pressure, and restore system to original configuration. Pressurize airbrake air bottle to 3000 (+100, -0) psi.

H. Leak Check Rudder Standby Hydraulic Power System

- (1) Operate rudder standby hydraulic pump to pressurize rudder power system.
- (2) Operate rudder to left and right positions; check all lines and fittings for leaks.
- (3) Shut down rudder standby hydraulic pump.

I. Leak Check Suction System

- (1) Close No. 2 and No. 3 engine's hydraulic fire shutoff valves.
- (2) Disconnect drain line from outlet port of reservoir relief valve, located downstream of reservoir air bleed valve at forward end of left main gear wheel well. Cap relief valve outlet port.
- (3) Apply 50 psi pressure to suction system through ground service supply connection, using regulated cylinder supply.
- (4) Check all supply lines and fittings for leakage.
- (5) Bubble check following connections:
  - (a) Regulator-aspirator outlet port, and inlet port on reservoir.
  - (b) All eight gage connections and ports.
  - (c) Air bleed valve and relief valve connections.
- (6) Remove cap from relief valve. Valve should relieve pressure at 45 (+5 -0) psi.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (7) Connect drain line to outlet port of reservoir relief valve.
- (8) Open engine hydraulic fire shutoff valves.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MAIN - INSPECTION/CHECK

1. General

- A. When any portion of the hydraulic system has been replaced or repaired, the affected system should be checked for normal operation and for leakage. To check a system for leaks, follow the basic instructions in the applicable paragraph of the leak check procedure using normal pressure of 3000 psi on the system. The operational test procedures for each subsystem will be found in the applicable chapter and section for that system. Examples: Landing gear, Chapter 32; Flight Controls, Chapter 27, etc.

2. Tools and Equipment Required

- A. Hydraulic test stand equipped with a variable-displacement hydraulic pump capable of delivering 20 gpm and 3000 psi using Skydrol hydraulic fluid. The maximum operating temperature should not exceed 180°F (82.2°C).
- B. Hydraulic gage capable of indicating 4000 psi maximum for reading brake pressures.
- C. Pressure cylinder equipped with pressure regulator (3000 psi, clean, dry compressed nitrogen or air) for checking airbrake system, reservoir pressurization system, and suction system.
- D. Bubble fluid solution, MIL-L-25567, for leak checking reservoir air connections.

3. Inspection/Check Main Hydraulic System

A. Leak Check Main Hydraulic System Preliminary Procedures

- (1) Open main gear inboard doors (see Chapter 32).

WARNING: MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION, AND THAT LANDING GEAR GROUND LOCKPINS ARE INSTALLED.

- (2) Make certain that all control valves have been properly adjusted and that all hydraulic lines and air brake lines are properly connected.
- (3) Connect hydraulic test stand to airplane ground service pressure and supply connections (see 29-00).
- (4) Pressurize hydraulic system to 3000 psi (see 29-00).

WARNING: BEFORE PRESSURIZING HYDRAULIC SYSTEM MAKE CERTAIN THAT POSITION OF FLAP CONTROL LEVER AGREES WITH FLAP POSITION.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

B. Leak Check General System and Landing Gear Downlines

- (1) Perform leak check preliminary procedures.
- (2) Check main gear wheels, release parking brakes, and check parking brake lever linkage for freedom of movement. If linkage is not free, refer to Chapter 32.
- (3) Place aileron and rudder hydraulic power shutoff valve control levers in off position.
- (4) Hold pressure on system for at least 5 minutes. Check all pressure lines, return lines, and fittings in general system, landing gear downlines, nose gear downlines, brake accumulator lines, nosewheel steering lines, and nosewheel steering reserve accumulator lines for leaks.
- (5) Disconnect nosewheel torque links, and place upper torque link in compressed oleo position.
- (6) Operate nosewheel steering fully in both directions. Hold pressure in each position for 5 minutes. Check all lines and fittings in nosewheel steering and reserve pressure accumulator system for external leaks.
- (7) Depressurize hydraulic system.

C. Leak Check Landing Gear Uplines and Fittings

- (1) Perform leak check preliminary procedures.
- (2) Place landing gear control lever in up position.

**WARNING:** MAKE CERTAIN THAT LANDING GEAR LOCKPINS ARE PROPERLY INSTALLED.

- (3) Close main gear inboard doors; hold pressure for at least 5 minutes, open doors, and check landing gear uplines and fittings for leaks.
- (4) Place landing gear control lever in down position.
- (5) Depressurize hydraulic system (see 29-00).

D. Leak Check Wing Flap Lines and Fittings

- (1) Perform leak check preliminary procedures.
- (2) Place wing flap handle in up position.

**WARNING:** MAKE CERTAIN THAT WING FLAP AREA IS CLEAR OF PERSONNEL AND OBSTRUCTIONS.

- (3) Hold pressure on system for at least 5 minutes. Place wing flap handle in down position, and hold pressure on system for at least 5 minutes.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) Depressurize hydraulic system.
- (5) Check all wing flap lines and fittings for leaks.

E. Leak Check Control Surface Systems Lines and Fittings

- (1) Perform leak check preliminary procedures.
- (2) Place aileron and rudder hydraulic power shutoff valve control levers in on position, and place wing flap handle in down position.
- (3) Move rudder, ailerons, and horizontal stabilizer surfaces to their extreme positions.
- (4) Hold pressure on these systems for at least 5 minutes, and then check all lines and fittings in the aileron and rudder systems for leaks.
- (5) Move surfaces in the opposite direction.
- (6) Hold pressure for at least 5 minutes, and then check all lines and fittings for leaks.
- (7) Place aileron and rudder shutoff valves in off position.
- (8) Depressurize hydraulic system.

F. Leak Check Brake System Lines and Fittings

- (1) Install a 3000 psi gage at one brake of each main gear.
- (2) Perform leak check preliminary procedures.
- (3) Depress each brake pedal to give 2000 psi indication on gages installed at brakes.

CAUTION: DO NOT EXCEED 2500 PSI AT THE BRAKES.

- (4) Hold pressure for at least 5 minutes, and check all lines and fittings for leaks.
- (5) Depressurize hydraulic system.
- (6) Remove gages from brakes.
- (7) Bleed brakes (see Chapter 32).

G. Leak Check Emergency Airbrake System

- (1) Make certain airbrake control lever in flight compartment is on off position.



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Pressurize emergency airbrake air bottle to 3000 psi (see Chapter 32); hold pressure, and check lines, fittings, and valves for external leaks. Allow for temperature variations during check (see Chapter 12 for variation chart).
- (3) Depressurize airbrake air bottle (see Chapter 32).
- (4) Disconnect and plug airbrake lines at shuttle valves, located at lower side of brake lockout cylinders on each main gear strut.
- (5) Disconnect brake outlet lines from air brake control valve, and connect lines to compressed air or nitrogen cylinder.
- (6) Apply 2500 psi air pressure to airbrake lines; hold pressure, and check lines and fittings for leaks.
- (7) Relieve air pressure, and restore system to original configuration. Pressurize airbrake air bottle to 3000 (+100, -0) psi.

H. Leak Check Rudder Standby Hydraulic Power System

- (1) Operate rudder standby hydraulic pump to pressurize rudder power system.
- (2) Operate rudder to left and right positions; check all lines and fittings for leaks.
- (3) Shut down rudder standby hydraulic pump.

I. Leak Check Suction System

- (1) Close No. 2 and No. 3 engine's hydraulic fire shutoff valves.
- (2) Disconnect drain line from outlet port of reservoir relief valve, located downstream of reservoir air bleed valve at forward end of left main gear wheel well. Cap relief valve outlet port.
- (3) Apply 50 psi pressure to suction system through ground service supply connection, using regulated cylinder supply.
- (4) Check all supply lines and fittings for leakage.
- (5) Bubble check following connections:
  - (a) Regulator-aspirator outlet and inlet portion on reservoir.
  - (b) All eight gage connections and ports.
  - (c) All bleed valve and relief valve connections.
- (6) Remove cap from relief valve. Valve should relieve pressure at 45 (+5 -0) psi.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (7) Connect drain line to outlet port of reservoir relief valve.
- (8) Open engine hydraulic fire shutoff valves.

Nov 1/69

29-10-0  
CODE 2  
Page 605

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC SYSTEM RESERVOIR - MAINTENANCE PRACTICES

1. General

- A. The hydraulic system reservoir is located on the aft side of the rear spar in the left wing root.
- B. Access is through the left wing root access door.

2. Removal/Installation Hydraulic System Reservoir

A. Remove Reservoir

- (1) Open following circuit breakers:

Circuit Breaker	Panel Section
Auxiliary hydraulic pump control	Cabin bus 4
Hydraulic oil temperature and quantity	Miscellaneous (dc bus)
Hydraulic system overtemperature rudder and aileron	Miscellaneous (dc bus)

WARNING: TAG AND SAFETY CIRCUIT BREAKERS (SEE CHAPTER 20).


- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Drain hydraulic system reservoir (see 29-00, Maintenance Practices).
- (5) Disconnect line from low standpipe port at bottom of reservoir.
- (6) Disconnect line from high standpipe port at bottom of reservoir.
- (7) Disconnect lines from T-fitting at return port A.
- (8) Disconnect line from check valve at return port B.
- (9) Disconnect line from low-pressure return port.
- (10) Disconnect lines from T-fitting at wing flap return port.

Jun 15/67

Printed in U.S.A.

29-10-1  
CODE 1  
Page 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

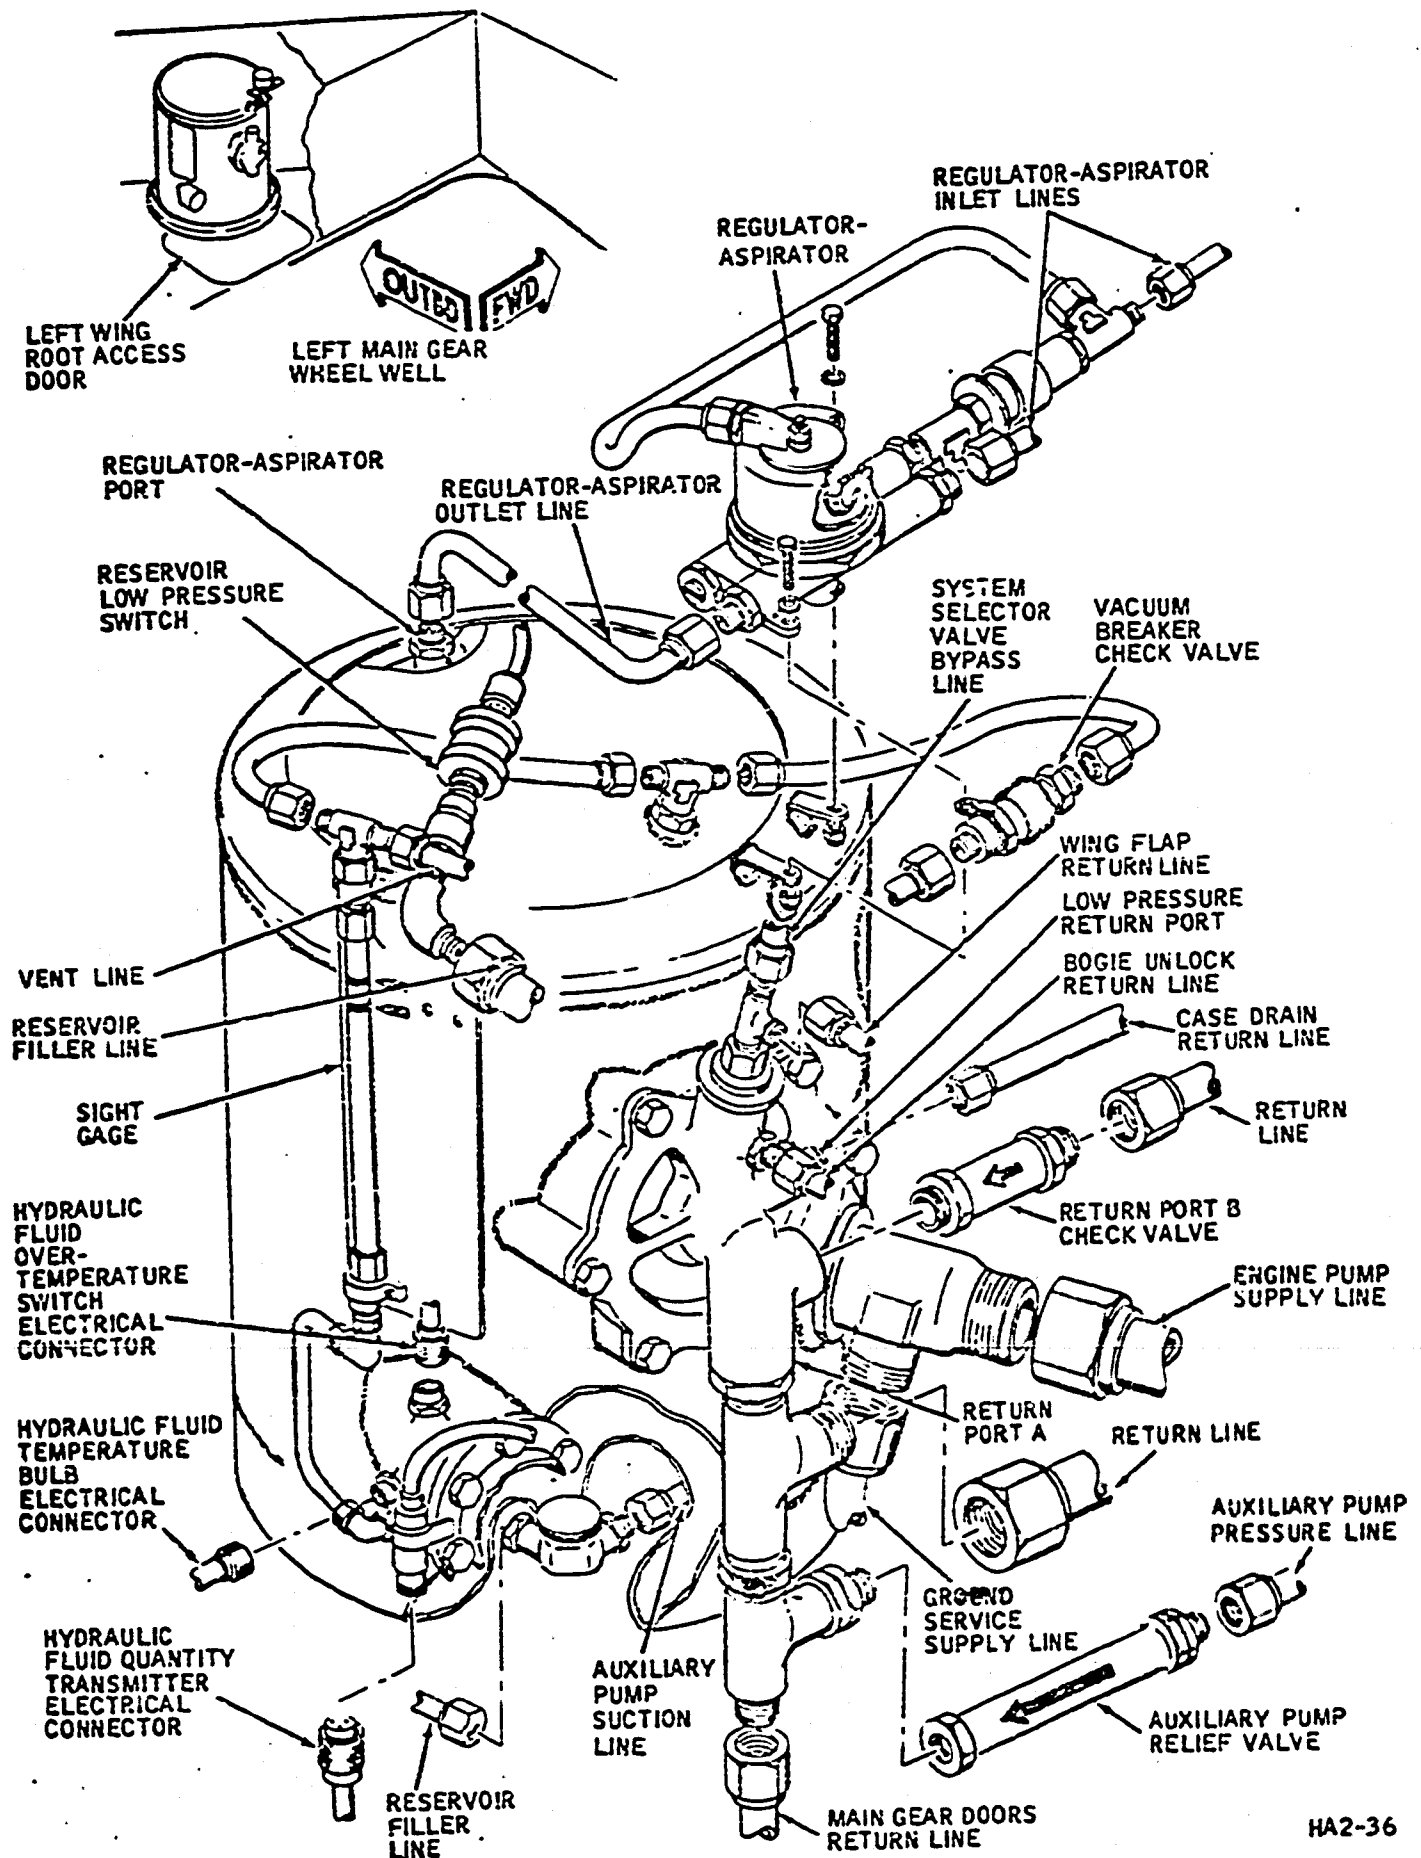


Hydraulic System Reservoir -- Installation  
 Figure 201 (Sheet 1)

29-10-1  
 CODE 1  
 Page 202

Printed in U.S.A.

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

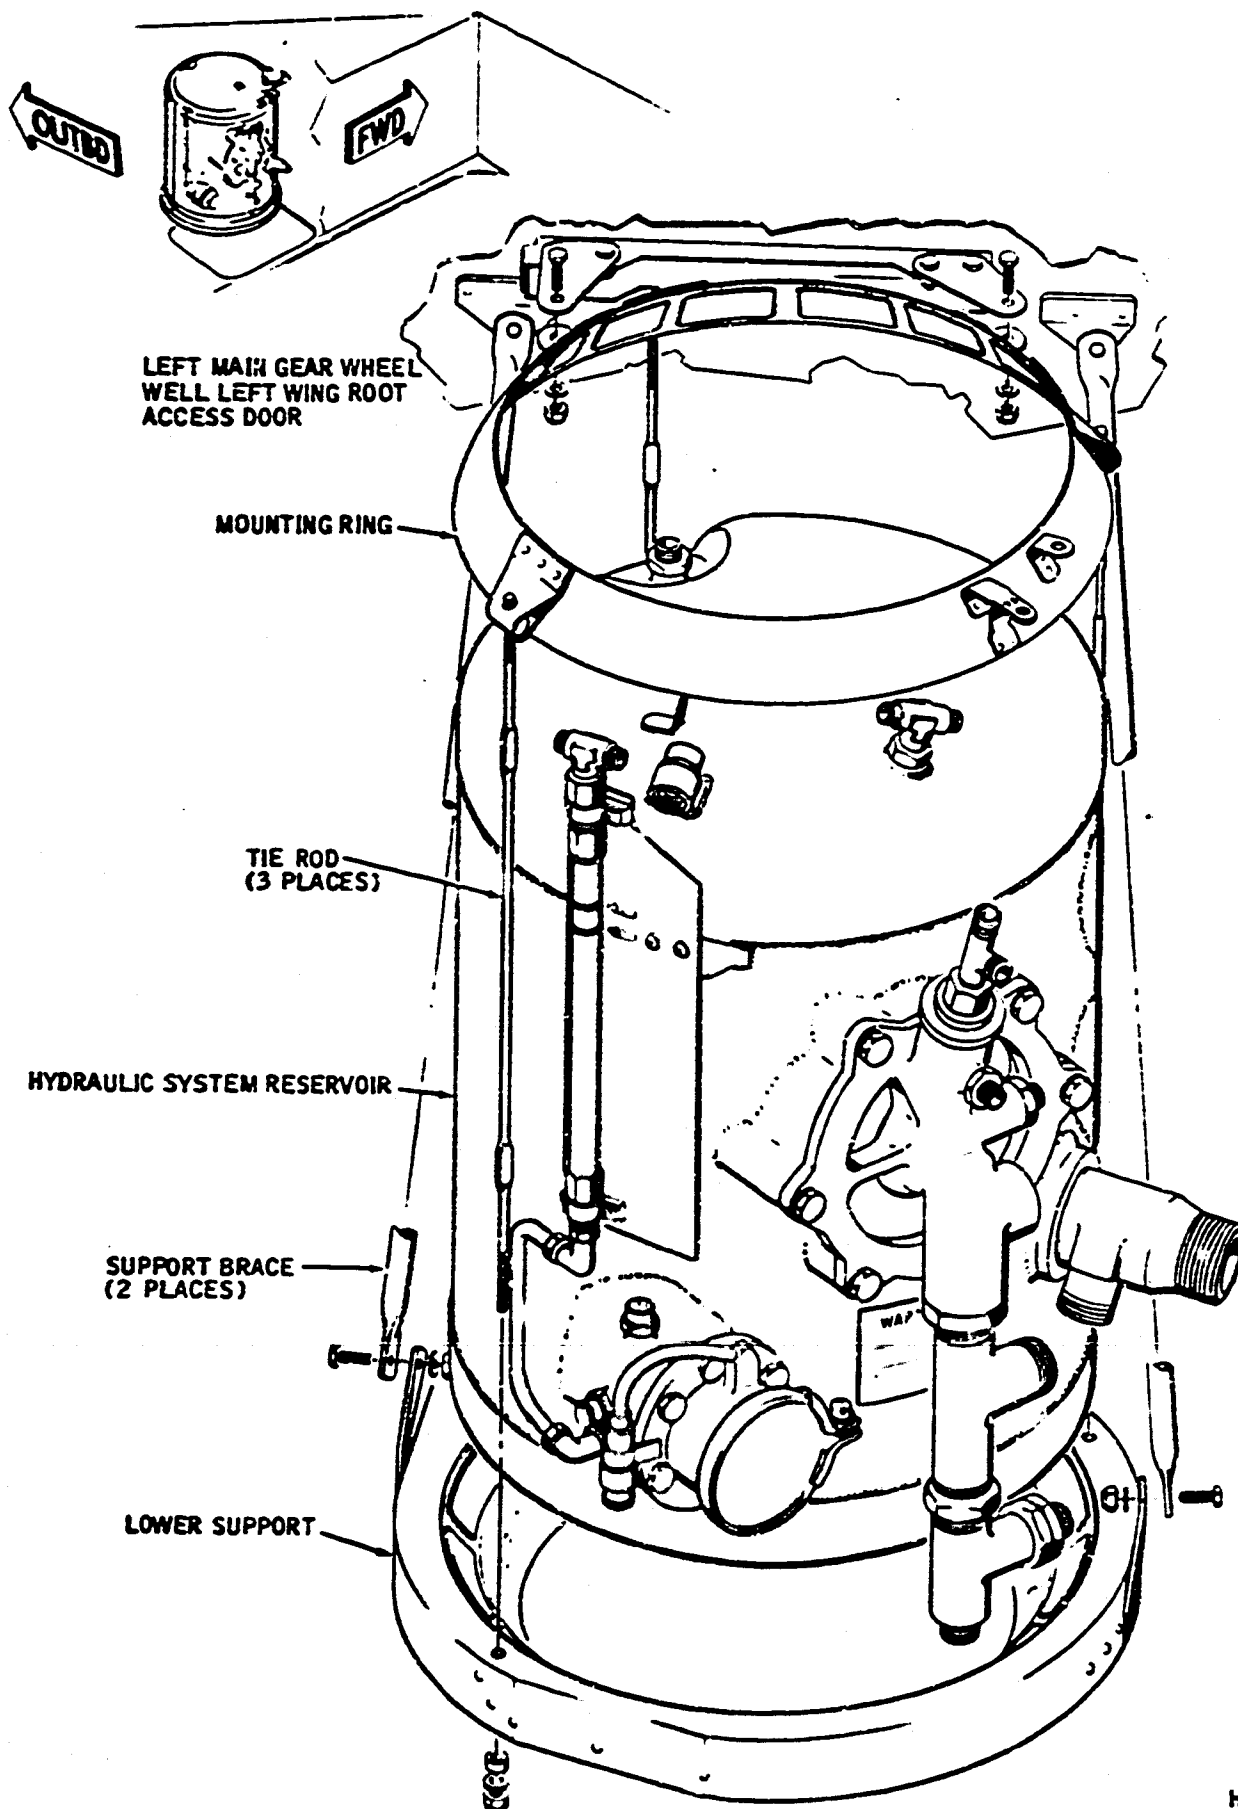

Hydraulic System Reservoir -- Installation  
 Figure 201 (Sheet 2)

HA2-37

29-10-1  
 CODE 1  
 Page 203

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (11) Disconnect line from bogie unlock return port.
- (12) Disconnect reservoir filler vent line from T-fitting at top of sight gage.
- (13) Remove lines from between following fittings:
  - (a) T-fitting on sight gage and reservoir
  - (b) T-fitting at top of reservoir and vacuum breaker check valve.
  - (c) Regulator-aspirator outlet port and reservoir.
- (14) Remove vacuum breaker check valve.
- (15) Disconnect inlet lines from regulator-aspirator and remove regulator-aspirator (see 29-10-3).
- (16) Disconnect line from filler port.
- (17) Disconnect lines from T-fitting at normal supply port.
- (18) Disconnect electrical connectors from hydraulic fluid temperature bulb, hydraulic fluid overtemperature indicator light switch, hydraulic fluid quantity transmitter, and reservoir low-pressure switch.
- (19) Remove bolts securing mounting ring to structure.
- (20) Remove bolts securing mounting ring to lower support. Remove mounting ring and pad.
- (21) Remove clamps which attach main gear door manual open valve hydraulic line to lower support.
- (22) Disconnect braces and lower support structure attachment. Lift reservoir, and remove lower support and then remove reservoir through wing root access door.
- (23) Remove check valve, relief valves, and fittings from reservoir ports; retain for use on new reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

B. Install Reservoir

- (1) Make certain that following circuit breakers are open:

Circuit Breaker	Panel Section
Auxiliary hydraulic pump control	Cabin bus 4
Hydraulic oil temperature and quantity	Miscellaneous (dc bus)
Hydraulic system overtemperature rudder and aileron	Miscellaneous (dc bus)

- (2) Using new O-rings, install all check valves, relief valves, and fittings in reservoir ports.
- (3) Make certain that magnetic drain plug is tightened to torque of 312 ( $\pm 20$ ) inch-pounds. Safety plug with lockwire.
- (4) Install new pad in reservoir lower support and mounting ring if required.
- (5) Place reservoir in wing root access area, place lower support under reservoir, and secure lower support in place.
- (6) Install mounting ring and secure rods to lower support.
- (7) Secure mounting ring to structure.
- (8) Install clamps which attach main gear door manual open valve hydraulic line to lower support.
- (9) Connect electrical connectors to hydraulic fluid temperature bulb, hydraulic fluid overtemperature indicating light switch, hydraulic fluid quantity transmitter, and reservoir low-pressure switch.
- (10) Connect lines to T-fitting in normal supply port.
- (11) Connect line to filler port at top of reservoir.
- (12) Install regulator-aspirator and connect inlet lines to regulator-aspirator (see 29-10-3).
- (13) Install vacuum breaker check valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (14) Install lines between following fittings:
- (a) Regulator-aspirator outlet port and reservoir
  - (b) Vacuum breaker check valve and T-fitting at top of reservoir
  - (c) T-fitting at top of reservoir and T-fitting on sight gage
- (15) Connect reservoir filler vent line to T-fitting on sight gage.
- (16) Connect line to bogie unlock return port.
- (17) Connect line to wing flap return port.
- (18) Connect line to low-pressure return port.
- (19) Connect line to check valve installed in return port B.
- (20) Connect lines to T-fittings at return port A.
- (21) Connect line to low standpipe port at bottom of reservoir.
- (22) Connect line to high standpipe port at bottom of reservoir.
- (23) Fill reservoir as described on instruction placard on reservoir.
- (24) Close following circuit breakers.

Circuit Breaker	Panel Section
Auxiliary hydraulic pump control	Cabin bus 4
Hydraulic oil temperature and quantity	Miscellaneous (dc bus)
Hydraulic system overtemperature rudder and aileron	Miscellaneous (dc bus)

3. Inspection/Check Hydraulic System Reservoir

A. Check Reservoir

- (1) Pressurize hydraulic system (see 29-00, Maintenance Practices).

**WARNING:** MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION AND THAT LANDING GEAR GROUND LOCKPINS ARE INSTALLED.



DOUGLAS AIRCRAFT CO., INC.  
**DC-6 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Place hydraulic system selector control lever in general system (normal) position.
- (3) Operate wing flaps through one complete cycle of operation.

WARNING: MAKE CERTAIN THAT WING FLAP AREA IS CLEAR OF PERSONNEL AND OBSTRUCTIONS.

- (4) Check reservoir low-pressure air gage, located adjacent to air bleed valve in left wheel well, for 30 to 35 psi air pressure indication.
- (5) Check lines between reservoir and reservoir air pressure relief valve for air leaks.
- (6) Check all lines and fittings on reservoir for hydraulic leaks.
- (7) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (8) Check all reservoir lines for security of connections and clearance between lines and adjacent components and structure.
- (9) Check all electrical connectors for security of attachment.
- (10) Check magnetic drain plug for security of installation and lockwire.
- (11) Check reservoir fluid level and fill if necessary as described on instruction placard on reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC SYSTEM RESERVOIR - MAINTENANCE PRACTICES

1. General

- A. The hydraulic system reservoir is located on the aft side of the rear spar in the left wing root.
- B. Access is through the left wing root access door.

2. Removal/Installation Hydraulic System Reservoir

A. Remove Reservoir

- (1) Open following circuit breakers located on EPC circuit breaker panel:

Circuit Breaker	Panel Section
Auxiliary hydraulic pump control	Cabin bus 4
Hydraulic oil temperature and quantity	Miscellaneous (dc bus)
Hydraulic system overtemperature rudder and aileron	Miscellaneous (dc bus)

WARNING: TAG AND SAFETY CIRCUIT BREAKERS (SEE CHAPTER 20).


- (2) Depressurize hydraulic system (29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Drain hydraulic system reservoir (see 29-00, Maintenance Practices).
- (5) Disconnect line from low standpipe port at bottom of reservoir.
- (6) Disconnect line from high standpipe port at bottom of reservoir.
- (7) Disconnect lines from T-fitting at return port A.
- (8) Disconnect line from check valve at return port B.
- (9) Disconnect line from low-pressure return port.
- (10) Disconnect lines from T-fitting at wing flap return port.

Jun 15/67

Printed in U.S.A.


29-10-1  
CODE 2  
Page 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

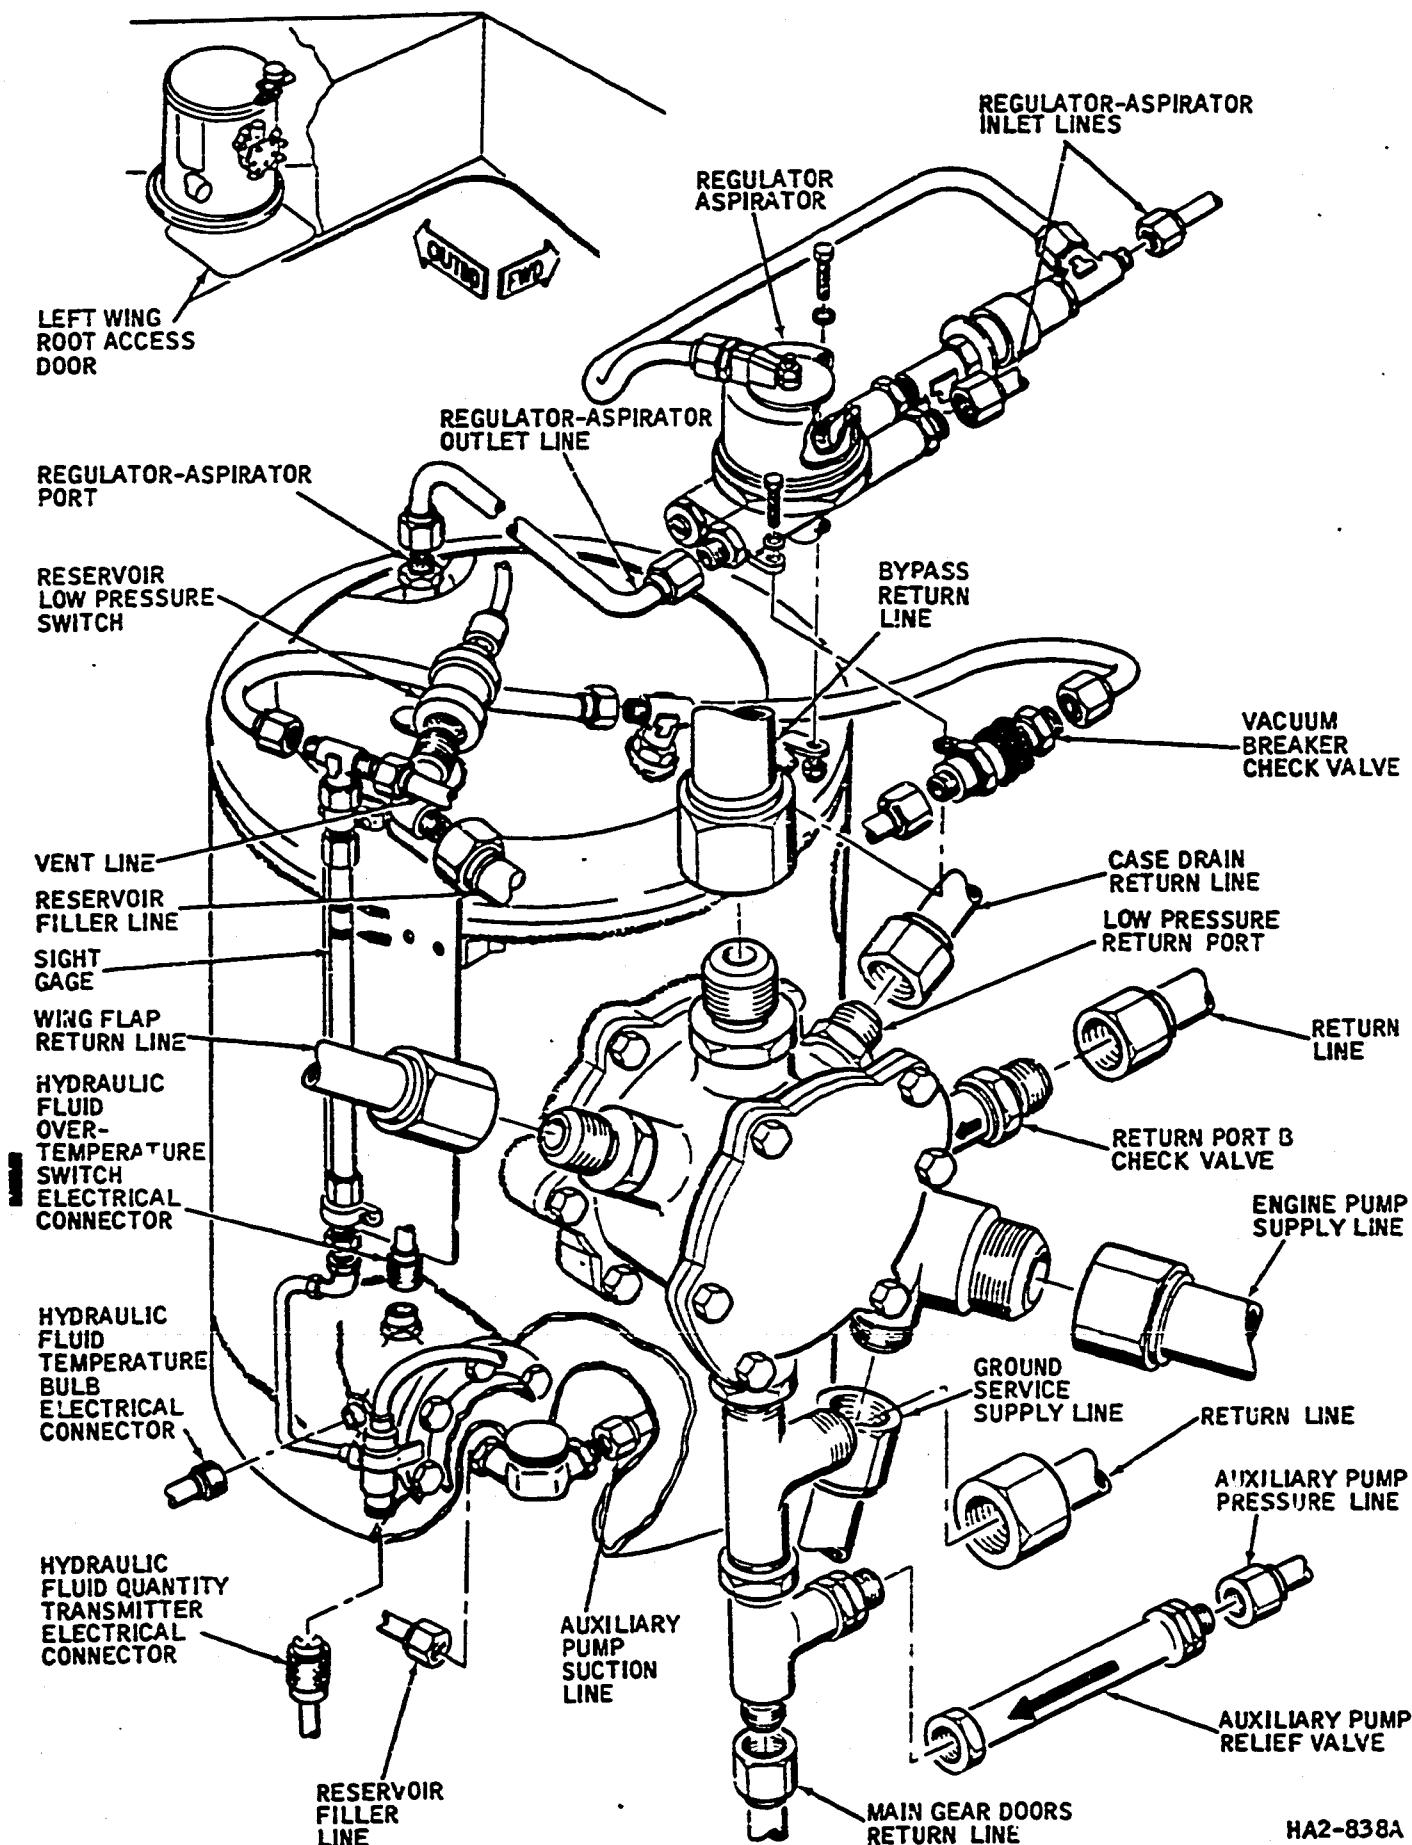

Hydraulic System Reservoir -- Installation  
 Figure 201 (Sheet 1)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

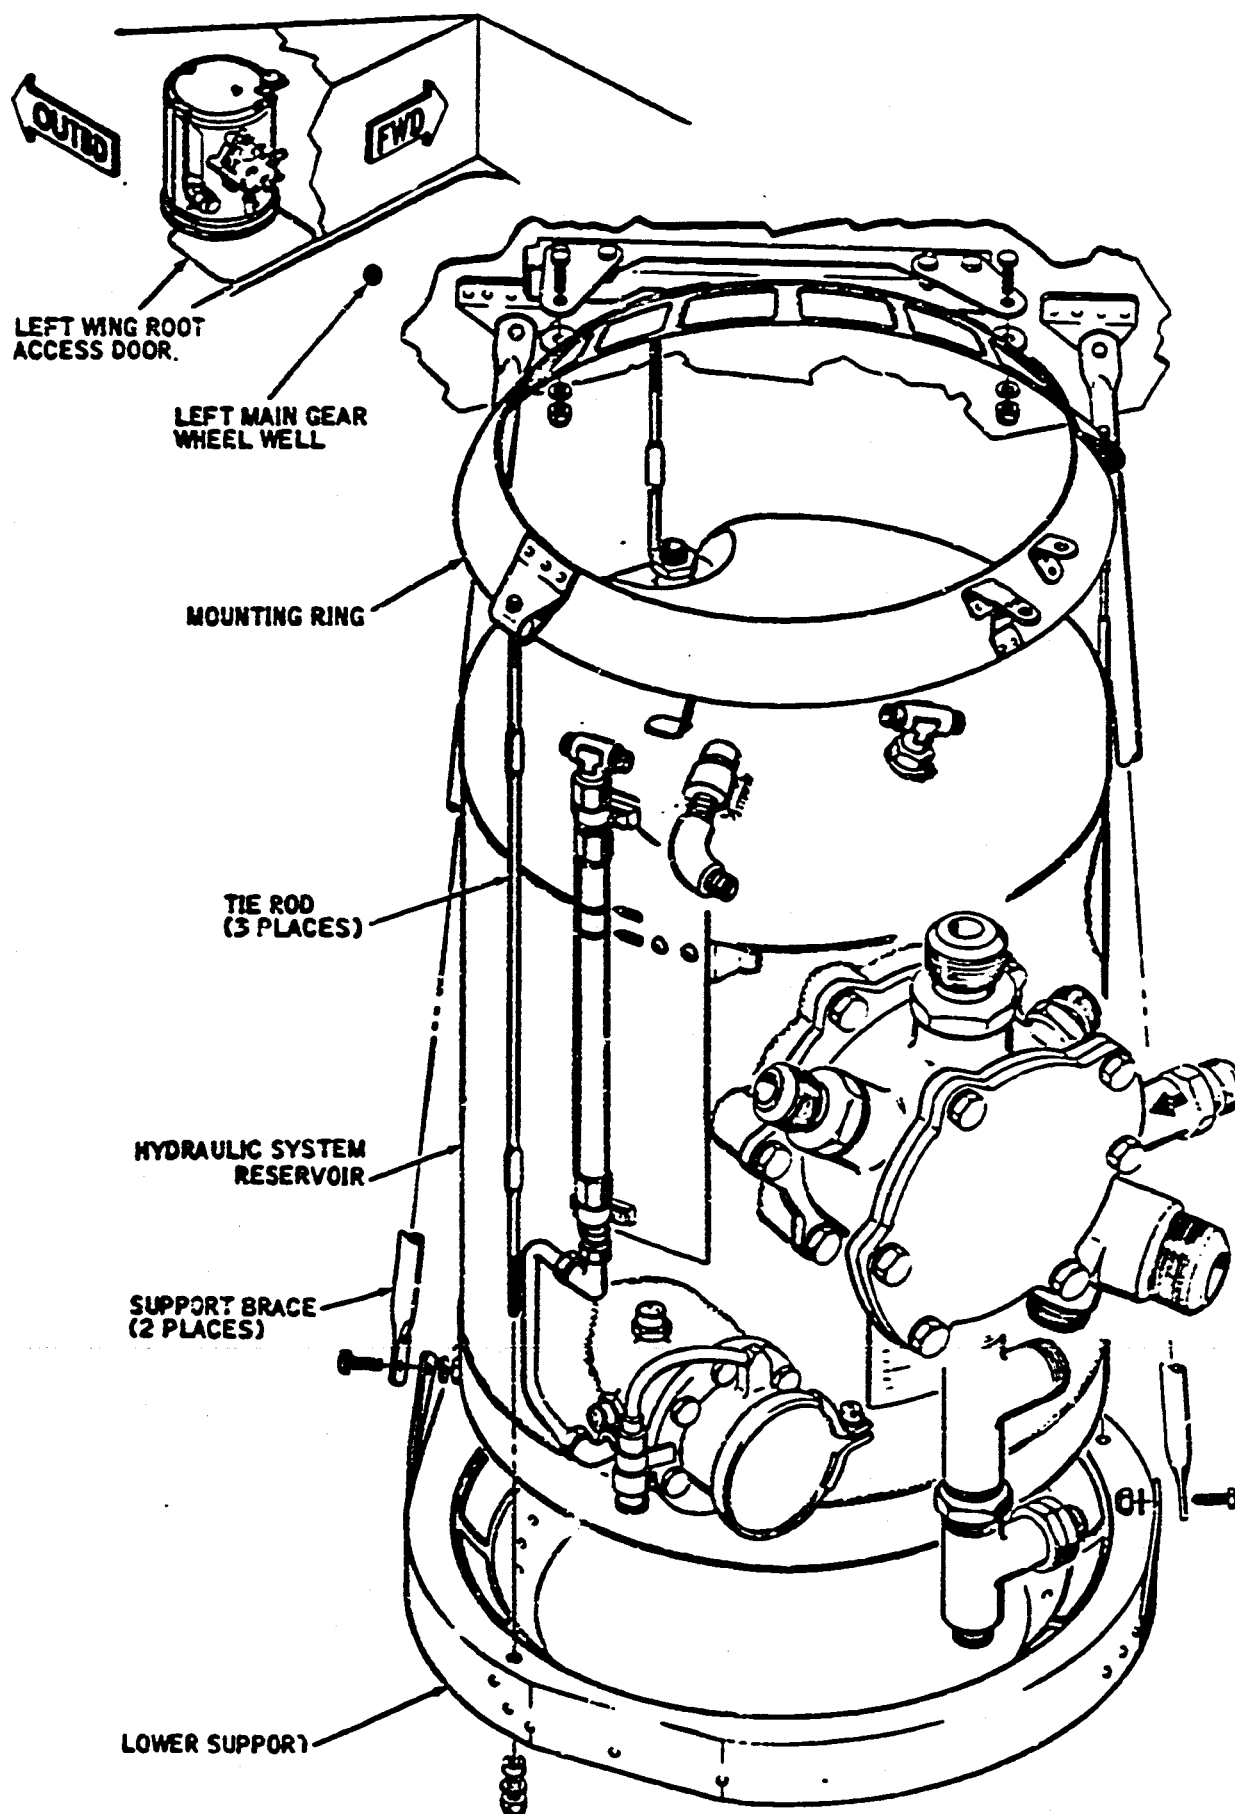

Hydraulic System Reservoir -- Installation  
Figure 201 (Sheet 2)

Jun 15/67

Printed in U S A

HA2-839

29-10-1  
CODE 2  
Page 203

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (11) Disconnect line from bypass port.
- (12) Disconnect reservoir filler vent line from T-fitting at top of sight gage.
- (13) Remove lines from between following fittings:
  - (a) T-fitting on sight gage and reservoir
  - (b) T-fitting at top of reservoir and vacuum breaker check valve
  - (c) Regulator-aspirator outlet port and reservoir
- (14) Remove vacuum breaker check valve.
- (15) Disconnect inlet lines from regulator-aspirator and remove regulator-aspirator (see 29-10-3).
- (16) Disconnect line from filler port.
- (17) Disconnect lines from T-fitting at normal supply port.
- (18) Disconnect electrical connectors from hydraulic fluid temperature bulb, hydraulic fluid overtemperature indicator light switch, hydraulic fluid quantity transmitter, and reservoir low-pressure switch.
- (19) Remove bolts securing mounting ring to structure.
- (20) Remove bolts securing mounting ring to lower support. Remove mounting ring and pad.
- (21) Remove clamps which attach main gear door manual open valve hydraulic line to lower support.
- (22) Disconnect braces and lower support structure attachment. Lift reservoir, and remove lower support and then remove reservoir through wing root access door.
- (23) Remove check valve, relief valves, and fittings from reservoir ports; retain for use on new reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

**B. Install Reservoir**

- (1) Make certain that following circuit breakers located on EPC circuit breaker panel are open:

Circuit Breaker	Panel Section
Auxiliary hydraulic pump control	Cabin bus 4
Hydraulic oil temperature and quantity	Miscellaneous (dc bus)
Hydraulic system overtemperature rudder and aileron	Miscellaneous (dc bus)

- (2) Using new O-rings, install all check valves, relief valves, and fittings in reservoir ports.
- (3) Make certain that magnetic drain plug is tightened to torque of 312 ( $\pm 20$ ) inch-pounds. Safety plug with lockwire.
- (4) Install new pad in reservoir lower support and mounting ring if required.
- (5) Place reservoir in wing root access area, place lower support under reservoir, and secure lower support in place.
- (6) Install mounting ring and secure rods to lower support.
- (7) Secure mounting ring to structure.
- (8) Install clamps which attach main gear door manual open valve hydraulic line to lower support.
- (9) Connect electrical connectors to hydraulic fluid temperature bulb, hydraulic fluid overtemperature indicating light switch, hydraulic fluid quantity transmitter, and reservoir low-pressure switch.
- (10) Connect lines to T-fitting in normal supply port.
- (11) Connect line to filler port at top of reservoir.
- (12) Install regulator-aspirator and connect inlet lines to regulator-aspirator (see 29-10-3).
- (13) Install vacuum breaker check valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (14) Install lines between following fittings:
  - (a) Regulator-aspirator outlet port and reservoir
  - (b) Vacuum breaker check valve and T-fitting at top of reservoir
  - (c) T-fitting at top of reservoir and T-fitting on sight gage
- (15) Connect reservoir filler vent line to T-fitting on sight gage.
- (16) Connect line to bypass port.
- (17) Connect lines to wing flap return port.
- (18) Connect line to low-pressure return port.
- (19) Connect line to check valve installed in return port B.
- (20) Connect lines to T-fittings at return port A.
- (21) Connect line to low standpipe port at bottom of reservoir.
- (22) Connect line to high standpipe port at bottom of reservoir.
- (23) Fill reservoir as described on instruction placard on reservoir.
- (24) Close following circuit breakers.

---

Circuit Breaker	Panel Section
Auxiliary hydraulic pump control	Cabin bus 4
Hydraulic oil temperature and quantity	Miscellaneous (dc bus)
Hydraulic system overtemperature rudder and aileron	Miscellaneous (dc bus)

---

3. Inspection/Check Hydraulic System Reservoir

A. Check Reservoir

- (1) Pressurize hydraulic system (see 29-00, Maintenance Practices).

WARNING: MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION. AND THAT LANDING GEAR GROUND LOCKPINS ARE INSTALLED.

- (2) Place hydraulic system selector control lever in general system (normal) position.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Operate wing flaps through one complete cycle of operation.

WARNING: MAKE CERTAIN THAT WING FLAP AREA IS CLEAR OF PERSONNEL AND OBSTRUCTIONS.

- (4) Check reservoir low-pressure air gage, located adjacent to air bleed valve in left wheel well, for 30 to 35 psi air pressure indication.
- (5) Check lines between reservoir and reservoir air pressure relief valve for air leaks.
- (6) Check all lines and fittings on reservoir for hydraulic leaks.
- (7) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (8) Check all reservoir lines for security of connections and clearance between lines and adjacent components and structure.
- (9) Check all electrical connectors for security of attachment.
- (10) Check magnetic drain plug for security of installation and lockwire.
- (11) Check reservoir fluid level and fill if necessary as described in instruction placard on reservoir.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC SYSTEM RESERVOIR - MAINTENANCE PRACTICES

1. General

- A. The hydraulic system reservoir is located on the aft side of the rear spar in the left wing root.
- B. Access is through the left wing root access door.

2. Removal/Installation Hydraulic System Reservoir

A. Remove Reservoir

- (1) Open following circuit breakers located on EPC circuit breaker panel:

Circuit Breaker	Panel Section
Auxiliary hydraulic pump control	Cabin bus 4
Hydraulic oil temperature and quantity	Miscellaneous (dc bus)
Hydraulic system overtemperature rudder and aileron	Miscellaneous (dc bus)

WARNING: TAG AND SAFETY CIRCUIT BREAKERS (SEE CHAPTER 20).


- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Drain hydraulic system reservoir (see 29-00, Maintenance Practices).
- (5) Disconnect line from low standpipe port at bottom of reservoir.
- (6) Disconnect line from high standpipe port at bottom of reservoir.
- (7) Disconnect lines from T-fitting at return port A.
- (8) Disconnect line from check valve at return port B.
- (9) Disconnect line from low-pressure return port.
- (10) Disconnect lines from T-fitting at wing flap return port.

Jun 15/67

Printed in U.S.A.


29-10-1  
CODE 3  
Page 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

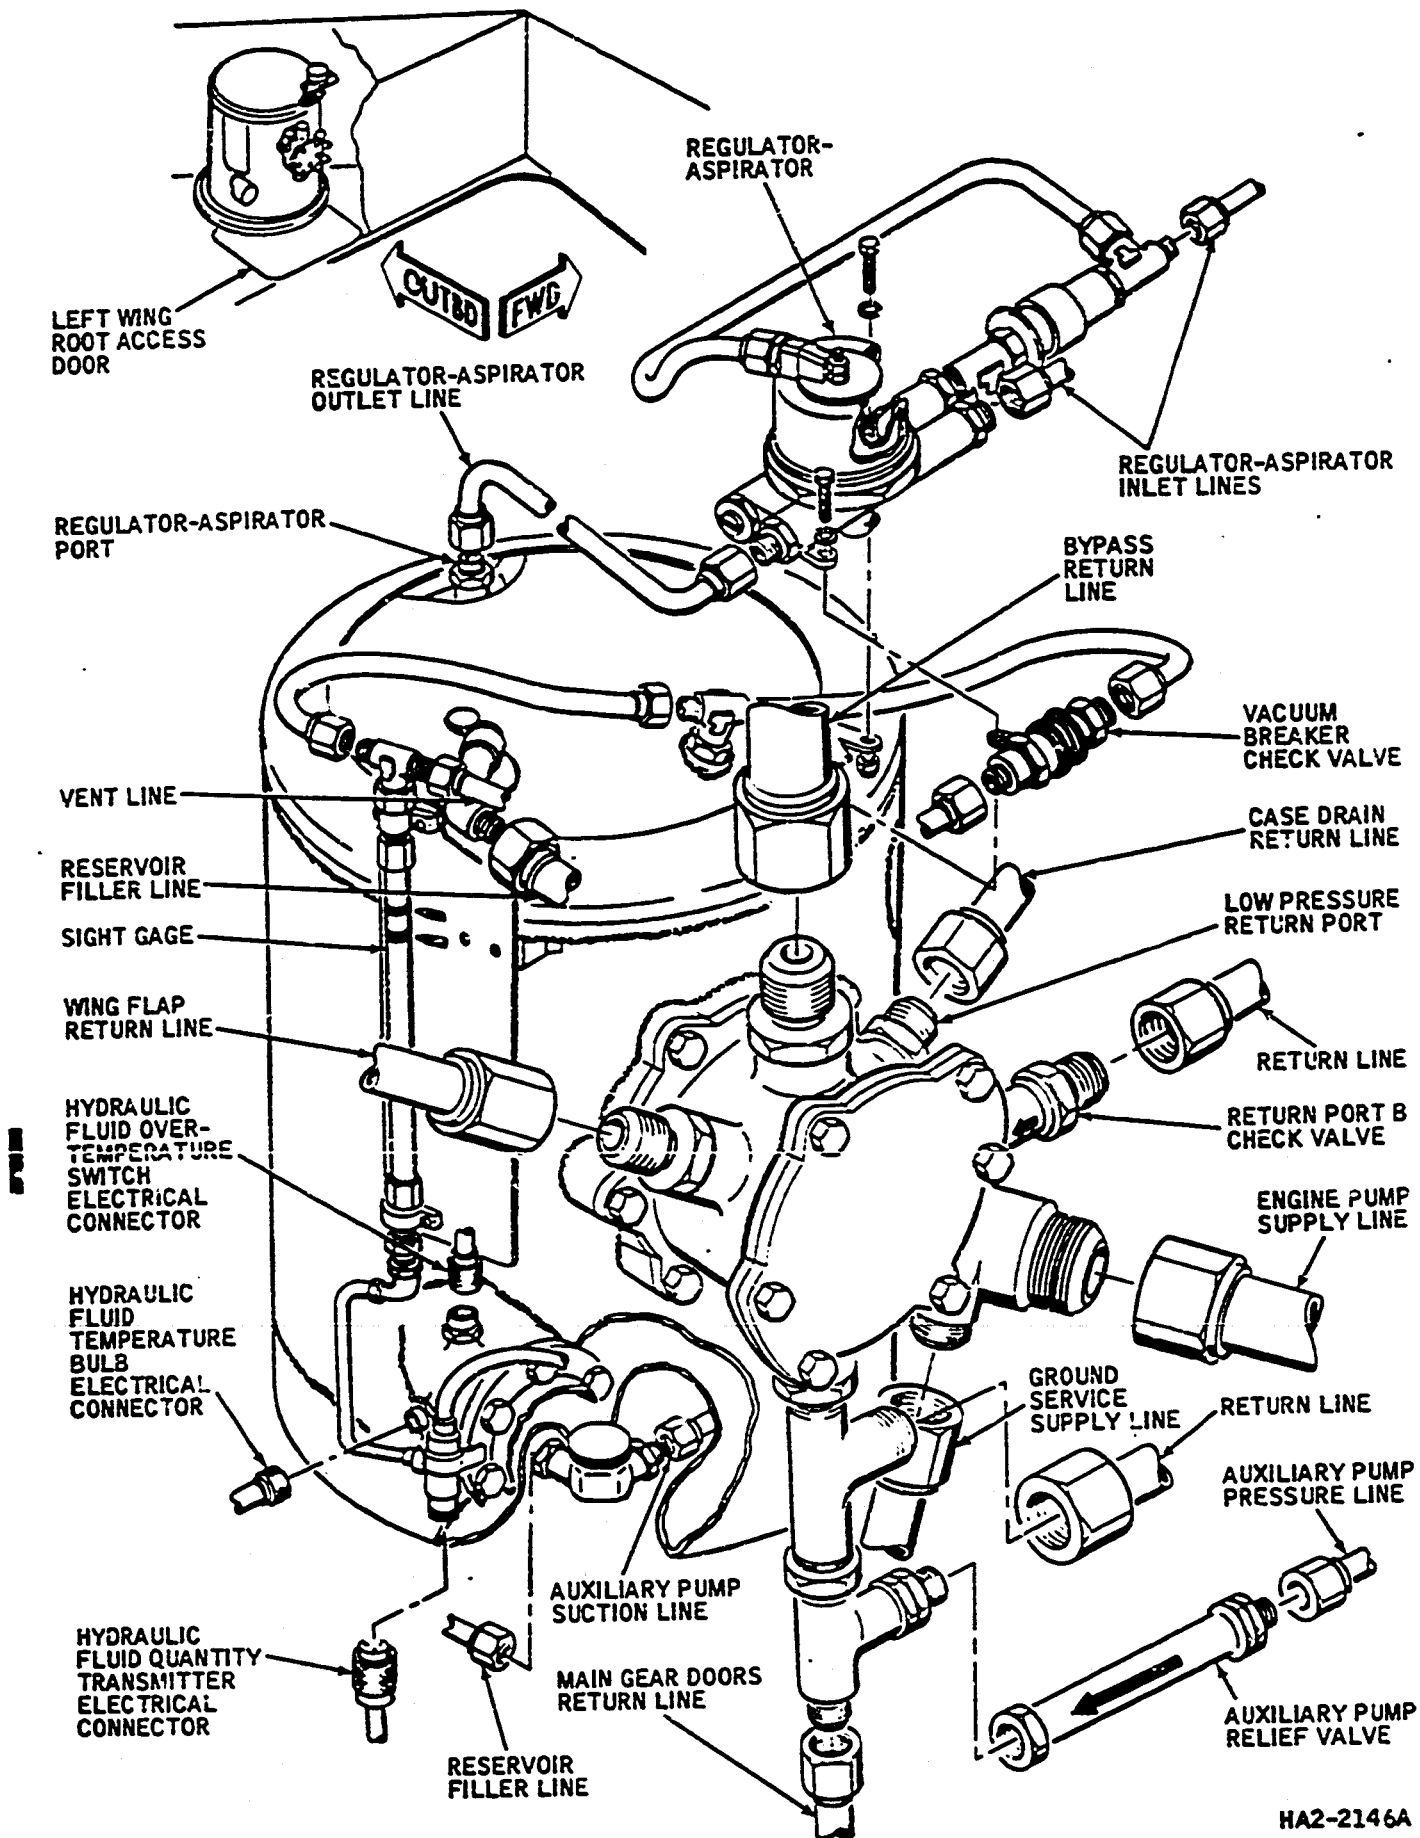

Hydraulic System Reservoir -- Installation  
 Figure 201 (Sheet 1)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

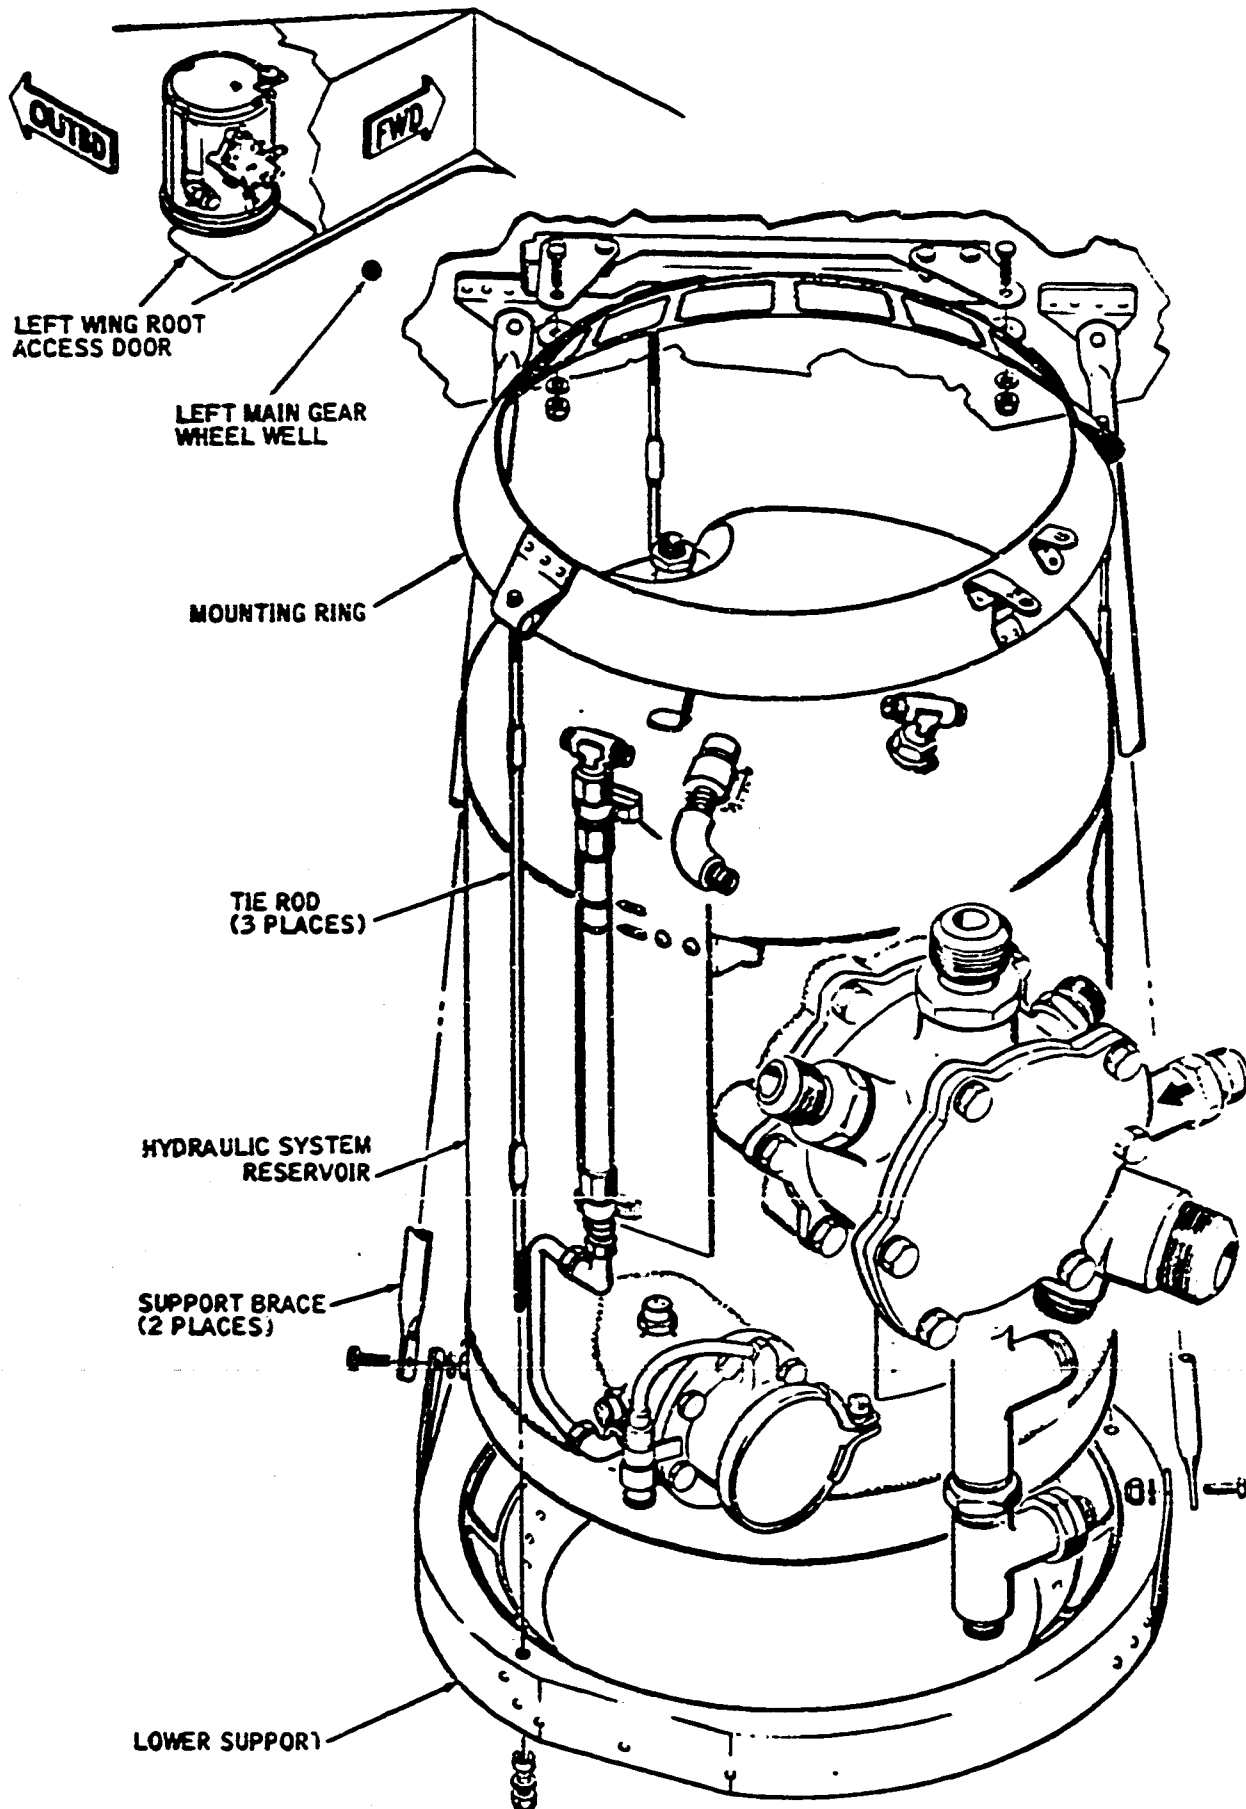

HA2-839

Hydraulic System Reservoir -- Installation  
Figure 201 (Sheet 2)

Jun 15/67

Printed in U.S.A.

29-10-1  
CODE 3  
Page 203

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (11) Disconnect line from bypass port.
- (12) Disconnect reservoir filler vent line from T-fitting at top of sight gage.
- (13) Remove lines from between following fittings:
  - (a) T-fitting on sight gage and reservoir
  - (b) T-fitting at top of reservoir and vacuum breaker check valve
  - (c) Regulator-aspirator outlet port and reservoir.
- (14) Remove vacuum breaker check valve.
- (15) Disconnect inlet lines from regulator-aspirator and remove regulator-aspirator (see 29-10-3).
- (16) Disconnect line from filler port.
- (17) Disconnect lines from T-fitting at normal supply port.
- (18) Disconnect electrical connectors from hydraulic fluid temperature bulb, hydraulic fluid overtemperature indicator light switch, and hydraulic fluid quantity transmitter.
- (19) Remove bolts securing mounting ring to structure.
- (20) Remove bolts securing mounting ring to lower support. Remove mounting ring and pad.
- (21) Remove clamps which attach main gear door manual open valve hydraulic line to lower support.
- (22) Disconnect braces and lower support structure attachment. Lift reservoir, and remove lower support and then remove reservoir through wing root access door.
- (23) Remove check valve, relief valves, and fittings from reservoir ports; retain for use on new reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

**B. Install Reservoir**

- (1) Make certain that following circuit breakers located on EPC circuit breaker panel are open:

Circuit Breaker	Panel Section
Auxiliary hydraulic pump control	Cabin bus 4
Hydraulic oil temperature and quantity	Miscellaneous (dc bus)
Hydraulic system overtemperature rudder and aileron	Miscellaneous (dc bus)

- (2) Using new O-rings, install all check valves, relief valves, and fittings in reservoir ports.
- (3) Make certain that magnetic drain plug is tightened to torque of 312 ( $\pm 20$ ) inch-pounds. Safety plug with lockwire.
- (4) Install new pad in reservoir lower support and mounting ring if required.
- (5) Place reservoir in wing root access area, place lower support under reservoir, and secure lower support in place.
- (6) Install mounting ring and secure rods to lower support.
- (7) Secure mounting ring to structure.
- (8) Install clamps which attach main gear door manual open valve hydraulic line to lower support.
- (9) Connect electrical connectors to hydraulic fluid temperature bulb, hydraulic fluid overtemperature indicating light switch, and hydraulic fluid quantity transmitter.
- (10) Connect lines to T-fitting in normal supply port.
- (11) Connect line to filler port at top of reservoir.
- (12) Install regulator-aspirator and connect inlet lines to regulator-aspirator (see 29-10-3).
- (13) Install vacuum breaker check valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (14) Install lines between following fittings:
  - (a) Regulator-aspirator outlet port and reservoir
  - (b) Vacuum breaker check valve and T-fitting at top of reservoir
  - (c) T-fitting at top of reservoir and T-fitting on sight gage
- (15) Connect reservoir filler vent line to T-fitting on sight gage.
- (16) Connect line to bypass port.
- (17) Connect lines to wing flap return port.
- (18) Connect line to low-pressure return port.
- (19) Connect line to check valve installed in return port B.
- (20) Connect lines to T-fittings at return port A.
- (21) Connect line to low standpipe port at bottom of reservoir.
- (22) Connect line to high standpipe port at bottom of reservoir.
- (23) Fill reservoir as described on instruction placard on reservoir.
- (24) Close following circuit breakers.

Circuit Breaker	Panel Section
Auxiliary hydraulic pump control	Cabin bus 4
Hydraulic oil temperature and quantity	Miscellaneous (dc bus)
Hydraulic system overtemperature rudder and aileron	Miscellaneous (ac bus)

### 3. Inspection/Check Hydraulic System Reservoir

#### A. Check Reservoir

- (1) Pressurize hydraulic system (see 29-00, Maintenance Practices).

**WARNING:** MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION AND THAT LANDING GEAR GROUND LOCKPINS ARE INSTALLED.

- (2) Place hydraulic system selector control lever in general system (normal) position.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Operate wing flaps through one complete cycle of operation.

WARNING: MAKE CERTAIN THAT WING FLAP AREA IS CLEAR OF PERSONNEL AND OBSTRUCTIONS.

- (4) Check reservoir low-pressure air gage, located adjacent to air bleed valve in left wheel well, for 30 to 35 psi air pressure indication.
- (5) Check lines between reservoir and reservoir air pressure relief valve for air leaks.
- (6) Check all lines and fittings on reservoir for hydraulic leaks.
- (7) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (8) Check all reservoir lines for security of connections and clearance between lines and adjacent components and structure.
- (9) Check all electrical connectors for security of attachment.
- (10) Check magnetic drain plug for security of installation and lockwire.
- (11) Check reservoir fluid level and fill if necessary as described c. instruction placard on reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC SYSTEM RESERVOIR - MAINTENANCE PRACTICES

1. General

- A. The hydraulic system reservoir is located on the aft side of the rear spar in the left wing root.
- B. Access is through the left wing root access door.

2. Removal/Installation Hydraulic System Reservoir

A. Remove Reservoir

- (1) Open following circuit breakers:

Circuit Breaker	Panel Section
Auxiliary hydraulic pump control	Cabin bus 4
Hydraulic oil temperature and quantity	Miscellaneous (dc bus)
Hydraulic system overtemperature rudder and aileron	Miscellaneous (dc bus)

WARNING: TAG AND SAFETY CIRCUIT BREAKERS (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Drain hydraulic system reservoir (see 29-00, Maintenance Practices).
- (5) Disconnect line from low standpipe port at bottom of reservoir.
- (6) Disconnect line from high standpipe port at bottom of reservoir.
- (7) Disconnect lines from T-fitting at return port A.
- (8) Disconnect line from check valve at return port B.
- (9) Disconnect line from low-pressure return port.
- (10) Disconnect lines from T-fitting at wing flap return port.


Jun 15/67

Printed in U.S.A.

29-10-1  
CODE 4  
Page 201




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

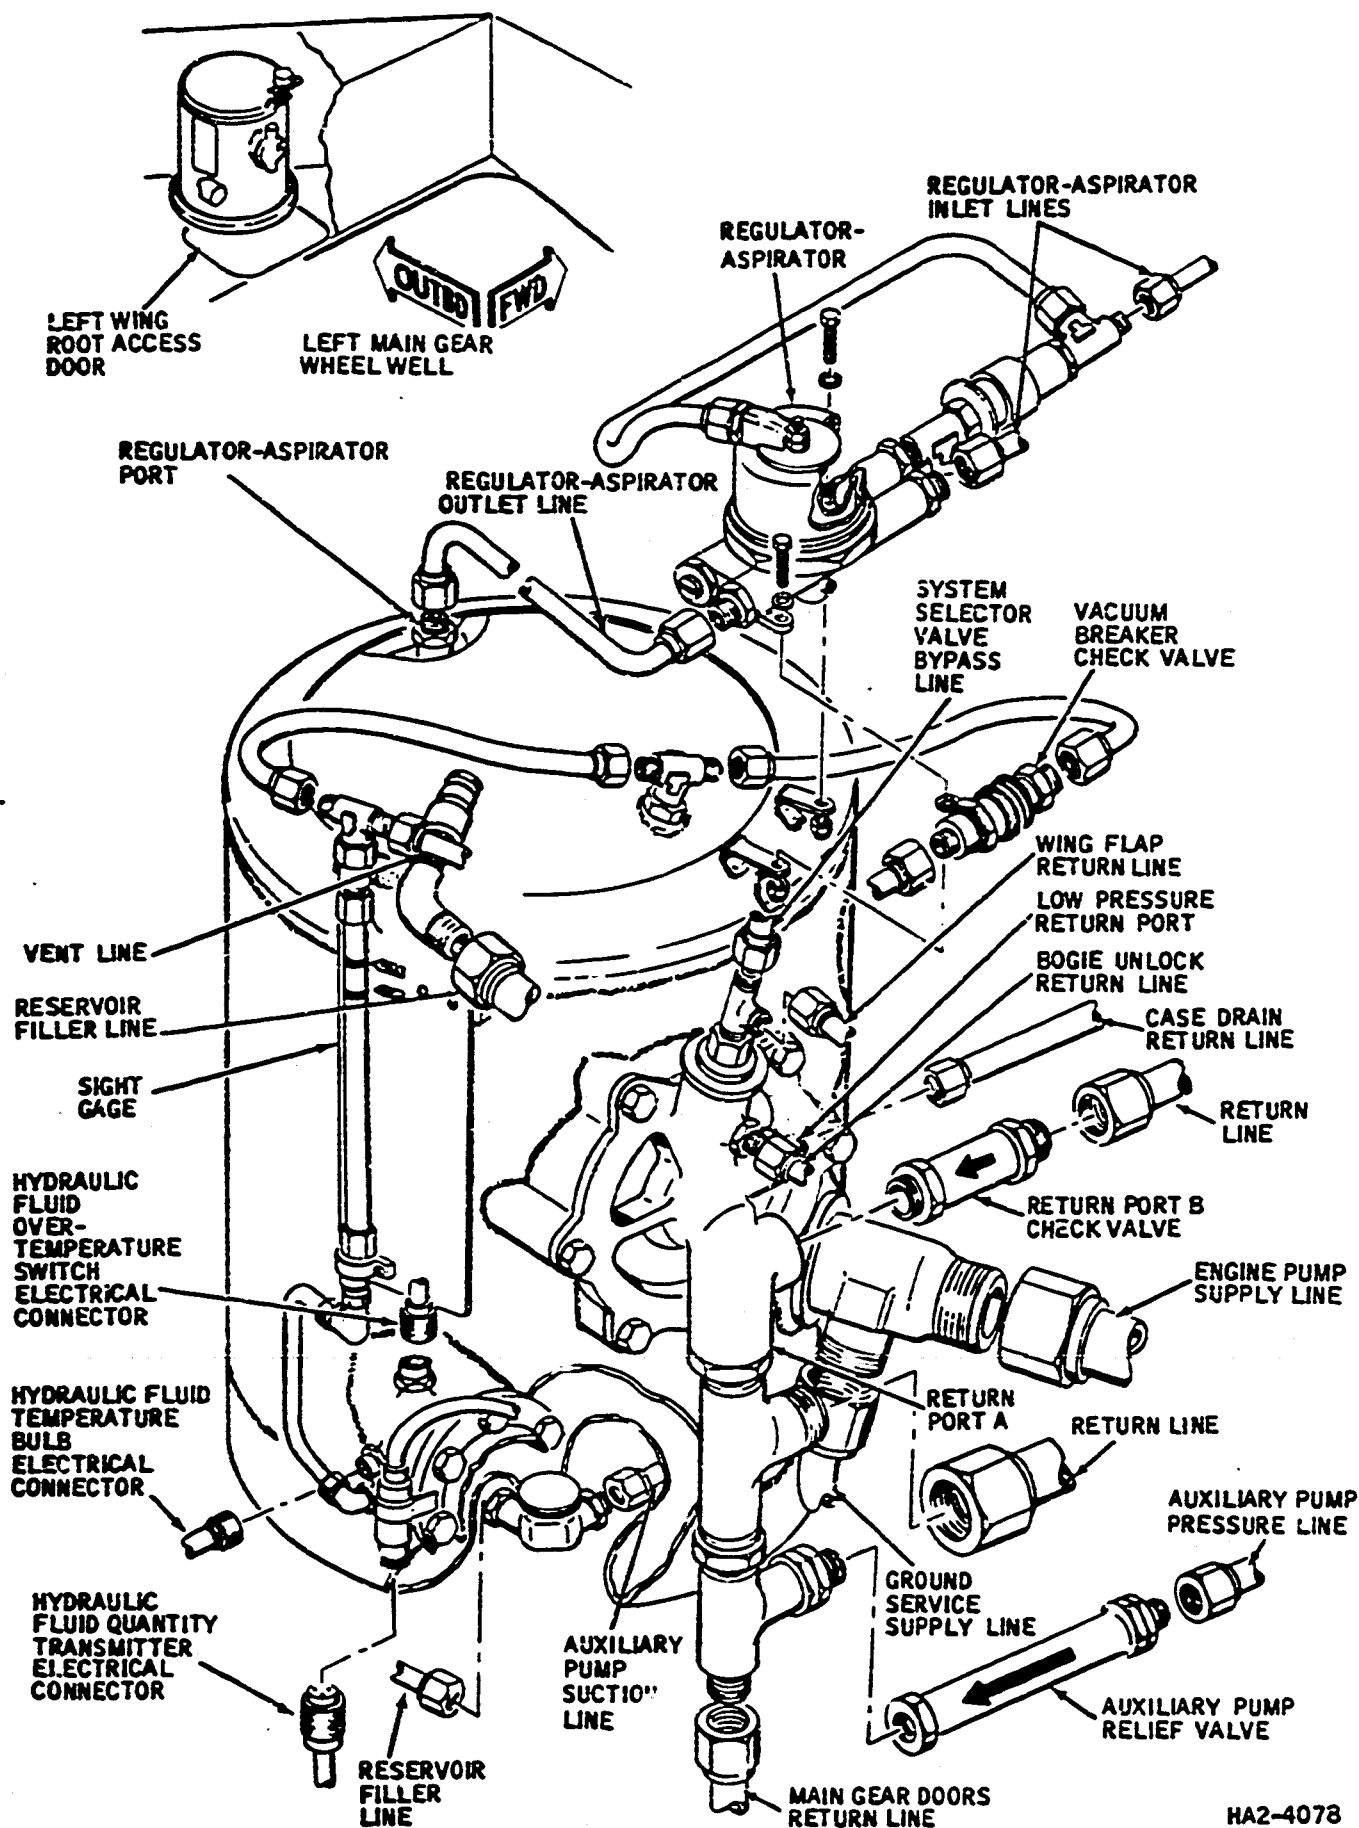

Hydraulic System Reservoir -- Installation  
 Figure 201 (Sheet 1)

HA2-4078

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

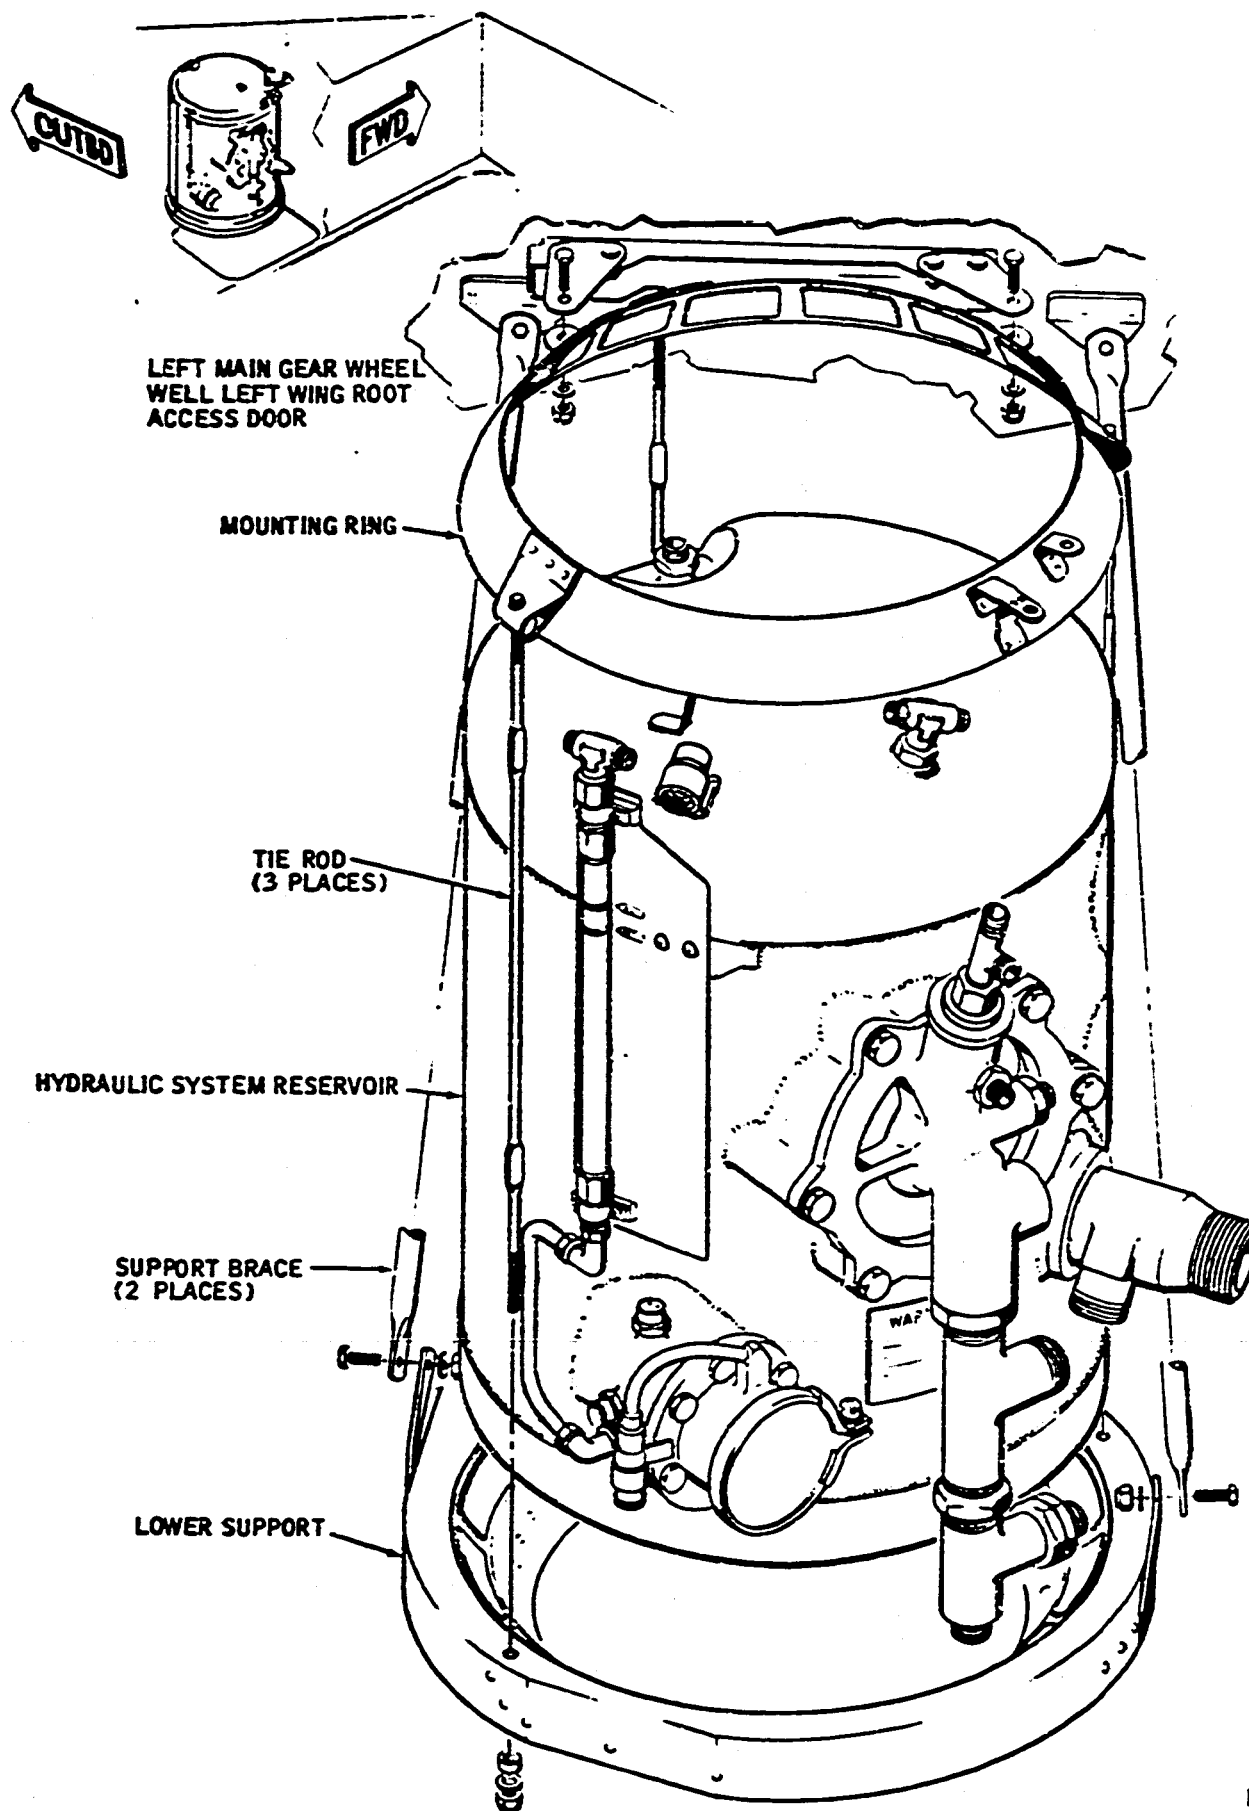

Hydraulic System Reservoir -- Installation  
Figure 201 (Sheet 2)

HA2-37

Jun 15/67

Printed in U.S.A.

29-10-1  
CODE 4  
Page 203

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (11) Disconnect line from bogie unlock return port.
- (12) Disconnect reservoir filler vent line from T-fitting at top of sight gage.
- (13) Remove lines from between following fittings:
  - (a) T-fitting on sight gage and reservoir
  - (b) T-fitting on top of reservoir and vacuum breaker check valve.
  - (c) Regulator-aspirator outlet port and reservoir.
- (14) Remove vacuum breaker check valve.
- (15) Disconnect inlet lines from regulator-aspirator and remove regulator-aspirator (see 29-10-3).
- (16) Disconnect line from filler port.
- (17) Disconnect lines from T-fitting at normal supply port.
- (18) Disconnect electrical connectors from hydraulic fluid temperature bulb, hydraulic fluid overtemperature indicator light switch, and hydraulic fluid quantity transmitter.
- (19) Remove bolts securing mounting ring to structure.
- (20) Remove bolts securing mounting ring to lower support. Remove mounting ring and pad.
- (21) Remove clamps which attach main gear door manual open valve hydraulic line to lower support.
- (22) Disconnect braces and lower support structure attachment. Lift reservoir and remove lower support and then remove reservoir through wing root access door.
- (23) Remove check valve, relief valves, and fittings from reservoir ports; retain for use on new reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

B. Install Reservoir

- (1) Make certain that following circuit breakers are open:

Circuit Breaker	Panel Section
Auxiliary hydraulic pump control	Cabin bus 4
Hydraulic oil temperature and quantity	Miscellaneous (dc bus)
Hydraulic system overtemperature rudder and aileron	Miscellaneous (dc bus)

- (2) Using new O-rings, install all check valves, relief valves, and fittings in reservoir ports.
- (3) Make certain that magnetic drain plug is tightened to torque of 312 ( $\pm 20$ ) inch-pounds. Safety plug with lockwire.
- (4) Install new pad in reservoir lower support and mounting ring if required.
- (5) Place reservoir in wing root access area, place lower support under reservoir, and secure lower support in place.
- (6) Install mounting ring and secure rods to lower support.
- (7) Secure mounting ring to structure.
- (8) Install clamps which attach main gear door manual open valve hydraulic line to lower support.
- (9) Connect electrical connectors to hydraulic fluid temperature bulb, hydraulic fluid overtemperature indicating light switch, and hydraulic fluid quantity transmitter.
- (10) Connect lines to T-fitting in normal supply port.
- (11) Connect line to filler port at top of reservoir.
- (12) Install regulator-aspirator and connect inlet lines to regulator-aspirator (see 29-10-3).
- (13) Install vacuum breaker check valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (14) Install lines between following fittings:
  - (a) Regulator-aspirator outlet port and reservoir
  - (b) Vacuum breaker check valve and T-fitting at top of reservoir
  - (c) T-fitting at top of reservoir and T-fitting on sight gage
- (15) Connect reservoir filler vent line to T-fitting on sight gage.
- (16) Connect line to bogie unlock return port.
- (17) Connect lines to wing flap return port.
- (18) Connect line to low-pressure return port.
- (19) Connect line to check valve installed in return port B.
- (20) Connect lines to T-fittings at return port A.
- (21) Connect line to low standpipe port at bottom of reservoir.
- (22) Connect line to high standpipe port at bottom of reservoir.
- (23) Fill reservoir as described on instruction placard on reservoir.
- (24) Close following circuit breakers.

Circuit Breaker	Panel Section
Auxiliary hydraulic pump control	Cabin bus 4
Hydraulic oil temperature and quantity	Miscellaneous (dc bus)
Hydraulic system overtemperature rudder and aileron	Miscellaneous (dc bus)

### 3. Inspection/Check Hydraulic System Reservoir

#### A. Check Reservoir

- (1) Pressurize hydraulic system (see 29-00, Maintenance Practices).  
**WARNING:** MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION AND THAT LANDING GEAR GROUND LOCKPINS ARE INSTALLED.
- (2) Place hydraulic system selector control lever in general system (normal) position.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Operate wing flaps through one complete cycle of operation.

WARNING: MAKE CERTAIN THAT WING FLAP AREA IS CLEAR OF PERSONNEL AND OBSTRUCTIONS.

- (4) Check reservoir low-pressure air gage, located adjacent to air bleed valve in left wheel well, for 30 to 35 psi air pressure indication.
- (5) Check lines between reservoir and reservoir air pressure relief valve for air leaks.
- (6) Check all lines and fittings on reservoir for hydraulic leaks.
- (7) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (8) Check all reservoir lines for security of connections and clearance between lines, and adjacent components and structure.
- (9) Check all electrical connectors for security of attachment.
- (10) Check magnetic drain plug for security of installation and lockwire.
- (11) Check reservoir fluid level and fill if necessary as described on instruction placard on reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC SYSTEM RESERVOIR - MAINTENANCE PRACTICES

1. General

- A. The hydraulic system reservoir is located on the aft side of the rear spar in the left wing root.
- B. Access is through the left wing root access door.

2. Removal/Installation Hydraulic System Reservoir

A. Remove Reservoir

- (1) Open following circuit breakers:

Circuit Breaker	Panel Section
Auxiliary hydraulic pump control	Cabin bus 4
Hydraulic oil temperature and quantity	Miscellaneous (dc bus)
Hydraulic system overtemperature rudder and aileron	Miscellaneous. (dc bus)

WARNING: TAG AND SAFETY CIRCUIT BREAKERS (SEE CHAPTER 20).


- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Drain hydraulic system reservoir (see 29-00, Maintenance Practices).
- (5) Disconnect line from low standpipe port at bottom of reservoir.
- (6) Disconnect line from high standpipe port at bottom of reservoir.
- (7) Disconnect lines from fittings at return port A.
- (8) Disconnect line from check valve at return port B.
- (9) Disconnect line from low-pressure return port.
- (10) Disconnect lines from T-fitting at wing flap return port.

Jan 15/68

Printed in U S A

29-10-1  
CODE 5  
Page 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

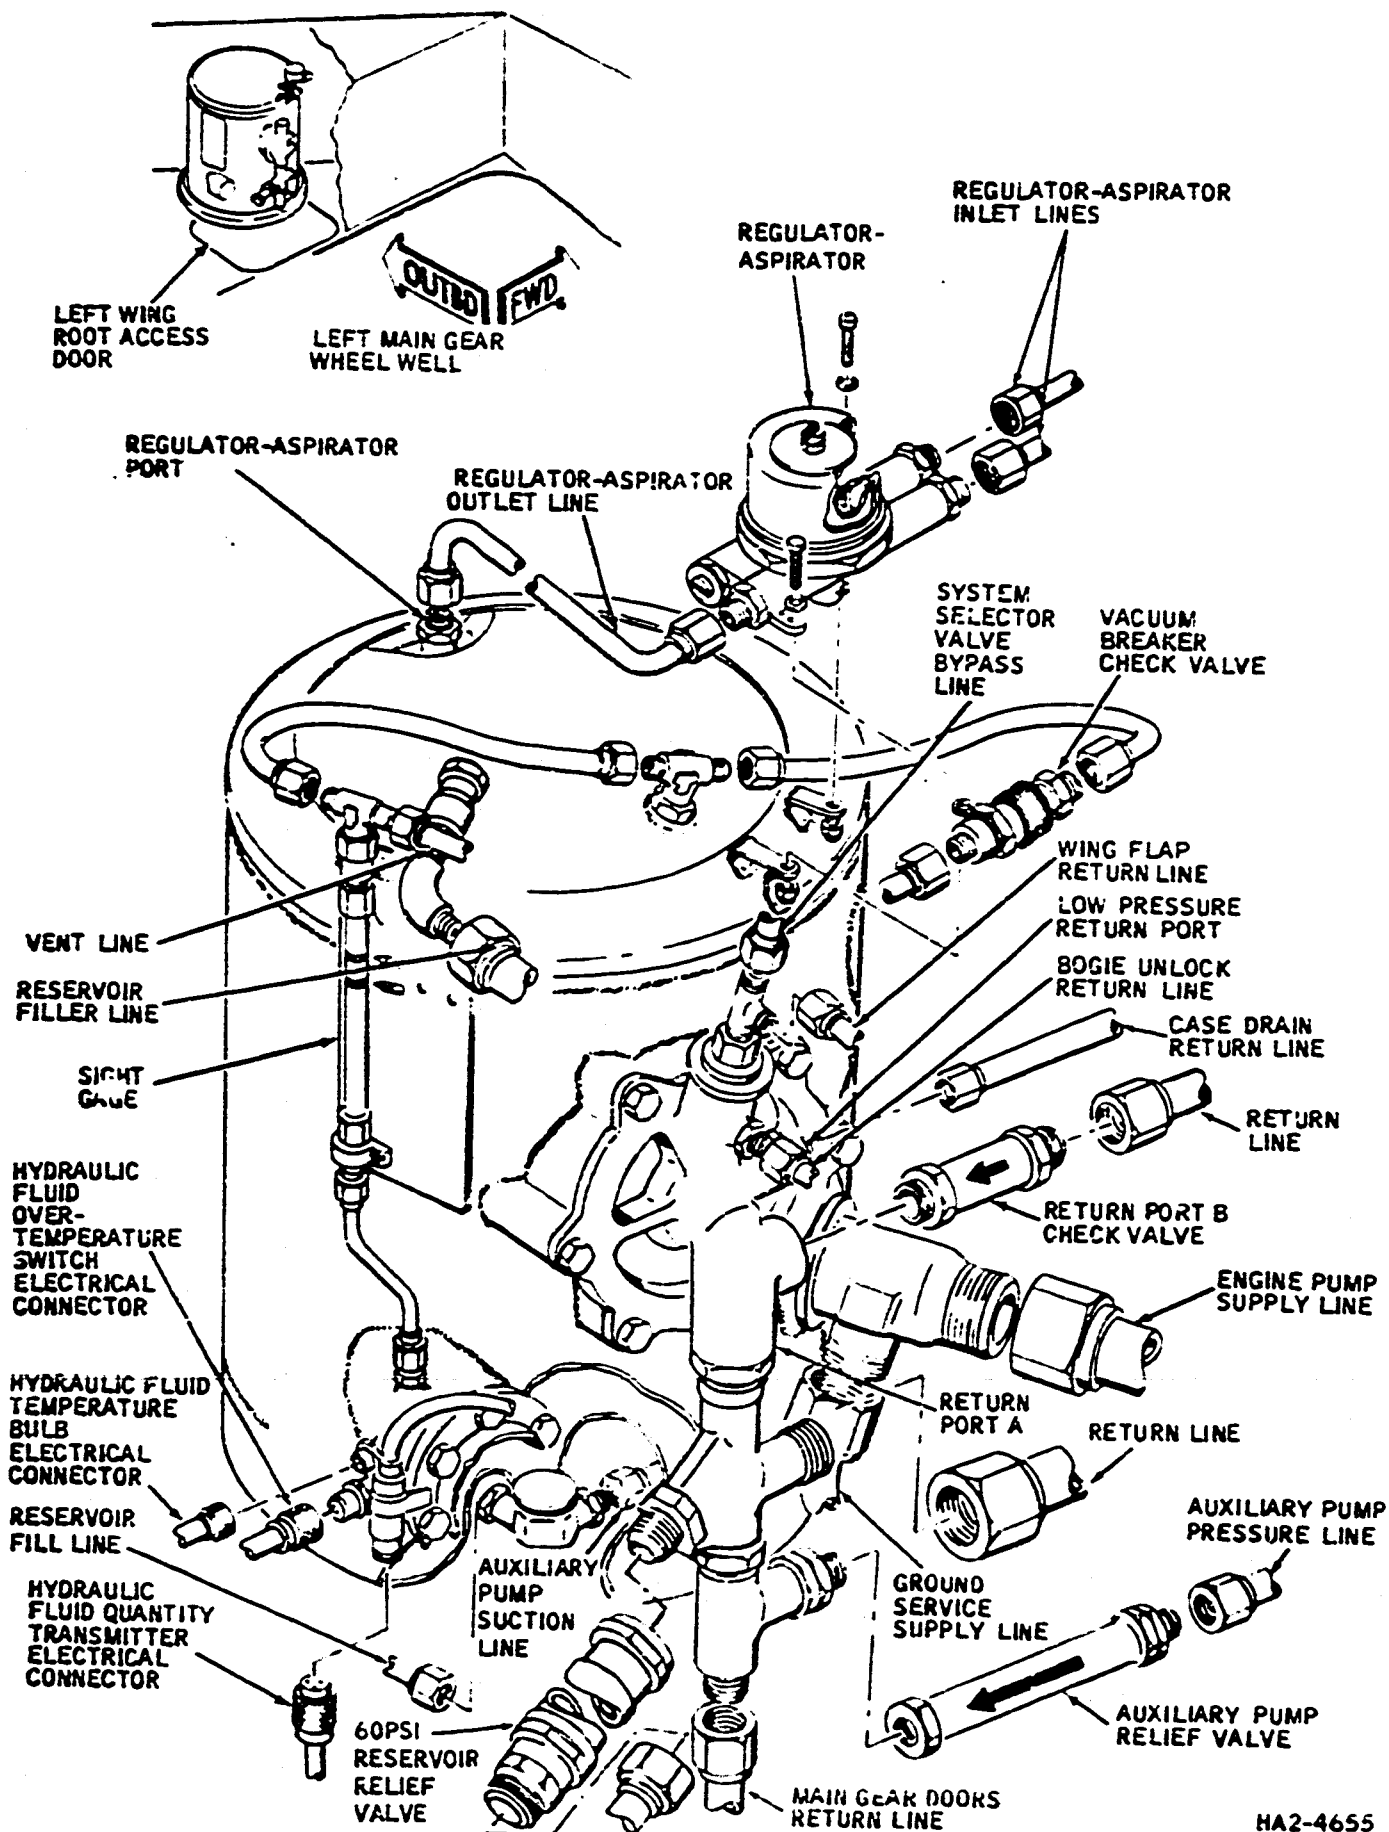

HA2-4655

Hydraulic System Reservoir -- Installation  
 (Airplanes 801-811)  
 Figure 201 (Sheet 1)


29-10-1  
 CODE 5  
 Page 202

Jan 15/68

Printed in U.S.A.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

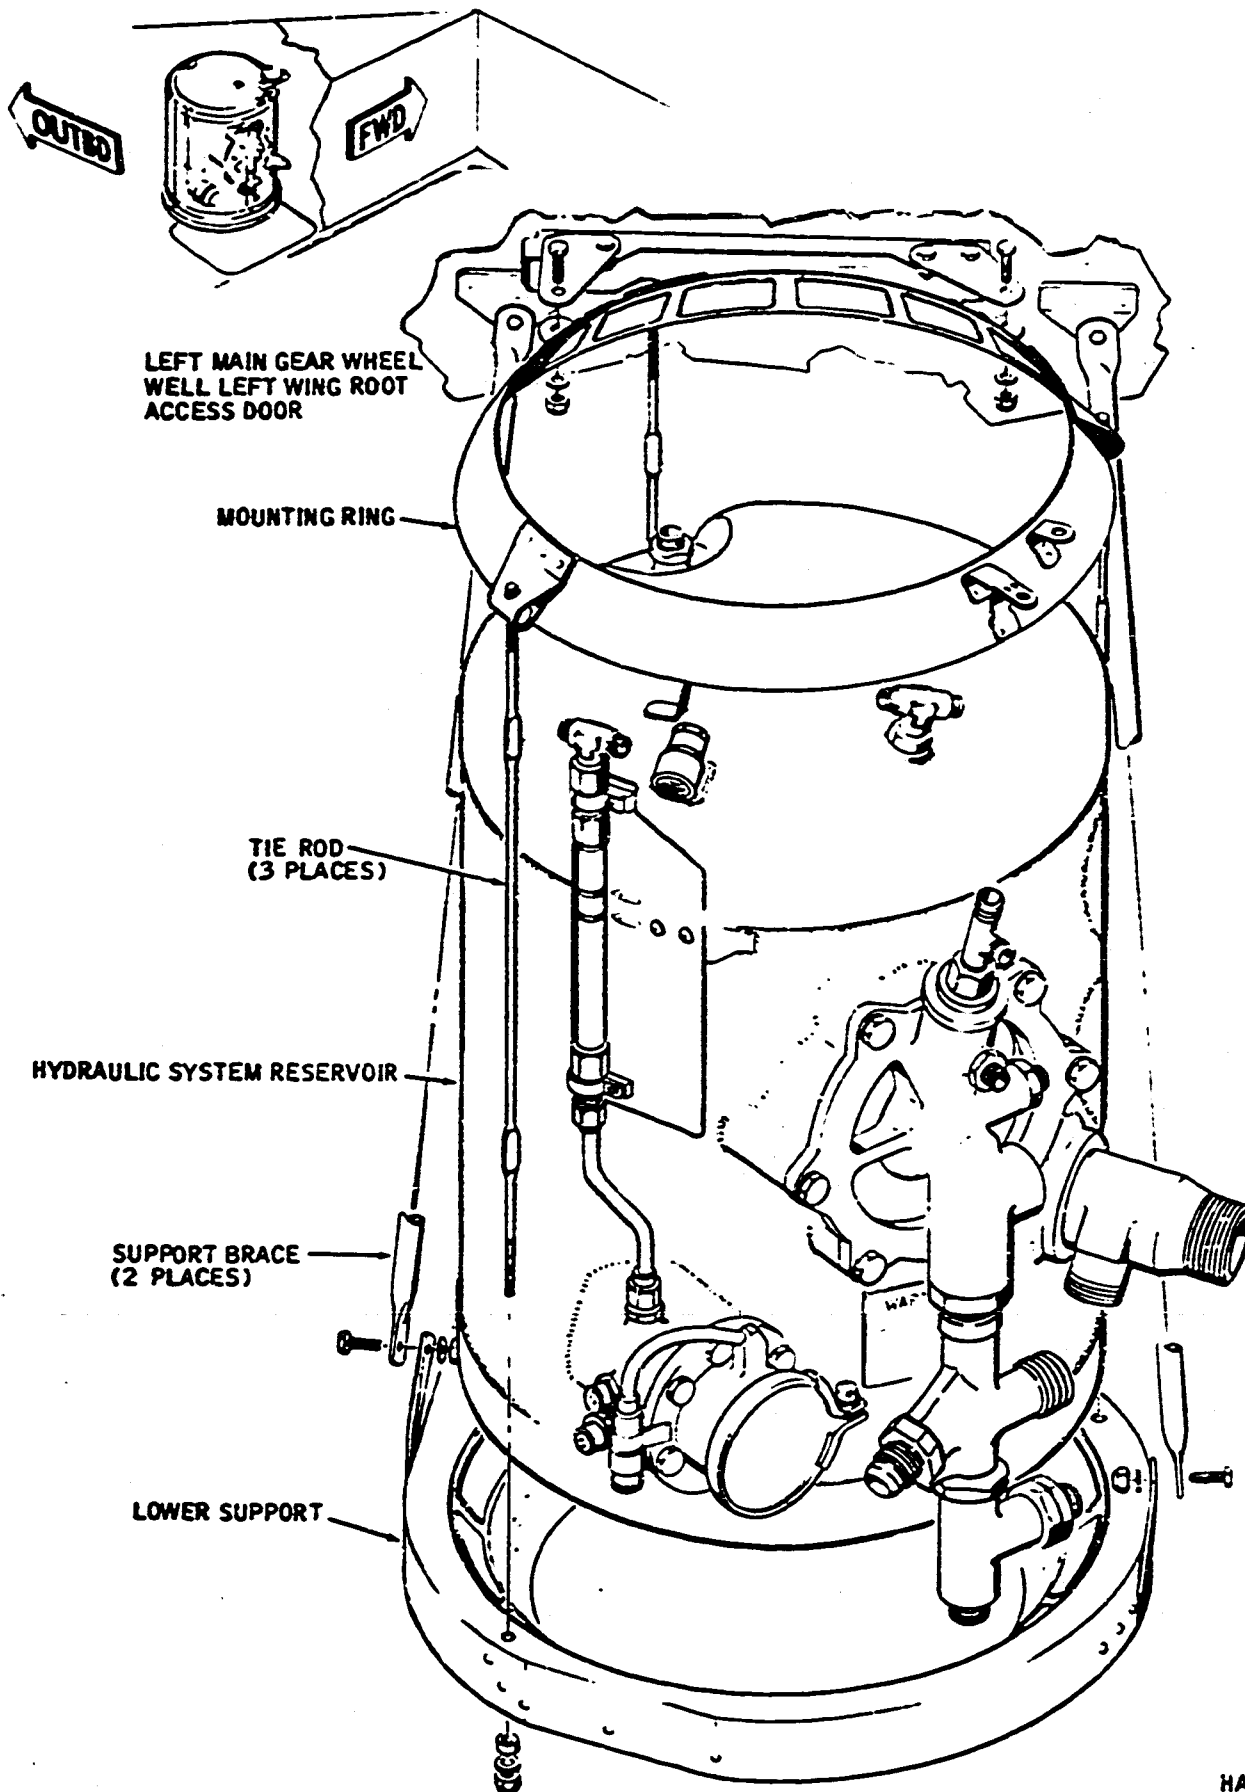


HA2-4656

Hydraulic System Reservoir -- Installation  
(Airplanes 801-811)  
Figure 201 (Sheet 2)

Jan 15/68

29-10-1  
CODE 5  
Page 203

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

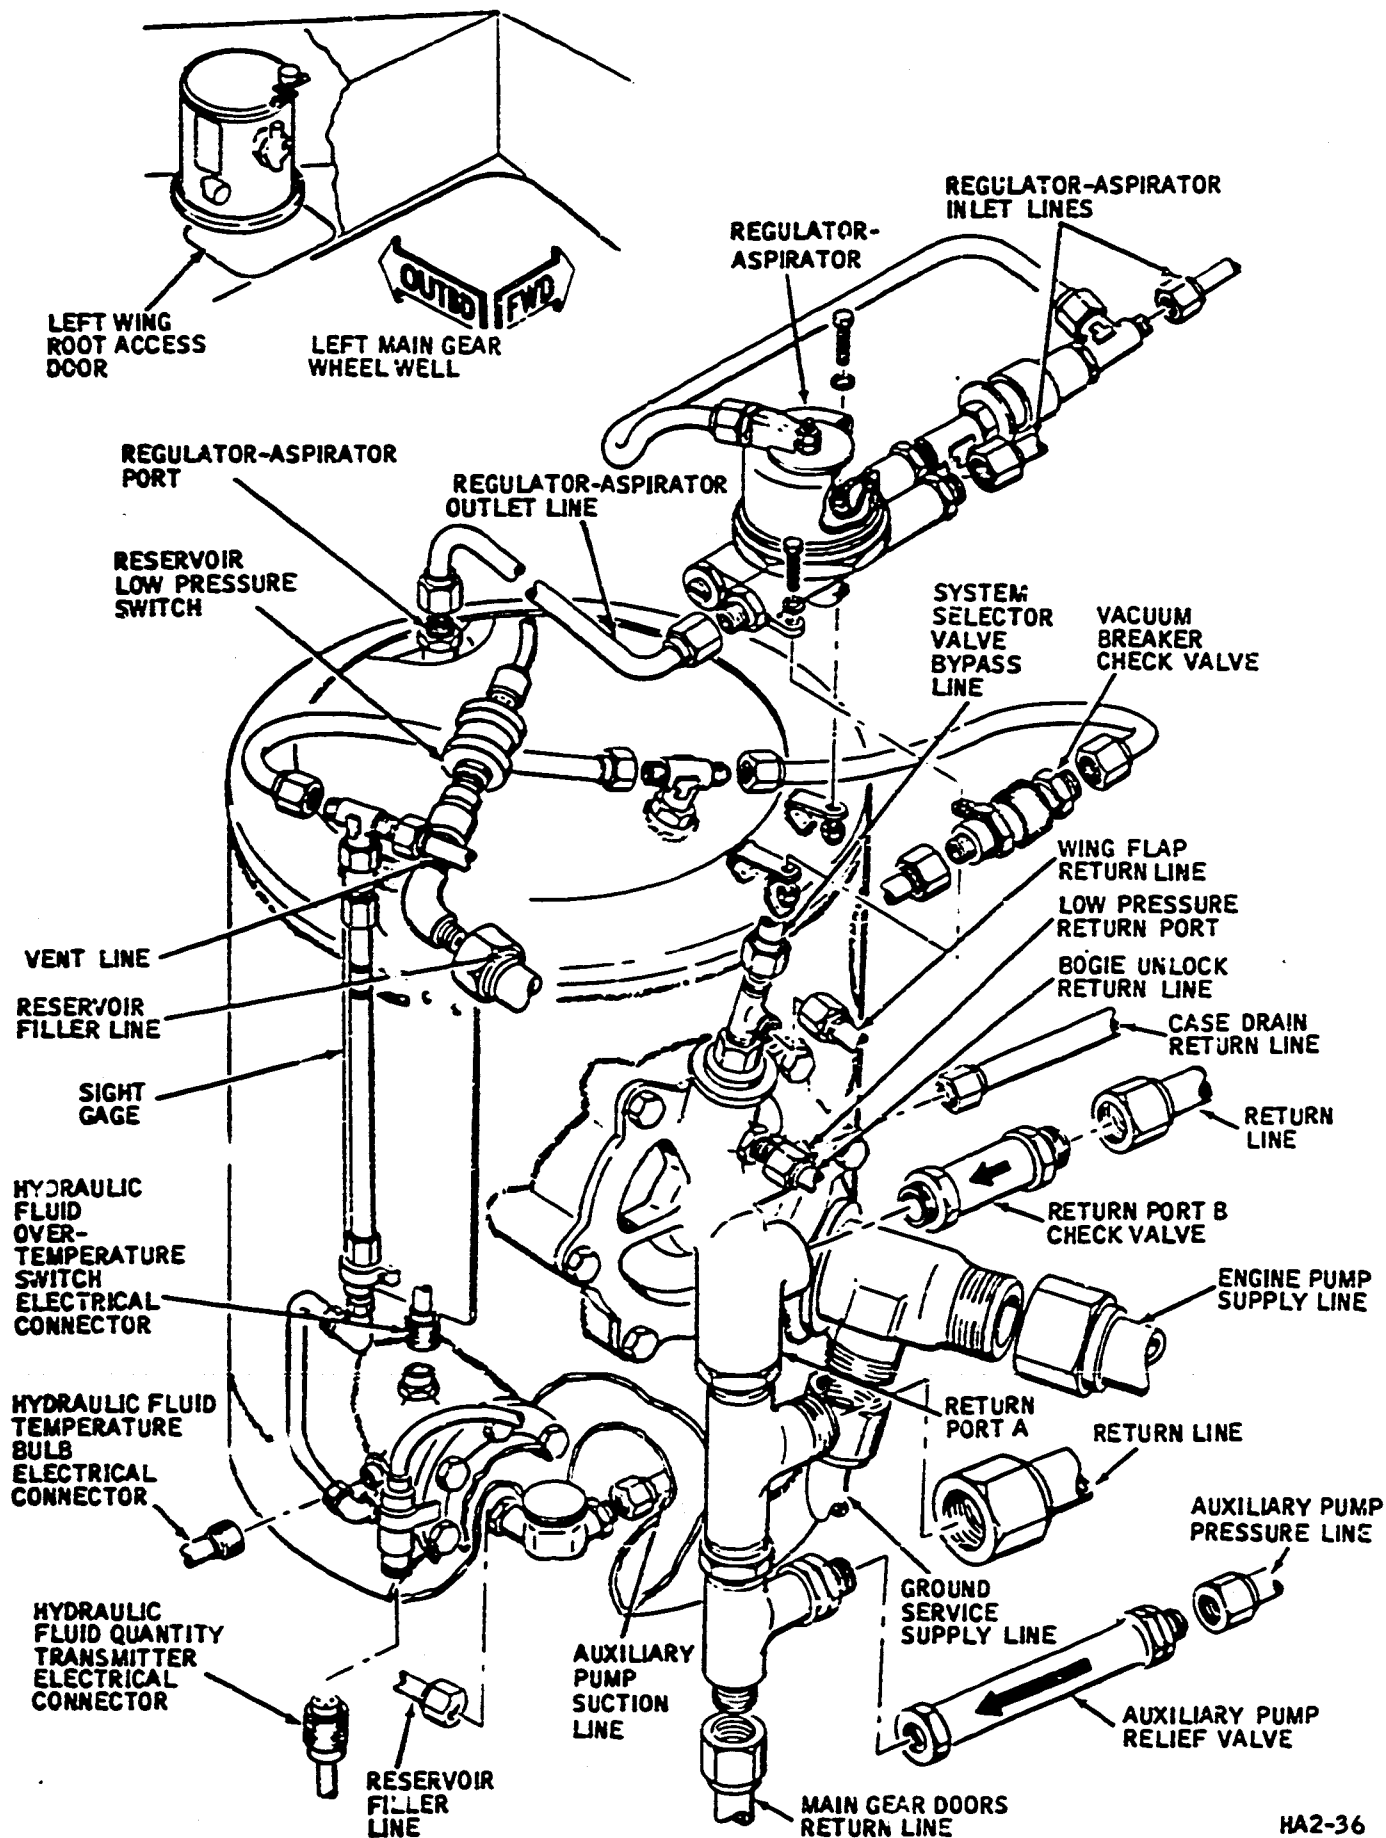


Hydraulic System Reservoir -- Installation  
 (Airplanes 812-822, 860-863)  
 Figure 201 (Sheet 3)

29-10-1  
 CODE 5  
 Page 204

Aug 1/68

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

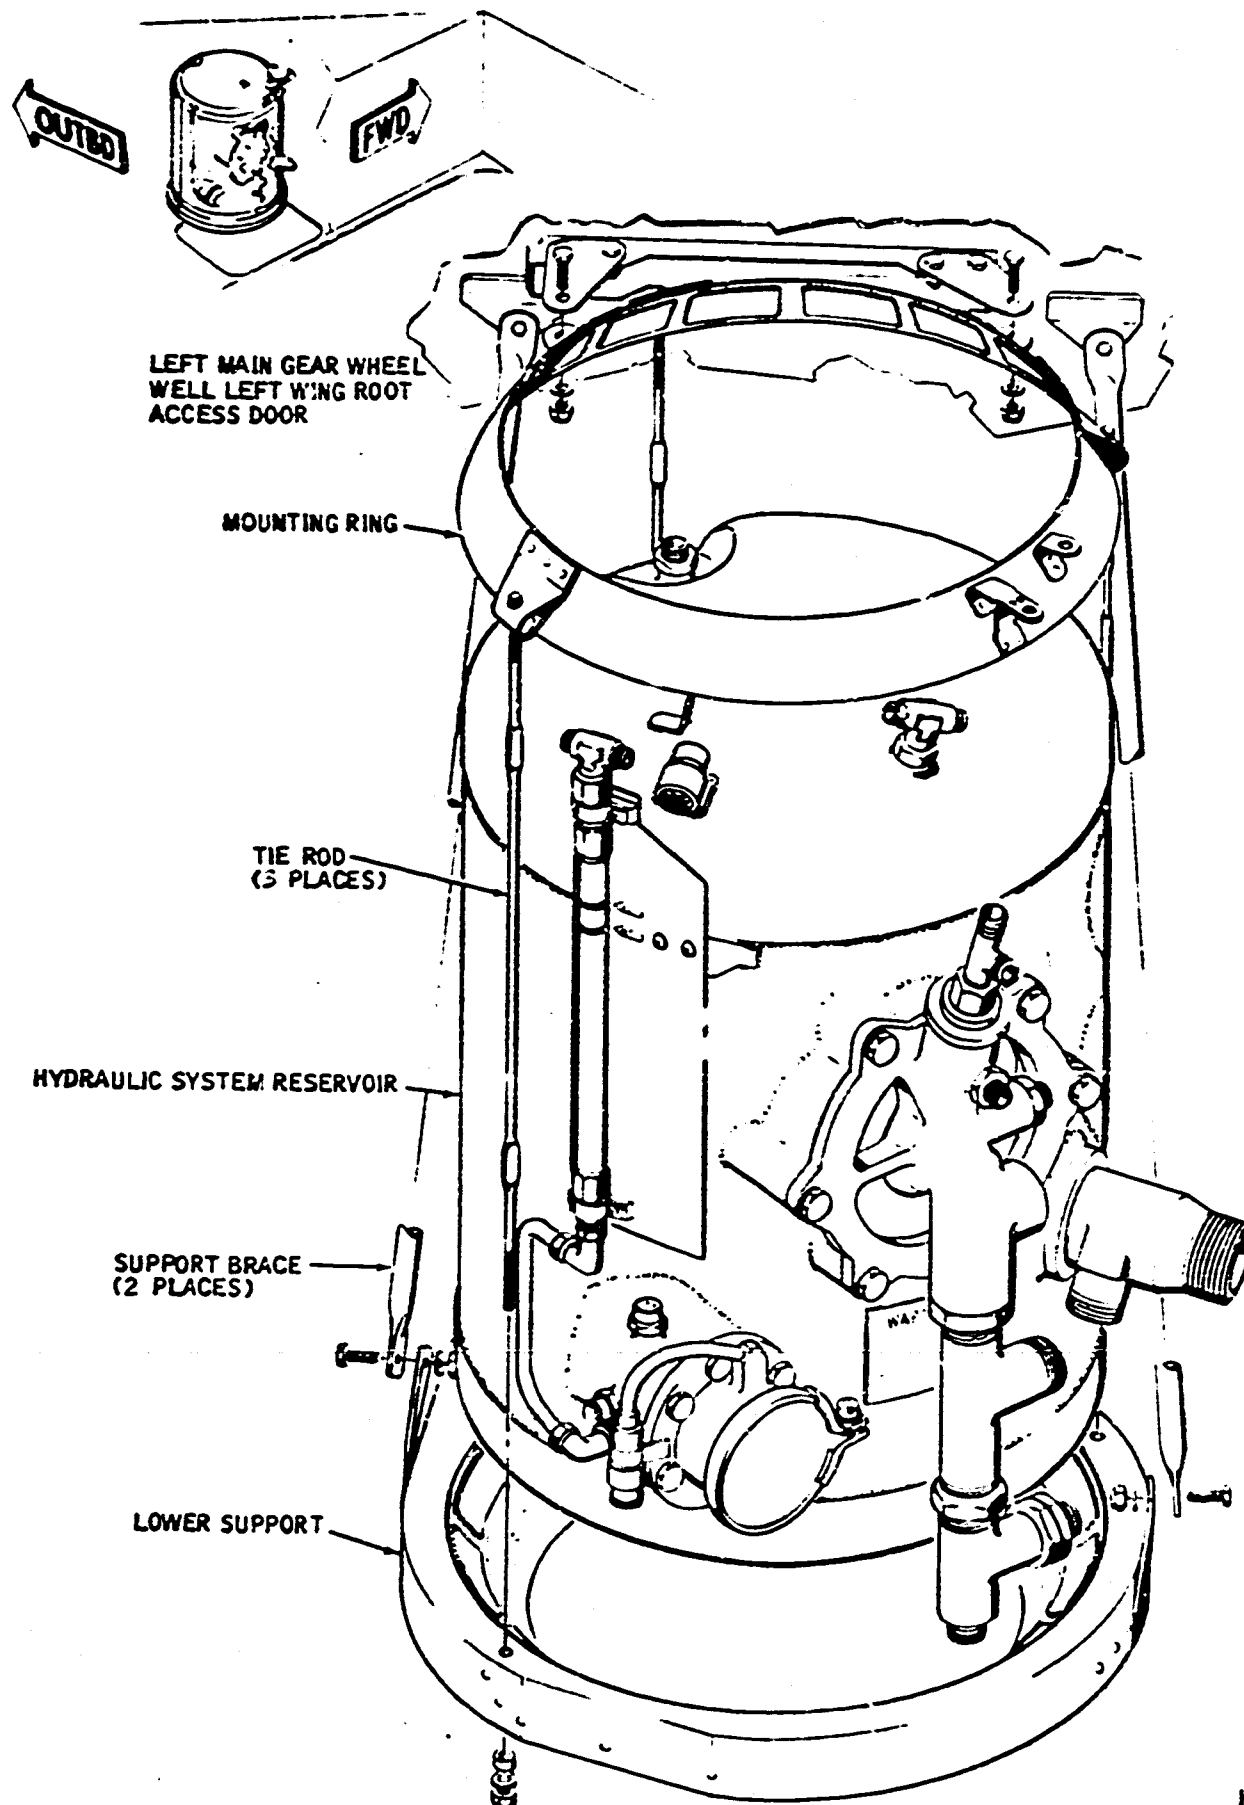

HA2-37

Hydraulic System Reservoir -- Installation  
 (Airplanes 812-822, 860-863)  
 Figure 201 (Sheet 4)

Aug 1/68

29-10-1  
 CODE 5  
 Page 205

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (11) Disconnect line from bogie unlock return port.
- (12) Disconnect reservoir filler vent line from T-fitting at top of sight gage.
- (13) Remove lines from between following fittings:
  - (a) T-fitting on sight gage and reservoir.
  - (b) T-fitting at top of reservoir and vacuum breaker check valve.
  - (c) Regulator-aspirator outlet port and reservoir.
- (14) Remove vacuum breaker check valve.
- (15) Disconnect inlet lines from regulator-aspirator and remove regulator-aspirator (see 29-10-3).
- (16) Disconnect line from filler port.
- (17) Disconnect lines from T-fitting at normal supply port.
- (18) Disconnect electrical connectors from hydraulic fluid temperature bulb, hydraulic fluid overtemperature indicator light switch, and hydraulic fluid quantity transmitter.
- (19) Disconnect electrical connector from reservoir low pressure switch (airplanes 812-819, 860-863).
- (20) Remove bolts securing mounting ring to structure.
- (21) Remove bolts securing mounting ring to lower support. Remove mounting ring and pad.
- (22) Remove clamps which attach main gear door manual open valve hydraulic line to lower support.
- (23) Disconnect braces and lower support structure attachment. Lift reservoir, and remove lower support and then remove reservoir through wing root access door.
- (24) Remove check valve, relief valves, and fittings from reservoir ports; retain for use on new reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

B. Install Reservoir

- (1) Make certain that following circuit breakers are open:

Circuit Breaker	Panel Section
Auxiliary hydraulic pump control	Cabin bus 4
Hydraulic oil temperature and quantity	Miscellaneous (dc bus)
Hydraulic system overtemperature rudder and aileron	Miscellaneous (dc bus)

- (2) Using new O-rings, install all check valves, relief valves, and fittings in reservoir ports.
- (3) Make certain that magnetic drain plug is tightened to torque of 312 ( $\pm 20$ ) inch-pounds. Safety plug with lockwire.
- (4) Install new pad in reservoir lower support and mounting ring if required.
- (5) Place reservoir in wing root access area, place lower support under reservoir, and secure lower support in place.
- (6) Install mounting ring and secure rods to lower support.
- (7) Secure mounting ring to structure.
- (8) Install clamps which attach main gear door manual open valve hydraulic line to lower support.
- (9) Connect electrical connectors to hydraulic fluid temperature bulb, hydraulic fluid overtemperature indicating light switch, and hydraulic fluid quantity transmitter.
- (10) Connect electrical connector to reservoir low pressure switch (airplanes 812-819, 860-863).
- (11) Connect lines to T-fitting in normal supply port.
- (12) Connect line to filler port at top of reservoir.
- (13) Install regulator-aspirator and connect inlet lines to regulator-aspirator (see 29-10-3).
- (14) Install vacuum breaker check valve.

Jan 15/68

Printed in USA

29-10-1  
CODE 5  
Page 207

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (15) Install lines between following fittings:
  - (a) Regulator-aspirator outlet port and reservoir
  - (b) Vacuum breaker check valve and T-fitting at top of reservoir
  - (c) T-fitting at top of reservoir and T-fitting on sight gage
- (16) Connect reservoir filler vent line to T-fitting on sight gage.
- (17) Connect line to bogie unlock return port.
- (18) Connect line to wing flap return port.
- (19) Connect line to low-pressure return port.
- (20) Connect line to check valve installed in return port B.
- (21) Connect lines to fittings at return port A.
- (22) Connect line to low standpipe port at bottom of reservoir.
- (23) Connect line to high standpipe port at bottom of reservoir.
- (24) Fill reservoir as described on instruction placard on reservoir.
- (25) Close following circuit breakers.

Circuit Breaker	Panel Section
Auxiliary hydraulic pump control	Cabin bus 4
Hydraulic oil temperature and quantity	Miscellaneous (dc bus)
Hydraulic system overtemperature rudder and aileron	Miscellaneous (dc bus)

### 3. Inspection/Check Hydraulic System Reservoir

#### A. Check Reservoir

- (1) Pressurize hydraulic system (see 29-00, Maintenance Practices).

**WARNING:** MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION AND THAT LANDING GEAR GROUND LOCKS ARE INSTALLED.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Place hydraulic system selector control lever in general system (normal) position.
- (3) Operate wing flaps through one complete cycle of operation.

**WARNING:** MAKE CERTAIN THAT WING FLAP AREA IS CLEAR OF PERSONNEL AND OBSTRUCTIONS.

- (4) Check reservoir low-pressure air gage, located adjacent to air bleed valve in left wheel well, for 35 to 40 psi on airplanes 801-815 or 30 to 35 psi on airplanes 816-819, 860-863, air pressure indication.
- (5) Check lines between reservoir and reservoir air pressure relief valve for air leaks.
- (6) Check all lines and fittings on reservoir for hydraulic leaks.
- (7) Depressurize hydraulic system (see 29-CC, Maintenance Practices).
- (8) Check all reservoir lines for security of connections and clearance between lines and adjacent components and structure.
- (9) Check all electrical connectors for security of attachment.
- (10) Check magnetic drain plug for security of installation and lockwire.
- (11) Check reservoir fluid level and fill if necessary as described on instruction placard on reservoir.

Jan 15/68

Printed in U S A

29-10-1  
CODE 5  
Page 209

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC RESERVOIR RETURN FLUID FILTER -  
MAINTENANCE PRACTICES

1. General

- A. The reservoir return fluid filter is located in the side of the hydraulic system reservoir, under the return ports manifold.
- B. Access to the return fluid filter is through the left wing root access door.

2. Tools and Equipment Required

- A. Antiseize compound (Federal Specification TT-A-580, JAN-A-667) is used on bolts for installation of hydraulic reservoir return fluid filter.

3. Removal/Installation Hydraulic Reservoir Return Fluid Filter

A. Remove Return Fluid Filter

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.


WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Drain hydraulic system reservoir (see 29-00, Maintenance Practices).
- (5) Disconnect lines from T-fitting at return port A.
- (6) Disconnect lines from T-fitting at wing flap return port.
- (7) Disconnect line from check valve at return port B.
- (8) Disconnect line from low-pressure return port.
- (9) Disconnect line from bogie unlock return port.
- (10) Remove bolts from return port manifold and remove manifold.

NOTE: Reservoir return fluid filter is attached to return ports manifold.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

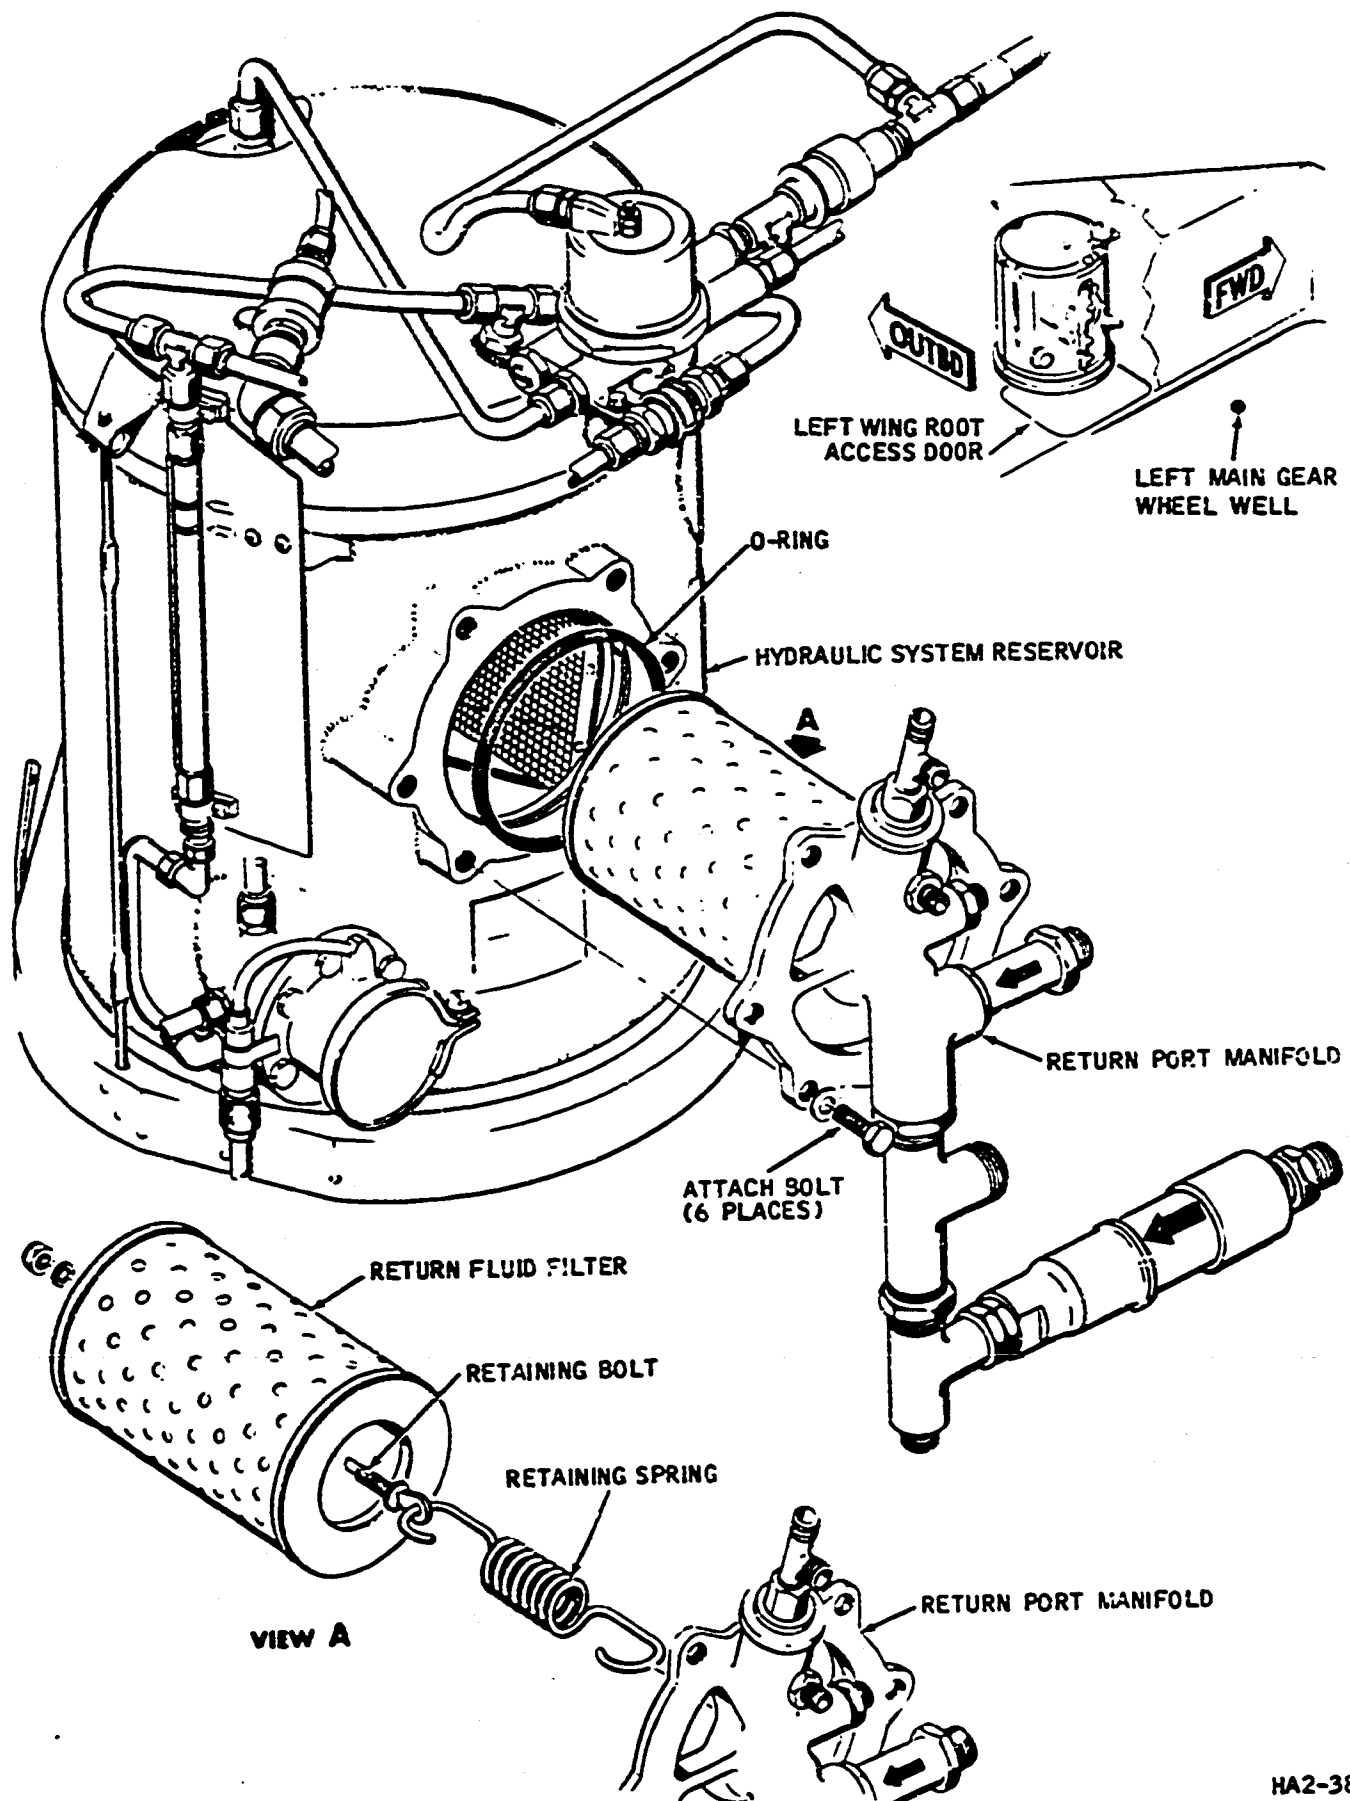

Hydraulic Reservoir Return Fluid  
 Filter -- Installation  
 Figure 201

HA2-38

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (11) Remove nut from spring-tension eyebolt which protrudes through filter end plate.
- (12) Remove filter end plate and filter.

**B. Install Return Fluid Filter**

- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 is open.
- (2) Check new filter for general condition and cleanliness.
- (3) Place new filter in position against manifold.
- (4) Insert threaded end of eyebolt through hole in end plate and install nut; tighten until nut bottoms on eyebolt threads.
- (5) Install new O-ring on manifold, insert filter into reservoir, and align bolt holes.
- (6) Apply antiseize compound to bolts and install bolts. Tighten to torque of 66 inch-pounds. Safety bolts with lockwire.
- (7) Connect case drain line to low-pressure return port.
- (8) Connect return line to check valve at return port B.
- (9) Connect bypass line and wing flap return line to T-fitting at wing flap return port.
- (10) Connect return lines to T-fitting at return port A.
- (11) Connect bogie unlock return line to bogie return port.
- (12) Fill reservoir (see instruction placard on reservoir).
- (13) Close auxiliary hydraulic pump control circuit breaker.

**4. Inspection/Check Hydraulic Reservoir Return Fluid Filter**

**A. Check Return Fluid Filter**

- (1) Pressurize hydraulic system (see 29-00, Maintenance Practices).
- (2) Check hydraulic lines and fitting: to all ports of return ports manifold for general condition, security of attachment, routing clearance and leaks.
- (3) Check return ports manifold flange gasket for leaks.

Jun 15/67

Printed in U.S.A.

29-10-2  
CODE 1  
Page 203

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC RESERVOIR RETURN FLUID  
FILTER - MAINTENANCE PRACTICES

1. General

- A. The reservoir return fluid filter is located in the side of the hydraulic system reservoir, where it is mounted to the reservoir return port manifold cover.
- B. Access to the return fluid filter is through the left wing root access door and removal of the cover from the reservoir return port manifold.

2. Tools and Equipment Required

- A. Antiseize compound (Federal Specification TT-A-580, JAN-A-667) is used on bolts for installation of hydraulic reservoir return fluid filter.

3. Removal/Installation Hydraulic Reservoir Return Fluid Filter

A. Remove Return Fluid Filter

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20)

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Drain hydraulic system reservoir (see 29-00, Maintenance Practices).
- (5) Remove bolts from return port manifold cover and remove cover from manifold.


NOTE: Reservoir return fluid filter is attached to return ports manifold cover.

- (6) Remove nut from spring-tension eyebolt which protrudes through filter end plate.
- (7) Remove filter end plate and filter.

B. Install Return Fluid Filter

- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 is open.
- (2) Check new filter for general condition and cleanliness.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

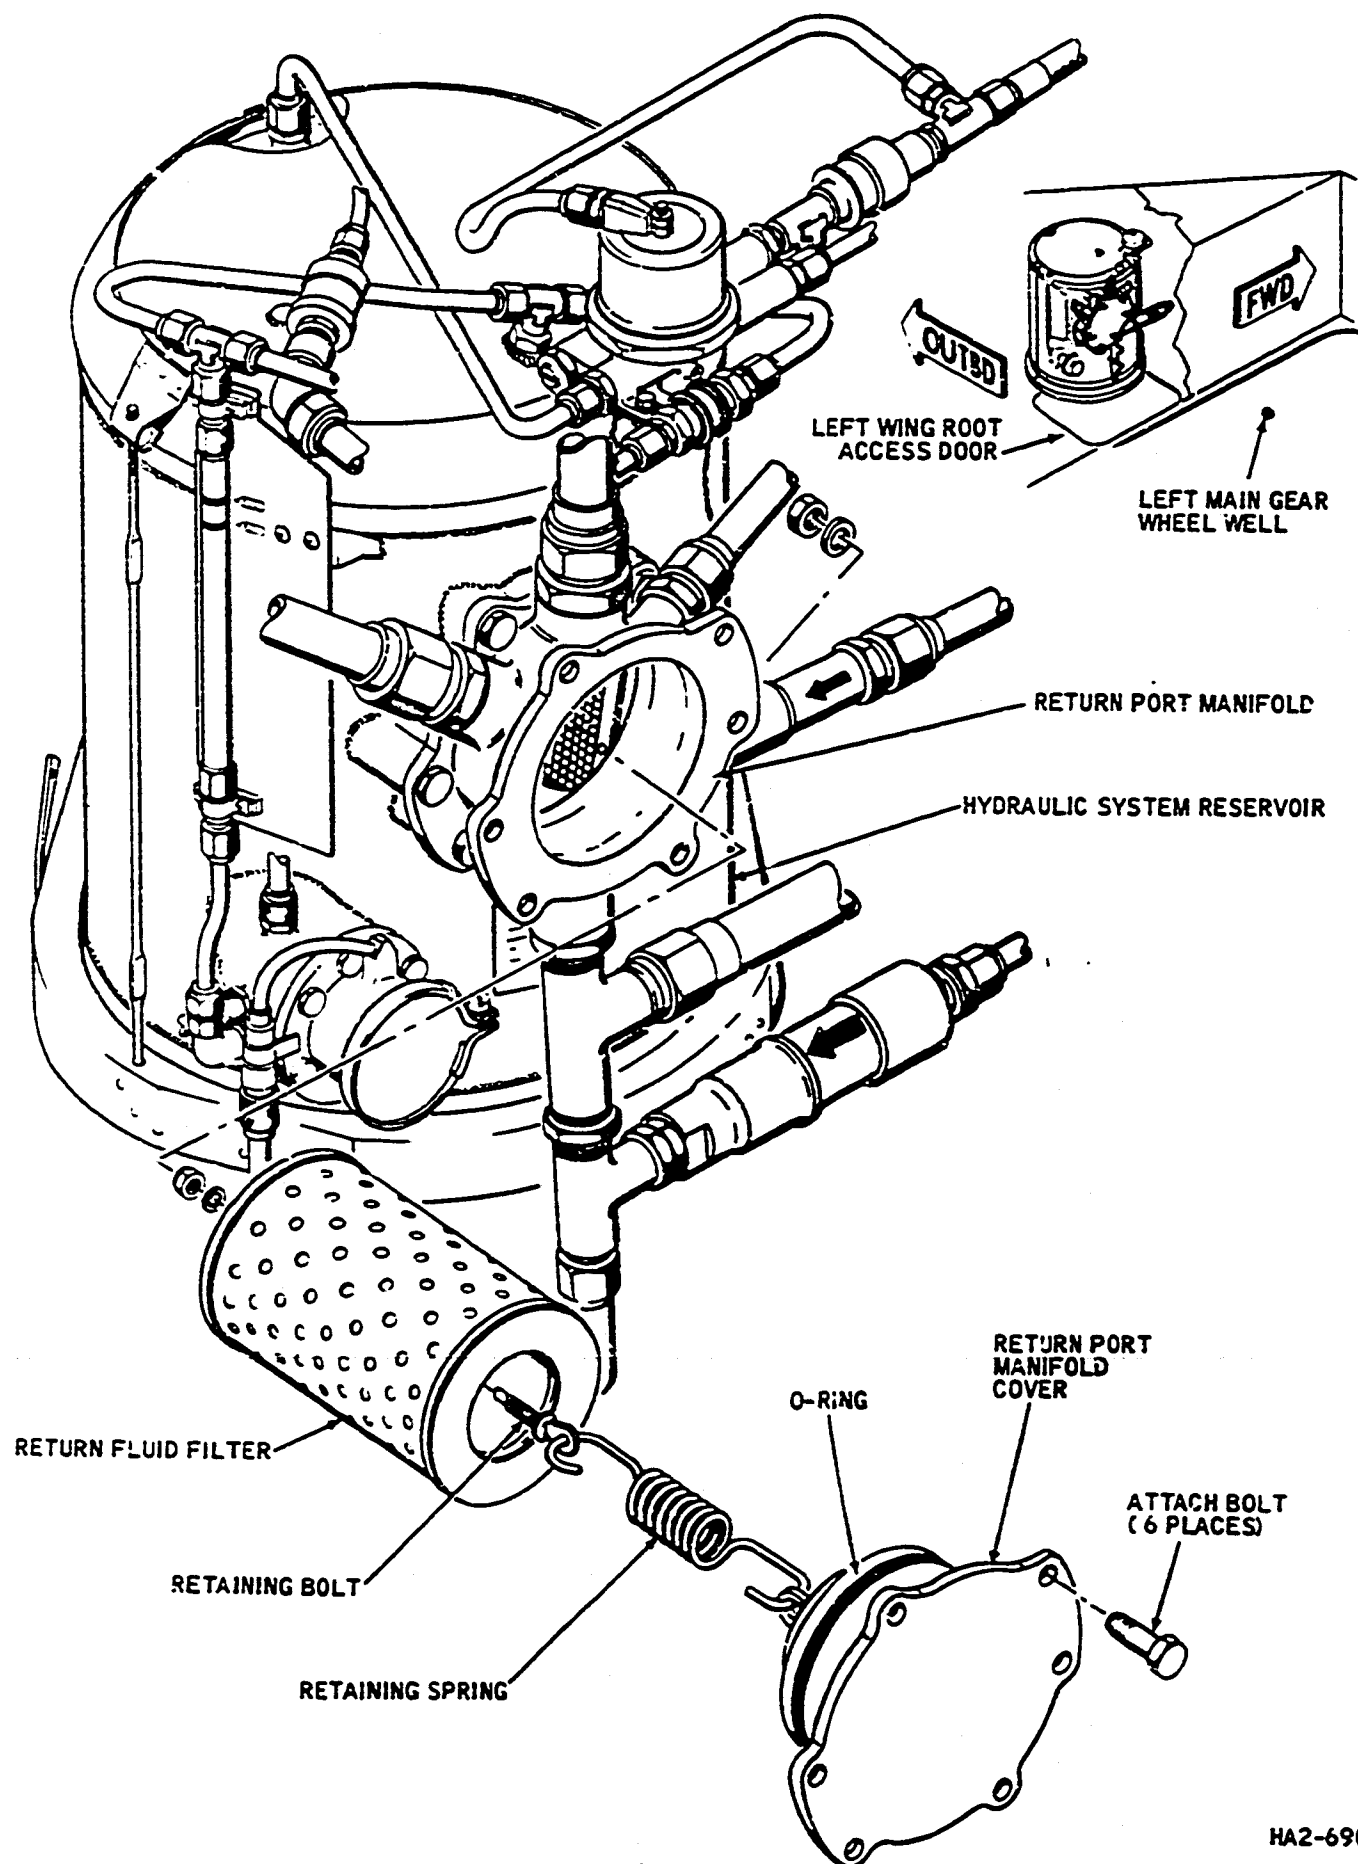

HA2-690

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Place new filter in position against manifold cover.
- (4) Insert threaded end of eyebolt through hole in end plate and install nut; tighten until nut bottoms on eyebolt threads.
- (5) Install new O-ring on manifold cover, insert filter into reservoir, and align bolt holes.
- (6) Apply antiseize compound to bolts and install bolts. Tighten to torque of 66 inch-pounds. Safety bolts with lockwire.
- (7) Fill reservoir (see instruction placard on reservoir).
- (8) Close auxiliary hydraulic pump control circuit breaker.

4. Inspection/Check Hydraulic Reservoir Return Fluid Filter

A. Check Return Fluid Filter

- (1) Pressurize hydraulic system (see 29-00, Maintenance Practices).
- (2) Check manifold cover bolts for security and lockwire.
- (3) Check manifold cover for leaks.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC RESERVOIR RETURN FLUID  
FILTER - MAINTENANCE PRACTICES

1. General

- A. The reservoir return fluid filter is located in the side of the hydraulic system reservoir, where it is mounted to the reservoir return port manifold cover.
- B. Access to the return fluid filter is through the left wing root access door and removal of the cover from the reservoir return port manifold.

2. Tools and Equipment Required

- A. Antiseize compound (Federal Specification TT-A-580, JAN-A-667) is used on bolts for installation of hydraulic reservoir return fluid filter.

3. Removal/Installation Hydraulic Reservoir Return Fluid Filter

A. Remove Return Fluid Filter

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Drain hydraulic system reservoir (see 29-00, Maintenance Practices).
- (5) Remove bolts from return port manifold cover and remove cover from manifold.

NOTE: Reservoir return fluid filter is attached to return ports manifold cover.

- (6) Remove nut from spring-tension eyebolt which protrudes through filter end plate.
- (7) Remove filter end plate and filter.

B. Install Return Fluid Filter


- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel is open.
- (2) Check new filter for general condition and cleanliness.

Jun 15/67

Printed in U.S.A.

29-10-2  
CODE 3  
Page 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

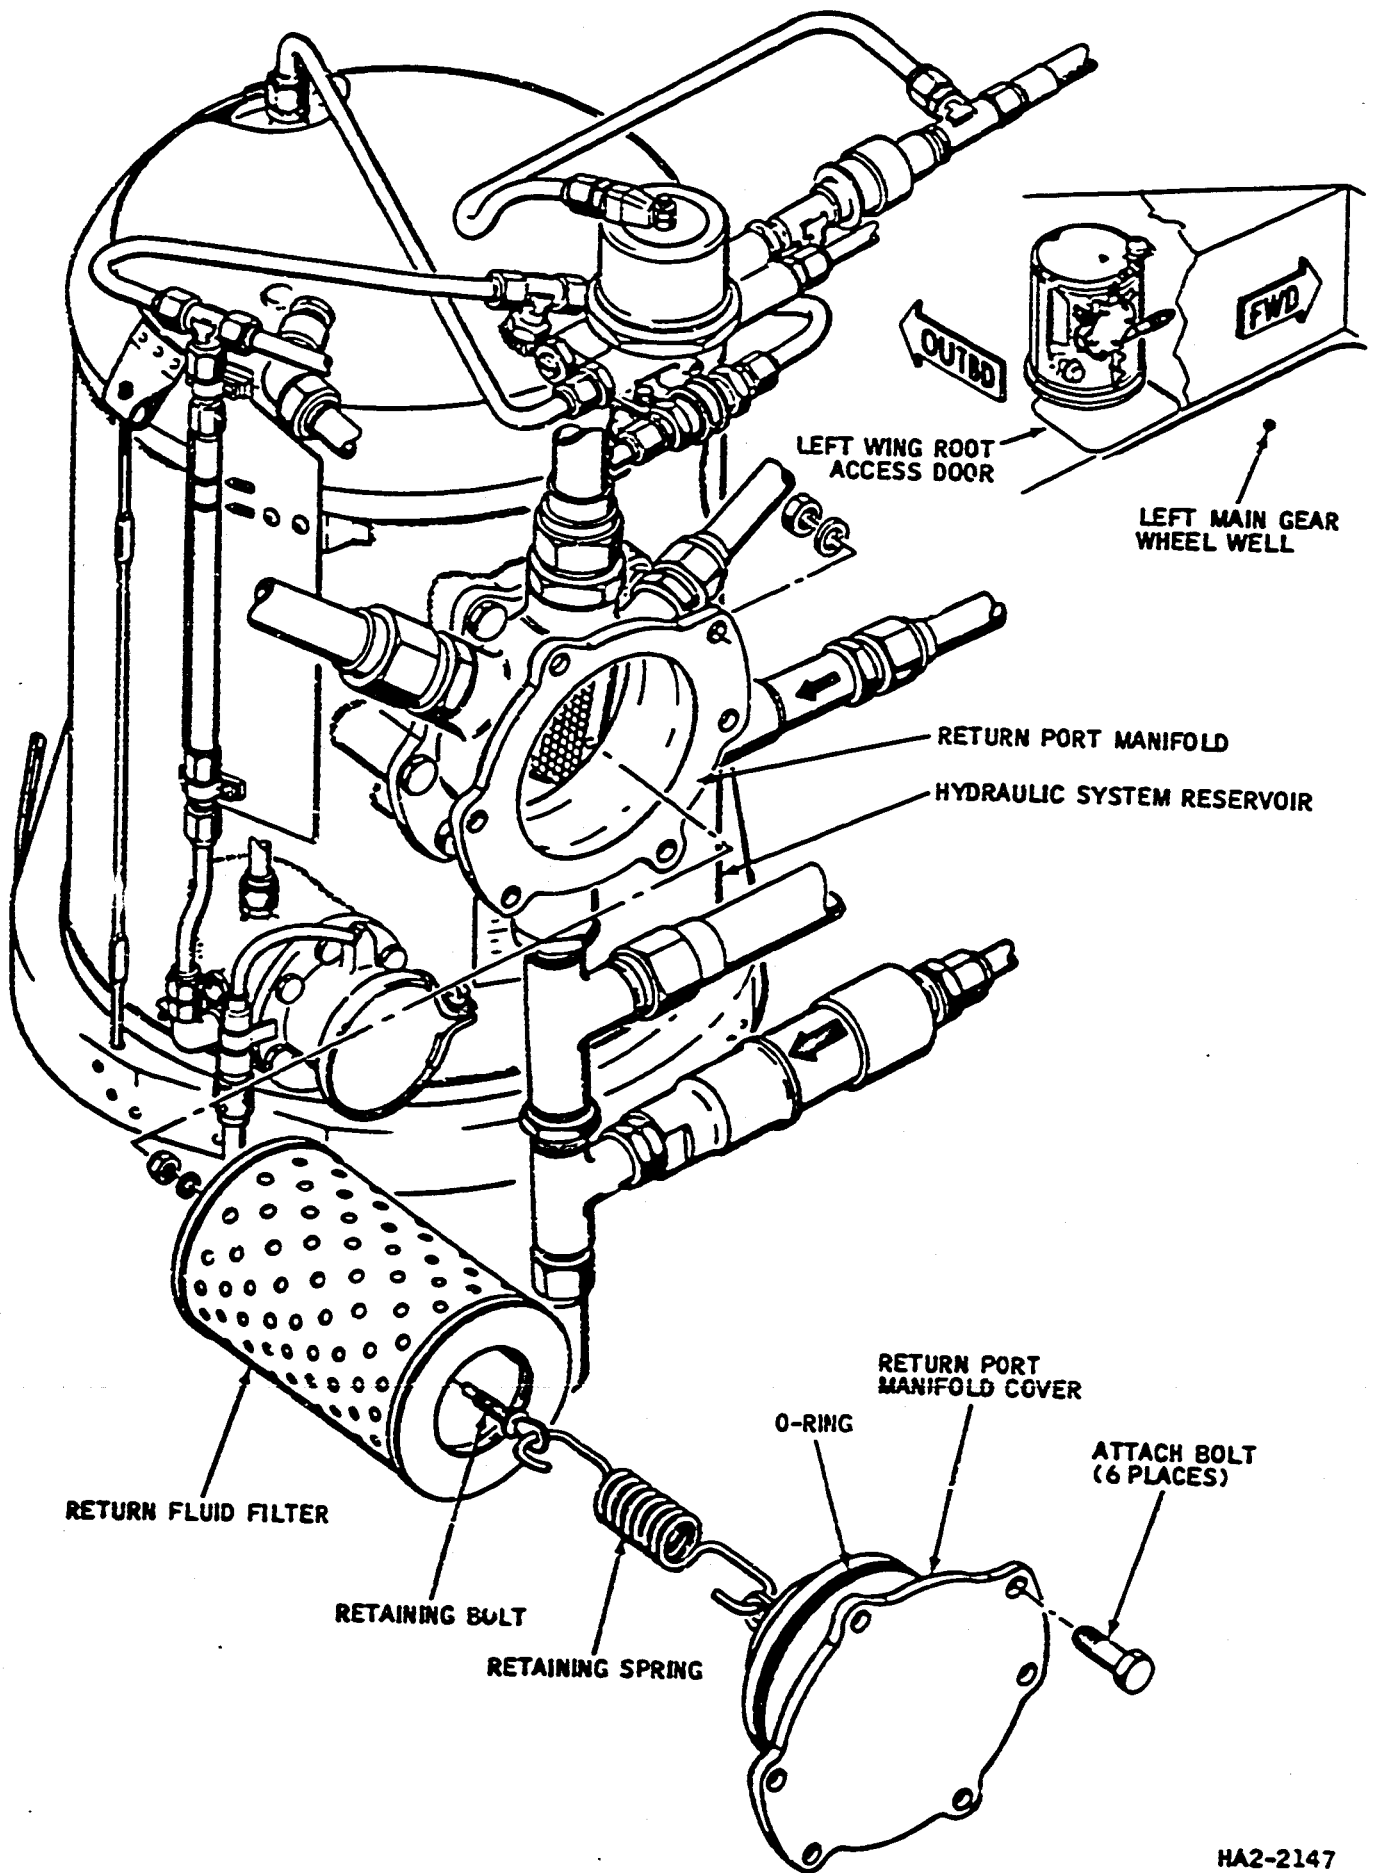

HA2-2147

29-10-2  
 CODE 3  
 Page 202

Hydraulic Reservoir Return Fluid  
 Filter -- Installation  
 Figure 201  
 Printed in U.S.A.

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Place new filter in position against manifold cover.
- (4) Insert threaded end of eyebolt through hole in end plate and install nut; tighten until nut bottoms on eyebolt threads.
- (5) Install new O-ring on manifold cover, insert filter into reservoir, and align bolt holes.
- (6) Apply antiseize compound to bolts and install bolts. Tighten to torque of 66 inch-pounds. Safety bolts with lockwire.
- (7) Fill reservoir (see instruction placard on reservoir).
- (8) Close auxiliary hydraulic pump control circuit breaker.

4. Inspection/Check Hydraulic Reservoir Return Fluid Filter

A. Check Return Fluid Filter

- (1) Pressurize hydraulic system (see 29-00, Maintenance Practices).
- (2) Check manifold cover bolts for security and lockwire.
- (3) Check manifold cover for leaks.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC RESERVOIR RETURN FLUID  
FILTER - MAINTENANCE PRACTICES

1. General

- A. The reservoir return fluid filter is located in the side of the hydraulic system reservoir, under the return ports manifold.
- B. Access to the return fluid filter is through the left wing root access door.

2. Tools and Equipment Required

- A. Antiseize compound (Federal Specification TT-A-580, JAN-A-667) is used on bolts for installation of hydraulic reservoir return fluid filter.

3. Removal/Installation Hydraulic Reservoir Return Fluid Filter

A. Remove Fluid Filter

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.


WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Drain hydraulic system reservoir (see 29-00, Maintenance Practices).
- (5) Disconnect lines from T-fitting at return port A.
- (6) Disconnect lines from T-fitting at wing flap return port.
- (7) Disconnect line from check valve at return port B.
- (8) Disconnect line from low-pressure return port.
- (9) Disconnect line from bogie unlock return port.
- (10) Remove bolts from return port manifold and remove manifold.

NOTE: Reservoir return fluid filter is attached to return ports manifold.

- (11) Remove nut from spring-tension eyebolt which protrudes through filter end plate.
- (12) Remove filter end plate and filter.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

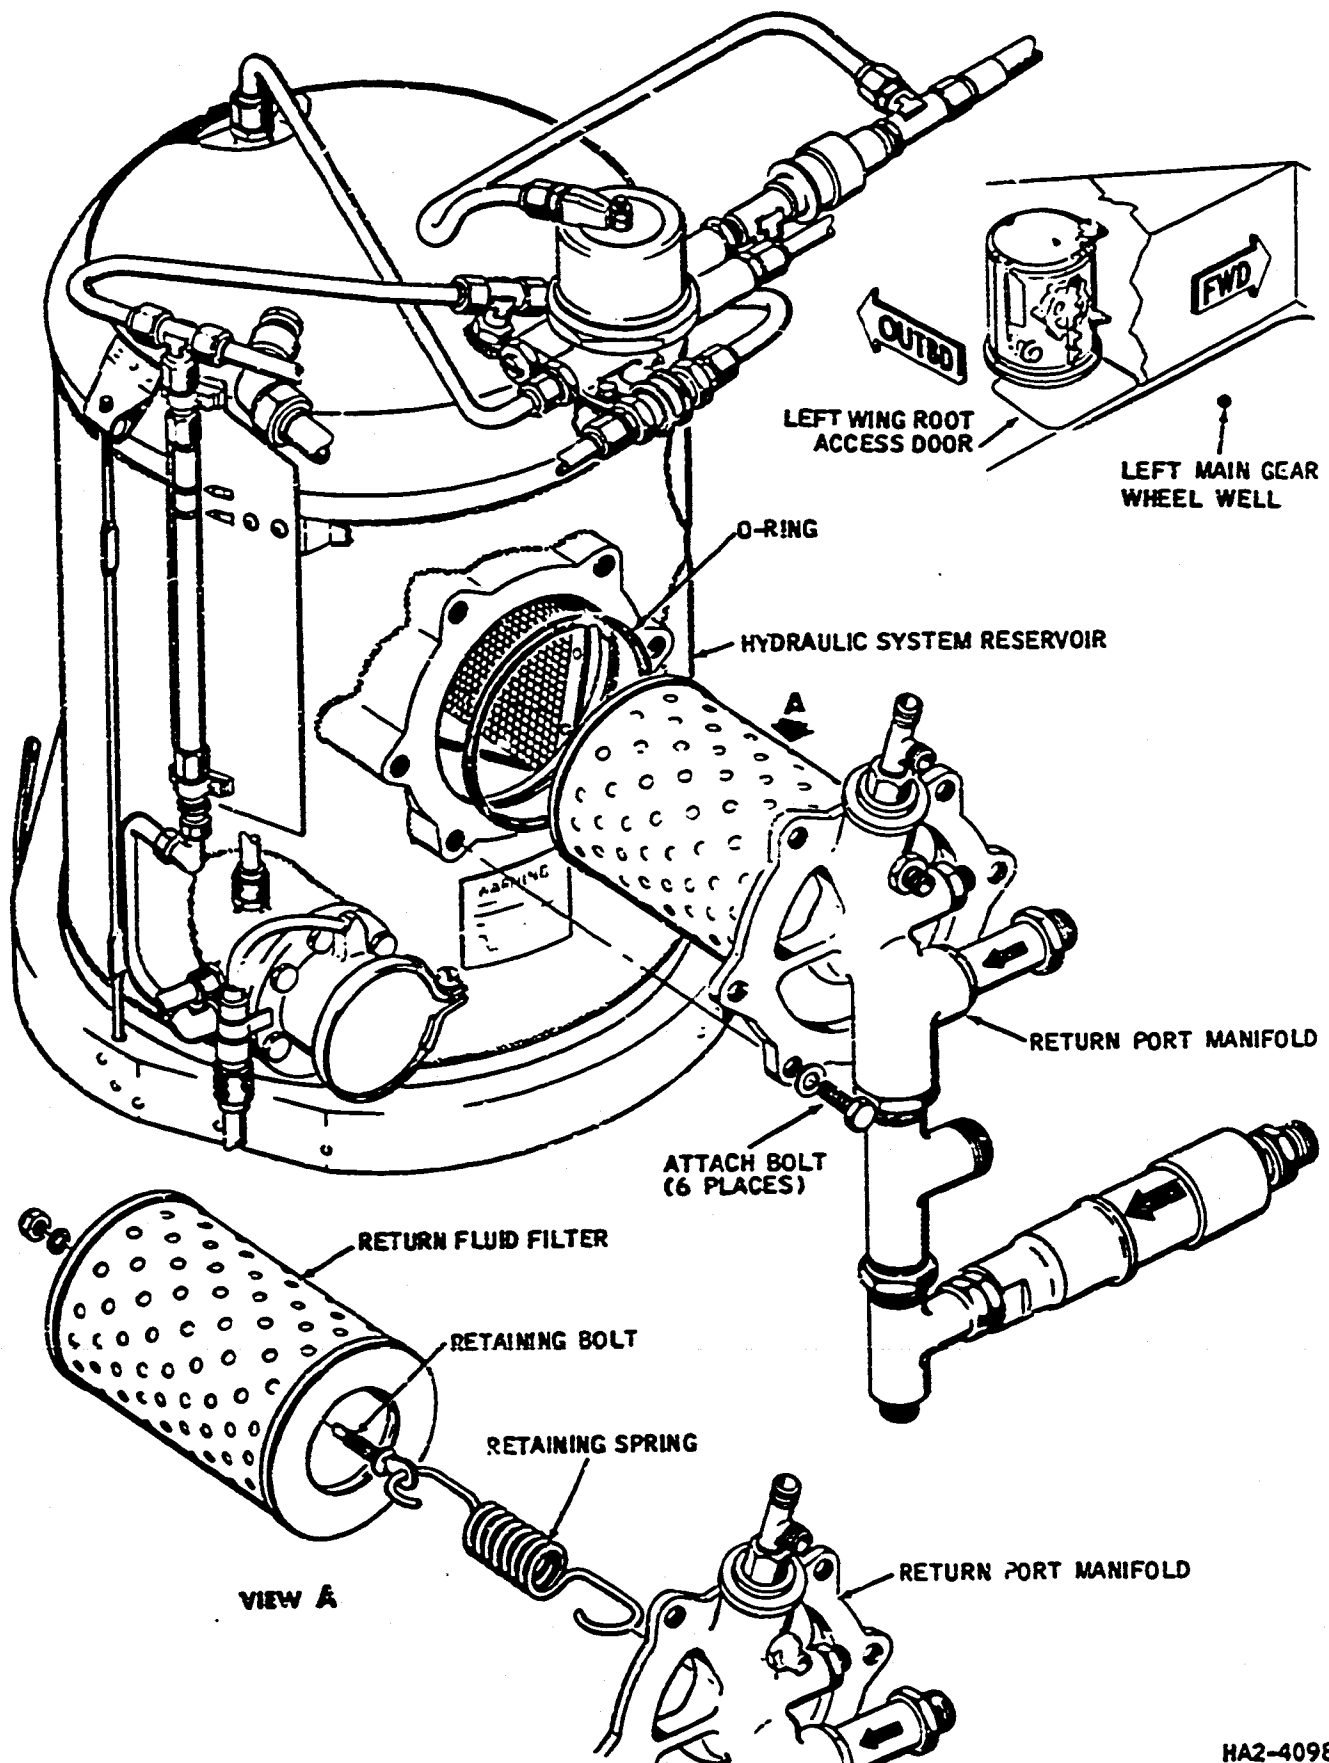

HA2-4098

Hydraulic Reservoir Return Fluid  
 Filter -- Installation  
 Figure 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

B. Install Return Fluid Filter

- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 is open.
- (2) Check new filter for general condition and cleanliness.
- (3) Place new filter in position against manifold.
- (4) Insert threaded end of eyebolt through hole in end plate and install nut; tighten until nut bottoms on eyebolt threads.
- (5) Install new O-ring on manifold, insert filter into reservoir, and align bolt holes.
- (6) Apply antiseize compound to bolts and install bolts. Tighten to torque of 66 inch-pounds. Safety bolts with lockwire.
- (7) Connect case drain line to low-pressure return port.
- (8) Connect return line to check valve at return port B.
- (9) Connect bypass line and wing flap return line to T-fitting at wing flap return port.
- (10) Connect return lines to T-fitting at return port A.
- (11) Connect bogie unlock return line to bogie return port.
- (12) Fill reservoir (see instruction placard on reservoir).
- (13) Close auxiliary hydraulic pump control circuit breaker.

4. Inspection/Check Hydraulic Reservoir Return Fluid Filter

A. Check Return Fluid Filter

- (1) Pressurize hydraulic system (see 29-00, Maintenance Practices).
- (2) Check hydraulic lines and fittings to all ports of return ports manifold for general condition, security of attachment, routing clearance, and leaks.
- (3) Check return ports manifold flange gasket for leaks.

Jun 15/67

Printed in USA

29-10-2  
CODE 4  
Page 203

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC RESERVOIR RETURN FLUID FILTER -  
MAINTENANCE PRACTICES

1. General

- A. The reservoir return fluid filter is located in the side of the hydraulic system reservoir, under the return ports manifold.
- B. Access to the return fluid filter is through the left wing root access door.

2. Tools and Equipment Required

- A. Antiseize compound (Federal Specification TT-A-580, JAL-A-667) is used on bolts for installation of hydraulic reservoir return fluid filter.

3. Removal/Installation Hydraulic Reservoir Return Fluid Filter

A. Remove Return Fluid Filter


- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Drain hydraulic system reservoir (see 29-00, Maintenance Practices).
- (5) Disconnect lines from T-fitting at return port A.
- (6) Disconnect lines from T-fitting at wing flap return port.
- (7) Disconnect line from check valve at return port B.
- (8) Disconnect line from low-pressure return port.
- (9) Disconnect line from bogie unlock return port.
- (10) Remove bolts from return port manifold and remove manifold.

NOTE: Reservoir return fluid filter is attached to return ports manifold.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

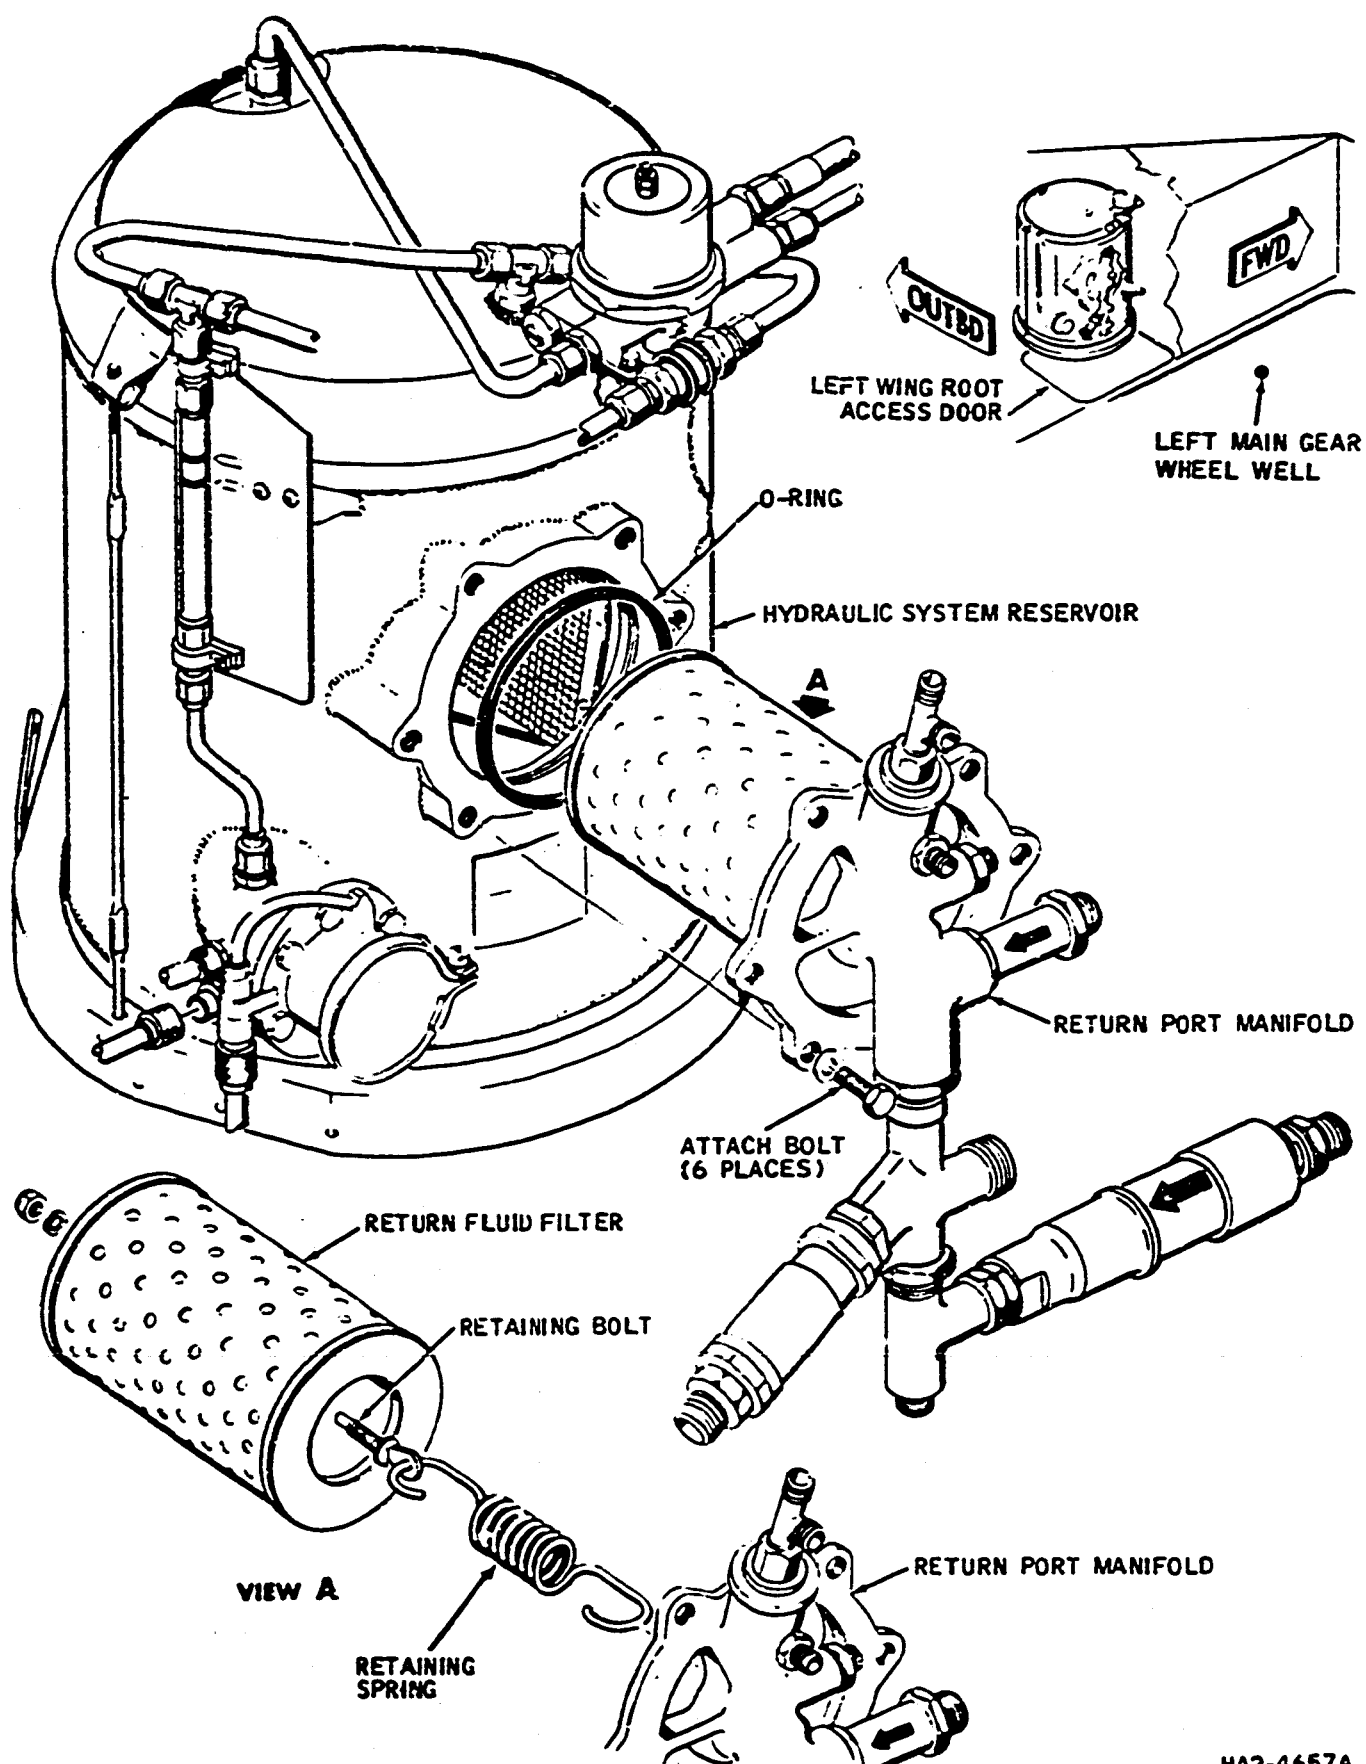

HA2-4657A

Hydraulic Reservoir -- Return Port  
 (Airplanes 801-811)  
 Figure 201 (Sheet 1)

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

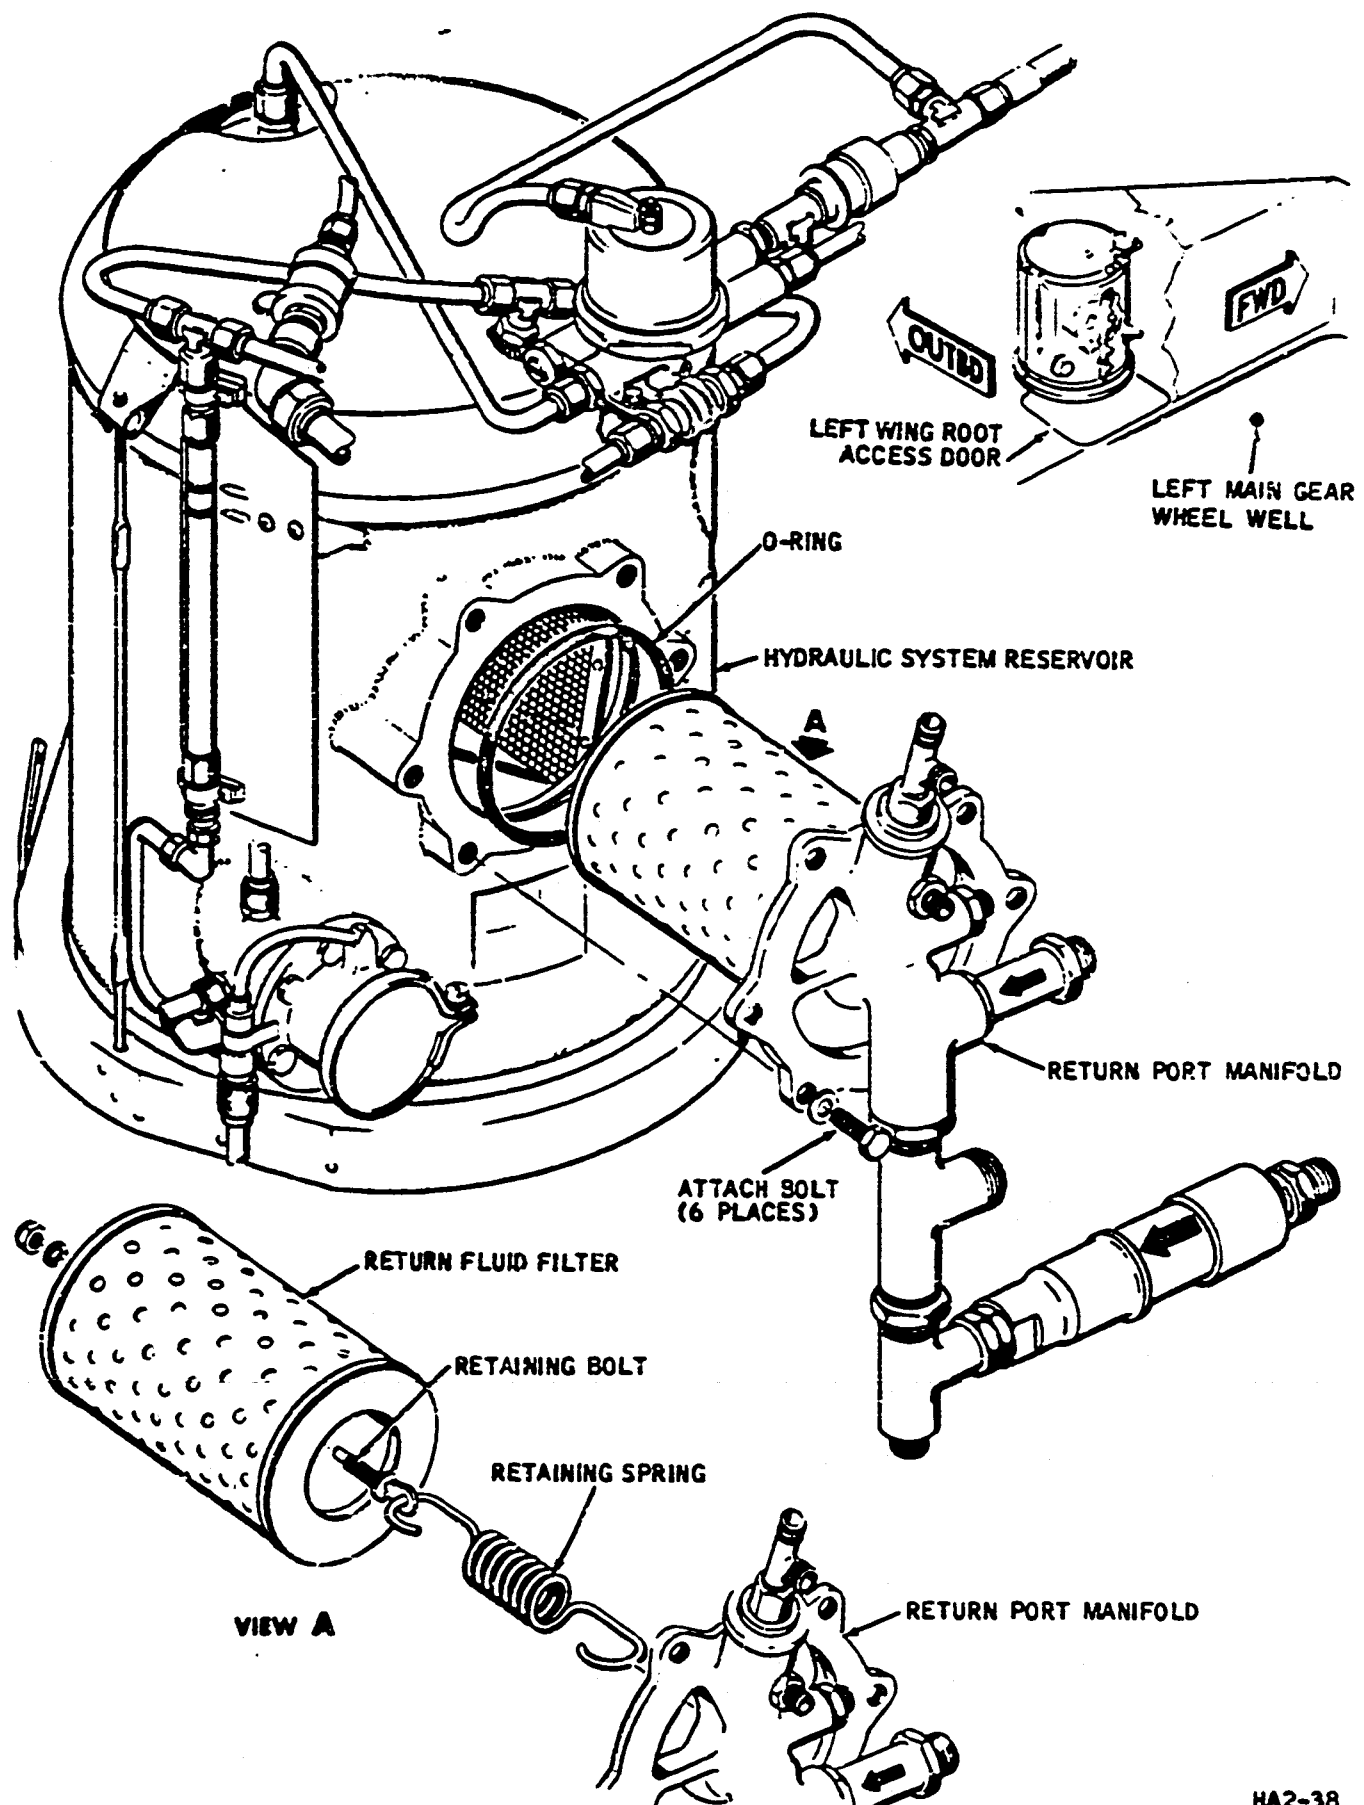

HA2-38

Hydraulic Reservoir Return Fluid Filter -- Installation  
 (Airplanes 812-822, 860-863)  
 Figure 201 (Sheet 2)

Aug 1/68

Printed in U.S.A.

29-10-2  
 CODE 5  
 Page 203

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (11) Remove nut from spring-tension eyebolt which protrudes through filter end plate.
- (12) Remove filter end plate and filter.

B. Install Return Fluid Filter

- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 is open.
- (2) Check new filter for general condition and cleanliness.
- (3) Place new filter in position against manifold.
- (4) Insert threaded end of eyebolt through hole in end plate and install nut; tighten until nut bottoms on eyebolt threads.
- (5) Install new O-ring on manifold, insert filter into reservoir, and align bolt holes.
- (6) Apply antiseize compound to bolts and install bolts. Tighten to torque of 66 inch-pounds. Safety bolts with lockwire.
- (7) Connect case drain line to low-pressure return port.
- (8) Connect return line to check valve at return port B.
- (9) Connect bypass line and wing flap return line to T-fitting at wing flap return port.
- (10) Connect return lines to T-fitting at return port A.
- (11) Connect bogie unlock return line to bogie return port.
- (12) Fill reservoir (see instruction placard on reservoir).
- (13) Close auxiliary hydraulic pump control circuit breaker.

4. Inspection/Check Hydraulic Reservoir Return Fluid Filter

A. Check Return Fluid Filter

- (1) Pressurize hydraulic system (see 29-00, Maintenance Practices).
- (2) Check hydraulic lines and fittings to all ports of return ports manifold for general condition, security of attachment, routing clearance and leaks.
- (3) Check return ports manifold flange gasket for leaks.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC RESERVOIR AIR PRESSURE REGULATOR-ASPIRATOR -  
MAINTENANCE PRACTICES

1. General

- A. The regulator-aspirator is located on the top inboard side of the hydraulic system reservoir in the left wing root.
- B. Access to the regulator-aspirator is through the left wing root access door.

2. Removal/Installation Hydraulic Reservoir Air Pressure Regulator-Aspirator

A. Remove Air Pressure Regulator-Aspirator


- (1) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (2) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (3) Disconnect low-pressure hydraulic line from outlet port of aspirator.
- (4) Disconnect hydraulic system pressure line from fluid inlet port of aspirator.
- (5) Disconnect cabin air supply hose.
- (6) Remove air diverter line.
- (7) Remove T-fitting with screen filter, check valve, and paper element filter as an assembly from cabin air inlet port of aspirator.
- (8) Remove regulator-aspirator.
- (9) Remove fittings from air diverter line port, fluid inlet port, and air-fluid outlet port. Discard O-rings.

B. Install Air Pressure Regulator-Aspirator

- (1) Using new O-rings, install fittings in air diverter line port, fluid inlet port, and air-fluid outlet port.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

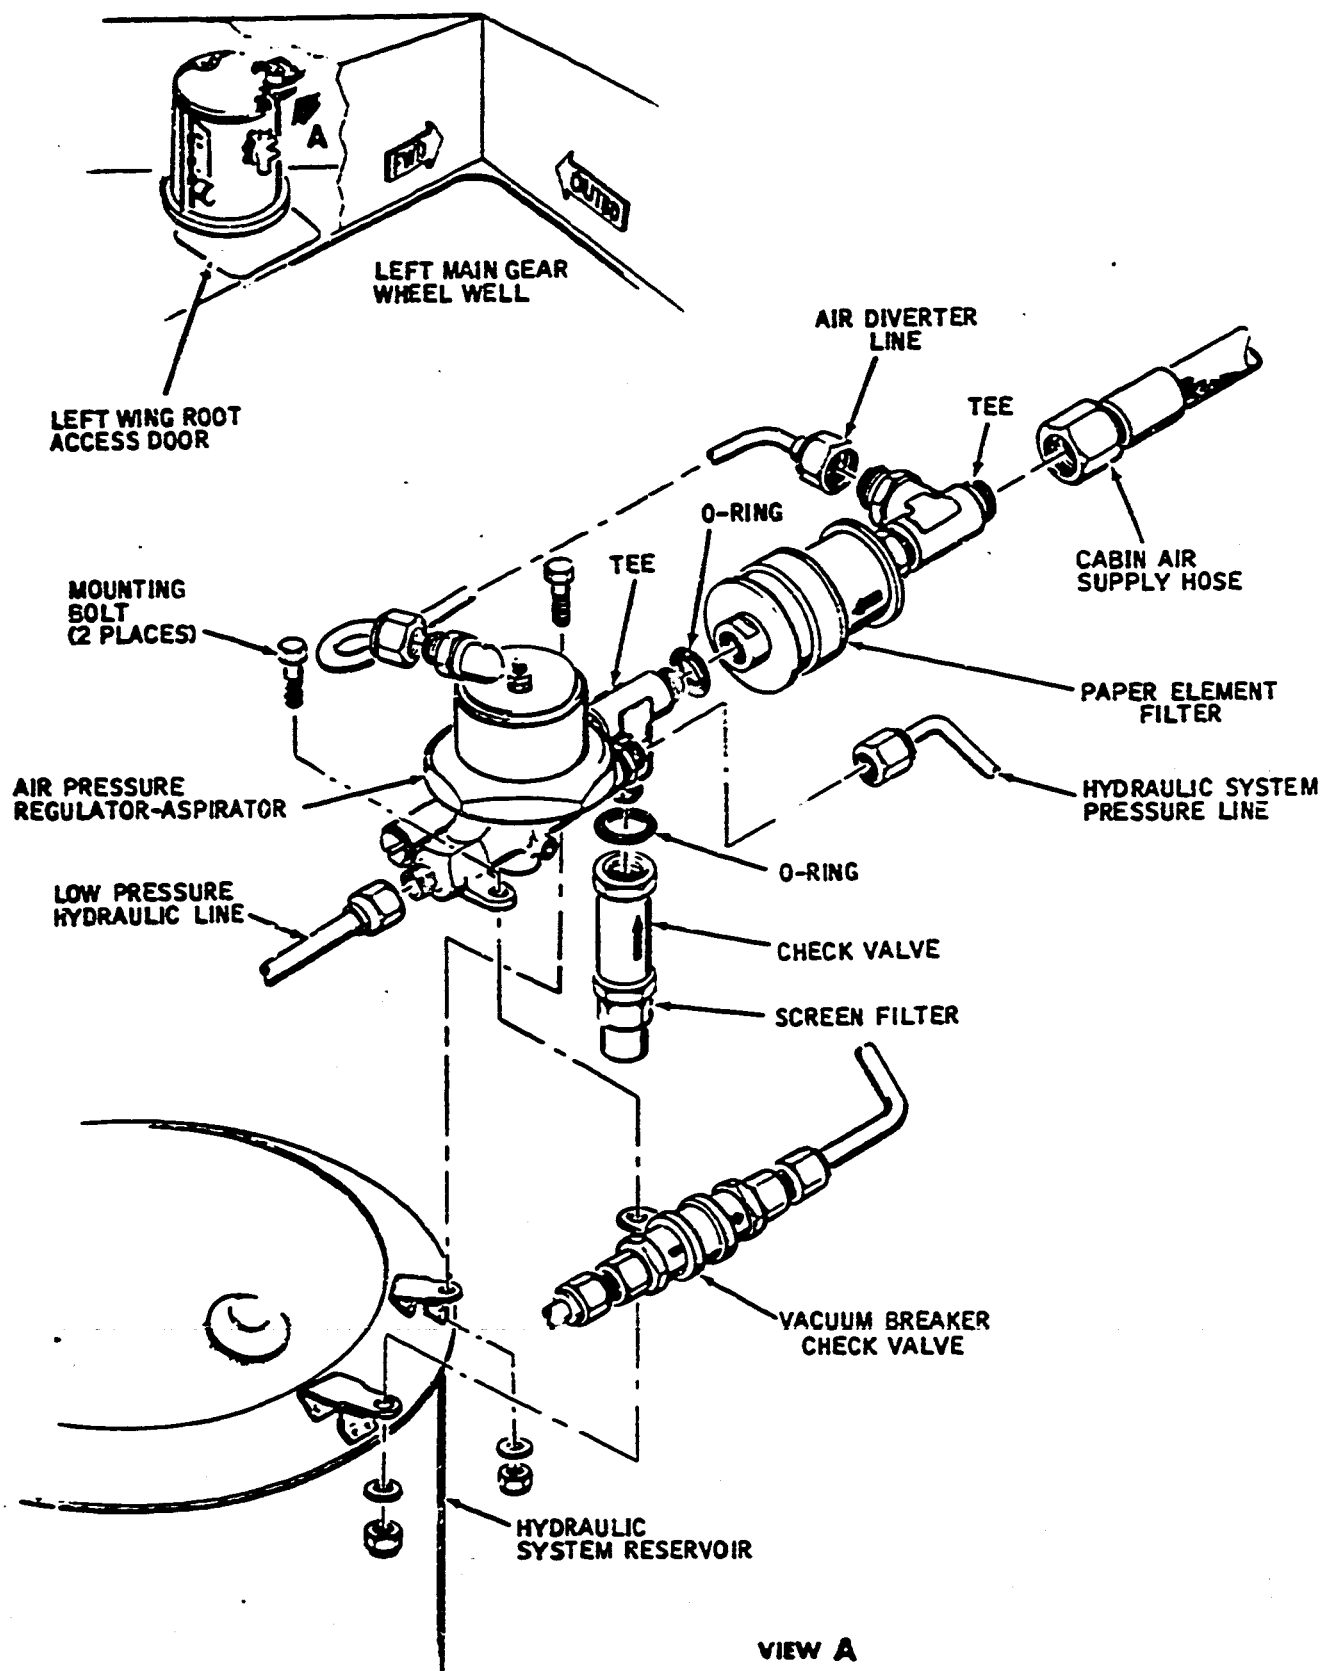

VIEW A

HA2-83

Reservoir Air Pressure Regulator-  
 Aspirator -- Installation  
 Figure 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Using new O-rings, install T-fitting with screen filter, check valve, and paper element filter, as an assembly in cabin air inlet port of aspirator.

CAUTION: MAKE CERTAIN THAT CABIN AIR FILTER OUTLET PORT IS DIRECTED TOWARD AIR INLET PORT OF ASPIRATOR BODY.

NOTE: If air inlet paper element filter is to be replaced, see 29-10-5.

- (3) Install air diverter line.
- (4) Install regulator-aspirator on hydraulic reservoir mounting brackets.
- (5) Connect cabin air supply line hose to T-fitting upstream of paper element filter.
- (6) Connect low-pressure hydraulic line to outlet port of aspirator.
- (7) Connect hydraulic pressure system line to fluid inlet port of aspirator.

3. Inspection/Check Hydraulic Reservoir Air Pressure Regulator-Aspirator

A. Check Hydraulic Reservoir Air Pressure Regulator-Aspirator

- (1) Pressurize hydraulic system (see 29-00, Maintenance Practices). Monitor reservoir air pressure gage at reservoir air bleed valve for pressure rise in reservoir.

NOTE: The reservoir should pressurize to 30 to 35 psi in approximately 4 minutes.

- (2) Check pressure lines and connections for fluid leaks.

NOTE: Slight hydraulic fluid leakage from the drain hole located in the T-fitting installed between the air hose and the aspirator filter is normal and acceptable at hydraulic reservoir pressures below 5 psi.

- (3) Check air-fluid line and connections for leaks.
- (4) Check regulator-aspirator for security of mounting and general condition.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC RESERVOIR AIR PRESSURE REGULATOR-ASPIRATOR -  
MAINTENANCE PRACTICES

1. General

- A. The regulator-aspirator is located on the top inboard side of the hydraulic system reservoir in the left wing root.
- B. Access to the regulator-aspirator is through the left wing root access door.

2. Removal/Installation Hydraulic Reservoir Air Pressure  
Regulator-Aspirator

A. Remove Air Pressure Regulator-Aspirator

- (1) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (2) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (3) Disconnect low-pressure hydraulic line from outlet port of aspirator.
- (4) Disconnect hydraulic system pressure line from fluid inlet port of aspirator.
- (5) Disconnect air inlet hose.
- (6) Remove air diverter line.
- (7) Remove regulator-aspirator.
- (8) Remove fittings from fluid inlet port, air inlet port, and air-fluid outlet port. Discard O-rings.

B. Install Air Pressure Regulator-Aspirator


- (1) Using new O-rings, install fittings in air inlet port, fluid inlet port, and air-fluid outlet port.

CAUTION: MAKE CERTAIN THAT CABIN AIR FILTER OUTLET PORT IS DIRECTED TOWARD AIR INLET PORT OF ASPIRATOR BODY.

NOTE: If air inlet paper element filter is to be replaced, see 29-10-5.

- (2) Install regulator-aspirator on hydraulic reservoir mounting brackets.
- (3) Connect air inlet hose to air inlet port of aspirator.
- (4) Connect low-pressure hydraulic line to outlet port of aspirator.
- (5) Connect hydraulic pressure system line to fluid inlet port of aspirator.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

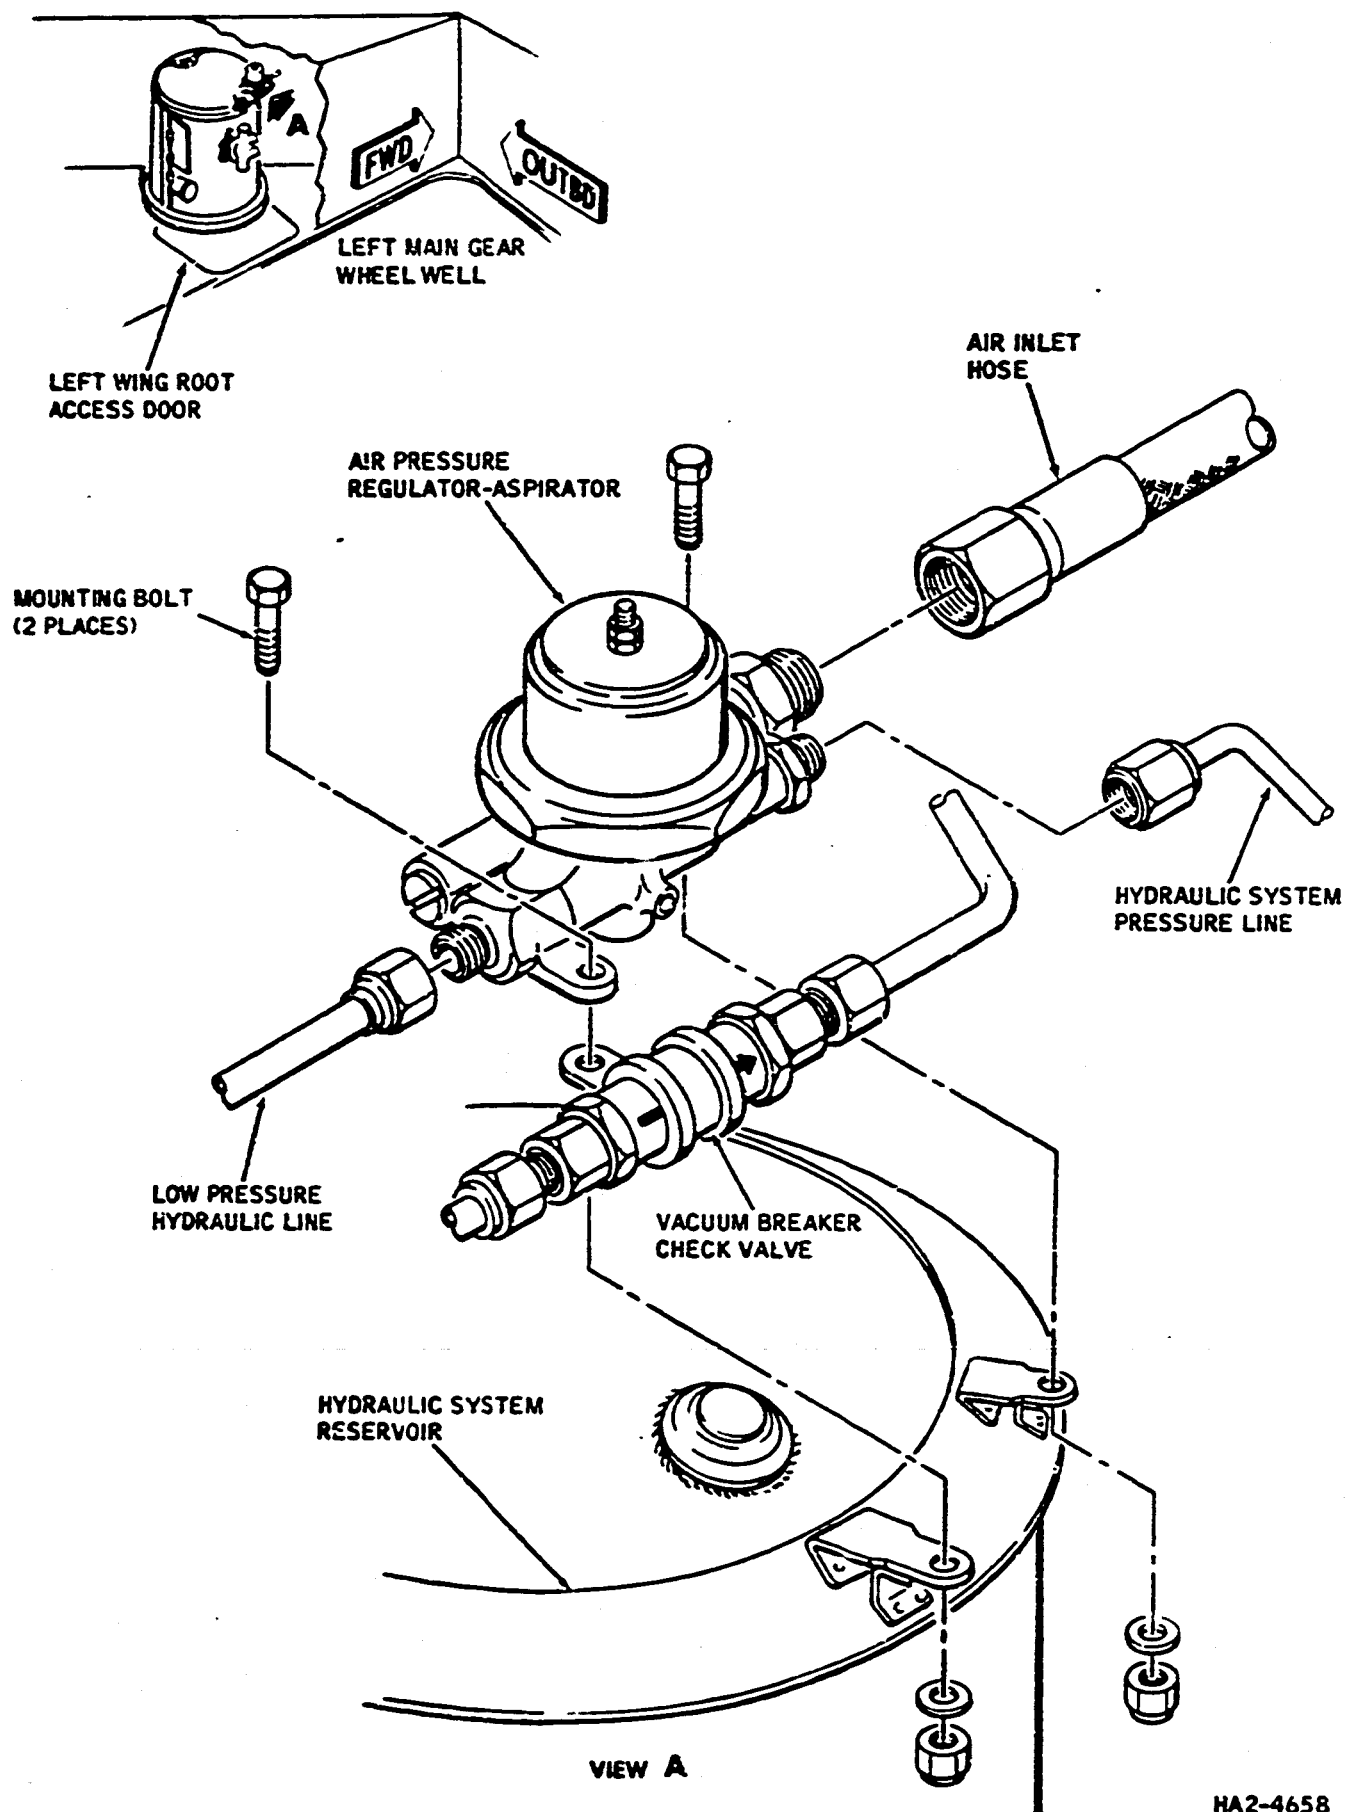

HA2-4658

Reservoir Air Pressure Regulator-  
 Aspirator -- Installation  
 Figure 201

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

3. Inspection/Check Hydraulic Reservoir Air Pressure  
Regulator-Aspirator

A. Check Hydraulic Reservoir Air Pressure Regulator-Aspirator

- (1) Pressurize hydraulic system (see 29-00, Maintenance Practices). Monitor reservoir air pressure gage at reservoir air bleed valve for pressure rise in reservoir.

NOTE: The reservoir should pressurize to 35 to 40 psi in approximately 4 minutes.

- (2) Check pressure lines and connections for fluid leaks.
- (3) Check air-fluid line and connections for leaks.
- (4) Check regulator-aspirator for security of mounting and general condition.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC RESERVOIR AIR PRESSURE REGULATOR-ASPIRATOR -  
MAINTENANCE PRACTICES

1. General

- A. The regulator-aspirator is located on the top inboard side of the hydraulic system reservoir in the left wing root.
- B. Access to the regulator-aspirator is through the left wing root access door.

2. Removal/Installation Hydraulic Reservoir Air Pressure  
Regulator-Aspirator


A. Remove Air Pressure Regulator-Aspirator

- (1) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (2) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (3) Disconnect low-pressure hydraulic line from outlet port of aspirator.
- (4) Disconnect hydraulic system pressure line from fluid inlet port of aspirator.
- (5) Disconnect hose from air inlet port T-fitting of regulator-aspirator.
- (6) Remove air diverter line.
- (7) Remove regulator-aspirator.
- (8) Remove fittings from air diverter line ports, fluid inlet port, and air-fluid outlet port. Discard O-rings.

B. Install Air Pressure Regulator-Aspirator

- (1) Using new O-rings, install fittings in air diverter line ports, fluid inlet port, and air-fluid outlet port.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

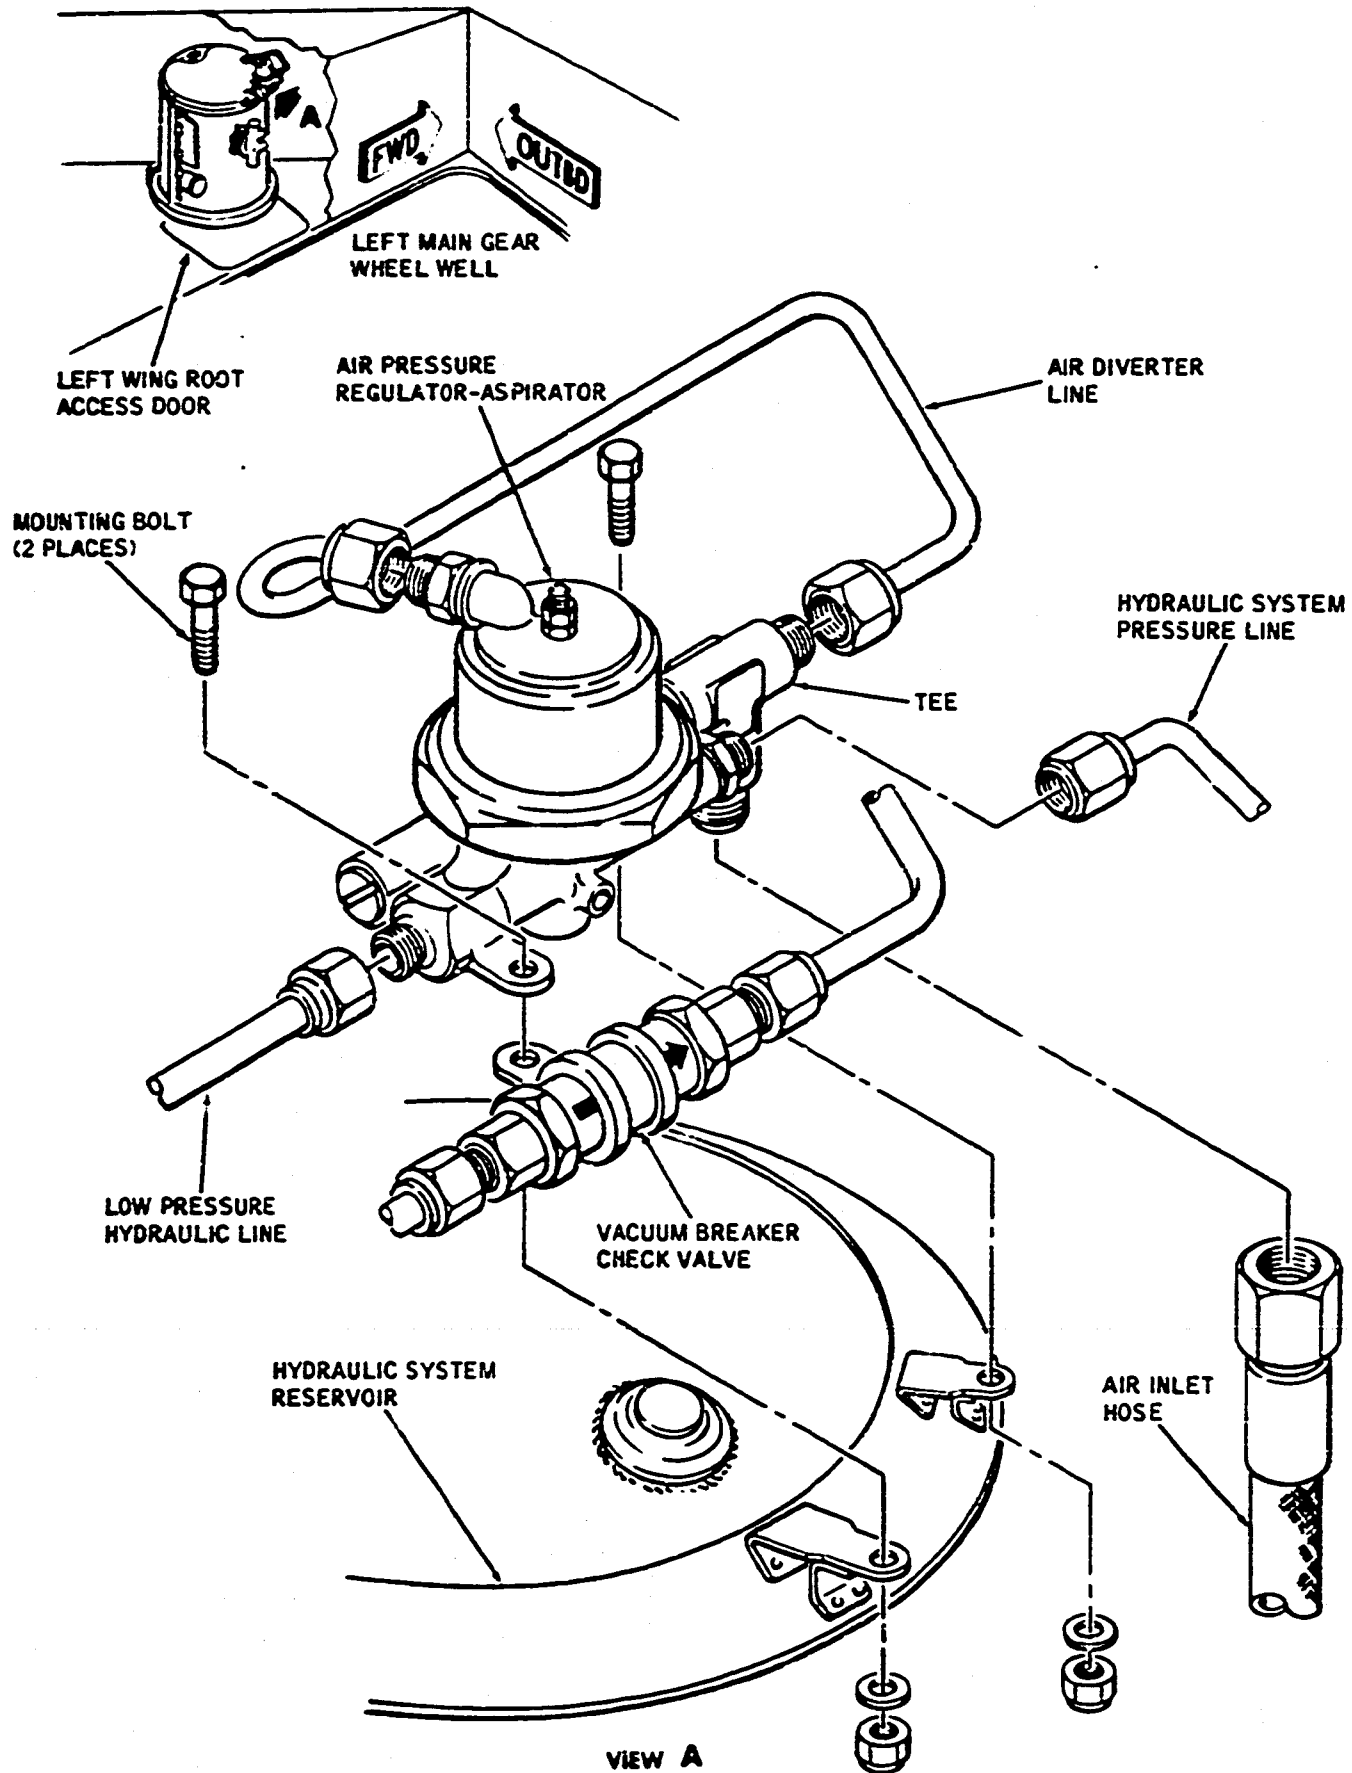

VIEW A

HA2-4659

Reservoir Air Pressure Regulator-  
 Aspirator - Instaliation  
 Figure 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Install air diverter line.
- (3) Install regulator-aspirator on hydraulic reservoir mounting brackets.
- (4) Connect air supply hose to air inlet port T-fitting.
- (5) Connect low-pressure hydraulic line to outlet port of aspirator.
- (6) Connect hydraulic pressure system line to fluid inlet port of aspirator.

3. Inspection/Check Hydraulic Reservoir Air Pressure  
Regulator-Aspirator

A. Check Hydraulic Reservoir Air Pressure Regulator-Aspirator

- (1) Pressurize hydraulic system (see 29-00, Maintenance Practices). Monitor reservoir air pressure gage at reservoir air bleed valve for pressure rise in reservoir.

NOTE: The reservoir should pressurize to 35 to 40 psi in approximately 4 minutes.

- (2) Check pressure lines and connections for fluid leaks.
- (3) Check air-fluid line and connections for leaks.
- (4) Check regulator-aspirator for security of mounting and general condition.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

REGULATOR-ASPIRATOR AIR FILTERS - MAINTENANCE PRACTICES

1. General

- A. The regulator-aspirator air filters are located inboard and forward of the hydraulic system reservoir regulator-aspirator in the cabin air inlet line.
- B. Access to the filters is through the left wing root access door.

2. Removal/Installation Regulator-Aspirator Air Filters

A. Remove Air Filters

- (1) Disconnect cabin air supply hose.
- (2) Remove line connected between T-fitting upstream of paper element filter, and regulator-aspirator.
- (3) Remove paper element filter from T-fitting installed in regulator-aspirator air inlet port. Discard O-ring.
- (4) Remove T-fitting from inlet port of paper element filter. Discard O-ring.
- (5) Remove screen filter from bottom of check valve installed at right angles to air inlet port of regulator-aspirator.


B. Install Air Filters

- (1) Install screen filter in bottom of check valve at air inlet port of regulator-aspirator.
- (2) Using new O-ring, install T-fitting in inlet port of paper element filter.
- (3) Install paper element filter on T-fitting installed in regulator-aspirator air inlet port.

CAUTION: MAKE CERTAIN THAT FILTER OUTLET PORT IS DIRECTED TOWARD ASPIRATOR BODY.

- (4) Install line between T-fitting upstream of paper element filter and regulator-aspirator.
- (5) Connect cabin air supply hose.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

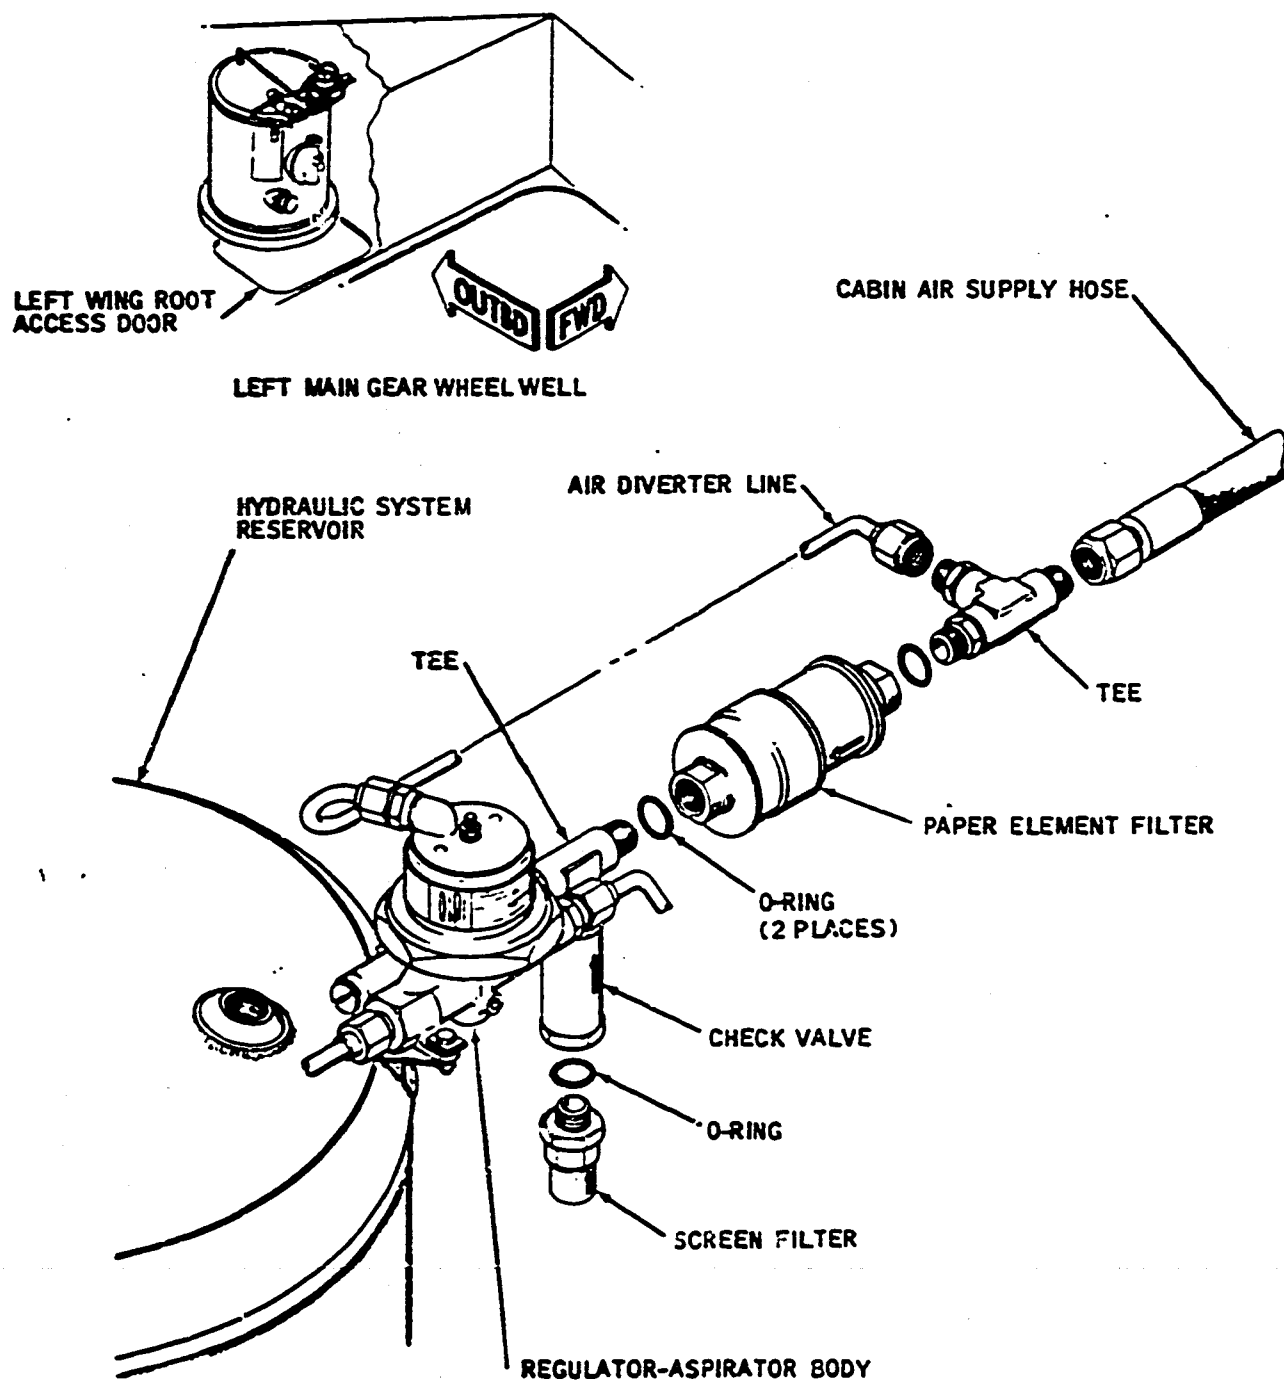

HA2-82

Regulator-Aspirator Air  
 Filters -- Installation  
 Figure 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

3. Inspection/Check Regulator-Aspirator Air Filters

A. Check Air Filters

- (1) Visually check cabin air supply hose, filters, and connections for proper installation, general condition, and security of attachment.

NOTE: Make certain that paper element filter is properly installed with reservoir port directed toward the inlet port of the regulator-aspirator.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

REGULATOR-ASPIRATOR AIR FILTER  
ELEMENTS - MAINTENANCE PRACTICES

1. General

- A. The regulator-aspirator air filters are located inboard and forward of the hydraulic system reservoir regulator-aspirator in the cabin air inlet line.
- B. Access to the filters is through the left wing root access door.

2. Tools and Equipment Required

- A. Naphtha (Federal Specification P-D-680) is used for cleaning of the regulator-aspirator air filters.

3. Removal/Installation Regulator-Aspirator Air Filter Elements

A. Remove Air Filter Elements

- (1) Disconnect cabin air supply hose.
- (2) Remove line connected between T-fitting upstream of paper element filter and regulator-aspirator.
- (3) Remove lockwire from paper element filter and remove head from filter case. Discard O-ring.
- (4) Remove paper filter element.
- (5) Remove screen filter from bottom of check valve installed at right angles to air inlet port of regulator-aspirator.
- (6) Remove screen from filter case.
- (7) Clean screen filter in naphtha (Federal Specification P-D-680); agitate and brush screen thoroughly to remove all dust, dirt, and foreign particles.
- (8) Air-dry screen with compressed air; direct air nozzle stream from inside of screen.

B. Install Air Filter Elements


- (1) Install screen filter in screen filter case.
- (2) Install screen filter in bottom of check valve.
- (3) Insert a new paper filter element in paper element filter case.

Jun 15/67

Printed in U.S.A.

29-10-5  
CODE 1  
Page 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

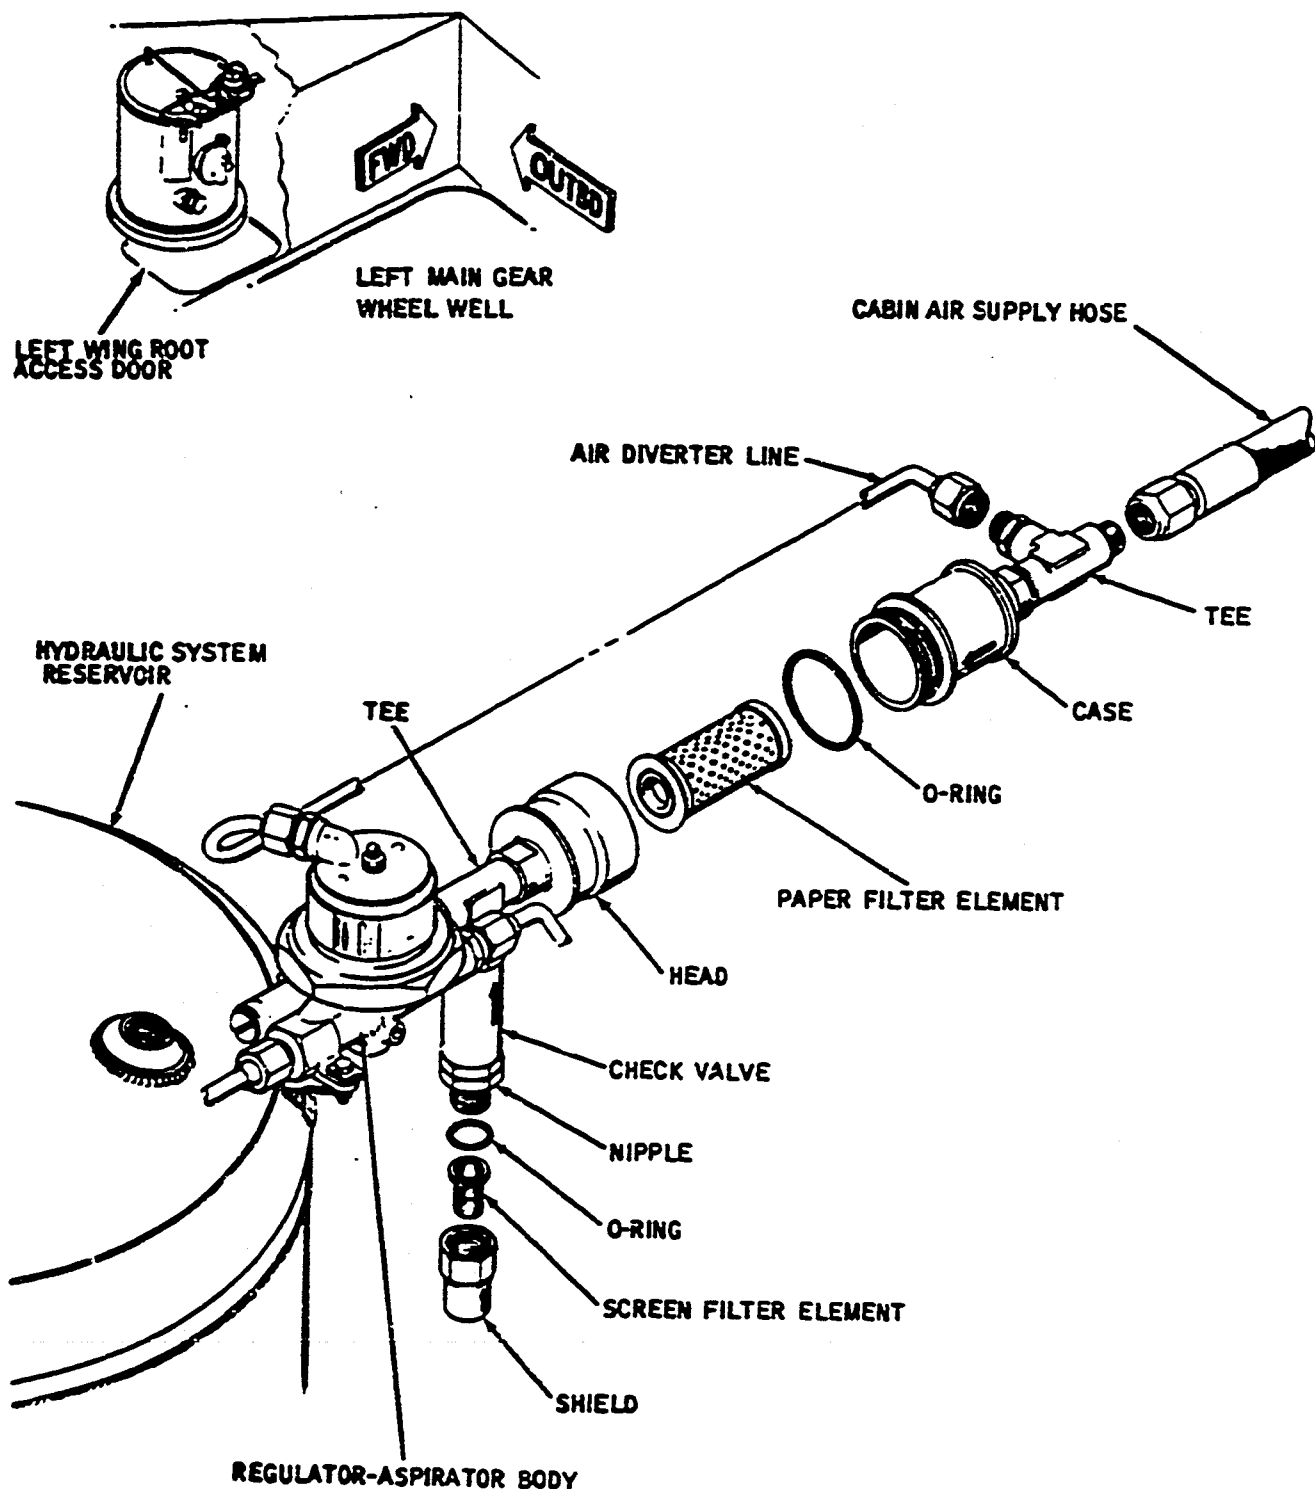

Regulator-Aspirator Air Filter  
 Elements -- Installation  
 Figure 201

HA2-81

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) Using new O-rings, install head of paper element filter on filter case. Safety head to case with lockwire.
- (5) Install line between T-fitting upstream of paper element filter and regulator-aspirator.

4. Inspection/Check Regulator-Aspirator Air Filter Elements

A. Check Air Filter Elements

- (1) Visually check cabin air supply hose, filters, and connections for proper installation, general condition, and security of attachment.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC RESERVOIR RELIEF VALVE - MAINTENANCE PRACTICES

1. General

- A. The reservoir relief valve is located in the overboard vent line downstream of the reservoir air bleed valve at the forward end of the left main gear wheel well.
- B. Access to the reservoir relief valve is through the left main gear inboard door.

2. Removal/Installation Hydraulic Reservoir Relief Valve


A. .Remove Relief Valve

- (1) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (2) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (3) Disconnect overboard vent line from outlet port of relief valve.
- (4) Remove clamp and disconnect relief valve from cross fitting. Discard O-ring.
- (5) Remove fitting from relief valve outlet; retain for use on new valve. Discard O-ring.

B. Install Relief Valve

- (1) Using new O-ring, install fitting in relief valve outlet.
- (2) Using new O-ring, install relief valve on cross fitting.
- (3) Install clamp on relief valve.
- (4) Connect vent line to outlet port of relief valve.
- (5) Pressurize hydraulic system reservoir (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

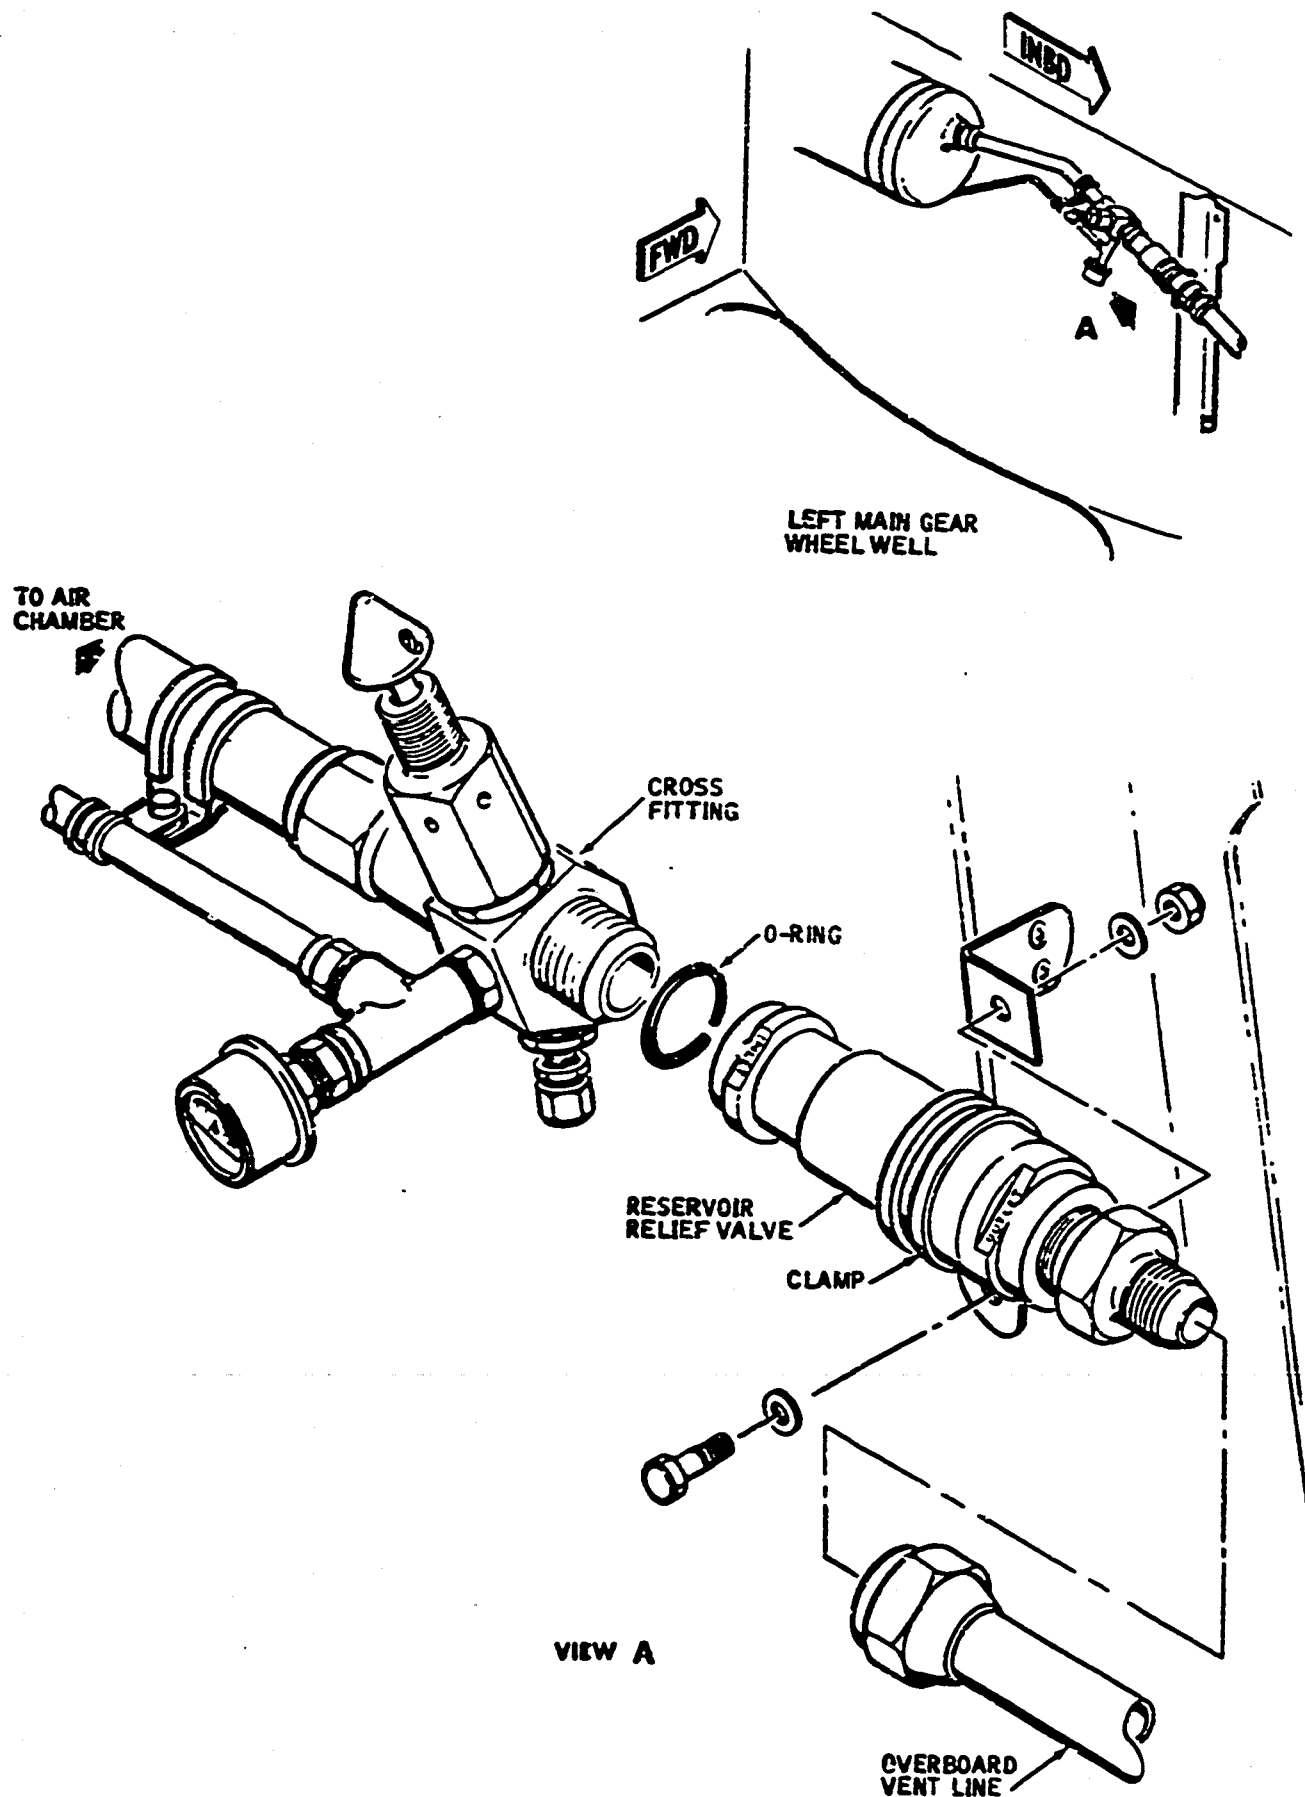

HA2-54

Reservoir Relief Valve -- Installation  
 Figure 201



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

3. Inspection/Check Hydraulic Reservoir Relief Valve

A. Check Relief Valve

- (1) Check hydraulic reservoir relief valve for security of attachment, general condition, and air leaks.

Jun 15/67

Printed in U.S.A.

29-10-6  
CODE 1  
Page 203

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC RESERVOIR RELIEF VALVE - MAINTENANCE PRACTICES

1. General

- A. The 45 psi reservoir relief valve is located in the overboard vent line downstream of the reservoir air bleed valve at the forward end of the left main gear wheel well.
- B. The 60 psi reservoir relief valve is located on a special tee fitting in the A return port of the reservoir return ports manifold.
- C. Access to the 45 psi reservoir relief valve is through the left main gear inboard door.
- D. Access to the 60 psi reservoir relief valve is through the left wing root access door.

2. Removal/Installation Hydraulic Reservoir Relief Valves


A. Remove 45 psi Relief Valve (See Figure 201.)

- (1) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (2) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (3) Disconnect overboard vent line from outlet port of relief valve.
- (4) Remove clamp and disconnect relief valve from cross fitting. Discard O-ring.
- (5) Remove fitting from relief valve outlet; retain for use on new valve. Discard O-ring.

B. Install 45 psi Relief Valve (See Figure 201.)

- (1) Using new O-ring, install fitting in relief valve outlet.
- (2) Using new O-ring, install relief valve on cross fitting.
- (3) Install clamp on relief valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

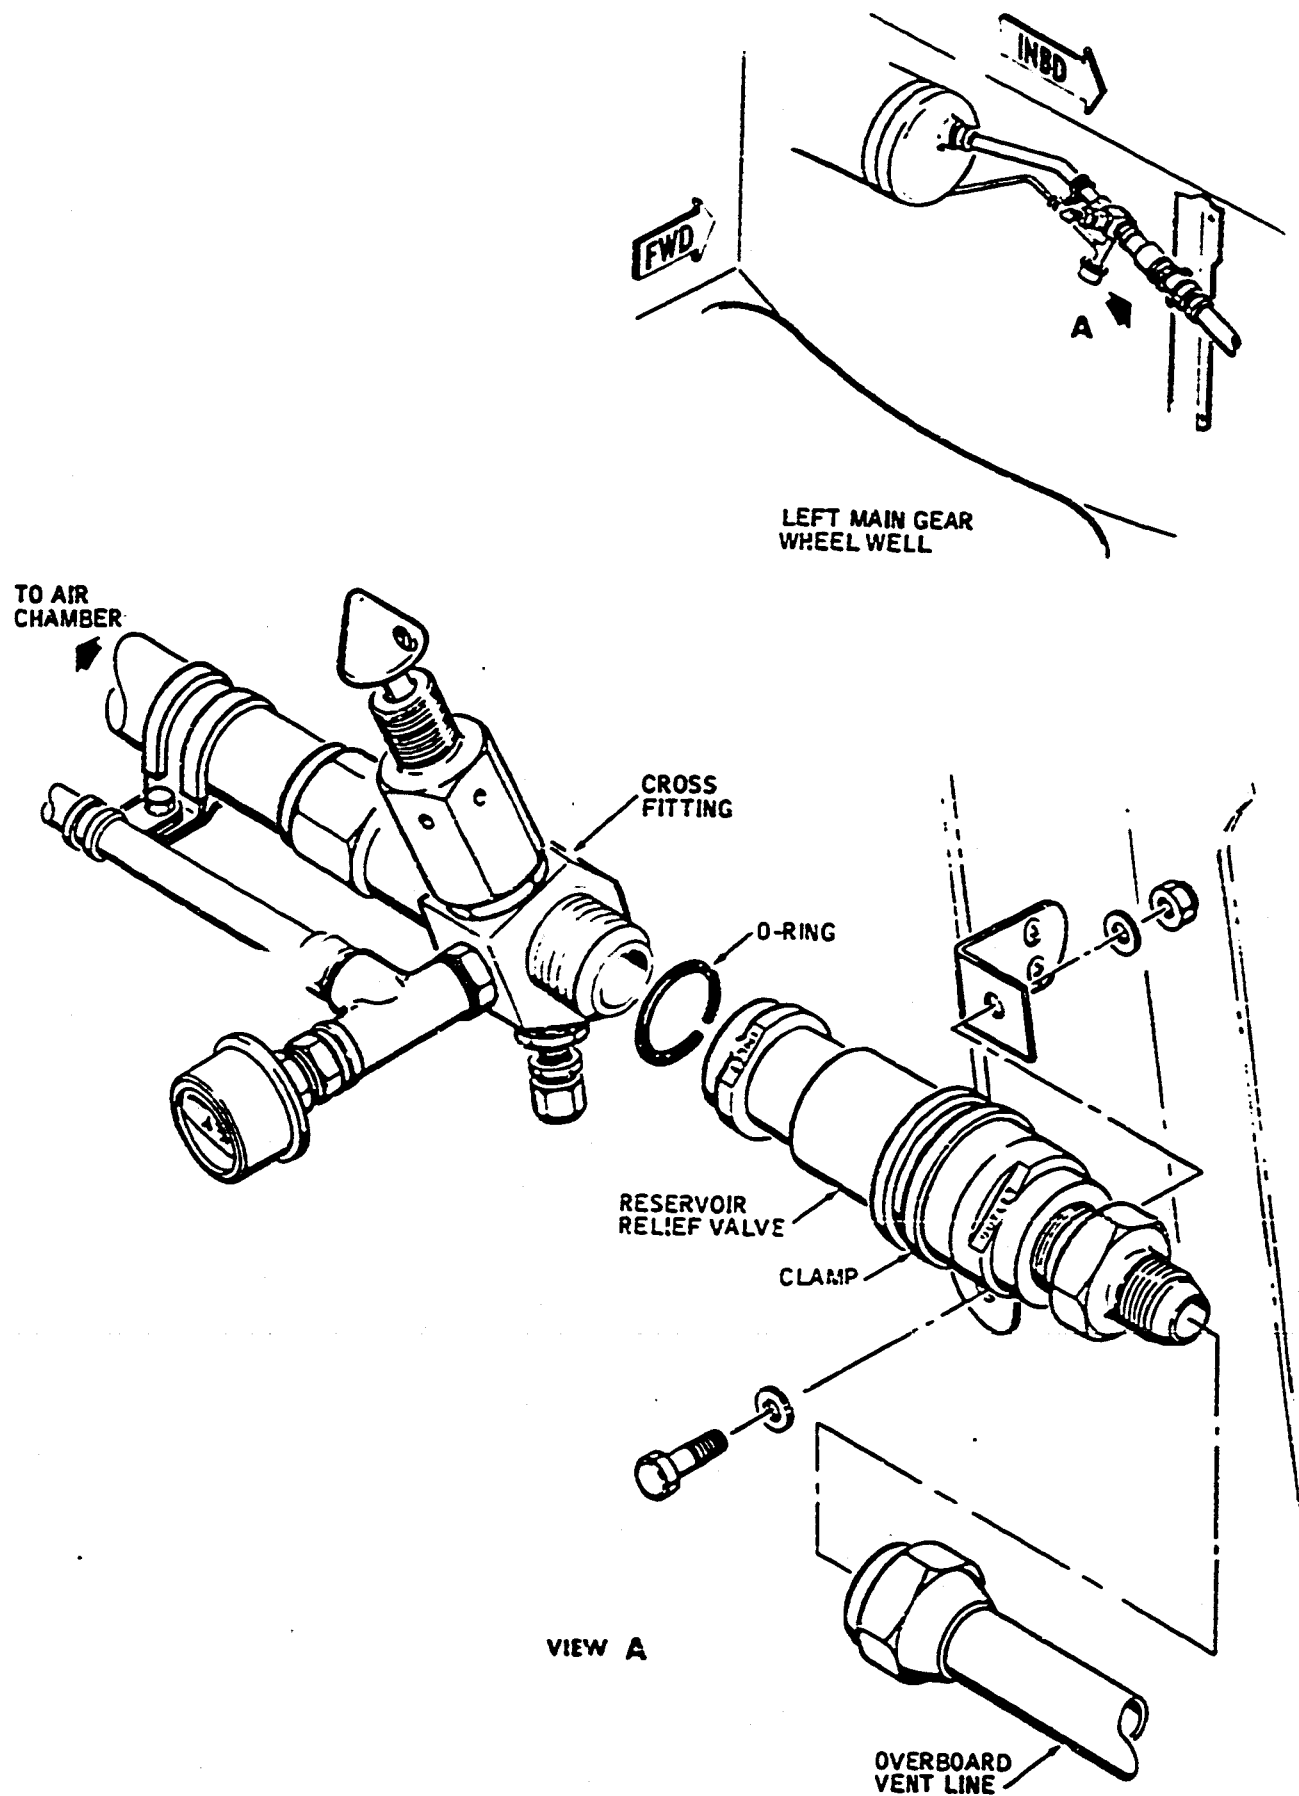

29-10-6  
 CODE 2  
 Page 202

45 PSI Reservoir Relief Valve -- Installation  
 Figure 201

HA2-54

Jan 15/68

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) Connect vent line to outlet port of relief valve.
- (5) Pressurize hydraulic system reservoir (see 29-00, Maintenance Practices).

C. Remove 60 PSI Relief Valve (See Figure 202.)

- (1) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (2) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (3) Drain hydraulic reservoir (see 29-00, Maintenance Practices).
- (4) Disconnect drain line from outlet port of relief valve.
- (5) Remove relief valve.

D. Install 60 PSI Relief Valve (See Figure 202.)


- (1) Using new O-ring, install relief valve on reservoir return ports manifold fitting.
- (2) Using new O-ring, install union in outlet end of relief valve.
- (3) Connect drain line to outlet port of valve.
- (4) Fill hydraulic reservoir (see 29-00 Maintenance Practices).
- (5) Pressurize hydraulic system reservoir (see 29-00, Maintenance Practices).

3. Inspection/Check Hydraulic Reservoir Relief Valves

A. Check Relief Valve

- (1) Check hydraulic reservoir relief valve for security of attachment, general condition, and air leaks.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

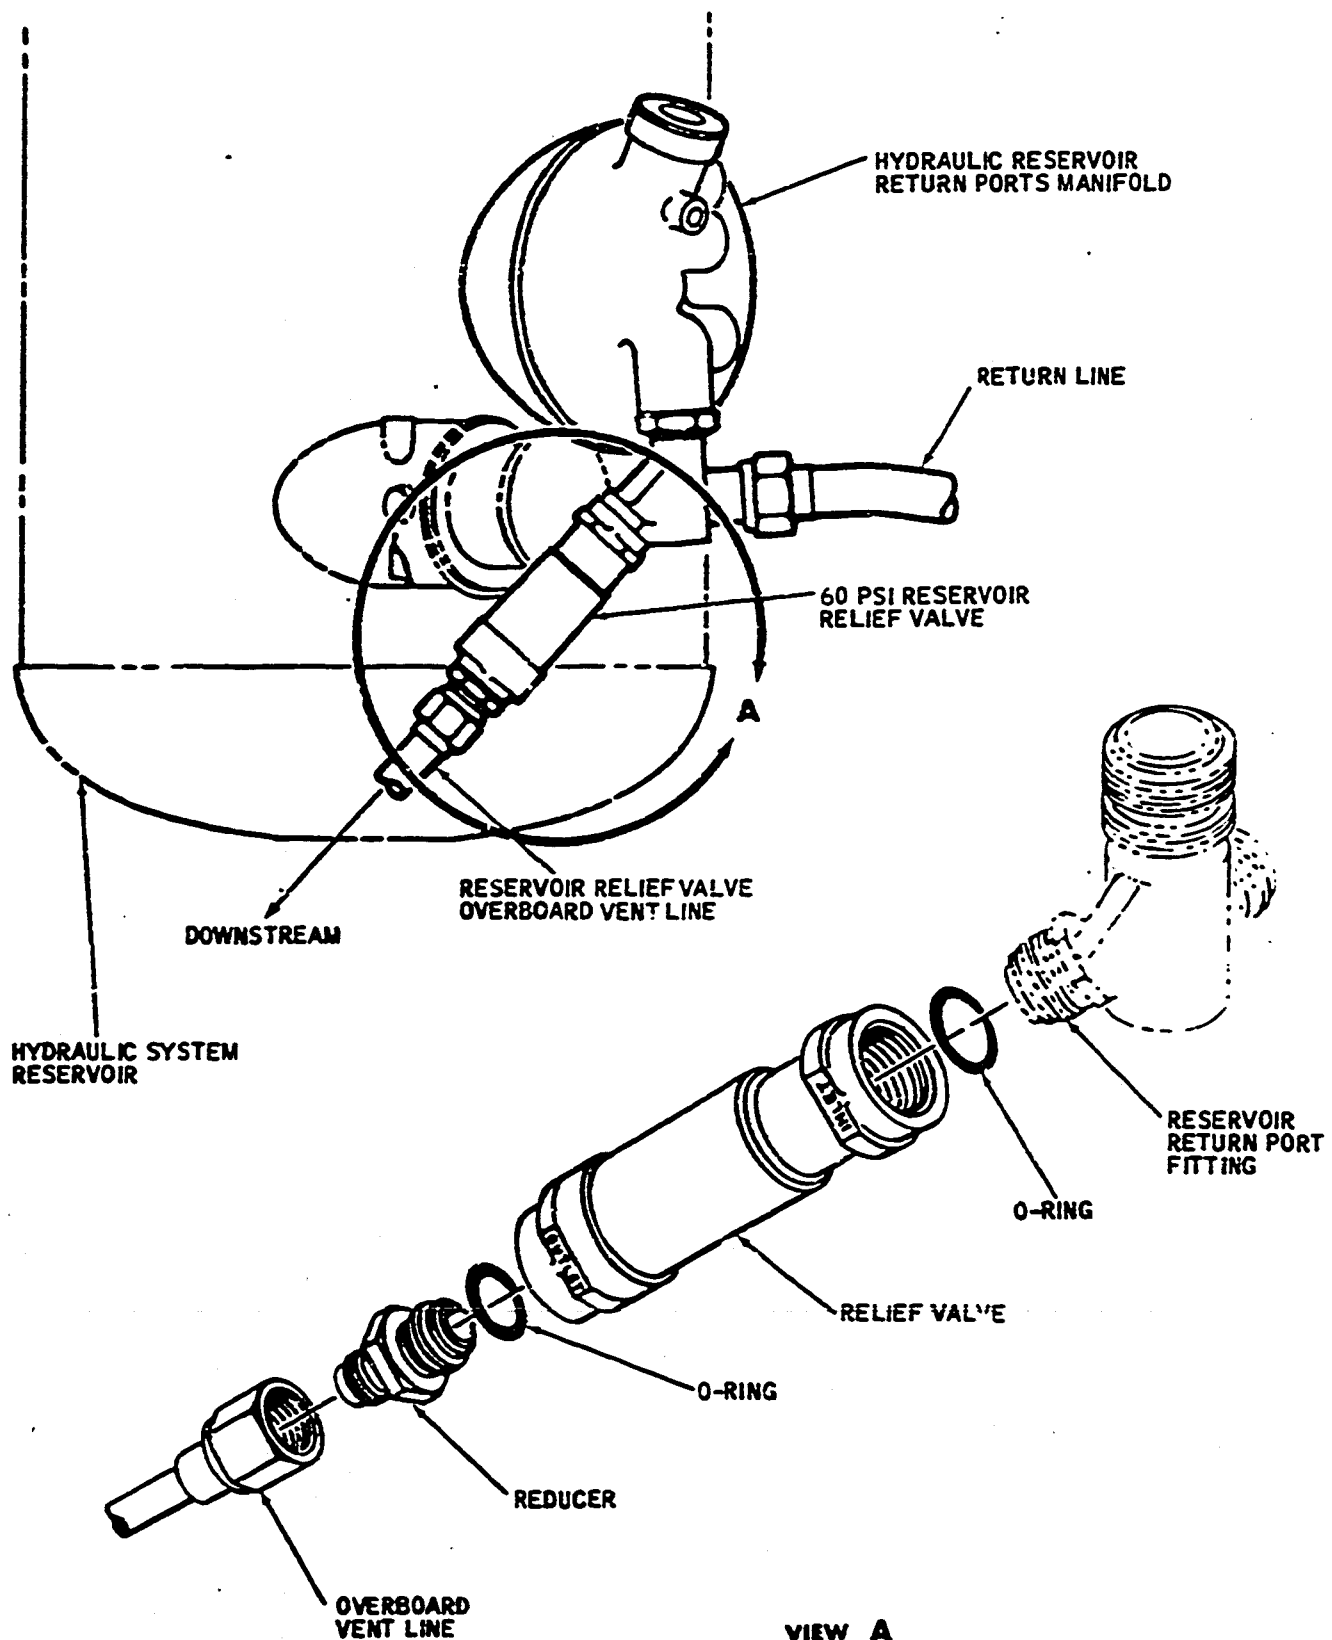

HA2-4660

29-10-6  
 CODE 2  
 Page 204

60 PSI Reservoir Relief Valve -- Installation  
 Figure 202

Printed in U.S.A.

Jan 15/68

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND  
PRESSURE GAGE - MAINTENANCE PRACTICES

1. General

- A. The reservoir air bleed valve, air inflation valve, and pressure gage are all mounted on a cross fitting located inboard of the reservoir air chamber, on the aft face of the rear spar in the left main gear wheel well.
- B. Access to these components is through the left main gear inboard door.

2. Removal/Installation Hydraulic Reservoir Air Bleed Valve,  
Air Inflation Valve, and Pressure Gage

- A. Remove Air Bleed Valve, Air Inflation Valve, and Pressure Gage


NOTE: Either of the valves or the pressure gage may be removed individually without disturbing the other components by performing steps (1) through (3), and then removing the desired components according to step (4), (5), or (6).

- (1) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (2) Relieve reservoir air pressure (see 29-00, Maintenance Practices).
- (3) Remove gage from T-fitting in cross fitting. Discard O-ring.
- (4) Remove bleed valve from cross fitting. Discard O-ring.
- (5) Remove air inflation valve from cross fitting. Discard O-ring.

- B. Install Air Bleed Valve, Air Inflation Valve, and Pressure Gage

- (1) Using new O-ring, install air inflation valve in cross fitting.
- (2) Using new O-ring, install bleed valve in cross fitting.
- (3) Using new O-ring, install gage in tee on cross fitting.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

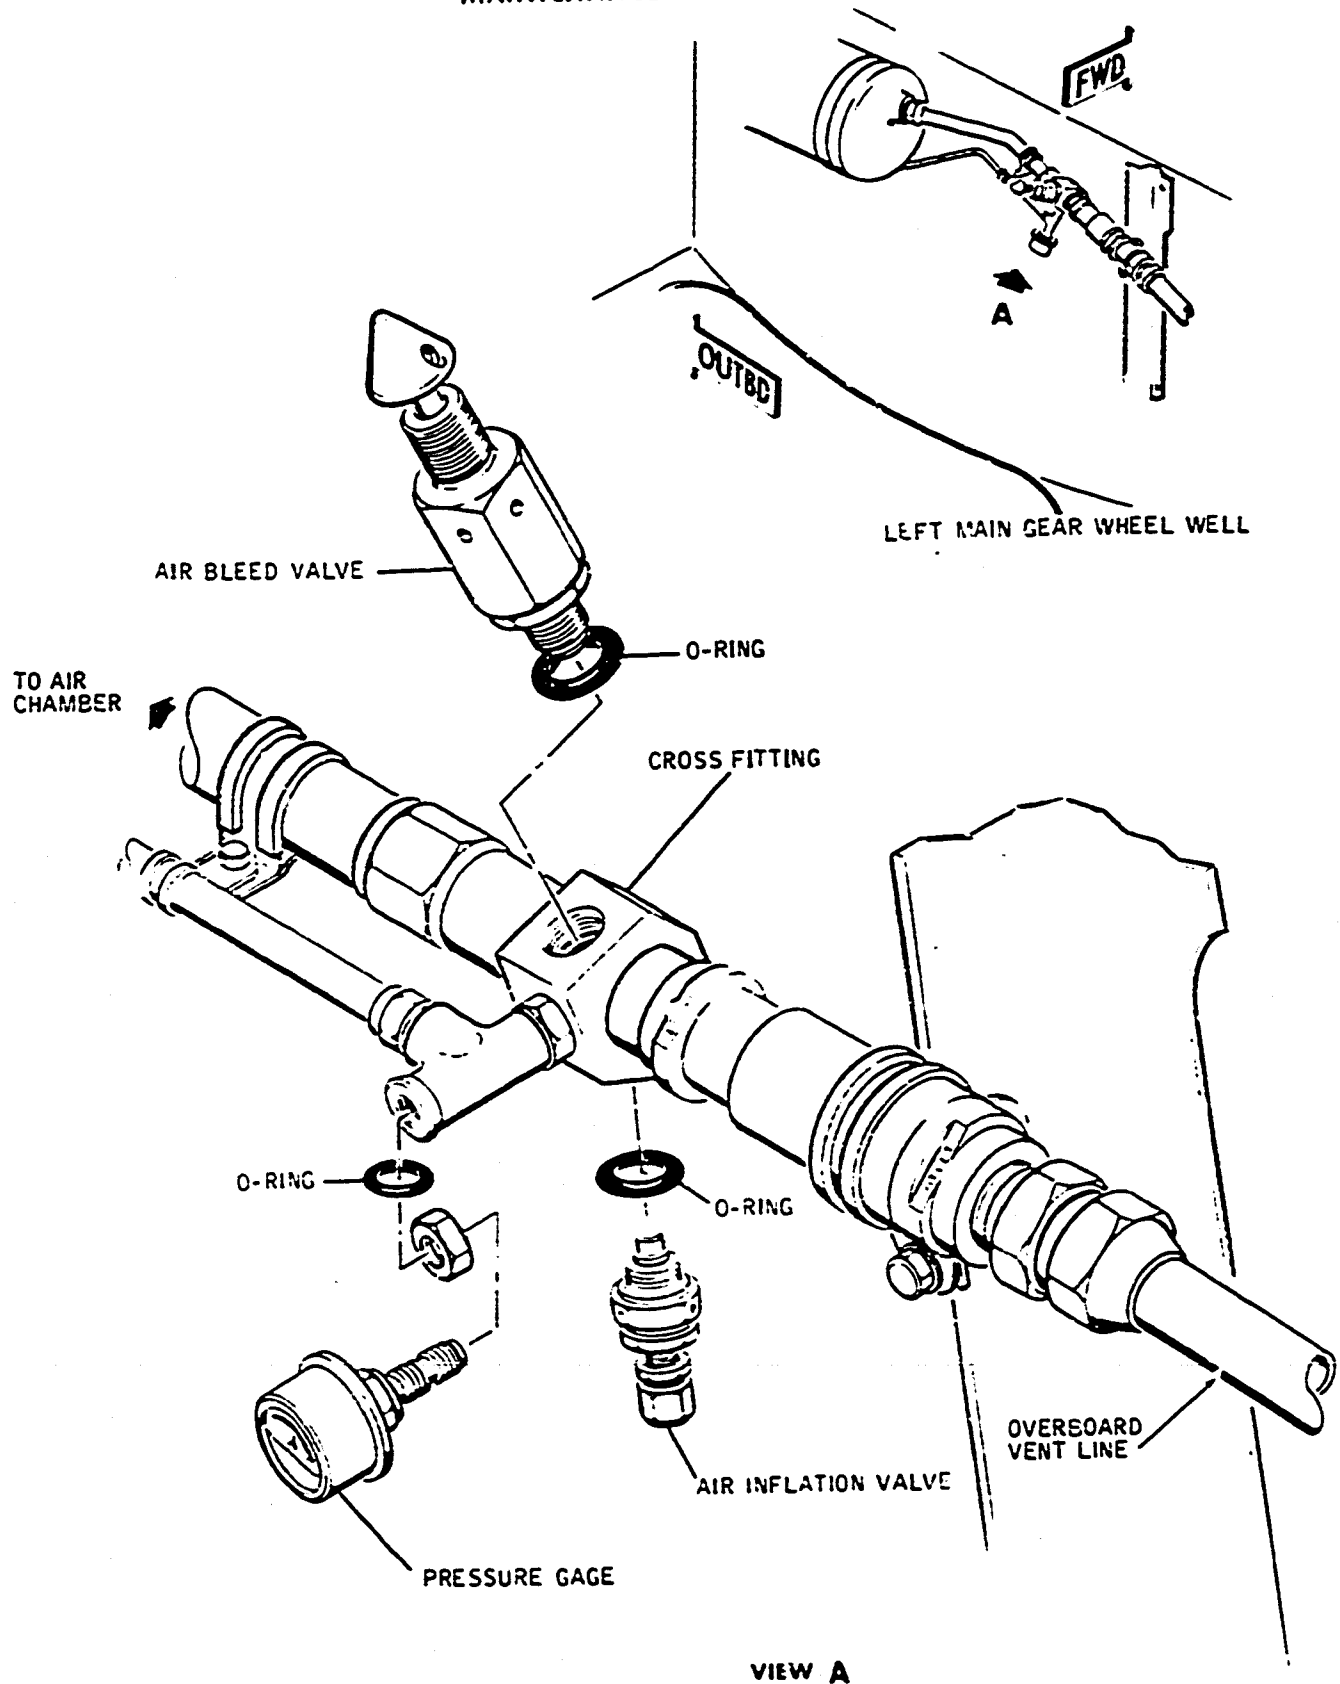

HA2-55

Reservoir Air Bleed Valve, Air Inflation Valve,  
 and Pressure Gage -- Installation  
 Figure 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

3. Inspection/Check Hydraulic Reservoir Air Bleed Valve, Air Inflation Valve, and Pressure Gage

A. Check Air Bleed Valve, Air Inflation Valve, and Pressure Gage

- (1) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).
- (2) Check pressure gage for 30- to 35-psi reading.
- (3) Check air bleed valve, air inflation valve, and pressure gage for air leaks.
- (4) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (5) Depress reservoir air bleed valve button. As air pressure drains off, check gage for zero indication.

NOTE: The clearance between the air bleed valve knob and the aileron cable pressure seal housing should be at least 5/8 inch.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC RESERVOIR AIR BLEED VALVE, AIR INFLATION VALVE, AND  
PRESSURE GAGE - MAINTENANCE PRACTICES

1. General

- A. The reservoir air bleed valve, air inflation valve, and pressure gage are all mounted on a cross fitting located inboard of the reservoir air chamber, on the aft face of the rear spar in the left main gear wheel well.
- B. Access to these components is through the left main gear inboard door.

2. Removal/Installation Hydraulic Reservoir Air Bleed Valve,  
Air Inflation Valve, and Pressure Gage

- A. Remove Air Bleed Valve, Air Inflation Valve, and Pressure Gage


NOTE: Either of the valves or the pressure gage may be removed individually without disturbing the other components by performing steps (1) through (3), and then removing the desired components according to step (4), (5), or (6).

- (1) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (2) Relieve reservoir air pressure (see 29-00, Maintenance Practices).
- (3) Remove gage from T-fitting in cross fitting. Discard O-ring.
- (4) Remove bleed valve from cross fitting. Discard O-ring.
- (5) Remove air inflation valve from cross fitting. Discard O-ring.

- B. Install Air Bleed Valve, Air Inflation Valve, and Pressure Gage

- (1) Using new O-ring, install air inflation valve in cross fitting.
- (2) Using new O-ring, install bleed valve in cross fitting.
- (3) Using new O-ring, install gage in tee on cross fitting.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

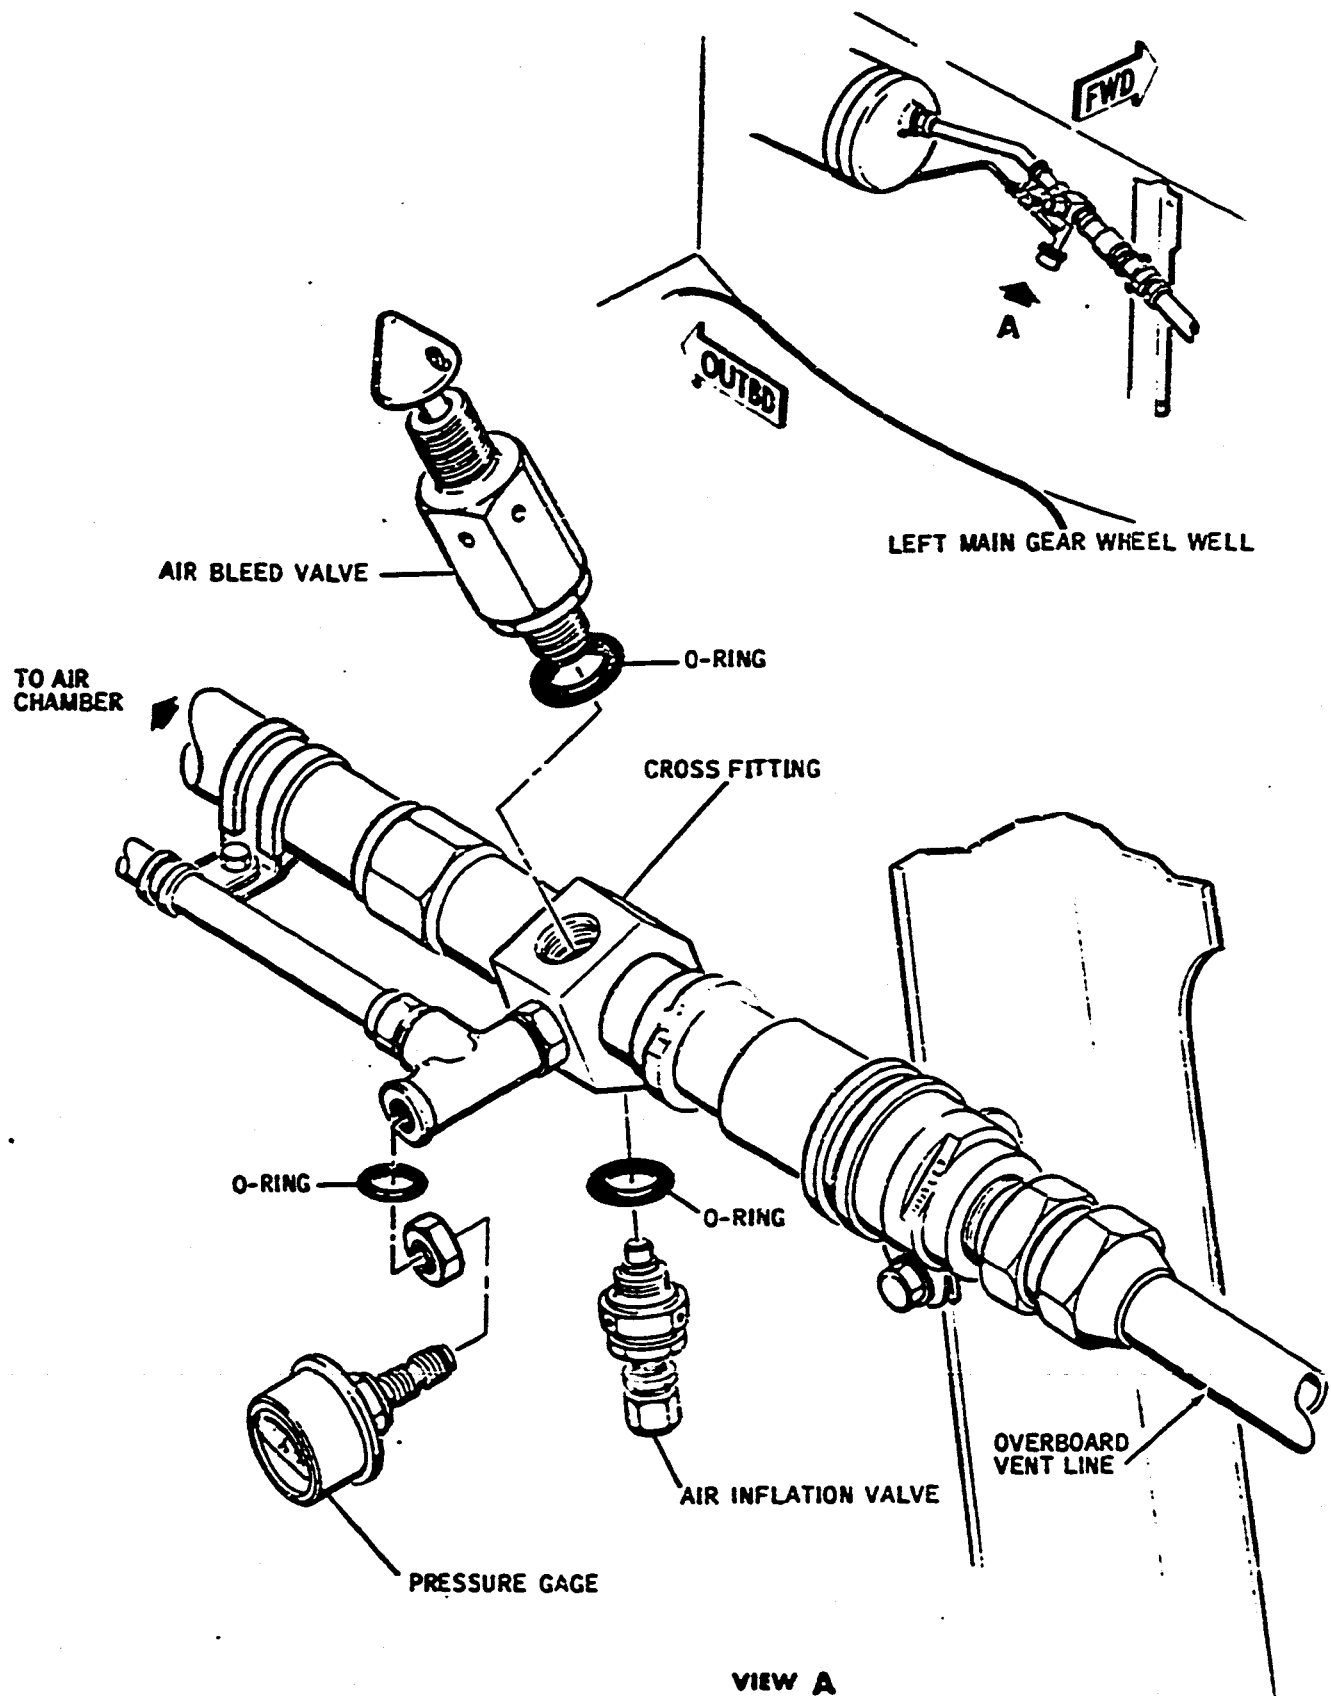

HA2-53

Reservoir Air Bleed Valve, Air Inflation Valve,  
 and Pressure Gage -- Installation  
 Figure 201

29-10-7  
 CODE 2  
 Page 202

Printed in U.S.A.

Jan 15/68

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

3. Inspection/Check Hydraulic Reservoir Air Bleed Valve, Air Inflation Valve, and Pressure Gage

A. Check Air Bleed Valve, Air Inflation Valve, and Pressure Gage

- (1) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).
- (2) Check pressure gage for 35 to 40 psi on airplanes 801-815 or 30 to 35 psi on airplanes 816-822 and 860 and subsequent.
- (3) Check air bleed valve, air inflation valve, and pressure gage for air leaks.
- (4) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (5) Depress reservoir air bleed valve button. As air pressure drains off, check gage for zero indication.

NOTE: The clearance between the air bleed valve knob and the aileron cable pressure seal housing should be at least 5/8 inch.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC RESERVOIR VACUUM BREAKER CHECK  
VALVE - MAINTENANCE PRACTICES

1. General

- A. The vacuum breaker check valve is located on the top side of the hydraulic system reservoir.
- B. Access to the vacuum breaker check valve is through the left wing root access door.

2. Removal/Installation Hydraulic Reservoir Breaker Check Valve

A. Remove Vacuum Breaker Check Valve

- (1) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (2) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (3) Disconnect ambient air vent line from inlet port of vacuum breaker check valve; retain short section of line.
- (4) Disconnect line between vacuum breaker and reservoir vent port T-fitting.
- (5) Loosen mounting clamp and remove vacuum breaker check valve.

B. Install Vacuum Breaker Check Valve

- (1) Install vacuum breaker check valve in mounting clamp and tighten clamp.
- (2) Connect reservoir vent port line to vacuum breaker.
- (3) Connect ambient air vent line to vacuum breaker.

CAUTION: MAKE CERTAIN THAT THE VACUUM BREAKER CHECK VALVE IS INSTALLED WITH THE ARROW POINTING TOWARD THE RESERVOIR VENT PORT LINE.


- (4) Pressurize hydraulic reservoir (see 29-00).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

3. Inspection/Check Hydraulic Reservoir Vacuum Breaker Check Valve

A. Check Vacuum Breaker Check Valve

- (1) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).
- (2) Check vacuum breaker check valve for air leaks at line connection from reservoir and at open end of ambient vent line.
- (3) Check valve for proper installation and general condition.

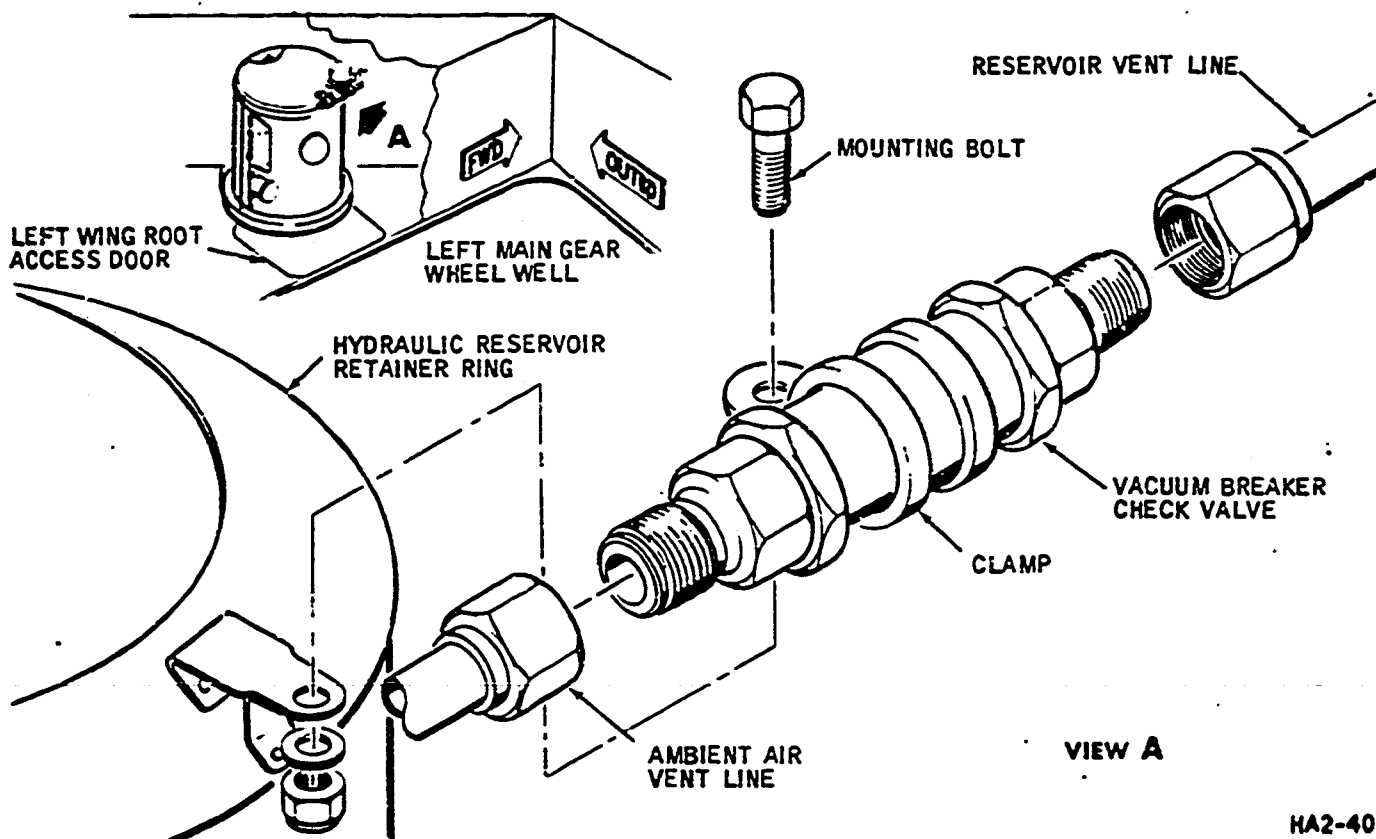

HA2-40

Hydraulic Reservoir Vacuum Breaker Check  
Valve -- Installation  
Figure 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC RESERVOIR AIR CHAMBER - MAINTENANCE PRACTICES

1. General

- A. The hydraulic reservoir air chamber is located in the forward area of the left main gear wheel well just outboard of the reservoir air bleed valve and air inflation valve.
- B. Access to the hydraulic reservoir air chamber is through the left main gear inboard door.

2. Removal/Installation Hydraulic Reservoir Air Chamber


A. Remove Air Chamber

- (1) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (2) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (3) Disconnect lines from inlet and outlet ports of air chamber.
- (4) Open clamps securing air chamber to support brackets and remove air chamber.
- (5) Remove fittings from both ports and retain for use in new unit. Discard O-rings.

B. Install Air Chamber

- (1) Using new O-rings, install fittings in inlet and outlet ports of air chamber.
- (2) Install air chamber and connect clamps to secure chamber to support brackets.
- (3) Connect lines to inlet and outlet ports of air chamber.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

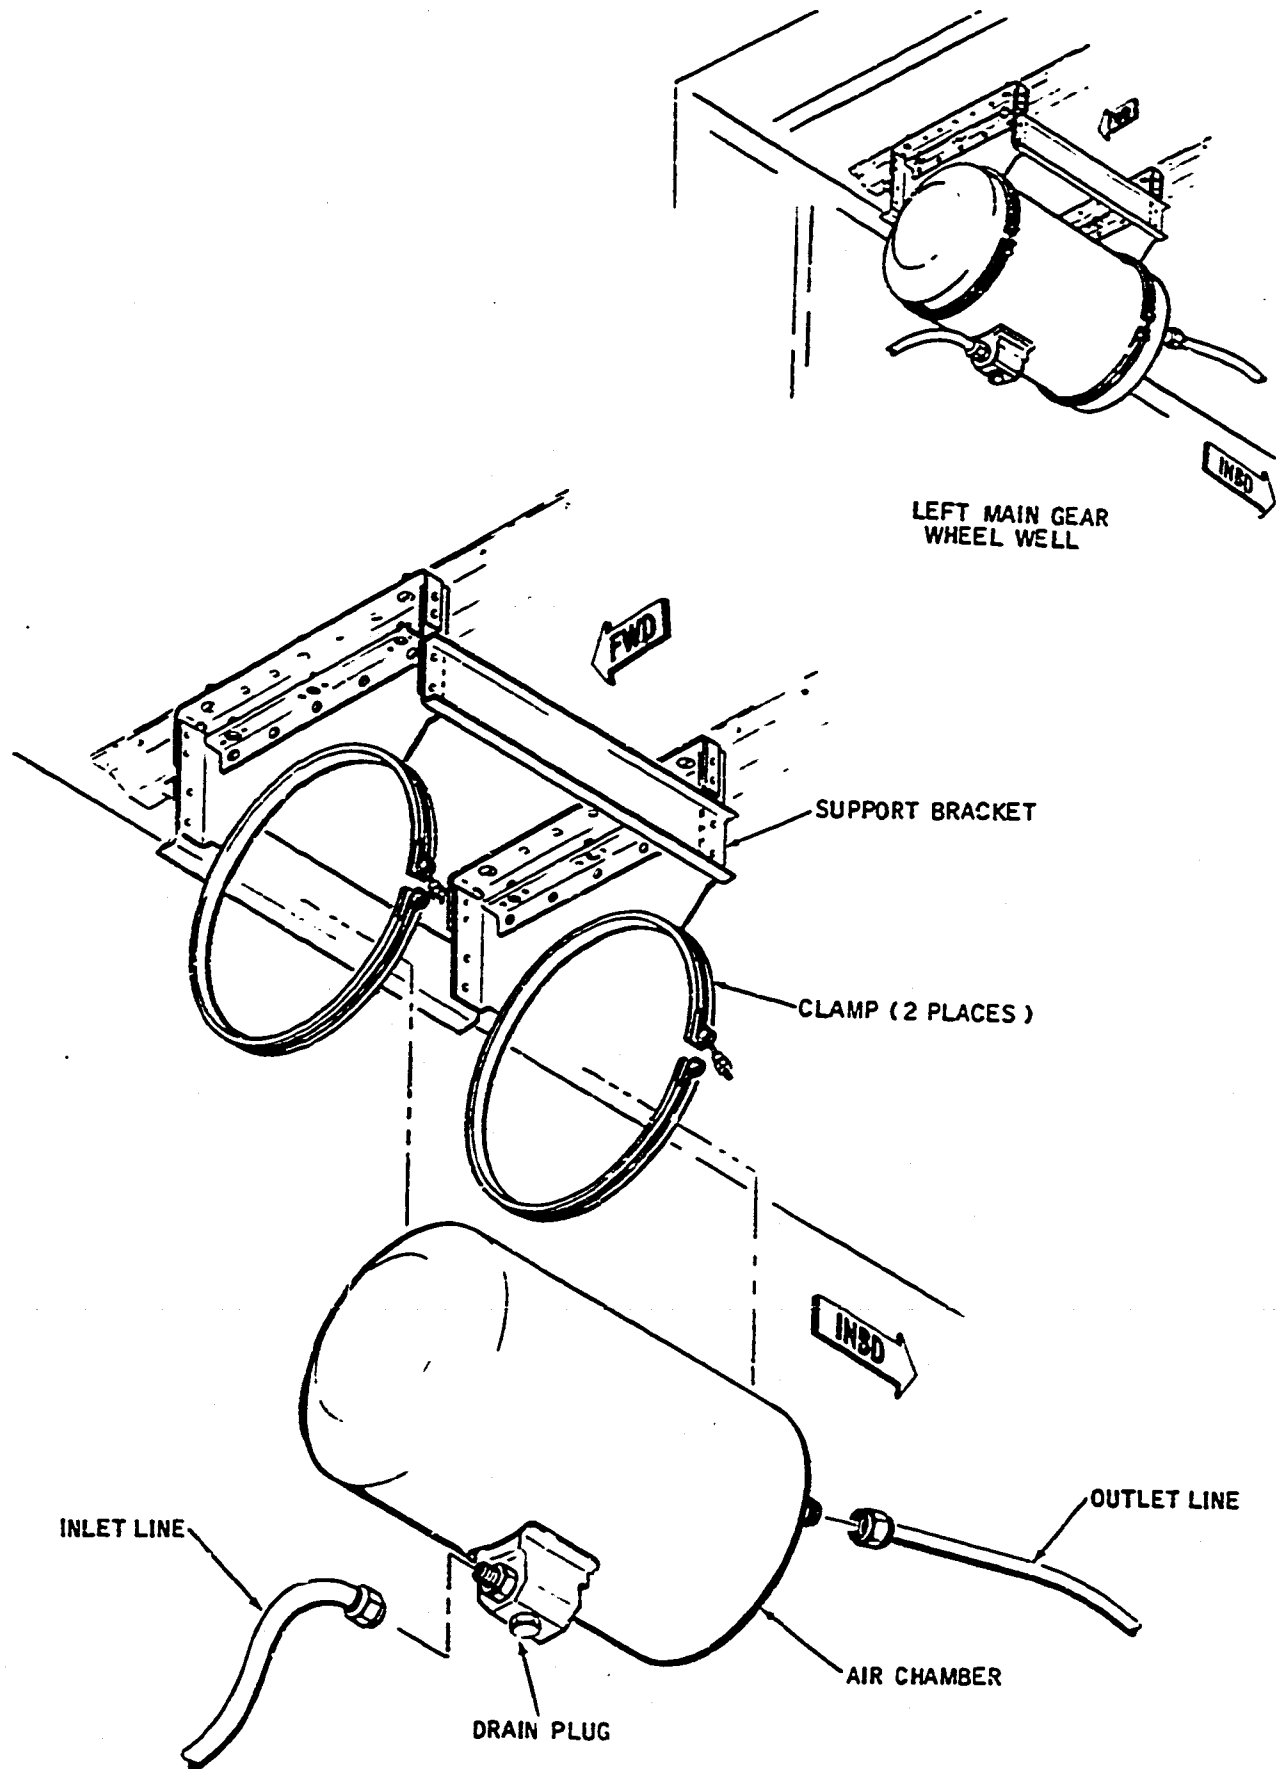

HA2-84A

Hydraulic Reservoir Air Chamber -- Installation  
Figure 201

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

3. Inspection/Check Hydraulic Reservoir Air Chamber

A. Check Air Chamber

- (1) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).
- (2) Check air chamber, lines and fittings for general condition, security of attachment, clearance, and leaks.



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC RESERVOIR RETURN PORT B CHECK

VALVE - MAINTENANCE PRACTICES

1. General

- A. The hydraulic reservoir return port B check valve is installed in return port B of the hydraulic system reservoir return ports manifold.
- B. Access to return port B check valve is through the left wing root access door.

2. Removal/Installation Hydraulic Reservoir Return Port B Check Valve

A. Remove Return Port B Check Valve

- (1) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (2) Relieve reservoir air pressure (see 29-00, Maintenance Practices).
- (3) Relieve brake accumulator pressure by applying brakes 6 times minimum.
- (4) Drain hydraulic system reservoir (see 29-00, Maintenance Practices).
- (5) Disconnect line from return port B check valve.
- (6) Remove check valve from port B.

B. Install Return Port B Check Valve

- (1) Using new O-ring, install check valve in return port B.

CAUTION: FLOW ARROW ON CHECK VALVE MUST POINT TOWARD RESERVOIR.


- (2) Connect line to check valve.
- (3) Fill hydraulic system reservoir (see instruction placard on reservoir).
- (4) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

3. Inspection/Check Hydraulic Reservoir Return Port B Check Valve

A. Check Return Port B Check Valve

- (1) Check return port B check valve for proper installation and fluid leaks.

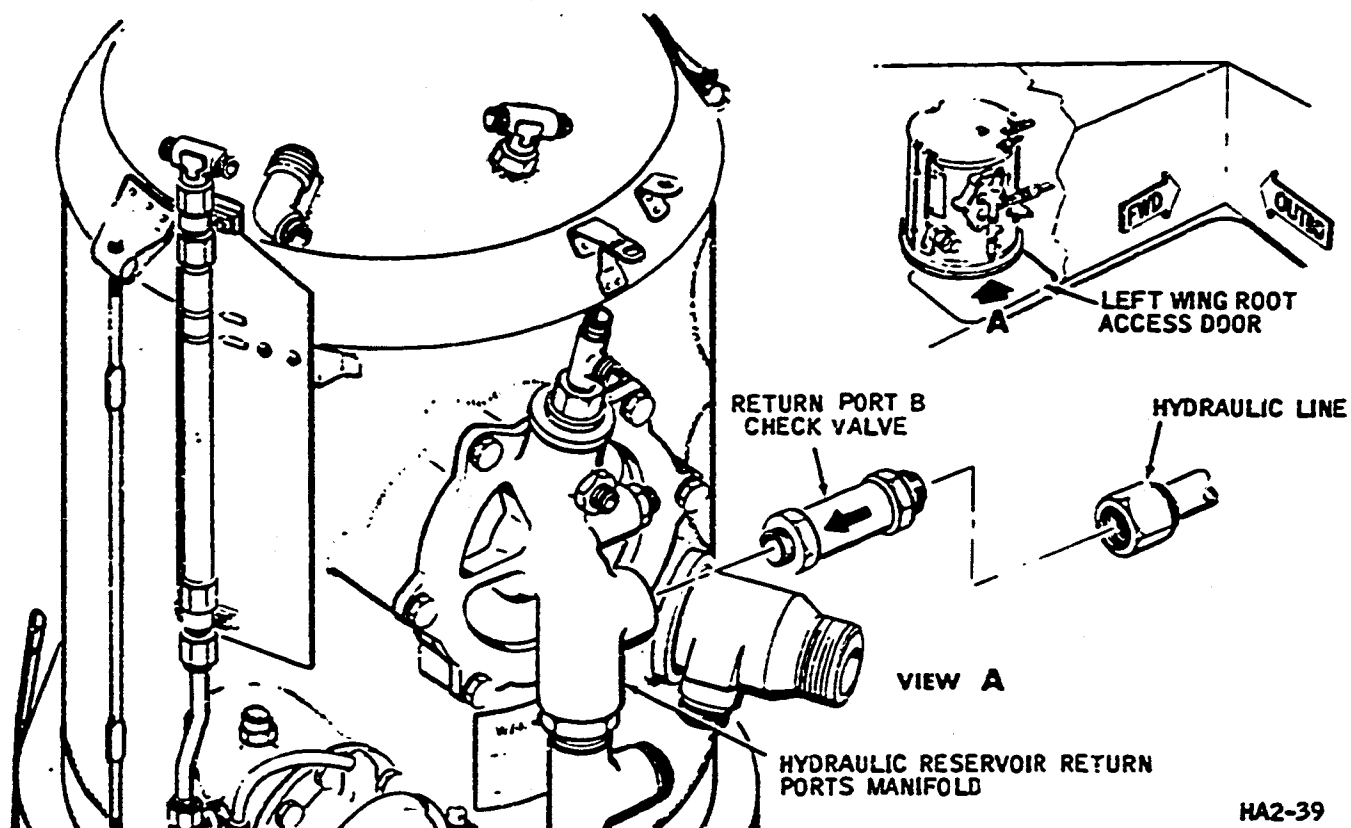

Hydraulic Reservoir Return Port B  
Check Valve -- Installation  
Figure 201

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC RESERVOIR RETURN PORT B CHECK  
VALVE - MAINTENANCE PRACTICES

1. General

- A. The hydraulic reservoir return port B check valve is installed in return port B of the hydraulic system reservoir return ports manifold.
- B. Access to return port B check valve is through the left wing root access door.

2. Removal/Installation Hydraulic Reservoir Return Port B Check Valve

A. Remove Return Port B Check Valve

- (1) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (2) Relieve reservoir air pressure (see 29-00, Maintenance Practices).
- (3) Relieve brake accumulator pressure by applying brakes 6 times minimum.
- (4) Drain hydraulic system reservoir (see 29-00, Maintenance Practices).
- (5) Disconnect line from return port B check valve.
- (6) Remove check valve from port B.

B. Install Return Port B Check Valve

- (1) Using new O-ring, install check valve in return port B.

CAUTION: FLOW ARROW ON CHECK VALVE MUST POINT TOWARD RESERVOIR.


- (2) Connect line to check valve.
- (3) Fill hydraulic system reservoir (see instruction placard on reservoir).
- (4) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

3. Inspection/Check Hydraulic Reservoir Return Port B Check Valve

A. Check Return Port B Check Valve

- (1) Check return port B check valve for proper installation and fluid leaks.

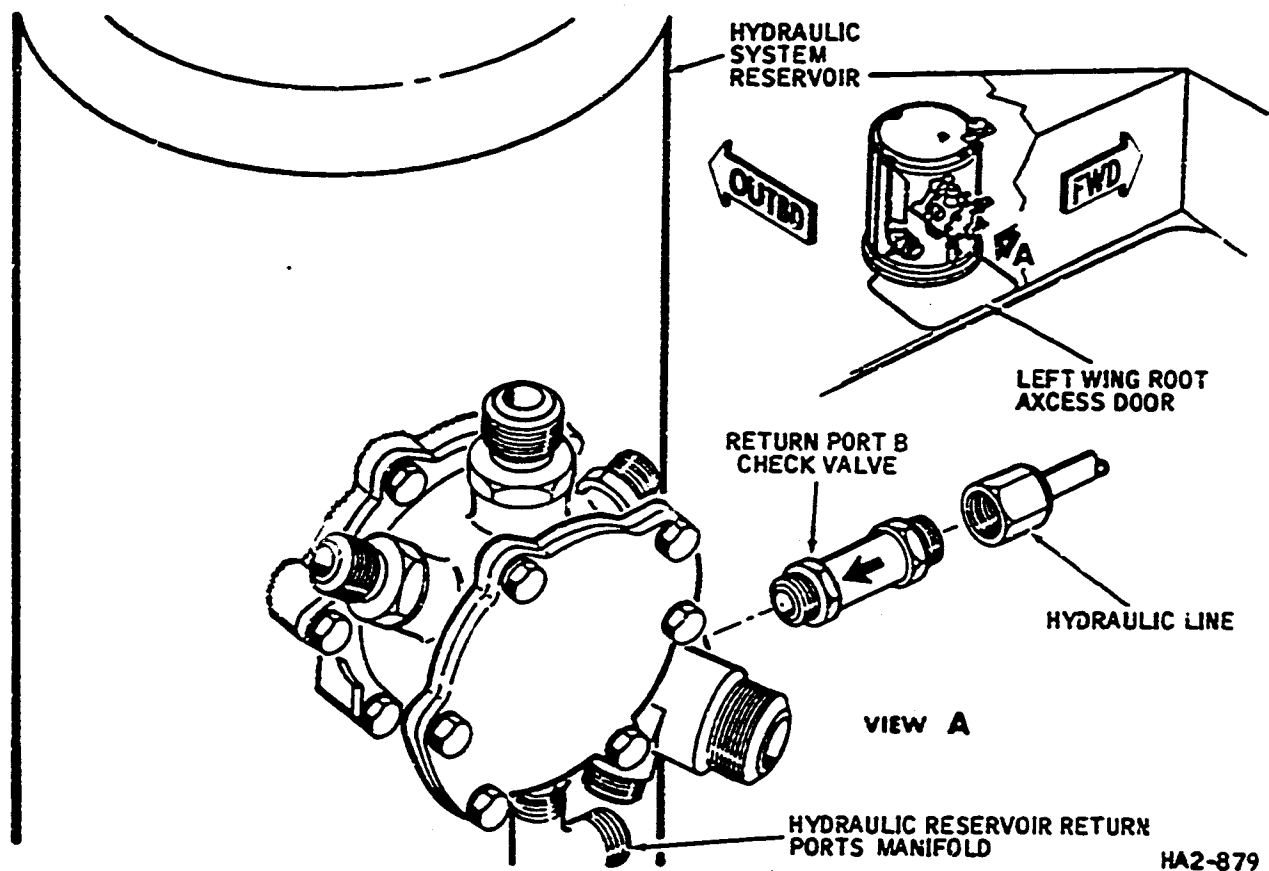

Hydraulic Reservoir Return Port B  
Check Valve -- Installation  
Figure 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

ENGINE HYDRAULIC FIRE SHUTOFF VALVE - MAINTENANCE PRACTICES

1. General

- A. The two engine hydraulic fire shutoff valves are located in the wing leading edge, one valve aft of the firewall of each inboard pylon.
- B. Access to the valves is through access doors located on the lower side of the wing leading edge, outboard of either the left or right inboard pylon. The valves are located inboard of the access door.
- C. The removal/installation and inspection/check procedures for the left or right fire shutoff valves are identical. Maintenance practices concerning the fire shutoff valve cable system are covered in Chapter 76.

2. Removal/Installation Engine Hydraulic Fire Shutoff Valves

A. Remove Fire Shutoff Valve

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.



WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Loosen turnbuckles, located in wing leading edge inboard of inboard pylons (see Chapter 76).
- (5) Remove nut and washer attaching cable drum to locking hub on hydraulic fire shutoff valve and remove cable drum from hub.
- (6) Disconnect hydraulic lines from inlet and outlet ports of valve.
- (7) Remove valve.
- (8) Remove cable guard attached to valve.

B. Install Fire Shutoff Valve

- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 is open.
- (2) Check fire shutoff valve for condition and operation.
- (3) Install cable guard on valve.
- (4) Install valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

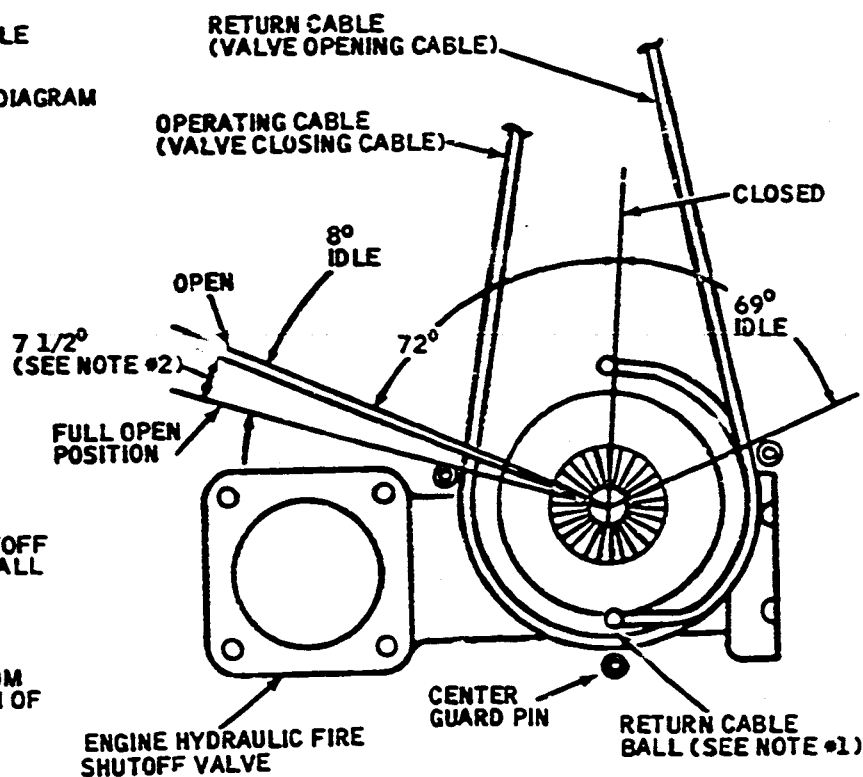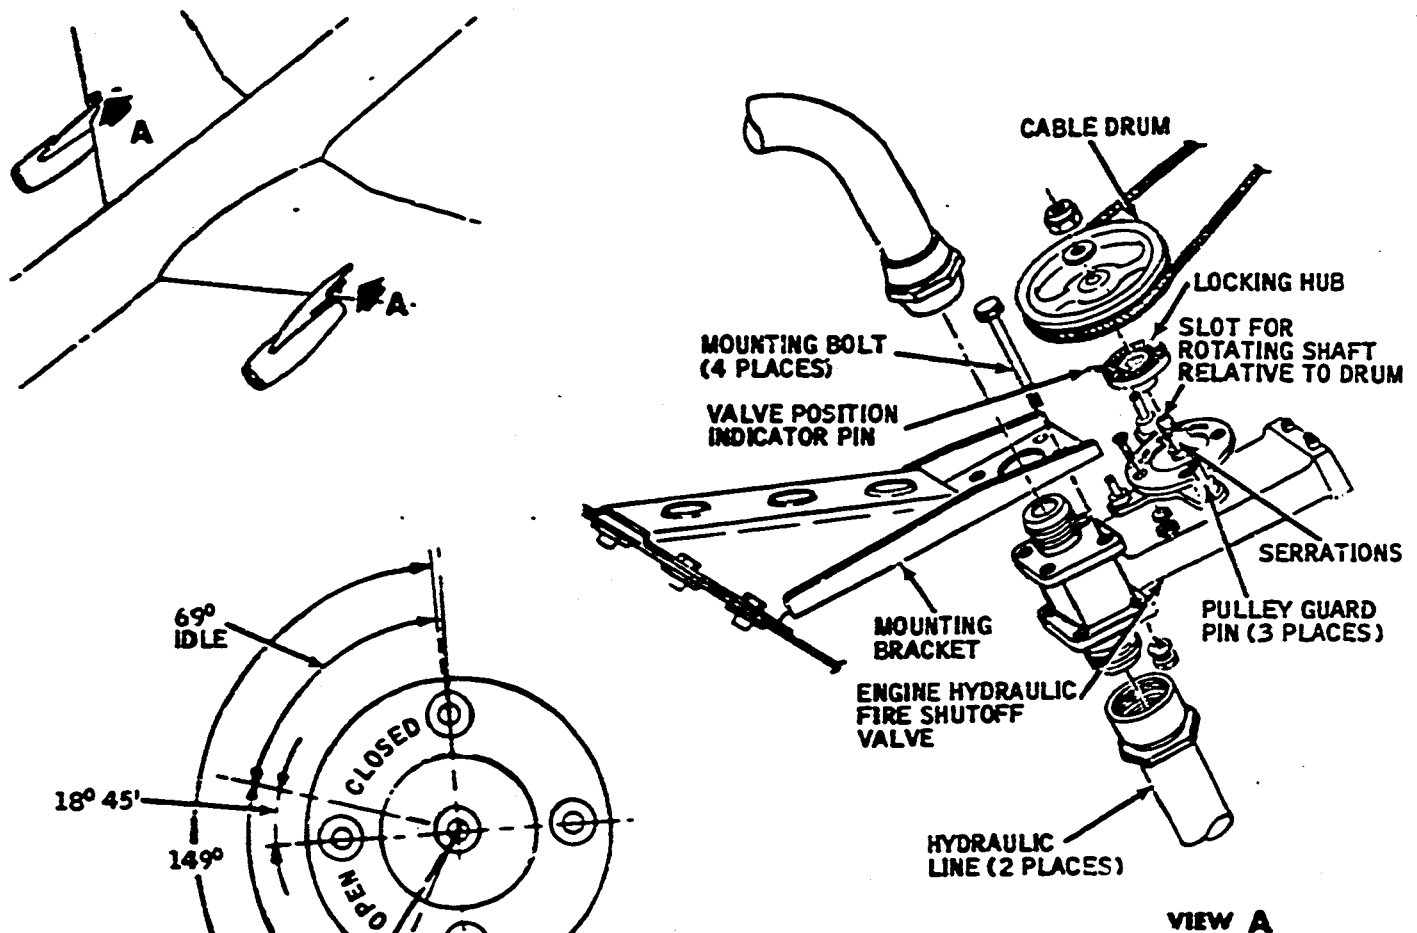

**GENERAL NOTES:**

1. ON ENGINE HYDRAULIC FIRE SHUTOFF VALVE LOCATE RETURN CABLE BALL TERMINAL OPPOSITE CENTER GUARD PIN WITHIN 5 DEGREES
2. WHEN ENGAGING SERRATIONS ROTATE VALVE SHAFT AWAY FROM FULL OPEN POSITION A MAXIMUM OF 1 SERRATION IF NECESSARY TO PREVENT PRE-LOADING VALVE.

Engine Hydraulic Fire Shutoff  
 Valve -- Installation  
 Figure 201

HA2-78

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Connect hydraulic lines to inlet and outlet ports of valve.
- (6) Make certain that applicable fire control handle is in normal (open) position and insert rig pin in wing inboard transition drum (see Chapter 76).
- (7) Install cable drum on valve shaft and partially tighten attaching nut. Do not engage serrations in cable drum with serrations in locking hub.
- (8) Differentially adjust turnbuckles to place ball end of return cable opposite center guard pin in guard within  $\pm 5$  degrees. Adjust cables to tension as specified in cable tension chart (see 29-10-0, Figure 502).
- (9) Tighten cable drum attaching nut with valve in full open position.

CAUTION: DO NOT PRELOAD VALVE AGAINST STOP.

NOTE: The locking hub on the engine hydraulic fire shutoff valve can be rotated a maximum of 7 1/2 degrees (one serration) from the full-open position to mesh the serrations in the cable drum with the serrations in the locking hub.

- (10) Safety turnbuckles with lockwire and remove rig pin from transition drum.
- (11) Close auxiliary hydraulic pump control circuit breaker.

3. Inspection/Check Engine Hydraulic Fire Shutoff Valve

A. Check Fire Shutoff Valve

- (1) Place fire control handle in fuel, air, and hydraulic off position.
- (2) Disconnect hydraulic pressure and supply hoses at applicable inboard pylon firewall.
- (3) Connect hydraulic test stand pressure and supply hoses to firewall connections.
- (4) Place fire control handle in normal position.
- (5) Pressurize hydraulic system with test stand set at full flow (20 gpm) (see 29-00, Maintenance Practices).
- (6) Place fire control handle in fuel, air, and hydraulic off position. Hydraulic fluid flow through fire shutoff valve should stop.

CAUTION: DO NOT RUN TEST STAND PUMP FOR MORE THAN 30 SECONDS WITH FIRE SHUTOFF VALVE CLOSED.

- (7) Place fire control handle in normal position. Fluid flow should resume.

Nov 1/69

29-10-11  
CODE 1  
Page 203

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) Shut off hydraulic test stand.
- (9) Place fire control handle in fuel, air, and hydraulic off position.
- (10) Disconnect test stand pressure and supply hoses from firewall connections.
- (11) Connect engine pump hoses to firewall connections.
- (12) With fire control handles in fuel, air, and hydraulic off position, indicators on valves should be in overtravel range.
- (13) Place fire control handles in normal position, check that indicators on valves are in pretravel range.
- (14) Reset generator (see Chapter 24).
- (15) Check lines and fittings to fire shutoff valves for security of attachment and leaks.
- (16) Check cable drum and cables for security of attachment, wear, and corrosion.
- (17) Check that cable turnbuckles are properly lockwired.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

ENGINE HYDRAULIC FIRE SHUTOFF VALVE - MAINTENANCE PRACTICES

1. General

- A. The two engine hydraulic fire shutoff valves are located in the wing leading edge, one valve aft of the firewall of each inboard pylon.
- B. Access to the valves is through access doors located on the lower side of the wing leading edge, outboard of either the left or right inboard pylon. The valves are located inboard of the access door.
- C. The removal/installation and inspection/check procedures for the left or right fire shutoff valves are identical. Maintenance practices concerning the fire shutoff valve cable system are covered in Chapter 76.

2. Removal/Installation Engine Hydraulic Fire Shutoff Valves

A. Remove Fire Shutoff Valve

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Loosen turnbuckles, located in wing leading edge inboard or inboard pylons (see Chapter 76).
- (5) Remove nut and washer attaching cable drum to locking hub on hydraulic fire shutoff valve and remove cable drum from hub.
- (6) Disconnect hydraulic lines from inlet and outlet ports of valve.
- (7) Remove valve.
- (8) Remove cable guard attached to valve.

B. Install Fire Shutoff Valve


- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel is open.
- (2) Check fire shutoff valve for condition and operation.
- (3) Install cable guard on valve.
- (4) Install valve.

Jun 15/67

Printed in U.S.A.

29-10-11  
CODE 2  
Page 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

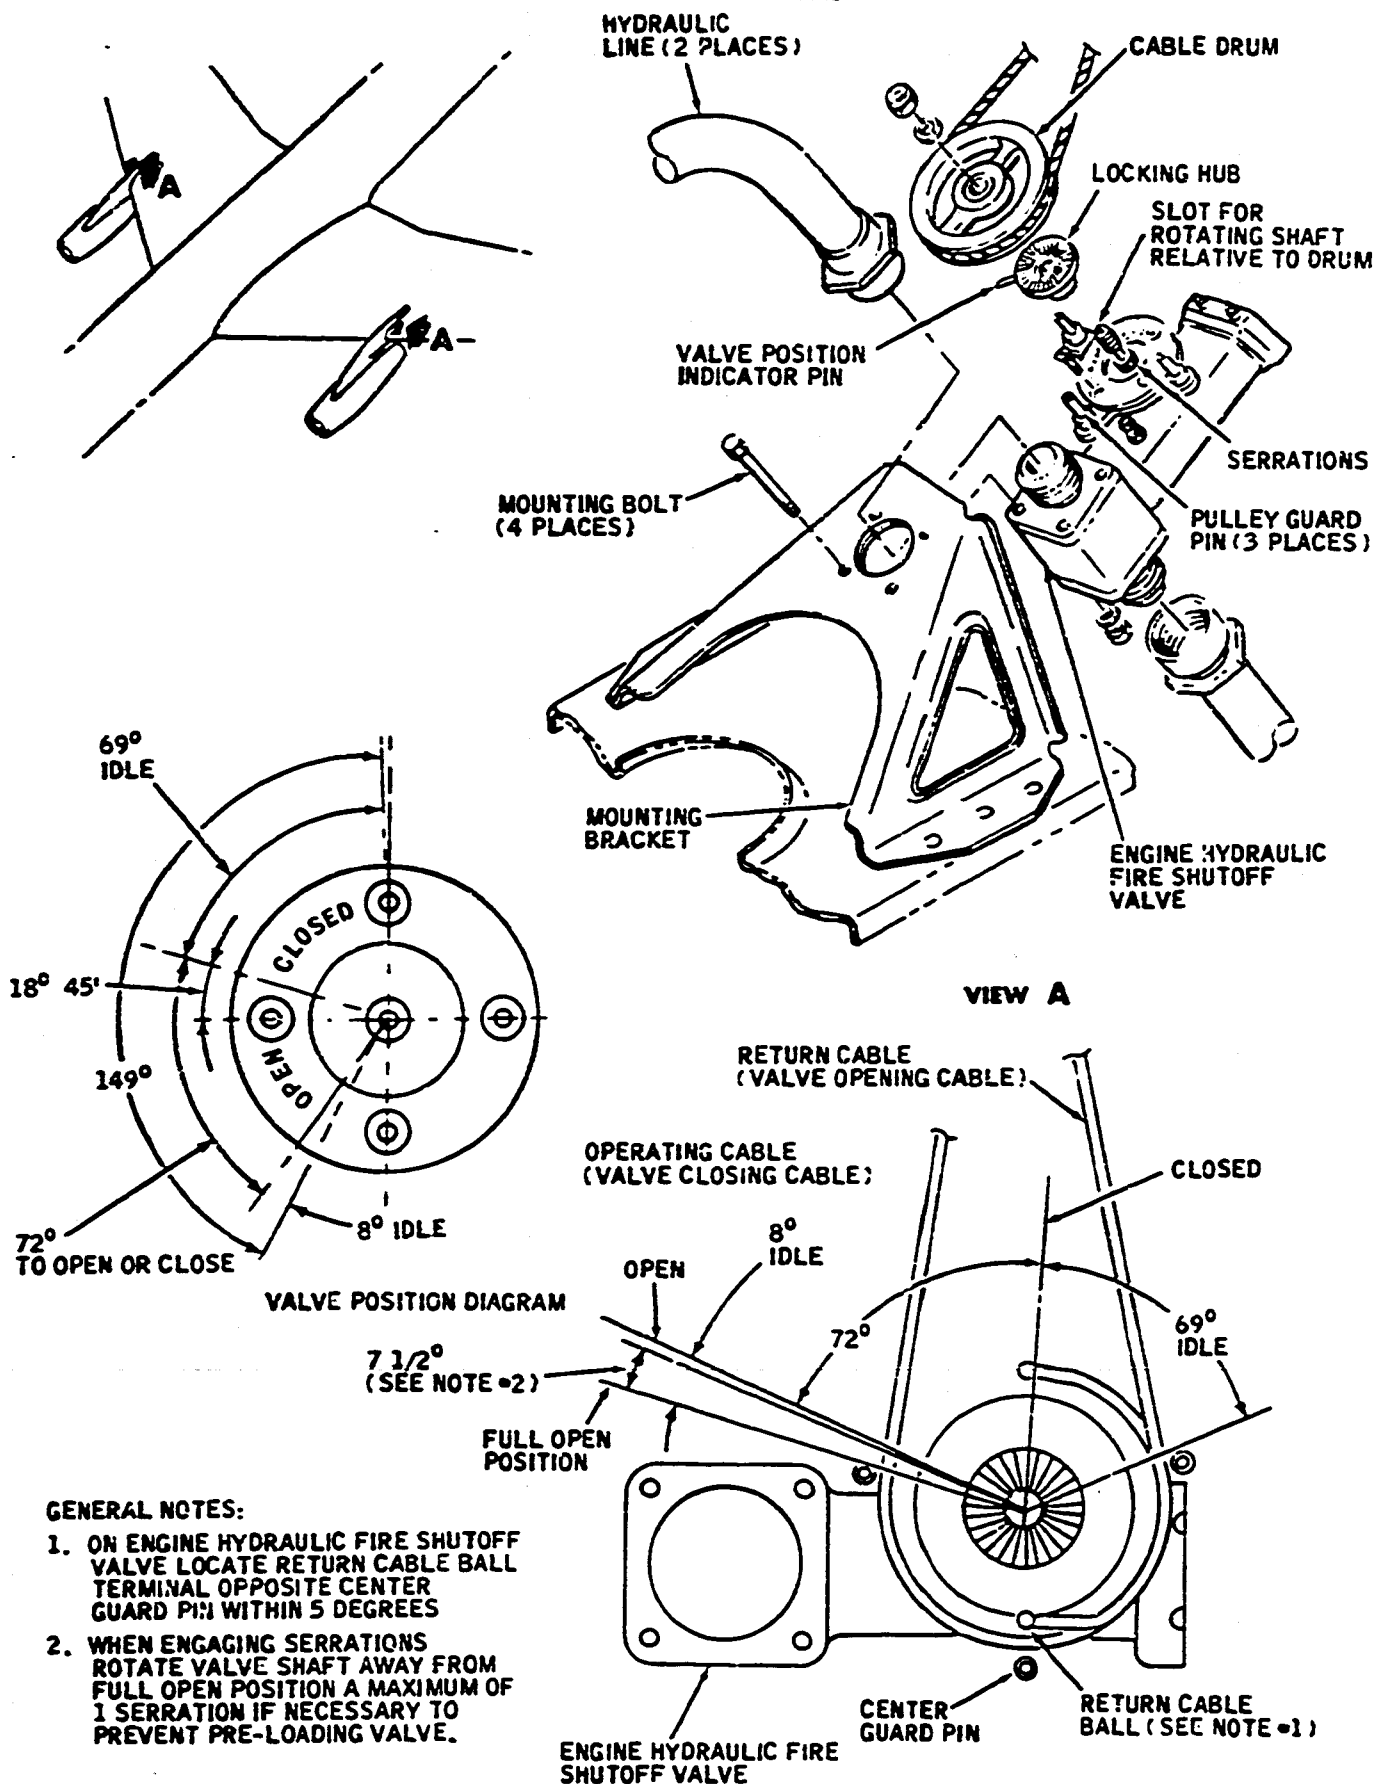

**GENERAL NOTES:**

1. ON ENGINE HYDRAULIC FIRE SHUTOFF VALVE LOCATE RETURN CABLE BALL TERMINAL OPPOSITE CENTER GUARD PIN WITHIN 5 DEGREES
2. WHEN ENGAGING SERRATIONS ROTATE VALVE SHAFT AWAY FROM FULL OPEN POSITION A MAXIMUM OF 1 SERRATION IF NECESSARY TO PREVENT PRE-LOADING VALVE.

Engine Hydraulic Fire Shutoff  
 Valve -- Installation  
 Figure 201

HA2-2818

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Connect hydraulic lines to inlet and outlet ports of valve.
- (6) Make certain that applicable fire control handle is in normal (open) position and insert rig pin in wing inboard transition drum (see Chapter 76).
- (7) Install cable drum on valve shaft and partially tighten attaching nut. Do not engage serrations in cable drum with serrations in locking hub.
- (8) Differentially adjust turnbuckles to place ball end of return cable opposite center guard pin in guard within  $\pm 5$  degrees. Adjust cables to tension as specified in cable tension chart (see 29-10-0, Figure 502).
- (9) Tighten cable drum attaching nut with valve in full open position.

CAUTION: DO NOT PRELOAD VALVE AGAINST STOP.

NOTE: The locking hub on the engine hydraulic fire shutoff valve can be rotated a maximum of 7 1/2 degrees (one serration) from the full-open position to mesh the serrations in the cable drum with the serrations in the locking hub.

- (10) Safety turnbuckles with lockwire and remove rig pin from transition drum.
- (11) Close auxiliary hydraulic pump control circuit breaker.

### 3. Inspection/Check Engine Hydraulic Fire Shutoff Valve

#### A. Check Fire Shutoff Valve

- (1) Place fire control handle in fuel, air, and hydraulic off position.
- (2) Disconnect hydraulic pressure and supply hoses at applicable inboard pylon firewall.
- (3) Connect hydraulic test stand pressure and supply hoses to firewall connections.
- (4) Place fire control handle in normal position.
- (5) Pressurize hydraulic system with test stand set at full flow (20 gpm) (see 29-00, Maintenance Practices).
- (6) Place fire control handle in fuel, air, and hydraulic off position. Hydraulic fluid flow through fire shutoff valve should stop.

CAUTION: DO NOT RUN TEST STAND PUMP FOR MORE THAN 30 SECONDS WITH FIRE SHUTOFF VALVE CLOSED.

- (7) Place fire control handle in normal position. Fluid flow should resume.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) Shut off hydraulic test stand.
- (9) Place fire control handle in fuel, air, and hydraulic off position.
- (10) Disconnect test stand pressure and supply hoses from firewall connections.
- (11) Connect engine pump hoses to firewall connections.
- (12) With fire control handles in fuel, air, and hydraulic off position, indicators on valves should be in overtravel range.
- (13) Place fire control handles in normal position, check that indicators on valves are in pretravel range.
- (14) Reset generator (see Chapter 24).
- (15) Check lines and fittings to fire shutoff valves for security of attachment and leaks.
- (16) Check cable drum and cables for security of attachment, wear, and corrosion.
- (17) Check that cable turnbuckles are properly lockwired.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

ENGINE-DRIVEN HYDRAULIC PUMP - MAINTENANCE PRACTICES

1. General

- A. The engine-driven hydraulic pumps are located, one each, on the accessory drive case of each inboard engine.
- B. Access to the hydraulic pumps is through the engine nacelle doors.
- C. Removal/installation procedures for the left and right engine-driven hydraulic pumps are identical, except as noted. Inspection/check procedures for the left and right engine-driven hydraulic pumps are identical.

2. Tools and Equipment Required

- A. Grease, Electro-Moly/92 (Electrofilm, Incorp.), or equivalent, is used for lubrication of hydraulic pump shaft splines.

3. Removal/Installation Engine-Driven Hydraulic Pumps

A. Remove Engine-Driven Hydraulic Pump

- (1) Open engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Place fire control handles in fuel, air, and hydraulic off position.
- (3) Disconnect case drain hose from case drain port.

CAUTION: THE FIRE DETECTOR SENSING ELEMENTS WHICH ARE INSTALLED WITHIN ENGINE AREA ARE VERY SENSITIVE. PHYSICAL CONTACT WITH THESE ELEMENTS CAN CAUSE HIDDEN DAMAGE. A CONSTANT DIMENSION MUST BE MAINTAINED BETWEEN ELEMENTS AND THEIR SUPPORTING STRUCTURE. A MINIMUM CLEARANCE OF 3/4-INCH MUST BE MAINTAINED BETWEEN ELEMENTS AND ENGINE COMPONENTS AND LINES.

- (4) Disconnect pressure line from outlet port.
- (5) Disconnect suction hose from suction port.
- (6) Disconnect electrical connector from bypass solenoid.
- (7) Remove pump.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) Remove hydraulic fittings from pump ports and retain for use on new pump.

NOTE: In the event the pump is removed due to a malfunction of the pump, and physical internal damage is suspected, the following filters and check valves should be removed and cleaned, or replaced.

- (a) Dual filter and relief valve filter.
- (b) Hydraulic reservoir return fluid filter.
- (c) Engine-driven pump return line (case drain) check valve, located in pylon.
- (d) Engine-driven pump pressure line check valve, located in pylon.
- (e) Case drain filter and line check valve.

B. Install Engine-Driven Hydraulic Pump

- (1) Make certain that engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel is open.
- (2) Install fittings in pump pressure, suction, and case drain ports.
- (3) Lubricate pump shaft splines with Electro-Moly/93 grease.
- (4) Check gasket in pump mounting flange (on engine side) for general condition before installing pump.
- (5) Install pump on engine accessory pan and secure.

CAUTION: THE FIRE DETECTOR SENSING ELEMENTS WHICH ARE INSTALLED WITHIN ENGINE AREA ARE VERY SENSITIVE. PHYSICAL CONTACT WITH THESE ELEMENTS CAN CAUSE HIDDEN DAMAGE. A CONSTANT DIMENSION MUST BE MAINTAINED BETWEEN ELEMENTS AND THEIR SUPPORTING STRUCTURE. A MINIMUM CLEARANCE OF 3/4-INCH MUST BE MAINTAINED BETWEEN ELEMENTS AND ENGINE COMPONENTS AND LINES.

- (6) Connect pressure line hose to pump outlet port.
- (7) Connect suction hose to pump suction port.
- (8) Fill pump case with clean hydraulic fluid through case drain port.

CAUTION: BEFORE OPERATING THE ENGINE-DRIVEN HYDRAULIC PUMP, PUMP MUST BE FILLED WITH CLEAN HYDRAULIC FLUID THROUGH CASE DRAIN PORT TO PREVENT PUMP FROM OPERATING WITHOUT LUBRICATION DURING SELF-PRIMING PERIOD.


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (9) Connect case drain hose to pump case drain port.
- (10) Connect electrical connector to bypass solenoid.
- (11) Place fire control handles in normal position.
- (12) Bleed entrapped air from suction hose of pump.
- (13) Reset generator (see Chapter 24).
- (14) Close engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel.
- (15) Check operation of engine-driven hydraulic pump during next scheduled engine run (see paragraph 4).


Oct 15/68

29-10-12  
CODE 1  
Page 203

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

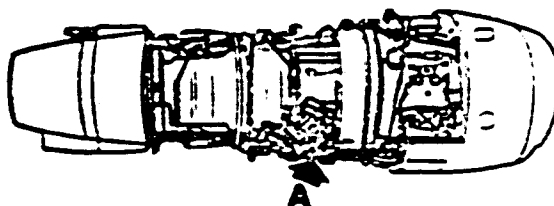

RIGHT SIDE OF INBOARD ENGINES (NO. 2 AND NO. 3)

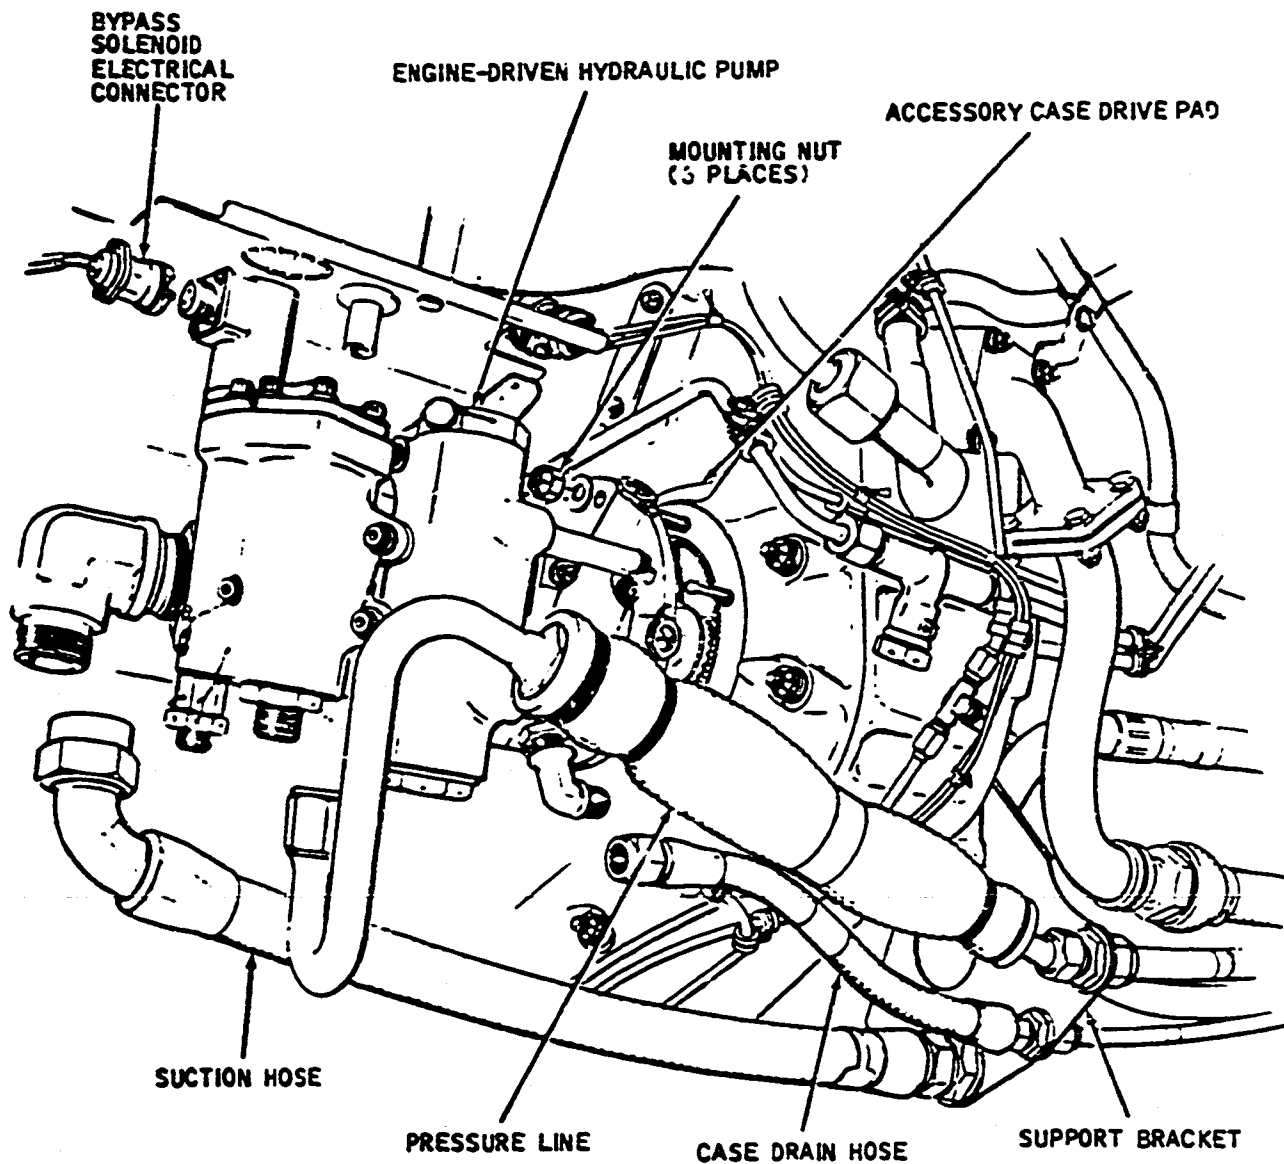

VIEW A

HA2-79

Engine Driven Hydraulic Pump -- Installation  
Figure 201

29-10-12  
CODE 1  
Page 204

Jun 15/67

Printed in U.S.A.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

4. Inspection/Check Engine-Driven Hydraulic Pump

A. Check Engine-Driven Hydraulic Pump

- (1) Start engines No. 2 and 3 (see Chapter 71).
- (2) Place hydraulic system selector control lever in general system (normal) position.
- (3) Check hydraulic pressure indicator for 2800- to 3000-psi system pressure.
- (4) Operate wing flaps through a complete cycle of operation.

WARNING: BEFORE OPERATING FLAPS, MAKE CERTAIN THAT FLAP AREA IS CLEAR OF PERSONNEL AND OBSTRUCTIONS.

- (5) Place both engine-driven pump control switches in bypass position. Hydraulic pressure should drop to approximately zero psi.
- (6) Place one control switch in on position. Hydraulic pressure should build up to 2800- to 3000-psi.
- (7) Return switch to bypass position.
- (8) Place other switch in on position. Hydraulic pressure should build up to 2800- to 3000-psi.
- (9) Place both switches in on position for normal operation.
- (10) Shut down engines (see Chapter 71).
- (11) Check hydraulic pumps, hoses, and fittings for leaks.
- (12) Check hose connections and pumps for security of attachment.
- (13) Check electrical connectors on bypass solenoids for security of attachment and general condition.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

ENGINE-DRIVEN HYDRAULIC PUMP - MAINTENANCE PRACTICES

1. General

- A. The engine-driven hydraulic pumps are located, one each, on the accessory drive case of each inboard engine.
- B. Access to the hydraulic pumps is through the engine nacelle doors.
- C. Removal/installation procedures for the left and right engine-driven hydraulic pumps are identical, except as noted. Inspection/check procedures for the left and right engine-driven hydraulic pumps are identical.

2. Tools and Equipment Required

- A. Grease, Electro-Moly/92 (Electrofilm, Incorp.), or equivalent, is used for lubrication of hydraulic pump shaft splines.

3. Removal/Installation Engine-Driven Hydraulic Pumps

A. Remove Engine-Driven Hydraulic Pump

- (1) Open engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Place fire control handles in fuel, air, and hydraulic off position.
- (3) Disconnect case drain hose from case drain port.

CAUTION: THE FIRE DETECTOR SENSING ELEMENTS WHICH ARE INSTALLED WITHIN ENGINE AREA ARE VERY SENSITIVE. PHYSICAL CONTACT WITH THESE ELEMENTS CAN CAUSE HIDDEN DAMAGE. A CONSTANT DIMENSION MUST BE MAINTAINED BETWEEN ELEMENTS AND THEIR SUPPORTING STRUCTURE. A MINIMUM CLEARANCE OF 3/4-INCH MUST BE MAINTAINED BETWEEN ELEMENTS AND ENGINE COMPONENTS AND LINES.

- (4) Disconnect pressure line from outlet port.
- (5) Disconnect suction hose from suction port.
- (6) Disconnect electrical connectors from bypass solenoid and low pressure switch.
- (7) Remove pump.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) Remove hydraulic fittings from pump ports and retain for use on new pump.

NOTE: In the event the pump is removed due to a malfunction of the pump, and physical internal damage is suspected, the following filters and check valves should be removed and cleaned, or replaced.

- (a) Dual filter and relief valve filter.
- (b) Hydraulic reservoir return fluid filter.
- (c) Engine-driven pump return line (case drain) check valve, located in pylon.
- (d) Engine-driven pump pressure line check valve, located in pylon.
- (e) Case drain filter and line check valve.

B. Install Engine-Driven Hydraulic Pump

- (1) Make certain that engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel is open.
- (2) Install fittings in pump pressure, suction, and case drain ports.
- (3) Lubricate pump shaft splines with Electro-Moly/92 grease.
- (4) Check gasket in pump mounting flange (on engine side) for general condition before installing pump.
- (5) Install pump on engine accessory pad and secure.

CAUTION: THE FIRE DETECTOR SENSING ELEMENTS WHICH ARE INSTALLED WITHIN ENGINE AREA ARE VERY SENSITIVE. PHYSICAL CONTACT WITH THESE ELEMENTS CAN CAUSE HIDDEN DAMAGE. A CONSTANT DIMENSION MUST BE MAINTAINED BETWEEN ELEMENTS AND THEIR SUPPORTING STRUCTURE. A MINIMUM CLEARANCE OF 3/4-INCH MUST BE MAINTAINED BETWEEN ELEMENTS AND ENGINE COMPONENTS AND LINES.

- (6) Connect pressure line hose to pump outlet port.
- (7) Connect suction hose to pump suction port.
- (8) Fill pump case with clean hydraulic fluid through case drain port.

CAUTION: BEFORE OPERATING THE ENGINE-DRIVEN HYDRAULIC PUMP, PUMP MUST BE FILLED WITH CLEAN HYDRAULIC FLUID THROUGH CASE DRAIN PORT TO PREVENT PUMP FROM OPERATING WITHOUT LUBRICATION DURING SELF-PRIMING PERIOD.


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (9) Connect case drain hose to pump case drain port.
- (10) Connect electrical connectors to bypass solenoid and low pressure switch.
- (11) Place fire control handles in normal position.
- (12) Bleed entrapped air from suction hose of pump.
- (13) Reset generator (see Chapter 24).
- (14) Close engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel.
- (15) Check operation of engine-driven hydraulic pump during next scheduled engine run (see paragraph 4).


Oct 15/68

29-10-12  
CODE 2  
Page 203

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

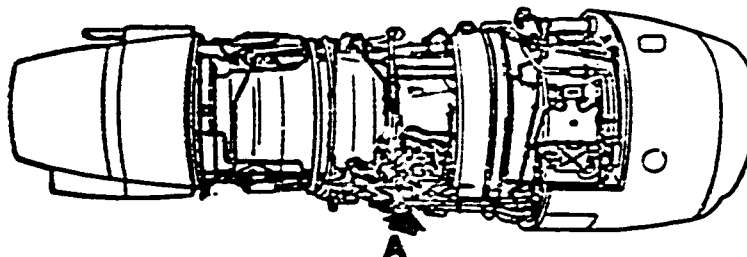

RIGHT SIDE OF INBOARD ENGINES (NO. 2 AND NO. 3)

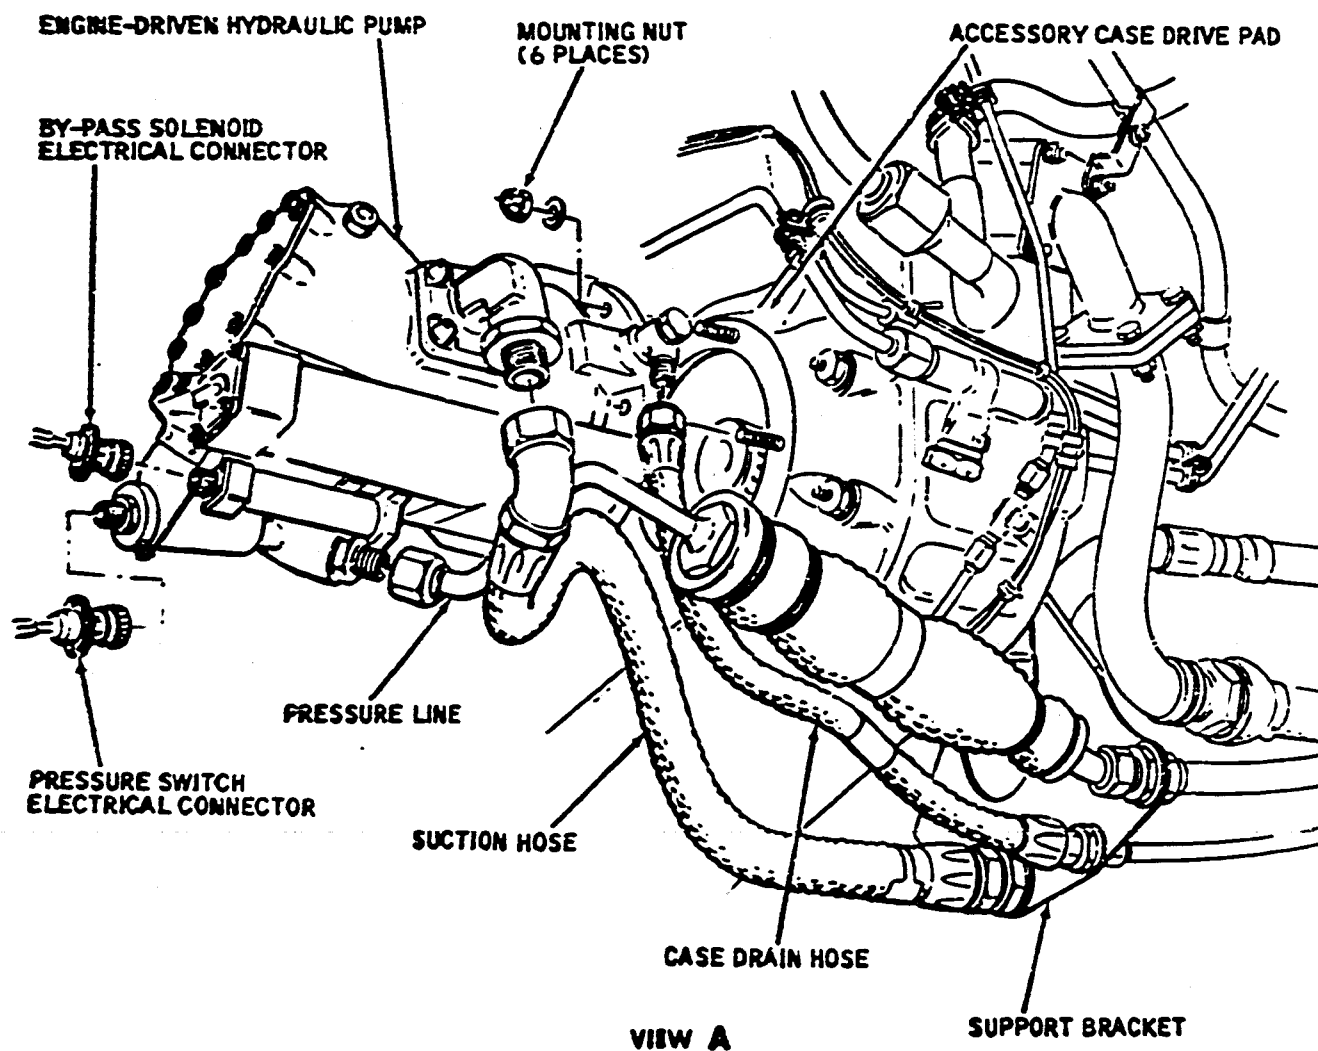

HA2-1343

Engine-Driven Hydraulic Pump -- Installation  
 Figure 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

4. Inspection/Check Engine-Driven Hydraulic Pump

A. Check Engine-Driven Hydraulic Pump

- (1) Start engines No. 2 and 3 (see Chapter 71).
- (2) Place hydraulic system selector control lever in general system (normal) position.
- (3) Check hydraulic pressure indicator for 2800- to 3000-psi system pressure.
- (4) Operate wing flaps through a complete cycle of operation.

WARNING: BEFORE OPERATING FLAPS, MAKE CERTAIN THAT FLAP AREA IS CLEAR OF PERSONNEL AND OBSTRUCTIONS.

- (5) Place both engine-driven pump control switches in bypass position. Hydraulic pressure should drop to approximately zero psi.
- (6) Place one control switch in on position. Hydraulic pressure should build up to 2800- to 3000-psi.
- (7) Return switch to bypass position.
- (8) Place other switch in on position. Hydraulic pressure should build up to 2800- to 3000-psi.
- (9) Place both switches in on position for normal operation.
- (10) Shut down engines (see Chapter 71).
- (11) Check hydraulic pumps, hoses, and fittings for leaks.
- (12) Check hose connections and pumps for security of attachment.
- (13) Check electrical connectors on bypass solenoids and low pressure switches for security of attachment and general condition.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

ENGINE-DRIVEN HYDRAULIC PUMP - MAINTENANCE PRACTICES

1. General

- A. The engine-driven hydraulic pumps are located, one each, on the accessory drive case of each inboard engine.
- B. Access to the hydraulic pumps is through the engine nacelle doors and removal of the engine bypass duct (see Chapter 78).
- C. Removal/installation procedures for the left and right engine-driven hydraulic pumps are identical, except as noted. Inspection/check procedures for the left and right engine-driven hydraulic pumps are identical.

2. Tools and Equipment Required

- A. Grease, Electro-Moly/92 (Electrofilm, Incorp.), or equivalent, is used for lubrication of hydraulic pump shaft splines.

3. Removal/Installation Engine-Driven Hydraulic Pumps

A. Remove Engine-Driven Hydraulic Pump

- (1) Open engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Place fire control handles in fuel, air, and hydraulic off position.
- (3) Disconnect case drain hose from case drain port.

CAUTION: THE FIRE DETECTOR SENSING ELEMENTS WHICH ARE INSTALLED WITHIN ENGINE AREA ARE VERY SENSITIVE. PHYSICAL CONTACT WITH THESE ELEMENTS CAN CAUSE HIDDEN DAMAGE. A CONSTANT DIMENSION MUST BE MAINTAINED BETWEEN ELEMENTS AND THEIR SUPPORTING STRUCTURE. A MINIMUM CLEARANCE OF 3/4-INCH MUST BE MAINTAINED BETWEEN ELEMENTS AND ENGINE COMPONENTS AND LINES.

- (4) Disconnect pressure line from outlet port.
- (5) Disconnect suction hose from suction port.
- (6) Disconnect electrical connector from bypass solenoid.
- (7) Remove pump.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) Remove hydraulic fittings from pump ports and retain for use on new pump.

NOTE: In the event the pump is removed due to a malfunction of the pump, and physical internal damage is suspected, the following filters and check valves should be removed and cleaned or replaced.

- (a) Dual filter and relief valve filter.
- (b) Hydraulic reservoir return fluid filter.
- (c) Engine-driven pump return line (case drain) check valve, located in pylon.
- (d) Engine-driven pump pressure line check valve, located in pylon.
- (e) Case drain filter and line check valve.

B. Install Engine-Driven Hydraulic Pump

- (1) Make certain that engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel is open.
- (2) Install fittings in pump pressure, suction, and case drain ports.
- (3) Lubricate pump shaft splines with Electro-Moly/92 grease.
- (4) Check gasket in pump mounting flange (on engine side) for general condition before installing pump.
- (5) Install pump on engine accessory pad and secure.

CAUTION: THE FIRE DETECTOR SENSING ELEMENTS WHICH ARE INSTALLED WITHIN ENGINE AREA ARE VERY SENSITIVE. PHYSICAL CONTACT WITH THESE ELEMENTS CAN CAUSE HIDDEN DAMAGE. A CONSTANT DIMENSION MUST BE MAINTAINED BETWEEN ELEMENTS AND THEIR SUPPORTING STRUCTURE. A MINIMUM CLEARANCE OF 3/4-INCH MUST BE MAINTAINED BETWEEN ELEMENTS AND ENGINE COMPONENTS AND LINES.

- (6) Connect pressure line hose to pump outlet port.
- (7) Connect suction hose to pump suction port.
- (8) Fill pump case with clean hydraulic fluid through case drain port.

CAUTION: BEFORE OPERATING THE ENGINE-DRIVEN HYDRAULIC PUMP, PUMP MUST BE FILLED WITH CLEAN HYDRAULIC FLUID THROUGH CASE DRAIN PORT TO PREVENT PUMP FROM OPERATING WITHOUT LUBRICATION DURING SELF-PRIMING PERIOD.




DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (9) Connect case drain hose to pump case drain port.
- (10) Connect electrical connector to bypass solenoid.
- (11) Place fire control handles in normal position.
- (12) Bleed entrapped air from suction hose at pump.
- (13) Reset generator (see Chapter 24).
- (14) Close engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel.
- (15) Check operation of engine-driven hydraulic pump during next scheduled engine run (see paragraph 4).


Oct 15/68

29-10-12  
CODE 3  
Page 203

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

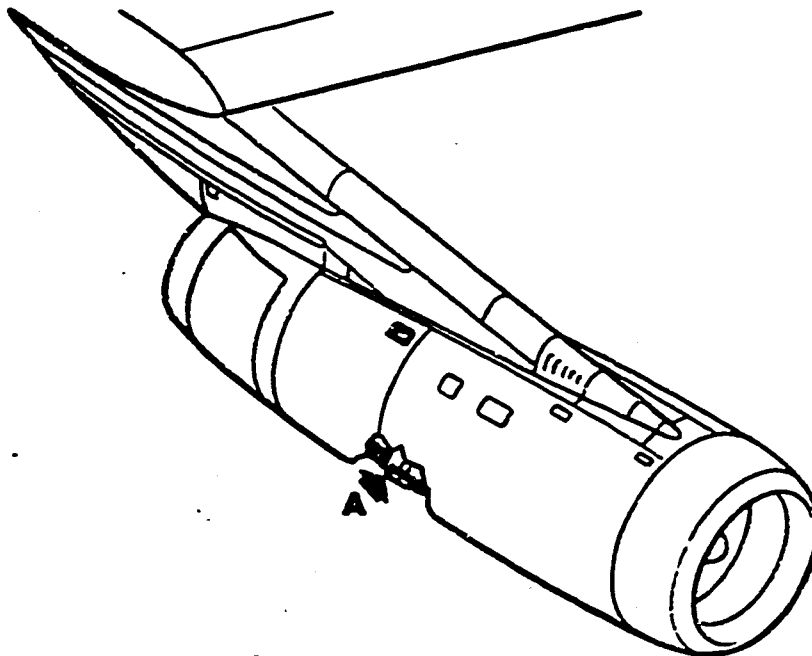

RIGHT SIDE OF INBOARD ENGINES (NO. 2 AND NO. 3)

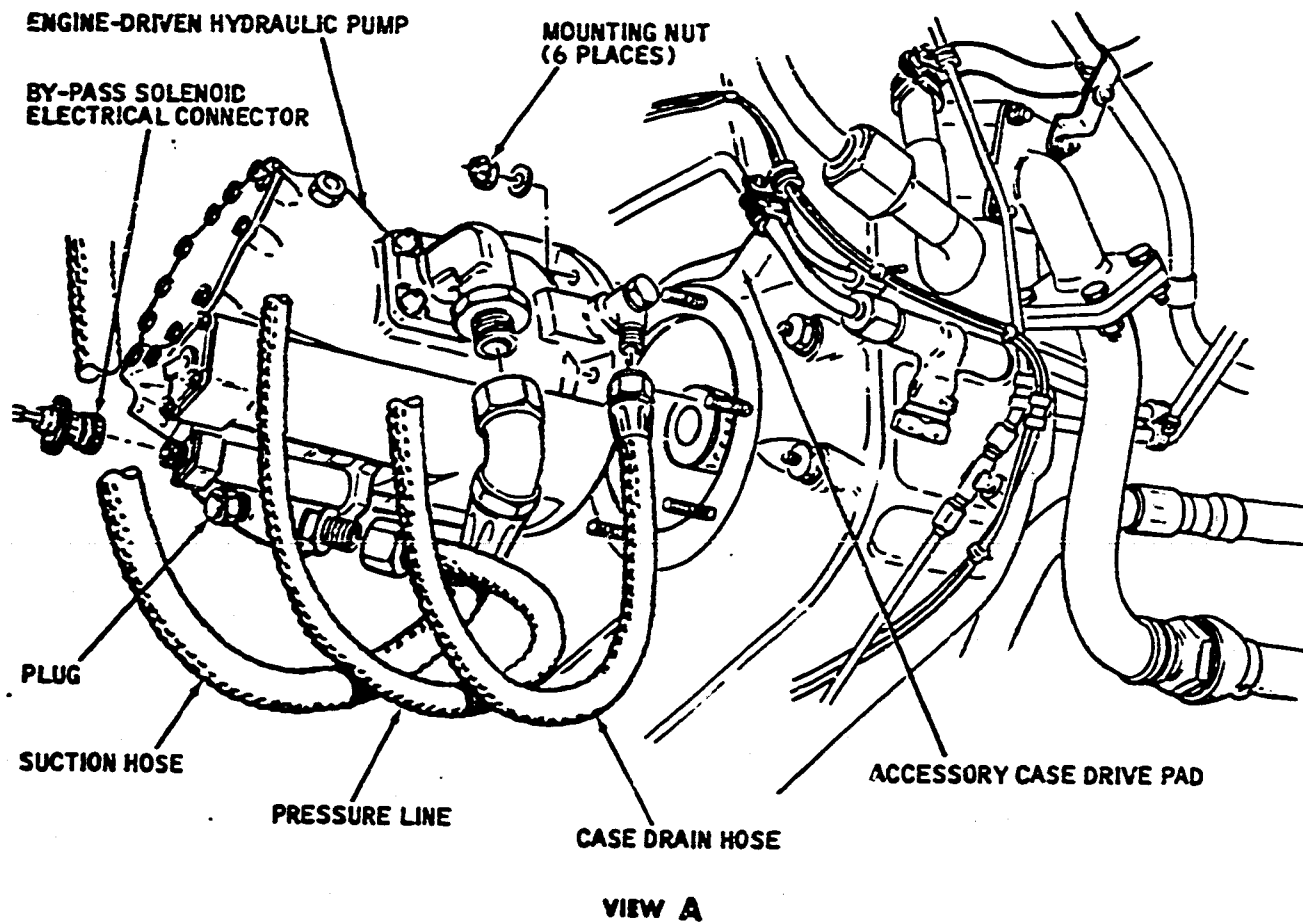

Engine-Driven Hydraulic Pump -- Installation  
 Figure 201

HA2-1342

29-10-12  
 CODE 3  
 Page 204

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

4. Inspection/Check Engine-Driven Hydraulic Pump

A. Check Engine-Driven Hydraulic Pump

- (1) Start engines No. 2 and 3 (see Chapter 71).
- (2) Place hydraulic system selector control lever in general system (normal) position.
- (3) Check hydraulic pressure indicator for 2800- to 3000-psi system pressure.
- (4) Operate wing flaps through a complete cycle of operation.

WARNING: BEFORE OPERATING FLAPS, MAKE CERTAIN THAT FLAP AREA IS CLEAR OF PERSONNEL AND OBSTRUCTIONS.

- (5) Place both engine-driven pump control switches in bypass position. Hydraulic pressure should drop to approximately zero psi.
- (6) Place one control switch in on position. Hydraulic pressure should build up to 2800- to 3000-psi.
- (7) Return switch to bypass position.
- (8) Place other switch in on position. Hydraulic pressure should build up to 2800- to 3000-psi.
- (9) Place both switches in on position for normal operation.
- (10) Shut down engines (see Chapter 71).
- (11) Check hydraulic pumps, hoses, and fittings for leaks.
- (12) Check hose connections and pumps for security of attachment.
- (13) Check electrical connectors on bypass solenoids for security of attachment and general condition.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

ENGINE-DRIVEN HYDRAULIC PUMP - MAINTENANCE PRACTICES

1. General

- A. The engine-driven hydraulic pumps are located, one each, on the accessory drive case of each inboard engine.
- B. Access to the hydraulic pumps is through the engine nacelle doors.
- C. Removal/installation procedures for the left and right engine-driven hydraulic pumps are identical, except as noted. Inspection/check procedures for the left and right engine-driven hydraulic pumps are identical.

2. Tools and Equipment Required

- A. Grease, Electro-Moly/92 (Electrofilm Incorp.), or equivalent, is used for lubrication of hydraulic pump shaft splines.

3. Removal/Installation Engine-Driven Hydraulic Pumps

A. Remove Engine-Driven Hydraulic Pump

- (1) Open engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Place fire control handles in fuel, air, and hydraulic off position.
- (3) Disconnect case drain hose from case drain port.

CAUTION: THE FIRE DETECTOR SENSING ELEMENTS WHICH ARE INSTALLED WITHIN ENGINE AREA ARE VERY SENSITIVE. PHYSICAL CONTACT WITH THESE ELEMENTS CAN CAUSE HIDDEN DAMAGE. A CONSTANT DIMENSION MUST BE MAINTAINED BETWEEN ELEMENTS AND THEIR SUPPORTING STRUCTURE. A MINIMUM CLEARANCE OF 3/4-INCH MUST BE MAINTAINED BETWEEN ELEMENTS AND ENGINE COMPONENTS AND LINES.

- (4) Disconnect pressure line from outlet port.
- (5) Disconnect suction hose from suction port.
- (6) Disconnect electrical connector from bypass solenoid.
- (7) Remove pump.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) Remove hydraulic fittings from pump ports and retain for use on new pump.

NOTE: In the event the pump is removed due to a malfunction of the pump, and physical internal damage is suspected, the following filters and check valves should be removed and cleaned, or replaced.

- (a) Dual filter and relief valve filter.
- (b) Hydraulic reservoir return fluid filter.
- (c) Engine-driven pump return line (case drain) check valve, located in pylon.
- (d) Engine-driven pump pressure line check valve, located in pylon.
- (e) Case drain filter and line check valve.

B. Install Engine-Driven Hydraulic Pump

- (1) Make certain that engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel is open.
- (2) Install fittings in pump pressure, suction, and case drain ports.
- (3) Lubricate pump shaft splines with Electro-Moly/92 grease.
- (4) Check gasket in pump mounting flange (on engine side) for general condition before installing pump.
- (5) Install pump on engine accessory pad and secure.

CAUTION: THE FIRE DETECTOR SENSING ELEMENTS WHICH ARE INSTALLED WITHIN ENGINE AREA ARE VERY SENSITIVE. PHYSICAL CONTACT WITH THESE ELEMENTS CAN CAUSE HIDDEN DAMAGE. A CONSTANT DIMENSION MUST BE MAINTAINED BETWEEN ELEMENTS AND THEIR SUPPORTING STRUCTURE. A MINIMUM CLEARANCE OF 3/4-INCH MUST BE MAINTAINED BETWEEN ELEMENTS AND ENGINE COMPONENTS AND LINES.

- (6) Connect pressure line hose to pump outlet port.
- (7) Connect suction hose to pump suction port.
- (8) Fill pump case with clean hydraulic fluid through case drain port.

CAUTION: BEFORE OPERATING THE ENGINE-DRIVEN HYDRAULIC PUMP, PUMP MUST BE FILLED WITH CLEAN HYDRAULIC FLUID THROUGH CASE DRAIN PORT TO PREVENT PUMP FROM OPERATING WITHOUT LUBRICATION DURING SELF-PRIMING PERIOD.


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (9) Connect case drain hose to pump case drain port.
- (10) Connect electrical connector to bypass solenoid.
- (11) Place fire control handles in normal position.
- (12) Bleed entrapped air from suction hose of pump.
- (13) Reset generator (see Chapter 24).
- (14) Close engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel.
- (15) Check operation of engine-driven hydraulic pump during next scheduled engine run (see paragraph 4).


Oct 15/68

29-10-12  
CODE 4  
Page 203

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

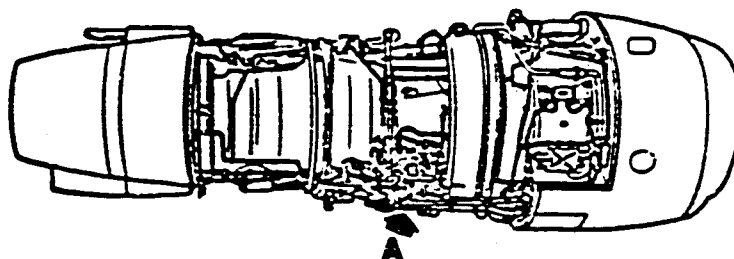

RIGHT SIDE OF INBOARD ENGINES (NO. 2 AND NO. 3)

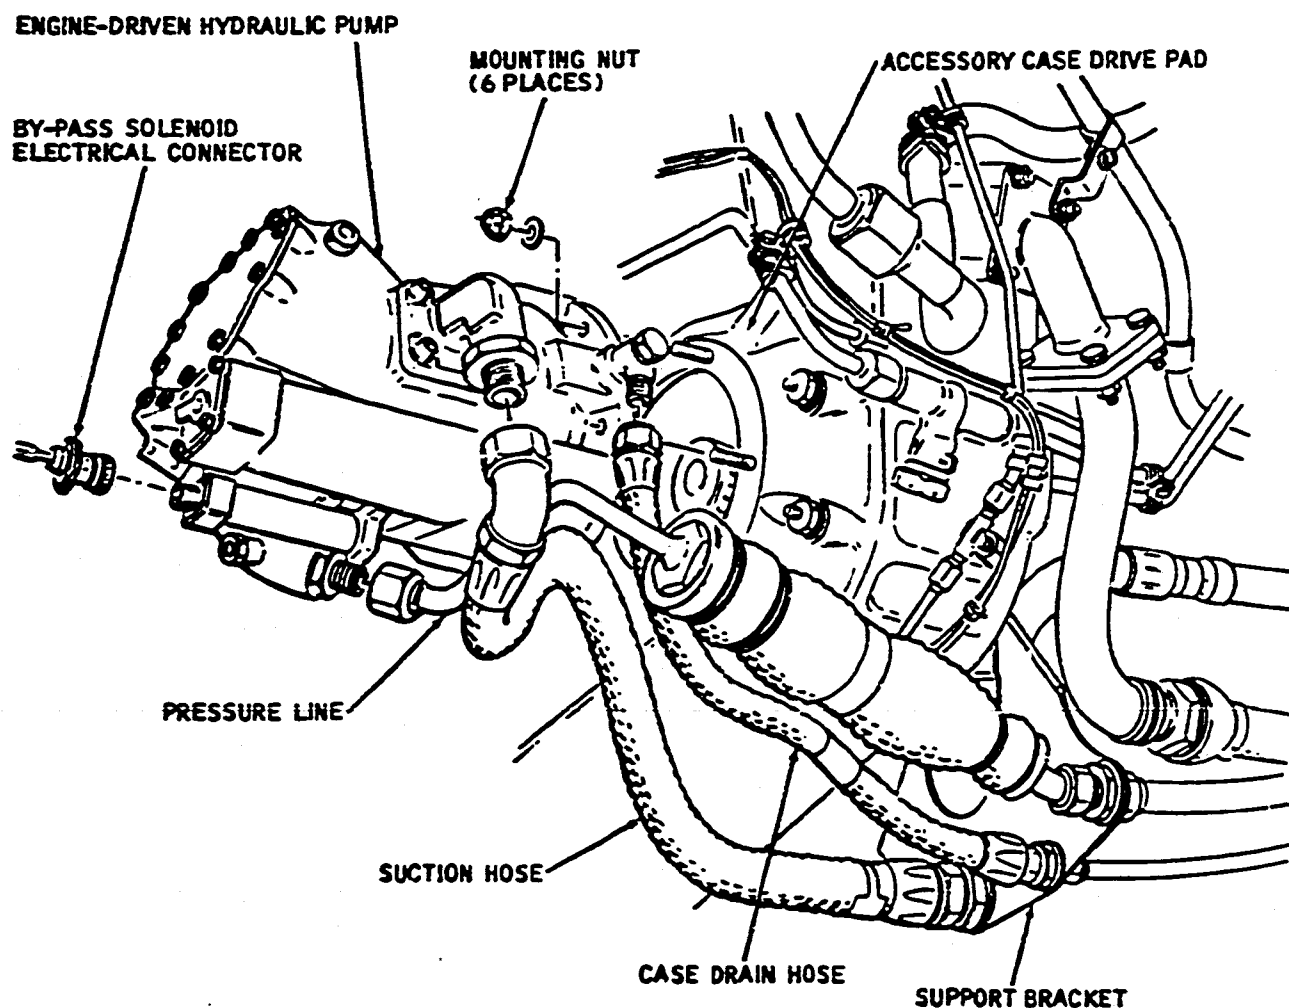

VIEW A

HA2-2153

Engine-Driven Hydraulic Pump -- Installation  
Figure 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

4. Inspection/Check Engine-Driven Hydraulic Pump

A. Check Engine-Driven Hydraulic Pump

- (1) Start engine No. 2 and 3 (see Chapter 71).
- (2) Place hydraulic system selector control lever in general system (normal) position.
- (3) Check hydraulic pressure indicator for 2800- to 3000-psi system pressure.
- (4) Operate wing flaps through a complete cycle of operation.

WARNING: BEFORE OPERATING FLAPS, MAKE CERTAIN THAT FLAP AREA IS CLEAR OF PERSONNEL AND OBSTRUCTIONS.

- (5) Place both engine-driven pump control switches in bypass position. Hydraulic pressure should drop to approximately zero psi.
- (6) Place one control switch in on position. Hydraulic pressure should build up to 2800- to 3000-psi.
- (7) Return switch to bypass position.
- (8) Place other switch in on position. Hydraulic pressure should build up to 2800- to 3000-psi.
- (9) Place both switches in on position for normal operation.
- (10) Shut down engines (see Chapter 71).
- (11) Check hydraulic pump, hoses, and fittings for leaks.
- (12) Check hose connections and pump for security of attachment.
- (13) Check electrical connector on bypass solenoid for security of attachment and general condition.



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

ENGINE-DRIVEN HYDRAULIC PUMP - MAINTENANCE PRACTICES

1. General

- A. The engine-driven hydraulic pumps are located, one each, on the accessory drive case of each inboard engine.
- B. Access to the hydraulic pumps is through the engine nacelle doors and removal of the engine bypass duct (see Chapter 78).
- C. Removal/installation procedures for the left and right engine-driven hydraulic pumps are identical, except as noted. Inspection/check procedures for the left and right engine-driven hydraulic pumps are identical.

2. Tools and Equipment Required

- A. Grease, Electro-Moly/92 (Electrofilm Incorp.), or equivalent, is used for lubrication of hydraulic pump shaft splines.

3. Removal/Installation Engine-Driven Hydraulic Pumps

A. Remove Engine-Driven Hydraulic Pump

- (1) Open engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Place fire control handles in fuel, air, and hydraulic off position.
- (3) Disconnect case drain hose from case drain port.

CAUTION: THE FIRE DETECTOR SENSING ELEMENTS WHICH ARE INSTALLED WITHIN ENGINE AREA ARE VERY SENSITIVE. PHYSICAL CONTACT WITH THESE ELEMENTS CAN CAUSE HIDDEN DAMAGE. A CONSTANT DIMENSION MUST BE MAINTAINED BETWEEN ELEMENTS AND THEIR SUPPORTING STRUCTURE. A MINIMUM CLEARANCE OF 3/4-INCH MUST BE MAINTAINED BETWEEN ELEMENTS AND ENGINE COMPONENTS AND LINES.

- (4) Disconnect pressure line from outlet port.
- (5) Disconnect suction hose from suction port.
- (6) Disconnect electrical connectors from bypass solenoid and low pressure switch.
- (7) Remove pump.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) Remove hydraulic fittings from pump ports and retain for use on new pump.

NOTE: In the event the pump is removed due to a malfunction of the pump, and physical internal damage is suspected, the following filters and check valves should be removed and cleaned, or replaced.

- (a) Dual filter and relief valve filter.
- (b) Hydraulic reservoir return fluid filter.
- (c) Engine-driven pump return line (case drain) check valve, located in pylon.
- (d) Engine-driven pump pressure line check valve, located in pylon.
- (e) Case drain filter and line check valve.

B. Install Engine-Driven Hydraulic Pump

- (1) Make certain that engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel is open.
- (2) Install fittings in pump pressure, suction, and case drain ports.
- (3) Lubricate pump shaft splines with Electro-Moly/92 grease.
- (4) Check gasket in pump mounting flange (on engine side) for general condition before installing pump.
- (5) Install pump on engine accessory pad and secure.

CAUTION: THE FIRE DETECTOR SENSING ELEMENTS WHICH ARE INSTALLED WITHIN ENGINE AREA ARE VERY SENSITIVE. PHYSICAL CONTACT WITH THESE ELEMENTS CAN CAUSE HIDDEN DAMAGE. A CONSTANT DIMENSION MUST BE MAINTAINED BETWEEN ELEMENTS AND THEIR SUPPORTING STRUCTURE. A MINIMUM CLEARANCE OF 3/4-INCH MUST BE MAINTAINED BETWEEN ELEMENTS AND ENGINE COMPONENTS AND LINES.

- (6) Connect pressure line hose to pump outlet port.
- (7) Connect suction hose to pump suction port.
- (8) Fill pump case with clean hydraulic fluid through case drain port.

C/ ON: BEFORE OPERATING THE ENGINE-DRIVEN HYDRAULIC PUMP, PUMP MUST BE FILLED WITH CLEAN HYDRAULIC FLUID THROUGH CASE DRAIN PORT TO PREVENT PUMP FROM OPERATING WITHOUT LUBRICATION DURING SELF-PRIMING PERIOD.


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (9) Connect case drain hose to pump case drain port.
- (10) Connect electrical connectors to bypass solenoid and low pressure switch.
- (11) Place fire control handles in normal position.
- (12) Bleed entrapped air from suction hose of pump.
- (13) Reset generator (see Chapter 24).
- (14) Close engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel.
- (15) Check operation of engine-driven hydraulic pump during next scheduled engine run (see paragraph 4).


Oct 15/68

29-10-12  
CODE 5  
Page 203

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

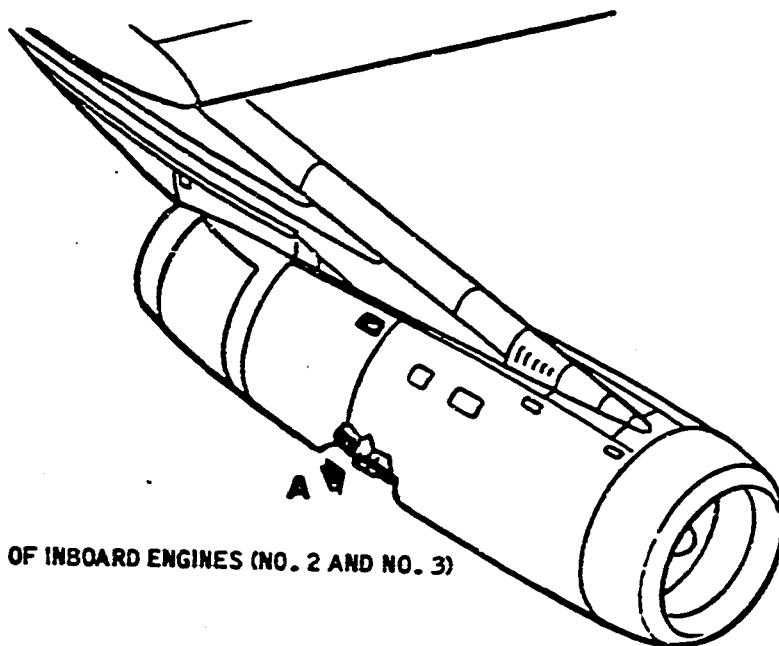

RIGHT SIDE OF INBOARD ENGINES (NO. 2 AND NO. 3)

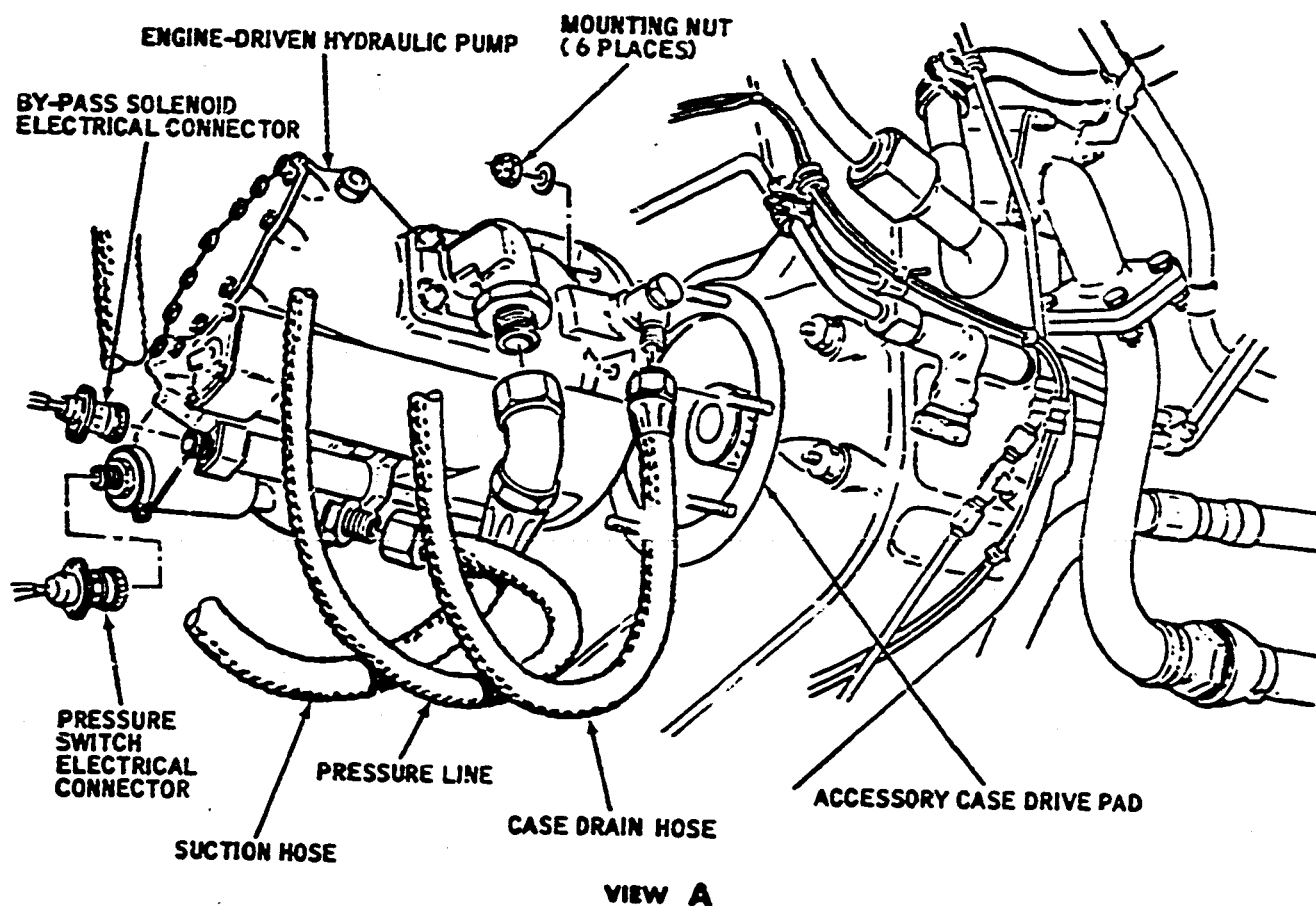

VIEW A

Engine-Driven Hydraulic Pump -- Installation  
 Figure 201

HA2-2193

29-10-12  
 CODE 5  
 Page 204

Printed in U.S.A.

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

4. Inspection/Check Engine-Driven Hydraulic Pump

A. Check Engine-Driven Hydraulic Pump

- (1) Start engines No. 2 and 3 (see Chapter 71).
- (2) Place hydraulic system selector control lever in general system normal position.
- (3) Check hydraulic pressure indicator for 2800- to 3000-psi system pressure.
- (4) Operate wing flaps through a complete cycle of operation.

WARNING: BEFORE OPERATING FLAPS, MAKE CERTAIN THAT FLAP AREA IS CLEAR OF PERSONNEL AND OBSTRUCTIONS.

- (5) Place both engine-driven pump control switches in bypass position. Hydraulic pressure should drop to approximately zero psi.
- (6) Place one control switch in on position. Hydraulic pressure should build up to 2800- to 3000-psi.
- (7) Return switch to bypass position.
- (8) Place other switch in on position. Hydraulic pressure should build up to 2800- to 3000-psi.
- (9) Place both switches in on position for normal operation.
- (10) Shut down engines (see Chapter 71).
- (11) Check hydraulic pump, hoses, and fittings for leaks.
- (12) Check hose connections and pump for security of attachment.
- (13) Check electrical connectors on bypass solenoid and low pressure switch for security of attachment and general condition.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

ENGINE-DRIVEN HYDRAULIC PUMP - MAINTENANCE PRACTICES

1. General

- A. The engine-driven hydraulic pumps are located, one each, on the accessory drive case of each inboard engine.
- B. Access to the hydraulic pumps is through the engine nacelle doors.
- C. Removal/installation procedures for the left and right engine-driven hydraulic pumps are identical, except as noted. Inspection/check procedures for the left and right engine-driven hydraulic pumps are identical.

2. Tools and Equipment Required

- A. Grease, Electro-Moly/92 (Electrofilm Incorp.), or equivalent, is used for lubrication of hydraulic pump shaft splines.

3. Removal/Installation Engine-Driven Hydraulic Pumps

A. Remove Engine-Driven Hydraulic Pump

- (1) Open engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Place fire control handles in fuel, air and hydraulic off position.
- (3) Disconnect case drain hose from case drain port.

CAUTION: THE FIRE DETECTOR SENSING ELEMENTS WHICH ARE INSTALLED WITHIN ENGINE AREA ARE VERY SENSITIVE. PHYSICAL CONTACT WITH THESE ELEMENTS CAN CAUSE HIDDEN DAMAGE. A CONSTANT DIMENSION MUST BE MAINTAINED BETWEEN ELEMENTS AND THEIR SUPPORTING STRUCTURE. A MINIMUM CLEARANCE OF 3/4-INCH MUST BE MAINTAINED BETWEEN ELEMENTS AND ENGINE COMPONENTS AND LINES.

- (4) Disconnect pressure line from outlet port.
- (5) Disconnect suction hose from suction port.
- (6) Disconnect electrical connector from bypass solenoid.
- (7) Remove pump.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) Remove hydraulic fittings from pump ports and retain for use on new pump.

NOTE: In the event the pump is removed due to a malfunction of the pump, and physical internal damage is suspected, the following filters and check valves should be removed and cleaned, or replaced.

- (a) Dual filter and relief valve filter.
- (b) Hydraulic reservoir return fluid filter.
- (c) Engine-driven pump return line (case drain) check valve, located in pylon.
- (d) Engine-driven pump pressure line check valve, located in pylon.
- (e) Case drain filter and line check valve.

B. Install Engine-Driven Hydraulic Pump

- (1) Make certain that engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel is open.
- (2) Install fittings in pump pressure, suction, and case drain ports.
- (3) Lubricate pump shaft splines with Electro-Moly/92 grease.
- (4) Check gasket in pump mounting flange (on engine side) for general condition before installing pump.
- (5) Install pump on engine accessory pad and secure.

CAUTION: THE FIRE DETECTOR SENSING ELEMENTS WHICH ARE INSTALLED WITHIN ENGINE AREA ARE VERY SENSITIVE. PHYSICAL CONTACT WITH THESE ELEMENTS CAN CAUSE HIDDEN DAMAGE. A CONSTANT DIMENSION MUST BE MAINTAINED BETWEEN ELEMENTS AND THEIR SUPPORTING STRUCTURE. A MINIMUM CLEARANCE OF 3/4-INCH MUST BE MAINTAINED BETWEEN ELEMENTS AND ENGINE COMPONENTS AND LINES.

- (6) Connect pressure line hose to pump outlet port.
- (7) Connect suction hose to pump suction port.
- (8) Fill pump case with clean hydraulic fluid through case drain port.

CAUTION: BEFORE OPERATING THE ENGINE-DRIVEN HYDRAULIC PUMP, PUMP MUST BE FILLED WITH CLEAN HYDRAULIC FLUID THROUGH CASE DRAIN PORT TO PREVENT PUMP FROM OPERATING WITHOUT LUBRICATION DURING SELF-PRIMING PERIOD.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (9) Connect case drain hose to pump case drain port.
- (10) Connect electrical connector to bypass solenoid.
- (11) Place fire control handles in normal position.
- (12) Bleed entrapped air from suction hose of pump.
- (13) Reset generator (see Chapter 24).
- (14) Close engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel.
- (15) Check operation of engine-driven hydraulic pump during next scheduled engine run (see paragraph 4).


Oct 15/68

Printed in U.S.A.

29-10-12  
CODE 6  
Page 203



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

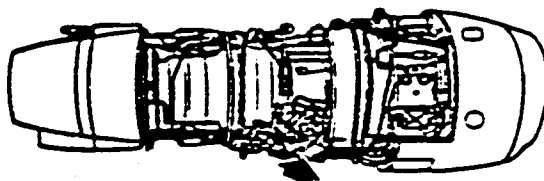

RIGHT SIDE OF INBOARD ENGINES (NO. 2 AND NO. 3)

BYPASS SOLENOID  
ELECTRICAL CONNECTOR

ENGINE-DRIVEN HYDRAULIC PUMP

MOUNTING NUT (6 PLACES)

ACCESSORY CASE DRIVE PAD

SUCTION HOSE

PRESSURE HOSE

CASE DRAIN HOSE

SUPPORT BRACKET

Engine Driven Hydraulic Pump -- Installation  
Figure 201

HA2-4462A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

4. Inspection/Check Engine-Driven Hydraulic Pump

A. Check Engine-Driven Hydraulic Pump

- (1) Start engines No. 2 and 3 (see Chapter 71).
- (2) Place hydraulic system selector control lever in general system (normal) position.
- (3) Check hydraulic pressure indicator for 2800- to 3000-psi system pressure.
- (4) Operate wing flaps through a complete cycle of operation.

**WARNING:** BEFORE OPERATING FLAPS, MAKE CERTAIN THAT FLAP AREA IS CLEAR OF PERSONNEL AND OBSTRUCTIONS.

- (5) Place both engine-driven pump control switches in bypass position. Hydraulic pressure should drop to approximately zero psi.
- (6) Place one control switch in on position. Hydraulic pressure should build up to 2800- to 3000-psi.
- (7) Return switch to bypass position.
- (8) Place other switch in on position. Hydraulic pressure should build up to 2800- to 3000-psi.
- (9) Place both switches in on position for normal operation.
- (10) Shut down engines (see Chapter 71).
- (11) Check hydraulic pumps, hoses, and fittings for leaks.
- (12) Check hose connections and pumps for security of attachment.
- (13) Check electrical connectors on bypass solenoids for security of attachment and general condition.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

ENGINE-DRIVEN HYDRAULIC PUMP - MAINTENANCE PRACTICES

1. General

- A. The engine-driven hydraulic pumps are located, one each, on the accessory drive case of each inboard engine.
- B. Access to the hydraulic pumps is through the engine nacelle doors.
- C. Removal/installation procedures for the left and right engine-driven hydraulic pumps are identical, except as noted. Inspection/check procedures for the left and right engine-driven hydraulic pumps are identical.

2. Tools and Equipment Required

- A. Grease, Electro-Moly/92 (Electrofilm Incorp.), or equivalent, is used for lubrication of hydraulic pump shaft splines.

3. Removal/Installation Engine-Driven Hydraulic Pumps

A. Remove Engine-Driven Hydraulic Pump

- (1) Open engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Place fire control handles in fuel, air, and hydraulic off position.
- (3) Disconnect case drain hose from case drain port.

CAUTION: THE FIRE DETECTOR SENSING ELEMENTS WHICH ARE INSTALLED WITHIN ENGINE AREA ARE VERY SENSITIVE. PHYSICAL CONTACT WITH THESE ELEMENTS CAN CAUSE HIDDEN DAMAGE. A CONSTANT DIMENSION MUST BE MAINTAINED BETWEEN ELEMENTS AND THEIR SUPPORTING STRUCTURE. A MINIMUM CLEARANCE OF 3/4-INCH MUST BE MAINTAINED BETWEEN ELEMENTS AND ENGINE COMPONENTS AND LINES.

- (4) Disconnect pressure line from outlet port.
- (5) Disconnect suction hose from suction port.
- (6) Disconnect electrical connector from bypass solenoid.
- (7) Remove pump.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) Remove heat shield from pump (airplanes 812-815).
- (9) Remove hydraulic fittings from pump ports and retain for use on new pump.

NOTE: In the event the pump is removed due to a malfunction of the pump, and physical internal damage is suspected, the following filters and check valves should be removed and cleaned, or replaced.

- (a) Dual filter and relief valve filter.
- (b) Hydraulic reservoir return fluid filter.
- (c) Engine-driven pump return line (case drain) check valve, located in pylon.
- (d) Engine-driven pump pressure line check valve, located in pylon.
- (e) Case drain filter and line check valve.

B. Install Engine-Driven Hydraulic Pump

- (1) Make certain that engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel is open.
- (2) Install fittings in pump pressure, suction, and case drain ports.
- (3) Lubricate pump shaft splines with Electro-Moly/92 grease.
- (4) Install heat shield on pump (airplanes 812-815).
- (5) Check gasket in pump mounting flange (on engine side) for general condition before installing pump.
- (6) Install pump on engine accessory pad and secure.

CAUTION: THE FIRE DETECTOR SENSING ELEMENTS WHICH ARE INSTALLED WITHIN ENGINE AREA ARE VERY SENSITIVE. PHYSICAL CONTACT WITH THESE ELEMENTS CAN CAUSE HIDDEN DAMAGE. A CONSTANT DIMENSION MUST BE MAINTAINED BETWEEN ELEMENTS AND THEIR SUPPORTING STRUCTURE. A MINIMUM CLEARANCE OF 3/4-INCH MUST BE MAINTAINED BETWEEN ELEMENTS AND ENGINE COMPONENTS AND LINES.

- (7) Connect pressure line hose to pump outlet port.
- (8) Connect suction hose to pump suction port.



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (9) Fill pump case with clean hydraulic fluid through case drain port.

CAUTION: BEFORE OPERATING THE ENGINE-DRIVEN HYDRAULIC PUMP, PUMP MUST BE FILLED WITH CLEAN HYDRAULIC FLUID THROUGH CASE DRAIN PORT TO PREVENT PUMP FROM OPERATING WITHOUT LUBRICATION DURING SELF-PRIMING PERIOD.

- (10) Connect case drain hose to pump case drain port.
- (11) Connect electrical connector to bypass solenoid.
- (12) Place fire control handles in normal position.
- (13) Bleed entrapped air from suction hose of pump.
- (14) Reset generator (see Chapter 24).
- (15) Close engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel.
- (16) Check operation of engine-driven hydraulic pump during next scheduled engine run (see paragraph 4).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

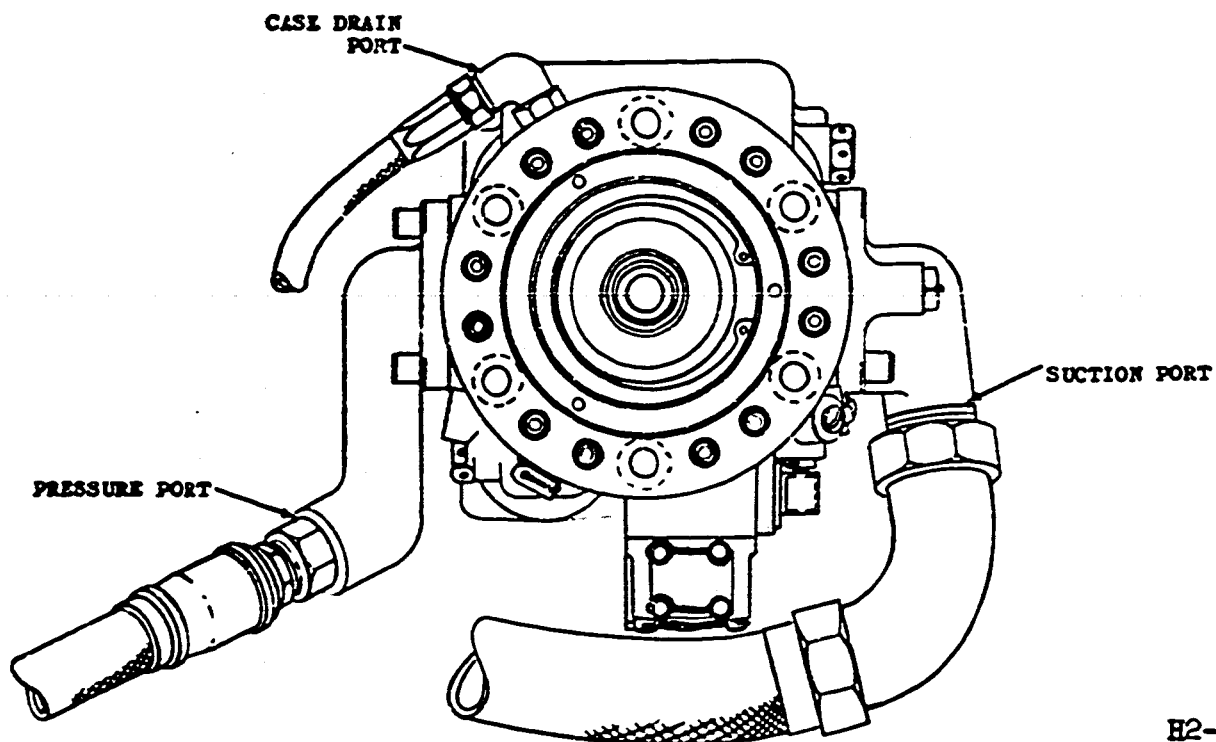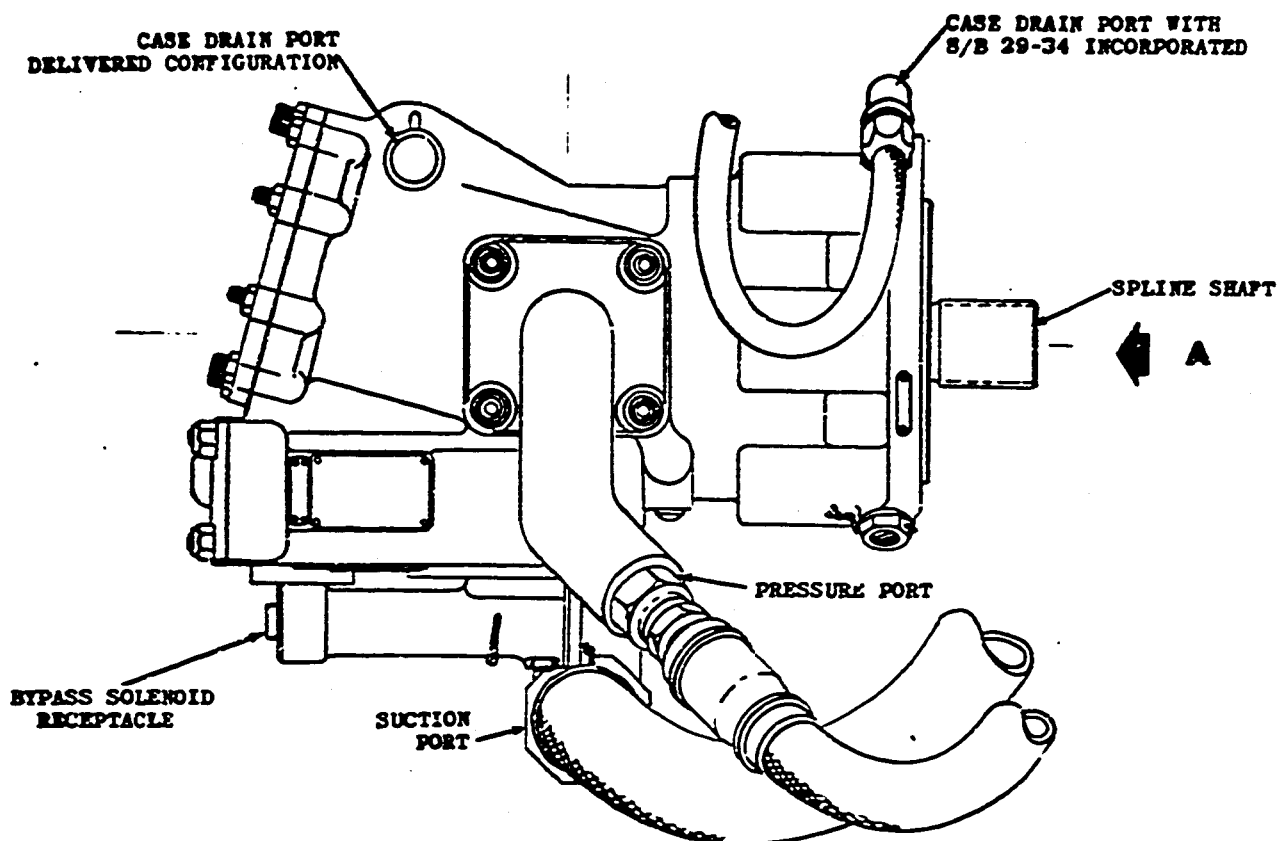


**VIEW A**

Engine Driven Hydraulic Pump -- External View  
 (Airplanes 801-811)  
 Figure 201 (Sheet 1)

H2-5245

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

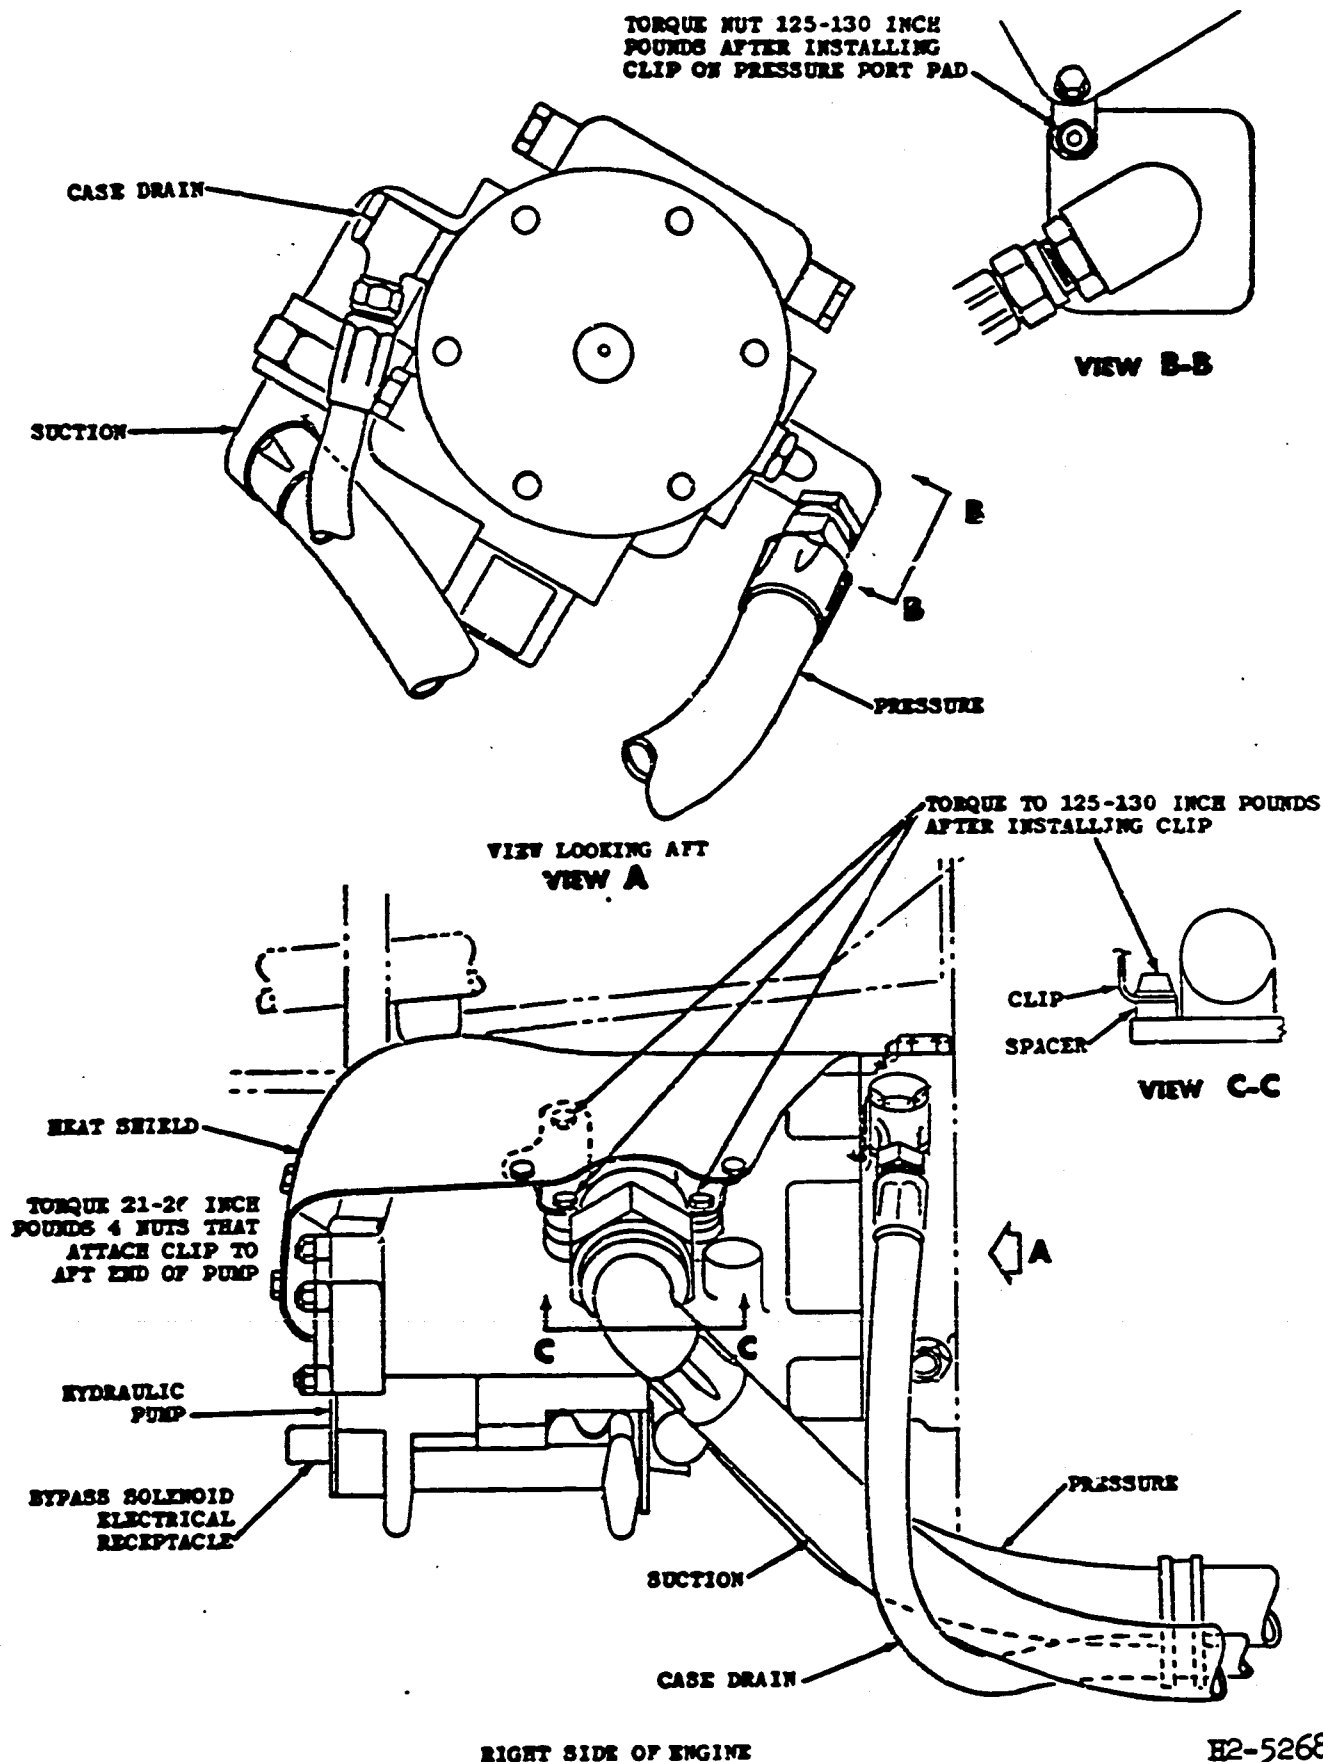


Engine Driven Hydraulic Pump -- External View  
 (Airplanes 812-815)  
 Figure 201 (Sheet 2)

Jan 15/68


Printed in U.S.A.

29-10-12  
 CODE 7  
 Page 205

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

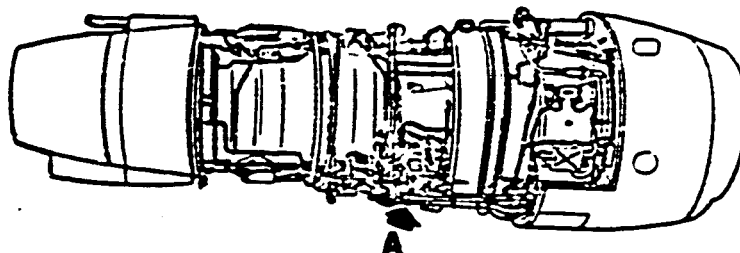

RIGHT SIDE OF INBOARD ENGINES (NO. 2 AND NO. 3)

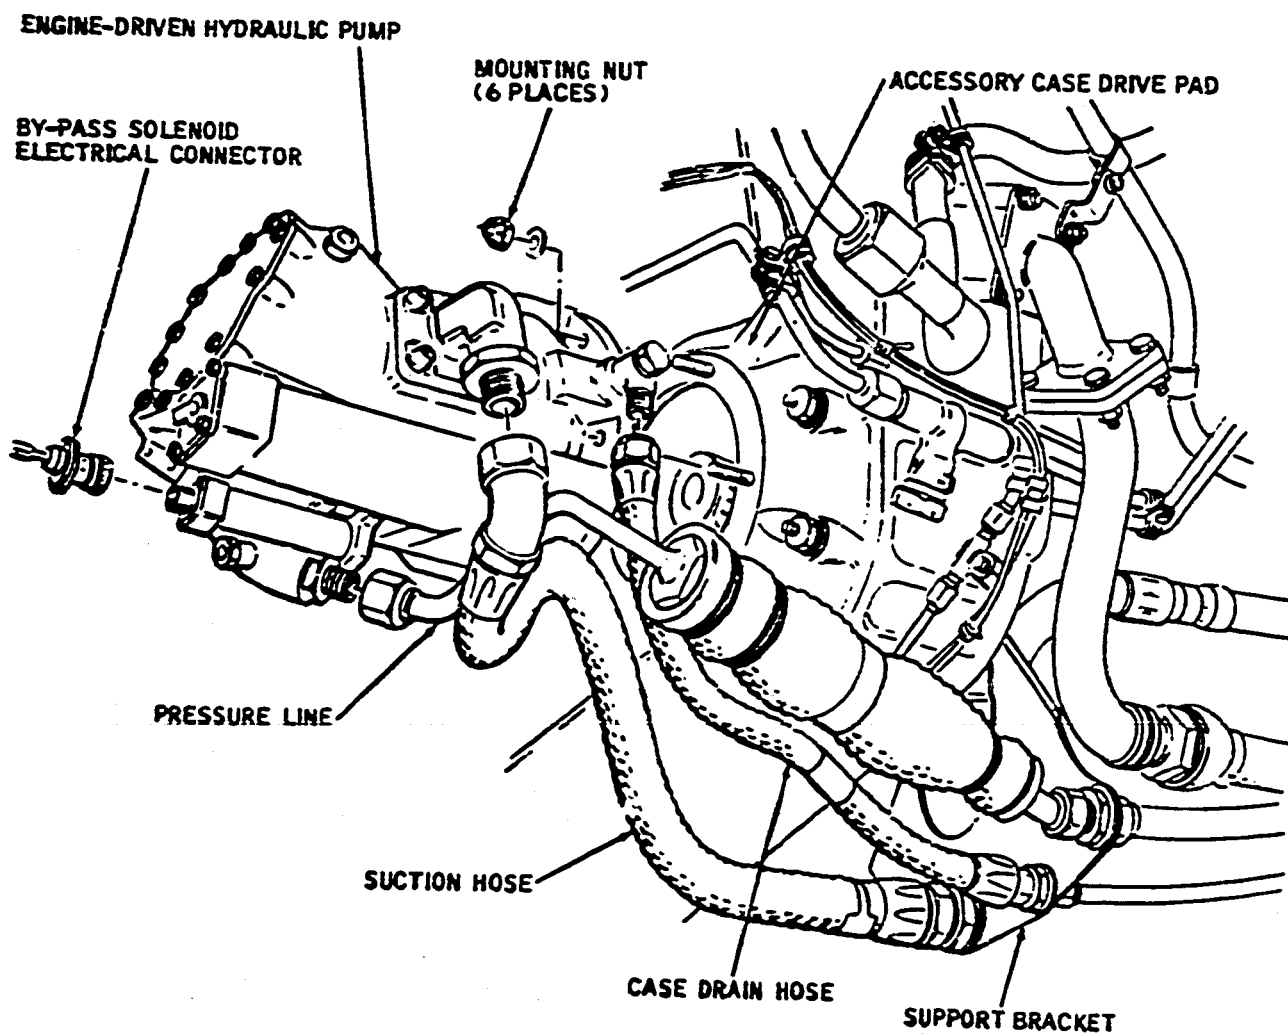

VIEW A

HA2-2153

Engine-Driven Hydraulic Pump -- Installation  
 (Airplanes 816-822, 860-866)  
 Figure 201 (Sheet 3)


29-10-12  
 CODE 7  
 Page 206

Aug 1/68


Printed in U.S.A.



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

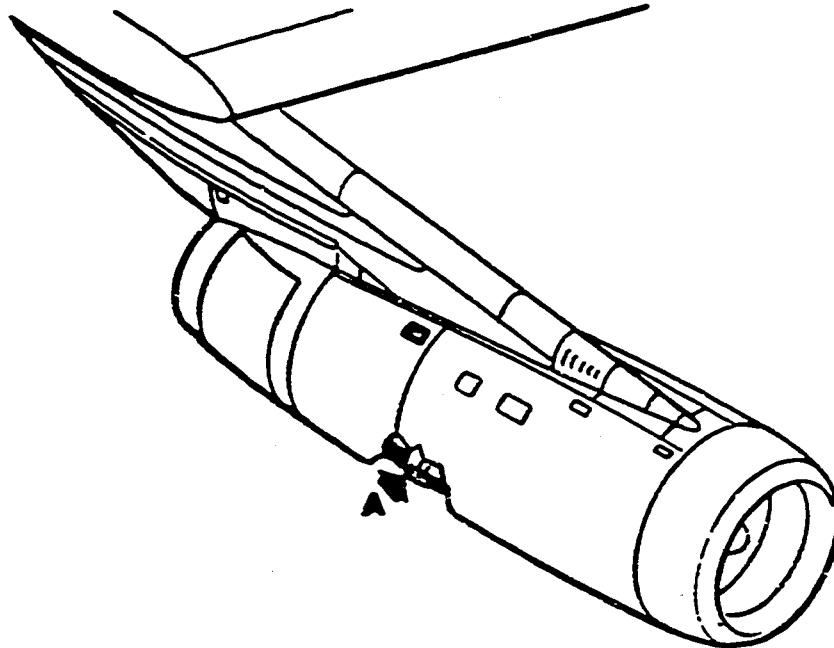

RIGHT SIDE OF INBOARD ENGINES (NO. 2 AND NO. 3)

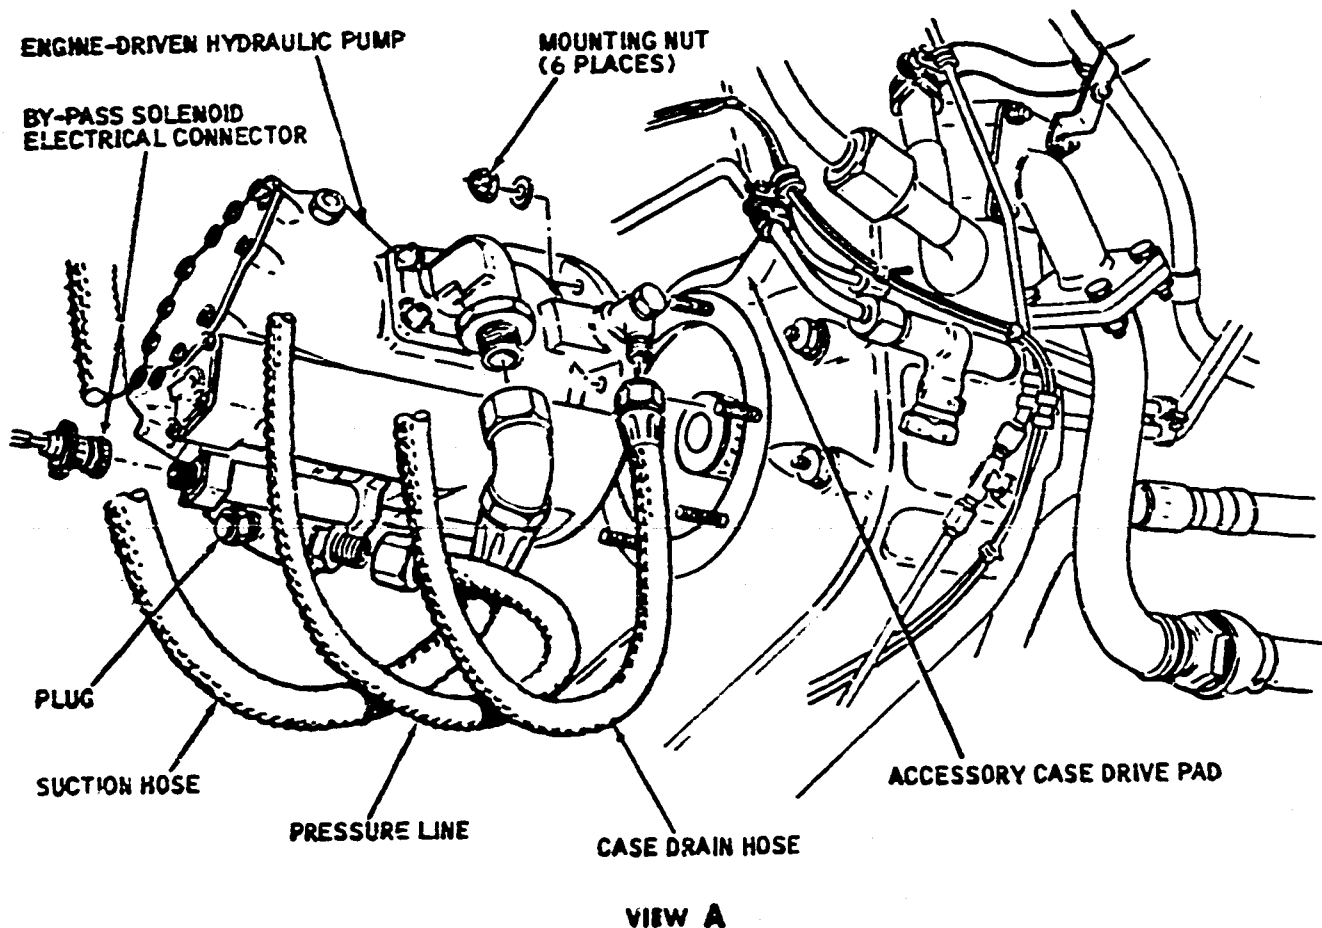

Engine-Driven Hydraulic Pump -- Installation  
 (Airplanes 867 and Subsequent)  
 Figure 201 (Sheet 4)

HA2-1342

29-10-12  
 CODE 7  
 Page 207

Aug 1/68

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

4. Inspection/Check Engine-Driven Hydraulic Pump

A. Check Engine-Driven Hydraulic Pump

- (1) Start engine No. 2 and 3 (see Chapter 71).
- (2) Place hydraulic system selector control lever in general system (normal) position.
- (3) Check hydraulic pressure indicator for 2800- to 3000-psi system pressure.
- (4) Operate wing flaps through a complete cycle of operation.

WARNING: BEFORE OPERATING FLAPS, MAKE CERTAIN THAT FLAP AREA IS CLEAR OF PERSONNEL AND OBSTRUCTIONS.

- (5) Place both engine-driven pump control switches in bypass position. Hydraulic pressure should drop to approximately zero psi.
- (6) Place one control switch in on position. Hydraulic pressure should build up to 2800- to 3000-psi.
- (7) Return switch to bypass position.
- (8) Place other switch in on position. Hydraulic pressure should build up to 2800- to 3000-psi.
- (9) Place both switches in on position for normal operation.
- (10) Shut down engines (see Chapter 71).
- (11) Check hydraulic pump, hoses, and fittings for leaks.
- (12) Check hose connections and pump for security of attachment.
- (13) Check electrical connector on bypass solenoid for security of attachment and general condition.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

ENGINE-DRIVEN HYDRAULIC PUMP - MAINTENANCE PRACTICES

1. General

- A. The engine-driven hydraulic pumps are located, one each, on the accessory drive case of each inboard engine.
- B. Access to the hydraulic pumps is through the engine nacelle doors and removal of the engine bypass duct (see Chapter 78).
- C. Removal/installation procedures for the left and right engine-driven hydraulic pumps are identical, except as noted. Inspection/check procedures for the left and right engine-driven hydraulic pumps are identical.

2. Tools and Equipment Required

- A. Grease, Electro-Moly/92 (Electrofilm Incorp.), or equivalent, is used for lubrication of hydraulic pump shaft splines.

3. Removal/Installation Engine-Driven Hydraulic Pumps

A. Remove Engine-Driven Hydraulic Pump

- (1) Open engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Place fire control handles in fuel, air, and hydraulic off position.
- (3) Disconnect case drain hose from case drain port.

CAUTION: THE FIRE DETECTOR SENSING ELEMENTS WHICH ARE INSTALLED WITHIN ENGINE AREA ARE VERY SENSITIVE. PHYSICAL CONTACT WITH THESE ELEMENTS CAN CAUSE HIDDEN DAMAGE. A CONSTANT DIMENSION MUST BE MAINTAINED BETWEEN ELEMENTS AND THEIR SUPPORTING STRUCTURE. A MINIMUM CLEARANCE OF 3/4-INCH MUST BE MAINTAINED BETWEEN ELEMENTS AND ENGINE COMPONENTS AND LINES.

- (4) Disconnect pressure line from outlet port.
- (5) Disconnect suction hose from suction port.
- (6) Disconnect electrical connector from bypass solenoid.
- (7) Remove pump.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) Remove hydraulic fittings from pump ports and retain for use on new pump.

NOTE: In the event the pump is removed due to a malfunction of the pump, and physical internal damage is suspected, the following filters and check valves should be removed and cleaned, or replaced.

- (a) Dual filter and relief valve filter.
- (b) Hydraulic reservoir return fluid filter.
- (c) Engine-driven pump return line (case drain) check valve, located in pylon.
- (d) Engine-driven pump pressure line check valve, located in pylon.
- (e) Case drain filter and line check valve.

B. Install Engine-Driven Hydraulic Pump

- (1) Make certain that engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel are open.
- (2) Install fittings in pump pressure, suction, and case drain ports.
- (3) Lubricate pump shaft splines with Electro-Moly/92 grease.
- (4) Check gasket in pump mounting flange (on engine side) for general condition before installing pump.
- (5) Install pump on engine accessory pad and secure.

CAUTION: THE FIRE DETECTOR SENSING ELEMENTS WHICH ARE INSTALLED WITHIN ENGINE AREA ARE VERY SENSITIVE. PHYSICAL CONTACT WITH THESE ELEMENTS CAN CAUSE HIDDEN DAMAGE. A CONSTANT DIMENSION MUST BE MAINTAINED BETWEEN ELEMENTS AND THEIR SUPPORTING STRUCTURE. A MINIMUM CLEARANCE OF 3/4-INCH MUST BE MAINTAINED BETWEEN ELEMENTS AND ENGINE COMPONENTS AND LINES.



- (6) Connect pressure line hose to pump outlet port.
- (7) Connect suction hose to pump suction port.
- (8) Fill pump case with clean hydraulic fluid through case drain port.

CAUTION: BEFORE OPERATING THE ENGINE-DRIVEN HYDRAULIC PUMP, PUMP MUST BE FILLED WITH CLEAN HYDRAULIC FLUID THROUGH CASE DRAIN PORT TO PREVENT PUMP FROM OPERATING WITHOUT LUBRICATION DURING SELF-PRIMING PERIOD.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (9) Connect case drain hose to pump case drain port.
- (10) Connect electrical connector to bypass solenoid.
- (11) Place fire control handles in normal position.
- (12) Bleed entrapped air from suction hose of pump.
- (13) Reset generator (see Chapter 24).
- (14) Close engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel.
- (15) Check operation of engine-driven hydraulic pump during next scheduled engine run (see paragraph 4).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

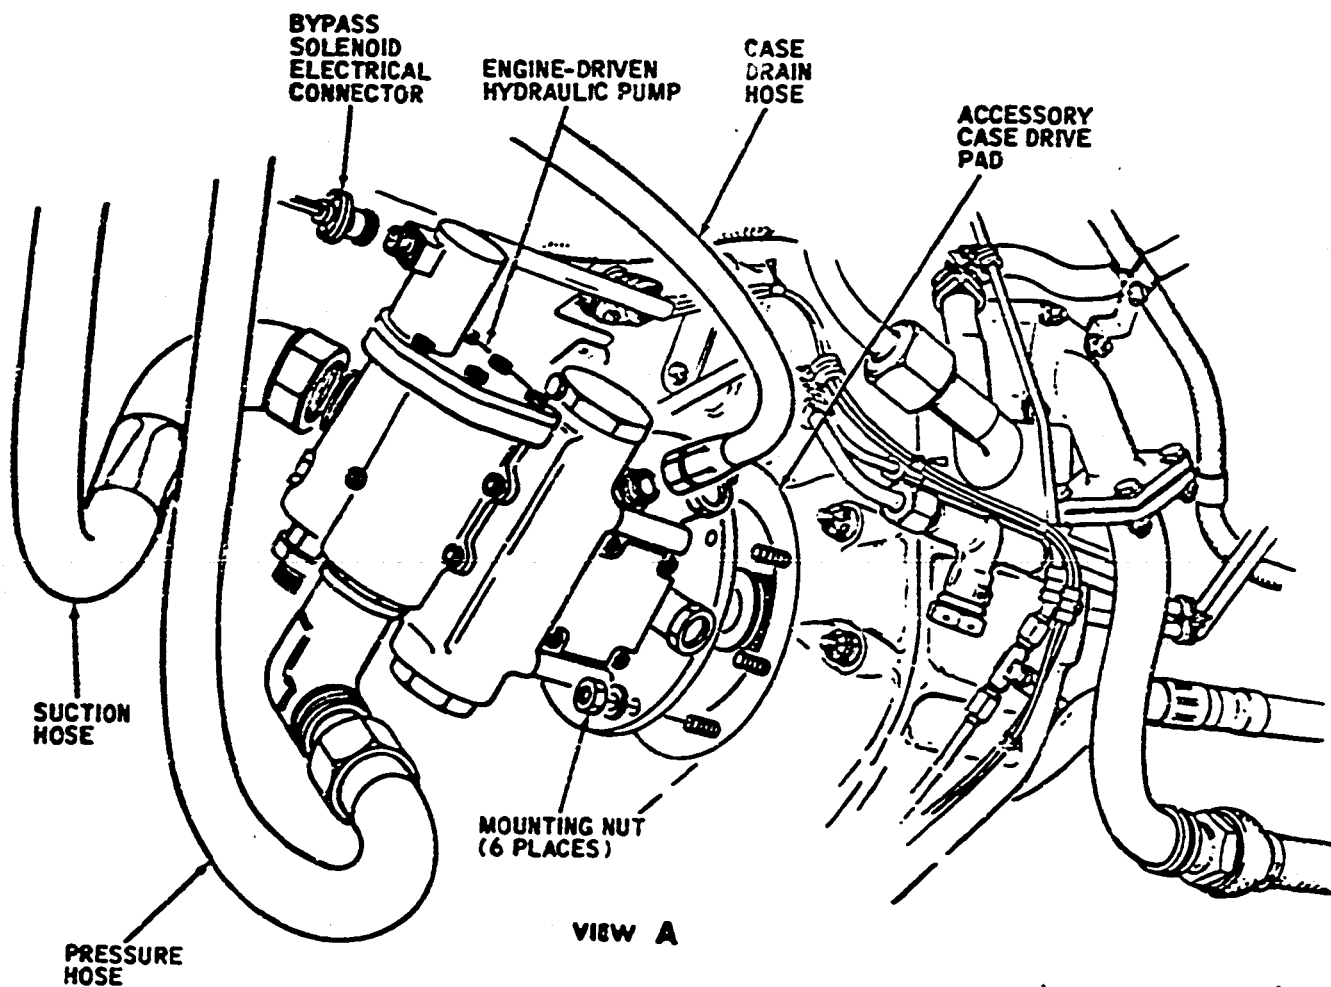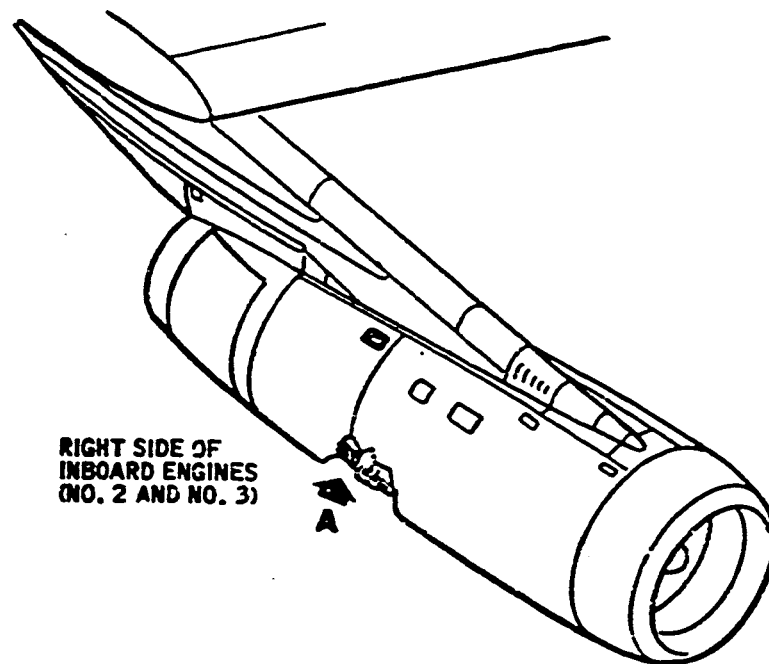

29-10-12  
 CODE 8  
 Page 204

Engine Driven Hydraulic Pump -- Installation  
 Figure 201

HA2-4735

Jan 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

4. Inspection/Check Engine-Driven Hydraulic Pump

A. Check Engine-Driven Hydraulic Pump

- (1) Start engines No. 2 and 3 (see Chapter 71).
- (2) Place hydraulic system selector control lever in general system (normal) position.
- (3) Check hydraulic pressure indicator for 2800- to 3000-psi system pressure.
- (4) Operate wing flaps through a complete cycle of operation.

WARNING: BEFORE OPERATING FLAPS, MAKE CERTAIN THAT FLAP AREA IS CLEAR OF PERSONNEL AND OBSTRUCTIONS.

- (5) Place both engine-driven pump control switches in bypass position. Hydraulic pressure should drop to approximately zero psi.
- (6) Place one control switch in on position. Hydraulic pressure should build up to 2800- to 3000-psi.
- (7) Return switch to bypass position.
- (8) Place other switch in on position. Hydraulic pressure should build up to 2800- to 3000-psi.
- (9) Place both switches in on position for normal operation.
- (10) Shut down engines (see Chapter 71).
- (11) Check hydraulic pumps, hoses, and fittings for leaks.
- (12) Check hose connections and pumps for security of attachment.
- (13) Check electrical connectors on bypass solenoids for security of attachment and general condition.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

ENGINE-DRIVEN HYDRAULIC PUMP - MAINTENANCE PRACTICES

1. General

- A. The engine-driven hydraulic pumps are located, one each, on the accessory drive case of each inboard engine.
- B. Access to the hydraulic pumps is through the engine nacelle doors.
- C. Removal/installation procedures for the left and right engine-driven hydraulic pumps are identical, except as noted. Inspection/check procedures for the left and right engine-driven hydraulic pumps are identical.

2. Tools and Equipment Required

- A. Grease, Electro-Moly/92 (Electrofilm Incorp.), or equivalent, is used for lubrication of hydraulic pump shaft splines.

3. Removal/Installation Engine-Driven Hydraulic Pumps

A. Remove Engine-Driven Hydraulic Pump

- (1) Open engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Place fire control handles in fuel, air, and hydraulic off position.
- (3) Disconnect case drain hose from case drain port.

CAUTION: THE FIRE DETECTOR SENSING ELEMENTS WHICH ARE INSTALLED WITHIN ENGINE AREA ARE VERY SENSITIVE. PHYSICAL CONTACT WITH THESE ELEMENTS CAN CAUSE HIDDEN DAMAGE. A CONSTANT DIMENSION MUST BE MAINTAINED BETWEEN ELEMENTS AND THEIR SUPPORTING STRUCTURE. A MINIMUM CLEARANCE OF 3/4-INCH MUST BE MAINTAINED BETWEEN ELEMENTS AND ENGINE COMPONENTS AND LINES.

- (4) Disconnect pressure line from outlet port.
- (5) Disconnect suction hose from suction port.
- (6) Disconnect electrical connectors from bypass solenoid and low pressure switch.
- (7) Remove pump.



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) Remove hydraulic fittings from pump ports and retain for use on new pump.

NOTE: In the event an engine-driven hydraulic pump is operated without fluid, or if operated when main reservoir fluid level is less than 5 gallons, the pump(s) and its associated components, listed below, must be replaced prior to further service. Also, in the event the pump is removed due to a malfunction of the pump, and physical internal damage is suspected, the following filters and check valves should be removed and cleaned or replaced.

- (a) Dual filter and relief valve filter.
- (b) Hydraulic reservoir return fluid filter.
- (c) Engine-driven pump return line (case drain) check valve, located in pylon.
- (d) Engine-driven pump pressure line check valve, located in pylon.
- (e) Case drain filter and line check valve.

B. Install Engine-Driven Hydraulic Pump

- (1) Make certain that engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel is open.
- (2) Install fittings in pump pressure, suction, and case drain ports.
- (3) Lubricate pump shaft splines with Electro-Moly/92 grease.
- (4) Check gasket in pump mounting flange (on engine side) for general condition before installing pump.
- (5) Install pump on engine accessory pad and secure.

CAUTION: THE FIRE DETECTOR SENSING ELEMENTS WHICH ARE INSTALLED WITHIN ENGINE AREA ARE VERY SENSITIVE. PHYSICAL CONTACT WITH THESE ELEMENTS CAN CAUSE HIDDEN DAMAGE. A CONSTANT DIMENSION MUST BE MAINTAINED BETWEEN ELEMENTS AND THEIR SUPPORTING STRUCTURE. A MINIMUM CLEARANCE OF 3/4-INCH MUST BE MAINTAINED BETWEEN ELEMENTS AND ENGINE COMPONENTS AND LINES.

- (6) Connect pressure line hose to pump outlet port.
- (7) Connect suction hose to pump suction port.


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) Fill pump case with clean hydraulic fluid through case drain port.


CAUTION: BEFORE OPERATING THE ENGINE-DRIVEN HYDRAULIC PUMP, PUMP MUST BE FILLED WITH CLEAN HYDRAULIC FLUID THROUGH CASE DRAIN PORT TO PREVENT PUMP FROM OPERATING WITHOUT LUBRICATION DURING SELF-PRIMING PERIOD.

- (9) Connect case drain hose to pump case drain port.
- (10) Connect electrical connectors to bypass solenoid and low pressure switch.
- (11) Place fire control handles in normal position.
- (12) Bleed entrapped air from suction hose of pump.
- (13) Reset generator (see Chapter 24).
- (14) Close engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel.
- (15) Check operation of engine-driven hydraulic pump during next scheduled engine run (see Paragraph 4).

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

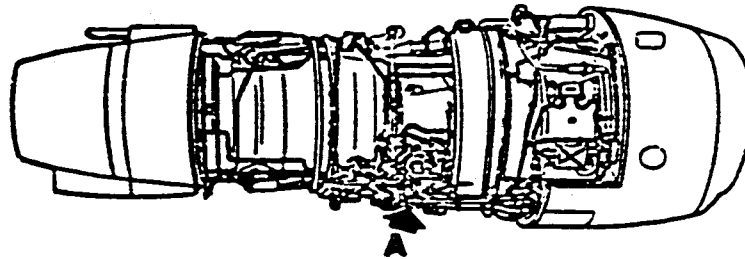

RIGHT SIDE OF INBOARD ENGINES (NO. 2 AND NO. 3)

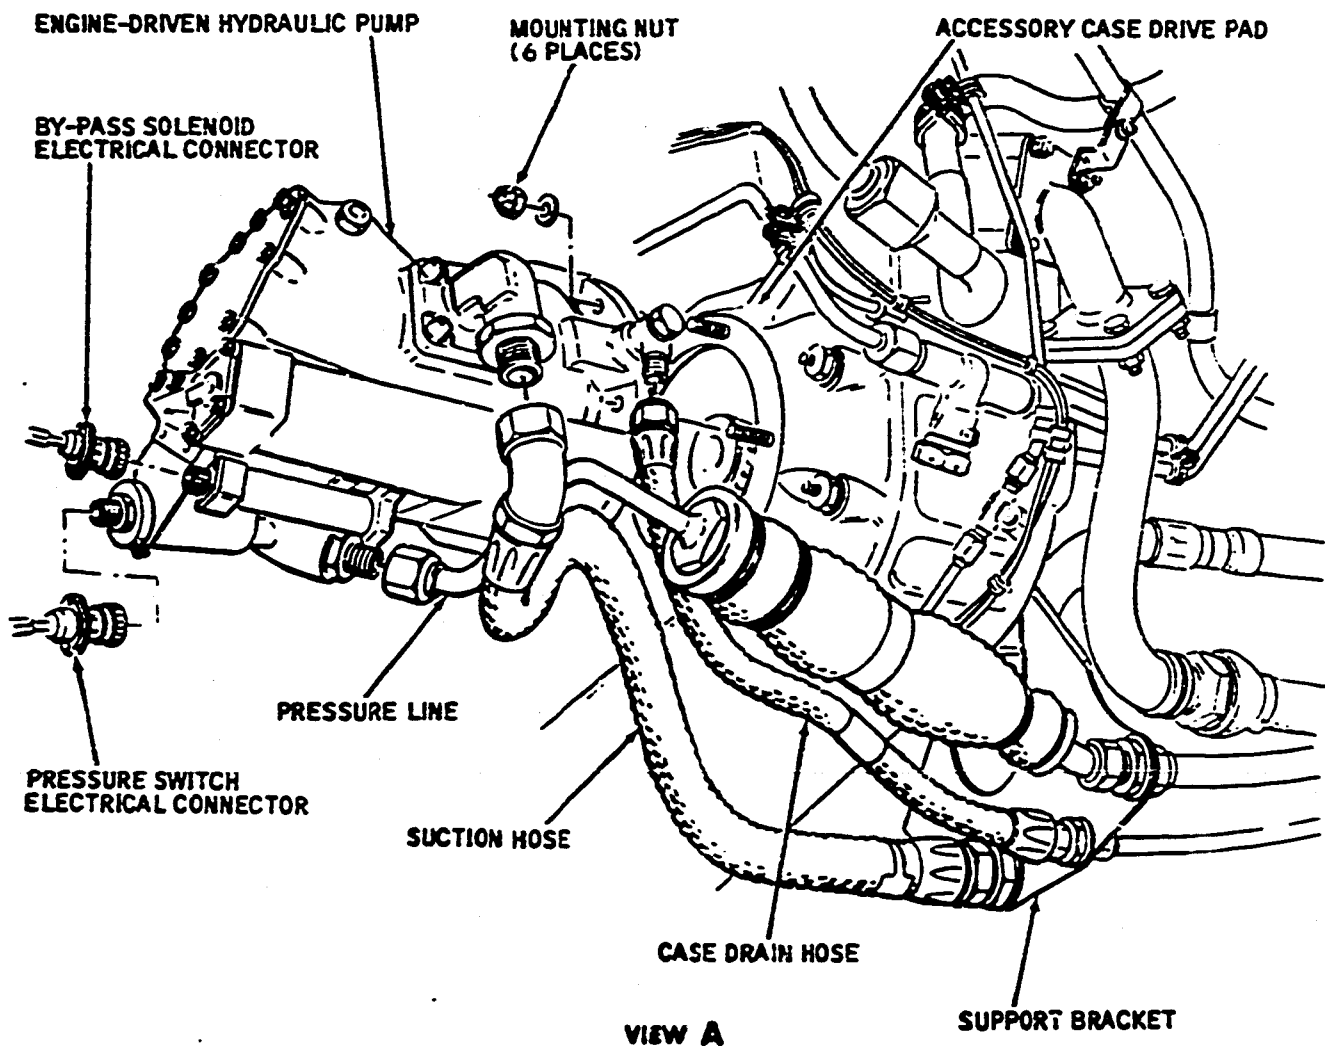


NA2-1343

Engine-Driven Hydraulic Pump -- Installation  
(Airplanes N8762-N8778)  
Figure 201 (Sheet 1)


29-10-12  
CODE 9  
Page 204

Oct 15/68

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

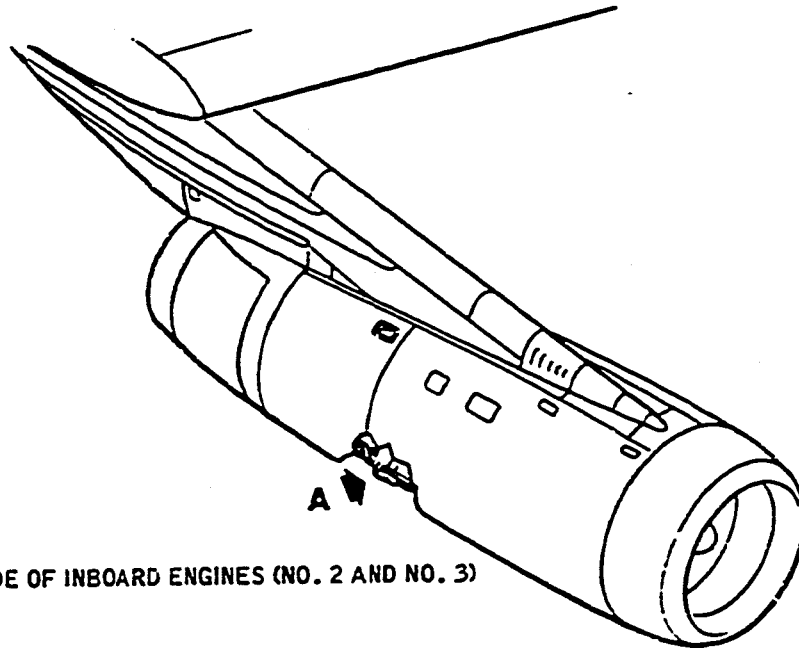

RIGHT SIDE OF INBOARD ENGINES (NO. 2 AND NO. 3)

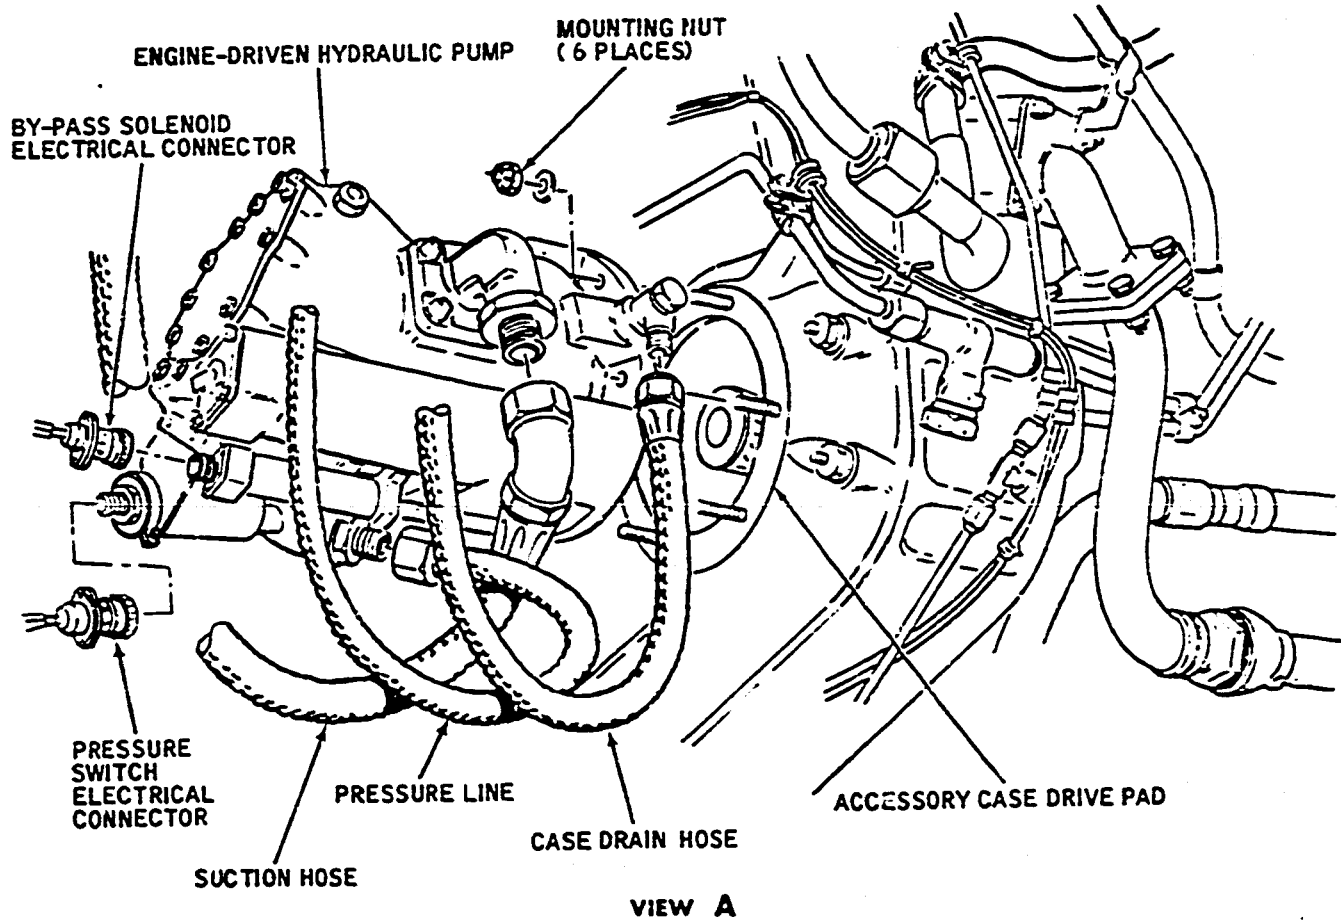

HA2-2193

Engine-Driven Hydraulic Pump -- Installation  
 (Airplanes N7855-N7860)  
 Figure 201 (Sheet 2)

29-10-12  
 CODE 9  
 Page 205

Aug 1/69

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

4. Inspection/Check Engine-Driven Hydraulic Pump

A. Check Engine-Driven Hydraulic Pump

- (1) Start engines No. 2 and 3 (see Chapter 71).
- (2) Place hydraulic system selector control lever in general system (normal) position.
- (3) Check hydraulic pressure indicator for 2800- to 3000-psi system pressure.
- (4) Operate wing flaps through a complete cycle of operation.

WARNING: BEFORE OPERATING FLAPS, MAKE CERTAIN THAT FLAP AREA IS CLEAR OF PERSONNEL AND OBSTRUCTIONS.

- (5) Place both engine-driven pump control switches in bypass position. Hydraulic pressure should drop to approximately zero psi.
- (6) Place one control switch in on position. Hydraulic pressure should build up to 2800- to 3000-psi.
- (7) Return switch to bypass position.
- (8) Place other switch in on position. Hydraulic pressure should build up to 2800- to 3000-psi.
- (9) Place both switches in on position for normal operation.
- (10) Shut down engines (see Chapter 71).
- (11) Check hydraulic pumps, hoses, and fittings for leaks.
- (12) Check hose connections and pumps for security of attachment.
- (13) Check electrical connectors on bypass solenoids and low pressure switches for security of attachment and general condition.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

ENGINE-DRIVEN HYDRAULIC PUMP - MAINTENANCE PRACTICES

1. General

- A. The engine-driven hydraulic pumps are located, one each, on the accessory drive case of each inboard engine.
- B. Access to the hydraulic pumps is through the engine nacelle doors and removal of the engine bypass duct (see Chapter 78).
- C. Removal/installation procedures for the left and right engine-driven hydraulic pumps are identical, except as noted. Inspection/check procedures for the left and right engine-driven hydraulic pumps are identical.

2. Tools and Equipment Required

- A. Grease, Electro-Moly/92 (Electrofilm Incorp.), or equivalent, is used for lubrication of hydraulic pump shaft splines.

3. Removal/Installation Engine-Driven Hydraulic Pumps

A. Remove Engine-Driven Hydraulic Pump

- (1) Open engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Place fire control handles in fuel, air, and hydraulic off position.
- (3) Disconnect case drain hose from disposable filter at case drain port.

CAUTION: THE FIRE DETECTOR SENSING ELEMENTS WHICH ARE INSTALLED WITHIN ENGINE AREA ARE VERY SENSITIVE. PHYSICAL CONTACT WITH THESE ELEMENTS CAN CAUSE HIDDEN DAMAGE. A CONSTANT DIMENSION MUST BE MAINTAINED BETWEEN ELEMENTS AND THEIR SUPPORTING STRUCTURE. A MINIMUM CLEARANCE OF 3/4-INCH MUST BE MAINTAINED BETWEEN ELEMENTS AND ENGINE COMPONENTS AND LINES.

- (4) Disconnect pressure line from outlet port.
- (5) Disconnect suction hose from suction port.
- (6) Disconnect electrical connector from bypass solenoid.
- (7) Remove pump.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) Remove hydraulic fittings and disposable filter from pump ports and retain for use on new pump.

NOTE: In the event the pump is removed due to a malfunction of the pump, and physical internal damage is suspected, the following filters and check valves should be removed and cleaned, or replaced.

- (a) Dual filter and relief valve filter.
- (b) Hydraulic reservoir return fluid filter.
- (c) Engine-driven pump return line (case drain) check valve, located in pylon.
- (d) Engine-driven pump pressure line check valve, located in pylon.
- (e) Disposable case drain filter.
- (f) Case drain filter and line check valve.

B. Install Engine-Driven Hydraulic Pump

- (1) Make certain that engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel are open.
- (2) Install fittings in pump pressure and suction ports.
- (3) Lubricate pump shaft splines with Electro-Moly/92 grease.
- (4) Check gasket in pump mounting flange (on engine side) for general condition before installing pump.
- (5) Install pump on engine accessory pad and secure.

CAUTION: THE FIRE DETECTOR SENSING ELEMENTS WHICH ARE INSTALLED WITHIN ENGINE AREA ARE VERY SENSITIVE. PHYSICAL CONTACT WITH THESE ELEMENTS CAN CAUSE HIDDEN DAMAGE. A CONSTANT DIMENSION MUST BE MAINTAINED BETWEEN ELEMENTS AND THEIR SUPPORTING STRUCTURE. A MINIMUM CLEARANCE OF 3/4-INCH MUST BE MAINTAINED BETWEEN ELEMENTS AND ENGINE COMPONENTS AND LINES.

- (6) Connect pressure line hose to pump outlet port.
- (7) Connect suction hose to pump suction port.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) Fill pump case with clean hydraulic fluid through case drain port.

**CAUTION:** BEFORE OPERATING THE ENGINE-DRIVEN HYDRAULIC PUMP, PUMP MUST BE FILLED WITH CLEAN HYDRAULIC FLUID THROUGH CASE DRAIN PORT TO PREVENT PUMP FROM OPERATING WITHOUT LUBRICATION DURING SELF-PRIMING PERIOD.

- (9) Install disposable filter in case drain port.
- (10) Connect case drain hose to disposable filter inlet port.
- (11) Connect electrical connector to bypass solenoid.
- (12) Place fire control handles in normal position.
- (13) Bleed entrapped air from suction hose of pump.
- (14) Reset generator (see Chapter 24).
- (15) Close engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel.
- (16) Check operation of engine-driven hydraulic pump during next scheduled engine run (see paragraph 4).

#### 4. Inspection/Check Engine-Driven Hydraulic Pump

##### A. Check Engine-Driven Hydraulic Pump



- (1) Start engines No. 2 and 3 (see Chapter 71).
- (2) Place hydraulic system selector control lever in general system (normal) position.
- (3) Check hydraulic pressure indicator for 2800- to 3000-psi system pressure.
- (4) Operate wing flaps through a complete cycle of operation.

**WARNING:** BEFORE OPERATING FLAPS, MAKE CERTAIN THAT FLAP AREA IS CLEAR OF PERSONNEL AND OBSTRUCTIONS.

- (5) Place both engine-driven pump control switches in bypass position. Hydraulic pressure should drop to approximately zero psi.
- (6) Place one control switch in on position. Hydraulic pressure should build up to 2800- to 3000-psi.
- (7) Return switch to bypass position.
- (8) Place other switch in on position. Hydraulic pressure should build up to 2800- to 3000-psi.



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

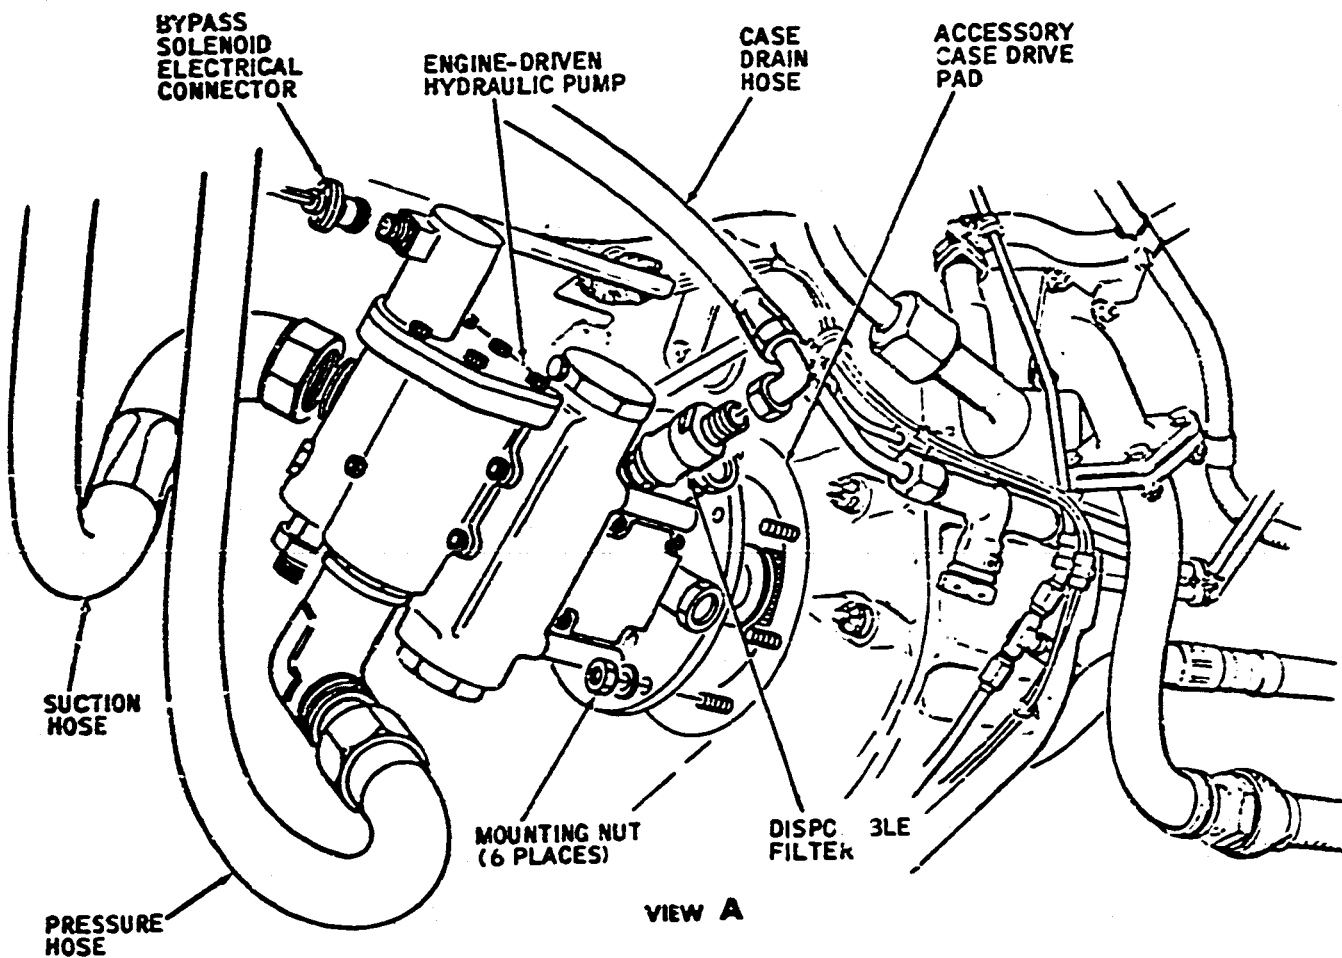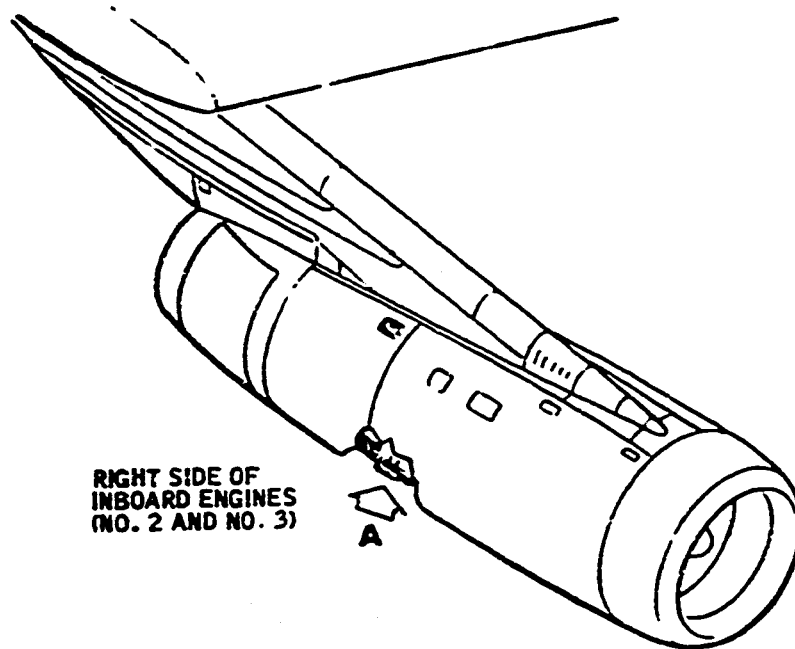

HA2-6047

29-10-12  
 CODE 10  
 Page 204

Engine Driven Hydraulic Pump -- Installation  
 Figure 201

Feb 1/69

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (9) Place both switches in on position for normal operation.
- (10) Shut down engines (see Chapter 71).
- (11) Check hydraulic pumps, hoses, and fittings for leaks.
- (12) Check hose connections and pumps for security of attachment.
- (13) Check electrical connectors on bypass solenoids for security of attachment and general condition.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

ENGINE-DRIVEN HYDRAULIC PUMP CHECK VALVES - MAINTENANCE PRACTICES

1. General

- A. Two check valves are provided in the lines from each engine-driven hydraulic pump. One valve is installed in the pressure line, the other is in the case drain line.
- B. The valves are mounted to the pylon firewall with bulkhead fitting jamnuts.
- C. Access to the valves is through an access door in the forward right apron of each inboard pylon.
- D. The removal and installation procedures for the four engine-driven hydraulic pump check valves are identical.

2. Removal/Installation Engine-Driven Hydraulic Pump Check Valves

A. Remove Check Valve

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Disconnect pump hose connected to inlet port of check valve.
- (5) Unseat check valve poppet and drain line into a clean container.
- (6) Disconnect hydraulic line connected to outlet port of check valve.
- (7) Remove jamnut from outlet port of check valve and remove check valve.

B. Install Check Valve

- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 is open.
- (2) Insert engine-driven hydraulic pump check valve into firewall and install jamnut. Flow arrow on check valve should point away from hydraulic pump.

Jun 15/67

Printed in U.S.A.

29-10-13  
CODE 1  
Page 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Connect hydraulic line to outlet port of check valve.
- (4) Connect hydraulic pump hose to inlet port of check valve.
- (5) Close auxiliary hydraulic pump control circuit breaker.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN  
FILTER - MAINTENANCE PRACTICES

1. General

- A. The engine-driven hydraulic pump case drain filters are located, one on each side of the airplane, on the aft side of the rear spar, opposite the leading edge of the inboard wing flaps.
- B. Access to the filters is by lowering the wing flaps.
- C. Removal/installation and inspection/check procedures for the left and right case drain filters are identical.

2. Removal/Installation Engine-Driven Hydraulic Pump Case Drain Filters

A. Remove Case Drain Filter

- (1) Lower wing flaps for access to hydraulic pump case drain filters.


WARNING: MAKE CERTAIN THAT WING FLAP AREA IS CLEAR OF PERSONNEL AND OBSTRUCTIONS.

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Disconnect hydraulic lines to inlet and outlet ports of filter.
- (5) Remove filter.
- (6) Remove fitting and check valve from filter ports and retain for use in new unit. Discard O-rings.

B. Install Case Drain Filter

- (1) Using new O-rings, install check valve in outlet port and fitting in inlet port.
- (2) Fill filter case and filter element with clean hydraulic fluid.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

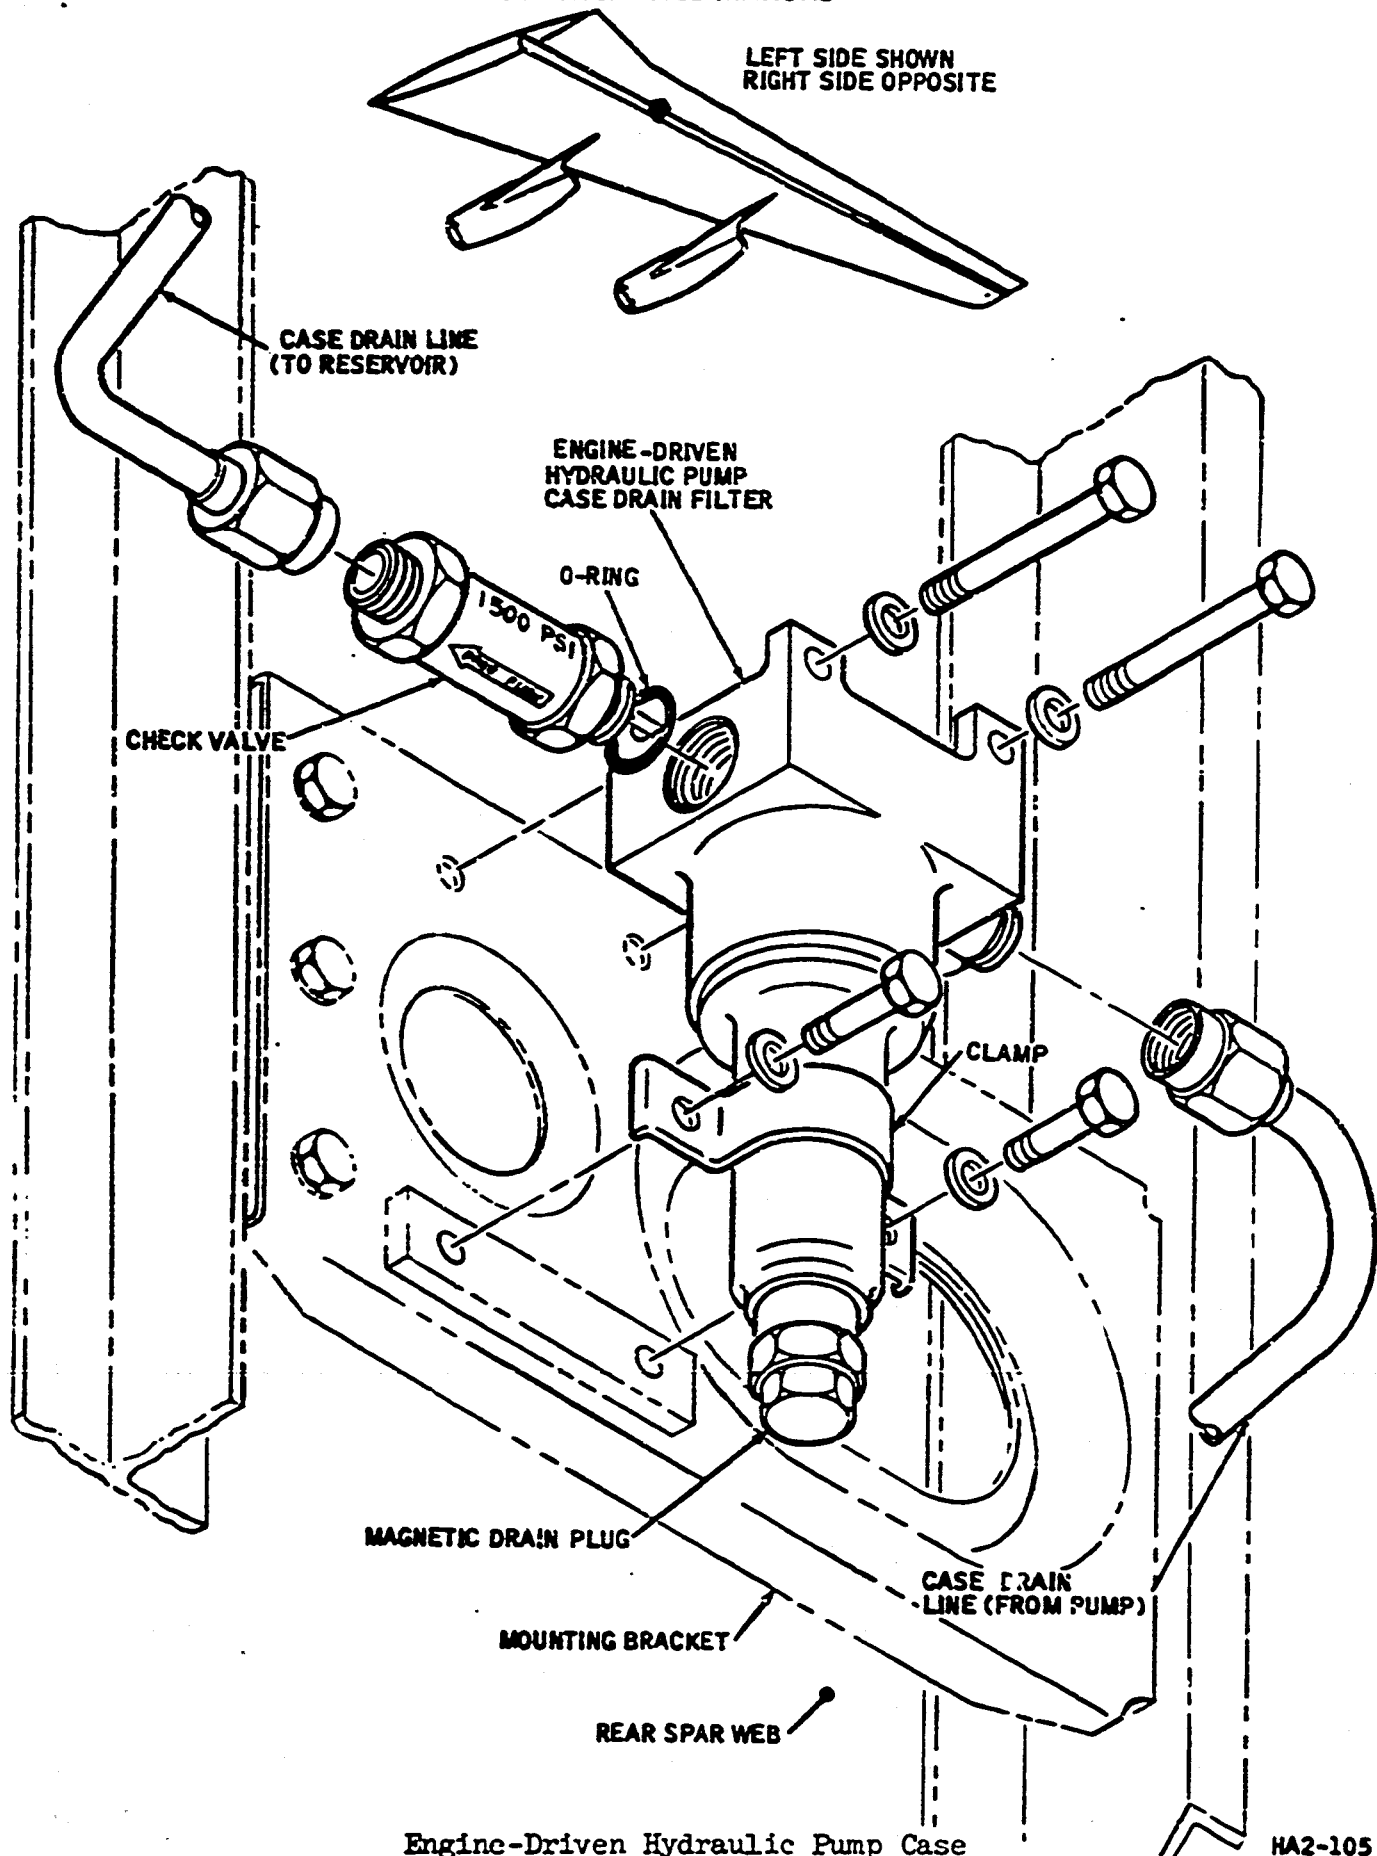

Engine-Driven Hydraulic Pump Case  
 Drain Filter -- Installation  
 Figure 201

HA2-105

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Install filter.
- (4) Connect hydraulic lines to inlet and outlet ports of filter.

3. Inspection/Check Engine-Driven Hydraulic Pump Case Drain Filter

A. Check Case Drain Filter

- (1) Pressurize hydraulic system with engine-driven hydraulic pump(s), (see 29-00, Maintenance Practices).
- (2) Visually check hydraulic pump case drain filter for general condition, security of attachment, and leaks.
- (3) Shut down engine(s) (see Chapter 71); depressurize hydraulic system (see 29-00, Maintenance Practices).
- (4) Remove magnetic drain plug from filter; check for metal particles.
- (5) Install magnetic drain plug. Tighten plug to torque of 150 ( $\pm 15$ ) inch-pounds torque. Safety plug with lockwire.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

ENGINE-DRIVEN HYDRAULIC PUMP CASE DRAIN FILTER ELEMENT -  
MAINTENANCE PRACTICES

1. General

- A. The engine-driven hydraulic pump case drain filters are located, one on each side of the airplane, on the aft side of the rear spar, opposite the leading edge of the inboard wing flaps.
- B. Access to the filters is by lowering the wing flaps.
- C. Removal/installation procedures for the left and right case drain filter elements are identical.

2. Removal/Installation Engine-Driven Hydraulic Pump Case Drain Filter Elements

A. Remove Case Drain Filter Element

- (1) Lower wing flaps for access to hydraulic pump case drain filters.

WARNING: MAKE CERTAIN THAT WING FLAP AREA IS CLEAR OF PERSONNEL AND OBSTRUCTIONS.

- (2) Remove filter bowl from filter head.
- (3) Remove filter element from filter head. Discard O-rings. Remove magnetic drain plug from filter bowl.


NOTE: To remove the filter element from the head, grasp the element firmly and gently rock from side to side while withdrawing the element from the filter head.

B. Install Case Drain Filter Element

- (1) Install new O-rings in filter head and in filter element.
- (2) Install filter element in filter head.
- (3) Fill filter bowl with clean hydraulic fluid.
- (4) Install filter bowl on filter head. Tighten bowl to torque of 120 to 180 inch-pounds.
- (5) Install magnetic drain plug in bottom of filter bowl. Tighten plug to torque of 150 ( $\pm 15$ ) inch-pounds.
- (6) Safety filter bowl and magnetic drain plug with lockwire.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

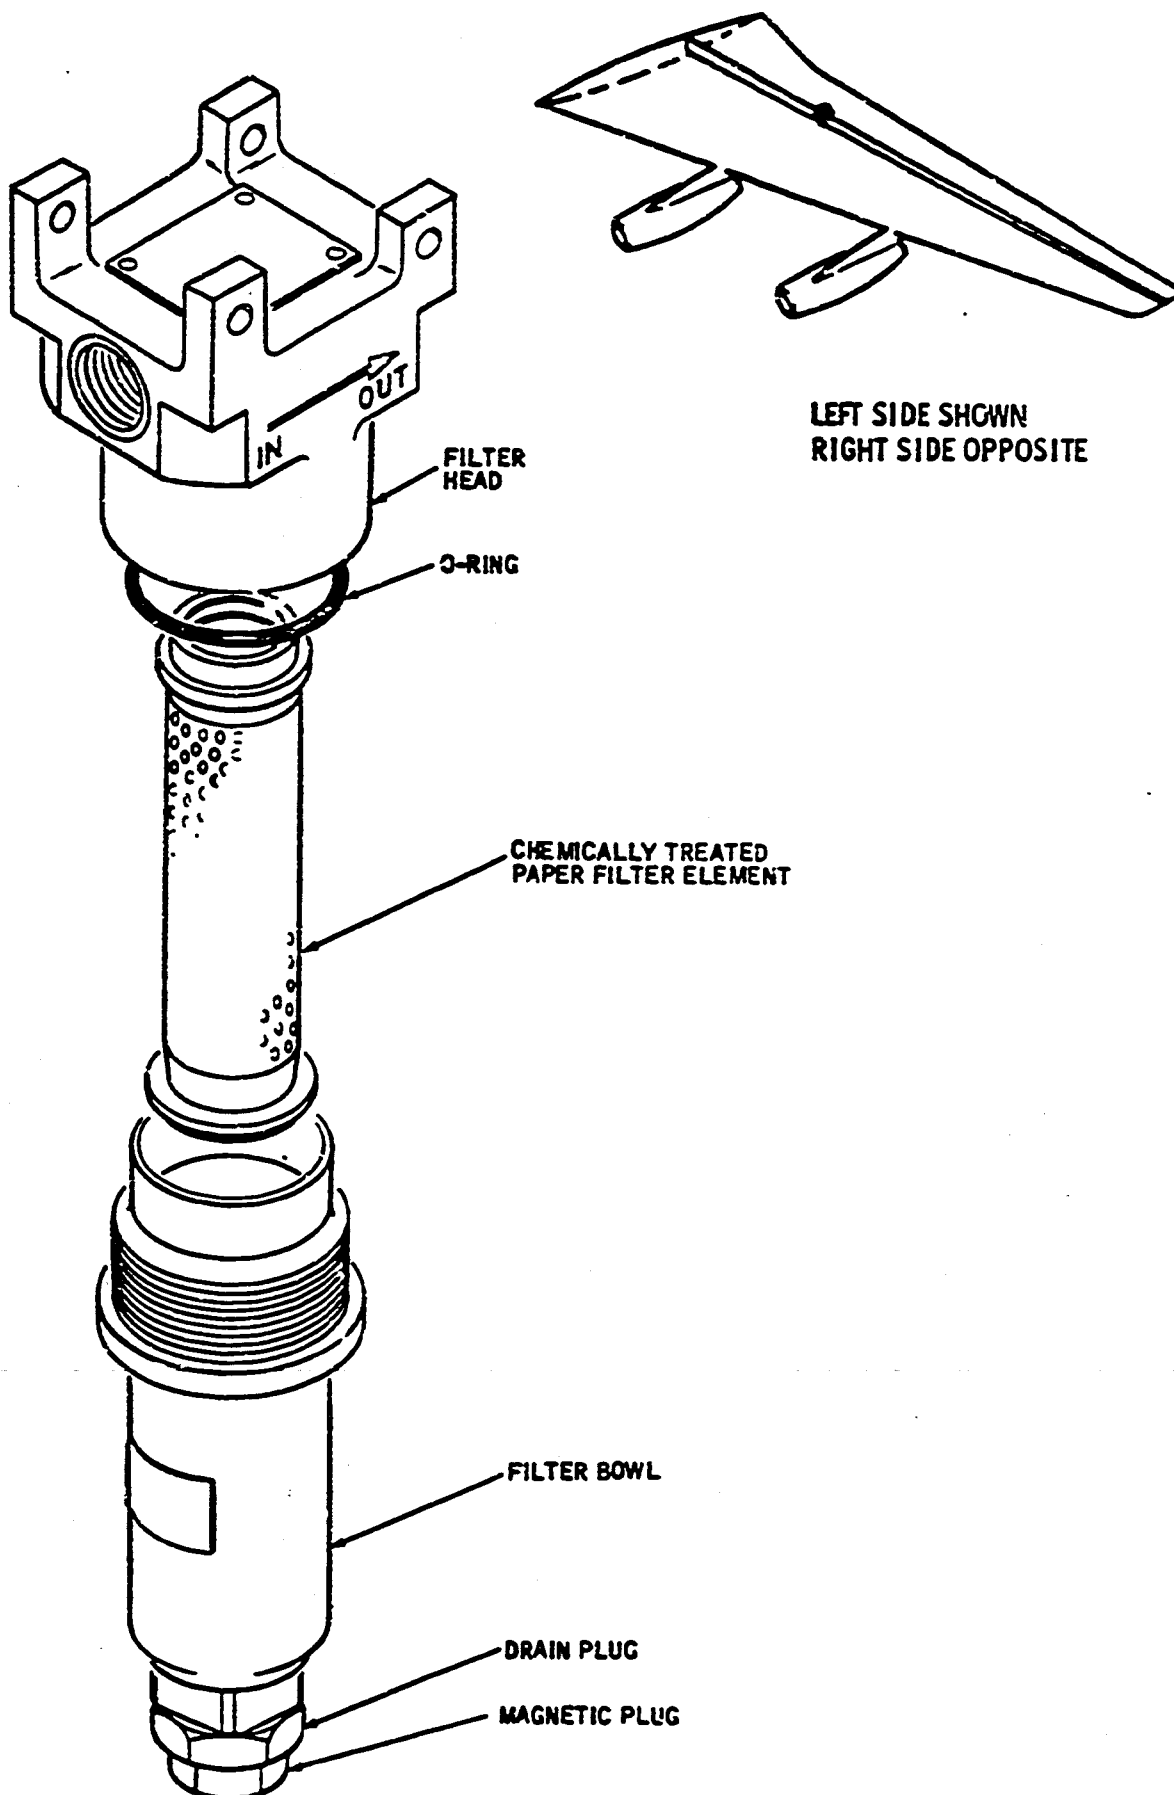

Engine-Driven Hydraulic Pump Case Drain  
Filter Element -- Installation  
Figure 201

HA2-112

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

DUAL-FILTER AND RELIEF VALVE - MAINTENANCE PRACTICES

1. General

- A. The dual-filter and relief valve is located in the left main gear wheel well on the lower portion of the wing rear spar, just outboard of the keel web.
- B. Access to the dual-filter and relief valve is through the left main gear inboard door.

2. Removal/Installation Dual-Filter and Relief Valve

A. Remove Dual-Filter and Relief Valve

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Disconnect lines from dual-filter and relief valve.
- (5) Remove dual-filter and relief valve.
- (6) Remove check valves and fitting from ports; retain for use in new unit. Discard O-rings.

B. Install Dual-Filter and Relief Valve

- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 is open.
- (2) Using new O-rings, install check valves and fittings in dual-filter and relief valve ports.

CAUTION: MAKE CERTAIN THAT THE FLOW ARROWS ON THE CHECK VALVES ARE POINTED IN THE PROPER DIRECTION.


- (3) Install dual-filter and relief valve.
- (4) Remove filter bowls from both sides of dual-filter and relief valve.
- (5) Fill bowls with clean hydraulic fluid.
- (6) Install bowls on dual-filter and relief valve.

Jun 15/67

Printed in U S A

29-10-16  
CODE 1  
Page 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

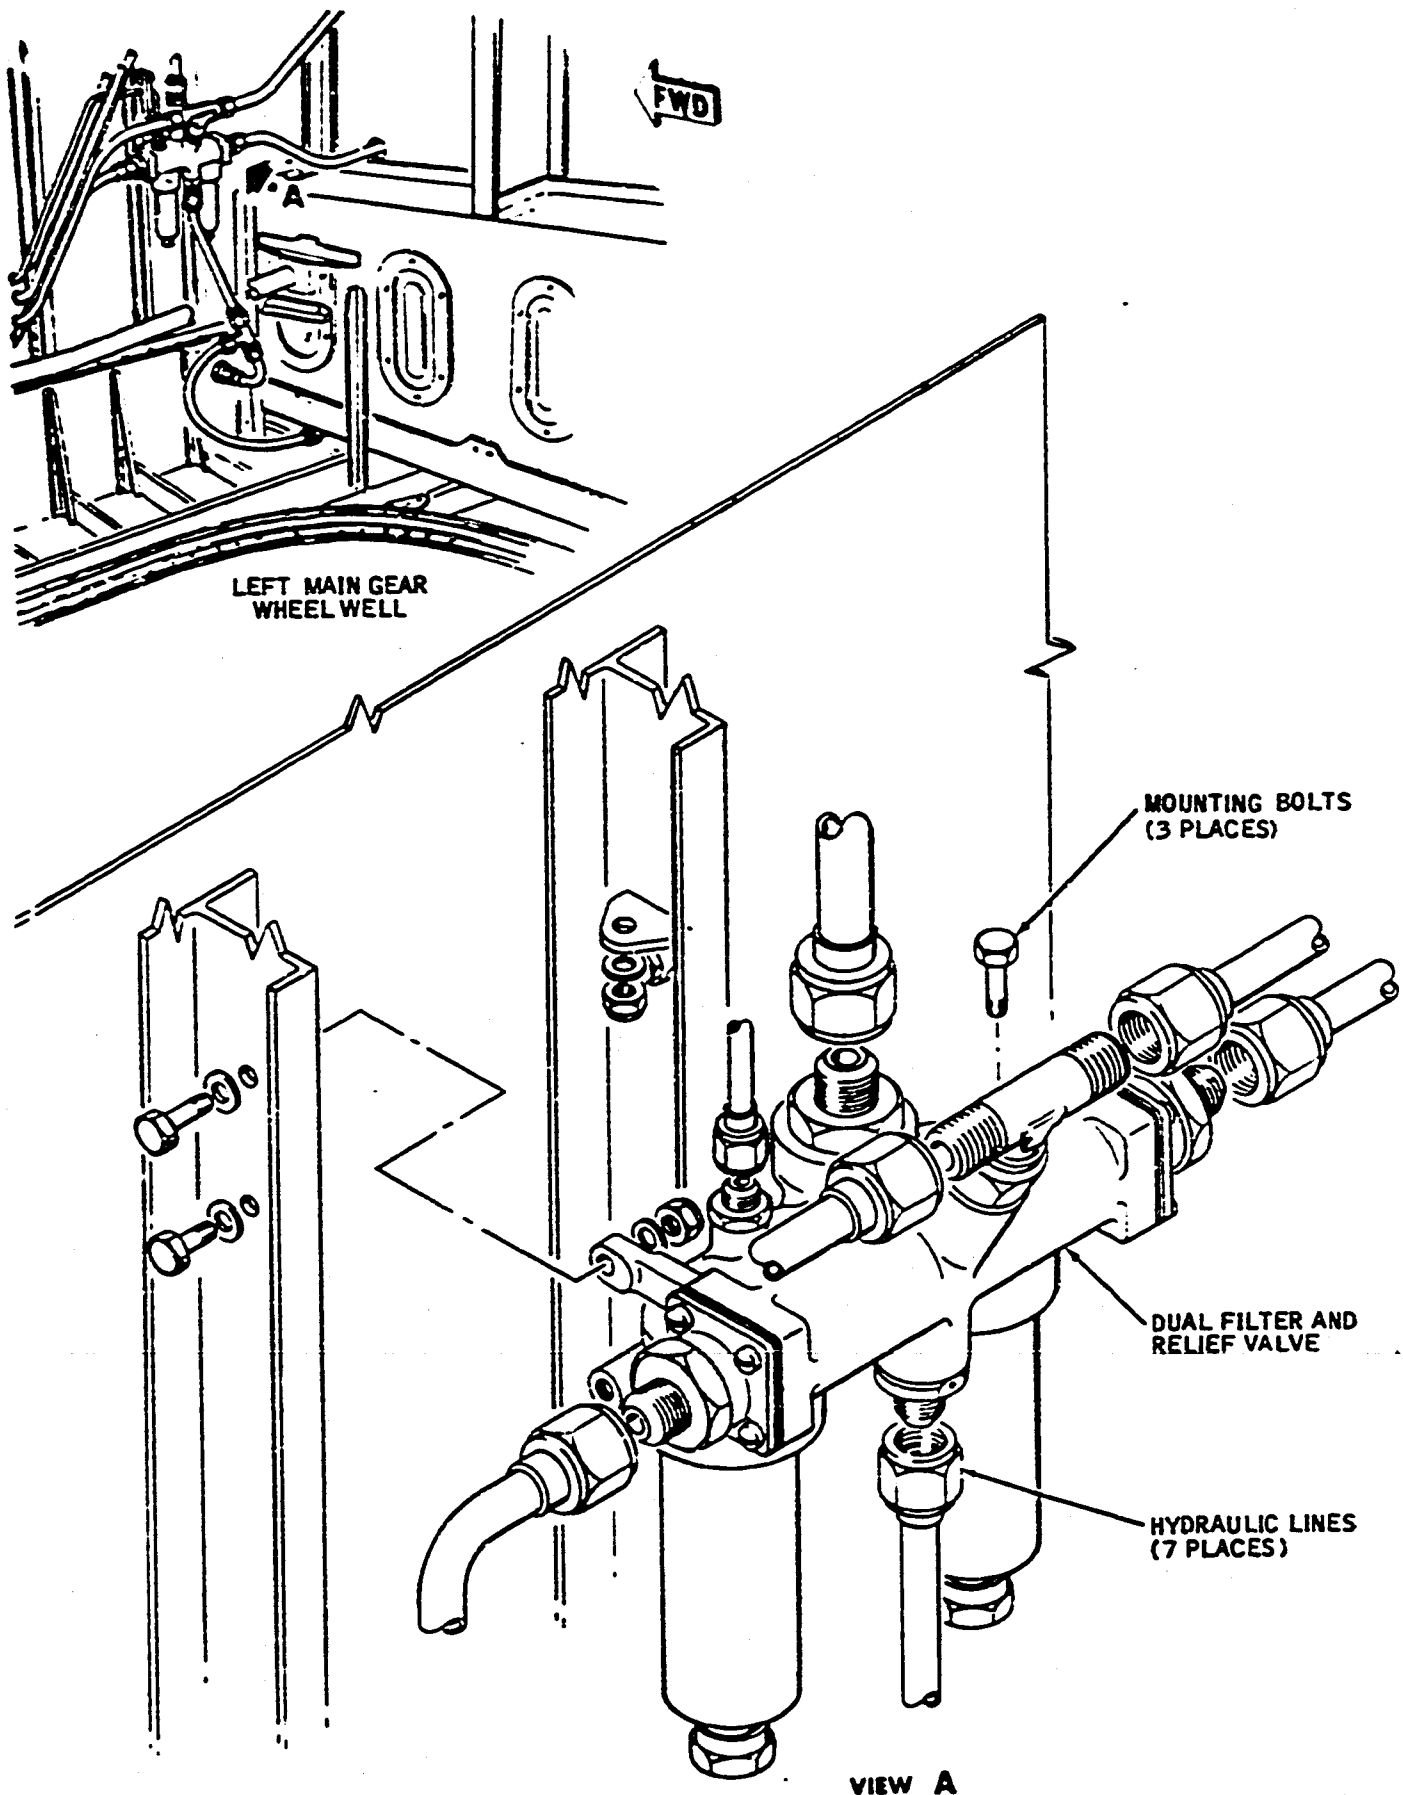

Dual-Filter and Relief Valve -- Installation  
 Figure 201

29-10-16  
 CODE 1  
 Page 202

HA2-80

Jun 15/67

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (7) Tighten bowls to torque of 125 to 140 foot-pounds. Safety with lockwire.
- (8) Connect lines to dual-filter and relief valve.
- (9) Close auxiliary hydraulic pump control circuit breaker.

**CAUTION:** HYDRAULIC POWER MANIFOLD PROTECTION GUARD, LOCATED IN FORWARD INBOARD CORNER OF LEFT MAIN GEAR WHEELWELL, MUST BE INSTALLED WITH LOWER, OUTBOARD LEG UNDER SPOILER CABLE TO AVOID CHAFFING THE CABLES, GUARD, AND EMPENNAGE HYDRAULIC LINE.

3. Inspection/Check Dual-Filter and Relief Valve

A. Check Dual-Filter and Relief Valve

- (1) Pressurize hydraulic system with test stand or engine-driven pump (see 29-00, Maintenance Practices).
- (2) Check dual-filter and relief valve for leaks, general condition, and security of mounting.
- (3) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (4) Remove magnetic drain plugs from bottom of filter sections of dual-filter and relief valve and check for metal particles.
- (5) Install magnetic plugs. Tighten plugs to torque of 150 ( $\pm 15$ ) inch-pounds. Safety with lockwire.
- (6) Depressurize hydraulic system (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

DUAL-FILTER AND RELIEF VALVE - MAINTENANCE PRACTICES

1. General

- A. The dual-filter and relief valve is located in the left main gear wheel well on the lower portion of the wing rear spar, just outboard of the keel web.
- B. Access to the dual-filter and relief valve is through the left main gear inboard door.

2. Removal/Installation Dual-Filter and Relief Valve

A. Remove Dual-Filter and Relief Valve

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Disconnect lines from dual-filter and relief valve.
- (5) Remove dual-filter and relief valve.
- (6) Remove check valves and fitting from ports; retain for use in new unit. Discard O-rings.


B. Install Dual-Filter and Relief Valve

- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 is open.
- (2) Using new O-rings, install check valves and fittings in dual-filter and relief valve ports.

CAUTION: MAKE CERTAIN THAT THE FLOW ARROWS ON THE CHECK VALVES ARE POINTED IN THE PROPER DIRECTION.

- (3) Install dual-filter and relief valve.
- (4) Remove filter bowls from both sides of dual-filter and relief valve.
- (5) Fill bowls with clean hydraulic fluid.
- (6) Install bowls on dual-filter and relief valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

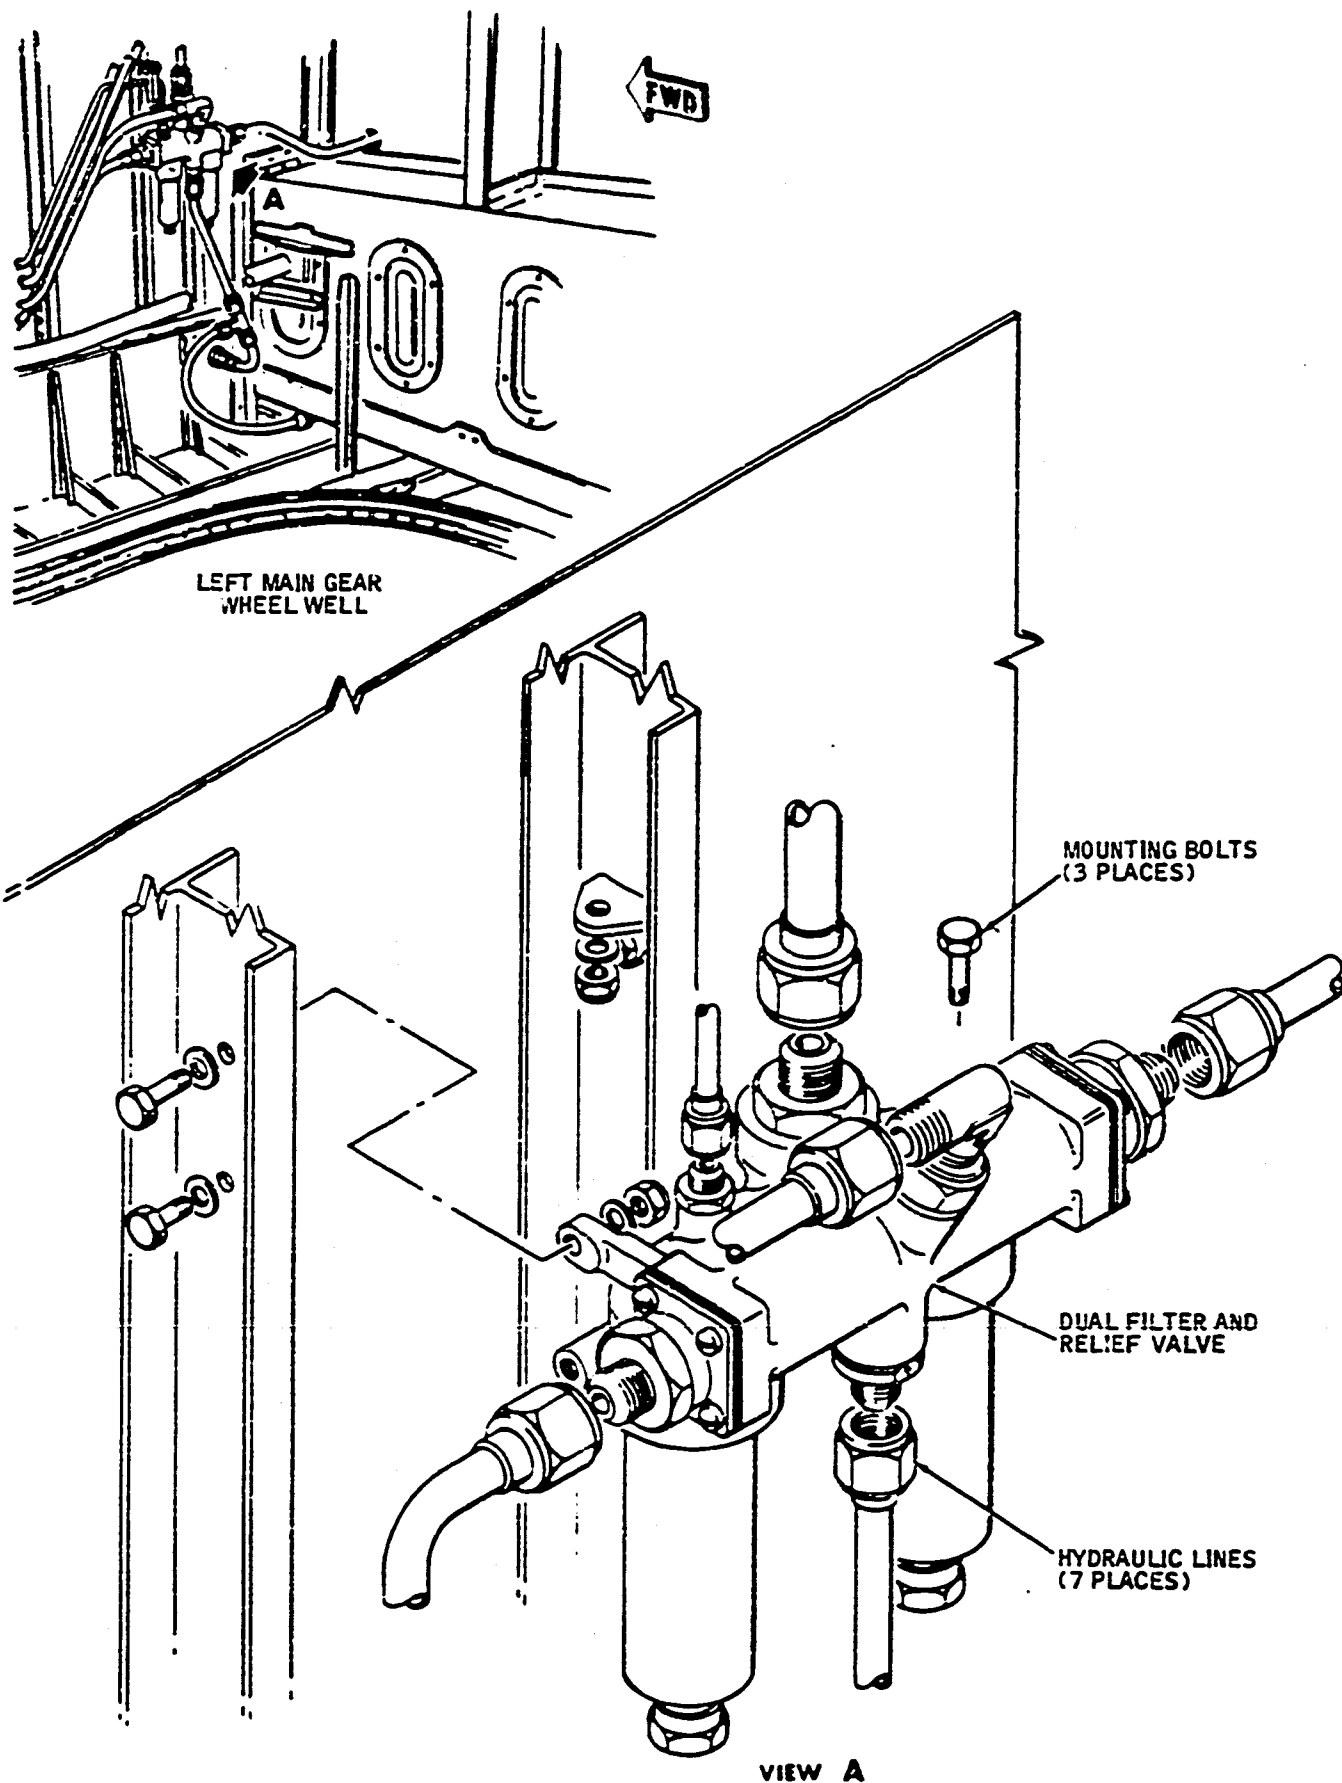

HA2-3069

Dual-Filter and Relief Valve -- Installation  
 Figure 201

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (7) Tighten bowls to torque of 125 to 140 foot-pounds. Safety with lockwire.
- (8) Connect lines to dual-filter and relief valve.
- (9) Close auxiliary hydraulic pump control circuit breaker.

CAUTION: HYDRAULIC POWER MANIFOLD PROTECTION GUARD, LOCATED IN FORWARD INBOARD CORNER OF LEFT MAIN GEAR WHEELWELL, MUST BE INSTALLED WITH LOWER, OUTBOARD LEG UNDER SPOILER CABLE TO AVOID CHAFFING THE CABLES, GUARD, AND EMPENNAGE HYDRAULIC LINE.

### 3. Inspection/Check Dual-Filter and Relief Valve

#### A. Check Dual-Filter and Relief Valve

- (1) Pressurize hydraulic system with test stand or engine-driven pump (see 29-00, Maintenance Practices).
- (2) Check dual-filter and relief valve for leaks, general condition, and security of mounting.
- (3) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (4) Remove magnetic drain plugs from bottom of filter sections of dual-filter and relief valve and check for metal particles.
- (5) Install magnetic plugs. Tighten plugs to torque of 150 ( $\pm 15$ ) inch-pounds. Safety with lockwire.
- (6) Depressurize hydraulic system (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

DUAL-FILTER ELEMENTS - MAINTENANCE PRACTICES

1. General

- A. The dual-filter and relief valve is located in the left main gear wheel well on the lower portion of the wing rear spar, just outboard of the keel web.
- B. Access to the dual-filter and relief valve is through the left main gear inboard door.
- C. The ultrasonic method is recommended for cleaning filter elements.
- D. Removal and installation procedures for both filter elements are identical.

2. Tools and Equipment Required

- A. Varsol cleaning solvent (Federal Specification TT-T-291) is used for cleaning filter head, bowl, and magnetic drain plug.

3. Removal/Installation Dual Filter Elements


A. Remove Dual Filter Elements

- (1) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (2) Relieve reservoir air pressure (see 29-00, Maintenance Practices).
- (3) Remove magnetic drain plugs.
- (4) Remove filter bowls and elements from dual-filter and relief valve.
- (5) Cover filter ports.
- (6) Wash filter bowls, filter heads, and magnetic drain plugs with clean Varsol (Federal Specification TT-T-291) and air-dry.
- (7) Clean off any magnetic particles on magnetic drain plugs with clean, lint-free cloth.

CAUTION: PLACE MAGNETIC DRAIN PLUGS IN A CLEAN CONTAINER UNTIL READY FOR INSTALLATION.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

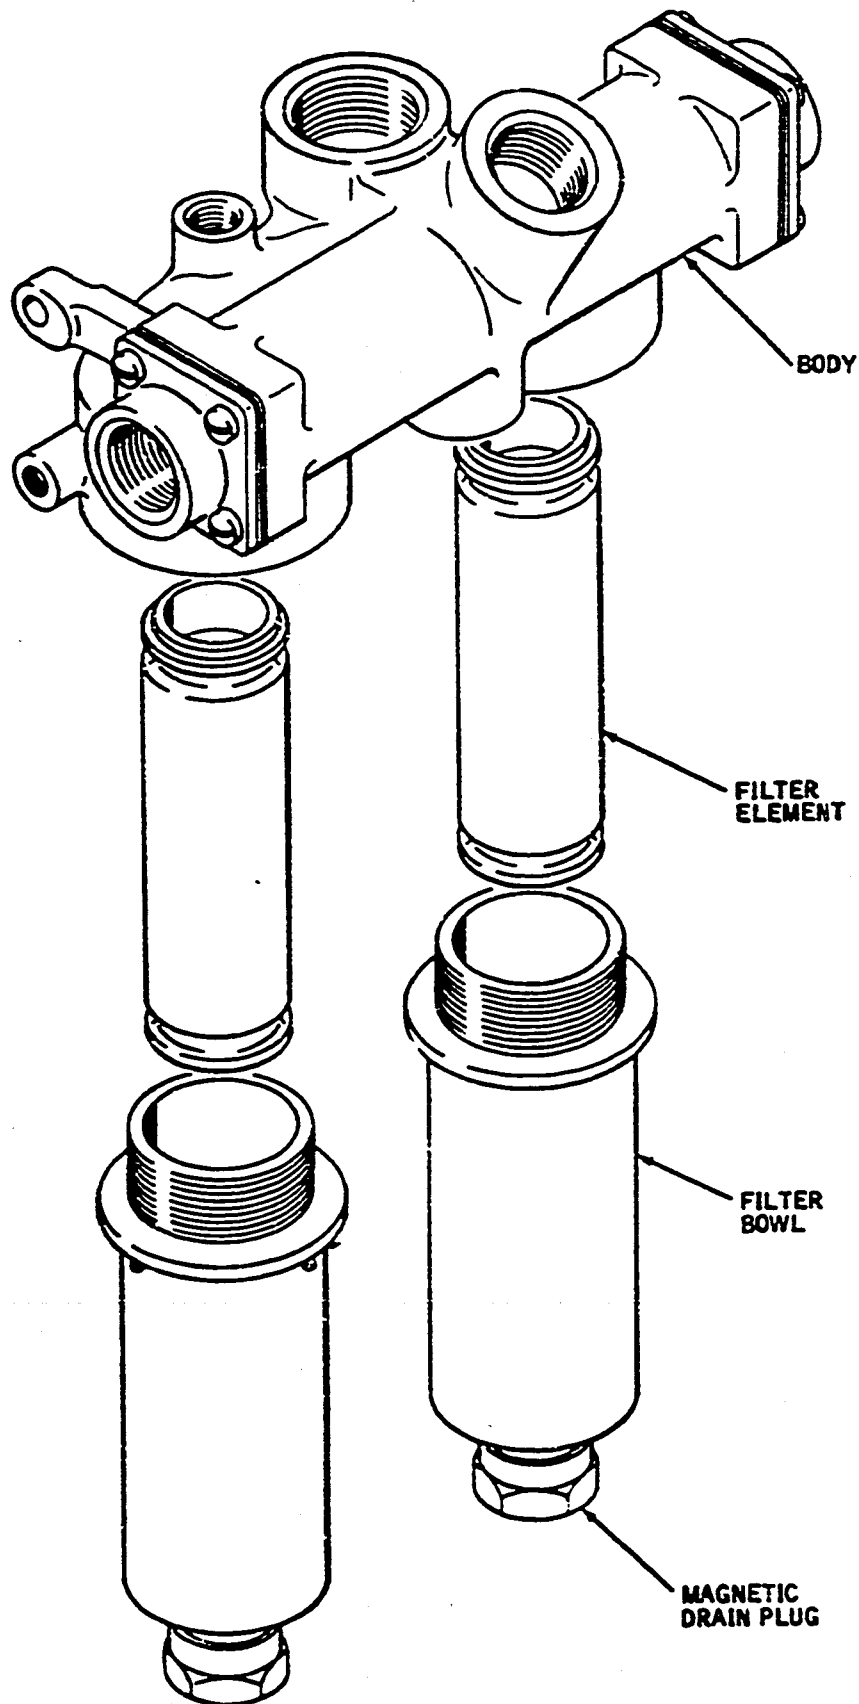

HA2-100

Dual Filter Elements -- Installation  
Figure 201

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

B. Install Dual-Filter Elements

- (1) Remove cover from filter ports in dual-filter and relief valve.
- (2) Using new O-rings, install filter elements.
- (3) Fill filter bowls with clean hydraulic fluid.
- (4) Using new O-rings, install filter bowls. Tighten bowls to torque of 125 to 140 foot-pounds and safety with lockwire.
- (5) Using new O-rings, install magnetic drain plugs. Tighten plugs to torque of 150 ( $\pm 15$ ) inch-pounds and safety with lockwire.

4. Inspection/Check Dual-Filter Elements

A. Check Dual-Filter Elements

- (1) Pressurize hydraulic system with test stand or engine-driven pump (see 29-00, Maintenance Practices).
- (2) Check dual-filter and relief valve for leaks around filter bowls and magnetic drain plugs.
- (3) Check filter bowls and magnetic drain plugs for proper installation of lockwire.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

SYSTEM SELECTOR VALVE - MAINTENANCE PRACTICES

1. General

- A. The system selector valve is mounted on the left power manifold which is located overhead in the forward inboard corner of the left main gear wheel well.
- B. Access to the system selector valve is through the left main gear inboard door.

2. Removal/Installation System Selector Valve

A. Remove System Selector Valve

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Disconnect pushrod from operating crank of system selector valve.
- (5) Disconnect engine pump pressure line.
- (6) Disconnect auxiliary pump pressure line.
- (7) Disconnect auxiliary pump alternate pressure line.
- (8) Remove system selector valve from manifold. Discard O-rings. Cover manifold mounting pad to prevent entrance of foreign material.
- (9) Remove fittings from valve and retain for use in new unit. Discard O-rings.

B. Install System Selector Valve


- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 is open.
- (2) Using new O-rings, install fittings in valve ports.
- (3) Install new O-rings at pressure and return ports in manifold.
- (4) Install system selector valve on manifold. Tighten mounting bolts to torque of 140 inch-pounds.

Jun 15/67

Printed in U S A

29-10-18  
CODE 1  
Page 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

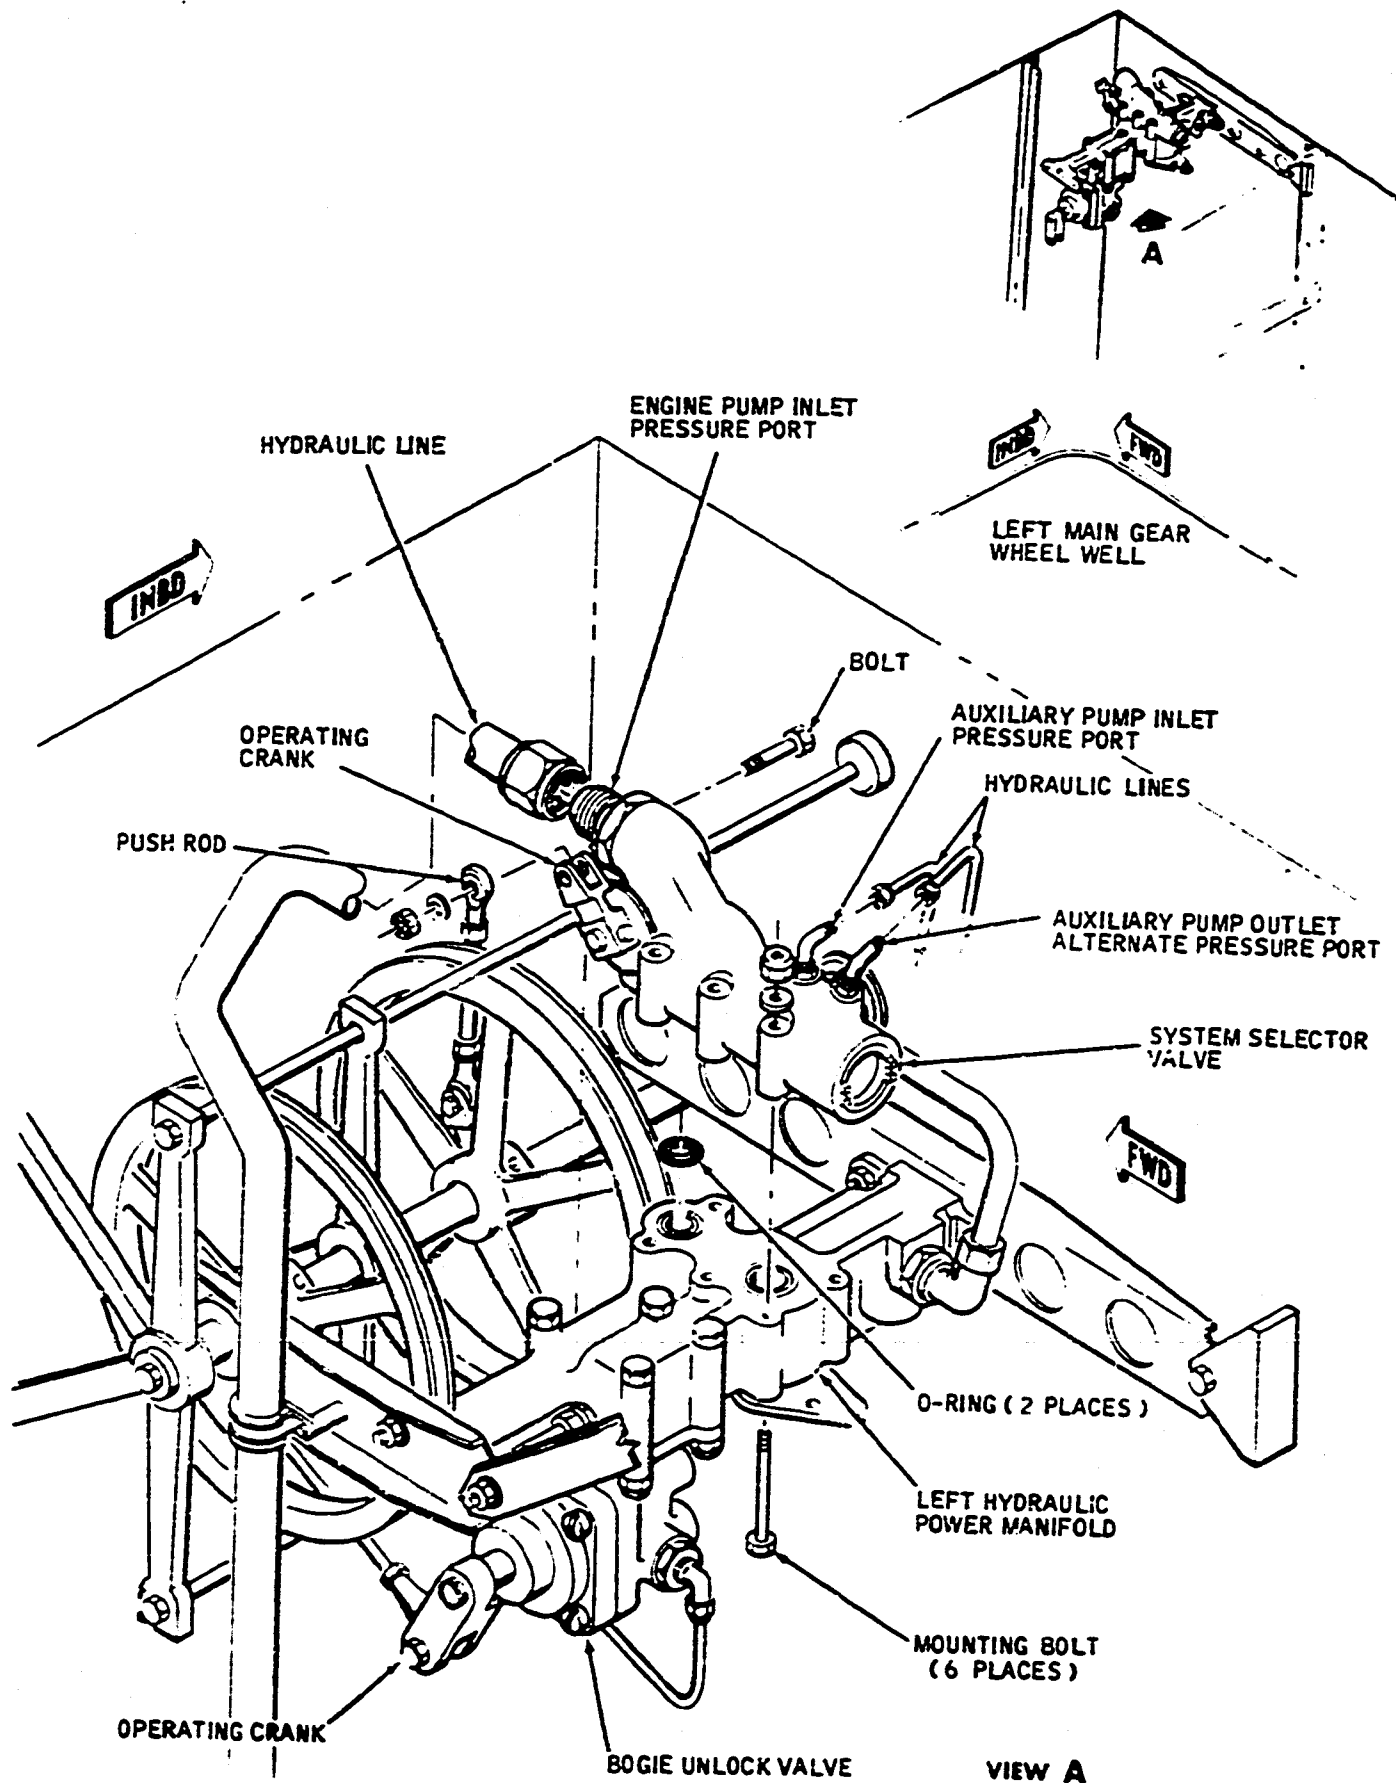

VIEW A

HA2-101

System Selector Valve -- Installation  
 Figure 201

29-10-18  
 CODE 1  
 Page 202

Printed in USA

Jun 15/67

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Connect auxiliary pump alternate pressure line.
- (6) Connect auxiliary pump pressure line.
- (7) Connect engine pump pressure line.
- (8) Close auxiliary hydraulic pump control circuit breaker.
- (9) Perform system selector valve adjustment/test procedures (see Paragraph 3).

**CAUTION:** HYDRAULIC POWER MANIFOLD PROTECTION GUARD, LOCATED IN FORWARD INBOARD CORNER OF LEFT MAIN GEAR WHEELWELL, MUST BE INSTALLED WITH LOWER, OUTBOARD LEG UNDER SPOILER CABLE TO AVOID CHAFFING THE CABLES, GUARD, AND EMPENNAGE HYDRAULIC LINES.

Adjustment/Test System Selector Valve

A. Adjust System Selector Valve

- (1) Place hydraulic system selector control lever in general system (normal) position.
- (2) Disconnect pushrod from operating crank.
- (3) Manually position operating crank of selector valve so that it is pointing forward (bypass position), (see 29-10-0, Adjustment/Test, Figure 501).
- (4) Pressurize hydraulic system with test stand at low flow rate (see 29-00, Maintenance Practices).

**WARNING:** MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION AND THAT LANDING GEAR GROUND LOCKPINS ARE INSTALLED.

- (5) Rotate selector valve operating crank aft to a position where flow through system selector valve just stops.

**NOTE:** Bypass flow stoppage is detectable by momentary increase in pressure indication on system pressure accumulator gage.

- (6) Adjust system selector valve pushrod so that bolt can be easily inserted through operating crank and rod end of pushrod.
- (7) Lengthen system selector valve pushrod 7/32 inch by rotating each end of pushrod three turns counterclockwise.
- (8) Connect pushrod to operating crank of system selector valve.
- (9) Depressurize hydraulic system (see 29-00).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

4. Inspection/Check System Selector Valve

A. Check System Selector Valve

NOTE: The system selector valve may be difficult to move in the bypass/general system (number 1) position. This is normal and due to a hydraulic snubber action inside the valve.

- (1) Check freedom of movement of control system by operating hydraulic system selector control lever several times through full operating travel.
- (2) Place hydraulic system selector control lever in general system (normal) position.
- (3) Pressurize hydraulic system with external source (test stand) to full system pressure (3000 psi) (see 29-00, Maintenance Practices). Hydraulic system pressure indicator in flight compartment should indicate approximately 3000 psi.

WARNING: MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION AND THAT LANDING GEAR LOCKPINS ARE INSTALLED.

- (4) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (5) Place hydraulic system selector control lever in bypass/general system position.
- (6) Pressurize hydraulic system with external source (test stand) to full system pressure. Hydraulic system pressure indicator in flight compartment should remain at zero psi.
- (7) Depressurize hydraulic system.
- (8) Place hydraulic system selector control lever in general system/main gear downlock and flaps position.
- (9) Pressurize hydraulic system with auxiliary hydraulic pump (see 29-00, Maintenance Practices).
- (10) Hydraulic system pressure indicator in flight compartment should indicate zero psi.
- (11) Cycle wing flaps several times. If wing flaps operate properly, system selector valve is porting fluid to flaps and main gear downlock cylinders.
- (12) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (13) Place hydraulic system selector control lever in general system (normal) position.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (14) Check system selector valve and fittings for leaks, general condition, and security of attachment.
- (15) Check selector valve pushrod to operating crank and pushrod to sector connections for proper installation and security.

Jan 15/68

Printed in U.S.A.

29-10-18  
CODE 1  
Page 205 |

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

SYSTEM SELECTOR VALVE - MAINTENANCE PRACTICES

1. General

- A. The system selector valve is mounted on the left power manifold which is located overhead in the forward inboard corner of the left main gear wheel well.
- B. Access to the system selector valve is through the left main gear inboard door.

2. Removal/Installation System Selector Valve

A. Remove System Selector Valve

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Disconnect pushrod from operating crank of system selector valve.
- (5) Disconnect engine pump pressure line.
- (6) Disconnect auxiliary pump pressure line.
- (7) Disconnect auxiliary pump alternate pressure line.
- (8) Remove system selector valve from manifold. Discard O-rings. Cover manifold mounting pad to prevent entrance of foreign material.
- (9) Remove fittings from valve and retain for use in new unit. Discard O-rings.

B. Install System Selector Valve

- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 is open.
- (2) Using new O-rings, install fittings in valve port.
- (3) Install new O-rings at pressure and return ports in manifold.
- (4) Install system selector valve on manifold. Tighten mounting bolts to torque of 140 inch-pounds.


Jun 15/67

Printed in U.S.A.

29-10-18  
CODE 2  
Page 201



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

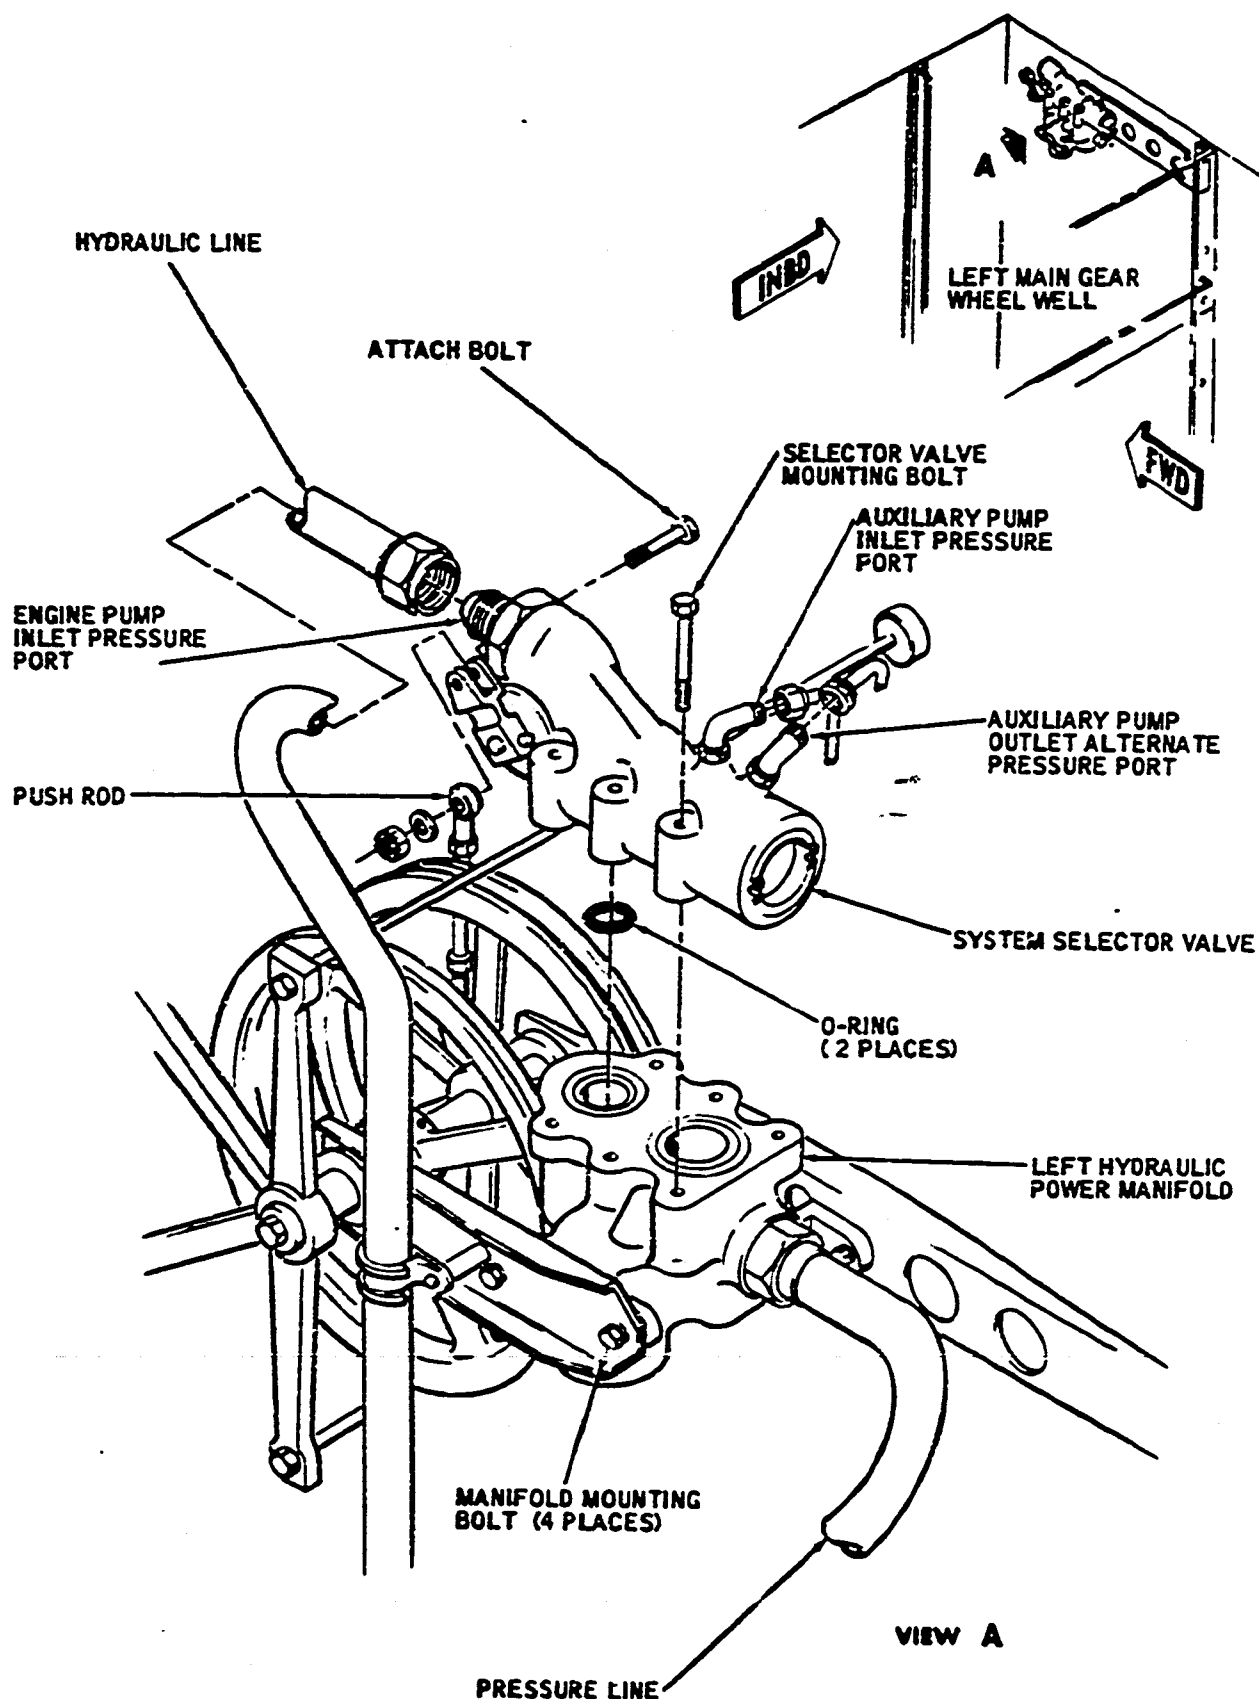

System Selector Valve -- Installation  
 Figure 201

HA2-860

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Connect auxiliary pump alternate pressure line.
- (6) Connect auxiliary pump pressure line.
- (7) Connect engine pump pressure line.
- (8) Close auxiliary hydraulic pump control circuit breaker.
- (9) Perform system selector valve adjustment/test procedures (see Paragraph 3).

**CAUTION:** HYDRAULIC POWER MANIFOLD PROTECTION GUARD, LOCATED IN FORWARD INBOARD CORNER OF LEFT MAIN GEAR WHEELWELL, MUST BE INSTALLED WITH LOWER, OUTBOARD LEG UNDER SPOILER CABLE TO AVOID CHAFFING THE CABLES, GUARD, AND EMPENNAGE HYDRAULIC LINES.

Adjustment/Test System Selector Valve

A. Adjust System Selector Valve

- (1) Place hydraulic system selector control lever in general system (normal) position.
- (2) Disconnect pushrod from operating crank.
- (3) Manually position operating crank of selector valve so that it is pointing forward (bypass position), (see 29-10-0, Adjustment/Test, Figure 501).
- (4) Pressurize hydraulic system with test stand at low flow rate (see 29-00, Maintenance Practices).

**WARNING:** MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION AND THAT LANDING GEAR GROUND LOCKPINS ARE INSTALLED.

- (5) Rotate selector valve operating crank aft to a position where flow through system selector valve just stops.

**NOTE:** Bypass flow stoppage is detectable by momentary increase in pressure indication on system pressure accumulator gage.

- (6) Adjust system selector valve pushrod so that bolt can be easily inserted through operating crank and rod end of pushrod.
- (7) Lengthen system selector valve pushrod 7/32 inch by rotating each end of pushrod three turns counterclockwise.
- (8) Connect pushrod to operating crank of system selector valve.
- (9) Depressurize hydraulic system (see 29-00).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

4. Inspection/Check System Selector Valve

A. Check System Selector Valve

NOTE: The system selector valve may be difficult to move in the bypass/general system (number 1) position. This is normal and due to a hydraulic snubber action inside the valve.

- (1) Check freedom of movement of control system by operating hydraulic system selector control lever several times through full operating travel.
- (2) Place hydraulic system selector control lever in general system (normal) position.
- (3) Pressurize hydraulic system with external source (test stand) to full system pressure (3000 psi) (see 29-00, Maintenance Practices). Hydraulic system pressure indicator in flight compartment should indicate approximately 3000 psi.

WARNING: MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION AND THAT LANDING GEAR LOCKPINS ARE INSTALLED.

- (4) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (5) Place hydraulic system selector control lever in bypass/general system position.
- (6) Pressurize hydraulic system with external source (test stand) to full system pressure. Hydraulic system pressure indicator in flight compartment should remain at zero psi.
- (7) Depressurize hydraulic system.
- (8) Place hydraulic system selector control lever in general system/main gear downlock and flaps position.
- (9) Pressurize hydraulic system with auxiliary hydraulic pump (see 29-00, Maintenance Practices).
- (10) Hydraulic system pressure indicator in flight compartment should indicate zero psi.
- (11) Cycle wing flaps several times. If wing flaps operate properly, system selector valve is porting fluid to flaps and main gear downlock cylinders.
- (12) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (13) Place hydraulic system selector control lever in general system (normal) position.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (14) Check system selector valve and fittings for leaks, general condition, and security of attachment.
- (15) Check selector valve pushrod to operating crank and pushrod to sector connections for proper installation and security.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

SYSTEM SELECTOR VALVE - MAINTENANCE PRACTICES

1. General

- A. The system selector valve is mounted on the left power manifold which is located overhead in the forward inboard corner of the left main gear wheel well.
- B. Access to the system selector valve is through the left main gear inboard door.

2. Removal/Installation System Selector Valve

A. Remove System Selector Valve

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Disconnect pushrod from operating crank of system selector valve.
- (5) Disconnect engine pump pressure line.
- (6) Disconnect auxiliary pump pressure line.
- (7) Disconnect auxiliary pump alternate pressure line.
- (8) Remove system selector valve from manifold. Discard O-rings. Cover manifold mounting pad to prevent entrance of foreign material.
- (9) Remove fittings from valve and retain for use in new unit. Discard O-rings.

B. Install System Selector Valve


- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel is open.
- (2) Using new O-rings, install fittings in valve ports.
- (3) Install new O-rings at pressure and return ports in manifold.
- (4) Install system selector valve on manifold. Tighten mounting bolts to torque of 140 inch-pounds.

Jun 15/67

Printed in U.S.A.

29-10-18  
CODE 3  
Page 201


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

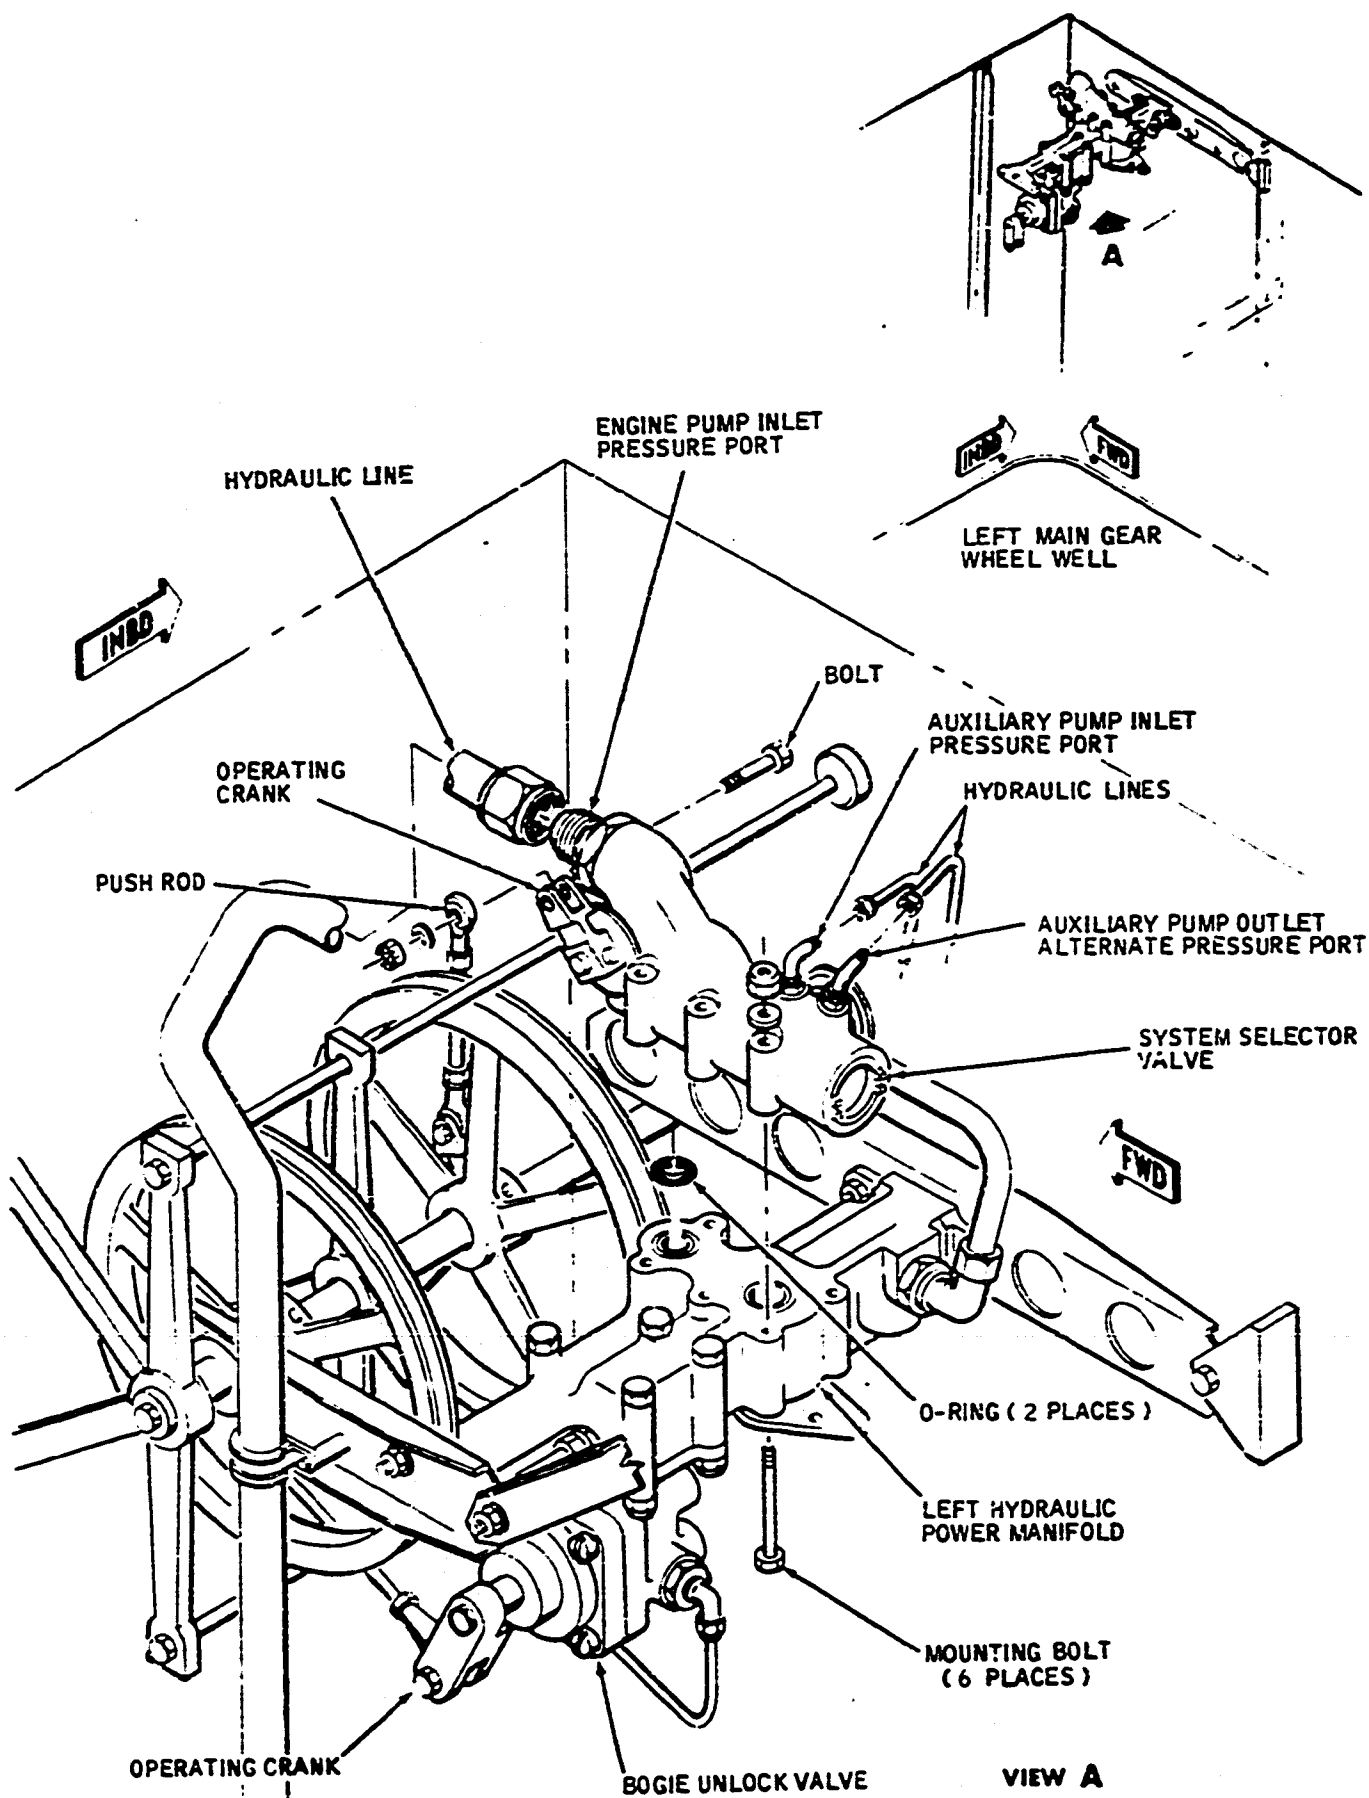

HA2-101

System Selector Valve -- Installation  
 (Airplanes 801-822, 860-866)  
 Figure 201 (Sheet 1)

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

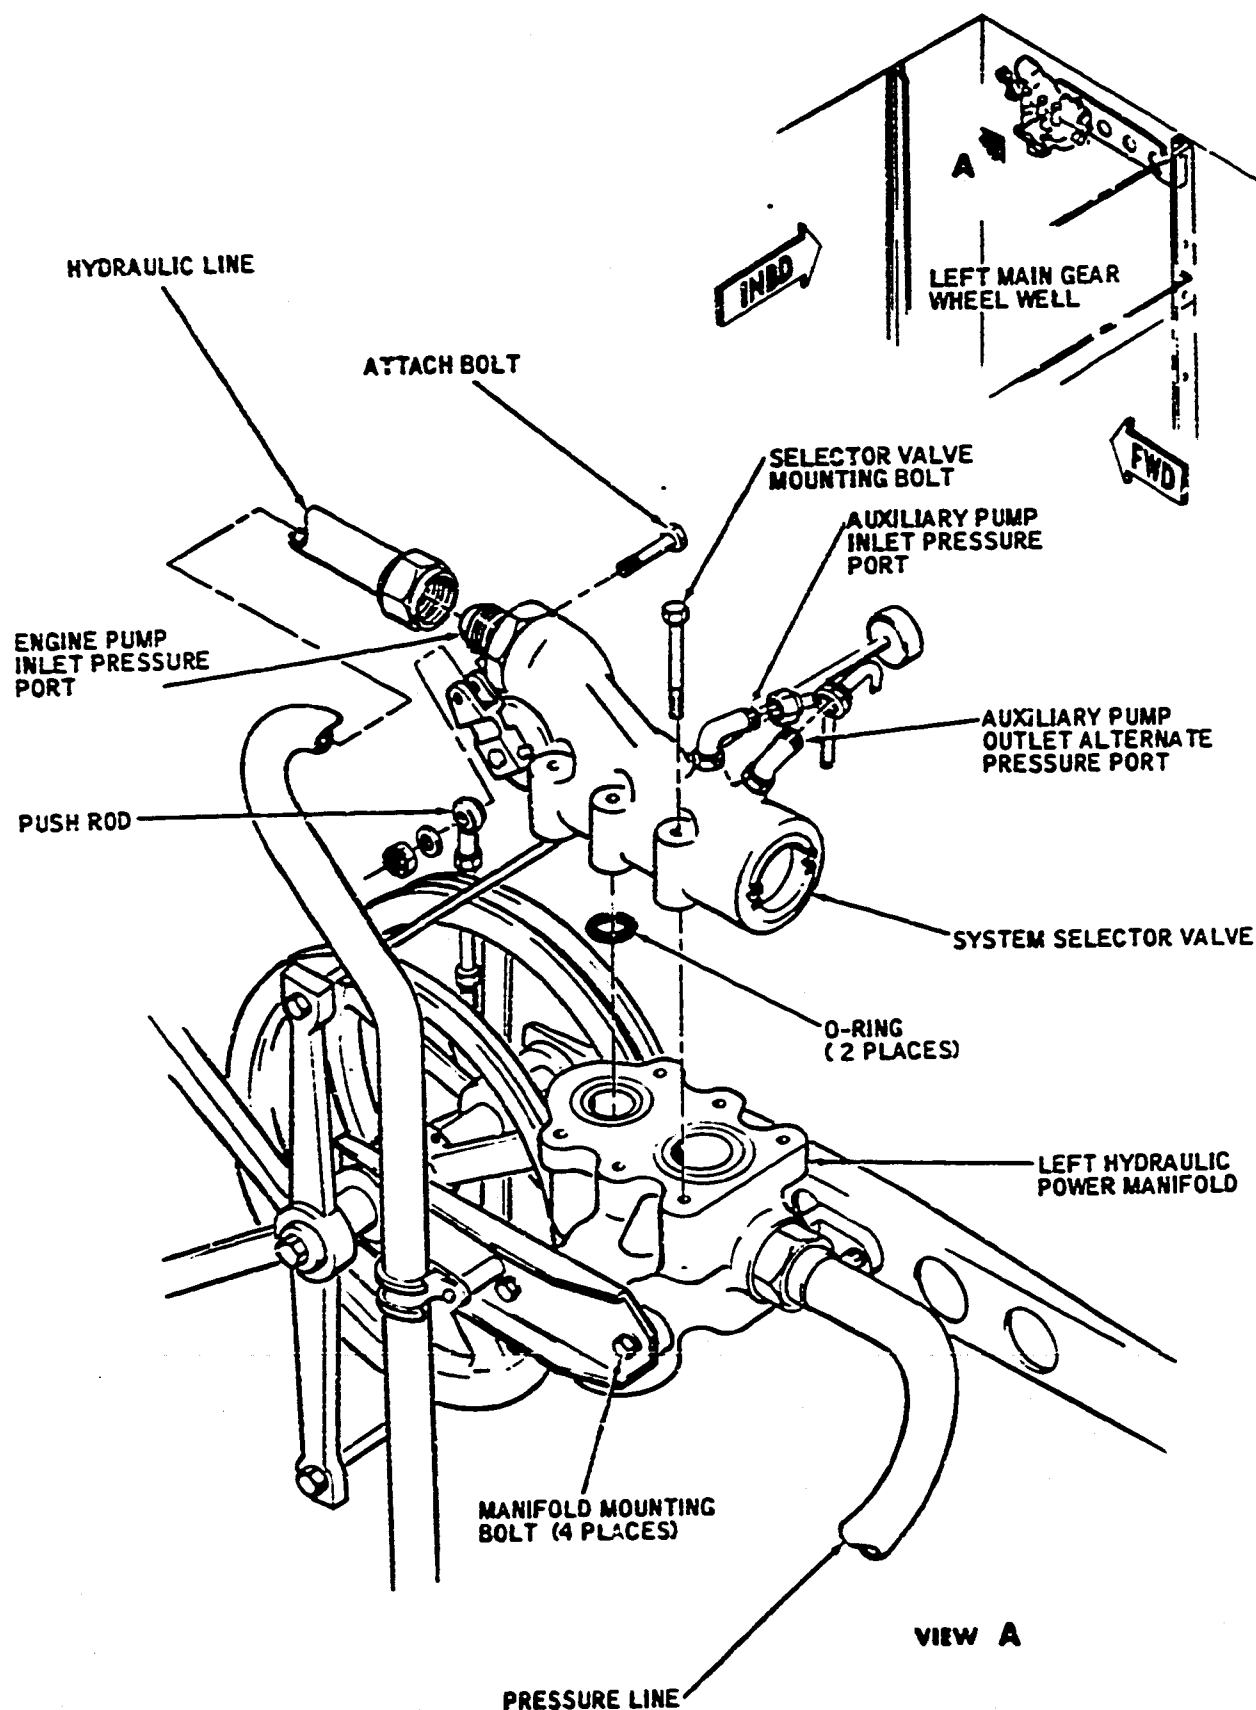

System Selector Valve -- Installation  
 (Airplanes 867 and Subsequent)  
 Figure 201 (Sheet 2)

Aug 1/68

HA2-860

29-10-18

CODE 3

Page 202A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Connect auxiliary pump alternate pressure line.
- (6) Connect auxiliary pump pressure line.
- (7) Connect engine pump pressure line.
- (8) Close auxiliary hydraulic pump control circuit breaker.
- (9) Perform system selector valve adjustment/test procedures (see Paragraph 3).

**CAUTION:** HYDRAULIC POWER MANIFOLD PROTECTION GUARD, LOCATED IN FORWARD INBOARD CORNER OF LEFT MAIN GEAR WHEELWELL, MUST BE INSTALLED WITH LOWER, OUTBOARD LEG UNDER SPOILER CABLE TO AVOID CHAFFING THE CABLES, GUARD, AND EMPENNAGE HYDRAULIC LINES.

### 3. Adjustment/Test System Selector Valve

#### A. Adjust System Selector Valve

- (1) Place hydraulic system selector control lever in general system (normal) position.
- (2) Disconnect pushrod from operating crank.
- (3) Manually position operating crank of selector valve so that it is pointing forward (bypass position), (see 29-10-0, Adjustment/Test, Figure 501).
- (4) Pressurize hydraulic system (see 29-00, Maintenance Practices).

**WARNING:** MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION AND THAT LANDING GEAR GROUND LOCKPINS ARE INSTALLED.

- (5) Rotate selector valve operating crank aft to a position where flow through system selector valve just stops.

**NOTE:** Bypass flow stoppage is detectable by momentary increase in pressure indication on system pressure accumulator gage.

- (6) Adjust system selector valve pushrod so that bolt can be easily inserted through operating crank and rod end of the pushrod.
- (7) Lengthen system selector valve pushrod  $7/32$  inch by rotating each end of pushrod three turns counterclockwise.
- (8) Connect pushrod to operating crank of system selector valve.
- (9) Depressurize hydraulic system (see 29-00).



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

4. Inspection/Check System Selector Valve

A. Check System Selector Valve

NOTE: The system selector valve may be difficult to move in the bypass/general system (number 1) position. This is normal and due to a hydraulic snubber action inside the valve.

- (1) Check freedom of movement of control system by operating hydraulic system selector control lever several times through full operating travel.
- (2) Place hydraulic system selector control lever in general system (normal) position.
- (3) Pressurize hydraulic system with external source (test stand) to full system pressure (3000 psi) (see 29-00, Maintenance Practices). Hydraulic system pressure indicator in flight compartment should indicate approximately 3000 psi.

WARNING: MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION AND THAT LANDING GEAR LOCKPINS ARE INSTALLED.

- (4) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (5) Place hydraulic system selector control lever in bypass/general system position.
- (6) Pressurize hydraulic system with external source (test stand) to full system pressure. Hydraulic system pressure indicator in flight compartment should remain at zero psi.
- (7) Depressurize hydraulic system.
- (8) Place hydraulic system selector control lever in general system/flaps only position.
- (9) Pressurize hydraulic system with auxiliary hydraulic pump (see 29-00, Maintenance Practices).
- (10) Hydraulic system pressure indicator in flight compartment should indicate zero psi.
- (11) Cycle wing flaps several times. If wing flaps operate properly, system selector valve is porting fluid to flaps.
- (12) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (13) Place hydraulic system selector control lever in general system (normal) position.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (14) Check system selector valve and fittings for leaks, general condition, and security of attachment.
- (15) Check selector valve pushrod to operating crank and pushrod to sector connections for proper installation and security.

SYSTEM SELECTOR VALVE - MAINTENANCE PRACTICES

1. General

- A. The system selector valve is mounted on the left power manifold which is located overhead in the forward inboard corner of the left main gear wheel well.
- B. Access to the system selector valve is through the left main gear inboard door.

2. Removal/Installation System Selector Valve

A. Remove System Selector Valve

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).


- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Disconnect pushrod from operating crank of system selector valve.
- (5) Disconnect engine pump pressure line.
- (6) Disconnect auxiliary pump pressure line.
- (7) Disconnect auxiliary pump alternate pressure line.
- (8) Remove system selector valve from manifold. Discard O-rings. Cover manifold mounting pad to prevent entrance of foreign material.
- (9) Remove fittings from valve and retain for use in new unit. Discard O-rings.

B. Install System Selector Valve

- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel is open.
- (2) Using new O-rings, install fittings in valve ports.
- (3) Install new O-rings at pressure and return ports in manifold.
- (4) Install system selector valve on manifold. Tighten mounting bolts to torque of 140 inch-pounds.

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

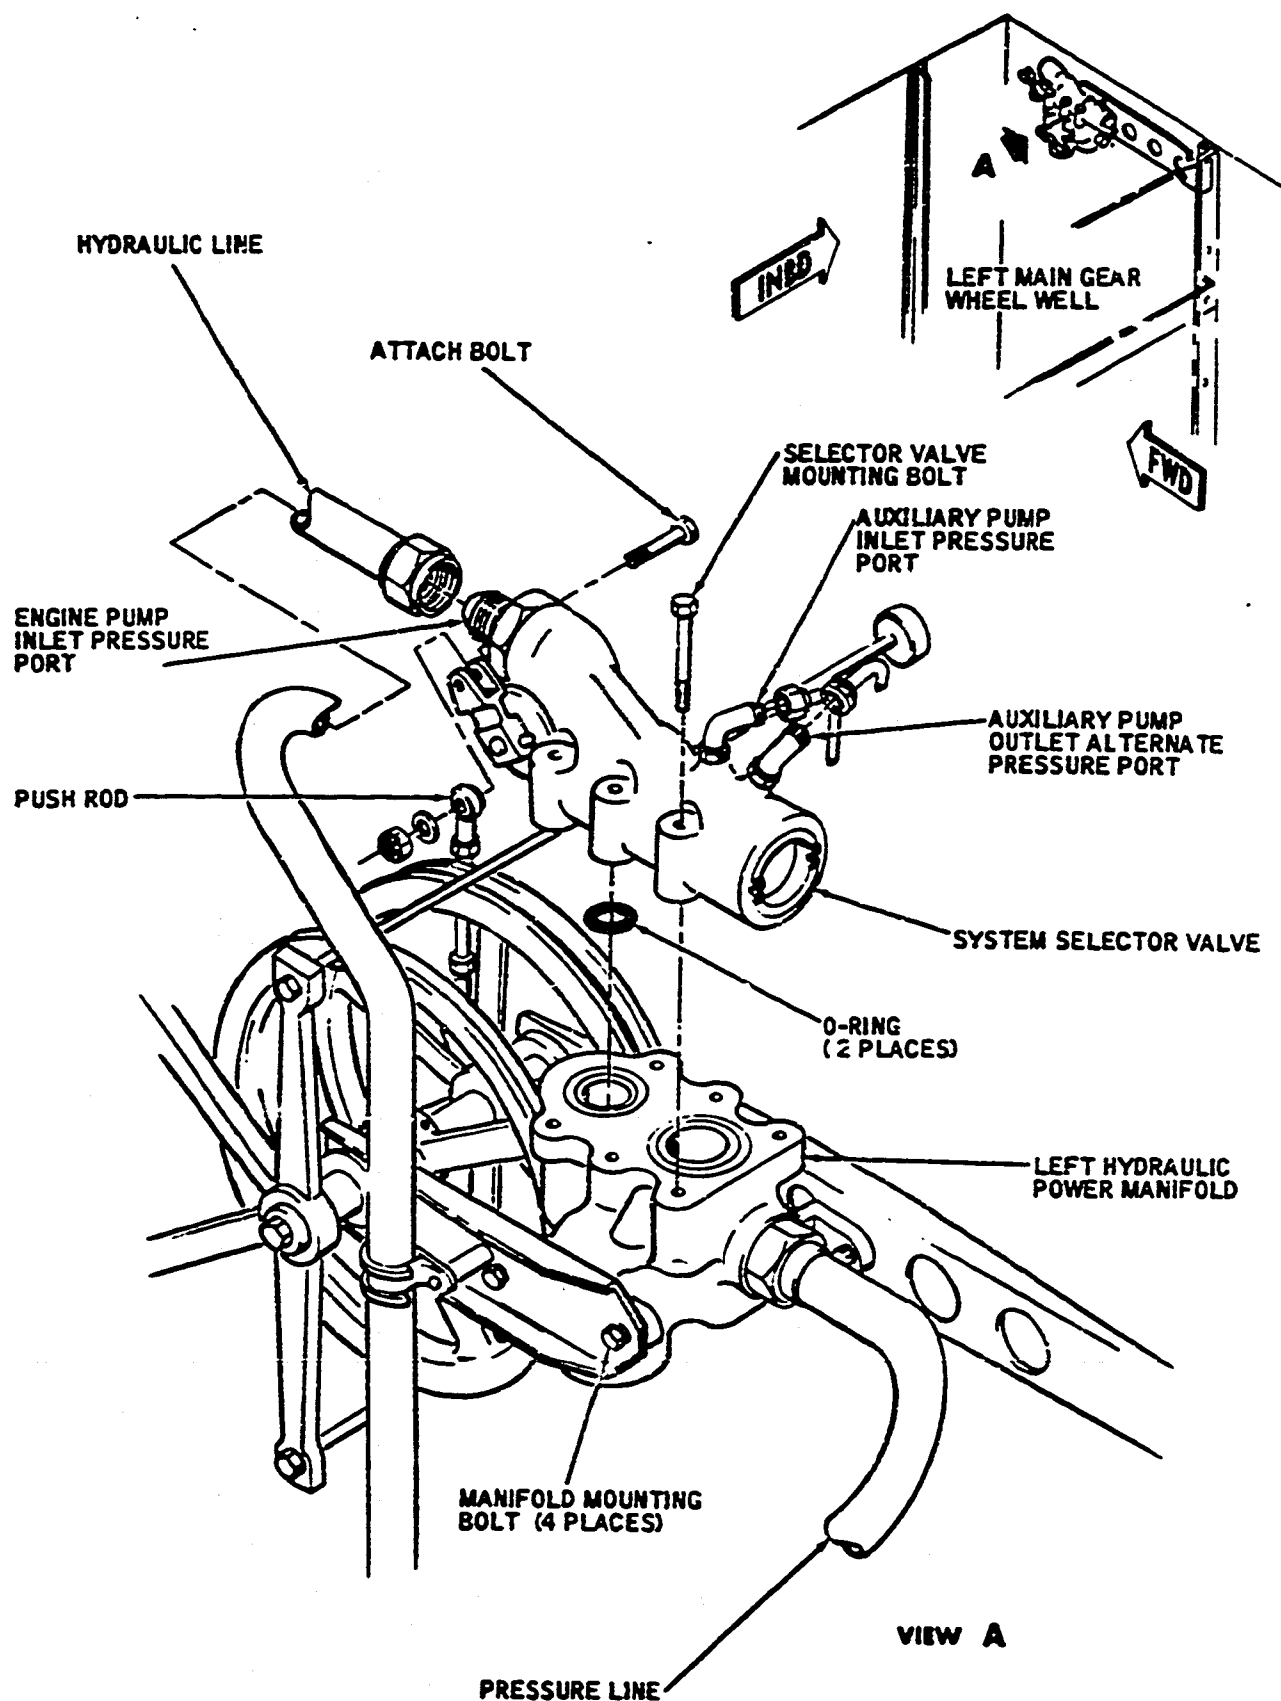

System Selector Valve -- Installation  
 Figure 201

HA2-860

29-10-18  
 CODE 4  
 Page 202

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Connect auxiliary pump alternate pressure line.
- (6) Connect auxiliary pump pressure line.
- (7) Connect engine pump pressure line.
- (8) Close auxiliary hydraulic pump control circuit breaker.
- (9) Perform system selector valve adjustment/test procedures (see Paragraph 3).

**CAUTION:** HYDRAULIC POWER MANIFOLD PROTECTION GUARD, LOCATED IN FORWARD INBOARD CORNER OF LEFT MAIN GEAR WHEELWELL, MUST BE INSTALLED WITH LOWER, OUTBOARD LEG UNDER SPOILER CABLE TO AVOID CHAFFING THE CABLES, GUARD, AND EMPENNAGE HYDRAULIC LINES.

### 3. Adjustment/Test System Selector Valve

#### A. Adjust System Selector Valve

- (1) Place hydraulic system selector control lever in general system (normal) position.
- (2) Disconnect pushrod from operating crank.
- (3) Manually position operating crank of selector valve so that it is pointing forward (bypass position), (see 29-10-0, Adjustment/Test, Figure 501).
- (4) Pressurize hydraulic system (see 29-00, Maintenance Practices).

**WARNING:** MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION AND THAT LANDING GEAR GROUND LOCKPINS ARE INSTALLED.

- (5) Rotate selector valve operating crank aft to a position where flow through system selector valve just stops.

**NOTE:** Bypass flow stoppage is detectable by momentary increase in pressure indication on system pressure accumulator gage.

- (6) Adjust system selector valve pushrod so that bolt can be easily inserted through operating crank and rod end of pushrod.
- (7) Lengthen system selector valve pushrod  $7/32$  inch by rotating each end of pushrod three turns counterclockwise.
- (8) Connect pushrod to operating crank of system selector valve.
- (9) Depressurize hydraulic system (see 29-00).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

4. Inspection/Check System Selector Valve

A. Check System Selector Valve

NOTE: The system selector valve may be difficult to move in the bypass/general system (number 1) position. This is normal and due to a hydraulic snubber inside the valve.

- (1) Check freedom of movement of control system by operating hydraulic system selector control lever several times through full operating travel.
- (2) Place hydraulic system selector control lever in general system (normal) position.
- (3) Pressurize hydraulic system with external source (test stand) to full system pressure (3000 psi) (see 29-00, Maintenance Practices). Hydraulic system pressure indicator in flight compartment should indicate approximately 3000 psi.

WARNING: MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION AND THAT LANDING GEAR LOCKPINS ARE INSTALLED.

- (4) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (5) Place hydraulic system selector control lever in bypass/general system position.
- (6) Pressurize hydraulic system with external source (test stand) to full system pressure. Hydraulic system pressure indicator in flight compartment should remain at zero psi.
- (7) Depressurize hydraulic system.
- (8) Place hydraulic system selector control lever in general system/flaps only position.
- (9) Pressurize hydraulic system with auxiliary hydraulic pump (see 29-00, Maintenance Practices).
- (10) Hydraulic system pressure indicator in flight compartment should indicate zero psi.
- (11) Cycle wing flaps several times. If wing flaps operate properly, system selector valve is porting fluid to flaps.
- (12) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (13) Place hydraulic system selector control lever in general system (normal) position.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (14) Check system selector valve and fittings for leaks, general condition, and security of attachment.
- (15) Check selector valve pushrod to operating crank and pushrod to sector connections for proper installation and security.

Jan 15/68

Printed in U.S.A.

29-10-18  
CODE 4  
Page 205 I

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

LEFT HYDRAULIC POWER MANIFOLD - MAINTENANCE PRACTICES

1. General

- A. The left hydraulic power manifold is located overhead in the forward inboard corner of the left main gear wheel well.
- B. Access to the left power manifold is through the left main gear inboard door.

2. Removal/Installation Left Hydraulic Power Manifold

A. Remove Left Power Manifold

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Disconnect pushrods from operating cranks of system selector valve and bogie swivel unlock valve.
- (5) Disconnect hydraulic lines from bogie unlock valve, system selector valve, and power manifold.
- (6) Remove priority valve from manifold (see 29-10-23).
- (7) Remove bogie unlock valve from manifold (see Chapter 32).
- (8) Remove system selector valve from manifold (see 29-10-18).
- (9) Remove left hydraulic power manifold.

B. Install Left Power Manifold

- (1) Make certain that auxiliary hydraulic pump control circuit breaker is open.
- (2) Install left power manifold on its support.
- (3) Install system selector valve on manifold (see 29-10-18).
- (4) Install bogie unlock valve on manifold (see Chapter 32).


Jun 15/67

Printed in U.S.A.

29-10-19  
CODE 1  
Page 201



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

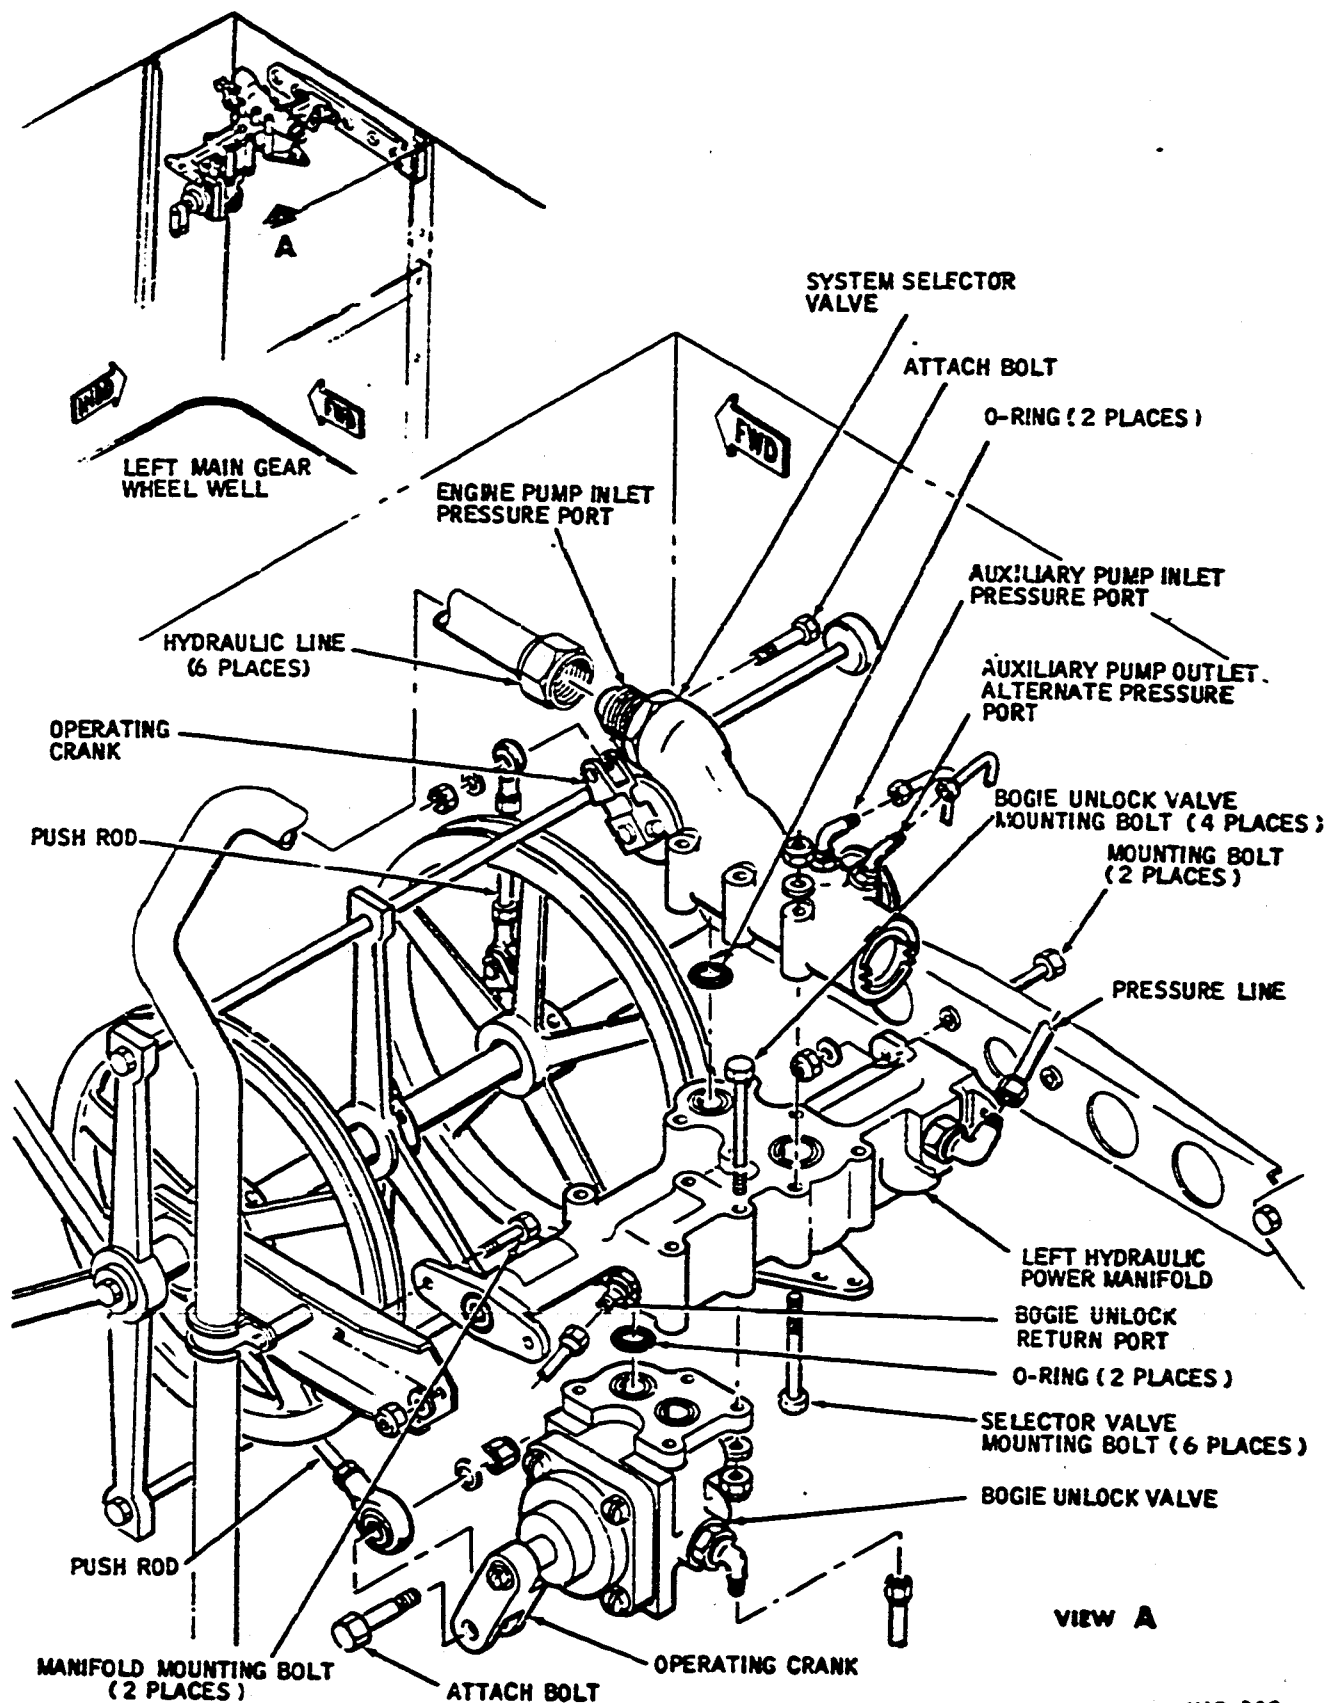

Left Hydraulic Power Manifold -- Installation  
 Figure 201

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Install priority valve on manifold (see 29-10-23).
- (6) Connect hydraulic lines to system selector valve, bogie unlock valve, and power manifold.
- (7) Connect pushrod to operating crank of system selector valve and adjust as necessary (see 29-10-18).
- (8) Connect pushrod to bogie swivel unlock valve and adjust as necessary (see Chapter 32).
- (9) Close auxiliary hydraulic pump control circuit breaker.

CAUTION: HYDRAULIC POWER MANIFOLD PROTECTION GUARD, LOCATED IN FORWARD INBOARD CORNER OF LEFT MAIN GEAR WHEELWELL, MUST BE INSTALLED WITH LOWER, OUTBOARD LEG UNDER SPOILER CABLE TO AVOID CHAFFING THE CABLES, GUARD, AND EXTENSION HYDRAULIC LINES.

3. Inspection/Check Left Hydraulic Power Manifold

A. Check Left power Manifold

- (1) Check system selector valve (see 29-10-18).
- (2) Check bogie swivel unlock valve (see Chapter 32).
- (3) Check priority valve (see 29-10-23).
- (4) Check system selector valve, bogie swivel unlock valve, and priority valve for security of attachment and leaks.
- (5) Check hydraulic lines for security of attachment, general condition, clearance, and leaks.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

LEFT HYDRAULIC POWER MANIFOLD - MAINTENANCE PRACTICES

1. General

- A. The left hydraulic power manifold is located overhead in the forward inboard corner of the left main gear wheel well.
- B. Access to the left power manifold is through the left main gear inboard door.

2. Removal/Installation Left Hydraulic Power Manifold

A. Remove Left Power Manifold

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Disconnect pushrod from operating crank of system selector valve.
- (5) Disconnect hydraulic lines from system selector valve and power manifold.
- (6) Remove priority valve from manifold (see 29-10-23).
- (7) Remove system selector valve from manifold (see 29-10-18).
- (8) Remove left hydraulic power manifold.

B. Install Left Power Manifold


- (1) Make certain that auxiliary hydraulic pump control circuit breaker is open.
- (2) Install left power manifold on its support.
- (3) Install system selector valve on manifold (see 29-10-18).
- (4) Install priority valve on manifold (see 29-10-23).
- (5) Connect hydraulic lines to system selector valve and power manifold.
- (6) Connect pushrod to operating crank of system selector valve and adjust as necessary (see 29-10-18).
- (7) Close auxiliary hydraulic pump control circuit breaker.

Jun 15/67

Printed in U.S.A.

29-10-19  
CODE 2  
Page 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

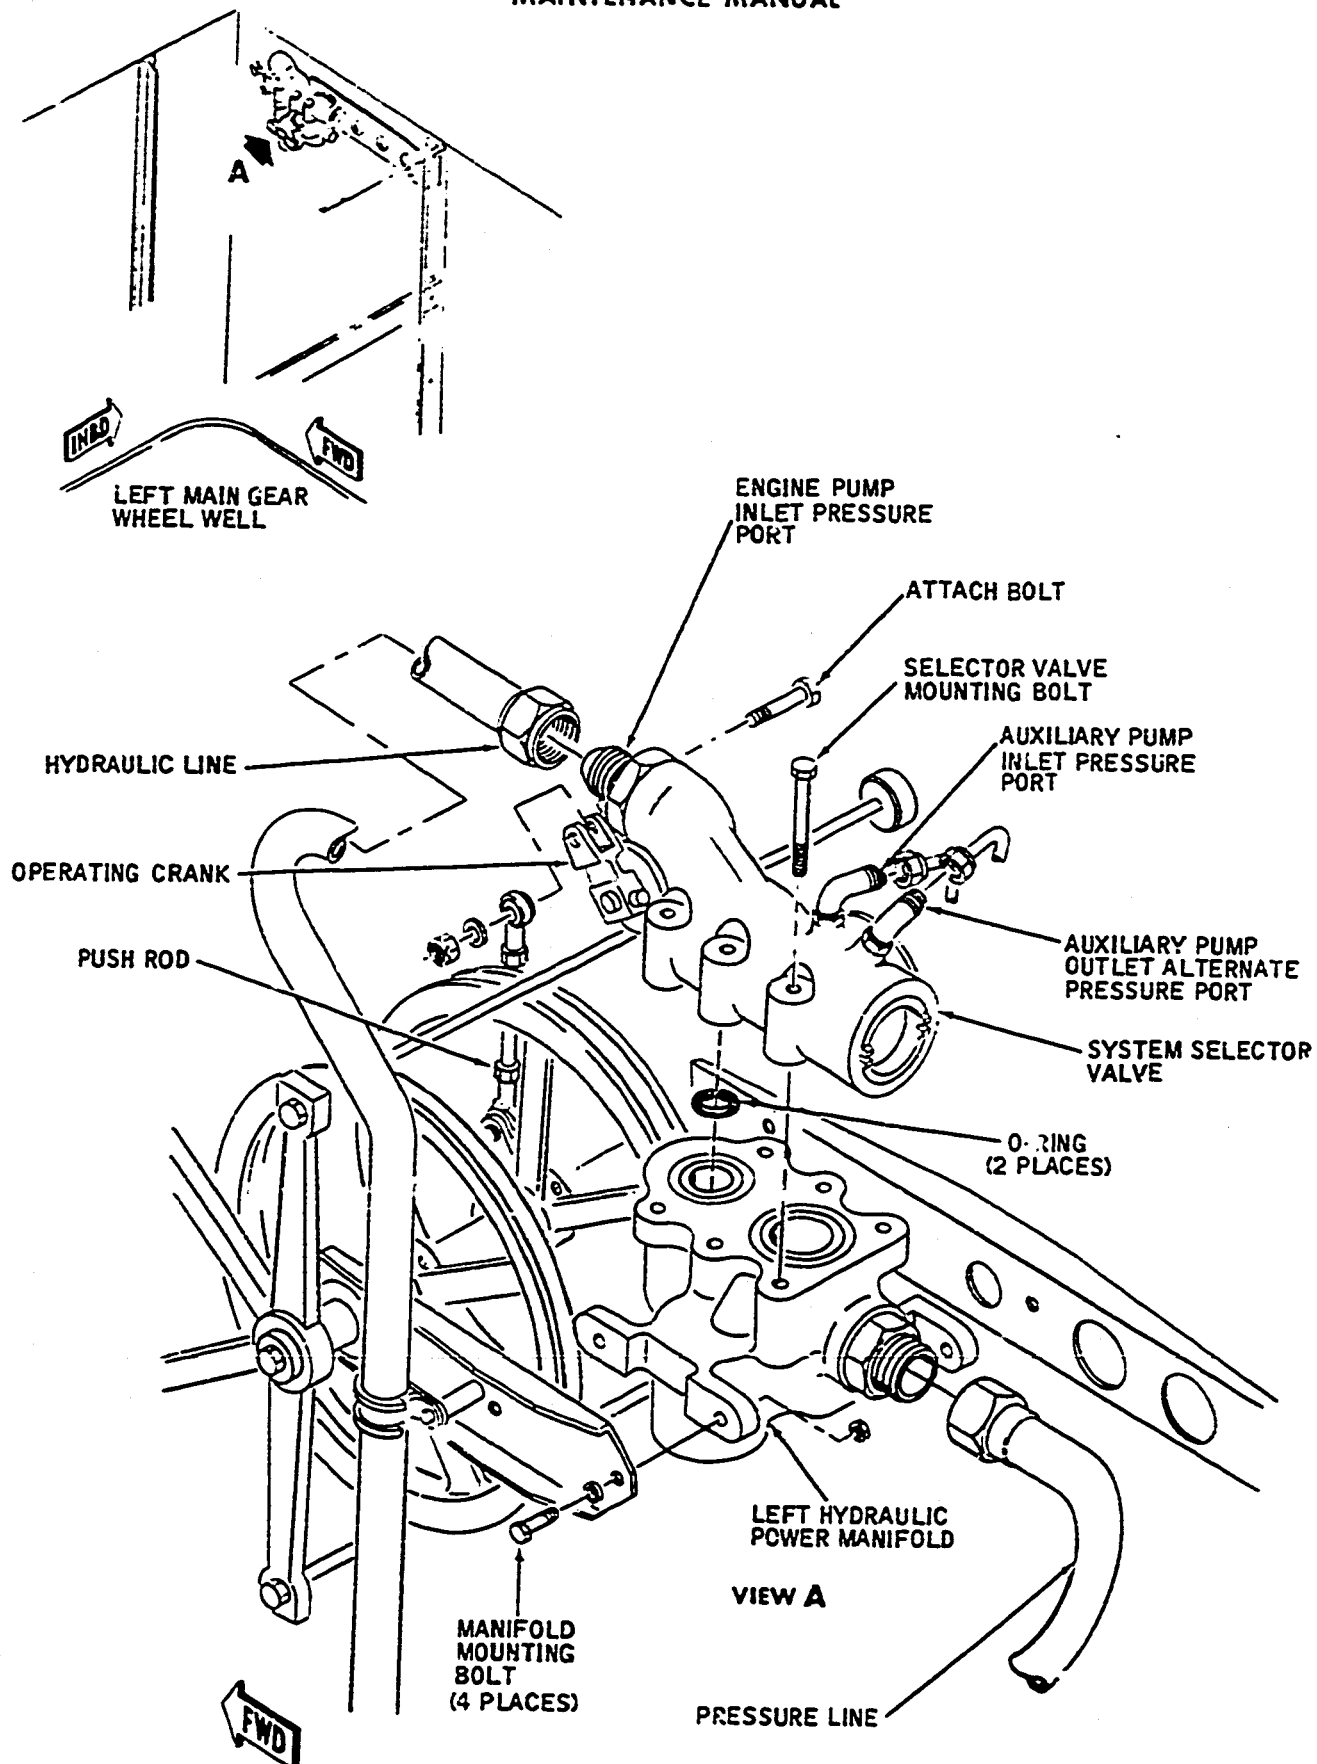

HA2-859

Left Hydraulic Power Manifold -- Installation  
 Figure 201

29-10-19  
 CODE 2  
 Page 202

Printed in U S A

Jun 15/67

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

**CAUTION:** HYDRAULIC POWER MANIFOLD PROTECTION GUARD, LOCATED IN FORWARD INBOARD CORNER OF LEFT MAIN GEAR WHEELWELL, MUST BE INSTALLED WITH LOWER, OUTBOARD LEG UNDER SPOILER CABLE TO AVOID CHAFFING THE CABLES, GUARD, AND EMPENNAGE HYDRAULIC LINES.

3. Inspection/Check Left Hydraulic Power Manifold

A. Check Left Power Manifold

- (1) Check system selector valve (see 29-10-18).
- (2) Check priority valve (see 29-10-23).
- (3) Check system selector valve and priority valve for security of attachment and leaks.
- (4) Check hydraulic lines for security of attachment, general condition, clearance, and leaks.
- (5) Check left power manifold for security of attachment and leaks.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

LEFT HYDRAULIC POWER MANIFOLD - MAINTENANCE PRACTICES

1. General

- A. The left hydraulic power manifold is located overhead in the forward inboard corner of the left main gear wheel well.
- B. Access to the left power manifold is through the left main gear inboard door.

2. Removal/Installation Left Hydraulic Power Manifold


A. Remove Left Power Manifold

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) On airplanes 801-811, relieve air pressure from emergency air ejector supply bottle (see Chapter 20).
- (5) On airplanes 801-811, disconnect pushrods from operating cranks of system selector valve, bogie swivel unlock valve, and emergency air ejector control valve.
- (6) Disconnect hydraulic lines from bogie unlock valve, system selector valve, priority valve, and power manifold.
- (7) On airplanes 801-811, disconnect air lines from emergency air ejector control valve.
- (8) Remove priority valve from manifold (see 29-10-23).
- (9) Remove bogie unlock valve from manifold (see Chapter 32).
- (10) On airplanes 801-811, remove emergency air ejector control valve from manifold.
- (11) Remove system selector valve from manifold (see 29-10-18).
- (12) Remove left hydraulic power manifold.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

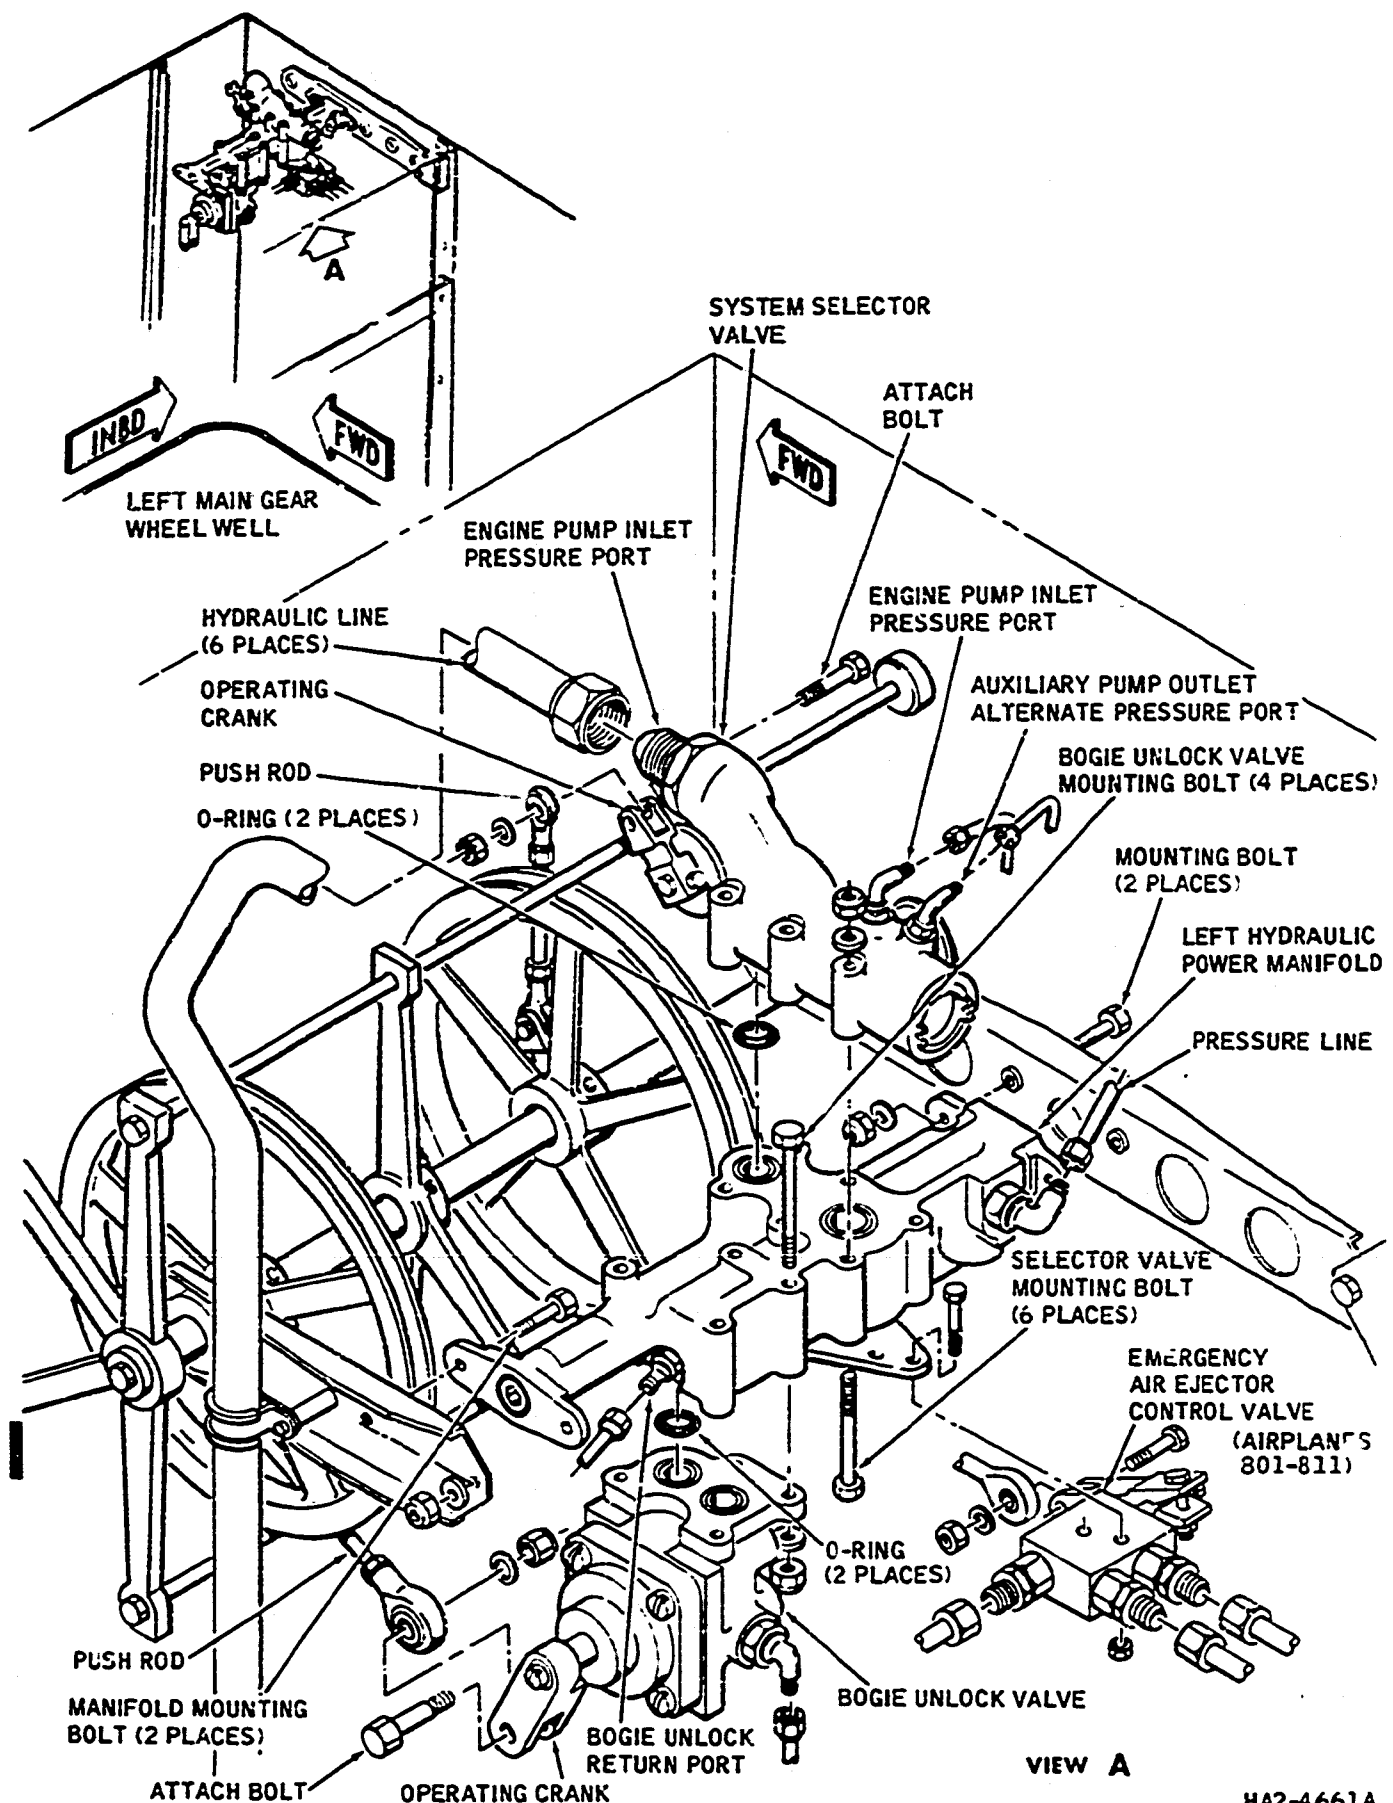

HA2-4661A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

B. Install Left Power Manifold

- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel is open.
- (2) Install left power manifold on its support.
- (3) Install system selector valve on manifold (see 29-10-18).
- (4) Install emergency air ejector control valve on manifold.
- (5) Install bogie unlock valve on manifold (see Chapter 32).
- (6) Install priority valve on manifold (see 29-10-23).
- (7) Connect air lines to emergency air ejector control valve on airplanes 801-811.
- (8) Connect hydraulic lines to system selector valve, bogie unlock valve, priority valve, and power manifold.
- (9) Connect pushrod to operating crank of system selector valve and adjust as necessary (see 29-10-18).
- (10) Connect pushrod to bogie swivel unlock valve and adjust as necessary (see Chapter 32).
- (11) Connect pushrod to emergency air ejector control valve and adjust as necessary on airplanes 801-811 (see Chapter 78).
- (12) On airplanes 801-811, pressurize emergency air ejector supply bottle (see Chapter 20).
- (13) Close auxiliary hydraulic pump control circuit breaker.

**CAUTION:** HYDRAULIC POWER MANIFOLD PROTECTION GUARD, LOCATED IN FORWARD INBOARD CORNER OF LEFT MAIN GEAR WHEELWELL, MUST BE INSTALLED WITH LOWER, OUTBOARD LEG UNDER SPOILER CABLE TO AVOID CHAFFING THE CABLES, GUARD, AND EMPENNAGE HYDRAULIC LINES.

3. Inspection/Check Left Hydraulic Power Manifold

A. Check Left Power Manifold

- (1) Check system selector valve (see 29-10-18).
- (2) Check bogie swivel unlock valve (see Chapter 32).
- (3) Check priority valve (see 29-10-23).



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) Check emergency air ejector control valve on airplanes 801-811 (see Chapter 78).
- (5) Check system selector valve, bogie swivel unlock valve, and priority valve, for security of attachment and leaks.
- (6) Check hydraulic lines for security of attachment, general condition, clearance, and leaks.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

RIGHT HYDRAULIC POWER MANIFOLD - MAINTENANCE PRACTICES

1. General

- A. The right hydraulic power manifold is located overhead in the forward inboard corner of the right main gear wheel well.
- B. Access to the right power manifold is through the right main gear inboard door.

2. Removal/Installation Right Hydraulic Power Manifold


A. Remove Right Power Manifold

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Disconnect pushrods from operating cranks of spoiler control valve, slot control valve, wing flap control valve, main gear control valve, and power brake valve (see Chapters 27 and 32).
- (5) Disconnect all hydraulic lines from right hydraulic power manifold.
- (6) Remove brake pressure accumulator line connected between power brake valve and T-fitting on brake pressure accumulator.
- (7) Remove hydraulic lines connected between up and down pressure ports of main gear control valve and T-fittings located on pressure seal bulkhead.
- (8) Disconnect hydraulic lines from spoiler control valve.
- (9) Disconnect hydraulic lines from wing flap control valve.
- (10) Disconnect hydraulic lines from main gear control valve.
- (11) Disconnect hydraulic lines from slot valve.
- (12) Disconnect hydraulic lines from power brake valve.
- (13) Remove manifold with valves attached.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

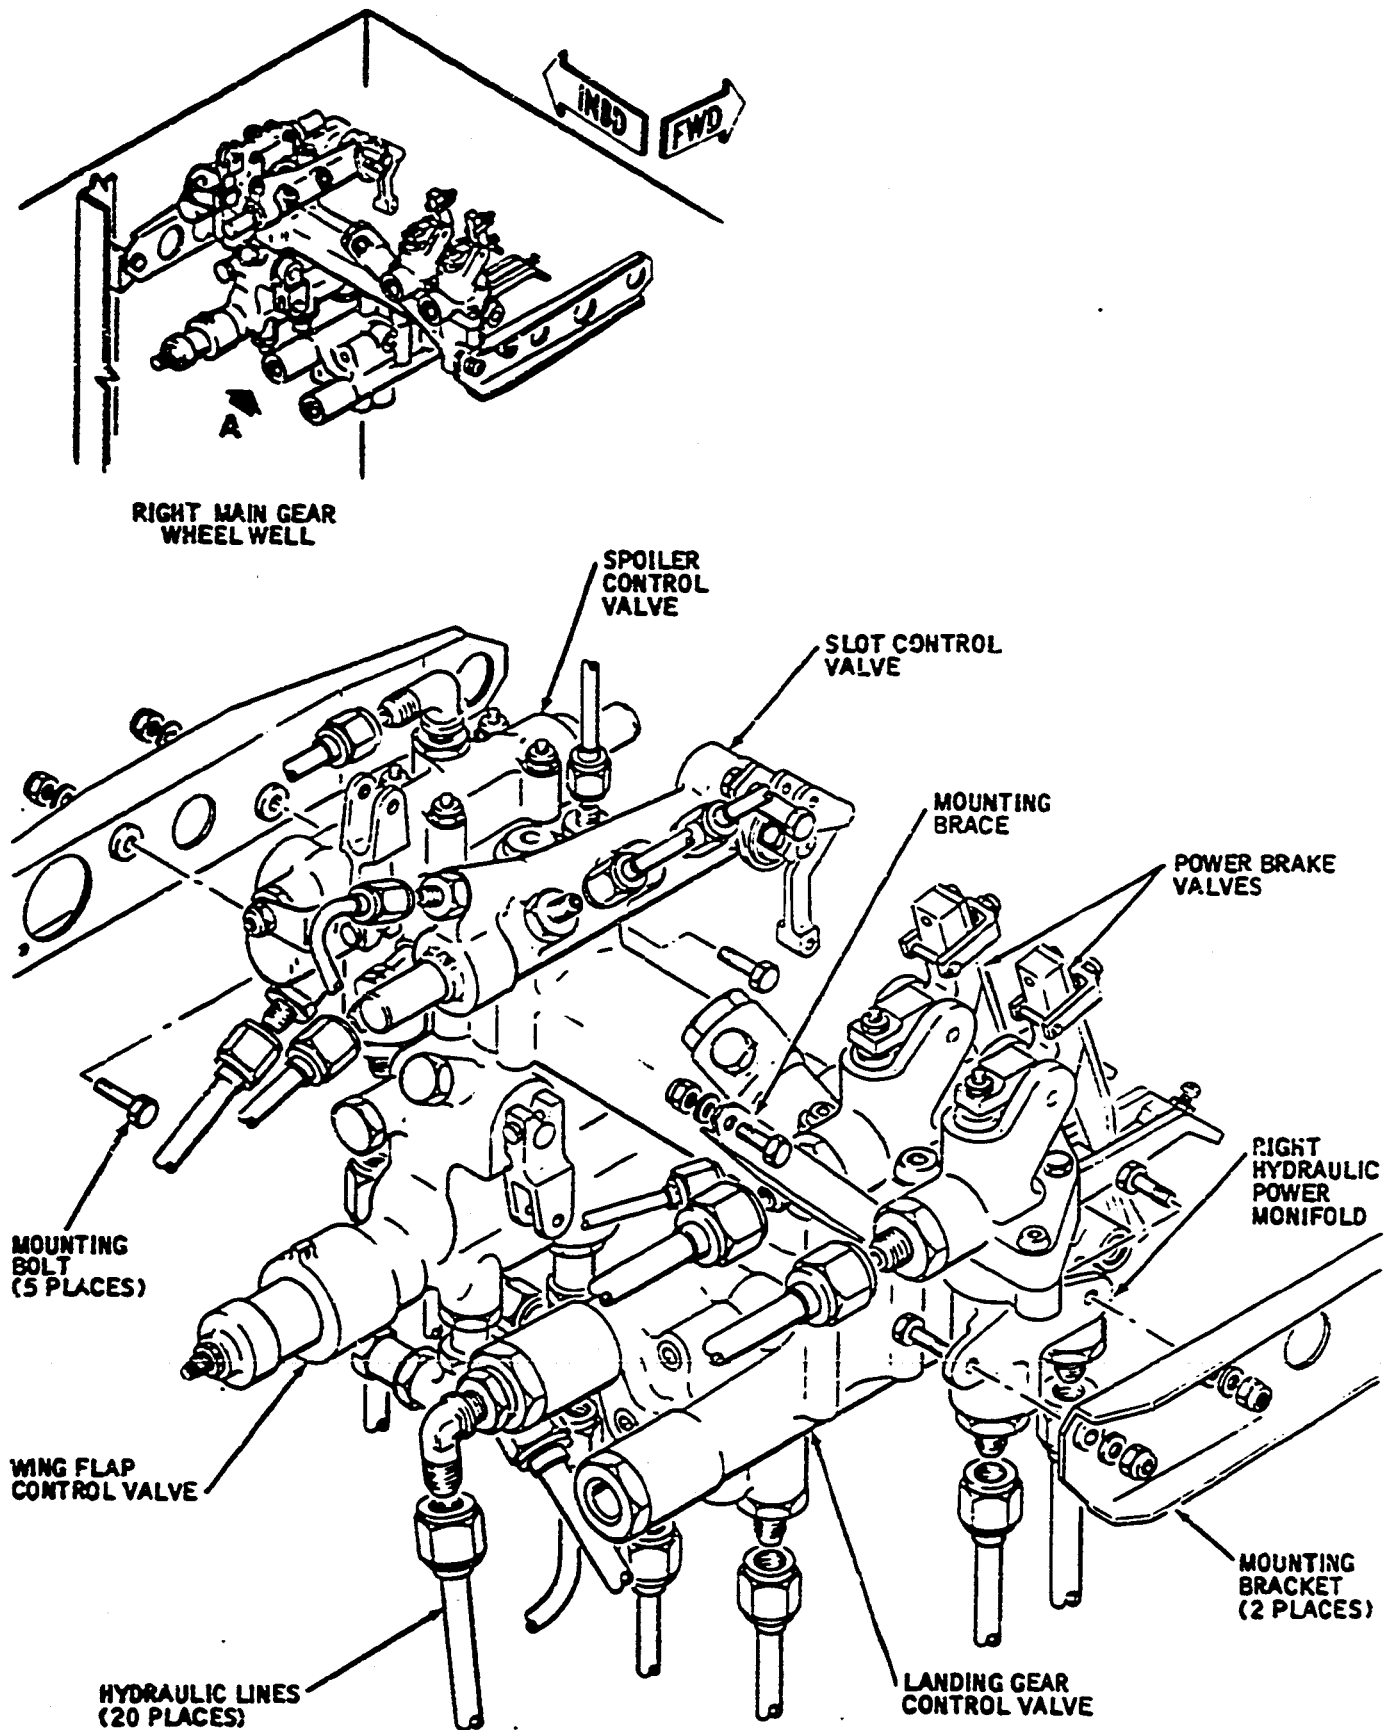

VIEW A

Right Hydraulic Power Manifold -- Installation  
 Figure 201

HA2-103

29-10-20  
 CODE 1  
 Page 202

Printed in U.S.A.

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

B. Install Right Power Manifold

- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 is open.
- (2) Install manifold with power brake valve, main gear control valve, wing flap control valve spoiler control valve, and slot valve installed on manifold.

NOTE: Installation of the valves on the manifold is covered in Chapters 27 and 32.

- (3) Connect hydraulic lines to power brake valve.
- (4) Connect hydraulic lines to main gear control valve.
- (5) Connect hydraulic lines to wing flap control valve.
- (6) Connect hydraulic lines to spoiler control valve.
- (7) Connect hydraulic lines to slot valve.
- (8) Install hydraulic lines between up and down ports of main gear control valve and T-fittings located on pressure seal bulkhead.
- (9) Install brake pressure accumulator line between power brake valve and T-fitting on brake pressure accumulator.
- (10) Connect all hydraulic lines to right hydraulic power manifold.
- (11) Connect pushrods to operating cranks on spoiler control valve, wing flap control valve, and slot control valve (see Chapter 27).
- (12) Connect pushrods to operating cranks on power brake control valve and main gear control valve (see Chapter 32).
- (13) Close auxiliary hydraulic pump control circuit breaker.

3. Inspection/Check Right Hydraulic Power Manifold

A. Check Right Power Manifold

- (1) Check main gear control valve and power brake valve as described in Chapter 32.
- (2) Check wing flap control valve, spoiler control valve, and slot control valve as described in Chapter 27.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Check hydraulic lines to all components on right power manifold for general condition, security of attachment, clearance, and leaks.
- (4) Check all valves which attach to manifold for leaks.
- (5) Check pushrods to all valves on manifold for security of attachment, lockwire where applicable, cotter keys, and general condition.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC MANIFOLDS RETURN CHECK VALVE - MAINTENANCE PRACTICES

1. General

- A. The hydraulic manifolds return check valve is located in return line A, near the dual filter and relief valve on the keel web.
- B. Access to the check valve is through the left main gear wheel well.

2. Removal/Installation Hydraulic Manifolds Return Check Valve

A. Remove Check Valve

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Disconnect A return lines from hydraulic manifolds return check valve.
- (5) Remove check valve.

B. Install Check Valve

- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 is open.
- (2) Install manifolds return check valve with flow arrow pointing forward.
- (3) Connect A return lines to each end of check valve.
- (4) Close auxiliary hydraulic pump control circuit breaker.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC POWER SYSTEM ACCUMULATOR - MAINTENANCE PRACTICES

1. General

- A. The hydraulic power system accumulator is located immediately aft of the left hydraulic power manifold, overhead in the left main gear wheel well.
- B. Access to the accumulator is through the left main gear inboard door.

2. Tools and Equipment Required


- A. Pressure cylinder (clean, dry, compressed nitrogen).

3. Servicing Hydraulic Power System Accumulator

A. Check Power System Accumulator Pressure

- (1) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (2) Check power system accumulator pressure gage; gage should indicate 1000 psi.
- (3) If accumulator requires additional pressurization, proceed as follows:
  - (a) Remove filler valve cap.
  - (b) Attach nitrogen service hose chuck to filler valve stem.
  - (c) Loosen filler valve swivel nut a maximum of 3/4 turn.
  - (d) Charge accumulator with dry nitrogen to 1000 ( $\pm 50$ ) psi.
  - (e) Tighten swivel nut to torque of 50 to 70 inch-pounds.
  - (f) Remove service hose.
  - (g) Install valve cap; tighten to maximum fingertightness.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

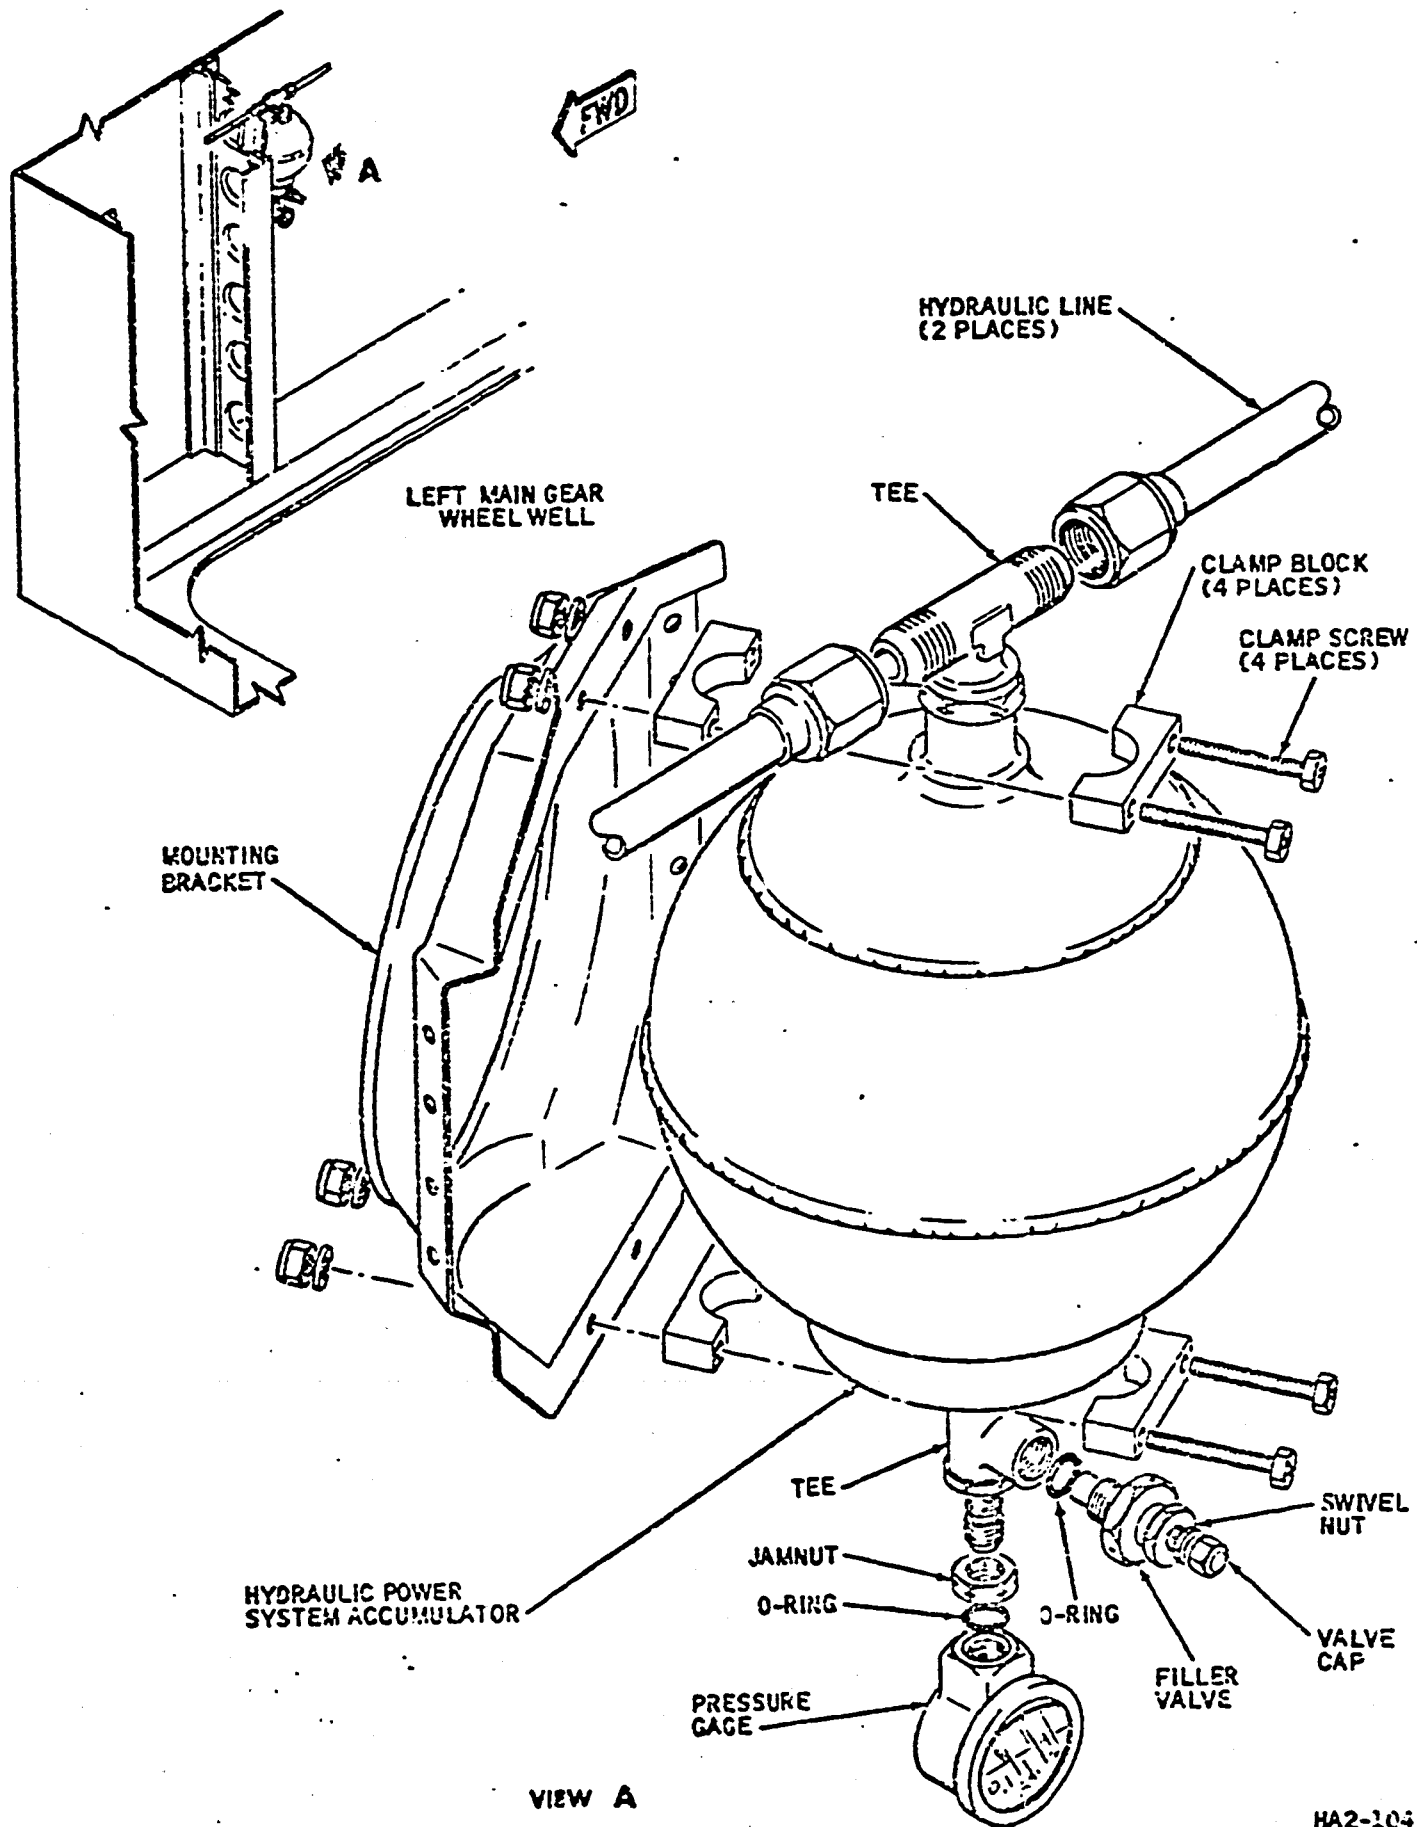

HA2-104

Hydraulic Power System Accumulator -- Installation  
 Figure 201



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

4. Removal/Installation Hydraulic Power System Accumulator

A. Remove Power System Accumulator

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Relieve nitrogen pressure from lower chamber of accumulator as follows:
  - (a) Remove filler valve cap.
  - (b) Loosen filler valve swivel nut a maximum of 3/4 turn.
  - (c) Depress filler valve core and hold until pressure has bled off to zero; release valve core and tighten swivel nut.
  - (d) Install filler valve cap.
- (5) Disconnect hydraulic lines from T-fitting at top of accumulator.
- (6) Remove accumulator.
- (7) Remove T-fitting from top port, and pressure gage and filler valve from lower port fitting; retain for installation in new unit. Discard O-rings.

B. Install Power System Accumulator.

- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 is open.
- (2) Using new O-ring, install T-fitting in top port of accumulator.
- (3) Using new O-ring, install pressure gage and filler valve on bottom port fitting of accumulator. Make certain that pressure gage is properly positioned and filler valve is accessible after accumulator is installed.
- (4) Install accumulator.
- (5) Connect hydraulic lines to T-fitting at top of accumulator.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Charge accumulator with dry nitrogen (see paragraph 3).
- (7) Close auxiliary hydraulic pump control circuit breaker.

5. Inspection/Check Hydraulic Power System Accumulator

A. Check Power System Accumulator

- (1) Pressurize hydraulic system (see 29-00, Maintenance Practices).
- (2) Check accumulator upper port and hydraulic lines for leaks.
- (3) Check accumulator lower port, filler valve, and pressure gage for general condition, gage position for ease of reading, filler valve for accessibility, and connections for nitrogen leaks.
- (4) Check accumulator and mounting clamps for general condition and security of attachment.
- (5) Depressurize hydraulic system (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC SYSTEM PRIORITY VALVE - MAINTENANCE PRACTICES

1. General

- A. The priority valve is located directly below the left power manifold in the overhead area of the left main gear wheel well approximately 12 inches aft of the rear spar.
- B. Access to the priority valve is through the left main gear inboard door.

2. Removal/Installation Hydraulic System Priority Valve

A. Remove Priority Valve

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Disconnect hydraulic lines from T-fitting at lower end of priority valve.
- (5) Remove clamp and unscrew priority valve from T-fitting in manifold port Discard O-ring.
- (6) Remove fitting from priority valve; retain for use in new unit. Discard O-ring.


B. Install Priority Valve

- (1) Make certain that auxiliary hydraulic pump control circuit breaker is open.
- (2) Using new O-ring, screw priority valve on T-fitting in manifold port.

NOTE: Make certain that arrow on priority valve points downward.

- (3) Install clamp to secure priority valve.
- (4) Using new O-ring, install fitting in bottom of priority valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

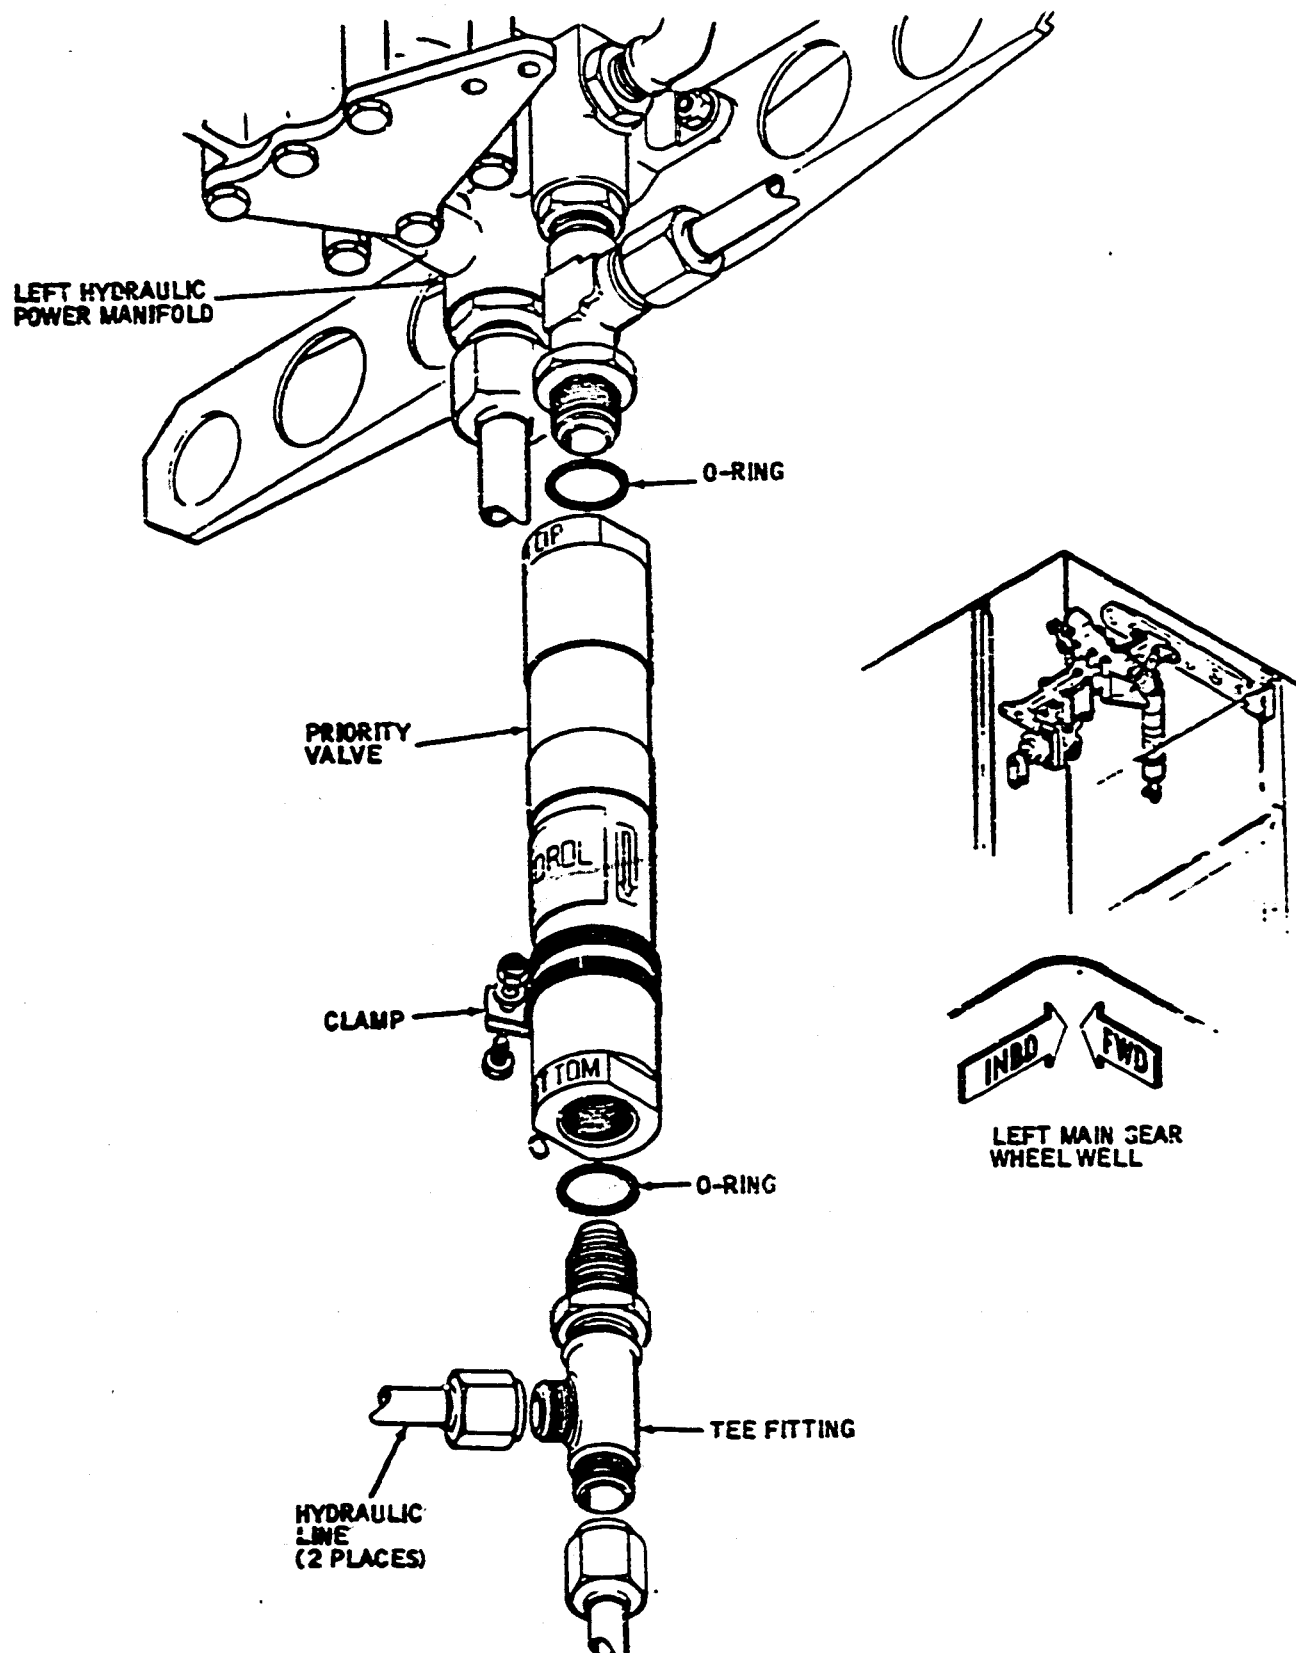

HA2-158

Hydraulic System Priority Valve -- Installation  
Figure 201

29-10-23  
CODE 1  
Page 202

Printed in U.S.A.

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Connect hydraulic lines to T-fitting in lower end of valve.
- (6) Close auxiliary hydraulic pump circuit breaker.
- (7) Fill hydraulic reservoir as required (see instruction placard on reservoir).

CAUTION: HYDRAULIC POWER MANIFOLD PROTECTION GUARD, LOCATED IN FORWARD INBOARD CORNER OF LEFT MAIN GEAR WHEELWELL, MUST BE INSTALLED WITH LOWER, OUTBOARD LEG UNDER SPOILER CABLE TO AVOID CHAFFING THE CABLES, GUARD, AND EMPENNAGE HYDRAULIC LINES.

### 3. Inspection/Check Hydraulic System Priority Valve

#### A. Check Priority Valve

- (1) Connect hydraulic test stand to ground service connections.
- (2) Place aileron hydraulic power and rudder hydraulic power shutoff valve control levers in on position.
- (3) Place hydraulic system selector control lever in general system (normal) position.
- (4) Set hydraulic test stand at approximately 5 gpm fluid flow, and pressurize hydraulic system to 2000 psi.

WARNING: MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION AND THAT LANDING GEAR LOCKPINS ARE INSTALLED.

- (5) Place wing flap handle in down position.

WARNING: MAKE CERTAIN THAT WING FLAP AREA IS CLEAR OF PERSONNEL AND OBSTRUCTIONS.

- (6) While flaps are moving down, reduce test stand pressure until flaps just stop. Test stand pressure should be 1650-psi minimum.
- (7) Hydraulic system pressure indicator in flight compartment should indicate 250 psi or lower.
- (8) Operate ailerons or rudder to make certain that flight controls still have pressure.

NOTE: If controls are operated too fast, ailerons or rudder will revert to manual operation when system pressure drops below 1100 (+100, -50) psi.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (9) Increase test stand pressure until flaps just start to move. Test stand pressure should be 2000 (+100, -50) psi.
- (10) Pressurize hydraulic system to full system pressure (3000 psi) (see 29-00).
- (11) Check priority valve hydraulic connections for leaks.
- (12) Check priority valve for security of attachment and general condition.
- (13) Check hydraulic lines for clearance and general condition.
- (14) Shut down and disconnect hydraulic test stand.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC SYSTEM PRIORITY VALVE - MAINTENANCE PRACTICES

1. General

- A. The priority valve is located directly below the left power manifold in the overhead area of the left main gear wheel well approximately 12 inches aft of the rear spar.
- B. Access to the priority valve is through the left main gear inboard door.

2. Removal/Installation Hydraulic System Priority Valve

A. Remove Priority Valve

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Disconnect hydraulic lines from T-fitting at lower end of priority valve.
- (5) Remove clamp and unscrew priority valve from T-fitting in manifold port. Discard O-ring.
- (6) Remove fitting from priority valve; retain for use in new unit. Discard O-ring.


B. Install Priority Valve

- (1) Make certain that auxiliary hydraulic pump control circuit breaker is open.
- (2) Using new O-ring, screw priority valve on T-fitting in manifold port.

NOTE: Make certain that arrow on priority valve points downward.

- (3) Install clamp to secure priority valve.
- (4) Using new O-ring, install fitting in bottom of priority valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

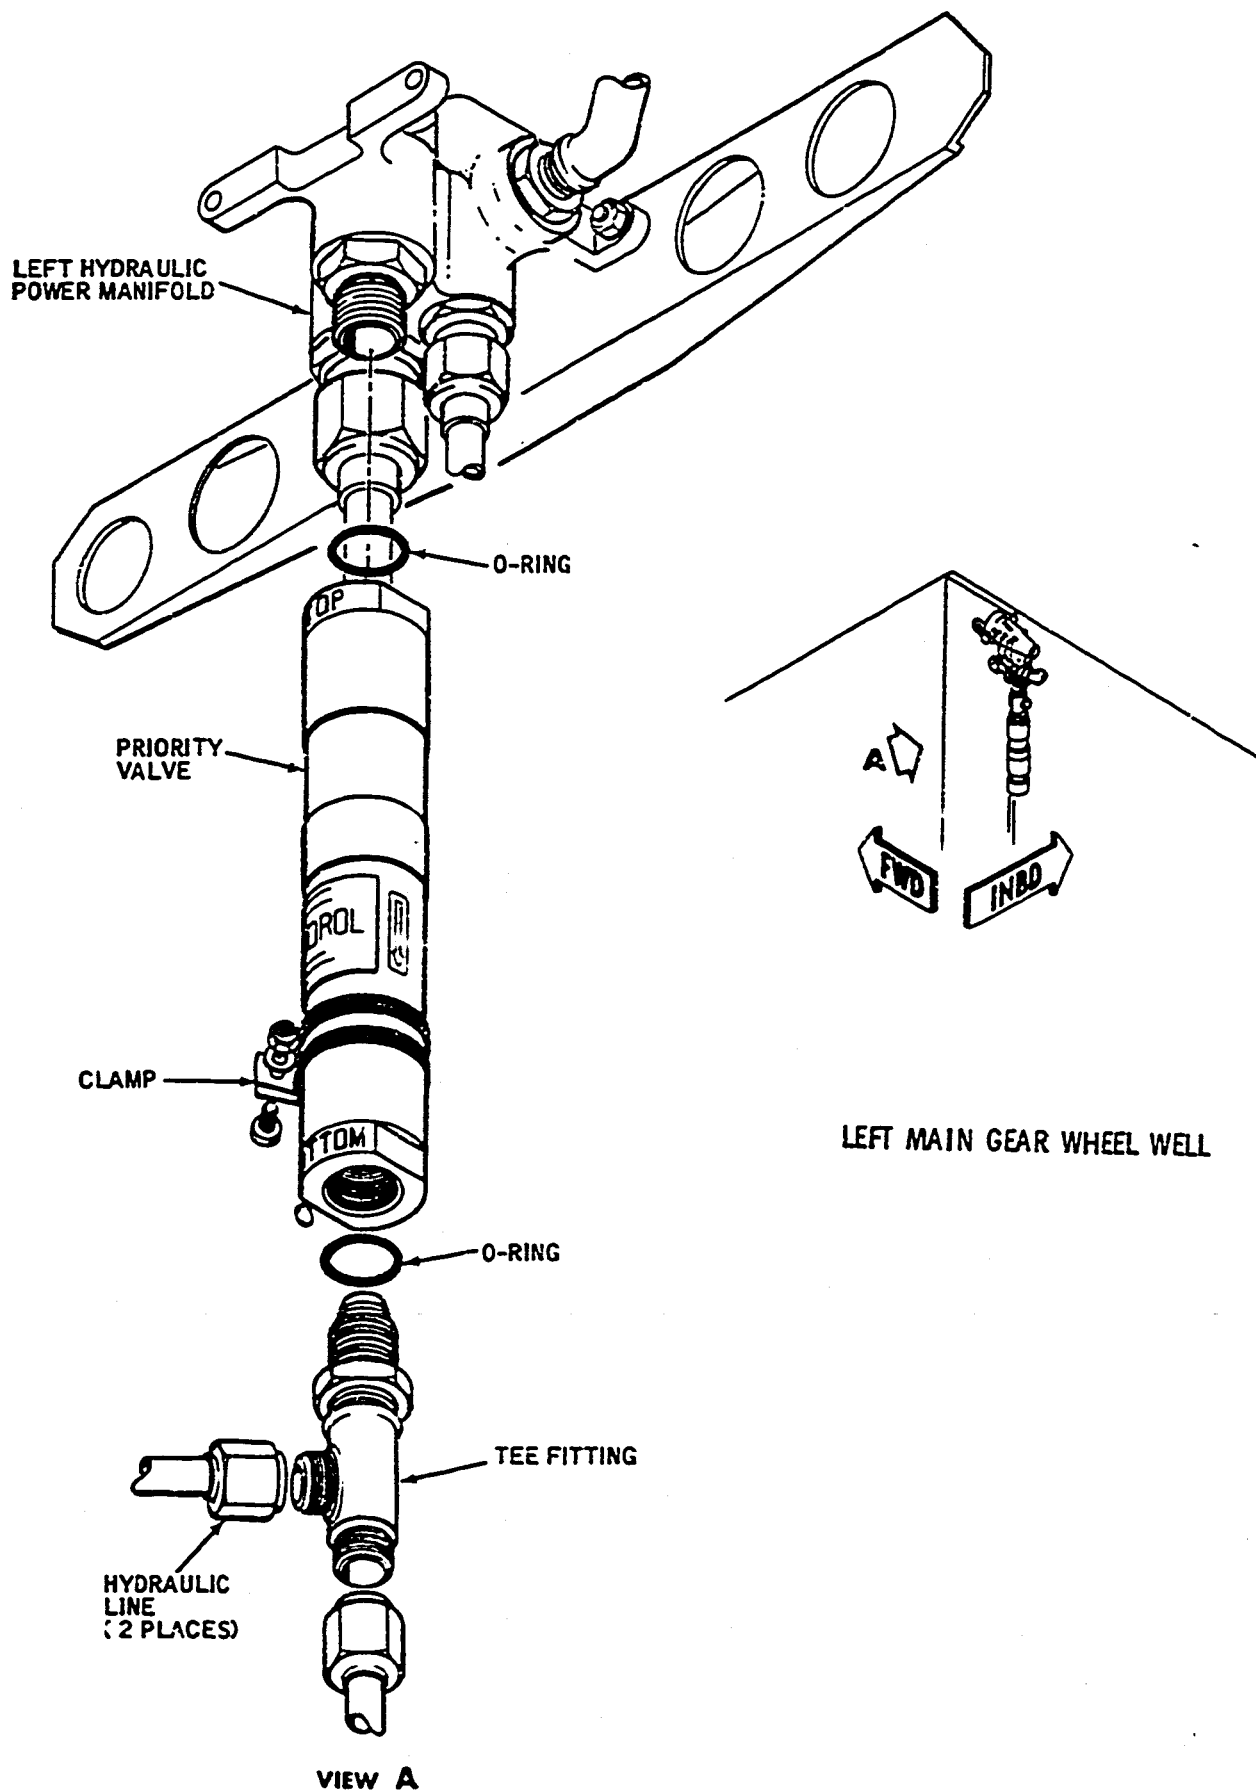

Hydraulic System Priority Valve -- Installation  
Figure 201

HA2-880A



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Connect hydraulic lines to T-fitting in lower end of valve.
- (6) Close auxiliary hydraulic pump circuit breaker.
- (7) Fill hydraulic reservoir as required (see instruction placard on reservoir).

**CAUTION:** HYDRAULIC POWER MANIFOLD PROTECTION GUARD, LOCATED IN FORWARD INBOARD CORNER OF LEFT MAIN GEAR WHEELWELL, MUST BE INSTALLED WITH LOWER, OUTBOARD LEG UNDER SPOILER CABLE TO AVOID CHAFFING THE CABLES, GUARD, AND EMPENNAGE HYDRAULIC LINES.

### 3. Inspection/Check Hydraulic System Priority Valve

#### A. Check Priority Valve

- (1) Connect hydraulic test stand to ground service connections.
- (2) Place aileron hydraulic power and rudder hydraulic power shutoff valve control levers in on position.
- (3) Place hydraulic system selector control lever in general system (normal) position.
- (4) Set hydraulic test stand at approximately 5 gpm fluid flow, and pressurize hydraulic system to 2000 psi.

**WARNING:** MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION AND THAT LANDING GEAR LOCKPINS ARE INSTALLED.

- (5) Place wing flap handle in down position.

**WARNING:** MAKE CERTAIN THAT WING FLAP AREA IS CLEAR OF PERSONNEL AND OBSTRUCTIONS.

- (6) While flaps are moving down, reduce test stand pressure until flaps just stop. Test stand pressure should be 1650-psi minimum.
- (7) Hydraulic system pressure indicator in flight compartment should indicate 250 psi or lower.
- (8) Operate ailerons or rudder to make certain that flight controls still have pressure.

**NOTE:** If controls are operated too fast, ailerons or rudder will revert to manual operation when system pressure drops below 1100 (+100, -50) psi.

- (9) Increase test stand pressure until flaps just start to move. Test stand pressure should be 2000 (+100, -50) psi.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (10) Pressurize hydraulic system to full system pressure (3000 psi)  
(see 29-00).
- (11) Check priority valve hydraulic connections for leaks.
- (12) Check priority valve for security of attachment and general condition.
- (13) Check hydraulic lines for clearance and general condition.
- (14) Shut down and disconnect hydraulic test stand.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

TWO-STAGE RETURN FILTERS - MAINTENANCE PRACTICES

1. General

- A. The two-stage return filters are located on the outboard bulkhead of the left main gear wheel well, just aft of the wing rear spar. One filter is connected in the A return line and the other is connected in the B return line; both are just upstream of the reservoir return fluid manifold.
- B. Access to the filters is through the left main gear inboard door.
- C. Removal/installation and inspection/check procedures for the two-stage return filters are identical except as noted.

2. Removal/Installation Two-Stage Return Filters

A. Remove Two-Stage Return Filter

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) If two-stage return filter in A return line is being removed, drain hydraulic system reservoir (see 29-00, Maintenance Practices).


NOTE: The B return line has a check valve at the reservoir to prevent siphoning of hydraulic fluid from the reservoir.

- (5) Disconnect hydraulic lines to inlet and outlet ports of filter.
- (6) Remove filter.
- (7) Remove fittings from inlet and outlet ports of filter and retain for use in new unit. Discard O-rings.

B. Install Two-Stage Return Filter

- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel is open.
- (2) Using new O-rings, install fittings in inlet and outlet ports of filter.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

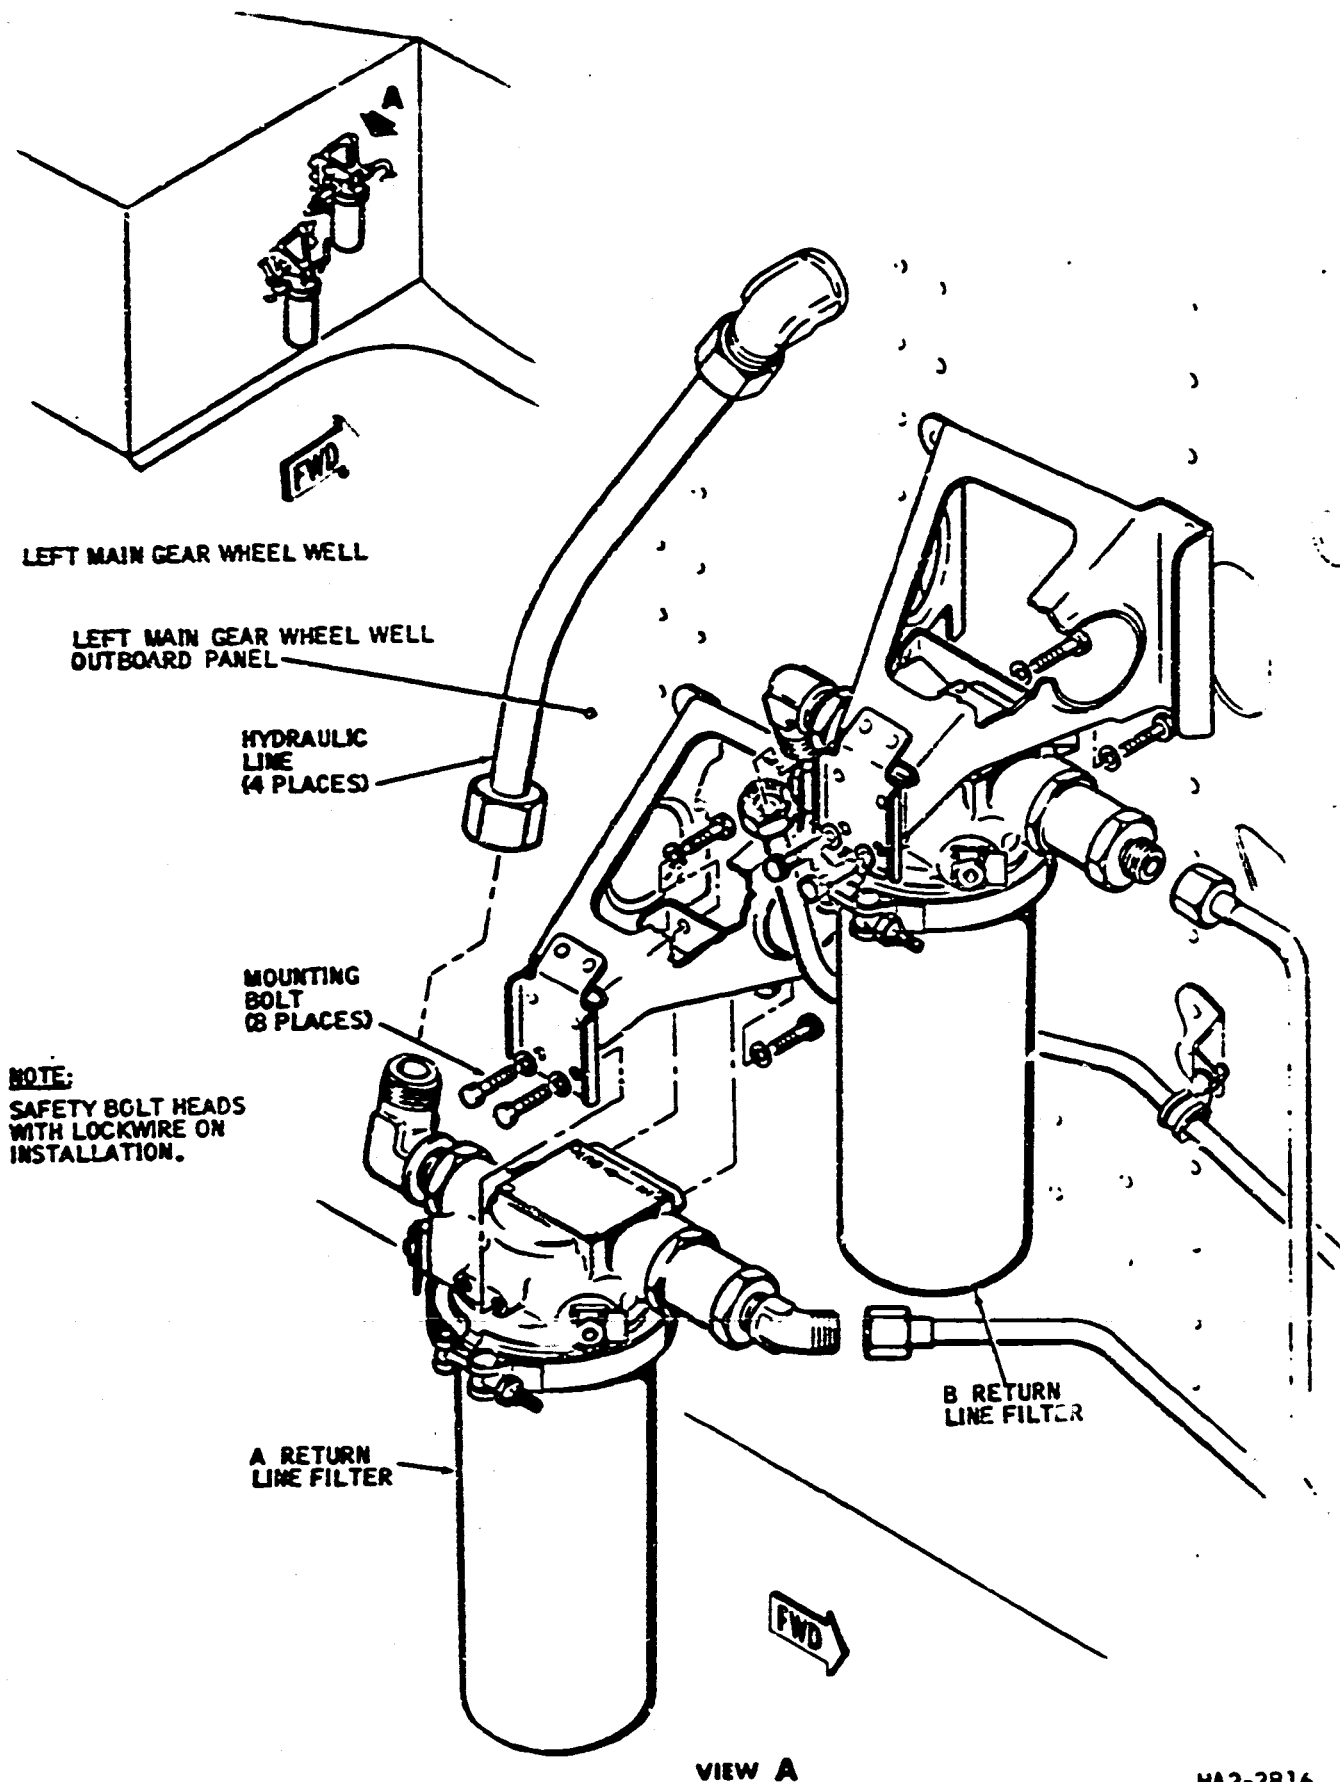

HA2-2816

Two-Stage Return Filters -- Installation  
 Figure 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Fill filter bowl and elements with clean hydraulic fluid.
- (4) Install filter and safety mounting bolts with lockwire.
- (5) Connect hydraulic lines to inlet and outlet ports of filter.
- (6) Depress both primary and secondary stage differential pressure indicator buttons.
- (7) Close auxiliary hydraulic pump control circuit breaker.
- (8) If two-stage filter in A return line is being installed and hydraulic system reservoir was drained for filter removal, fill hydraulic system reservoir (see instruction placard on reservoir).

3. Inspection/Check Two-Stage Return Filters

A. Check Two-Stage Return Filter

- (1) Pressurize hydraulic system (see 29-00, Maintenance Practices).
- (2) Check two-stage return filter for leaks, general condition, security of mounting, and proper lockwire safety.
- (3) Check that both primary and secondary stage differential pressure indicator buttons are depressed.
- (4) Depressurize hydraulic system (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

TWO-STAGE RETURN FILTER ELEMENTS - MAINTENANCE PRACTICES

1. General

- A. The two-stage return filters are located on the outboard bulkhead of the left main gear wheel well, just aft of the wing rear spar. One filter is connected in the A return line and the other is connected in the B return line; both are just upstream of the reservoir return fluid manifold. Each filter contains a primary stage and a secondary stage filter element. The primary stage element is of the disposable type and the secondary stage element is of the cleanable type. The secondary stage element is smaller in diameter than the primary stage element and is located inside the primary stage element in a concentric assembly.
- B. The ultrasonic method is recommended for cleaning the stainless steel mesh secondary stage elements.
- C. Access to the filters is through the left main gear inboard door.
- D. Removal/installation and inspection/check procedures for the filter elements are identical for the A return and B return two-stage filters.

2. Tools and Equipment Required

- A. Varsol cleaning solvent (Federal Specification TT-T-291) is used for cleaning filter head and bowl.

3. Removal/Installation Two-Stage Return Filter Elements

A. Remove Two-Stage Return Filter Elements

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) If removing elements from two-stage return filter in A return line, drain hydraulic system reservoir (see 29-00, Maintenance Practices).


NOTE: The B return line has a check valve at the reservoir to prevent siphoning of hydraulic fluid from the reservoir.

Jun 15/67

Printed in U.S.A.

29-10-25  
CODE 1  
Page 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

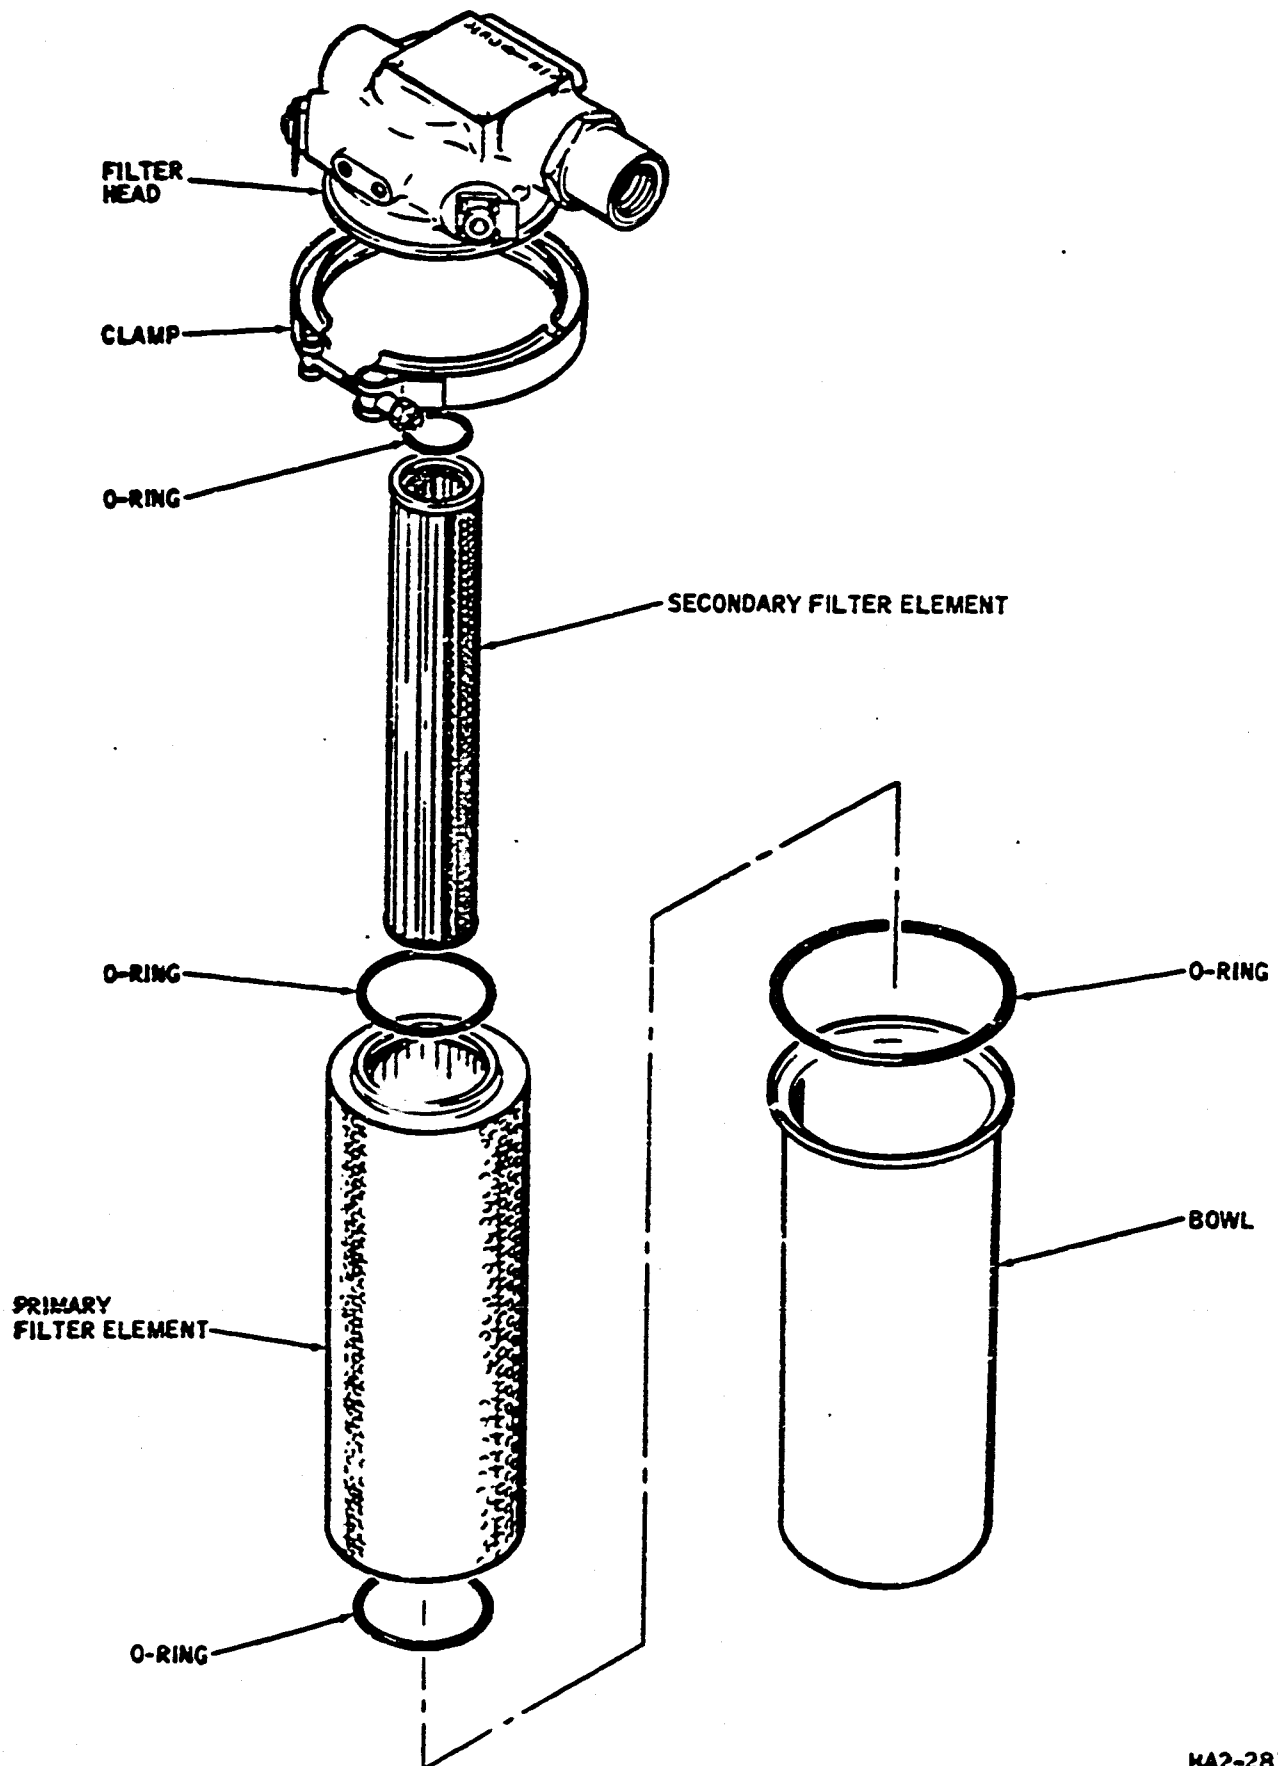

HA2-2817

Two-Stage Return Filter Elements -- Installation  
Figure 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Remove filter bowl clamp and filter bowl. Discard O-ring.
- (6) Remove primary and secondary stage filter elements from filter head. Discard O-rings and primary stage filter element.
- (7) Wash filter bowl and filter head with clean Varsol (Federal Specification TT-T-291) and air dry.

**B. Install Two-Stage Return Filter Elements**

- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel is open.
- (2) Using new O-rings, install filter elements on filter head.
- (3) Fill filter bowl with clean hydraulic fluid.
- (4) Using new O-ring, install filter bowl and bowl clamp.
- (5) Tighten clamp to torque of 60 to 84 inch-pounds.
- (6) Depress both primary and secondary stage differential pressure indicators buttons.
- (7) If elements are being installed in two-stage return filter in A return line and reservoir was drained for removal, fill hydraulic system reservoir (see instruction placard on reservoir).
- (8) Close auxiliary hydraulic pump control circuit breaker.

**4. Inspection/Check Two-Stage Return Filter Elements**

**A. Check Two-Stage Return Filter Elements**

- (1) Pressurize hydraulic system (see 29-00, Maintenance Practices).
- (2) Check two-stage return filter for leaks around filter bowl to head clamp joint.
- (3) Check that both primary and secondary stage differential pressure indicator buttons are depressed.
- (4) Depressurize hydraulic system (see 29-00, Maintenance Practices).

Jun 15/67

Printed in U.S.A.

29-10-25  
CODE 1  
Page 203



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

MANUAL SHUTOFF VALVES - MAINTENANCE PRACTICES

1. General

- A. The manual shutoff valves are located in the upper inboard, forward corner of the left main gear wheel well. One valve is mounted on the left hydraulic power manifold support, the other is mounted on a structure stiffener on the rear wing spar web. The valves are connected in the pressure lines between the outlet side of the priority valve and non-priority subsystems downstream of the priority valve.
- B. Access to the manual shutoff valves is through the left main gear inboard door. Removal and installation procedures for the manual shutoff valves are identical.

2. Removal/Installation Manual Shutoff Valves

A. Remove Manual Shutoff Valve

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Disconnect hydraulic lines to inlet and outlet ports of valve.
- (5) Remove valve from manifold support or structure stiffener as applicable.

B. Install Manual Shutoff Valve


- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel is open.
- (2) Install valve on manifold support, or structure stiffener as applicable.
- (3) Connect hydraulic lines to inlet and outlet ports of valve.
- (4) Safety valve handle in open position with lockwire.
- (5) Close auxiliary hydraulic pump control circuit breaker.

Jun 15/67

Printed in U S A

29-10-26  
CODE 1  
Page 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

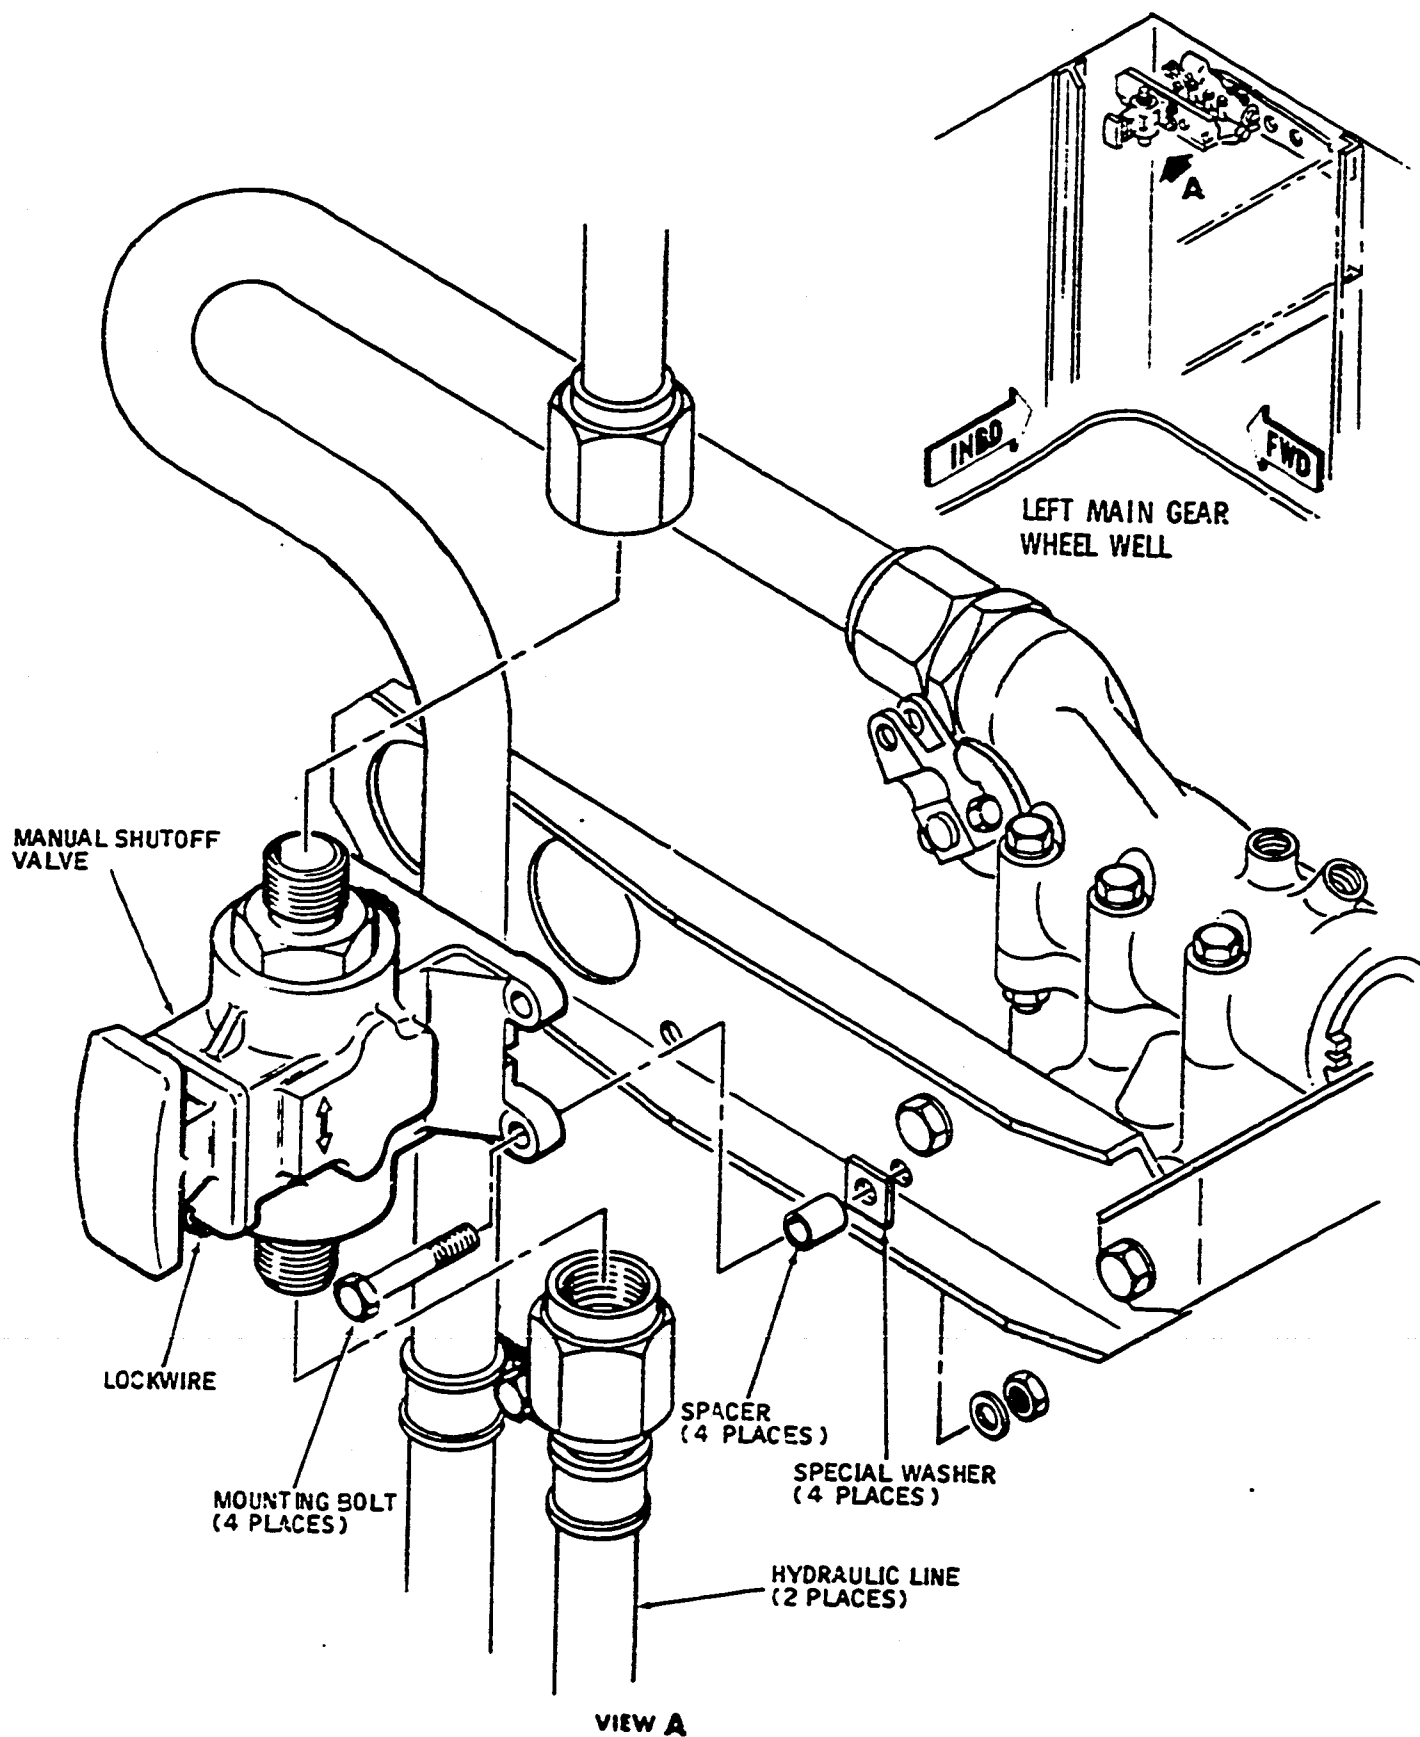

Manual Shutoff Valve -- Installation  
 Figure 201 (Sheet 1)


HA2-2979

29-10-26  
 CODE 1  
 Page 202

Printed in U.S.A.

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

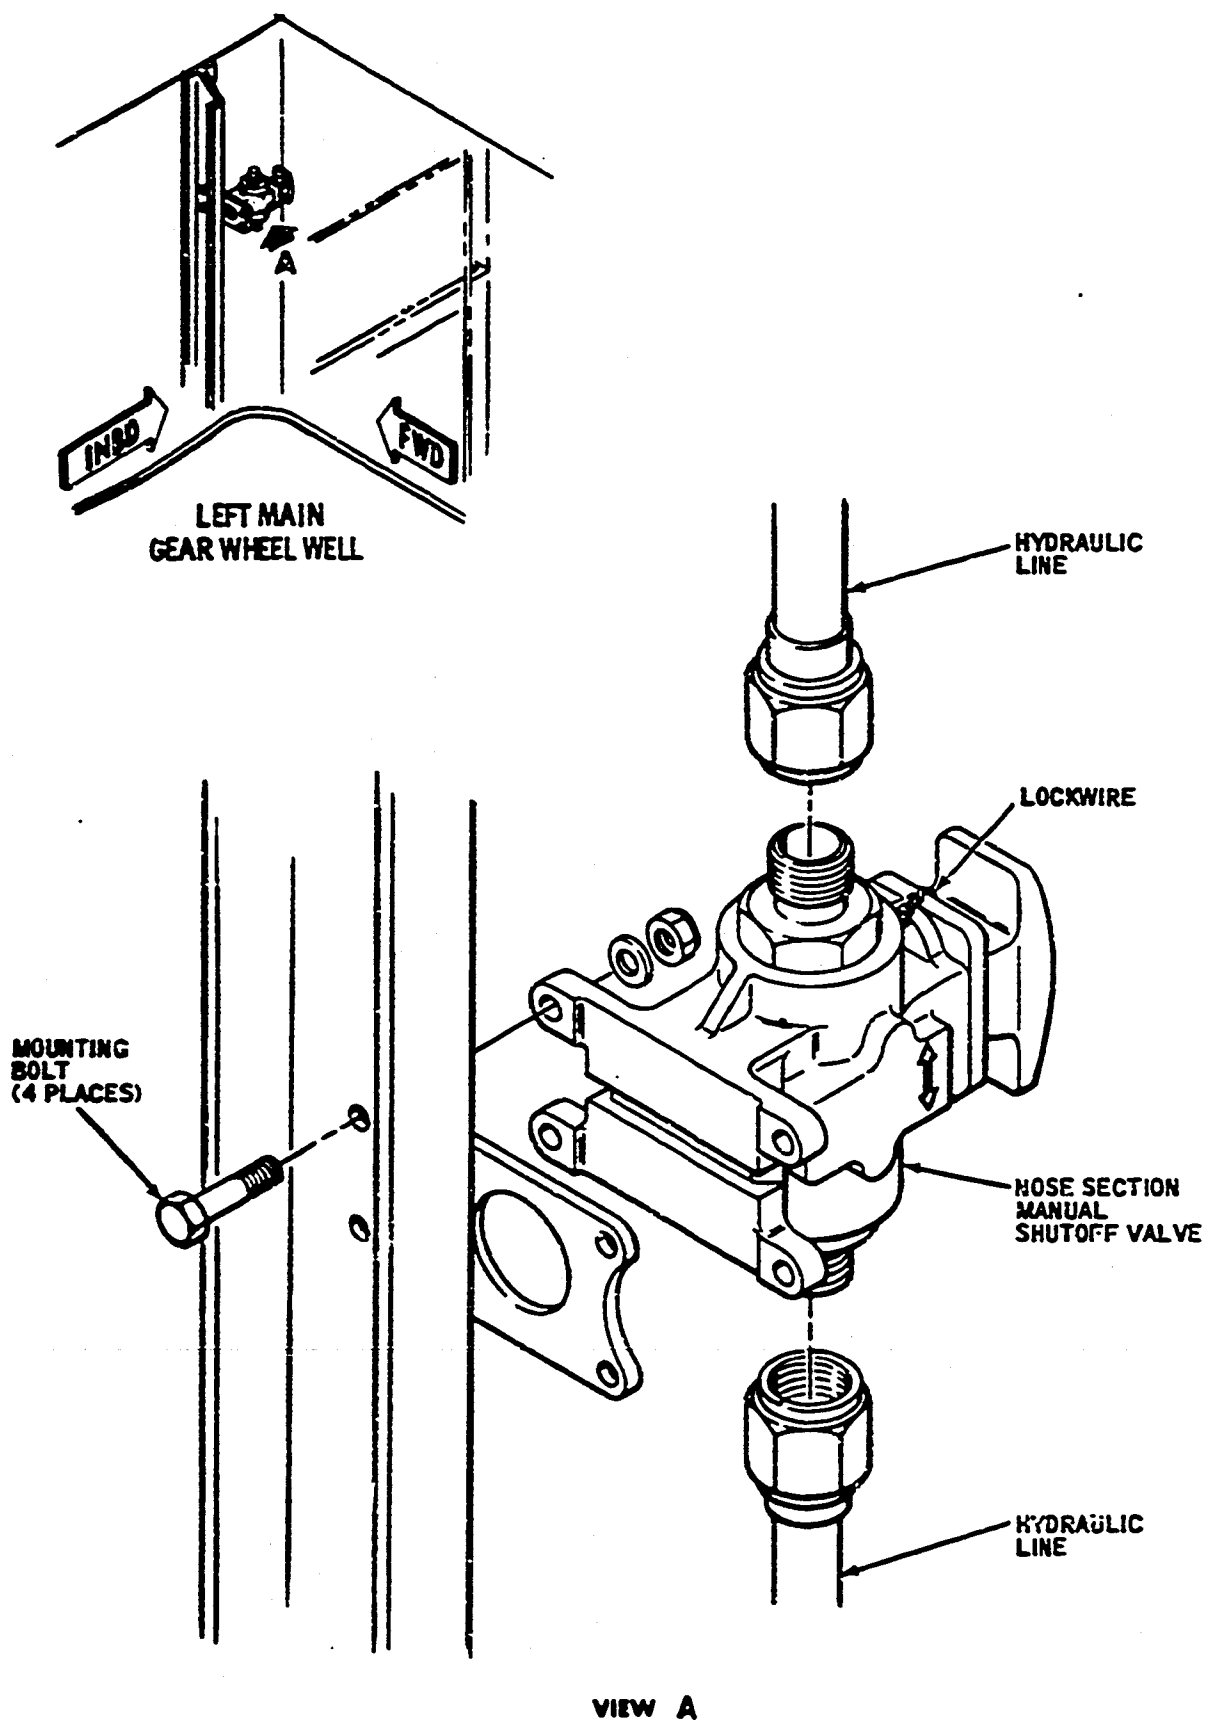

VIEW A

Manual Shutoff Valve -- Installation  
Figure 201 (Sheet 2)

HA2-4125

Jun 15/67

Printed in U.S.A.

29-10-26  
CODE 1  
Page 203

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

3. Inspection/Check Manual Shutoff Valve

A. Check Manual Shutoff Valve

- (1) Pressurize hydraulic system (see 29-00, Maintenance Practices).
- (2) Check manual shutoff valve for external leaks and general condition.
- (3) Depressurize hydraulic system (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

ENGINE-DRIVEN HYDRAULIC PUMP DISPOSABLE CASE DRAIN FILTER -

MAINTENANCE PRACTICES

1. General

- A. The engine-driven hydraulic pump disposable case drain filters are located, one each, on the case drain port of each engine-driven hydraulic pump.
- B. Access to the disposable filters and hydraulic pumps is through the engine nacelle doors and removal of the engine bypass duct (see Chapter 78).
- C. Removal/Installation procedures for the left and right engine-driven hydraulic pump disposable case drain filters are identical, except as noted.

2. Removal/Installation Engine-Driven Hydraulic Pump Disposable Case Drain Filters

A. Remove Disposable Case Drain Filter

- (1) Open engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Place fire control handles in fuel, air, and hydraulic off position.
- (3) Disconnect case drain hose from disposable case drain filter outlet port.


CAUTION: THE FIRE DETECTOR SENSING ELEMENTS WHICH ARE INSTALLED WITHIN THE ENGINE AREA ARE VERY SENSITIVE. PHYSICAL CONTACT WITH THESE ELEMENTS CAN CAUSE HIDDEN DAMAGE. A CONSTANT DIMENSION MUST BE MAINTAINED BETWEEN ELEMENTS AND THEIR SUPPORTING STRUCTURE. A MINIMUM CLEARANCE OF 3/4-INCH MUST BE MAINTAINED BETWEEN ELEMENTS AND ENGINE COMPONENTS AND LINES.

- (4) Remove disposable filter from pump.

B. Install Disposable Case Drain Filter

- (1) Make certain that engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel are open.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

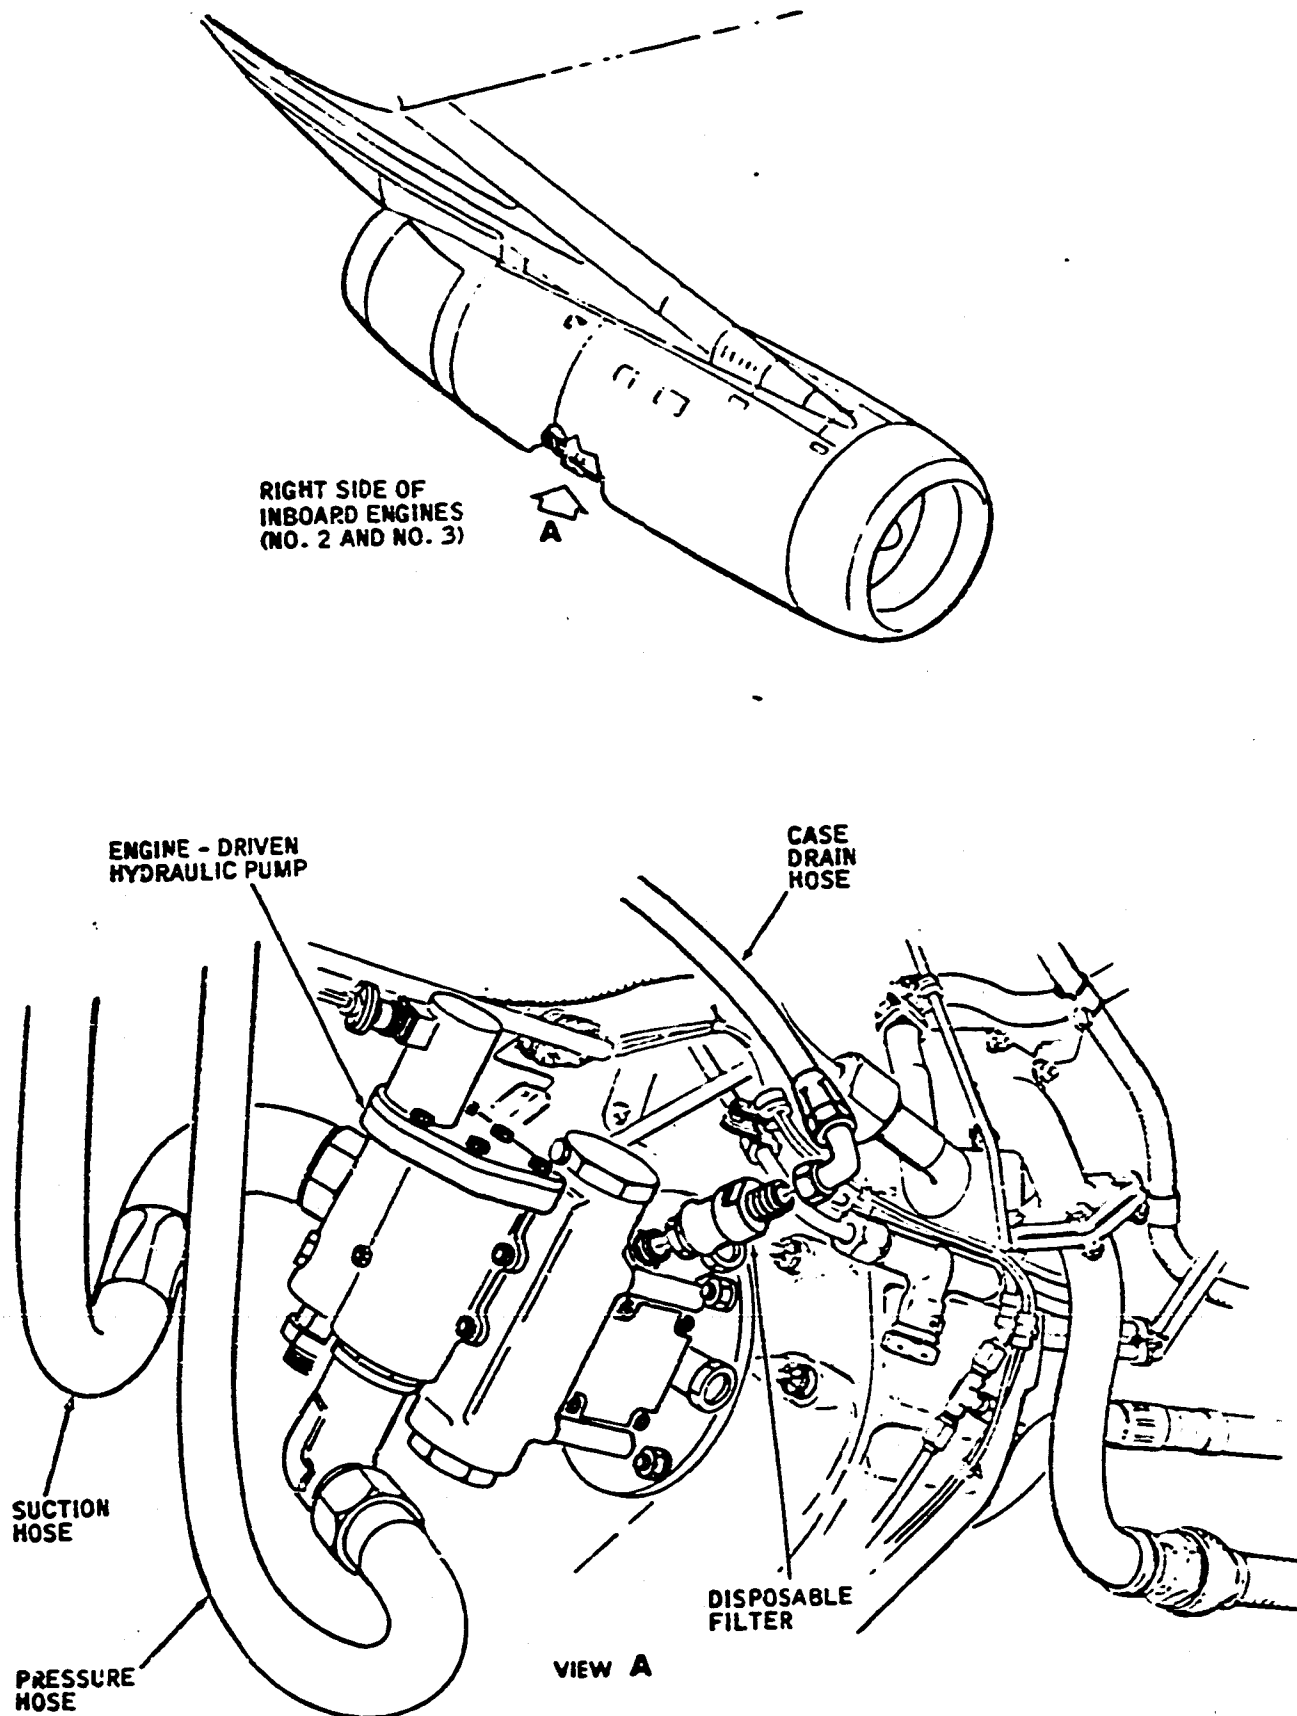

HA2-6048

Engine-Driven Hydraulic Pump Disposable Case  
Drain Filter -- Installation  
Figure 201

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Install disposable case drain filter in engine-driven hydraulic pump case drain port.

**CAUTION:** THE FIRE DETECTOR SENSING ELEMENTS WHICH ARE INSTALLED WITHIN THE ENGINE AREA ARE VERY SENSITIVE. PHYSICAL CONTACT WITH THESE ELEMENTS CAN CAUSE HIDDEN DAMAGE. A CONSTANT DIMENSION MUST BE MAINTAINED BETWEEN ELEMENTS AND THEIR SUPPORTING STRUCTURE. A MINIMUM CLEARANCE OF 3/4-INCH MUST BE MAINTAINED BETWEEN ELEMENTS AND ENGINE COMPONENTS AND LINES.

- (3) Connect case drain hose to outlet port of filter.
- (4) Place fire control handles in normal position.
- (5) Reset generator (see Chapter 24).
- (6) Close engine 2 and 3 hydraulic pump bypass circuit breaker located on miscellaneous (dc bus) section of EPC circuit breaker panel.
- (7) Check for leaks at disposable filter during next scheduled engine run (see paragraph 3).

### 3. Inspection/Check Engine-Driven Hydraulic Pump Disposable Case Drain Filter

#### A. Check Disposable Case Drain Filter

- (1) Start engines No. 2 and/or 3 (see Chapter 71).
- (2) Place hydraulic system selector control lever in general system (normal) position.
- (3) Check hydraulic pressure indicator for 2800- to 3000-psi system pressure.
- (4) Shut down engine(s). (see Chapter 71).
- (5) Check disposable filter(s) for leaks at pump case drain port and at filter outlet connection.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY - DESCRIPTION AND OPERATION

1. General

- A. The auxiliary hydraulic system is a supplementary hydraulic power system connected to the main hydraulic power system through the system selector valve and the auxiliary pump supply selector valve. The auxiliary hydraulic system consists of an electrically driven auxiliary hydraulic pump, an auxiliary pump relief valve, a surge damper accumulator, and auxiliary filter and check valve, and the piping required to interconnect the components and connect the auxiliary system to the main power system.
- B. In flight, the auxiliary hydraulic system can be used as supplemental power for the main power system. The auxiliary pump will also serve, when ground support equipment is not available, to pressurize the hydraulic power system for ground testing of the airplane hydraulic subsystems and components. Fluid is supplied to the auxiliary pump from a low standpipe in the hydraulic system reservoir. When the auxiliary pump is operated, fluid from the pressure outlet port of the auxiliary pump is ported, through the auxiliary power system filter and an auxiliary system check valve, to the auxiliary pressure inlet port of the system selector valve. When the system selector valve is in the normal position, auxiliary pump pressure is ported to the general system.
- C. When the auxiliary pump is not operating, the auxiliary system check valve prevents reverse flow through the auxiliary pump from the engine-driven pumps. An auxiliary pump relief valve is tied into the line from the auxiliary pump outlet port to the reservoir filter inlet port. The valve relieves and ports excess fluid pressure back to the reservoir if auxiliary pressure builds above 3300 psi.
- D. The auxiliary pump alternate reservoir is installed in the auxiliary hydraulic system to provide an alternate hydraulic fluid source in case of depletion of the normal supply to the hydraulic system reservoir. The alternate reservoir source is selectable by operation of the auxiliary hydraulic pump supply selector valve which actuates simultaneously with the hydraulic system selector valve.


2. System Components

A. Auxiliary Hydraulic Pump (See Figure 1.)

- (1) The auxiliary hydraulic pump is an electrically driven, continuous-duty pressure-compensated, variable-displacement pump. An automatic pressure-sensing mechanism (compensator) within the pump regulates the amount of fluid delivered to the airplane hydraulic system. The quantity of delivery is dependent on the system pressure. Flow is reduced to zero when desired system pressure is achieved.





DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

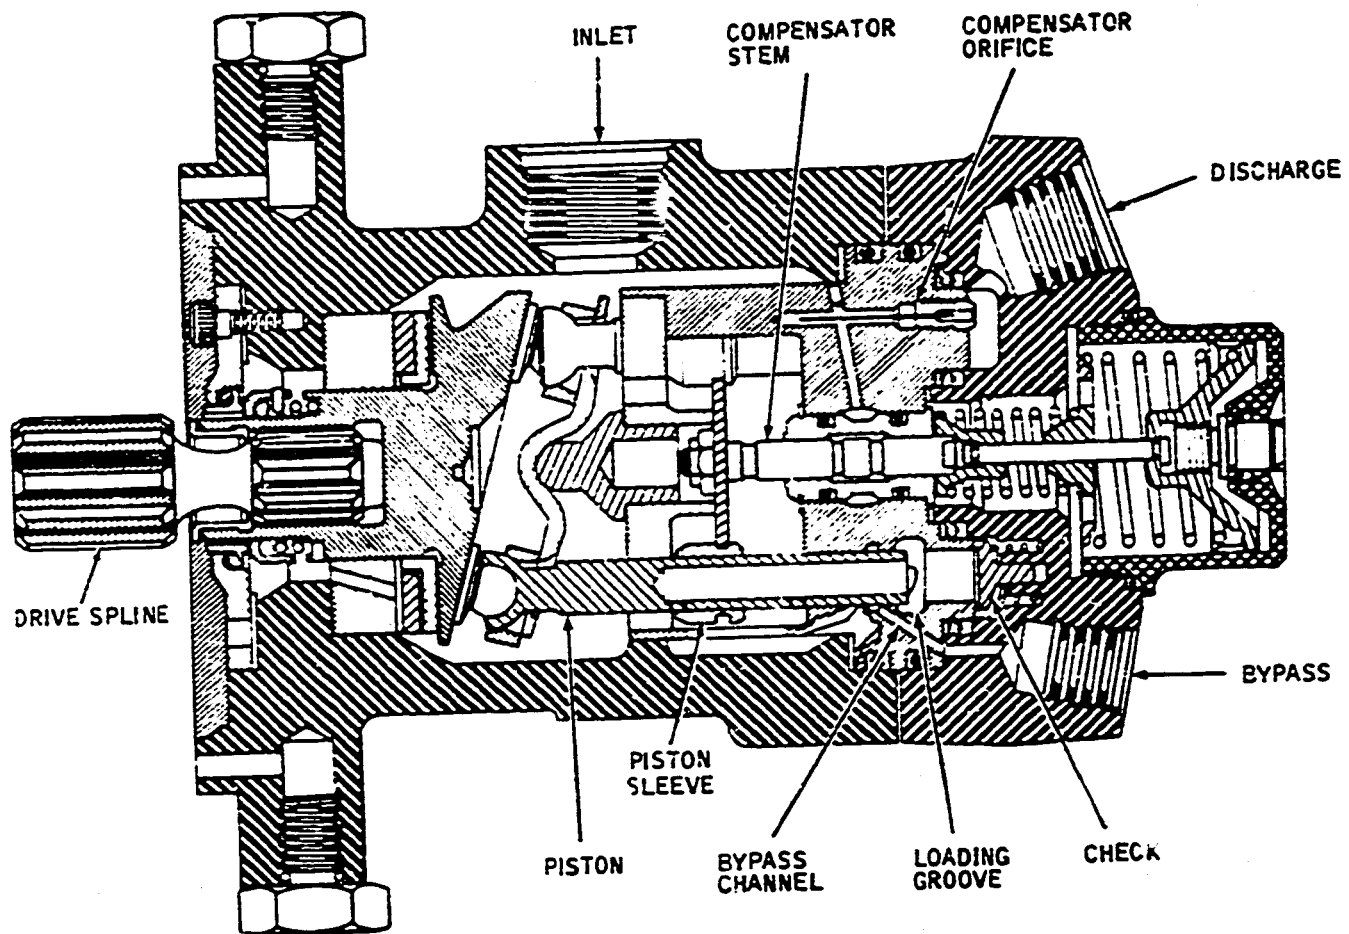

FLOW

NON-FLOW

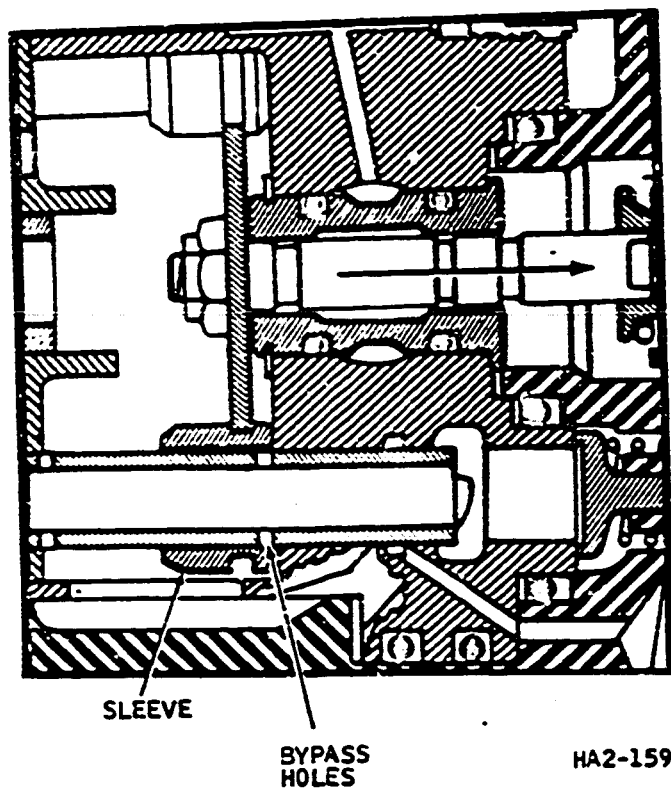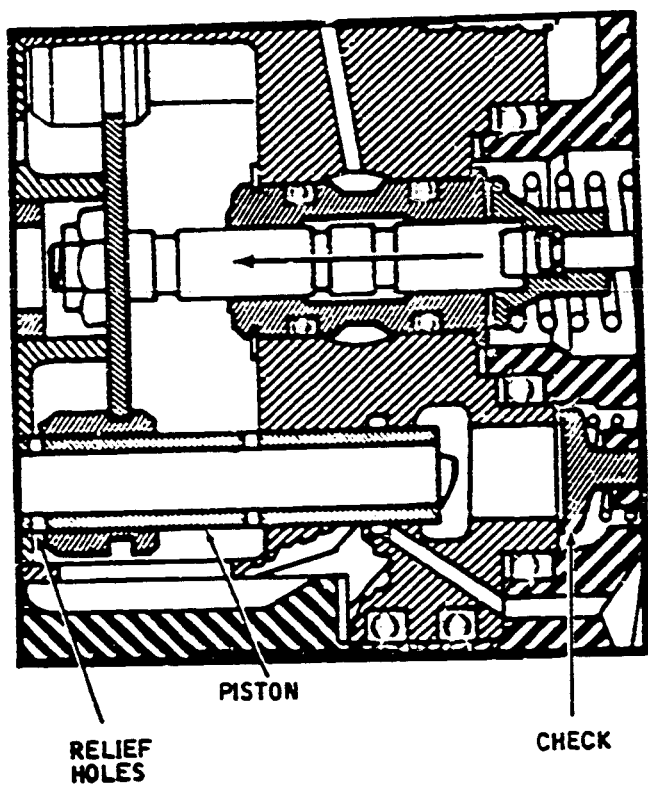

HA2-159

Auxiliary Hydraulic Pump -- Cutaway View  
 Figure 1

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The internal components of the pump perform three major functions; mechanical drive (motor), fluid displacement (pistons), and pressure control (compensator). Mechanical drive is supplied by a 200-vac, 3-phase, 400-cycle electric motor.
- (3) As the hydraulic fluid from the reservoir enters the inlet port, the fluid is displaced by axial piston motion. As a piston advances in a cylinder bore, it forces a quantity of fluid past the pump check at the end of the bore. When the piston bypass holes become aligned hydraulically with the cylinder block passage, pressurized fluid also escapes to bypass; then a combination of spring pressure and system back pressure closes the pump checks. In the withdrawal portion of the piston stroke, a partial vacuum is created in the cylinder bore, allowing new fluid from the intake to flow into the bore from the pressurized reservoir. The quantity of fluid delivered by each piston stroke is controlled by relief holes in the pistons and piston sleeves.
- (4) Unless the relief holes are covered by the piston sleeves, no fluid is forced past the pump checks. Quantity of delivery is therefore determined by the position of the piston sleeves, which in turn is determined by system pressure bled through the compensator orifices. Because one sleeve is slightly longer than the others, the pump, even when in full cutoff, continues to pump enough fluid to make up for any minor drop in the system pressure due to leakage.
- (5) Pressure control: System pressure, acting through the compensator orifice on the compensator stem, controls the piston sleeve position and and, therefore, determines whether the pump delivers at full capacity, partial capacity, or cuts off entirely. Path of fluid flow through the pump remains the same in all three conditions. When the pressure at the outlet port reaches 2700 psi, pressure in the compensator commences to reduce the output until 3000 psi is reached, at which time fluid flow is zero. The bypass system is provided to supply self-lubrication, particularly when the pump is in non-delivery (cutoff) operation. The ring of bypass holes in the pistons is hydraulically aligned with the bypass passage each time a piston reaches the very end of its forward travel period. This pumps a small quantity of fluid out the bypass passage back to the supply reservoir and provides a constant changing of the fluid in the pump. The bypass is designed to pump against a considerable back pressure for use with pressurized hydraulic reservoirs.

**B. Auxiliary Hydraulic Pump Alternate Reservoir**

- (1) The auxiliary hydraulic pump alternate reservoir is installed on the shear web in the left wing root area, immediately aft of the auxiliary hydraulic pump. Access to the reservoir is through the left wing root access door. The alternate reservoir supplies hydraulic fluid to the auxiliary hydraulic pump in the event the fluid supply from the main hydraulic system reservoir is exhausted.

Jun 15/67

Printed in U.S.A.

29-20-0  
CODE 1  
Page 3


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The reservoir is cylindrical in shape and has a fluid capacity of approximately 1.9 US gallons (1.6 Imperial gallons or 7.3 liters). There are four ports on the reservoir: an outlet port to the auxiliary hydraulic pump selector valve located at the bottom, an inlet port from the auxiliary hydraulic pump bypass located near the top on the side, an inlet from the wing flap return line, and an outlet to the main hydraulic reservoir located at the top. A sight gage is installed near the top of the reservoir for visual indication of fluid level, and a mounting boss for the emergency hydraulic level indicating light switch is installed on the side of the reservoir.
- (3) The reservoir is kept full during operation by routing fluid from the wing flap return line to the reservoir. Fluid in excess of the alternate reservoir capacity is then routed to the main hydraulic system reservoir. Hydraulic fluid from the auxiliary pump bypass is routed to the alternate reservoir and then to the main reservoir. Fluid is used from the alternate reservoir only when the auxiliary pump is operating and the auxiliary pump supply selector valve is in the alternate position. Fluid supply to the alternate reservoir is replenished whenever the wing flaps are operated.


C. Auxiliary Hydraulic Pump Supply Selector Valve (See Figure 2.)

- (1) The auxiliary hydraulic pump supply valve is a 2-position valve that ports hydraulic fluid from the reservoir, through a common outlet, to the auxiliary pump. The selector valve is located on the shear web in the left wing root, near the auxiliary pump. The selector valve is accessible through the left wing root access door.
- (2) The valve body has two inlet ports and one outlet port. The outlet port is centrally located on the aft side of the valve body. The two inlet ports are located on the outboard side of the valve body, 90 degrees from the outlet port. Two mounting flanges are located on the inboard side of the valve body. These flanges are an integral part of the valve body.
- (3) During normal operation, fluid is taken from a low standpipe in the main hydraulic system reservoir and ported to the auxiliary pump. When the valve is in the alternate position, fluid is taken from the auxiliary hydraulic pump alternate reservoir and ported to the auxiliary pump. The valve is moved from the auxiliary position to the alternate position by placing the hydraulic system selector control lever, located on the system engineer's control pedestal, to the general system/main gear downlock and flaps position.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

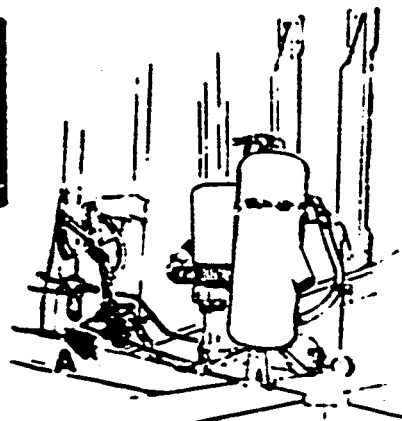

VIEW LOOKING INTO LEFT  
 WING ROOT AREA

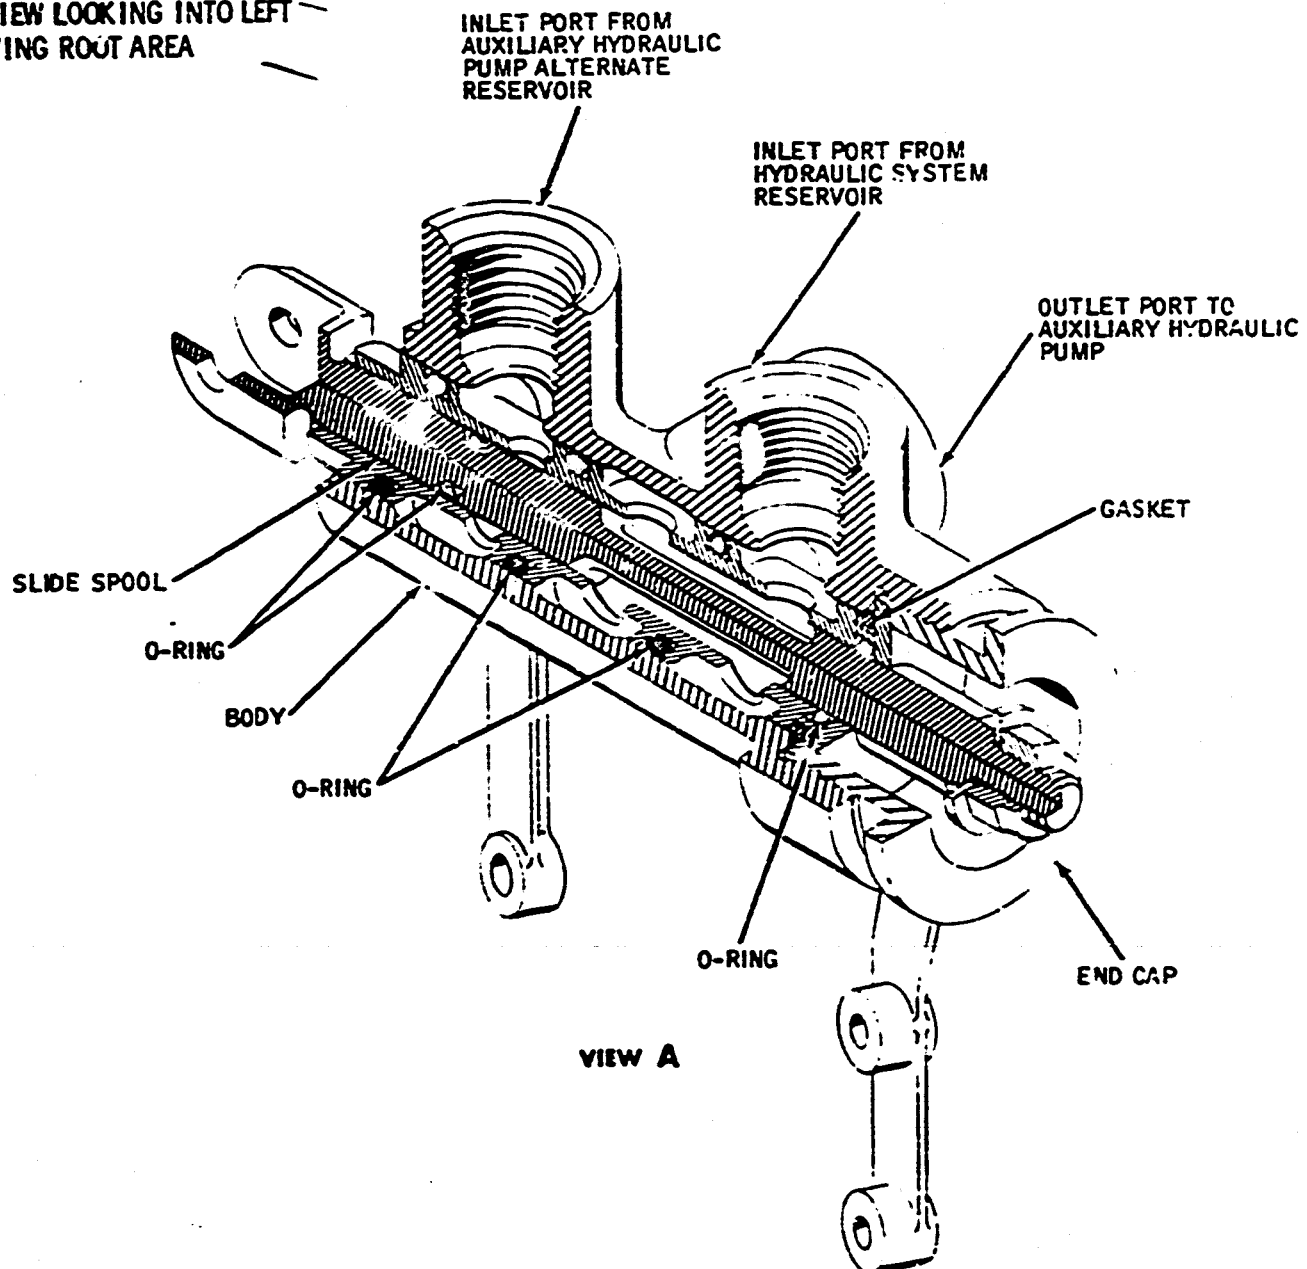

VIEW A

Auxiliary Hydraulic Pump Supply Selector  
 Valve -- Cutaway View  
 Figure 2

HA2-160A

29-20-0  
 CODE 1  
 Page 5

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

D. Auxiliary Hydraulic Pump Relief Valve (See Figure 3.)

- (1) The auxiliary hydraulic pump relief valve is a spring loaded poppet-type valve and serves to relieve excess fluid pressure that may build up in the auxiliary hydraulic system. The relief valve connects, through a reducer, to a tee in the A return port of the hydraulic system reservoir. The valve is accessible through the left wing root access door.
- (2) Externally, the valve body is cylindrical, approximately 5 inches in length, and 1 inch in diameter. The outlet end of the valve is slightly larger than the inlet end.
- (3) When pressure builds up, the poppet starts to relieve at approximately 3300 psi. If pressure continues to build up, the poppet continues to open until 3500 psi and a maximum flow of 3.5 gpm are reached. When pressure is relieved, the poppet reseats at 90 percent of the unseat pressure.



E. Auxiliary Hydraulic System Filter (See Figure 4.)

- (1) A line-type, 10-micron filter assembly is installed in the piping of the auxiliary system to filter fluid from the pressure outlet port of the auxiliary pump to the system selector valve. The filter is located on the bulkhead near the forward inboard corner of the left main gear wheel well, slightly inboard and above the dual filter and relief valve. It is accessible through the left main gear inboard door.
- (2) The inlet and outlet ports of the filter are internally threaded and are marked in and out. The filter bowl is cylindrical in shape, with wrench flats at the lower end, and is threaded into the assembly immediately below the ports. A hex-shaped magnetic plug is installed in the drain port. The filter element is stainless steel mesh, supported by a perforated cylindrical center core.

F. Auxiliary Hydraulic System Check Valve

- (1) The auxiliary hydraulic system check valve is a spring-loaded, poppet-type valve with a rated capacity of 3000 psi. This valve is installed in the line between the auxiliary hydraulic system filter and the system selector valve to prevent reverse flow of hydraulic fluid through the filter and the auxiliary pump when the engine-driven pumps or external pressure supply are used.
- (2) The auxiliary hydraulic system check valve is located in the left wheel well, just above the dual filter and relief valve. The auxiliary hydraulic system check valve is accessible through the left wheel well.
- (3) Externally and internally, this valve is similar to the engine-driven hydraulic pump check valve, except for size.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

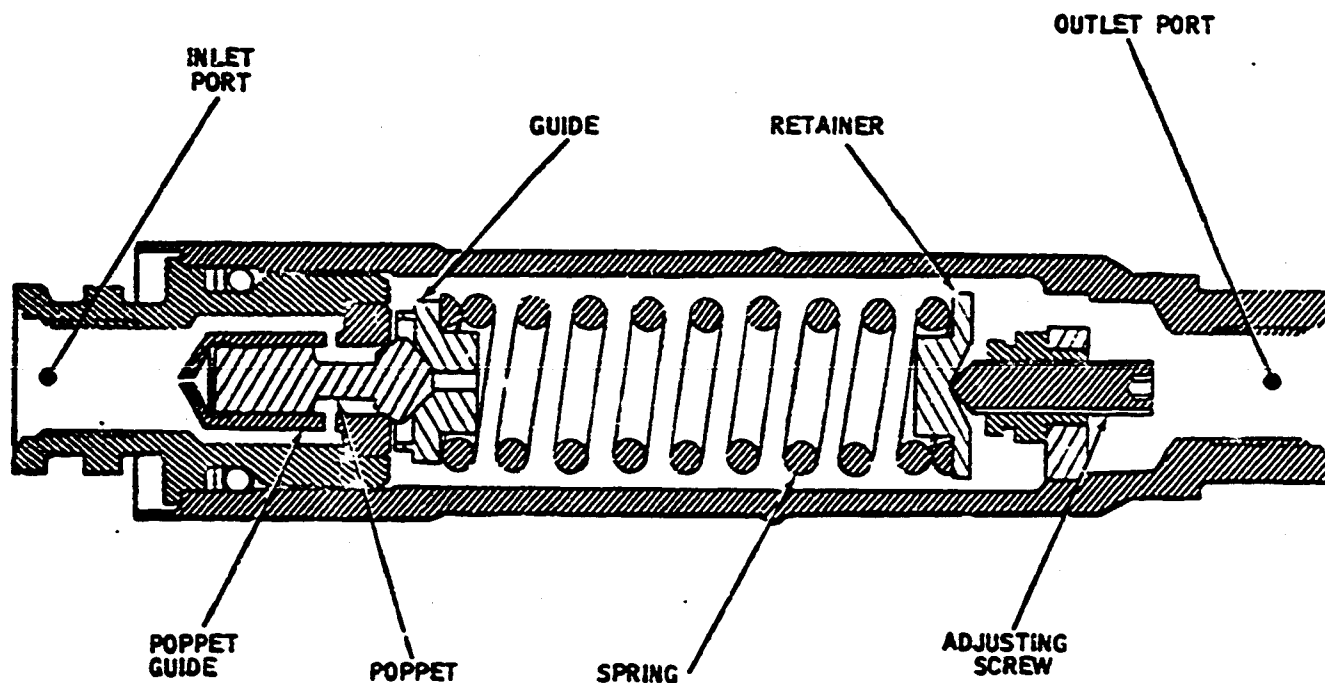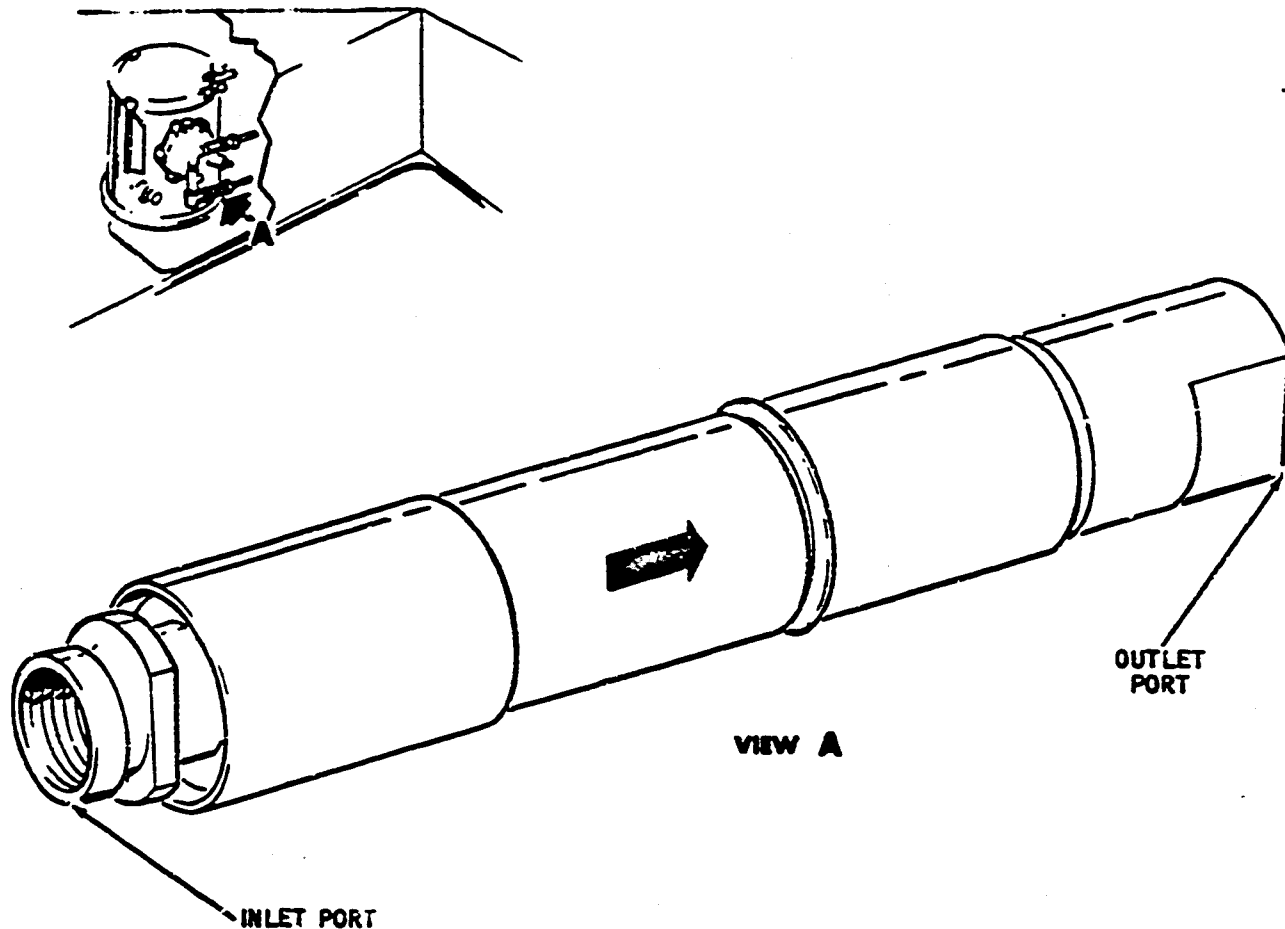

Auxiliary Hydraulic Pump Relief  
 Valve -- Cutaway View  
 Figure 3



HA2-161

29-20-0  
 CODE 1  
 Page 7

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

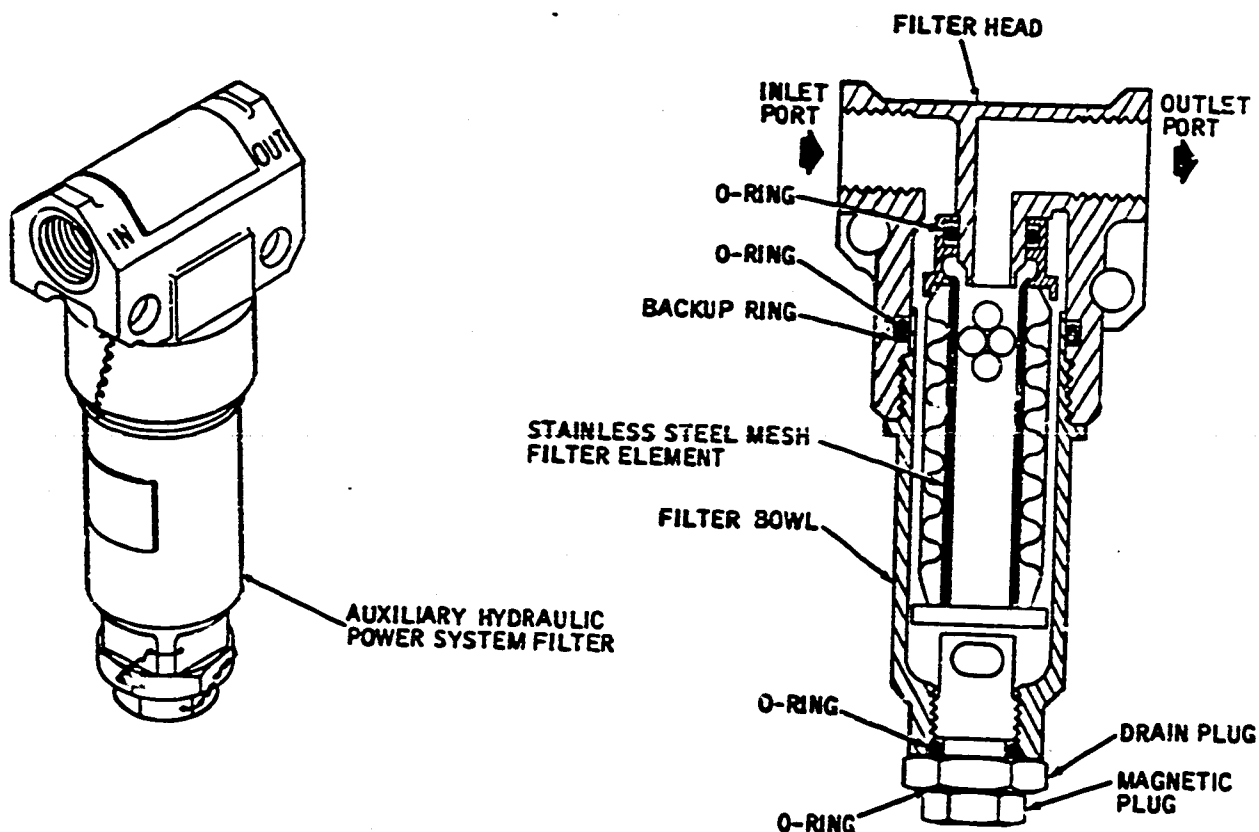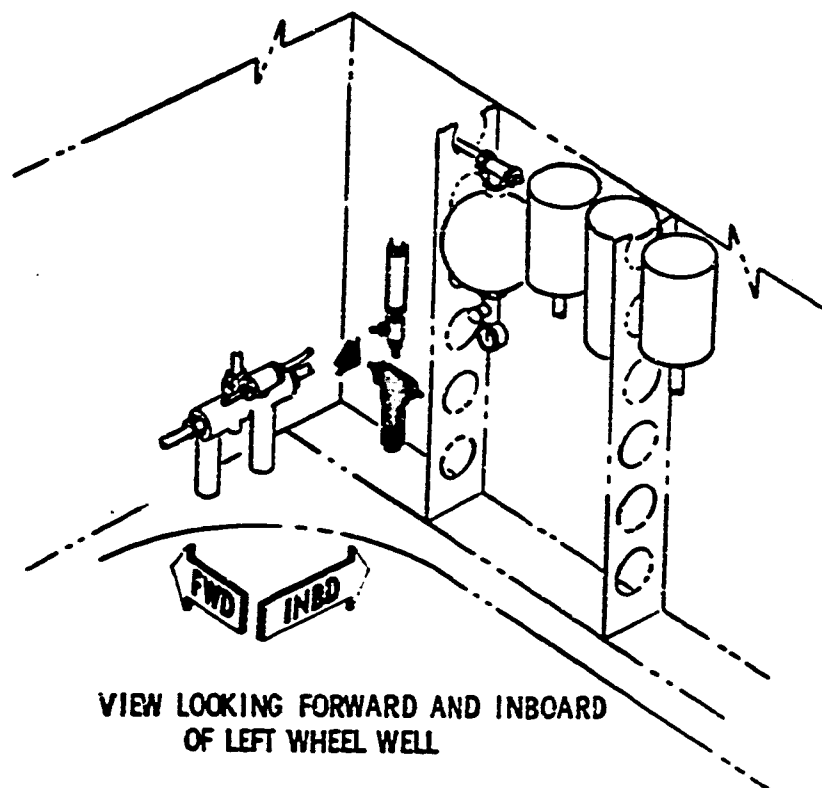

Auxiliary Hydraulic System Filter -- Cutaway View  
 Figure 4

HA2-162

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

G. Auxiliary Hydraulic System Surge Damper Accumulator (See Figure 5.)


- (1) The auxiliary hydraulic system surge damper accumulator consists of two spherical domes, separated by a diaphragm and held together by a ring nut. An air filler valve and gage are installed on the accumulator. The accumulator is installed in the auxiliary hydraulic pump pressure line just inboard and aft of the auxiliary pump, and is attached to the shear web by two clamp blocks. Access to the accumulator is through the left wing root access door.
- (2) The accumulator is initially charged to 1000 psi with dry nitrogen. As the auxiliary system pressure builds up, fluid is forced against the diaphragm in the accumulator, further compressing the trapped nitrogen in the air side of the accumulator to full system pressure (2600 to 3000 psi is indicated on the accumulator pressure gage). The air in the accumulator absorbs the initial shock of the auxiliary pump output and permits the system pressure to rise gradually. The accumulator also serves to cushion the piping and system components against high impact loads.

H. Auxiliary Hydraulic Pump Control

- (1) The auxiliary hydraulic pump control system consists of auxiliary hydraulic pump control switch, an auxiliary hydraulic pump control relay, an auxiliary hydraulic pump power relay, an electric motor, and an auxiliary pump on indicating light.
- (2) The auxiliary hydraulic pump control switch(es), located in the flight compartment, are 3-position switches. They are spring-loaded to the center position and have two momentary positions placarded start (hold only in emergency) and stop.
- (3) The electric motor for the auxiliary hydraulic pump is an ac, 3-phase motor. A thermostatic switch is included in the circuit to protect the motor from overheating.
- (4) The auxiliary hydraulic pump motor is supplied with power from the cabin bus 4. This permits pump operation from an external power source or from the airplane electrical system.
- (5) The auxiliary pump on indicating light is a blue press-to-test light, located adjacent to the auxiliary hydraulic pump control switch. The light is equipped with a dimming feature.
- (6) When the auxiliary hydraulic pump control switch is momentarily moved to the start position, the circuitry is completed between the auxiliary hydraulic pump control relay and cabin bus 4. The ground is through the stop contact of the switch and the thermostatic switch of the motor. Once the relay is energized, it remains energized through its own holding contacts. Through a closed contact of the pump control relay, power is supplied from cabin bus 4 to energize the hydraulic pump power relay.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

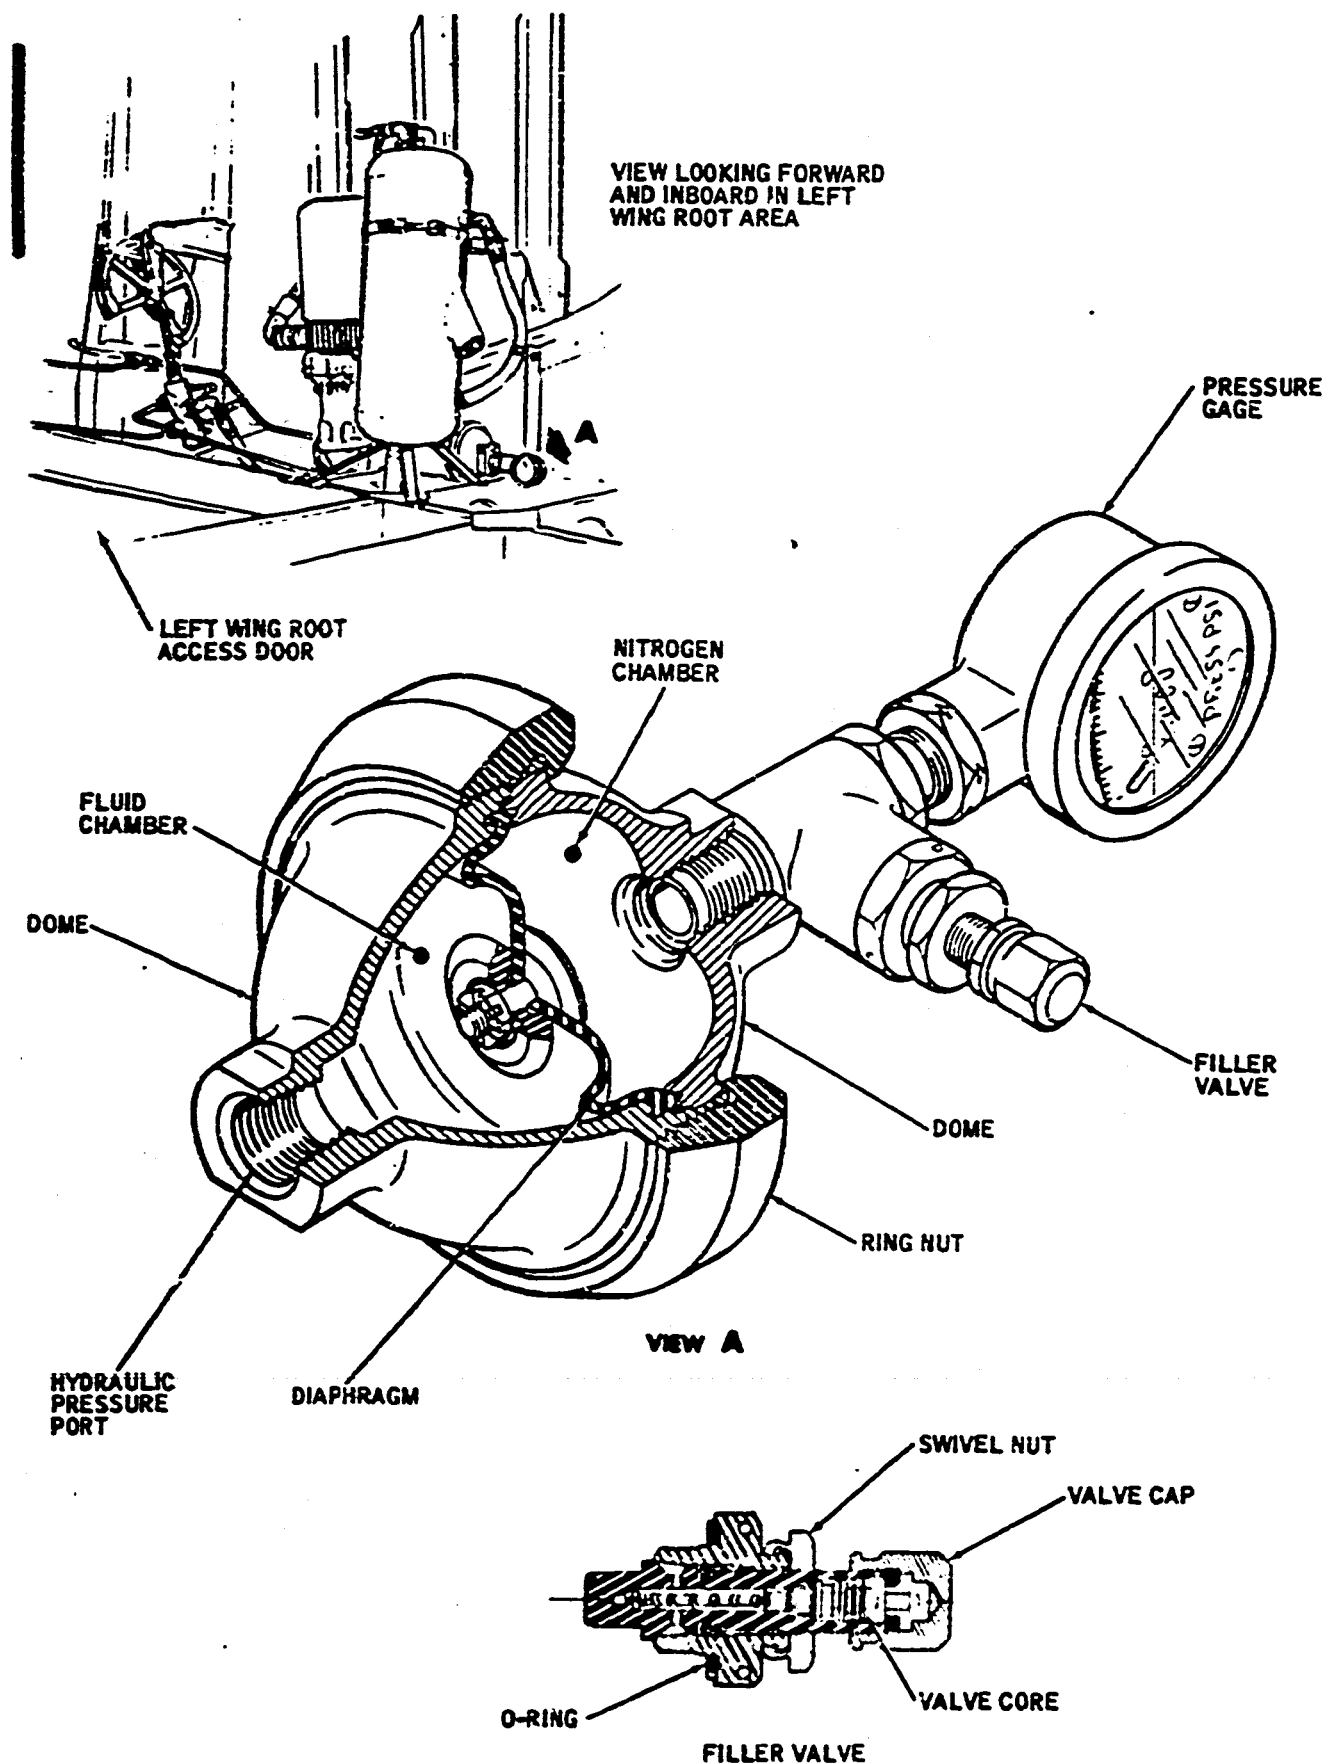

Auxiliary Hydraulic Power System Surge Damper  
 Accumulator -- Cutaway View  
 Figure 5

HA2-163A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL




Through the closed contacts of the pump power relay, a power circuit is completed from the feeder leads of cabin bus 4 to the auxiliary hydraulic pump motor. The blue indicating light, located on the overhead switch panel, receives power through one of the closed contacts of the pump power relay. Therefore, the light is on whenever the pump power relay is energized.

- (7) The auxiliary hydraulic pump motor is safeguarded against overheating by the thermostatic switch. Under normal conditions, this switch is in the ground leg of the control relay. When an overheat condition occurs, the thermostatic switch opens the control relay circuit to limit the motor case to 450°F (252°C). This action deenergizes the control relay, which in turn deenergizes the power relay. In an emergency situation, the thermostatic switch can be overridden by holding the auxiliary hydraulic pump control switch in the start (hold only in emergency) position.
- (8) When the auxiliary hydraulic pump control switch is placed in the momentary stop position, the ground for the control relay is broken, deenergizing the power relay and removing power from the pump motor and the indicating light.

I. Ground Service Pressure and Supply Connectors. (See Figure 6.)

- (1) The ground service pressure and supply connectors are external fittings to which a service unit can be connected for operating the hydraulic power system when there is no power on the airplane. The connectors are located on a panel covered by an access door on the lower skin of the left wing root, aft of the rear spar.
- (2) The ground service pressure connector is made up of a check valve with a flared, bulkhead-type fitting on the inlet end and a standard tube fitting on the outlet end which connects to the left engine-driven pump pressure line. The inlet fitting is covered with a dust cap when not in use.
- (3) The internal description of the connector is the same as that of the engine-driven hydraulic pump check valve (see 29-10-0, Description and Operation). The connector operates as a shutoff valve when the ground unit is not connected. When a ground hydraulic power source is connected to the pressure connector and pressure is applied, the poppet unseats and supplies pressure fluid to the hydraulic power system.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

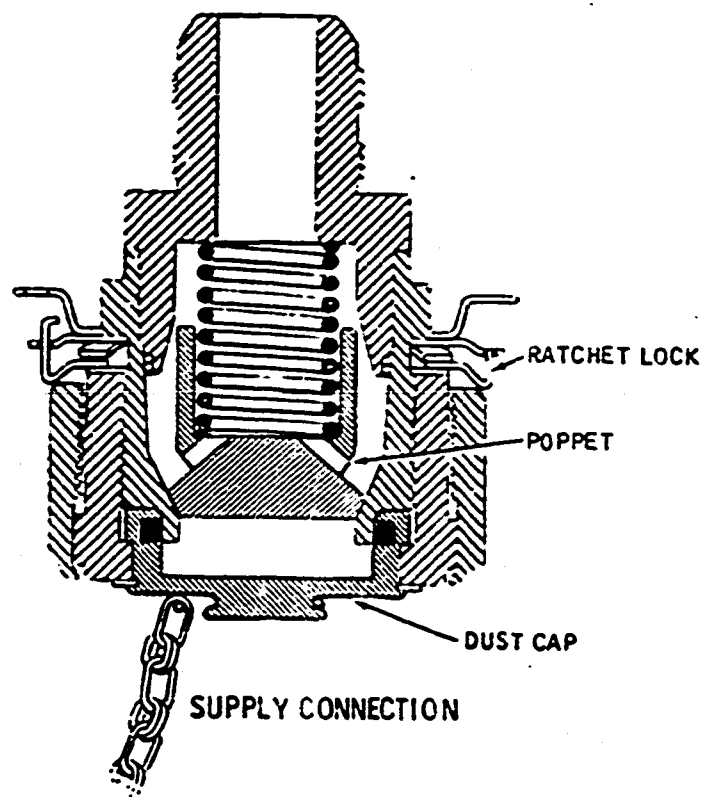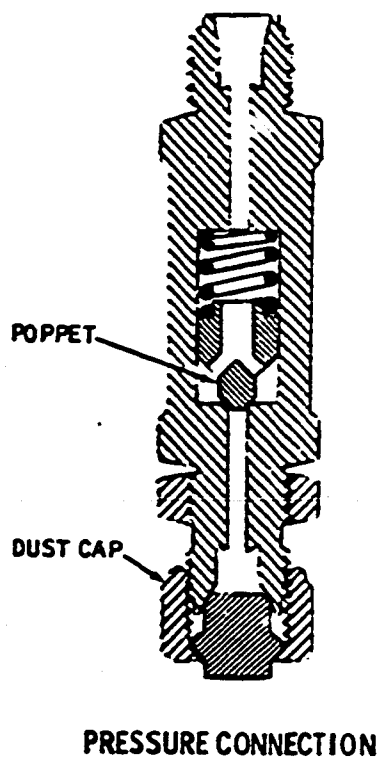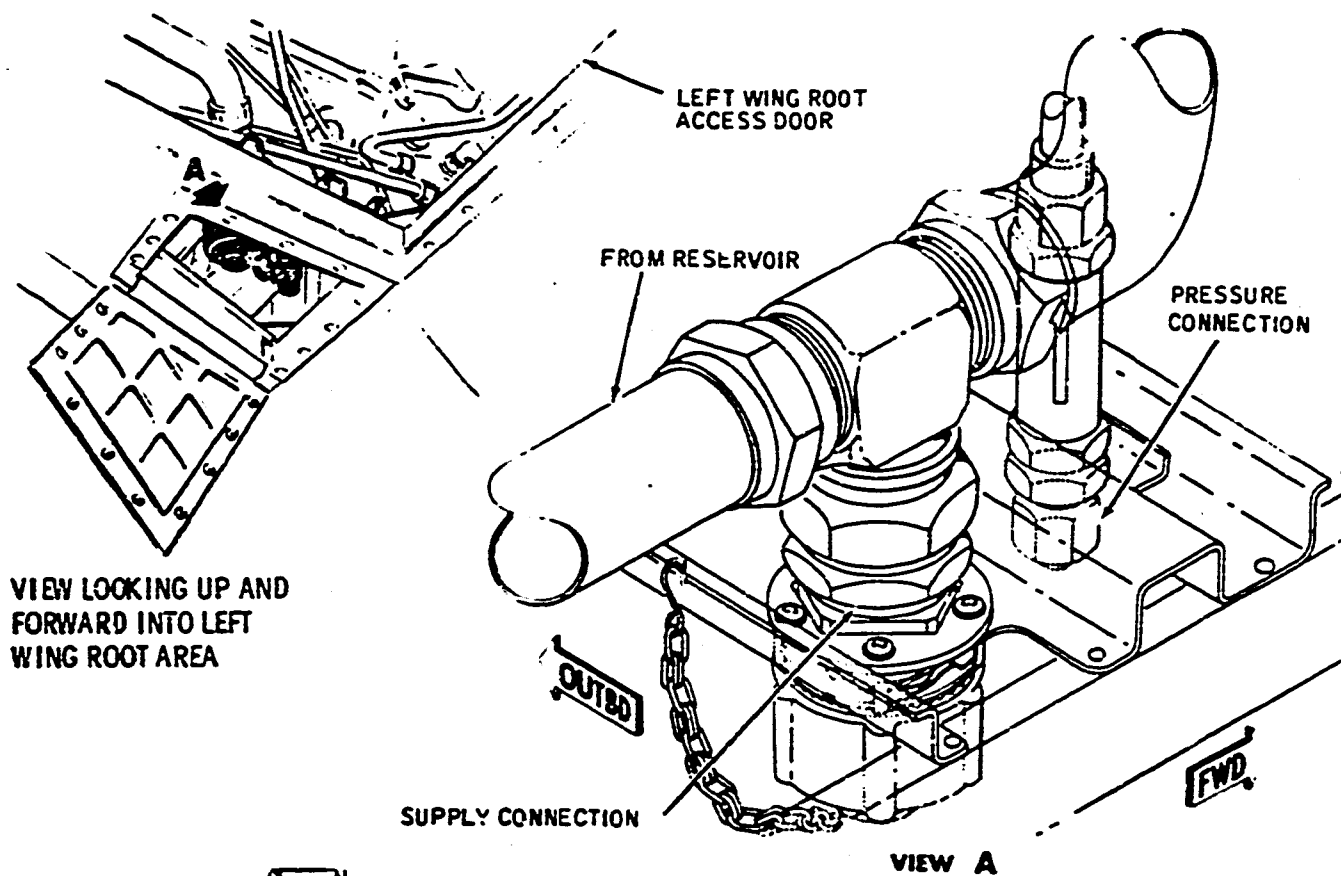

HA2-164

Ground Power Connectors -- Cutaway View  
 Figure 6

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) The supply connector is made up of a T-fitting and a self-sealing coupling half. The tee is female-threaded to accept the bulkhead-type fitting on the upper end of the coupling. The cross arms of the tee tie into the right engine-driven pump supply line with flared-type fittings. The tee is threaded onto the coupling half and is secured with a locknut. The coupling consists of a coupling body, male-threaded to accept the coupling half from the ground source. The mounting flange has a recess to accept the hex portion of the coupling body, and has notches to retain the lockspring. A dust cap consisting of a union nut assembly, a dust plug, and a securing chain is installed on the lower end of the coupling when not in use.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY - DESCRIPTION AND OPERATION

1. General


- A. The auxiliary hydraulic system is a supplementary hydraulic power system connected to the main hydraulic power system through the system selector valve and the auxiliary pump supply selector valve. The auxiliary hydraulic system consists of an electrically driven auxiliary hydraulic pump, an auxiliary pump relief valve, a surge damper accumulator, an auxiliary filter and check valve, and the piping required to interconnect the components and connect the auxiliary system to the main power system.
- B. In flight, the auxiliary hydraulic system can be used as supplemental power for the main power system. The auxiliary pump will also serve, when ground support equipment is not available, to pressurize the hydraulic power system for ground testing of the airplane hydraulic subsystems and components. Fluid is supplied to the auxiliary pump from a low standpipe in the hydraulic system reservoir. When the auxiliary pump is operated, fluid from the pressure outlet port of the auxiliary pump is ported, through the auxiliary power system filter and an auxiliary system check valve, to the auxiliary pressure inlet port of the system selector valve. When the system selector valve is in the normal position, auxiliary pump pressure is ported to the general system.
- C. When the auxiliary pump is not operating, the auxiliary system check valve prevents reverse flow through the auxiliary pump from the engine-driven pumps. An auxiliary pump relief valve is teed into the line from the auxiliary pump outlet port to the reservoir filter inlet port. The valve relieves and ports excess fluid pressure back to the reservoir if auxiliary pressure builds above 3300 psi.
- D. The auxiliary pump alternate reservoir is installed in the auxiliary hydraulic system to provide an alternate hydraulic fluid source in case of depletion of the normal supply in the hydraulic system reservoir. The alternate reservoir source is selectable by operation of the auxiliary hydraulic pump supply selector valve which actuates simultaneously with the hydraulic system selector valve.

2. System Components


A. Auxiliary Hydraulic Pump (See Figure 1.)

- (1) The auxiliary hydraulic pump, located in the left wing root access area, supplies hydraulic pressure for the auxiliary hydraulic system. The pump consists of an air cooled electric motor directly coupled through a shaft and centrifugal boost pump impeller to a variable displacement hydraulic pump.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

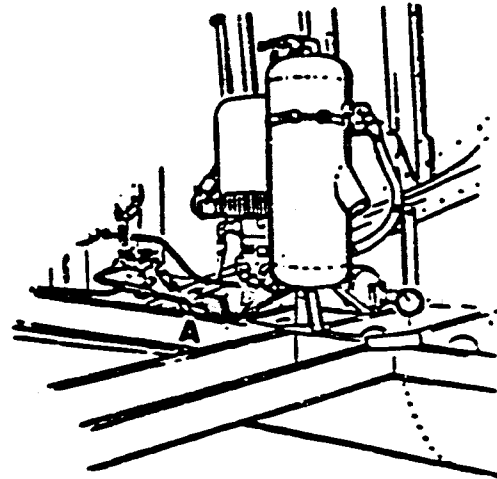

VIEW LOOKING FORWARD AND  
INBOARD AT LEFT WING ROOT AREA

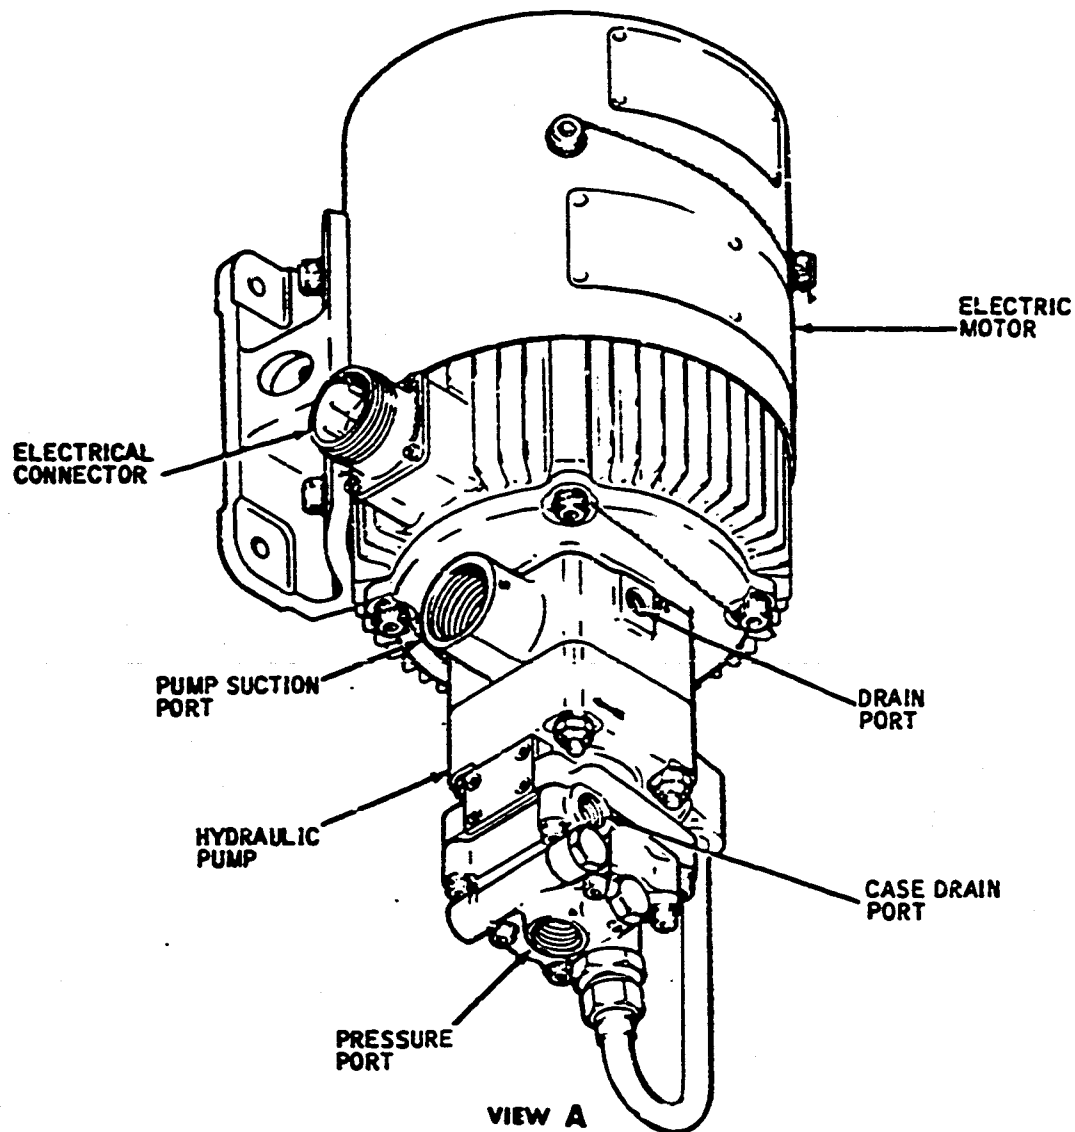

VIEW A  
Auxiliary Hydraulic Pump  
Figure 1

HA2-3547

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The electric motor is a 115/200-volt, 3-phase, 400-cps, continuous duty motor rated at 6.5 hp at 11,300 rpm. The motor rotor has an internally splined output shaft which fits on the externally splined input shaft of the pump. The other end of the rotor shaft drives a cooling fan which forces cooling air between the motor case and the outer shroud. A thermoswitch located in the motor case is provided to shut off the motor in case of an overheat condition. An override function of the control switch in the flight compartment is provided to override the thermoswitch for emergency operation.
- (3) The centrifugal boost pump impeller is located on the drive shaft between the motor and the variable displacement pump. The impeller draws hydraulic fluid from the system and supplies it through an external tube to the inlet port of the variable displacement pump under pressure, thereby helping to prevent cavitation of the pump.
- (4) The variable displacement hydraulic pump consists of the following major parts: a four piece housing, drive shaft with impeller, axial cylinder barrel containing 9 pistons, pivoting hanger with an inclined camface, hold down plate, pressure compensating valve, and bearings.
- (5) When the electric motor is actuated, the drive shaft rotates the boost pump impeller and the cylinder and piston group. Each revolution of the cylinder causes one complete stroke of each piston. The pistons are held against the camface of the hanger by the hold down plate, providing positive piston return. The displacement of fluid from the pump discharge port is controlled by the compensator valve. The pump provides full flow of 3.9 gpm at system pressures up to approximately 2700 psi. At this point, the compensator valve reduces flow until at approximately 3000 psi, displacement of fluid is reduced to zero.

**B. Auxiliary Hydraulic Pump Alternate Reservoir**

- (1) The auxiliary hydraulic pump alternate reservoir is installed on the shear web in the left wing root area, immediately aft of the auxiliary hydraulic pump. Access to the reservoir is through the left wing root access door. The alternate reservoir supplies hydraulic fluid to the auxiliary hydraulic pump in the event the fluid supply from the main hydraulic system reservoir is exhausted.
- (2) The reservoir is cylindrical in shape and has a fluid capacity of approximately 1.9 US gallons (1.6 Imperial gallons or 7.3 liters). There are four ports on the reservoir: an outlet port to the auxiliary hydraulic pump selector valve located at the bottom, an inlet port from the auxiliary hydraulic pump case drain located near the top on the side, an inlet from the wing flap return line, and an outlet to the main hydraulic reservoir located at the top. A sight gage is installed near the top of the reservoir for visual indication of fluid level, and a mounting boss for the emergency hydraulic level indicating light switch is installed on the side of the reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The reservoir is kept full during operation by routing fluid from the wing flap return line to the reservoir. Fluid in excess of the alternate reservoir capacity is then routed to the main hydraulic system reservoir. Hydraulic fluid from the auxiliary pump case drain is routed to the alternate reservoir and then to the main reservoir. Fluid is used from the alternate reservoir only when the auxiliary pump is operating and the auxiliary pump supply selector valve is in the alternate position. Fluid supply to the alternate reservoir is replenished whenever the wing flaps are operated.

C. Auxiliary Hydraulic Pump Supply Selector Valve (See Figure 2.)


- (1) The auxiliary hydraulic pump supply valve is a 2-position valve that ports hydraulic fluid from either reservoir, through a common outlet, to the auxiliary pump. The selector valve is located on the shear web in the left wing root, near the auxiliary pump. The selector valve is accessible through the left wing root access door.
- (2) The valve body has two inlet ports and one outlet port. The outlet port is centrally located on the aft side of the valve body. The two inlet ports are located on the cutboard side of the valve body, 90 degrees from the outlet port. Two mounting flanges are located on the inboard side of the valve body. These flanges are an integral part of the valve body.
- (3) During normal operation, fluid is taken from a low standpipe in the main hydraulic system reservoir and ported to the auxiliary pump. When the valve is in the alternate position, fluid is taken from the auxiliary hydraulic pump alternate reservoir and ported to the auxiliary pump. The valve is moved from the auxiliary position to the alternate position by placing the hydraulic system selector control lever, located on the system engineer's control pedestal, to the general system/main gear downlock and flaps position.

D. Auxiliary Hydraulic Pump Relief Valve (See Figure 3.)


- (1) The auxiliary hydraulic pump relief valve is a spring loaded poppet-type valve and serves to relieve excess fluid pressure that may build up in the auxiliary hydraulic system. The relief valve connects, through a reducer, to a tee in the A return port of the hydraulic system reservoir. The valve is accessible through the left wing root access door.
- (2) Externally, the valve body is cylindrical, approximately 5 inches in length, and 1 inch in diameter. The outlet end of the valve is slightly larger than the inlet end.
- (3) When pressure builds up, the poppet starts to relieve at approximately 3300 psi. If pressure continues to build up, the poppet continues to open until 3500 psi and a maximum flow of 3.5 gpm are reached. When pressure is relieved, the poppet reseats at 90 percent of the unseat pressure.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

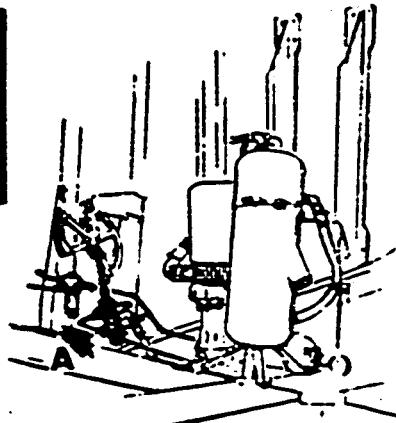

VIEW LOOKING INTO LEFT  
 WING ROOT AREA

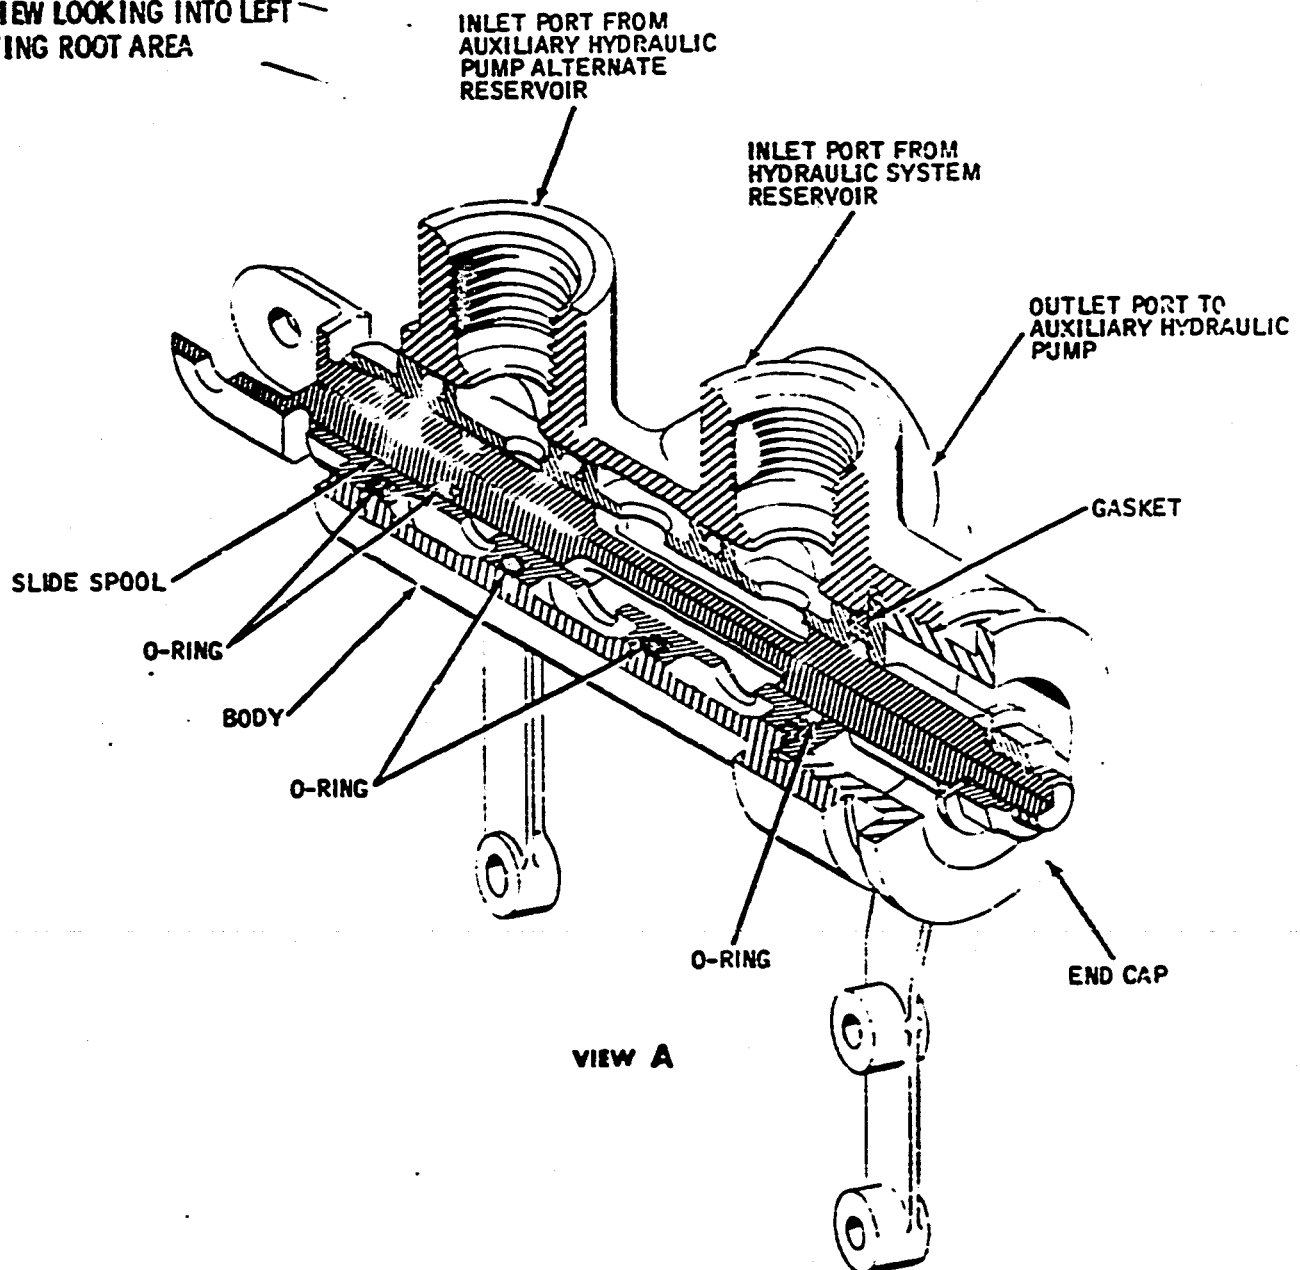

Auxiliary Hydraulic Pump Supply Selector  
 Valve -- Cutaway View  
 Figure 2


HA2-160A

29-20-0  
 CODE 2  
 Page 5

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

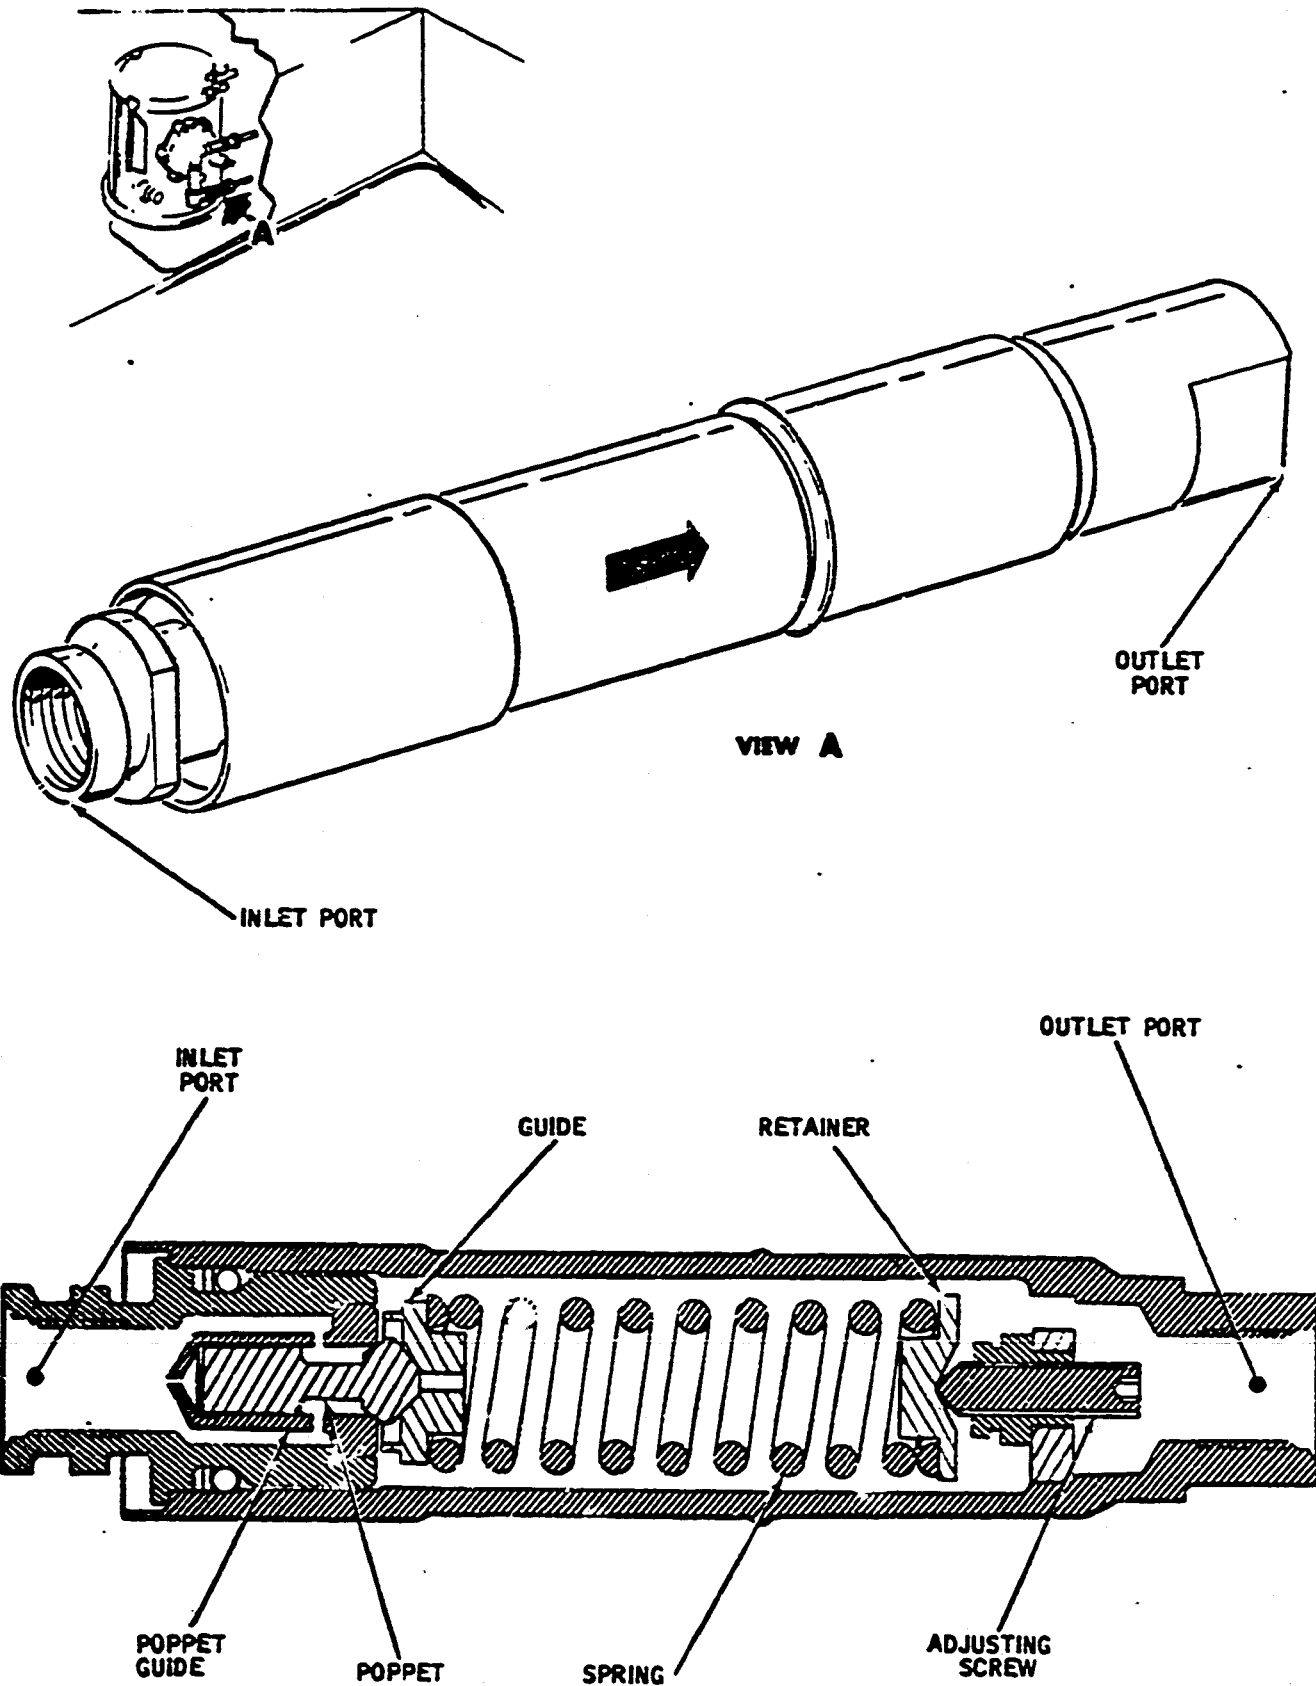

HA2-161

Auxiliary Hydraulic Pump Relief Valve -- Cutaway View  
 Figure 3

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

E. Auxiliary Hydraulic System Filter (See Figure 4.)

- (1) A line-type, 10 micron filter assembly is installed in the piping of the auxiliary system to filter fluid from the pressure outlet port of the auxiliary pump to the system selector valve. The filter is located on the bulkhead near the forward inboard corner of the left main gear wheel well, slightly inboard and above the dual filter and relief valve. It is accessible through the left main gear inboard door.
- (2) The inlet and outlet ports of the filter are internally threaded and are marked in and out. The filter bowl is cylindrical in shape, with wrench flats at the lower end, and is threaded into the assembly immediately below the ports. A hex-shaped magnetic plug is installed in the drain port. The filter element is stainless steel mesh, supported by a perforated cylindrical center core.



F. Auxiliary Hydraulic System Check Valve

- (1) The auxiliary hydraulic system check valve is a spring-loaded, poppet-type valve with a rated capacity of 3000 psi. This valve is installed in the line between the auxiliary hydraulic system filter and the system selector valve to prevent reverse flow of hydraulic fluid through the filter and the auxiliary pump when the engine-driven pumps or external pressure supply are used.
- (2) The auxiliary hydraulic system check valve is located in the left wheel well, just above the dual filter and relief valve. The auxiliary hydraulic system check valve is accessible through the left wheel well.
- (3) Externally and internally, this valve is similar to the engine-driven hydraulic pump check valve, except for size.

G. Auxiliary Hydraulic System Surge Damper Accumulator (See Figure 5.)

- (1) The auxiliary hydraulic system surge damper accumulator consists of two spherical domes, separated by a diaphragm and held together by a ring nut. An air filler valve and gage are installed on the accumulator. The accumulator is installed in the auxiliary hydraulic pump pressure line just inboard and aft of the auxiliary pump, and is attached to the shear web by two clamp blocks. Access to the accumulator is through the left wing root access door.
- (2) The accumulator is initially charged to 1000 psi with dry nitrogen. As the auxiliary system pressure builds up, fluid is forced against the diaphragm in the accumulator, further compressing the trapped nitrogen in the air side of the accumulator to full system pressure (2600 to 3000 psi is indicated on the accumulator pressure gage). The air in the accumulator absorbs the initial shock of the auxiliary pump output and permits the system pressure to rise gradually. The accumulator also serves to cushion the piping and system components against high impact loads.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

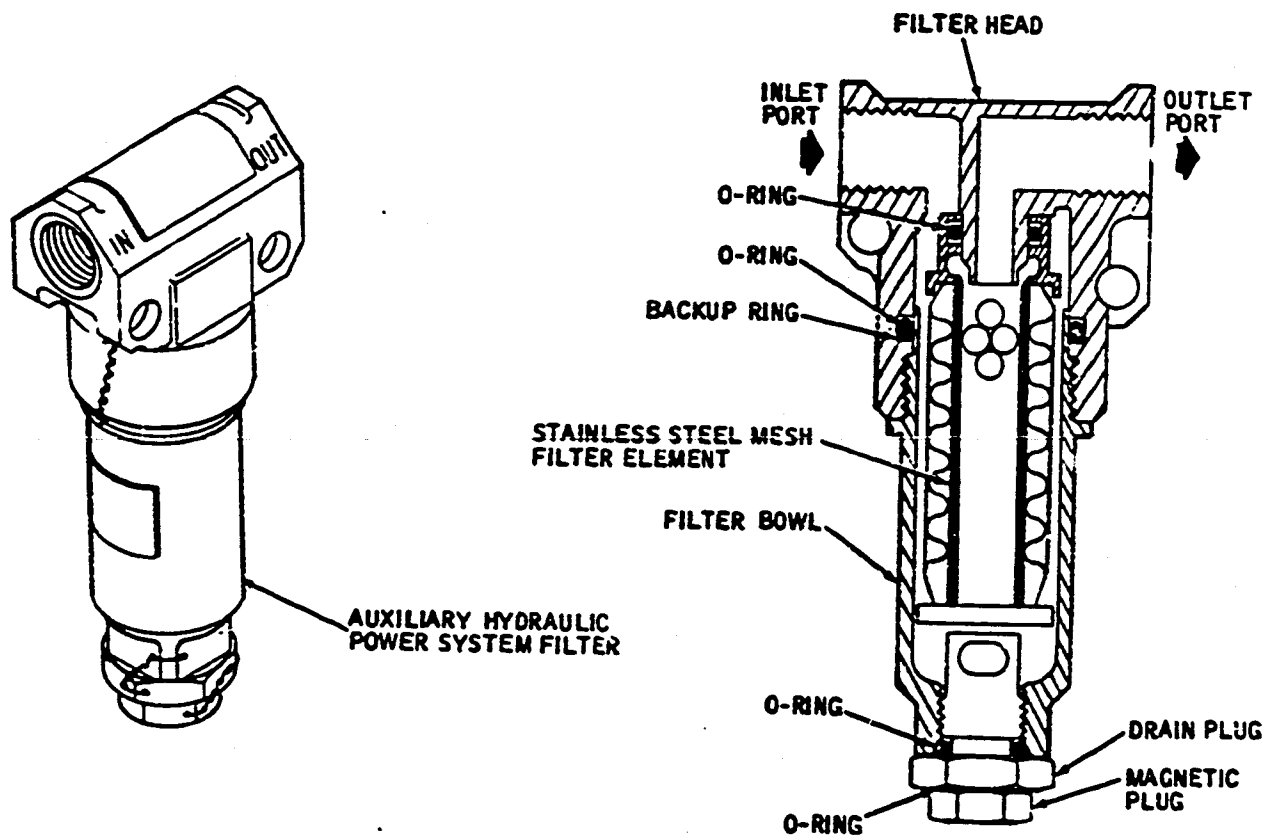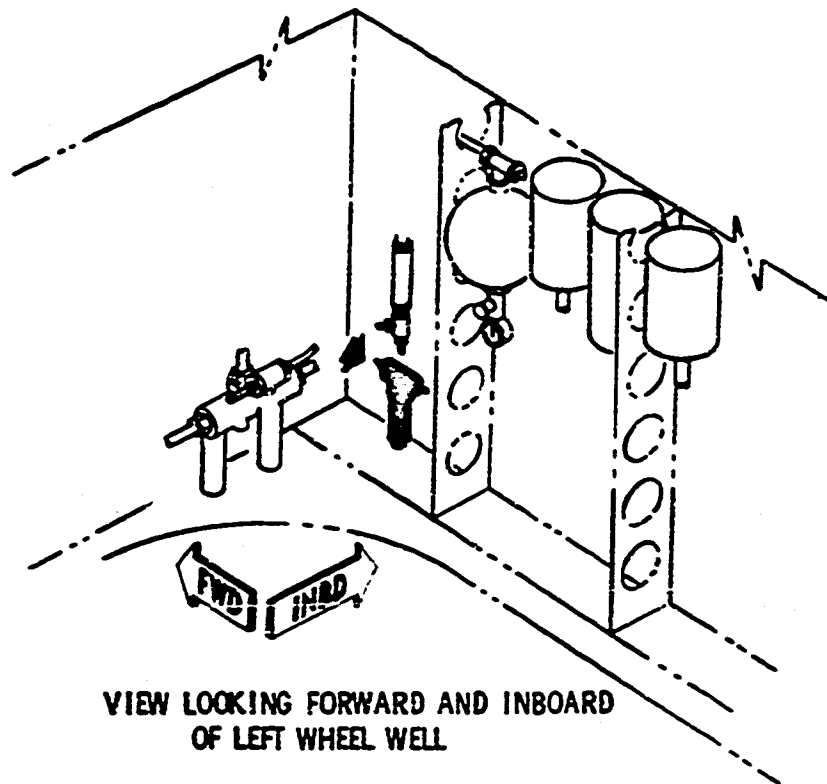

Auxiliary Hydraulic System Filter -- Cutaway View  
 Figure 4

HA2-152

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

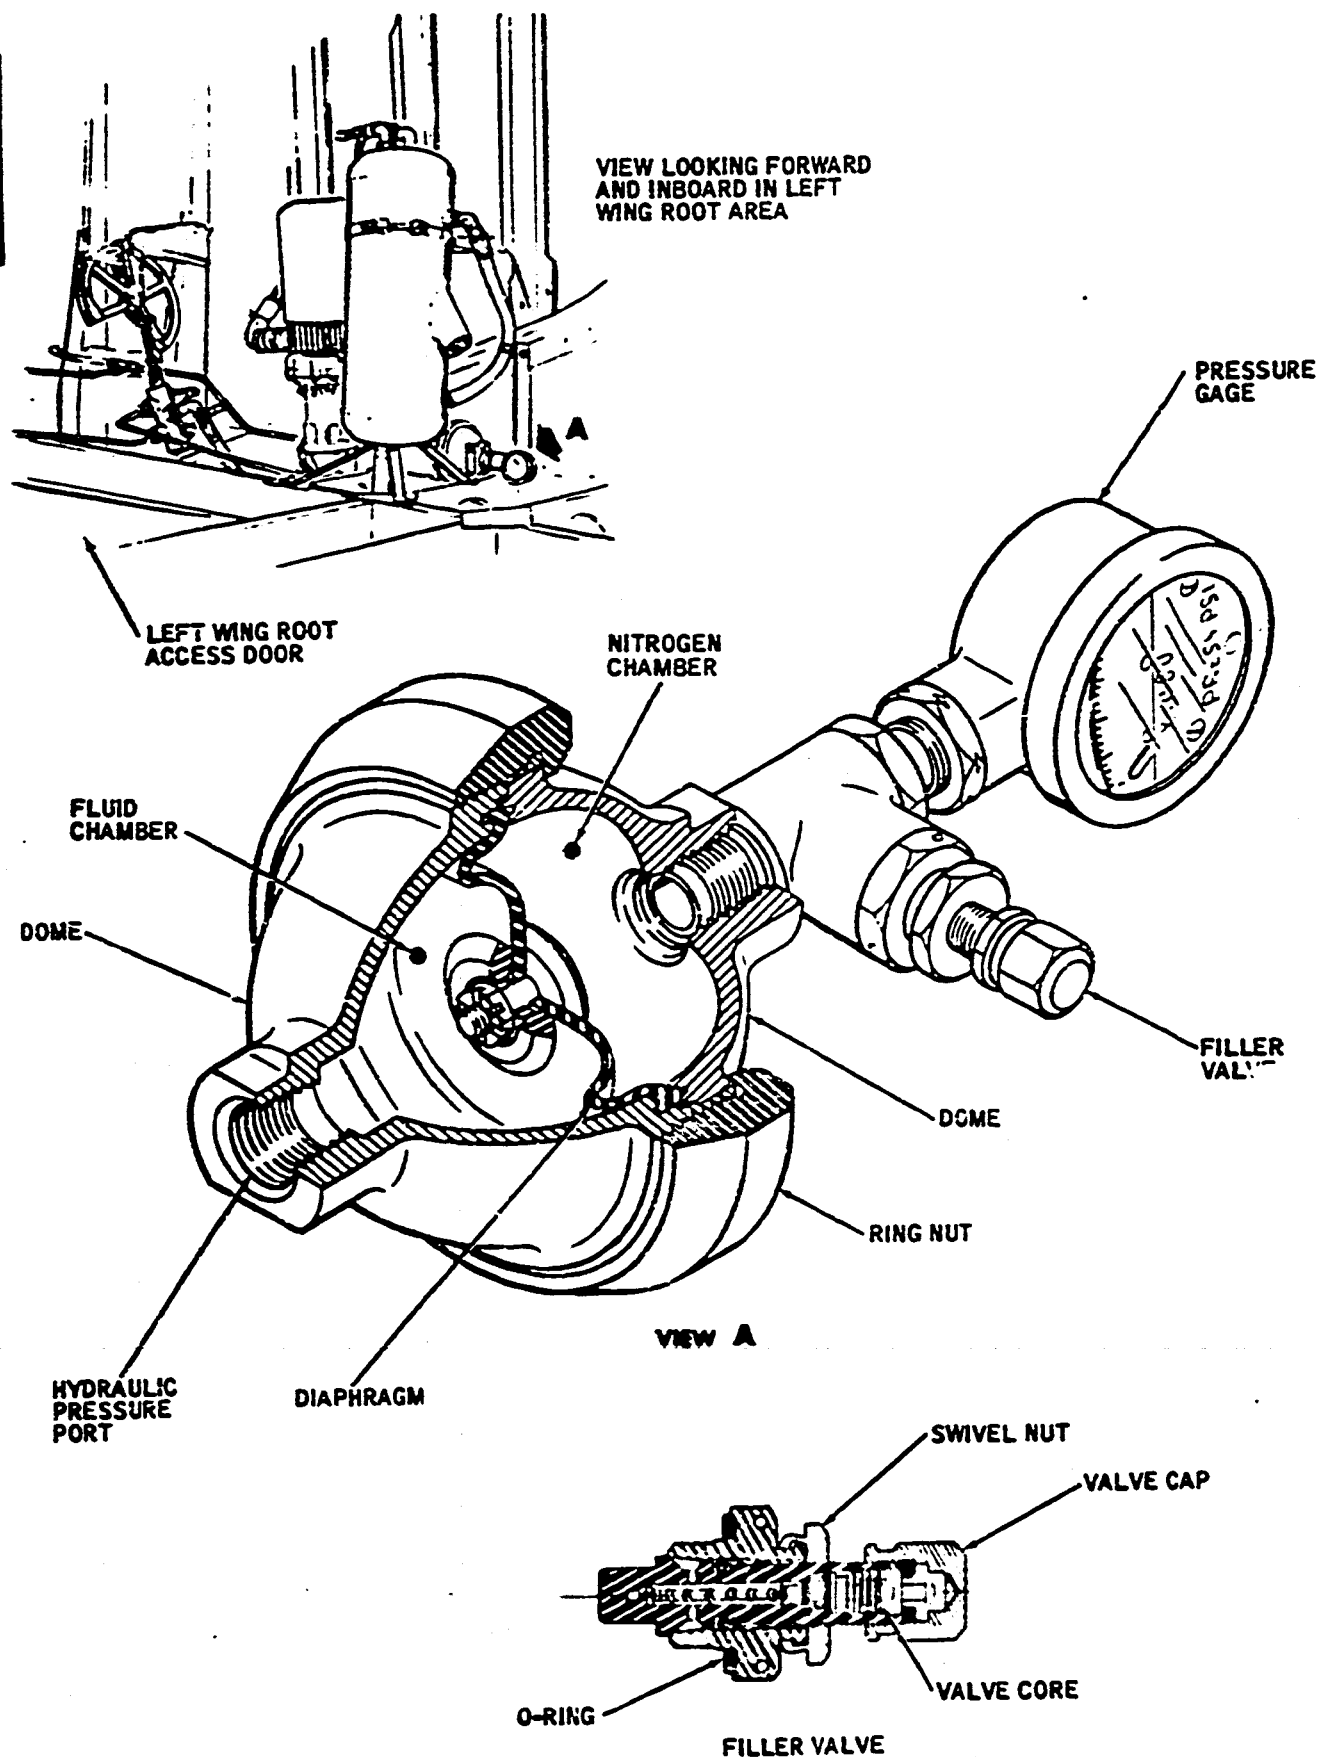

Auxiliary Hydraulic Power System Surge Damper  
 Accumulator -- Cutaway View  
 Figure 5

HA2-163A

29-20-0  
 CODE 2  
 Page 9

Jun 15/67




Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

H. Auxiliary Hydraulic Pump Control

- (1) The auxiliary hydraulic pump control system consists of auxiliary hydraulic pump control switch, an auxiliary hydraulic pump control relay, an auxiliary hydraulic pump power relay, an electric motor, and an auxiliary pump on indicating light.
- (2) The auxiliary hydraulic pump control switch(es), located in the flight compartment, are 3-position switches. They are spring-loaded to the center position and have two momentary positions placarded start (hold only in emergency) and stop.
- (3) The electric motor for the auxiliary hydraulic pump is an ac, 3-phase motor. A thermostatic switch is included in the circuit to protect the motor from overheating.
- (4) The auxiliary hydraulic pump motor is supplied with power from the cabin bus 4. This permits pump operation from an external power source or from the airplane electrical system.
- (5) The auxiliary pump on indicating light is a blue press-to-test light, located adjacent to the auxiliary hydraulic pump control switch. The light is equipped with a dimming feature.
- (6) When the auxiliary hydraulic pump control switch is momentarily moved to the start position, the circuitry is completed between the auxiliary hydraulic pump control relay and cabin bus 4. The ground is through the stop contact of the switch and the thermostatic switch of the motor. Once the relay is energized, it remains energized through its own hold-ing contacts. Through a closed contact of the pump control relay, power is supplied from cabin bus 4 to energize the hydraulic pump power relay. Through the closed contacts of the pump power relay, a power circuit is completed from the feeder leads of cabin bus 4 to the auxiliary hydraulic pump motor. The blue indicating light, located on the overhead switch panel, receives power through one of the closed contacts of the pump power relay. Therefore, the light is on whenever the pump power relay is energized.
- (7) The auxiliary hydraulic pump motor is safeguarded against overheating by the thermostatic switch. Under normal conditions, this switch is in the ground leg of the control relay. When an overheat condition occurs, the thermostatic switch opens the control relay circuit to limit the motor case to 450°F (252°C). This action deenergizes the control relay, which in turn deenergizes the power relay. In an emergency situation, the thermostatic switch can be overridden by holding the auxiliary hydraulic pump control switch in the start (hold only in emergency) position.
- (8) When the auxiliary hydraulic pump control switch is placed in the momentary stop position, the ground for the control relay is broken, deenergizing the power relay and removing power from the pump motor and the indicating light.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

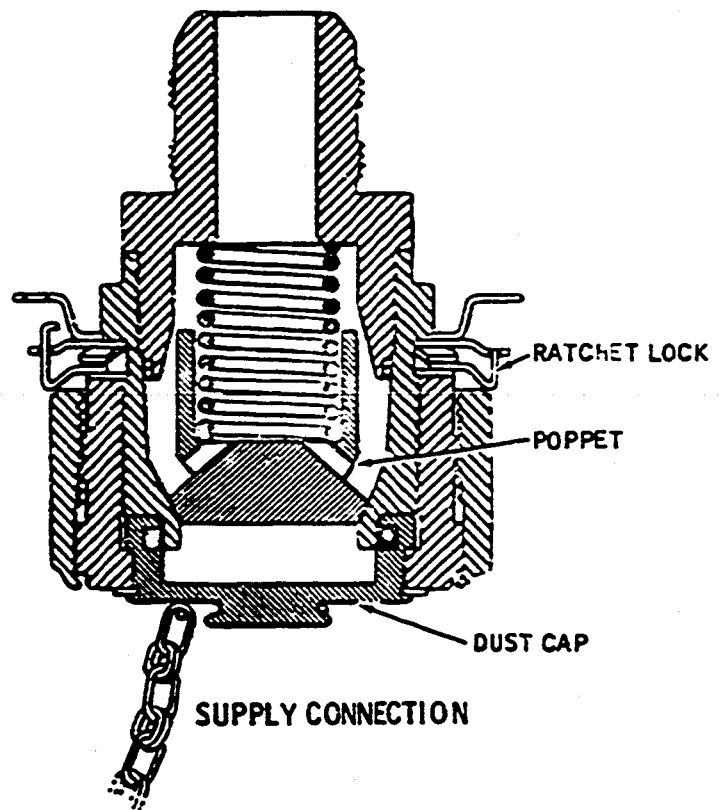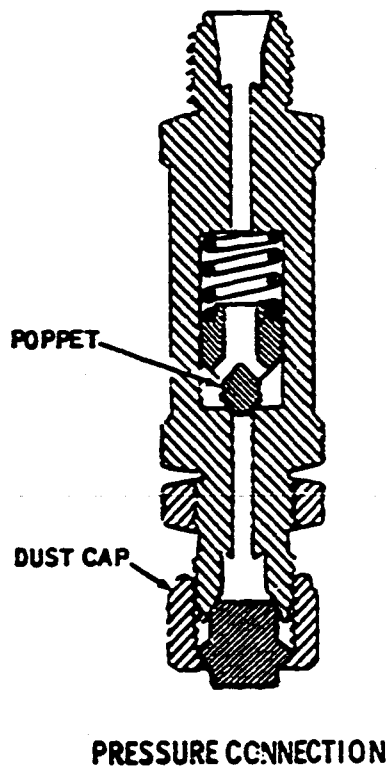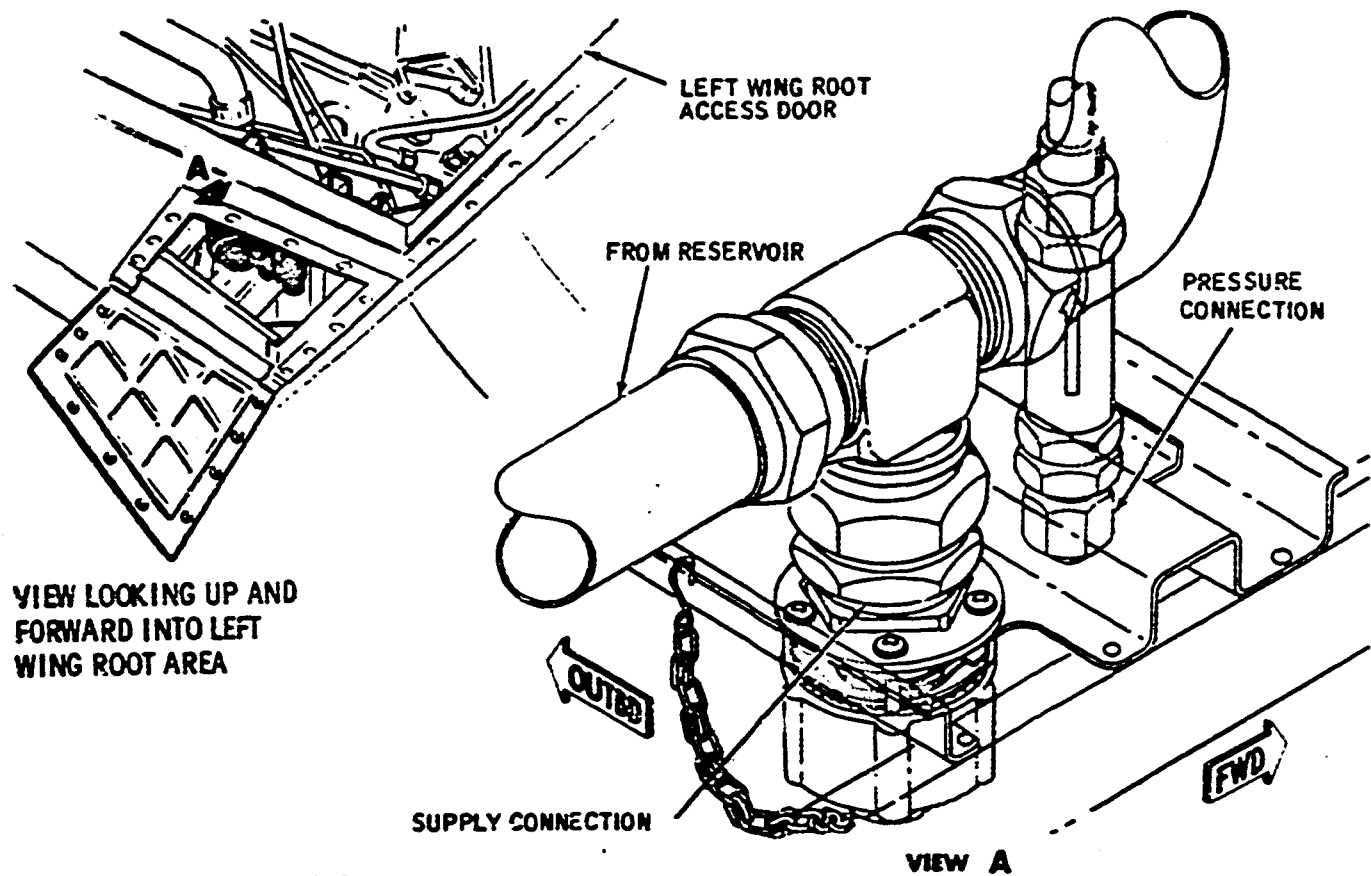

Ground Power Connectors -- Cutaway View  
 Figure 6

Jun 15/67

Printed in U.S.A.

HA2-164  
 29-20-0  
 CODE 2  
 Page 11

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

I. Ground Service Pressure and Supply Connectors (See Figure 6.)

- (1) The ground service pressure and supply connectors are external fittings to which a service unit can be connected for operating the hydraulic power system when there is no power on the airplane. The connectors are located on a panel covered by an access door on the lower skin of the left wing root, aft of the rear spar.
- (2) The ground service pressure connector is made up of a check valve with a flared, bulkhead-type fitting on the inlet end and a standard tube fitting on the outlet end which connects to the left engine-driven pump pressure line. The inlet fitting is covered with a dust cap when not in use.
- (3) The internal description of the connector is the same as that of the engine-driven hydraulic pump check valve (see 29-10-0 Description and Operation). The connector operates as a shutoff valve when the ground unit is not connected. When a ground hydraulic power source is connected to the pressure connector and pressure is applied, the poppet unseats and supplies pressure fluid to the hydraulic power system.
- (4) The supply connector is made up of a T-fitting and a self-sealing coupling half. The tee is female-threaded to accept the bulkhead-type fitting on the upper end of the coupling. The cross arms of the tee tie into the right engine-driven pump supply line with flared-type fittings. The tee is threaded onto the coupling half and is secured with a locknut. The coupling consists of a coupling body, male-threaded to accept the coupling half from the ground source. The mounting flange has a recess to accept the hex portion of the coupling body, and has notches to retain the lockspring. A dust cap consisting of a union nut assembly, a dust plug, and a securing chain is installed on the lower end of the coupling when not in use.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY - DESCRIPTION AND OPERATION

1. General


- A. The auxiliary hydraulic system is a supplementary hydraulic power system connected to the main hydraulic power system through the system selector valve and the auxiliary pump supply selector valve. The auxiliary hydraulic system consists of an electrically driven auxiliary hydraulic pump, an auxiliary pump relief valve, a surge damper accumulator, an auxiliary filter and check valve, and the piping required to interconnect the components and connect the auxiliary system to the main power system.
- B. In flight, the auxiliary hydraulic system can be used as supplemental power for the main power system. The auxiliary pump will also serve, when ground support equipment is not available, to pressurize the hydraulic power system for ground testing of the airplane hydraulic subsystems and components. Fluid is supplied to the auxiliary pump from a low standpipe in the hydraulic system reservoir. When the auxiliary pump is operated, fluid from the pressure outlet port of the auxiliary pump is ported, through the auxiliary power system filter and an auxiliary system check valve, to the auxiliary pressure inlet port of the system selector valve. When the system selector valve is in the normal position, auxiliary pump pressure is ported to the general system.
- C. When the auxiliary pump is not operating, the auxiliary system check valve prevents reverse flow through the auxiliary pump from the engine-driven pumps. An auxiliary pump relief valve is teed into the line from the auxiliary pump outlet port to the reservoir filter inlet port. The valve relieves and ports excess fluid pressure back to the reservoir if auxiliary pressure builds above 3300 psi.
- D. The auxiliary pump alternate reservoir is installed in the auxiliary hydraulic system to provide an alternate hydraulic fluid source in case of depletion of the normal supply to the hydraulic system reservoir. The alternate reservoir source is selectable by operation of the auxiliary hydraulic pump supply selector valve which actuates simultaneously with the hydraulic system selector valve.

2. System Components

A. Auxiliary Hydraulic Pump (See Figure 1.)



- (1) The auxiliary hydraulic pump on airplanes 801-822, 860-866 is an electrically driven, continuous-duty, pressure-compensated, variable-displacement pump located in the left wing root access area. An automatic pressure-sensing mechanism (compensator) within the pump regulates the amount of fluid delivered to the airplane hydraulic system. The quantity of delivery is dependent on the system pressure. Flow is reduced to zero when desired system pressure is achieved.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

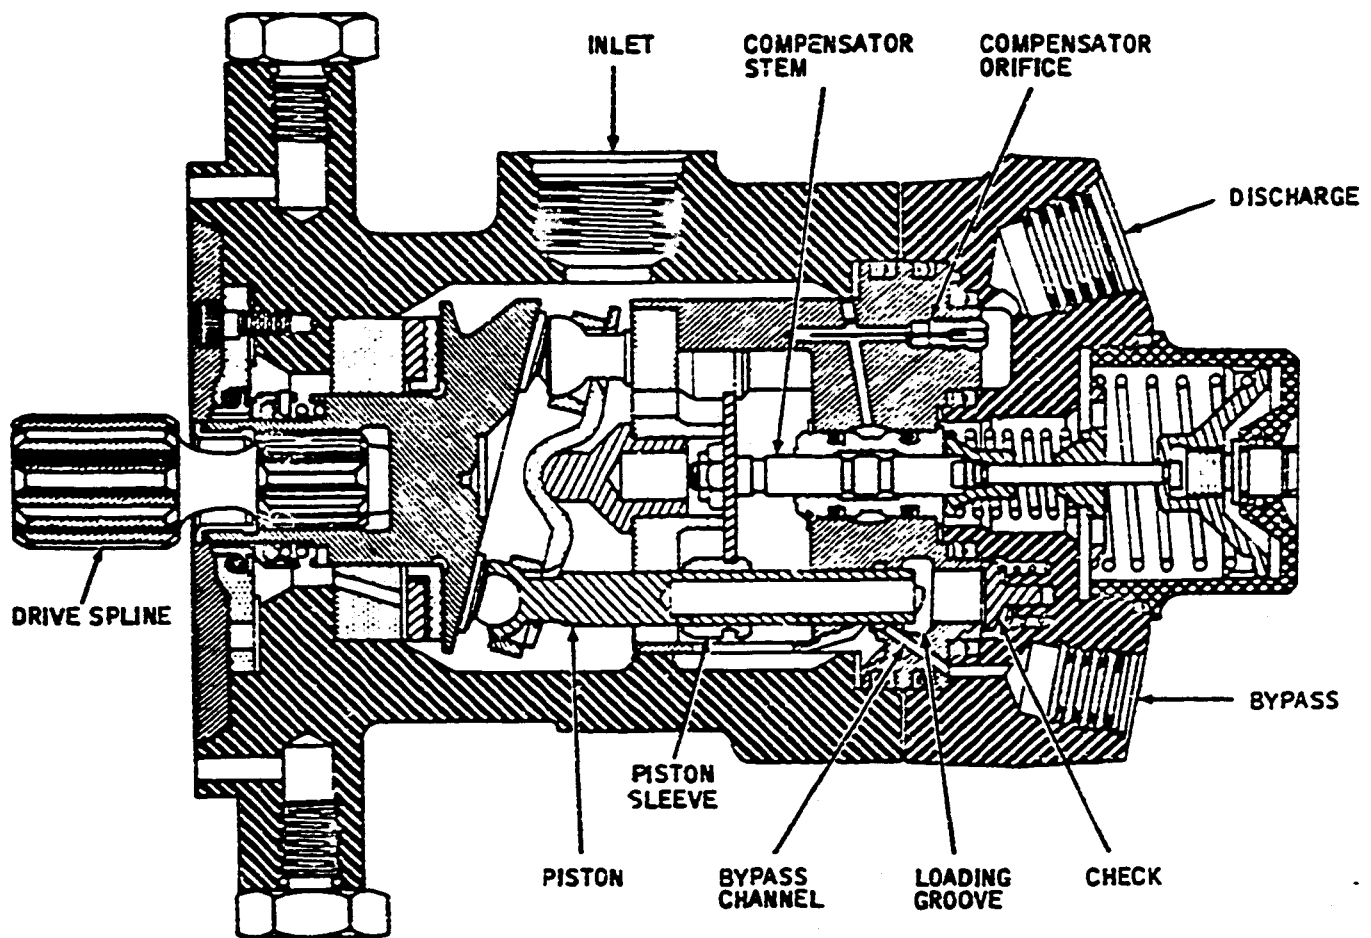

FLOW

NON-FLOW

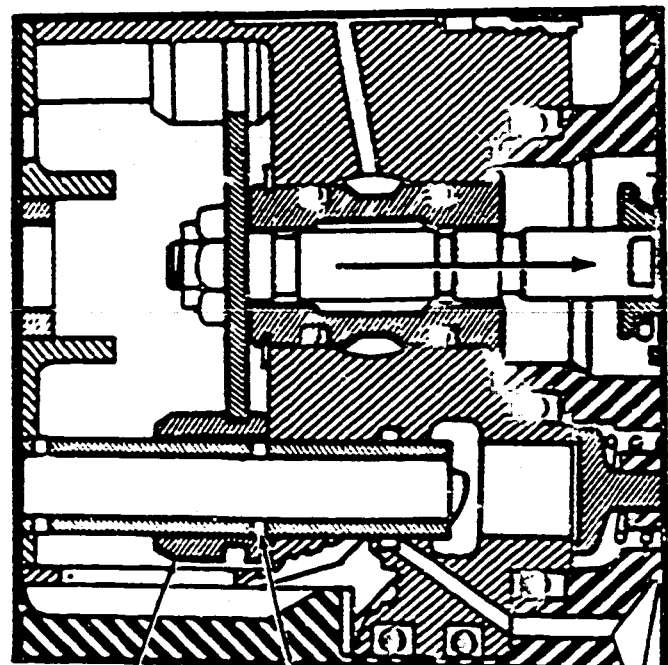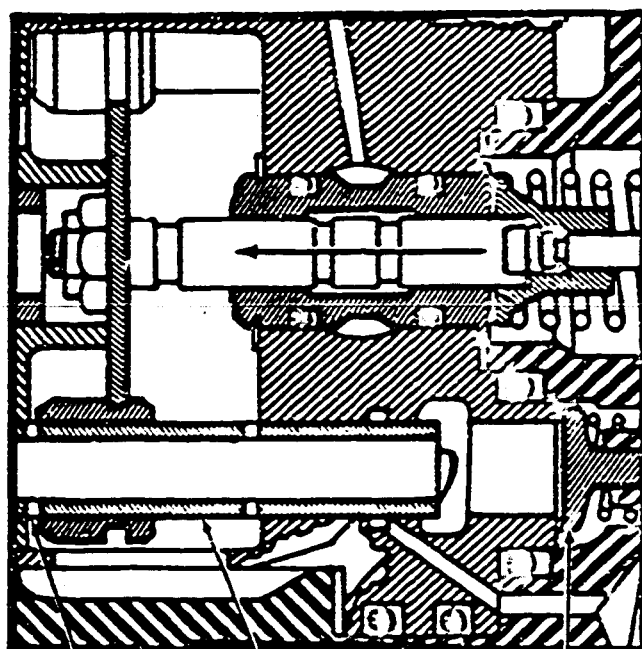

RELIEF HOLES

PISTON

CHECK

SLEEVE

BYPASS HOLES

HA2-159


Auxiliary Hydraulic Pump -- Cutaway View  
 (Airplanes 801-822, 860-866)  
 Figure 1 (Sheet 1)

29-20-0  
 CODE 3  
 Page 2


Printed in U.S.A.

Oct 15/68

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

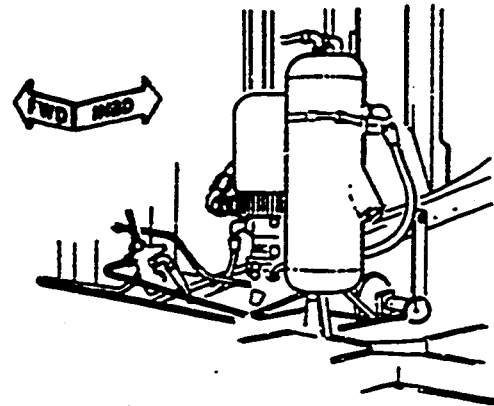

VIEW LOOKING FORWARD AND  
INBOARD AT LEFT WING ROOT AREA

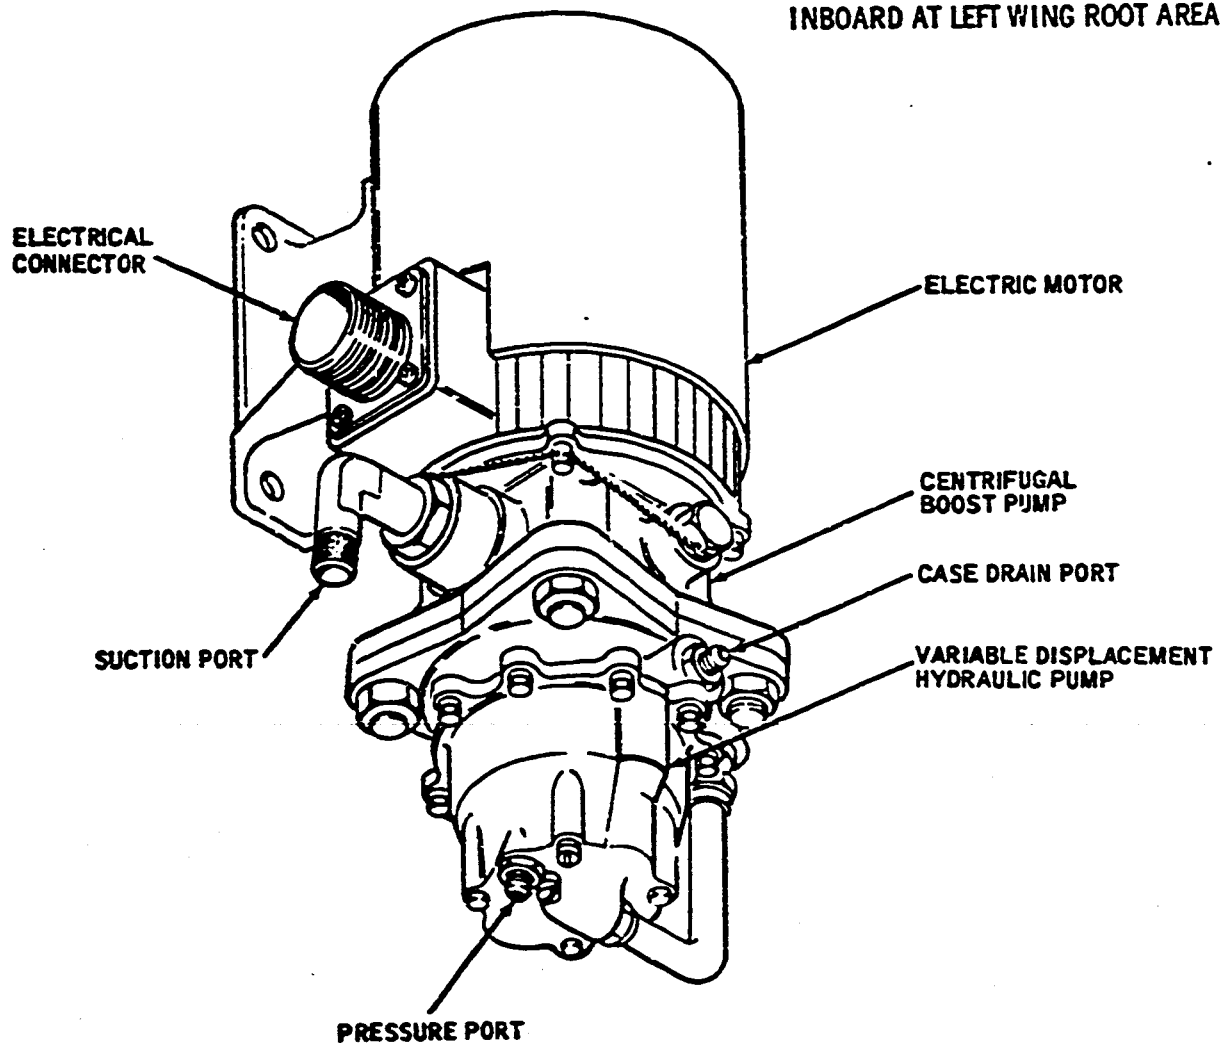

HA2-5780

Auxiliary Hydraulic Pump  
(Airplanes 867 and Subsequent)  
Figure 1 (Sheet 2)

29-20-0  
CODE 3  
Page 2A

Oct 15/68

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The internal components of the pump perform three major functions; mechanical drive (motor), fluid displacement (pistons), and pressure control (compensator). Mechanical drive is supplied by a 200-vac, 3-phase, 400-cycle electric motor.
- (3) As the hydraulic fluid from the reservoir enters the inlet port, the fluid is displaced by axial piston motion. As a piston advances in a cylinder bore, it forces a quantity of fluid past the pump check at the end of the bore. When the piston bypass holes become aligned hydraulically with the cylinder block passage, pressurized fluid also escapes to bypass; then a combination of spring pressure and system back pressure closes the pump checks. In the withdrawal portion of the piston stroke, a partial vacuum is created in the cylinder bore, allowing new fluid from the intake to flow into the bore from the pressurized reservoir. The quantity of fluid delivered by each piston stroke is controlled by relief holes in the pistons and piston sleeves.
- (4) Unless the relief holes are covered by the piston sleeves, no fluid is forced past the pump checks. Quantity of delivery is therefore determined by the position of the piston sleeves, which in turn is determined by system pressure bled through the compensator orifices. Because one sleeve is slightly longer than the others, the pump, even when in full cutoff, continues to pump enough fluid to make up for any minor drop in the system pressure due to leakage.
- (5) Pressure control: System pressure, acting through the compensator orifice on the compensator stem, controls the piston sleeve position and, therefore, determines whether the pump delivers at full capacity, partial capacity, or cuts off entirely. Path of fluid flow through the pump remains the same in all three conditions. When the pressure at the outlet port reaches 2700 psi, pressure in the compensator commences to reduce the output until 3000 psi is reached, at which time fluid flow is zero. The bypass system is provided to supply self-lubrication, particularly when the pump is in non-delivery (cutoff) operation. The ring of bypass holes in the pistons is hydraulically aligned with the bypass passage each time a piston reaches the very end of its forward travel period. This pumps a small quantity of fluid out the bypass passage back to the supply reservoir and provides a constant changing of the fluid in the pump. The bypass is designed to pump against a considerable back pressure for use with pressurized hydraulic reservoirs.
- (6) On airplanes 867 and subsequent, the auxiliary hydraulic pump, located in the left wing root access area, supplies hydraulic pressure for the auxiliary hydraulic system. The pump consists of an air cooled electric motor directly coupled through a shaft and centrifugal boost pump impeller to a variable displacement hydraulic pump.
- (7) The electric motor is a 115/200-volt, 3-phase, 400-cps, continuous duty motor. The motor rotor has an internally splined output shaft which fits on the externally splined input shaft of the pump. The other end of the rotor shaft drives a cooling fan which forces cooling air between

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

the motor case and the outer shroud. A thermoswitch located in the motor case is provided to shut off the motor in case of an overheat condition. An override function of the control switch in the flight compartment is provided to override the thermoswitch for emergency operation.

- (8) The centrifugal boost pump impeller is located on the drive shaft between the motor and the variable displacement pump. The impeller draws hydraulic fluid from the system and supplies it through an external tube to the inlet port of the variable displacement pump under pressure, thereby helping to prevent cavitation of the pump.
- (9) The variable displacement hydraulic pump consists of the following major parts: a four piece housing, drive shaft with impeller, axial cylinder barrel containing 9 pistons, pivoting hanger with an inclined camface, hold down plate, pressure compensating valve, and bearings.
- (10) When the electric motor is actuated, the drive shaft rotates the boost pump impeller and the cylinder and piston group. Each revolution of the cylinder causes one complete stroke of each piston. The pistons are held against the camface of the hanger by the hold down plate, providing positive piston return. The displacement of fluid from the pump discharge port is controlled by the compensator valve. The pump provides full flow of 3.7 gpm at system pressures up to approximately 2700 psi. At this point, the compensator valve reduces flow until at approximately 3000 psi, displacement of fluid is reduced to zero.

**B. Auxiliary Hydraulic Pump Alternate Reservoir**

- (1) The auxiliary hydraulic pump alternate reservoir is installed on the shear web in the left wing root area, immediately aft of the auxiliary hydraulic pump. Access to the reservoir is through the left wing root access door. The alternate reservoir supplies hydraulic fluid to the auxiliary hydraulic pump in the event the fluid supply from the main hydraulic system reservoir is exhausted.
- (2) The reservoir is cylindrical in shape and has a fluid capacity of approximately 1.9 US gallons (1.6 Imperial gallons or 7.3 liters).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

There are four ports on the reservoir: an outlet port to the auxiliary hydraulic pump selector valve located at the bottom, an inlet port from the auxiliary hydraulic pump bypass located near the top on the side, an inlet from the wing flap return line, and an outlet to the main hydraulic reservoir located at the top. A sight gage is installed near the top of the reservoir for visual indication of fluid level, and a mounting boss for the emergency hydraulic level indicating light switch is installed on the side of the reservoir.

- (3) The reservoir is kept full during operation by routing fluid from the wing flap return line to the reservoir. Fluid in excess of the alternate reservoir capacity is then routed to the main hydraulic system reservoir. Hydraulic fluid from the auxiliary pump bypass is routed to the alternate reservoir and then to the main reservoir. Fluid is used from the alternate reservoir only when the auxiliary pump is operating and the auxiliary pump supply selector valve is in the alternate position. Fluid supply to the alternate reservoir is replenished whenever the wing flaps are operated.


C. Auxiliary Hydraulic Pump Supply Selector Valve (See Figure 2.)

- (1) The auxiliary hydraulic pump supply valve is a 2-position valve that ports hydraulic fluid from the reservoir, through a common outlet, to the auxiliary pump. The selector valve is located on the shear web in the left wing root, near the auxiliary pump. The selector valve is accessible through the left wing root access door.
- (2) The valve body has two inlet ports and one outlet port. The outlet port is centrally located on the aft side of the valve body. The two inlet ports are located on the outboard side of the valve body, 90 degrees from the outlet port. Two mounting flanges are located on the inboard side of the valve body. These flanges are an integral part of the valve body.
- (3) During normal operation, fluid is taken from a low standpipe in the main hydraulic system reservoir and ported to the auxiliary pump. When the valve is in the alternate position, fluid is taken from the auxiliary hydraulic pump alternate reservoir and ported to the auxiliary pump. The valve is moved from the auxiliary position to the alternate position by placing the hydraulic system selector control lever, located on the system engineer's control pedestal, to the general system/flap only position.


D. Auxiliary Hydraulic Pump Relief Valve (See Figure 3.)

- (1) The auxiliary hydraulic pump relief valve is a spring loaded poppet-type valve and serves to relieve excess fluid pressure that may build up in the auxiliary hydraulic system. The relief valve connects, through a reducer, to a tee in the A return port of the hydraulic system reservoir. The valve is accessible through the left wing root access door.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

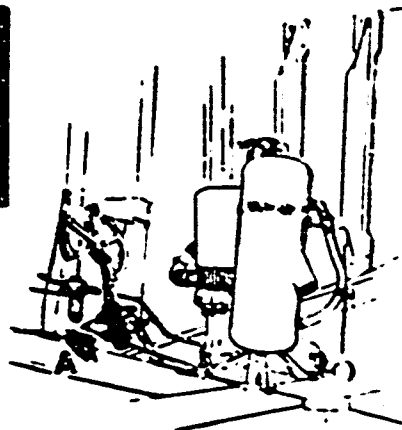

VIEW LOOKING INTO LEFT  
 WING ROOT AREA

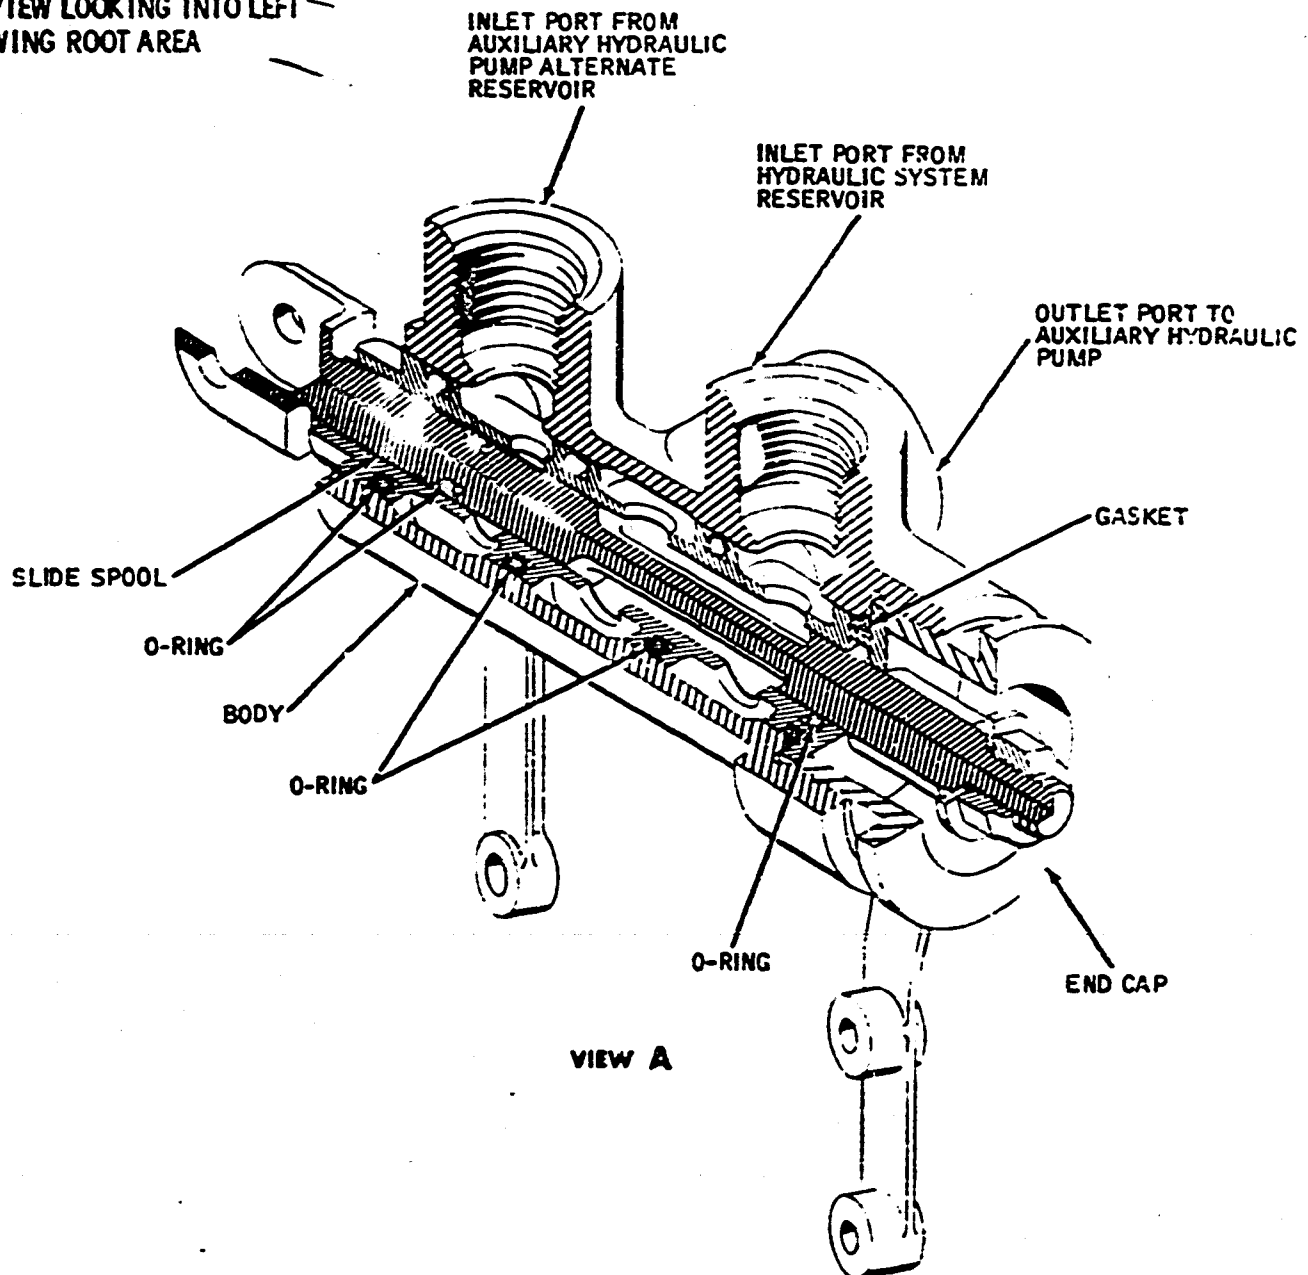

Auxiliary Hydraulic Pump Supply Selector Valve -- Cutaway View  
 Figure 2


Jun 15/67

Printed in U.S.A.

HA2-160A

29-20-0  
 CODE 3  
 Page 5

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

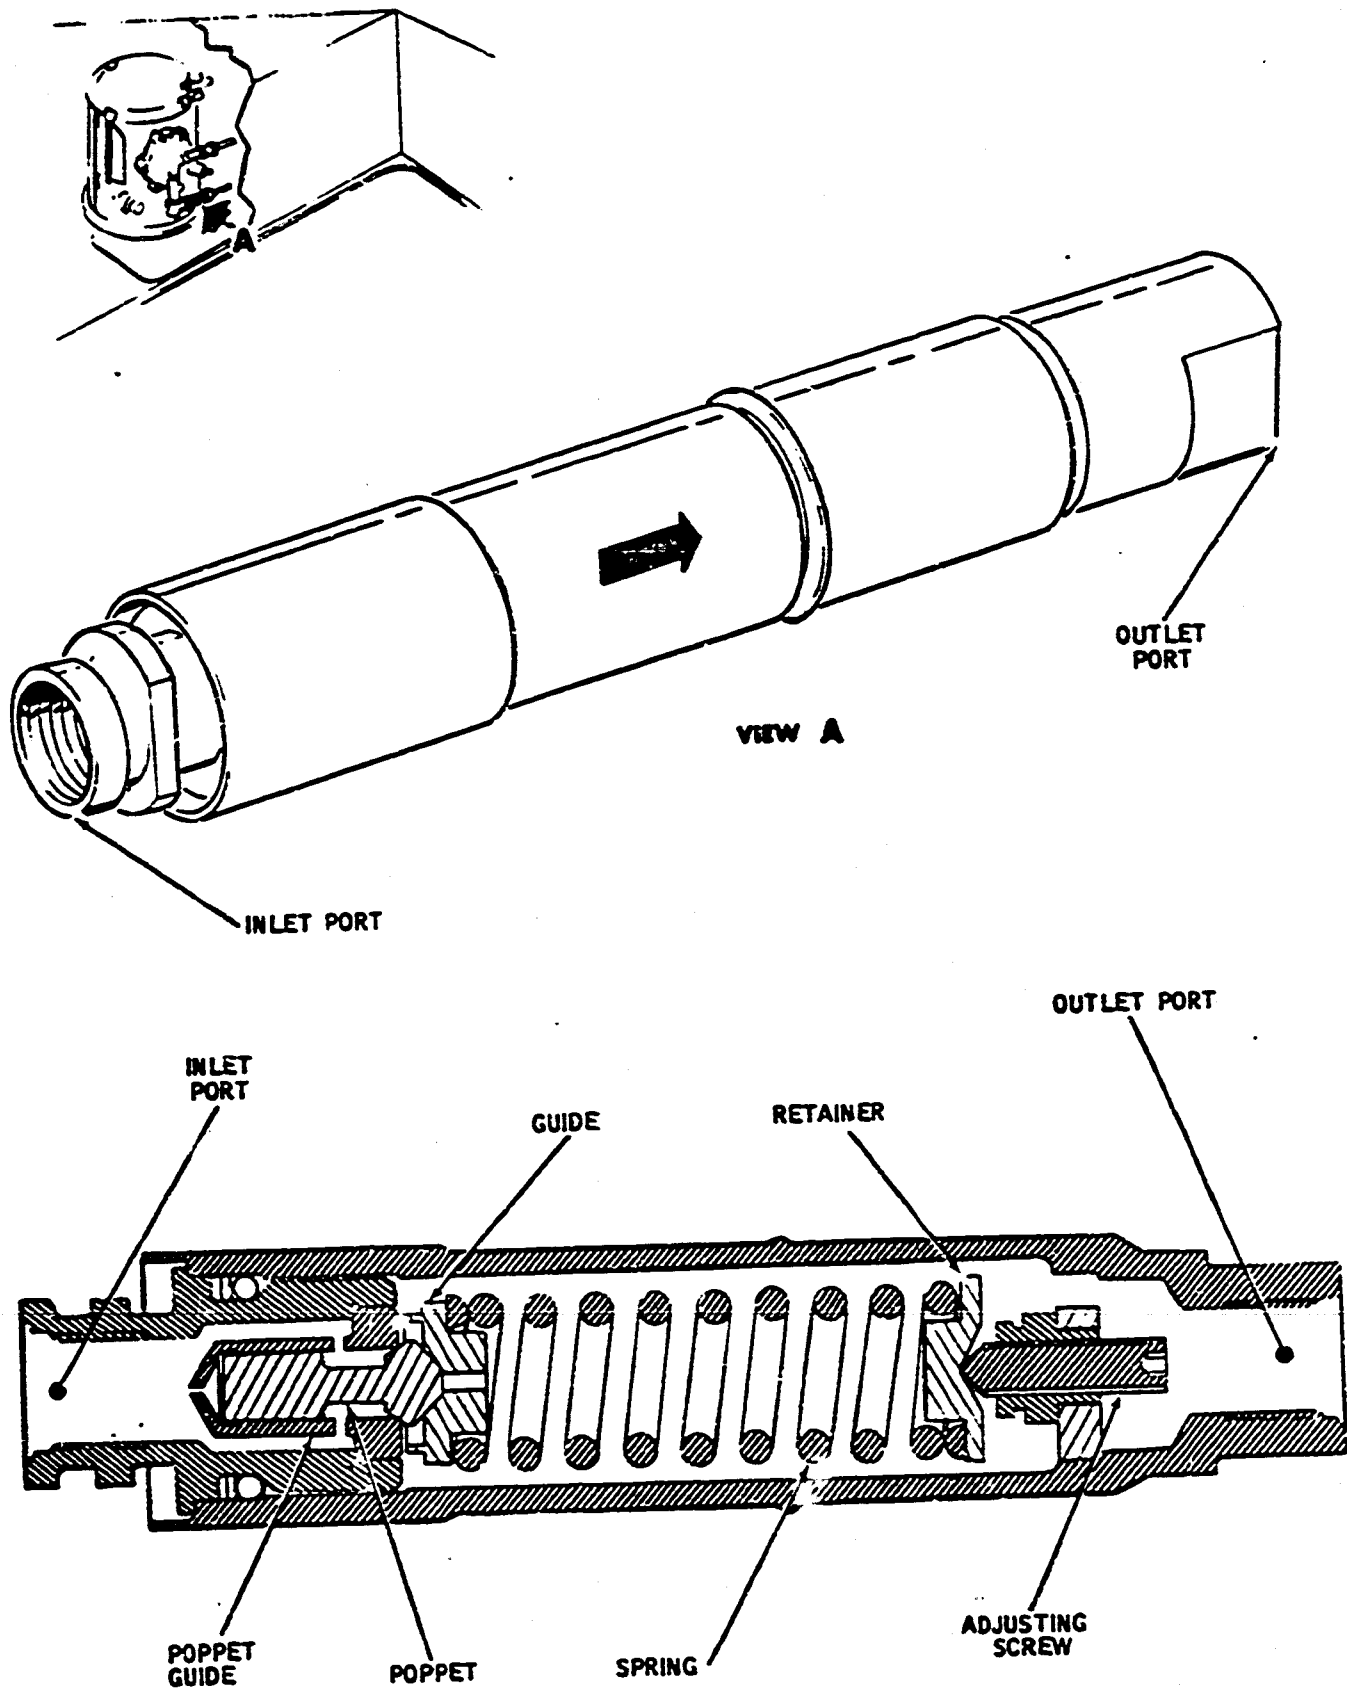

HA2-161

Auxiliary Hydraulic Pump Relief Valve -- Cutaway View  
 Figure 3

29-20-0  
 CODE 3  
 Page 6

Printed in U.S.A.

Jun 15/67



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Externally, the valve body is cylindrical, approximately 5 inches in length, and 1 inch in diameter. The outlet end of the valve is slightly larger than the inlet end.
- (3) When pressure builds up, the poppet starts to relieve at approximately 3300 psi. If pressure continues to build up, the poppet continues to open until 3500 psi and a maximum flow of 3.5 gpm are reached. When pressure is relieved, the poppet reseats at 90 percent of the unseat pressure.

E. Auxiliary Hydraulic System Filter (See Figure 4.)

- (1) A line-type, 10 micron filter assembly is installed in the piping of the auxiliary system to filter fluid from the pressure outlet port of the auxiliary pump to the system selector valve. On airplanes 801-811, the filter is located in the left wing root, just forward of the auxiliary hydraulic pump. On airplanes 812-822 and 860 and subsequent, the filter is located on the bulkhead near the forward inboard corner of the left main gear wheel well, slightly inboard and above the dual filter and relief valve. It is accessible through the left main gear inboard door.
- (2) The inlet and outlet ports of the filter are internally threaded and are marked in and out. The filter bowl is cylindrical in shape, with wrench flats at the lower end, and is threaded into the assembly immediately below the ports. A hex-shaped magnetic plug is installed in the drain port. The filter element is stainless steel mesh, supported by a perforated cylindrical center core.


F. Auxiliary Hydraulic System Check Valve

- (1) The auxiliary hydraulic system check valve is a spring-loaded, poppet-type valve with a rated capacity of 3000 psi. This valve is installed in the line between the auxiliary hydraulic system filter and the system selector valve to prevent reverse flow of hydraulic fluid through the filter and the auxiliary pump when the engine-driven pumps or external pressure supply are used.
- (2) The auxiliary hydraulic system check valve is located in the left wheel well, just above the dual filter and relief valve. The auxiliary hydraulic system check valve is accessible through the left wheel well.
- (3) Externally and internally, this valve is similar to the engine-driven hydraulic pump check valve, except for size.


G. Auxiliary Hydraulic System Surge Damper Accumulator (See Figure 5.)

- (1) The auxiliary hydraulic system surge damper accumulator consists of two spherical domes, separated by a diaphragm and held together by a ring nut. An air filler valve and gage are installed on the accumulator. The accumulator is installed in the auxiliary hydraulic pump pressure line just inboard and aft of the auxiliary pump, and is attached to the shear web by two clamp blocks. Access to the accumulator is through the left wing root access door.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

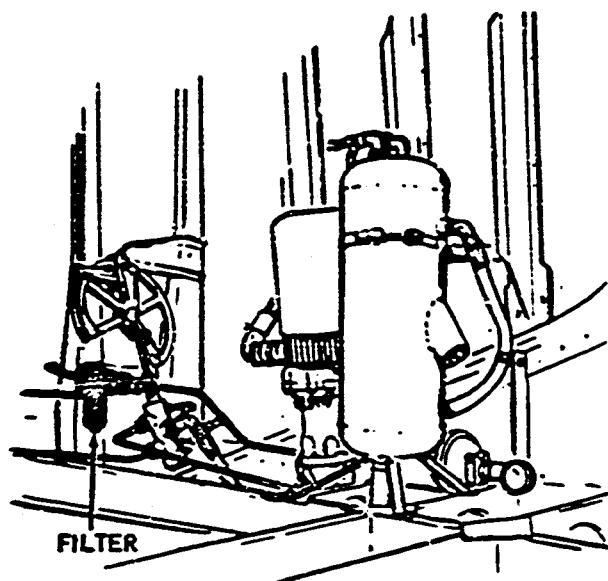


VIEW LOOKING FORWARD AND OUTBOARD  
 IN LEFT WING ROOT AREA  
 (AIRPLANES 801-811)

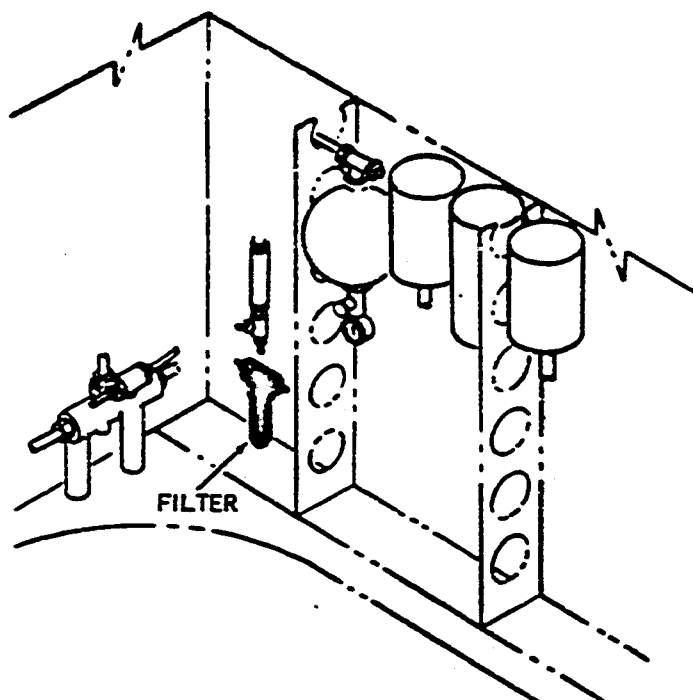

VIEW LOOKING FORWARD AND OUTBOARD  
 OF LEFT WHEEL WELL  
 (AIRPLANES 812-822 AND  
 860 AND SUBSEQUENT)

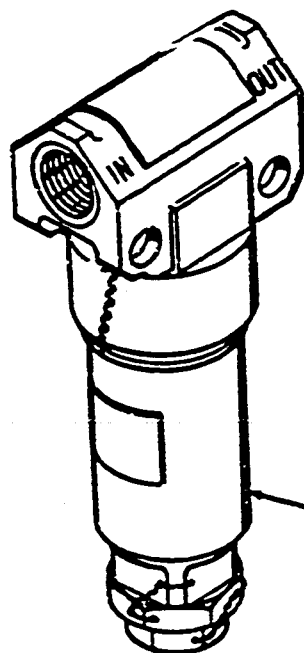


AUXILIARY HYDRAULIC  
 POWER SYSTEM FILTER

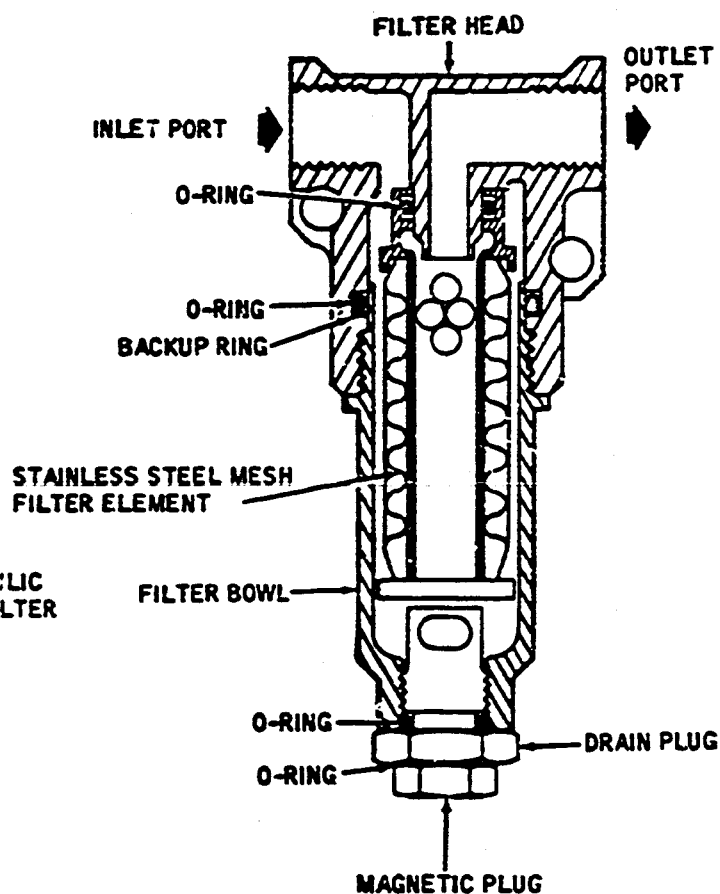

HA2-4662A

Auxiliary Hydraulic System Filter -- Cutaway View  
 Figure 4

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

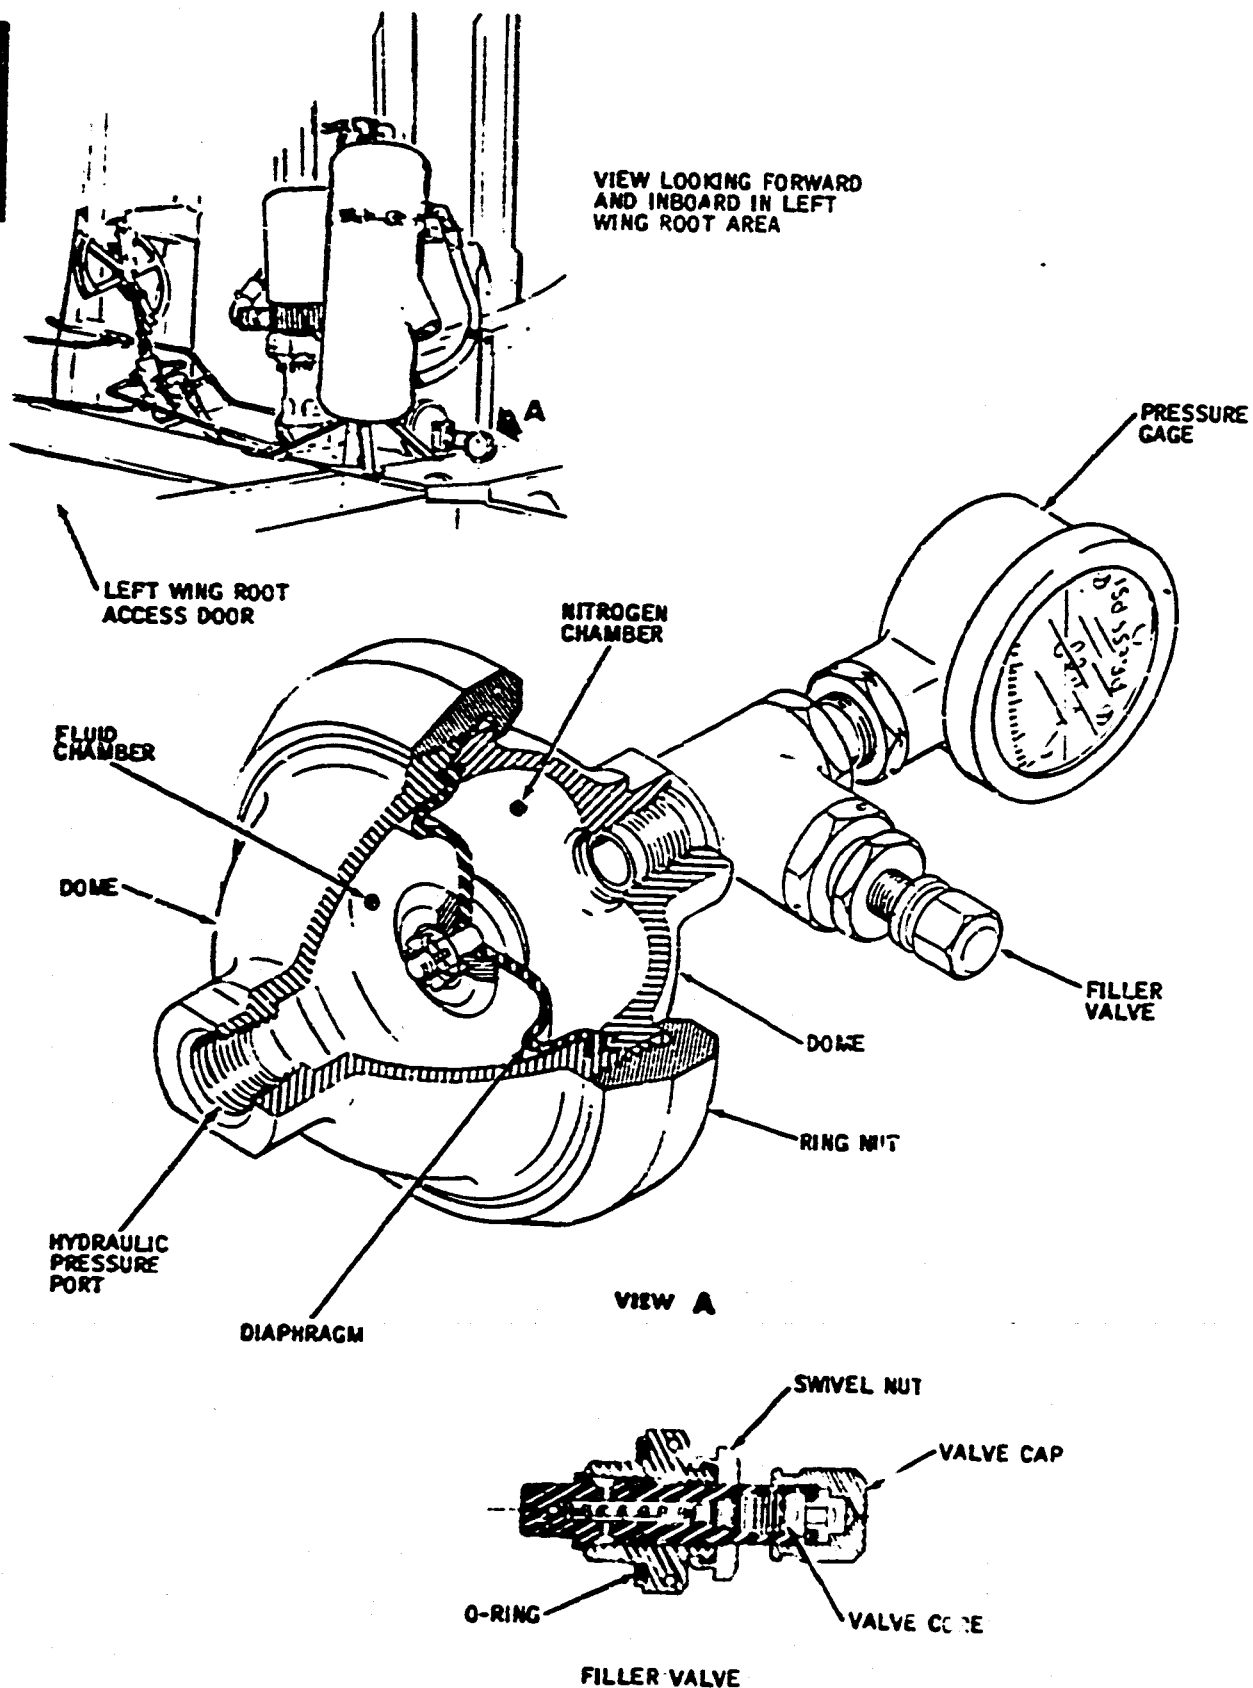

HA2-163A

Auxiliary Hydraulic Power System Surge  
 Damper Accumulator -- Cutaway View  
 Figure 5

Jun 15/67

Printed in U.S.A.

29-20-0  
 CODE 3  
 Page 9




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The accumulator is initially charged to 1000 psi with dry nitrogen. As the auxiliary system pressure builds up, fluid is forced against the diaphragm in the accumulator, further compressing the trapped nitrogen in the air side of the accumulator to full system pressure (2600 to 3000 psi is indicated on the accumulator pressure gage). The air in the accumulator absorbs the initial shock of the auxiliary pump output and permits the system pressure to rise gradually. The accumulator also serves to cushion the piping and system components against high impact loads.

#### H. Auxiliary Hydraulic Pump Control

- (1) The auxiliary hydraulic pump control system consists of auxiliary hydraulic pump control switch, an auxiliary hydraulic pump control relay, an auxiliary hydraulic pump power relay, an electric motor, and an auxiliary pump on indicating light.
- (2) The auxiliary hydraulic pump control switch(es), located in the flight compartment, are 3-position switches. They are spring-loaded to the center position and have two momentary positions placarded start (hold only in emergency) and stop.
- (3) On airplanes 812-819, a cargo door control handle manually actuated switch and circuitry are included in the auxiliary hydraulic pump circuit to energize the pump and provide hydraulic power for operation of the cargo door. For operation of cargo door systems and related precautions, see Chapter 52.
- (4) The electric motor for the auxiliary hydraulic pump is an ac, 3-phase motor. A thermostatic switch is included in the circuit to protect the motor from overheating.
- (5) The auxiliary hydraulic pump motor is supplied with power from the cabin bus 4. This permits pump operation from an external power source or from the airplane electrical system.
- (6) The auxiliary pump on indicating light is a blue press-to-test light, located adjacent to the auxiliary hydraulic pump control switch. The light is equipped with a dimming feature.
- (7) When the auxiliary hydraulic pump control switch is momentarily moved to the start position, the circuitry is completed between the auxiliary hydraulic pump control relay and cabin bus 4. The ground is through the stop contact of the switch and the thermostatic switch of the motor. Once the relay is energized, it remains energized through its own holding contacts. Through a closed contact of the pump control relay, power is supplied from cabin bus 4 to energize the hydraulic pump power relay. Through the closed contacts of the pump power relay, a power circuit is completed from the feeder leads of cabin bus 4 to

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

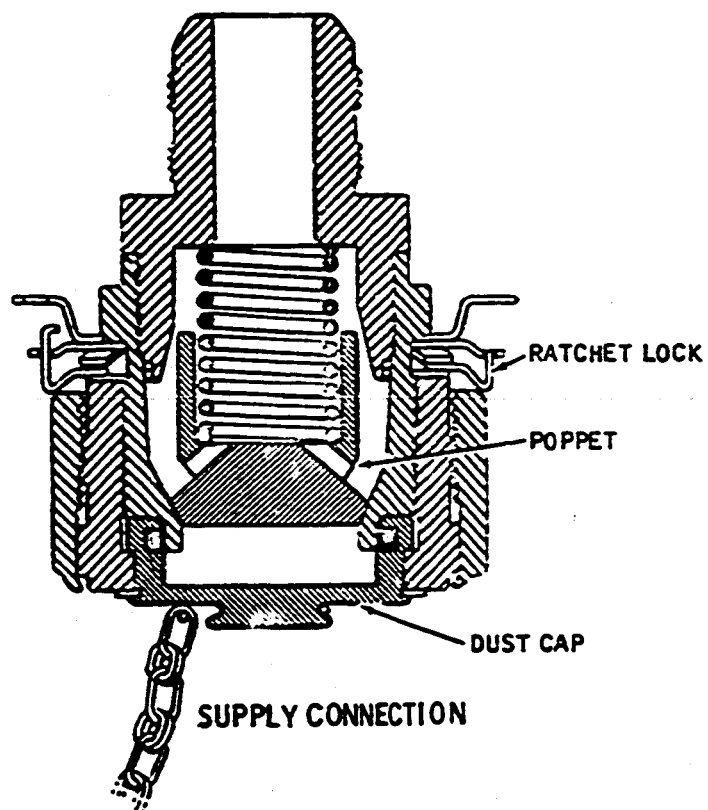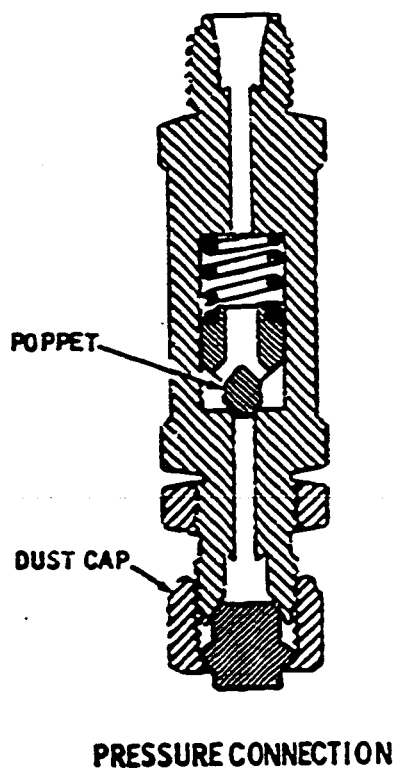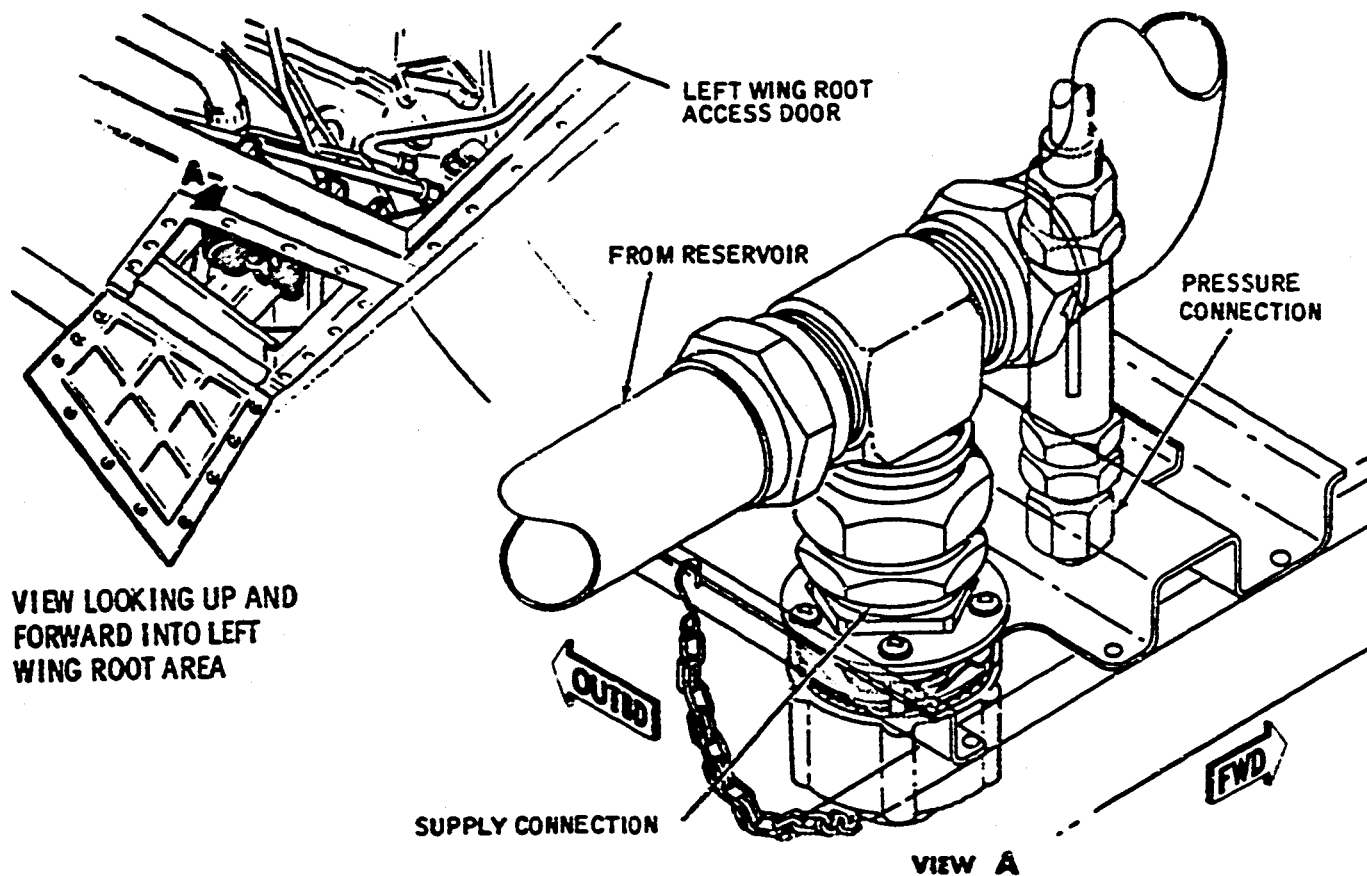

Ground Power Connectors -- Cutaway View  
 Figure 6

Jun 15/67

Printed in U.S.A.

HA2-164

29-20-0  
 CODE 3  
 Page 11

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

the auxiliary hydraulic pump motor. The blue indicating light, located in the flight compartment, receives power through one of the closed contacts of the pump power relay. Therefore, the light is on whenever the pump power relay is energized.

- (8) The auxiliary hydraulic pump motor is safeguarded against overheating by the thermostatic switch. Under normal conditions, this switch is in the ground leg of the control relay. When an overheat condition occurs, the thermostatic switch opens the control relay circuit to limit the motor case to 450°F (252°C). This action deenergizes the control relay, which in turn deenergizes the power relay. In an emergency situation, the thermostatic switch can be overridden by holding the auxiliary hydraulic pump control switch in the start (hold only in emergency) position.
- (9) When the auxiliary hydraulic pump control switch is placed in the momentary stop position, the ground for the control relay is broken, deenergizing the power relay and removing power from the pump motor and the indicating light.

I. Ground Service Pressure and Supply Connectors (See Figure 6.)

- (1) The ground service pressure and supply connectors are external fittings to which a service unit can be connected for operating the hydraulic power system when there is no power on the airplane. The connectors are located on a panel covered by an access door on the lower skin of the left wing root, aft of the rear spar.
- (2) The ground service pressure connector is made up of a check valve with a flared, bulkhead-type fitting on the inlet end and a standard tube fitting on the outlet end which connects to the left engine-driven pump pressure line. The inlet fitting is covered with a dust cap when not in use.
- (3) The internal description of the connector is the same as that of the engine-driven hydraulic pump check valve (see 29-10-0, Description and Operation). The connector operates as a shutoff valve when the ground unit is not connected. When a ground hydraulic power source is connected to the pressure connector and pressure is applied, the poppet unseats and supplies pressure fluid to the hydraulic power system.
- (4) The supply connector is made up of a T-fitting and a selfsealing coupling half. The tee is female-threaded to accept the bulkhead-type fitting on the upper end of the coupling. The cross arms of the tee tie into the right engine-driven pump supply line with flared-type fittings. The tee is threaded onto the coupling half and is secured with a locknut. The coupling consists of a coupling body, male-threaded to accept the coupling half from the ground source. The mounting flange has a recess to accept the hex portion of the coupling body, and has notches to retain the lockspring. A dust cap consisting of a union nut assembly, a dust plug, and a securing chain is installed on the lower end of the coupling when not in use.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY - DESCRIPTION AND OPERATION

1. General

- A. The auxiliary hydraulic system is a supplementary hydraulic power system connected to the main hydraulic power system through the system selector valve. The auxiliary hydraulic system consists of an electrically driven auxiliary hydraulic pump, an auxiliary pump relief valve, a surge damper accumulator, an auxiliary filter and check valve, and the piping required to interconnect the components and connect the auxiliary system to the main power system.
- B. In flight, the auxiliary hydraulic system can be used as supplemental power for the main power system. The auxiliary pump will also serve, when ground support equipment is not available, to pressurize the hydraulic power system for ground testing of the airplane hydraulic subsystems and components. Fluid is supplied to the auxiliary pump from a low standpipe in the hydraulic system reservoir. When the auxiliary pump is operated, fluid from the pressure outlet port of the auxiliary pump is ported, through the auxiliary power system filter and an auxiliary system check valve, to the auxiliary pressure inlet port of the system selector valve. When the system selector valve is in the normal position, auxiliary pump pressure is ported to the general system.
- C. When the auxiliary pump is not operating, the auxiliary system check valve prevents reverse flow through the auxiliary pump from the engine-driven pumps. An auxiliary pump relief valve is teed into the line from the auxiliary pump outlet port to the reservoir filter inlet port. The valve relieves and ports excess fluid pressure back to the reservoir if auxiliary pressure builds above 3300 psi.
- D. The auxiliary pump alternate reservoir is installed in the auxiliary hydraulic system to provide an alternate hydraulic fluid source in case of depletion of the normal supply to the hydraulic system reservoir. The alternate reservoir source is selectable by operation of the auxiliary hydraulic pump supply selector valve which actuates simultaneously with the hydraulic system selector valve.

2. System Components

A. Auxiliary Hydraulic Pump (See Figure 1.)


- (1) The auxiliary hydraulic pump, located in the left wing root access area, supplies hydraulic pressure for the auxiliary hydraulic system. The pump consists of an air cooled electric motor directly coupled through a shaft and centrifugal impeller to a variable displacement hydraulic pump.

Jun 15/67


Printed in U.S.A.

29-20-0  
CODE 4  
Page 1

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

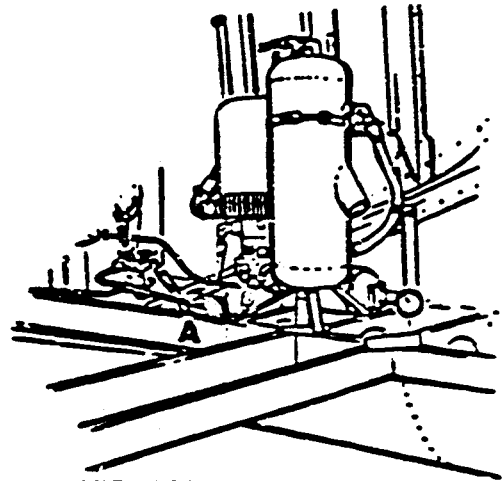

VIEW LOOKING FORWARD AND  
INBOARD AT LEFT WING ROOT AREA

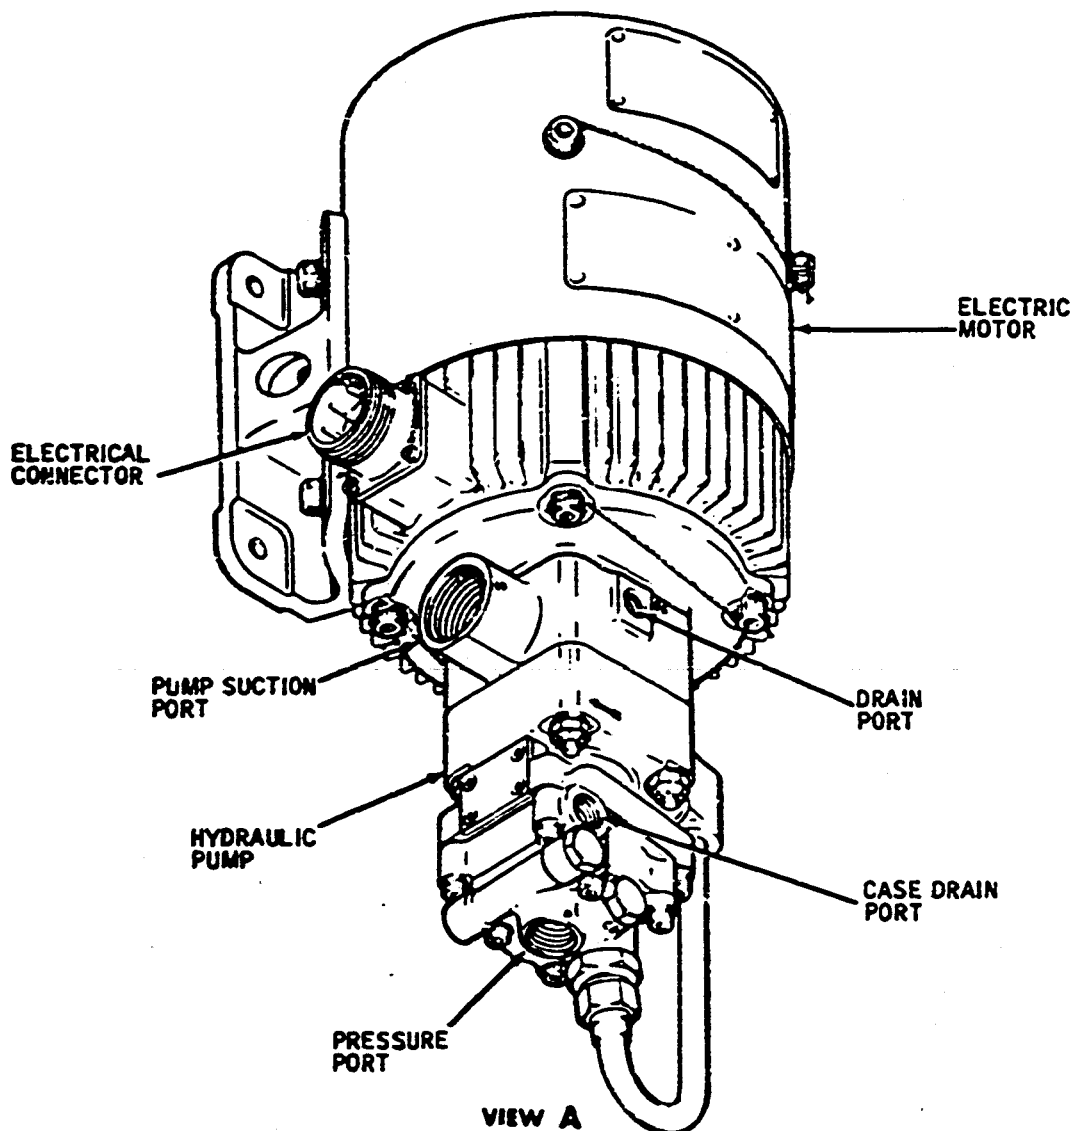

Auxiliary Hydraulic Pump -- Cutaway View  
Figure 1

HA2-3547



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The electric motor is a 115/200-volt, 3-phase, 400-cps, continuous duty motor rated at 6.5 hp at 11,300 rpm. The motor rotor has an internally splined output shaft which fits on the externally splined input shaft of the pump. The other end of the rotor shaft drives a cooling fan which forces cooling air between the motor case and the outer shroud. A thermoswitch located in the motor case is provided to shut off the motor in case of an overheat condition. An override function of the control switch in the flight compartment is provided to override the thermoswitch for emergency operation.
- (3) The centrifugal impeller is located on the drive shaft between the motor and the variable displacement pump. The impeller draws hydraulic fluid from the system and supplies it through an external tube to the inlet port of the variable displacement pump under pressure, thereby helping to prevent cavitation of the pump.
- (4) The variable displacement hydraulic pump consists of the following major parts: a four piece housing, drive shaft with impeller, axial cylinder barrel containing 9 pistons, pivoting hanger with an inclined camface, hold down plate, pressure compensating valve, and bearings.
- (5) When the electric motor is actuated, the drive shaft rotates the centrifugal impeller and the cylinder and piston group. Each revolution of the cylinder causes one complete stroke of each piston. The pistons are held against the camface of the hanger by the hold down plate, providing positive piston return. The displacement of fluid from the pump discharge port is controlled by the compensator valve. The pump provides full flow of 3.9 gpm at system pressures up to approximately 2700 psi. At this point, the compensator valve reduces flow until at approximately 3000 psi, displacement of fluid is reduced to zero.

**B. Auxiliary Hydraulic Pump Alternate Reservoir**

- (1) The auxiliary hydraulic pump alternate reservoir is installed on the shear web in the left wing root area, immediately aft of the auxiliary hydraulic pump. Access to the reservoir is through the left wing root access door. The alternate reservoir supplies hydraulic fluid to the auxiliary hydraulic pump in the event the fluid supply from the main hydraulic system reservoir is exhausted.
- (2) The reservoir is cylindrical in shape and has a fluid capacity of approximately 1.9 US gallons (1.6 Imperial gallons or 7.3 liters). There are four ports on the reservoir: an outlet port to the auxiliary hydraulic pump selector valve located at the bottom, an inlet port from the auxiliary hydraulic pump case drain located near the top on the side, an inlet from the wing flap return line, and an outlet to the main hydraulic reservoir located at the top. A sight gage is installed near the top of the reservoir for visual indication of fluid level, and a mounting boss for the emergency hydraulic level indicating light switch is installed on the side of the reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The reservoir is kept full during operation by routing fluid from the wing flap return line to the reservoir. Fluid in excess of the alternate reservoir capacity is then routed to the main hydraulic system reservoir. Hydraulic fluid from the auxiliary pump case drain is routed to the alternate reservoir and then to the main reservoir. Fluid is used from the alternate reservoir only when the auxiliary pump is operating and the auxiliary pump supply selector valve is in the alternate position. Fluid supply to the alternate reservoir is replenished whenever the wing flaps are operated.


C. Auxiliary Hydraulic Pump Supply Selector Valve (See Figure 2.)

- (1) The auxiliary hydraulic pump supply valve is a 2-position valve that ports hydraulic fluid from either reservoir, through a common outlet, to the auxiliary pump. The selector valve is located on the shear web in the left wing root, near the auxiliary pump. The selector valve is accessible through the left wing root access door.
- (2) The valve body has two inlet ports and one outlet port. The outlet port is centrally located on the aft side of the valve body. The two inlet ports are located on the outboard side of the valve body, 90 degrees from the outlet port. Two mounting flanges are located on the inboard side of the valve body. These flanges are an integral part of the valve body.
- (3) During normal operation, fluid is taken from a low standpipe in the main hydraulic system reservoir and ported to the auxiliary pump. When the valve is in the alternate position, fluid is taken from the auxiliary hydraulic pump alternate reservoir and ported to the auxiliary pump. The valve is moved from the auxiliary position to the alternate position by placing the hydraulic system selector control lever, located on the system engineer's control pedestal, to the general system/flaps only position.


D. Auxiliary Hydraulic Pump Relief Valve (See Figure 3.)

- (1) The auxiliary hydraulic pump relief valve is a spring loaded poppet-type valve and serves to relieve excess fluid pressure that may build up in the auxiliary hydraulic system. The relief valve connects, through a reducer, to a tee in the A return port of the hydraulic system reservoir. The valve is accessible through the left wing root access door.
- (2) Externally, the valve body is cylindrical, approximately 5 inches in length, and 1 inch in diameter. The outlet end of the valve is slightly larger than the inlet end.
- (3) When pressure builds up, the poppet starts to relieve at approximately 3300 psi. If pressure continues to build up, the poppet continues to open until 3500 psi and a maximum flow of 3.5 gpm are reached. When pressure is relieved, the poppet reseats at 90 percent of the unseat pressure.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

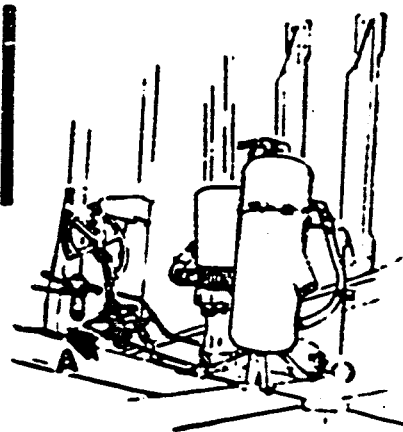

VIEW LOOKING INTO LEFT  
WING ROOT AREA

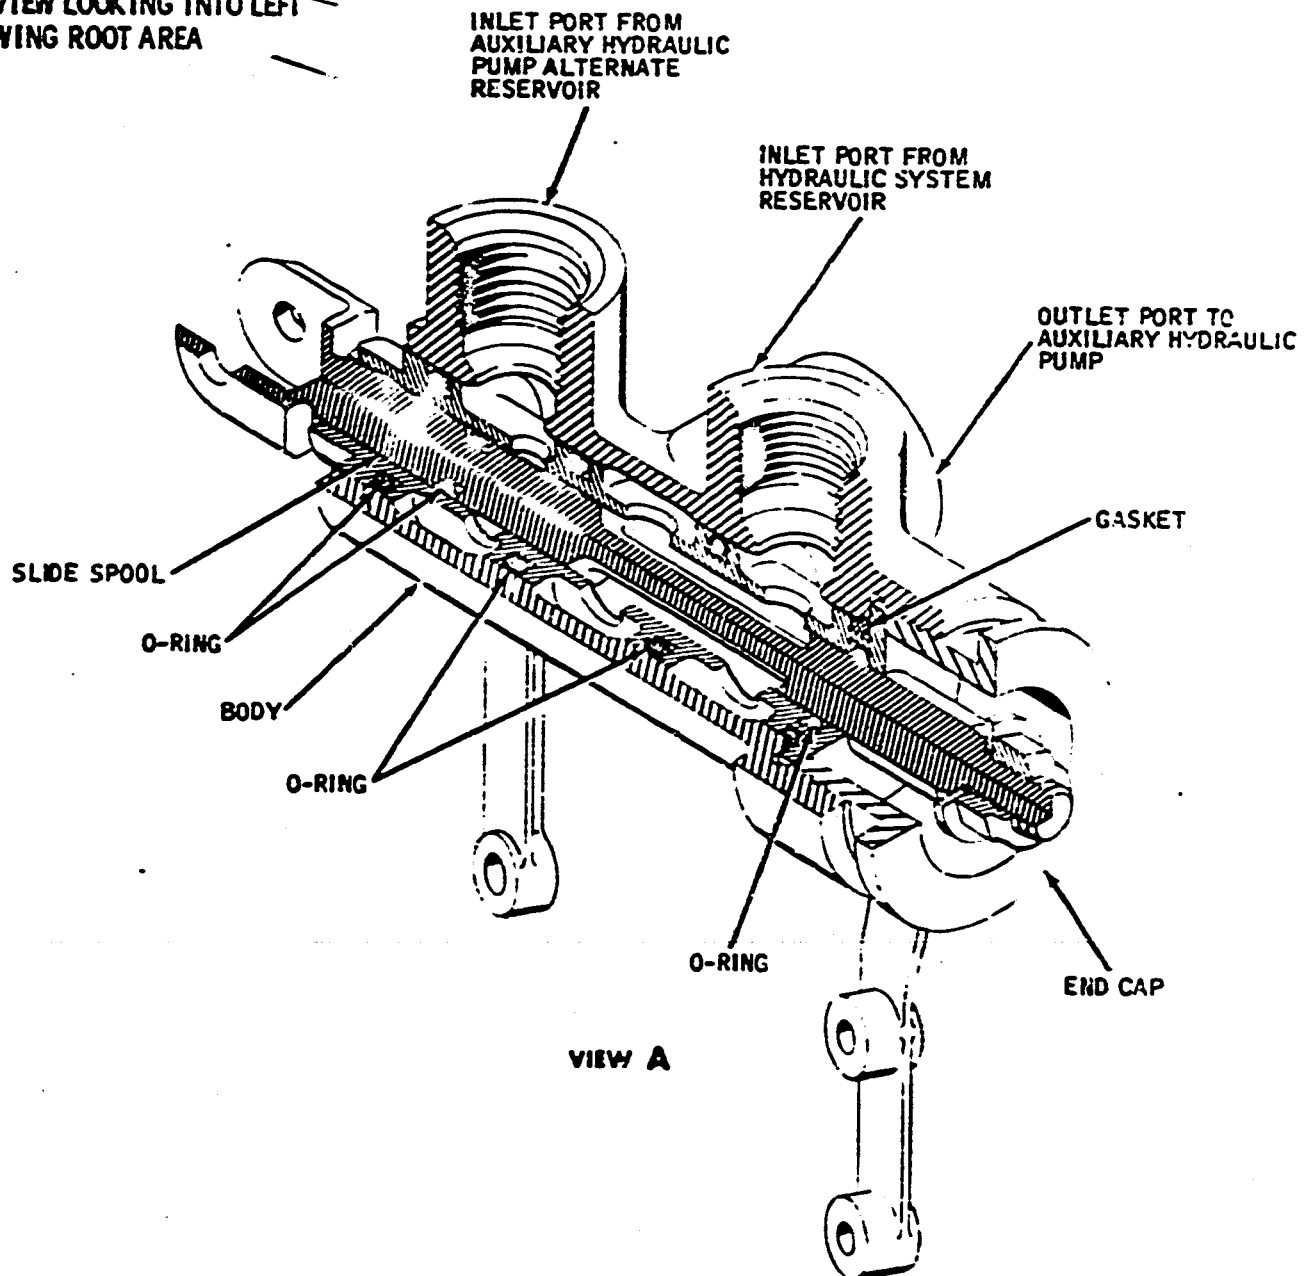

Auxiliary Hydraulic Pump Supply Selector  
 Valve -- Cutaway View  
 Figure 2



HA2-160A

Jun 15/67

Printed in U.S.A.

29-20-0  
 CODE 4  
 Page 5

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

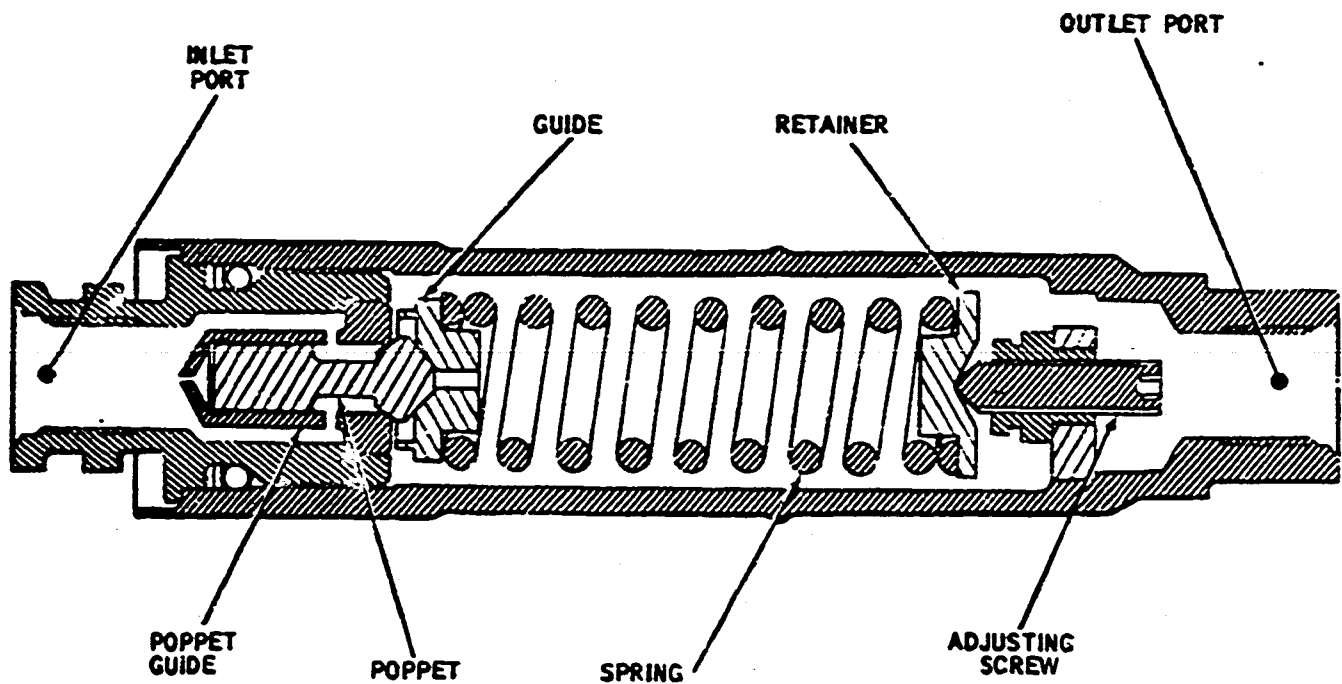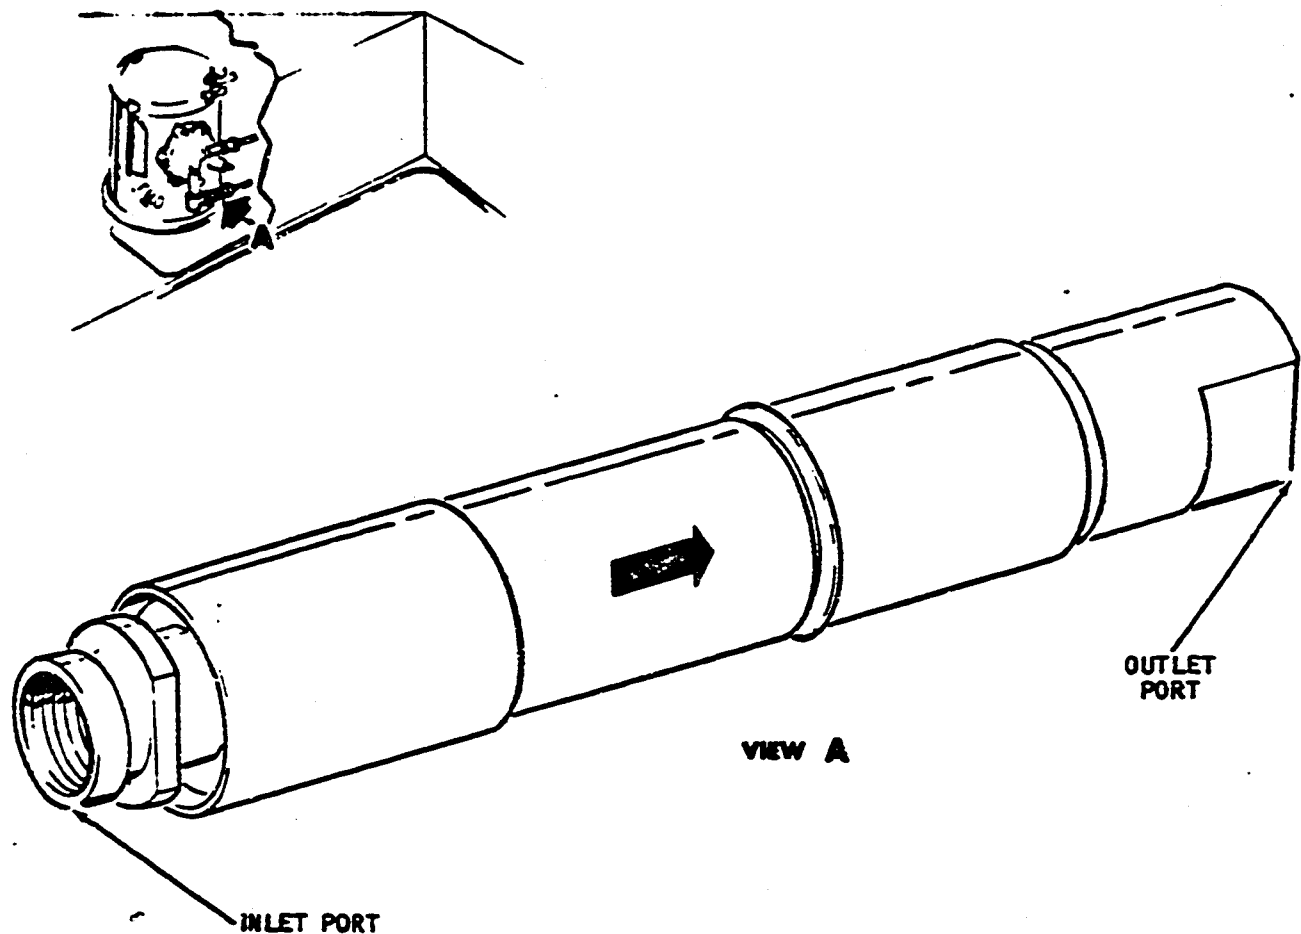

HA2-161

Auxiliary Hydraulic Pump Relief Valve -- Cutaway View  
 Figure 3

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

E. Auxiliary Hydraulic System Filter (See Figure 4.)

- (1) A line-type, 10 micron filter assembly is installed in the piping of the auxiliary system to filter fluid from the pressure outlet port of the auxiliary pump to the system selector valve. The filter is located on the bulkhead near the forward inboard corner of the left main gear wheel well, slightly inboard and above the dual filter and relief valve. It is accessible through the left main gear inboard door.
- (2) The inlet and outlet ports of the filter are internally threaded and are marked in and out. The filter bowl is cylindrical in shape, with wrench flats at the lower end, and is threaded into the assembly immediately below the ports. A hex-shaped magnetic plug is installed in the drain port. The filter element is stainless steel mesh, supported by a perforated cylindrical center core.



F. Auxiliary Hydraulic System Check Valve

- (1) The auxiliary hydraulic system check valve is a spring-loaded, poppet-type valve with a rated capacity of 3000 psi. This valve is installed in the line between the auxiliary hydraulic system filter and the system selector valve to prevent reverse flow of hydraulic fluid through the filter and the auxiliary pump when the engine-driven pumps or external pressure supply are used.
- (2) The auxiliary hydraulic system check valve is located in the left wheel well, just above the dual filter and relief valve. The auxiliary hydraulic system check valve is accessible through the left wheel well.
- (3) Externally and internally, this valve is similar to the engine-driven hydraulic pump check valve, except for size.

G. Auxiliary Hydraulic System Surge Damper Accumulator (See Figure 5.)

- (1) The auxiliary hydraulic system surge damper accumulator consists of two spherical domes, separated by a diaphragm and held together by a ring nut. An air filler valve and gage are installed on the accumulator. The accumulator is installed in the auxiliary hydraulic pump pressure line just inboard and aft of the auxiliary pump, and is attached to the shear web by two clamp blocks. Access to the accumulator is through the left wing root access door.
- (2) The accumulator is initially charged to 1000 psi with dry nitrogen. As the auxiliary system pressure builds up, fluid is forced against the diaphragm in the accumulator, further compressing the trapped nitrogen in the air side of the accumulator to full system pressure (2600 to 3000 psi is indicated on the accumulator pressure gage). The air in the accumulator absorbs the initial shock of the auxiliary pump output and permits the system pressure to rise gradually. The accumulator also serves to cushion the piping and system components against high impact loads.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

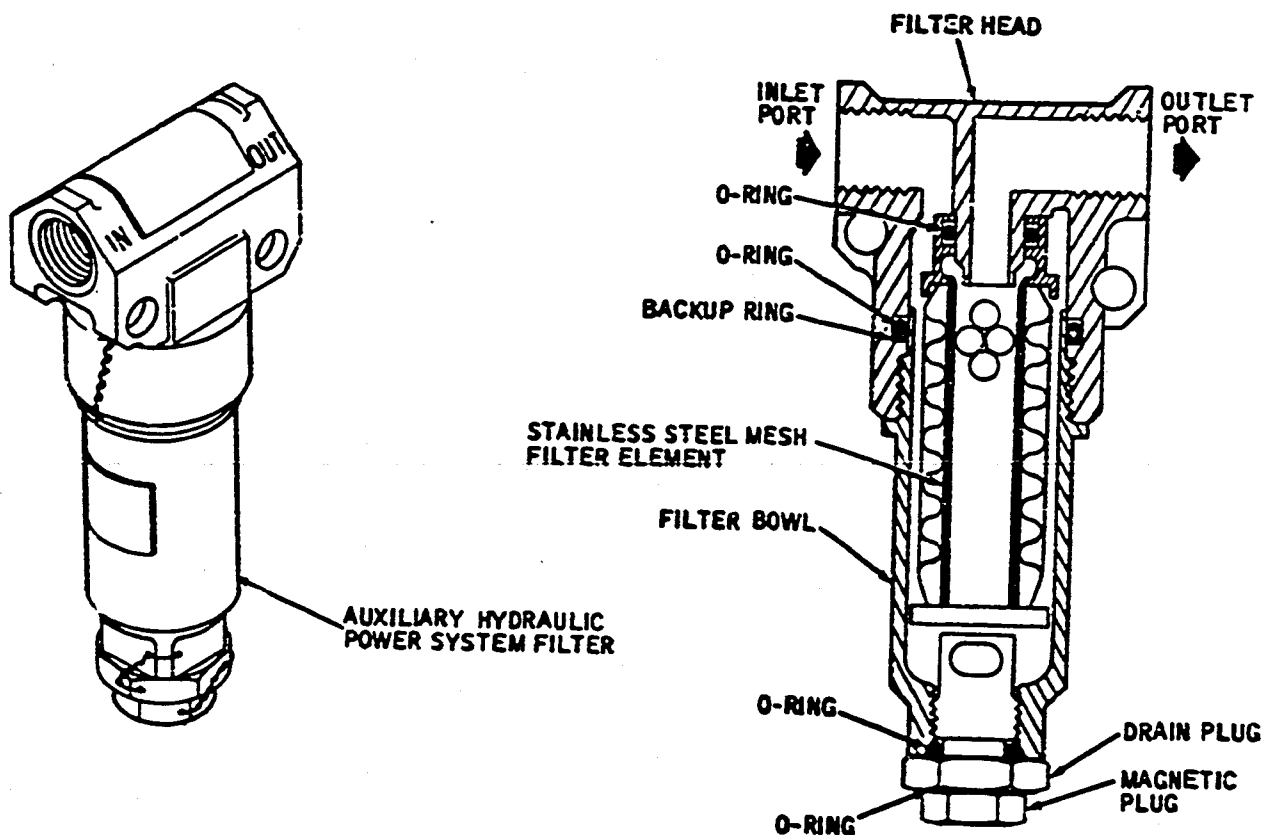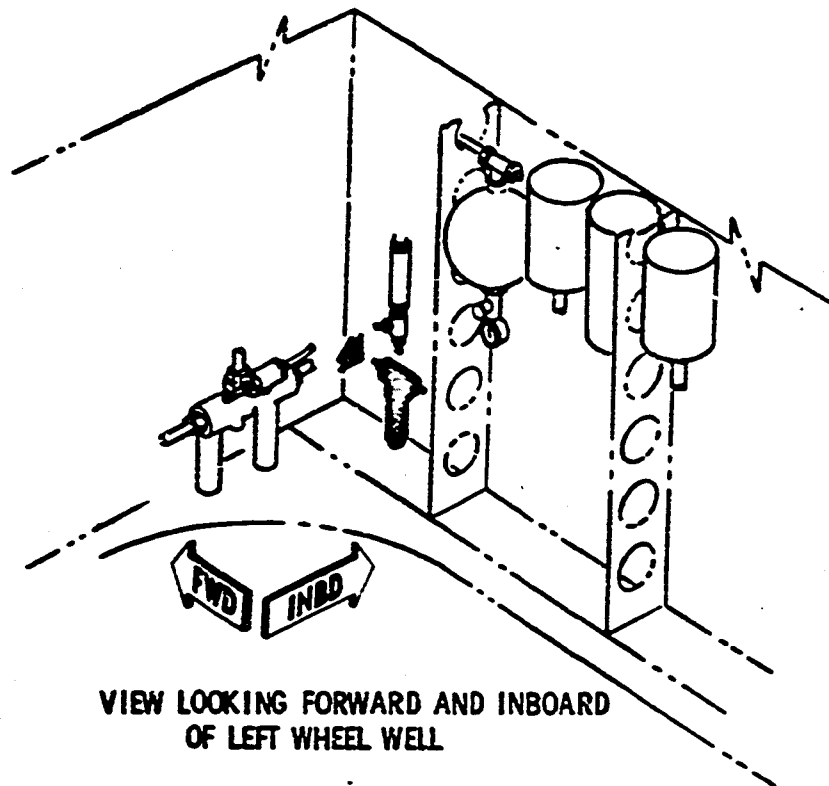

Auxiliary Hydraulic System Filter -- Cutaway View  
 Figure 4

HA2-162

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

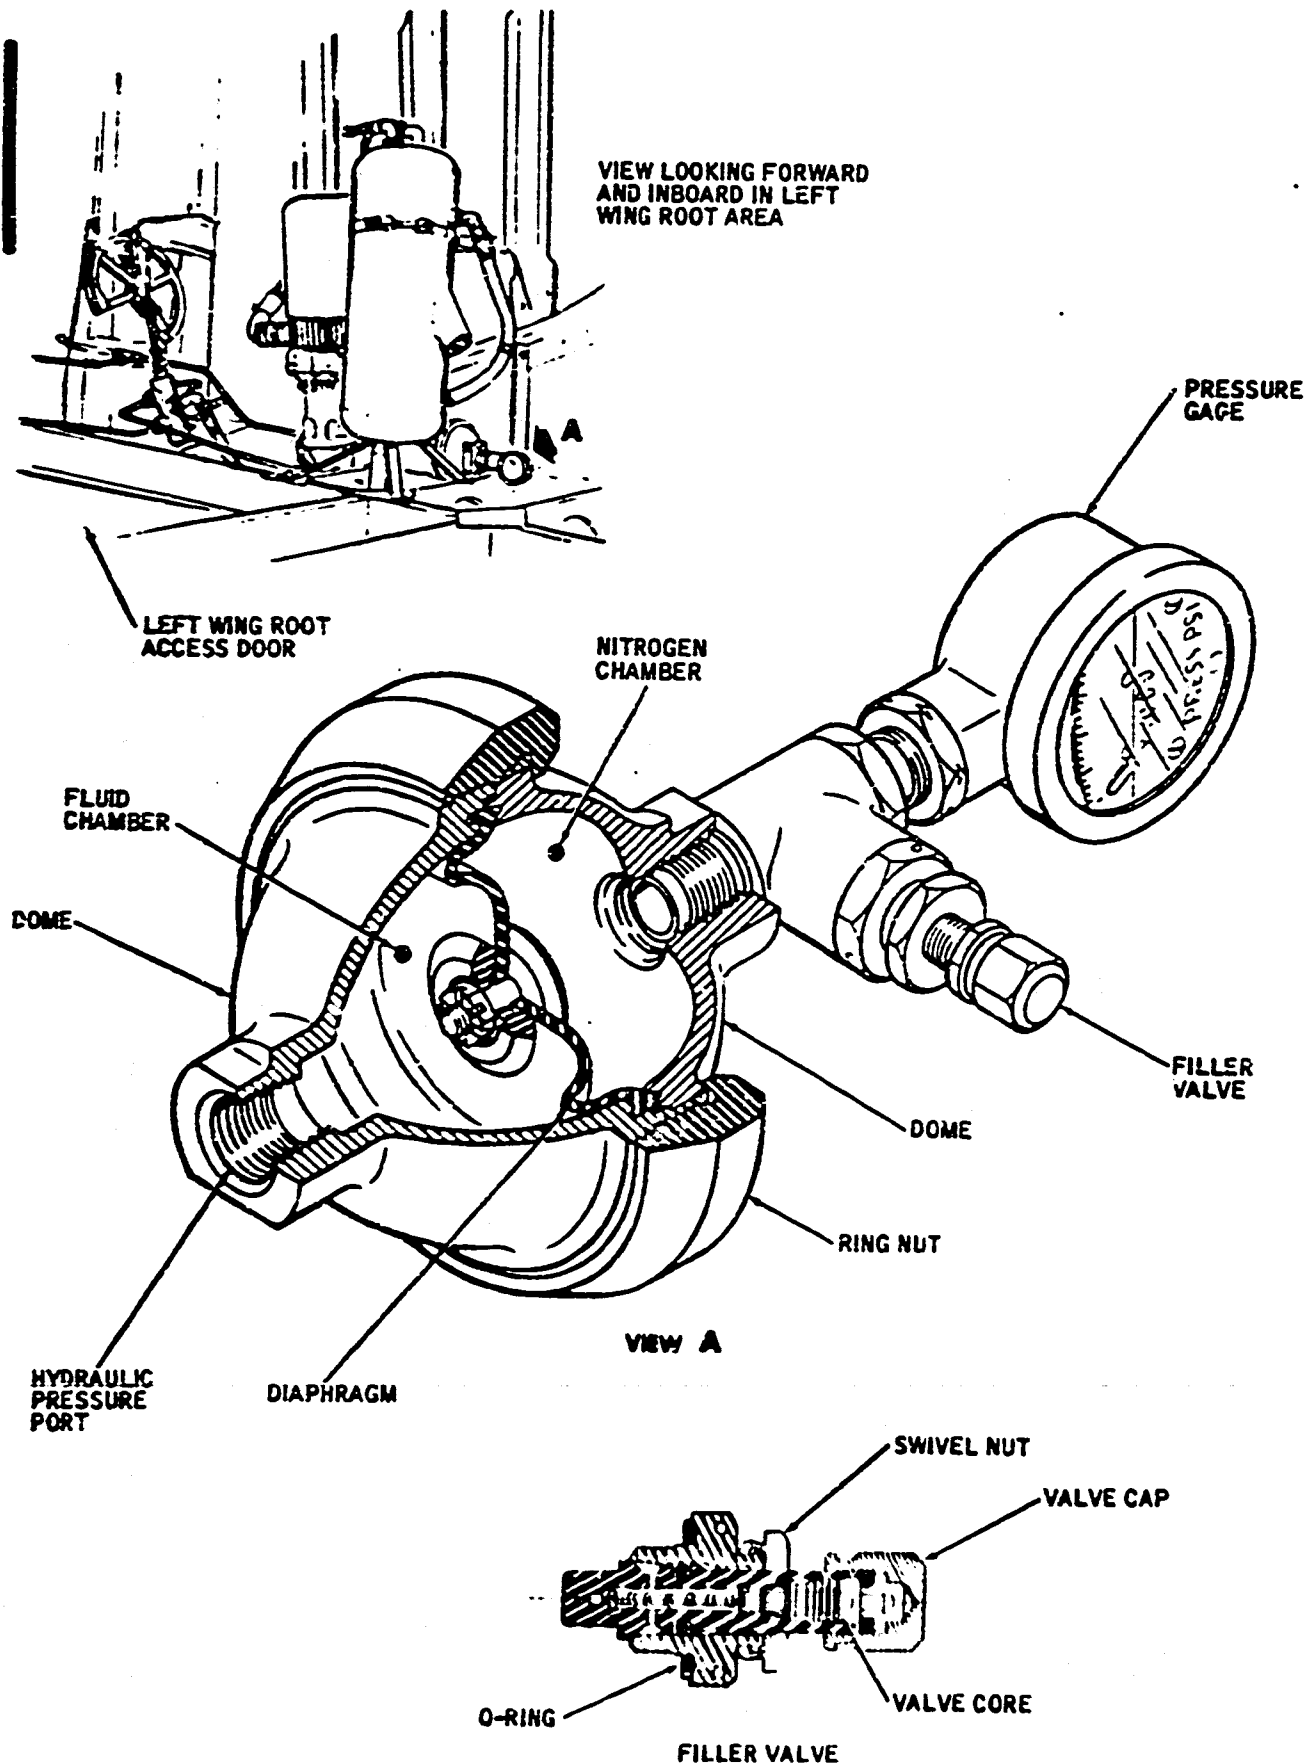

Auxiliary Hydraulic Power System Surge Damper  
 Accumulator -- Cutaway View  
 Figure 5

HA2-163A

29-20-0  
 CODE 4  
 Page 9

Jun 15/67

Printed in U.S.A.




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

H. Auxiliary Hydraulic Pump Control

- (1) The auxiliary hydraulic pump control system consists of auxiliary hydraulic pump control switch, an auxiliary hydraulic pump control relay, an auxiliary hydraulic pump power relay, an electric motor, and an auxiliary pump on indicating light.
- (2) The auxiliary hydraulic pump control switch(es), located in the flight compartment, are 3-position switches. They are spring-loaded to the center position and have two momentary positions placarded start (hold only in emergency) and stop.
- (3) The electric motor for the auxiliary hydraulic pump is an ac, 3-phase motor. A thermostatic switch is included in the circuit to protect the motor from overheating.
- (4) The auxiliary hydraulic pump motor is supplied with power from the cabin bus 4. This permits pump operation from an external power source or from the airplane electrical system.
- (5) The auxiliary pump on indicating light is a blue press-to-test light, located adjacent to the auxiliary hydraulic pump control switch. The light is equipped with a dimming feature.
- (6) When the auxiliary hydraulic pump control switch is momentarily moved to the start position, the circuitry is completed between the auxiliary hydraulic pump control relay and cabin bus 4. The ground is through the stop contact of the switch and the thermostatic switch of the motor. Once the relay is energized, it remains energized through its own holding contacts. Through a closed contact of the pump control relay, power is supplied from cabin bus 4 to energize the hydraulic pump power relay. Through the closed contacts of the pump power relay, a power circuit is completed from the feeder leads of cabin bus 4 to the auxiliary hydraulic pump motor. The blue indicating light, located in the flight compartment, receives power through one of the closed contacts of the pump power relay. Therefore, the light is on whenever the pump power relay is energized.
- (7) The auxiliary hydraulic pump motor is safeguarded against overheating by the thermostatic switch. Under normal conditions, this switch is in the ground leg of the control relay. When an overheat condition occurs, the thermostatic switch opens the control relay circuit to limit the motor case to 450°F (252°C). This action deenergizes the control relay, which in turn deenergizes the power relay. In an emergency situation, the thermostatic switch can be overridden by holding the auxiliary hydraulic pump control switch in the start (hold only in emergency) position.
- (8) When the auxiliary hydraulic pump control switch is placed in the momentary stop position, the ground for the control relay is broken, deenergizing the power relay and removing power from the pump motor and the indicating light.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

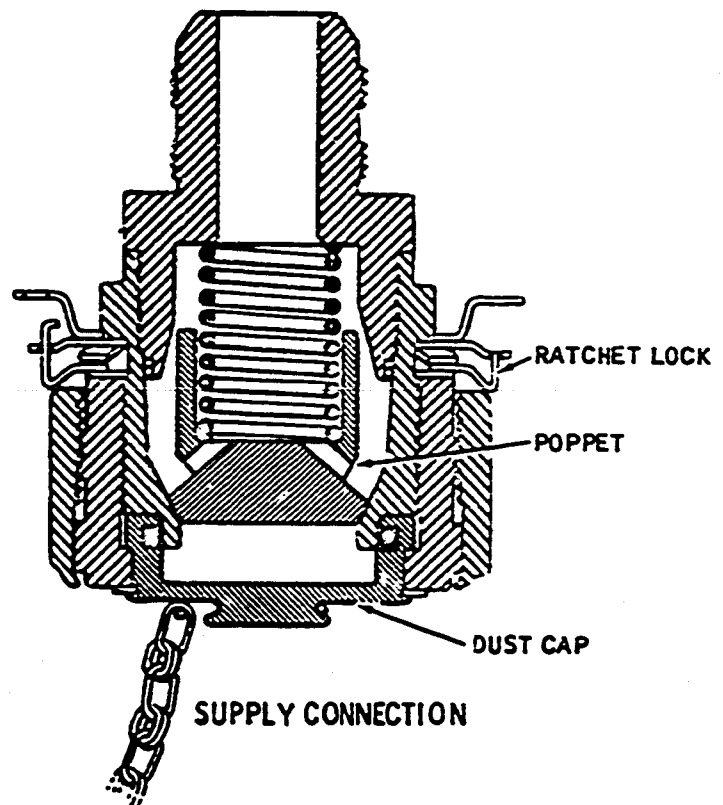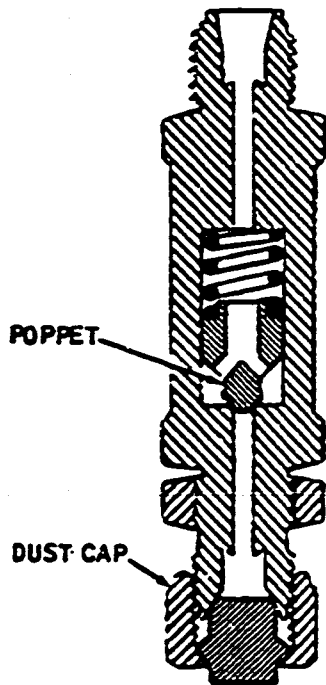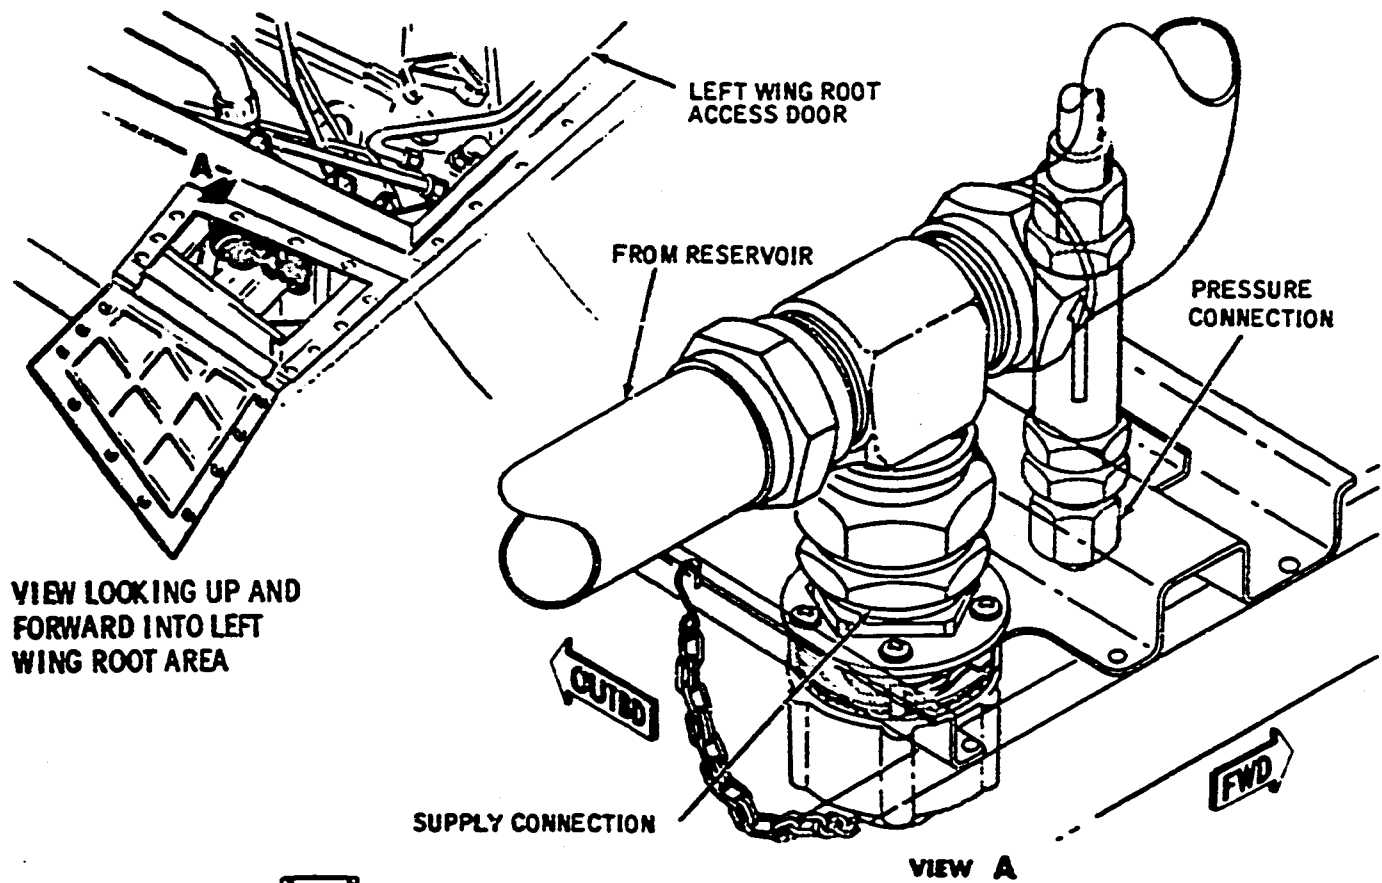

Ground Power Connectors -- Cutaway View  
 Figure 6

Jun 15/67

Printed in U.S.A.

HA2-164

29-20-0  
 CODE 4  
 Page 11

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

I. Ground Service Pressure and Supply Connectors (See Figure 6.)

- (1) The ground service pressure and supply connectors are external fittings to which a service unit can be connected for operating the hydraulic power system when there is no power on the airplane. The connectors are located on a panel covered by an access door on the lower skin of the left wing root, aft of the rear spar.
- (2) The ground service pressure connector is made up of a check valve with a flared, bulkhead-type fitting on the inlet end and a standard tube fitting on the outlet end which connects to the left engine-driven pump pressure line. The inlet fitting is covered with a dust cap when not in use.
- (3) The internal description of the connector is the same as that of the engine-driven hydraulic pump check valve (see 29-10-0, Description and Operation). The connector operates as a shutoff valve when the ground unit is not connected. When a ground hydraulic power source is connected to the pressure connector and pressure is applied, the poppet unseats and supplies pressure fluid to the hydraulic power system.
- (4) The supply connector is made up of a T-fitting and a self-sealing coupling half. The tee is female-threaded to accept the bulkhead-type fitting on the upper end of the coupling. The cross arms of the tee tie into the right engine-driven pump supply line with flared-type fittings. The tee is threaded onto the coupling half and is secured with a lock-nut. The coupling consists of a coupling body, male-threaded to accept the coupling half from the ground source. The mounting flange has a recess to accept the hex portion of the coupling body, and has notches to retain the lockspring. A dust cap consisting of a union nut assembly, a dust plug, and a securing chain is installed on the lower end of the coupling when not in use.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY - DESCRIPTION AND OPERATION

1. General


- A. The auxiliary hydraulic system is a supplementary hydraulic power system connected to the main hydraulic power system through the system selector valve and the auxiliary pump supply selector valve. The auxiliary hydraulic system consists of an electrically driven auxiliary hydraulic pump, an auxiliary pump relief valve, a surge damper accumulator, and auxiliary filter and check valve, and the piping required to interconnect the components and connect the auxiliary system to the main power system.
- B. In flight, the auxiliary hydraulic system can be used as supplemental power for the main power system. The auxiliary pump will also serve, when ground support equipment is not available, to pressurize the hydraulic power system for ground testing of the airplane hydraulic subsystems and components. Fluid is supplied to the auxiliary pump from a low standpipe in the hydraulic system reservoir. When the auxiliary pump is operated, fluid from the pressure outlet port of the auxiliary pump is ported, through the auxiliary power system filter and an auxiliary system check valve, to the auxiliary pressure inlet port of the system selector valve. When the system selector valve is in the normal position, auxiliary pump pressure is ported to the general system.
- C. When the auxiliary pump is not operating, the auxiliary system check valve prevents reverse flow through the auxiliary pump from the engine-driven pumps. An auxiliary pump relief valve is teed into the line from the auxiliary pump outlet port to the reservoir filter inlet port. The valve relieves and ports excess fluid pressure back to the reservoir if auxiliary pressure builds above 3300 psi.
- D. The auxiliary pump alternate reservoir is installed in the auxiliary hydraulic system to provide an alternate hydraulic fluid source in case of depletion of the normal supply to the hydraulic system reservoir. The alternate reservoir source is selectable by operation of the auxiliary hydraulic pump supply selector valve which actuates simultaneously with the hydraulic system selector valve.

2. System Components

4. Auxiliary Hydraulic Pump (See Figure 1.)



- (1) The auxiliary hydraulic pump (Airplanes N8762-N8778) is an electrically driven, continuous-duty pressure-compensated, variable-displacement pump. An automatic pressure-sensing mechanism (compensator) within the pump regulates the amount of fluid delivered to the airplane hydraulic system. The quantity of delivery is dependent on the system pressure. Flow is reduced to zero when desired system pressure is achieved.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

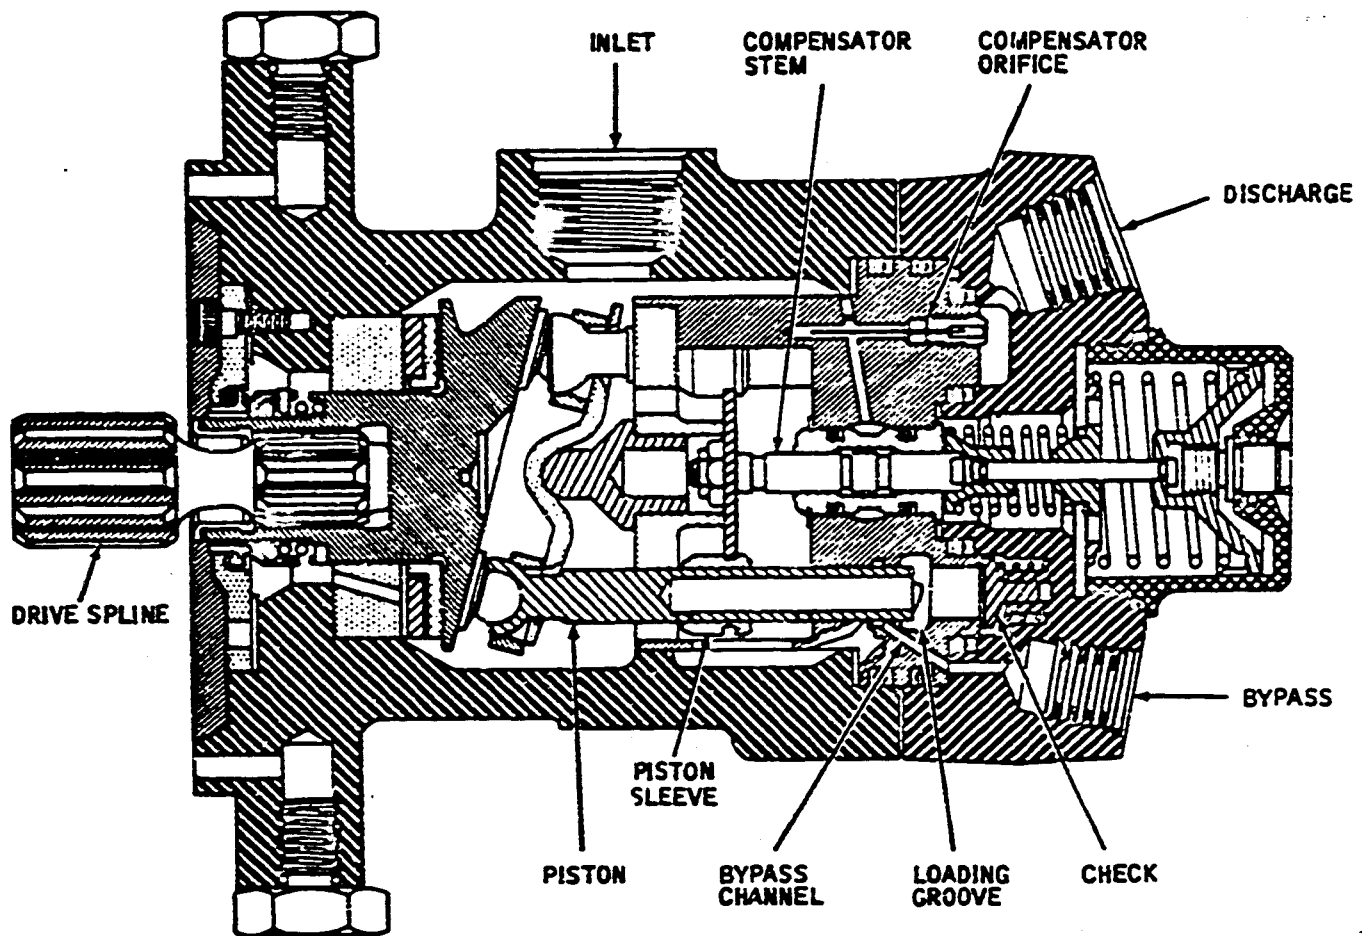

FLOW

NON-FLOW

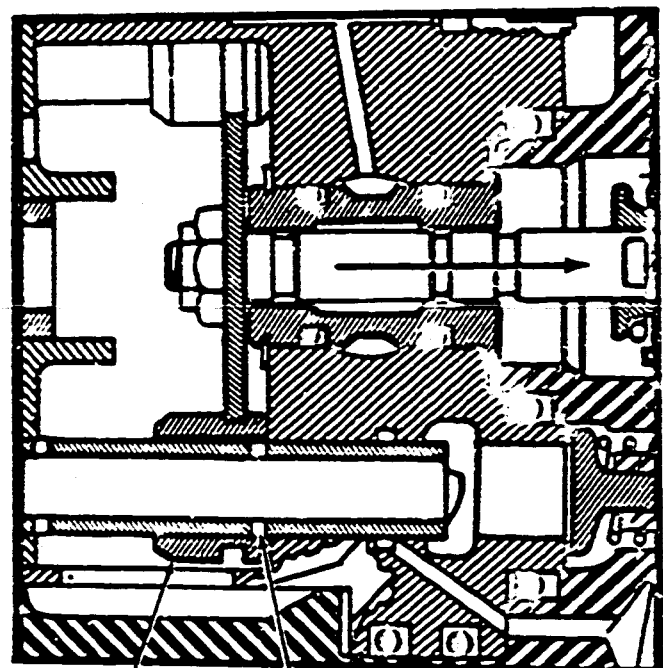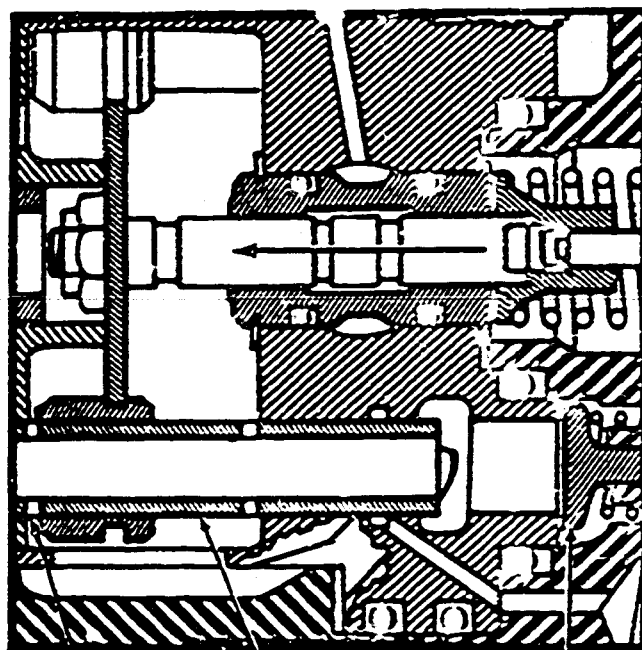

RELIEF HOLES

CHECK


SLEEVE

BYPASS HOLES


HA2-159

Auxiliary Hydraulic Pump -- Cutaway View  
 (Airplanes N8762-N8778)  
 Figure 1 (Sheet 1)

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

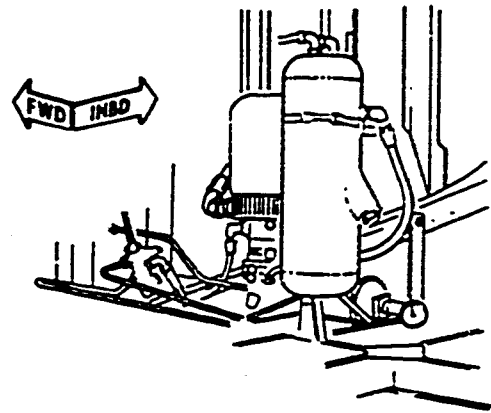

VIEW LOOKING FORWARD AND  
INBOARD AT LEFT WING ROOT AREA

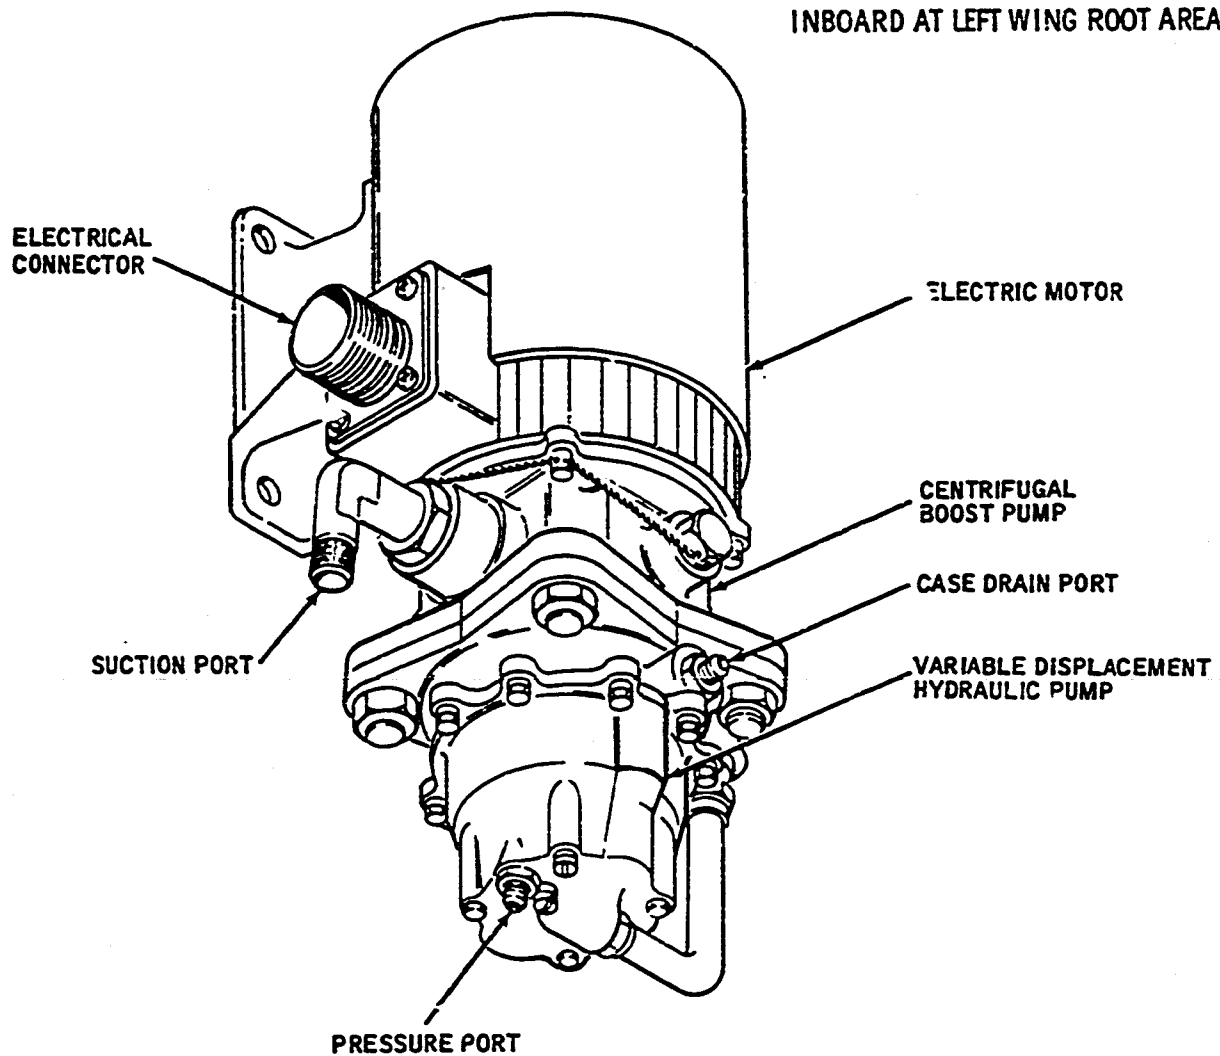

HA2-5780

Auxiliary Hydraulic Pump  
(Airplanes N8755-N8760)  
Figure 1 (Sheet 2)

29-20-0  
CODE 5  
Page 2A

Aug 1/69

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The internal components of the pump perform three major functions; mechanical drive (motor), fluid displacement (pistons), and pressure control (compensator). Mechanical drive is supplied by a 200-vac, 3-phase, 400-cycle electric motor.
- (3) As the hydraulic fluid from the reservoir enters the inlet port, the fluid is displaced by axial piston motion. As a piston advances in a cylinder bore, it forces a quantity of fluid past the pump check at the end of the bore. When the piston bypass holes become aligned hydraulically with cylinder block passage, pressurized fluid also escapes to bypass; then a combination of spring pressure and system back pressure closes the pump checks. In the withdrawal portion of the piston stroke, a partial vacuum is created in the cylinder bore, allowing new fluid from the intake to flow into the bore from the pressurized reservoir. The quantity of fluid delivered by each piston stroke is controlled by relief holes, in the pistons and piston sleeves.
- (4) Unless the relief holes are covered by the piston sleeves, no fluid is forced past the pump checks. Quantity of delivery is therefore determined by the position of the piston sleeves, which in turn is determined by system pressure bled through the compensator orifices. Because one sleeve is slightly longer than the others, the pump, even when in full cutoff, continues to pump enough fluid to make up for any minor drop in the system pressure due to leakage.
- (5) Pressure control: System pressure, acting through the compensator orifice on the compensator stem, controls the piston sleeve position and, therefore, determines whether the pump delivers at full capacity, partial capacity, or cuts off entirely. Path of fluid flow through the pump remains the same in all three conditions. When the pressure at the outlet port reaches 2700 psi, pressure in the compensator commences to reduce the output until 3000 psi is reached, at which time fluid flow is zero. The bypass system is provided to supply self-lubrication, particularly when the pump is in non-delivery (cutoff) operation. The ring of bypass holes in the pistons is hydraulically aligned with the bypass passage each time a piston reached the very end of its forward travel period. This pumps a small quantity of fluid out the bypass passage back to the supply reservoir and provides a constant changing of the fluid in the pump. The bypass is designed to pump against a considerable back pressure for use with pressurized hydraulic reservoirs.
- (6) On airplanes N8755-N8760 the auxiliary hydraulic pump, located in the left wing root access area, supplies hydraulic pressure for the auxiliary hydraulic system. The pump consists of an air cooled electric motor directly coupled through a shaft and centrifugal boost pump impeller to a variable displacement hydraulic pump.
- (7) The electric motor is a 115/200-volt, 3-phase, 400-cps, continuous duty motor. The motor rotor has an internally splined output shaft which fits on the externally splined input shaft of the pump. The other end of the rotor shaft drives a cooling fan which forces cooling air between the motor case and the outer shroud. A thermoswitch located in the motor case is provided to shut off the motor in case of an overheat

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

condition. An override function of the control switch in the flight compartment is provided to override the thermoswitch for emergency operation.

- (8) The centrifugal boost pump impeller is located on the drive shaft between the motor and the variable displacement pump. The impeller draws hydraulic fluid from the system and supplies it through an external tube to the inlet port of the variable displacement pump under pressure, thereby helping to prevent cavitation of the pump.
- (9) The variable displacement hydraulic pump consists of the following major parts: a four piece housing, drive shaft with impeller, axial cylinder barrel containing 9 pistons, pivoting hanger with an inclined camface, hold down plate, pressure compensating valve, and bearings.
- (10) When the electric motor is actuated, the drive shaft rotates the boost pump impeller and the cylinder and piston group. Each revolution of the cylinder causes one complete stroke of each piston. The pistons are held against the camface of the hanger by the hold down plate, providing positive piston return. The displacement of fluid from the pump discharge port is controlled by the compensator valve. The pump provides full flow of 3.7 gpm at system pressures up to approximately 2700 psi. At this point, the compensator valve reduces flow until at approximately 3000 psi, displacement of fluid is reduced to zero.

**B. Auxiliary Hydraulic Pump Alternate Reservoir**

- (1) The auxiliary hydraulic pump alternate reservoir is installed on the shear web in the left wing root area, immediately aft of the auxiliary hydraulic pump. Access to the reservoir is through the left wing root access door. The alternate reservoir supplies hydraulic fluid to the auxiliary hydraulic pump in the event the fluid supply from the main hydraulic system reservoir is exhausted.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The reservoir is cylindrical in shape and has a fluid capacity of approximately 1.9 US gallons (1.6 Imperial gallons or 7.3 liters). There are four ports on the reservoir: an outlet port to the auxiliary hydraulic pump selector valve located at the bottom, an inlet port from the auxiliary hydraulic pump bypass located near the top on the side, an inlet from the wing flap return line, and an outlet to the main hydraulic reservoir located at the top. A sight gage is installed near the top of the reservoir for visual indication of fluid level, and a mounting boss for the emergency hydraulic level indicating light switch is installed on the side of the reservoir.
- (3) The reservoir is kept full during operation by routing fluid from the wing flap return line to the reservoir. Fluid in excess of the alternate reservoir capacity is then routed to the main hydraulic system reservoir. Hydraulic fluid from the auxiliary pump bypass is routed to the alternate reservoir and then to the main reservoir. Fluid is used from the alternate reservoir only when the auxiliary pump is operating and the auxiliary pump supply selector valve is in the alternate position. Fluid supply to the alternate reservoir is replenished whenever the wing flaps are operated.

C. Auxiliary Hydraulic Pump Supply Selector Valve (See Figure 2.)


- (1) The auxiliary hydraulic pump supply valve is a 2-position valve that ports hydraulic fluid from the reservoir, through a common outlet, to the auxiliary pump. The selector valve is located on the shear web in the left wing root, near the auxiliary pump. The selector valve is accessible through the left wing root access door.
- (2) The valve body has two inlet ports and one outlet port. The outlet port is centrally located on the aft side of the valve body. The two inlet ports are located on the outboard side of the valve body, 90 degrees from the outlet port. Two mounting flanges are located on the inboard side of the valve body. These flanges are an integral part of the valve body.
- (3) During normal operation, fluid is taken from a low standpipe in the main hydraulic system reservoir and ported to the auxiliary pump. When the valve is in the alternate position, fluid is taken from the auxiliary hydraulic pump alternate reservoir and ported to the auxiliary pump. The valve is moved from the auxiliary position to the alternate position by placing the hydraulic system selector control lever, located on the system engineer's control pedestal, to the general system/main gear downlock and flaps position.

D. Auxiliary Hydraulic Pump Relief Valve (See Figure 3.)


- (1) The auxiliary hydraulic pump relief valve is a spring loaded poppet-type valve and serves to relieve excess fluid pressure that may build up in the auxiliary hydraulic system. The relief valve connects, through a reducer, to a tee in the A return port of the hydraulic system reservoir. The valve is accessible through the left wing root access door.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

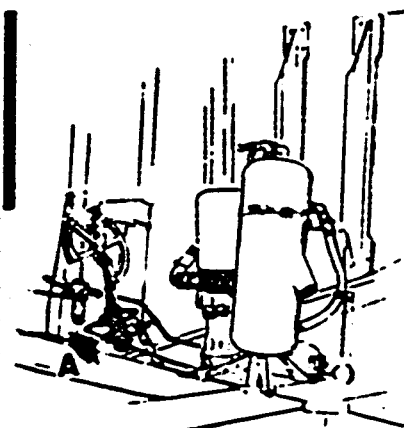

VIEW LOOKING INTO LEFT  
 WING ROOT AREA

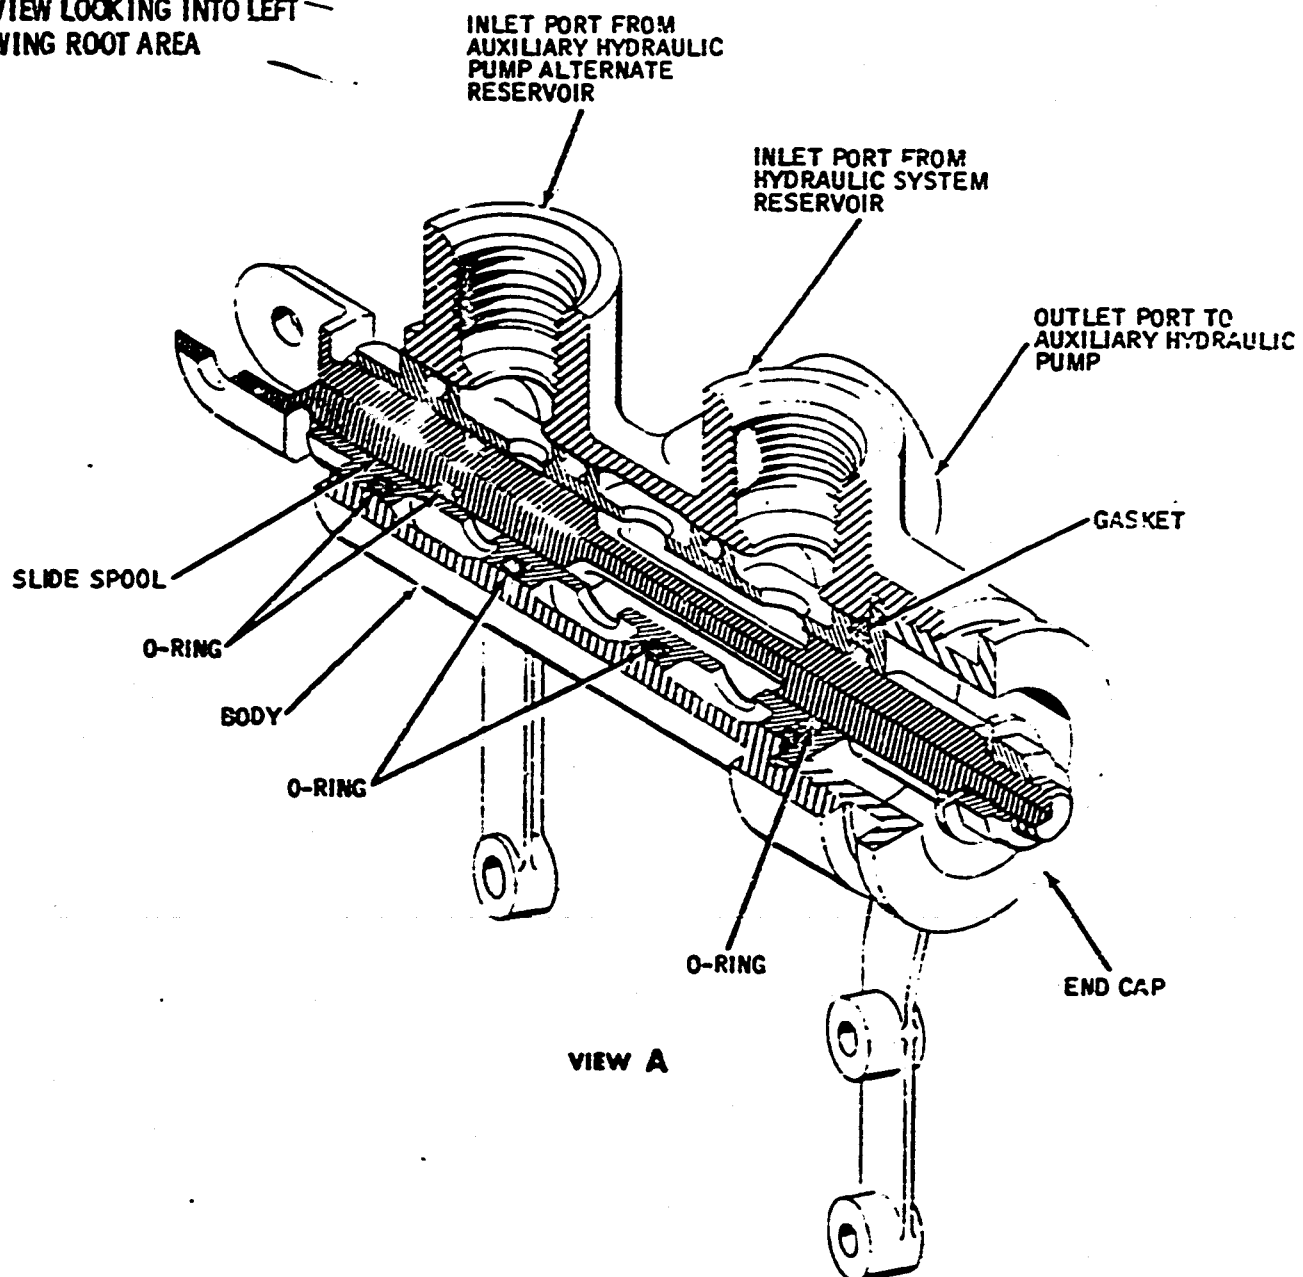

VIEW A

Auxiliary Hydraulic Pump Supply Selector  
 Valve -- Cutaway View  
 Figure 2


Jan 15/68

Printed in U.S.A.

HA2-160A

29-20-0  
 CODE 5  
 Page 5

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

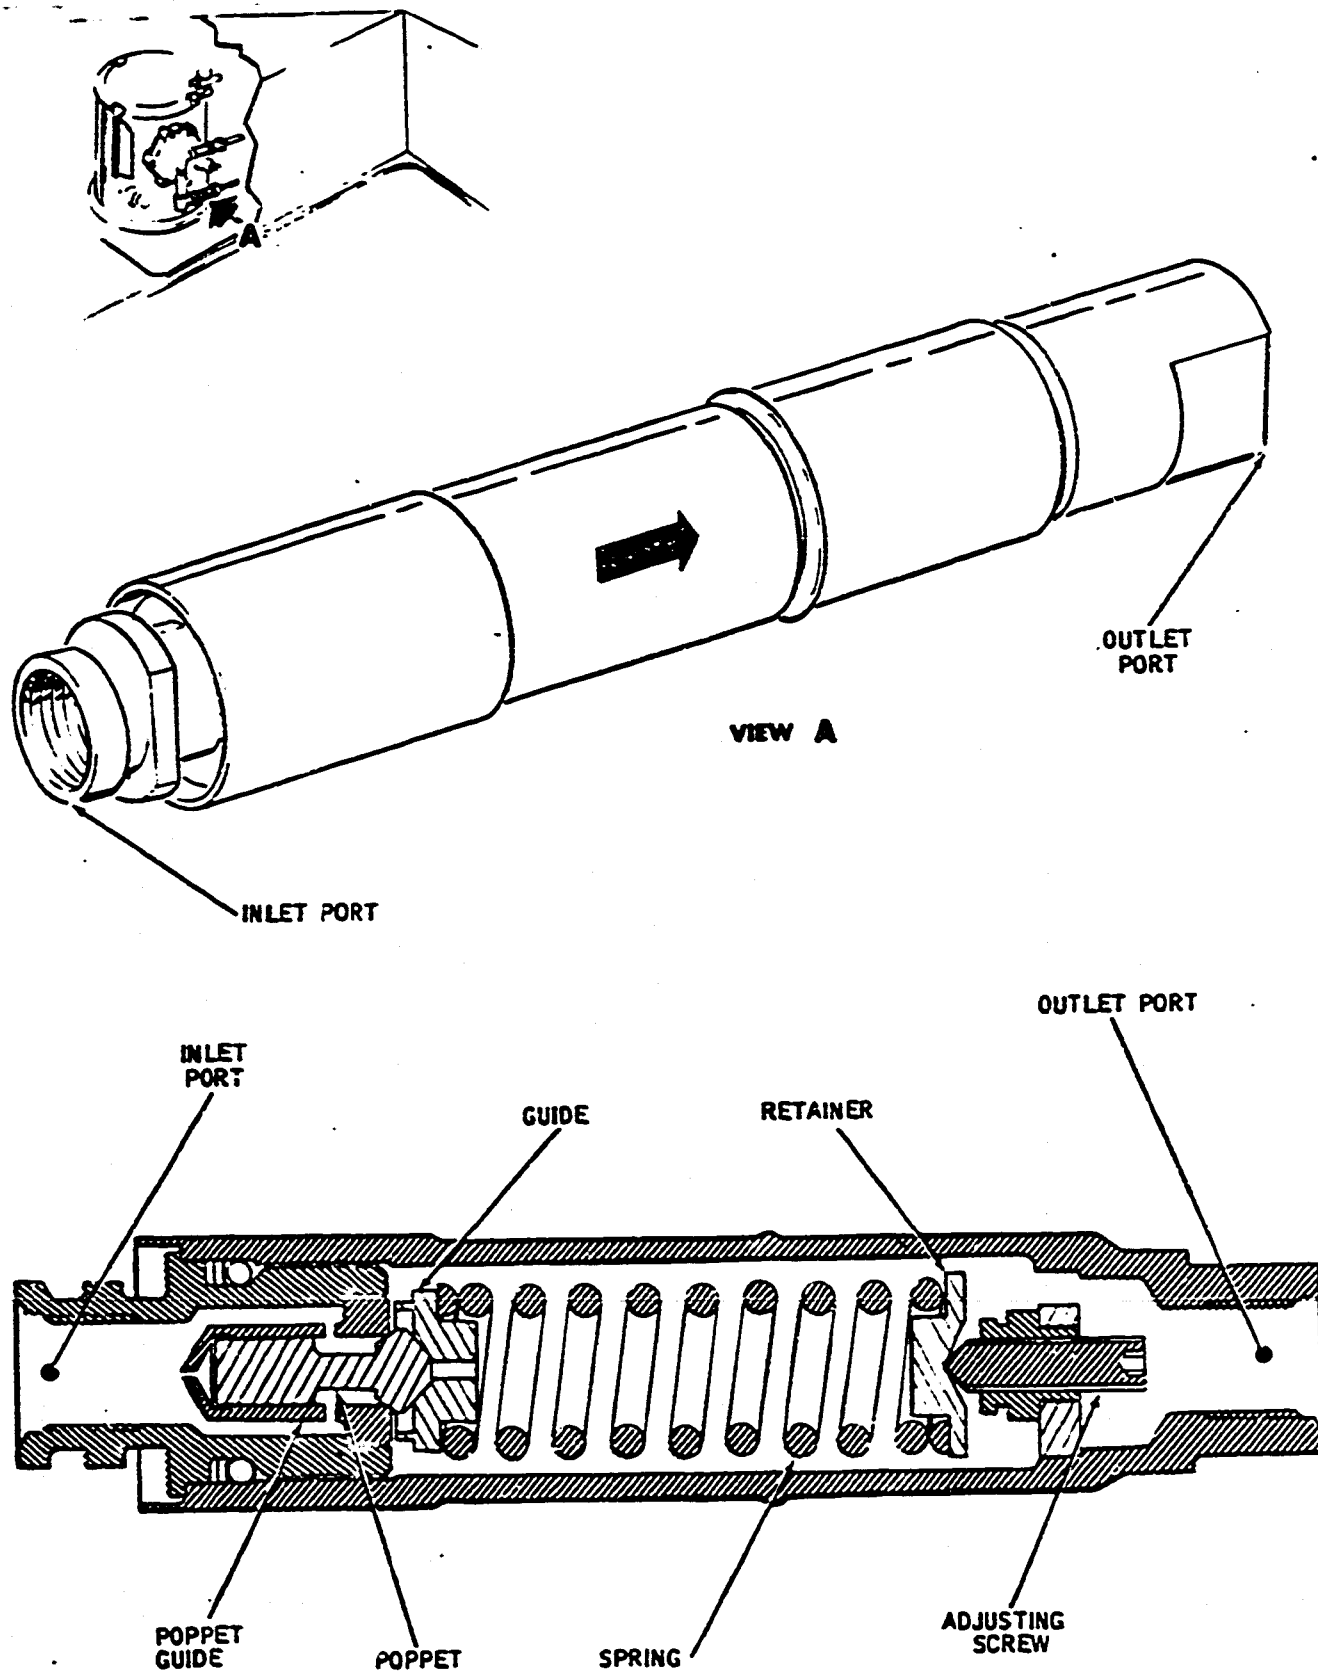

HA2-161

Auxiliary Hydraulic Pump Relief  
 Valve -- Cutaway View  
 Figure 3

29-20-0  
 CODE 5  
 Page 6

Jan 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Externally, the valve body is cylindrical, approximately 5 inches in length, and 1 inch in diameter. The outlet end of the valve is slightly larger than the inlet end.
- (3) When pressure builds up, the poppet starts to relieve at approximately 3300 psi. If pressure continues to build up, the poppet continues to open until 3500 psi and a maximum flow of 3.5 gpm are reached. When pressure is relieved, the poppet reseats at 90 percent of the unseat pressure.

E. Auxiliary Hydraulic System Filter (See Figure 4.)

- (1) A line-type, 10-micron filter assembly is installed in the piping of the auxiliary system to filter fluid from the pressure outlet port of the auxiliary pump to the system selector valve. The filter is located on the bulkhead near the forward inboard corner of the left main gear wheel well, slightly inboard and above the dual filter and relief valve. It is accessible through the left main gear inboard door.
- (2) The inlet and outlet ports of the filter are internally threaded and are marked in and out. The filter bowl is cylindrical in shape, with wrench flats at the lower end, and is threaded into the assembly immediately below the ports. A hex-shaped magnetic plug is installed in the drain port. The filter element is stainless steel mesh, supported by a perforated cylindrical center core.



F. Auxiliary Hydraulic System Check Valve

- (1) The auxiliary hydraulic system check valve is a spring-loaded, poppet-type valve with a rated capacity of 3000 psi. This valve is installed in the line between the auxiliary hydraulic system filter and the system selector valve to prevent reverse flow of hydraulic fluid through the filter and the auxiliary pump when the engine-driven pumps or external pressure supply are used.
- (2) The auxiliary hydraulic system check valve is located in the left wheel well, just above the dual filter and relief valve. The auxiliary hydraulic system check valve is accessible through the left wheel well.
- (3) Externally and internally, this valve is similar to the engine-driven hydraulic pump check valve, except for size.

G. Auxiliary Hydraulic System Surge Damper Accumulator (See Figure 5.)

- (1) The auxiliary hydraulic system surge damper accumulator consists of two spherical domes, separated by a diaphragm and held together by a ring nut. An air filler valve and gage are installed on the accumulator. The accumulator is installed in the auxiliary hydraulic pump pressure line just inboard and aft of the auxiliary pump, and is attached to the shear web by two clamp blocks. Access to the accumulator is through the left wing root access door.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

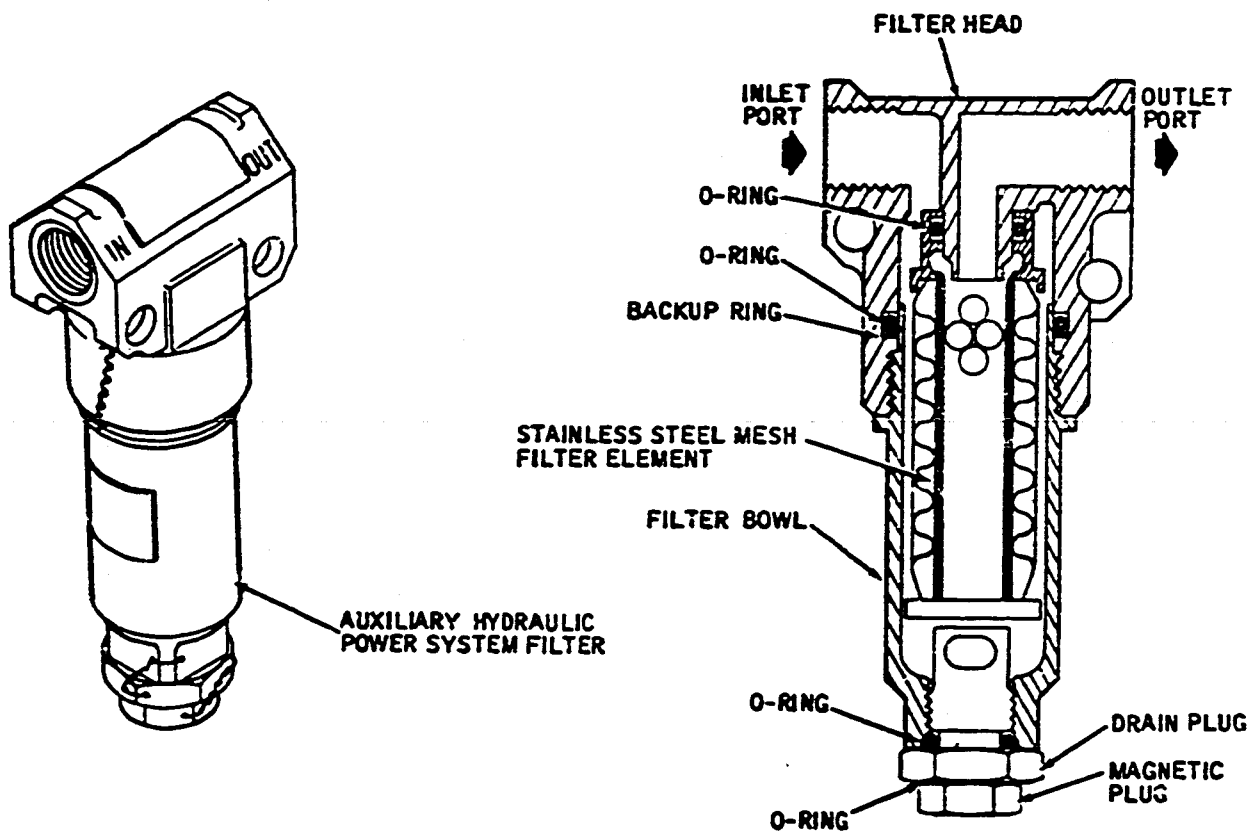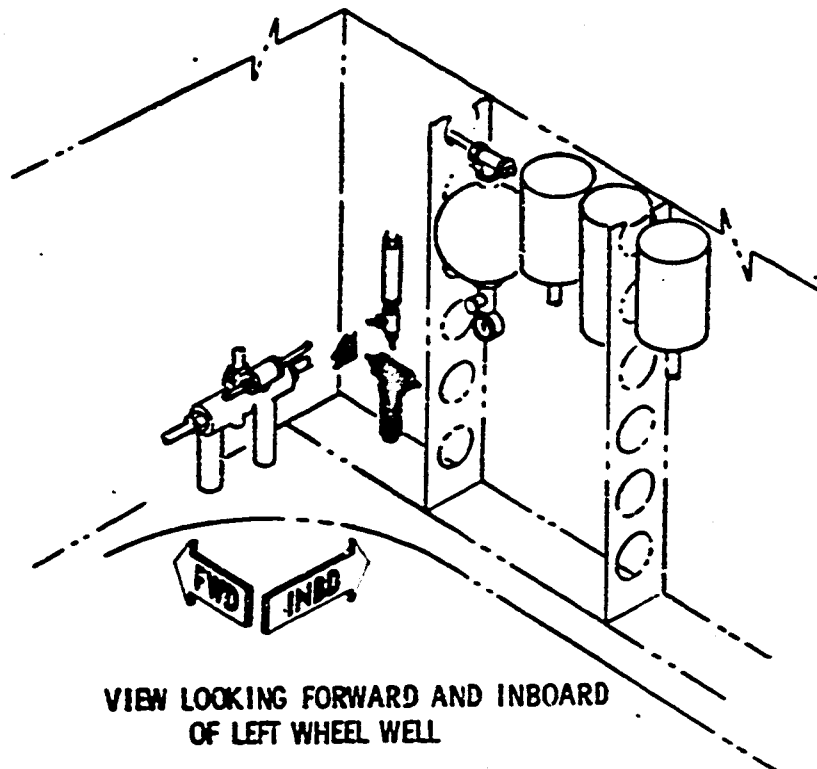


HA2-162

29-20-0  
 CODE 5  
 Page 8

Auxiliary Hydraulic System Filter -- Cutaway View  
 Figure 4

Jan 15/68

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

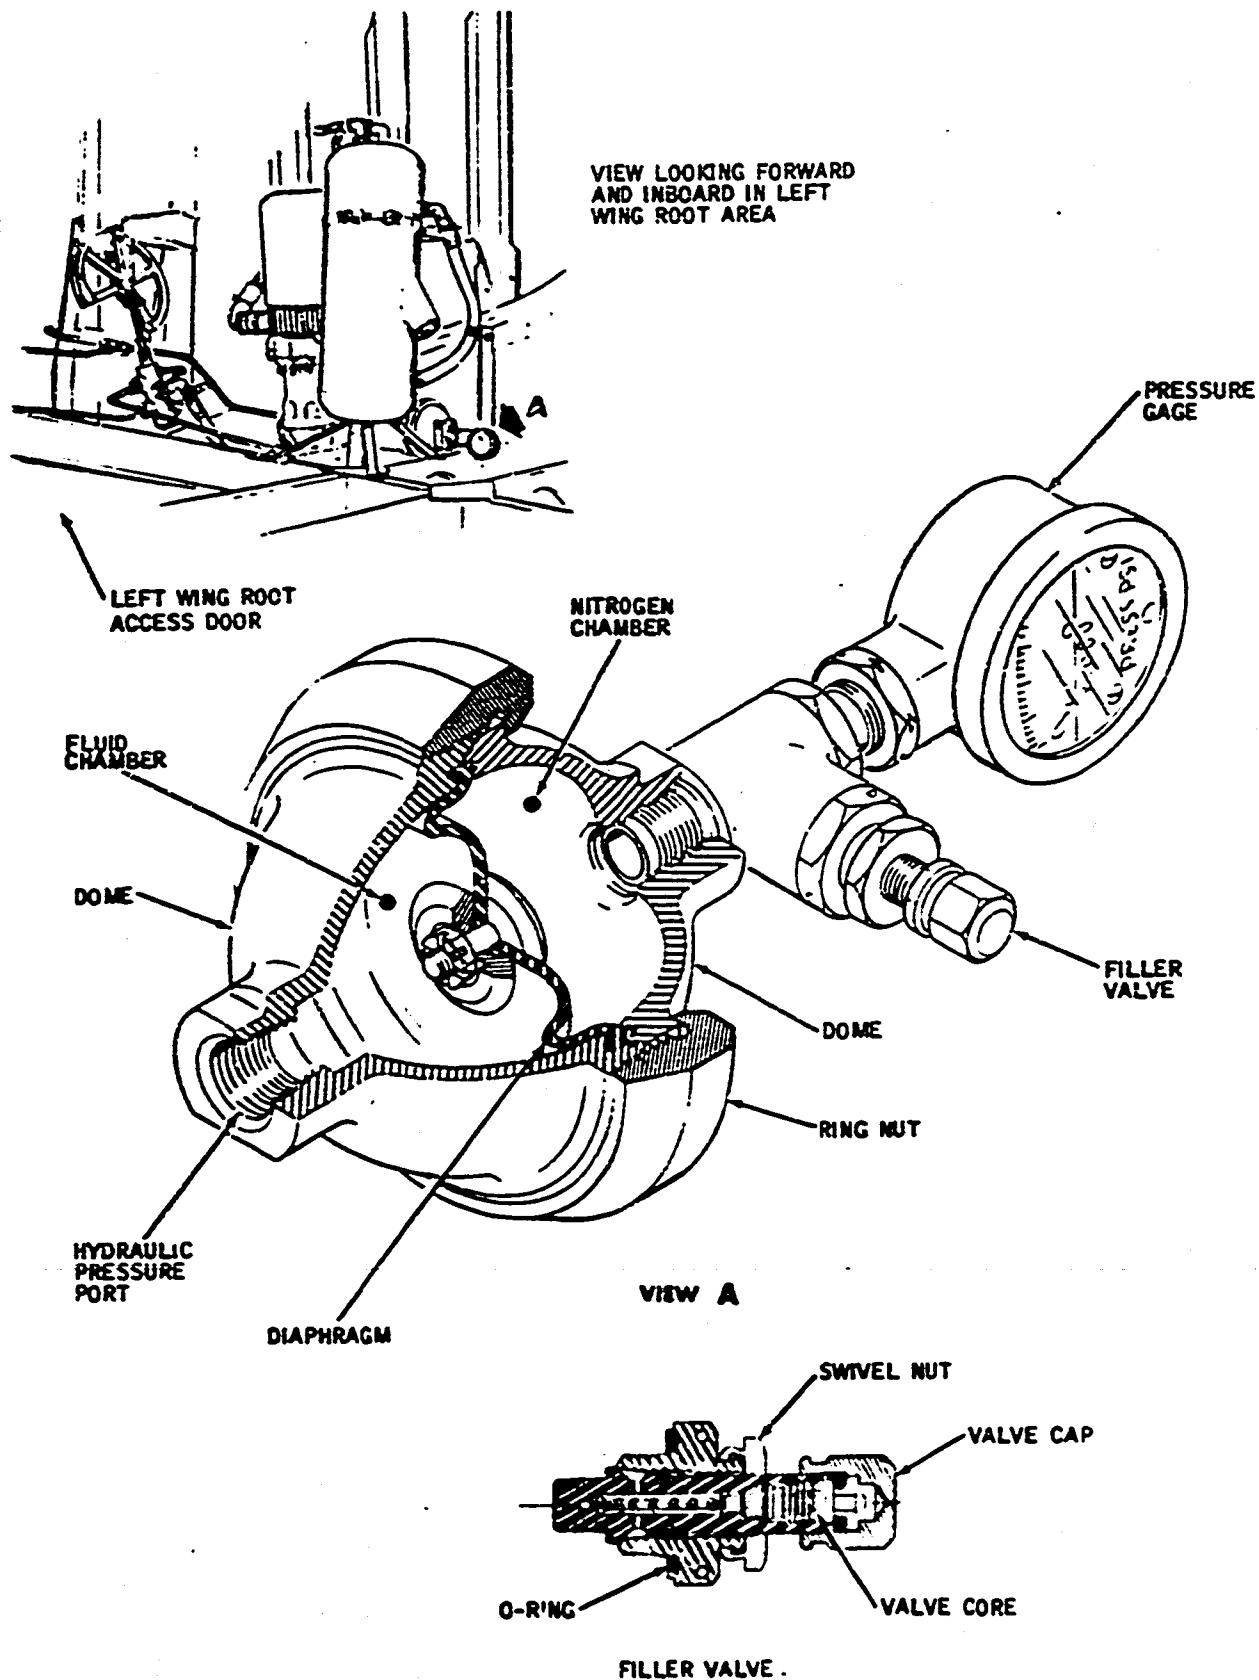

HA2-163A

Auxiliary Hydraulic Power System Surge Damper  
 Accumulator -- Cutaway View  
 Figure 5

Jan 15/68

29-20-0  
 CODE 5  
 Page 9

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL



- (2) The accumulator is initially charged to 1000 psi with dry nitrogen. As the auxiliary system pressure builds up, fluid is forced against the diaphragm in the accumulator, further compressing the trapped nitrogen in the air side of the accumulator to full system pressure (2600 to 3000 psi is indicated on the accumulator pressure gage). The air in the accumulator absorbs the initial shock of the auxiliary pump output and permits the system pressure to rise gradually. The accumulator also serves to cushion the piping and system components against high impact loads.

#### H. Auxiliary Hydraulic Pump Control


- (1) The auxiliary hydraulic pump control system consists of auxiliary hydraulic pump control switch, an auxiliary hydraulic pump control relay, an auxiliary hydraulic pump power relay, an electric motor, and an auxiliary pump on indicating light.
- (2) Two auxiliary hydraulic pump control switches are located in the flight compartment. A third switch is located in the left wing root area, directly aft of the auxiliary hydraulic pump. This switch is for the convenience of ground crew personnel during maintenance operations. The switches are spring-loaded to the center (off) position and have two momentary positions placarded start (hold only in emergency) and stop.
- (3) The electric motor for the auxiliary hydraulic pump is an ac, 3-phase motor. A thermostatic switch is included in the circuit to protect the motor from overheating.
- (4) The auxiliary hydraulic pump motor is supplied with power from the cabin bus 4. This permits pump operation from an external power source or from the airplane electrical system.
- (5) The auxiliary pump on indicating light is a blue press-to-test light, located adjacent to the auxiliary hydraulic pump control switch. The light is equipped with a dimming feature.
- (6) When any one of the auxiliary hydraulic pump control switches is momentarily moved to the start position, the circuitry is completed between the auxiliary hydraulic pump control relay and cabin bus 4. The ground is through the stop contact of the switch and the thermostatic switch of the motor. Once the relay is energized, it remains energized through its own holding contacts. Through a closed contact of the pump control relay, power is supplied from cabin bus 4 to energize the hydraulic pump power relay. Through the closed contacts of the pump power relay, a power circuit is completed from the feeder leads of cabin bus 4 to the auxiliary hydraulic pump motor. The blue indicating light, located in the flight compartment, receives power through one of the closed contacts of the pump power relay. Therefore, the light is on whenever the pump power relay is energized.

EAL

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

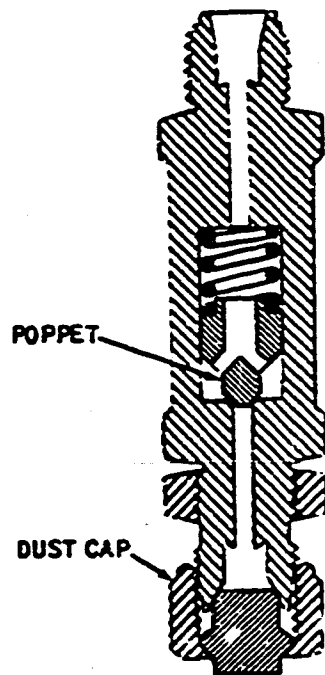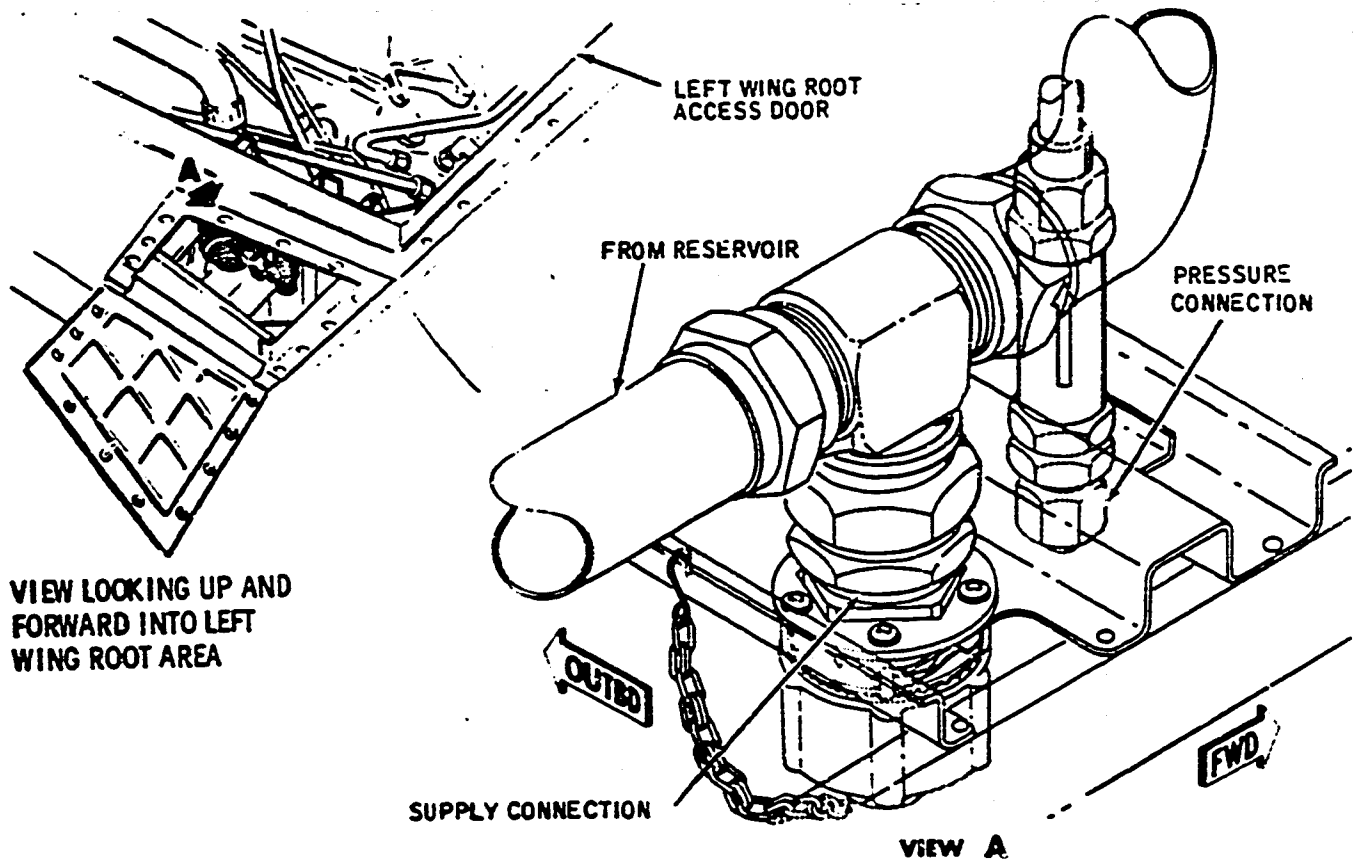

PRESSURE CONNECTION

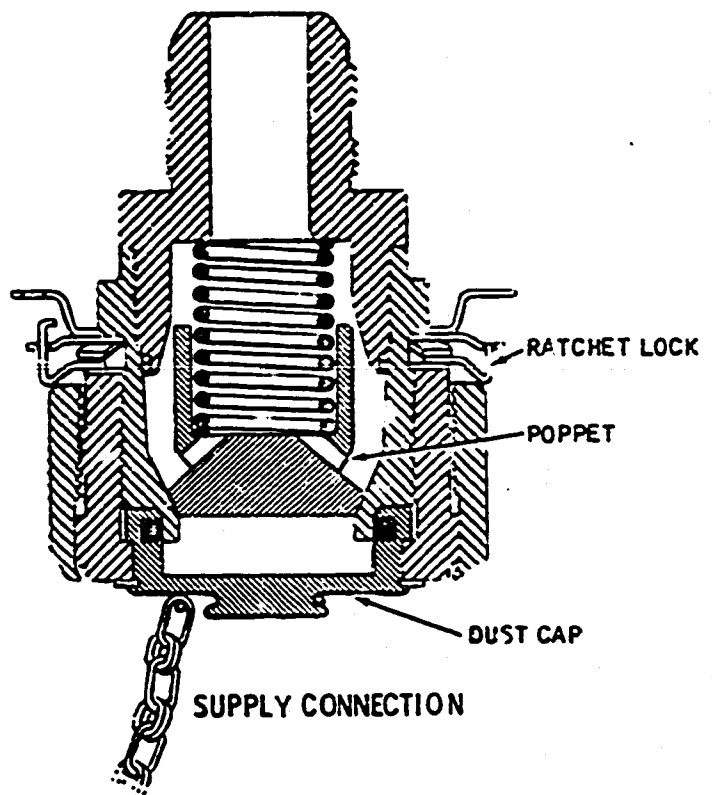

Ground Power Connectors -- Cutaway View  
 Figure 6

Jan 15/68

Printed in U.S.A.

HA2-164

29-20-0  
 CODE 5  
 Page 11

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (7) The auxiliary hydraulic pump motor is safeguarded against overheating by the thermostatic switch. Under normal conditions, this switch is in the ground leg of the control relay. When an overheat condition occurs, the thermostatic switch opens the control relay circuit to limit the motor case to 450°F (252°C). This action deenergizes the control relay, which in turn denenergizes the power relay. In an emergency situation, the thermostatic switch can be overridden by holding the auxiliary hydraulic pump control switch in the start (hold only in emergency) position.
- (8) When the auxiliary hydraulic pump control switch is placed in the momentary stop position, the ground for the control relay is broken, deenergizing the power relay and removing power from the pump motor and the indicating light.

I. Ground Service Pressure and Supply Connectors (See Figure 6.)

- (1) The ground service pressure and supply connectors are external fittings to which a service unit can be connected for operating the hydraulic power system when there is no power on the airplane. The connectors are located on a panel covered by an access door on the lower skin of the left wing root, aft of the rear spar.
- (2) The ground service pressure connector is made up of a check valve with a flared, bulkhead-type fitting on the inlet end and a standard tube fitting on the outlet end which connects to the left engine-driven pump pressure line. The inlet fitting is covered with a dust cap when not in use.
- (3) The internal description of the connector is the same as that of the engine-driven hydraulic pump check valve (see 29-10-0, Description and Operation). The connector operates as a shutoff valve when the ground unit is not connected. When a ground hydraulic power source is connected to the pressure connector and pressure is applied, the poppet unseats and supplies pressure fluid to the hydraulic power system.
- (4) The supply connector is made up of a T-fitting and a self-sealing coupling half. The tee is female-threaded to accept the bulkhead-type fitting on the upper end of the coupling. The cross arms of the tee tie into the right engine-driven pump supply line with flared-type fittings. The tee is threaded onto the coupling half and is secured with a locknut. The coupling consists of a coupling body, male-threaded to accept the coupling half from the ground source. The mounting flange has a recess to accept the hex portion of the coupling body, and has notches to retain the lockspring. A dust cap consisting of a union nut assembly, a dust plug, and a securing chain is installed on the lower end of the coupling when not in use.



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY - DESCRIPTION AND OPERATION

1. General

- A. The auxiliary hydraulic system is a supplementary hydraulic power system connected to the main hydraulic power system through the system selector valve and the auxiliary pump supply selector valve. The auxiliary hydraulic system consists of an electrically driven auxiliary hydraulic pump, an auxiliary pump relief valve, a surge damper accumulator, an auxiliary filter and check valve, and the piping required to interconnect the components and connect the auxiliary system to the main power system.
- B. In flight, the auxiliary hydraulic system can be used as supplemental power for the main power system. The auxiliary pump will also serve, when ground support equipment is not available, to pressurize the hydraulic power system for ground testing of the airplane hydraulic subsystems and components. Fluid is supplied to the auxiliary pump from a low standpipe in the hydraulic system reservoir. When the auxiliary pump is operated, fluid from the pressure outlet port of the auxiliary pump is ported, through the auxiliary power system filter and an auxiliary system check valve, to the auxiliary pressure inlet port of the system selector valve. When the system selector valve is in the normal position, auxiliary pump pressure is ported to the general system.
- C. When the auxiliary pump is not operating, the auxiliary system check valve prevents reverse flow through the auxiliary pump from the engine-driven pumps. An auxiliary pump relief valve is teed into the line from the auxiliary pump outlet port to the reservoir filter inlet port. The valve relieves and ports excess fluid pressure back to the reservoir if auxiliary pressure builds above 3300 psi.
- D. The auxiliary pump alternate reservoir is installed in the auxiliary hydraulic system to provide an alternate hydraulic fluid source in case of depletion of the normal supply to the hydraulic system reservoir. The alternate reservoir source is selectable by operation of the auxiliary hydraulic pump supply selector valve which actuates simultaneously with the hydraulic system selector valve.

2. System Components


A. Auxiliary Hydraulic Pump (See Figure 1.)

- (1) The auxiliary hydraulic pump, located in the left wing root access area, supplies hydraulic pressure for the auxiliary hydraulic system. The pump consists of an air cooled electric motor directly coupled through a shaft and centrifugal boost pump impeller to a variable displacement hydraulic pump.


Oct 15/68

29-20-0  
CODE 6  
Page 1

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

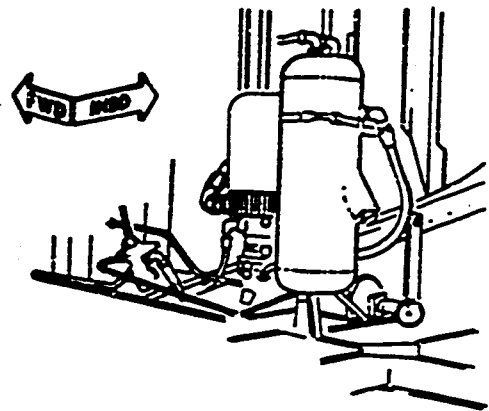

VIEW LOOKING FORWARD AND  
INBOARD AT LEFT WING ROOT AREA

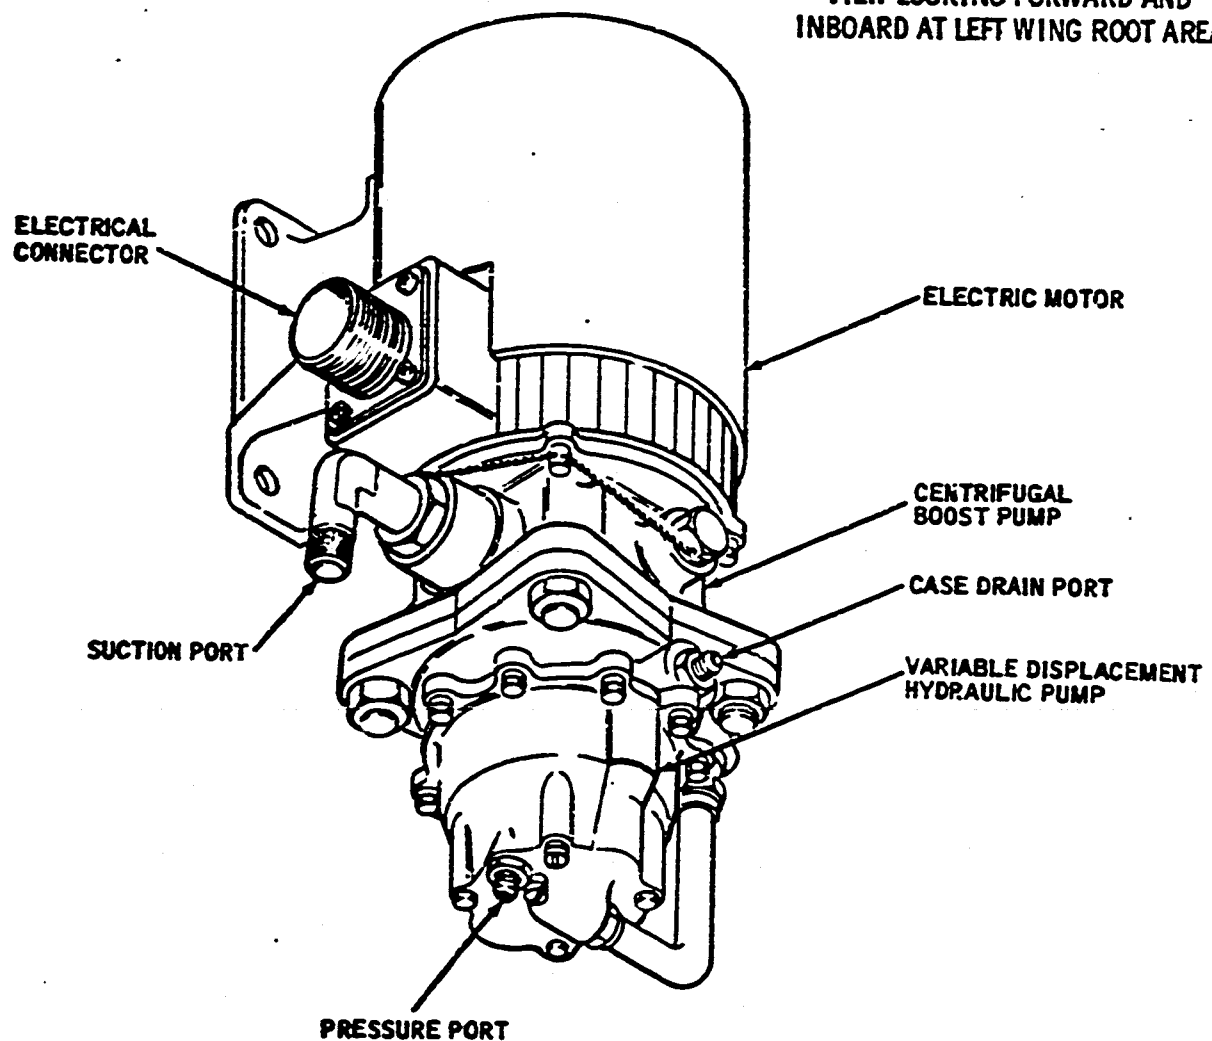

HA2-5780

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The electric motor is a 115/200-volt, 3-phase, 400-cps, continuous duty motor. The motor rotor has an internally splined output shaft which fits on the externally splined input shaft of the pump. The other end of the rotor shaft drives a cooling fan which forces cooling air between the motor case and the outer shroud. A thermostwitch located in the motor case is provided to shut off the motor in case of an overheat condition. An override function of the control switch in the flight compartment is provided to override the thermostwitch for emergency operation.
- (3) The centrifugal boost pump impeller is located on the drive shaft between the motor and the variable displacement pump. The impeller draws hydraulic fluid from the system and supplies it through an external tube to the inlet port of the variable displacement pump under pressure, thereby helping to prevent cavitation of the pump.
- (4) The variable displacement hydraulic pump consists of the following major parts: a four piece housing, drive shaft with impeller, axial cylinder barrel containing 9 pistons, pivoting hanger with an inclined camface, hold down plate, pressure compensating valve, and bearings.
- (5) When the electric motor is actuated, the drive shaft rotates the boost pump impeller and the cylinder and piston group. Each revolution of the cylinder causes one complete stroke of each piston. The pistons are held against the camface of the hanger by the hold down plate, providing positive piston return. The displacement of fluid from the pump discharge port is controlled by the compensator valve. The pump provides full flow of 3.7 gpm at system pressures up to approximately 2700 psi. At this point, the compensator valve reduces flow until at approximately 3000 psi, displacement of fluid is reduced to zero.

**B. Auxiliary Hydraulic Pump Alternate Reservoir**

- (1) The auxiliary hydraulic pump alternate reservoir is installed on the shear web in the left wing root area, immediately aft of the auxiliary hydraulic pump. Access to the reservoir is through the left wing root access door. The alternate reservoir supplies hydraulic fluid to the auxiliary hydraulic pump in the event the fluid supply from the main hydraulic system reservoir is exhausted.
- (2) The reservoir is cylindrical in shape and has a fluid capacity of approximately 1.9 US gallons (1.6 Imperial gallons or 7.3 liters). There are four ports on the reservoir: an outlet port to the auxiliary hydraulic pump selector valve located at the bottom, an inlet port from the auxiliary hydraulic pump case drain located near the top on the side, an inlet from the wing flap return line, and an outlet to the main hydraulic reservoir located at the top. A sight gage is installed near the top of the reservoir for visual indication of fluid level, and a mounting boss for the emergency hydraulic level indicating light switch is installed on the side of the reservoir.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The reservoir is kept full during operation by routing fluid from the wing flap return line to the reservoir. Fluid in excess of the alternate reservoir capacity is then routed to the main hydraulic reservoir. Hydraulic fluid from the auxiliary pump case drain is routed to the alternate reservoir and then to the main reservoir. Fluid is used from the alternate reservoir only when the auxiliary pump is operating and the auxiliary pump supply selector valve is in the alternate position. Fluid supply to the alternate reservoir is replenished whenever the wing flaps are operated.


C. Auxiliary Hydraulic Pump Supply Selector Valve (See Figure 2.)

- (1) The auxiliary hydraulic pump supply valve is a 2-position valve that ports hydraulic fluid from either reservoir, through a common outlet, to the auxiliary pump. The selector valve is located on the shear web in the left wing root, near the auxiliary pump. The selector valve is accessible through the left wing root access door.
- (2) The valve body has two inlet ports and one outlet port. The outlet port is centrally located on the aft side of the valve body. The two inlet ports are located on the outboard side of the valve body, 90 degrees from the outlet port. Two mounting flanges are located on the inboard side of the valve body. These flanges are an integral part of the valve body.
- (3) During normal operation, fluid is taken from a low standpipe in the main hydraulic system reservoir and ported to the auxiliary pump. When the valve is in the alternate position, fluid is taken from the auxiliary hydraulic pump alternate reservoir and ported to the auxiliary pump. The valve is moved from the auxiliary position to the alternate position by placing the hydraulic system selector control lever, located on the system engineer's control pedestal, to the general system/main gear downlock and flaps position.


D. Auxiliary Hydraulic Pump Relief Valve (See Figure 3.)

- (1) The auxiliary hydraulic pump relief valve is a spring loaded poppet-type valve and serves to relieve excess fluid pressure that may build up in the auxiliary hydraulic system. The relief valve connects, through a reducer, to a tee in the A return port of the hydraulic system reservoir. The valve is accessible through the left wing root access door.
- (2) Externally, the valve body is cylindrical, approximately 5 inches in length, and 1 inch in diameter. The outlet end of the valve is slightly larger than the inlet end.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

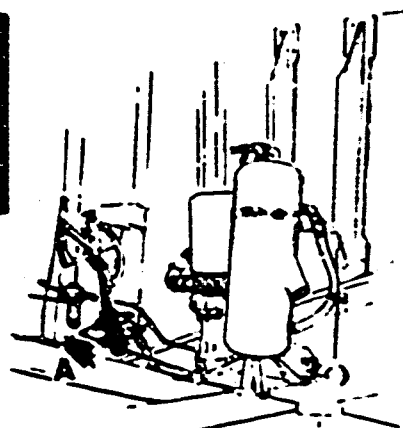

VIEW LOOKING INTO LEFT  
 WING ROOT AREA

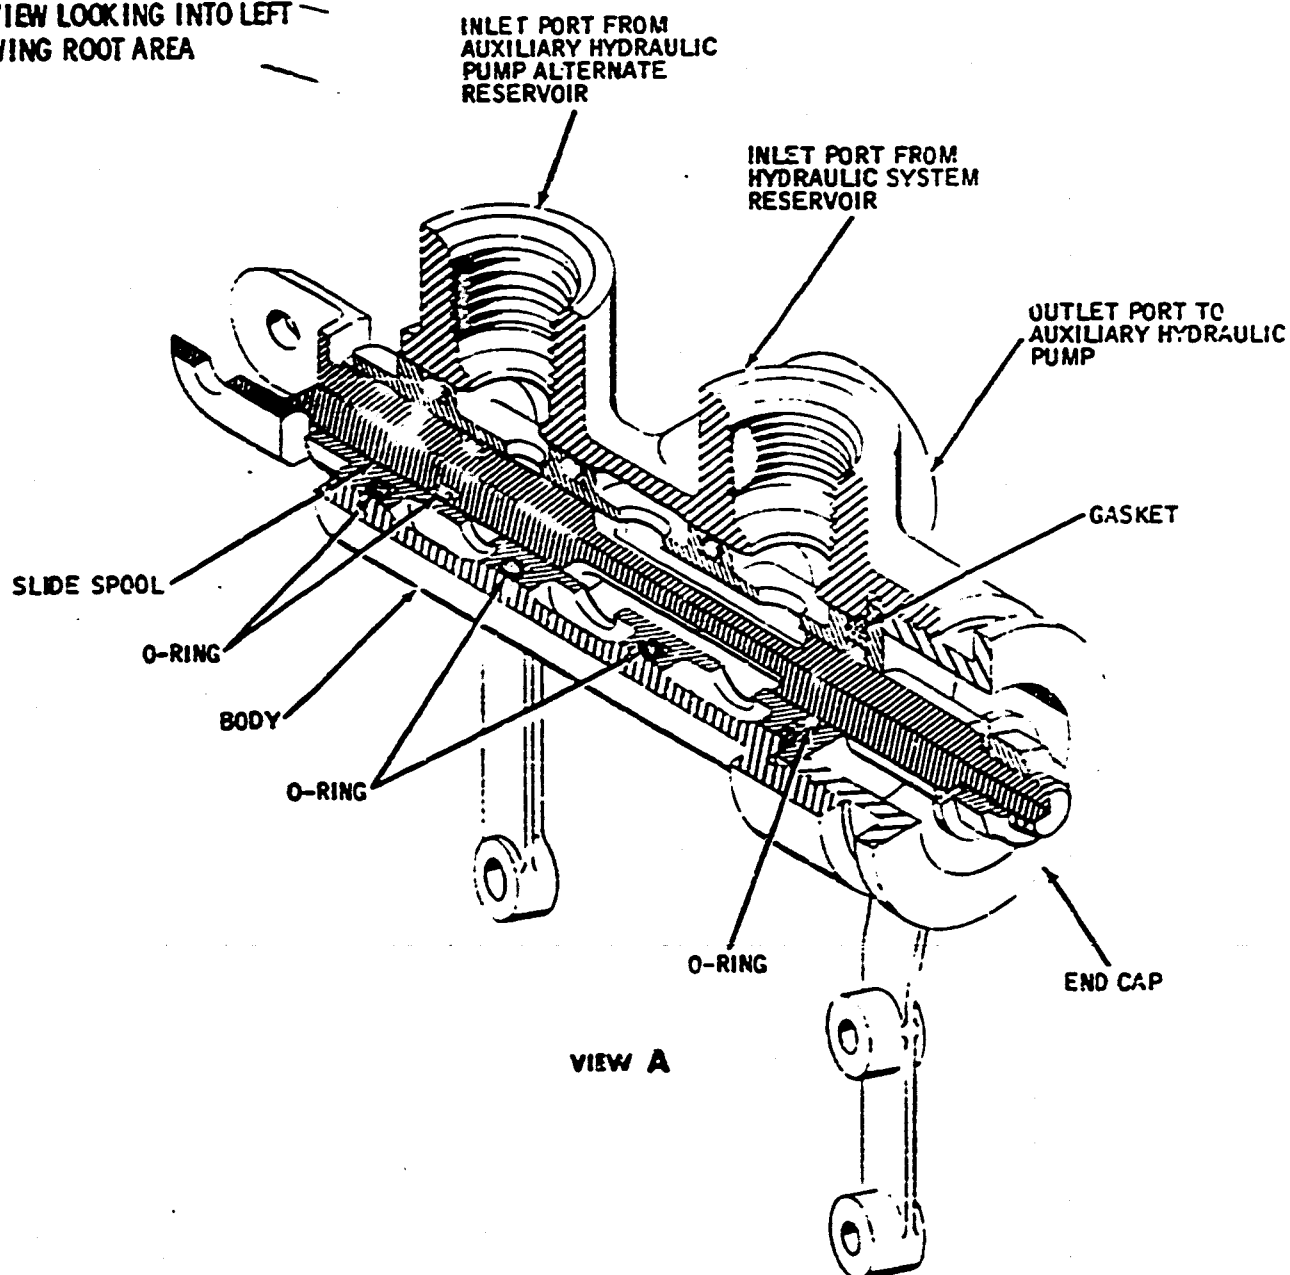



Auxiliary Hydraulic Pump Supply Selector  
 Valve -- Cutaway View  
 Figure 2

HA2-160A

Oct 15/68

29-20-0  
 CODE 6  
 Page 5

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

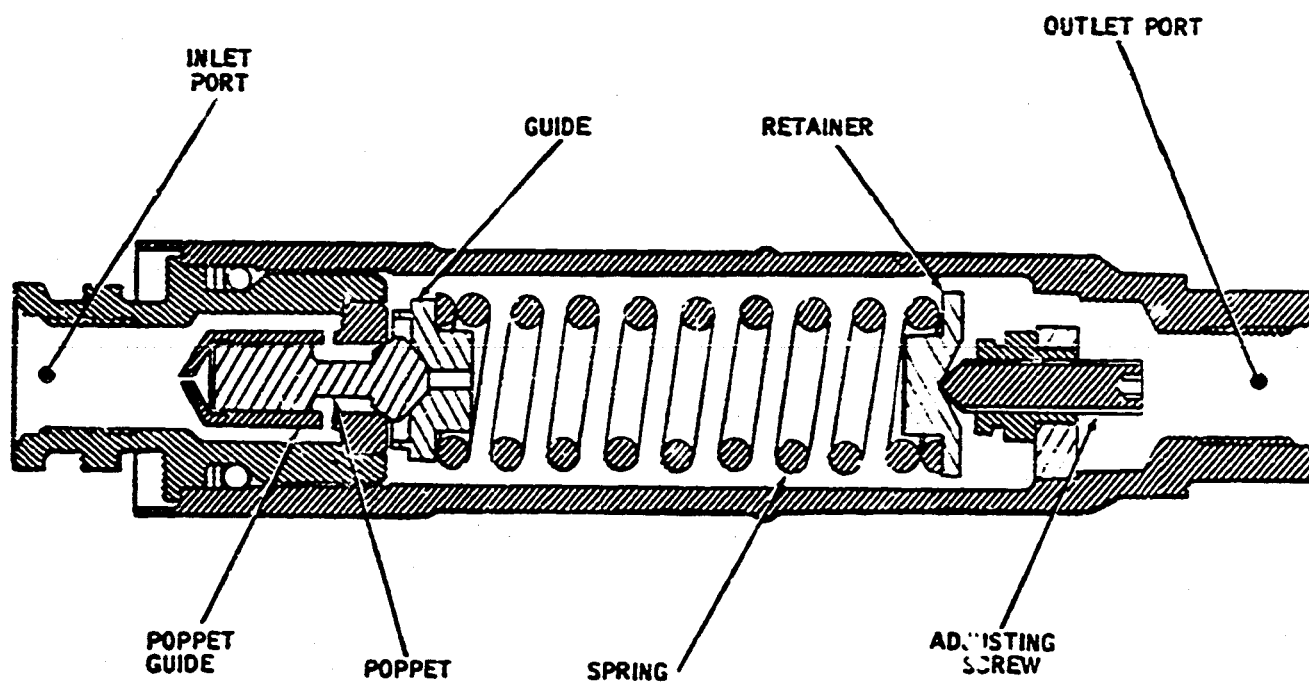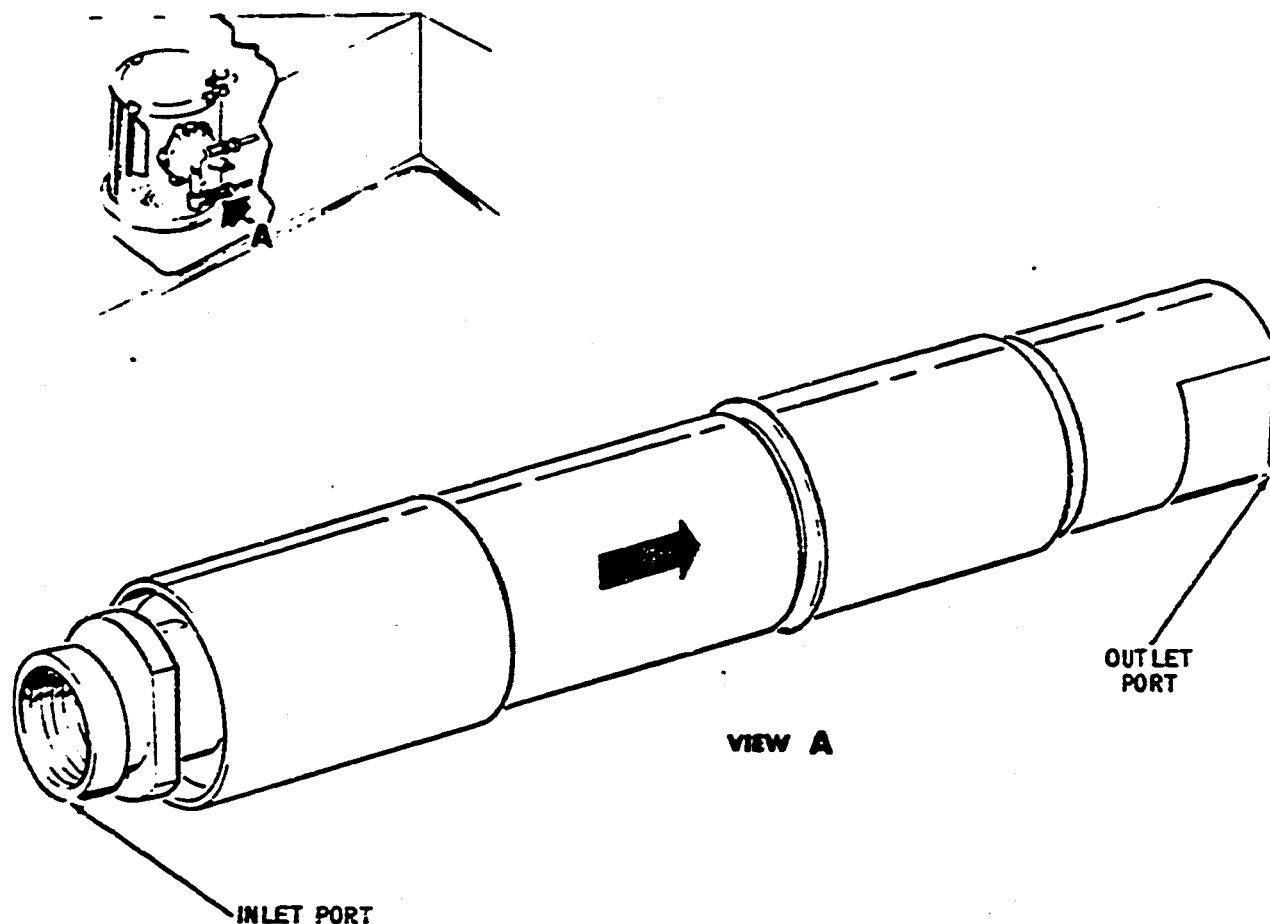

HA2-161

29-20-0  
 CODE 6  
 Page 6

Auxiliary Hydraulic Pump Relief Valve -- Cutaway View  
 Figure 3

Oct 15/68

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) When pressure builds up, the poppet starts to relieve at approximately 3300 psi. If pressure continues to build up, the poppet continues to open until 3500 psi and a maximum flow of 3.5 gpm are reached. When pressure is relieved, the poppet reseats at 90 percent of the unseat pressure.

E. Auxiliary Hydraulic System Filter (See Figure 4.)

- (1) A line-type, 10 micron filter assembly is installed in the piping of the auxiliary system to filter fluid from the pressure outlet port of the auxiliary pump to the system selector valve. The filter is located on the bulkhead near the forward inboard corner of the left main gear wheel well, slightly inboard and above the dual filter and relief valve. It is accessible through the left main gear inboard door.
- (2) The inlet and outlet ports of the filter are internally threaded and are marked in and out. The filter bowl is cylindrical in shape, with wrench flats at the lower end, and is threaded into the assembly immediately below the ports. A hex-shaped magnetic plug is installed in the drain port. The filter element is stainless steel mesh, supported by a perforated cylindrical center core.



F. Auxiliary Hydraulic System Check Valve

- (1) The auxiliary hydraulic system check valve is a spring-loaded, poppet-type valve with a rated capacity of 3000 psi. This valve is installed in the line between the auxiliary hydraulic system filter and the system selector valve to prevent reverse flow of hydraulic fluid through the filter and the auxiliary pump when the engine-driven pumps or external pressure supply are used.
- (2) The auxiliary hydraulic system check valve is located in the left wheel well, just above the dual filter and relief valve. The auxiliary hydraulic system check valve is accessible through the left wheel well.
- (3) Externally and internally, this valve is similar to the engine-driven hydraulic pump check valve, except for size.

G. Auxiliary Hydraulic System Surge Damper Accumulator (See Figure 5.)

- (1) The auxiliary hydraulic system surge damper accumulator consists of two spherical domes, separated by a diaphragm and held together by a ring nut. An air filler valve and gage are installed on the accumulator. The accumulator is installed in the auxiliary hydraulic pump pressure line just inboard and aft of the auxiliary pump, and is attached to the shear web by two clamp blocks. Access to the accumulator is through the left wing root access door.
- (2) The accumulator is initially charged to 1000 psi with dry nitrogen. As the auxiliary system pressure builds up, fluid is forced against the diaphragm in the accumulator, further compressing the trapped nitrogen


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

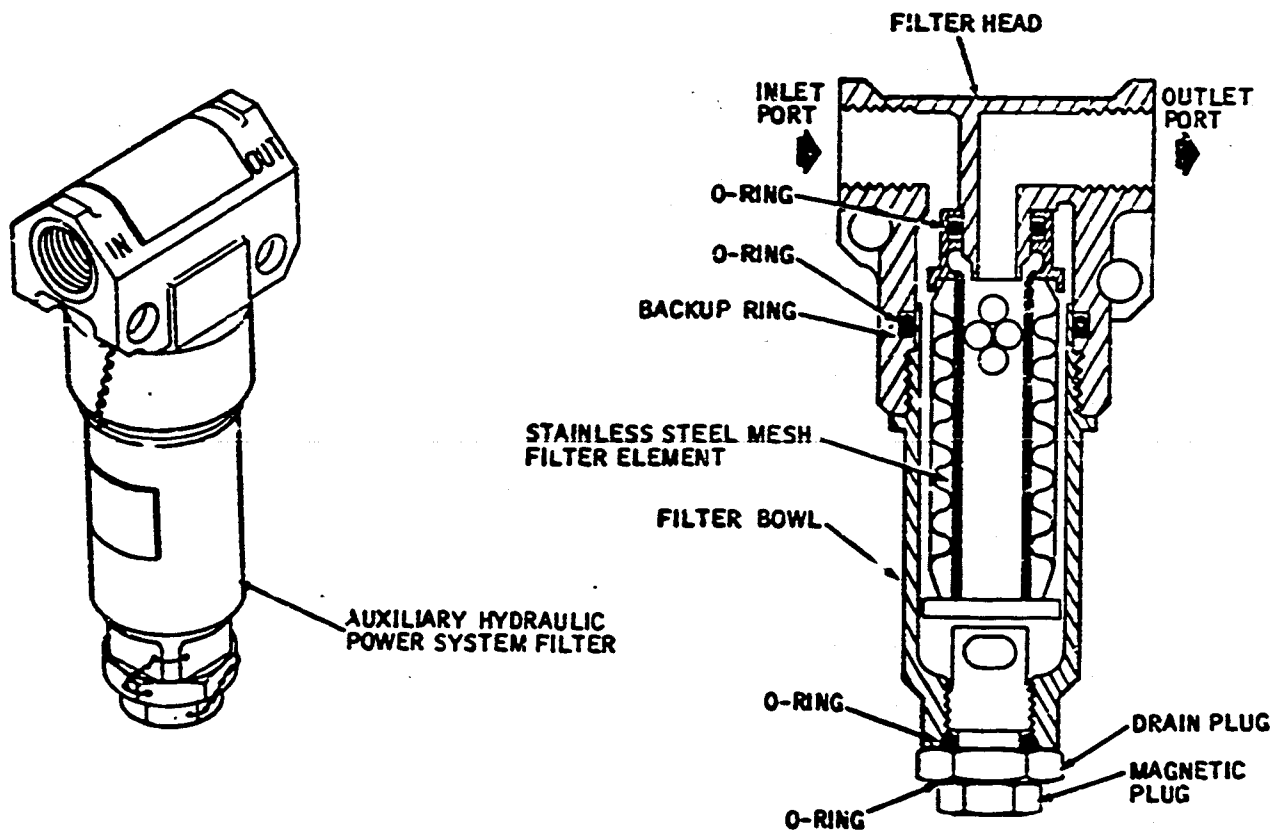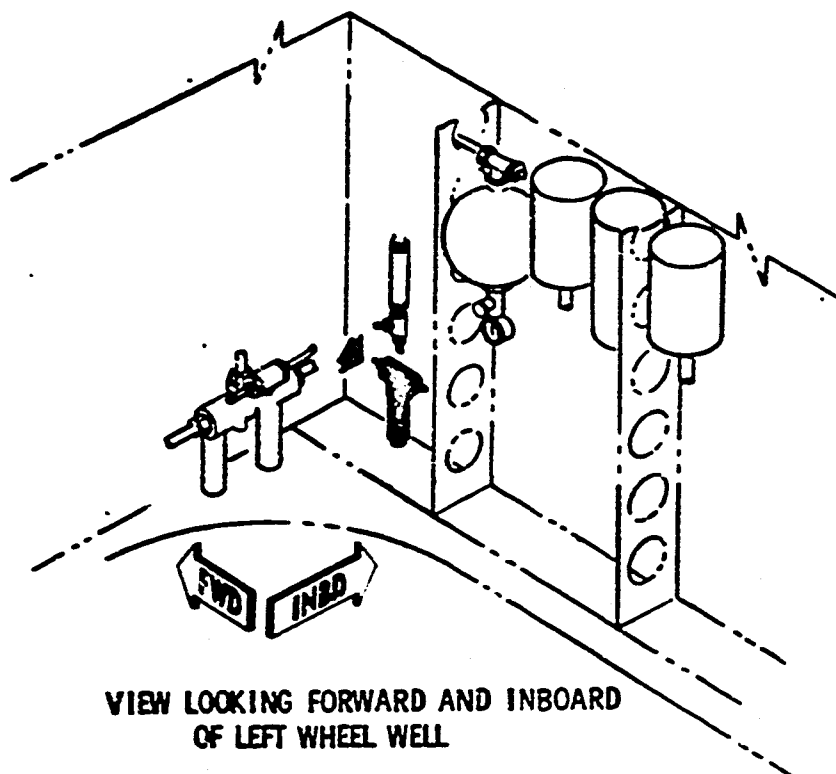

HA2-162



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

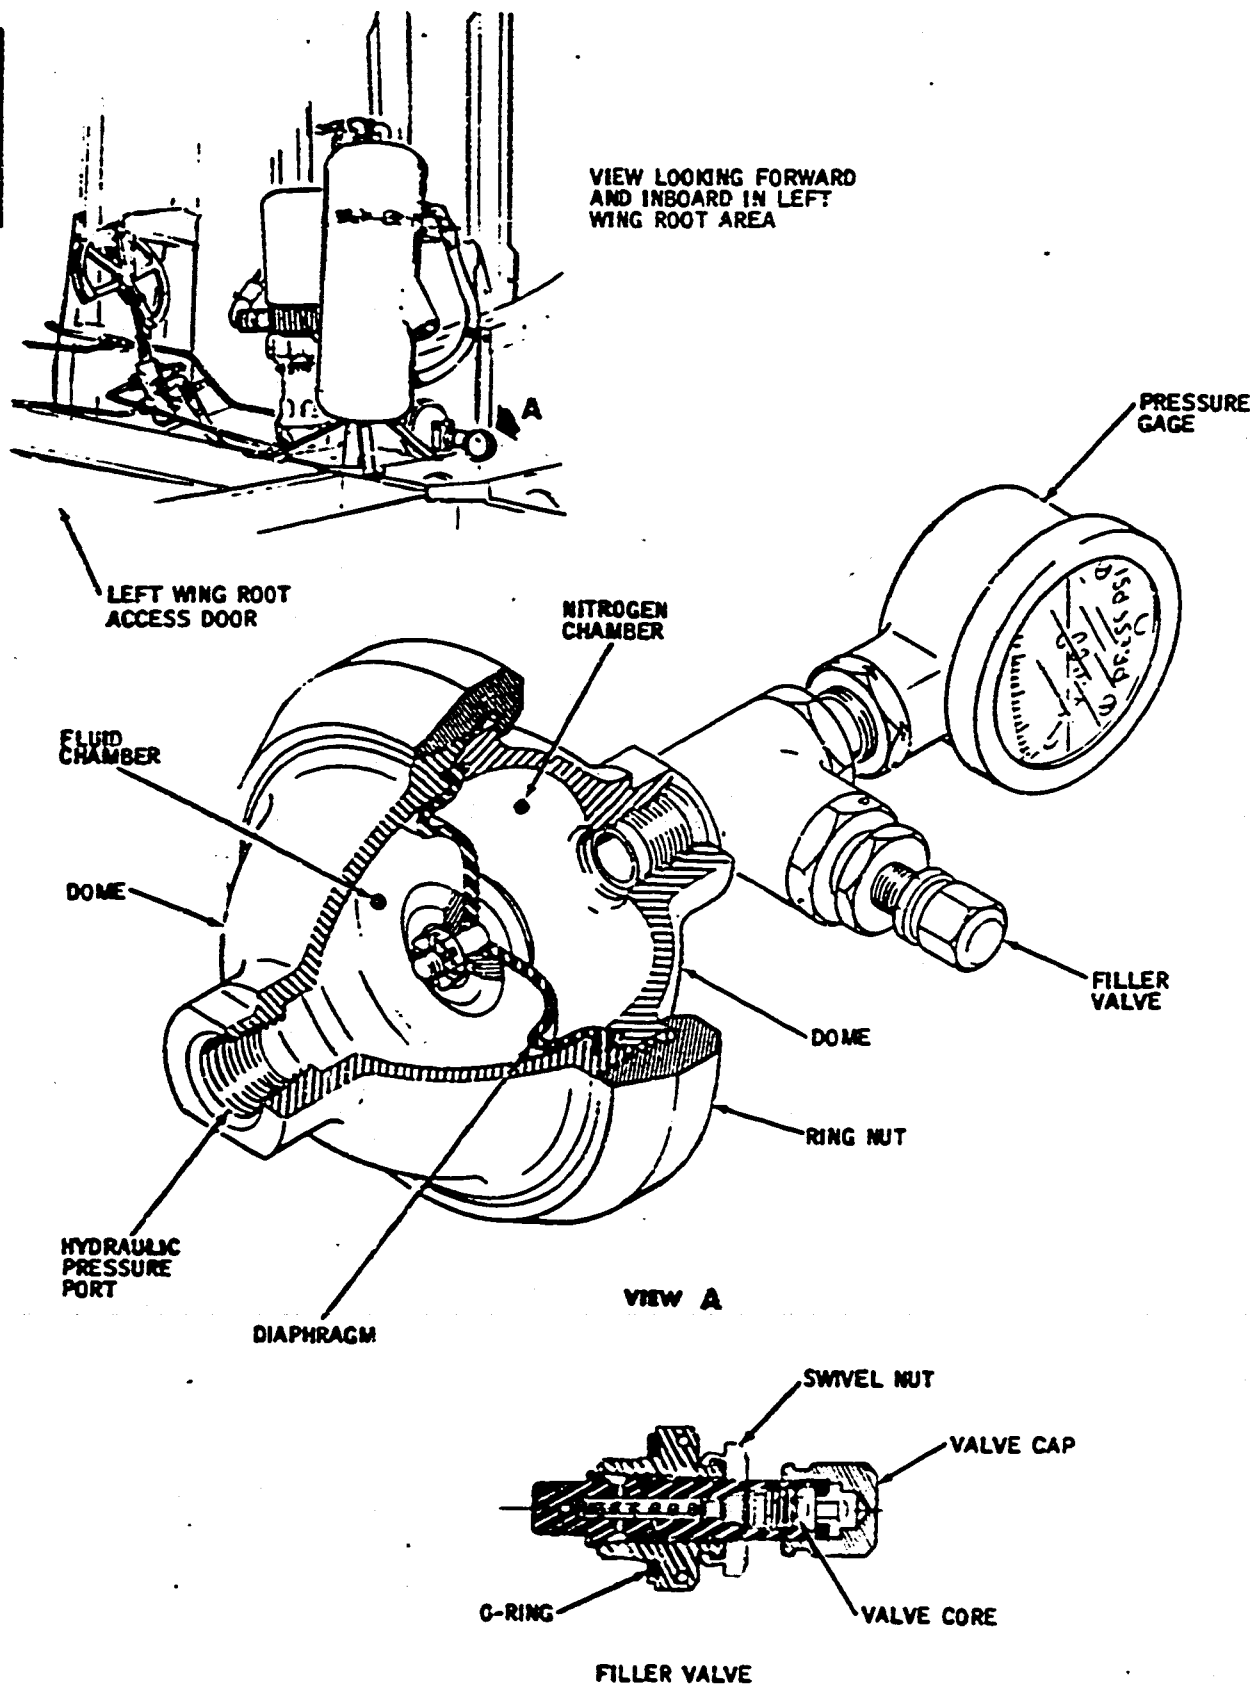

HA2-163A

Auxiliary Hydraulic Power System Surge Damper  
 Accumulator -- Cutaway View  
 Figure 5

Oct 15/68

29-20-0  
 CODE 6  
 Page 9




DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

in the air side of the accumulator to full system pressure (2600 to 3000 psi is indicated on the accumulator pressure gage). The air in the accumulator absorbs the initial shock of the auxiliary pump output and permits the system pressure to rise gradually. The accumulator also serves to cushion the piping and system components against high impact loads.

#### H. Auxiliary Hydraulic Pump Control

- (1) The auxiliary hydraulic pump control system consists of auxiliary hydraulic pump control switch, an auxiliary hydraulic pump control relay, an auxiliary hydraulic pump power relay, an electric motor, and an auxiliary pump on indicating light.
- (2) The auxiliary hydraulic pump control switch(es), located in the flight compartment, are 3-position switches. They are spring-loaded to the center position and have two momentary positions placarded start (hold only in emergency) and stop.
- (3) The electric motor for the auxiliary hydraulic pump is an ac, 3-phase motor. A thermostatic switch is included in the circuit to protect the motor from overheating.
- (4) The auxiliary hydraulic pump motor is supplied with power from the cabin bus 4. This permits pump operation from an external power source or from the airplane electrical system.
- (5) The auxiliary pump on indicating light is a blue press-to-test light, located adjacent to the auxiliary hydraulic pump control switch. The light is equipped with a dimming feature.
- (6) When the auxiliary hydraulic pump control switch is momentarily moved to the start position, the circuitry is completed between the auxiliary hydraulic pump control relay and cabin bus 4. The ground is through the stop contact of the switch and the thermostatic switch of the motor. Once the relay is energized, it remains energized through its own holding contacts. Through a closed contact of the pump control relay, power is supplied from cabin bus 4 to energize the hydraulic pump power relay. Through the closed contacts of the pump power relay, a power circuit is completed from the feeder leads of cabin bus 4 to the auxiliary hydraulic pump motor. The blue indicating light, located in the flight compartment, receives power through one of the closed contacts of the pump power relay. Therefore, the light is on whenever the pump power relay is energized.
- (7) The auxiliary hydraulic pump motor is safeguarded against overheating by the thermostatic switch. Under normal conditions, this switch is in the ground leg of the control relay. When an overheat condition occurs, the thermostatic switch opens the control relay circuit to limit the motor case to 450°F (252°C). This action deenergizes the control relay, which in turn deenergizes the power relay. In an emergency situation, the

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

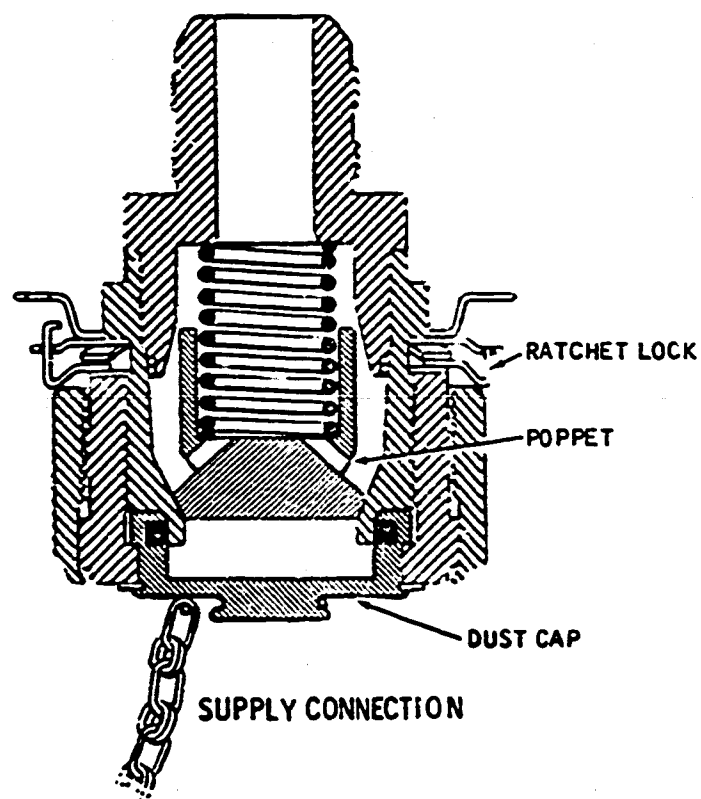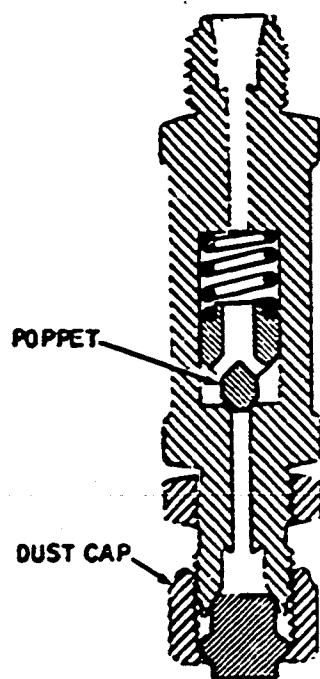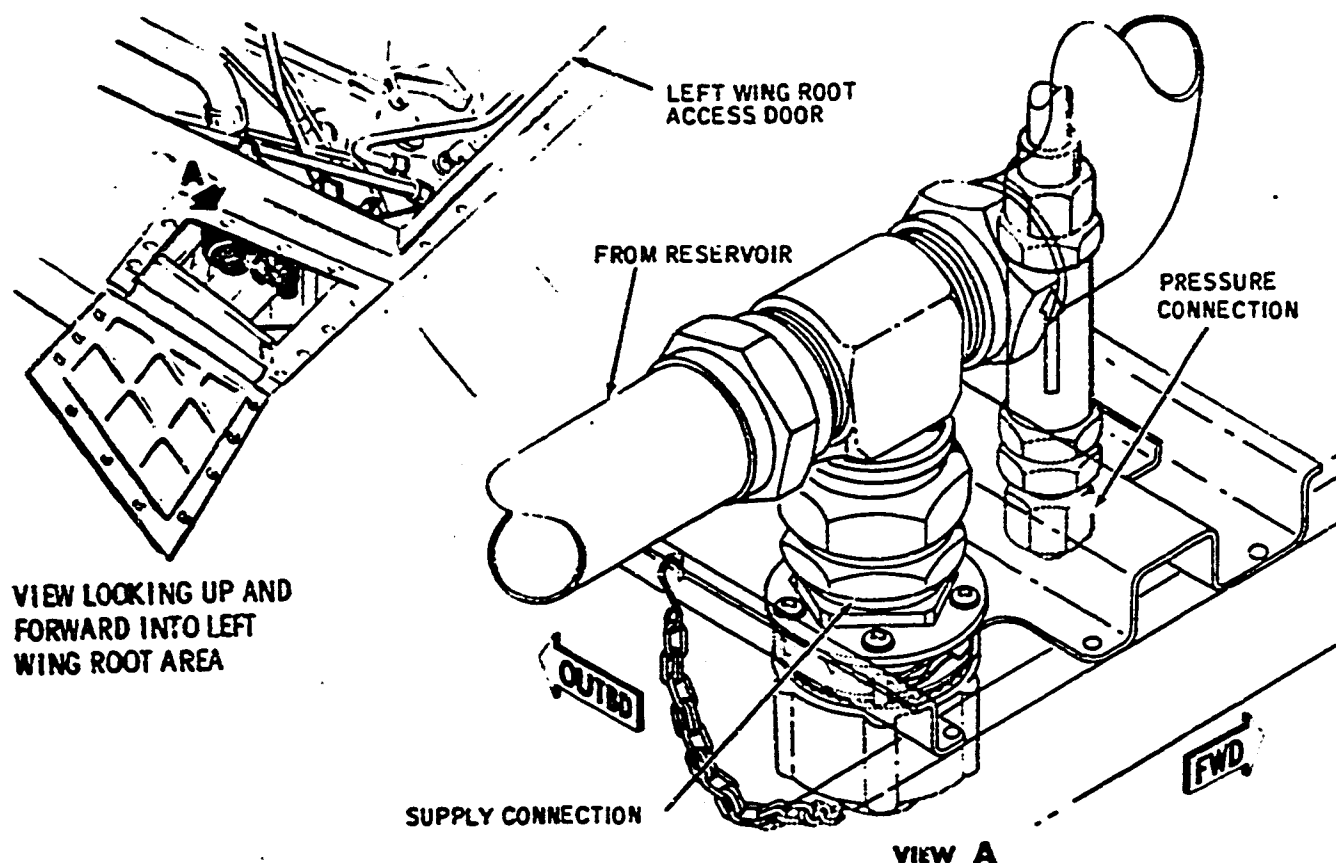

Ground Power Connectors -- Cutaway View  
 Figure 6

Oct 15/68

Printed in U.S.A.

HA2-164

29-20-0  
 CODE 6  
 Page 11

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

thermostatic switch can be overridden by holding the auxiliary hydraulic pump control switch in the start (hold only in emergency) position.

- (8) When the auxiliary hydraulic pump control switch is placed in the momentary stop position, the ground for the control relay is broken, deenergizing the power relay and removing power from the pump motor and the indicating light.

I. Ground Service Pressure and Supply Connectors (See Figure 6.)

- (1) The ground service pressure and supply connectors are external fittings to which a service unit can be connected for operating the hydraulic power system when there is no power on the airplane. The connectors are located on a panel covered by an access door on the lower skin of the left wing root, aft of the rear spar.
- (2) The ground service pressure connector is made up of a check valve with a flared, bulkhead-type fitting on the inlet end and a standard tube fitting on the outlet end which connects to the left engine-driven pump pressure line. The inlet fitting is covered with a dust cap when not in use.
- (3) The internal description of the connector is the same as that of the engine-driven hydraulic pump check valve (see 29-10-0 Description and Operation). The connector operates as a shutoff valve when the ground unit is not connected. When a ground hydraulic power source is connected to the pressure connector and pressure is applied; the poppet unseats and supplies pressure fluid to the hydraulic power system.
- (4) The supply connector is made up of a T-fitting and a self-sealing coupling half. The tee is female-threaded to accept the bulkhead-type fitting on the upper end of the coupling. The cross arms of the tee tie into the right engine-driven pump supply line with flared-type fittings. The tee is threaded onto the coupling half and is secured with a locknut. The coupling consists of a coupling body, male-threaded to accept the coupling half from the ground source. The mounting flange has a recess to accept the hex portion of the coupling body, and has notches to retain the lockspring. A dust cap consisting of a union nut assembly, a dust plug, and a securing chain is installed on the lower end of the coupling when not in use.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY - DESCRIPTION AND OPERATION

1. General

- A. The auxiliary hydraulic system is a supplementary hydraulic power system connected to the main hydraulic power system through the system selector valve and the auxiliary pump supply selector valve. The auxiliary hydraulic system consists of an electrically driven auxiliary hydraulic pump, an auxiliary pump relief valve, a surge damper accumulator, an auxiliary filter and check valve, and the piping required to interconnect the components and connect the auxiliary system to the main power system.
- B. In flight, the auxiliary hydraulic system can be used as supplemental power for the main power system. The auxiliary pump will also serve, when ground support equipment is not available, to pressurize the hydraulic power system for ground testing of the airplane hydraulic subsystems and components. Fluid is supplied to the auxiliary pump from a low standpipe in the hydraulic system reservoir. When the auxiliary pump is operated, fluid from the pressure outlet port of the auxiliary pump is ported, through the auxiliary power system filter and an auxiliary system check valve, to the auxiliary pressure inlet port of the system selector valve. When the system selector valve is in the normal position, auxiliary pump pressure is ported to the general system.
- C. When the auxiliary pump is not operating, the auxiliary system check valve prevents reverse flow through the auxiliary pump from the engine-driven pumps. An auxiliary pump relief valve is teed into the line from the auxiliary pump outlet port to the reservoir filter inlet port. The valve relieves and ports excess fluid pressure back to the reservoir if auxiliary pressure builds above 3300 psi.
- D. The auxiliary pump alternate reservoir is installed in the auxiliary hydraulic system to provide an alternate hydraulic fluid source in case of depletion of the normal supply to the hydraulic system reservoir. The alternate reservoir source is selectable by operation of the auxiliary hydraulic pump supply selector valve which actuates simultaneously with the hydraulic system selector valve.

2. System Components

- A. Auxiliary Hydraulic Pump - Airplanes N8070U-N8076U (See Figure 1.)
  - (1) The auxiliary hydraulic pump is an electrically driven, continuous-duty pressure-compensated, variable-displacement pump. An automatic pressure-sensing mechanism (compensator) within the pump regulates the amount of fluid delivered to the airplane hydraulic system. The quantity of delivery is dependent on the system pressure. Flow is reduced to zero when desired system pressure is achieved.

Feb 1/69



29-20-0  
CODE 7  
Page 1

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The internal components of the pump perform three major functions; mechanical drive (motor), fluid displacement (pistons), and pressure control (compensator). Mechanical drive is supplied by a 200-vac, 3-phase, 400-cycle electric motor.
  - (3) As the hydraulic fluid from the reservoir enters the inlet port, the fluid is displaced by axial piston motion. As a piston advances in a cylinder bore, it forces a quantity of fluid past the pump check at the end of the bore. When the piston bypass holes become aligned hydraulically with the cylinder block passage, pressurized fluid also escapes to bypass; then a combination of spring pressure and system back pressure closes the pump checks. In the withdrawal portion of the piston stroke, a partial vacuum is created in the cylinder bore, allowing new fluid from the intake to flow into the bore from the pressurized reservoir. The quantity of fluid delivered by each piston stroke is controlled by relief holes in the pistons and piston sleeves.
  - (4) Unless the relief holes are covered by the piston sleeves, no fluid is forced past the pump checks. Quantity of delivery is therefore determined by the position of the piston sleeves, which in turn is determined by system pressure bled through the compensator orifices. Because one sleeve is slightly longer than the others, the pump, even when in full cutoff, continues to pump enough fluid to make up for any minor drop in the system pressure due to leakage.
  - (5) Pressure control: System pressure, acting through the compensator orifice on the compensator stem, controls the piston sleeve position and, therefore, determines whether the pump delivers at full capacity, partial capacity, or cuts off entirely. Path of fluid flow through the pump remains the same in all three conditions. When the pressure at the outlet port reaches 2700 psi, pressure in the compensator commences to reduce the output until 3000 psi is reached, at which time fluid flow is zero. The bypass system is provided to supply self-lubrication, particularly when the pump is in non-delivery (cutoff) operation. The ring of bypass holes in the pistons is hydraulically aligned with the bypass passage each time a piston reaches the very end of its forward travel period. This pumps a small quantity of fluid out of the bypass passage back to the supply reservoir and provides a constant changing of the fluid in the pump. The bypass is designed to pump against a considerable back pressure for use with pressurized hydraulic reservoirs.
- B. Auxiliary Hydraulic Pump - Airplanes N8077U and Subsequent (See Figure 2.)

- (1) The auxiliary hydraulic pump, located in the left wing root access area, supplies hydraulic pressure for the auxiliary hydraulic system. The pump consists of an air cooled electric motor directly coupled through a shaft and centrifugal boost pump impeller to a variable displacement hydraulic pump.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

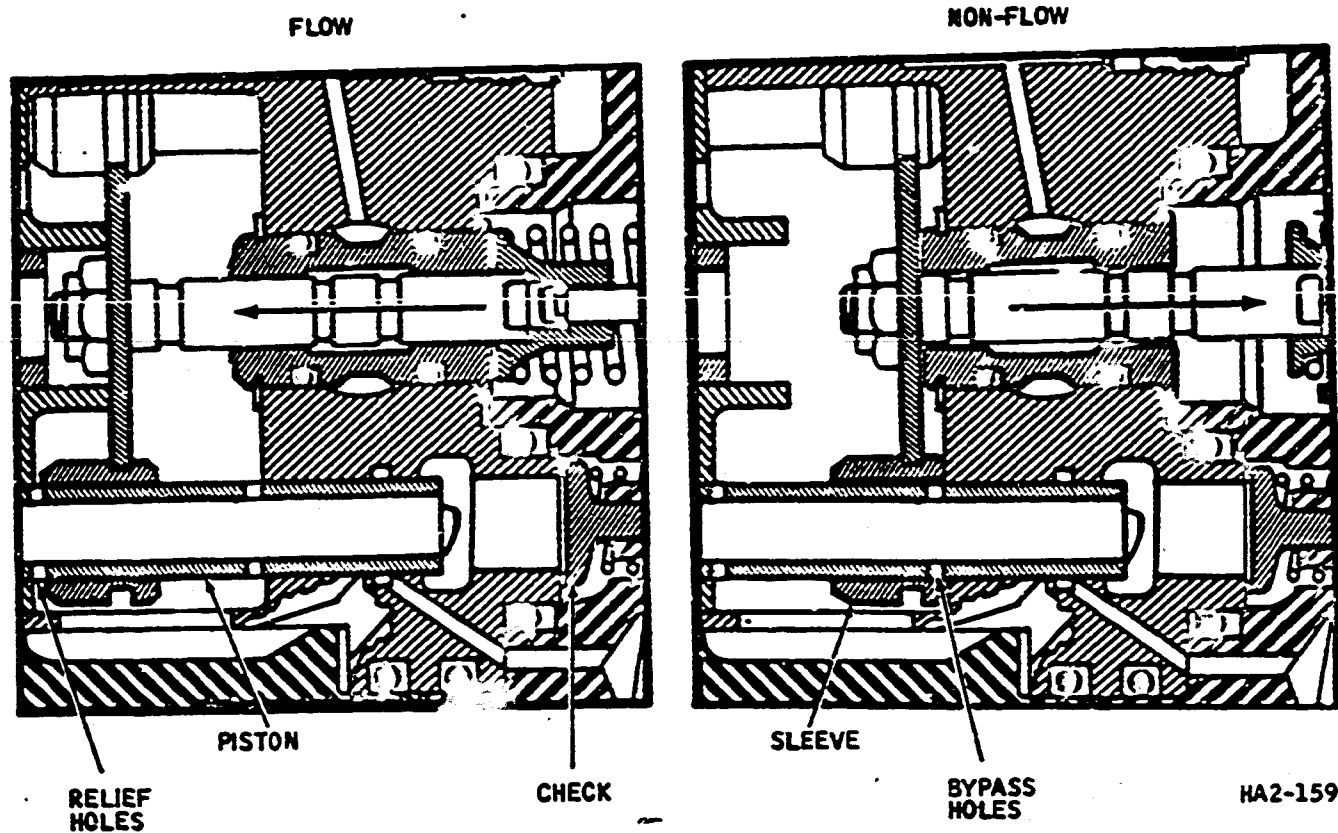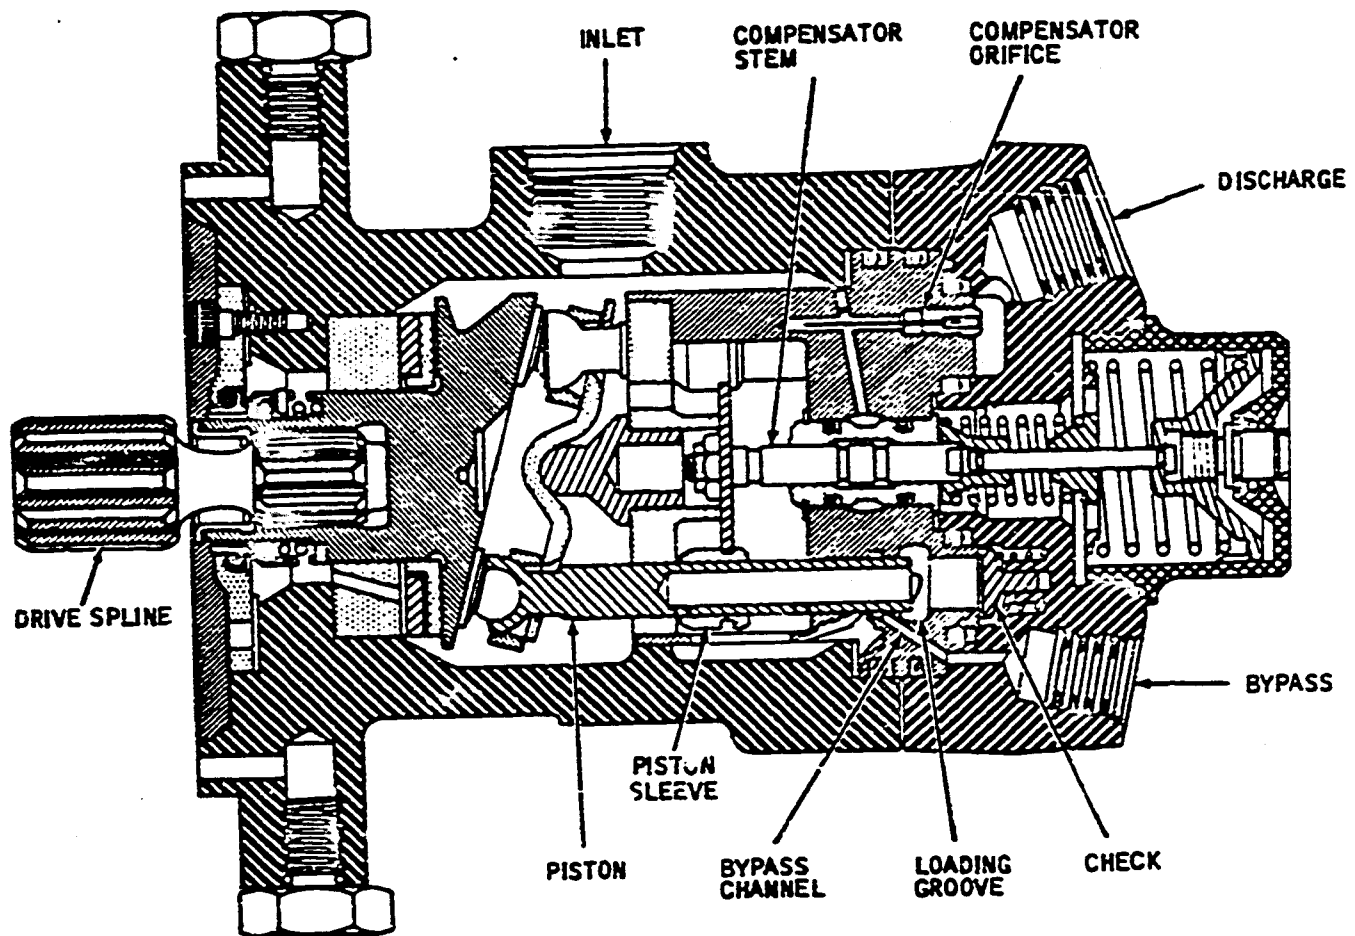


HA2-159

Auxiliary Hydraulic Pump -- Cutaway View  
 Figure 1


29-20-0  
 CODE 7  
 Page 3

Feb 1/69

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

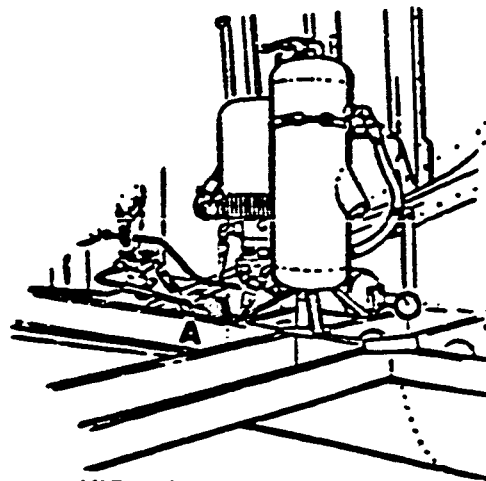

VIEW LOOKING FORWARD AND  
INBOARD AT LEFT WING ROOT AREA

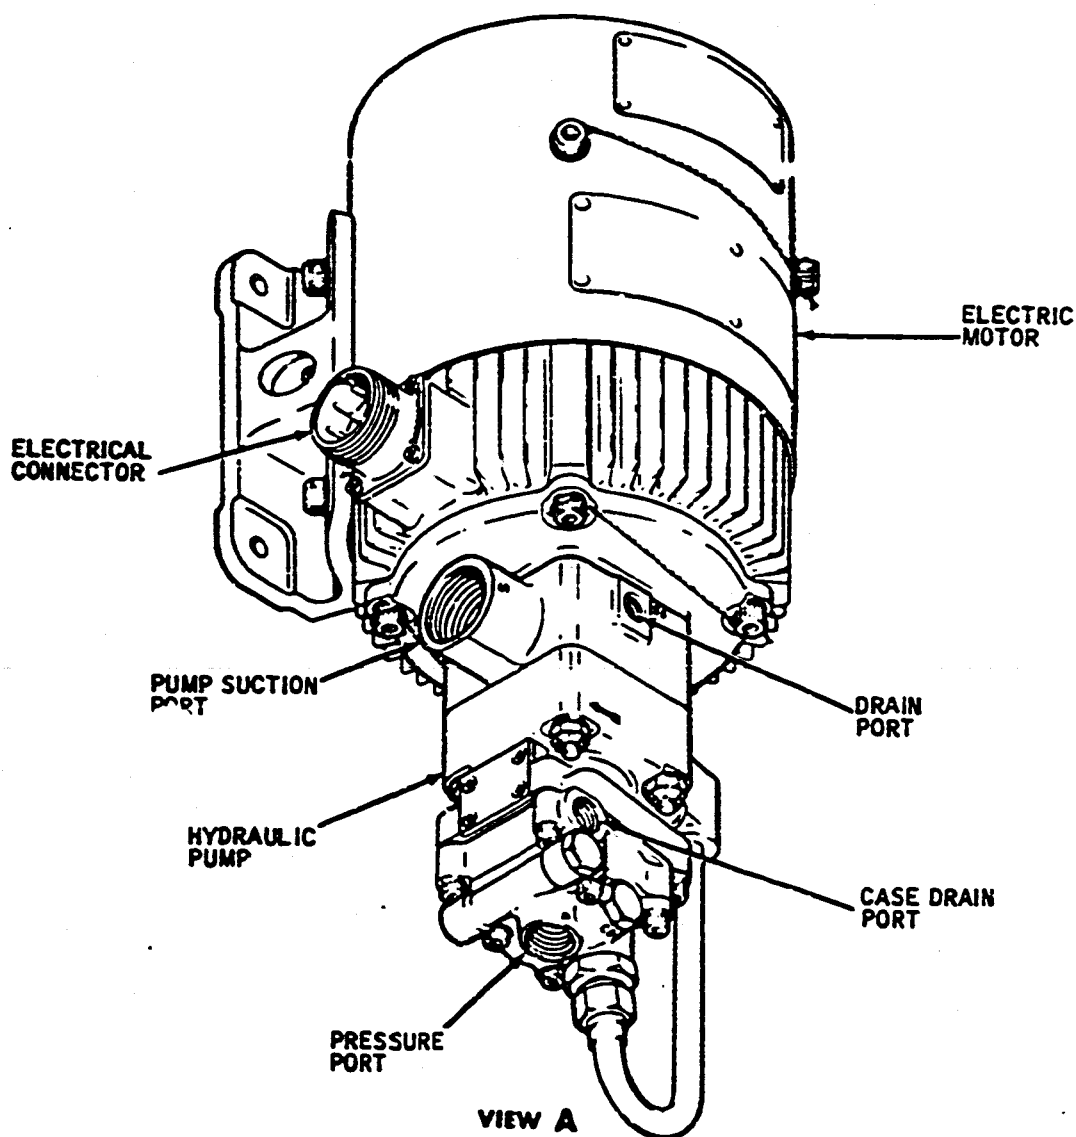

HA2-3547

29-20-0  
CODE 7  
Page 4

Auxiliary Hydraulic Pump  
Figure 2

Feb 1/69



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) The electric motor is a 115/200-volt, 3-phase, 400-cps, continuous duty motor rated at 6.5 hp at 11,300 rpm. The motor rotor has an internally splined output shaft which fits on the externally splined input shaft of the pump. The other end of the rotor shaft drives a cooling fan which forces cooling air between the motor case and the outer shroud. A thermoswitch located in the motor case is provided to shut off the motor in case of an overheat condition. An override function of the control switch in the flight compartment is provided to override the thermoswitch for emergency operation.
- (3) The centrifugal boost pump impeller is located on the drive shaft between the motor and the variable displacement pump. The impeller draws hydraulic fluid from the system and supplies it through an external tube to the inlet port of the variable displacement pump under pressure, thereby helping to prevent cavitation of the pump.
- (4) The variable displacement hydraulic pump consists of the following major parts: a four piece housing, drive shaft with impeller, axial cylinder barrel containing 9 pistons, pivoting hanger with an inclined camface, hold down plate, pressure compensating valve, and bearings.
- (5) When the electric motor is actuated, the drive shaft rotates the boost pump impeller and the cylinder and piston group. Each revolution of the cylinder causes one complete stroke of each piston. The pistons are held against the camface of the hanger by the hold down plate, providing positive piston return. The displacement of fluid from the pump discharge port is controlled by the compensator valve. The pump provides full flow of 3.9 gpm at system pressures up to approximately 2700 psi. At this point, the compensator valve reduces flow until at approximately 3000 psi, displacement of fluid is reduced to zero.

**C. Auxiliary Hydraulic Pump Alternate Reservoir**

- (1) The auxiliary hydraulic pump alternate reservoir is installed on the shear web in the left wing root area, immediately aft of the auxiliary hydraulic pump. Access to the reservoir is through the left wing root access door. The alternate reservoir supplies hydraulic fluid to the auxiliary hydraulic pump in the event the fluid supply from the main hydraulic system reservoir is exhausted.
- (2) The reservoir is cylindrical in shape and has a fluid capacity of approximately 1.9 US gallons (1.6 Imperial gallons or 7.3 liters). There are four ports on the reservoir: an outlet port to the auxiliary hydraulic pump selector valve located at the bottom, an inlet port from the auxiliary hydraulic pump bypass located near the top on the side, an inlet from the wing flap return line, and an outlet to the main hydraulic reservoir located at the top. A sight gage is installed near the top of the reservoir for visual indication of fluid level, and a mounting boss for the emergency hydraulic level indicating light switch is installed on the side of the reservoir.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) The reservoir is kept full during operation by routing fluid from the wing flap return line to the reservoir. Fluid in excess of the alternate reservoir capacity is then routed to the main hydraulic system reservoir capacity is then routed to the main hydraulic system reservoir. Hydraulic fluid from the auxiliary pump bypass is routed to the alternate reservoir and then to the main reservoir. Fluid is used from the alternate reservoir only when the auxiliary pump is operating and the auxiliary pump supply selector valve is in the alternate position. Fluid supply to the alternate reservoir is replenished whenever the wing flaps are operated.


**D. Auxiliary Hydraulic Pump Supply Selector Valve (See Figure 3.)**

- (1) The auxiliary hydraulic pump supply valve is a 2-position valve that ports hydraulic fluid from the reservoir, through a common outlet, to the auxiliary pump. The selector valve is located on the shear web in the left wing root, near the auxiliary pump. The selector valve is accessible through the left wing root access door.
- (2) The valve body has two inlet ports and one outlet port. The outlet port is centrally located on the aft side of the valve body. The two inlet ports are located on the outboard side of the valve body, 90 degrees from the outlet port. Two mounting flanges are located on the inboard side of the valve body. These flanges are an integral part of the valve body.
- (3) During normal operation, fluid is taken from a low standpipe in the main hydraulic system reservoir and ported to the auxiliary pump. When the valve is in the alternate position, fluid is taken from the auxiliary hydraulic pump alternate reservoir and ported to the auxiliary pump. The valve is moved from the auxiliary position to the alternate position by placing the hydraulic system selector control lever, located on the system engineer's control pedestal, to the general system/main gear downlock and flaps position.


**E. Auxiliary Hydraulic Pump Relief Valve (See Figure 4.)**

- (1) The auxiliary hydraulic pump relief valve is a spring loaded poppet-type valve and serves to relieve excess fluid pressure that may build up in the auxiliary hydraulic system. The relief valve connects, through a reducer, to a tee in the A return port of the hydraulic system reservoir. The valve is accessible through the left wing root access door.
- (2) Externally, the valve body is cylindrical, approximately 5 inches in length, and 1 inch in diameter. The outlet end of the valve is slightly larger than the inlet end.
- (3) When pressure builds up, the poppet starts to relieve at approximately 3300 psi. If pressure continues to build up, the poppet continues to open until 3500 psi and a maximum flow of 3.5 gpm are reached. When pressure is relieved, the poppet reseats at 90 percent of the unseat pressure.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

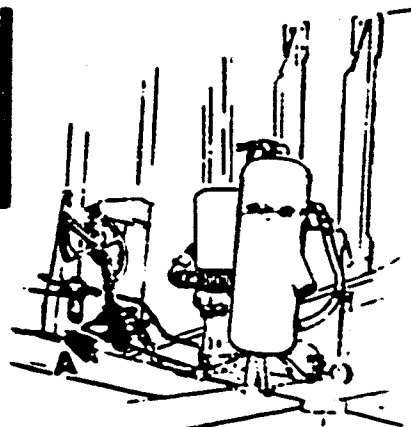

VIEW LOOKING INTO LEFT  
 WING ROOT AREA

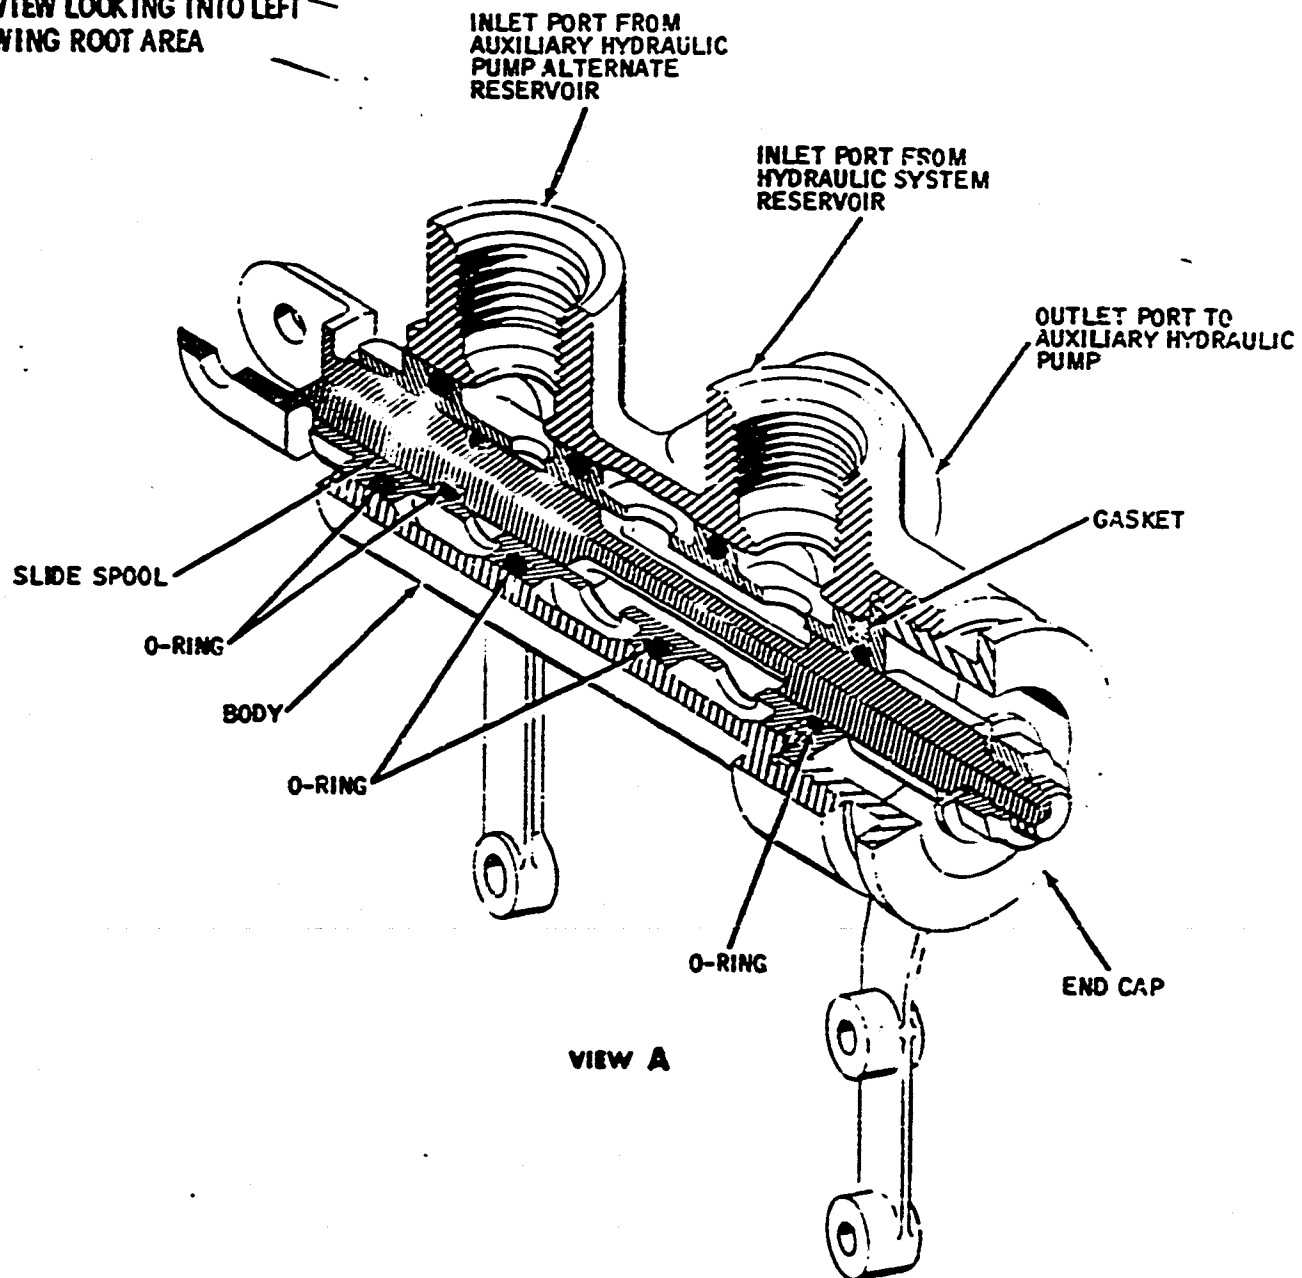



Auxiliary Hydraulic Pump Supply Selector  
 Valve -- Cutaway View  
 Figure-3

Feb 1/69

HA2-160A

29-20-0  
 CODE 7  
 Page 7

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

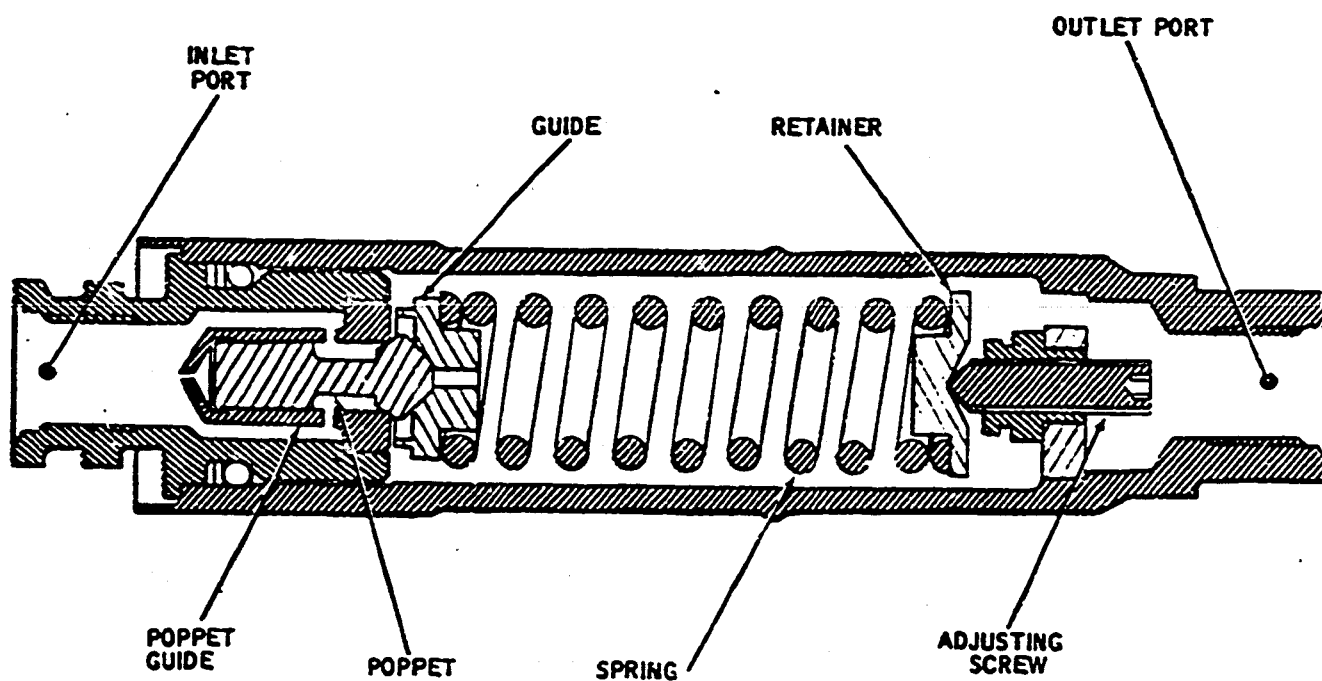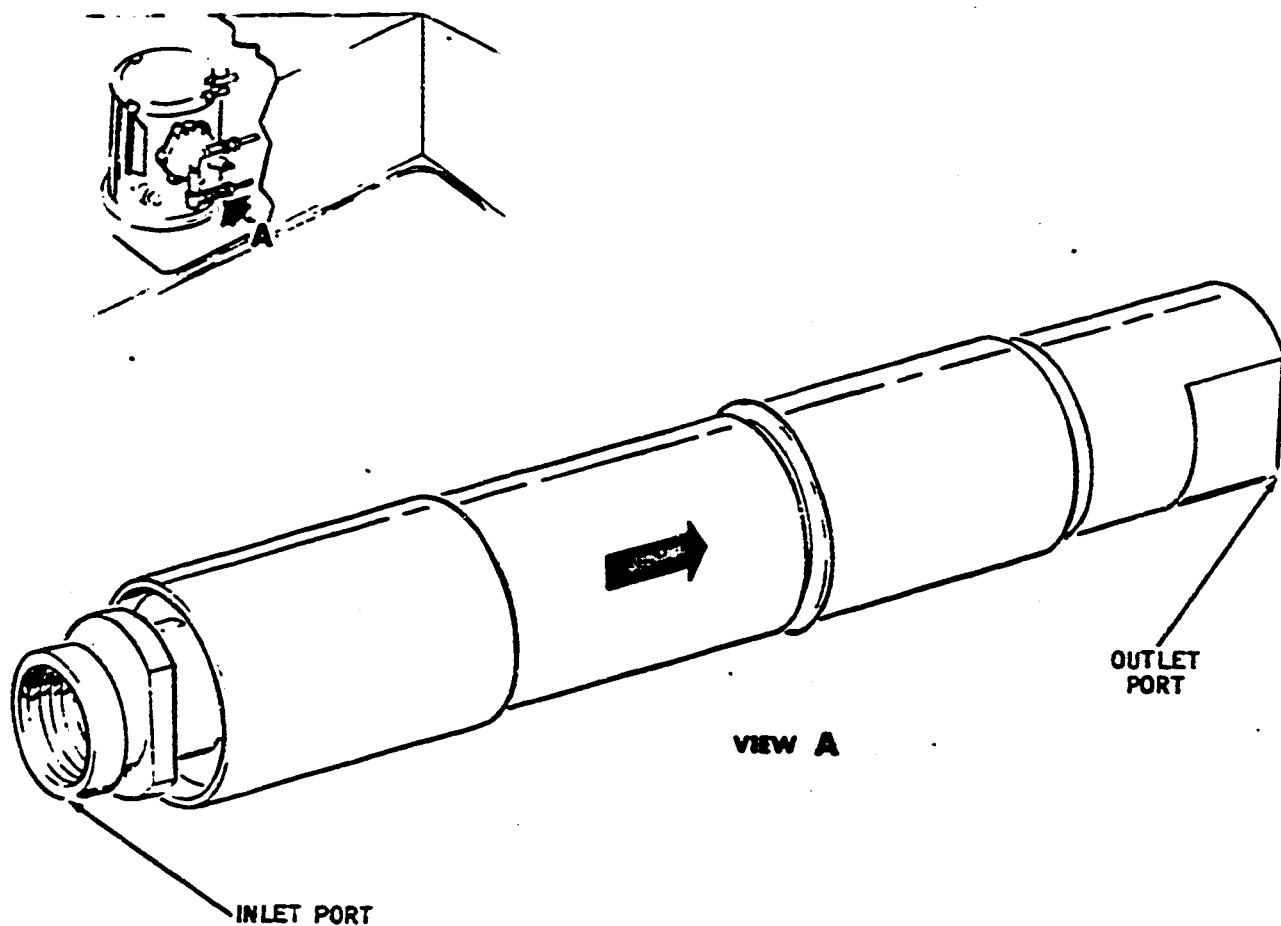

HA2-161

29-20-0  
 CODE 7  
 Page 8

Auxiliary Hydraulic Pump Relief Valve -- Cutaway View  
 Figure 4

Feb 1/69

Printed in U.S.A.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

F. Auxiliary Hydraulic System Filter (See Figure 5.)

- (1) A line-type, 10 micron filter assembly is installed in the piping of the auxiliary system to filter fluid from the pressure outlet port of the auxiliary pump to the system selector valve. The filter is located on the bulkhead near the forward inboard corner of the left main gear wheel well, slightly inboard and above the dual filter and relief valve. It is accessible through the left main gear inboard door.
- (2) The inlet and outlet ports of the filter are internally threaded and are marked in and out. The filter bowl is cylindrical in shape, with wrench flats at the lower end, and is threaded into the assembly immediately below the ports. A hex-shaped magnetic plug is installed in the drain port. The filter element is stainless steel mesh, supported by a perforated cylindrical center core.

G. Auxiliary Hydraulic Pump Bypass Line Filter (See Figure 6.)

- (1) Airplanes N8095U - N8099U, N8966U and subsequent are equipped with a disposable auxiliary hydraulic pump bypass line filter. The bypass line filter is supported by an elbow connection to the side port of the alternate reservoir with the pump bypass line connecting to the bottom of the filter.



H. Auxiliary Hydraulic System Check Valve

- (1) The auxiliary hydraulic system check valve is a spring-loaded, poppet-type valve with a rated capacity of 3000 psi. This valve is installed in the line between the auxiliary hydraulic system filter and the system selector valve to prevent reverse flow of hydraulic fluid through the filter and the auxiliary pump when the engine-driven pumps or external pressure supply are used.
- (2) The auxiliary hydraulic system check valve is located in the left wheel well, just above the dual filter and relief valve. The auxiliary hydraulic system check valve is accessible through the left wheel well.
- (3) Externally and internally, this valve is similar to the engine-driven hydraulic pump check valve, except for size.

I. Auxiliary Hydraulic System Surge Damper Accumulator (See Figure 7.)


- (1) The auxiliary hydraulic system surge damper accumulator consists of two spherical domes, separated by a diaphragm and held together by a ring nut. An air filler valve and gage are installed on the accumulator. The accumulator is installed in the auxiliary hydraulic pump pressure line just inboard and aft of the auxiliary pump, and is attached to the shear web by two clamp blocks. Access to the accumulator is through the left wing root access door.
- (2) The accumulator is initially charged to 1000 psi with dry nitrogen. As the auxiliary system pressure builds up, fluid is forced against the

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

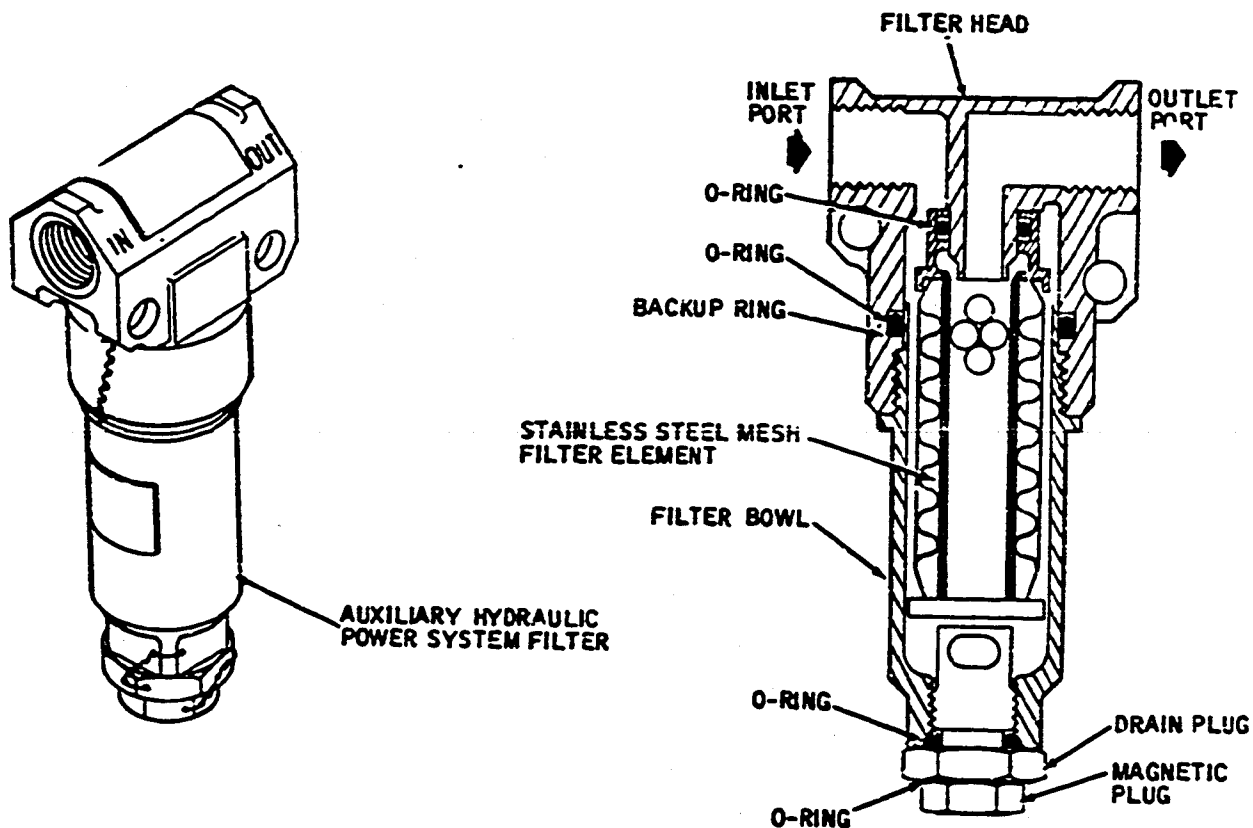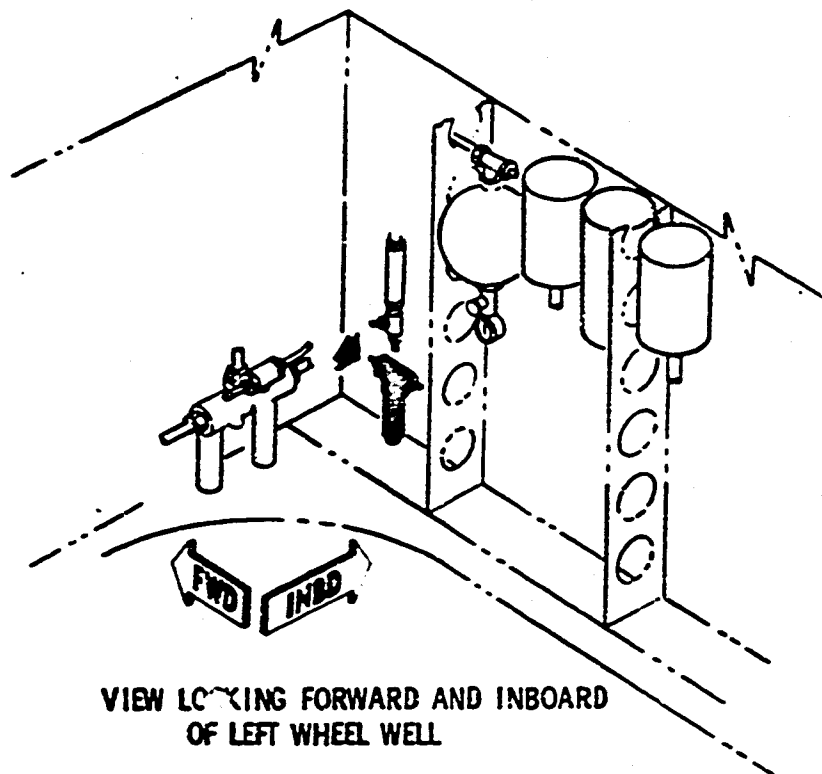

HA2-162

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

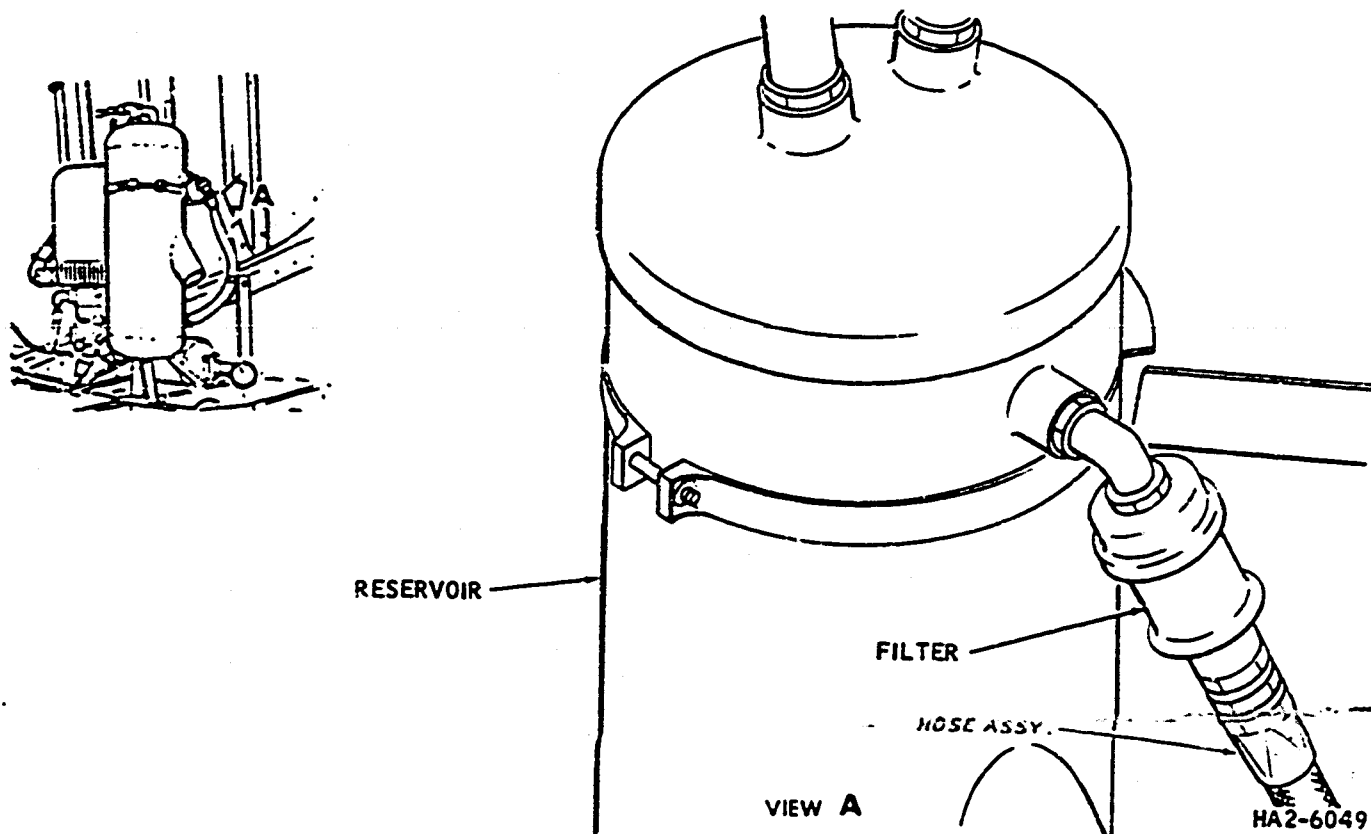


Auxiliary Hydraulic Pump Bypass Line Filter  
(Airplanes N8095U-N8099U and N8966U and Subsequent)  
Figure 6

Aug 1/69

29-20-0  
CODE 7  
Page 11

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

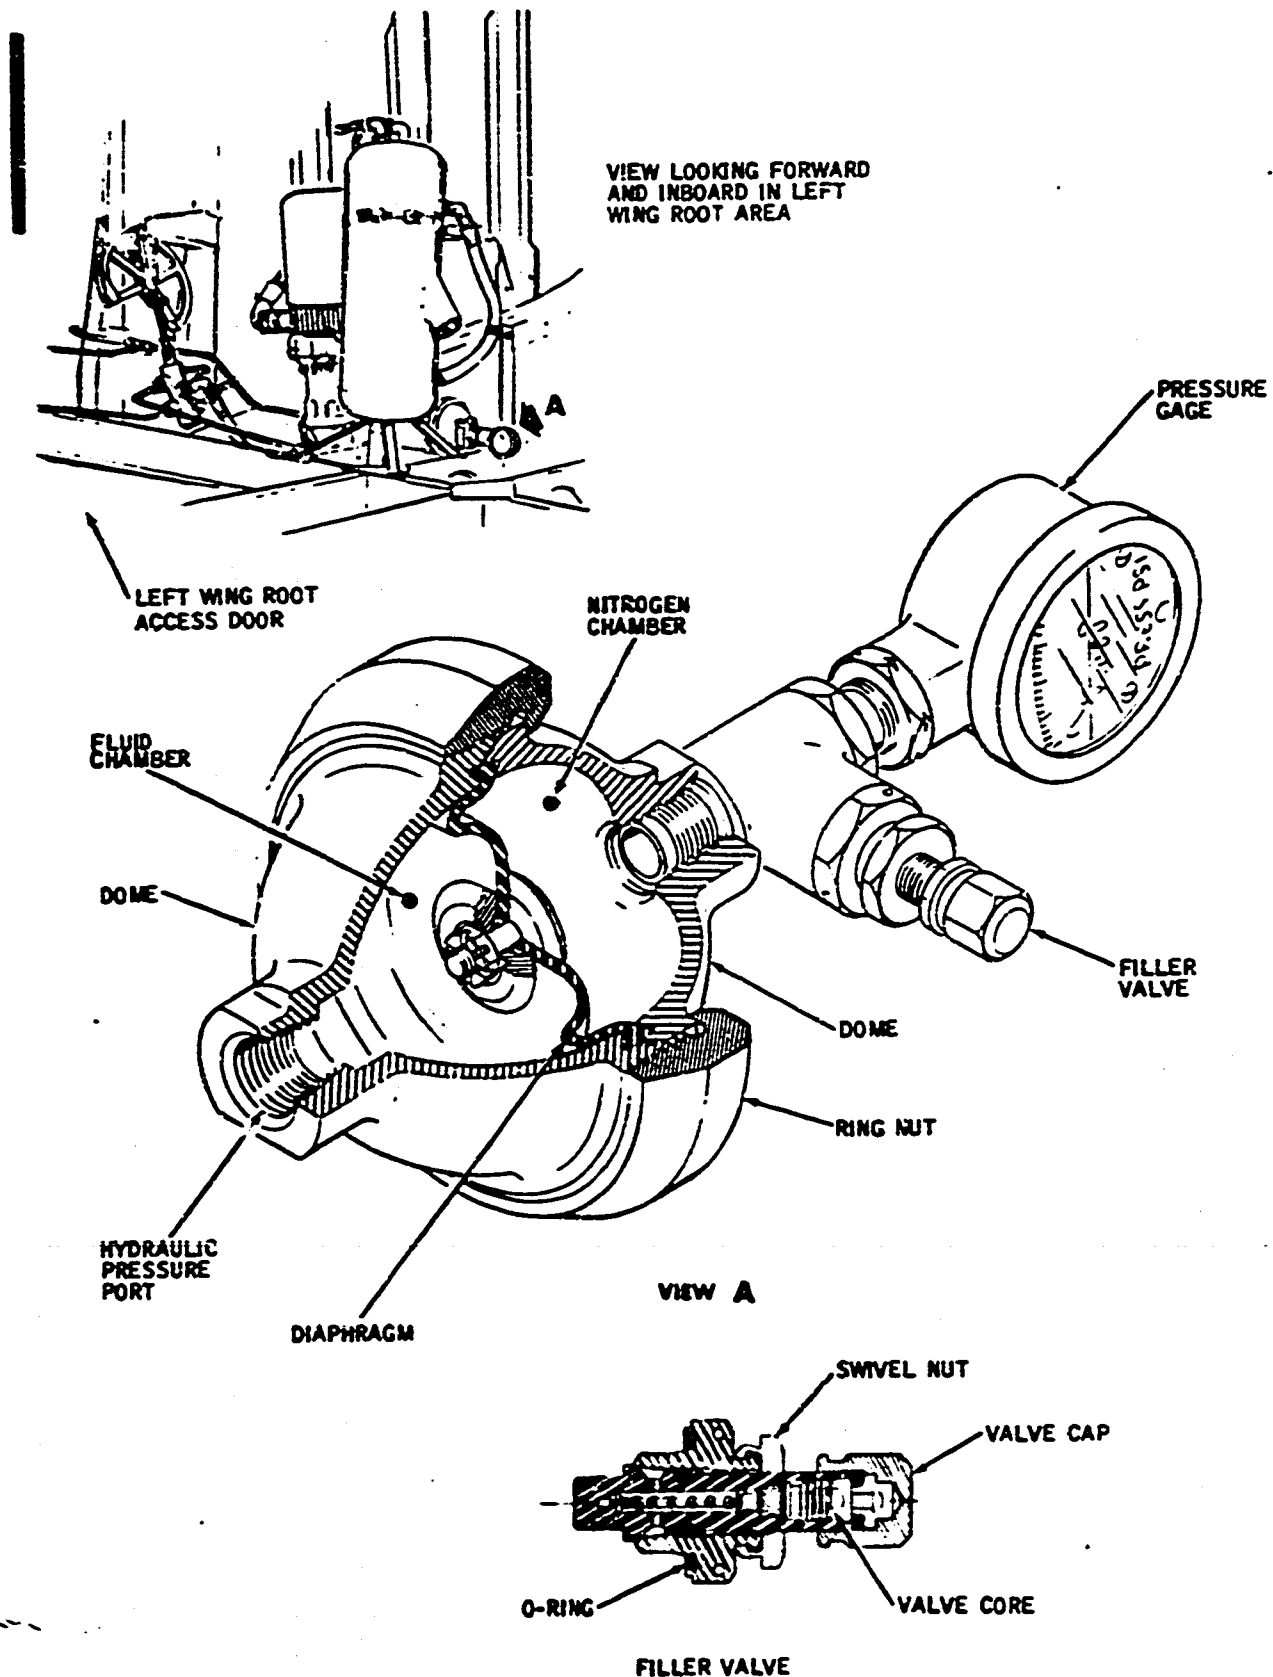

HA2-163A

Auxiliary Hydraulic Power System Surge Damper  
 Accumulator -- Cutaway View  
 Figure 7



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

diaphragm in the accumulator, further compressing the trapped nitrogen in the air side of the accumulator to full system pressure (2600 to 3000 psi is indicated on the accumulator pressure gage). The air in the accumulator absorbs the initial shock of the auxiliary pump output and permits the system pressure to rise gradually. The accumulator also serves to cushion the piping and system components against high impact loads.

J. Auxiliary Hydraulic Pump Control

- (1) The auxiliary hydraulic pump control system consists of auxiliary hydraulic pump control switch, an auxiliary hydraulic pump control relay, and auxiliary hydraulic pump power relay, an electric motor, and an auxiliary pump on indicating light.
- (2) The auxiliary hydraulic pump control switch(es), located in the flight compartment, are 3-position switches. They are spring-loaded to the center position and have to momentary positions placarded start (hold only in emergency) and stop.
- (3) The electric motor for the auxiliary hydraulic pump is an ac, 3-phase motor. A thermostatic switch is included in the circuit to protect the motor from overheating.
- (4) The auxiliary hydraulic pump motor is supplied with power from the cabin bus 4. This permits pump operation from an external power source or from the airplane electrical system.
- (5) The auxiliary pump on indicating light is a blue press-to-test light, located adjacent to the auxiliary hydraulic pump control switch. The light is equipped with a dimming feature.
- (6) When the auxiliary hydraulic pump control switch is momentarily moved to the start position, the circuitry is completed between the auxiliary hydraulic pump control relay and cabin bus 4. The ground is through the stop contact of the switch and the thermostatic switch of the motor. Once the relay is energized, it remains energized through its own holding contacts. Through a closed contact of the pump control relay, power is supplied from cabin bus 4 to energize the hydraulic pump power relay. Through the closed contacts of the pump power relay, a power circuit is completed from the feeder leads of cabin bus 4 to the auxiliary hydraulic pump motor. The blue indicating light, located on the overhead switch panel, receives power through one of the closed contacts of the pump power relay. Therefore, the light is on whenever the pump power relay is energized.
- (7) The auxiliary hydraulic pump motor is safeguarded against overheating by the thermostatic switch. Under normal conditions, this switch is in the ground leg of the control relay. When an overheat condition occurs, the thermostatic switch opens the control relay circuit to limit the motor case to 450°F (252°C). This action deenergizes the control relay, which in turn deenergizes the power relay. In an emergency situation,

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL




the thermostatic switch can be overridden by holding the auxiliary hydraulic pump control switch in the start (hold only in emergency) position.

- (8) When the auxiliary hydraulic pump control switch is placed in the momentary stop position, the ground for the control relay is broken, deenergizing the power relay and removing power from the pump motor and the indicating light.

**K Ground Service Pressure and Supply Connectors (See Figure 8.)**

- (1) The ground service pressure and supply connectors are external fittings to which a service unit can be connected for operating the hydraulic power system when there is no power on the airplane. The connectors are located on a panel covered by an access door on the lower skin of the left wing root, aft of the rear spar.
- (2) The ground service pressure connector is made up of a check valve with a flared, bulkhead-type fitting on the inlet end and a standard tube fitting on the outlet end which connects the left engine-driven pump pressure line. The inlet fitting is covered with a dust cap when not in use.
- (3) The internal description of the connector is the same as that of the engine-driven hydraulic pump check valve (see 29-10-0, Description and Operation). The connector operates as a shutoff valve when the ground unit is not connected. When a ground hydraulic power source is connected to the pressure connector and pressure is applied, the poppet unseats and supplies pressure fluid to the hydraulic power system.
- (4) The supply connector is made up of a T-fitting and a self-sealing coupling half. The tee is female-threaded to accept the bulkhead-type fitting on the upper end of the coupling. The cross arms of the tee tie into the right engine-driven pump supply line with flared-type fittings. The tee is threaded onto the coupling half and is secured with a locknut. The coupling consists of a coupling body, male-threaded to accept the coupling half only from the ground source. The mounting flange has a recess to accept the hex portion of the coupling body, and has notches to retain the lockspring. A dustcap consisting of a union nut assembly, a dust plug, and a securing chain is installed on the lower end of the coupling when not in use.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

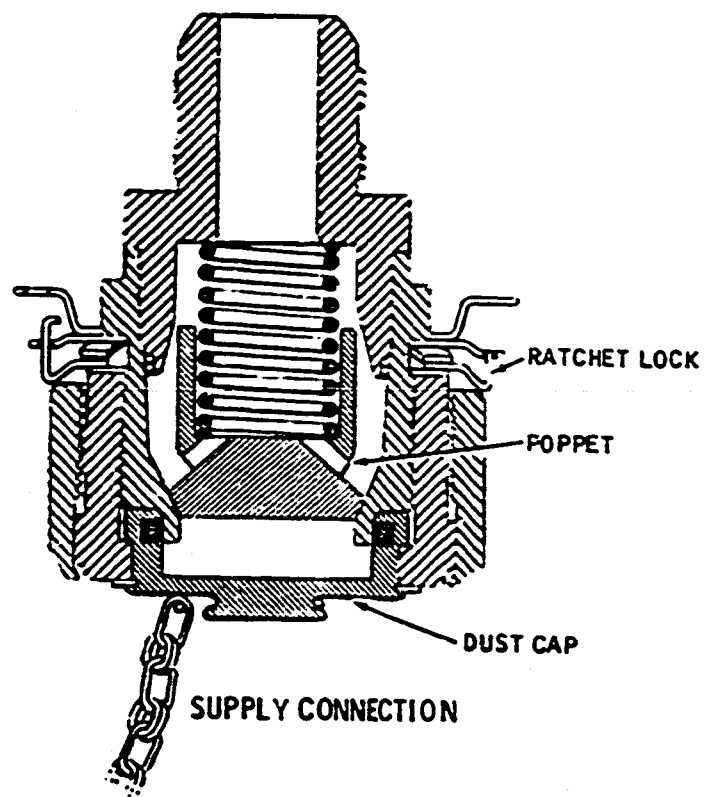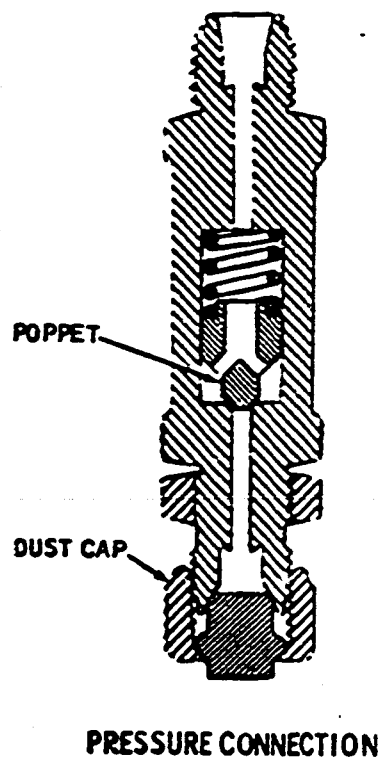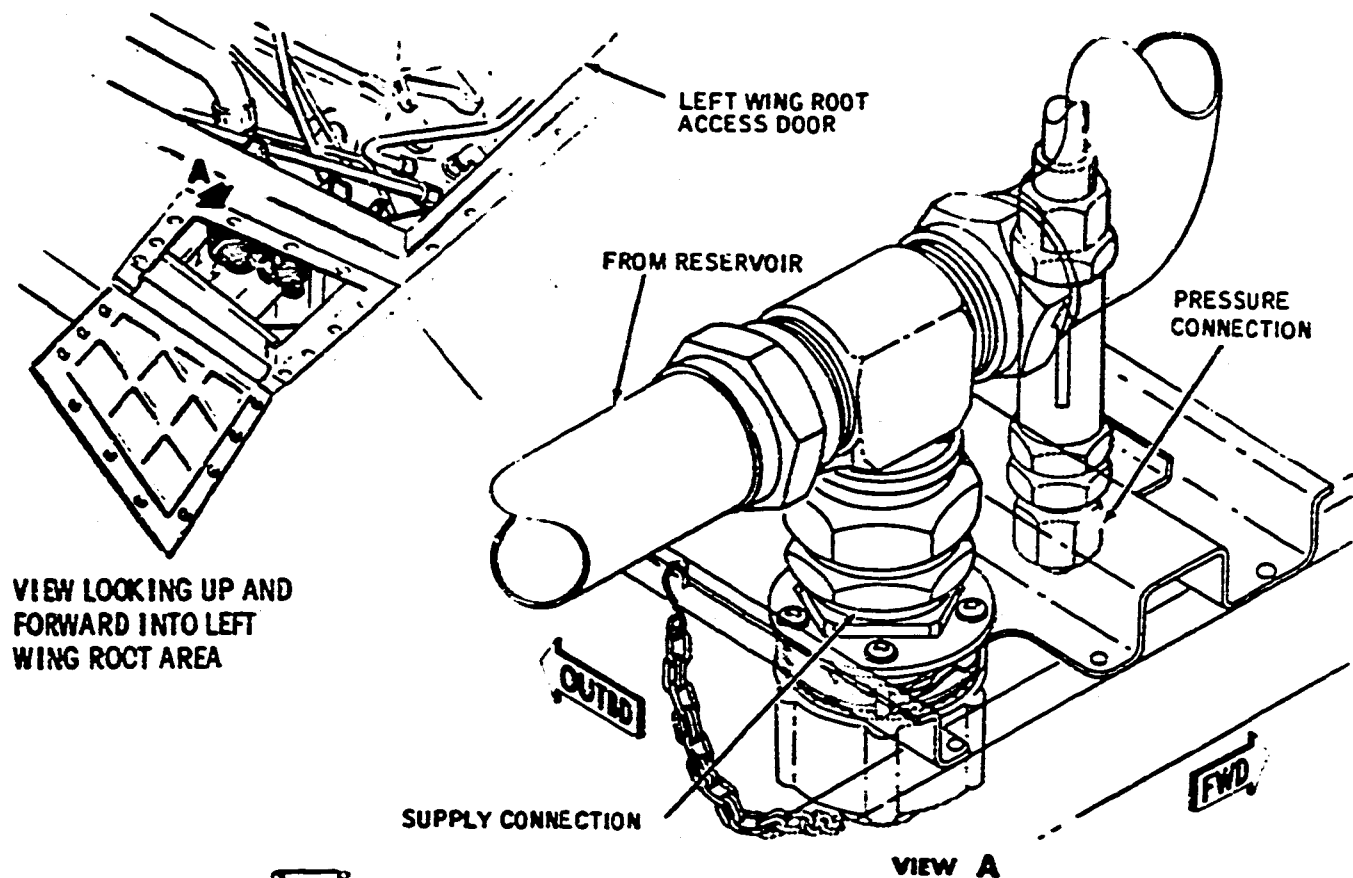

Ground Power Connectors -- Cutaway View  
 Figure 8

Feb 1/69

Printed in U.S.A.

HA2-164

29-20-0  
 CODE 7  
 Page 15

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY - TROUBLESHOOTING

1. Troubleshooting

Possible Causes	Isolation Procedure	Correction
<b>A. NO AUXILIARY PUMP HYDRAULIC SYSTEM PRESSURE</b>		
(1) Open circuit (blown limiter fuse) in one phase of electric power to motor.	Check limiter fuses to all three phases. Find cause of blown fuse.	Correct cause of blown fuse. Replace limiter fuse.
(2) Electrical system inoperative.	Check electrical system.	Repair as necessary.
(3) Hydraulic system selector in general system/main gear downlock and flaps position.	Check position of control lever.	Move lever to general system (normal) or bypass/general system position.
(4) Hydraulic reservoir fluid level too low.	Check reservoir fluid level.	Fill reservoir to proper level.
(5) Defective auxiliary pump selector valve.	Check function of valve.	Replace valve.
(6) Auxiliary pump relief valve bypassing fluid.	Check function of valve.	Replace valve.
(7) Defective auxiliary hydraulic pump.	Check function of pump.	Replace pump and motor.
(8) Open hydraulic line between auxiliary pump and selector valve.	Check lines for security of attachment and leaks.	Repair as necessary.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
<b>A. NO AUXILIARY PUMP HYDRAULIC SYSTEM PRESSURE (Continued)</b>		
(9) Damaged auxiliary pump electric motor.	Check motor operation.	Replace motor and pump.
(10) Defective thermostatic switch in auxiliary pump motor.	Check switch by overriding it.	Replace auxiliary pump and motor.
<b>B. LOW AUXILIARY PUMP HYDRAULIC SYSTEM PRESSURE</b>		
(1) Clogged auxiliary pump filter.	Check condition of filter element.	Replace filter element.
(2) Defective auxiliary pump relief valve.	Check function of relief valve.	Replace relief valve.
(3) Hydraulic leaks in auxiliary hydraulic system.	Check for broken lines or loose fittings.	Replace lines or tighten fittings.
(4) Defective auxiliary hydraulic pump.	Check function of pump.	Replace auxiliary pump and motor.
(5) Internal leakage of hydraulic system selector valve.	Place control lever in bypass/general system position and check auxiliary hydraulic pump pressure in flight compartment for 2800 to 3000 psi.	Note pressure and move control lever to next position.
	Place control lever in general system (normal) position and check auxiliary hydraulic pump pressure in flight compartment.	Pressure should be the same as that indicated in previous step. If pressure differs between steps, replace selector valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
<b>B. LOW AUXILIARY PUMP HYDRAULIC SYSTEM PRESSURE (Continued)</b>		
(6) Defective auxiliary pump electric motor.	Check motor operation.	Replace auxiliary pump and motor.
(7) Open circuit (blown limiter fuse) in one phase of electric power to motor.	Check fuses to all three phases. Find cause of blown fuse.	Correct cause of blown fuse, and replace fuse.
<b>C. AUXILIARY HYDRAULIC PUMP DOES NOT OPERATE IN ANY SWITCH POSITION</b>		
(1) No electric power.	Check circuit breaker position.	Close circuit breaker.
(2) Blown limiter fuses.	Check fuses for continuity. Find cause of blown fuse.	Correct cause of blown fuse and replace fuse.
(3) Faulty power relay.	Check relay.	Replace relay.
(4) Faulty control switch.	Check function of control switch.	Replace switch.
(5) Open circuit in wiring.	Check continuity of control circuit wiring.	Repair or replace wiring.
(6) Wiring in pump electrical connector or circuit in incorrect phase sequence.	Use phase sequence lights to check phase rotation in pump power circuit.	Make correct connections and check phase rotation.
(7) Faulty control relay.	Check relay.	Replace relay.
(8) Defective pump motor.	Completion of steps (1) through (7) with no fault discovered.	Replace pump and motor.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
<b>D. AUXILIARY HYDRAULIC PUMP ONLY OPERATES WHEN HELD IN START POSITION</b>		
(1) Faulty control relay.	Check relay.	Replace relay.
(2) Faulty control switch.	Check continuity of control switch.	Replace switch.
(3) Open wiring in control circuit.	Check continuity of control circuit wiring.	Repair or replace wiring.
(4) Faulty thermoswitch in motor.	Check continuity of thermoswitch.	Replace pump and motor.
<b>E. AUXILIARY HYDRAULIC PUMP DOES NOT STOP WHEN SWITCH PLACED IN STOP POSITION</b>		
(1) Faulty control switch.	Check continuity of control switch.	Replace switch.
(2) Faulty control relay.	Check relay.	Replace relay.
(3) Faulty control circuit wiring.	Check continuity of wiring.	Repair or replace wiring.
<b>F. INDICATING LIGHT INOPERATIVE</b>		
(1) Burned out lamp.	Check lamp.	Replace lamp.
(2) Faulty press-to-test switch.	Check switch.	Replace light.
(3) Faulty wiring to press-to-test switch.	Check continuity of wiring to switch.	Repair or replace wiring.
(4) Faulty indicating light wiring.	Check continuity of indicating light wiring.	Repair or replace wiring.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY - TROUBLESHOOTING

1. Troubleshooting

Possible Causes	Isolation Procedure	Correction
<b>A. NO AUXILIARY PUMP HYDRAULIC SYSTEM PRESSURE</b>		
(1) Open circuit (blown limiter fuse) in one phase of electric power to motor.	Check limiter fuses to all three phases. Find cause of blown fuse.	Correct cause of blown fuse. Replace limiter fuse.
(2) Electrical system inoperative.	Check electrical system.	Repair as necessary.
(3) Hydraulic system selector in general system/flaps only position.	Check position of control lever.	Move lever to general system (normal) or bypass/general system position.
(4) Hydraulic reservoir fluid level too low.	Check reservoir fluid level.	Fill reservoir to proper level.
(5) Defective auxiliary pump selector valve.	Check function of valve.	Replace valve.
(6) Auxiliary pump relief valve bypassing fluid.	Check function of valve.	Replace valve.
(7) Defective auxiliary hydraulic pump.	Check function of pump.	Replace pump and motor.
(8) Open hydraulic line between auxiliary pump and selector valve.	Check lines for security of attachment and leaks.	Repair as necessary.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
<b>A. NO AUXILIARY PUMP HYDRAULIC SYSTEM PRESSURE (Continued)</b>		
(9) Damaged auxiliary pump electric motor.	Check motor operation.	Replace motor and pump.
(10) Defective thermostatic switch in auxiliary pump motor.	Check switch by overriding it.	Replace auxiliary pump and motor.
<b>B. LOW AUXILIARY PUMP HYDRAULIC SYSTEM PRESSURE</b>		
(1) Clogged auxiliary pump filter.	Check condition of filter element.	Replace filter element.
(2) Defective auxiliary pump relief valve.	Check function of relief valve.	Replace relief valve.
(3) Hydraulic leaks in auxiliary hydraulic system.	Check for broken lines or loose fittings.	Replace lines or tighten fittings.
(4) Defective auxiliary hydraulic pump.	Check function of pump.	Replace auxiliary pump and motor.
(5) Internal leakage of hydraulic system selector valve.	Place control lever in bypass/general system position and check auxiliary hydraulic pump pressure in flight compartment for 2800 to 3000 psi.	Note pressure and move control lever to next position.
	Place control lever in general system (normal) position and check auxiliary hydraulic pump pressure in flight compartment.	Pressure should be the same as that indicated in previous step. If pressure differs between steps, replace selector valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
<b>B. LOW AUXILIARY PUMP HYDRAULIC SYSTEM PRESSURE (Continued)</b>		
(6) Defective auxiliary pump electric motor.	Check motor operation.	Replace auxiliary pump and motor.
(7) Open circuit (blown limiter fuse) in one phase of electric power to motor.	Check fuses to all three phases. Find cause of blown fuse.	Correct cause of blown fuse, and replace fuse.
<b>C. AUXILIARY HYDRAULIC PUMP DOES NOT OPERATE IN ANY SWITCH POSITION</b>		
(1) No electric power.	Check circuit breaker position.	Close circuit breaker.
(2) Blown limiter fuses.	Check fuses for continuity. Find cause of blown fuse.	Correct cause of blown fuse and replace fuse.
(3) Faulty power relay.	Check relay.	Replace relay.
(4) Faulty control switch.	Check function of control switch.	Replace switch.
(5) Open circuit in wiring	Check continuity of control circuit wiring.	Repair or replace wiring.
(6) Wiring in pump electrical connector or circuit in incorrect phase sequence.	Use phase sequence lights to check phase rotation in pump power circuit.	Make correct connections and check phase rotation.
(7) Faulty control relay.	Check relay.	Replace relay.
(8) Defective pump motor.	Completion of steps (1) through (7) with no fault discovered.	Replace pump and motor.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
<b>D. AUXILIARY HYDRAULIC PUMP ONLY OPERATES WHEN HELD IN START POSITION</b>		
(1) Faulty control relay.	Check relay.	Replace relay.
(2) Faulty control switch.	Check continuity of control switch.	Replace switch.
(3) Open wiring in control circuit.	Check continuity of control circuit wiring.	Repair or replace wiring.
(4) Faulty thermo-switch in motor.	Check continuity of thermostwitch.	Replace pump and motor.
<b>E. AUXILIARY HYDRAULIC PUMP DOES NOT STOP WHEN SWITCH PLACED IN STOP POSITION</b>		
(1) Faulty control switch.	Check continuity of control switch.	Replace switch.
(2) Faulty control relay.	Check relay.	Replace relay.
(3) Faulty control circuit wiring.	Check continuity of wiring.	Repair or replace wiring.
<b>F. INDICATING LIGHT INOPERATIVE</b>		
(1) Burned out lamp.	Check lamp.	Replace lamp.
(2) Faulty press-to-test switch.	Check switch.	Replace light.
(3) Faulty wiring to press-to-test switch.	Check continuity of wiring to switch.	Repair or replace wiring.
(4) Faulty indicating light wiring.	Check continuity of indicating light wiring.	Repair or replace wiring.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY - TROUBLE SHOOTING

1. Trouble Shooting

Possible Causes	Isolation Procedure	Correction
<b>A. NO AUXILIARY PUMP HYDRAULIC SYSTEM PRESSURE</b>		
(1) Open circuit (blown limiter fuse) in one phase of electric power to motor.	Check limiter fuses to all three phases. Find cause of blown fuse.	Correct cause of blown fuse. Replace limiter fuse.
(2) Electrical system inoperative.	Check electrical system.	Repair as necessary.
(3) Hydraulic system selector in general system/flaps only position.	Check position of control lever.	Move lever to general system (normal) or bypass/general system position.
(4) Hydraulic reservoir fluid level too low.	Check reservoir fluid level.	Fill reservoir to proper level.
(5) Defective auxiliary pump selector valve.	Check function of valve.	Replace valve.
(6) Auxiliary pump relief valve bypassing fluid.	Check function of valve.	Replace valve.
(7) Defective auxiliary hydraulic pump.	Check function of pump.	Replace pump and motor.
(3) Open hydraulic line between auxiliary pump and selector valve.	Check lines for security of attachment and leaks.	Repair as necessary.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
<b>A. NO AUXILIARY PUMP HYDRAULIC SYSTEM PRESSURE (Continued)</b>		
(9) Damaged auxiliary pump electric motor.	Check motor operation.	Replace motor and pump.
(10) Defective thermostatic switch in auxiliary pump motor.	Check switch by overriding it.	Replace auxiliary pump and motor.
<b>B. LOW AUXILIARY PUMP HYDRAULIC SYSTEM PRESSURE</b>		
(1) Clogged auxiliary pump filter.	Check condition of filter element.	Replace filter element.
(2) Defective auxiliary pump relief valve.	Check function of relief valve.	Replace relief valve.
(3) Hydraulic leaks in auxiliary hydraulic system.	Check for broken lines or loose fittings.	Replace lines or tighten fittings.
(4) Defective auxiliary hydraulic pump.	Check function of pump.	Replace auxiliary pump and motor.
(5) Internal leakage of hydraulic system selector valve.	Place control lever in bypass/general system position and check auxiliary hydraulic pump pressure in flight compartment for 2800 to 3000 psi.	Note pressure and move control lever to next position.
	Place control lever in general system (normal) position and check auxiliary hydraulic pump pressure in flight compartment.	Pressure should be the same as that indicated in previous step. If pressure differs between steps, replace selector valve.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
<b>B. LOW AUXILIARY PUMP HYDRAULIC SYSTEM PRESSURE (Continued)</b>		
(6) Defective auxiliary pump electric motor.	Check motor operation.	Replace auxiliary pump and motor.
(7) Open circuit (blown limiter fuse) in one phase of electric power to motor.	Check fuses to all three phases. Find cause of blown fuse.	Correct cause of blown fuse, and replace fuse.
<b>C. AUXILIARY HYDRAULIC PUMP DOES NOT OPERATE IN ANY SWITCH POSITION</b>		
(1) No electric power.	Check circuit breaker position.	Close circuit breaker.
(2) Blown limiter fuses.	Check fuses for continuity. Find cause of blown fuse.	Correct cause of blown fuse and replace fuse.
(3) Faulty power relay.	Check relay.	Replace relay.
(4) Faulty control switch.	Check function of control switch.	Replace switch.
(5) Open circuit in wiring.	Check continuity of control circuit wiring.	Repair or replace wiring.
(6) Wiring in pump electrical connector or circuit in incorrect phase sequence.	Use phase sequence lights to check phase rotation in pump power circuit.	Make correct connections and check phase rotation.
(7) Faulty control relay.	Check relay.	Replace relay.
(8) Defective pump motor.	Completion of steps (1) through (7) with no fault discovered.	Replace pump and motor.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
-----------------	---------------------	------------

D. AUXILIARY HYDRAULIC PUMP ONLY OPERATES WHEN HELD IN START POSITION

(1) Faulty control relay.	Check relay.	Replace relay.
(2) Faulty control switch.	Check continuity of control switch.	Replace switch.
(3) Open wiring in control circuit.	Check continuity of control circuit wiring.	Repair or replace wiring.
(4) Faulty thermo-switch in motor.	Check continuity of thermoswitch.	Replace pump and motor.
(5) Faulty cargo door control switch	Check continuity of cargo door control switch.	Readjust or replace switch as required.

E. AUXILIARY HYDRAULIC PUMP DOES NOT STOP WHEN SWITCH PLACED IN STOP POSITION

(1) Faulty control switch.	Check continuity of control switch.	Replace switch.
(2) Faulty control relay.	Check relay.	Replace relay.
(3) Faulty control circuit wiring.	Check continuity of wiring.	Repair or replace wiring.

F. INDICATING LIGHT INOPERATIVE

(1) Burned out lamp.	Check lamp.	Replace lamp.
(2) Faulty press-to-test switch.	Check switch.	Replace light.
(3) Faulty wiring to press-to-test switch.	Check continuity of wiring to switch.	Repair or replace wiring.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
-----------------	---------------------	------------

F. INDICATING LIGHT INOPERATIVE (Continued)

(4) Faulty indicating light wiring.	Check continuity of indicating light wiring.	Repair or replace wiring.
-------------------------------------	--	---------------------------

G. AUXILIARY HYDRAULIC PUMP DOES NOT OPERATE WHEN CARGO DOOR CONTROL HANDLE IS MOVED TO OPEN OR CLOSE POSITIONS

(1) No electric power.	Check circuit breaker position.	Close circuit breaker.
(2) Blown limiter fuses.	Check fuses for continuity and isolate cause of blown fuses.	Correct cause of blown fuses and replace fuses.
(3) Auxiliary hydraulic pump motor thermostatic switch open or inoperative.	Check pump for overheated condition; check continuity of thermostatic switch.	Allow pump to cool or replace pump as required.
(4) Faulty cargo door control switch.	Actuate flight compartment auxiliary hydraulic pump control switch (or switches). Check continuity of cargo door control switch.	Readjust or replace switches as required.
(5) Faulty cargo door control switch wiring.	Check continuity of cargo door control switch wiring	Repair or replace wiring.

NOTE: For further cargo door operating procedures, trouble shooting procedures, and related precautions, see Chapter 52.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR VALVE - MAINTENANCE PRACTICES

1. General

- A. The auxiliary hydraulic pump supply selector valve is located in the left wing root on the sheer web near the auxiliary hydraulic pump.
- B. Access to the supply selector valve is through the left wing root access door.

2. Removal/Installation Auxiliary Hydraulic Pump Supply Selector Valve

A. Remove Supply Selector Valve

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Drain hydraulic system reservoir and auxiliary hydraulic pump alternate reservoir (see 29-00, Maintenance Practices).
- (5) Disconnect auxiliary pump supply hose from outlet port of auxiliary hydraulic pump supply selector valve.
- (6) Disconnect supply lines from inlet ports of valve.
- (7) Disconnect pushrod from slide spool clevis fitting.
- (8) Remove selector valve.
- (9) Remove fittings from selector valve and retain for use in new unit. Discard O-rings.

B. Install Supply Selector Valve

- (1) Make certain that auxiliary hydraulic pump control circuit breaker is open.
- (2) Using new O-rings, install fittings in selector valve ports.
- (3) Install selector valve.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) Connect supply lines to inlet ports of selector valve.
- (5) Connect auxiliary pump supply hose to outlet port of selector valve.
- (6) Place hydraulic system selector control lever in bypass/general system position.
- (7) Spoke of auxiliary pump selector valve sector (7) (see 29-10-0, Maintenance Practices, Figure 501, View A-A) should be 3/16 inch past edge of leg (18) of its support bracket.
- (8) Extend spool of auxiliary pump selector valve (16) 5/32 inch beyond valve sleeve.
- (9) Adjust pushrod to proper length and connect to slide valve clevis fitting.
- (10) Tighten jamnut on pushrod.
- (11) Fill hydraulic reservoir (see instruction placard on reservoir).
- (12) Fill alternate hydraulic reservoir (see 29-20-8, Maintenance Practices).
- (13) Close auxiliary hydraulic pump control circuit breaker.

3. Inspection/Check Auxiliary Hydraulic Pump Supply Selector Valve


A. Check Supply Selector Valve

- (1) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).
- (2) Pressurize auxiliary hydraulic system (see 29-00, Maintenance Practices).


WARNING: MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION AND THAT LANDING GEAR GROUND LOCKPINS ARE INSTALLED.

- (3) Check that hydraulic system selector control lever is in general system/main gear downlock and flaps position.
- (4) Cycle wing flaps by placing wing flap control handle in up and then in down position.
- (5) Depressurize auxiliary hydraulic system (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

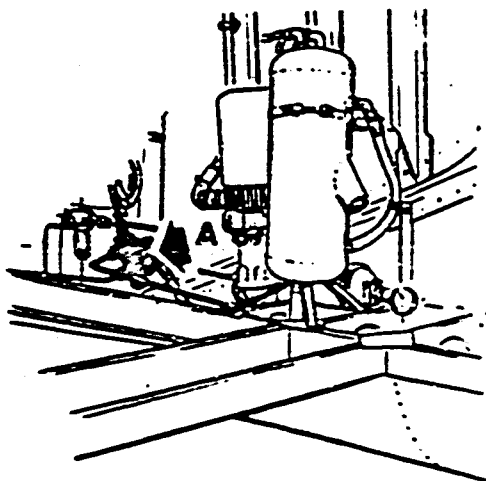

VIEW LOOKING FORWARD INTO  
 LEFT WING ROOT AREA

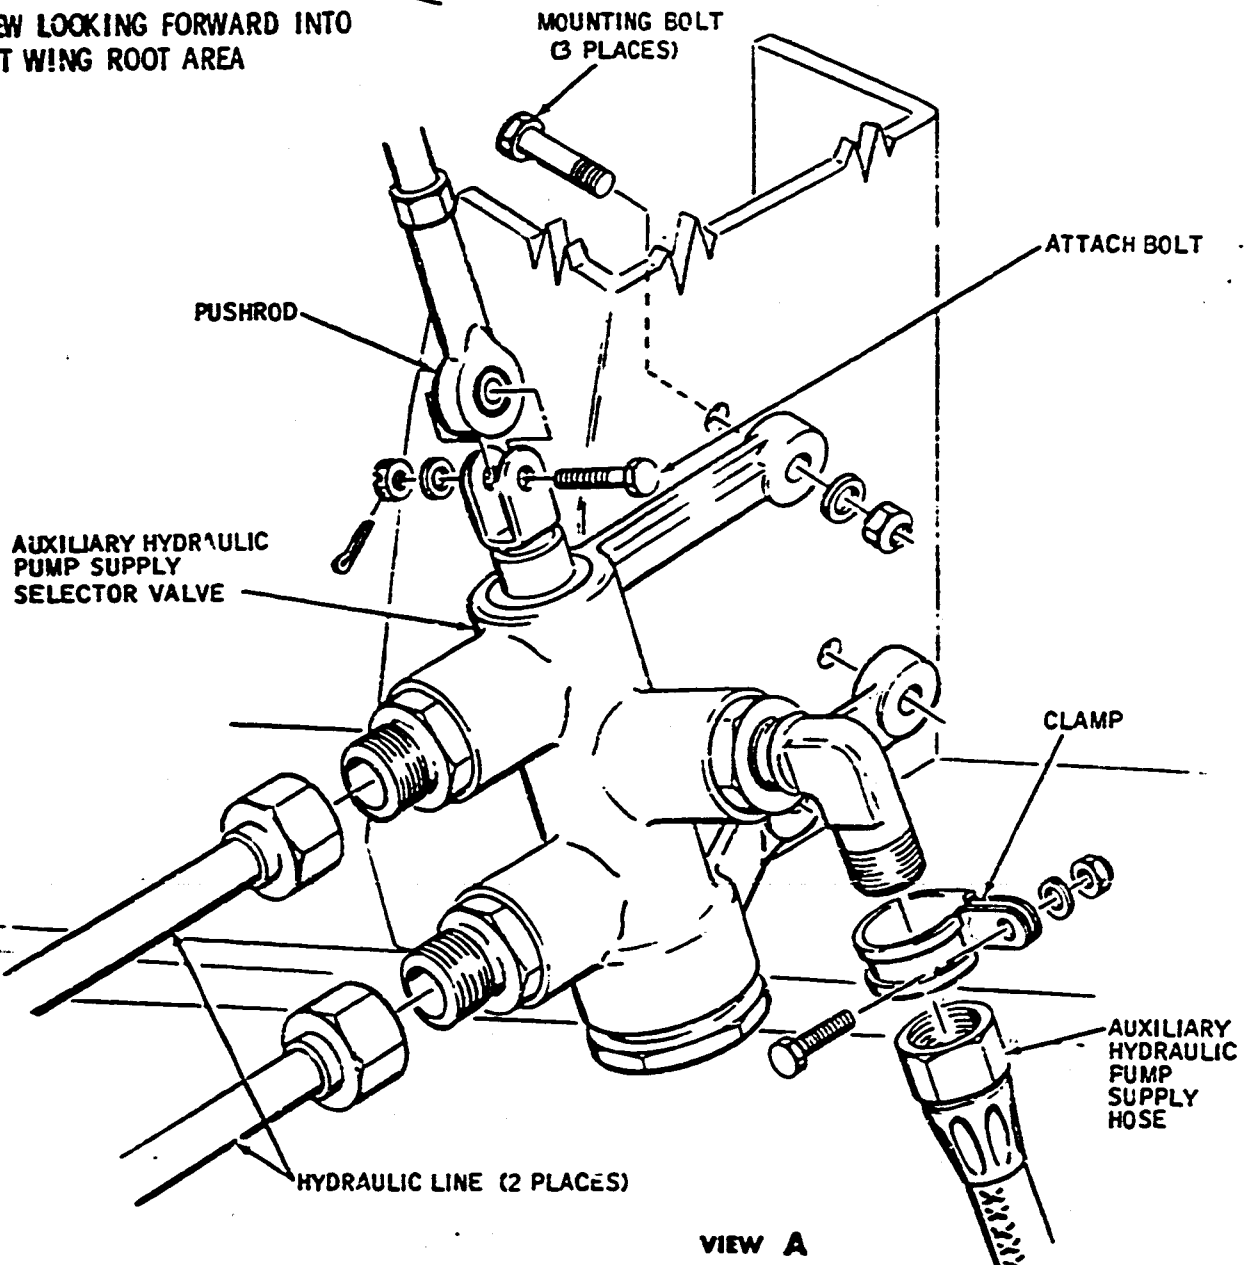

Auxiliary Hydraulic Pump Supply Selector  
 Valve -- Installation  
 Figure 201

HA2-165A

29-20-1  
 CODE 1

Page 203

Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Check auxiliary hydraulic pump supply selector valve, lines, and fittings for leaks, general condition, and security of mounting.
- (7) Check selector valve pushrod jamnut for security of attachment and safety lock.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC PUMP SUPPLY SELECTOR  
VALVE - MAINTENANCE PRACTICES

1. General

- A. The auxiliary hydraulic pump supply selector valve is located in the left wing root on the shear web near the auxiliary hydraulic pump.
- B. Access to the supply selector valve is through the left wing root access door.

2. Removal/Installation Auxiliary Hydraulic Pump Supply Selector Valve

A. Remove Supply Selector Valve

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin 4 bus section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Drain hydraulic system reservoir and auxiliary hydraulic pump alternate reservoir (see 29-00, Maintenance Practices).
- (5) Disconnect auxiliary pump supply hose from outlet port of auxiliary hydraulic pump supply selector valve.
- (6) Disconnect supply lines from inlet ports of valve.
- (7) Disconnect pushrod from slide spool clevis fitting.
- (8) Remove selector valve.
- (9) Remove fittings from selector valve and retain for use in new unit. Discard O-rings.

B. Install Supply Selector Valve


- (1) Make certain that auxiliary hydraulic pump control circuit breaker . located on cabin bus 4 section of EPC circuit breaker panel is open.
- (2) Using new O-rings, install fittings in selector valve ports.
- (3) Install selector valve.

Jun 15/67


Printed in U.S.A.

29-20-1  
CODE 2  
Page 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

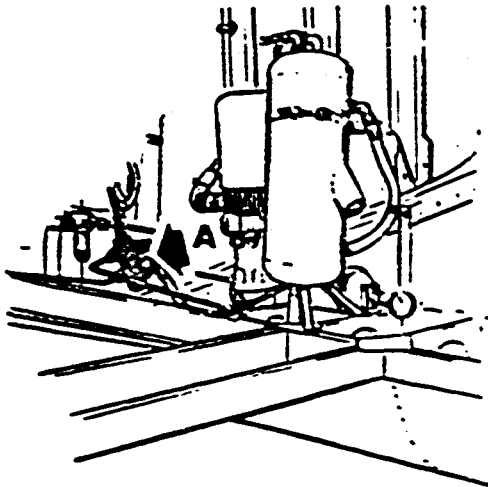

VIEW LOOKING FORWARD INTO  
 LEFT WING ROOT AREA

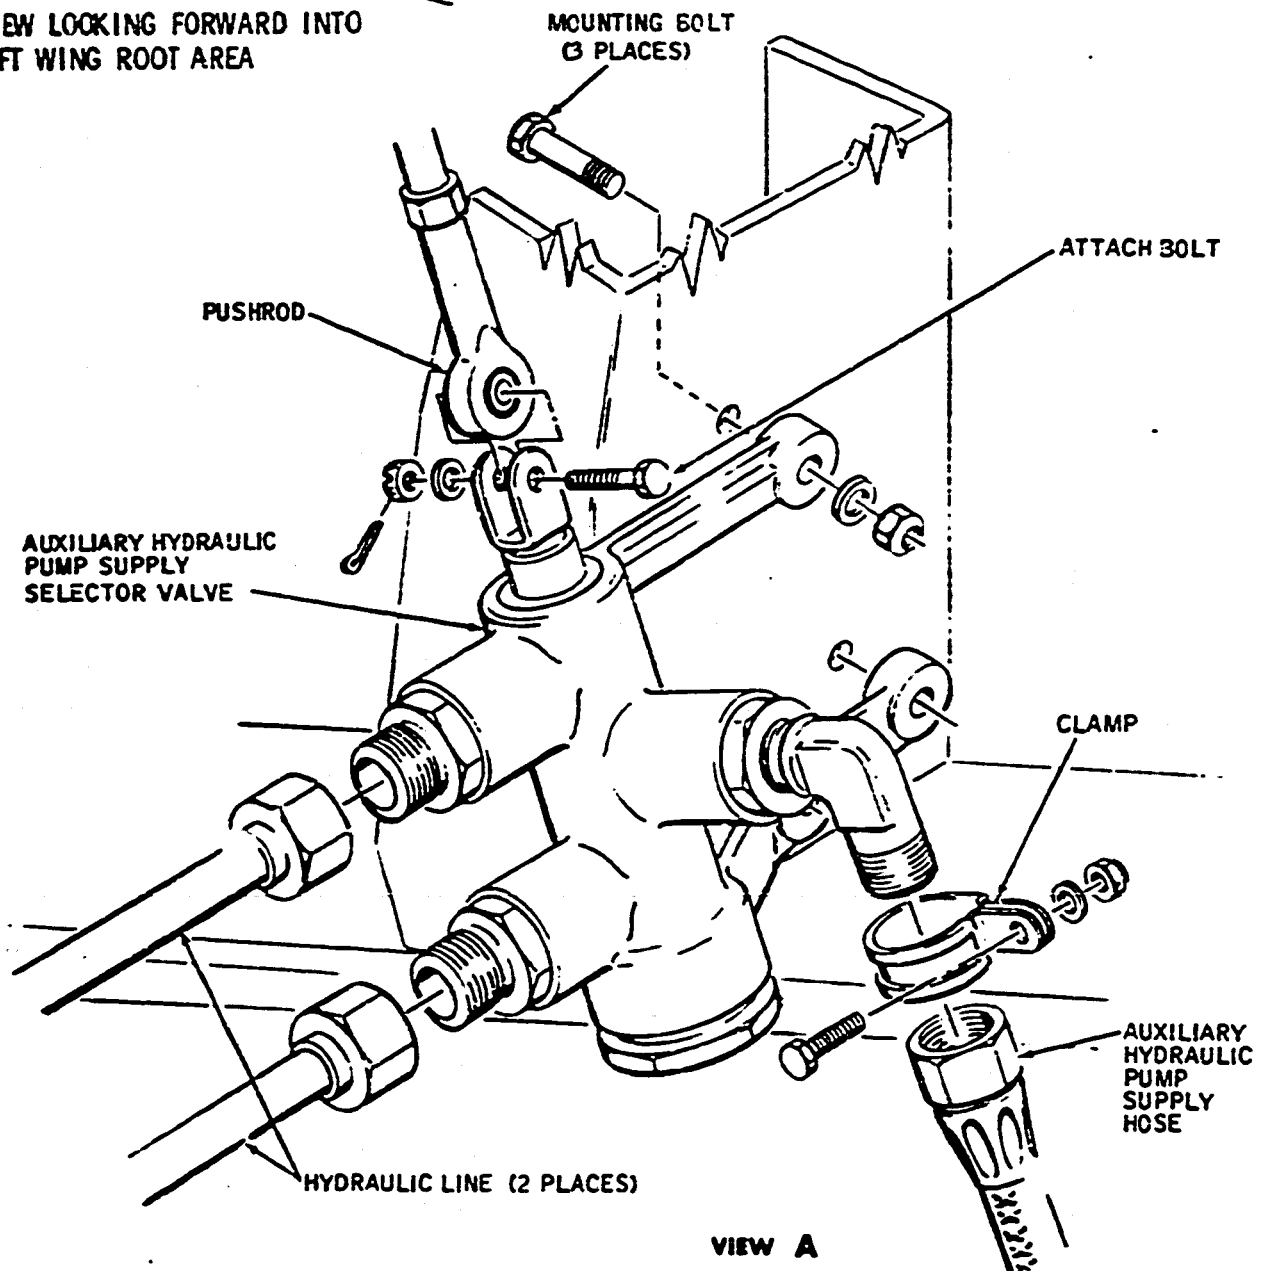

VIEW A

Auxiliary Hydraulic Pump Supply Selector  
 Valve -- Installation  
 Figure 201

HA2-165A

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) Connect supply lines to inlet ports of selector valve.
- (5) Connect auxiliary pump supply hose to outlet port of selector valve.
- (6) Place hydraulic system selector control lever in bypass/general system position.
- (7) Spoke of auxiliary pump selector valve sector (7) (see 29-10-0, Maintenance Practices, Figure 501, View A-A) should be 3/16 inch past edge of leg (18) of its support bracket.
- (8) Extend spool of auxiliary pump selector valve (16) 5/32 inch beyond valve sleeve.
- (9) Adjust pushrod to proper length and connect to slide valve clevis fitting.
- (10) Tighten jamnut on pushrod.
- (11) Fill hydraulic reservoir (see instruction placard on reservoir).
- (12) Fill alternate hydraulic reservoir (see 29-20-8, Maintenance Practices).
- (13) Close auxiliary hydraulic pump control circuit breaker.

3. Inspection/Check Auxiliary Hydraulic Pump Supply Selector Valve

A. Check Supply Selector Valve

- (1) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).
- (2) Pressurize auxiliary hydraulic system (see 29-00, Maintenance Practices).

WARNING: MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION AND THAT LANDING GEAR GROUND LOCKPINS ARE INSTALLED.

- (3) Check that hydraulic system selector control lever is in general system/flaps only position.
- (4) Cycle wing flaps by placing wing flap control handle in up and then in down position.
- (5) Depressurize auxiliary hydraulic system (see 29-00, Maintenance Practices).
- (6) Check auxiliary hydraulic pump supply selector valve, lines, and fittings for leaks, general condition, and security of mounting.
- (7) Check selector valve pushrod jamnut for security of attachment and safety lock.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC PUMP - MAINTENANCE PRACTICES

1. General

- A. The auxiliary hydraulic pump is located aft of the wing rear spar in the left wing root.
- B. Access to the auxiliary hydraulic pump is through the left wing root access door.

2. Tools and Equipment Required

- A. General purpose oil (MIL-L-7870) is used for lubrication of the auxiliary hydraulic pump gear box.

3. Servicing Auxiliary Hydraulic Pump

- A. Lubricate Auxiliary Hydraulic Pump Gear Box.
  - (1) Remove fill and oil level plugs.
  - (2) Add general purpose oil (MIL-L-7870) as required up to oil level plug.
  - (3) Install oil level plug.
  - (4) Add 45 cc oil above level plug oil level.
  - (5) Install fill plug.
  - (6) Safety fill plug to oil level plug with lockwire.

4. Removal/Installation Auxiliary Hydraulic Pump

A. Remove Auxiliary Hydraulic Pump

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Drain hydraulic system reservoir (see 29-00, Maintenance Practices).
- (5) Disconnect electrical connect from auxiliary hydraulic pump motor.
- (6) Disconnect supply hose from suction port of auxiliary hydraulic pump.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (7) Disconnect pressure hose from pressure port of pump.
- (8) Disconnect bypass hose from bypass port.
- (9) Disconnect drain line from drain port.
- (10) Remove pump.
- (11) Remove fittings from pump ports, retain for use on new pump. Discard O-rings.

**B. Install Auxiliary Hydraulic Pump**


- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 is open.
- (2) Using new O-rings, install fittings in pump ports.
- (3) Install pump on mounting bracket.
- (4) Connect electrical connect to auxiliary hydraulic pump motor.
- (5) Connect supply hose to suction port of pump.
- (6) Connect pressure hose to pressure port of pump.
- (7) Connect bypass line to bypass port.
- (8) Connect drain line to drain port.
- (9) Fill hydraulic reservoir as described on instruction placard on reservoir.
- (10) Close auxiliary hydraulic pump control circuit breaker.

**5. Inspection/Check Auxiliary Hydraulic Pump**

**A. Check Auxiliary Hydraulic Pump**

- (1) Place hydraulic system selector control lever in general system (normal) position.
- (2) Place rudder and aileron hydraulic power control levers in off position.
- (3) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

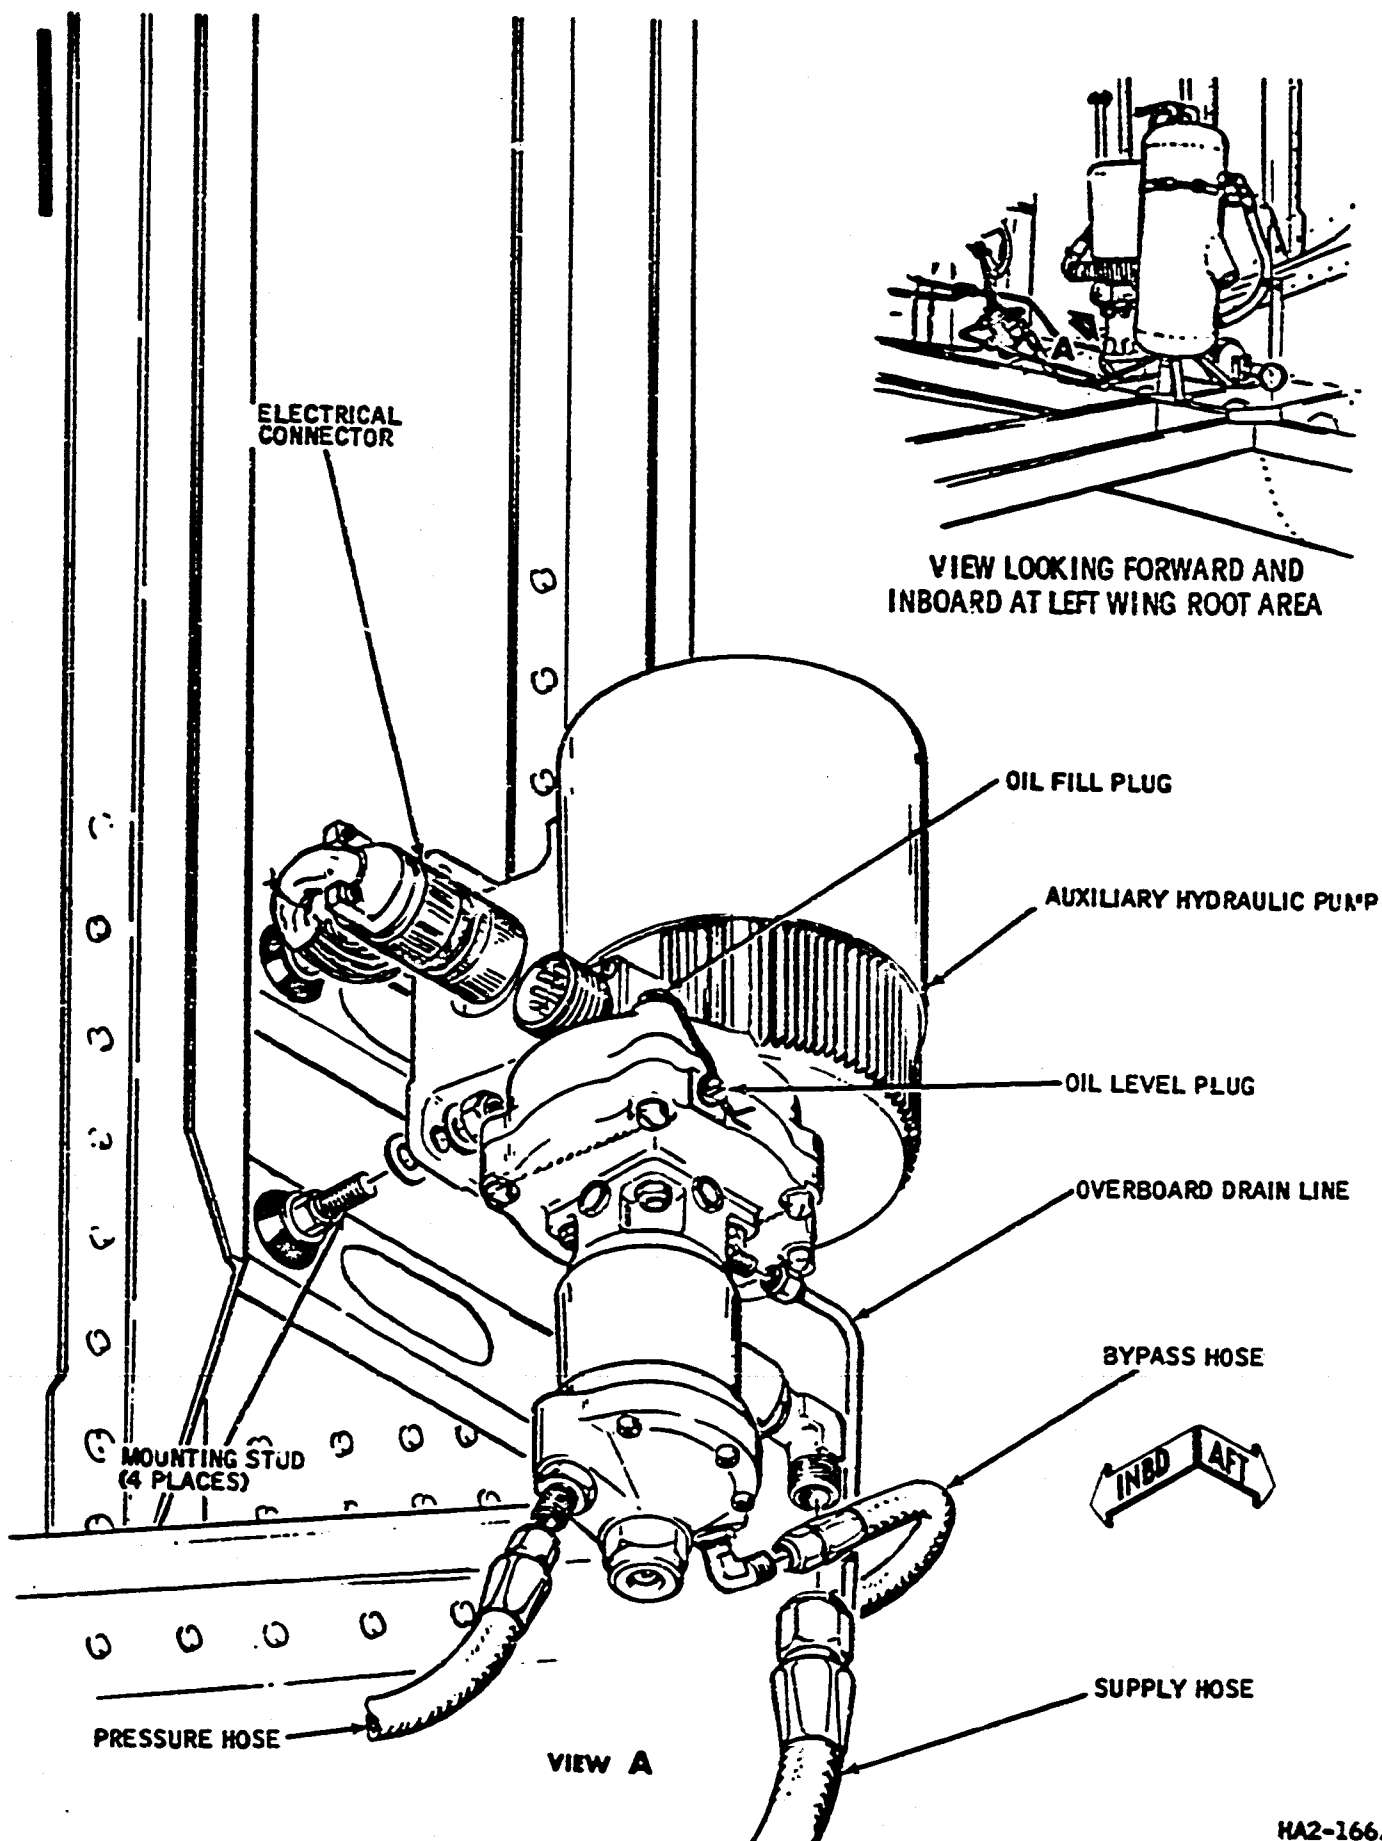

Auxiliary Hydraulic Pump -- Installation  
 Figure 201

HA2-166A

Jun 15/67

29-20-2  
 CODE 1  
 Page 203

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (4) Place auxiliary hydraulic pump switch momentarily in start (hold only in emergency position.

WARNING: BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

CAUTION: DO NOT HOLD AUXILIARY HYDRAULIC PUMP SWITCH IN START POSITION TO PERFORM PRESSURE CHECKS.

- (5) Check hydraulic system pressure indicator in flight compartment for 2800- to 3000-psi indication.

NOTE: With the hydraulic system selector valve in No. 1 (BYPASS/GENERAL SYSTEM) or No. 2 (GENERAL SYSTEM/NORMAL) position, a pressure reading of less than 2800 psi indicates more than minimum designed leakage in the hydraulic system is occurring and an effort should be made to isolate and correct the condition if time permits. Acceptable system operation can be obtained with a minimum of 2600 psi auxiliary hydraulic pump output when system selector valve is in No. 1 and No. 2 positions.

- (6) Place auxiliary hydraulic pump switch momentarily in stop position.
- (7) Check auxiliary hydraulic pump for security of attachment and leaks.
- (8) Check hydraulic lines for security, clearance, and leaks.
- (9) Check electrical connector on pump motor for security of attachment and condition of wiring.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC PUMP - MAINTENANCE PRACTICES

1. General

- A. The auxiliary hydraulic pump is located aft of the wing rear spar in the left wing root.
- B. Access to the auxiliary hydraulic pump is through the left wing root access door.

2. Tools and Equipment Required

- A. Clean Skydrol hydraulic fluid is used for filling the auxiliary hydraulic pump case.

3. Servicing Auxiliary Hydraulic Pump

- A. Prior to installing pump, fill pump case with clean Skydrol hydraulic fluid through case drain port.
- B. Prior to operation after installation, bleed air from pump as follows:
  - (1) Place hydraulic system control lever in general system (normal) position.
  - (2) Pressurize hydraulic system reservoir by manual method (see 29-00, Maintenance Practices).
  - (3) Open B-nut at case drain port sufficiently to allow all air to escape from pump; tighten B-nut.

4. Removal/Installation Auxiliary Hydraulic Pump

A. Remove Auxiliary Hydraulic Pump

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

**WARNING:** TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Drain hydraulic system reservoir (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Disconnect electrical connect from auxiliary hydraulic pump motor.
- (6) Disconnect supply hose from suction port of auxiliary hydraulic pump.
- (7) Disconnect pressure hose from pressure port of pump.
- (8) Disconnect case drain hose from case drain port.
- (9) Disconnect seal cavity drain line from drain port.
- (10) Remove pump.
- (11) Remove fittings from pump ports; retain for use on new pump. Discard O-rings.

B. Install Auxiliary Hydraulic Pump


- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel is open.
- (2) Using new O-rings, install fittings in pump ports.
- (3) Fill pump case with clean Skydrol (see paragraph 3, Servicing).
- (4) Install pump on mounting bracket.
- (5) Connect electrical connect to auxiliary hydraulic pump motor.
- (6) Connect supply hose to suction port of pump.
- (7) Connect pressure hose to pressure port of pump.
- (8) Connect case drain line to case drain port.
- (9) Connect seal cavity drain line to drain port.
- (10) Fill hydraulic reservoir as described on instruction placard on reservoir.
- (11) Bleed air from pump case (see paragraph 3, Servicing).
- (12) Close auxiliary hydraulic pump control circuit breaker.

5. Inspection/Check Auxiliary Hydraulic Pump

A. Check Auxiliary Hydraulic Pump

- (1) Place hydraulic system selector control lever in general system (normal) position.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

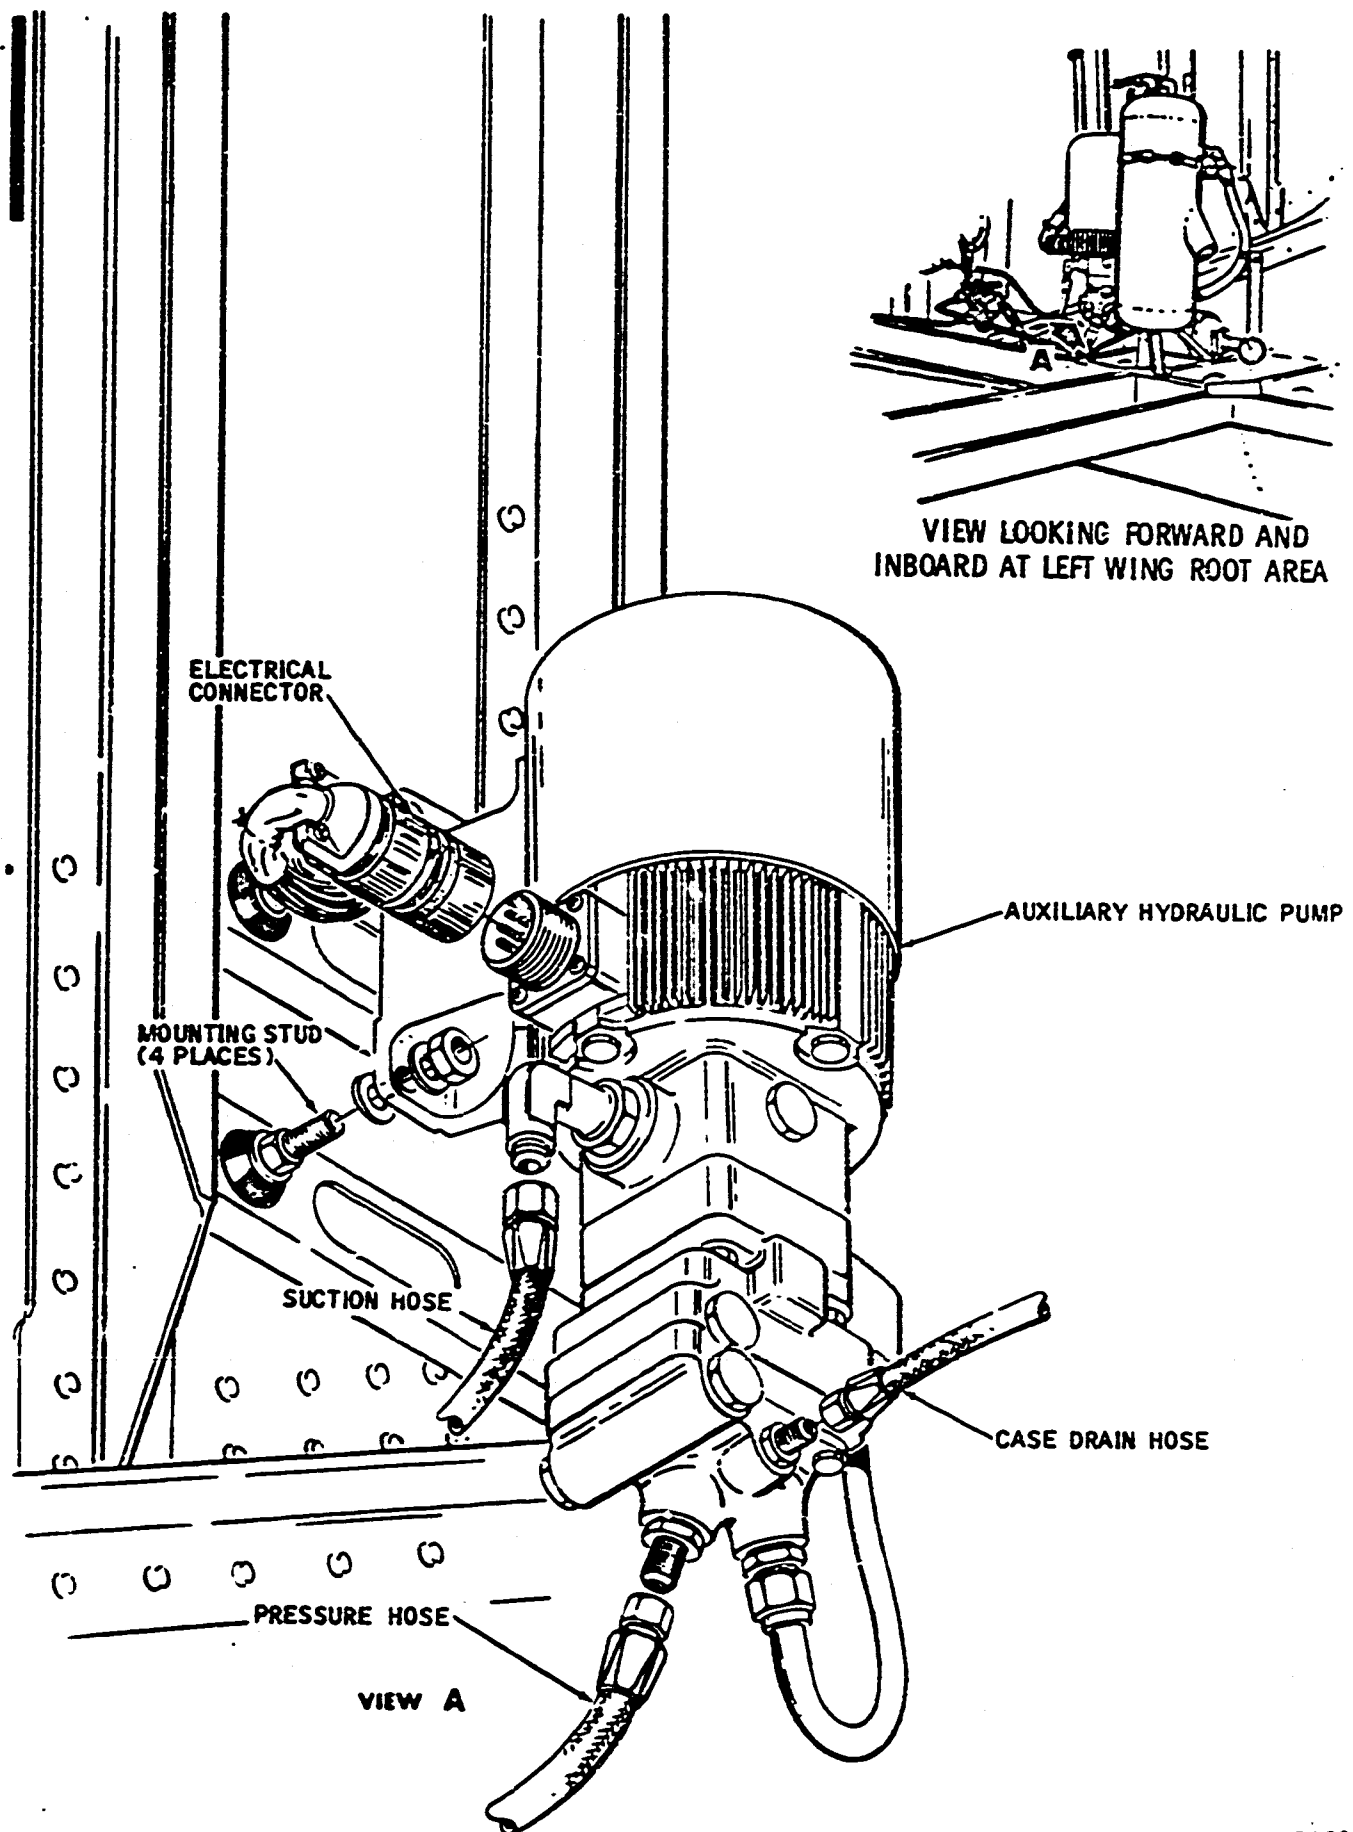

Auxiliary Hydraulic Pump -- Installation  
Figure 201

Jun 15/67

Printed in U.S.A.

HA2-1680A

29-20-2  
CODE 2  
Page 203

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Place rudder and aileron hydraulic power levers in off position.
- (3) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).
- (4) Place auxiliary hydraulic pump switch momentarily in start (hold only in emergency) position.

WARNING: BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

CAUTION: BEFORE OPERATING THE PUMP MAKE SURE THAT ALL AIR HAS BEEN BLED FROM THE PUMP AND PUMP IS COMPLETELY FULL OF SKYDROL HYDRAULIC FLUID.

CAUTION: DO NOT HOLD AUXILIARY HYDRAULIC PUMP SWITCH IN START POSITION TO PERFORM PRESSURE CHECKS.

- (5) Check hydraulic system pressure indicator in flight compartment for 2600- to 3000-psi indicator.

NOTE: With the hydraulic system selector valve in No. 1 (BYPASS/GENERAL SYSTEM) or No. 2 (GENERAL SYSTEM/NORMAL) position, a pressure reading of less than 2800 psi indicates more than minimum designed leakage in the hydraulic system is occurring and an effort should be made to isolate and correct the condition if time permits. Acceptable system operation can be obtained with a minimum of 2600 psi auxiliary hydraulic pump output when system selector valve is in No. 1 and No. 2 positions.

- (6) Place auxiliary hydraulic pump switch momentarily in stop position.
- (7) Check auxiliary hydraulic pump for security of attachment and leaks.
- (8) Check hydraulic lines for security, clearance, and leaks.
- (9) Check electrical connector on pump motor for security of attachment and condition of wiring.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC PUMP - MAINTENANCE PRACTICES

1. General

- A. The auxiliary hydraulic pump is located aft of the wing rear spar in the left wing root.
- B. Access to the auxiliary hydraulic pump is through the left wing root access door.

2. Tools and Equipment Required

- A. General purpose oil (MIL-L-7870) is used for lubrication of the auxiliary hydraulic pump gear box.

3. Servicing Auxiliary Hydraulic Pump

A. Lubricate Auxiliary Hydraulic Pump Gear Box

- (1) Remove fill and oil level plugs.
- (2) Add general purpose oil (MIL-L-7870) as required up to oil level plug.
- (3) Install oil level plug.
- (4) Add 45 cc oil above level plug oil level.
- (5) Install fill plug.
- (6) Safety fill plug to oil level plug with lockwire.

4. Removal/Installation Auxiliary Hydraulic Pump

A. Remove Auxiliary Hydraulic Pump

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Drain hydraulic system reservoir (see 29-00, Maintenance Practices).
- (5) Disconnect electrical connect from auxiliary hydraulic pump motor.

Jan 15/68

29-20-2  
CODE 3  
Page 201



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Disconnect supply hose from suction port of auxiliary hydraulic pump.
- (7) Disconnect pressure hose from pressure port of pump.
- (8) Disconnect bypass hose from bypass port.
- (9) Disconnect drain line from drain port.
- (10) Remove pump.
- (11) Remove fittings from pump ports; retain for use on new pump. Discard O-rings.

**B. Install Auxiliary Hydraulic Pump**


- (1) Make certain that auxiliary hydraulic pump control circuit breaker, located on cabin bus 4 of EPC circuit breaker panel is open.
- (2) Using new O-rings, install fittings in pump ports.
- (3) Install pump on mounting bracket.
- (4) Connect electrical connect to auxiliary hydraulic pump motor.
- (5) Connect supply hose to suction port of pump.
- (6) Connect pressure hose to pressure port of pump.
- (7) Connect bypass line to bypass port.
- (8) Connect drain line to drain port.
- (9) Fill hydraulic reservoir as described on instruction placard on reservoir.
- (10) Close auxiliary hydraulic pump control circuit breaker.

**5. Inspection/Check Auxiliary Hydraulic Pump**

**A. Check Auxiliary Hydraulic Pump**

- (1) Place hydraulic system selector control lever in general system (normal) position.
- (2) Place rudder and aileron hydraulic power control levers in off position.
- (3) Open air compressor control and water separation circuit breaker located on dc bus 4 section of EPC circuit breaker panel.
- (4) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

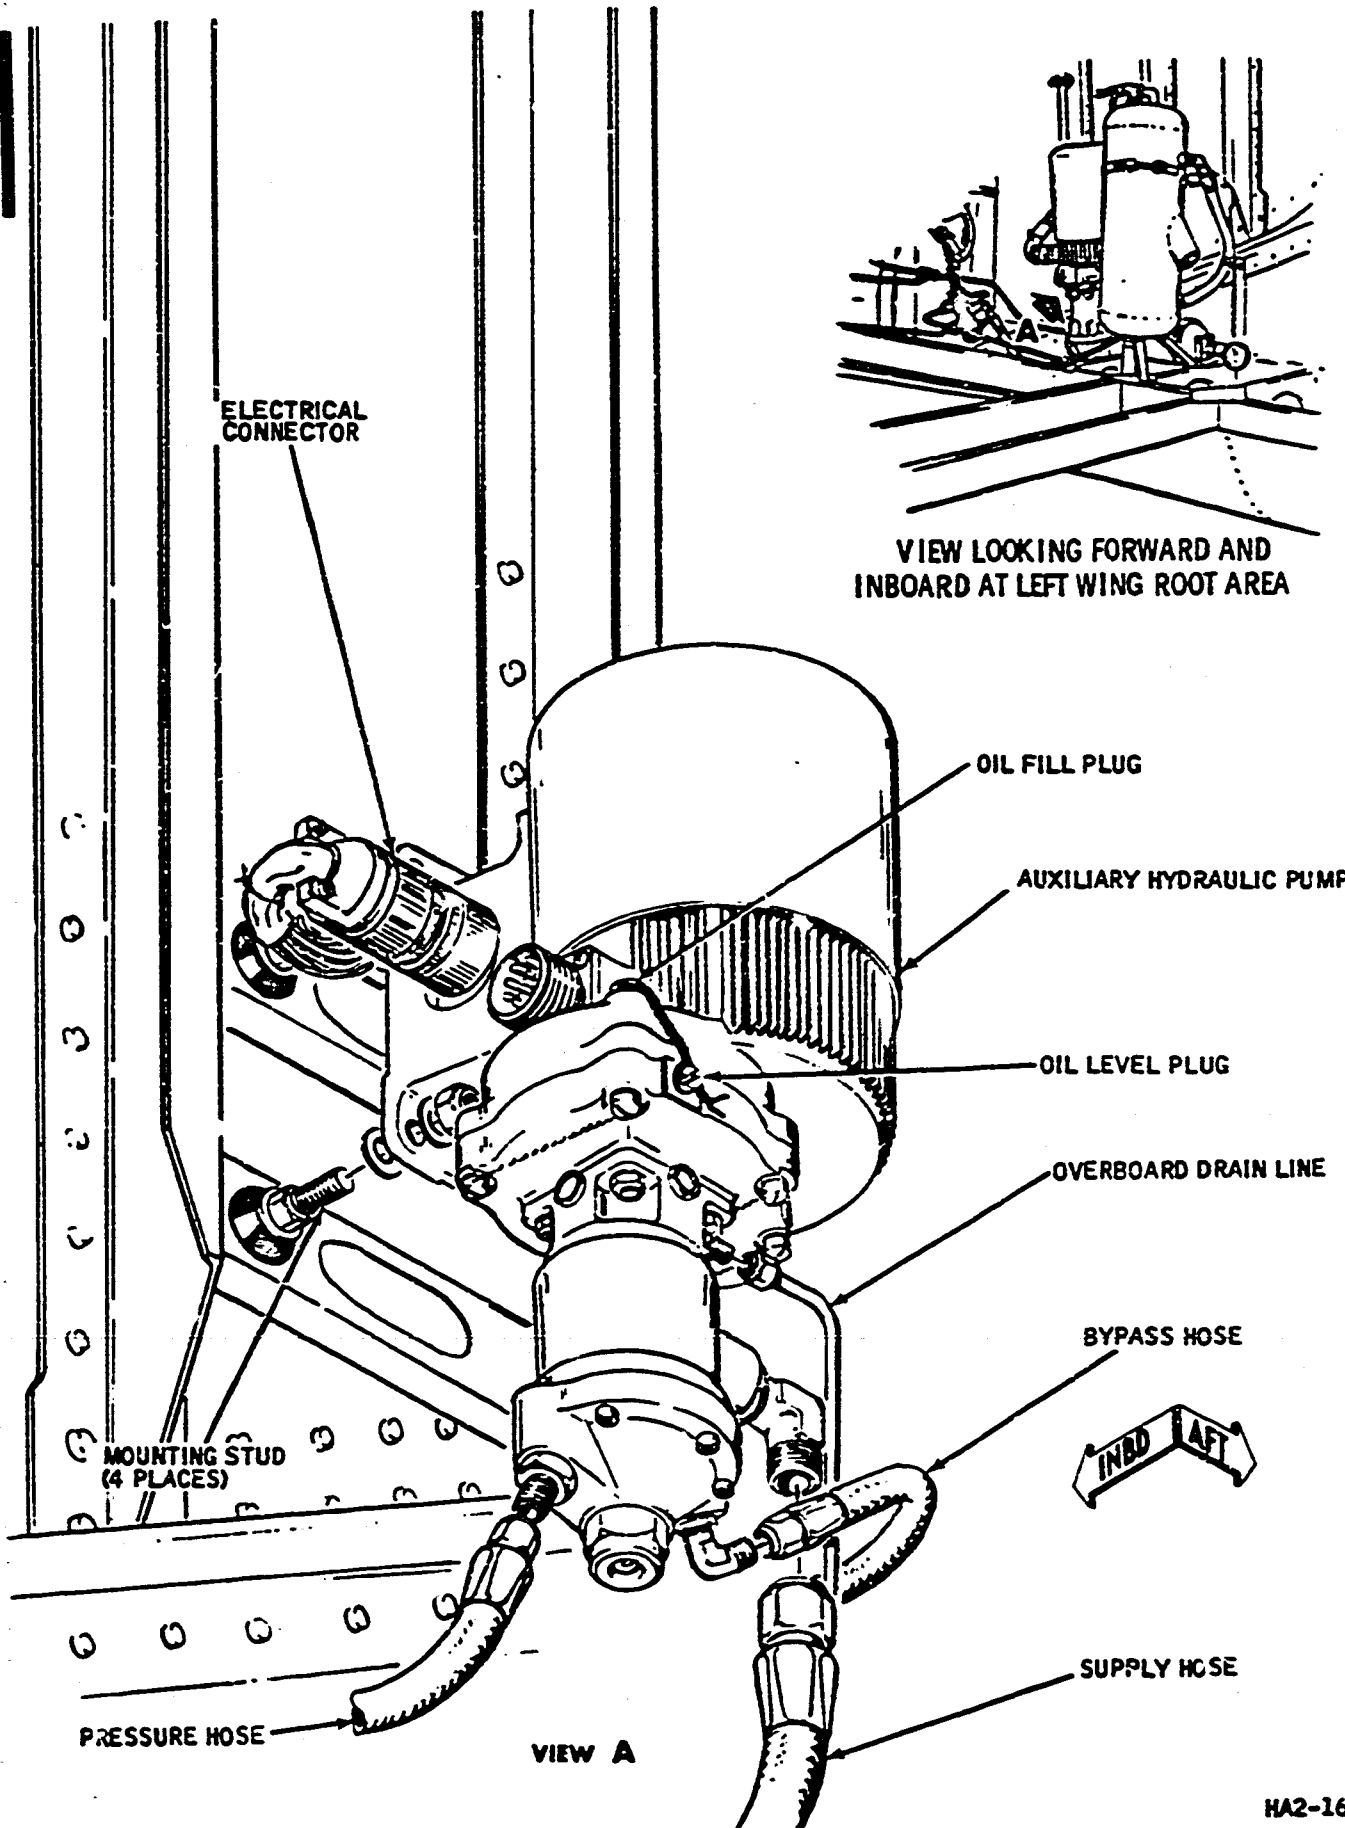

Auxiliary Hydraulic Pump -- Installation  
 Figure 201

HA2-166A

29-20-2  
 CODE 3  
 Page 203

Jan 15/68

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Place auxiliary hydraulic pump switch momentarily in start (hold only in emergency) position.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

**CAUTION:** DO NOT HOLD AUXILIARY HYDRAULIC PUMP SWITCH IN START POSITION TO PERFORM PRESSURE CHECKS.

- (6) Check hydraulic system pressure indicator in flight compartment for 2800- to 3000-psi indication.

**NOTE:** With the hydraulic system selector valve in No. 1 (BYPASS/GENERAL SYSTEM) or No. 2 (GENERAL SYSTEM/NORMAL) position, a pressure reading of less than 2800 psi indicates more than minimum designed leakage in the hydraulic system is occurring and an effort should be made to isolate and correct the condition if time permits. Acceptable system operation can be obtained with a minimum of 2600 psi auxiliary hydraulic pump output when system selector valve is in No. 1 and No. 2 positions.

- (7) Place auxiliary hydraulic pump switch momentarily in stop position.
- (8) Check auxiliary hydraulic pump for security of attachment and leaks.
- (9) Check hydraulic lines for security, clearance, and leaks.
- (10) Check electrical connector on pump motor for security of attachment and condition of wiring.
- (11) Close air compressor control and water separation circuit breaker.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC PUMP - MAINTENANCE PRACTICES

1. General

- A. The auxiliary hydraulic pump is located aft of the wing rear spar in the left wing root.
- B. Access to the auxiliary hydraulic pump is through the left wing root access door.

2. Tools and Equipment Required

- A. Clean Skydrol hydraulic fluid is used for filling the auxiliary hydraulic pump case.

3. Servicing Auxiliary Hydraulic Pump

- A. Prior to installing pump, fill pump case with clean Skydrol hydraulic fluid through case drain port.
- B. Prior to operation after installation, bleed air from pump as follows:
  - (1) Place hydraulic system control lever in general system (normal) position.
  - (2) Pressurize hydraulic system reservoir by manual method (see 29-00, Maintenance Practices).
  - (3) Open B-nut at case drain port sufficiently to allow all air to escape from pump; tighten B-nut.

4. Removal/Installation Auxiliary Hydraulic Pump

A. Remove Auxiliary Hydraulic Pump

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Drain hydraulic system reservoir (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Disconnect electrical connect from auxiliary hydraulic pump motor.
- (6) Disconnect supply hose from suction port of auxiliary hydraulic pump.
- (7) Disconnect pressure hose from pressure port of pump.
- (8) Disconnect case drain hose from case drain port.
- (9) Disconnect seal cavity drain line from drain port.
- (10) Remove pump.
- (11) Remove fittings from pump ports; retain for use on new pump. Discard O-rings.

**B. Install Auxiliary Hydraulic Pump**


- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel is open.
- (2) Using new O-rings, install fittings in pump ports.
- (3) Fill pump case with clean Skydrol (see paragraph 3, Servicing).
- (4) Install pump on mounting bracket.
- (5) Connect electrical connect to auxiliary hydraulic pump motor.
- (6) Connect supply hose to suction port of pump.
- (7) Connect pressure hose to pressure port of pump.
- (8) Connect case drain line to case drain port.
- (9) Connect seal cavity drain line to drain port.
- (10) Fill hydraulic reservoir as described on instruction placard on reservoir.
- (11) Bleed air from pump case (see paragraph 3, Servicing).
- (12) Close auxiliary hydraulic pump control circuit breaker.

**5. Inspection/Check Auxiliary Hydraulic Pump**


**A. Check Auxiliary Hydraulic Pump**

- (1) Place hydraulic system selector control lever in general system (normal) position.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

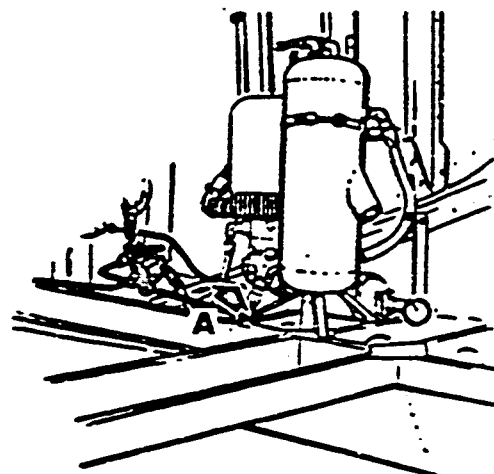

VIEW LOOKING FORWARD AND  
 INBOARD AT LEFT WING ROOT AREA

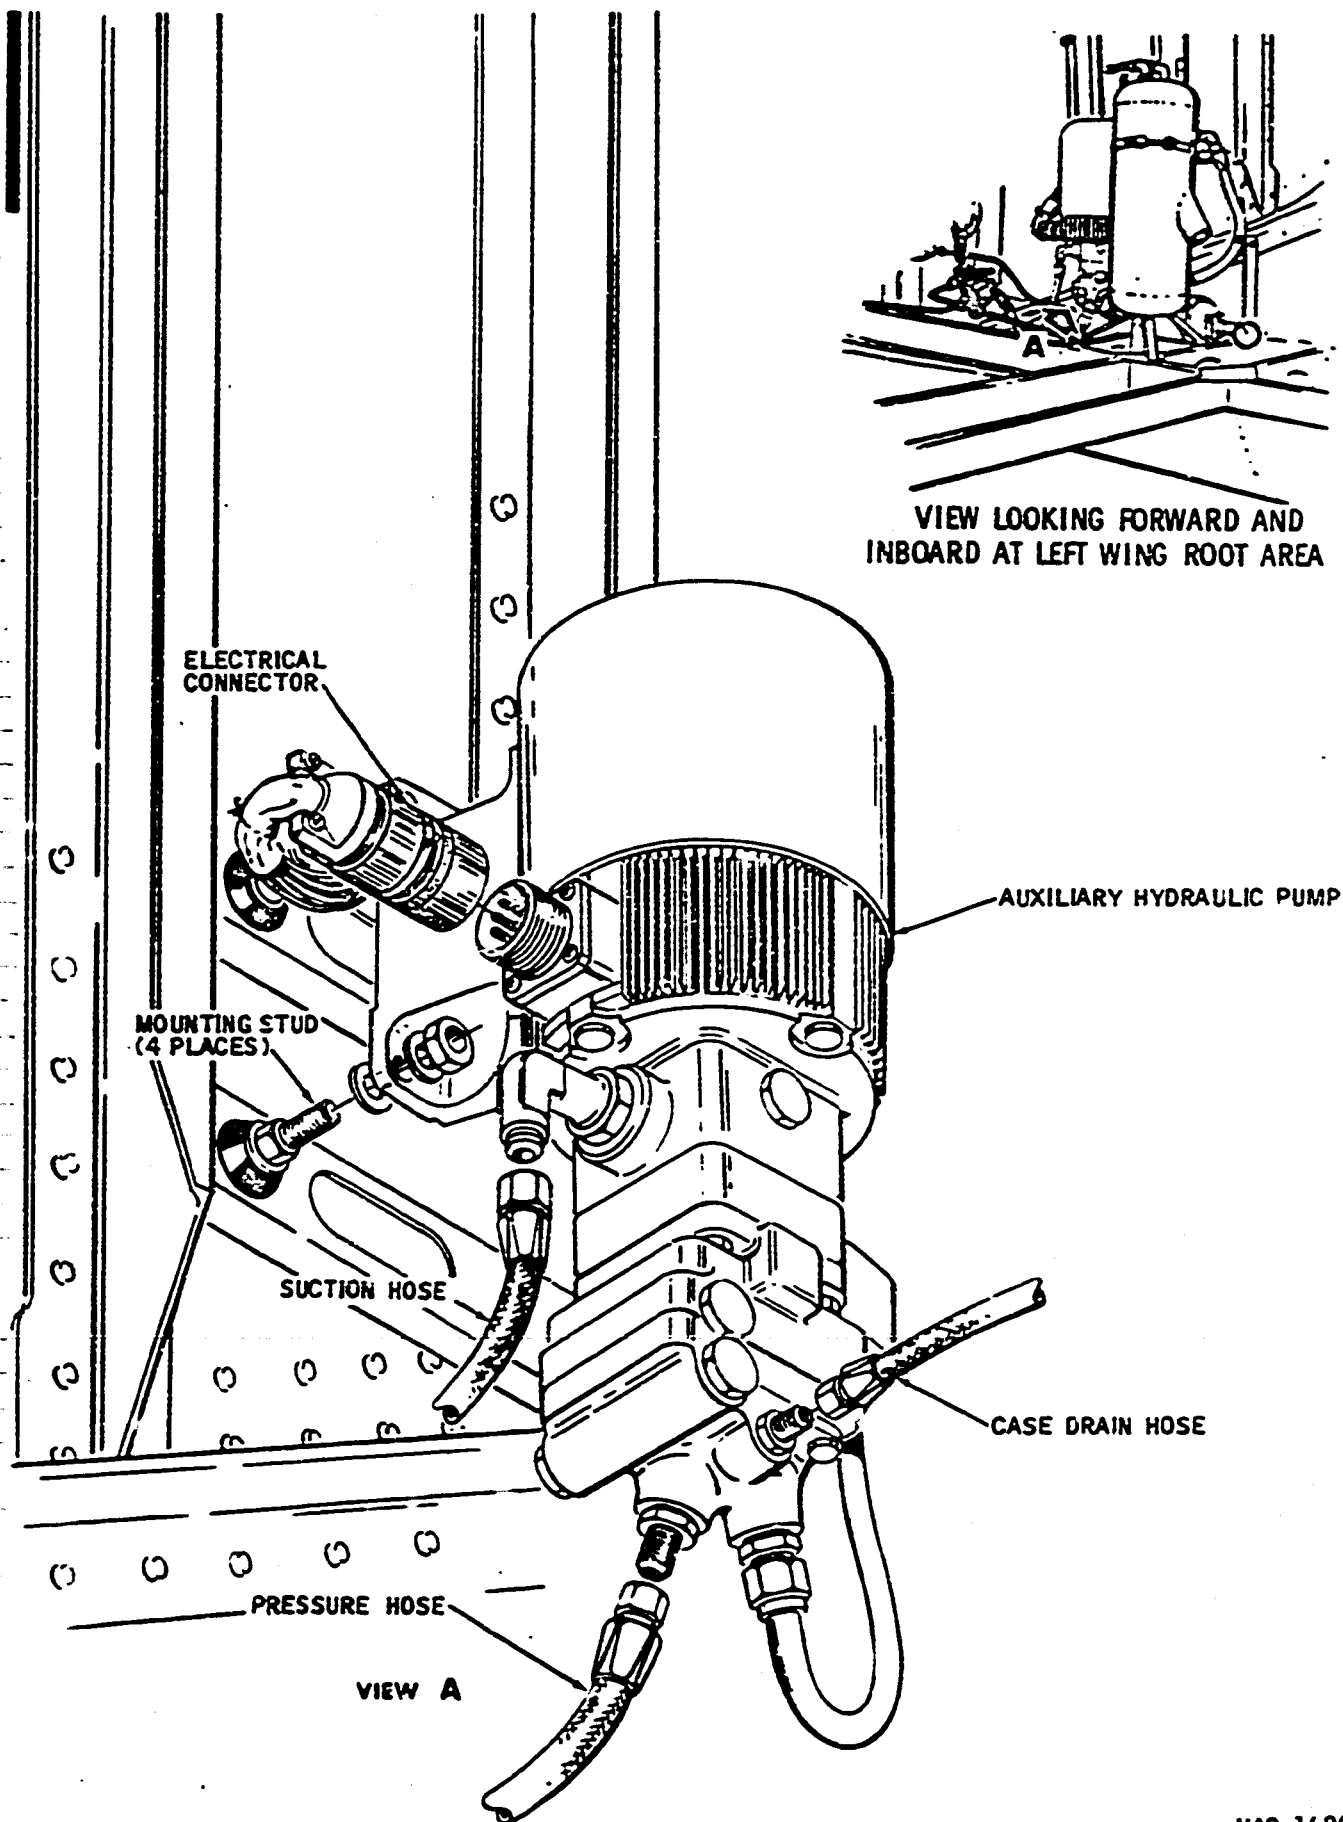

HA2-1680A

Auxiliary Hydraulic Pump -- Installation  
 Figure 201

Jan 15/68

29-20-2  
 CODE 4  
 Page 203

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Place rudder and aileron hydraulic power control levers in off position.
- (3) Open air compressor control and water separation circuit breaker located on dc bus 4 section of circuit breaker panel.
- (4) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).
- (5) Place auxiliary hydraulic pump switch momentarily in start (hold only in emergency) position.

WARNING: BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

CAUTION: BEFORE OPERATING THE PUMP MAKE SURE THAT ALL AIR HAS BEEN BLED FROM THE PUMP AND PUMP IS COMPLETELY FULL OF SKYDROL HYDRAULIC FLUID.

CAUTION: DO NOT HOLD AUXILIARY HYDRAULIC PUMP SWITCH IN START POSITION TO PERFORM PRESSURE CHECKS.

- (6) Check hydraulic system pressure indicator in flight compartment for 2600- to 3000-psi indicator.

NOTE: With the hydraulic system selector valve in No. 1 (BYPASS/GENERAL SYSTEM) or No. 2 (GENERAL SYSTEM/NORMAL) position, a pressure reading of less than 2800 psi indicates more than minimum designed leakage in the hydraulic system is occurring and an effort should be made to isolate and correct the condition if time permits. Acceptable system operation can be obtained with a minimum of 2600 psi auxiliary hydraulic pump output when system selector valve is in No. 1 and No. 2 positions.

- (7) Place auxiliary hydraulic pump switch momentarily in stop position.
- (8) Check auxiliary hydraulic pump for security of attachment and leaks.
- (9) Check hydraulic lines for security, clearance, and leaks.
- (10) Check electrical connector on pump motor for security of attachment and condition of wiring.
- (11) Close air compressor control and water separation circuit breaker.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC PUMP - MAINTENANCE PRACTICES

1. General

- A. The auxiliary hydraulic pump is located aft of the wing rear spar in the left wing root.
- B. Access to the auxiliary hydraulic pump is through the left wing root access door.

2. Tools and Equipment Required

- A. General purpose oil (MIL-L-7870) is used for lubrication of the auxiliary hydraulic pump gear box.

3. Servicing Auxiliary Hydraulic Pump (Airplanes N8762-N8778)

A. Lubricate Auxiliary Hydraulic Pump Gear Box

- (1) Remove fill and oil level plugs.
- (2) Add general purpose oil (MIL-L-7870) as required up to oil level plug.
- (3) Install oil level plug.
- (4) Add 45 cc oil above level plug oil level.
- (5) Install fill plug.
- (6) Safety fill plug to oil level plug with lockwire.

4. Servicing Auxiliary Hydraulic Pump (Airplanes N8755-N8760)

- A. Prior to installing pump, fill pump case with clean Skydrol hydraulic fluid through case drain port.
- B. Prior to operation after installation, bleed air from pump as follows:
  - (1) Place hydraulic system control lever in general system (normal) position.
  - (2) Pressurize hydraulic system reservoir by manual method (see 29-00, Maintenance Practices).
  - (3) Open B-nut at case drain port sufficiently to allow all air to escape from pump; tighten B-nut.



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

5. Removal/Installation Auxiliary Hydraulic Pump

A. Remove Auxiliary Hydraulic Pump

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).


- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Drain hydraulic system reservoir (see 29-00, Maintenance Practices).
- (5) Disconnect electrical connector from auxiliary hydraulic pump motor.
- (6) Disconnect supply hose from suction port of auxiliary hydraulic pump.
- (7) Disconnect pressure hose from pressure port of pump.
- (8) Disconnect bypass hose from bypass port.
- (9) Disconnect drain line from drain port.
- (10) Remove pump.
- (11) Remove fittings from pump ports, retain for use on new pump. Discard O-rings.

NOTE: In the event the auxiliary hydraulic pump is operated without fluid or has failed, the pump and the following associated parts must be replaced prior to further operation.

B. Install Auxiliary Hydraulic Pump

- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 is open.
- (2) Using new O-rings, install fittings in pump ports.
- (3) Install pump on mounting bracket.
- (4) Connect electrical connector to auxiliary hydraulic pump motor.
- (5) Connect supply hose to suction port of pump.
- (6) Connect pressure hose to pressure port of pump.
- (7) Connect bypass line to bypass port.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

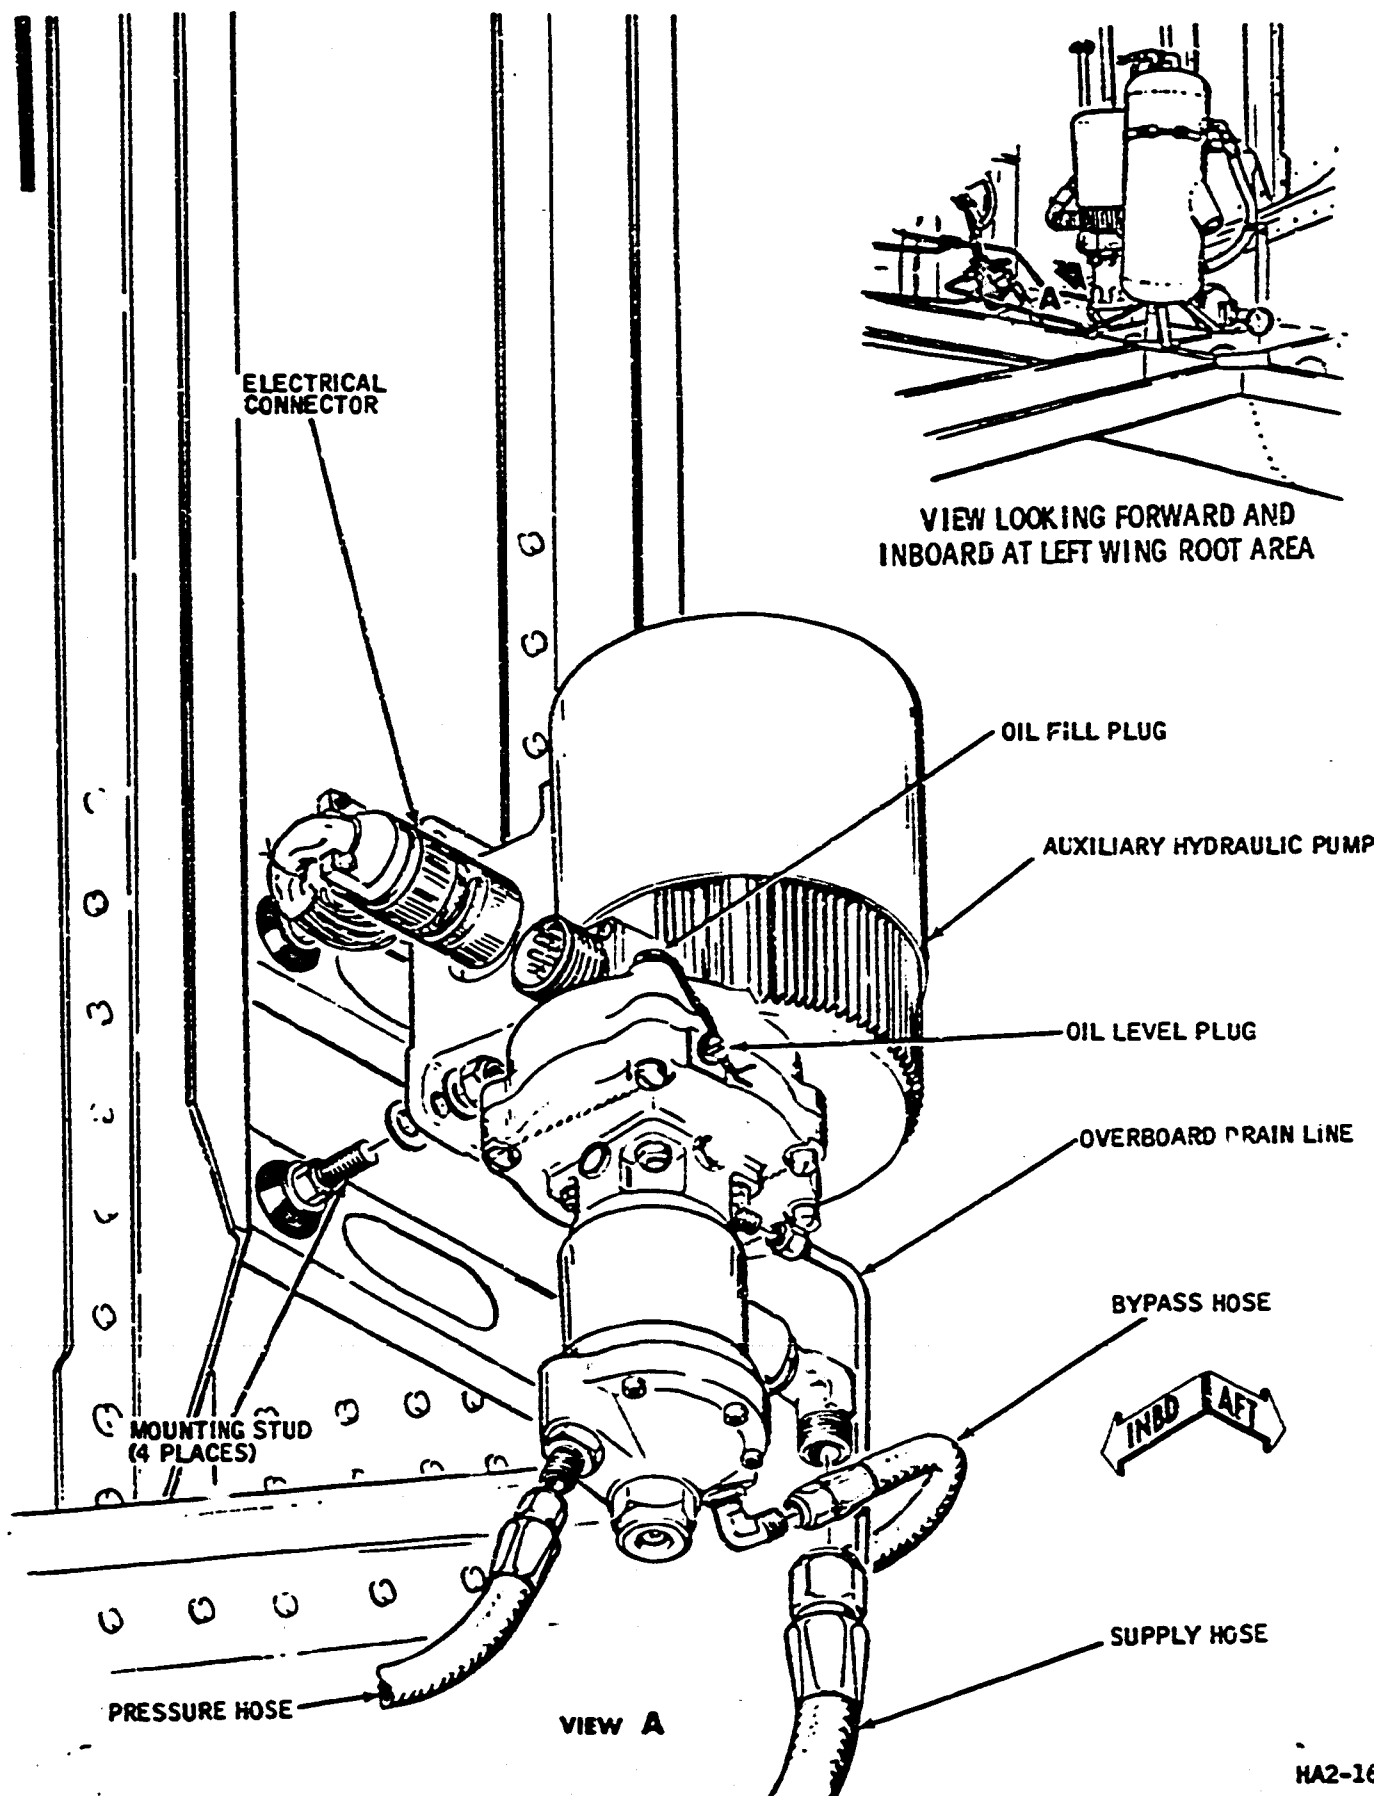


HA2-166A

Auxiliary Hydraulic Pump -- Installation  
 (Airplanes N8762-N8778)  
 Figure 201 (Sheet 1)

Oct 15/68

29-20-2  
 CODE 5  
 Page 203

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

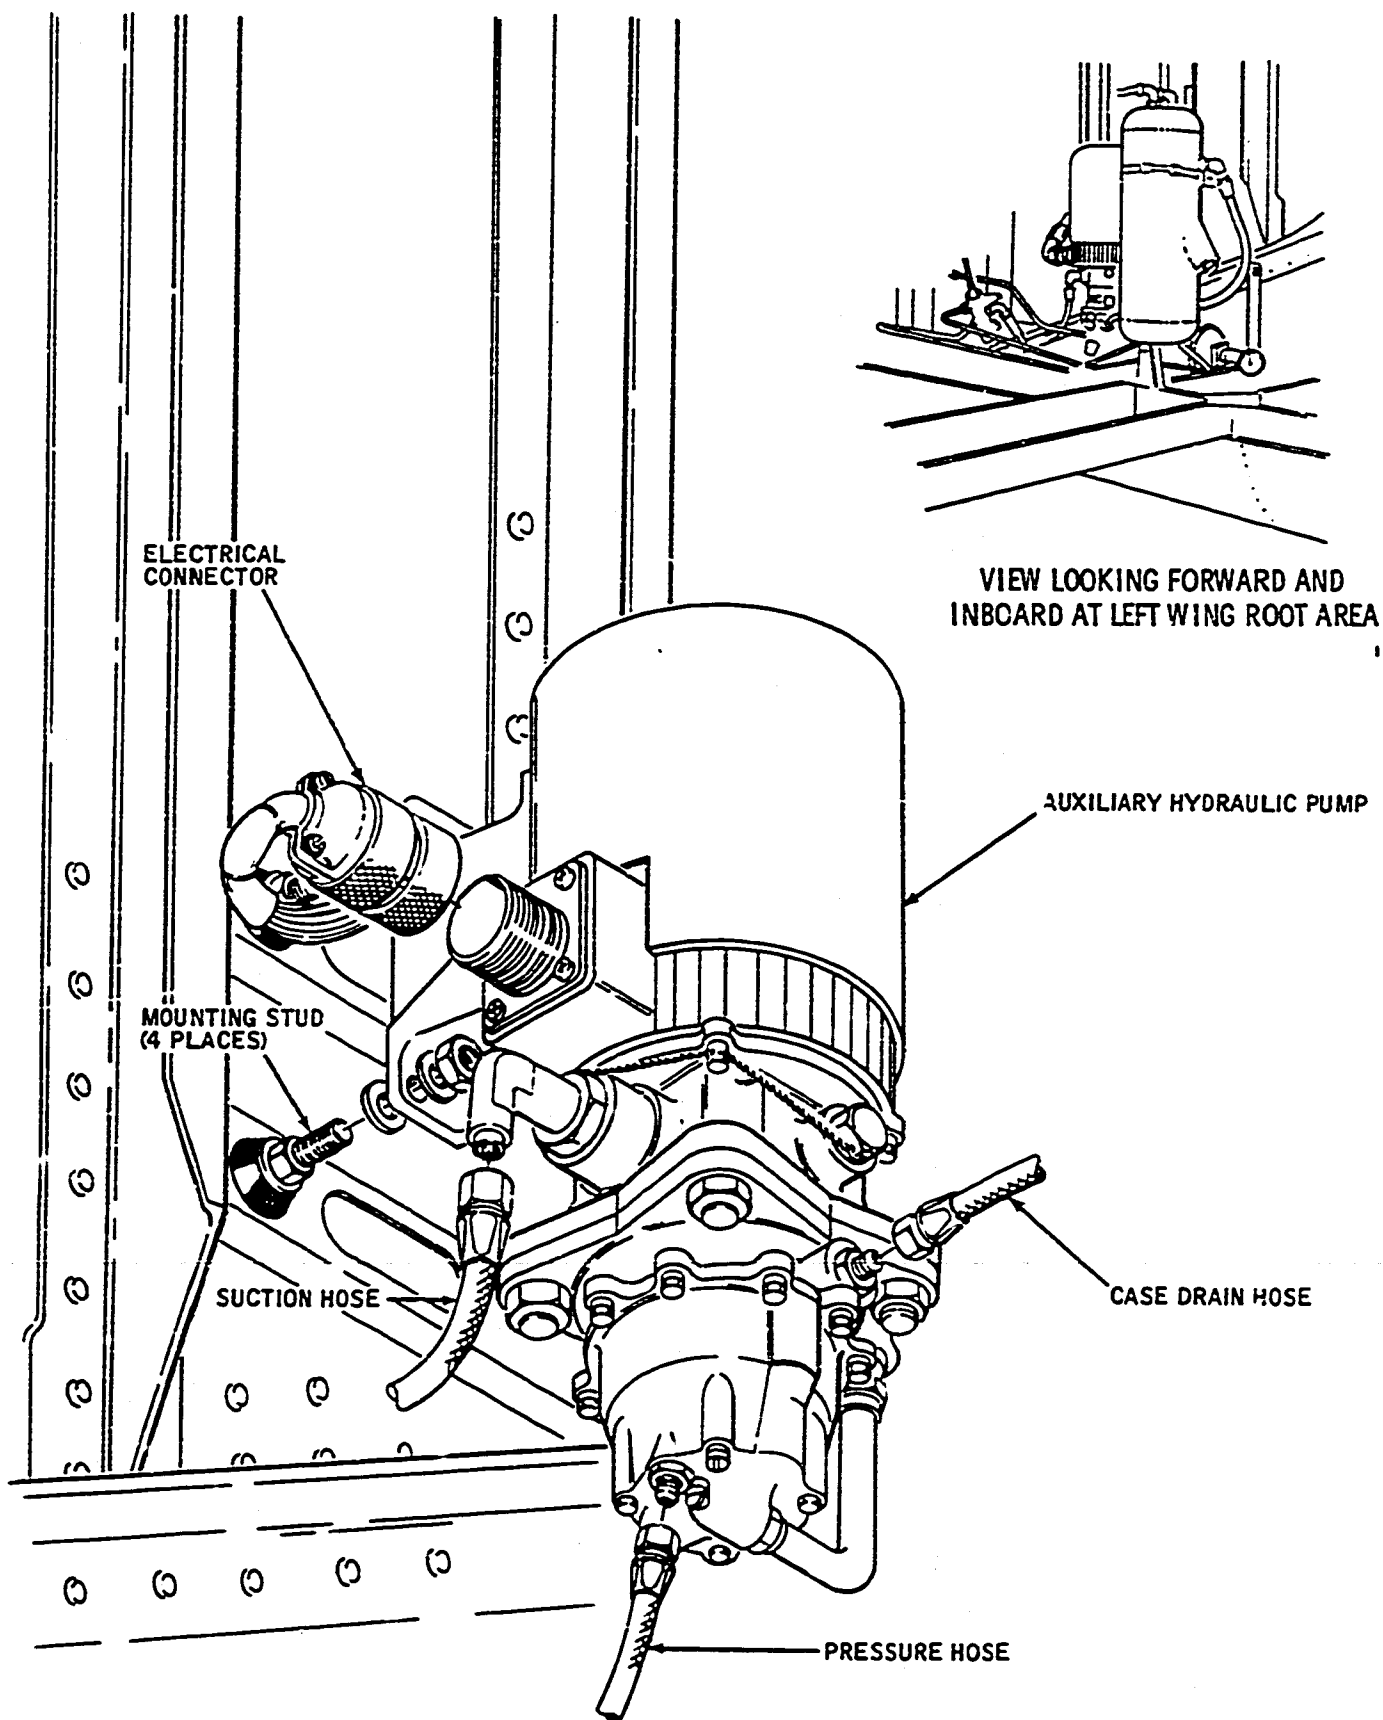

HA2-5477

Auxiliary Hydraulic Pump -- Installation  
(Aircraft N8755-N8760)  
Figure 201 (Sheet 2)

29-20-2  
CODE 5  
Page 204

Aug 1/69

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) Connect drain line to drain port.
- (9) Fill hydraulic reservoir as described on instruction placard on reservoir.
- (10) Close auxiliary hydraulic pump control circuit breaker.

6. Inspection/Check Auxiliary Hydraulic Pump

A. Check Auxiliary Hydraulic Pump

- (1) Place hydraulic system selector control lever in general system (normal) position.
- (2) Place rudder and aileron hydraulic power control levers in off position.
- (3) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).
- (4) Place auxiliary hydraulic pump switch momentarily in start (hold only in emergency position).

WARNING: BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

CAUTION: DO NOT HOLD AUXILIARY HYDRAULIC PUMP SWITCH IN START POSITION TO PERFORM PRESSURE CHECKS.

- (5) Check hydraulic system pressure indicator in flight compartment for 2800- to 3000-psi indication.

NOTE: With the hydraulic system selector valve in No. 1 (BYPASS/GENERAL SYSTEM) or No. 2 (GENERAL SYSTEM/NORMAL) position, a pressure reading of less than 2800 psi indicates more than minimum designed leakage in the hydraulic system is occurring and an effort should be made to isolate and correct the condition if time permits. Acceptable system operation can be obtained with a minimum of 2600 psi auxiliary hydraulic pump output when system selector valve is in No. 1 and No. 2 positions.

- (6) Place auxiliary hydraulic pump switch momentarily in stop position.
- (7) Check auxiliary hydraulic pump for security of attachment and leaks.
- (8) Check hydraulic lines for security, clearance, and leaks.
- (9) Check electrical connector on pump motor for security of attachment and condition of wiring.

Oct 15/68

29-20-2  
CODE 5  
Page 205

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC PUMP - MAINTENANCE PRACTICES

1. General

- A. The auxiliary hydraulic pump is located aft of the wing rear spar in the left wing root.
- B. Access to the auxiliary hydraulic pump is through the left wing root access door.

2. Tools and Equipment Required

- A. Clean Skydrol hydraulic fluid is used for filling the auxiliary hydraulic pump case.

3. Servicing Auxiliary Hydraulic Pump

- A. Prior to installing pump, fill pump case with clean Skydrol hydraulic fluid through case drain port.
- B. Prior to operation after installation, bleed air from pump as follows:
  - (1) Place hydraulic system control lever in general system (normal.) position.
  - (2) Pressurize hydraulic system reservoir by manual method (see 29-00, Maintenance Practices).
  - (3) Open B-nut at case drain port sufficiently to allow all air to escape from pump; tighten B-nut.

4. Removal/Installation Auxiliary Hydraulic Pump

A. Remove Auxiliary Hydraulic Pump

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Drain hydraulic system reservoir (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Disconnect electrical connector from auxiliary hydraulic pump motor.
- (6) Disconnect supply hose from suction port of auxiliary hydraulic pump.
- (7) Disconnect pressure hose from pressure port of pump.
- (8) Disconnect case drain hose from case drain port.
- (9) Disconnect seal cavity drain line from drain port.
- (10) Remove pump.
- (11) Remove fittings from pump ports; retain for use on new pump. Discard O-rings.

**B. Install Auxiliary Hydraulic Pump**


- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel is open.
- (2) Using new O-rings, install fittings in pump ports.
- (3) Fill pump case with clean Skydrol (see Paragraph 3, Servicing).
- (4) Install pump on mounting bracket.
- (5) Connect electrical connector to auxiliary hydraulic pump motor.
- (6) Connect supply hose to suction port of pump.
- (7) Connect pressure hose to pressure port of pump.
- (8) Connect case drain line to case drain port.
- (9) Connect seal cavity drain line to drain port.
- (10) Fill hydraulic reservoir as described on instruction placard on reservoir.
- (11) Bleed air from pump case (see Paragraph 3, Servicing).
- (12) Close auxiliary hydraulic pump control circuit breaker.

**5. Inspection/Check Auxiliary Hydraulic Pump**

**A. Check Auxiliary Hydraulic Pump**

- (1) Place hydraulic system selector control lever in general system (normal) position.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

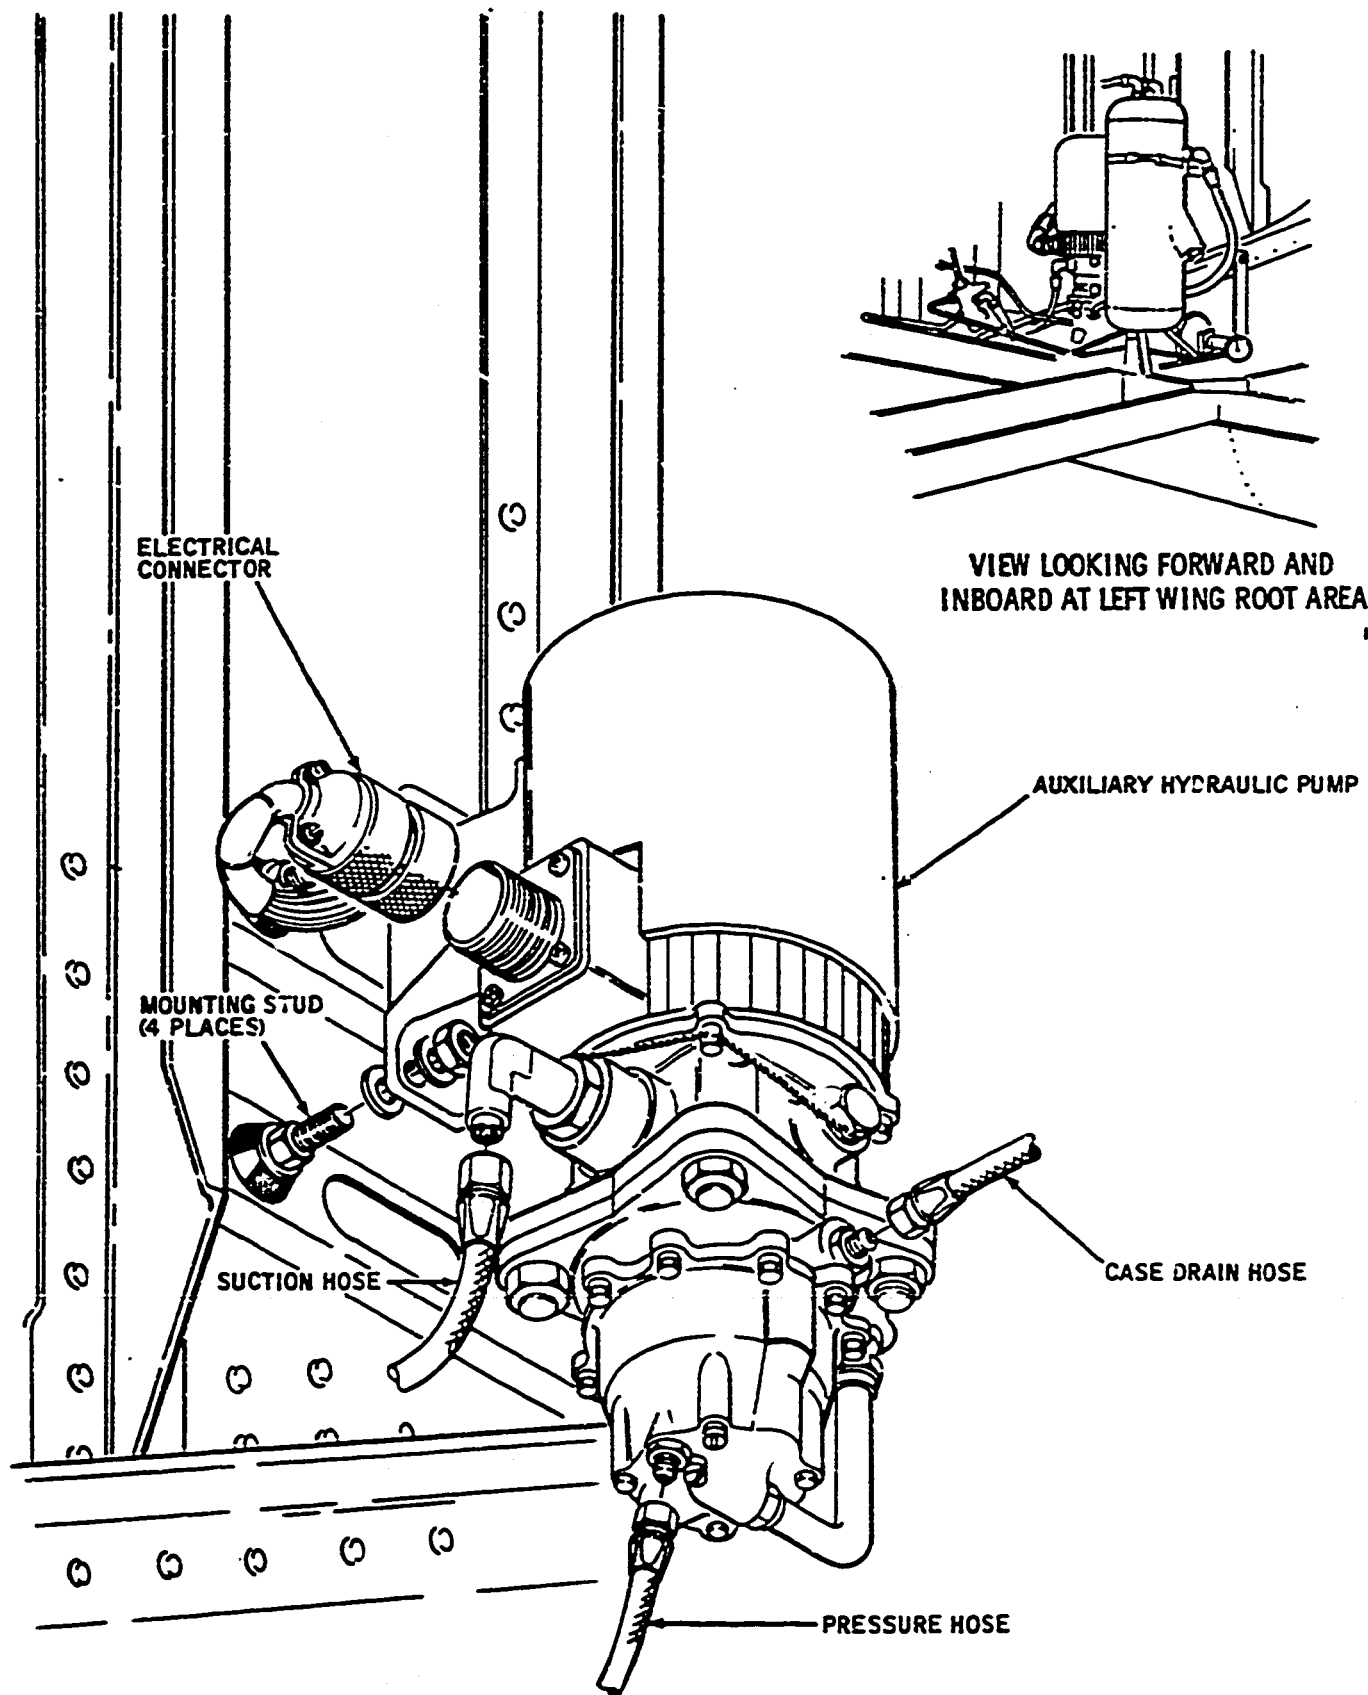

HA2-5477

Auxiliary Hydraulic Pump -- Installation  
Figure 201

Aug 1/68

29-20-2  
CODE 6  
Page 203

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Place rudder and aileron hydraulic power levers in off position.
- (3) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).
- (4) Place auxiliary hydraulic pump switch momentarily in start (hold only in emergency) position.

WARNING: BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

CAUTION: BEFORE OPERATING THE PUMP MAKE SURE THAT ALL AIR HAS BEEN BLED FROM THE PUMP AND PUMP IS COMPLETELY FULL OF SKYDROL HYDRAULIC FLUID.

CAUTION: DO NOT HOLD AUXILIARY HYDRAULIC PUMP SWITCH IN START POSITION TO PERFORM PRESSURE CHECKS.

- (5) Check hydraulic system pressure indicator in flight compartment for 2600- to 3000-psi indicator.

NOTE: With the hydraulic system selector valve in No. 1 (BYPASS/GENERAL SYSTEM) or No. 2 (GENERAL SYSTEM/NORMAL) position, a pressure reading of less than 2800 psi indicates more than minimum designed leakage in the hydraulic system is occurring and an effort should be made to isolate and correct the condition if time permits. Acceptable system operation can be obtained with a minimum of 2600 psi auxiliary hydraulic pump output when system selector valve is in No. 1 and No. 2 positions.

- (6) Place auxiliary hydraulic pump switch momentarily in stop position.
- (7) Check auxiliary hydraulic pump for security of attachment and leaks.
- (8) Check hydraulic lines for security, clearance, and leaks.
- (9) Check electrical connector on pump motor for security of attachment and condition of wiring.



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC PUMP - MAINTENANCE PRACTICES

1. General

- A. The auxiliary hydraulic pump is located aft of the wing rear spar in the left wing root.
- B. Access to the auxiliary hydraulic pump is through the left wing root access door.

2. Tools and Equipment Required

- A. Clean Skydrol hydraulic fluid is used for filling the auxiliary hydraulic pump case.

3. Servicing Auxiliary Hydraulic Pump

- A. Prior to installing pump, fill pump case with clean Skydrol hydraulic fluid through case drain port.
- B. Prior to operation after installation, bleed air from pump as follows:
  - (1) Place hydraulic system control lever in general system (normal) position.
  - (2) Pressurize hydraulic system reservoir by manual method (see 29-00, Maintenance Practices).
  - (3) Open B-nut at case drain port sufficiently to allow all air to escape from pump; tighten B-nut.

4. Removal/Installation Auxiliary Hydraulic Pump

A. Remove Auxiliary Hydraulic Pump

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Drain hydraulic system reservoir (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Disconnect electrical connector from auxiliary hydraulic pump motor.
- (6) Disconnect supply hose from suction port of auxiliary hydraulic pump.
- (7) Disconnect pressure hose from pressure port of pump.
- (8) Disconnect case drain hose from case drain port.
- (9) Disconnect seal cavity drain line from drain port.
- (10) Remove pump.
- (11) Remove fittings from pump ports; retain for use on new pump. Discard O-rings.

**B. Install Auxiliary Hydraulic Pump**


- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel is open.
- (2) Using new O-rings, install fittings in pump ports.
- (3) Fill pump case with clean Skydrol (see Paragraph 3, Servicing).
- (4) Install pump on mounting bracket.
- (5) Connect electrical connector to auxiliary hydraulic pump motor.
- (6) Connect supply hose to suction port of pump.
- (7) Connect pressure hose to pressure port of pump.
- (8) Connect case drain line to case drain port.
- (9) Connect seal cavity drain line to drain port.
- (10) Fill hydraulic reservoir as described on instruction placard on reservoir.
- (11) Bleed air from pump case (see Paragraph 3, Servicing).
- (12) Close auxiliary hydraulic pump control circuit breaker.

**5. Inspection/Check Auxiliary Hydraulic Pump**

**A. Check Auxiliary Hydraulic Pump**

- (1) Place hydraulic system selector control lever in general system (normal) position.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

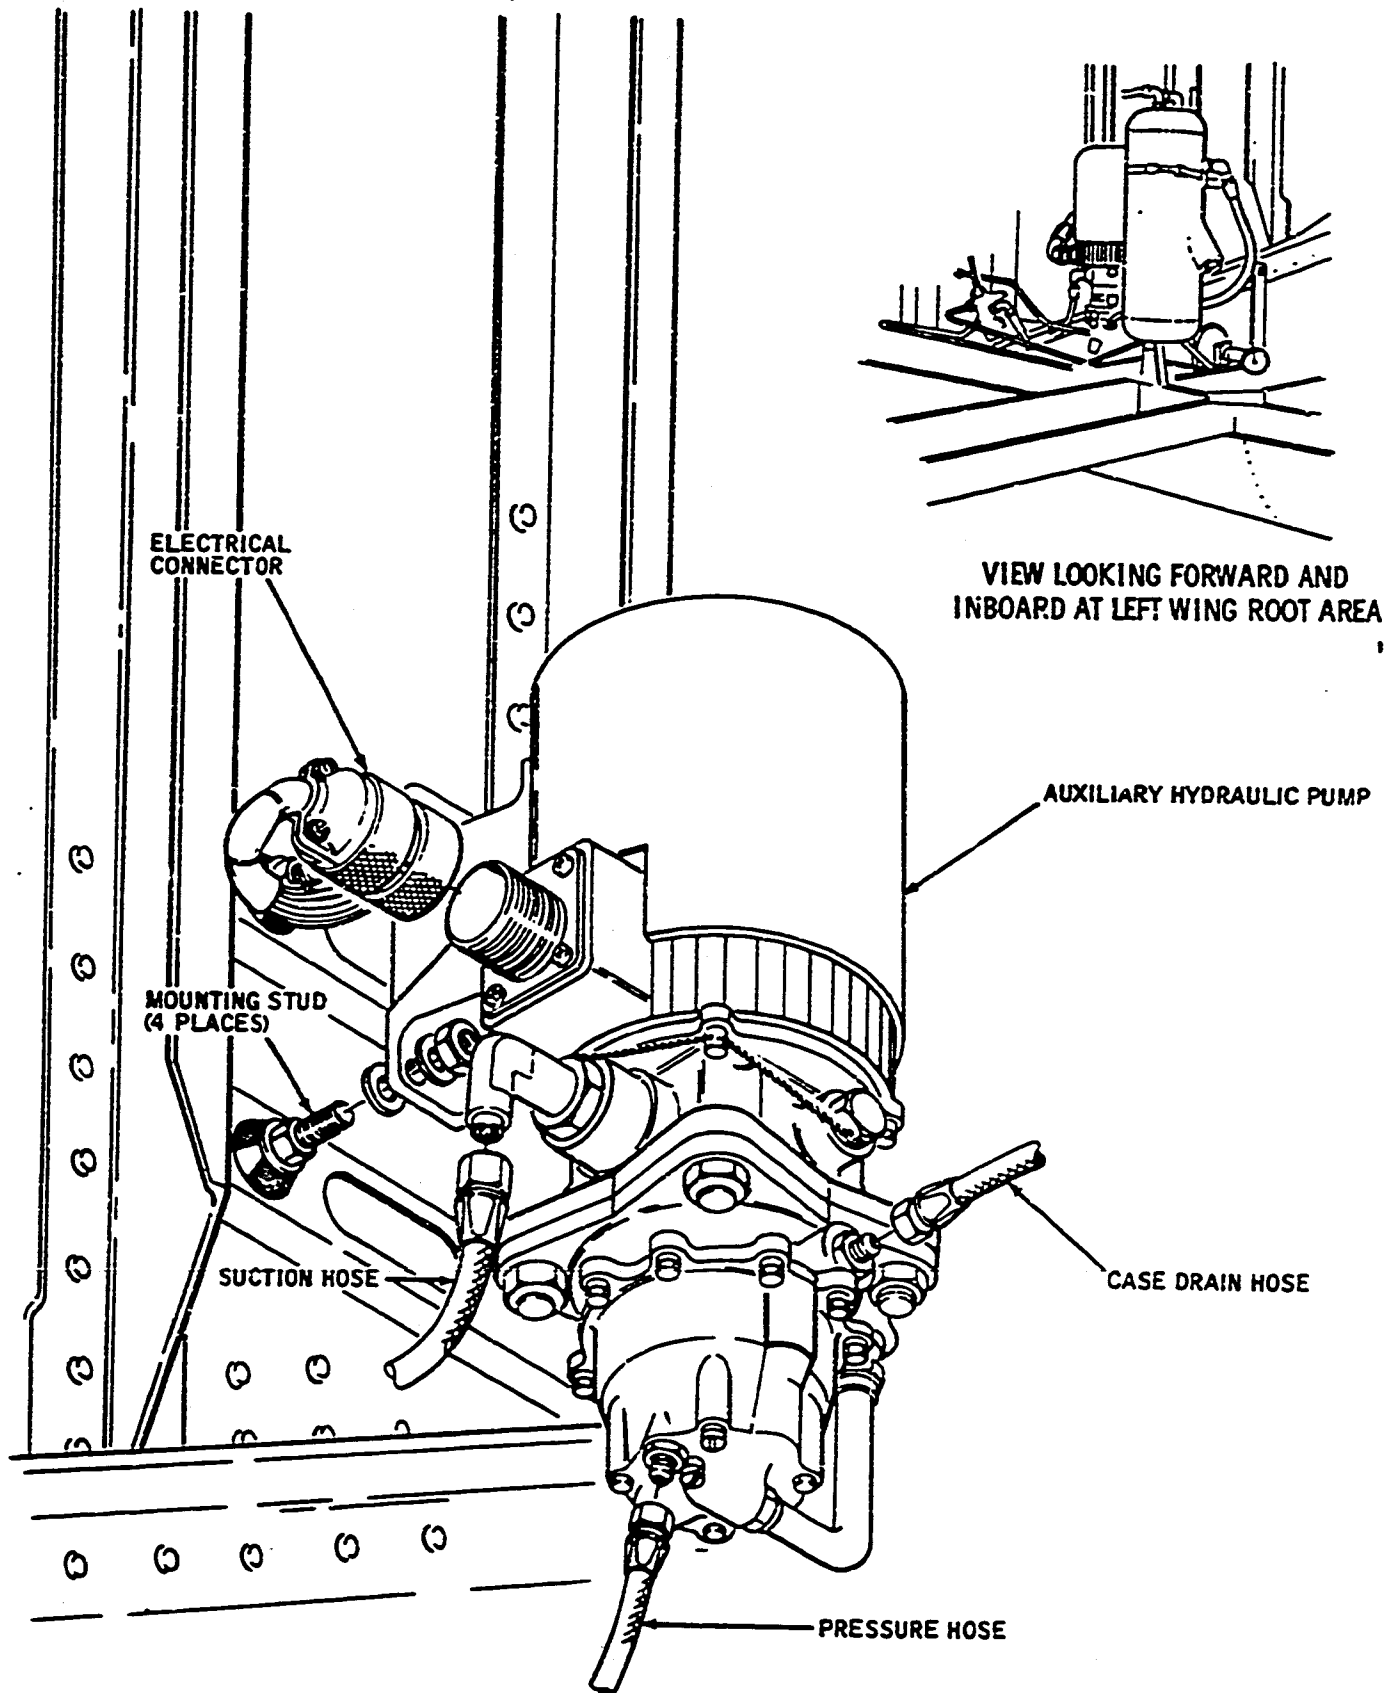

Auxiliary Hydraulic Pump -- Installation  
Figure 201

Feb 1/69

HA2-5477

29-20-2  
CODE 7  
Page 203

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Place rudder and aileron hydraulic power levers in off position.
- (3) Open air compressor control and water separation circuit breaker located on dc bus section of circuit breaker panel.
- (4) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).
- (5) Place auxiliary hydraulic pump switch momentarily in start (hold only in emergency) position.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

**CAUTION:** BEFORE OPERATING THE PUMP MAKE SURE THAT ALL AIR HAS BEEN BLED FROM THE PUMP AND PUMP IS COMPLETELY FULL OF SKYDROL HYDRAULIC FLUID.

**CAUTION:** DO NOT HOLD AUXILIARY HYDRAULIC PUMP SWITCH IN START POSITION TO PERFORM PRESSURE CHECKS.

- (6) Check hydraulic system pressure indicator in flight compartment for 2600- to 3000-psi indicator.

**NOTE:** With the hydraulic system selector valve in No. 1 (BYPASS/GENERAL SYSTEM) or No. 2 (GENERAL SYSTEM/NORMAL) position, a pressure reading of less than 2800 psi indicates more than minimum designed leakage in the hydraulic system is occurring and an effort should be made to isolate and correct the condition if time permits. Acceptable system operation can be obtained with a minimum of 2600 psi auxiliary hydraulic pump output when system selector valve is in No. 1 and No. 2 positions.

- (7) Place auxiliary hydraulic pump switch momentarily in stop position.
- (8) Check auxiliary hydraulic pump for security of attachment and leaks.
- (9) Check hydraulic lines for security, clearance, and leaks.
- (10) Check electrical connector on pump motor for security of attachment and condition of wiring.
- (11) Close air compressor control and water separation circuit breaker.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC PUMP - MAINTENANCE PRACTICES

1. General

- A. The auxiliary hydraulic pump is located aft of the wing rear spar in the left wing root.
- B. Access to the auxiliary hydraulic pump is through the left wing root access door.

2. Tools and Equipment Required

- A. Clean Skydrol hydraulic fluid is used for filling the auxiliary hydraulic pump case.

3. Servicing Auxiliary Hydraulic Pump

- A. Prior to installing pump, fill pump case with clean Skydrol hydraulic fluid through case drain port.
- B. Prior to operation after installation, bleed air from pump as follows:
  - (1) Place hydraulic system control lever in general system (normal) position.
  - (2) Pressurize hydraulic system reservoir by manual method (see 29-00, Maintenance Practices).
  - (3) Open B-nut at case drain port sufficiently to allow all air to escape from pump; tighten B-nut.

4. Removal/Installation Auxiliary Hydraulic Pump

A. Remove Auxiliary Hydraulic Pump

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Drain hydraulic system reservoir (see 29-00, Maintenance Practices).
- (5) Disconnect electrical connector from auxiliary hydraulic pump motor.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (6) Disconnect supply hose from suction port of auxiliary hydraulic pump.
- (7) Disconnect pressure hose from pressure port of pump.
- (8) Disconnect case drain hose from case drain port.
- (9) Disconnect seal cavity drain line from drain port.
- (10) Remove pump.
- (11) Remove fittings from pump ports; retain for use on new pump. Discard O-rings.

**B. Install Auxiliary Hydraulic Pump**


- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel is open.
- (2) Using new O-rings, install fittings in pump ports.
- (3) Fill pump case with clean Skydrol (see Paragraph 3, Servicing).
- (4) Install pump on mounting bracket.
- (5) Connect electrical connector to auxiliary hydraulic pump motor.
- (6) Connect supply hose to suction port of pump.
- (7) Connect pressure hose to pressure port of pump.
- (8) Connect case drain line to case drain port.
- (9) Connect seal cavity drain line to drain port.
- (10) Fill hydraulic reservoir as described on instruction placard on reservoir.
- (11) Bleed air from pump case (see Paragraph 3, Servicing).
- (12) Close auxiliary hydraulic pump control circuit breaker.

**5. Inspection/Check Auxiliary Hydraulic Pump**

**A. Check Auxiliary Hydraulic Pump**

- (1) Place hydraulic system selector control lever in general system (normal) position.
- (2) Place rudder and aileron hydraulic power levers in off position.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

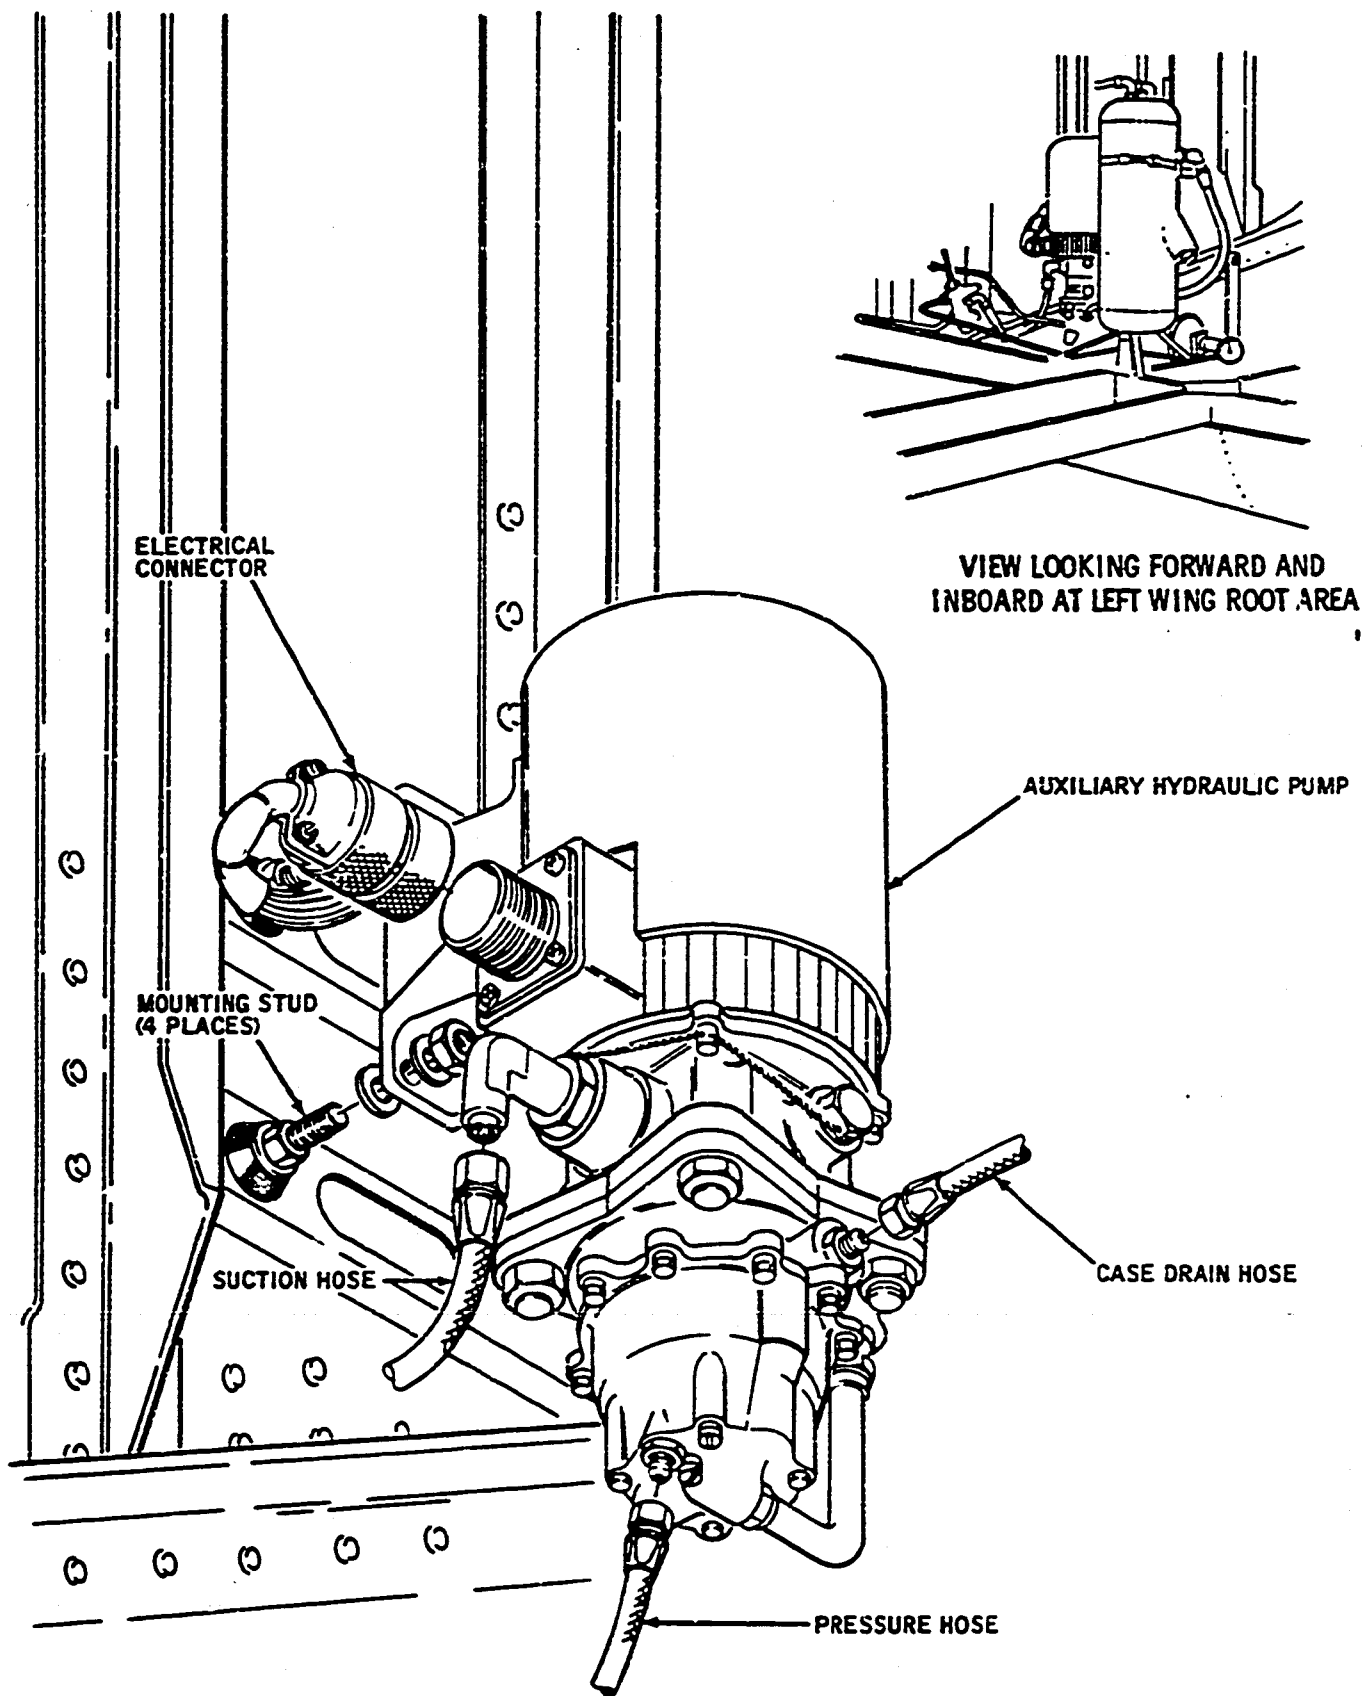

Auxiliary Hydraulic Pump -- Installation  
 Figure 201

May 1/69

HA2-5477

29-20-2  
 CODE 8  
 Page 203

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).
- (4) Place auxiliary hydraulic pump switch momentarily in start (hold only in emergency) position.

**WARNING:** BEFORE PRESSURIZING THE HYDRAULIC SYSTEM, MAKE CERTAIN THAT THE LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THAT THE LANDING GEAR LOCKPINS ARE INSTALLED. MAKE CERTAIN THAT THE THRUST REVERSERS, ALL FLIGHT CONTROL SURFACES, AND FLIGHT CONTROLS IN THE FLIGHT COMPARTMENT ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

**CAUTION:** BEFORE OPERATING THE PUMP MAKE SURE THAT ALL AIR HAS BEEN BLED FROM THE PUMP AND PUMP IS COMPLETELY FULL OF SKYDROL HYDRAULIC FLUID.

**CAUTION:** DO NOT HOLD AUXILIARY HYDRAULIC PUMP SWITCH IN START POSITION TO PERFORM PRESSURE CHECKS.

- (5) Check hydraulic system pressure indicator in flight compartment for 2600- to 3000-psi indicator.

**NOTE:** With the hydraulic system selector valve in No. 1 (BYPASS/GENERAL SYSTEM) or No. 2 (GENERAL SYSTEM/NORMAL) position, a pressure reading of less than 2800 psi indicates more than minimum designed leakage in the hydraulic system is occurring and an effort should be made to isolate and correct the condition if time permits. Acceptable system operation can be obtained with a minimum of 2600 psi auxiliary hydraulic pump output when system selector valve is in No. 1 and No. 2 positions.

- (6) Place auxiliary hydraulic pump switch momentarily in stop position.
- (7) Check auxiliary hydraulic pump for security of attachment and leaks.
- (8) Check hydraulic lines for security, clearance, and leaks.
- (9) Check electrical connector on pump motor for security of attachment and condition of wiring.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC PUMP RELIEF VALVE - MAINTENANCE PRACTICES

1. General

- A. The auxiliary hydraulic pump relief valve is teed into return port A on the hydraulic system reservoir, located in the left wing root area aft of the rear spar.
- B. Access to the relief valve is through the left wing root access door.

2. Removal/Installation Auxiliary Hydraulic Pump Relief Valve

A. Remove Relief Valve

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Disconnect auxiliary pump pressure line from inlet port of relief valve.
- (5) Remove relief valve from reducer in T-fitting in reservoir return port A. Discard O-ring.
- (6) Remove fitting from inlet port of relief valve; retain for use in new valve. Discard O-ring.


B. Install Relief Valve

- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 is open.
- (2) Using new O-ring, install fitting in inlet port of relief valve.
- (3) Using new O-ring, install relief valve in tee fitting in reservoir return port A.

CAUTION: BE CERTAIN THAT VALVE IS INSTALLED WITH ARROW POINTING TOWARD RESERVOIR.

- (4) Connect auxiliary pump pressure line to inlet port of valve.
- (5) Close auxiliary hydraulic pump circuit breaker.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

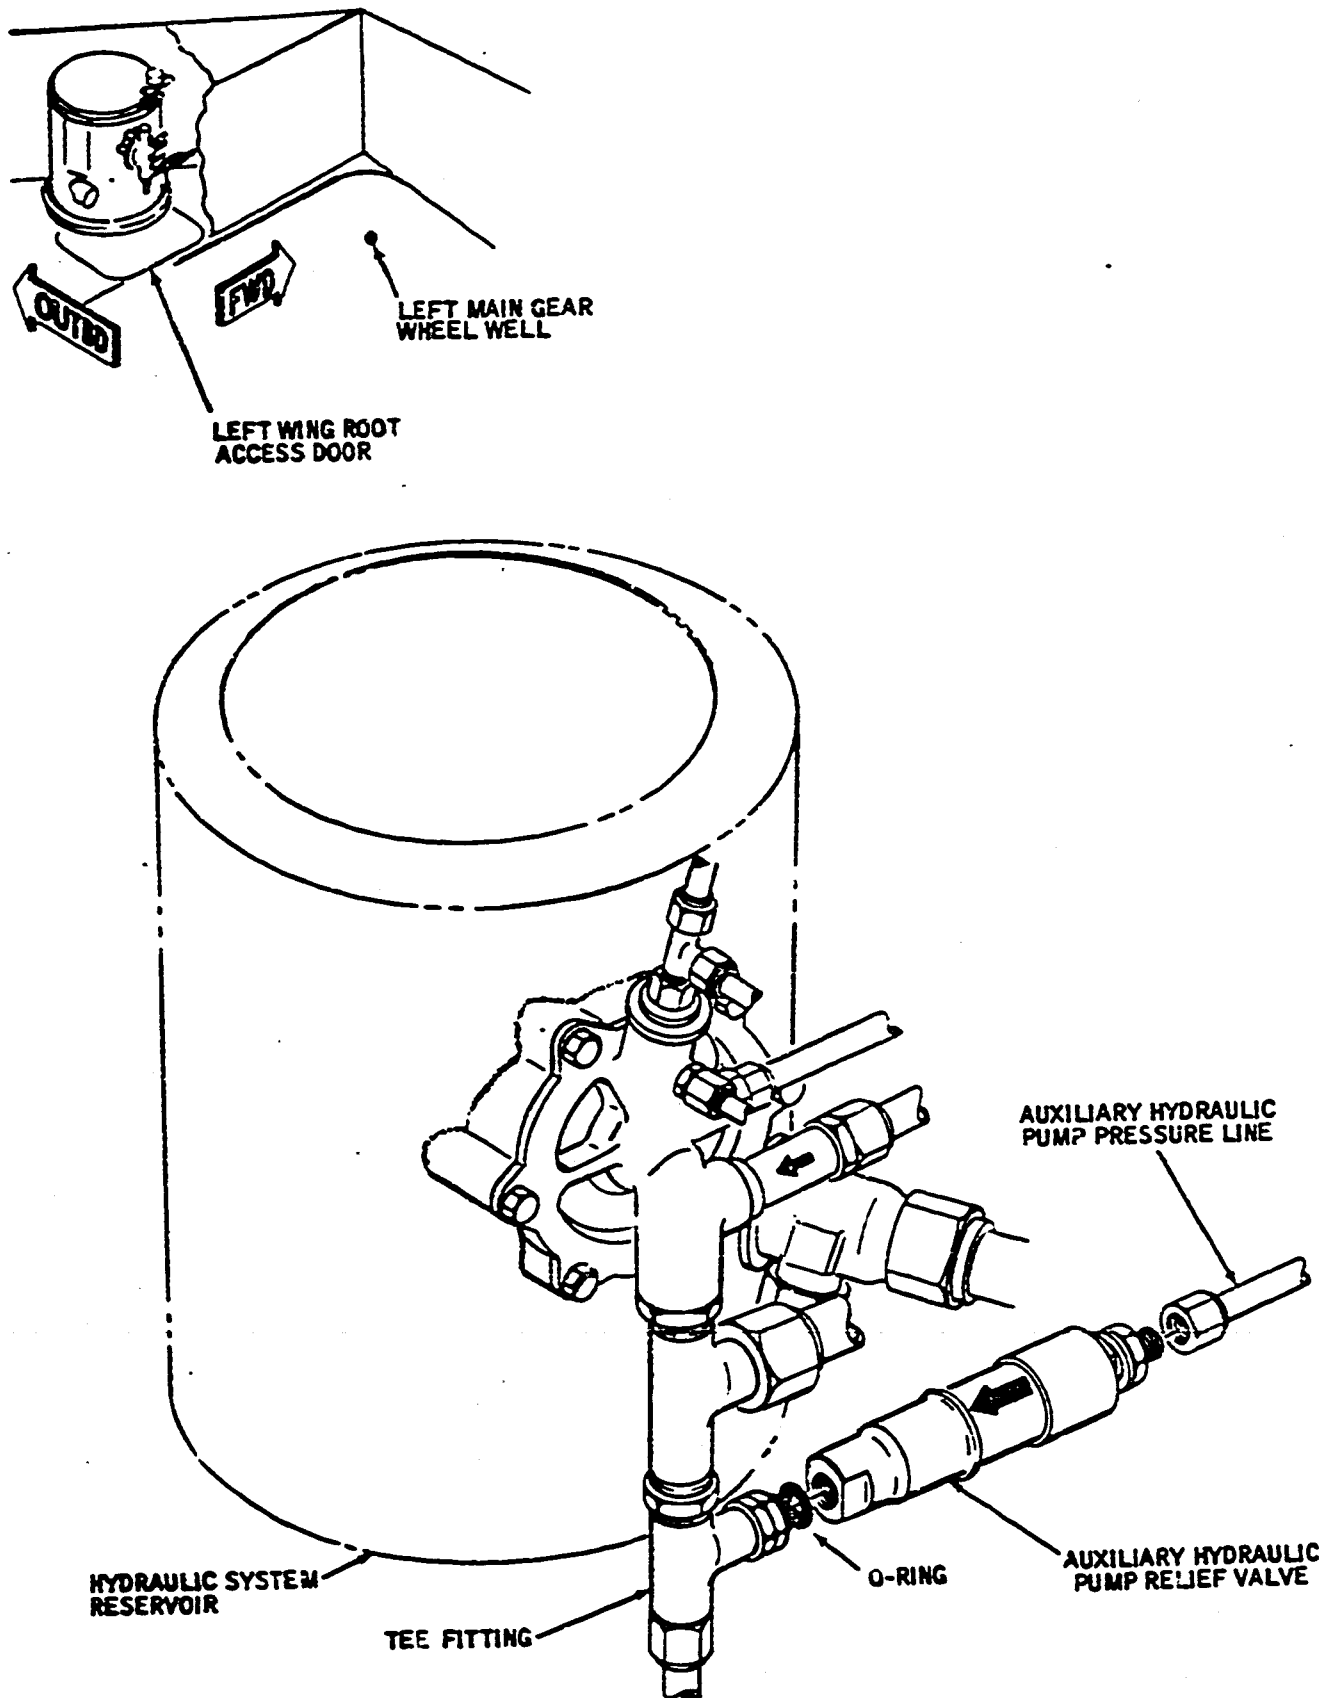

Auxiliary Hydraulic Pump Relief Valve -- Installation  
Figure 201

29-20-3  
CODE 1  
Page 202

HA2-154

Jun 15/67

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

3. Inspection/Check Auxiliary Hydraulic Pump Relief Valve

A. Check Relief Valve

- (1) Make certain that relief valve flow arrow (outlet port) is directed toward T-fitting in return port A of reservoir.
- (2) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).
- (3) Pressurize hydraulic system with auxiliary hydraulic pump (see 29-00, Maintenance Practices).
- (4) Check relief valve, lines, and fittings for general condition and leaks.
- (5) Shut down auxiliary hydraulic pump and depressurize hydraulic system (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC PUMP RELIEF VALVE - MAINTENANCE PRACTICES

1. General

- A. The auxiliary hydraulic pump relief valve is teed into return port A on the hydraulic system reservoir, located in the left wing root area aft of the rear spar.
- B. Access to the relief valve is through the left wing root access door.

2. Removal/Installation Auxiliary Hydraulic Pump Relief Valve

A. .Remove Relief Valve

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Disconnect auxiliary pump pressure line from inlet port of relief valve.
- (5) Remove relief valve from reducer in T-fitting in reservoir return port A. Discard O-ring.
- (6) Remove fitting from inlet port of relief valve; retain for use in new valve. Discard O-ring.


B. Install Relief Valve

- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 is open.
- (2) Using new O-ring, install fitting in inlet port of relief valve.
- (3) Using new O-ring, install relief valve in tee fitting in reservoir return port A.

CAUTION: BE CERTAIN THAT VALVE IS INSTALLED WITH ARROW POINTING TOWARD RESERVOIR.

- (4) Connect auxiliary pump pressure line to inlet port of valve.
- (5) Close auxiliary hydraulic pump circuit breaker.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

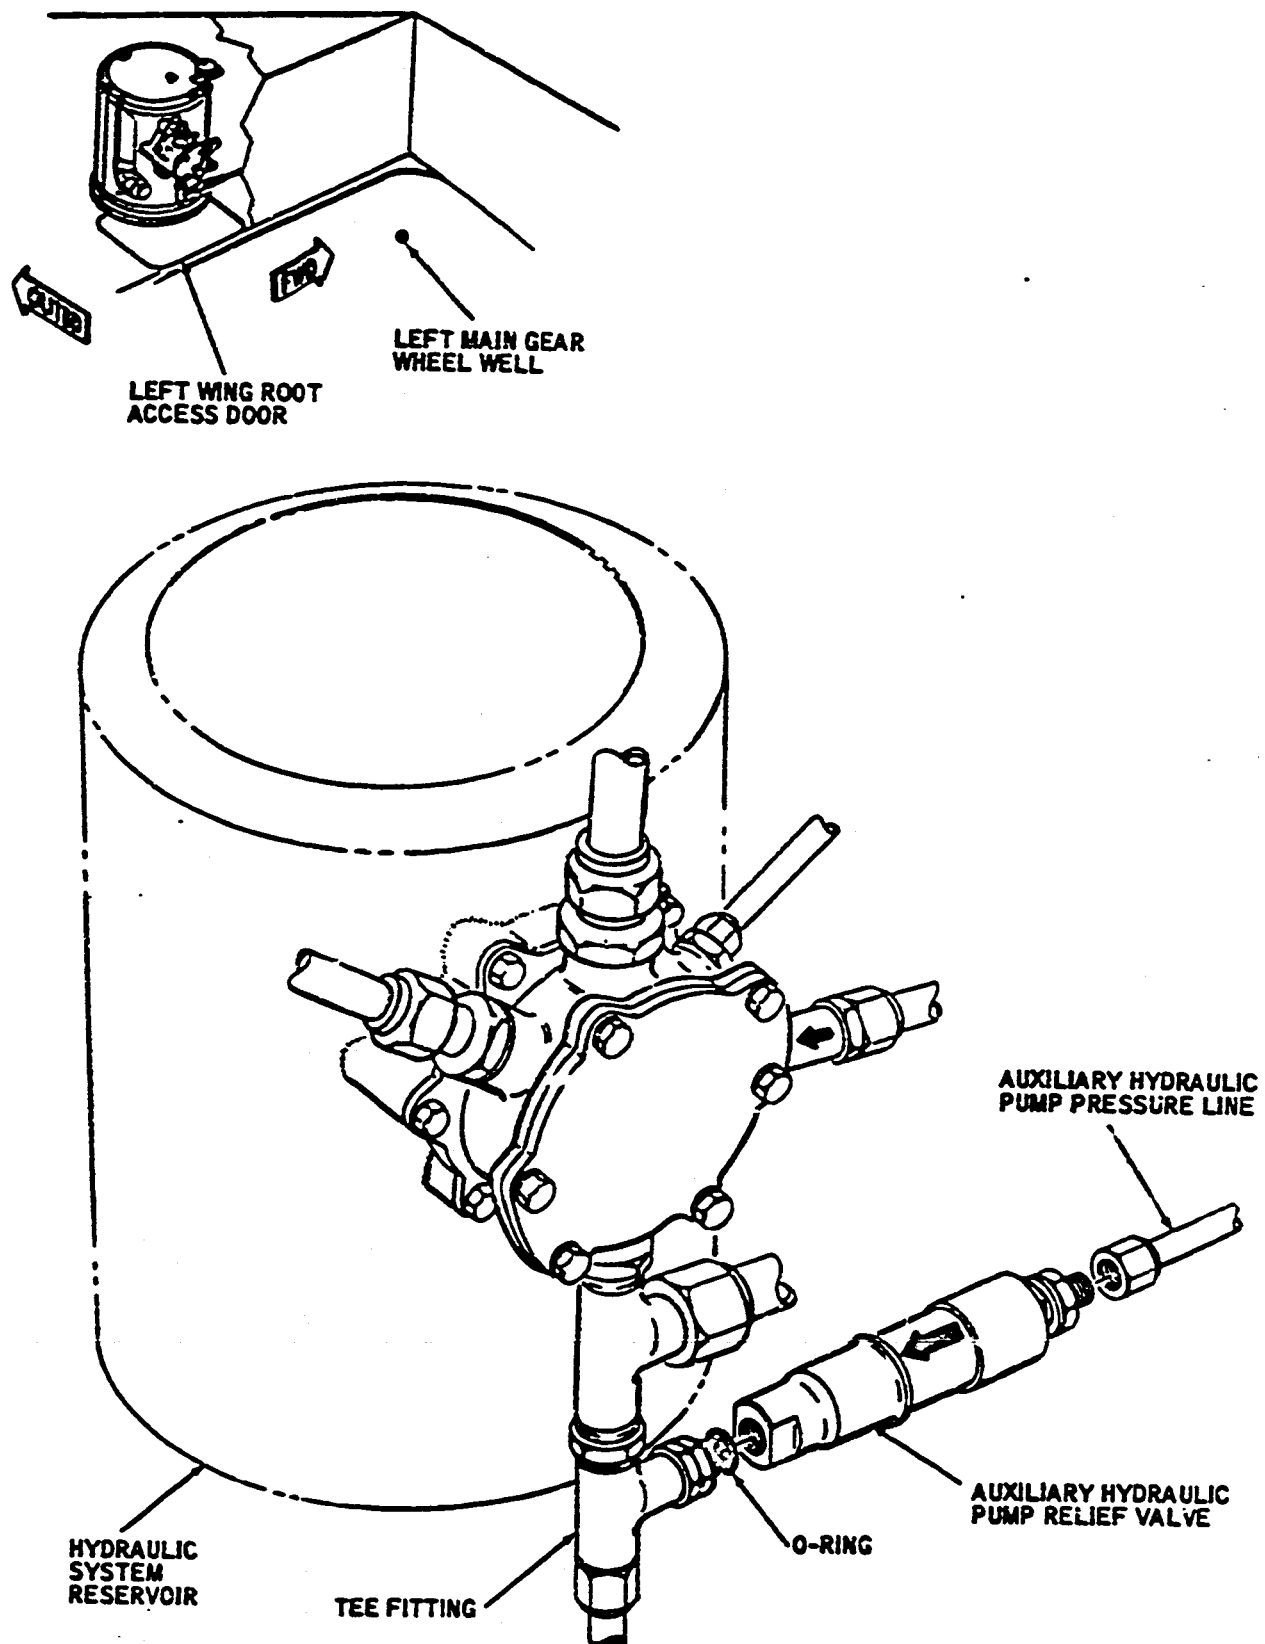

Auxiliary Hydraulic Pump Relief Valve -- Installation  
 Figure 201

HA2-999

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

3. Inspection/Check Auxiliary Hydraulic Pump Relief Valve

A. Check Relief Valve

- (1) Make certain that relief valve flow arrow (outlet port) is directed toward T-fitting in return port A of reservoir.
- (2) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).
- (3) Pressurize hydraulic system with auxiliary hydraulic pump (see 29-00, Maintenance Practices).
- (4) Check relief valve, lines, and fittings for general condition and leaks.
- (5) Shut down auxiliary hydraulic pump and depressurize hydraulic system (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC SYSTEM FILTER - MAINTENANCE PRACTICES

1. General

- A. The auxiliary hydraulic system filter is located on the forward inboard side of the left main gear wheel well, slightly inboard and above the dual filter and relief valve.
- B. Access is through the left main gear inboard door.

2. Removal/Installation Auxiliary Hydraulic System Filter

A. Remove Filter

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.



WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Disconnect auxiliary hydraulic pump pressure lines from inlet and outlet ports of filter.
- (5) Remove filter.
- (6) Remove fittings from filter head; retain for use in new unit. Discard O-rings.

B. Install Filter

- (1) Make certain that a xiliary hydraulic pump control circuit breaker is open.
- (2) Using new O-rings, install fittings in inlet and outlet port of filter.
- (3) Install filter on bracket with inlet port forward in relation to airplane.
- (4) Connect auxiliary hydraulic pump pressure lines to filter ports.
- (5) Close auxiliary hydraulic pump control circuit breaker.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

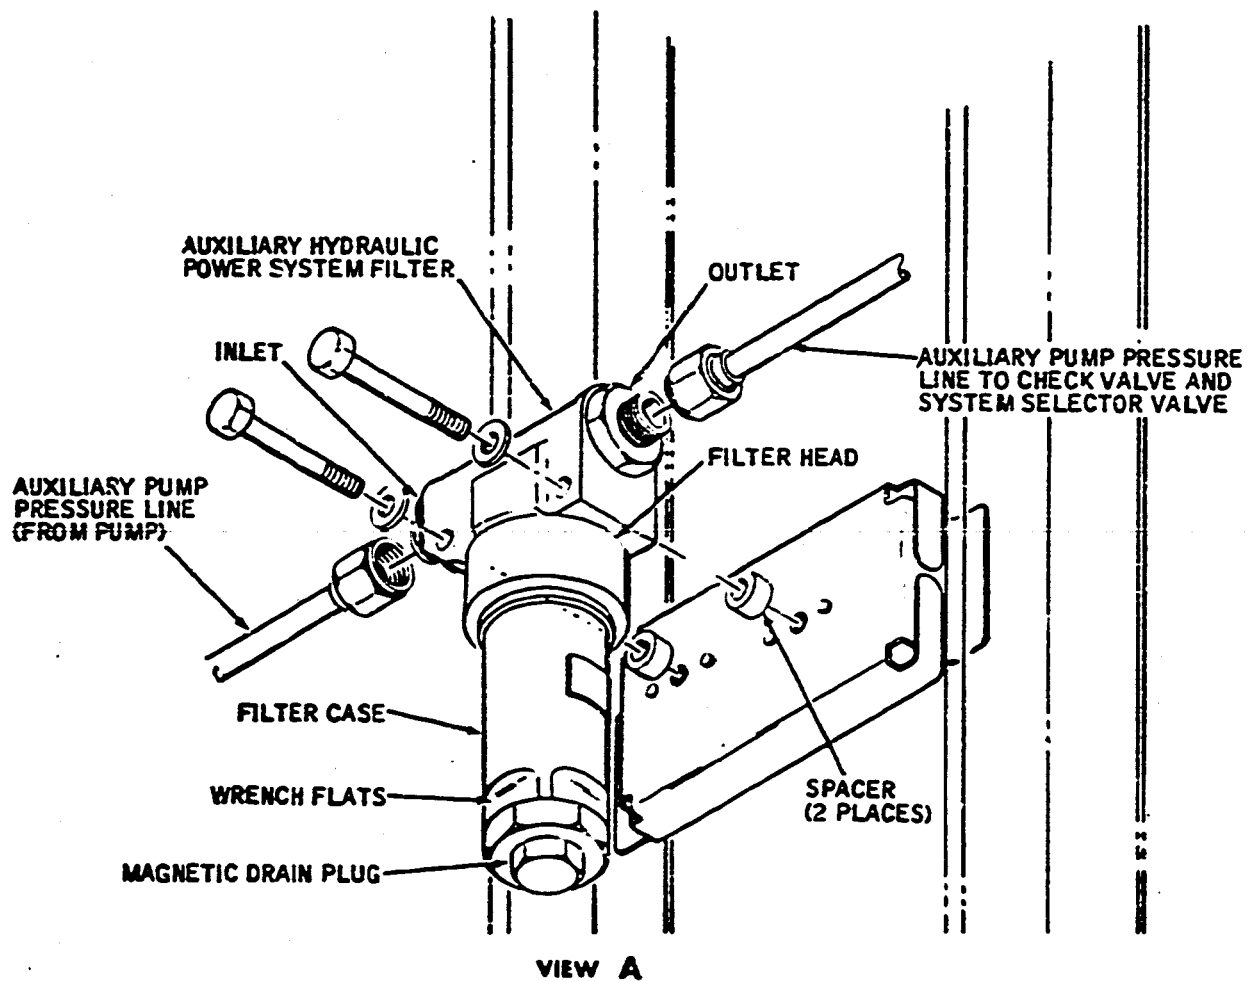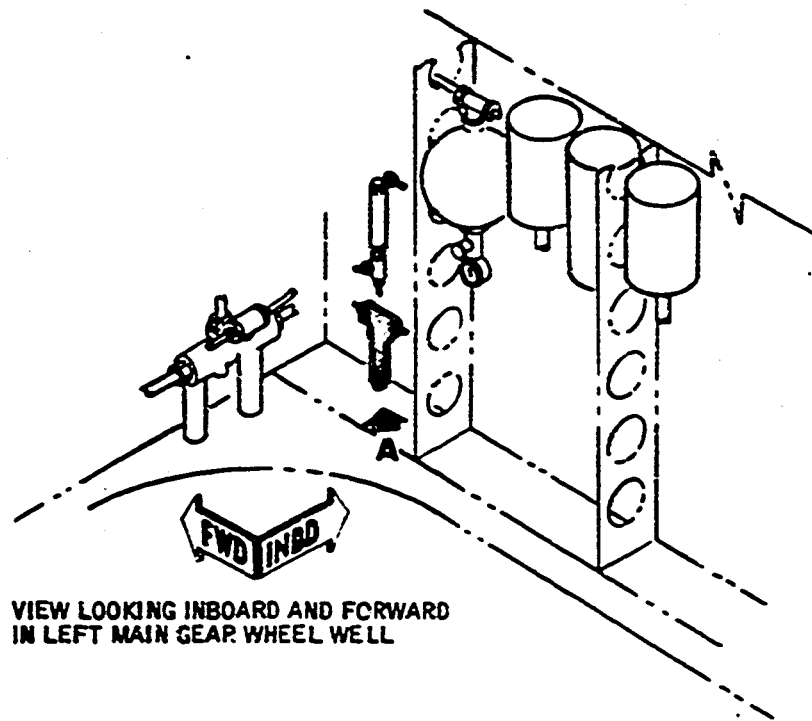

HA2-155

Auxiliary Hydraulic Power System Filter -- Installation  
 Figure 201



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

3. Inspection/Check Auxiliary Hydraulic System Filter

A. Check Filter

- (1) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).
- (2) Pressurize hydraulic system with auxiliary hydraulic pump (see 29-00, Maintenance Practices).
- (3) Check filter, hydraulic lines, and fittings for security of attachment, general condition, and leaks.
- (4) Shut down auxiliary hydraulic pump and depressurize hydraulic system (see 29-00, Maintenance Practices).
- (5) Remove magnetic drain plug from bottom of filter and discard O-ring. Check for metal particles which indicate impending failure of auxiliary hydraulic pump.
- (6) Using new O-ring, install magnetic drain plug in bottom of filter. Tighten plug to torque of 150 ( $\pm 15$ ) inch-pounds.
- (7) Safety magnetic drain plug with lockwire.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC SYSTEM FILTER - MAINTENANCE PRACTICES

1. General

- A. On airplanes 801-811, the auxiliary hydraulic system filter is located in the left wing root, just forward of the auxiliary hydraulic pump. On airplanes 812-819, 860 and subsequent, the filter is located on the forward inboard side of the left main gear wheel well, slightly inboard and above the dual filter and relief valve.
- B. On airplanes 801-811, access is through the left wing root access door. On airplanes 812-819, 860 and subsequent, access is through the left main inboard door.

2. Removal/Installation Auxiliary Hydraulic System Filter

A. Remove Filter

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Disconnect auxiliary hydraulic pump pressure lines from inlet and outlet ports of filter.
- (5) Remove filter.
- (6) Remove fittings from filter head; retain for use in new unit. Discard O-rings.

B. Install Filter


- (1) Make certain that auxiliary hydraulic pump control circuit breaker is open.
- (2) Using new O-rings, install fittings in inlet and outlet port of filter.
- (3) On airplanes 801-811, install filter on bracket with outlet port forward in relation to airplane.
- (4) On airplanes 812-819, 860 and subsequent, install filter on bracket with inlet port forward in relation to airplane.

Jan 15/68


Printed in U.S.A.

29-20-4  
CODE 2  
Page 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

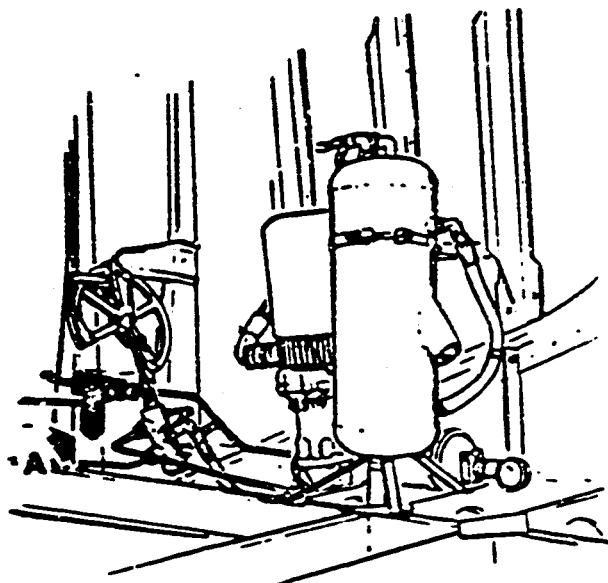



VIEW LOOKING FORWARD AND OUTBOARD  
 IN LEFT WING ROOT AREA

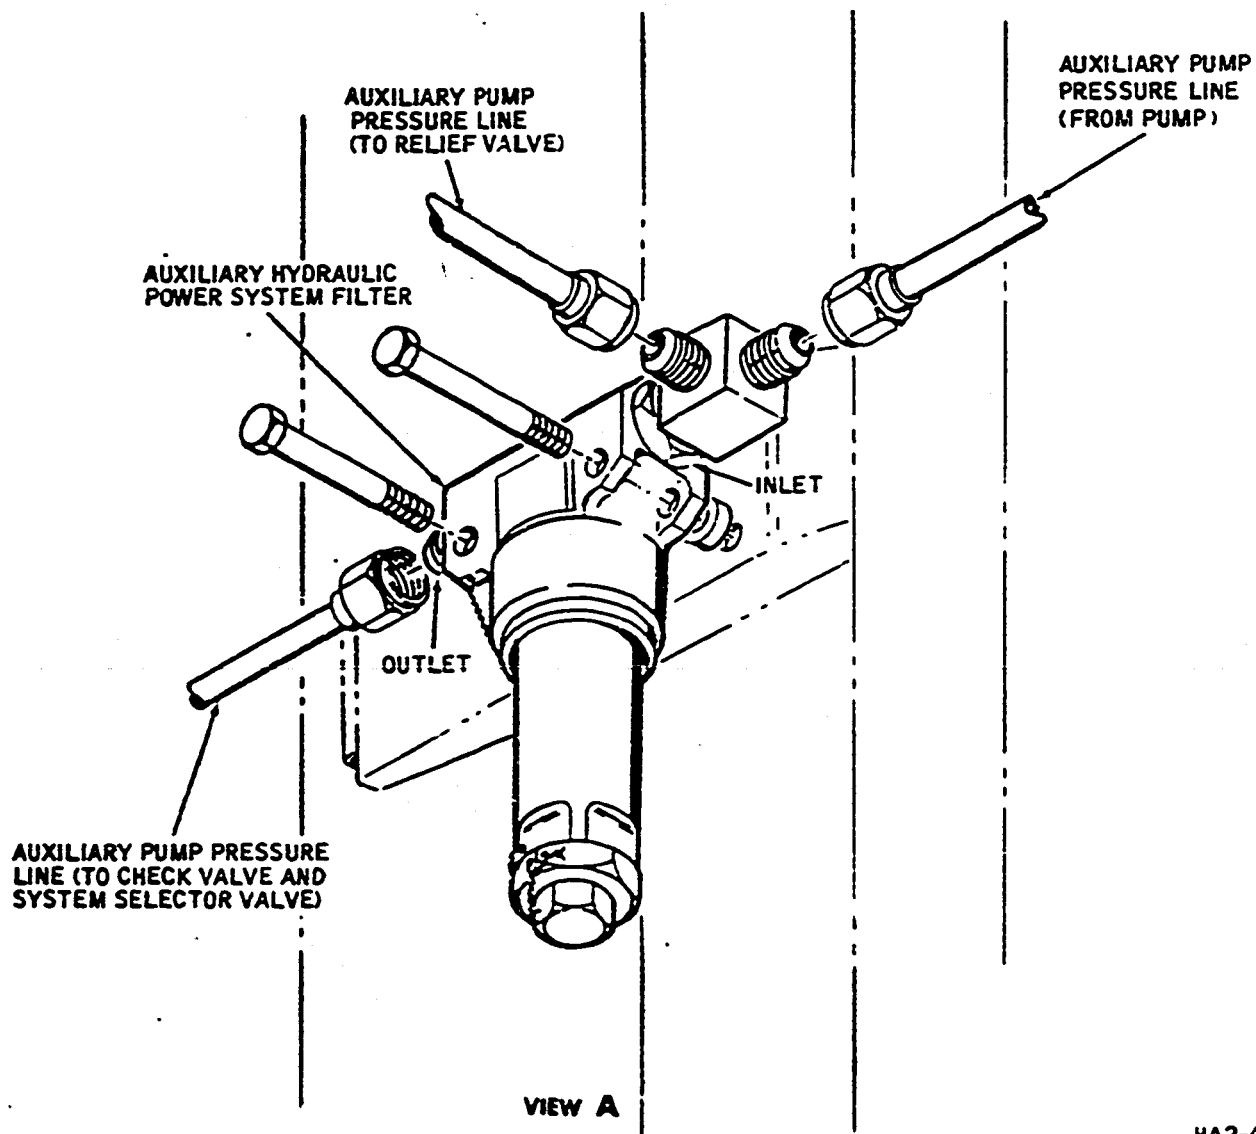

Auxiliary Hydraulic Power System Filter -- Installation  
 (Airplanes 801-811)  
 Figure 201 (Sheet 1)

HA2-4663

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

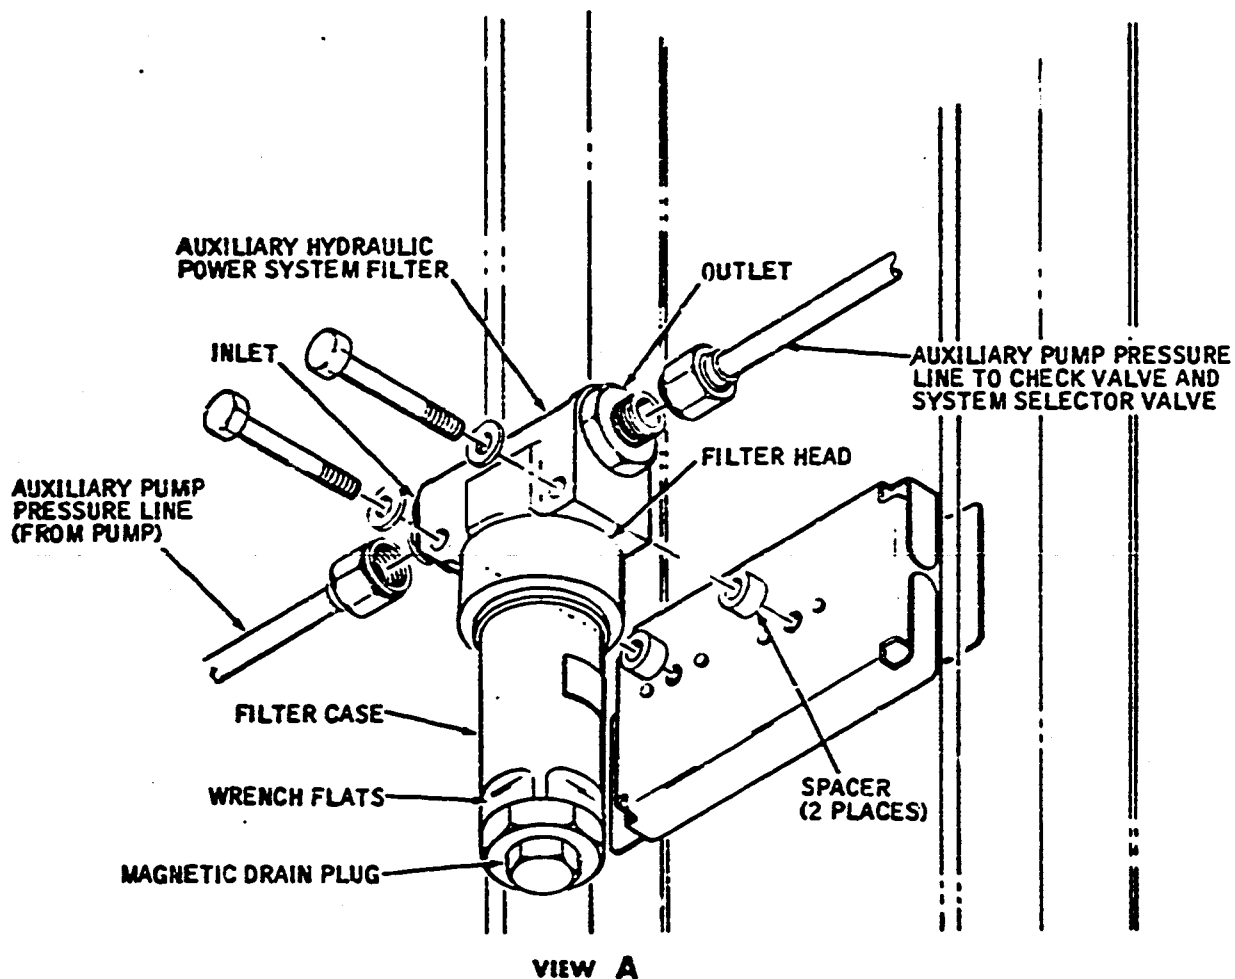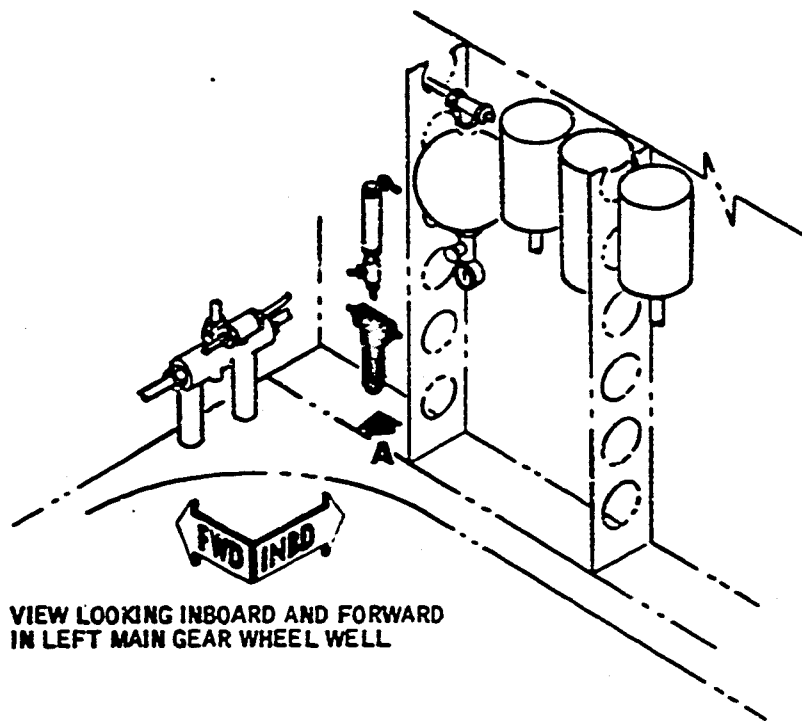

VIEW A

HA2-155

Auxiliary Hydraulic Power System Filter -- Installation  
 (Airplanes 812-822, 860 and Subsequent)  
 Figure 201 (Sheet 2)

Aug 1/68

Printed in U.S.A.

29-20-4  
 CODE 2  
 Page 203

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Connect auxiliary hydraulic pump pressure lines to filter ports.
- (6) Close auxiliary hydraulic pump control circuit breaker.

3. Inspection/Check Auxiliary Hydraulic System Filter

A. Check Filter

- (1) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).
- (2) Pressurize hydraulic system with auxiliary hydraulic pump (see 29-00, Maintenance Practices).
- (3) Check filter, hydraulic lines, and fittings for security of attachment, general condition, and leaks.
- (4) Shut down auxiliary hydraulic pump and depressurize hydraulic system (see 29-00, Maintenance Practices).
- (5) Remove magnetic drain plug from bottom of filter and discard O-ring. Check for metal particles which indicate impending failure of auxiliary hydraulic pump.
- (6) Using new O-ring, install magnetic drain plug in bottom of filter. Tighten plug to torque of 150 ( $\pm 15$ ) inch-pounds.
- (7) Safety magnetic drain plug with lockwire.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT - MAINTENANCE PRACTICES

1. General

- A. The auxiliary hydraulic system filter is located on the forward inboard side of the left main gear wheel well, slightly inboard and above the dual filter and relief valve.
- B. The filter element is a stainless steel mesh, cleanable-type element. The ultrasonic method is recommended for cleaning filter elements.
- C. Access is through the left main gear inboard door.

2. Tools and Equipment Required

- A. Varsol cleaning solvent (Federal Specification TT-T-291) is used for cleaning filter head, bowl, and magnetic drain plug.

3. Removal/Installation Auxiliary Hydraulic Filter Element

A. Remove Filter Element

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY THE CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Remove magnetic drain plug from bottom of filter bowl.
- (5) Remove filter bowl from head.
- (6) Remove filter element from head.

NOTE: Grasp filter element firmly and gently rock from side to side while withdrawing the element from the head.

- (7) Wash filter bowl, filter head, and magnetic drain plug with clean Varsol (Federal Specification TT-T-291) and air-dry.
- (8) Clean off any magnetic particles on magnetic drain plug with clean, lint-free cloth.


CAUTION: PLACE MAGNETIC PLUG IN A CLEAN CONTAINER UNTIL READY FOR INSTALLATION IN THE FILTER CASE.

Jun 15/67

Printed in U.S.A.

29-20-5  
CODE 1  
Page 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

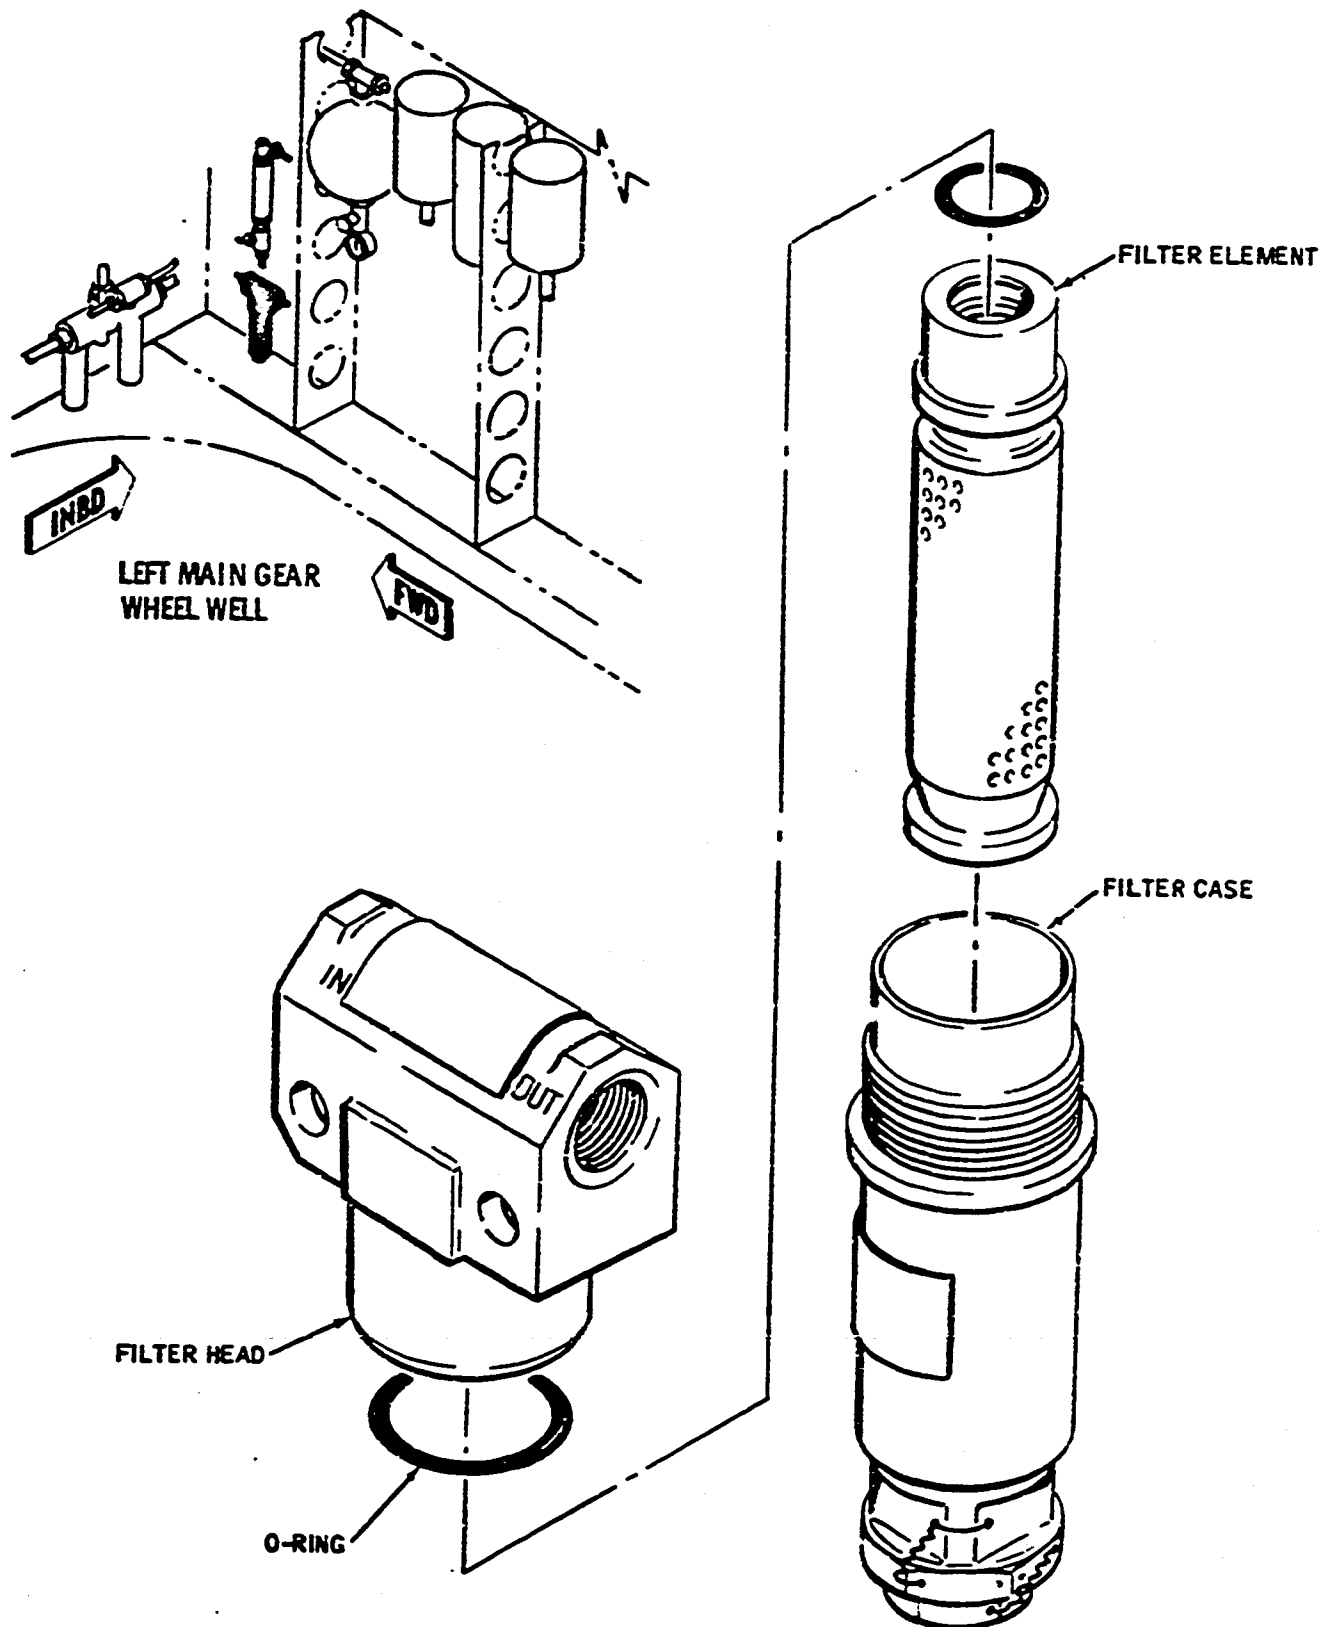

HA2-167

Auxiliary Hydraulic System Filter Element -- Installation  
Figure 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

B. Install Filter Element

- (1) Make certain that auxiliary hydraulic pump control circuit breaker is open.
- (2) Using new O-ring, install filter element into filter head.
- (3) Using new O-ring, install filter bowl. Tighten bowl to torque of 120 to 180 inch-pounds and safety with lockwire.
- (4) Using new O-ring, install magnetic drain plug in filter bowl. Tighten plug to torque of 150 ( $\pm 15$ ) inch-pounds and safety with lockwire.
- (5) Close auxiliary hydraulic pump control circuit breaker.

4. Inspection/Check Auxiliary Hydraulic System Filter Element

A. Check Filter Element

- (1) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).
- (2) Pressurize hydraulic system with auxiliary hydraulic pump (see 29-00, Maintenance Practices).
- (3) Check filter, hydraulic lines, and fittings for security of attachment, general condition, and leaks.
- (4) Check for security of safety lockwire between head and bowl, and between bowl and magnetic drain plug.
- (5) Shut down auxiliary hydraulic pump and depressurize hydraulic system (see 29-00, Maintenance Practices).



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC SYSTEM FILTER ELEMENT - MAINTENANCE PRACTICES

1. General

- A. On airplanes 801-811, the auxiliary hydraulic system filter is located in the left wing root, just forward of the auxiliary hydraulic pump. On airplanes 812-822, 860 and subsequent, the filter is located on the forward inboard side of the left main gear wheel well, slightly inboard and above the dual filter and relief valve.
- B. On airplanes 801-811, access is through the left wing root access door. On airplanes 812-822, 860 and subsequent, access is through the left main gear inboard door.
- C. The filter element is a stainless steel mesh, cleanable-type element. The ultrasonic method is recommended for cleaning filter elements.

2. Tools and Equipment Required

- A. Varsol cleaning solvent (Federal Specification TT-T-291) is used for cleaning filter head, bowl, and magnetic drain plug.

3. Removal/Installation Auxiliary Hydraulic Filter Element

A. Remove Filter Element

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.




**WARNING:** TAG AND SAFETY THE CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Remove magnetic drain plug from bottom of filter bowl.
- (5) Remove filter bowl from head.
- (6) Remove filter element from head.

**NOTE:** Grasp filter element firmly and gently rock from side to side while withdrawing the element from the head.

- (7) Wash filter bowl, filter head, and magnetic drain plug with clean Varsol (Federal Specification TT-T-291) and air-dry.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

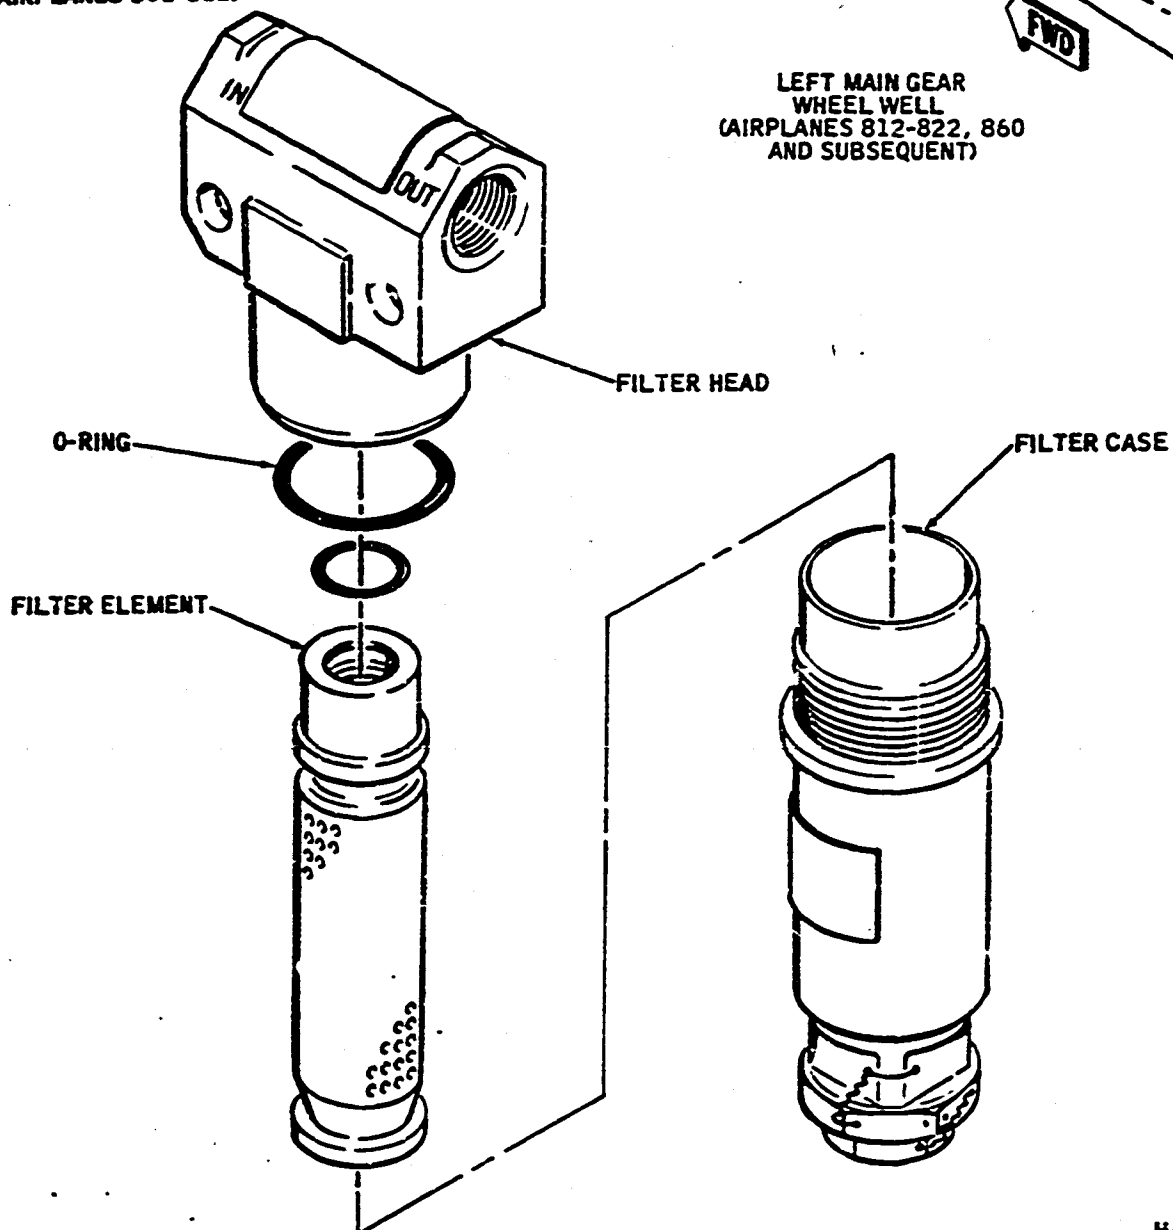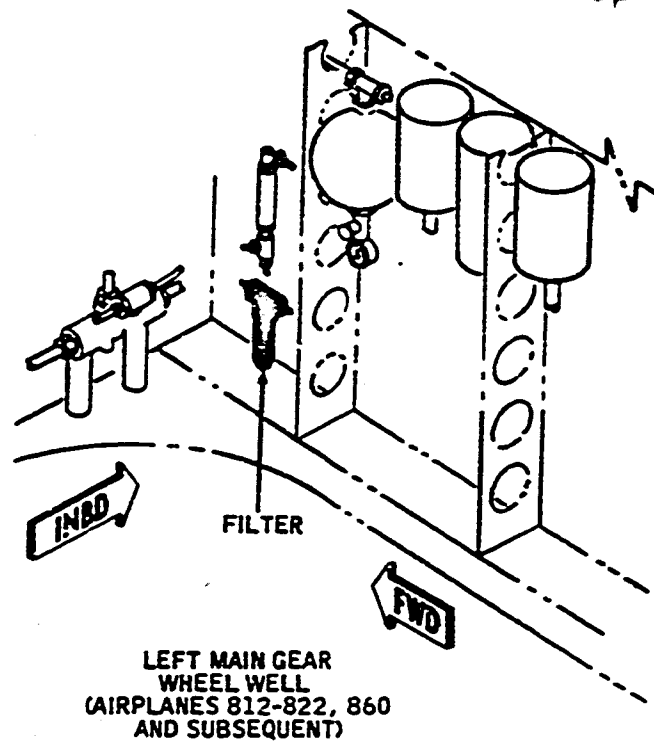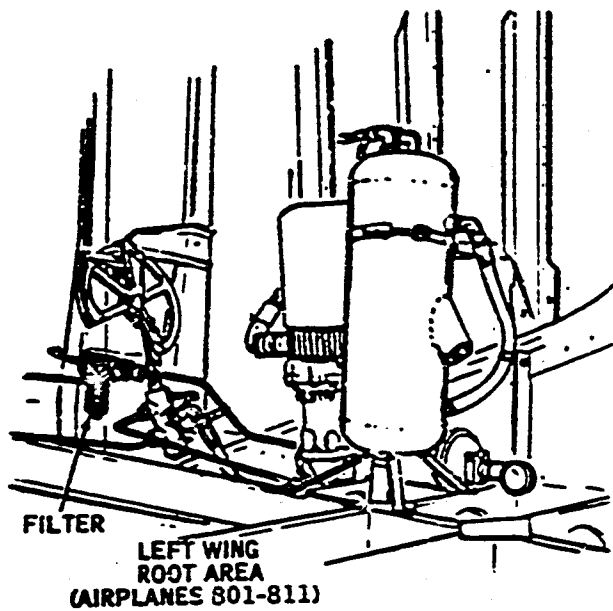

HA2-4671A

29-20-5  
 CODE 2  
 Page 202

Auxiliary Hydraulic System Filter Element -- Installation  
 Figure 201

Aug 1/68

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (8) Clean off any magnetic particles on magnetic drain plug with clean, lint-free cloth.

**CAUTION:** PLACE MAGNETIC PLUG IN A CLEAN CONTAINER UNTIL READY FOR INSTALLATION IN THE FILTER CASE.

**B. Install Filter Element**

- (1) Make certain that auxiliary hydraulic pump control circuit breaker, located on EPC circuit breaker panel is open.
- (2) Using new O-ring, install filter element into filter head.
- (3) Using new O-ring, install filter bowl. Tighten bowl to torque of 120 to 180 inch-pounds and safety with lockwire.
- (4) Using new O-ring, install magnetic drain plug in filter bowl. Tighten plug to torque of 150 ( $\pm 15$ ) inch-pounds and safety with lockwire.
- (5) Close auxiliary hydraulic pump control circuit breaker.

**4. Inspection/Check Auxiliary Hydraulic System Filter Element**

**A. Check Filter Element**

- (1) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).
- (2) Pressurize hydraulic system with auxiliary hydraulic pump (see 29-00, Maintenance Practices).
- (3) Check filter, hydraulic lines, and fittings for security of attachment, general condition, and leaks.
- (4) Check for security of safety lockwire between head and bowl, and between bowl and magnetic drain plug.
- (5) Shut down auxiliary hydraulic pump and depressurize hydraulic system (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC SYSTEM CHECK VALVE - MAINTENANCE PRACTICES

1. General

- A. The auxiliary hydraulic system check valve is located in the left main gear wheel well aft of the rear spar and just above the auxiliary hydraulic system filter.
- B. Access to the check valve is through the left main gear inboard door.

2. Removal/Installation Auxiliary Hydraulic System Check Valve

A. Remove Check Valve

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Disconnect line from each end of check valve.
- (5) Remove check valve.

B. Install Check Valve

- (1) Make certain that auxiliary hydraulic pump control circuit breaker located on cabin bus 4 is open.
- (2) Install check valve.

CAUTION: BE CERTAIN THAT VALVE IS INSTALLED WITH FLOW ARROW POINTING INBOARD.

- (3) Connect hydraulic pressure lines to each port of check valve.
- (4) Close auxiliary hydraulic pump control circuit breaker.

3. Inspection/Check Auxiliary Hydraulic System Check Valve

A. Check Check Valve

- (1) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Pressurize hydraulic system with auxiliary hydraulic pump (see 29-00, Maintenance Practices).
- (3) Check check valve for proper direction of flow arrow and for leaks.
- (4) Shut down auxiliary hydraulic pump and depressurize hydraulic system (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC SYSTEM SURGE DAMPER ACCUMULATOR - MAINTENANCE PRACTICES

1. General

- A. The auxiliary hydraulic system surge damper accumulator is located in the left wing root area just inboard of the auxiliary hydraulic pump alternate reservoir.
- B. Access to the surge damper accumulator is through the left wing root access door.

2. Tools and Equipment Required

- A. Pressure cylinder (clean, dry, compressed nitrogen).


3. Service Auxiliary Hydraulic System Surge Damper Accumulator

- A. Check Auxiliary Hydraulic System Surge Damper Accumulator Pressure

- (1) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (2) Check accumulator gage pressure; gage should indicate 1000 psi.
- (3) If accumulator requires additional pressurization, proceed as follows:
  - (a) Remove filler valve cap.
  - (b) Attach nitrogen service hose chuck to filler valve stem.
  - (c) Loosen filler valve swivel nut a maximum of 3/4 turn.
  - (d) Charge accumulator with dry nitrogen to 1000 ( $\pm 50$ ) psi.
  - (e) Tighten swivel nut to torque of 50 to 70 inch-pounds.
  - (f) Remove service hose.
  - (g) Install valve cap; tighten to maximum fingertightness.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

VIEW LOOKING FORWARD  
 AND INBOARD IN LEFT  
 WING ROOT AREA

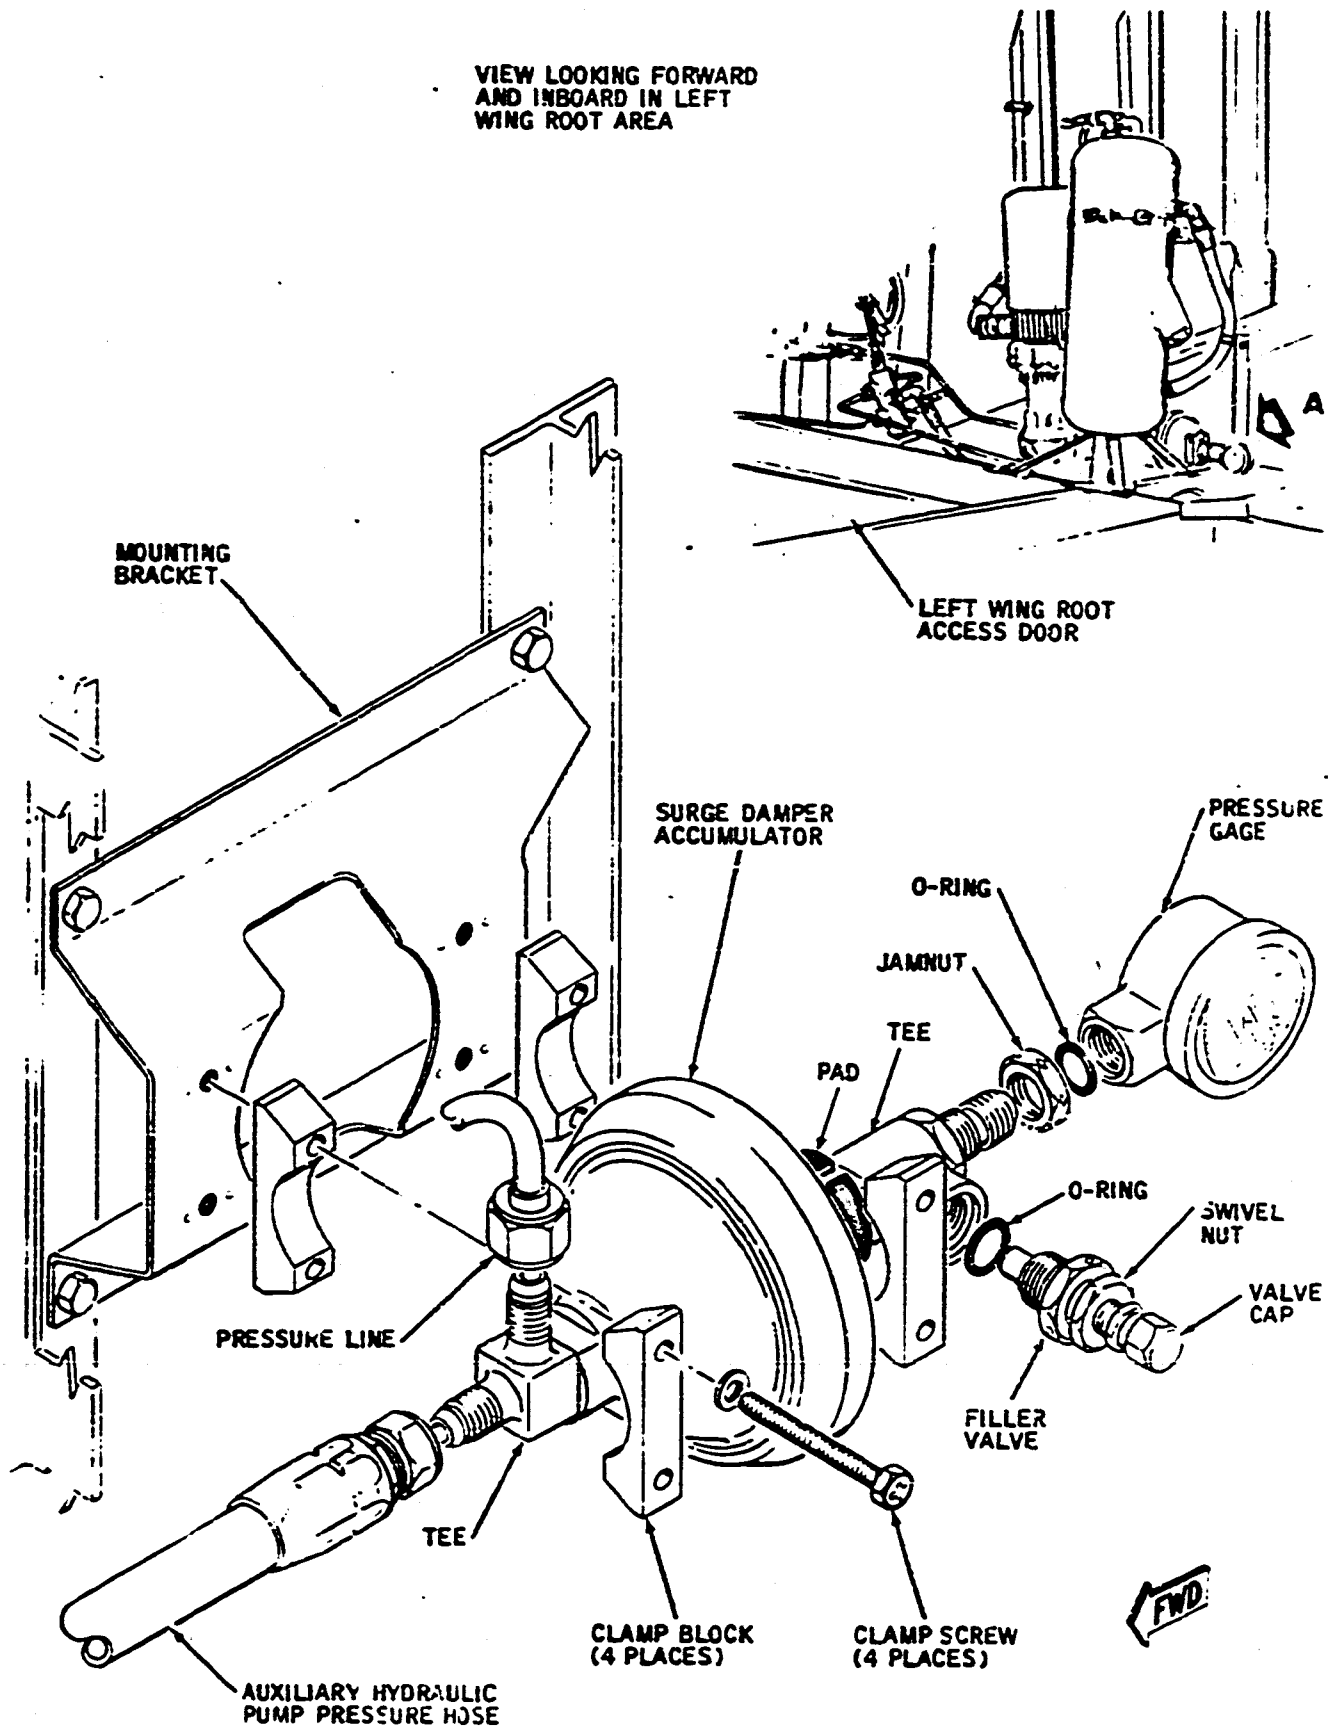

VIEW A

Auxiliary Hydraulic System Surge Damper  
 Accumulator -- Installation  
 Figure 201

HA2-168A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

4. Removal/Installation Auxiliary Hydraulic System Surge Damper Accumulator

A. Remove Accumulator

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Relieve nitrogen pressure from accumulator as follows:
  - (a) Remove filler valve cap.
  - (b) Loosen filler valve swivel nut a maximum of 3/4 turn.
  - (c) Depress filler valve core and hold until pressure has bled off to zero; release valve core and tighten swivel nut.
  - (d) Install filler valve cap.
- (5) Disconnect auxiliary hydraulic pump pressure hose from T-fitting at base of accumulator.
- (6) Disconnect pressure line from T-fitting.
- (7) Remove T-fitting from accumulator and retain for use in new unit. Discard O-ring.
- (8) Remove clamp blocks and remove accumulator.
- (9) Remove filler valve and pressure gage and retain for use in new unit. Discard O-ring.

B. Install Accumulator

- (1) Make certain that auxiliary hydraulic pump control circuit breaker is open.
- (2) Using new O-ring, install T-fitting in hydraulic pressure port.
- (3) Using new O-rings, install filler valve and pressure gage in nitrogen pressure port fitting.
- (4) Place accumulator in position and secure with clamp blocks.

NOTE: Make certain that gage and filler valve are accessible after installation.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (5) Connect pressure line to T-fitting.
- (6) Connect auxiliary hydraulic pump pressure hose to T-fitting.
- (7) Charge accumulator with dry nitrogen (see paragraph 3).
- (8) Close auxiliary hydraulic pump control circuit breaker.

5. Inspection/Check Auxiliary Hydraulic System Surge Damper Accumulator

A. Check Accumulator

- (1) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).
- (2) Pressurize hydraulic system with auxiliary hydraulic pump (see 29-00, Maintenance Practices).
- (3) Check auxiliary hydraulic pump pressure hose and pressure line fittings at accumulator T-fitting for security of attachment and leaks.
- (4) Check accumulator pressure gage for 2600- to 3000-psi indication.
- (5) Check nitrogen port, filler valve, and pressure gage for nitrogen leaks.
- (6) Shut down auxiliary hydraulic pump and depressurize hydraulic system (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC PUMP ALTERNATE  
RESERVOIR - MAINTENANCE PRACTICES

1. General

- A. The auxiliary hydraulic pump alternate reservoir is located in the left wing root area just aft of the auxiliary hydraulic pump.
- B. Access to the alternate reservoir is through the left wing root access door.

2. Servicing

A. Filling Procedure

NOTE: The auxiliary hydraulic pump alternate reservoir is filled and maintained in a filled condition by return fluid flow from the wing flap system.

- (1) Place hydraulic system selector control lever in general system (normal) position.
- (2) Pressurize hydraulic system (see 29-00, Maintenance Practices).

WARNING: MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IN DOWN POSITION AND LANDING GEAR GROUND LOCKPINS ARE INSTALLED.

- (3) Cycle wing flaps by placing wing flap control handle in up and down positions until hydraulic fluid can be seen in alternate reservoir sight gage.

WARNING: MAKE CERTAIN THAT WING FLAP AREAS ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS BEFORE CYCLING FLAPS.

- (4) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (5) Fill hydraulic system reservoir as described on instruction placard on reservoir.


3. Removal/Installation Auxiliary Hydraulic Pump Alternate Reservoir

A. Remove Alternate Reservoir

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel and hydraulic system over-temperature rudder and aileron manual indicator circuit breaker located on dc bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKERS (SEE CHAPTER 20).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

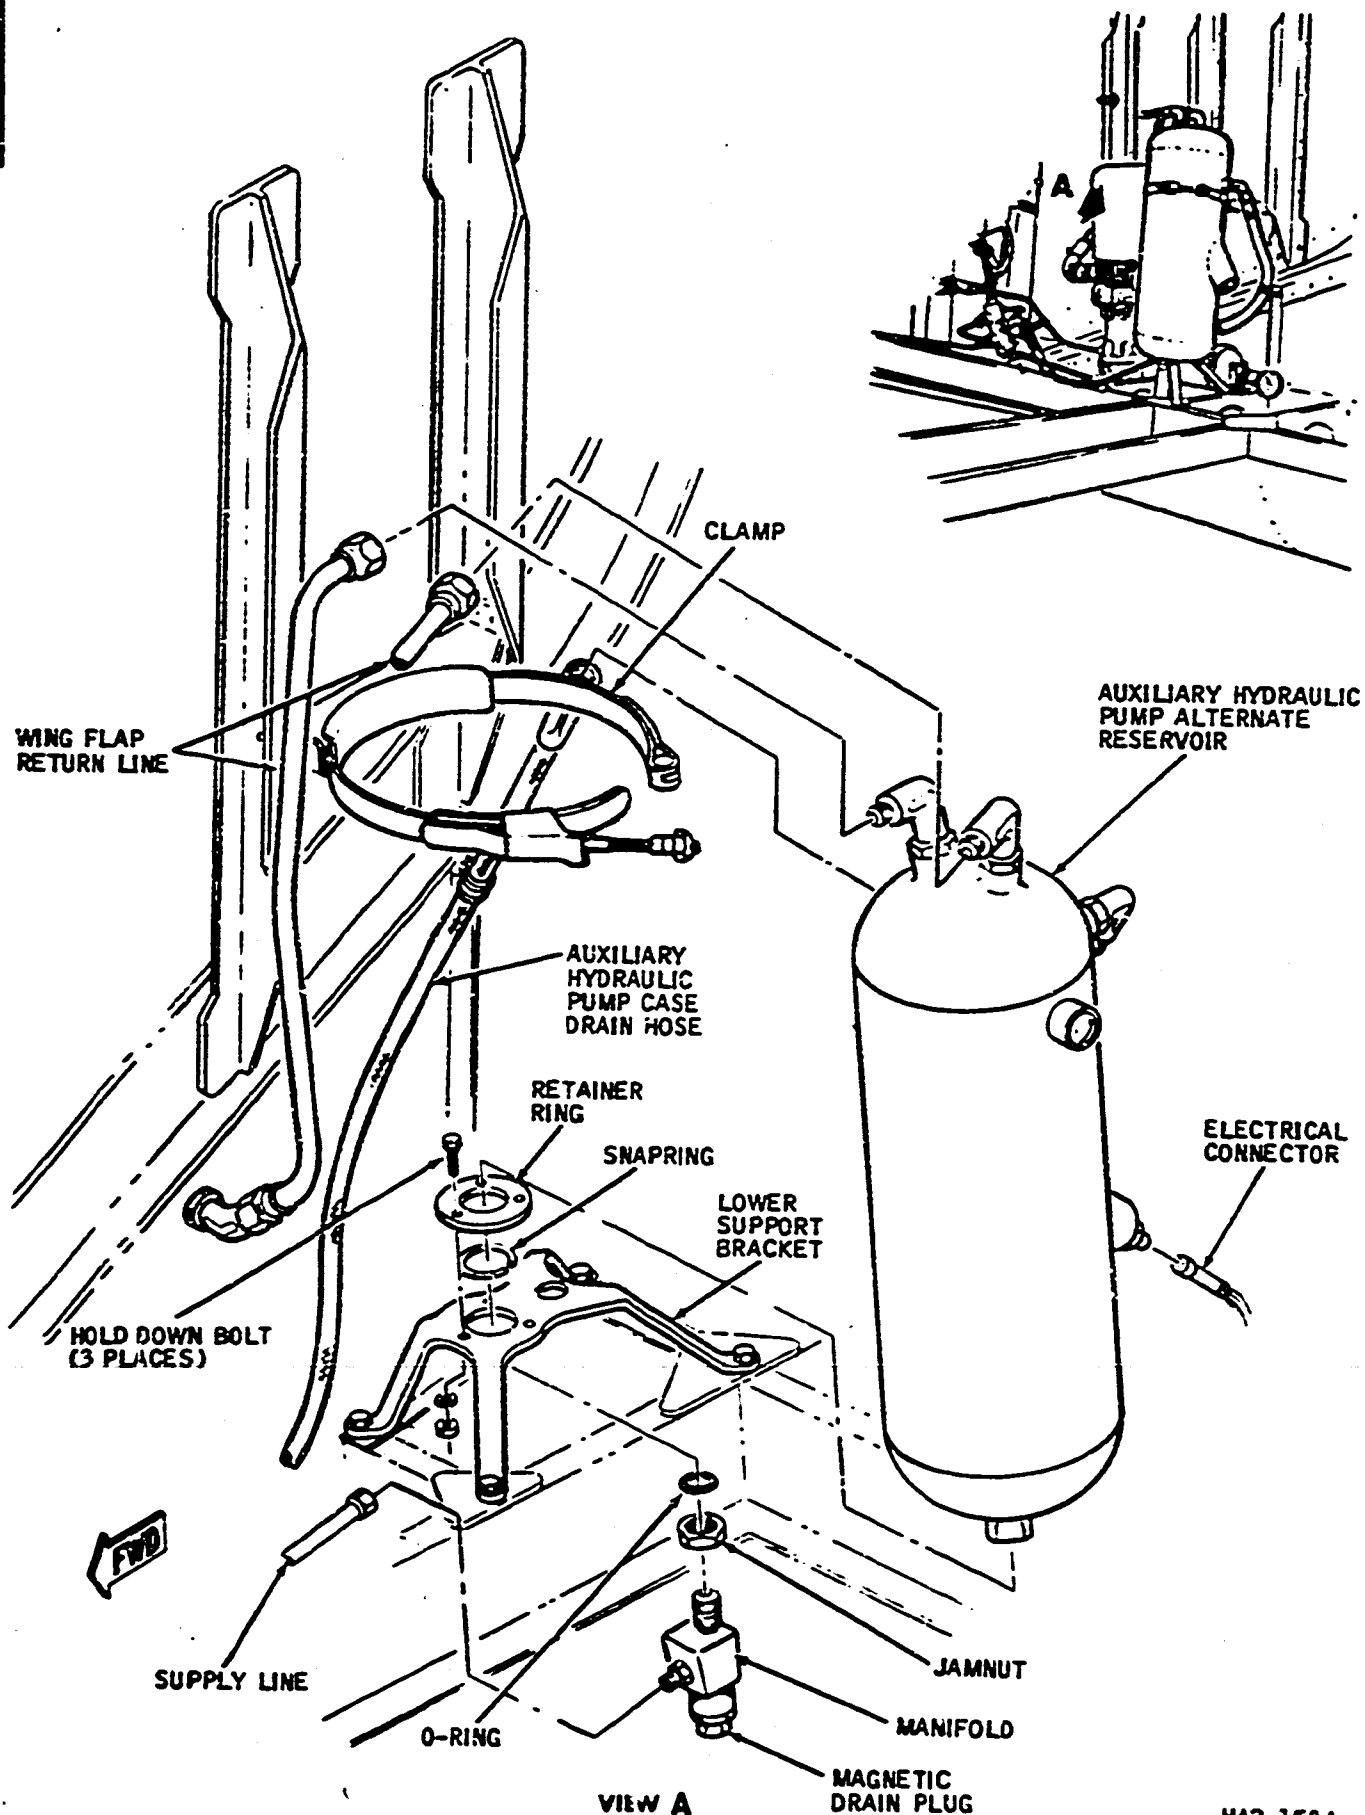

Auxiliary Hydraulic Pump Alternate  
 Reservoir -- Installation  
 Figure 201

HA2-150A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Place hydraulic system selector control lever in general system (normal) position.
- (3) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (4) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (5) Drain auxiliary hydraulic pump alternate reservoir (see 29-00, Maintenance Practices).
- (6) Disconnect supply line from alternate reservoir magnetic plug manifold.
- (7) Disconnect auxiliary pump case drain line at reservoir bypass port.
- (8) Disconnect electrical connector from emergency hydraulic reservoir low level indicating light switch.
- (9) Disconnect lines from top of reservoir.
- (10) Remove holddown bolts from retainer ring at lower support bracket.
- (11) Loosen clamp on upper support bracket and remove reservoir.
- (12) Remove fittings from reservoir; retain for use in new unit. Discard O-rings.

B. Install Alternate Reservoir

- (1) Make certain that auxiliary hydraulic pump control and hydraulic system overtemperature rudder and aileron manual indicator circuit breakers are open.
- (2) Using new O-rings, install fittings in reservoir.
- (3) Position reservoir in support bracket with sight gage facing outboard. Tighten clamp on upper support bracket.
- (4) Install holddown bolts in lower support bracket retainer ring.
- (5) Connect lines at top of reservoir.
- (6) Connect case drain line to port in side of reservoir.
- (7) Connect supply line to magnetic drain plug manifold.
- (8) Connect emergency hydraulic reservoir low level indicating light switch electrical connector.
- (9) Install magnetic drain plug in manifold at bottom of reservoir. Tighten to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (10) Close auxiliary hydraulic pump control and hydraulic overtemperature rudder and aileron manual indicator circuit breakers.

4. Inspection/Check Auxiliary Hydraulic Pump Alternate Reservoir

A. Check Alternate Reservoir

- (1) Check emergency hydraulic level indicating light; it should be on when alternate reservoir is empty or below 0.8 gallons (0.666 Imperial gallons, 3.15 liters).
- (2) Make certain that hydraulic system selector control lever is in general system (normal) position.
- (3) Pressurize hydraulic system (see 29-00, Maintenance Practices).

WARNING: MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THE LANDING GEAR GROUND LOCKPINS ARE INSTALLED.

- (4) Cycle wing flaps by placing wing flap control handle in up and down positions until hydraulic fluid can be seen in alternate reservoir sight gage.

WARNING: MAKE CERTAIN THAT WING FLAP AREAS ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS BEFORE CYCLING FLAPS.

- (5) Check that emergency hydraulic reservoir low lever light is off when hydraulic fluid is visible in alternate reservoir sight gage.
- (6) Check hydraulic fittings on reservoir and auxiliary hydraulic pump selector valve for leaks.
- (7) Check electrical connector on hydraulic level switch for security of attachment and check wiring for general condition, routing, and clearance.
- (8) Check all hydraulic lines in area for security of attachment and general condition.
- (9) Check magnetic drain plug for safety lockwire.
- (10) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (11) Fill hydraulic system reservoir as described on instruction placard on reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC PUMP ALTERNATE  
RESERVOIR - MAINTENANCE PRACTICES

1. General

- A. The auxiliary hydraulic pump alternate reservoir is located in the left wing root area just aft of the auxiliary hydraulic pump.
- B. Access to the alternate reservoir is through the left wing root access door.

2. Servicing

A. Filling Procedure

NOTE: The auxiliary hydraulic pump alternate reservoir is filled and maintained in a filled condition by return fluid flow from the wing flap system.

- (1) Place hydraulic system selector control lever in general system (normal) position.
- (2) Pressurize hydraulic system (see 29-00, Maintenance Practices).

WARNING: MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IN DOWN POSITION AND LANDING GEAR GROUND LOCKPINS ARE INSTALLED.

- (3) Cycle wing flaps by placing wing flap control handle in up and down positions until hydraulic fluid can be seen in alternate reservoir sight gage.

WARNING: MAKE CERTAIN THAT WING FLAP AREAS ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS BEFORE CYCLING FLAPS.

- (4) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (5) Fill hydraulic system reservoir as described on instruction placard on reservoir.


3. Removal/Installation Auxiliary Hydraulic Pump Alternate Reservoir

A. Remove Alternate Reservoir

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel and hydraulic system over-temperature rudder and aileron manual indicator circuit breaker located on dc bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKERS (SEE CHAPTER 20).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

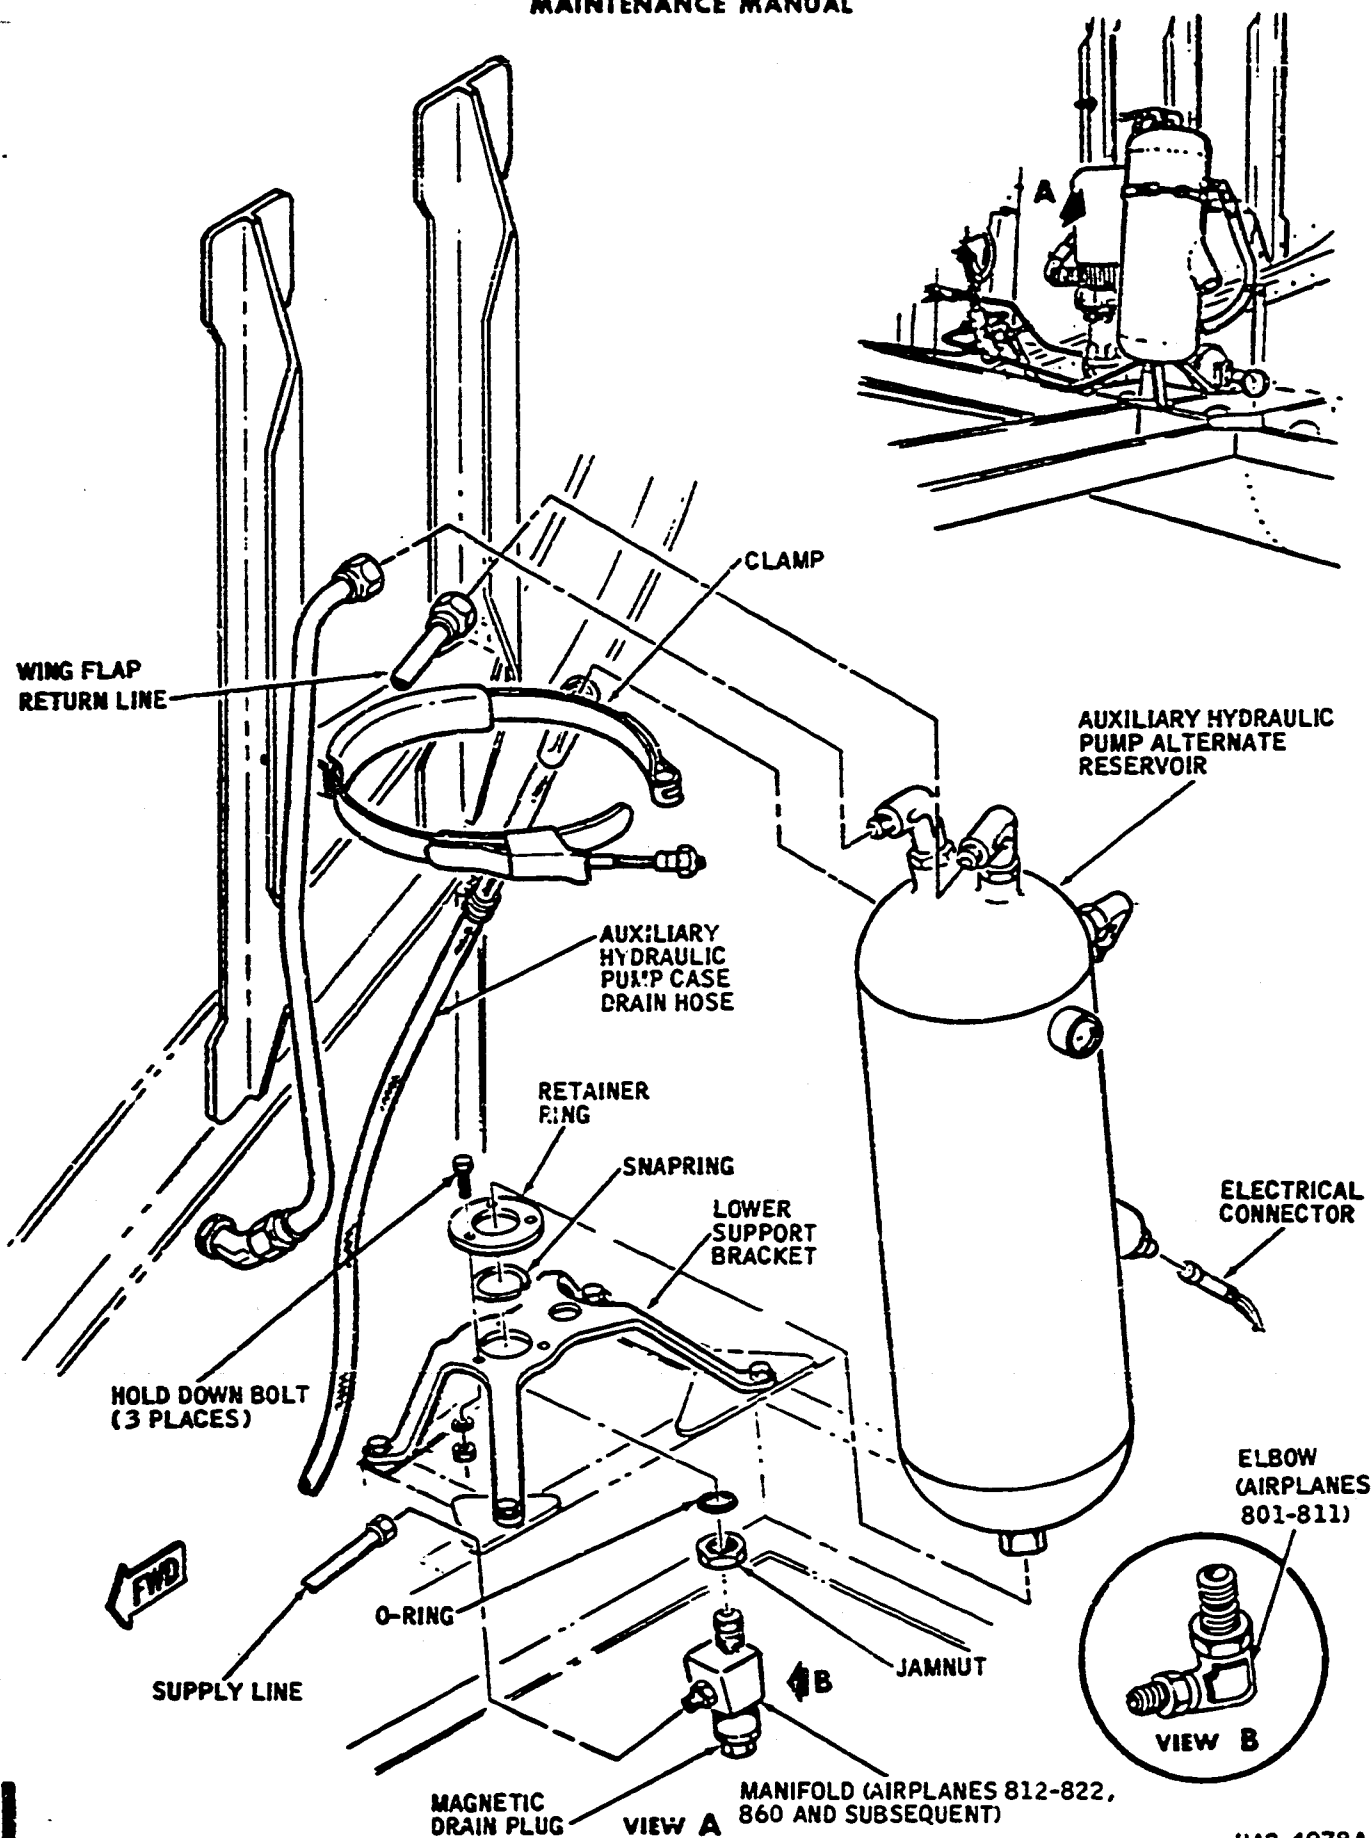

HA2-4978A

Auxiliary Hydraulic Pump Alternate Reservoir -- Installation  
 Figure 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (2) Place hydraulic system selector control lever in general system (normal) position.
- (3) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (4) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (5) Drain auxiliary hydraulic pump alternate reservoir (see 29-00, Maintenance Practices).
- (6) Disconnect supply line from bottom of alternate reservoir.
- (7) Disconnect auxiliary pump bypass line at reservoir bypass port.
- (8) Disconnect electrical connector from emergency hydraulic reservoir low level indicating light switch.
- (9) Disconnect lines from top of reservoir.
- (10) Remove holddown bolts from retainer ring at lower support bracket.
- (11) Loosen clamp on upper support bracket and remove reservoir.
- (12) Remove fittings from reservoir; retain for use in new unit. Discard O-rings.

**B. Install Alternate Reservoir**

- (1) Make certain that auxiliary hydraulic pump control and hydraulic system overtemperature rudder and aileron manual indicator circuit breakers, located on EPC circuit breaker panel, are open.
- (2) Using new O-rings, install fittings in reservoir.
- (3) Position reservoir in support bracket with sight gage facing outboard. Tighten clamp on upper support bracket.
- (4) Install holddown bolts in lower support bracket retainer ring.
- (5) Connect lines at top of reservoir.
- (6) Connect bypass line to port in side of reservoir.
- (7) Connect supply line to bottom of reservoir.
- (8) Connect emergency hydraulic reservoir low level indicating light switch electrical connector.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (9) On airplanes 812 - 822, 860 and subsequent, install magnetic drain plug in manifold at bottom of reservoir. Tighten to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.
- (10) Close auxiliary hydraulic pump control and hydraulic overtemperature rudder and aileron manual indicator circuit breakers.

4. Inspection/Check Auxiliary Hydraulic Pump Alternate Reservoir

A. Check Alternate Reservoir

- (1) Check emergency hydraulic level indicating light; it should be on when alternate reservoir is empty or below 0.8 gallon (0.666 Imperial gallons, 3.15 liters).
- (2) Make certain that hydraulic system selector control lever is in general system (normal) position.
- (3) Pressurize hydraulic system (see 29-00, Maintenance Practices).

WARNING: MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THE LANDING GEAR GROUND LOCKPINS ARE INSTALLED.

- (4) Cycle wing flaps by placing wing flap control handle in up and down positions until hydraulic fluid can be seen in alternate reservoir sight gage.

WARNING: MAKE CERTAIN THAT WING FLAP AREAS ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS BEFORE CYCLING FLAPS.

- (5) Check that emergency hydraulic reservoir low lever light is off when hydraulic fluid is visible in alternate reservoir sight gage.
- (6) Check hydraulic fittings on reservoir and auxiliary hydraulic pump selector valve for leaks.
- (7) Check electrical connector on hydraulic level switch for security of attachment and check wiring for general condition, routing, and clearance.
- (8) Check all hydraulic lines in area for security of attachment and general condition.
- (9) On airplanes 812-822, 860 and subsequent, check magnetic drain plug for safety lockwire.
- (10) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (11) Fill hydraulic system reservoir as described on instruction placard on reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

GROUND SERVICE PRESSURE AND SUPPLY CONNECTORS -  
MAINTENANCE PRACTICES

1. General

- A. The ground service pressure and supply connectors are located on the floor, in the left wing root, aft of the wing rear spar.
- B. Access to the pressure and supply connector is through the wing root access door.

2. Removal/Installation Ground Service Pressure and Supply Connectors

A. Remove Ground Service Pressure Connector

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Disconnect hydraulic pressure line from ground service pressure connector.
- (5) Remove ground service pressure connector.

B. Install Ground Service Pressure Connector

- (1) Make certain that auxiliary hydraulic pump control circuit breaker is open.
- (2) Install ground service pressure connector.
- (3) Connect hydraulic pressure line to ground service pressure connector.
- (4) Close auxiliary hydraulic pump control circuit breaker.

C. Remove Ground Service Supply Connector

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.

WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Drain hydraulic system reservoir (see 29-00, Maintenance Practices).
- (5) Remove mounting screws, loosen jamnut, and remove ground service supply connector from T-fitting in supply line. Discard O-ring.

D. Install Ground Service Supply Connector

- (1) Make certain that auxiliary hydraulic pump control circuit breaker is open.
- (2) Install new O-ring on ground service supply connector and screw connector into T-fitting in supply line.
- (3) Install mounting screws through connector flange.
- (4) Tighten jamnut.
- (5) Fill reservoir as described on instruction placard on reservoir.
- (6) Close auxiliary hydraulic pump control circuit breaker.

3. Inspection/Check Ground Service Pressure and Supply Connectors

- (1) Pressurize hydraulic system with test stand (see 29-00, Maintenance Practices).

**WARNING:** MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION AND LANDING GEAR GROUND LOCKPINS ARE INSTALLED.

- (2) Check ground service connectors for general condition, security of attachment and leaks.
- (3) Shut down test stand and depressurize hydraulic system (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC PUMP CONTROL - MAINTENANCE PRACTICES

1. Inspection/Check Auxiliary Hydraulic Pump Control

A. Check Auxiliary Hydraulic Pump Control

- (1) Place hydraulic system selector control lever in general system (normal) position.
- (2) Momentarily place auxiliary hydraulic pump control switch in start (hold only in emergency) position.

WARNING: MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION AND LANDING GEAR GROUND LOCKPINS ARE INSTALLED.

- (3) Auxiliary pump on indicating light should come on.
- (4) Hydraulic system pressure indicator should indicate 2800 to 3000 psi.
- (5) Momentarily place auxiliary hydraulic pump control switch in stop position.
- (6) Auxiliary hydraulic pump should stop, auxiliary pump on indicating light should go off, and hydraulic system pressure should gradually fall off.
- (7) Depressurize hydraulic system (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC PUMP CONTROL - MAINTENANCE PRACTICES

1. Inspection/Check Auxiliary Hydraulic Pump Control

A. Check Auxiliary Hydraulic Pump Control

- (1) Place hydraulic system selector control lever in general system (normal) position.
- (2) Momentarily place auxiliary hydraulic pump control switch in start (hold only in emergency) position.


WARNING: MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION AND LANDING GEAR GROUND LOCKPINS ARE INSTALLED.

- (3) Auxiliary pump on indicating light should come on.
- (4) Hydraulic system pressure indicator should indicate 2800 to 3000 psi.
- (5) Momentarily place auxiliary hydraulic pump control switch in stop position.
- (6) Auxiliary hydraulic pump should stop, auxiliary pump on indicating light should go off, and hydraulic system pressure should gradually fall off.
- (7) Depressurize hydraulic system (see 29-00, Maintenance Practices).

Oct 15/68

29-20-10  
CODE 2  
Page 201

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

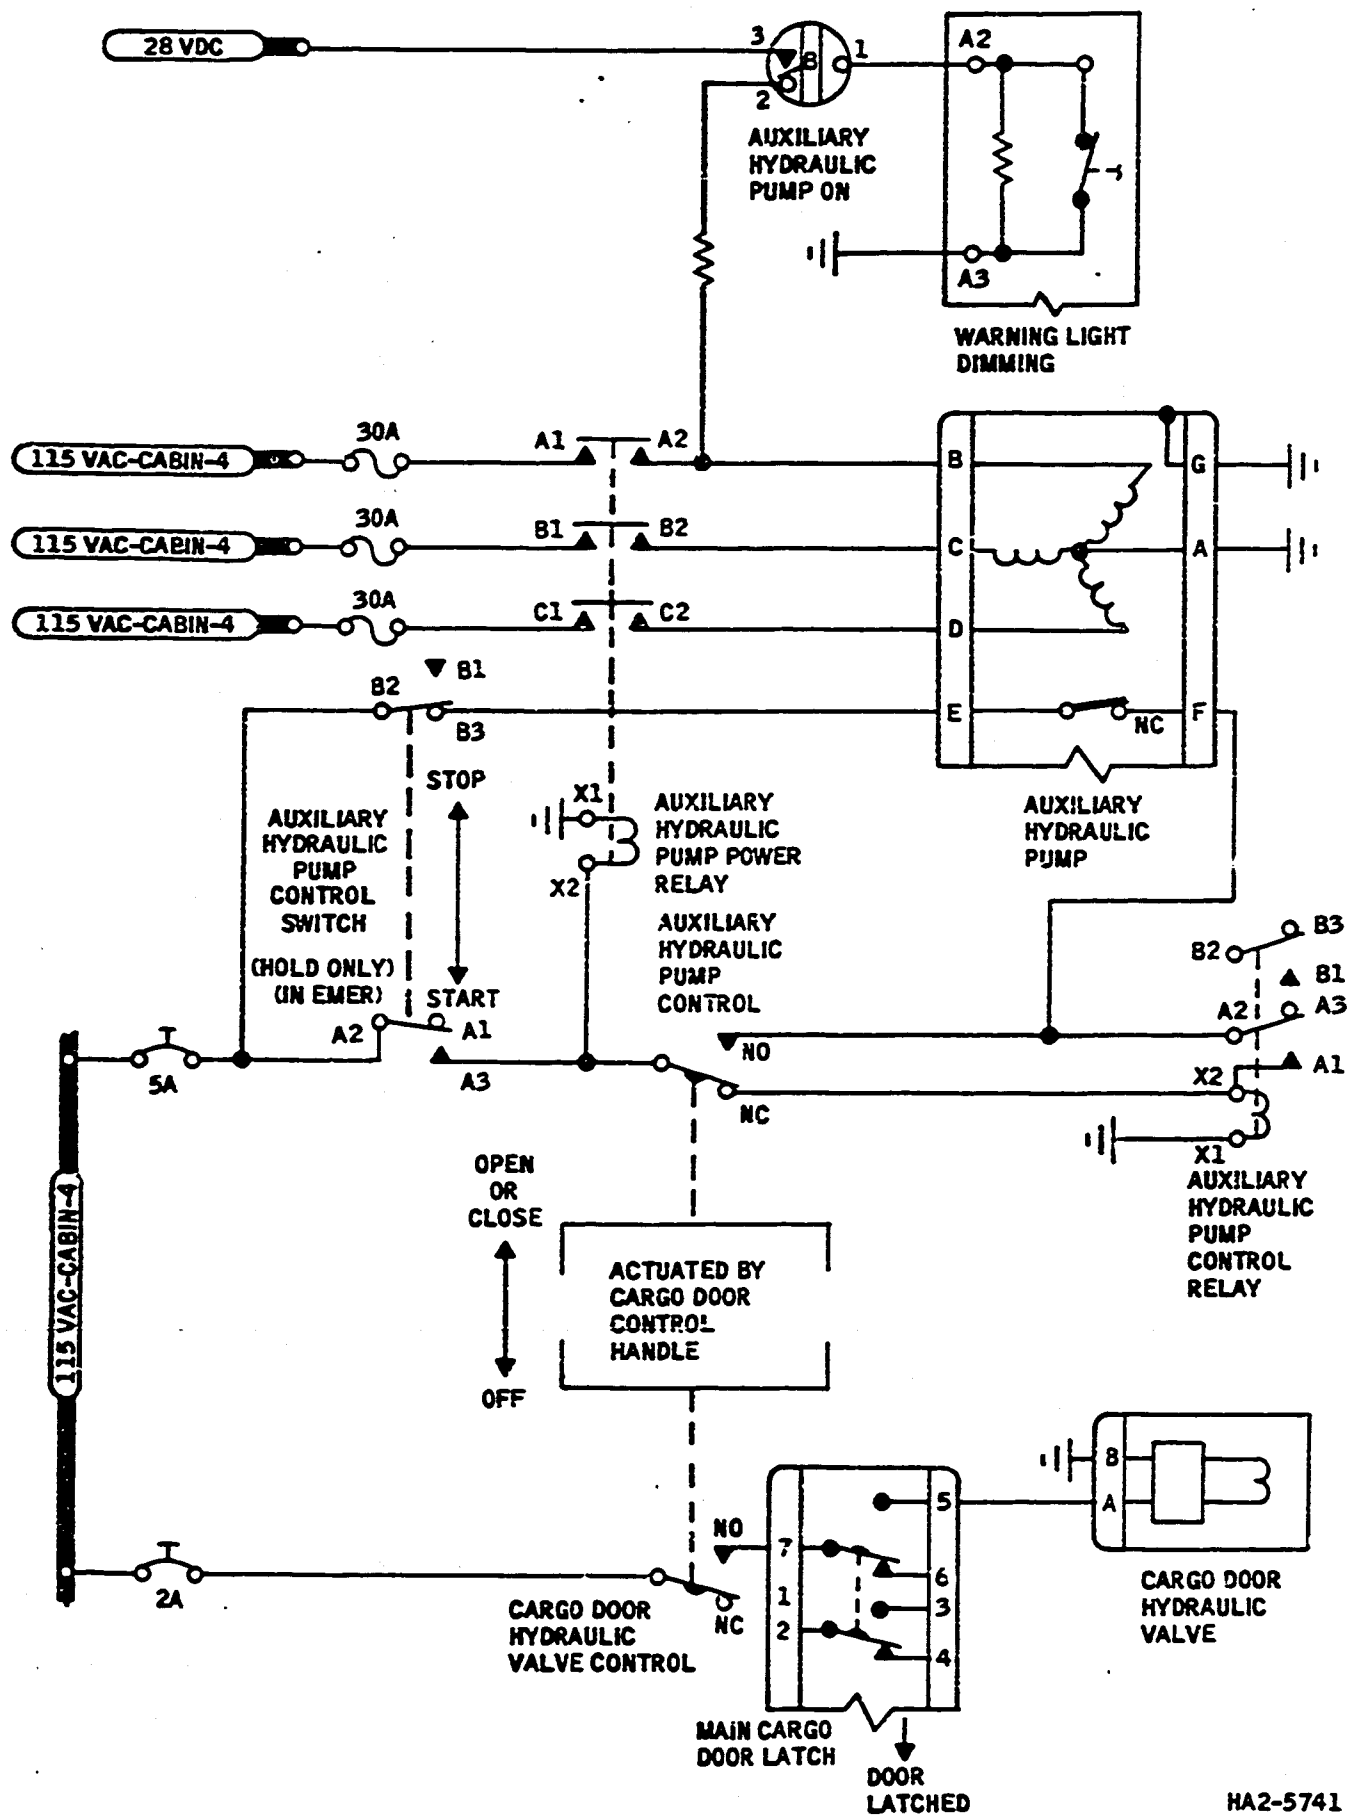


29-20-10 Auxiliary Hydraulic Pump Control System -- Schematic  
 CODE 2 (Airplanes 812 - 815)  
 Page 202 Figure 1 (Sheet 1)

HA2-5741

Oct 15/68

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

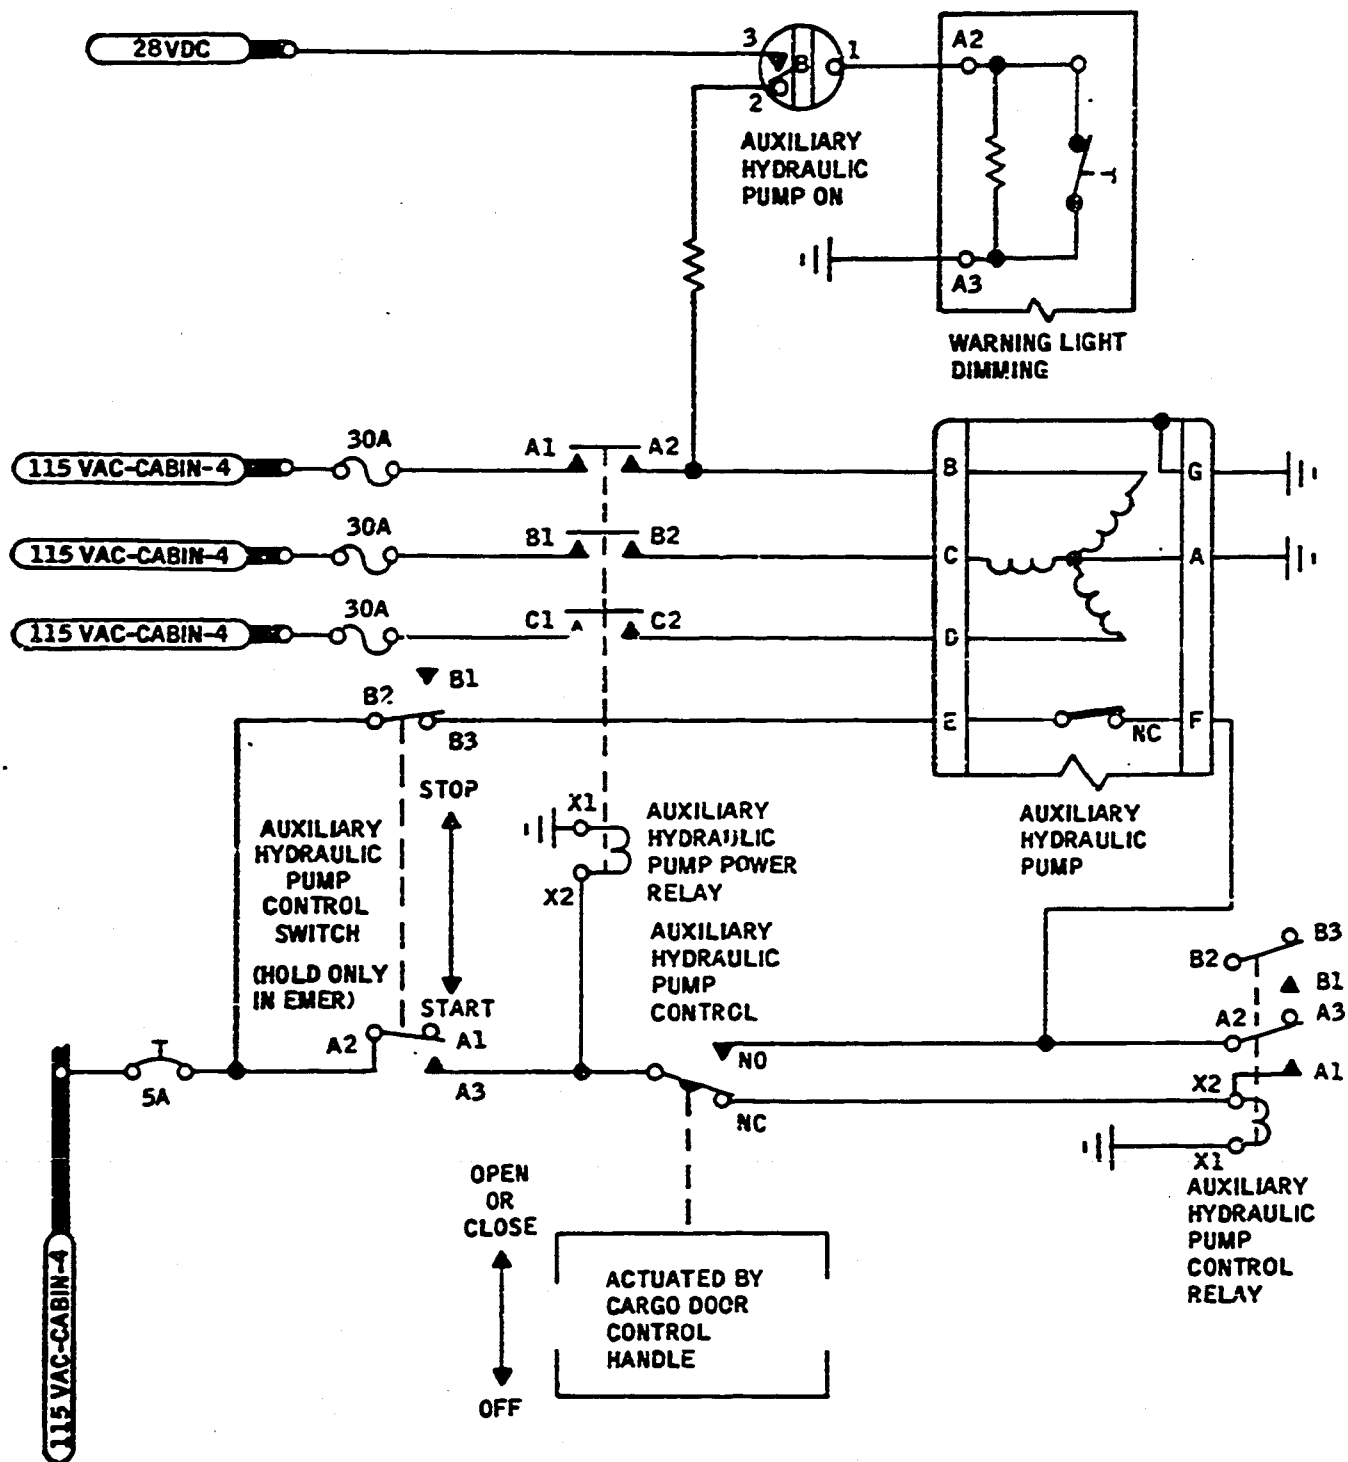


Auxiliary Hydraulic Pump Control System -- Schematic  
 (Airplanes 816 - 819)  
 Figure 1 (Sheet 2)

Oct 15/68

HA2-5742  
 29-20-10  
 CODE 2  
 Page 203

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

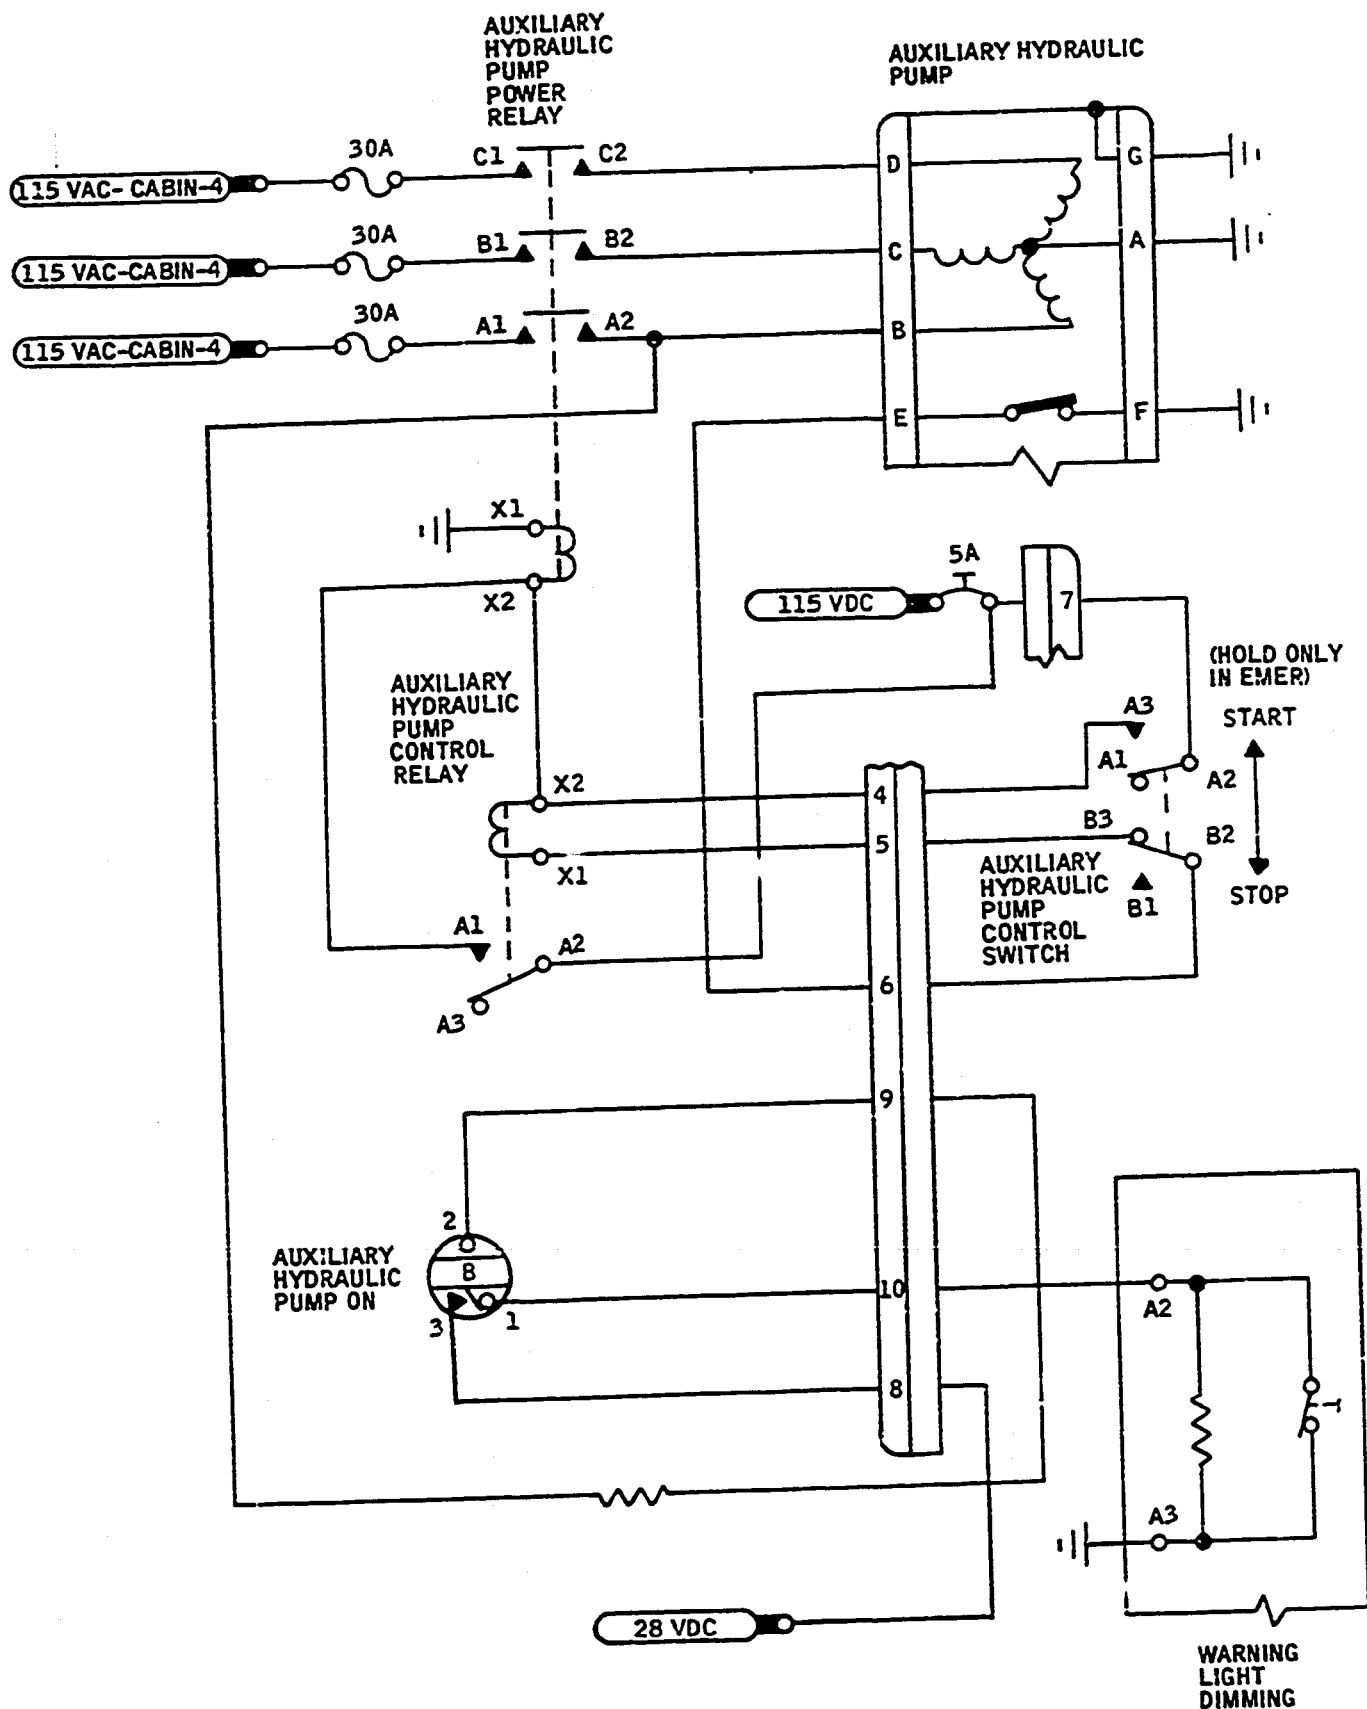

Auxiliary Hydraulic Pump Control System -- Schematic  
 (Airplanes 801-811, 820-822, 860 and Subsequent)  
 Figure 1 (Sheet 3)



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

AUXILIARY HYDRAULIC PUMP BYPASS LINE FILTER -

MAINTENANCE PRACTICES

1. General

- A. The auxiliary hydraulic pump bypass line filter is located on the alternate reservoir which is located in the left wing root area just forward of the auxiliary hydraulic pump.
- B. Access to the auxiliary hydraulic pump bypass line filter is through the left wing root access door.

2. Removal/Installation Auxiliary Hydraulic Pump Bypass Line Filter

A. Remove Bypass Line Filter

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel and hydraulic system over-temperature rudder and aileron manual indicator circuit breaker located on dc bus 4 section of EPC circuit breaker panel.


WARNING: TAG AND SAFETY CIRCUIT BREAKERS (SEE CHAPTER 20).

- (2) Place hydraulic system selector control lever in general system (normal) position.
- (3) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (4) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (5) Drain auxiliary hydraulic pump alternate reservoir to a point below side port where filter is mounted (see 29-00, Maintenance Practices).
- (6) Install magnetic drain plug in manifold at bottom of reservoir. Tighten to torque of 312 ( $\pm 20$ ) inch-pounds. Safety with lockwire.
- (7) Disconnect auxiliary pump bypass line at bottom of filter.
- (8) Remove filter from elbow fitting in reservoir side port.

B. Install Bypass Line Filter

- (1) Make certain that auxiliary hydraulic pump control and hydraulic system overtemperature rudder and aileron manual indicator circuit breakers are open.
- (2) Install filter on elbow fitting in reservoir side port.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

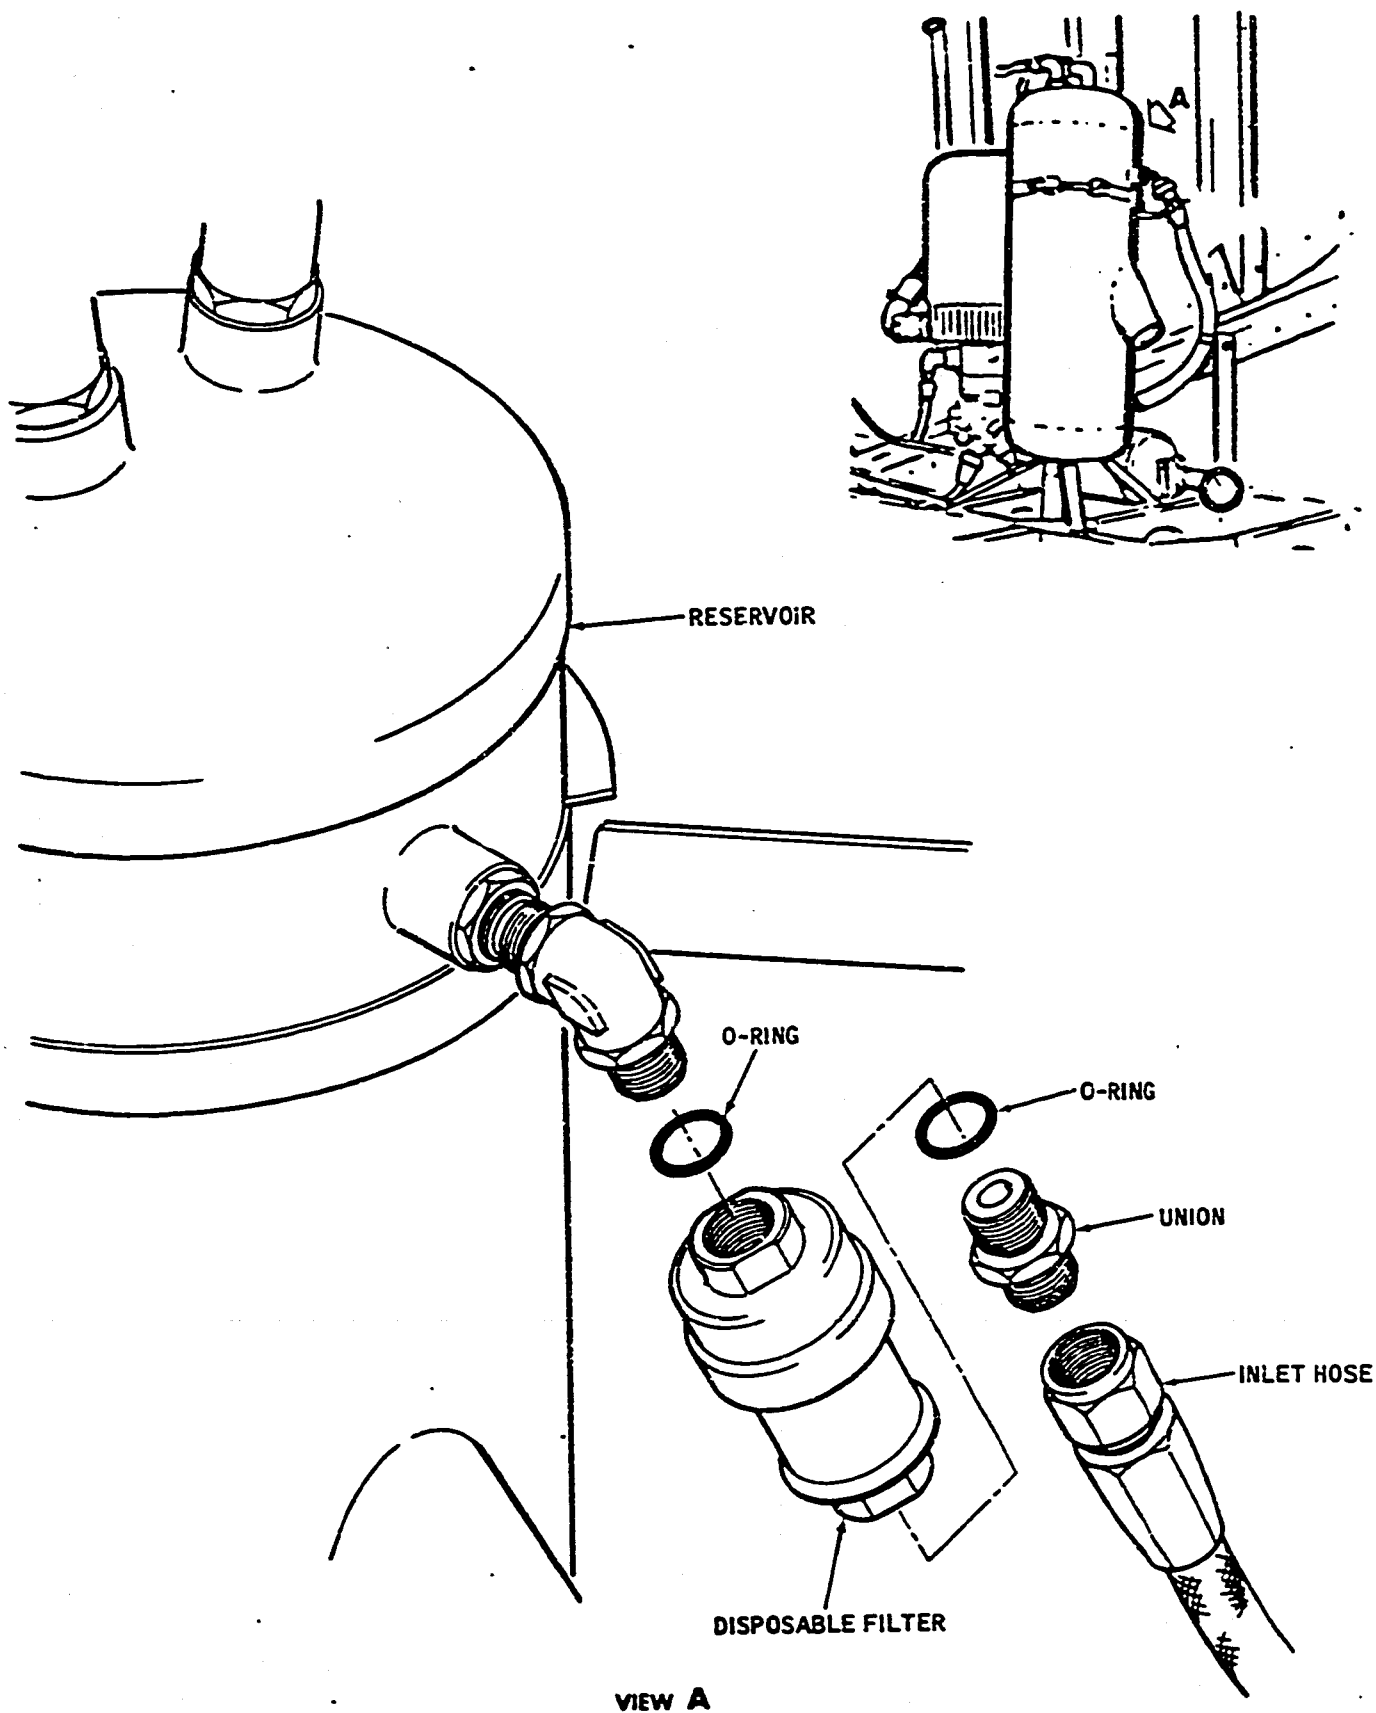

HA2-6050

Auxiliary Hydraulic Pump Bypass  
Line Filter -- Installation  
Figure 201

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (3) Connect bypass line to bottom of filter.
- (4) Close auxiliary hydraulic pump control and hydraulic overtemperature rudder and aileron manual indicator circuit breakers.
- (5) Fill auxiliary hydraulic pump alternate reservoir (see 29-20-8, Servicing).

3. Inspection/Check Auxiliary Hydraulic Pump Bypass Line Filter

A. Check Bypass Line Filter

- (1) Make certain that hydraulic system selector control lever is in general system (normal) position.
- (2) Pressurize hydraulic system with auxiliary hydraulic pump (see 29-00, Maintenance Practices).

WARNING: MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN THE DOWN POSITION AND THE LANDING GEAR GROUND LOCKPINS ARE INSTALLED.

- (3) Check that hydraulic fluid is visible in alternate reservoir sight gage.
- (4) Check hydraulic fittings on reservoir and bypass line filter for leaks.
- (5) Check all hydraulic lines in area for security of attachment and general condition.
- (6) Check magnetic drain plug on reservoir for safety lockwire.
- (7) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (8) Fill hydraulic system reservoir as described on instruction placard on reservoir.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

INDICATING - DESCRIPTION AND OPERATION

1. General

A. Description

- (1) Indicating circuits for the hydraulic power system provide indications in the flight compartment of the status of the hydraulic power system during operation. Five separate indications are provided; three (hydraulic fluid quantity, temperature, and pressure) are presented on indicating gages and three (hydraulic reservoir low pressure, hydraulic fluid overtemperature, and emergency reservoir fluid level) are presented by indicating lights.

2. Hydraulic Fluid Quantity Indicating System (See Figure 1.)



- A. The hydraulic fluid quantity indicating system consists of a ratiometer-type indicator, a tank unit (transmitter) bolted to an external flanged adapter on the reservoir, and interconnecting wiring. Changes in the fluid level in the hydraulic system reservoir are followed by a float. The motion of the float is transmitted by means of a linkage arrangement, to the contact arm (wiper arm) of a potentiometer inside of the head of the transmitter. The potentiometer is wired to the indicator. The indicator consists of a rotor surrounded by three electromagnets. As the potentiometer contact arm moves, the rotor is positioned accordingly. The indicator pointer is attached directly to the rotor and thus shows liquid quantity. The indicator is marked hydraulic oil quantity.
- B. When the hydraulic reservoir is full, the fluid quantity indicator in the flight compartment pegs at a point equivalent to 11.5 US gallons (9.56 Imperial gallons, 43.52 liters). There are 1.4 US gallons (1.16 Imperial gallons, 5.29 liters) in the reservoir not recorded; as a result, the indicator does not move until this amount of fluid is depleted.
- C. In operation, the voltage across E1 is constant. The position of the contact arm (wiper arm) in the transmitter determines the voltage across E2 and E3. When the contact arm in the transmitter is moved in the R+ direction, the voltage across coil E2 is increased while the voltage across E3 is decreased. When the contact arm is moved in the R- direction, the opposite effect takes place. From these voltages, magnetic flux is produced in each coil proportional to the voltage drop across the coil. The electrical circuit causes the resultant of the three coil fluxes to rotate in a clockwise direction, as the contact arm is moved toward the R- position. The permanent magnet (M) reacts with the resultant flux, producing a torque which causes the magnet to rotate and become magnetically aligned with the resultant coil flux. Moderate supply voltage variation does not affect the positioning of the pointer on the indicator scale. A voltage variation affects each of the coils proportionately, therefore affecting only the magnitude of the resultant flux, but not the direction. When the system power is off, a magnet in the indicator pulls the pointer off the scale.

Jun 15/67

Printed in U.S.A.

29-30-0  
CODE 1  
Page 1

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

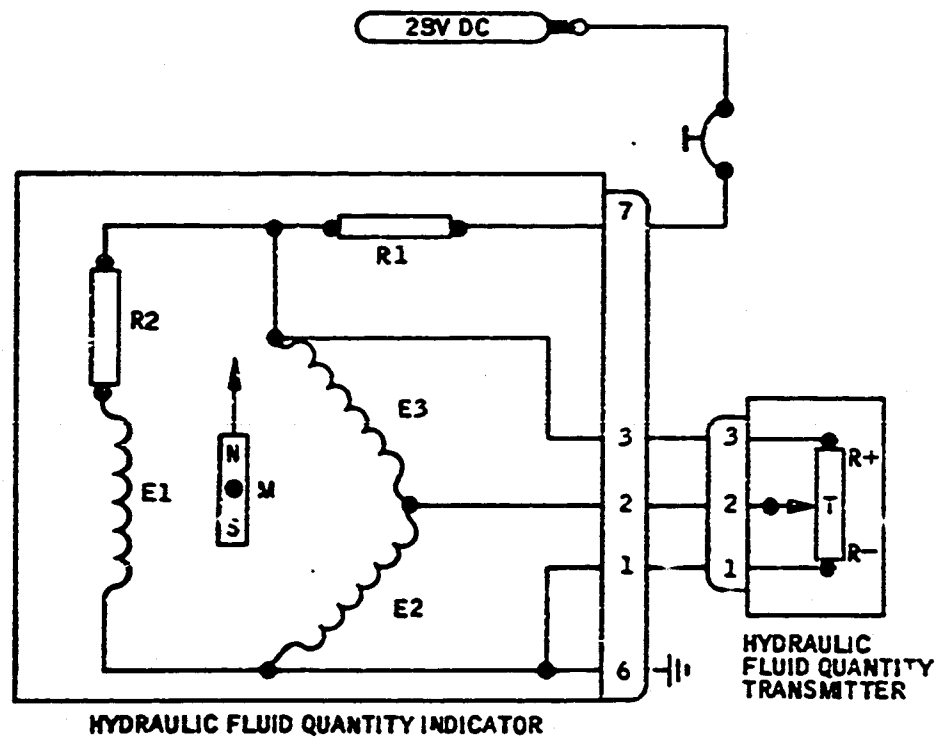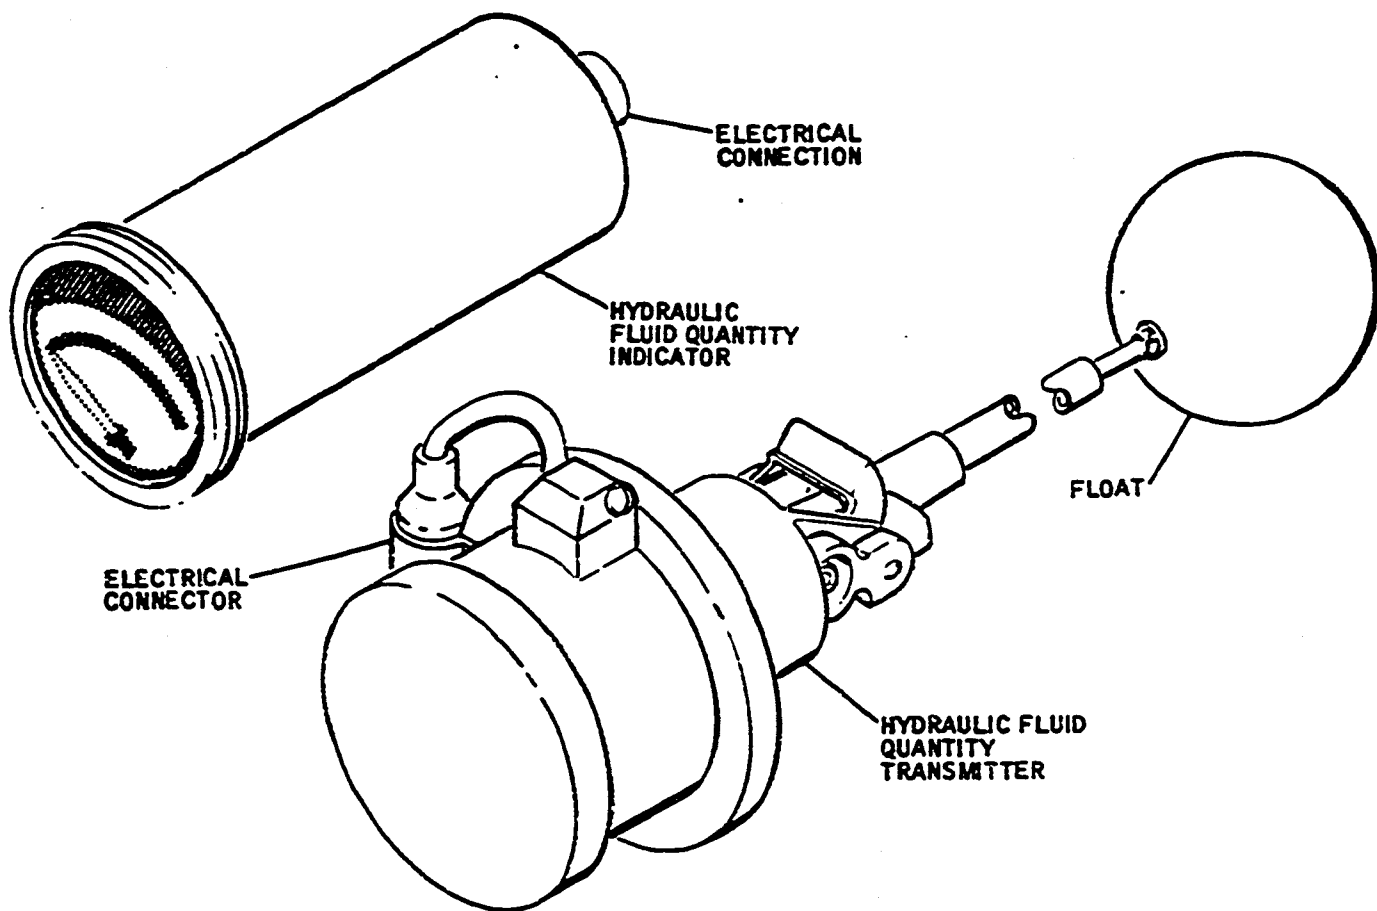

Hydraulic Fluid Quantity Indicating System -- Schematic  
 Figure 1

HA2-151

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

3. Hydraulic Fluid Temperature Indicating System (See Figure 2.)

- A. The hydraulic fluid temperature indicating system is the ratiometer-type which provides an indication of hydraulic fluid temperature in the reservoir. The system consists of a temperature bulb, installed in the reservoir, and an indicator in the flight compartment.
- B. The hydraulic fluid temperature indicator operates on the electrical bridge principle, with the temperature bulb forming one leg of the bridge circuit. The indicator armature has two coils turning in the air gap of permanent magnets. A large deflecting coil functions much the same as a galvanometer. A small restoring coil is connected in series with one leg of the bridge and opposes the motion of the deflecting coil. Three hairsprings connect the coils to the circuit; one is common to both coils. Two slide-wire potentiometers are provided; one adjusts calibration at center scale and the other expands or contracts the scale ends. When deenergized, a spring-operated device returns the pointer to a position below the scale arc. The indicator is calibrated from  $-50^{\circ}\text{C}$  to  $+150^{\circ}\text{C}$  ( $-58^{\circ}\text{F}$  to  $302^{\circ}\text{F}$ ). The temperature bulb has a range of  $-70^{\circ}\text{C}$  to  $+300^{\circ}\text{C}$  ( $-94^{\circ}\text{F}$  to  $572^{\circ}\text{F}$ ).



4. Hydraulic Fluid Pressure Indicating System (See Figure 3.)

- A. The hydraulic fluid pressure indicating system is the synchro-type and indicates the fluid pressure in the hydraulic power system. The system consists of an indicator, located in the flight compartment, and a transmitter. The transmitter is located in the upper right side of the nose-wheel well and is connected by tubing to the hydraulic system pressure lines.
- B. The hydraulic fluid pressure indicator consists of a pointer mounted on the shaft of a synchro repeater and is contained within a nonhermetically sealed aluminum case. The indicator is electrically connected to a 28-vac, 400-cycle power source and to a remote, synchro-type pressure transmitter. The indicator is internally lighted by a 5.4-volt lamp bulb.
- C. The stator and rotor of the synchro repeater are electrically connected in parallel to the stator and rotor of the remote pressure transmitter. When both units are energized from the same source, the repeater rotor assumes an identical position to that of the transmitter rotor, which is positioned by action of hydraulic pressure. Thus the indicator indicates the pressure on the dial which is calibrated in psig from 0 to 4 times 1000. If the system electrical power fails, the pointer tends to remain at the last indicated position. A direct-reading gage, located on the hydraulic system accumulator in the left main gear wheel well, also indicates the hydraulic system pressure.

5. Hydraulic Reservoir Low-Pressure Indicating Light System (See Figure 4.)

- A. The hydraulic reservoir low-pressure indicating light system provides a visual indication of below normal air pressure in the hydraulic reservoir. The system consists of a pressure-actuated switch located on the hydraulic


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

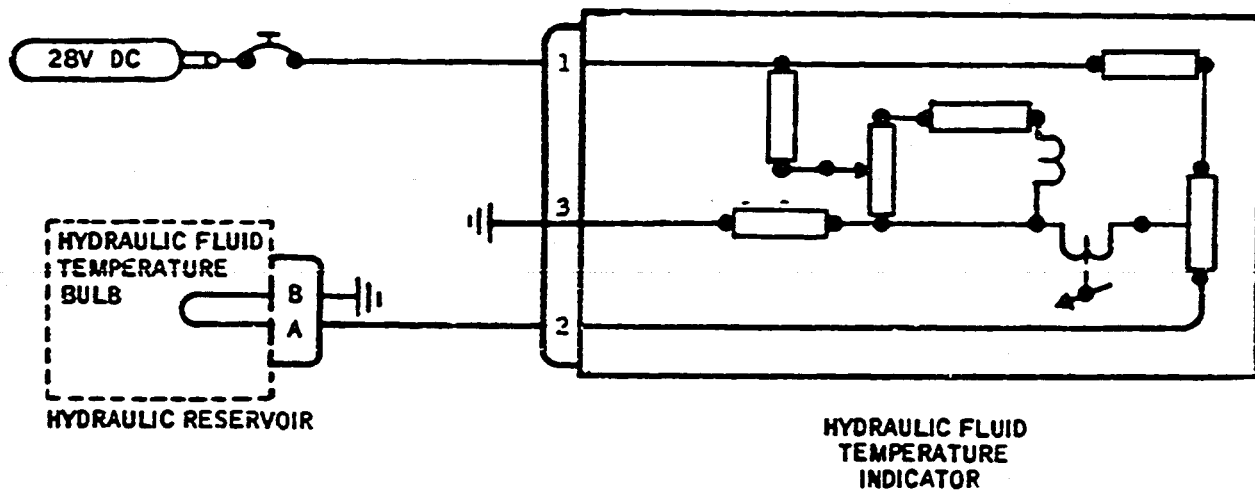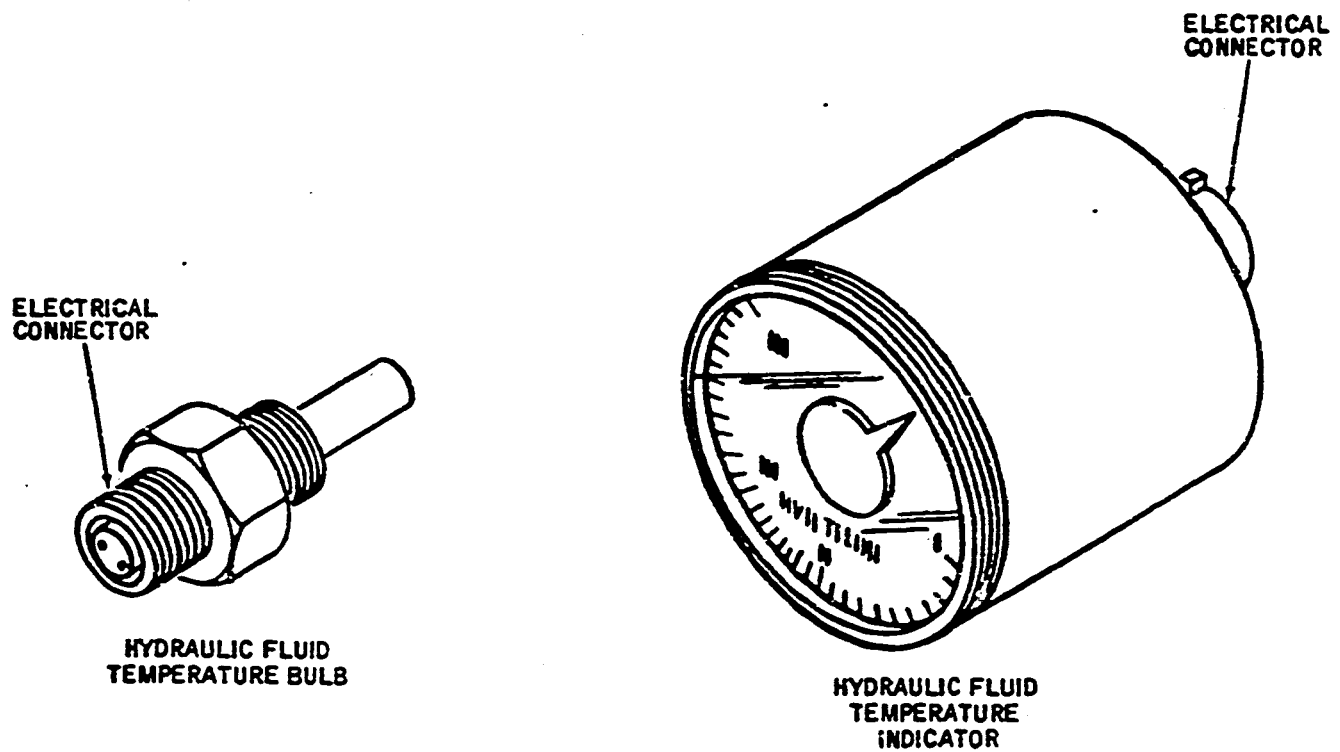

Hydraulic Fluid Temperature Indicating  
 System -- Schematic  
 Figure 2

HA2-152

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

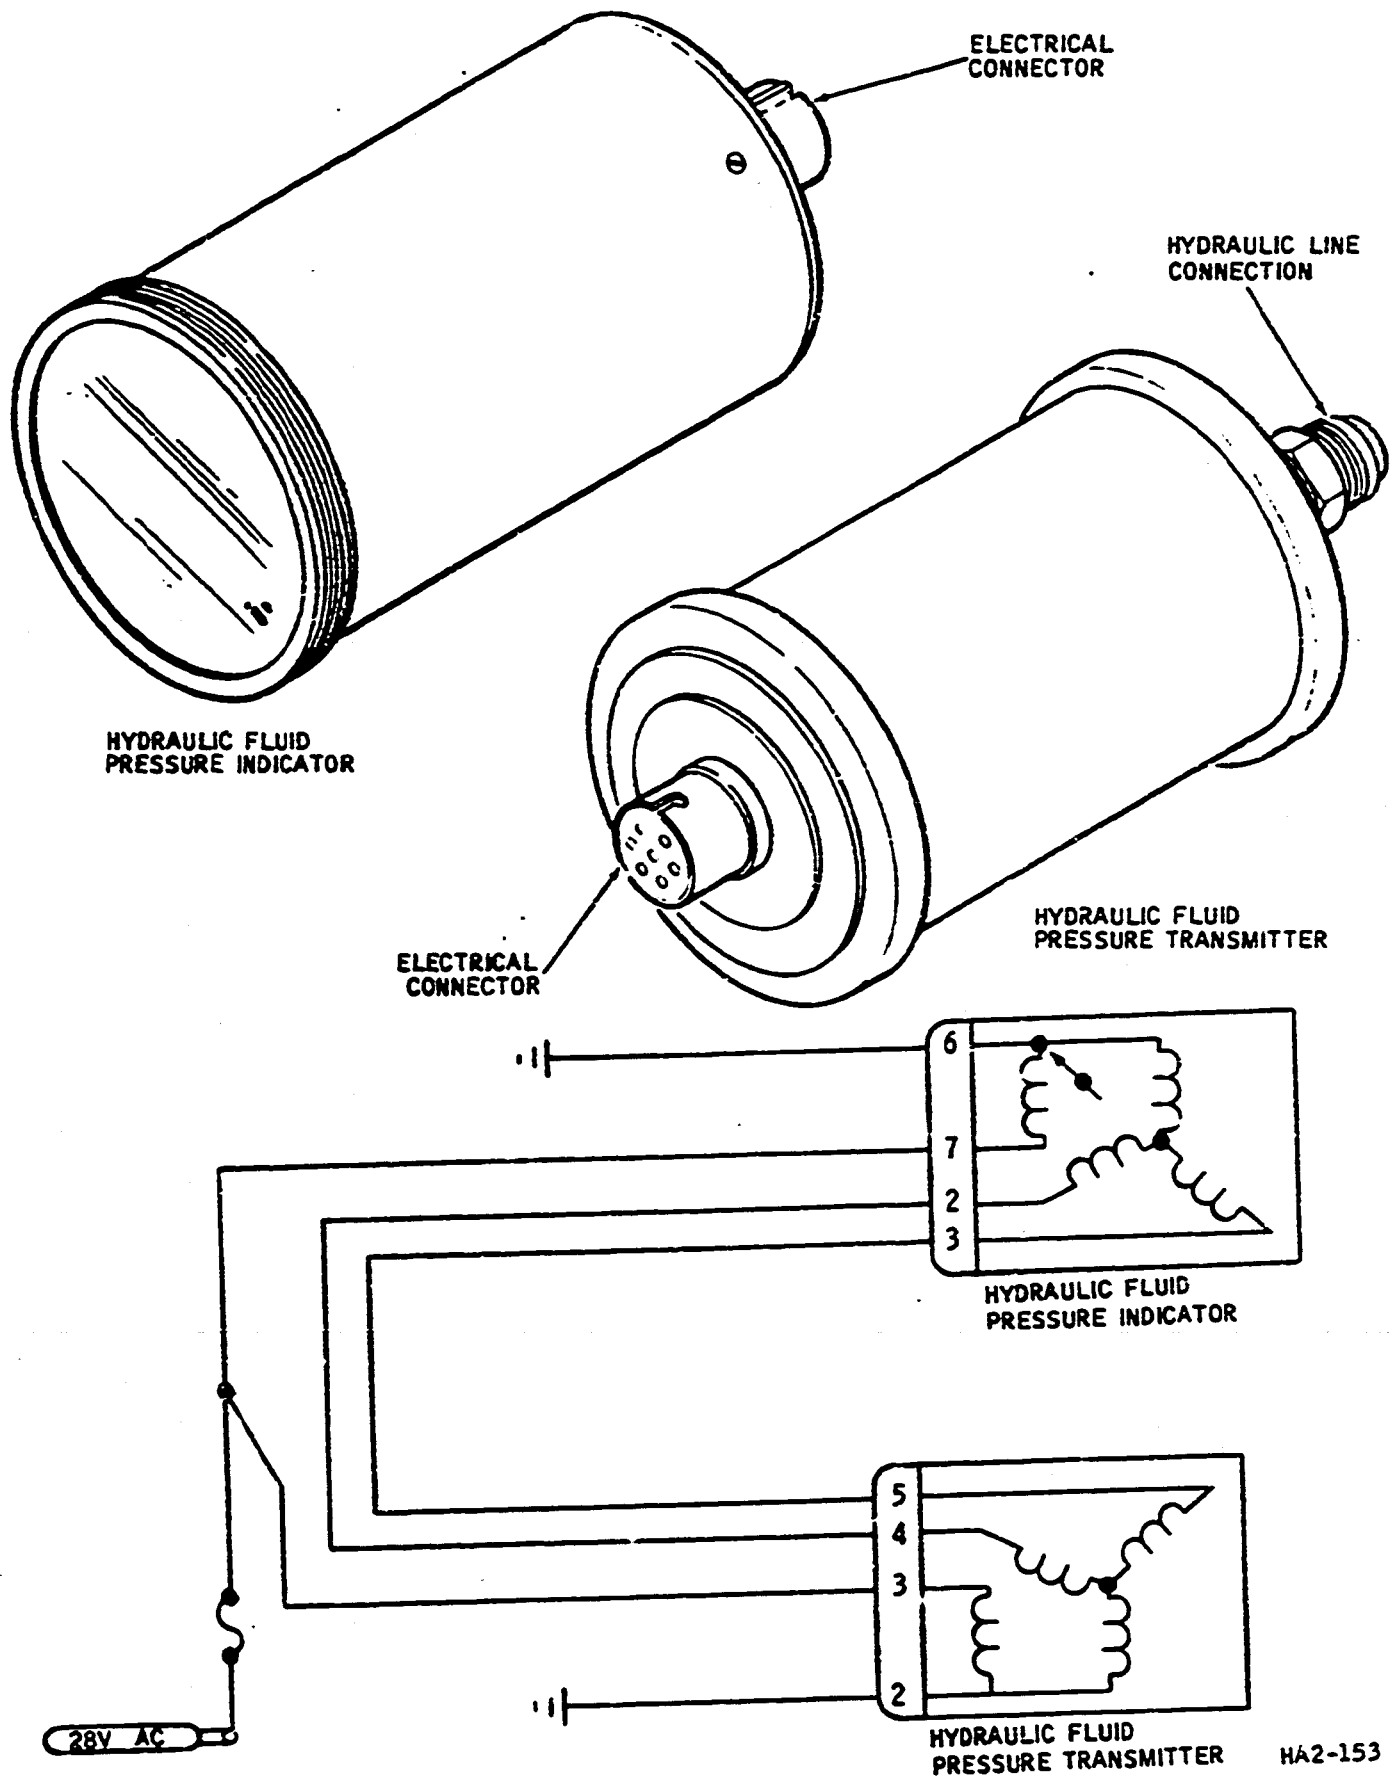

Hydraulic Fluid Pressure Indicating  
 System -- Schematic  
 Figure 3

HA2-153



29-30-0  
 CODE 1  
 Page 5

Jun 15/67

Printed in U.S.A.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

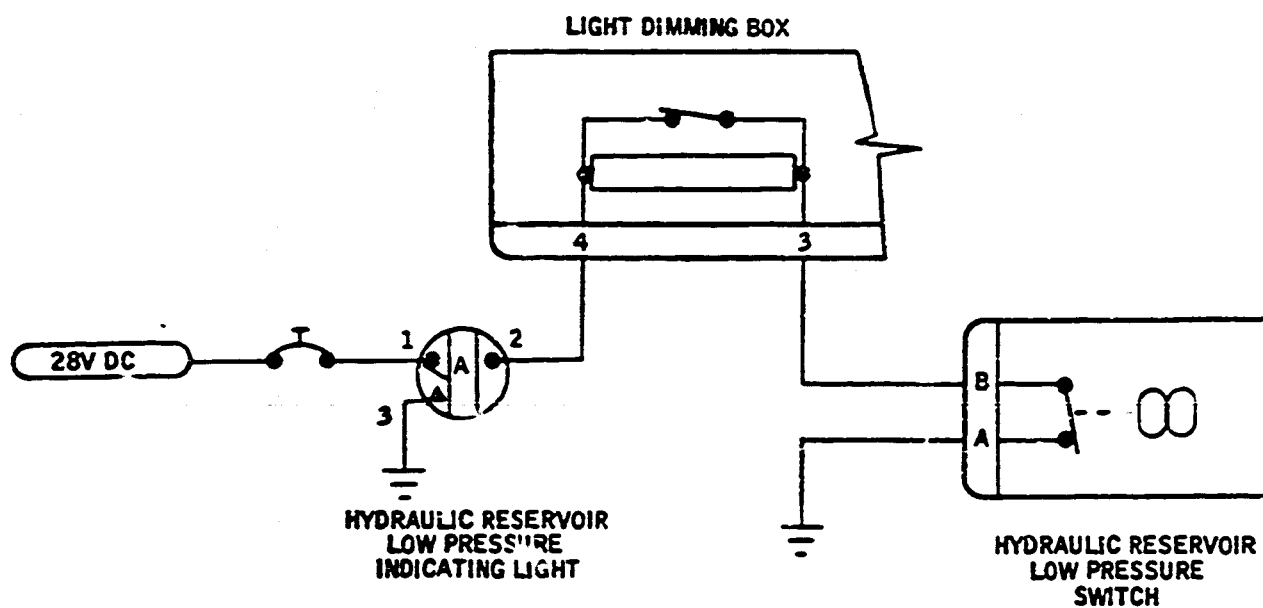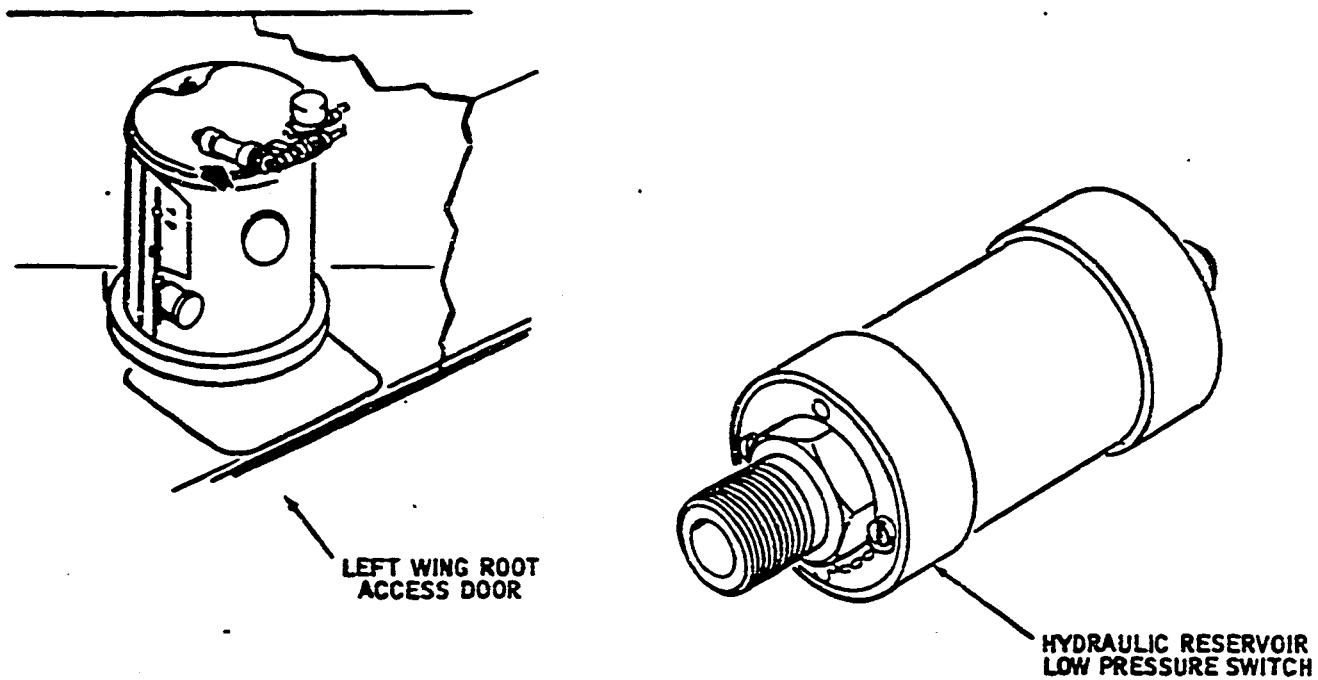

Hydraulic Reservoir Low-Pressure Indicating  
 Light System -- Schematic  
 Figure 4


HA2-202

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

reservoir, a light-dimming switch and resistor, and a press-to-test amber indicator light in the flight compartment. The hydraulic reservoir low-pressure indicator light comes on when reservoir air pressure drops below 25 ( $\pm 2$ ) psi and goes off when the pressure reaches 30 ( $\pm 2$ ) psi.

6. Hydraulic Fluid Overtemperature Indicating Light System (See Figure 5.)

- A. The hydraulic fluid overtemperature indicating light system provides a visual indication of overheated hydraulic fluid in the reservoir. The system consists of a dimmable, amber, press-to-test indicator light (see Chapter 31 for location), and a temperature-sensitive switch installed in the hydraulic reservoir. The placard on the cap of the indicator light reads hydraulic oil temperature. If the hydraulic fluid reaches an over-temperature condition, the temperature-sensitive switch will cause the indicator light to come on. The switch closes when the temperature reaches 71°C to 82°C (160°F to 180°F).

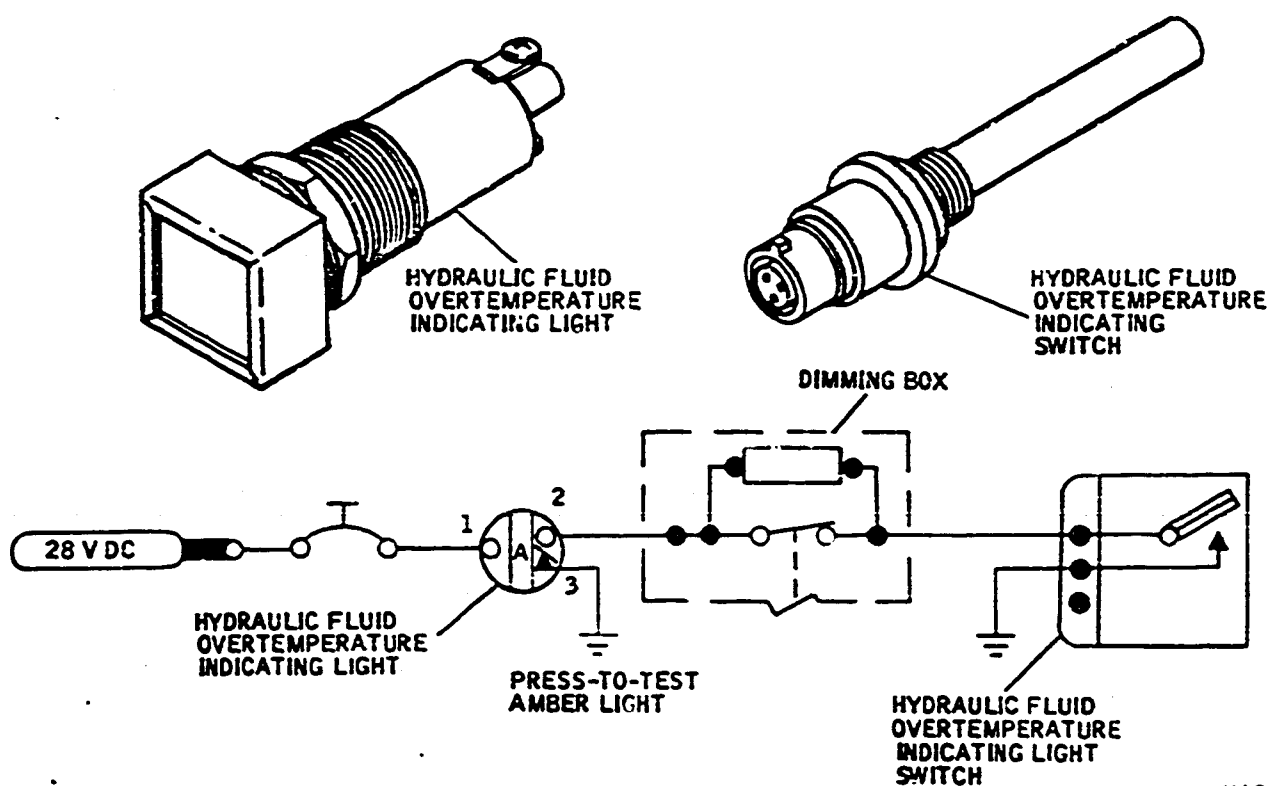


Hydraulic Fluid Overtemperature Indicating  
Light System -- Schematic  
Figure 5

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

7. Emergency Hydraulic Reservoir Low Level Indicating Light System (See Figure 6.)

- A. The emergency hydraulic reservoir low level indicating light system provides a visual indication in the flight compartment if the fluid level in the auxiliary hydraulic pump alternate reservoir drops to approximately 0.8 US gallons (0.666 Imperial gallons, 3.15 liters). The system consists of a float-actuated, 2-position switch located on the alternate reservoir, an indicator light located in the flight compartment, and the wiring required to connect the system. When fluid level in the alternate reservoir drops below 0.8 US gallons, the float lowers, closing the switch, and the indicator light comes on. When the fluid level rises above 0.8 US gallons, the float rises, opening the switch, and the light goes out.

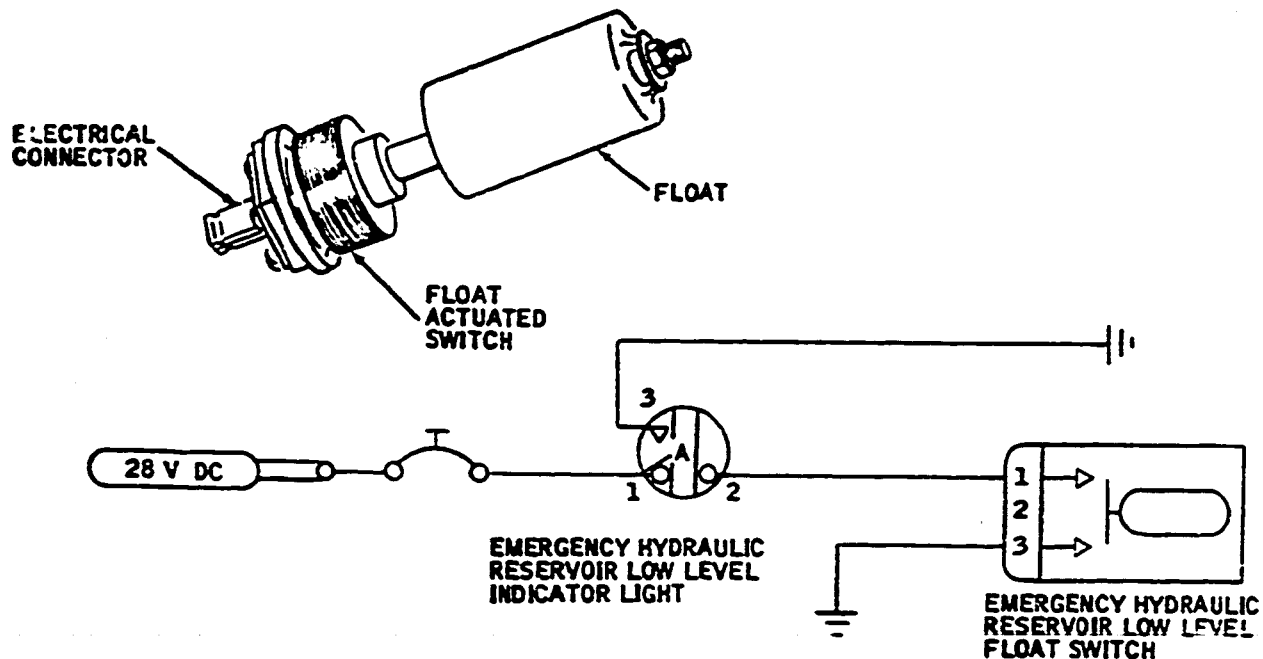

HA2-177

Emergency Hydraulic Reservoir Low Level  
Indicating System -- Schematic  
Figure 6

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

INDICATING - DESCRIPTION AND OPERATION

1. General

A. Description

- (1) Indicating circuits for the hydraulic power system provide indications in the flight compartment of the status of the hydraulic power system during operation. Five separate indications are provided; three (hydraulic fluid quantity, temperature, and pressure) are presented on indicating gages and four (hydraulic reservoir low pressure, hydraulic fluid overtemperature, emergency reservoir fluid level, and hydraulic pump low pressure) are presented by indicating lights.

2. Hydraulic Fluid Quantity Indicating System (See Figure 1.)



- A. The hydraulic fluid quantity indicating system consists of a ratiometer-type indicator, a tank unit (transmitter) bolted to an external flanged adapter on the reservoir, and interconnecting wiring. Changes in the fluid level in the hydraulic system reservoir are followed by a float. The motion of the float is transmitted by means of a linkage arrangement, to the contact arm (wiper arm) of a potentiometer inside of the head of the transmitter. The potentiometer is wired to the indicator. The indicator consists of a rotor surrounded by three electromagnets. As the potentiometer contact arm moves, the indicator rotor is positioned accordingly. The indicator pointer is attached directly to the rotor and thus shows liquid quantity. The indicator is marked hydraulic oil quantity.
- B. When the hydraulic reservoir is full, the fluid quantity indicator in the flight compartment pegs at a point equivalent to 11.5 US gallons (9.56 Imperial gallons, 43.52 liters). There are 1.4 US gallons (1.16 Imperial gallons, 5.29 liters) in the reservoir not recorded; as a result, the indicator does not move until this amount of fluid is depleted.
- C. In operation, the voltage across E1 is constant. The position of the contact arm (wiper arm) in the transmitter determines the voltage across E2 and E3. When the contact arm in the transmitter is moved in the R+ direction, the voltage across coil E2 is increased while the voltage across E3 is decreased. When the contact arm is moved in the R- direction, the opposite effect takes place. From these voltages, magnetic flux is produced in each coil proportional to the voltage drop across the coil. The electrical circuit causes the resultant of the three coil fluxes to rotate in a clockwise direction, as the contact arm is moved toward the R- position. The permanent magnet (M) reacts with the resultant flux, producing a torque which causes the magnet to rotate and become magnetically aligned with the resultant coil flux. Moderate supply voltage variation does not affect the positioning of the pointer on the indicator scale. A voltage variation affects each of the coils proportionately, therefore affecting only the magnitude of the resultant flux, but not the direction. When the system power is off, a magnet in the indicator pulls the pointer off the scale.

Jun 15/67

Printed in U.S.A.

29-30-0  
CODE 2  
Page 1

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

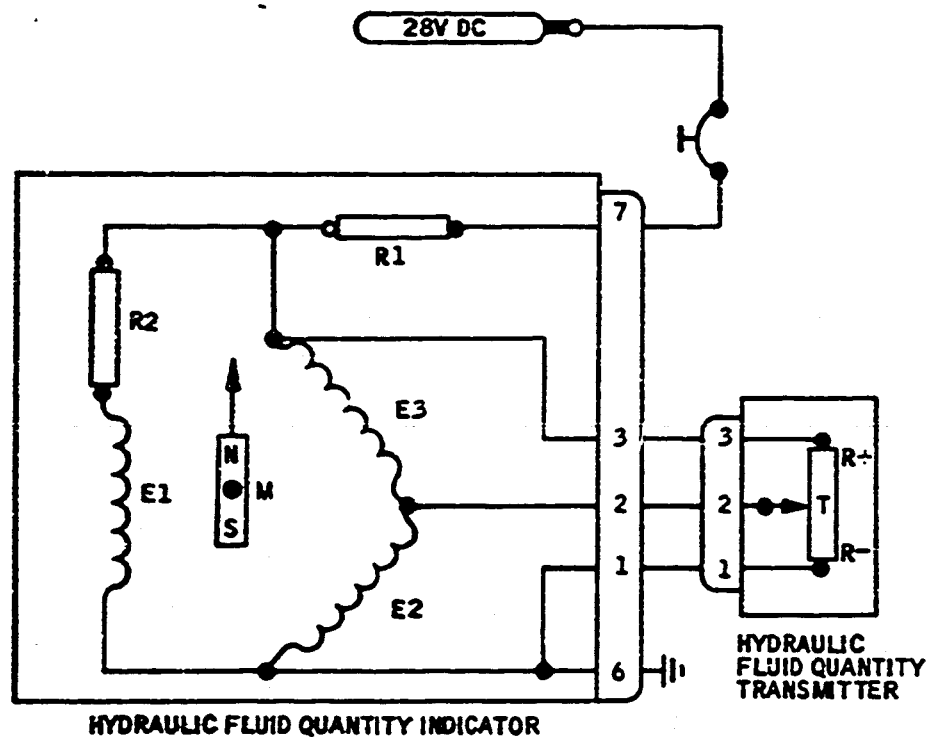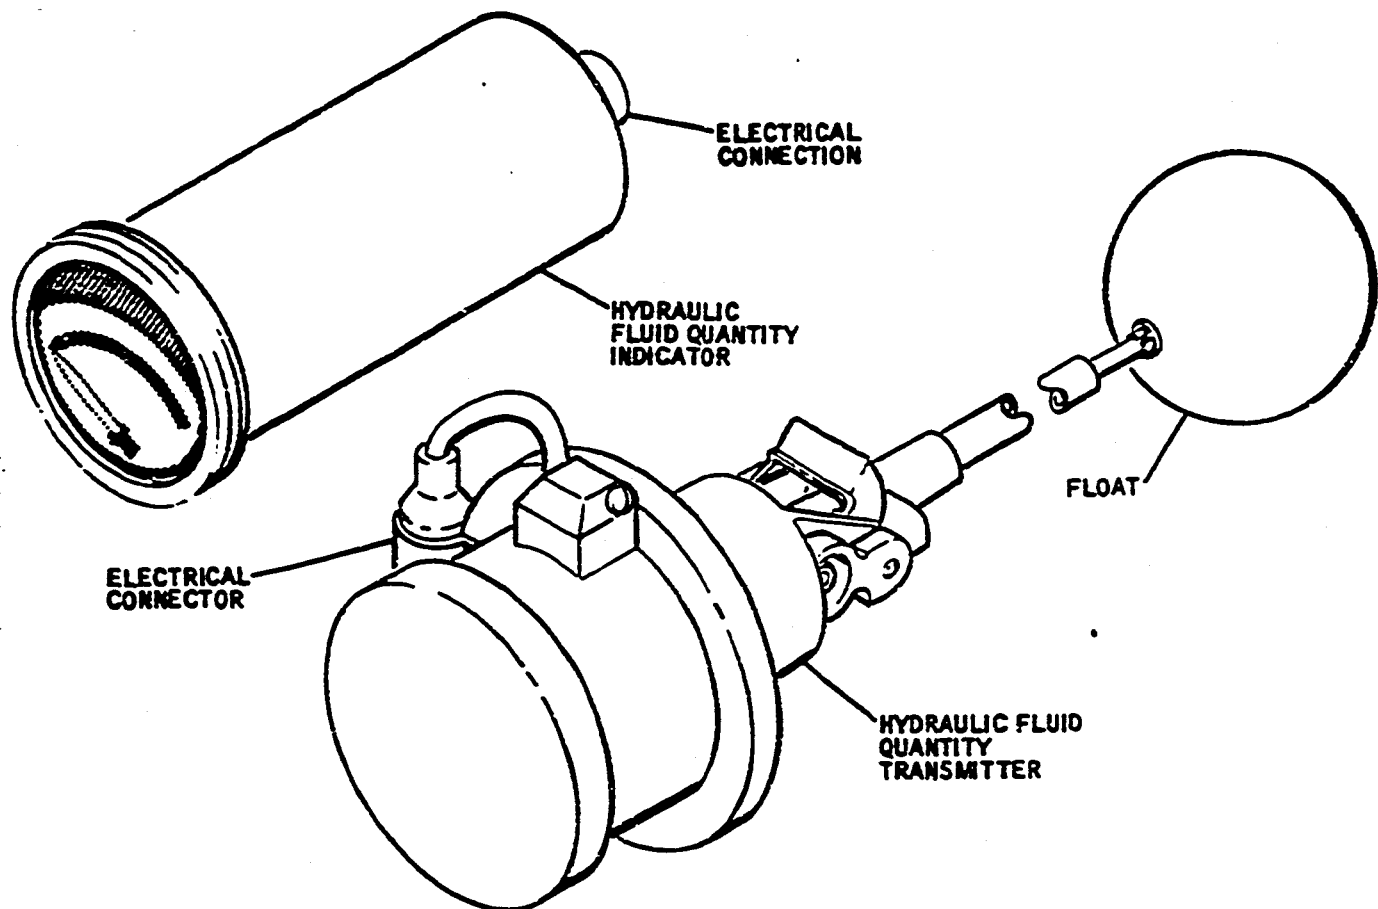

HA2-151

Hydraulic Fluid Quantity Indicating System -- Schematic  
 Figure 1

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

3. Hydraulic Fluid Temperature Indicating System (See Figure 2.)

- A. The hydraulic fluid temperature indicating system is the ratiometer-type which provides an indication of hydraulic fluid temperature in the reservoir. The system consists of a temperature bulb, installed in the reservoir, and an indicator in the flight compartment.
- B. The hydraulic fluid temperature indicator operates on the electrical bridge principle, with the temperature bulb forming one leg of the bridge circuit. The indicator armature has two coils turning in the air gap of permanent magnets. A large deflecting coil functions much the same as a galvanometer. A small restoring coil is connected in series with one leg of the bridge and opposes the motion of the deflecting coil. Three hairsprings connect the coils to the circuit; one is common to both coils. Two slide-wire potentiometers are provided; one adjusts calibration at center scale and the other expands or contracts the scale ends. When deenergized, a spring-operated device returns the pointer to a position below the scale arc. The indicator is calibrated from  $-50^{\circ}\text{C}$  to  $+150^{\circ}\text{C}$  ( $-58^{\circ}\text{F}$  to  $302^{\circ}\text{F}$ ). The temperature bulb has a range of  $-70^{\circ}\text{C}$  to  $+300^{\circ}\text{C}$  ( $-94^{\circ}\text{F}$  to  $572^{\circ}\text{F}$ ).



4. Hydraulic Fluid Pressure Indicating System (See Figure 3.)

- A. The hydraulic fluid pressure indicating system is the synchro-type and indicates the fluid pressure in the hydraulic power system. The system consists of an indicator, located in the flight compartment, and a transmitter. The transmitter is located in the upper right side of the nosewheel well and is connected by tubing to the hydraulic system pressure lines.
- B. The hydraulic fluid pressure indicator consists of a pointer mounted on the shaft of a synchro repeater and is contained within a nonhermetically sealed aluminum case. The indicator is electrically connected to a 28-vac, 400-cycle power source and to a remote, synchro-type pressure transmitter. The indicator is internally lighted by a 5.4-volt lamp bulb.
- C. The stator and rotor of the synchro repeater are electrically connected in parallel to the stator and rotor of the remote pressure transmitter. When both units are energized from the same source, the repeater rotor assumes an identical position to that of the transmitter rotor, which is positioned by action of hydraulic pressure. Thus the indicator indicates the pressure on the dial which is calibrated in psig from 0 to 4 times 1000. If the system electrical power fails, the pointer tends to remain at the last indicated position. A direct-reading gage, located on the hydraulic system accumulator in the left main gear wheel well, also indicates the hydraulic system pressure.

5. Hydraulic Reservoir Low-Pressure Indicating Light System (See Figure 4.)

- A. The hydraulic reservoir low-pressure indicating light system provides a visual indication of below normal air pressure in the hydraulic reservoir. The system consists of a pressure-actuated switch located on the hydraulic reservoir, a light-dimming switch and resistor, and a press-to-test amber



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

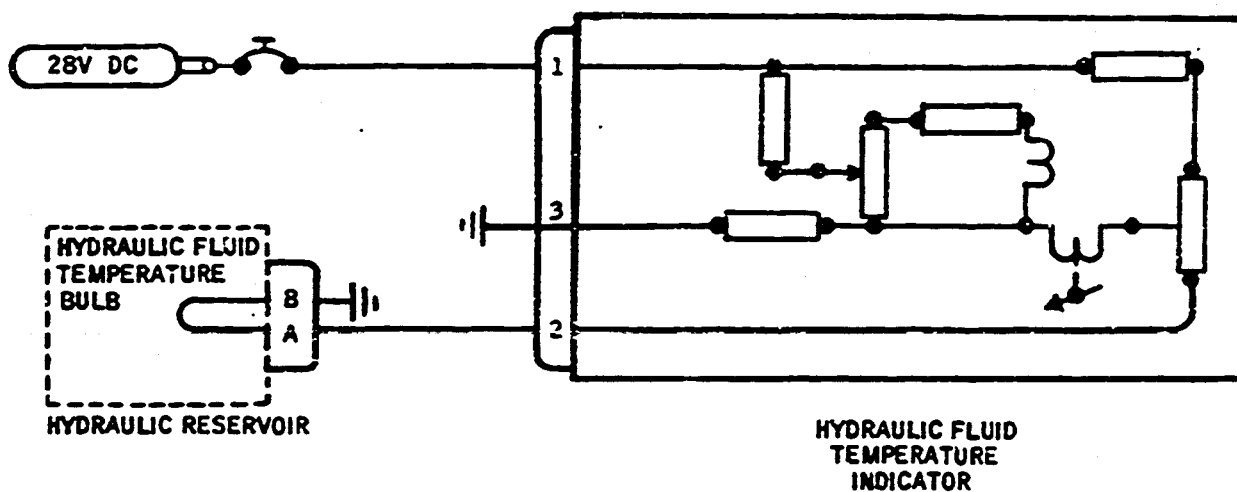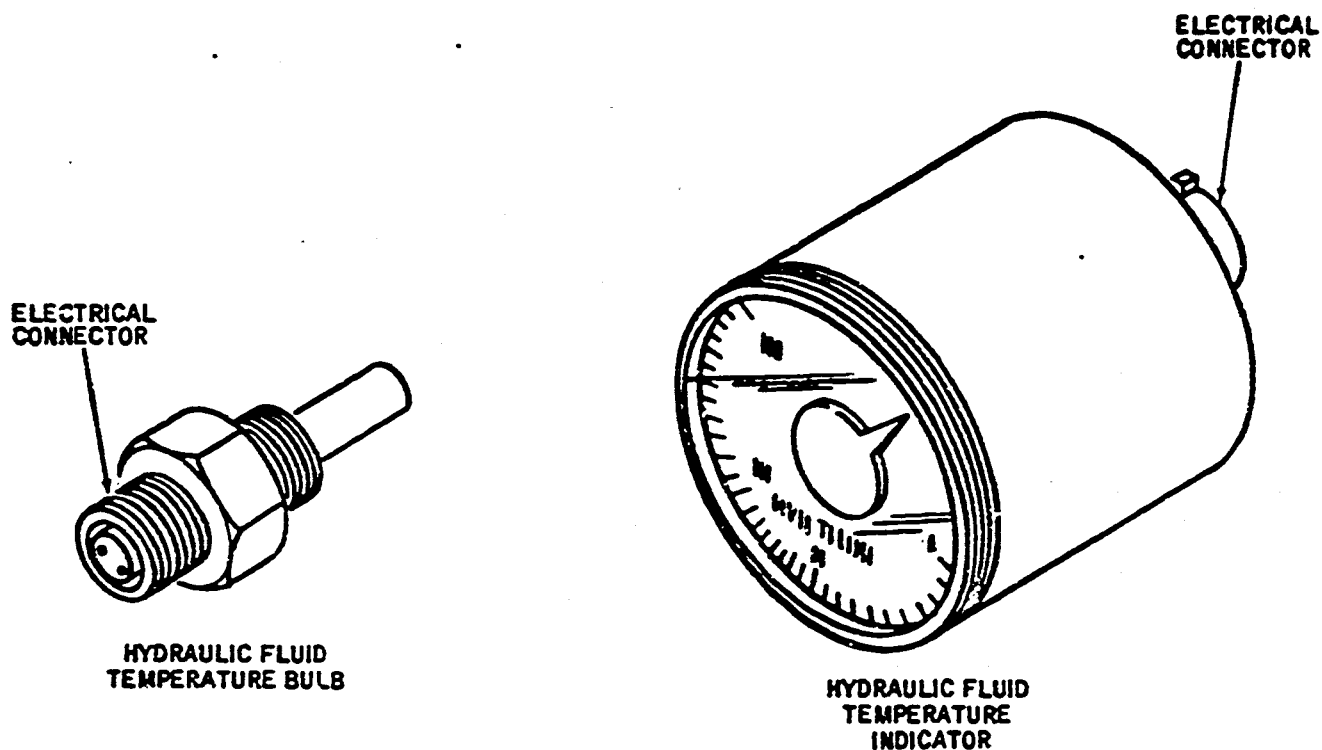

HA2-152

Hydraulic Fluid Temperature Indicating  
 System -- Schematic  
 Figure 2

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

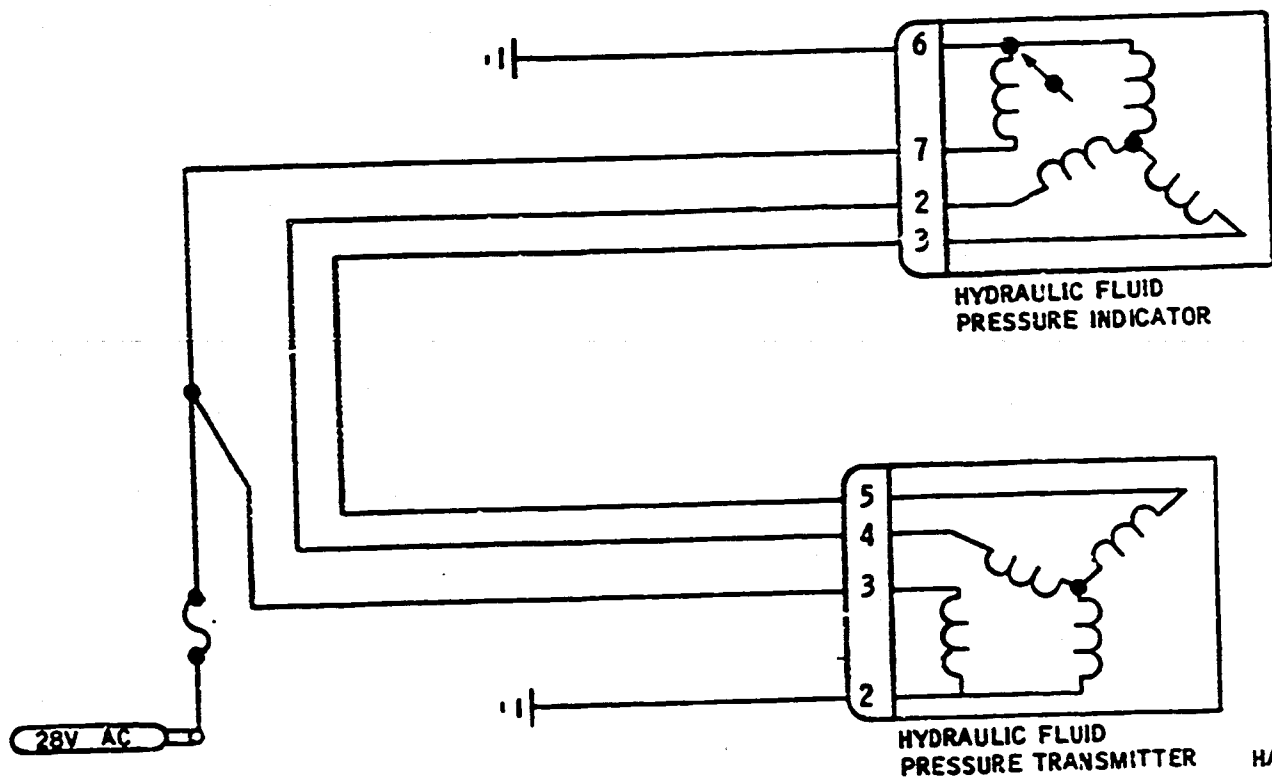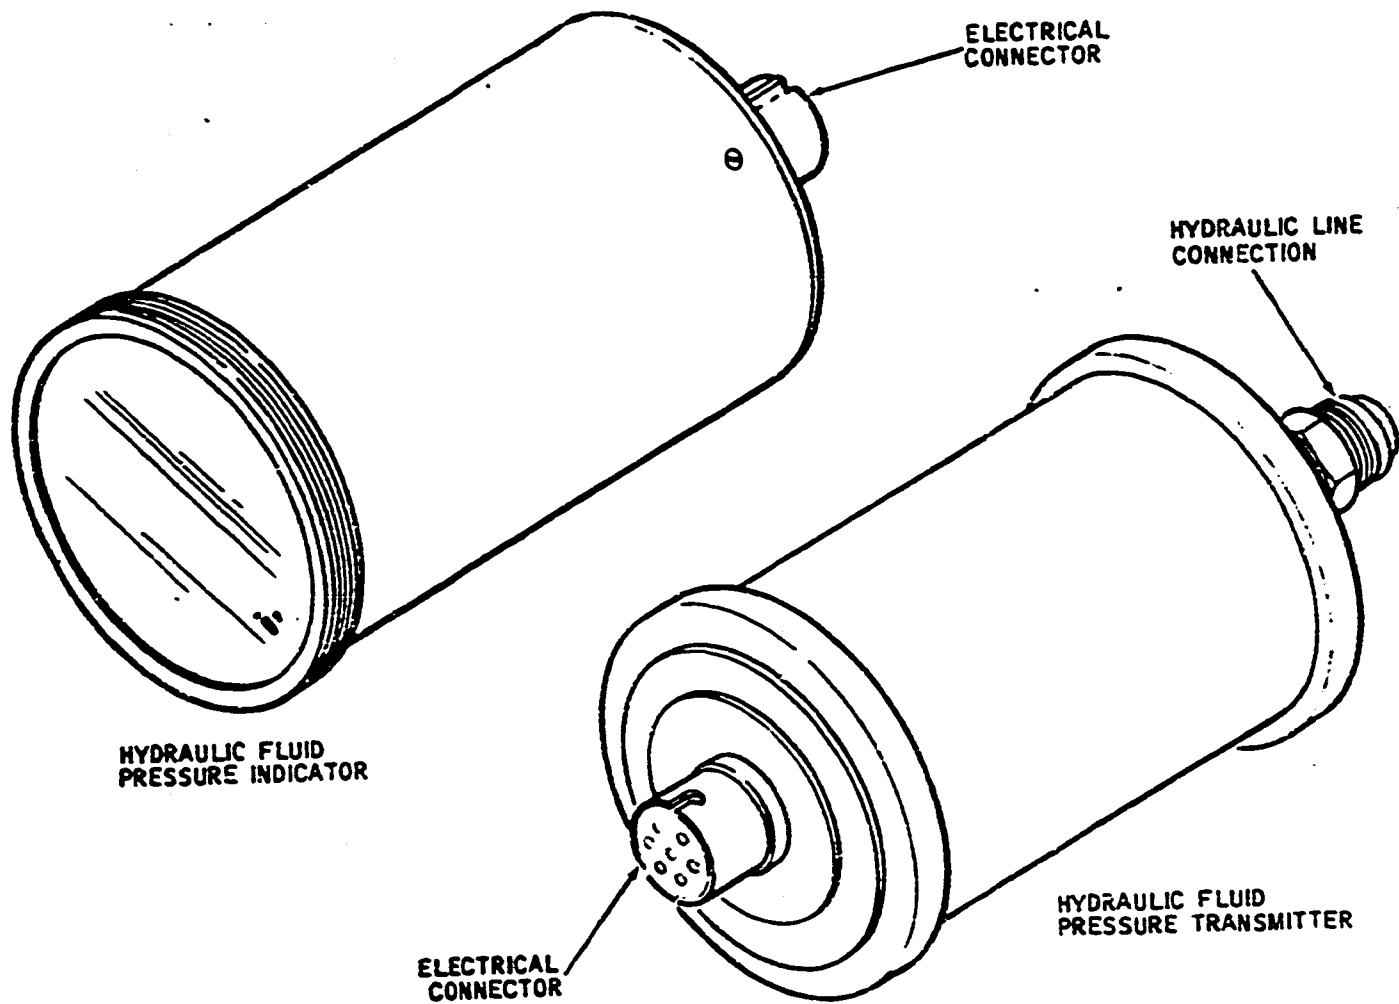

Hydraulic Fluid Pressure Indicating  
 System -- Schematic  
 Figure 3

HA2-153


Jun 15/67

Printed in U.S.A.


29-30-0  
 CODE 2  
 Page 5




DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

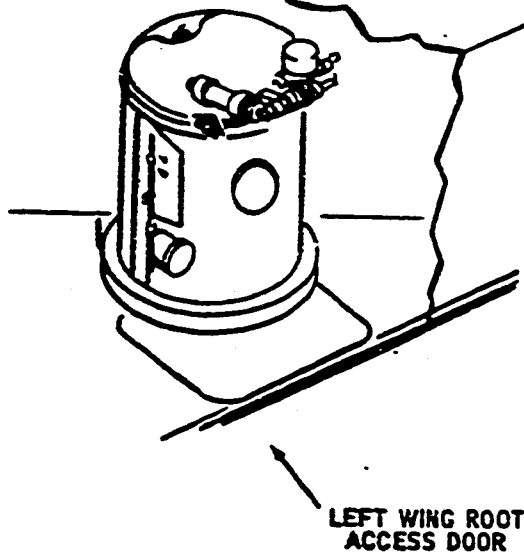

LEFT WING ROOT  
ACCESS DOOR

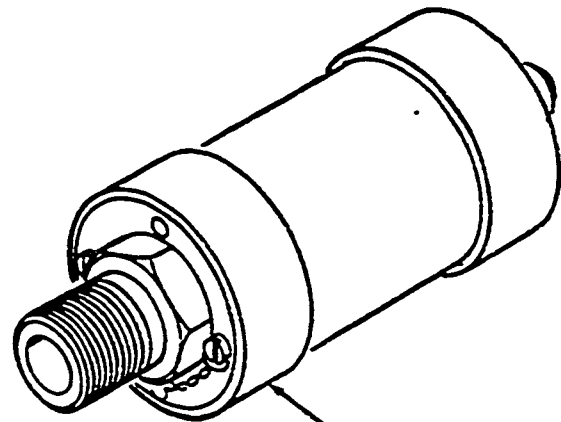

HYDRAULIC RESERVOIR  
LOW PRESSURE SWITCH

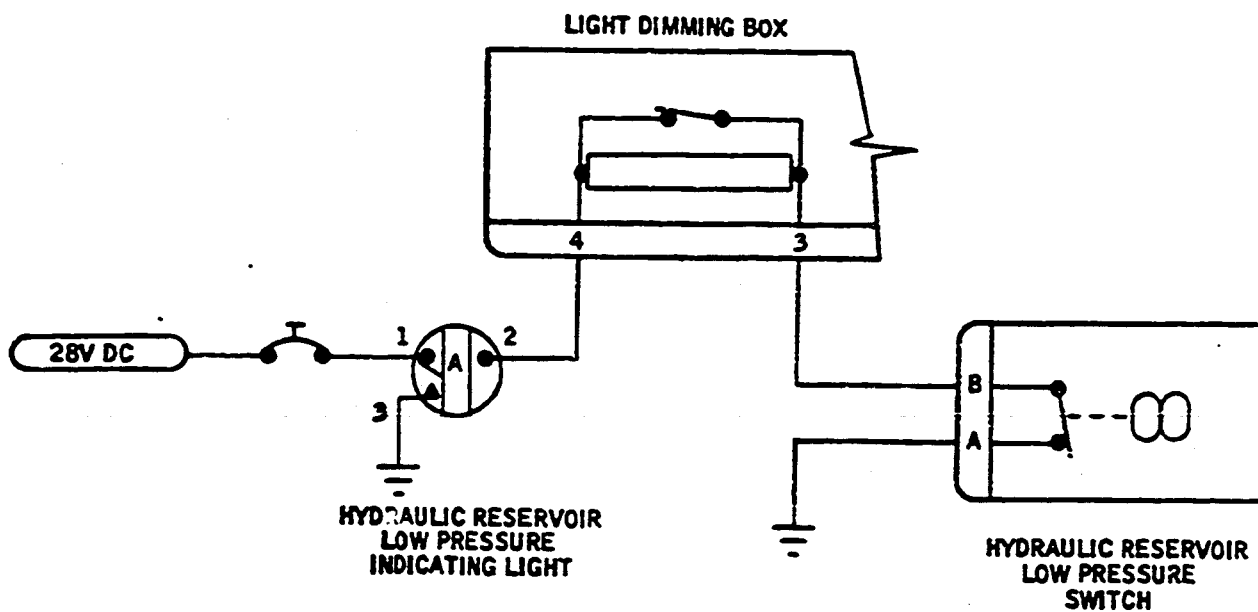

Hydraulic Reservoir Low-Pressure Indicating  
Light System -- Schematic  
Figure 4


HA2-202

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

indicator light in the flight compartment. The hydraulic reservoir low-pressure indicator light comes on when reservoir air pressure drops below 25 ( $\pm 2$ ) psi and goes off when the pressure reaches 30 ( $\pm 2$ ) psi.

6. Hydraulic Fluid Overtemperature Indicating Light System (See Figure 5.)

- A. The hydraulic fluid overtemperature indicating light system provides a visual indication of overheated hydraulic fluid in the reservoir. The system consists of a dimmable, amber, press-to-test indicator light (see Chapter 31 for location), and a temperature-sensitive switch installed in the hydraulic reservoir. The placard on the cap of the indicator light reads hydraulic oil temperature. If the hydraulic fluid reaches an over-temperature condition, the temperature-sensitive switch will cause the indicator light to come on. The switch closes when the temperature reaches 71°C to 82°C (160°F to 180°F).

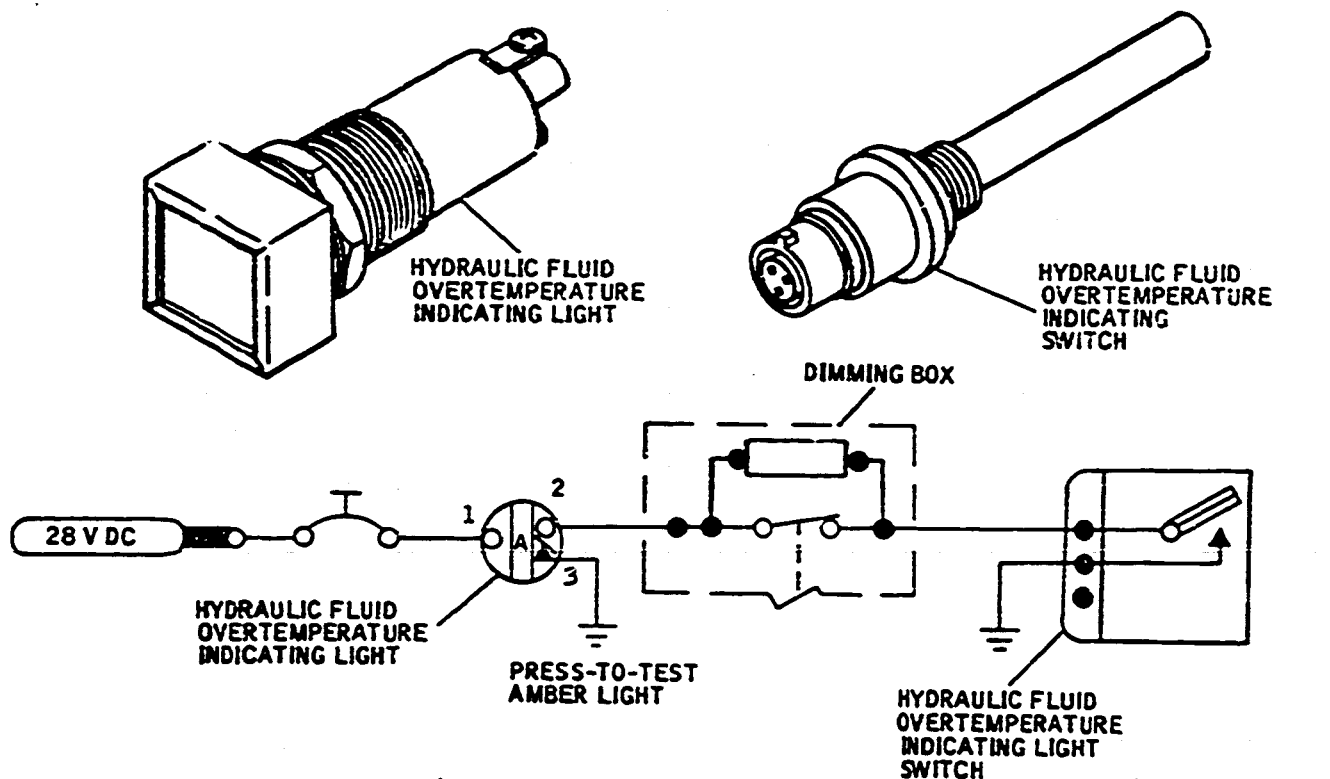


HA2-176

Hydraulic Fluid Overtemperature Indicating  
Light System -- Schematic  
Figure 5

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

7. Emergency Hydraulic Reservoir Low Level Indicating Light System (See Figure 6.)

- A. The emergency hydraulic reservoir low level indicating light system provides a visual indication in the flight compartment if the fluid level in the auxiliary hydraulic pump alternate reservoir drops to approximately 0.8 US gallons (0.666 Imperial gallons, 3.15 liters). The system consists of a float-actuated, 2-position switch located on the alternate reservoir, an indicator light located in the flight compartment, and the wiring required to connect the system. When fluid level in the alternate reservoir drops below 0.8 US gallons, the float lowers, closing the switch, and the indicator light comes on. When the fluid level rises above 0.8 US gallons, the float rises, opening the switch, and the light goes out.

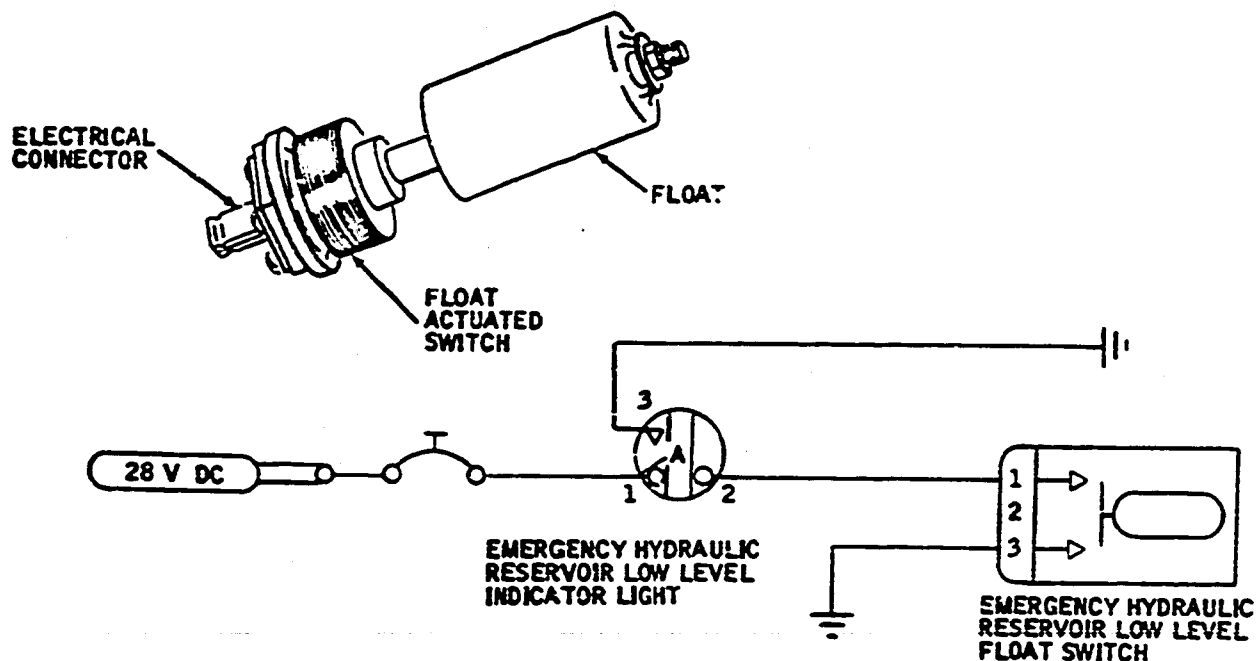


Emergency Hydraulic Reservoir Low Level  
Indicating System -- Schematic  
Figure 6

HA2-177

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

8. Engine-Driven Hydraulic Pump Low Pressure Indicating Light System (See Figure 7.)

- A. The engine-driven hydraulic pump low-pressure indicating light system provides a visual indication of low-pressure at the output of either engine-driven pump. The system consists of two pressure-actuated switches, indicating light dimming boxes, and two press-to-test amber indicating lights. One switch is located at each engine-driven pump. The indicating lights are located in the flight compartment. When either of the engine-driven hydraulic pump bypass switches is in the on position, the corresponding engine-driven pump indicating light comes on if the output pressure of the corresponding pump drops below 1500 ( $\pm 100$ ) psig.

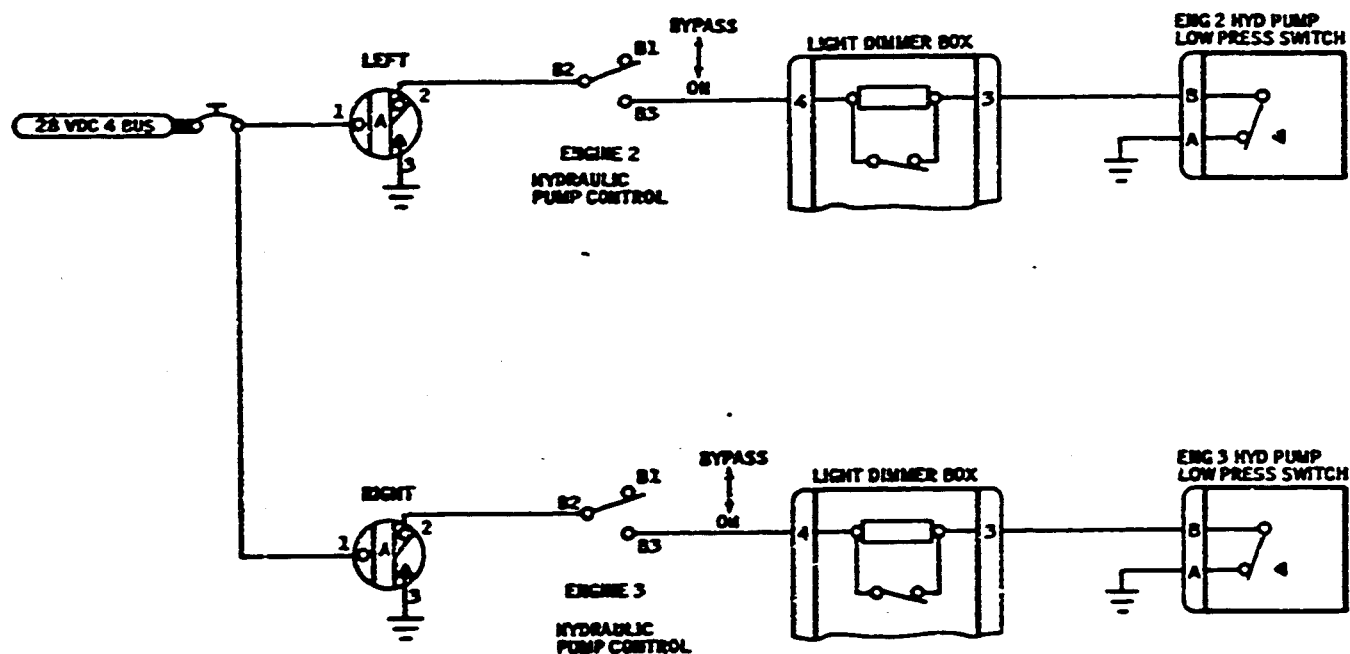

NA2-1389

Engine-Driven Hydraulic Pump Low Pressure  
Indicating Light System -- Schematic  
Figure 7

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

INDICATING - DESCRIPTION AND OPERATION

1. General

A. Description

- (1) Indicating circuits for the hydraulic power system provide indications in the flight compartment of the status of the hydraulic power system during operation. Five separate indications are provided; three (hydraulic fluid quantity, temperature, and pressure) are presented on indicating gages and two (hydraulic fluid overtemperature and emergency reservoir fluid level) are presented by indicating lights.

2. Hydraulic Fluid Quantity Indicating System (See Figure 1.)



- A. The hydraulic fluid quantity indicating system consists of a ratiometer-type indicator, a tank unit (transmitter) bolted to an external flanged adapter on the reservoir, and interconnecting wiring. Changes in the fluid level in the hydraulic system reservoir are followed by a float. The motion of the float is transmitted by means of a linkage arrangement, to the contact arm (wiper arm) of a potentiometer inside of the head of the transmitter. The potentiometer is wired to the indicator. The indicator consists of a rotor surrounded by three electromagnets. As the potentiometer contact arm moves, the indicator rotor is positioned accordingly. The indicator pointer is attached directly to the rotor and thus shows liquid quantity. The indicator is marked hydraulic oil quantity.
- B. When the hydraulic reservoir is full, the fluid quantity indicator in the flight compartment pegs at a point equivalent to 11.5 US gallons (9.56 Imperial gallons, 43.52 liters). There are 1.4 US gallons (1.16 Imperial gallons, 5.29 liters) in the reservoir not recorded; as a result, the indicator does not move until this amount of fluid is depleted.
- C. In operation, the voltage across E1 is constant. The position of the contact arm (wiper arm) in the transmitter determines the voltage across E2 and E3. When the contact arm in the transmitter is moved in the R+ direction, the voltage across coil E2 is increased while the voltage across E3 is decreased. When the contact arm is moved in the R- direction, the opposite effect takes place. From these voltages, magnetic flux is produced in each coil proportional to the voltage drop across the coil. The electrical circuit causes the resultant of the three coil fluxes to rotate in a clockwise direction, as the contact arm is moved toward the R- position. The permanent magnet (M) reacts with the resultant flux, producing a torque which causes the magnet to rotate and become magnetically aligned with the resultant coil flux. Moderate supply voltage variation does not affect the positioning of the pointer on the indicator scale. A voltage variation affects each of the coils proportionately, there by affecting only the magnitude of the resultant flux, but not the direction. When the system power is off, a magnet in the indicator pulls the pointer off the scale.

Jun 15/67

Printed in U.S.A.

29-30-0  
CODE 3  
Page 1

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

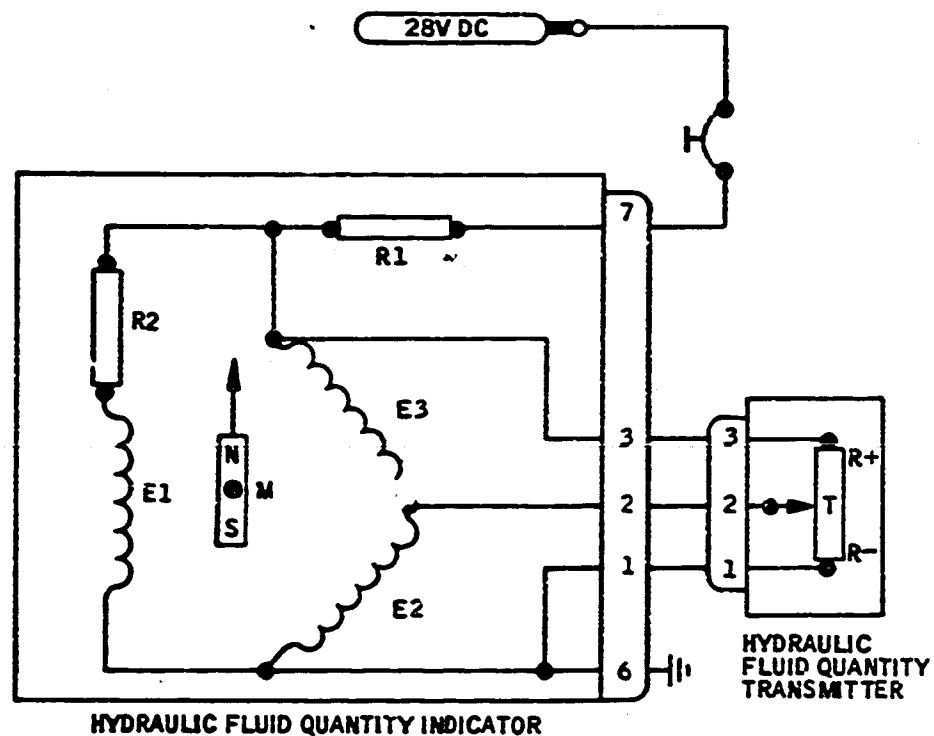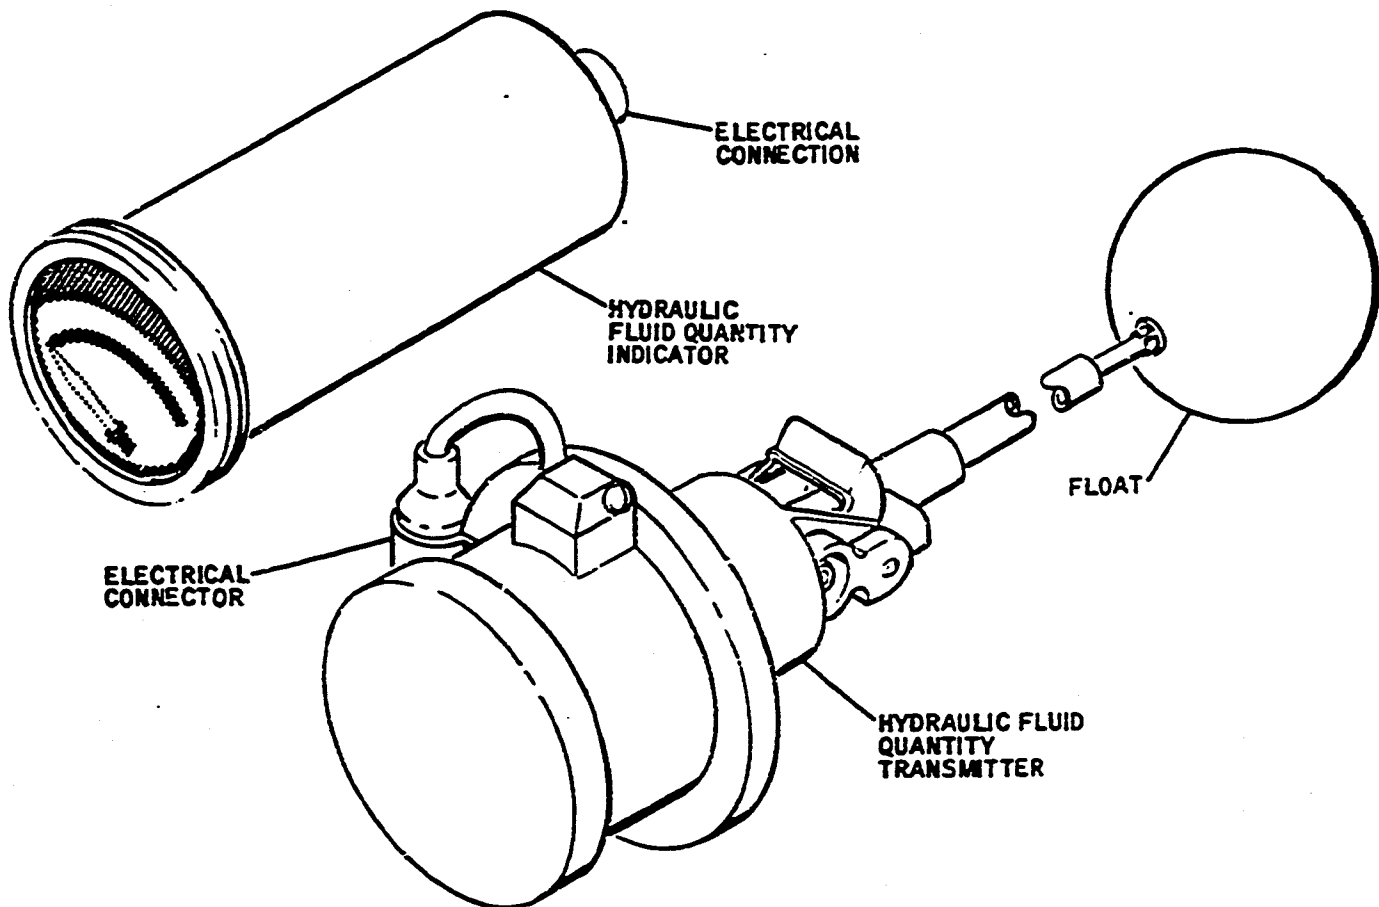

Hydraulic Fluid Quantity Indicating  
 System -- Schematic  
 Figure 1

HA2-151

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

3. Hydraulic Fluid Temperature Indicating System (See Figure 2.)

- A. The hydraulic fluid temperature indicating system is the ratiometer-type which provides an indication of hydraulic fluid temperature in the reservoir. The system consists of a temperature bulb, installed in the reservoir, and an indicator in the flight compartment.
- B. The hydraulic fluid temperature indicator operates on the electrical bridge principle, with the temperature bulb forming one leg of the bridge circuit. The indicator armature has two coils turning in the air gap of permanent magnets. A large deflecting coil functions much the same as a galvanometer. A small restoring coil is connected in series with one leg of the bridge and opposes the motion of the deflecting coil. Three hairsprings connect the coils to the circuit; one is common to both coils. Two slide-wire potentiometers are provided; one adjusts calibration at center scale and the other expands or contracts the scale ends. When deenergized, a spring-operated device returns the pointer to a position below the scale arc. The indicator is calibrated from  $-50^{\circ}\text{C}$  to  $+150^{\circ}\text{C}$  ( $-58^{\circ}\text{F}$  to  $302^{\circ}\text{F}$ ). The temperature bulb has a range of  $-70^{\circ}\text{C}$  to  $+300^{\circ}\text{C}$  ( $-94^{\circ}\text{F}$  to  $572^{\circ}\text{F}$ ).

4. Hydraulic Fluid Pressure Indicating System (See Figure 3.)

- A. The hydraulic fluid pressure indicating system is the synchro-type and indicates the fluid pressure in the hydraulic power system. The system consists of an indicator, located in the flight compartment, and a transmitter. The transmitter is located in the upper right side of the nose-wheel well and is connected by tubing to the hydraulic system pressure lines.
- B. The hydraulic fluid pressure indicator consists of a pointer mounted on the shaft of a synchro repeater and is contained within a nonhermetically sealed aluminum case. The indicator is electrically connected to a 28-vac, 400-cycle power source and to a remote, synchro-type pressure transmitter. The indicator is internally lighted by a 5.4-volt lamp bulb.
- C. The stator and rotor of the synchro repeater are electrically connected in parallel to the stator and rotor of the remote pressure transmitter. When both units are energized from the same source, the repeater rotor assumes an identical position to that of the transmitter rotor, which is positioned by action of hydraulic pressure. Thus the indicator indicates the pressure on the dial which is calibrated in psig from 0 to 4 times 1000. If the system electrical power fails, the pointer tends to remain at the last indicated position. A direct-reading gage, located on the hydraulic system accumulator in the left main gear wheel well, also indicates the hydraulic system pressure.




5. Hydraulic Fluid Overtemperature Indicating Light System (See Figure 4.)

- A. The hydraulic fluid overtemperature indicating light system provides a visual indication of overheated hydraulic fluid in the reservoir. The

Jun 15/67

29-30-0  
CODE 3  
Page 3

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

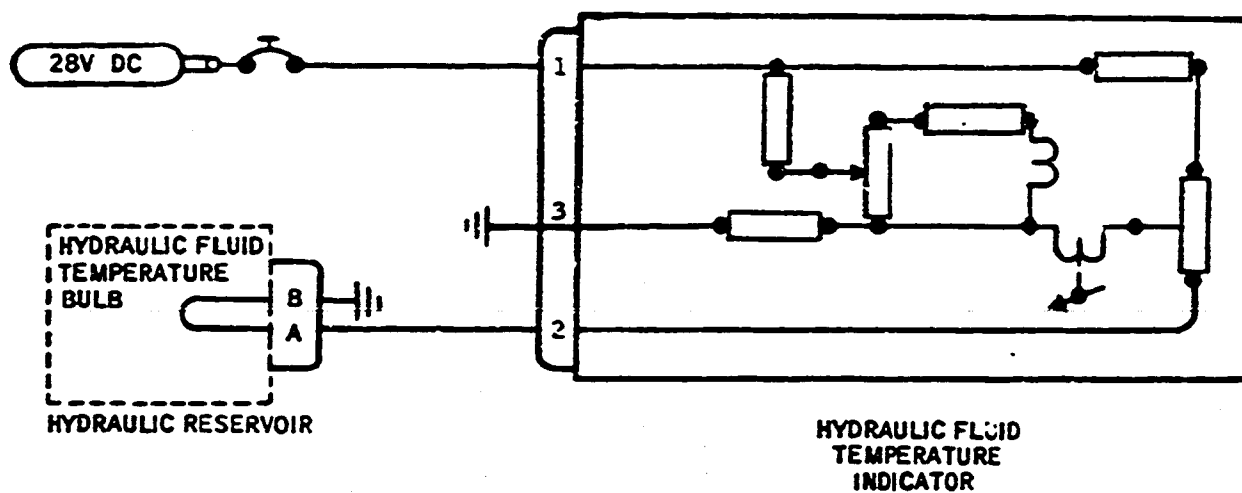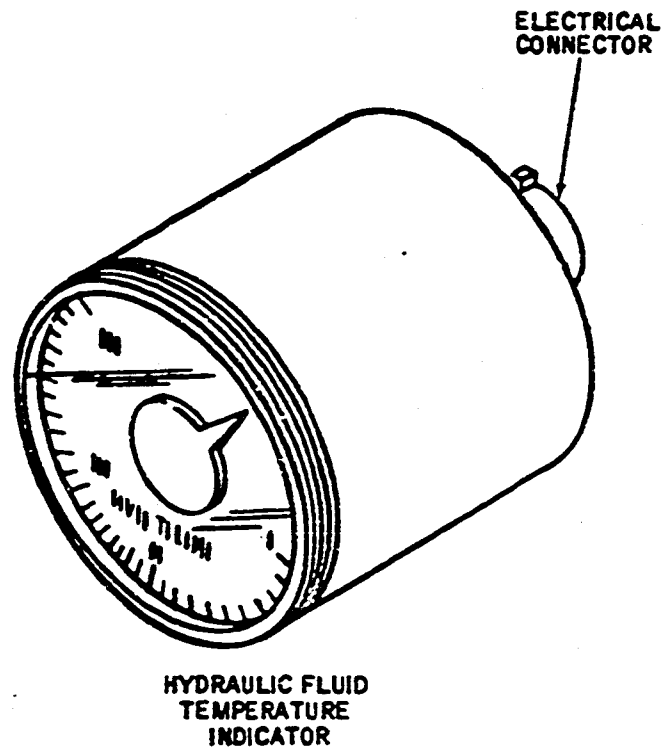
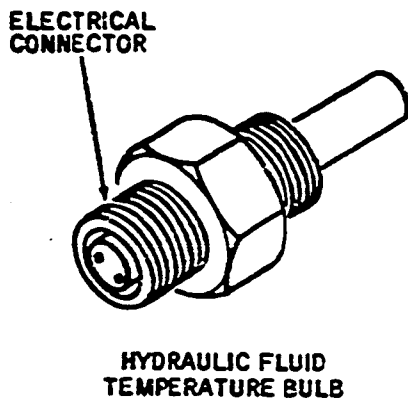


HA2-152

Hydraulic Fluid Temperature Indicating  
 System -- Schematic  
 Figure 2



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

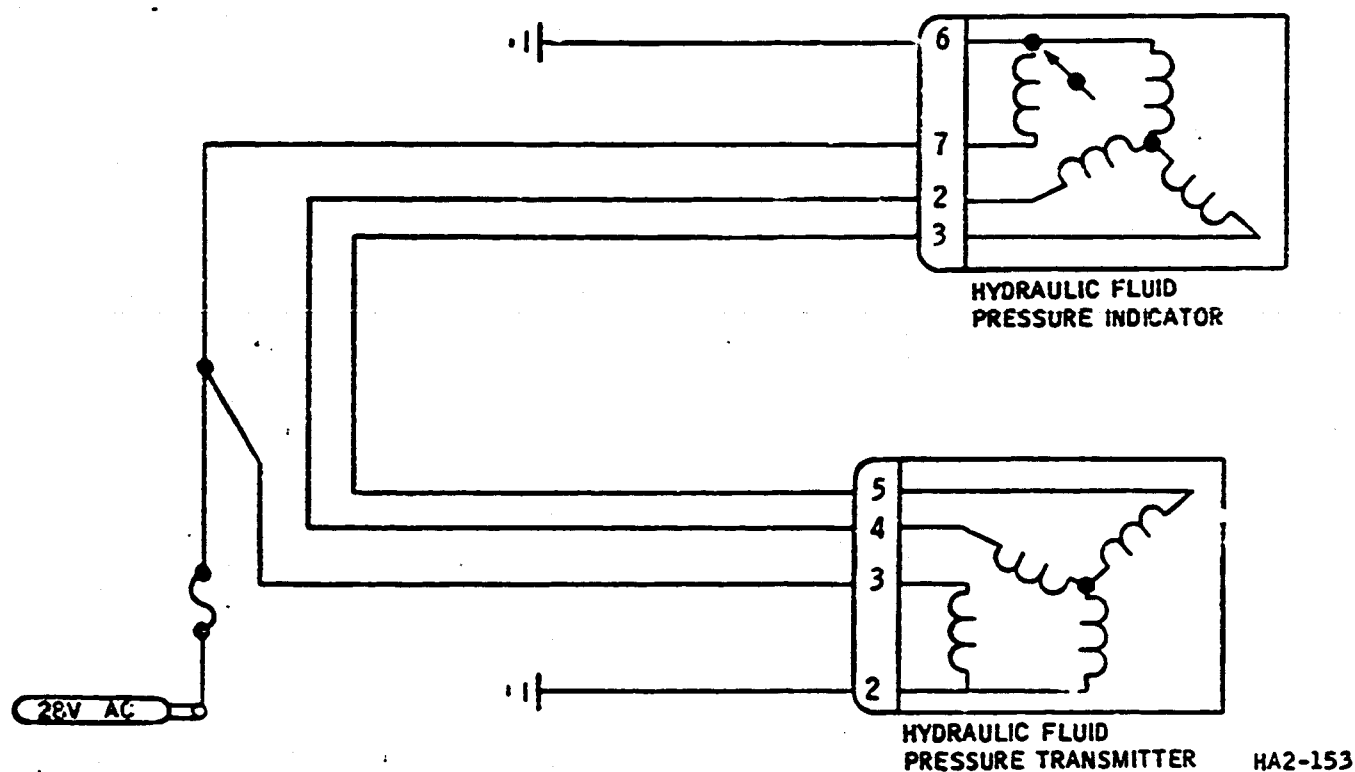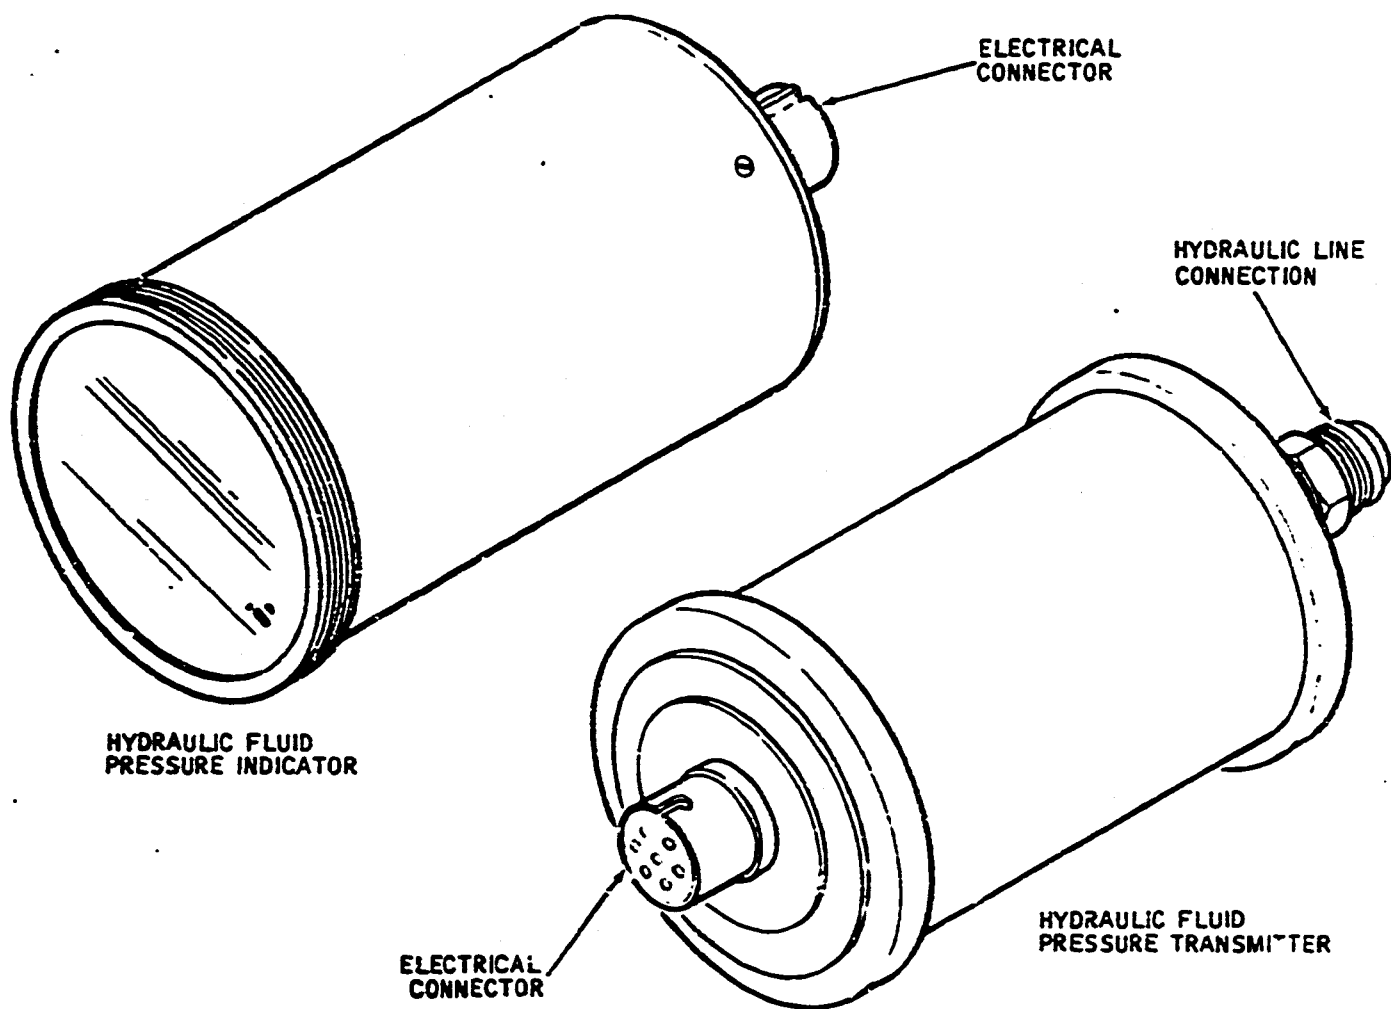

Hydraulic Fluid Pressure Indicating  
 System -- Schematic  
 Figure 3


HA2-153

Jun 15/67

Printed in U.S.A.


29-30-0  
 CODE 3  
 Page 5

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

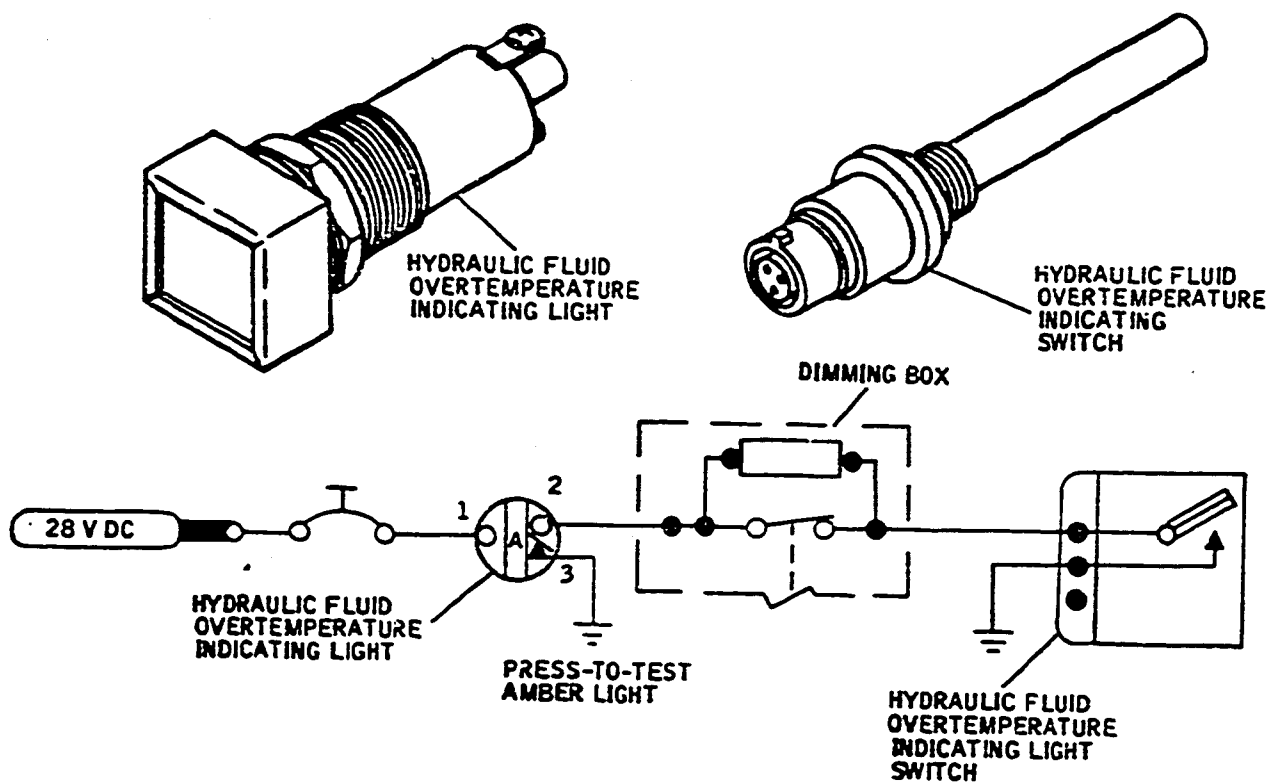

HA2-176

Hydraulic Fluid Overtemperature Indicating  
 Light System -- Schematic  
 Figure 4

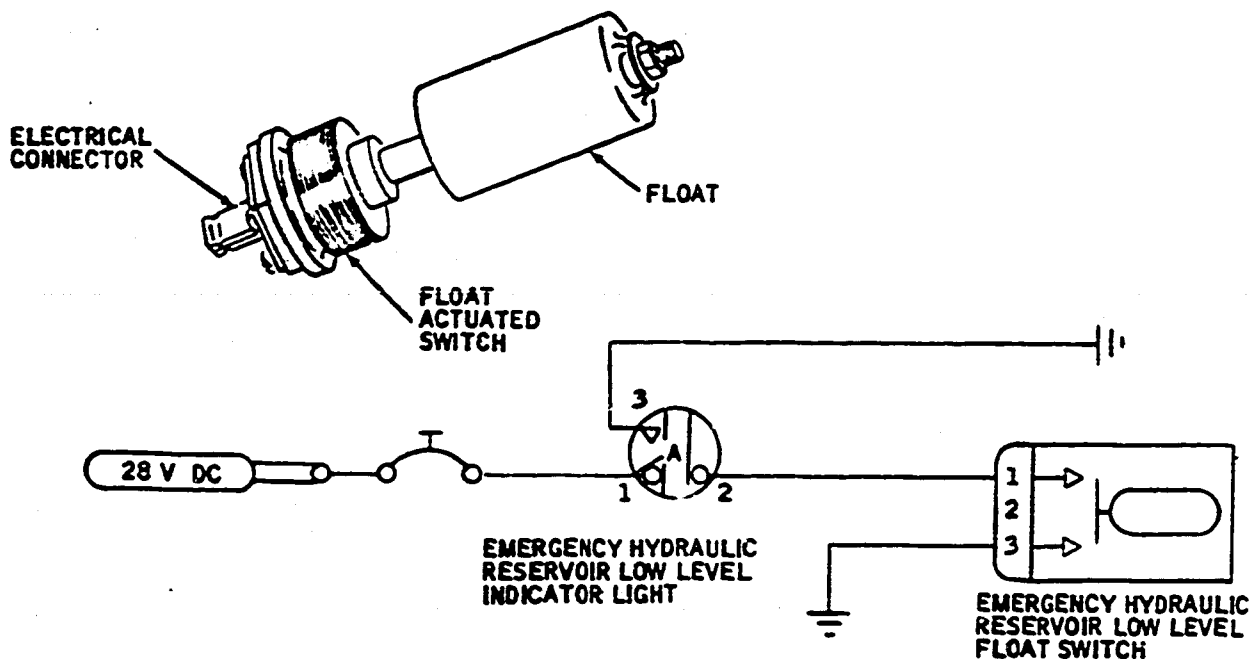

HA2-177

Emergency Hydraulic Reservoir Low Level  
 Indicating System -- Schematic  
 Figure 5

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

system consists of a dimmable, amber, press-to-test indicator light (see Chapter 31 for location), and a temperature-sensitive switch installed in the hydraulic reservoir. The placard on the cap of the indicator light reads hydraulic oil temperature. If the hydraulic fluid reaches an over-temperature condition, the temperature-sensitive switch will cause the indicator light to come on. The switch closes when the temperature reaches 71°C to 82°C (160°F to 180°F).

6. Emergency Hydraulic Reservoir Low Level Indicating Light System  
(See Figure 5.)

- A. The emergency hydraulic reservoir low level indicating light system provides a visual indication in the flight compartment if the fluid level in the auxiliary hydraulic pump alternate reservoir drops to approximately 0.8 US gallons (0.666 Imperial gallons, 3.15 liters). The system consists of a float-actuated, 2-position switch located on the alternate reservoir, an indicator light located in the flight compartment, and the wiring required to connect the system. When fluid level in the alternate reservoir drops below 0.8 US gallons, the float lowers, closing the switch, and the indicator light comes on. When the fluid level rises above 0.8 US gallons, the float rises, opening the switch, and the light goes out.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

INDICATING - DESCRIPTION AND OPERATION

1. General



A. Description

- (1) Indicating circuits for the hydraulic power system provide indications in the flight compartment of the status of the hydraulic power system during operation. Five separate indications are provided; three (hydraulic fluid quantity, temperature, and pressure) are presented on indicating gages and four (hydraulic reservoir low pressure, hydraulic fluid overtemperature, emergency reservoir fluid level, and hydraulic pump low pressure) are presented by indicating lights.

2. Hydraulic Fluid Quantity Indicating System (See Figure 1.)

- A. The hydraulic fluid quantity indicating system consists of a ratiometer-type indicator, a tank unit (transmitter) bolted to an external flanged adapter on the reservoir, a hydraulic reservoir low level indicating light switch, and interconnecting wiring. Changes in the fluid level in the hydraulic system reservoir are followed by a float. The motion of the float is transmitted by means of a linkage arrangement, to the contact arm (wiper arm) of a potentiometer inside of the head of the transmitter. The potentiometer is wired to the indicator. The indicator consists of a rotor surrounded by three electromagnets. As the potentiometer contact arm moves, the indicator rotor is positioned accordingly. The indicator pointer is attached directly to the rotor and thus shows liquid quantity. The indicator is marked hydraulic oil quantity.
- B. When the hydraulic reservoir is full, the fluid quantity indicator in the flight compartment pegs at a point equivalent to 11.5 US gallons (9.56 Imperial gallons, 43.52 liters). There are 1.4 US gallons (1.16 Imperial gallons, 5.29 liters) in the reservoir not recorded; as a result, the indicator does not move until this amount of fluid is depleted.
- C. In operation, the voltage across E1 is constant. The position of the contact arm (wiper arm) in the transmitter determines the voltage across E2 and E3. When the contact arm in the transmitter is moved in the R+ direction, the voltage across coil E2 is increased while the voltage across E3 is decreased. When the contact arm is moved in the R- direction, the opposite effect takes place. From these voltages, magnetic flux is produced in each coil proportional to the voltage drop across the coil. The electrical circuit causes the resultant of the three coil fluxes to rotate in a clockwise direction, as the contact arm is moved toward the R- position. The permanent magnet (M) reacts with the resultant flux, producing a torque which causes the magnet to rotate and become magnetically aligned with the resultant coil flux. Moderate supply voltage variation does not affect the positioning of the pointer on the indicator scale. A voltage variation affects each of the coils proportionately, therefore

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

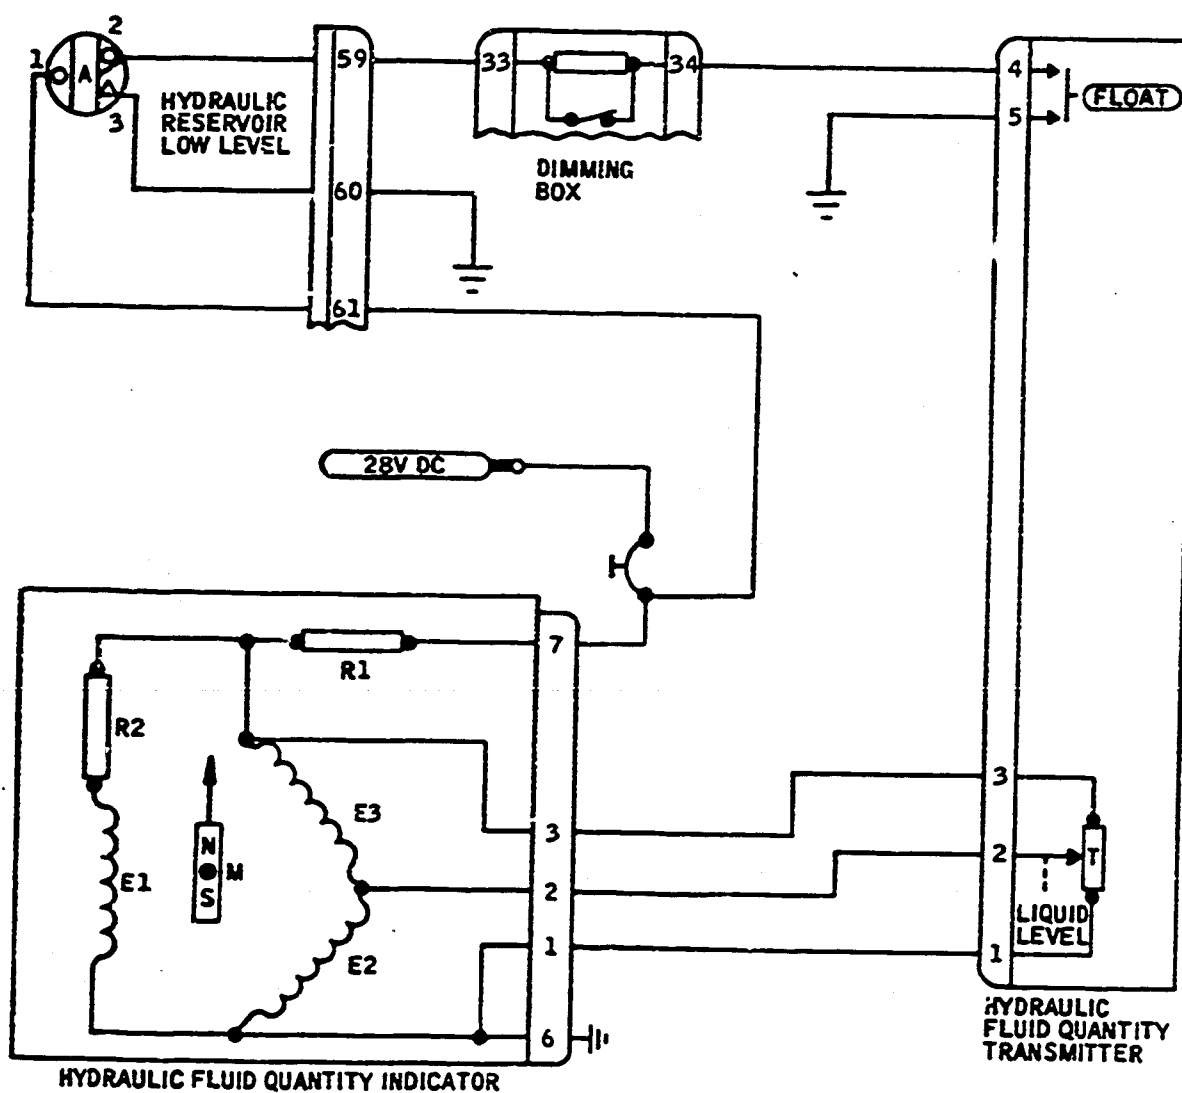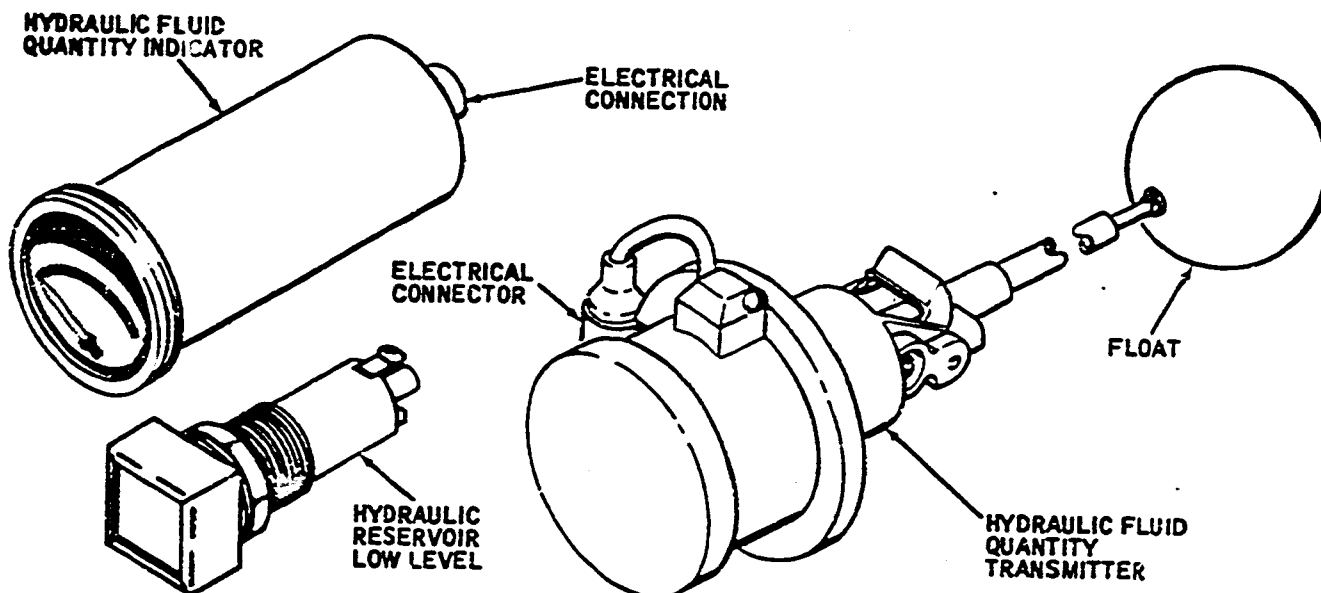

Hydraulic Fluid Quantity Indicating  
 System -- Schematic  
 Figure 1

HA2-4082

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

affecting only the magnitude of the resultant flux, but not the direction. When the system power is off, a magnet in the indicator pulls the pointer off the scale.

3. Hydraulic Fluid Temperature Indicating System (See Figure 2.)

- A. The hydraulic fluid temperature indicating system is the ratiometer-type which provides an indication of hydraulic fluid temperature in the reservoir. The system consists of a temperature bulb, installed in the reservoir, and an indicator in the flight compartment.
- B. The hydraulic fluid temperature indicator operates on the electrical bridge principle, with the temperature bulb forming one leg of the bridge circuit. The indicator armature has two coils turning in the air gap of permanent magnets. A large deflecting coil functions much the same as a galvanometer. A small restoring coil is connected in series with one leg of the bridge and opposes the motion of the deflecting coil. Three hairsprings connect the coils to the circuit; one is common to both coils. Two slide-wire potentiometers are provided; one adjusts calibration at center scale and the other expands or contracts the scale ends. When deenergized, a spring-operated device returns the pointer to a position below the scale arc. The indicator is calibrated from  $-50^{\circ}\text{C}$  to  $+150^{\circ}\text{C}$  ( $-58^{\circ}\text{F}$  to  $302^{\circ}\text{F}$ ). The temperature bulb has a range of  $-70^{\circ}\text{C}$  to  $+300^{\circ}\text{C}$  ( $-94^{\circ}\text{F}$  to  $572^{\circ}\text{F}$ ).

4. Hydraulic Fluid Pressure Indicating System (See Figure 3.)



- A. The hydraulic fluid pressure indicating system is the synchro-type and indicates the fluid pressure in the hydraulic power system. The system consists of an indicator, located in the flight compartment, and a transmitter. The transmitter is located in the upper right side of the nose-wheel well and is connected by tubing to the hydraulic system pressure lines.
- B. The hydraulic fluid pressure indicator consists of a pointer mounted on the shaft of a synchro repeater and is contained within a nonhermetically sealed aluminum case. The indicator is electrically connected to a 28-vac, 400-cycle power source and to a remote, synchro-type pressure transmitter. The indicator is internally lighted by a 5.4-volt lamp bulb.
- C. The stator and rotor of the synchro repeater are electrically connected in parallel to the stator and rotor of the remote pressure transmitter. When both units are energized from the same source, the repeater rotor assumes an identical position to that of the transmitter rotor, which is positioned by action of hydraulic pressure. Thus the indicator indicates the pressure on the dial which is calibrated in psig from 0 to 4 times 1000. If the system electrical power fails, the pointer tends to remain at the last indicated position. A direct-reading gage, located on the hydraulic system accumulator in the left main gear wheel well, also indicates the hydraulic system pressure.

Jun 15/67

Printed in U.S.A.

29-30-0  
CODE 4  
Page 3



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

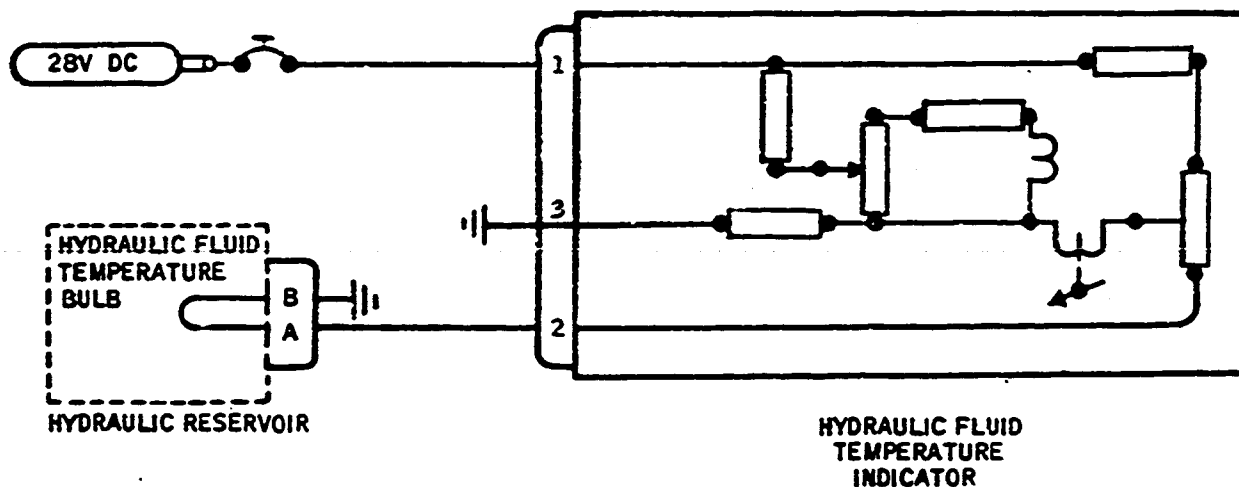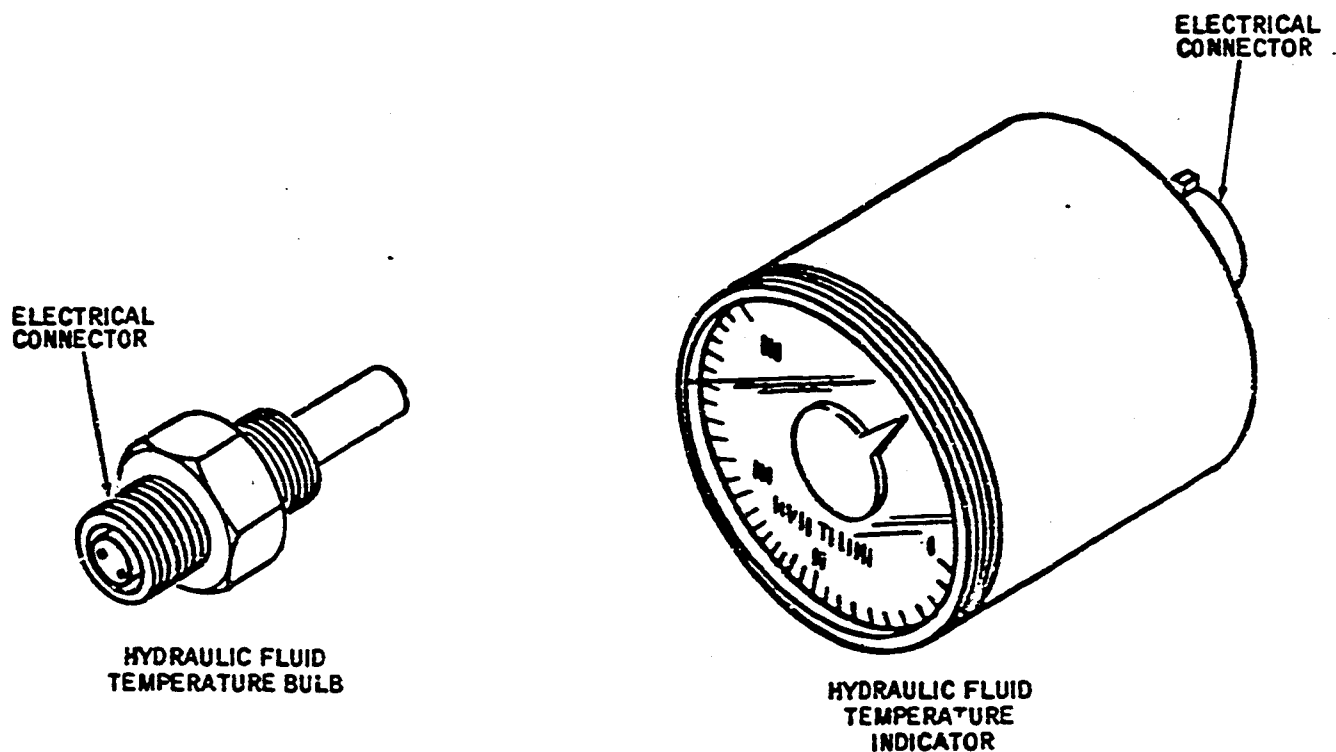

HA2-152

Hydraulic Fluid Temperature Indicating  
 System -- Schematic  
 Figure 2

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

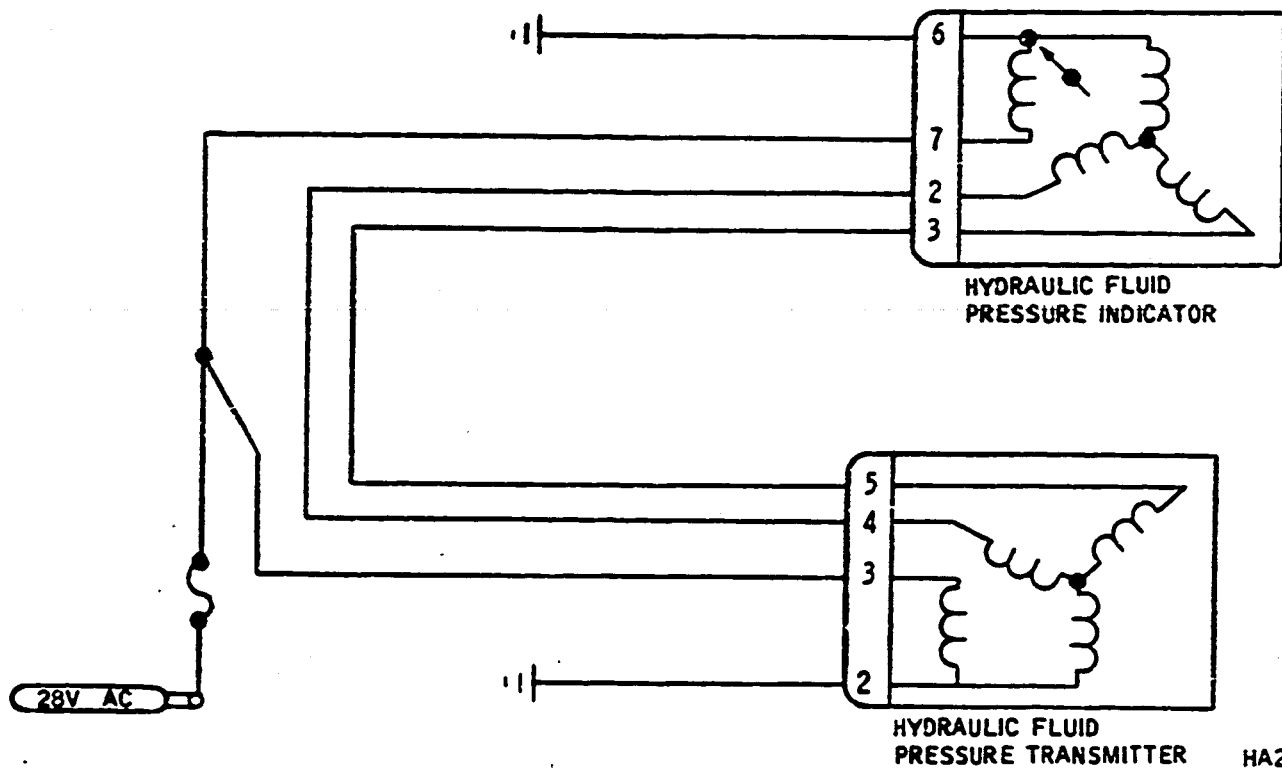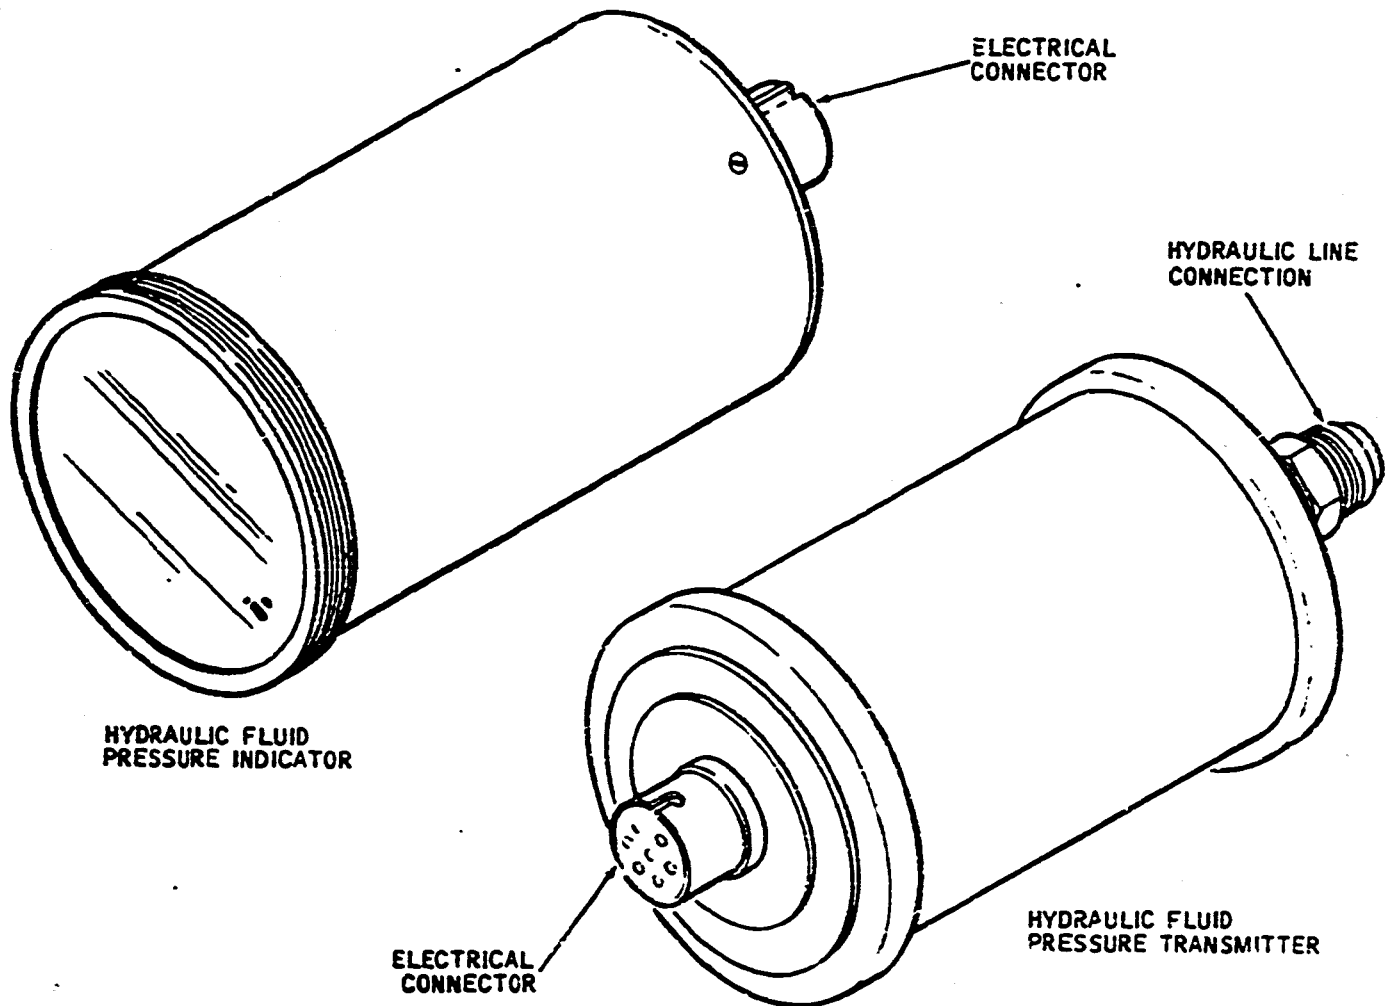

Hydraulic Fluid Pressure Indicating  
 System -- Schematic  
 Figure 3

HA2-153

Jun 15/67

Printed in U.S.A.

29-30-0  
 CODE 4  
 Page 5



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

5. Hydraulic Reservoir Low-Pressure Indicating Light System (See Figure 4.)

- A. The hydraulic reservoir low-pressure indicating light system provides a visual indication of below normal air pressure in the hydraulic reservoir. The system consists of a pressure-actuated switch located on the hydraulic reservoir, a light-dimming switch and resistor, and a press-to-test amber indicator light in the flight compartment. The hydraulic reservoir low-pressure indicator light comes on when reservoir air pressure drops below 25 ( $\pm 2$ ) psi and goes off when the pressure reaches 30 ( $\pm 2$ ) psi.

6. Hydraulic Fluid Overtemperature Indicating Light System (See Figure 5.)

- A. The hydraulic fluid overtemperature indicating light system provides a visual indication of overheated hydraulic fluid in the reservoir. The system consists of a dimmable, amber, press-to-test indicator light (see Chapter 31 for location), and a temperature-sensitive switch installed in the hydraulic reservoir. The placard on the cap of the indicator light reads hydraulic oil temperature. If the hydraulic fluid reaches an overtemperature condition, the temperature-sensitive switch will cause the indicator light to come on. The switch closes when the temperature reaches 71°C to 82°C (160°F to 180°C).


7. Emergency Hydraulic Reservoir Low Level Indicating Light System  
(See Figure 6.)

- A. The emergency hydraulic reservoir low level indicating light system provides a visual indication in the flight compartment if the fluid level in the auxiliary hydraulic pump alternate reservoir drops to approximately 0.8 US gallons (0.666 Imperial gallons, 3.15 liters). The system consists of a float-actuated, 2-position switch located on the alternate reservoir, an indicator light located in the flight compartment, and the wiring required to connect the system. When fluid level in the alternate reservoir drops below 0.8 US gallons, the float lowers, closing the switch, and the indicator light comes on. When the fluid level rises above 0.8 US gallons, the float rises, opening the switch, and the light goes out.


8. Engine-Driven Hydraulic Pump Low Pressure Indicating Light System  
(See Figure 7.)

- A. The engine-driven hydraulic pump low-pressure indicating light system provides a visual indication of low-pressure at the output of either engine-driven pump. The system consists of two pressure-actuated switches, indicating light dimming boxes, and two press-to-test amber indicating lights. One switch is located at each engine-driven pump. The indicating lights are located in the flight compartment. When either of the engine-driven hydraulic pump bypass switches is in the on position, the corresponding engine-driven pump indicating light comes on if the output pressure of the corresponding pump drops below 1500 ( $\pm 100$ ) psig.


DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

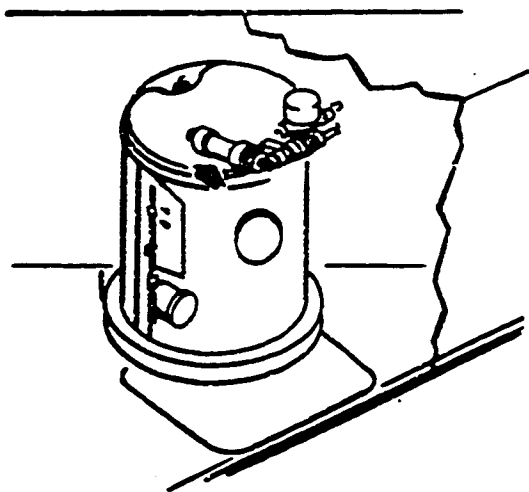

LEFT WING ROOT  
ACCESS DOOR

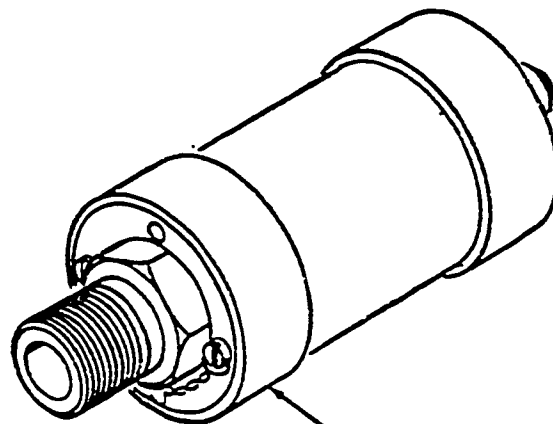

HYDRAULIC RESERVOIR  
LOW PRESSURE SWITCH

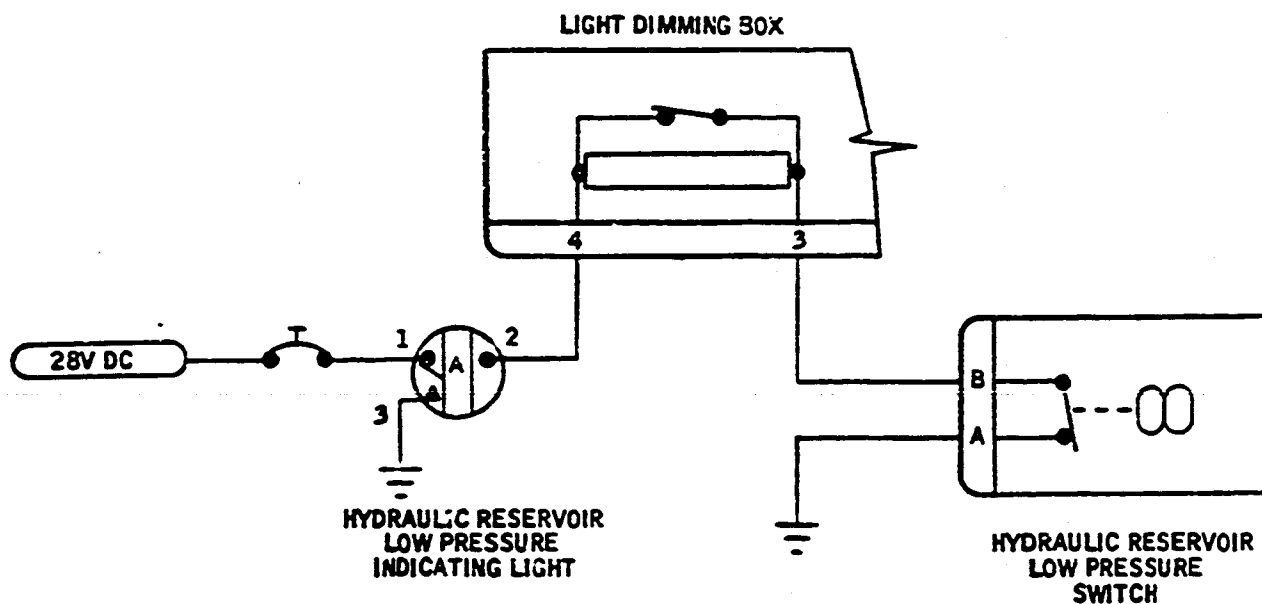

Hydraulic Reservoir Low-Pressure Indicating  
 Light System -- Schematic  
 Figure 4


HA2-202

Jun 15/67


Printed in U.S.A.

29-30-0  
 CODE 4  
 Page 7

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

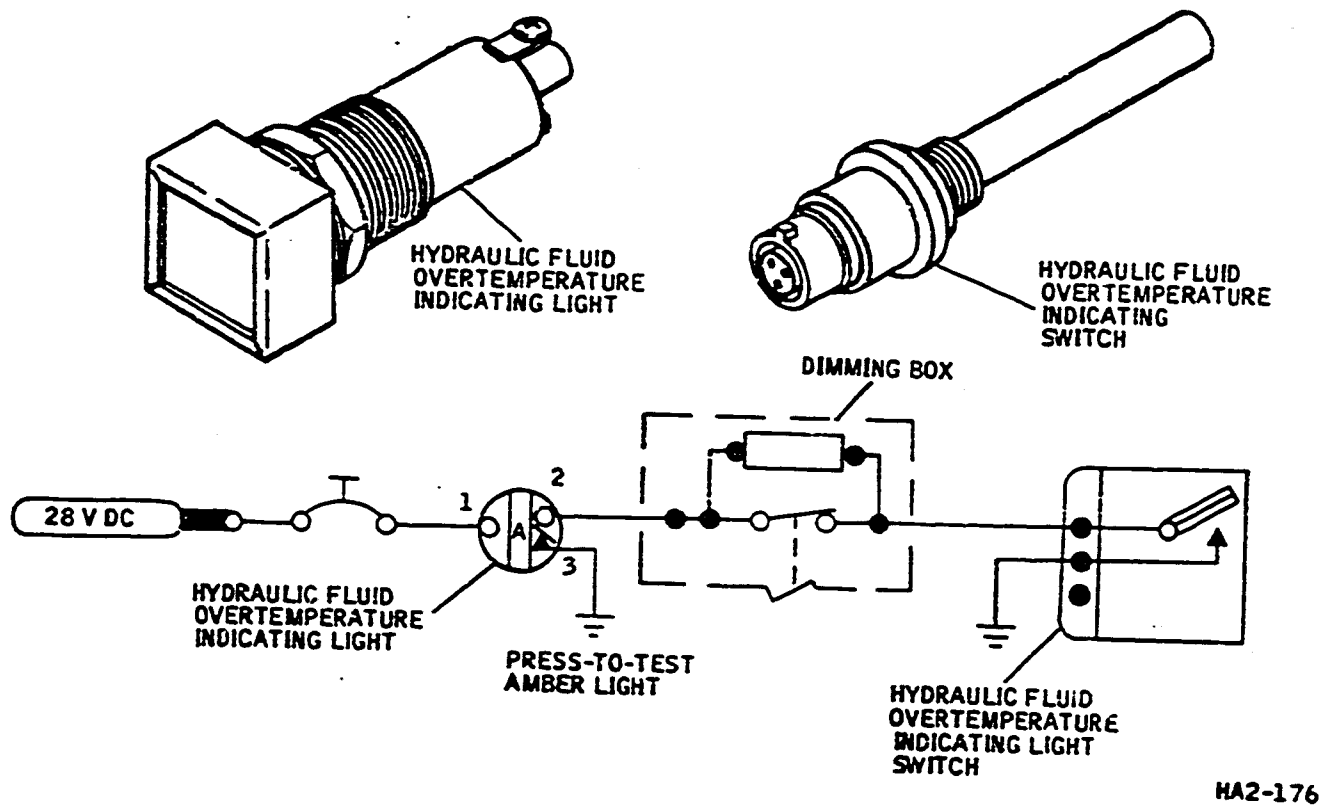


Hydraulic Fluid Overtemperature Indicating  
 Light System -- Schematic  
 Figure 5

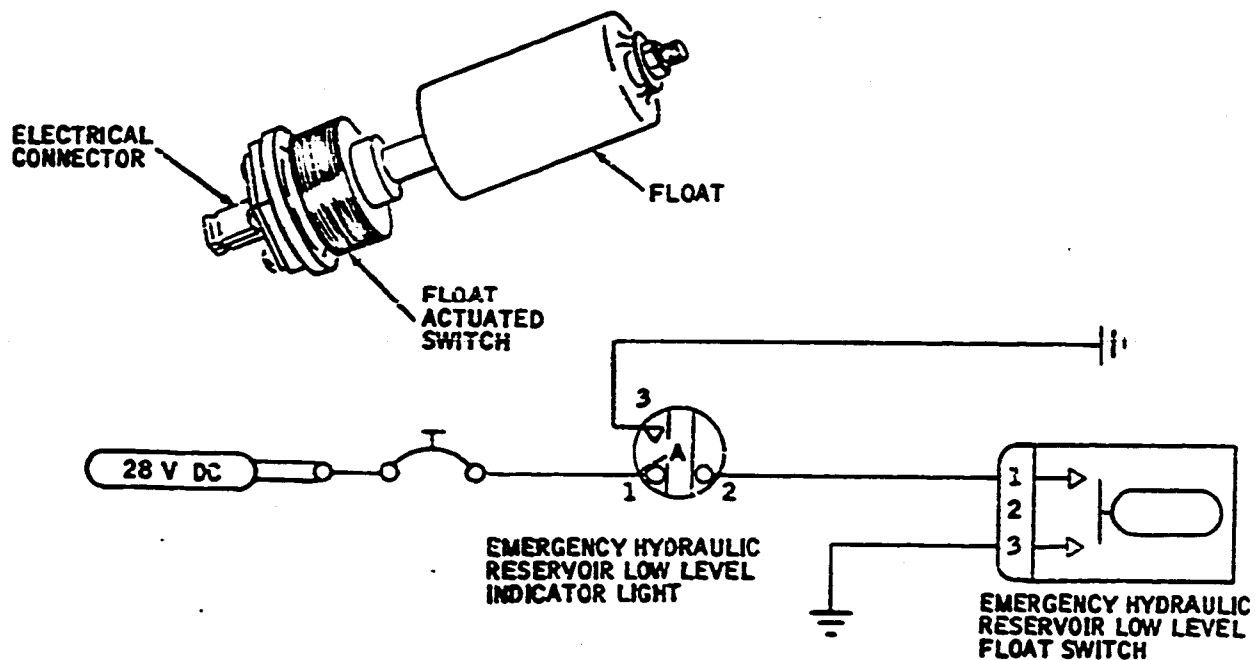

Emergency Hydraulic Reservoir Low Level  
 Indicating System -- Schematic  
 Figure 6

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

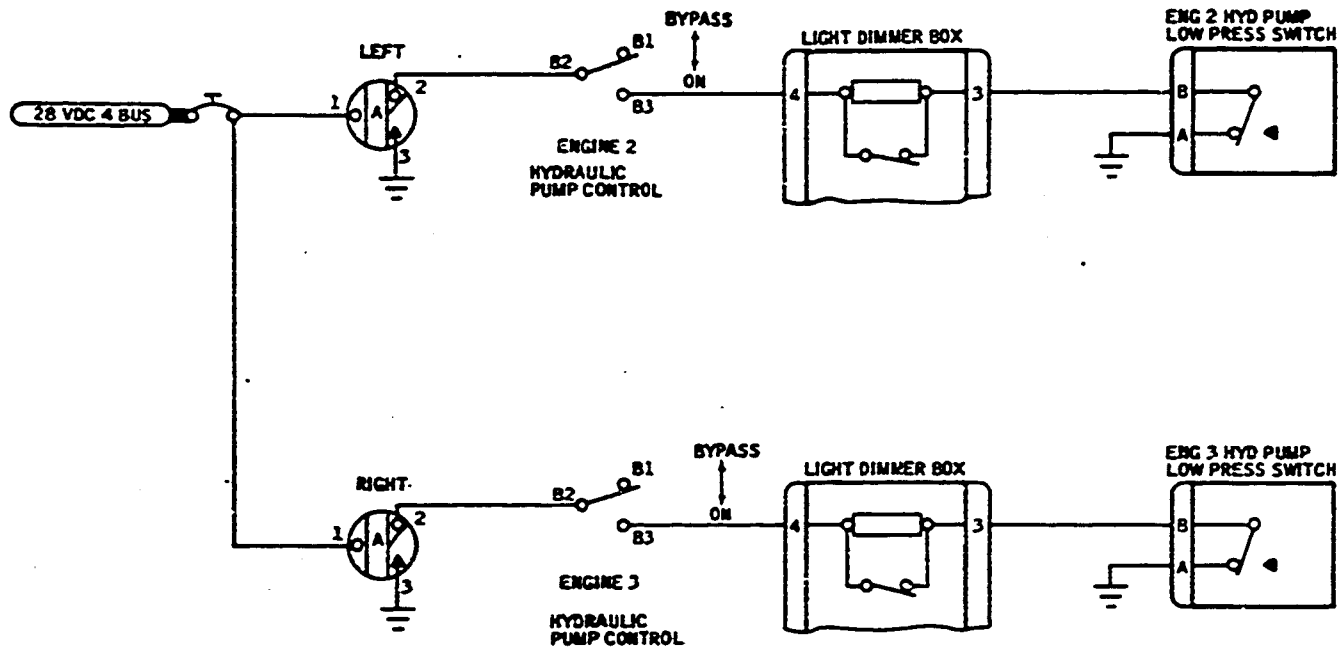

HA2-1389

Engine-Driven Hydraulic Pump Low Pressure  
 Indicating Light System -- Schematic  
 Figure 7

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

INDICATING - DESCRIPTION AND OPERATION

1. General

A. Description

- (1) Indicating circuits for the hydraulic power system provide indications in the flight compartment of the status of the hydraulic power system during operation. Five separate indications are provided; three (hydraulic fluid quantity, temperature, and pressure) are presented on indicating gages and three (hydraulic reservoir low pressure, hydraulic fluid overtemperature, and emergency reservoir fluid level) are presented by indicating lights.

2. Hydraulic Fluid Quantity Indicating System (See Figure 1.)



- A. The hydraulic fluid quantity indicating system consists of a ratiometer-type indicator, a tank unit (transmitter) bolted to an external flanged adapter on the reservoir, a hydraulic reservoir low level indicating light switch, and interconnecting wiring. Changes in the fluid level in the hydraulic system reservoir are followed by a float. The motion of the float is transmitted by means of a linkage arrangement, to the contact arm (wiper arm) of a potentiometer inside of the head of the transmitter. The potentiometer is wired to the indicator. The indicator consists of a rotor surrounded by three electromagnets. As the potentiometer contact arm moves, the rotor is positioned accordingly. The indicator pointer is attached directly to the rotor and thus shows liquid quantity. The indicator is marked hydraulic oil quantity.
- B. When the hydraulic reservoir is full, the fluid quantity indicator in the flight compartment pegs at a point equivalent to 11.5 US gallons (9.56 Imperial gallons, 43.52 liters). There are 1.4 US gallons (1.16 Imperial gallons, 5.29 liters) in the reservoir not recorded; as a result, the indicator does not move until this amount of fluid is depleted.
- C. In operation, the voltage across E1 is constant. The position of the contact arm (wiper arm) in the transmitter determines the voltage across E2 and E3. When the contact arm in the transmitter is moved in the B+ direction, the voltage across coil E2 is increased while the voltage across E3 is decreased. When the contact arm is moved in the R- direction, the opposite effect takes place. From these voltages, magnetic flux is produced in each coil proportional to the voltage drop across the coil. The electrical circuit causes the resultant of the three coil fluxes to rotate in a clockwise direction, as the contact arm is moved toward the R- position. The permanent magnet (M) reacts with the resultant flux, producing a torque which causes the magnet to rotate and become magnetically aligned with the resultant coil flux. Moderate supply voltage variation does not affect the positioning of the pointer on the indicator scale. A voltage variation affects each of the coils proportionately, therefore

Jun 15/67

Printed in U.S.A.

29-30-0  
CODE 5  
Page 1

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

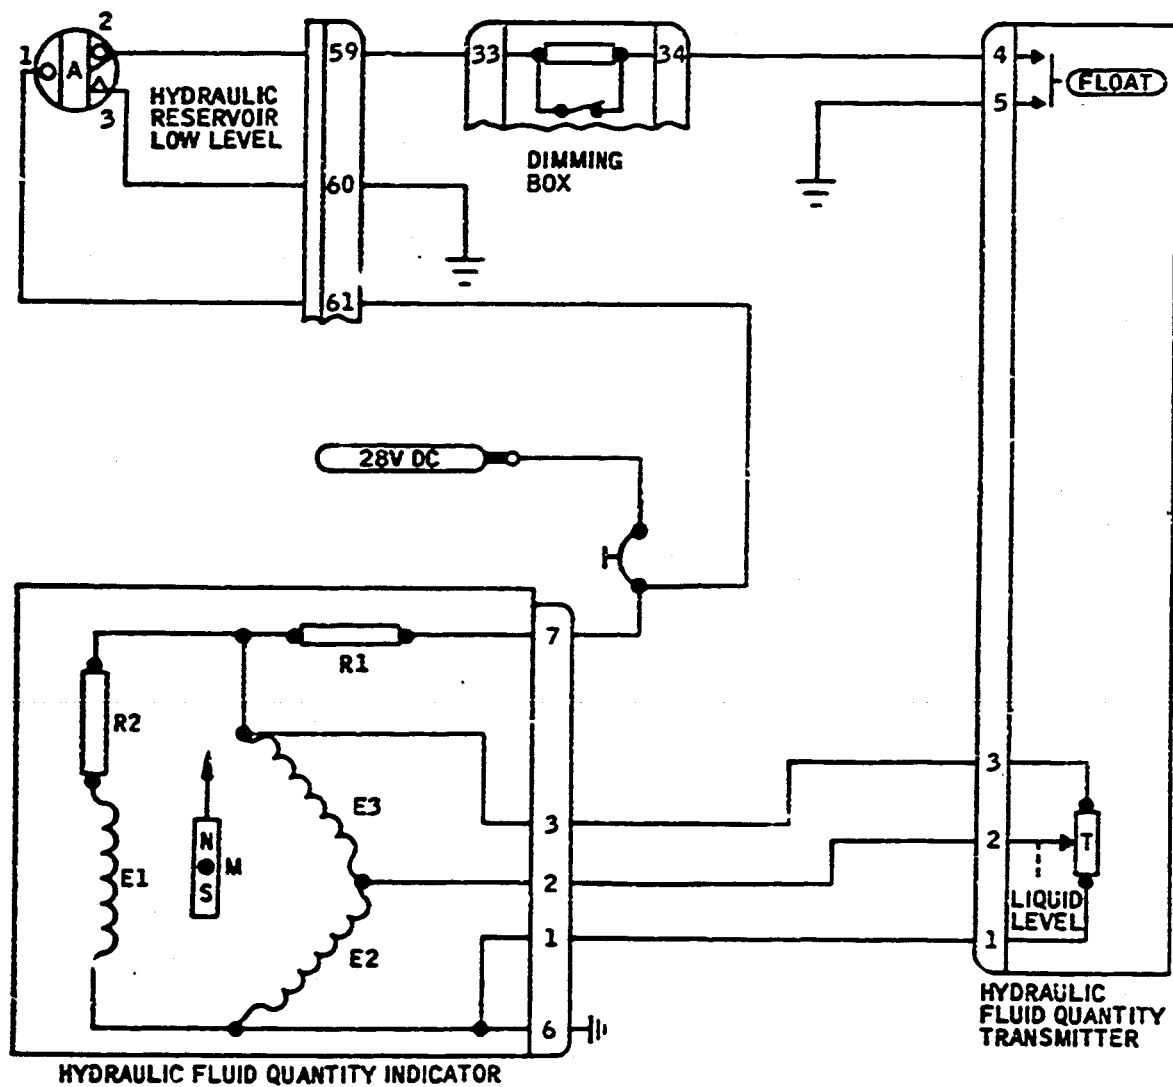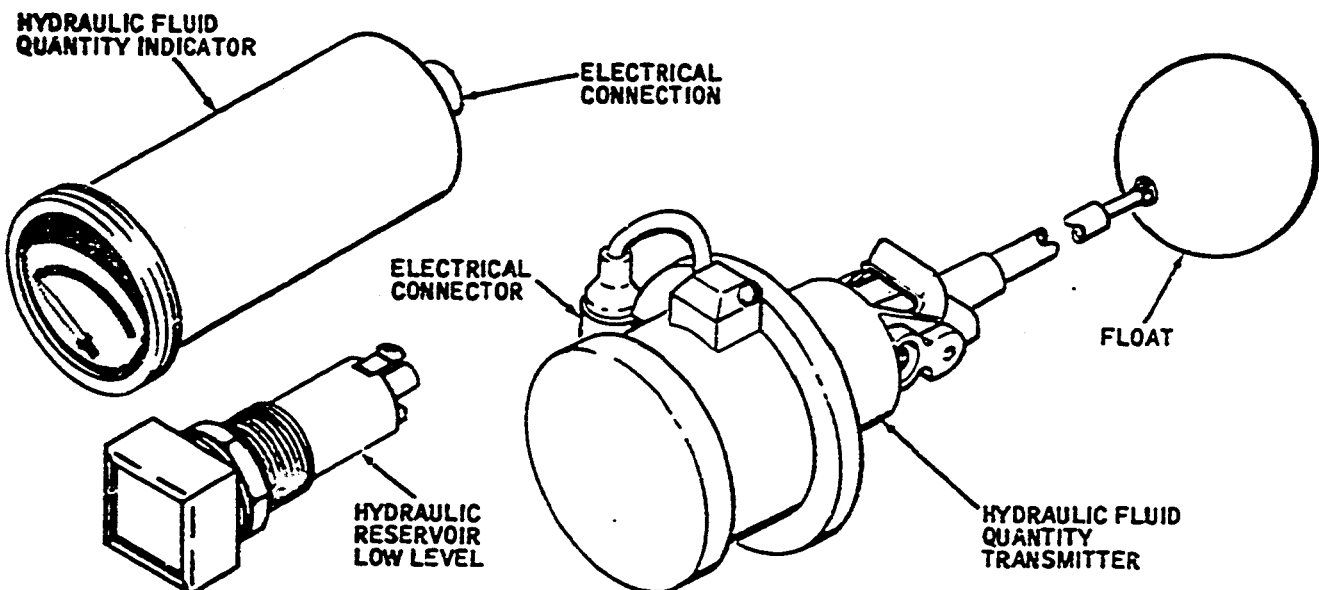

HA2-4082

Hydraulic Fluid Quantity Indicating  
 System -- Schematic  
 Figure 1

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

affecting only the magnitude of the resultant flux, but not the direction. When the system power is off, a magnet in the indicator pulls the pointer off the scale.



3. Hydraulic Fluid Temperature Indicating System (See Figure 2.)

- A. The hydraulic fluid temperature indicating system is the ratiometer-type which provides an indication of hydraulic fluid temperature in the reservoir. The system consists of a temperature bulb, installed in the reservoir, and an indicator in the flight compartment.
- B. The hydraulic fluid temperature indicator operates on the electrical bridge principle, with the temperature bulb forming one leg of the bridge circuit. The indicator armature has two coils turning in the air gap of permanent magnets. A large deflecting coil functions much the same as a galvanometer. A small restoring coil is connected in series with one leg of the bridge and opposes the motion of the deflecting coil. Three hairsprings connect the coils to the circuit; one is common to both coils. Two slide-wire potentiometers are provided; one adjusts calibration at center scale and the other expands or contracts the scale ends. When deenergized, a spring-operated device returns the pointer to a position below the scale arc. The indicator is calibrated from  $-50^{\circ}\text{C}$  to  $+150^{\circ}\text{C}$  ( $-58^{\circ}\text{F}$  to  $302^{\circ}\text{F}$ ). The temperature bulb has a range of  $-70^{\circ}\text{C}$  to  $+300^{\circ}\text{C}$  ( $-94^{\circ}\text{F}$  to  $572^{\circ}\text{F}$ ).

4. Hydraulic Fluid Pressure Indicating System (See Figure 3.)

- A. The hydraulic fluid pressure indicating system is the synchro-type and indicates the fluid pressure in the hydraulic power system. The system consists of an indicator, located in the flight compartment, and a transmitter. The transmitter is located in the upper right side of the nose-wheel well and is connected by tubing to the hydraulic system pressure lines.
- B. The hydraulic fluid pressure indicator consists of a pointer mounted on the shaft of a synchro repeater and is contained within a nonhermetically sealed aluminum case. The indicator is electrically connected to a 28-vac, 400-cycle power source and to a remote, synchro-type pressure transmitter. The indicator is internally lighted by a 5.4-volt lamp bulb.
- C. The stator and rotor of the synchro repeater are electrically connected in parallel to the stator and rotor of the remote pressure transmitter. When both units are energized from the same source, the repeater rotor assumes an identical position to that of the transmitter rotor, which is positioned by action of hydraulic pressure. Thus the indicator indicates the pressure on the dial which is calibrated in psig from 0 to 4 times 1000. If the system electrical power fails, the pointer tends to remain at the last indicated position. A direct-reading gage, located on the hydraulic system accumulator in the left main gear wheel well, also indicates the hydraulic system pressure.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

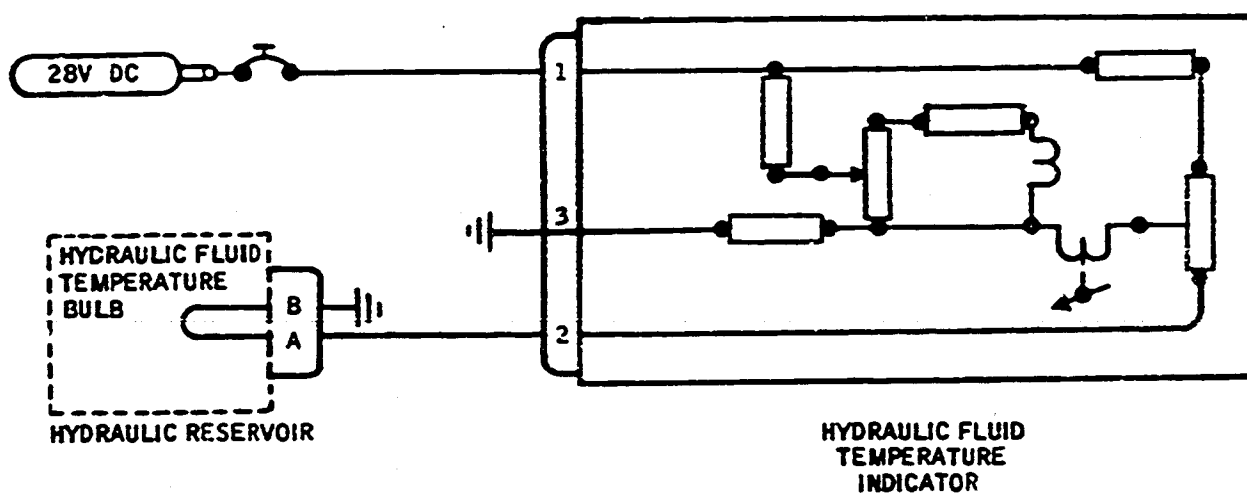
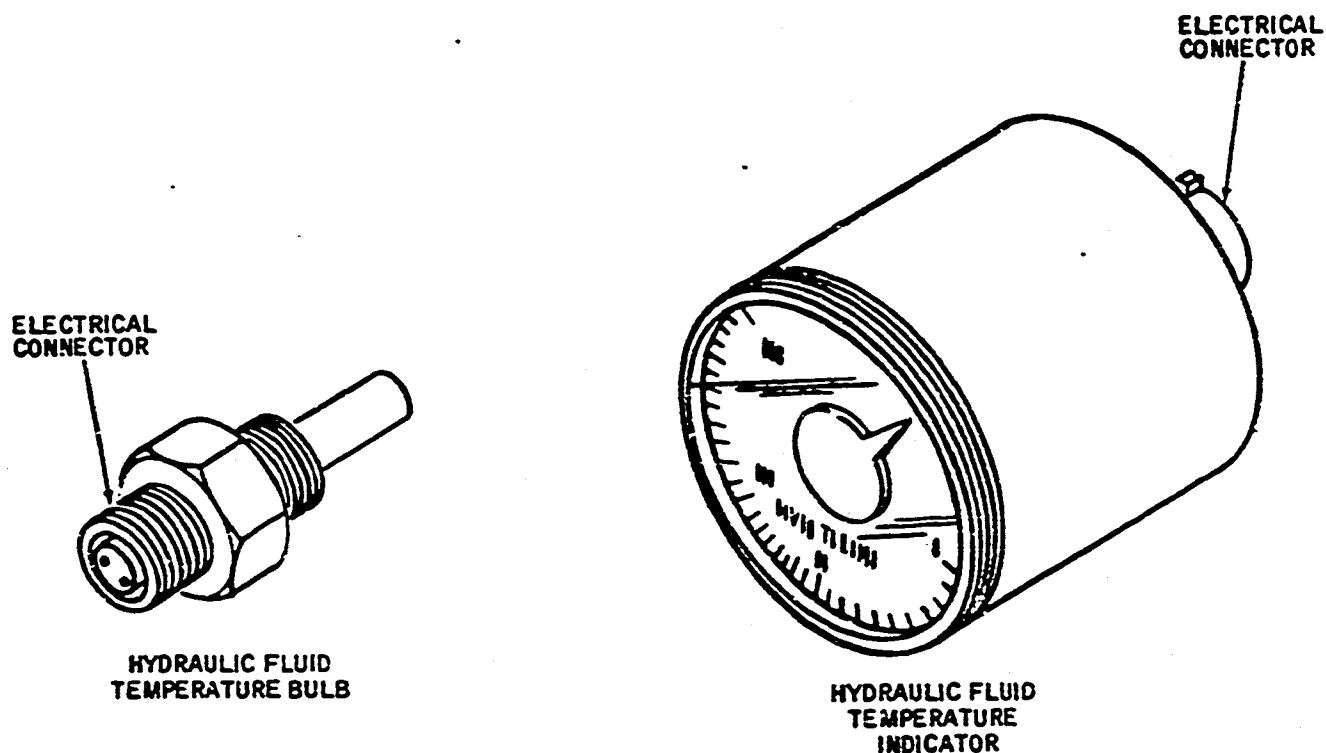


HA2-152

Hydraulic Fluid Temperature Indicating  
 System -- Schematic  
 Figure 2



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

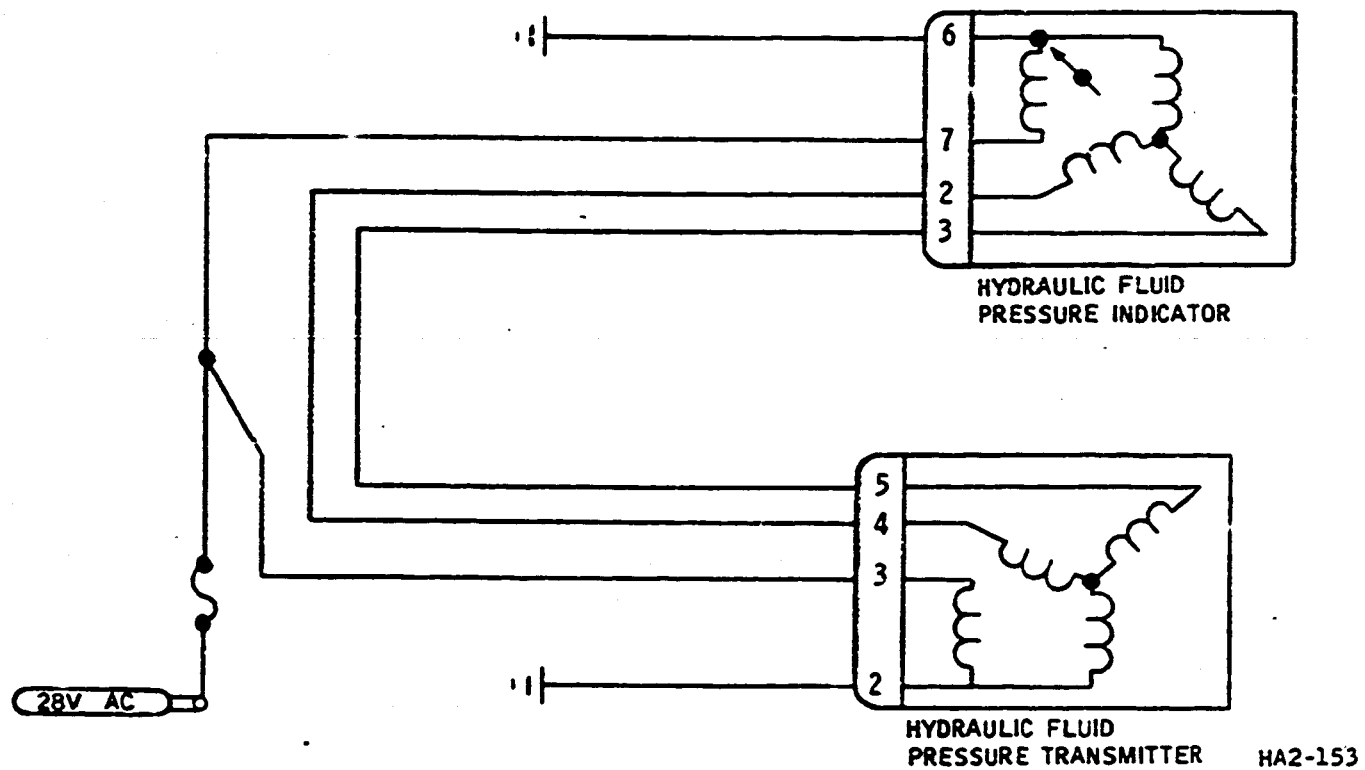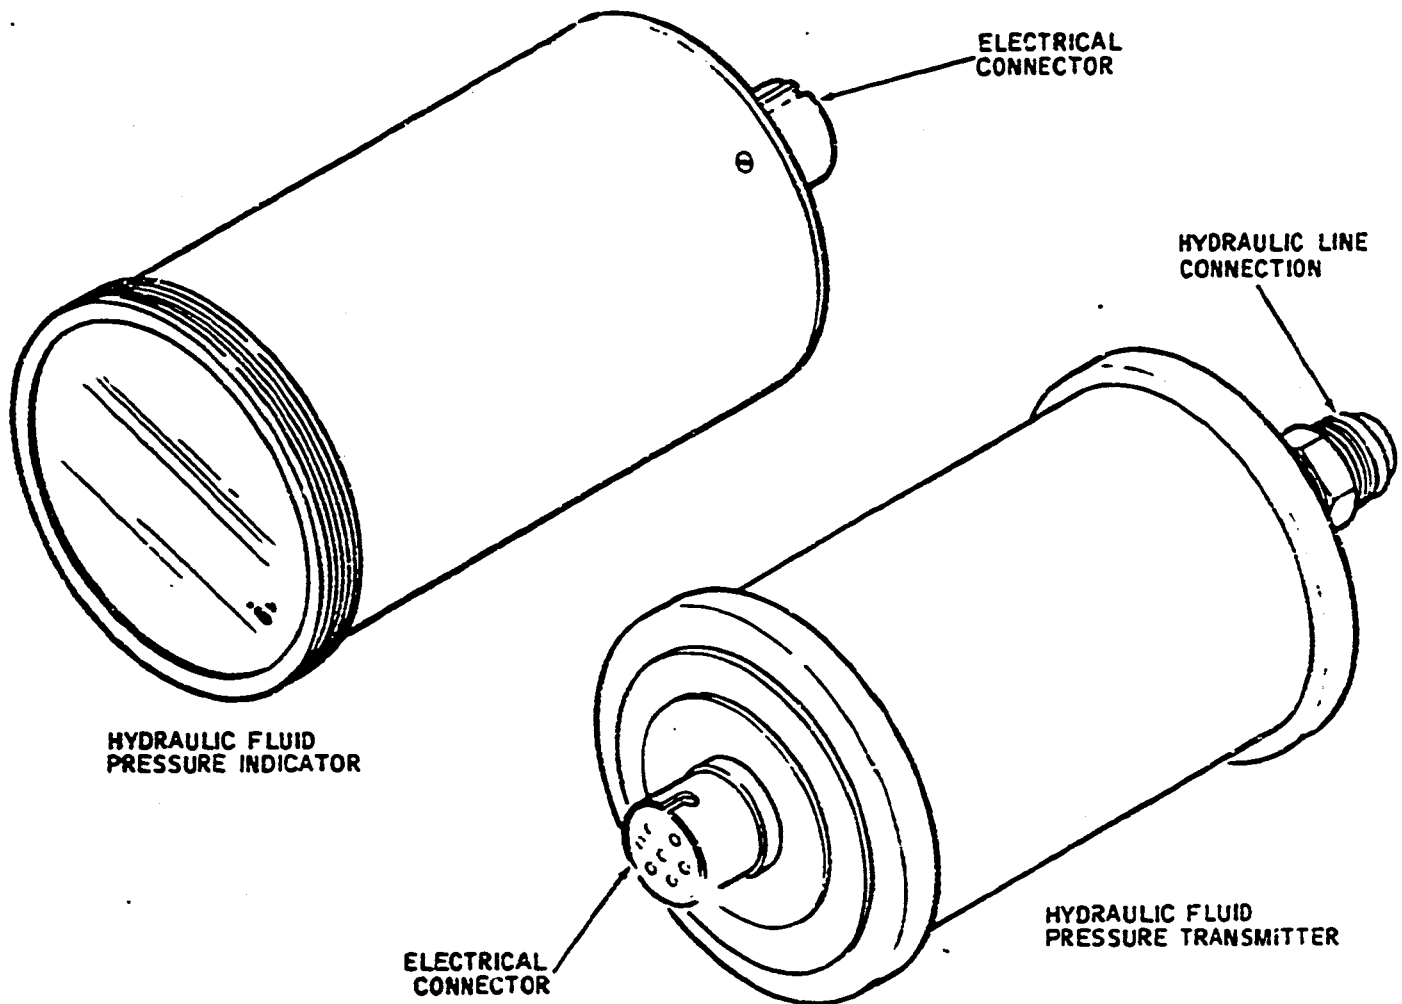

Hydraulic Fluid Pressure Indicating  
 System -- Schematic  
 Figure 3

HA2-153

Jun 15/67

Printed in U.S.A.

29-30-0  
 CODE 5  
 Page 5

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

5. Hydraulic Reservoir Low-Pressure Indicating Light System (See Figure 4.)

- A. The hydraulic reservoir low-pressure indicating light system provides a visual indication of below normal air pressure in the hydraulic reservoir. The system consists of a pressure-actuated switch located on the hydraulic reservoir, a light-dimming switch and resistor, and a press-to-test amber indicator light in the flight compartment. The hydraulic reservoir low-pressure indicator light comes on when reservoir air pressure drops below 22 ( $\pm 2$ ) psi and goes off when pressure reaches 27 ( $\pm 2$ ) psi.



6. Hydraulic Fluid Overtemperature Indicating Light System (See Figure 5.)

- A. The hydraulic fluid overtemperature indicating light system provides a visual indication of overheated hydraulic fluid in the reservoir. The system consists of a dimmable, amber, press-to-test indicator light (see Chapter 31 for location), and a temperature-sensitive switch installed in the hydraulic reservoir. The placard on the cap of the indicator light reads hydraulic oil temperature. If the hydraulic fluid reaches an overtemperature condition, the temperature-sensitive switch will cause the indicator light to come on. The switch closes when the temperature reaches 71°C to 82°C (160°F to 180°C).

7. Emergency Hydraulic Reservoir Low Level Indicating Light System (See Figure 6.)

- A. The emergency hydraulic reservoir low level indicating light system provides a visual indication in the flight compartment if the fluid level in the auxiliary hydraulic pump alternate reservoir drops to approximately 0.8 US gallons (0.666 Imperial gallons, 3.15 liters). The system consists of a float-actuated, 2-position switch located on the alternate reservoir, an indicator light located in the flight compartment, and the wiring required to connect the system. When fluid level in the alternate reservoir drops below 0.8 US gallons, the float lowers, closing the switch, and the indicator light comes on. When the fluid level rises above 0.8 US gallons, the float rises, opening the switch, and the light goes out.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

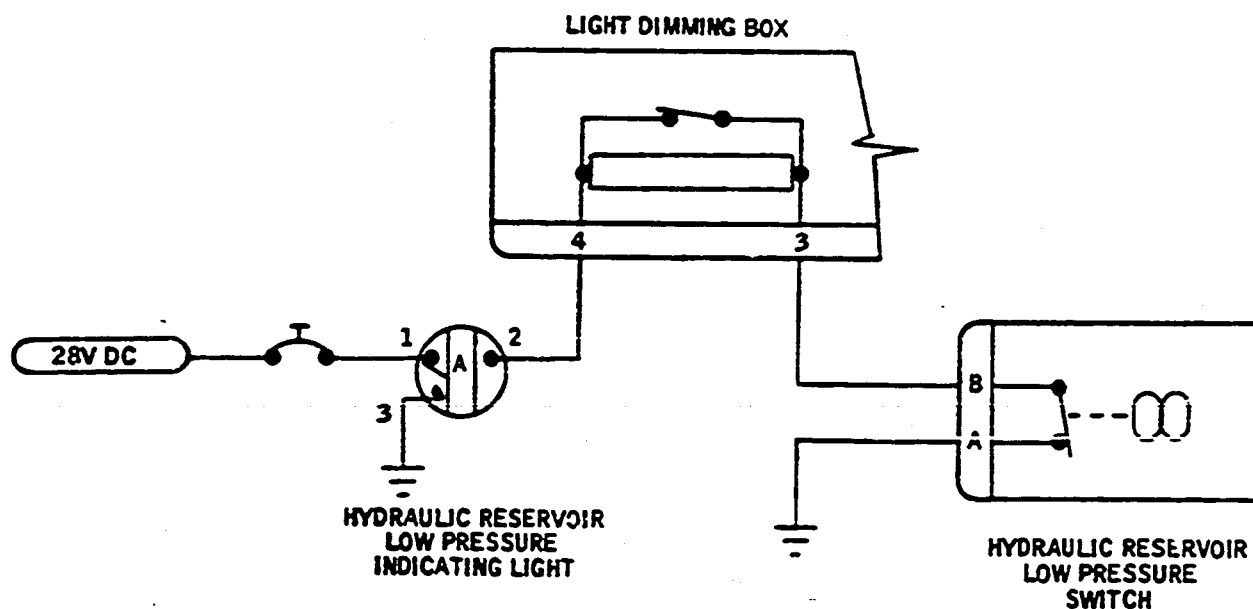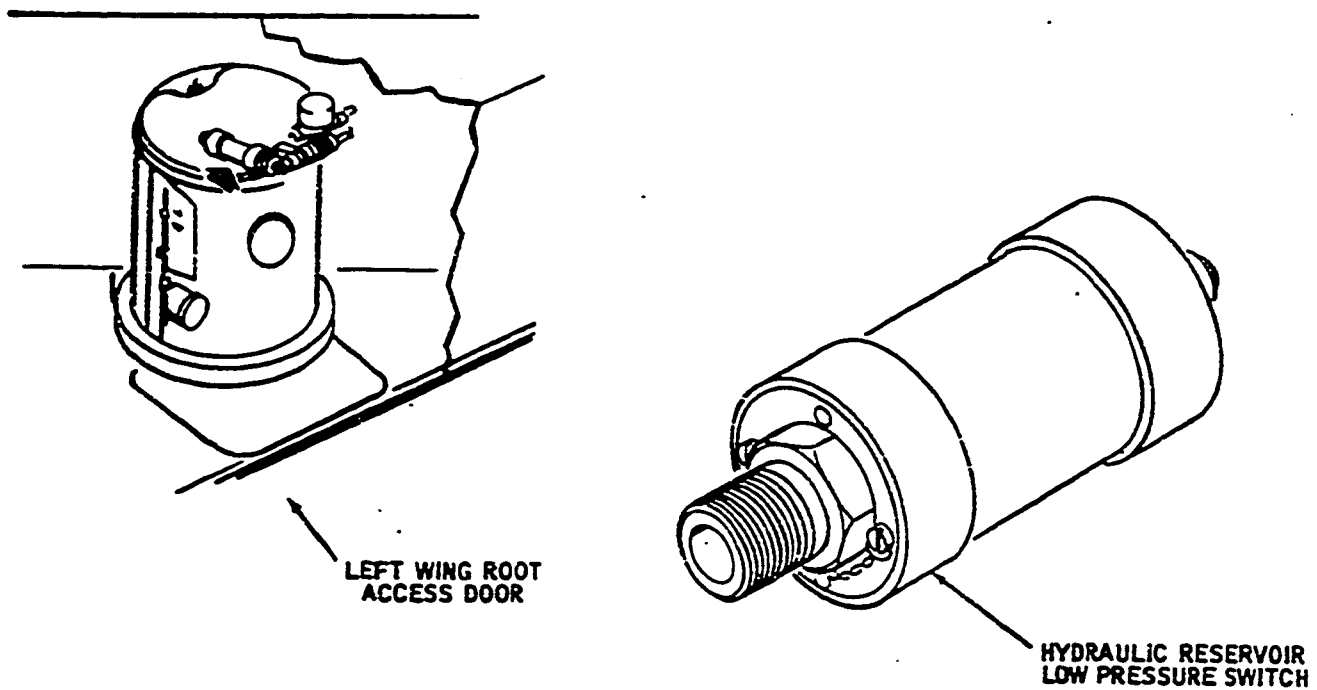

Hydraulic Reservoir Low-Pressure Indicating  
 Light System -- Schematic  
 Figure 4


HA2-202

29-30-0  
 CODE 5  
 Page 7


Jun 15/67

Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

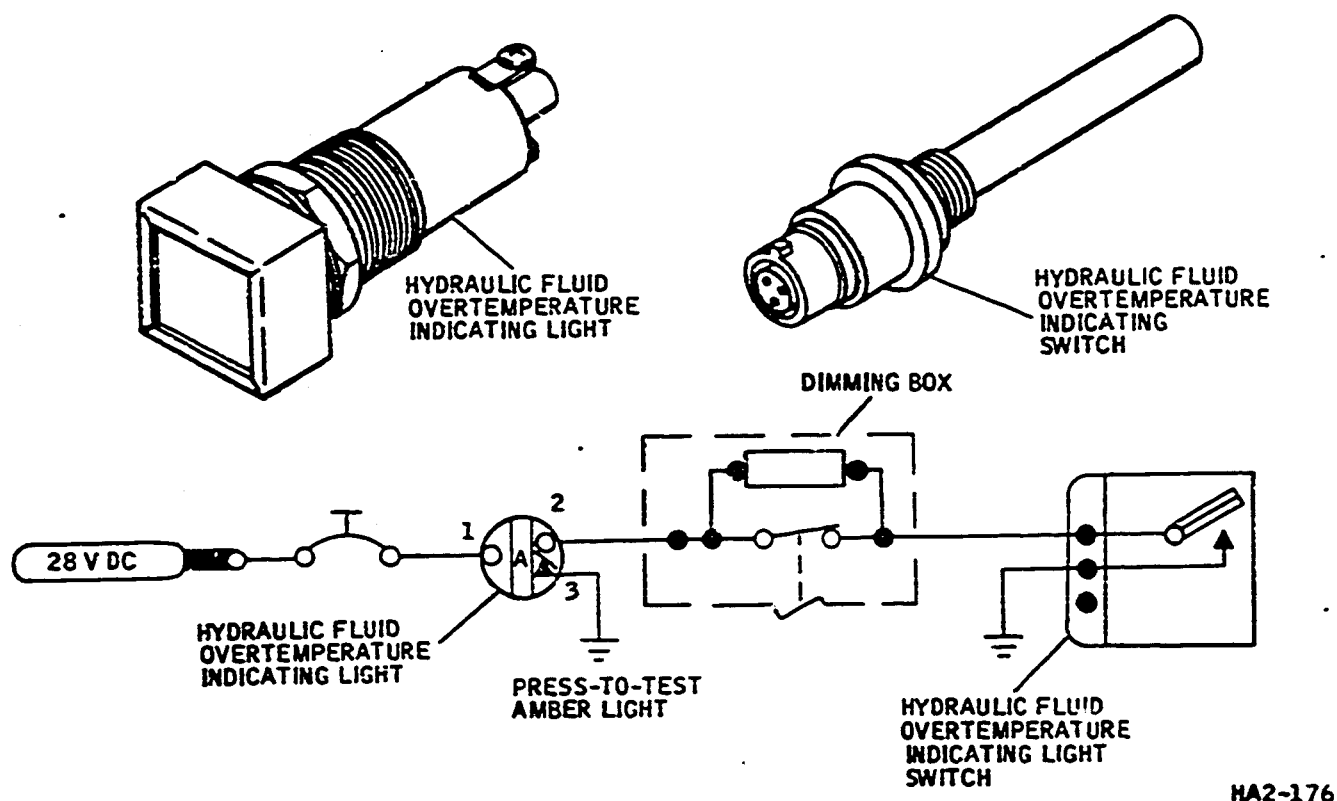

Hydraulic Fluid Overtemperature Indicating  
 Light System -- Schematic  
 Figure 5

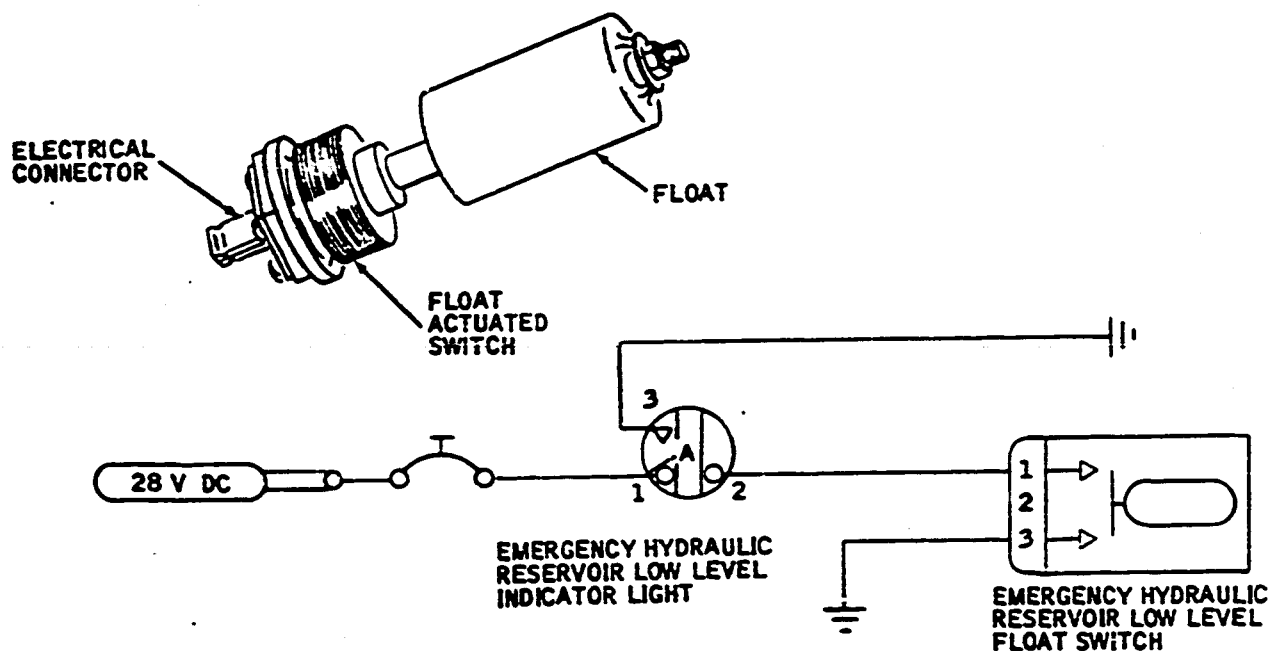

Emergency Hydraulic Reservoir Low Level  
 Indicating System -- Schematic  
 Figure 6

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

INDICATING - DESCRIPTION AND OPERATION

1. General



A. Description

- (1) Indicating circuits for the hydraulic power system provide indications in the flight compartment of the status of the hydraulic power system during operation. Five separate indications are provided; three (hydraulic fluid quantity, temperature, and pressure) are presented on indicating gages and two (hydraulic fluid overtemperature, and emergency reservoir fluid level) are presented by indicating lights. On airplanes 812-822, 860 and subsequent an additional indication (hydraulic reservoir low pressure) is presented by an indicating light.

2. Hydraulic Fluid Quantity Indicating System (See Figure 1.)

- A. The hydraulic fluid quantity indicating system consists of a ratiometer-type indicator, a tank unit (transmitter) bolted to an external flanged adapter on the reservoir, and interconnecting wiring. Changes in the fluid level in the hydraulic system reservoir are followed by a float. The motion of the float is transmitted by means of a linkage arrangement, to the contact arm (wiper arm) of a potentiometer inside of the head of the transmitter. The potentiometer is wired to the indicator. The indicator consists of a rotor surrounded by three electromagnets. As the potentiometer contact arm moves, the rotor is positioned accordingly. The indicator pointer is attached directly to the rotor and thus shows liquid quantity. The indicator is marked hydraulic oil quantity.
- B. When the hydraulic reservoir is full, the fluid quantity indicator in the flight compartment pegs at a point equivalent to 11.5 US gallons (9.56 Imperial gallons, 43.52 liters). There are 1.4 US gallons (1.16 Imperial gallons, 5.29 liters) in the reservoir not recorded; as a result, the indicator does not move until this amount of fluid is depleted.
- C. In operation, the voltage across E1 is constant. The position of the contact arm (wiper arm) in the transmitter determines the voltage across E2 and E3. When the contact arm in the transmitter is moved in the R+ direction, the voltage across coil E2 is increased while the voltage across E3 is decreased. When the contact arm is moved in the R- direction, the opposite effect takes place. From these voltages, magnetic flux is produced in each coil proportional to the voltage drop across the coil. The electrical circuit causes the resultant of the three coil fluxes to rotate in a clockwise direction, as the contact arm is moved toward the R- position. The permanent magnet (M) reacts with the resultant flux, producing a torque which causes the magnet to rotate and become magnetically aligned with the resultant coil flux. Moderate supply voltage variation does not affect the positioning of the pointer on the indicator scale. A voltage variation affects each of the coil proportionately,

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

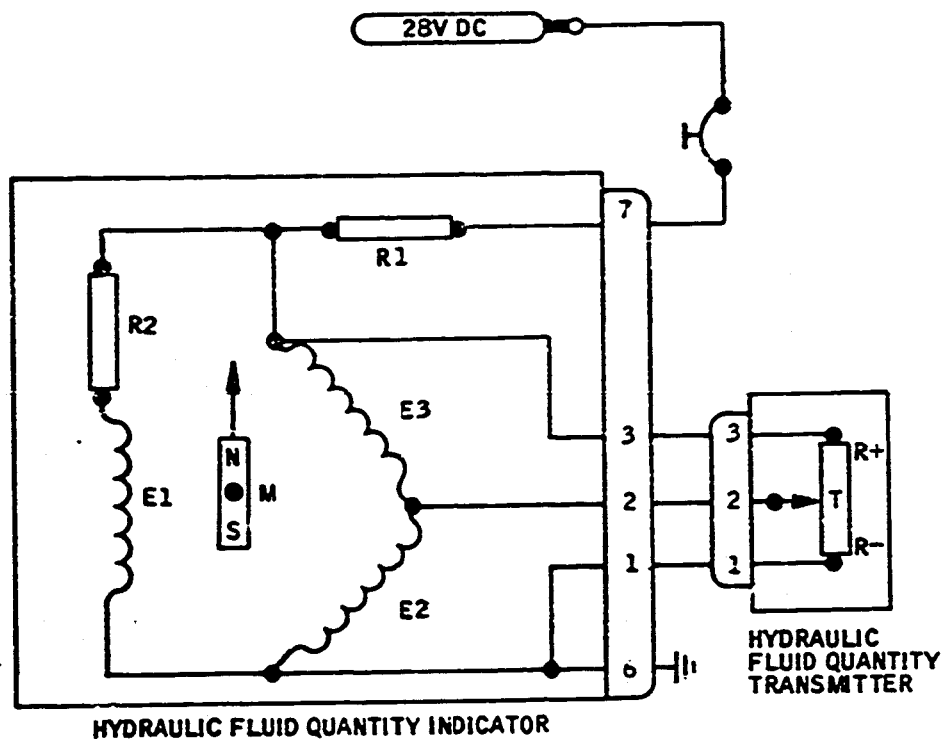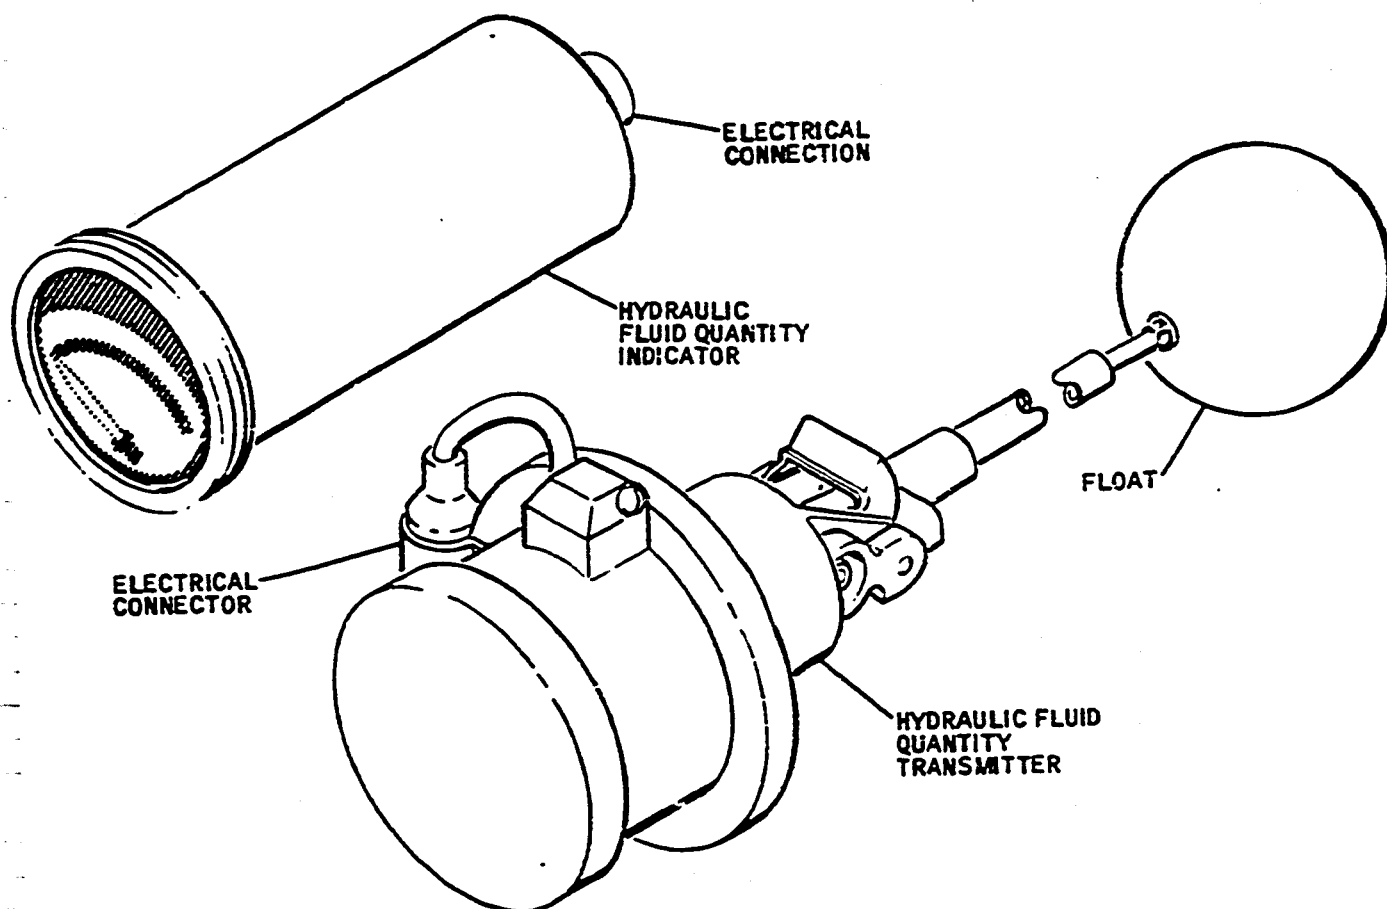

HA2-151

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

therefore affecting only the magnitude of the resultant flux, but not the direction. When the system power is off, a magnet in the indicator pulls the pointer off the scale.



3. Hydraulic Fluid Temperature Indicating System (See Figure 2.)

- A. The hydraulic fluid temperature indicating system is the ratiometer-type which provides an indication of hydraulic fluid temperature in the reservoir. The system consists of a temperature bulb, installed in the reservoir, and an indicator in the flight compartment.
- B. The hydraulic fluid temperature indicator operates on the electrical bridge principle, with the temperature bulb forming one leg of the bridge circuit. The indicator armature has two coils turning in the air gap of permanent magnets. A large deflecting coil functions much the same as a galvanometer. A small restoring coil is connected in series with one leg of the bridge and opposes the motion of the deflecting coil. Three hairsprings connect the coils to the circuit; one is common to both coils. Two slide-wire potentiometers are provided; one adjusts calibration at center scale and the other expands or contracts the scale ends. When deenergized, a spring-operated device returns the pointer to a position below the scale arc. The indicator is calibrated from  $-50^{\circ}\text{C}$  to  $+150^{\circ}\text{C}$  ( $-58^{\circ}\text{F}$  to  $302^{\circ}\text{F}$ ). The temperature bulb has a range of  $-70^{\circ}\text{C}$  to  $+300^{\circ}\text{C}$  ( $-94^{\circ}\text{F}$  to  $572^{\circ}\text{F}$ ).

4. Hydraulic Fluid Pressure Indicating System (See Figure 3.)

- A. The hydraulic fluid pressure indicating system is the synchro-type and indicates the fluid pressure in the hydraulic power system. The system consists of an indicator, located in the flight compartment, and a transmitter. The transmitter is located in the upper right side of the nose-wheel well and is connected by tubing to the hydraulic system pressure lines.
- B. The hydraulic fluid pressure indicator consists of a pointer mounted on the shaft of a synchro repeater and is contained within a nonhermetically sealed aluminum case. The indicator is electrically connected to a 28-vac, 400-cycle power source and to a remote, synchro-type pressure transmitter. The indicator is internally lighted by a 5.4-volt lamp bulb.
- C. The stator and rotor of the synchro repeater are electrically connected in parallel to the stator and rotor of the remote pressure transmitter. When both units are energized from the same source, the repeater rotor assumes an identical position to that of the transmitter rotor, which is positioned by action of hydraulic pressure. Thus the indicator indicates the pressure on the dial which is calibrated in psig from 0 to 4 times 1000. If the system electrical power fails, the pointer tends to remain at the last indicated position. A direct-reading gage, located on the hydraulic system accumulator in the left main gear wheel well, also indicates the hydraulic system pressure.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

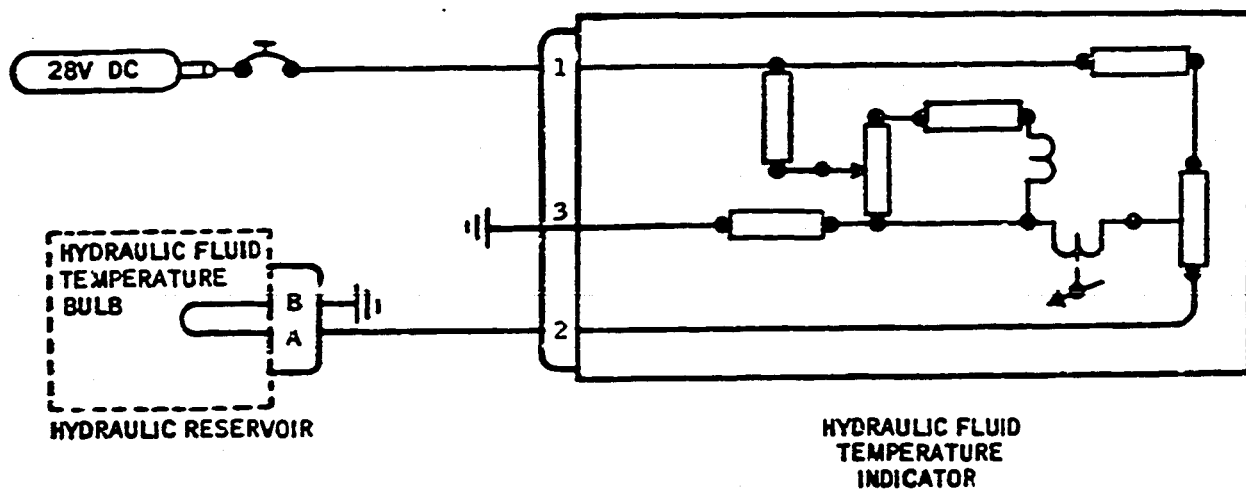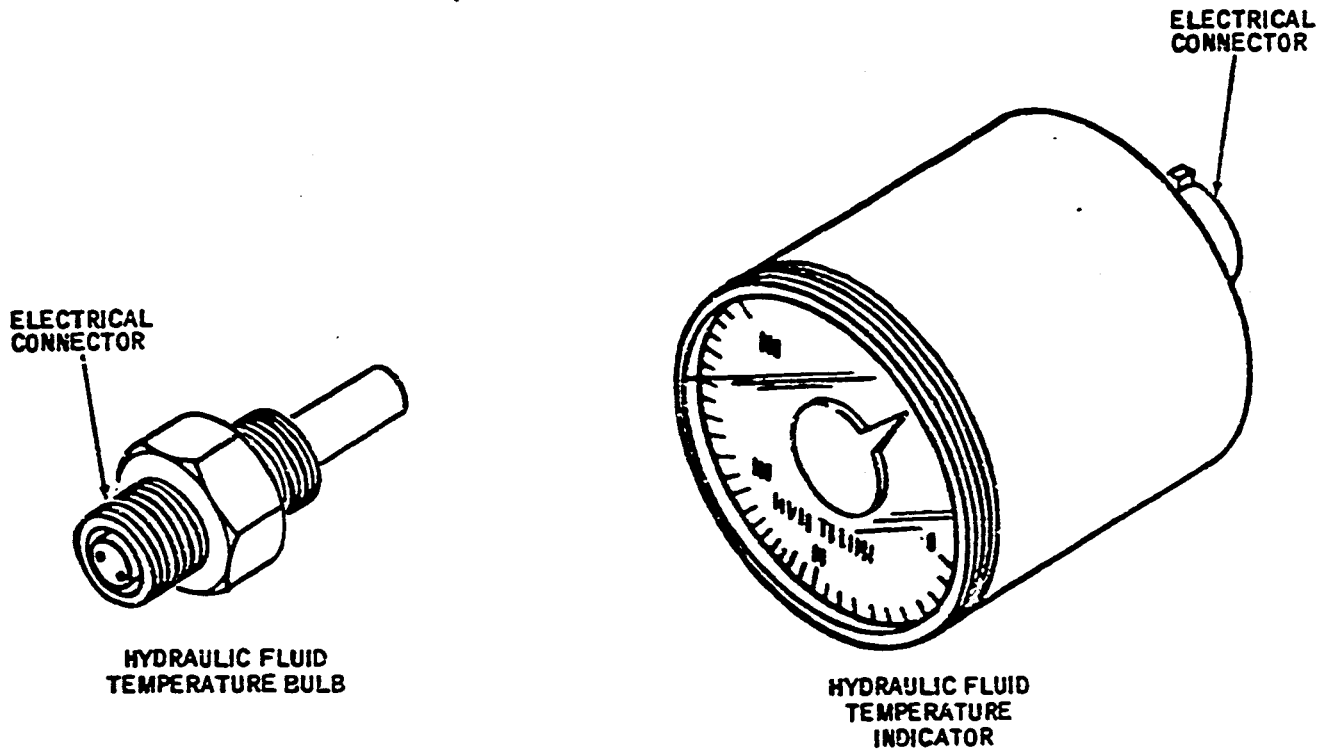

HA2-152



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

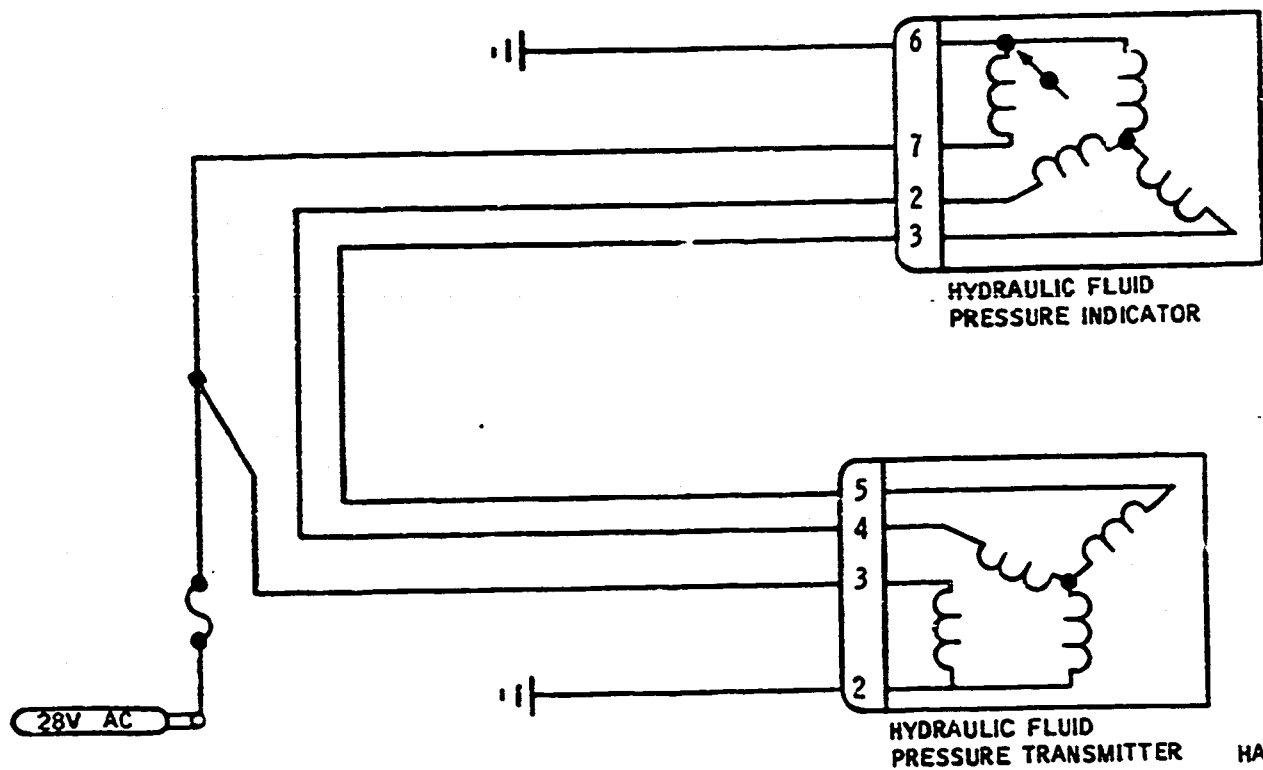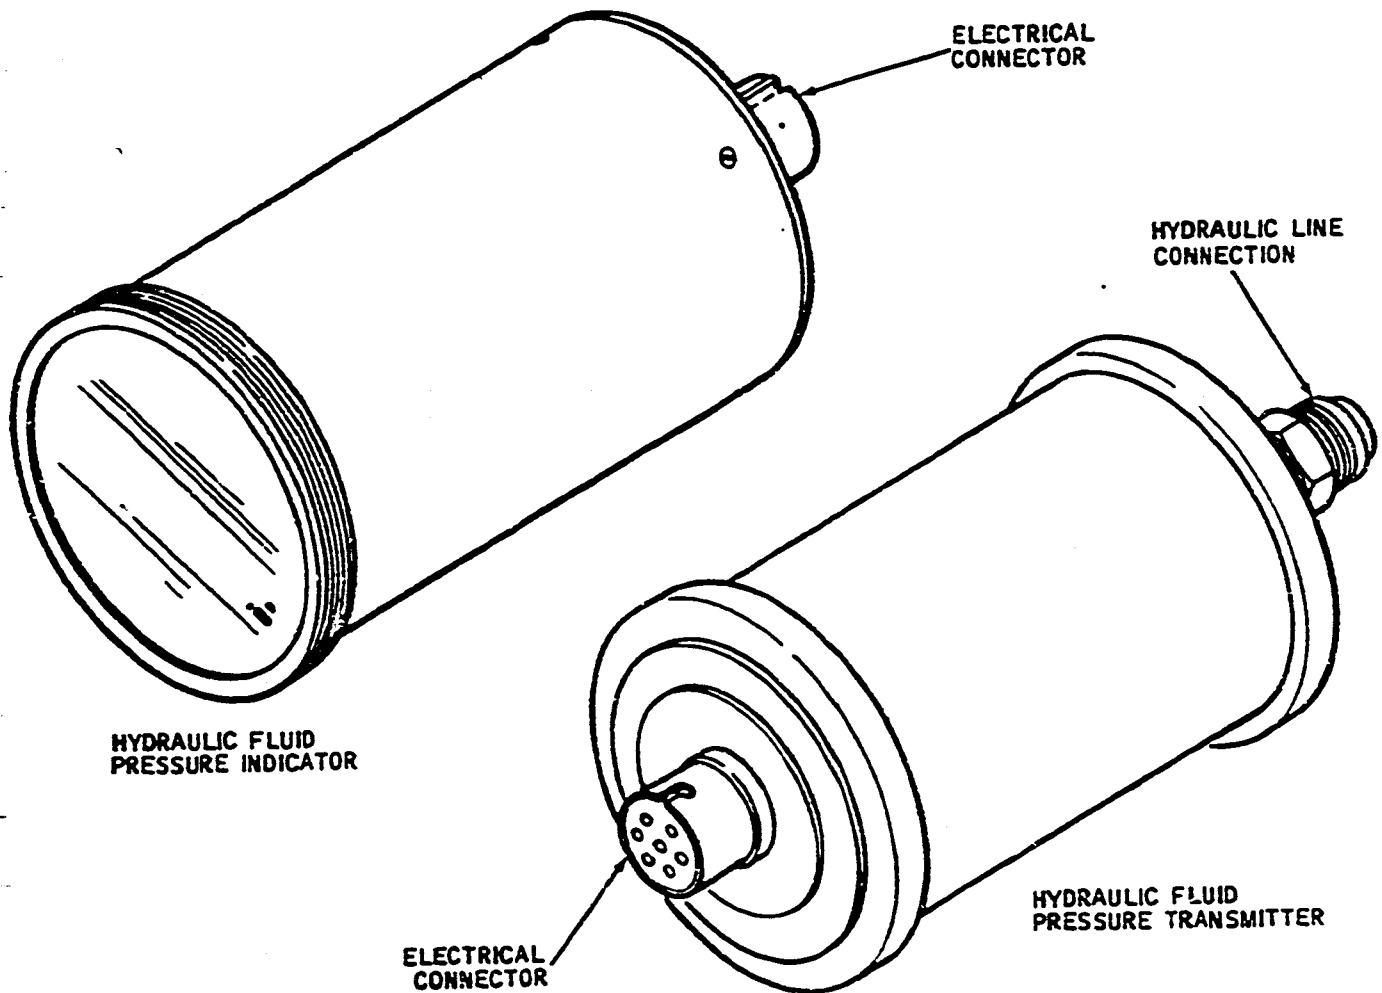

HA2-153

Hydraulic Fluid Pressure Indicating  
 System -- Schematic  
 Figure 3

Jan 15/68

29-30-0  
 CODE 6  
 Page 5

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

5. Hydraulic Reservoir Low-Pressure Indicating Light System (Airplanes 812-822, 860 and subsequent) (See Figure 4.)

- A. The hydraulic reservoir low-pressure indicating light system provides a visual indication of below normal air pressure in the hydraulic reservoir. The system consists of a pressure-actuated switch located on the hydraulic reservoir, a light-dimming switch and resistor, and a press-to-test amber indicator light in the flight compartment. On airplanes 812-822 and 860-876, the hydraulic reservoir low-pressure indicator light comes on when reservoir air pressure drops below 25 ( $\pm 2$ ) psi and goes off when the pressure reaches 30 ( $\pm 2$ ) psi. On airplanes 877-879, the hydraulic reservoir low-pressure indicator light comes on when reservoir air pressure drops below 22 ( $\pm 2$ ) psi and goes off when pressure reaches 27 ( $\pm 2$ ) psi.




6. Hydraulic Fluid Overtemperature Indicating Light System (See Figure 5.)

- A. The hydraulic fluid overtemperature indicating light system provides a visual indication of overheated hydraulic fluid in the reservoir. The system consists of a dimmable, amber, press-to-test indicator light (see Chapter 31 for location), and a temperature-sensitive switch installed in the hydraulic reservoir. The placard on the cap of the indicator light reads hydraulic oil temperature. If the hydraulic fluid reaches an overtemperature condition, the temperature-sensitive switch will cause the indicator light to come on. The switch closes when the temperature reaches 71°C to 82°C (160°F to 180°F).

7. Emergency Hydraulic Reservoir Low Level Indicating Light System (See Figure 6.)

- A. The emergency hydraulic reservoir low level indicating light system provides a visual indication in the flight compartment if the fluid level in the auxiliary hydraulic pump alternate reservoir drops to approximately 0.8 US gallons (0.666 Imperial gallons, 3.15 liters). The system consists of a float-actuated, 2-position switch located on the alternate reservoir, an indicator light located in the flight compartment, and the wiring required to connect the system. When fluid level in the alternate reservoir drops below 0.8 US gallons, the float lowers, closing the switch, and the indicator light comes on. When the fluid level rises above 0.8 US gallons, the float rises, opening the switch, and the light goes out.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

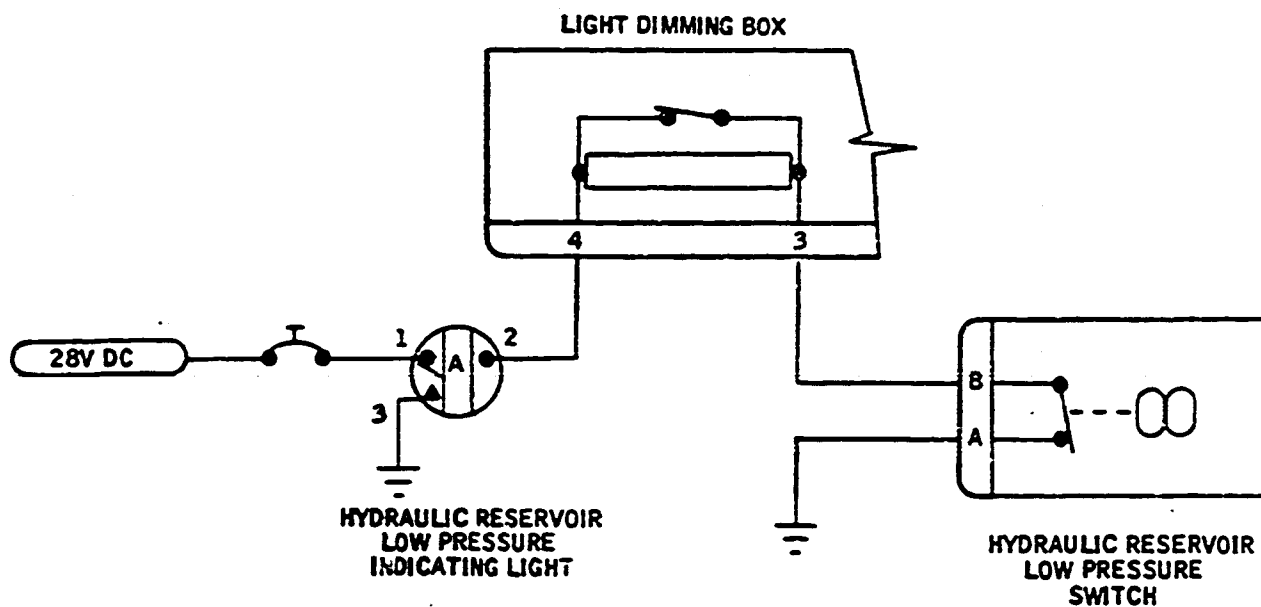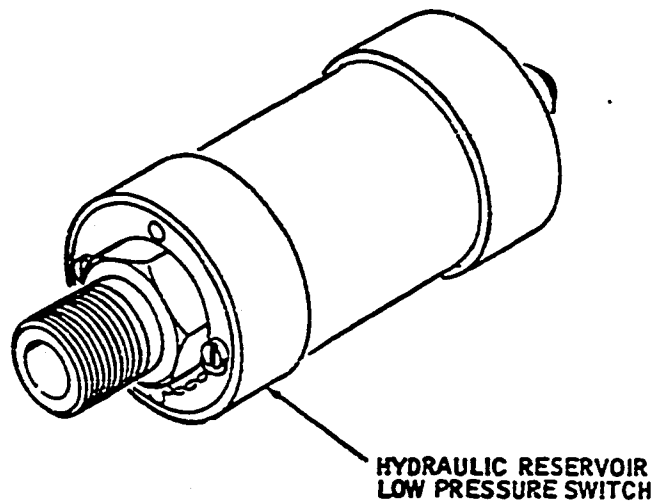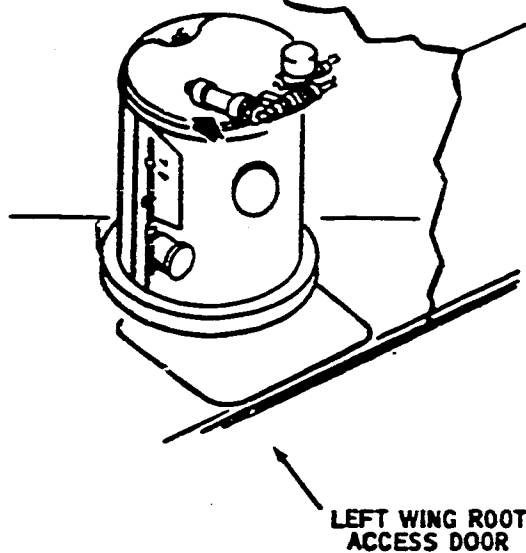

Hydraulic Reservoir Low-Pressure Indicating Light System --  
 Schematic (Airplanes 812-822, 860 and Subsequent)  
 Figure 4


HA2-202

29-30-0  
 CODE 6  
 Page 7

Aug 1/68


Printed in U.S.A.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

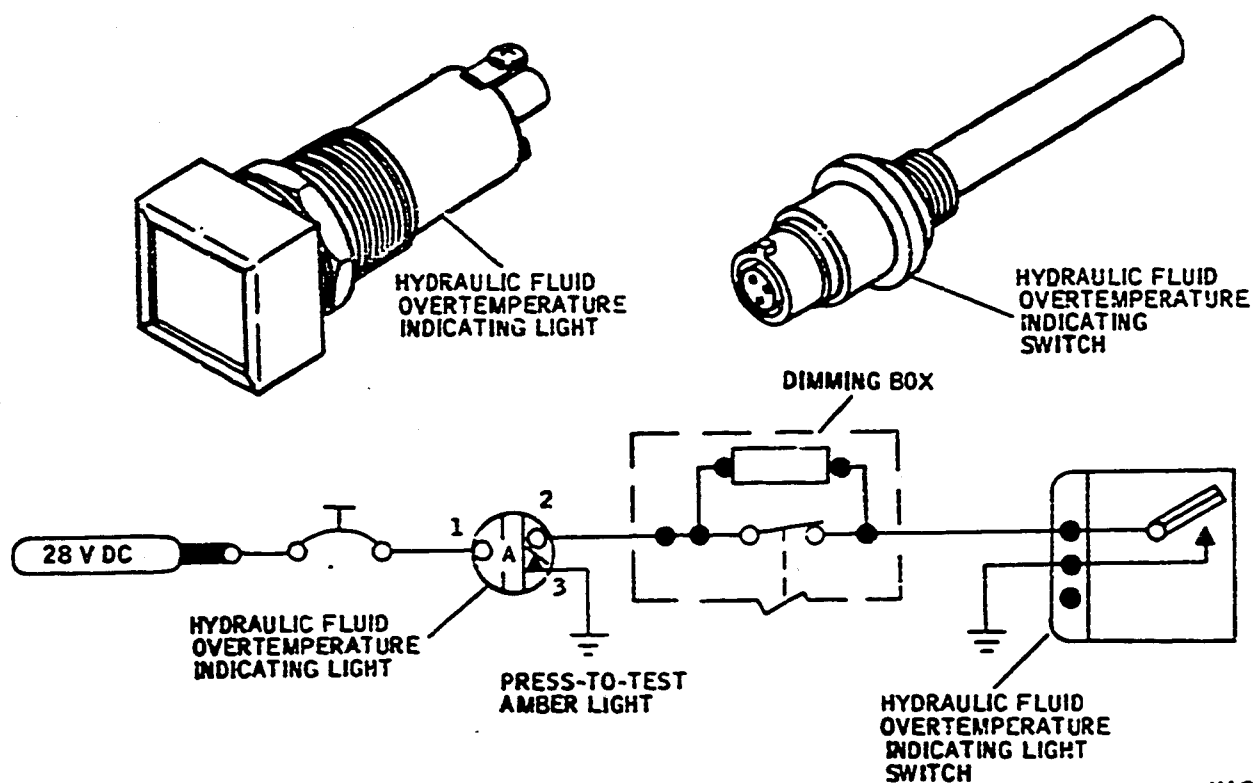

HA2-176

Hydraulic Fluid Overtemperature Indicating  
 Light System -- Schematic  
 Figure 5

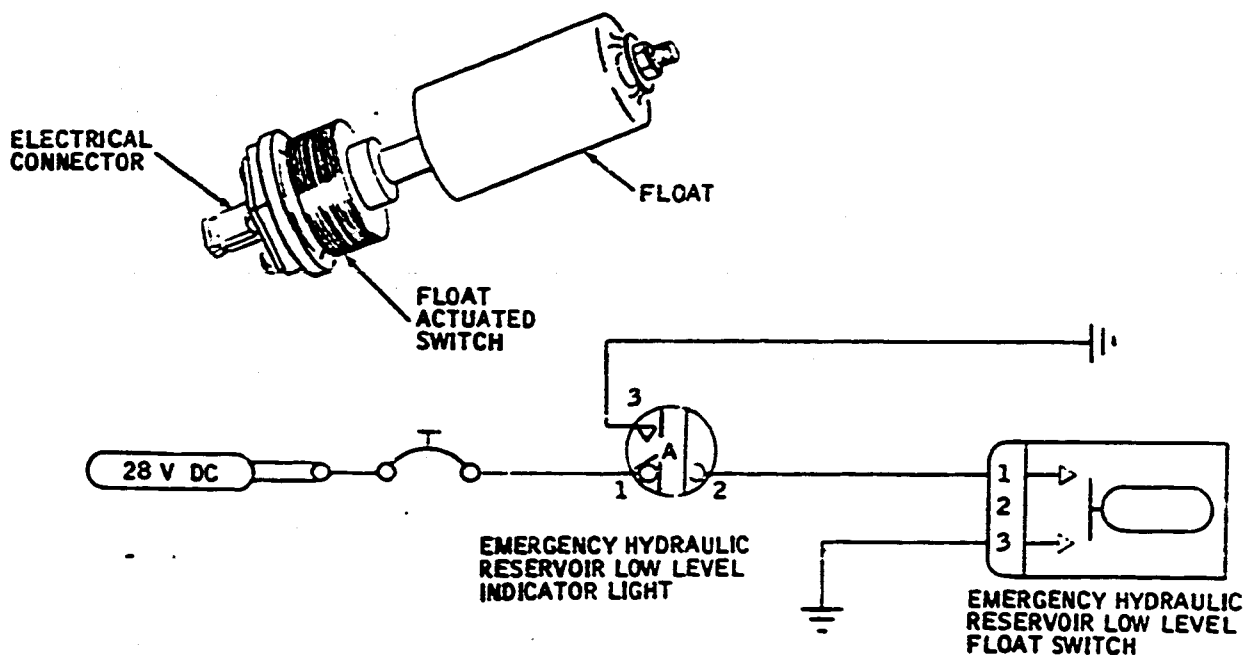

HA2-177

Emergency Hydraulic Reservoir Low Level  
 Indicating System -- Schematic  
 Figure 6

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

INDICATING - DESCRIPTION AND OPERATION

1. General



A. Description

- (1) Indicating circuits for the hydraulic power system provide indications in the flight compartment of the status of the hydraulic power system during operation. Five separate indications are provided; three (hydraulic fluid quantity, temperature, and pressure) are presented on indicating gages and three (hydraulic reservoir low pressure, hydraulic fluid overtemperature, and emergency reservoir fluid level) are presented by indicating lights.

2. Hydraulic Fluid Quantity Indicating System (See Figure 1.)

- A. The hydraulic fluid quantity indicating system consists of a ratiometer-type indicator, a tank unit (transmitter) bolted to an external flanged adapter on the reservoir, and interconnecting wiring. Changes in the fluid level in the hydraulic system reservoir are followed by a float. The motion of the float is transmitted by means of a linkage arrangements, to the contact arm (wiper arm) of a potentiometer inside of the head of the transmitter. The potentiometer is wired to the indicator. The indicator consists of a rotor surrounded by three electromagnets. As the potentiometer contact arm moves, the rotor is positioned accordingly. The indicator pointer is attached directly to the rotor and thus shows liquid quantity. The indicator is marked hydraulic oil quantity.
- B. When the hydraulic reservoir is full, the fluid quantity indicator in the flight compartment pegs at a point equivalent to 11.5 US gallons (9.56 Imperial gallons, 43.52 liters). There are 1.4 US gallons (1.16 Imperial gallons, 5.29 liters) in the reservoir not recorded; as a result, the indicator does not move until this amount of fluid is depleted.
- C. In operation, the voltage across E1 is constant. The position of the contact arm (wiper arm) in the transmitter determines the voltage across E2 and E3. When the contact arm in the transmitter is moved in the R+ direction, the voltage across coil E2 is increased while the voltage across E3 is decreased. When the contact arm is moved in the R- direction, the opposite effect takes place. From these voltages, magnetic flux is produced in each coil proportional to the voltage drop across the coil. The electrical circuit causes the resultant of the three coil fluxes to rotate in a clockwise direction, as the contact arm is moved toward the R- position. The permanent magnet (M) reacts with the resultant flux, producing a torque which causes the magnet to rotate and become magnetically aligned with the resultant coil flux. Moderate supply voltage variation does not affect the positioning of the pointer on the indicator scale. A voltage variation affects each of the coils proportionately, therefore affecting only the magnitude of the resultant flux, but not the direction. When the system power is off, a magnet in the indicator pulls the pointer off the scale.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

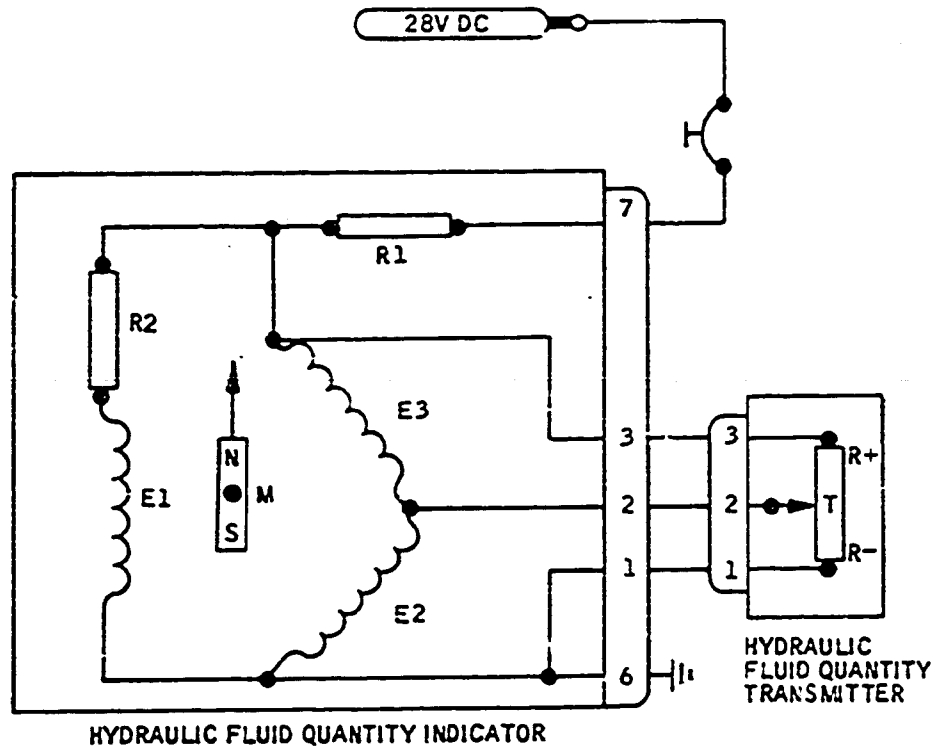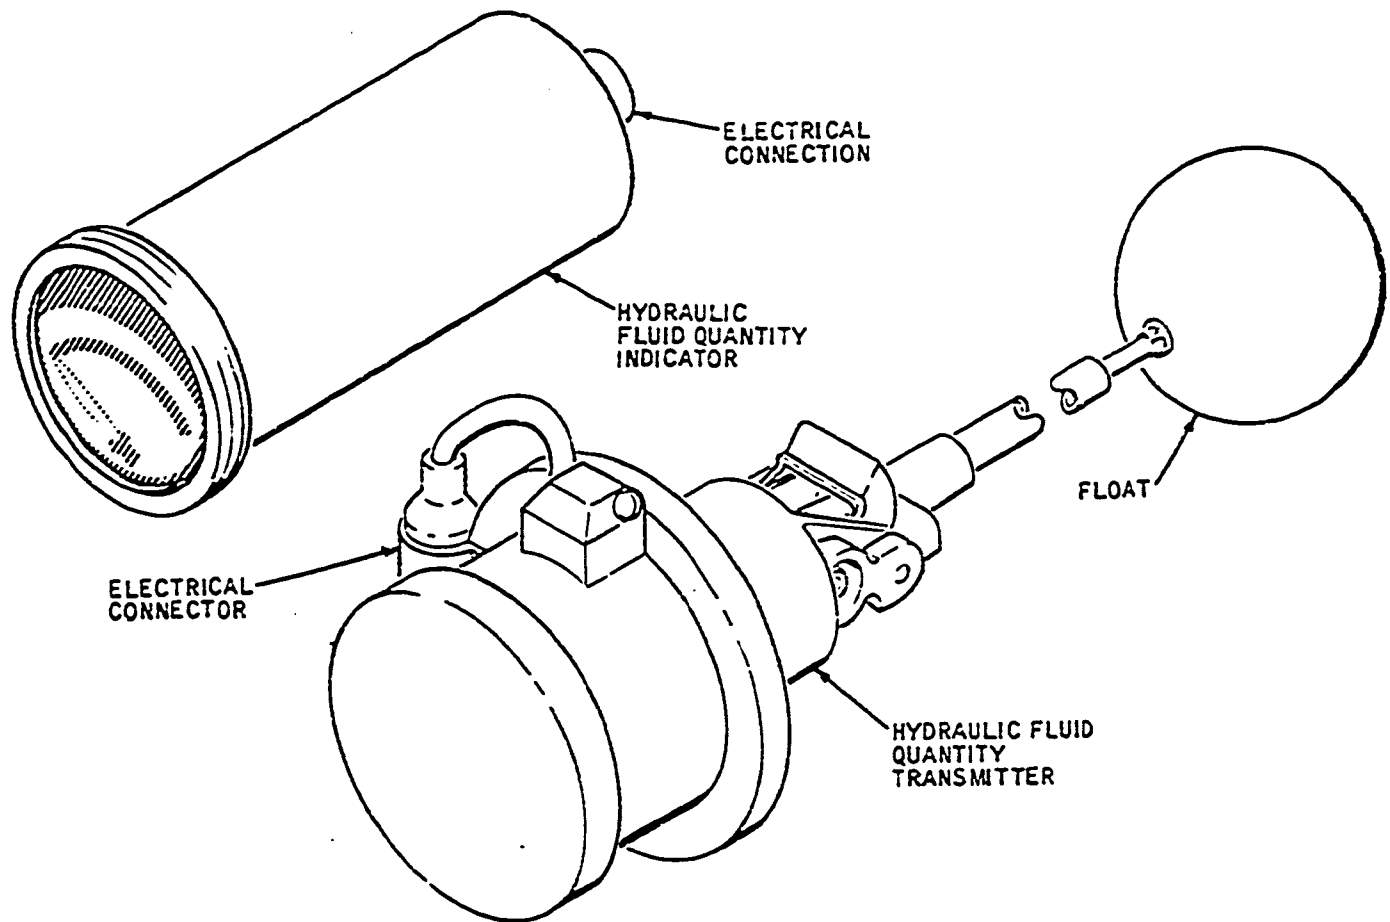

HA2-151

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

3. Hydraulic Fluid Temperature Indicating System (See Figure 2.)

- A. The hydraulic fluid temperature indicating system in the ratiometer-type which provides an indication of hydraulic fluid temperature in the reservoir. The system consists of a temperature bulb, installed in the reservoir, and an indicator in the flight compartment.
- B. The hydraulic fluid temperature indicator operates on the electrical bridge principle, with the temperature bulb forming one leg of the bridge circuit. The indicator armature has two coils turning in the air gap of permanent magnets. A large deflecting coil functions much the same as a galvanometer. A small restoring coil is connected in series with one leg of the bridge and opposes the motion of the deflecting coil. Three hairsprings connect the coils to the circuit; one is common to both coils. Two slide-wire potentiometers are provided; one adjusts calibration at center scale and the other expands or contracts the scale ends. When deenergized, a spring-operated device returns the pointer to a position below the scale arc. The indicator is calibrated from  $-50^{\circ}\text{C}$  to  $+150^{\circ}\text{C}$  ( $-58^{\circ}\text{F}$  to  $302^{\circ}\text{F}$ ). The temperature bulb has a range of  $-70^{\circ}\text{C}$  to  $+300^{\circ}\text{C}$  ( $-94^{\circ}\text{F}$  to  $572^{\circ}\text{F}$ ).



4. Hydraulic Fluid Pressure Indicating System (See Figure 3.)

- A. The hydraulic fluid pressure indicating system is the synchro-type and indicates the fluid pressure in the hydraulic power system. The system consists of an indicator, located in the flight compartment, and a transmitter. The transmitter is located in the upper right side of the nose-wheel well and is connected by tubing to the hydraulic system pressure lines.
- B. The hydraulic fluid pressure indicator consists of a pointer mounted on the shaft of a synchro repeater and is contained within a nonhermetically sealed aluminum case. The indicator is electrically connected to a 28-vac, 400-cycle power source and to a remote, synchro-type pressure transmitter. The indicator is internally lighted by a 5.4-volt lamp bulb.
- C. The stator and rotor of the synchro repeater are electrically connected in parallel to the stator and rotor of the remote pressure transmitter. When both units are energized from the same source, the repeater rotor assumes an identical position to that of the transmitter rotor, which is positioned by action of hydraulic pressure. Thus the indicator indicates the pressure on the dial which is calibrated in psig from 0 to 4 times 1000. If the system electrical power fails, the pointer tends to remain at the last indicated position. A direct-reading gage, located on the hydraulic system accumulator in the left main gear wheel well, also indicates the hydraulic system pressure.

5. Hydraulic Reservoir Low-Pressure Indicating Light System (See Figure 4.)

- A. The hydraulic reservoir low-pressure indicating light system provides a visual indication of below normal air pressure in the hydraulic reservoir.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

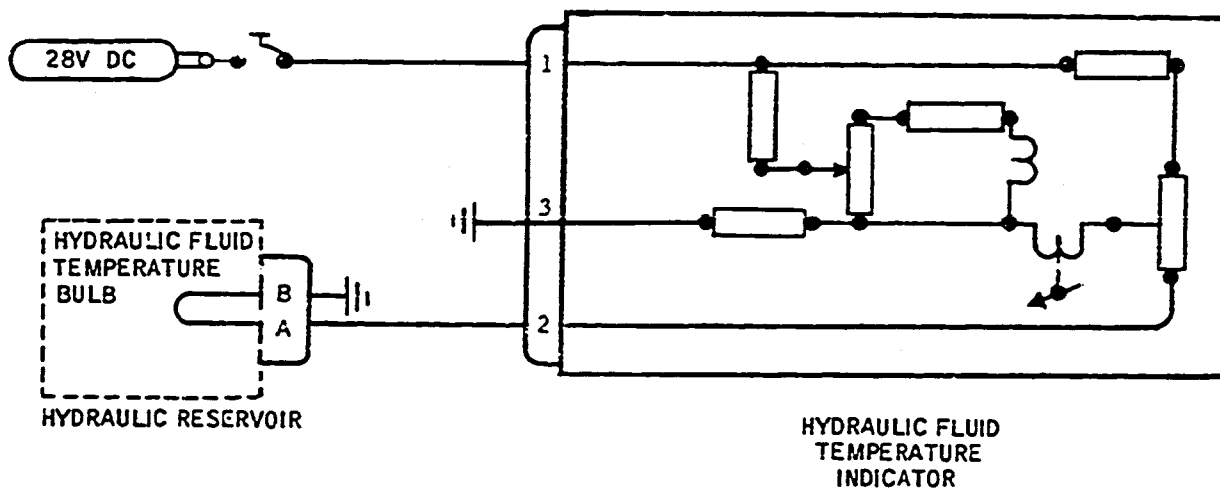
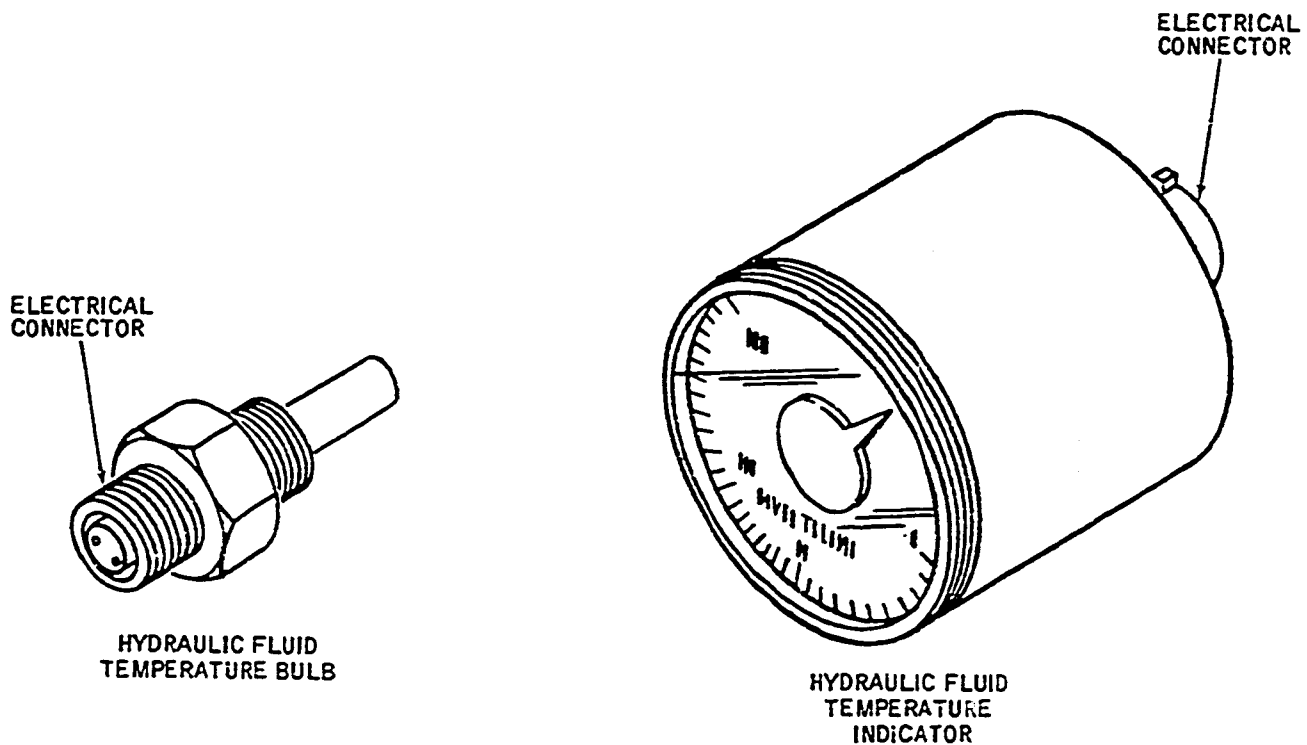


HA2-152

Hydraulic Fluid Temperature Indicating  
 System -- Schematic  
 Figure 2






DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

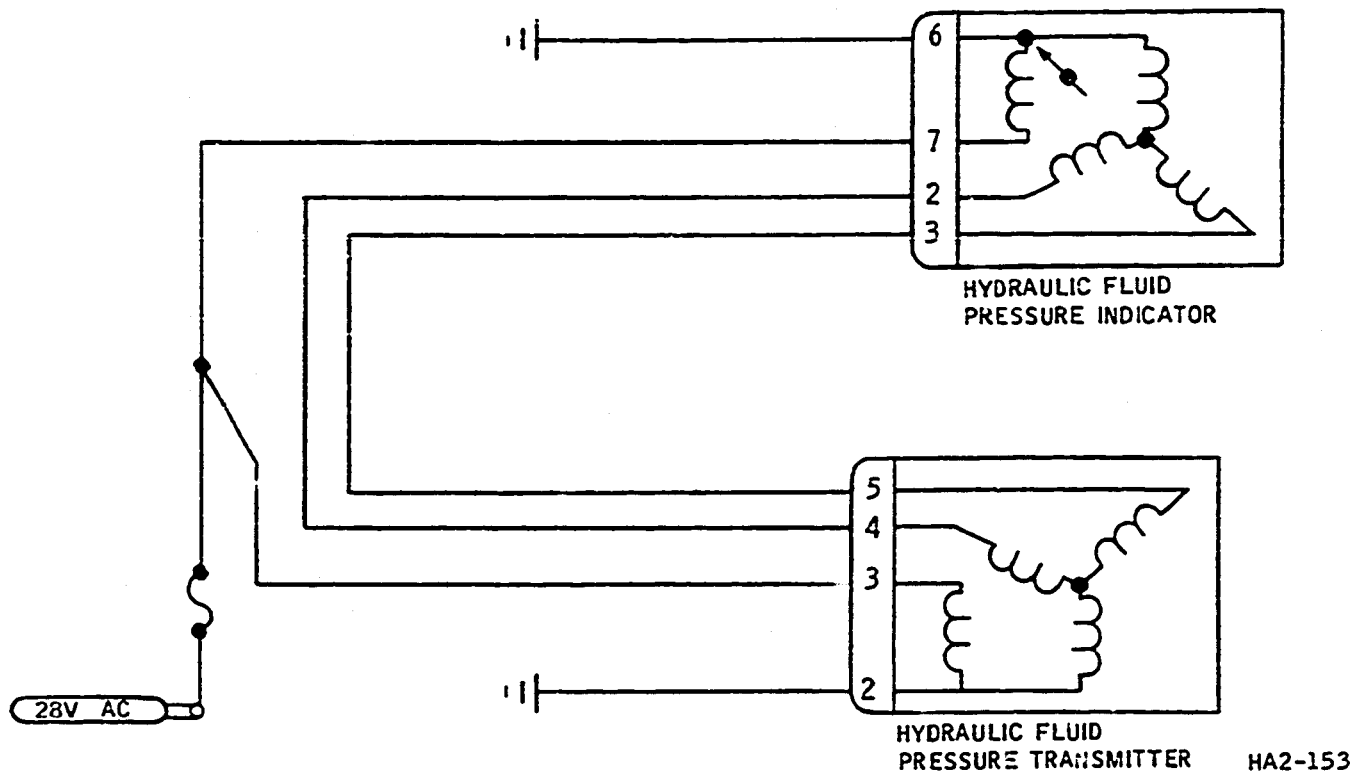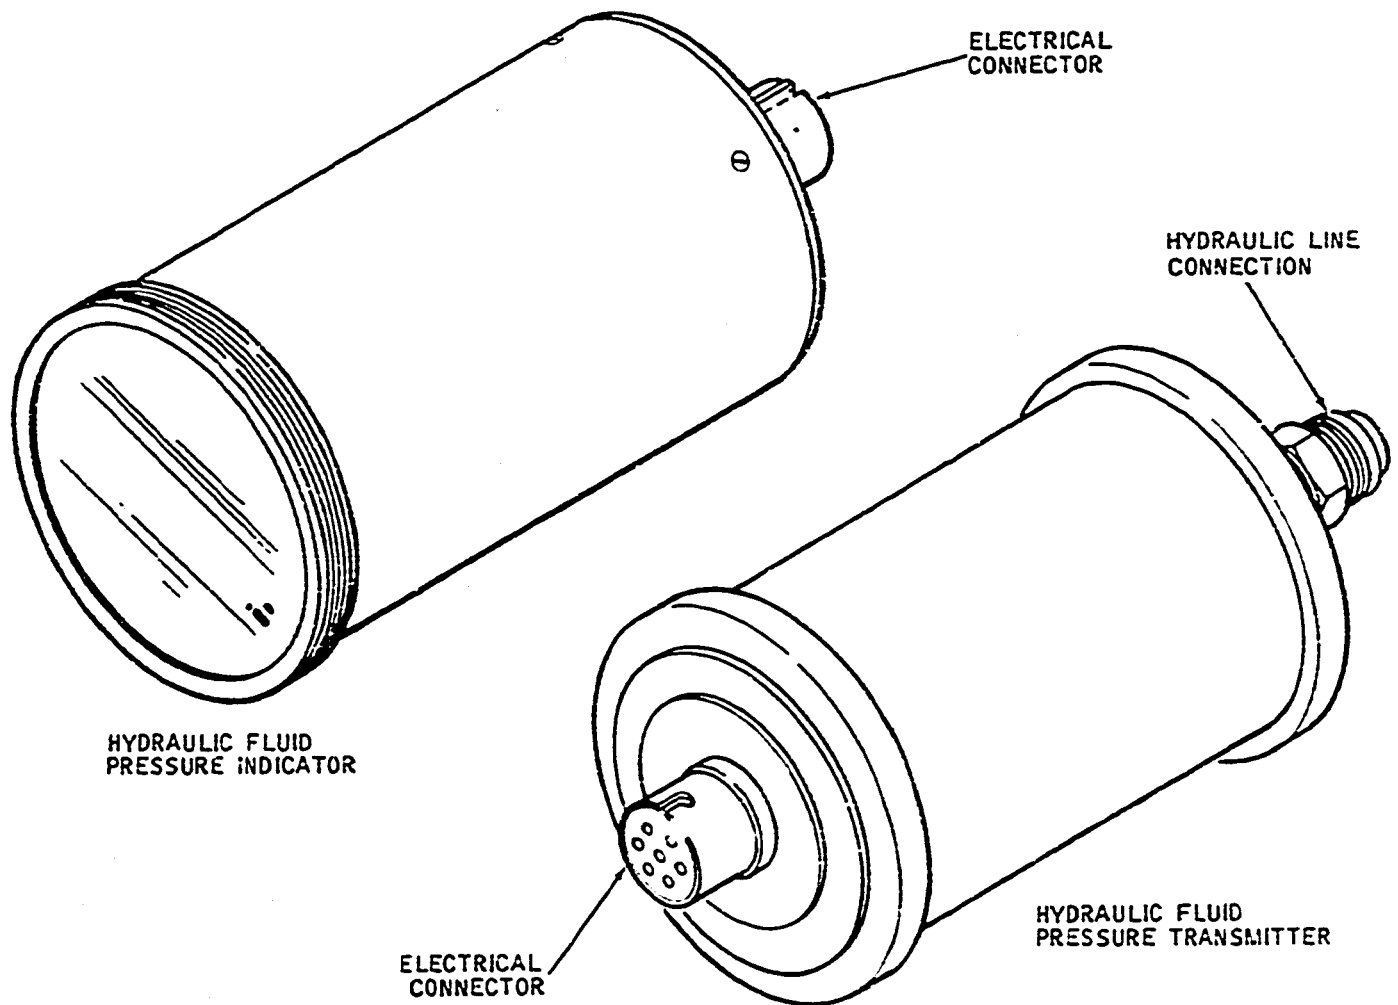

Hydraulic Fluid Pressure Indicating  
 System -- Schematic  
 Figure 3

May 1/70

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

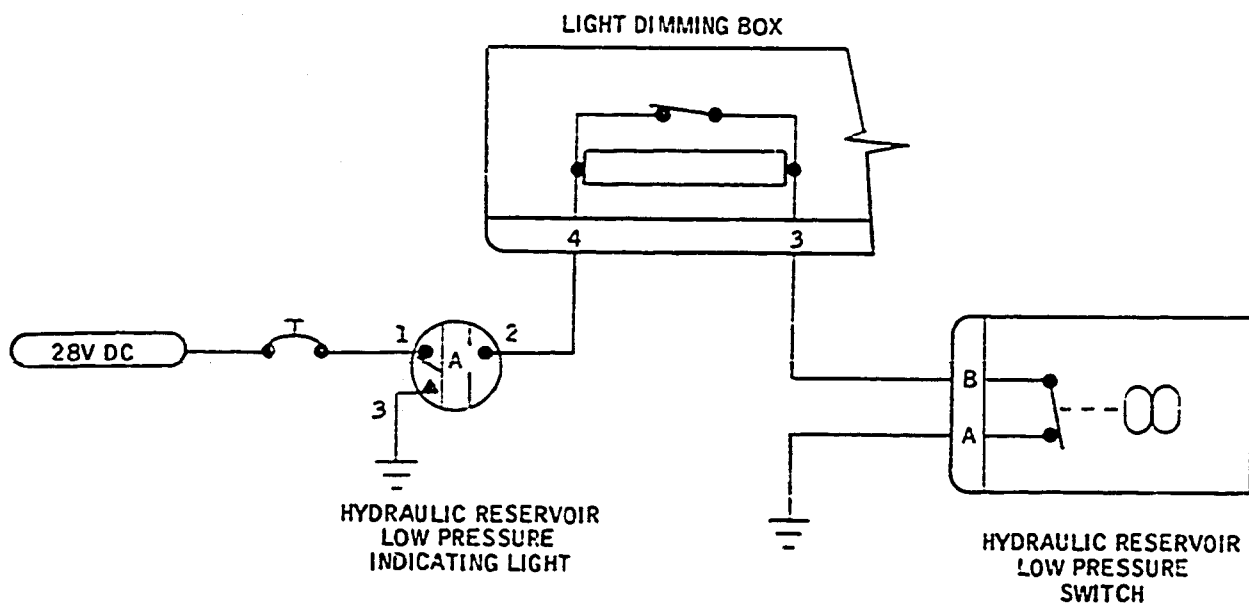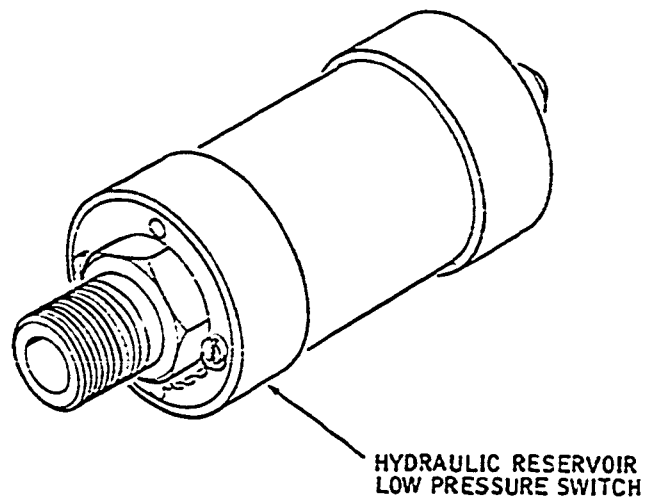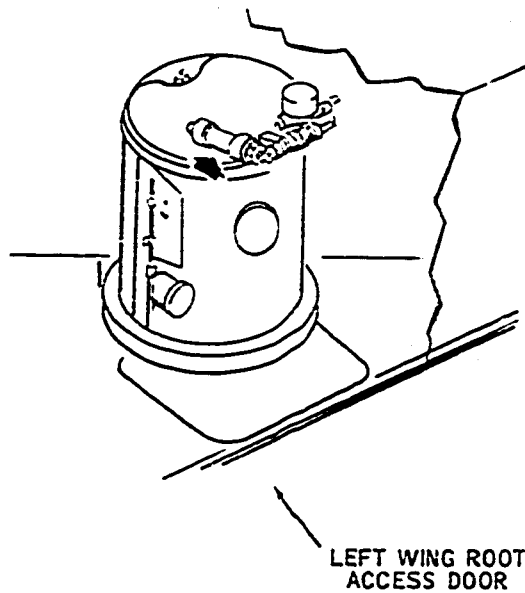

HA2-202


Hydraulic Reservoir Low-Pressure Indicating  
 Light System -- Schematic  
 Figure 4

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

The system consists of a pressure-actuated switch located on the hydraulic reservoir, a light-dimming switch and resistor, and a press-to-test amber indicator light in the flight compartment. The hydraulic reservoir low-pressure indicator light comes on when reservoir air pressure drops below 22 ( $\pm 2$ ) psi and goes off when the pressure reaches 27 ( $\pm 2$ ) psi.

6. Hydraulic Fluid Overtemperature Indicating Light System (See Figure 5.)

- A. The hydraulic fluid overtemperature indicating light system provides a visual indication of overheated hydraulic fluid in the reservoir. The system consists of a dimmable, amber, press-to-test indicator light (see Chapter 31 for location), and a temperature-sensitive switch installed in the hydraulic reservoir. The placard on the cap of the indicator light reads hydraulic oil temperature. If the hydraulic fluid reaches an over-temperature condition, the temperature-sensitive switch will cause the indicator light to come on. The switch closes when the temperature reaches 71°C to 82°C (160°F to 180°F).

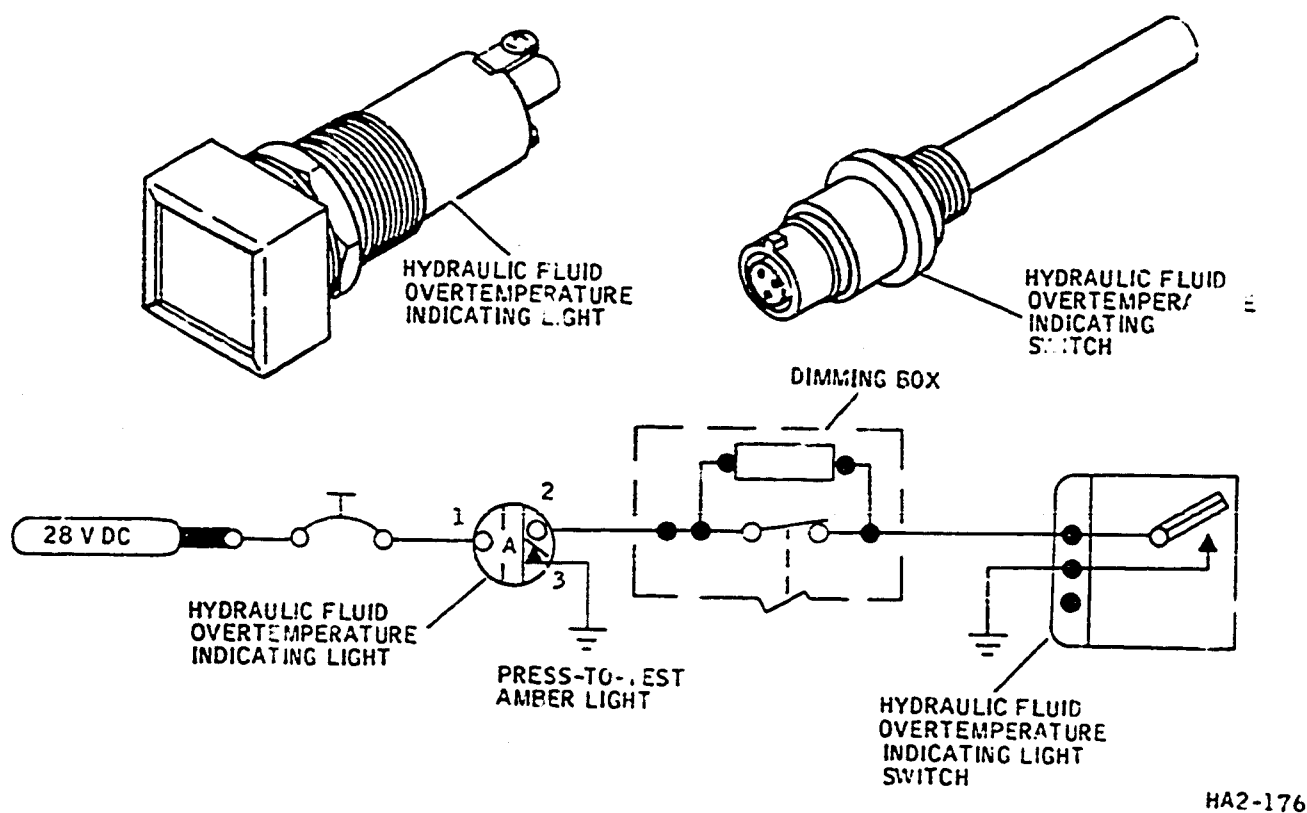


Hydraulic Fluid Overtemperature Indicating  
Light System -- Schematic  
Figure 5

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

7. Emergency Hydraulic Reservoir Low Level Indicating Light System (See Figure 6.)

- A. The emergency hydraulic reservoir low level indicating light system provides a visual indication in the flight compartment if the fluid level in the auxiliary hydraulic pump alternate reservoir drops to approximately 0.8 US gallons (0.666 Imperial gallons, 3.15 liters). The system consists of a float-actuated, 2-position switch located on the alternate reservoir, an indicator light located in the flight compartment, and the wiring required to connect the system. When fluid level in the alternate reservoir drops below 0.8 US gallons, the float lowers, closing the switch, and the indicator light comes on. When the fluid level rises above 0.8 US gallons, the float rises, opening the switch, and the light goes out.

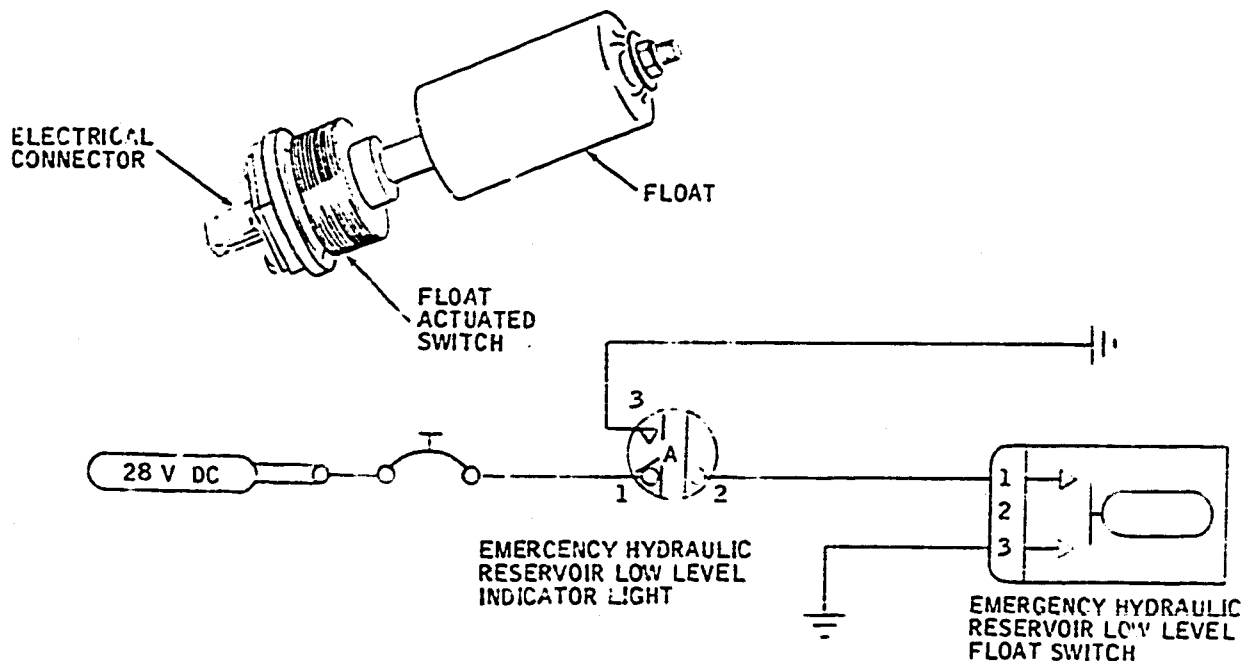

HA2-177

Emergency Hydraulic Reservoir Low Level  
Indicating System -- Schematic  
Figure 6

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

INDICATING - DESCRIPTION AND OPERATION

1. General



A. Description

- (1) Indicating circuits for the hydraulic power system provide indications in the flight compartment of the status of the hydraulic power system during operation. Five separate indications are provided; three (hydraulic fluid quantity, temperature, and pressure) are presented on indicating gages and four (hydraulic reservoir low pressure, hydraulic fluid overtemperature, emergency reservoir fluid level, and hydraulic pump low pressure) are presented by indicating lights.

2. Hydraulic Fluid Quantity Indicating System (See Figure 1.)

- A. The hydraulic fluid quantity indicating system consists of a ratiometer-type indicator, a tank unit (transmitter) bolted to an external flanged adapter on the reservoir, and interconnecting wiring. Changes in the fluid level in the hydraulic system reservoir are followed by a float. The motion of the float is transmitted by means of a linkage arrangement, to the contact arm (wiper arm) of a potentiometer inside of the head of the transmitter. The potentiometer is wired to the indicator. The indicator consists of a rotor surrounded by three electromagnets. As the potentiometer contact arm moves, the indicator rotor is positioned accordingly. The indicator pointer is attached directly to the rotor and thus shows liquid quantity. The indicator is marked hydraulic oil quantity.
- B. When the hydraulic reservoir is full, the fluid quantity indicator in the flight compartment pegs at a point equivalent to 11.5 US gallons (9.56 Imperial gallons, 43.52 liters). There are 1.4 US gallons (1.16 Imperial gallons, 5.29 liters) in the reservoir not recorded; as a result, the indicator does not move until this amount of fluid is depleted.
- C. In operation, the voltage across E1 is constant. The position of the contact arm (wiper arm) in the transmitter determines the voltage across E2 and E3. When the contact arm in the transmitter is moved in the R+ direction, the voltage across coil E2 is increased while the voltage across E3 is decreased. When the contact arm is moved in the R- direction, the opposite effect takes place. From these voltages, magnetic flux is produced in each coil proportional to the voltage drop across the coil. The electrical circuit causes the resultant of the three coil fluxes to rotate in a clockwise direction, as the contact arm is moved toward the R- position. The permanent magnet (M) reacts with the resultant flux, producing a torque which causes the magnet to rotate and become magnetically aligned with the resultant coil flux. Moderate supply voltage variation does not affect the positioning of the pointer on the indicator scale. A voltage variation affects each of the coils proportionately, therefore affecting only the magnitude of the resultant flux, but not the direction. When the system power is off, a magnet in the indicator pulls the pointer off the scale.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

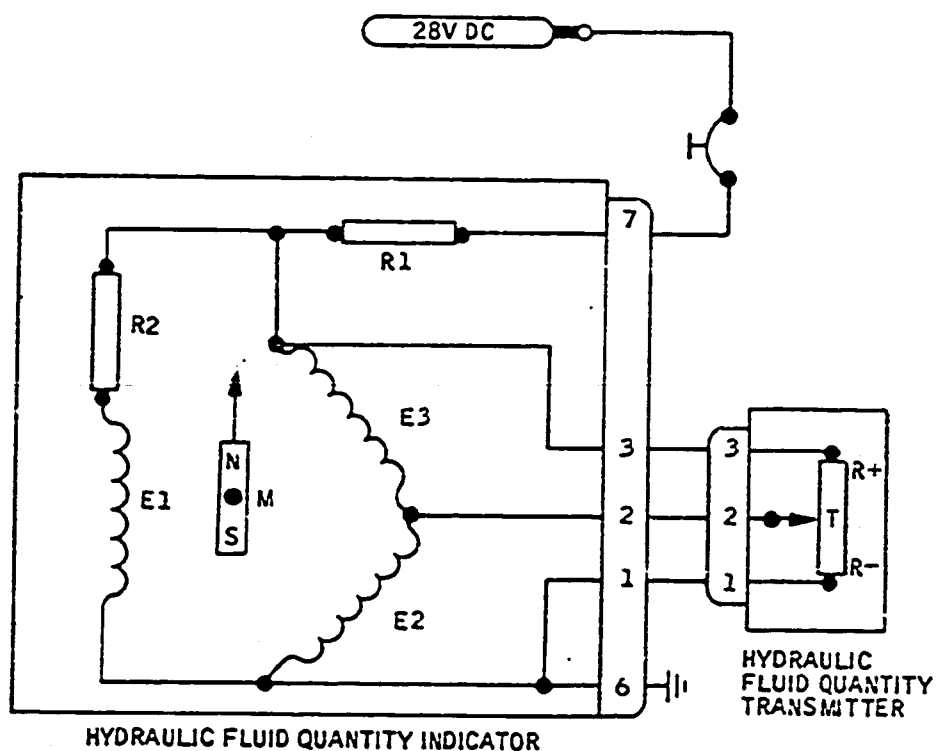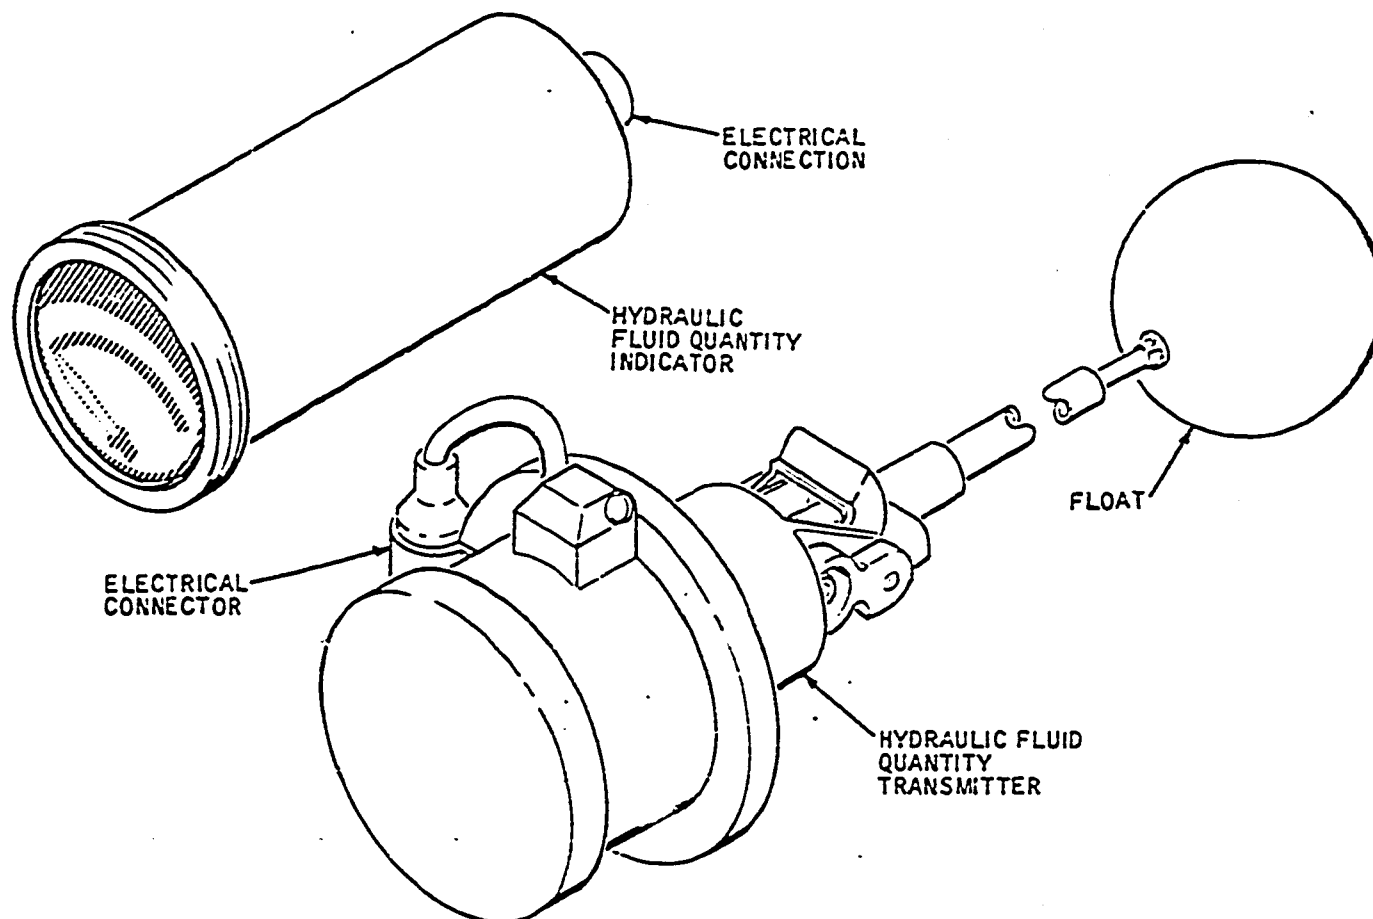

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

3. Hydraulic Fluid Temperature Indicating System (See Figure 2.)

- A. The hydraulic fluid temperature indicating system is the ratiometer-type which provides an indication of hydraulic fluid temperature in the reservoir. The system consists of a temperature bulb installed in the reservoir, and an indicator in the flight compartment.
- B. The hydraulic fluid temperature indicator operates on the electrical bridge principle, with the temperature bulb forming one leg of the bridge circuit. The indicator armature has two coils turning in the air gap of permanent magnets. A large deflecting coil functions much the same as a galvanometer. A small restoring coil is connected in series with one leg of the bridge and opposes the motion of the deflecting coil. Three hairsprings connect the coils to the circuit; one is common to both coils. Two slide-wire potentiometers are provided; one adjusts calibration at center scale and the other expands or contracts the scale ends. When deenergized, a spring-operated device returns the pointer to a position below the scale arc. The indicator is calibrated from  $-50^{\circ}\text{C}$  to  $+150^{\circ}\text{C}$  ( $-58^{\circ}\text{F}$  to  $302^{\circ}\text{F}$ ). The temperature bulb has a range of  $-70^{\circ}\text{C}$  to  $+300^{\circ}\text{C}$  ( $-94^{\circ}\text{F}$  to  $572^{\circ}\text{F}$ ).



4. Hydraulic Fluid Pressure Indicating System (See Figure 3.)

- A. The hydraulic fluid pressure indicating system is the synchro-type and indicates the fluid pressure in the hydraulic power system. The system consists of an indicator, located in the flight compartment, and a transmitter. The transmitter is located in the upper right side of the nosewheel well and is connected by tubing to the hydraulic system pressure lines.
- B. The hydraulic fluid pressure indicator consists of a pointer mounted on the shaft of a synchro repeater and is contained within a nonhermetically sealed aluminum case. The indicator is electrically connected to a 28-vac, 400-cycle power source and to a remote, synchro-type pressure transmitter. The indicator is internally lighted by a 5.4-volt lamp bulb.
- C. The stator and rotor of the synchro repeater are electrically connected in parallel to the stator and rotor of the remote pressure transmitter. When both units are energized from the same source, the repeater rotor assumes an identical position to that of the transmitter rotor, which is positioned by action of hydraulic pressure. Thus the indicator indicates the pressure on the dial which is calibrated in psig from 0 to 4 times 1000. If the system electrical power fails, the pointer tends to remain at the last indicated position. A direct-reading gage, located on the hydraulic system accumulator in the left main gear wheel well, also indicates the hydraulic system pressure.

5. Hydraulic Reservoir Low-Pressure Indicating Light System (See Figure 4.)

- A. The hydraulic reservoir low-pressure indicating light system provides a visual indication of below normal air pressure in the hydraulic reservoir. The system consists of a pressure-actuated switch located on the hydraulic



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

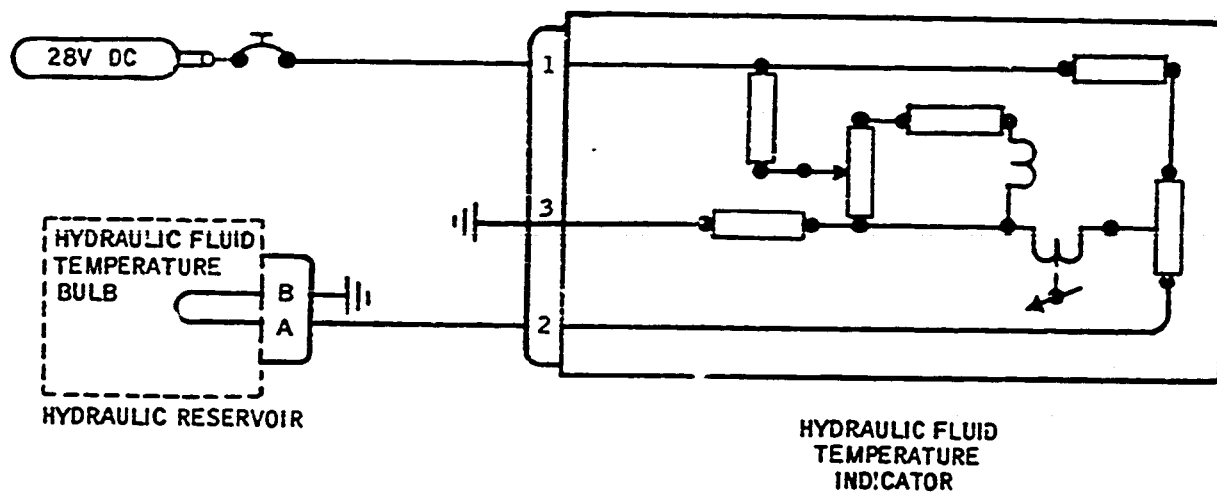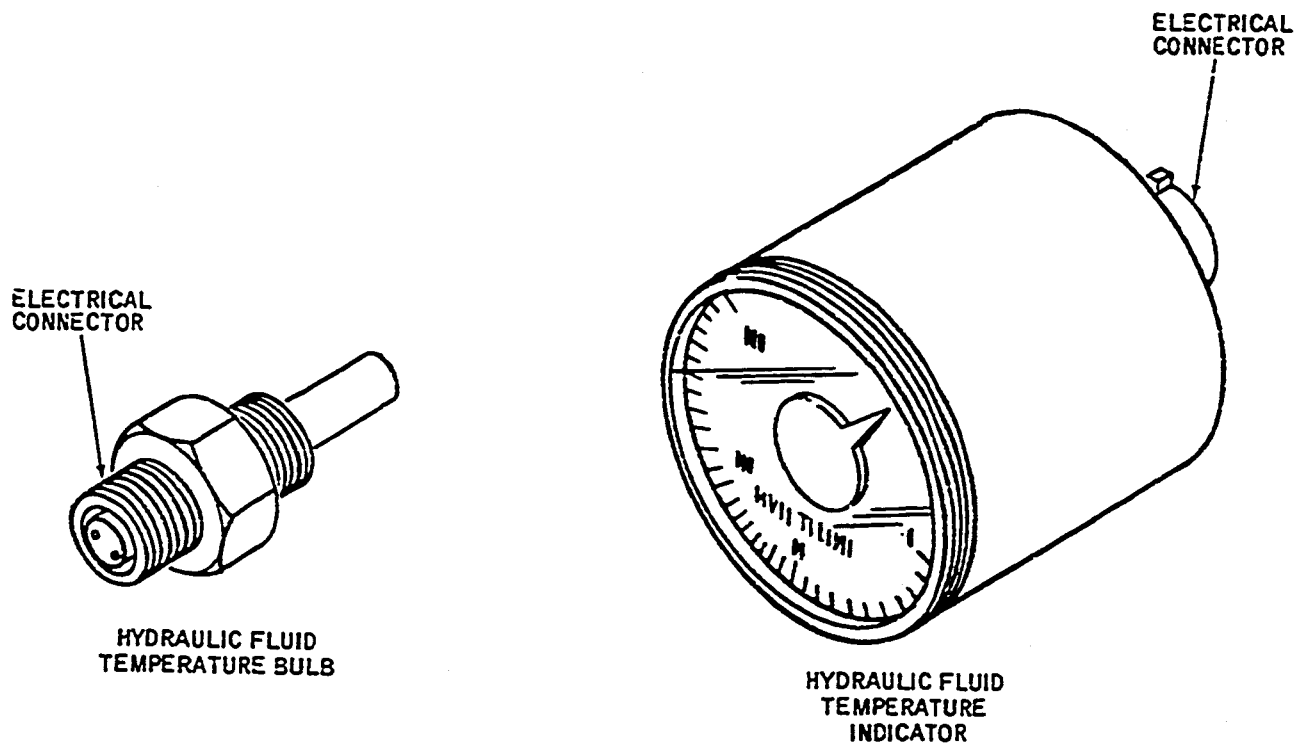

HA2-152



DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

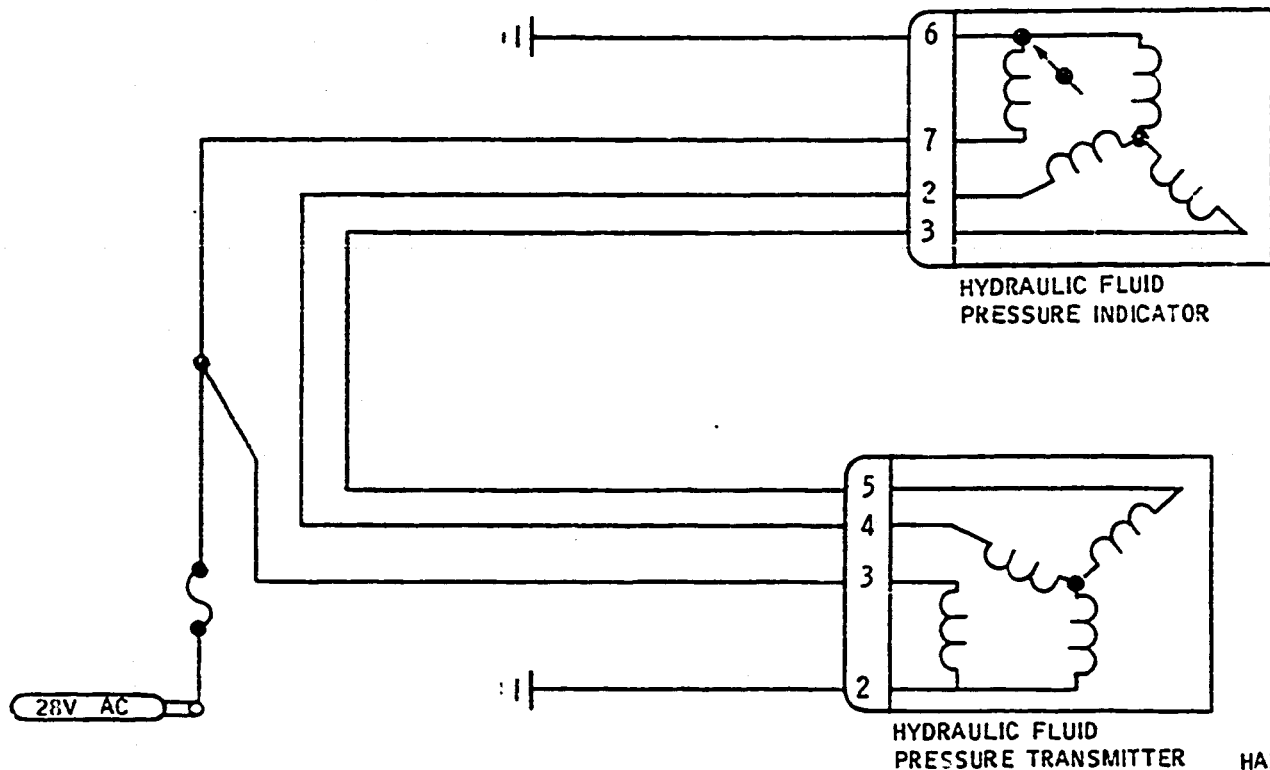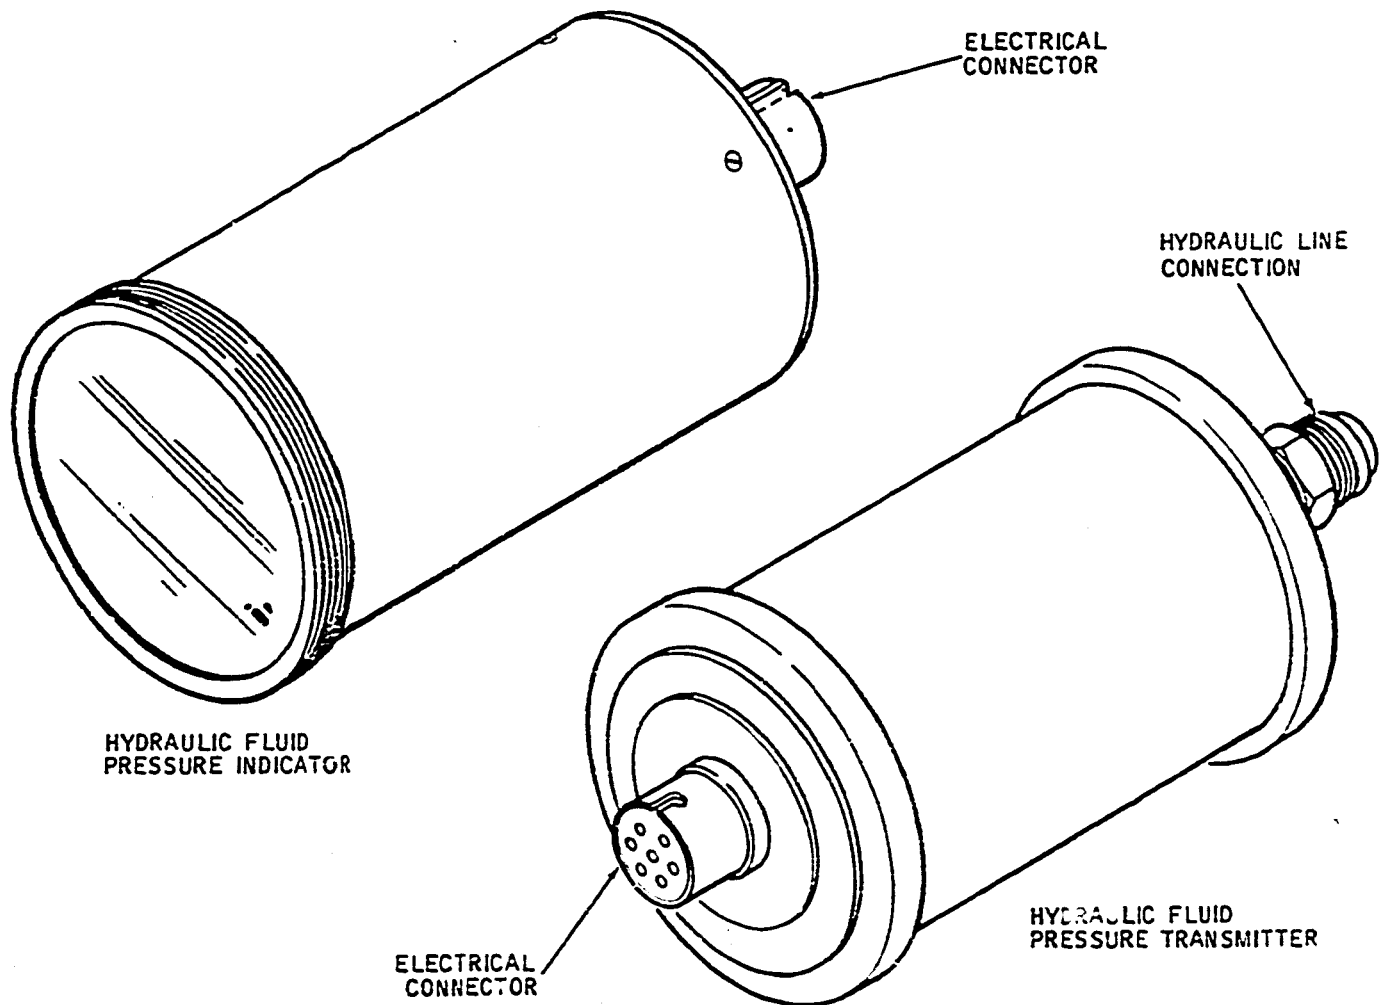


Hydraulic Fluid Pressure Indicating  
 System -- Schematic  
 Figure 3

HA2-153


May 1/70

29-30-0  
 CODE 8  
 Page 5


DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

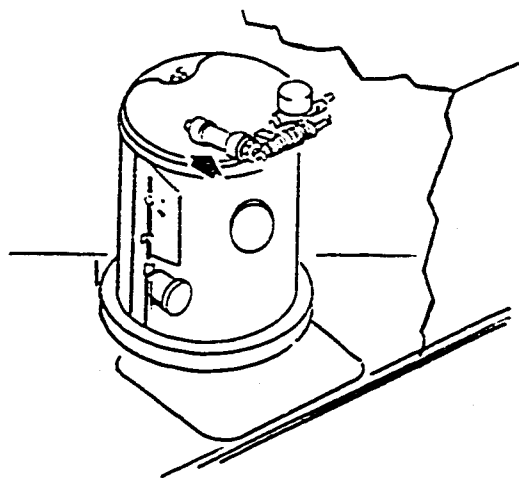

LEFT WING ROOT  
ACCESS DOOR

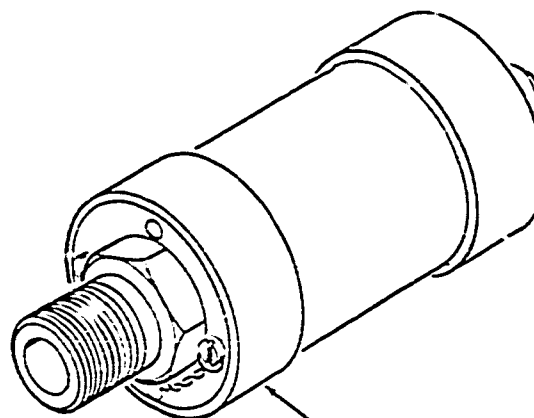

HYDRAULIC RESERVOIR  
LOW PRESSURE SWITCH

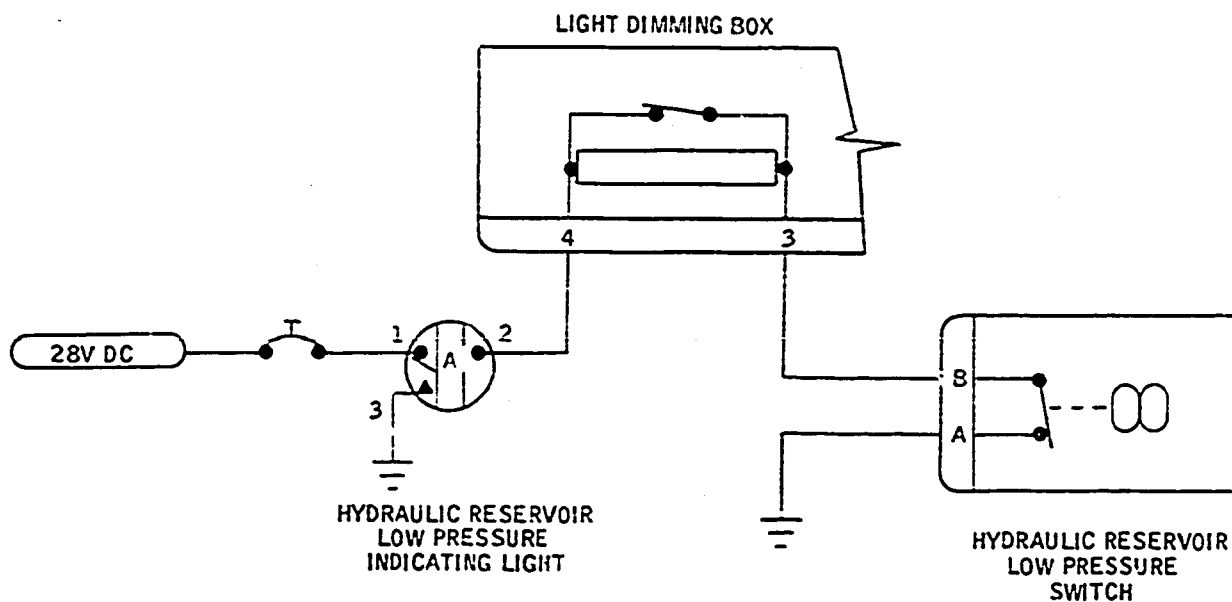

HA2-202

29-30-0  
 CODE 8  
 Page 6

Hydraulic Reservoir Low-Pressure Indicating  
 Light System -- Schematic  
 Figure 4


May 1/70

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

reservoir, a light-dimming switch and resistor, and a press-to-test amber indicator light in the flight compartment. The hydraulic reservoir low-pressure indicator light comes on when reservoir air pressure drops below 22 ( $\pm 2$ ) psi and goes off when the pressure reaches 27 ( $\pm 2$ ) psi.

6. Hydraulic Fluid Overtemperature Indicating Light System (See Figure 5.)

- A. The hydraulic fluid overtemperature indicating light system provides a visual indication of overheated hydraulic fluid in the reservoir. The system consists of a dimmable, amber, press-to-test indicator light (see Chapter 31 for location), and a temperature-sensitive switch installed in the hydraulic reservoir. The placard on the cap of the indicator light reads hydraulic oil temperature. If the hydraulic fluid reaches an overtemperature condition, the temperature-sensitive switch will cause the indicator light to come on. The switch closes when the temperature reaches 71°C to 82°C (160°F to 180°F).

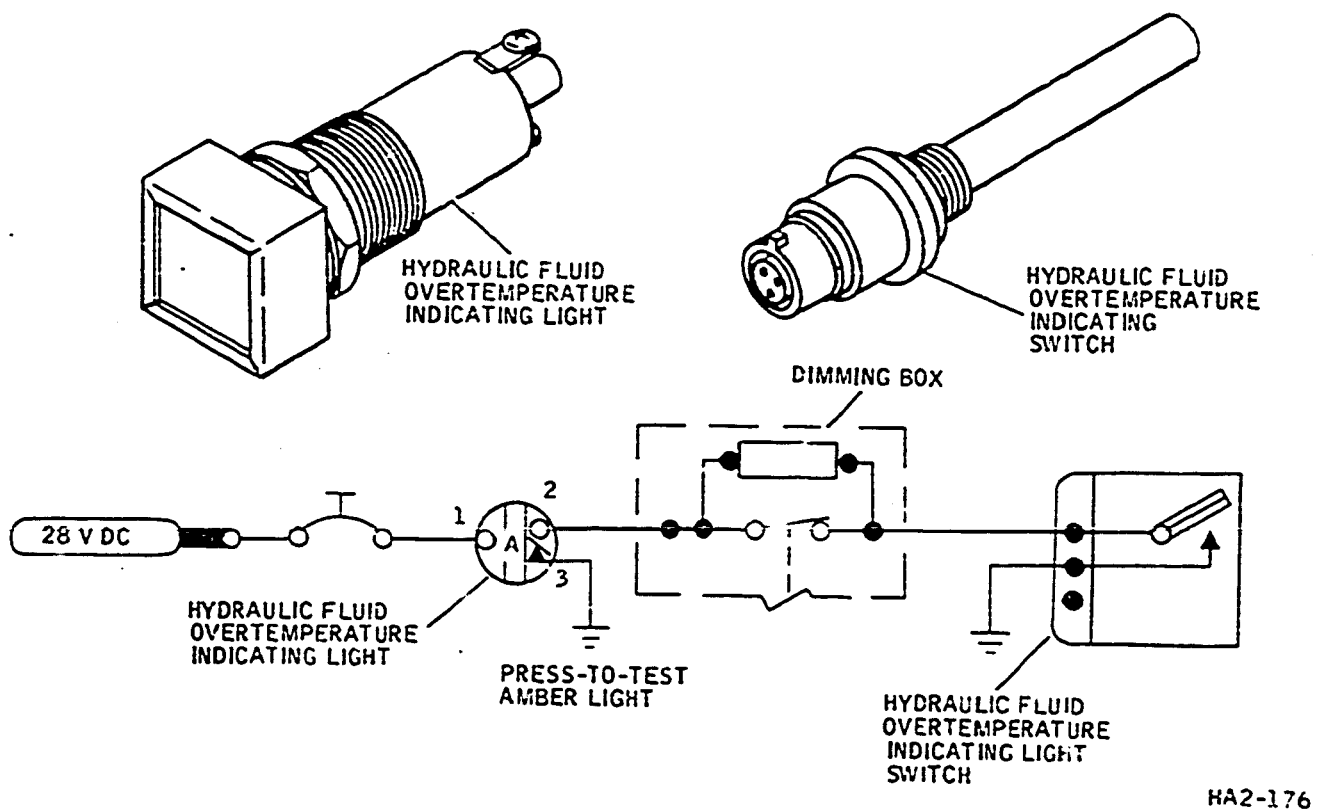


Hydraulic Fluid Overtemperature Indicating  
Light System -- Schematic  
Figure 5

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

7. Emergency Hydraulic Reservoir Low Level Indicating Light System (See Figure 6.)

- A. The emergency hydraulic reservoir low level indicating light system provides a visual indication in the flight compartment if the fluid level in the auxiliary hydraulic pump alternate reservoir drops to approximately 0.8 US gallons (0.666 Imperial gallons, 3.15 liters). The system consists of a float-actuated, 2-position switch located on the alternate reservoir, an indicator light located in the flight compartment, and the wiring required to connect the system. When fluid level in the alternate reservoir drops below 0.8 US gallons, the float lowers, closing the switch, and the indicator light comes on. When the fluid level rises above 0.8 US gallons, the float rises, opening the switch, and the light goes out.

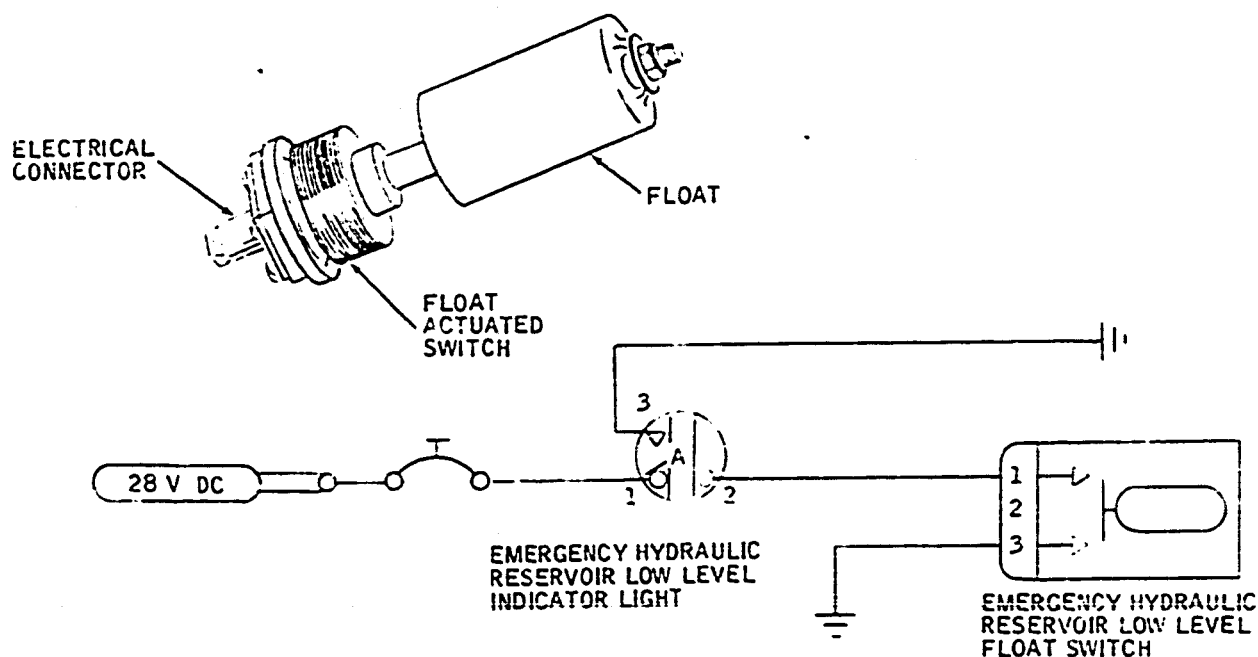


HA2-177

Emergency Hydraulic Reservoir Low Level  
Indicating System -- Schematic  
Figure 6

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

8. Engine-Driven Hydraulic Pump Low Pressure Indicating Light System (See Figure 7.)

- A. The engine-driven hydraulic pump low-pressure indicating light system provides a visual indication of low-pressure at the output of either engine-driven pump. The system consists of two pressure-actuated switches, indicating light dimming boxes, and two press-to-test amber indicating lights. One switch is located at each engine-driven pump. The indicating lights are located in the flight compartment. When either of the engine-driven hydraulic pump bypass switches is in the on position, the corresponding engine-driven pump indicating light comes on if the output pressure of the corresponding pump drops below 1500 ( $\pm 100$ ) psig.

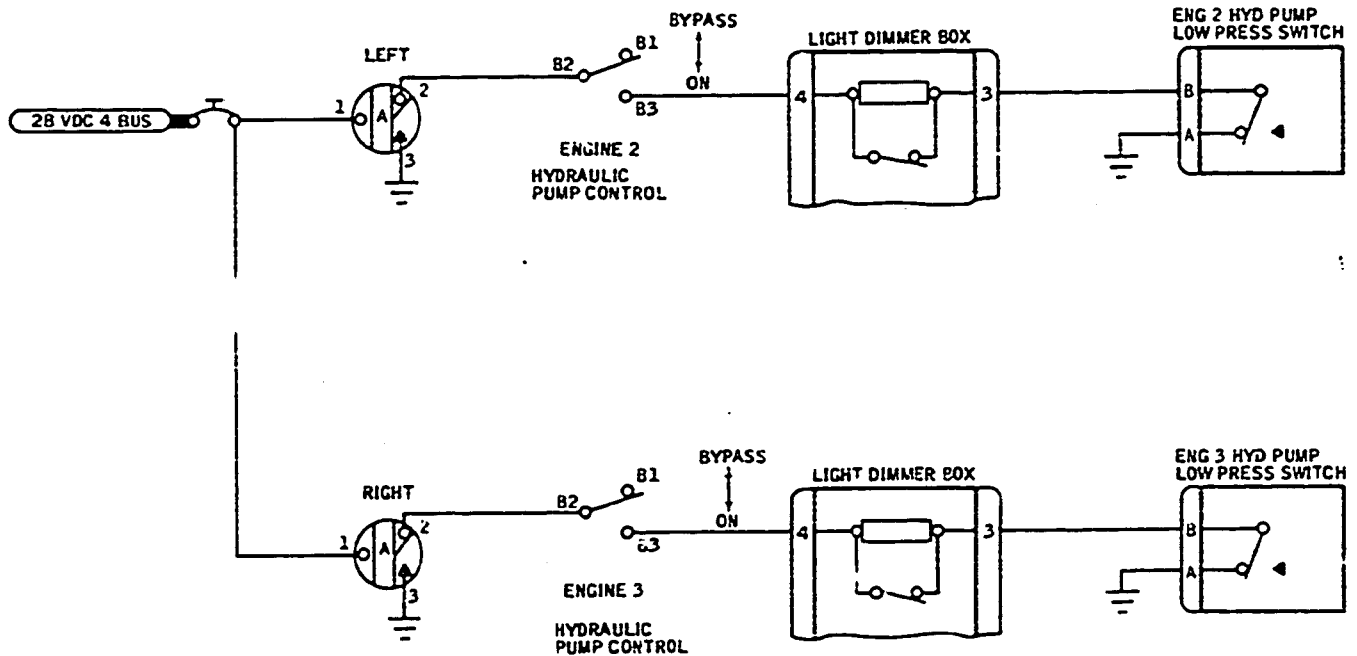

HA2-1389

Engine-Driven Hydraulic Pump Low Pressure  
 Indicating Light System -- Schematic  
 Figure 7

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

INDICATING - TROUBLESHOOTING

1. Troubleshooting

Possible Causes	Isolation Procedure	Correction
<b>A. HYDRAULIC FLUID QUANTITY INDICATOR NEEDLE STICKS</b>		
(1) Friction: Dirt in indicator bearings Damaged jewels Damaged pivots	Check indicating system with indicator known to be good.	Replace faulty indicator.
<b>B. HYDRAULIC FLUID QUANTITY INDICATOR DOES NOT OPERATE</b>		
(1) Faulty indicator	Check indicating system with indicator known to be good.	Replace faulty indicator.
(2) Faulty transmitter	Check indicating system with transmitter known to be good.	Replace faulty transmitter.
(3) Faulty hydraulic fluid quantity circuit breaker	Check circuit breaker for continuity.	Replace faulty circuit breaker.
(4) Faulty inter-connecting wiring between indicator and transmitter	Check continuity of wiring.	Repair or replace faulty wiring.
<b>C. HYDRAULIC FLUID TEMPERATURE INDICATOR IS INOPERATIVE</b>		
(1) Faulty indicator	Check indicating system with indicator known to be good.	Replace faulty indicator.
(2) Faulty temperature bulb	Check indicating system with temperature bulb known to be good. Do not remove bulb from reservoir until proven faulty.	Replace faulty temperature bulb.

Jun 15/67

Printed in U.S.A.

29-30-0  
CODE 1  
Page 101

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
<b>C. HYDRAULIC FLUID TEMPERATURE INDICATOR IS INOPERATIVE (Continued)</b>		
(3) Faulty hydraulic oil temperature circuit breaker	Check circuit breaker for continuity.	Replace faulty circuit breaker.
(4) Faulty inter-connecting wiring between indicator and temperature bulb	Check continuity of wiring.	Repair or replace faulty wiring.
<b>D. HYDRAULIC FLUID TEMPERATURE INDICATOR IS ERRATIC</b>		
(1) Faulty indicator	Check indicating system with indicator known to be good.	Replace faulty indicator.
(2) Faulty temperature bulb	Check indicating system with temperature bulb known to be good. Do not remove bulb from reservoir until proven faulty.	Replace faulty temperature bulb.
(3) Faulty inter-connecting wiring between indicator and resistance bulb	Check continuity of wiring.	Repair or replace faulty wiring.
<b>E. HYDRAULIC FLUID PRESSURE INDICATOR IS INOPERATIVE (HYDRAULIC POWER ON)</b>		
(1) Faulty indicator	Check indicating system with pressure indicator known to be good.	Replace faulty indicator.
(2) Faulty hydraulic fluid pressure transmitter	Check indicating system with pressure transmitter known to be good.	Replace faulty transmitter.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
<b>E. HYDRAULIC FLUID PRESSURE INDICATOR IS INOPERATIVE (HYDRAULIC POWER ON) (Continued)</b>		
(3) Faulty hydraulic fluid pressure circuit breaker	Check circuit breaker for continuity.	Replace faulty circuit breaker.
(4) Faulty inter-connecting wiring between indicator and transmitter	Check continuity of wiring.	Repair or replace faulty wiring.
<b>F. LOW READINGS GIVEN ON PRESSURE INDICATOR</b>		
(1) Excessive leakage at transmitter inlet port	Check hydraulic pressure line connection at transmitter.	Tighten connections.
(2) Linkage between arbor and bourdon tube in transmitter too short	Check indicating system with transmitter known to be good.	Replace faulty transmitter.
<b>G. HIGH READINGS GIVEN ON PRESSURE INDICATOR</b>		
(1) Linkage between arbor and bourdon tube in transmitter too long	Check indicating system with transmitter known to be good.	Replace faulty transmitter.
<b>H. RESERVOIR LOW-PRESSURE INDICATOR LIGHT IS INOPERATIVE</b>		
(1) Defective bulb	Check bulb.	Replace defective bulb.

Jun 15/67

Printed in U.S.A.

29-30-0  
CODE 1  
Page 103



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
<b>H. RESERVOIR LOW-PRESSURE INDICATOR LIGHT IS INOPERATIVE (Continued)</b>		
(2) Faulty low-pressure switch on reservoir	Check low-pressure switch circuit using switch known to be good.	Replace defective switch.
(3) Faulty wiring in indicating light circuit	Check continuity of wiring.	Repair or replace faulty wiring.
<b>I. HYDRAULIC FLUID OVERTEMPERATURE INDICATING LIGHT SYSTEM IS INOPERATIVE</b>		
(1) Indicating light bulb burned out	Check light bulb by press-to-test.	Replace bulb.
(2) Faulty over-temperature switch	Check indicating circuit with overtemperature switch known to be good.	Replace faulty switch.
(3) Faulty hydraulic fluid overtemperature circuit breaker	Check circuit breaker for continuity.	Replace defective circuit breaker.
(4) Faulty inter-connecting wiring between overtemperature switch and indicating light	Check continuity of wiring.	Repair or replace faulty wiring.
<b>J. EMERGENCY FLUID LEVEL INDICATING LIGHT STAYS ON AT ALL TIMES</b>		
(1) Low fluid level in alternate reservoir	Check fluid level in reservoir sight gage.	Fill reservoir (see 29-20-8). If reservoir does not fill when wing flaps are cycled, check for stoppage of wing flap return lines.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
<b>J. EMERGENCY FLUID LEVEL INDICATING LIGHT STAYS ON AT ALL TIMES (Continued)</b>		
(2) Faulty float switch	Remove electrical connector from switch and check continuity between pins 1 and 3. Circuit should be open with reservoir full.	Replace faulty float switch.
(3) Faulty inter-connecting wiring between switch and indicating light	Check continuity of wiring.	Repair or replace faulty wiring.
(4) Faulty press-to-test fixture light	Check light fixture for shorts or grounds.	Replace faulty fixture light.
<b>K. EMERGENCY FLUID LEVEL LIGHT DOES NOT COME ON WHEN FLUID LEVEL IS BELOW 0.8 GALLON</b>		
(1) Faulty light bulb	Check light bulb by press-to-test.	Replace faulty bulb.
(2) Faulty float switch	Remove electrical connector from switch, and check continuity between pins 1 and 3. Circuit should be closed with reservoir level below approximately 0.8 gallon.	Replace faulty float switch.
(3) Faulty inter-connecting wiring between float switch and indicating light	Check continuity of wiring.	Repair or replace faulty wiring.
(4) Faulty press-to-test light fixture	Check light fixture for open circuit.	Replace faulty indicator light fixture.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

INDICATING - TROUBLESHOOTING

1. Troubleshooting

Possible Causes	Isolation Procedure	Correction
<b>A. HYDRAULIC FLUID QUANTITY INDICATOR NEEDLE STICKS</b>		
(1) Friction: Dirt in indicator bearings Damaged jewels Damaged pivots	Check indicating system with indicator known to be good.	Replace faulty indicator.
<b>B. HYDRAULIC FLUID QUANTITY INDICATOR DOES NOT OPERATE</b>		
(1) Faulty indicator	Check indicating system with indicator known to be good.	Replace faulty indicator.
(2) Faulty transmitter	Check indicating system with transmitter known to be good.	Replace faulty transmitter.
(3) Faulty hydraulic fluid quantity circuit breaker	Check circuit breaker for continuity.	Replace faulty circuit breaker.
(4) Faulty inter-connecting wiring between indicator and transmitter	Check continuity of wiring.	Repair or replace faulty wiring.
<b>C. HYDRAULIC FLUID TEMPERATURE INDICATOR IS INOPERATIVE</b>		
(1) Faulty indicator	Check indicating system with indicator known to be good.	Replace faulty indicator.
(2) Faulty temperature bulb	Check indicating system with temperature bulb known to be good. Do not remove bulb from reservoir until proven faulty.	Replace faulty temperature bulb.

Jun 15/67

Printed in U.S.A.

29-30-0  
CODE 2  
Page 101

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
<b>C. HYDRAULIC FLUID TEMPERATURE INDICATOR IS INOPERATIVE (Continued)</b>		
(3) Faulty hydraulic oil temperature circuit breaker	Check circuit breaker for continuity.	Replace faulty circuit breaker.
(4) Faulty inter-connecting wiring between indicator and temperature bulb	Check continuity of wiring.	Repair or replace faulty wiring.
<b>D. HYDRAULIC FLUID TEMPERATURE INDICATOR IS ERRATIC</b>		
(1) Faulty indicator	Check indicating system with indicator known to be good.	Replace faulty indicator.
(2) Faulty temperature bulb	Check indicating system with temperature bulb known to be good. Do not remove bulb from reservoir until proven faulty.	Replace faulty temperature bulb.
(3) Faulty inter-connecting wiring between indicator and resistance bulb	Check continuity of wiring.	Repair or replace faulty wiring.
<b>E. HYDRAULIC FLUID PRESSURE INDICATOR IS INOPERATIVE (HYDRAULIC POWER ON)</b>		
(1) Faulty indicator	Check indicating system with pressure indicator known to be good.	Replace faulty indicator.
(2) Faulty hydraulic fluid pressure transmitter	Check indicating system with pressure transmitter known to be good.	Replace faulty transmitter.
(3) Faulty hydraulic fluid pressure circuit breaker	Check circuit breaker for continuity.	Replace faulty circuit breaker.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
<b>E. HYDRAULIC FLUID PRESSURE INDICATOR IS INOPERATIVE (HYDRAULIC POWER ON) (Continued)</b>		
(4) Faulty inter-connecting wiring between indicator and transmitter	Check continuity of wiring.	Repair or replace faulty wiring.
<b>F. LOW READINGS GIVEN ON PRESSURE INDICATOR</b>		
(1) Excessive leakage at transmitter inlet port	Check hydraulic pressure line connection at transmitter.	Tighten connections.
(2) Linkage between arbor and bourdon tube in transmitter too short	Check indicating system with transmitter known to be good.	Replace faulty transmitter.
<b>G. HIGH READINGS GIVEN ON PRESSURE INDICATOR</b>		
(1) Linkage between arbor and bourdon tube in transmitter too long	Check indicating system with transmitter known to be good.	Replace faulty transmitter.
<b>H. RESERVOIR LOW-PRESSURE INDICATOR LIGHT IS INOPERATIVE</b>		
(1) Defective bulb	Check bulb.	Replace defective bulb.
(2) Faulty low-pressure switch on reservoir	Check low-pressure switch circuit using switch known to be good.	Replace defective switch.
(3) Faulty wiring in indicating light circuit	Check continuity of wiring.	Repair or replace faulty wiring.

Jun 15/67

Printed in U.S.A.

29-30-0  
CODE 2  
Page 103

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
<b>I. HYDRAULIC FLUID OVERTEMPERATURE INDICATING LIGHT SYSTEM IS INOPERATIVE</b>		
(1) Indicating light bulb burned out	Check light bulb by press-to-test.	Replace bulb.
(2) Faulty over-temperature switch	Check indicating circuit with overtemperature switch known to be good.	Replace faulty switch.
(3) Faulty hydraulic fluid over-temperature circuit breaker	Check circuit breaker for continuity.	Replace defective circuit breaker.
(4) Faulty inter-connecting wiring between over-temperature switch and indicating light	Check continuity of wiring.	Repair or replace faulty wiring.
<b>J. EMERGENCY FLUID LEVEL INDICATING LIGHT STAYS ON AT ALL TIMES</b>		
(1) Low fluid level in alternate reservoir	Check fluid level in reservoir sight gage.	Fill reservoir (see 29-20-8). If reservoir does not fill when wing flaps are cycled, check for stoppage of wing flap return lines.
(2) Faulty float switch	Remove electrical connector from switch and check continuity between pins 1 and 3. Circuit should be open with reservoir full.	Replace faulty float switch.
(3) Faulty inter-connecting wiring between switch and indicating light	Check continuity of wiring.	Repair or replace faulty wiring.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
<b>J. EMERGENCY FLUID LEVEL INDICATING LIGHT STAYS ON AT ALL TIMES (Continued)</b>		
(4) Faulty press-to-test fixture light	Check light fixture for shorts or grounds.	Replace faulty fixture light.
<b>K. EMERGENCY FLUID LEVEL LIGHT DOES NOT COME ON WHEN FLUID LEVEL IS BELOW 0.8 GALLON</b>		
(1) Faulty light bulb	Check light bulb by press-to-test.	Replace faulty bulb.
(2) Faulty float switch	Remove electrical connector from switch, and check continuity between pins 1 and 3. Circuit should be closed with reservoir level below approximately 0.8 gallon.	Replace faulty float switch.
(3) Faulty inter-connecting wiring between float switch and indicating light	Check continuity of wiring.	Repair or replace faulty wiring.
(4) Faulty press-to-test light fixture	Check light fixture for open circuit.	Replace faulty indicator light fixture.
<b>L. ENGINE PUMP LOW-PRESSURE INDICATING LIGHTS INOPERATIVE</b>		
(1) Defective bulb in indicating light	Check the bulb.	Replace defective light bulb.
(2) Engine pump bypass switch is in BYPASS position	Check position of bypass switch.	Place bypass switch in ON position.

Jun 15/67

Printed in U.S.A.

29-30-0  
CODE 2  
Page 105

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
L. ENGINE PUMP LOW-PRESSURE INDICATING LIGHTS INOPERATIVE (Continued)		
(3) Faulty low-pressure switch on engine pump	Check the indicating circuit using a switch known to be good.	Replace faulty switch.
(4) Faulty control switch	Check continuity through control switch.	Replace faulty control switch.
(5) Faulty wiring in indicating system	Check continuity of indicating system.	Repair or replace faulty wiring.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

INDICATING - TROUBLESHOOTING

1. Troubleshooting

Possible Causes	Isolation Procedure	Correction
-----------------	---------------------	------------

A. HYDRAULIC FLUID QUANTITY INDICATOR NEEDLE STICKS

(1) Friction: Dirt in indicator bearings Damaged jewels Damaged pivots	Check indicating system with indicator known to be good.	Replace faulty indicator.
---	--	---------------------------

B. HYDRAULIC FLUID QUANTITY INDICATOR DOES NOT OPERATE

(1) Faulty indicator	Check indicating system with indicator known to be good.	Replace faulty indicator.
(2) Faulty transmitter	Check indicating system with transmitter known to be good.	Replace faulty transmitter.
(3) Faulty hydraulic fluid quantity circuit breaker	Check circuit breaker for continuity.	Replace faulty circuit breaker.
(4) Faulty inter-connecting wiring between indicator and transmitter	Check continuity of wiring.	Repair or replace faulty wiring.

C. HYDRAULIC FLUID TEMPERATURE INDICATOR IS INOPERATIVE

(1) Faulty indicator	Check indicating system with indicator known to be good.	Replace faulty indicator.
----------------------	--	---------------------------

Jun 15/67

Printed in U.S.A.

29-30-0  
CODE 3  
Page 101

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
<b>C. HYDRAULIC FLUID TEMPERATURE INDICATOR IS INOPERATIVE (Continued)</b>		
(2) Faulty temperature bulb	Check indicating system with temperature bulb known to be good. Do not remove bulb from reservoir until proven faulty.	Replace faulty temperature bulb.
(3) Faulty hydraulic oil temperature circuit breaker	Check circuit breaker for continuity.	Replace faulty circuit breaker.
(4) Faulty inter-connecting wiring between indicator and temperature bulb	Check continuity of wiring.	Repair or replace faulty wiring.

**D. HYDRAULIC FLUID TEMPERATURE INDICATOR IS ERRATIC**

(1) Faulty indicator	Check indicating system with indicator known to be good.	Replace faulty indicator.
(2) Faulty temperature bulb	Check indicating system with temperature bulb known to be good. Do not remove bulb from reservoir until proven faulty.	Replace faulty temperature bulb.
(3) Faulty inter-connecting wiring between indicator and resistance bulb	Check continuity of wiring.	Repair or replace faulty wiring.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
<b>E. HYDRAULIC FLUID PRESSURE INDICATOR IS INOPERATIVE (HYDRAULIC POWER ON)</b>		
(1) Faulty indicator	Check indicating system with pressure indicator known to be good.	Replace faulty indicator.
(2) Faulty hydraulic fluid pressure transmitter	Check indicating system with pressure transmitter known to be good.	Replace faulty transmitter.
(3) Faulty hydraulic fluid pressure circuit breaker	Check circuit breaker for continuity.	Replace faulty circuit breaker.
(4) Faulty inter-connecting wiring between indicator and transmitter	Check continuity of wiring.	Repair or replace faulty wiring.
<b>F. LOW READINGS GIVEN ON PRESSURE INDICATOR</b>		
(1) Excessive leakage at transmitter inlet port	Check hydraulic pressure line connection at transmitter.	Tighten connections.
(2) Linkage between arbor and bourdon tube in transmitter too short	Check indicating system with transmitter known to be good.	Replace faulty transmitter.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
<b>G. HIGH READINGS GIVEN ON PRESSURE INDICATOR</b>		
(1) Linkage between arbor and bourdon tube in transmitter too long	Check indicating system with transmitter known to be good.	Replace faulty transmitter.
<b>H. HYDRAULIC FLUID OVERTEMPERATURE INDICATING LIGHT SYSTEM IS INOPERATIVE</b>		
(1) Indicating light bulb burned out	Check light bulb by press-to-test.	Replace bulb.
(2) Faulty overtemperature switch	Check indicating circuit with overtemperature switch known to be good.	Replace faulty switch.
(3) Faulty hydraulic fluid overtemperature circuit breaker	Check circuit breaker for continuity.	Replace defective circuit breaker.
(4) Faulty interconnecting wiring between overtemperature switch and indicating light	Check continuity of wiring.	Repair or replace faulty wiring.
<b>I. EMERGENCY FLUID LEVEL INDICATING LIGHT STAYS ON AT ALL TIMES</b>		
(1) Low fluid level in alternate reservoir	Check fluid level in reservoir sight gage.	Fill reservoir (see 29-20-8). If reservoir does not fill when wing flaps are cycled, check for stoppage of wing flap return lines.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
<b>I. EMERGENCY FLUID LEVEL INDICATING LIGHT STAYS ON AT ALL TIMES (Continued)</b>		
(2) Faulty float switch	Remove electrical connector from switch and check continuity between pins 1 and 3. Circuit should be open with reservoir full.	Replace faulty float switch.
(3) Faulty inter-connecting wiring between switch and indicating light	Check continuity of wiring.	Repair or replace faulty wiring.
(4) Faulty press-to-test fixture light	Check light fixture for shorts or grounds.	Replace faulty fixture light.
<b>J. EMERGENCY FLUID LEVEL LIGHT DOES NOT COME ON WHEN FLUID LEVEL IS BELOW 0.8 GALLON</b>		
(1) Faulty light bulb	Check light bulb by press-to-test.	Replace faulty bulb.
(2) Faulty float switch	Remove electrical connector from switch, and check continuity between pins 1 and 3. Circuit should be closed with reservoir level below approximately 0.8 gallon.	Replace faulty float switch.
(3) Faulty inter-connecting wiring between float switch and indicating light	Check continuity of wiring.	Repair or replace faulty wiring.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

Possible Causes	Isolation Procedure	Correction
<hr/>		
J. EMERGENCY FLUID LEVEL LIGHT DOES NOT COME ON WHEN FLUID LEVEL IS BELOW 0.8 GALLON (Continued)		
<hr/>		
(4) Faulty press-to-test light fixture	Check light fixture for open circuit.	Replace faulty indicator light fixture.
<hr/>		

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

INDICATING - MAINTENANCE PRACTICES

1. General

- A. Any time a major component (indicator or transmitter) is replaced, or quantity pressure or temperature indicating systems, is repaired, the affected system should be checked for operation and accuracy. Refer to paragraph 2, 3, or 4 for operational checks of the indicating systems.

2. Inspection/Check Hydraulic Fluid Quantity Indicating System

A. Check Hydraulic Fluid Quantity Indicating System

- (1) Open auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of EPC circuit breaker panel.
- (2) Depressurize hydraulic system (see 29-00).
- (3) Relieve hydraulic reservoir air pressure (see 29-00).
- (4) Drain hydraulic reservoir (see 29-00). Pointer on fluid quantity indicator in flight compartment should be at low end of indicator scale.
- (5) Put 1 gallon (0.83 Imperial gallons, 3.79 liters) of hydraulic fluid into reservoir. Pointer on fluid quantity indicator should just begin to move.

NOTE: All measurements of fluid and positions of indicator are approximate due to a tolerance of  $\pm 5$  percent allowed in system.

- (6) Add an additional 4 gallons (3.33 Imperial gallons, 15.14 liters) of hydraulic fluid to reservoir. Indicator pointer should rise to just past auxiliary range on indicator dial.
- (7) Add an additional 5 gallons (4.16 Imperial gallons, 18.93 liters) of hydraulic fluid to reservoir. Indicator pointer should rise to letter L in normal area of indicator dial.
- (8) Fill reservoir to full condition as described on instruction placard on reservoir.

NOTE: Sight gage on the reservoir indicates full when approximately 12.9 US gallons (10.74 Imperial gallons, 48.84 liters) of hydraulic fluid are added.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (9) Open hydraulic oil temperature and quantity circuit breaker, located on miscellaneous section of EPC circuit breaker panel. Indicator pointer should go off scale at lower end.
- (10) Close hydraulic oil temperature and quantity control circuit breakers and auxiliary hydraulic pump control circuit breaker.

3. Inspection/Check Hydraulic Fluid Temperature Indicating System

A. Check Hydraulic Fluid Temperature Indicating System

- (1) Pressurize auxiliary hydraulic system (see 29-00).

WARNING: MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION AND THAT LANDING GEAR GROUND LOCKPINS ARE INSTALLED.

- (2) Cycle wing flaps several times to circulate and warm hydraulic fluid.

WARNING: MAKE CERTAIN THAT WING FLAP AREA IS CLEAR OF PERSONNEL AND OBSTRUCTIONS.

- (3) Check hydraulic fluid temperature indicator in flight compartment for rise in temperature.
- (4) Depressurize auxiliary hydraulic system (see 29-00).

4. Inspection/Check Hydraulic Fluid Pressure Indicating System

A. Check Hydraulic Fluid Pressure Indicating System

- (1) Place hydraulic system selector control lever in general system (normal) position.
- (2) Pressurize hydraulic system with hydraulic test stand (see 29-00).

WARNING: MAKE CERTAIN THAT LANDING GEAR CONTROL LEVER IS IN DOWN POSITION AND THAT LANDING GEAR GROUND LOCKPINS ARE INSTALLED.

- (3) Check hydraulic fluid pressure indicator in flight compartment for 2800 to 3000 psi. Compare flight compartment indicator with indicator on test stand. Indicators should indicate same pressure  $\pm 5.0$  percent.
- (4) Depressurize hydraulic system (see 29-00).
- (5) Pressure indicator should gradually decrease to zero psi.



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC FLUID QUANTITY TRANSMITTER - MAINTENANCE PRACTICES

1. General

- A. The hydraulic fluid quantity transmitter is located on the hydraulic system reservoir which is located aft of the wing rear spar in the left wing root.
- B. Access to the transmitter is through the left wing root access door.

2. Tools and Equipment Required

- A. Cement (EC-870, Minnesota Mining and Manufacturing Co., or equivalent) is used for sealing the fluid quantity transmitter gasket.

3. Removal/Installation Hydraulic Fluid Transmitter

A. Remove Transmitter

- (1) Open following circuit breakers:

Circuit Breaker	Panel Section
Hydraulic temperature and quantity	Miscellaneous
Auxiliary hydraulic pump control	Cabin bus 4

WARNING: TAG AND SAFETY CIRCUIT BREAKERS (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Drain hydraulic reservoir (see 29-00, Maintenance Practices).
- (5) Disconnect electrical connector from hydraulic fluid quantity transmitter.
- (6) Remove hydraulic fluid quantity transmitter and gasket from transmitter mounting flange on reservoir.
- (7) Cover opening in reservoir.

Jun 15/67

Printed in U.S.A.

29-30-1  
CODE 1  
Page 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

B. Install Transmitter

- (1) Make certain that the following circuit breakers are open:

---

Circuit Breaker	Panel Section
Hydraulic oil temperature and quantity	Miscellaneous
Auxiliary hydraulic pump control	Cabin bus 4

---

- (2) Clean hydraulic fluid quantity transmitter mounting flanges on reservoir and transmitter.
- (3) Using (EC-870) cement, cement a new gasket to mounting flange on reservoir.
- (4) Spread cement on mounting flange of hydraulic fluid quantity transmitter.
- (5) Install transmitter on reservoir. Safety mounting bolts with lockwire.
- (6) Connect electrical connector to hydraulic fluid quantity transmitter.
- (7) Fill reservoir as described on instruction placard on reservoir.
- (8) Close following circuit breakers:


---

Circuit Breaker	Panel Section
Hydraulic oil temperature and quantity	Miscellaneous
Auxiliary hydraulic pump control	Cabin bus 4

---

- (9) Pressurize hydraulic system reservoir (see 29-00, Maintenance Practices).

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

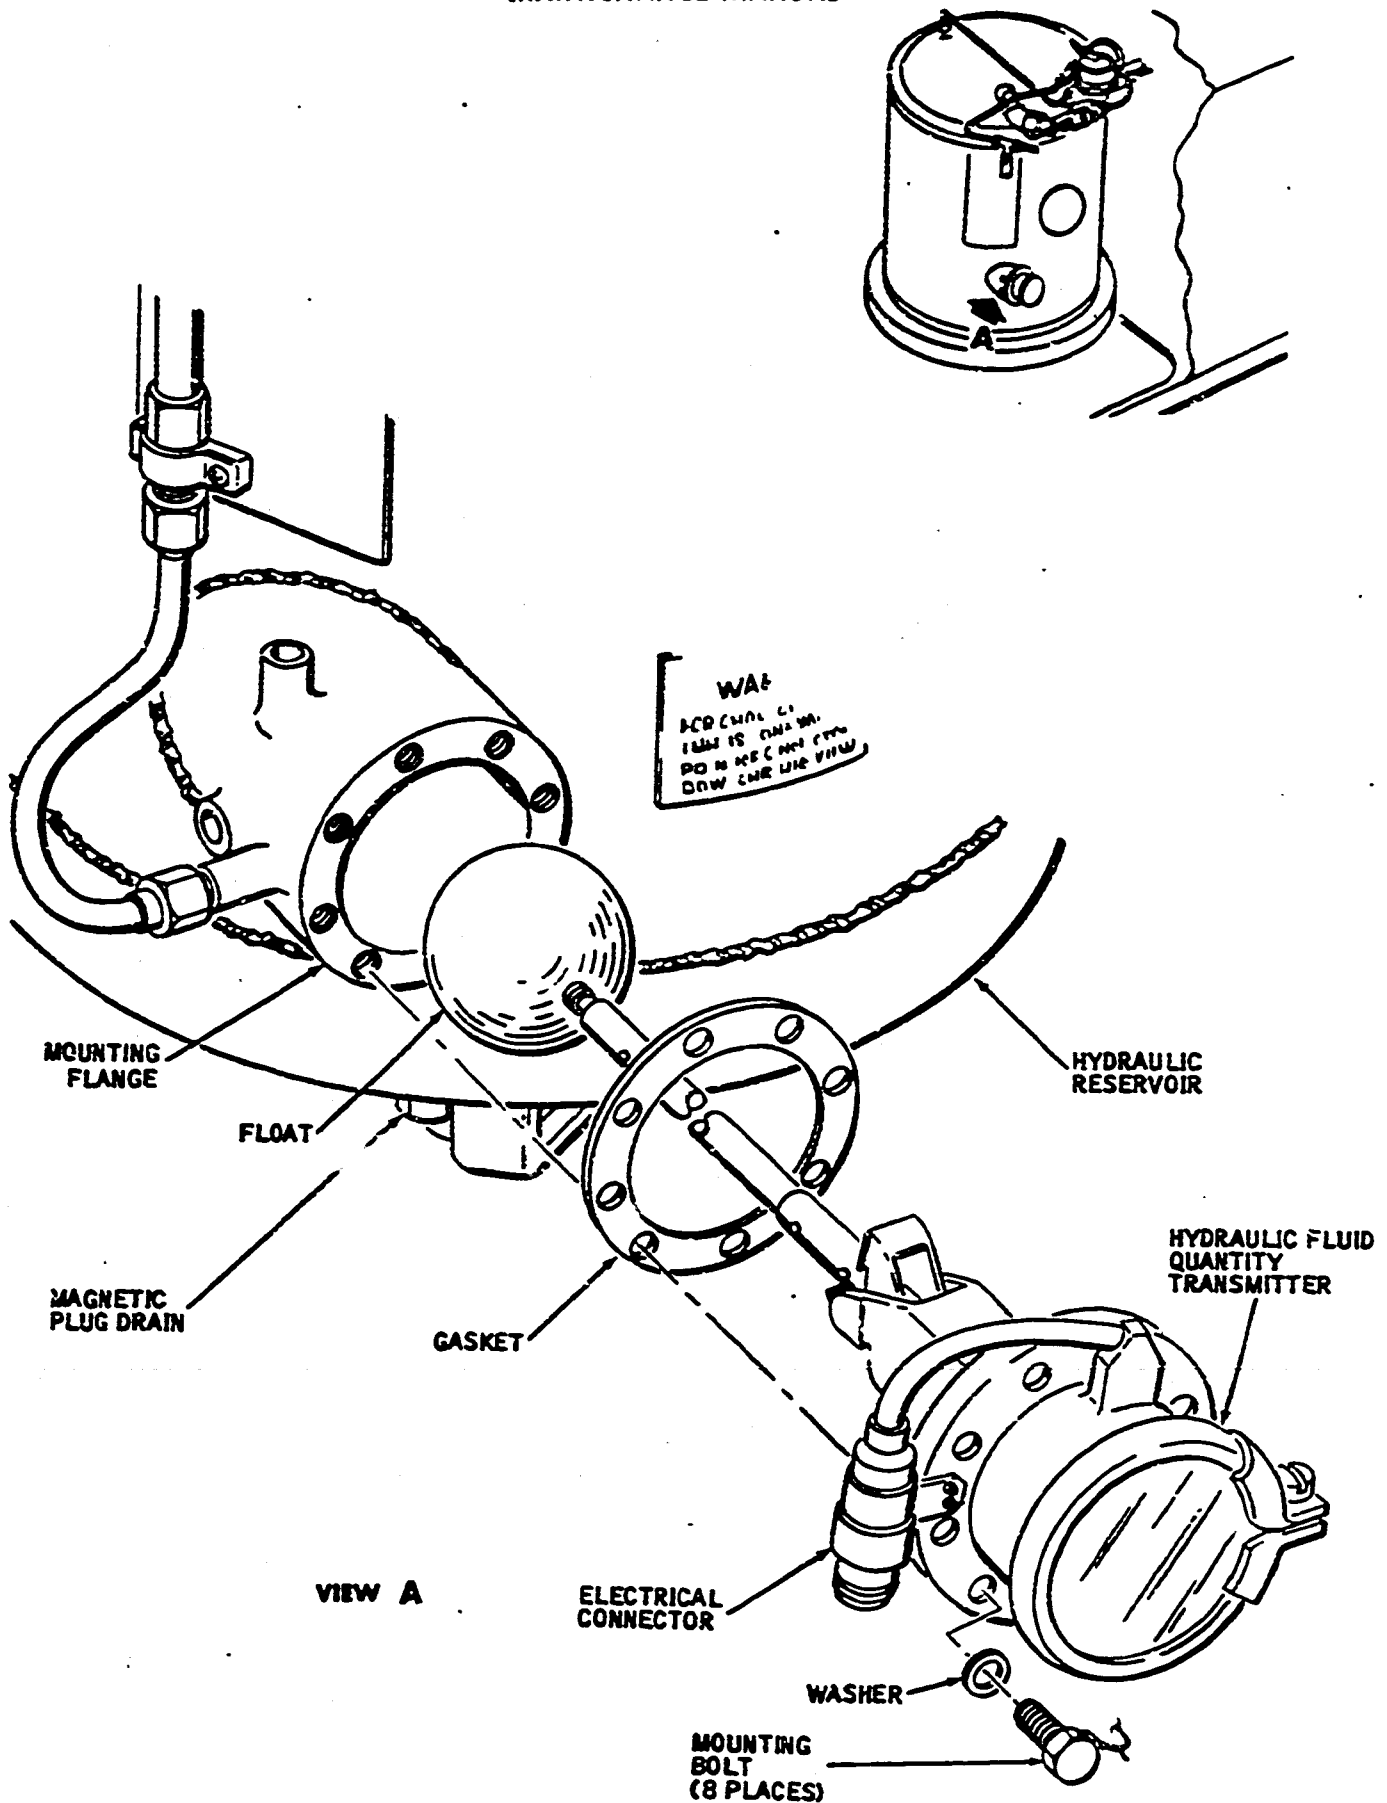

Hydraulic Reservoir Fluid Quantity  
 Transmitter -- Installation  
 Figure 201

HA2-178

Jun 15/67

Printed in U.S.A.

29-30-1  
 CODE 1  
 Page 203

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

4. Inspection/Check Hydraulic Fluid Quantity Transmitter

A. Check Transmitter

- (1) Check operation of transmitter (see 29-30-0, Maintenance Practices).
- (2) Check transmitter mounting for security of mounting, proper lockwire, and leaks.
- (3) Check electrical connector and wiring for general condition and security.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC FLUID TEMPERATURE BULB - MAINTENANCE PRACTICES

1. General

- A. The hydraulic fluid temperature bulb is located on the side of the reservoir adapter, near the fluid quantity transmitter in the lower part of the hydraulic system reservoir which is located aft of the wing rear spar in the left wing root.
- B. Access to the temperature bulb is through the left wing root access door.

2. Removal/Installation Hydraulic Fluid Temperature Bulb

A. Remove Temperature Bulb

- (1) Open following circuit breakers located on EPC circuit breaker panel:

Circuit Breaker	Panel Section
Hydraulic oil temperature and quantity	Miscellaneous
Auxiliary hydraulic pump control	Cabin bus 4

WARNING: TAG AND SAFETY CIRCUIT BREAKERS (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Drain hydraulic reservoir (see 29-00, Maintenance Practices).
- (5) Disconnect electrical connector from bulb receptacle.
- (6) Remove bulb from reservoir port. Discard O-ring.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

**B. Install Temperature Bulb**

- (1) Make certain that following circuit breakers are open:

Circuit Breaker	Panel Section
Hydraulic oil temperature and quantity	Miscellaneous
Auxiliary hydraulic pump control	Cabin bus 4

- (2) Using new O-ring, install temperature bulb in reservoir port.
- (3) Tighten bulb to torque of 20 ( $\pm 2$ ) inch-pounds.
- (4) Connect electrical connector to receptacle on temperature bulb.
- (5) Fill reservoir as described on instruction placard on reservoir.
- (6) Close following circuit breakers:

Circuit Breaker	Panel Section
Hydraulic oil temperature and quantity	Miscellaneous
Auxiliary hydraulic pump control	Cabin bus 4

**3. Inspection/Check Hydraulic Fluid Temperature Bulb**

**A. Check Temperature Bulb**

- (1) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).
- (2) Check operation of temperature bulb (see 29-30-0, Maintenance Practices).
- (3) Check bulb for security and leaks.
- (4) Check electrical connector for security and general condition.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC FLUID PRESSURE TRANSMITTER - MAINTENANCE PRACTICES

1. General

- A. The hydraulic fluid pressure transmitter is located in the nose gear well.
- B. Access to the pressure transmitter is through the nose gear well doors.

2. Removal/Installation Hydraulic Fluid Pressure Transmitter

A. Remove Pressure Transmitter


- (1) Open following circuit breakers located on EPC circuit breaker panel:

Circuit Breaker	Panel Section
Main and spoiler hydraulic system pressure indicator	Secondary instrument
Auxiliary hydraulic pump control	Cabin bus 4


WARNING: TAG AND SAFETY CIRCUIT BREAKER (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Disconnect electrical connector from hydraulic fluid pressure transmitter.
- (5) Disconnect hydraulic pressure line from snubber at inlet port of transmitter.
- (6) Loosen mounting clamp and remove transmitter.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
 MAINTENANCE MANUAL

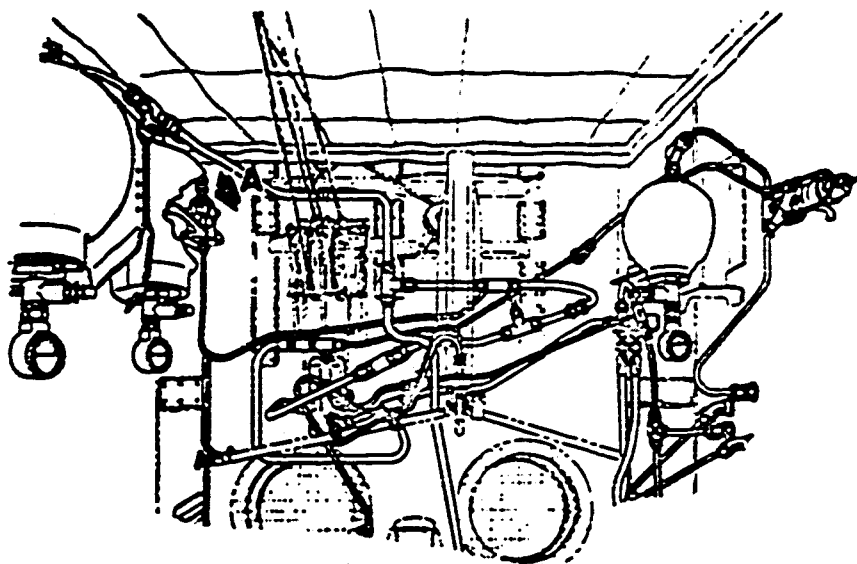

VIEW LOOKING AFT  
 IN NOSE GEAR WHEEL WELL

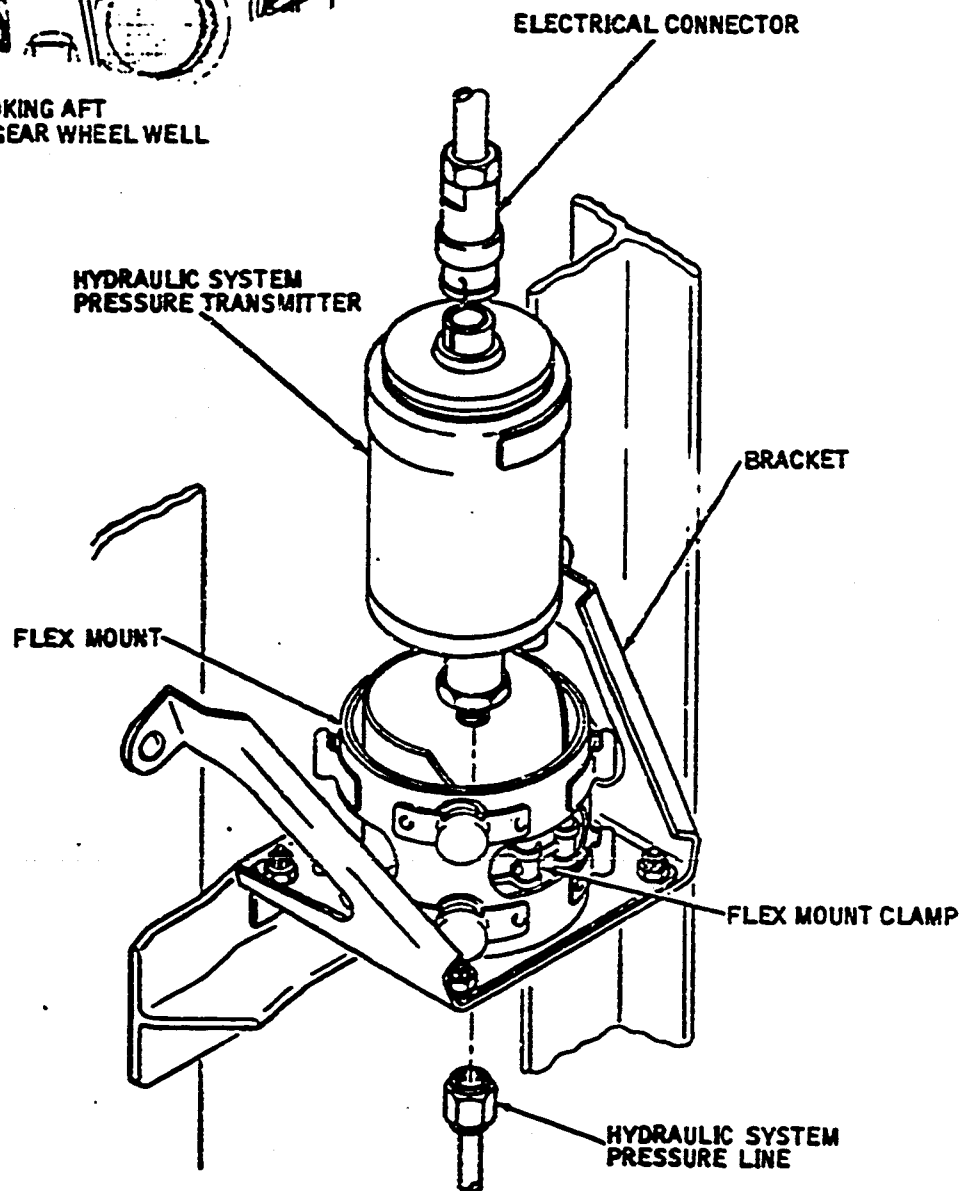

VIEW A

Hydraulic Fluid Pressure Transmitter -- Installation  
 Figure 201

HA2-197



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

B. Install Pressure Transmitter

- (1) Make certain that following circuit breakers are open:

Circuit Breaker	Panel Section
Main and spoiler hydraulic system pressure indicator	Secondary instrument
Auxiliary hydraulic pump control	Cabin bus 4

- (2) Place transmitter in mounting clamp and position properly for pressure line to be connected to the transmitter without preloading the shockmount.
- (3) Connect pressure line to inlet port snubber.
- (4) Tighten mounting clamp and safety with lockwire.
- (5) Connect electrical connector to receptacle on transmitter.
- (6) Close following circuit breakers:

Circuit Breaker	Panel Section
Main and spoiler hydraulic system pressure indicator	Secondary instrument
Auxiliary hydraulic pump control	Cabin bus 4

3. Inspection/Check Hydraulic Fluid Pressure Transmitter

A. Check Pressure Transmitter

- (1) Check operation of hydraulic fluid pressure transmitter (see 29-30-0, Maintenance Practices).
- (2) Check hydraulic pressure line connection for security and leaks.
- (3) Check electrical connector for security and general condition.

Jun 15/67

Printed in U.S.A.

29-30-3  
CODE 1  
Page 203

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC FLUID OVERTEMPERATURE INDICATING LIGHT  
SWITCH - MAINTENANCE PRACTICES

1. General

- A. The hydraulic fluid overtemperature indicating light switch is installed in the hydraulic system reservoir adapter, just below the sight gage. The reservoir is located aft of the wing rear spar in the left wing root.
- B. Access to the overtemperature indicating light switch is through the left wing root access door.

2. Removal/Installation Hydraulic Fluid Overtemperature Indicating Light Switch

A. Remove Overtemperature Indicating Light Switch

- (1) Open following circuit breakers located on EPC circuit breaker panel:

Circuit Breaker	Panel Section
Hydraulic oil temperature and quantity	Miscellaneous
Auxiliary hydraulic pump control	Cabin bus 4

WARNING: TAG AND SAFETY CIRCUIT BREAKERS (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Drain hydraulic system reservoir (see 29-00, Maintenance Practices).
- (5) Disconnect electrical connector from receptacle on overtemperature switch.
- (6) Remove overtemperature switch from reservoir port. Discard O-ring.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

B. Install Overtemperature Indicating Light Switch

- (1) Make certain that following circuit breakers are open:

---

Circuit Breaker	Panel Section
Hydraulic oil temperature and quantity	Miscellaneous
Auxiliary hydraulic pump control	Cabin bus 4

---

- (2) Using new O-ring, install hydraulic fluid overtemperature indicating light switch in reservoir.
- (3) Tighten switch to torque of 20 ( $\pm 2$ ) inch-pounds. Safety with lockwire.
- (4) Connect electrical connector to switch receptacle.
- (5) Fill reservoir as described on instruction placard on reservoir.
- (6) Close following circuit breakers:

---

Circuit Breaker	Panel Section
Hydraulic oil temperature and quantity	Miscellaneous
Auxiliary hydraulic pump control	Cabin bus 4

---

3. Inspection/Check Hydraulic Fluid Overtemperature Indicating Light Switch

A. Check Overtemperature Indicating Light Switch

- (1) Pressurize hydraulic reservoir (see 29-00, Maintenance Practices).
- (2) Check overtemperature switch for security and leaks.
- (3) Check electrical connector for security and general condition.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

EMERGENCY HYDRAULIC RESERVOIR LOW-LEVEL INDICATING  
LIGHT SWITCH - MAINTENANCE PRACTICES

1. General

- A. The emergency hydraulic reservoir low-level indicating light switch is installed in the auxiliary hydraulic pump alternate reservoir which is located in the left wing root area.
- B. Access to the low-level indicating light is through the left wing root access door.

2. Removal/Installation Emergency Hydraulic Reservoir Low-Level Indicating Light Switch

A. Remove Switch

- (1) Open following circuit breakers located on EPC circuit breaker panel:

Circuit Breaker	Panel Section
Hydraulic system overtemperature rudder and aileron manual indicator	Miscellaneous (dc bus)
Auxiliary hydraulic pump control	Cabin bus 4

WARNING: TAG AND SAFETY CIRCUIT BREAKERS (SEE CHAPTER 20).


- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices):
- (4) Place hydraulic system selector control lever in general system (normal) position.
- (5) Drain auxiliary hydraulic pump alternate reservoir (see 29-00, Maintenance Practices).
- (6) Disconnect electrical connector from emergency hydraulic reservoir low-level indicating light switch.
- (7) Remove switch from reservoir port. Discard O-ring.

Jun 15/67

Printed in U.S.A.

29-30-5  
CODE 1  
Page 201

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

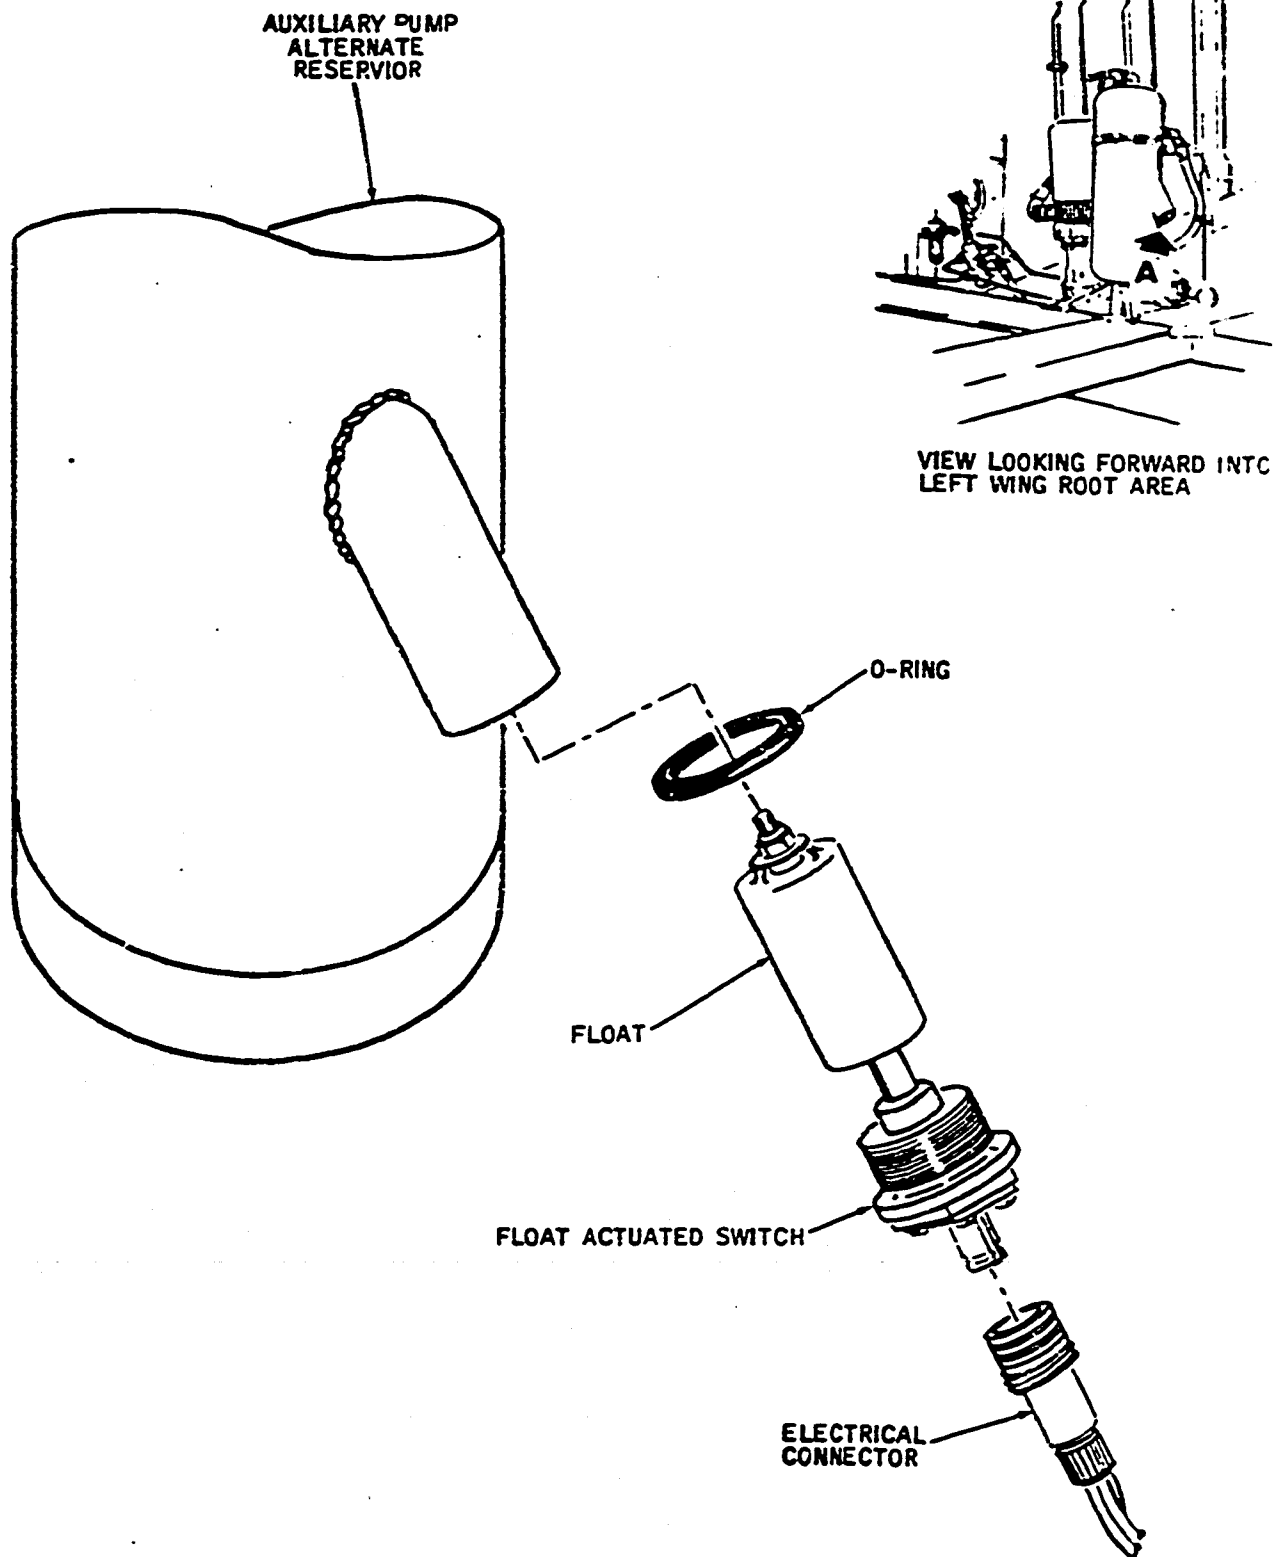

VIEW A  
Emergency Hydraulic Reservoir Low-Level Indicating  
Light Switch -- Installation  
Figure 201

HA2-198A

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

B. Install Switch

- (1) Make certain that following circuit breakers are open:

Circuit Breaker	Panel Section
Hydraulic system overtemperature rudder and aileron manual indicator	Miscellaneous (dc bus)
Auxiliary hydraulic pump control	Cabin bus 4

- (2) Using new O-ring, install emergency hydraulic reservoir low-level indicating light switch in alternate reservoir port.
- (3) Connect electrical connector to switch receptacle and safety with lockwire.
- (4) Close following circuit breakers:

Circuit Breaker	Panel Section
Hydraulic system overtemperature rudder and aileron manual indicator	Miscellaneous (dc bus)
Auxiliary hydraulic pump control	Cabin bus 4

- (5) Check that emergency hydraulic reservoir low-level indicator light is on.
- (6) Pressurize hydraulic system (see 29-00, Maintenance Practices).
- (7) Cycle wing flaps by placing wing flap handle in up and then in down position until hydraulic fluid can be seen in sight gage on alternate reservoir.

**WARNING:** MAKE CERTAIN THAT WING FLAP AREAS ARE CLEAR OF PERSONNEL AND OBSTRUCTIONS.

- (8) Check that emergency hydraulic reservoir low-level indicator light is off when fluid is first observed in the sight gage.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

- (9) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (10) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (11) Fill hydraulic system reservoir as described on instruction placard on reservoir.

3. Inspection/Check Emergency Hydraulic Reservoir Low-Level Indicating Light Switch

A. Check Switch

- (1) Check switch installation for leaks, general condition, and security of mounting.
- (2) Check electrical connection for security of attachment and clearance in wire routing.

DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC RESERVOIR LOW-PRESSURE INDICATING LIGHT  
SWITCH - MAINTENANCE PRACTICES

1. General

- A. The hydraulic reservoir low-pressure indicating light switch is mounted on the top of the hydraulic system reservoir, adjacent to the top of the sight gage. The reservoir is located aft of the wing rear spar in the left wing root.
- B. Access to the reservoir low-pressure switch is through the left wing root access door.

2. Removal/Installation Hydraulic Reservoir Low-Pressure Indicating Light Switch

A. Remove Low-Pressure Switch

- (1) Open following circuit breakers located on EPC circuit breaker panel:

Circuit Breaker	Panel Section
Hydraulic system overtemperature rudder and aileron manual indicator	Miscellaneous (dc bus)
Auxiliary hydraulic pump control	Cabin bus 4

WARNING: TAG AND SAFETY CIRCUIT BREAKERS (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Disconnect electrical connector from reservoir low-pressure switch.
- (5) Remove low-pressure switch from reservoir port fitting. Discard O-ring.

Jun 15/67

Printed in U.S.A.

29-30-6  
CODE 1  
Page 201



DOUGLAS AIRCRAFT CO., INC.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

B. Install Low-Pressure Switch

- (1) Make certain that following circuit breakers are open:

Circuit Breaker	Panel Section
Hydraulic system overtemperature rudder and aileron manual indicator	Miscellaneous (dc bus)
Auxiliary hydraulic pump control	Cabin bus 4

- (2) Using new O-ring, install low-pressure switch in reservoir port fitting.
- (3) Connect electrical connector to low-pressure switch receptacle.
- (4) Close hydraulic system overtemperature rudder and aileron manual indicator circuit breaker located on miscellaneous (dc bus) section of circuit breaker panel. Reservoir low-pressure indicator light in flight compartment should come on.
- (5) Close auxiliary hydraulic pump control circuit breaker located on cabin bus 4 section of circuit breaker panel.

3. Inspection/Check Hydraulic Reservoir Low-Pressure Indicator Light Switch

A. Check Low-Pressure Switch

- (1) Pressurize hydraulic system reservoir by the direct inflation method (see 29-00, Maintenance Practices). Reservoir low-pressure indicator light should go out as reservoir pressure reaches 30 psi.
- (2) Check hydraulic reservoir low-pressure switch for air leaks at connection to reservoir.
- (3) Check switch for security of attachment and general condition.
- (4) Check electrical connector and wiring for security, general condition, and wire routing.

DOUGLAS AIRCRAFT CO.  
**DC-8 SIXTY SERIES**  
MAINTENANCE MANUAL

HYDRAULIC RESERVOIR LOW-PRESSURE INDICATING LIGHT  
SWITCH - MAINTENANCE PRACTICES

1. General

- A. The hydraulic reservoir low-pressure indicating light switch is mounted on the top of the hydraulic system reservoir, adjacent to the top of the sight gage. The reservoir is located aft of the wing rear spar in the left wing root.
- B. Access to the reservoir low-pressure switch is through the left wing root access door.

2. Removal/Installation Hydraulic Reservoir Low-Pressure Indicating Light Switch

A. Remove Low-Pressure Switch

- (1) Open following circuit breakers located on EPC circuit breaker panel:

Circuit Breaker	Panel Section
Hydraulic system overtemperature rudder and aileron manual indicator	Miscellaneous (dc bus)
Auxiliary hydraulic pump control	Cabin bus 4

WARNING: TAG AND SAFETY CIRCUIT BREAKERS (SEE CHAPTER 20).

- (2) Depressurize hydraulic system (see 29-00, Maintenance Practices).
- (3) Relieve hydraulic reservoir air pressure (see 29-00, Maintenance Practices).
- (4) Disconnect electrical connector from reservoir low-pressure switch.
- (5) Remove low-pressure switch from reservoir port fitting. Discard O-ring.